
Installation Instructions

T-Connector



Honda Element



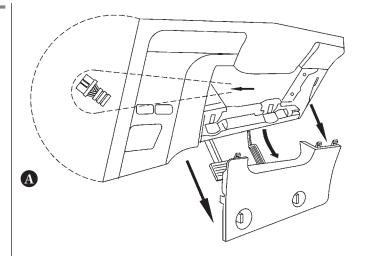





TOOLS REQUIRED:

None

- Remove the access panel underneath the steering wheel by turning the locking knobs 90 degrees counter-clockwise. Locate the grey 10-Pin housing underneath the dash and left of the steering column, taped to another harness with blue tape (3).
- If not removed, remove the fuses from the supplied fuse holders on the wires going from the T-Connector's 10-Pin Tow Plug Adapter to the T-Connector's black convertor box. Insert the 10-Pin Tow Plug Adapter and lock into place. Be careful not to damage the locking tabs and be sure that connectors are fully inserted with locking tabs in place.
- **3.** Using the double sided tape or 14" cable tie, mount the T-Connector's black convertor box up under the dash, to prevent damage or rattling and being careful to avoid any areas that would cut or pinch the wire.
- Open the vehicle's rear tailgate, remove cargo nets and cargo floor hatch to access the spare tire area

 B

 C.
- 5. On the driver's side, locate the vehicle's factory 4-Pin tow harness connector mounted on the threshold (). Check to see that the mating surfaces of the vehicle harness connectors match the Tow Plug Adapter end. All connector surfaces should be clean and free of dirt.

- 6. Insert the 4-Pin Tow Plug Adapter and lock into place. Be careful not to damage the locking tabs and be sure that connectors are fully inserted with locking tabs in place.
- Reposition the access panels, trays and truck floor panels and reattach the threshold. Replace mini fuses from step 2.

NOTE

Store 4-Flat connector in spare tire compartment when not in use.

WARNING

All connections must be complete for the T-Connector to function properly. Test and verify installation with a test light or trailer once installed. For initial test, reset vehicle electrical system by temporarily removing the key from the ignition.

A WARNING

- Overloading circuit can cause fires. DO NOT exceed lower of towing manufacturer rating or:
- Max. stop/turn light: 1 per side (2.1 amps)
- Max. tail lights: (5.6 amps)
- Read vehicle's owners manual & instruction sheet for additional information.