## **Installation Instructions**


## T-One® T-Connector





**Acura MDX** 





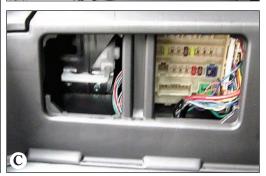

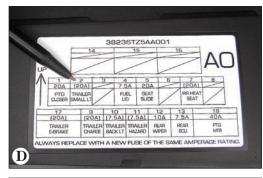

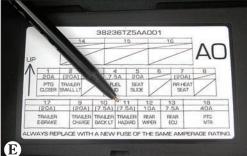



### **TOOLS REQUIRED:**

Trim Panel Remover, Test-probe

 Open the vehicle's rear tailgate, remove cargo nets and cargo floor hatch to access the spare tire area .

## NOTE

It may be helpful to fold rear seat forward.

- 2. Open the cover to access the relays and fuses **B**.
- 3. If not removed, remove the fuse from the supplied fuse holder. Starting from the cargo area, route the white T-One® T-Connector end up and behind the trim panel to the junction box area. Plug the white T-One® T-Connector end into the mating connection in the electric junction box .

#### **A** CAUTION

All connector surfaces should be clean and free of dirt. Be careful not to damage the locking tabs and be sure that connectors are fully inserted with locking tabs in place.

4. Mount the T-One®T-Connector's black box-module below the rear threshold in the spare tire compartment in an out of the way place.

### NOTE

This surface should be in an area that is free of any moisture and mounted in an area that it is high enough where it could not be exposed to direct contact with any water or liquid substance.

Locate the fuse panel schematic located on the inside of the box cover. Locate fuse positions 2 and 11. Insert fuses into positions as shown
 Install the 15 amp fuse into the fuse holder from step 3.

#### **WARNING**

All connections must be complete for the T-One® T-Connector to function properly. Test and verify installation with a test light or trailer once installed. For initial test, reset vehicle electrical system by temporarily removing the key from the ignition.

- Route 4-Flat over to jack storage area. Replace the black cargo liner and store 4-Flat wire in jack compartment when not in use.
- 7. Reinstall the threshold, storage covers, floor covering and other items removed during installation, being careful not to pinch or cut the wires.

# **WARNING**

Overloading circuit can cause fires. DO NOT exceed lower of towing manufacturer rating or:

- Max. stop/turn light: 2 per side (4.2 amps)
- Max. tail lights: (7.5 amps)
  Read vehicle's owners manual & instruction sheet for additional information.