



ITEM: 20115, 20116, & 20117

DESCRIPTION: TESTERS

- Plug the tester into vehicle's mating plug. Perform a function test for each circuit.

TESTER KEY

TAIL or TM = Taillights


LT = Left turn / Brake

RT = Right turn / Brake


A or BU = Auxiliary or Back Up

12V = 12V+


BK or EB = Electric Brakes

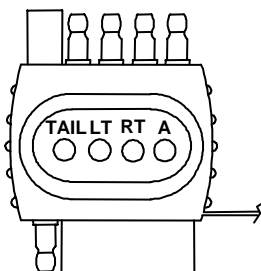

5 WAY TESTER

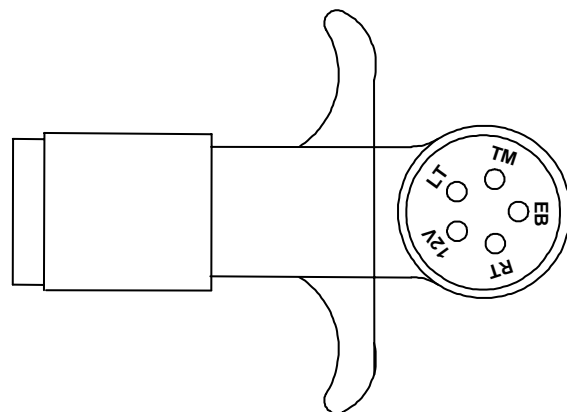

6 WAY TESTER

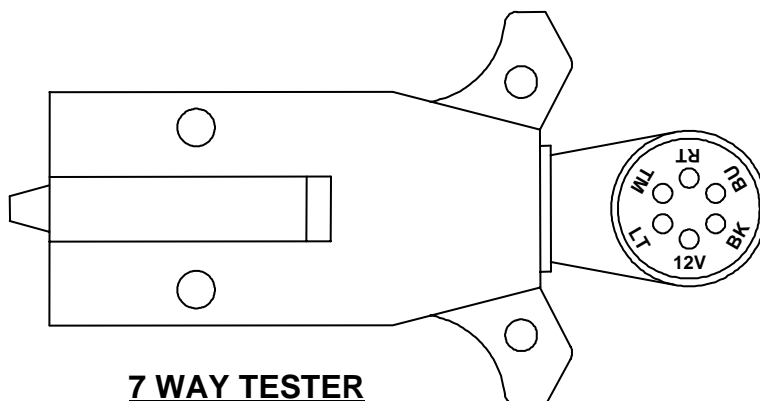

7 WAY TESTER



WARNING: For electric brake circuit, see brake control installation instructions for proper calibration and circuit output.