



## Installation Instructions

### Electric Trailer Brake Control Wiring Adapter

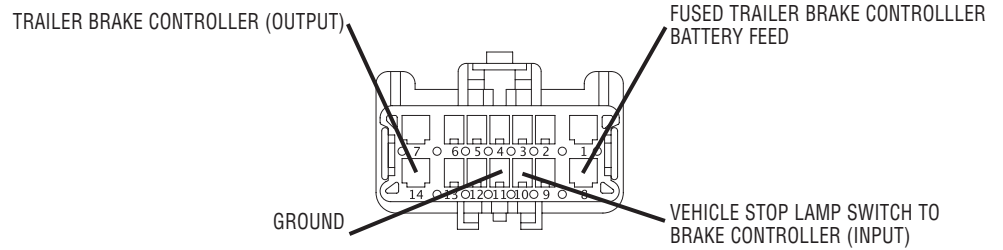

Wiring Adapter Housing (containing Male Terminals) - Wire Side

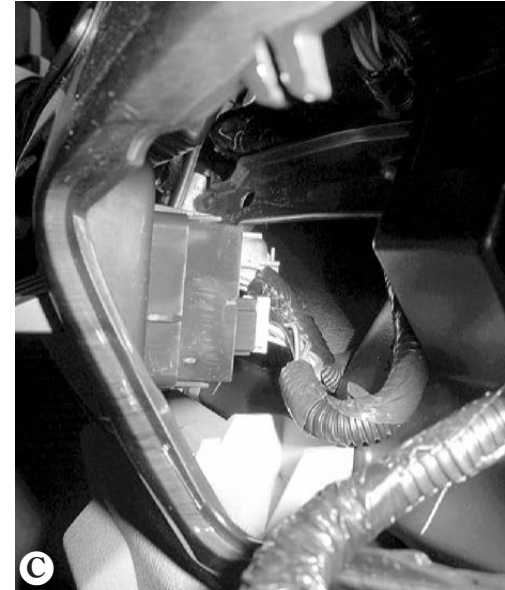

1. Make sure the vehicle is off with the keys removed from the ignition.
2. Locate access panel in the center of dash on passenger side. Using a trim panel puller, locate notch in panel and pry the panel out and away from the dash being careful not to damage the trim or panel **A**. Unplug the housings attaching the panel being careful not to damage locking tabs and set aside **B**.
3. On vehicles equipped with factory brake controller locate the large grey housing matching the mating half of the adapters connector. Housing will be plugged into the back of the unit **C**. Additional harnesses may need to be unplugged to gain access to its location.  
**NOTE**  
When disconnecting the factory installed brake control, you will get a fault code displayed on the message center of the dash.
4. On vehicles without a factory brake control locate grey housing on the back of the trim panel located directly left of the access panel.
5. Carefully pull the housing towards the access panel and plug in the mating grey housing from the brake control adapter **D**.

6. Locate a routing path for the adapter to exit the bottom of dash **E**.  
**TIP**  
Use a flash light to shine light up though the bottom of dash to locate a hole to exit the dash.
7. Complete the installation per the electric brake control manufacturer's instructions and mount the unit as directed. Perform test procedures as instructed.
8. After brake controller is installed, plug in all connectors that were not used back into the original housings and snap access panel back into place.

**NOTE**  
Vehicles not equipped with OEM trailer tow package, may require fuses and relays to complete output and battery feed circuits (sold separately). Consult owners manual for locations.

**⚠ WARNING**  
Overloading circuit can cause fires. DO NOT exceed lower of towing manufacturer rating or:  
• Max. 3 AXLES: 6 BRAKES (18 amps)  
Read vehicle's owners manual & instruction sheet for additional information.

