



## Installation Instructions

### Electric Trailer Brake Control Wiring Adapter

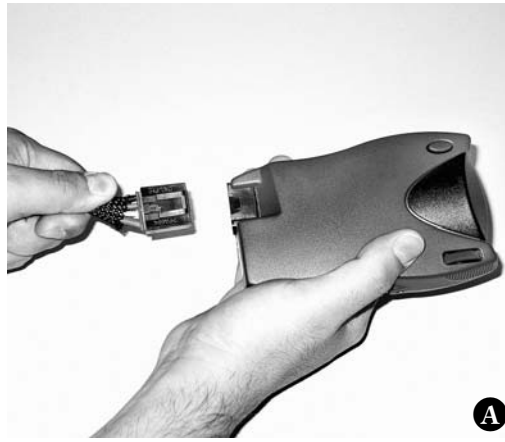

VEHICLE STOP LAMP SWITCH TO  
BRAKE CONTROLLER (INPUT)

FUSED TRAILER BRAKE  
CONTROLLER BATTERY FEED

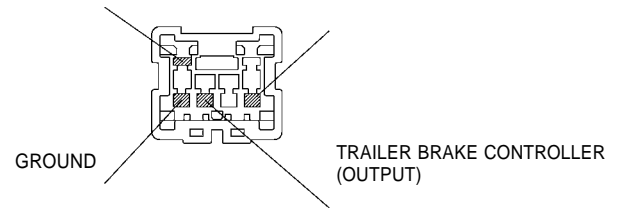

#### CAUTION

Plug brake control adapter into mating receptacle on backside of brake control before attaching to the vehicle connector. **A**

1. Locate the vehicle's electric brake control harness **B**. The harness will be located underneath and left of the steering column, taped to another harness near the emergency brake pedal **C**. There will be a 6-pin connector that mates with the one on the adapter.
2. Plug the brake control adapter into the vehicle's electric brake control harness connector. Follow all brake control manufacturer's installation instructions.

**NOTE:** Vehicles not equipped with OEM trailer tow package, may require fuses and relays to complete output & battery feed circuits (sold separately). Consult owners manual for locations.

#### ⚠ WARNING

Complete the installation per the electric brake control manufacturer's instructions and mount the unit as directed. Perform test procedures as instructed.



#### ⚠ WARNING

Overloading circuit can cause fires. DO NOT exceed lower of towing manufacturer rating or:  
• Max. 3 axles: 6 brakes (18 amps)  
Read vehicle's owners manual and instruction sheet for additional information.