



Read and follow all Coffeemaker Instructions. Read and follow all Stove & Fuel Instructions for Use. For Outdoor Use Only.

⚠ WARNING

1. Always operate campstove on a level surface.
2. Use only on one, two, or three-burner campstoves. **NEVER** use this product on single burner (bottle top style) stoves. Never use on electric ovens.
3. Never use this product on a Gas or Charcoal Grill.
4. **Never** use this product on a stove burner rated in excess of 15,000 BTUs.
5. Be sure coffeemaker is placed on stove in a stable manner before lighting stove.
6. Always set coffeemaker onto stove & pour water into reservoir prior to lighting burner.
7. **Never** leave stove burner on after coffee has finished brewing.
8. Close adult supervision is necessary while brewing coffee on a campstove.
9. Do not touch hot surfaces. Allow coffeemaker to cool before handling.

Decanter Use & Care:

- Reference repair parts list for replacement decanter.
- Never place decanter directly onto a campstove burner surface.
- Never use decanter on a kitchen range, oven or in a microwave.
- Never set a hot decanter on a wet or cold surface.
- Do not use a cracked decanter or one with a loose or weakened handle.
- Do not clean decanter with cleansers, steel wool pads or other abrasive materials. Instead use a mild, non-abrasive detergent.
- Avoid sharp blows, scratches and rough handling.
- Discard decanter immediately if it is ever boiled dry.
- Replacement decanters found where coffeemakers are sold.

BENEFITS OF YOUR COLEMAN CAMPING COFFEEMAKER

- Brews coffee on a one, two, or three-burner campstove.
- Large 10-cup capacity brewing.
- Swing-out filter basket removes for easy cleaning.
- Can't wait for it to finish? With the Pause 'N Serve feature, pour yourself a cup of coffee while brewing without making a mess.

BEFORE FIRST USE

Before using your Coffeemaker for the first time, wash decanter, lid and removable filter basket using a mild, nonabrasive detergent and water. Rinse thoroughly.

HOW TO BREW COFFEE

1. Place Coffeemaker directly over one of the burners of a one, two, or three-burner Coleman Campstove as shown in Figure 1.
2. Open the swing-out filter basket and insert an 8-12 basket style filter.
3. Add desired amount of coffee, referring to the Coffee Measurement Chart below. Shake lightly to level the coffee.
4. Be sure the paper filter is centered before closing the filter basket.
5. Fill the decanter with cold water to the desired capacity as marked on the decanter. (1 cup = 5 oz.)
6. Pour the water into the water reservoir and place the empty decanter onto the warming plate. Be sure decanter is pressed against the Pause 'N Serve lever to allow coffee to flow into decanter.
7. Be sure decanter is centered over the warming plate between the two marks. This keeps the handle cool to the touch.
8. Light campstove burner as advised by Campstove Instruction Manual. Monitor progress of coffee brewing. **Never leave a lit campstove unattended.**
9. Once coffee stops flowing, the brewing cycle is complete. **Turn stove burner off** and serve coffee!
10. After coffeemaker has cooled, remove paper filter and coffee grounds and dispose of properly.



Figure 1

NOTE: The filter basket can be removed by swinging it open to the right, lifting the basket up and pulling the bottom of the basket out. Rinse the basket and replace by inserting the top post of the basket into the coffeemaker first.

⚠ WARNING: To avoid risk of personal injury or damage to property as a result of overflow, be sure the decanter is squarely centered under the filter basket during the brew cycle. Brewed coffee and grounds, both in the filter basket and decanter, are very hot. Handle with care to avoid scalding. If filter basket overflows, or if it fails to drain into decanter during brewing cycle, do not open or handle filter basket. Turn stove burner off and wait for contents to cool before handling.

COFFEE MEASUREMENT CHART

For best results, use drip ground coffee recommended for automatic drip coffeemakers.

2 level tablespoons = 1 level scoop
1 cup = 5 oz. brewed coffee

Use more or less coffee to suit taste.

CUPS	GROUND COFFEE
12.....11	Tbsp. or 5 1/2 Scoops
10.....9	" or 4 1/2 "
8.....7	" or 3 1/2 "
6.....6	" or 3 "
4.....5	" or 2 1/2 "
2.....3	" or 1 1/2 "

How To Make Other Hot Drinks & Meals With Your Coleman® Camping Coffeemaker

Instant Hot Cider, Instant Hot Chocolate, Oatmeal & Instant Soup

1. Place your Coleman® Camping Coffeemaker on your campstove.
2. Fill decanter with the proper amount of water as described in the directions on your instant mix package.
3. Pour the water into the water reservoir of the coffeemaker.
4. Pour the desired amount of drink mix, oatmeal or soup as described in the packet directions into the decanter. **DO NOT POUR MIX INTO WATER RESERVOIR OR FILTER BASKET.**
5. Place the decanter on the hot plate making sure the decanter is pressed against the Pause 'N Serve lever.
6. Light campstove burner as advised by Campstove Instruction Manual.
7. Hot water will begin to fill the decanter. **Never leave a lit campstove unattended.**
8. After all the water has been depleted from the water reservoir, **TURN STOVE TO OFF**, gently stir the mixture to be sure it has all been dissolved, and serve!

How To Clean Coffeemaker

We suggest cleaning your Coleman Coffeemaker at the following intervals:

- 40 brew cycles with hard water
- 80 brew cycles with soft water

1. Place Coffeemaker onto stove as described in the How To Brew Coffee section. Place a paper filter into the brew basket & close.
2. Pour 1 quart of undiluted white household vinegar into water reservoir.
3. Place the empty decanter on the warming plate.
4. Light stove & allow 3 cups of vinegar to pass through Coffeemaker. Turn stove off and let Coffeemaker stand 30 minutes.
5. After 30 minutes, pour vinegar back into reservoir & place empty decanter on warming plate.
6. Light stove & let all of the vinegar run through the Coffeemaker.
7. Dispose of the vinegar and paper filter.
8. To flush all traces of vinegar, fill reservoir with water and cycle water through Coffeemaker.
9. Dispose of water and repeat steps 8 & 9.

How to Use and Enjoy Your Coleman®
Camping Coffeemaker



Model 5008 Series

REPLACEMENT PARTS LIST

No.	Description	Part No.
1.	Decanter with Handle	5010000413
2.	Filter Basket	5010000412
3.	Lid for Reservoir	5010000411

