



Instructions

1. With vehicle hoisted in level position & transaxle in park, run at idle.
2. Fluid temperature should be over 122° F (50° C)
3. Remove belly pan to access fluid level check port (found on top of transaxle housing above differential)
4. Remove plug from check port. Insert dipstick.
Dipstick handle should sit on surface of the transaxle housing.
5. Remove dipstick & keep in vertical position for accurate reading. See chart for proper fluid levels.
6. Reinstall plug & tighten to proper torque reading.
7. Reinstall belly pan.

Temp	Min Level	Normal Level	Max Level
(F/C)	(mm)	(mm)	(mm)
122/50	21	26	31.5
131/55	23	27.5	33
140/60	25	30	34
149/65	27	31	35.5
158/70	28.5	33	36.5
167/75	30	35	38
176/80	31.5	36	39
185/85	32.5	37	40
194/90	34	38	41.5