



Instruction Manual

7810 - Universal Injector Seat Cleaning Set

Before removing a diesel injector, it is very important carefully to clean the injector well and seat.

Method:

Remove the injector.

Place the seal plug (D) using the extension (C).

Proceed to clean the well with brush A or B (which depends on the diameter of the injector bore).

Use a standard brake cleaning liquid as rinsing fluid and vacuum this liquid by cleaning with a wet-and-dry vacuum cleaner.

Then remove seal plug (D) using the extension (C).

Remove the seal plate using a specific tool. Afterwards, first clean surface with front brush (I) along with the brush extension (G).



Compulsory direction of rotation: towards the right

For a better result, then use the front corundum brush (H). Vacuum the cleaning liquid remaining in the well.

If necessary, finish the work using a sanding kit. Use the extension (C) with the alu sanding paper support (E) and the sanding paper (F). This work is done by hand and not by an electric screwdriver.

This kit includes:	
A	METAL BRUSH DIAM 20MM
B	METAL BRUSH DIAM 25MM
C	SEAL PLUG EXTENSION
D	SEAL PLUGS WITH O-RINGS
E	ALU SANDING PAPER SUPPORT
F	SANDING PAPERS DIAM 16MM
G	FRONT EXTENSION
H	FRONT BRUSH (CORUNDUM)
I	FRONT BRUSH (BRASS)
J	EXTRA O-RINGS - SET OF 2PCS
K	PLASTIC SLEEVES FRONT BRUSH

