INSTALLATION INSTRUCTIONS

DO NOT EXCEED PRODUCT RATING OR TOW VEHICLE LAMP LOAD RATING, WHICHEVER IS LOWER

56293 APPLICATIONS

Make	Model
Land Rover	Range Rover

WIRING LOCATION GUIDE

SUVS, MINI & FULL-SIZED VANS (S)

Representative vehicle shown below

\$6 - Behind center of rear bumper

VEHICLE-TO-TRAILER CONNECTOR







NOTE

All steps must be followed to ensure the CURT <u>wiring connector</u> will function properly. Once installed, test for proper function by using a test light or connecting a properly wired trailer.

TOOLS NEEDED

Flat blade screwdriver Side cutter

WARNING

Exceeding the product rating can cause loss of warranty, overheating and potential fire. Do not exceed product rating or tow vehicle lamp load rating, whichever is lower.

INSTALLATION

Step 1

Locate vehicle battery on the driver side under the hood and disconnect the negative battery terminal.

Step 2

Remove the two flat head screws securing the rear bumper cover and remove the bumper cover (A).

Step 3

Locate the vehicle 6-pin trailer wiring connector behind the center of the rear bumper. The connector will be similar to that on the CURT connector. Remove the cover on the vehicle 6-pin trailer wiring connector (B,C).

Step 4

Insert the CURT connector into the vehicle 6-pin connector. Make sure the connectors are fully inserted with locking tabs in place.









Locate a suitable grounding point near the connector such as an existing screw with nut in the vehicle frame or drill a 3/32" pilot hole for the provided screw. The area should be free of rust, dirt and paint. Secure the white ground wire using the ring terminal and provided screw.

WARNING: Check for miscellaneous items that may be hidden behind or under any surface before drilling to avoid damage and / or personal injury.

When in use, route the 4-flat to the center of the vehicle. When not in use, roll up and store in a convenient, out of the way location. Secure any loose wires with the provided cable ties (D).

Step 7

Reinstall all items removed during install and reconnect negative battery terminal. Install the provided 4-flat dust cover to help prevent corrosion.



