

INSTALLATION MANUAL

45806

Level of Difficulty

Easy

Parts List

Item	Qty	Description
1	1	Chain support bracket
2	2	Safety-chain hook
3	1	Hex bolt, 3/8"
4	1	Nylock nut, 3/8"

Tools Required

Torque wrench	Socket, 9/16"
Wrench, 9/16"	--

Torque Specifications

3/8" bolt	37 ft-lbs.
Use above torque setting unless otherwise noted	

Maintenance

Inspect the unit for proper operation, and worn, damaged or missing parts. Replace as required or when the unit's wear exceeds 1/8" from the original surface.


Check the hardware torque specification after the first 200 miles of towing and every 400 miles after that.

⚠ WARNING

Do not modify this product in any way. Unauthorized modification may impair the function and / or safety and could affect the life of the product and void the warranty.

Keep safety chains in place and in working order.

Product Photo

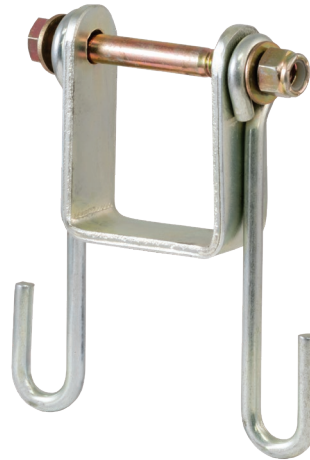

⚠ CAUTION

Check for damaged parts before each use. Carefully check that the product will operate properly and perform its intended function. Replace damaged or worn parts immediately. Never operate the product with a damaged part.

NOTICE

Before you begin installation, read all instructions thoroughly.

Proper tools will improve the quality of installation and reduce the time required.

To help prevent damage to the product or vehicle, refer to the specified torque specifications when securing hardware during the installation process.

Installation

Slide the chain support bracket onto the shank of the towing accessory. Insert the 3/8" hex bolt into the hole on the safety chain hook and into the chain support bracket.

Slide the remaining safety chain hook over the end of the 3/8" bolt. Secure the safety chain hooks using the 3/8" nylock nut. Torque hardware to 37 ft-lbs.

Note: Ensure the safety chain hooks are facing away from the shank.

IMPORTANT: This product is not intended to be used as a connection point for safety chains, only to support safety chain links.

