

INSTALLATION / SAFETY INSTRUCTIONS

Step 1

Open the vehicle tailgate. Remove all trunk floor coverings (A).

Step 2

Remove the fasteners securing the rear scuff panel. Remove the scuff panel by pulling out on the bottom and then up. Take care not to damage the alignment tabs on the back (B).

Step 3

Fold both rear seats down. Locate and remove the two cargo tie downs from the rear seat floor panel. Remove the screw located under the cargo tie down cover holding it in place (C,D).

Step 4

Remove the storage trim panel behind the rear seats by pulling upwards (E).

Step 5



Remove the center ceiling trim panel by pulling straight down. Take care not to damage any alignment tabs on the back (F).

Step 6

Starting on the driver side, remove the push fasteners securing the side trim panel (G).

Step 7

Remove the small cover behind the rear seat fold down lever (H). Remove the two screws securing the side trim panel in place (I). Pull out on the interior side panels to locate the vehicle trailer connector (J). Take care not to damage the alignment tabs on the back.

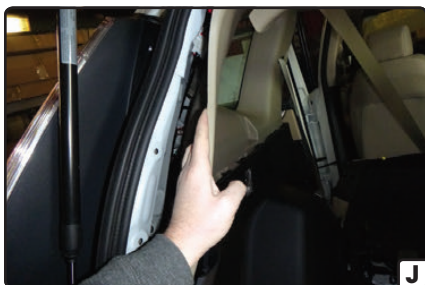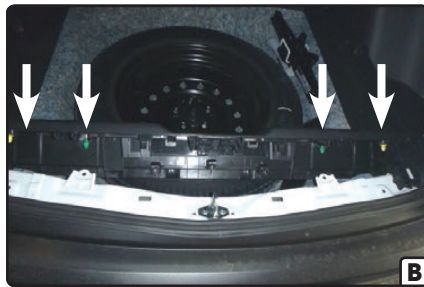

INSTALLATION / SAFETY INSTRUCTIONS

Step 8

Behind the upper side-trim panel, locate the vehicle taillight wiring connector. The connectors will be similar to the connector on the custom wiring connector and will be secured to the vehicle wiring harness (K).

Step 9

Insert the custom wiring connector into the vehicle connector. Make sure the connectors are fully inserted with locking tabs in place (L).

Step 10

Locate a flat spot inside the vehicle, near the taillight. Adhere the black converter box using the provided double-sided tape (M).

Step 11

To complete the installation, insert the provided 10-amp fuse into the in-line fuse holder.

Step 12

When in use, route the 4-flat to the center of the vehicle and out of the trunk. When not in use, roll up and store in a convenient, out of the way location inside the trunk. Secure any loose wires with the provided cable ties.

Step 13

Reinstall all items removed during install. Install the provided 4-flat dust cover to help prevent corrosion.

