INSTALLATION MANUAL

Level of Difficulty

Easy

Installation difficulty levels are based on time and effort involved and may vary depending on the installer level of expertise, condition of the vehicle and proper tools and equipment.

Electrical Ratings

Signal circuits	3.0-amps per side
Tail / Running Circuits	6.0-amps total

Check vehicle owner's manual or contact the vehicle manufacturer for more information.

Wiring Location(s)

S1 and S2

Wiring Location Guide* for SUVs and Vans (S)

ioi oo to una tano (o)		
S1	Behind driver side taillight housing	
S2	Behind passenger side taillight housing	
S3	Behind driver side rear access panel	
S4	Behind passenger side rear access panel	
S5	Behind driver side rear bumper	
S6	Behind center of rear bumper	
S7	Behind passenger side rear bumper	
S8	Under rear floor panel	
S9	Behind driver side rear access panel	
S10	Behind passenger side rear access panel	



* Representative vehicle shown

Tools Required		
Ratchet	Cutting tool	
Socket, 10mm	Wire crimper	
Socket extension	Wire stripper	
Flathead screwdriver	Electrical tape	
Panel trim removal tool		

⚠ WARNING

Do not exceed product rating or tow vehicle lamp load rating, whichever is lower.

The battery connection must be fuse-protected, 10-amp max. Exceeding the product rating can cause loss of warranty, overheating and potential fire.

Product Photo



Hardware Photo



NOTICE

Before you begin installation, read all instructions thoroughly.

Proper tools will improve the quality of installation and reduce the time required.

All steps must be followed to ensure the product will function properly. Once installed, test for proper function by using a test light or connecting a properly wired trailer.

Maintenance

Periodic inspection of all wires and connections should be performed to ensure there is no visible damage or loose connections.

Step 1

Locate the vehicle's battery in the engine compartment on the driver side and disconnect the negative battery terminal. Be sure to fasten this wire down and away from the battery while completing the installation process.



Step 2

Open the vehicle hatch. Loosen the fastener trim by using the panel trim removal tool or pry open with your fingers. Use a 10mm socket to loosen the taillight fasteners.

Repeat on the other side of the vehicle.








Step 3

Remove the taillight by pulling outwards from the side of the vehicle. Once the taillight is removed, separate the connector from the taillight housing, taking care not to damage the locking tabs.

Set the taillight aside and repeat on the other side of the vehicle.

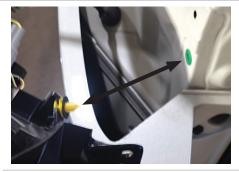





Step 4

Refer to the instructions below for how to fishwire in step 5.

How to Fishwire

A) Fish wire is a way to push or pull an electrical wire through a blind hole. Make sure the wire is long enough to stick out on the other side.

Insert the fish wire through the blind hole and locate it on the other side.

B) Use tape to secure the harness to the fish wire and pull back up.

The fish wire or harness may get hung up on something, if this happens you may have to push back down, wiggle it around or twist the wire to loosen it from what it's hung up on.

Fish wire could be anything from a cut-up wire hanger, stiff wire, rope or string depending on what is needed for the installation.













Step 5

Starting from the driver side, fishwire down between the body of the vehicle from under the vehicle. Attach the housing with the yellow wire to the fishwire and pull up to the taillight opening. Make sure the connectors are fully inserted with locking tabs in place.

Reinstall the taillight into the mount.



Step 6

Locate a flat spot under the vehicle or between the body and the bumper cover. Adhere the black converter box using the provided double-sided tape.

Step 7

Route the green wire to the bumper on the passenger side. Secure any loose wires with the provided cable ties.

Route a fishwire down in between the body and the bumper cover. From under the vehicle, locate and attach the fishwire to the housing with the green wire. Pull the wire back up and attach to the factory harness. Make sure the connectors are fully inserted with locking tabs in place.





Step 8

Route the black power wire from the vehicle battery as shown on the last page of this manual.

NOTICE

Once 12 volt power wire is connected to the harness verify that the harness is functioning by attaching the battery and testing with a test light, 4-flat tester or a functioning trailer.

Step 9

When in use, route the 4-flat to the center of the vehicle. When not in use, roll up and store in a convenient, out of the way location. Secure any loose wires with the provided cable ties.

Reinstall all items removed during install. If it was disconnected at the beginning of the installation, reconnect the negative battery terminal. Install the provided 4-flat dust cover to help prevent corrosion.

POWERED CONVERTER LEAD INSTRUCTION SHEET




NOTICE

Illustrations are for reference only. Battery location may differ depending on the vehicle.



WARNING

To avoid personal injury or property damage, check for miscellaneous i tems that may be behind or under any surface before drilling.

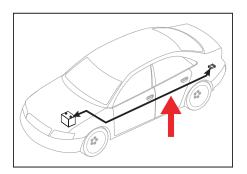

[]i

NOTICE

- 1. This converter system is to be used only on 12 volt negative ground systems.
- 2. Secure power wire to vehicle chassis using cable ties provided.
- 3. When passing the power wire through sheet metal, use an existing grommet, add a grommet or use silicone to protect the power wire from sharp edges.
- Overall T-connector design may differ from illustration. The illustration should be used for power lead instruction only. Illustration is not to scale.



WARNING

Route 12 GA wire to vehicle battery location, taking care to avoid any pinch points and hot or rotating components.

