

11416 INSTALLATION INSTRUCTIONS



Safety glasses should be worn at all times while installing this product.

YEARS: 2015-PRESENT

MAKE: HONDA

MODEL: HR-V

STYLE: CROSSOVER

WARNING: NEVER EXCEED YOUR VEHICLE MANUFACTURER'S RECOMMENDED TOWING CAPACITY

WEIGHT CARRYING:

TRAILER WEIGHT: 2,000 LBS. TONGUE WEIGHT: 200 LBS.

11/16"

SOCKET

PRO INSTALL TIME: 25 MIN. NOVICE INSTALL TIME: 50 MIN.

INSTALLATION REQUIRES:

RATCHET

SAFETY

GLASSES

IF YOU ARE HESITANT TO UNDERTAKE THIS TASK ON YOUR OWN, CONTACT AN AUTHORIZED CURT INSTALLER FOR ADDITIONAL ASSISTANCE.

TORQUE

WRENCH

AVIATION


SHEARS

INSTALLATION TIPS:

- 1. BEFORE YOU BEGIN INSTALLATION, READ ALL INSTRUCTIONS THOROUGHLY.
- 2. TO EASE INSTALLATION, 2 PEOPLE MAY BE REQUIRED.
- 3. USING PROPER TOOLS WILL GREATLY IMPROVE THE QUALITY OF THE INSTALL AND REDUCE THE TIMEREQUIRED.


- NO DRILLING - NO DRILLING - FISHWIRE HARDWARE - LOWER EXHAUST ON FWD MODELS - TRIM UNDERBODY PANEL - BEND/TRIM EXHAUST HEAT SHIELD

VEHICLE PHOTO:

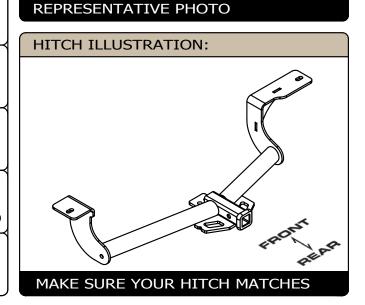

INSTALLATION WALKTHROUGH:

Parts List			
ITEM	QTY	PART NUMBER	DESCRIPTION
1	1	7_16 - 14 x 1.75" x 1.00" C-C	U-BOLT
2	2	CM-SP2	.250 x .88 x 2.25" SQUARE HOLE SPACER
3	1	7_16 - 14 x 1 1_4 CARRIAGE (GRADE 8)	CARRIAGE BOLT
4	2	7_16 FISHWIRE	7/16" FISHWIRE
5	4	7/16-14	HEX FLANGE NUT
6	1	7/16-14 x 1	CARRIAGE BOLT

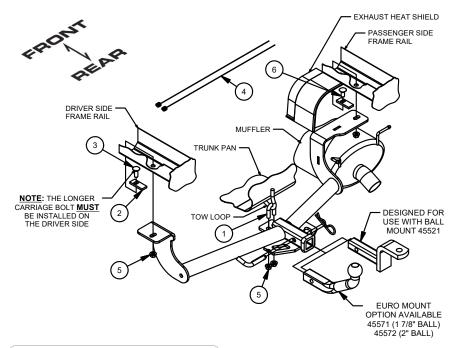

RUBBER ISOLATOR REMOVAL DIAGRAM

This technique can be used if an Exhaust Hanger Removal Pliers is not available.

Using a 5/8" open end wrench, slide the wrench up to the rubber isolator, cradling the hanger rod as shown. Next place the flat edge of a pry bar between the wrench and the hanger stop or hanger rod. Then simply rotate the pry bar toward the wrench to remove the rubber isolator.

Note: Using a spray lubricant or soapy water on the hanger rod and the rubber isolator helps removal.



FISHWIRE TECHNIQUE


INSERT COILED END OF FISHWIRE TOOL THROUGH
HITCH MOUNTING HOLE IN VEHICLE FRAME RAIL
AND OUT THE ACCESS HOLE. PASS COILED
END OF FISHWIRE THROUGH SPACER AND
THREAD BOLT INTO COIL. KINK WIRE
TO KEEP SPACER SEPERATE FROM
BOLT AS SHOWN. PULL
FISHWIRE, SPACER, AND
BOLT THROUGH FRAME
AND OUT MOUNTING HOLE.


USE FISHWIRE TO GUIDE HOLE
HITCH DURING MOUNTING AND PREVENT LOSS OF BOLT /
SPACER INSIDE FRAME RAIL.

**NOTE: SOME VEHICLES MAY FISHWIRE THROUGH END OF FRAME*


Note: On Front wheel drive models, the lower underbody panel may need to be trimmed as shown below to install the hitch. The exhaust heat shield will need to be bent approximately 3/4" to allow hitch to rest flat against the frame.

1. Lower the exhaust by removing the (2) rear-most rubber isolators from the muffler.

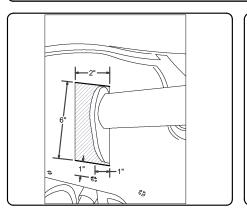

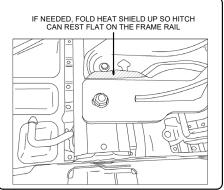

2. On the driver side, fishwire a 7/16-14 x 1 1/4" carriage bolt and SP2 spacer through an existing fore hole. On the passenger side, fishwire a 7/16-14 x 1" carriage bolt and SP2 spacer through an existing fore hole. Note: The longer carriage bolt must be installed on the driver side.

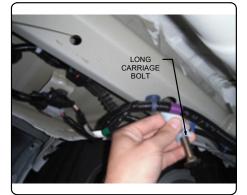



INSTALLATION WALKTHROUGH:

3. Insert the 7/16" U-bolt through the tow loop. Raise hitch into position and loosely secure to the U-bolt using 7/16" flange nuts.





4. Secure hitch to the frame rails using 7/16" flange nuts.





5. Torque all 7/16" hardware to 70 ft-lbs. Raise and secure exhaust back into position.



TOWING SAFETY INFORMATION


Gross Trailer Weight / GTW

The Gross Trailer Weight is the weight of the trailer & cargo. Measure this by putting the fully loaded trailer on a vehicle scale.



Tongue Weight / TW

The downward force that is exerted on the hitch ball by the coupler. The tongue weight will vary depending on where the load is positioned in relationship to the trailer axle(s). To measure the tongue weight, use either a commercial scale or a bathroom scale with the coupler at towing height. When using a bathroom scale with heavier tongue weights, use the method shown and multiply the scale reading by 3.

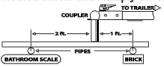

Weight Carrying / WC

The total weight of both the trailer and the cargo inside. Never exceed the weight capacity of your trailer hitch.

Weight Distribution / WD

Used to balance the weight of the cargo between the front and rear wheels throughout the trailer, allowing for better steering, braking, and level riding.






Sway Control

A device used to reduce the lateral movements of the trailer that are caused by the wind. This works in conjunction with a weight distribution hitch. Do not use this on a class 1 or 2 hitch, or with surge brakes.


How Much Can You Safely Tow?

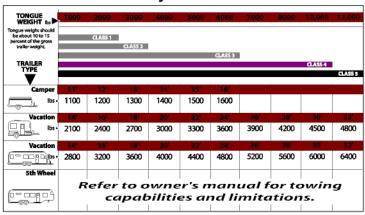

Ball Mount

The ball mount is placed inside the opening of the receiver hitch which is mounted to the vehicle. Make sure a hitch pin and clip is properly securing the ball mount to the receiver hitch before you begin towing.

A: Rise. B: Drop. C: Hole Size. D: Length.

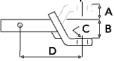


Trailer Ball

The connection from the hitch to the trailer. There are many factors that determine the correct hitch ball:

- Number one is the hitch ball's gross trailer weight rating.
- The mounting platform must be at least 3/8" thick.
- The hole diameter must not be more than 1/16" larger than the threaded shank.
- · Every time you tow, check the nut and lock washer to make sure they are fastened securely.

 • A: Ball Dia. B: Shank Length. C: Shank Dia. D: Shank Rise.

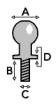

Coupler

The component that is placed over the trailer ball to connect the vehicle to the trailer. Be sure that the coupler size matches the size of the hitch ball and that the coupler handle is securely fastened. To determine what size hitch ball you need for your application you will need to know the size of coupler that is on the trailer. Be sure your coupler is properly adjusted to the ball you are using.

NOTE: For added security the use of safety devices such as Coupler Safety Pins and Locks is strongly recommended.

Safety Chains

Safety chains are a requirement and should be crossed under the tongue of the trailer so that the tongue will not drop to the road if it becomes separated from the hitch. Always leave enough slack so you can turn. Never allow the safety chains to drag on the ground and never attach the chains to the bumper.

Trailer Classification: Safety Chain Breaking Force - Minimum


Class 1: 2,000 lbs. (8.9 kN) Class 2: 3,500 lbs. (15.6 kN) Class 3: 5,000 lbs. (22.2 kN)

The strength rating of each length of safety chain or its equivalent and its attachments shall be equal to or exceed in minimum breaking force the GVWR (Gross Vehicle Weight Rating) of the trailer.

Electrical

Trailer lights, Electric Brakes, Break-away systems - Every time you tow, be sure to check that all components are working properly.

Wiring identification by color:

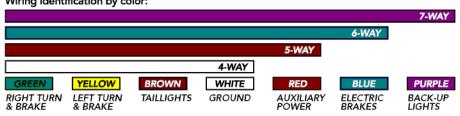

CURT DISCLAIMER: WIRING COLOR SHOWN WORK IN CONJUNCTION WITH CURT MANUFACTURING PRODUCTS.


HONDA HR-V

 $GROSS\ LOAD\ CAPACITY\ WHEN\ USED\ AS\ A\ WEIGHT\ CARRYING\ HITCH:\ 2,000\ LBS.\ TRAILER\ WEIGHT\ \&\ 200\ LBS.\ TONGUE\ WEIGHT.$

DO NOT EXCEED VEHICLE MANUFACTURER'S RECOMMENDED TOWING CAPACITY.

WARNING: ALL NON-TRAILER LOADS APPLIED TO THIS PRODUCT MUST BE SUPPORTED BY 18050 STABILIZING STRAPS.

** FAILURE TO PROPERLY SUPPORT NON-TRAILER LOADS WILL VOID PRODUCT WARRANTY*

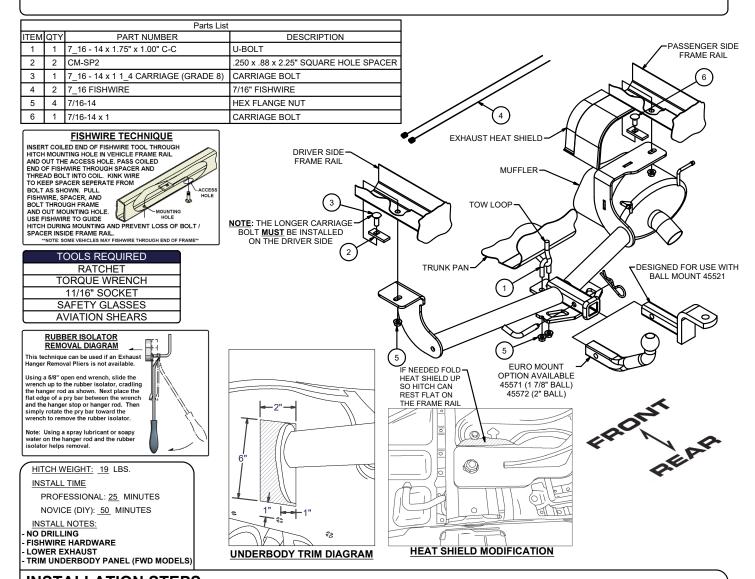

INSTALLATION STEPS

Note: On Front wheel drive models, the lower underbody panel may need to be trimmed as shown above to install the hitch. The exhaust heat shield will need to be bent approximately 3/4" to allow hitch to rest flat against the frame.

- 1. Lower the exhaust by removing the (2) rear-most rubber isolators from the muffler. See Rubber Isolator Removal Diagram
- On the driver side, fishwire a 7/16-14 x 1 1/4" carriage bolt and SP2 spacer through an existing fore hole. On the passenger side, fishwire a 7/16-14 x 1" carriage bolt and SP2 spacer through an existing fore hole.
 Note: The longer carriage bolt must be installed on the driver side. Leave fishwires attached to prevent loss of hardware inside of frame rail. See Fishwire Technique Diagram
- 3. Insert the 7/16" U-bolt through the tow loop, as shown.
- 4. Raise hitch into position and loosely secure to the U-bolt and frame rails using 7/16" flange nuts.
- 5. Torque all 7/16" hardware to 70 ft-lbs.
- 6. Raise and secure exhaust back into position.

PERIODICALLY CHECK THIS RECEIVER HITCH TO ENSURE THAT ALL FASTENERS ARE TIGHT AND THAT ALL STRUCTURAL COMPONENTS ARE SOUND.