

Ignition Coil Boot - Installation Instructions

Prior to the installation of this DENSO First Time Fit[®] Ignition Coil Boot, you must read these instructions completely.

Definition of Terms

⚠WARNING: Describes precautions that should be observed in order to prevent injury or death to the user during installation.

⚠CAUTION: Describes precautions that should be observed in order to prevent damage to the vehicle or its components, which may occur during installation if sufficient care is not taken.

NOTE: Provides additional information that facilitates installation work.

General Service Information and Requirements

⚠WARNING: Use of these products contrary to specifications and directions may result in personal injury or property damage.

REQUIRED TOOLS:

- Safety Goggles

SAFETY PRECAUTIONS:

- Always wear safety goggles.

Ignition Coil Boot Installation

1. Confirm that there is a spring in the new ignition coil boot.
2. Add a small amount of dielectric grease to inner wall on both ends of boot.
3. Attach the new insulator boot to the ignition coil, by pressing the insulator until it is properly mated with the ignition coil. (See Fig. 1)
4. After attaching the insulator boot to the coil, position the ventilation hole of the insulator boot. (See Fig. 2)

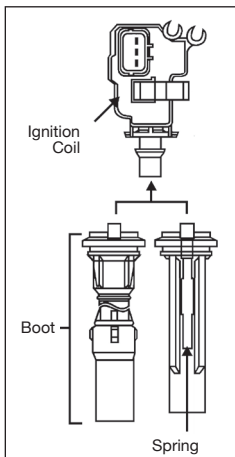


Fig. 1

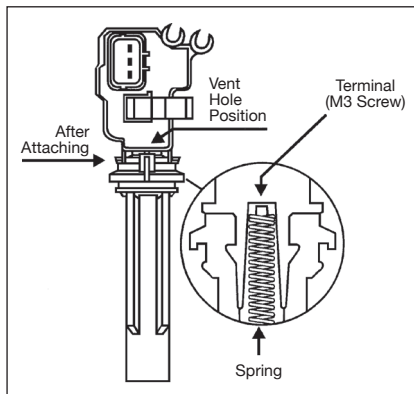


Fig. 2