

Cabin Air Filter

Removal & Installation Instructions

To maintain air conditioning efficiency, replace the air filter according to the manufacturer's maintenance schedule.

Always use an air filter. Removing the filter may decrease system performance by allowing dust to lower the efficiency of A/C and heating system components.

Prior to the installation of this DENSO First Time Fit® Cabin Air Filter, you must read these instructions completely.

Definition of Terms

AWARNING: Describes precautions that should be observed in order to prevent injury or

death to the user during installation.

ACAUTION: Describes precautions that should be observed in order to prevent damage to

the vehicle or its components, which may occur during installation if

sufficient care is not taken.

NOTE: Provides additional information that facilitates installation work.

General Service Information and Requirements

AWARNING: To prevent the Supplemental Restraint System (SRS, Air Bag System) from operating, remove the ground (negative) cable from the battery, then wait at least 90 seconds before starting this procedure. This allows the backup power system to discharge.

NOTE: For more detailed instructions please refer to the vehicle manufacturer's service manual.

REQUIRED TOOLS:

- Safety Goggles
- Assorted Hand Tools

SAFETY PRECAUTIONS:

• Always wear safety goggles

Cabin Air Filter Removal

The information below explains necessary procedures and tools to remove and install the Cabin Air Filter (CAF).

- 1. Open the hood.
- 2. Remove the CAF cover located on the passenger side cowl.
- 3. Locate the CAF release lever on the left side of the filter housing and press lever out to remove CAF. (See Fig. 1)
- 4. Remove and discard filter.

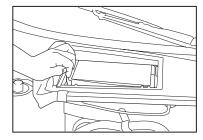


Fig. 1

Cabin Air Filter Installation

NOTE: Depress the lever on the left side of the filter housing prior to installing the new CAF.

5. Insert the new CAF into the double track of the filter holder and release the lever, securing the filter. (See Fig. 2)

△CAUTION: Install the larger section of the CAF first.

6. Reinstall the CAF cover.

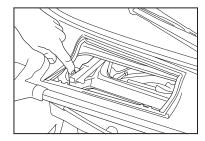


Fig. 2

Noise Test

- 7. Reconnect the battery ground cable.
- 8. Engine ON, A/C ON, blower speed on high.
- 9. Listen for any abnormal air noises from the air filter area.