



Cabin Air Filter

Removal & Installation Instructions

To maintain air conditioning efficiency, replace the air filter according to the manufacturer's maintenance schedule.

Always use an air filter. Removing the filter may decrease system performance by allowing dust to lower the efficiency of A/C and heating system components.

Prior to the installation of this DENSO First Time Fit® Cabin Air Filter, you must read these instructions completely.

Definition of Terms

- △WARNING:** Describes precautions that should be observed in order to prevent injury or death to the user during installation.
- △CAUTION:** Describes precautions that should be observed in order to prevent damage to the vehicle or its components, which may occur during installation if sufficient care is not taken.
- NOTE:** Provides additional information that facilitates installation work.

General Service Information and Requirements

△WARNING: To prevent the Supplemental Restraint System (SRS, Air Bag System) from operating, remove the ground (negative) cable from the battery, then wait at least 90 seconds before starting this procedure. This allows the backup power system to discharge.

NOTE: For more detailed instructions please refer to the vehicle manufacturer's service manual.

REQUIRED TOOLS:

- Safety Goggles
- Assorted Hand Tools

SAFETY PRECAUTIONS:

- Always wear safety goggles

Cabin Air Filter Removal

The information below explains necessary procedures and tools to remove and install the Cabin Air Filter (CAF).

1. Open the glove box.
2. Remove the CAF access cover located at the rear of the glove box. (See Fig. 1)

NOTE: Lift cover upward to remove.

3. Open the access door.

NOTE: Door opens to the right.

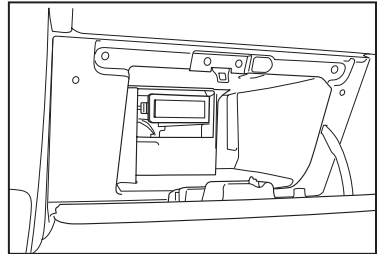


Fig. 1

4. Remove the first filter. (See Fig. 2)
5. Slide the second filter from the left into the opening and remove.
6. Discard the original filters.

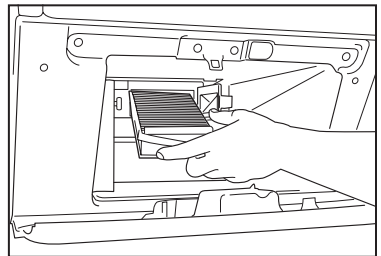


Fig. 2

Cabin Air Filter Installation

7. Install the second filter, then slide it to the left. (See Fig. 3)
8. Install the first filter.
9. Reinstall CAF access door. (See Fig. 4)
10. Reinstall CAF access cover.

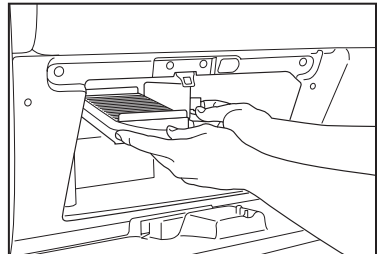


Fig. 3

Noise Test

11. Reconnect the battery ground cable.
12. Engine ON, A/C ON, blower speed on high.
13. Listen for any abnormal air noises from the air filter area.

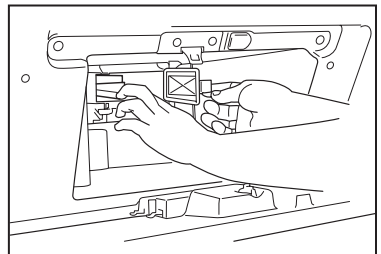


Fig. 4