

Cabin Air Filter

Removal & Installation Instructions

To maintain air conditioning efficiency, replace the air filter according to the manufacturer's maintenance schedule.

Always use an air filter. Removing the filter may decrease system performance by allowing dust to lower the efficiency of A/C and heating system components.

Prior to the installation of this DENSO First Time Fit® Cabin Air Filter, you must read these instructions completely.

Definition of Terms

AWARNING: Describes precautions that should be observed in order to prevent injury or

death to the user during installation.

ACAUTION: Describes precautions that should be observed in order to prevent damage to

the vehicle or its components, which may occur during installation if sufficient

care is not taken.

NOTE: Provides additional information that facilitates installation work.

General Service Information and Requirements

AWARNING: To prevent the Supplemental Restraint System (SRS, Air Bag System) from operating, remove the ground (negative) cable from the battery, then wait at least 90 seconds before starting this procedure. This allows the backup power system to discharge.

NOTE: For more detailed instructions please refer to the vehicle manufacturer's service manual.

REQUIRED TOOLS:

- Safety Goggles
- Assorted Hand Tools

SAFETY PRECAUTIONS:

Always wear safety goggles

Cabin Air Filter Removal

The information below explains necessary procedures and tools to remove and install the Cabin Air Filter (CAF).

- 1. Open the hood and carefully lift up the left and right side plenum covers.
- 2. Locate the CAF access cover and release the mounting hardware.

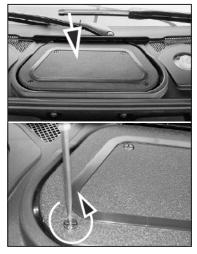


Fig. 1

3. Carefully remove the trim seal.



Fig. 2

4. Carefully disconnect the CAF housing trim.

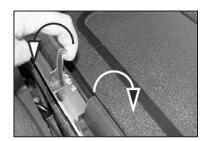


Fig. 3

Carefully remove the CAF housing trim and remove the CAF access cover assembly.



Fig. 4

6. Lift out the CAF element from the CAF access cover. Discard the filter.



Fig. 5

Cabin Air Filter Installation

- Install the replacement CAF onto the access cover, verifying it is properly seated.
- Reinstall the housing cover and secure it using the original mounting hardware. Reinstall the housing trim, the trim seal and the left and right side plenum covers to their original position.

Fig. 6

Noise Test

- 9. Reconnect the battery ground cable.
- 10. Engine ON, A/C ON, blower speed on high.
- 11. Listen for any abnormal air noises from the air filter area.
- 12. Close the hood.