

OIL COOLER KIT INSTALLATION INSTRUCTIONS

PART NUMBER D570-0903

APPLICATION 2009-10 E90 335i/xi without stock oil cooler

Congratulations for being selective enough to use a Dinan Engineering Oil Cooler Kit. We have spent many hours developing this kit to assure that you will receive maximum performance and durability with minimum difficulty in installation. Please take the time to read these instructions and call us if you have any questions during the installation.



Important Note: All Cars

This kit is designed for cars with a standard bumper or BMW M-Technic bumper. This kit will not fit cars equipped with alternate bumpers.

Important Note: Cars with ACC (automatic cruise control)


Cars equipped with automatic cruise control require extra care when installing the Dinan oil cooler kit. When you loosen the radiator support assembly to install the new right side lower radiator mount / oil cooler mounts, mark the position of the nuts that hold it to the frame so you can install it in the same position. If you unplug the ACC sensor DO NOT turn the key ON, and make sure you plug it back in fully.


When the installation is complete, during your test drive check the operation of the ACC. If it does not function properly, you will have to adjust the sensor following BMW TIS instructions 66 31 001.


INSTALLATION INSTRUCTIONS


- Lift car and secure with jack stands if needed.
- 2. Remove the right front wheel to get clearance to the oil cooler.
- 3. Remove the front bumper. Start by removing four Torx screws (1) from bumper trim (2) as shown in figure 1.
- 4. Remove the front inner fender on the right side by removing the screws at location (1) and (2). Unscrew the nut at location (3). Remove the Air Guide (4). Disconnect the connector from the tire pressure box. See figure 2.
- 5. On the left side remove the screws in location (1) and pry out the inner fender (2) to gain access to the two screws you will remove in the next step. See figure 3.

- 6. Pry the inner fender (1) out of the way and remove the two screws (2) holding the bumper to the fender. See figure 4.
- 7. Disconnect the fog light connector and parking sensor connector if equipped with them.

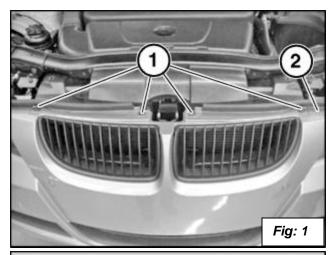

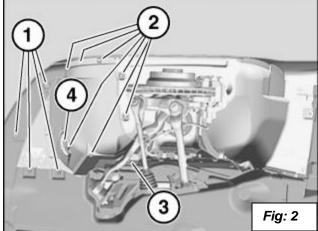

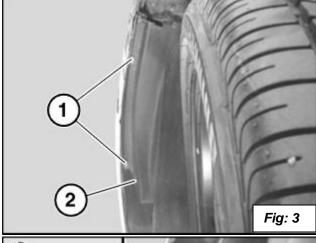

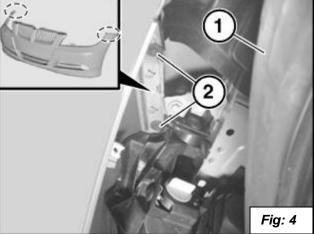



- 8. Remove the doors for the headlight cleaning system if your car is equipped with them. Pull out spray nozzle (1) by cover (2). Hold spray nozzle and carefully unclip cover sideways and remove. Important!


 Do not let go of Spray Nozzle when removing Cover! Grip spray nozzle firmly and slowly slide back into bumper after removing cover. Letting it slam back into bumper will damage it! See figure 5
- 9. Remove the screws in location (1) from the bumper (2). See figure 6.
- 10. Prepare a safe place to put bumper after you remove it.

Remove bumper trim (1) with the aid of a second person by pulling out at top slightly and forward. See figure 7.

12. Remove the air duct (1) that goes from the top of the radiator to the air box by removing the screws (2). See figure 10.

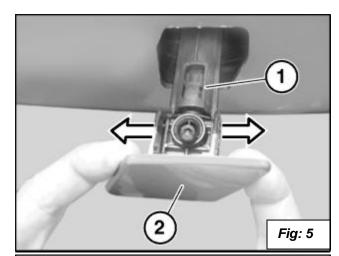


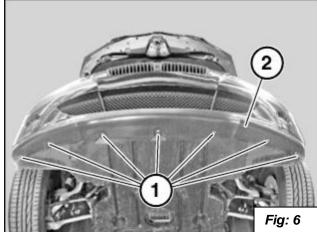


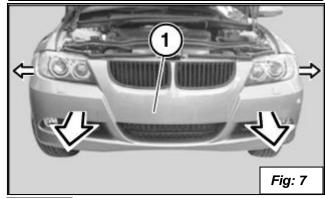




- 13. Remove the oil filter housing. Follow BMW TIS instructions to change out the oil filter housing with the new BMW oil filter housing with thermostat adapter attached for the oil lines.
- 14. Remove the brake duct by removing the mounting screw. See figure 9. Discard duct and keep screw to install new duct you will modify in the following steps.
- 15. Disconnect the wire to the horns.
- 16. Disconnect the wire that runs along the top of the bumper from the clips on the bumper as shown in figure 10.
- Remove the four nuts on each side that hold the bumper to the frame as shown in figure 11. Remove the torx bolt in the center that connects the support rod.
- 18. Drill out rivets as shown in insert in figure 11.
- 19. Remove bumper support.

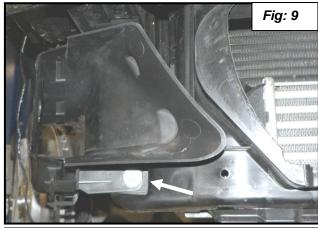

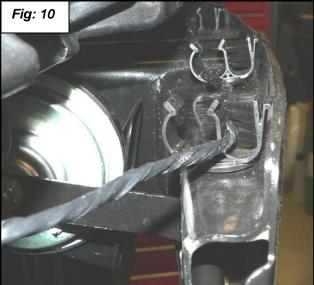

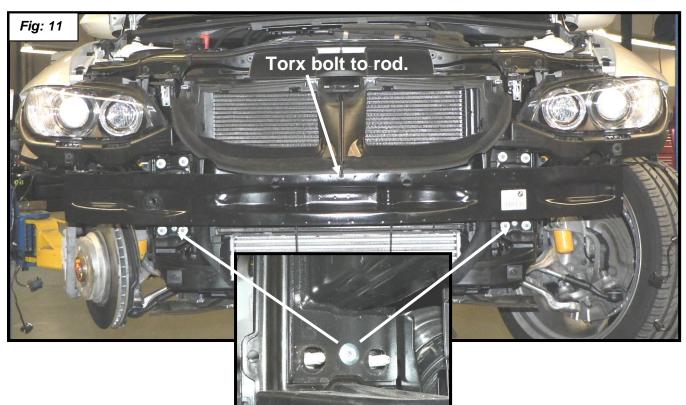

20. **2-door car:**


Remove bolt and discard brace that runs from bottom of headlight to plastic by bumper mount as shown in figure 12. Reinstall bolt without bracket and leave loose for now.

4-door car:


Loosen bolt. There is no bracket as shown.

21. Remove the under car shield as shown in figure 13.


22. Install supplied BMW part number 17 21 7 540 030 bracket nut into the frame rail as shown in figure 14.

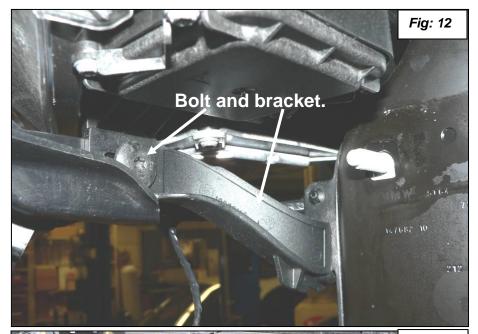




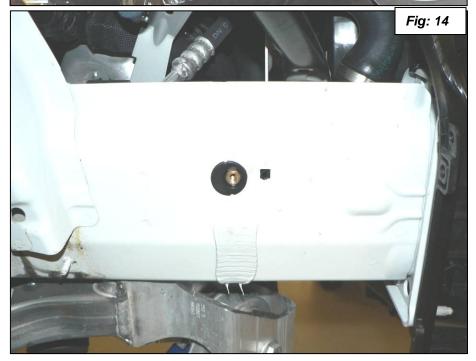


23. Remove the 8mm hex head screw and loosen the torx head screw as shown in figure 15. Repeat on the other side.

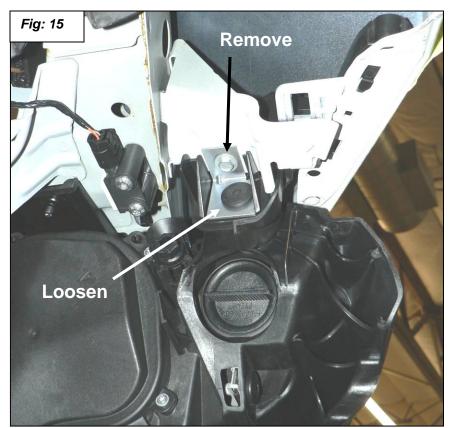


24. Remove the two 10mm hex head bolts from both sides of the upper radiator support as shown in figure 16.

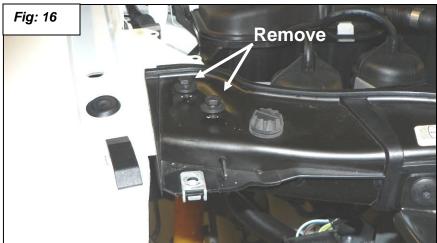


25. Loosen the tension support screws on both sides. See figure 17.

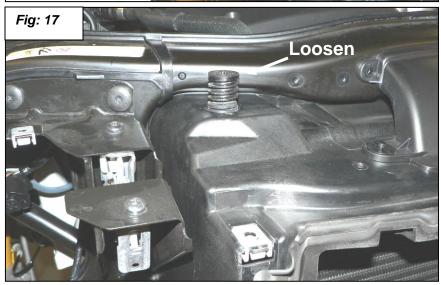

26. Unclip the lower radiator mount from the lower radiator support bracket as shown in figure 18.

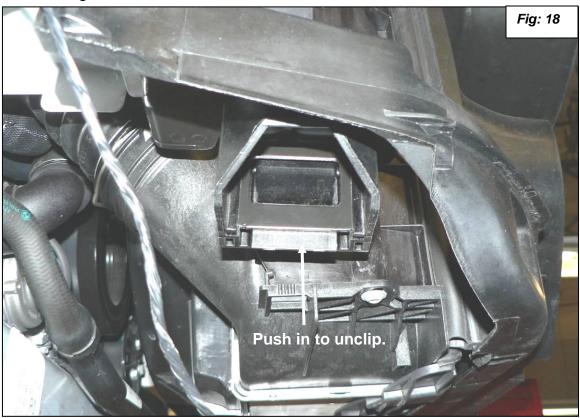


27. Pull the right side of the radiator support assembly forward just far enough to slide out the lower radiator support bracket as shown in figure 19.

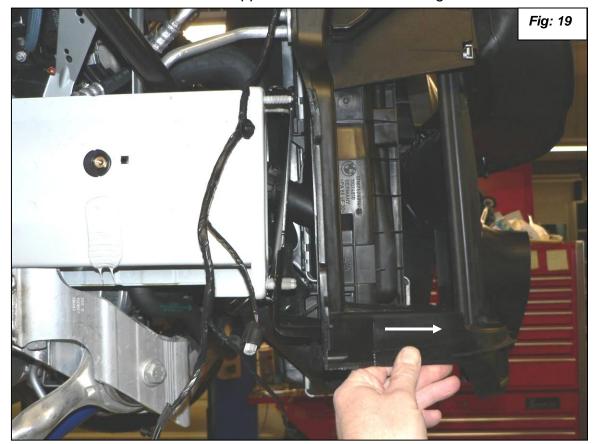

28. Slide the supplied new BMW part number 51 64 7 154 546 lower radiator support bracket with mount for oil cooler onto the studs where the other one without the mount for oil cooler was. See figure 20. Install nuts, bolts, screws and radiator mount in reverse order of removal. Torque bumper nuts to 22Nm (16 ft-lbs.). You do not need to replace rivets.




29. Cut off part of the plastic mount that is not needed. You will need the space for clearance for the oil cooler. See figures 21 and 22.

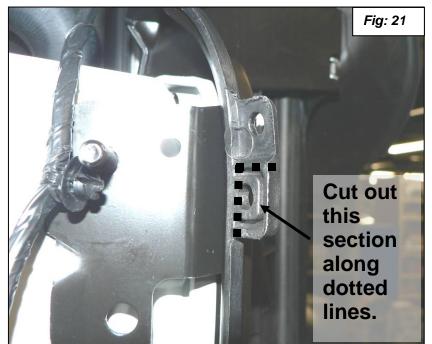

30. Reattach the wire holder to the upper mount you left on the front side as shown in figure 22. You may need to cut off the wire tie and put a new one on a little looser.



31. Install the top support bracket onto the new Dinan oil cooler mount with the supplied 6mm x 10mm bolts and washers. Install the rubber mounts. See figure 23.

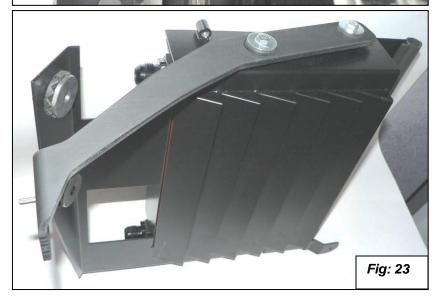


32. You will need to relocate the transmitter for the tire pressure sensing system. The wires that go to it need to be rerouted. See figure 24.



33. Remove the tape and plastic tube that covers the wires as shown in figure 25.




34. Reroute the wire for the transmitter as shown in figures 26, 27 and 28.

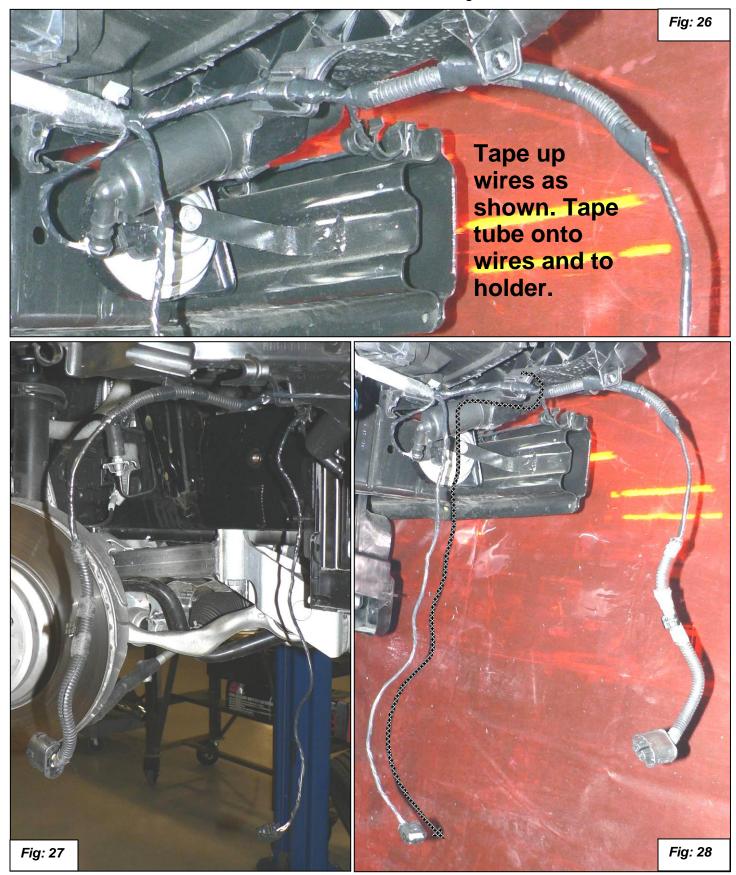


35. Install the O-Rings onto the oil line adapter block. Put the 8mm x 25mm Allen head bolt and serrated lock washer in place. See figure 29.




36. Install the oil line adapter block onto the oil filter thermostat housing. Make sure the O-Rings doesn't get pinched as you install the block. Torque the bolt to 20Nm (15ft-lbs.). See figure 30.

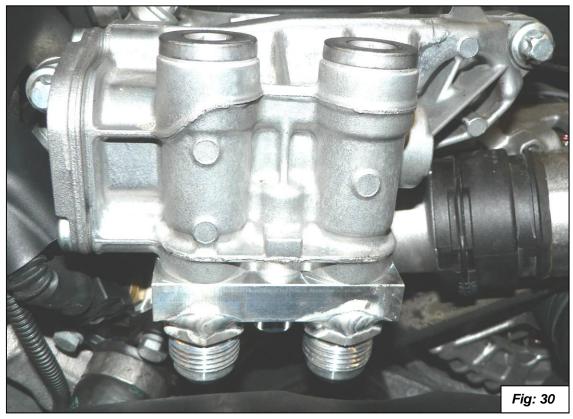

37. Loosely install the oil line with the 90° fittings on each end. One end has a swivel and one end doesn't. Install the end without the swivel onto the topside of the oil cooler. Do not tighten yet. See figure 31.

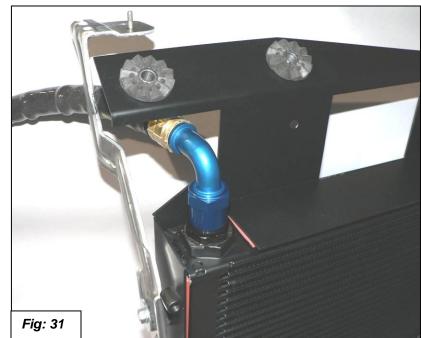

38. Feed the oil line in between the headlight and the bracket as shown in figure 32. Attach the oil cooler assembly to the mounts as shown with the two stock 8mm nuts and the 6mm bolt. Torque nuts to 20Nm (15ft-lbs.) and bolt to 8Nm (6ft-lbs.). See figure 32.

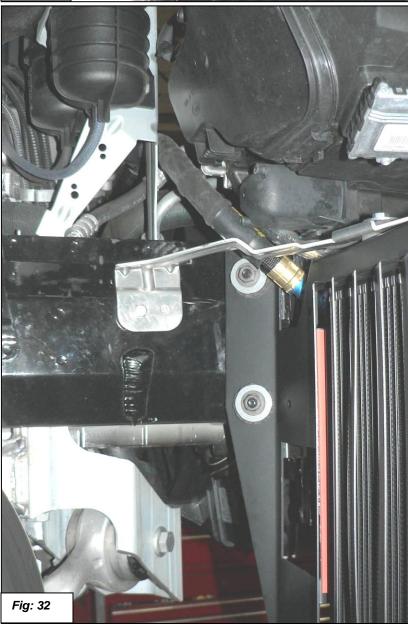

39. Install the 90° swivel end of oil line onto the adapter as shown in figure 33.





40. The straight end of the lower hose connects to the lower fitting of the oil cooler and the 45° fitting end connects to the adapter block onto the oil filter thermostat housing as shown in figure 34.



41. Check line for best routing and tighten fittings with 2 wrenches, one on hose fitting and the other on fitting attached to oil cooler or adapter block.


- 42. Install the brake duct. You do not need to cut the brake duct. It will fit into the opening by going in at an angle as shown in figure 35 and twisting back and forth as you install it around the obstacles.
- 43. When you get it into position with the guide pins in their holes fasten with the stock screw as shown in figure 36.
- 44. Figure 37 shows a side view of the brake duct installed.

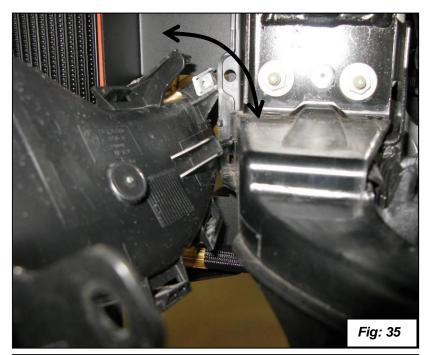

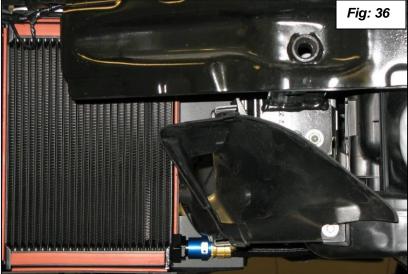




- 45. Install the air duct onto the oil cooler assembly with the four supplied 6mm x 12mm hex head bolts and wave washers. See figure 38.
- 46. Pull the upper edge seal back far enough to put the rubber grommet around the wire for the fog light as shown in figure 39.

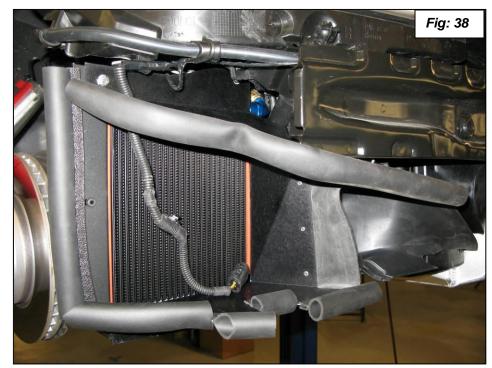



47. Route the wire for the tire pressure transmitter up and around the headlight flange as shown in figure 40.

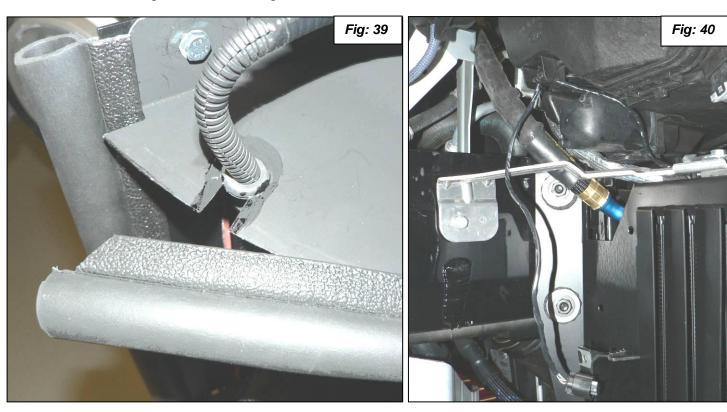

48. Install the bumper over the air duct after connecting the fog light on the passenger side as you install it.

49. Fasten the top screws (1) as shown in figure 41 and the side screws (2) as shown in figure 42.

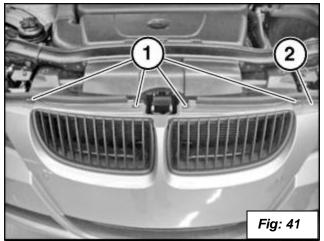


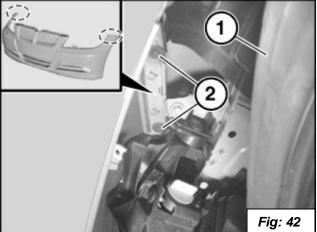

50. Fit the inner fender into position and mark as shown in figure 43 so you can enlarge the opening for the oil cooler vent.

Steps 51 & 52 are for vehicles with standard bumpers. Vehicles with M-Technic bumpers skip to Step 53.

51. For vehicles with standard bumpers: Remove inner fender and cut as shown in figure 43.

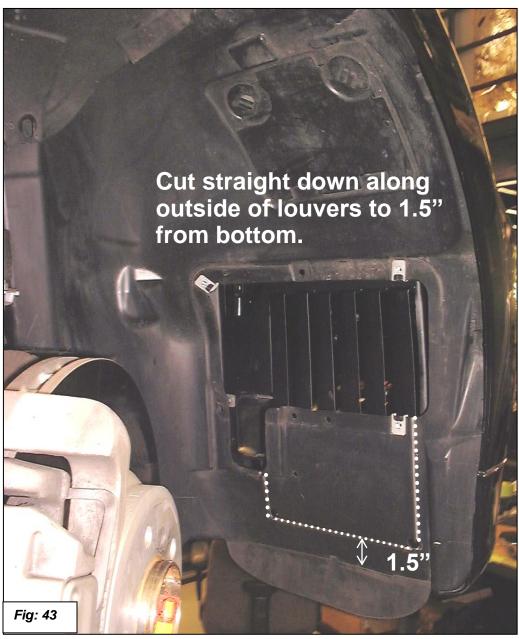


52. **For vehicles with standard bumpers:** Trim the inside of the inner fender as shown in figures 44 and 45.





Step 53 is for vehicles with M-Technic bumpers. Vehicles with standard bumpers skip to Step 54.

53. For vehicles with M-Technic bumper: See figure 46. Remove inner fender and cut as marked. Then mark and drill 9/16" holes for the hardware. Use the arrows for location of drill points. Install the sheet metal nuts and the lower piece of fender liner. Use the hardware from the pieces you have cut out

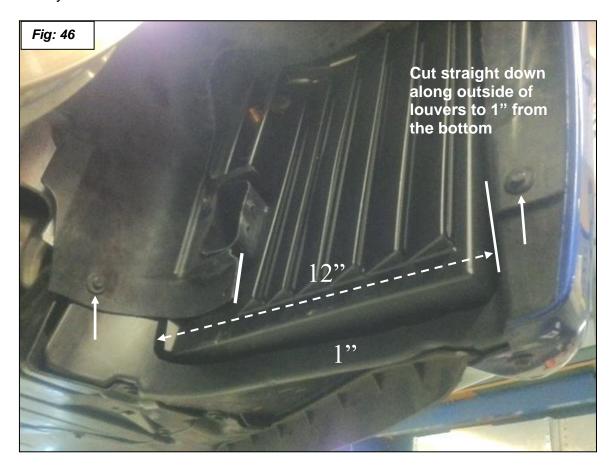

54. Lay the tire pressure transmitter about 3/8" to ½" away from the side of the headlight cut out inline with the top. See figure 47. Make sure connector is pointing down. Mark the holes and drill out to 7mm. Attach transmitter with stock push rivets.



55. Cut the stock louvers as shown in figures 48 and 49.

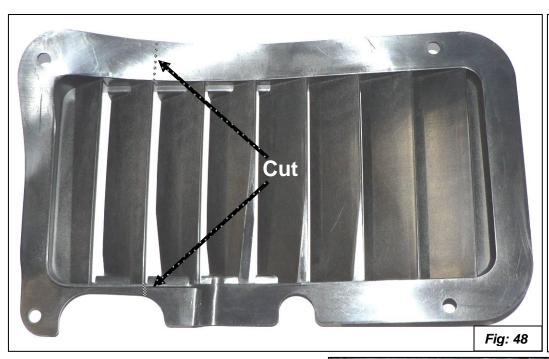




Fig: 50

- 56. Install the inner fender.
 While connecting the tire
 pressure transmitter. Install
 the modified louvers. See
 figure 50.
- 57. Install the other inner fender and bumper screws that you removed in the first steps.
- 58. Install the right front wheel and torque to 120Nm (89 ft-lbs.).
- 59. Outside or in a well ventilated area, bring engine up to operating temperature. Run the engine at a constant speed of 3500rpm until the oil thermostat opens and the oil level low warning comes on. Let engine back to idle then shut engine of. Add 1 quart of appropriate oil to engine.



Enjoy.