
Wiring Instructions


PP0064C

First, connect the LED board connector to the driver. Next, connect the driver to the RGBW Controller (sold separately).

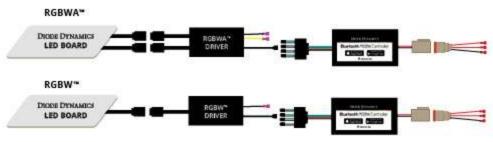

IMPORTANT: DO NOT plug the LED panel directly into controller without the driver. The LEDs must be plugged into driver first to control the power.

Connect your RGBW controller to 12V power and ground. This will dictate when the panels turn on. The most popular wiring choice is listed in the table below.

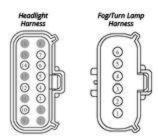

DIODE WIRE	FUNCTION	CONNECTOR	PIN#	DRIVER WIRE	PASSENGER WIRE
RED	DRL	HEADUGHE	4	WHITEBUILE	PURPLEMMETE
RED	PARKING	HEADUGHE	5	PURPLEWNITE	PURPLEAMINE
AETTOM.	TURN SIGNAL	RO G/TURN LAMP	2	BLUE/GREEN	YELLOWGREY
BLACK x2 ++	GROUND	HEADUGHE	0	BLACKGREEN	BIAOVGREY

^{*} vellow wire for RGBWA* module only

10. Mount drivers and controller, and tuck all wires. Drivers should be mounted outside of head-light for serviceability, in a location away from the engine block to avoid excessive heat buildup. Test thoroughly, reseal headlight, and reinstall onto vehicle.

This installation guide is for the following SKU:

DD2243 Mustang 2018 RGBWA LED Boards USDM DD2254 Mustang 2018 RGBWA LED Boards EU DD2245 Mustang 2018 RGBW LED Boards USDM/EU



PAGE 3

DIODE DYNAMICS

PERFORMANCE LIGHTING TECHNOLOGY

2018+ Ford Mustang Pro Series
RGBW™/RGBWA™ DRL LED Board Installation Guide



^{**} one black wire to driver and one for input to controller (if needed)

DIODE DYNAMICS

2018+ Ford Mustang Pro Series RGBW™/RGBWA™ DRL LED Board Installation Guide

DIODE DYNAMICS

2018+ Ford Mustang Pro Series
RGBW™/RGBWA™ DRL LED Board Installation Guide

Thank you for your purchase of this unique product for your new Ford Mustang! With these LED boards, you will be able to convert your factory LED DRL "bars" inside the headlight into full multicolor functionality, along with a sequential amber turn signal feature.







Please note: Headlights must be opened before proceeding with installation. Professional installation is strongly recommended. Please contact Diode Dynamics if you need assistance locating an installer.

Tools Needed: Cutting pliers, 5-minute Epoxy, and Phillips Screwdriver



 Open the headlight housing. To do so, remove the four screws holding the back of the headlight housing to the lens. Set the lens aside on a soft surface to avoid scratching or marring the surface.




Remove the three Phillips screws holding the white DRL bezel in place. Once the screws have been removed, pull the bezel away from the headlight housing.

NOTE: If you are installing these boards on an EU/AU spec Mustang, skip to Step 5.



Unplug the factory board connector and tuck it away.twon't be reused.

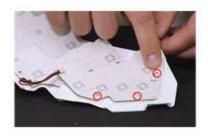

 Bring the DRL bezel to a clean area. Using cutting pliers, remove the three plastic rivets holding each LED board to the bezel and remove the LED boards.

NOTE: Be sure not to remove the two mounting tabs. They will be needed to align your new LED boards.



5. Place your new Diode Dynamics LED boards into position. All holes should align perfectly. Secure the new boards in place by applying epoxy or other permanent adhesive where the plastic rivets were removed. The epoxy should create a bond between the plastic rivet mounting point and the board. Use enough epoxy so that there is a bond all the way around the rivet, contacting the board fully. We recommend securing the board labeled 3 first and working your way forward.



Once the epoxy is fully set, reinstall the white bezel to the main headlight housing using the original screws.



Run the wiring out of headlight, sealing any holes that you may create.

See back for further instructions.



PAGE 1