

# DIODE DYNAMICS

PERFORMANCE LIGHTING TECHNOLOGY

## Always On™ Module for Infiniti Q50



Thank you for your purchase of this unique lighting module for your Infiniti Q50! With this module, you'll be able to keep your fog lights on as the DRL.



1. To begin, turn the steering wheel to the left and pop the hood.

2. Next, remove the front air duct. Using a small flathead screwdriver, gently remove the 8 locking screws holding the air duct in place. **Note: the larger locking screws are used for the outermost holes and the two holes toward the back.** Pull straight up and out on the air duct to remove it. Set it aside.



3. On the passenger side of the vehicle, remove the two 10mm screws holding the air box in place. You may need to gently lift up on the shroud cover to access the second screw. After both screws have been removed, pull the air box straight up and set it to where you can gain access to the headlight connector.

*See back for further instructions.*



4. Next, unplug the headlight connector. To do so, use a small flathead screwdriver to depress the clip on the bottom side of the connector and then pull straight out to release it.



5. Then plug the larger set of connectors on the new module inline, between the headlight and vehicle harness connectors. Run the remaining connectors down to the fog light location.



6. On the passenger side of the vehicle, remove the locking screw in the wheel well. Pull the fender liner back slightly to access the fog light connector. Pull back on the tab on the fog light connector to release it. Then plug the rest of the module in line. \*\*\*If the vehicle has the optional adaptive lighting feature, you may need to reach around or underneath the adaptive lighting controller to access the fog lamp.

7. Test the module and reinstall the original screws in the wheel well, air box, and air duct. Be sure that the grommet hole is in place when reinstalling the air box.

**PLEASE NOTE: The factory DRL only turns on when the car is started.**