NEW TO THE AFTERMARKET KNOCK SENSOR HARNESS

Assists in relaying electrical signals to the Engine Management System





Failure Mode

- Rubber dries and cracks
- Wires become brittle and corrode



