

INSTALL/REMOVAL INSTRUCTIONS: SELF-CODING IGNITION LOCK CYLINDER

ATTENTION: Refer to the appropriate shop manual for your vehicle to obtain specific service procedures for this part. If you do not have a service manual or lack the skill to install this part, it is recommended that you seek the services of a qualified technician. Pay special attention to all cautions and warnings included in the shop manual. Read and follow all instructions carefully.

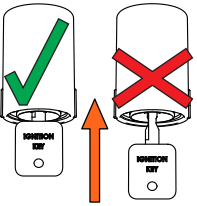
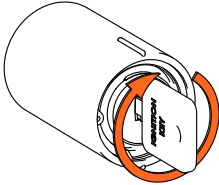
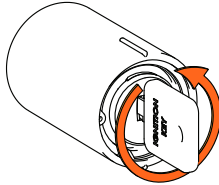
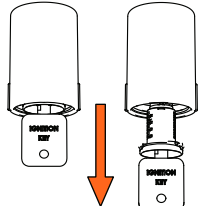
REMOVAL/INSTALL OF SELF-CODING IGNITION LOCK CYLINDER (924-784) Chrysler 2007–98, Dodge 2009–98, Jeep 2005–98, Plymouth 2001–97

General Tech Tips:

- This kit enables you to code your existing key to replacement ignition lock without requiring any specialty tools.
- Be sure to perform key coding procedure prior to installation

**PLEASE WEAR
SAFETY GLASSES!**

Key Coding Procedure

STEP 1 PASO 1 ÉTAPE 1	STEP 2 PASO 2 ÉTAPE 2	STEP 3 PASO 3 ÉTAPE 3	STEP 4 PASO 4 ÉTAPE 4
 <p>Insert the vehicle key. <i>(Check that the <u>key</u> is fully seated in the lock cylinder)</i></p> <p>Insérte la llave del vehículo. <i>(Verifique que la <u>llave</u> esté completamente insertada en el cilindro de la cerradura)</i></p> <p>Insérer la clef du véhicule. <i>(Vérifier que la clef soit complètement insérée dans le barillet de serrure.)</i></p>	 <p>Swiftly rotate the <u>key</u> clockwise → 1 turn. <i>(Ratcheting will occur during the coding operation)</i></p> <p>Rote <u>rápidamente</u> la <u>llave</u> en sentido horario → 1 vuelta. <i>(notará un trinqueteo durante la operación de codificación).</i></p> <p>Pivoter rapidement la clef en sens horaire → 1 tour. <i>(Le rochetage va se produire pendant l'opération de codage).</i></p>	 <p>Rotate the key counter-clockwise ← 1 turn. <i>(If unable to rotate CCW to start step 4, repeat step 2)</i></p> <p>Rote la llave en sentido contra horario ← 1 vuelta. <i>(Si no la puede rotar en sentido contra horario para comenzar con el paso 4, repita el paso 2).</i></p> <p>Pivoter la clef en sens antihoraire ← 1 tour. <i>(En cas d'incapacité de pivoter en sens antihoraire pour commencer l'étape 4, répéter l'étape 2).</i></p>	 <p>The coded lock cylinder and key will be released from the tool.</p> <p>El cilindro codificado y la llave serán liberados de la herramienta.</p> <p>Le barillet de serrure encodé et la clef seront dégagés de l'outil.</p>

INSTALL/REMOVAL INSTRUCTIONS: SELF-CODING IGNITION LOCK CYLINDER

ATTENTION: Refer to the appropriate shop manual for your vehicle to obtain specific service procedures for this part. If you do not have a service manual or lack the skill to install this part, it is recommended that you seek the services of a qualified technician. Pay special attention to all cautions and warnings included in the shop manual. Read and follow all instructions carefully.

STEP 1: Insert your original key fully into replacement lock.

STEP 2: Swiftly rotate key clockwise one full turn.

STEP 3: Rotate key back (counter-clockwise) one turn.

STEP 4: Remove key and tumbler assembly from orange housing.



STEP 5: Remove cap from tumbler shell, then install tumbler assembly with key.



Removal Instructions

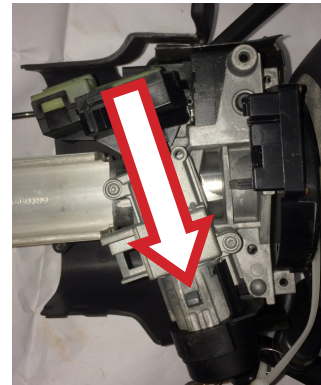
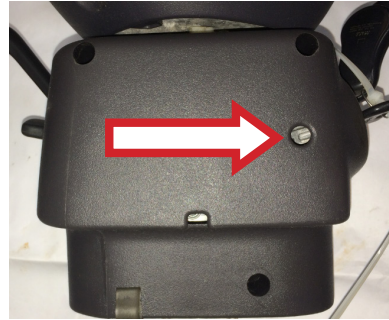
STEP 1: Disconnect negative battery cable.

STEP 2: Rotate lock cylinder to the run position.

INSTALL/REMOVAL INSTRUCTIONS: SELF-CODING IGNITION LOCK CYLINDER

ATTENTION: Refer to the appropriate shop manual for your vehicle to obtain specific service procedures for this part. If you do not have a service manual or lack the skill to install this part, it is recommended that you seek the services of a qualified technician. Pay special attention to all cautions and warnings included in the shop manual. Read and follow all instructions carefully.

STEP 3: Using a small screwdriver or suitable tool, push in lock retaining pin in while pulling on lock cylinder and remove lock from column. Lock retaining tab is accessed through small opening in bottom column shroud.



Installation Instructions

STEP 1: Install lock cylinder by rotating the new lock to the run position

STEP 2: Insert lock into column.

STEP 3: Rotate new lock cylinder using key to ensure proper operation in all positions.

STEP 4: Reconnect negative battery cable.