




ATTENTION!

The shim provided in this product (see figure below) may be required to ensure proper fit and function.

To determine if the shim is needed, first insert the sensor head into the hub. If the sensor head rubs against the reluctor ring, the shim is needed. Remove the sensor head, add the shim and reinsert the sensor head into hub.

If the sensor head is not touching and the reluctor ring spins freely the shim is not needed.

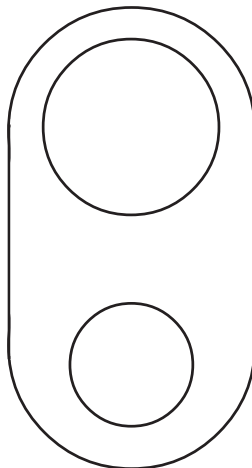

ATTENTION: Refer to the appropriate shop manual for your vehicle to obtain specific service procedures for this part. If you do not have a service manual or lack the skill to install this part, it is recommended that you seek the services of a qualified technician. Pay special attention to all cautions and warnings included in the shop manual. Read and follow all instructions carefully.