Installation Instructions PART NUMBERS: 76227, 84227, CQT76227

AWARNING

To prevent SERIOUS INJURY, DEATH or PROPERTY DAMAGE:

- ALWAYS read, understand and follow warnings and instructions
- for your hitch BEFORE installation. Keep for future reference.
- DO NOT cut, weld or modify this receiver.
- CHECK all fasteners are tight and your hitch is securely mounted to your vehicle periodically.
- ALWAYS read, understand and follow all warnings and instructions for your vehicle and for other accessories you will use with your hitch BEFORE use.
- LOAD the trailer heavier in front.
- DO NOT exceed lower of towing vehicle manufacturer's rating or:

Hitch Type	Max Gross Trailer Weight	Max Tongue Weight	
Weight Carrying	4000 lb. (1814 kg)	600 lb. (272 kg)	
Weight Distributing	N/A	N/A	

ALWAYS wear your seatbelt.

SLOW DOWN when towing, NEVER exceed any posted speed limit.

If EXCESS SWAY occurs, take your foot off the gas pedal and hold

the steering wheel as steady as possible. DO NOT apply your

brakes and DO NOT speed up.



Installation Instructions PART NUMBERS: 76227, 84227, CQT76227

Applications:		Installati	on Time: 45 min	
Years Make	Models		ted above is the average time	
2010-Current* Subaru (EXCLU *Visit our website for the most information regarding applicati levels.		feel comfort installation	onal installers. If you do not table performing this on your own or are in need of please contact a professional	
Equipment Require	d:			
	10mm 14 mm Sockets Utility Knife	Marker Flat Head Screw		Representative Vehicle Photo
	ktension Measure	Driver		
DO NOT EXCEED LOWER OF TOWING VEHICLE MANUFACTURER'S RATING OR:				
Hitch Type	Max Gross Tra	iler Weight	Max Tongue Weight	
Weight Carrying	4000 lb. (1	.814 kg)	600 lb. (272 kg)	
Weight Distributing	N//	1	N/A	

Hitch Illustration



- 1. <u>Remove Tail Lights</u>- a) Open the lift gate.
- b) Remove the plastic tail light cover buy using a Flat Head and a Phillips Head screw driver to remove (2) screw type push pins (each side).
- c) Using a 10mm Socket remove (2) screws from the tail light (each side).
- d) Pull the tail light rearward and remove (2) bulbs and (1) electrical connector from the tail light assembly (each side).
- 2. <u>Remove Fascia</u> -*NOTE- Save all fasteners for reinstallation. a) Remove (1) push pin from the wheel well. (each side) Using a Phillips Head screw driver push on the center of the push pin and then remove. *NOTE- If mud flaps are installed at the bottom of the wheel well and fascia using a Phillips Head screw driver remove (3) screws , using a Flat Head screw driver remove (2) push pins (each side).
- b) Using a Flat Head screw driver remove (7) push pins along the bottom edge of the fascia.
- c) Using a Flat Head screw driver open the tab on the facia under the tail light. Using a 10mm socket remove (1) screw (each side)
- d) Starting at the wheel well gently pull the fascia rearward and set aside.
- 3. <u>Remove Bumper Beam</u>- Remover the foam fascia support from the bumper exposing access holes. Using a 14mm socket remove (4) nuts and save for hitch installation. (each side)
- 4. Install Hitch- *SEE FIGURE 1. Bend center fascia tab flat against the end panel. Raise the hitch and bumper beam into position onto the studs in the end panel. Loosely reinstall the (8) flange nuts removed in step 3 (4 each side)
- 5. Tighten Fasteners- Tighten all 10mm X 1.25 flange nuts with a torque wrench to 42 Lb-Ft (57N*M) A Proper torque is needed to keep the hitch secure to the vehicle when towing.
- 6. <u>Install Foam Support</u>- Place the foam fascia support back onto the bumper.
- 7. <u>Trim Fascia</u>- Using a marker and tape measure make a 4 ½ by 4 inch box on the bottom/center of the fascia to trim. To find the center of the fascia measure 2 inches (toward the driver side of the fascia) from the of the middle hole on the fascia and mark the centerline. Make a mark 2 inches on each side of the centerline. Measure 4 ½ inches from the forward edge of the fascia. *SEE FIGURE 2
- 8. Install Fascia- Reversing the order in step 1 reinstall the tail light, fascia and mud flaps (if equipped).

Note: check hitch frequently, making sure all fasteners and ball are properly tightened. If hitch is removed, plug all holes in trunk pan or other body panels to prevent entry of water and exhaust fumes. A hitch or ball which has been damaged should be removed and replaced. Observe safety precautions when working beneath a vehicle and wear eye protection. Do not cut access or attachment holes with a torch. This product complies with safety specifications and requirements for connecting devices and towing systems of the state of New York, V.E.S.C. Regulation V-5 and SAE J684.

- 1. <u>Remove Tail Lights</u>- a) Open the lift gate.
- **b)** Remove the plastic tail light cover buy using a Flat Head and a Phillips Head screw driver to remove (2) screw type push pins (each side).
- c) Using a 10mm Socket remove (2) screws from the tail light (each side).
- d) Pull the tail light rearward and remove (2) bulbs and (1) electrical connector from the tail light assembly (each side).



- 2. <u>Remove Fascia</u> -*NOTE- Save all fasteners for reinstallation. a) Remove (1) push pin from the wheel well. (each side) Using a Phillips Head screw driver push on the center of the push pin and then remove. *NOTE- If mud flaps are installed at the bottom of the wheel well and fascia using a Phillips Head screw driver remove (3) screws , using a Flat Head screw driver remove (2) push pins (each side).
- **b)** Using a Flat Head screw driver remove (7) push pins along the bottom edge of the fascia.
- c) Using a Flat Head screw driver open the tab on the facia under the tail light. Using a 10mm socket remove (1) screw (each side)
- d) Starting at the wheel well gently pull the fascia rearward and set aside.



3. <u>Remove Bumper Beam</u>- Remover the foam fascia support from the bumper exposing access holes. Using a 14mm socket remove (4) nuts and save for hitch installation. (each side)



- 5. <u>Tighten Fasteners- Tighten all 10mm X 1.25 flange nuts with a torque wrench to</u> 42 Lb-Ft (57N*M)
 - A Proper torque is needed to keep the hitch secure to the vehicle when towing.



4. <u>Install Hitch</u>- *SEE FIGURE 1. Bend center fascia tab flat against the end panel. Raise the hitch and bumper beam into position onto the studs in the end panel. Loosely reinstall the (8) flange nuts removed in step 3 (4 each side)



6. <u>Install Foam Support</u>- Place the foam fascia support back onto the bumper.





8. <u>Install Fascia</u>- Reversing the order in step 1 reinstall the tail light, fascia and mud flaps (if equipped).



View other trailer hitches and towing made by Draw-Tite on our website.