Cequent[™] Performance Products, Inc.



PART NUMBERS: 75229, 87693, 44781



Applications:			tallation Time: 45 min	
Years N	lake	Models The t	time listed above is the average ti	me
2015-Current* Land Rover Range Rover Sport *Visit our website for the most up to date information regarding application years and trim levels.			professional installers. If you do no comfortable performing this allation on your own or are in need stance, please contact a profession aller.	RANGE HOVER
Equipment Re Safety Glasses Philips Screwdriver Driv	het Soo	0 mm 9 mm Torque	Jtility Knife	Representative Vehicle Photo
DO NOT EXCEED LOWER OF TOWING VEHICLE MANUFACTURER'S RATING OR:				Front of Vehicle
Hitch Ty	ре	Max Gross Trailer W	/eight Max Tongue Weight	
Weight Car	rying	8000 lb. (3632 kg	g) 800 lb. (363 kg)	
weight car				
Weight Distri	ibuting	N/A	N/A	Hitch Illustration



- Bottom appearance panel removal use flat head screwdriver to remove (2) plastic rivets attached on upper panel and take upper panel down, see Figure 2. Use 10 mm socket and philips screwdriver to 1. remove (4) bolts attached on lower panel and take lower panel down, see Figure 2.
- Hitch installation raise the hitch into position and loosely install M12 bolt (1) with washer (2) at rearward vehicle cross frame weldnuts, and M12 bolt (1) with washers (3)(4) at forward vehicle cross 2. frame weldnuts, see Figure 1. Insert bolt (5) and flat washer (3) into bumper beam and loosely secure it with flange nut (6), see Figure 3.
- 3. Tighten all fasteners with torque wrench to 75 Lb.-Ft. (102 N*M).
- A Proper torque is needed to keep the hitch secure to the vehicle when towing. Lower panel trimming trim lower panel as shown in Figure 4. Make additional trimming if needed. 4.
- 5. Reinstall the upper and lower appearance panel removed in Step 1.

Note: check hitch frequently, making sure all fasteners and ball are properly tightened. If hitch is removed, plug all holes in trunk pan or other body panels to prevent entry of water and exhaust fumes. A hitch or ball which has been damaged should be removed and replaced. Observe safety precautions when working beneath a vehicle and wear eye protection. Do not cut access or attachment holes with a torch.

1. Bottom appearance panel removal – use flat head screwdriver to remove (2) plastic rivets attached on upper panel and take upper panel down, see Figure 2. Use 10 mm socket and philips screwdriver to remove (4) bolts attached on lower panel and take lower panel down, see Figure 2.





4. Lower panel trimming – trim lower panel as shown in Figure 4. Make additional trimming if needed.





2. Hitch installation – raise the hitch into position and loosely install M12 bolt (1) and washers (2) (3) (4) through bracket slot into frame weldnuts, see Figure 1. Insert bolt (5), and flat washer (3) into bumper beam and loosely secure it with flange nut (6), see Figure 3.

3. Tighten all fasteners with torque wrench to 75 Lb.-Ft. (102 N*M).

A Proper torque is needed to keep the hitch secure to the vehicle when towing.



5. Reinstall the upper and lower appearance panel removed in Step 1.



Learn more about trailer hitches and towing we have.