



Quick Start Guide

For Mechless and CD Receivers

Not all features listed in this QSG are available on all models.



Installation

Before You Start

- Consult a qualified technician for instructions. Dual always recommends professional installation.
- Disconnect negative battery terminal.
- Remove trim ring from unit (if installed).
- Remove 2 transit screws located on top of the unit (if applicable).
- Insert the removal keys, and remove the mounting sleeve from the head unit.

Note: Most vehicles require an installation kit, wiring harness and/or antenna adapter (all sold separately) to properly install the head unit in the vehicle.

Installation Process

1. Carefully remove the existing head unit.
2. Connect wiring harness. Consult a qualified technician if you are unsure.
3. Mount the head unit using the mounting sleeve or ISO brackets (depending on your vehicle's dashboard).
4. Connect wiring harness and antenna. Test the head unit for correct operation.
5. Slide into mounting sleeve to secure, or mount the ISO brackets to the vehicle.
6. Snap trim ring into place.

Wiring Connections

The chart below the connection for each wire in the wiring harness.

Color	Connection
Red	12V Ignition / Accessory
Yellow	12V Battery / Memory
Black	Ground
Blue	Power Antenna / Amp Turn-on
Grey	Right Front (+)
Grey/Black	Right Front (-)
White	Left Front (+)
White/Black	Left Front (-)
Violet	Right Rear (+)
Violet/Black	Right Rear (-)
Green	Left Rear (+)
Green/Black	Left Rear (-)

 
Tip:
When a suitable ground wire is not present in the vehicle wiring harness, connect the black ground wire to the vehicle chassis.

Fuse:
When replacing the fuse, make sure new fuse is the correct type and amperage. Using an incorrect fuse could damage the radio.


Installation

Mounting the Head Unit: Typical DIN mounting


- Step 1:**
Insert the mounting sleeve into the installation kit or dashboard.

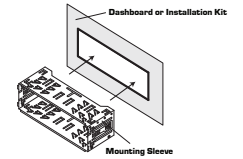

 - Step 2:**
Bend multiple mounting tabs around the mounting sleeve until the mounting sleeve is secure.

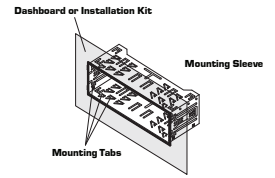


 - Step 3:**
Connect all wiring harnesses and slide the head unit into the mounting sleeve until it clicks into place.

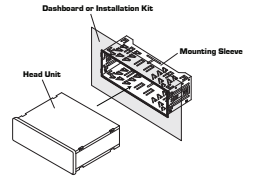

Mounting the Head Unit: ISO mounting

 Using the existing brackets or the brackets supplied with the installation kit, mount the brackets to the sides of the head unit with the screws supplied with the head unit.

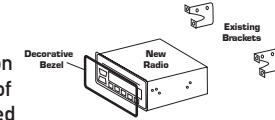

General Operation

Power On/Off	Press the ⏻ button to turn the unit on. Press ⏻ again to turn unit off.
Faceplate Removal	Press RELEASE and pull away from the left side to remove. To re-install, insert right side of faceplate first then push left side to secure.
Changing Modes	Press MODE to select between AM/FM, CD player, auxiliary front/rear, USB and operation of iPod/iPhone. Modes of operation are shown in the display.
Volume	Adjust volume using volume knob.
Mute	Press ⏸ to silence the audio. Press ⏸ again to resume listening at the previously selected volume.
Auxiliary Inputs	Insert a 3.5mm cable in the units front AUX port, or RCA cables into the rear AUX-IN connectors.
Reset	Press the RESET button to reset the unit back to the factory settings if abnormal operation occurs. The reset button is located behind the front panel.
Setting the Clock	With the unit on, press and hold DISP until the clock begins to flash, then release. Press TUNE ◀◀ to adjust the hours and TUNE ▶▶ to adjust the minutes. Press DISP momentarily to save the selected time.
Display	Press DISP to toggle display between various displayed information.
Audio / Menu	Press and hold AUDIO/MENU for more than three seconds to access the setup menu. Press AUDIO/MENU momentarily to select between the menu functions and rotate the volume knob left/right to adjust or activate the desired function.



AM/FM Tuner Operation

Seek Tuning	Press TUNE ◀◀ or TUNE ▶▶ for more than one second to seek to the next strong station.
Manual Tuning	Press TUNE ◀◀ or TUNE ▶▶ momentarily to move radio frequency up or down one step at a time. Press and hold to advance quickly.
Band	Press BAND to select between FM1, FM2, FM3, AM1 and AM2 bands. Up to six presets can be programmed for each band, enabling up to 18 FM stations and 12 AM stations to be stored in memory.
Storing Presets	Up to 18 FM and 12 AM stations can be stored. To store a station, select the desired band and station. Press and hold the desired preset button (1-6) for more than two seconds. When stored, the preset number will appear in the display.
Recalling Presets	Preset stations can be recalled any time by pressing the corresponding preset button.



CD Operation*

Insert CD	With the label facing up, insert a standard size CD into the CD slot. Playback will begin automatically.
Eject CD	Press EJECT (located behind the front panel) to eject the CD. The unit will change to previous mode of operation.
Track Select	Press TUNE ▶▶ to skip to the beginning of the next track. Press TUNE ◀◀ to return to the beginning of the current track. Pressing TUNE ◀◀ again skips to the beginning of the previous track.
Fast Forward/Reverse	Press and hold TUNE ▶▶ or TUNE ◀◀ to fast forward or reverse a track.
Pause	Press ⏸ to temporarily stop CD playback. Press ⏸ again to resume playback.
Intro	Press INT to access the Intro menu, then turn the volume knob to select one of the following: • OFF - Cancels the INT function. • ALL - Plays the first 10 seconds of each track.
Repeat	Press RPT to access the Repeat menu, then turn the volume knob to select one of the following: • ALL - Plays all tracks on CD. • TRACK - Continuously repeats selected track.
Random	Press RDM to access the Random menu, then turn the volume knob to select one of the following: • OFF - Cancels the RDM function. • ALL - Plays all tracks in random order.
CD-R/CD-RW Compatibility	Some CD-Rs and CD-RWs may be incompatible with this unit, depending on media type and recording method. Refer to the online owner's manual for details.



MP3 / WMA Operation *

Playing MP3/WMA Files	To play MP3/WMA files, insert a data CD, SD card or USB device containing MP3/WMA files.
Track Select	Press TUNE ▶▶ to skip to the beginning of the next song. Press TUNE ◀◀ to return to the beginning of the current song. Pressing TUNE ◀◀ again skips to the beginning of the previous song.
Fast Forward and Reverse	Press and hold TUNE ▶▶ or TUNE ◀◀ to fast forward or reverse a track.
Pause	Press ⏸ to temporarily stop playback. Press ⏸ again to resume playback.
Folder Access	Press ⏮ to select the next folder. Press ⏭ to select the previous folder. Folder access is only available on discs or devices with more than one folder.
Repeat	Press RPT to enter the Repeat menu, then turn the volume knob to select one of the following options: • ALL - Plays all tracks on disc or device. • TRACK - Continuously repeats selected track. • FOLDER - Continuously repeats all files in folder.
Random	Press RDM to enter the Random menu, then turn the volume knob to select one of the following options: • OFF - Cancels RDM function. • ALL - Plays all tracks in random order. • FOLDER - Plays all tracks in folder in random order.
Intro	Press INT to enter the Intro menu, then turn the volume knob to select one of the following options: • OFF - Cancels the INT function. • ALL - Plays first 10 seconds of each track. • FOLDER - Plays first 10 seconds of each track in the selected folder.



Operation of iPod/iPhone*

Connect an iPod/iPhone Device (sold separately)	To play music from an iPod/iPhone device, connect the USB cable (included with your iPod/iPhone device) to the unit's USB port. Playback will begin automatically.
Song Select	Press ▶▶ to skip to the next song. Press ◀◀ to return to the beginning of the current song. Pressing ◀◀ again skips to the beginning of the previous song.
Forward/Reverse	Press and hold ▶▶ or ◀◀ to fast forward or reverse.
Pause	Press ⏸ to temporarily stop playback. Press ⏸ again to resume playback.
Repeat	Press RPT to enter the Repeat menu, then turn the volume knob to select one of the following options: • ALL - Repeats all tracks. • SONG - Continuously repeats selected track.
Random	Press RDM to enter the Random menu, then turn the volume knob to select one of the following options: • OFF - Cancels the RDM function. • ALL - Plays all tracks in random order. • ALBUM - Plays all tracks in album in random order.
Intro	Press INT to enter the Intro menu, then turn the volume knob to select one of the following options: • OFF - Cancels the INT function. • ON - Plays first 10 seconds of each track.
Music Search	Turn the volume knob to select between artists, albums, songs, playlists, podcasts and audiobooks. Press SELECT to select the desired search category. Most search categories have subcategories to navigate through.
Manual Control for iPod	When "MANUAL" control is selected from the Setup Menu, the iPod or iPhone device can be controlled directly from the device's interface. All functions except for volume can be used from the iPod or iPhone device. Note: The firmware of the iPod/iPhone must be up dated to the latest version to be compatible with manual control model. Not all devices are compatible with manual control mode.



Bluetooth® Operation*

Preparation	Before using a Bluetooth device, it must be paired and connected. Ensure that Bluetooth is activated on your device before beginning the pairing process.
Pairing a New Device	The head unit broadcasts the pairing signal constantly when no devices are connected. Complete the pairing sequence from your Bluetooth device. Refer to the owner's manual for your device for more details. The device name is "DUAL BT" The Bluetooth passcode "1234" Note: The head unit can be in any mode of operation when pairing is performed.
Pairing Additional Devices	If a device is currently connected, press and hold ⏮ to disconnect the current device before a new device can be paired. Then begin the pairing sequence from the new Bluetooth device.
Disconnecting a Device	Press and hold ⏮ for 3 seconds to disconnect a connected device. The device will remain paired and appear in the SEARCH menu, but not be connected.
Streaming Audio Troubleshooting	The head unit supports A2DP wireless streaming audio from a Bluetooth mobile device directly to your head unit. The following functions can be used to control the music: • Press ▶▶ to skip to the next available audio track. • Press ◀◀ to skip to the previous audio track. • Press ⏸ to toggle between play and pause during playback.



Pandora® Operation*

Requirements	Control for Pandora requires: • An iPhone device with a reliable data connection, or an iPod touch that is connected to wireless internet. • The Pandora App installed on the iPhone/iPod device. • An active account with Pandora • The USB sync cable included with iPod/iPhone device.
USB Connection	Connect an iPod touch or iPhone device (required, sold separately) to the USB port, using the USB sync cable included with your iPhone device.
Changing Stations	Press SELECT to display the stations menu. Turn the volume knob to cycle through the list of stations, then press SELECT when the desired station is highlighted. Note: Stations must be created on your account prior to connecting your iPod/iPhone device to the head unit.
Shuffle	Press SELECT to display the stations menu. Choose "Shuffle" from the stations menu to shuffle songs from all of your stations.
Skip Track	Press ▶▶ to skip the current song.
Play/Pause	Press ⏸ to temporarily stop playback. Press ⏸ again to resume playback.
Thumbs Up	Press 👍 to customize the station to play more songs like the currently playing song.
Thumbs Down	Press 👎 to customize the station to play songs that are different from the currently playing song.
Device Compatibility	Refer to the Owner's Manual for a complete list of devices compatible with this head unit.
Troubleshooting	Note: Pandora is an internet service, carrier and data charges may apply.

