

# EGR

## INSTALLATION INSTRUCTIONS



- Do not use power tools to install this product.
- No battery operated screw guns.
- The use of power tools during installation may void the product warranty.
- Do not overtighten.

### INSTALLATION INSTRUCTIONS

1. Clean and open the hood. Trial fit the **Hood Product** centrally onto hood. Note the four (4) holes in the hood corresponding to the four slots in the **Hood Product** and also note the metal wing clip locations. Remove **Hood Product**.
2. Install the screw plugs provided into the four (4) previously noted holes in hood, as shown.
3. Refit **Hood Product** centrally onto hood. Seat the slot of the **Hood Product** over the collar of the screw plug, by applying firm pressure to the underside of the **Hood Product**. While maintaining the thumb pressure against the underside of the **Hood Product**, insert the self-tapping screw and washer into screw plug and tighten screws. Do not fully tighten yet. Ensure the **Hood Product** is centralised on hood then fully tighten screws.
4. Clean the previously noted areas with alcohol wipe provided. Wipe off any residue with a dry clean cloth. Adhere the abrasive resistant tape strip over the hood lip. Apply tape so approximately half of each strip is adhered to the top side and half is adhered to the underside of hood.
5. Install the metal clips over the abrasive resistant tape strips at the previously marked locations. **Ensure the clips are fully seated over abrasive resistant tape. Ensure the clips do not come in contact with any of the hood's paint work. Failure to do this may result in permanent paint damage.** Finally, secure the **Hood Product** to the metal clips with the small screws and washers provided.

**To Clean:** Use mild detergent and water solution. (Do **NOT** use solvents). Avoid the use of automatic "Brush Style" car washers. When closing hood, do **NOT** pull on **Hood Product**.

