

EGR

INSTALLATION INSTRUCTIONS



- Do not use power tools to install this product.
- No battery operated screw guns.
- The use of power tools during installation may void the product warranty.
- Do not overtighten.

INSTALLATION INSTRUCTIONS

1• Clean and open the hood. Place a blanket or drop cloth over the open engine area to ensure no components are lost or dropped inside. Trial fit the [Hood Product](#) centrally onto hood. Note the underside of hood corresponding to the slots in the Hood Product.

2• Install the 4 screw plugs into the vacant center holes, as shown. By placing one end entirely into the hole and then apply pressure to the other end to properly engage. The plug should run parallel to the hood lip edge.

Install the 2 screw plugs into the vacant outer most holes as shown. The collar on the plug should run parallel with the hood lip edge.

3• Re-fit the Hood Product centrally over all the screw plugs. Install from the center holes outwards

IMPORTANT: Ensure the slot is located centrally over the outer most hole screw plug collars. Ensure that the product stays centrally located.

4• Maintain thumb pressure against the underside of the Hood Product, insert the screws and washers into the screw plugs. Ensure the Hood Product is centered on hood then tighten screws.

IMPORTANT: Thumb pressure must be maintained to prevent the screw plugs from rotating at the outer most holes. DO NOT OVERTIGHTEN SCREWS.

To Remove: Reverse the above procedure.

To Clean: Use mild detergent and water solution. (Do **NOT** use solvents). Avoid the use of automatic "Brush Style" car washes. When closing the hood, do **NOT** pull on **Hood Product**.

