

# Set 2.3106 & Set 2.3107



## Must use existing outer metal shells. DO NOT REMOVE FROM CONTROL ARMS!!

Remove old I.D. sleeve and old rubber from the shells  
 Make sure the I.D. of the shells are clean and free of any old rubber  
 Apply a light coat of grease to the I.D. of the shell  
 Apply a light coat of grease to the I.D., O.D. and the flange  
 Apply a light coat of grease to the O.D. of the new metal sleeve  
 Install the bushing in the shell and install the sleeve last  
 Apply a light coat of grease to the faces of the thrust washer that contacts the metal surfaces.

The thrust washers are designed to prevent the control arm from walking side-to-side by accepting side load pressure created during hard cornering. Most kits contain more than one part #. It is very important to install them at the correct location. **See illustration for your set #.**

