


Greaseable Sway Bar Bushing Instructions

1. Remove old sway bar bushings and end links.
2. Clean and remove any rust or scale from the sway bar.
3. Grease the I.D. of the bushings and the contact area of the sway bar prior to installation.
4. Install bushings and brackets.
5. Rotate the stabilizer bar back and forth to disperse the grease throughout the bushing.
6. Install end links.

Note: For periodic maintenance, each bushing requires three full pumps of the grease gun to insure proper lubrication.

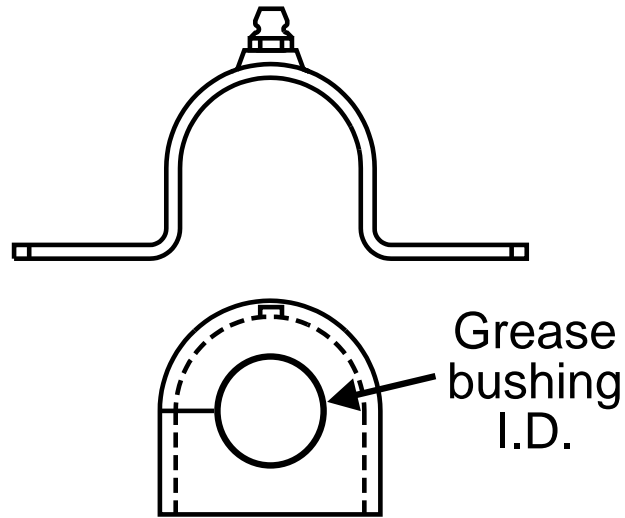

Install and maintain with
your favorite grease.

