


Read this instruction sheet thoroughly before initiating any work!

Removal:

To remove the upper control arm shaft, it must unload from the small washer end. (See illustration below) the I.D. on this end of the arm is also larger. To assist in the removal of the shaft and bushing, cut the rubber flange off at the small washer end. Use caution as not to damage threads on shaft while pressing it out of the control arm.

Installation:

Grease bushing and I.D.'s before installing as per instruction sheet #17019. Install the two small bushings in the control arms small eye, then the new aluminum sleeve. Load shaft into position with the small and large washers in the correct locations. (See illustrations below) press the one piece bushing into the control arm. (A support bar should be positioned between eye areas's) Install one aluminum sleeve after bushing is in the eye. Reinstall outer washers and nuts. Tighten all to factory specs.

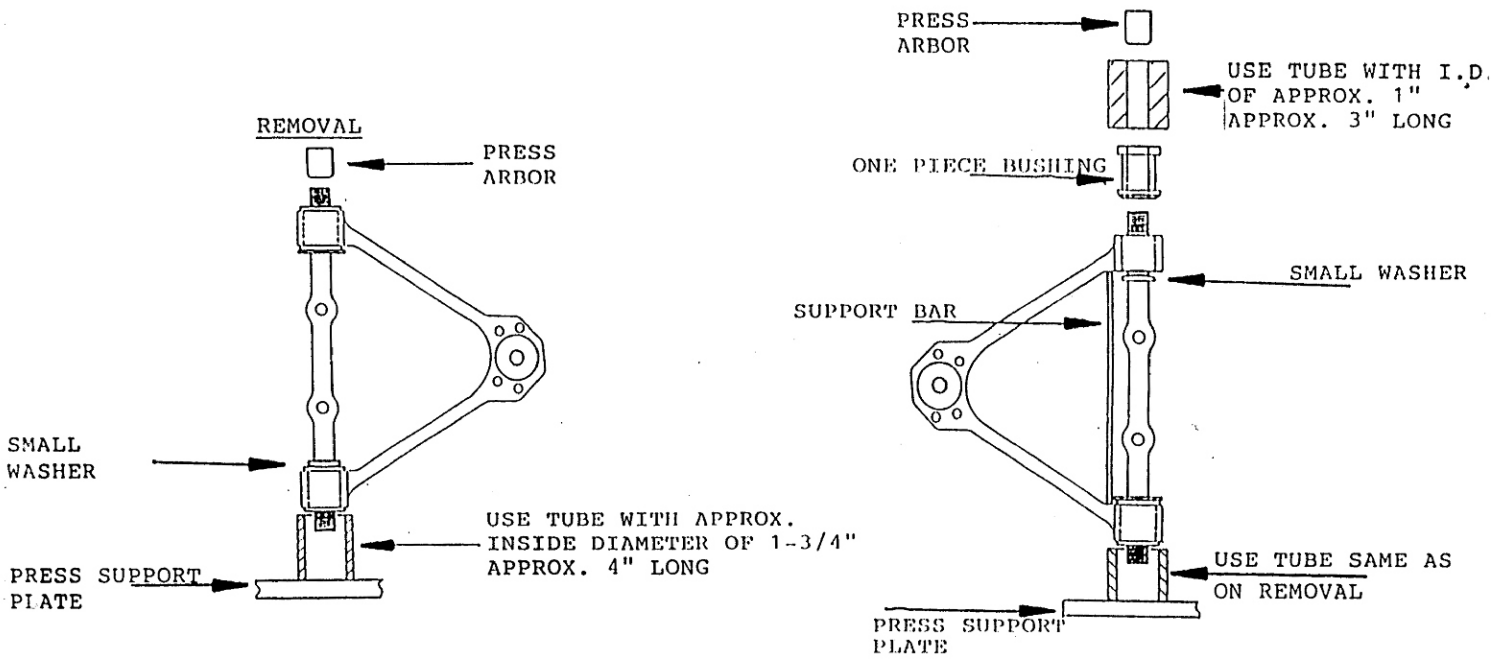

17052