Installation Instructions for Set # 5-3120 & Set # 5-3131



Bushing

Flange

Control arm

Install bushing

shaped flange

over the small

end of the

outer metal

with cupped

Must use existing outer metal shells. DO NOT REMOVE FROM CONTROL ARMS! **NOTE:** Make sure the bolts fit in the new sleeves before removing the rubber bushings from the control arms! Remove old metal sleeve and rubber from the shell I.D. Make sure the I.D. of the shells are clean and free of any old rubber. Apply a light coat of grease to the I.D. of the metal shell. Apply a light coat of grease to the I.D., O.D. and bushing flange. Apply a light coat of grease to the O.D. of the new inner metal sleeve.

Install the bushings in the shell and install the inner sleeve last.

Apply a light coat of grease to the faces of the bushing flanges that ω contact metal surfaces.

