## **Greaseable Sway Bar Bushing Instructions**



- 1. Remove old sway bar bushings and end links.
- Clean and remove any rust or scale from the sway bar.
  Grease the I.D. of the bushings and the contact area of the sway bar prior to installation.
- 4. Install bushings and brackets.
- 5. Rotate the stabilizer bar back and forth to disperse the grease throughout the bushing.
- 6. Install end links.

Note: For periodic maintenance, each bushing requires three full pumps of the grease gun to insure proper lubrication.





