


# Aluminum Combination Loading Ramp


To avoid personal injury and/or property damage, please read and follow ALL instructions before assembling and operating.

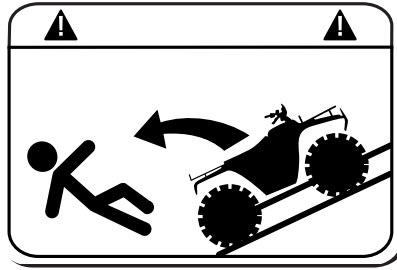

1. Never overload ramps. Maximum capacity for your ramp is 1500 lb. (Evenly distributed load).
2. Always use safety strap to securely fasten the ramp to the vehicle. This prevents the ramp from slipping off the back of the truck.
3. Carefully roll or winch equipment up or down the ramp. Never drive or ride your equipment while loading or unloading. Erickson Manufacturing is not responsible for any damage or injuries that can occur when loading and un-loading. **USE AT YOUR OWN RISK!**
4. Make sure the ramp is aligned with the wheels of the equipment being loaded or unloaded.
5. Always load or unload on a solid, level and stable surface with the vehicle in gear, the parking/emergency brake on, and engine off.
6. Use as a loading ramp only.
7. Ramp surfaces must be clean, dry and free from oil, grease or water.
8. Maximum recommended height is 30 inches.
9. Inspect ramp before each use. Tighten any loose hardware. Replace any worn or damaged parts. Replace safety strap if webbing is frayed or worn. Do not attempt to use a ramp that is damaged in any way. No modification, alteration, or deviation to the ramp are authorized by the manufacturer. Proper care and maintenance of the ramp are essential to safety.
10. Proper use of this product is critical to safety, and beyond the control of Erickson Manufacturing Ltd. Erickson Manufacturing Ltd. neither guarantees nor is liable for any damage resulting from improper use. The liability of this product is limited to its purchase price if it proves to be defective in material and/or workmanship.

## IMPORTANT NOTICE ABOUT LOADING ON A TAILGATE

- Erickson Manufacturing does not recommend the loading or unloading of equipment on a tailgate.
- It is recommended that if you choose to load or unload using a tailgate that you take the proper precautions and support your tailgate with a approved Tailgate Support.

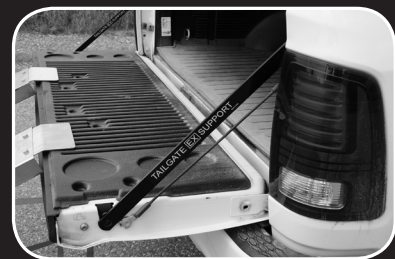

# Specifications

<b>Rated Capacity</b>	1500 lb. (distributed load)
<b>Ramp Dimensions</b>	(Open) 84" x 54" (Folded) 5.75" x 84" x 18.5"

# Assembly

This ramp was designed with the sportsman in mind. It is ideal for loading and unloading snowmobiles and ATV's. This is a perfect all-season ramp, with easy installation of the polyethylene runners.

To remove the polyethylene runners please follow the directions below:

1. Use a Phillips (★) screwdriver to remove self tapping screws.
2. Polyethylene runners can now lift-off easily. Store the screws and runners in safe location.

# Usage

**Step 1** Be sure you are loading on a hard, level and stable surface and that the vehicle you are loading into is parked with the emergency/parking brake in "Park" and the engine is "off". Unfold and place the lip of the ramp against the back of the vehicle.

**Step 2** Secure the ramp to the vehicle using the strap. When the strap is secure, test the ramp by pulling backward on it. Ensure that the ramp does not slide back or disengage from the loading surface.

**Step 3** Once the ramp is secure and the area is safe to proceed with loading, move the vehicle to be loaded between the ramps and center the load.

**Step 4** Proceed with loading the vehicle, making sure the ramp is sustaining the load and not bowing from weight.

**Step 5** Continue until the vehicle is fully loaded. Secure the brake and tie down as needed.

**Step 6** Unhook the chain and fold the ramp and lock into the folded position. Store in a clean, dry and safe place where damage will not occur.

