

EYENIMAL

A LIVING ADVENTURE

Cat videocam



User's guide

User's guide

Before using your pet cam, please read the instructions in this guide carefully and keep it for future reference.

- **Technical specifications**


Product Size	41x44x25mm
Physical weight	32g
Tightness	Showerproof
USB	2.0(high speed)
Power supply	Embedded 450mAh Li-polymer Battery
Working times	Up to 150 minutes
Power Adaptor	5V DC/500mAh
Power Consumption	<0.7W
Memory	Built in 4GB memory
Resolution	736x480
Video Format	AVI
Recording Speed	24 frames per second
Photographing Angles	60 degree
Image sensor	CMOS
Photographing distance for infrared recording	2 meters
Working temp	-10° C + 50° C
Storage temp	-20° C + 60° C
Player	Quicktime, kmplayer. windows media player, Realplayer
Operating System	Windows 2000, XP, Vista, 7 Mac OS 10.x

- **Contents and description of the Cat Videocam**

- **Contents**

- 1 EYENIMAL Pet Cam
 - 1 USB cable
 - This user's guide
 - a label to indicate a telephone number in the event of a loss

- **Description**

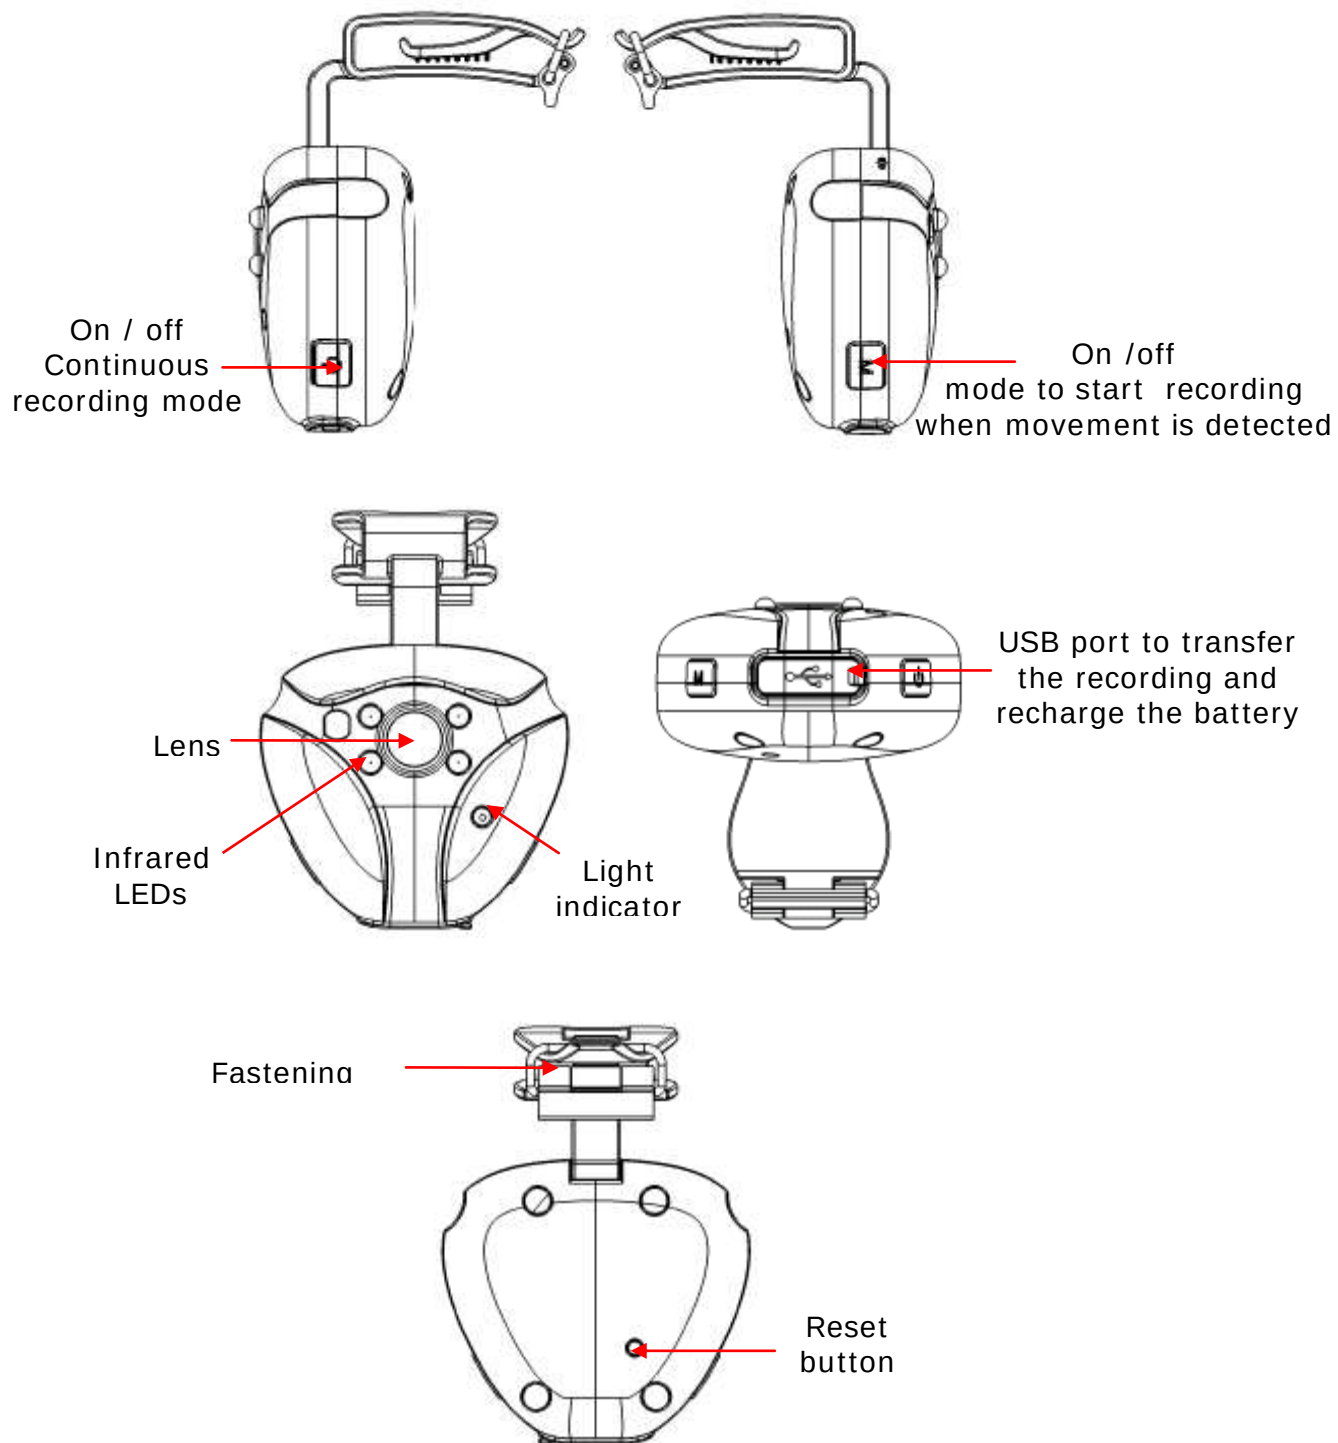

- **First use**

Before the first use, think of removing the plastic protection of the video cam lens.



It is necessary to fully charge the battery of your video cam before first use (duration of the 1st charge: 8 hours).

- **Charge of the battery**

To charge your product, **the video cam must be necessarily turned off.**

To charge your product, proceed in the following way:

- Remove the protection tab located at the bottom of the video cam.
- Plug the line cord to the receptacle at the bottom of the video cam.
- Then plug the line cord of the computer.
- **When the battery is charging, the indicator light turns red** (the charge of the product takes approximately 2,5 hours).
- Once the battery is fully charged, the red indicator light goes out to indicate that your product is completely recharged.
- Disconnect the video cam from the line cord.
- Disconnect the line cord from the computer.
- Put the protection tab back in place making sure it is positioned correctly then press strongly to ensure it is engaged.

- **Fitting the video cam**

The fastening clip has been specially designed for collars from 3/8 to 1.2 inch (from 1 to 3cm wide).

To attach the video cam to your pet collar, slide the collar through the tab of the fastening clip and make sure that the video cam is securely in place.

The collar should always be fitted so it is comfortable but not too loose. The rule of thumb is that there should be enough room to fit two fingers between your pet's neck and the collar.



After having fitted the collar to your pet's neck, make sure that the video cam is pointed in the right direction.

Pet owners are advised to observe the usual precautions associated with the use of a collar:

- Pets be fitted with a safety or breakaway-type collar to prevent collar injury.
- Metal and other rigid-type collars should never be used.
- Remember to check your pet's collar regularly to ensure it fits; it will need adjusting as your pet grows.

Adult supervision is recommended when the video cam is used.

- **Recording continuously**

To start recording, hold this button in for 3 seconds: . The indicator light will flash blue: the video cam is recording.

To stop the recording/turn the video cam off, hold  in for 3 seconds.

- **Recording when movement is detected**

Selecting the mode to record when movement is detected will set the video cam to standby for 3 hours and can be used to only film the activities of your cat when moving.

To start recording in this mode, verify that your camera is correctly turned off, hold **M** in for 3 seconds. The indicator light will flash green: the video cam will only film when your pet moves.

To stop recording, hold **M** in for 3 seconds again.

- **Recording at night**

The infrared LEDs will light up automatically when little or no light is available, irrespective of the recording mode selected. The infrared LEDs can be used to see up to 2 meters in the dark.

- **Recording sessions**

Videos are divided into sessions of 30 min.



When the memory is full, the video cam turns itself off automatically. It is then necessary to delete all or any of the sessions to be able to free memory to record again.



If battery charge is low, the blue indicator light will flash rapidly.

- Battery autonomy in continuous recording mode during the day: over 2:30
- Battery autonomy in continuous recording mode at night: approx. 2 hours
- Battery autonomy for recording when movement is detected, during the day: up to 3:10
- Battery autonomy for recording when movement is detected + night vision: up to 2:10

The above periods are valid for optimal conditions and may vary with temperature, light and movement.

- **How to view/ delete/ download a video**

Connect the video cam (turned off) to your computer using the cable provided. Your computer should automatically recognize the video cam. You can view, delete or transfer the recordings using the media player of your choice.

IMPORTANT: In some instances, computers may not detect the video cam on the 1st try. In that case, disconnect the USB cable from your computer and repeat the steps.

- **Change date and time videos**

Following are operation steps for changing the date and time for videos.

1. Connect the video cam with computer or Laptop, then you can find a new added "Disk(X)" symbol in "my computer".
2. Open the directory of "Disk(X)", then create a new text document by right clicking > New > Text file. It is important that the file is created in the "Disk(X)" folder and not in the "Video" folder.
3. Rename the new text document to "setdate".
4. Open the new Text document input the local time according to the following set form. For example: 12:09:01, 03, Jan, 2012 must be set like this: 20120103120901
5. Now save the text document and unplug the USB cable. Then record a new video and reconnect the video cam to the computer or laptop. Check if the video displays the correct time, if not, please set time again.

- **Share your videos**

Share your favorite videos of your cat or your dog with thousands of people all over the world.



Image rights and privacy:

The online publishing of images and videos without the prior written consent of the people appearing in them and who can be identified is strictly prohibited. The publisher of the image or video takes full liability for any complaints that may incur.

- **Cautions for use**

- The video cam is showerproof, not waterproof. **Any damages caused by immersion will not be covered by the warranty.**
- Do not open or dismantle the video cam. **It will void the warranty.**
- Do not throw your video cam away with household trash (See § Disposing or recycling of your device at the end of its life).
- Keep the video cam out of reach of children. To use the video cam, an adult supervision is strongly recommended.
- We recommend you not to use your video cam below 0°C. The battery life will be reduced slightly in lower temperatures.

• **Troubleshooting**

Should your video cam stop working or develop an issue, first, read this user's guide. Then, **check the battery and that you are using the product correctly. Check the memory card is not full.**

In case of issues, proceed to "reset" the video cam by pressing the « Reset » button and holding it for 5 seconds (See diagrams § Description).

You can also **rapidly reformat** the video cam memory as follows. Connect the video cam to the computer. Go to the "workstation" or "computer" menu, right click on the "removable disk (X)" icon and select "format". Check the "quick formatting" box to start formatting.

• **Warranty**

EYENIMAL warranty the product against all production defects for 1 year after purchase. All postage and packing charges will be the purchaser's sole responsibility.

• **Warranty conditions**

1. The warranty will be effective only with a proof of purchase (invoice or sales receipt). The warranty is exclusive to the original purchaser.
2. This warranty does not cover the following:
 - changing the battery,
 - direct or indirect problems incurred when sending the product back to the distributor or to EYENIMAL,
 - damage to the product caused by:
 - negligence or incorrect use (ex: bites, breakage, cracking),
 - misuse from not following directions
 - repairs performed by unauthorized persons.
 - loss or theft.
3. If the product is found to be defective, EYENIMAL will either decide to repair or to replace it.
4. No claim may be made against EYENIMAL, particularly in relation to incorrect use or breakdown.
5. EYENIMAL reserves the right to modify the characteristics of its products with a view to making technical improvements or to complying with new regulations.
6. The information contained in this guide may be subject to amendment without prior notice.
7. Photos and drawings are not contractual.