

1



#305007 (Ford 302), #305009 (Ford 351) & #305016 (Pontiac) XFITM <u>Dual Sync Distributor</u>

Thank you for choosing FASTTM products; we are proud to be your manufacturer of choice. Please read this instruction sheet carefully before beginning installation, and also take a moment to review the included limited warranty information.

Installation Instructions:

Two ignition strategies to choose from:

- A. **One** degree reference angle
 - The simplest method to set up your XFITM distributor
 - Allows you to phase the distributor at TDC (top dead center) so you only need a TDC mark on your balancer
 - You can not activate the individual cylinder control feature when using the one degree reference angle.
- B. **50** degree reference angle
 - Most accurate method for timing control
 - Supports individual cylinder control
 - Requires a 50 degree mark on balancer

Warning! Before beginning installation, disconnect the negative cable from battery.

Wiring Instructions:

A. The 8 pin connector on the distributor harness will plug directly into the "Cam/Hall Effect" connector on the XFITM Main Harness.



B. The red wire coming from the distributor needs to be connected to a 12V ignition source. The wire labeled "12V HE" in the XFITMTM Main Harness is a convenient source for this. Remember to connect the opposite end of the "12V HE" wire to a 12V source that is hot with the key in the Run position and during cranking.

Wire Functions

- Red Wire: 12v +
- Yellow Wire:

- Brown Wire: Crank Signal
- Black Wire: Signal Ground

Distributor Cap

The #1 plug wire terminal is marked with a band. Be sure to connect the #1 plug wire to this terminal.

Cam and Crank LEDs: There are two red LED lights at the base of the module in the distributor. They are powered through the red wire. The cam LED illuminates once per revolution and the crank LED illuminates 8 times per revolution.



One degree reference angle installation instructions:

Warning! Make sure that the negative coil wire is disconnected from the ignition coil until you are ready to start the engine. Failure to disconnect the negative coil wire could result in electric shock and/or permanent damage to the distributor module not covered by the warranty.

- 1. Remove rotor to verify that module is mounted in the one degree position. If not, remove two module mounting screws, and shift the module to the one degree position, replace rotor.
- 2. Rotate engine to TDC on the compression stroke.
- 3. Disconnect the negative coil (coil trigger) wire.
- 4. Reconnect the negative battery cable.
- 5. Install distributor with the rotor pointing toward the rear of the engine.
- 6. With the red wire connected to 12V, the ignition key in the run position, and the "Cam/Hall Effect" plug connected, rotate the base of the distributor clockwise until the cam LED illuminates, then continue clockwise until the next crank signal (crank LED illuminates).
- 7. Move the base of the distributor back and forth until you find the leading edge of that crank signal, lock down the distributor and you're finished!

The distributor is now timed and phased properly for a one degree reference angle! Connect all spark plug and coil wires before cranking the engine!



One degree ignition strategy setup parameters:

- 8. Open C-Com XFITM software.
- 9. Establish communications with the XFITM ECU or select the GCT file you will be using.
- 10. Click on View, then System Configuration, then Operational Parameters.
- 11. Click on the button next to "GM Optispark Ignition".
- 12. In the box next to "Reference Angle" type "1"
- 13. You are now ready to run in Sequential mode.

CCom WP - XFI]
File View Communications	Logging Window Help					
1000					2000	
00 4 4	🕎 Global Setup Paramete	rs			· · · · ·	o°la
10000	Fuel Pump Prime (Sec)	4	Crank Ref. Angle (*BTDC)	1.00	14993	
0 0 0	Injector Opening Time (mS)	1.0	Inductive Delay (uSec)	40	0.00	0.6
	Injector Opening Retard (*)	0.00			5 20	0
2	Crank to Run Mode RPM	400	C IPU Ignition			
111 2000	Engine Revs to Run Mode	12	C Buick DIS Ignition		2000/1	
0 . 00	Fuel Cut-Off RPM >	6600	G GM HEI Ignition		0 0 000	0
No an	Fuel Cut-On RPM <	6300	G Ford TFI Ignition			O.C.
0 555 4			○ Ford EDIS Ignition		12833	10
0	Speed Density Mode		GM Optispark Ignition		0	Ú,
	C Alpha-N Mode					1
			Fan On Temperature (*F)	180		ll.
111 600	SEFI FI Mode Enable		Fan Off Temperature (*F)	160	ALL COMPANY	
00	G Bank-to-Bank FI Mode En	able				
0000			OK Apply	Cancel		
						-

Note: As with any distributor installation, use a high-quality timing light to verify ignition timing matches the timing advance commanded by the XFITM. If necessary, make slight adjustments with the distributor to correct this.

Note: Be sure to verify that the distributor gear you are using is compatible with your cam gear. You can purchase the revolutionary COMP Cams® composite distributor gears and bronze distributor gears from FASTTM

Bronze Gear – Part #431 Composite Gear – Part #35200

Fifty degree reference angle installation instructions:

Warning! Make sure that the negative coil wire is disconnected from the ignition coil until you are ready to start the engine. Failure to disconnect the negative coil wire could result in electric shock and/or permanent damage to the distributor module not covered by the warranty.

- 1. Remove rotor to verify that module is mounted in the 50 degree position, if not, remove two module mounting screws, and shift the module to the 50 degree position, replace rotor.
- 2. Rotate engine to 50 degrees BTDC on the compression stroke.
- 3. Disconnect the negative coil (coil trigger) wire.
- 4. Reconnect the negative battery cable.
- 5. Install distributor with the rotor pointing toward the rear of the engine.
- 6. With the red wire connected to 12V, the ignition key in the run position, and the "Cam/Hall Effect" plug connected, rotate the base of the distributor clockwise until the cam LED illuminates, then continue clockwise until the next crank signal (crank LED illuminates).
- 7. Move the base of the distributor back and forth until you find the leading edge of that crank signal, lock down the distributor and you're finished.

The distributor is now timed and phased properly for a fifty degree reference angle! Connect all spark plug and coil wires before cranking the engine!

Note: Formula for locating crankshaft angle: (Diameter*Pi)/360*(number of degrees you're looking to make the mark at). For example, if you're trying to find the 50 degree mark for a 6.820" in diameter balancer: (6.820*3.1416) = 21.425712 21.425712/360 = .0595158 .0595158*50 = 2.97579 That means the 50 degree mark is 2.976" BTDC.



Fifty degree ignition strategy setup parameters:

- 8. Open C-Com XFI[™] software.
- 9. Establish communications with the XFI[™] ECU, or select the GCT file you will be using.
- 10. Click on View, then System Configuration, then Operational Parameters.
- 11. Click on the button next to "IPU Ignition"
- 12. In the box next to "Reference Angle" type "50".
- 13. You are now ready to run in Sequential mode and take advantage of the individual cylinder control feature of the XFITM.

🕷 CCom WP - XFI					
File View Communications	: Logging Window Help				
000				TIN	0000
	🔛 Global Setup Parameters				
2000	Fuel Pump Prime (Sec)	4	Crank Ref. Angle (*BTDC)	50.00	19993
0 0 0	Injector Opening Time (mS)	1.0	Inductive Delay (uSec)	40	0 0 0 0
	Injector Opening Retard (*)	0.00			0000
2 - 2	Crank to Run Mode RPM	400	IPU Ignition	1	
1111 2000	Engine Revs to Run Mode	12	C Buick DIS Ignition		1000/////
	Fuel Cut-Off RPM >	6600	C GM HEI Ignition		2 A 000
10 201	Fuel Cut-On RPM <	6300	C Ford TFI Ignition		1000 m 10
0 200 4			G Ford EDIS Ignition		2024 6
9	Speed Density Mode		G GM Optispark Ignition		0 00 0000
	C Alpha-N Mode				
			Fan On Temperature (*F)	180	
M dec	SEFI FI Mode Enable		Fan Off Temperature (*F)	160	
00 40 40	🔘 Bank-to-Bank Fl Mode Env	able			
00000			OK Apply	Cancel	
🛃 start 🛛 🏦 ्य	C-PC II for Windo	- non-stock LS1	🛠 CCom WP - XFI		🤹 10:21 AM

Note: As with any distributor installation, use a high-quality timing light to verify ignition timing matches the timing advance commanded by the XFITM. If necessary, make slight adjustments with the distributor to correct this.

Note: Be sure to verify that the distributor gear you are using is compatible with your cam gear. You can purchase the revolutionary COMP Cams® composite distributor gears and bronze distributor gears from FASTTM.

Bronze Gear Part # 431 Composite Gear # 35200