



INFO

febi 22204



EN Dismantle/fit oil pump febi 22204

Dismantle

- Dismantle the baffle plate.
- Unscrew and remove screw -2-.
- Pull the chain wheel off the oil pump shaft.
- Unscrew and remove screws -1- and -3- and take off the oil pump.

Fitting

Fitting is carried out in reverse order, pay attention to the following in the process:

- Insert the adapter sleeves → position on top of the oil pump.
- The chain wheel can only be pushed onto the oil pump shaft in one position.
- Fit the sump pan → anchor point.

Component

- Chain wheel on oil pump shaft 22 Nm
- Oil pump on cylinder block 16 Nm