



GB Attention! The chain tensioner must be taken apart prior to fitting. To do this, press thrust bolt (4) with catch spring (3) out of chain tensioner housing (5) in direction of arrow.

Fitting: Screw chain tensioner housing (5) into engine block (tightening torque 15 Nm). Push thrust bolt (4) with catch spring (3) into assembled chain tensioner housing (5). Fit compression spring (2) and locking nut with new seal ring (1) (tightening torque 70 Nm).