

**GB Fitting instructions:**

Removal and fitting of the reset ring with steering angle sensor (febi no. 34702) must be carried out in the central position (wheels in the straight-ahead position). It should also be noted that the steering wheel remains in the central position! The reset ring is supplied in the central position and is secured with a pin (see illustration). The pin must be snapped off on the steering wheel hub after fitting, thereby releasing the spring. The pin should not be snapped off prior to fitting, otherwise the spring will already be so distorted beforehand that it may break away during operation.

