



**EN** Installation diagram  
for flexible disc

- 1 Direction of rotation
- 2 Forward section
- 3 a) If present, arrow must point towards flange (where direction of rotation is indicated)  
b) If no arrow present, no fitting position is stipulated
- 4 Overrun section
- 5 Gearsides flange or enginesides flange