



FEL-PRO INSTALLATION TIPS

ROTATING SHAFT SEALS

IMPORTANT: Rubber seals are properly installed when its largest raised sealing lip is closest towards engine.

PRIOR TO INSTALLING THE ROTATING SHAFT AND/OR SEAL apply a thin coat of lubricant, such as grease, on the sealing lip and shaft.

IMPORTANT: Do not install any seal without break-in lubricant protection.