

Part # 2850

Pro-Charge Heavy Duty Electronic Refrigerant Scale

Operating Instructions

INSTRUCTIONS FOR PRO-CHARGE ELECTRONIC SCALE

- Remove scale from plastic case and place scale on a hard, flat, level surface.
- Press GREEN "ON" button on keypad located on handheld controller.

Unit will count down from 777777 to 000000 during self-diagnostic check.

NO WEIGHT should be on the scales during this process.

- Choose weight unit to be displayed: Ib oz.(pounds and ounces), kg (kilograms) or lb (pounds 0.000) by pressing BLUE "UNIT" button on keypad.
- Place cylinder on scale platform. Wait for numbers on display to become stable.
- Charge A/C system. (See charging A/C system below)
- To turn off, press RED "OFF" button on keypad. Unit will automatically turn off in 15 minutes if not used.

CHARGING THE AIR CONDITIONING SYSTEM

There are 2 ways to charge an A/C system with the Pro-Charge Electronic Scale.

Charging Using the "ZERO (TARE)" Button:

- Place cylinder on scale platform. Wait for numbers on display to become stable.
- Press "ZERO (TARE)" button on keypad located on hand held controller. This will zero out the display.
- As the system is being charged and refrigerant is being removed from the cylinder, the numbers on the display will show how much refrigerant has been charged.

EXAMPLE: -3.25 lbs. = 3.25 lbs of refrigerant used

Charging Not Using the "ZERO (TARE)" Button:

- Place cylinder on scale platform. Wait for numbers on display to become stable.
- Subtract the weight of refrigerant needed for the charge from the weight of the refrigerant cylinder on the scale.
- 3. Begin charging. Stop charging when the lower number is displayed. The system is now charged to the amount desired.

EXAMPLE: A. The weight of the refrigerant cylinder is 25.0 lbs (shown on the scale display)

- B. The amount of refrigerant needed for the vehicle is 3.75 lb.
- C. Subtract 3.75 lb from 25.0 lb = 21.25 lb.
- D. Start the charging process. Stop when the scale display reads 21.25 lb.

