



FLOWMASTER® HEADER FLANGE KIT


STEP 1.

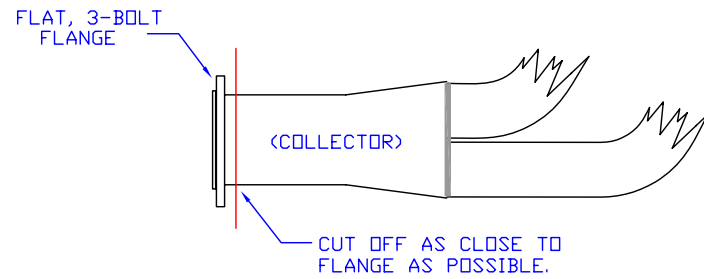


STEP 2.

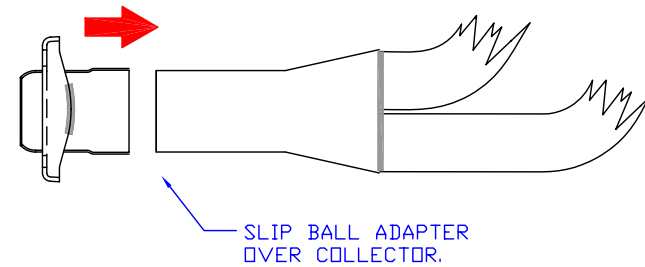

STEP 3.

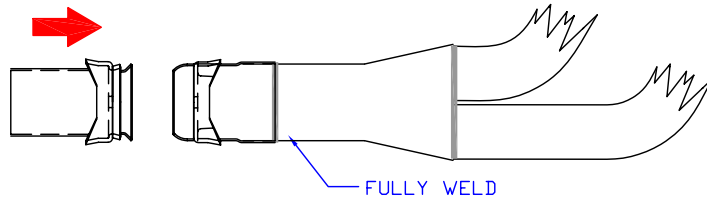

STEP 4.

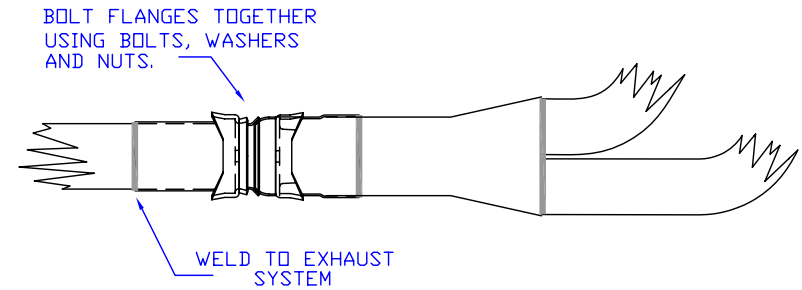

PACKING LIST

15922	15923	15924	15925	15930
3 1/2" COLL. X 2 1/2" SYSTEM	3 1/2" COLL. X 3" SYSTEM	3" COLL. X 2 1/4" SYSTEM	3" COLL. X 2 1/2" SYSTEM	3" COLL. X 3" SYSTEM
(2) 377TB- BALL ADAPTER (2) TB378- FLARE ADAPTER (2) SF001- FLANGE (1) PK357- HDWR. KIT (4) 3/8-NC X 2 1/4" HEX BOLTS (4) 3/8-NC HEX NUTS (4) 3/8 SPLIT LOCK WASHERS (4) 3/8 FLAT WASHERS	(2) 377TB- BALL ADAPTER (2) TB379- FLARE ADAPTER (1) PK357- HDWR. KIT (4) 3/8-NC X 2 1/4" HEX BOLTS (4) 3/8-NC HEX NUTS (4) 3/8 SPLIT LOCK WASHERS (4) 3/8 FLAT WASHERS	(2) 374TB- BALL ADAPTER (2) TB375- FLARE ADAPTER (2) SF003- FLANGE (1) PK357- HDWR. KIT (4) 3/8-NC X 2 1/4" HEX BOLTS (4) 3/8-NC HEX NUTS (4) 3/8 SPLIT LOCK WASHERS (4) 3/8 FLAT WASHERS	(2) 374TB- BALL ADAPTER (2) TB376- FLARE ADAPTER (1) PK357- HDWR. KIT (4) 3/8-NC X 2 1/4" HEX BOLTS (4) 3/8-NC HEX NUTS (4) 3/8 SPLIT LOCK WASHERS (4) 3/8 FLAT WASHERS	(2) 438TB- BALL ADAPTER (2) 439TB- FLARE ADAPTER (1) PK357- HDWR. KIT (4) 3/8-NC X 2 1/4" HEX BOLTS (4) 3/8-NC HEX NUTS (4) 3/8 SPLIT LOCK WASHERS (4) 3/8 FLAT WASHERS