

2 KEY PROGRAMMING - REGULAR & THAR-MAZ1 INSTALLATION

ADDENDUM - SUGGESTED WIRING CONFIGURATION



ONLY COMPATIBLE WITH AUTOMATIC TRANSMISSION VEHICLES.



Vehicle functions supported in this diagram (functional if equipped)

VEHICLE	YEARS	Immobilizer bypass	T-Harness	Lock	Unlock	Arm	Disarm	Parking Lights	Tachometer	Door Status	Hood Status protection remote start	Trunk Status	Hand-Brake Status	Foot-Brake Status	OEM Remote monitoring
<b>MAZDA</b>															
CX5 Push-to-Start	2021	•	•	•	•	•	•	•	•	•	•	•	•	•	•

FIRMWARE VERSION

85.[09]

MINIMUM

To add the firmware version and the options, use the **FLASH LINK UPDATER** or **FLASH LINK MOBILE** tool, sold separately.

IF THE VEHICLE IS NOT EQUIPPED WITH FUNCTIONAL HOOD PIN:	A11	OFF	Hood trigger (Output Status).
--	-----	-----	-------------------------------

	Program bypass option:	UNIT OPTION	DESCRIPTION
		C1	OEM Remote status (Lock/Unlock) monitoring

NOTES

**THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.**

**MANDATORY INSTALL**

\*HOOD PIN



**HOOD STATUS:** THE HOOD PIN SWITCH MUST BE INSTALLED IF THE VEHICLE CAN BE REMOTE STARTED WITH THE HOOD OPEN, SET FUNCTION **A11** TO OFF.

A11	OFF
-----	-----


**Notice:** the installation of safety elements are mandatory. The hood pin is an essential security element and must be installed.

THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.


DESCRIPTION

		Parts required (Not included)		PAGE
<b>WIRE TO WIRE DIAGRAM</b>				
<b>WARNING</b>				Page 3
	AUTOMATIC TRANSMISSION	1x 10 AMP Fuse 1x 1 Amp Diode	1x Fusible 10 AMP 1x Diode 1 Amp	Page 4
<b>END OF WARNING</b>				Page 8
<b>THARNNESS DIAGRAM</b>				
<b>WARNING</b>				Page 5-6
THARNNESS THAR-MAZ1	AUTOMATIC TRANSMISSION	1x THAR-MAZ1	1x THAR-MAZ1	Page 7
<b>END OF WARNING</b>				Page 8


① Under steering column, START-STOP unit.

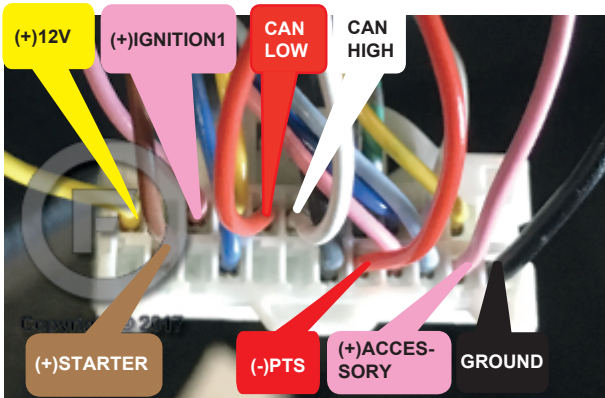

② Under steering column, START-STOP unit.

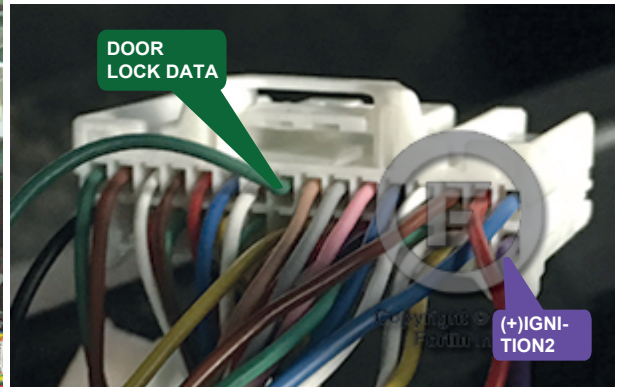

③ At parking lights switch

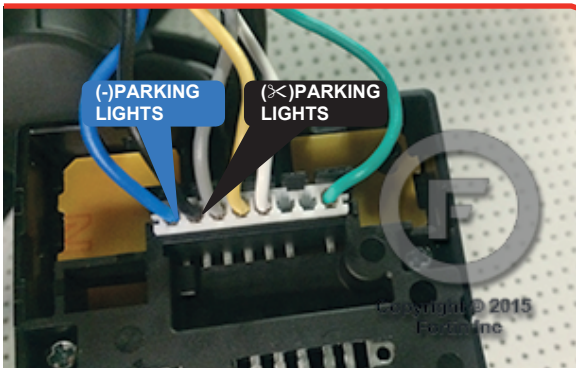




Before disconnecting a module, a computer or a control unit from a vehicle: Always disconnect the negative terminal from the vehicle's battery.


# ATTENTION

1

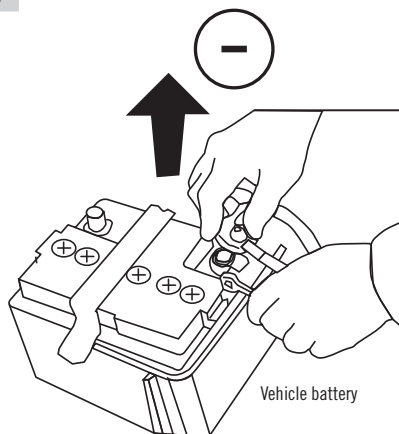


Disconnect the (-) terminal of the battery.

2

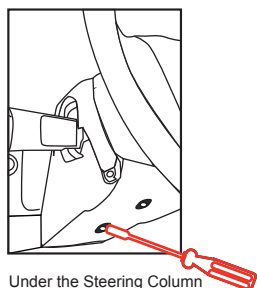


Under the Steering Column

1 Unscrew.

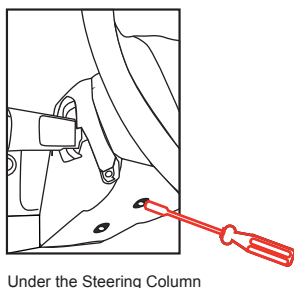


Under the Steering Column

2 Unscrew

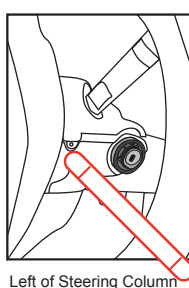


Left of Steering Column

3 Onclip

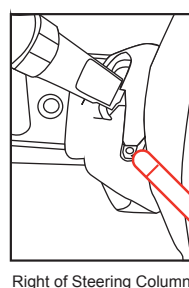

Right of Steering Column

4 Onclip

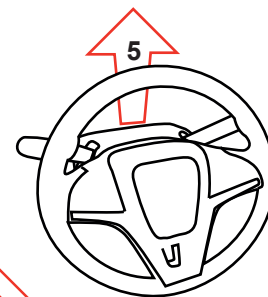


5 Gently pull up the cover of the steering column.

3

Make the following connections.

CONTINUED NEXT PAGE

**AUTOMATIC TRANSMISSION WIRING CONNECTION**

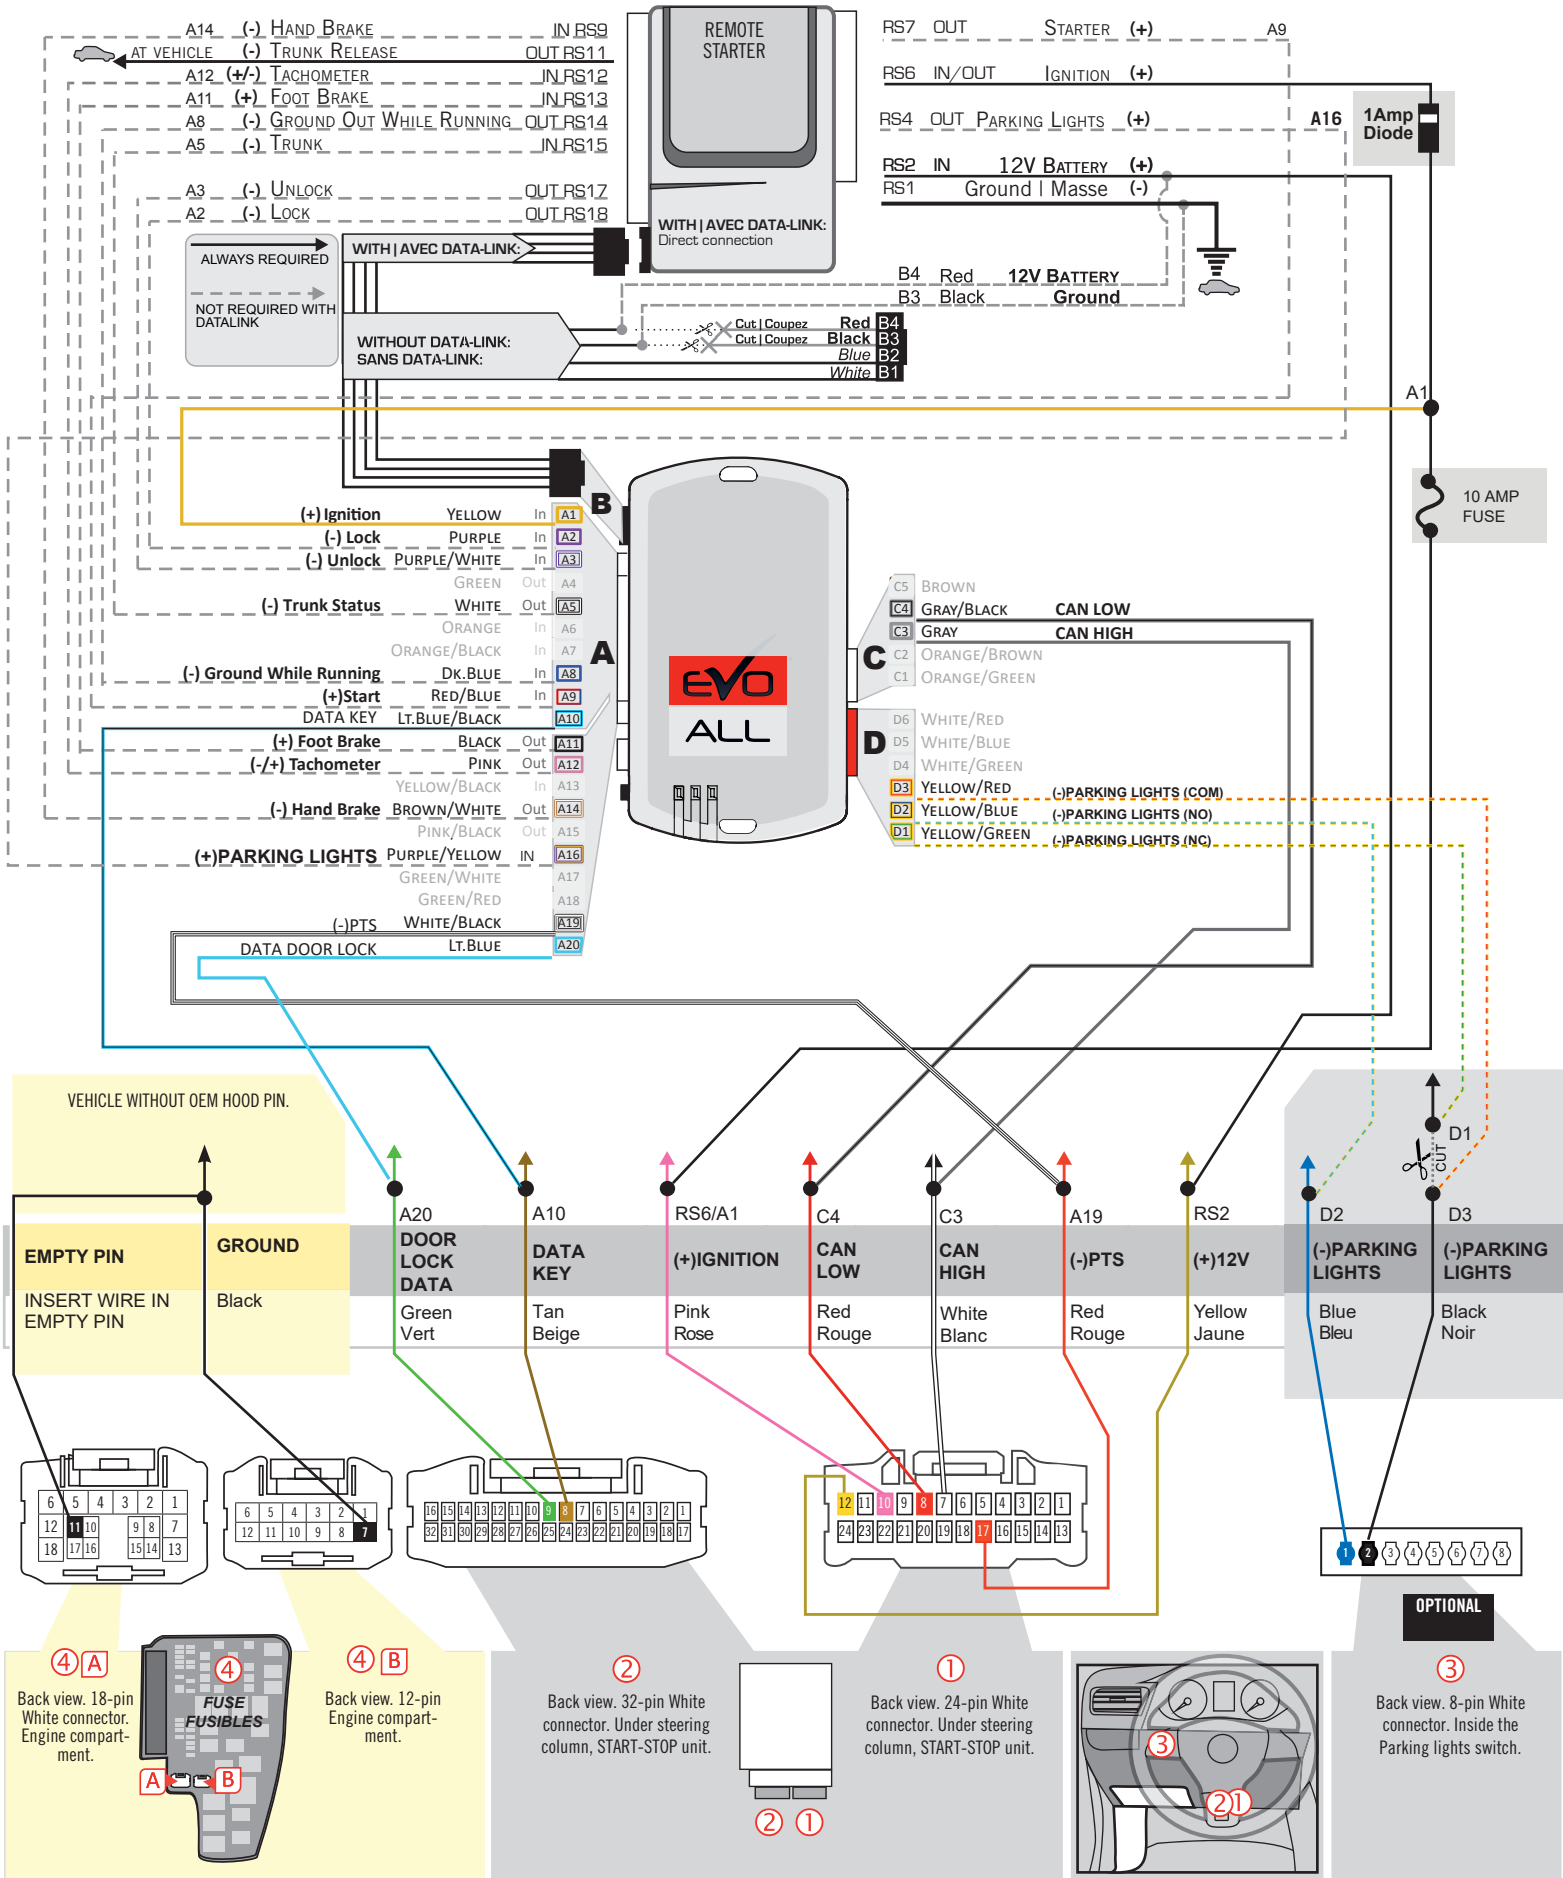




Before disconnecting a module, a computer or a control unit from a vehicle: Always disconnect the negative terminal from the vehicle's battery.


# ATTENTION

1

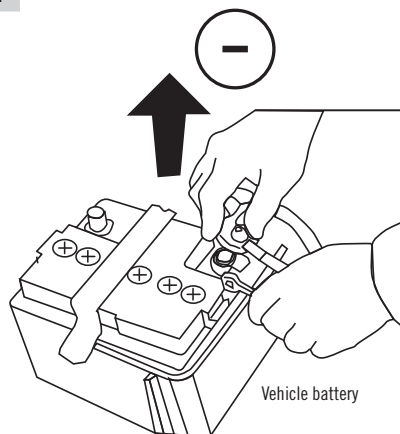


Disconnect the (-) terminal of the battery.

2

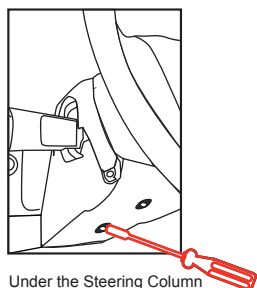


Under the Steering Column

1 Unscrew.

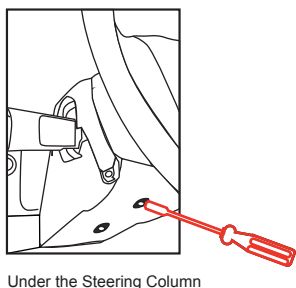


Under the Steering Column

2 Unscrew

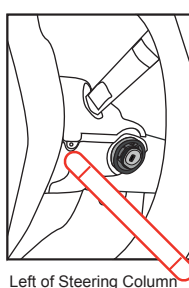


Left of Steering Column

3 Onclip

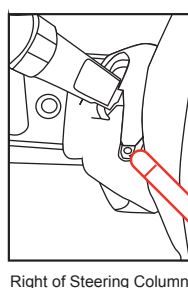

Right of Steering Column

4 Onclip

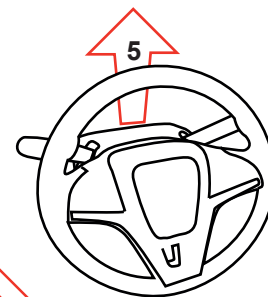


5 Gently pull up the cover of the steering column.

3


Make the following connections.

CONTINUED NEXT PAGE

4

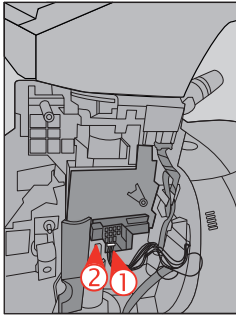

Under steering column, START-STOP unit.

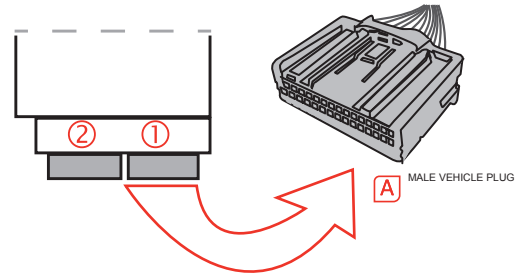


**Disconnect the connector**

**A**

5


Under steering column, START-STOP unit.

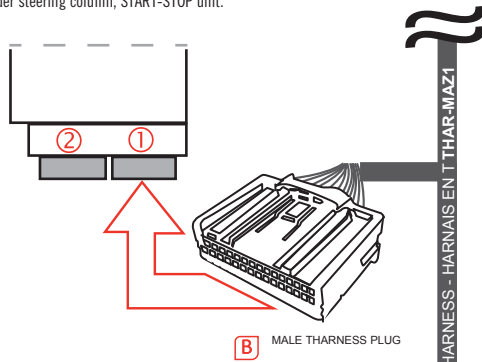

**Connect the connector**

**B**

6

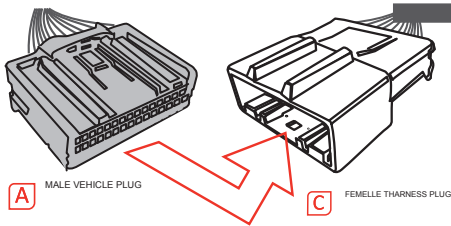

**Connect the connector**

into connector



**A**


**C**

7

**Make other required connections.**

THAR-MAZ1 | WIRING CONNECTION

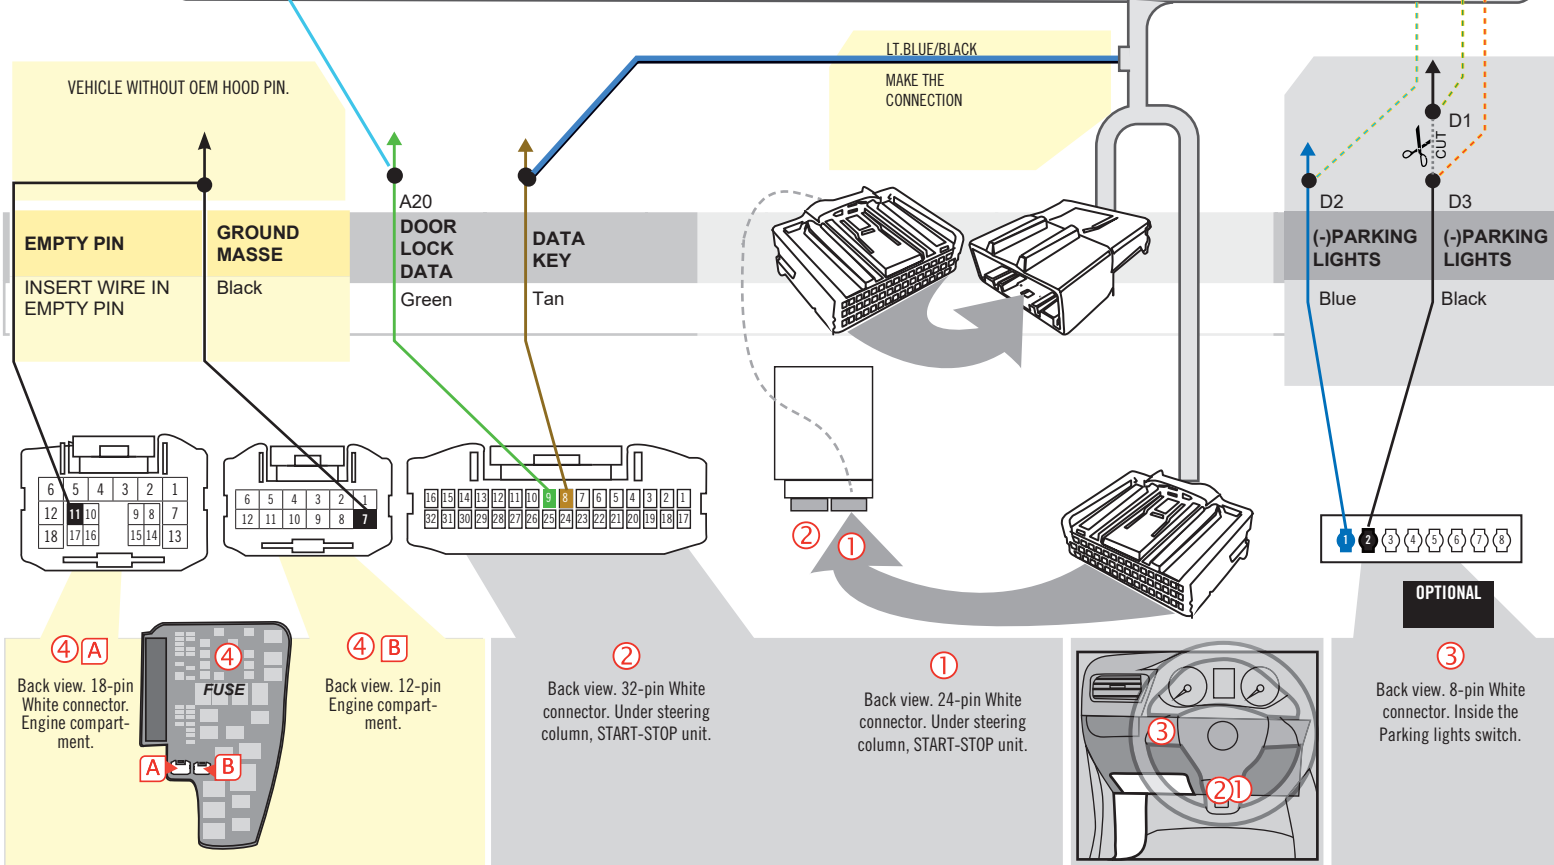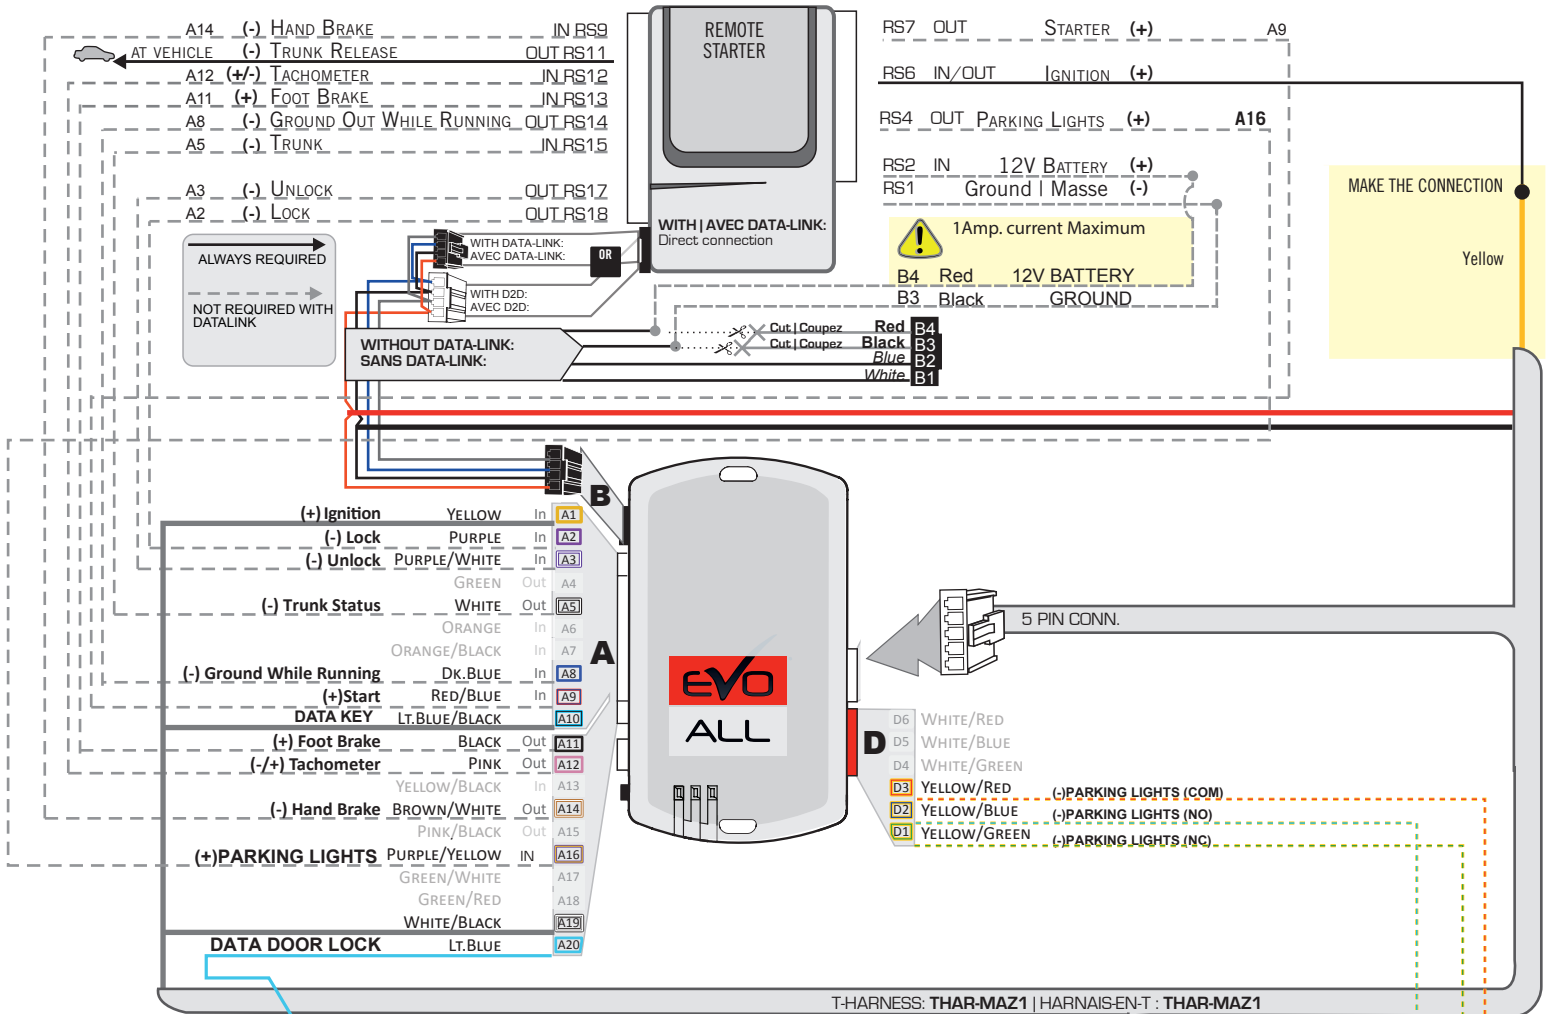

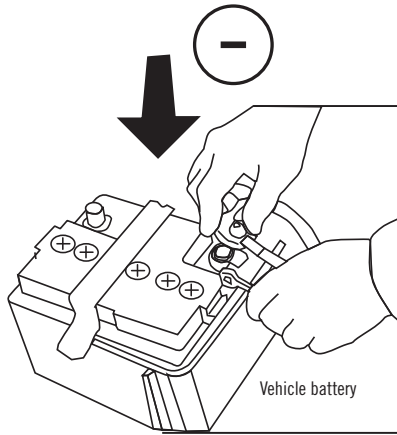

**Reconnect** the (-) terminal of the battery.

CONTINUED NEXT PAGE



# x3 max.

# x3 max.

**Do not program more than 3 modules on the same vehicle.**


If more than 3 modules are programmed to a vehicle, it is possible that the remote car starter will never be functional on this vehicle.

If all programming steps were successful and the vehicle cannot be remote started :

- Double check all connections using the installation diagram above as a reference.


If no connection errors can be found then please contact technical support assistance.

**DO NOT REPROGRAM ANOTHER MODULE UNLESS INSTRUCTED TO DO SO BY TECHNICAL SUPPORT.**

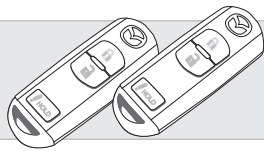

**Make sure** to have two valide vehicle key.


1

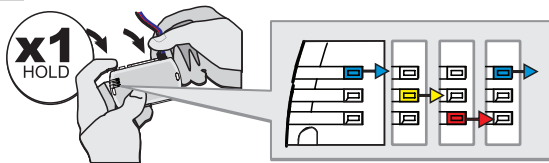

**Press and hold** the programming button:  
**Connect** the 4-PIN Data-link harness (Black connector).


↳ The Blue, Red, Yellow and Blue & Red LEDs will alternatively illuminate.

2

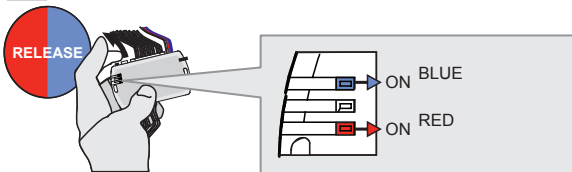


**Release** the programming button when the Blue & Red LEDs are ON.

 *If the LED are not solid BLUE and RED disconnect the 4-PIN Data-link harness (Black connector) and go back to step1.*




3

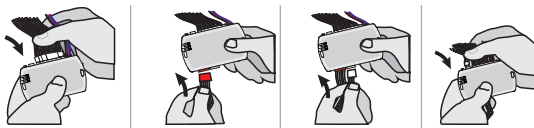

**Connect** the required remaining harnesses.

4

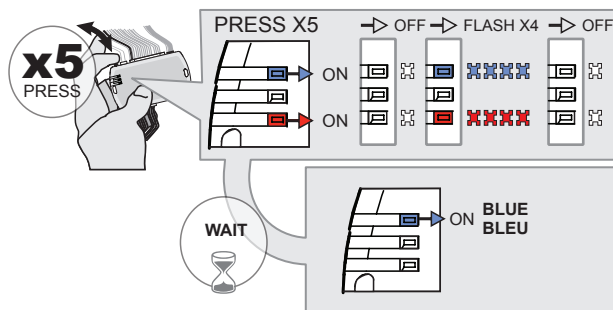

**Press and release** the programming button five times (5x).


↳ The Red & Blue LEDs will alternate between 4 flashes and a pause.

↳ **Wait** for the Blue LED to turn ON.

KEY BYPASS PROGRAMMING PROCEDURE 2/5




5

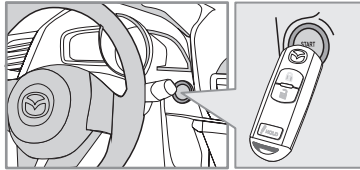


Place the 1st OEM remote close to the front of the START/STOP button exactly as shown.

6

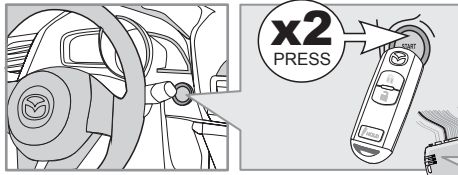


Press the START/STOP button twice to activate the vehicle's Ignition.

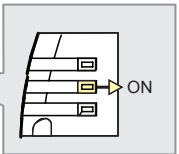


↳ The Yellow LED will turn ON.

7

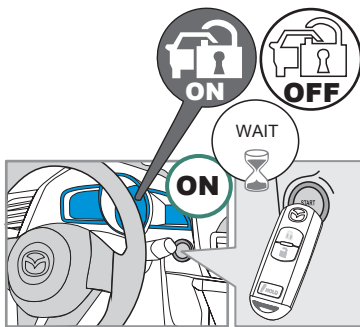

 
If the Blue LED is ON solid disconnect the 4-PIN Data-link harness (Black connector) and go back to step 1.




Wait for the security indicator to turn OFF (around 3 seconds).

8

**IMMEDIATELY**

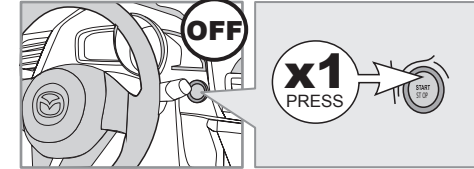


Press the START/STOP button once to deactivate the vehicle's Ignition.

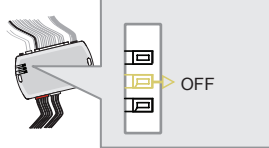

↳ The Yellow Led will turn OFF.



9

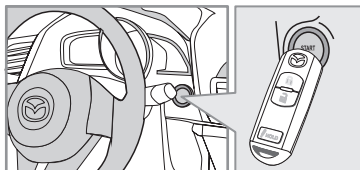


Place the 2nd OEM remote close to the front of the START/STOP button exactly as shown.

10




Press the START/STOP button twice to activate the vehicle's Ignition.

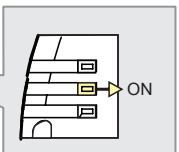


↳ The Yellow LED will turn ON.

KEY BYPASS PROGRAMMING PROCEDURE 3/6




**KEY#2**

**11**

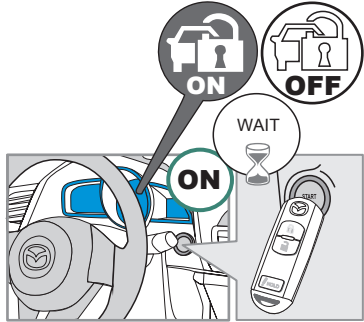


Wait for the security indicator to turn OFF (around 3 seconds).

**12**

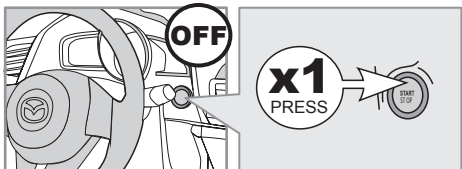


**IMMEDIATELY**

Press the START/STOP button once to deactivate the vehicle's Ignition.

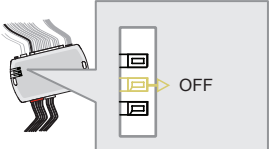


↳ The Yellow Led will turn OFF.


**13**

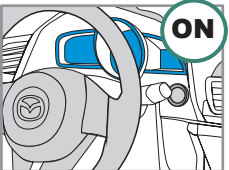

The vehicle's ignition will turn ON

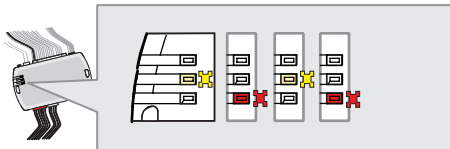



↳ The Yellow and Red LED's will alternatively illuminate.

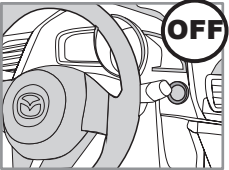

The vehicle's Ignition will turn OFF.

**14**

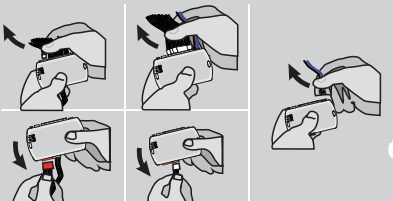


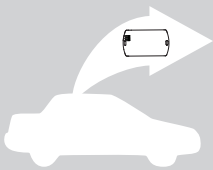


**Disconnect** all the connectors and after the Data-Link (4-pins) connector.

**KEY BYPASS PROGRAMMING PROCEDURE 4/6**

15

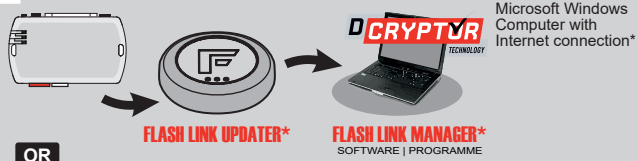


OR

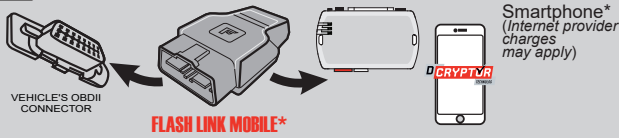

Use the tool:  
**FLASH LINK UPDATER** or  
**FLASH LINK MOBILE**  
to visit the DCryptor menu.

\*Parts required (not included)

16

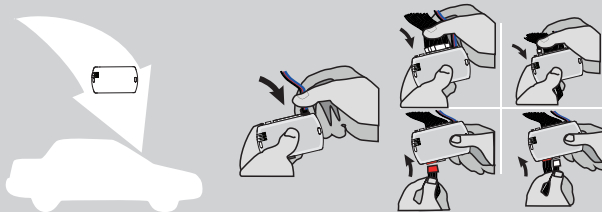


**AFTER DCRYPTOR PROGRAMMING COMPLETED**  
Go back to the vehicle and **reconnect** the 4-Pin (Data-Link) connector and after, all the remaining connector.

17



Repeat step 1 to 12.

18

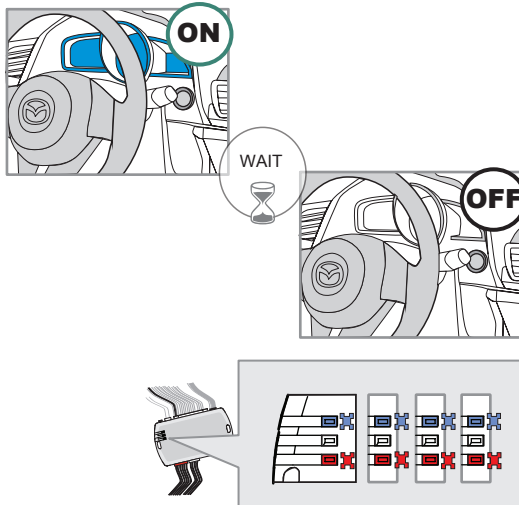


The vehicle's ignition will turn ON

The vehicle's Ignition will turn OFF.


↳ The Blue and Red LEDs will flash.

 19



Disconnect all Harness

20

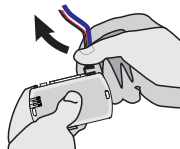


Next:

Disconnect the 4-PIN Data-link harness (Black connector).

CAN PROGRAMMING PROCEDURE


21

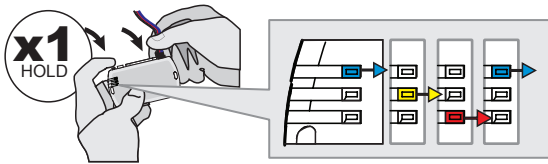

Press and hold the programming button: Connect the 4-PIN Data-link harness (Black connector).


↳ The Blue, Red, Yellow and Blue & Red LEDs will alternatively illuminate.

22

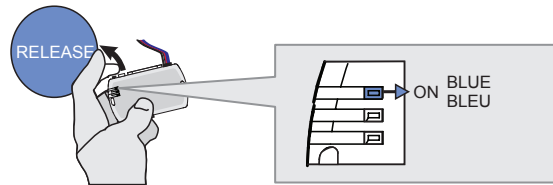


Release the programming button when the Blue LED is ON.

 If the Blue LED is not ON solid disconnect the 4-PIN Data-link harness (Black connector).



23

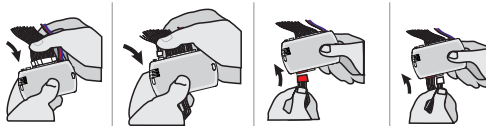


Connect the required remaining harnesses.

24




Press the START/STOP button twice to turn ON the vehicle's Ignition.

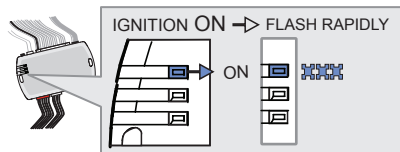


↳ The Blue LED will flash rapidly.

25

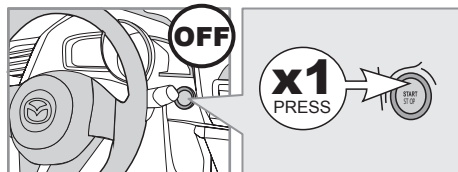

Press the START/STOP button once to turn OFF the vehicle's Ignition.

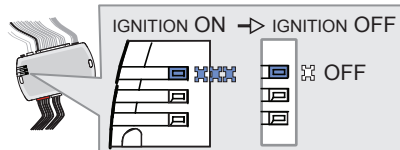


↳ The Blue LED will turn OFF.



The module is now programmed.

REMOTE STARTER FUNCTIONALITY |

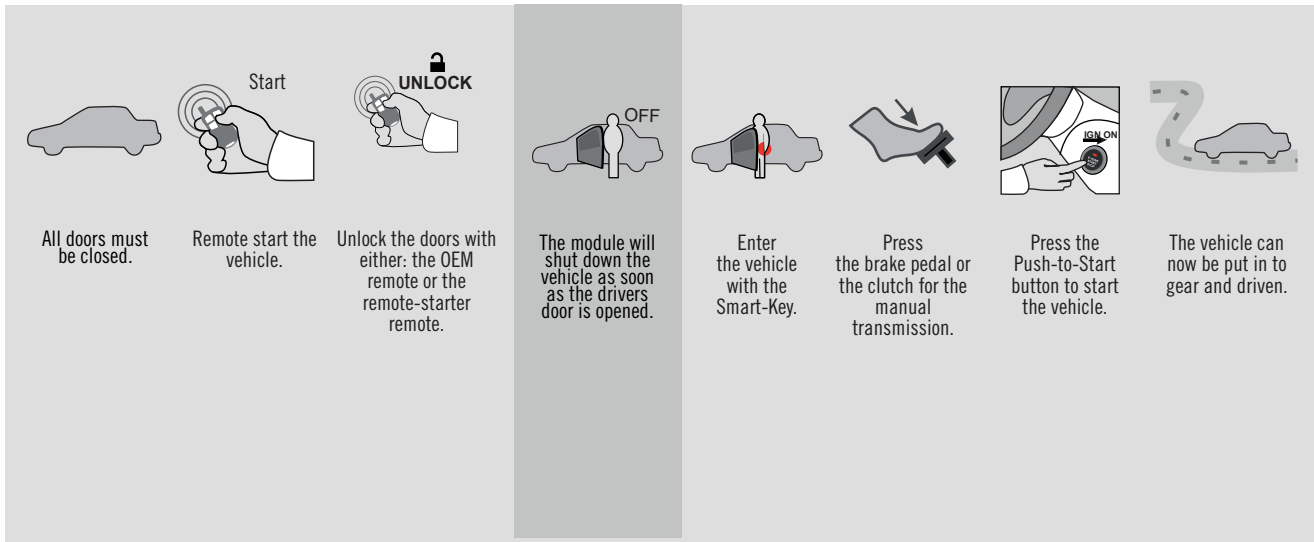

2 KEY PROGRAMMING - STANDALONE & THAR-MAZ1 INSTALLATION

ADDENDUM - SUGGESTED WIRING CONFIGURATION



ONLY COMPATIBLE WITH AUTOMATIC TRANSMISSION VEHICLES.



Vehicle functions supported in this diagram (functional if equipped)

VEHICLE	YEARS	Immobilizer bypass	T-Harness	Lock	Unlock	Arm	Disarm	Tachometer	Door Status	Hood Status protection remote start	Hand-Brake Status	Foot-Brake Status	OEM Remote monitoring
<b>MAZDA</b>													
CX5 <i>Push-to-Start</i>	2021	•	•	•	•	•	•	•	•	•	•	•	•

FIRMWARE VERSION

85.[09]

MINIMUM

To add the firmware version and the options, use the **FLASH LINK UPDATER** or **FLASH LINK MOBILE** tool, sold separately.

IF THE VEHICLE IS NOT EQUIPPED WITH FUNCTIONAL HOOD PIN:	A11	OFF	Hood trigger (Output Status).
<p>Program bypass option:</p>	C1	UNIT OPTION	DESCRIPTION
			OEM Remote status (Lock/Unlock) monitoring

**NOTES**

**THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.**

**MANDATORY INSTALL**

**\*HOOD PIN**

**HOOD STATUS:** THE HOOD PIN SWITCH MUST BE INSTALLED IF THE VEHICLE CAN BE REMOTE STARTED WITH THE HOOD OPEN, SET FUNCTION A11 TO OFF.

A11	OFF
-----	-----

**Notice:** the installation of safety elements are mandatory. The hood pin is an essential security element and must be installed.

THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.

**PARTS REQUIRED (NOT INCLUDED)**


1x **FLASH LINK UPDATER, FLASH LINK MANAGER** SOFTWARE  
 1x Microsoft Windows Computer with Internet connection

OR


1x **FLASH LINK MOBILE, FLASH LINK MOBILE APP**  
 1x Smartphone *Android* or *iOS* with Internet connection (*provider charges may apply*).  
 1x

**MANDATORY**

HOOD PIN



REMOTE START SAFETY OVERRIDE SWITCH

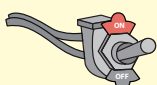
 





VALET SWITCH





Part #: RSPB available, Sold separately.

**Notice:** the installation of safety elements are mandatory. The hood pin and the valet switch are essential security elements and must be installed.

**STAND ALONE CONFIGURATION**

	<p><b>Program bypass option</b>  <b>OEM Remote Stand Alone Remote Starter:</b></p>	UNIT OPTION	DESCRIPTION
		<p>OR <b>D1.10</b>   <b>D1.1</b> </p>	<p><b>By default, LOCK, LOCK, LOCK</b>                  Par défaut, VERROUILLE, VERROUILLE, VERROUILLE</p>
	<p><b>Program bypass option with oem remote:</b></p>	UNIT OPTION	DESCRIPTION
		<p><b>C1</b></p>	<p>OEM Remote Monitoring</p>
	<p><b>Program bypass option with RF KIT antenna:</b></p>	UNIT OPTION	DESCRIPTION
		<p><b>H1 to H6</b></p>	<p>Supported RF Kits and <b>select RF Kit</b></p>

**REMOTE STARTER FUNCTIONALITY**



**3X** 



All doors must be closed.      Press the OEM remote's Lock button 3x to remote-start (or remote-stop) the vehicle.      The vehicle will START.

**REMOTE STARTER DIAGNOSTICS**

MODULE RED LED	
x2 flash :	Brake ON
x3 flash :	No tach
x4 flash :	Ignition before start
x5 flash :	Hood Open
PARKING LIGHTS	
x4 flash:	FOB in car
x5 flash:	Hood open
x6 flash:	Brake ON
x7 flash:	Door open
x8 flash:	Bad Encryption/ key code

**REMOTE STARTER WARNING CARD**



**CUT THIS WARNING CARD AND STICK IT ON A VISIBLE PLACE:**  
 or use the package RSPB, Sold separately.

**WARNING | ATTENTION**

**REMOTE STARTER**


THE VEHICLE CAN BE STARTED BY EITHER: PRESSING THE LOCK BUTTON ON THE OEM REMOTE 3 TIMES CONSECUTIVELY OR BY A SMARTPHONE. **TURN ON** THE SAFETY SWITCH LOCATED UNDER THE DASHBOARD BEFORE WORKING ON THE VEHICLE.




DESCRIPTION

		Parts required (Not included)	PAGE
<b>WIRE TO WIRE DIAGRAM</b>			
<b>WARNING</b>			Page 4
	AUTOMATIC TRANSMISSION TRANSMISSION AUTOMATIQUE	1x 10 AMP Fuse 1x 1 Amp Diode	Page 5
<b>END OF WARNING</b>			Page 9
<b>THARNESS DIAGRAM</b>			
<b>WARNING</b>			Page 6-7
THARNESS THAR-MAZ1	AUTOMATIC TRANSMISSION TRANSMISSION AUTOMATIQUE	1x THAR-MAZ1	Page 8
<b>END OF WARNING</b>			Page 9


① Under steering column, START-STOP unit.

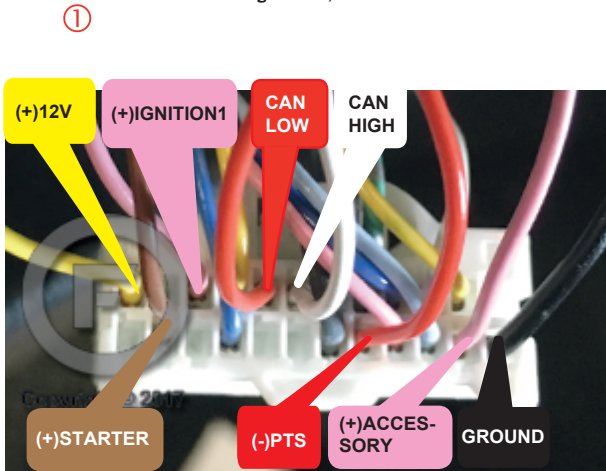

② Under steering column, START-STOP unit.

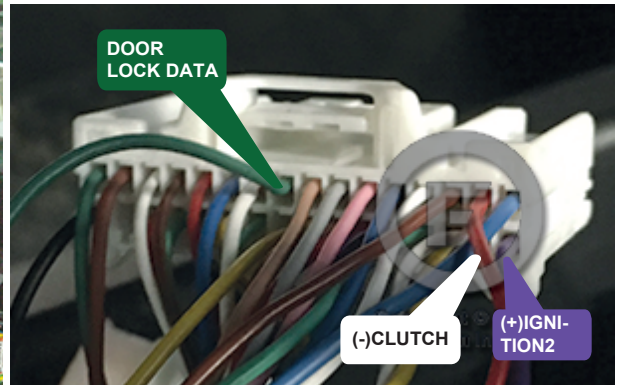

③ At parking lights switch

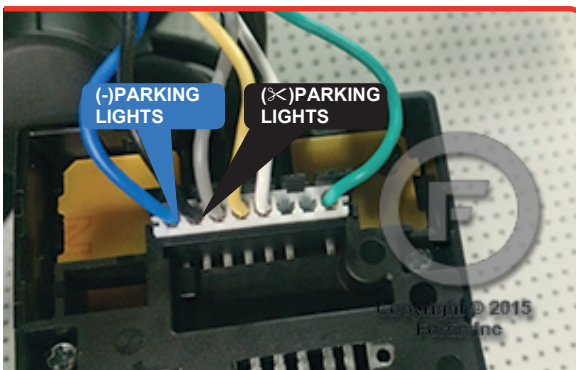




# ATTENTION

Before disconnecting a module, a computer or a control unit from a vehicle: Always disconnect the negative terminal from the vehicle's battery.


In these vehicles, the factory keyless entry module is sensitive to interference and may cease to operate if some precautions are not taken. Disconnect the (-) terminal of the battery prior to disconnecting the connectors at the smartkey module below the steering wheel to avoid damage to the smartkey entry module.

1

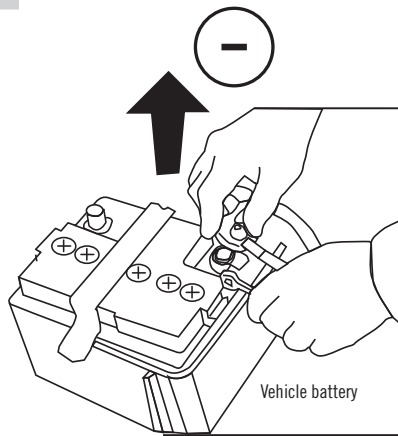


Disconnect the (-) terminal of the battery.

2

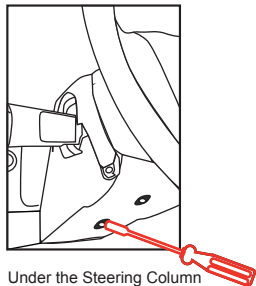


Under the Steering Column

1 Unscrew.

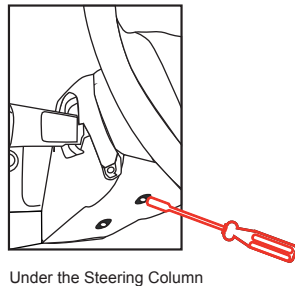


Under the Steering Column

2 Unscrew

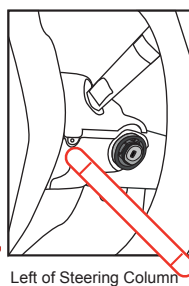


Left of Steering Column

3 Onclip

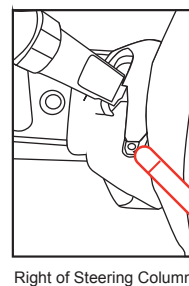

Right of Steering Column

4 Onclip

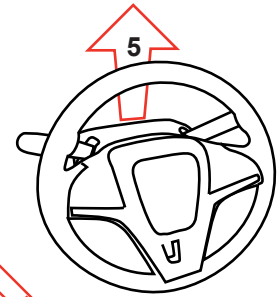






5 Gently pull up the cover of the steering column.

3


Make the following connections.

CONTINUED NEXT PAGE

**AUTOMATIC TRANSMISSION WIRING CONNECTION**

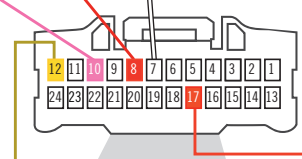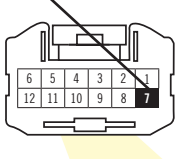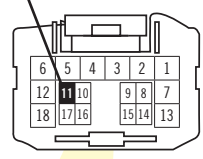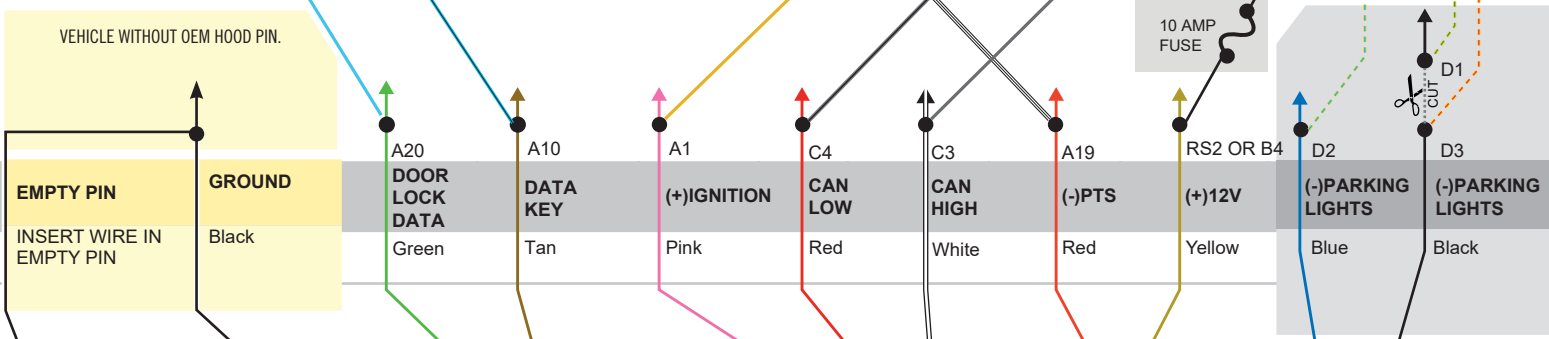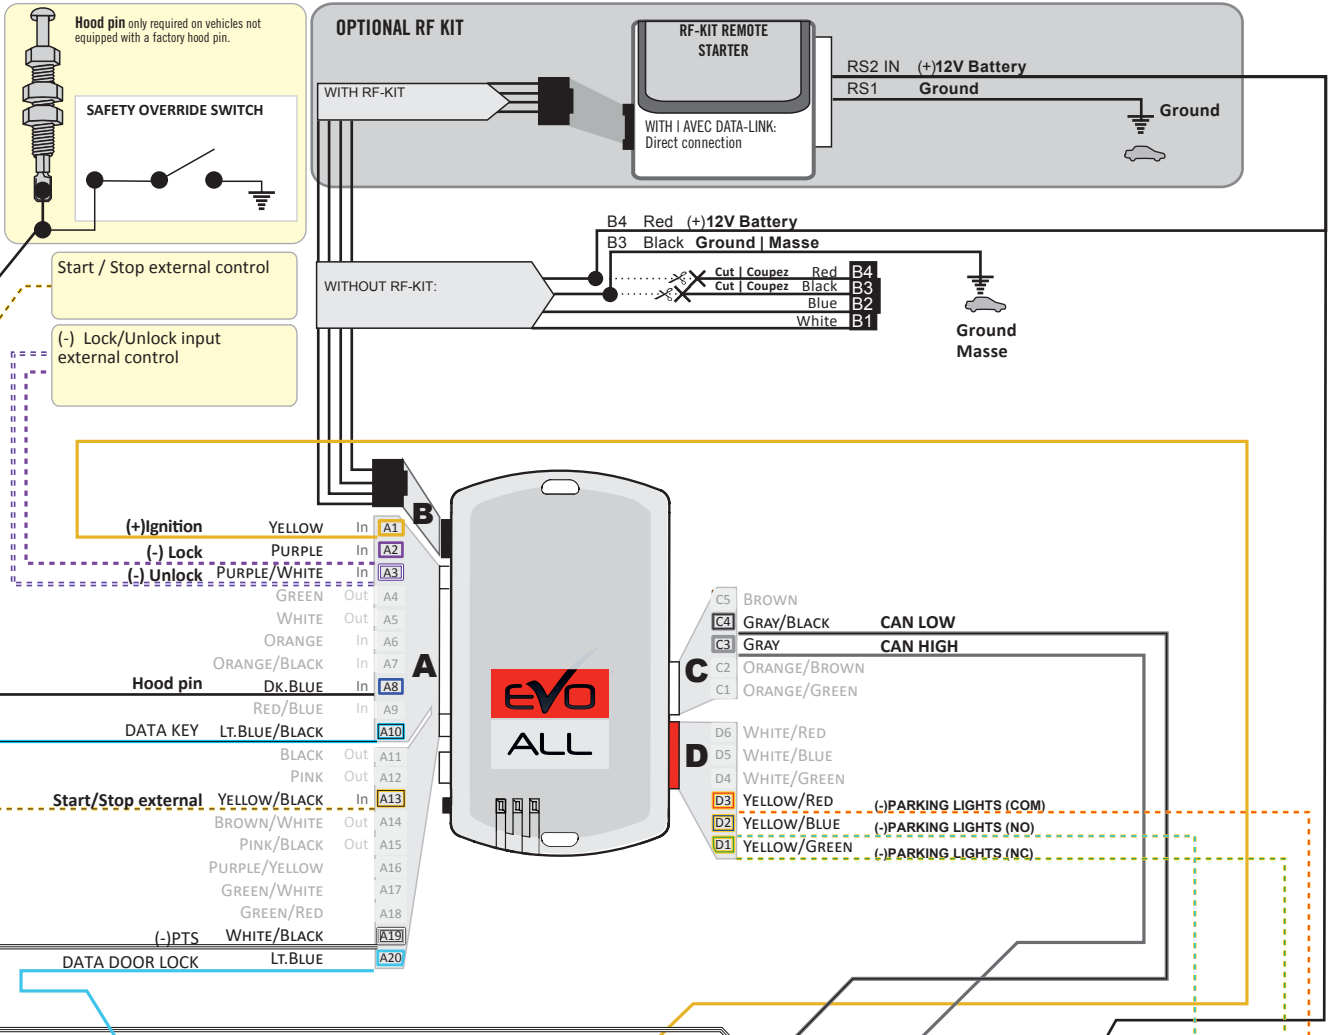


④ A Back view. 18-pin White connector. Engine compartment.

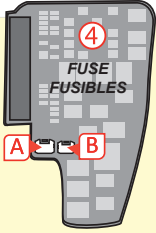


④ B Back view. 12-pin Engine compartment.

 ② Back view. 32-pin White connector. Under steering column, START-STOP unit.



① Back view. 24-pin White connector. Under steering column, START-STOP unit.

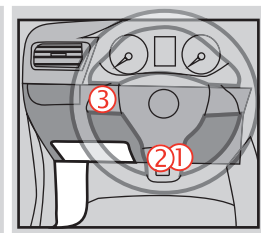

③ Back view. 8-pin White connector. Inside the Parking lights switch.

OPTIONAL




# ATTENTION

Before disconnecting a module, a computer or a control unit from a vehicle: Always disconnect the negative terminal from the vehicle's battery.


In these vehicles, the factory keyless entry module is sensitive to interference and may cease to operate if some precautions are not taken. Disconnect the (-) terminal of the battery prior to disconnecting the connectors at the smartkey module below the steering wheel to avoid damage to the smartkey entry module.

1

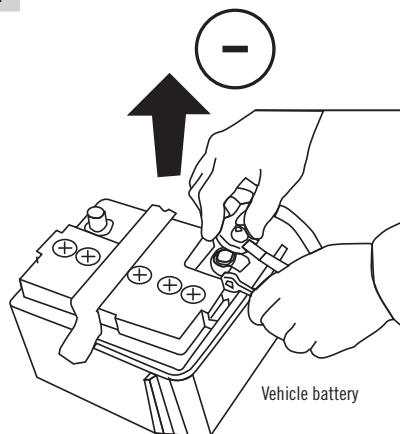


Disconnect the (-) terminal of the battery.

2

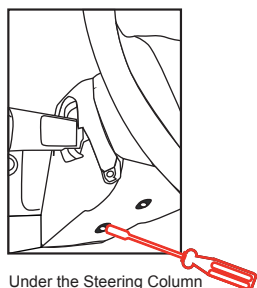


Under the Steering Column

1 Unscrew.

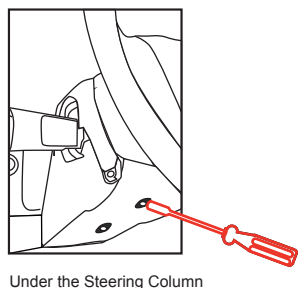


Under the Steering Column

2 Unscrew

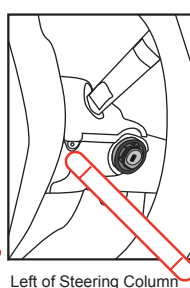


Left of Steering Column

3 Onclip

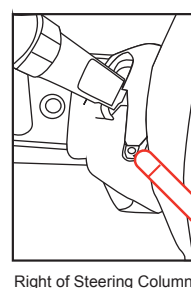

Right of Steering Column

4 Onclip

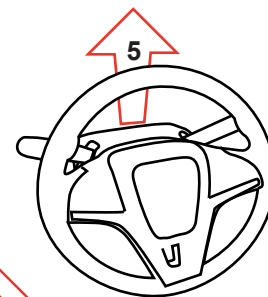


5 Gently pull up the cover of the steering column.

3


Make the following connections.

CONTINUED NEXT PAGE

4

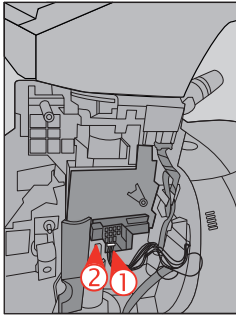

Under steering column, START-STOP unit.

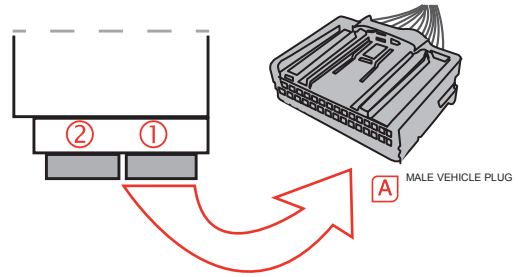


Disconnect the connector

A

5


Under steering column, START-STOP unit.

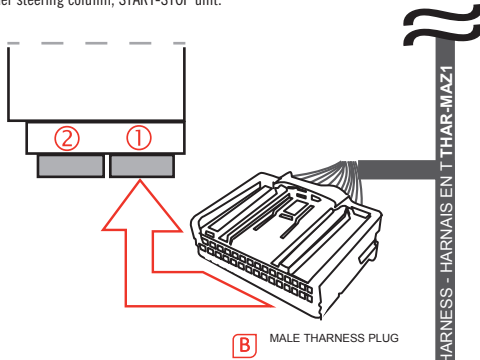

Connect the connector

B

6

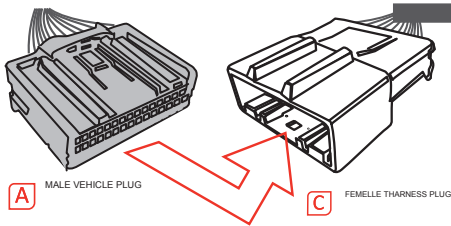

Connect the connector

A



into connector


C

7

Make other required connections.

THAR-MAZ1 | WIRING CONNECTION

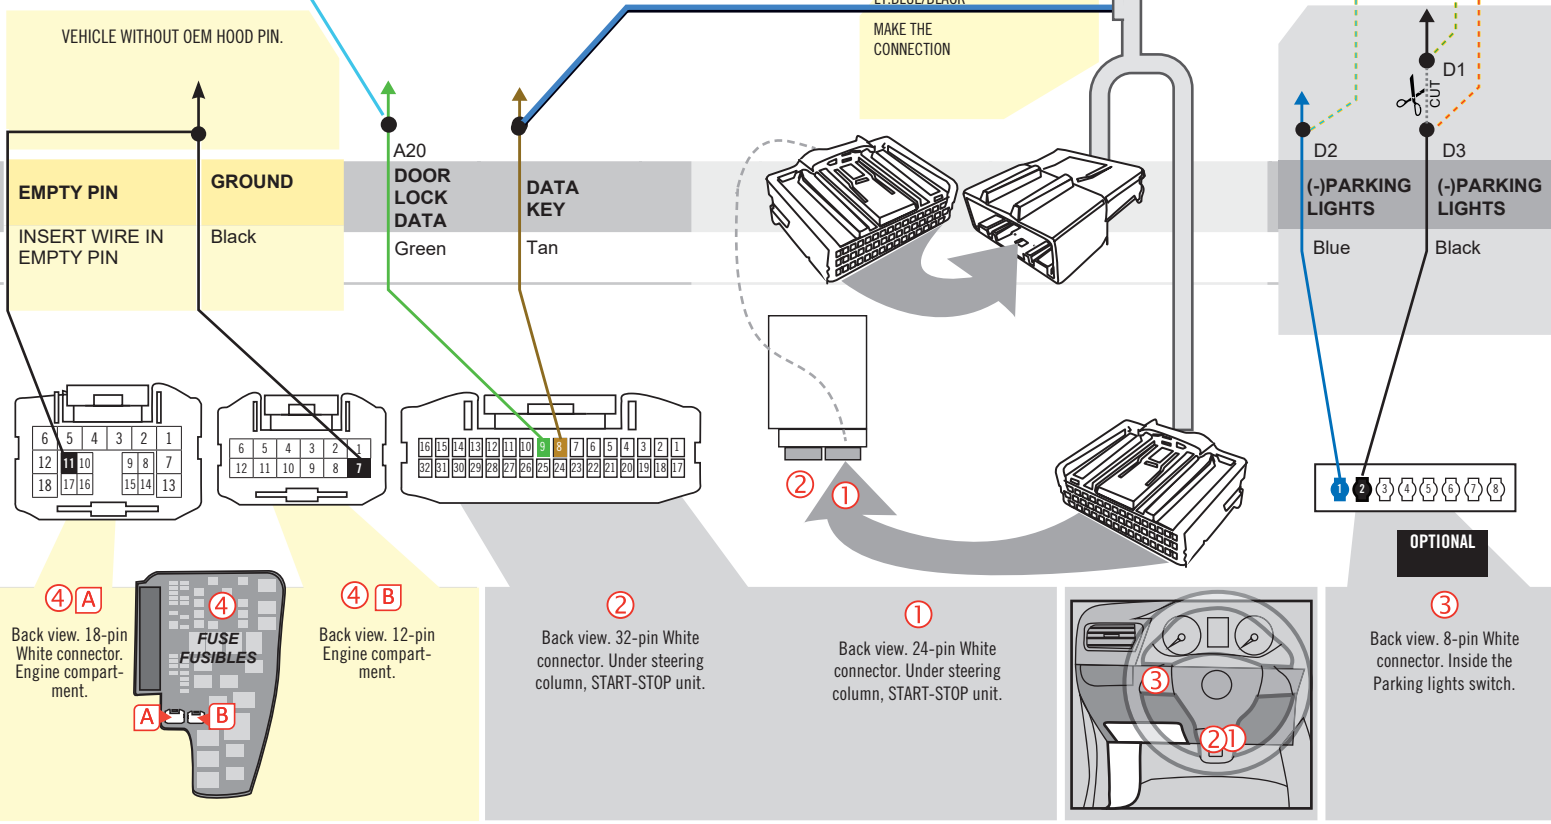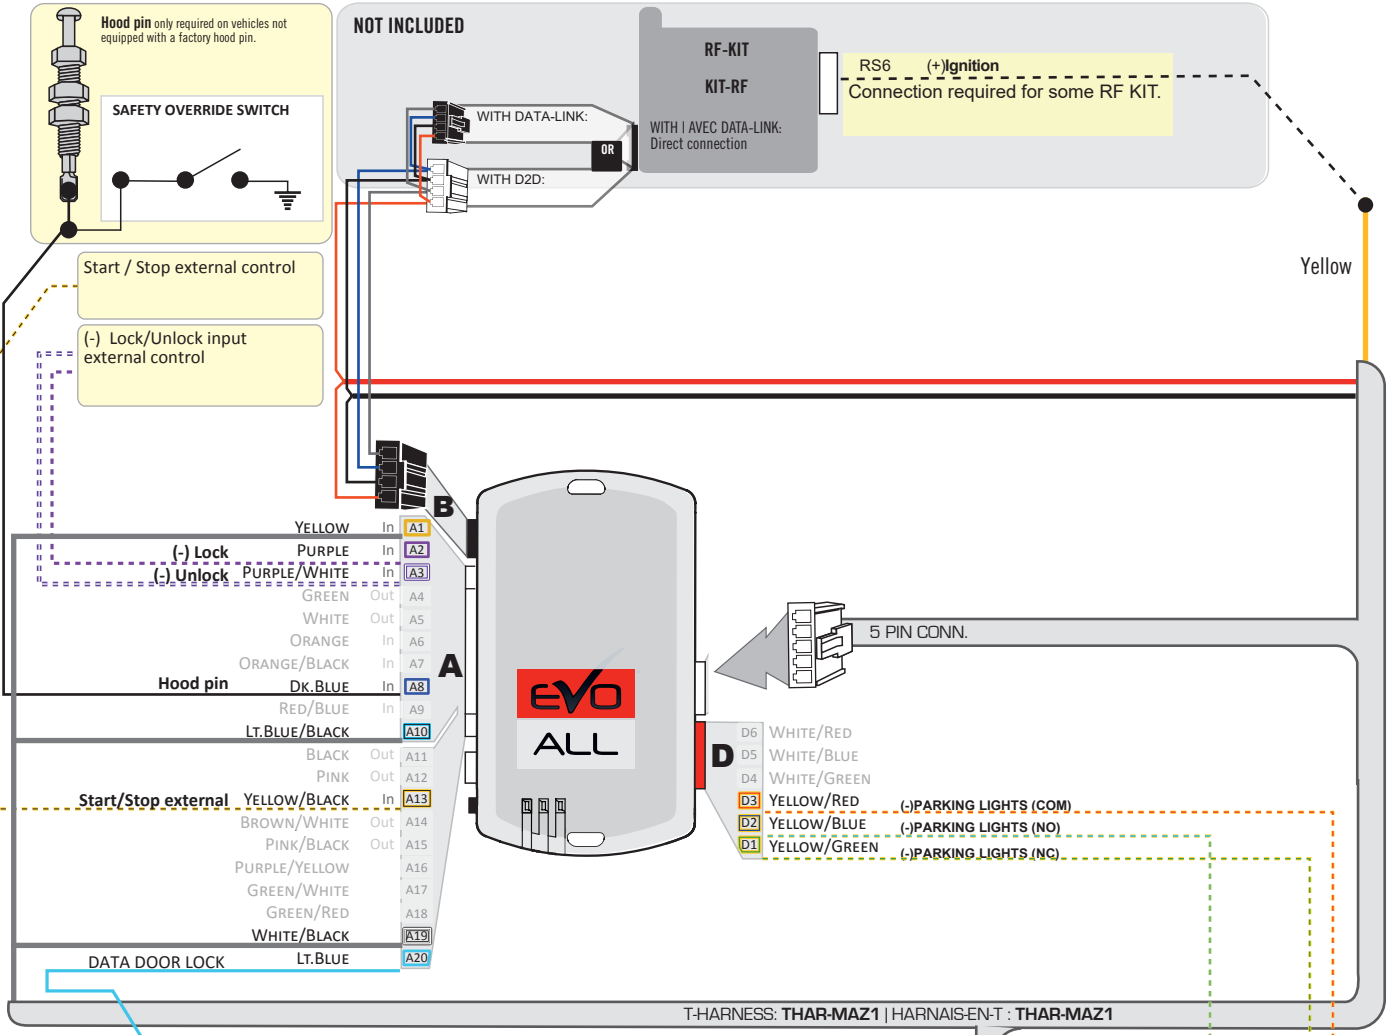

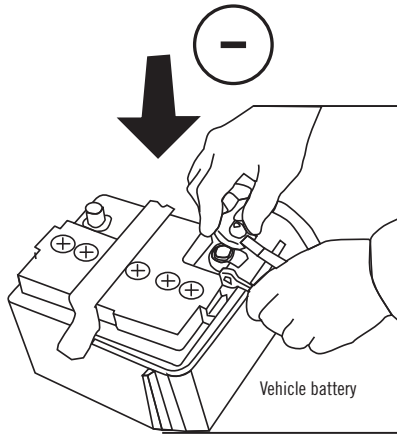

**Reconnect** the (-) terminal of the battery.

CONTINUED NEXT PAGE

# x3 max.

**Do not program more than 3 modules on the same vehicle.**


If more than 3 modules are programmed to a vehicle, it is possible that the remote car starter will never be functional on this vehicle.

If all programming steps were successful and the vehicle cannot be remote started :

- Double check all connections using the installation diagram above as a reference.


If no connection errors can be found then please contact technical support assistance.

**DO NOT REPROGRAM ANOTHER MODULE UNLESS INSTRUCTED TO DO SO BY TECHNICAL SUPPORT.**

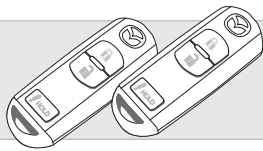

**Make sure** to have two valide vehicle key.


1

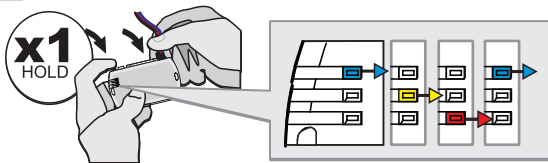

**Press and hold** the programming button:  
**Connect** the 4-PIN Data-link harness (Black connector).


↳ The Blue, Red, Yellow and Blue & Red LEDs will alternatively illuminate.

2

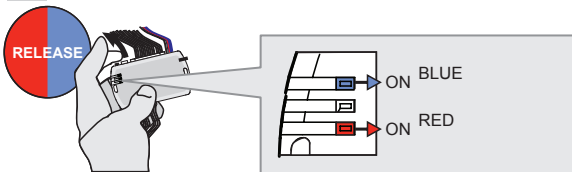


**Release** the programming button when the Blue & Red LEDs are ON.

 *If the LED are not solid BLUE and RED disconnect the 4-PIN Data-link harness (Black connector) and go back to step1.*




3

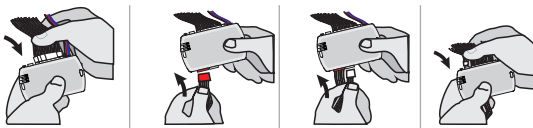

**Connect** the required remaining harnesses.

4

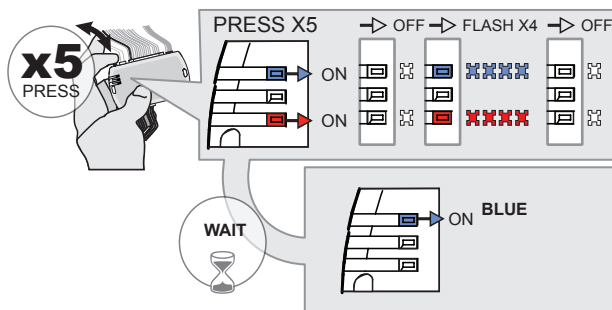

**Press and release** the programming button five times (5x).

↳ The Red & Blue LEDs will alternate between 4 flashes and a pause.


↳ **Wait** for the Blue LED to turn ON.



KEY BYPASS PROGRAMMING PROCEDURE 2/5




5

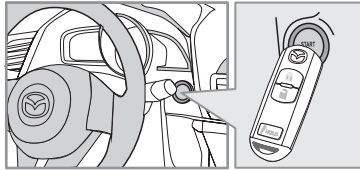


Place the 1st OEM remote close to the front of the START/STOP button exactly as shown.

6

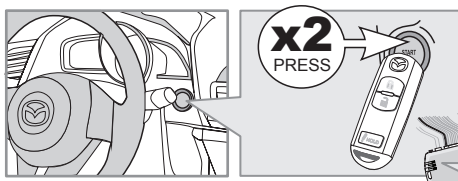


Press the START/STOP button twice to activate the vehicle's Ignition.

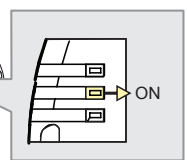


↳ The Yellow LED will turn ON.

7

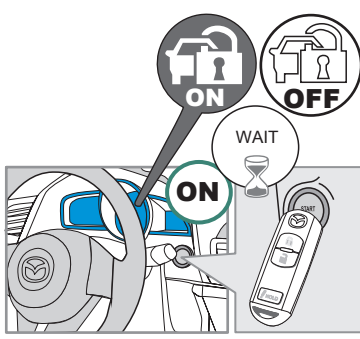

 
If the Blue LED is ON solid disconnect the 4-PIN Data-link harness (Black connector) and go back to step 1.




Wait for the security indicator to turn OFF (around 3 seconds).

8

**IMMEDIATELY**

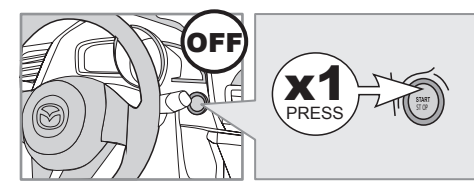


Press the START/STOP button once to deactivate the vehicle's Ignition.

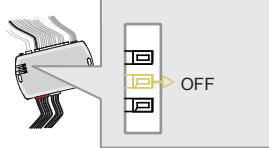

↳ The Yellow Led will turn OFF.




9

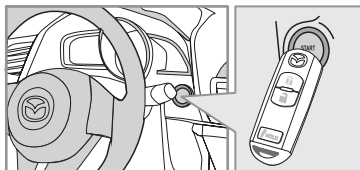


Place the 2nd OEM remote close to the front of the START/STOP button exactly as shown.

10

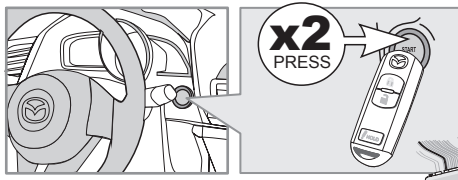


Press the START/STOP button twice to activate the vehicle's Ignition.

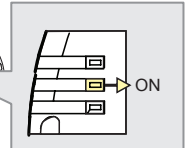


↳ The Yellow LED will turn ON.

KEY BYPASS PROGRAMMING PROCEDURE 3/6

**11**




KEY#2

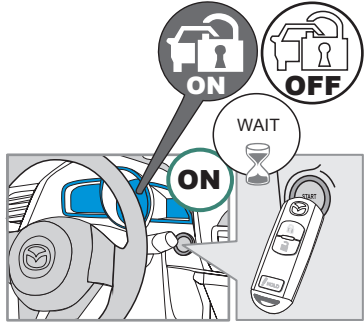


Wait for the security indicator to turn OFF (around 3 seconds).

**12**

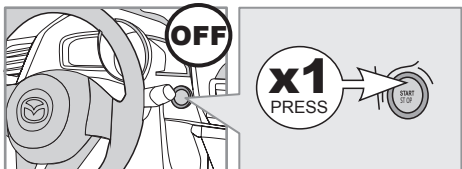


**IMMEDIATELY**

Press the START/STOP button once to deactivate the vehicle's Ignition.

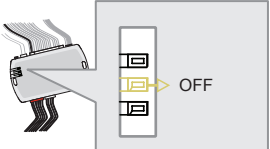


↳ The Yellow Led will turn OFF.


**13**

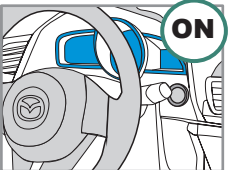

The vehicle's ignition will turn ON

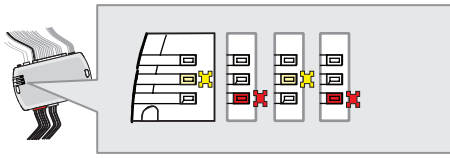



↳ The Yellow and Red LED's will alternatively illuminate.

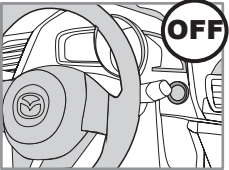

The vehicle's Ignition will turn OFF.

**14**

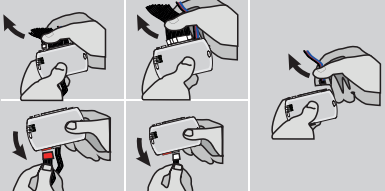


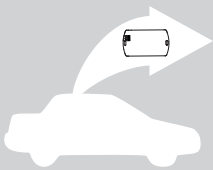

**Disconnect** all the connectors and after the Data-Link (4-pins) connector.

**KEY BYPASS PROGRAMMING PROCEDURE 4/6**


15

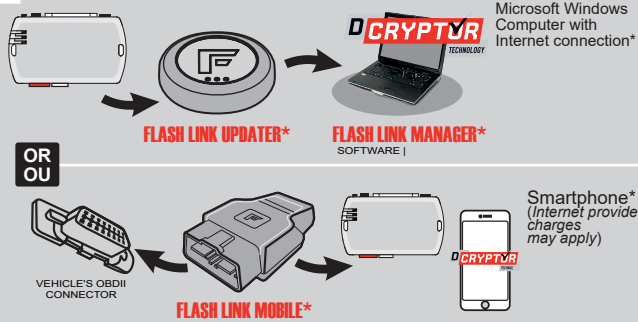

Use the tool:  
**FLASH LINK UPDATER** or  
**FLASH LINK MOBILE**  
to visit the DCryptor menu.

\*Parts required (not included)

16

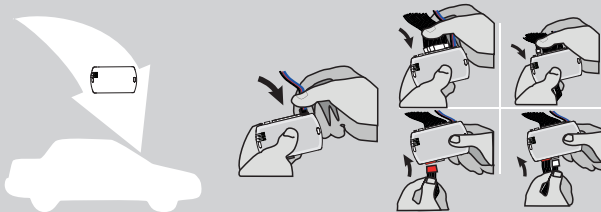


**AFTER DCRYPTOR PROGRAMMING COMPLETED**  
Go back to the vehicle and **reconnect** the 4-Pin (Data-Link) connector and after, all the remaining connector.

17



Repeat step 1 to 12.

18

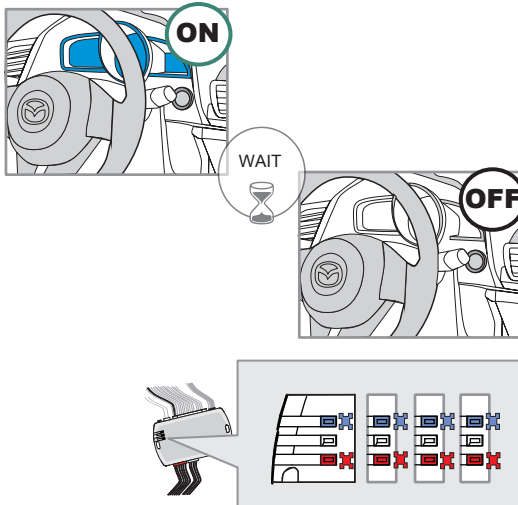


The vehicle's ignition will turn ON

The vehicle's Ignition will turn OFF.


↳ The Blue and Red LEDs will flash.

 19



Disconnect all Harness

20

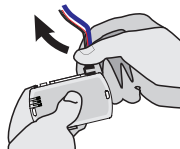


Next:

Disconnect the 4-PIN Data-link harness (Black connector).

KEY BYPASS PROGRAMMING PROCEDURE 5/6

CAN PROGRAMMING PROCEDURE


21

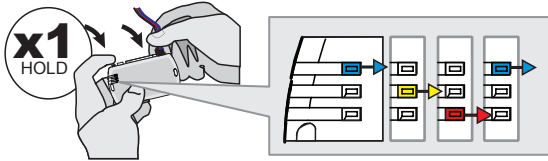

Press and hold the programming button: Connect the 4-PIN Data-link harness (Black connector).


↳ The Blue, Red, Yellow and Blue & Red LEDs will alternatively illuminate.

22

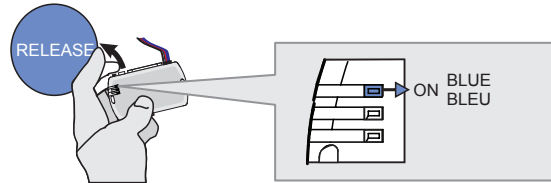


Release the programming button when the Blue LED is ON.

 If the Blue LED is not ON solid disconnect the 4-PIN Data-link harness (Black connector).



23

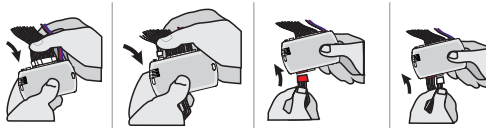


Connect the required remaining harnesses.

24




Press the START/STOP button twice to turn ON the vehicle's Ignition.

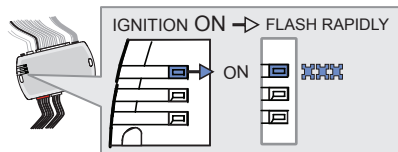


↳ The Blue LED will flash rapidly.

25

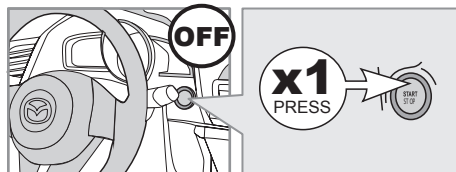

Press the START/STOP button once to turn OFF the vehicle's Ignition.

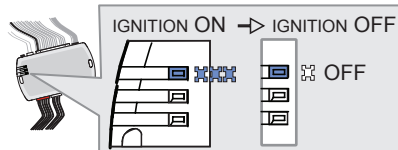


↳ The Blue LED will turn OFF.



The module is now programmed.

REMOTE STARTER FUNCTIONALITY

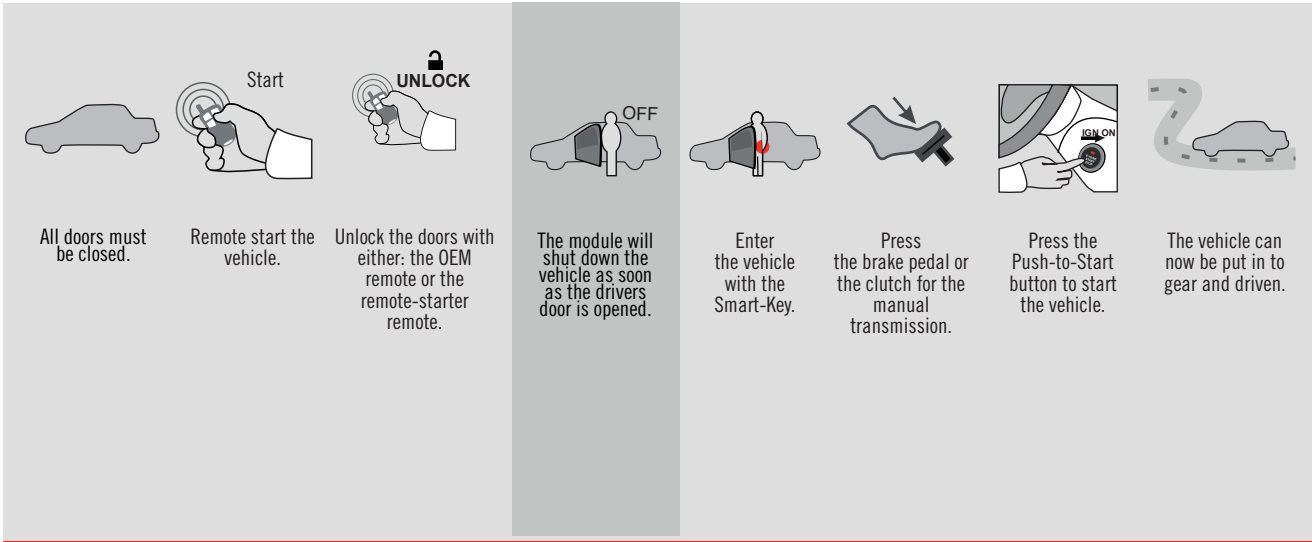

**MAZDA 3 - T-HARNESS MAZDA**

ADDENDUM - SUGGESTED WIRING CONFIGURATION



**ONLY COMPATIBLE WITH AUTOMATIC TRANSMISSION VEHICLES.**

VEHICLE	YEARS	Connection #			Vehicle functions supported in this diagram (functional if equipped)															
		REMOTE STARTER - NO DOORLOCK	REMOTE STARTER & DOORLOCK CONTROL	VEHICLE WITHOUT OEM ALARM E	Immobilizer bypass	Lock	Unlock	Arm	Tachometer	Door Status	Trunk Status	Hood Status protection remote start	Hand-Brake Status	Foot-Brake Status	OEM Remote monitoring	Alarm mode				
<b>MAZDA</b>																				
3	Push-to-Start - Sedan / Hatchback - AT	2014-2016	1	2	3	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•



HARDWARE VERSION

MINIMUM **6**

**71.[31]**

FORD MINIMUM



**Parts required** (Not included)

- 1X 10 AMP Fuse
- 1x Diode 1A
- 1X 1K Ohm Resistor (with doorlock)

**FLASH LINK MANAGER**

Software version 3.52 and more





**FLASH LINK UPDATER 2**

- 1X Microsoft Windows Computer & Internet connection




DESCRIPTION


① ② Under steering column, START-STOP unit

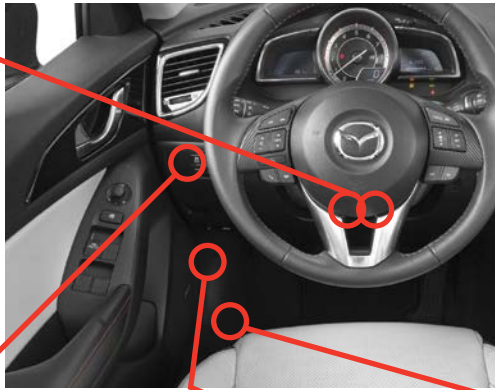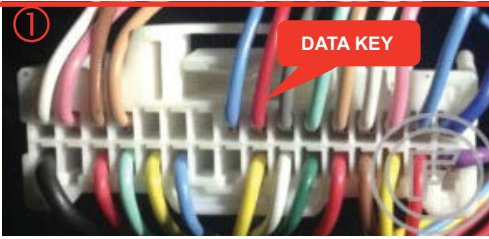

⑧ ⑨ Engine compartment - without OEM hood pin

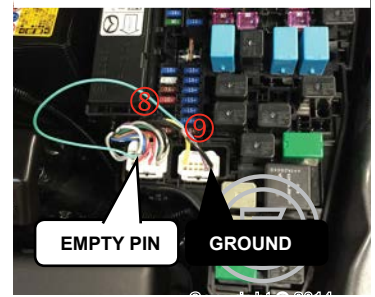


③ Parking Light connector

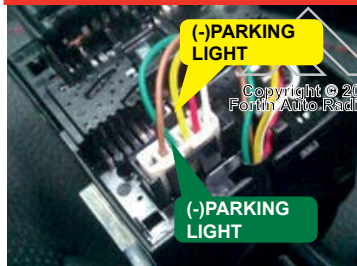


⑤ driver kick panel.



⑥ driver kick panel.

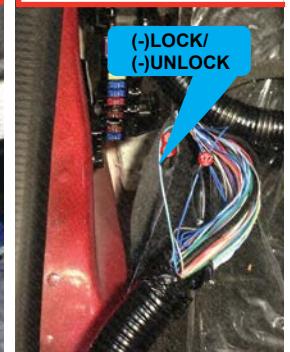

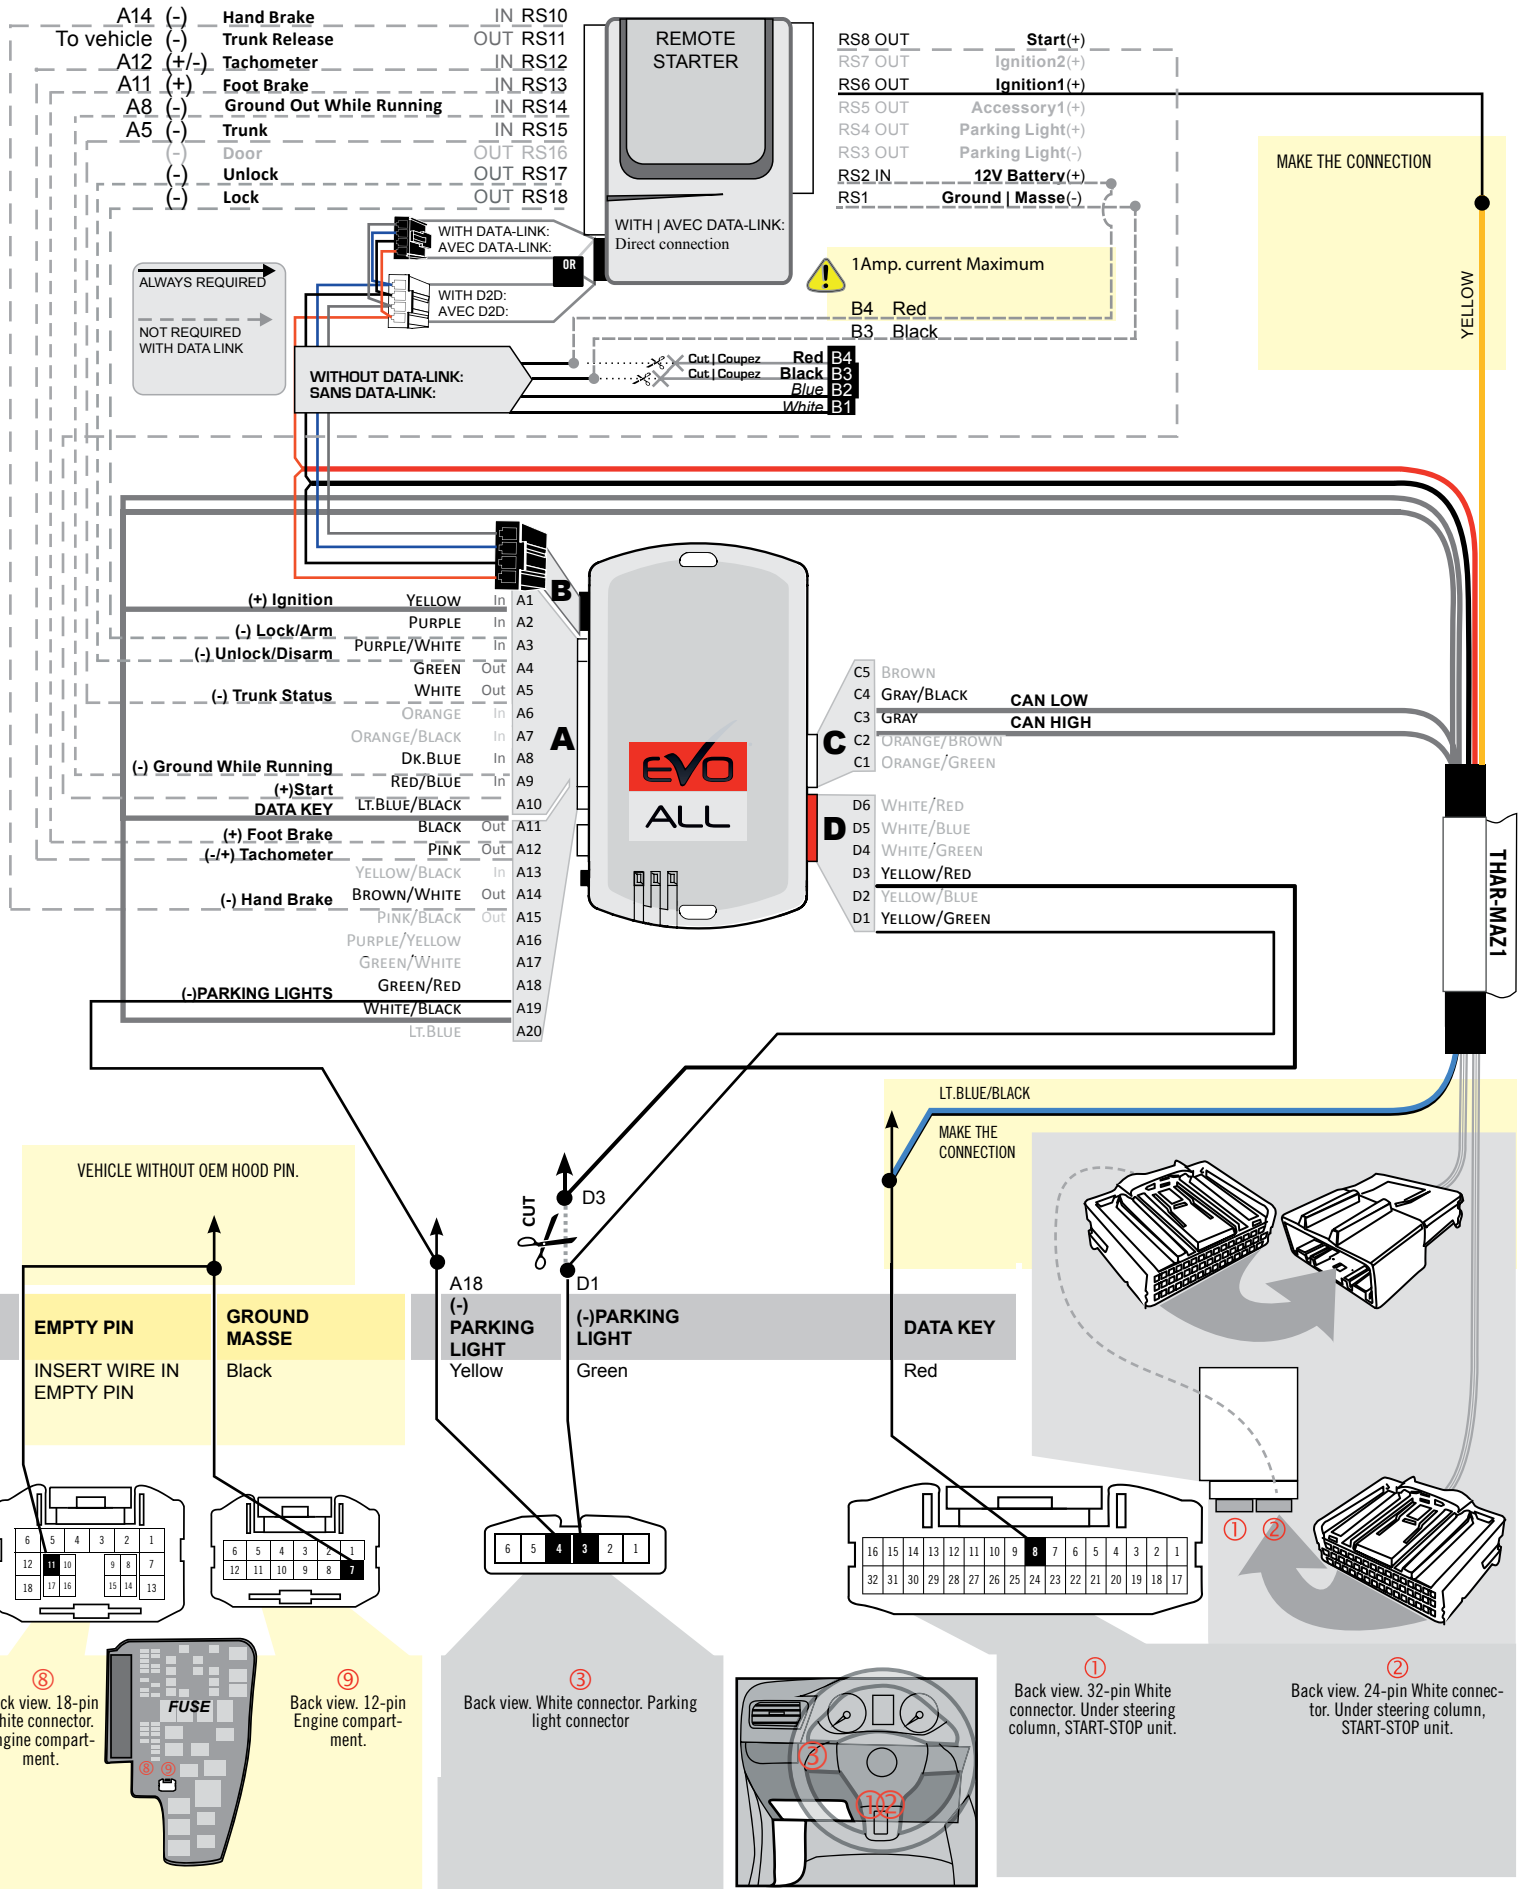





Program bypass option:

UNIT OPTION


DESCRIPTION


**C1**

OEM Remote status (Lock/Unlock) monitoring

**G1**

Evo Alarm enable

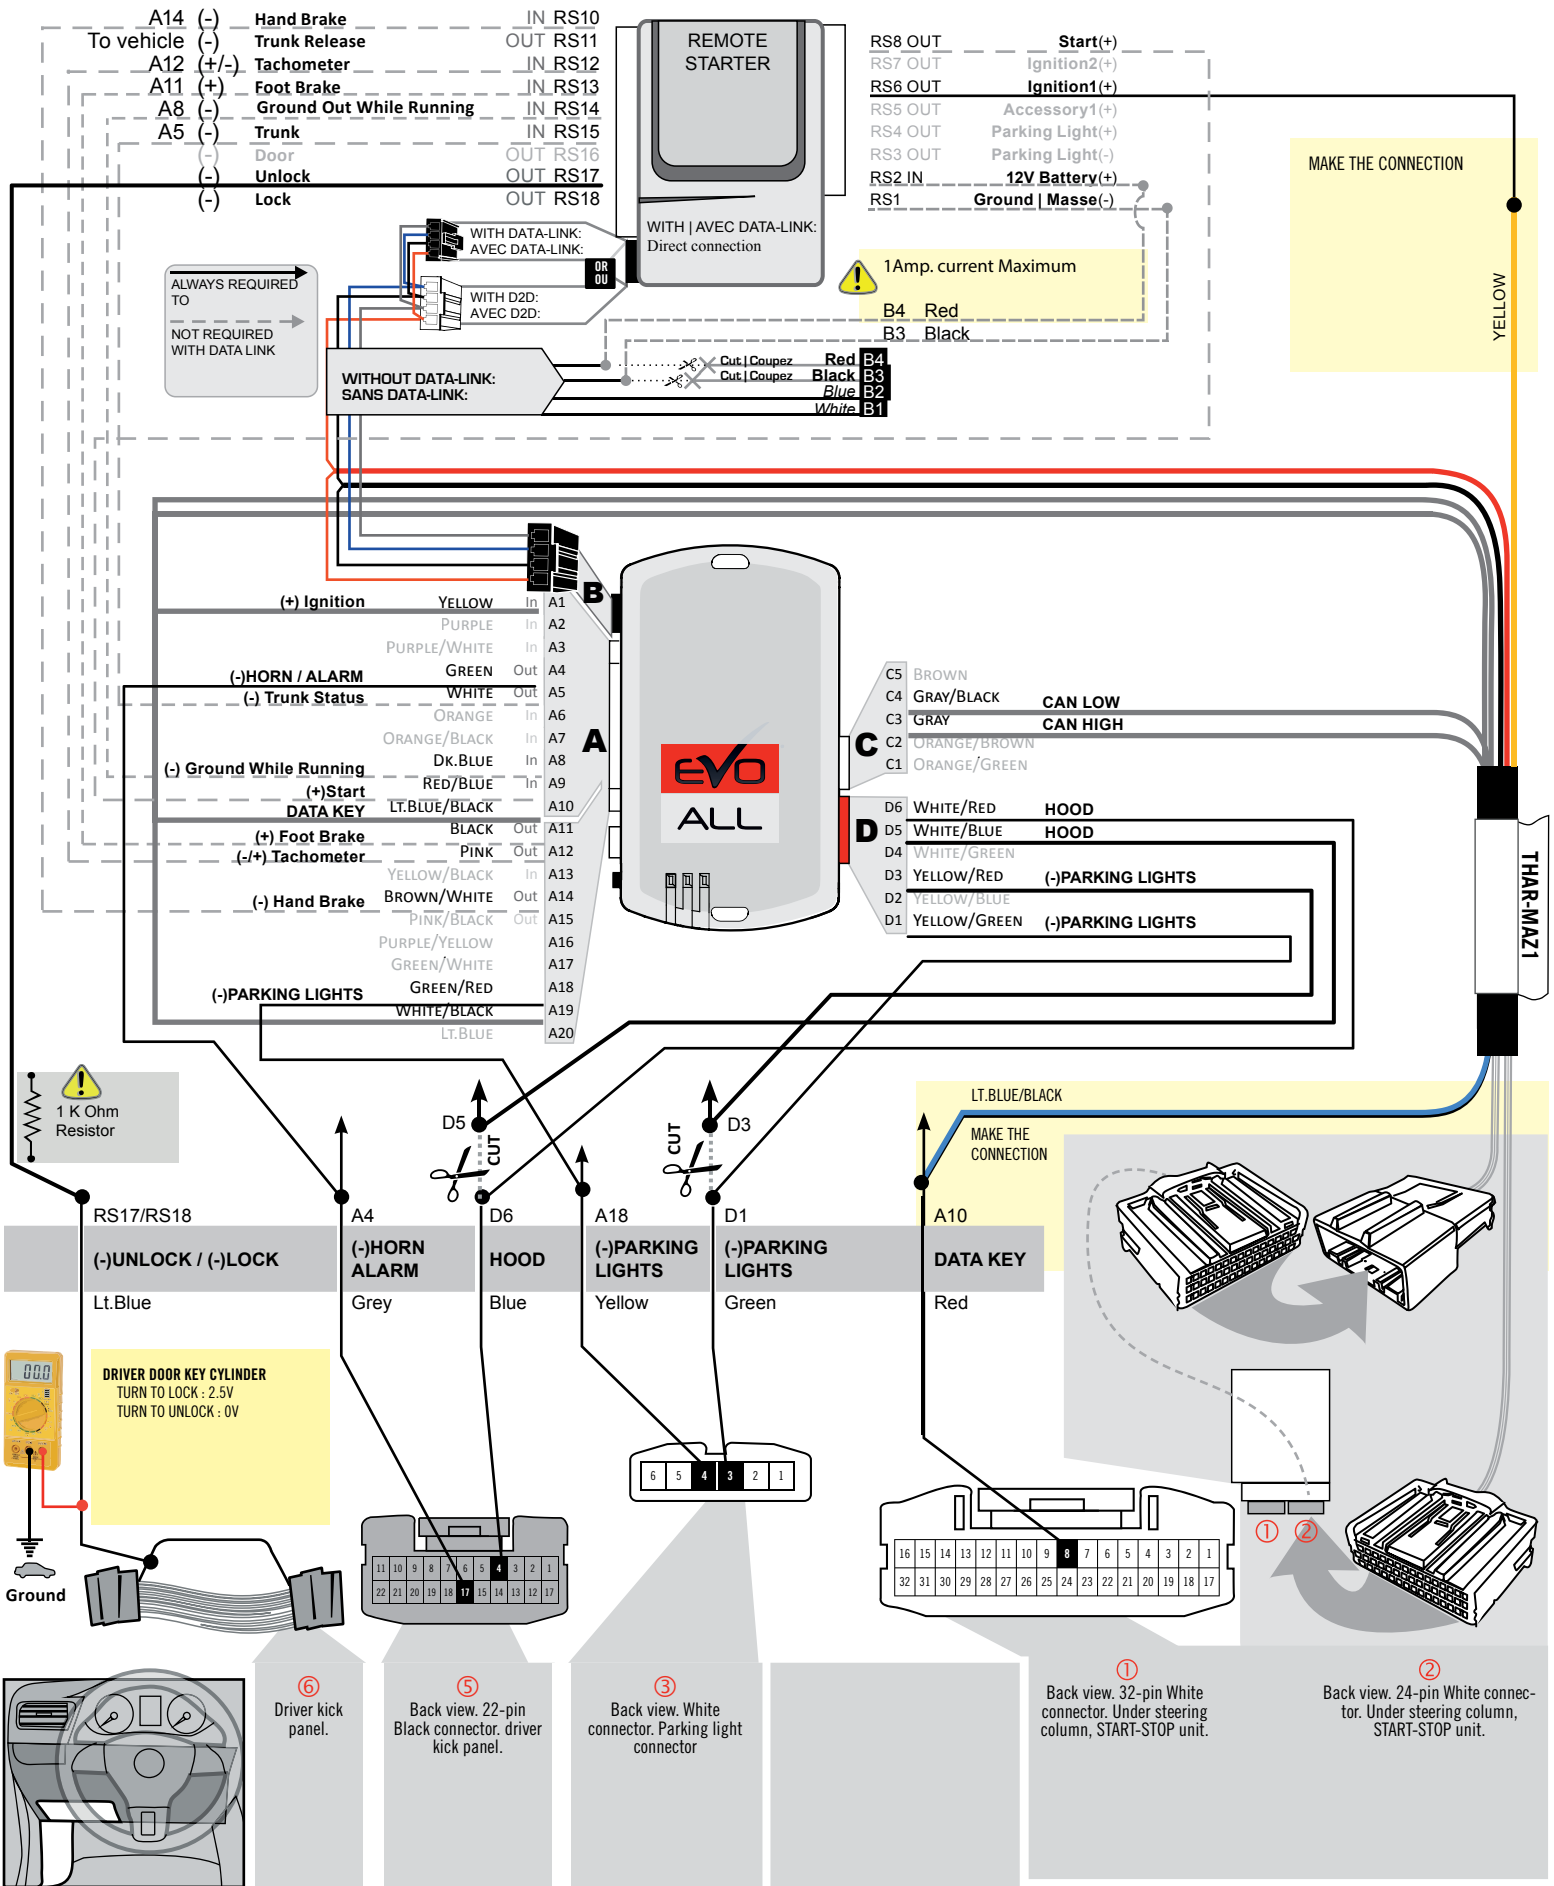

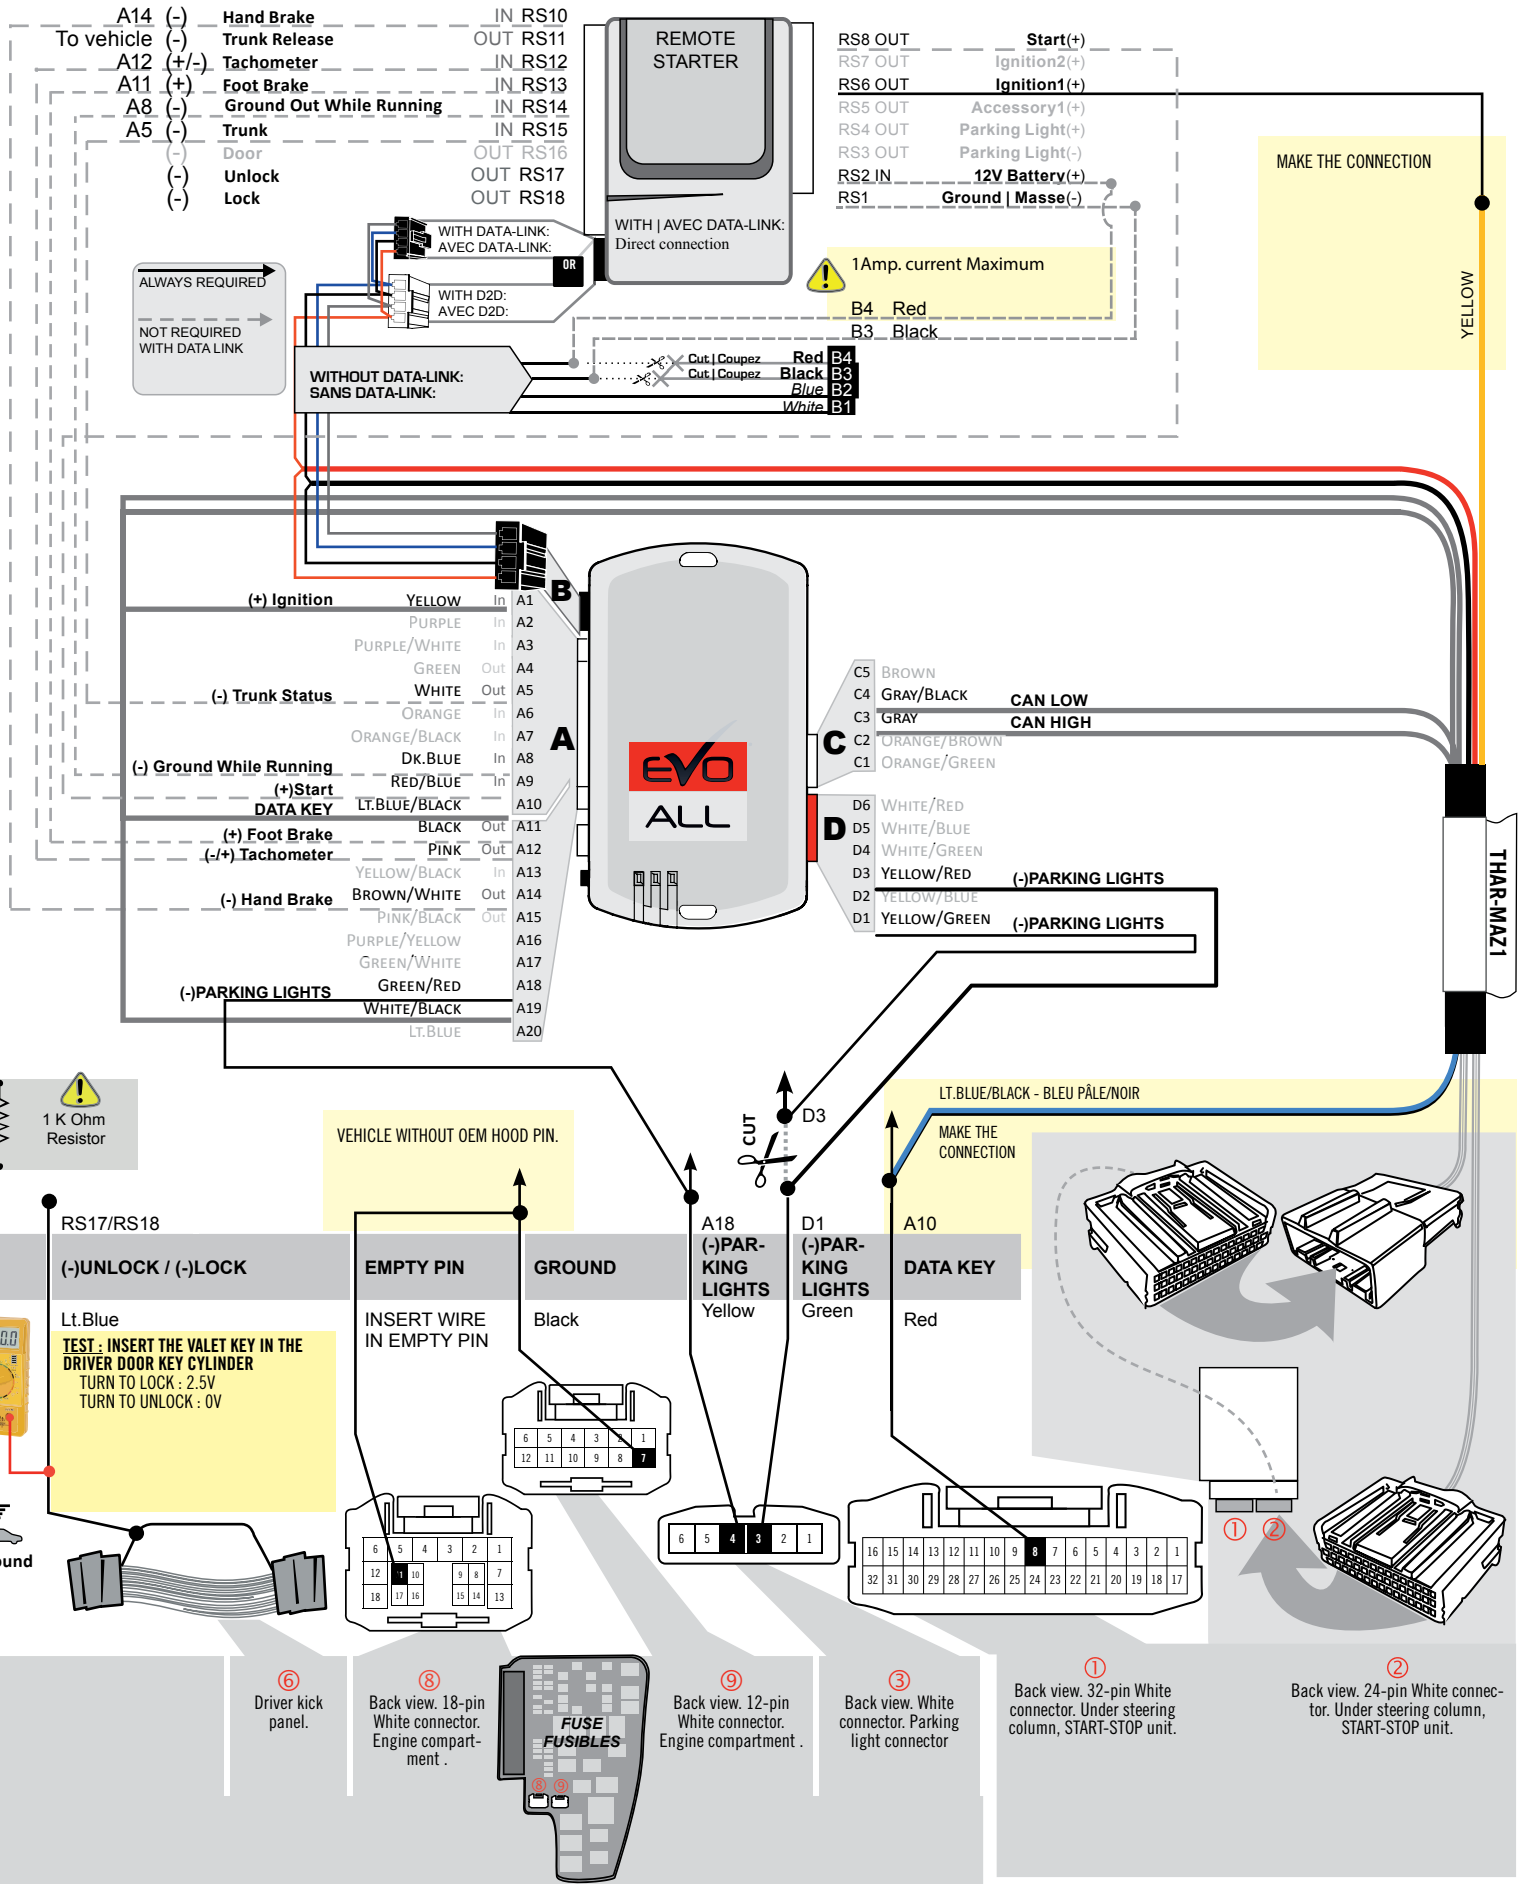

# x3 max.


**Do not program more than 3 modules on the same vehicle.**

If more than 3 modules are programmed to a vehicle, it is possible that the remote car starter will never be functional on this vehicle.

If all programming steps were successful and the vehicle cannot be remote started :


- Double check all connections using the installation diagram above as a reference.

If no connection errors can be found then please contact technical support assistance.

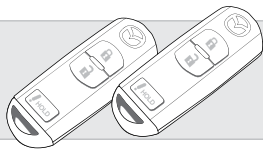

**Make sure** to have two valide vehicle key.


1

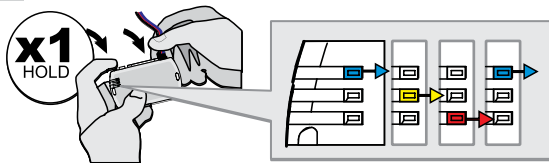

**Press and hold** the programming button:  
**Connect** the 4-PIN Data-link harness (Black connector).


↳ The Blue, Red, Yellow and Blue & Red LEDs will alternatively illuminate.

2

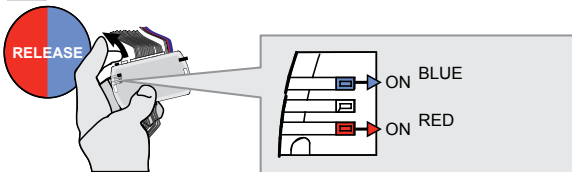


**Release** the programming button when the Blue & Red LEDs are ON.

 If the LED are not solid BLUE and RED disconnect the 4-PIN Data-link harness (Black connector) and go back to step1.




3

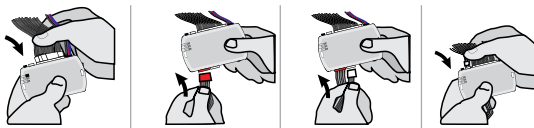

**Connect** the required remaining harnesses.

4

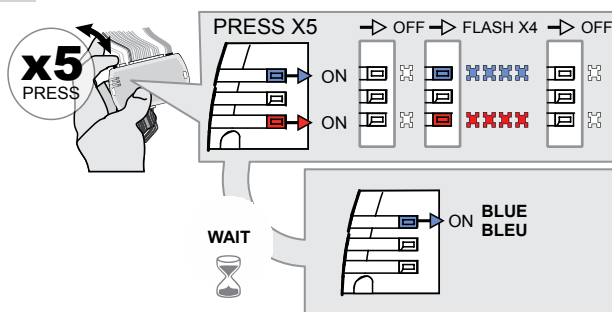

**Press and release** the programming button five times (5x).

↳ The Red & Blue LEDs will alternate between 4 flashes and a pause.


↳ Wait for the Blue LED to turn ON.

KEY BYPASS PROGRAMMING PROCEDURE 2/5




KEY #1

5

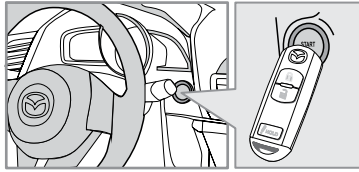


Place the 1st OEM remote close to the front of the START/STOP button exactly as shown.

6

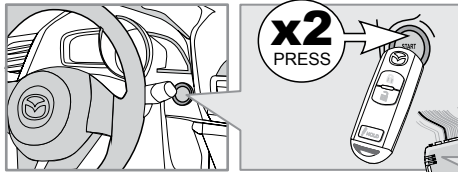


Press the START/STOP button twice to activate the vehicle's Ignition.

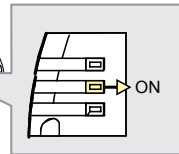


↳ The Yellow LED will turn ON.

7

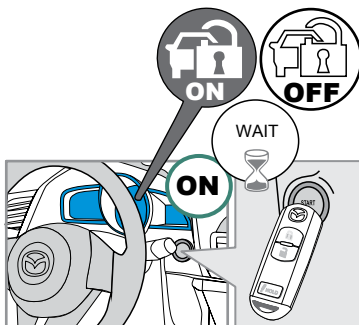


 If the Blue LED is ON solid disconnect the 4-PIN Data-link harness (Black connector) and go back to step 1.




Wait for the security indicator to turn OFF (around 3 seconds).

8

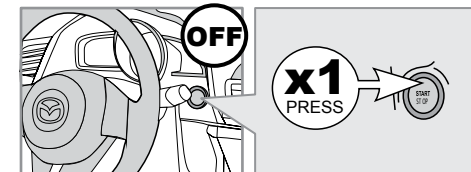

IMMEDIATELY

Press the START/STOP button once to deactivate the vehicle's Ignition.

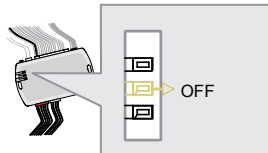


↳ The Yellow Led will turn OFF.




KEY #2

9

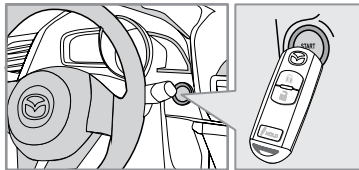


Place the 2nd OEM remote close to the front of the START/STOP button exactly as shown.

10

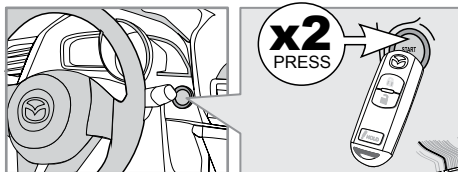


Press the START/STOP button twice to activate the vehicle's Ignition.

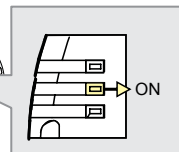


↳ The Yellow LED will turn ON.

KEY BYPASS PROGRAMMING PROCEDURE 3/5 |




KEY #2

**11**

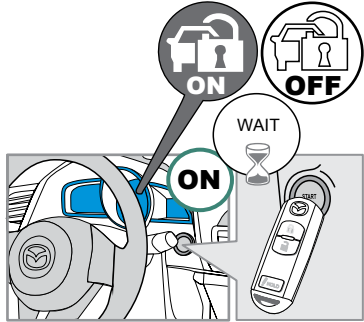

Wait for the security indicator to turn OFF (around 3 seconds).

**12**

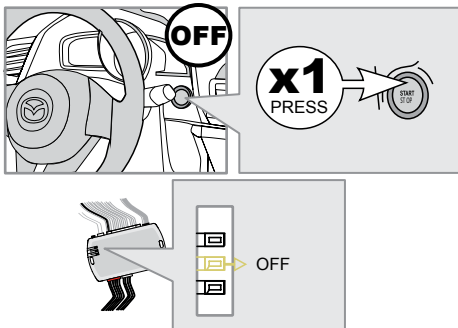


**IMMEDIATELY**


Press the START/STOP button once to deactivate the vehicle's Ignition.

↳ The Yellow Led will turn OFF.


**13**

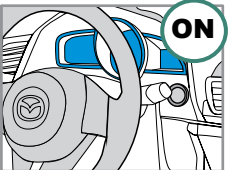

The vehicle's ignition will turn ON

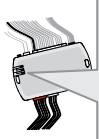


↳ The Yellow and Red LED's will alternatively illuminate.

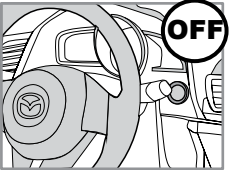

The vehicle's Ignition will turn OFF.

**14**

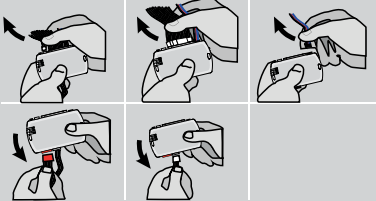




Disconnect the Data-Link (4-pins) connector and after all the remaining connectors.

KEY BYPASS PROGRAMMING PROCEDURE 4/5

15

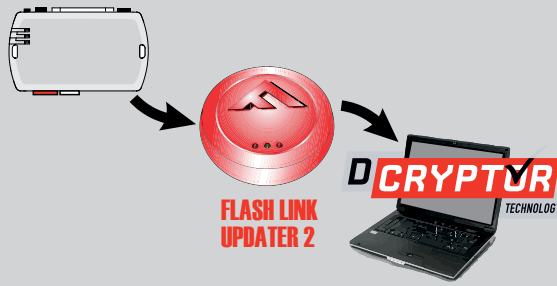

Connect the module to the FLASH LINK UPDATER 2 and visit the DCRYPTOR menu in the Flash-Link Manager.

Parts required (not included)




**FLASH LINK UPDATER 2**

**FLASH LINK MANAGER**  
SOFTWARE | PROGRAMME



Microsoft Windows Computer with

16

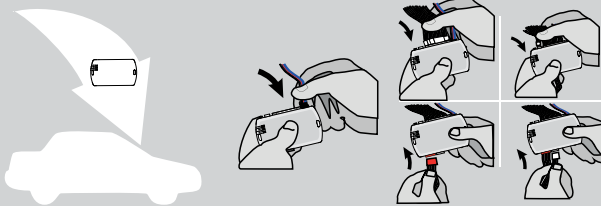


**AFTER DCRYPTOR PROGRAMMING COMPLETED**  
Go back to the vehicle and **reconnect** the 4-Pin (Data-Link) connector and after, all the remaining connector.

17




Repeat step 1 to 12.


18

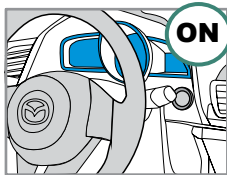

The vehicle's ignition will turn ON

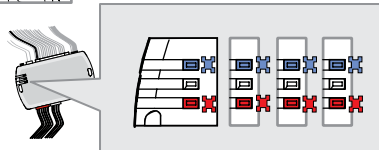


↳ The Blue and Red LEDs will flash.

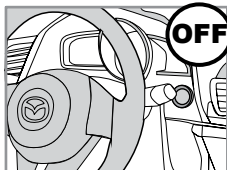


The vehicle's Ignition will turn OFF.

 19



Disconnect all Harness

20

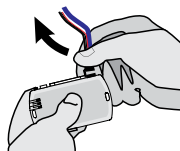

et ensuite:

Disconnect the 4-PIN Data-link harness (Black connector).


KEY BYPASS PROGRAMMING PROCEDURE 5/5

CAN PROGRAMMING PROCEDURE

21

**CAUTION FOR: EVO-ALARM OPTION**


If the module GREEN (A4) wire is connected to the HORN make sure that the option G1 (EVO-ALARM) is enabled before CAN programming.

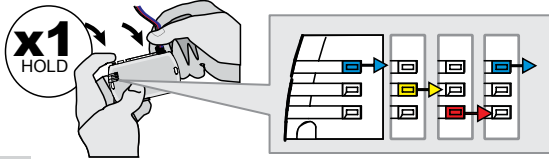

**Press and hold** the programming button:  
**Connect** the 4-PIN Data-link harness (Black connector).


↳ The Blue, Red, Yellow and Blue & Red LEDs will alternatively illuminate.

22

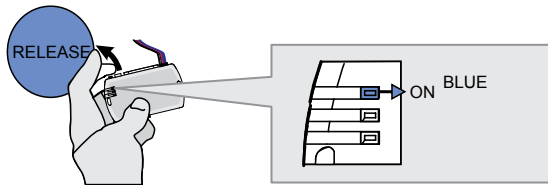


**Release** the programming button when the Blue LED is ON.

 If the Blue LED is not ON solid disconnect the 4-PIN Data-link harness (Black connector).




23

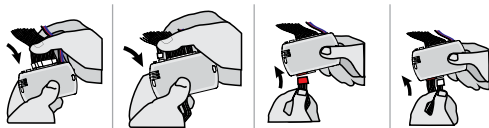


**Connect** the required remaining harnesses.

24

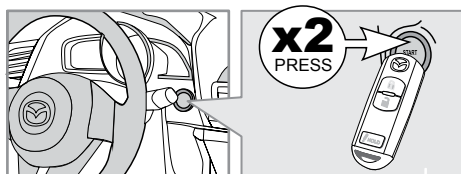


**Press** the START/STOP button twice to activate the vehicle's Ignition.

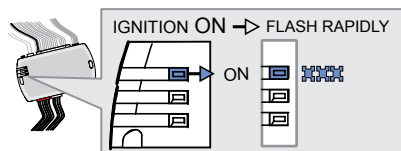


↳ The Blue LED will flash rapidly.

25

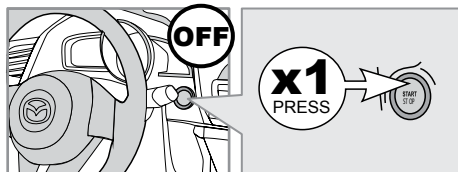

**Press** the START/STOP button once to deactivate the vehicle's Ignition.

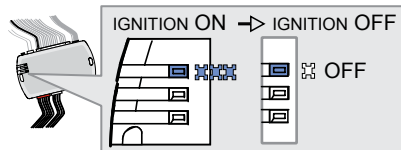

↳ The Blue LED will turn OFF.



The module is now programmed.



REMOTE STARTER FUNCTIONALITY



All doors must be closed.



 
Do not remote-start with the OEM remote inside the vehicle.



Never remote-start with a passenger inside the vehicle.




**Remote start** the vehicle.




*The module will shut down the vehicle as soon as a door is opened.*

THAR-MAZ1 THARNESH INSTALLATION WITH 2 KEYS PROGRAMMING

ADDENDUM - SUGGESTED WIRING CONFIGURATION

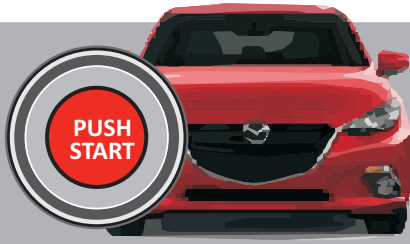
		Vehicle functions supported in this diagram (functional if equipped)												
		Immobilizer bypass	T-Harness	Lock	Unlock	Arm	Disarm	Tachometer	Door Status	Trunk Status	Hood Status protection remote start	Hand-Brake Status	Foot-Brake Status	OEM Remote monitoring
VEHICLE	YEARS													
<b>MAZDA</b>														
3	Push-to-Start - Sedan / Hatchback - Automatic transmission only	2014-2018	•	•	•	•	•	•	•	•	•	•	•	•




85.[11]

MINIMUM

To add the firmware version and the options, use the **FLASH LINK UPDATER** or **FLASH LINK MOBILE** tool, sold separately.

IF THE VEHICLE IS NOT EQUIPPED WITH FUNCTIONAL HOOD PIN:	A11	OFF	Hood trigger (Output Status).
 Program bypass option:	C1		DESCRIPTION OEM Remote status (Lock/Unlock) monitoring


NOTES



THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.

MANDATORY INSTALL

\*HOOD PIN



**HOOD STATUS:** THE HOOD PIN SWITCH MUST BE INSTALLED IF THE VEHICLE CAN BE REMOTE STARTED WITH THE HOOD OPEN, SET FUNCTION A11 TO OFF.



A11

OFF


*Notice:* the installation of safety elements are mandatory. The hood pin is an essential security element and must be installed.

THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.

DESCRIPTION

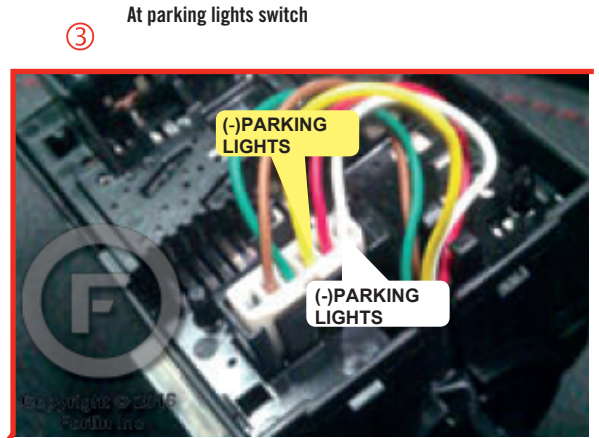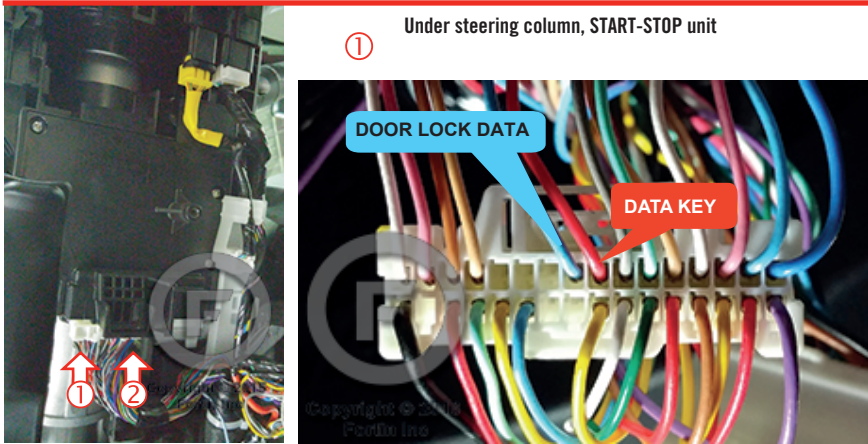

② Under steering column, START-STOP unit

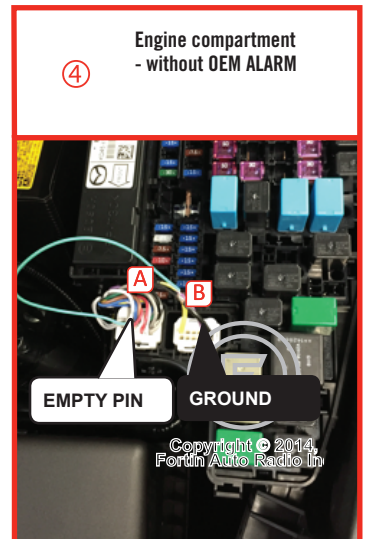




# ATTENTION

Before disconnecting a module, a computer or a control unit from a vehicle: Always disconnect the negative terminal from the vehicle's battery.


In these vehicles, the factory keyless entry module is sensitive to interference and may cease to operate if some precautions are not taken. Disconnect the (-) terminal of the battery prior to disconnecting the connectors at the smartkey module below the steering wheel to avoid damage to the smartkey entry module.

1

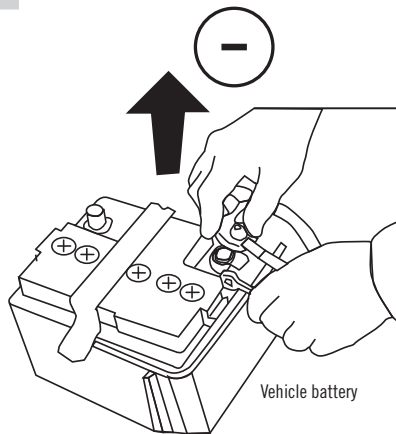


Disconnect the (-) terminal of the battery.

2

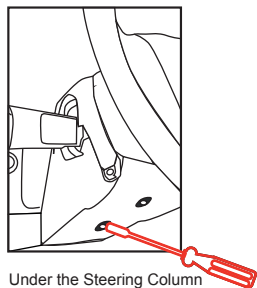


Under the Steering Column

1 Unscrew.

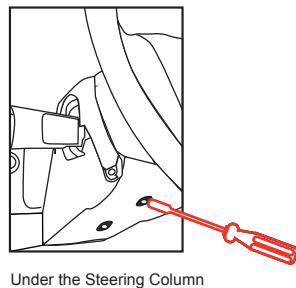


Under the Steering Column

2 Unscrew

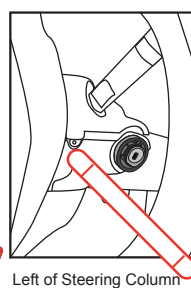


Left of Steering Column

3 Onclip

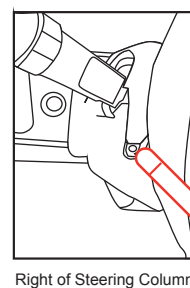

Right of Steering Column

4 Onclip

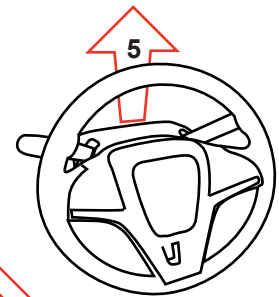


5 Gently pull up the cover of the steering column.

3


Make the following connections.

CONTINUED NEXT PAGE

4

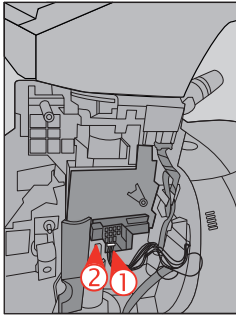

Under steering column, START-STOP unit.

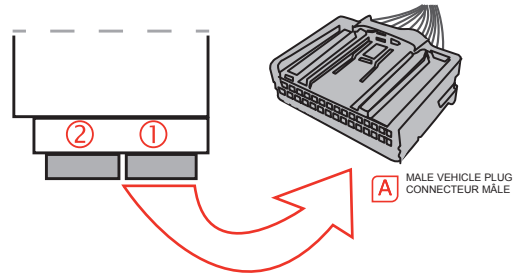


Disconnect the connector

A

5


Under steering column, START-STOP unit.

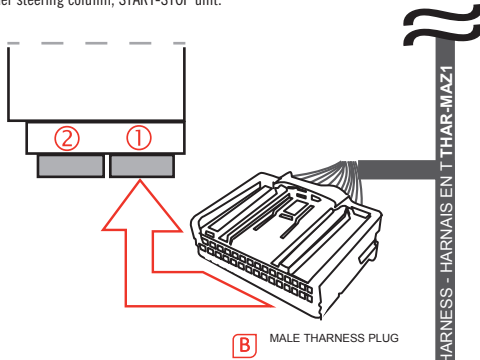

Connect the connector

B

6

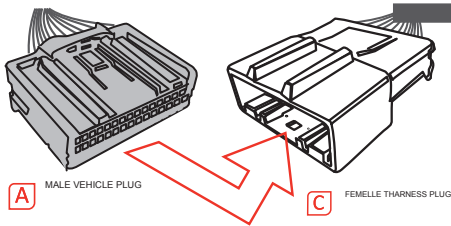

Connect the connector

A



into connector


C

7

Make other required connections.

**AUTOMATIC TRANSMISSION WIRING CONNECTION**

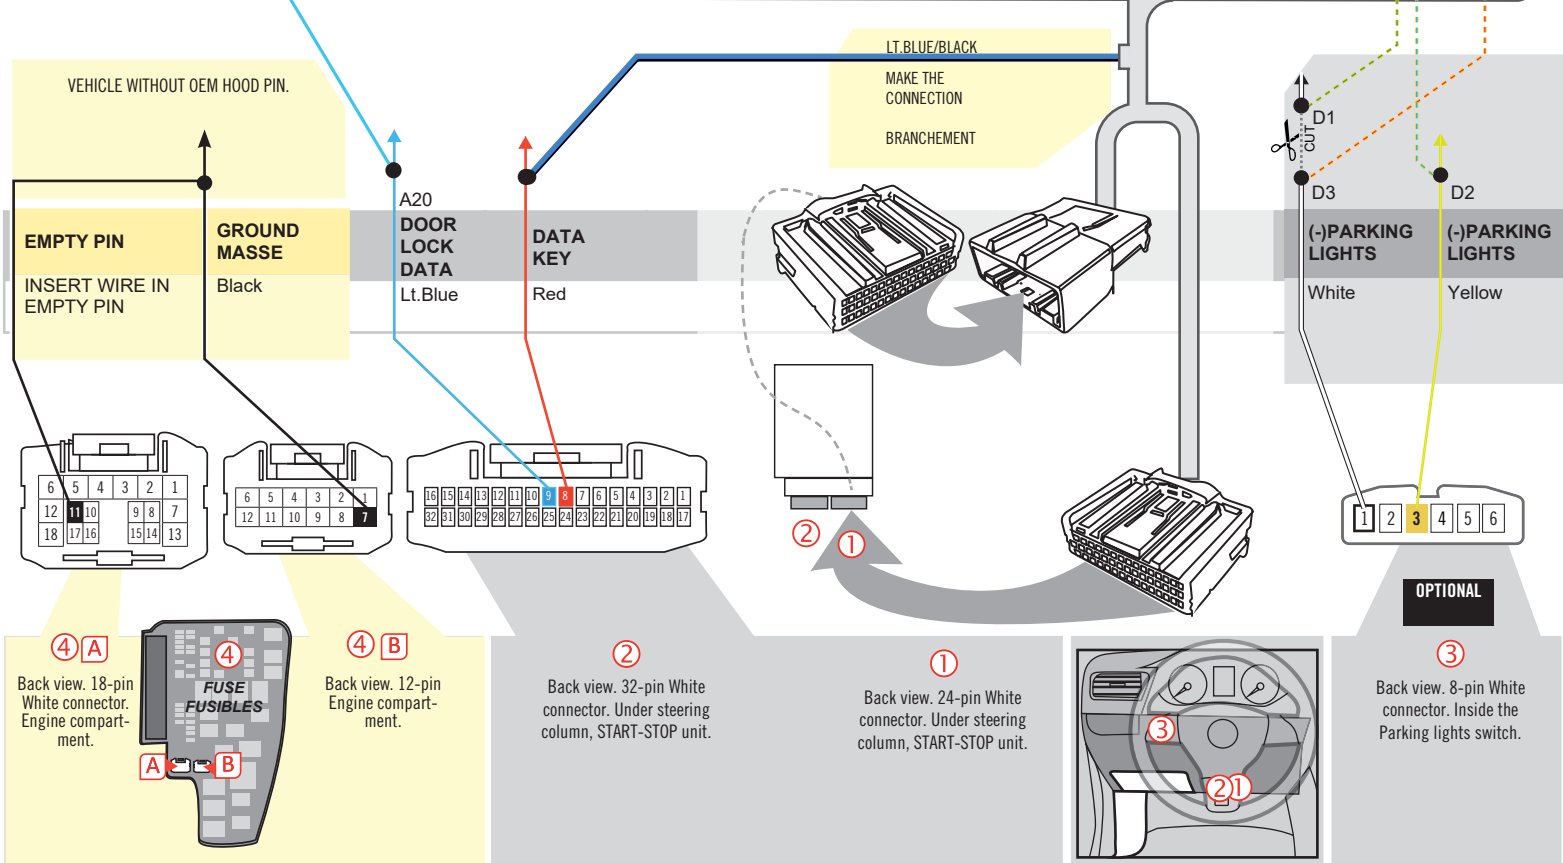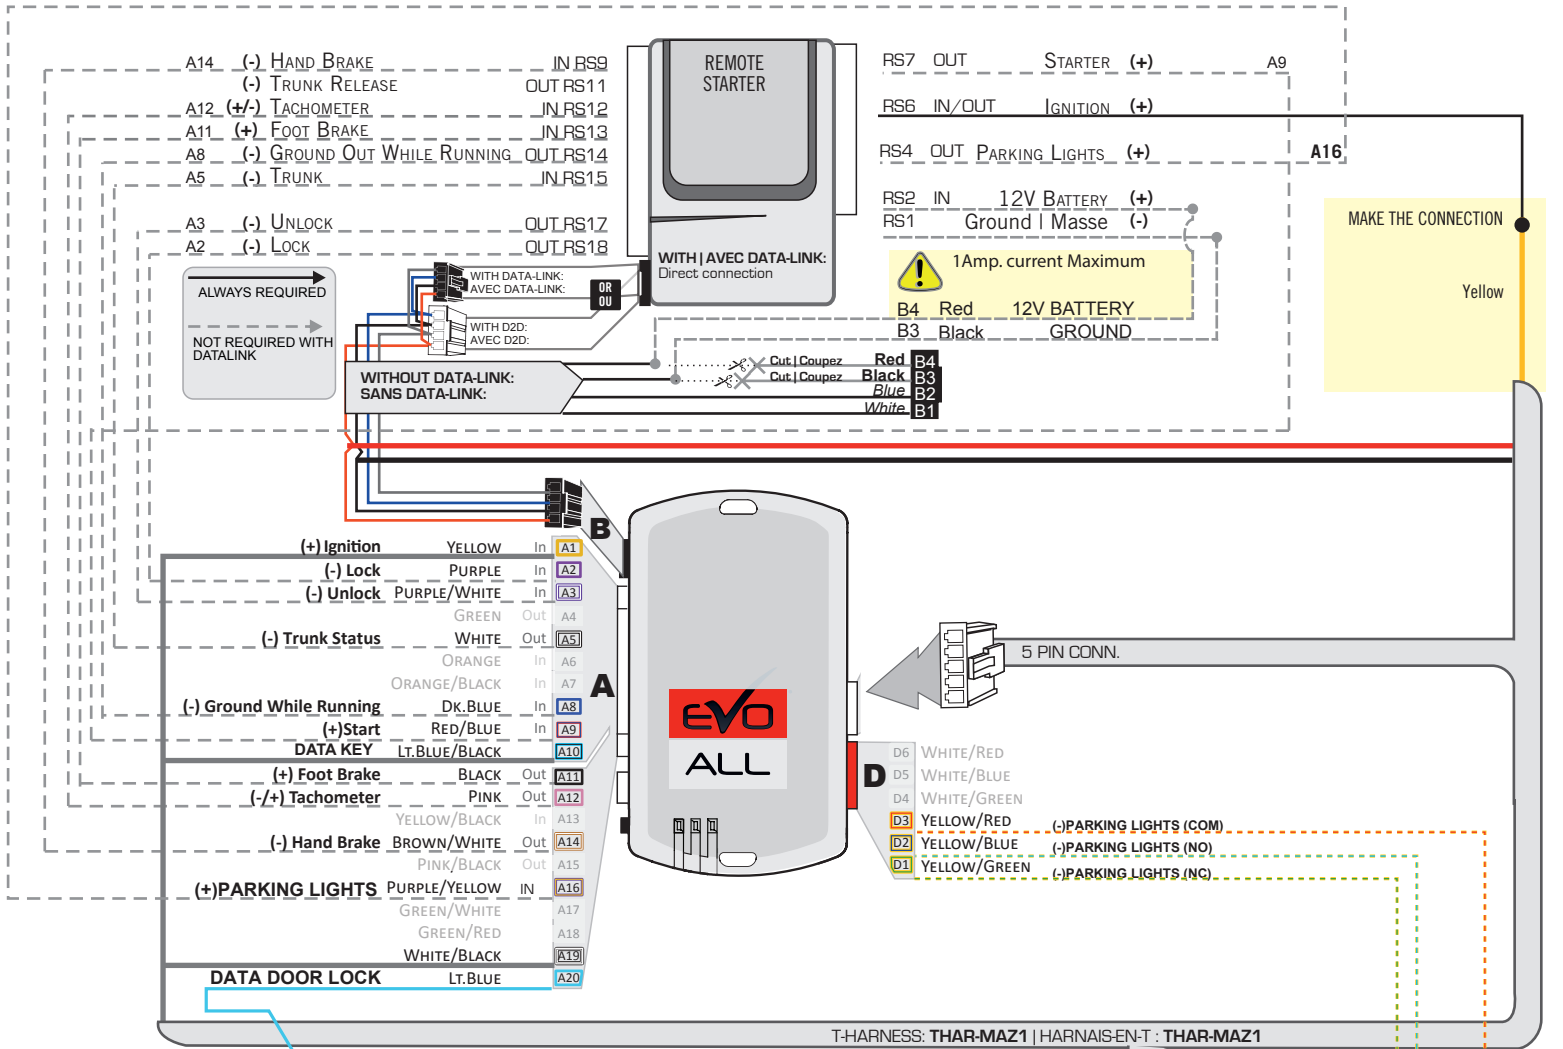

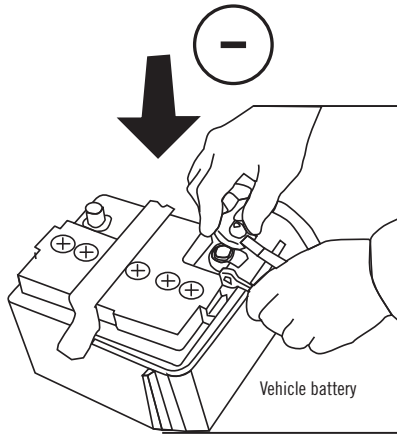

**Reconnect** the (-) terminal of the battery.

CONTINUED NEXT PAGE

# x3 max.


**Do not program more than 3 modules on the same vehicle.**

If more than 3 modules are programmed to a vehicle, it is possible that the remote car starter will never be functional on this vehicle.

If all programming steps were successful and the vehicle cannot be remote started :


- Double check all connections using the installation diagram above as a reference.

If no connection errors can be found then please contact technical support assistance.

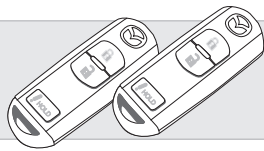

**Make sure** to have two valide vehicle key.


1

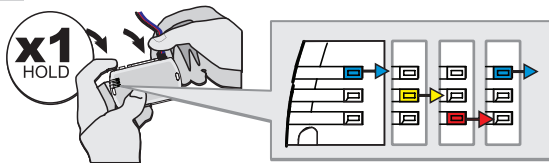

**Press and hold** the programming button:  
**Connect** the 4-PIN Data-link harness (Black connector).


↳ The Blue, Red, Yellow and Blue & Red LEDs will alternatively illuminate.

2

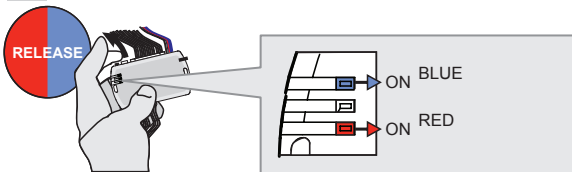


**Release** the programming button when the Blue & Red LEDs are ON.

 *If the LED are not solid BLUE and RED disconnect the 4-PIN Data-link harness (Black connector) and go back to step1.*




3

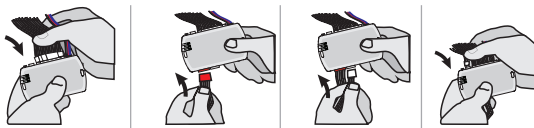

**Connect** the required remaining harnesses.

4

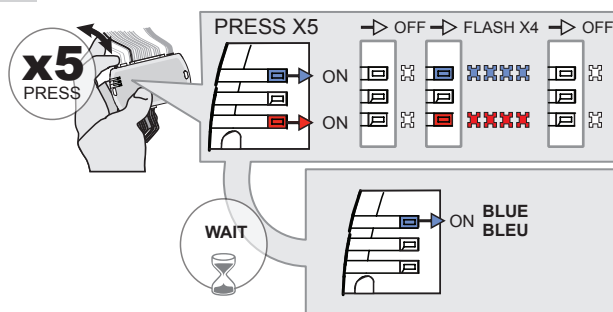

**Press and release** the programming button five times (5x).

↳ The Red & Blue LEDs will alternate between 4 flashes and a pause.

↳ **Wait** for the Blue LED to turn ON.




KEY BYPASS PROGRAMMING PROCEDURE 2/5




KEY #1

5

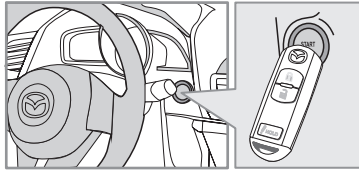


Place the 1st OEM remote close to the front of the START/STOP button exactly as shown.

6

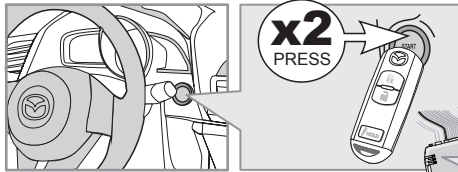


Press the START/STOP button twice to activate the vehicle's Ignition.

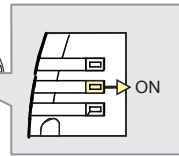


↳ The Yellow LED will turn ON.

7

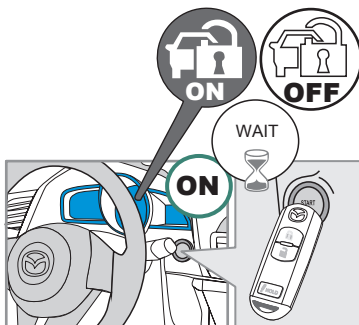


 If the Blue LED is ON solid disconnect the 4-PIN Data-link harness (Black connector) and go back to step 1.




Wait for the security indicator to turn OFF (around 3 seconds).

8

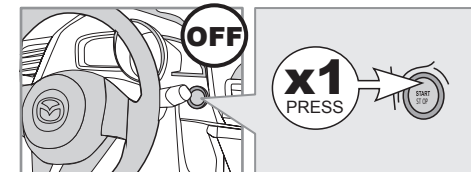

IMMEDIATELY

Press the START/STOP button once to deactivate the vehicle's Ignition.

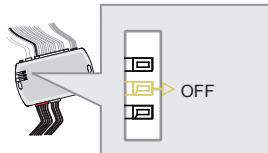


↳ The Yellow Led will turn OFF.




KEY #2

9

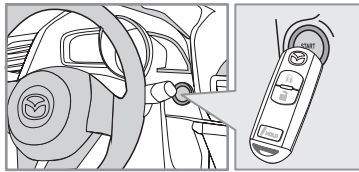


Place the 2nd OEM remote close to the front of the START/STOP button exactly as shown.

10

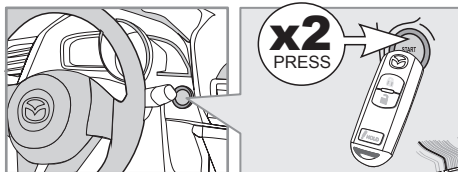


Press the START/STOP button twice to activate the vehicle's Ignition.

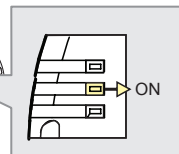


↳ The Yellow LED will turn ON.

KEY BYPASS PROGRAMMING PROCEDURE 3/6

**11**




KEY#2

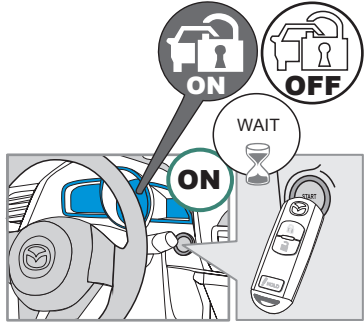


Wait for the security indicator to turn OFF (around 3 seconds).

**12**

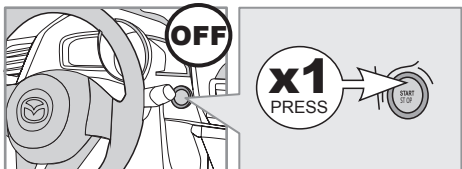


IMMEDIATELY

Press the START/STOP button once to deactivate the vehicle's Ignition.

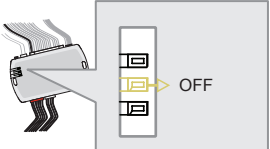


↳ The Yellow Led will turn OFF.


**13**

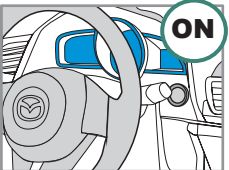

The vehicle's ignition will turn ON

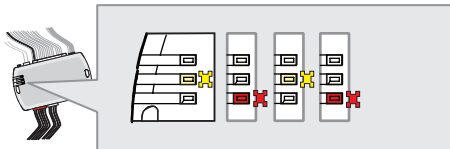



↳ The Yellow and Red LED's will alternatively illuminate.

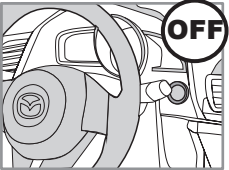

The vehicle's Ignition will turn OFF.

**14**

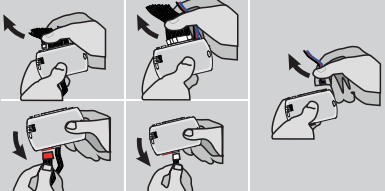


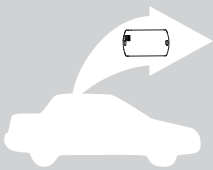


Disconnect all the connectors and after the Data-Link (4-pins) connector.

**KEY BYPASS PROGRAMMING PROCEDURE 4/6**

15

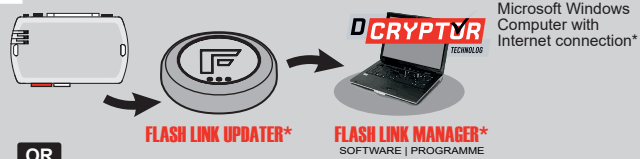


OR

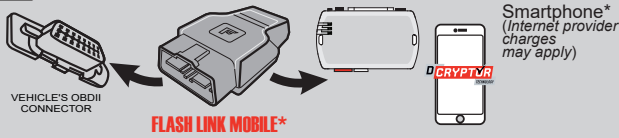

Use the tool:  
**FLASH LINK UPDATER** or  
**FLASH LINK MOBILE**  
to visit the DCRYPTOR menu.

\*Parts required (not included)

16

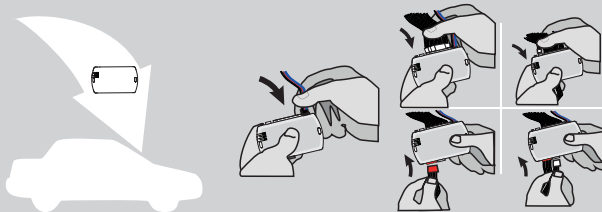


**AFTER DCRYPTOR PROGRAMMING COMPLETED**  
Go back to the vehicle and **reconnect** the 4-Pin (Data-Link) connector and after, all the remaining connector.

17



Repeat step 1 to 12.

18

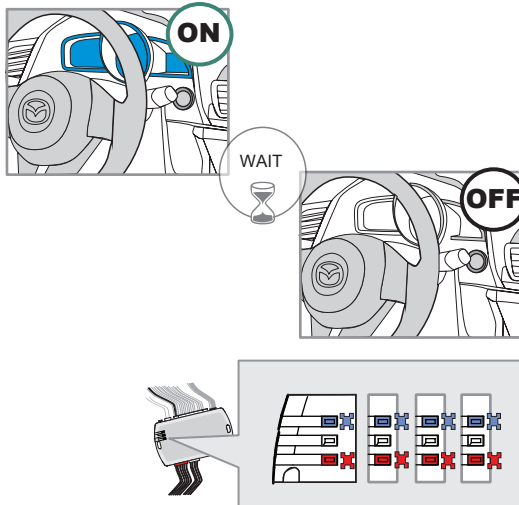


The vehicle's ignition will turn ON

The vehicle's Ignition will turn OFF.


↳ The Blue and Red LEDs will flash.

 19



Disconnect all Harness

20

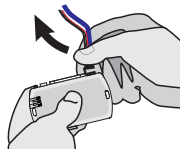


Next:

Disconnect the 4-PIN Data-link harness (Black connector).

CAN PROGRAMMING PROCEDURE


21

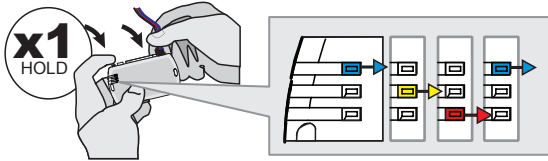

Press and hold the programming button:  
Connect the 4-PIN Data-link harness (Black connector).


↳ The Blue, Red, Yellow and Blue & Red LEDs will alternatively illuminate.

22

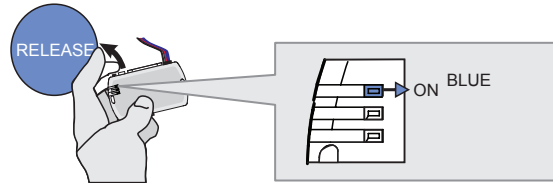


Release the programming button when the Blue LED is ON.

 If the Blue LED is not ON solid disconnect the 4-PIN Data-link harness (Black connector).



23

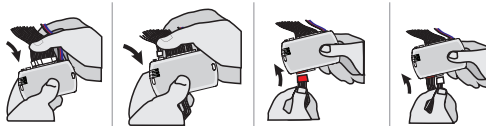


Connect the required remaining harnesses.

24



Press the START/STOP button twice to turn ON the vehicle's Ignition.

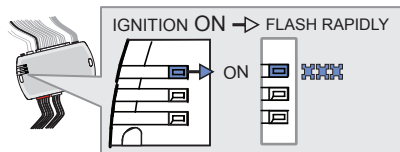


↳ The Blue LED will flash rapidly.

25



Press the START/STOP button once to turn OFF the vehicle's Ignition.

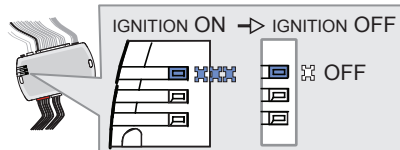


↳ The Blue LED will turn OFF.



The module is now programmed.

REMOTE STARTER FUNCTIONALITY

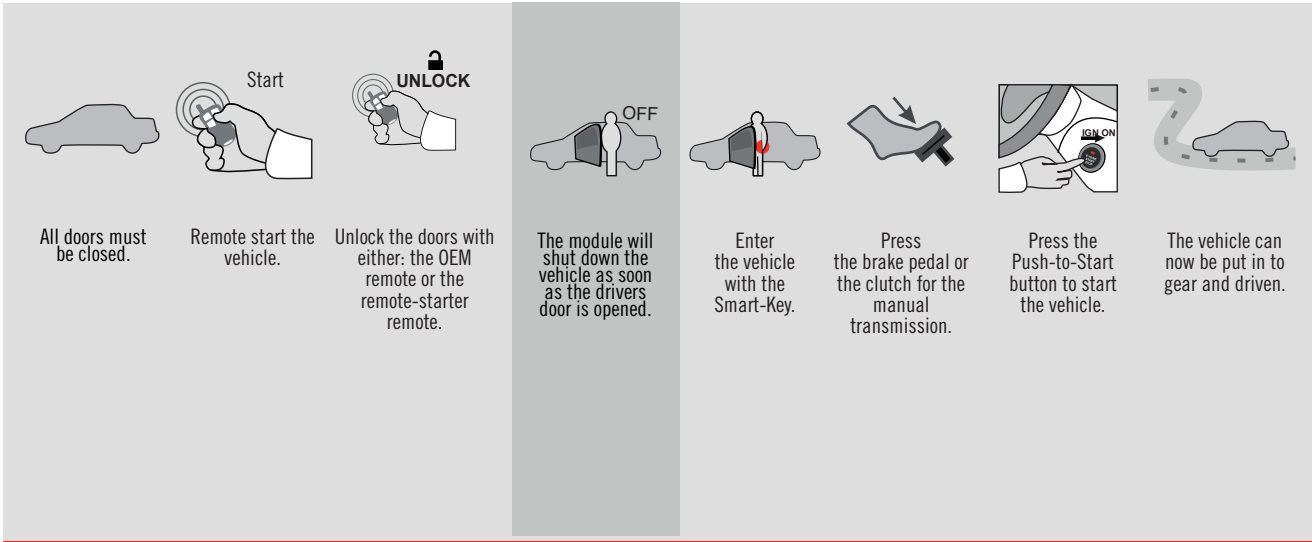


THAR-MAZ1 THARNESH INSTALLATION WITH 2 KEYS PROGRAMMING

ADDENDUM - SUGGESTED WIRING CONFIGURATION



**ONLY COMPATIBLE WITH AUTOMATIC TRANSMISSION VEHICLES.**

Vehicle functions supported in this diagram (functional if equipped)

VEHICLE	YEARS	Immobilizer bypass	T-Harness	Lock	Unlock	Arm	Disarm	Tachometer	Door Status	Trunk Status	Hood Status protection remote start	Hand-Brake Status	Foot-Brake Status	OEM Remote monitoring
														
<b>MAZDA</b>														
6	Push-to-Start - Automatic transmission only	2021	•	•	•	•	•	•	•	•	•	•	•	•



**85.[11]**

MINIMUM

To add the firmware version and the options, use the **FLASH LINK UPDATER** or **FLASH LINK MOBILE** tool, sold separately.

**IF THE VEHICLE IS NOT EQUIPPED WITH FUNCTIONAL HOOD PIN:**

**A11**

**OFF**

Hood trigger (Output Status).



Program bypass option:

UNIT OPTION

DESCRIPTION

**C1**

OEM Remote status (Lock/Unlock) monitoring

**NOTES**



**THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.**

**MANDATORY INSTALL**

\*HOOD PIN



**HOOD STATUS:** THE HOOD PIN SWITCH MUST BE INSTALLED IF THE VEHICLE CAN BE REMOTE STARTED WITH THE HOOD OPEN, SET FUNCTION **A11** TO OFF.

**A11**

**OFF**


**Notice:** the installation of safety elements are mandatory. The hood pin is an essential security element and must be installed.

**THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.**


DESCRIPTION




① Under steering column, START-STOP unit

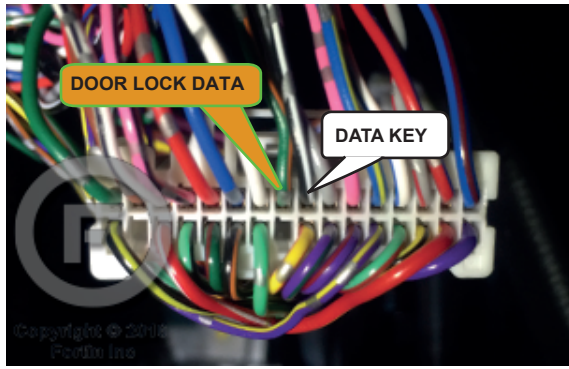


③ At parking lights switch

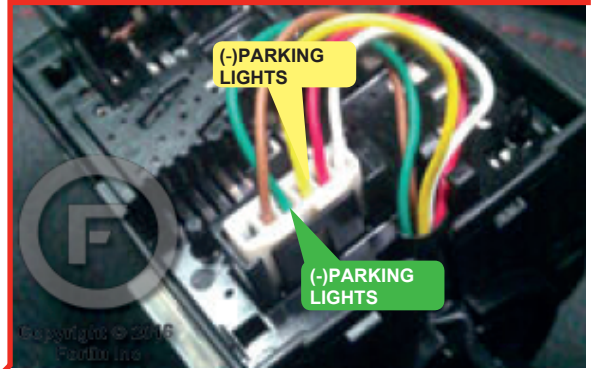

② Under steering column, START-STOP unit

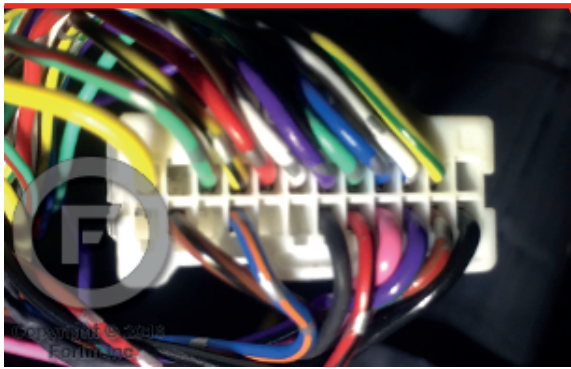

④ Engine compartment - without OEM ALARM

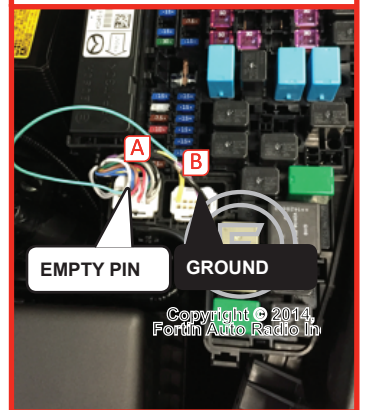




# ATTENTION

Before disconnecting a module, a computer or a control unit from a vehicle: Always disconnect the negative terminal from the vehicle's battery.


In these vehicles, the factory keyless entry module is sensitive to interference and may cease to operate if some precautions are not taken. Disconnect the (-) terminal of the battery prior to disconnecting the connectors at the smartkey module below the steering wheel to avoid damage to the smartkey entry module.

1

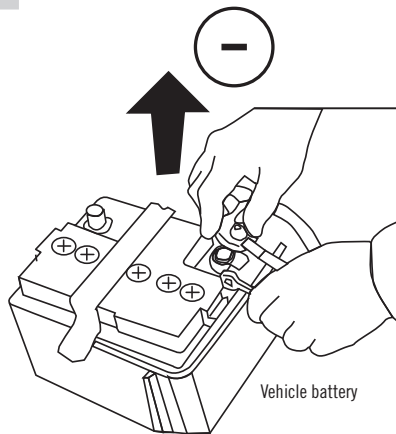


Disconnect the (-) terminal of the battery.

2

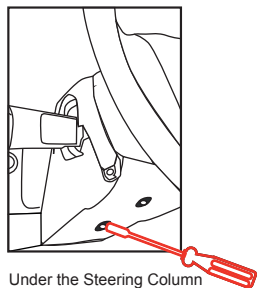


Under the Steering Column

1 Unscrew.

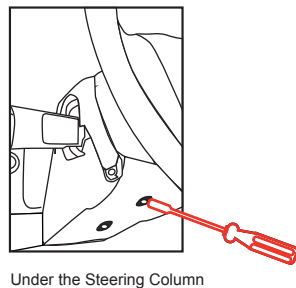


Under the Steering Column

2 Unscrew

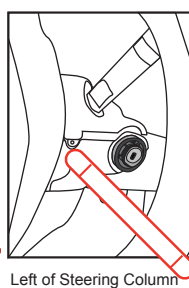


Left of Steering Column

3 Onclip

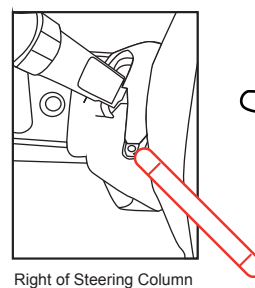

Right of Steering Column

4 Onclip

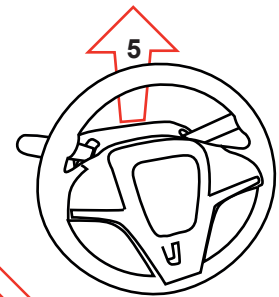

5 Gently pull up the cover of the steering column.


3

Make the following connections.


CONTINUED NEXT PAGE



4

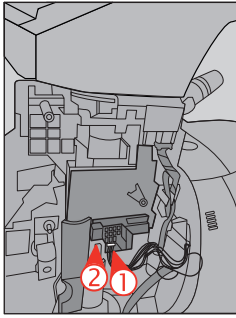

Under steering column, START-STOP unit.

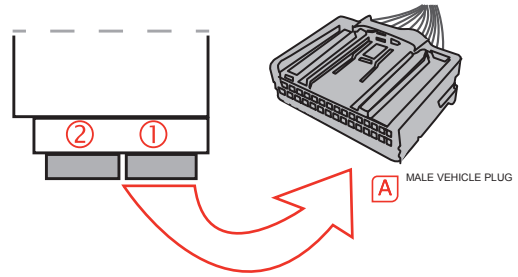


Disconnect the connector

A

5


Under steering column, START-STOP unit.

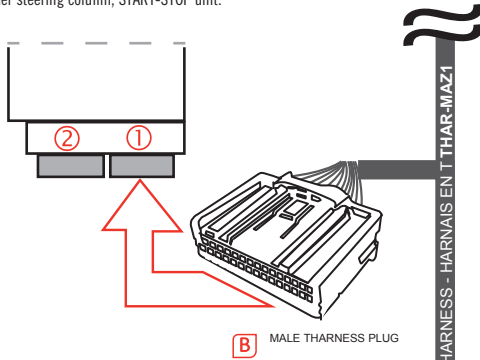

Connect the connector

B

6

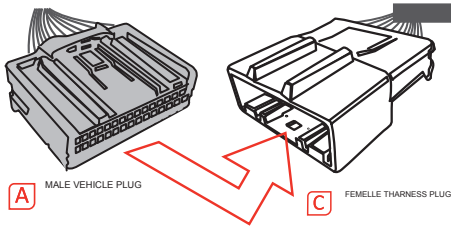

Connect the connector

into connector



A


C

7

Make other required connections.

**AUTOMATIC TRANSMISSION WIRING CONNECTION**

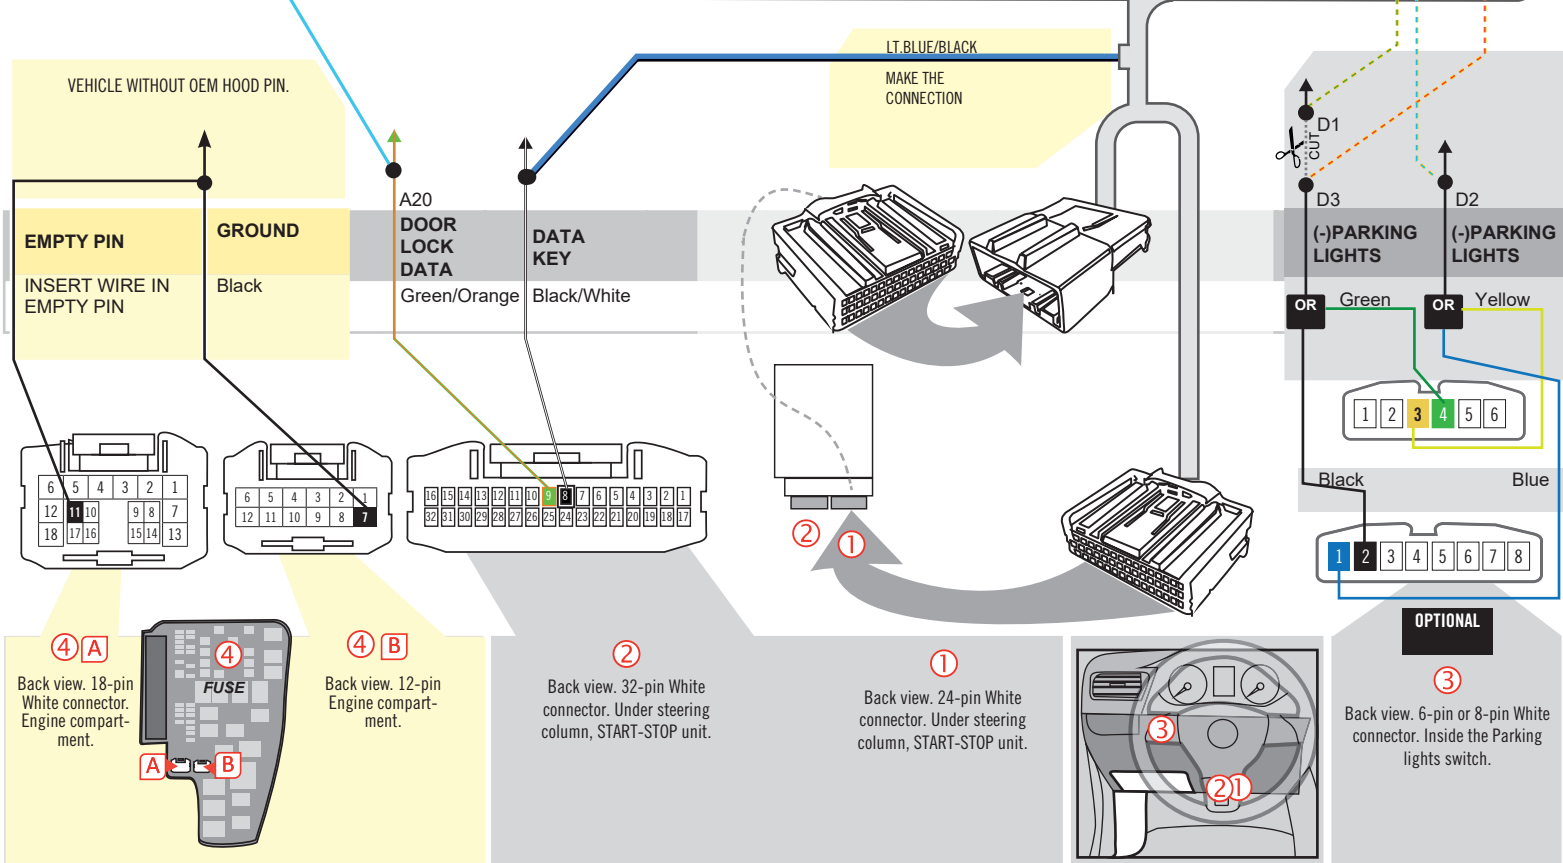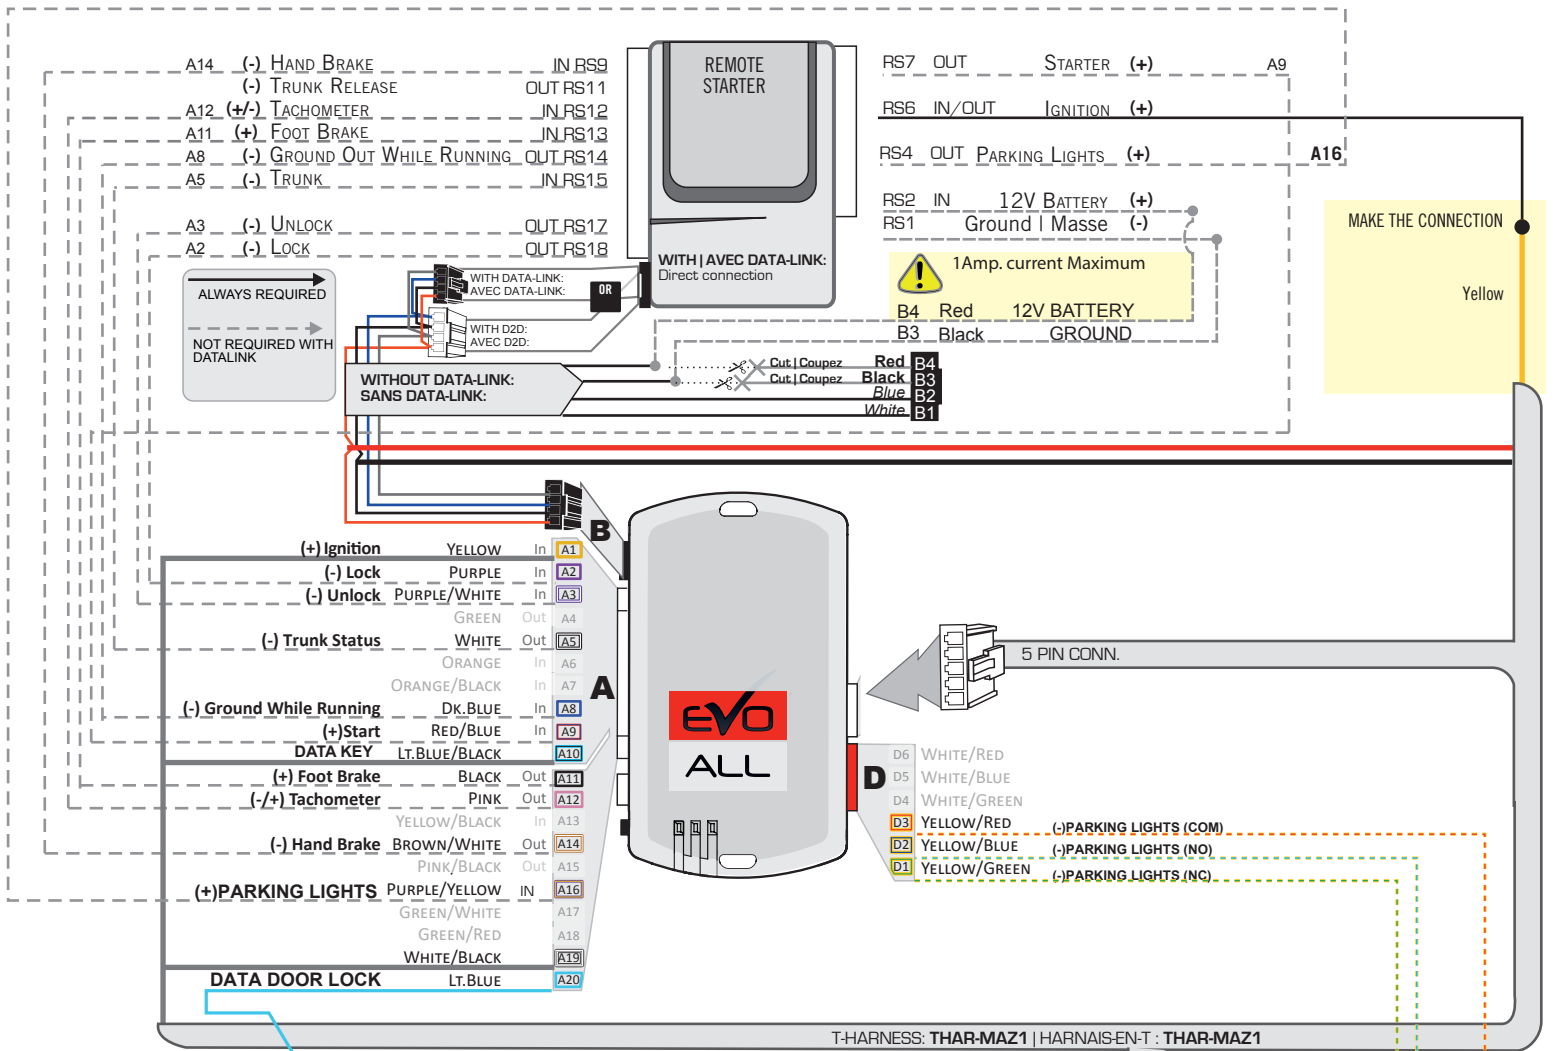

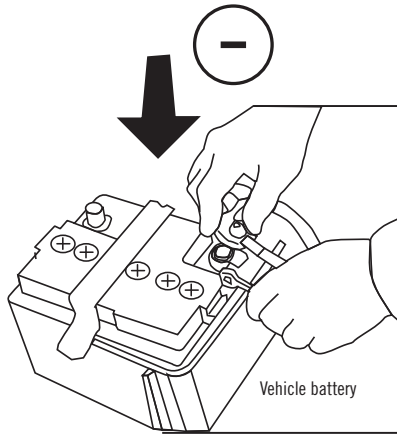

**Reconnect** the (-) terminal of the battery.

CONTINUED NEXT PAGE

# x3 max.

**Do not program more than 3 modules on the same vehicle.**


If more than 3 modules are programmed to a vehicle, it is possible that the remote car starter will never be functional on this vehicle.

If all programming steps were successful and the vehicle cannot be remote started :

- Double check all connections using the installation diagram above as a reference.


If no connection errors can be found then please contact technical support assistance.

**DO NOT REPROGRAM ANOTHER MODULE UNLESS INSTRUCTED TO DO SO BY TECHNICAL SUPPORT.**

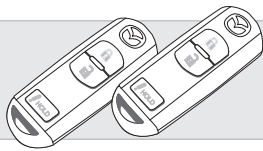

**Make sure** to have two valide vehicle key.


1

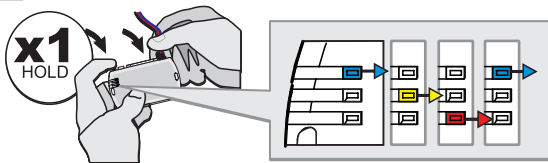

**Press and hold** the programming button:  
**Connect** the 4-PIN Data-link harness (Black connector).


↳ The Blue, Red, Yellow and Blue & Red LEDs will alternatively illuminate.

2

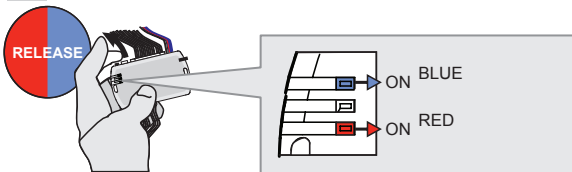


**Release** the programming button when the Blue & Red LEDs are ON.

 *If the LED are not solid BLUE and RED disconnect the 4-PIN Data-link harness (Black connector) and go back to step1.*




3

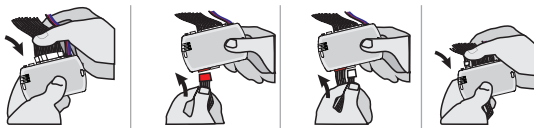

**Connect** the required remaining harnesses.

4

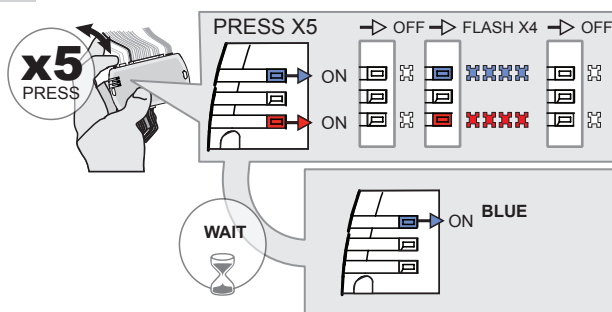

**Press and release** the programming button five times (5x).


↳ The Red & Blue LEDs will alternate between 4 flashes and a pause.

↳ **Wait** for the Blue LED to turn ON.

KEY BYPASS PROGRAMMING PROCEDURE 2/5




5

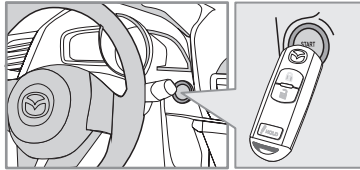


Place the 1st OEM remote close to the front of the START/STOP button exactly as shown.

6

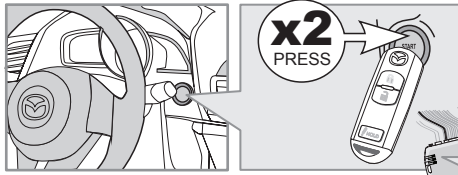


Press the START/STOP button twice to activate the vehicle's Ignition.

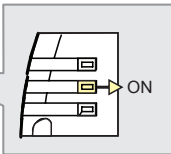


↳ The Yellow LED will turn ON.

7

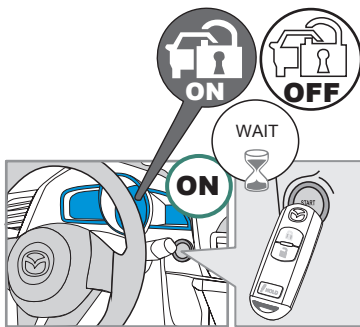

 
If the Blue LED is ON solid disconnect the 4-PIN Data-link harness (Black connector) and go back to step 1.




Wait for the security indicator to turn OFF (around 3 seconds).

8

**IMMEDIATELY**

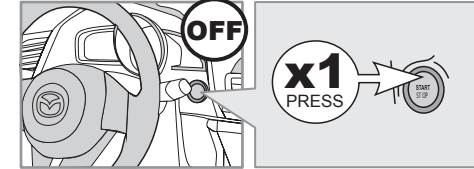


Press the START/STOP button once to deactivate the vehicle's Ignition.

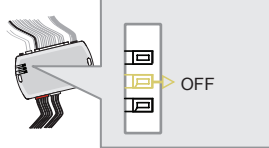

↳ The Yellow Led will turn OFF.




9

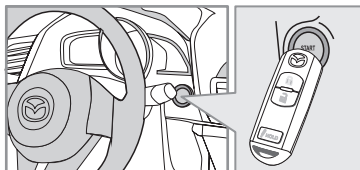


Place the 2nd OEM remote close to the front of the START/STOP button exactly as shown.

10

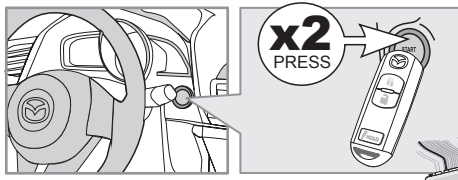


Press the START/STOP button twice to activate the vehicle's Ignition.

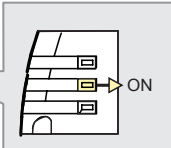


↳ The Yellow LED will turn ON.

KEY BYPASS PROGRAMMING PROCEDURE 3/6

**11**




KEY #2

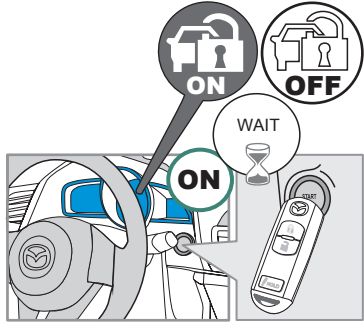

Wait for the security indicator to turn OFF (around 3 seconds).


---

**12**

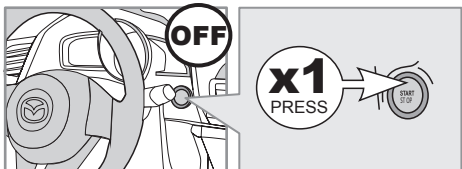


IMMEDIATELY

Press the START/STOP button once to deactivate the vehicle's Ignition.

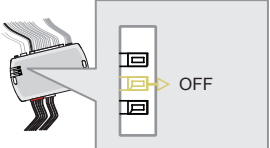


↳ The Yellow Led will turn OFF.


**13**

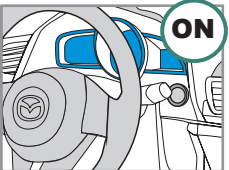

The vehicle's ignition will turn ON

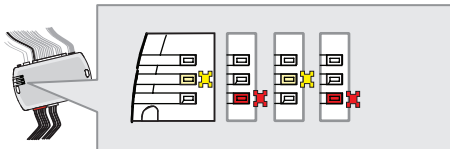


↳ The Yellow and Red LED's will alternatively illuminate.

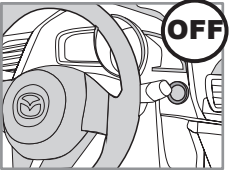

The vehicle's Ignition will turn OFF.


**14**

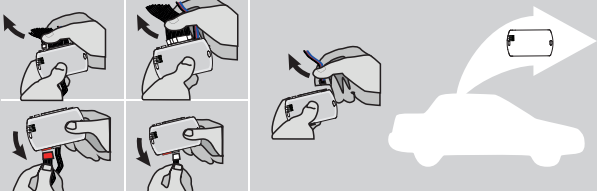

Disconnect all the connectors and after the Data-Link (4-pins) connector.


**KEY BYPASS PROGRAMMING PROCEDURE 4/6**

15

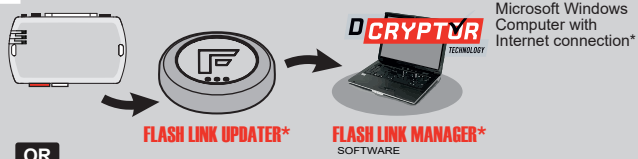


Use the tool:  
**FLASH LINK UPDATER** or  
**FLASH LINK MOBILE**  
to visit the DCryptor menu.

OR

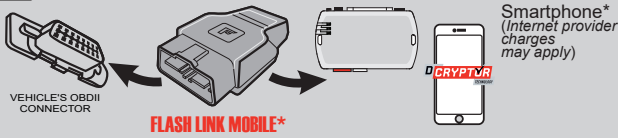

\*Parts required (not included)

16

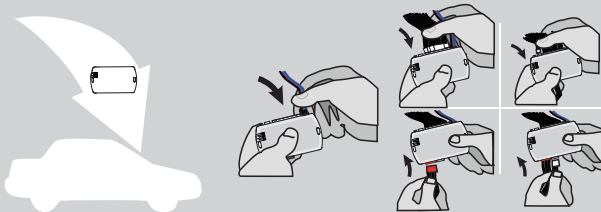


**AFTER DCRYPTOR PROGRAMMING COMPLETED**  
Go back to the vehicle and **reconnect** the 4-Pin (Data-Link) connector and after, all the remaining connector.

17



Repeat step 1 to 12.

18

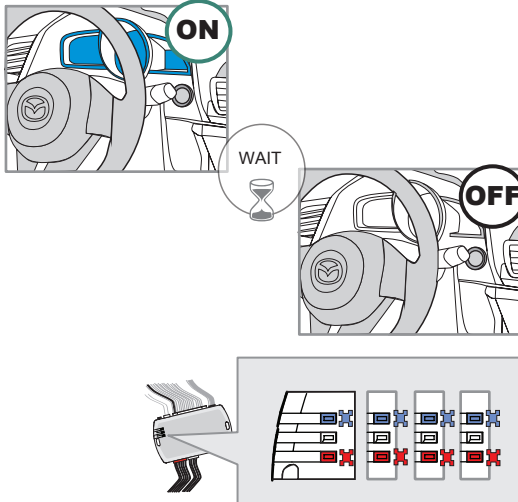


The vehicle's ignition will turn ON

The vehicle's Ignition will turn OFF.


↳ The Blue and Red LEDs will flash.

 19



Disconnect all Harness

20

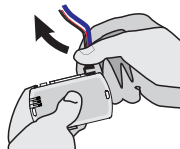


Next:

Disconnect the 4-PIN Data-link harness (Black connector).

CAN PROGRAMMING PROCEDURE


21

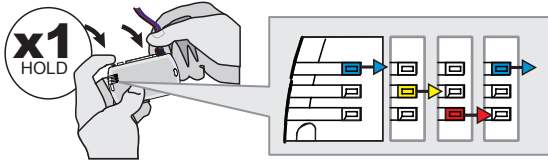

Press and hold the programming button:  
Connect the 4-PIN Data-link harness (Black connector).


↳ The Blue, Red, Yellow and Blue & Red LEDs will alternatively illuminate.

22

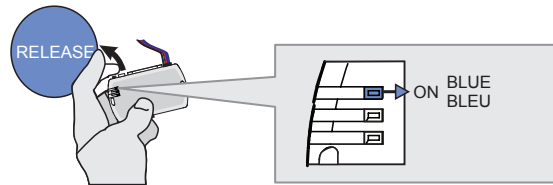


Release the programming button when the Blue LED is ON.

 If the Blue LED is not ON solid disconnect the 4-PIN Data-link harness (Black connector).



23

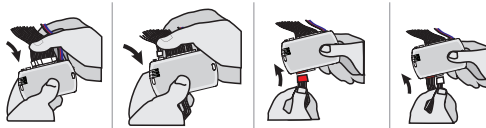


Connect the required remaining harnesses.

24




Press the START/STOP button twice to turn ON the vehicle's Ignition.

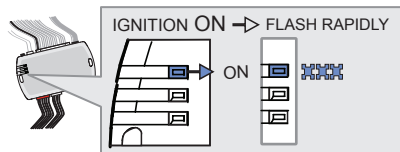


↳ The Blue LED will flash rapidly.

25

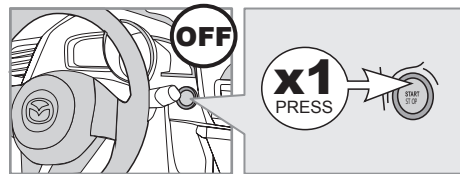

Press the START/STOP button once to turn OFF the vehicle's Ignition.

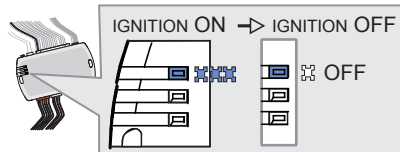


↳ The Blue LED will turn OFF.



The module is now programmed.



REMOTE STARTER FUNCTIONALITY

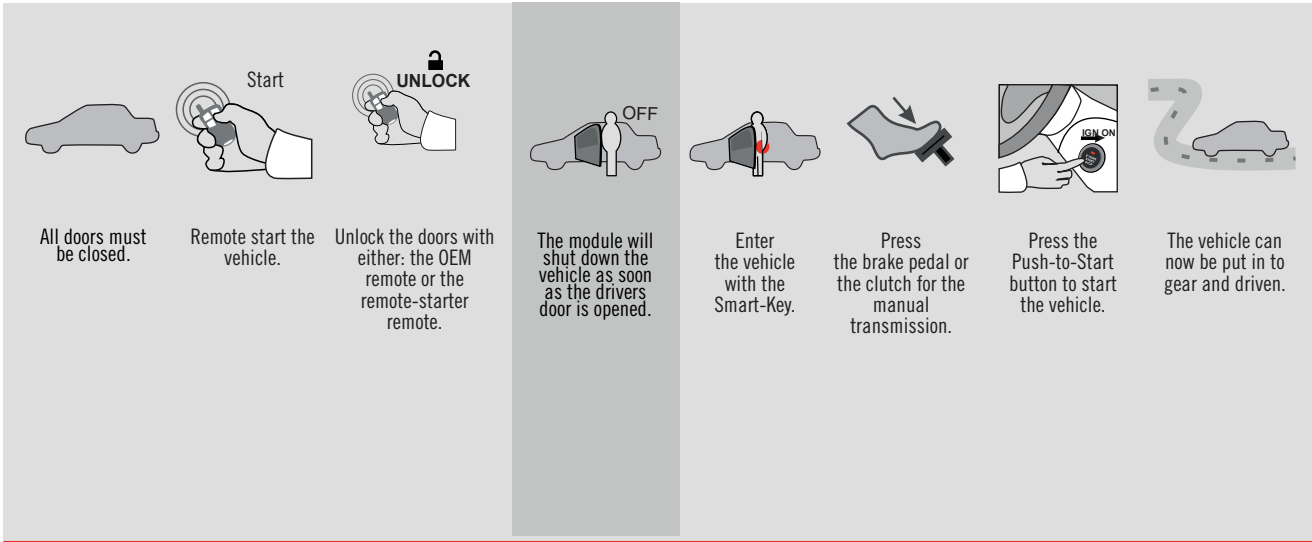

**CX-3** AUTOMATIC TRANSMISSION ONLY

ADDENDUM - SUGGESTED WIRING CONFIGURATION



**ONLY COMPATIBLE WITH AUTOMATIC TRANSMISSION VEHICLES.**



Vehicle functions supported in this diagram (functional if equipped)

VEHICLE	YEARS	Immobilizer bypass	Lock	Unlock	Parking lights	Tachometer	Door Status	Trunk Status	Hand-Brake Status	Foot-Brake Status	OEM Remote monitoring
<b>MAZDA</b>											
CX-3	Push-to-Start - Automatic transmission 2016	•	•	•	•	•	•	•	•	•	•



HARDWARE VERSION

FIRMWARE VERSION

MINIMUM **6**

**71.[35]**

FORD MINIMUM



**Parts required** (Not included)

- 1X 10 AMP Fuse
- 1x Diode 1A
- 1X 1K Ohm Resistor (with doorlock)

**FLASH LINK MANAGER**

Software version 3.52 and more




**FLASH LINK UPDATER 2**

- 1X Microsoft Windows Computer & Internet connection




DESCRIPTION |



① Under steering column, START-STOP unit

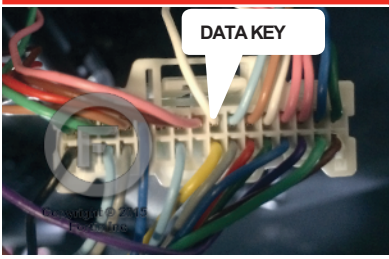


③ At parking lights switch

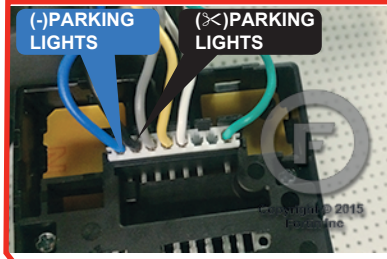


⑤ BCM High connector above driver kick panel

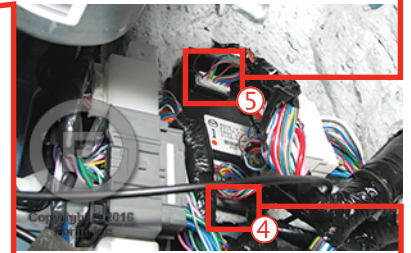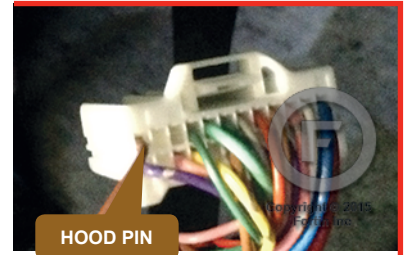

④ BCM High connector above driver kick panel

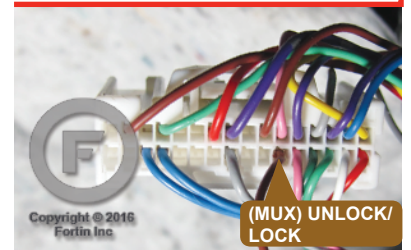

**AUTOMATIC TRANSMISSION WIRING CONNECTION |**

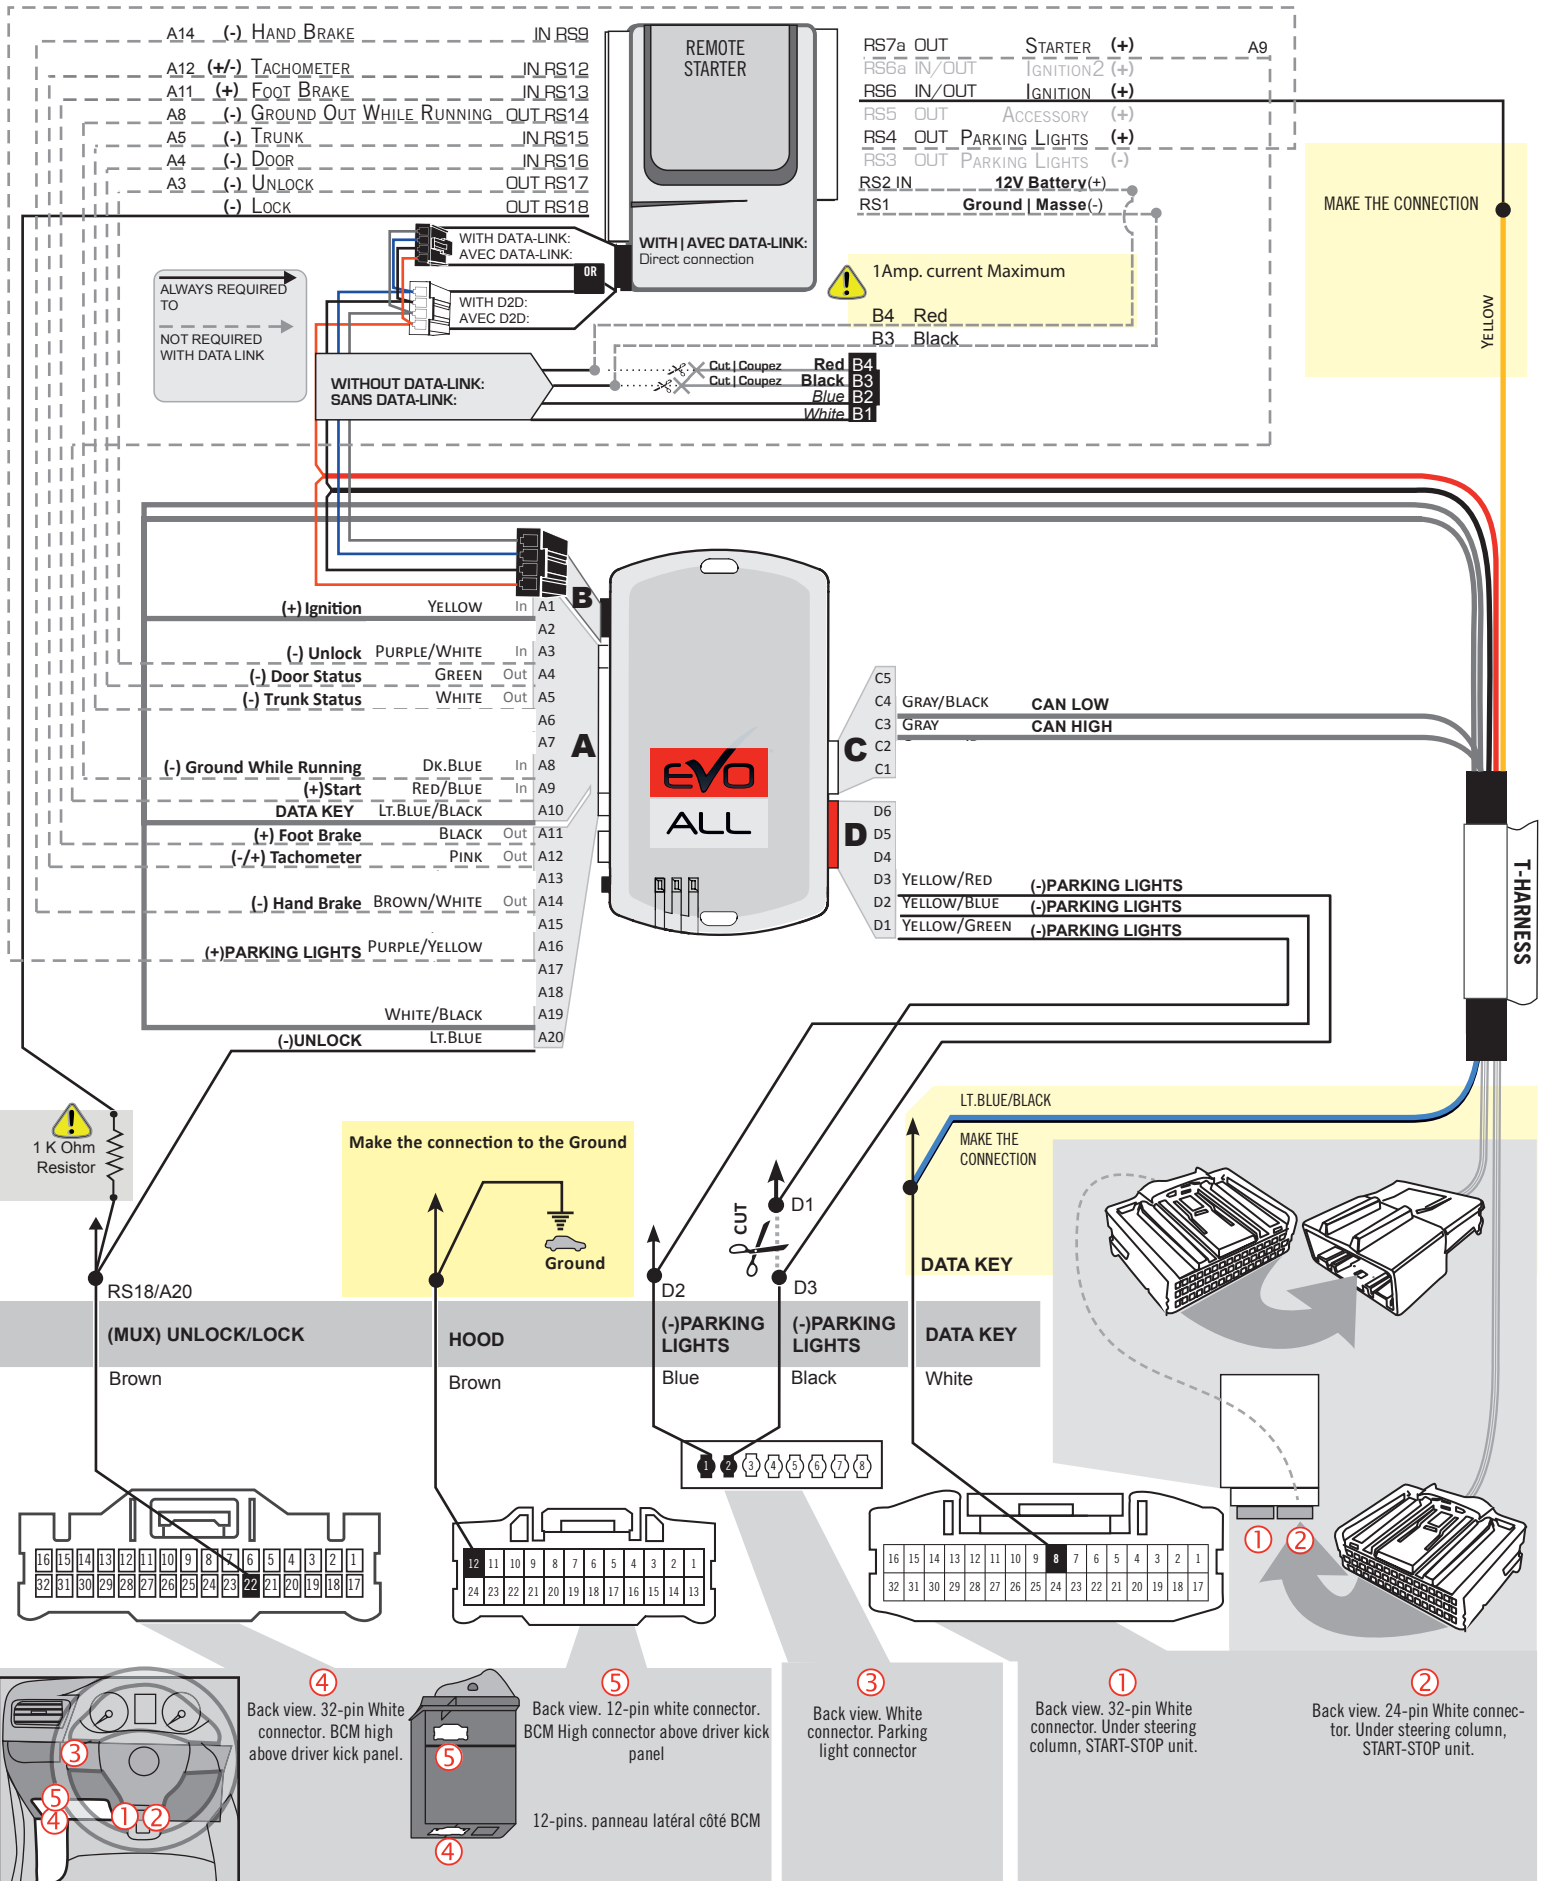

# x3 max.


**Do not program more than 3 modules on the same vehicle.**

If more than 3 modules are programmed to a vehicle, it is possible that the remote car starter will never be functional on this vehicle.

If all programming steps were successful and the vehicle cannot be remote started :


- Double check all connections using the installation diagram above as a reference.

If no connection errors can be found then please contact technical support assistance.

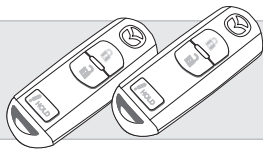

**Make sure** to have two valide vehicle key.


1

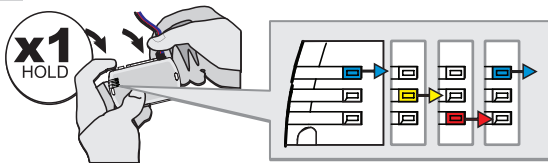

**Press and hold** the programming button:  
**Connect** the 4-PIN Data-link harness (Black connector).


↳ The Blue, Red, Yellow and Blue & Red LEDs will alternatively illuminate.

2

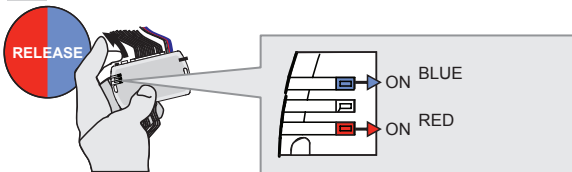


**Release** the programming button when the Blue & Red LEDs are ON.

 *If the LED are not solid BLUE and RED disconnect the 4-PIN Data-link harness (Black connector) and go back to step1.*




3

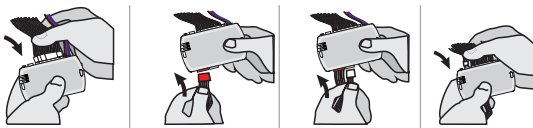

**Connect** the required remaining harnesses.

4

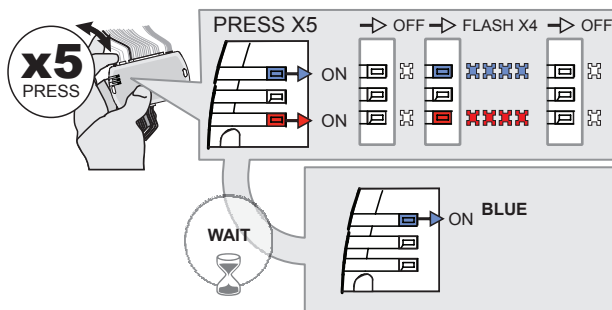

**Press and release** the programming button five times (5x).

↳ The Red & Blue LEDs will alternate between 4 flashes and a pause.


↳ **Wait** for the Blue LED to turn ON.

KEY BYPASS PROGRAMMING PROCEDURE 2/5 |



KEY #1

5

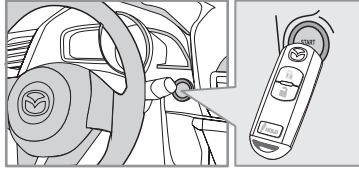


Place the 1st OEM remote close to the front of the START/STOP button exactly as shown.

6




Press the START/STOP button twice to activate the vehicle's Ignition.

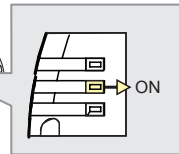


↳ The Yellow LED will turn ON.

7

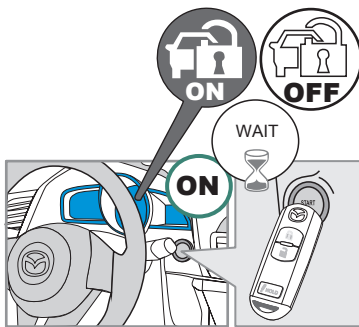

 
If the Blue LED is ON solid disconnect the 4-PIN Data-link harness (Black connector) and go back to step 1.




Wait for the security indicator to turn OFF (around 3 seconds).

8

**IMMEDIATELY**

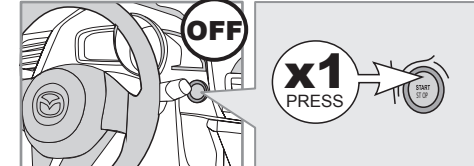

Press the START/STOP button once to deactivate the vehicle's Ignition.

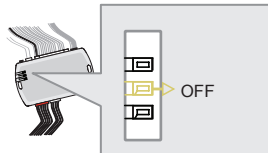


↳ The Yellow Led will turn OFF.



KEY #2

9

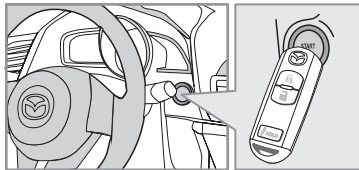


Place the 2nd OEM remote close to the front of the START/STOP button exactly as shown.

10




Press the START/STOP button twice to activate the vehicle's Ignition.

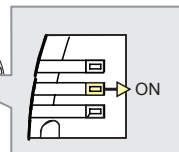


↳ The Yellow LED will turn ON.

KEY BYPASS PROGRAMMING PROCEDURE 3/5 |





**KEY#2**

**11**

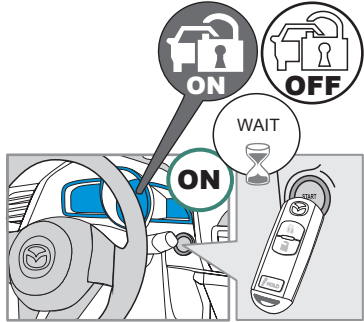

Wait for the security indicator to turn OFF (around 3 seconds).

**12**

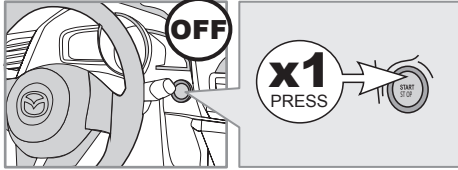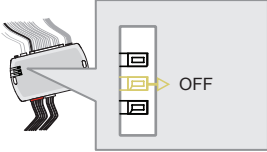



**IMMEDIATELY**


Press the START/STOP button once to deactivate the vehicle's Ignition.

↳ The Yellow Led will turn OFF.


**13**

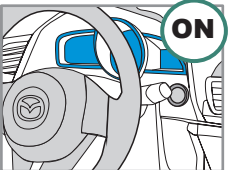

The vehicle's ignition will turn ON

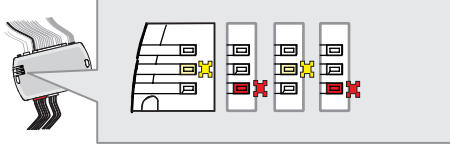


↳ The Yellow and Red LED's will alternatively illuminate.

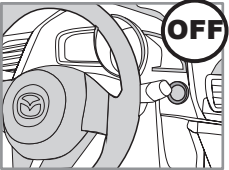

The vehicle's Ignition will turn OFF.


**14**

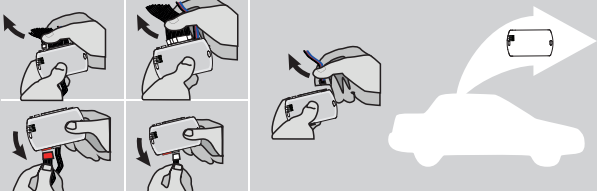

**Disconnect** all the connectors and after the Data-Link (4-pins) connector.

KEY BYPASS PROGRAMMING PROCEDURE 4/5 |

15

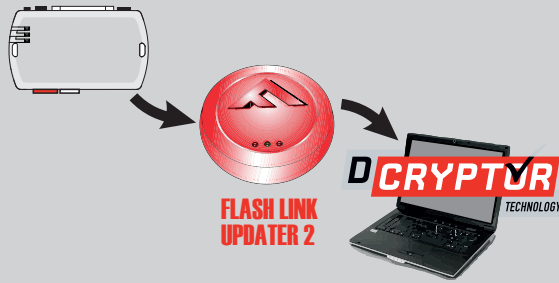

Connect the module to the FLASH LINK UPDATER 2 and visit the DCRYPTOR menu in the Flash-Link Manager.

Parts required (not included)




**FLASH LINK UPDATER 2**

**FLASH LINK MANAGER**  
SOFTWARE | PROGRAMME



Microsoft Windows Computer with Internet connection

16

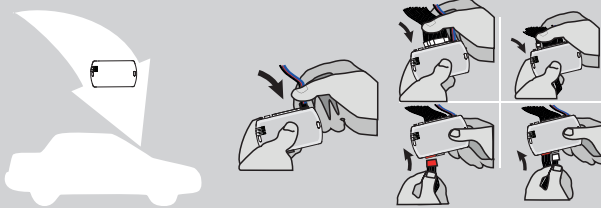

**AFTER DCRYPTOR PROGRAMMING COMPLETED**  
Go back to the vehicle and **reconnect** the 4-Pin (Data-Link) connector and after, all the remaining connector.


17




**1 - 12**

Repeat step 1 to 12.


18

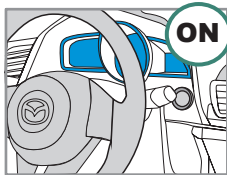

The vehicle's ignition will turn ON

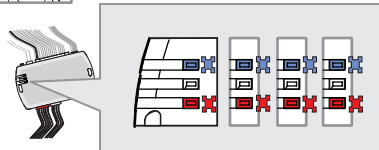


↳ The Blue and Red LEDs will flash.

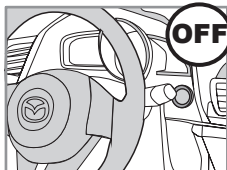


The vehicle's Ignition will turn OFF.

 19



Disconnect all Harness

20

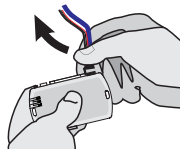

et ensuite:

Disconnect the 4-PIN Data-link harness (Black connector).




KEY BYPASS PROGRAMMING PROCEDURE 5/5 |

CAN PROGRAMMING PROCEDURE

21

**CAUTION FOR: EVO-ALARM OPTION**


If the module GREEN (A4) wire is connected to the HORN make sure that the option G1 (EVO-ALARM) is enabled before CAN programming.

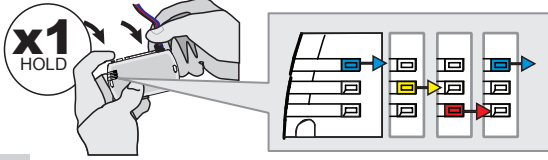

**Press and hold** the programming button:  
**Connect** the 4-PIN Data-link harness (Black connector).


↳ The Blue, Red, Yellow and Blue & Red LEDs will alternatively illuminate.

22

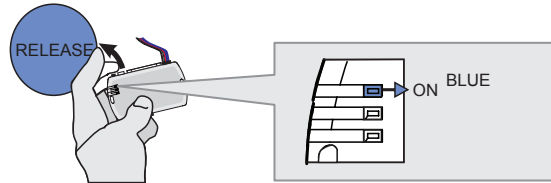


**Release** the programming button when the Blue LED is ON.

 If the Blue LED is not ON solid disconnect the 4-PIN Data-link harness (Black connector).



23

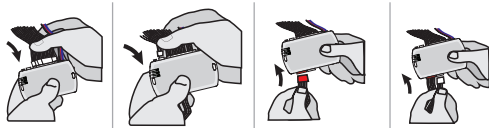


**Connect** the required remaining harnesses.

24




**Press** the START/STOP button twice to activate the vehicle's Ignition.

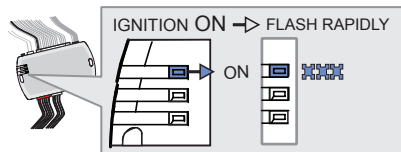


↳ The Blue LED will flash rapidly.

25

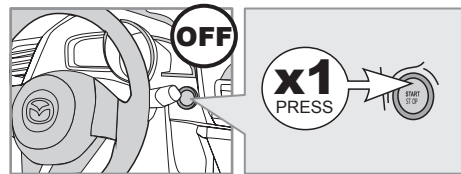

**Press** the START/STOP button once to deactivate the vehicle's Ignition.

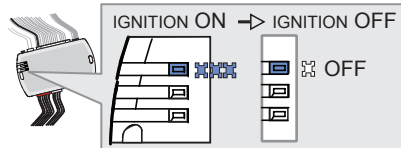

↳ The Blue LED will turn OFF.



The module is now programmed.

REMOTE STARTER FUNCTIONALITY |



All doors must be closed.



Do not remote-start with the OEM remote inside the vehicle.



Never remote-start with a passenger inside the vehicle.




**Remote start** the vehicle.




*The module will shut down the vehicle as soon as a door is opened.*


THAR-MAZ1 THARNESH INSTALLATION WITH 2 KEYS PROGRAMMING


ADDENDUM - SUGGESTED WIRING CONFIGURATION

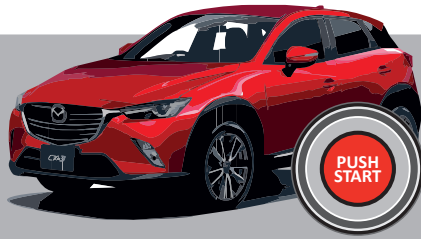VEHICLE	YEARS	Vehicle functions supported in this diagram (functional if equipped)													
		Immobilizer bypass	T-Harness	Lock	Unlock	Arm	Disarm	Tachometer	Door Status	Trunk Status	Hood Status protection remote start	Hand-Brake Status	Foot-Brake Status	OEM Remote monitoring	
															
<b>MAZDA</b>															
CX-3 <i>Push-to-Start - Automatic transmission</i>	2016-2021	•	•	•	•	•	•	•	•	•	•	•	•	•	•


	FIRMWARE VERSION <b>85.[11]</b> MINIMUM	To add the firmware version and the options, use the <b>FLASH LINK UPDATER</b> or <b>FLASH LINK MOBILE</b> tool, sold separately.
---	---	---

<p><b>IF THE VEHICLE IS NOT EQUIPPED WITH FUNCTIONAL HOOD PIN:</b></p>	<b>A11</b>	<b>OFF</b>	Hood trigger (Output Status).

	Program bypass option:	UNIT OPTION	DESCRIPTION
		<b>C1</b>	OEM Remote status (Lock/Unlock) monitoring

	Program bypass option (if equipped with OEM alarm):	UNIT OPTION	DESCRIPTION
		<b>D2</b>	Unlock before / Lock after (Disarm OEM alarm)


**NOTES**

 **THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.**

 **Parts required (Not included)**

1X 10 AMP Fuse

**MANDATORY INSTALL**

\*HOOD PIN  **HOOD STATUS:** THE HOOD PIN SWITCH MUST BE INSTALLED IF THE VEHICLE CAN BE REMOTE STARTED WITH THE HOOD OPEN, SET FUNCTION **A11** TO OFF.

**A11** **OFF** **NON**


**Notice:** the installation of safety elements are mandatory. The hood pin is an essential security element and must be installed.

THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.


DESCRIPTION




① Under steering column, START-STOP unit

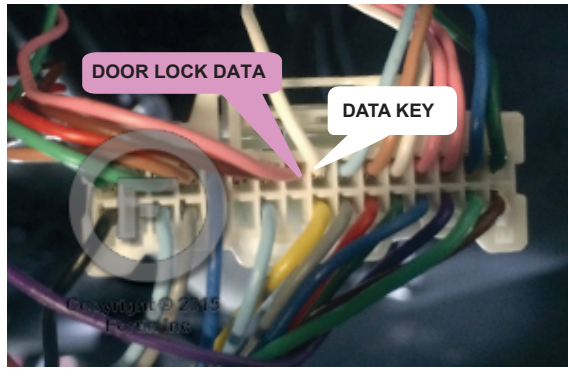



③ At parking lights switch

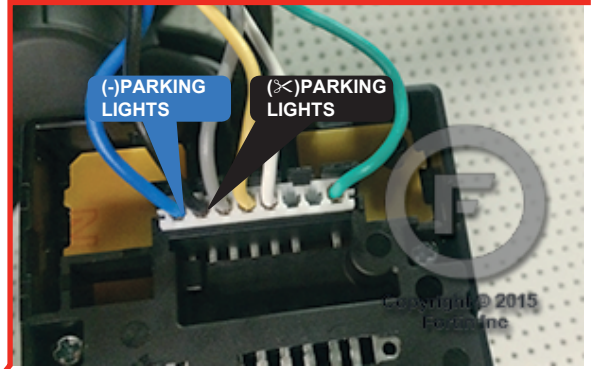

② Under steering column, START-STOP unit

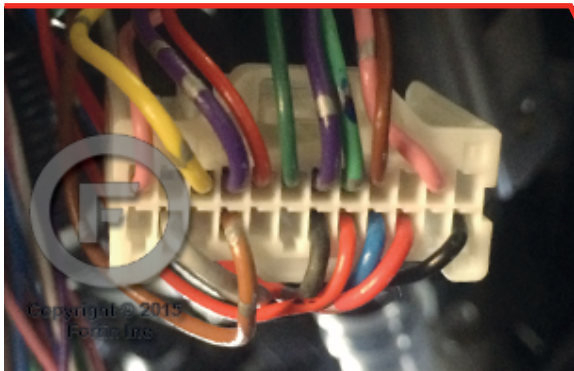

④ BCM High connector above driver kick panel

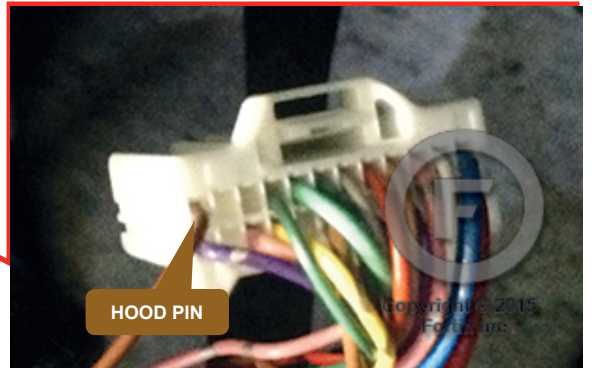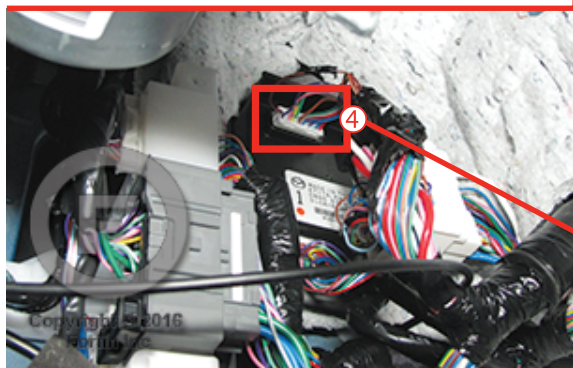




# ATTENTION

Before disconnecting a module, a computer or a control unit from a vehicle: Always disconnect the negative terminal from the vehicle's battery.


In these vehicles, the factory keyless entry module is sensitive to interference and may cease to operate if some precautions are not taken. Disconnect the (-) terminal of the battery prior to disconnecting the connectors at the smartkey module below the steering wheel to avoid damage to the smartkey entry module.

1

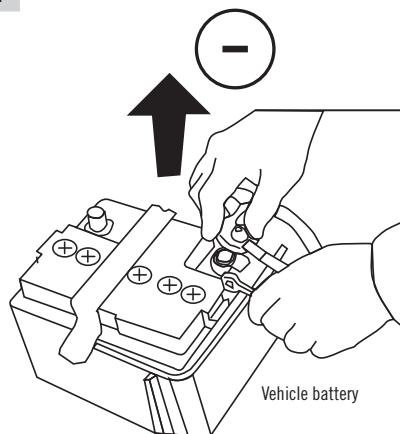


Disconnect the (-) terminal of the battery.

2

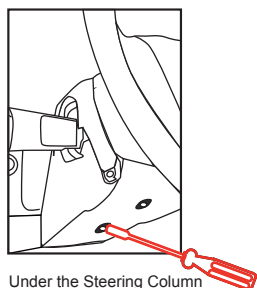


Under the Steering Column

1 Unscrew.

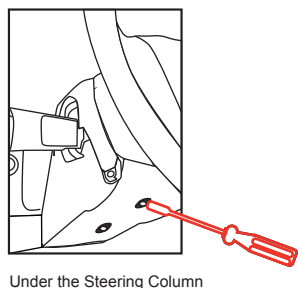


Under the Steering Column

2 Unscrew

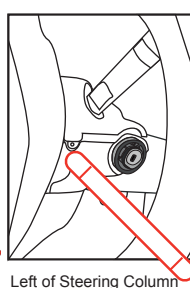


Left of Steering Column

3 Onclip

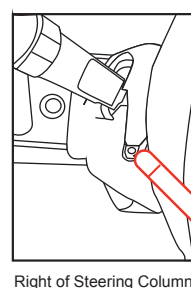

Right of Steering Column

4 Onclip

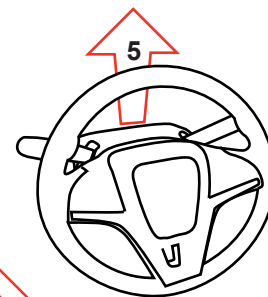


5 Gently pull up the cover of the steering column.  
Tirez doucement sur le couvercle de la colonne de direction.

3


Make the following connections.

CONTINUED NEXT PAGE

4

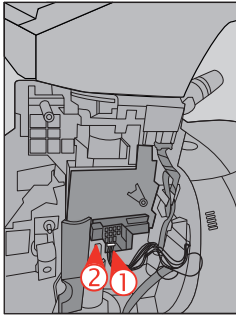

Under steering column, START-STOP unit.

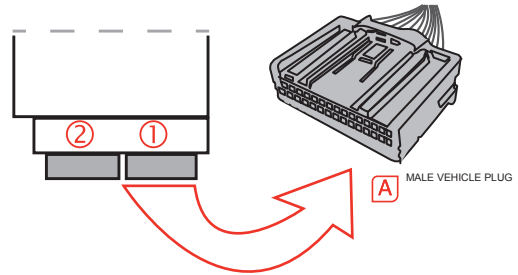


Disconnect the connector

A

5


Under steering column, START-STOP unit.

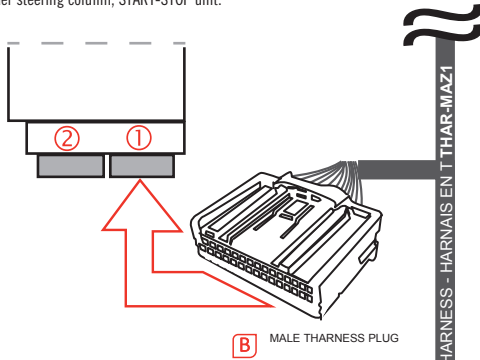

Connect the connector

B

6

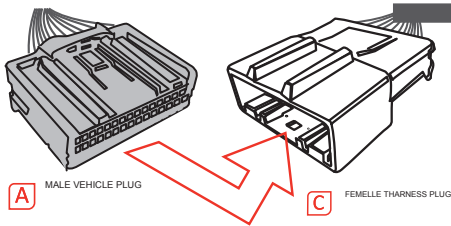

Connect the connector

A


into connector


C

7

Make other required connections.

**AUTOMATIC TRANSMISSION WIRING CONNECTION**

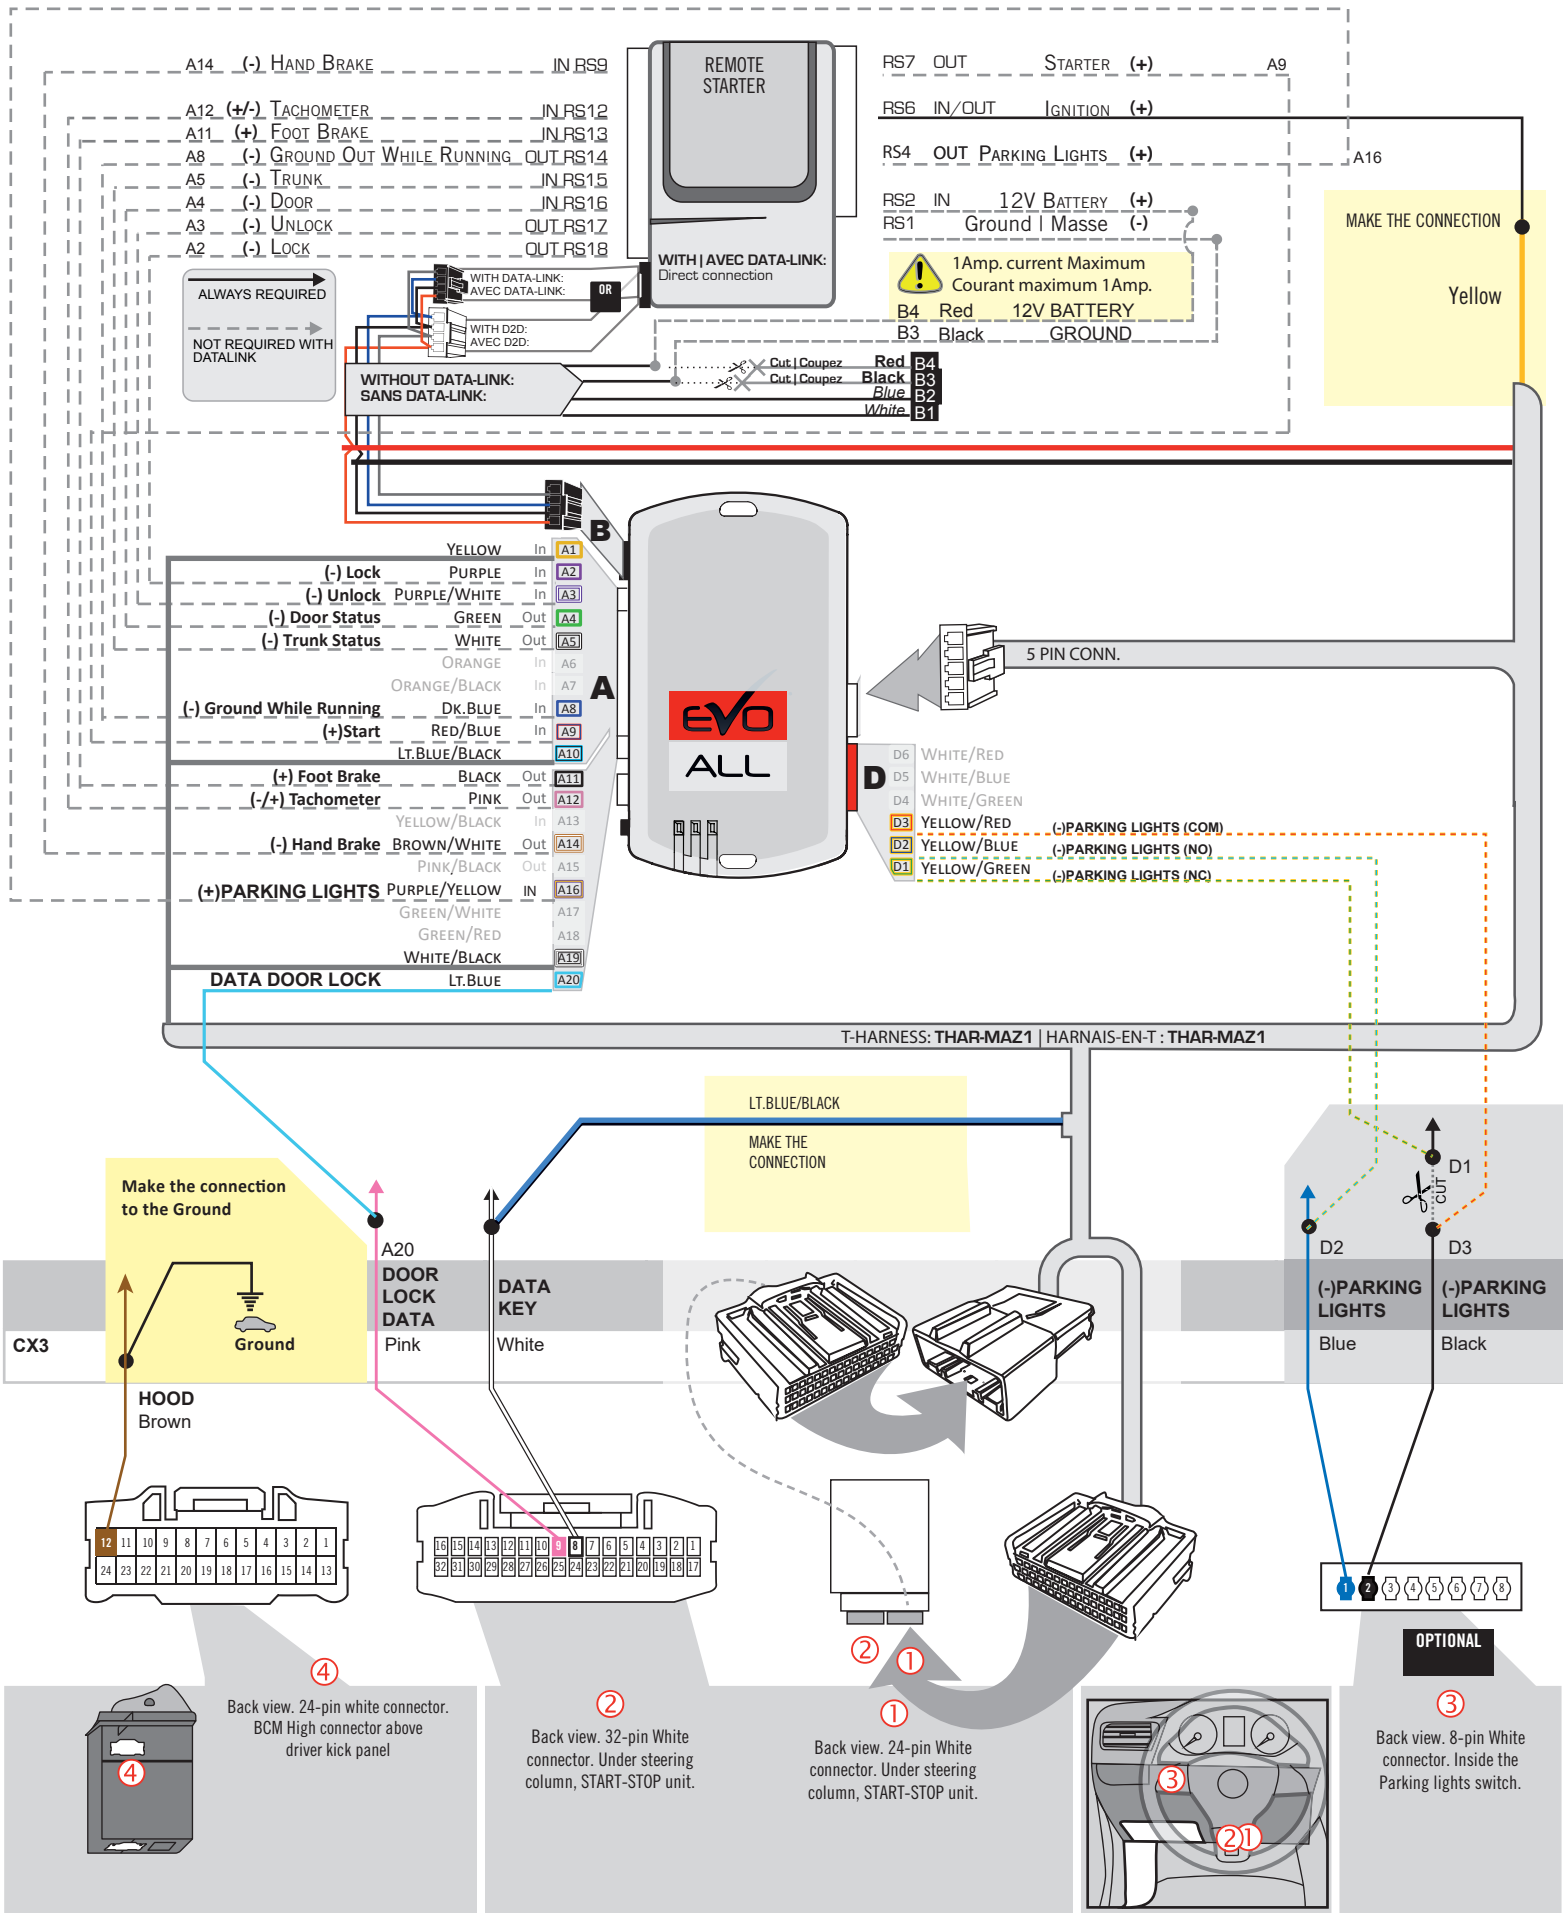

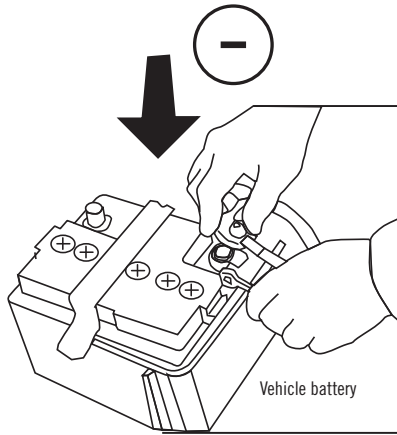

**Reconnect** the (-) terminal of the battery.

CONTINUED NEXT PAGE



# x3 max.


**Do not program more than 3 modules on the same vehicle.**

If more than 3 modules are programmed to a vehicle, it is possible that the remote car starter will never be functional on this vehicle.

If all programming steps were successful and the vehicle cannot be remote started :


- Double check all connections using the installation diagram above as a reference.

If no connection errors can be found then please contact technical support assistance.

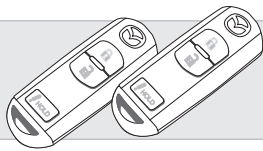

**Make sure** to have two valide vehicle key.


1

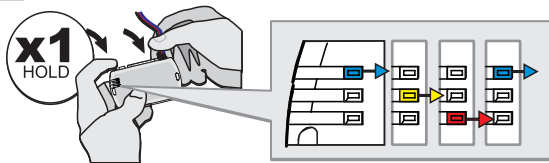

**Press and hold** the programming button:  
**Connect** the 4-PIN Data-link harness (Black connector).


↳ The Blue, Red, Yellow and Blue & Red LEDs will alternatively illuminate.

2

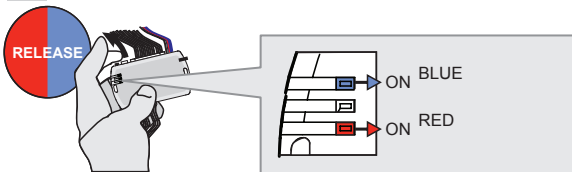


**Release** the programming button when the Blue & Red LEDs are ON.

 *If the LED are not solid BLUE and RED disconnect the 4-PIN Data-link harness (Black connector) and go back to step1.*




3

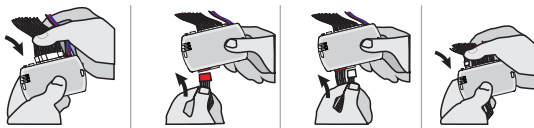

**Connect** the required remaining harnesses.

4

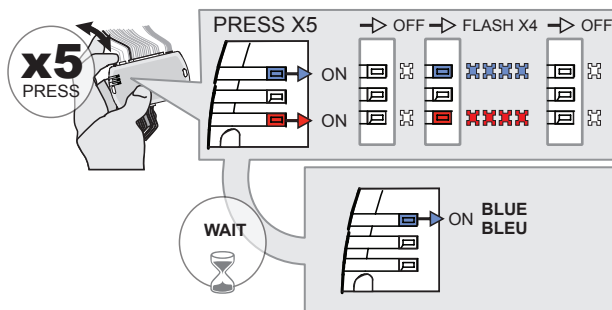

**Press and release** the programming button five times (5x).

↳ The Red & Blue LEDs will alternate between 4 flashes and a pause.


↳ **Wait** for the Blue LED to turn ON.

KEY BYPASS PROGRAMMING PROCEDURE 2/5




KEY #1

5

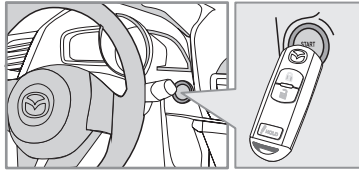


Place the 1st OEM remote close to the front of the START/STOP button exactly as shown.

6

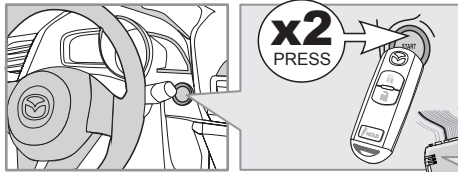


Press the START/STOP button twice to activate the vehicle's Ignition.

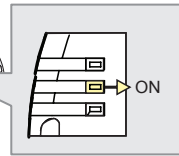


↳ The Yellow LED will turn ON.

7

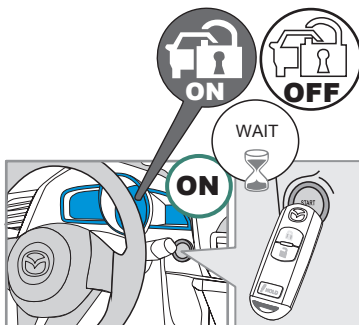


 If the Blue LED is ON solid disconnect the 4-PIN Data-link harness (Black connector) and go back to step 1.




Wait for the security indicator to turn OFF (around 3 seconds).

8

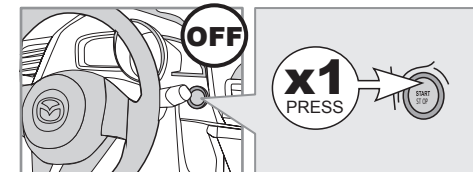

IMMEDIATELY

Press the START/STOP button once to deactivate the vehicle's Ignition.

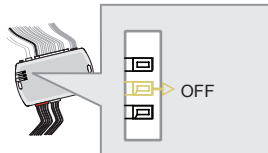


↳ The Yellow Led will turn OFF.



KEY #2

9

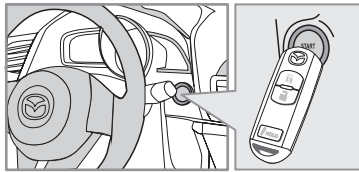


Place the 2nd OEM remote close to the front of the START/STOP button exactly as shown.

10




Press the START/STOP button twice to activate the vehicle's Ignition.

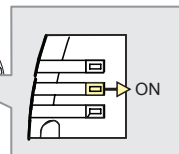


↳ The Yellow LED will turn ON.

KEY BYPASS PROGRAMMING PROCEDURE 3/6

**11**





KEY#2

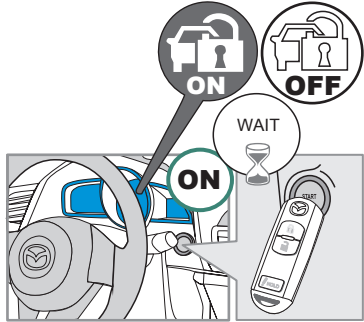

Wait for the security indicator to turn OFF (around 3 seconds).

**12**

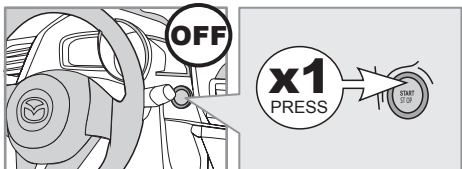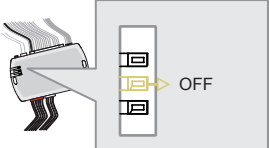



**IMMEDIATELY**


Press the START/STOP button once to deactivate the vehicle's Ignition.

↳ The Yellow Led will turn OFF.


**13**

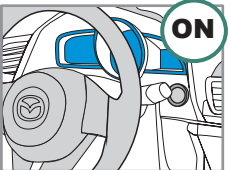

The vehicle's ignition will turn ON

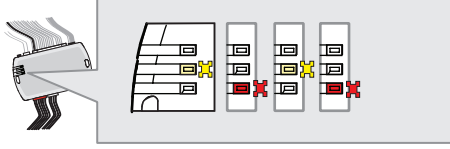



↳ The Yellow and Red LED's will alternatively illuminate.

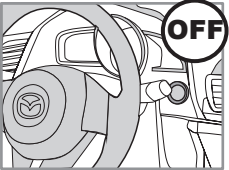

The vehicle's Ignition will turn OFF.

**14**

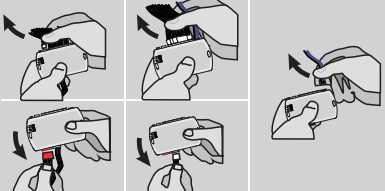


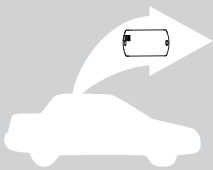

**Disconnect** all the connectors and after the Data-Link (4-pins) connector.

**KEY BYPASS PROGRAMMING PROCEDURE 4/6**


15

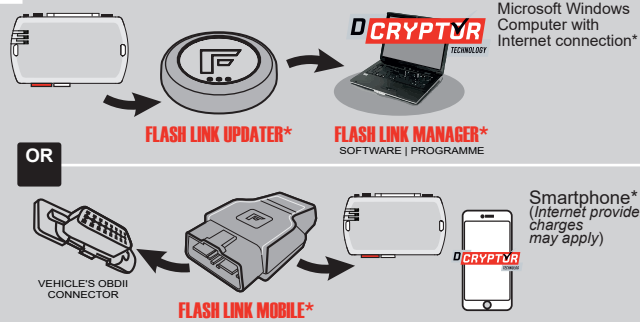

Use the tool:  
**FLASH LINK UPDATER** or  
**FLASH LINK MOBILE**  
to visit the DCryptor menu.

\*Parts required (not included)

16

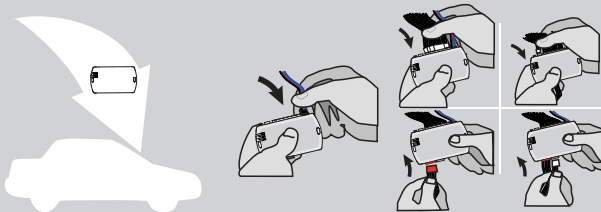


**AFTER DCRYPTOR PROGRAMMING COMPLETED**  
Go back to the vehicle and **reconnect** the 4-Pin (Data-Link) connector and after, all the remaining connector.

17

1 - 12
Repeat step 1 to 12.

18

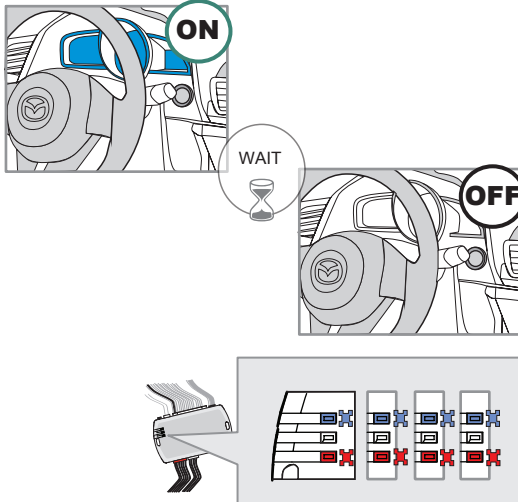


The vehicle's ignition will turn ON

The vehicle's Ignition will turn OFF.


↳ The Blue and Red LEDs will flash.

 19



Disconnect all Harness

20

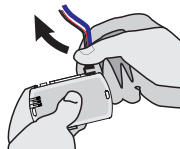


Next:

Disconnect the 4-PIN Data-link harness (Black connector).

CAN PROGRAMMING PROCEDURE


21

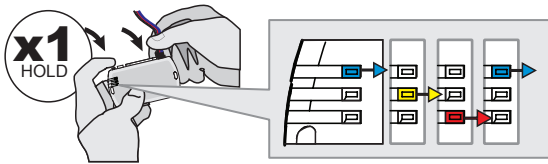

Press and hold the programming button:  
Connect the 4-PIN Data-link harness (Black connector).


↳ The Blue, Red, Yellow and Blue & Red LEDs will alternatively illuminate.

22

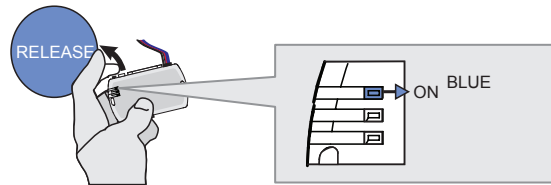


Release the programming button when the Blue LED is ON.

 If the Blue LED is not ON solid disconnect the 4-PIN Data-link harness (Black connector).




23

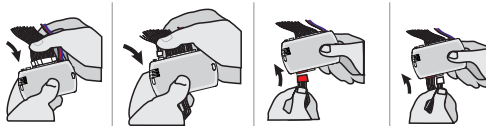


Connect the required remaining harnesses.

24

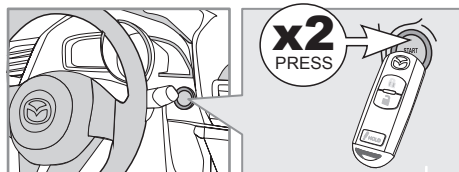


Press the START/STOP button twice to turn ON the vehicle's Ignition.

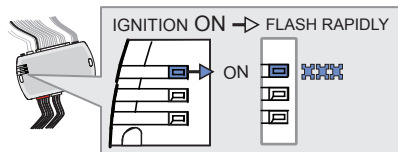


↳ The Blue LED will flash rapidly.

25

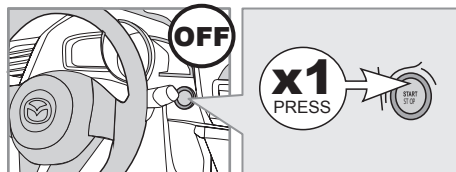

Press the START/STOP button once to turn OFF the vehicle's Ignition.

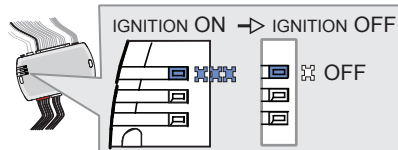


↳ The Blue LED will turn OFF.



The module is now programmed.

REMOTE STARTER FUNCTIONALITY |

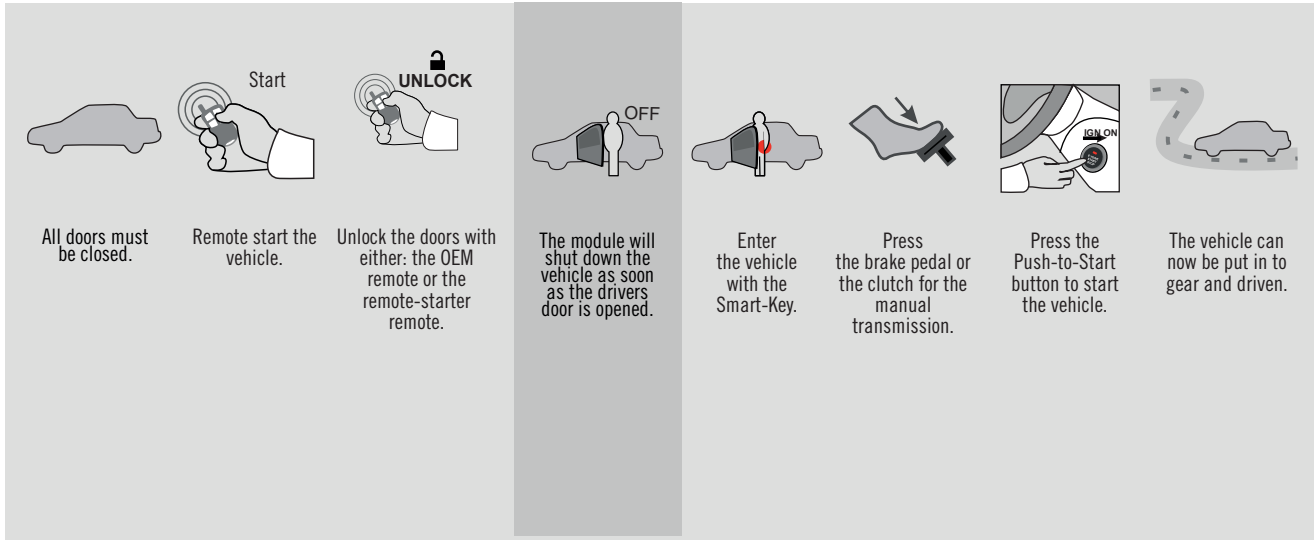


**MAZDA CX5 - T-HARNESS MAZDA**

ADDENDUM - SUGGESTED WIRING CONFIGURATION



**ONLY COMPATIBLE WITH AUTOMATIC TRANSMISSION VEHICLES.**

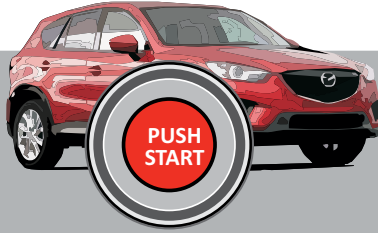

Vehicle functions supported in this diagram (functional if equipped)

VEHICLE	YEARS	Connection #			Immobilizer bypass	Lock	Unlock	Arm	Tachometer	Door Status	Trunk Status	Hood Status protection remote start	Hand-Brake Status	Foot-Brake Status	OEM Remote monitoring	Alarm mode
		REMOTE STARTER NO DOORLOCK	REMOTE STARTER & DOORLOCK CONTROL	VEHICLE WITHOUT OEM ALARM												
<b>MAZDA</b>																
CX5 <i>Push-to-Start - AT</i>	2013-2016	1	2	3	•	•	•	•	•	•	•	•	•	•	•	•

HARDWARE VERSION



MINIMUM

**6**

**71.[31]**

FORD MINIMUM



**Parts required** (Not included)

- 1X 10 AMP Fuse
- 1x Diode 1A
- 1X 1K Ohm Resistor (with doorlock)

**FLASH LINK MANAGER**

Software version 3.52 and more



**FLASH LINK UPDATER 2**

1X





Microsoft Windows Computer & Internet connection



DESCRIPTION


Under steering column, START-STOP unit.

① ②

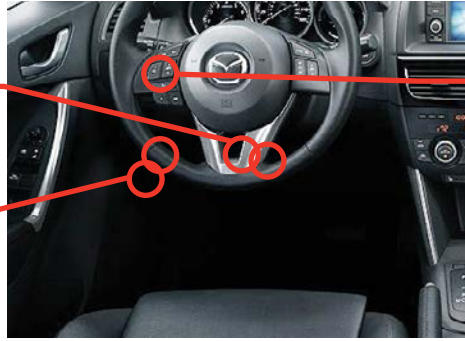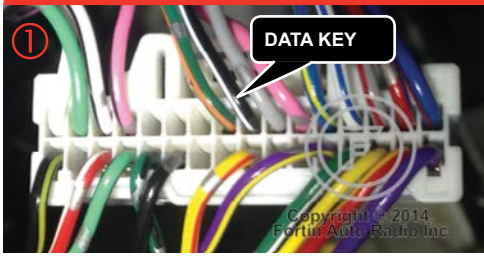


Parking Light connector

③

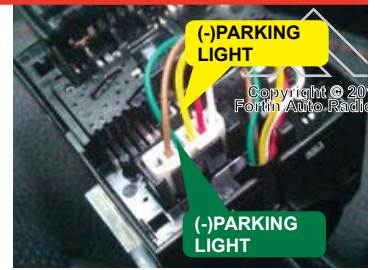


driver kick panel. - DOORLOCK

④ ⑤

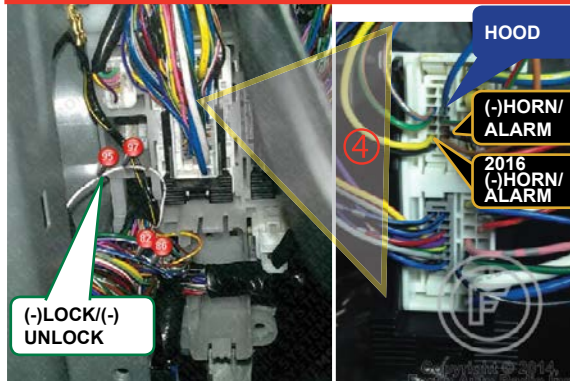


Engine compartment - without OEM ALARM

⑥ ⑦

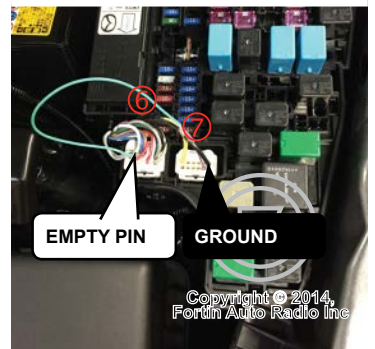



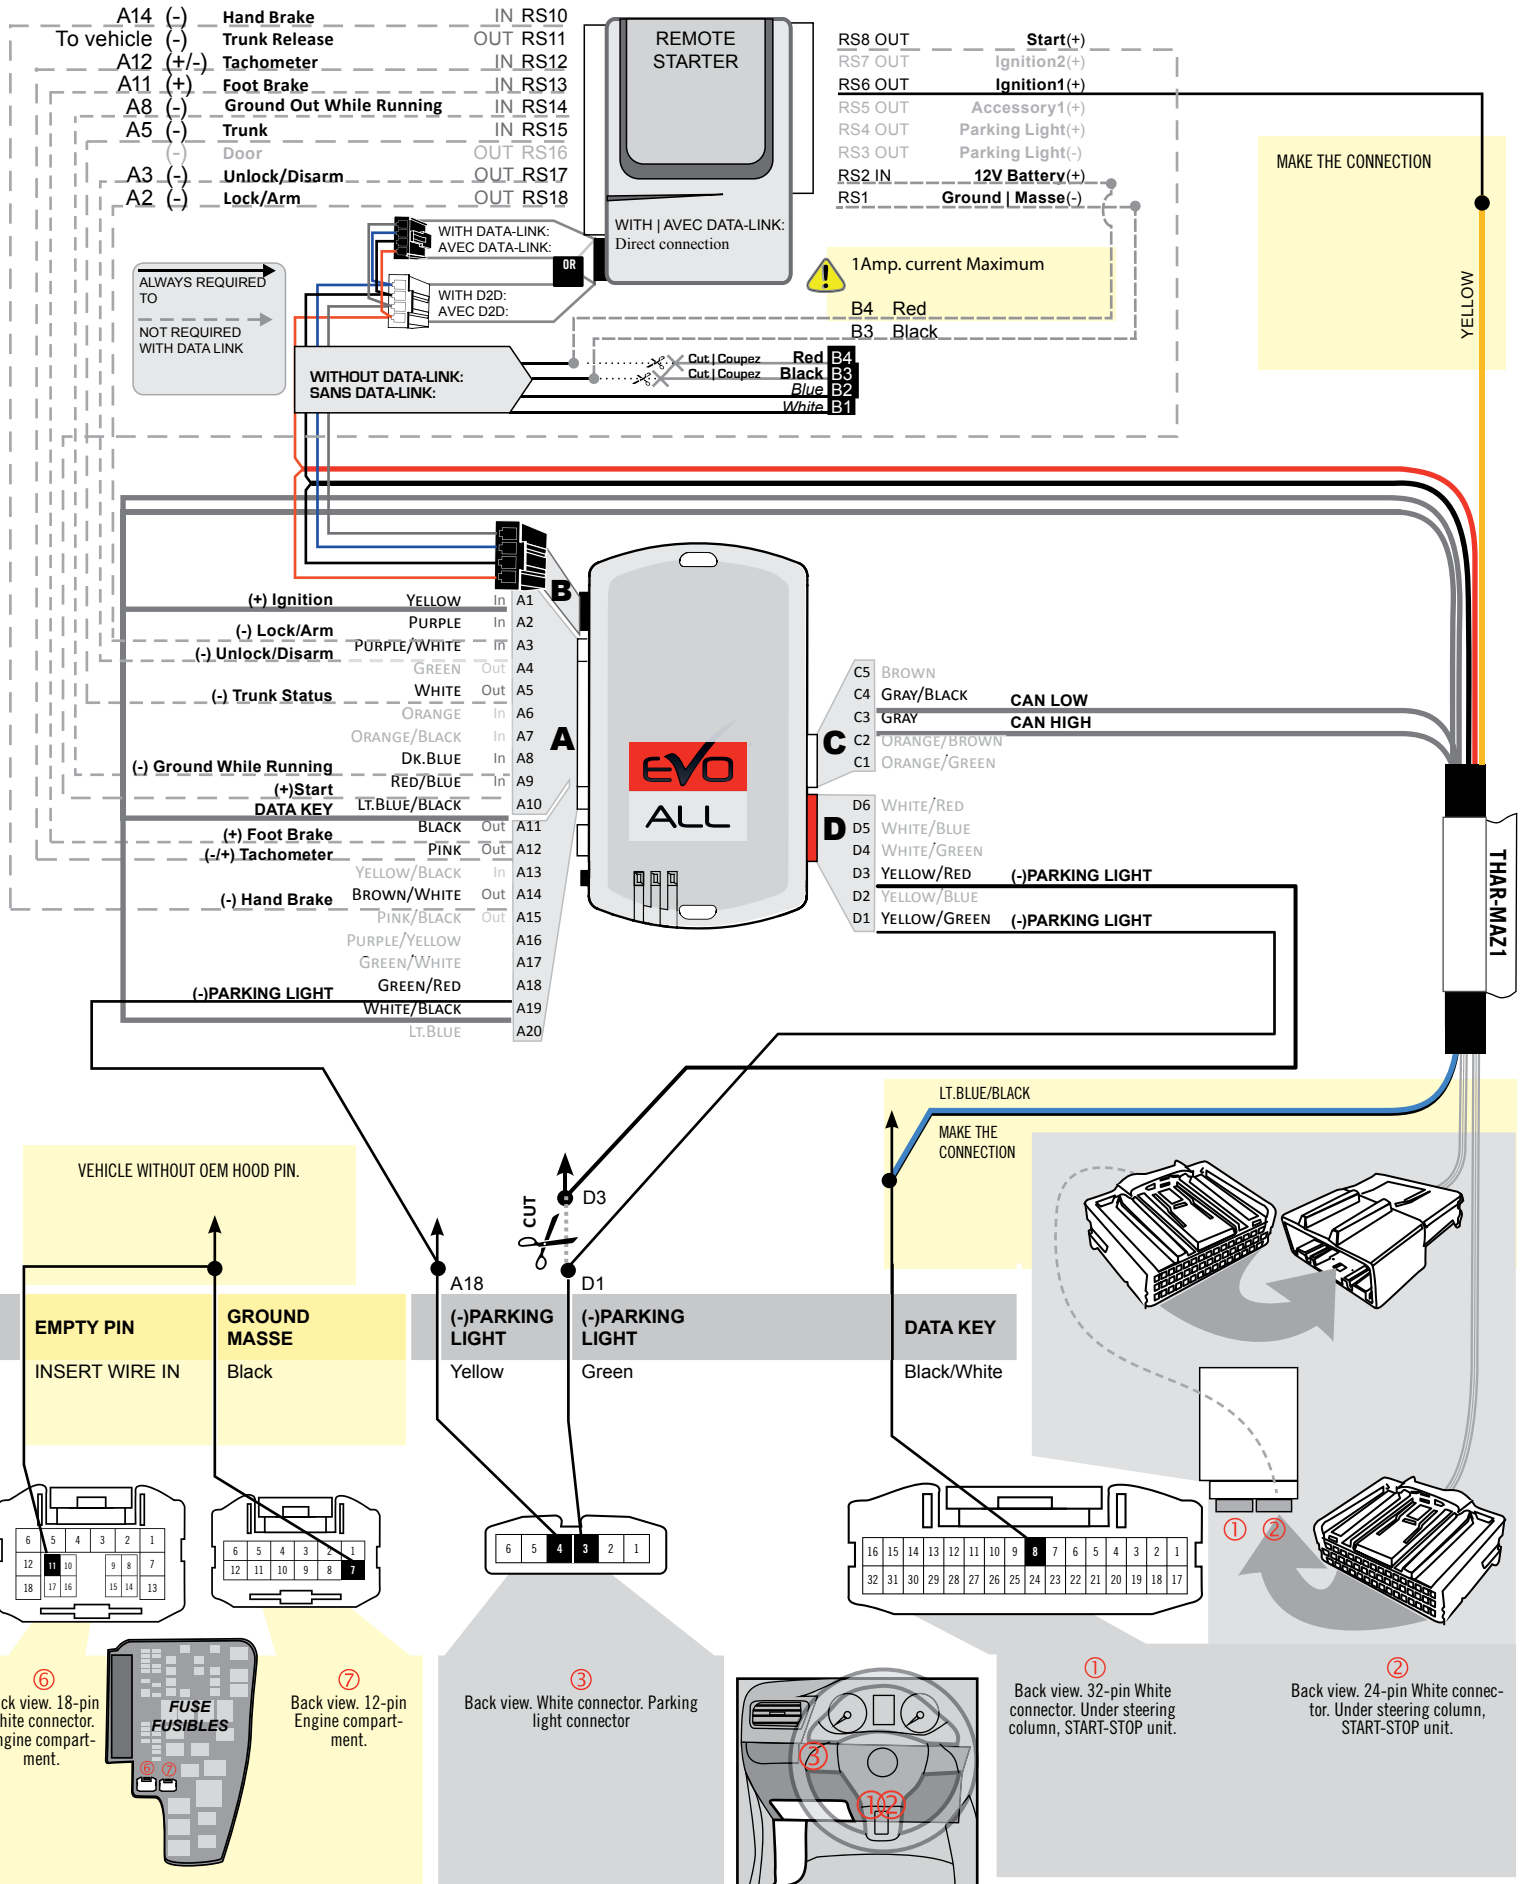



Program bypass option:

UNIT OPTION


DESCRIPTION


**C1**

OEM Remote status (Lock/Unlock) monitoring

**G1**

Evo Alarm enable

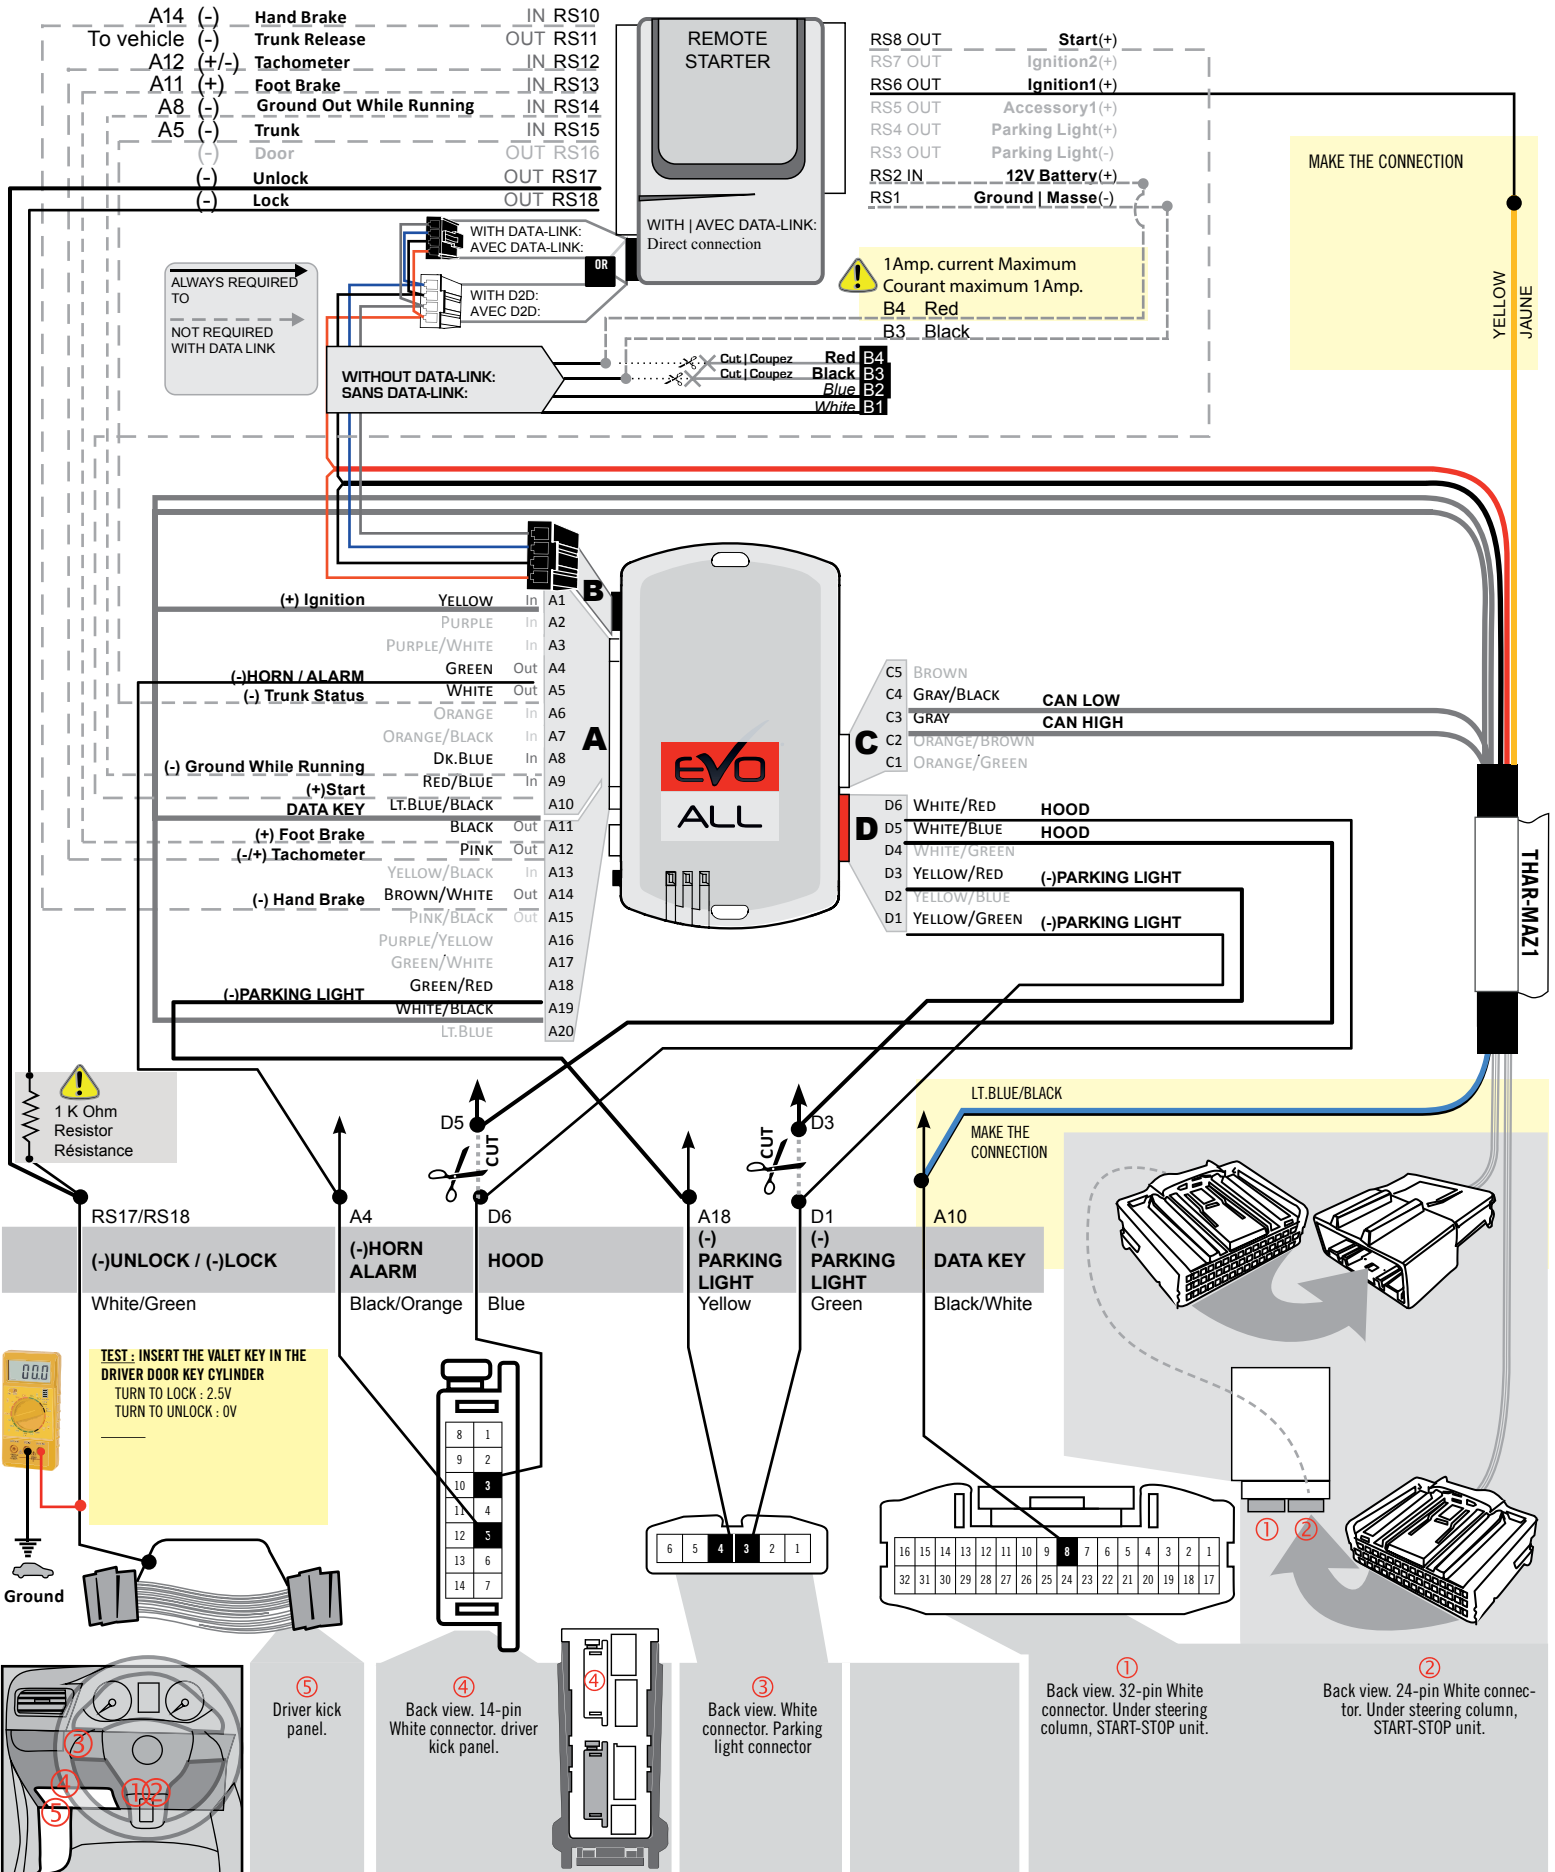

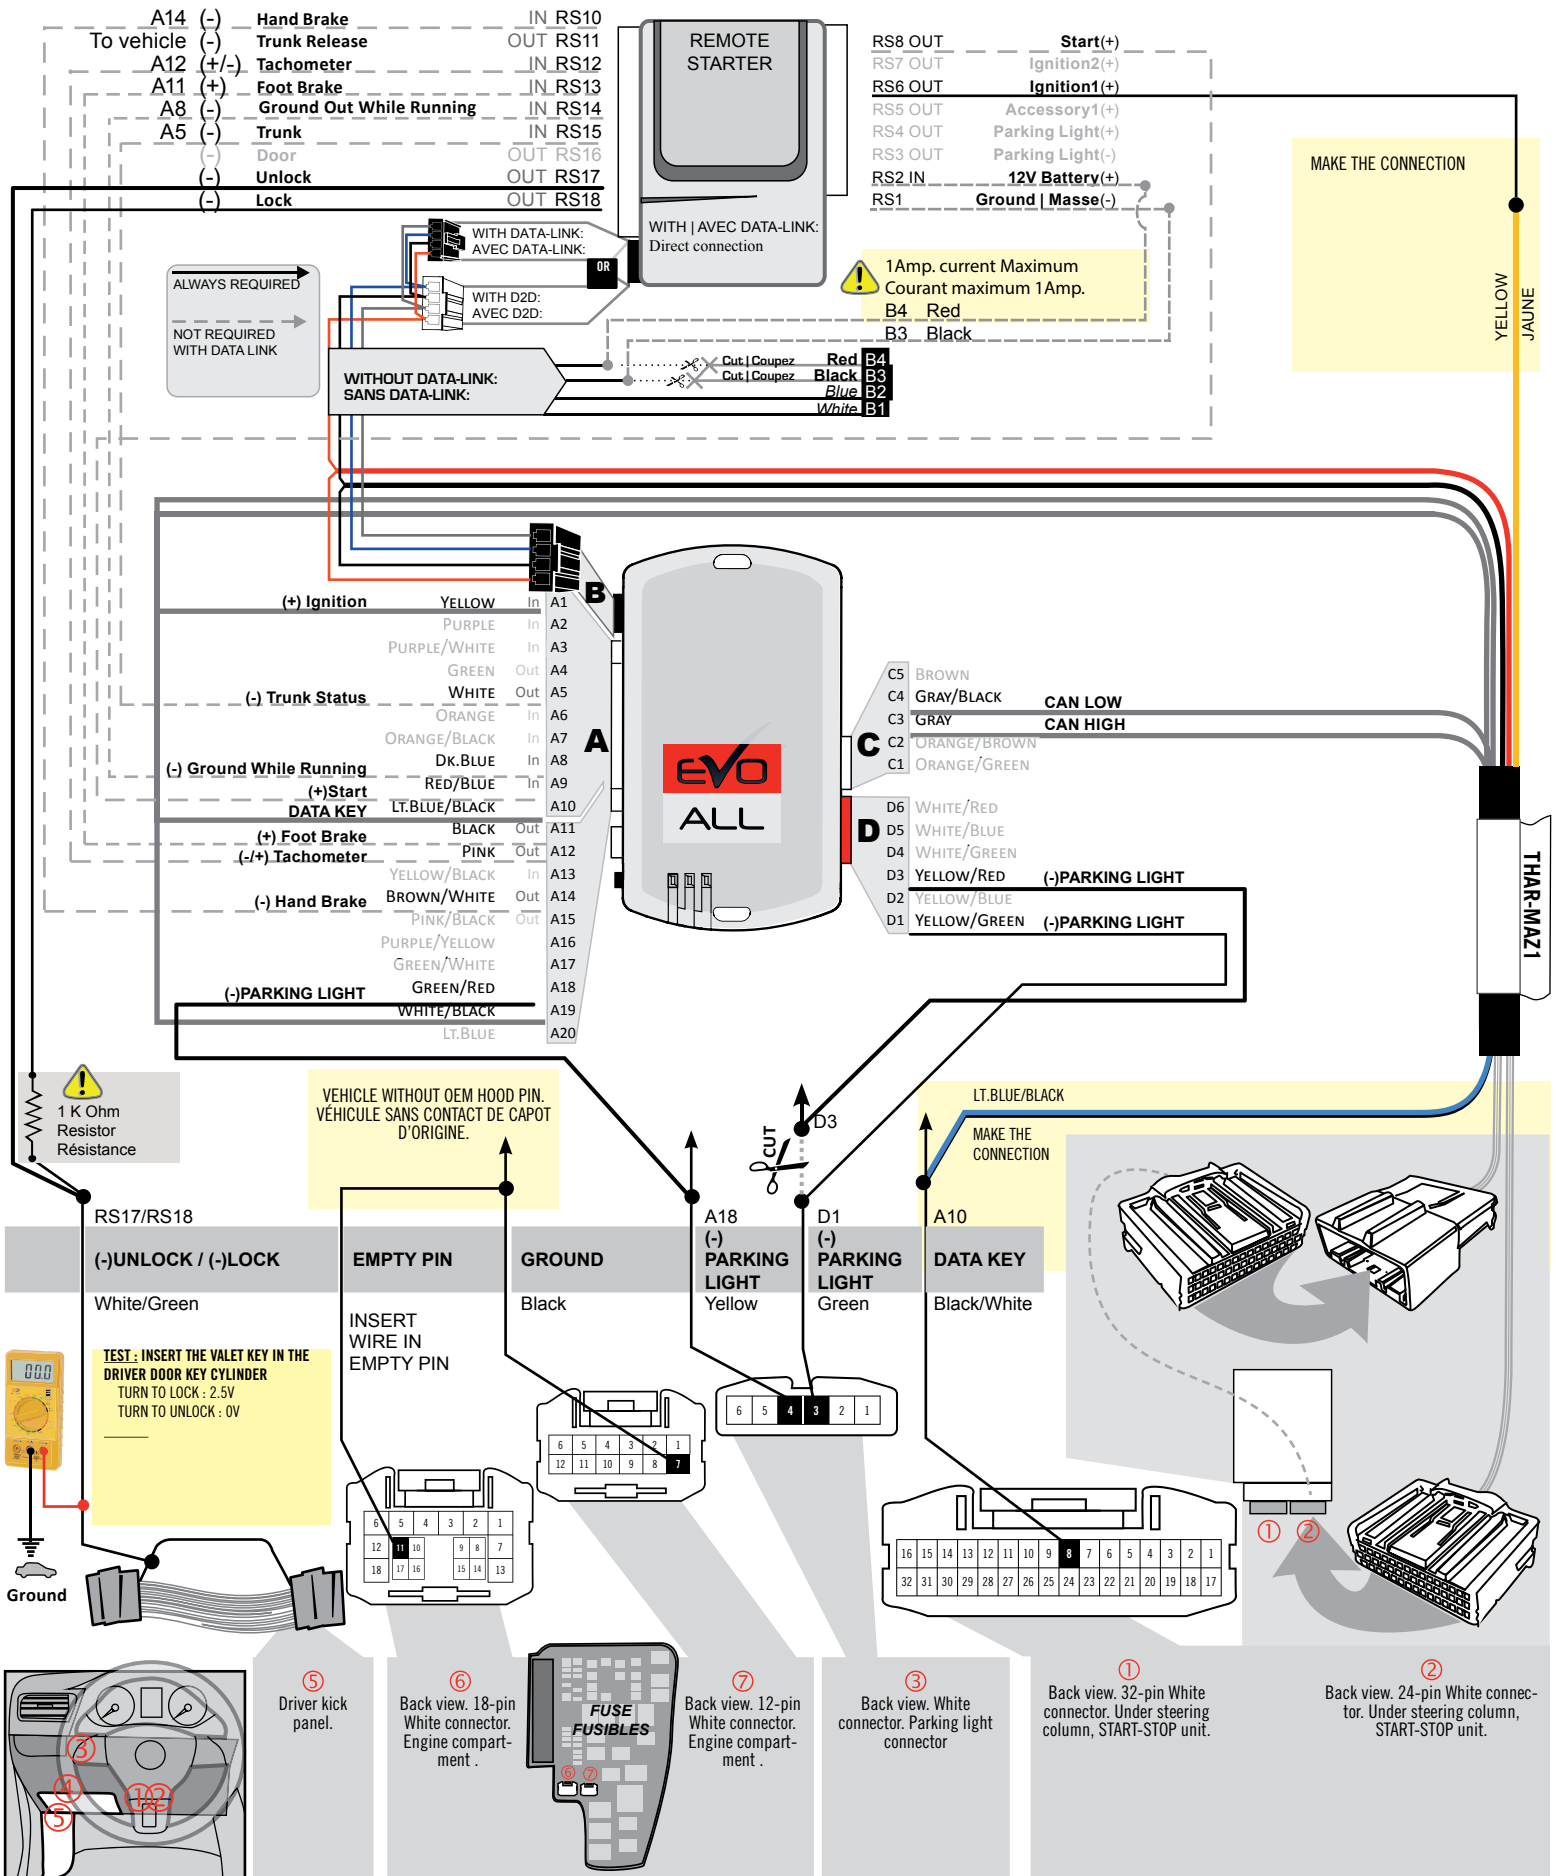

# x3 max.


**Do not program more than 3 modules on the same vehicle.**

If more than 3 modules are programmed to a vehicle, it is possible that the remote car starter will never be functional on this vehicle.

If all programming steps were successful and the vehicle cannot be remote started :


- Double check all connections using the installation diagram above as a reference.

If no connection errors can be found then please contact technical support assistance.

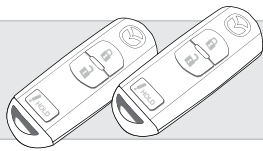

**Make sure** to have two valide vehicle key.


1

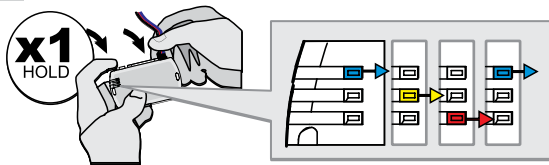

**Press and hold** the programming button:  
**Connect** the 4-PIN Data-link harness (Black connector).


↳ The Blue, Red, Yellow and Blue & Red LEDs will alternatively illuminate.

2

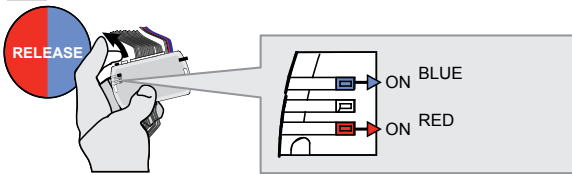


**Release** the programming button when the Blue & Red LEDs are ON.

 *If the LED are not solid BLUE and RED disconnect the 4-PIN Data-link harness (Black connector) and go back to step1.*




3

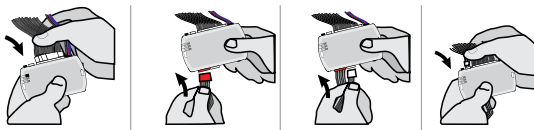

**Connect** the required remaining harnesses.

4

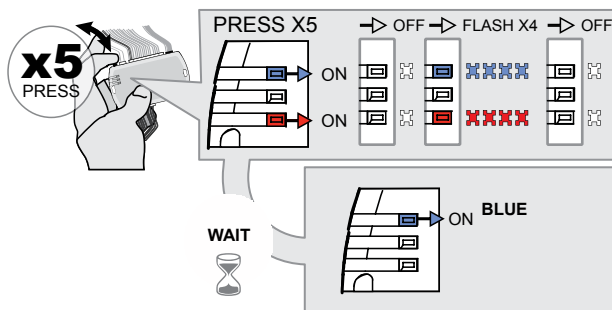

**Press and release** the programming button five times (5x).

↳ The Red & Blue LEDs will alternate between 4 flashes and a pause.


↳ **Wait** for the Blue LED to turn ON.

KEY BYPASS PROGRAMMING PROCEDURE 2/5 |




KEY #1

5

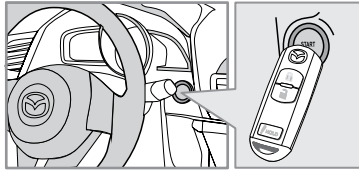


Place the 1st OEM remote close to the front of the START/STOP button exactly as shown.

6

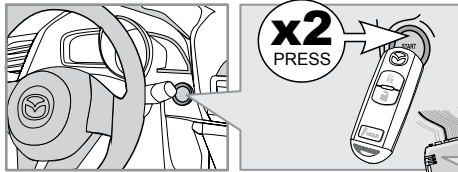


Press the START/STOP button twice to activate the vehicle's Ignition.

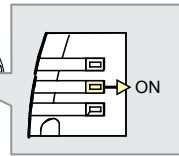


↳ The Yellow LED will turn ON.

7

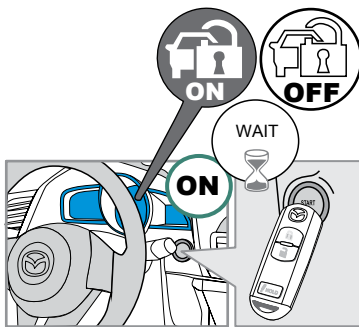


 If the Blue LED is ON solid disconnect the 4-PIN Data-link harness (Black connector) and go back to step 1.




Wait for the security indicator to turn OFF (around 3 seconds).

8

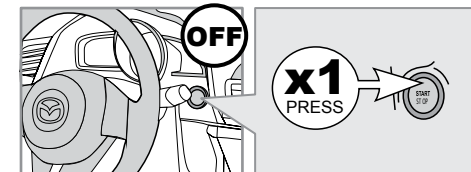

IMMEDIATELY

Press the START/STOP button once to deactivate the vehicle's Ignition.

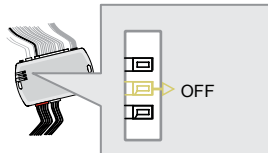


↳ The Yellow Led will turn OFF.




KEY #2

9

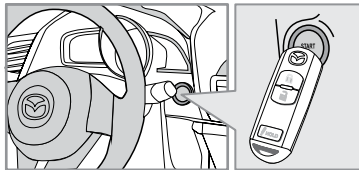


Place the 2nd OEM remote close to the front of the START/STOP button exactly as shown.

10

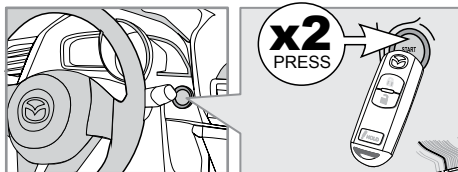


Press the START/STOP button twice to activate the vehicle's Ignition.

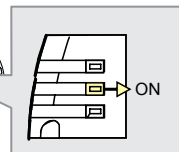


↳ The Yellow LED will turn ON.

KEY BYPASS PROGRAMMING PROCEDURE 3/5




**KEY#2**

**11**

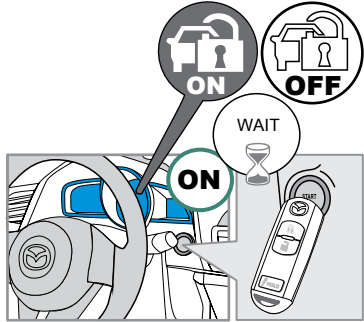

Wait for the security indicator to turn OFF (around 3 seconds).

**12**

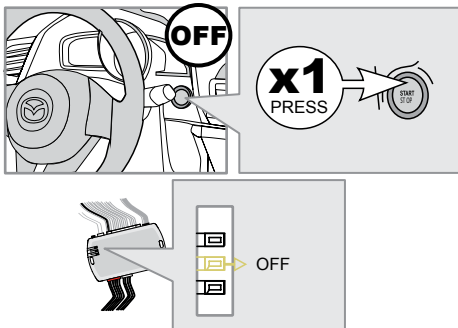


**IMMEDIATELY**


Press the START/STOP button once to deactivate the vehicle's Ignition.

↳ The Yellow Led will turn OFF.


**13**

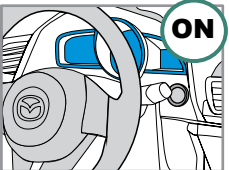

The vehicle's ignition will turn ON

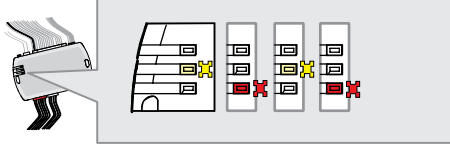

↳ The Yellow and Red LED's will alternatively illuminate.

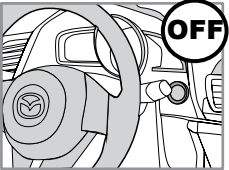

The vehicle's Ignition will turn OFF.

**14**






**Disconnect** the Data-Link (4-pins) connector and after all the remaining connectors.

**KEY BYPASS PROGRAMMING PROCEDURE 4/5**

15

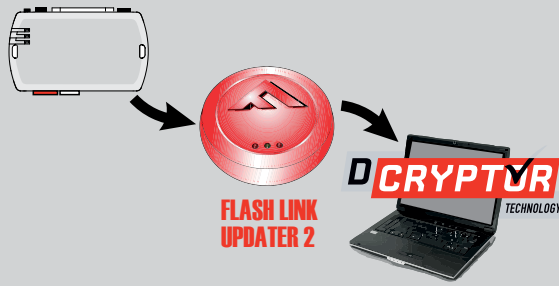

Connect the module to the FLASH LINK UPDATER 2 and visit the DCryptor menu in the Flash-Link Manager.

Parts required (not included)




**FLASH LINK UPDATER 2**

**FLASH LINK MANAGER**  
SOFTWARE | PROGRAMME



Microsoft Windows Computer with Internet connection

16

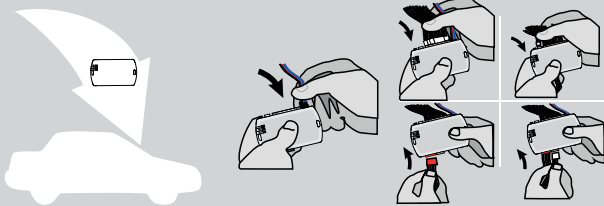


**AFTER DCRYPTOR PROGRAMMING COMPLETED**  
Go back to the vehicle and **reconnect** the 4-Pin (Data-Link) connector and after, all the remaining connector.

17




Repeat step 1 to 12.


18

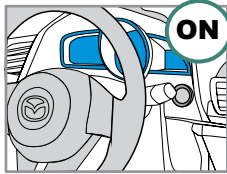

The vehicle's ignition will turn ON

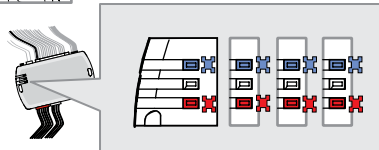


↳ The Blue and Red LEDs will flash.

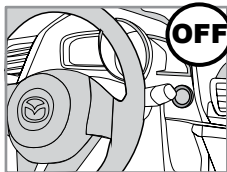


The vehicle's Ignition will turn OFF.

 19



Disconnect all Harness

20

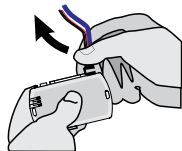

Disconnect the 4-PIN Data-link harness (Black connector).




KEY BYPASS PROGRAMMING PROCEDURE 5/5

CAN PROGRAMMING PROCEDURE

21

**CAUTION FOR: EVO-ALARM OPTION**


If the module GREEN (A4) wire is connected to the HORN make sure that the option G1 (EVO-ALARM) is enabled before CAN programming.

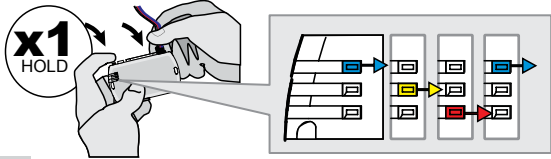

**Press and hold** the programming button:  
**Connect** the 4-PIN Data-link harness (Black connector).


↳ The Blue, Red, Yellow and Blue & Red LEDs will alternatively illuminate.

22

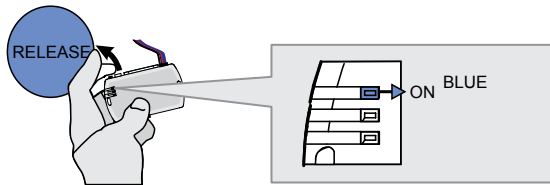


**Release** the programming button when the Blue LED is ON.

 If the Blue LED is not ON solid disconnect the 4-PIN Data-link harness (Black connector).



23

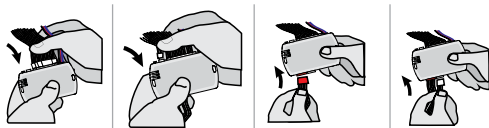


**Connect** the required remaining harnesses.

24




**Press** the START/STOP button twice to activate the vehicle's Ignition.

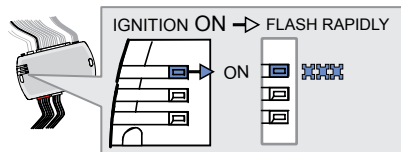


↳ The Blue LED will flash rapidly.

25

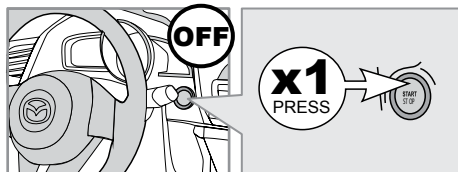

**Press** the START/STOP button once to deactivate the vehicle's Ignition.

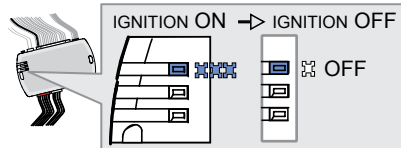

↳ The Blue LED will turn OFF.



The module is now programmed.

REMOTE STARTER FUNCTIONALITY



All doors must be closed.



 
Do not remote-start with the OEM remote inside the vehicle.



Never remote-start with a passenger inside the vehicle.



**Remote start** the vehicle.



*The module will shut down the vehicle as soon as a door is opened.*



**ONLY COMPATIBLE WITH AUTOMATIC TRANSMISSION VEHICLES.**

Vehicle functions supported in this diagram (functional if equipped)

VEHICLE	YEARS	Immobilizer bypass	T-Harness	Lock	Unlock	Arm	Disarm	Tachometer	Door Status	Trunk Status	Hood Status protection remote start	Hand-Brake Status	Foot-Brake Status	OEM Remote monitoring
<b>MAZDA</b>														
CX-5	2013-2016	•	•	•	•	•	•	•	•	•	•	•	•	•



**85.[11]**  
MINIMUM

To add the firmware version and the options, use the **FLASH LINK UPDATER** or **FLASH LINK MOBILE** tool, sold separately.

**IF THE VEHICLE IS NOT EQUIPPED WITH FUNCTIONAL HOOD PIN:**

**A11**

**OFF**

Hood trigger (Output Status).



Program bypass option:

UNIT OPTION

DESCRIPTION

**C1**

OEM Remote status (Lock/Unlock) monitoring

**NOTES**



**THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.**

**MANDATORY INSTALL**

\*HOOD PIN



**HOOD STATUS:** THE HOOD PIN SWITCH MUST BE INSTALLED IF THE VEHICLE CAN BE REMOTE STARTED WITH THE HOOD OPEN, SET FUNCTION A11 TO OFF.

**A11**

**OFF**


**Notice:** the installation of safety elements are mandatory. The hood pin is an essential security element and must be installed.

**THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.**


DESCRIPTION




① Under steering column, START-STOP unit

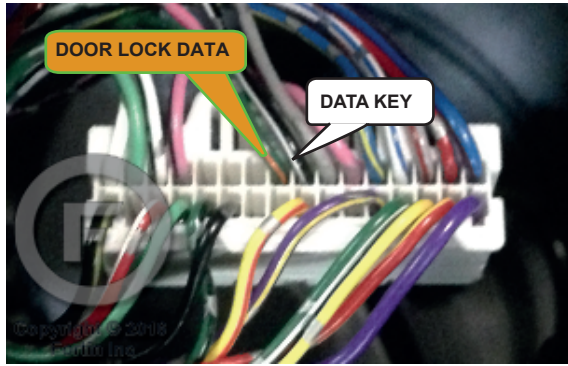


③ At parking lights switch

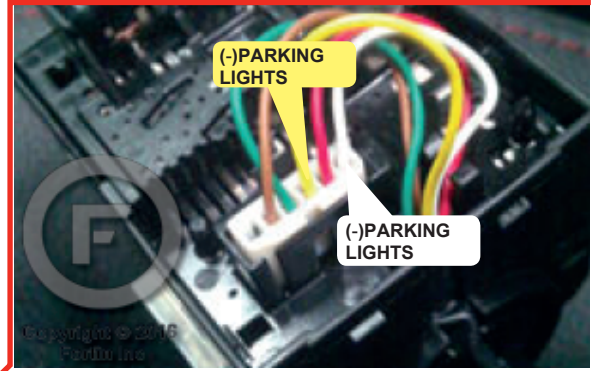

② Under steering column, START-STOP unit

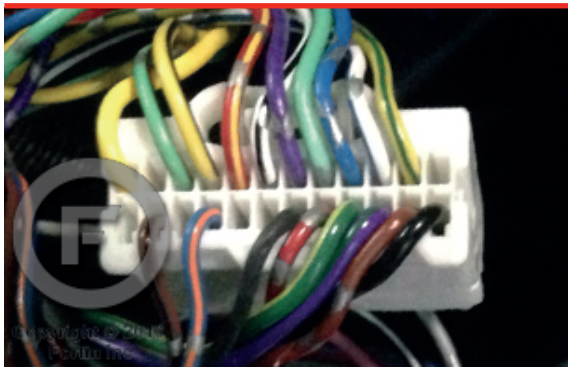

④ Engine compartment - without OEM ALARM

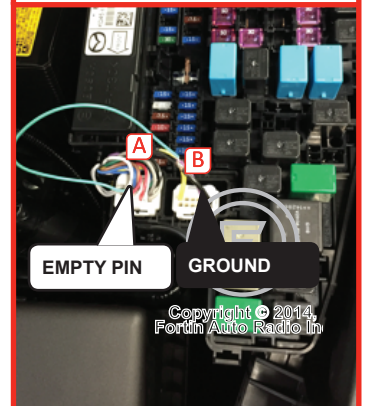




# ATTENTION

Before disconnecting a module, a computer or a control unit from a vehicle: Always disconnect the negative terminal from the vehicle's battery.


In these vehicles, the factory keyless entry module is sensitive to interference and may cease to operate if some precautions are not taken. Disconnect the (-) terminal of the battery prior to disconnecting the connectors at the smartkey module below the steering wheel to avoid damage to the smartkey entry module.

1

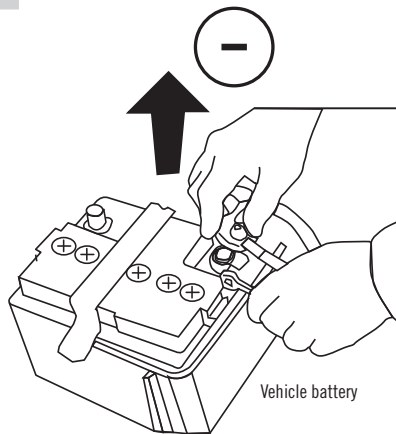


Disconnect the (-) terminal of the battery.

2

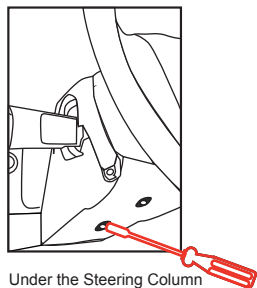


Under the Steering Column

1 Unscrew.

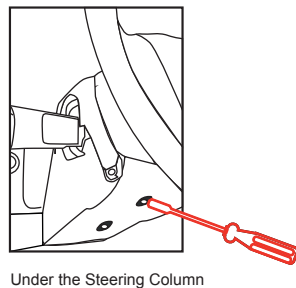


Under the Steering Column

2 Unscrew

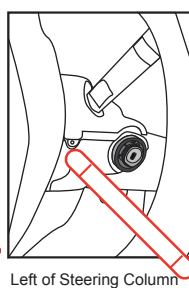


Left of Steering Column

3 Onclip

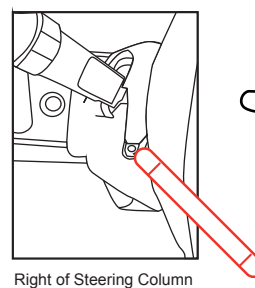

Right of Steering Column

4 Onclip

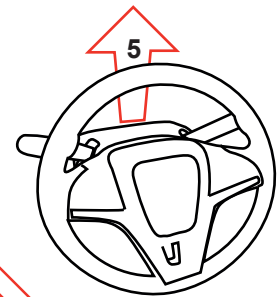


5 Gently pull up the cover of the steering column.

3


Make the following connections.

CONTINUED NEXT PAGE

4

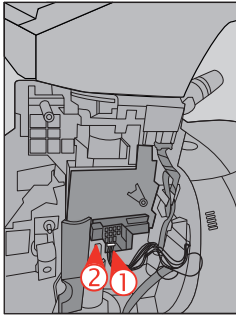

Under steering column, START-STOP unit.

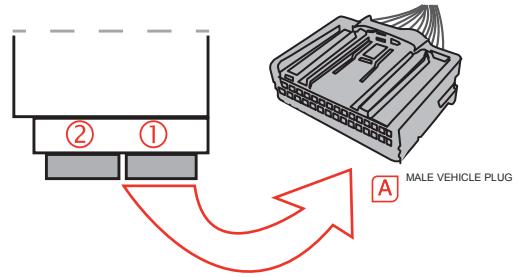


Disconnect the connector

A

5


Under steering column, START-STOP unit.

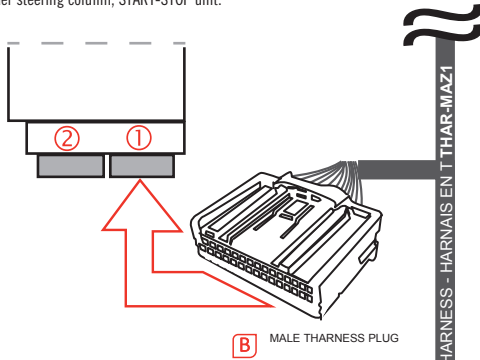

Connect the connector

B

6

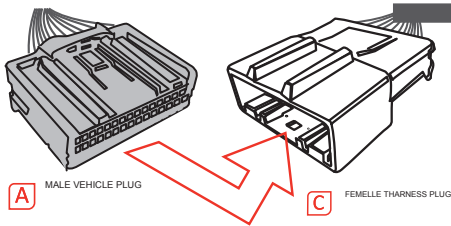

Connect the connector

A



into connector


C

7

Make other required connections.

**AUTOMATIC TRANSMISSION WIRING CONNECTION**

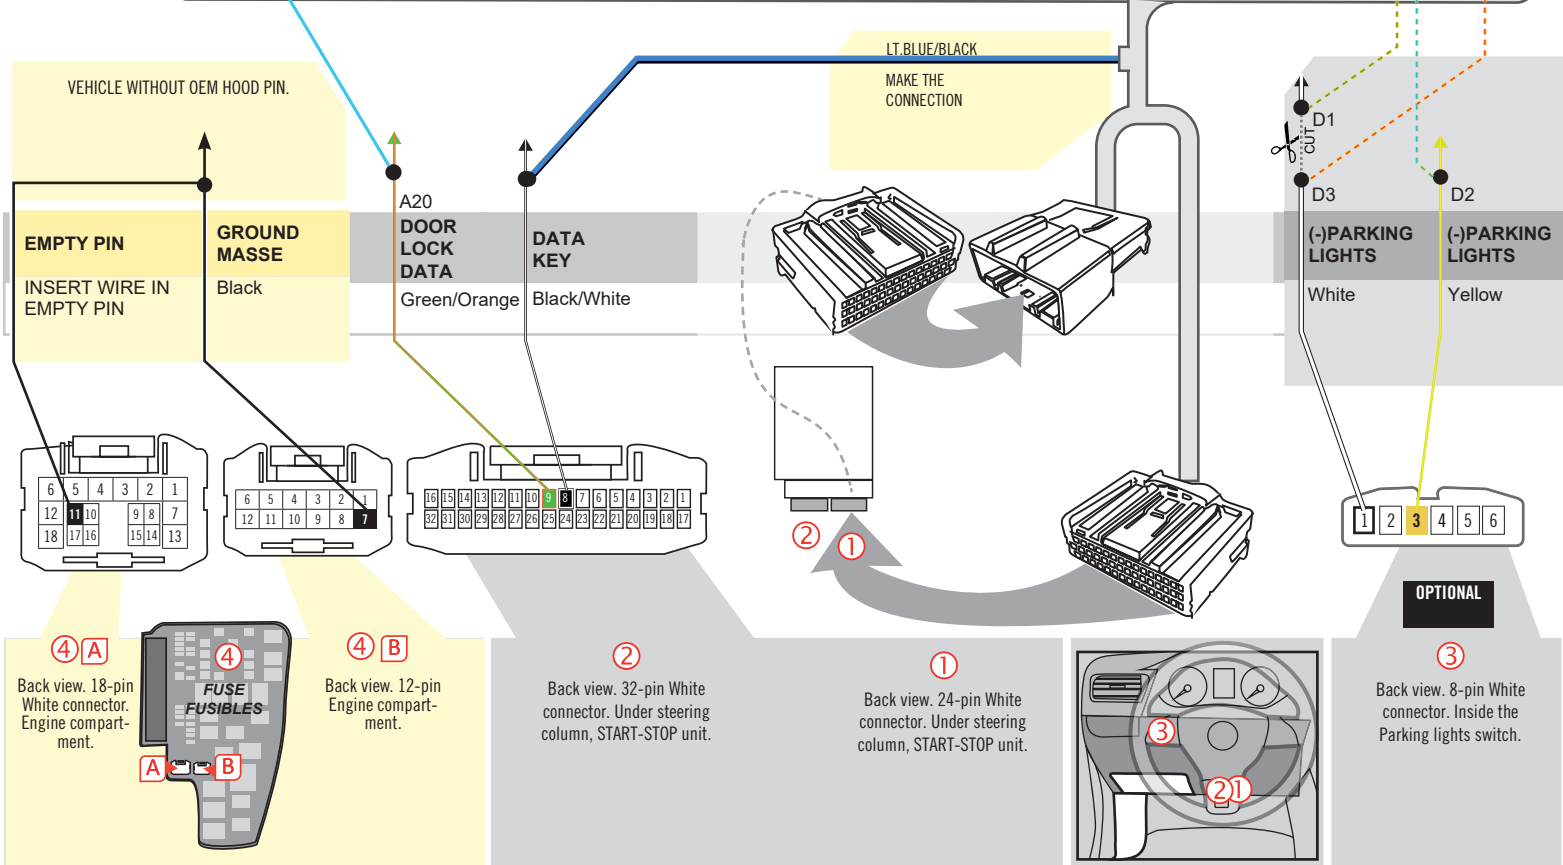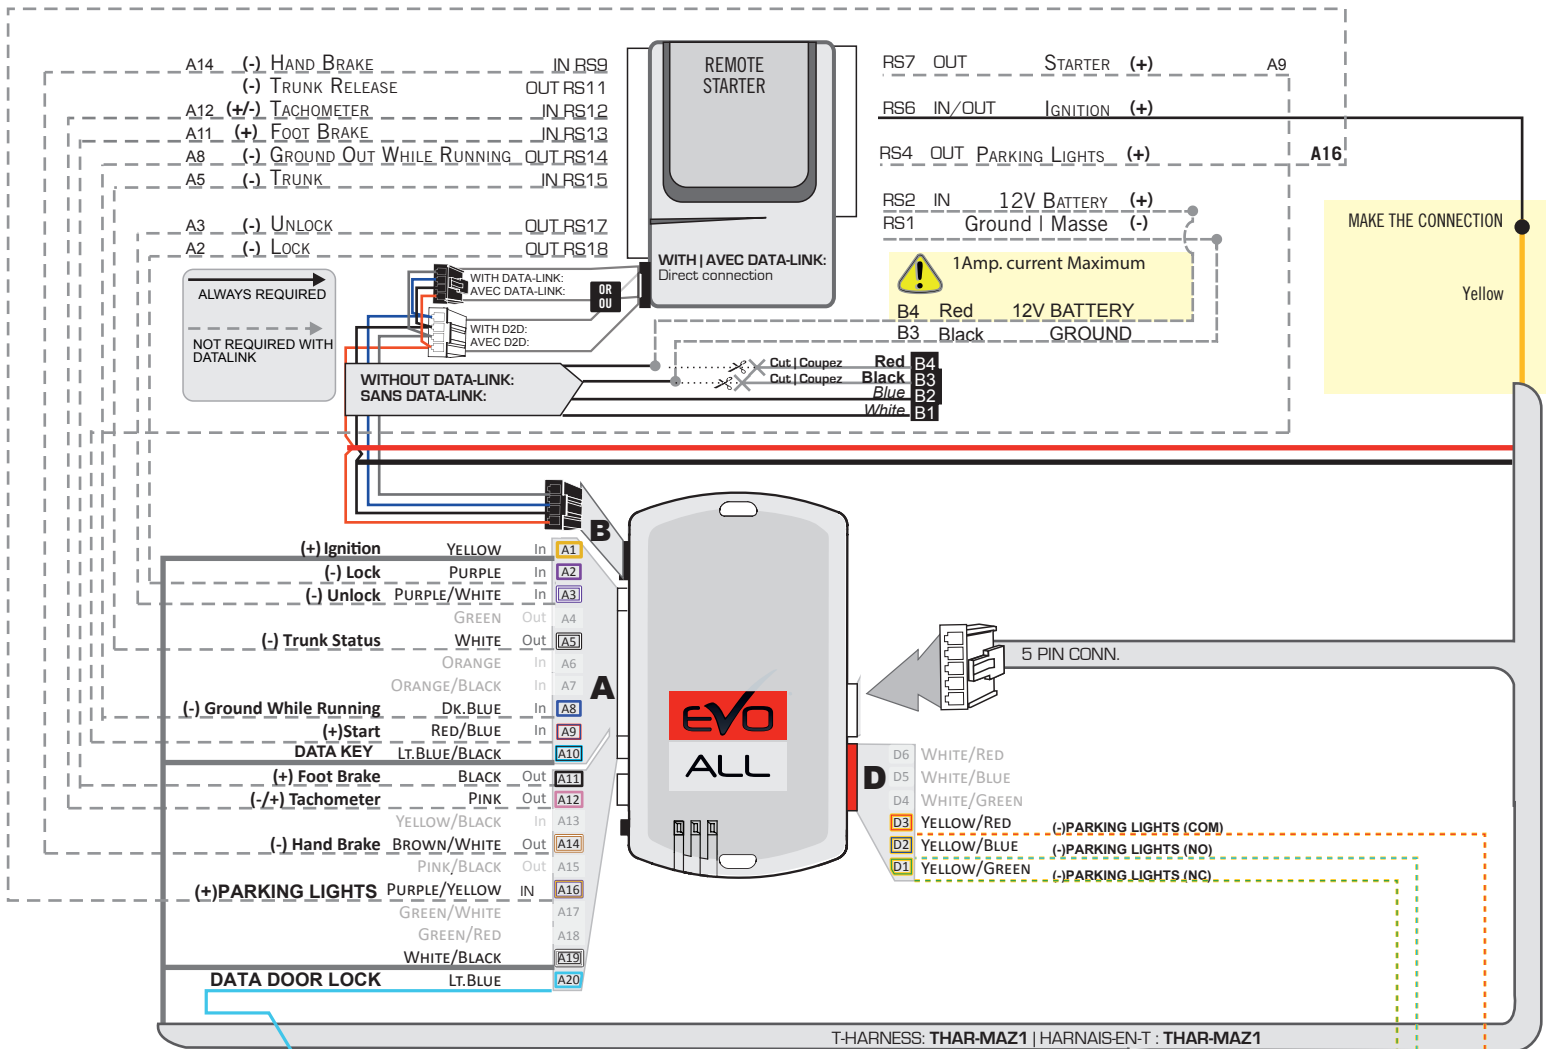

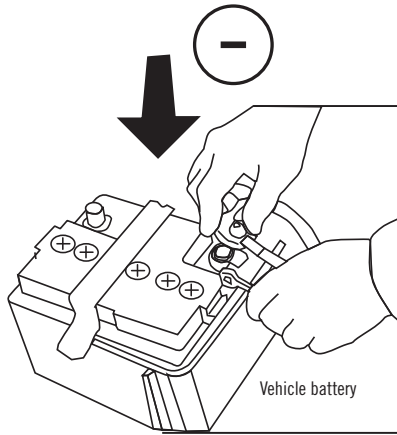

**Reconnect** the (-) terminal of the battery.

CONTINUED NEXT PAGE



# x3 max.


**Do not program more than 3 modules on the same vehicle.**

If more than 3 modules are programmed to a vehicle, it is possible that the remote car starter will never be functional on this vehicle.

If all programming steps were successful and the vehicle cannot be remote started :


- Double check all connections using the installation diagram above as a reference.

If no connection errors can be found then please contact technical support assistance.

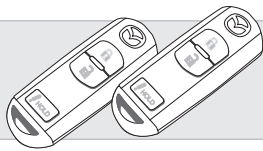

**Make sure** to have two valide vehicle key.


1

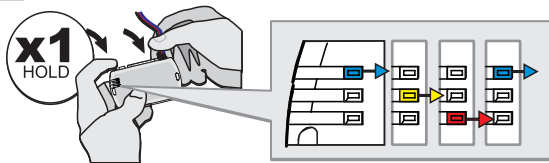

**Press and hold** the programming button:  
**Connect** the 4-PIN Data-link harness (Black connector).


↳ The Blue, Red, Yellow and Blue & Red LEDs will alternatively illuminate.

2

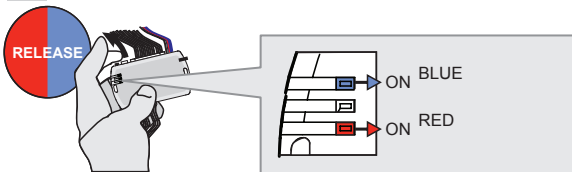


**Release** the programming button when the Blue & Red LEDs are ON.

 *If the LED are not solid BLUE and RED disconnect the 4-PIN Data-link harness (Black connector) and go back to step1.*




3

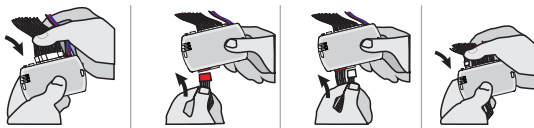

**Connect** the required remaining harnesses.

4

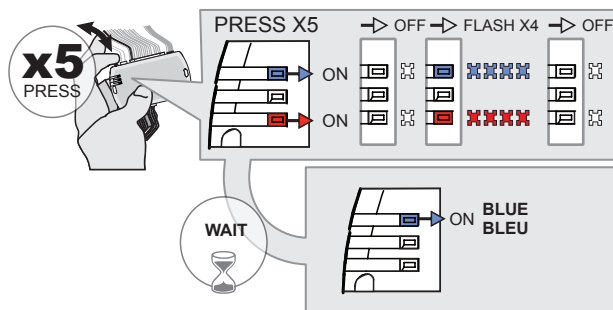

**Press and release** the programming button five times (5x).

↳ The Red & Blue LEDs will alternate between 4 flashes and a pause.


↳ **Wait** for the Blue LED to turn ON.

KEY BYPASS PROGRAMMING PROCEDURE 2/5




KEY #1

5

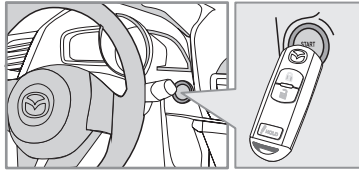


Place the 1st OEM remote close to the front of the START/STOP button exactly as shown.

6

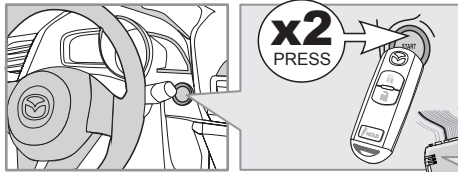


Press the START/STOP button twice to activate the vehicle's Ignition.

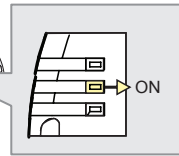


↳ The Yellow LED will turn ON.

7

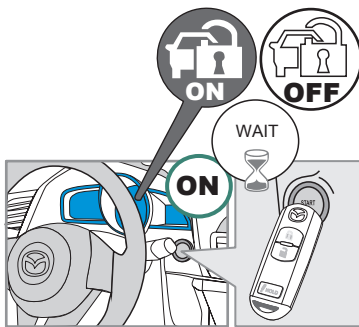

 If the Blue LED is ON solid disconnect the 4-PIN Data-link harness (Black connector) and go back to step 1.




Wait for the security indicator to turn OFF (around 3 seconds).

8

**IMMEDIATELY**



Press the START/STOP button once to deactivate the vehicle's Ignition.

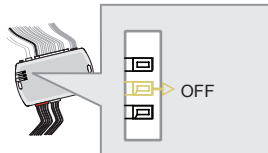


↳ The Yellow Led will turn OFF.



KEY #2

9

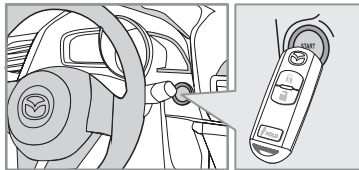


Place the 2nd OEM remote close to the front of the START/STOP button exactly as shown.

10




Press the START/STOP button twice to activate the vehicle's Ignition.

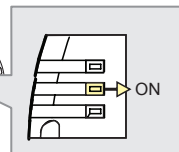


↳ The Yellow LED will turn ON.

KEY BYPASS PROGRAMMING PROCEDURE 3/6

**11**




**KEY#2**

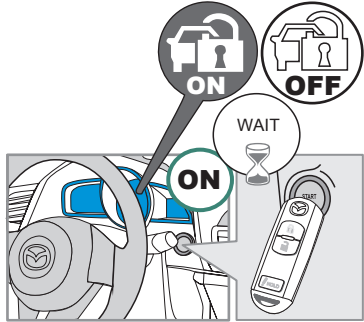


Wait for the security indicator to turn OFF (around 3 seconds).

**12**

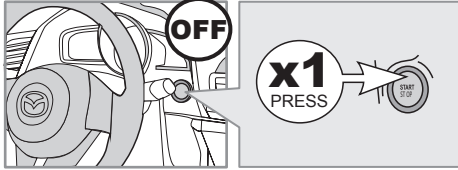


IMMEDIATELY

Press the START/STOP button once to deactivate the vehicle's Ignition.

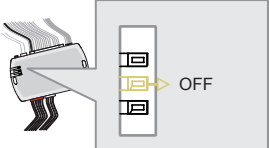


↳ The Yellow Led will turn OFF.


**13**

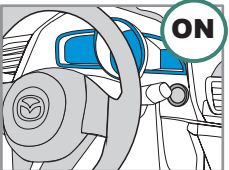

The vehicle's ignition will turn ON

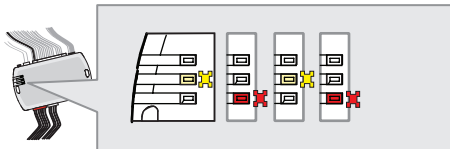



↳ The Yellow and Red LED's will alternatively illuminate.

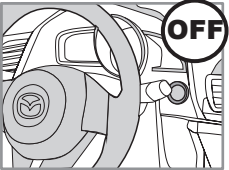

The vehicle's Ignition will turn OFF.

**14**

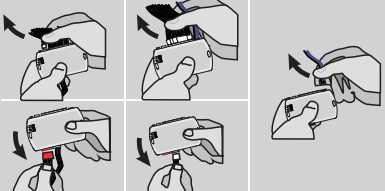


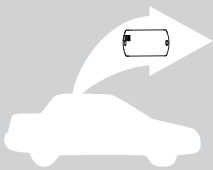


Disconnect all the connectors and after the Data-Link (4-pins) connector.

**KEY BYPASS PROGRAMMING PROCEDURE 4/6**

15

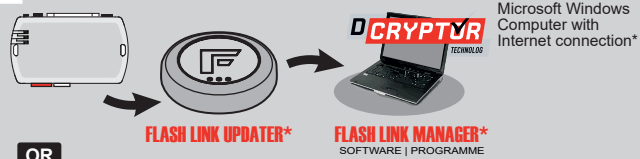


OR

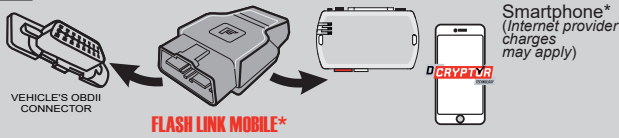

Use the tool: **FLASH LINK UPDATER** or **FLASH LINK MOBILE** to visit the DCRYPTOR menu.

\*Parts required (not included)

16

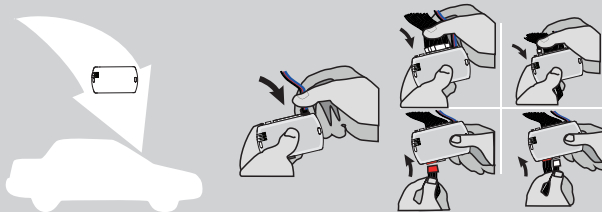


**AFTER DCRYPTOR PROGRAMMING COMPLETED**  
Go back to the vehicle and **reconnect** the 4-Pin (Data-Link) connector and after, all the remaining connector.

17



Repeat step 1 to 12.

18

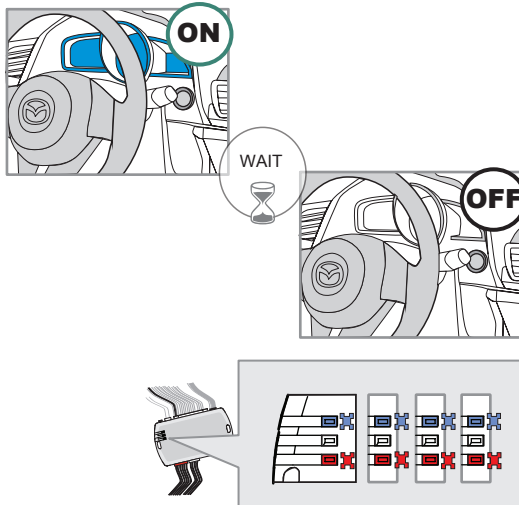


The vehicle's ignition will turn ON

The vehicle's Ignition will turn OFF.


↳ The Blue and Red LEDs will flash.

 19



Disconnect all Harness

20

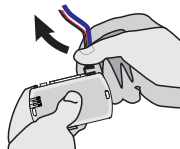


Next:

Disconnect the 4-PIN Data-link harness (Black connector).

CAN PROGRAMMING PROCEDURE


21

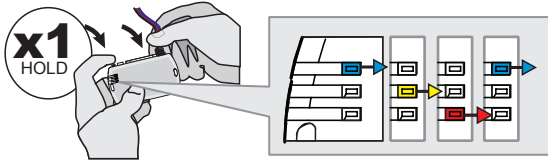

Press and hold the programming button:  
Connect the 4-PIN Data-link harness (Black connector).


↳ The Blue, Red, Yellow and Blue & Red LEDs will alternatively illuminate.

22

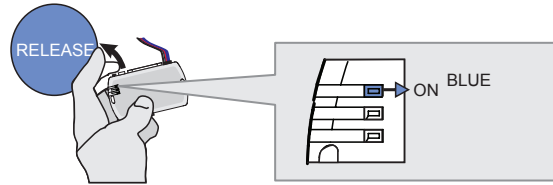


Release the programming button when the Blue LED is ON.

 If the Blue LED is not ON solid disconnect the 4-PIN Data-link harness (Black connector).



23

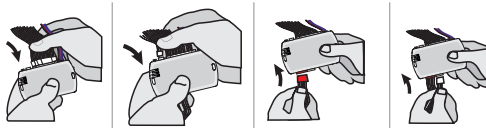


Connect the required remaining harnesses.

24




Press the START/STOP button twice to turn ON the vehicle's Ignition.

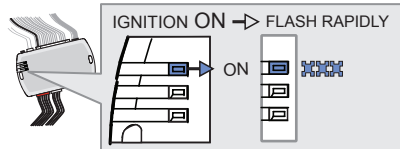


↳ The Blue LED will flash rapidly.

25

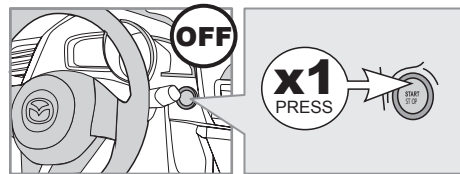

Press the START/STOP button once to turn OFF the vehicle's Ignition.

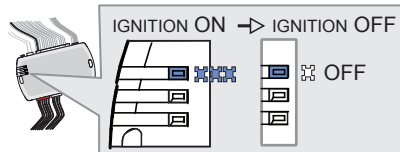


↳ The Blue LED will turn OFF.



The module is now programmed.


REMOTE STARTER FUNCTIONALITY |

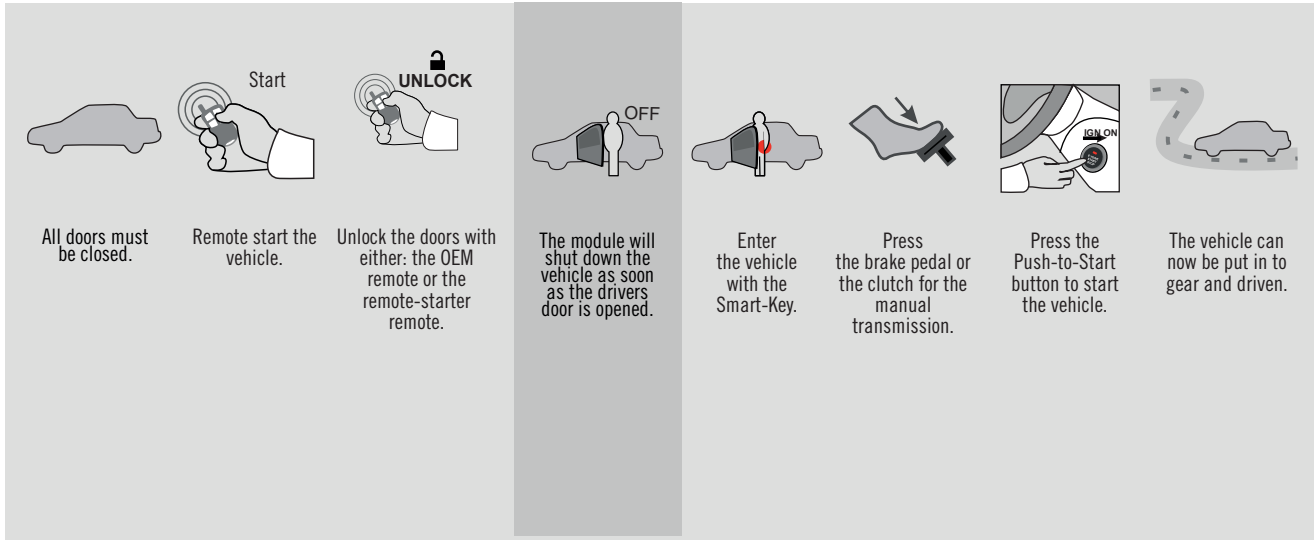




**ONLY COMPATIBLE WITH AUTOMATIC TRANSMISSION VEHICLES.**

Vehicle functions supported in this diagram (functional if equipped)

VEHICLE	YEARS	Immobilizer bypass	T-Harness	Lock	Unlock	Arm	Disarm	Tachometer	Door Status	Trunk Status	Hood Status protection remote start	Hand-Brake Status	Foot-Brake Status	OEM Remote monitoring
														
<b>MAZDA</b>														
CX-5	2017-2020	•	•	•	•	•	•	•	•	•	•	•	•	•



**85.[11]**

MINIMUM

To add the firmware version and the options, use the **FLASH LINK UPDATER** or **FLASH LINK MOBILE** tool, sold separately.

<p><b>IF THE VEHICLE IS NOT EQUIPPED WITH FUNCTIONAL HOOD PIN:</b></p>	<b>A11</b>	<b>OFF</b>	Hood trigger (Output Status).
<p><b>Program bypass option:</b></p>	<b>C1</b>		<p><b>UNIT OPTION</b></p> <p><b>DESCRIPTION</b></p> <p>OEM Remote status (Lock/Unlock) monitoring</p>

**NOTES**



**THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.**

**MANDATORY INSTALL**

\*HOOD PIN



**HOOD STATUS:** THE HOOD PIN SWITCH MUST BE INSTALLED IF THE VEHICLE CAN BE REMOTE STARTED WITH THE HOOD OPEN, SET FUNCTION **A11** TO OFF.

**A11**

**OFF**


**Notice:** the installation of safety elements are mandatory. The hood pin is an essential security element and must be installed.

**THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.**

DESCRIPTION


Under steering column, START-STOP unit.

①

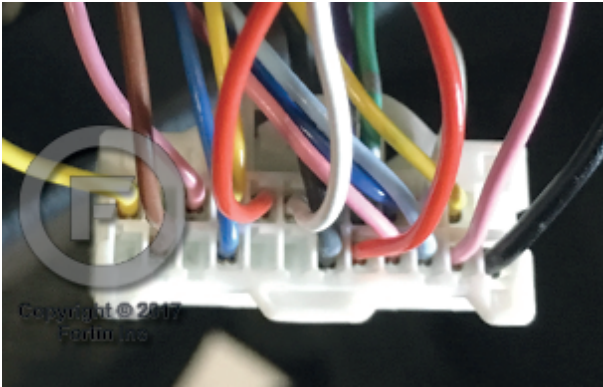



Under steering column, START-STOP unit.

②

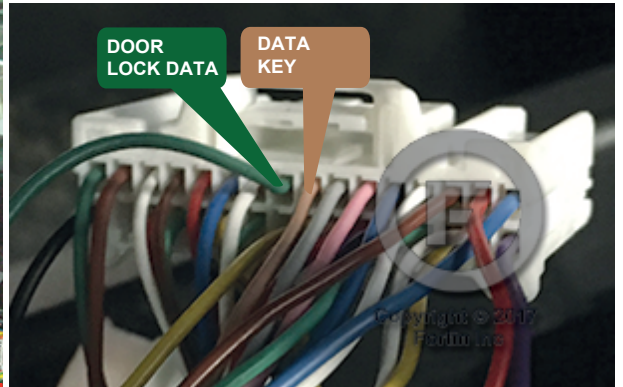


Inside the Parking Light switch

③

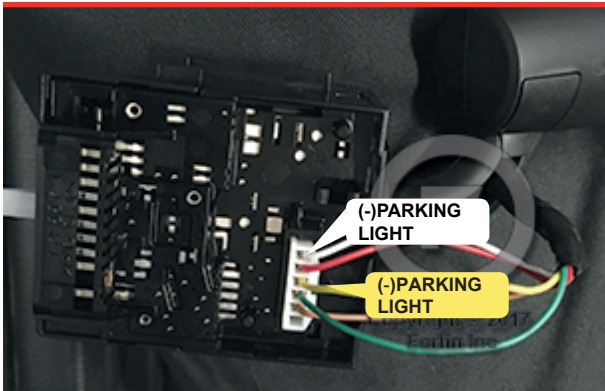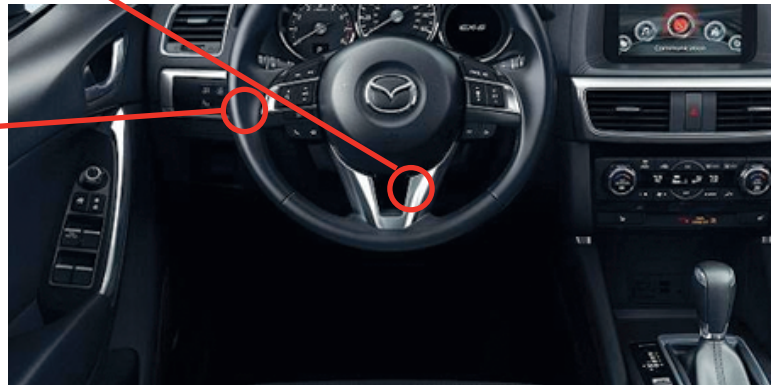

Engine compartment - without OEM ALARM

④

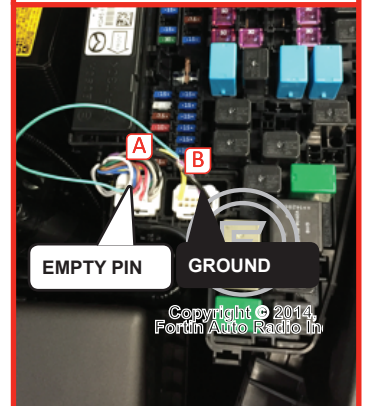

Copyright © 2014 Fortin Auto Radio Inc






# ATTENTION

Before disconnecting a module, a computer or a control unit from a vehicle: Always disconnect the negative terminal from the vehicle's battery.


In these vehicles, the factory keyless entry module is sensitive to interference and may cease to operate if some precautions are not taken. Disconnect the (-) terminal of the battery prior to disconnecting the connectors at the smartkey module below the steering wheel to avoid damage to the smartkey entry module.

1

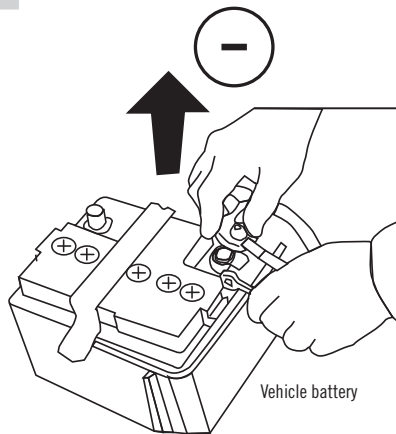


Disconnect the (-) terminal of the battery.

2

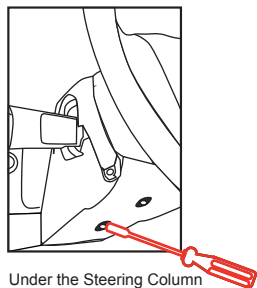


Under the Steering Column

1 Unscrew.

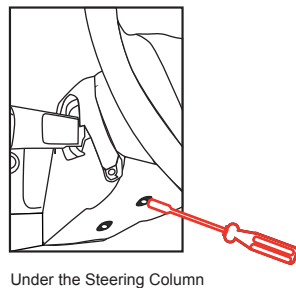


Under the Steering Column

2 Unscrew

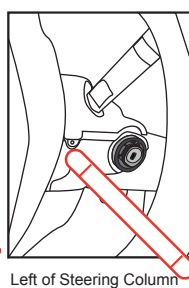


Left of Steering Column

3 Onclip

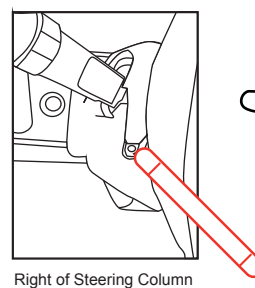

Right of Steering Column

4 Onclip

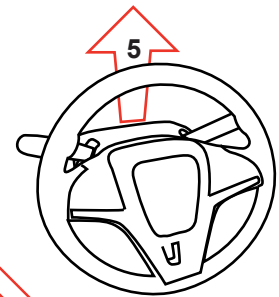


5 Gently pull up the cover of the steering column.

3


Make the following connections.

CONTINUED NEXT PAGE

4

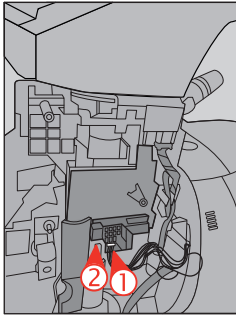

Under steering column, START-STOP unit.

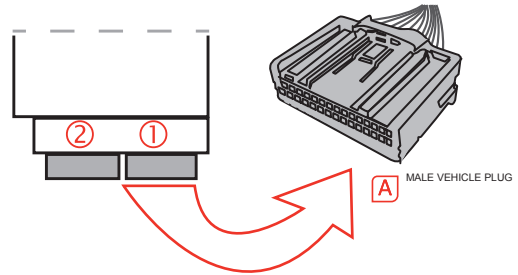


Disconnect the connector

A

5


Under steering column, START-STOP unit.

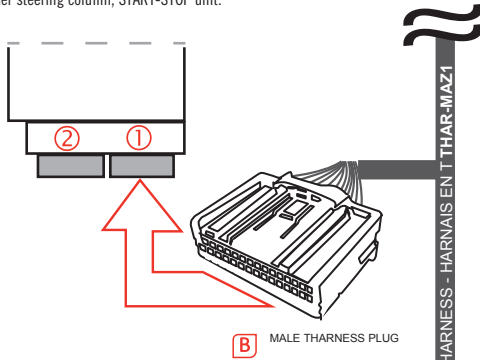

Connect the connector

B

6

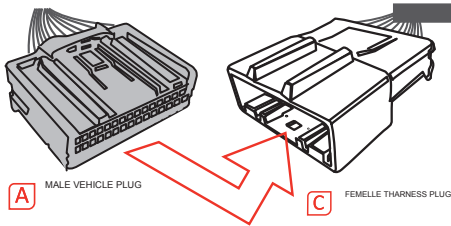

Connect the connector

A


into connector


C

7

Make other required connections.

**AUTOMATIC TRANSMISSION WIRING CONNECTION**

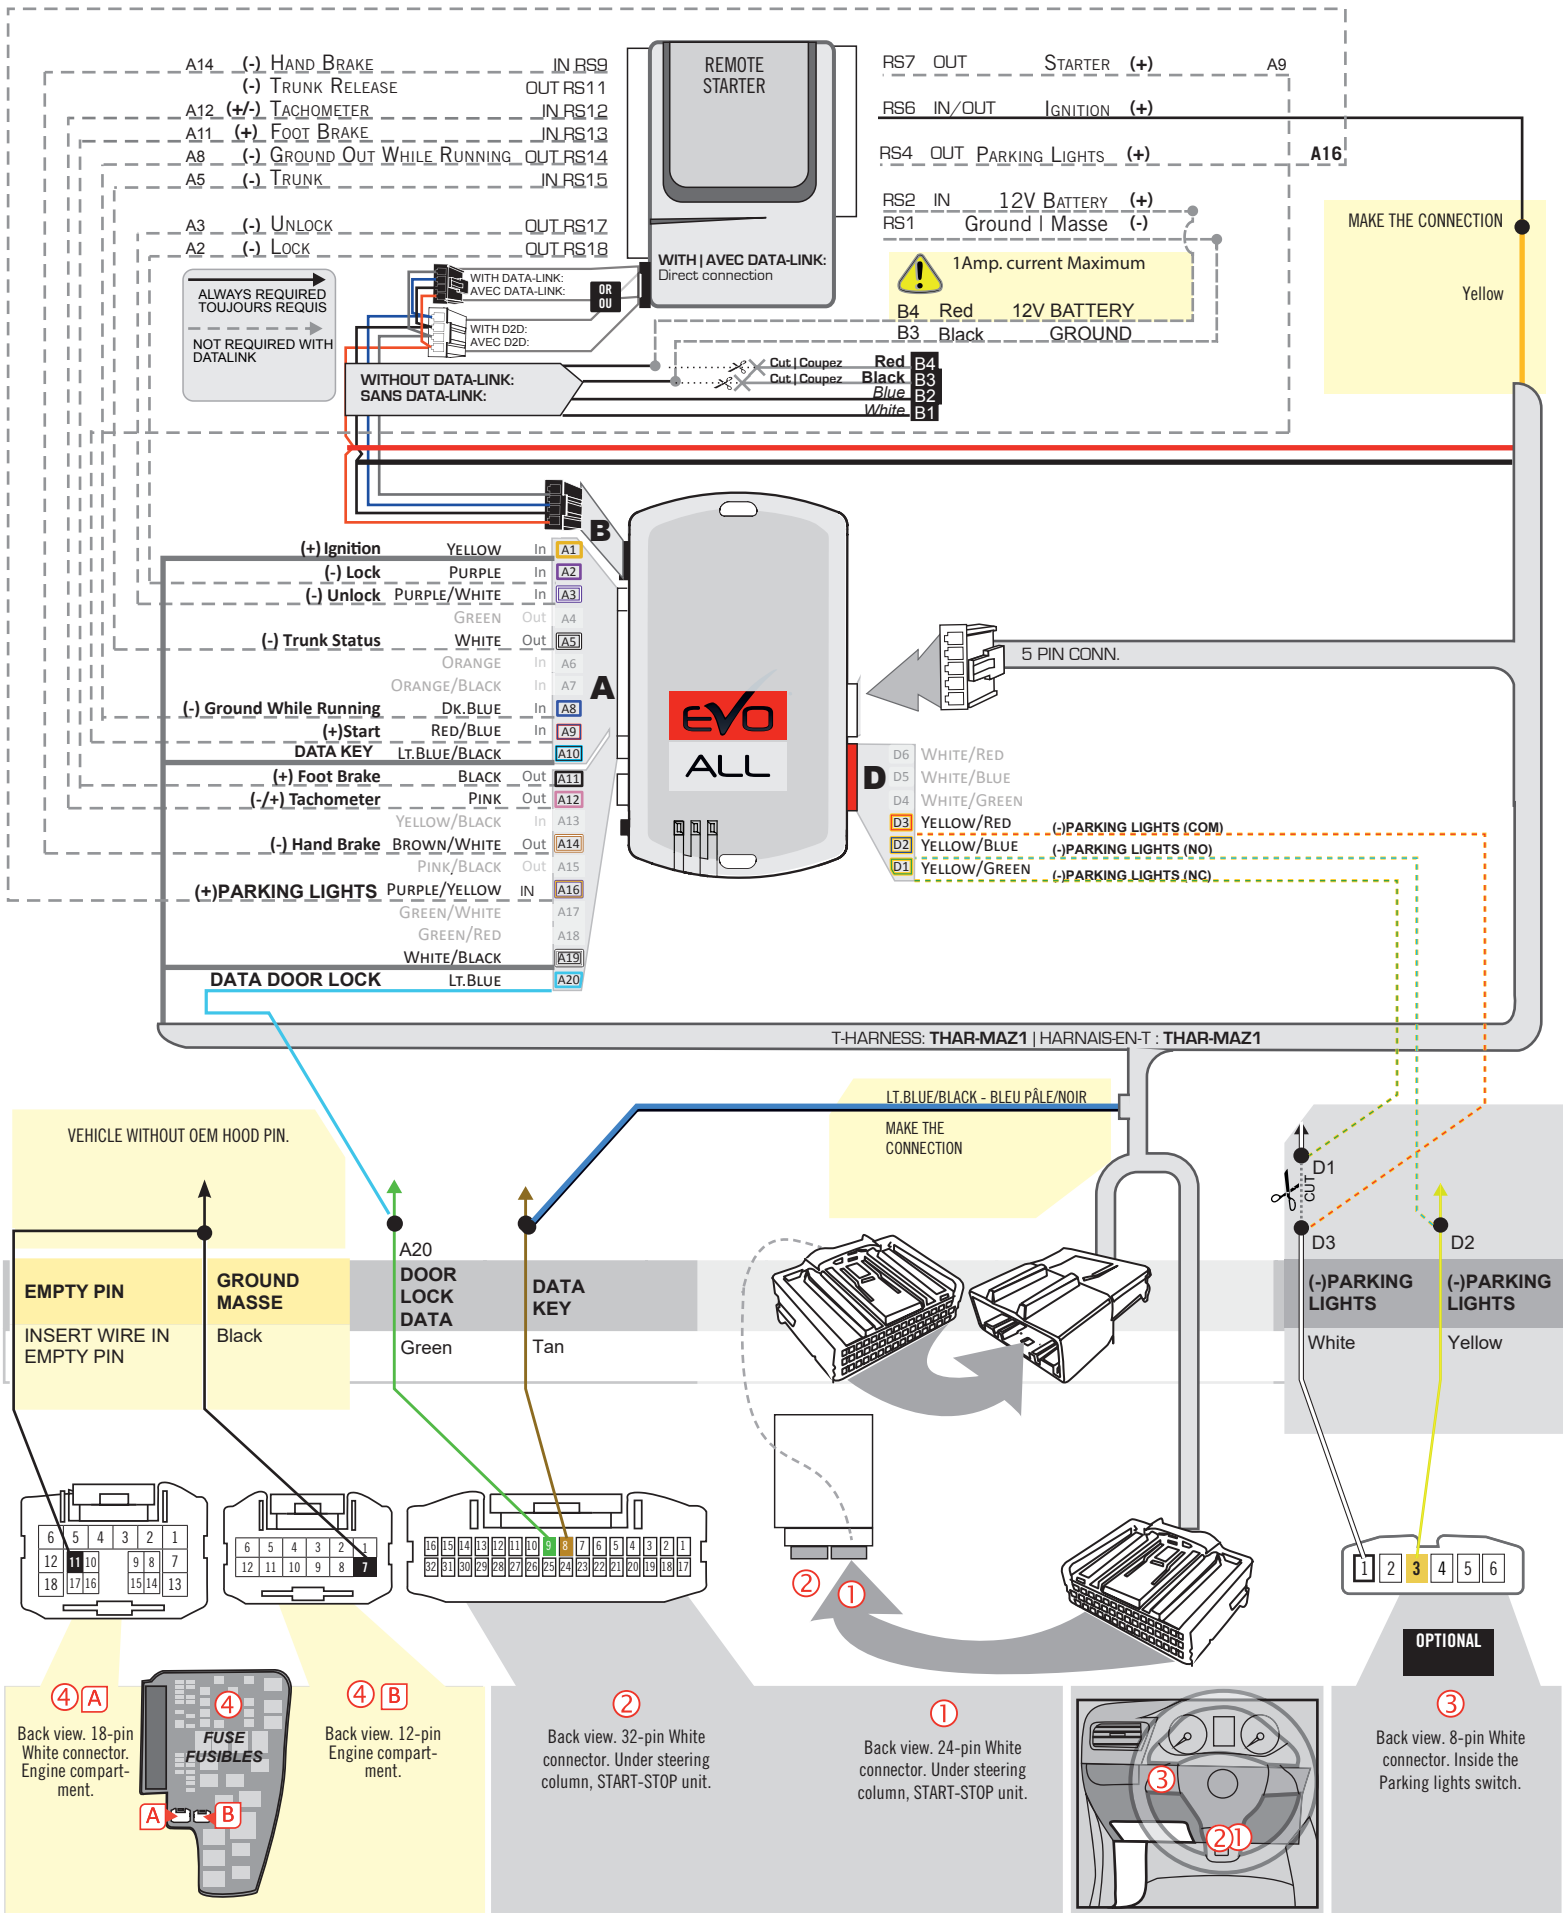

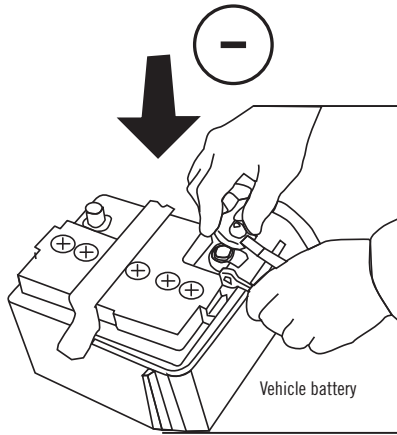

**Reconnect** the (-) terminal of the battery.

CONTINUED NEXT PAGE

# x3 max.


**Do not program more than 3 modules on the same vehicle.**

If more than 3 modules are programmed to a vehicle, it is possible that the remote car starter will never be functional on this vehicle.

If all programming steps were successful and the vehicle cannot be remote started :


- Double check all connections using the installation diagram above as a reference.

If no connection errors can be found then please contact technical support assistance.

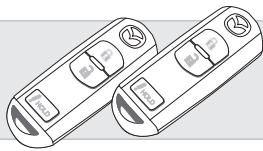

**Make sure** to have two valide vehicle key.


1

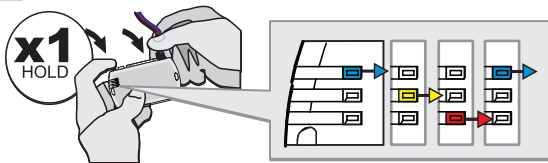

**Press and hold** the programming button:  
**Connect** the 4-PIN Data-link harness (Black connector).


↳ The Blue, Red, Yellow and Blue & Red LEDs will alternatively illuminate.

2

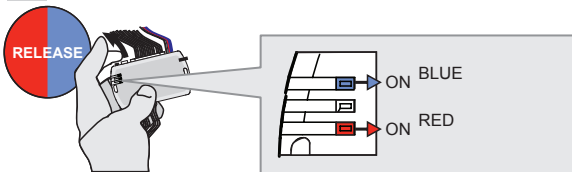


**Release** the programming button when the Blue & Red LEDs are ON.

 *If the LED are not solid BLUE and RED disconnect the 4-PIN Data-link harness (Black connector) and go back to step1.*




3

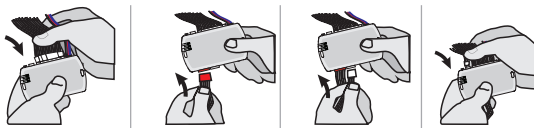

**Connect** the required remaining harnesses.

4

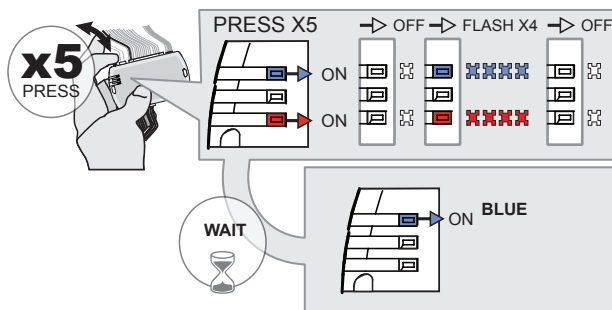

**Press and release** the programming button five times (5x).


↳ The Red & Blue LEDs will alternate between 4 flashes and a pause.

↳ **Wait** for the Blue LED to turn ON.

KEY BYPASS PROGRAMMING PROCEDURE 2/5




5

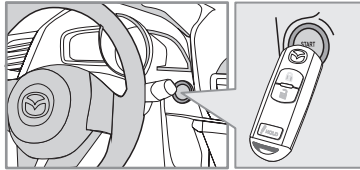


Place the 1st OEM remote close to the front of the START/STOP button exactly as shown.

6

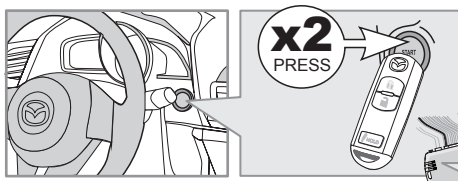


Press the START/STOP button twice to activate the vehicle's Ignition.

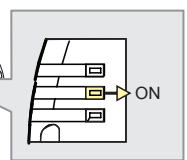

↳ The Yellow LED will turn ON.

7

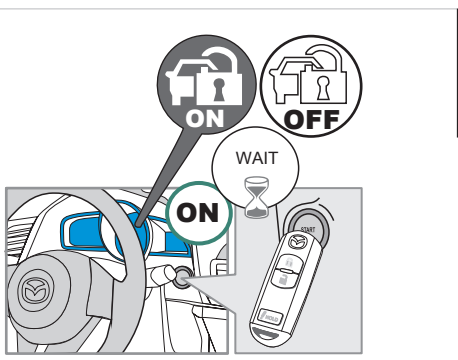


If the Blue LED is ON solid disconnect the 4-PIN Data-link harness (Black connector) and go back to step 1.


Wait for the security indicator to turn OFF (around 3 seconds).

8

**IMMEDIATELY**

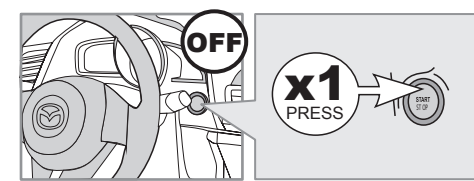


Press the START/STOP button once to deactivate the vehicle's Ignition.

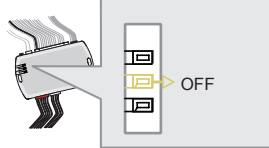

↳ The Yellow Led will turn OFF.




9

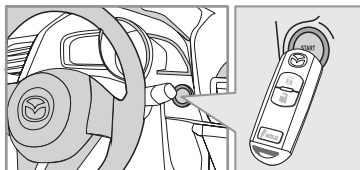


Place the 2nd OEM remote close to the front of the START/STOP button exactly as shown.

10

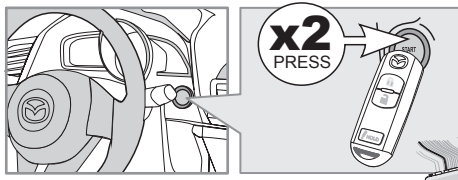


Press the START/STOP button twice to activate the vehicle's Ignition.

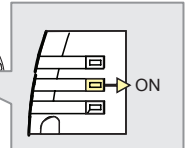


↳ The Yellow LED will turn ON.

KEY BYPASS PROGRAMMING PROCEDURE 3/6





KEY#2

**11**

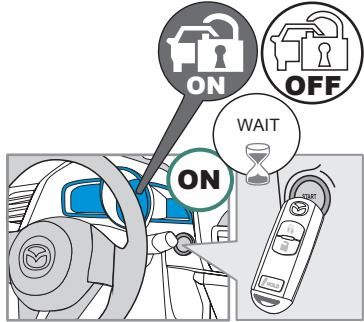

Wait for the security indicator to turn OFF (around 3 seconds).

**12**

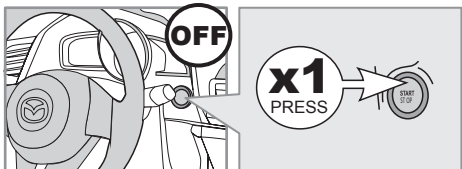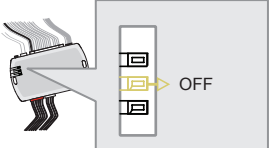



**IMMEDIATELY**


Press the START/STOP button once to deactivate the vehicle's Ignition.

↳ The Yellow Led will turn OFF.


**13**

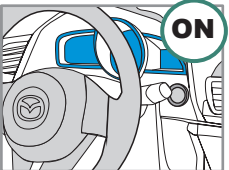

The vehicle's ignition will turn ON

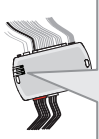


↳ The Yellow and Red LED's will alternatively illuminate.

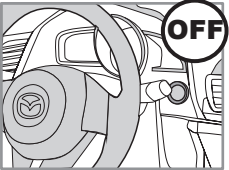

The vehicle's Ignition will turn OFF.


**14**

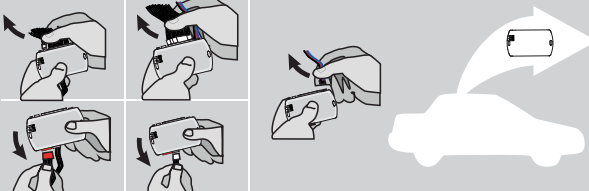

Disconnect all the connectors and after the Data-Link (4-pins) connector.

**KEY BYPASS PROGRAMMING PROCEDURE 4/6**


15

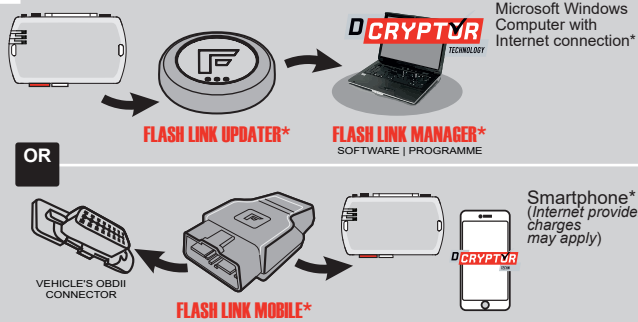

Use the tool:  
**FLASH LINK UPDATER** or  
**FLASH LINK MOBILE**  
to visit the DCryptor menu.

\*Parts required (not included)

16

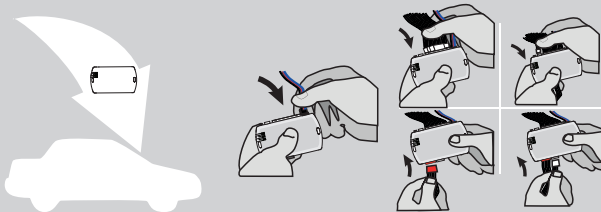


**AFTER DCRYPTOR PROGRAMMING COMPLETED**  
Go back to the vehicle and **reconnect** the 4-Pin (Data-Link) connector and after, all the remaining connector.

17



Repeat step 1 to 12.

18

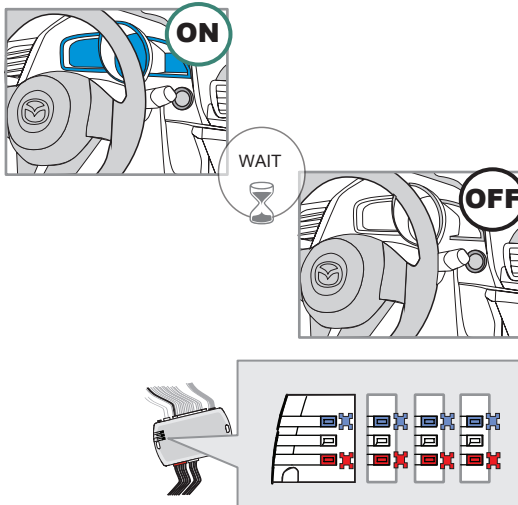


The vehicle's ignition will turn ON

The vehicle's Ignition will turn OFF.


↳ The Blue and Red LEDs will flash.

 19



Disconnect all Harness

20

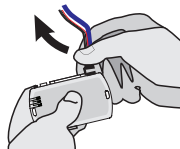


Next:

Disconnect the 4-PIN Data-link harness (Black connector).



CAN PROGRAMMING PROCEDURE


21

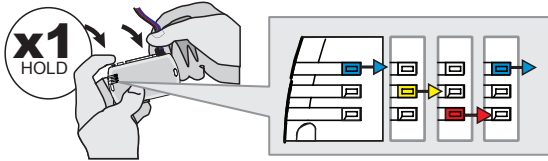

Press and hold the programming button:  
Connect the 4-PIN Data-link harness (Black connector).


↳ The Blue, Red, Yellow and Blue & Red LEDs will alternatively illuminate.

22

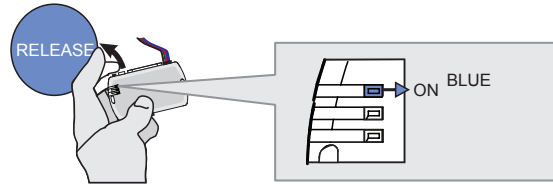


Release the programming button when the Blue LED is ON.

 If the Blue LED is not ON solid disconnect the 4-PIN Data-link harness (Black connector).



23

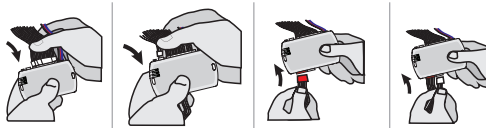


Connect the required remaining harnesses.

24




Press the START/STOP button twice to turn ON the vehicle's Ignition.

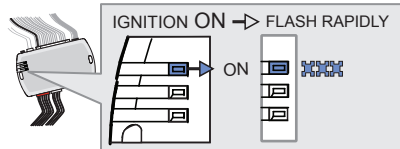


↳ The Blue LED will flash rapidly.

25

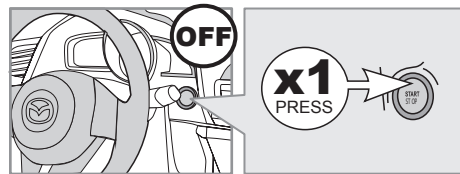

Press the START/STOP button once to turn OFF the vehicle's Ignition.

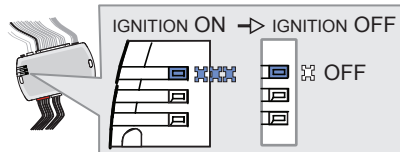


↳ The Blue LED will turn OFF.



The module is now programmed.

REMOTE STARTER FUNCTIONALITY |

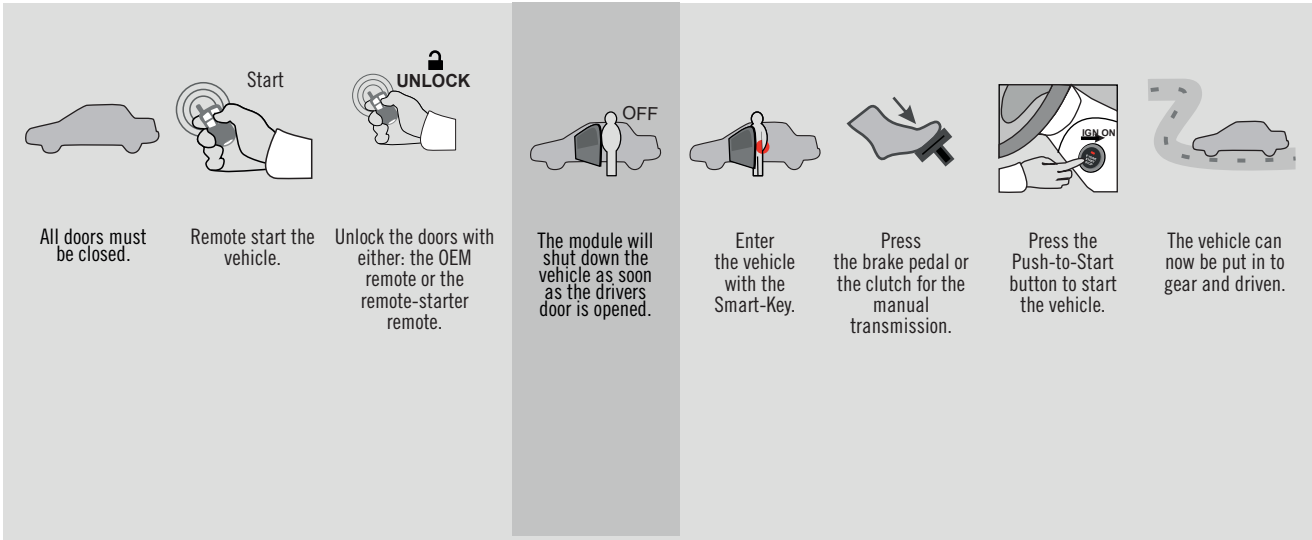

# THAR-MAZ1 THARNESS INSTALLATION

ADDENDUM - SUGGESTED WIRING CONFIGURATION



**ONLY COMPATIBLE WITH AUTOMATIC TRANSMISSION VEHICLES.**

Vehicle functions supported in this diagram (functional if equipped)

VEHICLE	YEARS	Connection #		Vehicle functions supported in this diagram (functional if equipped)														
		REMOTE STARTER NO DOORLOCK	REMOTE STARTER & DOOR-LOCK CONTROL	Immobilizer bypass	T-Harness	Lock	Unlock	Arm	Tachometer	Door Status	Trunk Status	Hood Status protection remote start	Hand-Brake Status	Foot-Brake Status	OEM Remote monitoring	Alarm mode		
<b>MAZDA</b>																		
CX9 Push-to-Start - Automatic transmission	2016	1	2	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•



HARDWARE VERSION

MINIMUM **6**

FIRMWARE VERSION

**71.[35]**

FORD MINIMUM



**Parts required** (Not included)

1X 1K Ohm Resistor (with doorlock)

**FLASH LINK MANAGER**

Software version 3.54 and more



**FLASH LINK UPDATER 2**


1X

Microsoft Windows Computer & Internet connection




DESCRIPTION

① Under steering column, START-STOP unit

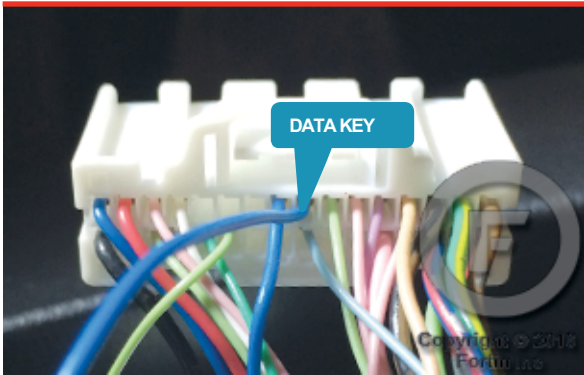



② Under steering column, START-STOP unit

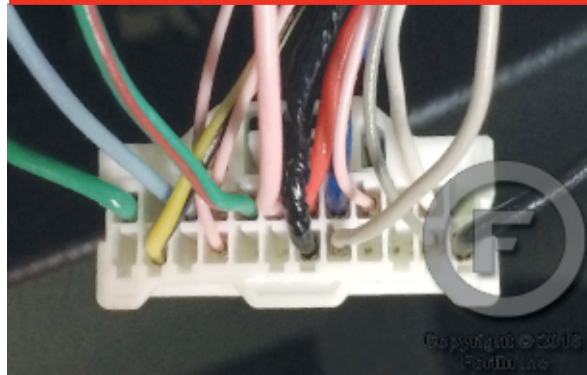

③ At parking lights switch




④ Harness in driver kick panel

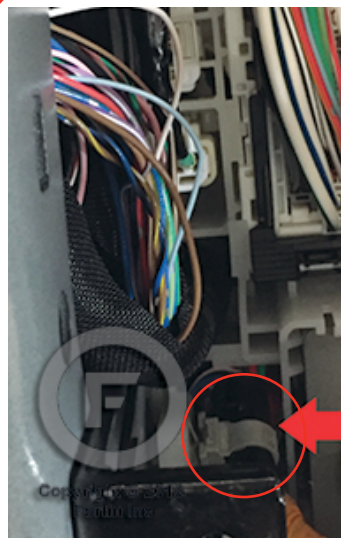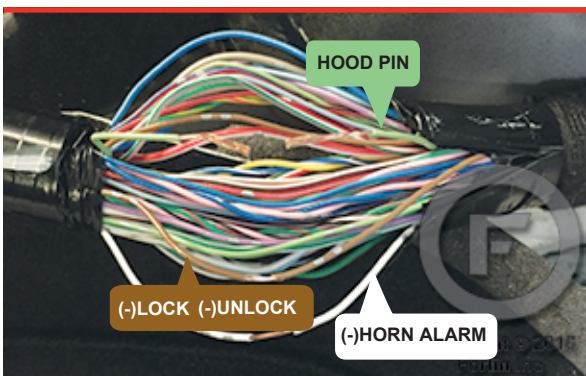

CONNECTION 1

REMOTE CAR STARTER ONLY - DOORLOCK BY OEM REMOTE

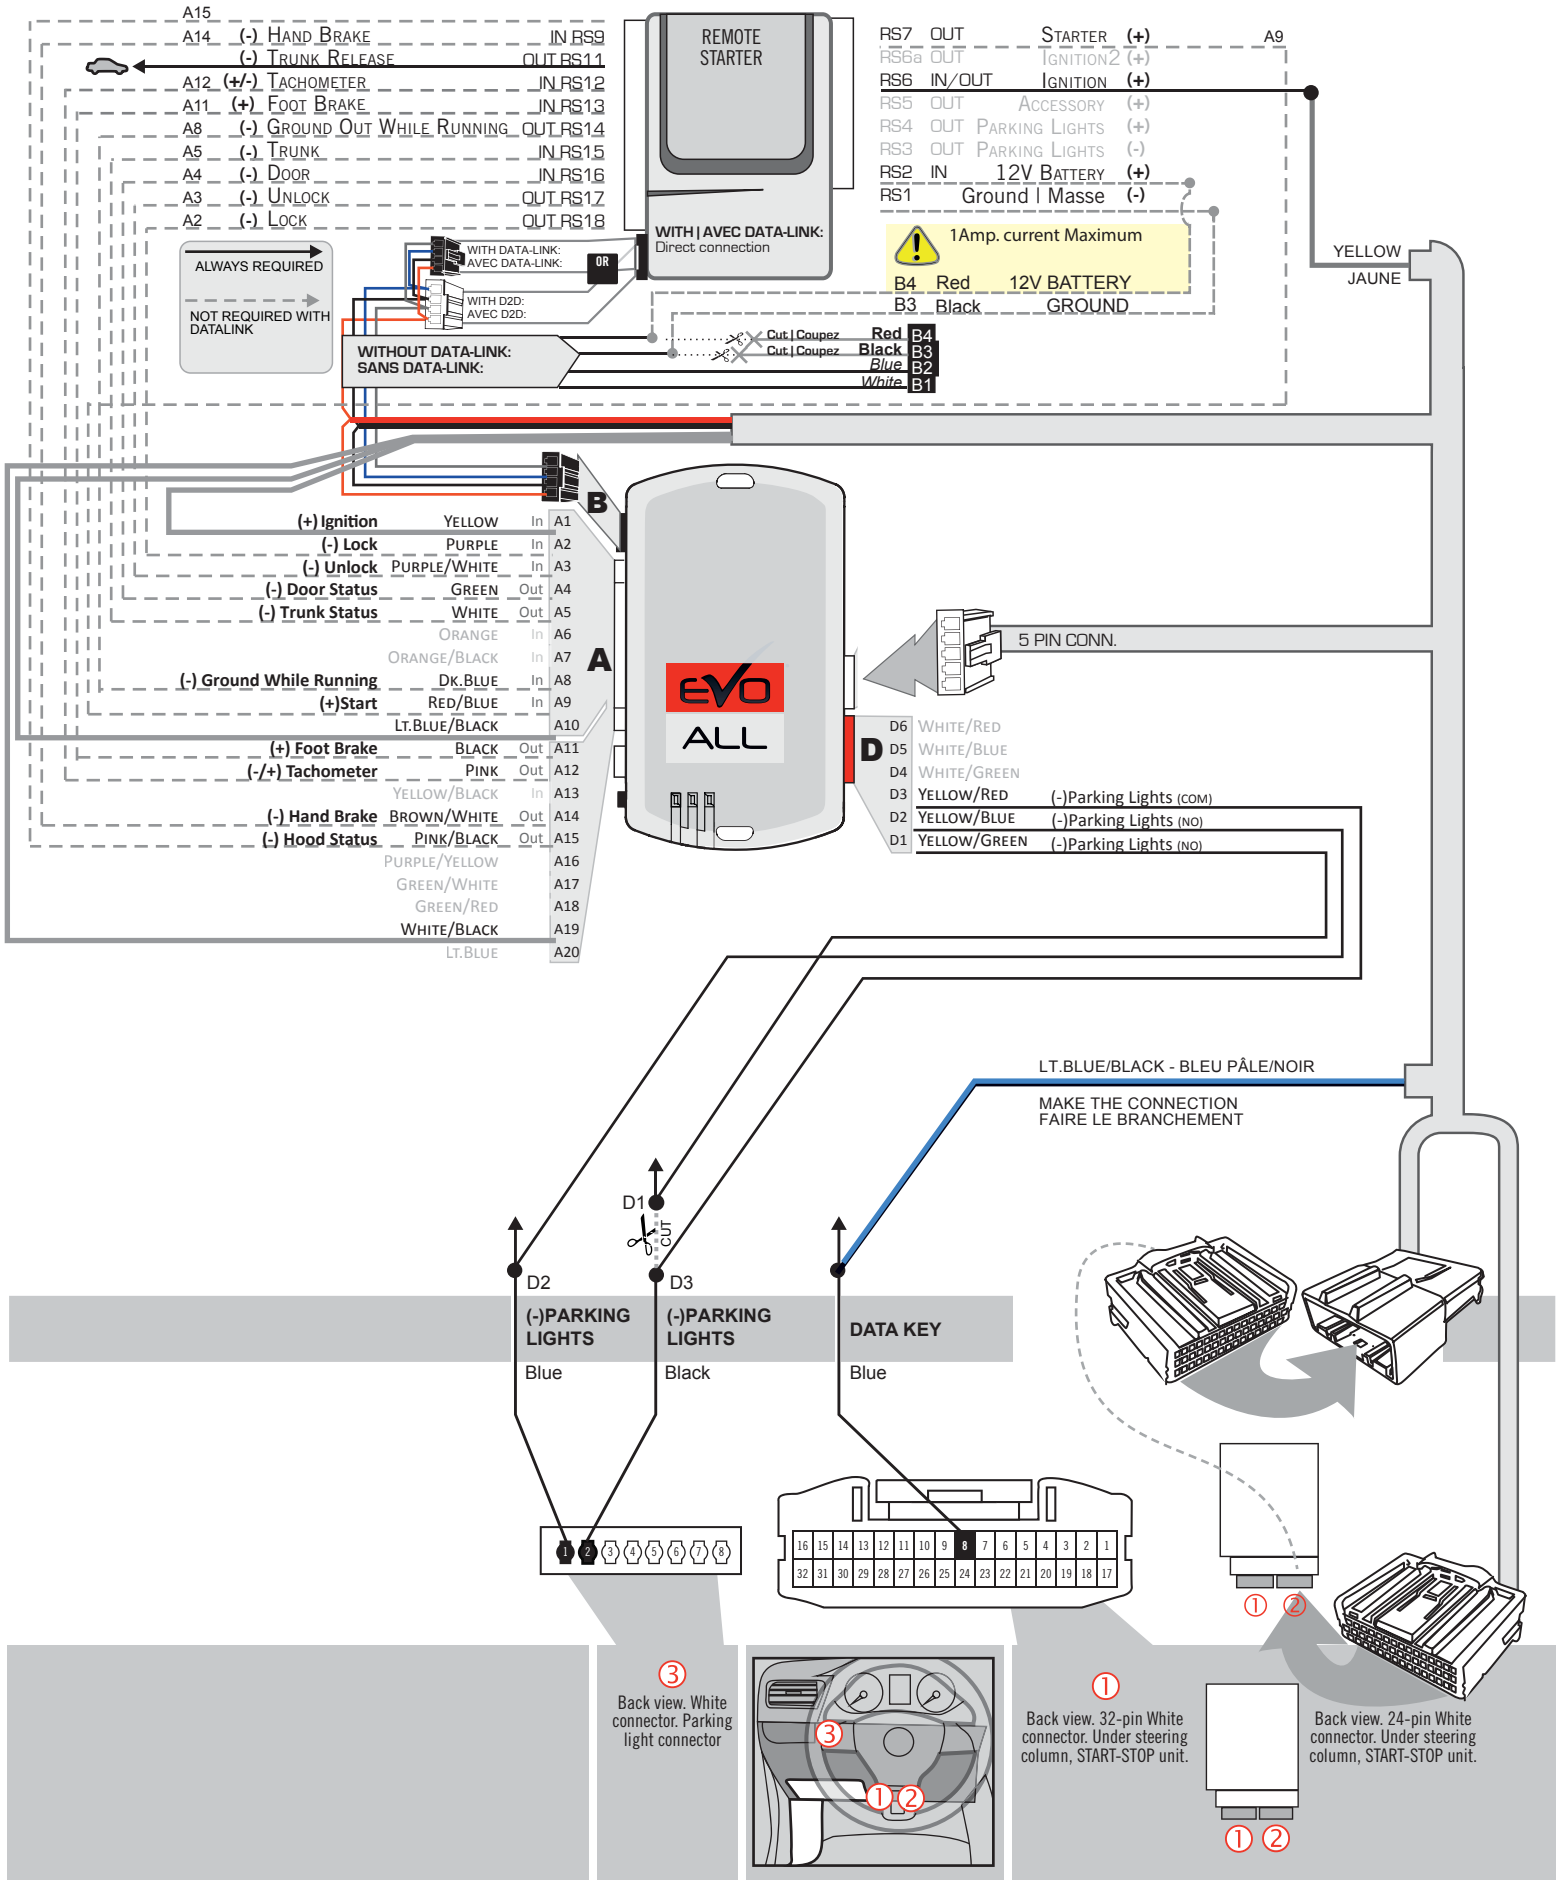

CONNECTION 2

REMOTE CAR STARTER AND DOORLOCK



Program bypass option:

UNIT OPTION

DESCRIPTION

**C1**


OEM Remote status (Lock/Unlock) monitoring

**G1**

Evo Alarm enable

CONNECTION 2

REMOTE CAR STARTER AND DOORLOCK

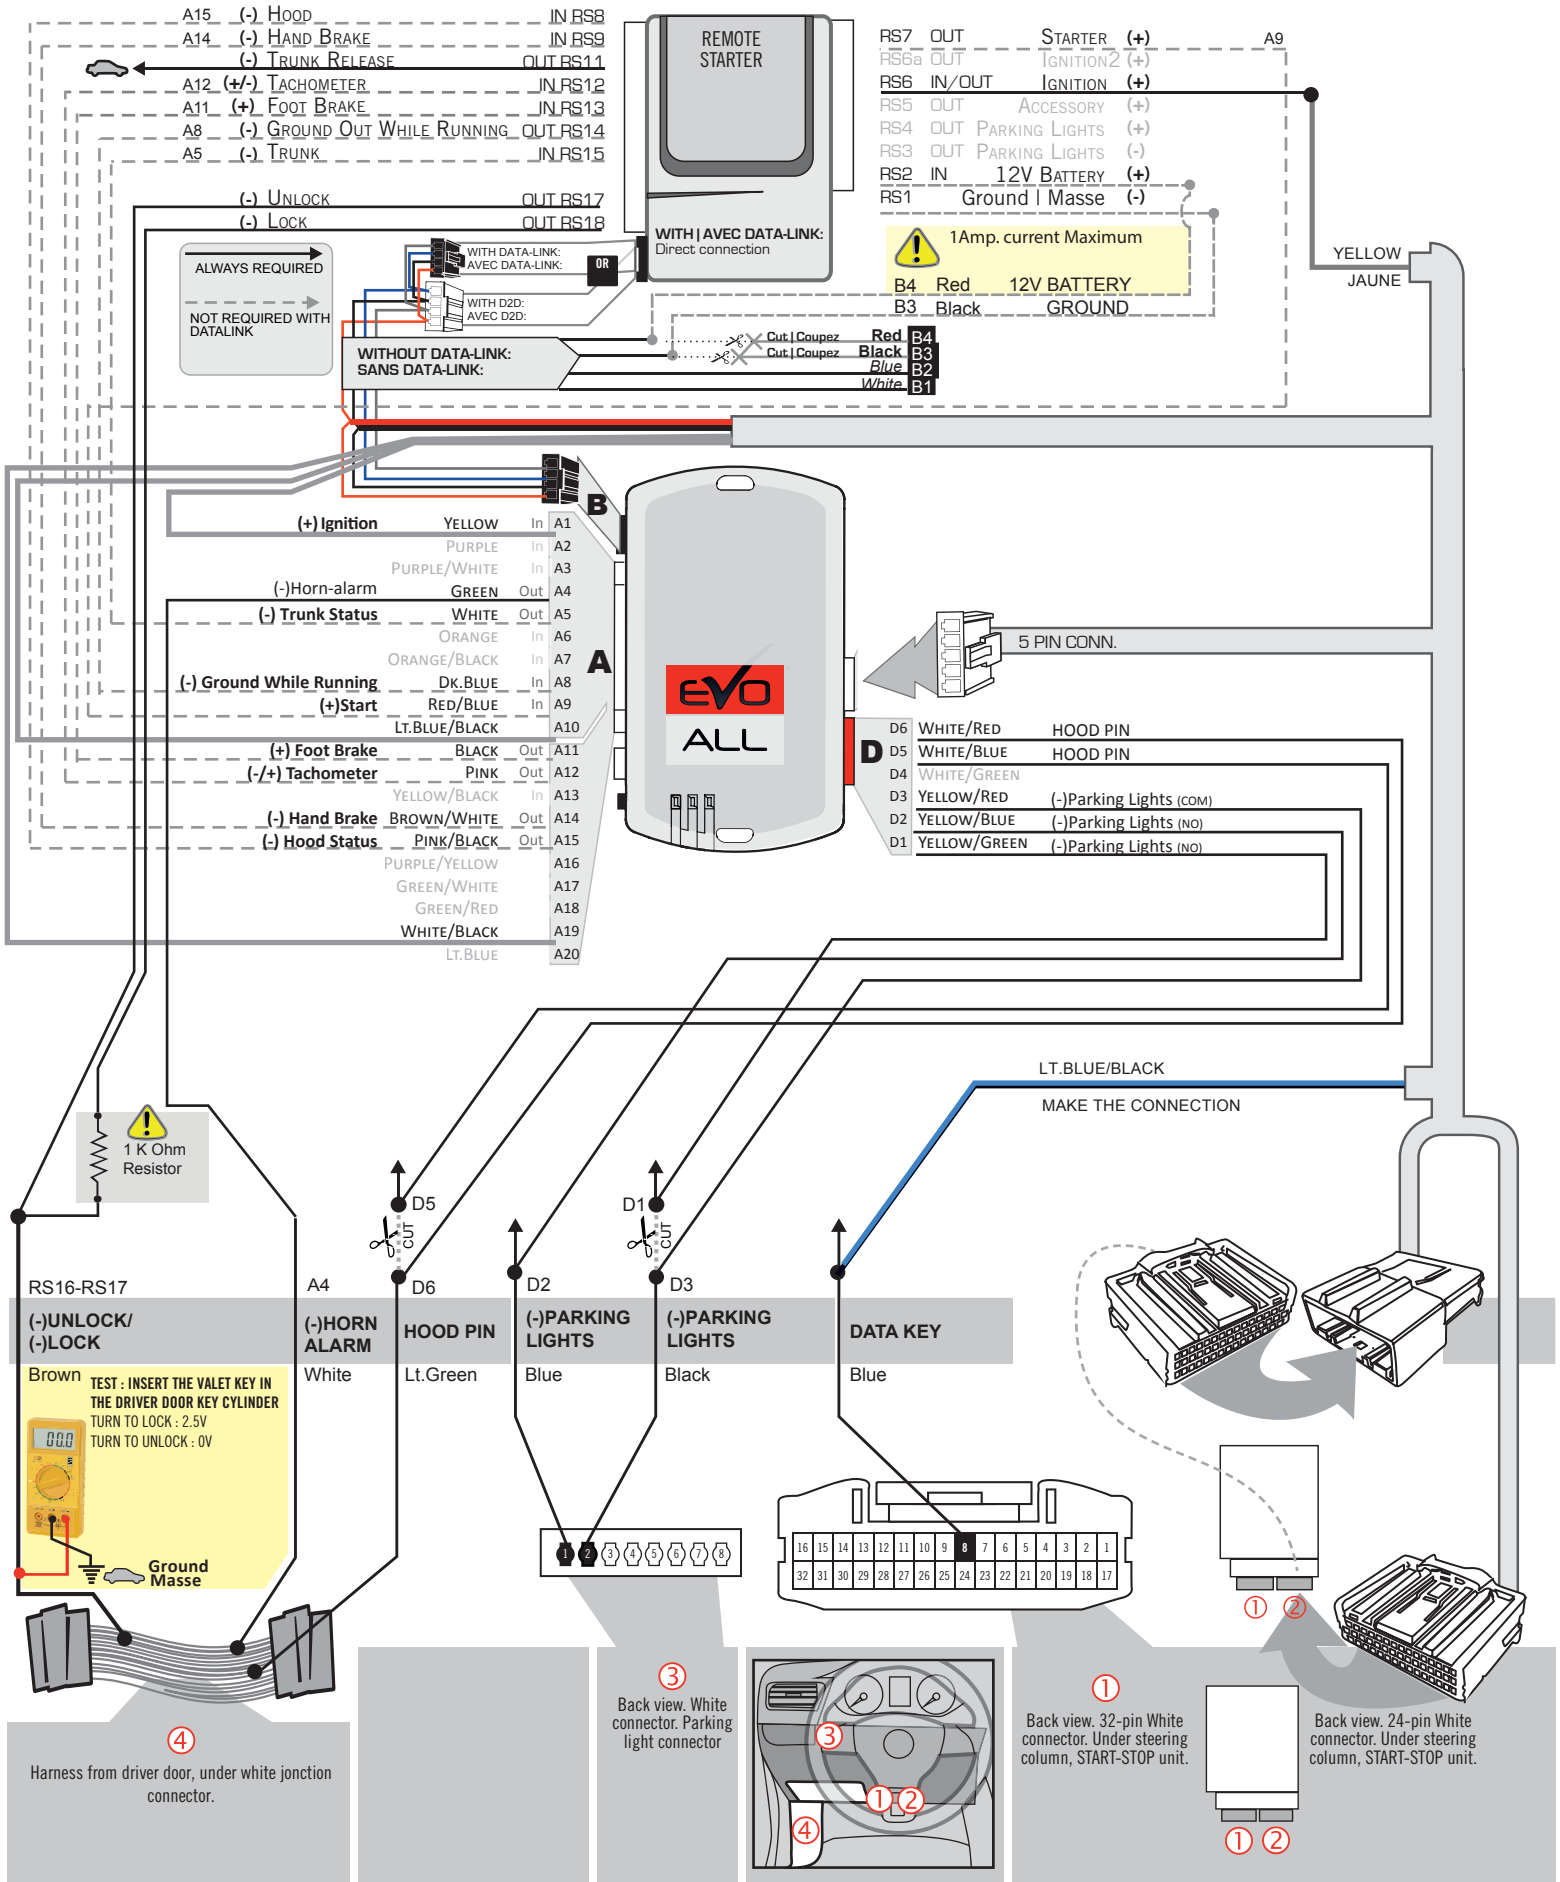

# x3 max.


**Do not program more than 3 modules on the same vehicle.**

If more than 3 modules are programmed to a vehicle, it is possible that the remote car starter will never be functional on this vehicle.

If all programming steps were successful and the vehicle cannot be remote started :


- Double check all connections using the installation diagram above as a reference.

If no connection errors can be found then please contact technical support assistance.

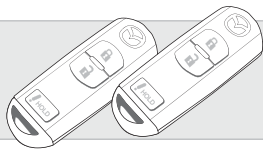

**Make sure** to have two valide vehicle key.


1

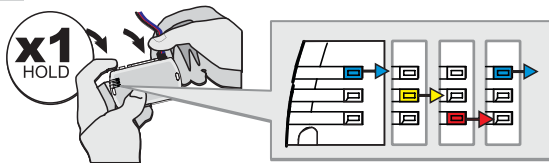

**Press and hold** the programming button:  
**Connect** the 4-PIN Data-link harness (Black connector).


↳ The Blue, Red, Yellow and Blue & Red LEDs will alternatively illuminate.

2

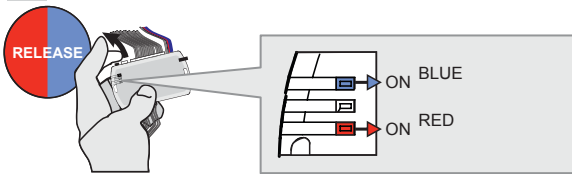


**Release** the programming button when the Blue & Red LEDs are ON.

 *If the LED are not solid BLUE and RED disconnect the 4-PIN Data-link harness (Black connector) and go back to step1.*




3

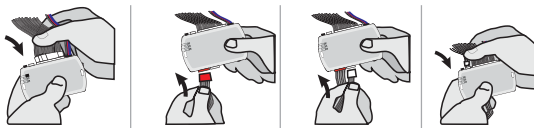

**Connect** the required remaining harnesses.

4

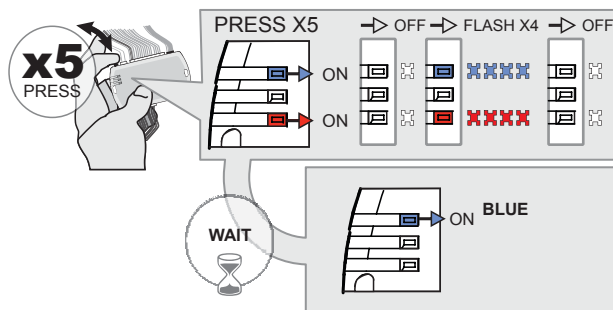

**Press and release** the programming button five times (5x).

↳ The Red & Blue LEDs will alternate between 4 flashes and a pause.

↳ **Wait** for the Blue LED to turn ON.




KEY BYPASS PROGRAMMING PROCEDURE 2/5




KEY #1

5

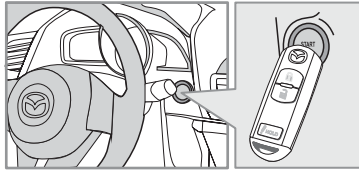


Place the 1st OEM remote close to the front of the START/STOP button exactly as shown.

6

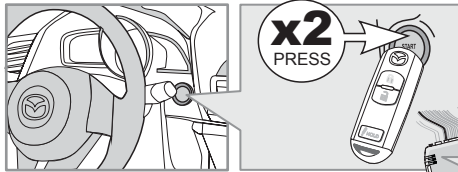


Press the START/STOP button twice to activate the vehicle's Ignition.

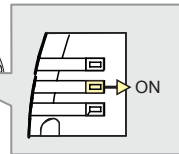


↳ The Yellow LED will turn ON.

7

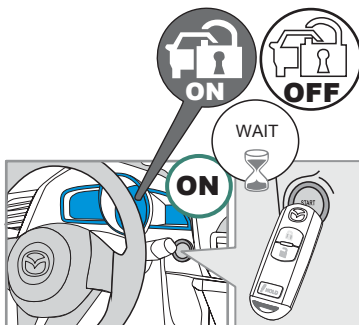

 
If the Blue LED is ON solid disconnect the 4-PIN Data-link harness (Black connector) and go back to step 1.




Wait for the security indicator to turn OFF (around 3 seconds).

8

**IMMEDIATELY**

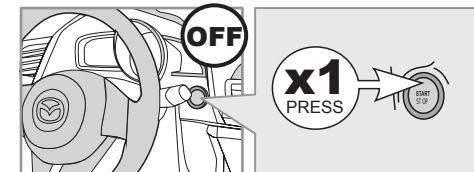

Press the START/STOP button once to deactivate the vehicle's Ignition.

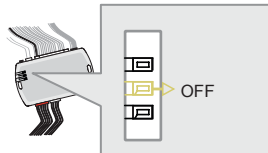


↳ The Yellow Led will turn OFF.



KEY #2

9

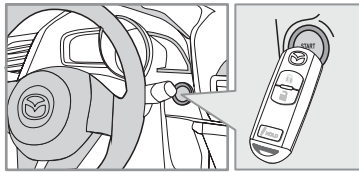


Place the 2nd OEM remote close to the front of the START/STOP button exactly as shown.

10



Press the START/STOP button twice to activate the vehicle's Ignition.

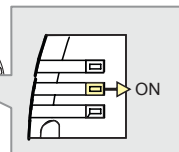


↳ The Yellow LED will turn ON.


s'allumera.

KEY BYPASS PROGRAMMING PROCEDURE 3/5

**11**




KEY#2

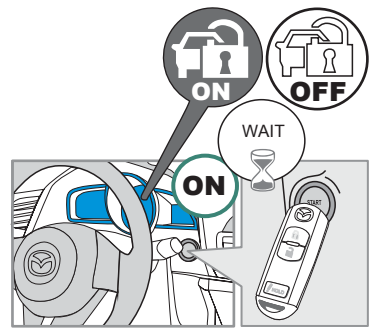


Wait for the security indicator to turn OFF (around 3 seconds).

**12**




**IMMEDIATELY**

Press the START/STOP button once to deactivate the vehicle's Ignition.

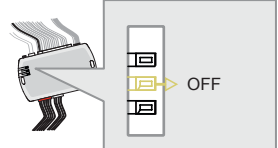


↳ The Yellow Led will turn OFF.


**13**

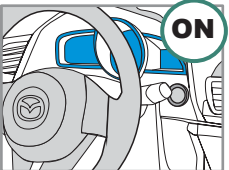

The vehicle's ignition will turn ON

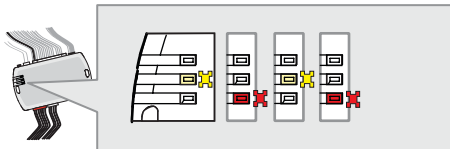


↳ The Yellow and Red LED's will alternatively illuminate.

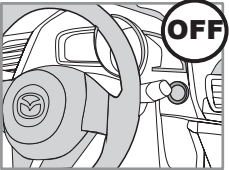

The vehicle's Ignition will turn OFF.

**14**

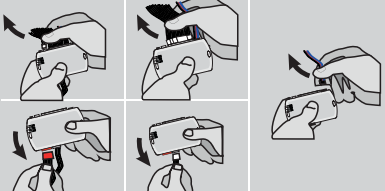




**Disconnect** all the connectors and after the Data-Link (4-pins) connector.

KEY BYPASS PROGRAMMING PROCEDURE 4/5

15

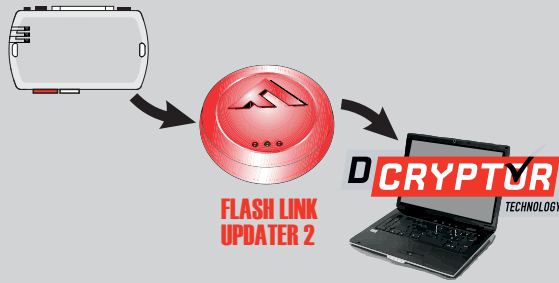

Connect the module to the FLASH LINK UPDATER 2 and visit the DCRYPTOR menu in the Flash-Link Manager.

Parts required (not included)




**FLASH LINK UPDATER 2**

**FLASH LINK MANAGER**  
SOFTWARE | PROGRAMME



Microsoft Windows  
Computer with  
Internet connection

16

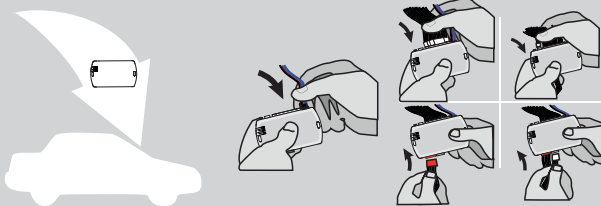


**AFTER DCRYPTOR PROGRAMMING COMPLETED**  
Go back to the vehicle and **reconnect** the 4-Pin (Data-Link) connector and after, all the remaining connector.

17




Repeat step 1 to 12.


18

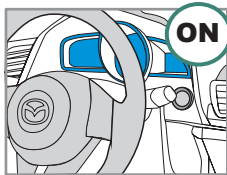

The vehicle's ignition will turn ON

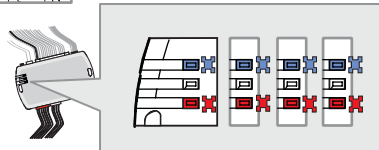


↳ The Blue and Red LEDs will flash.

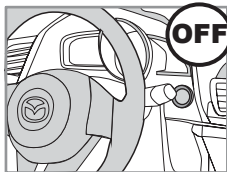


The vehicle's Ignition will turn OFF.

 19



Disconnect all Harness

20

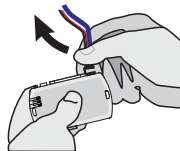

et ensuite:

Disconnect the 4-PIN Data-link harness (Black connector).


KEY BYPASS PROGRAMMING PROCEDURE 5/5

CAN PROGRAMMING PROCEDURE

21

**CAUTION FOR: EVO-ALARM OPTION**


If the module GREEN (A4) wire is connected to the HORN make sure that the option G1 (EVO-ALARM) is enabled before CAN programming.

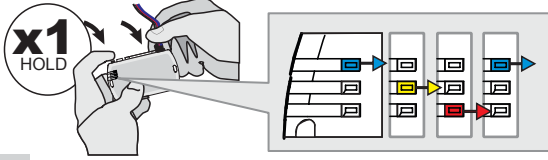

**Press and hold** the programming button:  
**Connect** the 4-PIN Data-link harness (Black connector).


↳ The Blue, Red, Yellow and Blue & Red LEDs will alternatively illuminate.

22

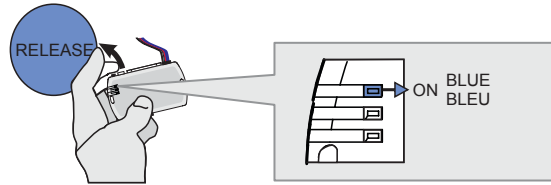


**Release** the programming button when the Blue LED is ON.

 If the Blue LED is not ON solid disconnect the 4-PIN Data-link harness (Black connector).



23

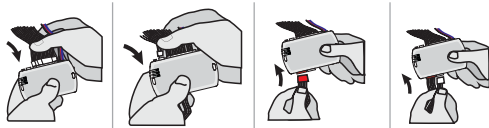


**Connect** the required remaining harnesses.

24




**Press** the START/STOP button twice to activate the vehicle's Ignition.

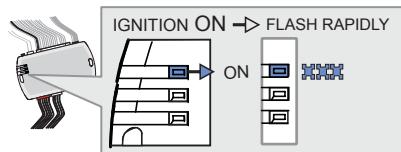


↳ The Blue LED will flash rapidly.

25

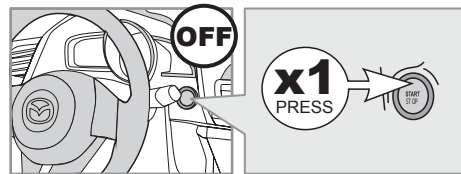

**Press** the START/STOP button once to deactivate the vehicle's Ignition.

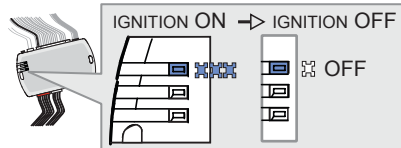

↳ The Blue LED will turn OFF.



The module is now programmed.

## REMOTE STARTER FUNCTIONALITY



All doors must be closed.



Do not remote-start with the OEM remote inside the vehicle.



Never remote-start with a passenger inside the vehicle.



**Remote start** the vehicle.





*The module will shut down the vehicle as soon as a door is opened.*

THAR-MAZ1 THARNESH INSTALLATION WITH 2 KEYS PROGRAMMING


ADDENDUM - SUGGESTED WIRING CONFIGURATION

Vehicle functions supported in this diagram (functional if equipped)


VEHICLE	YEARS	Immobilizer bypass	T-Harness	Lock	Unlock	Arm	Disarm	Tachometer	Door Status	Trunk Status	Hood Status protection remote start	Hand-Brake Status	Foot-Brake Status	OEM Remote monitoring
														
<b>MAZDA</b>														
CX9	Push-to-Start - Automatic transmission	2016-2021	•	•	•	•	•	•	•	•	•	•	•	•

	FIRMWARE VERSION	To add the firmware version and the options, use the <b>FLASH LINK UPDATER</b> or <b>FLASH LINK MOBILE</b> tool, sold separately.
	<b>85.[11]</b> MINIMUM	

IF THE VEHICLE IS NOT EQUIPPED WITH FUNCTIONAL HOOD PIN:	<b>A11</b>	<input type="checkbox"/> OFF	Hood trigger (Output Status).
--	------------	------------------------------	-------------------------------

	UNIT OPTION	DESCRIPTION
 Program bypass option:	<b>C1</b>	OEM Remote status (Lock/Unlock) monitoring

**NOTES**

 THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.

**MANDATORY INSTALL**

\*HOOD PIN



**HOOD STATUS:** THE HOOD PIN SWITCH MUST BE INSTALLED IF THE VEHICLE CAN BE REMOTE STARTED WITH THE HOOD OPEN, SET FUNCTION **A11** TO OFF.

**A11**


OFF

Notice: the installation of safety elements are mandatory. The hood pin is an essential security element and must be installed.


THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.

DESCRIPTION


① Under steering column, START-STOP unit

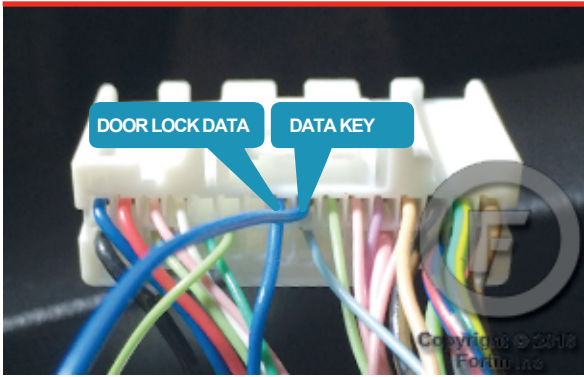


② Under steering column, START-STOP unit

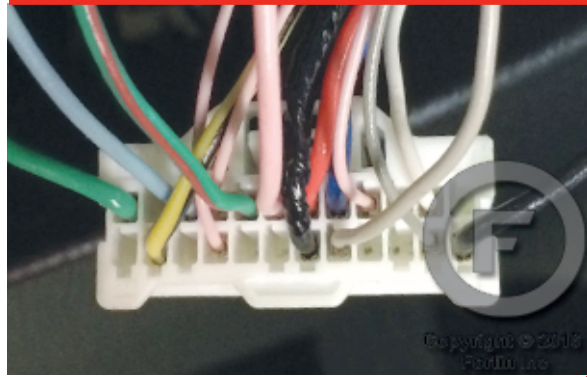

③ At parking lights switch

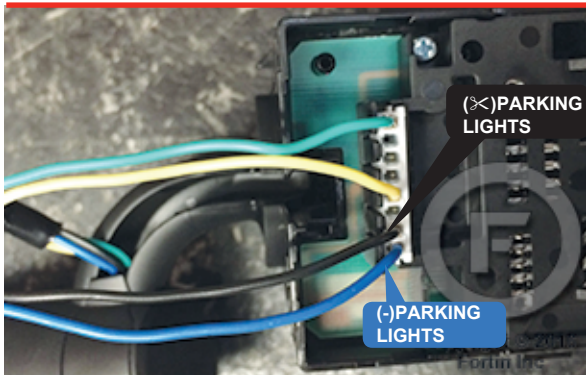

④ Engine compartment - without OEM ALARM

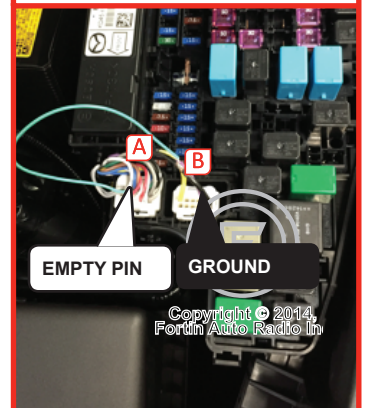




# ATTENTION

Before disconnecting a module, a computer or a control unit from a vehicle: Always disconnect the negative terminal from the vehicle's battery.


In these vehicles, the factory keyless entry module is sensitive to interference and may cease to operate if some precautions are not taken. Disconnect the (-) terminal of the battery prior to disconnecting the connectors at the smartkey module below the steering wheel to avoid damage to the smartkey entry module.

1

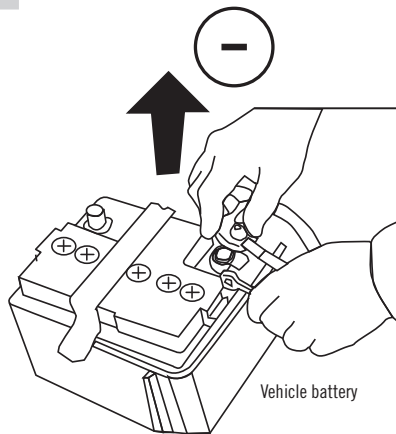


Disconnect the (-) terminal of the battery.

2

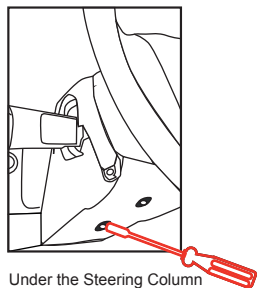


Under the Steering Column

1 Unscrew.

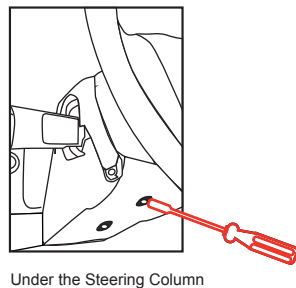


Under the Steering Column

2 Unscrew

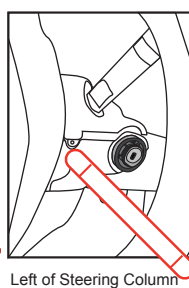


Left of Steering Column

3 Onclip

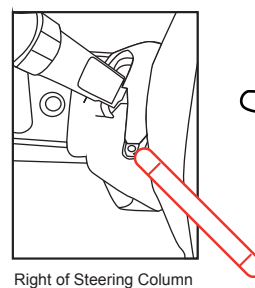

Right of Steering Column

4 Onclip

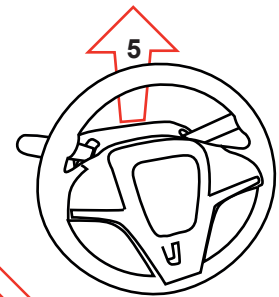

5 Gently pull up the cover of the steering column.


3

Make the following connections.


CONTINUED NEXT PAGE



4

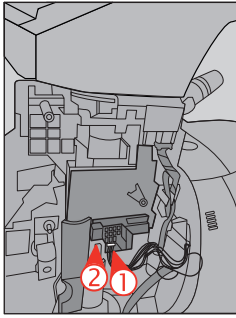

Under steering column, START-STOP unit.

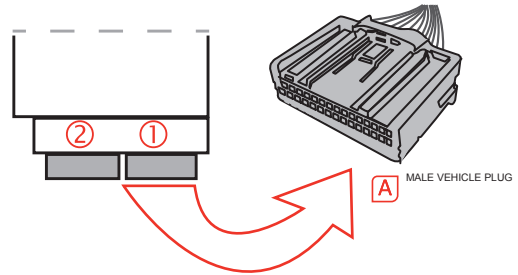


Disconnect the connector

A

5


Under steering column, START-STOP unit.

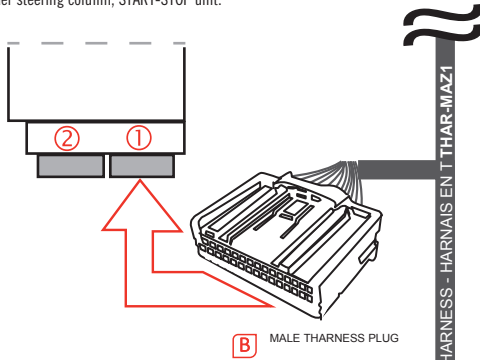

Connect the connector

B

6

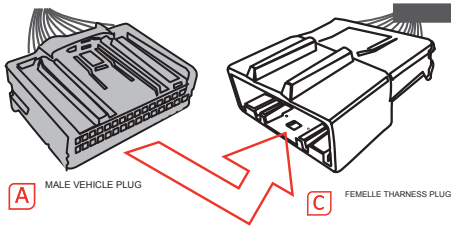

Connect the connector

A


into connector

C


7


Make other required connections.

**AUTOMATIC TRANSMISSION WIRING CONNECTION**

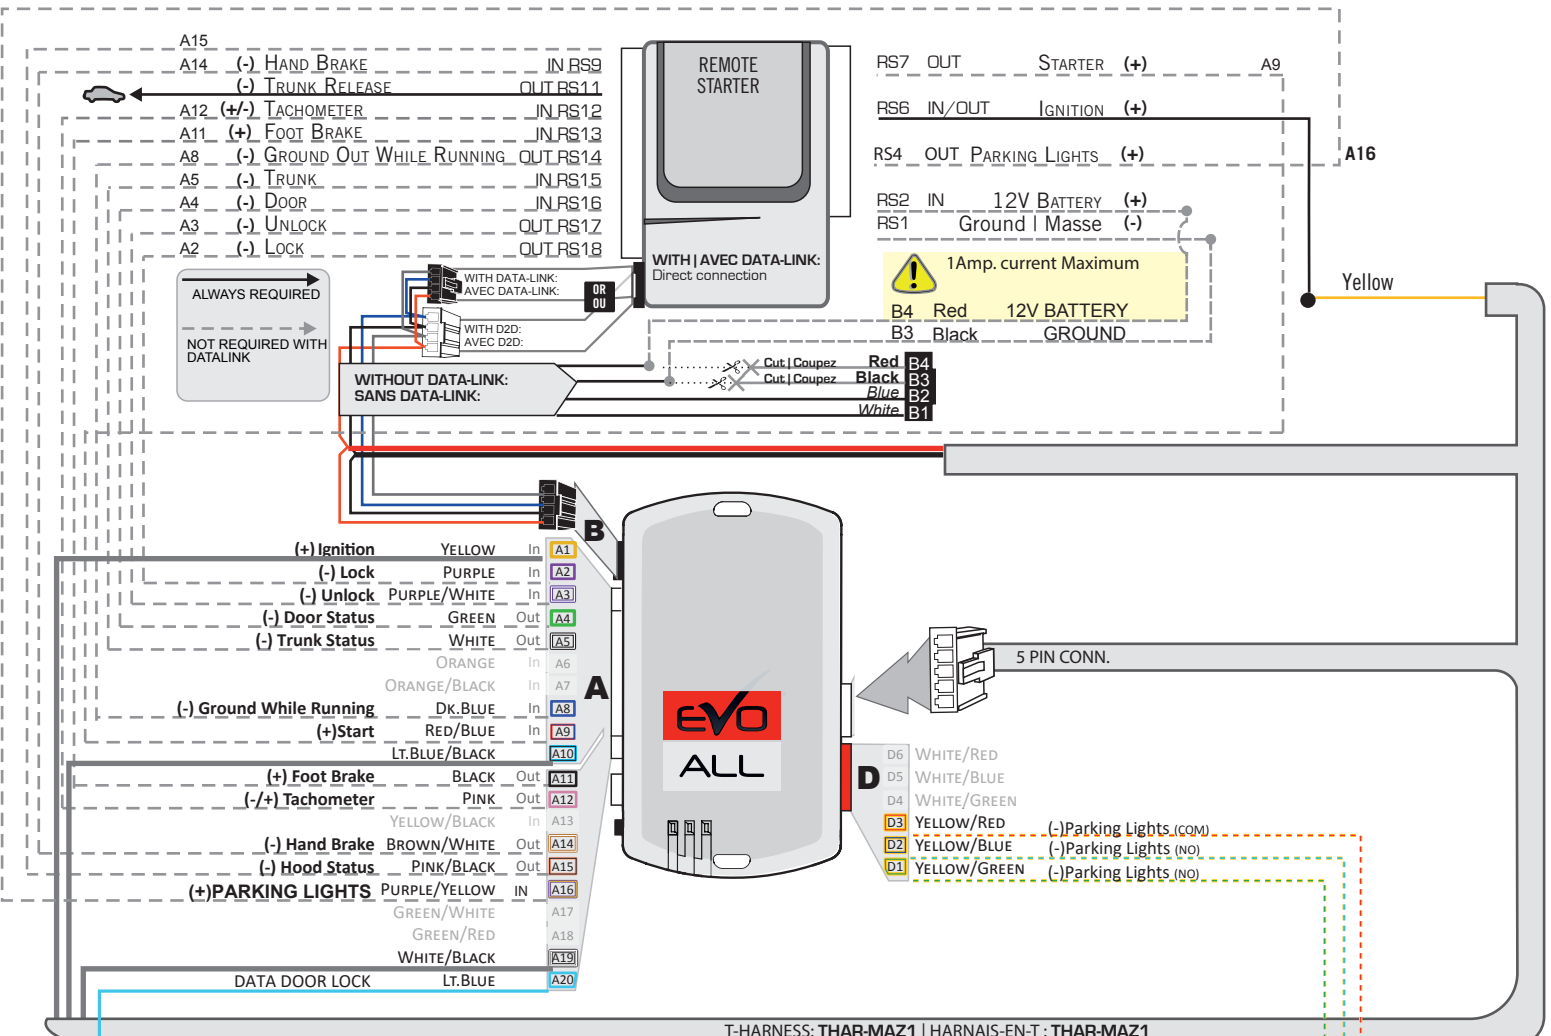

T-HARNESS: THAR-MAZ1 | HARNAIS-EN-T : THAR-MAZ1

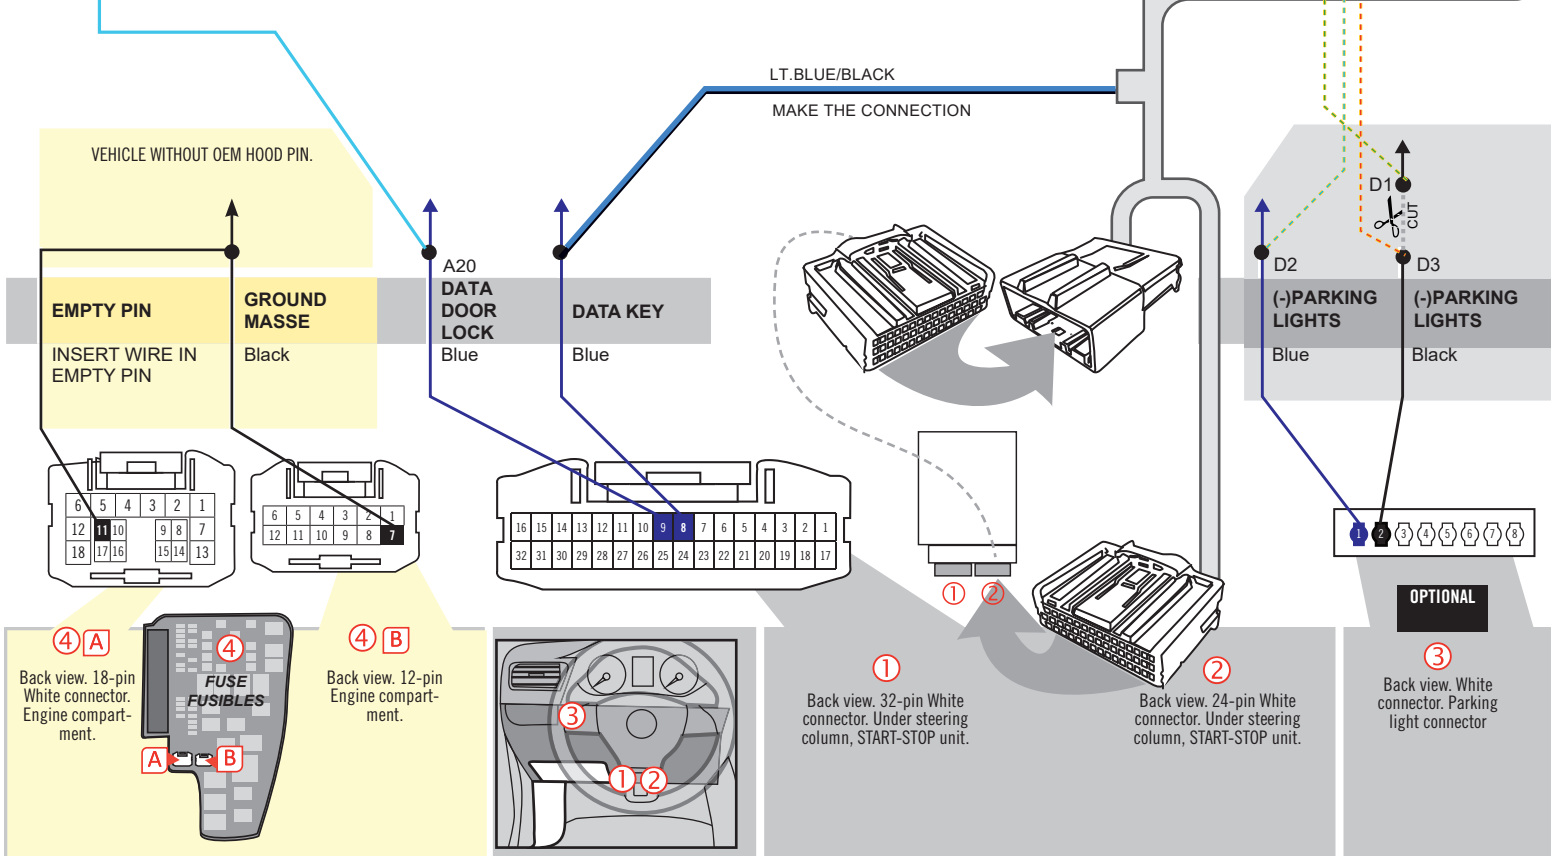

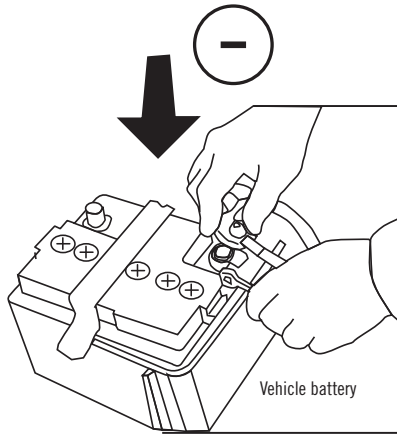

**Reconnect** the (-) terminal of the battery.

CONTINUED NEXT PAGE

# x3 max.


**Do not program more than 3 modules on the same vehicle.**

If more than 3 modules are programmed to a vehicle, it is possible that the remote car starter will never be functional on this vehicle.

If all programming steps were successful and the vehicle cannot be remote started :


- Double check all connections using the installation diagram above as a reference.

If no connection errors can be found then please contact technical support assistance.

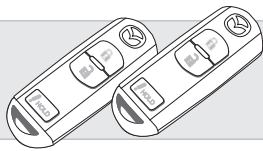

**Make sure** to have two valide vehicle key.


1

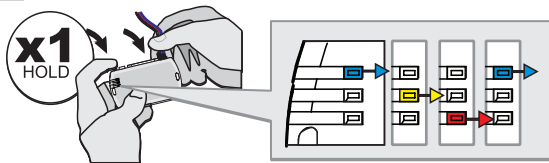

**Press and hold** the programming button:  
**Connect** the 4-PIN Data-link harness (Black connector).


↳ The Blue, Red, Yellow and Blue & Red LEDs will alternatively illuminate.

2

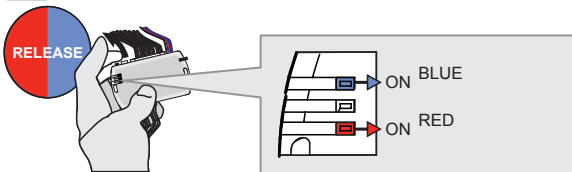


**Release** the programming button when the Blue & Red LEDs are ON.

 *If the LED are not solid BLUE and RED disconnect the 4-PIN Data-link harness (Black connector) and go back to step1.*




3

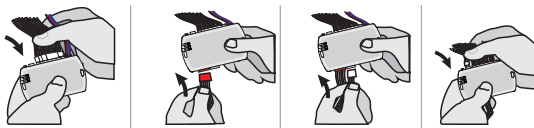

**Connect** the required remaining harnesses.

4

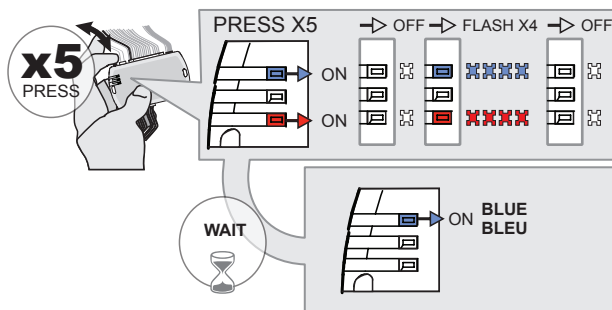

**Press and release** the programming button five times (5x).

↳ The Red & Blue LEDs will alternate between 4 flashes and a pause.


↳ **Wait** for the Blue LED to turn ON.

KEY BYPASS PROGRAMMING PROCEDURE 2/5




KEY #1

5

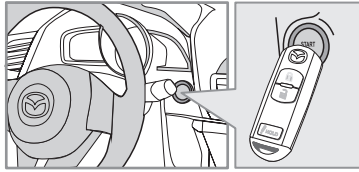


Place the 1st OEM remote close to the front of the START/STOP button exactly as shown.

6

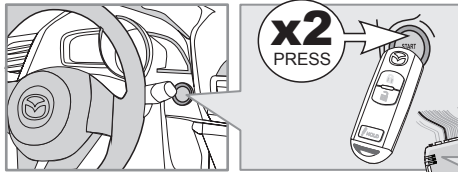


Press the START/STOP button twice to activate the vehicle's Ignition.

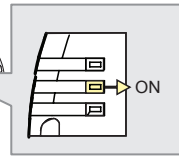


↳ The Yellow LED will turn ON.

7

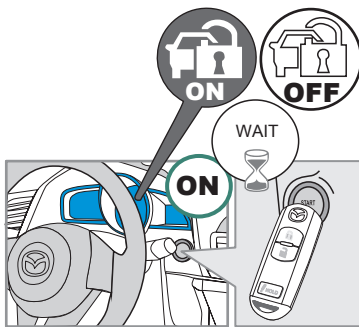

 If the Blue LED is ON solid disconnect the 4-PIN Data-link harness (Black connector) and go back to step 1.




Wait for the security indicator to turn OFF (around 3 seconds).

8

IMMEDIATELY



Press the START/STOP button once to deactivate the vehicle's Ignition.

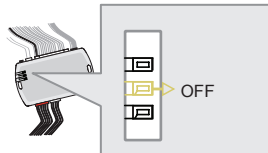


↳ The Yellow Led will turn OFF.




KEY #2

9

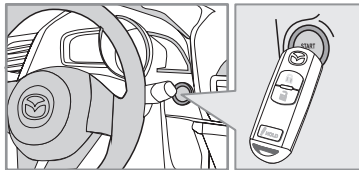


Place the 2nd OEM remote close to the front of the START/STOP button exactly as shown.

10

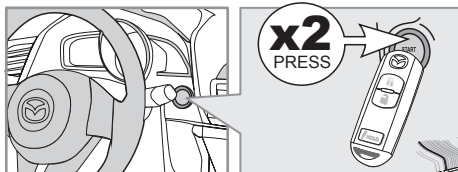


Press the START/STOP button twice to activate the vehicle's Ignition.

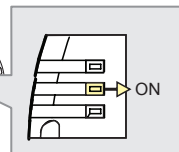


↳ The Yellow LED will turn ON.

KEY BYPASS PROGRAMMING PROCEDURE 3/6

**11**




KEY#2

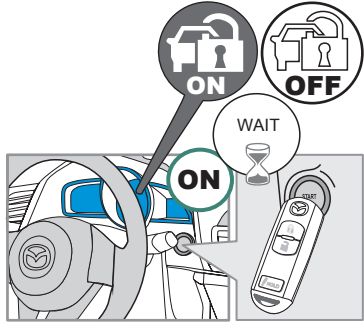

Wait for the security indicator to turn OFF (around 3 seconds).


---

**12**

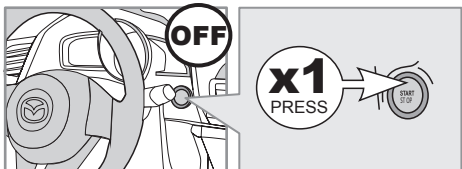


**IMMEDIATELY**

Press the START/STOP button once to deactivate the vehicle's Ignition.

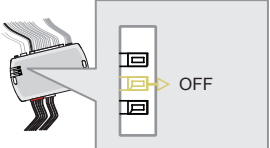


↳ The Yellow Led will turn OFF.


**13**

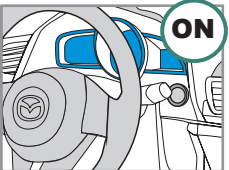

The vehicle's ignition will turn ON

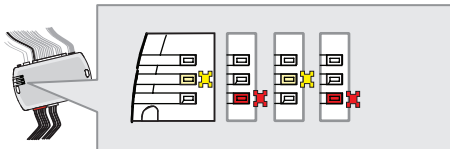



↳ The Yellow and Red LED's will alternatively illuminate.

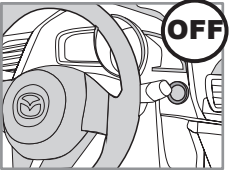

The vehicle's Ignition will turn OFF.

**14**

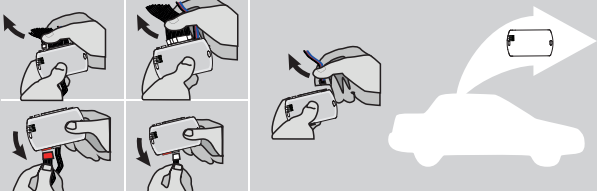


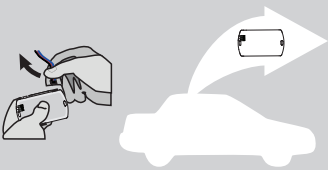

Disconnect all the connectors and after the Data-Link (4-pins) connector.


**KEY BYPASS PROGRAMMING PROCEDURE 4/6**

15

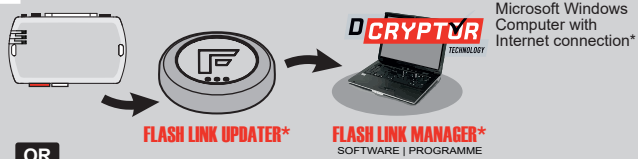


Use the tool:  
**FLASH LINK UPDATER** or  
**FLASH LINK MOBILE**  
to visit the DCryptor menu.

OR

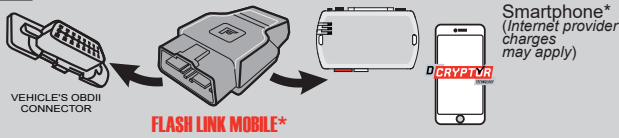

\*Parts required (not included)

16

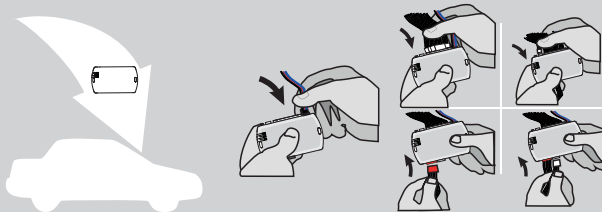


**AFTER DCRYPTOR PROGRAMMING COMPLETED**  
Go back to the vehicle and **reconnect** the 4-Pin (Data-Link) connector and after, all the remaining connector.

17



Repeat step 1 to 12.

18

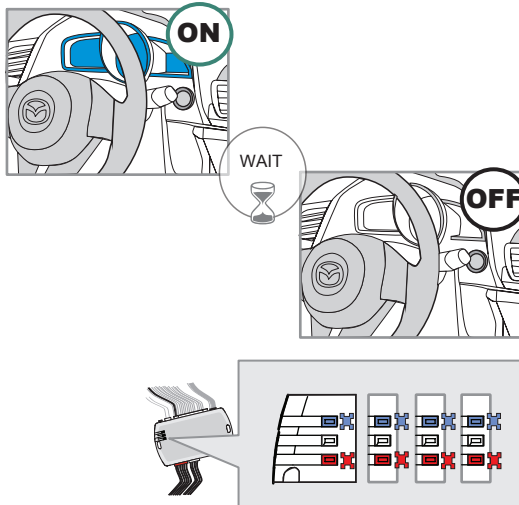


The vehicle's ignition will turn ON

The vehicle's Ignition will turn OFF.


↳ The Blue and Red LEDs will flash.

 19



Disconnect all Harness

20

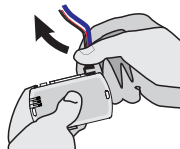


Next:

Disconnect the 4-PIN Data-link harness (Black connector).

CAN PROGRAMMING PROCEDURE


21

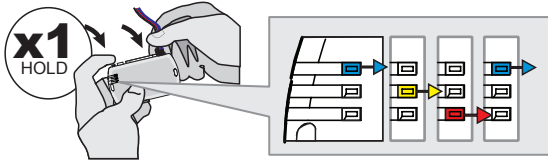

Press and hold the programming button: Connect the 4-PIN Data-link harness (Black connector).


↳ The Blue, Red, Yellow and Blue & Red LEDs will alternatively illuminate.

22

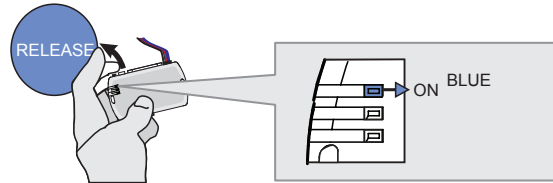


Release the programming button when the Blue LED is ON.

 If the Blue LED is not ON solid disconnect the 4-PIN Data-link harness (Black connector).



23

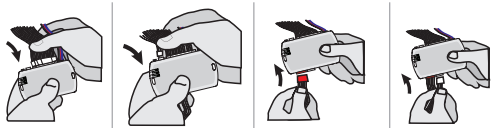


Connect the required remaining harnesses.

24




Press the START/STOP button twice to turn ON the vehicle's Ignition.

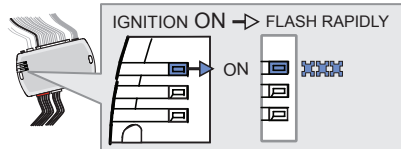


↳ The Blue LED will flash rapidly.

25

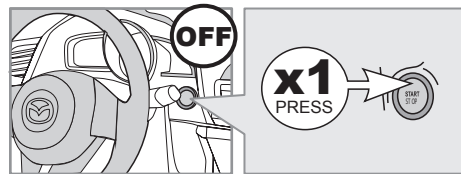

Press the START/STOP button once to turn OFF the vehicle's Ignition.

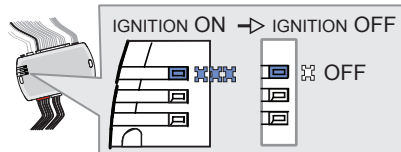


↳ The Blue LED will turn OFF.



The module is now programmed.



REMOTE STARTER FUNCTIONALITY |

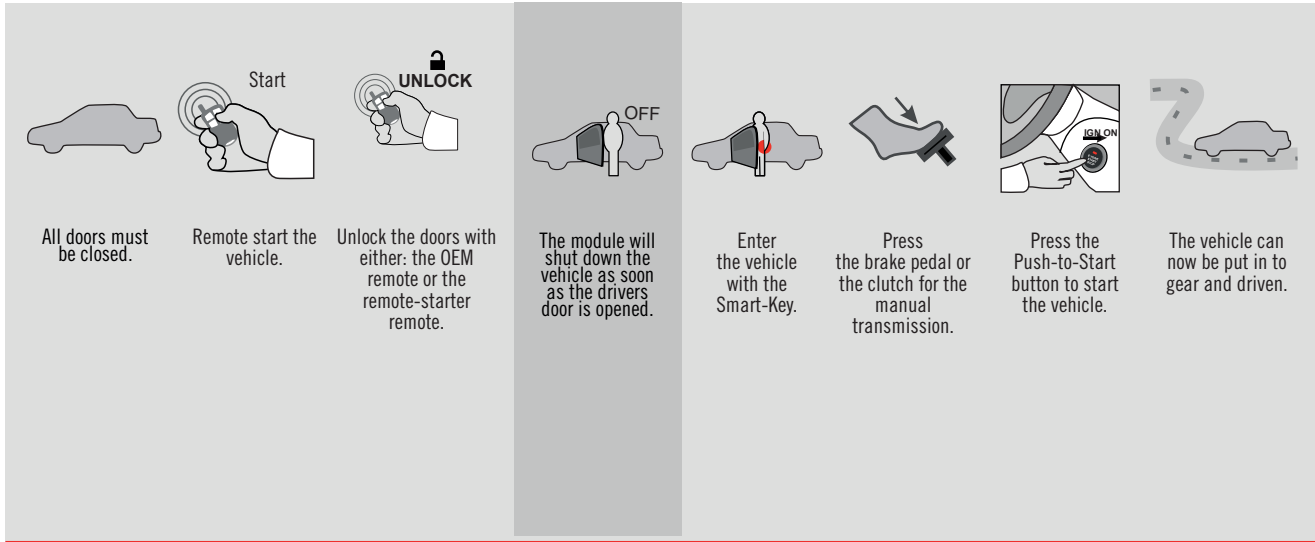

**MAZDA 6 - T-HARNESS MAZDA**

ADDENDUM - SUGGESTED WIRING CONFIGURATION



**ONLY COMPATIBLE WITH AUTOMATIC TRANSMISSION VEHICLES.**



Vehicle functions supported in this diagram (functional if equipped)

VEHICLE	YEARS ANNÉES	Connection #			Vehicle functions supported in this diagram (functional if equipped)													
		REMOTE STARTER NO DOORLOCK	REMOTE STARTER & DOORLOCK CONTROL	VEHICLE WITHOUT OEM ALARM	Immobilizer bypass	Lock	Unlock	Arm	Tachometer	Door Status	Trunk Status	Hood Status protection remote start	Hand-Brake Status	Foot-Brake Status	OEM Remote monitoring	Alarm mode		
<b>MAZDA</b>																		
6 <i>Push-to-Start - AT</i>	2013-2016	1	2	3	•	•	•	•	•	•	•	•	•	•	•	•	•	•



HARDWARE VERSION

MINIMUM **6**

FIRMWARE VERSION

**71.[35]**

FORD MINIMUM



**Parts required** (Not included)

1X 1K Ohm Resistor

**FLASH LINK MANAGER**

Software version 3.52 and more



**FLASH LINK UPDATER 2**

1X




Microsoft Windows Computer & Internet connection




DESCRIPTION |

① ② Under steering column, START-STOP unit

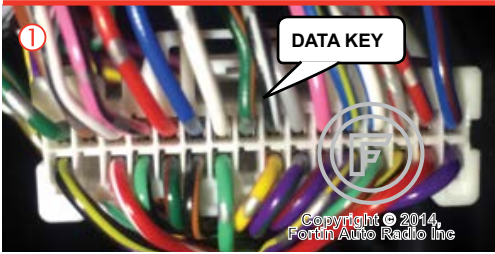


③ Parking Light connector

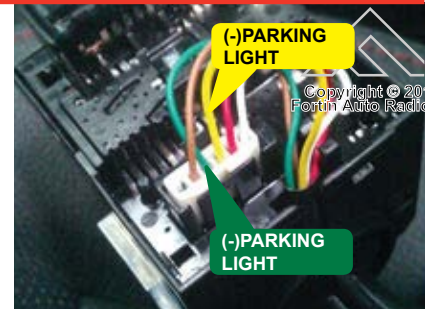

above Driver Kick Panel. Near firewall.

④


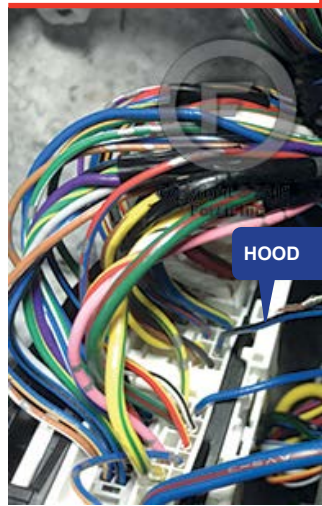



driver kick panel.

⑤ ⑧

Engine compartment - without OEM ALARM

⑥ ⑦

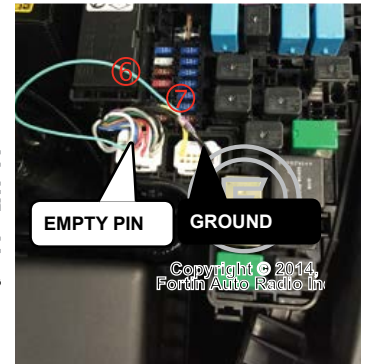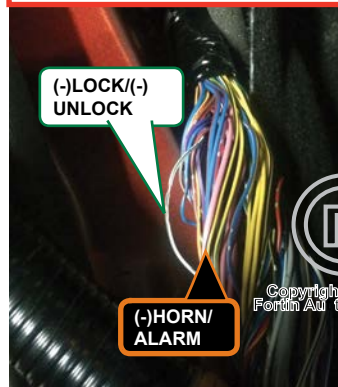


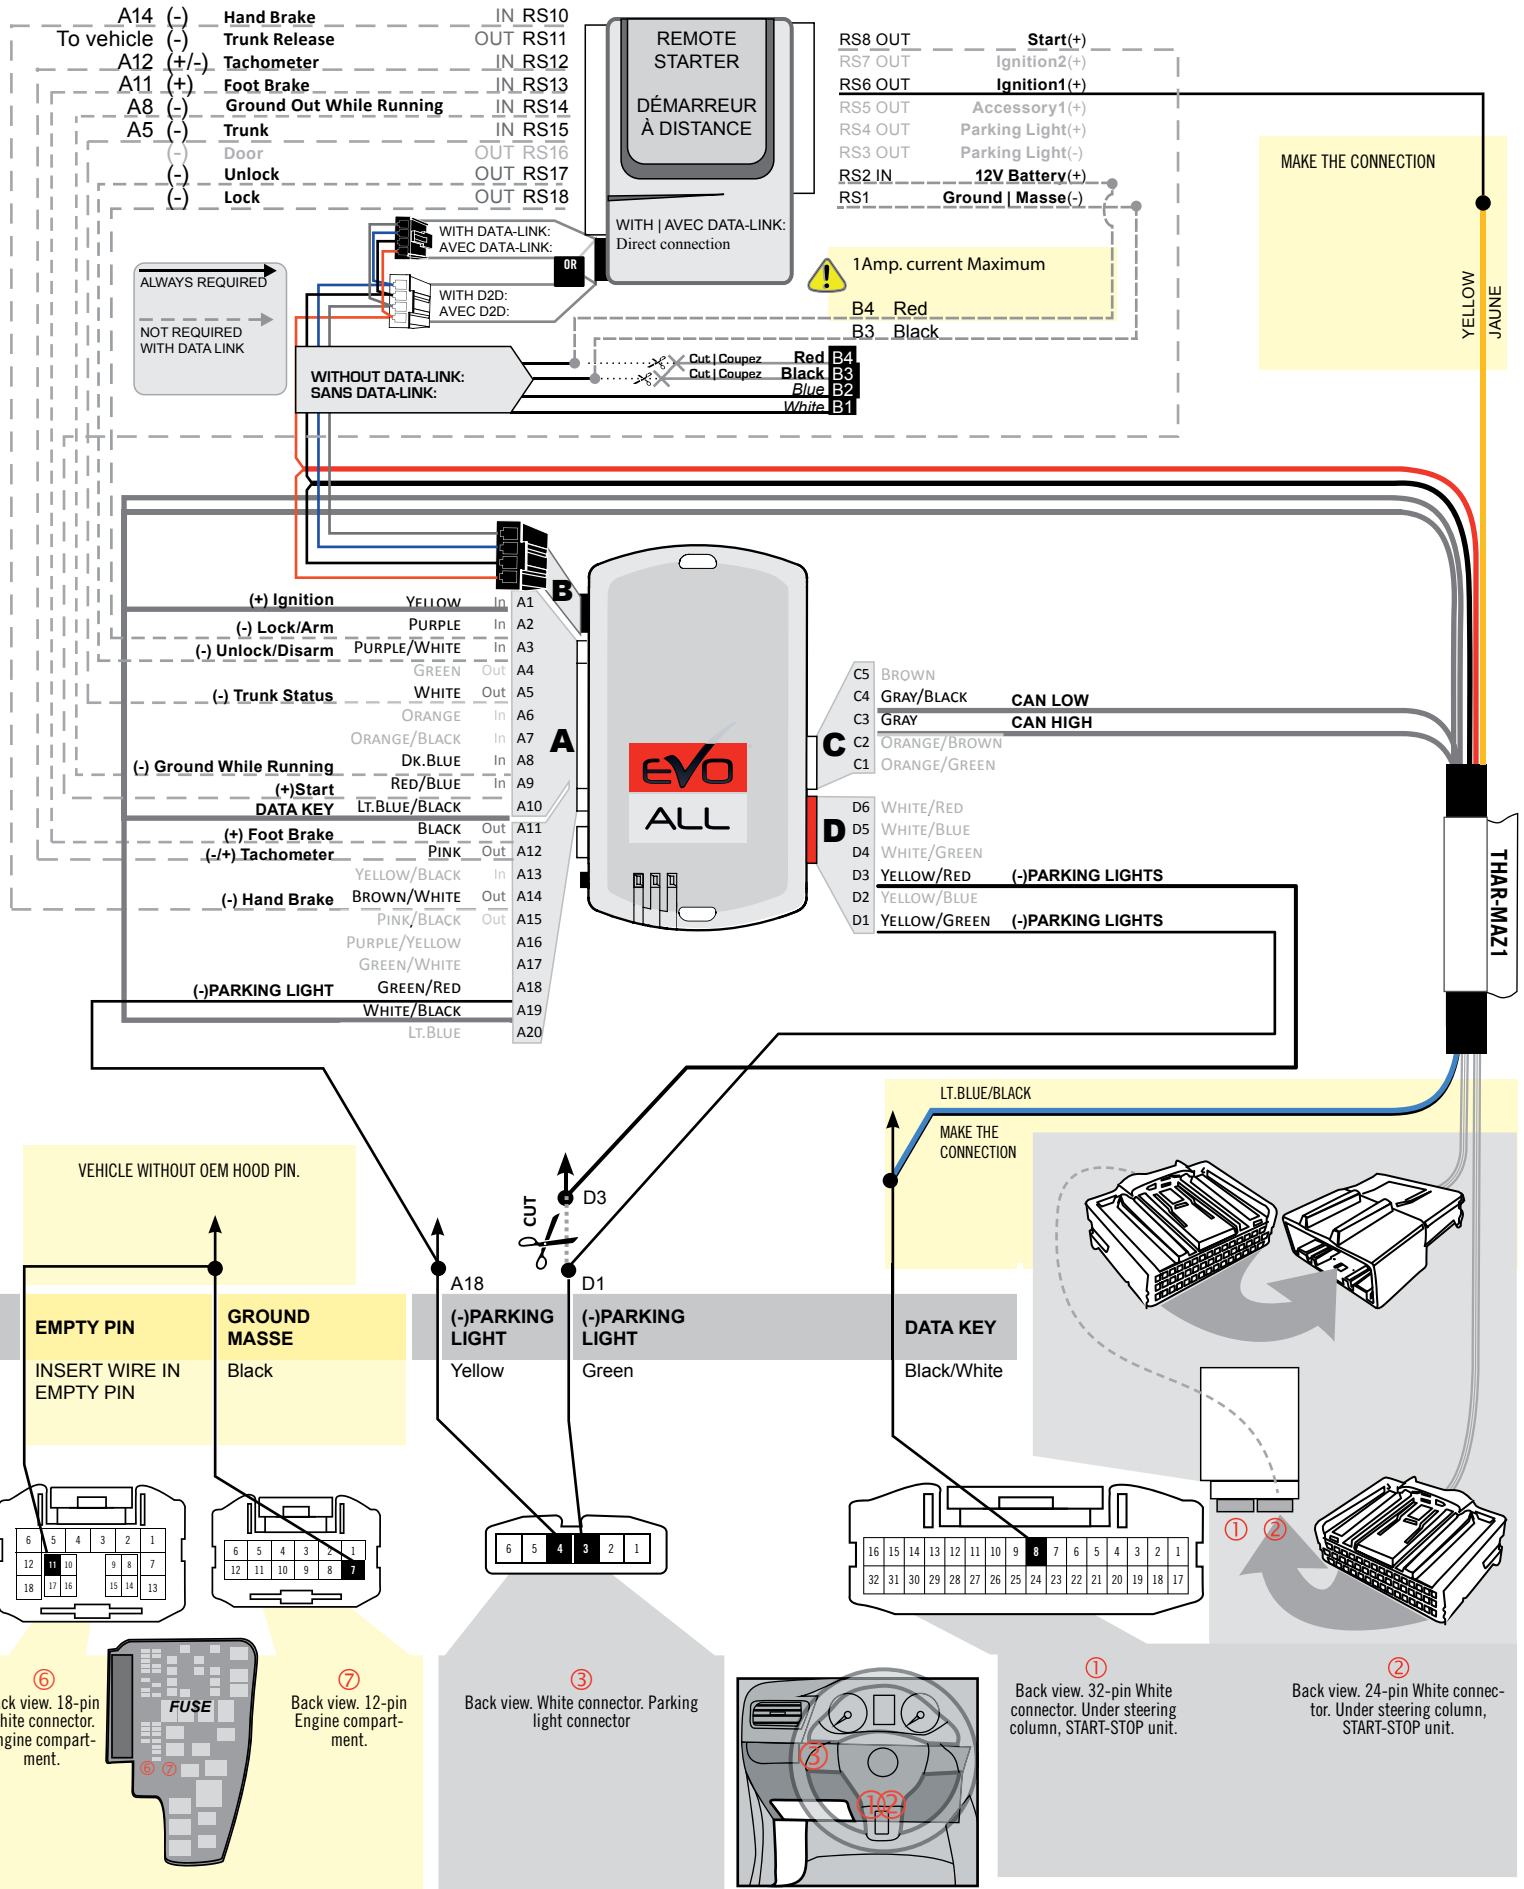




Program bypass option:

UNIT OPTION	DESCRIPTION
<b>C1</b>	OEM Remote status (Lock/Unlock) monitoring
<b>G1</b>	Evo Alarm enable

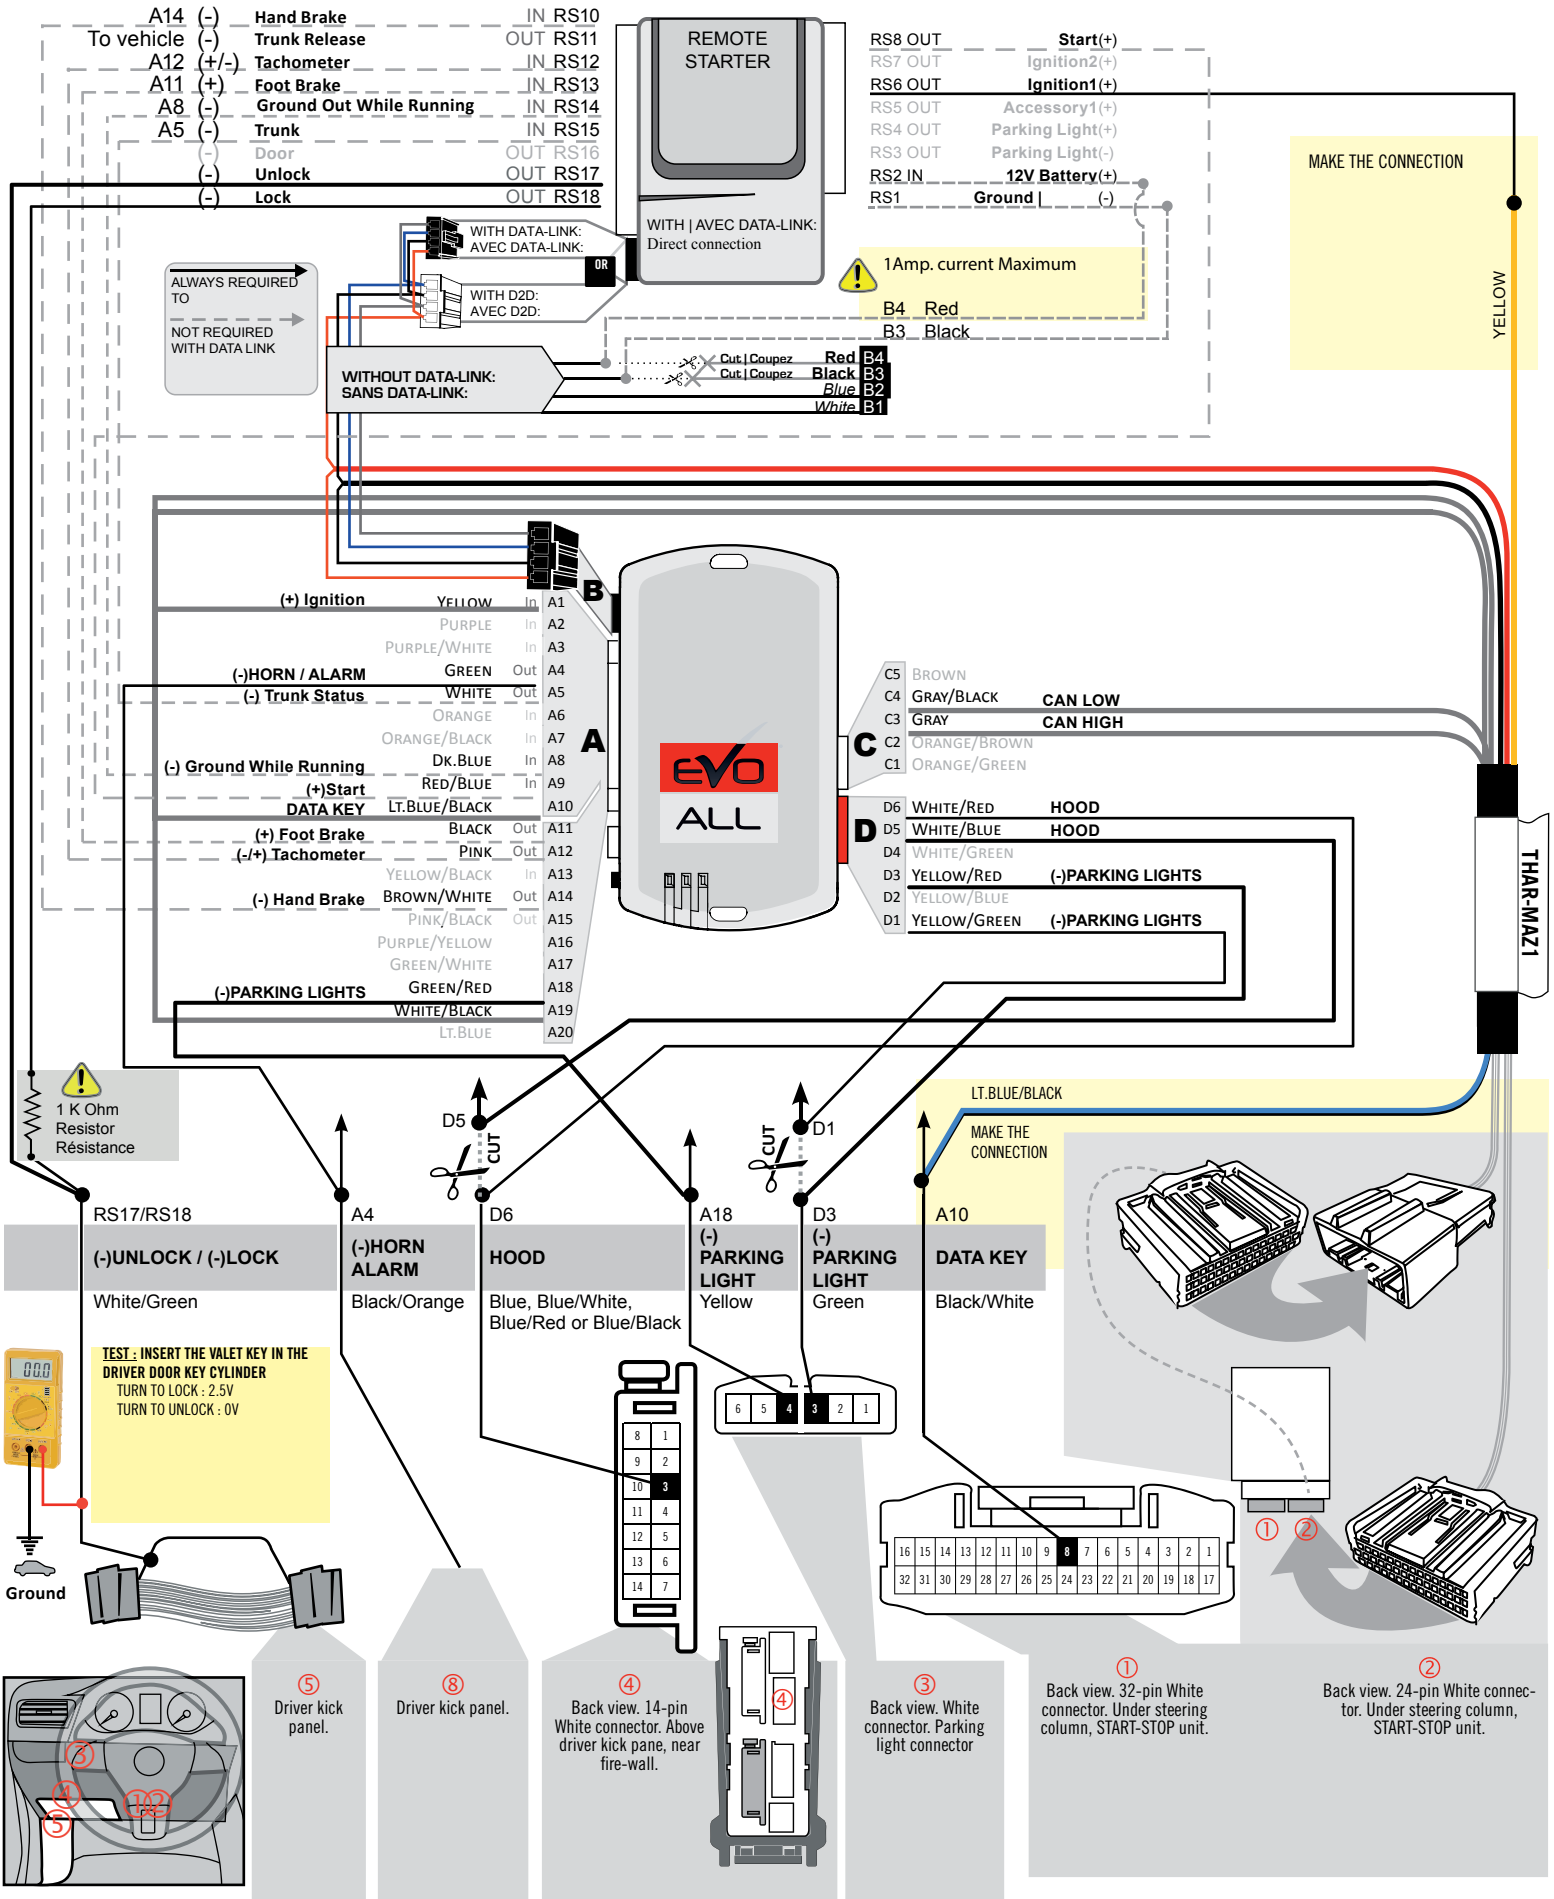

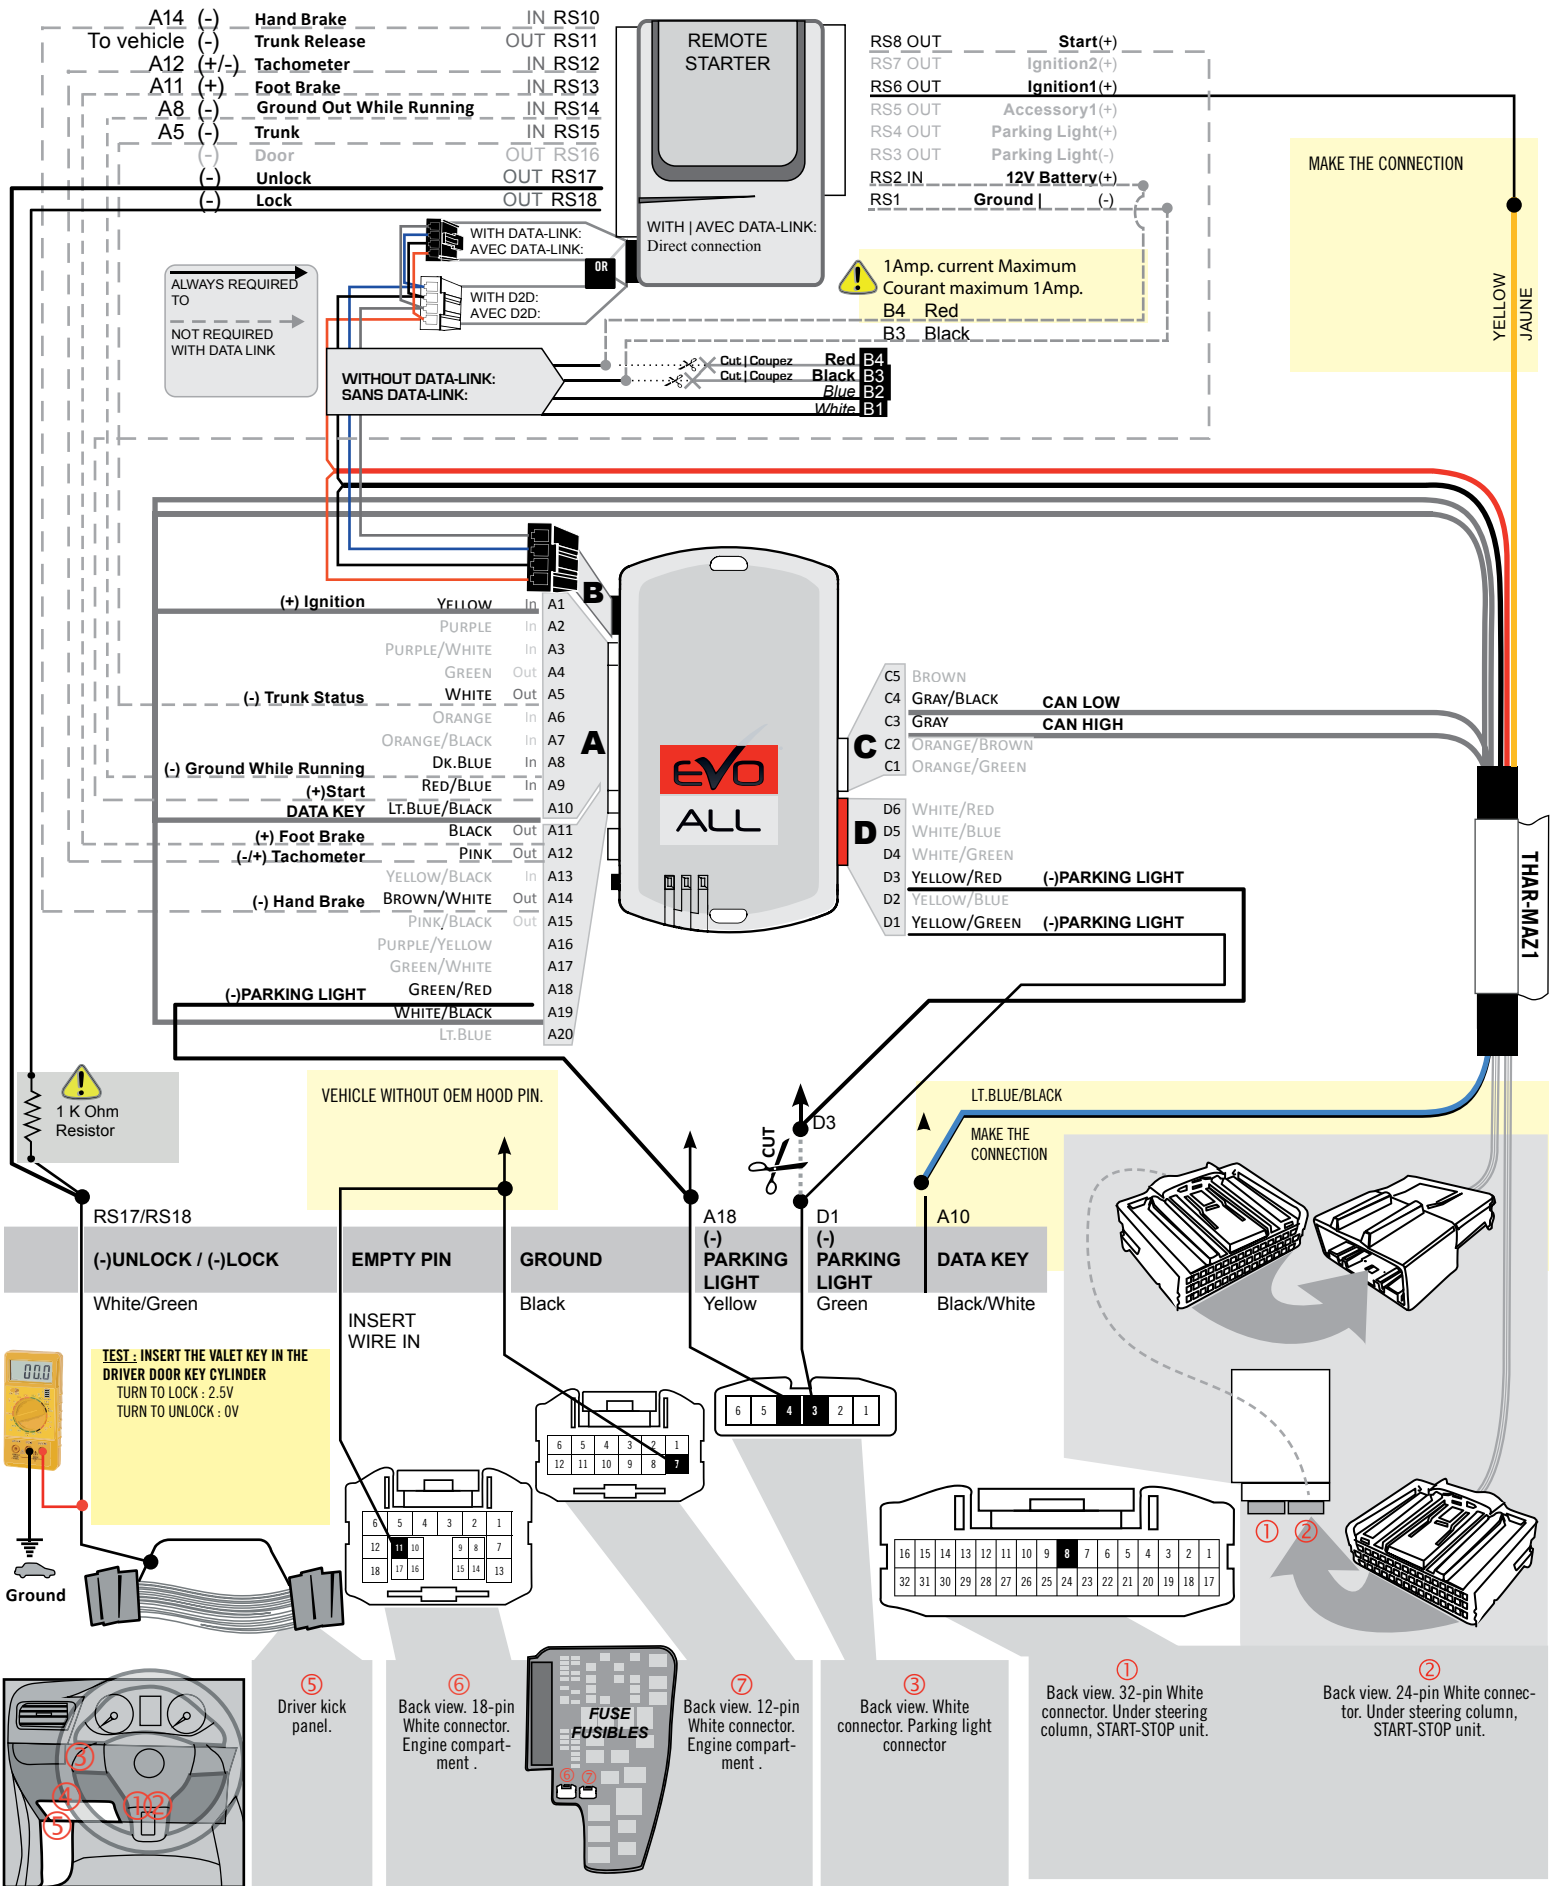

# x3 max.


**Do not program more than 3 modules on the same vehicle.**

If more than 3 modules are programmed to a vehicle, it is possible that the remote car starter will never be functional on this vehicle.

If all programming steps were successful and the vehicle cannot be remote started :


- Double check all connections using the installation diagram above as a reference.

If no connection errors can be found then please contact technical support assistance.

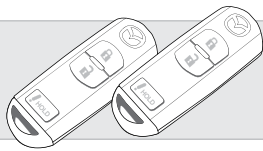

**Make sure** to have two valide vehicle key.


1

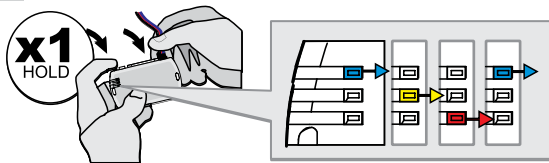

**Press and hold** the programming button:  
**Connect** the 4-PIN Data-link harness (Black connector).


↳ The Blue, Red, Yellow and Blue & Red LEDs will alternatively illuminate.

2

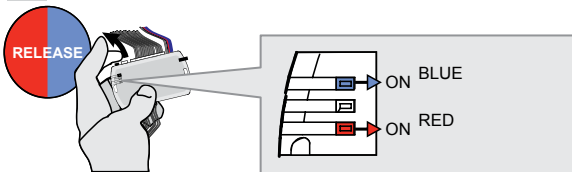


**Release** the programming button when the Blue & Red LEDs are ON.

 *If the LED are not solid BLUE and RED disconnect the 4-PIN Data-link harness (Black connector) and go back to step1.*




3

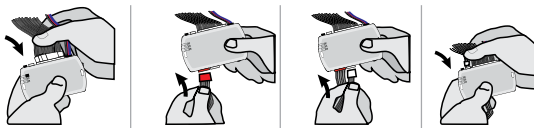

**Connect** the required remaining harnesses.

4

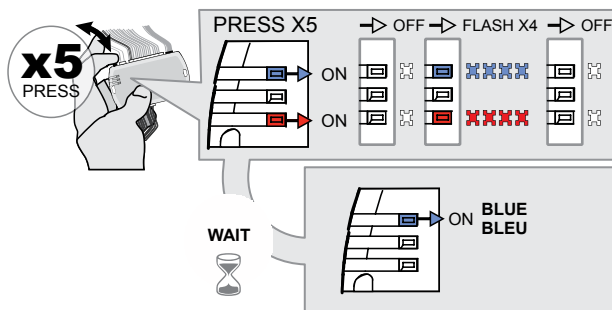

**Press and release** the programming button five times (5x).

↳ The Red & Blue LEDs will alternate between 4 flashes and a pause.

↳ **Wait** for the Blue LED to turn ON.




KEY BYPASS PROGRAMMING PROCEDURE 2/5 |




KEY #1

5

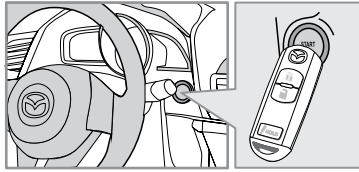


Place the 1st OEM remote close to the front of the START/STOP button exactly as shown.

6

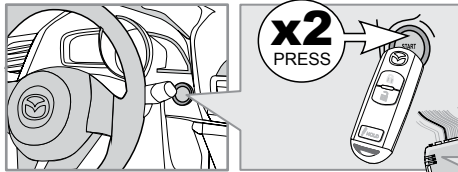


Press the START/STOP button twice to activate the vehicle's Ignition.

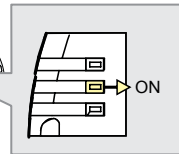


↳ The Yellow LED will turn ON.

7

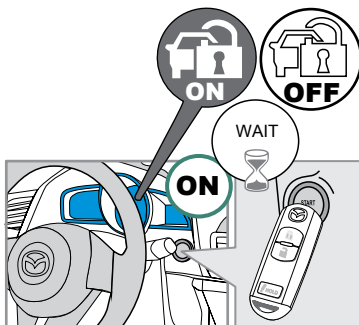


 If the Blue LED is ON solid disconnect the 4-PIN Data-link harness (Black connector) and go back to step 1.




Wait for the security indicator to turn OFF (around 3 seconds).

8

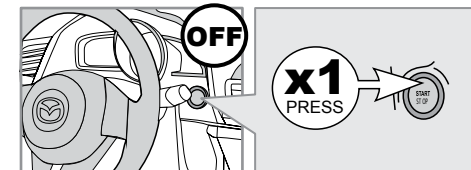

IMMEDIATELY

Press the START/STOP button once to deactivate the vehicle's Ignition.

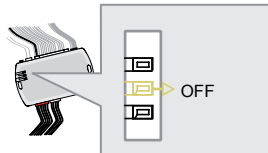


↳ The Yellow Led will turn OFF.




KEY #2

9

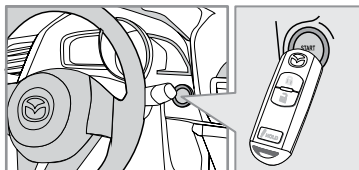


Place the 2nd OEM remote close to the front of the START/STOP button exactly as shown.

10

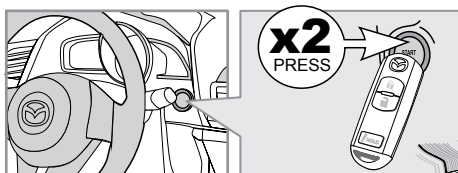


Press the START/STOP button twice to activate the vehicle's Ignition.

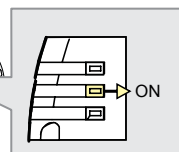


↳ The Yellow LED will turn ON.

KEY BYPASS PROGRAMMING PROCEDURE 3/5 |

**11**




**KEY#2**

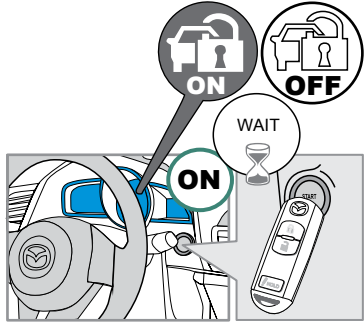


Wait for the security indicator to turn OFF (around 3 seconds).

**12**

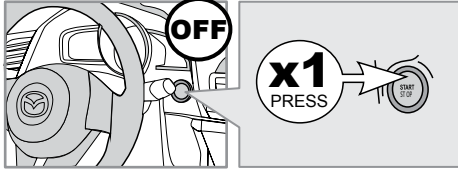


IMMEDIATELY

Press the START/STOP button once to deactivate the vehicle's Ignition.

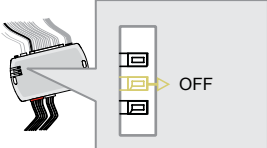


↳ The Yellow Led will turn OFF.


**13**

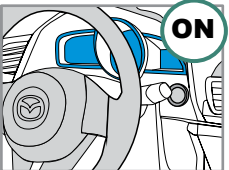

The vehicle's ignition will turn ON

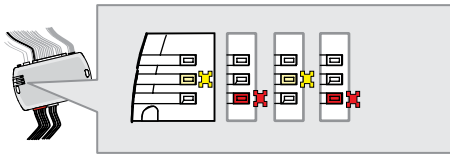



↳ The Yellow and Red LED's will alternatively illuminate.

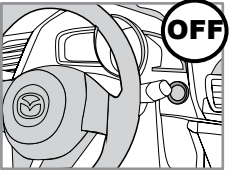

The vehicle's Ignition will turn OFF.

**14**

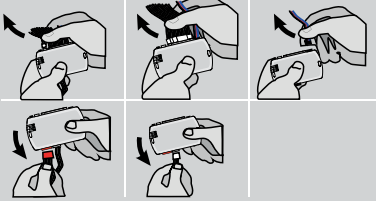


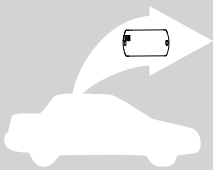

**Disconnect** the Data-Link (4-pins) connector and after all the remaining connectors.

KEY BYPASS PROGRAMMING PROCEDURE 4/5 |

15

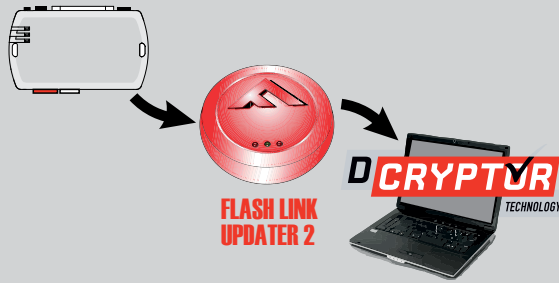

Connect the module to the FLASH LINK UPDATER 2 and visit the DCryptor menu in the Flash-Link Manager.

Parts required (not included)




**FLASH LINK UPDATER 2**

**FLASH LINK MANAGER**  
SOFTWARE | PROGRAMME



Microsoft Windows Computer with Internet connection

16

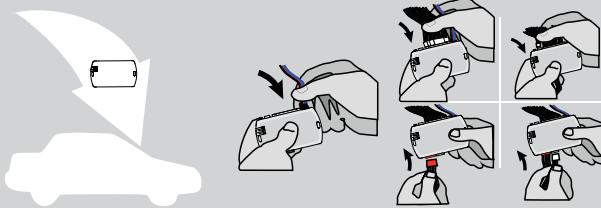

**AFTER DCRYPTOR PROGRAMMING COMPLETED**  
Go back to the vehicle and **reconnect** the 4-Pin (Data-Link) connector and after, all the remaining connector.


17




**1 - 12**

Repeat step 1 to 12.


18

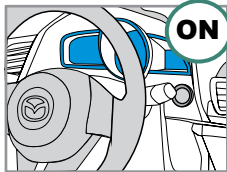

The vehicle's ignition will turn ON

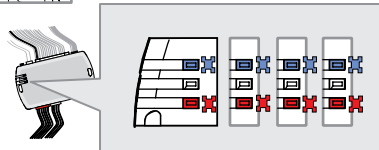


↳ The Blue and Red LEDs will flash.

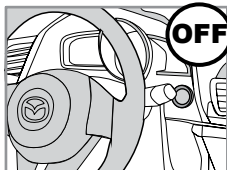


The vehicle's Ignition will turn OFF.

 19



Disconnect all Harness

20

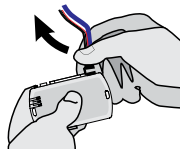

et ensuite:

Disconnect the 4-PIN Data-link harness (Black connector).


KEY BYPASS PROGRAMMING PROCEDURE 5/5 |

CAN PROGRAMMING PROCEDURE

21

**CAUTION FOR: EVO-ALARM OPTION**


If the module GREEN (A4) wire is connected to the HORN make sure that the option G1 (EVO-ALARM) is enabled before CAN programming.

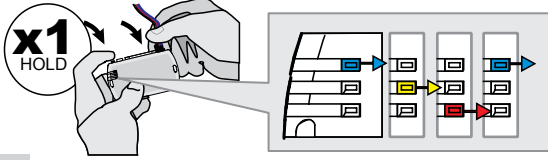

**Press and hold** the programming button:  
**Connect** the 4-PIN Data-link harness (Black connector).


↳ The Blue, Red, Yellow and Blue & Red LEDs will alternatively illuminate.

22

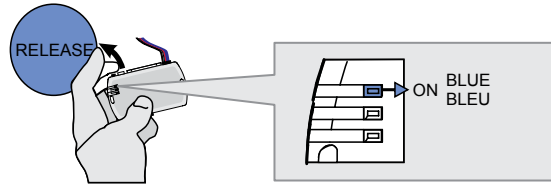


**Release** the programming button when the Blue LED is ON.

 If the Blue LED is not ON solid disconnect the 4-PIN Data-link harness (Black connector).



23

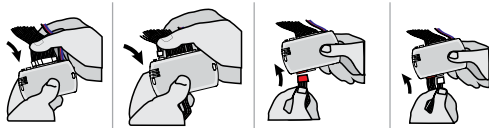


**Connect** the required remaining harnesses.

24




**Press** the START/STOP button twice to activate the vehicle's Ignition.

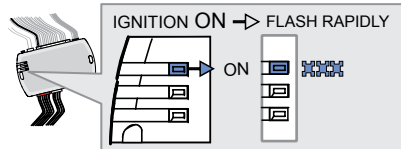


↳ The Blue LED will flash rapidly.

25

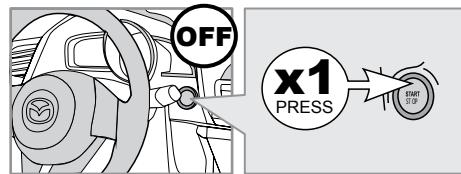

**Press** the START/STOP button once to deactivate the vehicle's Ignition.

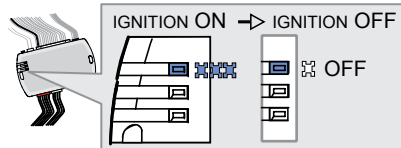

↳ The Blue LED will turn OFF.



The module is now programmed.

REMOTE STARTER FUNCTIONALITY |



All doors must be closed.



 
Do not remote-start with the OEM remote inside the vehicle.



Never remote-start with a passenger inside the vehicle.



**Remote start** the vehicle.



*The module will shut down the vehicle as soon as a door is opened.*



**ONLY COMPATIBLE WITH AUTOMATIC TRANSMISSION VEHICLES.**

Vehicle functions supported in this diagram (functional if equipped)

VEHICLE	YEARS	Immobilizer bypass	T-Harness	Lock	Unlock	Arm	Disarm	Tachometer	Door Status	Trunk Status	Hood Status protection remote start	Hand-Brake Status	Foot-Brake Status	OEM Remote monitoring
<b>MAZDA</b>														
6	Push-to-Start - Automatic transmission only Push-to-Start - transmission automatique seulement 2014-2020	•	•	•	•	•	•	•	•	•	•	•	•	•



**85.[11]**  
MINIMUM

To add the firmware version and the options, use the **FLASH LINK UPDATER** or **FLASH LINK MOBILE** tool, sold separately.

**IF THE VEHICLE IS NOT EQUIPPED WITH FUNCTIONAL HOOD PIN:**

**A11**

**OFF**

Hood trigger (Output Status).



Program bypass option:

UNIT OPTION

DESCRIPTION

**C1**

OEM Remote status (Lock/Unlock) monitoring

**NOTES**



**THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.**

**MANDATORY INSTALL**

\*HOOD PIN



**HOOD STATUS:** THE HOOD PIN SWITCH MUST BE INSTALLED IF THE VEHICLE CAN BE REMOTE STARTED WITH THE HOOD OPEN, SET FUNCTION **A11** TO OFF.

**A11**

**OFF**


**Notice:** the installation of safety elements are mandatory. The hood pin is an essential security element and must be installed.

**THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.**


DESCRIPTION




① Under steering column, START-STOP unit

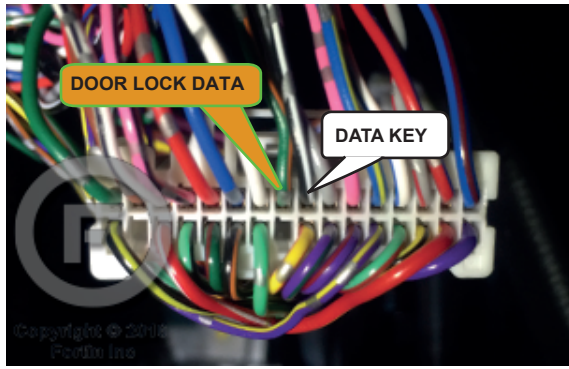


③ At parking lights switch

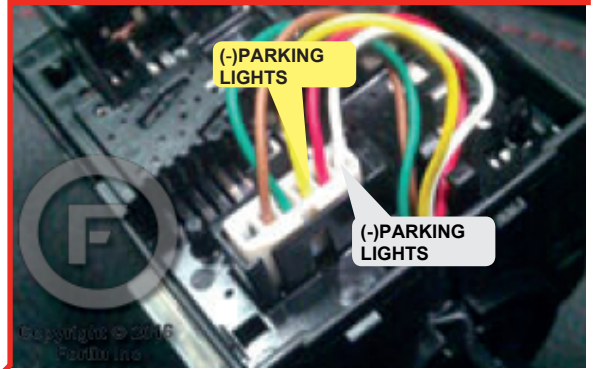

② Under steering column, START-STOP unit

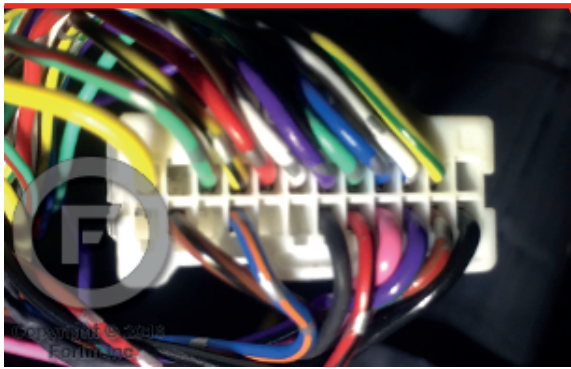

④ Engine compartment - without OEM ALARM

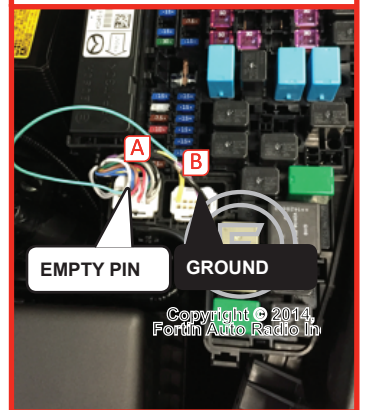




# ATTENTION

Before disconnecting a module, a computer or a control unit from a vehicle: Always disconnect the negative terminal from the vehicle's battery.


In these vehicles, the factory keyless entry module is sensitive to interference and may cease to operate if some precautions are not taken. Disconnect the (-) terminal of the battery prior to disconnecting the connectors at the smartkey module below the steering wheel to avoid damage to the smartkey entry module.

1

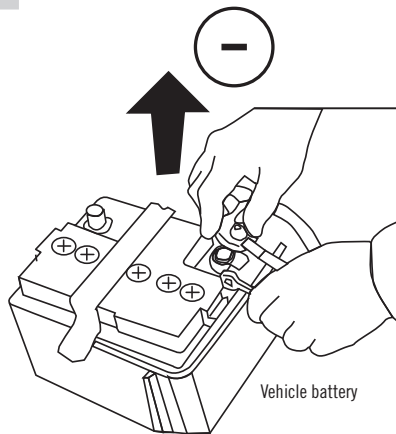


Disconnect the (-) terminal of the battery.

2

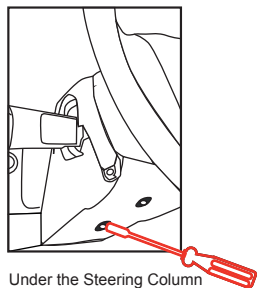


Under the Steering Column

1 Unscrew.

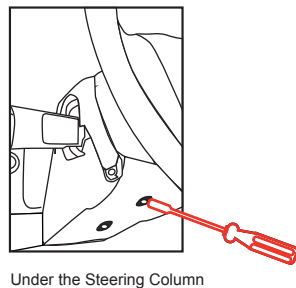


Under the Steering Column

2 Unscrew

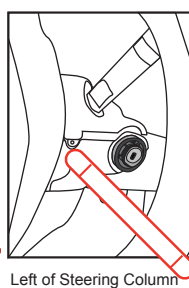


Left of Steering Column

3 Onclip

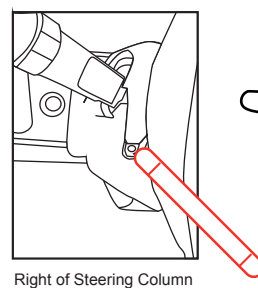

Right of Steering Column

4 Onclip

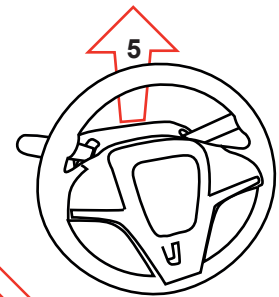

5 Gently pull up the cover of the steering column.


3

Make the following connections.


CONTINUED NEXT PAGE



4

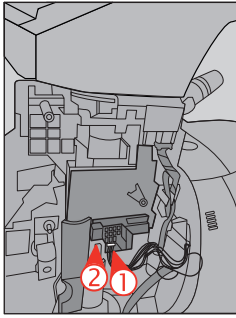

Under steering column, START-STOP unit.

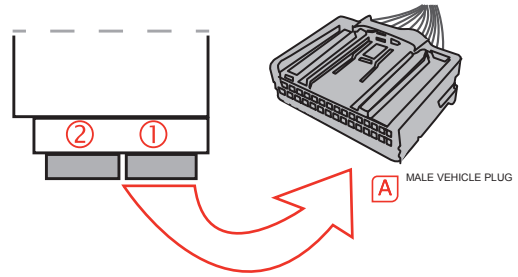


Disconnect the connector

A

5


Under steering column, START-STOP unit.

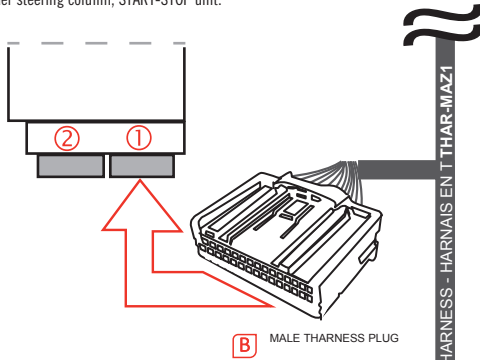

Connect the connector

B

6

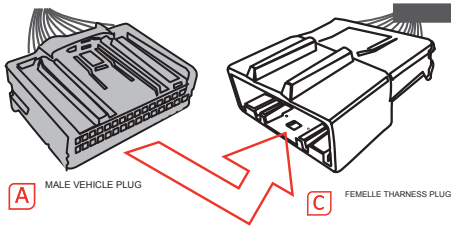

Connect the connector

A



into connector


C

7

Make other required connections.

**AUTOMATIC TRANSMISSION WIRING CONNECTION**

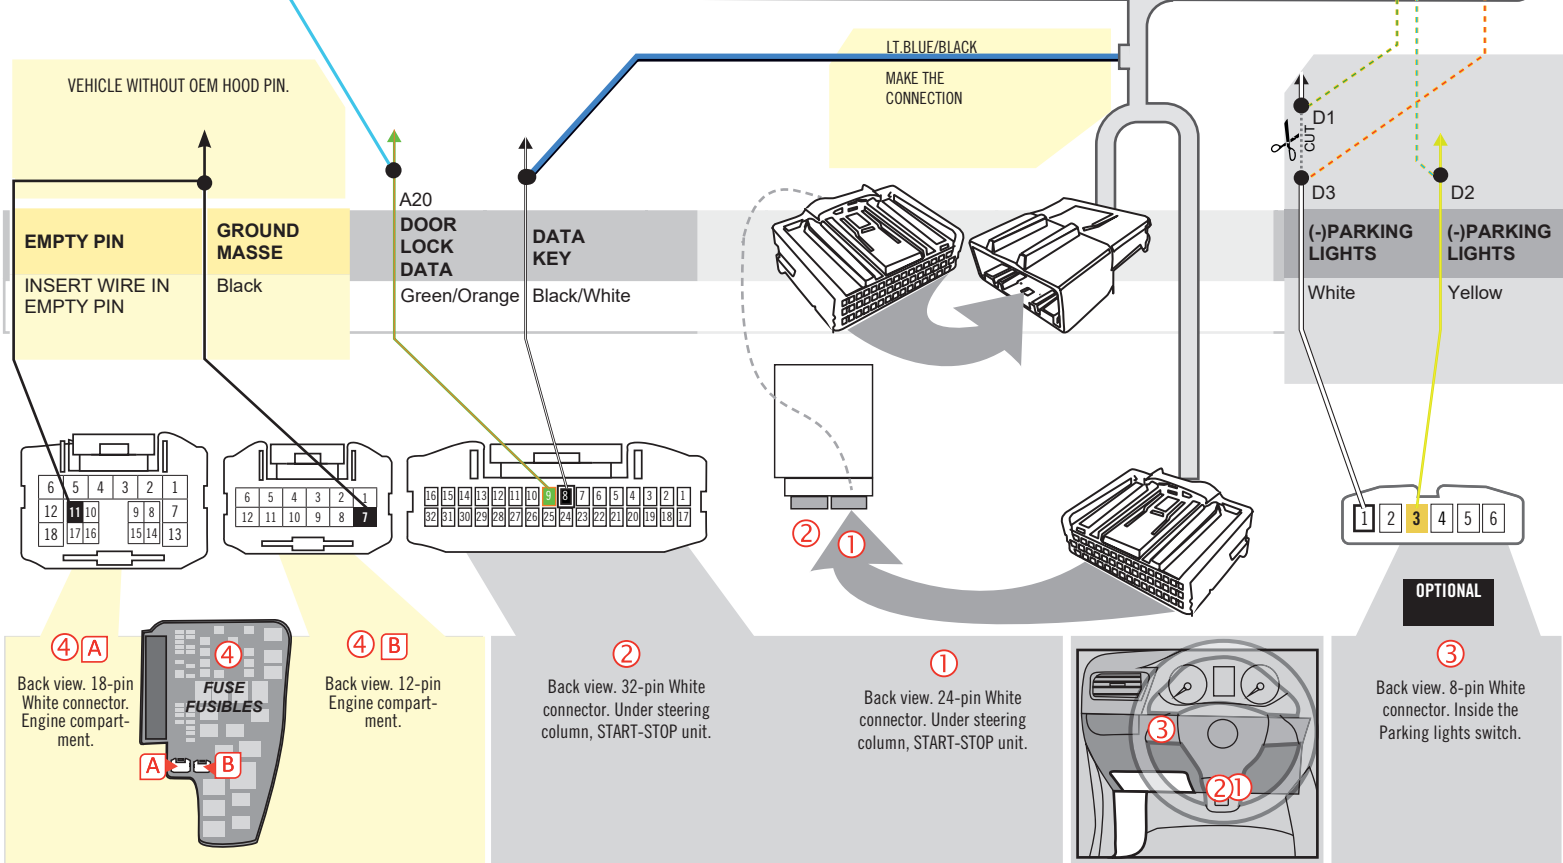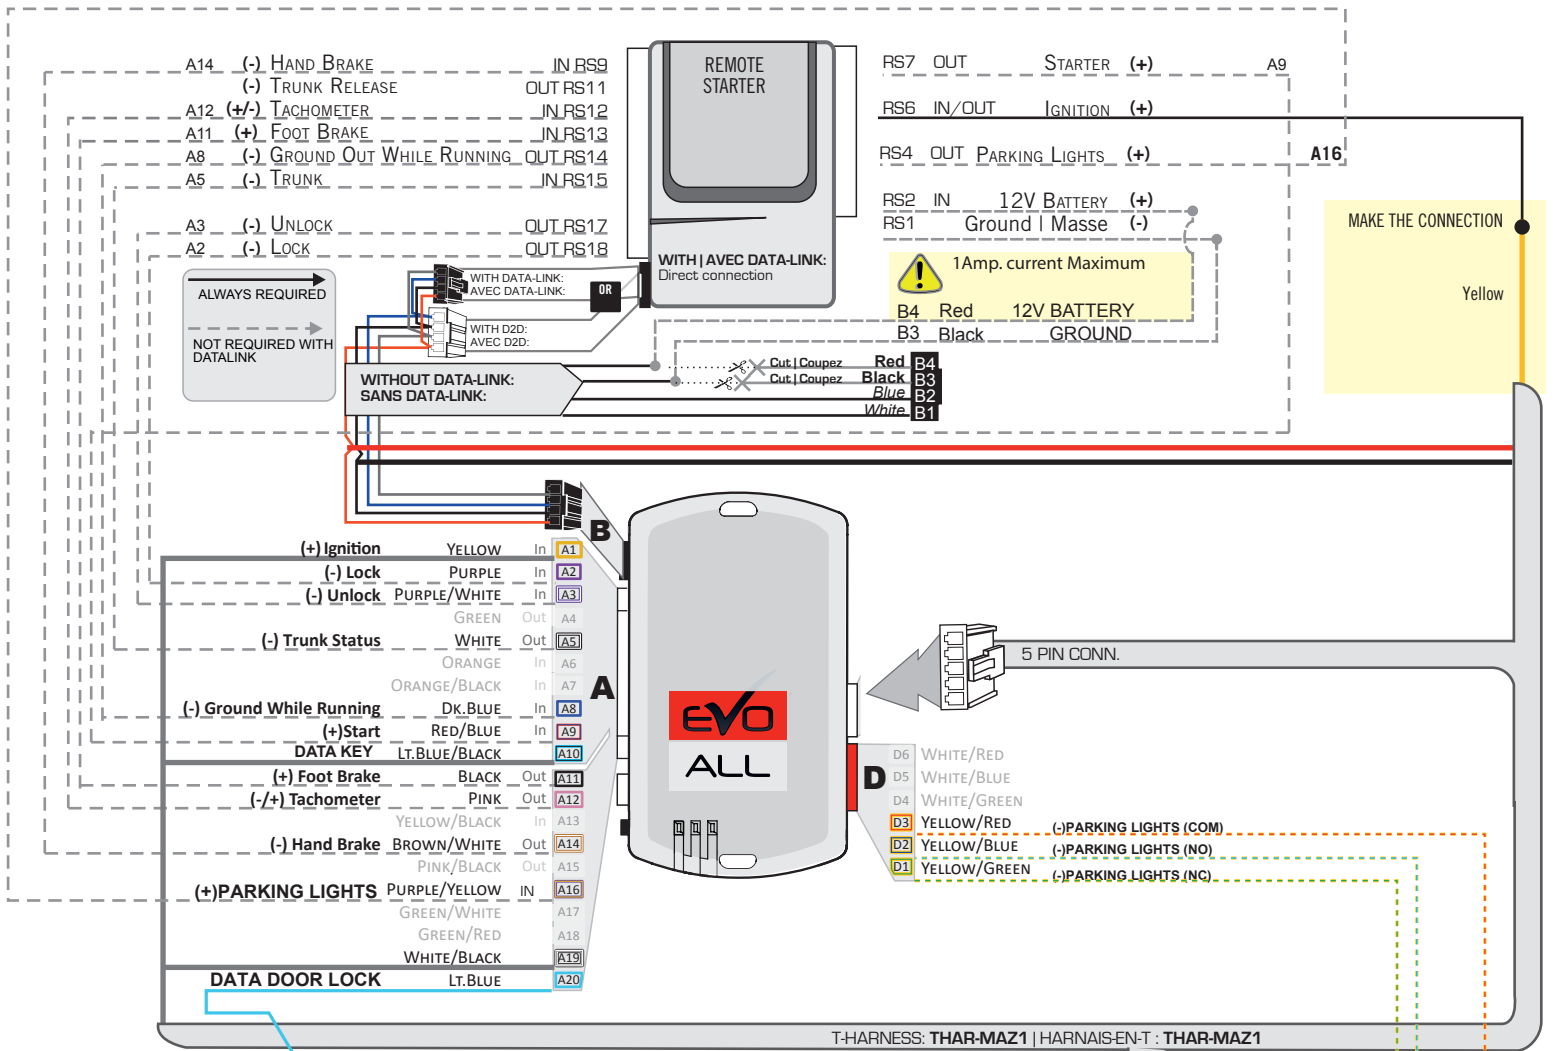

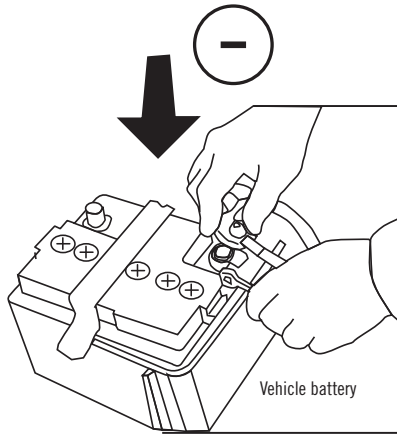

**Reconnect** the (-) terminal of the battery.

CONTINUED NEXT PAGE


# x3 max.

**Do not program more than 3 modules on the same vehicle.**

If more than 3 modules are programmed to a vehicle, it is possible that the remote car starter will never be functional on this vehicle.


If all programming steps were successful and the vehicle cannot be remote started :

- Double check all connections using the installation diagram above as a reference.

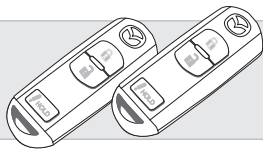

**Make sure** to have two valide vehicle key.


1

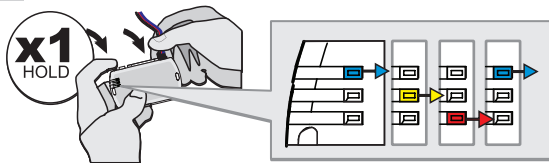

**Press and hold** the programming button:  
**Connect** the 4-PIN Data-link harness (Black connector).


↳ The Blue, Red, Yellow and Blue & Red LEDs will alternatively illuminate.

2

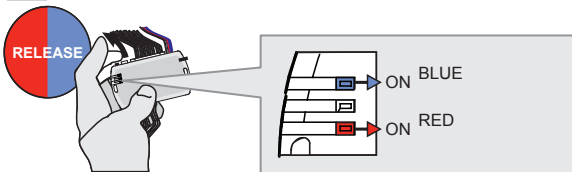


**Release** the programming button when the Blue & Red LEDs are ON.

 *If the LED are not solid BLUE and RED disconnect the 4-PIN Data-link harness (Black connector) and go back to step1.*




3

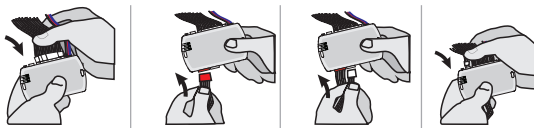

**Connect** the required remaining harnesses.

4

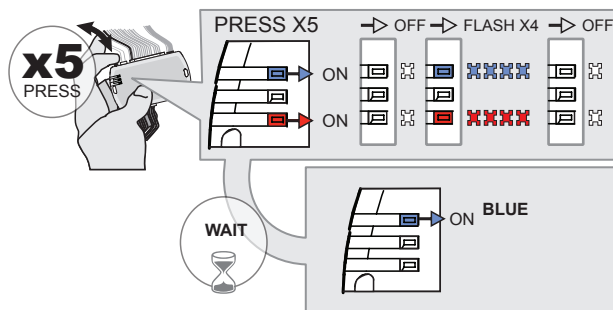

**Press and release** the programming button five times (5x).

↳ The Red & Blue LEDs will alternate between 4 flashes and a pause.


↳ **Wait** for the Blue LED to turn ON.

KEY BYPASS PROGRAMMING PROCEDURE 2/5




KEY #1

5

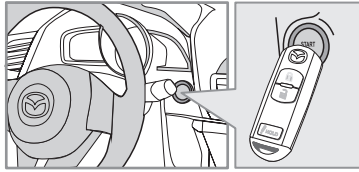


Place the 1st OEM remote close to the front of the START/STOP button exactly as shown.

6

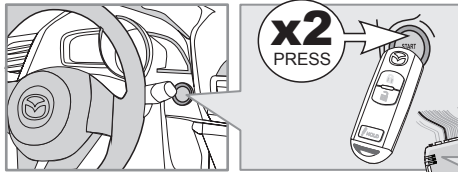


Press the START/STOP button twice to activate the vehicle's Ignition.

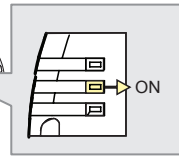


↳ The Yellow LED will turn ON.

7

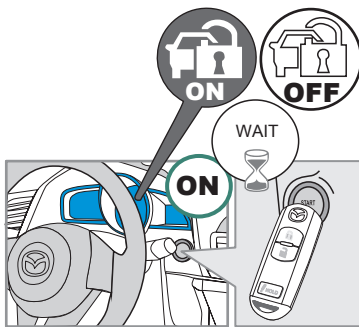

 If the Blue LED is ON solid disconnect the 4-PIN Data-link harness (Black connector) and go back to step 1.




Wait for the security indicator to turn OFF (around 3 seconds).

8

**IMMEDIATELY**



Press the START/STOP button once to deactivate the vehicle's Ignition.

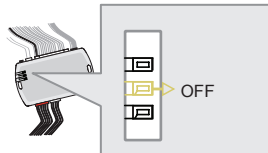


↳ The Yellow Led will turn OFF.




KEY #2

9

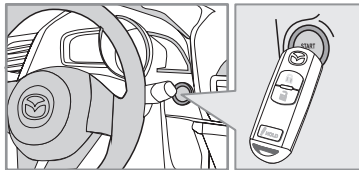


Place the 2nd OEM remote close to the front of the START/STOP button exactly as shown.

10

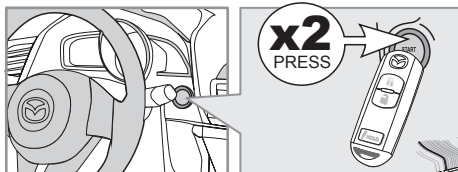


Press the START/STOP button twice to activate the vehicle's Ignition.

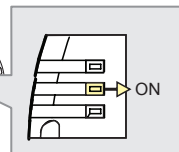


↳ The Yellow LED will turn ON.

KEY BYPASS PROGRAMMING PROCEDURE 3/6




KEY #2

**11**

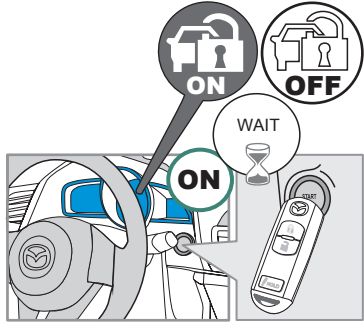

Wait for the security indicator to turn OFF (around 3 seconds).

**12**

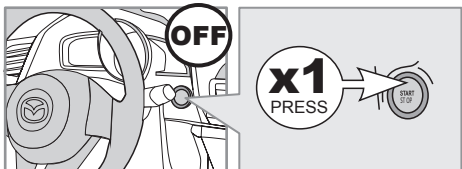


**IMMEDIATELY**


Press the START/STOP button once to deactivate the vehicle's Ignition.

↳ The Yellow Led will turn OFF.


**13**

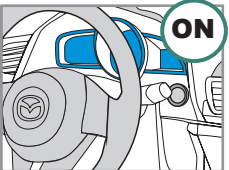

The vehicle's ignition will turn ON

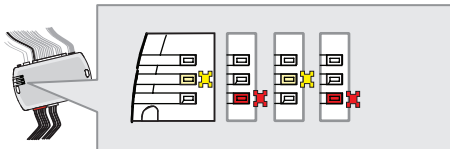


↳ The Yellow and Red LED's will alternatively illuminate.

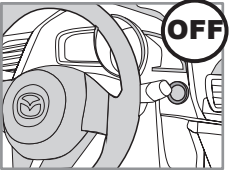

The vehicle's Ignition will turn OFF.


**14**

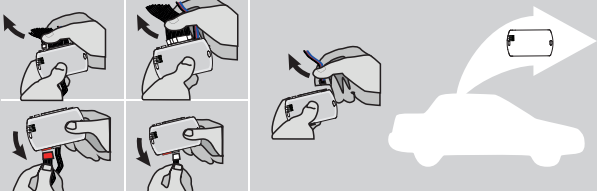

Disconnect all the connectors and after the Data-Link (4-pins) connector.

**KEY BYPASS PROGRAMMING PROCEDURE 4/6**


15

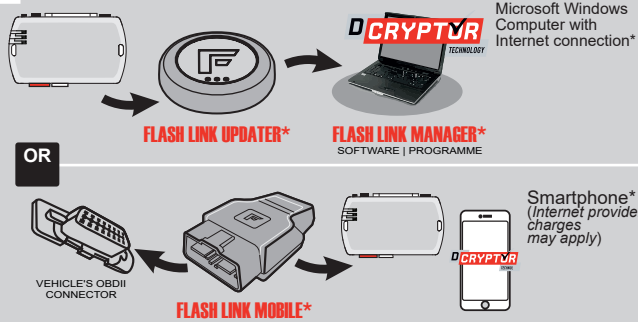

Use the tool:  
**FLASH LINK UPDATER** or  
**FLASH LINK MOBILE**  
to visit the DCryptor menu.

\*Parts required (not included)

16

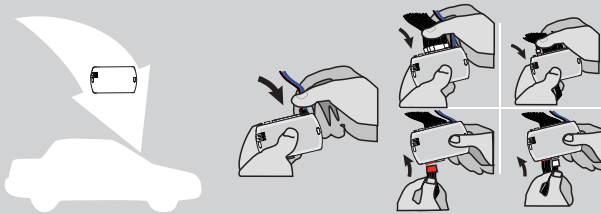


**AFTER DCRYPTOR PROGRAMMING COMPLETED**  
Go back to the vehicle and **reconnect** the 4-Pin (Data-Link) connector and after, all the remaining connector.

17



Repeat step 1 to 12.

18

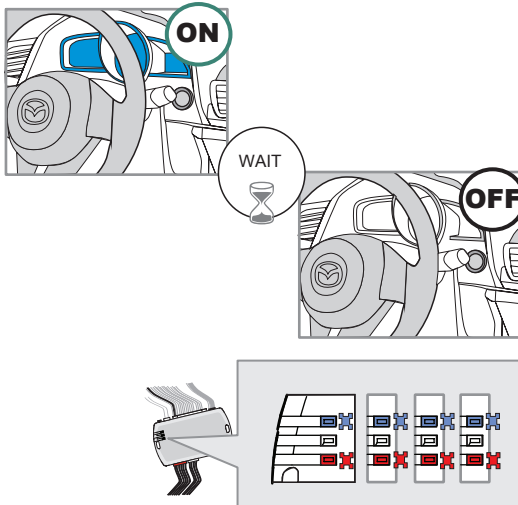


The vehicle's ignition will turn ON

The vehicle's Ignition will turn OFF.


↳ The Blue and Red LEDs will flash.

 19



Disconnect all Harness

20

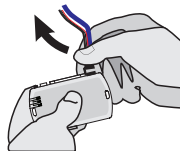


Next:

Disconnect the 4-PIN Data-link harness (Black connector).

## CAN PROGRAMMING PROCEDURE


21

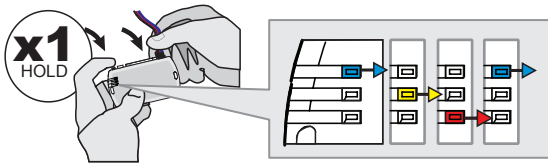

**Press and hold** the programming button:  
**Connect** the 4-PIN Data-link harness (Black connector).


↳ The Blue, Red, Yellow and Blue & Red LEDs will alternatively illuminate.

22

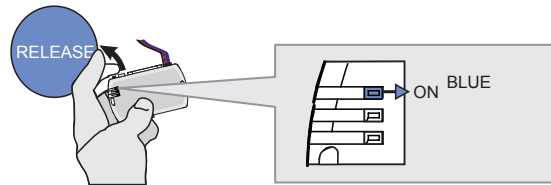


**Release** the programming button when the Blue LED is ON.

 If the Blue LED is not ON solid disconnect the 4-PIN Data-link harness (Black connector).




23

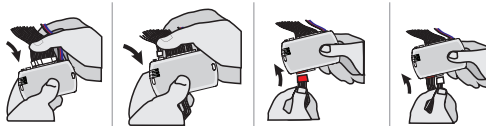


**Connect** the required remaining harnesses.

24

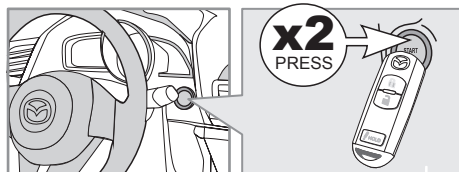


**Press** the START/STOP button twice to turn ON the vehicle's Ignition.

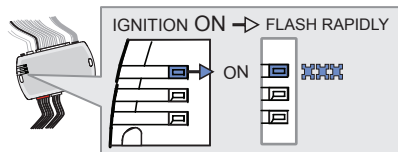


↳ The Blue LED will flash rapidly.

25

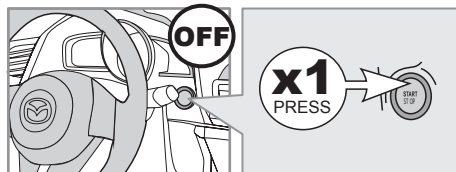

**Press** the START/STOP button once to turn OFF the vehicle's Ignition.

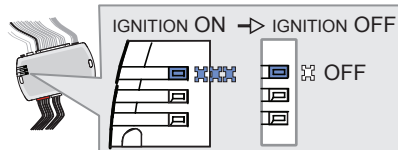


↳ The Blue LED will turn OFF.



The module is now programmed.



REMOTE STARTER FUNCTIONALITY |

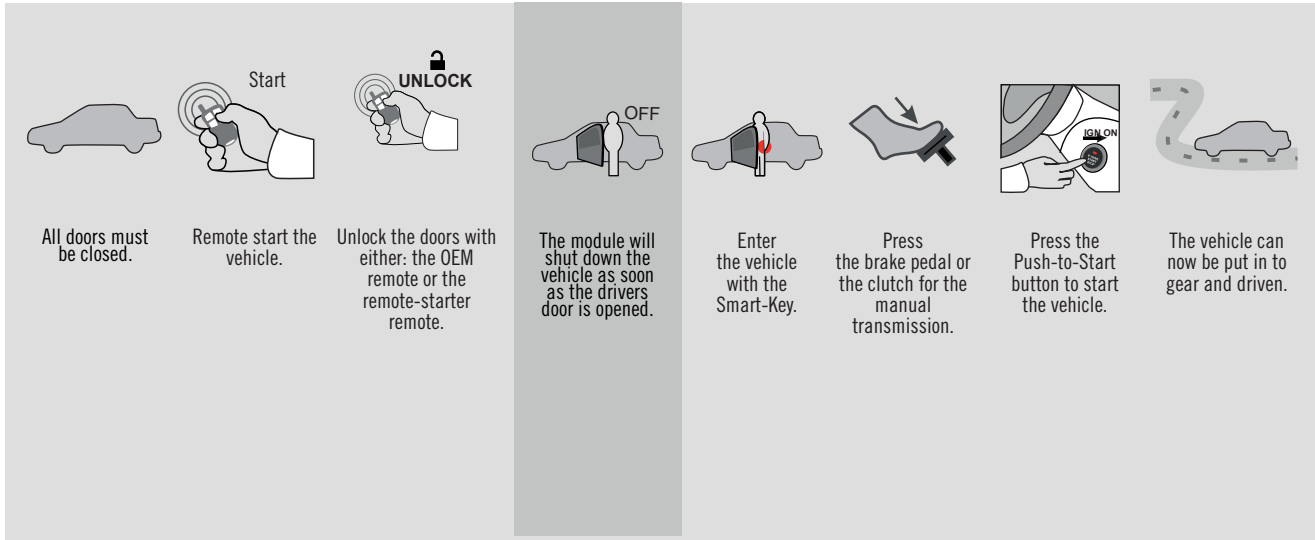

THAR-MAZ1 THARNESH INSTALLATION WITH 2 KEYS PROGRAMMING

ADDENDUM - SUGGESTED WIRING CONFIGURATION

VEHICLE	YEARS	Vehicle functions supported in this diagram (functional if equipped)												
		Immobilizer bypass	T-Harness	Lock	Unlock	Arm	Disarm	Tachometer	Door Status	Trunk Status	Hood Status protection remote start	Hand-Brake Status	Foot-Brake Status	OEM Remote monitoring
<b>MAZDA</b>														
MX5 <i>Push-to-Start - Automatic transmission</i>	2016-2019	•	•	•	•	•	•	•	•	•	•	•	•	•

	FIRMWARE VERSION	To add the firmware version and the options, use the <b>FLASH LINK UPDATER</b> or <b>FLASH LINK MOBILE</b> tool, sold separately.
	<b>85.[11]</b> MINIMUM	

IF THE VEHICLE IS NOT EQUIPPED WITH FUNCTIONAL HOOD PIN:	<b>A11</b>	<b>OFF</b>	Hood trigger (Output Status).

	Program bypass option:	UNIT OPTION	DESCRIPTION
		<b>C1</b>	OEM Remote status (Lock/Unlock) monitoring

	Program bypass option (if equipped with OEM alarm):	UNIT OPTION	DESCRIPTION
		<b>D2</b>	Unlock before / Lock after (Disarm OEM alarm)

**NOTES**

**THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.**

**Parts required (Not included)**

1X 10 AMP Fuse

**MANDATORY INSTALL**

\*HOOD PIN **HOOD STATUS:** THE HOOD PIN SWITCH MUST BE INSTALLED IF THE VEHICLE CAN BE REMOTE STARTED WITH THE HOOD OPEN, SET FUNCTION **A11** TO OFF.

**A11** **OFF**

**Notice:** the installation of safety elements are mandatory. The hood pin is an essential security element and must be installed.


THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.

DESCRIPTION | DESCRIPTION


① Under steering column, START-STOP unit.




② Under steering column, START-STOP unit.

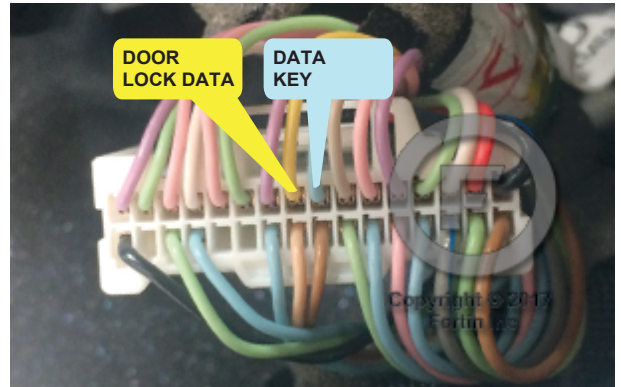

③ Inside the Parking Light switch

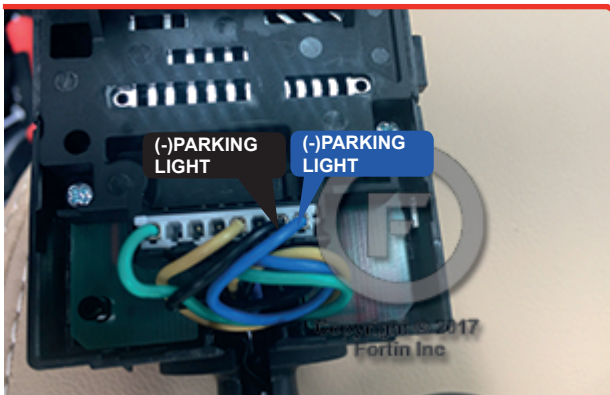

④ Engine compartment - without OEM ALARM

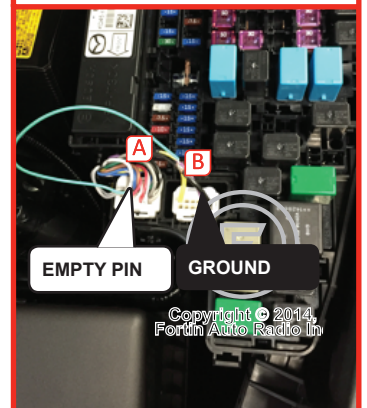




# ATTENTION

Before disconnecting a module, a computer or a control unit from a vehicle: Always disconnect the negative terminal from the vehicle's battery.


In these vehicles, the factory keyless entry module is sensitive to interference and may cease to operate if some precautions are not taken. Disconnect the (-) terminal of the battery prior to disconnecting the connectors at the smartkey module below the steering wheel to avoid damage to the smartkey entry module.

1

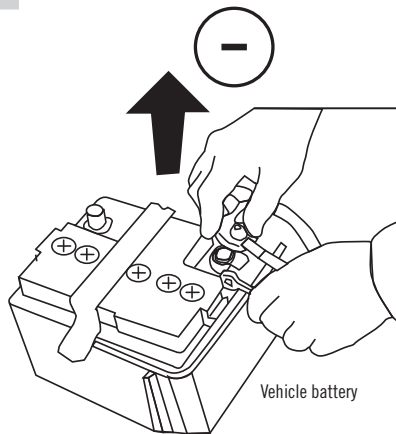


Disconnect the (-) terminal of the battery.

2

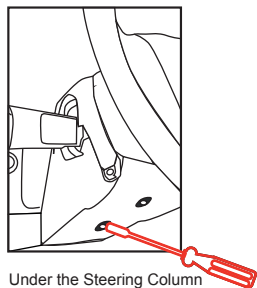


Under the Steering Column

1 Unscrew.

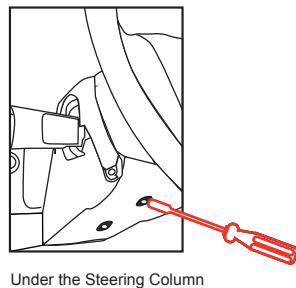


Under the Steering Column

2 Unscrew

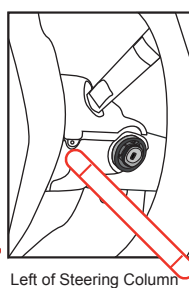


Left of Steering Column

3 Onclip

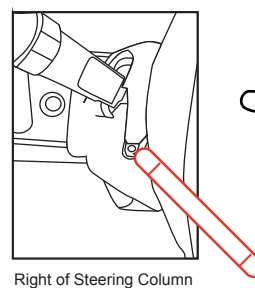

Right of Steering Column

4 Onclip

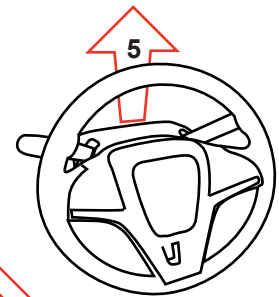


5 Gently pull up the cover of the steering column.

3


Make the following connections.

CONTINUED NEXT PAGE

4

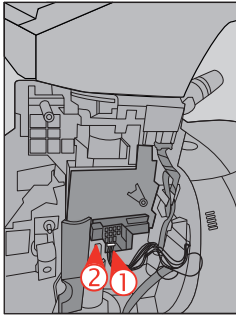

Under steering column, START-STOP unit.

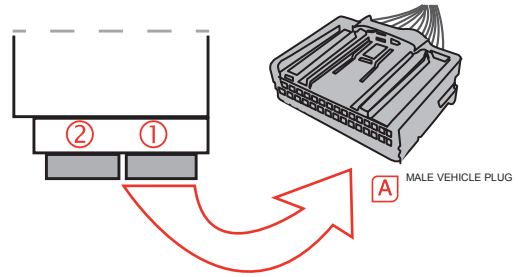


Disconnect the connector

A

5


Under steering column, START-STOP unit.

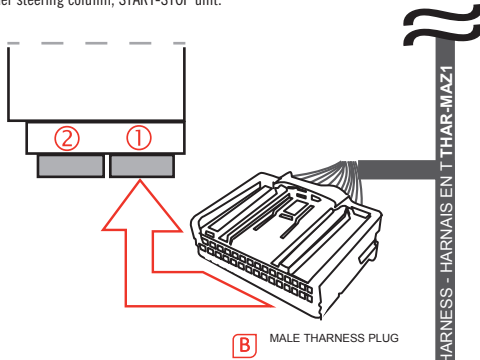

Connect the connector

B

6

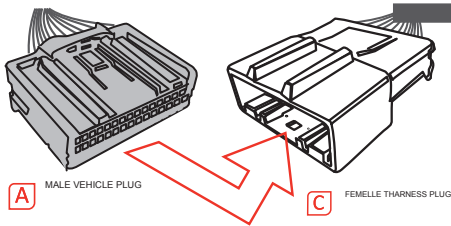

Connect the connector

A


into connector


C

7

Make other required connections.

**AUTOMATIC TRANSMISSION WIRING CONNECTION**

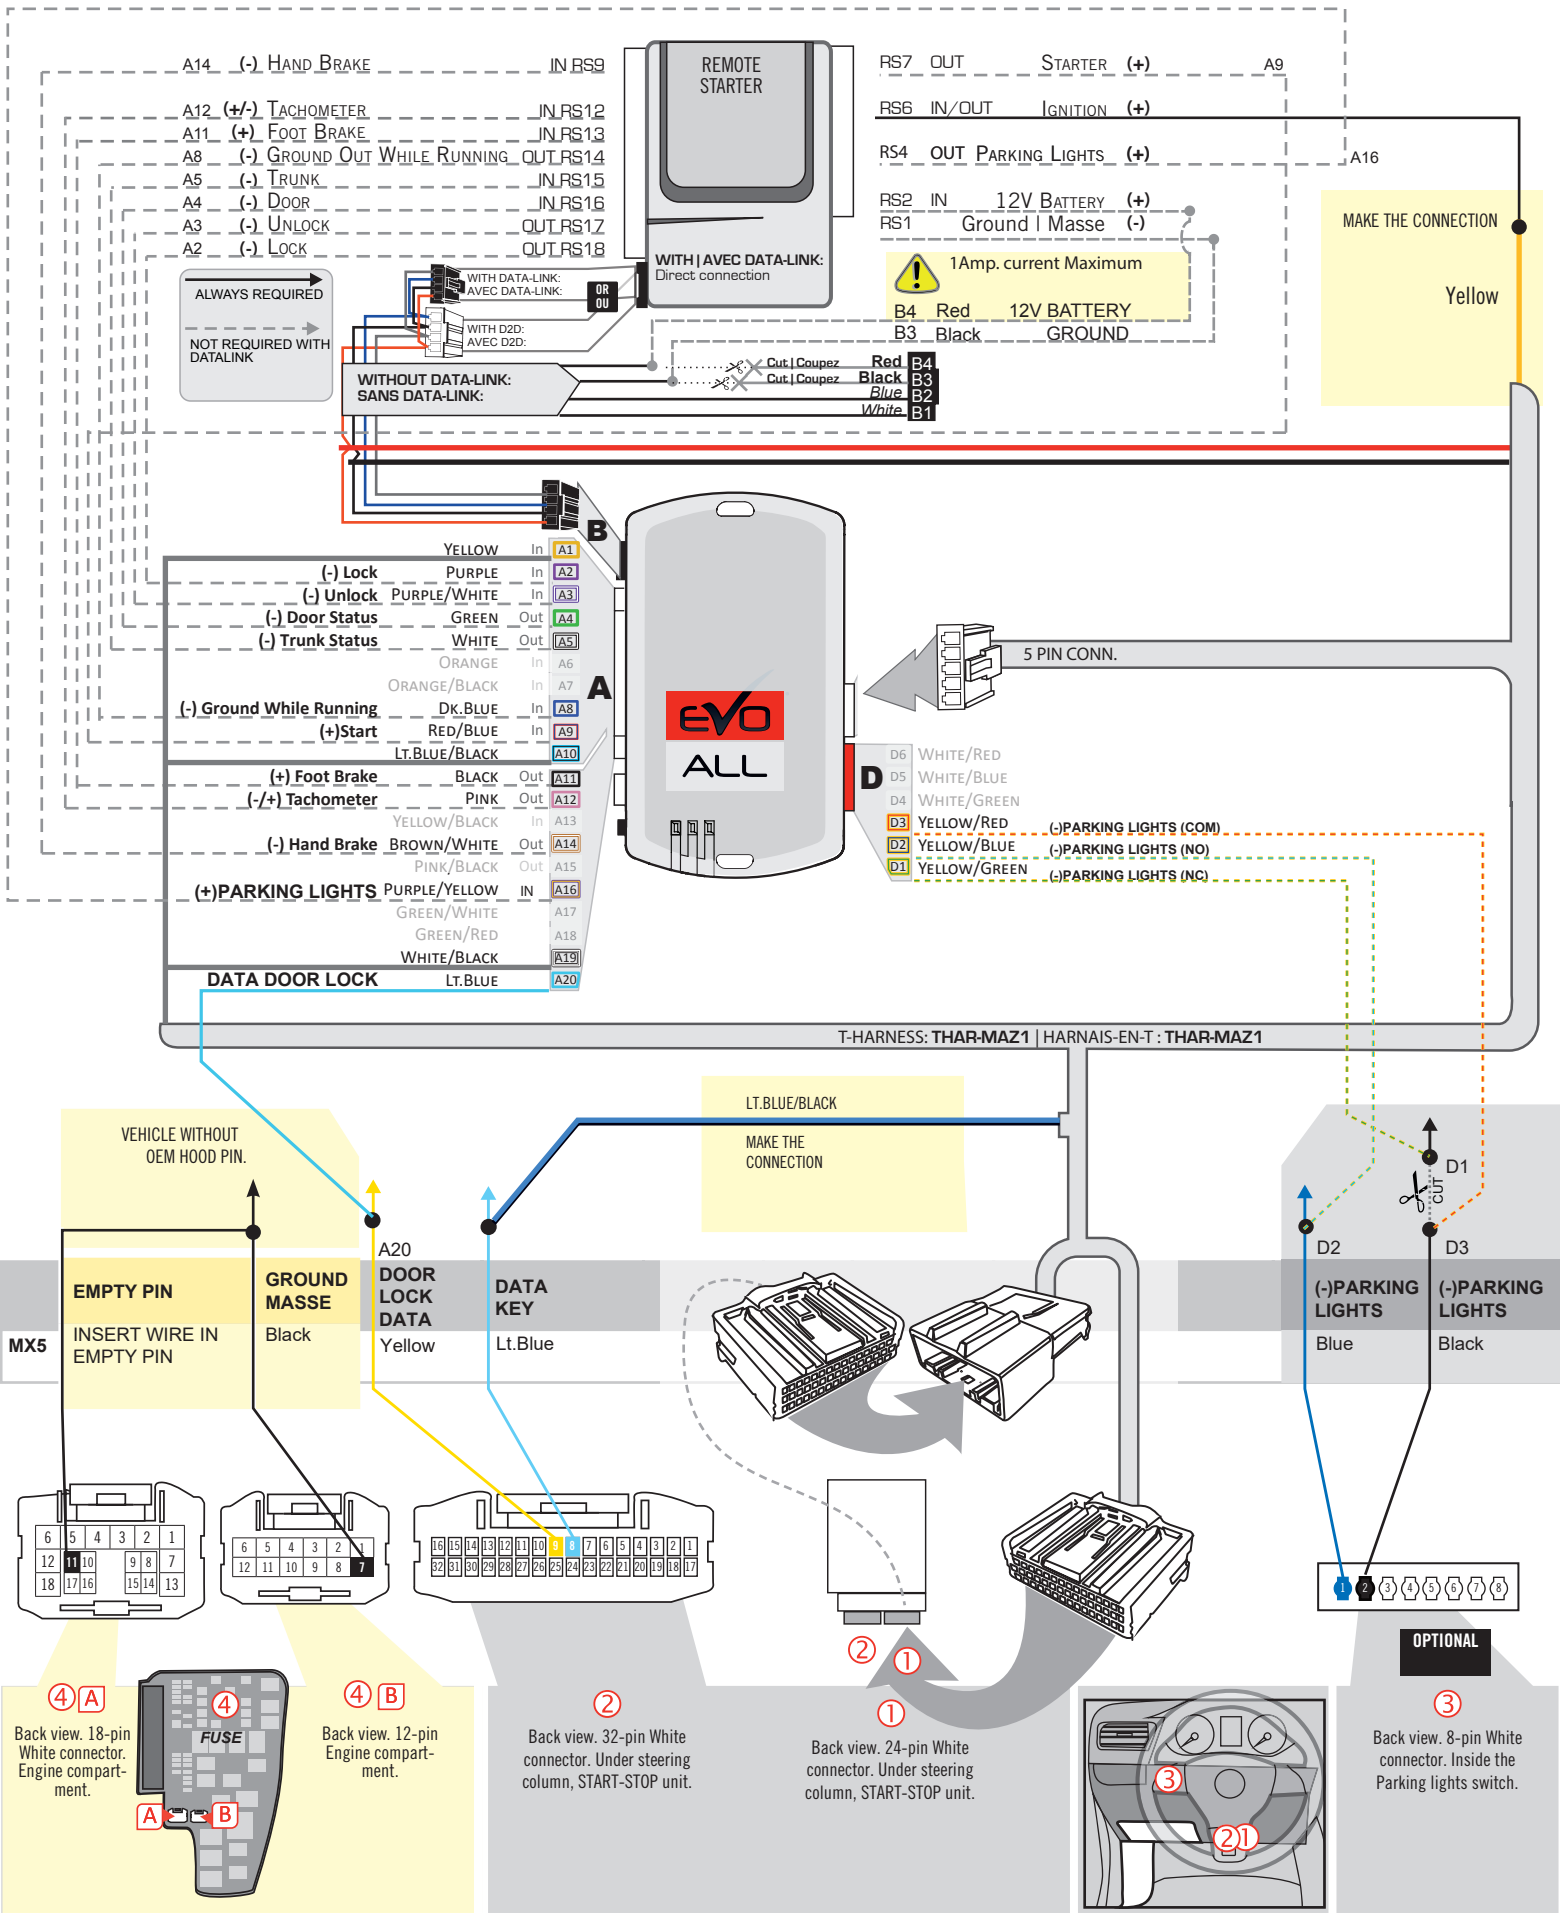

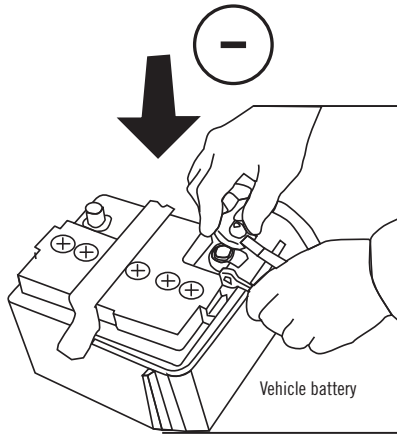

**Reconnect** the (-) terminal of the battery.

CONTINUED NEXT PAGE

# x3 max.


**Do not program more than 3 modules on the same vehicle.**

If more than 3 modules are programmed to a vehicle, it is possible that the remote car starter will never be functional on this vehicle.

If all programming steps were successful and the vehicle cannot be remote started :


- Double check all connections using the installation diagram above as a reference.

If no connection errors can be found then please contact technical support assistance.

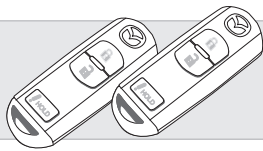

**Make sure** to have two valide vehicle key.


1

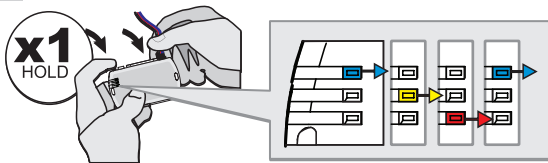

**Press and hold** the programming button:  
**Connect** the 4-PIN Data-link harness (Black connector).


↳ The Blue, Red, Yellow and Blue & Red LEDs will alternatively illuminate.

2

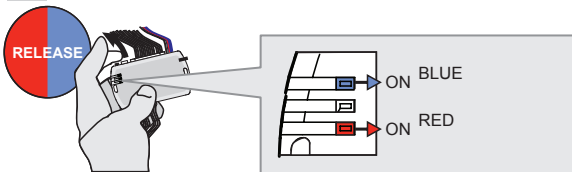


**Release** the programming button when the Blue & Red LEDs are ON.

 *If the LED are not solid BLUE and RED disconnect the 4-PIN Data-link harness (Black connector) and go back to step1.*




3

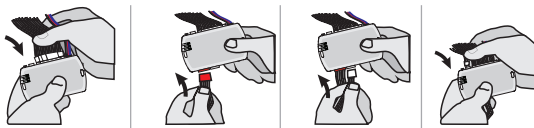

**Connect** the required remaining harnesses.

4

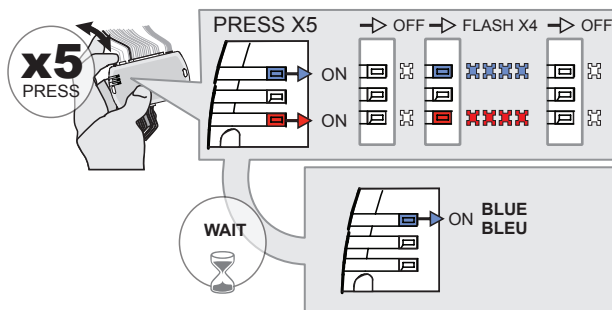

**Press and release** the programming button five times (5x).

↳ The Red & Blue LEDs will alternate between 4 flashes and a pause.


↳ **Wait** for the Blue LED to turn ON.



KEY BYPASS PROGRAMMING PROCEDURE 2/5




5

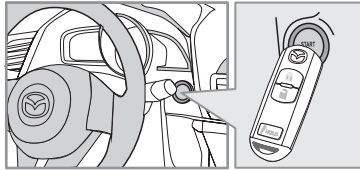


Place the 1st OEM remote close to the front of the START/STOP button exactly as shown.

6

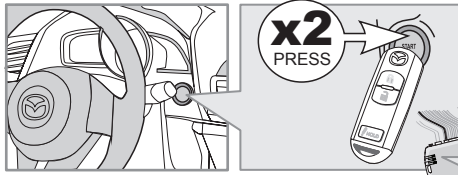


Press the START/STOP button twice to activate the vehicle's Ignition.

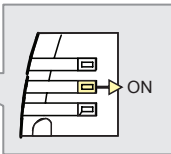


↳ The Yellow LED will turn ON.

7

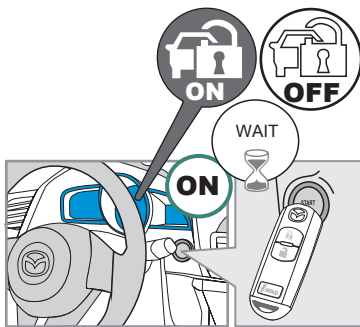

 
If the Blue LED is ON solid disconnect the 4-PIN Data-link harness (Black connector) and go back to step 1.




Wait for the security indicator to turn OFF (around 3 seconds).

8

**IMMEDIATELY**

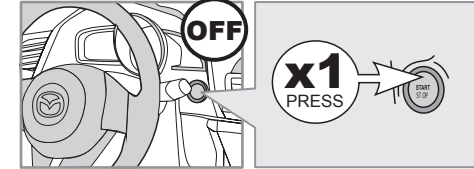


Press the START/STOP button once to deactivate the vehicle's Ignition.

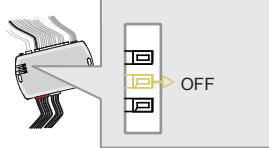

↳ The Yellow Led will turn OFF.




9

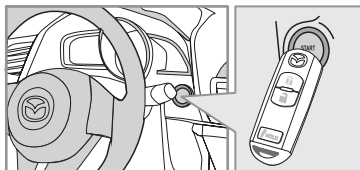


Place the 2nd OEM remote close to the front of the START/STOP button exactly as shown.

10

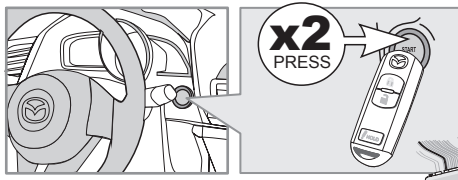


Press the START/STOP button twice to activate the vehicle's Ignition.

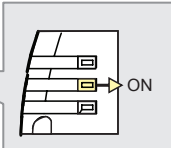


↳ The Yellow LED will turn ON.

KEY BYPASS PROGRAMMING PROCEDURE 3/6

**11**




KEY#2

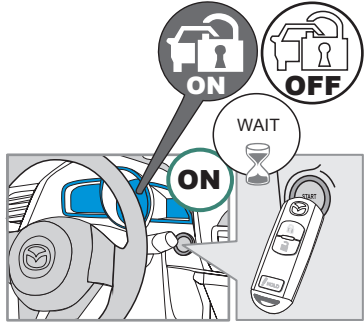


Wait for the security indicator to turn OFF (around 3 seconds).

**12**

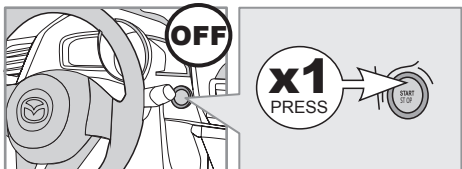


IMMEDIATELY

Press the START/STOP button once to deactivate the vehicle's Ignition.

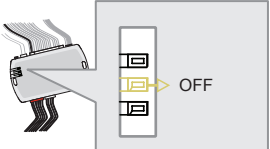


↳ The Yellow Led will turn OFF.


**13**

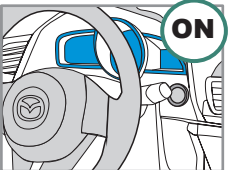

The vehicle's ignition will turn ON

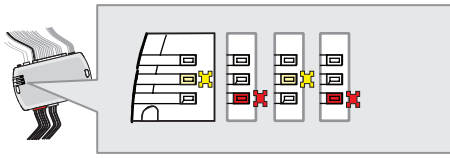



↳ The Yellow and Red LED's will alternatively illuminate.

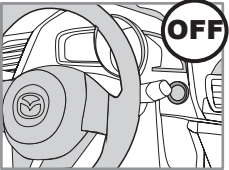

The vehicle's Ignition will turn OFF.


**14**

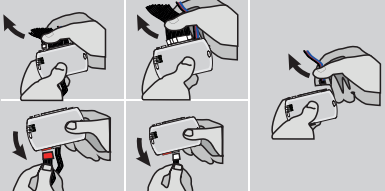

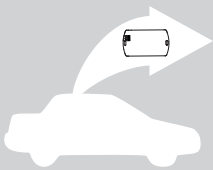


Disconnect all the connectors and after the Data-Link (4-pins) connector.

15

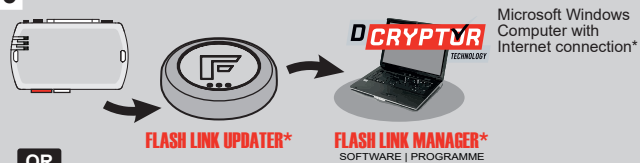


OR

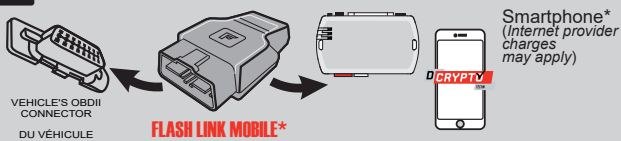

Use the tool: **FLASH LINK UPDATER** or **FLASH LINK MOBILE** to visit the DCryptor menu.

\*Parts required (not included)

16

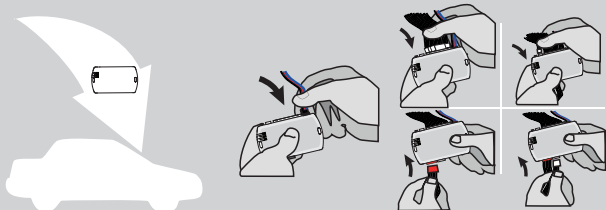


**AFTER DCRYPTOR PROGRAMMING COMPLETED**  
Go back to the vehicle and **reconnect** the 4-Pin (Data-Link) connector and after, all the remaining connector.

17



Repeat step 1 to 12.


18

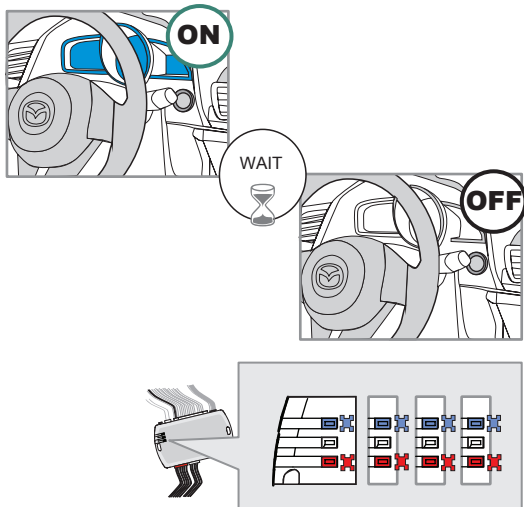

The vehicle's ignition will turn ON


The vehicle's Ignition will turn OFF.

 19



Disconnect all Harness

20

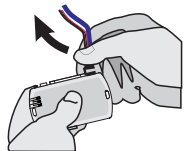


Next:

Disconnect the 4-PIN Data-link harness (Black connector).

CAN PROGRAMMING PROCEDURE


21

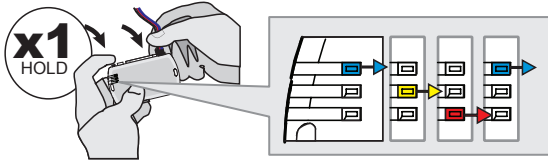

Press and hold the programming button:  
Connect the 4-PIN Data-link harness (Black connector).


↳ The Blue, Red, Yellow and Blue & Red LEDs will alternatively illuminate.

22

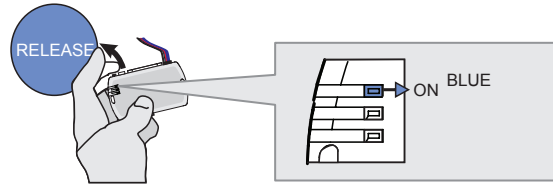


Release the programming button when the Blue LED is ON.

 If the Blue LED is not ON solid disconnect the 4-PIN Data-link harness (Black connector).



23

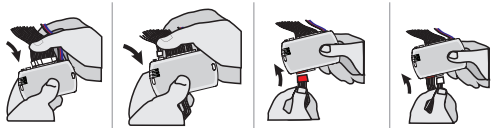


Connect the required remaining harnesses.

24




Press the START/STOP button twice to turn ON the vehicle's Ignition.

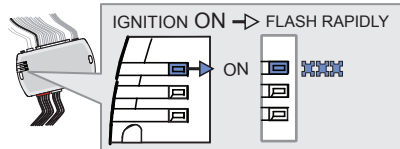


↳ The Blue LED will flash rapidly.

25

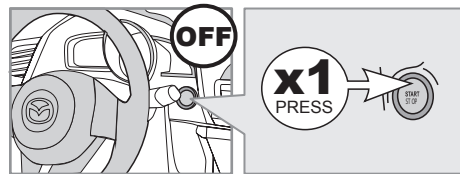

Press the START/STOP button once to turn OFF the vehicle's Ignition.

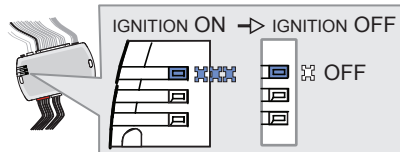


↳ The Blue LED will turn OFF.



The module is now programmed.

REMOTE STARTER FUNCTIONALITY |

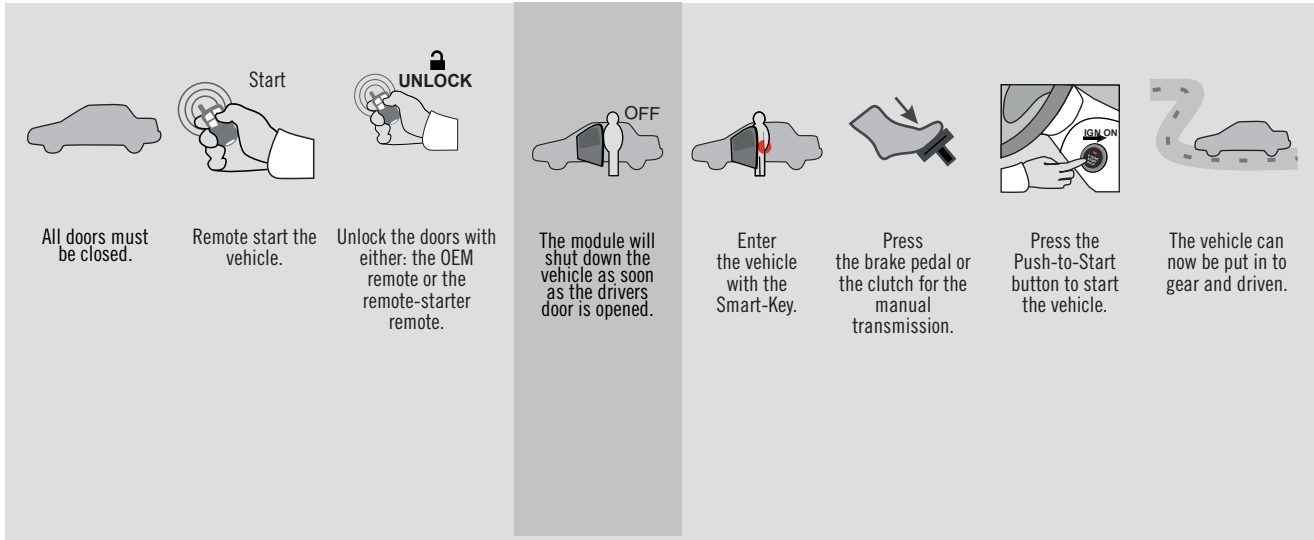

T-HARNESS THAR-MAZ1 INSTALLATION

ADDENDUM - SUGGESTED WIRING CONFIGURATION

VEHICLE	YEARS	Vehicle functions supported in this diagram (functional if equipped)													
		KEY CONTROL CONTROL DE LA CLÉ	T-Harness Harnais en T	Lock	Unlock	Arm	Disarm	Parking Lights	Trunk Release	Tachometer	Door Status	Trunk Status	Hood Status	Hand-Brake Status	Foot-Brake Status
<b>SCION</b>															
iA Push-to-Start	2016	•	•	•	•	•	•	•	•	•	•	•	•	•	•
<b>TOYOTA</b>															
Yaris Push-to-Start	2016-2020	•	•	•	•	•	•	•	•	•	•	•	•	•	•

FIRMWARE VERSION

85.[09]

MINIMUM

To add the firmware version and the options, use the **FLASH LINK UPDATER** or **FLASH LINK MOBILE** tool, sold separately.

<p><b>IF THE VEHICLE IS NOT EQUIPPED WITH FUNCTIONAL HOOD PIN:</b></p>	A11	OFF	Hood trigger (Output Status).
<p><b>Program bypass option:</b></p>	UNIT OPTION		
	A3	OFF	Key Bypass
	C1		OEM Remote status (Lock/Unlock) monitoring
	D6		Push-to-Start

**Parts required** (Not included)

1X Vehicle key required

FLASH LINK MANAGER

Software version 3.62 and more

**MANDATORY INSTALL**

**\*HOOD PIN**

**HOOD STATUS:** THE HOOD PIN SWITCH MUST BE INSTALLED IF THE VEHICLE CAN BE REMOTE STARTED WITH THE HOOD OPEN, SET FUNCTION A11 TO OFF.

A11

OFF


**Notice:** the installation of safety elements are mandatory. The hood pin is an essential security element and must be installed.

THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.

KEY CONTROL




Remove the battery from the key fob.

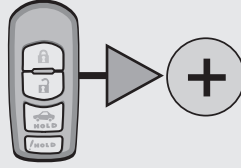

Transponder antenna ring (Part #: AR35), sold separately.

Remove the adhesive from the back of the antenna ring and stick it on the back of the key fob.

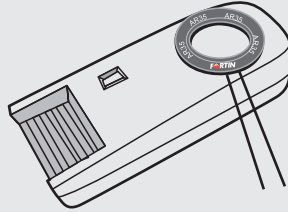


Back of Key fob.

OR  
OU




Make 8 -12 loops with the wire and tape it the back of the key fob as shown.

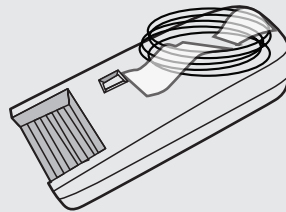


Back of Key fob.

DESCRIPTION


① Under steering column, START-STOP unit.

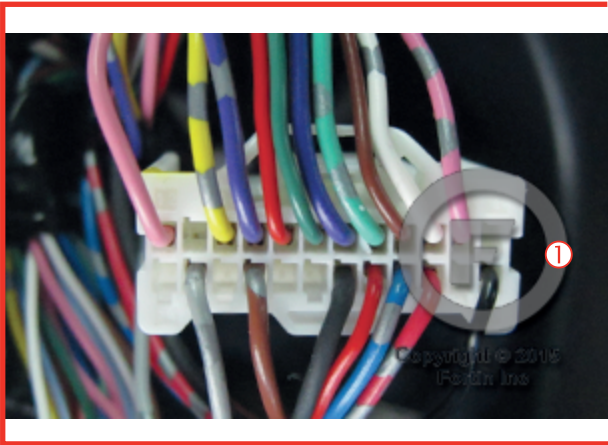

③ Under steering column, START-STOP unit.

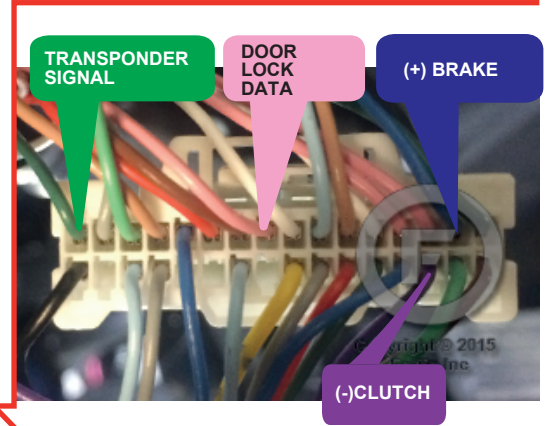

② Parking Light connector

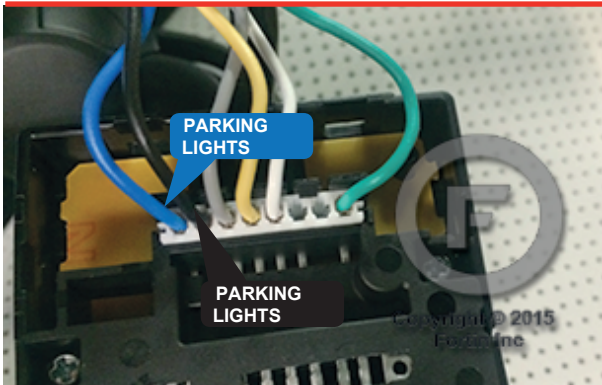






# ATTENTION

Before disconnecting a module, a computer or a control unit from a vehicle: Always disconnect the negative terminal from the vehicle's battery.


In these vehicles, the factory keyless entry module is sensitive to interference and may cease to operate if some precautions are not taken. Disconnect the (-) terminal of the battery prior to disconnecting the connectors at the smartkey module below the steering wheel to avoid damage to the smartkey entry module.

1

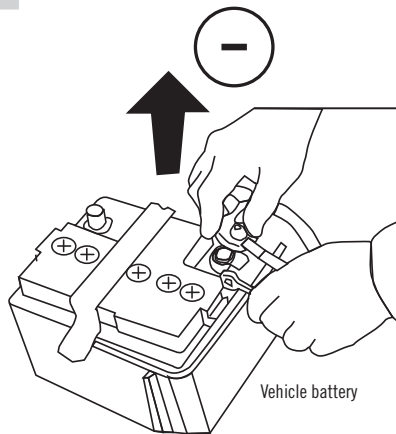


Disconnect the (-) terminal of the battery.

2

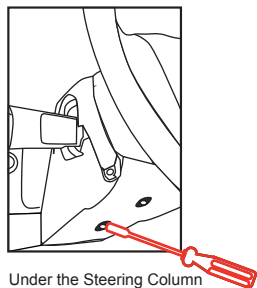


Under the Steering Column

1 Unscrew.

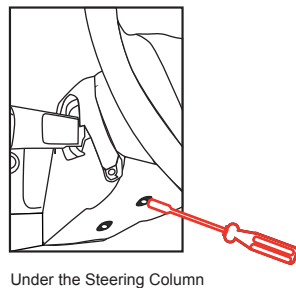


Under the Steering Column

2 Unscrew

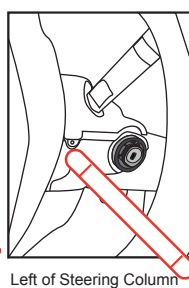


Left of Steering Column

3 Onclip

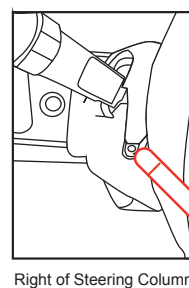

Right of Steering Column

4 Onclip

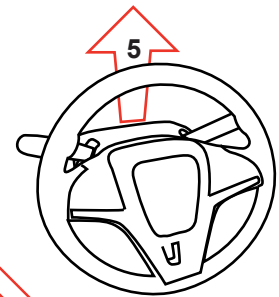


5 Gently pull up the cover of the steering column.

3


Make the following connections.

CONTINUED NEXT PAGE

4

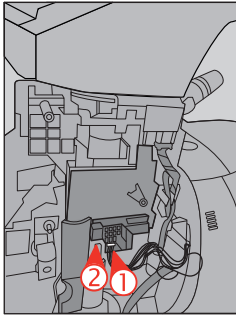

Under steering column, START-STOP unit.

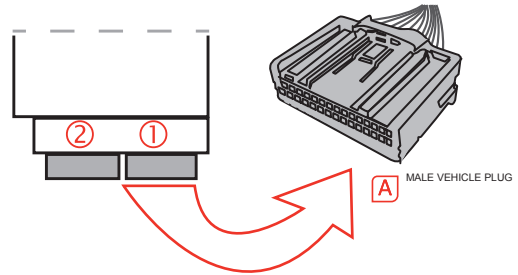


Disconnect the connector

A

5


Under steering column, START-STOP unit.

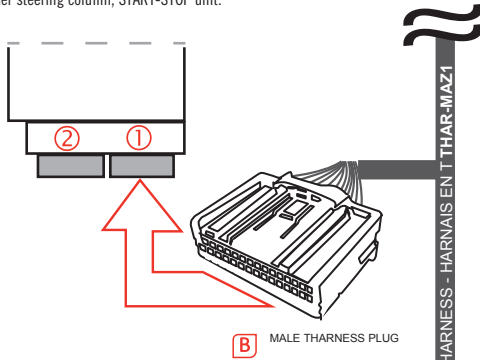

Connect the connector

B

6

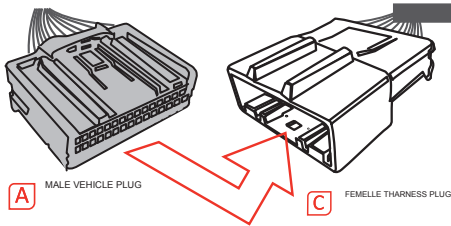

Connect the connector

A



into connector

C


7

Make other required connections.


**AUTOMATIC TRANSMISSION WIRING CONNECTION**

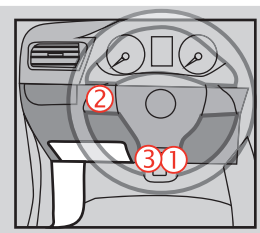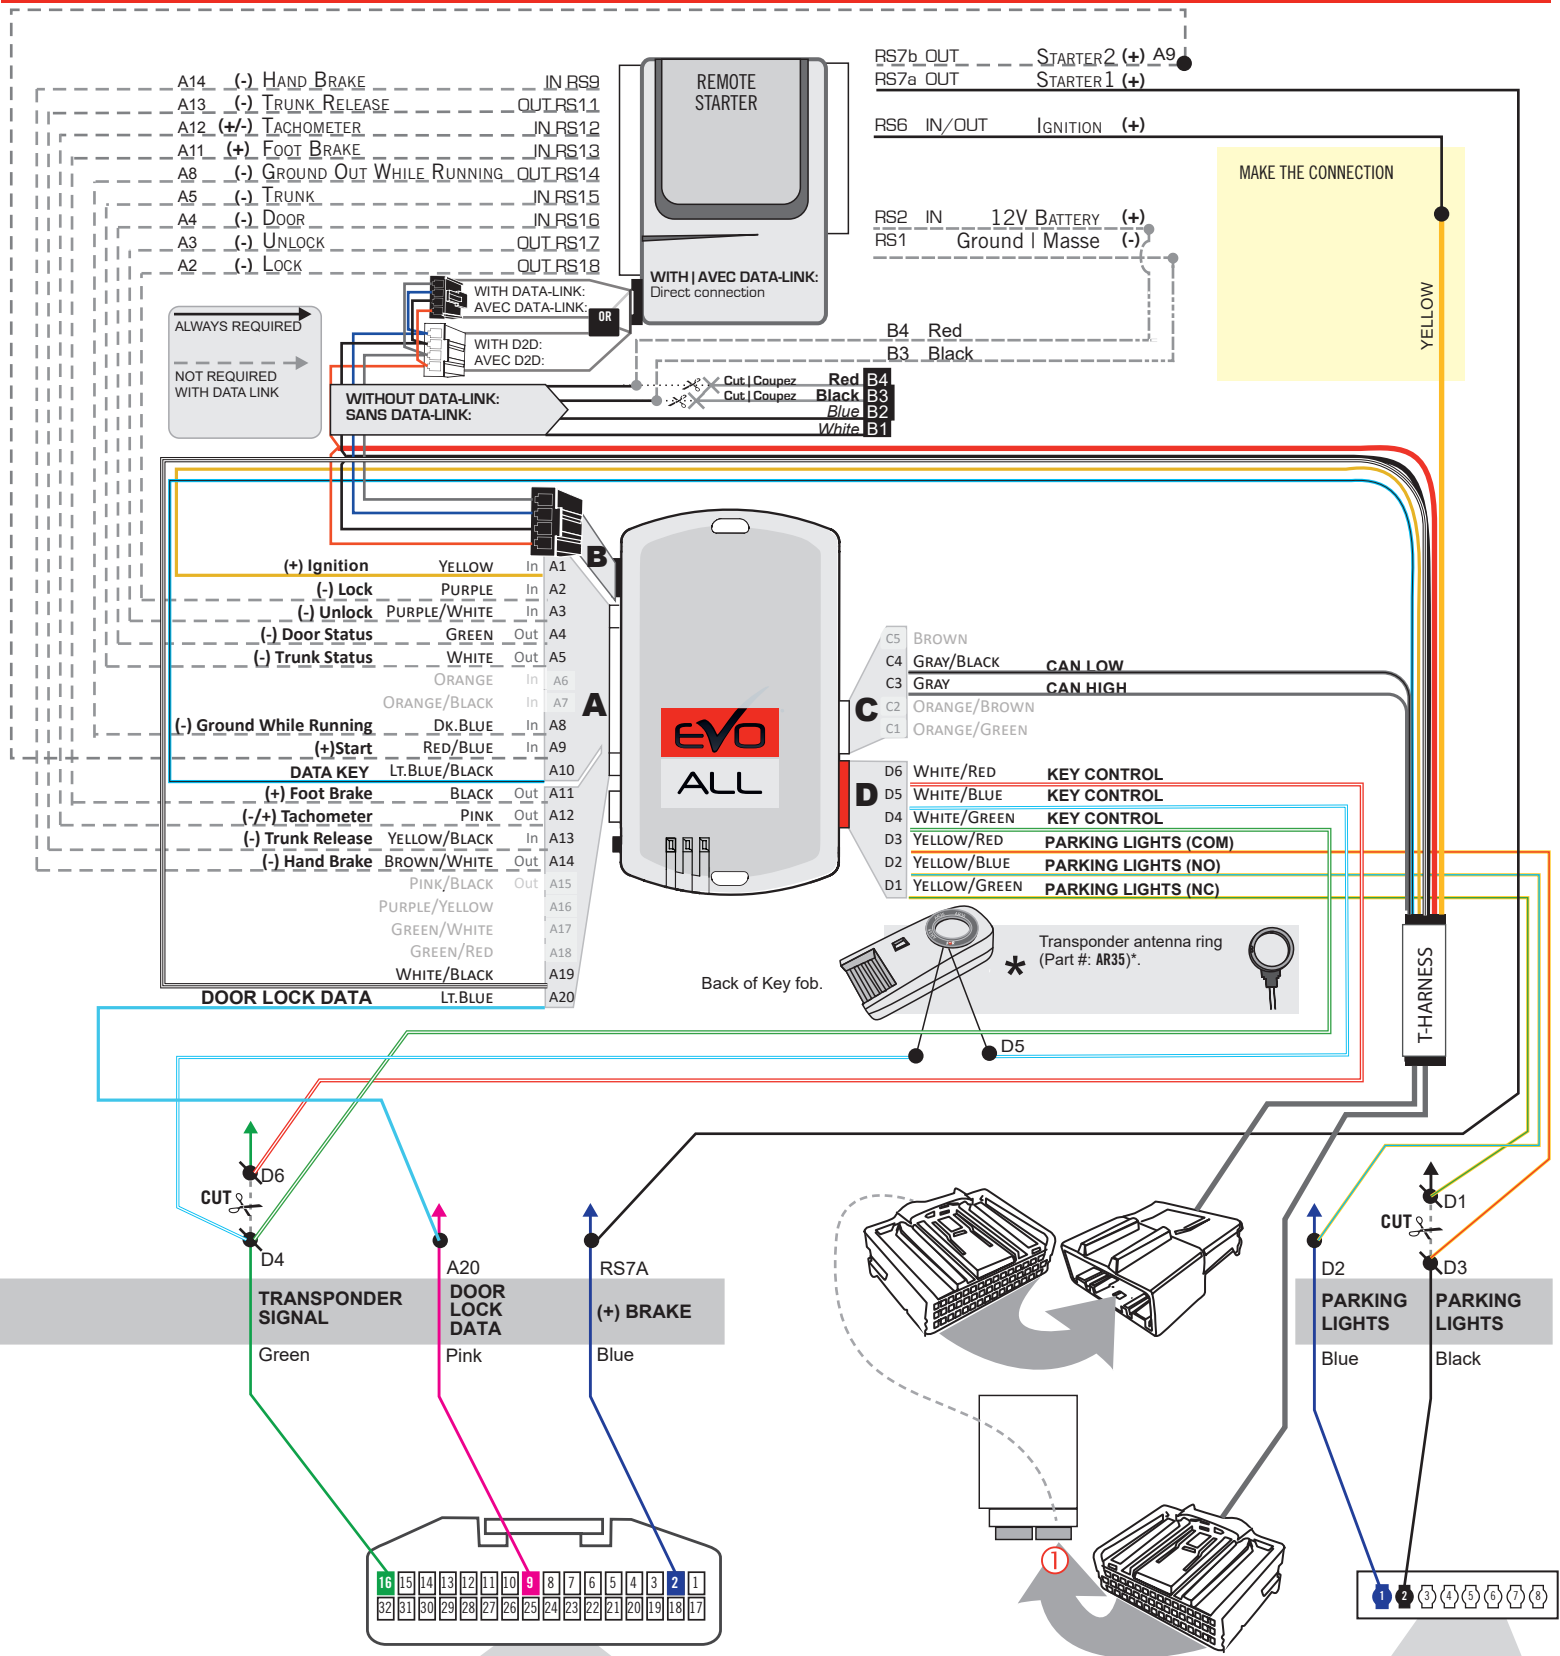

 3 Back view. 32-pin White connector. Connector at Start-Stop module.





 1 Back view. 24-pin White connector. Under steering column, START-STOP unit.




2 Back view. 8-pin White connector. Inside the Parking lights switch.

MANUAL TRANSMISSION WIRING CONNECTION

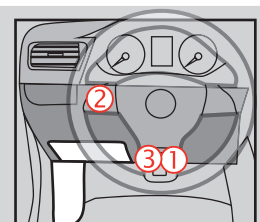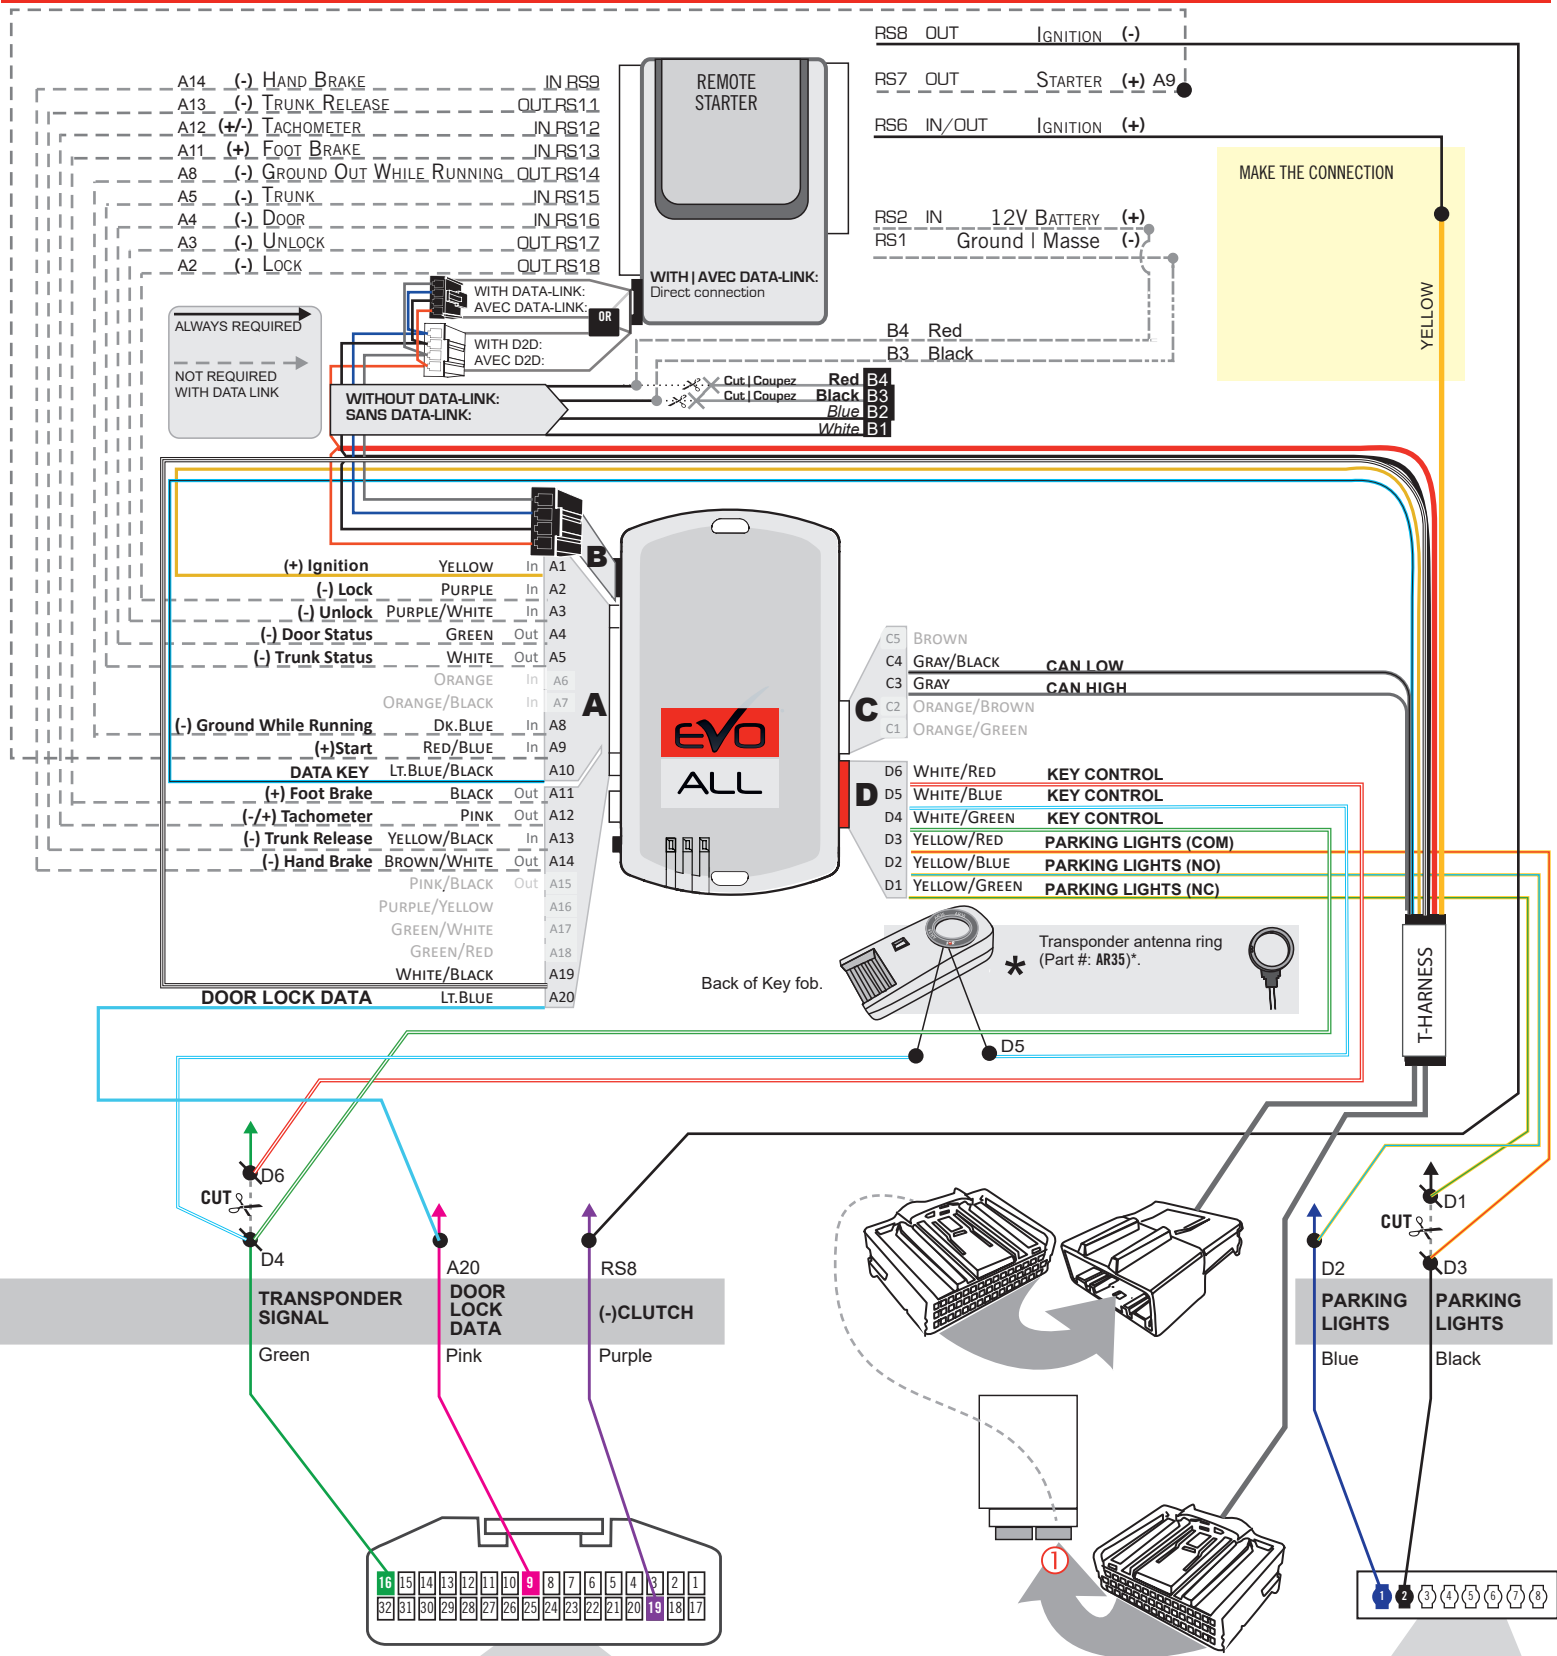

**3**

Back view. 32-pin White connector. Connector at Start-Stop module.

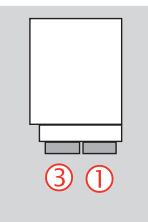


**1**

Back view. 24-pin White connector. Under steering column, START-STOP unit.

**2**

Back view. 8-pin White connector. Inside the Parking lights switch.

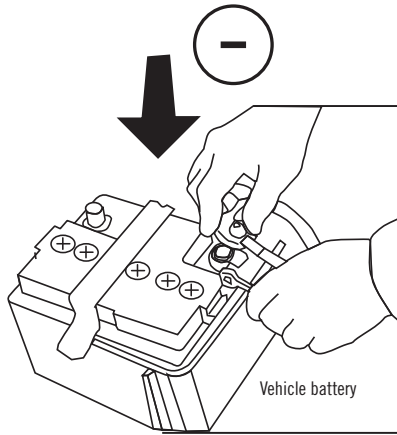


**Reconnect** the (-) terminal of the battery.

CONTINUED NEXT PAGE |

**PROGRAMMING PROCEDURE**


1

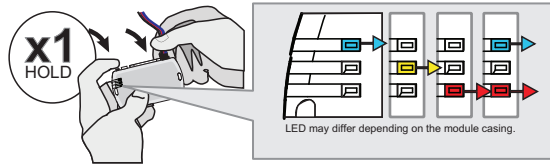

**Press and hold** the programming button:  
**Connect** the 4-PIN Data-link harness (Black connector).


↳ The Blue, Red, Yellow and Blue & Red LEDs will alternatively illuminate.

2

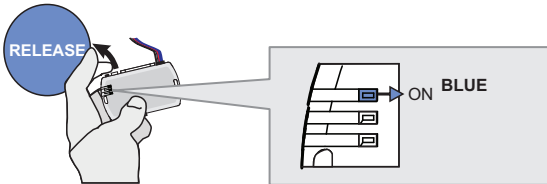


**Release** the programming button when the LED is BLUE.

 If the LED is not solid BLUE disconnect the 4-Pin connector (Data-Link) and go back to step 1.




3

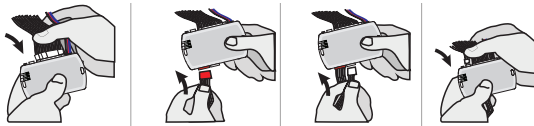

**Insert** the required remaining connectors.


4

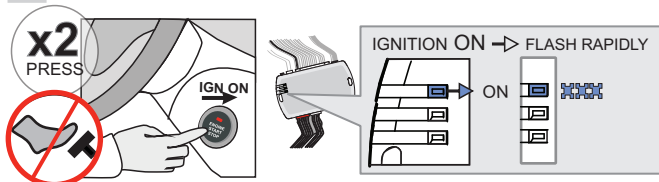

Do not press the brake pedal.  
**Press** the Push-to-Start button twice to turn on the ignition.

↳ Wait for the BLUE LED will flash rapidly and constantly.

5

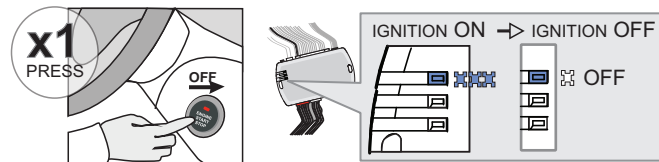

**Press** the Push-to-Start button once to turn off the ignition.

↳ The BLUE LED will turn off.



The module is now programmed.

## REMOTE STARTER FUNCTIONALITY



All doors must be closed.

**Remote start** the vehicle.



**Press** the Unlock button of the remote car starter.



**Enter** the vehicle with the Intelligent Access Key.



*The vehicle can now be put in to gear and driven.*



If the vehicle is not unlocked the module will shut down the remote-starter and the vehicle as soon as any door is opened.

MAZDA 3 - T-HARNESS MAZDA - STAND ALONE

ADDENDUM - SUGGESTED WIRING CONFIGURATION



ONLY COMPATIBLE WITH AUTOMATIC TRANSMISSION VEHICLES.  
COMPATIBLE AVEC VÉHICULE À T



Vehicle functions supported in this diagram (functional if equipped)

VEHICLE	YEARS	Connection #			Vehicle functions supported in this diagram (functional if equipped)												
		REMOTE STARTER - NO DOORLOCK	REMOTE STARTER & DOORLOCK CONTROL	VEHICLE WITHOUT OEM ALARM	Immobilizer bypass	Lock	Unlock	Arm	Tachometer	Door Status	Trunk Status	Hood Status protection remote start	Hand-Brake Status	Foot-Brake Status	OEM Remote monitoring	Alarm mode	
<b>MAZDA</b>																	
3	Push-to-Start - Sedan / Hatchback - AT	2014-2016	1	2	3	•	•	•	•	•	•	•	•	•	•	•	•

HARDWARE VERSION



MINIMUM 6

71.[22]

FORD MINIMUM



Parts required (Not included)

- 1X 1K Ohm Resistor (with doorlock)
- 1X T-Harness Mazda1
- FLASH LINK MANAGER**
- Software version 3.52 and more



**FLASH LINK UPDATER 2**

- 1X Microsoft Windows Computer & Internet connection





**PARTS REQUIRED (NOT INCLUDED)**



**FLASH LINK UPDATER 2**

**FLASH LINK MANAGER**  
SOFTWARE | PROGRAMME



Microsoft Windows Computer  
(Internet connection required)

 


**MANDATORY**

HOOD PIN






REMOTE START SAFETY OVERRIDE SWITCH




Part #: RSPB available, Sold separately.

**Notice:** the installation of safety elements are mandatory. The hood pin and the valet switch are essential security elements and must be installed.

**STAND ALONE CONFIGURATION**


		UNIT OPTION	DESCRIPTION
	Program bypass option:	<b>D1</b>	OEM Remote Stand Alone Remote Starter
	Program bypass option with oem remote:	<b>C1</b>	OEM Remote Monitoring
	Program bypass option with RF KIT antenna:	<b>H1 to H6</b>	Supported RF Kits and select RF Kit

**REMOTE STARTER FUNCTIONNALITY**




All doors must be closed.

**3X**




Press the OEM remote's Lock button 3x to remote-start (or remote-stop) the vehicle.



The vehicle will START.

REMOTE STARTER DIAGNOSTICS	
<b>MODULE RED LED</b>	
x2 flash :	Brake ON
x3 flash :	No tach
x4 flash :	Ignition before start
x5 flash :	Hood Open
<b>PARKING LIGHTS</b>	
x4 flash :	FOB in car
x5 flash :	Hood open
x6 flash :	Brake ON
x7 flash :	Door open
x8 flash :	Bad Encryption/ key code

**REMOTE STARTER WARNING CARD**

  
**CUT THIS WARNING CARD AND STICK IT ON A VISIBLE PLACE:**  
 or use the package RSPB, Sold separately.

**WARNING | ATTENTION**




**REMOTE STARTER**

THE VEHICLE CAN BE STARTED BY EITHER: PRESSING THE LOCK BUTTON ON THE OEM REMOTE 3 TIMES CONSECUTIVELY OR BY A SMARTPHONE. **TURN ON** THE SAFETY SWITCH LOCATED UNDER THE DASHBOARD BEFORE WORKING ON THE VEHICLE.


DESCRIPTION

① ② Under steering column, START-STOP unit

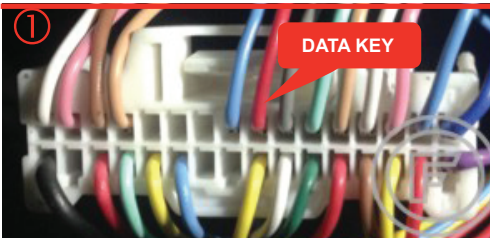

Engine compartment - without OEM hood pin

⑧ ⑨

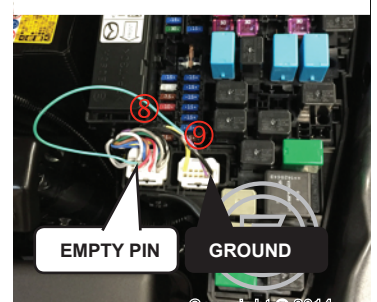

③ Parking Light connector




driver kick panel.

⑤



driver kick panel.


⑥

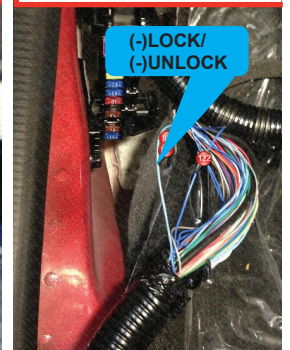

CONNECTION 1

REMOTE CAR STARTER ONLY - DOORLOCK BY OEM REMOTE

AUTOMATIC TRANSMISSION ONLY

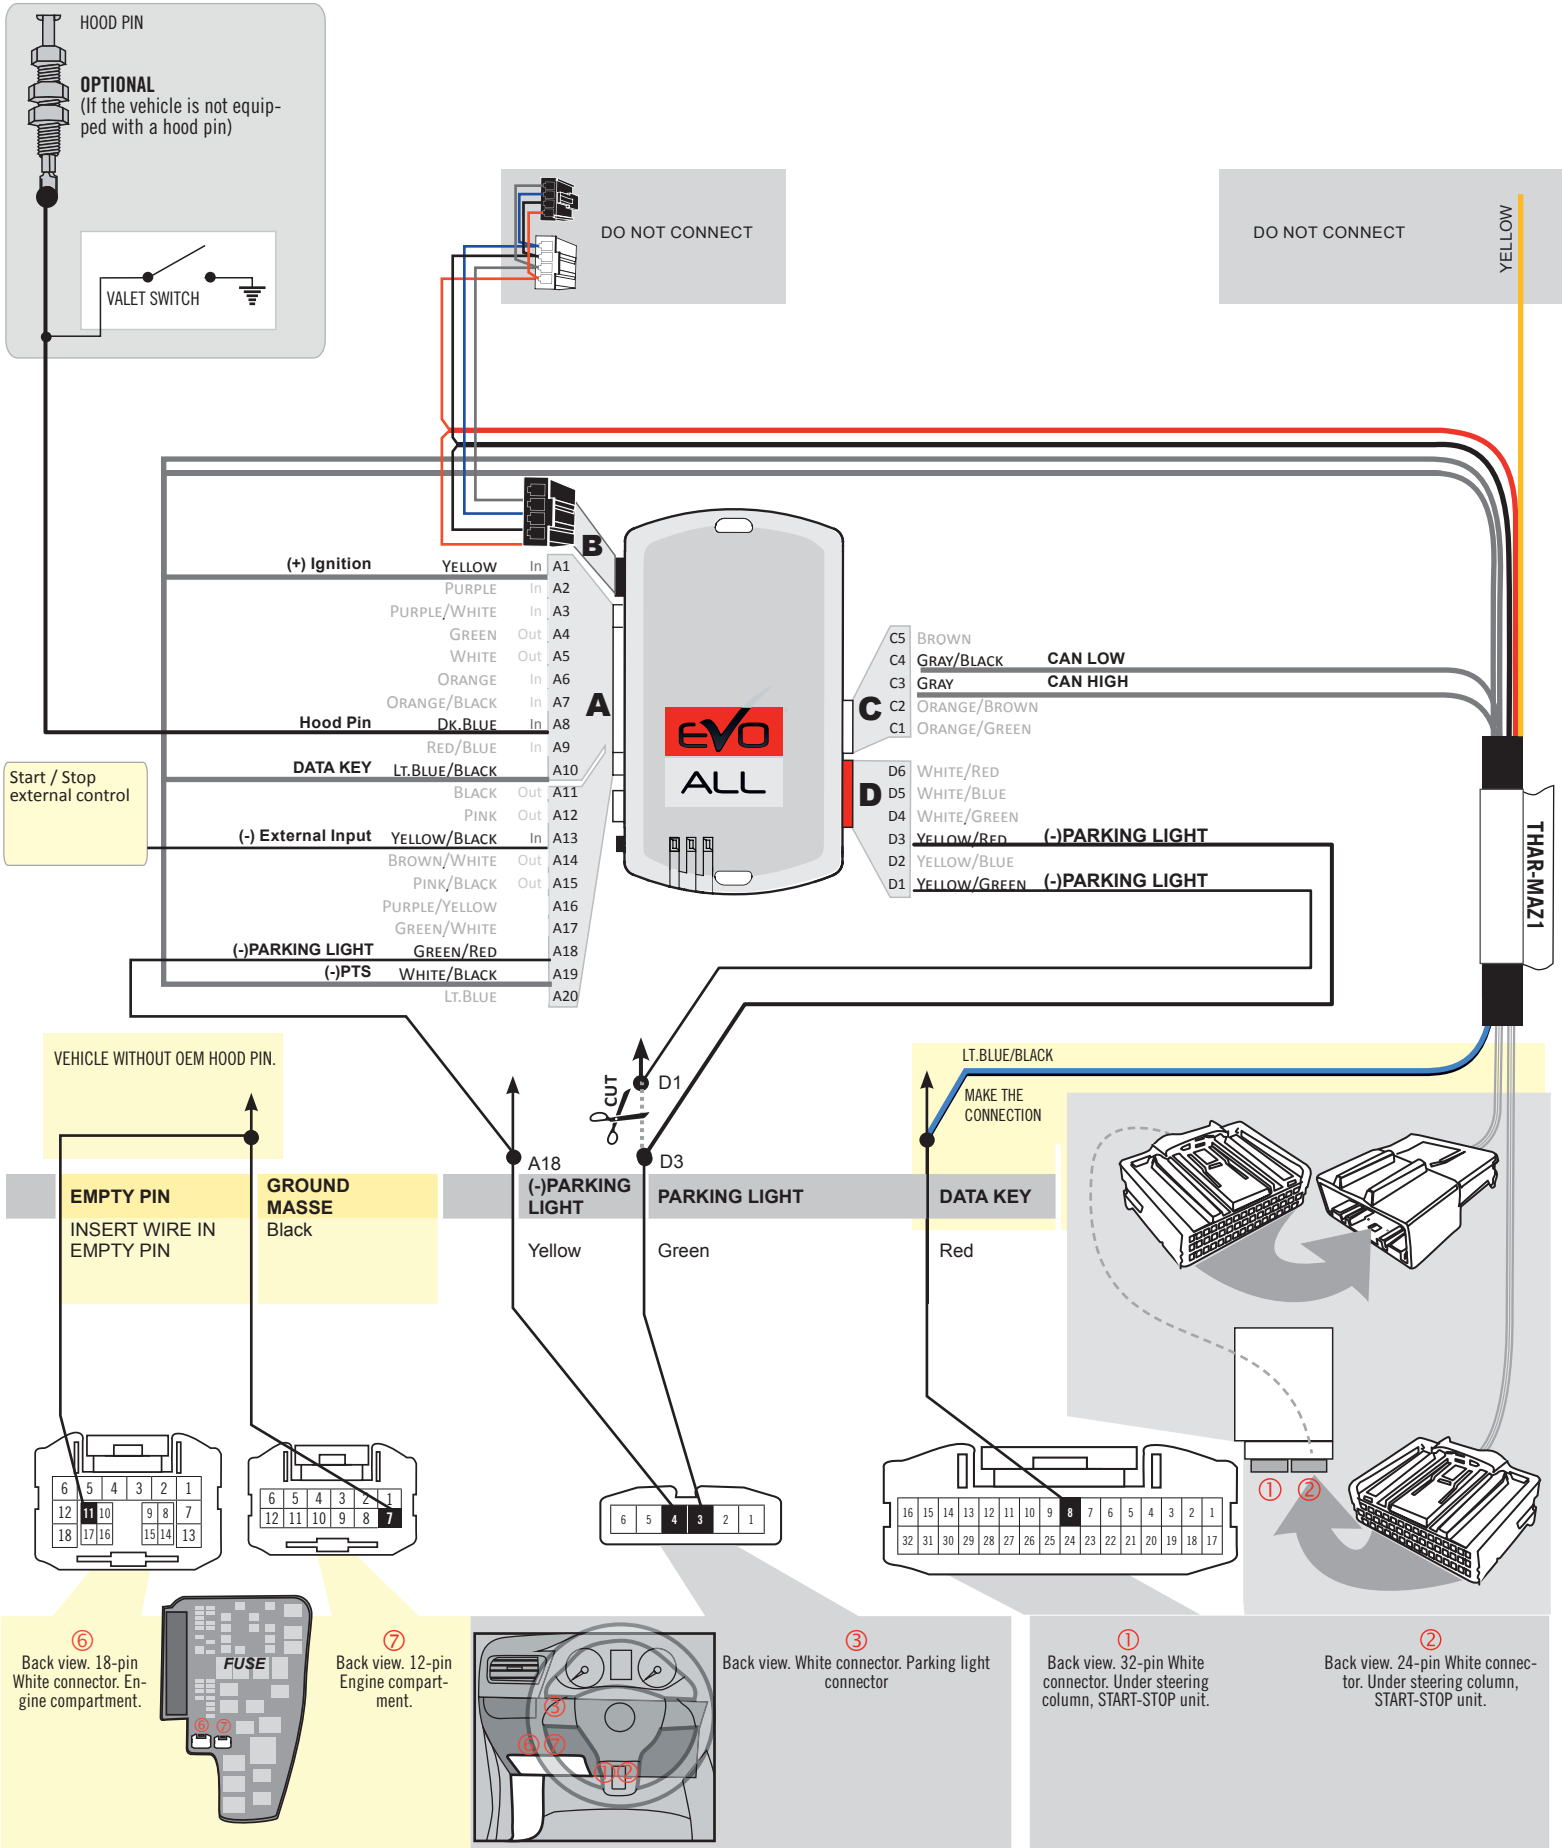

CONNECTION 2

REMOTE CAR STARTER AND DOORLOCK



Program bypass option:

UNIT OPTION

DESCRIPTION

**C1**


OEM Remote status (Lock/Unlock) monitoring

**G1**

Evo Alarm enable


CONNECTION 2

REMOTE CAR STARTER AND DOORLOCK  
AUTOMATIC TRANSMISSION ONLY

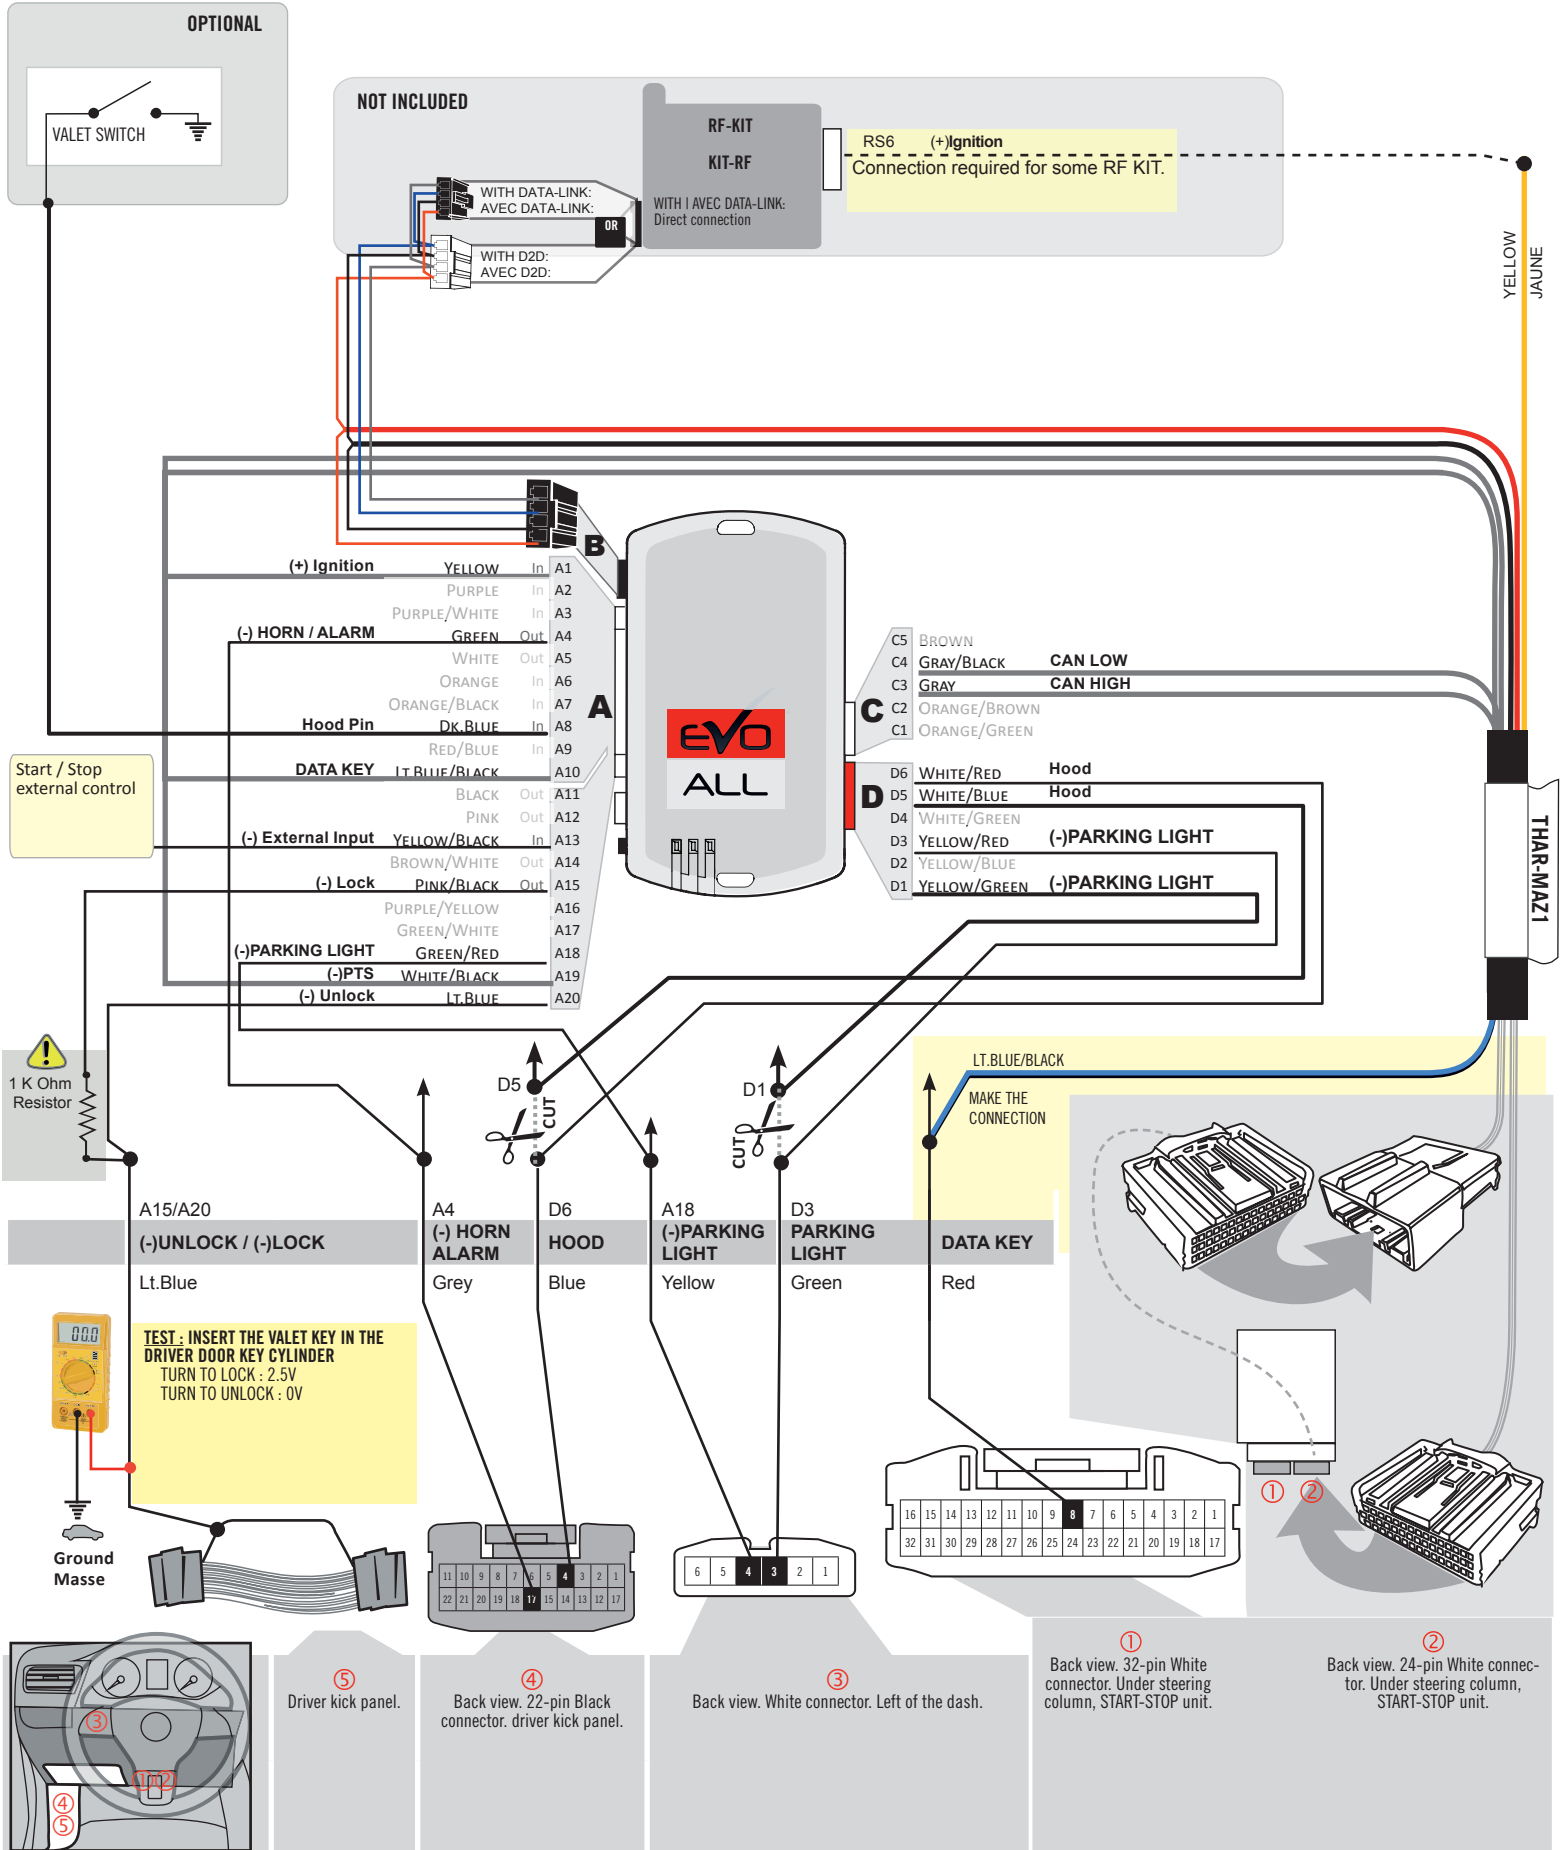

**CONNECTION 3**

**VEHICLE WITHOUT HOOD PIN & WITHOUT OEM ALARM  
AUTOMATIC TRANSMISSION ONLY**

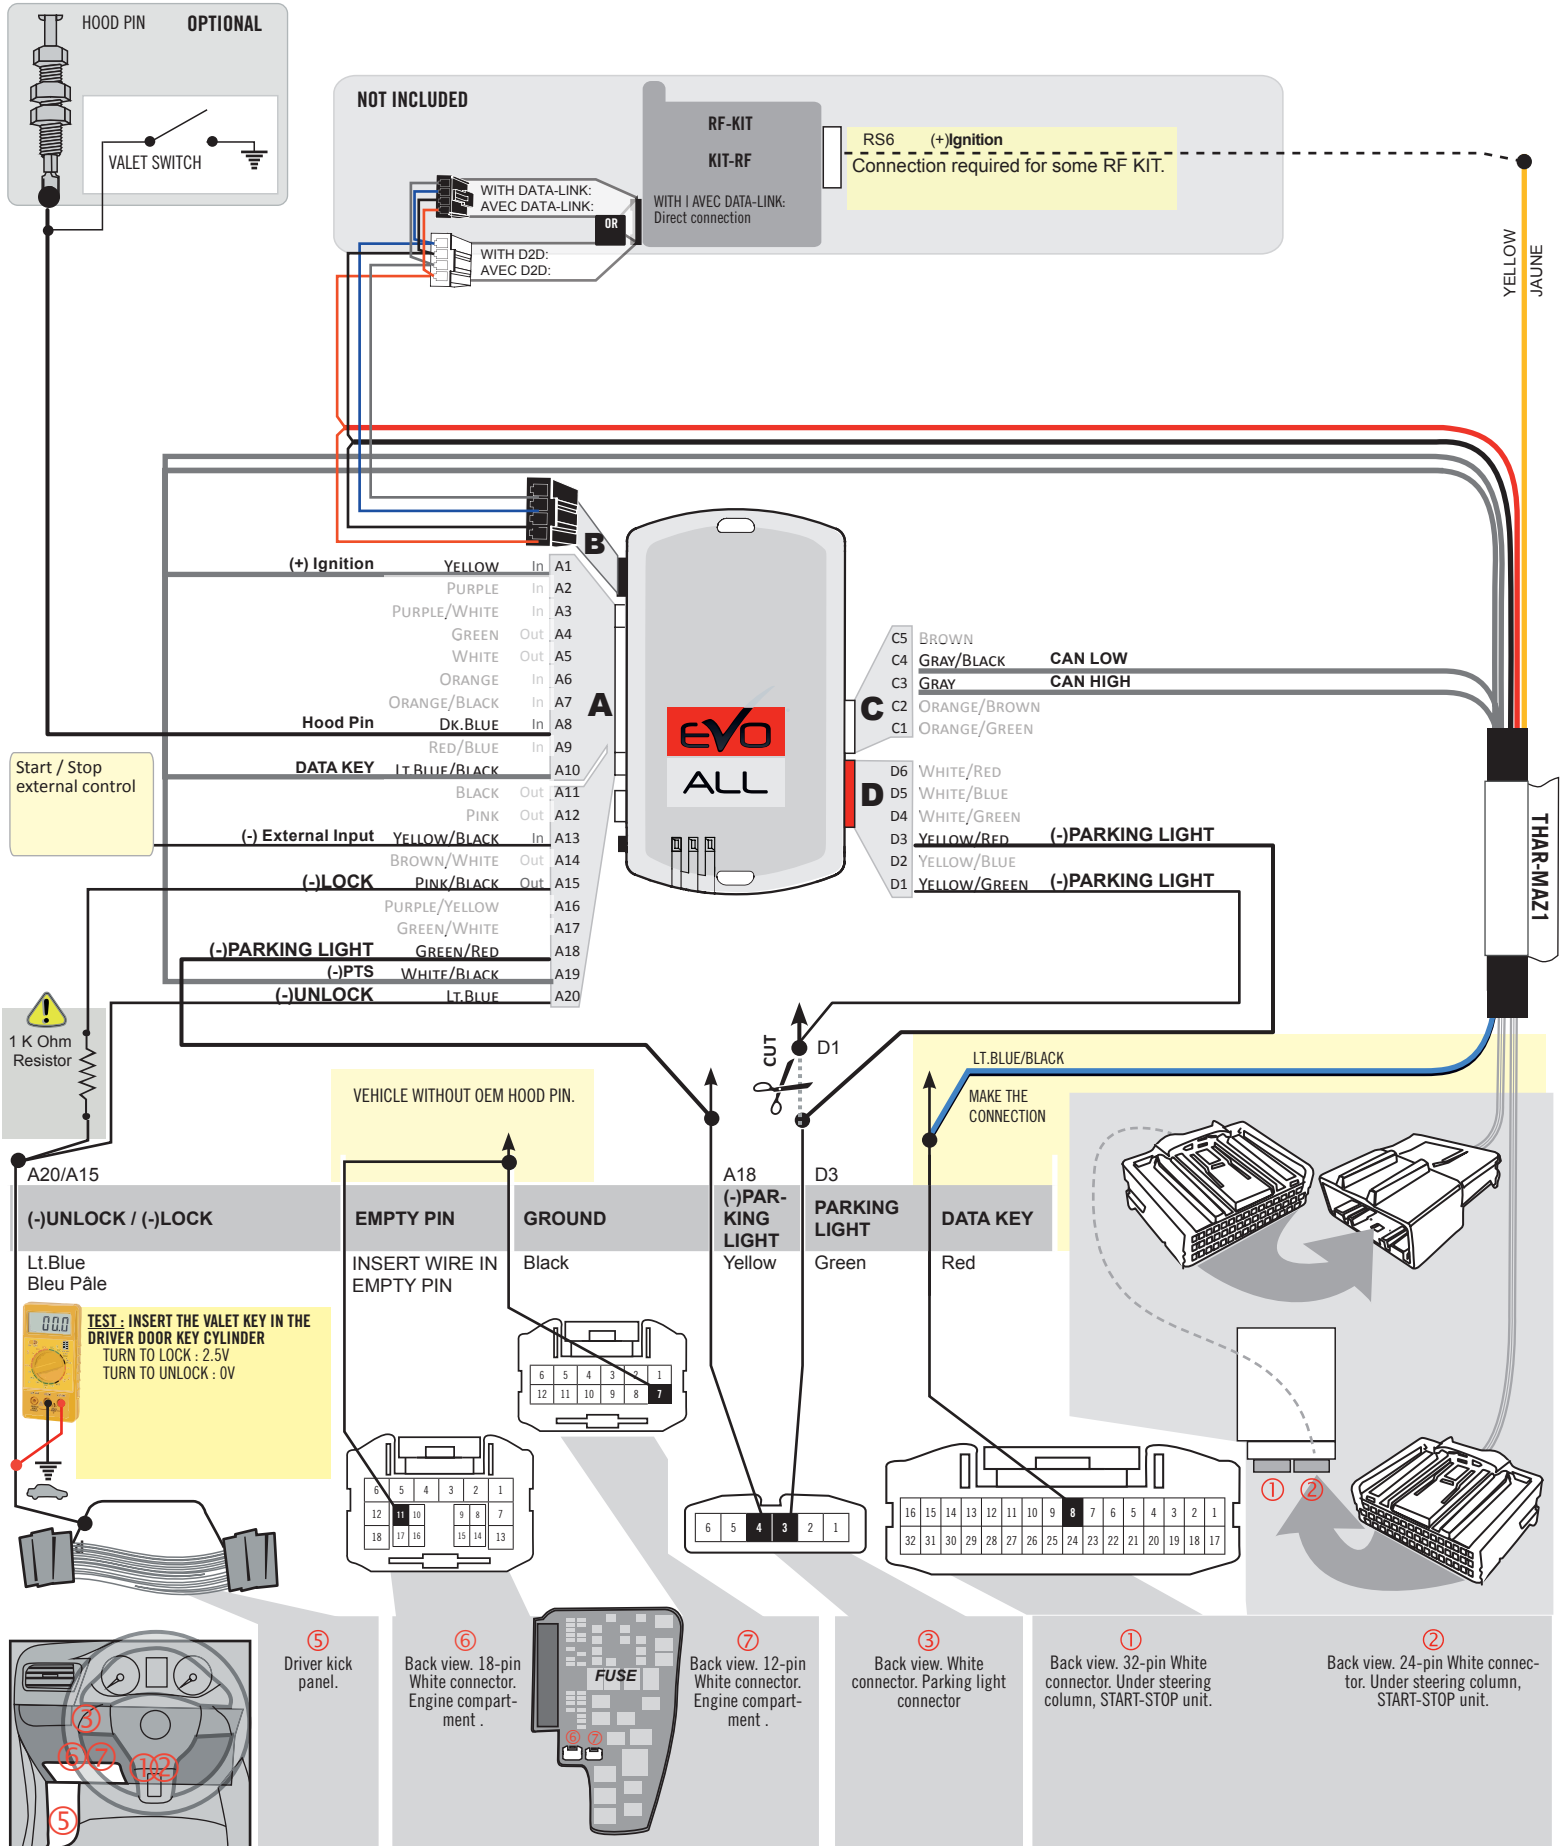

# x3 max.


**Do not program more than 3 modules on the same vehicle.**

If more than 3 modules are programmed to a vehicle, it is possible that the remote car starter will never be functional on this vehicle.

If all programming steps were successful and the vehicle cannot be remote started :


- Double check all connections using the installation diagram above as a reference.

If no connection errors can be found then please contact technical support assistance.

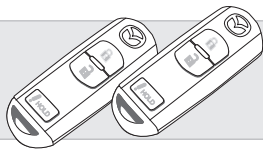

**Make sure** to have two valide vehicle key.


1

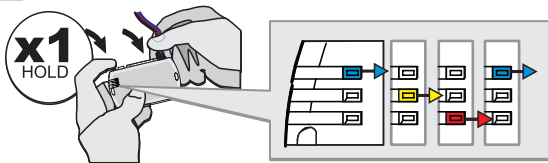

**Press and hold** the programming button:  
**Connect** the 4-PIN Data-link harness (Black connector).


↳ The Blue, Red, Yellow and Blue & Red LEDs will alternatively illuminate.

2

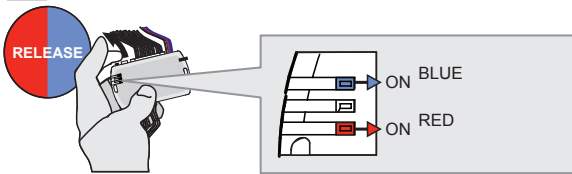


**Release** the programming button when the Blue & Red LEDs are ON.

 *If the LED are not solid BLUE and RED disconnect the 4-PIN Data-link harness (Black connector) and go back to step1.*




3

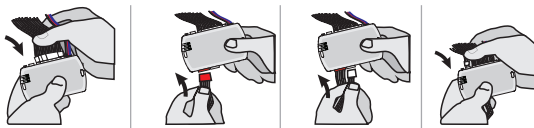

**Connect** the required remaining harnesses.

4

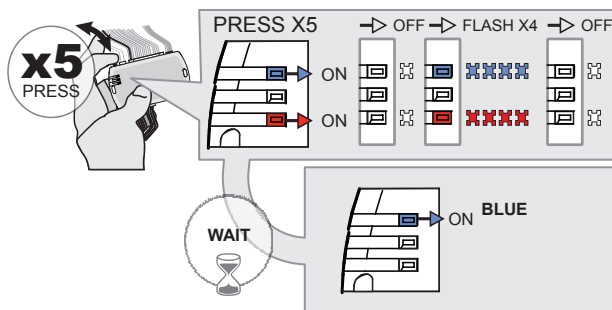

**Press and release** the programming button five times (5x).

↳ The Red & Blue LEDs will alternate between 4 flashes and a pause.


↳ **Wait** for the Blue LED to turn ON.

KEY BYPASS PROGRAMMING PROCEDURE 2/5




KEY #1

5

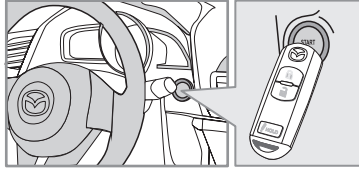


Place the 1st OEM remote close to the front of the START/STOP button exactly as shown.

6

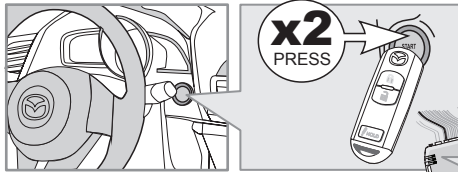


Press the START/STOP button twice to activate the vehicle's Ignition.

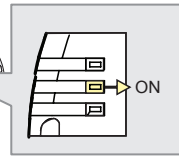

↳ The Yellow LED will turn ON.

7

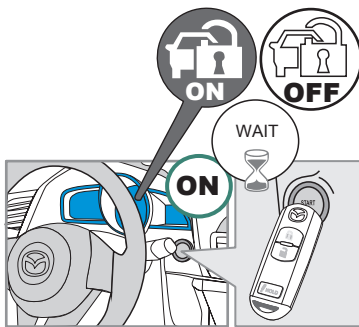

If the Blue LED is ON solid disconnect the 4-PIN Data-link harness (Black connector) and go back to step 1.


Wait for the security indicator to turn OFF (around 3 seconds).

8

**IMMEDIATELY**



Press the START/STOP button once to deactivate the vehicle's Ignition.

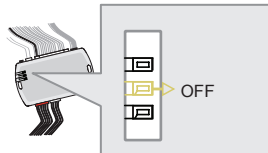


↳ The Yellow Led will turn OFF.




KEY #2

9

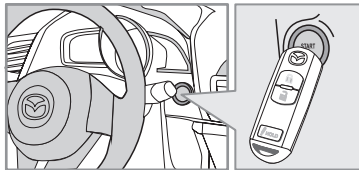


Place the 2nd OEM remote close to the front of the START/STOP button exactly as shown.

10

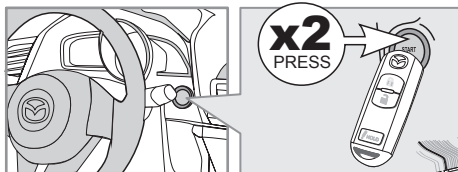

Press the START/STOP button twice to activate the vehicle's Ignition.

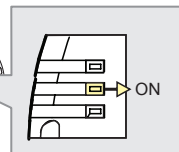


↳ The Yellow LED will turn ON.




KEY BYPASS PROGRAMMING PROCEDURE 3/5

**11**





**KEY#2**

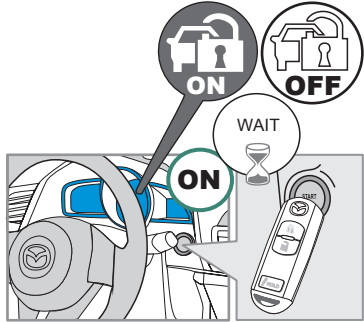

Wait for the **security indicator to turn OFF** (around 3 seconds).

**12**

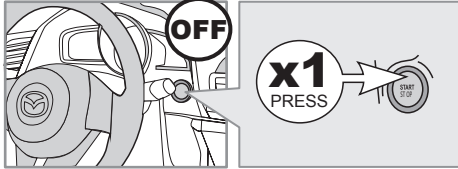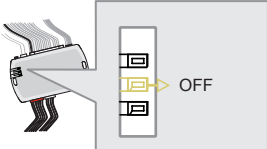



**IMMEDIATELY**


**Press the START/STOP button once** to deactivate the vehicle's Ignition.

↳ The Yellow Led will turn OFF.


**13**

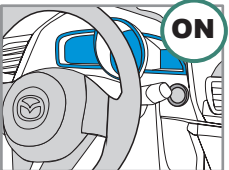

The vehicle's ignition will turn ON

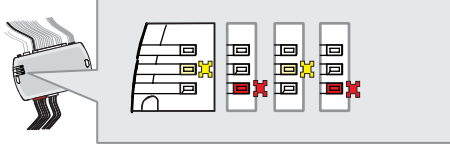



↳ The Yellow and Red LED's will alternatively illuminate.

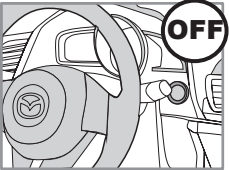

The vehicle's Ignition will turn OFF.

**14**

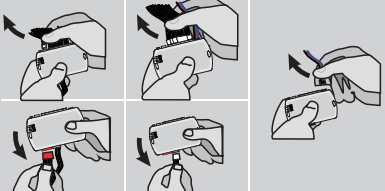


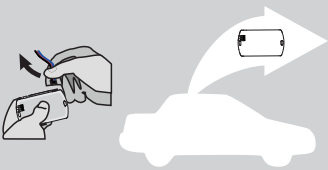

**Disconnect** all the connectors and after the Data-Link (4-pins) connector.

**KEY BYPASS PROGRAMMING PROCEDURE 4/5**

15

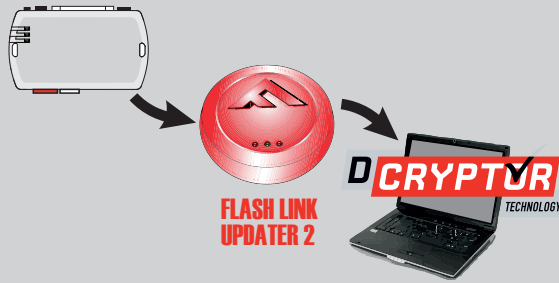

Connect the module to the FLASH LINK UPDATER 2 and visit the DCRYPTOR menu in the Flash-Link Manager.

Parts required (not included)




**FLASH LINK UPDATER 2**

**FLASH LINK MANAGER**  
SOFTWARE | PROGRAMME



Microsoft Windows Computer with Internet connection

16

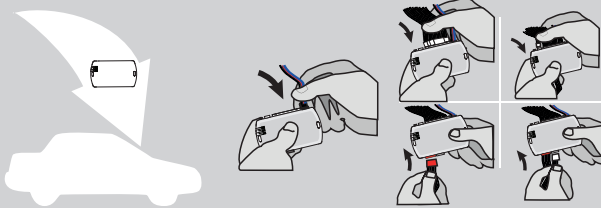


**AFTER DCRYPTOR PROGRAMMING COMPLETED**  
Go back to the vehicle and **reconnect** the 4-Pin (Data-Link) connector and after, all the remaining connector.

17




Repeat step 1 to 12.


18

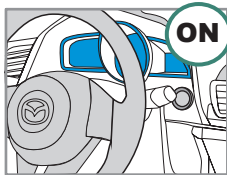

The vehicle's ignition will turn ON

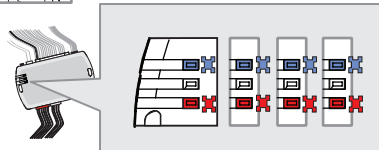


↳ The Blue and Red LEDs will flash.

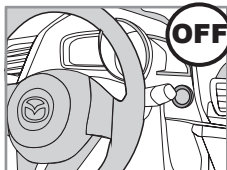


The vehicle's Ignition will turn OFF.

 19



Disconnect all Harness

20

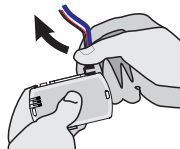

et ensuite:

Disconnect the 4-PIN Data-link harness (Black connector).


KEY BYPASS PROGRAMMING PROCEDURE 5/5

CAN PROGRAMMING PROCEDURE

21

**CAUTION FOR: EVO-ALARM OPTION**


If the module GREEN (A4) wire is connected to the HORN make sure that the option G1 (EVO-ALARM) is enabled before CAN programming.

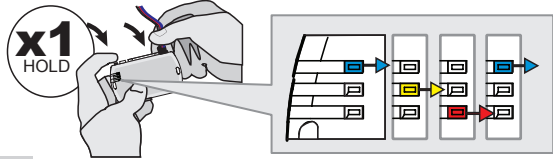

**Press and hold** the programming button:  
**Connect** the 4-PIN Data-link harness (Black connector).


↳ The Blue, Red, Yellow and Blue & Red LEDs will alternatively illuminate.

22

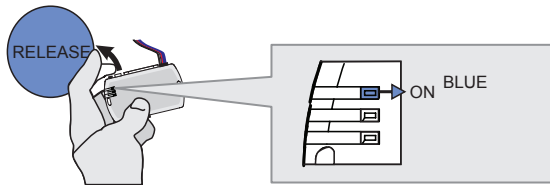


**Release** the programming button when the Blue LED is ON.

 If the Blue LED is not ON solid disconnect the 4-PIN Data-link harness (Black connector).



23

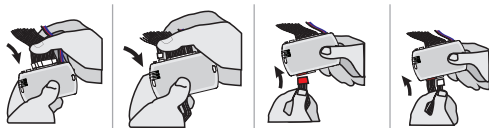


**Connect** the required remaining harnesses.

24



**Press** the START/STOP button twice to activate the vehicle's Ignition.

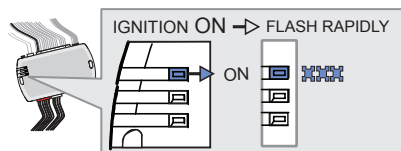


↳ The Blue LED will flash rapidly.

25



**Press** the START/STOP button once to deactivate the vehicle's Ignition.

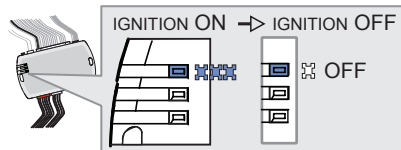

↳ The Blue LED will turn OFF.



The module is now programmed.

REMOTE STARTER FUNCTIONALITY



All doors must be closed.



 
Do not remote-start with the OEM remote inside the vehicle.



Never remote-start with a passenger inside the vehicle.



**Remote start** the vehicle.



*The module will shut down the vehicle as soon as a door is opened.*

**STAND ALONE THAR-MAZ1 THARNESS INSTALLATION - 2 KEYS PROGRAMMING**
**ADDENDUM - SUGGESTED WIRING CONFIGURATION**

**ONLY COMPATIBLE WITH AUTOMATIC TRANSMISSION VEHICLES.**

Vehicle functions supported in this diagram (functional if equipped)

VEHICLE	YEARS	Immobilizer bypass	T-Harness	Lock	Unlock	Arm	Disarm	Tachometer	Door Status	Trunk Status	Hood Status protection remote start	Hand-Brake Status	Foot-Brake Status	OEM Remote monitoring	
<b>MAZDA</b>															
3	Push-to-Start - Sedan / Hatchback - Automatic transmission only Push-to-Start - Sedan / Hatchback - transmission automatique seulement	2014-2018	•	•	•	•	•	•	•	•	•	•	•	•	

	FIRMWARE VERSION	To add the firmware version and the options, use the <b>FLASH LINK UPDATER</b> or <b>FLASH LINK MOBILE</b> tool, sold separately.
	<b>85.[11]</b> MINIMUM	

<b>IF THE VEHICLE IS NOT EQUIPPED WITH FUNCTIONAL HOOD PIN:</b>	<b>A11</b>	<b>OFF NON</b>	Hood trigger (Output Status).
---	------------	--------------------	-------------------------------

	UNIT OPTION	DESCRIPTION
 Program bypass option:	<b>C1</b>	OEM Remote status (Lock/Unlock) monitoring

**NOTES**


**THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.**


**Parts required** (Not included)

1X 10 AMP Fuse

**MANDATORY INSTALL**
**\*HOOD PIN**


**HOOD STATUS:** THE HOOD PIN SWITCH MUST BE INSTALLED IF THE VEHICLE CAN BE REMOTE STARTED WITH THE HOOD OPEN, SET FUNCTION **A11** TO OFF.

**A11**
**OFF**

**Notice:** the installation of safety elements are mandatory. The hood pin is an essential security element and must be installed.

**THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.**

**PARTS REQUIRED (NOT INCLUDED)**

1x **FLASH LINK UPDATER**,  
 1x **FLASH LINK MANAGER**  
SOFTWARE | PROGRAMME  
 1x Microsoft Windows Computer with Internet connection

OR

 
1x **FLASH LINK MOBILE**  
 1x **FLASH LINK MOBILE APP**  
Smartphone Android or iOS with Internet connection (provider charges may apply).

**MANDATORY**

HOOD PIN



REMOTE START SAFETY OVERRIDE SWITCH

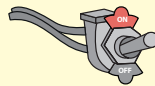

VALET SWITCH

Part #: RSPB available, Sold separately.

**Notice:** the installation of safety elements are mandatory. The hood pin and the valet switch are essential security elements and must be installed.

**STAND ALONE CONFIGURATION**

	Program bypass option	UNIT OPTION	DESCRIPTION
	<b>OEM Remote Stand Alone Remote Starter:</b>	<b>D1.10</b>	<b>By default, LOCK, LOCK, LOCK</b> Par défaut, VERROUILLE,VERROUILLE,VERROUILLE
		<b>D1.1</b>	
	<b>Program bypass option with oem remote:</b>	<b>C1</b>	OEM Remote Monitoring
	<b>Program bypass option with RF KIT antenna:</b>	<b>H1 to H6</b>	Supported RF Kits and <b>select RF Kit</b>

**REMOTE STARTER FUNCTIONALITY**

All doors must be closed.

**3X** Press the OEM remote's Lock button 3x to remote-start (or remote-stop) the vehicle.

The vehicle will START.

**REMOTE STARTER DIAGNOSTICS**

MODULE RED LED	
x2 flash :	Brake ON
x3 flash :	No tach
x4 flash :	Ignition before start
x5 flash :	Hood Open
PARKING LIGHTS	
x4 flash:	FOB in car
x5 flash:	Hood open
x6 flash:	Brake ON
x7 flash:	Door open
x8 flash:	Bad Encryption/ key code

**REMOTE STARTER WARNING CARD**






**CUT THIS WARNING CARD AND STICK IT ON A VISIBLE PLACE:**  
 or use the package RSPB, Sold separately.

**WARNING | ATTENTION**

**REMOTE STARTER**

THE VEHICLE CAN BE STARTED BY EITHER: PRESSING THE LOCK BUTTON ON THE OEM REMOTE 3 TIMES CONSECUTIVELY OR BY A SMARTPHONE. **TURN ON** THE SAFETY SWITCH LOCATED UNDER THE DASHBOARD BEFORE WORKING ON THE VEHICLE.

DESCRIPTION

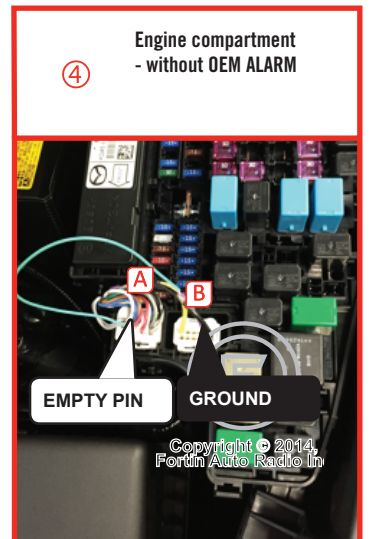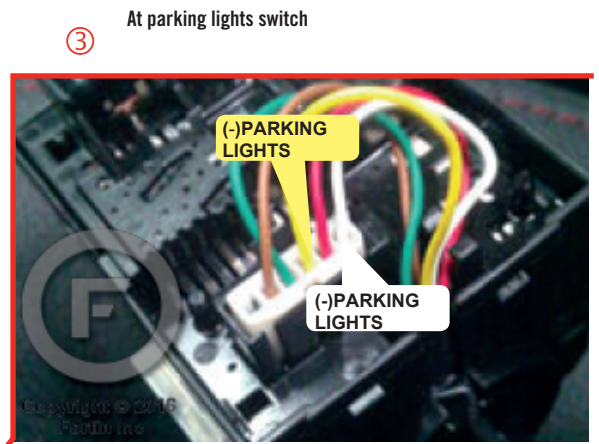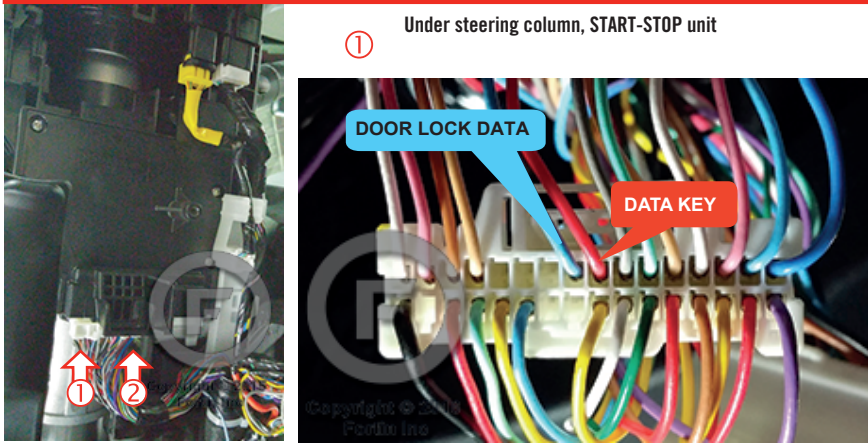




# ATTENTION

Before disconnecting a module, a computer or a control unit from a vehicle: Always disconnect the negative terminal from the vehicle's battery.

In these vehicles, the factory keyless entry module is sensitive to interference and may cease to operate if some precautions are not taken. Disconnect the (-) terminal of the battery prior to disconnecting the connectors at the smartkey module below the steering wheel to avoid damage to the smartkey entry module.


1

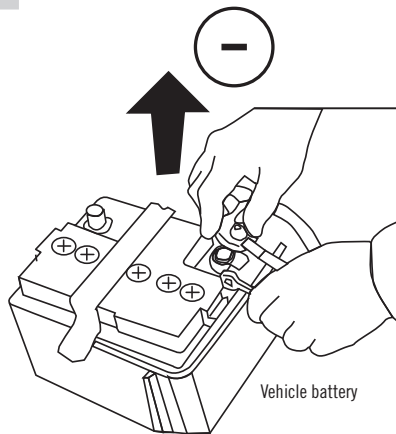

**Disconnect** the (-) terminal of the battery.


**Débranchez** le borne négative de la batterie du véhicule.

2

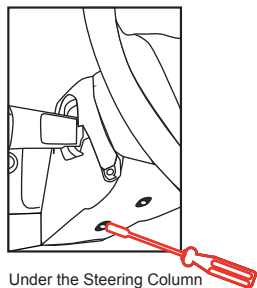


Under the Steering Column

1 Unscrew.

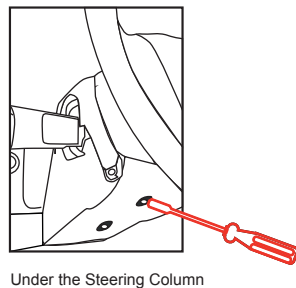


Under the Steering Column

2 Unscrew

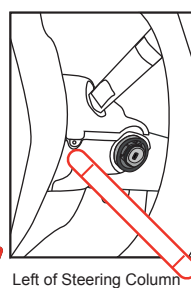


Left of Steering Column

3 Onclip

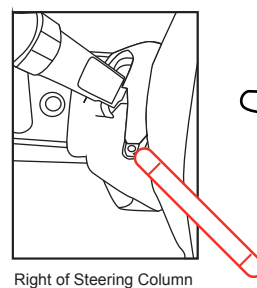

Right of Steering Column

4 Onclip

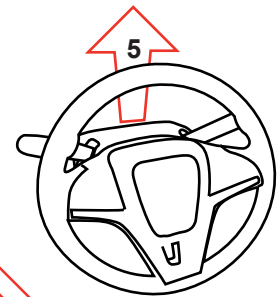

5 Gently pull up the cover of the steering column.


3

**Make** the following connections.


CONTINUED NEXT PAGE



4

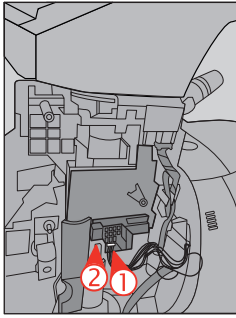

Under steering column, START-STOP unit.

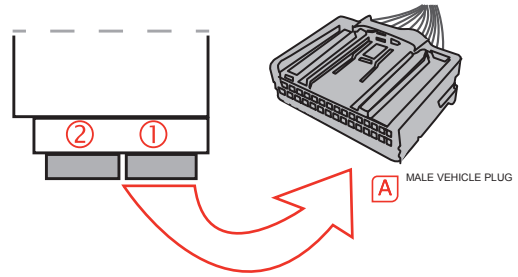


Disconnect the connector

A

5


Under steering column, START-STOP unit.

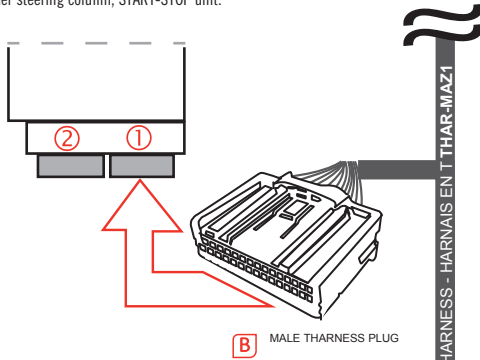

Connect the connector

B

6

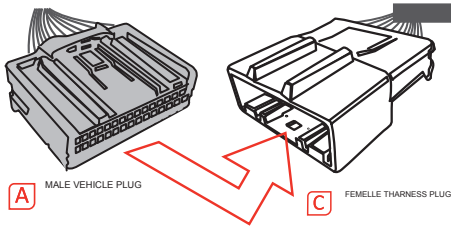

Connect the connector

into connector



A


C

7

Make other required connections.

**AUTOMATIC TRANSMISSION WIRING CONNECTION**

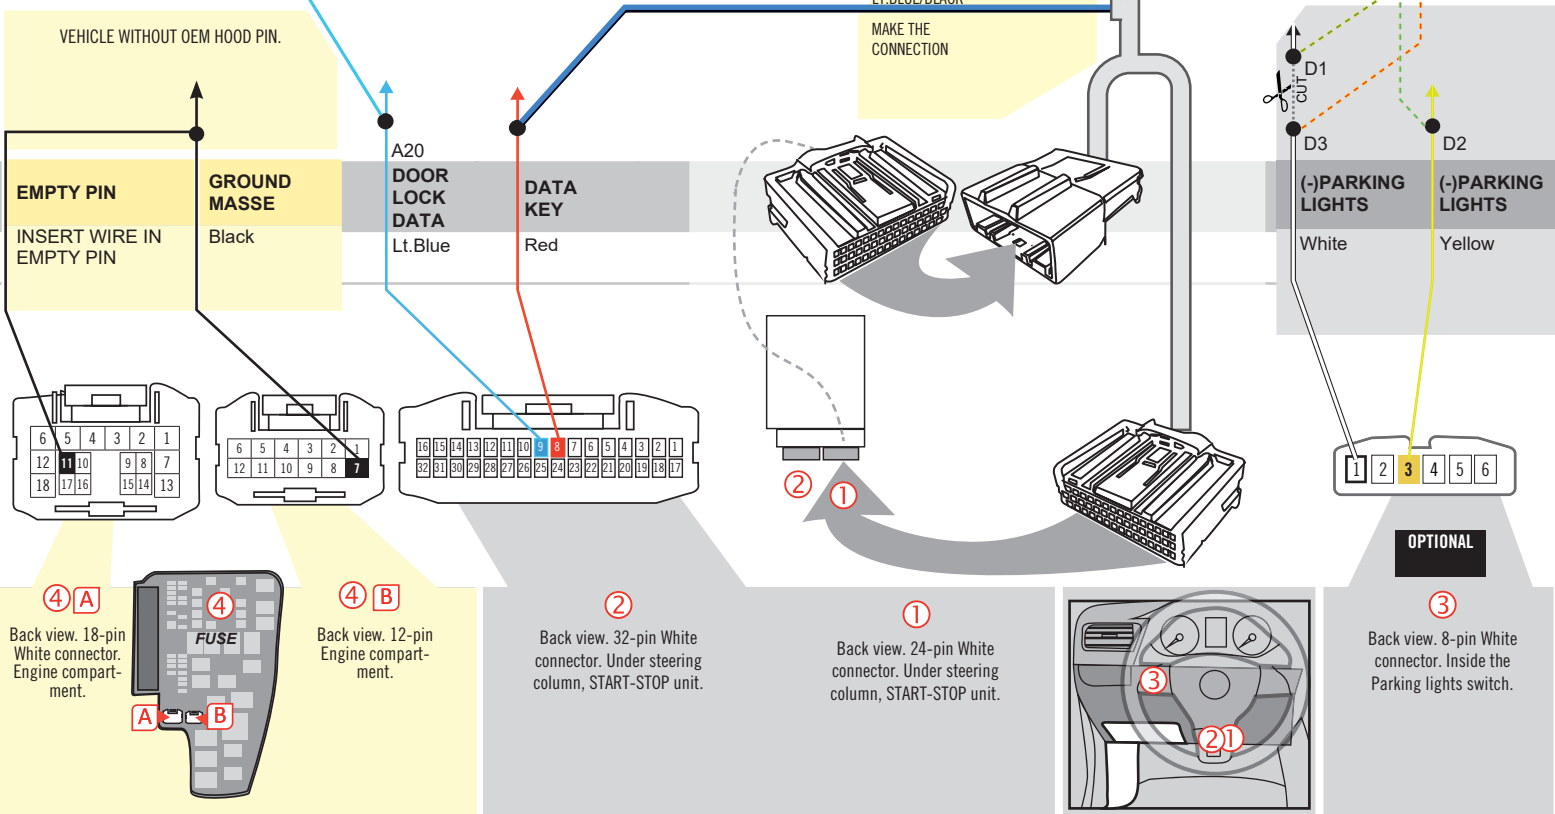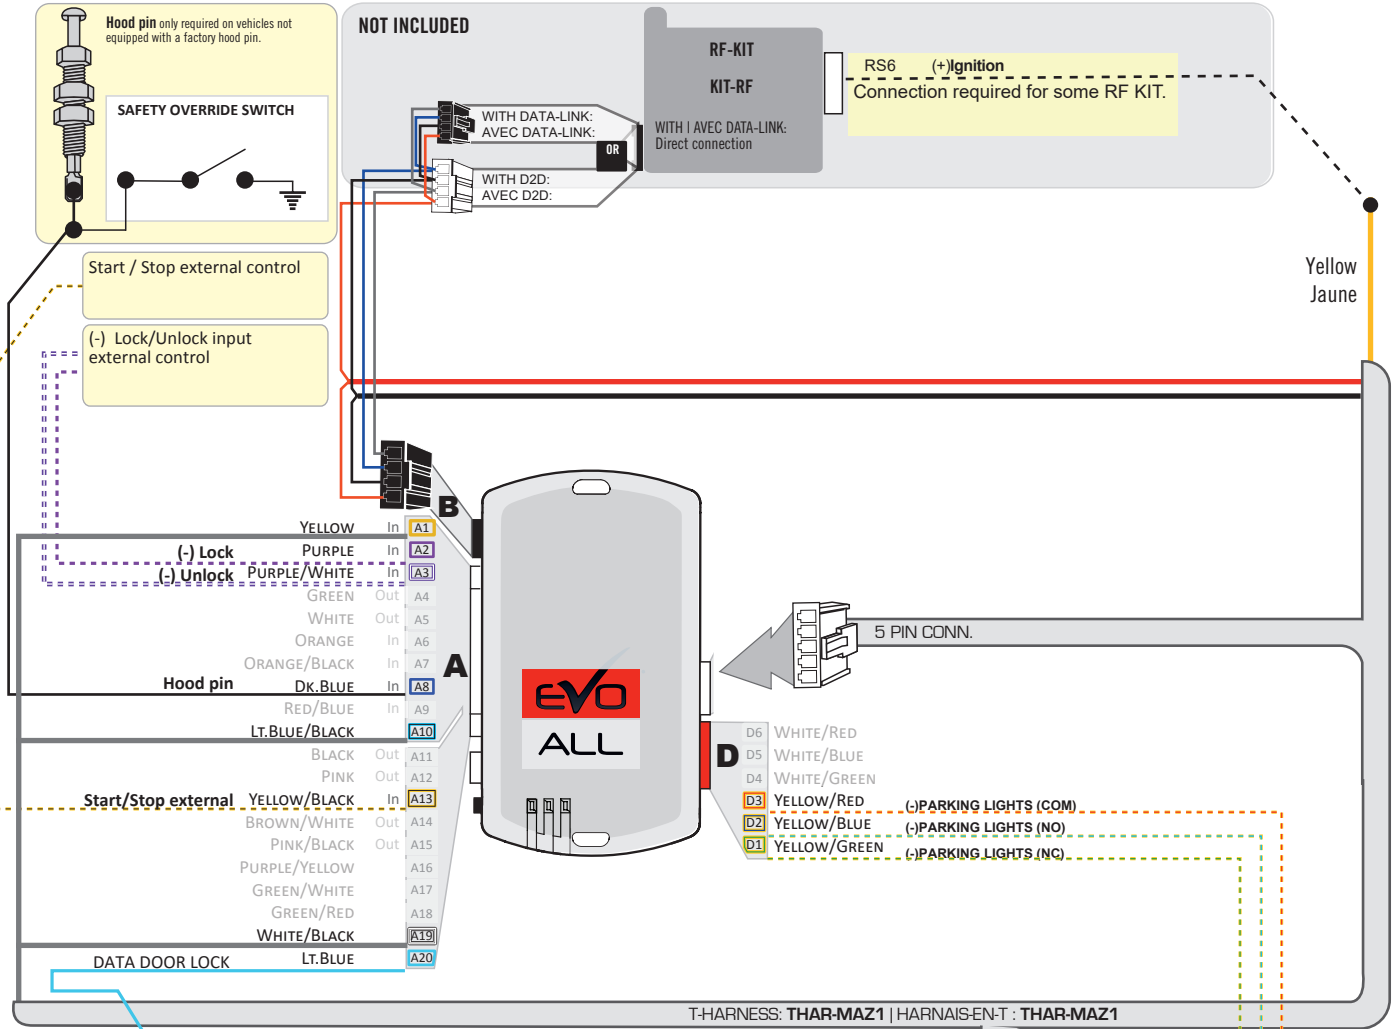

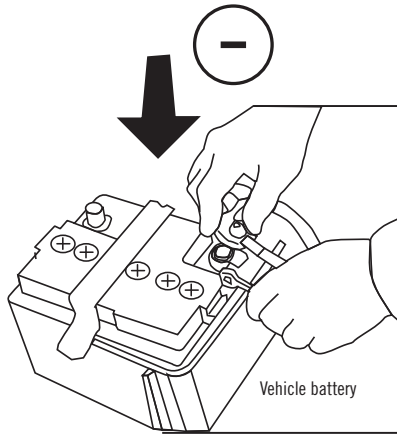

**Reconnect** the (-) terminal of the battery.

CONTINUED NEXT PAGE

# x3 max.


**Do not program more than 3 modules on the same vehicle.**

If more than 3 modules are programmed to a vehicle, it is possible that the remote car starter will never be functional on this vehicle.

If all programming steps were successful and the vehicle cannot be remote started :


- Double check all connections using the installation diagram above as a reference.

If no connection errors can be found then please contact technical support assistance.

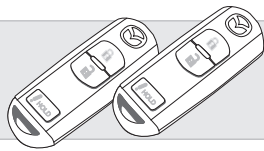

**Make sure** to have two valide vehicle key.


1

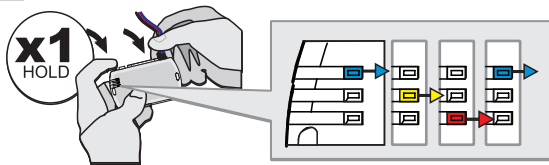

**Press and hold** the programming button:  
**Connect** the 4-PIN Data-link harness (Black connector).


↳ The Blue, Red, Yellow and Blue & Red LEDs will alternatively illuminate.

2

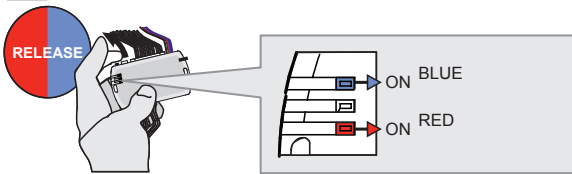


**Release** the programming button when the Blue & Red LEDs are ON.

 *If the LED are not solid BLUE and RED disconnect the 4-PIN Data-link harness (Black connector) and go back to step1.*




3

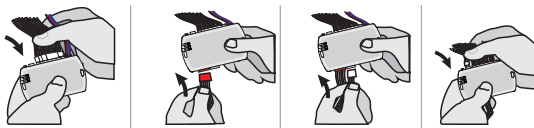

**Connect** the required remaining harnesses.

4

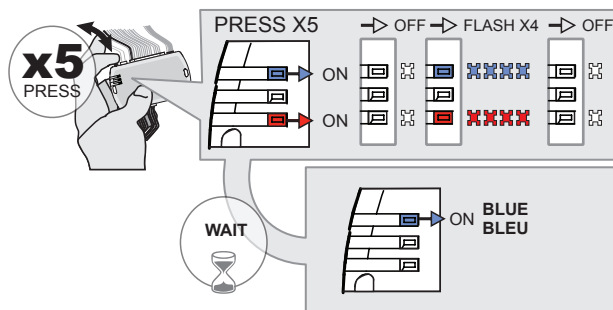

**Press and release** the programming button five times (5x).

↳ The Red & Blue LEDs will alternate between 4 flashes and a pause.


↳ **Wait** for the Blue LED to turn ON.

KEY BYPASS PROGRAMMING PROCEDURE 2/5



KEY #1

5

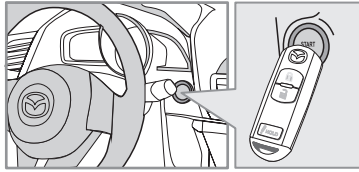


Place the 1st OEM remote close to the front of the START/STOP button exactly as shown.

6




Press the START/STOP button twice to activate the vehicle's Ignition.

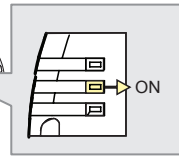


↳ The Yellow LED will turn ON.

7

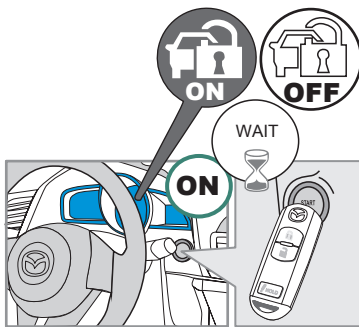

 If the Blue LED is ON solid disconnect the 4-PIN Data-link harness (Black connector) and go back to step 1.




Wait for the security indicator to turn OFF (around 3 seconds).

8

**IMMEDIATELY**



Press the START/STOP button once to deactivate the vehicle's Ignition.

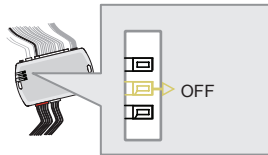


↳ The Yellow Led will turn OFF.



KEY #2

9

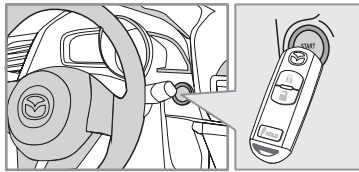


Place the 2nd OEM remote close to the front of the START/STOP button exactly as shown.

10




Press the START/STOP button twice to activate the vehicle's Ignition.

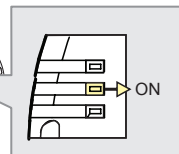


↳ The Yellow LED will turn ON.

KEY BYPASS PROGRAMMING PROCEDURE 3/6

**11**




KEY #2

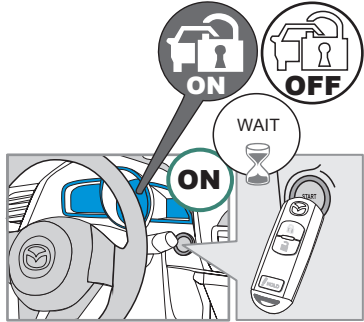

Wait for the security indicator to turn OFF (around 3 seconds).


---

**12**

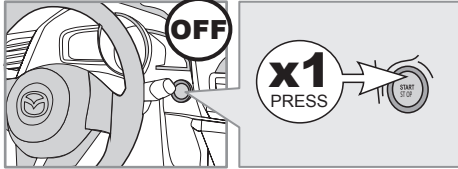


**IMMEDIATELY**

Press the START/STOP button once to deactivate the vehicle's Ignition.

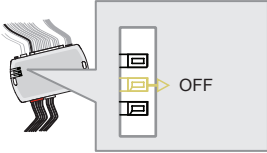


↳ The Yellow Led will turn OFF.


**13**

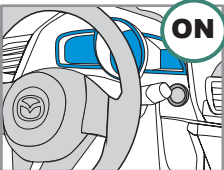

The vehicle's ignition will turn ON

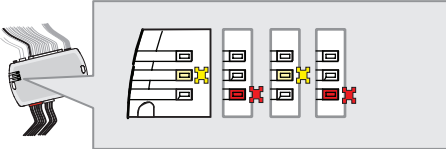



↳ The Yellow and Red LED's will alternatively illuminate.

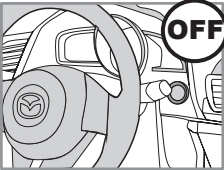

The vehicle's Ignition will turn OFF.

**14**

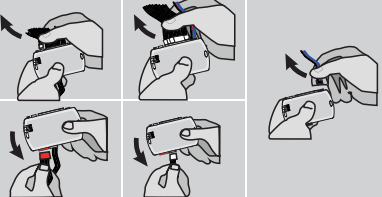


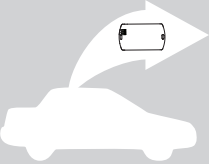


**Disconnect** all the connectors and after the Data-Link (4-pins) connector.

**KEY BYPASS PROGRAMMING PROCEDURE 4/6**

15

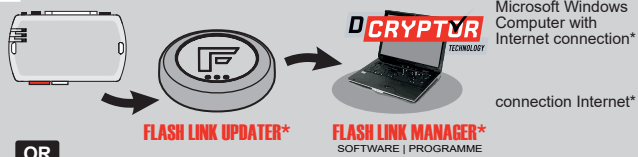


OR

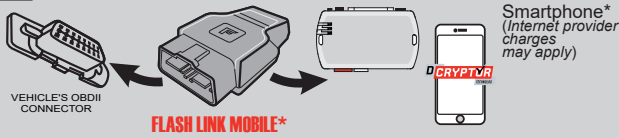

Use the tool: **FLASH LINK UPDATER** or **FLASH LINK MOBILE** to visit the DCRYPTOR menu.

\*Parts required (not included)

16

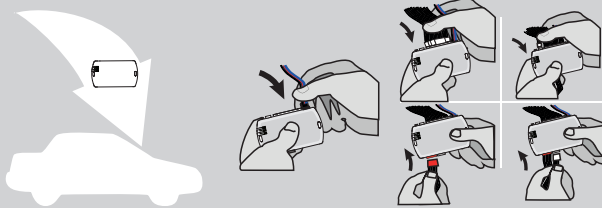


**AFTER DCRYPTOR PROGRAMMING COMPLETED**  
Go back to the vehicle and **reconnect** the 4-Pin (Data-Link) connector and after, all the remaining connector.

17

1 - 12
Repeat step 1 to 12.

18

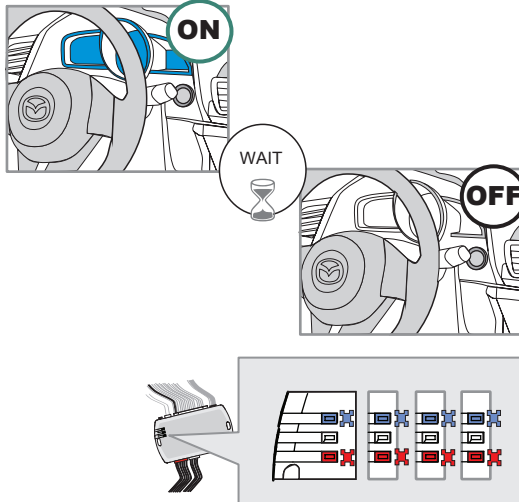


The vehicle's ignition will turn ON

The vehicle's Ignition will turn OFF.


↳ The Blue and Red LEDs will flash.

 19



Disconnect all Harness

20

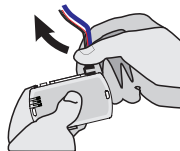


Next:

Disconnect the 4-PIN Data-link harness (Black connector).

CAN PROGRAMMING PROCEDURE


21

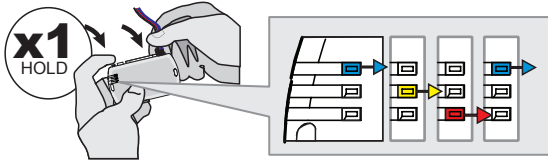

Press and hold the programming button:  
Connect the 4-PIN Data-link harness (Black connector).


↳ The Blue, Red, Yellow and Blue & Red LEDs will alternatively illuminate.

22

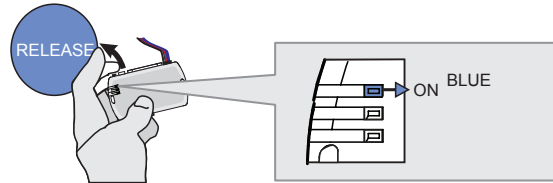


Release the programming button when the Blue LED is ON.

 If the Blue LED is not ON solid disconnect the 4-PIN Data-link harness (Black connector).



23

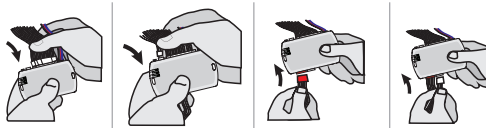


Connect the required remaining harnesses.

24




Press the START/STOP button twice to turn ON the vehicle's Ignition.

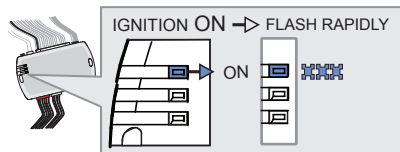


↳ The Blue LED will flash rapidly.

25

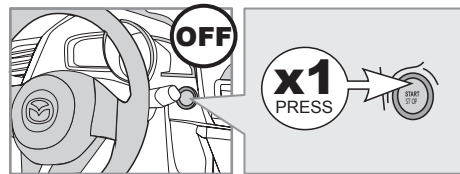

Press the START/STOP button once to turn OFF the vehicle's Ignition.

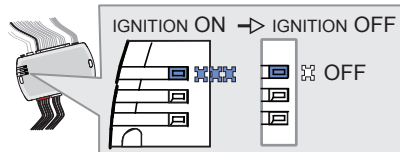


↳ The Blue LED will turn OFF.



The module is now programmed.



REMOTE STARTER FUNCTIONALITY |

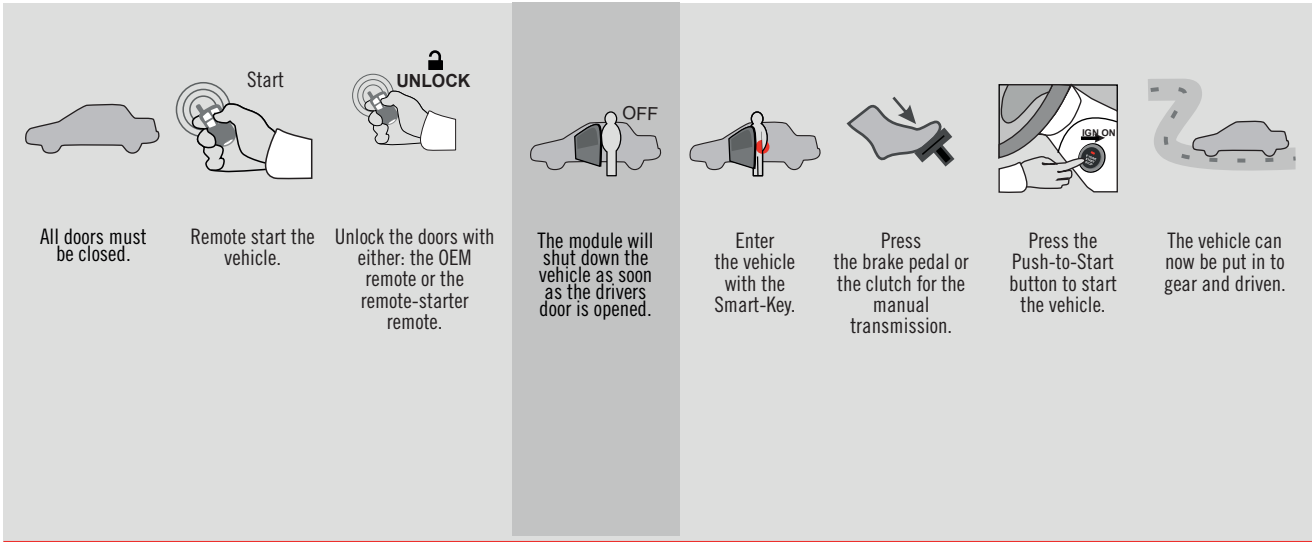

STAND ALONE THAR-MAZ1 THARNESS INSTALLATION - 2 KEYS PROGRAMMING

ADDENDUM - SUGGESTED WIRING CONFIGURATION



**ONLY COMPATIBLE WITH AUTOMATIC TRANSMISSION VEHICLES.**



Vehicle functions supported in this diagram (functional if equipped)

VEHICLE	YEARS	Immobilizer bypass	T-Harness	Lock	Unlock	Arm	Disarm	Tachometer	Door Status	Trunk Status	Hood Status protection remote start	Hand-Brake Status	Foot-Brake Status	OEM Remote monitoring
6	2021	•	•	•	•	•	•	•	•	•	•	•	•	•

*Push-to-Start - Automatic transmission only*



FIRMWARE VERSION

**85.[11]**

MINIMUM

To add the firmware version and the options, use the **FLASH LINK UPDATER** or **FLASH LINK MOBILE** tool, sold separately.

**IF THE VEHICLE IS NOT EQUIPPED WITH FUNCTIONAL HOOD PIN:**

**A11**

**OFF**

Hood trigger (Output Status).



Program bypass option:

UNIT OPTION

DESCRIPTION

**C1**

OEM Remote status (Lock/Unlock) monitoring

**NOTES**



**THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.**



**Parts required** (Not included)

1X 10 AMP Fuse

**MANDATORY INSTALL**

\*HOOD PIN



**HOOD STATUS:** THE HOOD PIN SWITCH MUST BE INSTALLED IF THE VEHICLE CAN BE REMOTE STARTED WITH THE HOOD OPEN, SET FUNCTION **A11** TO OFF.

**A11**

**OFF**

**Notice:** the installation of safety elements are mandatory. The hood pin is an essential security element and must be installed.

**THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.**


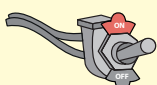
**PARTS REQUIRED (NOT INCLUDED)**

1x **FLASH LINK UPDATER, FLASH LINK MANAGER** SOFTWARE  
 1x Microsoft Windows Computer with Internet connection

OR

1x **FLASH LINK MOBILE, FLASH LINK MOBILE APP**  
 1x Smartphone *Android* or *iOS* with Internet connection (*provider charges may apply*).  
 1x

**MANDATORY**


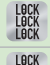



HOOD PIN  REMOTE START SAFETY OVERRIDE SWITCH 

VALET SWITCH


Part #: RSPB available, Sold separately.



**Notice:** the installation of safety elements are mandatory. The hood pin and the valet switch are essential security elements and must be installed.


**STAND ALONE CONFIGURATION**

	Program bypass option	UNIT OPTION	DESCRIPTION
	<b>OEM Remote Stand Alone Remote Starter:</b>	OR <b>D1.10</b>  <b>D1.1</b> 	<b>By default, LOCK, LOCK, LOCK</b> Par défaut, VERROUILLE,VERROUILLE,VERROUILLE
	<b>Program bypass option with oem remote:</b>	<b>C1</b>	OEM Remote Monitoring
	<b>Program bypass option with RF KIT antenna:</b>	<b>H1 to H6</b>	Supported RF Kits and <b>select RF Kit</b>

**REMOTE STARTER FUNCTIONALITY**

 All doors must be closed.

**3X**   Press the OEM remote's Lock button 3x to remote-start (or remote-stop) the vehicle.

 The vehicle will START.

**REMOTE STARTER DIAGNOSTICS**

**MODULE RED LED**

- x2 flash : Brake ON
- x3 flash : No tach
- x4 flash : Ignition before start
- x5 flash : Hood Open

**PARKING LIGHTS**

- x4 flash: FOB in car
- x5 flash: Hood open
- x6 flash: Brake ON
- x7 flash: Door open
- x8 flash: Bad Encryption/ key code

**REMOTE STARTER WARNING CARD**



**CUT THIS WARNING CARD AND STICK IT ON A VISIBLE PLACE:**  
 or use the package RSPB, Sold separately.

**WARNING | ATTENTION**


**REMOTE STARTER**

THE VEHICLE CAN BE STARTED BY EITHER: PRESSING THE LOCK BUTTON ON THE OEM REMOTE 3 TIMES CONSECUTIVELY OR BY A SMARTPHONE. **TURN ON** THE SAFETY SWITCH LOCATED UNDER THE DASHBOARD BEFORE WORKING ON THE VEHICLE.


DESCRIPTION




① Under steering column, START-STOP unit

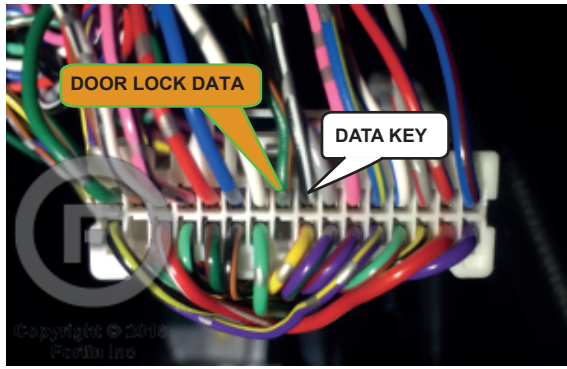


③ At parking lights switch

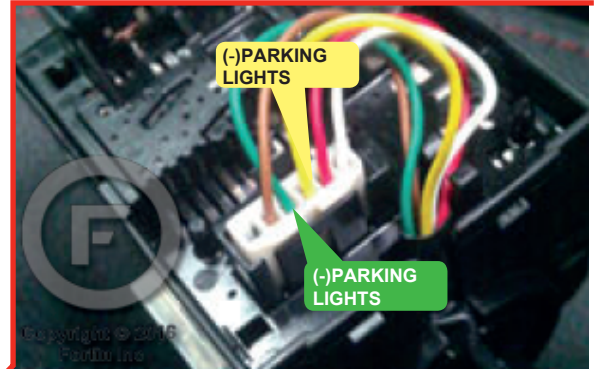

② Under steering column, START-STOP unit

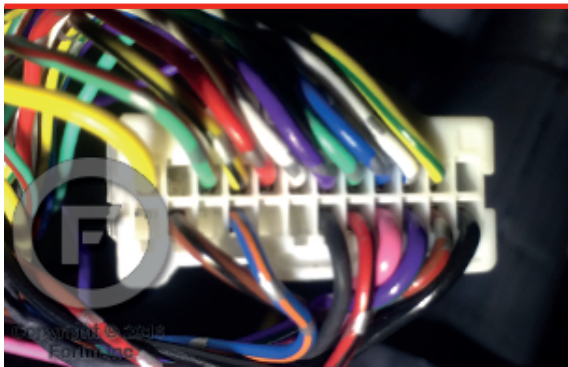

④ Engine compartment - without OEM ALARM

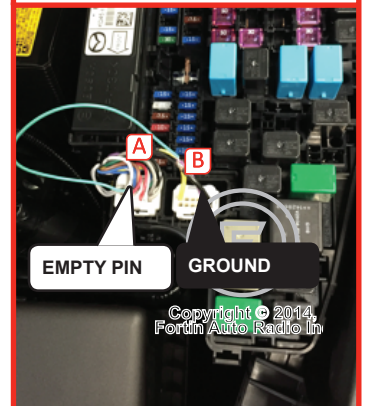




# ATTENTION

Before disconnecting a module, a computer or a control unit from a vehicle: Always disconnect the negative terminal from the vehicle's battery.


In these vehicles, the factory keyless entry module is sensitive to interference and may cease to operate if some precautions are not taken. Disconnect the (-) terminal of the battery prior to disconnecting the connectors at the smartkey module below the steering wheel to avoid damage to the smartkey entry module.

1

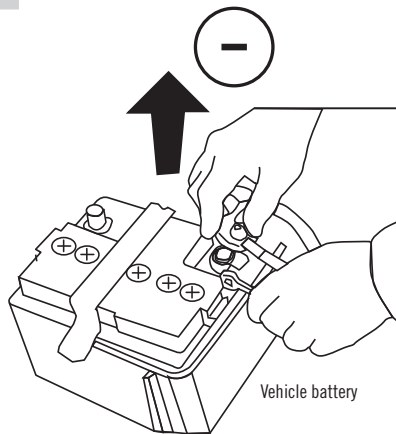


Disconnect the (-) terminal of the battery.

2

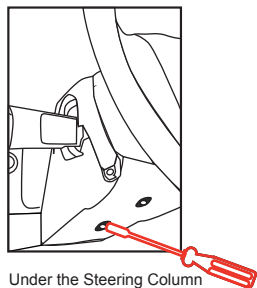


Under the Steering Column

1 Unscrew.

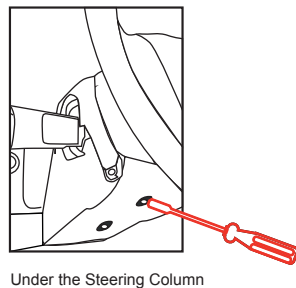


Under the Steering Column

2 Unscrew

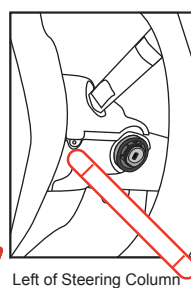


Left of Steering Column

3 Onclip

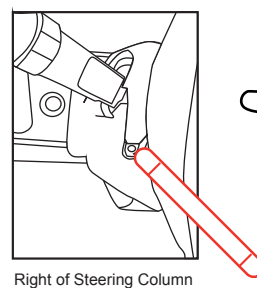

Right of Steering Column

4 Onclip

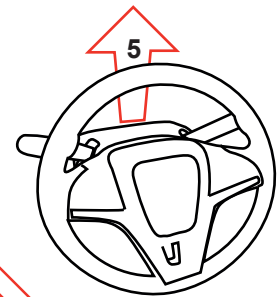


5 Gently pull up the cover of the steering column.

3


Make the following connections.

CONTINUED NEXT PAGE

4

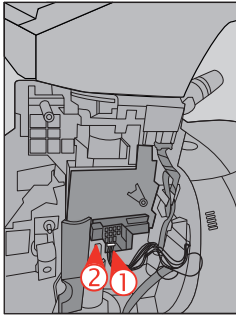

Under steering column, START-STOP unit.

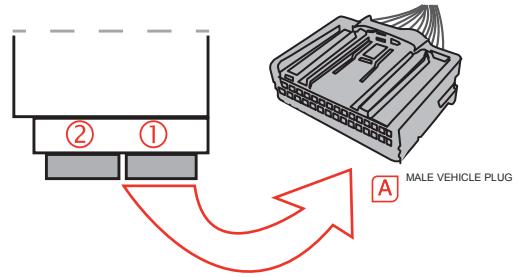


Disconnect the connector

A

5


Under steering column, START-STOP unit.

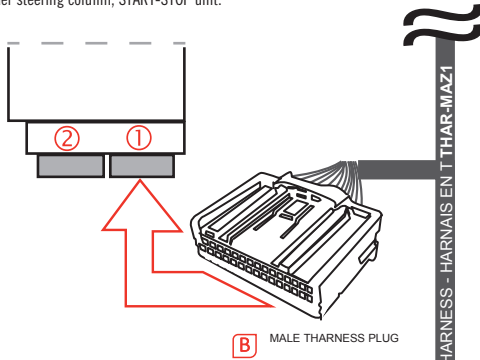

Connect the connector

B

6

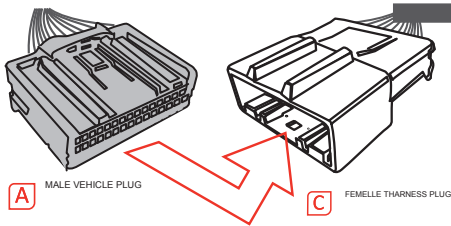

Connect the connector

A



into connector


C

7

Make other required connections.

**AUTOMATIC TRANSMISSION WIRING CONNECTION**

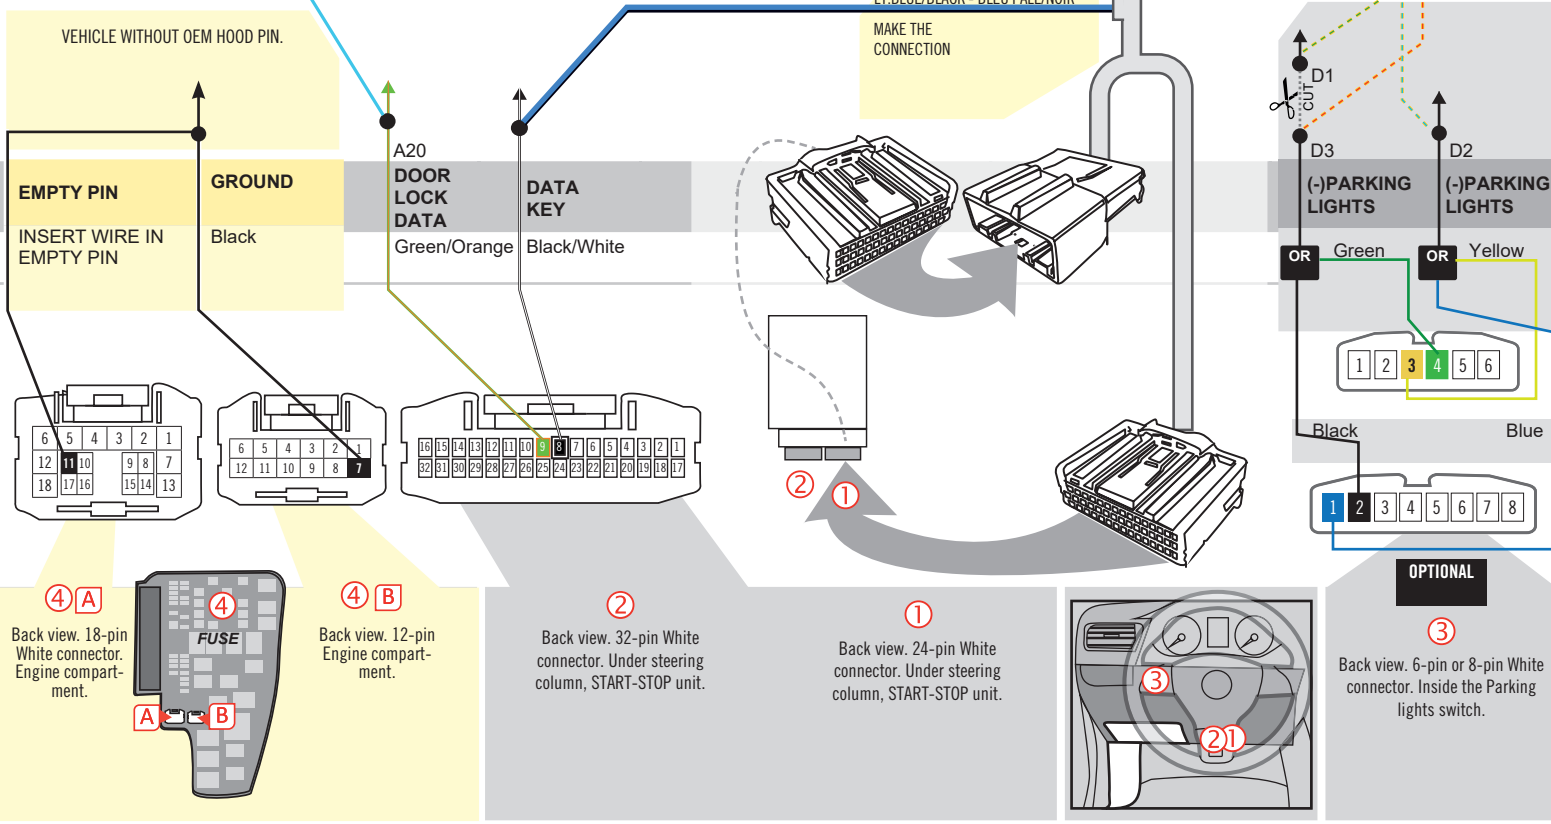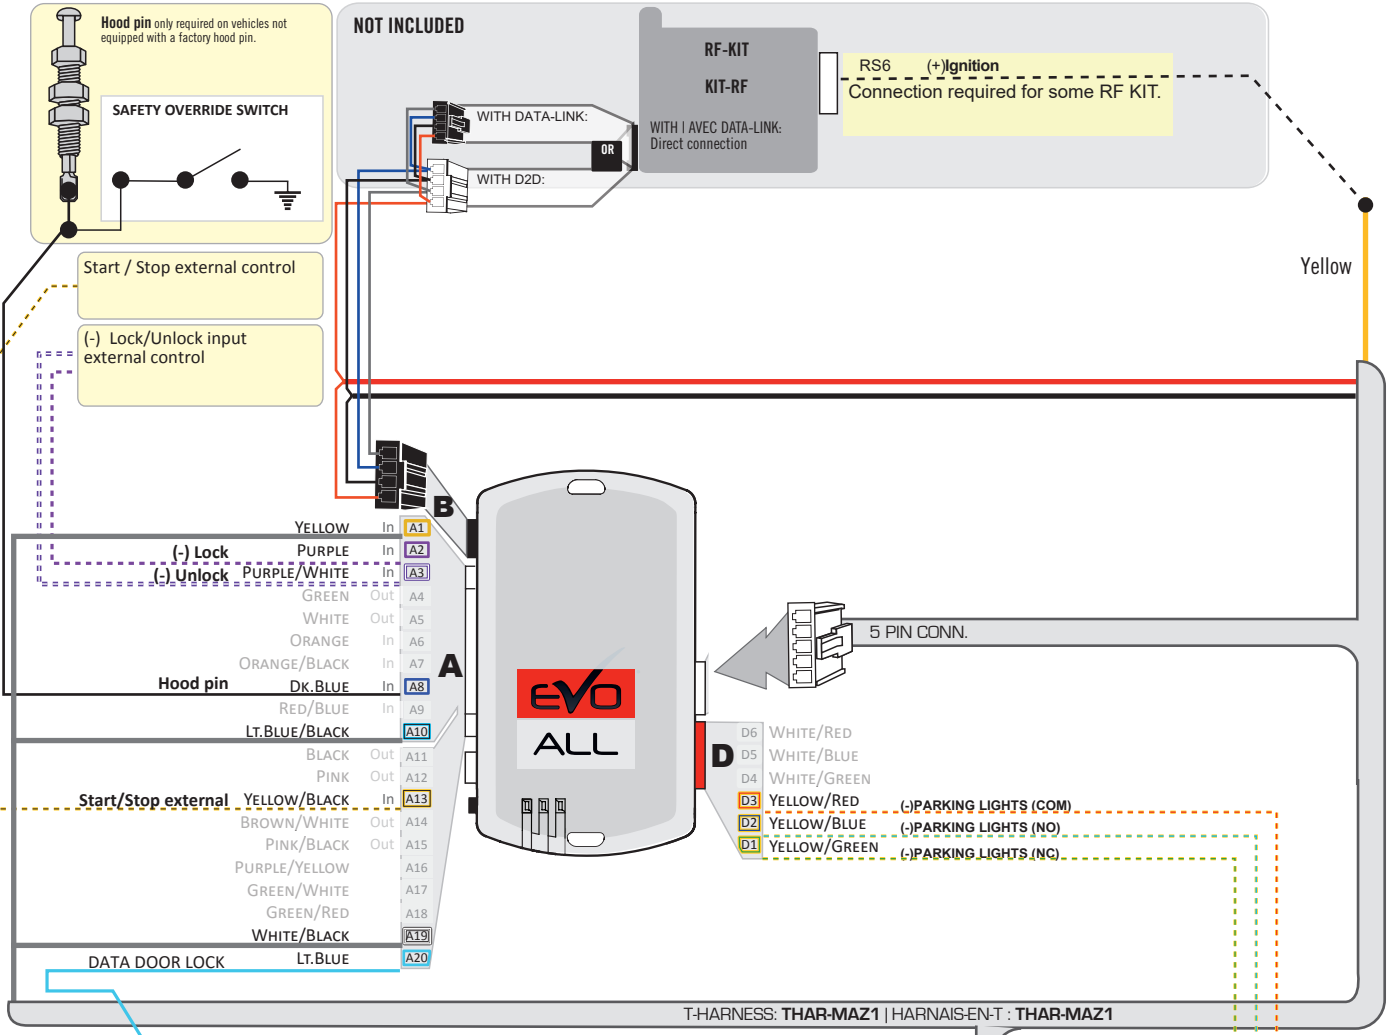

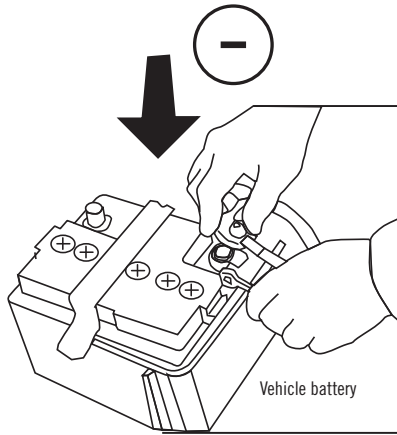

**Reconnect** the (-) terminal of the battery.

CONTINUED NEXT PAGE



# x3 max.

**Do not program more than 3 modules on the same vehicle.**


If more than 3 modules are programmed to a vehicle, it is possible that the remote car starter will never be functional on this vehicle.

If all programming steps were successful and the vehicle cannot be remote started :

- Double check all connections using the installation diagram above as a reference.


If no connection errors can be found then please contact technical support assistance.

**DO NOT REPROGRAM ANOTHER MODULE UNLESS INSTRUCTED TO DO SO BY TECHNICAL SUPPORT.**

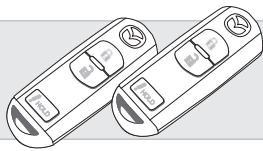

**Make sure** to have two valide vehicle key.


1

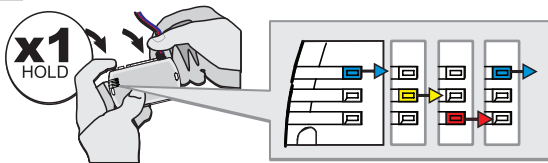

**Press and hold** the programming button:  
**Connect** the 4-PIN Data-link harness (Black connector).


↳ The Blue, Red, Yellow and Blue & Red LEDs will alternatively illuminate.

2

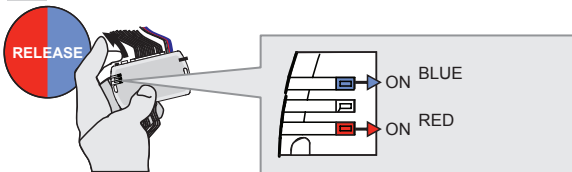


**Release** the programming button when the Blue & Red LEDs are ON.

 *If the LED are not solid BLUE and RED disconnect the 4-PIN Data-link harness (Black connector) and go back to step1.*




3

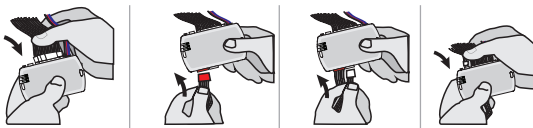

**Connect** the required remaining harnesses.

4

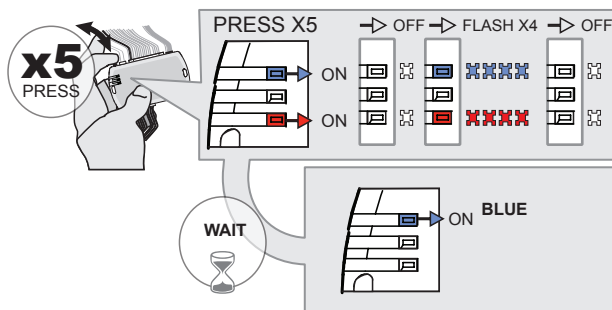

**Press and release** the programming button five times (5x).

↳ The Red & Blue LEDs will alternate between 4 flashes and a pause.


↳ **Wait** for the Blue LED to turn ON.

KEY BYPASS PROGRAMMING PROCEDURE 2/5




KEY #1

5

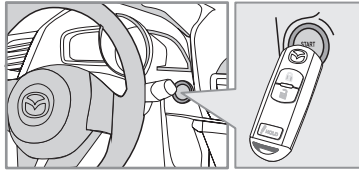


Place the 1st OEM remote close to the front of the START/STOP button exactly as shown.

6

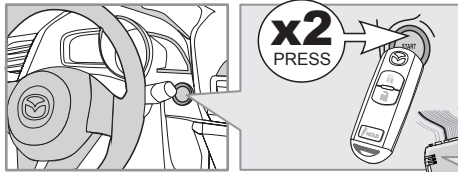


Press the START/STOP button twice to activate the vehicle's Ignition.

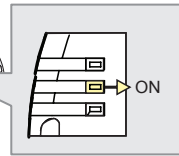


↳ The Yellow LED will turn ON.

7

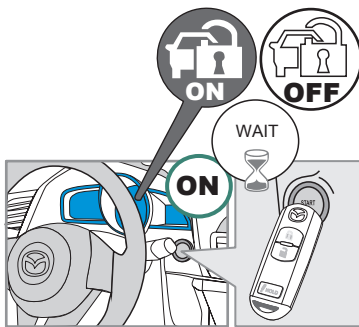


 If the Blue LED is ON solid disconnect the 4-PIN Data-link harness (Black connector) and go back to step 1.




Wait for the security indicator to turn OFF (around 3 seconds).

8

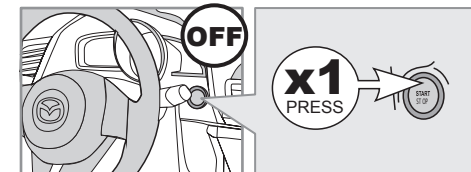

IMMEDIATELY

Press the START/STOP button once to deactivate the vehicle's Ignition.

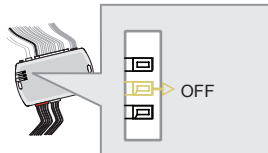


↳ The Yellow Led will turn OFF.



KEY #2

9

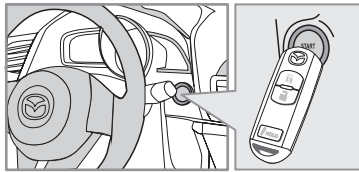


Place the 2nd OEM remote close to the front of the START/STOP button exactly as shown.

10




Press the START/STOP button twice to activate the vehicle's Ignition.

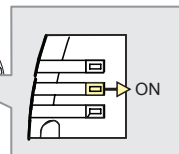


↳ The Yellow LED will turn ON.

KEY BYPASS PROGRAMMING PROCEDURE 3/6

**11**




KEY#2

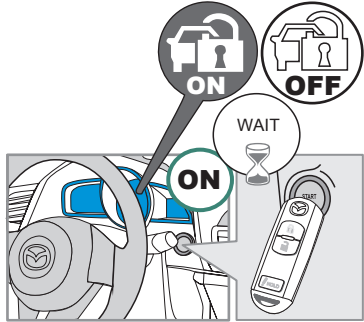


Wait for the security indicator to turn OFF (around 3 seconds).

**12**

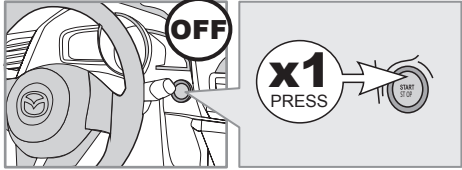


IMMEDIATELY

Press the START/STOP button once to deactivate the vehicle's Ignition.

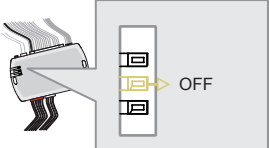


↳ The Yellow Led will turn OFF.


**13**

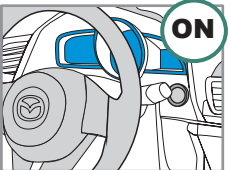

The vehicle's ignition will turn ON

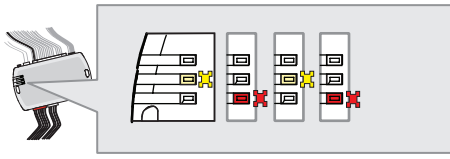



↳ The Yellow and Red LED's will alternatively illuminate.

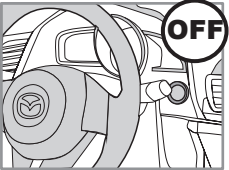

The vehicle's Ignition will turn OFF.

**14**

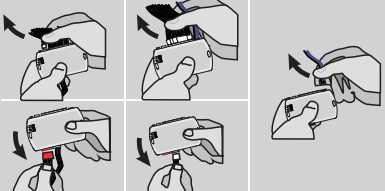


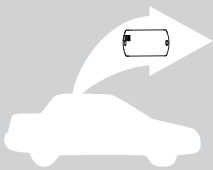

Disconnect all the connectors and after the Data-Link (4-pins) connector.

**KEY BYPASS PROGRAMMING PROCEDURE 4/6**


15

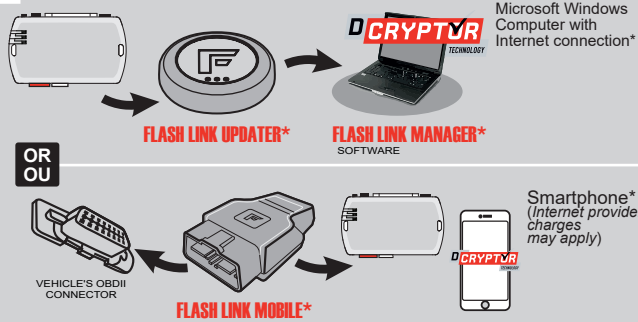

Use the tool:  
**FLASH LINK UPDATER** or  
**FLASH LINK MOBILE**  
to visit the DCryptor menu.

\*Parts required (not included)

16

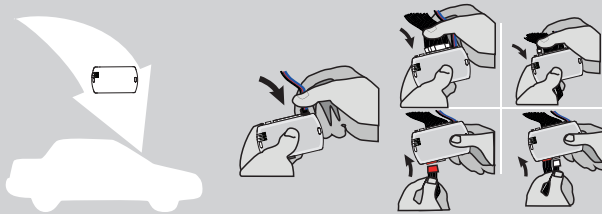


**AFTER DCRYPTOR PROGRAMMING COMPLETED**  
Go back to the vehicle and **reconnect** the 4-Pin (Data-Link) connector and after, all the remaining connector.

17



Repeat step 1 to 12.

18

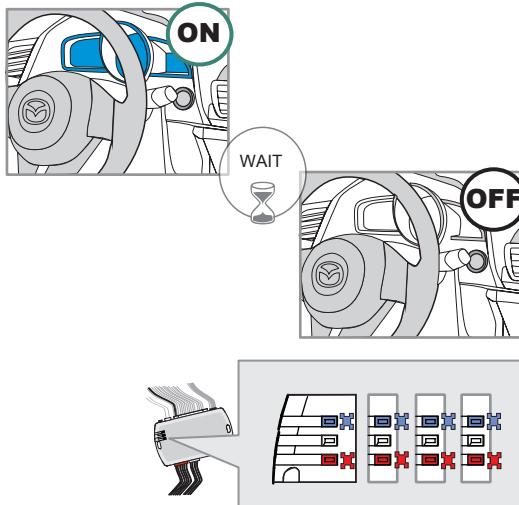


The vehicle's ignition will turn ON

The vehicle's Ignition will turn OFF.


↳ The Blue and Red LEDs will flash.

 19



Disconnect all Harness

20

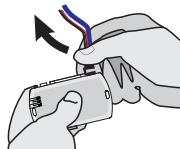


Next:

Disconnect the 4-PIN Data-link harness (Black connector).

CAN PROGRAMMING PROCEDURE


21

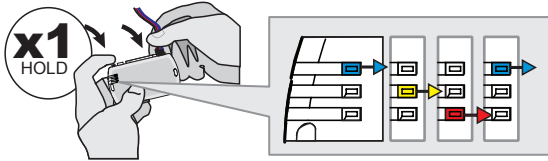

Press and hold the programming button:  
Connect the 4-PIN Data-link harness (Black connector).


↳ The Blue, Red, Yellow and Blue & Red LEDs will alternatively illuminate.

22

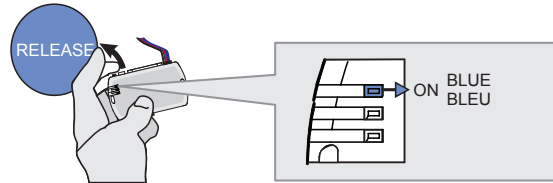


Release the programming button when the Blue LED is ON.

 If the Blue LED is not ON solid disconnect the 4-PIN Data-link harness (Black connector).



23

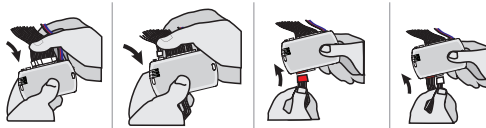


Connect the required remaining harnesses.

24




Press the START/STOP button twice to turn ON the vehicle's Ignition.

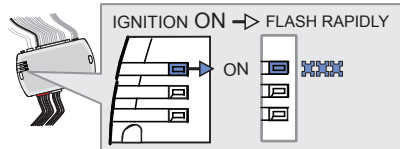


↳ The Blue LED will flash rapidly.

25

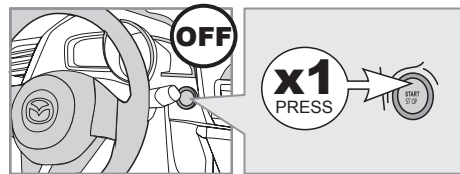

Press the START/STOP button once to turn OFF the vehicle's Ignition.

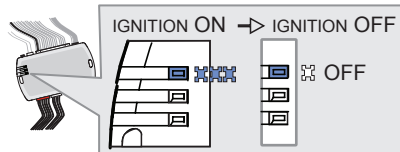


↳ The Blue LED will turn OFF.



The module is now programmed.

REMOTE STARTER FUNCTIONALITY

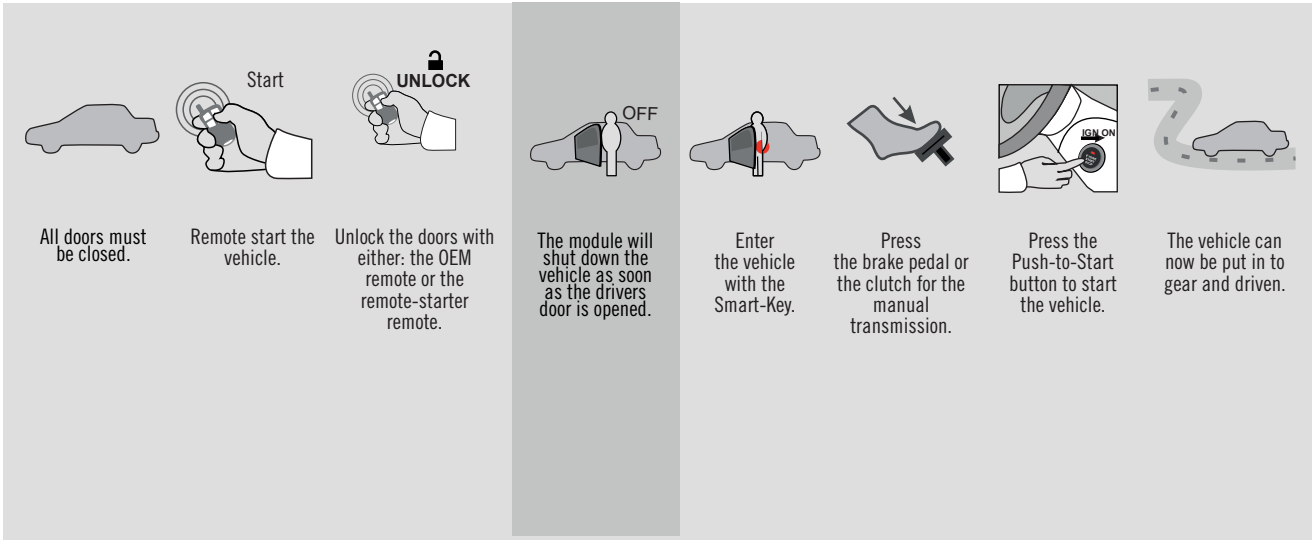

# STAND ALONE CX-3

ADDENDUM - SUGGESTED WIRING CONFIGURATION



ONLY COMPATIBLE WITH AUTOMATIC TRANSMISSION VEHICLES.



Vehicle functions supported in this diagram (functional if equipped)

VEHICLE

YEARS

**MAZDA**

VEHICLE	YEARS	Immobilizer bypass	Lock	Unlock	Parking lights	Tachometer	Door Status	Trunk Status	Hand-Brake Status	Foot-Brake Status	OEM Remote monitoring
<b>MAZDA</b>											
CX-3	Push-to-Start - Automatic transmission 2016	•	•	•	•	•	•	•	•	•	•



HARDWARE VERSION

FIRMWARE VERSION

MINIMUM **6**

**71.[35]**

FORD MINIMUM



**Parts required** (Not included)

1X 1K Ohm Resistor

**FLASH LINK MANAGER**

Software version 3.52 and more



**FLASH LINK UPDATER 2**

1X



Microsoft Windows Computer & Internet connection



**PARTS REQUIRED (NOT INCLUDED) |**



**FLASH LINK UPDATER 2**

**FLASH LINK MANAGER**  
SOFTWARE | PROGRAMME




Microsoft Windows Computer  
(Internet connection required)




**MANDATORY**

HOOD PIN



REMOTE START SAFETY OVERRIDE SWITCH

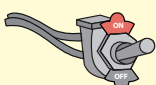




VALET SWITCH


Part #: RSPB available, Sold separately.

**Notice:** the installation of safety elements are mandatory. The hood pin and the valet switch are essential security elements and must be installed.

**STAND ALONE CONFIGURATION**


		UNIT OPTION	DESCRIPTION
	<b>Program bypass option:</b>	<b>D1</b>	OEM Remote Stand Alone Remote Starter
	<b>Program bypass option with oem remote:</b>	<b>C1</b>	OEM Remote Monitoring
	<b>Program bypass option with RF KIT antenna:</b>	<b>H1 to H6</b>	Supported RF Kits and select RF Kit

**REMOTE STARTER FUNCTIONNALITY**




All doors must be closed.

**3X**




Press the OEM remote's Lock button 3x to remote-start (or remote-stop) the vehicle.



The vehicle will START.

REMOTE STARTER DIAGNOSTICS	
MODULE RED LED I	
x2 flash :	Brake ON
x3 flash :	No tach
x4 flash :	Ignition before start
x5 flash :	Hood Open
PARKING LIGHTS	
x4 flash :	FOB in car
x5 flash :	Hood open
x6 flash :	Brake ON
x7 flash :	Door open
x8 flash :	Bad Encryption/ key code

**REMOTE STARTER WARNING CARD**



**CUT THIS WARNING CARD AND STICK IT ON A VISIBLE PLACE:**  
or use the package RSPB, Sold separately.

**WARNING | ATTENTION**




**REMOTE STARTER**

THE VEHICLE CAN BE STARTED BY EITHER: PRESSING THE LOCK BUTTON ON THE OEM REMOTE 3 TIMES CONSECUTIVELY OR BY A SMARTPHONE. **TURN ON** THE SAFETY SWITCH LOCATED UNDER THE DASHBOARD BEFORE WORKING ON THE VEHICLE.




DESCRIPTION



① Under steering column, START-STOP unit

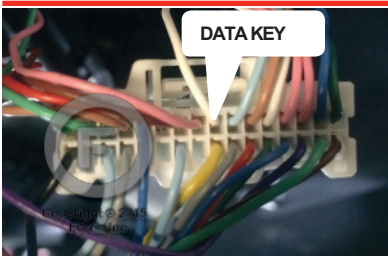


③ At parking lights switch

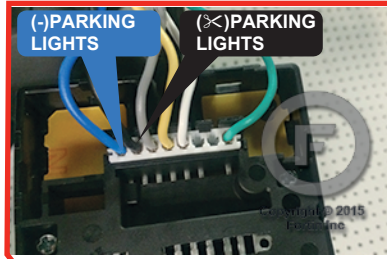


⑤ BCM High connector above driver kick panel

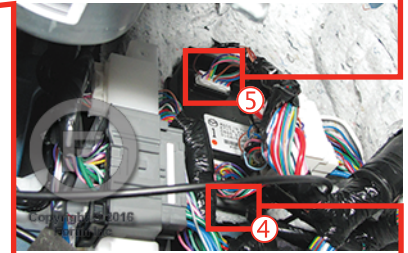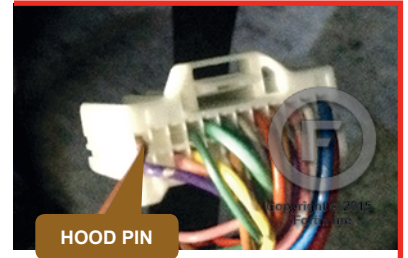

④ BCM High connector above driver kick panel

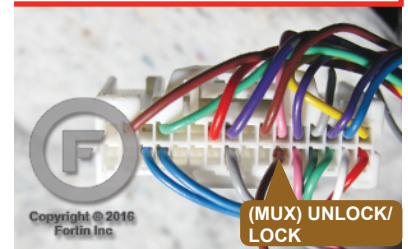

**AUTOMATIC TRANSMISSION WIRING CONNECTION**

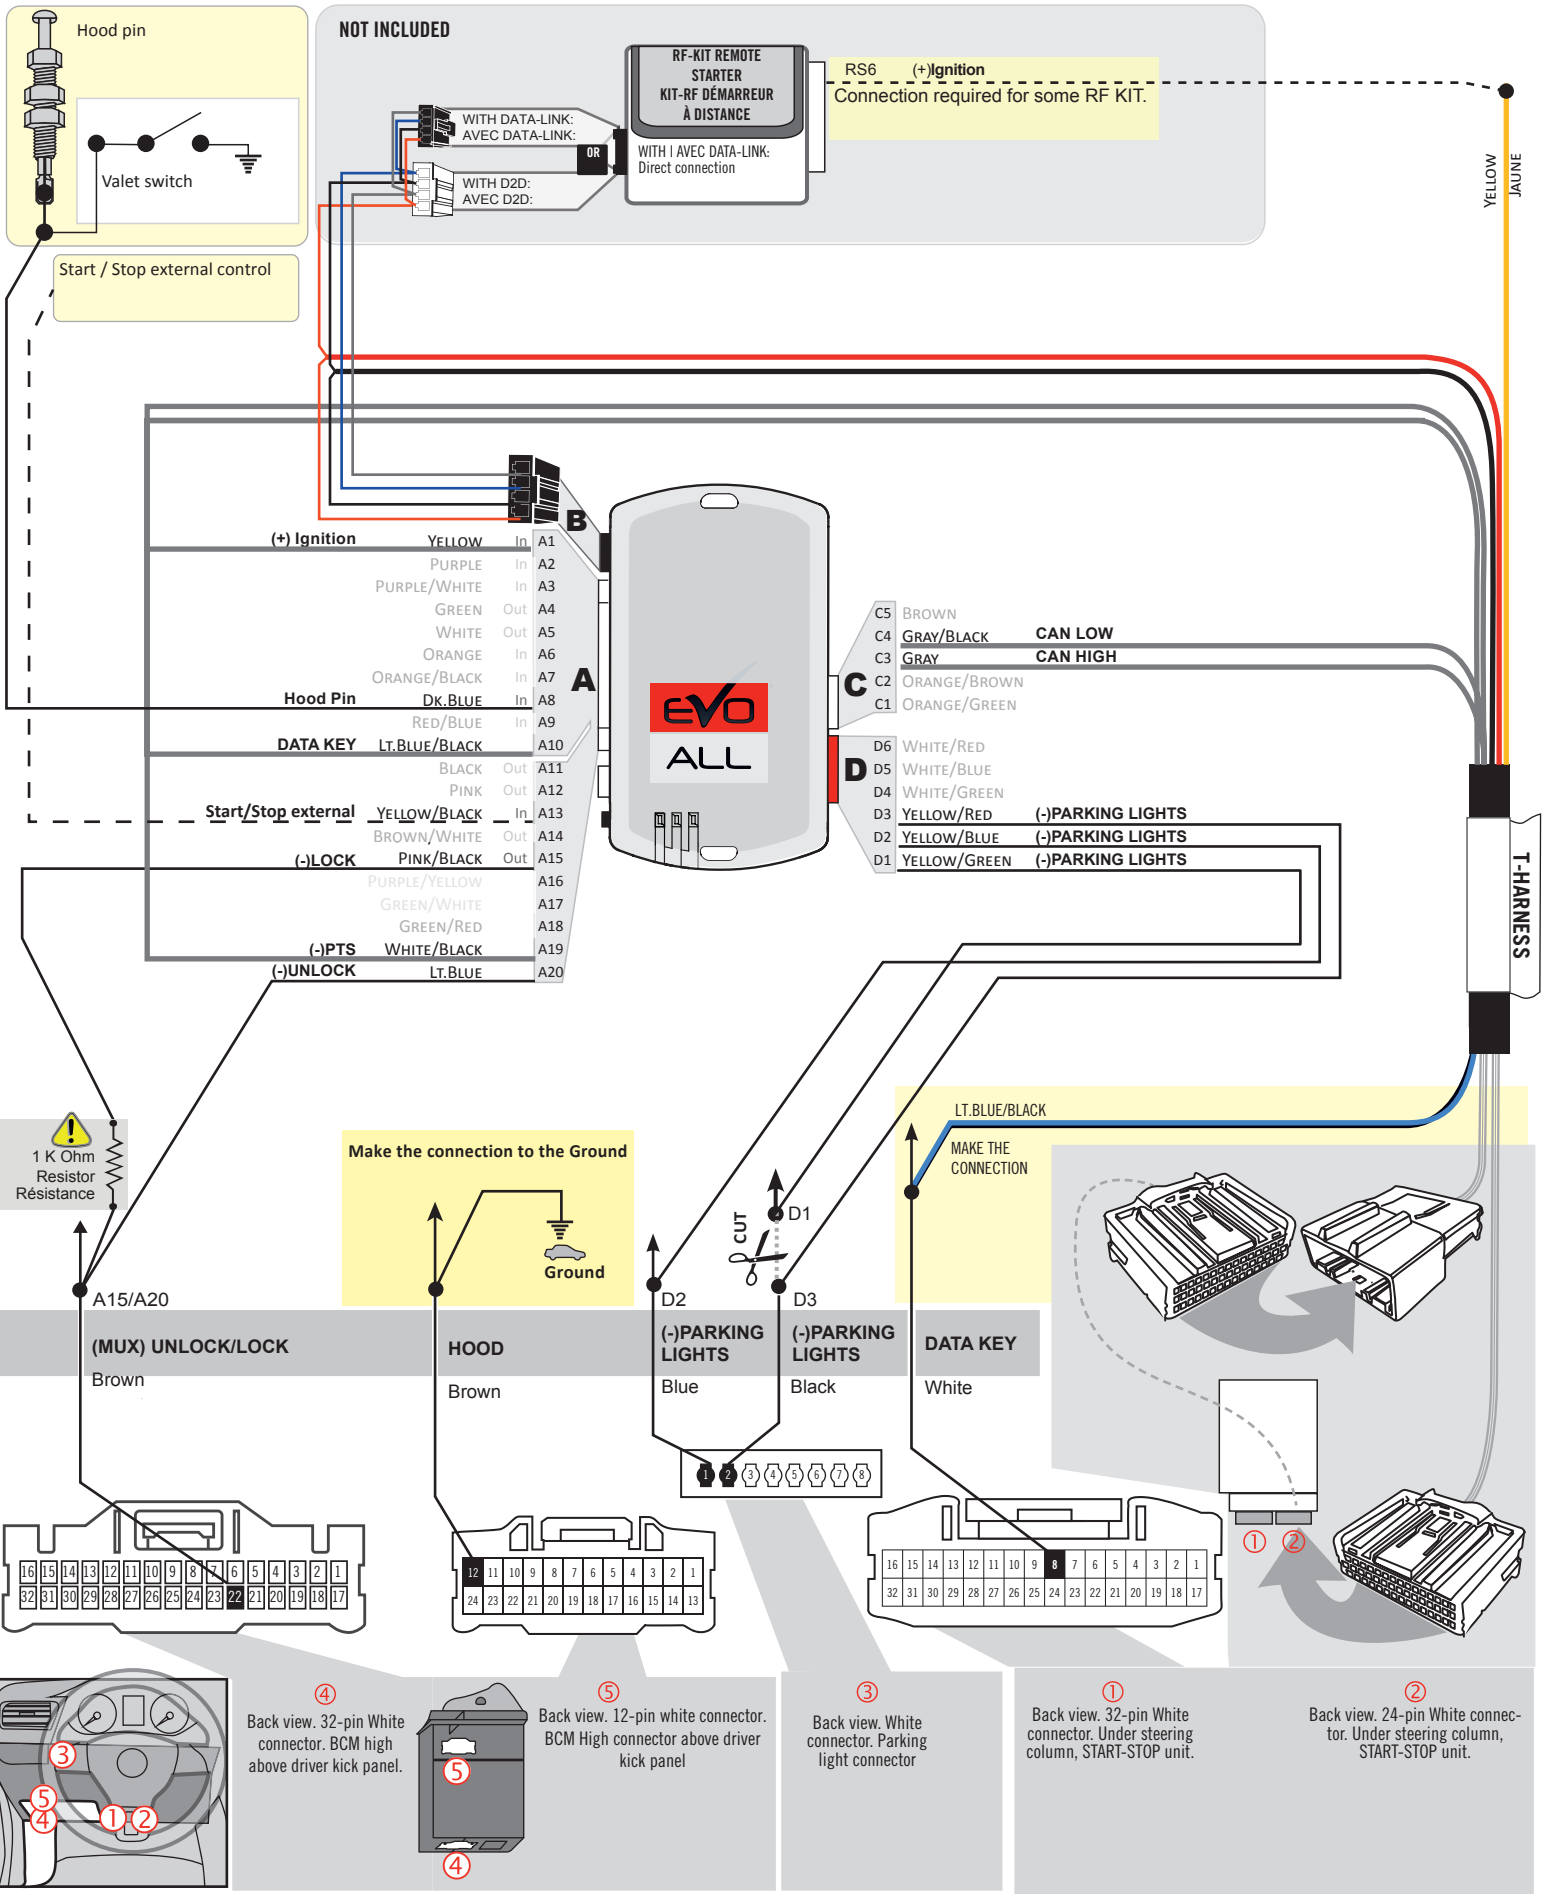

# x3 max.


**Do not program more than 3 modules on the same vehicle.**

If more than 3 modules are programmed to a vehicle, it is possible that the remote car starter will never be functional on this vehicle.

If all programming steps were successful and the vehicle cannot be remote started :


- Double check all connections using the installation diagram above as a reference.

If no connection errors can be found then please contact technical support assistance.

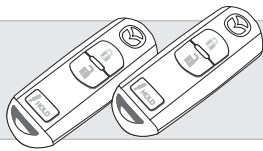

**Make sure** to have two valide vehicle key.


1

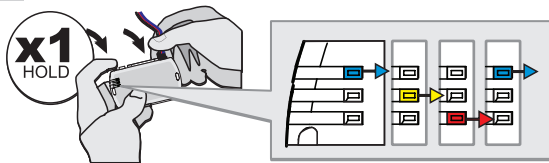

**Press and hold** the programming button:  
**Connect** the 4-PIN Data-link harness (Black connector).


↳ The Blue, Red, Yellow and Blue & Red LEDs will alternatively illuminate.

2

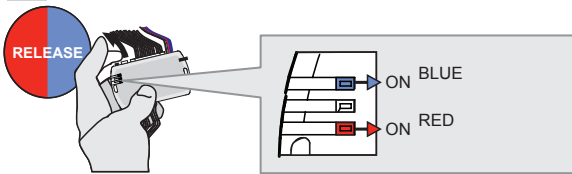


**Release** the programming button when the Blue & Red LEDs are ON.

 *If the LED are not solid BLUE and RED disconnect the 4-PIN Data-link harness (Black connector) and go back to step1.*




3

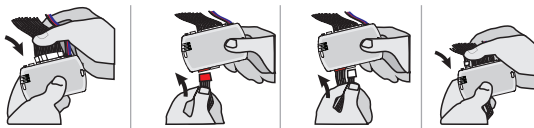

**Connect** the required remaining harnesses.

4

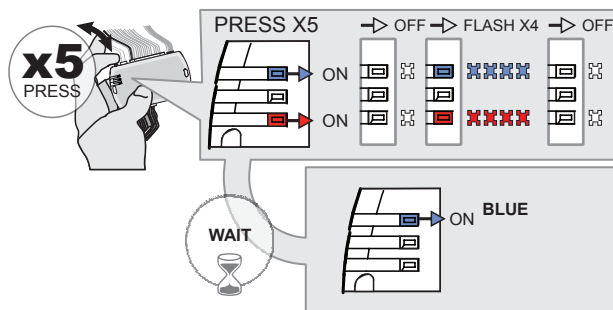

**Press and release** the programming button five times (5x).


↳ The Red & Blue LEDs will alternate between 4 flashes and a pause.

↳ **Wait** for the Blue LED to turn ON.

KEY BYPASS PROGRAMMING PROCEDURE 2/5




5

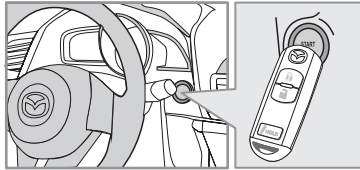


Place the 1st OEM remote close to the front of the START/STOP button exactly as shown.

6

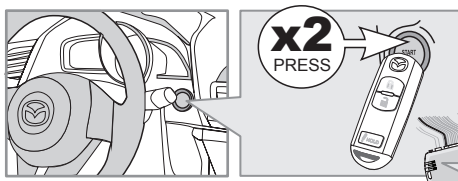


Press the START/STOP button twice to activate the vehicle's Ignition.

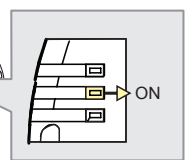


↳ The Yellow LED will turn ON.

7

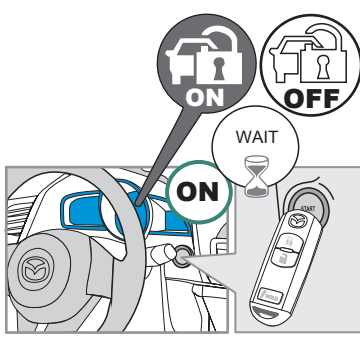


 If the Blue LED is ON solid disconnect the 4-PIN Data-link harness (Black connector) and go back to step 1.




Wait for the security indicator to turn OFF (around 3 seconds).

8

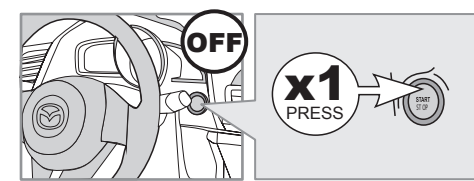

**IMMEDIATELY**


Press the START/STOP button once to deactivate the vehicle's Ignition.

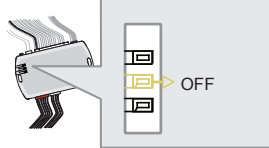

↳ The Yellow Led will turn OFF.




9

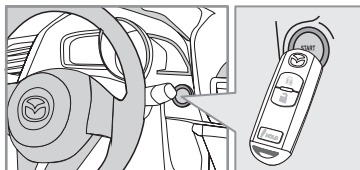


Place the 2nd OEM remote close to the front of the START/STOP button exactly as shown.

10

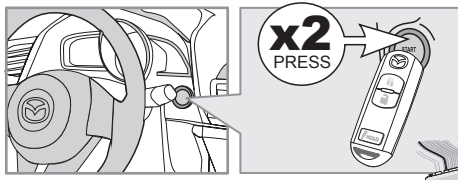


Press the START/STOP button twice to activate the vehicle's Ignition.

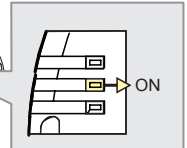


↳ The Yellow LED will turn ON.

KEY BYPASS PROGRAMMING PROCEDURE 3/5

**11**




KEY#2

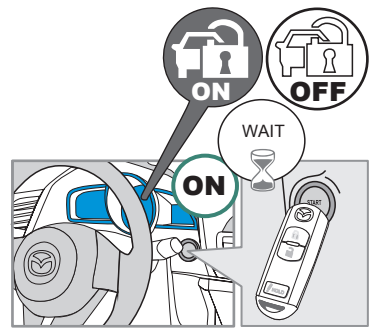


Wait for the security indicator to turn OFF (around 3 seconds).

**12**




**IMMEDIATELY**

Press the START/STOP button once to deactivate the vehicle's Ignition.

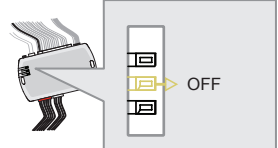


↳ The Yellow Led will turn OFF.


**13**

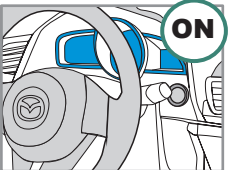

The vehicle's ignition will turn ON

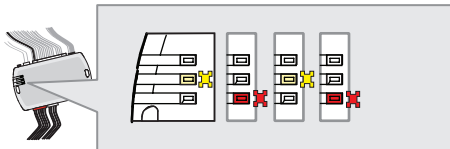



↳ The Yellow and Red LED's will alternatively illuminate.

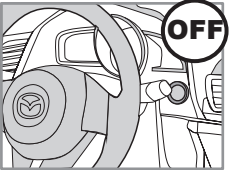

The vehicle's Ignition will turn OFF.

**14**

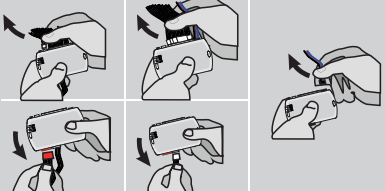


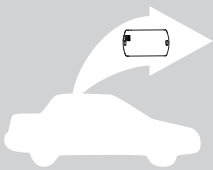

**Disconnect** all the connectors and after the Data-Link (4-pins) connector.

KEY BYPASS PROGRAMMING PROCEDURE 4/5

15

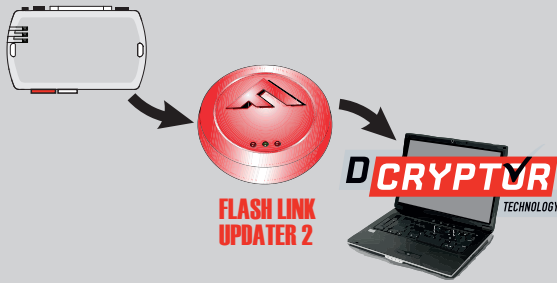

Connect the module to the FLASH LINK UPDATER 2 and visit the DCRYPTOR menu in the Flash-Link Manager.

Parts required (not included)




**FLASH LINK UPDATER 2**

**FLASH LINK MANAGER**  
SOFTWARE | PROGRAMME



Microsoft Windows Computer with Internet connection

16

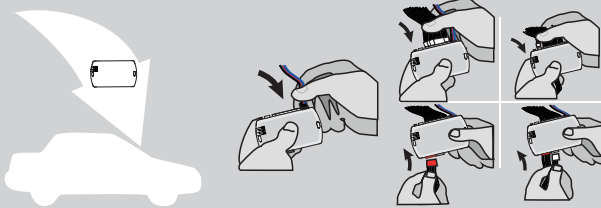

**AFTER DCRYPTOR PROGRAMMING COMPLETED**  
Go back to the vehicle and **reconnect** the 4-Pin (Data-Link) connector and after, all the remaining connector.


17




**1 - 12**

Repeat step 1 to 12.


18

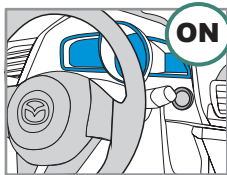

The vehicle's ignition will turn ON

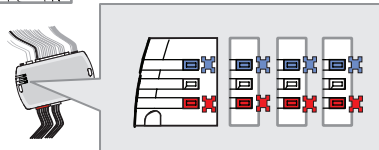


↳ The Blue and Red LEDs will flash.

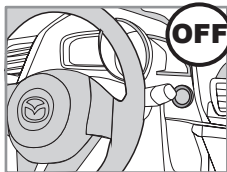


The vehicle's Ignition will turn OFF.

 19



Disconnect all Harness

20

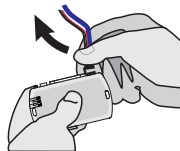

et ensuite:

Disconnect the 4-PIN Data-link harness (Black connector).


KEY BYPASS PROGRAMMING PROCEDURE 5/5

CAN PROGRAMMING PROCEDURE

21

**CAUTION FOR: EVO-ALARM OPTION**


If the module GREEN (A4) wire is connected to the HORN make sure that the option G1 (EVO-ALARM) is enabled before CAN programming.

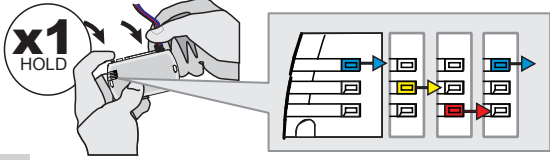

**Press and hold** the programming button:  
**Connect** the 4-PIN Data-link harness (Black connector).


↳ The Blue, Red, Yellow and Blue & Red LEDs will alternatively illuminate.

22

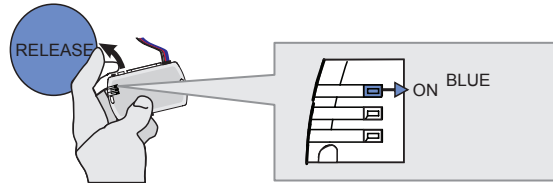


**Release** the programming button when the Blue LED is ON.

 If the Blue LED is not ON solid disconnect the 4-PIN Data-link harness (Black connector).



23

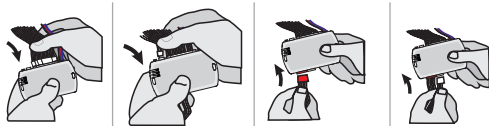


**Connect** the required remaining harnesses.

24




**Press** the START/STOP button twice to activate the vehicle's Ignition.

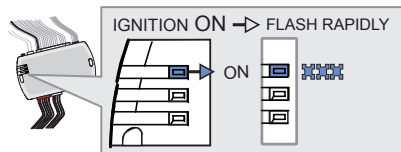


↳ The Blue LED will flash rapidly.

25

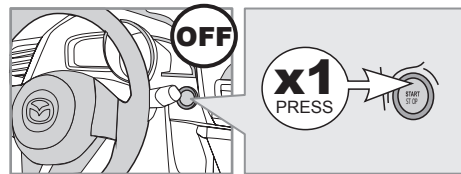

**Press** the START/STOP button once to deactivate the vehicle's Ignition.

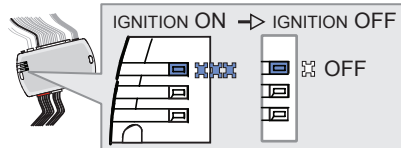

↳ The Blue LED will turn OFF.



The module is now programmed.

REMOTE STARTER FUNCTIONALITY



All doors must be closed.



Do not remote-start with the OEM remote inside the vehicle.



Never remote-start with a passenger inside the vehicle.



**Remote start** the vehicle.



*The module will shut down the vehicle as soon as a door is opened.*




STAND ALONE THAR-MAZ1 THARNSS INSTALLATION - 2 KEYS PROGRAMMING

ADDENDUM - SUGGESTED WIRING CONFIGURATION



**ONLY COMPATIBLE WITH AUTOMATIC TRANSMISSION VEHICLES.**

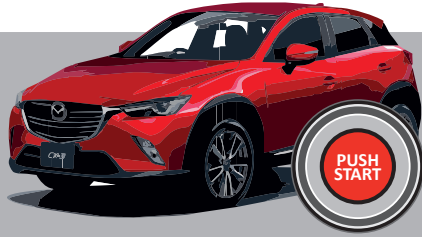

Vehicle functions supported in this diagram (functional if equipped)

VEHICLE	YEARS	Immobilizer bypass	T-Harness	Lock	Unlock	Arm	Disarm	Tachometer	Door Status	Trunk Status	Hood Status protection remote start	Hand-Brake Status	Foot-Brake Status	OEM Remote monitoring
<b>MAZDA</b>														
CX-3 <i>Push-to-Start - Automatic transmission</i>	2016-2021	•	•	•	•	•	•	•	•	•	•	•	•	•

FIRMWARE VERSION

85.[11]

MINIMUM

To add the firmware version and the options, use the **FLASH LINK UPDATER** or **FLASH LINK MOBILE** tool, sold separately.

<p><b>IF THE VEHICLE IS NOT EQUIPPED WITH FUNCTIONAL HOOD PIN:</b></p>	A11	OFF	Hood trigger (Output Status).
<p><b>Program bypass option:</b></p>	C1		OEM Remote status (Lock/Unlock) monitoring
<p><b>Program bypass option (If equiped with OEM alarm):</b></p>	D2		Unlock before / Lock after (Disarm OEM alarm)

**NOTES**



**THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.**



**Parts required** (Not included)

1X 10 AMP Fuse

**MANDATORY INSTALL**

\*HOOD PIN



**HOOD STATUS:** THE HOOD PIN SWITCH MUST BE INSTALLED IF THE VEHICLE CAN BE REMOTE STARTED WITH THE HOOD OPEN, SET FUNCTION A11 TO OFF.

A11

OFF

**Notice:** the installation of safety elements are mandatory. The hood pin is an essential security element and must be installed.

**THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.**


**PARTS REQUIRED (NOT INCLUDED)**


1x **FLASH LINK UPDATER**  
 1x **FLASH LINK MANAGER**  
SOFTWARE | PROGRAMME  
 1x Microsoft Windows Computer with Internet connection

**OR**

1x **FLASH LINK MOBILE**  
 1x **FLASH LINK MOBILE APP**  
Smartphone Android or iOS with Internet connection (provider charges may apply).

**MANDATORY**

HOOD PIN 

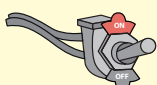
 



REMOTE START SAFETY OVERRIDE SWITCH 

VALET SWITCH


Part #: RSPB available, Sold separately.

**Notice:** the installation of safety elements are mandatory. The hood pin and the valet switch are essential security elements and must be installed.


**STAND ALONE CONFIGURATION**

	Program bypass option	UNIT OPTION	DESCRIPTION
	<b>OEM Remote Stand Alone Remote Starter:</b>	<b>D1.10</b> 	<b>By default, LOCK, LOCK, LOCK</b> Par défaut, VERROUILLE, VERROUILLE, VERROUILLE
		<b>D1.1</b> 	
	<b>Program bypass option with oem remote:</b>	<b>C1</b>	OEM Remote Monitoring
	<b>Program bypass option with RF KIT antenna:</b> <b>Programmez l'option du contournement avec antenne RF:</b>	<b>H1 to H6</b>	Supported RF Kits and select RF Kit


**REMOTE STARTER FUNCTIONALITY**

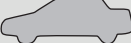

All doors must be closed.  
Toutes les portes doivent être fermées

**3X** 

Press the OEM remote's Lock button 3x to remote-start (or remote-stop) the vehicle.  
Appuyez sur le bouton Verrouillage 3X de la télécommande d'origine pour démarrer à distance (ou arrêter à distance) le véhicule.



The vehicle will START.  
Le véhicule DÉMARRE.

**REMOTE STARTER DIAGNOSTICS**  
**DIAGNOSTIQUE DU DÉMARREUR À DISTANCE**


**MODULE RED LED | DEL ROUGE DU MODULE**

x2 flash :	Brake ON	Frein Activé
x3 flash :	No tach	Pas de Tach
x4 flash :	Ignition before start	Clé de contact détectée avant démarrage
x5 flash :	Hood Open	Capot Ouvert

**PARKING LIGHTS | FEUX DE STATIONNEMENT**

x4 flash:	FOB in car	Télécommande d'origine dans le véhicule
x5 flash:	Hood open	Capot Ouvert
x6 flash:	Brake ON	Frein Activé
x7 flash:	Door open	Porte ouverte
x8 flash:	Bad Encryption/ key code	Mauvaise encryption/ code de clé

**REMOTE STARTER WARNING CARD**



**CUT THIS WARNING CARD AND STICK IT ON A VISIBLE PLACE:**  
 or use the package RSPB, Sold separately.

**WARNING | ATTENTION**


**REMOTE STARTER**

THE VEHICLE CAN BE STARTED BY EITHER: PRESSING THE LOCK BUTTON ON THE OEM REMOTE 3 TIMES CONSECUTIVELY OR BY A SMARTPHONE. **TURN ON THE SAFETY SWITCH LOCATED UNDER THE DASHBOARD BEFORE WORKING ON THE VEHICLE.**


DESCRIPTION | DESCRIPTION




① Under steering column, START-STOP unit

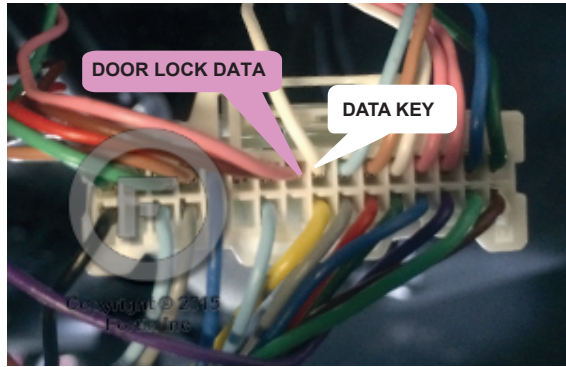


③ At parking lights switch

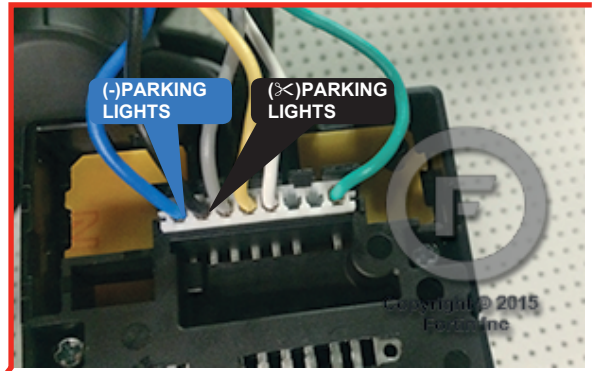

② Under steering column, START-STOP unit

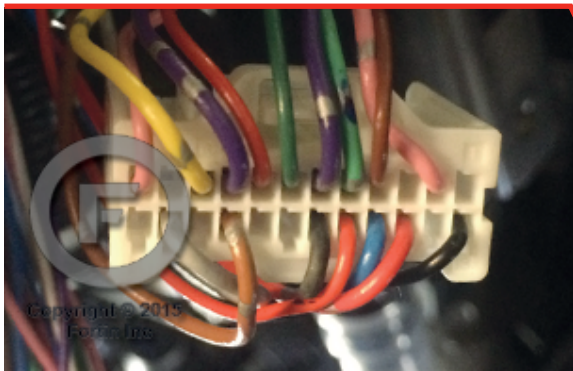

④ BCM High connector above driver kick panel

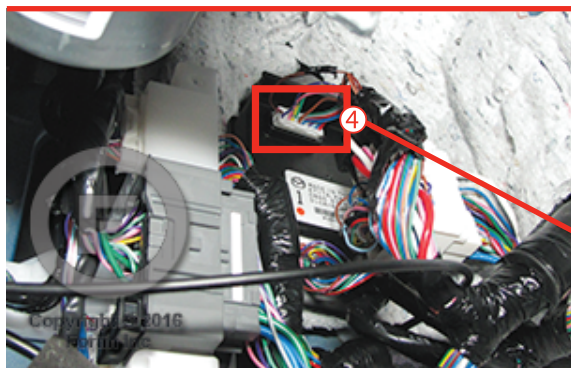




# ATTENTION

Before disconnecting a module, a computer or a control unit from a vehicle: Always disconnect the negative terminal from the vehicle's battery.


In these vehicles, the factory keyless entry module is sensitive to interference and may cease to operate if some precautions are not taken. Disconnect the (-) terminal of the battery prior to disconnecting the connectors at the smartkey module below the steering wheel to avoid damage to the smartkey entry module.

1

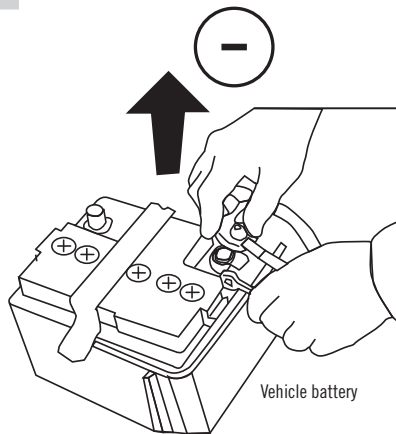


Disconnect the (-) terminal of the battery.

2

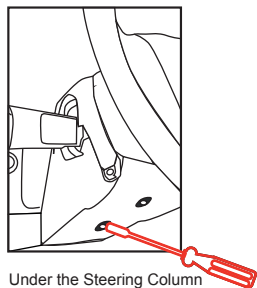


Under the Steering Column

1 Unscrew.

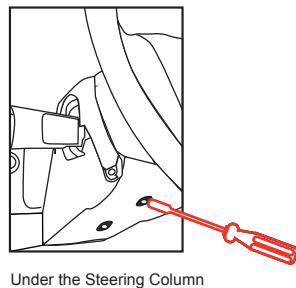


Under the Steering Column

2 Unscrew

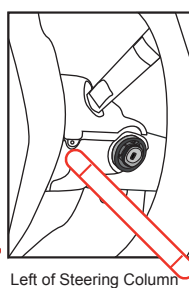


Left of Steering Column

3 Onclip

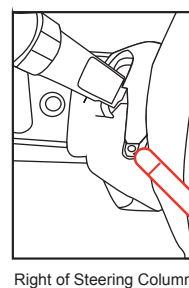

Right of Steering Column

4 Onclip

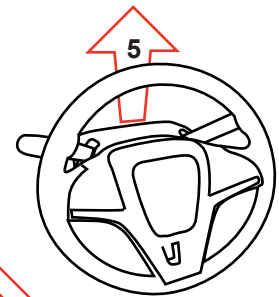


5 Gently pull up the cover of the steering column.

3


Make the following connections.

CONTINUED NEXT PAGE

4

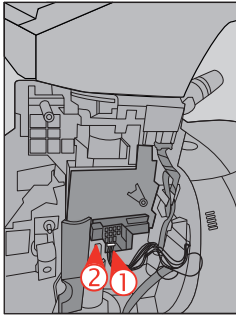

Under steering column, START-STOP unit.

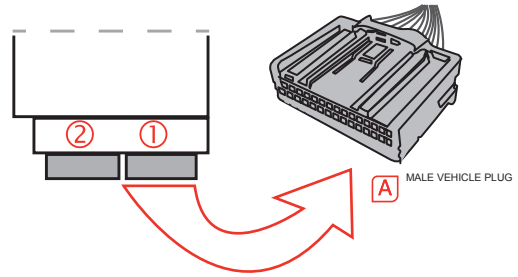


Disconnect the connector

A

5


Under steering column, START-STOP unit.

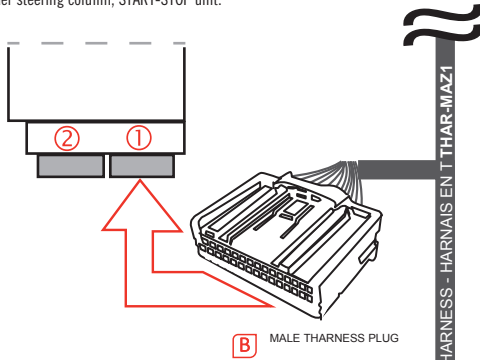

Connect the connector

B

6

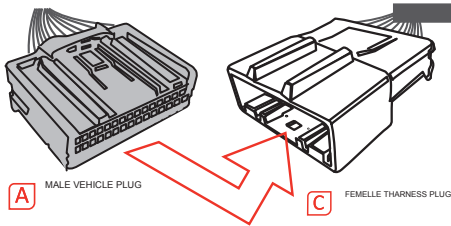

Connect the connector

into connector



A


C

7

Make other required connections.

**AUTOMATIC TRANSMISSION WIRING CONNECTION**

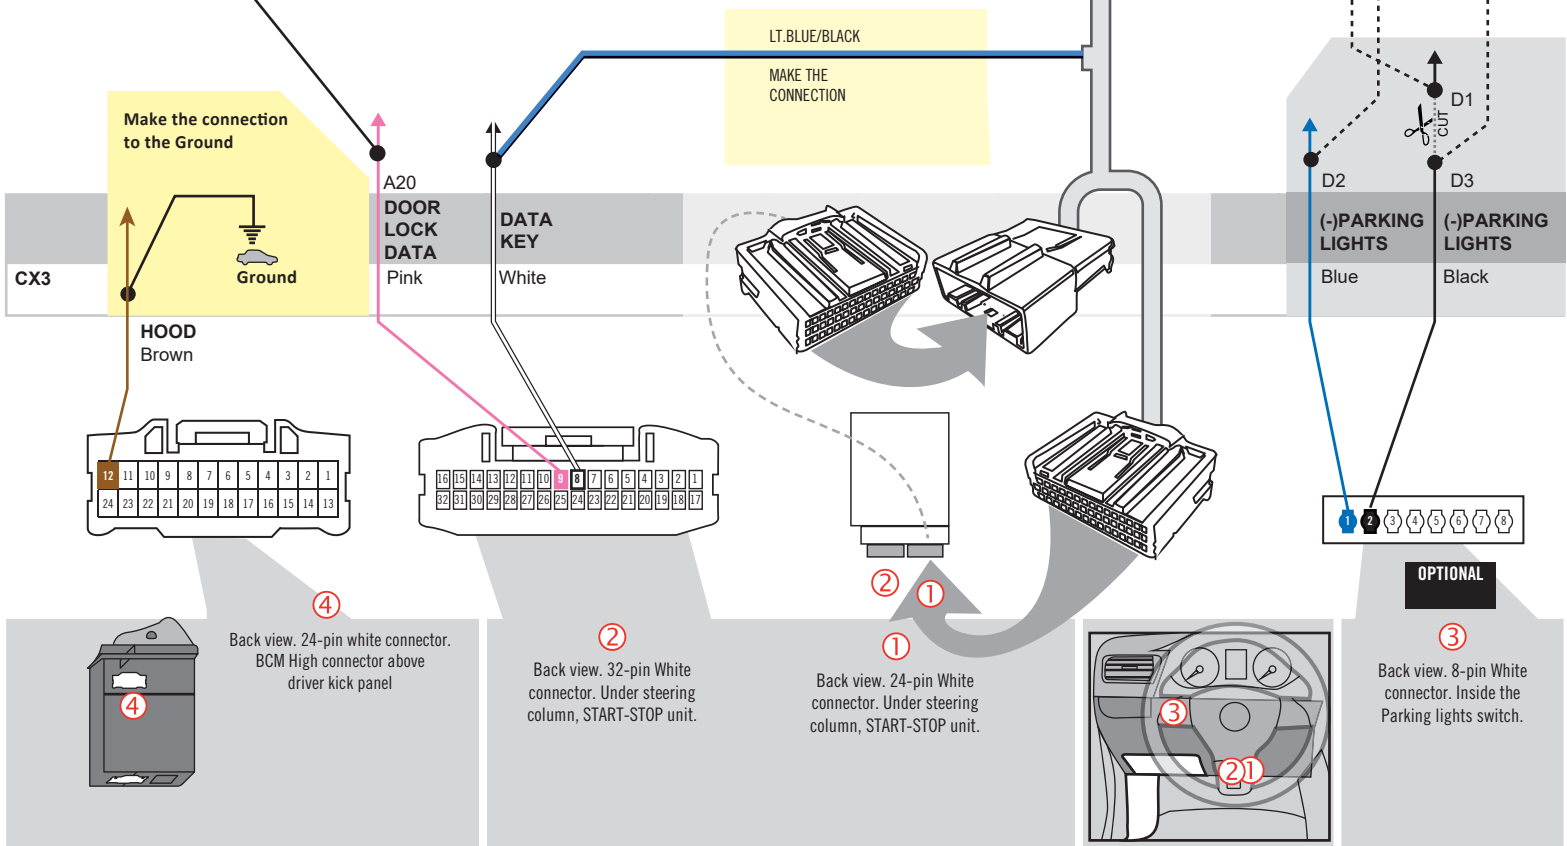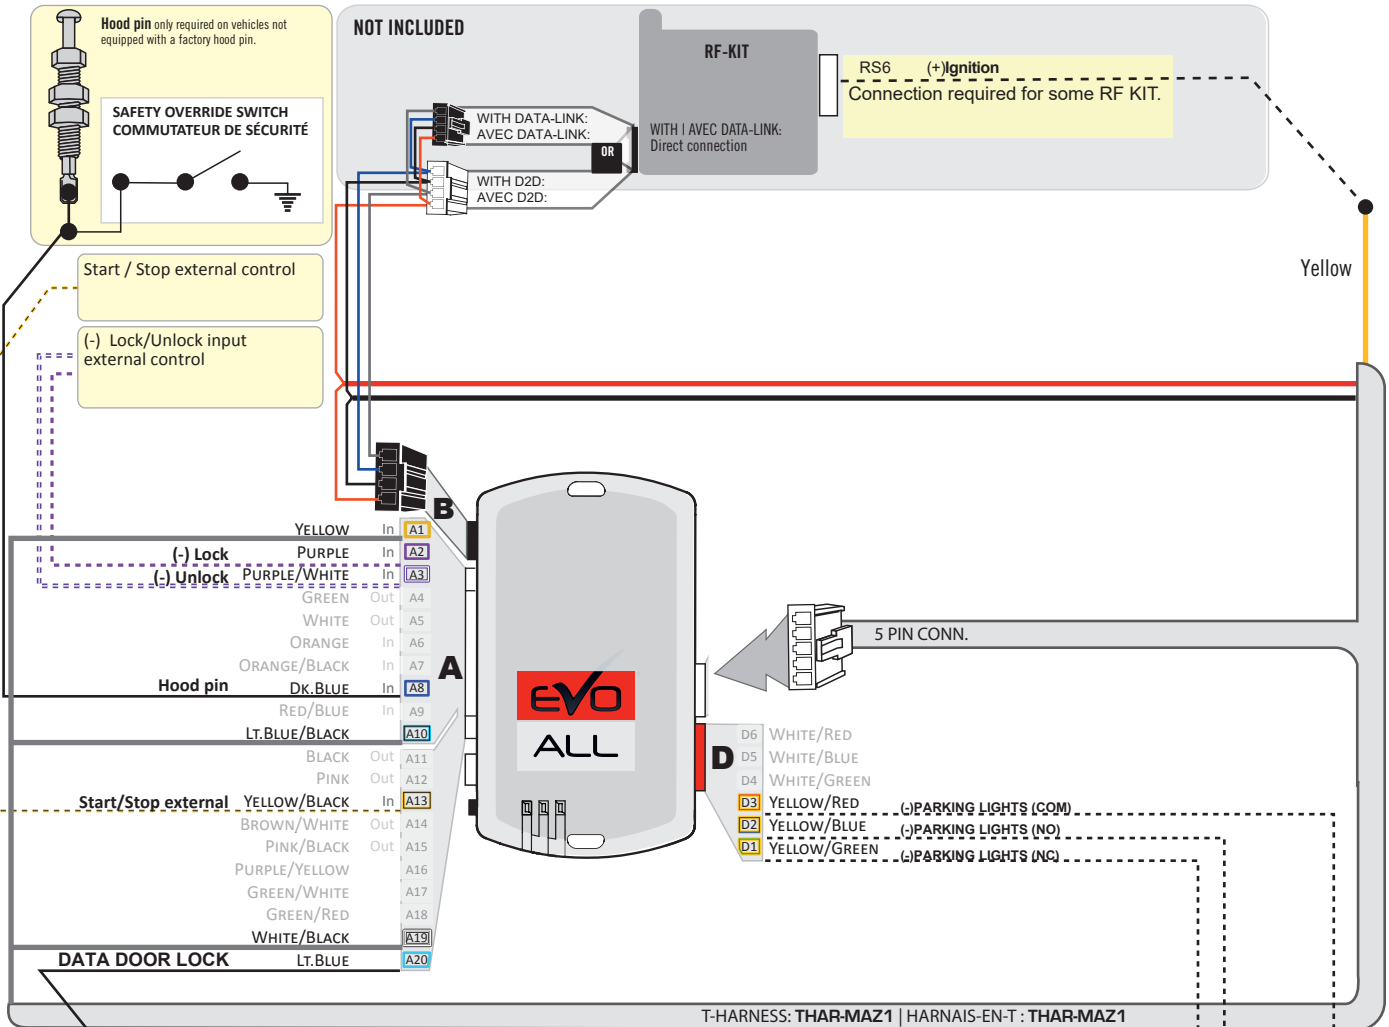

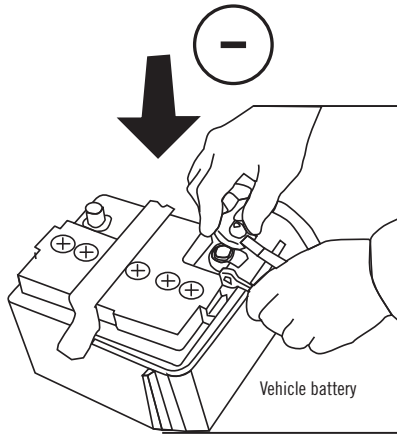

**Reconnect** the (-) terminal of the battery.

CONTINUED NEXT PAGE

# x3 max.


**Do not program more than 3 modules on the same vehicle.**

If more than 3 modules are programmed to a vehicle, it is possible that the remote car starter will never be functional on this vehicle.

If all programming steps were successful and the vehicle cannot be remote started :


- Double check all connections using the installation diagram above as a reference.

If no connection errors can be found then please contact technical support assistance.

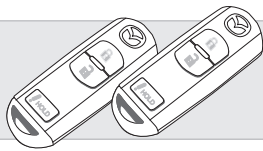

**Make sure** to have two valide vehicle key.


1

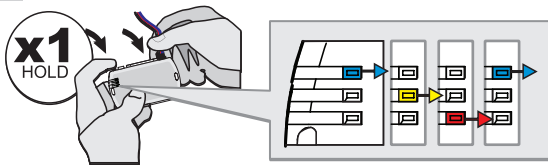

**Press and hold** the programming button:  
**Connect** the 4-PIN Data-link harness (Black connector).


↳ The Blue, Red, Yellow and Blue & Red LEDs will alternatively illuminate.

2

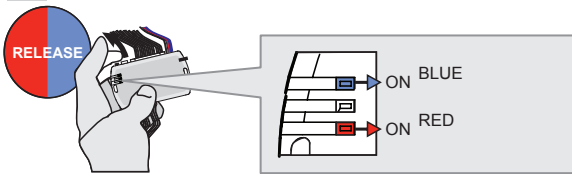


**Release** the programming button when the Blue & Red LEDs are ON.

 *If the LED are not solid BLUE and RED disconnect the 4-PIN Data-link harness (Black connector) and go back to step1.*




3

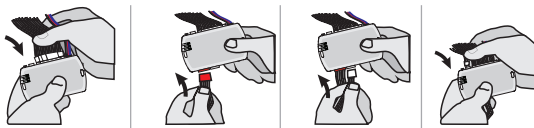

**Connect** the required remaining harnesses.

4

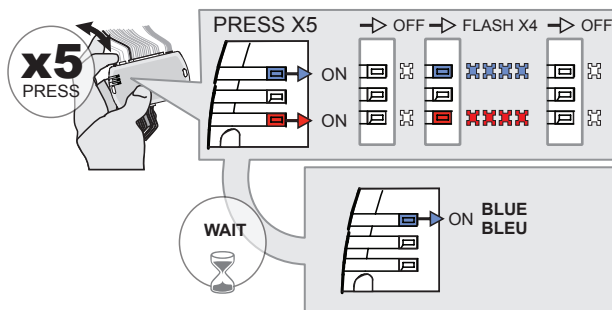

**Press and release** the programming button five times (5x).

↳ The Red & Blue LEDs will alternate between 4 flashes and a pause.


↳ **Wait** for the Blue LED to turn ON.






KEY #1

5

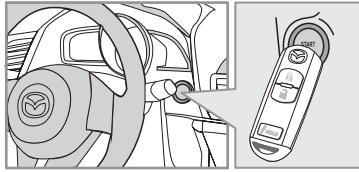


Place the 1st OEM remote close to the front of the START/STOP button exactly as shown.

6

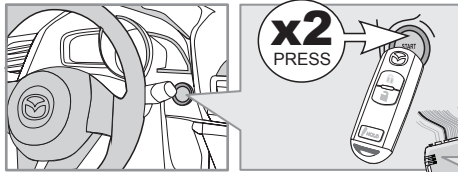


Press the START/STOP button twice to activate the vehicle's Ignition.

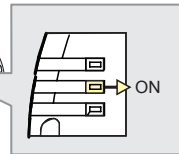


↳ The Yellow LED will turn ON.

7

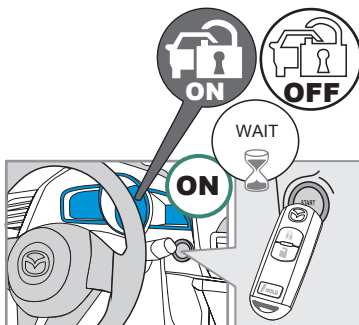


 If the Blue LED is ON solid disconnect the 4-PIN Data-link harness (Black connector) and go back to step 1.




Wait for the security indicator to turn OFF (around 3 seconds).

8

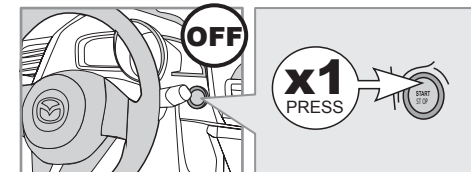

**IMMEDIATELY**

Press the START/STOP button once to deactivate the vehicle's Ignition.

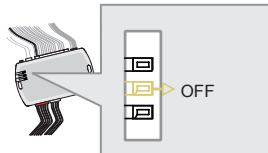


↳ The Yellow Led will turn OFF.



KEY #2

9

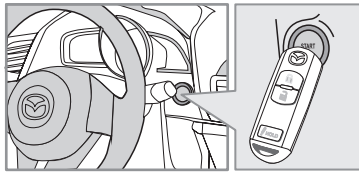


Place the 2nd OEM remote close to the front of the START/STOP button exactly as shown.

10




Press the START/STOP button twice to activate the vehicle's Ignition.

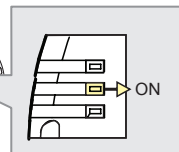


↳ The Yellow LED will turn ON.

KEY BYPASS PROGRAMMING PROCEDURE 3/6




**KEY#2**

**11**

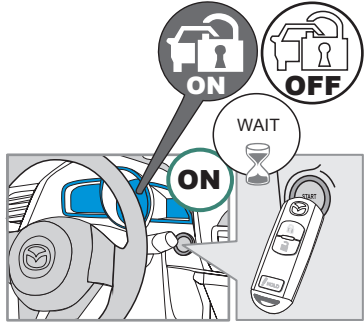


Wait for the security indicator to turn OFF (around 3 seconds).

**12**

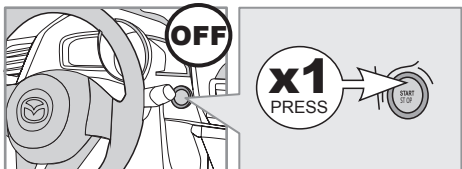


**IMMEDIATELY**

Press the START/STOP button once to deactivate the vehicle's Ignition.

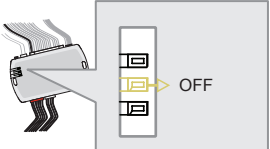


↳ The Yellow Led will turn OFF.


**13**

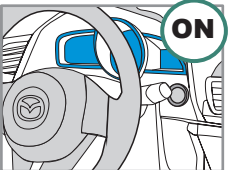

The vehicle's ignition will turn ON

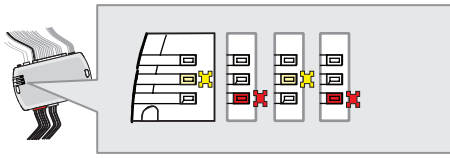


↳ The Yellow and Red LED's will alternatively illuminate.

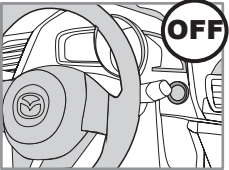

The vehicle's Ignition will turn OFF.


**14**

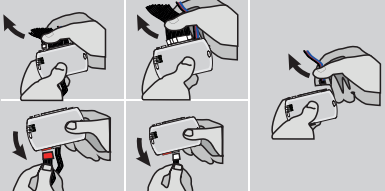

Disconnect all the connectors and after the Data-Link (4-pins) connector.

**KEY BYPASS PROGRAMMING PROCEDURE 4/6**


15

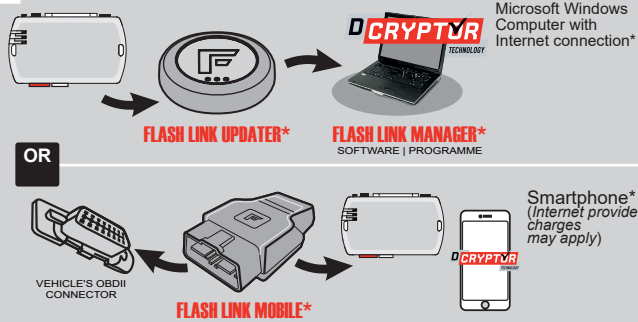

Use the tool: **FLASH LINK UPDATER** or **FLASH LINK MOBILE** to visit the DCRYPTOR menu.

\*Parts required (not included)

16

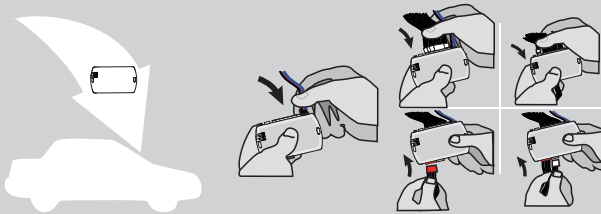


**AFTER DCRYPTOR PROGRAMMING COMPLETED**  
Go back to the vehicle and **reconnect** the 4-Pin (Data-Link) connector and after, all the remaining connector.

17



Repeat step 1 to 12.

18

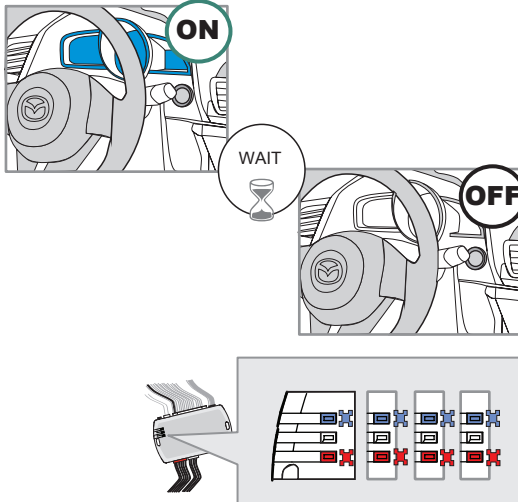


The vehicle's ignition will turn ON

The vehicle's Ignition will turn OFF.


↳ The Blue and Red LEDs will flash.

 19



Disconnect all Harness

20

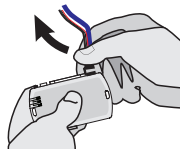


Next:

Disconnect the 4-PIN Data-link harness (Black connector).

CAN PROGRAMMING PROCEDURE


21

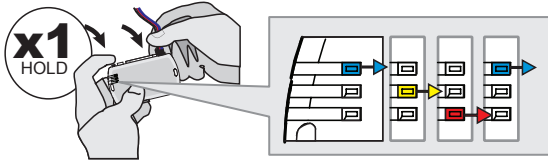

Press and hold the programming button:  
Connect the 4-PIN Data-link harness (Black connector).


↳ The Blue, Red, Yellow and Blue & Red LEDs will alternatively illuminate.

22

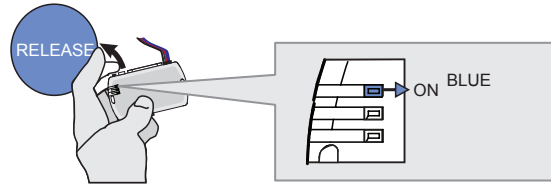


Release the programming button when the Blue LED is ON.

 If the Blue LED is not ON solid disconnect the 4-PIN Data-link harness (Black connector).




23

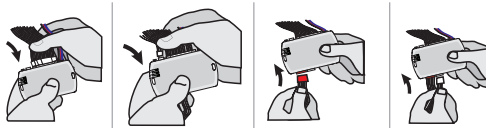


Connect the required remaining harnesses.

24

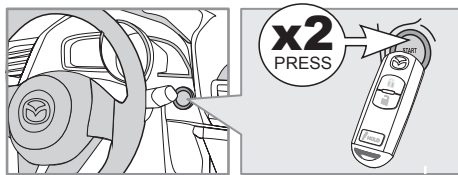


Press the START/STOP button twice to turn ON the vehicle's Ignition.

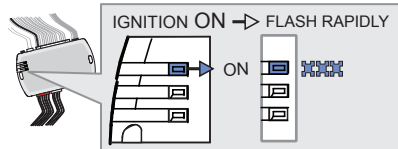


↳ The Blue LED will flash rapidly.

25

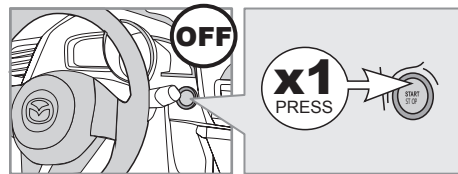

Press the START/STOP button once to turn OFF the vehicle's Ignition.

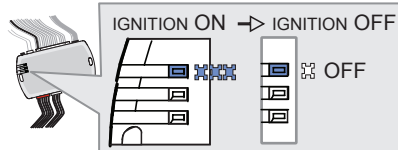


↳ The Blue LED will turn OFF.



The module is now programmed.

REMOTE STARTER FUNCTIONALITY |

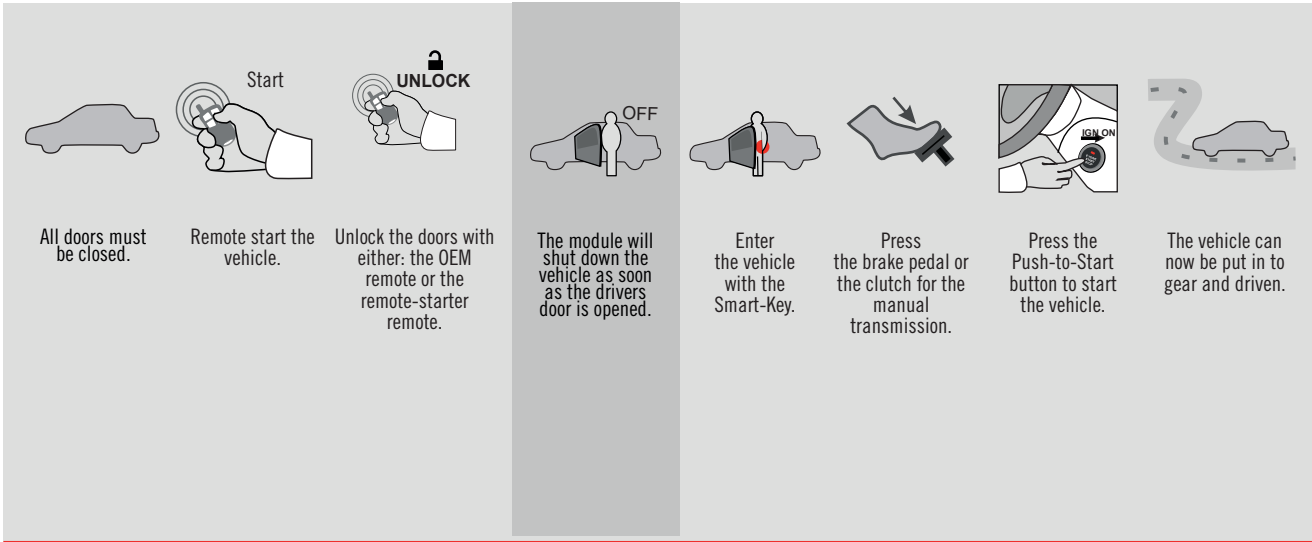

**CX5 - T-HARNESS MAZDA - STAND ALONE**

ADDENDUM - SUGGESTED WIRING CONFIGURATION



**ONLY COMPATIBLE WITH AUTOMATIC TRANSMISSION VEHICLES.**



Vehicle functions supported in this diagram (functional if equipped)

VEHICLE	YEARS	Connection #			Immobilizer bypass	Lock	Unlock	Arm	Tachometer	Door Status	Trunk Status	Hood Status protection remote start	Hand-Brake Status	Foot-Brake Status	OEM Remote monitoring	Alarm mode
		REMOTE STARTER NO DOORLOCK	REMOTE STARTER & DOORLOCK CONTROL	VEHICLE WITHOUT OEM ALARM												
<b>MAZDA</b>																
CX5 Push-to-Start - AT	2013-2016	1	2	3	•	•	•	•	•	•	•	•	•	•	•	•

HARDWARE VERSION      FIRMWARE VERSION

MINIMUM **6**      **71.[35]**

FORD MINIMUM



**Parts required** (Not included)

- 1X 10 AMP Fuse
- 1x Diode 1A
- 1X 1K Ohm Resistor (with doorlock)

**FLASH LINK MANAGER**  
Software version 3.52 and more



**FLASH LINK UPDATER 2**



Microsoft Windows Computer & Internet connection



**PARTS REQUIRED (NOT INCLUDED)**



**FLASH LINK UPDATER 2**

**FLASH LINK MANAGER**  
SOFTWARE | PROGRAMME



Microsoft Windows Computer  
(Internet connection required)

 


**MANDATORY**

HOOD PIN



REMOTE START SAFETY OVERRIDE SWITCH






VALET SWITCH


Part #: RSPB available, Sold separately.

**Notice:** the installation of safety elements are mandatory. The hood pin and the valet switch are essential security elements and must be installed.

**STAND ALONE CONFIGURATION**


		UNIT OPTION	DESCRIPTION
	Program bypass option:	<b>D1</b>	OEM Remote Stand Alone Remote Starter
	Program bypass option with oem remote:	<b>C1</b>	OEM Remote Monitoring
	Program bypass option with RF KIT antenna:	<b>H1 to H6</b>	Supported RF Kits and select RF Kit

**REMOTE STARTER FUNCTIONNALITY**




All doors must be closed.

**3X**



Press the OEM remote's Lock button 3x to remote-start (or remote-stop) the vehicle.



The vehicle will START.

REMOTE STARTER DIAGNOSTICS	
<b>MODULE RED LED</b>	
x2 flash :	Brake ON
x3 flash :	No tach
x4 flash :	Ignition before start
x5 flash :	Hood Open
<b>PARKING LIGHTS</b>	
x4 flash:	FOB in car
x5 flash:	Hood open
x6 flash:	Brake ON
x7 flash:	Door open
x8 flash:	Bad Encryption/ key code

**REMOTE STARTER WARNING CARD**

  
**CUT THIS WARNING CARD AND STICK IT ON A VISIBLE PLACE:**  
 or use the package RSPB, Sold separately.

**WARNING | ATTENTION**





**REMOTE STARTER**

THE VEHICLE CAN BE STARTED BY EITHER: PRESSING THE LOCK BUTTON ON THE OEM REMOTE 3 TIMES CONSECUTIVELY OR BY A SMARTPHONE. **TURN ON** THE SAFETY SWITCH LOCATED UNDER THE DASHBOARD BEFORE WORKING ON THE VEHICLE.

DESCRIPTION |


Under steering column, START-STOP unit.

① ②

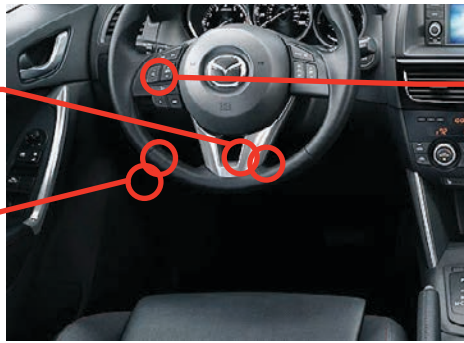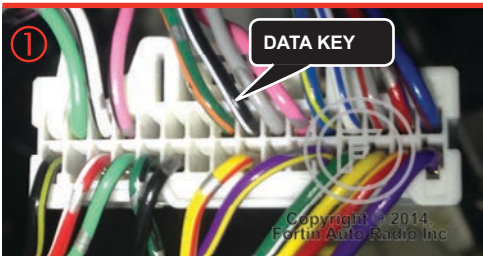


Parking Light connector

③

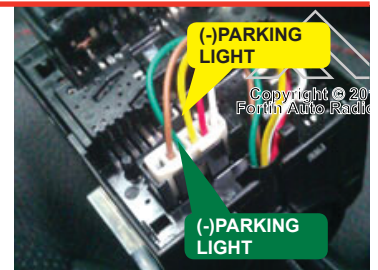


driver kick panel. - DOORLOCK

④ ⑤

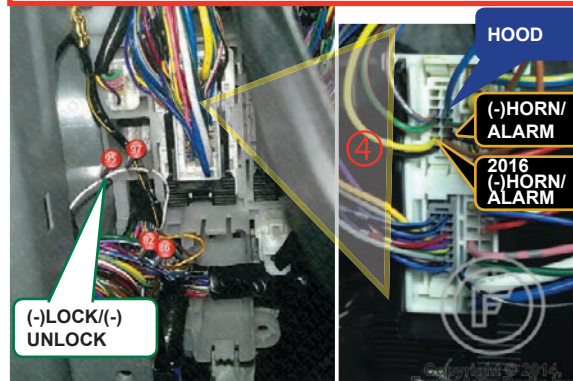

Engine compartment - without OEM ALARM

⑥ ⑦

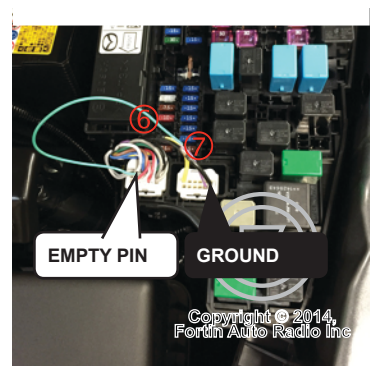




CONNECTION 1

REMOTE CAR STARTER ONLY - DOORLOCK BY OEM REMOTE

AUTOMATIC TRANSMISSION ONLY

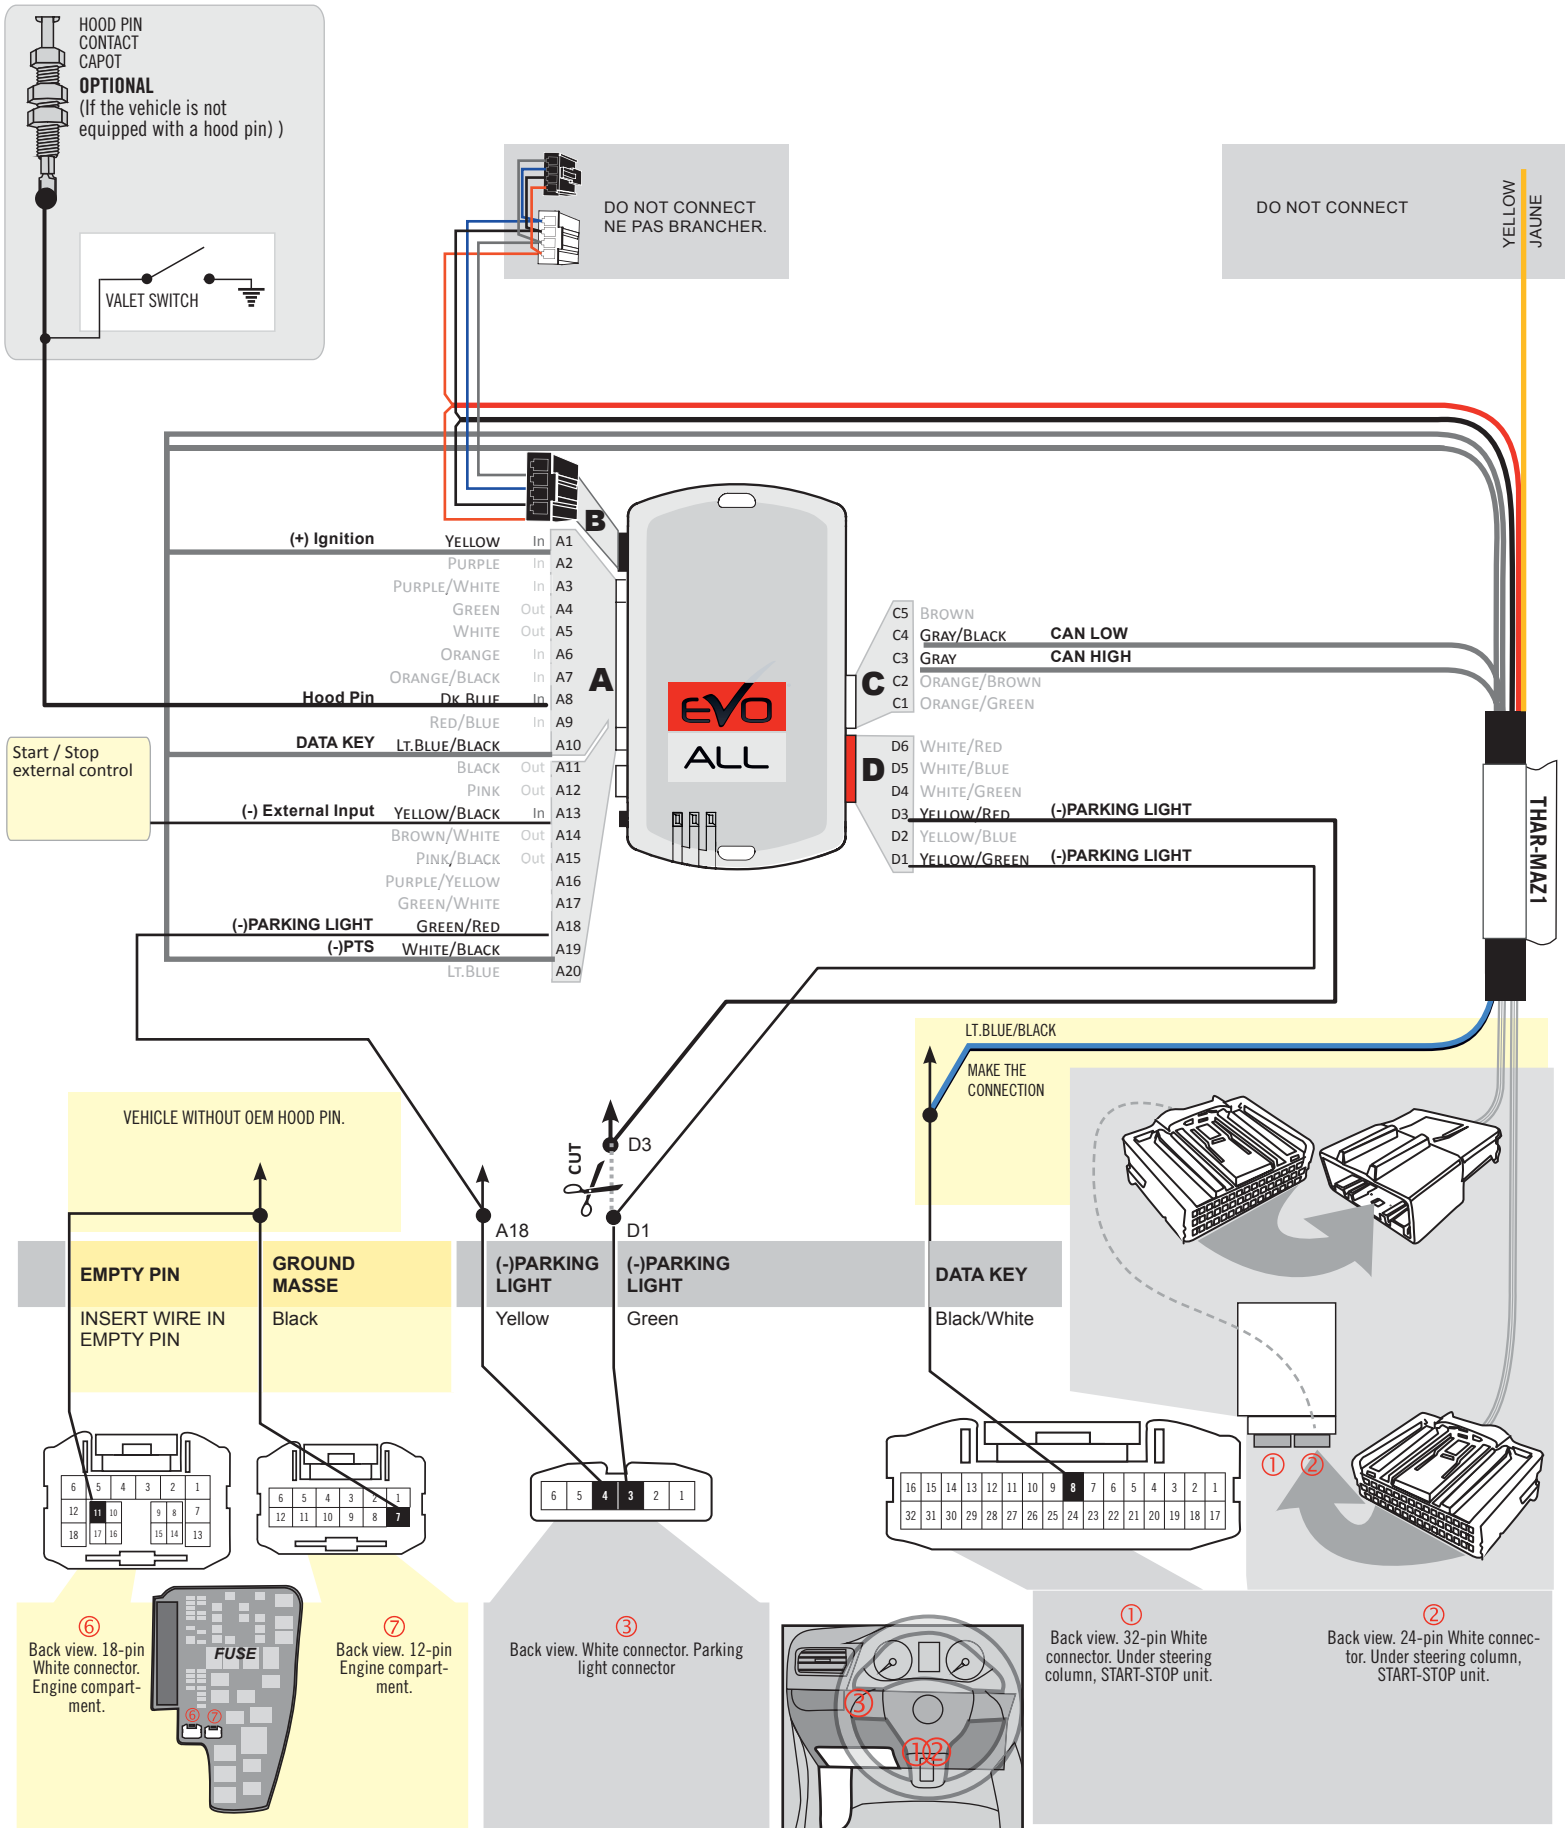

CONNECTION 2

REMOTE CAR STARTER AND DOORLOCK




Program bypass option:

UNIT OPTION	DESCRIPTION
<b>C1</b>	OEM Remote status (Lock/Unlock) monitoring
<b>G1</b>	Evo Alarm enable

CONNECTION 2


REMOTE CAR STARTER AND DOORLOCK  
AUTOMATIC TRANSMISSION ONLY

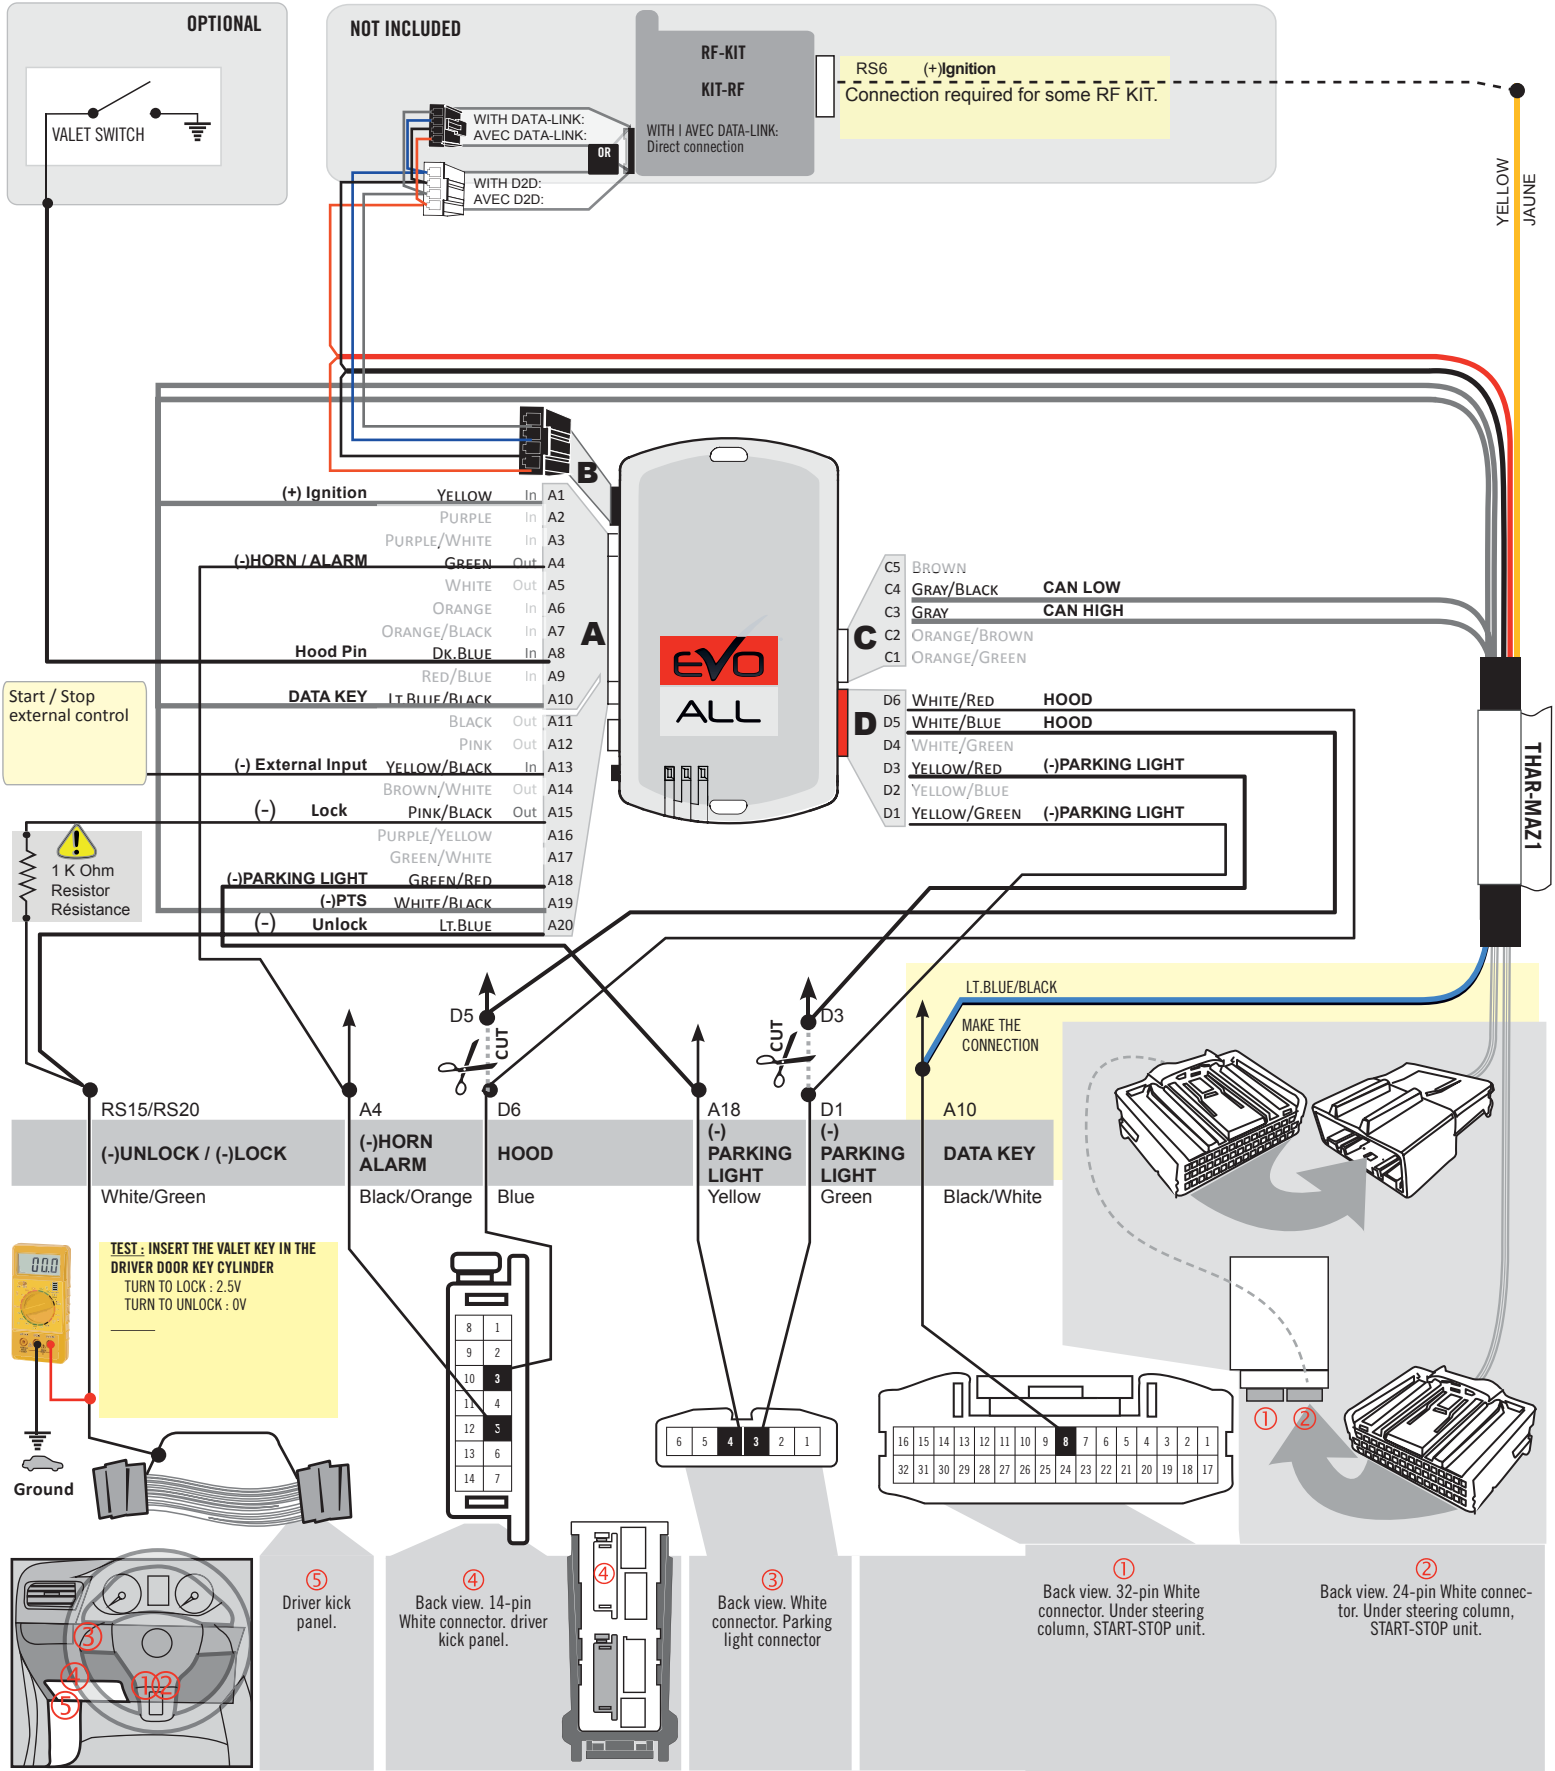

CONNECTION 3

VEHICLE WITHOUT HOOD PIN & WITHOUT OEM ALARM

AUTOMATIC TRANSMISSION ONLY SEULEMENT

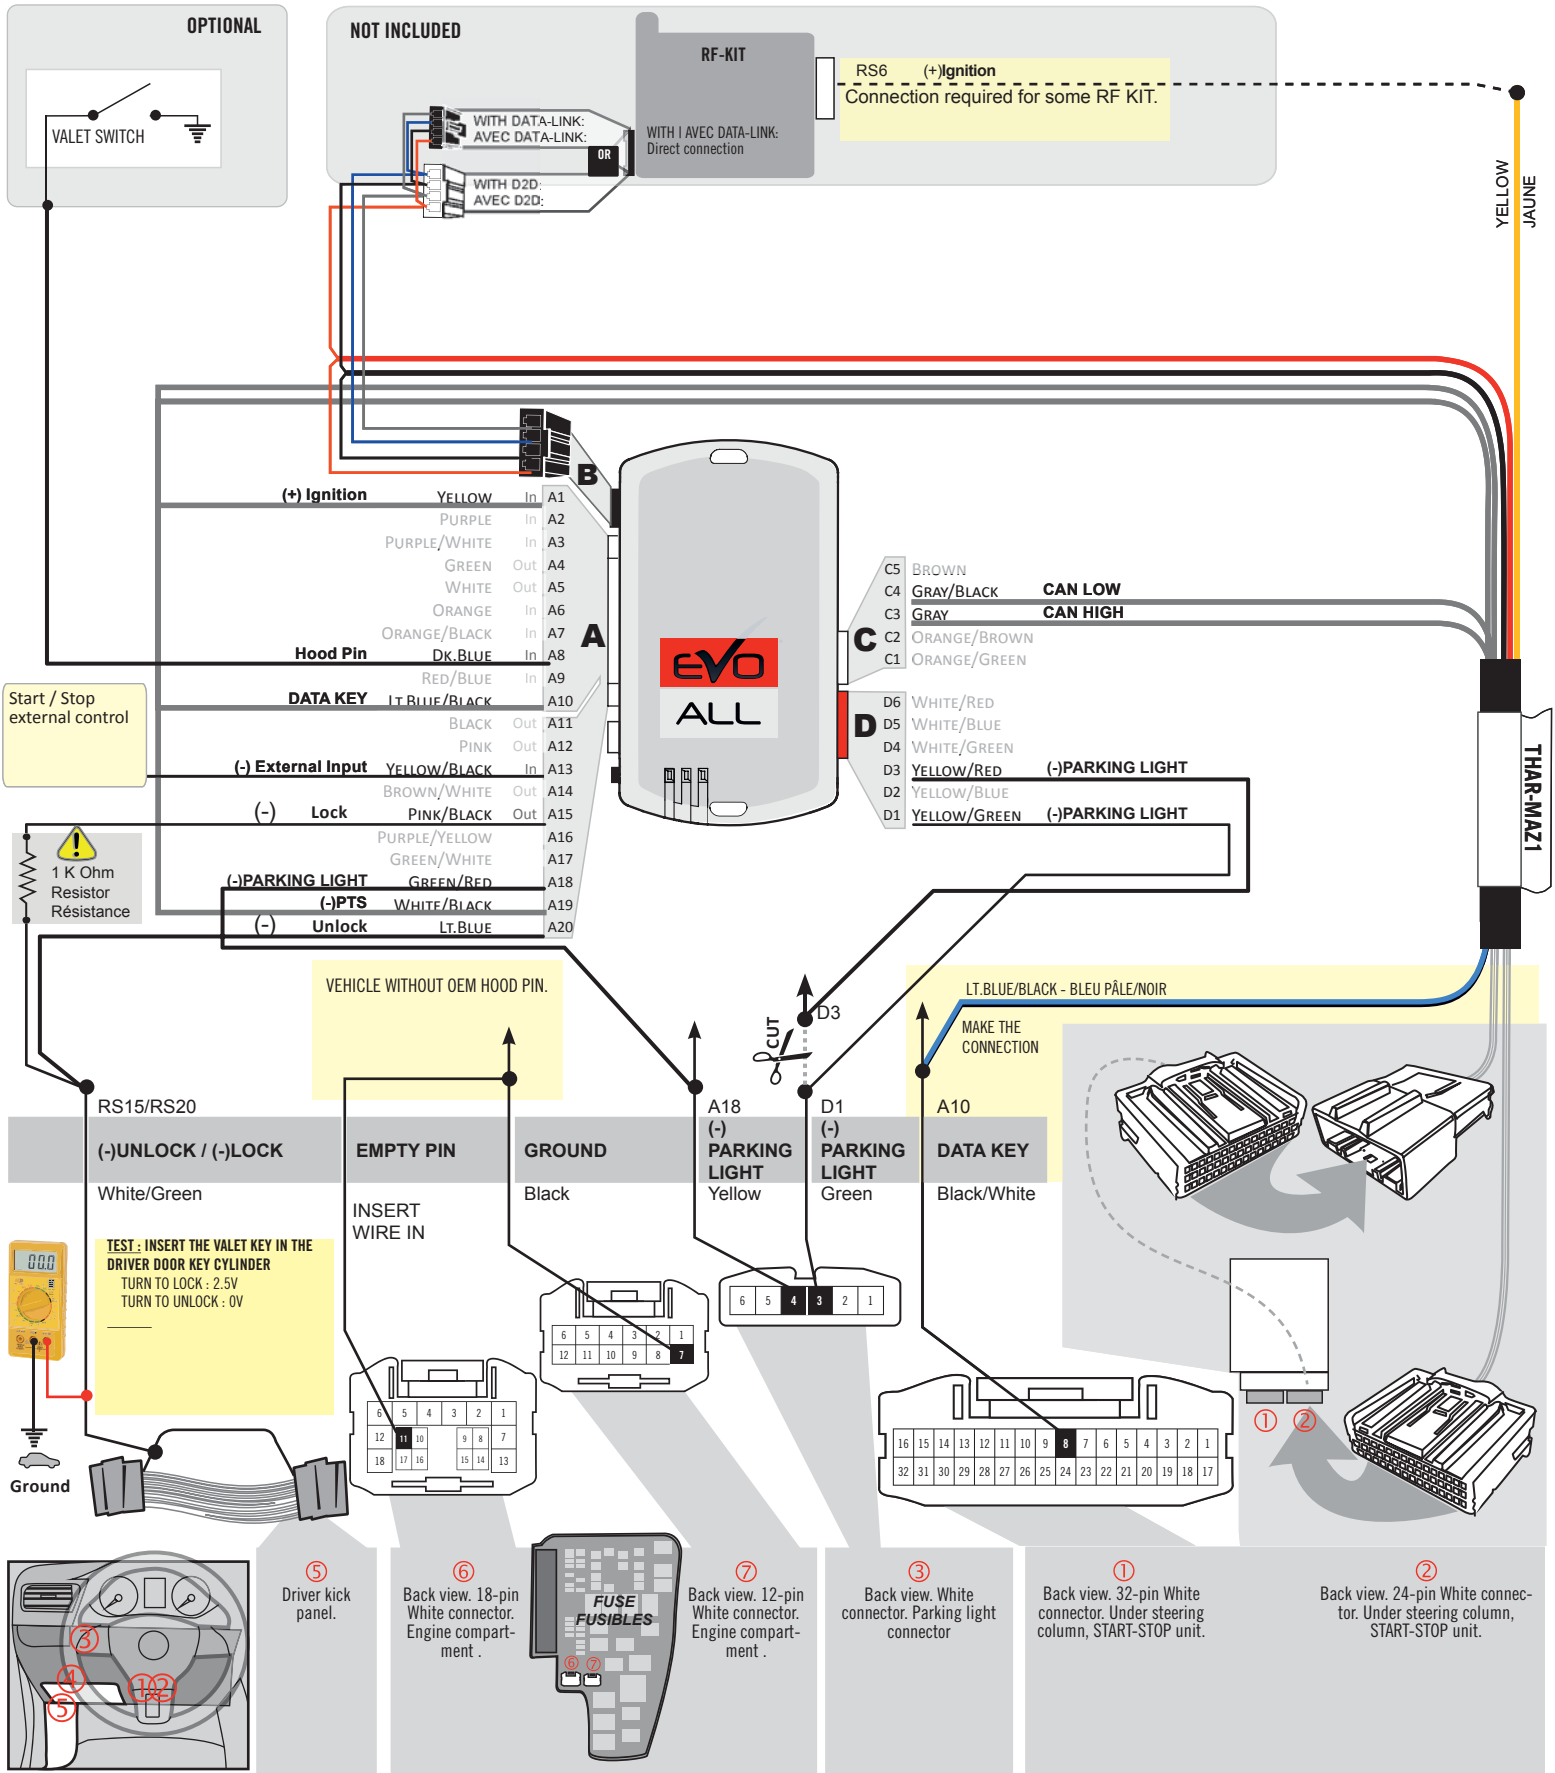

# x3 max.


**Do not program more than 3 modules on the same vehicle.**

If more than 3 modules are programmed to a vehicle, it is possible that the remote car starter will never be functional on this vehicle.

If all programming steps were successful and the vehicle cannot be remote started :


- Double check all connections using the installation diagram above as a reference.

If no connection errors can be found then please contact technical support assistance.

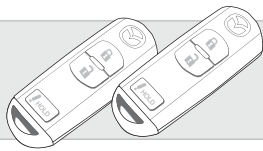

**Make sure** to have two valide vehicle key.


1

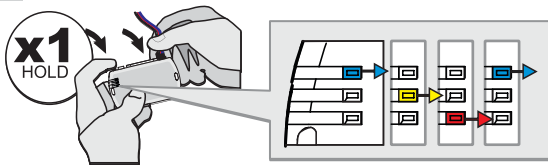

**Press and hold** the programming button:  
**Connect** the 4-PIN Data-link harness (Black connector).


↳ The Blue, Red, Yellow and Blue & Red LEDs will alternatively illuminate.

2

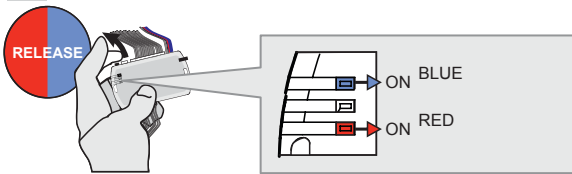


**Release** the programming button when the Blue & Red LEDs are ON.

 *If the LED are not solid BLUE and RED disconnect the 4-PIN Data-link harness (Black connector) and go back to step1.*




3

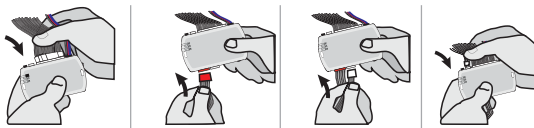

**Connect** the required remaining harnesses.

4

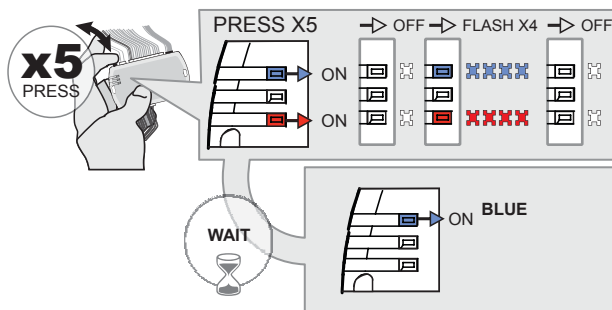

**Press and release** the programming button five times (5x).

↳ The Red & Blue LEDs will alternate between 4 flashes and a pause.


↳ **Wait** for the Blue LED to turn ON.

KEY BYPASS PROGRAMMING PROCEDURE 2/5 |




KEY #1

5

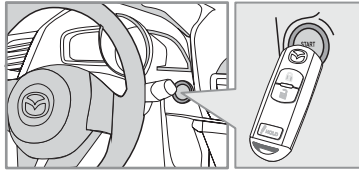


Place the 1st OEM remote close to the front of the START/STOP button exactly as shown.

6

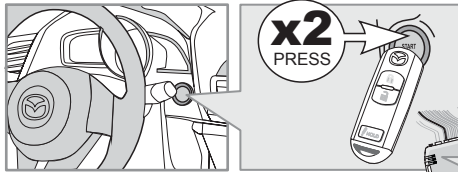


Press the START/STOP button twice to activate the vehicle's Ignition.

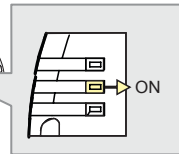


↳ The Yellow LED will turn ON.

7

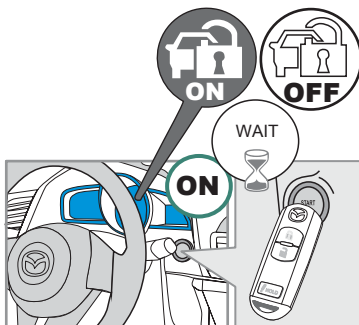


 If the Blue LED is ON solid disconnect the 4-PIN Data-link harness (Black connector) and go back to step 1.



Wait for the security indicator to turn OFF (around 3 seconds).

8

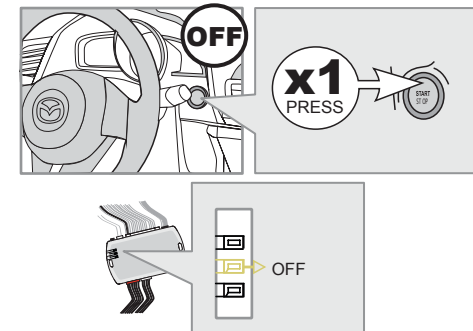

**IMMEDIATELY**


Press the START/STOP button once to deactivate the vehicle's Ignition.

↳ The Yellow Led will turn OFF.



KEY #2

9

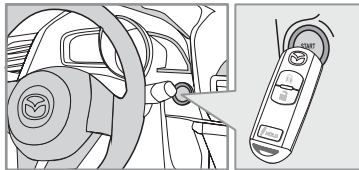


Place the 2nd OEM remote close to the front of the START/STOP button exactly as shown.


10



Press the START/STOP button twice to activate the vehicle's Ignition.

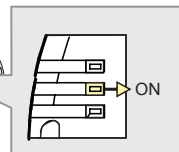


↳ The Yellow LED will turn ON.




**KEY#2**

**11**

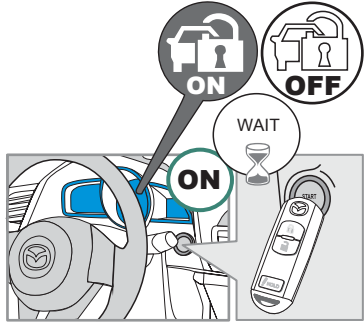


Wait for the security indicator to turn OFF (around 3 seconds).

**12**

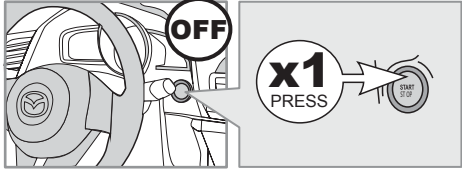


**IMMEDIATELY**

Press the START/STOP button once to deactivate the vehicle's Ignition.

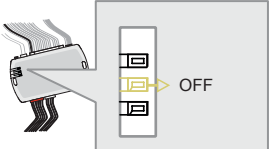


↳ The Yellow Led will turn OFF.


**13**

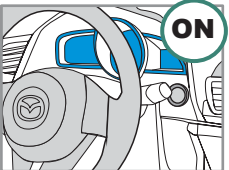

The vehicle's ignition will turn ON

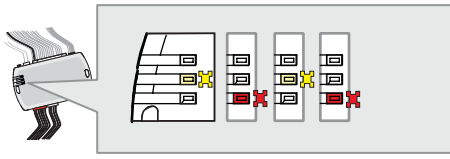


↳ The Yellow and Red LED's will alternatively illuminate.

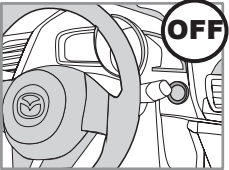

The vehicle's Ignition will turn OFF.


**14**

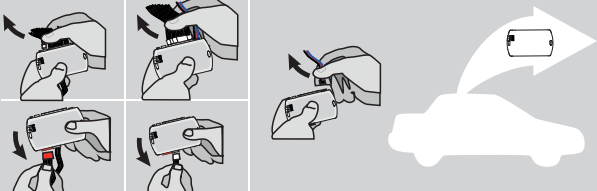

**Disconnect** all the connectors and after the Data-Link (4-pins) connector.

KEY BYPASS PROGRAMMING PROCEDURE 4/5 |

15

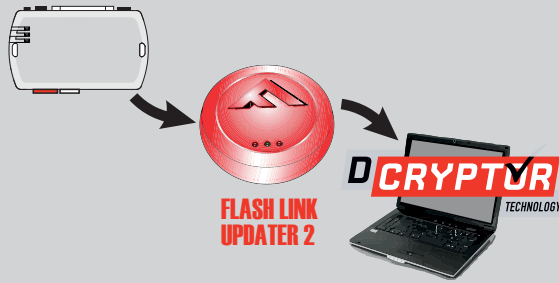

Connect the module to the FLASH LINK UPDATER 2 and visit the DCRYPTOR menu in the Flash-Link Manager.

Parts required (not included)




**FLASH LINK UPDATER 2**

**FLASH LINK MANAGER**  
SOFTWARE | PROGRAMME



Microsoft Windows  
Computer with  
Internet connection

16

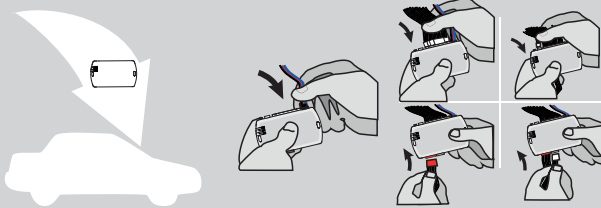

**AFTER DCRYPTOR PROGRAMMING COMPLETED**  
Go back to the vehicle and **reconnect** the 4-Pin (Data-Link) connector and after, all the remaining connector.


17




**1 - 12**

Repeat step 1 to 12.


18

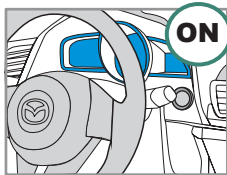

The vehicle's ignition will turn ON

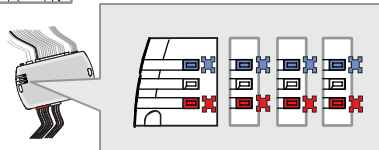


↳ The Blue and Red LEDs will flash.

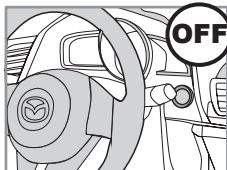


The vehicle's Ignition will turn OFF.

 19



Disconnect all Harness

20

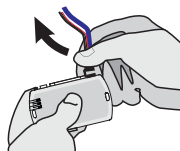

et ensuite:

Disconnect the 4-PIN Data-link harness (Black connector).




CAN PROGRAMMING PROCEDURE

21

**CAUTION FOR: EVO-ALARM OPTION**


If the module GREEN (A4) wire is connected to the HORN make sure that the option G1 (EVO-ALARM) is enabled before CAN programming.

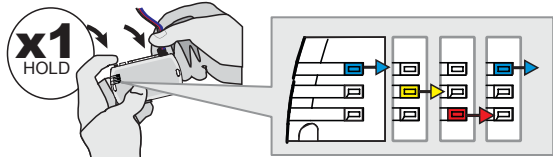

**Press and hold** the programming button:  
**Connect** the 4-PIN Data-link harness (Black connector).


↳ The Blue, Red, Yellow and Blue & Red LEDs will alternatively illuminate.

22

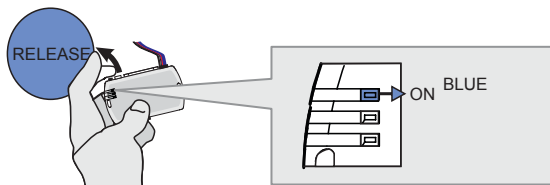


**Release** the programming button when the Blue LED is ON.

 If the Blue LED is not ON solid disconnect the 4-PIN Data-link harness (Black connector).




23

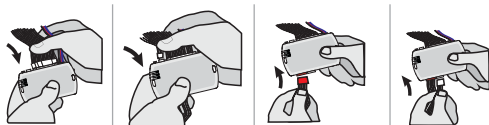

**Connect** the required remaining harnesses.


24

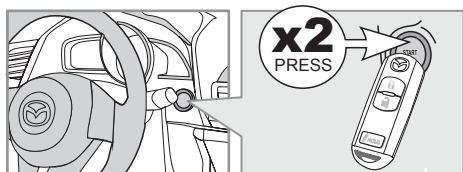

**Press** the START/STOP button twice to activate the vehicle's Ignition.

↳ The Blue LED will flash rapidly.

25

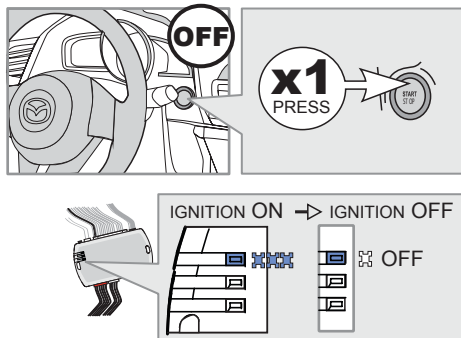

**Press** the START/STOP button once to deactivate the vehicle's Ignition.

↳ The Blue LED will turn OFF.



The module is now programmed.

REMOTE STARTER FUNCTIONALITY |



All doors must be closed.



Do not remote-start with the OEM remote inside the vehicle.



Never remote-start with a passenger inside the vehicle.



**Remote start** the vehicle.



*The module will shut down the vehicle as soon as a door is opened.*

STAND ALONE THAR-MAZ1 THARNESS INSTALLATION - 2 KEYS PROGRAMMING

ADDENDUM - SUGGESTED WIRING CONFIGURATION



**ONLY COMPATIBLE WITH AUTOMATIC TRANSMISSION VEHICLES.**



Vehicle functions supported in this diagram (functional if equipped)

VEHICLE	YEARS	Immobilizer bypass	T-Harness	Lock	Unlock	Arm	Disarm	Tachometer	Door Status	Trunk Status	Hood Status protection remote start	Hand-Brake Status	Foot-Brake Status	OEM Remote monitoring
<b>MAZDA</b> CX-5 <i>Push-to-Start - Automatic transmission only</i>	2013-2016	•	•	•	•	•	•	•	•	•	•	•	•	•



FIRMWARE VERSION

**85.[11]**

MINIMUM

To add the firmware version and the options, use the **FLASH LINK UPDATER** or **FLASH LINK MOBILE** tool, sold separately.

**IF THE VEHICLE IS NOT EQUIPPED WITH FUNCTIONAL HOOD PIN:**

**A11**

**OFF**

Hood trigger (Output Status).



Program bypass option:

UNIT OPTION

DESCRIPTION

**C1**

OEM Remote status (Lock/Unlock) monitoring

**NOTES**



**THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.**



**Parts required** (Not included)

1X 10 AMP Fuse

**MANDATORY INSTALL**

\*HOOD PIN



**HOOD STATUS:** THE HOOD PIN SWITCH MUST BE INSTALLED IF THE VEHICLE CAN BE REMOTE STARTED WITH THE HOOD OPEN, SET FUNCTION **A11** TO OFF.

**A11**

**OFF**

**Notice:** the installation of safety elements are mandatory. The hood pin is an essential security element and must be installed.

**THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.**

**PARTS REQUIRED (NOT INCLUDED)**


1x **FLASH LINK UPDATER, FLASH LINK MANAGER**  
SOFTWARE | PROGRAMME  
1x Microsoft Windows Computer with Internet connection

OR


1x **FLASH LINK MOBILE, FLASH LINK MOBILE APP**  
Smartphone *Android* or *iOS* with Internet connection (*provider charges may apply*).  
1x

**MANDATORY**

HOOD PIN



REMOTE START SAFETY OVERRIDE SWITCH

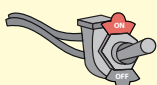
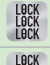





VALET SWITCH


Part #: RSPB available, Sold separately.



**Notice:** the installation of safety elements are mandatory. The hood pin and the valet switch are essential security elements and must be installed.


**STAND ALONE CONFIGURATION**

	Program bypass option	UNIT OPTION	DESCRIPTION
	<b>OEM Remote Stand Alone Remote Starter:</b>	<b>D1.10</b> 	<b>By default, LOCK, LOCK, LOCK</b> Par défaut, VERROUILLE, VERROUILLE, VERROUILLE
		<b>D1.1</b> 	
	<b>Program bypass option with oem remote:</b>	<b>C1</b>	OEM Remote Monitoring
	<b>Program bypass option with RF KIT antenna:</b>	<b>H1 to H6</b>	Supported RF Kits and <b>select RF Kit</b>

**REMOTE STARTER FUNCTIONALITY**

 All doors must be closed.

**3X**   Press the OEM remote's Lock button 3x to remote-start (or remote-stop) the vehicle.

 The vehicle will START.

**REMOTE STARTER DIAGNOSTICS**

MODULE RED LED	
x2 flash :	Brake ON
x3 flash :	No tach
x4 flash :	Ignition before start
x5 flash :	Hood Open
PARKING LIGHTS	
x4 flash:	FOB in car
x5 flash:	Hood open
x6 flash:	Brake ON
x7 flash:	Door open
x8 flash:	Bad Encryption/ key code

**REMOTE STARTER WARNING CARD**



**CUT THIS WARNING CARD AND STICK IT ON A VISIBLE PLACE:**  
or use the package RSPB, Sold separately.

**WARNING | ATTENTION**


**REMOTE STARTER**

THE VEHICLE CAN BE STARTED BY EITHER: PRESSING THE LOCK BUTTON ON THE OEM REMOTE 3 TIMES CONSECUTIVELY OR BY A SMARTPHONE. **TURN ON** THE SAFETY SWITCH LOCATED UNDER THE DASHBOARD BEFORE WORKING ON THE VEHICLE.


DESCRIPTION




① Under steering column, START-STOP unit

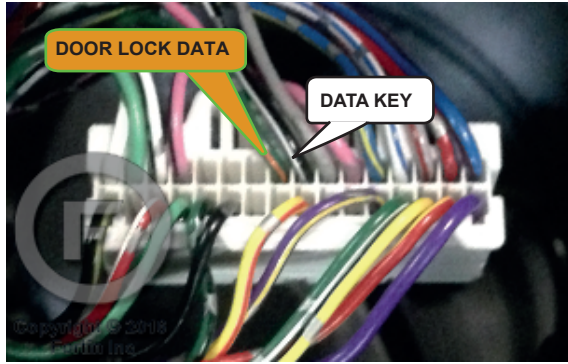


③ At parking lights switch

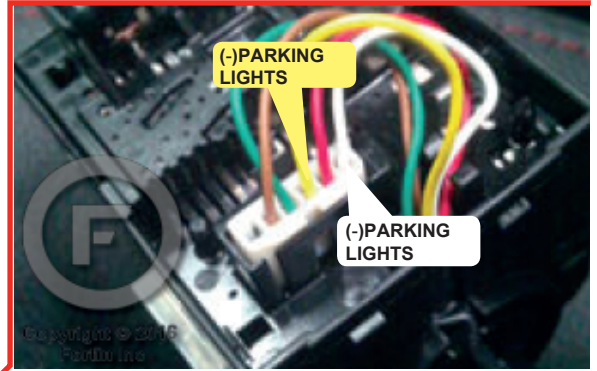

② Under steering column, START-STOP unit

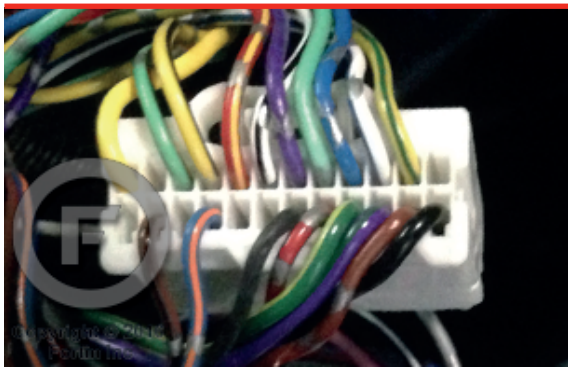

④ Engine compartment - without OEM ALARM

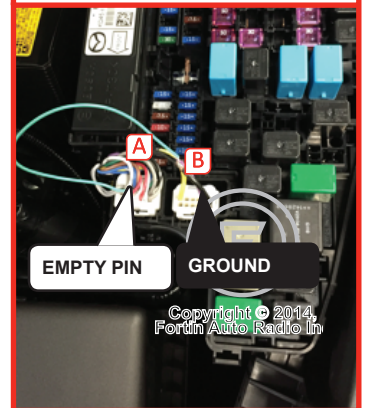



# ATTENTION


Before disconnecting a module, a computer or a control unit from a vehicle: Always disconnect the negative terminal from the vehicle's battery.

In these vehicles, the factory keyless entry module is sensitive to interference and may cease to operate if some precautions are not taken. Disconnect the (-) terminal of the battery prior to disconnecting the connectors at the smartkey module below the steering wheel to avoid damage to the smartkey entry module.

Avant de débrancher un module, un ordinateur ou une unité de contrôle d'un véhicule: il faut toujours débrancher la borne négative de la batterie du véhicule.


Dans ce véhicule, le module d'entrée sans clé de l'usine est sensible aux interférences et peut cesser de fonctionner si certaines précautions ne sont pas prises. Débrancher la borne (-) de la batterie avant de déconnecter le module de clé intelligente sous le volant pour éviter de l'endommager.

1

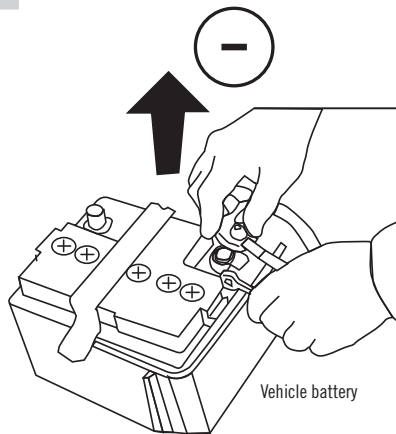


**Disconnect** the (-) terminal of the battery.

2

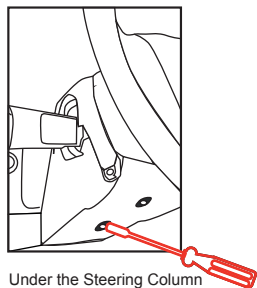


Under the Steering Column

1 Unscrew.

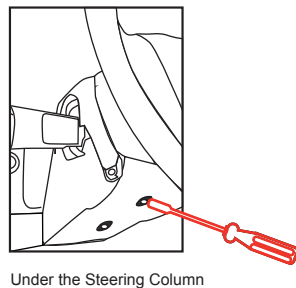


Under the Steering Column

2 Unscrew

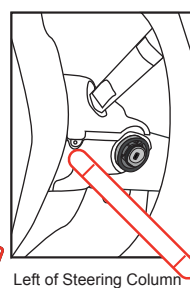


Left of Steering Column

3 Onclip

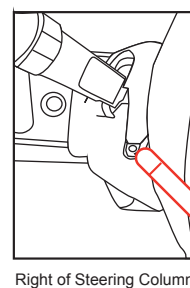

Right of Steering Column

4 Onclip

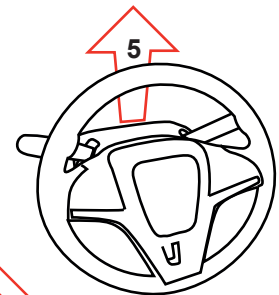


5 Gently pull up the cover of the steering column.

3


**Make** the following connections.

CONTINUED NEXT PAGE

4

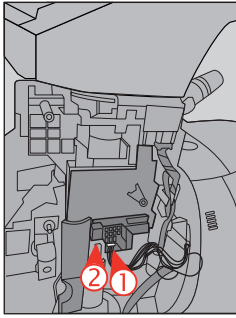

Under steering column, START-STOP unit.

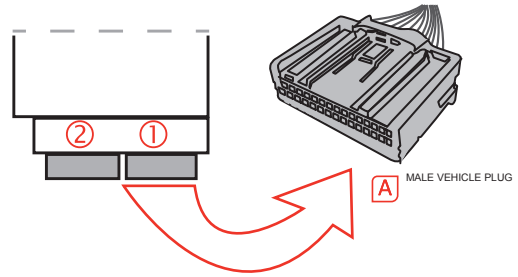


Disconnect the connector

A

5


Under steering column, START-STOP unit.

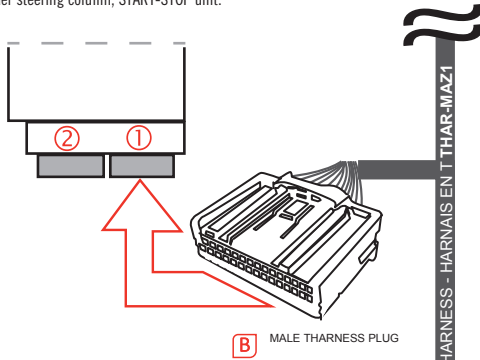

Connect the connector

B

6

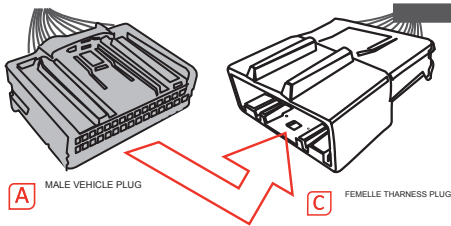

Connect the connector

into connector



A

C


7

Make other required connections.

**AUTOMATIC TRANSMISSION WIRING CONNECTION**

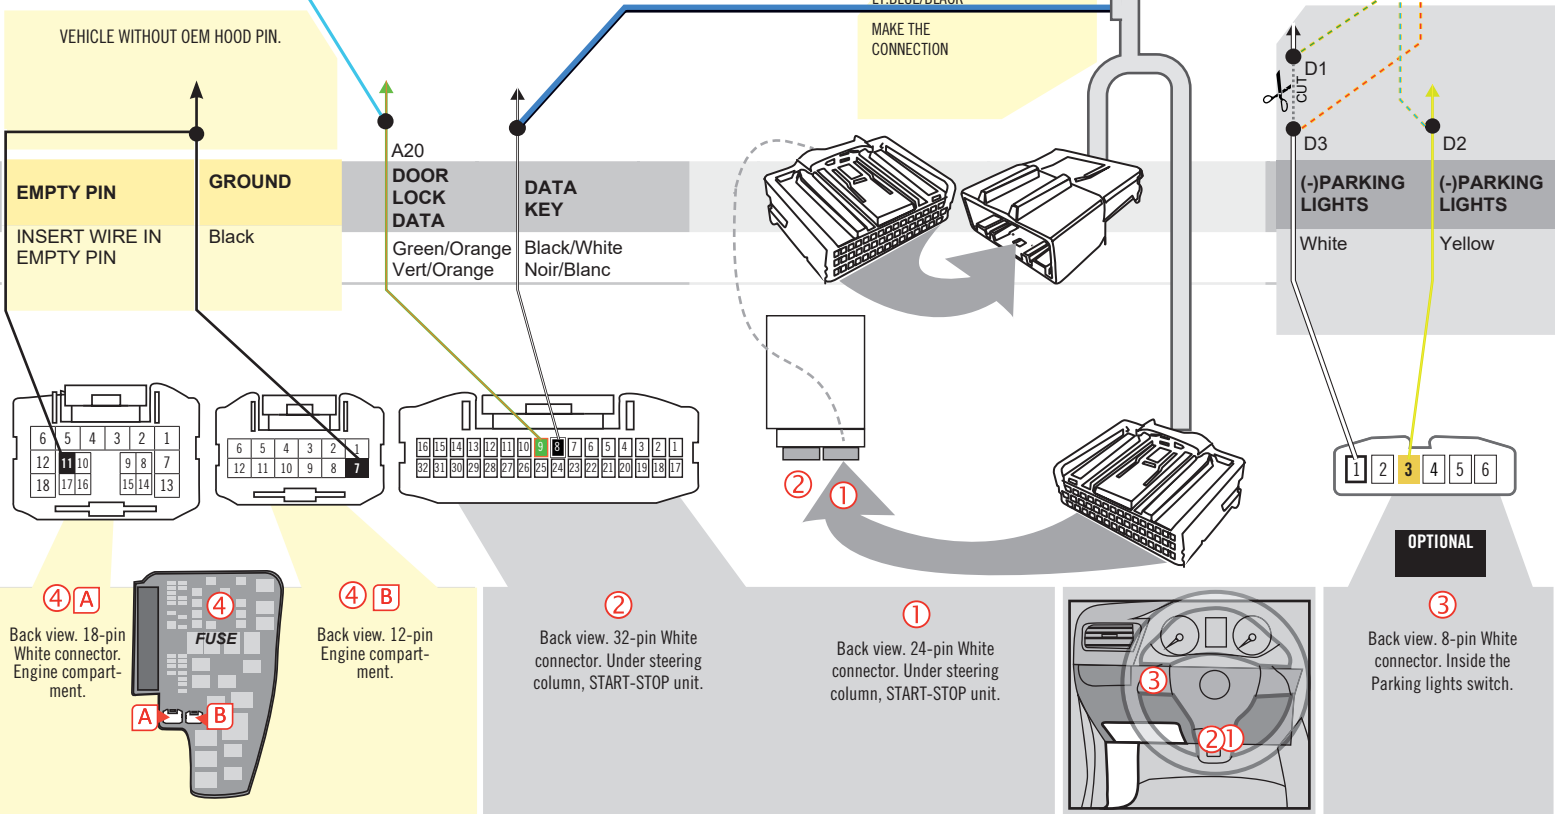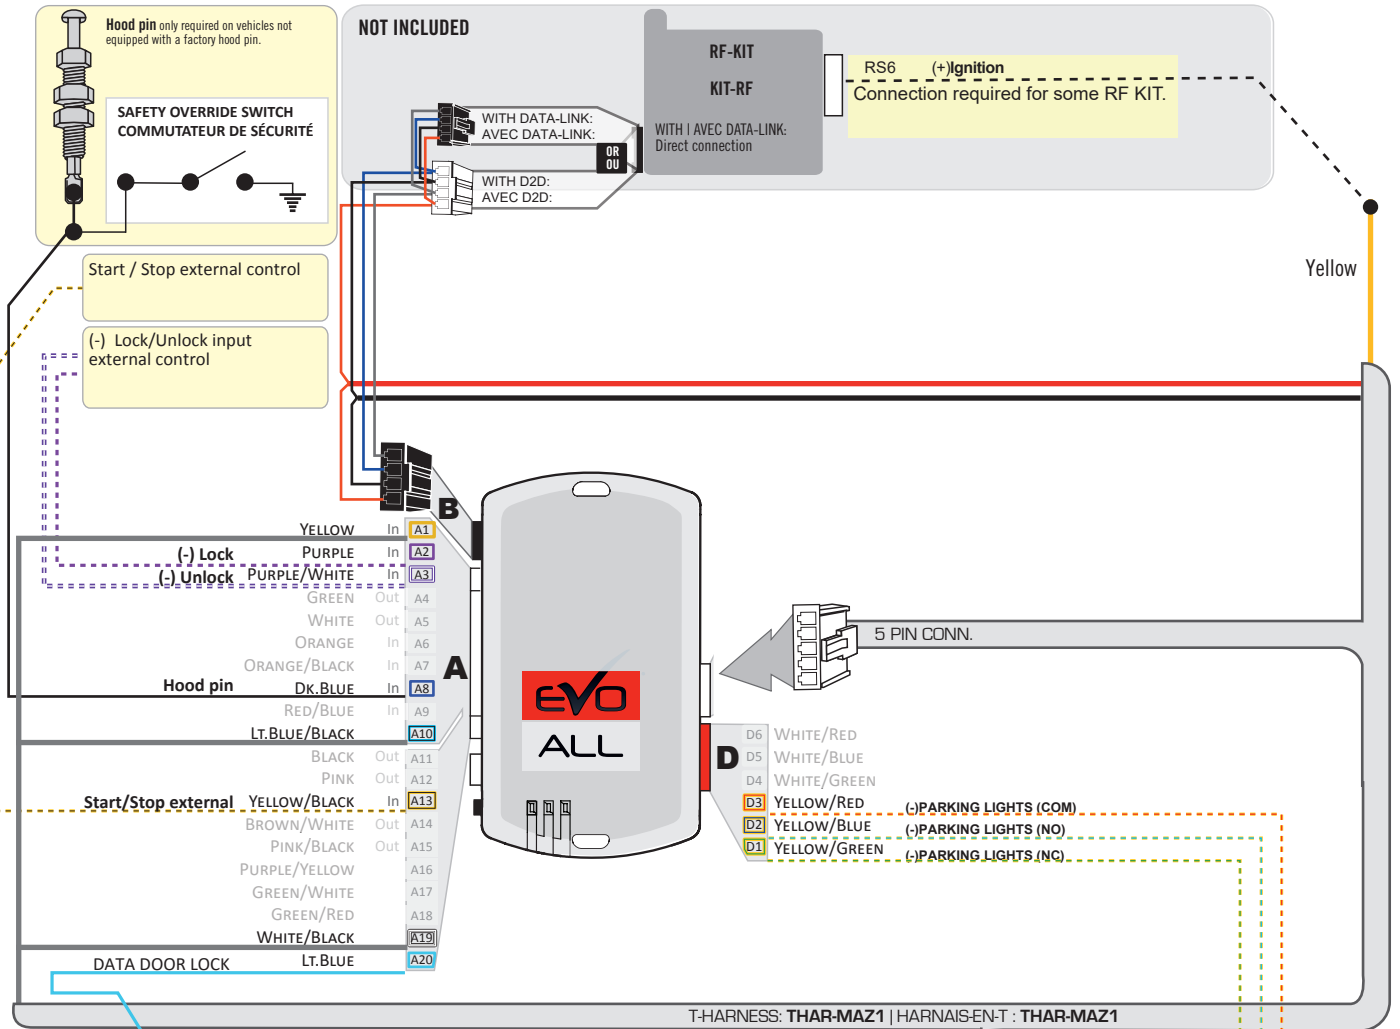



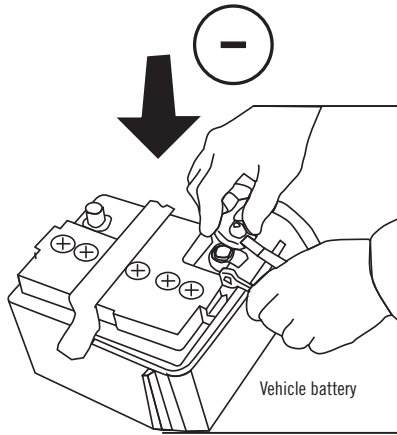

**Reconnect** the (-) terminal of the battery.

CONTINUED NEXT PAGE

# x3 max.


**Do not program more than 3 modules on the same vehicle.**

If more than 3 modules are programmed to a vehicle, it is possible that the remote car starter will never be functional on this vehicle.

If all programming steps were successful and the vehicle cannot be remote started :


- Double check all connections using the installation diagram above as a reference.

If no connection errors can be found then please contact technical support assistance.

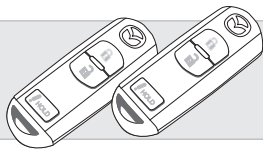

**Make sure** to have two valide vehicle key.


1

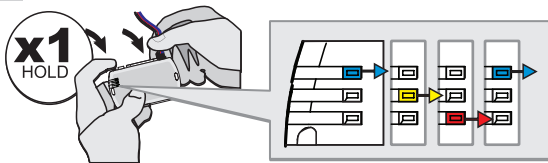

**Press and hold** the programming button:  
**Connect** the 4-PIN Data-link harness (Black connector).


↳ The Blue, Red, Yellow and Blue & Red LEDs will alternatively illuminate.

2

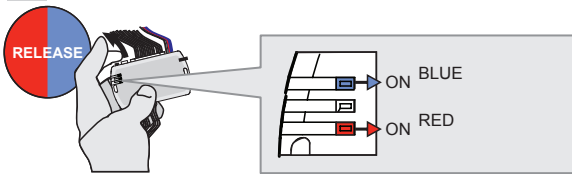


**Release** the programming button when the Blue & Red LEDs are ON.

 *If the LED are not solid BLUE and RED disconnect the 4-PIN Data-link harness (Black connector) and go back to step1.*




3

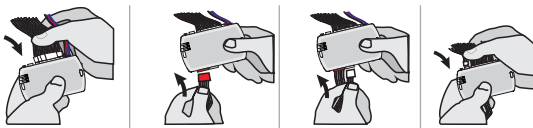

**Connect** the required remaining harnesses.

4

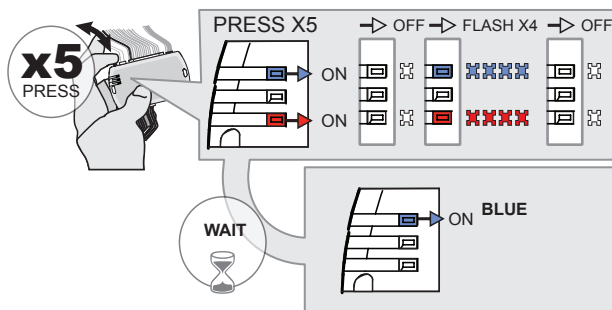

**Press and release** the programming button five times (5x).

↳ The Red & Blue LEDs will alternate between 4 flashes and a pause.


↳ **Wait** for the Blue LED to turn ON.

KEY BYPASS PROGRAMMING PROCEDURE 2/5




KEY #1

5

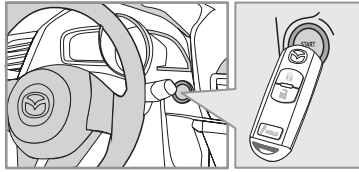


Place the 1st OEM remote close to the front of the START/STOP button exactly as shown.

6

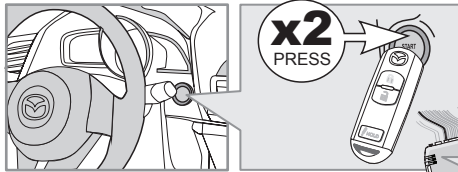


Press the START/STOP button twice to activate the vehicle's Ignition.

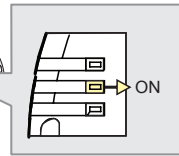


↳ The Yellow LED will turn ON.

7

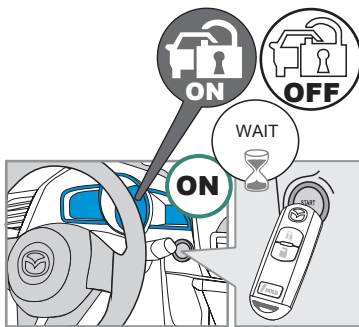

 If the Blue LED is ON solid disconnect the 4-PIN Data-link harness (Black connector) and go back to step 1.




Wait for the security indicator to turn OFF (around 3 seconds).

8

IMMEDIATELY



Press the START/STOP button once to deactivate the vehicle's Ignition.

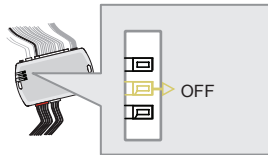


↳ The Yellow Led will turn OFF.




KEY #2

9

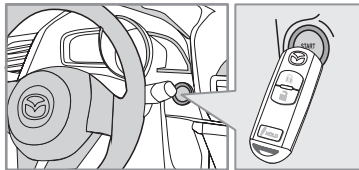


Place the 2nd OEM remote close to the front of the START/STOP button exactly as shown.

10

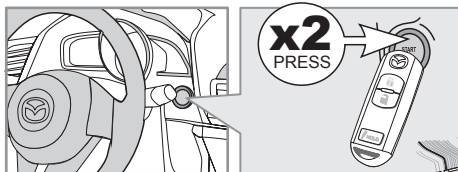


Press the START/STOP button twice to activate the vehicle's Ignition.

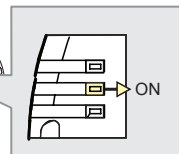


↳ The Yellow LED will turn ON.

KEY BYPASS PROGRAMMING PROCEDURE 3/6




**KEY#2**

**11**

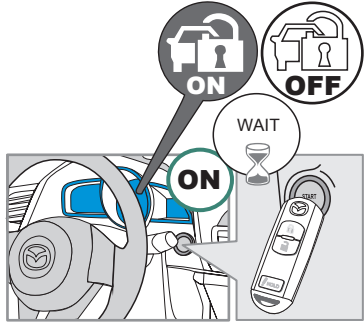

Wait for the security indicator to turn OFF (around 3 seconds).


**12**

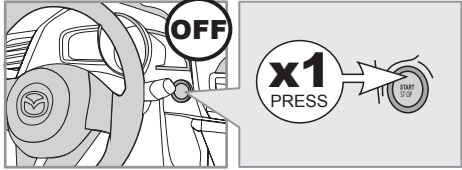


**IMMEDIATELY**

Press the START/STOP button once to deactivate the vehicle's Ignition.


↳ The Yellow Led will turn OFF.

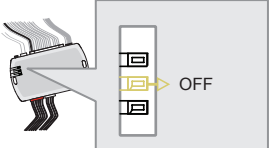


**13**

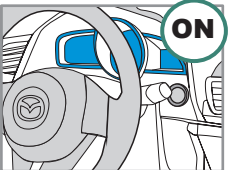

The vehicle's ignition will turn ON

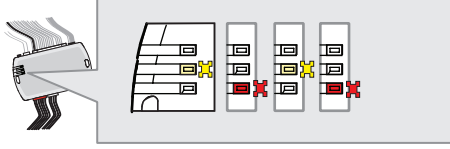


↳ The Yellow and Red LED's will alternatively illuminate.

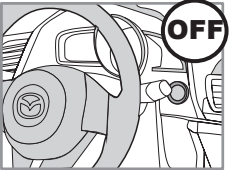

The vehicle's Ignition will turn OFF.


**14**

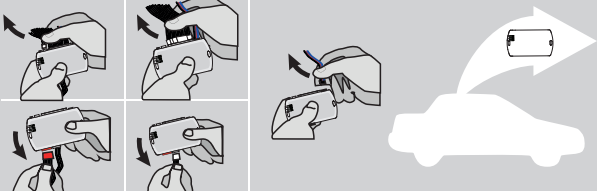

Disconnect all the connectors and after the Data-Link (4-pins) connector.

**KEY BYPASS PROGRAMMING PROCEDURE 4/6**


15

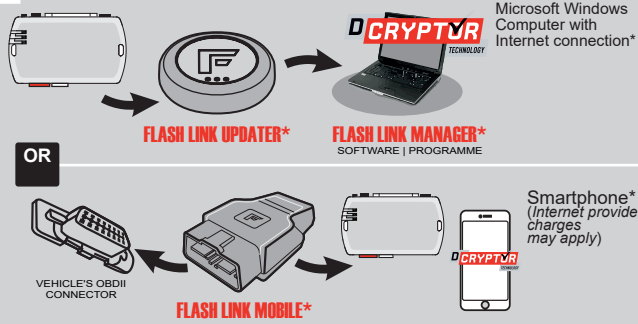

Use the tool: **FLASH LINK UPDATER** or **FLASH LINK MOBILE** to visit the DCRYPTOR menu.

\*Parts required (not included)

16

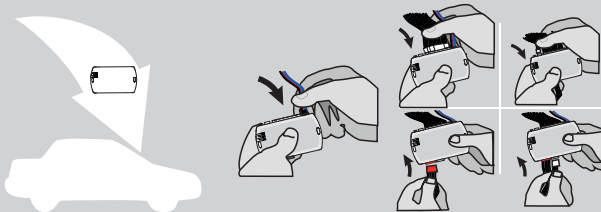


**AFTER DCRYPTOR PROGRAMMING COMPLETED**  
Go back to the vehicle and **reconnect** the 4-Pin (Data-Link) connector and after, all the remaining connector.

17

**1 - 12**    Repeat step 1 to 12.

18

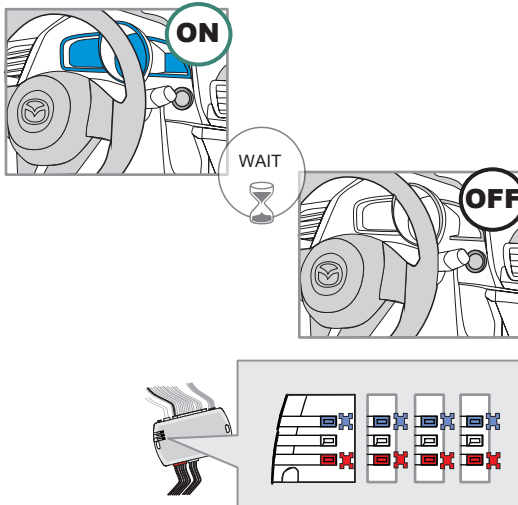


The vehicle's ignition will turn ON

The vehicle's Ignition will turn OFF.


↳ The Blue and Red LEDs will flash.

 19



Disconnect all Harness

20

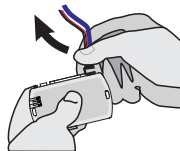


Next:

Disconnect the 4-PIN Data-link harness (Black connector).

CAN PROGRAMMING PROCEDURE


21

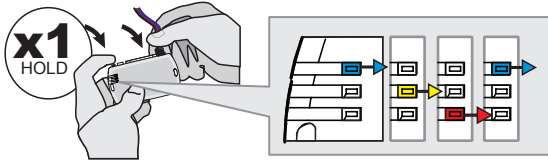

Press and hold the programming button:  
Connect the 4-PIN Data-link harness (Black connector).


↳ The Blue, Red, Yellow and Blue & Red LEDs will alternatively illuminate.

22

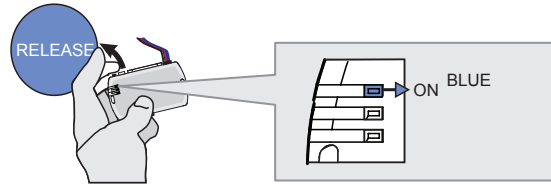


Release the programming button when the Blue LED is ON.

 If the Blue LED is not ON solid disconnect the 4-PIN Data-link harness (Black connector).




23

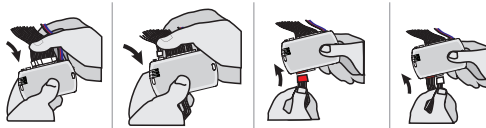


Connect the required remaining harnesses.

24

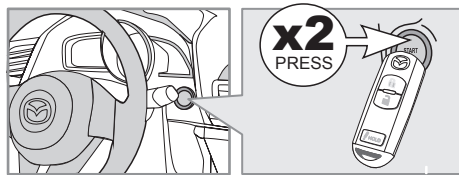


Press the START/STOP button twice to turn ON the vehicle's Ignition.

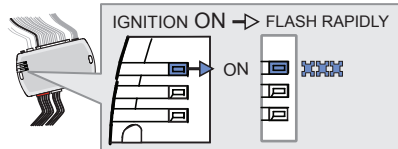


↳ The Blue LED will flash rapidly.

25

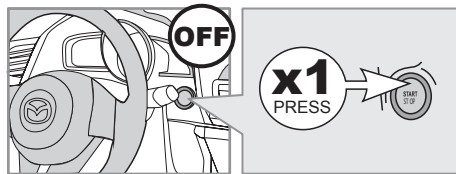

Press the START/STOP button once to turn OFF the vehicle's Ignition.

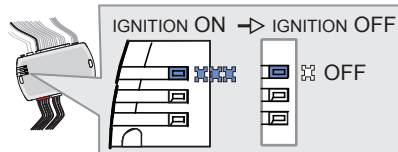


↳ The Blue LED will turn OFF.



The module is now programmed.

REMOTE STARTER FUNCTIONALITY |

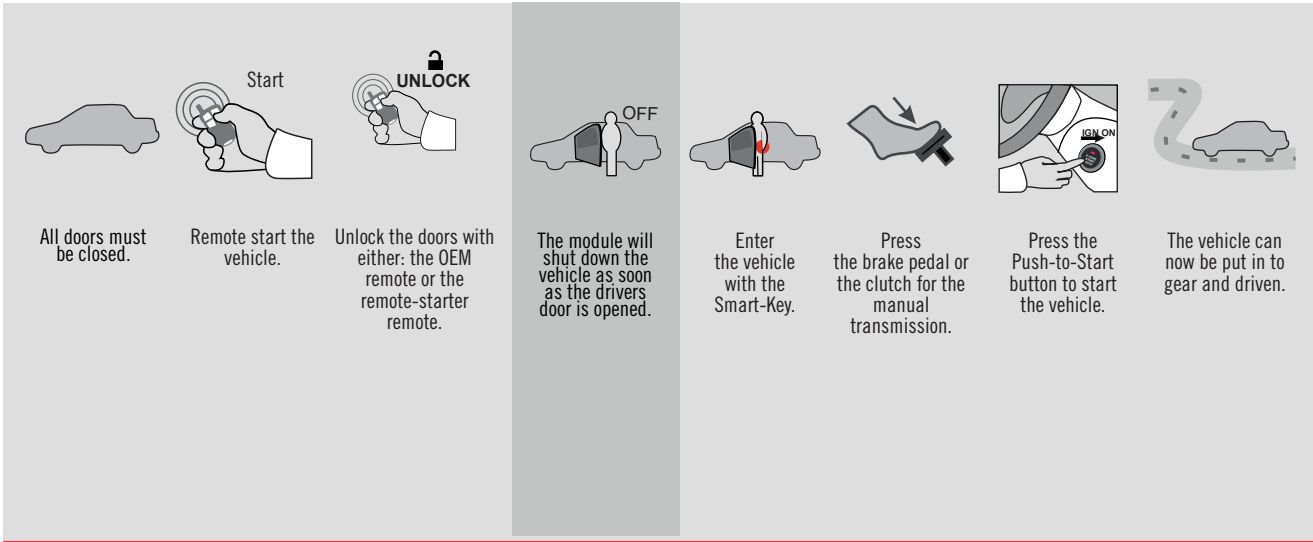

STAND ALONE THAR-MAZ1 THARNESS INSTALLATION - 2 KEYS PROGRAMMING

ADDENDUM - SUGGESTED WIRING CONFIGURATION



**ONLY COMPATIBLE WITH AUTOMATIC TRANSMISSION VEHICLES.**



Vehicle functions supported in this diagram (functional if equipped)

VEHICLE	YEARS	Immobilizer bypass	T-Harness	Lock	Unlock	Arm	Disarm	Tachometer	Door Status	Trunk Status	Hood Status protection remote start	Hand-Brake Status	Foot-Brake Status	OEM Remote monitoring
<b>MAZDA</b>														
CX-5 <i>Push-to-Start - Automatic transmission only</i> <i>Push-to-Start - transmission automatique seulement</i>	2017-2020	•	•	•	•	•	•	•	•	•	•	•	•	•



FIRMWARE VERSION

**85.[11]**

MINIMUM

To add the firmware version and the options, use the **FLASH LINK UPDATER** or **FLASH LINK MOBILE** tool, sold separately.

**IF THE VEHICLE IS NOT EQUIPPED WITH FUNCTIONAL HOOD PIN:**

**A11**

**OFF**

Hood trigger (Output Status).



Program bypass option:

UNIT OPTION

DESCRIPTION

**C1**

OEM Remote status (Lock/Unlock) monitoring

**NOTES**



**THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.**



**Parts required** (Not included)

1X 10 AMP Fuse

**MANDATORY INSTALL**

\*HOOD PIN



**HOOD STATUS:** THE HOOD PIN SWITCH MUST BE INSTALLED IF THE VEHICLE CAN BE REMOTE STARTED WITH THE HOOD OPEN, SET FUNCTION **A11** TO OFF.

**A11**

**OFF**

**Notice:** the installation of safety elements are mandatory. The hood pin is an essential security element and must be installed.

**THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.**



**PARTS REQUIRED (NOT INCLUDED)**


1x **FLASH LINK UPDATER, FLASH LINK MANAGER**  
SOFTWARE | PROGRAMME  
1x Microsoft Windows Computer with Internet connection

OR


1x **FLASH LINK MOBILE, FLASH LINK MOBILE APP**  
Smartphone *Android* or *iOS* with Internet connection (*provider charges may apply*).  
1x

**MANDATORY**

HOOD PIN



REMOTE START SAFETY OVERRIDE SWITCH

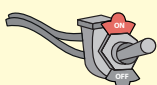
 





VALET SWITCH


Part #: RSPB available, Sold separately.



**Notice:** the installation of safety elements are mandatory. The hood pin and the valet switch are essential security elements and must be installed.


**STAND ALONE CONFIGURATION**

	Program bypass option	UNIT OPTION	DESCRIPTION
	<b>OEM Remote Stand Alone Remote Starter:</b>	<b>D1.10</b> 	<b>By default, LOCK, LOCK, LOCK</b> Par défaut, VERROUILLE, VERROUILLE, VERROUILLE
		<b>D1.1</b> 	
	<b>Program bypass option with oem remote:</b>	<b>C1</b>	OEM Remote Monitoring
	<b>Program bypass option with RF KIT antenna:</b>	<b>H1 to H6</b>	Supported RF Kits and <b>select RF Kit</b>

**REMOTE STARTER FUNCTIONALITY**

 All doors must be closed.


**3X**   Press the OEM remote's Lock button 3x to remote-start (or remote-stop) the vehicle.

 The vehicle will START.

**REMOTE STARTER DIAGNOSTICS**

MODULE RED LED	
x2 flash :	Brake ON
x3 flash :	No tach
x4 flash :	Ignition before start
x5 flash :	Hood Open
PARKING LIGHTS	
x4 flash:	FOB in car
x5 flash:	Hood open
x6 flash:	Brake ON
x7 flash:	Door open
x8 flash:	Bad Encryption/ key code

**REMOTE STARTER WARNING CARD**



**CUT THIS WARNING CARD AND STICK IT ON A VISIBLE PLACE:**  
or use the package RSPB, Sold separately.

**WARNING | ATTENTION**


**REMOTE STARTER**

THE VEHICLE CAN BE STARTED BY EITHER: PRESSING THE LOCK BUTTON ON THE OEM REMOTE 3 TIMES CONSECUTIVELY OR BY A SMARTPHONE. **TURN ON** THE SAFETY SWITCH LOCATED UNDER THE DASHBOARD BEFORE WORKING ON THE VEHICLE.

DESCRIPTION


Under steering column, START-STOP unit.

①

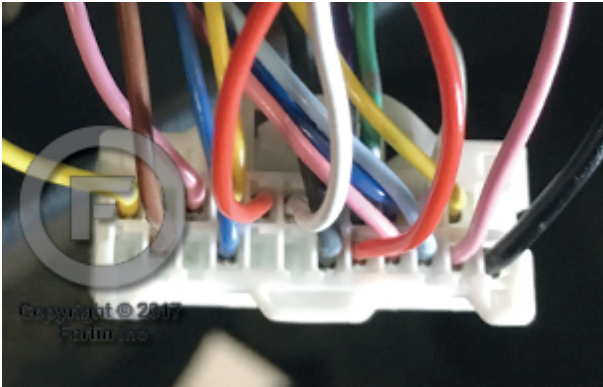



Under steering column, START-STOP unit.

②

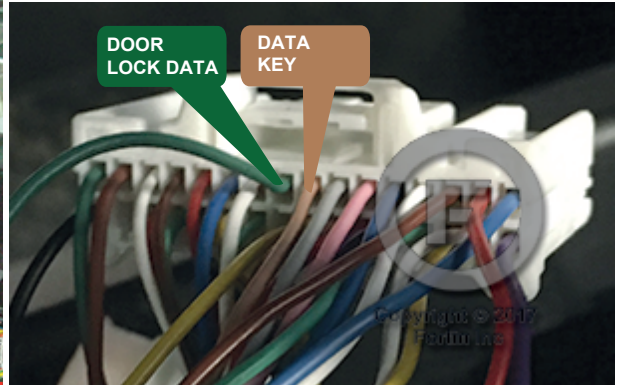


Inside the Parking Light switch

③

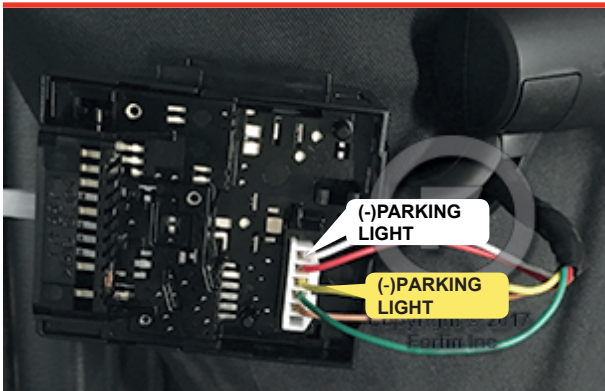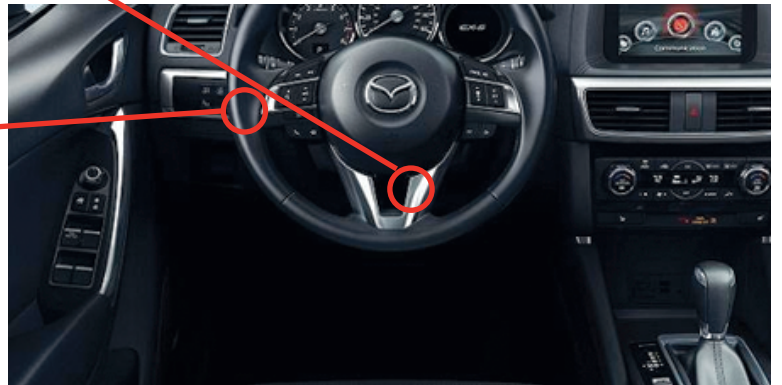

Engine compartment - without OEM ALARM

④

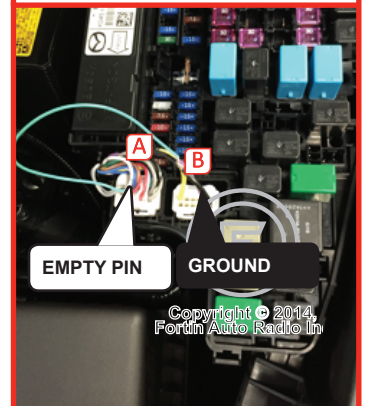




# ATTENTION

Before disconnecting a module, a computer or a control unit from a vehicle: Always disconnect the negative terminal from the vehicle's battery.


In these vehicles, the factory keyless entry module is sensitive to interference and may cease to operate if some precautions are not taken. Disconnect the (-) terminal of the battery prior to disconnecting the connectors at the smartkey module below the steering wheel to avoid damage to the smartkey entry module.

1

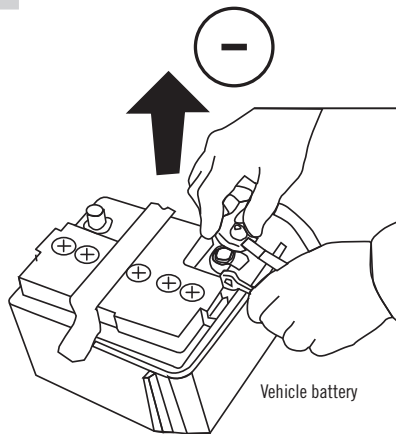


Disconnect the (-) terminal of the battery.

2

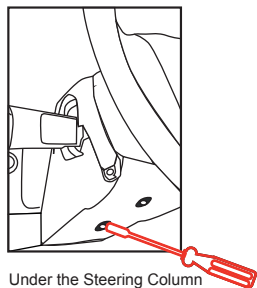


Under the Steering Column

1 Unscrew.

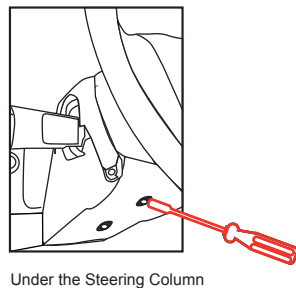


Under the Steering Column

2 Unscrew

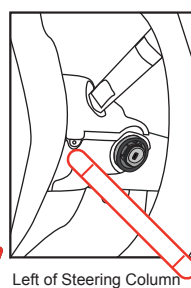


Left of Steering Column

3 Onclip

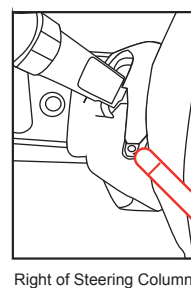

Right of Steering Column

4 Onclip

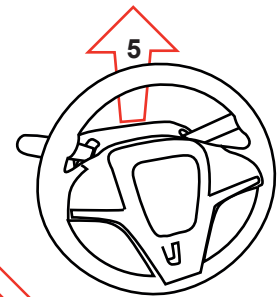


5 Gently pull up the cover of the steering column.

3


Make the following connections.

CONTINUED NEXT PAGE

4

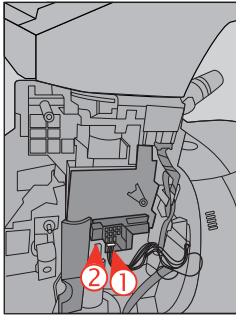

Under steering column, START-STOP unit.

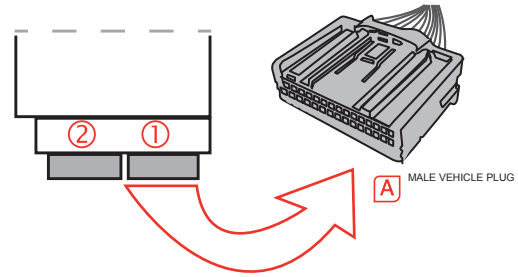


Disconnect the connector

A

5


Under steering column, START-STOP unit.

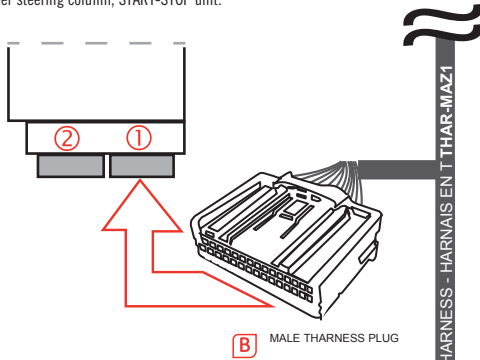

Connect the connector

B

6

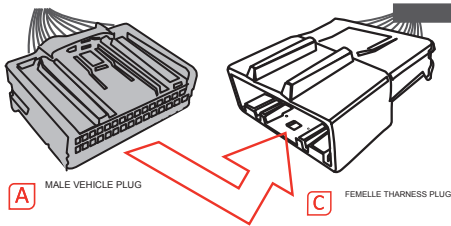

Connect the connector

A



into connector


C

7

Make other required connections.

**AUTOMATIC TRANSMISSION WIRING CONNECTION**

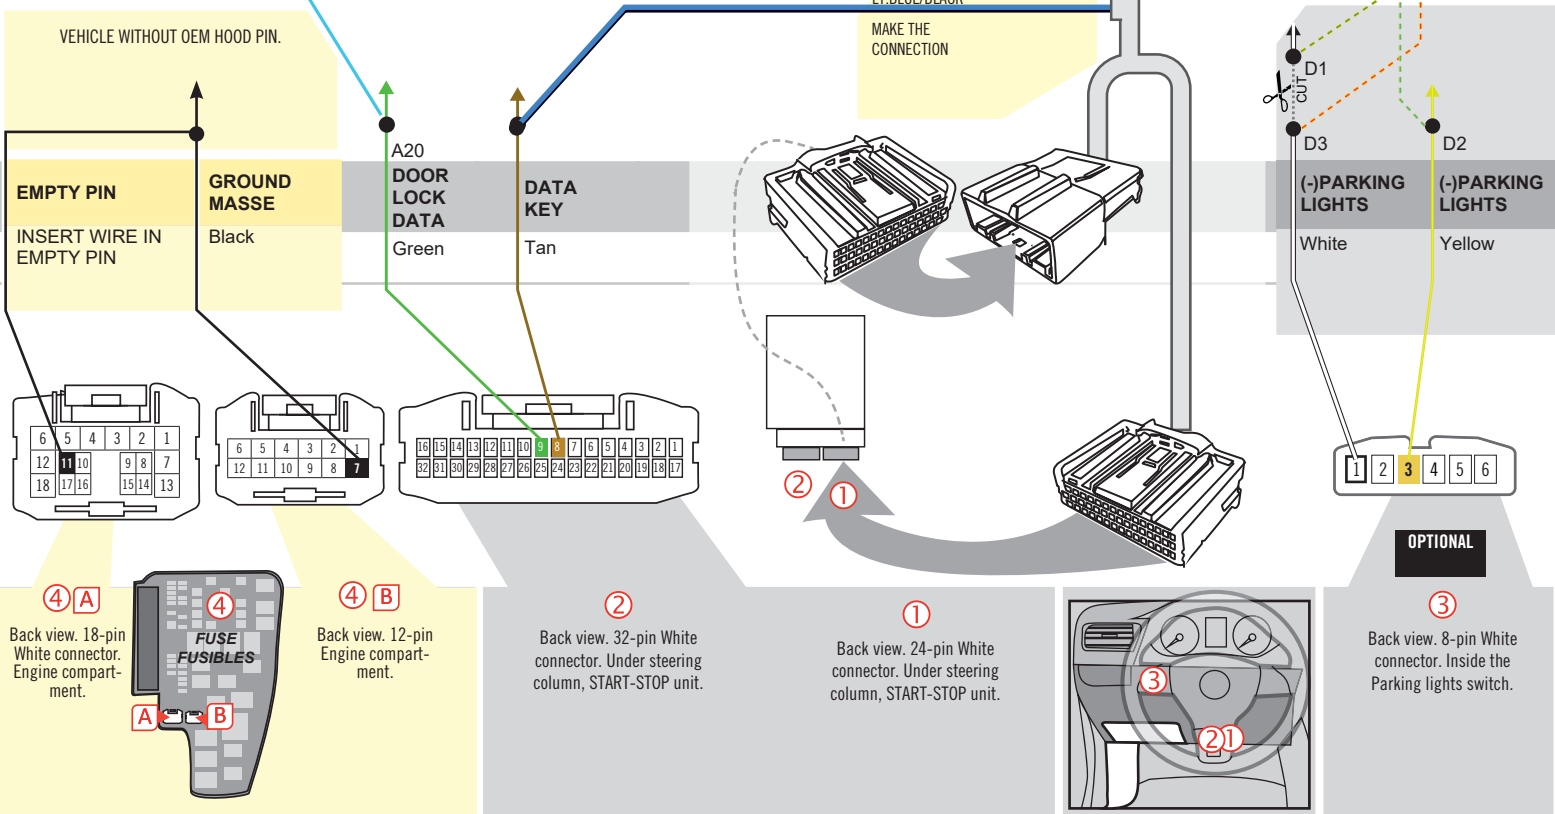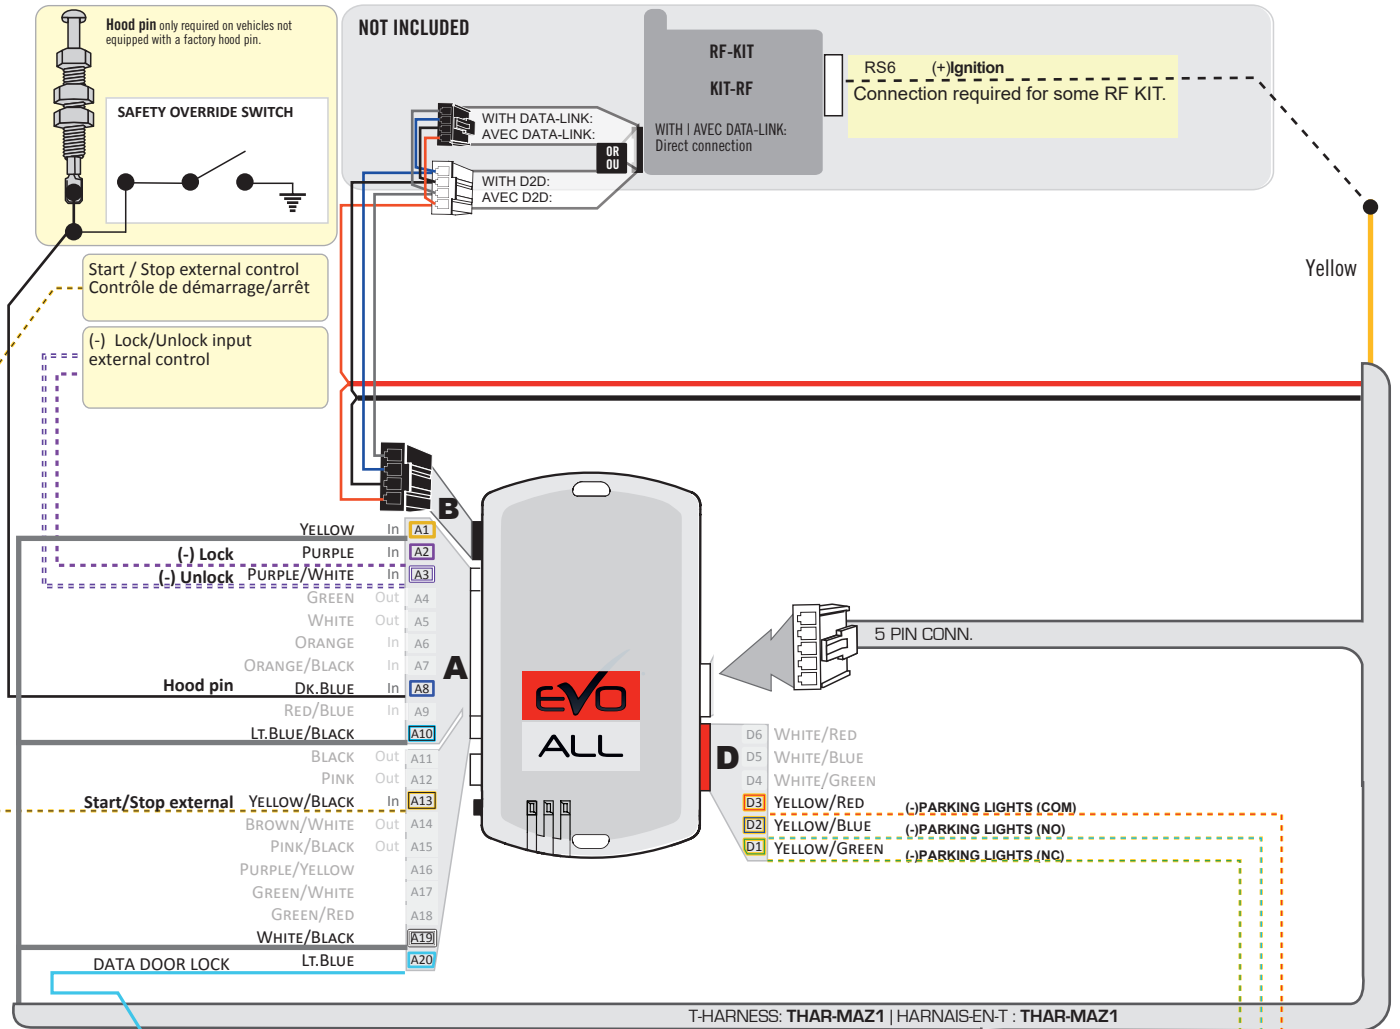

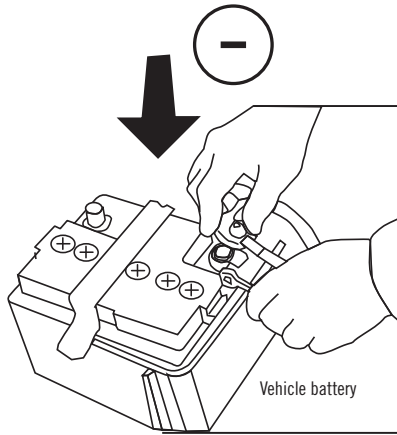

**Reconnect** the (-) terminal of the battery.

CONTINUED NEXT PAGE

# x3 max.


**Do not program more than 3 modules on the same vehicle.**

If more than 3 modules are programmed to a vehicle, it is possible that the remote car starter will never be functional on this vehicle.

If all programming steps were successful and the vehicle cannot be remote started :


- Double check all connections using the installation diagram above as a reference.

If no connection errors can be found then please contact technical support assistance.

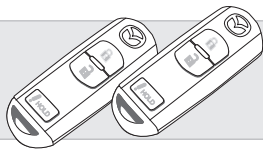

**Make sure** to have two valide vehicle key.


1

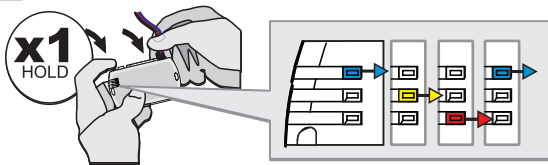

**Press and hold** the programming button:  
**Connect** the 4-PIN Data-link harness (Black connector).


↳ The Blue, Red, Yellow and Blue & Red LEDs will alternatively illuminate.

2

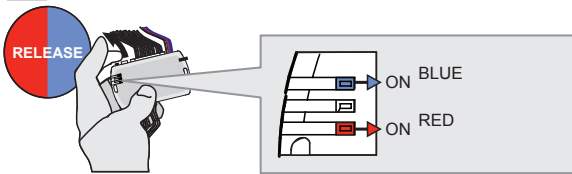


**Release** the programming button when the Blue & Red LEDs are ON.

 *If the LED are not solid BLUE and RED disconnect the 4-PIN Data-link harness (Black connector) and go back to step1.*




3

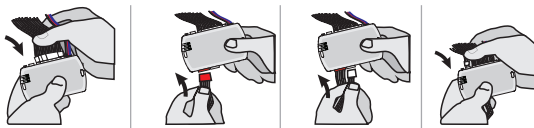

**Connect** the required remaining harnesses.

4

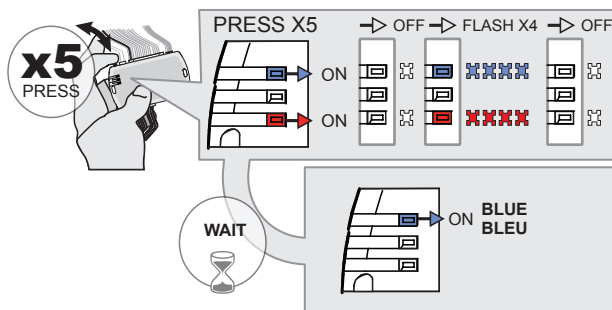

**Press and release** the programming button five times (5x).

↳ The Red & Blue LEDs will alternate between 4 flashes and a pause.


↳ **Wait** for the Blue LED to turn ON.

KEY BYPASS PROGRAMMING PROCEDURE 2/5



KEY #1

5

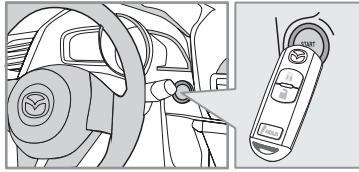


Place the 1st OEM remote close to the front of the START/STOP button exactly as shown.

6




Press the START/STOP button twice to activate the vehicle's Ignition.

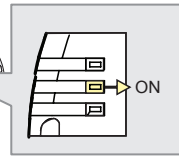


↳ The Yellow LED will turn ON.

7

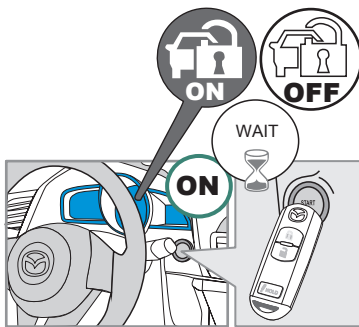

 If the Blue LED is ON solid disconnect the 4-PIN Data-link harness (Black connector) and go back to step 1.




Wait for the security indicator to turn OFF (around 3 seconds).

8

**IMMEDIATELY**



Press the START/STOP button once to deactivate the vehicle's Ignition.

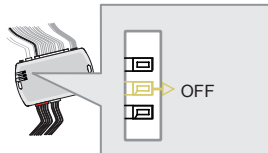


↳ The Yellow Led will turn OFF.

9



KEY #2

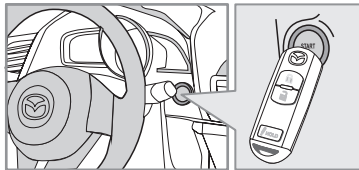


Place the 2nd OEM remote close to the front of the START/STOP button exactly as shown.

10




Press the START/STOP button twice to activate the vehicle's Ignition.

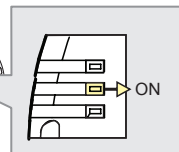

↳ The Yellow LED will turn ON.




KEY BYPASS PROGRAMMING PROCEDURE 3/6




KEY #2

**11**

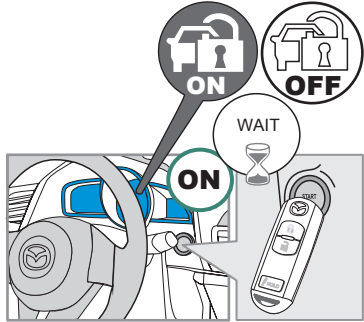

Wait for the security indicator to turn OFF (around 3 seconds).

**12**

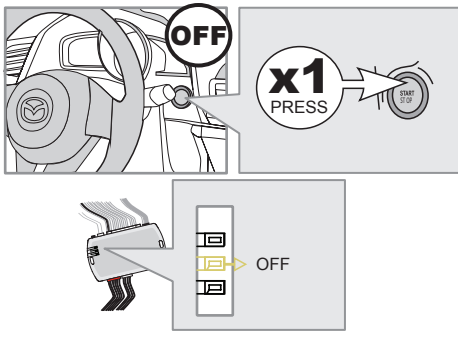


**IMMEDIATELY**


Press the START/STOP button once to deactivate the vehicle's Ignition.

↳ The Yellow Led will turn OFF.


**13**

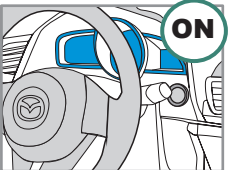

The vehicle's ignition will turn ON

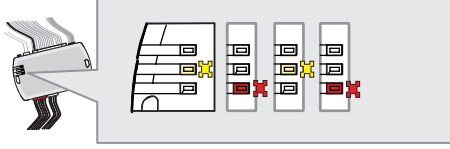


↳ The Yellow and Red LED's will alternatively illuminate.

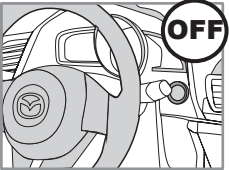

The vehicle's Ignition will turn OFF.


**14**

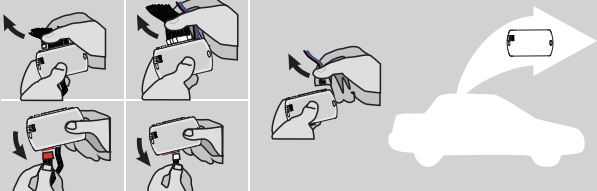

Disconnect all the connectors and after the Data-Link (4-pins) connector.

**KEY BYPASS PROGRAMMING PROCEDURE 4/6**


15

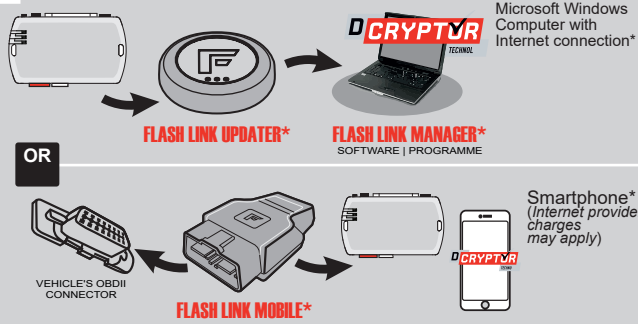

Use the tool: **FLASH LINK UPDATER** or **FLASH LINK MOBILE** to visit the DCryptor menu.

\*Parts required (not included)

16

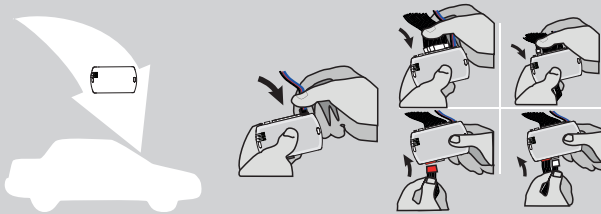


**AFTER DCRYPTOR PROGRAMMING COMPLETED**  
Go back to the vehicle and **reconnect** the 4-Pin (Data-Link) connector and after, all the remaining connector.

17



Repeat step 1 to 12.

18

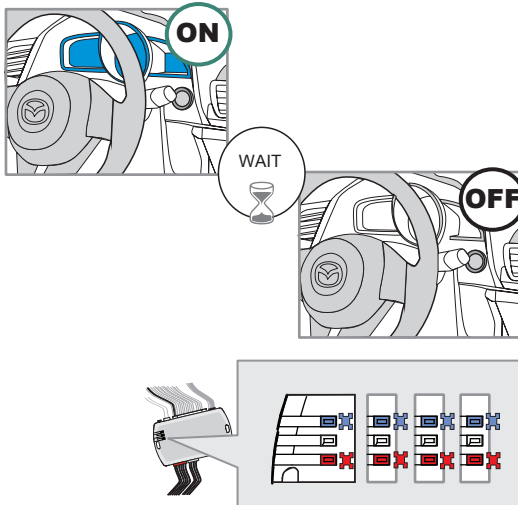


The vehicle's ignition will turn ON

The vehicle's Ignition will turn OFF.


↳ The Blue and Red LEDs will flash.

 19



Disconnect all Harness

20

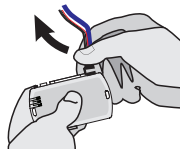


Next:

Disconnect the 4-PIN Data-link harness (Black connector).

CAN PROGRAMMING PROCEDURE


21

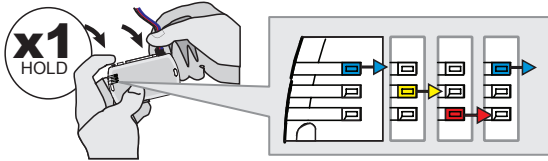

Press and hold the programming button:  
Connect the 4-PIN Data-link harness (Black connector).


↳ The Blue, Red, Yellow and Blue & Red LEDs will alternatively illuminate.

22

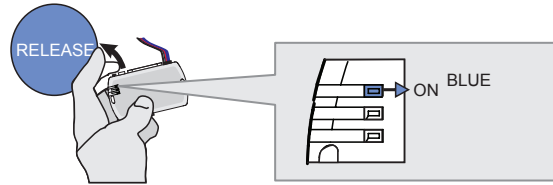


Release the programming button when the Blue LED is ON.

 If the Blue LED is not ON solid disconnect the 4-PIN Data-link harness (Black connector).



23

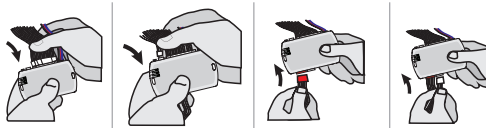


Connect the required remaining harnesses.

24




Press the START/STOP button twice to turn ON the vehicle's Ignition.

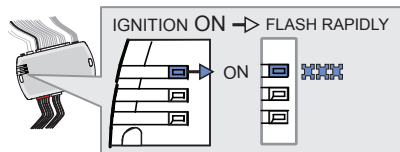


↳ The Blue LED will flash rapidly.

25

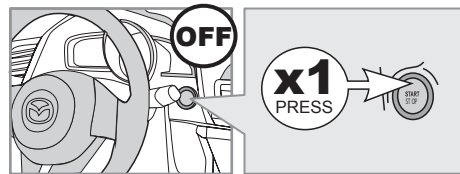

Press the START/STOP button once to turn OFF the vehicle's Ignition.

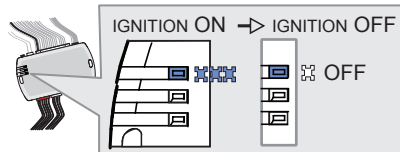


↳ The Blue LED will turn OFF.



The module is now programmed.

REMOTE STARTER FUNCTIONALITY |

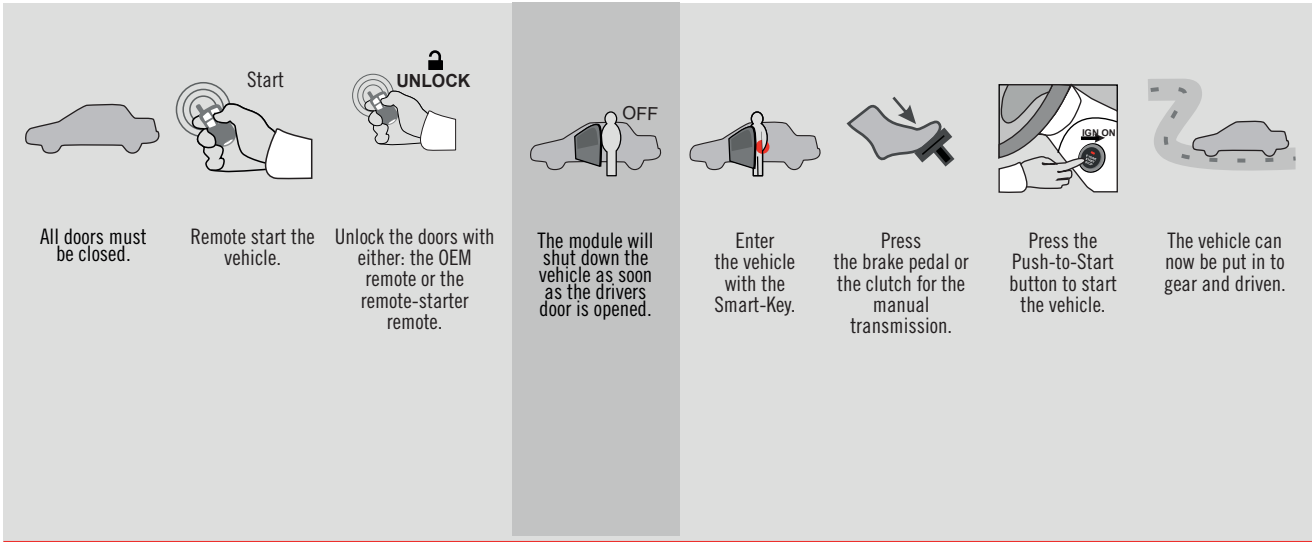

STAND ALONE THAR-MAZ1 THARNESS INSTALLATION - 2 KEYS PROGRAMMING

ADDENDUM - SUGGESTED WIRING CONFIGURATION



**ONLY COMPATIBLE WITH AUTOMATIC TRANSMISSION VEHICLES.**



Vehicle functions supported in this diagram (functional if equipped)

VEHICLE	YEARS	Immobilizer bypass	T-Harness	Lock	Unlock	Arm	Disarm	Tachometer	Door Status	Trunk Status	Hood Status protection remote start	Hand-Brake Status	Foot-Brake Status	OEM Remote monitoring
<b>MAZDA</b>														
MX5 <i>Push-to-Start - Automatic transmission</i>	2016-2019	•	•	•	•	•	•	•	•	•	•	•	•	•

FIRMWARE VERSION

85.[11]

MINIMUM

To add the firmware version and the options, use the **FLASH LINK UPDATER** or **FLASH LINK MOBILE** tool, sold separately.

IF THE VEHICLE IS NOT EQUIPPED WITH FUNCTIONAL HOOD PIN:	A11	OFF	Hood trigger (Output Status).
<p><b>Program bypass option:</b></p>	C1	UNIT OPTION	DESCRIPTION
			OEM Remote status (Lock/Unlock) monitoring
<p><b>Program bypass option (If equiped with OEM alarm):</b></p>	D2		Unlock before / Lock after (Disarm OEM alarm)

**NOTES**



**THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.**



**Parts required** (Not included)  
1X 10 AMP Fuse

**MANDATORY INSTALL**

\*HOOD PIN



**HOOD STATUS:** THE HOOD PIN SWITCH MUST BE INSTALLED IF THE VEHICLE CAN BE REMOTE STARTED WITH THE HOOD OPEN, SET FUNCTION A11 TO OFF.

A11

OFF

**Notice:** the installation of safety elements are mandatory. The hood pin is an essential security element and must be installed.

THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.

**PARTS REQUIRED (NOT INCLUDED)**

1x **FLASH LINK UPDATER**  
 1x **FLASH LINK MANAGER**  
SOFTWARE | PROGRAMME  
 1x Microsoft Windows Computer with Internet connection

OR

1x **FLASH LINK MOBILE**  
 1x **FLASH LINK MOBILE APP**  
Smartphone Android or iOS with Internet connection (provider charges may apply).

**MANDATORY**

HOOD PIN 


 



REMOTE START SAFETY OVERRIDE SWITCH 

VALET SWITCH


Part #: RSPB available, Sold separately.



**Notice:** the installation of safety elements are mandatory. The hood pin and the valet switch are essential security elements and must be installed.


**STAND ALONE CONFIGURATION**

	Program bypass option	UNIT OPTION	DESCRIPTION
	<b>OEM Remote Stand Alone Remote Starter:</b>	OR <b>D1.10</b>  <b>D1.1</b> 	<b>By default, LOCK, LOCK, LOCK</b> Par défaut, VERROUILLE,VERROUILLE,VERROUILLE
	<b>Program bypass option with oem remote:</b>	<b>C1</b>	OEM Remote Monitoring
	<b>Program bypass option with RF KIT antenna:</b>	<b>H1 to H6</b>	Supported RF Kits and <b>select RF Kit</b>

**REMOTE STARTER FUNCTIONALITY**

 All doors must be closed.

**3X**   Press the OEM remote's Lock button 3x to remote-start (or remote-stop) the vehicle.

 The vehicle will START.

**REMOTE STARTER DIAGNOSTICS**


**MODULE RED LED**

- x2 flash : Brake ON
- x3 flash : No tach
- x4 flash : Ignition before start
- x5 flash : Hood Open

**PARKING LIGHTS**

- x4 flash: FOB in car
- x5 flash: Hood open
- x6 flash: Brake ON
- x7 flash: Door open
- x8 flash: Bad Encryption/ key code

**REMOTE STARTER WARNING CARD**



**CUT THIS WARNING CARD AND STICK IT ON A VISIBLE PLACE:**  
 or use the package RSPB, Sold separately.

**WARNING | ATTENTION**

**REMOTE STARTER**


THE VEHICLE CAN BE STARTED BY EITHER: PRESSING THE LOCK BUTTON ON THE OEM REMOTE 3 TIMES CONSECUTIVELY OR BY A SMARTPHONE. **TURN ON** THE SAFETY SWITCH LOCATED UNDER THE DASHBOARD BEFORE WORKING ON THE VEHICLE.

DESCRIPTION


① Under steering column, START-STOP unit.




② Under steering column, START-STOP unit.

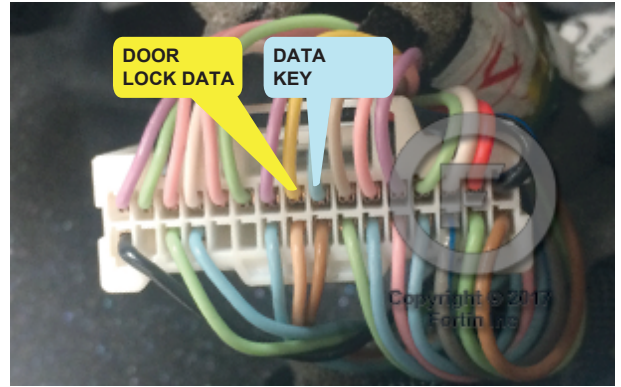

③ Inside the Parking Light switch

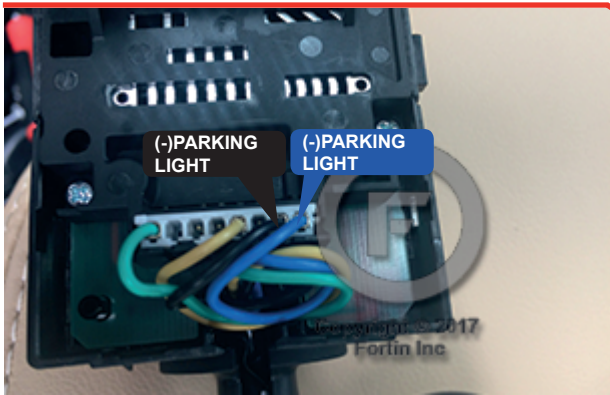

④ Engine compartment - without OEM ALARM

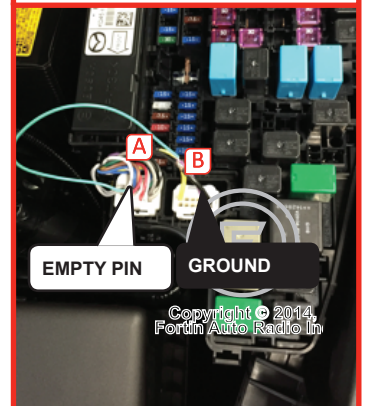




# ATTENTION

Before disconnecting a module, a computer or a control unit from a vehicle: Always disconnect the negative terminal from the vehicle's battery.


In these vehicles, the factory keyless entry module is sensitive to interference and may cease to operate if some precautions are not taken. Disconnect the (-) terminal of the battery prior to disconnecting the connectors at the smartkey module below the steering wheel to avoid damage to the smartkey entry module.

1

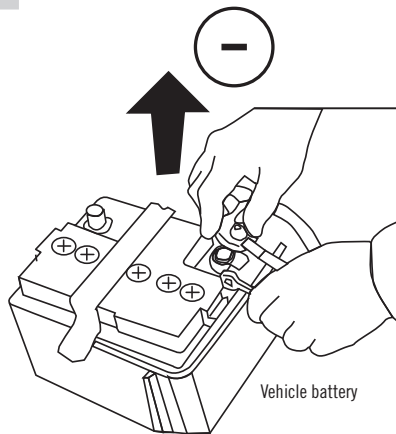


Disconnect the (-) terminal of the battery.

2

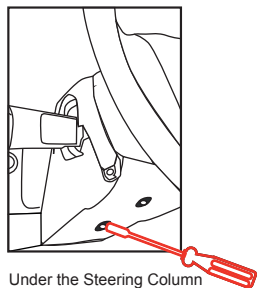


Under the Steering Column

1 Unscrew.

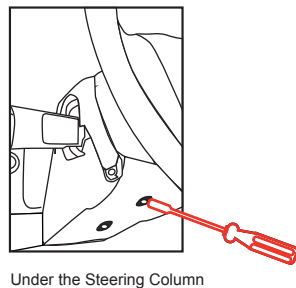


Under the Steering Column

2 Unscrew

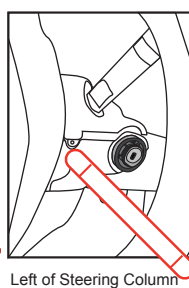


Left of Steering Column

3 Onclip

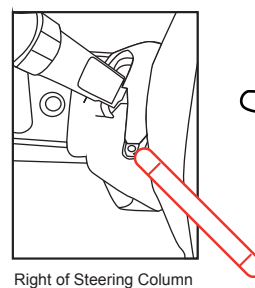

Right of Steering Column

4 Onclip

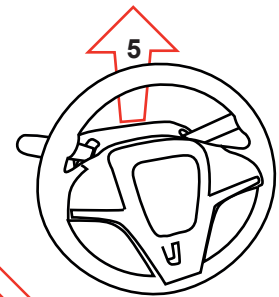

5 Gently pull up the cover of the steering column.


3

Make the following connections.


CONTINUED NEXT PAGE



4

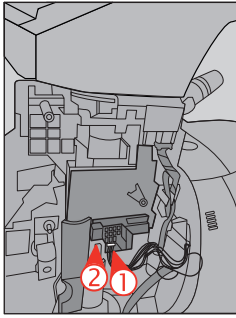

Under steering column, START-STOP unit.

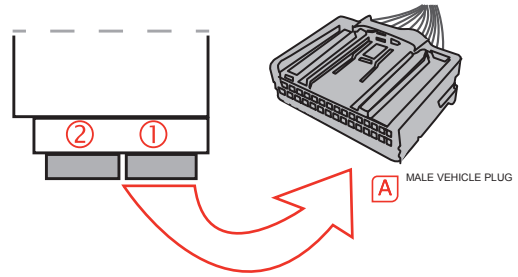


Disconnect the connector

A

5


Under steering column, START-STOP unit.

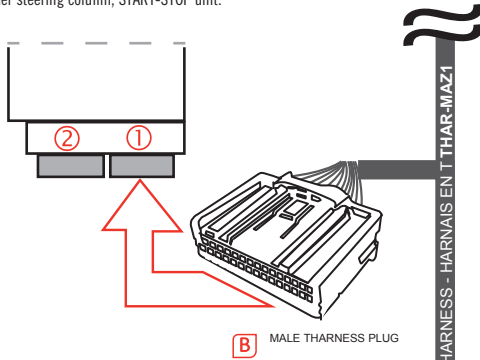

Connect the connector

B

6

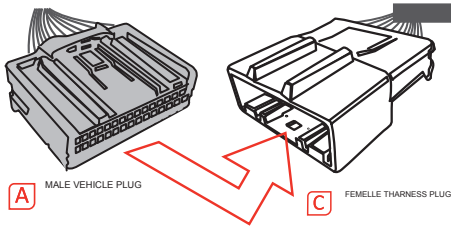

Connect the connector

A



into connector


C

7

Make other required connections.

**AUTOMATIC TRANSMISSION WIRING CONNECTION**

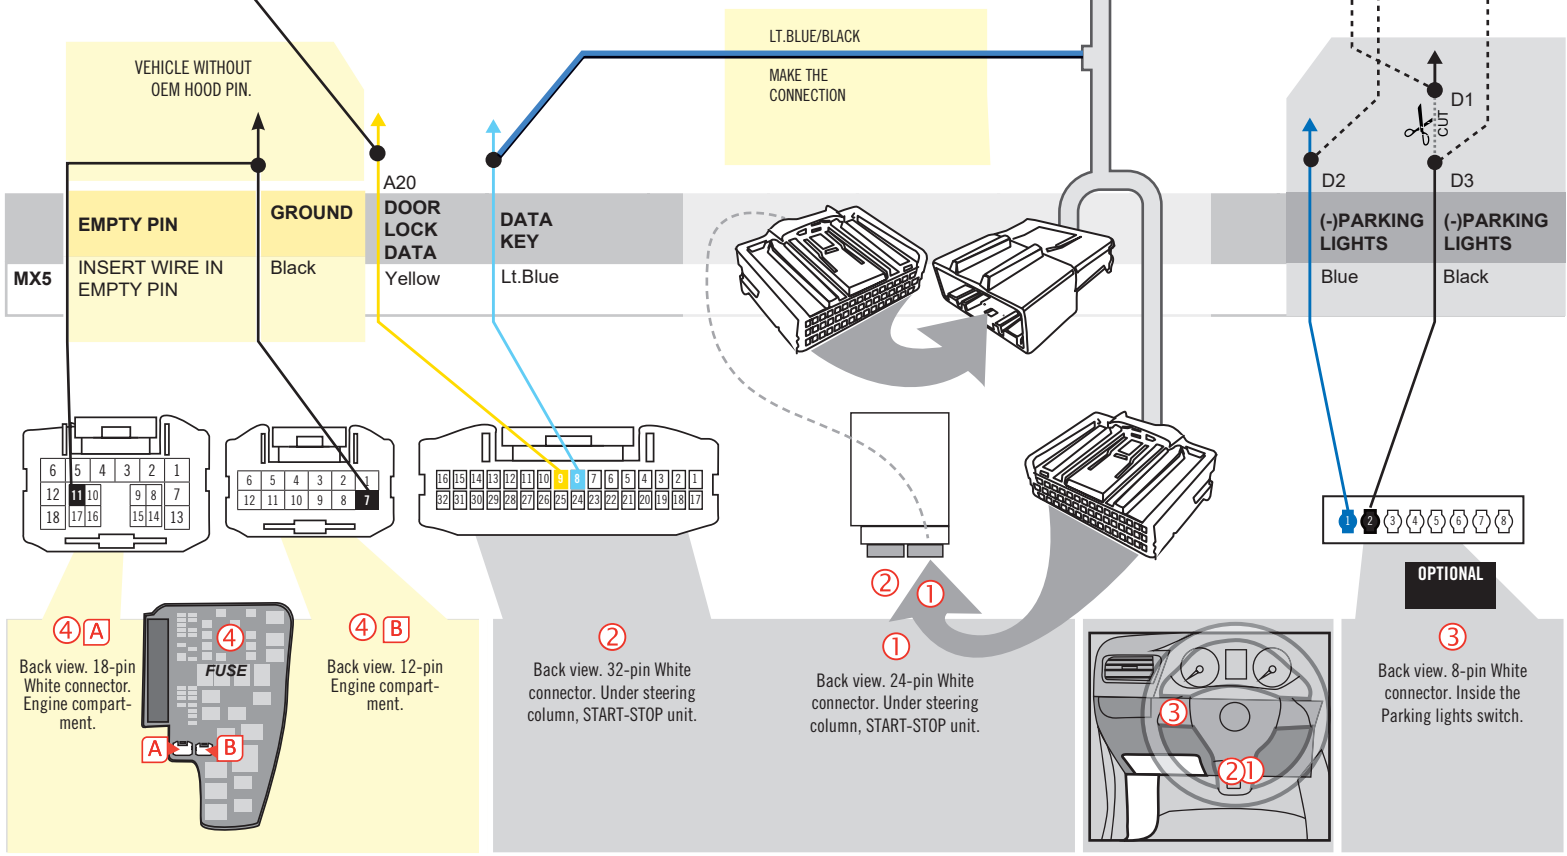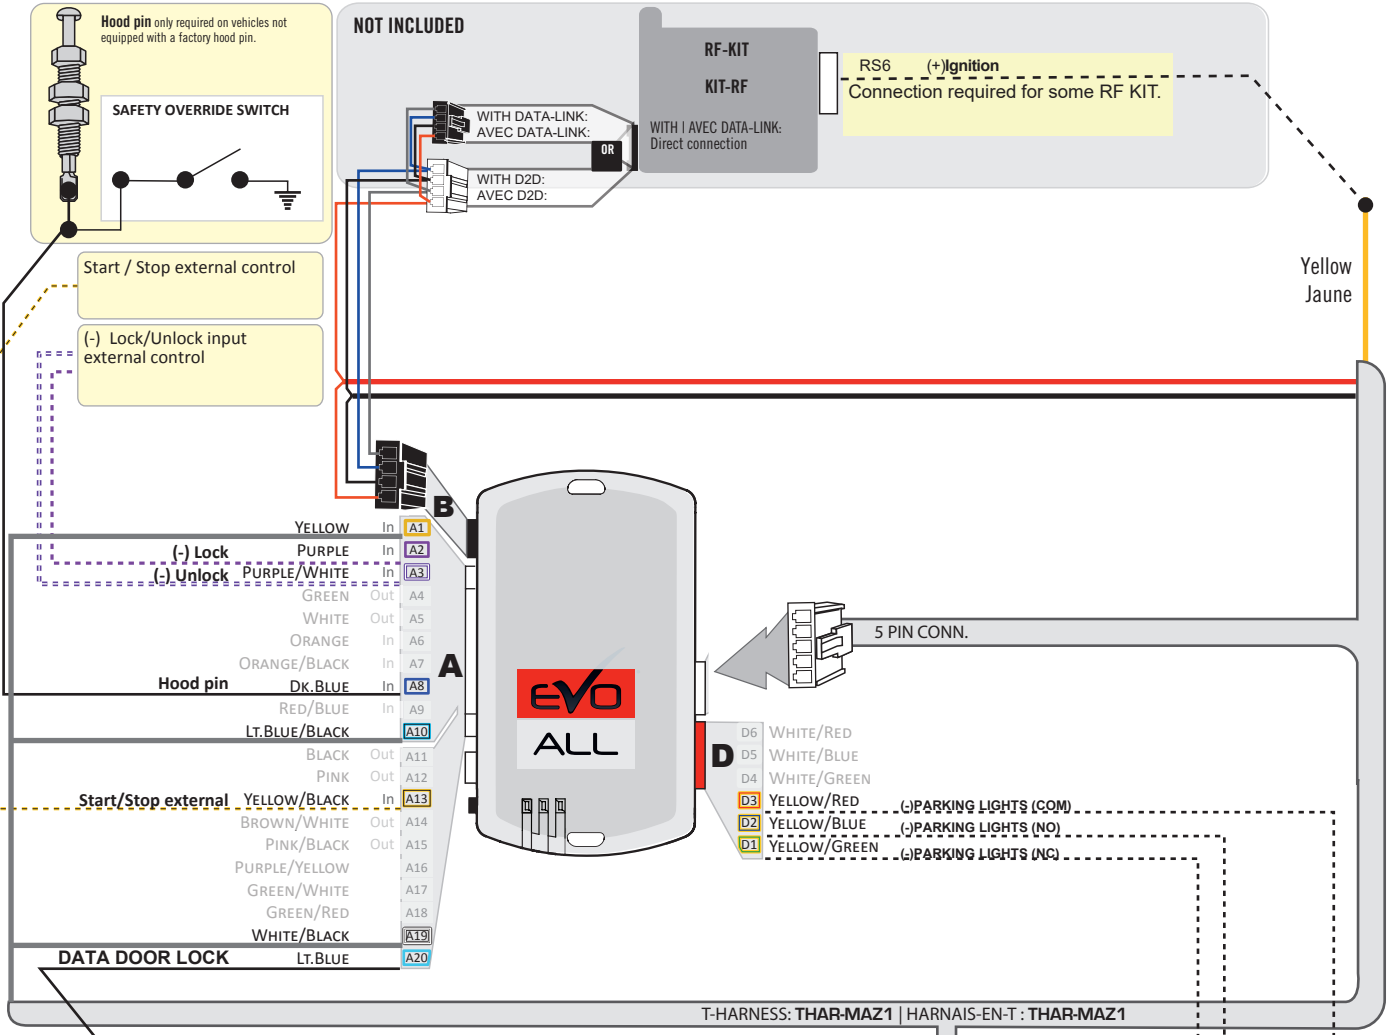

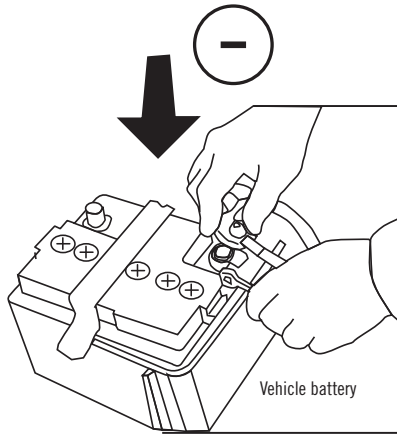

**Reconnect** the (-) terminal of the battery.

CONTINUED NEXT PAGE

# x3 max.


**Do not program more than 3 modules on the same vehicle.**

If more than 3 modules are programmed to a vehicle, it is possible that the remote car starter will never be functional on this vehicle.

If all programming steps were successful and the vehicle cannot be remote started :


- Double check all connections using the installation diagram above as a reference.

If no connection errors can be found then please contact technical support assistance.

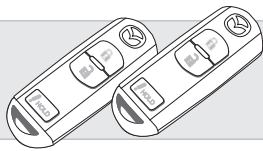

**Make sure** to have two valide vehicle key.


1

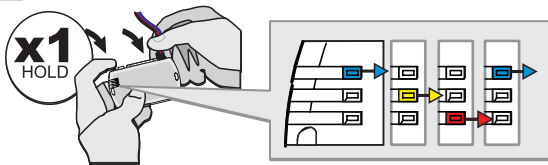

**Press and hold** the programming button:  
**Connect** the 4-PIN Data-link harness (Black connector).


↳ The Blue, Red, Yellow and Blue & Red LEDs will alternatively illuminate.

2

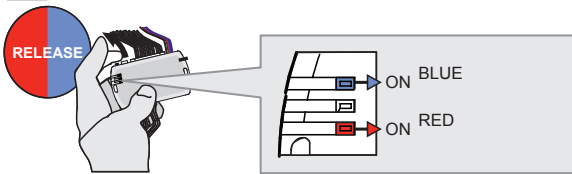


**Release** the programming button when the Blue & Red LEDs are ON.

 *If the LED are not solid BLUE and RED disconnect the 4-PIN Data-link harness (Black connector) and go back to step1.*




3

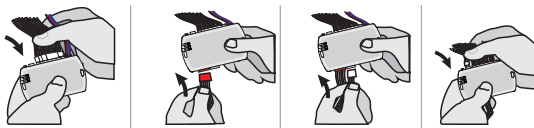

**Connect** the required remaining harnesses.

4

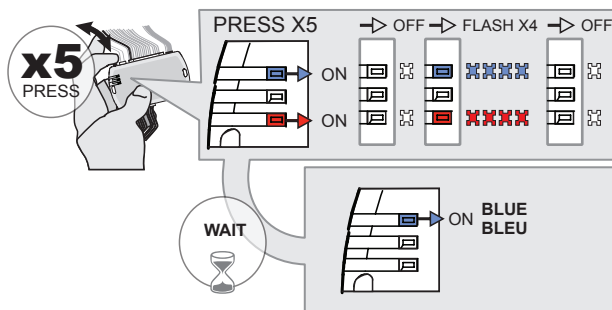

**Press and release** the programming button five times (5x).

↳ The Red & Blue LEDs will alternate between 4 flashes and a pause.


↳ **Wait** for the Blue LED to turn ON.

KEY BYPASS PROGRAMMING PROCEDURE 2/5




KEY #1

5

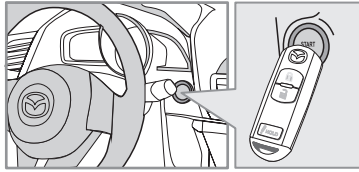


Place the 1st OEM remote close to the front of the START/STOP button exactly as shown.

6

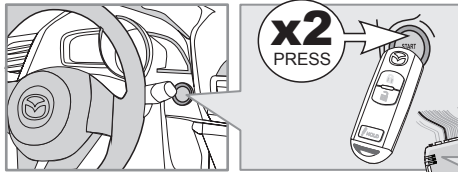


Press the START/STOP button twice to activate the vehicle's Ignition.

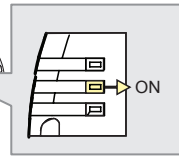


↳ The Yellow LED will turn ON.

7

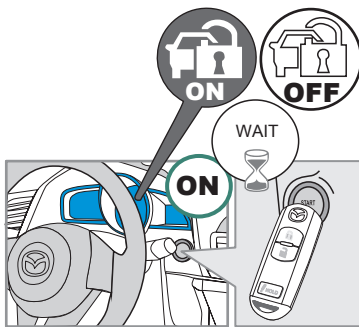

 If the Blue LED is ON solid disconnect the 4-PIN Data-link harness (Black connector) and go back to step 1.




Wait for the security indicator to turn OFF (around 3 seconds).

8

IMMEDIATELY



Press the START/STOP button once to deactivate the vehicle's Ignition.

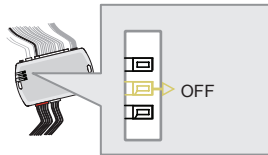


↳ The Yellow Led will turn OFF.




KEY #2

9

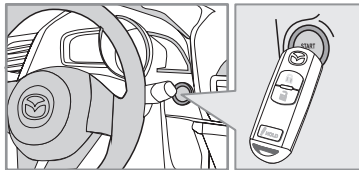


Place the 2nd OEM remote close to the front of the START/STOP button exactly as shown.

10

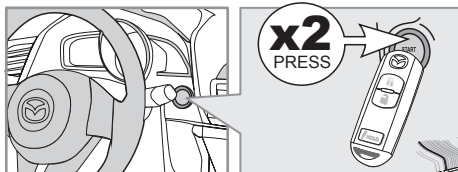


Press the START/STOP button twice to activate the vehicle's Ignition.

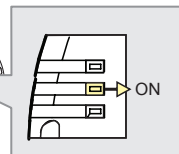


↳ The Yellow LED will turn ON.

KEY BYPASS PROGRAMMING PROCEDURE 3/6

**11**




**KEY#2**

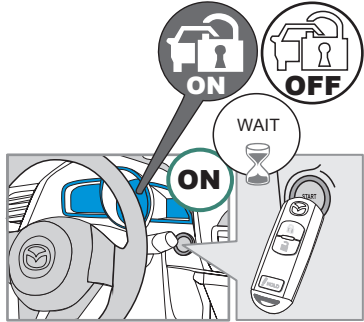

Wait for the **security indicator to turn OFF** (around 3 seconds).


---

**12**

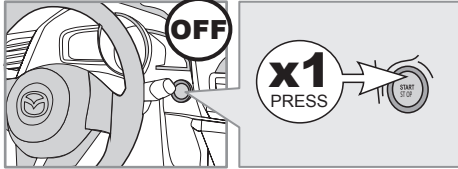


**IMMEDIATELY**

Press the **START/STOP button once** to deactivate the vehicle's Ignition.

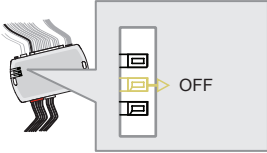


↳ The **Yellow Led** will turn **OFF**.


**13**

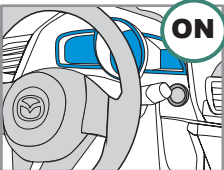

The vehicle's ignition will turn **ON**

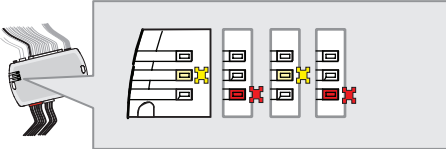



↳ The **Yellow and Red LED's** will alternatively illuminate.

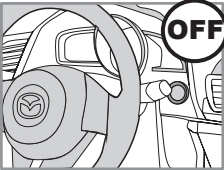

The vehicle's Ignition will turn **OFF**.

**14**

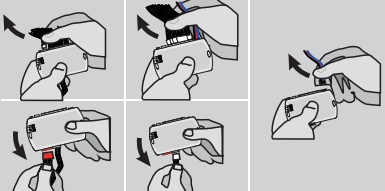


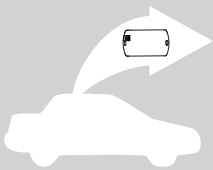

**Disconnect** all the connectors and after the **Data-Link (4-pins)** connector.

**KEY BYPASS PROGRAMMING PROCEDURE 4/6**


15

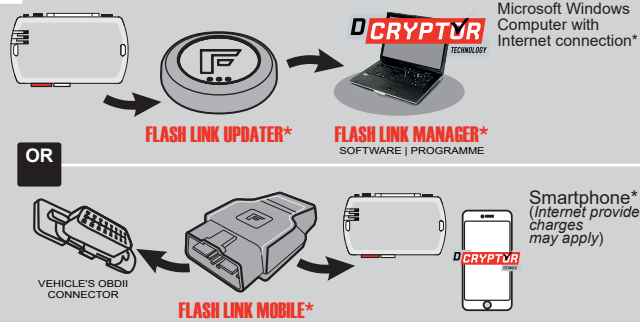

Use the tool: **FLASH LINK UPDATER** or **FLASH LINK MOBILE** to visit the DCRYPTOR menu.

\*Parts required (not included)


16

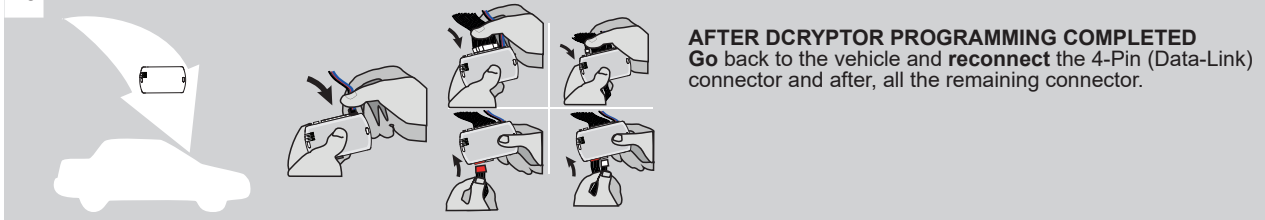


17

↑ **1 - 12** Repeat step 1 to 12.

18

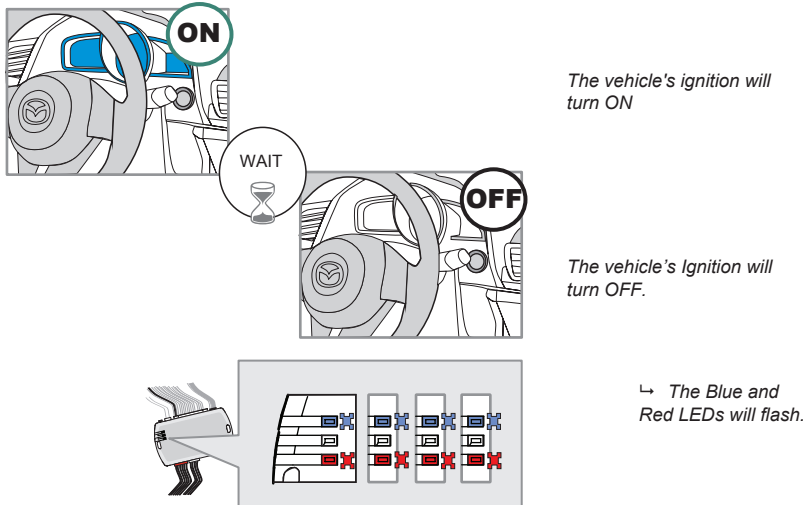

19

 


20



CAN PROGRAMMING PROCEDURE


21

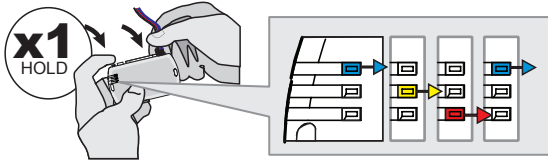

Press and hold the programming button:  
Connect the 4-PIN Data-link harness (Black connector).


↳ The Blue, Red, Yellow and Blue & Red LEDs will alternatively illuminate.

22

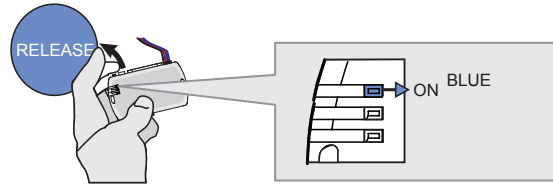


Release the programming button when the Blue LED is ON.

 If the Blue LED is not ON solid disconnect the 4-PIN Data-link harness (Black connector).



23

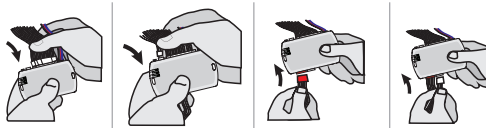


Connect the required remaining harnesses.

24




Press the START/STOP button twice to turn ON the vehicle's Ignition.

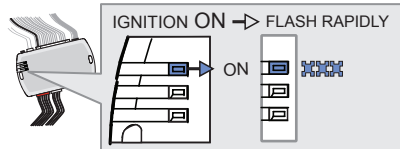


↳ The Blue LED will flash rapidly.

25

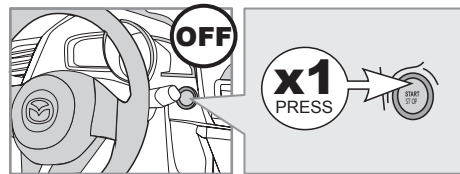

Press the START/STOP button once to turn OFF the vehicle's Ignition.

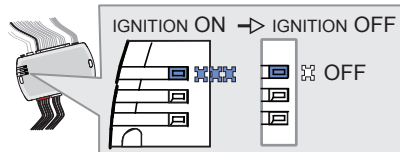


↳ The Blue LED will turn OFF.



The module is now programmed.



REMOTE STARTER FUNCTIONALITY |

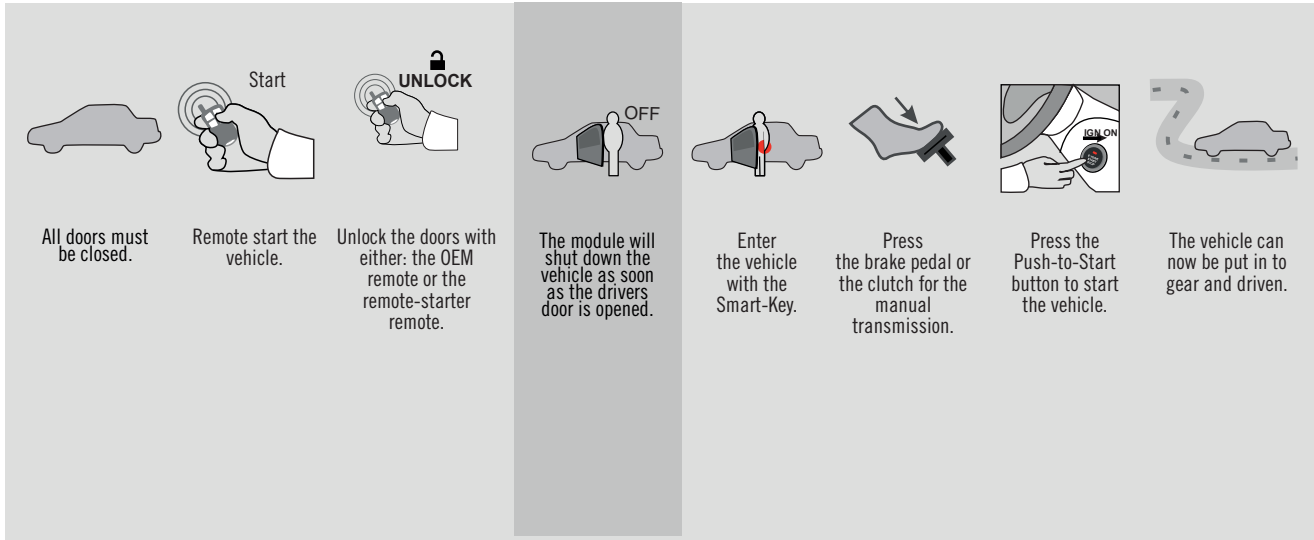

**MAZDA 6 - T-HARNESS MAZDA - STAND ALONE**

ADDENDUM - SUGGESTED WIRING CONFIGURATION



**ONLY COMPATIBLE WITH AUTOMATIC TRANSMISSION VEHICLES.**



Vehicle functions supported in this diagram (functional if equipped)

VEHICLE	YEARS	Connection #			Vehicle functions supported in this diagram (functional if equipped)													
		REMOTE STARTER NO DOORLOCK	REMOTE STARTER & DOORLOCK CONTROL	VEHICLE WITHOUT OEM ALARM	Immobilizer bypass	Lock	Unlock	Arm	Tachometer	Door Status	Trunk Status	Hood Status protection remote start	Hand-Brake Status	Foot-Brake Status	OEM Remote monitoring	Alarm mode		
<b>MAZDA</b>																		
6 Push-to-Start - AT	2013-2016	1	2	3	•	•	•	•	•	•	•	•	•	•	•	•	•	•



HARDWARE VERSION

MINIMUM **6**

FIRMWARE VERSION

**71.[35]**

FORD MINIMUM




**Parts required** (Not included)

- 1X 10 AMP Fuse
- 1x Diode 1A
- 1X 1K Ohm Resistor (with doorlock)

**FLASH LINK MANAGER**  
Software version 3.52 and more



**FLASH LINK UPDATER 2**

- 1X  Microsoft Windows Computer & Internet connection



**PARTS REQUIRED (NOT INCLUDED)**



**FLASH LINK UPDATER 2**

**FLASH LINK MANAGER**  
SOFTWARE | PROGRAMME




Microsoft Windows Computer  
(Internet connection required)




**MANDATORY**

HOOD PIN



REMOTE START SAFETY OVERRIDE SWITCH

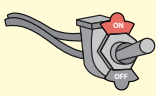




VALET SWITCH


Part #: RSPB available, Sold separately.

**Notice:** the installation of safety elements are mandatory. The hood pin and the valet switch are essential security elements and must be installed.



**STAND ALONE CONFIGURATION**

		UNIT OPTION	DESCRIPTION
	Program bypass option:	<b>D1</b>	OEM Remote Stand Alone Remote Starter
	Program bypass option with oem remote:	<b>C1</b>	OEM Remote Monitoring
	Program bypass option with RF KIT antenna:	<b>H1 to H6</b>	Supported RF Kits and select RF Kit


**REMOTE STARTER FUNCTIONNALITY**



All doors must be closed.

**3X**  


Press the OEM remote's Lock button 3x to remote-start (or remote-stop) the vehicle.



The vehicle will START.

REMOTE STARTER DIAGNOSTICS	
<b>MODULE RED LED</b>	
x2 flash :	Brake ON
x3 flash :	No tach
x4 flash :	Ignition before start
x5 flash :	Hood Open
<b>PARKING LIGHTS</b>	
x4 flash :	FOB in car
x5 flash :	Hood open
x6 flash :	Brake ON
x7 flash :	Door open
x8 flash :	Bad Encryption/ key code

**REMOTE STARTER WARNING CARD**



**CUT THIS WARNING CARD AND STICK IT ON A VISIBLE PLACE:**  
or use the package RSPB, Sold separately.

**WARNING | ATTENTION**




**REMOTE STARTER**


THE VEHICLE CAN BE STARTED BY EITHER: PRESSING THE LOCK BUTTON ON THE OEM REMOTE 3 TIMES CONSECUTIVELY OR BY A SMARTPHONE. **TURN ON** THE SAFETY SWITCH LOCATED UNDER THE DASHBOARD BEFORE WORKING ON THE VEHICLE.

DESCRIPTION |

① ② Under steering column, START-STOP unit

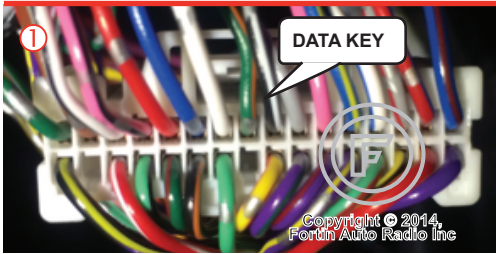

③ Parking Light connector

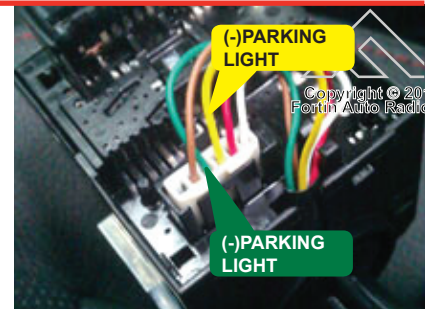

above Driver Kick Panel. Near firewall.

④





driver kick panel.

⑤ ⑧

Engine compartment - without OEM ALARM


⑥ ⑦

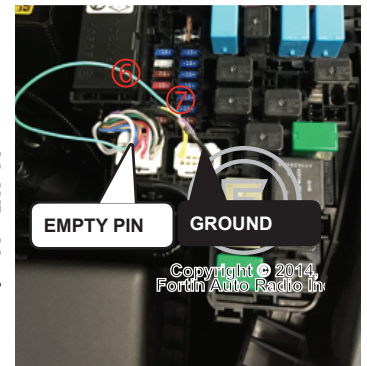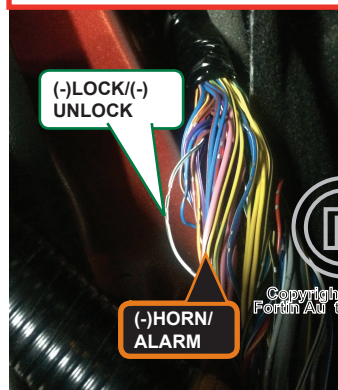

CONNECTION 1

REMOTE CAR STARTER ONLY - DOORLOCK BY OEM REMOTE

AUTOMATIC TRANSMISSION ONLY

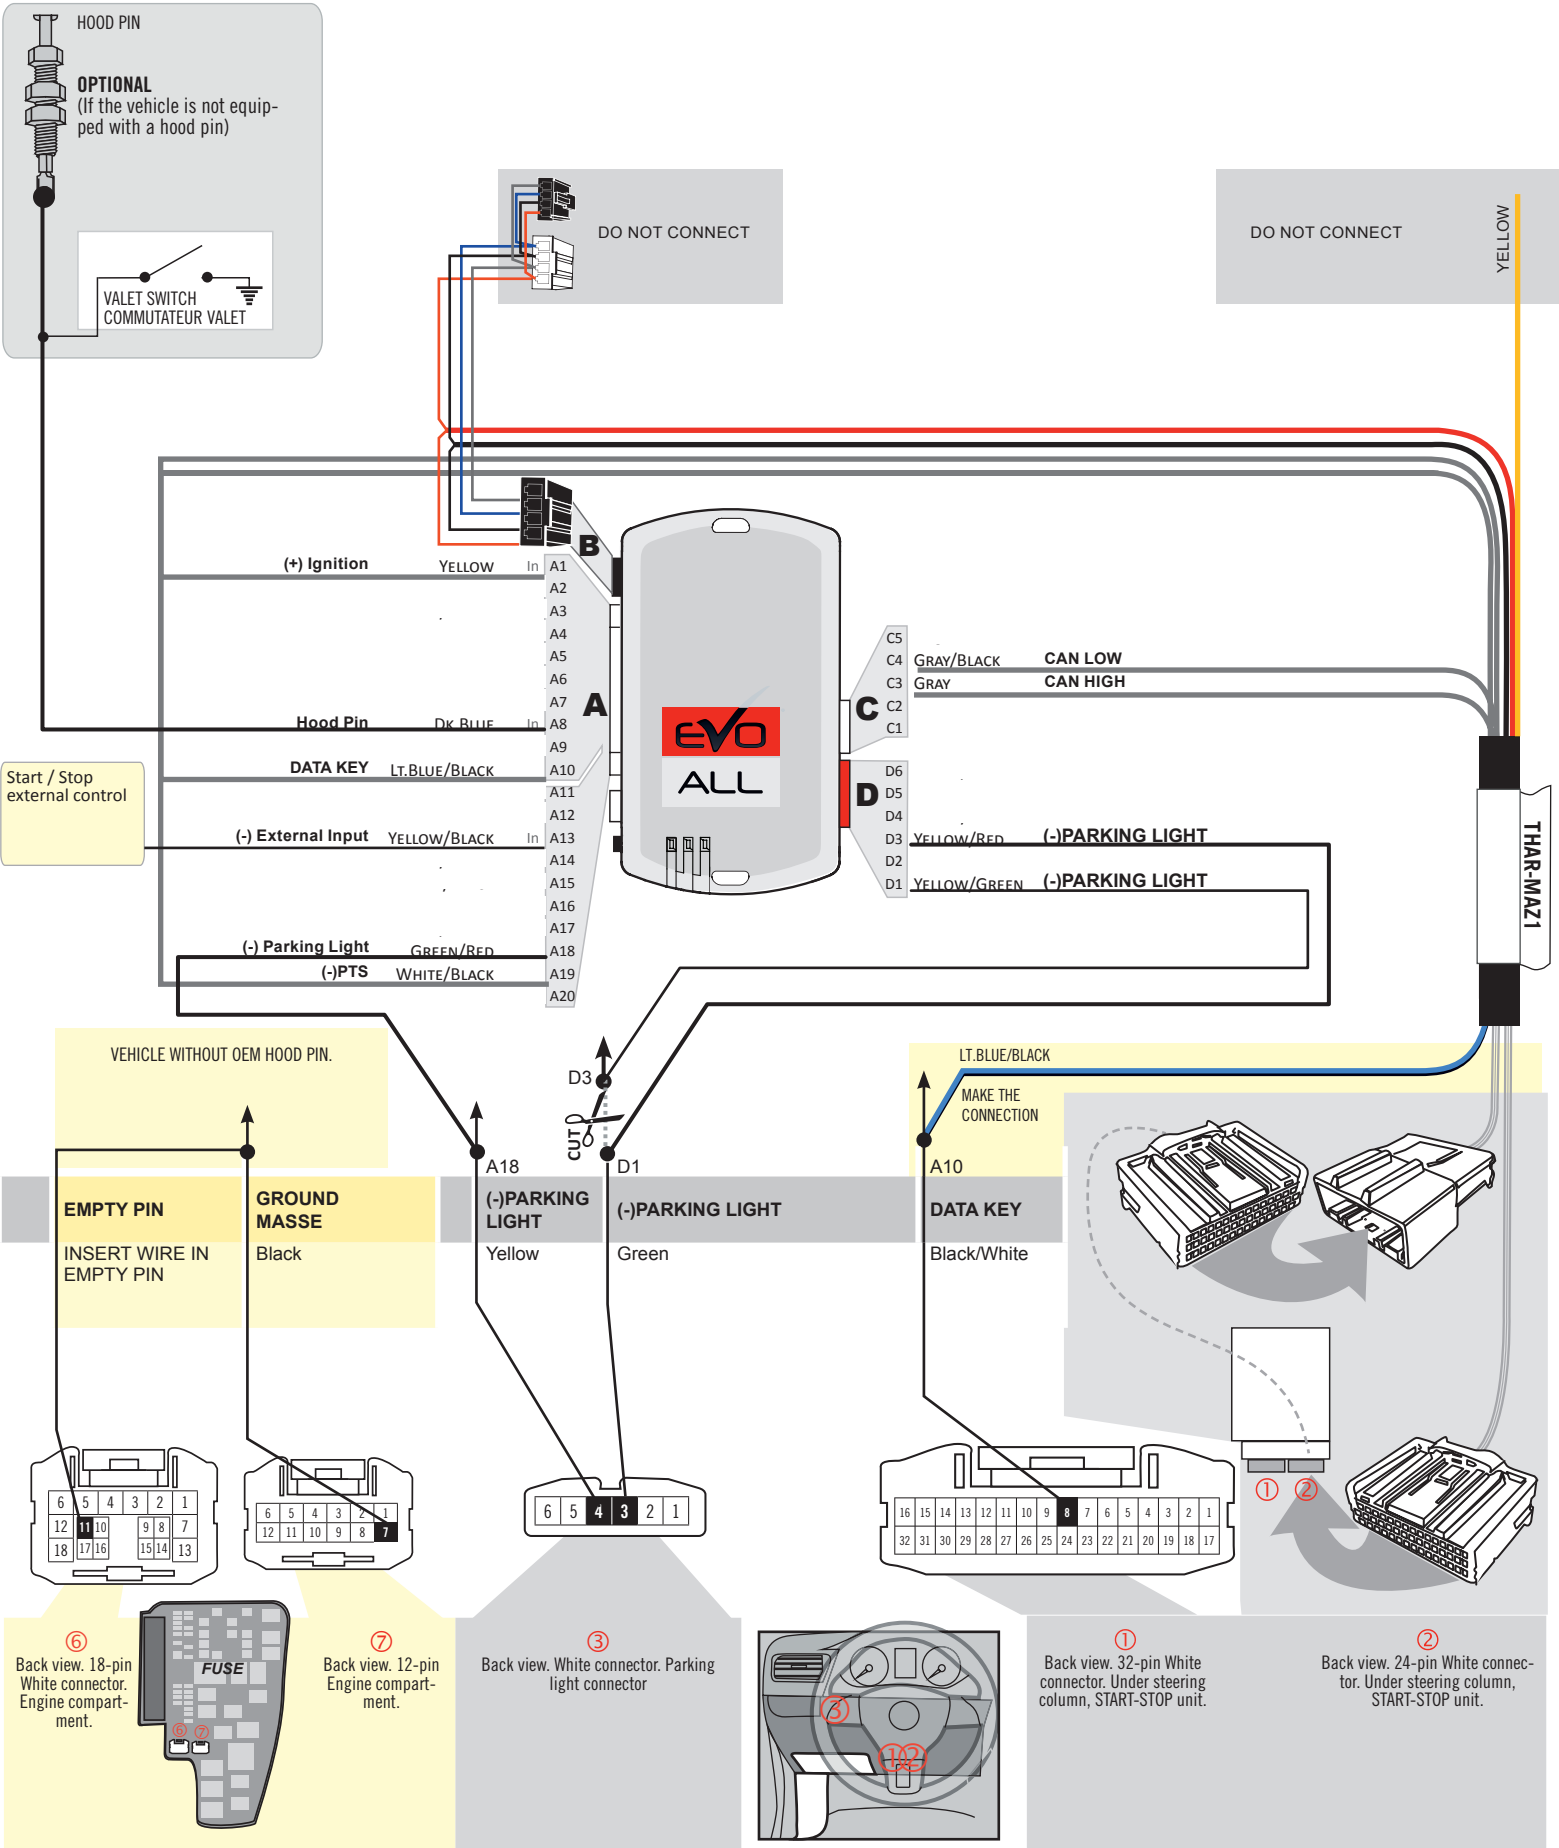

CONNECTION 2

REMOTE CAR STARTER AND DOORLOCK



Program bypass option:

UNIT OPTION

DESCRIPTION

**C1**

OEM Remote status (Lock/Unlock) monitoring


**G1**

Evo Alarm enable

CONNECTION 2

REMOTE CAR STARTER AND DOORLOCK


AUTOMATIC TRANSMISSION ONLY

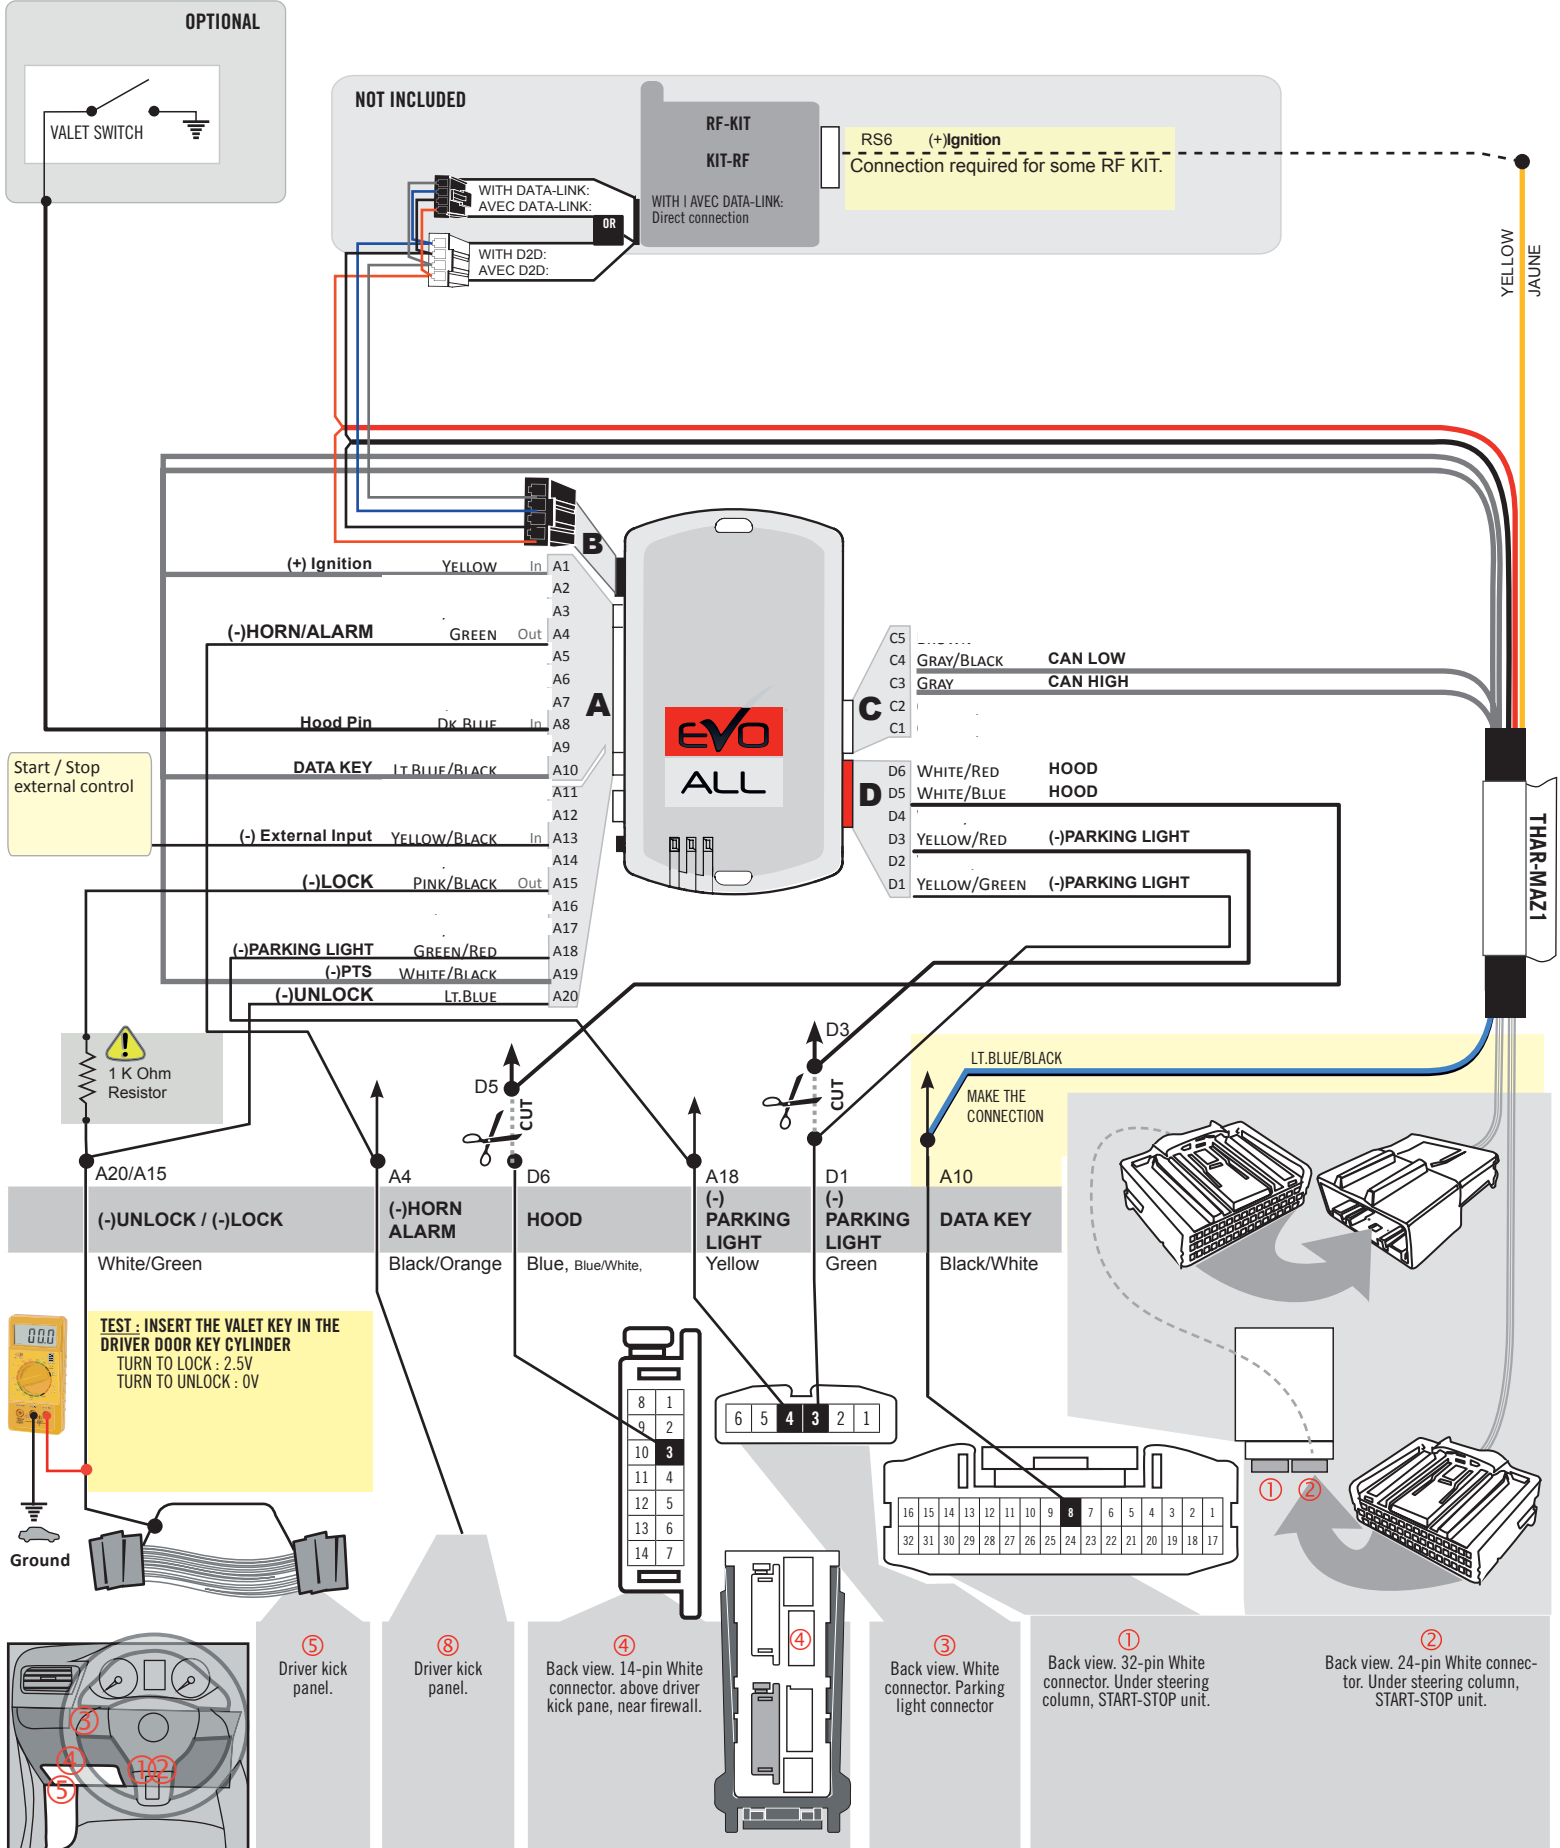

CONNECTION 3

VEHICLE WITHOUT HOOD PIN & WITHOUT OEM ALARM

AUTOMATIC TRANSMISSION ONLY

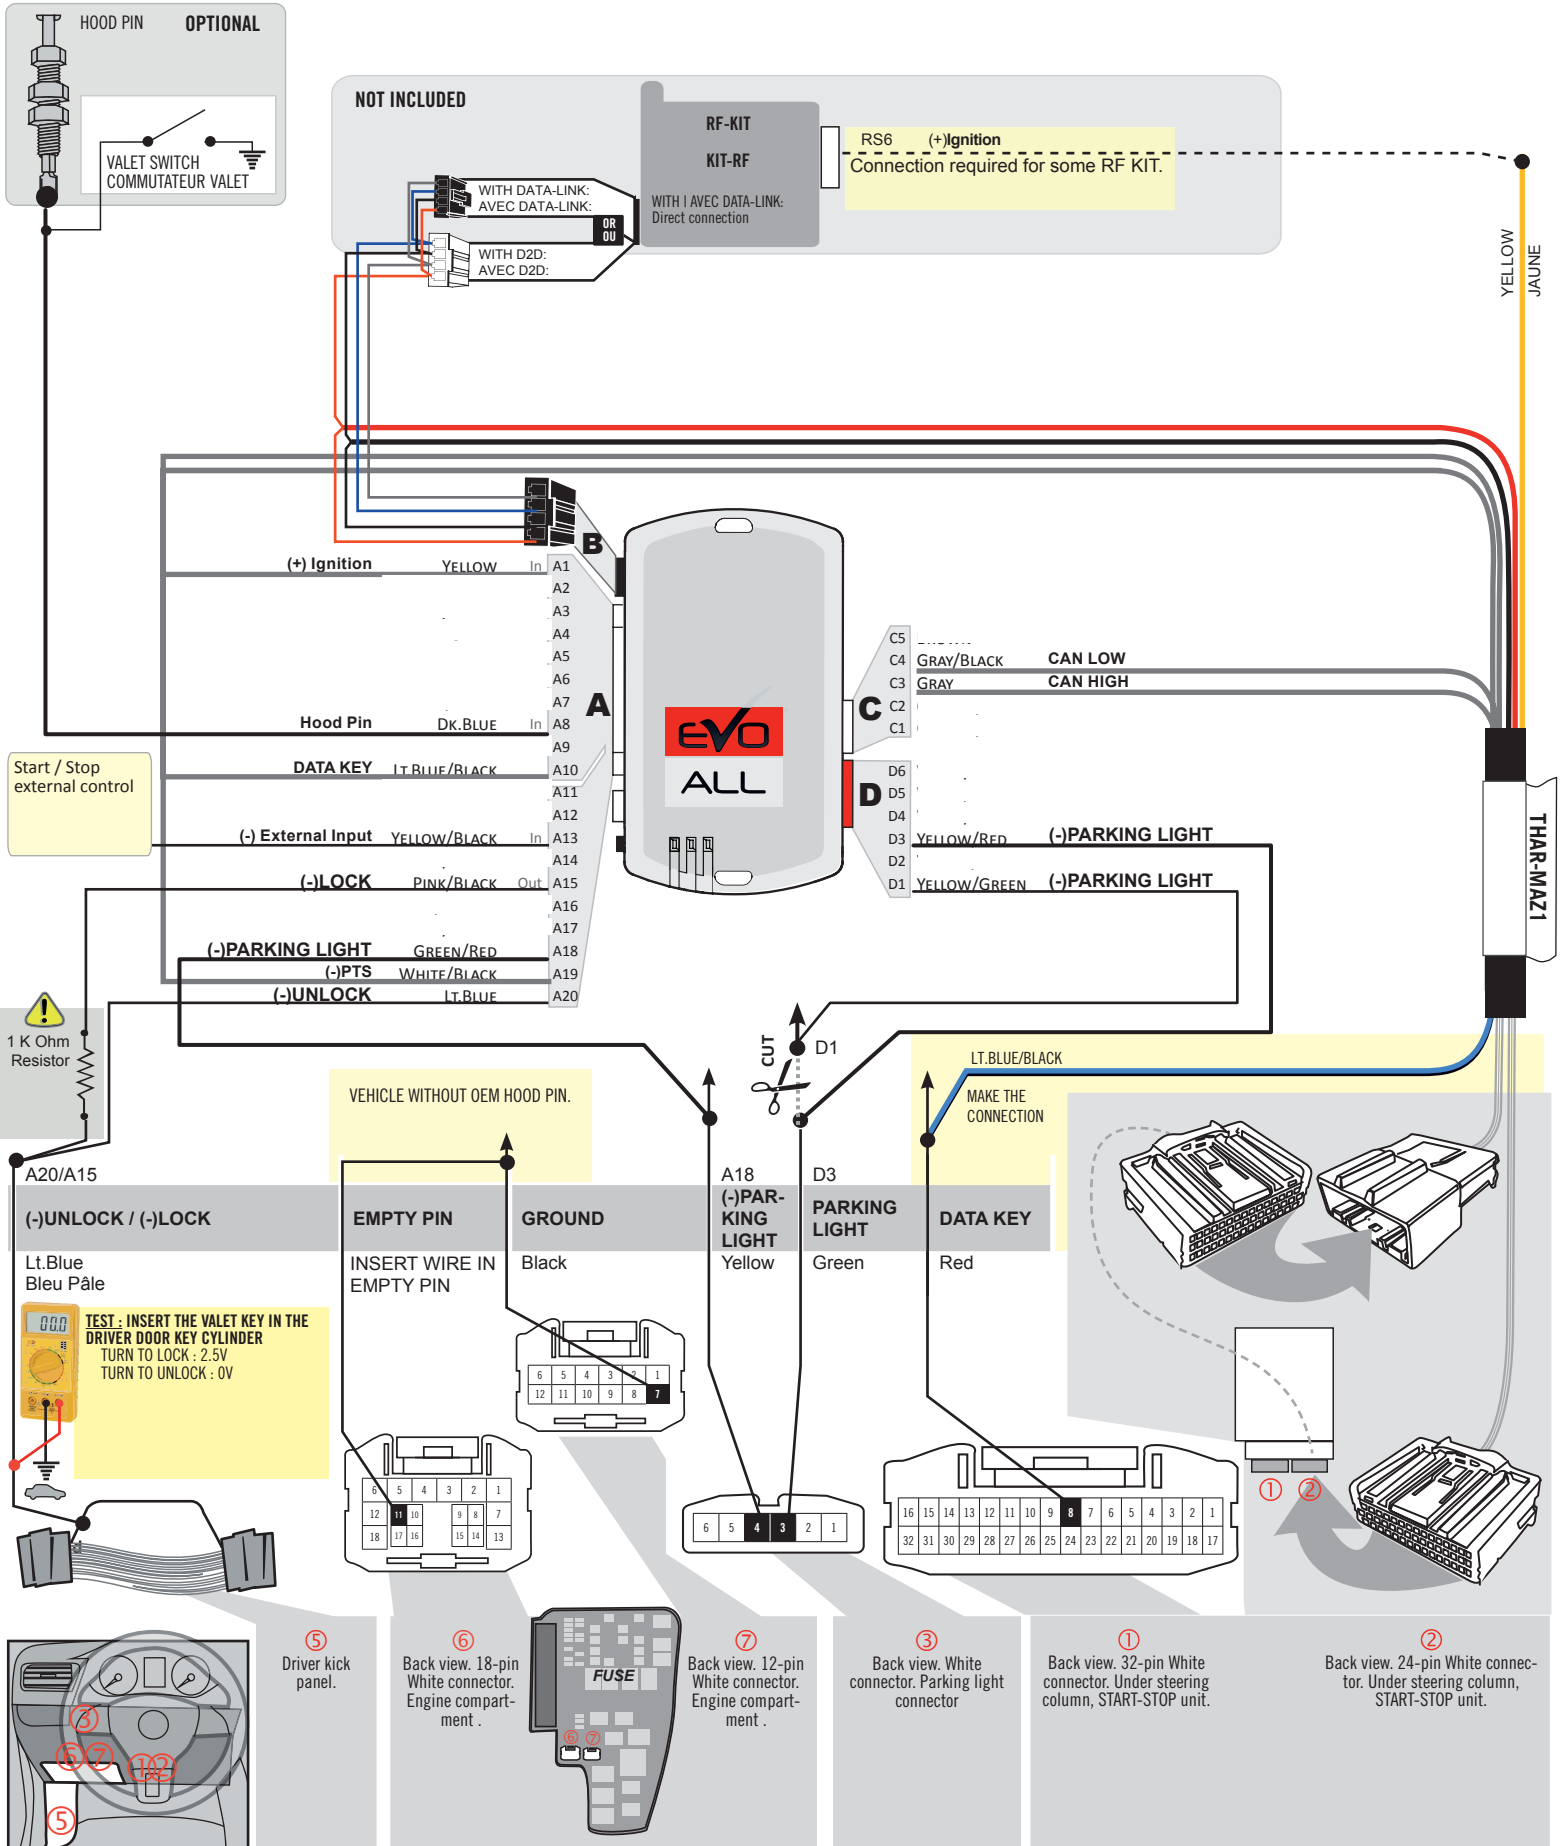



# x3 max.


**Do not program more than 3 modules on the same vehicle.**

If more than 3 modules are programmed to a vehicle, it is possible that the remote car starter will never be functional on this vehicle.

If all programming steps were successful and the vehicle cannot be remote started :


- Double check all connections using the installation diagram above as a reference.

If no connection errors can be found then please contact technical support assistance.

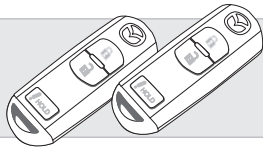

**Make sure** to have two valide vehicle key.


1

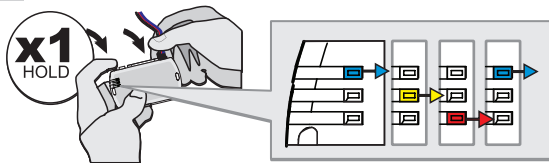

**Press and hold** the programming button:  
**Connect** the 4-PIN Data-link harness (Black connector).


↳ The Blue, Red, Yellow and Blue & Red LEDs will alternatively illuminate.

2

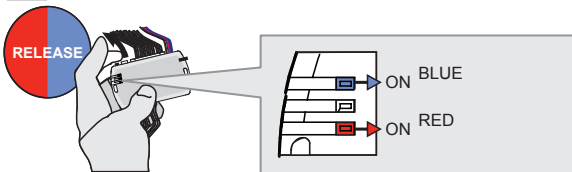


**Release** the programming button when the Blue & Red LEDs are ON.

 *If the LED are not solid BLUE and RED disconnect the 4-PIN Data-link harness (Black connector) and go back to step1.*




3

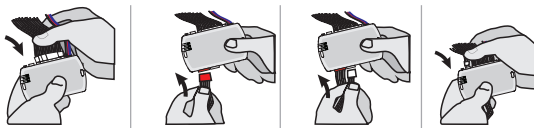

**Connect** the required remaining harnesses.

4

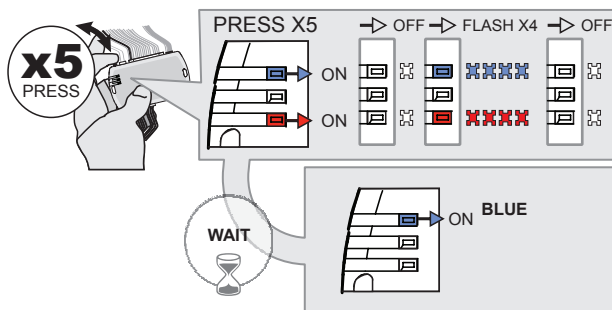

**Press and release** the programming button five times (5x).

↳ The Red & Blue LEDs will alternate between 4 flashes and a pause.


↳ **Wait** for the Blue LED to turn ON.

KEY BYPASS PROGRAMMING PROCEDURE 2/5 |



KEY #1

5

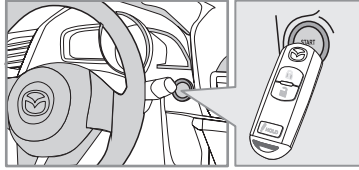


Place the 1st OEM remote close to the front of the START/STOP button exactly as shown.

6




Press the START/STOP button twice to activate the vehicle's Ignition.

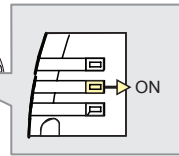


↳ The Yellow LED will turn ON.

7

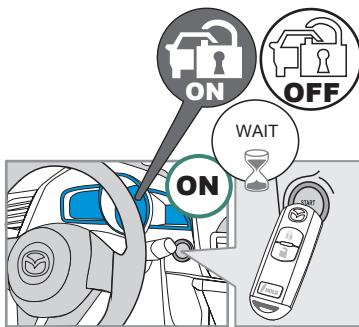

 If the Blue LED is ON solid disconnect the 4-PIN Data-link harness (Black connector) and go back to step 1.




Wait for the security indicator to turn OFF (around 3 seconds).

8

**IMMEDIATELY**



Press the START/STOP button once to deactivate the vehicle's Ignition.

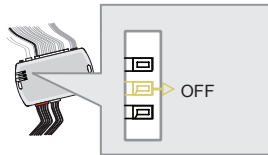


↳ The Yellow Led will turn OFF.




KEY #2

9

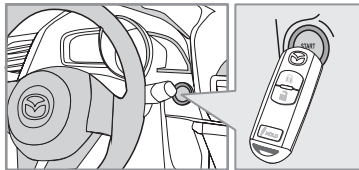


Place the 2nd OEM remote close to the front of the START/STOP button exactly as shown.

10

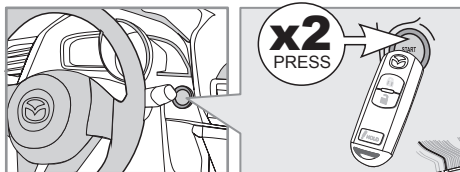

Press the START/STOP button twice to activate the vehicle's Ignition.

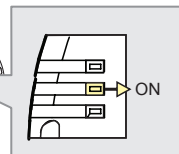

↳ The Yellow LED will turn ON.

KEY BYPASS PROGRAMMING PROCEDURE 3/5 |

**11**

KEY #2

Wait for the security indicator to turn OFF (around 3 seconds).

**12**

**IMMEDIATELY**

Press the START/STOP button once to deactivate the vehicle's Ignition.

↳ The Yellow Led will turn OFF.

**13**

The vehicle's ignition will turn ON

↳ The Yellow and Red LED's will alternatively illuminate.


The vehicle's Ignition will turn OFF.

**14**

Disconnect all the connectors and after the Data-Link (4-pins) connector.

KEY BYPASS PROGRAMMING PROCEDURE 4/5 |

15

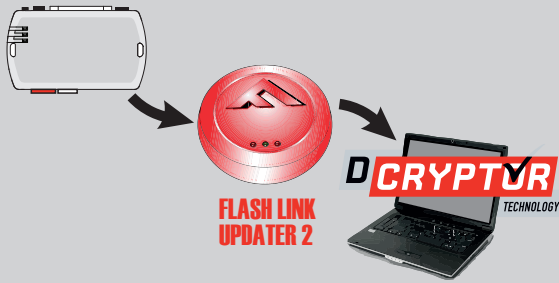

Connect the module to the FLASH LINK UPDATER 2 and visit the DCRYPTOR menu in the Flash-Link Manager.

Parts required (not included)




**FLASH LINK UPDATER 2**

**FLASH LINK MANAGER**  
SOFTWARE | PROGRAMME



Microsoft Windows Computer with Internet connection

16

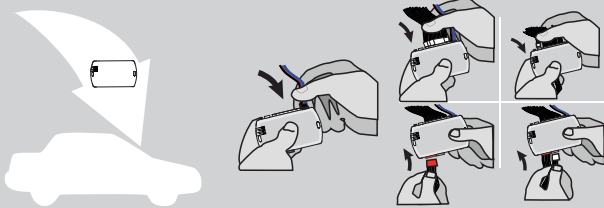

**AFTER DCRYPTOR PROGRAMMING COMPLETED**  
Go back to the vehicle and **reconnect** the 4-Pin (Data-Link) connector and after, all the remaining connector.


17




**1 - 12**

Repeat step 1 to 12.


18

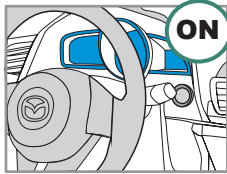

The vehicle's ignition will turn ON

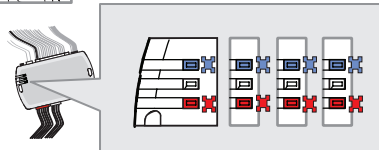


↳ The Blue and Red LEDs will flash.

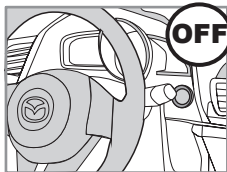


The vehicle's Ignition will turn OFF.

 19



Disconnect all Harness

20

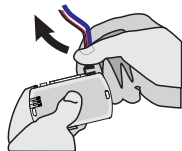

et ensuite:

Disconnect the 4-PIN Data-link harness (Black connector).


KEY BYPASS PROGRAMMING PROCEDURE 5/5 |

CAN PROGRAMMING PROCEDURE

21

**CAUTION FOR: EVO-ALARM OPTION**


If the module GREEN (A4) wire is connected to the HORN make sure that the option G1 (EVO-ALARM) is enabled before CAN programming.

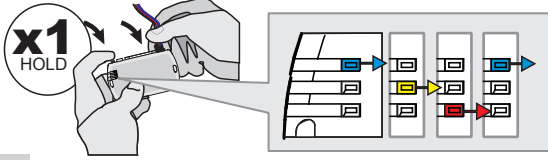

**Press and hold** the programming button:  
**Connect** the 4-PIN Data-link harness (Black connector).


↳ The Blue, Red, Yellow and Blue & Red LEDs will alternatively illuminate.

22

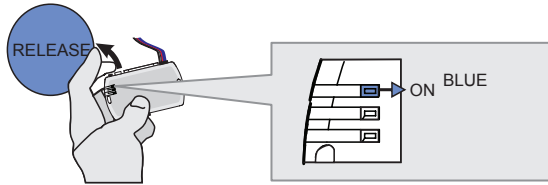


**Release** the programming button when the Blue LED is ON.

 If the Blue LED is not ON solid disconnect the 4-PIN Data-link harness (Black connector).



23

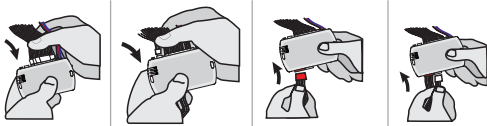


**Connect** the required remaining harnesses.

24




**Press** the START/STOP button twice to activate the vehicle's Ignition.

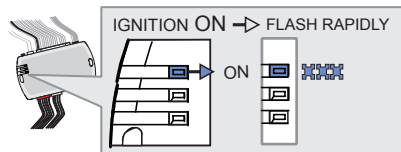


↳ The Blue LED will flash rapidly.

25

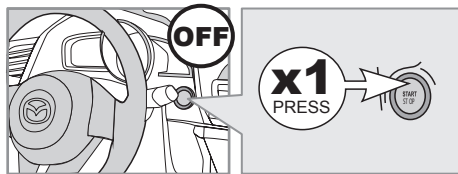

**Press** the START/STOP button once to deactivate the vehicle's Ignition.

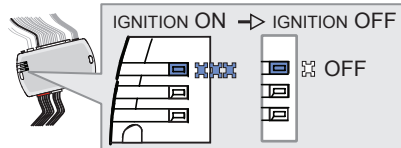

↳ The Blue LED will turn OFF.



The module is now programmed.

REMOTE STARTER FUNCTIONALITY |



All doors must be closed.



Do not remote-start with the OEM remote inside the vehicle.



Never remote-start with a passenger inside the vehicle.



**Remote start** the vehicle.



*The module will shut down the vehicle as soon as a door is opened.*

STAND ALONE THAR-MAZ1 THARNESS INSTALLATION - 2 KEYS PROGRAMMING

ADDENDUM - SUGGESTED WIRING CONFIGURATION



**ONLY COMPATIBLE WITH AUTOMATIC TRANSMISSION VEHICLES.**



Vehicle functions supported in this diagram (functional if equipped)

VEHICLE	YEARS	Immobilizer bypass	T-Harness	Lock	Unlock	Arm	Disarm	Tachometer	Door Status	Trunk Status	Hood Status protection remote start	Hand-Brake Status	Foot-Brake Status	OEM Remote monitoring
<b>MAZDA</b>														
6	Push-to-Start - Automatic transmission only 2014-2020	•	•	•	•	•	•	•	•	•	•	•	•	•

FIRMWARE VERSION

**85.[11]**

MINIMUM

To add the firmware version and the options, use the **FLASH LINK UPDATER** or **FLASH LINK MOBILE** tool, sold separately.

<b>IF THE VEHICLE IS NOT EQUIPPED WITH FUNCTIONAL HOOD PIN:</b>	<b>A11</b>	<b>OFF</b>	Hood trigger (Output Status).
---	------------	------------	-------------------------------

	UNIT OPTION	DESCRIPTION
	<b>Program bypass option:</b>  <span style="font-size: 24px; color: red;"><b>C1</b></span>	OEM Remote status (Lock/Unlock) monitoring

**NOTES**



**THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.**



**Parts required** (Not included)

1X 10 AMP Fuse

**MANDATORY INSTALL**

**\*HOOD PIN**



**HOOD STATUS:** THE HOOD PIN SWITCH MUST BE INSTALLED IF THE VEHICLE CAN BE REMOTE STARTED WITH THE HOOD OPEN, SET FUNCTION **A11** TO OFF.

**A11**

**OFF**

Notice: the installation of safety elements are mandatory. The hood pin is an essential security element and must be installed.

THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.


**PARTS REQUIRED (NOT INCLUDED)**


1x **FLASH LINK UPDATER**  
 1x **FLASH LINK MANAGER**  
SOFTWARE | PROGRAMME  
 1x Microsoft Windows Computer with Internet connection

OR

1x **FLASH LINK MOBILE**  
 1x **FLASH LINK MOBILE APP**  
Smartphone Android or iOS with Internet connection (provider charges may apply).

**MANDATORY | OBLIGATOIRE**

HOOD PIN 

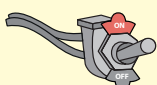
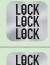



REMOTE START SAFETY OVERRIDE SWITCH 

VALET SWITCH


Part #: RSPB available, Sold separately.



**Notice:** the installation of safety elements are mandatory. The hood pin and the valet switch are essential security elements and must be installed.


**STAND ALONE CONFIGURATION**

	Program bypass option	UNIT OPTION	DESCRIPTION
	<b>OEM Remote Stand Alone Remote Starter:</b>	OR <b>D1.10</b>  <b>D1.1</b> 	<b>By default, LOCK, LOCK, LOCK</b> Par défaut, VERROUILLE, VERROUILLE, VERROUILLE
	<b>Program bypass option with oem remote:</b>	<b>C1</b>	OEM Remote Monitoring
	<b>Program bypass option with RF KIT antenna:</b>	<b>H1 to H6</b>	Supported RF Kits and <b>select RF Kit</b>

**REMOTE STARTER FUNCTIONALITY**

 All doors must be closed.


**3X**   Press the OEM remote's Lock button 3x to remote-start (or remote-stop) the vehicle.

 The vehicle will START.

**REMOTE STARTER DIAGNOSTICS**

MODULE RED LED	
x2 flash :	Brake ON
x3 flash :	No tach
x4 flash :	Ignition before start
x5 flash :	Hood Open
PARKING LIGHTS	
x4 flash:	FOB in car
	Hood open
	Brake ON
	Door open
x8 flash:	Bad Encryption/ key code

**REMOTE STARTER WARNING CARD**



**CUT THIS WARNING CARD AND STICK IT ON A VISIBLE PLACE:**  
 or use the package RSPB, Sold separately.

**WARNING | ATTENTION**

**REMOTE STARTER**


THE VEHICLE CAN BE STARTED BY EITHER: PRESSING THE LOCK BUTTON ON THE OEM REMOTE 3 TIMES CONSECUTIVELY OR BY A SMARTPHONE. **TURN ON** THE SAFETY SWITCH LOCATED UNDER THE DASHBOARD BEFORE WORKING ON THE VEHICLE.




DESCRIPTION




① Under steering column, START-STOP unit

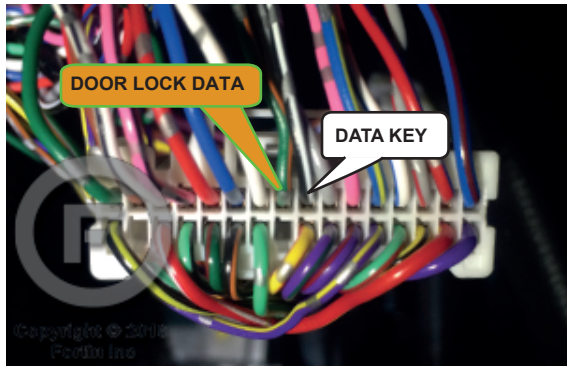


③ At parking lights switch

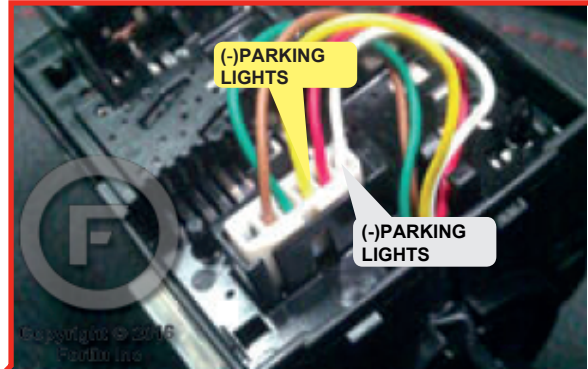

② Under steering column, START-STOP unit

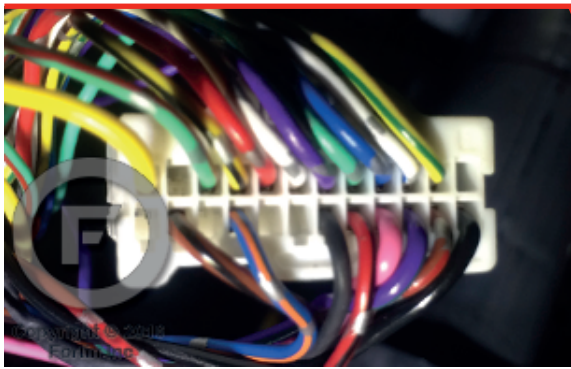

④ Engine compartment - without OEM ALARM

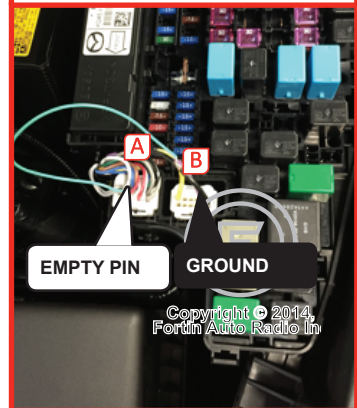




# ATTENTION

Before disconnecting a module, a computer or a control unit from a vehicle: Always disconnect the negative terminal from the vehicle's battery.


In these vehicles, the factory keyless entry module is sensitive to interference and may cease to operate if some precautions are not taken. Disconnect the (-) terminal of the battery prior to disconnecting the connectors at the smartkey module below the steering wheel to avoid damage to the smartkey entry module.

1

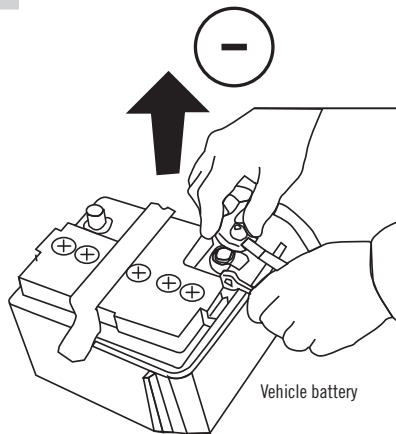


Disconnect the (-) terminal of the battery.

2

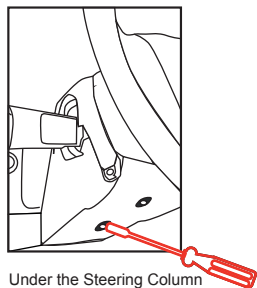


Under the Steering Column

1 Unscrew.

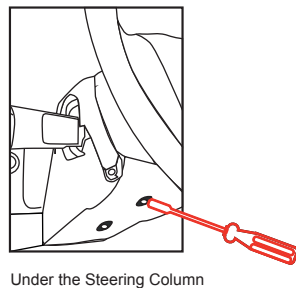


Under the Steering Column

2 Unscrew

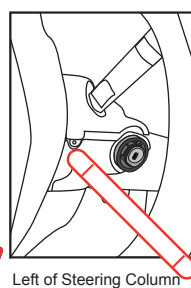


Left of Steering Column

3 Onclip

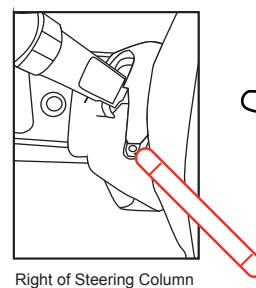

Right of Steering Column

4 Onclip

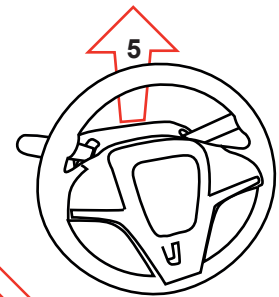


5 Gently pull up the cover of the steering column.

3


Make the following connections.

CONTINUED NEXT PAGE

4

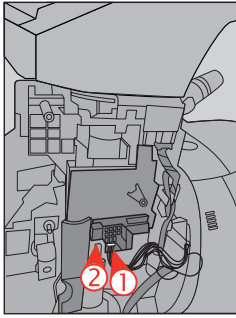

Under steering column, START-STOP unit.

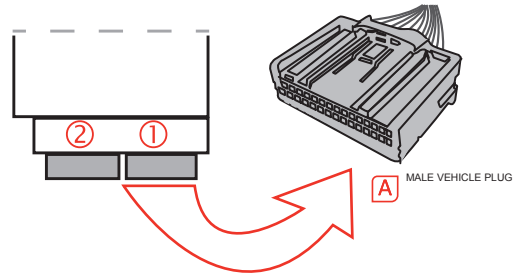


**Disconnect the connector**

**A**

5


Under steering column, START-STOP unit.

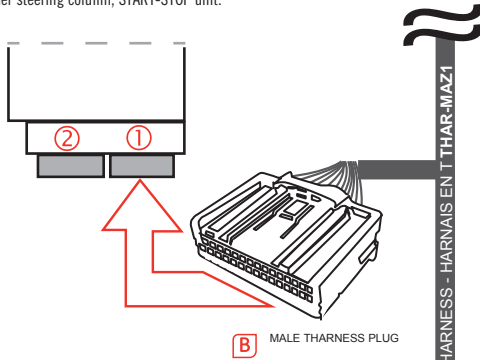

**Connect the connector**

**B**

6

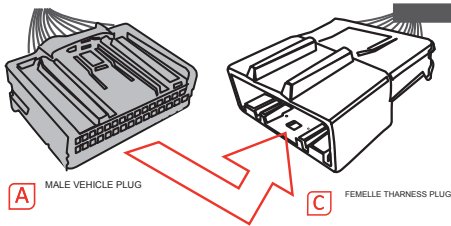

**Connect the connector**

into connector



**A**


**C**

7

**Make other required connections.**

**AUTOMATIC TRANSMISSION WIRING CONNECTION**

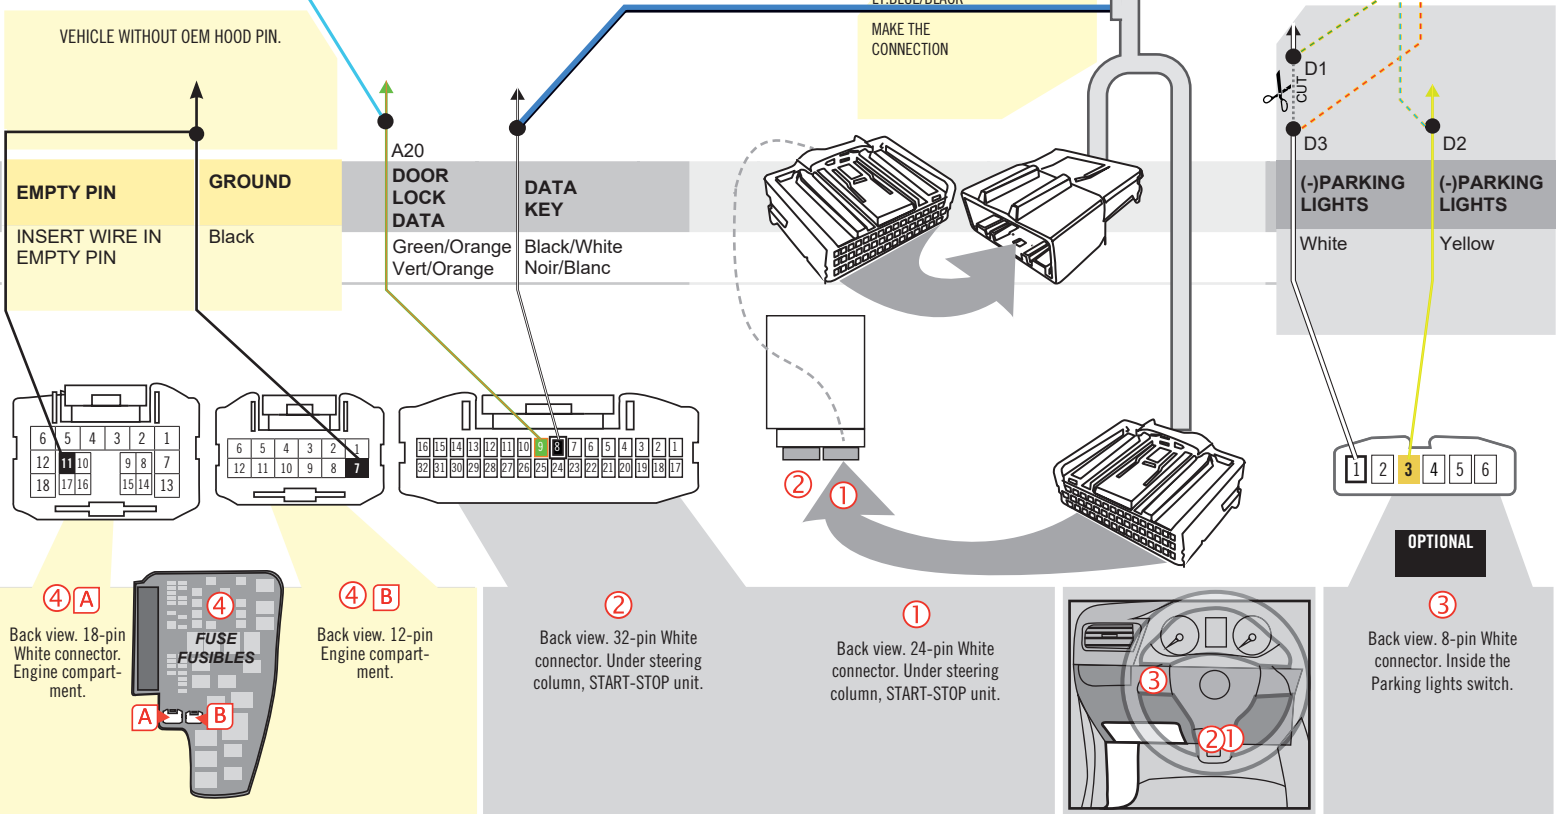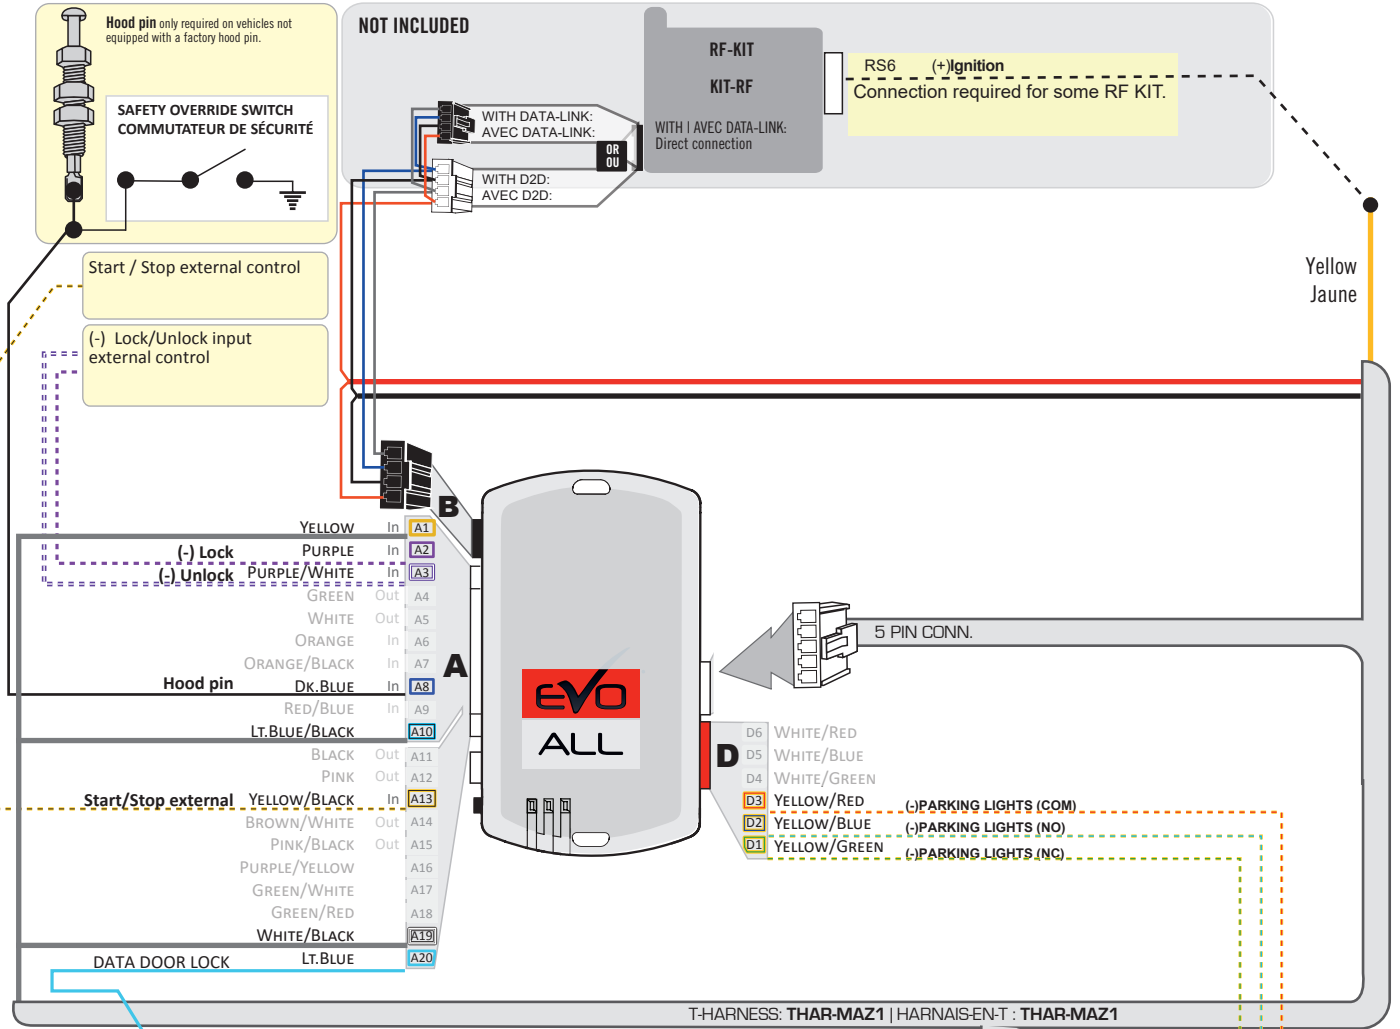

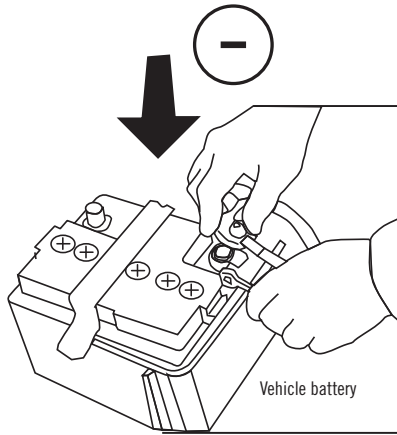

**Reconnect** the (-) terminal of the battery.

CONTINUED NEXT PAGE

# x3 max.


**Do not program more than 3 modules on the same vehicle.**

If more than 3 modules are programmed to a vehicle, it is possible that the remote car starter will never be functional on this vehicle.

If all programming steps were successful and the vehicle cannot be remote started :


- Double check all connections using the installation diagram above as a reference.

If no connection errors can be found then please contact technical support assistance.

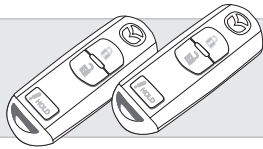

**Make sure** to have two valide vehicle key.


1

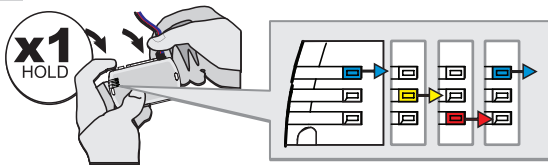

**Press and hold** the programming button:  
**Connect** the 4-PIN Data-link harness (Black connector).


↳ The Blue, Red, Yellow and Blue & Red LEDs will alternatively illuminate.

2

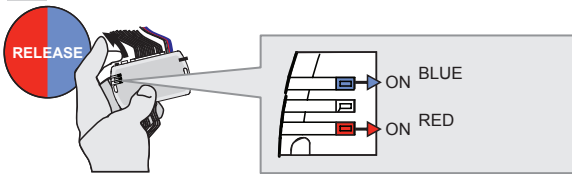


**Release** the programming button when the Blue & Red LEDs are ON.

 *If the LED are not solid BLUE and RED disconnect the 4-PIN Data-link harness (Black connector) and go back to step1.*




3

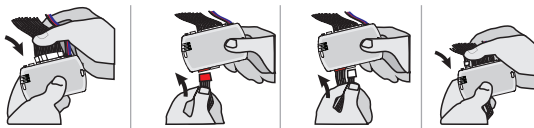

**Connect** the required remaining harnesses.

4

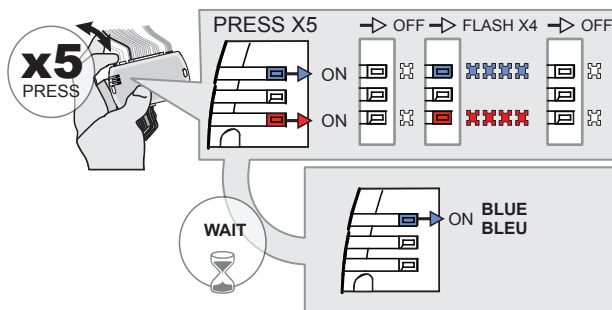

**Press and release** the programming button five times (5x).

↳ The Red & Blue LEDs will alternate between 4 flashes and a pause.


↳ **Wait** for the Blue LED to turn ON.

KEY BYPASS PROGRAMMING PROCEDURE 2/5



KEY #1

5

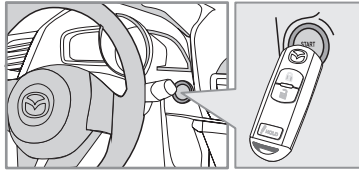


Place the 1st OEM remote close to the front of the START/STOP button exactly as shown.

6




Press the START/STOP button twice to activate the vehicle's Ignition.

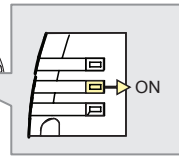


↳ The Yellow LED will turn ON.

7

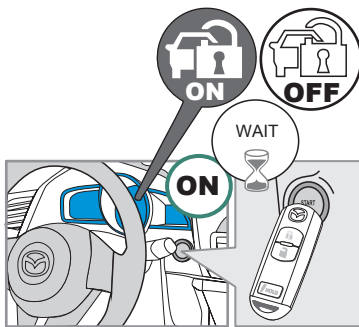


 If the Blue LED is ON solid disconnect the 4-PIN Data-link harness (Black connector) and go back to step 1.



Wait for the security indicator to turn OFF (around 3 seconds).

8

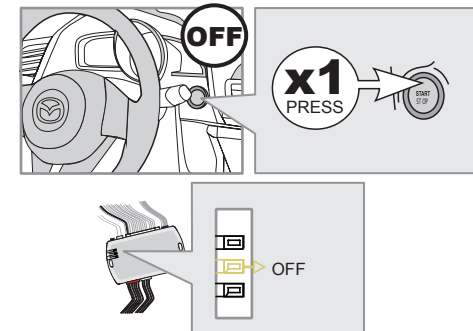

IMMEDIATELY


Press the START/STOP button once to deactivate the vehicle's Ignition.

↳ The Yellow Led will turn OFF.



KEY #2

9

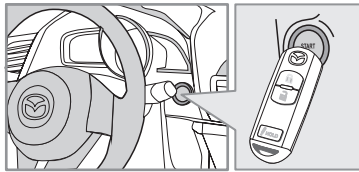


Place the 2nd OEM remote close to the front of the START/STOP button exactly as shown.

10




Press the START/STOP button twice to activate the vehicle's Ignition.

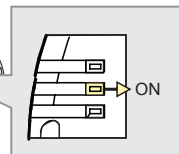


↳ The Yellow LED will turn ON.

KEY BYPASS PROGRAMMING PROCEDURE 3/6




**KEY #2**

**11**

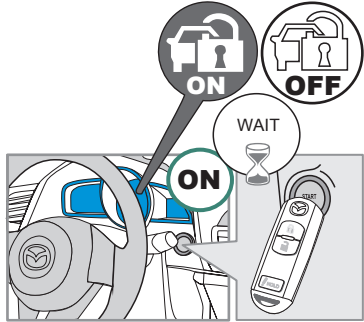

Wait for the security indicator to turn OFF (around 3 seconds).

**12**

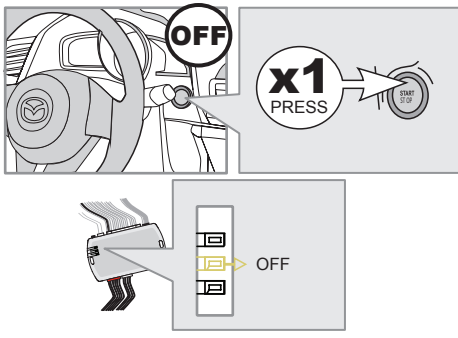


**IMMEDIATELY**


Press the START/STOP button once to deactivate the vehicle's Ignition.

↳ The Yellow Led will turn OFF.


**13**

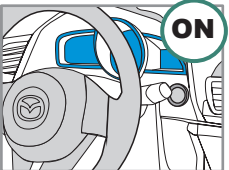

The vehicle's ignition will turn ON

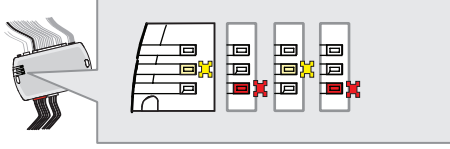


↳ The Yellow and Red LED's will alternatively illuminate.

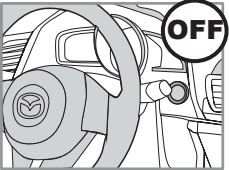

The vehicle's Ignition will turn OFF.

**14**

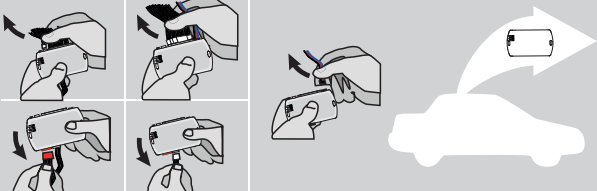


Disconnect all the connectors and after the Data-Link (4-pins) connector.



**KEY BYPASS PROGRAMMING PROCEDURE 4/6**


15

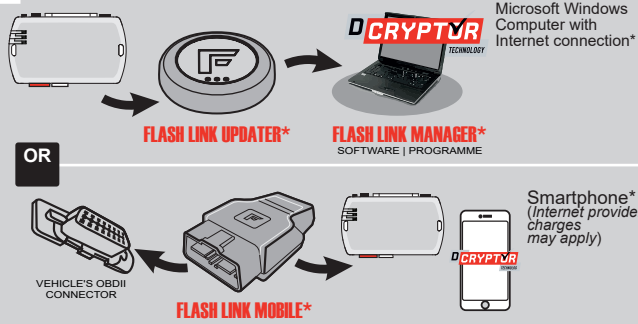

Use the tool:  
**FLASH LINK UPDATER** or  
**FLASH LINK MOBILE**  
to visit the DCryptor menu.

\*Parts required (not included)

16

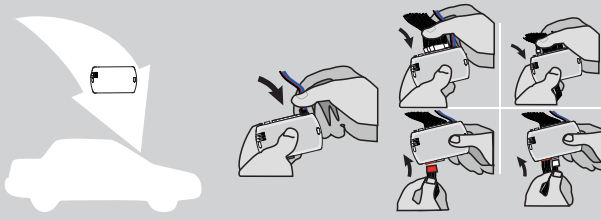


**AFTER DCRYPTOR PROGRAMMING COMPLETED**  
Go back to the vehicle and **reconnect** the 4-Pin (Data-Link) connector and after, all the remaining connector.

17



Repeat step 1 to 12.

18

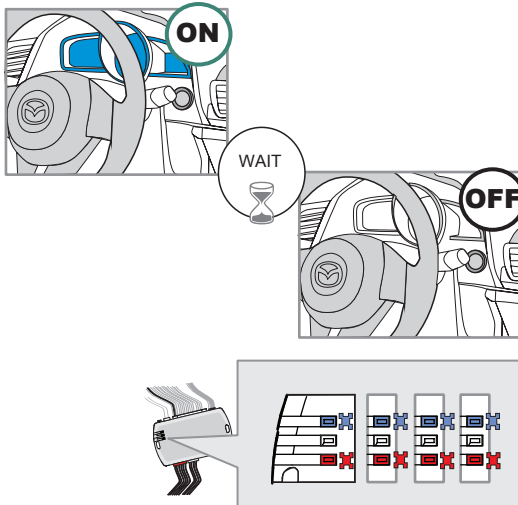


The vehicle's ignition will turn ON

The vehicle's Ignition will turn OFF.


↳ The Blue and Red LEDs will flash.

 19



Disconnect all Harness

20

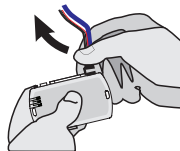


Next:

Disconnect the 4-PIN Data-link harness (Black connector).

CAN PROGRAMMING PROCEDURE


21

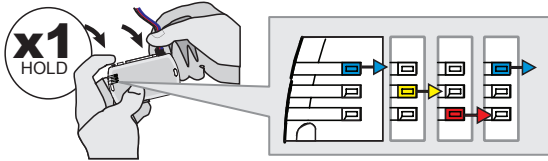

Press and hold the programming button:  
Connect the 4-PIN Data-link harness (Black connector).


↳ The Blue, Red, Yellow and Blue & Red LEDs will alternatively illuminate.

22

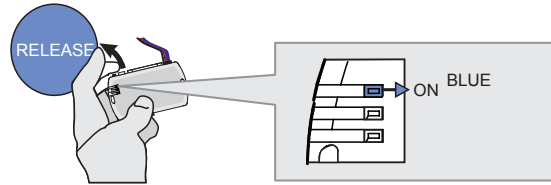


Release the programming button when the Blue LED is ON.

 If the Blue LED is not ON solid disconnect the 4-PIN Data-link harness (Black connector).



23

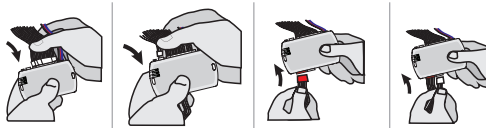


Connect the required remaining harnesses.

24




Press the START/STOP button twice to turn ON the vehicle's Ignition.

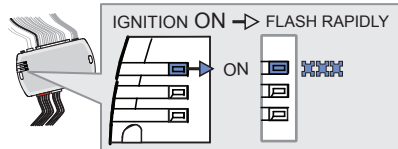


↳ The Blue LED will flash rapidly.

25

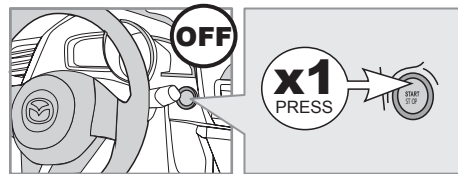

Press the START/STOP button once to turn OFF the vehicle's Ignition.

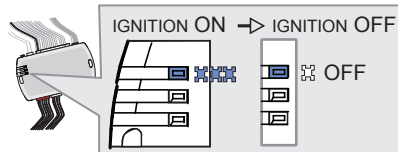


↳ The Blue LED will turn OFF.



The module is now programmed.

REMOTE STARTER FUNCTIONALITY |

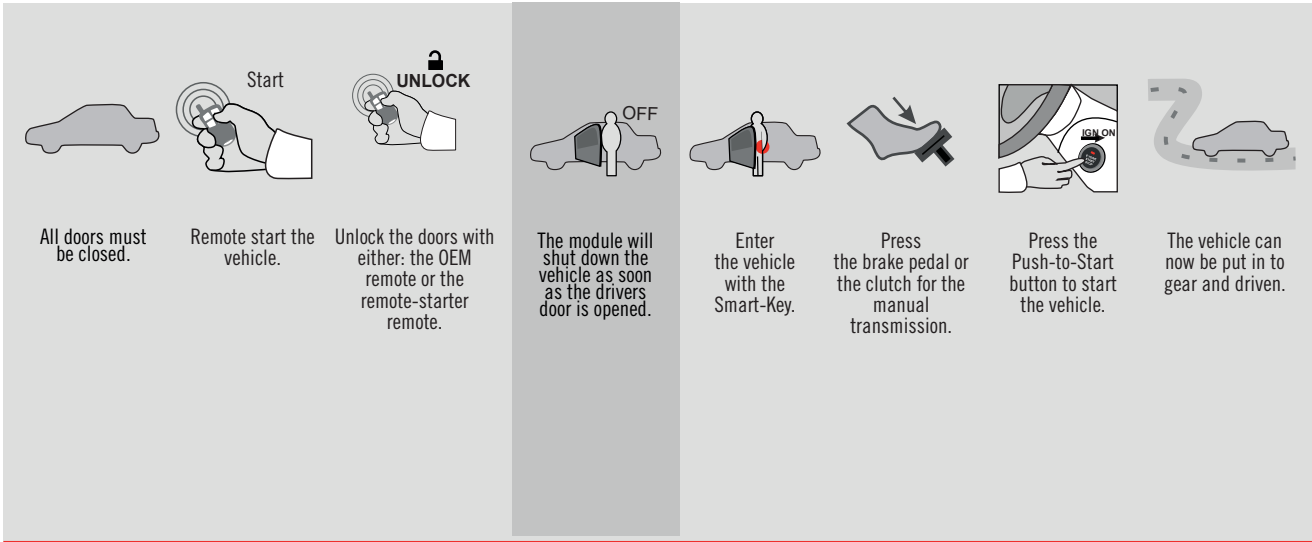

# THAR-MAZ1

## THARNESS STAND ALONE INSTALLATION

ADDENDUM - SUGGESTED WIRING CONFIGURATION



**ONLY COMPATIBLE WITH AUTOMATIC TRANSMISSION VEHICLES.**

Vehicle functions supported in this diagram (functional if equipped)

VEHICLE	YEARS	Connection #		Vehicle functions supported in this diagram (functional if equipped)														
		REMOTE STARTER NO DOORLOCK	REMOTE STARTER & DOOR-LOCK CONTROL	Immobilizer bypass	T-Harness	Lock	Unlock	Arm	Tachometer	Door Status	Trunk Status	Hood Status protection remote start	Hand-Brake Status	Foot-Brake Status	OEM Remote monitoring	Alarm mode		
<b>MAZDA</b>																		
CX9 Push-to-Start - Automatic transmission	2016	1	2	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•



**HARDWARE VERSION**

MINIMUM **6**

**FIRMWARE VERSION**

**71.[35]**

FORD MINIMUM



**Parts required** (Not included)

1X 1K Ohm Resistor (with doorlock)

**FLASH LINK MANAGER**

Software version 3.54 and more



**FLASH LINK UPDATER 2**

1X



Microsoft Windows Computer & Internet connection



**PARTS REQUIRED (NOT INCLUDED)**

**FLASH LINK UPDATER 2**

**FLASH LINK MANAGER**  
SOFTWARE | PROGRAMME

Microsoft Windows Computer  
(Internet connection required)

**MANDATORY**

HOOD PIN




REMOTE START SAFETY OVERRIDE SWITCH

VALET SWITCH


Part #: RSPB available, Sold separately.

**Notice:** the installation of safety elements are mandatory. The hood pin and the valet switch are essential security elements and must be installed.

**STAND ALONE CONFIGURATION**


	UNIT OPTION	DESCRIPTION
 <p>Program bypass option:</p>	<b>D1</b>	OEM Remote Stand Alone Remote Starter
 <p>Program bypass option with oem remote:</p>	<b>C1</b>	OEM Remote Monitoring
 <p>Program bypass option with RF KIT antenna:</p>	<b>H1 to H6</b>	Supported RF Kits and select RF Kit

**REMOTE STARTER FUNCTIONNALITY**




All doors must be closed.

**3X**



Press the OEM remote's Lock button 3x to remote-start (or remote-stop) the vehicle.



The vehicle will START.

**REMOTE STARTER DIAGNOSTICS**  
MODULE RED LED

<b>x2 flash :</b>	Brake ON
<b>x3 flash :</b>	No tach
<b>x4 flash :</b>	Ignition before start
<b>x5 flash :</b>	Hood Open

**REMOTE STARTER WARNING CARD**



**CUT THIS WARNING CARD AND STICK IT ON A VISIBLE PLACE:**  
or use the package RSPB, Sold separately.


**WARNING | ATTENTION**

**REMOTE STARTER**


THE VEHICLE CAN BE STARTED BY EITHER: PRESSING THE LOCK BUTTON ON THE OEM REMOTE 3 TIMES CONSECUTIVELY OR BY A SMARTPHONE. **TURN ON** THE SAFETY SWITCH LOCATED UNDER THE DASHBOARD BEFORE WORKING ON THE VEHICLE.

DESCRIPTION


① Under steering column, START-STOP unit

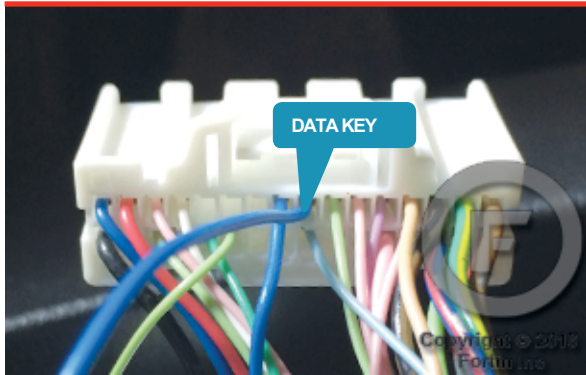



② Under steering column, START-STOP unit

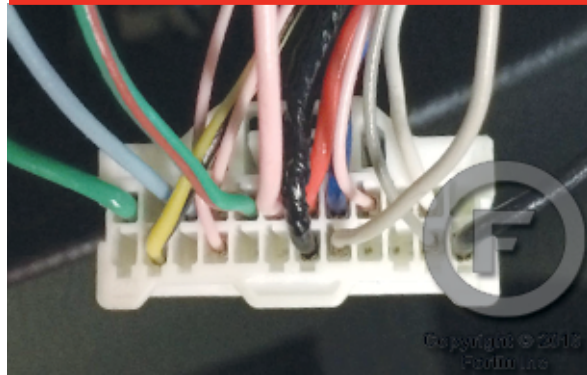

③ At parking lights switch

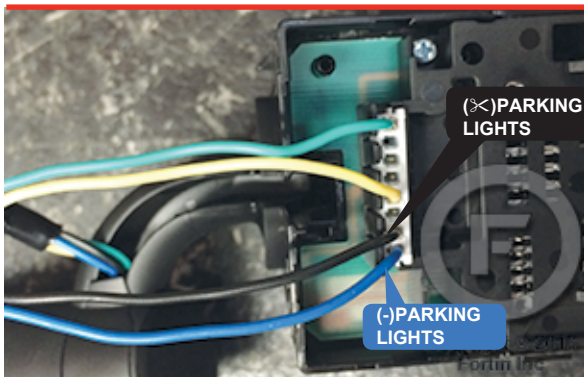


④ Harness in driver kick panel

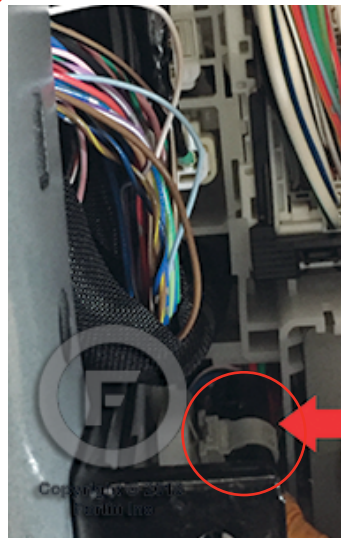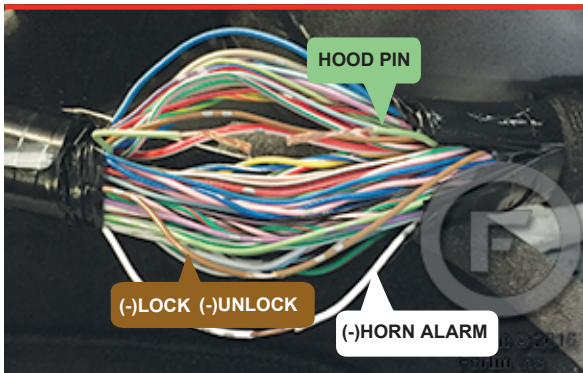

CONNECTION 1

REMOTE CAR STARTER ONLY - DOORLOCK BY OEM REMOTE

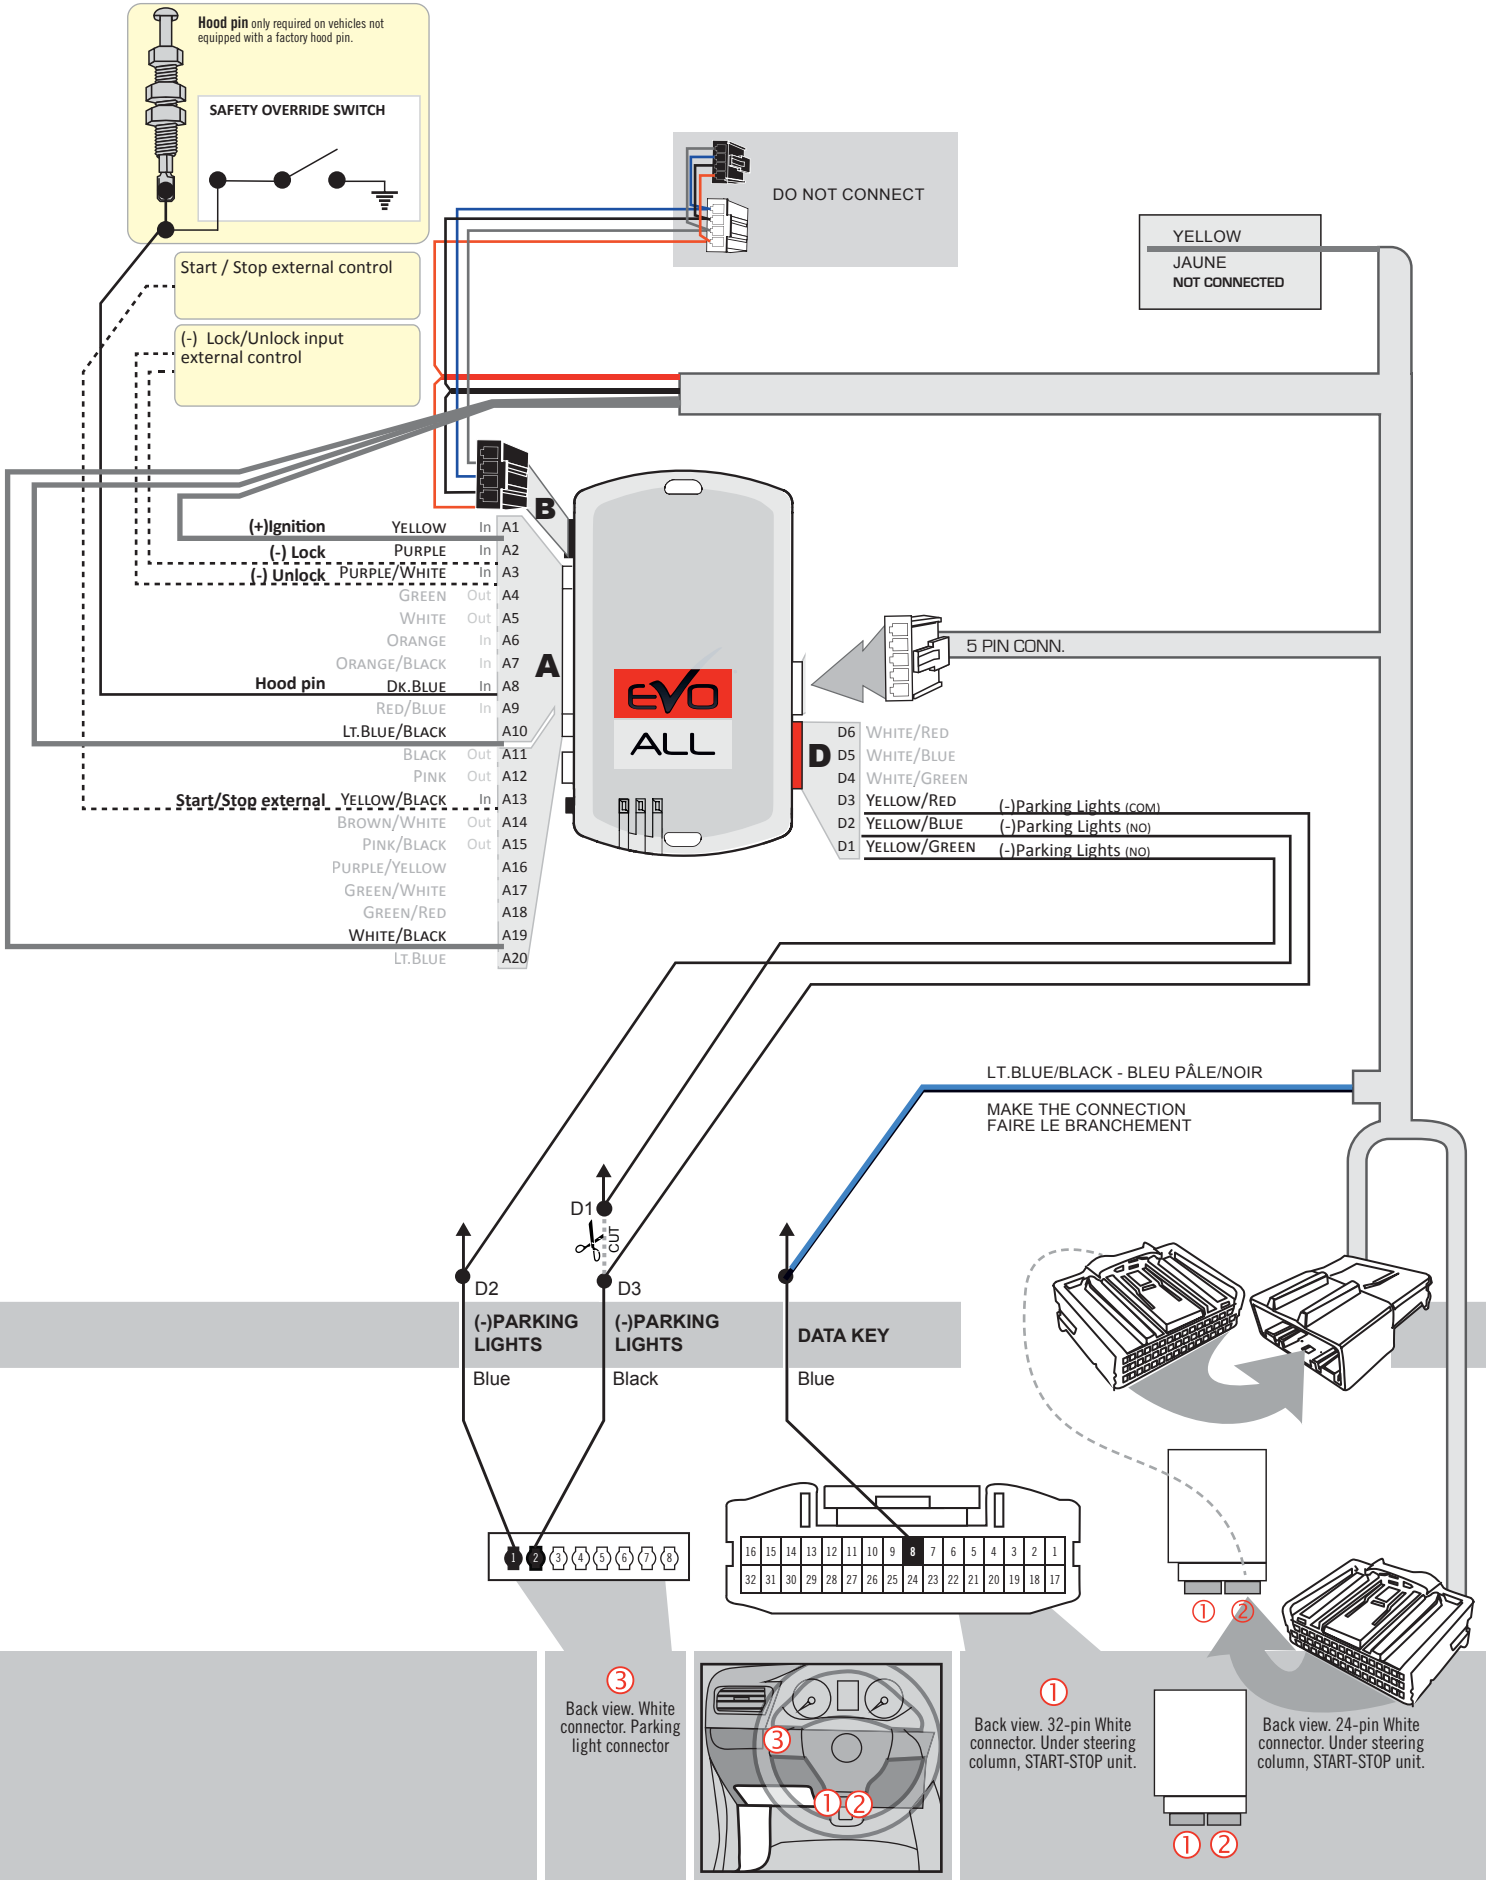

CONNECTION 2

REMOTE CAR STARTER AND DOORLOCK



Program bypass option:

UNIT OPTION

DESCRIPTION

**C1**

OEM Remote status (Lock/Unlock) monitoring


**G1**

Evo Alarm enable



CONNECTION 2

REMOTE CAR STARTER AND DOORLOCK

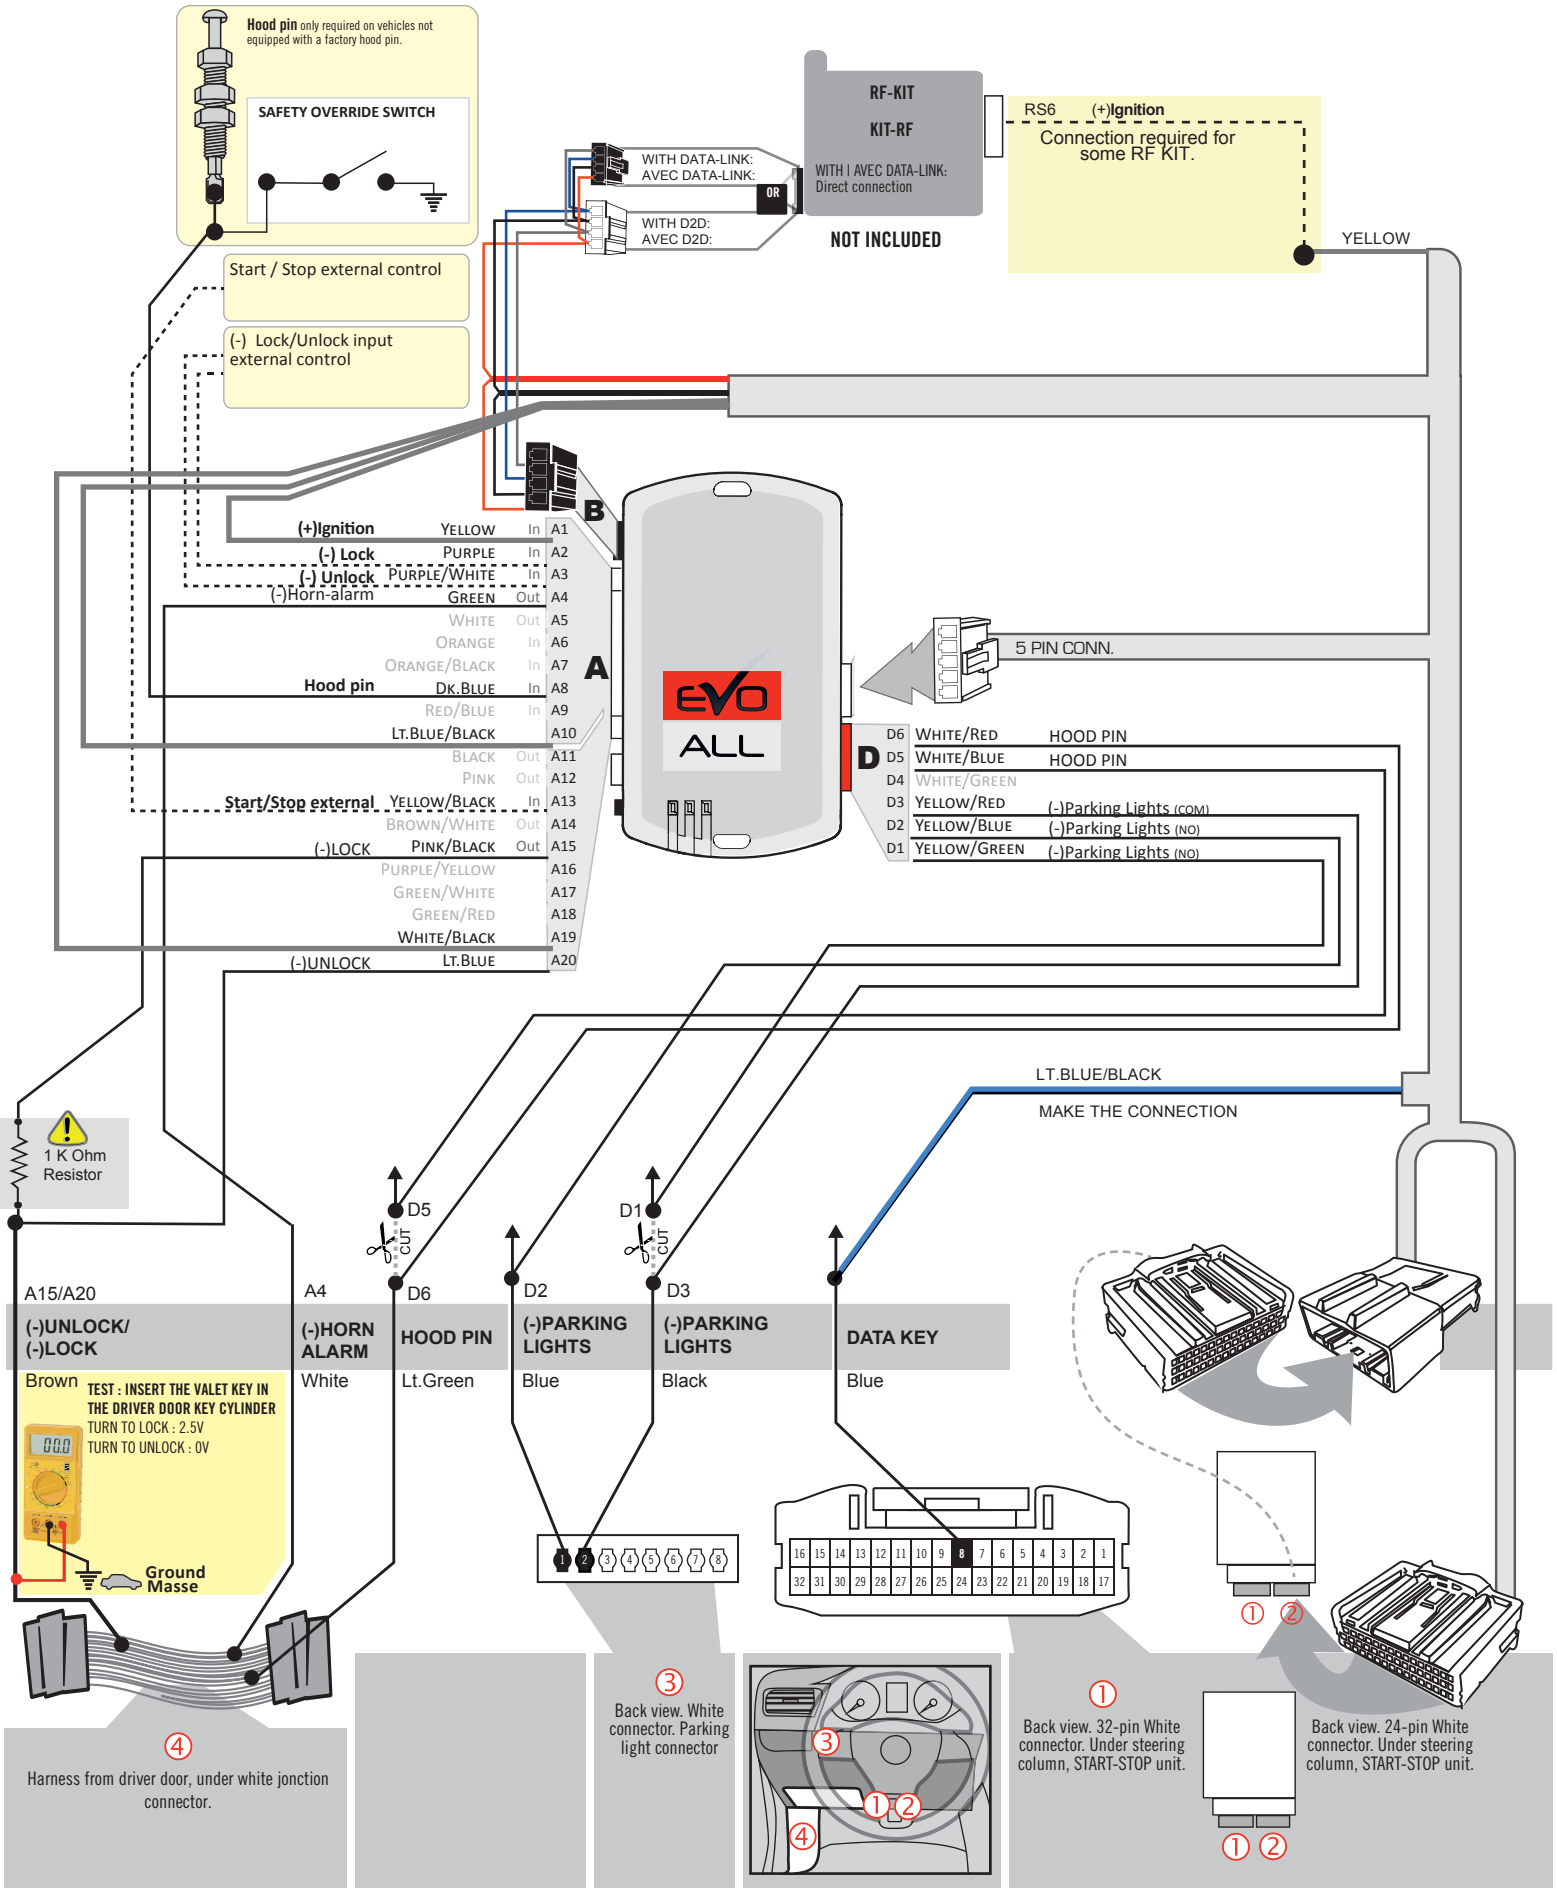

# x3 max.


**Do not program more than 3 modules on the same vehicle.**

If more than 3 modules are programmed to a vehicle, it is possible that the remote car starter will never be functional on this vehicle.

If all programming steps were successful and the vehicle cannot be remote started :


- Double check all connections using the installation diagram above as a reference.

If no connection errors can be found then please contact technical support assistance.

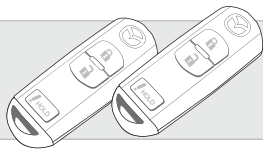

**Make sure** to have two valide vehicle key.


1

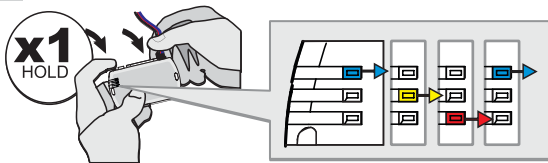

**Press and hold** the programming button:  
**Connect** the 4-PIN Data-link harness (Black connector).


↳ The Blue, Red, Yellow and Blue & Red LEDs will alternatively illuminate.

2

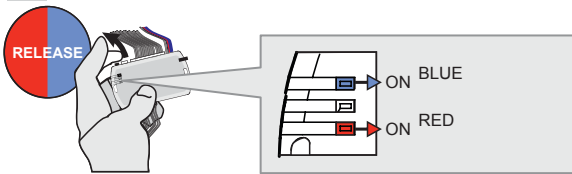


**Release** the programming button when the Blue & Red LEDs are ON.

 *If the LED are not solid BLUE and RED disconnect the 4-PIN Data-link harness (Black connector) and go back to step1.*




3

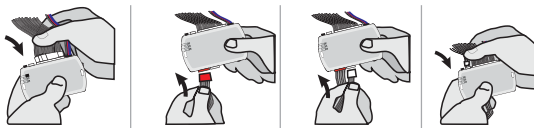

**Connect** the required remaining harnesses.

4

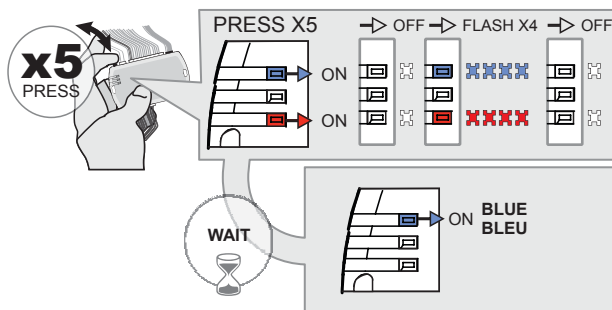

**Press and release** the programming button five times (5x).


↳ The Red & Blue LEDs will alternate between 4 flashes and a pause.

↳ **Wait** for the Blue LED to turn ON.




KEY #1

5

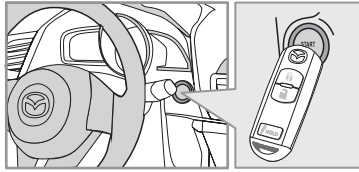


Place the 1st OEM remote close to the front of the START/STOP button exactly as shown.

6

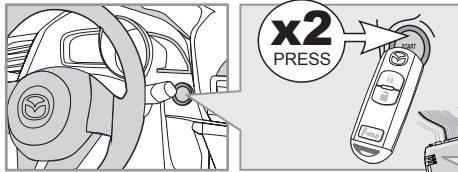


Press the START/STOP button twice to activate the vehicle's Ignition.

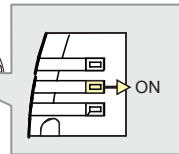


↳ The Yellow LED will turn ON.

7

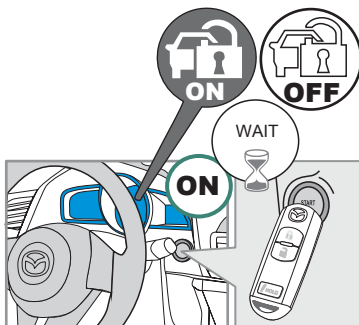


 If the Blue LED is ON solid disconnect the 4-PIN Data-link harness (Black connector) and go back to step 1.



Wait for the security indicator to turn OFF (around 3 seconds).

8

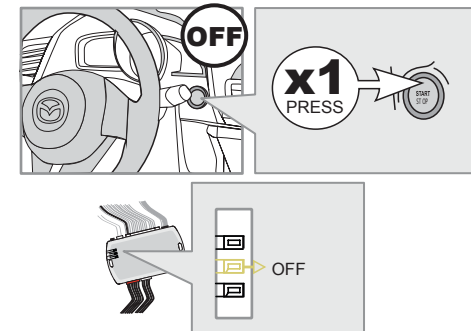

**IMMEDIATELY**


Press the START/STOP button once to deactivate the vehicle's Ignition.

↳ The Yellow Led will turn OFF.




KEY #2

9

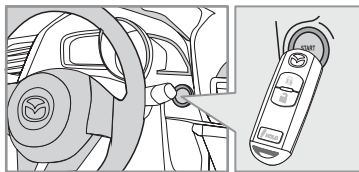


Place the 2nd OEM remote close to the front of the START/STOP button exactly as shown.

10

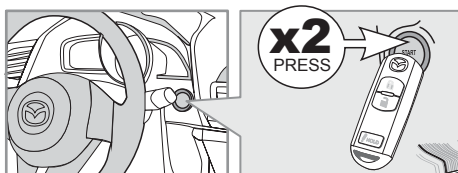


Press the START/STOP button twice to activate the vehicle's Ignition.

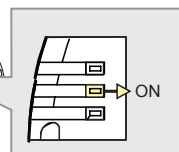


↳ The Yellow LED will turn ON.

KEY BYPASS PROGRAMMING PROCEDURE 3/5

**11**




KEY#2

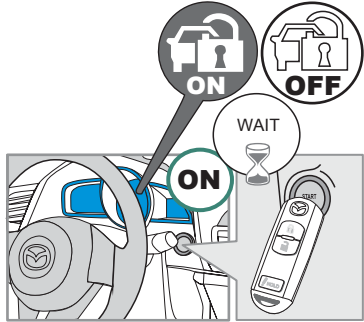


Wait for the security indicator to turn OFF (around 3 seconds).

**12**

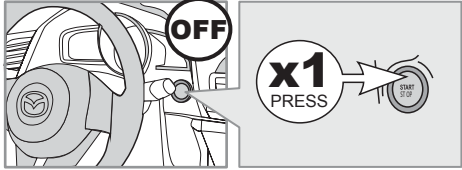


IMMEDIATELY

Press the START/STOP button once to deactivate the vehicle's Ignition.

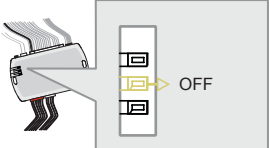


↳ The Yellow Led will turn OFF.


**13**

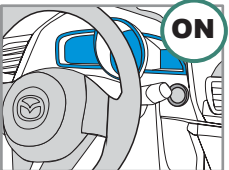

The vehicle's ignition will turn ON

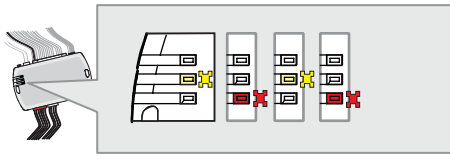



↳ The Yellow and Red LED's will alternatively illuminate.

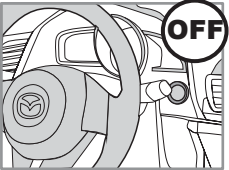

The vehicle's Ignition will turn OFF.

**14**

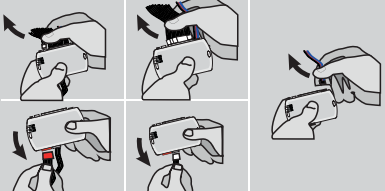


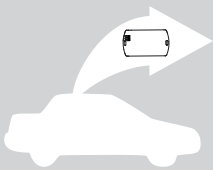

**Disconnect** all the connectors and after the Data-Link (4-pins) connector.

**KEY BYPASS PROGRAMMING PROCEDURE 4/5**

15

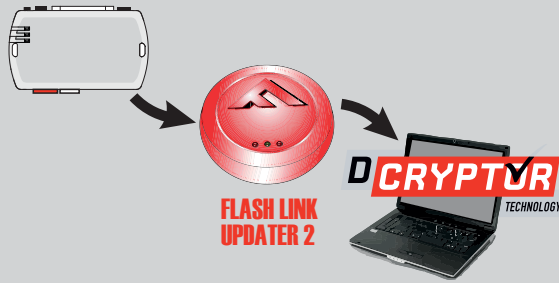

Connect the module to the FLASH LINK UPDATER 2 and visit the DCRYPTOR menu in the Flash-Link Manager.

Parts required (not included)




**FLASH LINK UPDATER 2**

**FLASH LINK MANAGER**  
SOFTWARE | PROGRAMME



Microsoft Windows Computer with Internet connection

16

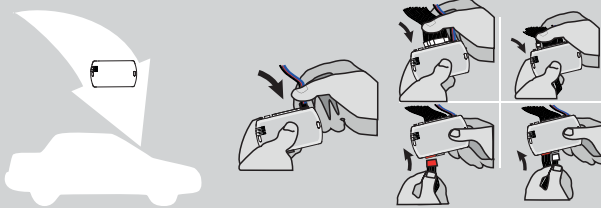


**AFTER DCRYPTOR PROGRAMMING COMPLETED**  
Go back to the vehicle and **reconnect** the 4-Pin (Data-Link) connector and after, all the remaining connector.

17




Repeat step 1 to 12.


18

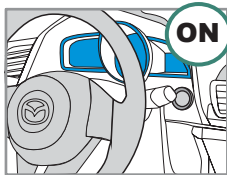

The vehicle's ignition will turn ON

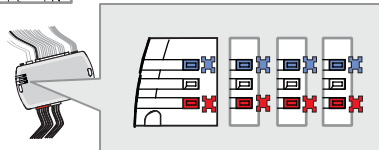


↳ The Blue and Red LEDs will flash.

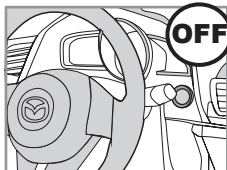


The vehicle's Ignition will turn OFF.

 19



Disconnect all Harness

20

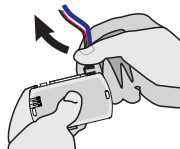

et ensuite:

Disconnect the 4-PIN Data-link harness (Black connector).


KEY BYPASS PROGRAMMING PROCEDURE 5/5

CAN PROGRAMMING PROCEDURE

21

**CAUTION FOR: EVO-ALARM OPTION**


If the module GREEN (A4) wire is connected to the HORN make sure that the option G1 (EVO-ALARM) is enabled before CAN programming.

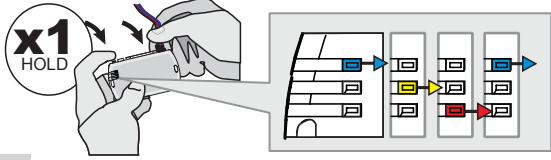

**Press and hold** the programming button:  
**Connect** the 4-PIN Data-link harness (Black connector).


↳ The Blue, Red, Yellow and Blue & Red LEDs will alternatively illuminate.

22

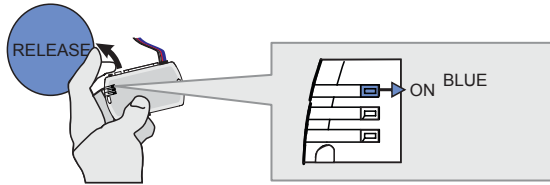


**Release** the programming button when the Blue LED is ON.

 If the Blue LED is not ON solid disconnect the 4-PIN Data-link harness (Black connector).



23

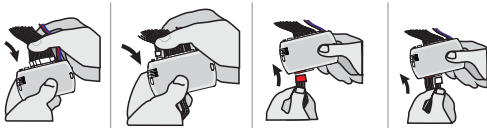


**Connect** the required remaining harnesses.

24




**Press** the START/STOP button twice to activate the vehicle's Ignition.

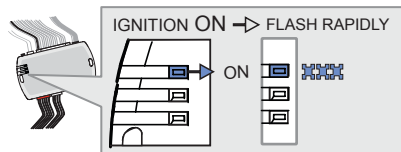


↳ The Blue LED will flash rapidly.

25

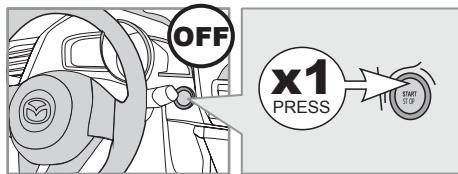

**Press** the START/STOP button once to deactivate the vehicle's Ignition.

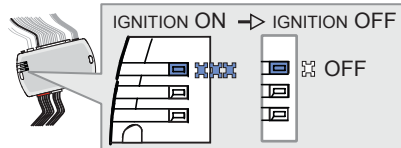

↳ The Blue LED will turn OFF.



The module is now programmed.

REMOTE STARTER FUNCTIONALITY



All doors must be closed.



Do not remote-start with the OEM remote inside the vehicle.



Never remote-start with a passenger inside the vehicle.



**Remote start** the vehicle.



*The module will shut down the vehicle as soon as a door is opened.*

STAND ALONE THAR-MAZ1 THARNESS INSTALLATION - 2 KEYS PROGRAMMING

ADDENDUM - SUGGESTED WIRING CONFIGURATION



**ONLY COMPATIBLE WITH AUTOMATIC TRANSMISSION VEHICLES.**

Vehicle functions supported in this diagram (functional if equipped)

VEHICLE	YEARS	Vehicle functions supported in this diagram (functional if equipped)												
		Immobilizer bypass	T-Harness	Lock	Unlock	Arm	Disarm	Tachometer	Door Status	Trunk Status	Hood Status protection remote start	Hand-Brake Status	Foot-Brake Status	OEM Remote monitoring
<b>MAZDA</b>														
CX9	Push-to-Start - Automatic transmission	2016-2021	•	•	•	•	•	•	•	•	•	•	•	•



FIRMWARE VERSION

**85.[11]**

MINIMUM

To add the firmware version and the options, use the **FLASH LINK UPDATER** or **FLASH LINK MOBILE** tool, sold separately.

<p><b>IF THE VEHICLE IS NOT EQUIPPED WITH FUNCTIONAL HOOD PIN:</b></p>	<b>A11</b>	<b>OFF</b>	Hood trigger (Output Status).
--	------------	------------	-------------------------------

	Program bypass option:	UNIT OPTION	DESCRIPTION
		<b>C1</b>	OEM Remote status (Lock/Unlock) monitoring

**NOTES**

**THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.**

**MANDATORY INSTALL**

\*HOOD PIN



**HOOD STATUS:** THE HOOD PIN SWITCH MUST BE INSTALLED IF THE VEHICLE CAN BE REMOTE STARTED WITH THE HOOD OPEN, SET FUNCTION **A11** TO OFF.

<b>A11</b>	<b>OFF</b>
------------	------------

**Notice:** the installation of safety elements are mandatory. The hood pin is an essential security element and must be installed.

THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.



**PARTS REQUIRED (NOT INCLUDED)**


1x **FLASH LINK UPDATER, FLASH LINK MANAGER**  
SOFTWARE | PROGRAMME  
1x Microsoft Windows Computer with Internet connection

OR


1x **FLASH LINK MOBILE, FLASH LINK MOBILE APP**  
Smartphone *Android* or *iOS* with Internet connection (*provider charges may apply*).

**MANDATORY**

HOOD PIN



REMOTE START SAFETY OVERRIDE SWITCH

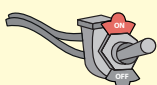
 





VALET SWITCH


Part #: RSPB available, Sold separately.



**Notice:** the installation of safety elements are mandatory. The hood pin and the valet switch are essential security elements and must be installed.


**STAND ALONE CONFIGURATION**

	Program bypass option	UNIT OPTION	DESCRIPTION
	<b>OEM Remote Stand Alone Remote Starter:</b>	<b>D1.10</b> 	<b>By default, LOCK, LOCK, LOCK</b> Par défaut, VERROUILLE,VERROUILLE,VERROUILLE
		<b>D1.1</b> 	
	<b>Program bypass option with oem remote:</b>	<b>C1</b>	OEM Remote Monitoring
	<b>Program bypass option with RF KIT antenna:</b>	<b>H1 to H6</b>	Supported RF Kits and <b>select RF Kit</b>

**REMOTE STARTER FUNCTIONALITY**

 All doors must be closed.


**3X**   Press the OEM remote's Lock button 3x to remote-start (or remote-stop) the vehicle.

 The vehicle will START.

**REMOTE STARTER DIAGNOSTICS**

MODULE RED LED	
x2 flash :	Brake ON
x3 flash :	No tach
x4 flash :	Ignition before start
x5 flash :	Hood Open
PARKING LIGHTS	
x4 flash:	FOB in car
x5 flash:	Hood open
x6 flash:	Brake ON
x7 flash:	Door open
x8 flash:	Bad Encryption/ key code

**REMOTE STARTER WARNING CARD**



**CUT THIS WARNING CARD AND STICK IT ON A VISIBLE PLACE:**  
or use the package RSPB, Sold separately.


**WARNING | ATTENTION**

**REMOTE STARTER**


THE VEHICLE CAN BE STARTED BY EITHER: PRESSING THE LOCK BUTTON ON THE OEM REMOTE 3 TIMES CONSECUTIVELY OR BY A SMARTPHONE. **TURN ON** THE SAFETY SWITCH LOCATED UNDER THE DASHBOARD BEFORE WORKING ON THE VEHICLE.

DESCRIPTION

① Under steering column, START-STOP unit

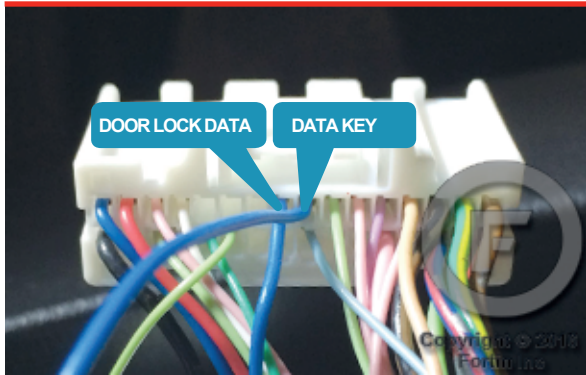


② Under steering column, START-STOP unit

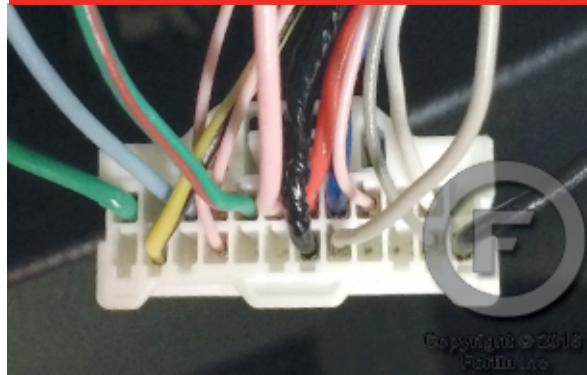

③ At parking lights switch



④ Engine compartment - without OEM ALARM

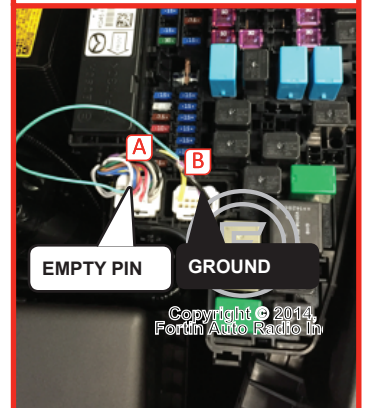




# ATTENTION

Before disconnecting a module, a computer or a control unit from a vehicle: Always disconnect the negative terminal from the vehicle's battery.


In these vehicles, the factory keyless entry module is sensitive to interference and may cease to operate if some precautions are not taken. Disconnect the (-) terminal of the battery prior to disconnecting the connectors at the smartkey module below the steering wheel to avoid damage to the smartkey entry module.

1

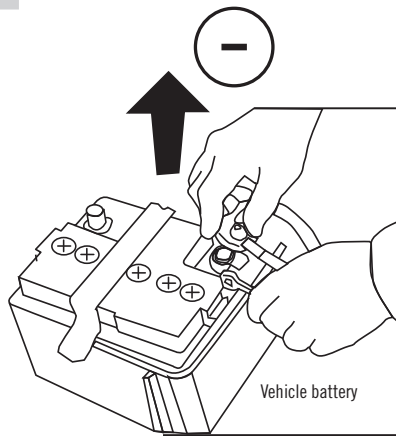


Disconnect the (-) terminal of the battery.

2

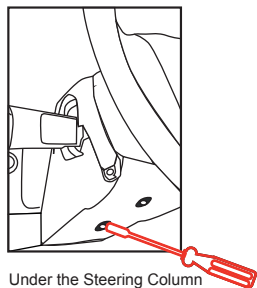


Under the Steering Column

1 Unscrew.

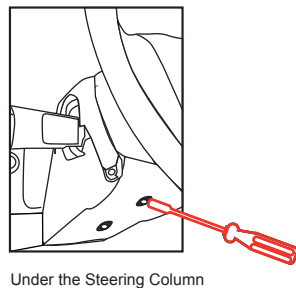


Under the Steering Column

2 Unscrew

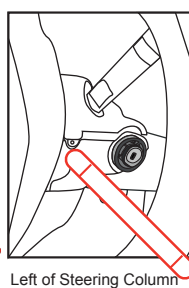


Left of Steering Column

3 Onclip

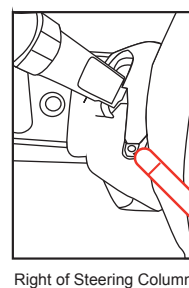

Right of Steering Column

4 Onclip

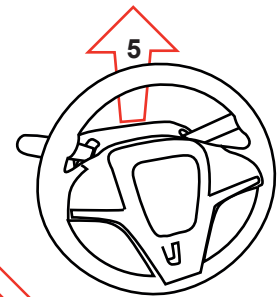


5 Gently pull up the cover of the steering column.

3


Make the following connections.

CONTINUED NEXT PAGE

4

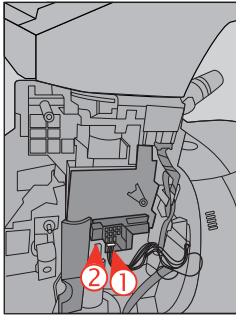

Under steering column, START-STOP unit.

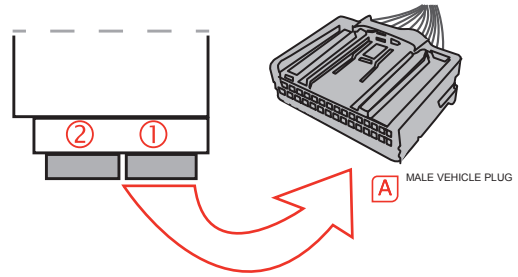


Disconnect the connector

A

5


Under steering column, START-STOP unit.

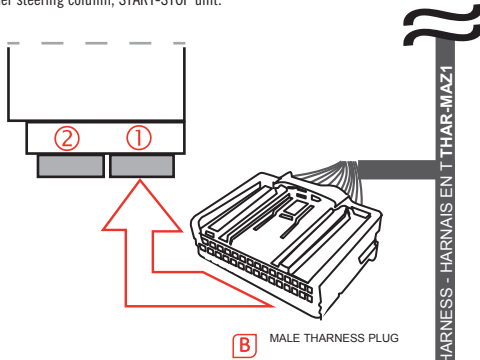

Connect the connector

B

6

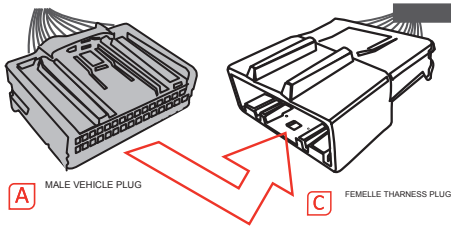

Connect the connector

A



into connector


C

7

Make other required connections.

**AUTOMATIC TRANSMISSION WIRING CONNECTION**

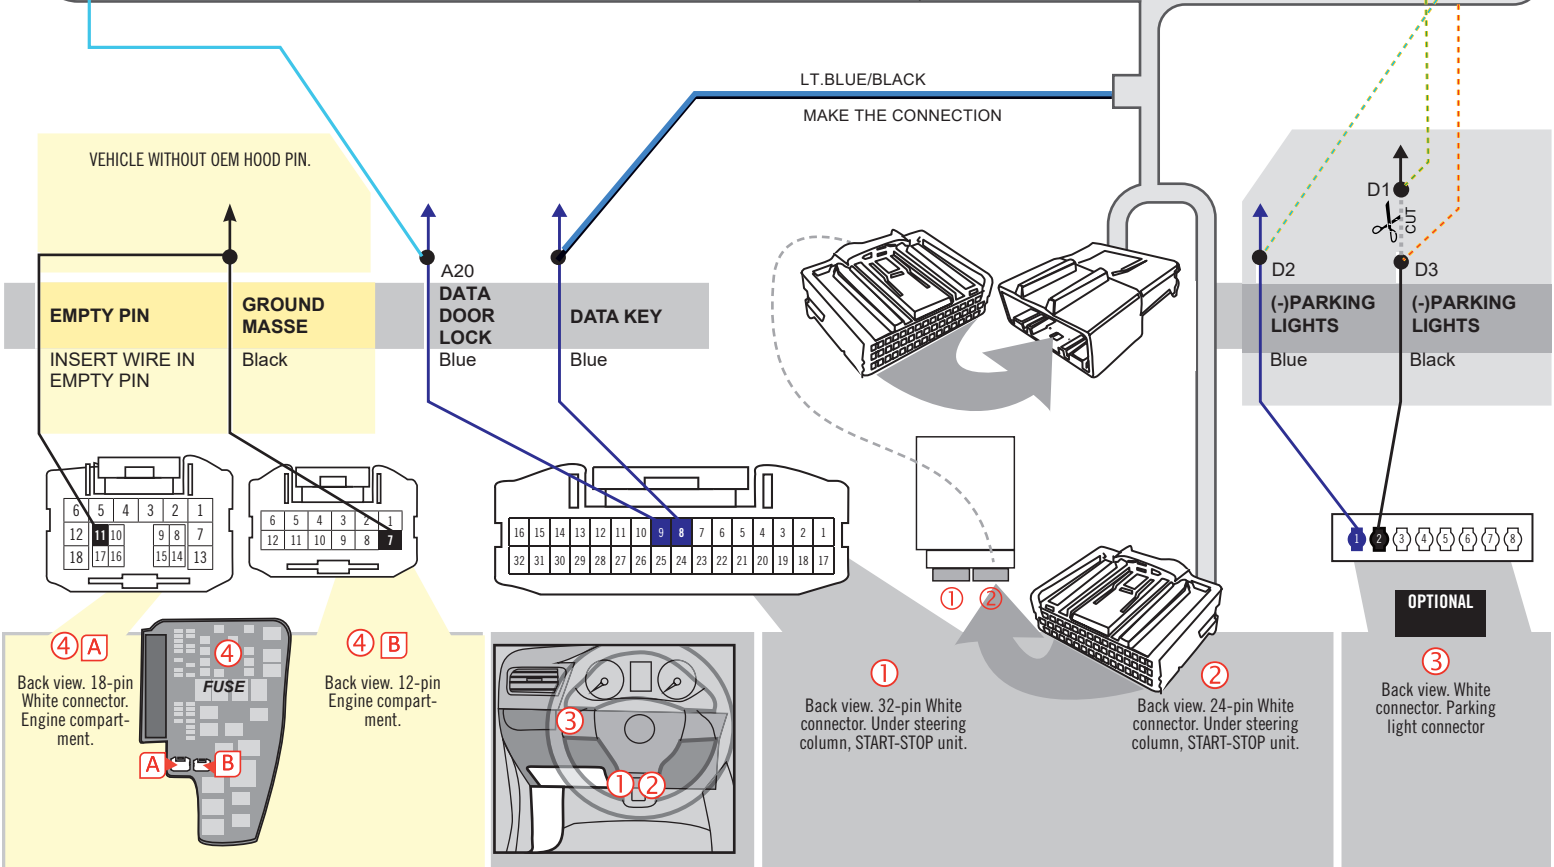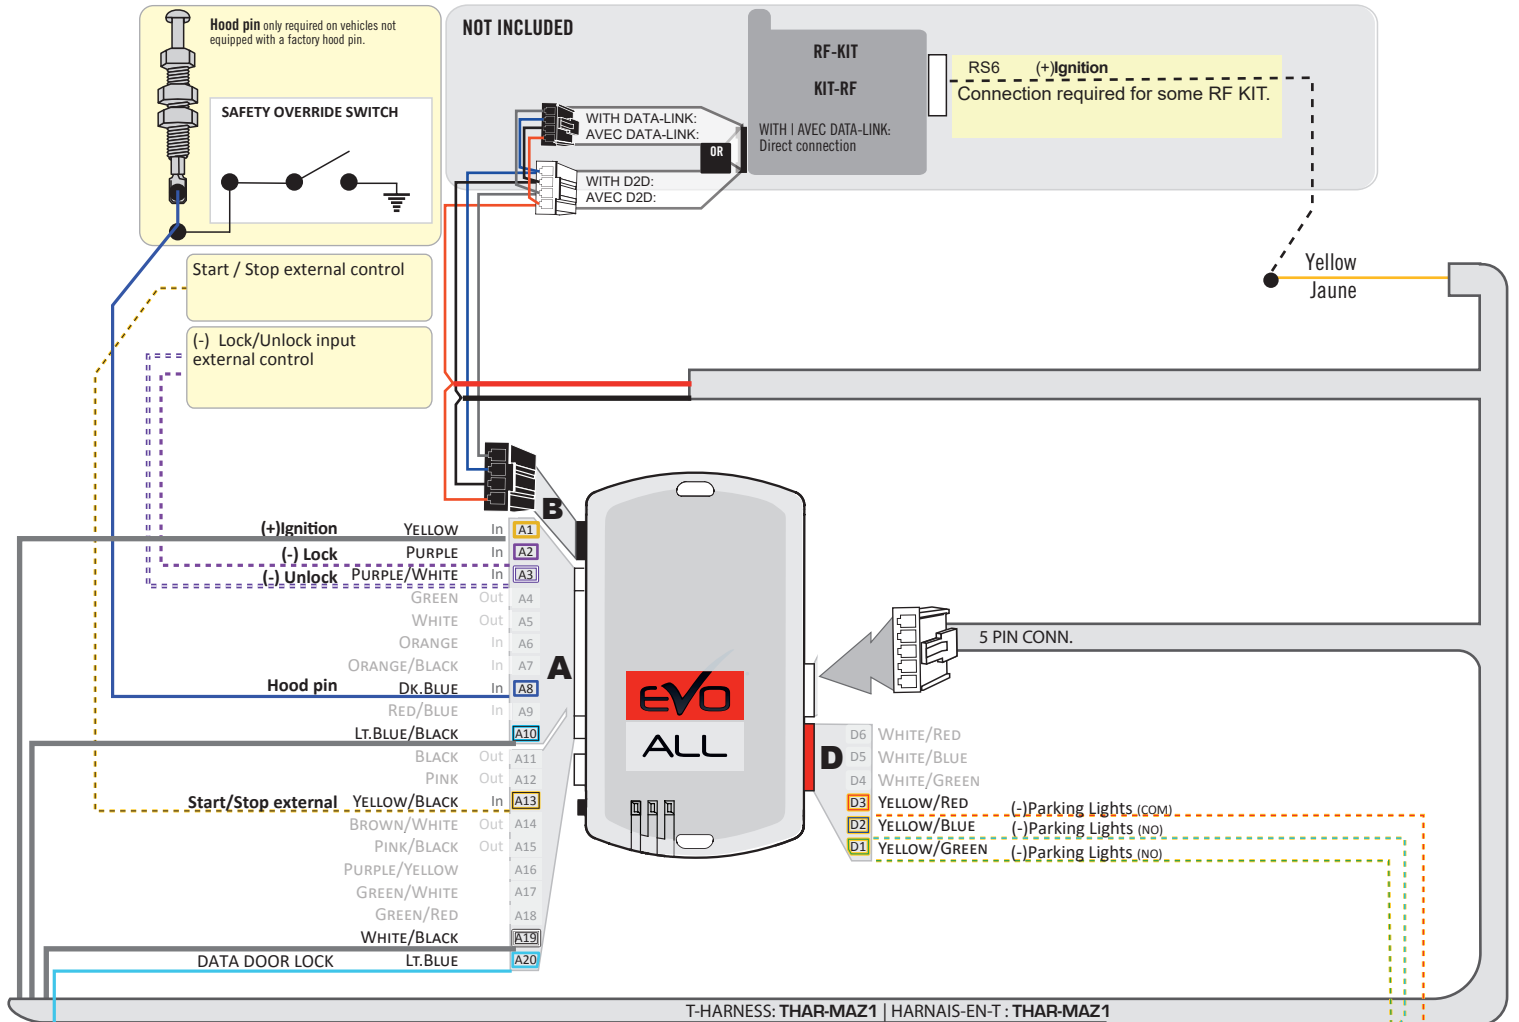

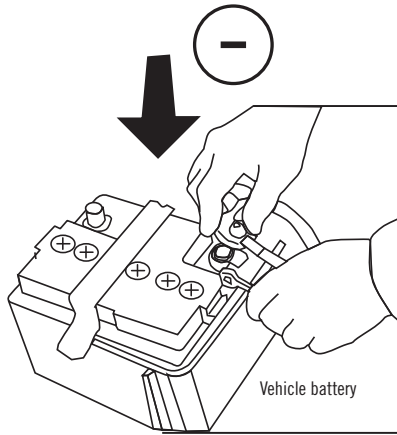

**Reconnect** the (-) terminal of the battery.

CONTINUED NEXT PAGE

# x3 max.


**Do not program more than 3 modules on the same vehicle.**

If more than 3 modules are programmed to a vehicle, it is possible that the remote car starter will never be functional on this vehicle.

If all programming steps were successful and the vehicle cannot be remote started :


- Double check all connections using the installation diagram above as a reference.

If no connection errors can be found then please contact technical support assistance.

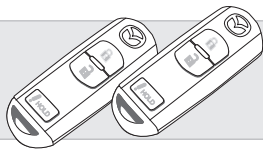

**Make sure** to have two valide vehicle key.


1

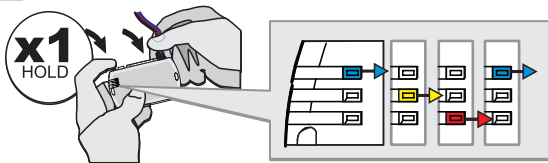

**Press and hold** the programming button:  
**Connect** the 4-PIN Data-link harness (Black connector).


↳ The Blue, Red, Yellow and Blue & Red LEDs will alternatively illuminate.

2

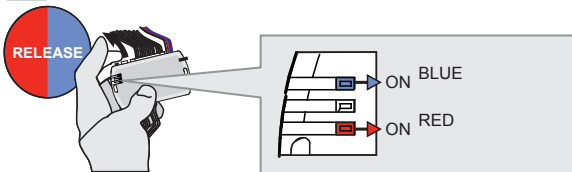


**Release** the programming button when the Blue & Red LEDs are ON.

 *If the LED are not solid BLUE and RED disconnect the 4-PIN Data-link harness (Black connector) and go back to step1.*




3

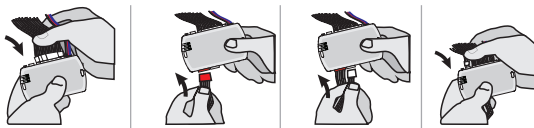

**Connect** the required remaining harnesses.

4

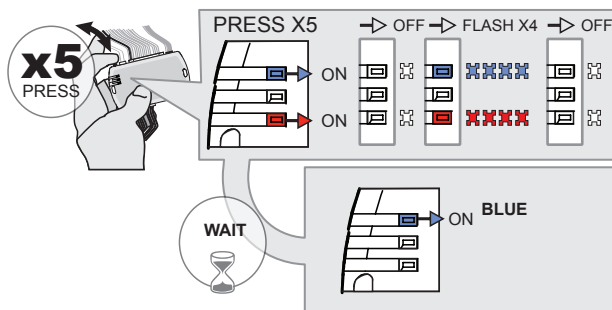

**Press and release** the programming button five times (5x).

↳ The Red & Blue LEDs will alternate between 4 flashes and a pause.

↳ Les DELs Bleue et Rouge alterneront entre 4 clignotements et 1 pause.


↳ **Wait** for the Blue LED to turn ON.

KEY BYPASS PROGRAMMING PROCEDURE 2/5




KEY #1

5

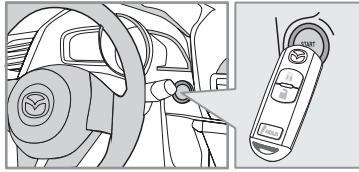


Place the 1st OEM remote close to the front of the START/STOP button exactly as shown.

6

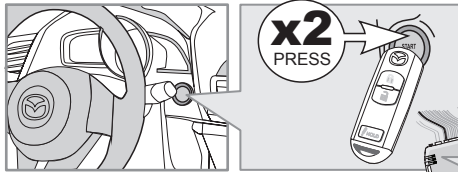


Press the START/STOP button twice to activate the vehicle's Ignition.

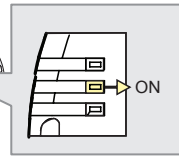


↳ The Yellow LED will turn ON.

7

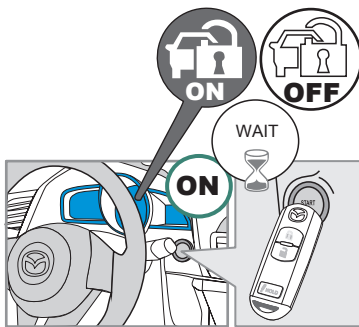


 If the Blue LED is ON solid disconnect the 4-PIN Data-link harness (Black connector) and go back to step 1.




Wait for the security indicator to turn OFF (around 3 seconds).

8

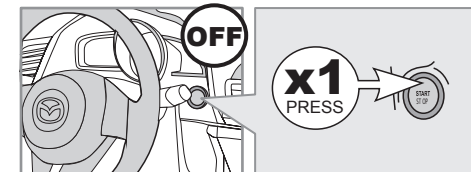

IMMEDIATELY

Press the START/STOP button once to deactivate the vehicle's Ignition.

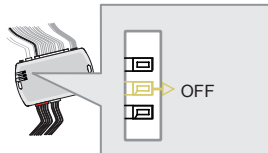


↳ The Yellow Led will turn OFF.



KEY #2

9

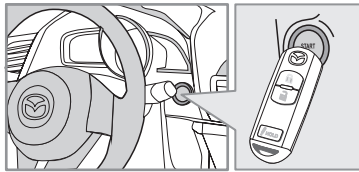


Place the 2nd OEM remote close to the front of the START/STOP button exactly as shown.

10



Press the START/STOP button twice to activate the vehicle's Ignition.

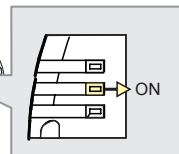


↳ The Yellow LED will turn ON.




KEY BYPASS PROGRAMMING PROCEDURE 3/6

**11**





**KEY#2**

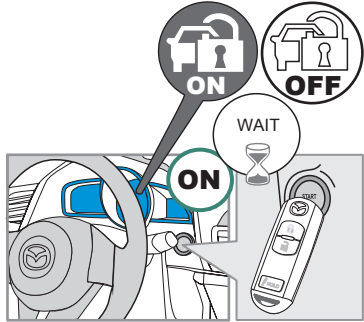

Wait for the **security indicator to turn OFF** (around 3 seconds).

**12**

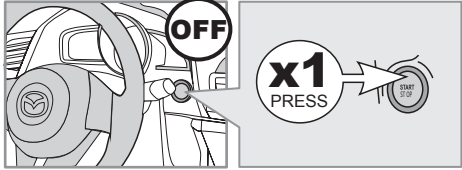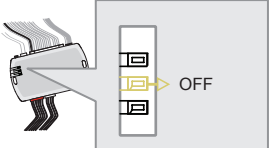



**IMMEDIATELY**


Press the **START/STOP button once** to deactivate the vehicle's Ignition.

↳ The **Yellow Led** will turn **OFF**.


**13**

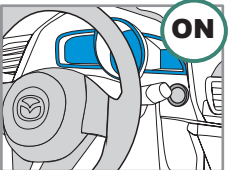

The vehicle's ignition will turn **ON**

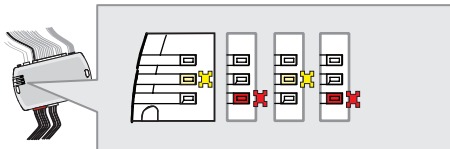



↳ The **Yellow and Red LED's** will alternatively illuminate.

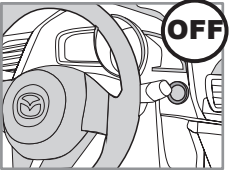

The vehicle's Ignition will turn **OFF**.

**14**

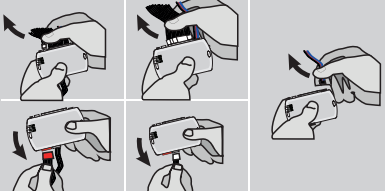


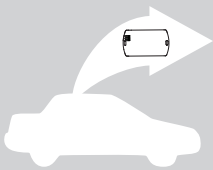

**Disconnect** all the connectors and after the **Data-Link (4-pins)** connector.

**KEY BYPASS PROGRAMMING PROCEDURE 4/6**


15

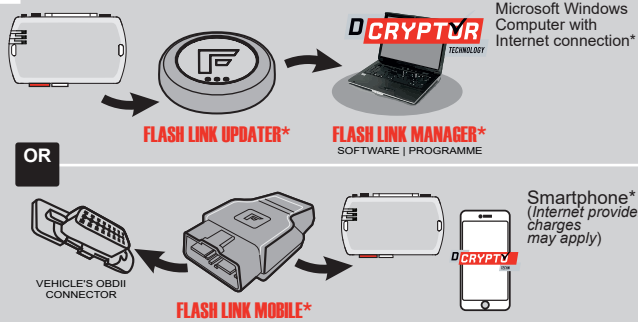

Use the tool:  
**FLASH LINK UPDATER** or  
**FLASH LINK MOBILE**  
to visit the DCryptor menu.

\*Parts required (not included)

16

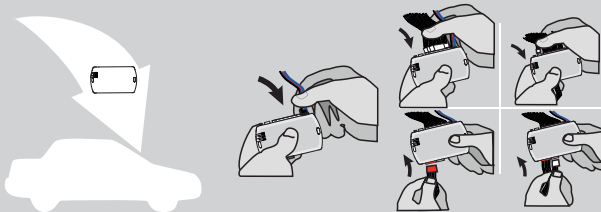


**AFTER DCRYPTOR PROGRAMMING COMPLETED**  
Go back to the vehicle and **reconnect** the 4-Pin (Data-Link) connector and after, all the remaining connector.

17



Repeat step 1 to 12.

18

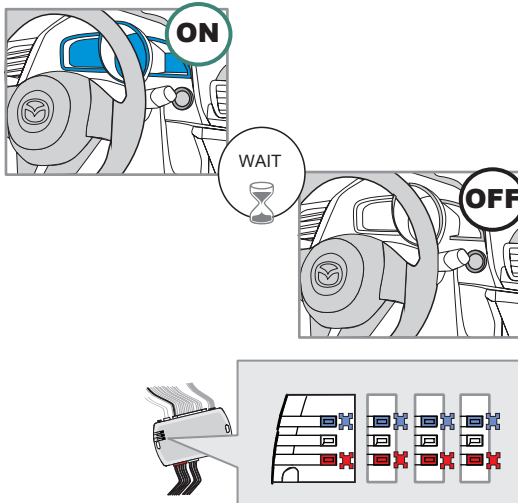


The vehicle's ignition will turn ON

The vehicle's Ignition will turn OFF.


↳ The Blue and Red LEDs will flash.

 19



Disconnect all Harness

20

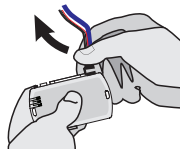


Next:

Disconnect the 4-PIN Data-link harness (Black connector).

CAN PROGRAMMING PROCEDURE


21

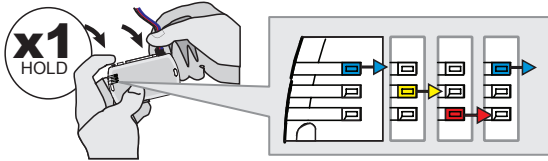

Press and hold the programming button:  
Connect the 4-PIN Data-link harness (Black connector).


↳ The Blue, Red, Yellow and Blue & Red LEDs will alternatively illuminate.

22

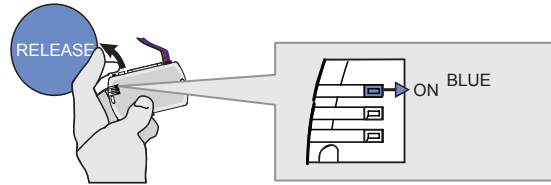


Release the programming button when the Blue LED is ON.

 If the Blue LED is not ON solid disconnect the 4-PIN Data-link harness (Black connector).




23

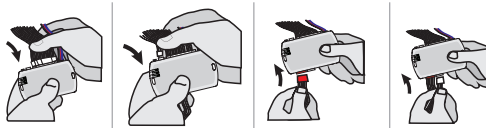


Connect the required remaining harnesses.

24

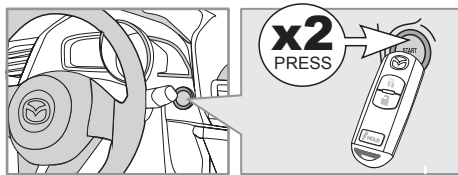

Press the START/STOP button twice to turn ON the vehicle's Ignition.

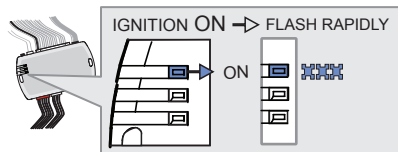


↳ The Blue LED will flash rapidly.

25



Press the START/STOP button once to turn OFF the vehicle's Ignition.

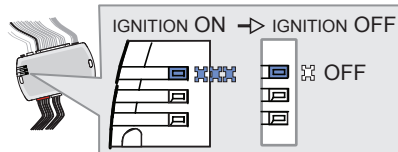

↳ The Blue LED will turn OFF.



The module is now programmed.

