THAR-AUD2

# THARNESS INSTALLATION

ADDENDUM - SUGGESTED WIRING CONFIGURATION

						Vehi	cle funct	tions sup	ported i	n this di	agram (f	unction	al if equi	pped)			
	PUSH START															X.1 nfort oup	* *
VEHICLE		YEARS	Key Control	Lock	Unlock	Arm	Disarm	Trunk (open)	Tachometer	Door Status	Trunk Status	Hood Status*	Hand-Brake Status	Foot-Brake Status	Heated Seats	Rear defrost	OEM Remote monitoring
AUDI		_															
A6 - S6	Push-to-Start	2019-2021	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
A7 - S7	Push-to-Start	2019-2021	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
A8 - S8	Push-to-Start	2019-2021	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
SQ8	Push-to-Start	2020-2021	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
RS6	Push-to-Start	2021	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
RS7	Push-to-Start	2019-2021	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•

EVO ALL FIRMWARE VERSION

To add the firmware version and the options, use the FLASH LINK UPDATER or FLASH LINK MOBILE tool, sold separately.

61.[12]

Program bypass option:

DESCRIPTION

OEM Remote status (Lock/Unlock) monitoring

ALL D

Program bypass option:

UNIT OPTION DESCRIPTION

**UNIT OPTION** 

Push-to-Start



Parts required (Not included)

1x Vehicle Key 1x 1 AMP Diode

#### **NOTES**



1 KEY REQUIRED FOR THE INSTALLATION

#### MANDATORY INSTALL

\* HOOD PIN

HOOD STATUS: THE HOOD PIN SWITCH MUST BE INSTALLED IF THE VEHICLE CAN BE REMOTE STARTED WITH THE HOOD OPEN, SET FUNCTION A11 TO OFF.




**Notice:** the installation of safety elements are mandatory. The hood pin is an essential security element and must be installed.

THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.

## DESCRIPTION



Rear BCM, in the trunk.

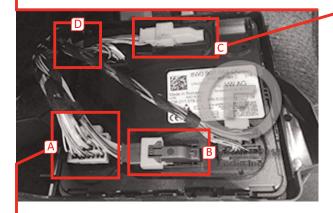










#### **WIRING CONNECTION**

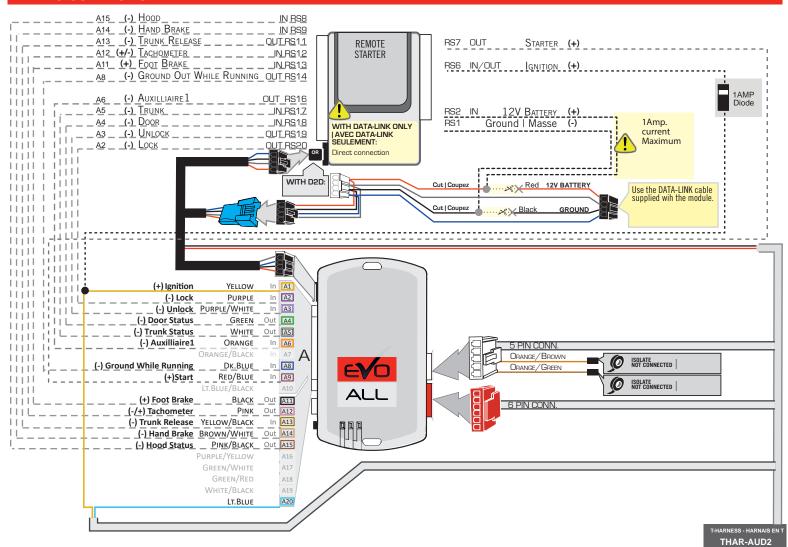

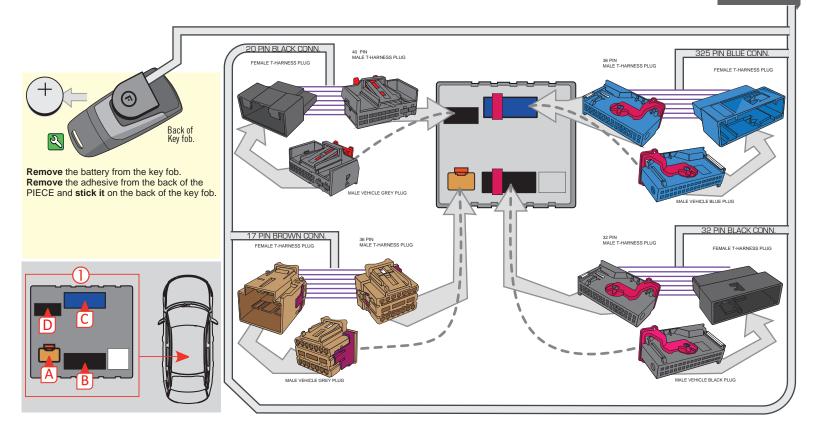


#### **PROGRAMMING PROCEDURE**

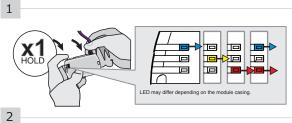

Press and hold the programming button:
Connect the 4-PIN Data-link harness (Black connector).

→ The Blue, Red, Yellow and Blue & Red LEDs will alternatively illuminate.

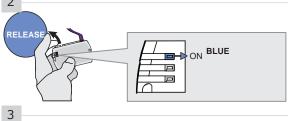

**Release** the programming button when the LED is BLUE.

**Relâchez** le bouton de programmation quand la DEL est BLEU.





 






**Insert** the required remaining connectors.






Do not press the brake pedal.

Press the Push-to-Start button once to turn on the ignition.

→ The BLUE LED will flash rapidly.

 5





**Press** the Push-to-Start button once to turn off the ignition.

→The BLUE LED will turn off.



programmed.



#### **REMOTE STARTER FUNCTIONALITY**



All doors must be closed.



Remote start the vehicle.



Unlock the doors with either: • The OEM remote • The remote-starter

- remote.



Enter the vehicle with the Intelligent SmartKey.



The vehicle can now be put in to gear and driven.



#### REGULAR INSTALLATION

#### ADDENDUM - SUGGESTED WIRING CONFIGURATION

			Veh	icle func	tions su	pported	in this di	iagram (	function	al if equ	ipped)						
	PUSH		- Io					(uedo)	ter	tus	Status	Status*	ake Status	ke Status		X.1 nfort oup	note moni-
VEHICLE		YEARS	Key Control	Lock	Unlock	Arm	Disarm	Trunk (op	Tachometer	Door Status	Trunk Sta	Hood Sta	Hand-Brake	Foot-Brake	Heated Seats	Rear defrost	OEM Remote toring **
AUDI																	
A4	Push-to-Start	2017-2020	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
A5	Push-to-Start	2018-2020	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
A5 / S5 Sportback	Push-to-Start	2018-2020	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
Q5	Push-to-Start	2018-2020	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
Q7	Push-to-Start	2017-2021	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
SQ5	Push-to-Start	2018-2020	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
RS4	Push-to-Start	2017-2020	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
RS 5 Coupe	Push-to-Start	2018-2020	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•

FIRMWARE VERSION

To add the firmware version and the options, use the FLASH LINK UPDATER or FLASH LINK MOBILE tool, sold separately.

VW MINIMUM



Program bypass option:

**UNIT OPTION** DESCRIPTION

**C1** 

OEM Remote status (Lock/Unlock) monitoring



Program bypass option:

UNIT OPTION DESCRIPTION

> Push-to-Start **D6**



Parts required (Not included)

1x Vehicle Key 4x 1 AMP Diode

1x 10Amp Fuse

#### **NOTES**



1 KEY REQUIRED FOR THE **INSTALLATION** 

#### MANDATORY INSTALL

\* HOOD PIN


**HOOD STATUS:** THE HOOD PIN SWITCH MUST BE INSTALLED IF THE VEHICLE CAN BE REMOTE STARTED WITH THE HOOD OPEN, SET FUNCTION A11 TO OFF.




THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.


## DESCRIPTION

Rear BCM, left side of trunk.

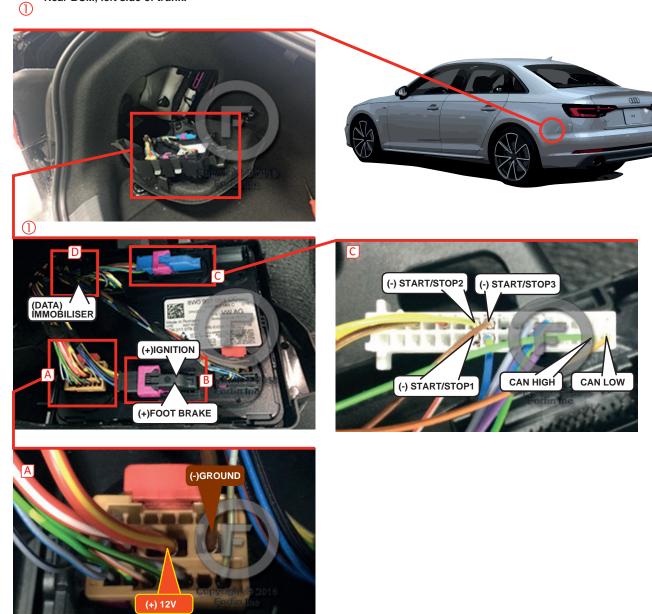

#### WIRING CONNECTION

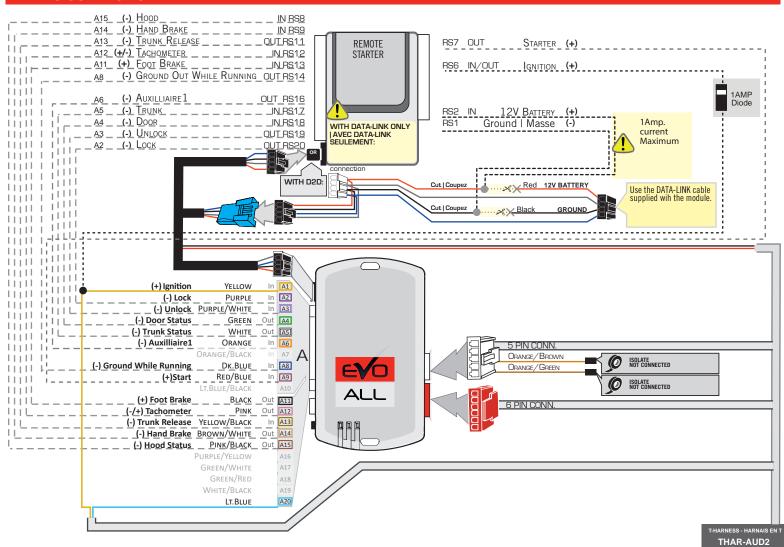

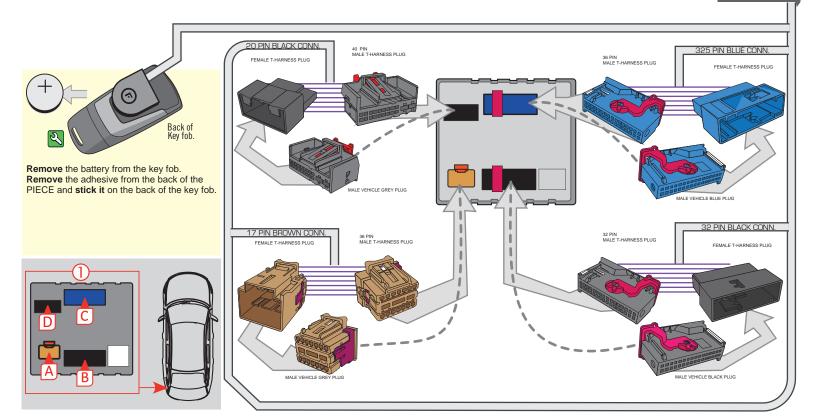


#### PROGRAMMING PROCEDURE



Press and hold the programming button:
Connect the 4-PIN Data-link harness (Black connector).

 →The Blue, Red, Yellow and Blue & Red LEDs will alternatively illuminate.



**Release** the programming button when the LED is BLUE.



3





 




**Insert** the required remaining connectors.

4






Do not press the brake pedal.

Press the Push-to-Start button once to turn on the ignition

→ The BLUE LED will flash rapidly.

 5





**Press** the Push-to-Start button once to turn off the ignition.

→The BLUE LED will turn off.



The module is now programmed



#### **REMOTE STARTER FUNCTIONALITY**



All doors must be closed.



Remote start the vehicle.



Unlock the doors with either: • The OEM remote • The remote-starter

- remote.



Enter the vehicle with the Intelligent SmartKey.



The vehicle can now be put in to gear and driven.

#### THAR-AUD2


#### THARNESS STAND ALONE INSTALLATION

ADDENDUM - SUGGESTED WIRING CONFIGURATION



#### ONLY COMPATIBLE WITH AUTOMATIC TRANSMISSION VEHICLES.

			Vehi	cle funct	tions su <sub>l</sub>	oported i	in this di	agr <u>am (</u> 1	function	al if equ	ipped)						
	PUSH START												sn	SI	AU Con Gro	nfort	monitoring **
/EHICLE		YEARS	Key Control	Lock	Unlock	Arm	Disarm	Trunk (open)	Tachometer	Door Status	Trunk Status	Hood Status*	Hand-Brake Status	Foot-Brake Status	Heated Seats	Rear defrost	OEM Remote m
AUDI																	
46 - S6	Push-to-Start	2019-2021	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
A7 - S7	Push-to-Start	2019-2021	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
√8 - S8	Push-to-Start	2019-2021	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
SQ8	Push-to-Start	2020-2021	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
RS6	Push-to-Start	2021	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
RS7	Push-to-Start	2019-2021	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•

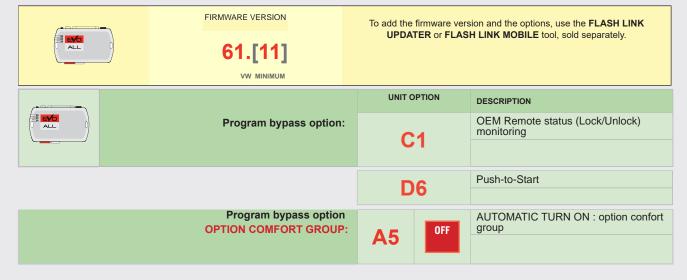

#### **NOTES**



#### 1 KEY REQUIRED FOR THE **INSTALLATION**



Parts required (Not included)

1x Vehicle Key

### MANDATORY INSTALL \* HOOD PIN

IF THE VEHICLE CAN BE REMOTE STARTED WITH THE HOOD OPEN,



A11

Notice: the installation of safety elements are mandatory. The hood pin is an essential security element and must be installed.


THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.

HOOD STATUS: THE HOOD PIN SWITCH MUST BE INSTALLED SET FUNCTION A11 TO OFF.



#### **PARTS REQUIRED (NOT INCLUDED)**



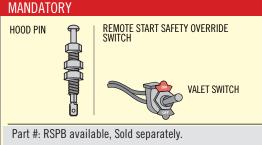

**Notice:** the installation of safety elements are mandatory. The hood pin and the valet switch are essential security elements and must be installed.

#### **STAND ALONE CONFIGURATION**

	Program bypass option	UNIT OPTION	DESCRIPTION
ALL 0	OEM Remote Stand Alone Remote Starter:	OR D1.10 LOCK LOCK LOCK	By default, LOCK, LOCK, LOCK Par défaut, VERROUILLE, VERROUILLE
		D1.1 UNLECK LECK	
		UNIT OPTION	DESCRIPTION
ALL )	Program bypass option with oem remote:	04	OEM Remote Monitoring
		C1	
		UNIT OPTION	DESCRIPTION
	Program bypass option with RF KIT antenna:	H1 to H6	Supported RF Kits and select RF Kit

#### **REMOTE STARTER FUNCTIONALITY**



All doors must be closed.

3X



Press the OEM remote's Lock button 3x to

remote-start (or remote-stop) the vehicle.





The vehicle will START.

REMOTE STARTER DIAGNOSTICS

MODULE RED LED

x2 flash: Brake ON x3 flash: No tach x4 flash: Ignition

before start

x5 flash: Hood Open

#### **REMOTE STARTER WARNING CARD**



CUT THIS WARNING CARD AND STICK IT ON A VISIBLE PLACE: or use the package RSPB, Sold separately.




THE VEHICLE CAN BE STARTED BY EITHER: PRESSING THE LOCK BUTTON ON THE OEM REMOTE 3 TIMES CONSECUTIVELY OR BY A SMARTPHONE. TURN ON THE SAFETY SWITCH LOCATED UNDER THE DASHBOARD BEFORE WORKING ON THE VEHICLE.

## DESCRIPTION




Rear BCM, in the trunk.

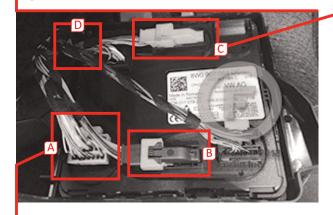






#### **AUTOMATIC TRANSMISSION WIRING CONNECTION**

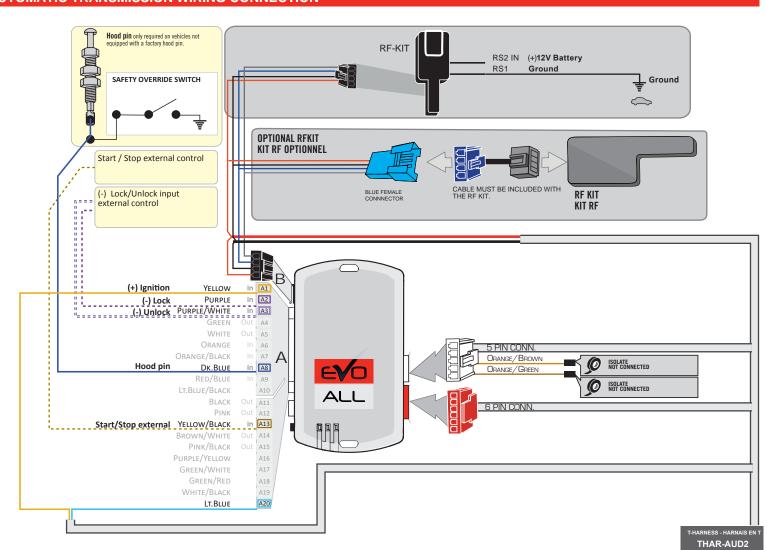

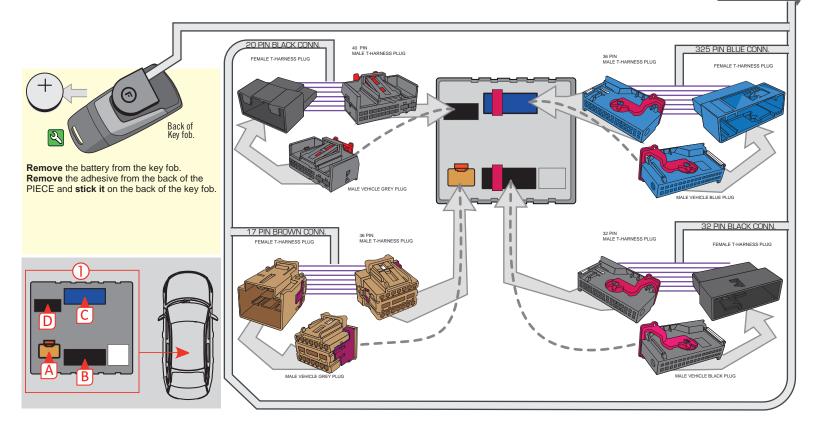


#### PROGRAMMING PROCEDURE



Press and hold the programming button:
Connect the 4-PIN Data-link harness (Black connector).

 →The Blue, Red, Yellow and Blue & Red LEDs will alternatively illuminate.



**Release** the programming button when the LED is BLUE.

If the LED is not solid BLUE disconnect the 4-Pin connector (Data-Link) and go back to step









 




**Insert** the required remaining connectors.








Do not press the brake pedal.

Press the Push-to-Start button once to turn on the ignition.

→The BLUE LED will flash rapidly.

 5





**Press** the Push-to-Start button once to turn off the ignition.

→The BLUE LED will turn off.



The module is now programmed.

#### **REMOTE STARTER FUNCTIONALITY**

#### **DISTANCE**



All doors must be closed.



Remote start the vehicle.



Unlock the doors with either: • The OEM remote • The remote-starter

- remote.



Enter the vehicle with the Intelligent SmartKey.



The vehicle can now be put in to gear and driven.



ADDENDUM - SUGGESTED WIRING CONFIGURATION



#### ONLY COMPATIBLE WITH AUTOMATIC TRANSMISSION VEHICLES.

								. ,		1:6	,=						
	PUSH			icle func	tions su	pported	in this di	(uedo)		Status	Status	Status*	ake Status	ke Status	Cor	IX.1 nfort oup	mote
VEHICLE		YEARS	Key Control	Lock	Unlock	Arm	Disarm	Trunk (op	Tachometer	Door Sta	Trunk Sta	Hood Sta	Hand-Brake	Foot-Brake	Heated Seats	Rear	OEM Remote monitoring **
AUDI																	
A4	Push-to-Start	2017-2020	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
A5	Push-to-Start	2018-2020	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
A5 / S5 Sportback	Push-to-Start	2018-2020	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
Q5	Push-to-Start	2018-2020	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
Q7	Push-to-Start	2017-2021	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
SQ5	Push-to-Start	2018-2020	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
RS4	Push-to-Start	2017-2020	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
RS 5 Coupe	Push-to-Start	2018-2020	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•

REV.: 20210211

FIRMWARE VERSION

61.[11]

VW MINIMUM

To add the firmware version and the options, use the **FLASH LINK** UPDATER or FLASH LINK MOBILE tool, sold separately.

Program bypass option:

OEM Remote status (Lock/Unlock) monitoring

**D6** 

**UNIT OPTION** 

C<sub>1</sub>

Push-to-Start

DESCRIPTION

Program bypass option **OPTION COMFORT GROUP:** 



AUTOMATIC TURN ON: option confort group

#### **NOTES**



#### 1 KEY REQUIRED FOR THE **INSTALLATION**



Parts required (Not included)

1x Vehicle Key 3x 1 AMP Diode 1x 10Amp Fuse

#### MANDATORY INSTALL

\* HOOD PIN



Notice: the installation of safety elements are mandatory. The hood pin is an essential security element and must be installed.


THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.

HOOD STATUS: THE HOOD PIN SWITCH MUST BE INSTALLED IF THE VEHICLE CAN BE REMOTE STARTED WITH THE HOOD OPEN, SET FUNCTION A11 TO OFF.



#### **PARTS REQUIRED (NOT INCLUDED)**



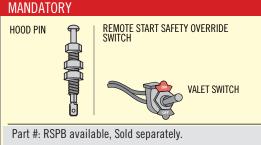

**Notice:** the installation of safety elements are mandatory. The hood pin and the valet switch are essential security elements and must be installed.

#### **STAND ALONE CONFIGURATION**

	Program bypass option	UNIT OPTION	DESCRIPTION
ALL 0	OEM Remote Stand Alone Remote Starter:	OR D1.10 LBCK LBCK LBCK	By default, LOCK, LOCK, LOCK Par défaut, VERROUILLE, VERROUILLE
		D1.1 UNLECK LECK	
		UNIT OPTION	DESCRIPTION
ALL 0	Program bypass option with oem remote:	04	OEM Remote Monitoring
		C1	
		UNIT OPTION	DESCRIPTION
	Program bypass option with RF KIT antenna:	H1 to H6	Supported RF Kits and select RF Kit

#### **REMOTE STARTER FUNCTIONALITY**



All doors must be closed.

3X



Press the OEM remote's Lock button 3x to

remote-start (or remote-stop) the vehicle.





The vehicle will START.

REMOTE STARTER DIAGNOSTICS

MODULE RED LED

x2 flash: Brake ON x3 flash: No tach x4 flash: Ignition

before start

x5 flash: Hood Open

#### **REMOTE STARTER WARNING CARD**




CUT THIS WARNING CARD AND STICK IT ON A VISIBLE PLACE: or use the package RSPB, Sold separately.


THE VEHICLE CAN BE STARTED BY EITHER: PRESSING THE LOCK BUTTON ON THE OEM REMOTE 3 TIMES CONSECUTIVELY OR BY A SMARTPHONE. TURN ON THE SAFETY SWITCH LOCATED UNDER THE DASHBOARD BEFORE WORKING ON THE VEHICLE.




Rear BCM, left side of trunk.

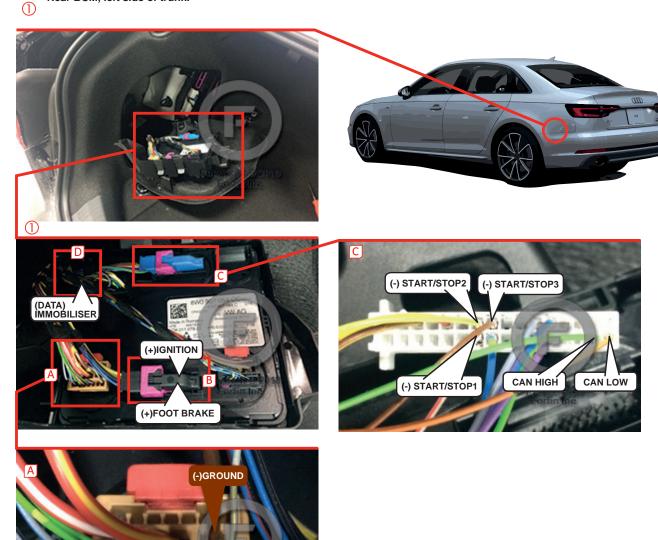


#### **AUTOMATIC TRANSMISSION WIRING CONNECTION**

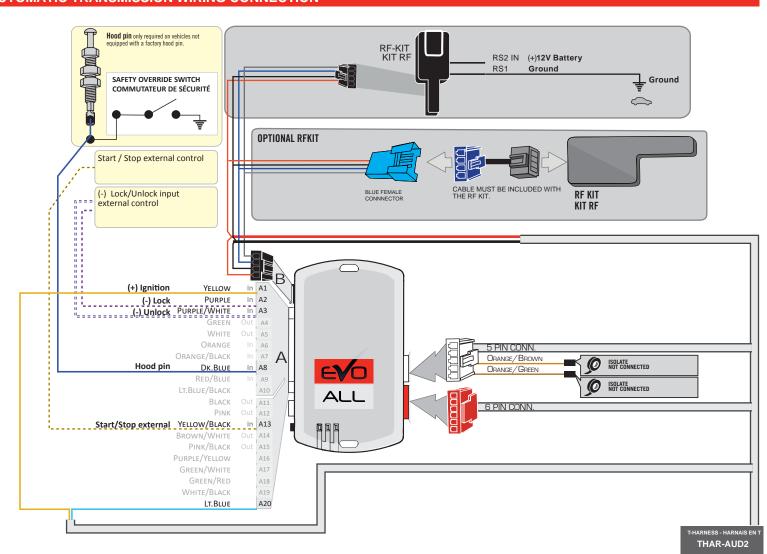

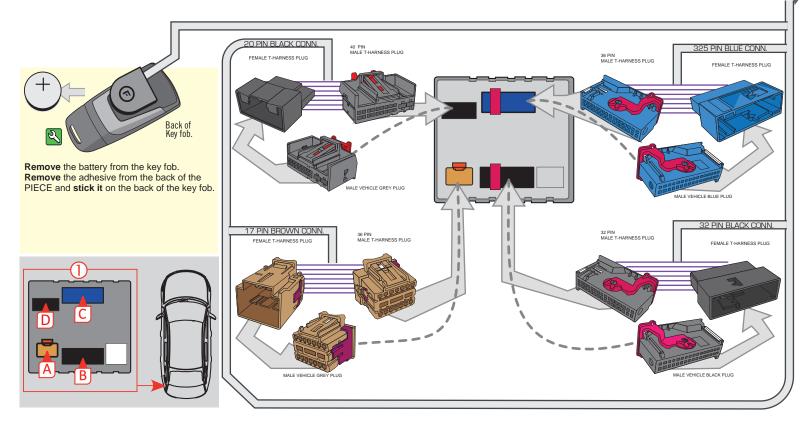


#### PROGRAMMING PROCEDURE

 

Press and hold the programming button:
Connect the 4-PIN Data-link harness (Black connector).

 → The Blue, Red, Yellow and Blue & Red LEDs will alternatively illuminate.



**Release** the programming button when the LED is BLUE.

If the LED is not solid BLUE disconnect the 4-Pin connector (Data-Link) and go back to step









 




**Insert** the required remaining connectors.








Do not press the brake pedal.

Press the Push-to-Start button once to turn on the ignition.

→The BLUE LED will flash rapidly.

 5





**Press** the Push-to-Start button once to turn off the ignition.

→The BLUE LED will turn off.



programmed.

#### **REMOTE STARTER FUNCTIONALITY**



All doors must be closed.



Remote start the vehicle.



Unlock the doors with either: • The OEM remote • The remote-starter

- remote.



Enter the vehicle with the Intelligent SmartKey.



The vehicle can now be put in to gear and driven.



#### THAR-AUD2

#### THARNESS INSTALLATION

#### ADDENDUM - SUGGESTED WIRING CONFIGURATION

			Vehi	cle func	tions su	pported	in this	diagram	(func <u>ti</u>	onal if e	quipped	<u> </u>						
January States	PUSISTAR												sn	Ø	Gro Gro	X.1 nfort oup upe ifort	mote compatible	monitoring **
VEHICLE		YEARS	Key Control	Lock	Unlock	Arm	Disarm	Trunk (open)	Tachometer	Door Status	Trunk Status	Hood Status*	Hand-Brake Status	Foot-Brake Status	Heated Seats	Rear defrost	R.S. OEM remote Stand Alone comp	OEM Remote mo
AUDI																		
A6 - S6	Push-to-Start	2019-2021	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
A7 - S7	Push-to-Start	2019-2021	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
A8 - S8	Push-to-Start	2019-2021	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
SQ8	Push-to-Start	2020-2021	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
RS6	Push-to-Start	2021	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
RS7	Push-to-Start	2019-2021	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•

REV.: 20210604



BYPASS FIRMWARE VERSION

**FUNCTION** 

38

To add the firmware version and the options, use the FLASH LINK UPDATER or FLASH LINK MOBILE tool, sold separately.



#### Program bypass option:

**UNIT OPTION** DESCRIPTION

OEM Remote status (Lock/Unlock) monitoring

**D6** 

**C1** 

Push-to-Start



Program remote starter option for R.S. OEM **REMOTE STAND ALONE:** 

MODE 2

2

DESCRIPTION Enable: Press 3x Lock to remote start with the OEM remote.

for COMFORT GROUP ACTIVATION:

39

Temperature option: AUX.1 activated at 5°C, 5 seconds after remote started



Parts required (Not included)

1x Vehicle Key 3x 1 AMP Diode

1x 10Amp Fuse

#### NOTES



#### 1 KEY REQUIRED FOR THE **INSTALLATION**

#### MANDATORY INSTALL

\* HOOD PIN



**HOOD STATUS:** THE HOOD PIN SWITCH (INCLUDED)

SECURITY STICKER

**Notice:** the installation of safety elements are mandatory. The hood pin and the sticker are essential security elements and must be installed.

THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.


MUST BE INSTALLED IF THE VEHICLE CAN BE REMOTE STARTED WITH THE HOOD OPEN, SET FUNCTION A11 TO OFF.



## DESCRIPTION




Rear BCM, in the trunk.

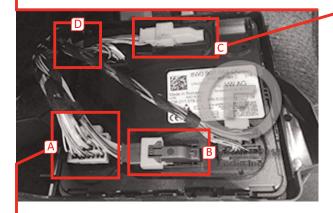







#### **WIRING CONNECTION**

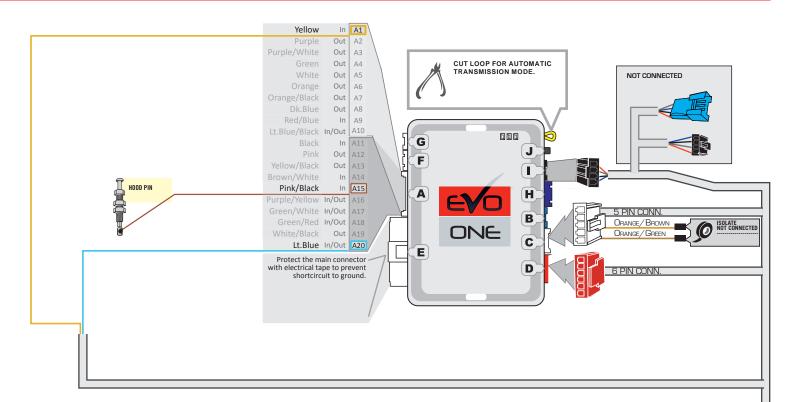


## T-HARNESS - HARNAIS EN THAR-AUD2

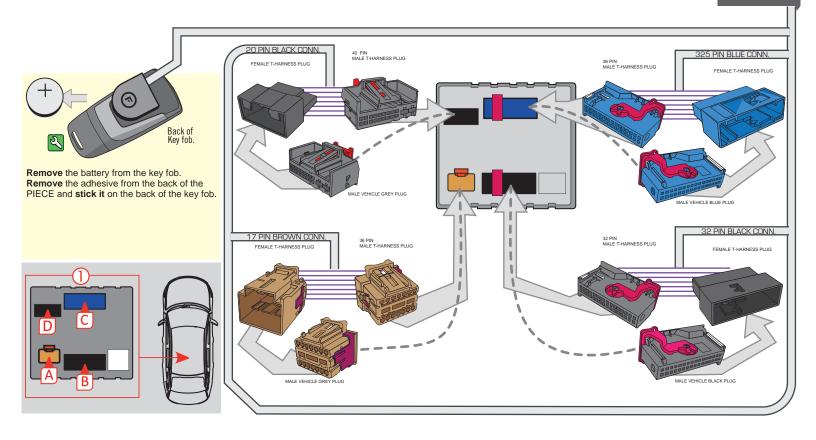

#### **KEY BYPASS PROGRAMMING PROCEDURE**

 

**Press and hold** the programming button: **Insert** the 6-Pin Main connector.

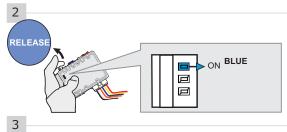

**Release** the programming button when the BLUE LED is ON.

**Relâchez** le bouton de programmation quand la DEL BLEUE est allumée.



 








**Insert** the required remaining connectors.




Do not press the brake pedal.

**Press** the Push-to-Start button once to turn on the ignition.

→The BLUE LED will flash rapidly.

 5





**Press** the Push-to-Start button once to turn off the ignition.

→The BLUE LED will turn off.




The module is now programmed.

#### REMOTE STARTER PROGRAMMING PROCEDURE



REFER TO THE **QUICK INSTALL GUIDE** INCLUDED WITH THE MODULE FOR THE REMOTE STARTER PROGRAMMING.

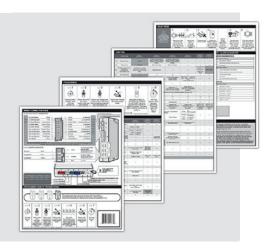

#### **REMOTE STARTER FUNCTIONALITY**







Remote start the vehicle.



Unlock the doors with either:

- either:
   The OEM remote
- The remote-starter remote.



**Enter** the vehicle with the Intelligent SmartKey.



The vehicle can now be put in to gear and driven.



#### **REGULAR INSTALLATION**

ADDENDUM - SUGGESTED WIRING CONFIGURATION

	PUSH START		lo				Veh					Status*	Status	Status	AU.	X.1	OEM remote d Alone patible	Remote moni-
VEHICLE		YEARS	Key Control	Lock	Unlock	Arm	Disarm	Trunk (open)	Tachometer	Door Status	Trunk Status	Hood Stat	Hand-Brake	Foot-Brake	Heated Seats	Rear defrost	R.S. OEM re Stand Alone compatible	OEM Rent toring **
AUDI																		
A4	Push-to-Start	2017-2020	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
A5	Push-to-Start	2018-2020	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
A5 / S5 Sportback	Push-to-Start	2018-2020	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
Q5	Push-to-Start	2018-2020	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
Q7	Push-to-Start	2017-2021	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
SQ5	Push-to-Start	2018-2020	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
RS4	Push-to-Start	2017-2020	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
RS 5 Coupe	Push-to-Start	2018-2020	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
S5 Coupe	Push-to-Start	2018-2020	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•



**BYPASS** 

To add the firmware version and the options, use the FLASH LINK UPDATER or FLASH LINK MOBILE tool, sold separately.

A EXO B
٠

Program bypass option:

DESCRIPTION

OEM Remote status (Lock/Unlock) monitoring

**D6** 

**UNIT OPTION** 

**C1** 

Push-to-Start



Program remote starter option for R.S. OEM **REMOTE STAND ALONE:**  **FUNCTION** MODE DESCRIPTION 2 38

Enable: Press 3x Lock to remote start with the OEM remote.

for COMFORT GROUP ACTIVATION:

39

2

Temperature option: AUX.1 activated at 5°C, 5 seconds after remote started



Parts required (Not included)

1x Vehicle Key 3x 1 AMP Diode

1x 10Amp Fuse

#### NOTES



1 KEY REQUIRED FOR THE **INSTALLATION** 

#### MANDATORY INSTALL

\* HOOD PIN



**HOOD STATUS:** THE HOOD PIN SWITCH (INCLUDED) MUST BE INSTALLED IF THE VEHICLE CAN BE REMOTE STARTED WITH THE HOOD OPEN, SET FUNCTION A11 TO OFF.



SECURITY STICKER




elements are mandatory. The hood pin and the sticker are essential security elements and must be installed.


THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.

**Notice:** the installation of safety


Rear BCM, left side of trunk.

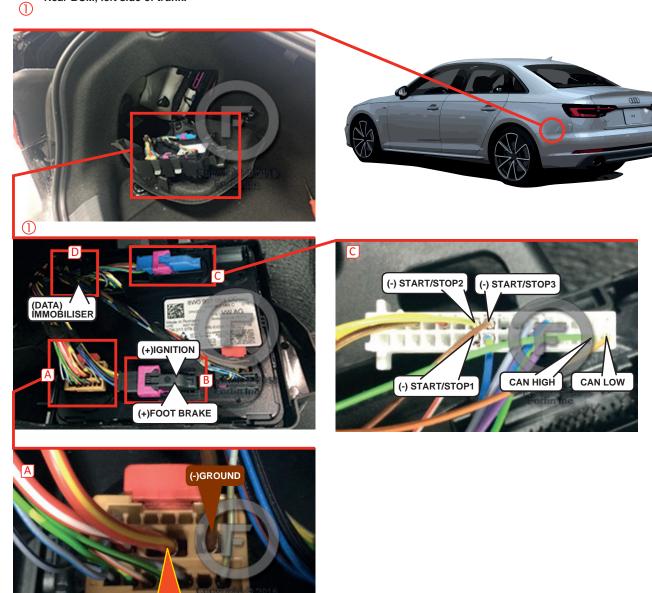


#### WIRING CONNECTION

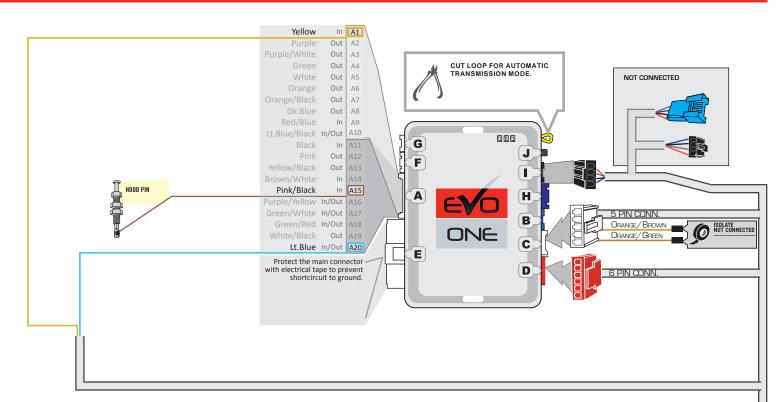

## T-HARNESS - HARNAIS EN T

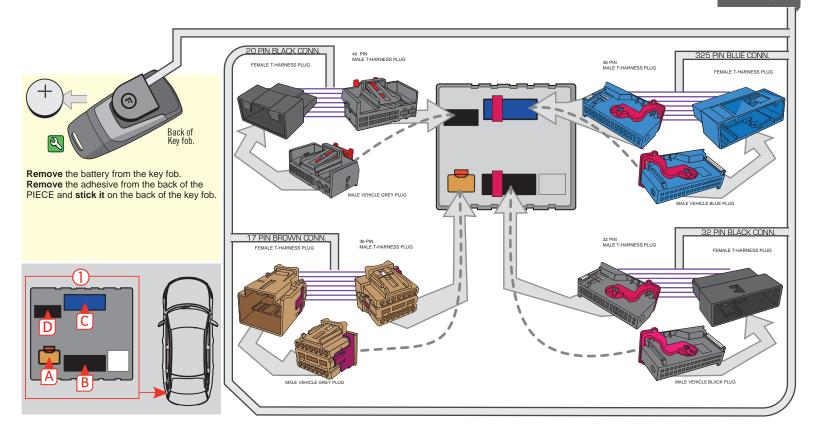


#### **KEY BYPASS PROGRAMMING PROCEDURE**

 

Press and hold the programming button: Insert the 6-Pin Main connector.

 $\hookrightarrow$ The LEDs will alternate between BLUE, RED, YELLOW & BLUE/RED flashes.

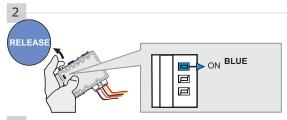

Release the programming button when the BLUE LED is ON.

If the BLUE LED is not ON solid disconnect the 6-Pin Main connector and go back to step 1.









 




Insert the required remaining connectors.








Do not press the brake

Press the Push-to-Start button once to turn on the ignition.

 →The BLUE LED will flash rapidly.








Press the Push-to-Start button once to turn off the ignition.

*→The BLUE LED will* turn off.



The module is now programmed.

#### REMOTE STARTER PROGRAMMING PROCEDURE

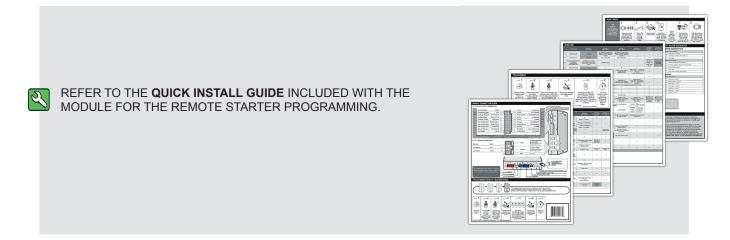

#### **REMOTE STARTER FUNCTIONALITY**

#### **DISTANCE**

