

REGULAR & THAR-FOR3 INSTALLATION


ADDENDUM - SUGGESTED WIRING CONFIGURATION



ONLY COMPATIBLE WITH AUTOMATIC TRANSMISSION VEHICLES.

Vehicle functions supported in this diagram (functional if equipped)

VEHICLE	YEARS	Immobilizer bypass	Lock	Unlock	Arm	Disarm	Heated Seats**	Rear Defrost**	RAP Disable	Parking Lights***	Tachometer	Door Status	Trunk Status	Hood Status*	Hand-Brake Status	Foot-Brake Status	Active OEM Remote Start
FORD Bronco Sport	Push-to-Start 2021	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•

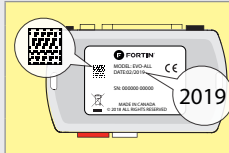

COMPATIBLE MODULE REQUIRED:
MODULE

QR CODE ON THE LABEL
MANUFACTURED AFTER:
2019

FIRMWARE VERSION
58.[02]
MINIMUM

To add the firmware version and the options, use the **FLASH LINK UPDATER** or **FLASH LINK MOBILE** tool, sold separately.



Program bypass option:

UNIT OPTION

DESCRIPTION

C1

OEM Remote status (Lock/Unlock) monitoring

D6

Push-to-Start

IF THE VEHICLE IS NOT EQUIPPED WITH FUNCTIONAL HOOD PIN:

A11

OFF

Hood trigger (Output Status).

NOTES

The vehicles OEM remote and SmartKey are still operable during remote start.

**Heatd seats The heated seats and rear defrost will activate automatically when cold.
**Rear Defrost

***Parking Lights The parking lights will activate during remote start only.

MANDATORY INSTALL

*HOOD PIN



HOOD STATUS: THE HOOD PIN SWITCH MUST BE INSTALLED IF THE VEHICLE CAN BE REMOTE STARTED WITH THE HOOD OPEN, SET FUNCTION A11 TO OFF.

A11

OFF

Notice: the installation of safety elements are mandatory. The hood pin is an essential security element and must be installed.

THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.

DESCRIPTION

	Parts required (Not included)		PAGE
--	-------------------------------	--	------

WIRE TO WIRE DIAGRAM

AUTOMATIC TRANSMISSION	1x 7.5 Amp. fuse	1x Fusible 7.5 Amp.	Page 3
------------------------	------------------	---------------------	--------


THARNES DIAGRAM

THARNES THAR-FOR3 AUTOMATIC TRANSMISSION	1x THAR-FOR3	1x THAR-FOR3	Page 4
--	--------------	--------------	--------


BRONCO SPORT




① Gateway module, Behind OBD-II connector

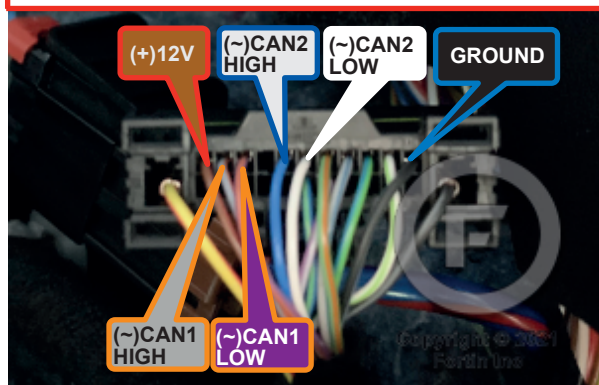

AUTOMATIC TRANSMISSION WIRING CONNECTION

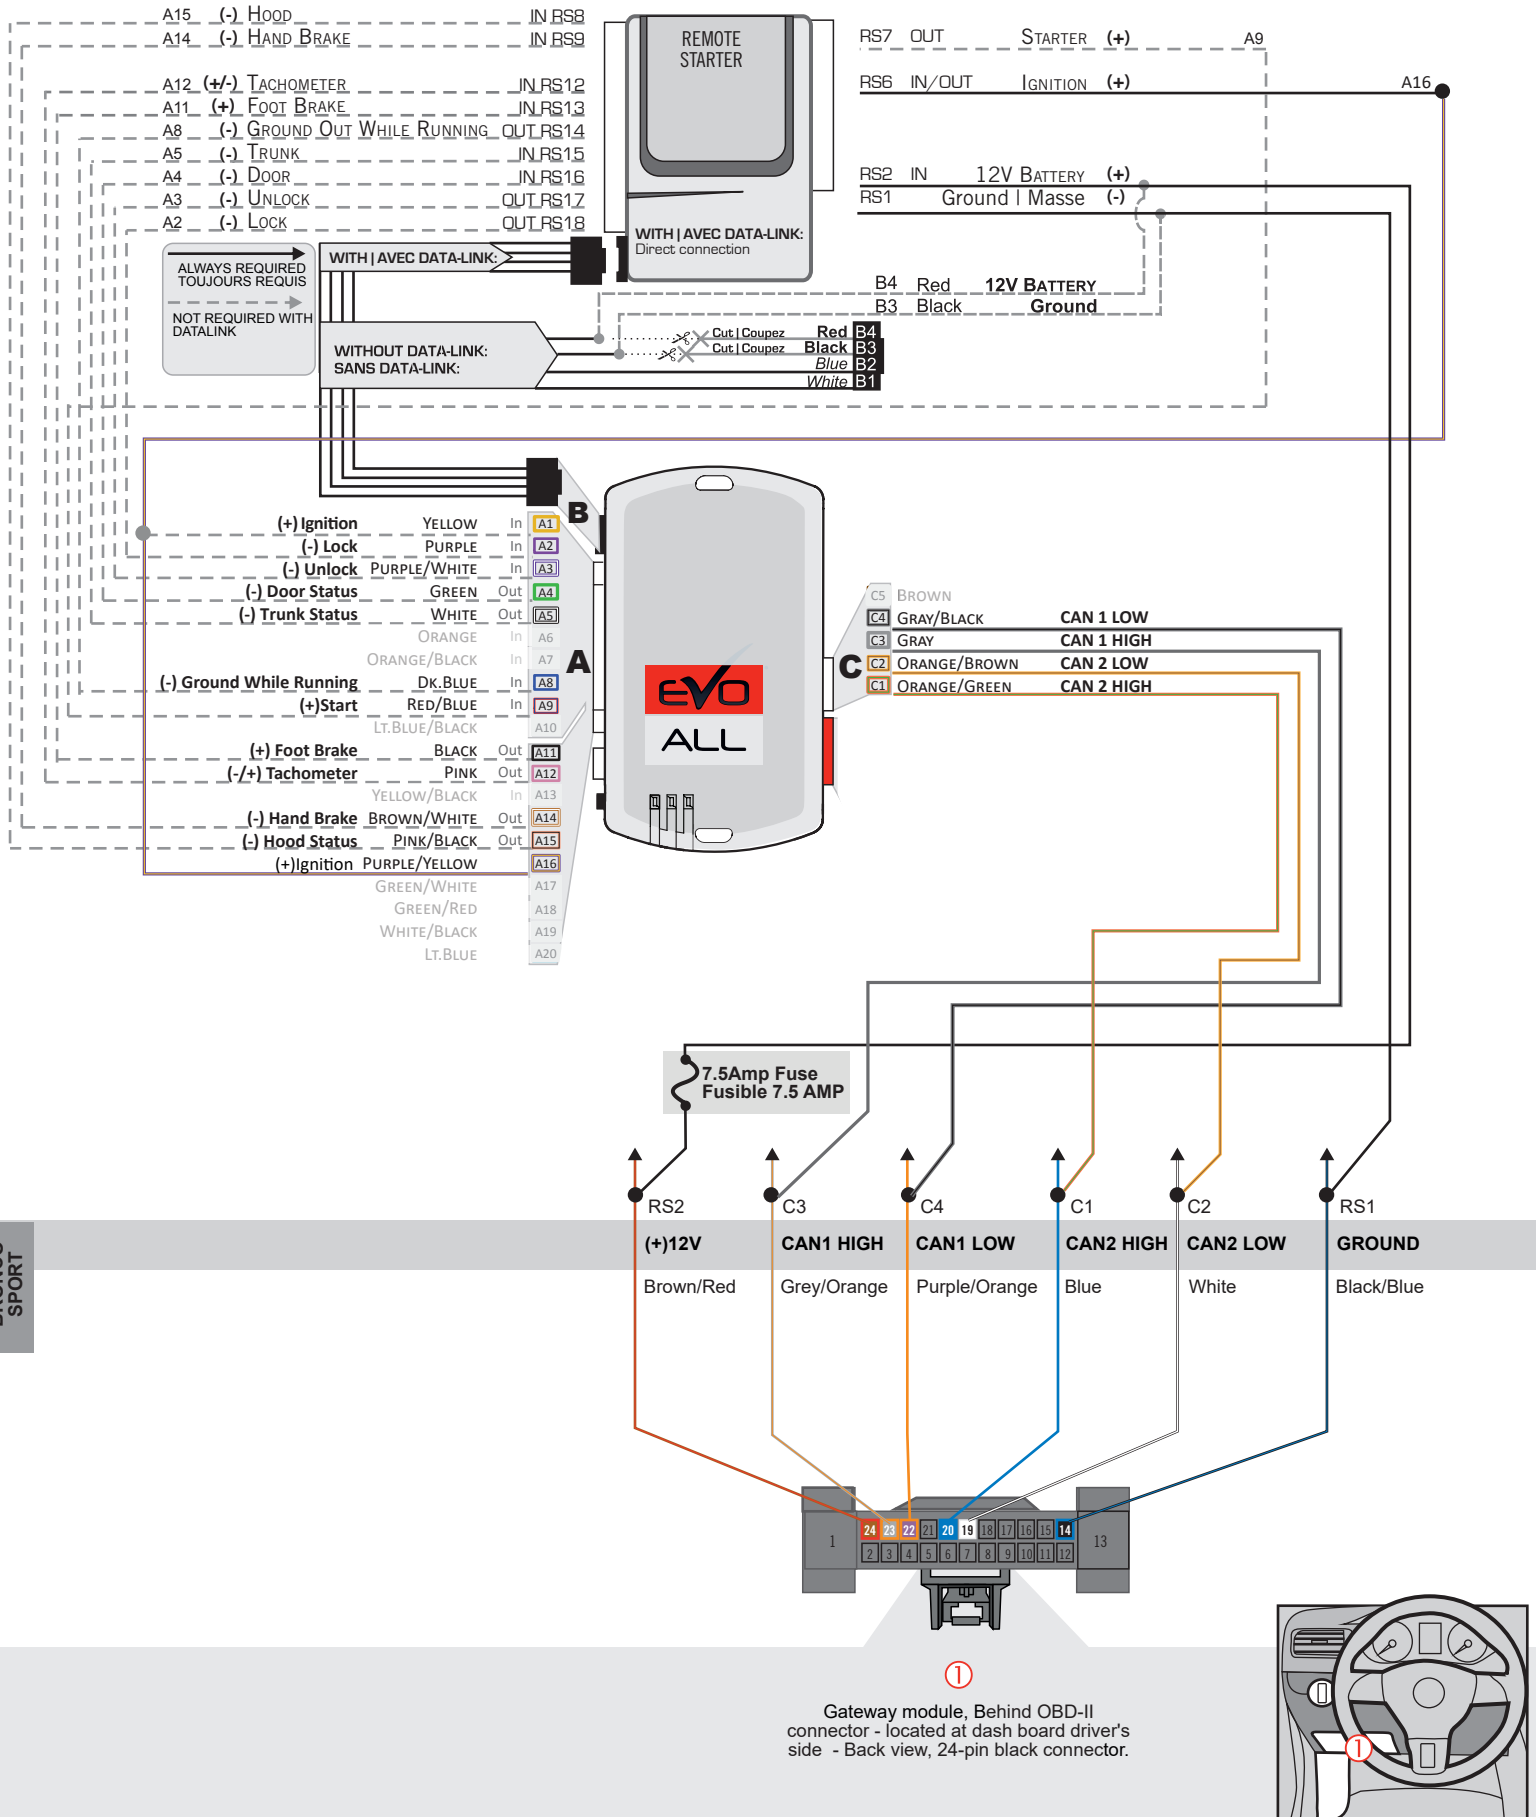

THAR-FOR3 | T-HARNESS - AUTOMATIC TRANSMISSION

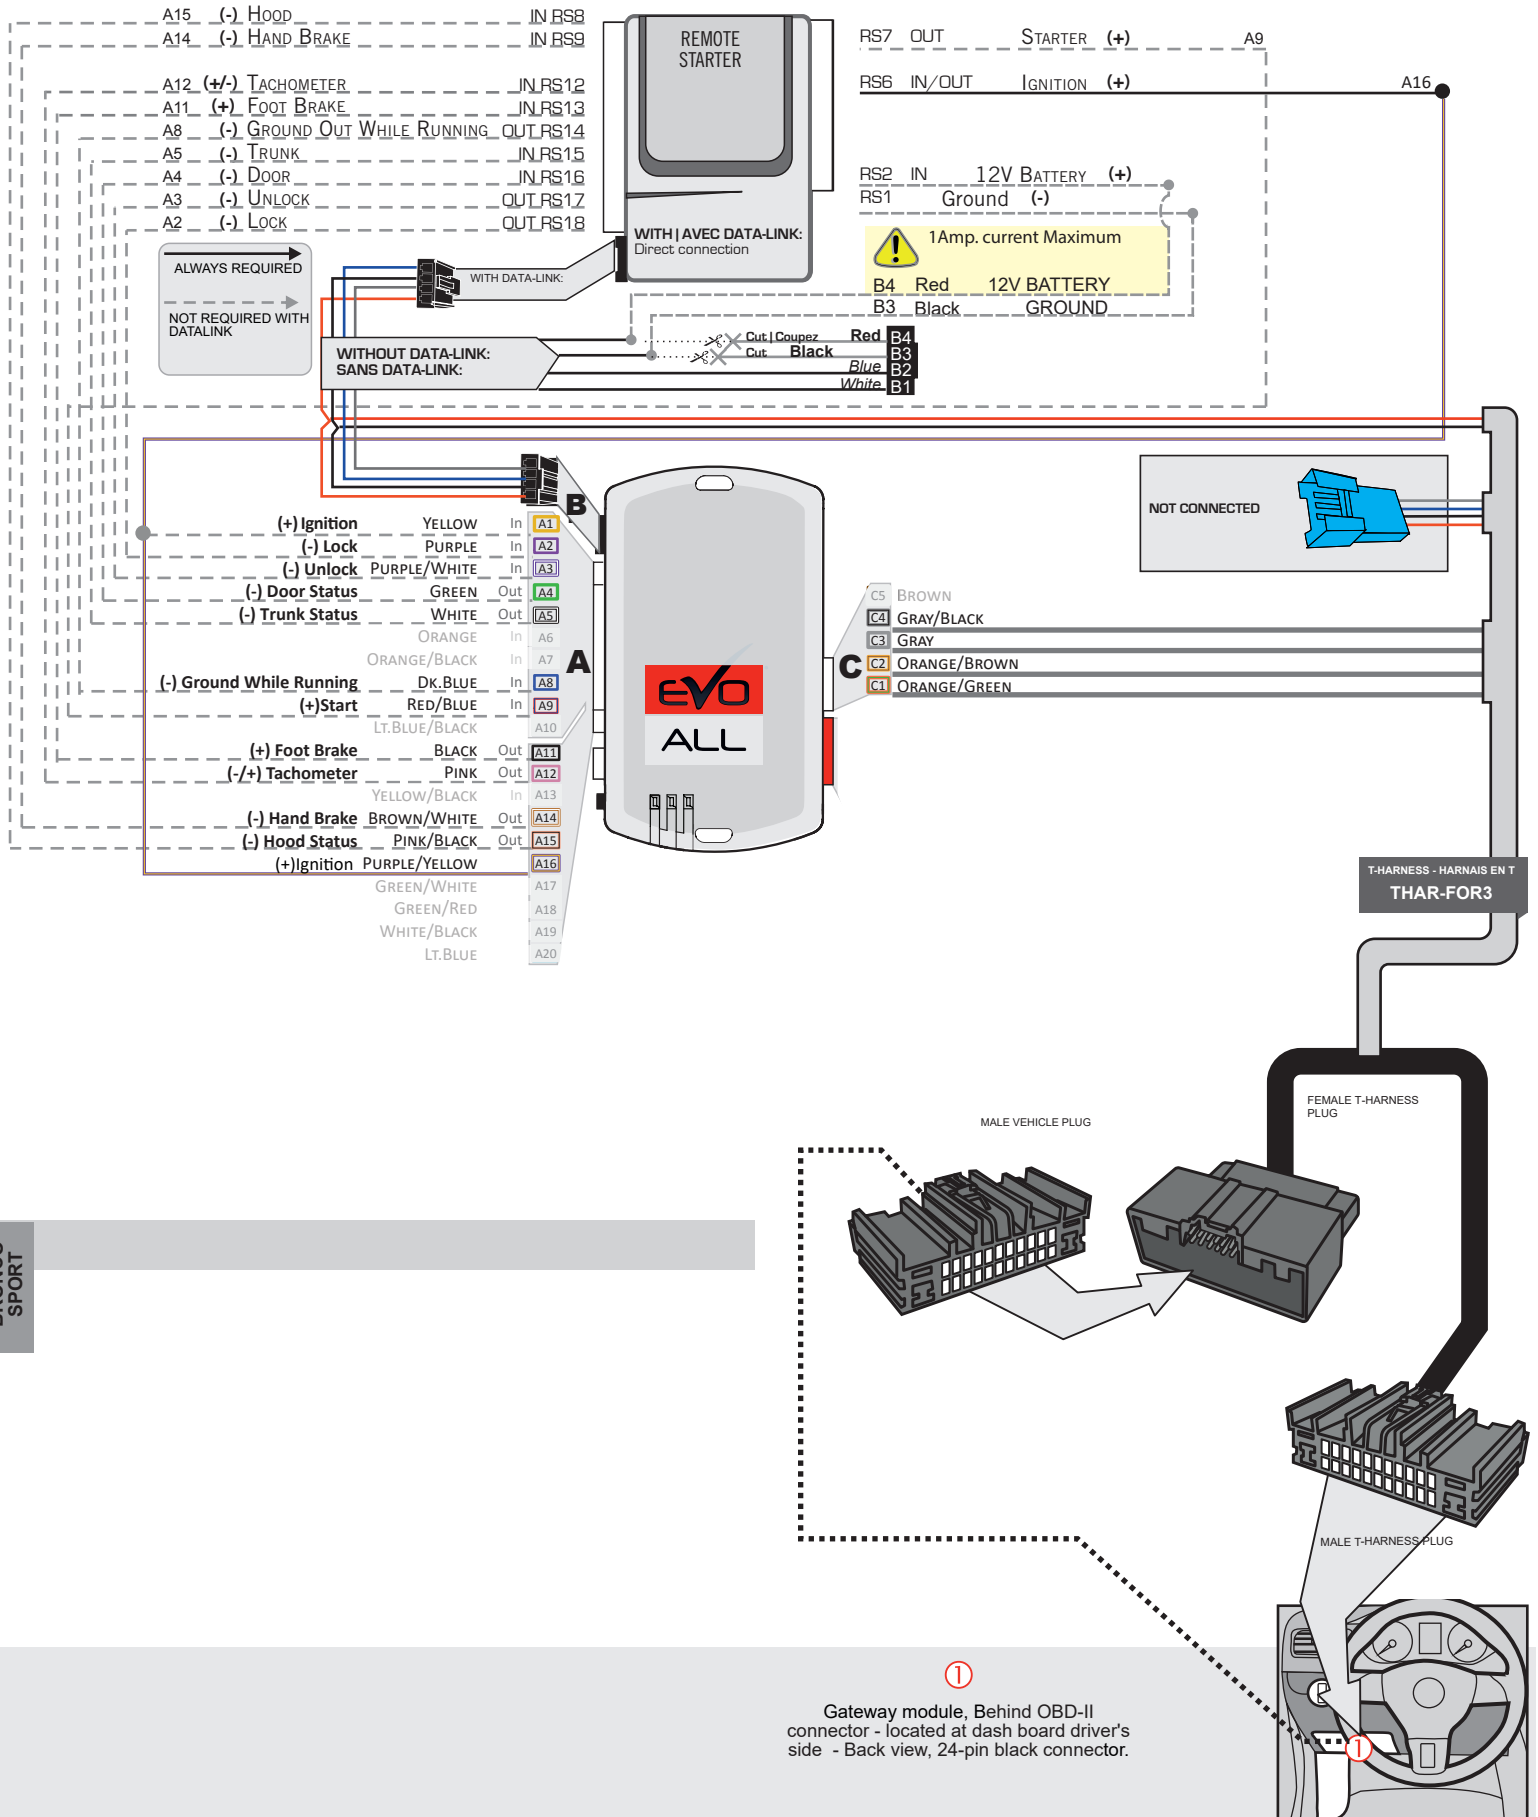

BRONCO SPORT

DCRYPTOR PROGRAMMING PROCEDURE



Parts required (not included)


- 1x FLASH LINK UPDATER, SOFTWARE
- 1x FLASH LINK MANAGER SOFTWARE
- 1x Microsoft Windows Computer with Internet connection

OR
OU

- 1x FLASH LINK MOBILE
- 1x FLASH LINK MOBILE APP
- Smartphone Android or iOS with Internet connection (Internet provider charges may apply)

BEFORE PROGRAMMING SET THE UNIT OPTIONS AND SAVE.


1

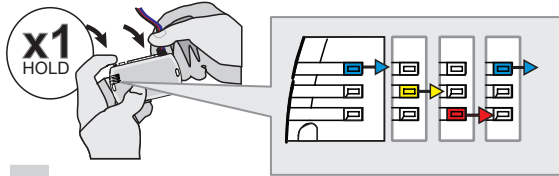

Press and hold the programming button:
Insert the 4-Pin (Data-Link) connector.


↳ The Blue, Red, Yellow and Blue & Red LEDs will alternatively illuminate.

2

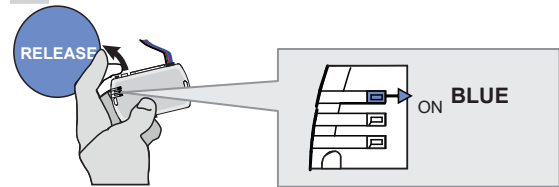


Release the programming button when the LED is BLUE.

 If the LED is not solid BLUE disconnect the 4-Pin connector (Data-Link) and go back to step 1.




3

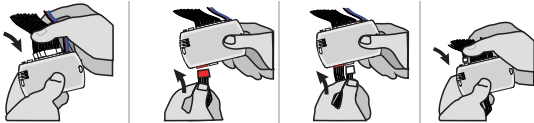

Insert the required remaining connectors.

4

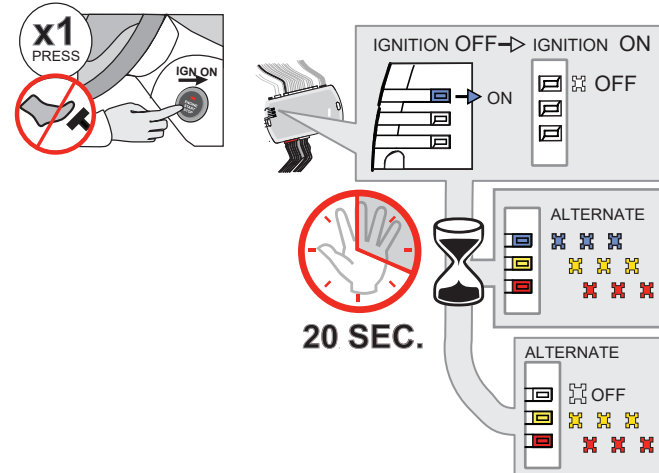

Do not press the brake pedal.
Press the Push-to-Start button once to turn on the ignition.

↳ The BLUE LED will turn OFF.

↳ The BLUE, YELLOW and RED LEDs will alternate.


Wait, at least 20 seconds, do not disconnect the modules or turn off the ignition.

↳ The RED and YELLOW LEDs will alternate.

Make sure that the DELs are flashing RED and YELLOW before continuing programming.



5

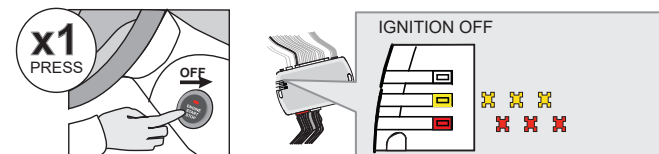

Press the Push-to-Start button once to turn off the ignition.

↳ The RED and YELLOW LEDs alternate.

KEY BYPASS PROGRAMMING PROCEDURE 2/2

6

Disconnect all the connectors and after the Data-Link (4-pins) connector.

7

Microsoft Windows Computer with Internet connection*

OR


Smartphone* (Internet provider charges may apply)

Use the tool: FLASH LINK UPDATER or FLASH LINK MOBILE to visit the DCryptor menu.

*Parts required (not included)

8

AFTER DCRYPTOR PROGRAMMING COMPLETED
Go back to the vehicle and **reconnect** the 4-Pin (Data-Link) connector and after, all the remaining connector.

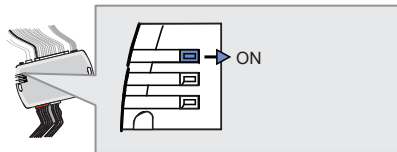

↳ The BLUE LED will turn ON.

9

x1 PRESS

IGNITION OFF → IGNITION ON

ALTERNATE

ON

20 SEC.

FLASH RAPIDLY

Do not press the brake pedal. **Press** the Push-to-Start button once to turn on the ignition.

↳ The RED and YELLOW LEDs will turn ON.

Wait, at least 20 seconds, do not disconnect the modules or turn off the ignition.

↳ The BLUE LED will flash rapidly.

10

x1 PRESS

IGNITION ON → IGNITION OFF

ON

OFF



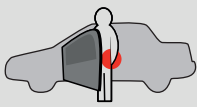

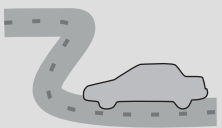
Press the Push-to-Start button once to turn off the ignition.

↳ The BLUE will turn OFF.



The module is now programmed.

REMOTE STARTER FUNCTIONALITY

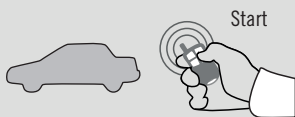 <p>All doors must be closed.</p> <p>Remote start the vehicle.</p>	 <p>Unlock the doors with either:</p> <ul style="list-style-type: none"> • The OEM remote • The remote-starter remote • Or the proximity remote 	 <p>Enter the vehicle with the SMART-KEY.</p>	 <p>DO NOT PRESS THE BRAKE PEDAL.</p> <p>Press and release the Push-to-Start button once.</p>	 <p>Press the brake pedal. The vehicle can now be put in to gear and driven.</p> <p>If the Smart-Key is not detected the vehicle will shut down.</p>
---	--	--	--	---





REGULAR & THAR-FOR3 INSTALLATION

ADDENDUM - SUGGESTED WIRING CONFIGURATION



ONLY COMPATIBLE WITH AUTOMATIC TRANSMISSION VEHICLES.

VEHICLE	YEARS	Vehicle functions supported in this diagram (functional if equipped)												
		T-Harness available (sold separately)	Lock	Unlock	Arm	Disarm	Parking Lights	Tachometer	Door Status	Hood Status*	Hand-Brake Status	Foot-Brake Status		
														
FORD														
E-350	2021	•	•	•	•	•	•	•	•	•	•	•	•	•
E-450	2021	•	•	•	•	•	•	•	•	•	•	•	•	•




FIRMWARE VERSION

71.[52]

MINIMUM

To add the firmware version and the options, use the **FLASH LINK UPDATER** or **FLASH LINK MOBILE** tool, sold separately.

	Program bypass option:	UNIT OPTION	DESCRIPTION
		A3	OFF
IF THE VEHICLE IS NOT EQUIPPED WITH FUNCTIONAL HOOD PIN:		A11	OFF
			Hood trigger (Output Status).

Parts required (Not included)			PAGE
WIRE TO WIRE DIAGRAM			
	1x	Relay (Parking lights)	Page 3
THARNESSE DIAGRAM			
THARNESSE THAR-FOR3	1x	THAR-FOR3	Page 4
	1x	Relay (Parking lights)	

MANDATORY INSTALL

*HOOD PIN



HOOD STATUS: THE HOOD PIN SWITCH MUST BE INSTALLED IF THE VEHICLE CAN BE REMOTE STARTED WITH THE HOOD OPEN, SET FUNCTION A11 TO OFF.

A11

OFF


Notice: the installation of safety elements are mandatory. The hood pin is an essential security element and must be installed.

THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.

DESCRIPTION






② Parking Lights switch

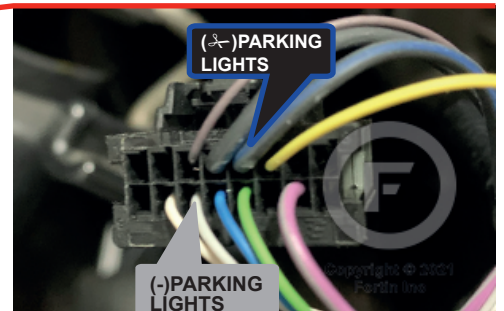


③ Gateway module, Behind OBD-II connector

④ Passenger kick panel

① Ignition switch

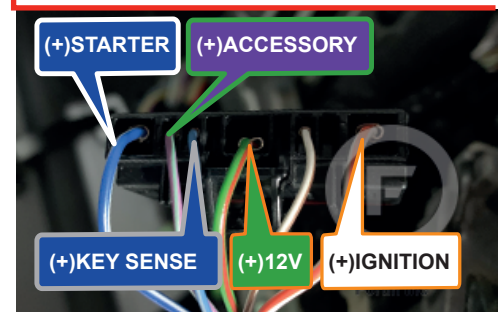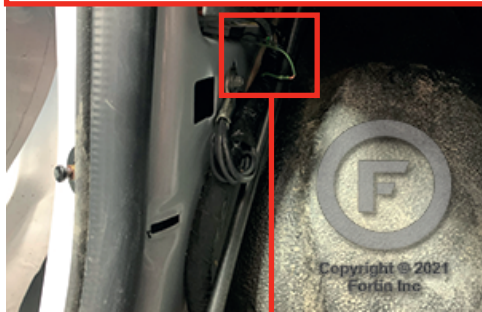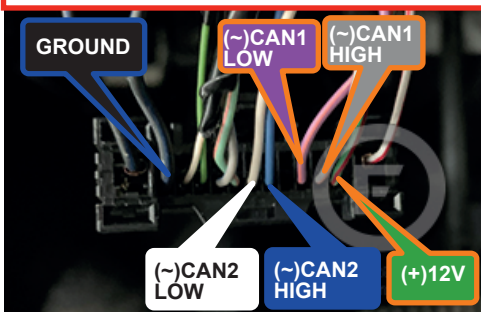

AUTOMATIC TRANSMISSION WIRING CONNECTION

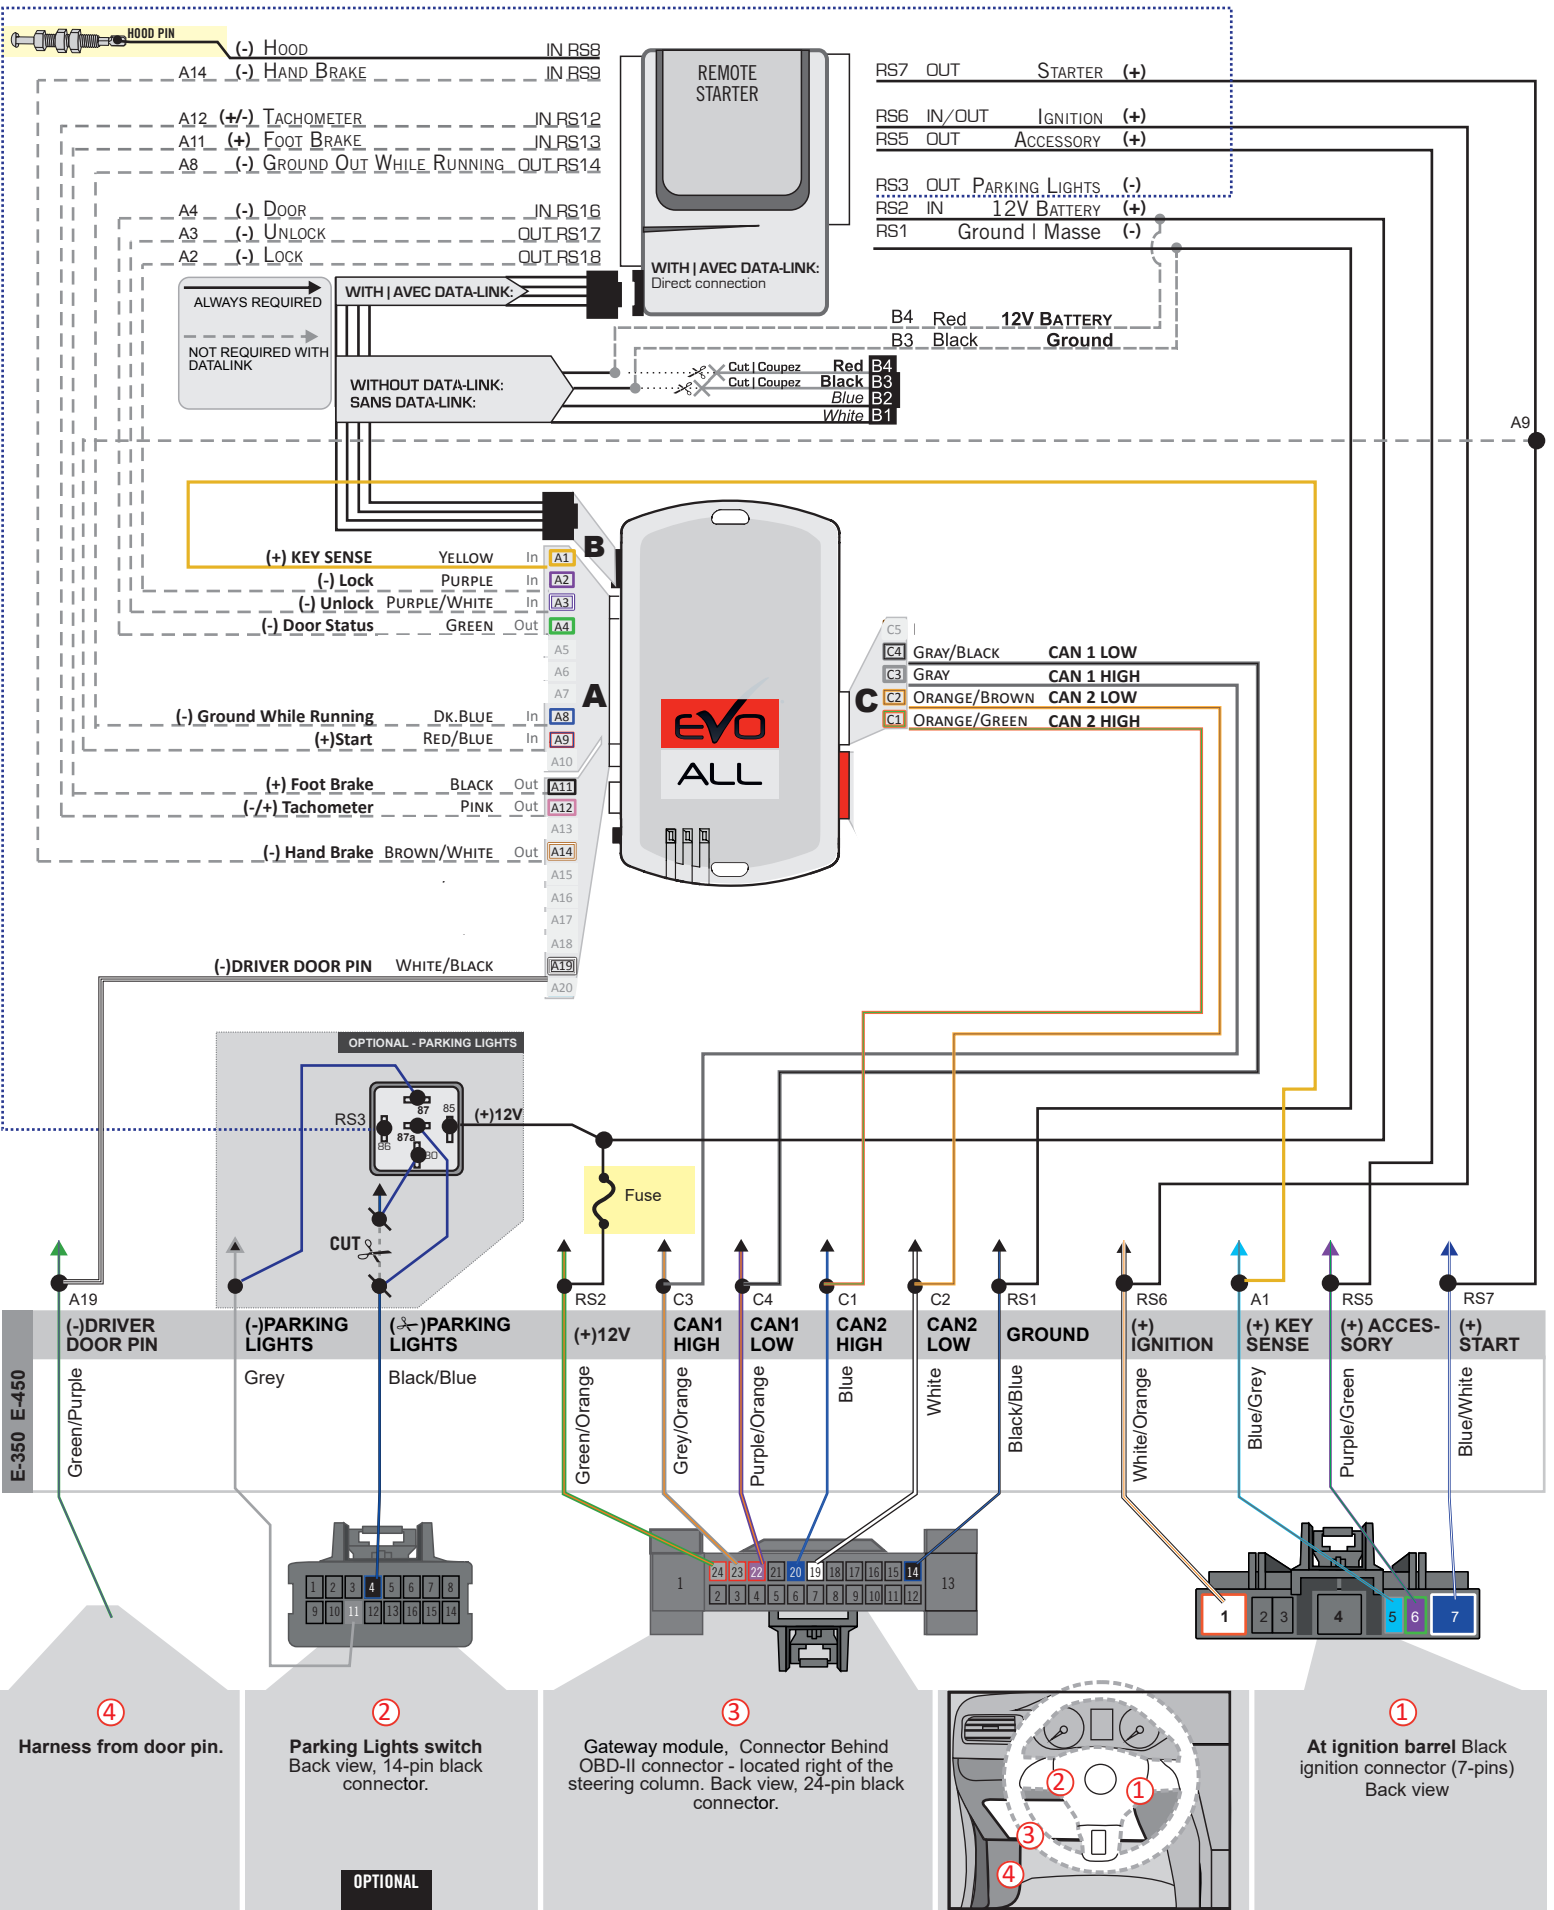


④ Harness from door pin.

② Parking Lights switch
Back view, 14-pin black connector.


OPTIONAL

③ Gateway module, Connector Behind OBD-II connector - located right of the steering column. Back view, 24-pin black connector.

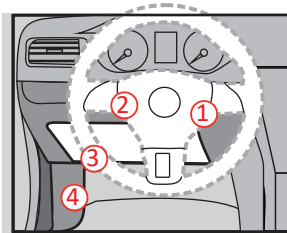


① At ignition barrel Black ignition connector (7-pins) Back view

THAR-FOR3 | T-HARNESS - AUTOMATIC TRANSMISSION

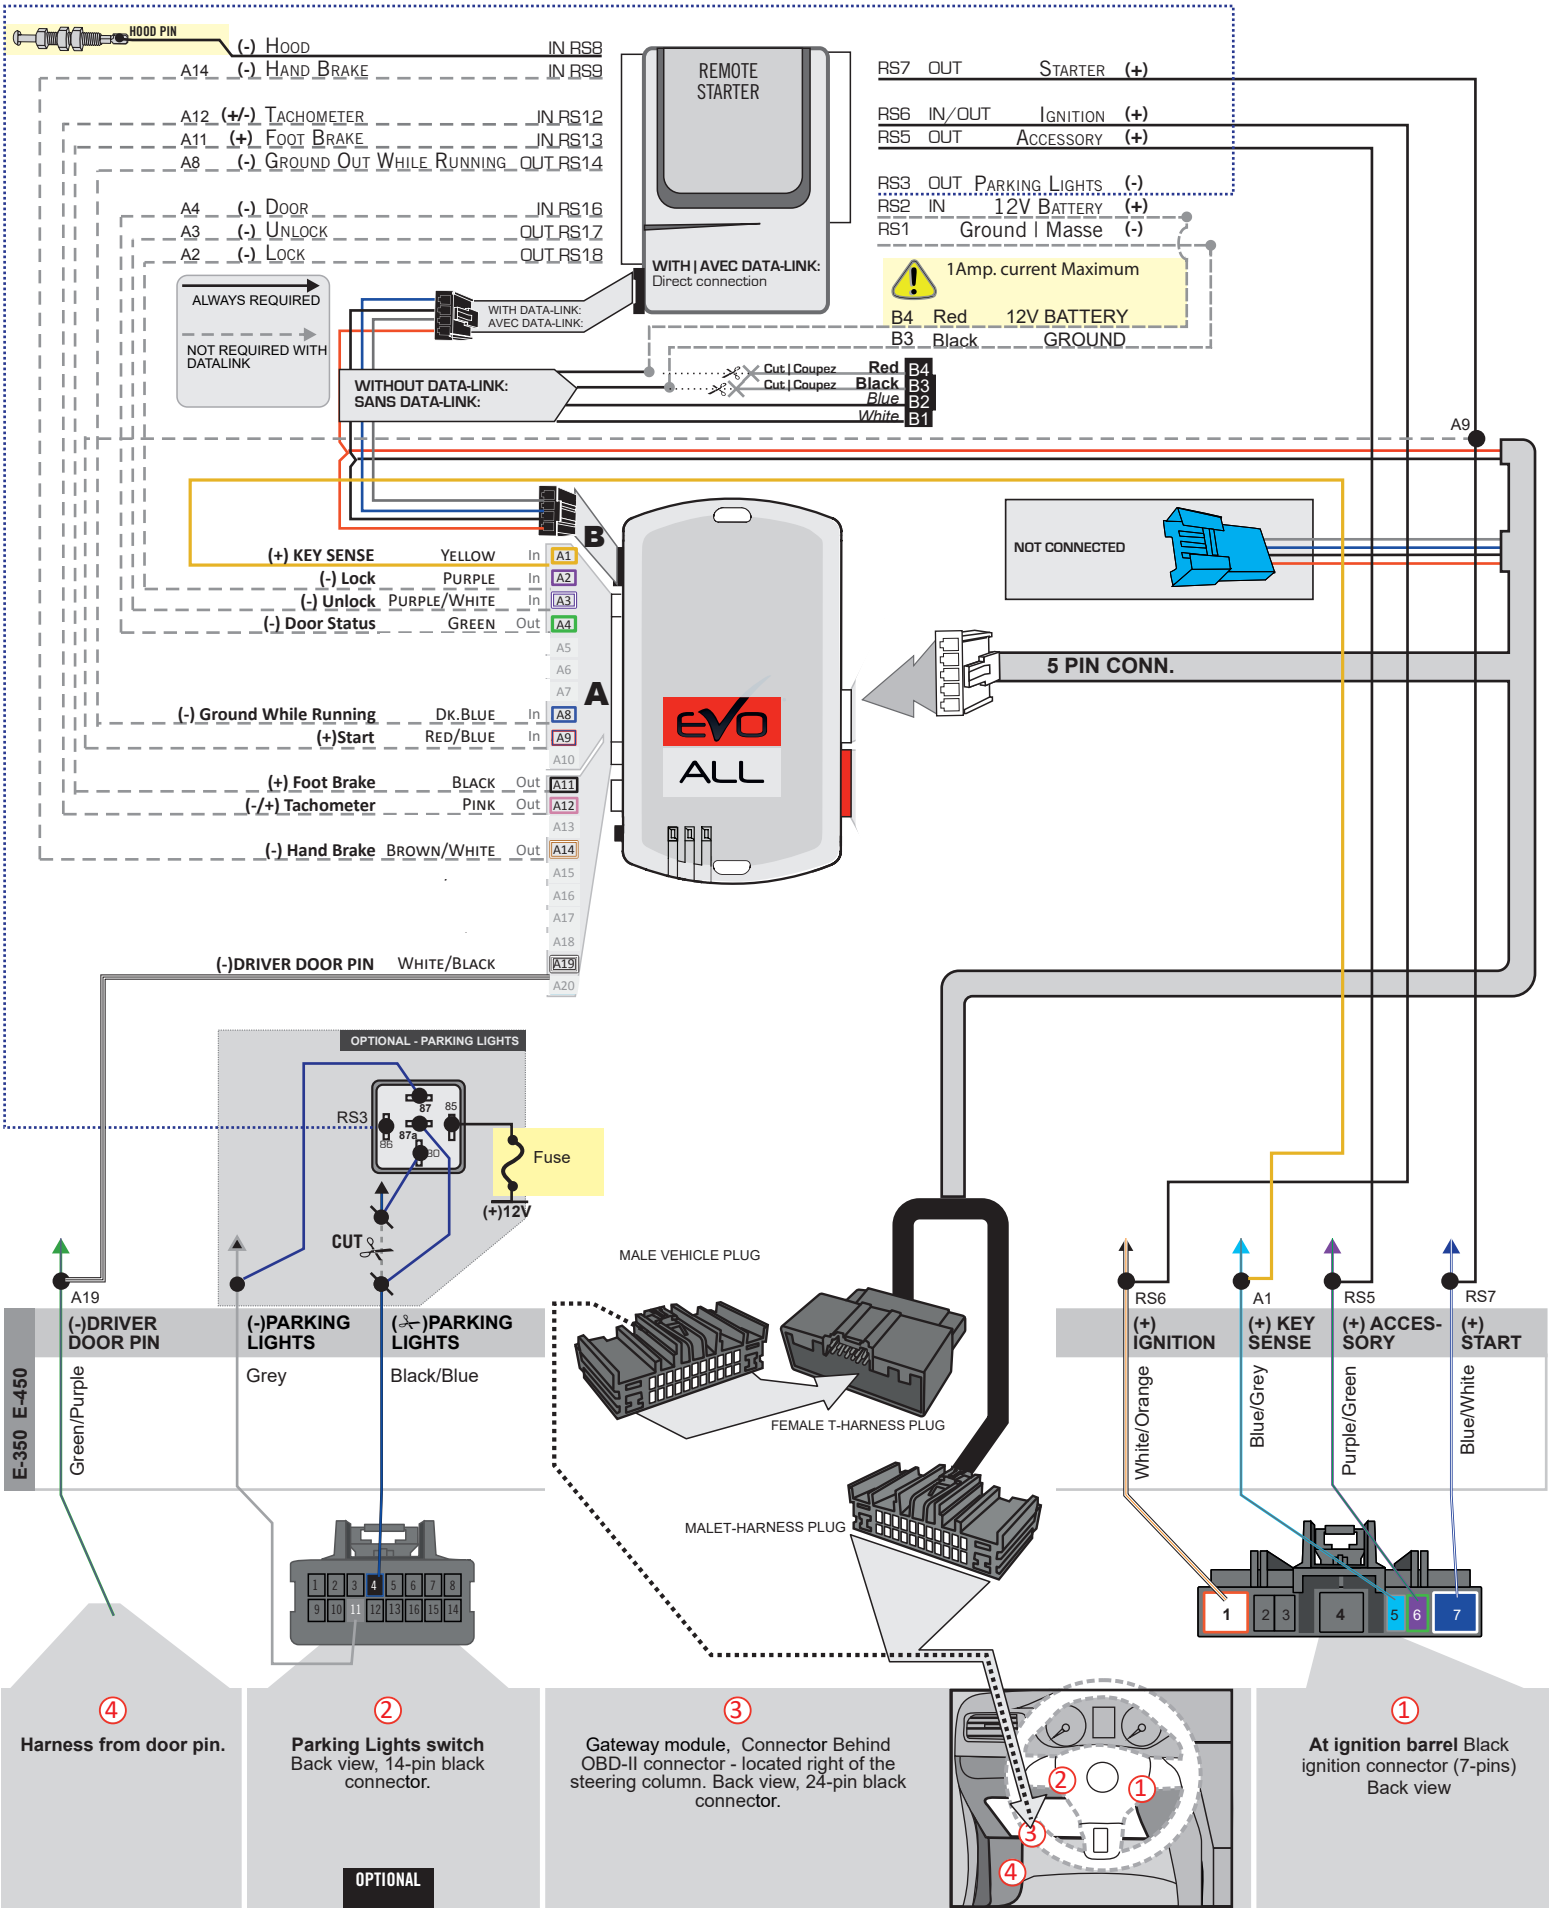

PROGRAMMING PROCEDURE


1

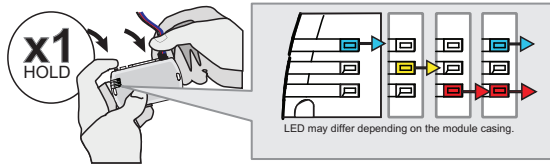

Press and hold the programming button:
Connect the 4-PIN Data-link harness (Black connector).


↳ The Blue, Red, Yellow and Blue & Red LEDs will alternatively illuminate.

2

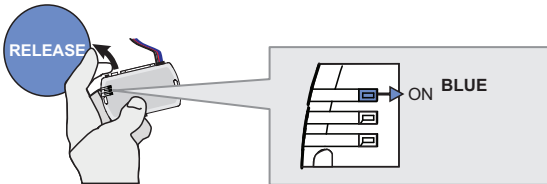


Release the programming button when the LED is BLUE.

 If the LED is not solid BLUE disconnect the 4-Pin connector (Data-Link) and go back to step 1.




3

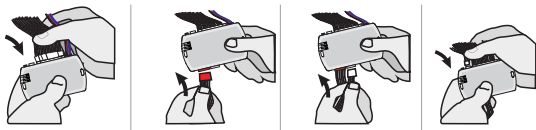

Insert the required remaining connectors.


4

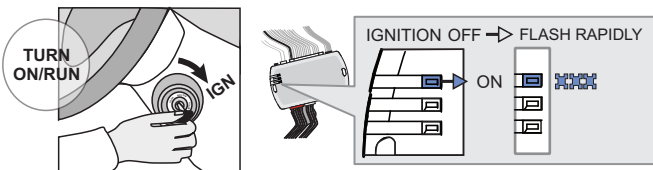

Turn the key to the Ignition ON/RUN position.

↳ The BLUE LED will flash rapidly.

5

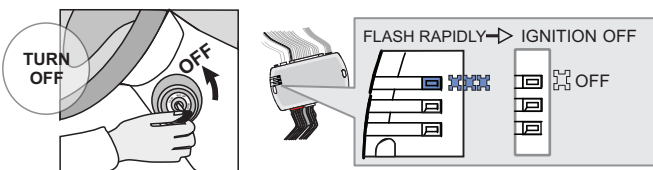

Turn the key to the OFF position.

↳ The BLUE LED will turn off.



The module is now programmed.

REMOTE STARTER FUNCTIONALITY



All doors must be closed.



Remote start the vehicle.



Unlock the doors with the remote-starter remote or the OEM remote.



Insert and Turn the key to the Ignition ON/RUN position.



Press the brake pedal.



The vehicle can now be put in to gear and driven.

REGULAR & THAR-FOR3 INSTALLATION

ADDENDUM - SUGGESTED WIRING CONFIGURATION




ONLY COMPATIBLE WITH AUTOMATIC TRANSMISSION VEHICLES.



Vehicle functions supported in this diagram (functional if equipped)

VEHICLE	YEARS	Immobilizer bypass	Lock	Unlock	Arm	Disarm	Heated Seats**	Rear Defrost**	RAP Disable	Parking Lights***	Tachometer	Door Status	Trunk Status	Hood Status*	Hand-Brake Status	Foot-Brake Status	Active OEM Remote Start
LINCOLN																	
Aviator	Push-to-Start 2020	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•

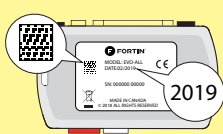

COMPATIBLE MODULE REQUIRED:

QR CODE ON THE LABEL
MANUFACTURED AFTER: 2019

FIRMWARE VERSION
58.[02]
MINIMUM

To add the firmware version and the options, use the **FLASH LINK UPDATER** or **FLASH LINK MOBILE** tool, sold separately.



Program bypass option:

UNIT OPTION

DESCRIPTION

C1

OEM Remote status (Lock/Unlock) monitoring

D6

Push-to-Start

IF THE VEHICLE IS NOT EQUIPPED WITH FUNCTIONAL HOOD PIN:

A11

OFF

Hood trigger (Output Status).

NOTES

The vehicles OEM remote and SmartKey are still operable during remote start.

**Heatd seats The heated seats and rear defrost activate automatically when it cold.

***Parking Lights The parking Lights at remote start only.

MANDATORY INSTALL

*HOOD PIN



HOOD STATUS: THE HOOD PIN SWITCH MUST BE INSTALLED IF THE VEHICLE CAN BE REMOTE STARTED WITH THE HOOD OPEN, SET FUNCTION A11 TO OFF.

A11

OFF

Notice: the installation of safety elements are mandatory. The hood pin is an essential security element and must be installed.

THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.

DESCRIPTION |

	Parts required (Not included)		PAGE
--	-------------------------------	--	------


WIRE TO WIRE DIAGRAM

AUTOMATIC TRANSMISSION	1x 7.5 Amp. fuse	1x Fusible 7.5 Amp.	Page 3
------------------------	------------------	---------------------	--------



THARNES DIAGRAM

THARNES THAR-FOR3 AUTOMATIC TRANSMISSION	1x THAR-FOR3	1x THAR-FOR3	Page 4
--	--------------	--------------	--------



① Gateway module, located at dash board driver's side,

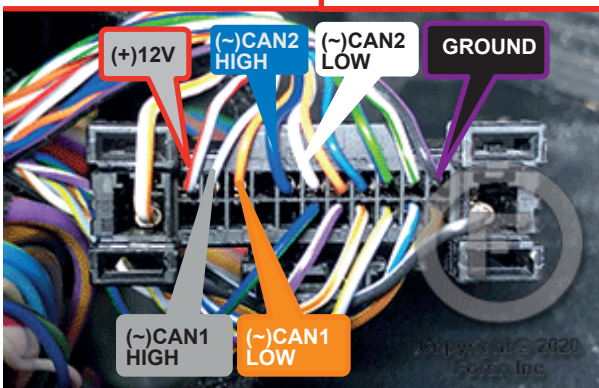





② Fuse box

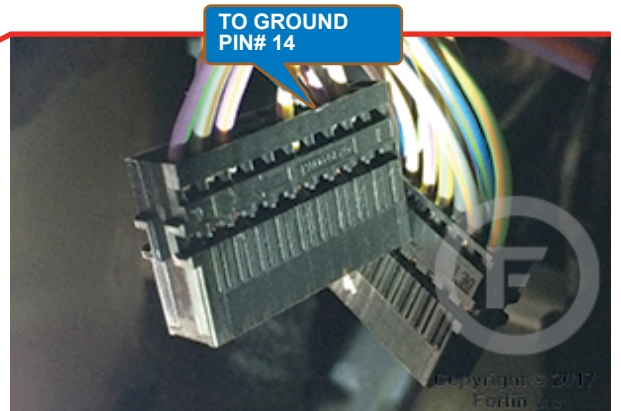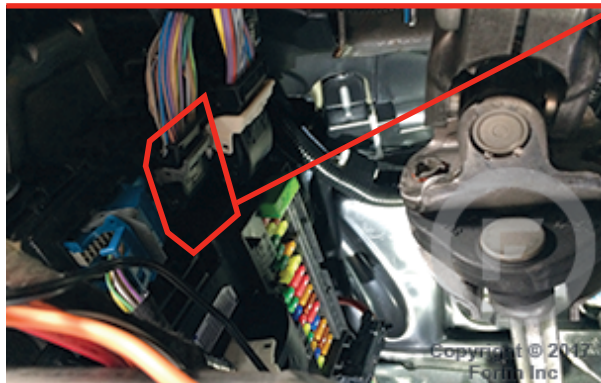

AUTOMATIC TRANSMISSION WIRING CONNECTION |

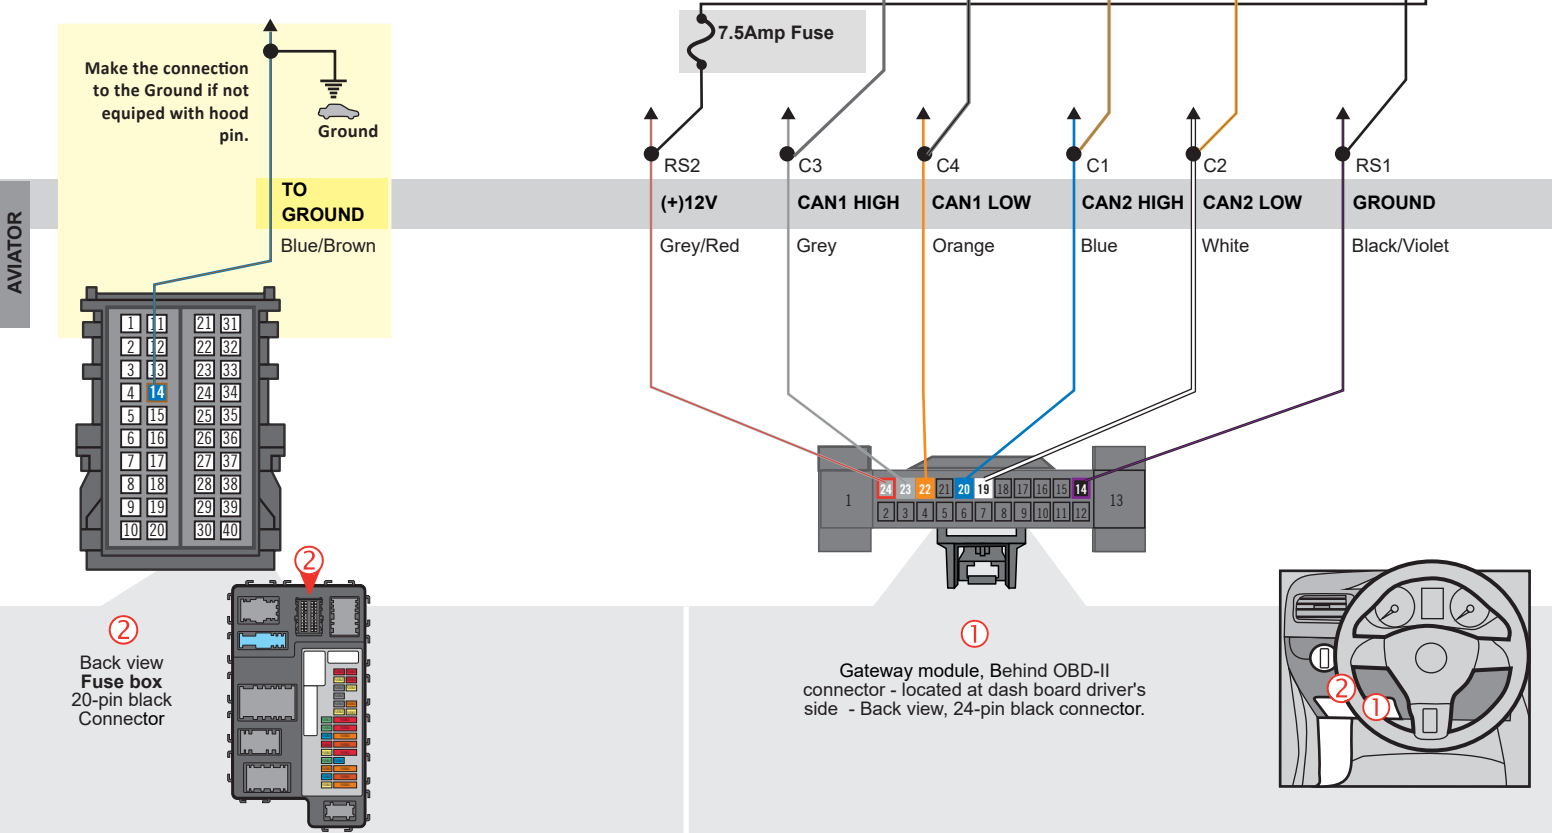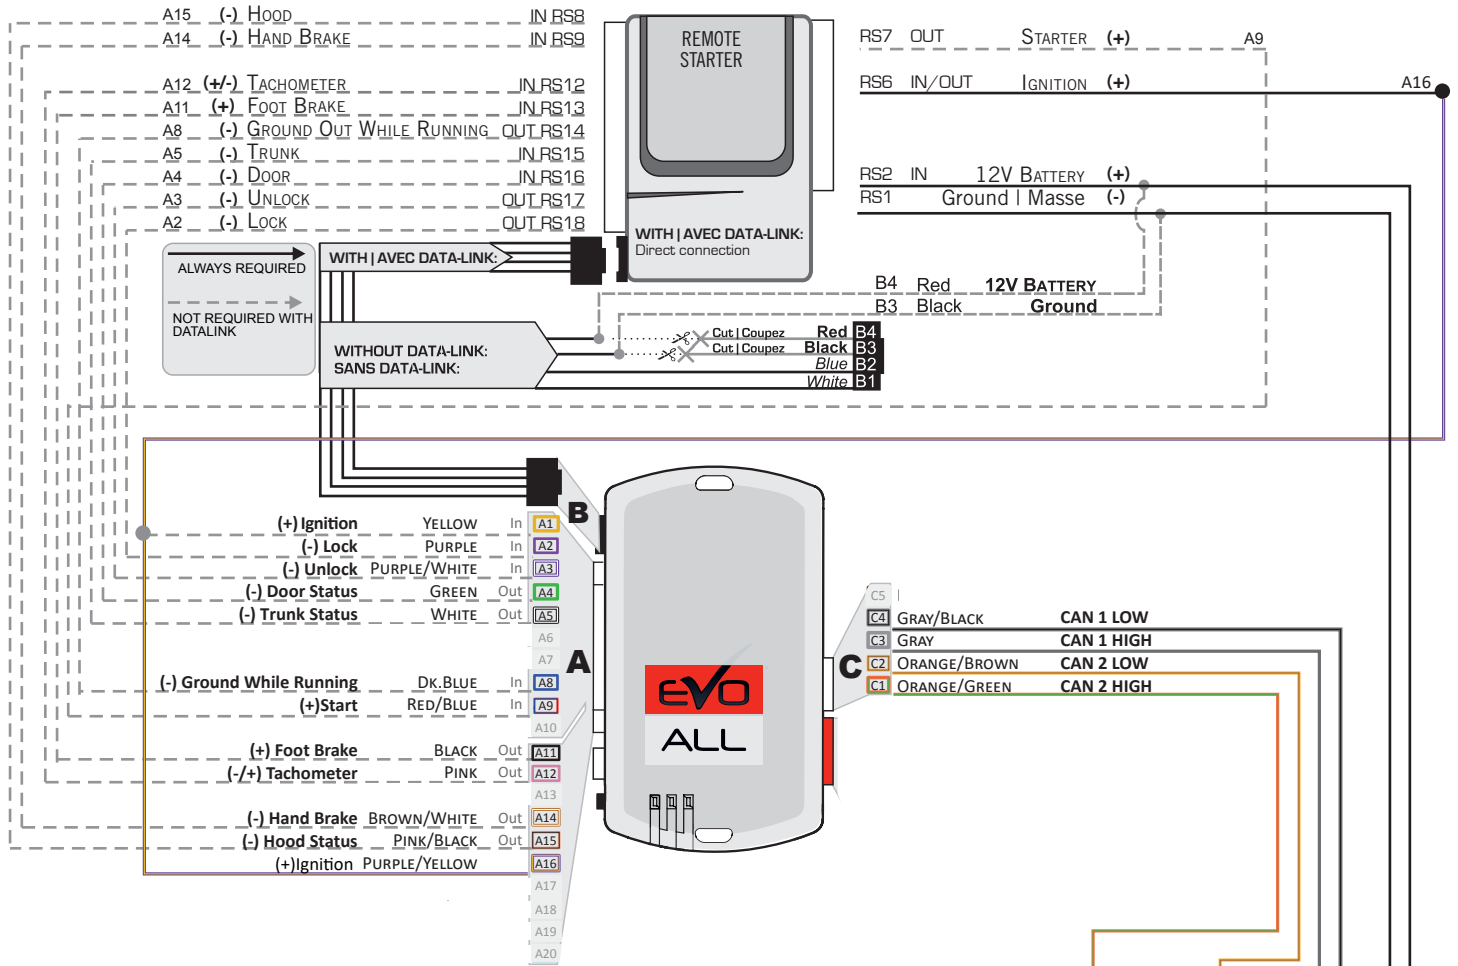

THAR-FOR3 | T-HARNESS - AUTOMATIC TRANSMISSION |

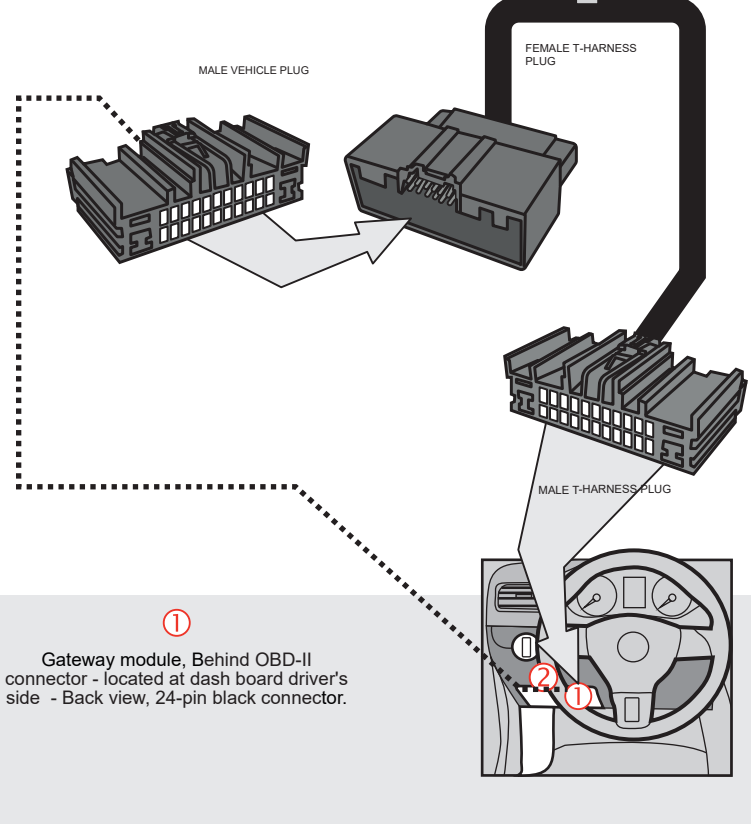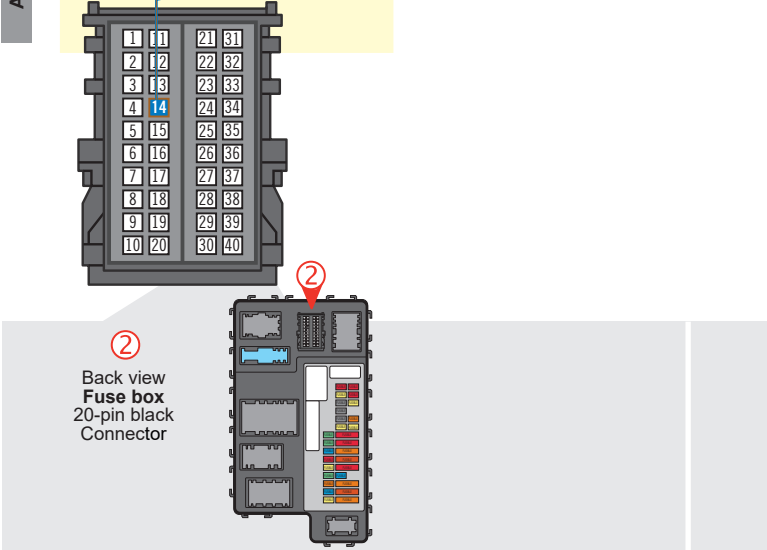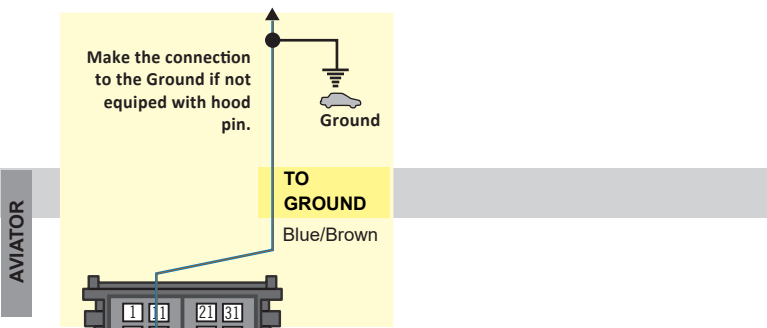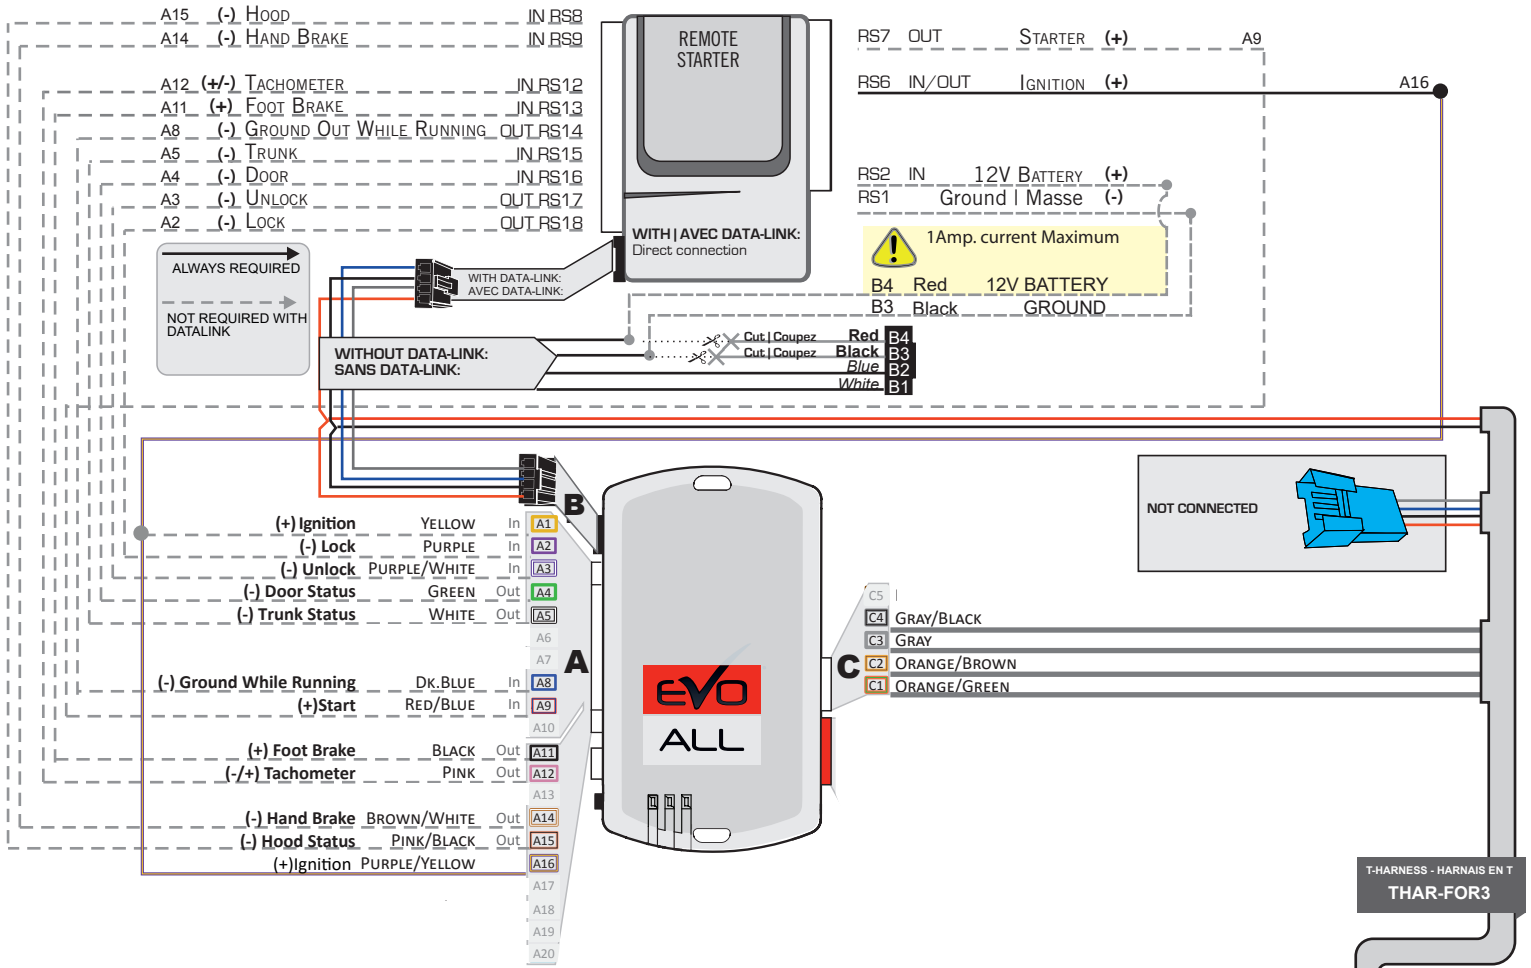



Parts required (not included)


- 1x FLASH LINK UPDATER, SOFTWARE | PROGRAMME
- 1x FLASH LINK MANAGER
- 1x Microsoft Windows Computer with Internet connection

OR

- 1x FLASH LINK MOBILE
- 1x FLASH LINK MOBILE APP
- Smartphone Android or iOS with Internet connection (Internet provider charges may apply)

BEFORE PROGRAMMING SET THE UNIT OPTIONS AND SAVE.


1

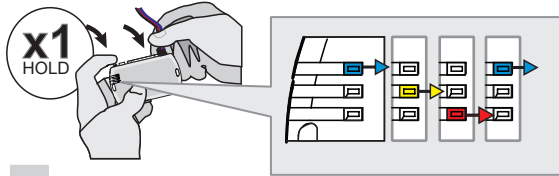

Press and hold the programming button:
Insert the 4-Pin (Data-Link) connector.


↳ The Blue, Red, Yellow and Blue & Red LEDs will alternatively illuminate.

2

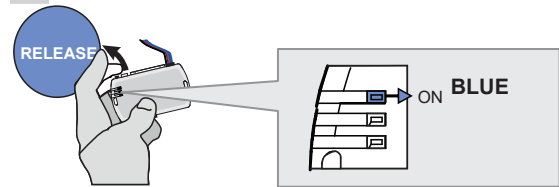


Release the programming button when the LED is BLUE.

 If the LED is not solid BLUE disconnect the 4-Pin connector (Data-Link) and go back to step 1.




3

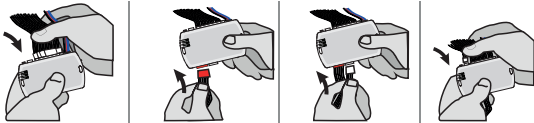

Insert the required remaining connectors.

4

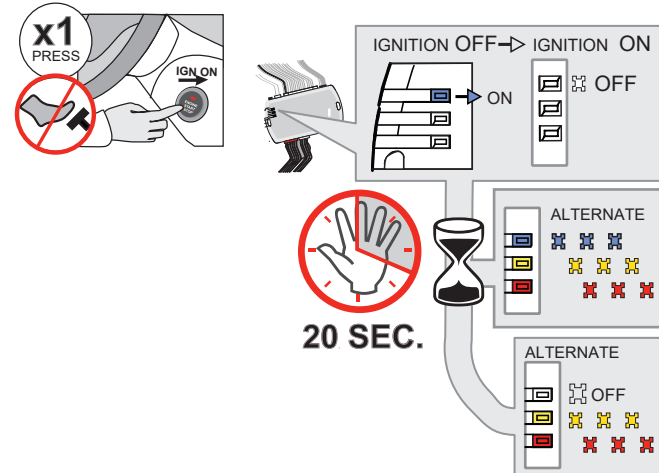

Do not press the brake pedal.
Press the Push-to-Start button once to turn on the ignition.

 
↳ The BLUE LED will turn OFF.

↳ The BLUE, YELLOW and RED LEDs will alternate.


Wait, at least 20 seconds, do not disconnect the modules or turn off the ignition.

↳ The RED and YELLOW LEDs will alternate.

Make sure that the DELs are flashing RED and YELLOW before continuing programming.



5

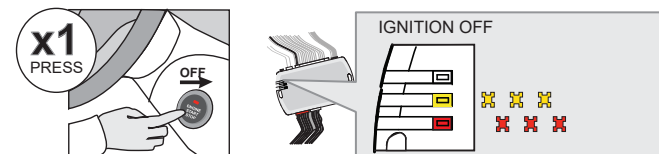


Press the Push-to-Start button once to turn off the ignition.

↳ The RED and YELLOW LEDs alternate.


KEY BYPASS PROGRAMMING PROCEDURE 2/2 |

6

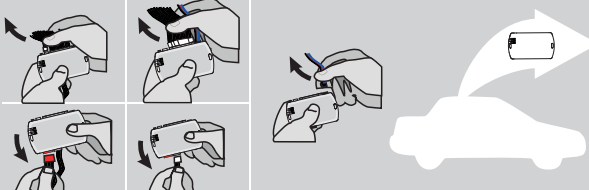

Disconnect all the connectors and after the Data-Link (4-pins) connector.

7



Microsoft Windows Computer with Internet connection*

FLASH LINK UPDATER* **FLASH LINK MANAGER***
SOFTWARE | PROGRAMME

OR

Smartphone* (Internet provider charges may apply)


FLASH LINK MOBILE*

VEHICLE'S OBDII CONNECTOR


Use the tool: FLASH LINK UPDATER or FLASH LINK MOBILE to visit the DCryptor menu.

*Parts required (not included)

8

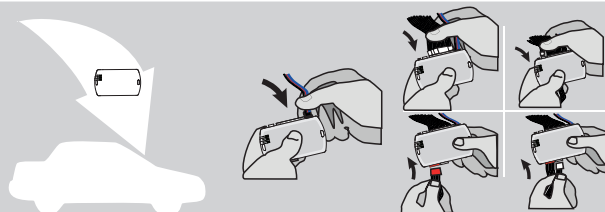


AFTER DCRYPTOR PROGRAMMING COMPLETED
Go back to the vehicle and reconnect the 4-Pin (Data-Link) connector and after, all the remaining connector.

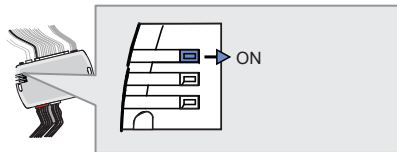

↳ The BLUE LED will turn ON.

9

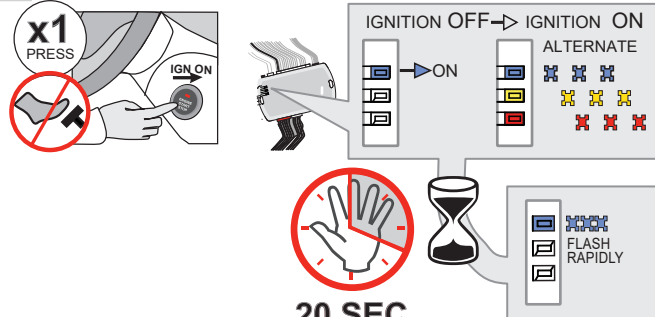

x1 PRESS (with a 'no brake pedal' symbol)

IGNITION OFF → IGNITION ON

ALTERNATE

FLASH RAPIDLY

20 SEC.


Do not press the brake pedal. **Press** the Push-to-Start button once to turn on the ignition.

↳ The RED and YELLOW LEDs will turn ON.

Wait, at least 20 seconds, do not disconnect the modules or turn off the ignition.

↳ The BLUE LED will flash rapidly.

10

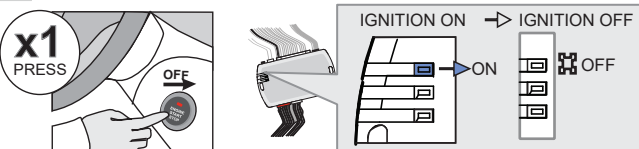


x1 PRESS (with a 'no brake pedal' symbol)

IGNITION ON → IGNITION OFF

OFF



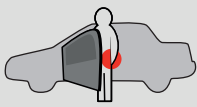

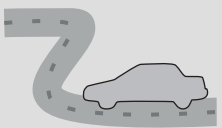
Press the Push-to-Start button once to turn off the ignition.

↳ The BLUE will turn OFF.



The module is now programmed.

REMOTE STARTER FUNCTIONALITY |

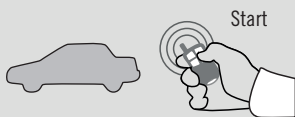 <p>Start</p> <p>All doors must be closed.</p> <p>Remote start the vehicle.</p>	 <p>UNLOCK</p> <p>Unlock the doors with either:</p> <ul style="list-style-type: none"> • The OEM remote • The remote-starter remote • Or the proximity remote 	 <p>Enter the vehicle with the SMART-KEY.</p>	 <p>DO NOT PRESS THE BRAKE PEDAL.</p> <p>Press and release the Push-to-Start button once.</p>	 <p>Press the brake pedal. The vehicle can now be put in to gear and driven.</p> <p>If the Smart-Key is not detected the vehicle will shut down.</p>
--	---	--	---	---

REGULAR & THAR-FOR3 INSTALLATION

ADDENDUM - SUGGESTED WIRING CONFIGURATION




ONLY COMPATIBLE WITH AUTOMATIC TRANSMISSION VEHICLES.



Vehicle functions supported in this diagram (functional if equipped)

VEHICLE	YEARS	Immobilizer bypass	T-Harness available (sold separately)	Lock	Unlock	Arm	Disarm	Heated Seats**	Rear Defrost**	RAP Disable	Parking Lights***	Tachometer	Door Status	Trunk Status	Hood Status*	Hand-Brake Status	Foot-Brake Status	Active OEM Remote Start
FORD																		
Edge	2020	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•

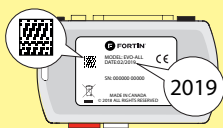


COMPATIBLE MODULE REQUIRED:

QR CODE ON THE LABEL
MANUFACTURED AFTER: 2019

FIRMWARE VERSION

58.[02]
MINIMUM

To add the firmware version and the options, use the **FLASH LINK UPDATER** or **FLASH LINK MOBILE** tool, sold separately.

	UNIT OPTION	DESCRIPTION
 <p>Program bypass option:</p>	C1	OEM Remote status (Lock/Unlock) monitoring errouillage/Déverrouil-
	D6	Push-to-Start
<p>IF THE VEHICLE IS NOT EQUIPPED WITH FUNCTIONAL HOOD PIN:</p>	A11	OFF Hood trigger (Output Status).

NOTES

The vehicles OEM remote and SmartKey are still operable during remote start.

**Heated seats The heated seats and rear defrost activate automatically when it cold.

***Parking Lights The parking Lights at remote start only.

MANDATORY INSTALL

*HOOD PIN



HOOD STATUS: THE HOOD PIN SWITCH MUST BE INSTALLED IF THE VEHICLE CAN BE REMOTE STARTED WITH THE HOOD OPEN, SET FUNCTION A11 TO OFF.

A11

OFF

Notice: the installation of safety elements are mandatory. The hood pin is an essential security element and must be installed.

THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.

DESCRIPTION | DESCRIPTION

	Parts required (Not included)	PAGE
--	-------------------------------	------

WIRE TO WIRE DIAGRAM

AUTOMATIC TRANSMISSION	1x 7.5 Amp. fuse	Page 3
------------------------	------------------	--------



THARNES DIAGRAM

THARNES THAR-FOR3 AUTOMATIC TRANSMISSION	1x THAR-FOR3	Page 4
--	--------------	--------




② Parking Lights switch


① Gateway module, located at right of steering column.

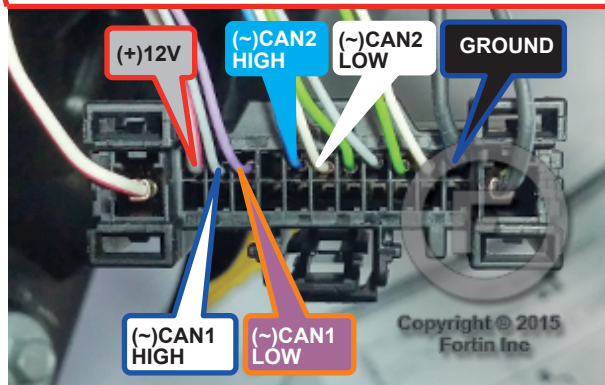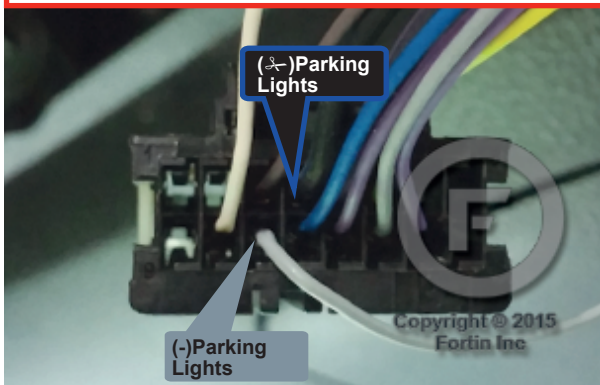

AUTOMATIC TRANSMISSION WIRING CONNECTION |

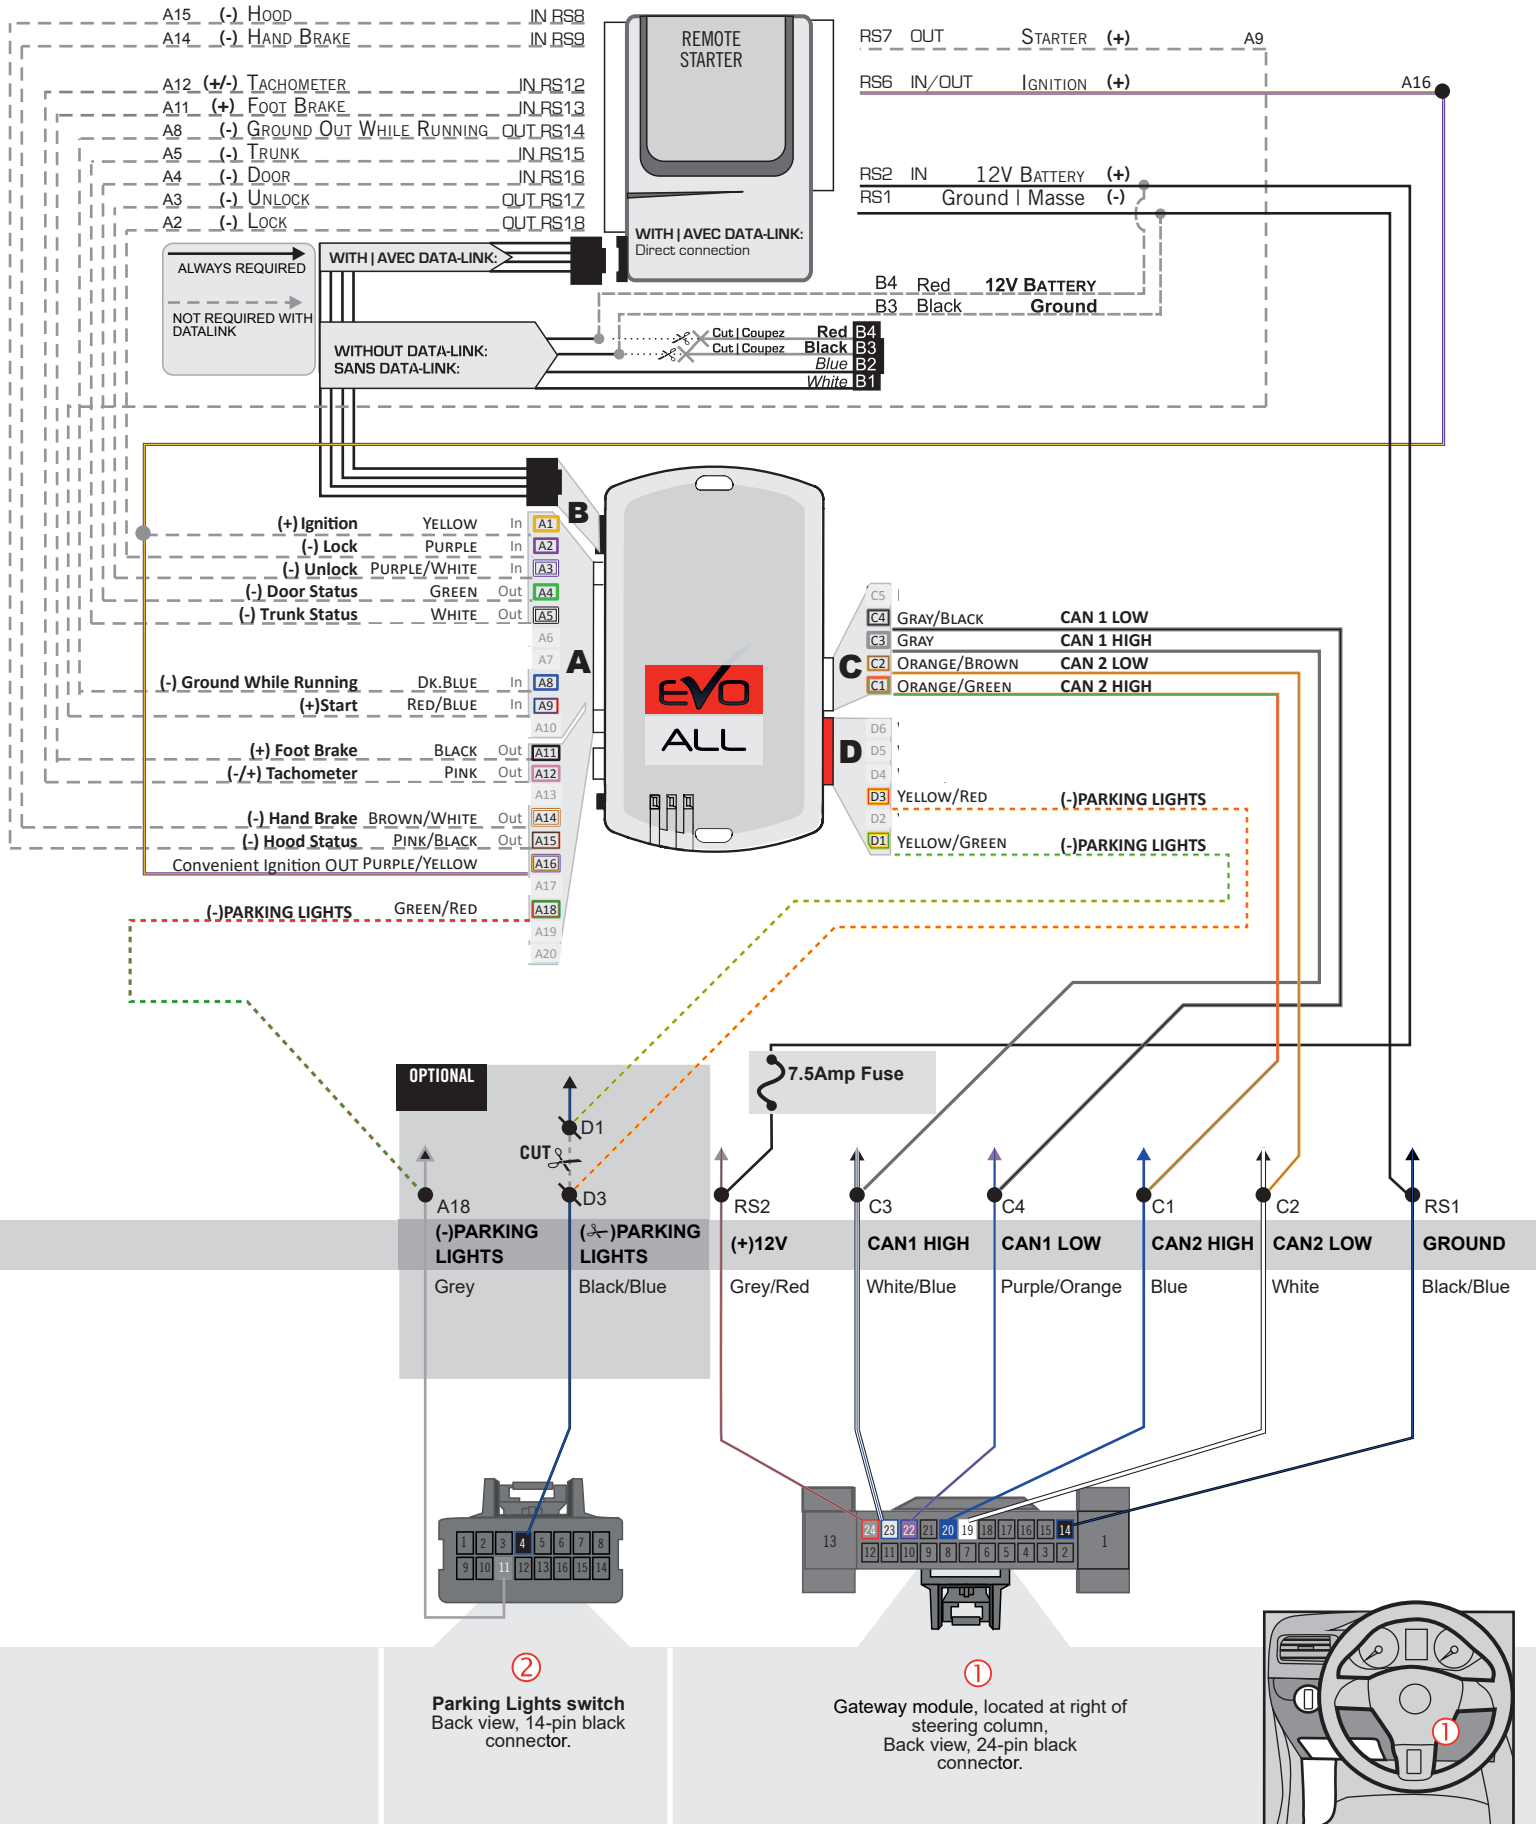

THAR-FOR3 | T-HARNESS - AUTOMATIC TRANSMISSION |

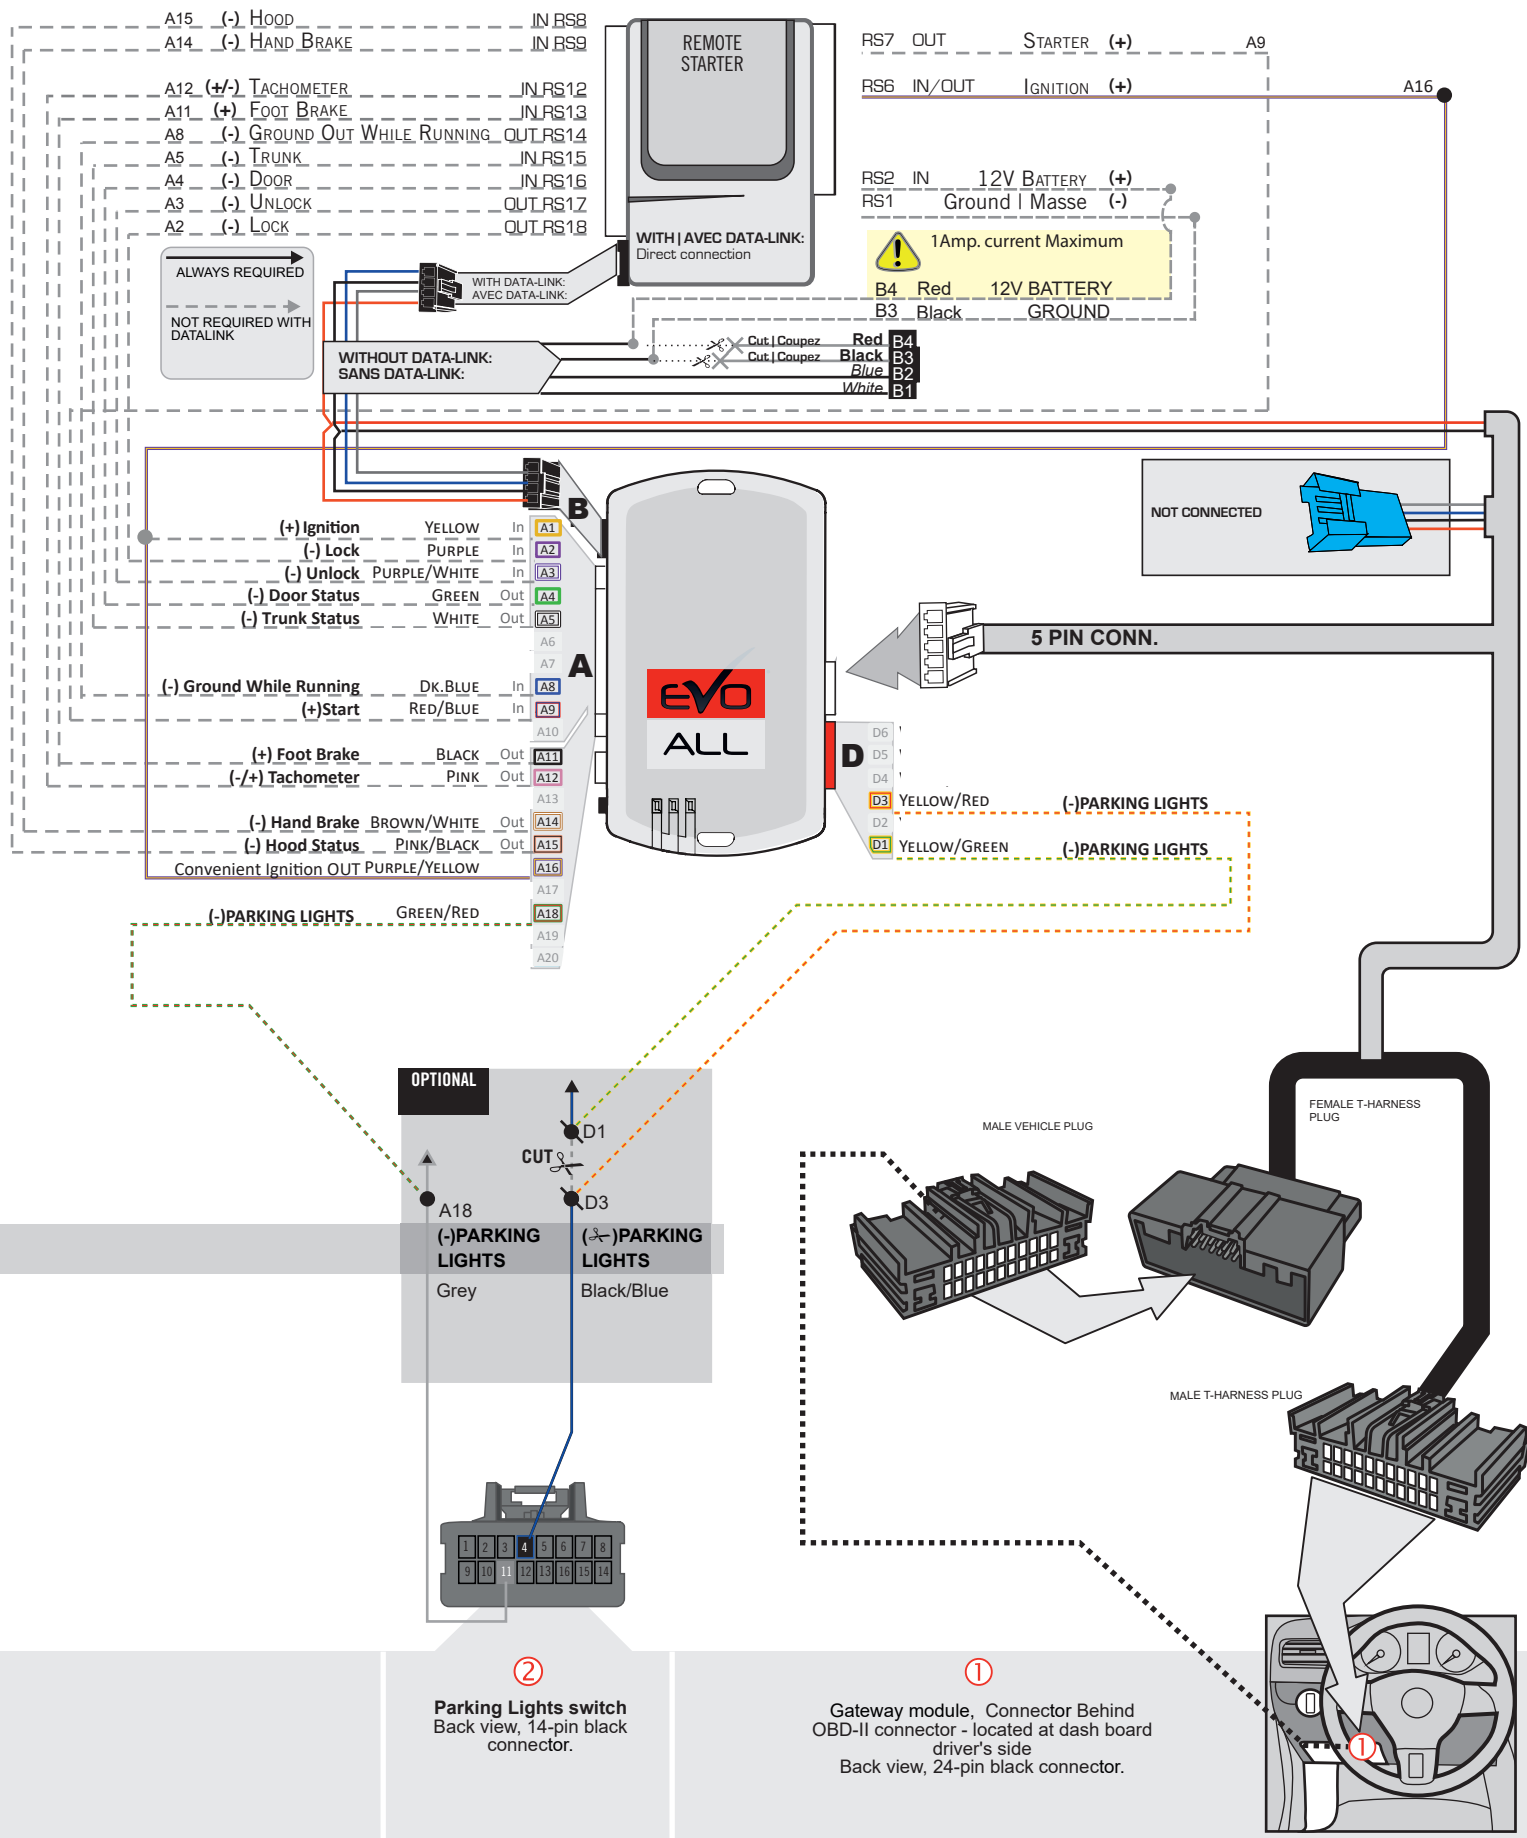



Parts required (not included)


- 1x **FLASH LINK UPDATER,**
- 1x **FLASH LINK MANAGER**
SOFTWARE | PROGRAMME
- 1x Microsoft Windows Computer with Internet connection

OR

- 1x **FLASH LINK MOBILE**
- 1x **FLASH LINK MOBILE APP**
- Smartphone Android or iOS with Internet connection
(Internet provider charges may apply)

BEFORE PROGRAMMING SET THE UNIT OPTIONS AND SAVE.


1

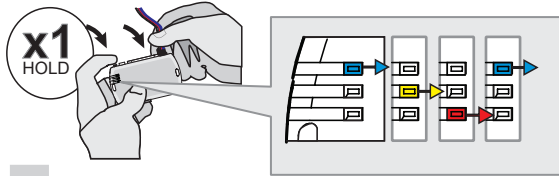

Press and hold the programming button:
Insert the 4-Pin (Data-Link) connector.


↳ The Blue, Red, Yellow and Blue & Red LEDs will alternatively illuminate.

2

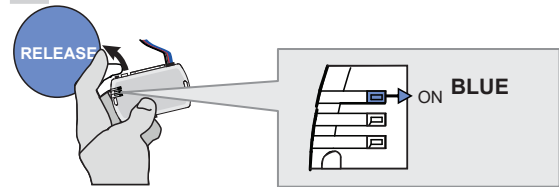


Release the programming button when the LED is BLUE.

 If the LED is not solid BLUE disconnect the 4-Pin connector (Data-Link) and go back to step 1.




3

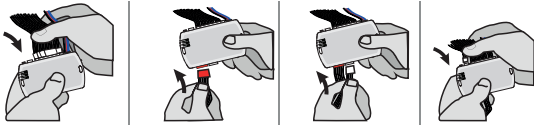

Insert the required remaining connectors.

4

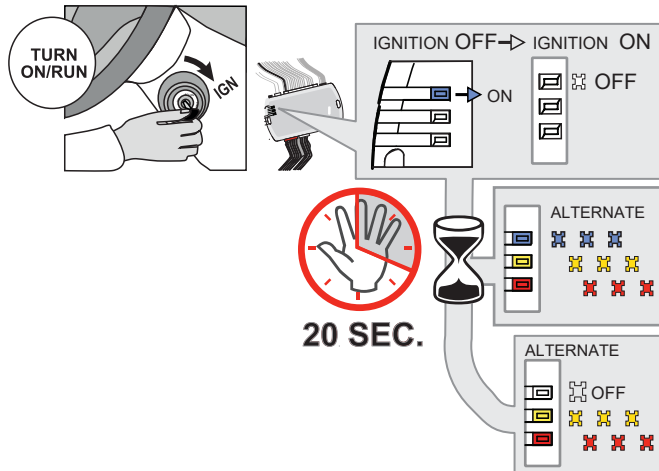

Turn the key to the Ignition ON/RUN position.

↳ The BLUE LED will turn OFF.

↳ The BLUE, YELLOW and RED LEDs will alternate.


Wait, at least 20 seconds, do not disconnect the modules or turn off the ignition.

↳ The RED and YELLOW LEDs will alternate.

Make sure that the DELs are flashing RED and YELLOW before continuing programming.



5

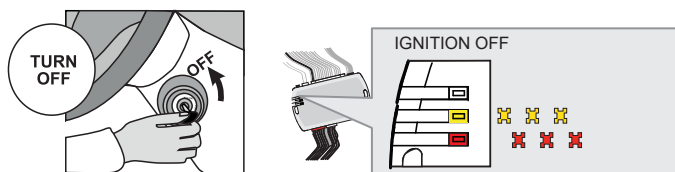


Turn the key to the OFF position.

↳ The RED and YELLOW LEDs alternate.


KEY BYPASS PROGRAMMING PROCEDURE 2/2 |

6

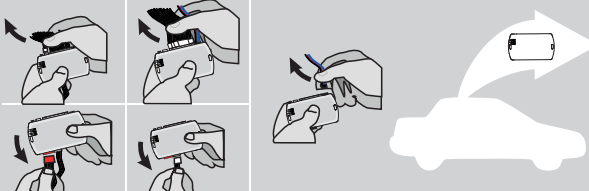

Disconnect all the connectors and after the Data-Link (4-pins) connector.

7



Microsoft Windows Computer with Internet connection*

FLASH LINK UPDATER* **FLASH LINK MANAGER***
SOFTWARE | PROGRAMME

OR


Smartphone* (Internet provider charges may apply)

VEHICLE'S OBDII CONNECTOR **FLASH LINK MOBILE***


Use the tool: FLASH LINK UPDATER or FLASH LINK MOBILE to visit the DCRYPTOR menu.

*Parts required (not included)

8

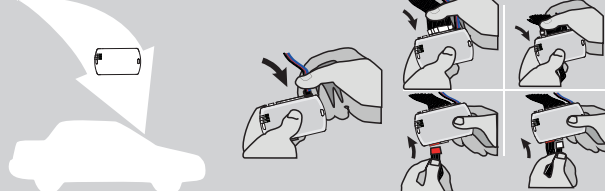


AFTER DCRYPTOR PROGRAMMING COMPLETED
Go back to the vehicle and reconnect the 4-Pin (Data-Link) connector and after, all the remaining connector.

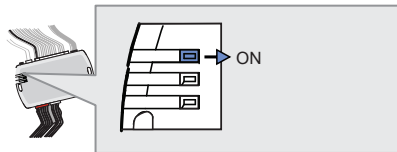

↳ The BLUE LED will turn ON.

9

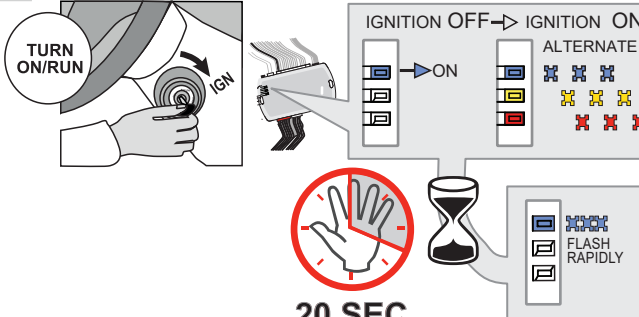

TURN ON/RUN

IGNITION OFF → IGNITION ON

ALTERNATE

ON

FLASH RAPIDLY

20 SEC.


Turn the key to the Ignition ON/RUN position.

↳ The RED and YELLOW LEDs will turn ON.

Wait, at least 20 seconds, do not disconnect the modules or turn off the ignition.

↳ The BLUE LED will flash rapidly.

10

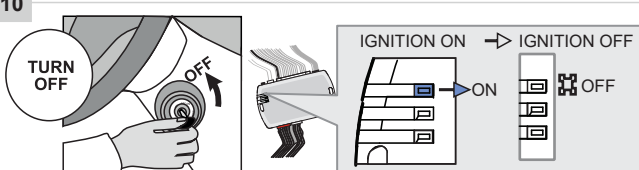

TURN OFF

IGNITION ON → IGNITION OFF

ON

OFF

Turn the key to the OFF position.

↳ The BLUE will turn OFF.



The module is now programmed.

REMOTE STARTER FUNCTIONALITY |



All doors must be closed.



Remote start the vehicle.



Unlock the doors with the remote-starter remote or the OEM remote.



Insert and Turn the key to the Ignition ON/RUN position.



Press the brake pedal.



The vehicle can now be put in to gear and driven.

REGULAR & THAR-FOR3 INSTALLATION

ADDENDUM - SUGGESTED WIRING CONFIGURATION




ONLY COMPATIBLE WITH AUTOMATIC TRANSMISSION VEHICLES.



Vehicle functions supported in this diagram (functional if equipped)

VEHICLE	YEARS	Immobilizer bypass	T-Harness available (sold separately)	Lock	Unlock	Arm	Disarm	Heated Seats**	Rear Defrost**	RAP Disable	Parking Lights***	Tachometer	Door Status	Trunk Status	Hood Status*	Hand-Brake Status	Foot-Brake Status	Active OEM Remote Start
FORD																		
Edge	Push-to-Start 2020	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•

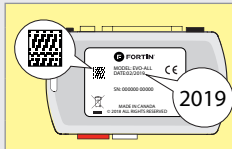

COMPATIBLE MODULE REQUIRED:

QR CODE ON THE LABEL
MANUFACTURED AFTER: 2019

FIRMWARE VERSION
58.[02]
MINIMUM

To add the firmware version and the options, use the **FLASH LINK UPDATER** or **FLASH LINK MOBILE** tool, sold separately.

UNIT OPTION	DESCRIPTION
C1	OEM Remote status (Lock/Unlock) monitoring
D6	Push-to-Start
A11	OFF Hood trigger (Output Status).

IF THE VEHICLE IS NOT EQUIPPED WITH FUNCTIONAL HOOD PIN:

NOTES

The vehicles OEM remote and SmartKey are still operable during remote start.

**Heated seats The heated seats and rear defrost activate automatically when it cold.
**Rear Defrost

***Parking Lights The parking Lights at remote start only.

MANDATORY INSTALL



***HOOD PIN** **HOOD STATUS:** THE HOOD PIN SWITCH MUST BE INSTALLED IF THE VEHICLE CAN BE REMOTE STARTED WITH THE HOOD OPEN, SET FUNCTION A11 TO OFF.



Notice: the installation of safety elements are mandatory. The hood pin is an essential security element and must be installed.

THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.

DESCRIPTION

	Parts required (Not included)	PAGE
--	-------------------------------	------

WIRE TO WIRE DIAGRAM

AUTOMATIC TRANSMISSION	1x 7.5 Amp. fuse	Page 3
------------------------	------------------	--------



THARNES DIAGRAM

THARNES THAR-FOR3 AUTOMATIC TRANSMISSION	1x THAR-FOR3	Page 4
--	--------------	--------




② Parking Lights switch


① Gateway module, located at right of steering column.

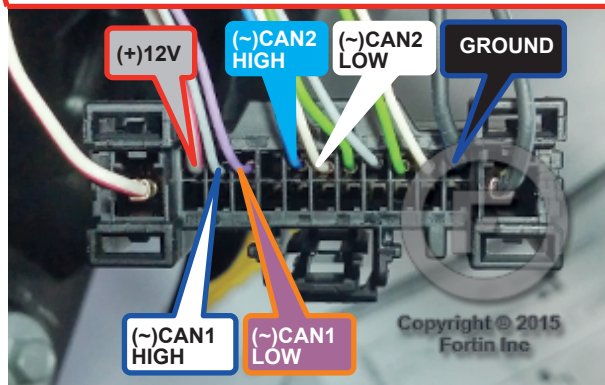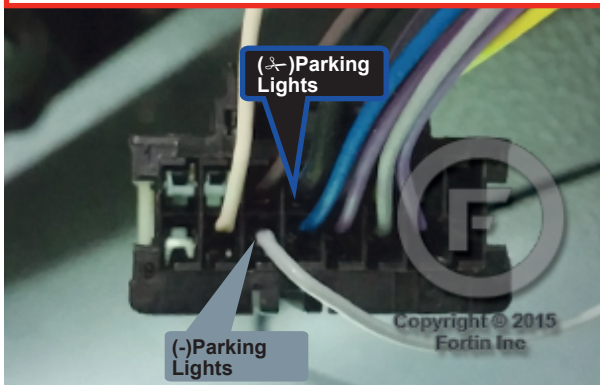

AUTOMATIC TRANSMISSION WIRING CONNECTION |

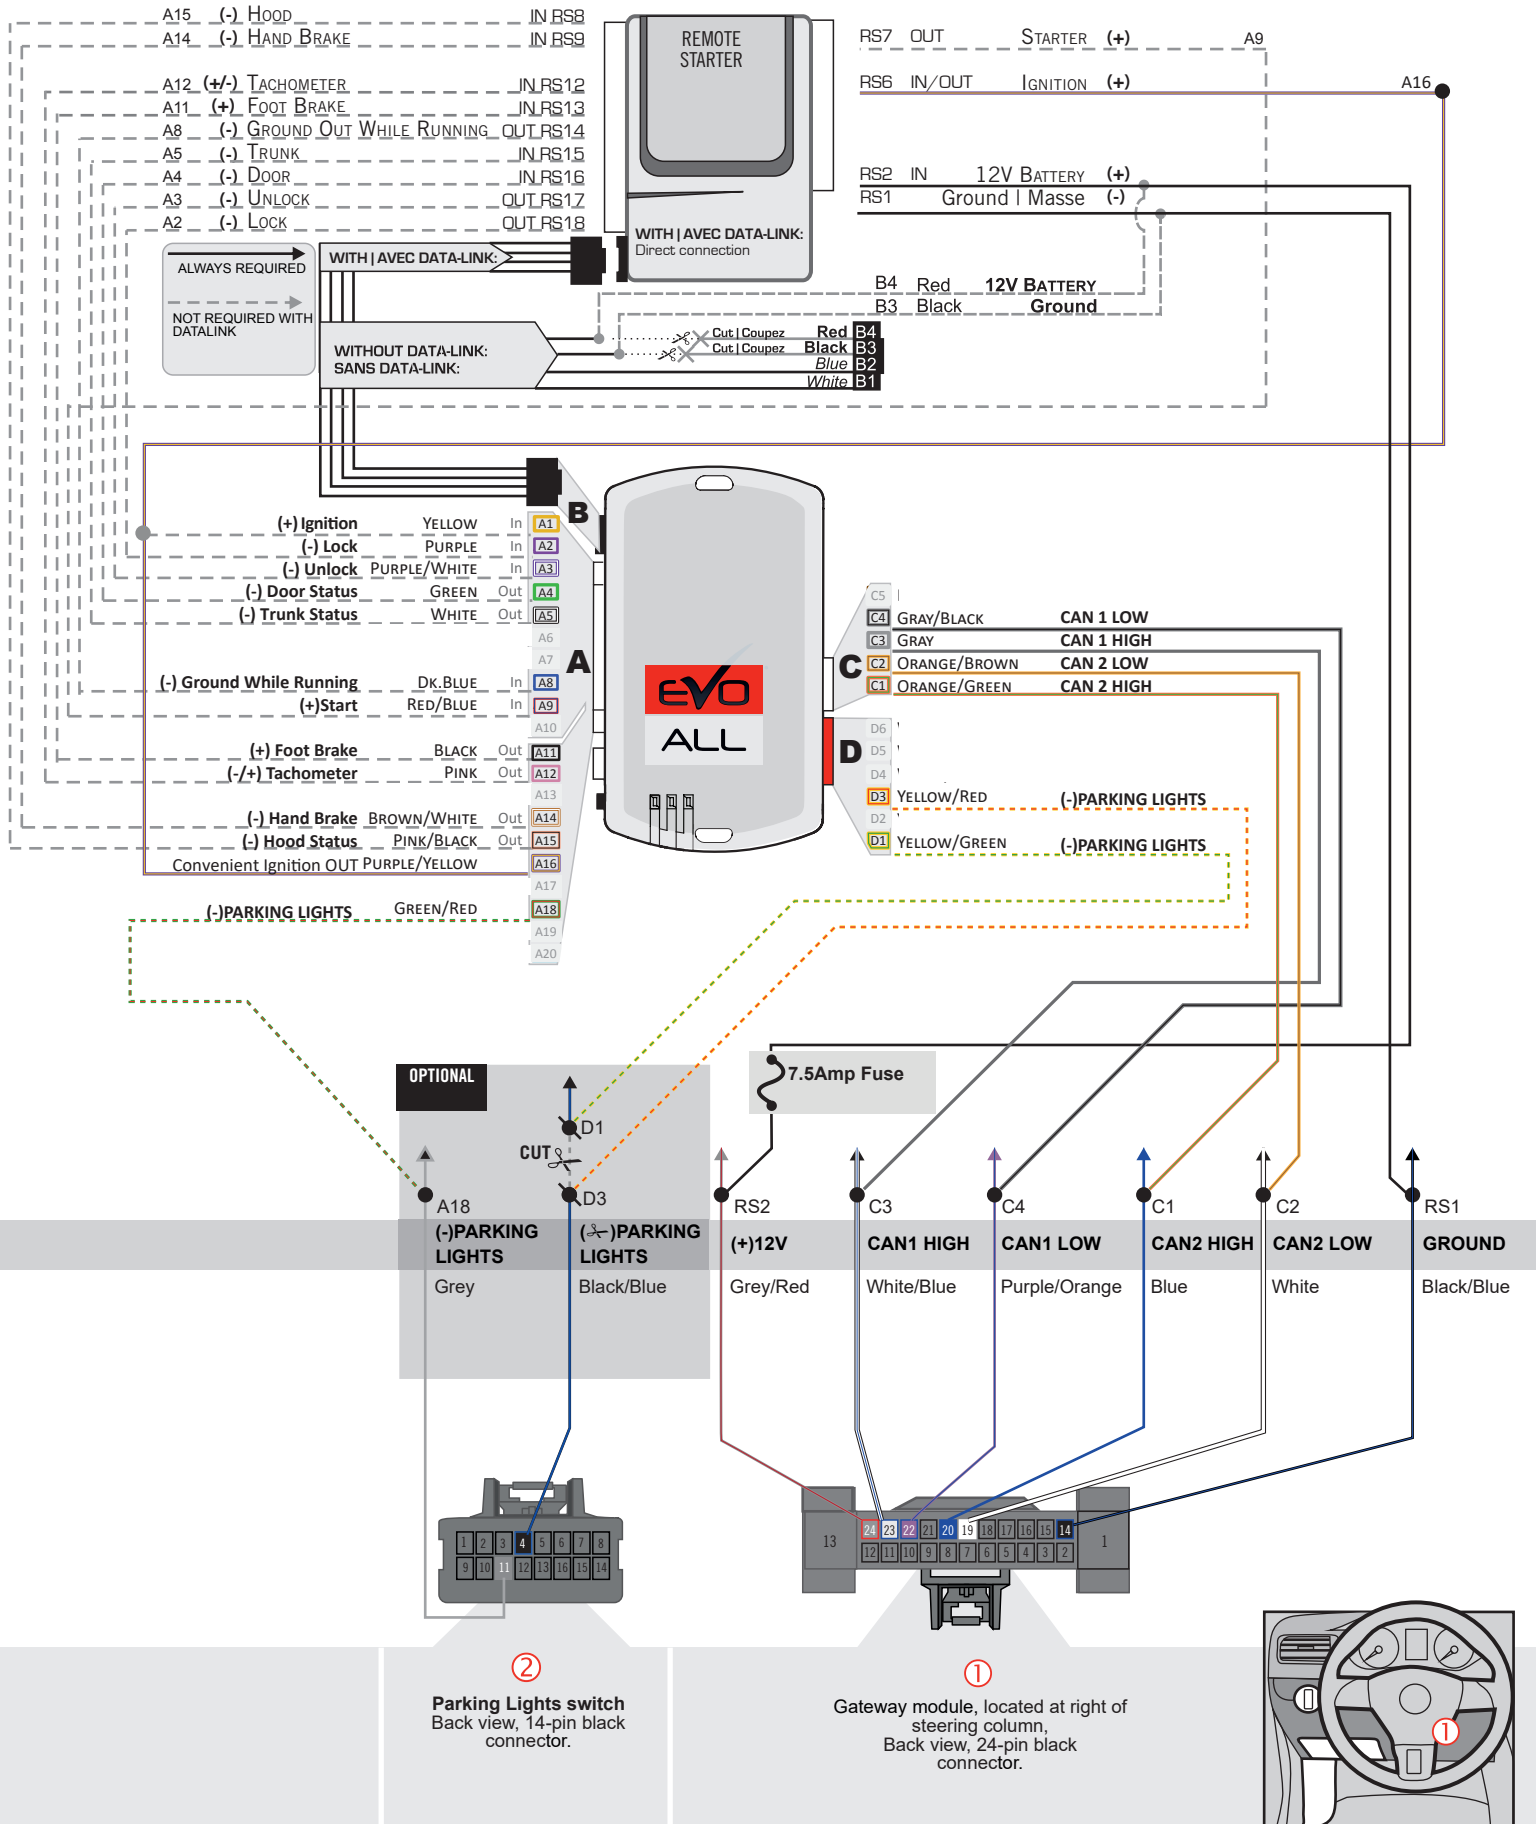

THAR-FOR3 | T-HARNESS - AUTOMATIC TRANSMISSION | T-HARNAIS - TRANSMISSION AUTOMATIQUE

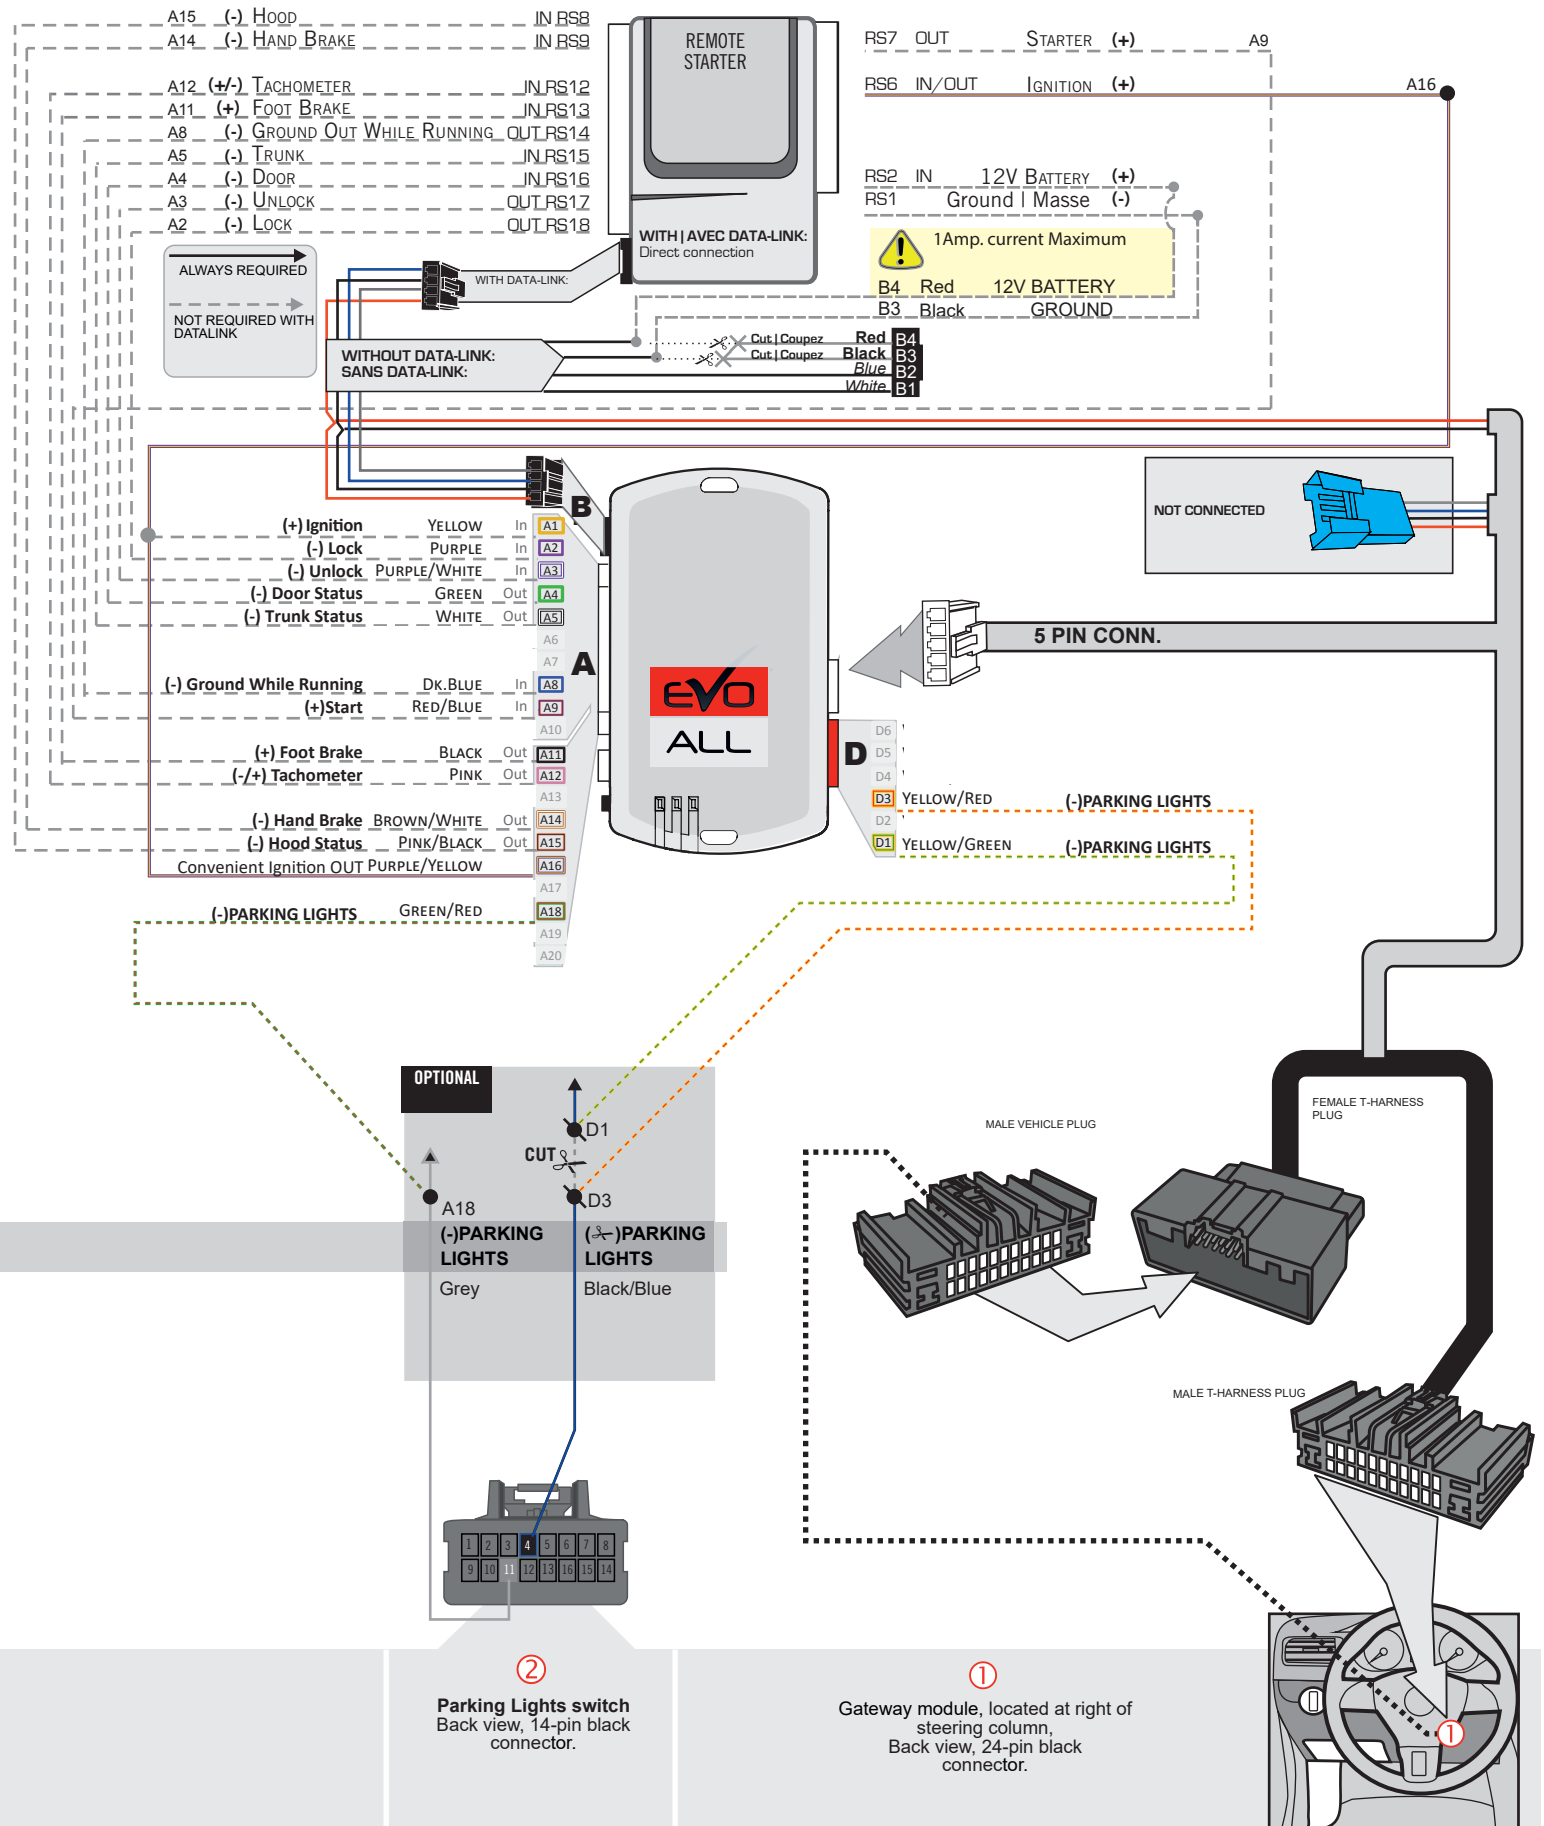




- Parts required (not included)**
- 1x **FLASH LINK UPDATER,**
 - 1x **FLASH LINK MANAGER**
SOFTWARE | PROGRAMME
 - 1x Microsoft Windows Computer with Internet connection

OR

- 1x **FLASH LINK MOBILE**
- 1x **FLASH LINK MOBILE APP**
- Smartphone Android or iOS with Internet connection
(Internet provider charges may apply)

BEFORE PROGRAMMING SET THE UNIT OPTIONS AND SAVE.


1

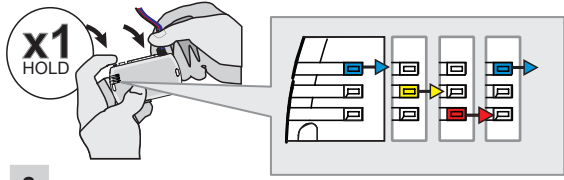

Press and hold the programming button:
Insert the 4-Pin (Data-Link) connector.

↳ The Blue, Red, Yellow and Blue & Red LEDs will alternatively illuminate.


2

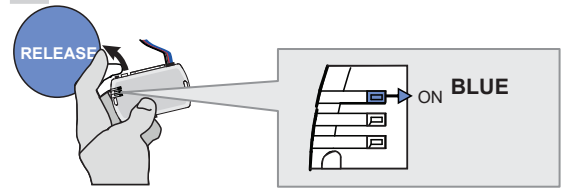

Release the programming button when the LED is BLUE.


If the LED is not solid BLUE disconnect the 4-Pin connector (Data-Link) and go back to step 1.

3

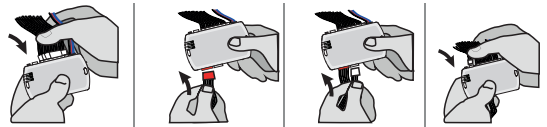

Insert the required remaining connectors.

4

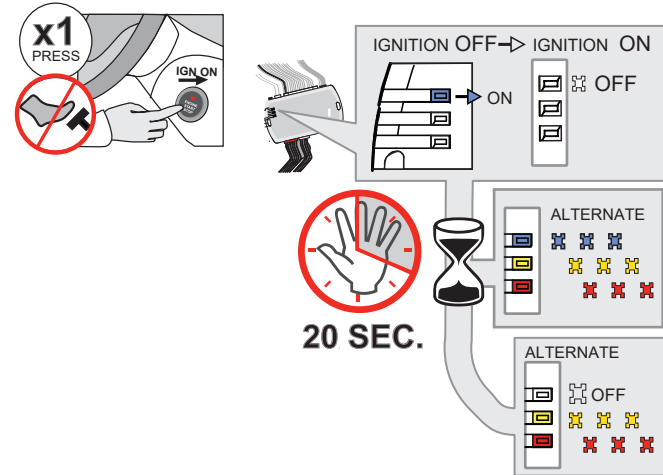

Do not press the brake pedal.
Press the Push-to-Start button once to turn on the ignition.

↳ The BLUE LED will turn OFF.


↳ The BLUE, YELLOW and RED LEDs will alternate.

Wait, at least 20 seconds, do not disconnect the modules or turn off the ignition.

↳ The RED and YELLOW LEDs will alternate.

Make sure that the DELs are flashing RED and YELLOW before continuing programming.

5

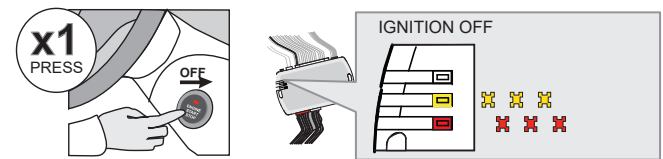

Press the Push-to-Start button once to turn off the ignition.

↳ The RED and YELLOW LEDs alternate.

KEY BYPASS PROGRAMMING PROCEDURE 2/2 |

6

Disconnect all the connectors and after the Data-Link (4-pins) connector.

7

Microsoft Windows Computer with Internet connection*

OR


Smartphone* (Internet provider charges may apply)

Use the tool: FLASH LINK UPDATER or FLASH LINK MOBILE to visit the DCryptor menu.

*Parts required (not included)

8

AFTER DCRYPTOR PROGRAMMING COMPLETED
Go back to the vehicle and **reconnect** the 4-Pin (Data-Link) connector and after, all the remaining connector.

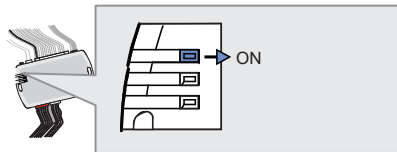

↳ The BLUE LED will turn ON.

9

Do not press the brake pedal. Press the Push-to-Start button once to turn on the ignition.

↳ The RED and YELLOW LEDs will turn ON.

Wait, at least 20 seconds, do not disconnect the modules or turn off the ignition.

↳ The BLUE LED will flash rapidly.



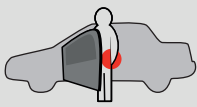

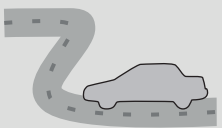
10

Press the Push-to-Start button once to turn off the ignition.

↳ The BLUE will turn OFF.

The module is now programmed.

REMOTE STARTER FUNCTIONALITY |

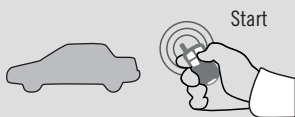 <p>Start</p> <p>All doors must be closed.</p> <p>Remote start the vehicle.</p>	 <p>UNLOCK</p> <p>Unlock the doors with either:</p> <ul style="list-style-type: none"> • The OEM remote • The remote-starter remote • Or the proximity remote 	 <p>Enter the vehicle with the SMART-KEY.</p>	 <p>DO NOT PRESS THE BRAKE PEDAL.</p> <p>Press and release the Push-to-Start button once.</p>	 <p>Press the brake pedal. The vehicle can now be put in to gear and driven.</p> <p>If the Smart-Key is not detected the vehicle will shut down.</p>
--	---	--	---	---


REGULAR & THAR-FOR3 INSTALLATION

ADDENDUM - SUGGESTED WIRING CONFIGURATION



Vehicle functions supported in this diagram (functional if equipped)

VEHICLE	YEARS	Immobilizer bypass	Lock	Unlock	Arm	Disarm	Heated Seats**	Rear Defrost**	RAP Disable	Parking Lights***	Tachometer	Door Status	Trunk Status	Hood Status*	Hand-Brake Status	Foot-Brake Status	Active OEM Remote Start
FORD Escape	Key 2020	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•

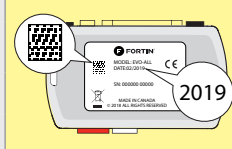

COMPATIBLE MODULE REQUIRED:

QR CODE ON THE LABEL
MANUFACTURED AFTER: 2019

FIRMWARE VERSION
58.[02]
MINIMUM

To add the firmware version and the options, use the **FLASH LINK UPDATER** or **FLASH LINK MOBILE** tool, sold separately.



Program bypass option:

UNIT OPTION

DESCRIPTION

C1

OEM Remote status (Lock/Unlock) monitoring

IF THE VEHICLE IS NOT EQUIPPED WITH FUNCTIONAL HOOD PIN:

A11

OFF

Hood trigger (Output Status).

NOTES

The vehicles OEM remote and SmartKey are still operable during remote start.

**Heated seats The heated seats and rear defrost activate automatically when it cold.

***Parking Lights The parking Lights at remote start only.



The vehicle must be equipped with the OEM remote with the door locks.

MANDATORY INSTALL

*HOOD PIN



HOOD STATUS: THE HOOD PIN SWITCH MUST BE INSTALLED IF THE VEHICLE CAN BE REMOTE STARTED WITH THE HOOD OPEN, SET FUNCTION A11 TO OFF.

A11

OFF

Notice: the installation of safety elements are mandatory. The hood pin is an essential security element and must be installed.

THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.

DESCRIPTION

	Parts required (Not included)	PAGE
--	-------------------------------	------

WIRE TO WIRE DIAGRAM


AUTOMATIC TRANSMISSION	1x 7.5 Amp. fuse	Page 3
------------------------	------------------	--------

THARNES DIAGRAM


THARNES THAR-FOR3 AUTOMATIC TRANSMISSION	1x THAR-FOR3	Page 4
--	--------------	--------




① Gateway module, Behind OBD-II connector

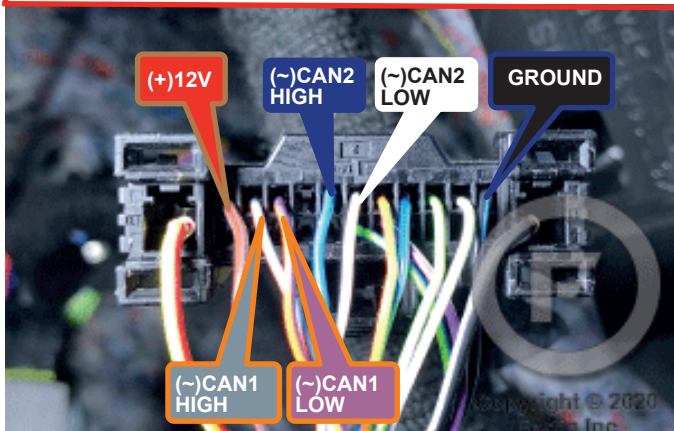

AUTOMATIC TRANSMISSION WIRING CONNECTION |


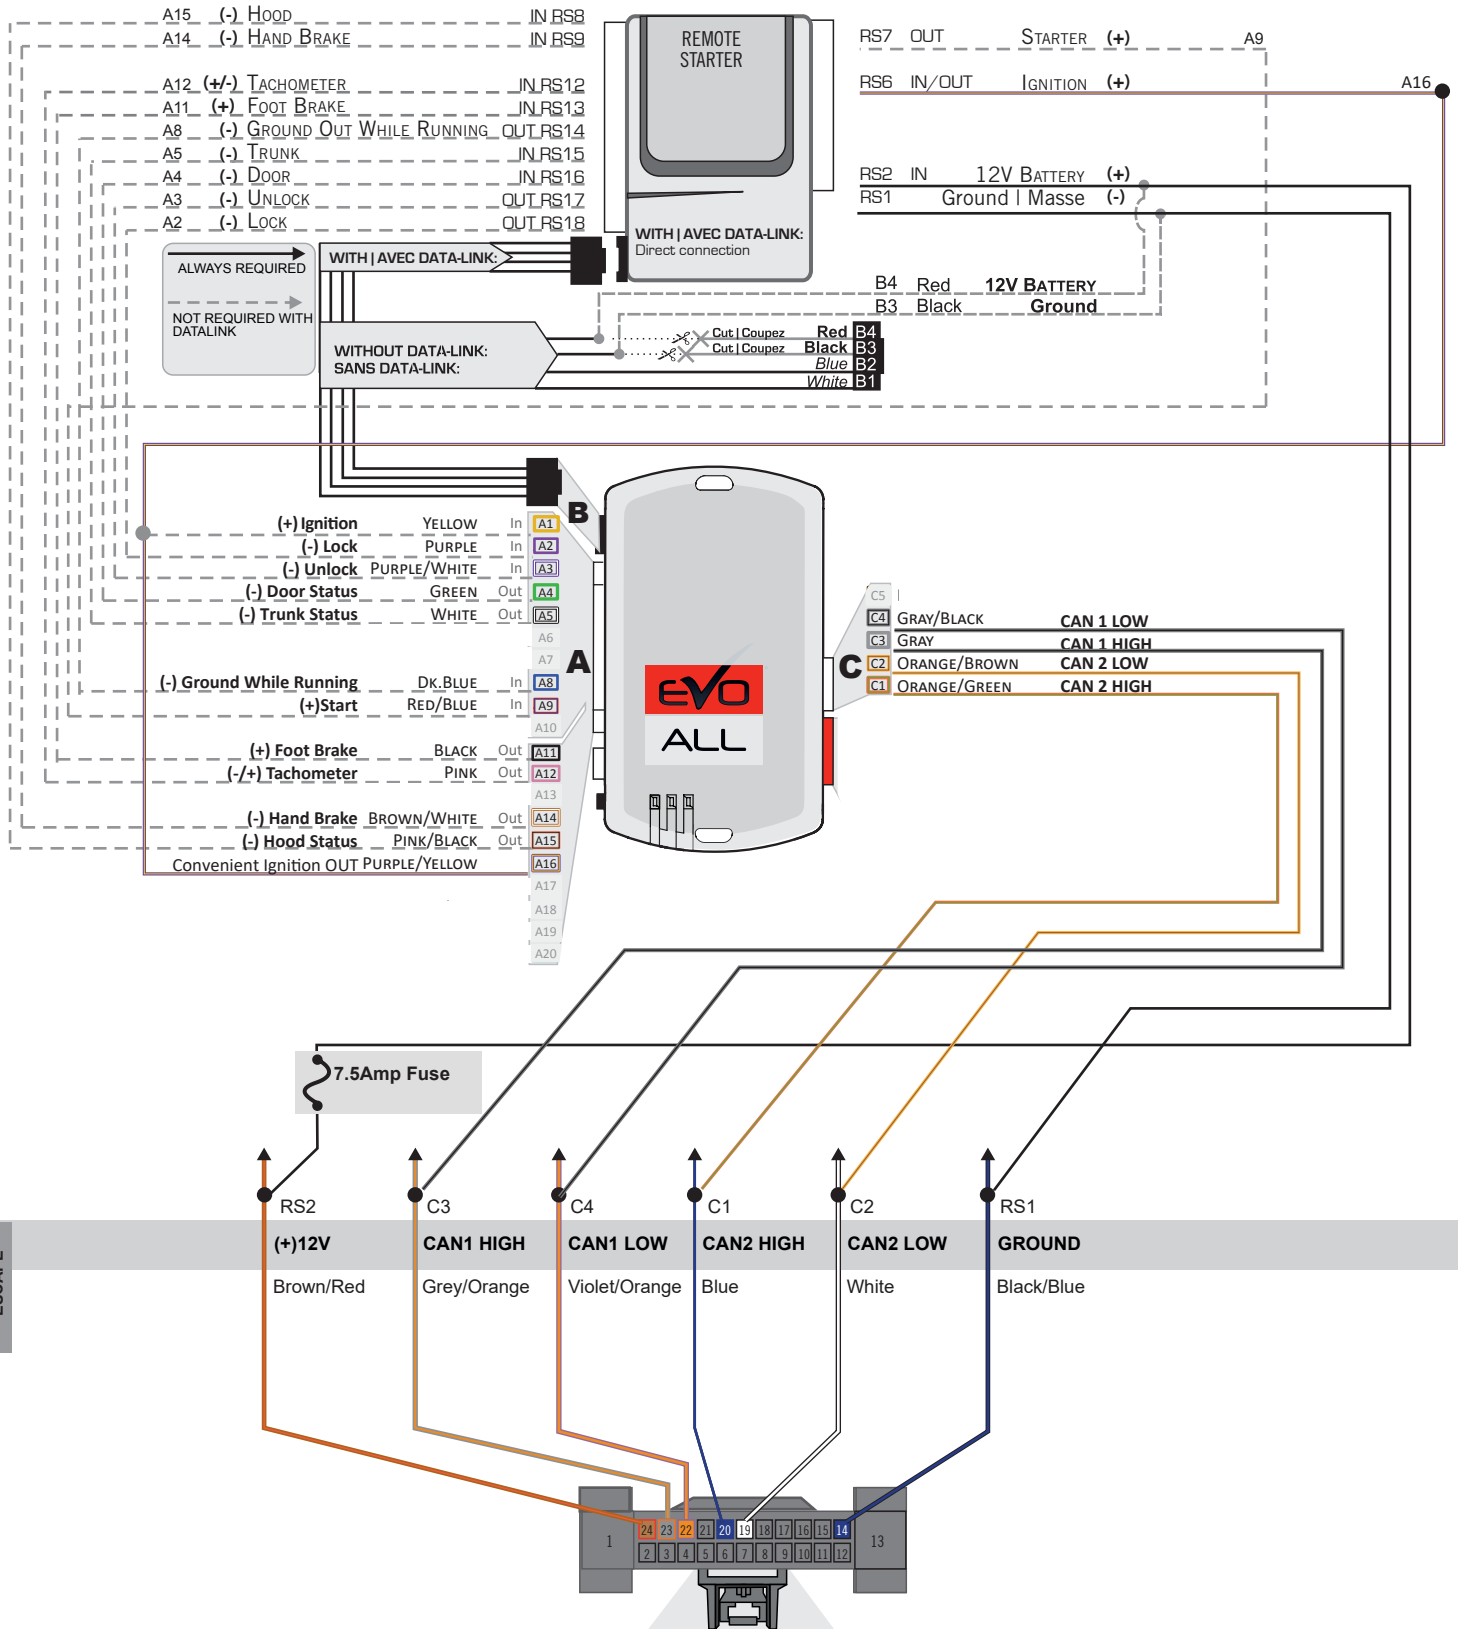


① Gateway module, Connector Behind OBD-II connector - located at dash board driver's side
 Back view, 24-pin black connector.

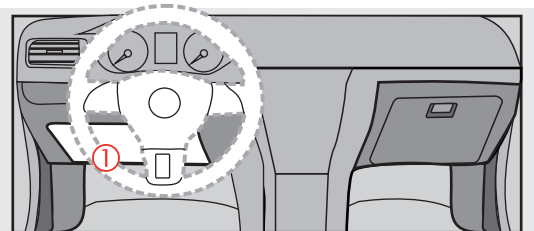


ESCAPE

THAR-FOR3 | T-HARNESS - AUTOMATIC TRANSMISSION |

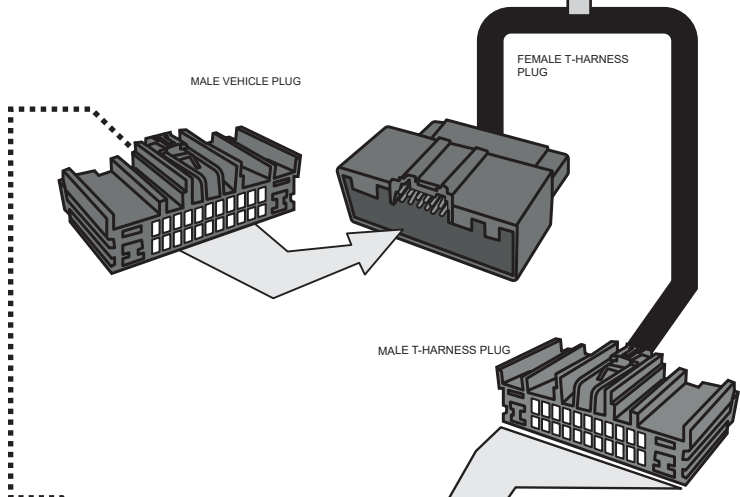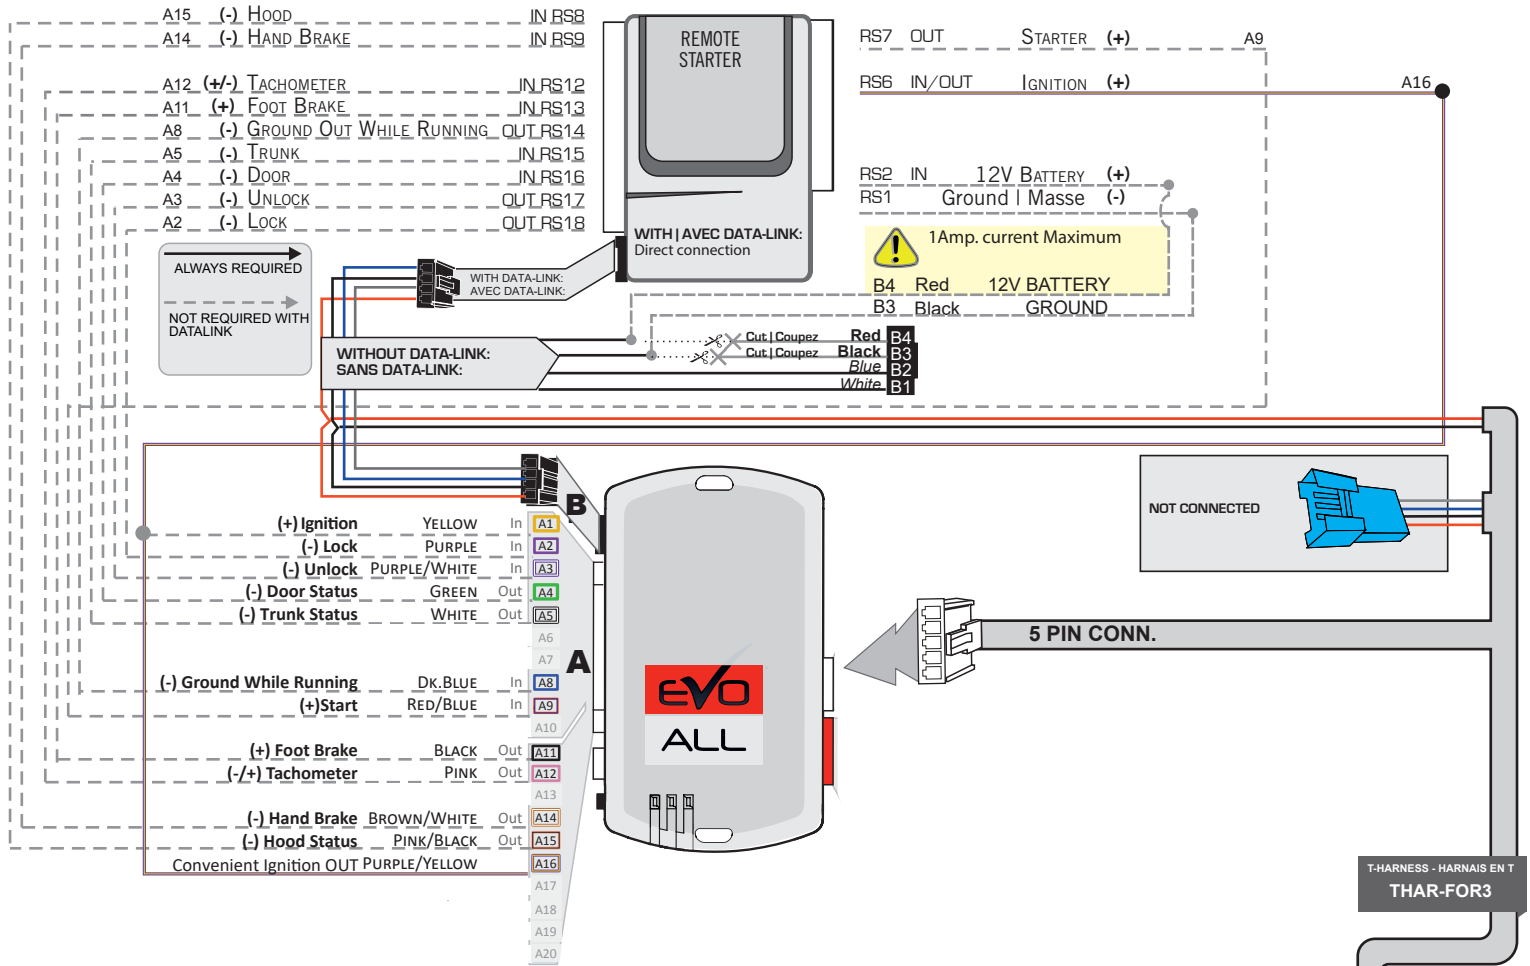

① Gateway module, Connector Behind OBD-II connector - located at dash board driver's side Back view, 24-pin black connector.

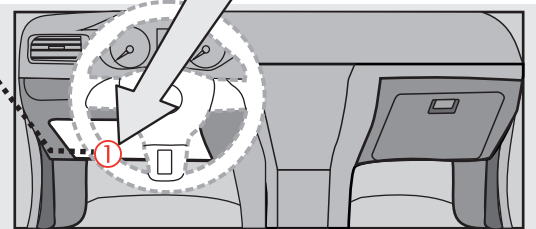



Parts required (not included)


- 1x FLASH LINK UPDATER, SOFTWARE | PROGRAMME
- 1x FLASH LINK MANAGER
- 1x Microsoft Windows Computer with Internet connection

OR

- 1x FLASH LINK MOBILE
- 1x FLASH LINK MOBILE APP
- Smartphone Android or iOS with Internet connection (Internet provider charges may apply)

BEFORE PROGRAMMING SET THE UNIT OPTIONS AND SAVE.


1

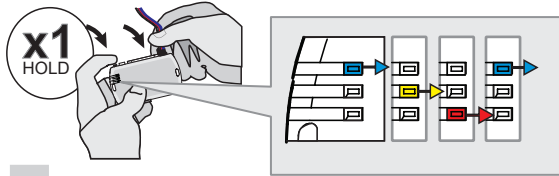

Press and hold the programming button:
Insert the 4-Pin (Data-Link) connector.


↳ The Blue, Red, Yellow and Blue & Red LEDs will alternatively illuminate.

2

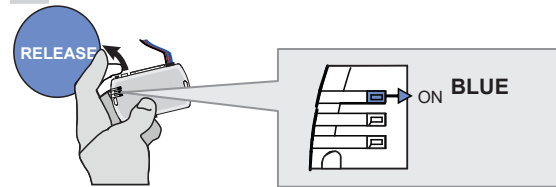


Release the programming button when the LED is BLUE.

 If the LED is not solid BLUE disconnect the 4-Pin connector (Data-Link) and go back to step 1.




3

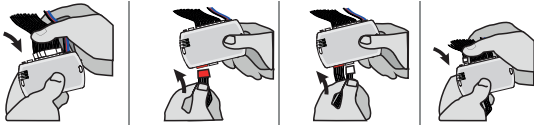

Insert the required remaining connectors.

4

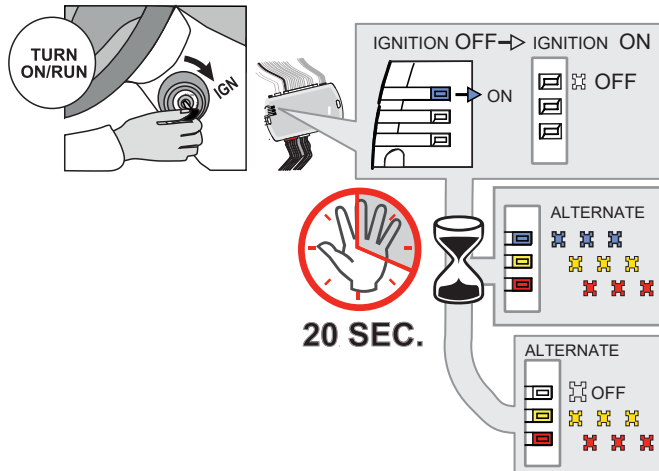

Turn the key to the Ignition ON/RUN position.

 
↳ The BLUE LED will turn OFF.

↳ The BLUE, YELLOW and RED LEDs will alternate.


Wait, at least 20 seconds, do not disconnect the modules or turn off the ignition.

↳ The RED and YELLOW LEDs will alternate.

Make sure that the DELs are flashing RED and YELLOW before continuing programming.



5

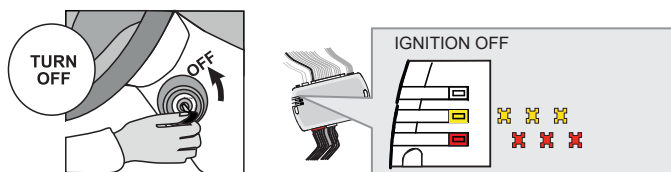


Turn the key to the OFF position.

↳ The RED and YELLOW LEDs alternate.


KEY BYPASS PROGRAMMING PROCEDURE 2/2 |

6

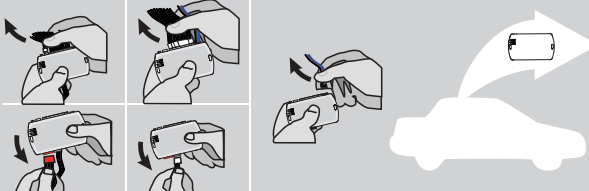

Disconnect all the connectors and after the Data-Link (4-pins) connector.

7



Microsoft Windows Computer with Internet connection*

FLASH LINK UPDATER* **FLASH LINK MANAGER***
SOFTWARE | PROGRAMME

OR

Smartphone* (Internet provider charges may apply)


FLASH LINK MOBILE*

VEHICLE'S OBDII CONNECTOR

Use the tool: FLASH LINK UPDATER or FLASH LINK MOBILE to visit the DCryptor menu.

*Parts required (not included)

8

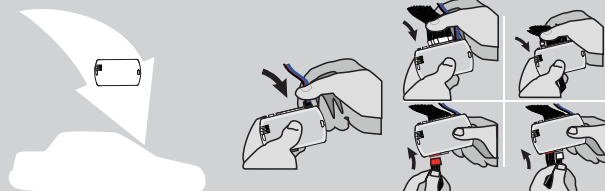


AFTER DCRYPTOR PROGRAMMING COMPLETED
Go back to the vehicle and reconnect the 4-Pin (Data-Link) connector and after, all the remaining connector.



↳ The BLUE LED will turn ON.

9

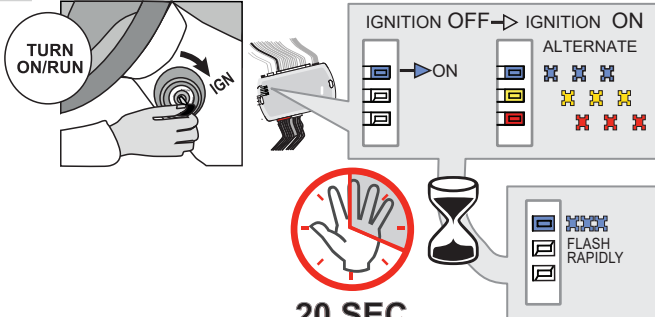

TURN ON/RUN

IGNITION OFF → IGNITION ON

ALTERNATE

↳ The RED and YELLOW LEDs will turn ON.


20 SEC.

FLASH RAPIDLY

Wait, at least 20 seconds, do not disconnect the modules or turn off the ignition.

↳ The BLUE LED will flash rapidly.


10

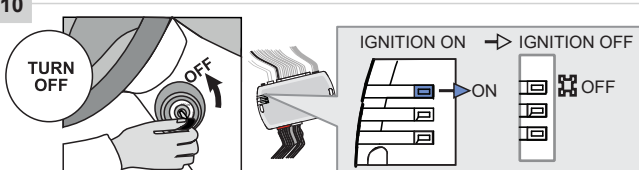

TURN OFF

IGNITION ON → IGNITION OFF

↳ The BLUE will turn OFF.



The module is now programmed.

REMOTE STARTER FUNCTIONALITY |



All doors must be closed.



Remote start the vehicle.



Unlock the doors with the remote-starter remote or the OEM remote.



Insert and Turn the key to the Ignition ON/RUN position.



Press the brake pedal.



The vehicle can now be put in to gear and driven.

REGULAR & THAR-FOR3 INSTALLATION


ADDENDUM - SUGGESTED WIRING CONFIGURATION



ONLY COMPATIBLE WITH AUTOMATIC TRANSMISSION VEHICLES.

Vehicle functions supported in this diagram (functional if equipped)

VEHICLE	YEARS	Vehicle functions supported in this diagram (functional if equipped)															
		Immobilizer bypass	Lock	Unlock	Arm	Disarm	Heated Seats**	Rear Defrost**	RAP Disable	Parking Lights***	Tachometer	Door Status	Trunk Status	Hood Status*	Hand-Brake Status	Foot-Brake Status	Active OEM Remote Start
FORD Escape	Push-to-Start 2020	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•

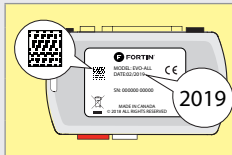

COMPATIBLE MODULE REQUIRED:

QR CODE ON THE LABEL
MANUFACTURED AFTER: 2019

FIRMWARE VERSION
58.[02]
MINIMUM

To add the firmware version and the options, use the **FLASH LINK UPDATER** or **FLASH LINK MOBILE** tool, sold separately.



Program bypass option:

UNIT OPTION	DESCRIPTION
C1	OEM Remote status (Lock/Unlock) monitoring
D6	Push-to-Start
A11	<div style="display: flex; align-items: center;"> <div style="background-color: red; color: white; padding: 2px 5px; margin-right: 5px;">OFF</div> Hood trigger (Output Status). </div>

IF THE VEHICLE IS NOT EQUIPPED WITH FUNCTIONAL HOOD PIN:

NOTES

The vehicles OEM remote and SmartKey are still operable during remote start.

**Heated seats The heated seats and rear defrost activate automatically when it cold.
**Rear Defrost

***Parking Lights The parking Lights at remote start only.

MANDATORY INSTALL

*HOOD PIN



HOOD STATUS: THE HOOD PIN SWITCH MUST BE INSTALLED IF THE VEHICLE CAN BE REMOTE STARTED WITH THE HOOD OPEN, SET FUNCTION A11 TO OFF.

A11



Notice: the installation of safety elements are mandatory. The hood pin is an essential security element and must be installed.

THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.

DESCRIPTION | DESCRIPTION

	Parts required (Not included)	PAGE
--	-------------------------------	------

WIRE TO WIRE DIAGRAM


AUTOMATIC TRANSMISSION	1x 7.5 Amp. fuse	Page 3
------------------------	------------------	--------

THARNES DIAGRAM


THARNES THAR-FOR3 AUTOMATIC TRANSMISSION	1x THAR-FOR3	Page 4
--	--------------	--------




① Gateway module, Behind OBD-II connector

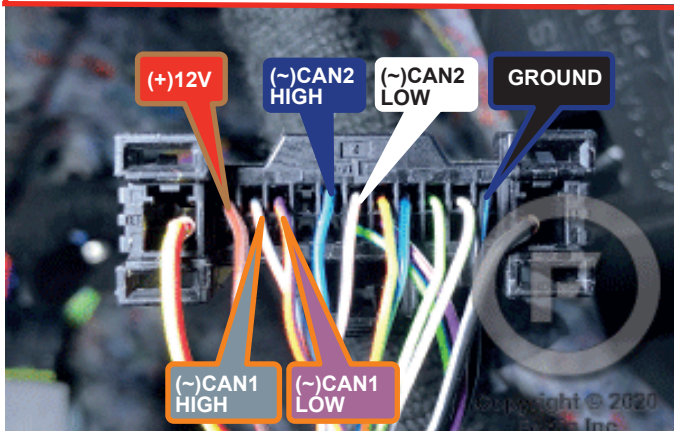


AUTOMATIC TRANSMISSION WIRING CONNECTION |

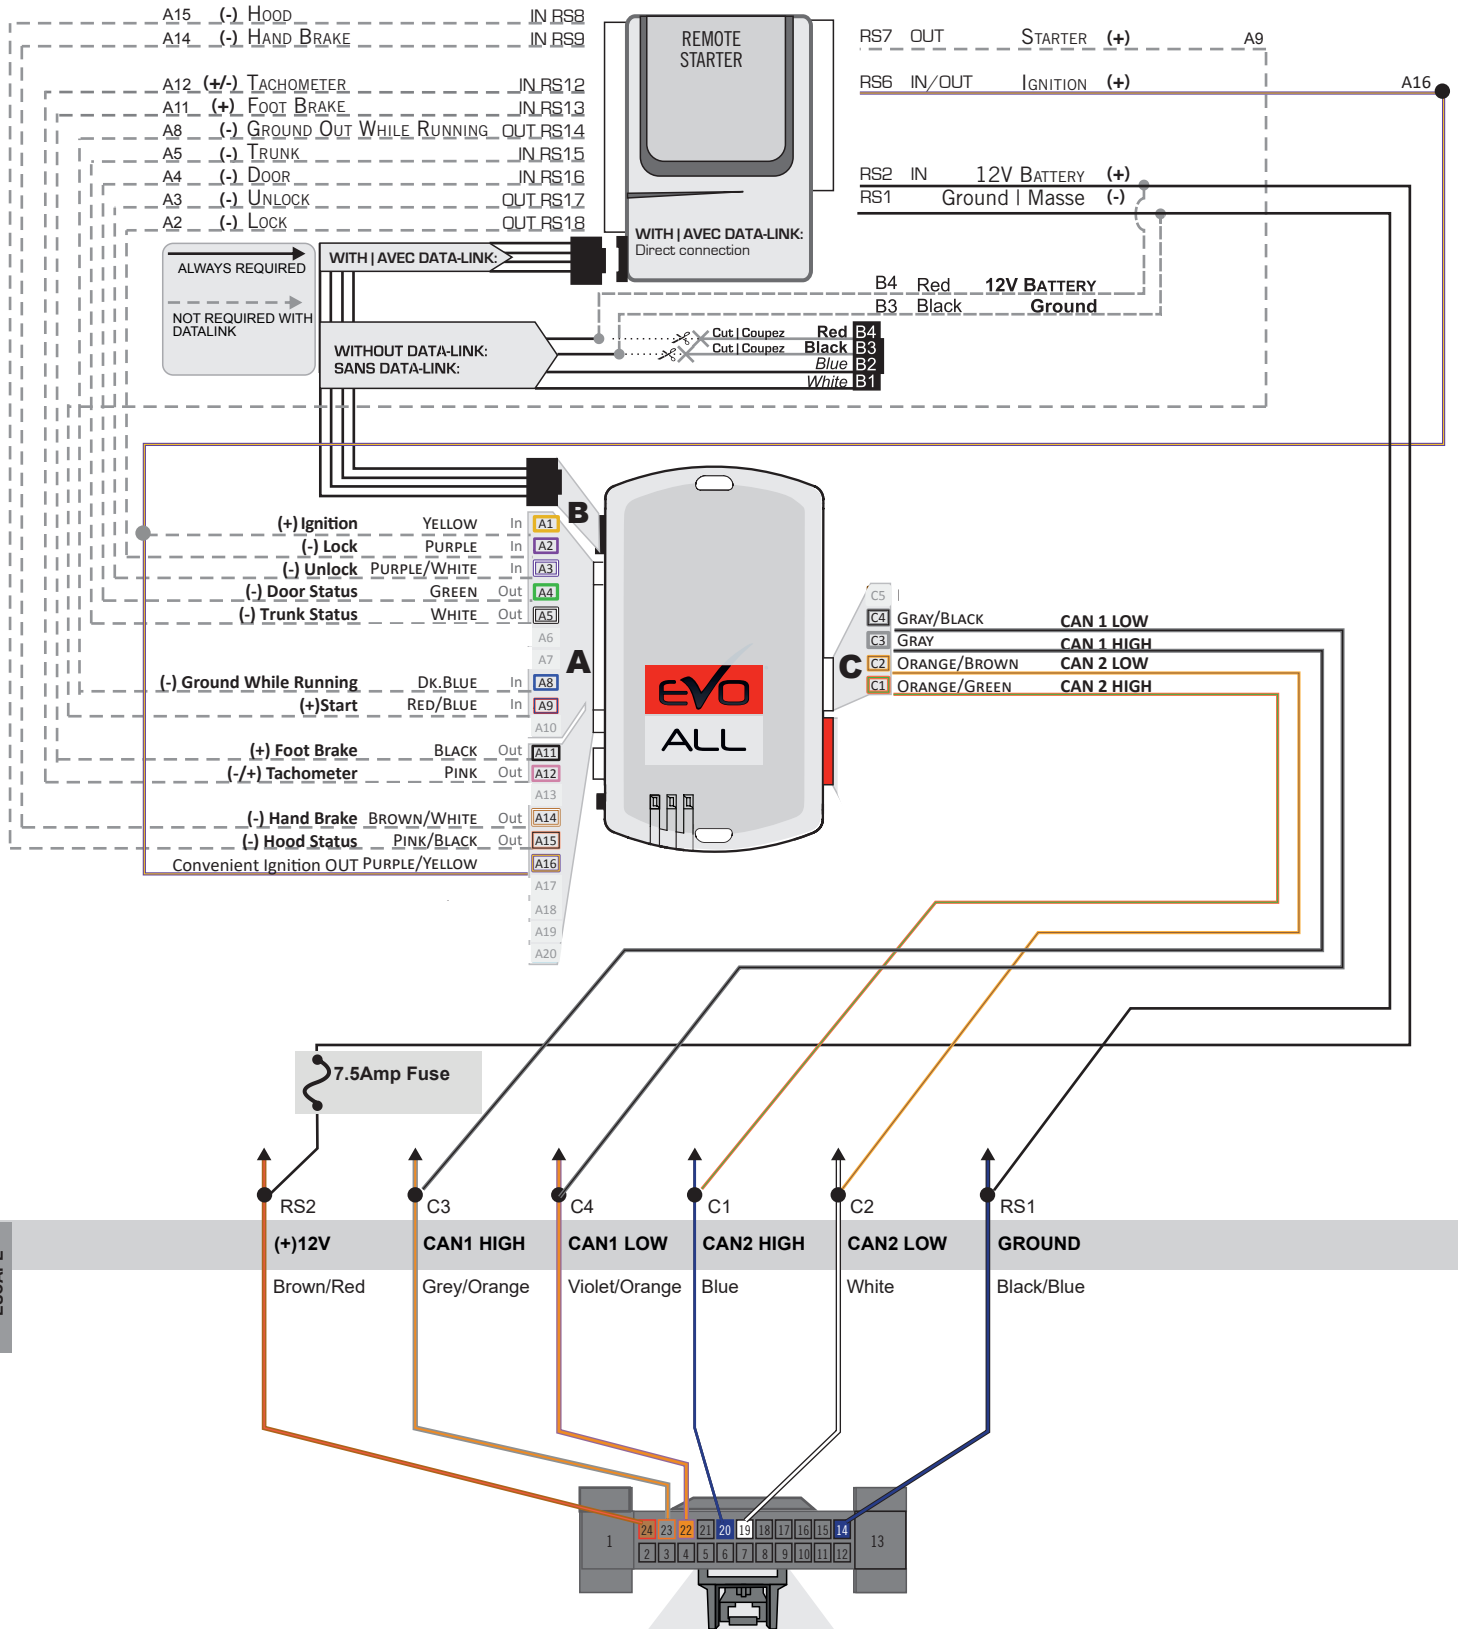


① Gateway module, Connector Behind OBD-II connector - located at dash board driver's side
Back view, 24-pin black connector.

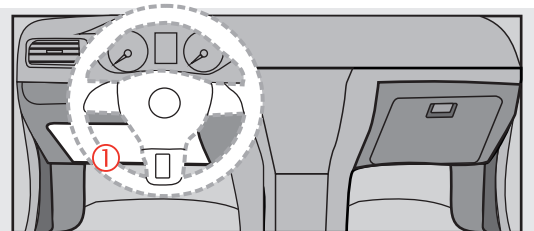


THAR-FOR3 | T-HARNESS - AUTOMATIC TRANSMISSION |

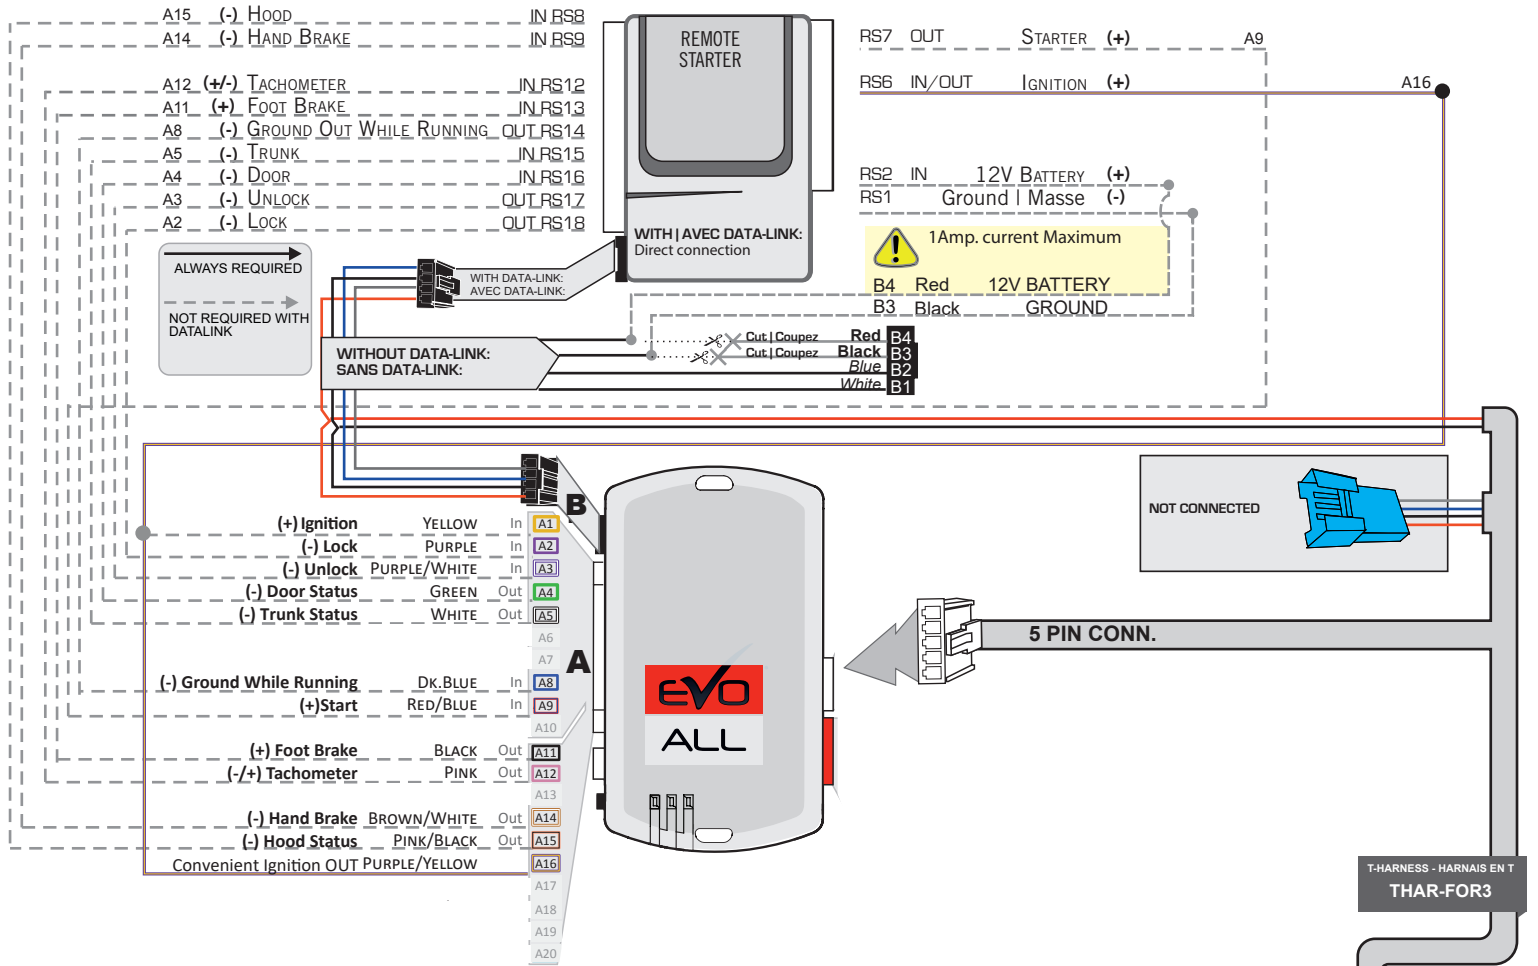

ESCAPE

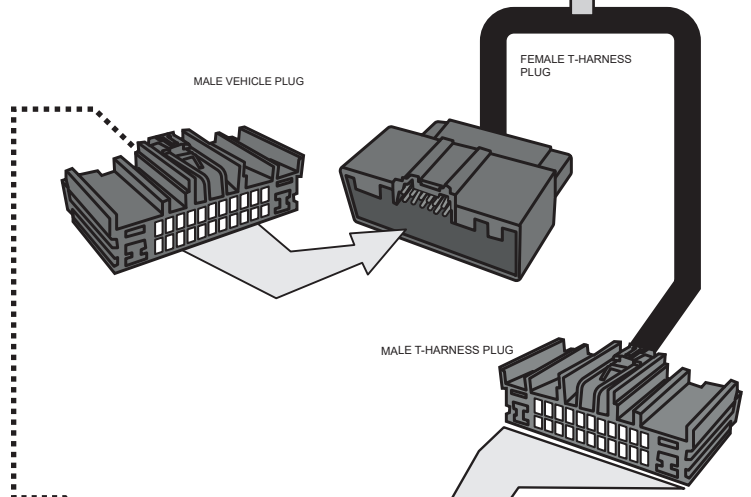

① Gateway module, Connector Behind OBD-II connector - located at dash board driver's side Back view, 24-pin black connector.

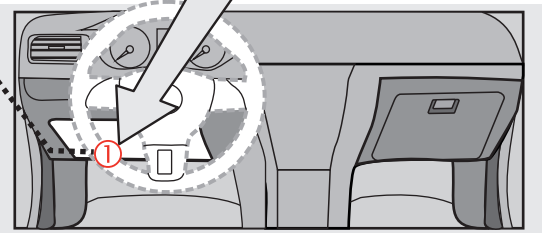



Parts required (not included)


- 1x FLASH LINK UPDATER, SOFTWARE | PROGRAMME
- 1x FLASH LINK MANAGER
- 1x Microsoft Windows Computer with Internet connection

OR

- 1x FLASH LINK MOBILE
- 1x FLASH LINK MOBILE APP
- Smartphone Android or iOS with Internet connection (Internet provider charges may apply)

BEFORE PROGRAMMING SET THE UNIT OPTIONS AND SAVE.


1

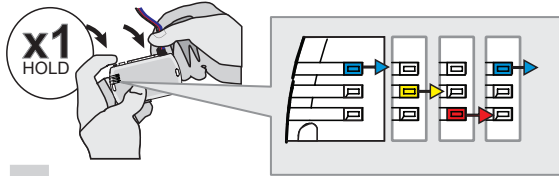

Press and hold the programming button:
Insert the 4-Pin (Data-Link) connector.


↳ The Blue, Red, Yellow and Blue & Red LEDs will alternatively illuminate.

2

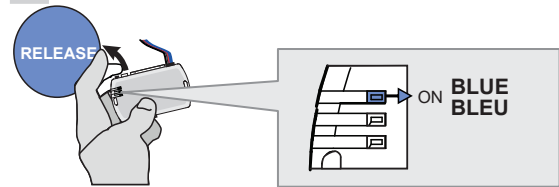


Release the programming button when the LED is BLUE.

 If the LED is not solid BLUE disconnect the 4-Pin connector (Data-Link) and go back to step 1.




3

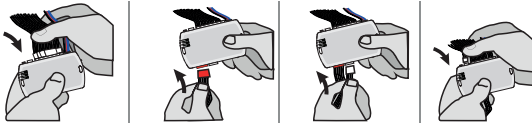

Insert the required remaining connectors.

4

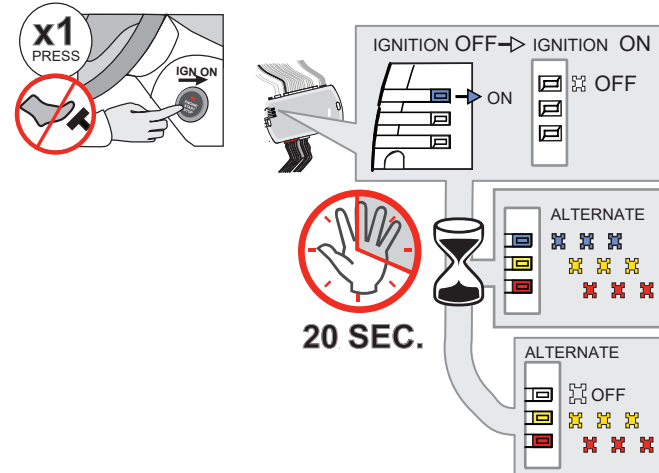

Do not press the brake pedal.
Press the Push-to-Start button once to turn on the ignition.

↳ The BLUE LED will turn OFF.

↳ The BLUE, YELLOW and RED LEDs will alternate.


Wait, at least 20 seconds, do not disconnect the modules or turn off the ignition.

↳ The RED and YELLOW LEDs will alternate.

Make sure that the DELs are flashing RED and YELLOW before continuing programming.



5

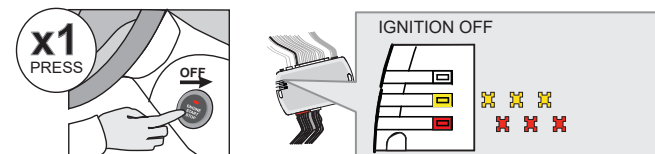

Press the Push-to-Start button once to turn off the ignition.

↳ The RED and YELLOW LEDs alternate.

KEY BYPASS PROGRAMMING PROCEDURE 2/2 |

6

Disconnect all the connectors and after the Data-Link (4-pins) connector.

7

Microsoft Windows Computer with Internet connection*

OR


Smartphone* (Internet provider charges may apply)

Use the tool:
FLASH LINK UPDATER or
FLASH LINK MOBILE
 to visit the DCryptor menu.

*Parts required (not included)

8

AFTER DCRYPTOR PROGRAMMING COMPLETED
Go back to the vehicle and reconnect the 4-Pin (Data-Link) connector and after, all the remaining connector.

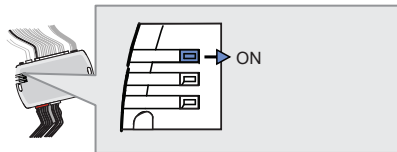

↳ The BLUE LED will turn ON.

9

x1 PRESS

IGNITION OFF → IGNITION ON

ALTERNATE

20 SEC.

FLASH RAPIDLY

Do not press the brake pedal.
Press the Push-to-Start button once to turn on the ignition.

↳ The RED and YELLOW LEDs will turn ON.

Wait, at least 20 seconds, do not disconnect the modules or turn off the ignition.

↳ The BLUE LED will flash rapidly.

10

x1 PRESS

IGNITION ON → IGNITION OFF



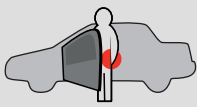

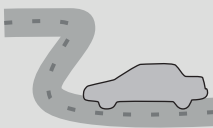
Press the Push-to-Start button once to turn off the ignition.

↳ The BLUE will turn OFF.



The module is now programmed.

REMOTE STARTER FUNCTIONALITY |

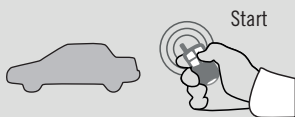 <p>Start</p> <p>All doors must be closed.</p> <p>Remote start the vehicle.</p>	 <p>UNLOCK</p> <p>Unlock the doors with either:</p> <ul style="list-style-type: none"> • The OEM remote • The remote-starter remote • Or the proximity remote 	 <p>Enter the vehicle with the SMART-KEY.</p>	 <p>DO NOT PRESS THE BRAKE PEDAL.</p> <p>Press and release the Push-to-Start button once.</p>	 <p>Press the brake pedal. The vehicle can now be put in to gear and driven.</p> <p>If the Smart-Key is not detected the vehicle will shut down.</p>
--	---	--	---	---



REGULAR & THAR-FOR3 INSTALLATION

ADDENDUM - SUGGESTED WIRING CONFIGURATION




ONLY COMPATIBLE WITH AUTOMATIC TRANSMISSION VEHICLES.



Vehicle functions supported in this diagram (functional if equipped)

VEHICLE	YEARS	Immobilizer bypass	T-Harness available (sold separately)	Lock	Unlock	Arm	Disarm	Heated Seats**	Rear Defrost**	RAP Disable	Parking Lights***	Tachometer	Door Status	Trunk Status	Hood Status*	Hand-Brake Status	Foot-Brake Status	Active OEM Remote Start
FORD																		
Expedition	2018-2020	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•

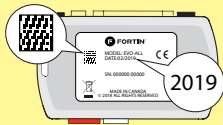

COMPATIBLE MODULE REQUIRED:

QR CODE ON THE LABEL
MANUFACTURED AFTER: 2019

FIRMWARE VERSION

58.[02]
MINIMUM

To add the firmware version and the options, use the **FLASH LINK UPDATER** or **FLASH LINK MOBILE** tool, sold separately.

UNIT OPTION	DESCRIPTION
C1	OEM Remote status (Lock/Unlock) monitoring
A11 OFF	Hood trigger (Output Status).

NOTES

The vehicles OEM remote and SmartKey are still operable during remote start.

**Heated seats The heated seats and rear defrost activate automatically when it cold.

***Parking Lights The parking Lights at remote start only.



The vehicle must be equipped with the OEM remote with the door locks. avec le verrouillage des portes.

MANDATORY INSTALL

*HOOD PIN



HOOD STATUS: THE HOOD PIN SWITCH MUST BE INSTALLED IF THE VEHICLE CAN BE REMOTE STARTED WITH THE HOOD OPEN, SET FUNCTION A11 TO OFF.

A11

OFF

Notice: the installation of safety elements are mandatory. The hood pin is an essential security element and must be installed.

THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.

DESCRIPTION |

	Parts required (Not included)	PAGE
--	-------------------------------	------

WIRE TO WIRE DIAGRAM

AUTOMATIC TRANSMISSION	1x 7.5 Amp. fuse	Page 3
------------------------	------------------	--------

THARNES DIAGRAM


THARNES THAR-FOR3 AUTOMATIC TRANSMISSION	1x THAR-FOR3	Page 4
--	--------------	--------

EXPÉDITION




②

Parking Lights switch

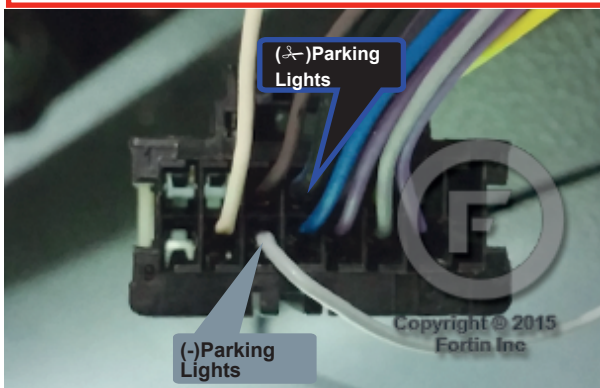


①


Gateway module, Behind OBD-II connector

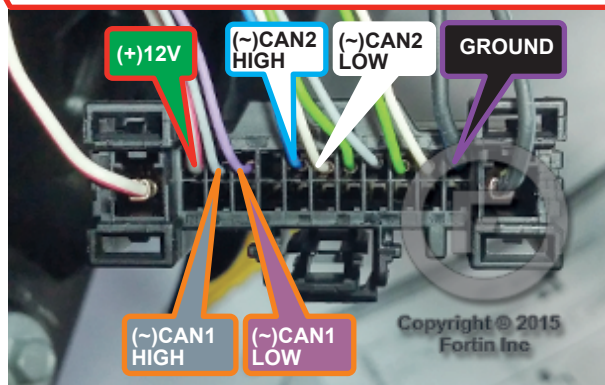

AUTOMATIC TRANSMISSION WIRING CONNECTION |

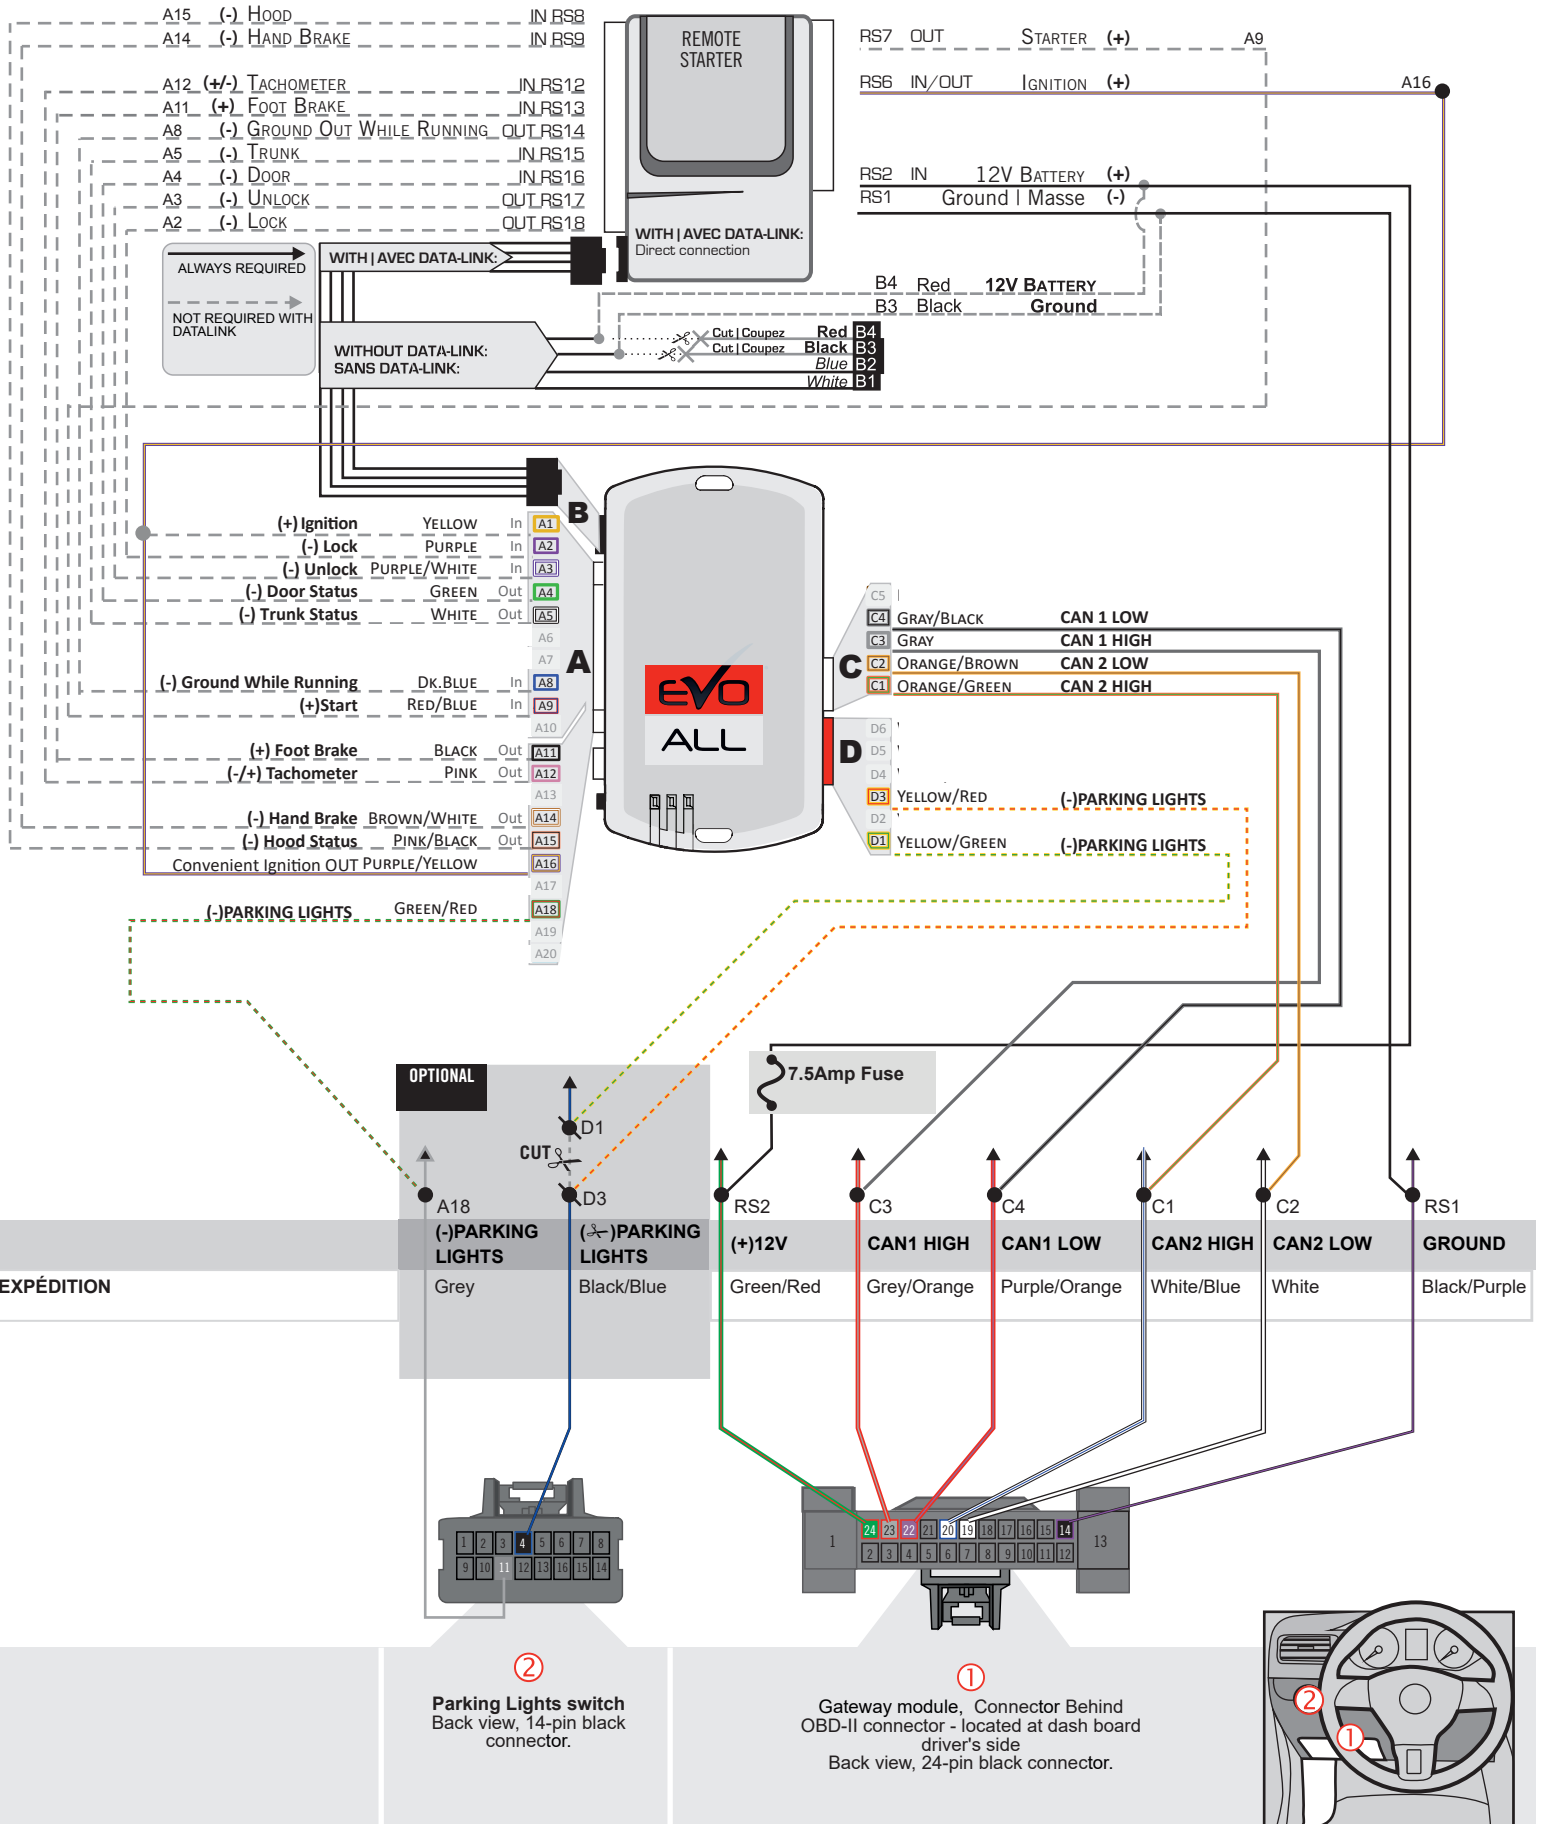

THAR-FOR3 | T-HARNESS - AUTOMATIC TRANSMISSION |

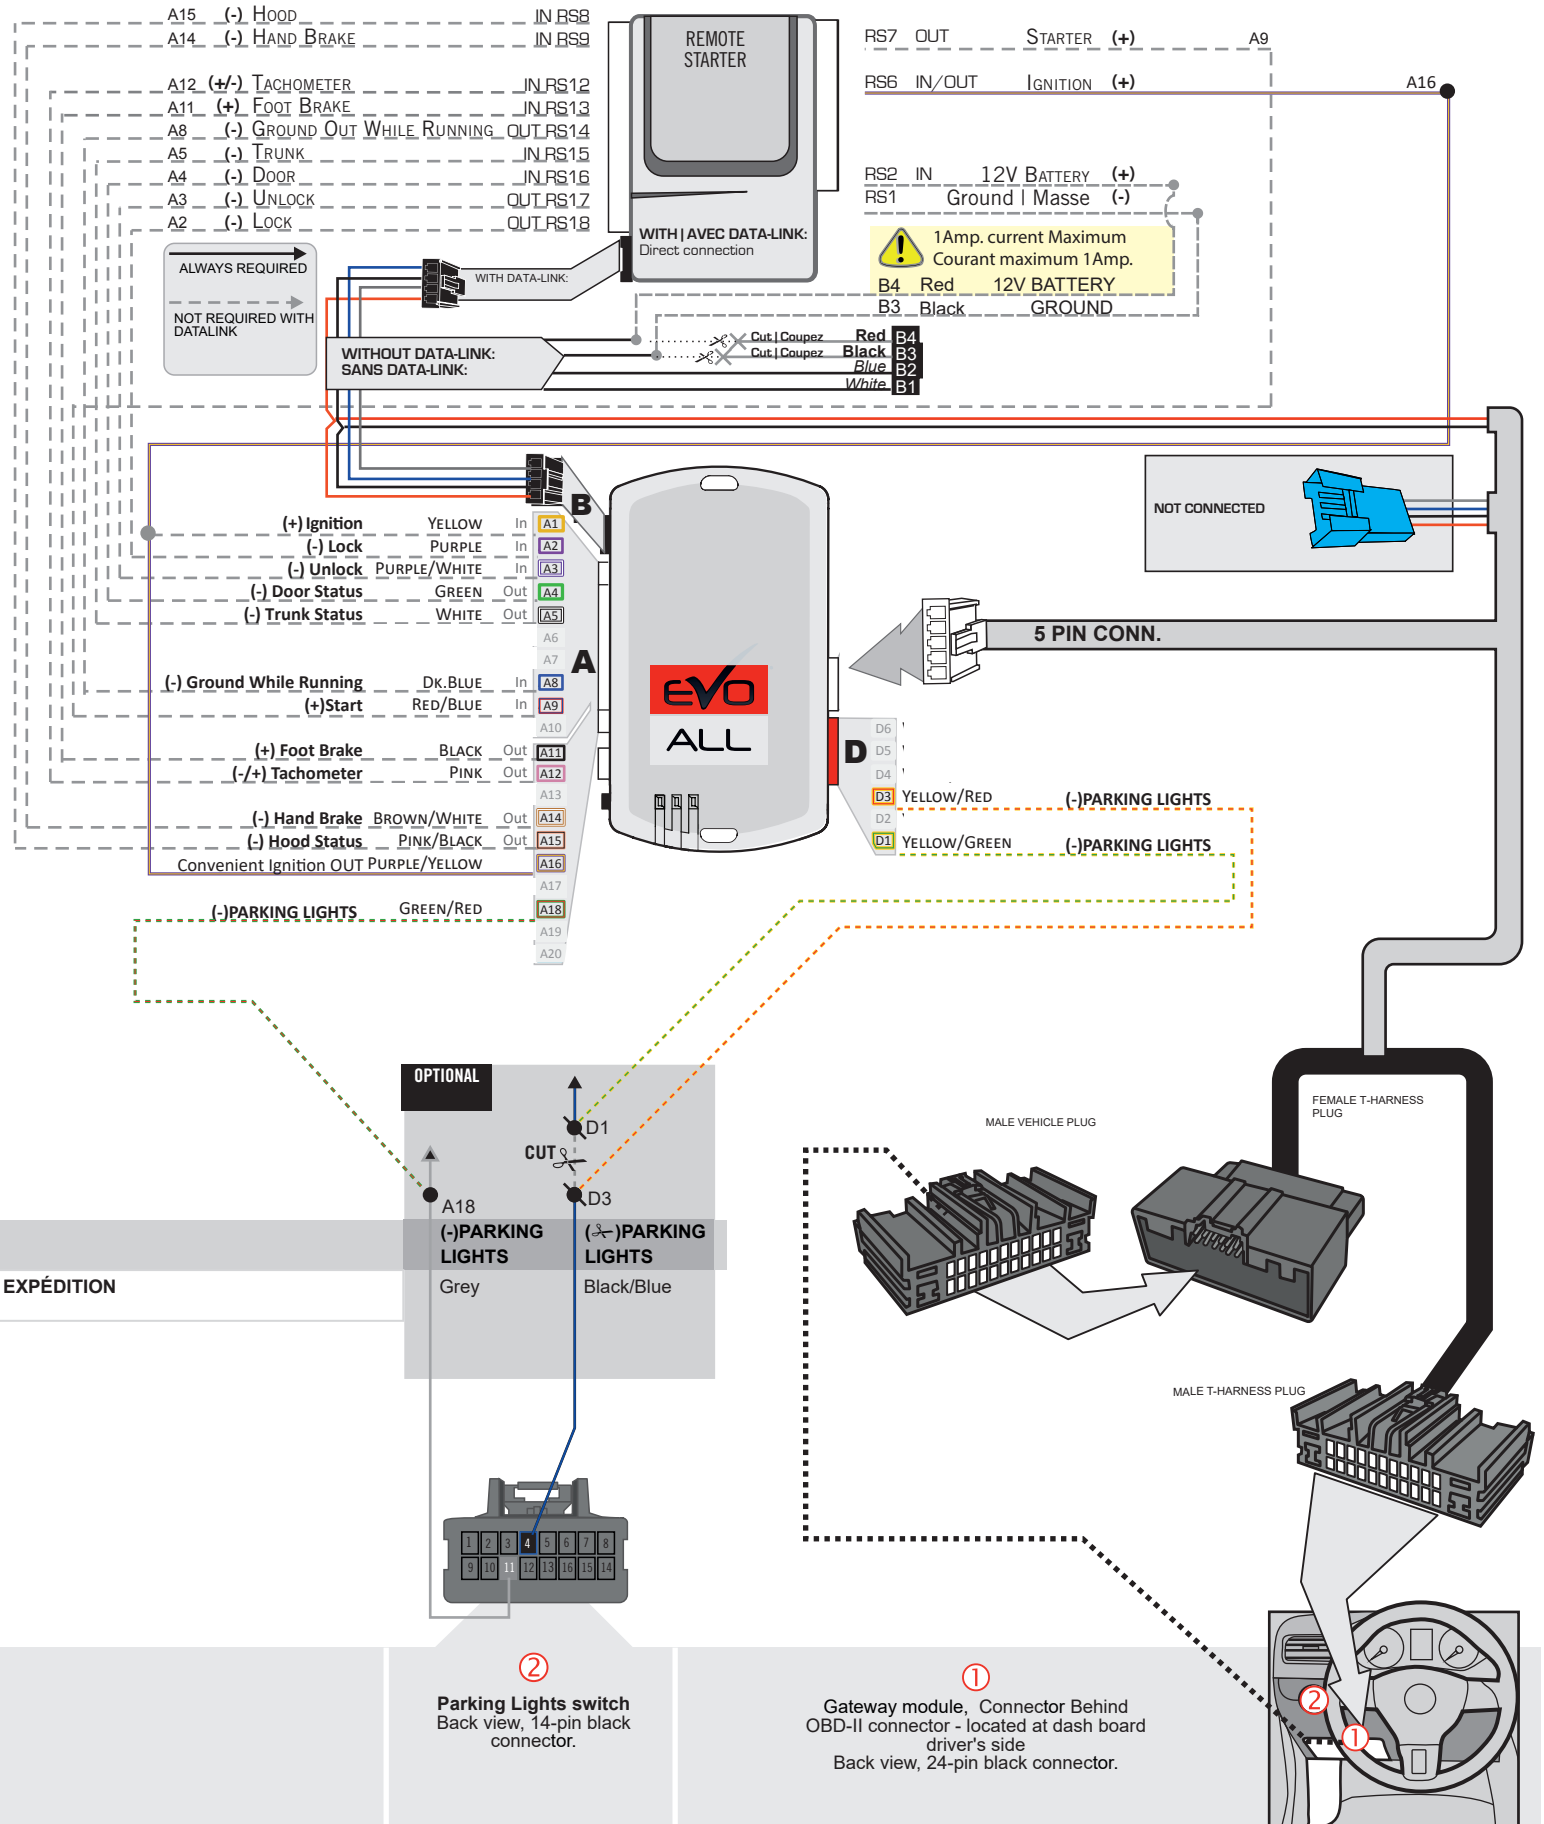



Parts required (not included)


- 1x FLASH LINK UPDATER, SOFTWARE | PROGRAMME
- 1x FLASH LINK MANAGER
- 1x Microsoft Windows Computer with Internet connection

OR

- 1x FLASH LINK MOBILE
- 1x FLASH LINK MOBILE APP
- Smartphone Android or iOS with Internet connection (Internet provider charges may apply)

BEFORE PROGRAMMING SET THE UNIT OPTIONS AND SAVE.


1

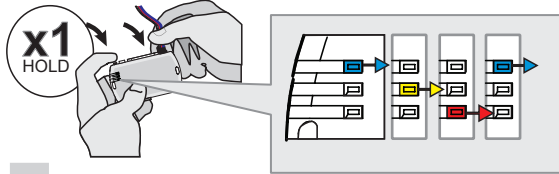

Press and hold the programming button:
Insert the 4-Pin (Data-Link) connector.


↳ The Blue, Red, Yellow and Blue & Red LEDs will alternatively illuminate.

2

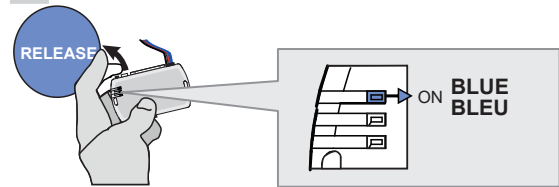


Release the programming button when the LED is BLUE.

 If the LED is not solid BLUE disconnect the 4-Pin connector (Data-Link) and go back to step 1.




3

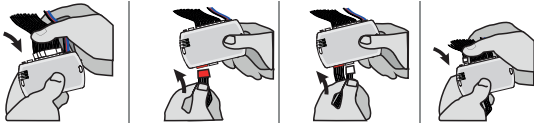

Insert the required remaining connectors.

4

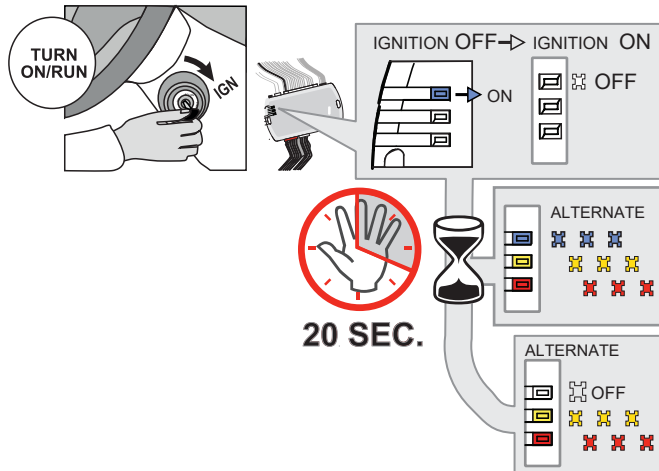

Turn the key to the Ignition ON/RUN position.

↳ The BLUE LED will turn OFF.

↳ The BLUE, YELLOW and RED LEDs will alternate.


Wait, at least 20 seconds, do not disconnect the modules or turn off the ignition.

↳ The RED and YELLOW LEDs will alternate.

Make sure that the DELs are flashing RED and YELLOW before continuing programming.



5

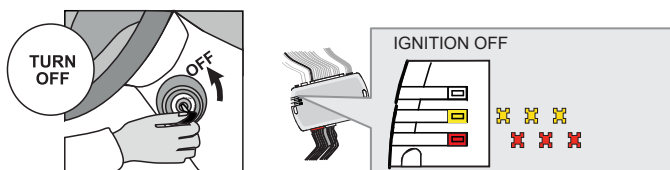


Turn the key to the OFF position.

↳ The RED and YELLOW LEDs alternate.


KEY BYPASS PROGRAMMING PROCEDURE 2/2 |

6

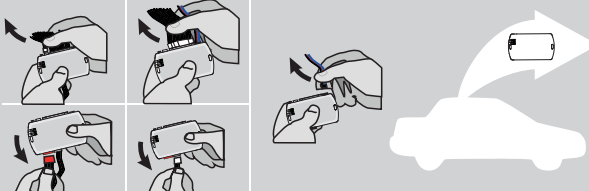

Disconnect all the connectors and after the Data-Link (4-pins) connector.

7



Microsoft Windows Computer with Internet connection*

FLASH LINK UPDATER* **FLASH LINK MANAGER***
SOFTWARE | PROGRAMME

OR

Smartphone* (Internet provider charges may apply)


FLASH LINK MOBILE*

VEHICLE'S OBDII CONNECTOR


Use the tool: FLASH LINK UPDATER or FLASH LINK MOBILE to visit the DCryptor menu.

*Parts required (not included)

8

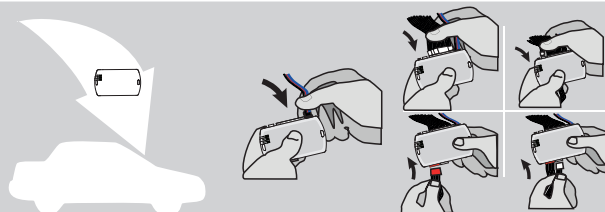


AFTER DCRYPTOR PROGRAMMING COMPLETED
Go back to the vehicle and reconnect the 4-Pin (Data-Link) connector and after, all the remaining connector.

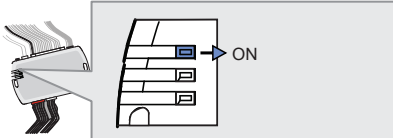

↳ The BLUE LED will turn ON.

9

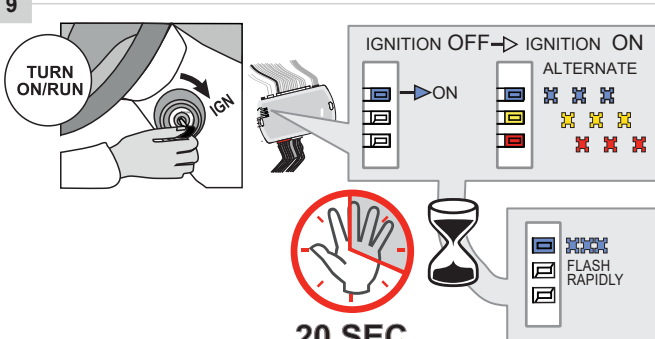

TURN ON/RUN

IGNITION OFF → IGNITION ON

ALTERNATE

↳ The RED and YELLOW LEDs will turn ON.


Wait, at least 20 seconds, do not disconnect the modules or turn off the ignition.

↳ The BLUE LED will flash rapidly.

20 SEC.

FLASH RAPIDLY


10

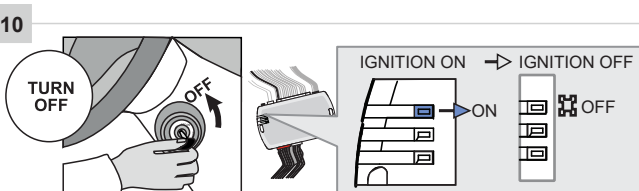

TURN OFF

IGNITION ON → IGNITION OFF

↳ The BLUE will turn OFF.



The module is now programmed.

REMOTE STARTER FUNCTIONALITY |



All doors must be closed.



Remote start the vehicle.



Unlock the doors with the remote-starter remote or the OEM remote.



Insert and Turn the key to the Ignition ON/RUN position.



Press the brake pedal.



The vehicle can now be put in to gear and driven.

REGULAR & THAR-FOR3 INSTALLATION

ADDENDUM - SUGGESTED WIRING CONFIGURATION



ONLY COMPATIBLE WITH AUTOMATIC TRANSMISSION VEHICLES.



Vehicle functions supported in this diagram (functional if equipped)

VEHICLE	YEARS	Immobilizer bypass	T-Harness available (sold separately)	Lock	Unlock	Arm	Disarm	Heated Seats**	Rear Defrost**	RAP Disable	Parking Lights***	Tachometer	Door Status	Trunk Status	Hood Status*	Hand-Brake Status	Foot-Brake Status	Active OEM Remote Start
FORD																		
Expedition	Push-to-Start 2018-2020	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•

COMPATIBLE MODULE REQUIRED:

2019

QR CODE ON THE LABEL

MANUFACTURED AFTER: 2019

2019

FIRMWARE VERSION

58.[02]

MINIMUM

To add the firmware version and the options, use the **FLASH LINK UPDATER** or **FLASH LINK MOBILE** tool, sold separately.

UNIT OPTION	DESCRIPTION
C1	OEM Remote status (Lock/Unlock) monitoring
D6	Push-to-Start
A11	OFF Hood trigger (Output Status).

IF THE VEHICLE IS NOT EQUIPPED WITH FUNCTIONAL HOOD PIN:

NOTES

The vehicles OEM remote and SmartKey are still operable during remote start.

**Heated seats The heated seats and rear defrost activate automatically when it cold.

***Parking Lights The parking Lights at remote start only.

MANDATORY INSTALL

*HOOD PIN



HOOD STATUS: THE HOOD PIN SWITCH MUST BE INSTALLED IF THE VEHICLE CAN BE REMOTE STARTED WITH THE HOOD OPEN, SET FUNCTION A11 TO OFF.

A11

OFF

Notice: the installation of safety elements are mandatory. The hood pin is an essential security element and must be installed.

THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.

DESCRIPTION | DESCRIPTION

	Parts required (Not included)	PAGE
--	-------------------------------	------

WIRE TO WIRE DIAGRAM

AUTOMATIC TRANSMISSION	1x 7.5 Amp. fuse	Page 3
------------------------	------------------	--------

THARNES DIAGRAM



THARNES THAR-FOR3 AUTOMATIC TRANSMISSION	1x THAR-FOR3	Page 4
--	--------------	--------

EXPÉDITION





② Parking Lights switch

① Gateway module, Behind OBD-II connector

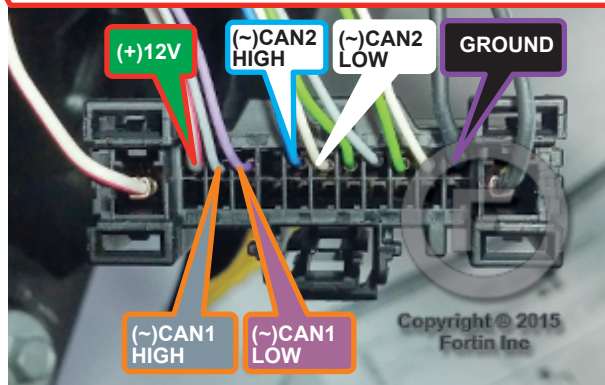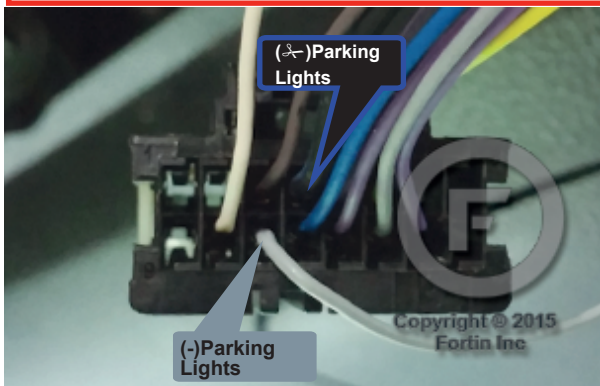

AUTOMATIC TRANSMISSION WIRING CONNECTION |

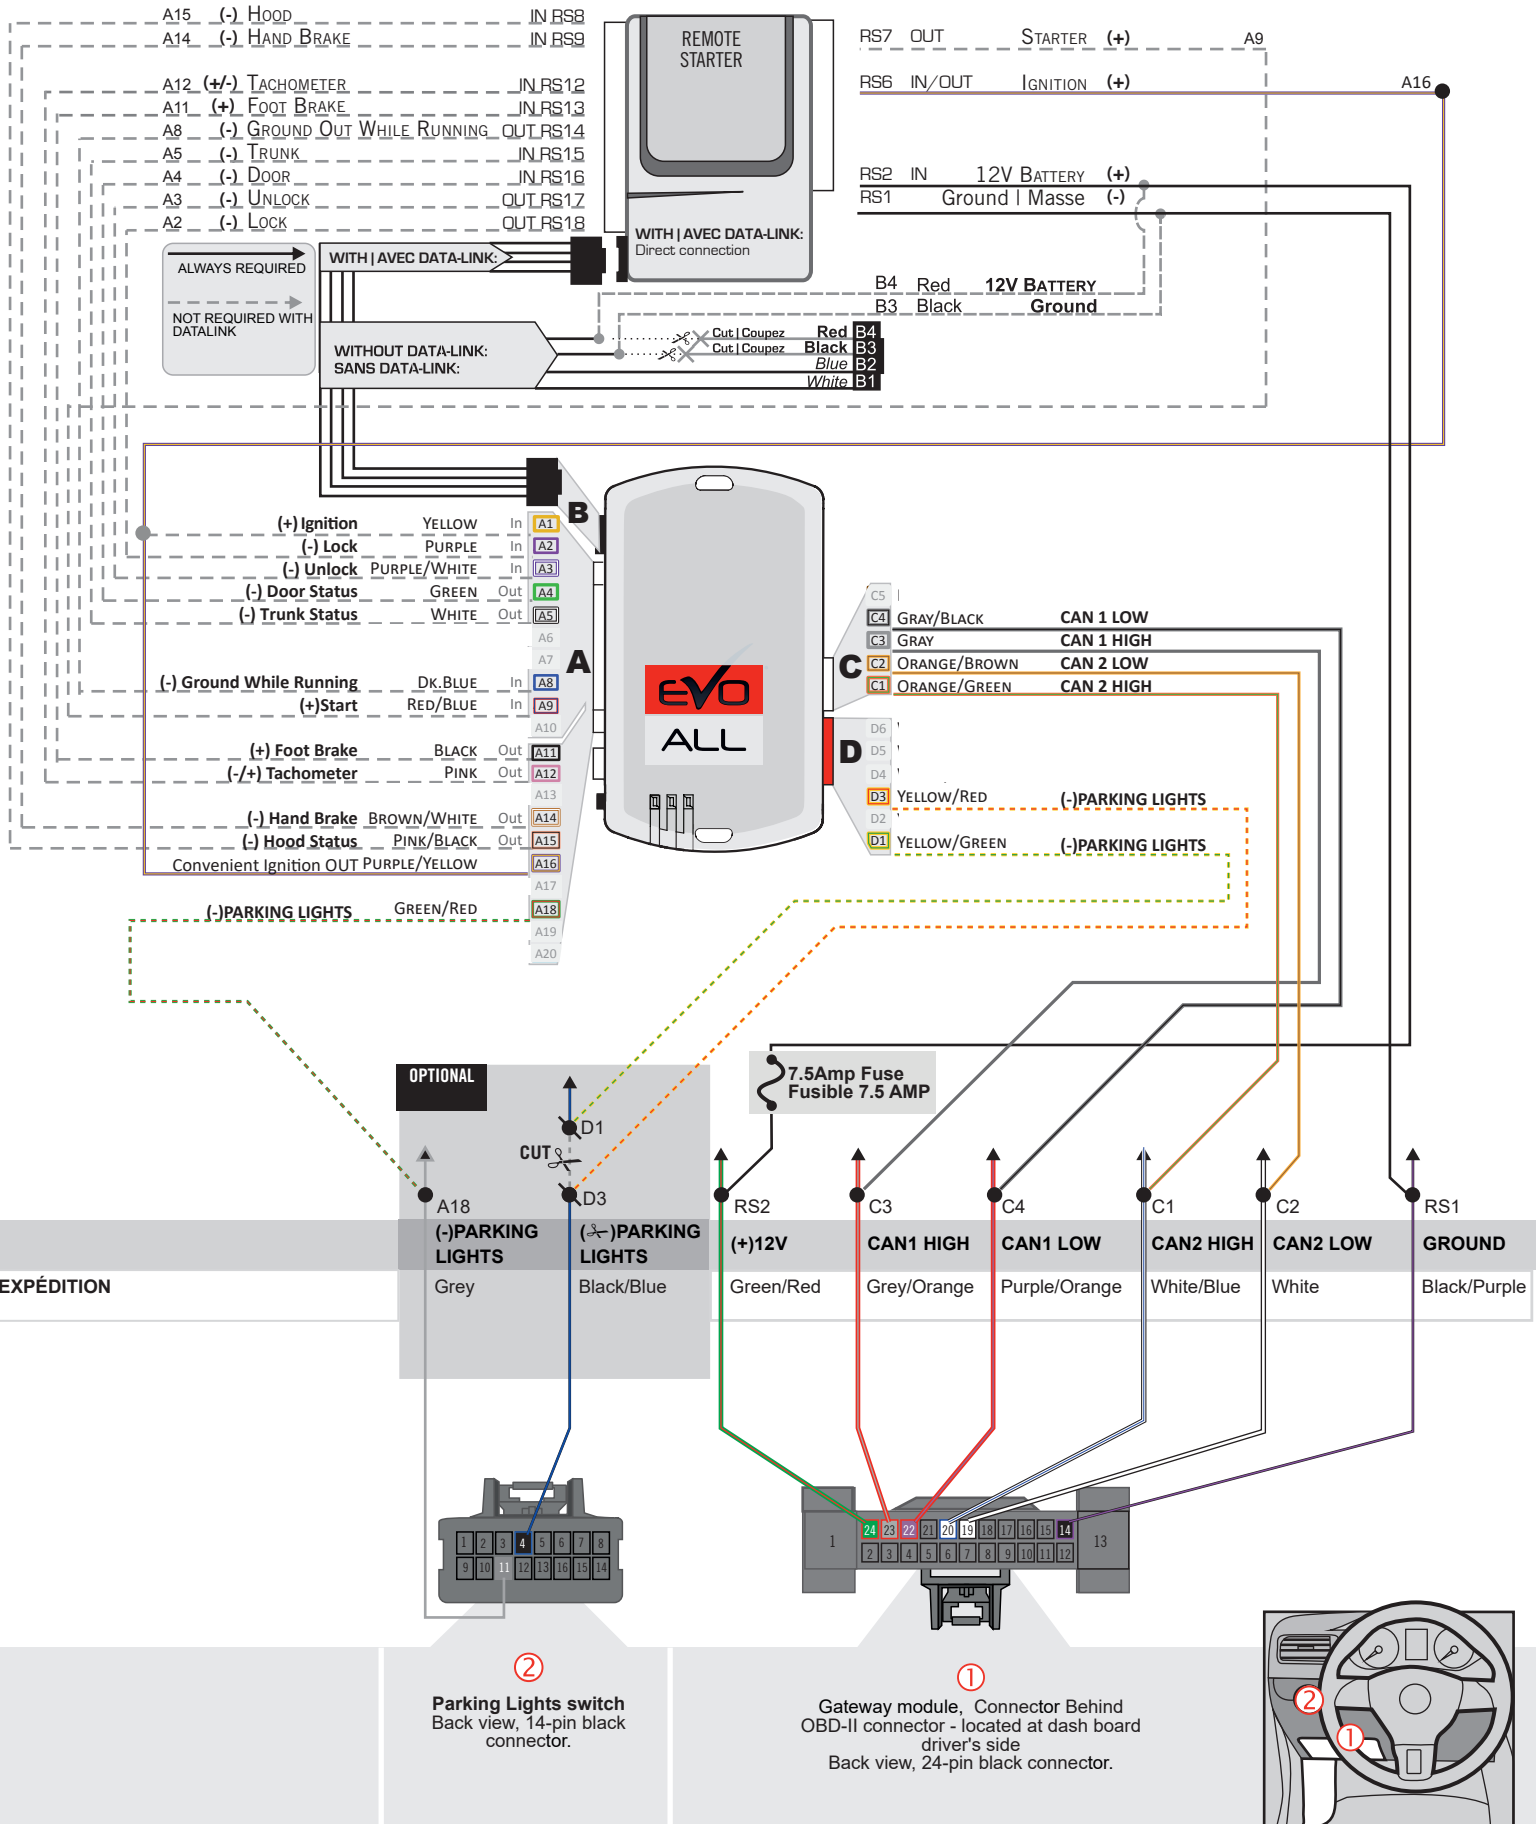

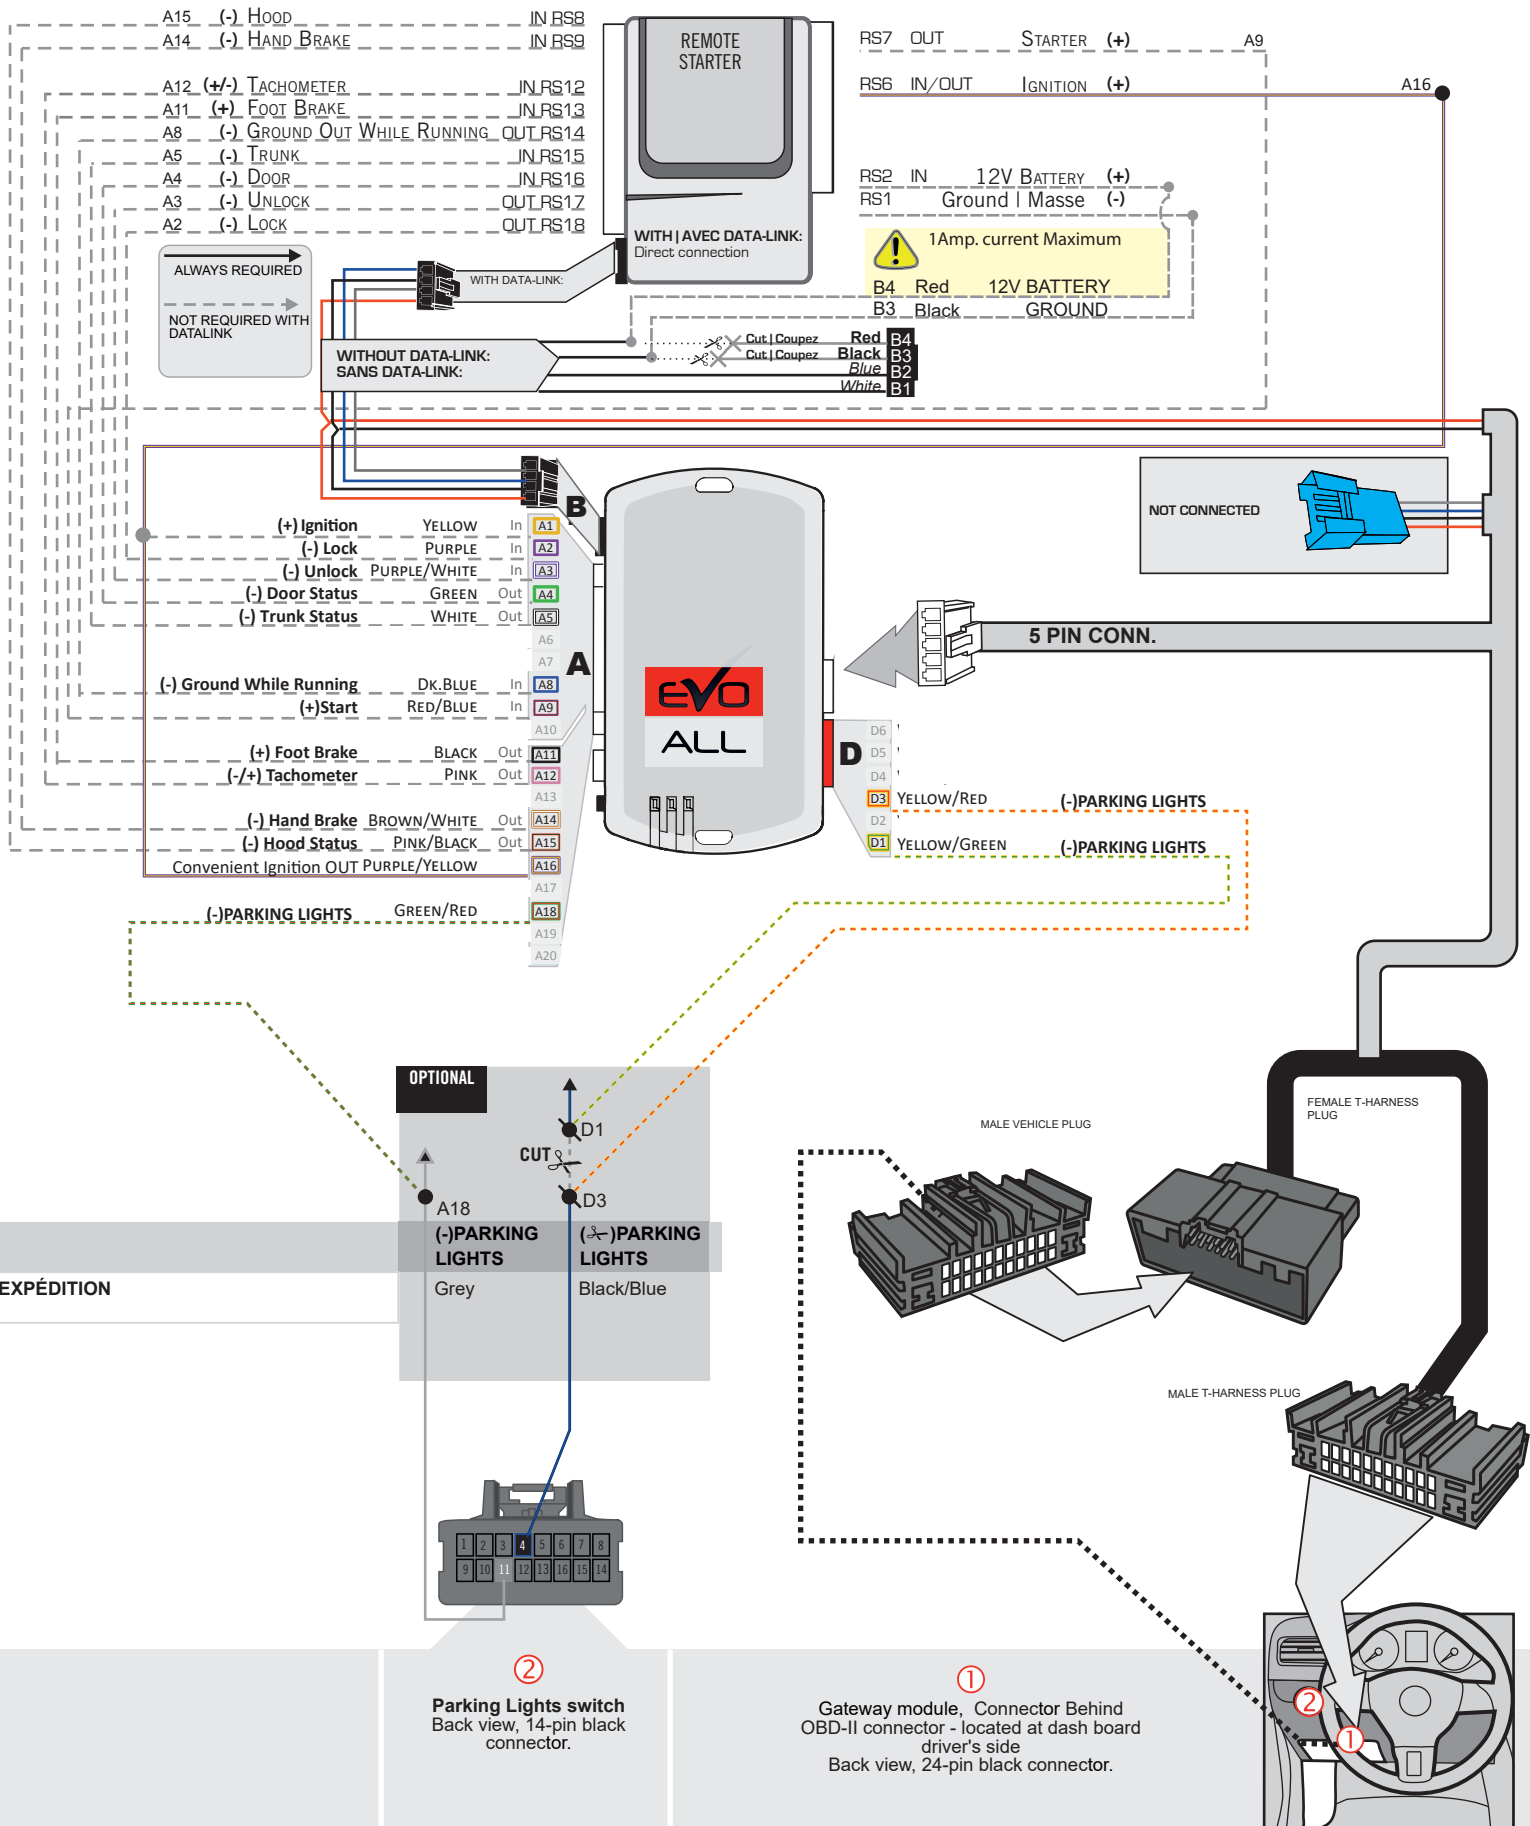



Parts required (not included)


- 1x FLASH LINK UPDATER, SOFTWARE | PROGRAMME
- 1x FLASH LINK MANAGER
- 1x Microsoft Windows Computer with Internet connection

OR

- 1x FLASH LINK MOBILE
- 1x FLASH LINK MOBILE APP
- Smartphone Android or iOS with Internet connection (Internet provider charges may apply)

BEFORE PROGRAMMING SET THE UNIT OPTIONS AND SAVE.


1

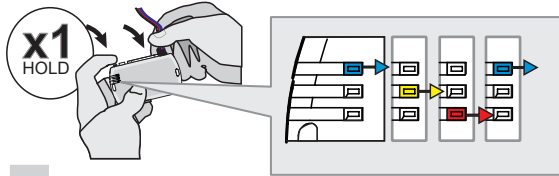

Press and hold the programming button:
Insert the 4-Pin (Data-Link) connector.


↳ The Blue, Red, Yellow and Blue & Red LEDs will alternatively illuminate.

2

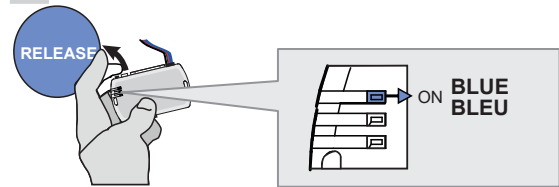


Release the programming button when the LED is BLUE.

 If the LED is not solid BLUE disconnect the 4-Pin connector (Data-Link) and go back to step 1.




3

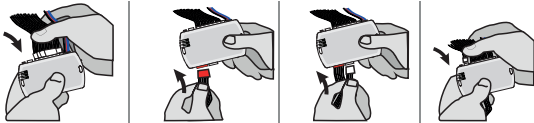

Insert the required remaining connectors.

4

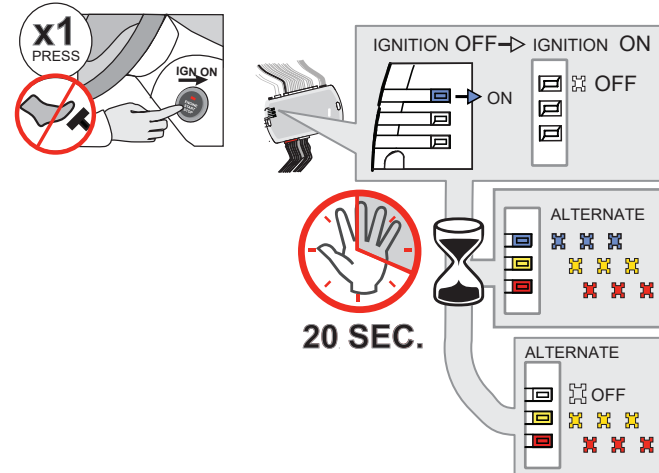

Do not press the brake pedal.
Press the Push-to-Start button once to turn on the ignition.

 
↳ The BLUE LED will turn OFF.

↳ The BLUE, YELLOW and RED LEDs will alternate.


Wait, at least 20 seconds, do not disconnect the modules or turn off the ignition.

↳ The RED and YELLOW LEDs will alternate.

Make sure that the DELs are flashing RED and YELLOW before continuing programming.



5

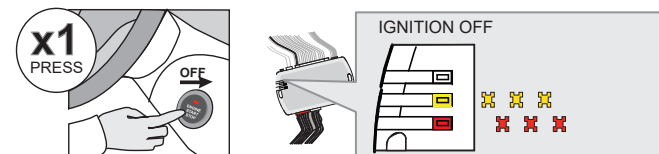

Press the Push-to-Start button once to turn off the ignition.

↳ The RED and YELLOW LEDs alternate.

KEY BYPASS PROGRAMMING PROCEDURE 2/2 |

6

Disconnect all the connectors and after the Data-Link (4-pins) connector.

7

Microsoft Windows Computer with Internet connection*

OR


Smartphone* (Internet provider charges may apply)

Use the tool: FLASH LINK UPDATER or FLASH LINK MOBILE to visit the DCryptor menu.

*Parts required (not included)

8

AFTER DCRYPTOR PROGRAMMING COMPLETED
Go back to the vehicle and **reconnect** the 4-Pin (Data-Link) connector and after, all the remaining connector.

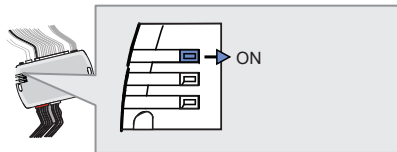

↳ The BLUE LED will turn ON.

9

x1 PRESS

IGNITION OFF → IGNITION ON

ALTERNATE

20 SEC.

FLASH RAPIDLY

Do not press the brake pedal. **Press** the Push-to-Start button once to turn on the ignition.

↳ The RED and YELLOW LEDs will turn ON.

Wait, at least 20 seconds, do not disconnect the modules or turn off the ignition.

↳ The BLUE LED will flash rapidly.

10

x1 PRESS

IGNITION ON → IGNITION OFF



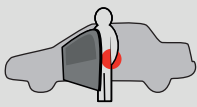

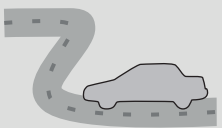
Press the Push-to-Start button once to turn off the ignition.

↳ The BLUE will turn OFF.



The module is now programmed.

REMOTE STARTER FUNCTIONALITY |

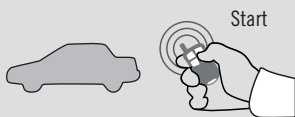 <p>Start</p> <p>All doors must be closed.</p> <p>Remote start the vehicle.</p>	 <p>UNLOCK</p> <p>Unlock the doors with either:</p> <ul style="list-style-type: none"> • The OEM remote • The remote-starter remote • Or the proximity remote 	 <p>Enter the vehicle with the SMART-KEY.</p>	 <p>DO NOT PRESS THE BRAKE PEDAL.</p> <p>Press and release the Push-to-Start button once.</p>	 <p>Press the brake pedal. The vehicle can now be put in to gear and driven.</p> <p>If the Smart-Key is not detected the vehicle will shut down.</p>
--	---	--	---	---

REGULAR & THAR-FOR3 INSTALLATION

ADDENDUM - SUGGESTED WIRING CONFIGURATION




ONLY COMPATIBLE WITH AUTOMATIC TRANSMISSION VEHICLES.



Vehicle functions supported in this diagram (functional if equipped)

VEHICLE	YEARS	Immobilizer bypass	Lock	Unlock	Armn	Disarm	RAP Disable	Parking Lights***	Tachometer	Heated seats**	Heated Mirrors**	Rear defrost	Door Status	Trunk Status	Hood Status*	Hand-Brake Status	Foot-Brake Status	Active OEM Remote Start
FORD Explorer	Key 2020	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•

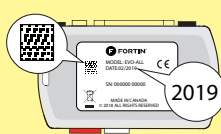

COMPATIBLE MODULE REQUIRED:

QR CODE ON THE LABEL
MANUFACTURED AFTER: 2019

FIRMWARE VERSION
58.[02]
MINIMUM

To add the firmware version and the options, use the **FLASH LINK UPDATER** or **FLASH LINK MOBILE** tool, sold separately.



Program bypass option:

UNIT OPTION

DESCRIPTION

C1

OEM Remote status (Lock/Unlock) monitoring

IF THE VEHICLE IS NOT EQUIPPED WITH FUNCTIONAL HOOD PIN:

A11

OFF

Hood trigger (Output Status).

NOTES

The vehicles OEM remote and SmartKey are still operable during remote start.

**Heatd seats The heated seats and rear defrost activate automatically when it cold.

***Parking Lights The parking Lights at remote start only.



The vehicle must be equipped with the OEM remote with the door locks.

MANDATORY INSTALL

*HOOD PIN



HOOD STATUS: THE HOOD PIN SWITCH MUST BE INSTALLED IF THE VEHICLE CAN BE REMOTE STARTED WITH THE HOOD OPEN, SET FUNCTION A11 TO OFF.

A11

OFF

Notice: the installation of safety elements are mandatory. The hood pin is an essential security element and must be installed.

THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.

DESCRIPTION | DESCRIPTION

	Parts required (Not included)	PAGE
--	-------------------------------	------


WIRE TO WIRE DIAGRAM

AUTOMATIC TRANSMISSION	1x 7.5 Amp. fuse	Page 3
------------------------	------------------	--------



THARNESS DIAGRAM

THARNESS THAR-FOR3 AUTOMATIC TRANSMISSION	1x THAR-FOR3	Page 4
---	--------------	--------


① Gateway module, located at dash board driver's side,

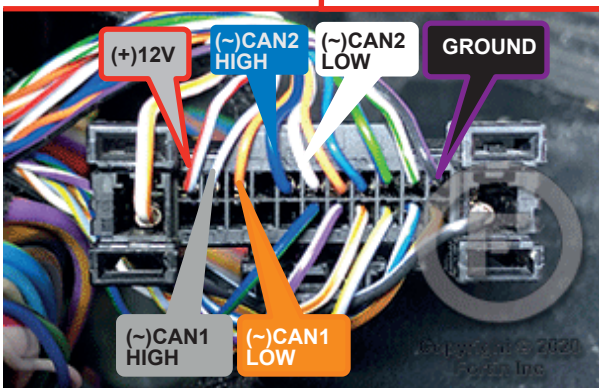

② Fuse box

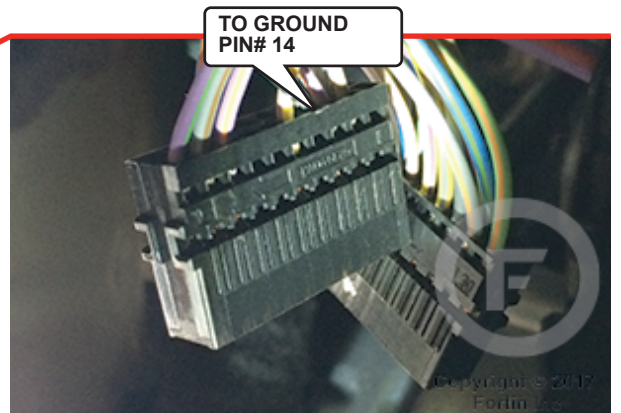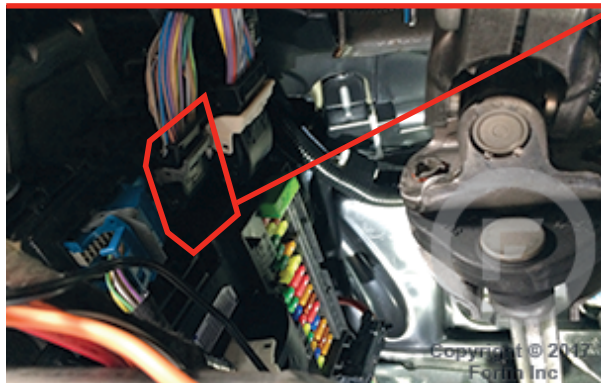

AUTOMATIC TRANSMISSION WIRING CONNECTION |

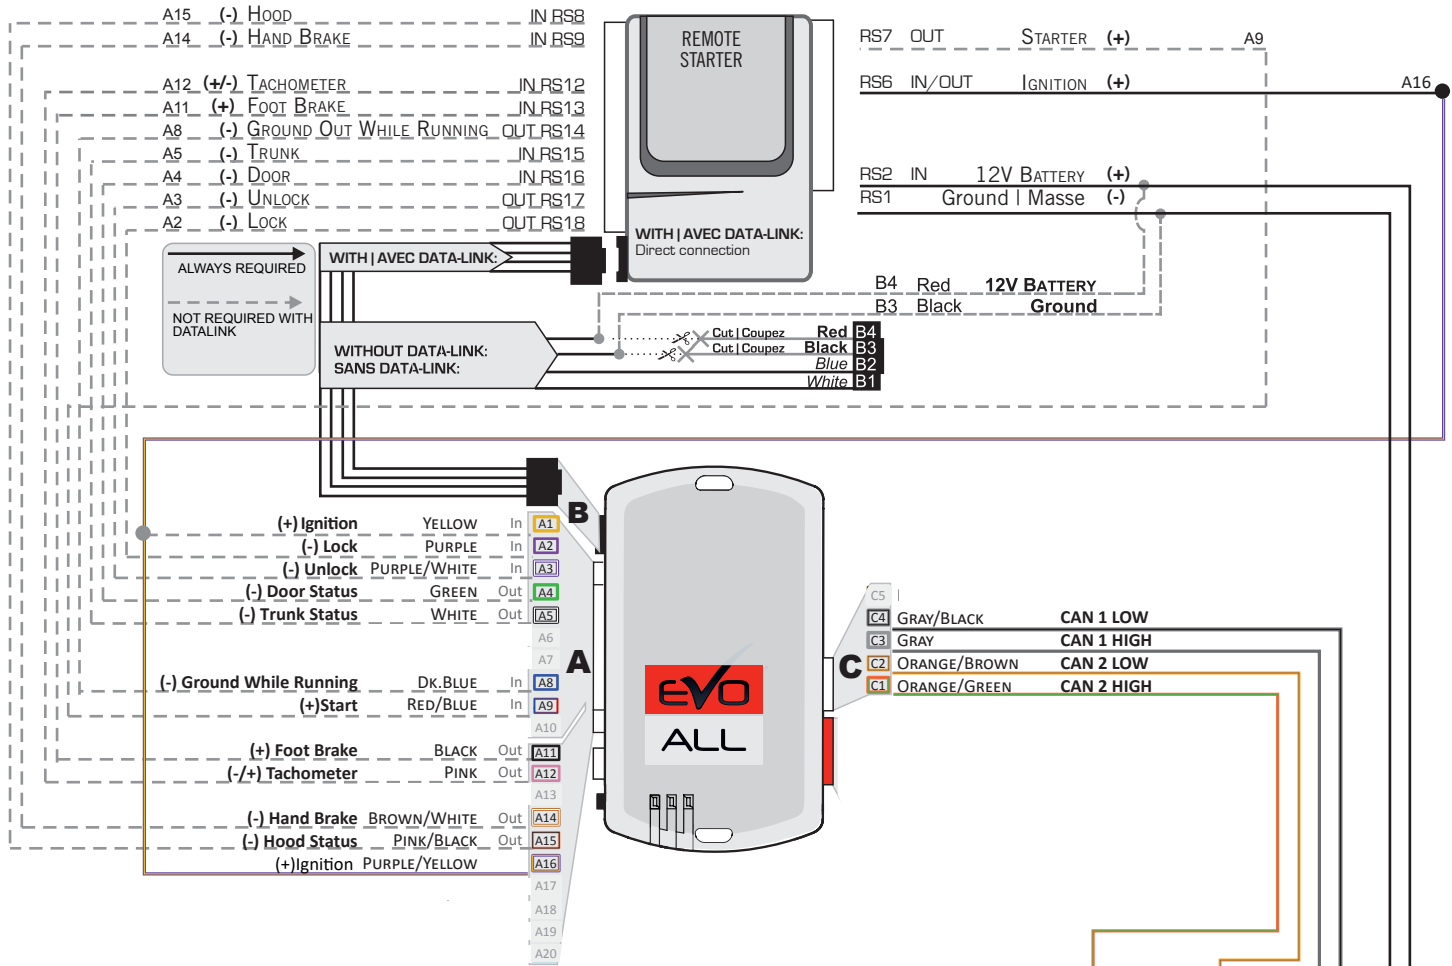


Make the connection to the Ground if not equipped with hood pin.




TO GROUND
Empty pin


EXPLORER

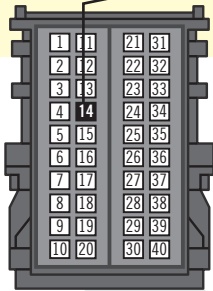


Back view Fuse box 20-pin black Connector

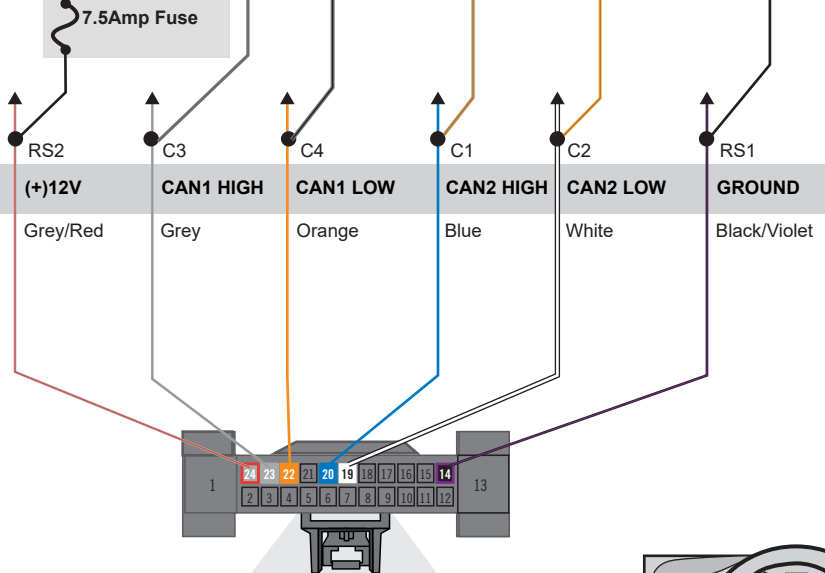

Gateway module, Behind OBD-II connector - located at dash board driver's side - Back view, 24-pin black connector.

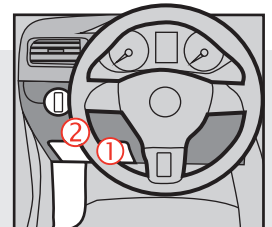

THAR-FOR3 | T-HARNESS - AUTOMATIC TRANSMISSION |

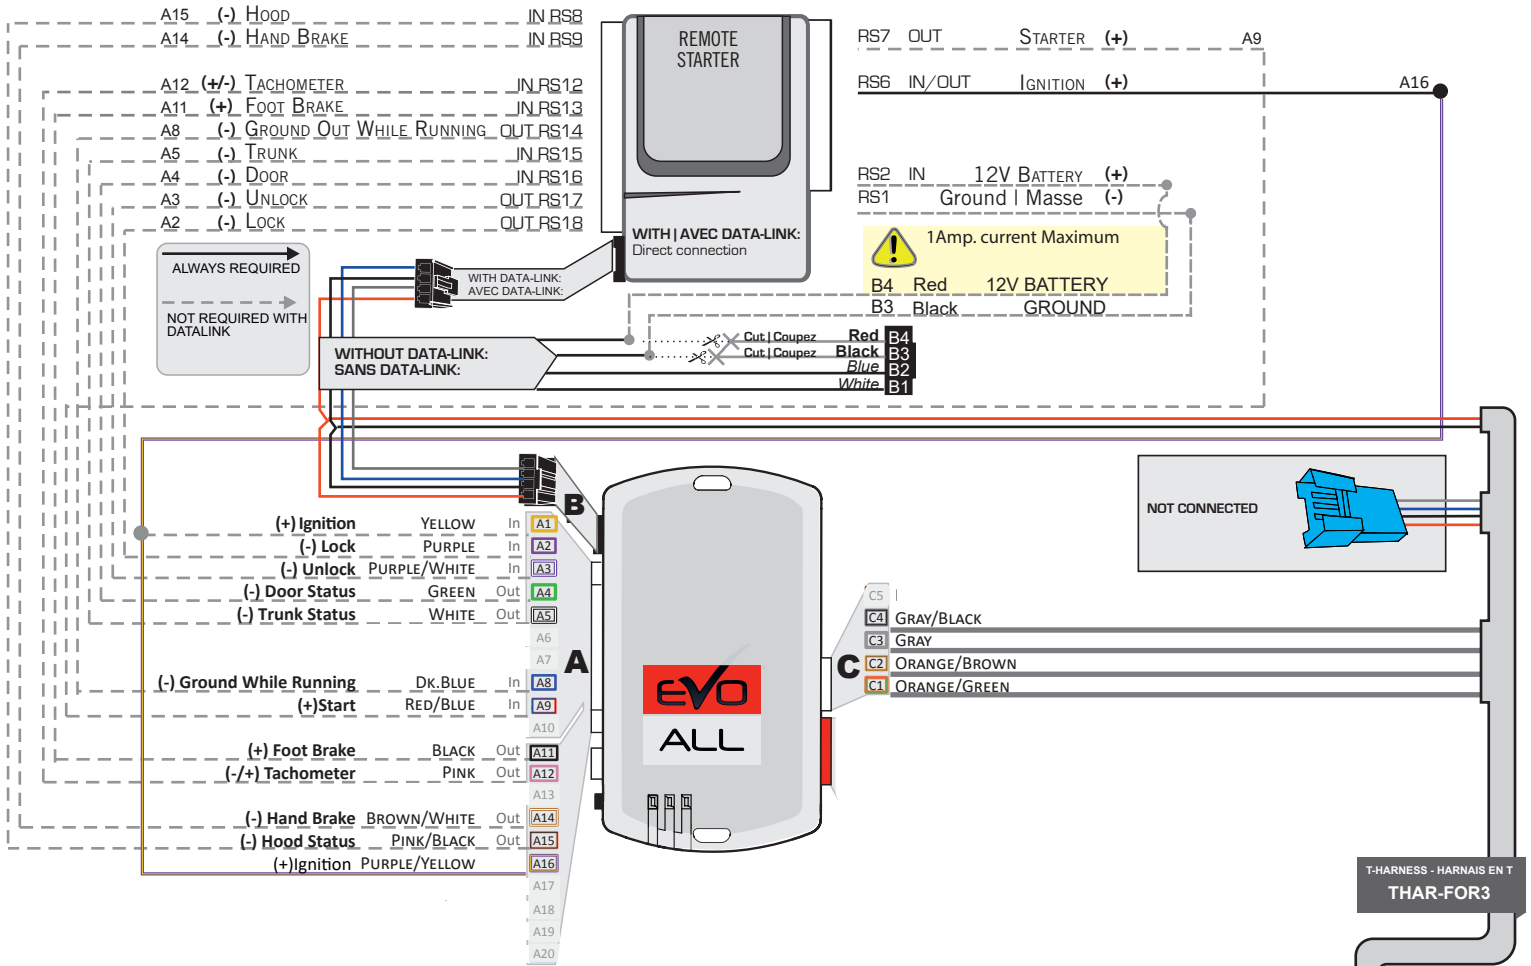


EXPLORER



Make the connection to the Ground if not equipped with hood pin.



TO GROUND
Empty pin

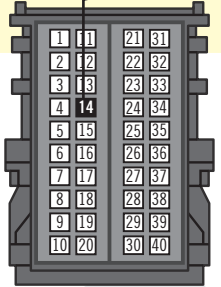

② Back view Fuse box 20-pin black Connector

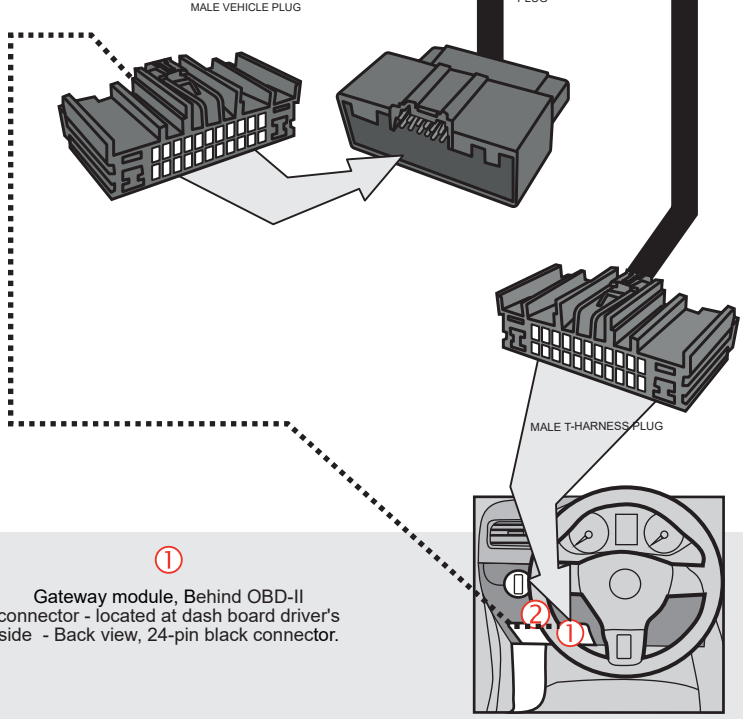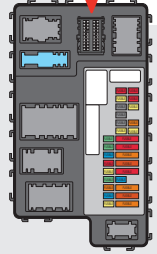

T-HARNESS - HARNAIS EN T
THAR-FOR3



Parts required (not included)


- 1x FLASH LINK UPDATER, SOFTWARE | PROGRAMME
- 1x FLASH LINK MANAGER
- 1x Microsoft Windows Computer with Internet connection

OR

- 1x FLASH LINK MOBILE
- 1x FLASH LINK MOBILE APP
- Smartphone Android or iOS with Internet connection (Internet provider charges may apply)

BEFORE PROGRAMMING SET THE UNIT OPTIONS AND SAVE.


1

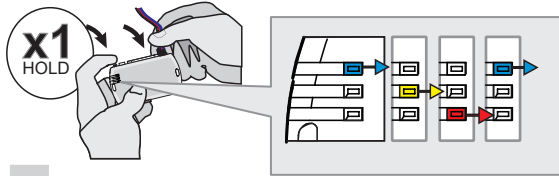

Press and hold the programming button:
Insert the 4-Pin (Data-Link) connector.


↳ The Blue, Red, Yellow and Blue & Red LEDs will alternatively illuminate.

2

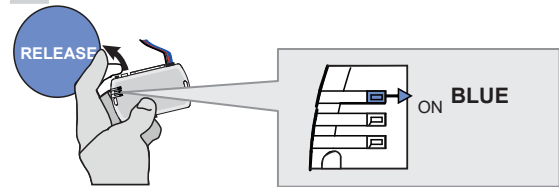


Release the programming button when the LED is BLUE.

 If the LED is not solid BLUE disconnect the 4-Pin connector (Data-Link) and go back to step 1.




3

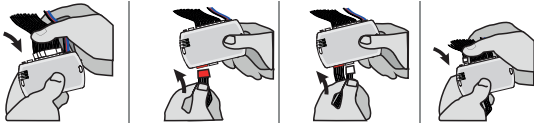

Insert the required remaining connectors.

4

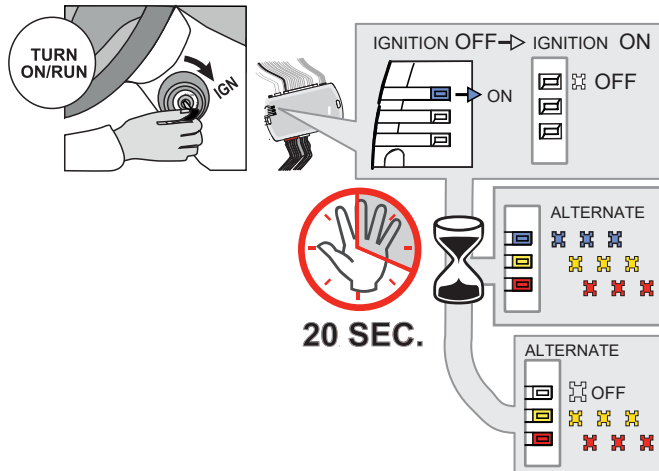

Turn the key to the Ignition ON/RUN position.

↳ The BLUE LED will turn OFF.

↳ The BLUE, YELLOW and RED LEDs will alternated.


Wait, at least 20 seconds, do not disconnect the modules or turn off the ignition.

↳ The RED and YELLOW LEDs will alternated.

Make sure that the DELs are flashing RED and YELLOW before continuing programming.



5

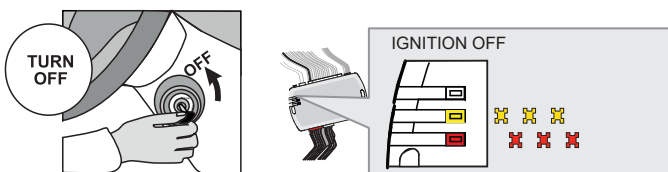

Turn the key to the OFF position.

↳ The RED and YELLOW LEDs alternate.

KEY BYPASS PROGRAMMING PROCEDURE 2/2 |

6

Disconnect all the connectors and after the Data-Link (4-pins) connector.

7

Microsoft Windows Computer with Internet connection*

OR


Smartphone* (Internet provider charges may apply)

Use the tool: FLASH LINK UPDATER or FLASH LINK MOBILE to visit the DCRYPTOR menu.

*Parts required (not included)

8

AFTER DCRYPTOR PROGRAMMING COMPLETED
Go back to the vehicle and **reconnect** the 4-Pin (Data-Link) connector and after, all the remaining connector.

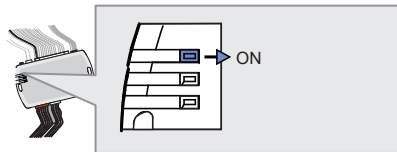

↳ The BLUE LED will turn ON.

9

TURN ON/RUN

IGNITION OFF → IGNITION ON

ALTERNATE

↳ The RED and YELLOW LEDs will turn ON.

20 SEC.

FLASH RAPIDLY

Wait, at least 20 seconds, do not disconnect the modules or turn off the ignition.

↳ The BLUE LED will flash rapidly.

10

TURN OFF

IGNITION ON → IGNITION OFF

↳ The BLUE will turn OFF.

The module is now programmed.

REMOTE STARTER FUNCTIONALITY |



All doors must be closed.



Remote start the vehicle.



Unlock the doors with the remote-starter remote or the OEM remote.



Insert and Turn the key to the Ignition ON/RUN position.



Press the brake pedal.



The vehicle can now be put in to gear and driven.

REGULAR & THAR-FOR3 INSTALLATION

ADDENDUM - SUGGESTED WIRING CONFIGURATION




ONLY COMPATIBLE WITH AUTOMATIC TRANSMISSION VEHICLES.



Vehicle functions supported in this diagram (functional if equipped)

VEHICLE	YEARS	Immobilizer bypass	Lock	Unlock	Arm	Disarm	Heated Seats**	Rear Defrost**	RAP Disable	Parking Lights***	Tachometer	Door Status	Trunk Status	Hood Status*	Hand-Brake Status	Foot-Brake Status	Active OEM Remote Start
FORD Explorer	Push-to-Start 2020	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•

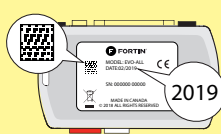

COMPATIBLE MODULE REQUIRED:

QR CODE ON THE LABEL
MANUFACTURED AFTER:
2019

FIRMWARE VERSION
58.[02]
MINIMUM

To add the firmware version and the options, use the **FLASH LINK UPDATER** or **FLASH LINK MOBILE** tool, sold separately.



Program bypass option:

UNIT OPTION

DESCRIPTION

C1

OEM Remote status (Lock/Unlock) monitoring

D6

Push-to-Start

IF THE VEHICLE IS NOT EQUIPPED WITH FUNCTIONAL HOOD PIN:

A11

OFF

Hood trigger (Output Status).

NOTES

The vehicles OEM remote and SmartKey are still operable during remote start.

**Heatd seats The heated seats and rear defrost activate automatically when it cold.

***Parking Lights The parking Lights at remote start only.

MANDATORY INSTALL

*HOOD PIN



HOOD STATUS: THE HOOD PIN SWITCH MUST BE INSTALLED IF THE VEHICLE CAN BE REMOTE STARTED WITH THE HOOD OPEN, SET FUNCTION A11 TO OFF.

A11

OFF

Notice: the installation of safety elements are mandatory. The hood pin is an essential security element and must be installed.

THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.

DESCRIPTION | DESCRIPTION

	Parts required (Not included)		PAGE
--	-------------------------------	--	------


WIRE TO WIRE DIAGRAM

AUTOMATIC TRANSMISSION	1x 7.5 Amp. fuse	1x Fusible 7.5 Amp.	Page 3
------------------------	------------------	---------------------	--------



THARNES DIAGRAM

THARNES THAR-FOR3 AUTOMATIC TRANSMISSION	1x THAR-FOR3	1x THAR-FOR3	Page 4
--	--------------	--------------	--------



① Gateway module, located at dash board driver's side,

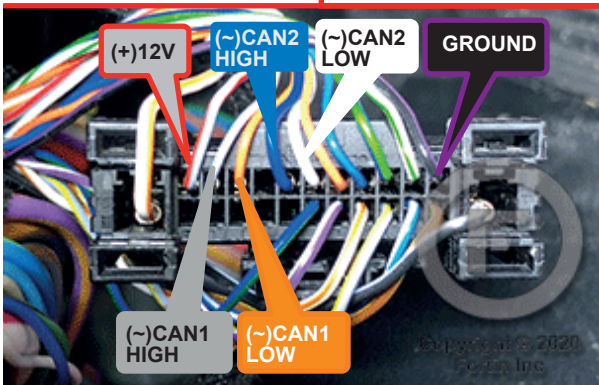


② Fuse box

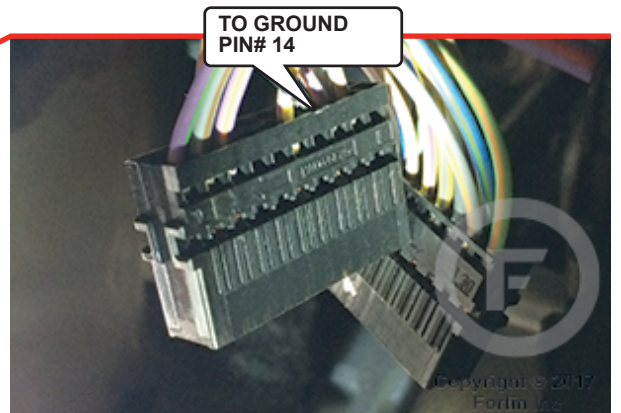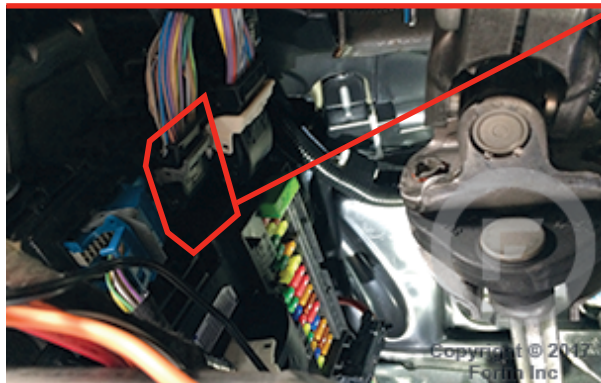




AUTOMATIC TRANSMISSION WIRING CONNECTION |

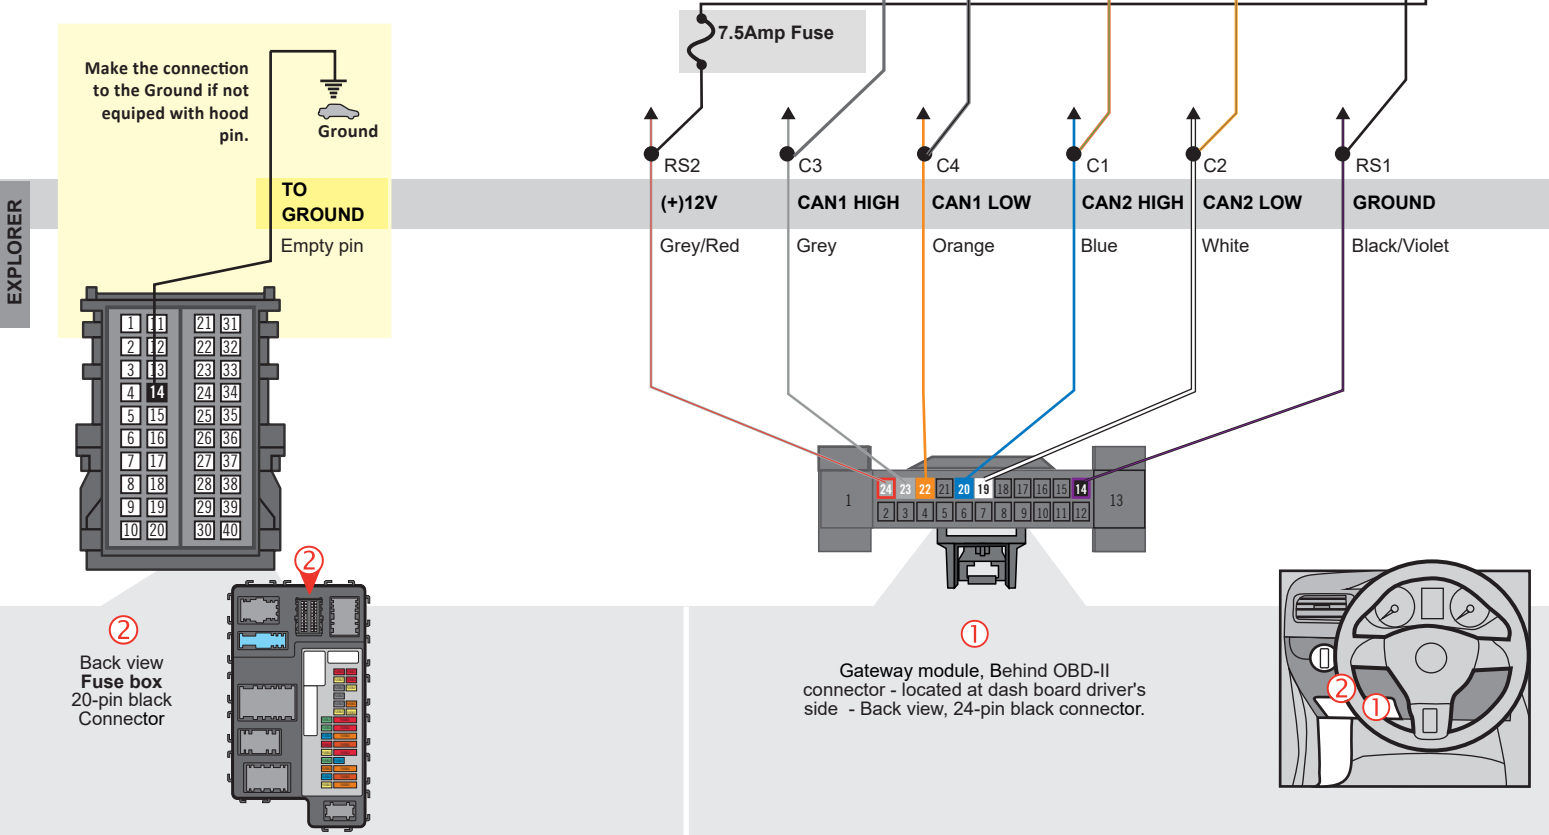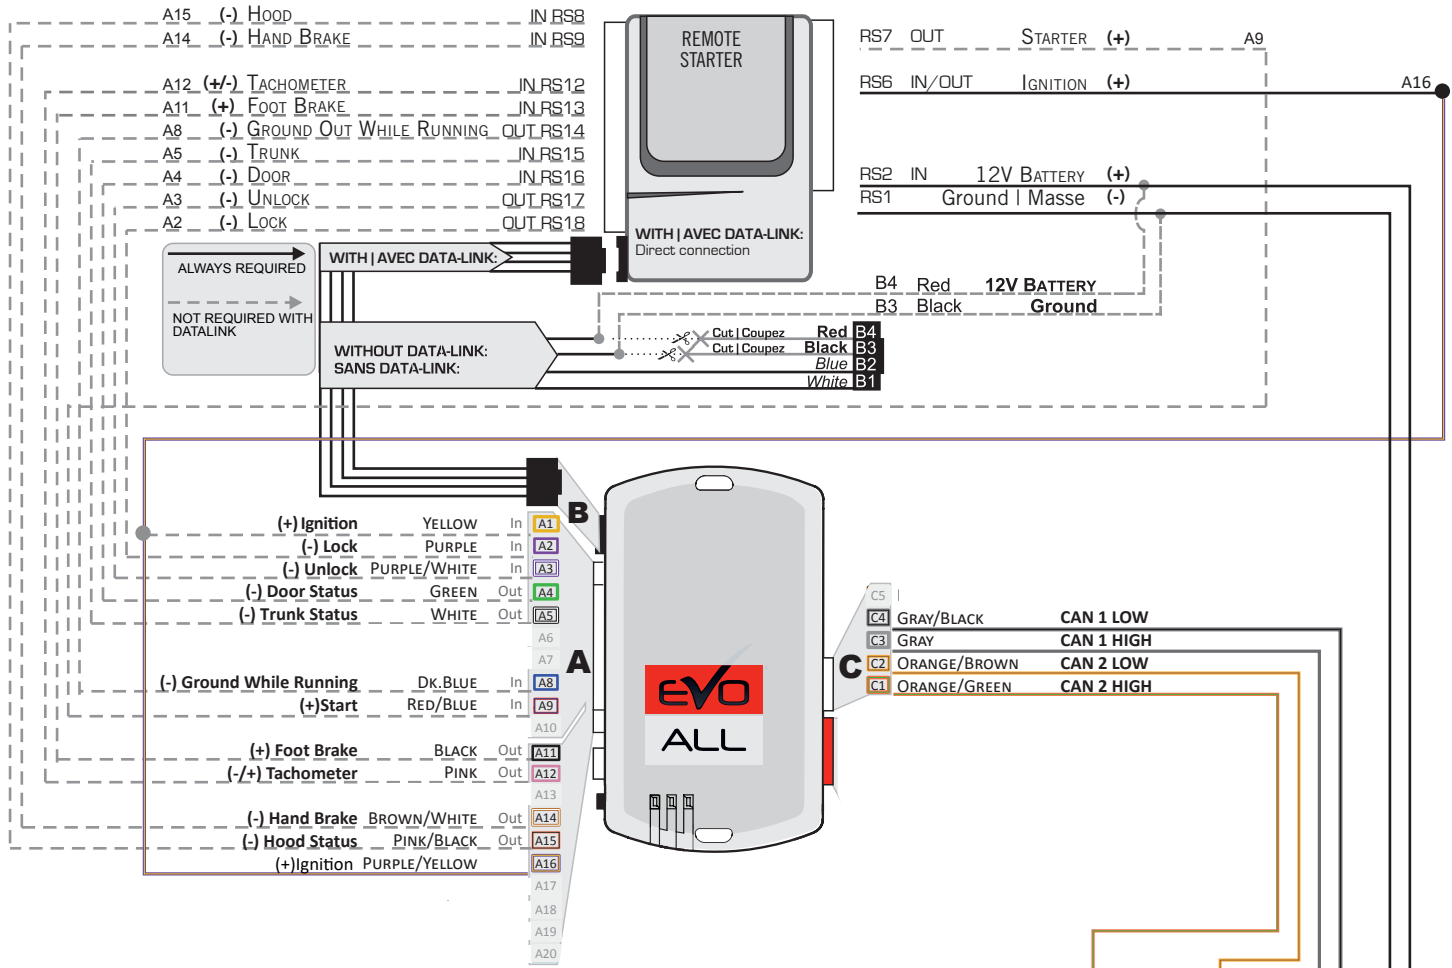

THAR-FOR3 | T-HARNESS - AUTOMATIC TRANSMISSION |

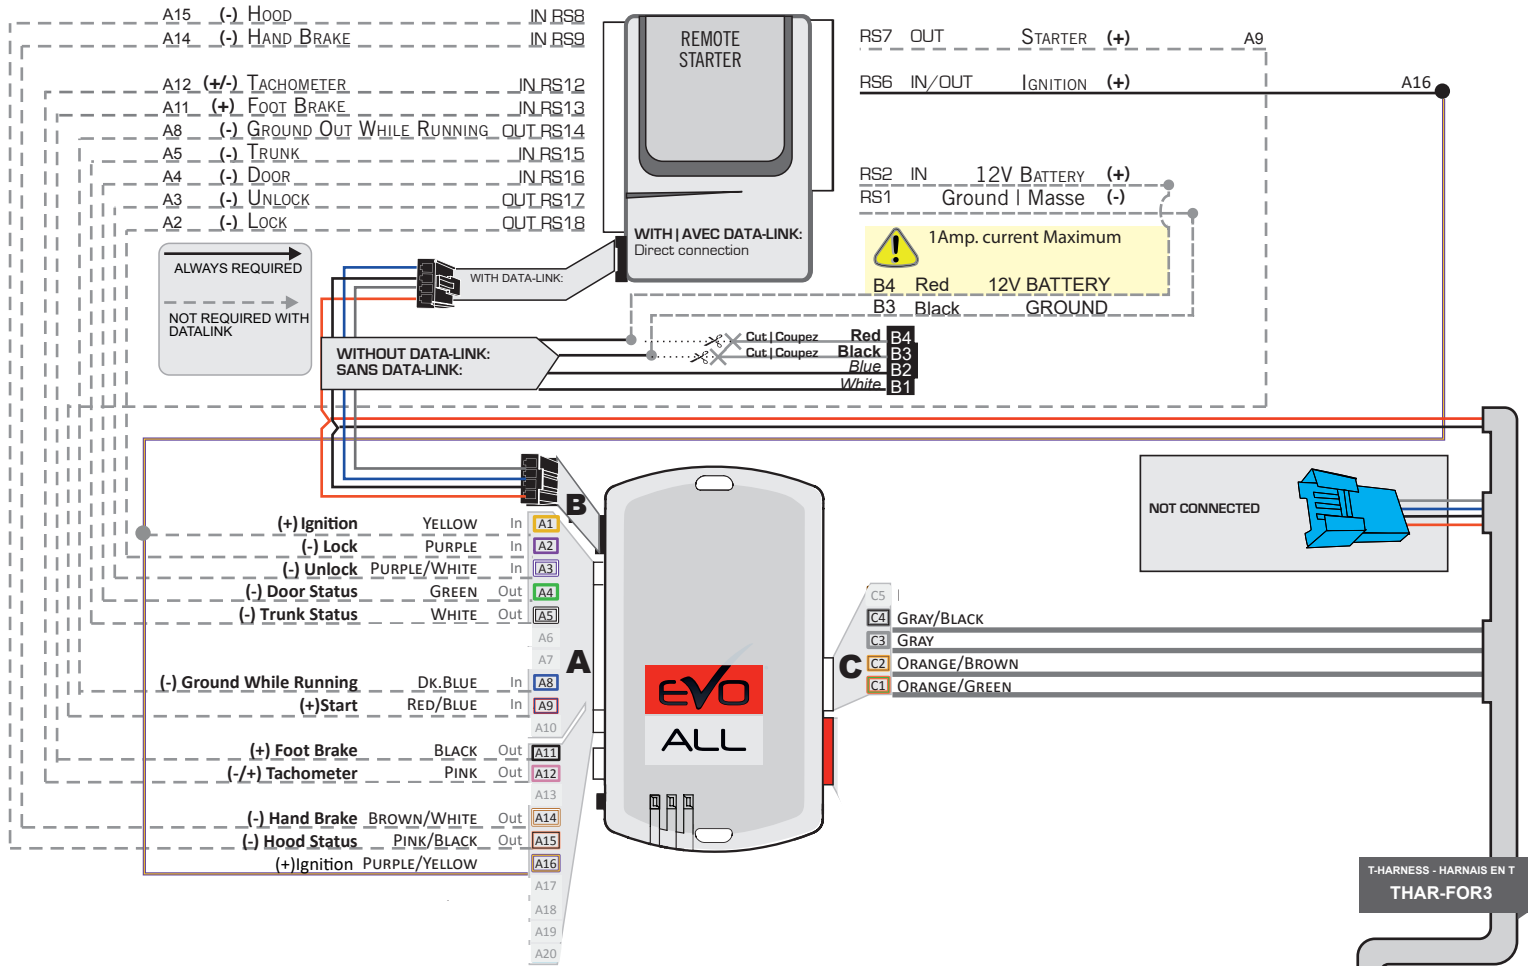

EXPLORER

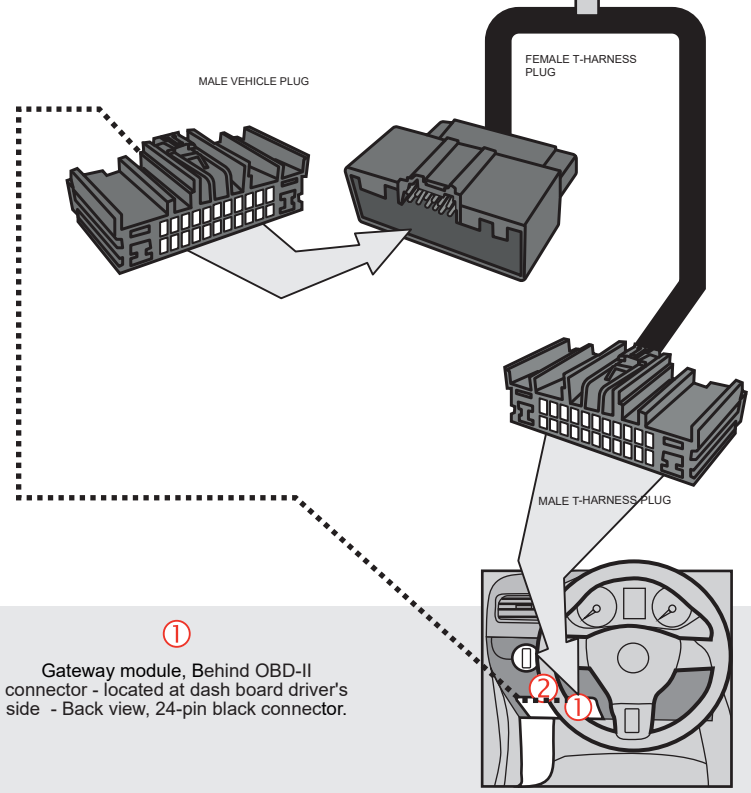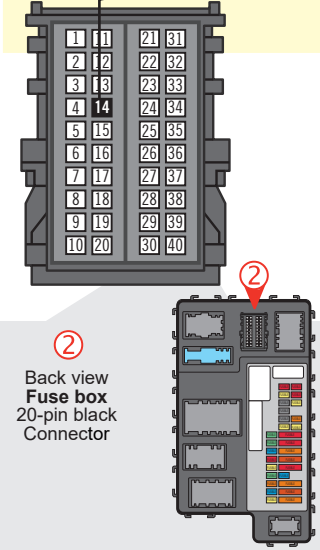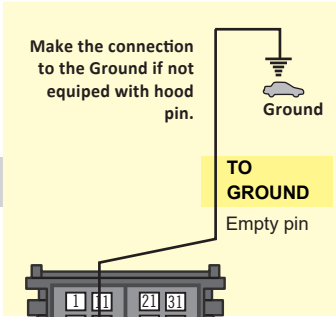




- Parts required (not included)**
- 1x **FLASH LINK UPDATER, FLASH LINK MANAGER**
SOFTWARE | PROGRAMME
 - 1x Microsoft Windows Computer with Internet connection

OR

- 1x **FLASH LINK MOBILE**
- 1x **FLASH LINK MOBILE APP**
- Smartphone Android or iOS with Internet connection
(Internet provider charges may apply)

BEFORE PROGRAMMING SET THE UNIT OPTIONS AND SAVE.


1

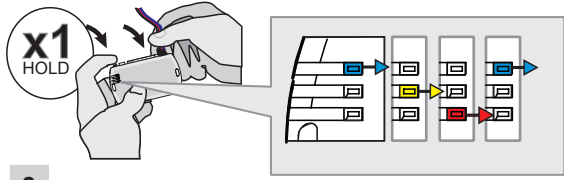

Press and hold the programming button:
Insert the 4-Pin (Data-Link) connector.

↳ The Blue, Red, Yellow and Blue & Red LEDs will alternatively illuminate.


2

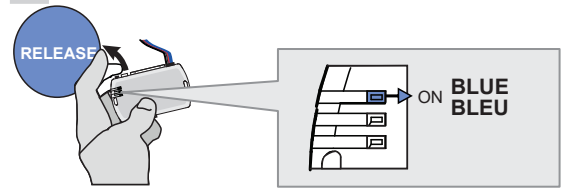

Release the programming button when the LED is BLUE.


If the LED is not solid BLUE disconnect the 4-Pin connector (Data-Link) and go back to step 1.

3

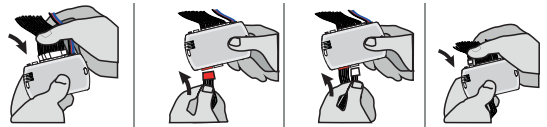

Insert the required remaining connectors.

4

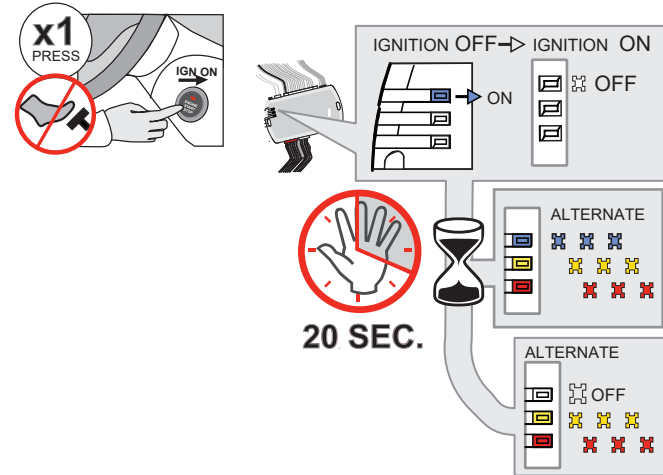

Do not press the brake pedal.
Press the Push-to-Start button once to turn on the ignition.

↳ The BLUE LED will turn OFF.


↳ The BLUE, YELLOW and RED LEDs will alternate.

Wait, at least 20 seconds, do not disconnect the modules or turn off the ignition.

↳ The RED and YELLOW LEDs will alternate.

Make sure that the DELs are flashing RED and YELLOW before continuing programming.

5

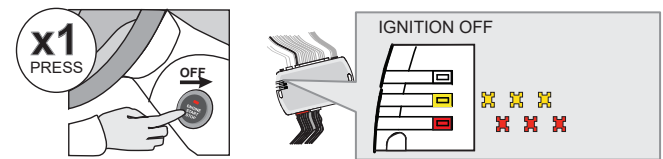

Press the Push-to-Start button once to turn off the ignition.

↳ The RED and YELLOW LEDs alternate.

KEY BYPASS PROGRAMMING PROCEDURE 2/2 |

6

Disconnect all the connectors and after the Data-Link (4-pins) connector.

7

Microsoft Windows Computer with Internet connection*

OR


Smartphone* (Internet provider charges may apply)

Use the tool: FLASH LINK UPDATER or FLASH LINK MOBILE to visit the DCryptor menu.

*Parts required (not included)

8

AFTER DCRYPTOR PROGRAMMING COMPLETED
Go back to the vehicle and **reconnect** the 4-Pin (Data-Link) connector and after, all the remaining connector.

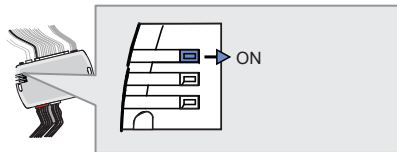

↳ The BLUE LED will turn ON.

9

IGNITION OFF → IGNITION ON

ALTERNATE

FLASH RAPIDLY

20 SEC.

Do not press the brake pedal. **Press** the Push-to-Start button once to turn on the ignition.

↳ The RED and YELLOW LEDs will turn ON.

Wait, at least 20 seconds, do not disconnect the modules or turn off the ignition.

↳ The BLUE LED will flash rapidly.

10

IGNITION ON → IGNITION OFF



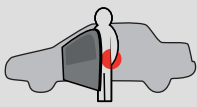

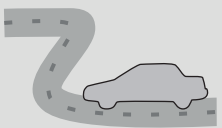
Press the Push-to-Start button once to turn off the ignition.

↳ The BLUE will turn OFF.



The module is now programmed.

REMOTE STARTER FUNCTIONALITY |

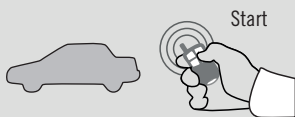 <p>Start</p> <p>All doors must be closed.</p> <p>Remote start the vehicle.</p>	 <p>UNLOCK</p> <p>Unlock the doors with either:</p> <ul style="list-style-type: none"> • The OEM remote • The remote-starter remote • Or the proximity remote 	 <p>Enter the vehicle with the SMART-KEY.</p>	 <p>DO NOT PRESS THE BRAKE PEDAL.</p> <p>Press and release the Push-to-Start button once.</p>	 <p>Press the brake pedal. The vehicle can now be put in to gear and driven.</p> <p>If the Smart-Key is not detected the vehicle will shut down.</p>
--	---	--	---	---

REGULAR & THAR-FOR3 INSTALLATION

ADDENDUM - SUGGESTED WIRING CONFIGURATION



ONLY COMPATIBLE WITH AUTOMATIC TRANSMISSION VEHICLES.



Vehicle functions supported in this diagram (functional if equipped)

VEHICLE	YEARS	Immobilizer bypass	T-Harness available (sold separately)	Lock	Unlock	Arm	Disarm	Tachometer	Door Status	Trunk Status	Hood Status*	Hand-Brake Status	Foot-Brake Status	Active OEM Remote Start
FORD Explorer Interceptor	2020	•	•	•	•	•	•	•	•	•	•	•	•	•

	COMPATIBLE MODULE REQUIRED:	QR CODE ON THE LABEL MANUFACTURED AFTER: 2019	FIRMWARE VERSION 58.[01] MINIMUM	To add the firmware version and the options, use the FLASH LINK UPDATER or FLASH LINK MOBILE tool, sold separately.
		2019		

	Program bypass option:	UNIT OPTION	DESCRIPTION
		C1	OEM Remote status (Lock/Unlock) monitoring
IF THE VEHICLE IS NOT EQUIPPED WITH FUNCTIONAL HOOD PIN:		A11	<input type="checkbox"/> OFF Hood trigger (Output Status).

MANDATORY INSTALL

*HOOD PIN



HOOD STATUS: THE HOOD PIN SWITCH MUST BE INSTALLED IF THE VEHICLE CAN BE REMOTE STARTED WITH THE HOOD OPEN, SET FUNCTION A11 TO OFF.

A11

OFF

Notice: the installation of safety elements are mandatory. The hood pin is an essential security element and must be installed.

THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.

DESCRIPTION |

Parts required (Not included) **PAGE**

WIRE TO WIRE DIAGRAM


AUTOMATIC TRANSMISSION	1x 7.5 Amp. fuse	Page 3
------------------------	------------------	--------

THARNESS DIAGRAM


THARNESS THAR-FOR3 AUTOMATIC TRANSMISSION	1x THAR-FOR3	Page 4
---	--------------	--------




① Gateway module, Behind OBD-II connector - located behind driver side fusebox

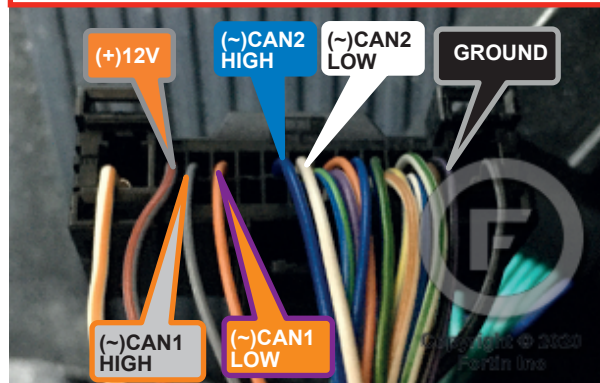

AUTOMATIC TRANSMISSION WIRING CONNECTION |

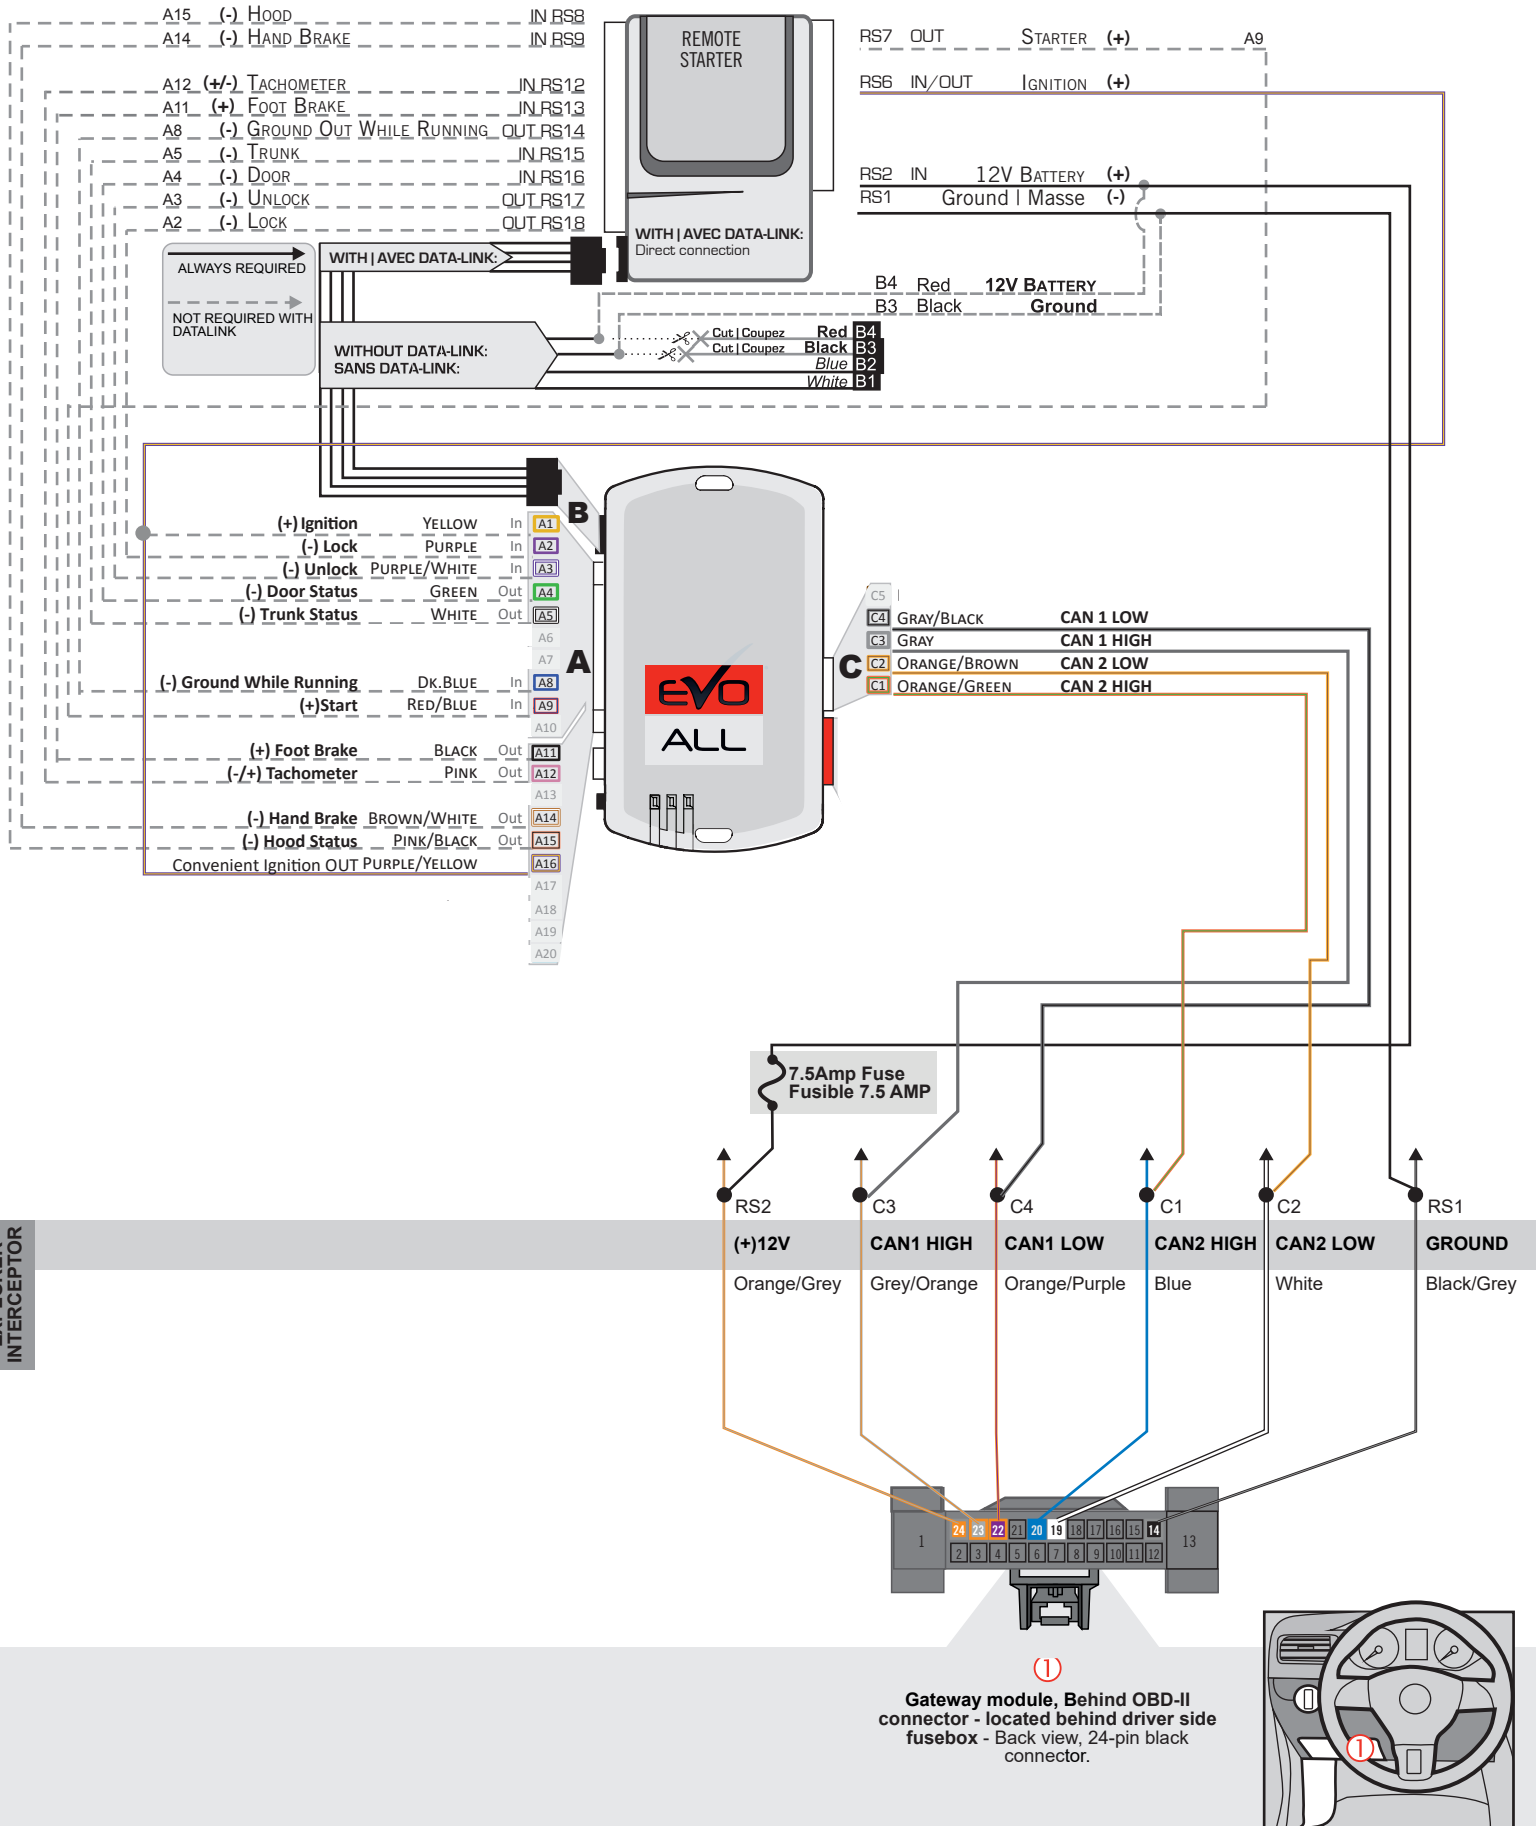

THAR-FOR3 | T-HARNESS - AUTOMATIC TRANSMISSION |

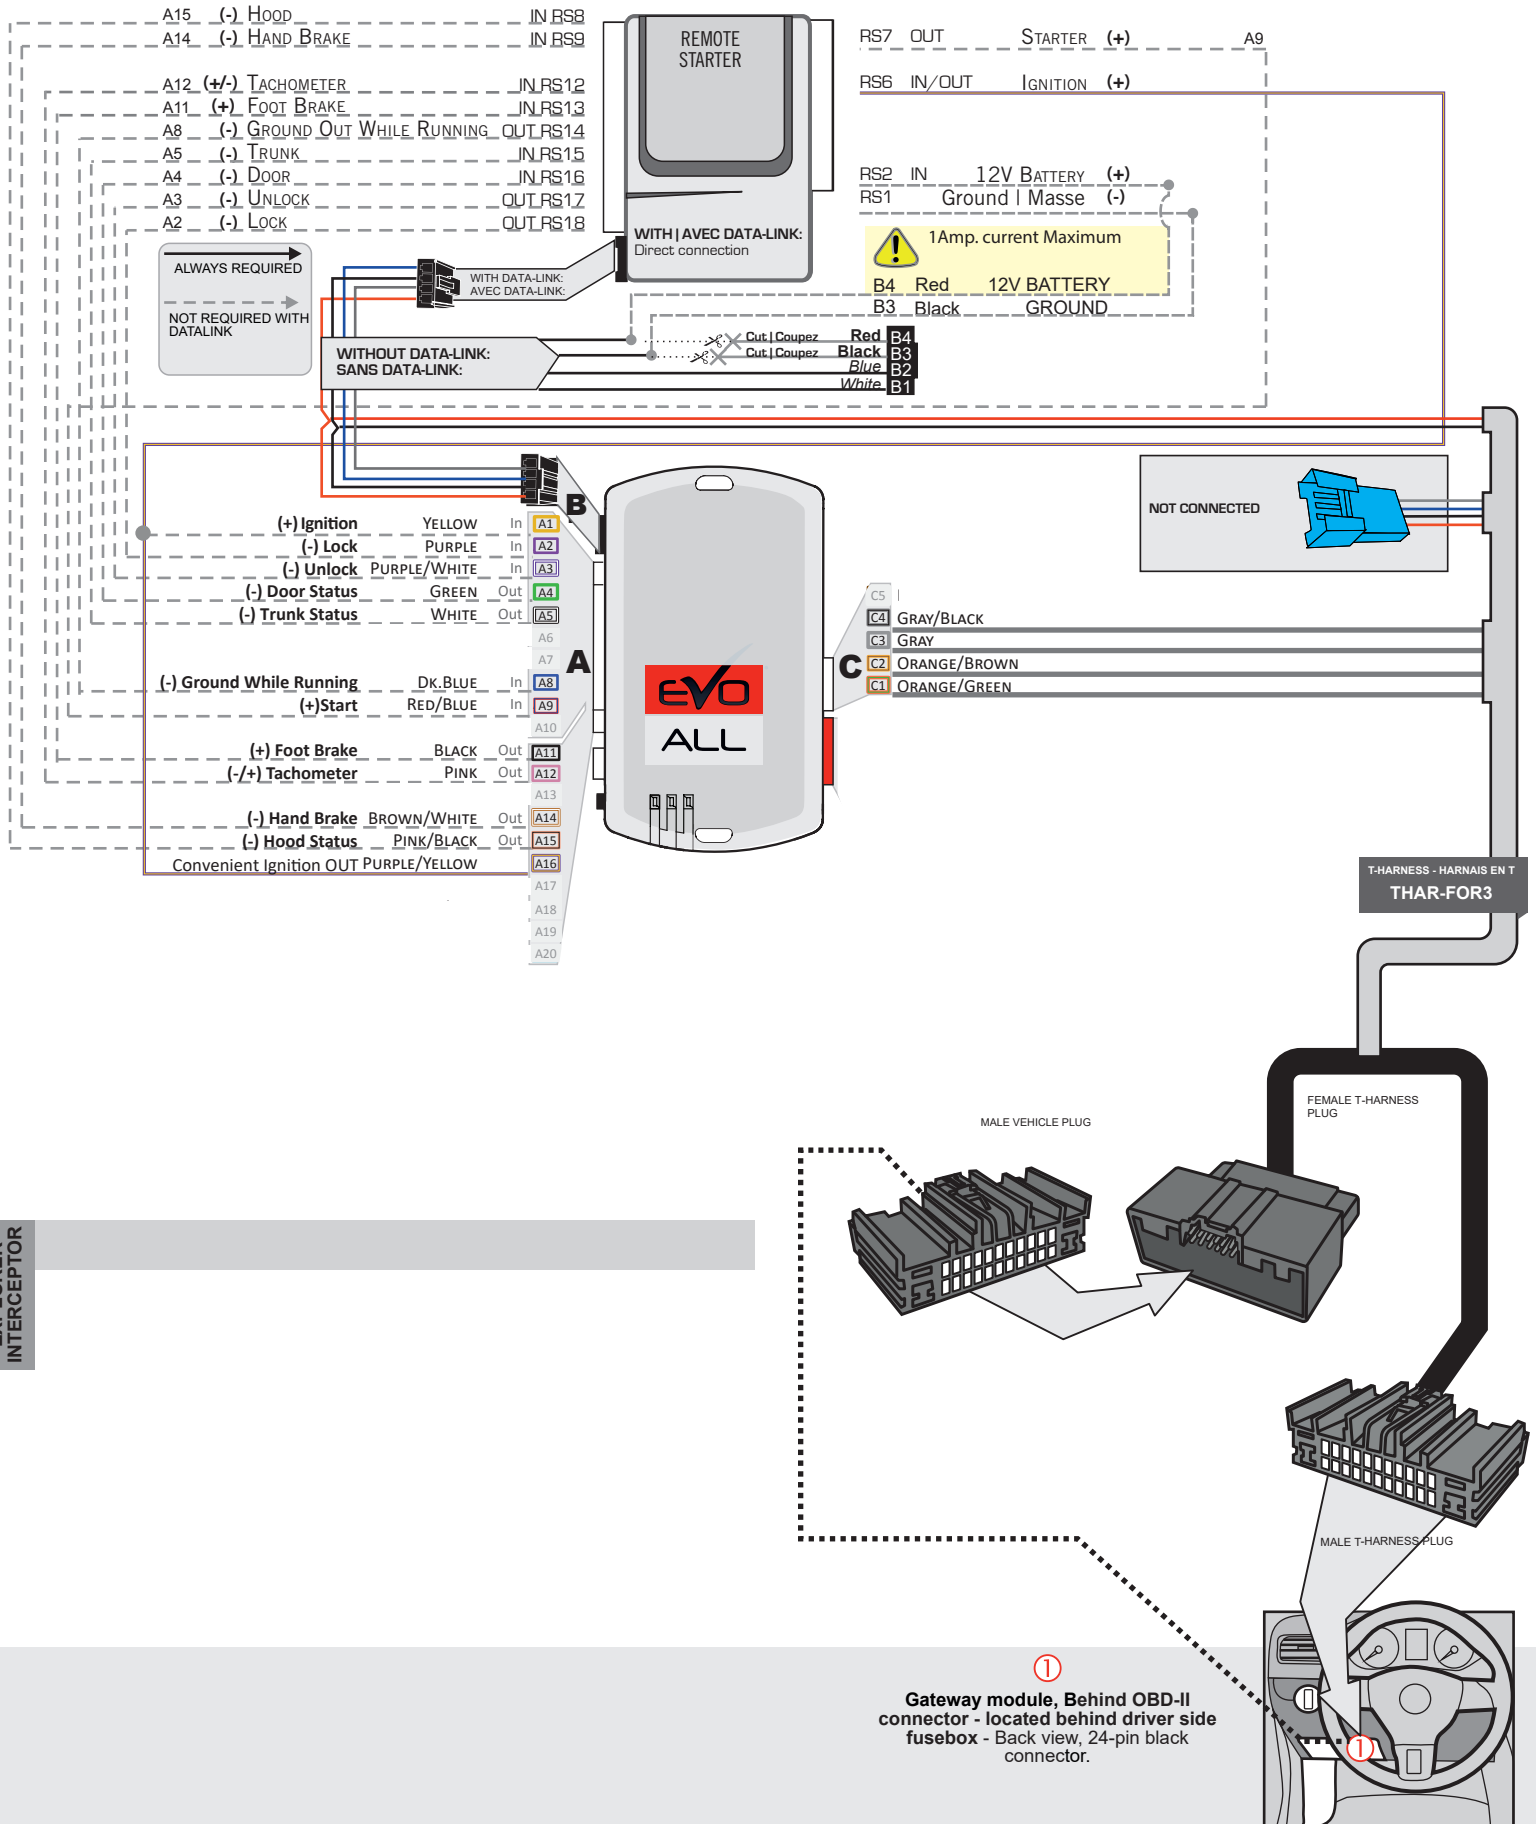



Parts required (not included)


- 1x FLASH LINK UPDATER, SOFTWARE | PROGRAMME
- 1x FLASH LINK MANAGER
- 1x Microsoft Windows Computer with Internet connection

OR

- 1x FLASH LINK MOBILE
- 1x FLASH LINK MOBILE APP
- Smartphone Android or iOS with Internet connection (Internet provider charges may apply)

BEFORE PROGRAMMING SET THE UNIT OPTIONS AND SAVE.


1

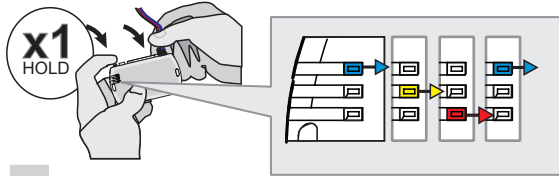

Press and hold the programming button:
Insert the 4-Pin (Data-Link) connector.

↳ The Blue, Red, Yellow and Blue & Red LEDs will alternatively illuminate.


2

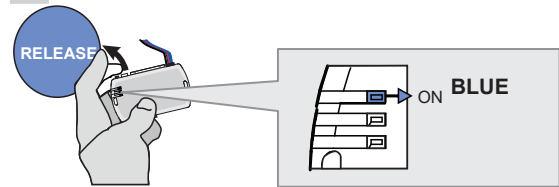

Release the programming button when the LED is BLUE.


If the LED is not solid BLUE disconnect the 4-Pin connector (Data-Link) and go back to step 1.

3

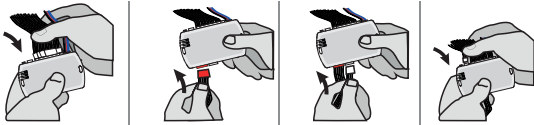

Insert the required remaining connectors.

4

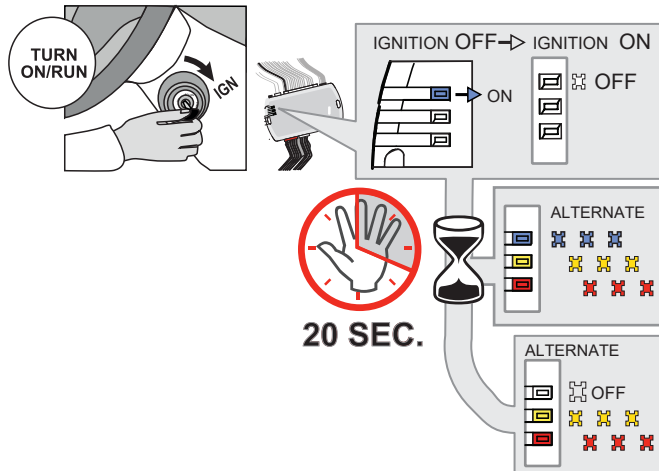

Turn the key to the Ignition ON/RUN position.

 
↳ The BLUE LED will turn OFF.

↳ The BLUE, YELLOW and RED LEDs will alternate.


Wait, at least 20 seconds, do not disconnect the modules or turn off the ignition.

↳ The RED and YELLOW LEDs will alternate.

Make sure that the DELs are flashing RED and YELLOW before continuing programming.



5

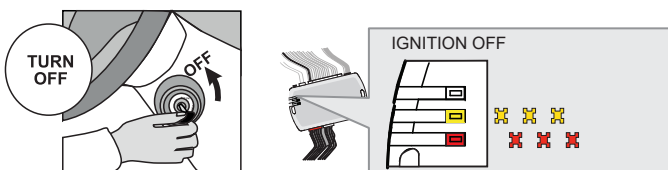


Turn the key to the OFF position.

↳ The RED and YELLOW LEDs alternate.


KEY BYPASS PROGRAMMING PROCEDURE 2/2 |

16

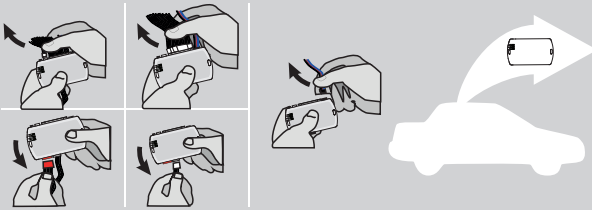

Disconnect all the connectors and after the Data-Link (4-pins) connector.


17

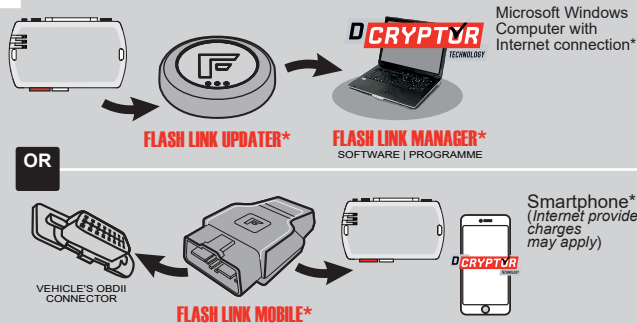


Use the tool: FLASH LINK UPDATER or FLASH LINK MOBILE to visit the DCRYPTOR menu.

*Parts required (not included)

18

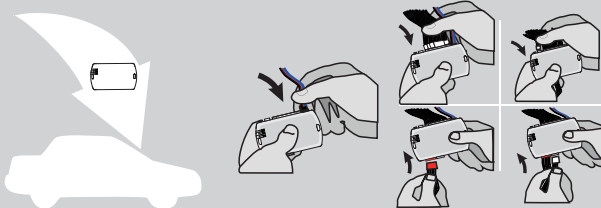


AFTER DCRYPTOR PROGRAMMING COMPLETED Go back to the vehicle and reconnect the 4-Pin (Data-Link) connector and after, all the remaining connector.

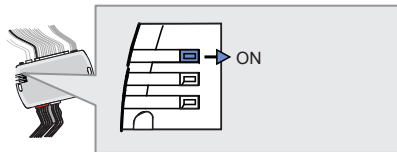

The BLUE LED will turn ON.

9

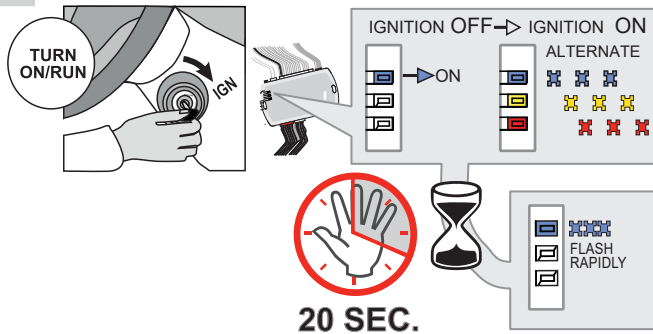


Turn the key to the Ignition ON/RUN position.

The RED and YELLOW LEDs will turn ON.

Wait, at least 20 seconds, do not disconnect the modules or turn off the ignition.

The BLUE LED will flash rapidly.

10

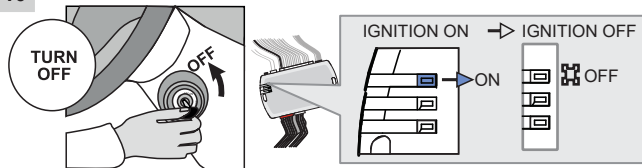

Turn the key to the OFF position.

The BLUE will turn OFF.



The module is now programmed.

REMOTE STARTER FUNCTIONALITY |



All doors must be closed.



Remote start the vehicle.



Unlock the doors with the remote-starter remote or the OEM remote.



Insert and Turn the key to the Ignition ON/RUN position.



Press the brake pedal.



The vehicle can now be put in to gear and driven.

REGULAR & THAR-FOR3 INSTALLATION

ADDENDUM - SUGGESTED WIRING CONFIGURATION




ONLY COMPATIBLE WITH AUTOMATIC TRANSMISSION VEHICLES.



Vehicle functions supported in this diagram (functional if equipped)

VEHICLE	YEARS	Immobilizer bypass	Lock	Unlock	Arm	Disarm	RAP Disable	Parking Lights	Tachometer	Heated seats	Heated Mirrors	Rear defrost	Door Status	Trunk Status	Hood Status*	Hand-Brake Status	Foot-Brake Status	Active OEM Remote Start
FORD																		
F-150	Key 2020	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
F-250	Key 2020	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
F-350	Key 2020	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
F-450	Key 2020	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•

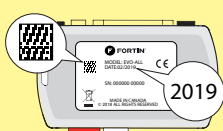

COMPATIBLE MODULE REQUIRED:

QR CODE ON THE LABEL
MANUFACTURED AFTER: 2019

FIRMWARE VERSION

58.[02]
MINIMUM

To add the firmware version and the options, use the **FLASH LINK UPDATER** or **FLASH LINK MOBILE** tool, sold separately.



Program bypass option:

UNIT OPTION

C1

DESCRIPTION

OEM Remote status (Lock/Unlock) monitoring

IF THE VEHICLE IS NOT EQUIPPED WITH FUNCTIONAL HOOD PIN:

A11

OFF

Hood trigger (Output Status).

NOTES

The vehicles OEM remote and SmartKey are still operable during remote start.

**Heated seats The heated seats and rear defrost activate automatically when it cold.

***Parking Lights The parking Lights at remote start only.



The vehicle must be equipped with the OEM remote with the door locks.

MANDATORY INSTALL

*HOOD PIN



HOOD STATUS: THE HOOD PIN SWITCH MUST BE INSTALLED IF THE VEHICLE CAN BE REMOTE STARTED WITH THE HOOD OPEN, SET FUNCTION A11 TO OFF.

A11

OFF

Notice: the installation of safety elements are mandatory. The hood pin is an essential security element and must be installed.

THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.

DESCRIPTION

Parts required (Not included) **PAGE**

WIRE TO WIRE DIAGRAM


AUTOMATIC TRANSMISSION	1x 7.5 Amp. fuse	Page 3
------------------------	------------------	--------

THARNESS DIAGRAM

THARNESS THAR-FOR3 AUTOMATIC TRANSMISSION	1x THAR-FOR3	Page 4
---	--------------	--------




① Gateway module, located at dash board driver's side,

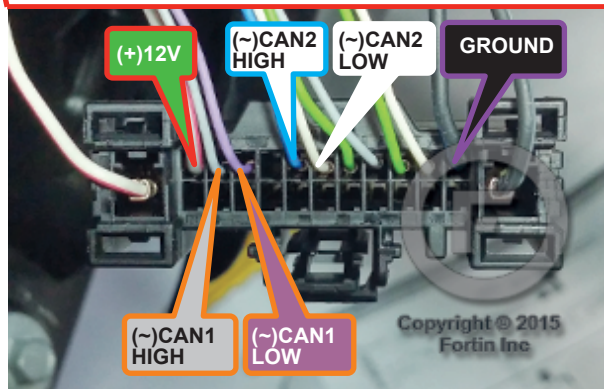




② Under the hood If not equipped with hood pin.



AUTOMATIC TRANSMISSION WIRING CONNECTION

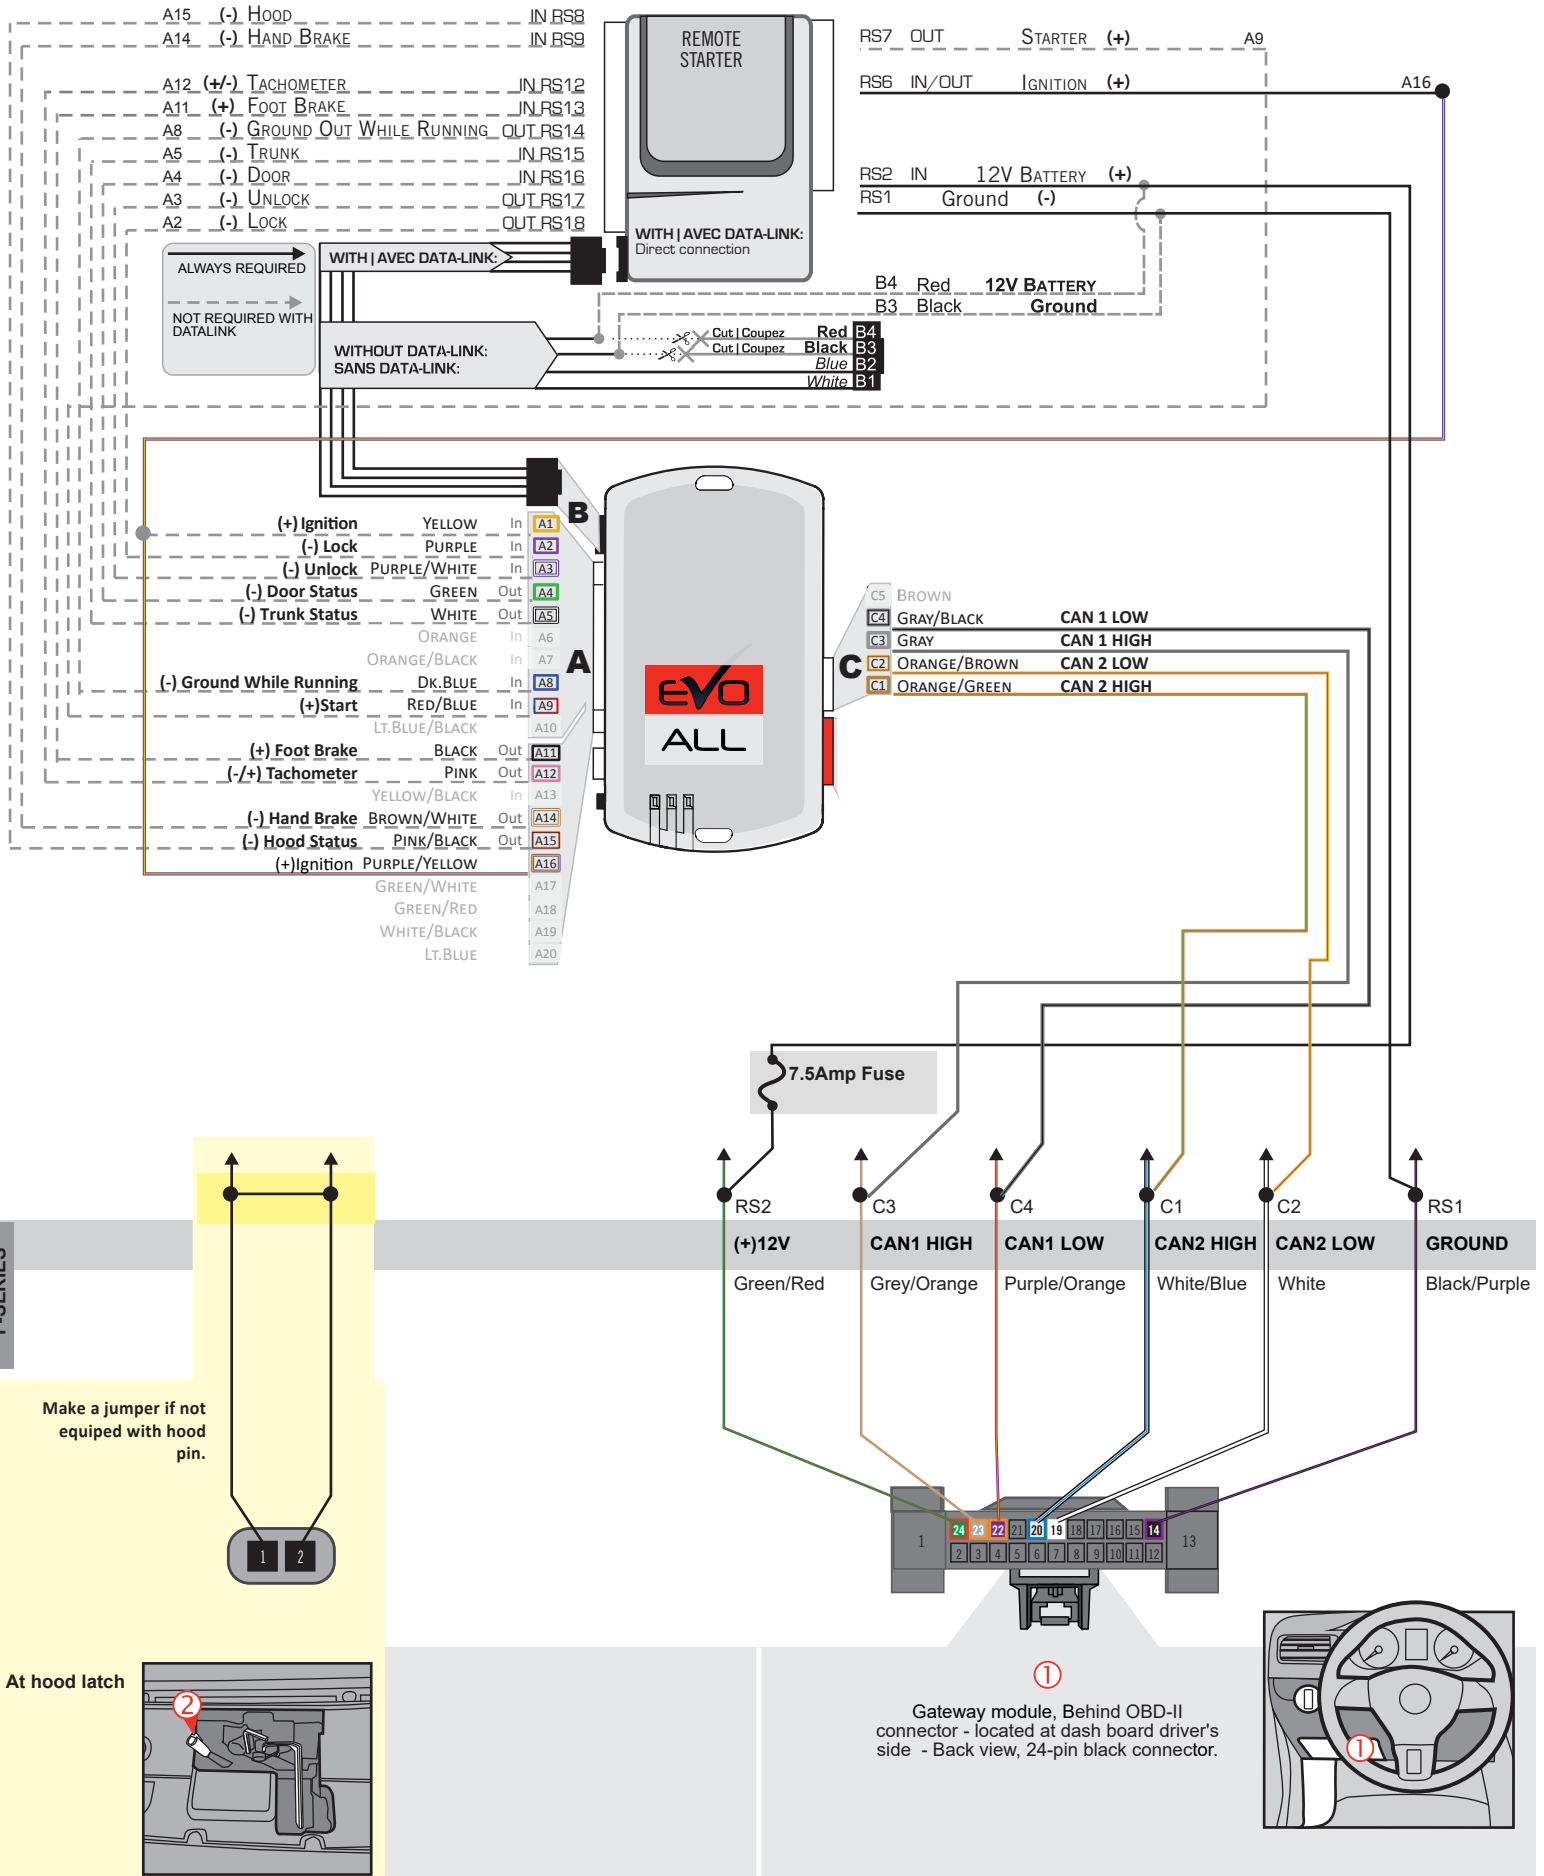

THAR-FOR3 | T-HARNESS - AUTOMATIC TRANSMISSION

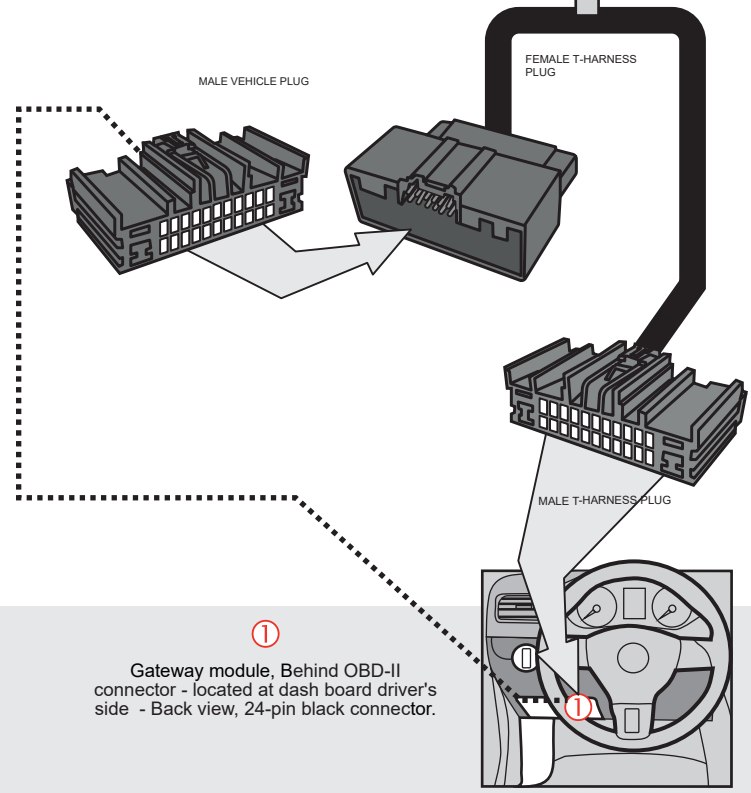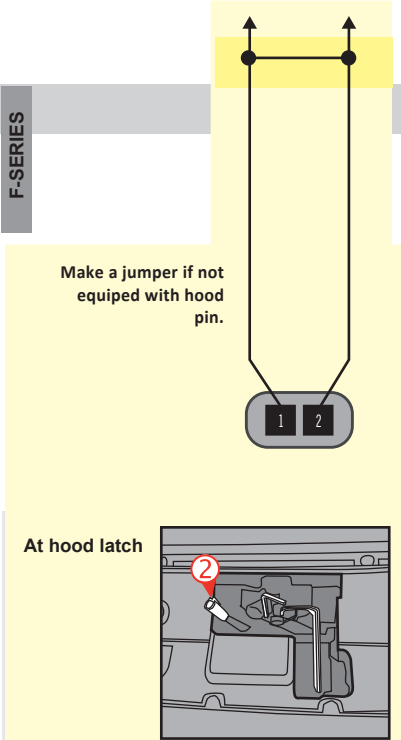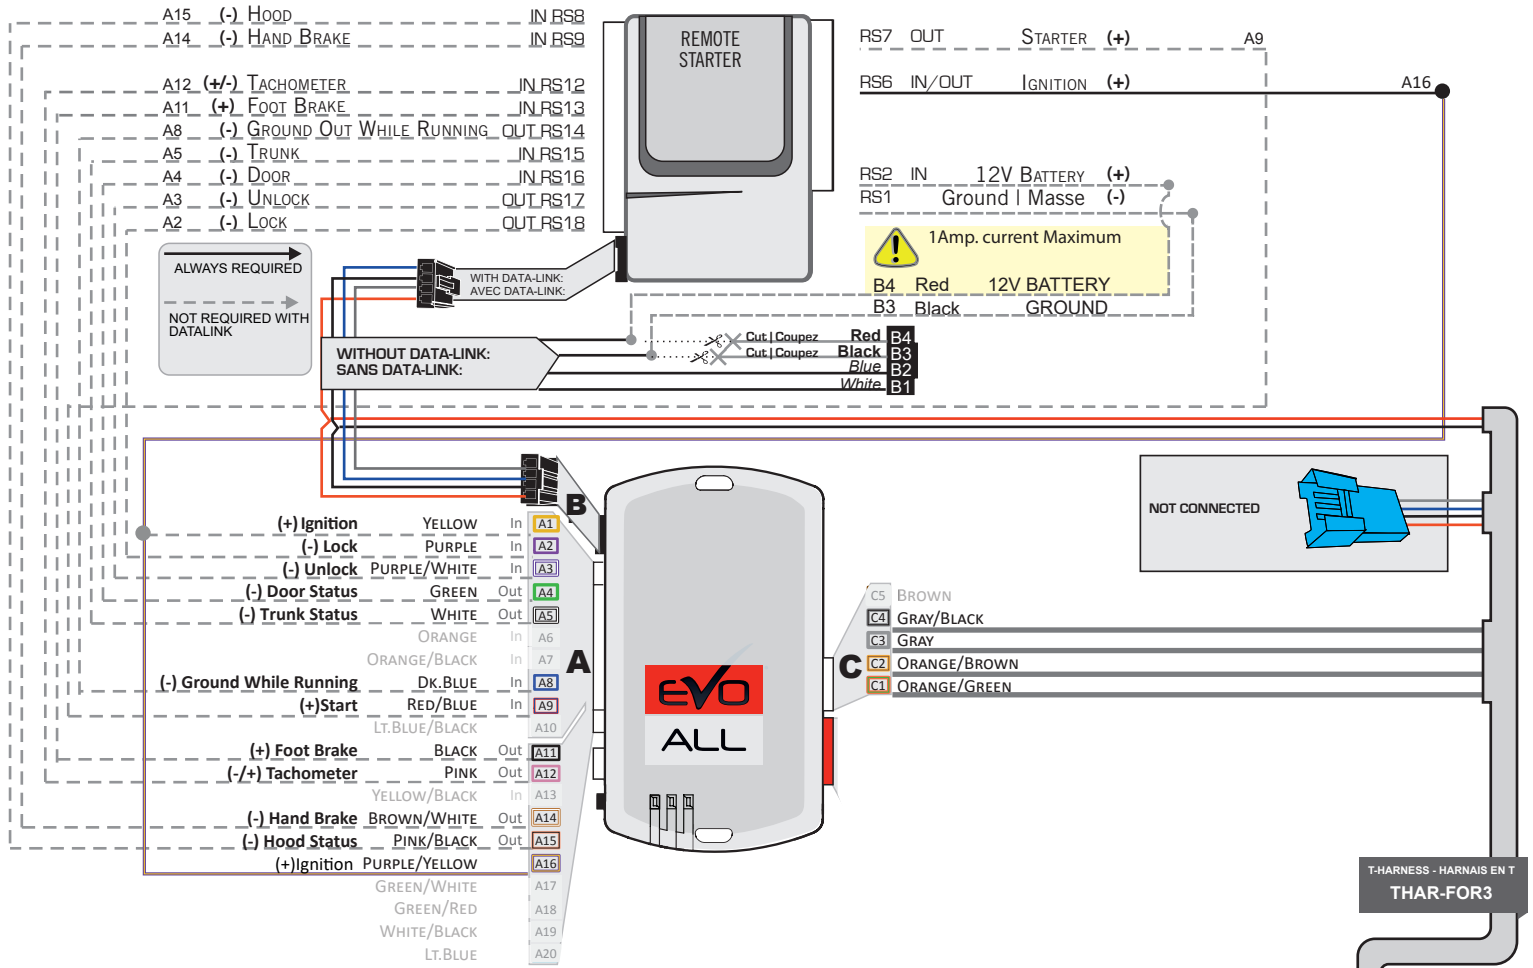

DCRYPTOR PROGRAMMING PROCEDURE



Parts required (not included)


- 1x **FLASH LINK UPDATER,**
- 1x **FLASH LINK MANAGER**
SOFTWARE | PROGRAMME
- 1x Microsoft Windows Computer with Internet connection

OR
OU

- 1x **FLASH LINK MOBILE**
- 1x **FLASH LINK MOBILE APP**
- Smartphone Android or iOS with Internet connection
(Internet provider charges may apply)

BEFORE PROGRAMMING SET THE UNIT OPTIONS AND SAVE.


1

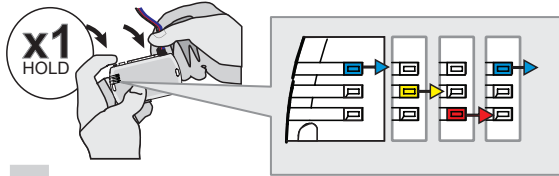

Press and hold the programming button:
Insert the 4-Pin (Data-Link) connector.


↳ The Blue, Red, Yellow and Blue & Red LEDs will alternatively illuminate.

2

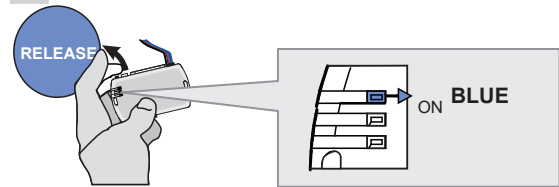


Release the programming button when the LED is BLUE.

 If the LED is not solid BLUE disconnect the 4-Pin connector (Data-Link) and go back to step 1.




3

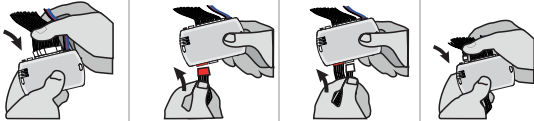

Insert the required remaining connectors.

4

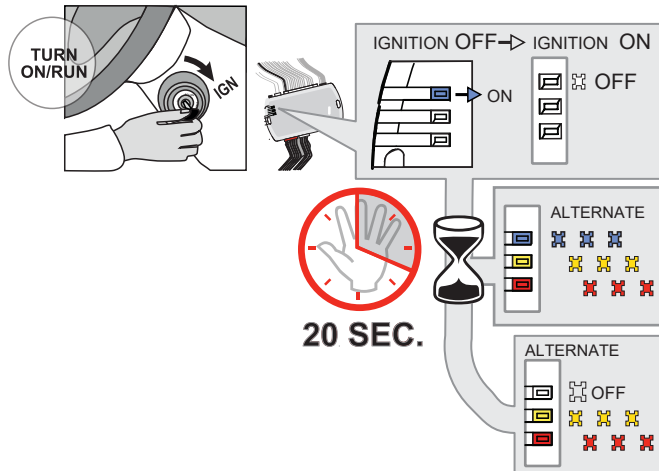

Turn the key to the Ignition ON/RUN position.

 
↳ The BLUE LED will turn OFF.

↳ The BLUE, YELLOW and RED LEDs will alternate.


Wait, at least 20 seconds, do not disconnect the modules or turn off the ignition.

↳ The RED and YELLOW LEDs will alternate.

Make sure that the DELs are flashing RED and YELLOW before continuing programming.



5

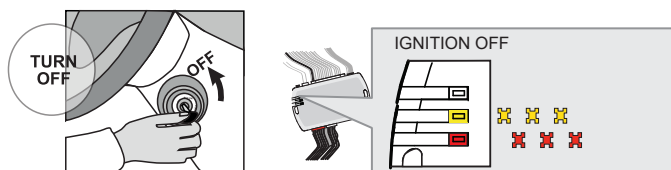


Turn the key to the OFF position.

↳ The RED and YELLOW LEDs alternate.


KEY BYPASS PROGRAMMING PROCEDURE 2/2

6

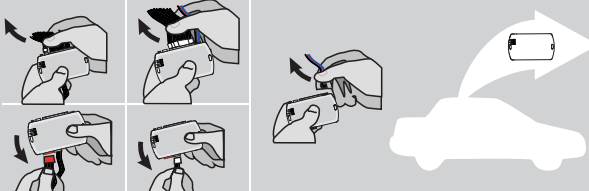

Disconnect all the connectors and after the Data-Link (4-pins) connector.

7



Microsoft Windows Computer with Internet connection*

FLASH LINK UPDATER* **FLASH LINK MANAGER***
SOFTWARE | PROGRAMME

OR


Smartphone* (Internet provider charges may apply)

VEHICLE'S OBDII CONNECTOR **FLASH LINK MOBILE***

Use the tool: FLASH LINK UPDATER or FLASH LINK MOBILE to visit the DCRYPTOR menu.

*Parts required (not included)

8

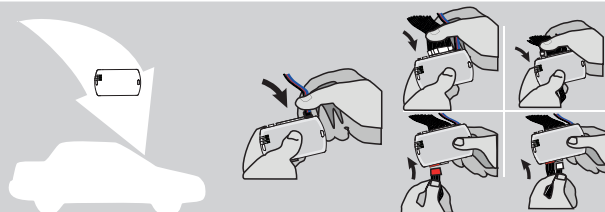


AFTER DCRYPTOR PROGRAMMING COMPLETED
Go back to the vehicle and reconnect the 4-Pin (Data-Link) connector and after, all the remaining connector.



↳ The BLUE LED will turn ON.

9

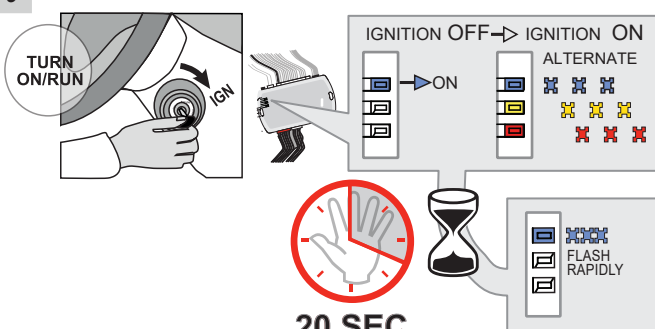

TURN ON/RUN

IGNITION OFF → IGNITION ON

ALTERNATE

↳ The RED and YELLOW LEDs will turn ON.


↳ The BLUE LED will flash rapidly.

Wait, at least 20 seconds, do not disconnect the modules or turn off the ignition.

20 SEC.

FLASH RAPIDLY


10

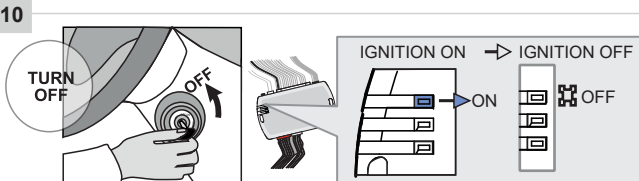

TURN OFF

IGNITION ON → IGNITION OFF

↳ The BLUE will turn OFF.



The module is now programmed.

REMOTE STARTER FUNCTIONALITY



All doors must be closed.



Remote start the vehicle.



Unlock the doors with the remote-starter remote or the OEM remote.



Insert and Turn the key to the Ignition ON/RUN position.



Press the brake pedal.



The vehicle can now be put in to gear and driven.

REGULAR & THAR-FOR3 INSTALLATION

ADDENDUM - SUGGESTED WIRING CONFIGURATION




ONLY COMPATIBLE WITH AUTOMATIC TRANSMISSION VEHICLES.



Vehicle functions supported in this diagram (functional if equipped)

VEHICLE	YEARS	Immobilizer bypass	Lock	Unlock	Arm	Disarm	RAP Disable	Parking Lights	Tachometer	Heated seats	Heated Mirrors	Rear defrost	Door Status	Trunk Status	Hood Status*	Hand-Brake Status	Foot-Brake Status	Active OEM Remote Start
FORD																		
F-150	Push-to-start 2020	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
F-250	Push-to-start 2020	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
F-350	Push-to-start 2020	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
F-450	Push-to-start 2020	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•

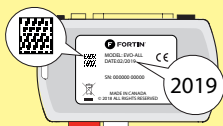

COMPATIBLE MODULE REQUIRED:

QR CODE ON THE LABEL
MANUFACTURED AFTER: 2019

FIRMWARE VERSION

58.[02]
MINIMUM

To add the firmware version and the options, use the **FLASH LINK UPDATER** or **FLASH LINK MOBILE** tool, sold separately.



Program bypass option:

UNIT OPTION

DESCRIPTION

C1

OEM Remote status (Lock/Unlock) monitoring

D6

Push-to-Start

IF THE VEHICLE IS NOT EQUIPPED WITH FUNCTIONAL HOOD PIN:

A11

OFF

Hood trigger (Output Status).

NOTES

The vehicles OEM remote and SmartKey are still operable during remote start.

**Heated seats The heated seats and rear defrost activate automatically when it cold.

***Parking Lights The parking Lights at remote start only.

MANDATORY INSTALL

*HOOD PIN



HOOD STATUS: THE HOOD PIN SWITCH MUST BE INSTALLED IF THE VEHICLE CAN BE REMOTE STARTED WITH THE HOOD OPEN, SET FUNCTION A11 TO OFF.

A11

OFF

Notice: the installation of safety elements are mandatory. The hood pin is an essential security element and must be installed.

THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.

DESCRIPTION | DESCRIPTION

Parts required (Not included) **PAGE**

WIRE TO WIRE DIAGRAM


AUTOMATIC TRANSMISSION	1x 7.5 Amp. fuse	Page 3
------------------------	------------------	--------

THARNESS DIAGRAM

THARNESS THAR-FOR3 AUTOMATIC TRANSMISSION	1x THAR-FOR3	Page 4
---	--------------	--------




① Gateway module, located at dash board driver's side,

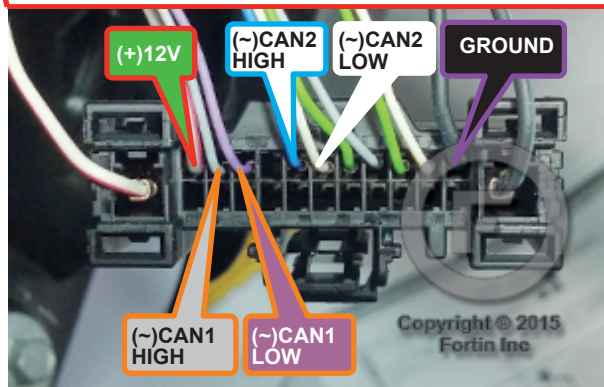




② Under the hood If not equipped with hood pin.



AUTOMATIC TRANSMISSION WIRING CONNECTION |

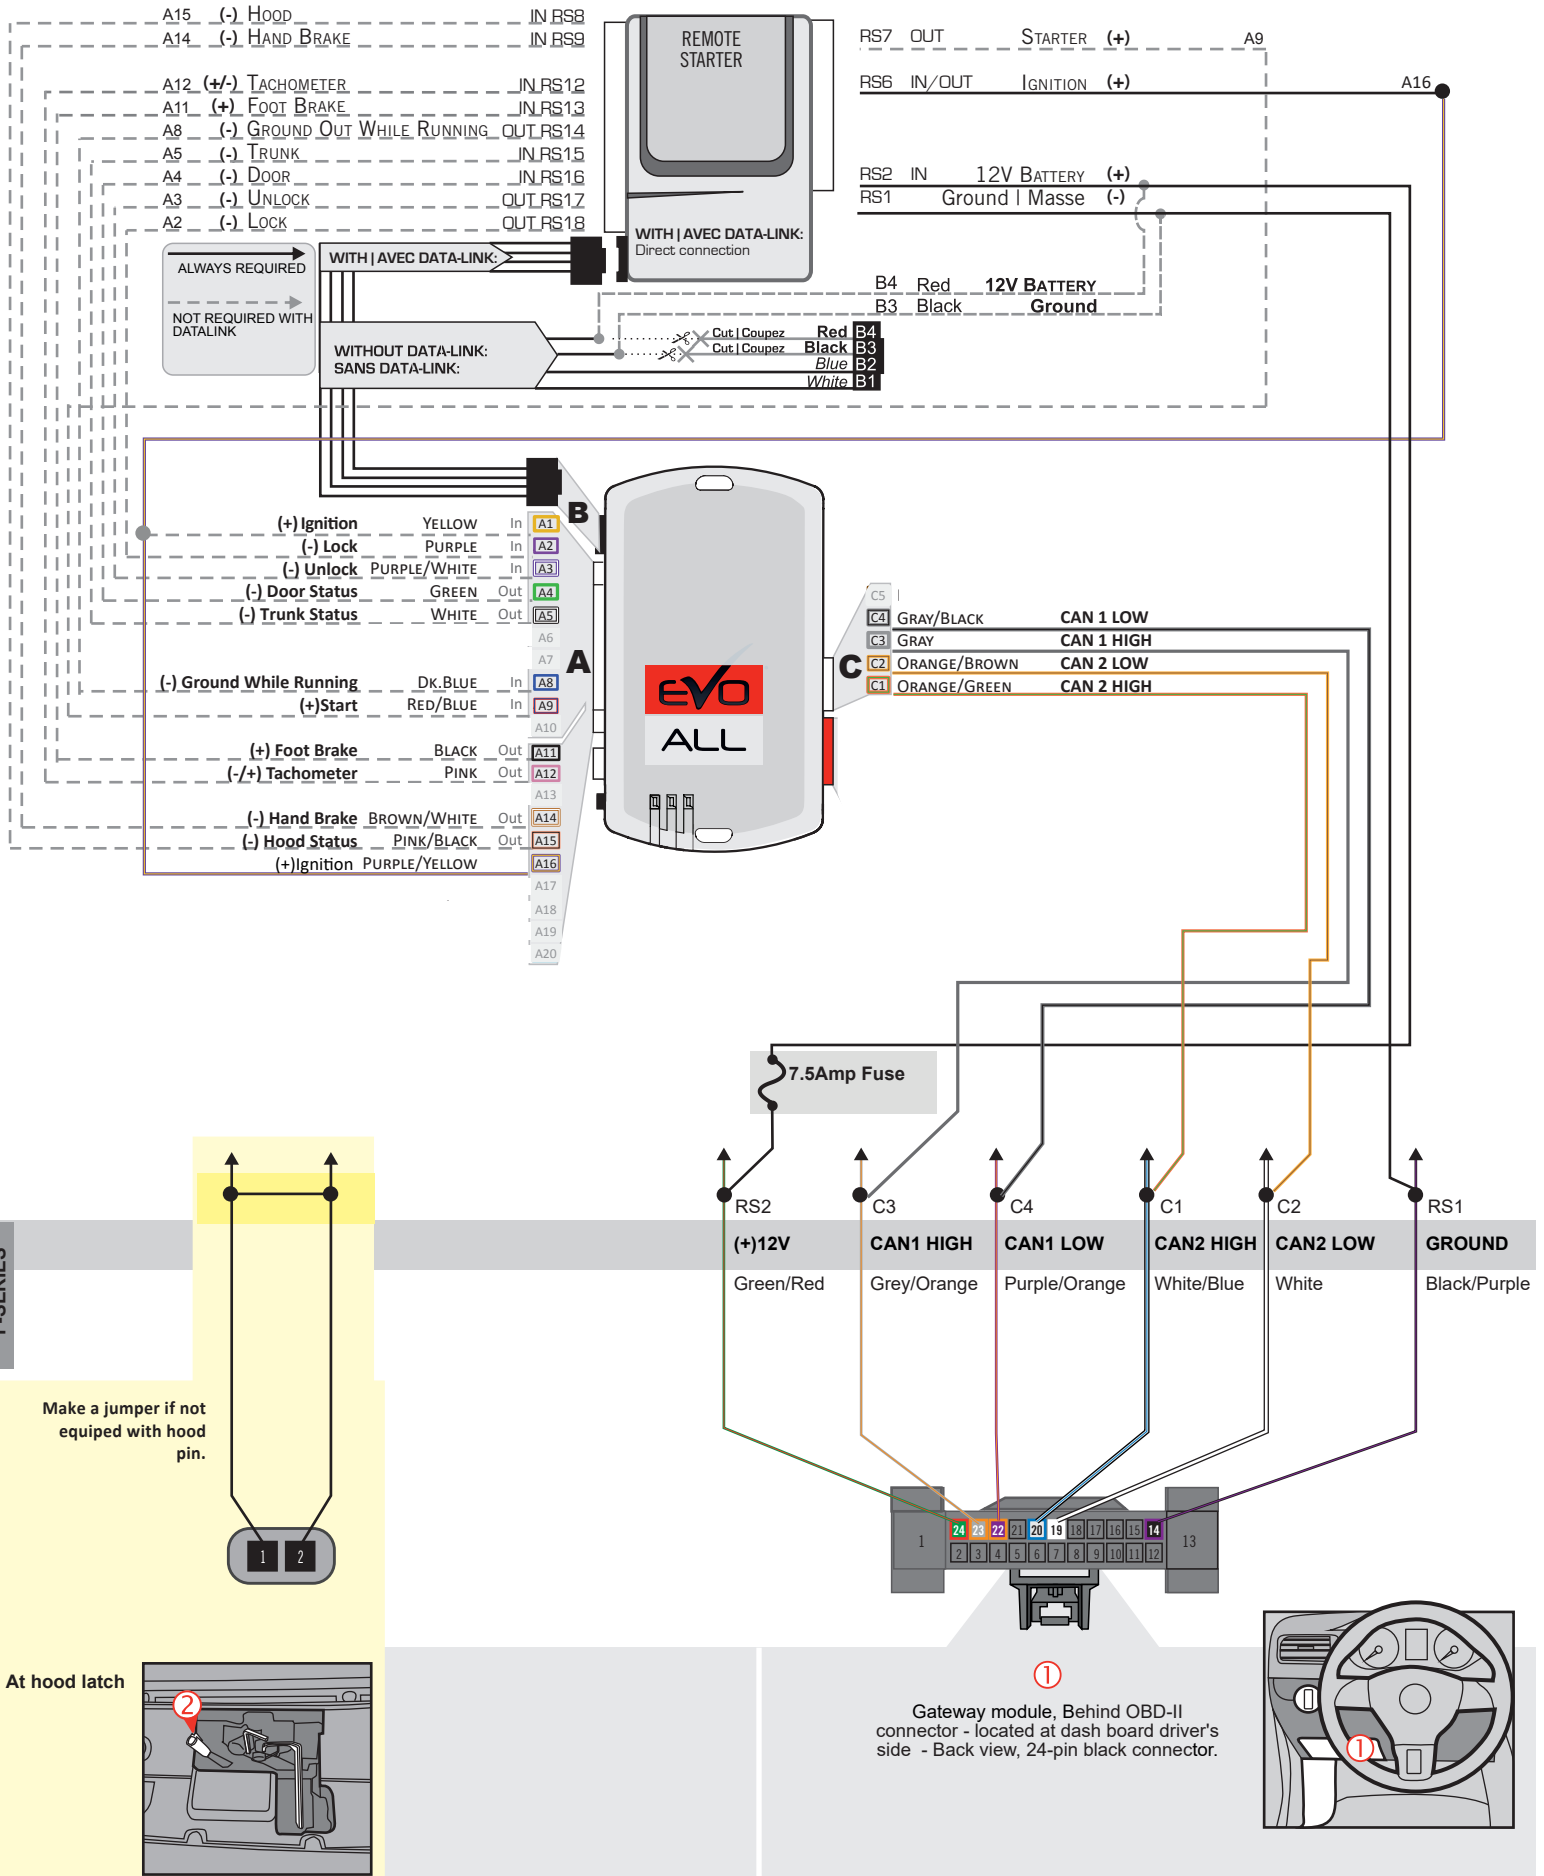

THAR-FOR3 | T-HARNESS - AUTOMATIC TRANSMISSION |

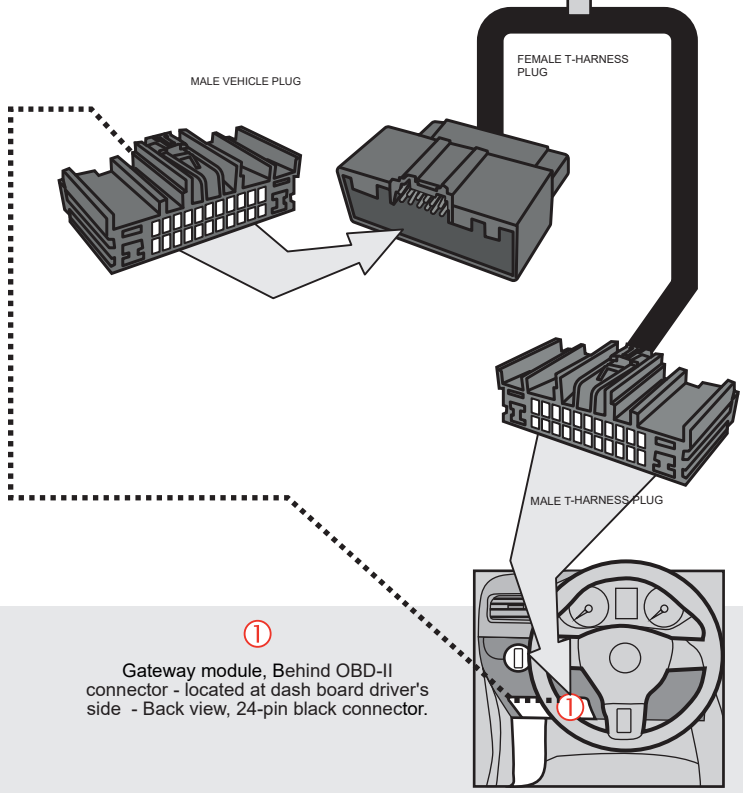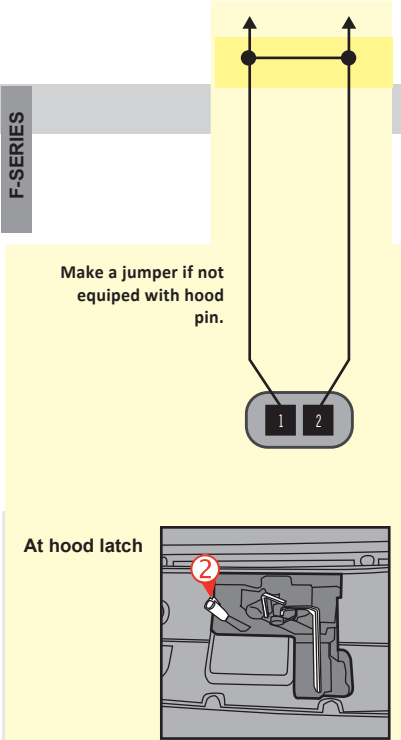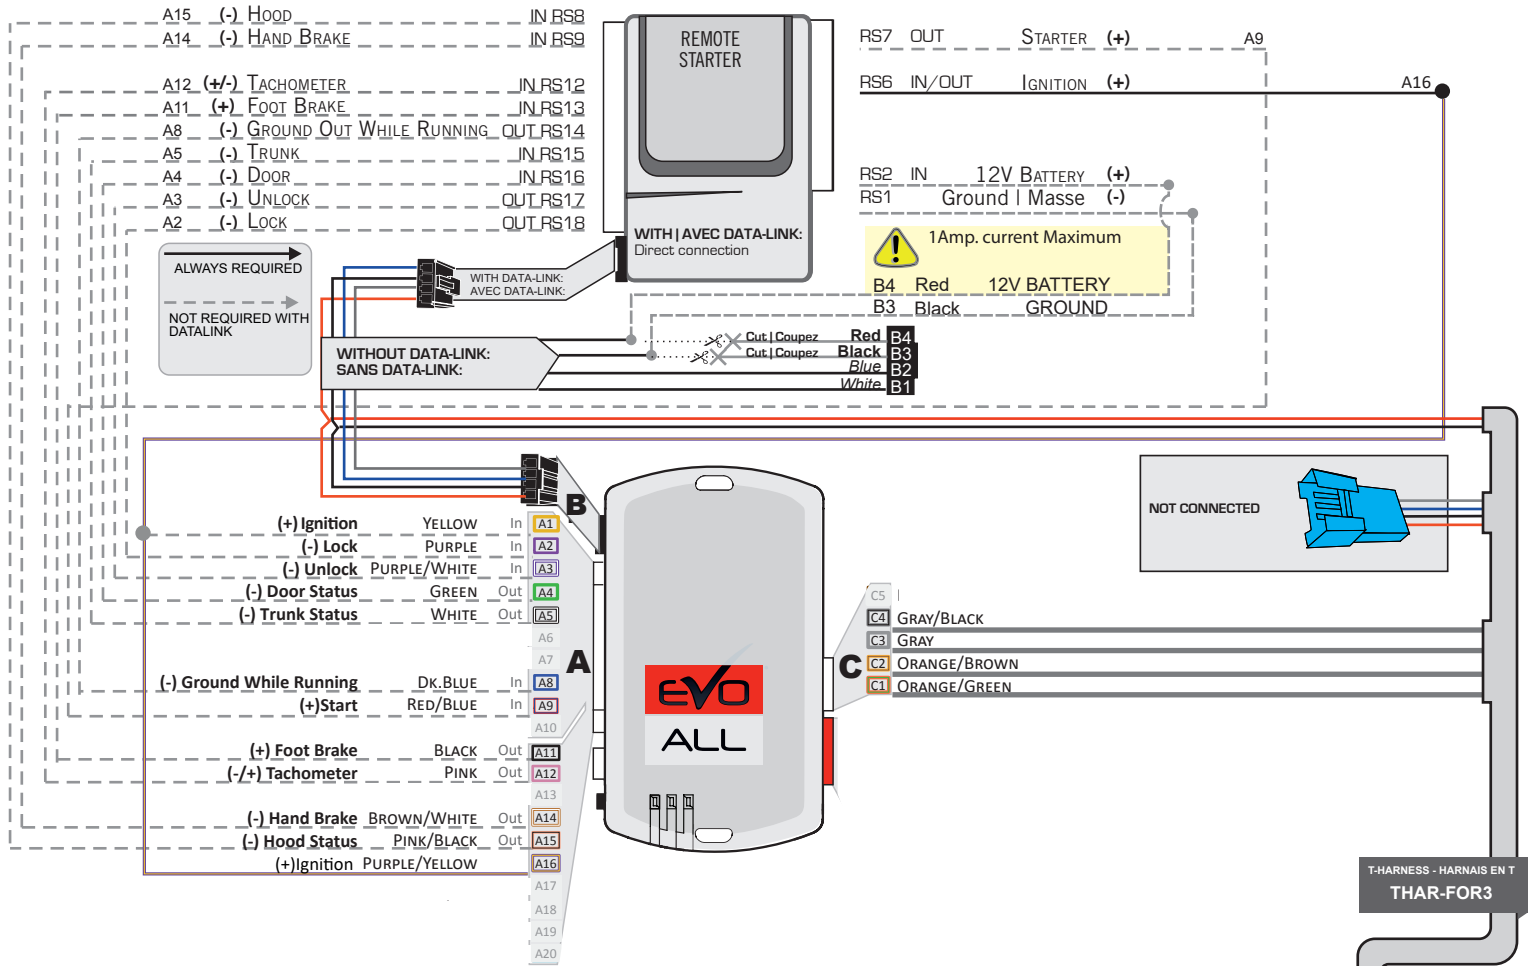




- Parts required (not included)**
- 1x **FLASH LINK UPDATER,**
 - 1x **FLASH LINK MANAGER**
SOFTWARE | PROGRAMME
 - 1x Microsoft Windows Computer with Internet connection

OR

- 1x **FLASH LINK MOBILE**
- 1x **FLASH LINK MOBILE APP**
- Smartphone Android or iOS with Internet connection
(Internet provider charges may apply)

BEFORE PROGRAMMING SET THE UNIT OPTIONS AND SAVE.


1

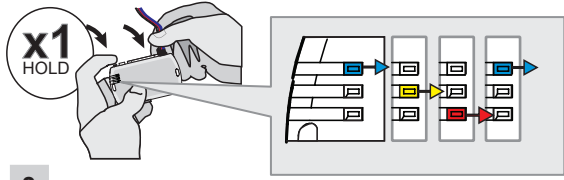

Press and hold the programming button:
Insert the 4-Pin (Data-Link) connector.

↳ The Blue, Red, Yellow and Blue & Red LEDs will alternatively illuminate.


2

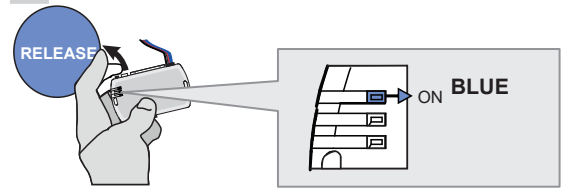

Release the programming button when the LED is BLUE.


If the LED is not solid BLUE disconnect the 4-Pin connector (Data-Link) and go back to step 1.

3

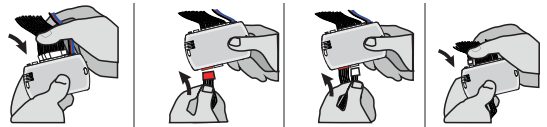

Insert the required remaining connectors.

4

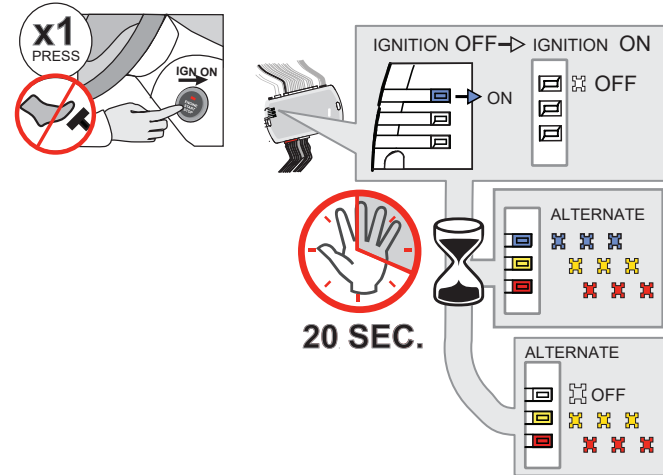

Do not press the brake pedal.
Press the Push-to-Start button once to turn on the ignition.


↳ The BLUE LED will turn OFF.

↳ The BLUE, YELLOW and RED LEDs will alternate.


Wait, at least 20 seconds, do not disconnect the modules or turn off the ignition.

↳ The RED and YELLOW LEDs will alternate.

Make sure that the DELs are flashing RED and YELLOW before continuing programming.

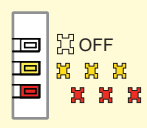

5

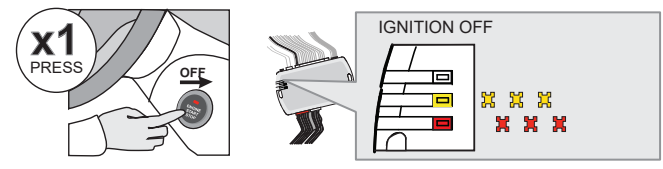

Press the Push-to-Start button once to turn off the ignition.

↳ The RED and YELLOW LEDs alternate.

KEY BYPASS PROGRAMMING PROCEDURE 2/2 |

6

Disconnect all the connectors and after the Data-Link (4-pins) connector.

7

Microsoft Windows Computer with Internet connection*

FLASH LINK UPDATER* **FLASH LINK MANAGER***
SOFTWARE | PROGRAMME

OR

Smartphone*
(Internet provider charges may apply)


VEHICLE'S OBDII CONNECTOR **FLASH LINK MOBILE***

Use the tool:
FLASH LINK UPDATER or **FLASH LINK MOBILE**
to visit the DCryptor menu.

*Parts required (not included)

8

AFTER DCRYPTOR PROGRAMMING COMPLETED
Go back to the vehicle and reconnect connector and after, all the remaining connector.

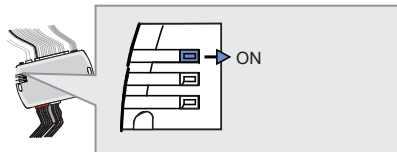

↳ The BLUE LED will turn ON.

9

x1 PRESS

IGNITION OFF → IGNITION ON

ALTERNATE

20 SEC.

FLASH RAPIDLY

Do not press the brake pedal.
Press the Push-to-Start button once to turn on the ignition.

↳ The RED and YELLOW LEDs will turn ON.

Wait, at least 20 seconds, do not disconnect the modules or turn off the ignition.

↳ The BLUE LED will flash rapidly.

10

x1 PRESS

IGNITION ON → IGNITION OFF



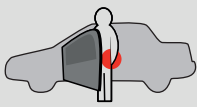

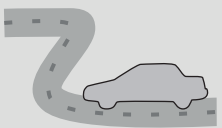
Press the Push-to-Start button once to turn off the ignition.

↳ The BLUE will turn OFF.



The module is now programmed.

REMOTE STARTER FUNCTIONALITY |

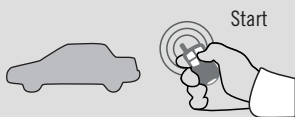 <p>Start</p> <p>All doors must be closed.</p> <p>Remote start the vehicle.</p>	 <p>UNLOCK</p> <p>Unlock the doors with either:</p> <ul style="list-style-type: none"> • The OEM remote • The remote-starter remote • Or the proximity remote 	 <p>Enter the vehicle with the SMART-KEY.</p>	 <p>DO NOT PRESS THE BRAKE PEDAL.</p> <p>Press and release the Push-to-Start button once.</p>	 <p>Press the brake pedal. The vehicle can now be put in to gear and driven.</p> <p>If the Smart-Key is not detected the vehicle will shut down.</p>
--	---	--	---	---


REGULAR & THAR-FOR3 INSTALLATION

ADDENDUM - SUGGESTED WIRING CONFIGURATION



Vehicle functions supported in this diagram (functional if equipped)

VEHICLE	YEARS	Immobilizer bypass	T-Harness available (sold separately)	Lock	Unlock	Arm	Disarm	Heated Seats**	Rear Defrost**	RAP Disable	Parking Lights***	Tachometer	Door Status	Trunk Status	Hood Status*	Hand-Brake Status	Foot-Brake Status	Active OEM Remote Start
FORD																		
Fusion	Key 2020	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
	Hybrid Key 2020	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•

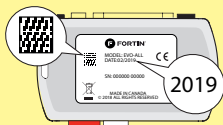

COMPATIBLE MODULE REQUIRED:

QR CODE ON THE LABEL
MANUFACTURED AFTER: 2019

FIRMWARE VERSION

58.[02]
MINIMUM

To add the firmware version and the options, use the **FLASH LINK UPDATER** or **FLASH LINK MOBILE** tool, sold separately.

	UNIT OPTION	DESCRIPTION
<p>Program bypass option:</p>	C1	OEM Remote status (Lock/Unlock) monitoring
<p>IF THE VEHICLE IS NOT EQUIPPED WITH FUNCTIONAL HOOD PIN:</p>	A11 OFF	Hood trigger (Output Status).
<p>Program bypass option (Vehicle hybrid only):</p>	D4	Hybrid mode (Vehicle hybrid only)

NOTES

The vehicles OEM remote and SmartKey are still operable during remote start.

**Heated seats The heated seats and rear defrost activate automatically when it cold.

***Parking Lights The parking Lights at remote start only.



The vehicle must be equipped with the OEM remote with the door locks.

MANDATORY INSTALL

*HOOD PIN



HOOD STATUS: THE HOOD PIN SWITCH MUST BE INSTALLED IF THE VEHICLE CAN BE REMOTE STARTED WITH THE HOOD OPEN, SET FUNCTION A11 TO OFF.

A11

OFF

Notice: the installation of safety elements are mandatory. The hood pin is an essential security element and must be installed.

THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.

DESCRIPTION

	Parts required (Not included)	PAGE
--	-------------------------------	------

WIRE TO WIRE DIAGRAM

AUTOMATIC TRANSMISSION	1x 7.5 Amp. fuse	Page 3
------------------------	------------------	--------



THARNESS DIAGRAM

THARNESS THAR-FOR3 AUTOMATIC TRANSMISSION	1x THAR-FOR3	Page 4
---	--------------	--------




② Parking Lights switch


① Gateway module, Behind OBD-II connector

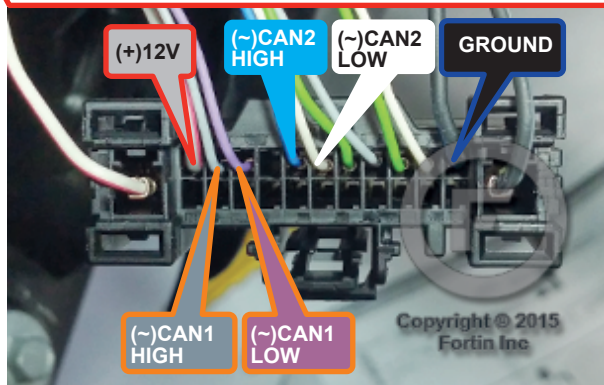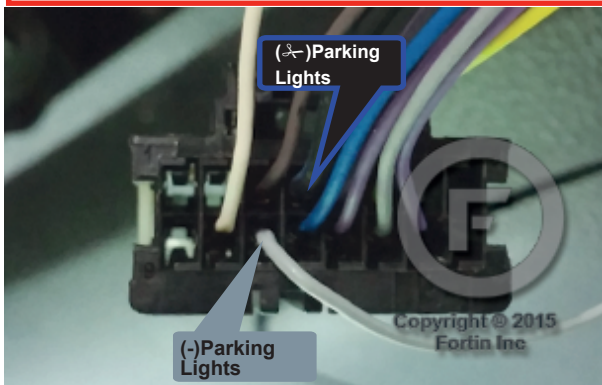

AUTOMATIC TRANSMISSION WIRING CONNECTION |

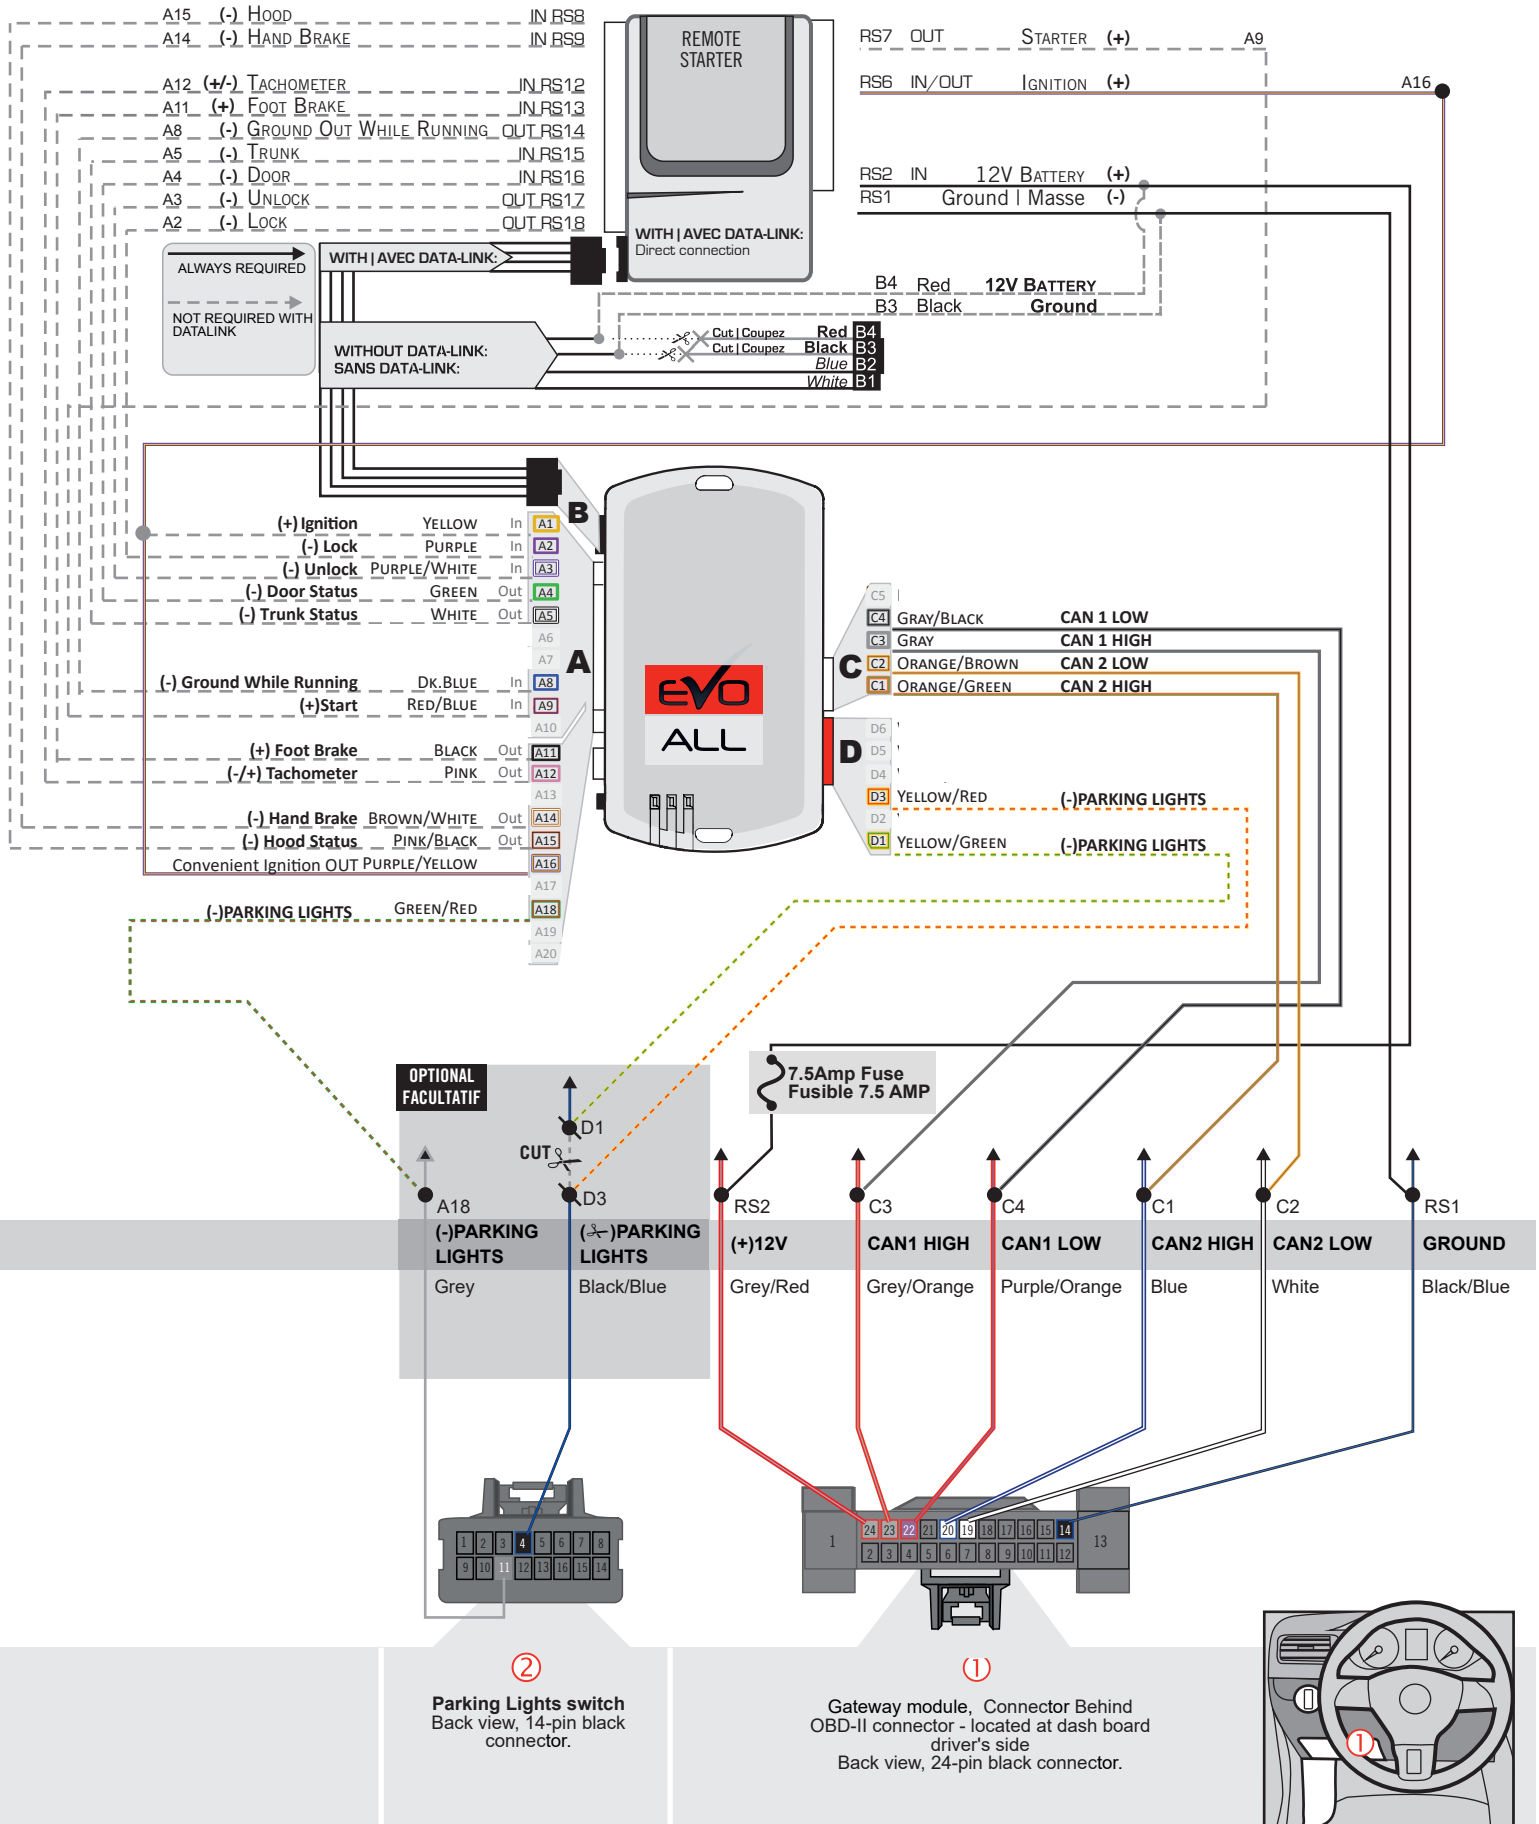

THAR-FOR3 | T-HARNESS - AUTOMATIC TRANSMISSION |

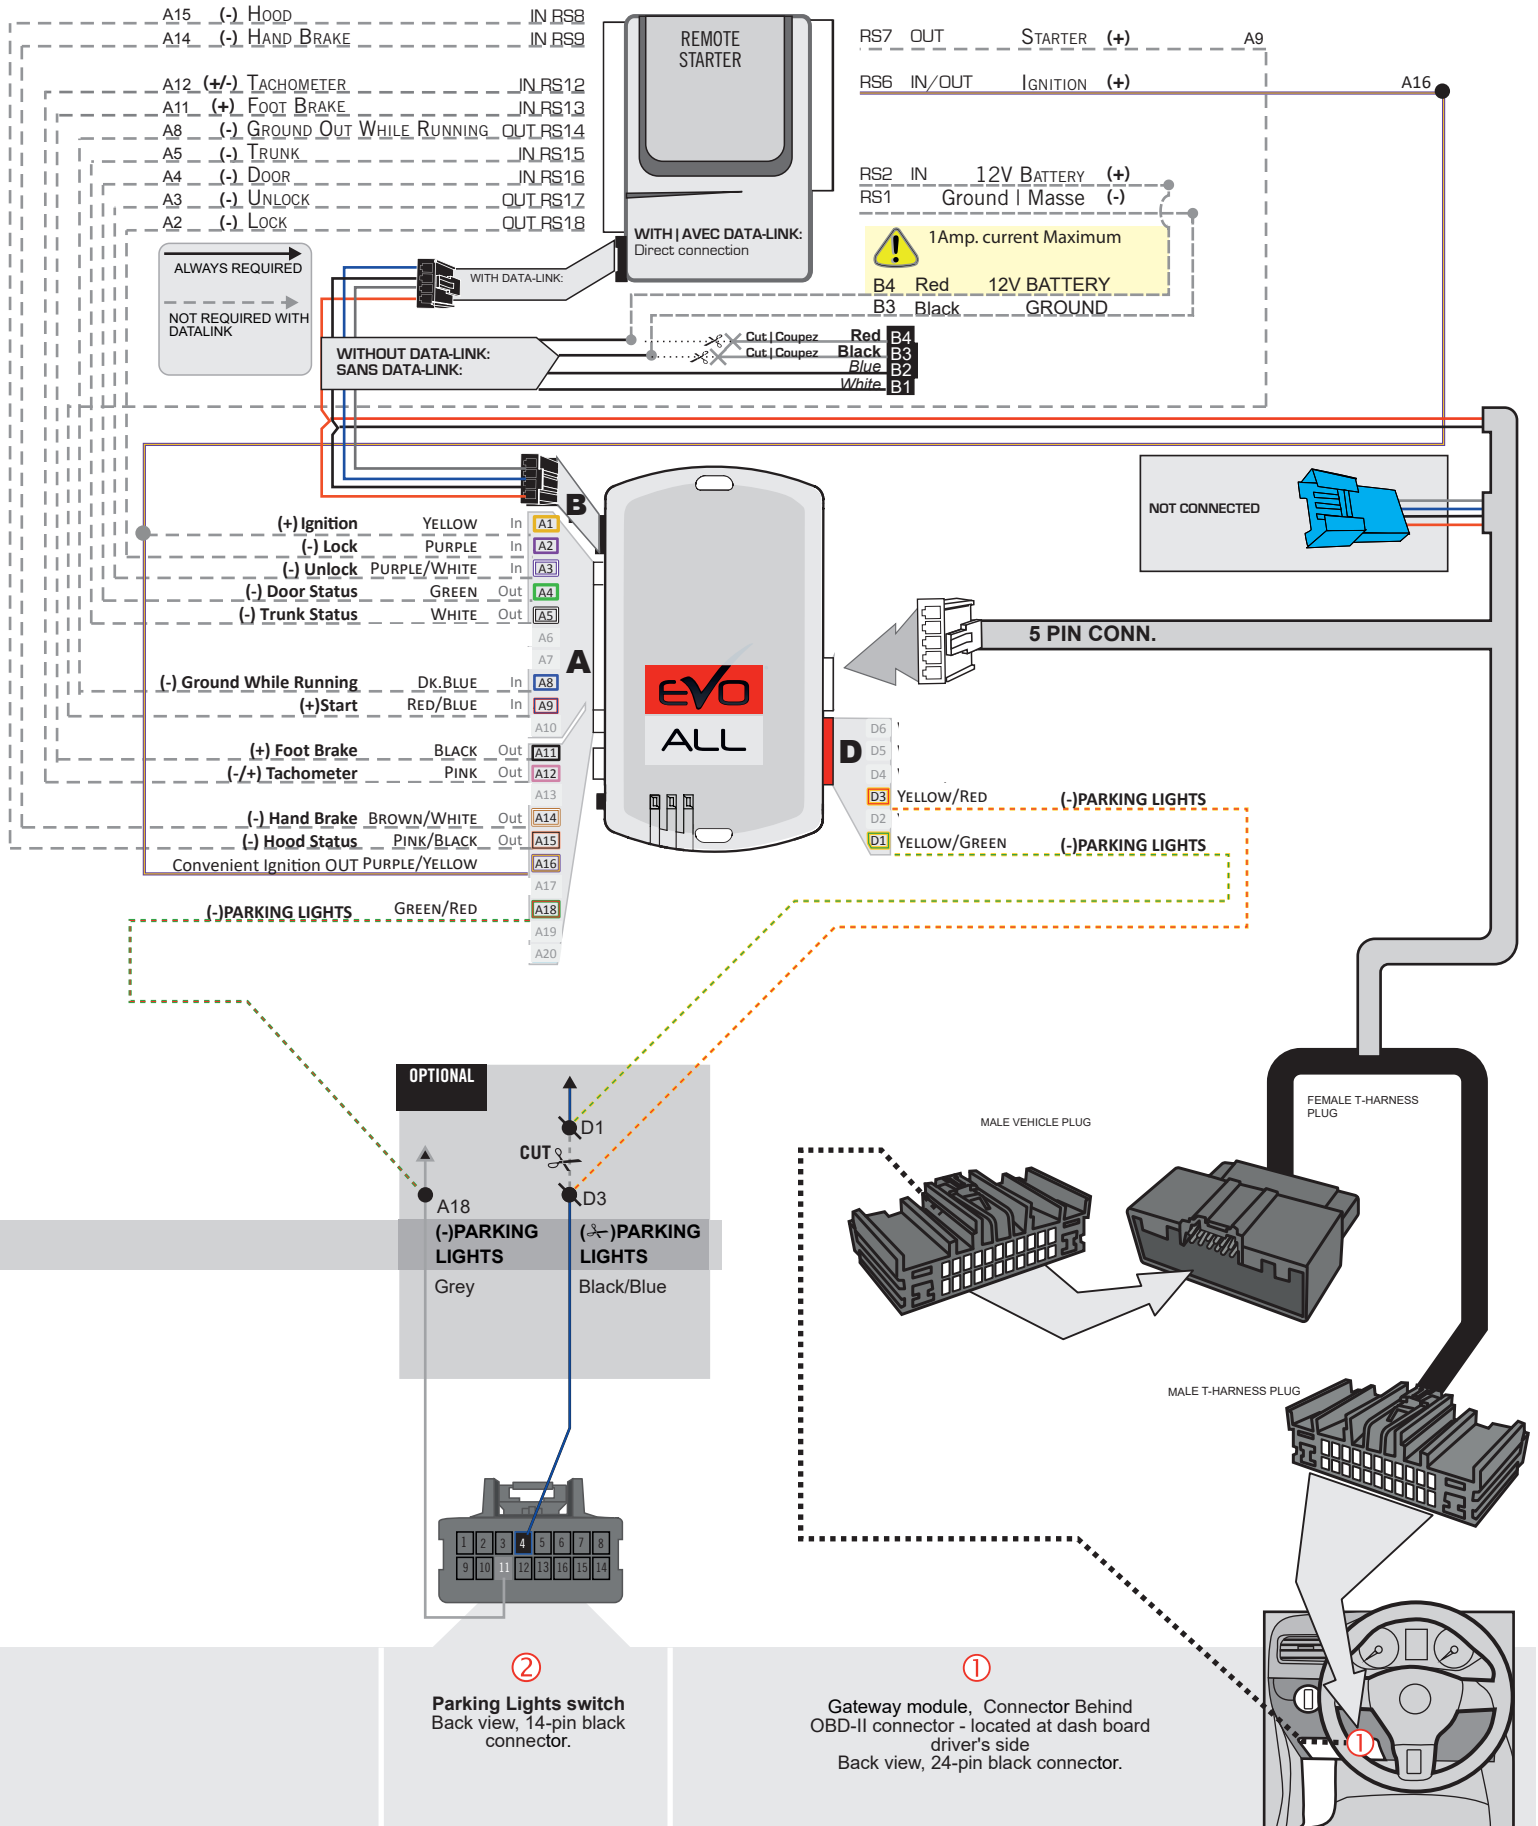




- Parts required (not included)**
- 1x **FLASH LINK UPDATER,**
 - 1x **FLASH LINK MANAGER**
SOFTWARE | PROGRAMME
 - 1x Microsoft Windows Computer with Internet connection

OR

- 1x **FLASH LINK MOBILE**
- 1x **FLASH LINK MOBILE APP**
- Smartphone Android or iOS with Internet connection
(Internet provider charges may apply)

BEFORE PROGRAMMING SET THE UNIT OPTIONS AND SAVE.


1

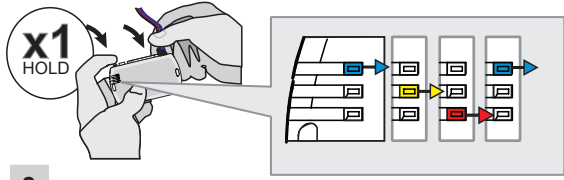

Press and hold the programming button:
Insert the 4-Pin (Data-Link) connector.

↳ The Blue, Red, Yellow and Blue & Red LEDs will alternatively illuminate.


2

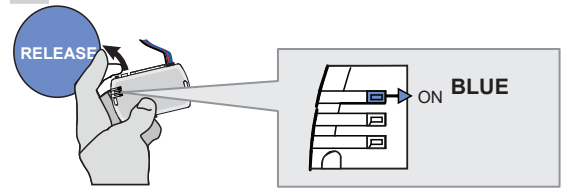

Release the programming button when the LED is BLUE.


If the LED is not solid BLUE disconnect the 4-Pin connector (Data-Link) and go back to step 1.

3

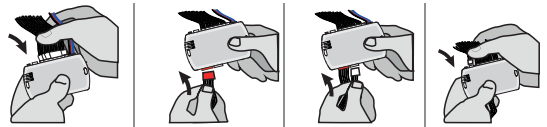

Insert the required remaining connectors.

4

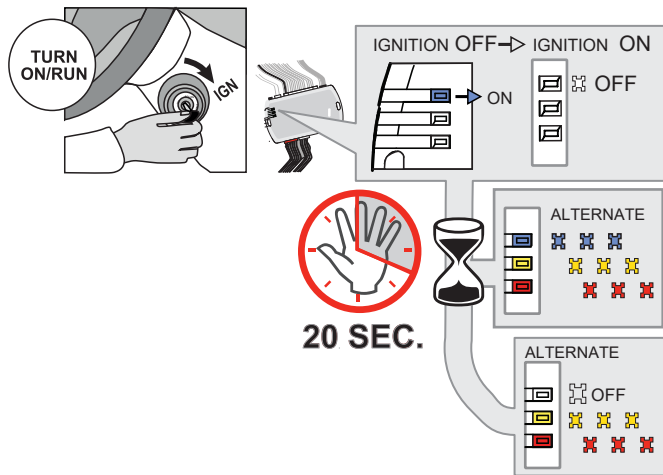

Turn the key to the Ignition ON/RUN position.


↳ The BLUE LED will turn OFF.

↳ The BLUE, YELLOW and RED LEDs will alternate.


Wait, at least 20 seconds, do not disconnect the modules or turn off the ignition.

↳ The RED and YELLOW LEDs will alternate.

Make sure that the DELs are flashing RED and YELLOW before continuing programming.

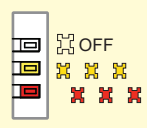

5

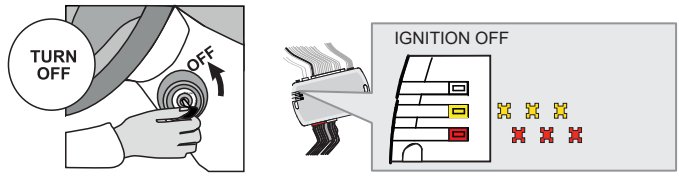


Turn the key to the OFF position.

↳ The RED and YELLOW LEDs alternate.


KEY BYPASS PROGRAMMING PROCEDURE 2/2 |

6

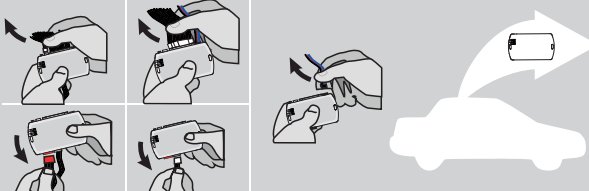

Disconnect all the connectors and after the Data-Link (4-pins) connector.

7



Microsoft Windows Computer with Internet connection*

FLASH LINK UPDATER* **FLASH LINK MANAGER***
SOFTWARE | PROGRAMME

OR

Smartphone* (Internet provider charges may apply)


FLASH LINK MOBILE*

VEHICLE'S OBDII CONNECTOR

Use the tool: FLASH LINK UPDATER or FLASH LINK MOBILE to visit the DCryptor menu.

*Parts required (not included)

8

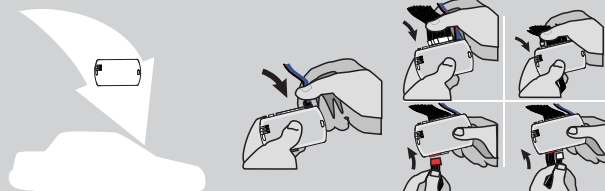


AFTER DCRYPTOR PROGRAMMING COMPLETED
Go back to the vehicle and reconnect the 4-Pin (Data-Link) connector and after, all the remaining connector.

APRÈS LA PROCÉDURE DE PROGRAMMATION DCRYPTOR COMPLÉTÉE : retournez au véhicule et rebranchez le connecteur 4-pins (Data-Link) et après, tous les connecteurs du EVO-ALL.




↳ The BLUE LED will turn ON.

9




TURN ON/RUN

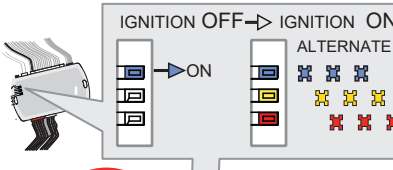


IGNITION OFF → IGNITION ON

ALTERNATE

↳ The RED and YELLOW LEDs will turn ON.




20 SEC.

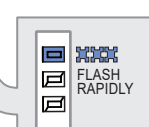


FLASH RAPIDLY

↳ The BLUE LED will flash rapidly.

10

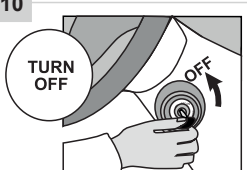


TURN OFF

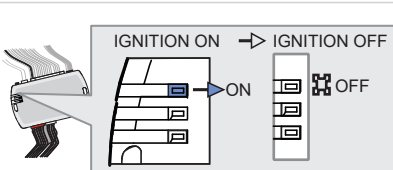

IGNITION ON → IGNITION OFF

↳ The BLUE will turn OFF.



The module is now programmed.

REMOTE STARTER FUNCTIONALITY |



All doors must be closed.



Remote start the vehicle.



Unlock the doors with the remote-starter remote or the OEM remote.



Insert and Turn the key to the Ignition ON/RUN position.



Press the brake pedal.



The vehicle can now be put in to gear and driven.

REGULAR & THAR-FOR3 INSTALLATION

ADDENDUM - SUGGESTED WIRING CONFIGURATION



Vehicle functions supported in this diagram (functional if equipped)



VEHICLE

YEARS


Immobilizer bypass	T-Harness available (sold separately)	Lock	Unlock	Arm	Disarm	Heated Seats**	Rear Defrost**	RAP Disable	Parking Lights***	Tachometer	Door Status	Trunk Status	Hood Status*	Hand-Brake Status	Foot-Brake Status	Active OEM Remote Start
--------------------	---------------------------------------	------	--------	-----	--------	----------------	----------------	-------------	-------------------	------------	-------------	--------------	--------------	-------------------	-------------------	-------------------------

FORD

Fusion	Push-to-Start	2020	•	•	•	•	•	•	•	•	•	•	•	•	•	•
	Hybrid Push-to-Start	2020	•	•	•	•	•	•	•	•	•	•	•	•	•	•

LINCOLN

Continental	Push-to-Start	2020	•	•	•	•	•	•	•	•	•	•	•	•	•	•
-------------	---------------	------	---	---	---	---	---	---	---	---	---	---	---	---	---	---

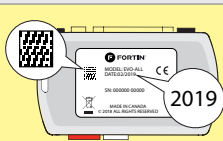

COMPATIBLE MODULE REQUIRED:

QR CODE ON THE LABEL
MANUFACTURED AFTER: 2019

FIRMWARE VERSION

58.[02]
MINIMUM

To add the firmware version and the options, use the **FLASH LINK UPDATER** or **FLASH LINK MOBILE** tool, sold separately.



Program bypass option:

UNIT OPTION

DESCRIPTION

C1

OEM Remote status (Lock/Unlock) monitoring

D6

Push-to-Start

IF THE VEHICLE IS NOT EQUIPPED WITH FUNCTIONAL HOOD PIN:

A11

OFF

Hood trigger (Output Status).

Program bypass option (Vehicle hybrid only):
Programmez l'option du contournement vehicule hybride

D4

Hybrid mode (Vehicle hybrid only)

NOTES

The vehicles OEM remote and SmartKey are still operable during remote start.

**Heated seats The heated seats and rear defrost activate automatically when it cold.

***Parking Lights The parking Lights at remote start only.

MANDATORY INSTALL

*HOOD PIN



HOOD STATUS: THE HOOD PIN SWITCH MUST BE INSTALLED IF THE VEHICLE CAN BE REMOTE STARTED WITH THE HOOD OPEN, SET FUNCTION A11 TO OFF.

A11

OFF

Notice: the installation of safety elements are mandatory. The hood pin is an essential security element and must be installed.

THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.

DESCRIPTION | DESCRIPTION

	Parts required (Not included)	PAGE
--	-------------------------------	------

WIRE TO WIRE DIAGRAM

AUTOMATIC TRANSMISSION	1x 7.5 Amp. fuse	Page 3
------------------------	------------------	--------

THARNESS DIAGRAM

THARNESS THAR-FOR3 AUTOMATIC TRANSMISSION	1x THAR-FOR3	Page 4
---	--------------	--------





②


Parking Lights switch

①


Gateway module, Behind OBD-II connector

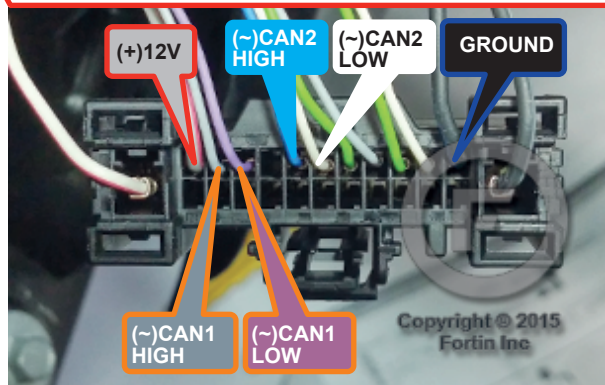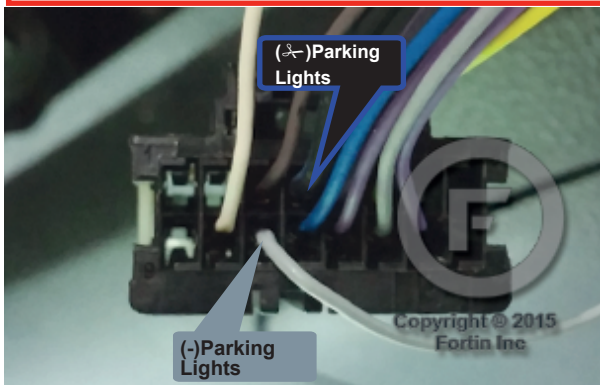

AUTOMATIC TRANSMISSION WIRING CONNECTION |

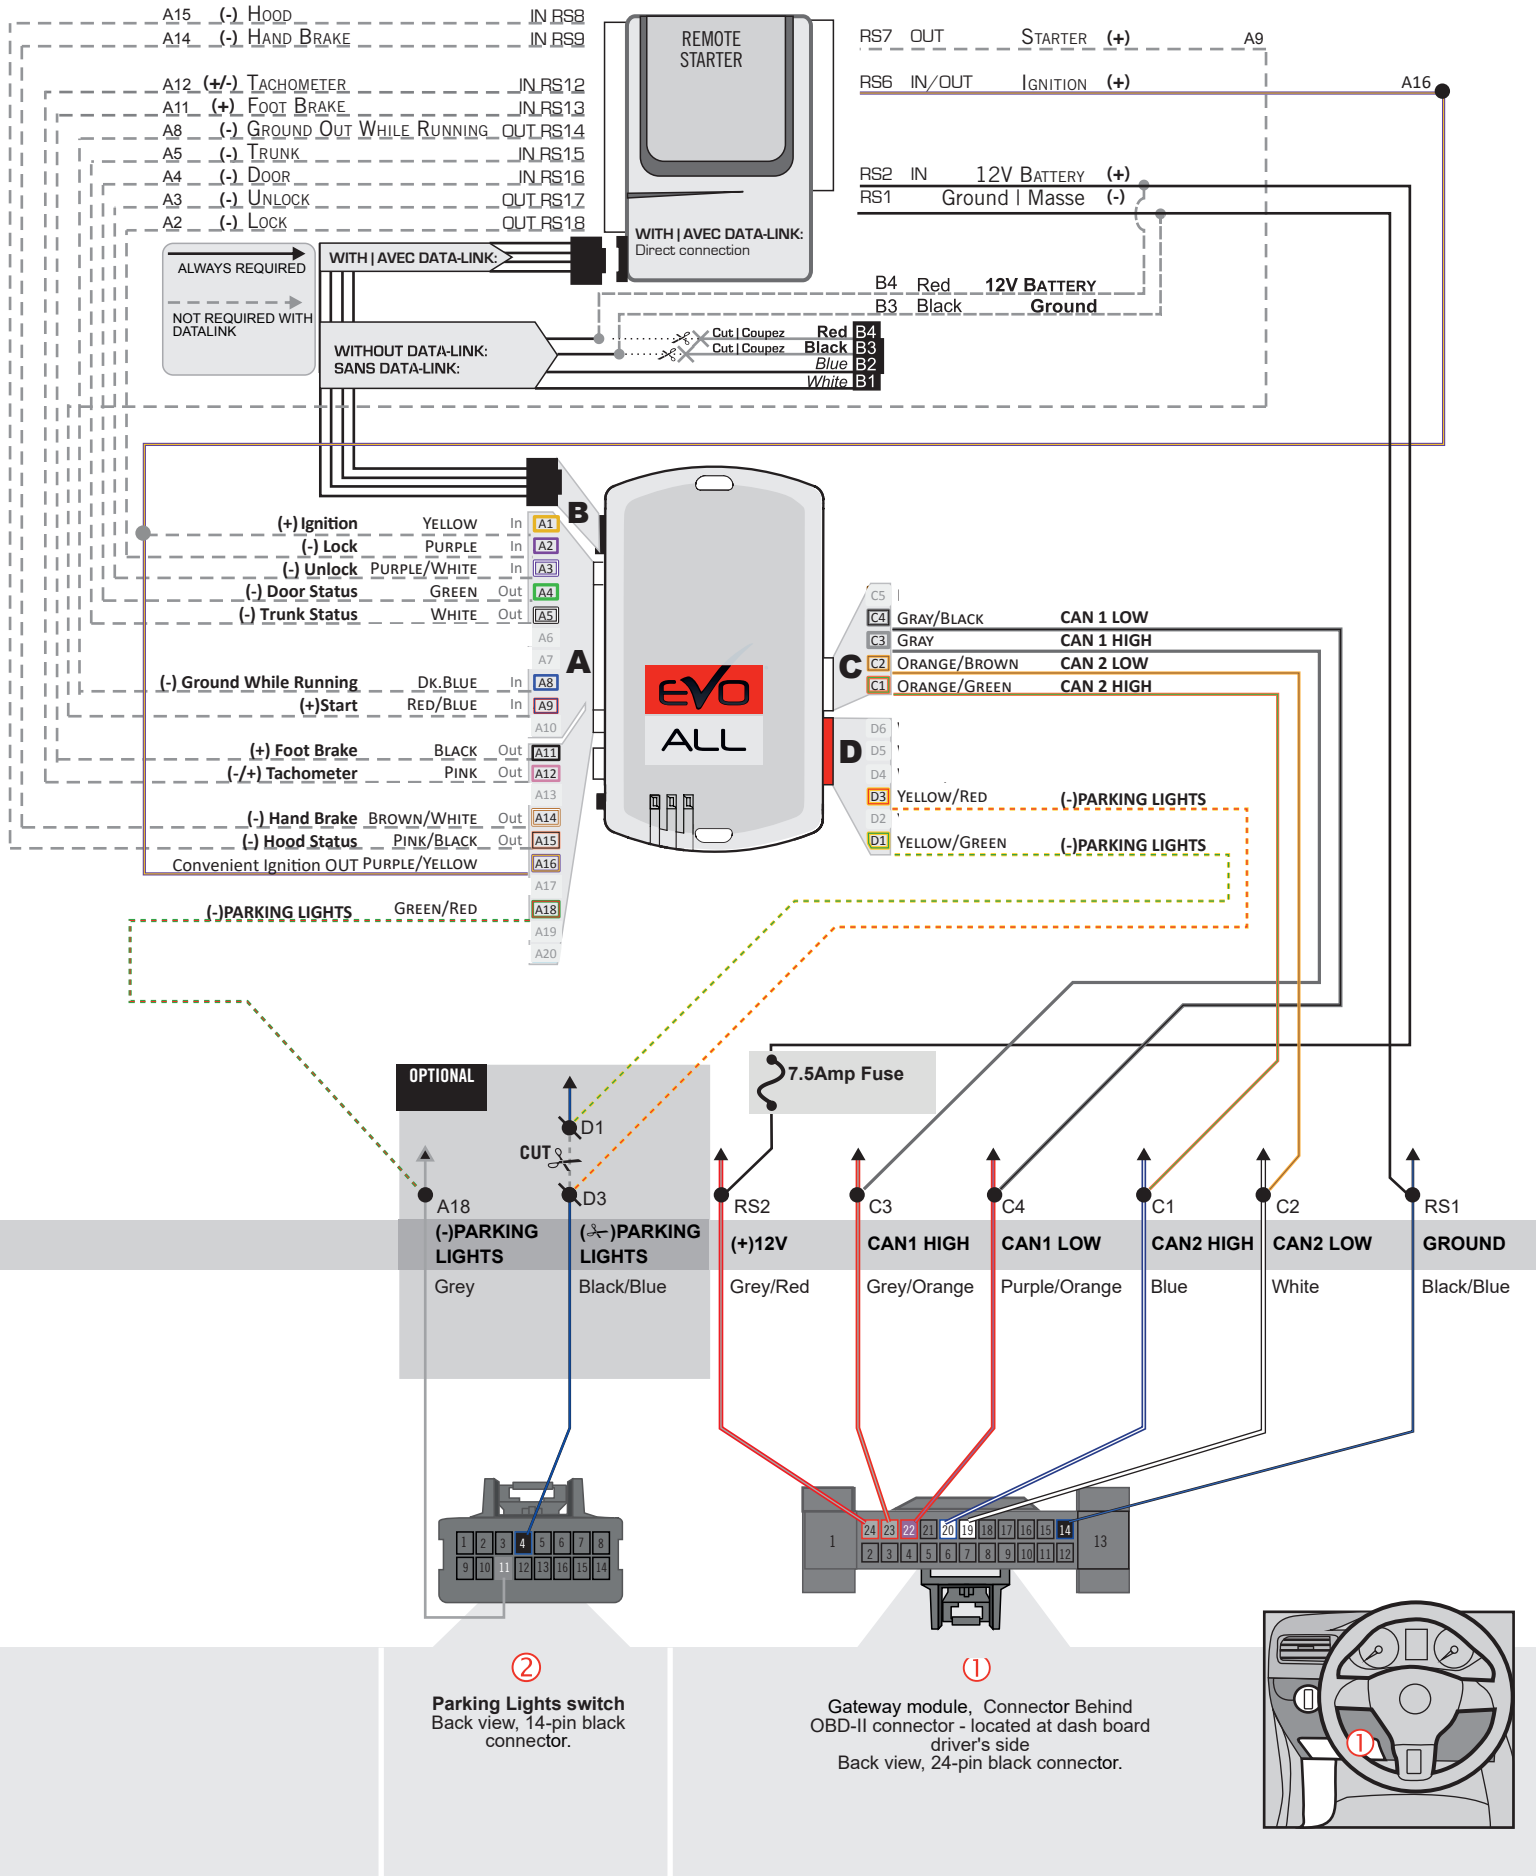

THAR-FOR3 | T-HARNESS - AUTOMATIC TRANSMISSION |

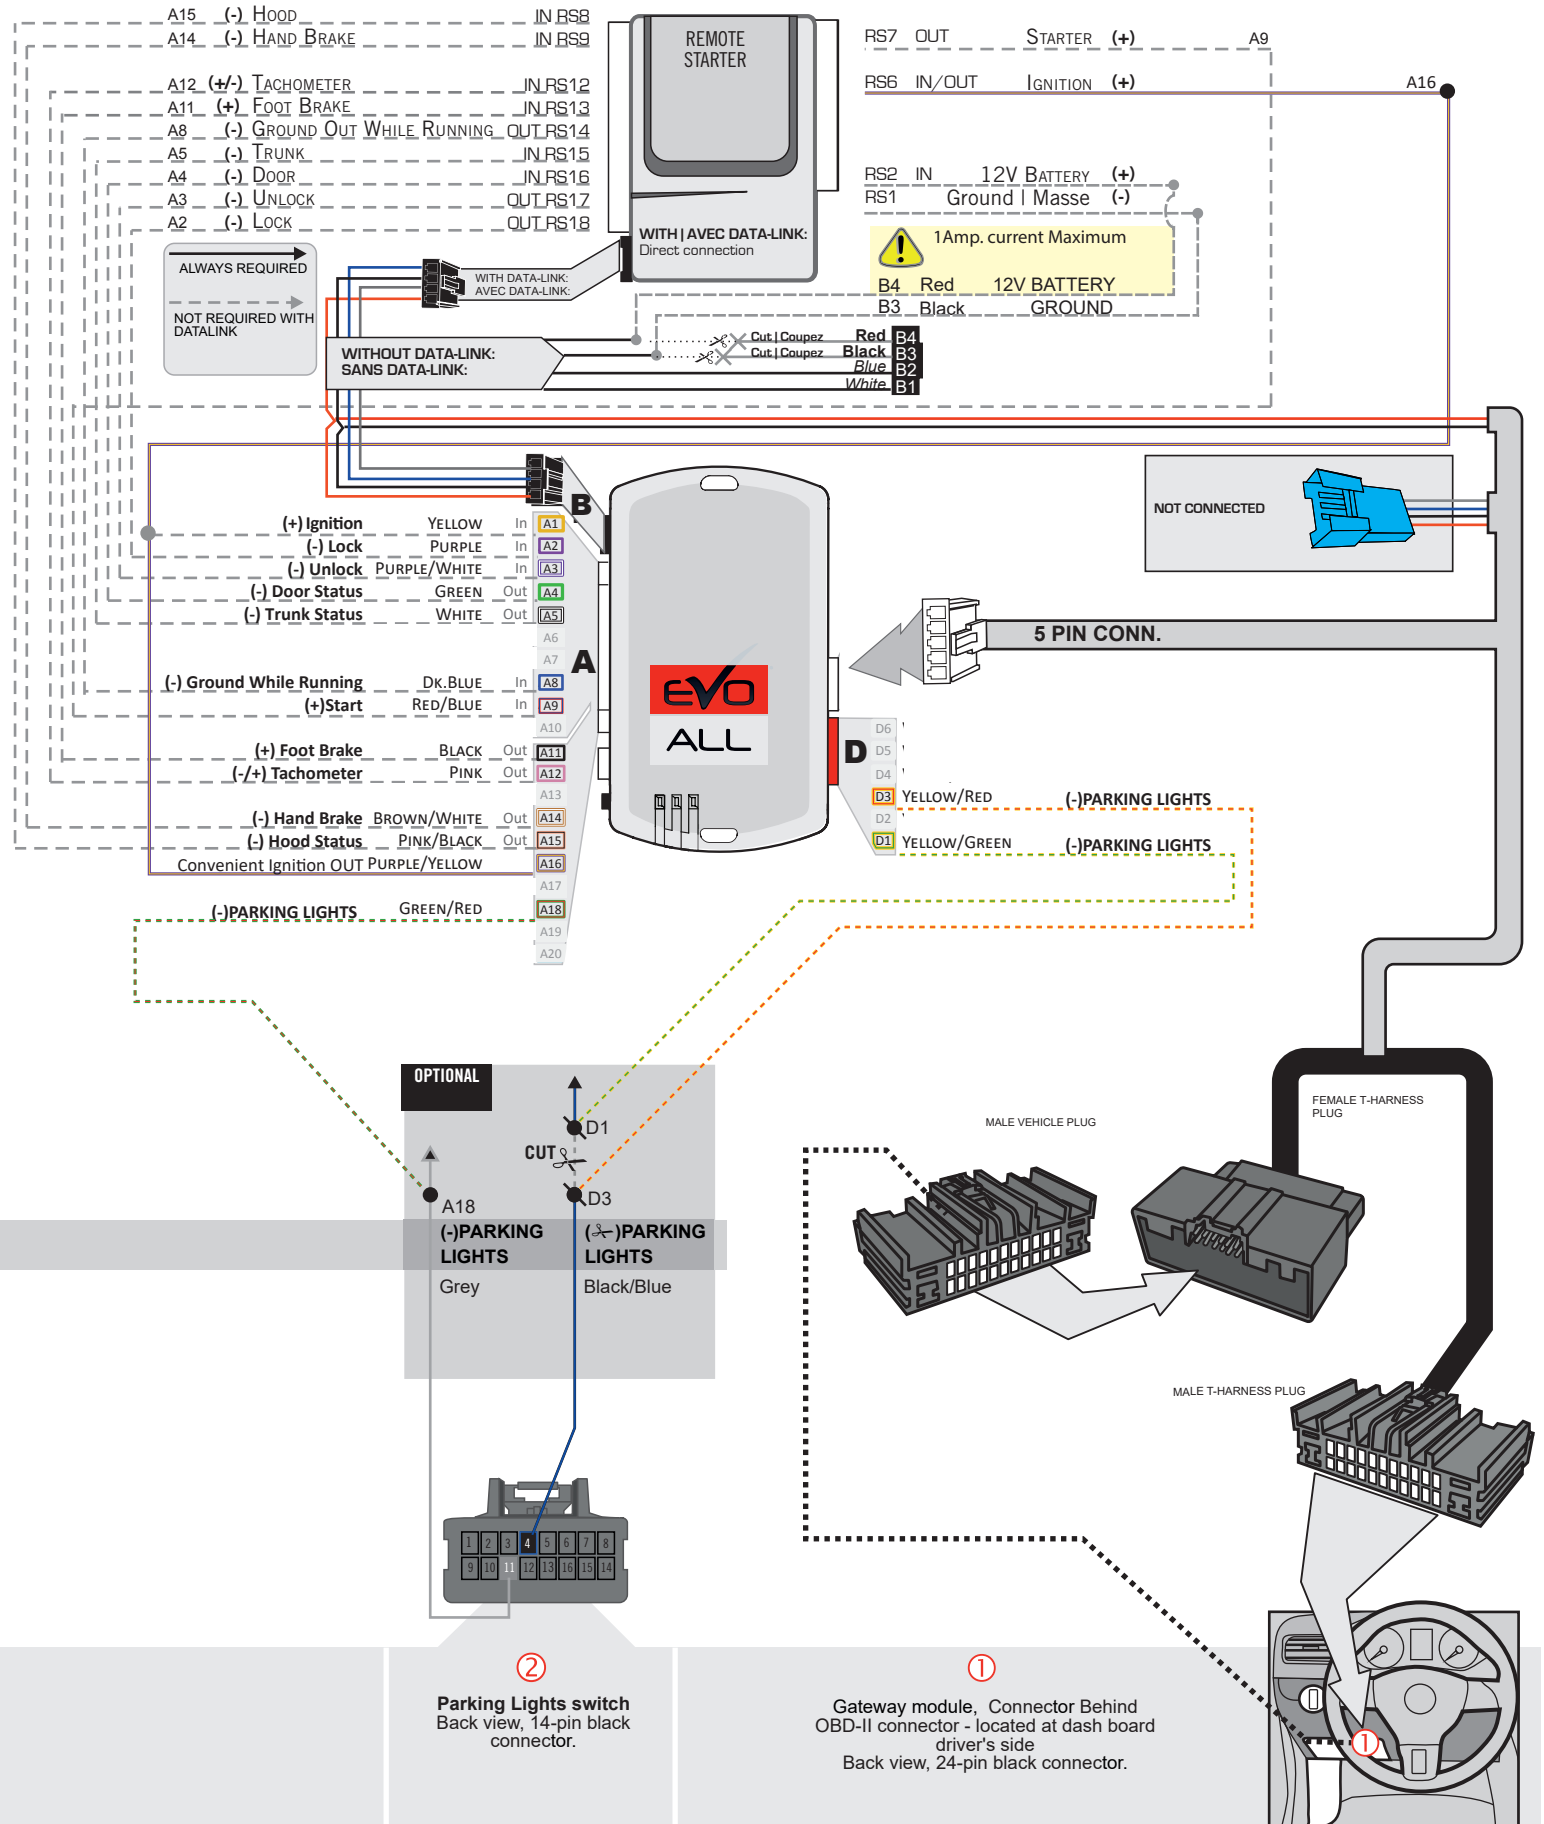



Parts required (not included)


- 1x FLASH LINK UPDATER, SOFTWARE | PROGRAMME
- 1x FLASH LINK MANAGER
- 1x Microsoft Windows Computer with Internet connection

OR

- 1x FLASH LINK MOBILE
- 1x FLASH LINK MOBILE APP
- Smartphone Android or iOS with Internet connection (Internet provider charges may apply)

BEFORE PROGRAMMING SET THE UNIT OPTIONS AND SAVE.


1

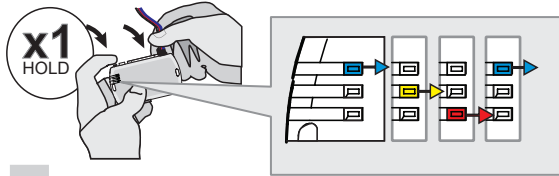

Press and hold the programming button:
Insert the 4-Pin (Data-Link) connector.

↳ The Blue, Red, Yellow and Blue & Red LEDs will alternatively illuminate.


2

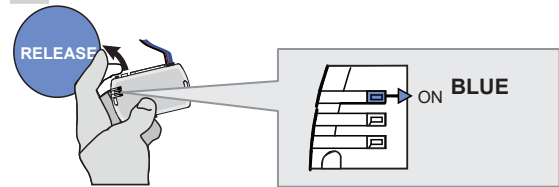

Release the programming button when the LED is BLUE.


If the LED is not solid BLUE disconnect the 4-Pin connector (Data-Link) and go back to step 1.

3

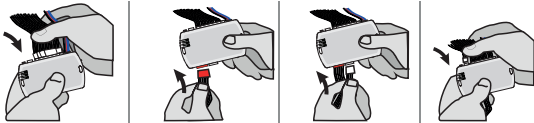

Insert the required remaining connectors.

4

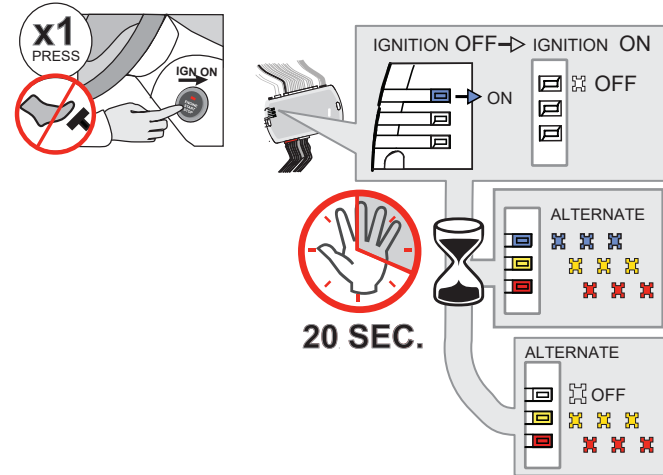

Do not press the brake pedal.
Press the Push-to-Start button once to turn on the ignition.

↳ The BLUE LED will turn OFF.


↳ The BLUE, YELLOW and RED LEDs will alternate.

Wait, at least 20 seconds, do not disconnect the modules or turn off the ignition.

↳ The RED and YELLOW LEDs will alternate.

Make sure that the DELs are flashing RED and YELLOW before continuing programming.

5

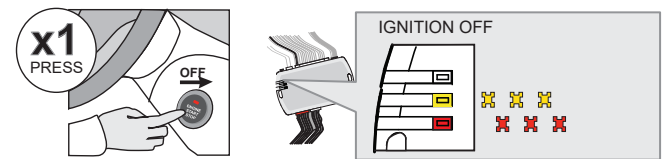

Press the Push-to-Start button once to turn off the ignition.

↳ The RED and YELLOW LEDs alternate.

KEY BYPASS PROGRAMMING PROCEDURE 2/2 |

6

Disconnect all the connectors and after the Data-Link (4-pins) connector.

7

Microsoft Windows Computer with Internet connection*

FLASH LINK UPDATER* **FLASH LINK MANAGER***
SOFTWARE | PROGRAMME

OR

Smartphone* (Internet provider charges may apply)

FLASH LINK MOBILE*


VEHICLE'S OBDII CONNECTOR

Use the tool: FLASH LINK UPDATER or FLASH LINK MOBILE to visit the DCRYPTOR menu.

*Parts required (not included)

8

AFTER DCRYPTOR PROGRAMMING COMPLETED
Go back to the vehicle and reconnect connector and after, all the remaining connector.

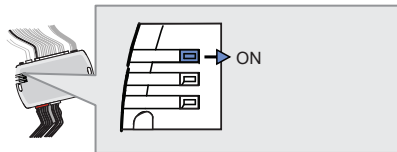

↳ The BLUE LED will turn ON.

9

x1 PRESS (with a 'no brake pedal' symbol)

IGNITION OFF → IGNITION ON

ALTERNATE

FLASH RAPIDLY

20 SEC.

Do not press the brake pedal. **Press** the Push-to-Start button once to turn on the ignition.

↳ The RED and YELLOW LEDs will turn ON.

Wait, at least 20 seconds, do not disconnect the modules or turn off the ignition.

↳ The BLUE LED will flash rapidly.

10

x1 PRESS (with a 'no brake pedal' symbol)

IGNITION ON → IGNITION OFF

OFF



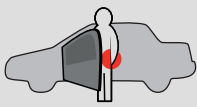

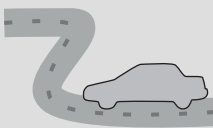
Press the Push-to-Start button once to turn off the ignition.

↳ The BLUE will turn OFF.



The module is now programmed.

REMOTE STARTER FUNCTIONALITY |

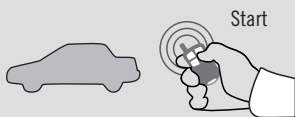 <p>Start</p> <p>All doors must be closed.</p> <p>Remote start the vehicle.</p>	 <p>UNLOCK</p> <p>Unlock the doors with either:</p> <ul style="list-style-type: none"> • The OEM remote • The remote-starter remote • Or the proximity remote 	 <p>Enter the vehicle with the SMART-KEY.</p>	 <p>DO NOT PRESS THE BRAKE PEDAL.</p> <p>Press and release the Push-to-Start button once.</p>	 <p>Press the brake pedal. The vehicle can now be put in to gear and driven.</p> <p>If the Smart-Key is not detected the vehicle will shut down.</p>
--	---	--	---	---

REGULAR & THAR-FOR3 INSTALLATION

ADDENDUM - SUGGESTED WIRING CONFIGURATION



ONLY COMPATIBLE WITH AUTOMATIC TRANSMISSION VEHICLES.



Vehicle functions supported in this diagram (functional if equipped)

VEHICLE	YEARS	Immobilizer bypass	T-Harness available (sold separately)	Lock	Unlock	Arm	Disarm	Heated Seats**	Rear Defrost**	RAP Disable	Parking Lights***	Tachometer	Door Status	Trunk Status	Hood Status*	Hand-Brake Status	Foot-Brake Status	Active OEM Remote Start	
LINCOLN																			
Nautilus	Push-to-Start 2020	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•

COMPATIBLE MODULE REQUIRED:

2019

QR CODE ON THE LABEL

MANUFACTURED AFTER: 2019

FIRMWARE VERSION

58.[02]

MINIMUM

To add the firmware version and the options, use the **FLASH LINK UPDATER** or **FLASH LINK MOBILE** tool, sold separately.

	Program bypass option:	UNIT OPTION	DESCRIPTION
		C1	OEM Remote status (Lock/Unlock) monitoring
		D6	Push-to-Start
<p>IF THE VEHICLE IS NOT EQUIPPED WITH FUNCTIONAL HOOD PIN:</p>		A11	OFF
			Hood trigger (Output Status).

- NOTES**
- The vehicles OEM remote and SmartKey are still operable during remote start.
 - **Heated seats The heated seats and rear defrost activate automatically when it cold.

**Rear Defrost
 - ***Parking Lights The parking Lights at remote start only.

MANDATORY INSTALL

***HOOD PIN** **HOOD STATUS:** THE HOOD PIN SWITCH MUST BE INSTALLED IF THE VEHICLE CAN BE REMOTE STARTED WITH THE HOOD OPEN, SET FUNCTION **A11** TO OFF.

A11

OFF

Notice: the installation of safety elements are mandatory. The hood pin is an essential security element and must be installed.

THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.

DESCRIPTION | DESCRIPTION

	Parts required (Not included)	PAGE
--	-------------------------------	------

WIRE TO WIRE DIAGRAM

AUTOMATIC TRANSMISSION	1x 7.5 Amp. fuse	Page 3
------------------------	------------------	--------

THARNESS DIAGRAM

THARNESS THAR-FOR3 AUTOMATIC TRANSMISSION	1x THAR-FOR3	Page 4
---	--------------	--------





②


Parking Lights switch

①


Gateway module, Behind OBD-II connector

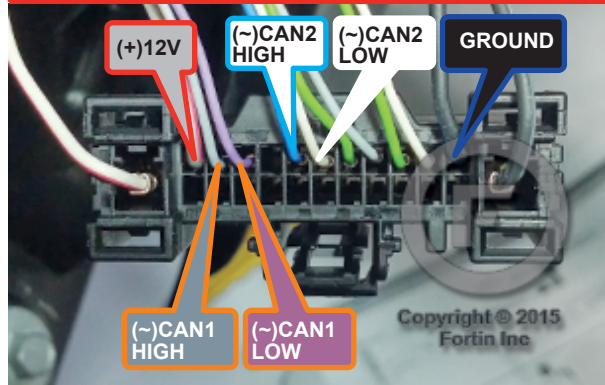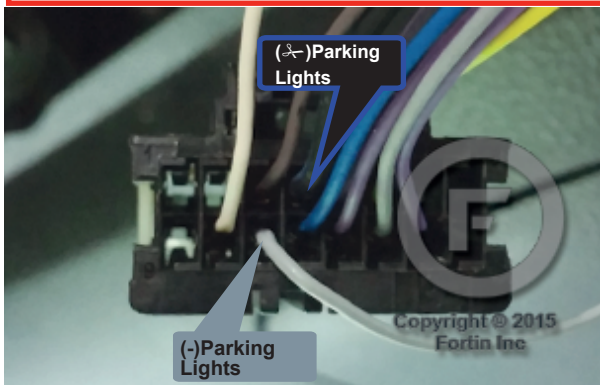

AUTOMATIC TRANSMISSION WIRING CONNECTION |

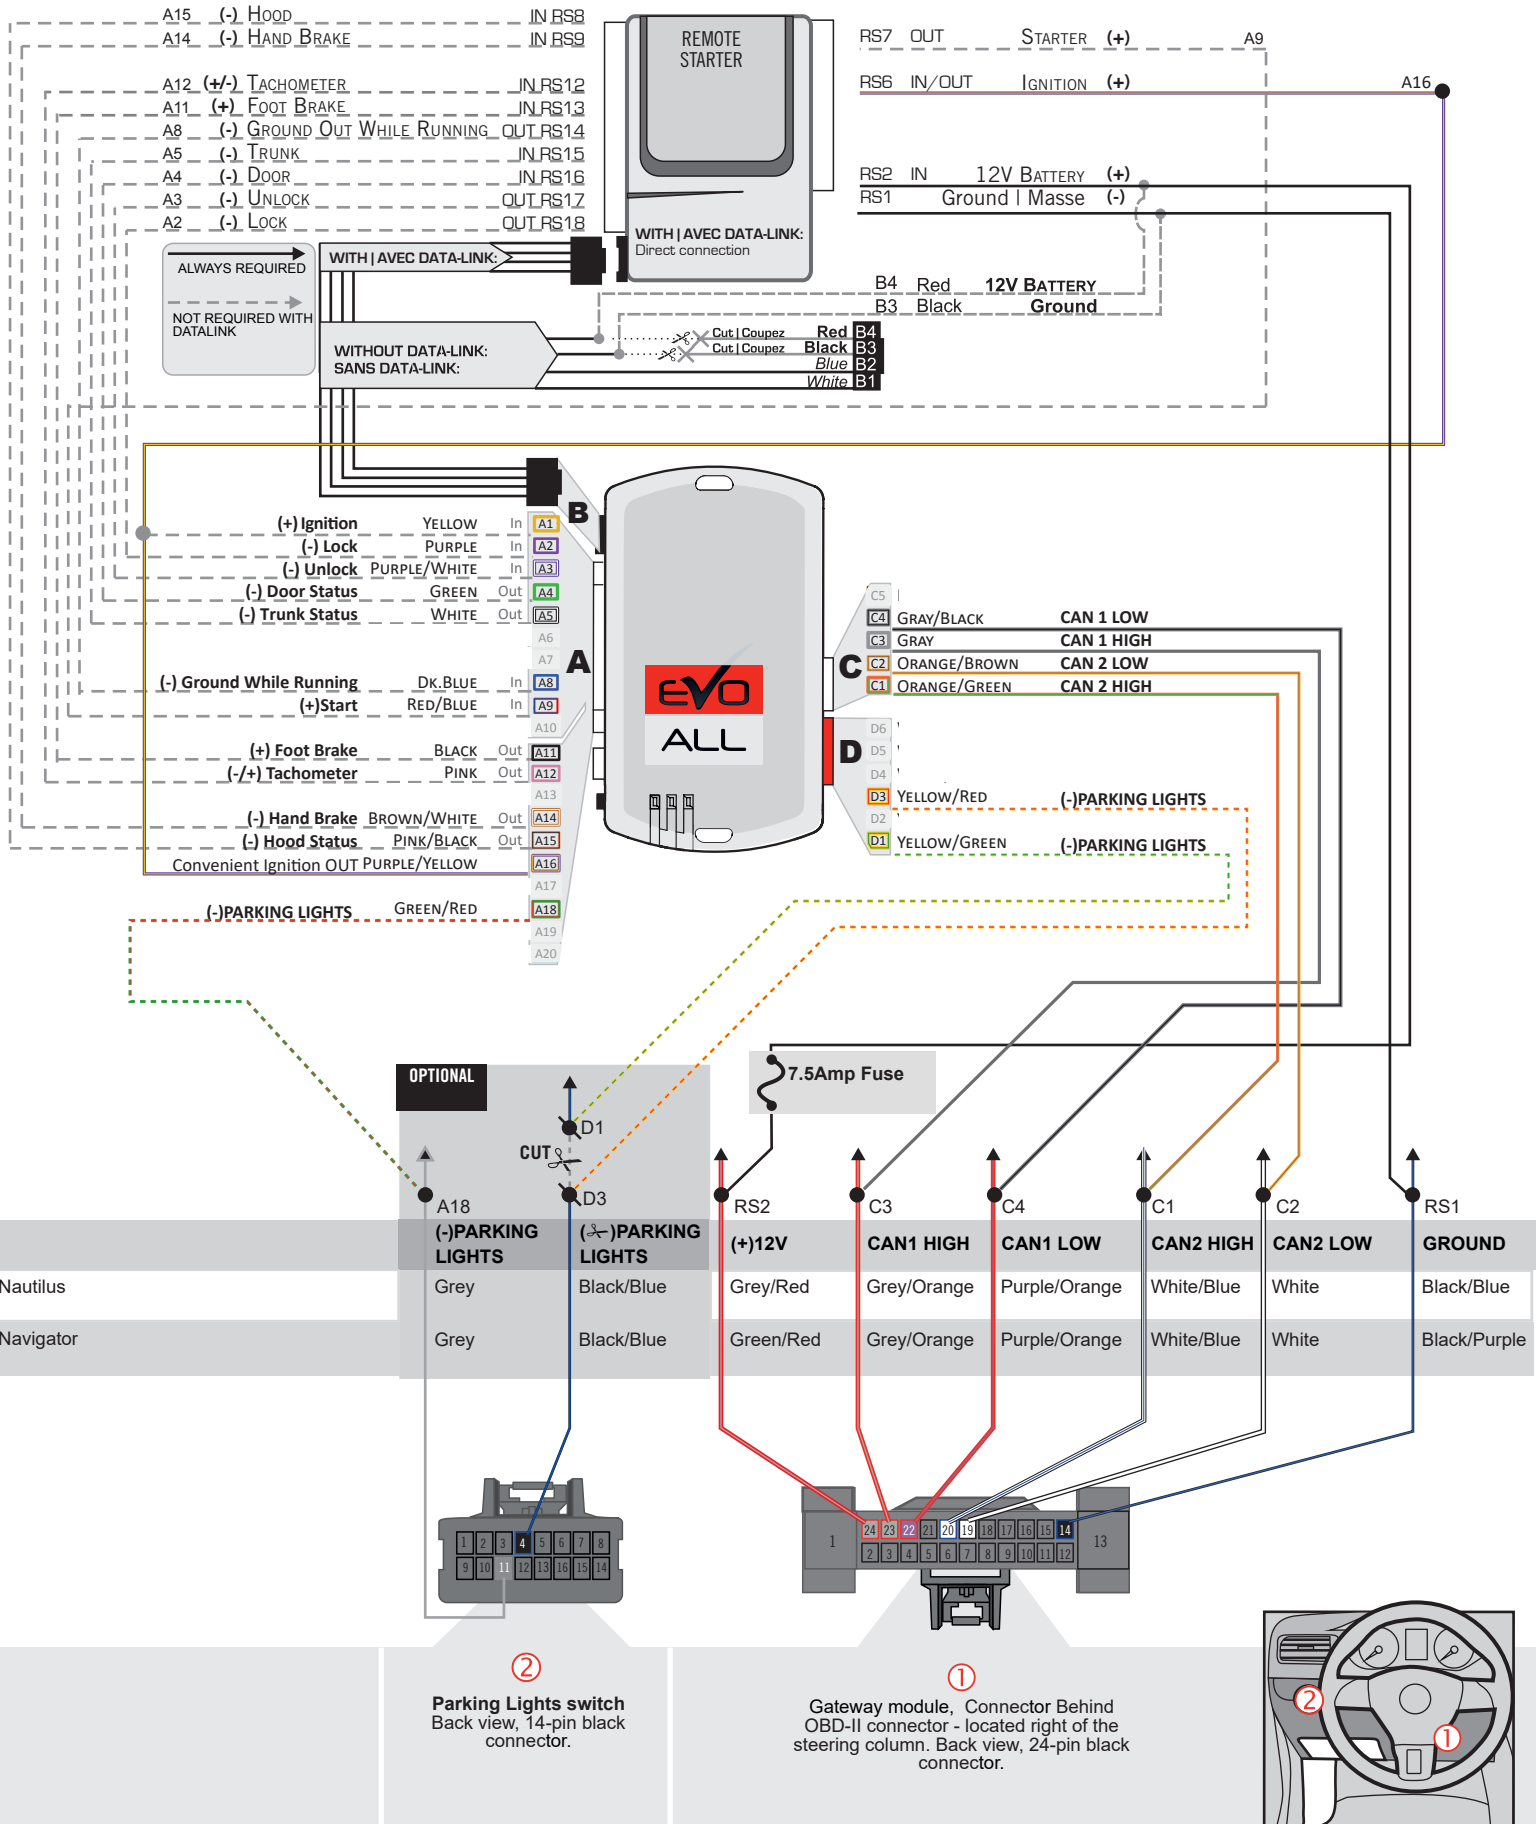

THAR-FOR3 | T-HARNESS - AUTOMATIC TRANSMISSION |

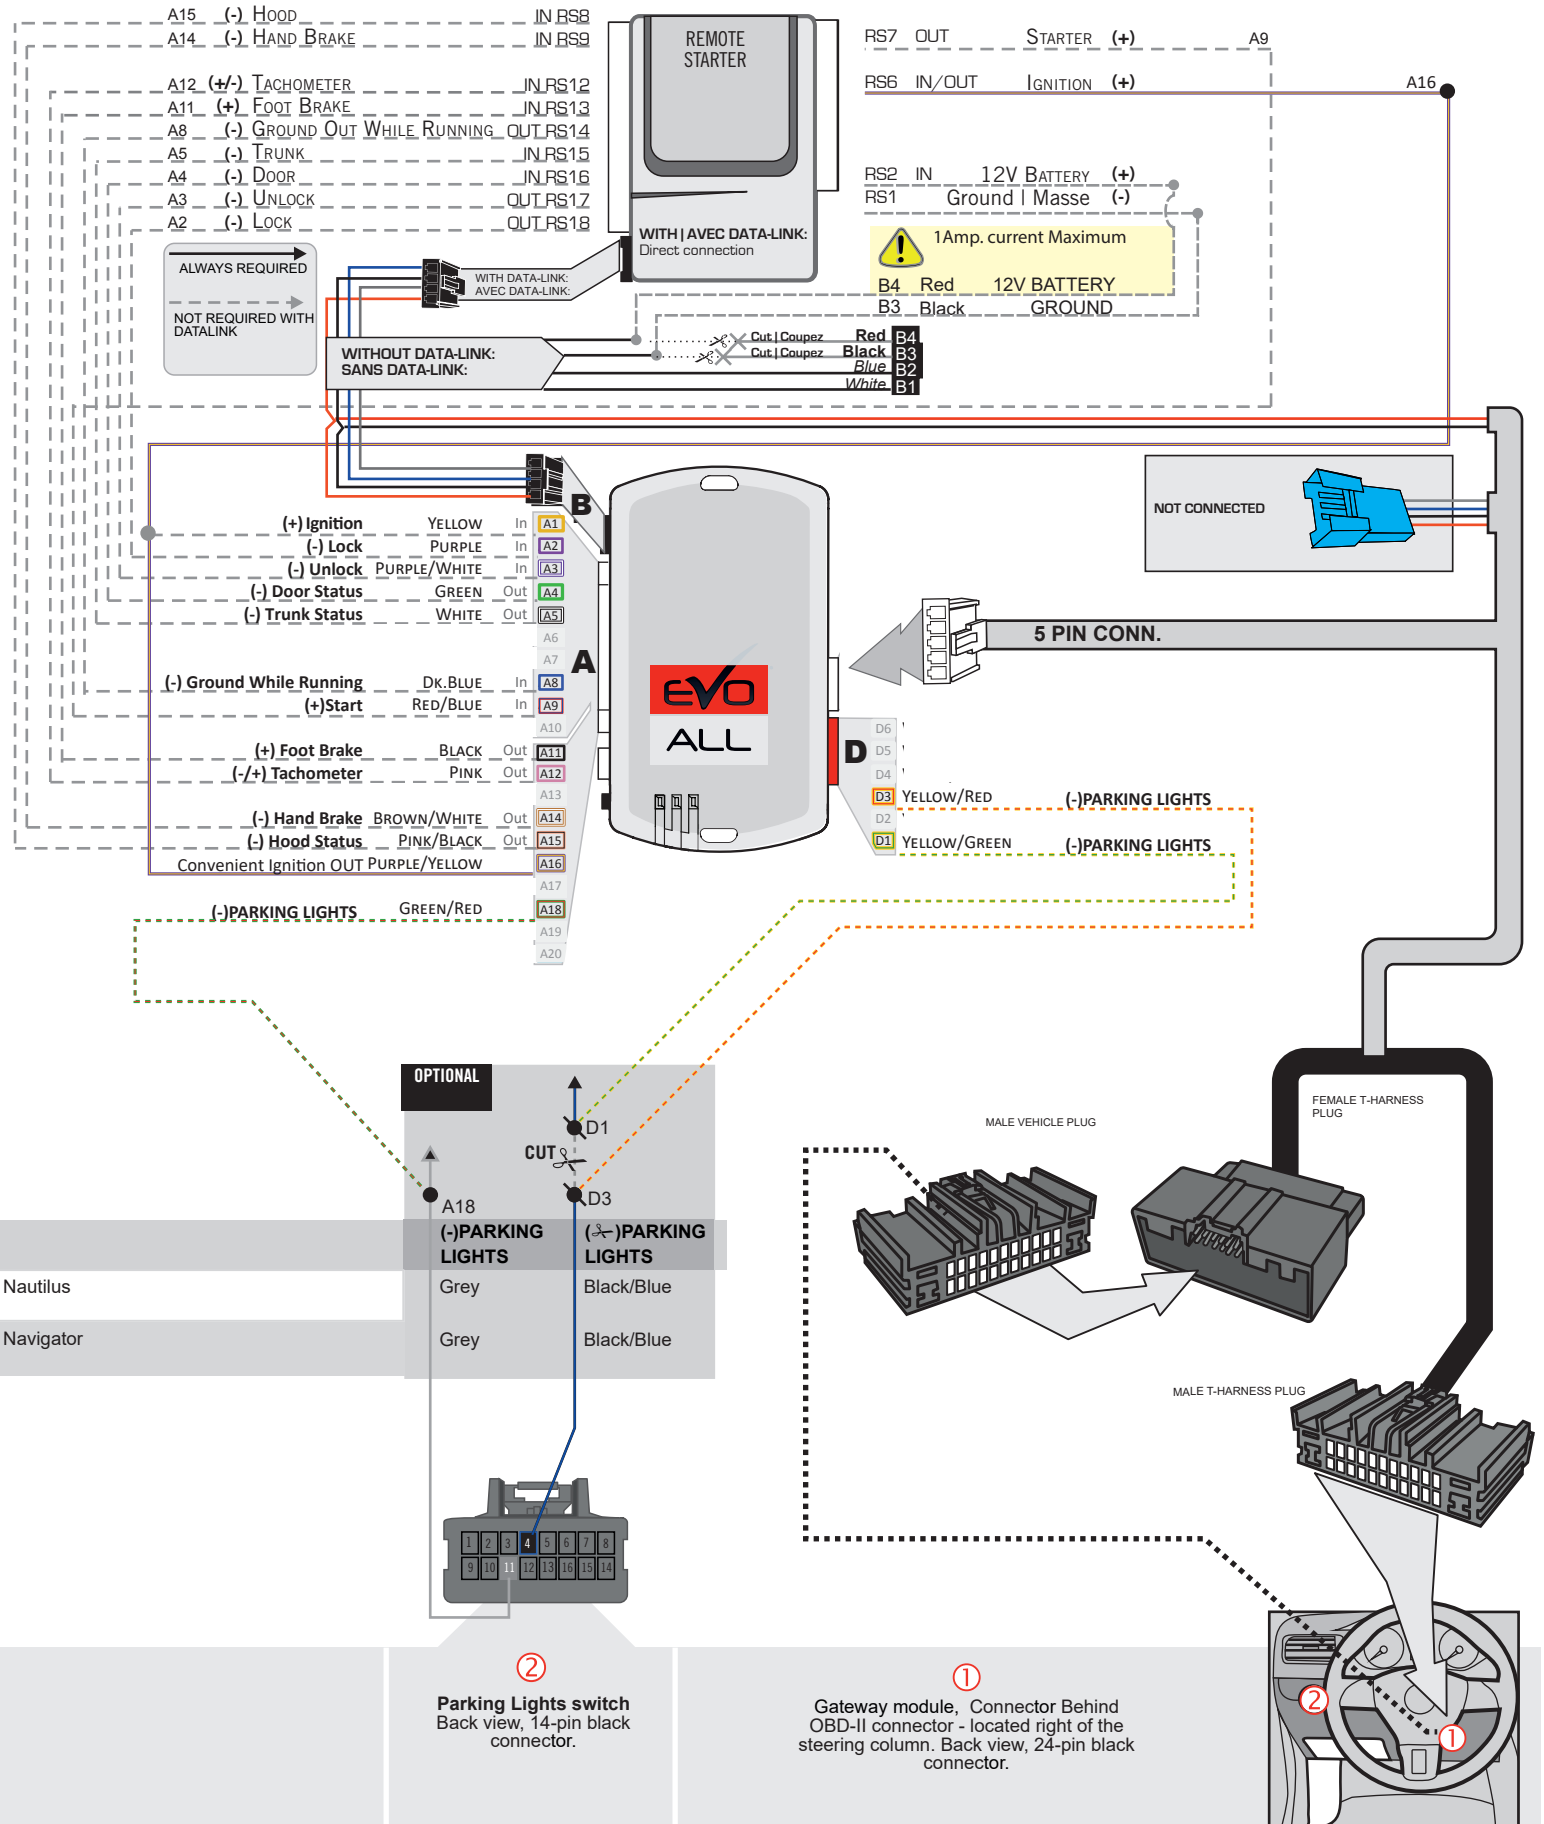



Parts required (not included)


- 1x FLASH LINK UPDATER, SOFTWARE | PROGRAMME
- 1x FLASH LINK MANAGER
- 1x Microsoft Windows Computer with Internet connection

OR

- 1x FLASH LINK MOBILE
- 1x FLASH LINK MOBILE APP
- x Smartphone Android or iOS with Internet connection (Internet provider charges may apply)

BEFORE PROGRAMMING SET THE UNIT OPTIONS AND SAVE.


1

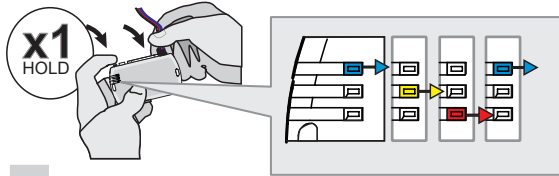

Press and hold the programming button:
Insert the 4-Pin (Data-Link) connector.


↳ The Blue, Red, Yellow and Blue & Red LEDs will alternatively illuminate.

2

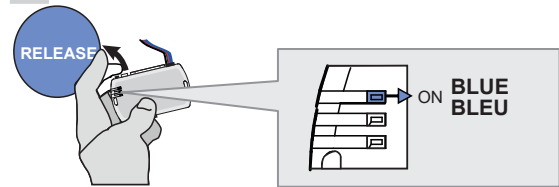


Release the programming button when the LED is BLUE.

 If the LED is not solid BLUE disconnect the 4-Pin connector (Data-Link) and go back to step 1.




3

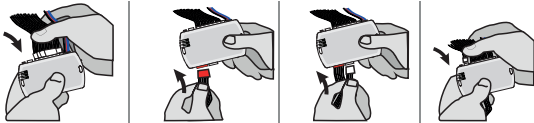

Insert the required remaining connectors.

4

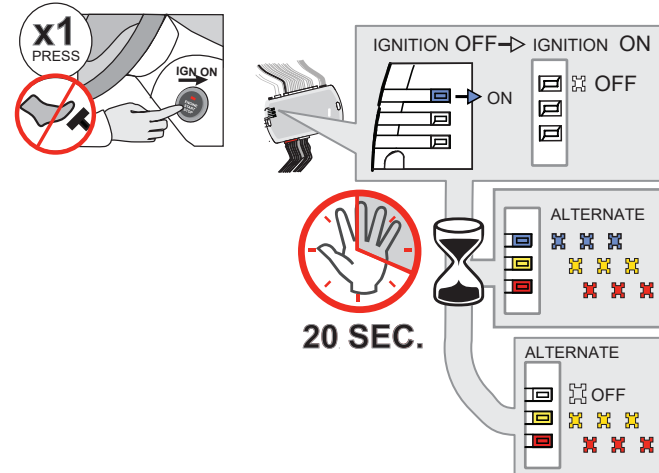

Do not press the brake pedal.
Press the Push-to-Start button once to turn on the ignition.

 
↳ The BLUE LED will turn OFF.

↳ The BLUE, YELLOW and RED LEDs will alternate.


Wait, at least 20 seconds, do not disconnect the modules or turn off the ignition.

↳ The RED and YELLOW LEDs will alternate.

Make sure that the DELs are flashing RED and YELLOW before continuing programming.



5

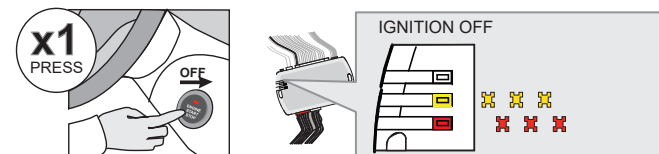

Press the Push-to-Start button once to turn off the ignition.

↳ The RED and YELLOW LEDs alternate.

KEY BYPASS PROGRAMMING PROCEDURE 2/2 |

6

Disconnect all the connectors and after the Data-Link (4-pins) connector.

7

Microsoft Windows Computer with Internet connection*

OR


Smartphone* (Internet provider charges may apply)

Use the tool: FLASH LINK UPDATER or FLASH LINK MOBILE to visit the DCRYPTOR menu.

*Parts required (not included)

8

AFTER DCRYPTOR PROGRAMMING COMPLETED
Go back to the vehicle and **reconnect** the 4-Pin (Data-Link) connector and after, all the remaining connector.

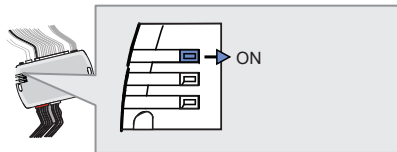

↳ The BLUE LED will turn ON.

9

x1 PRESS

IGNITION OFF → IGNITION ON

ALTERNATE

20 SEC.

FLASH RAPIDLY

Do not press the brake pedal. **Press** the Push-to-Start button once to turn on the ignition.

↳ The RED and YELLOW LEDs will turn ON.

Wait, at least 20 seconds, do not disconnect the modules or turn off the ignition.

↳ The BLUE LED will flash rapidly.

10

x1 PRESS

IGNITION ON → IGNITION OFF



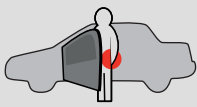

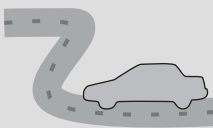
Press the Push-to-Start button once to turn off the ignition.

↳ The BLUE will turn OFF.



The module is now programmed.

REMOTE STARTER FUNCTIONALITY |

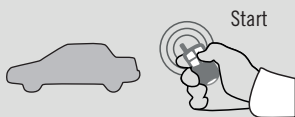 <p>Start</p> <p>All doors must be closed.</p> <p>Remote start the vehicle.</p>	 <p>UNLOCK</p> <p>Unlock the doors with either:</p> <ul style="list-style-type: none"> • The OEM remote • The remote-starter remote • Or the proximity remote 	 <p>Enter the vehicle with the SMART-KEY.</p>	 <p>DO NOT PRESS THE BRAKE PEDAL.</p> <p>Press and release the Push-to-Start button once.</p>	 <p>Press the brake pedal. The vehicle can now be put in to gear and driven.</p> <p>If the Smart-Key is not detected the vehicle will shut down.</p>
--	---	--	---	---

REGULAR & THAR-FOR3 INSTALLATION

ADDENDUM - SUGGESTED WIRING CONFIGURATION




ONLY COMPATIBLE WITH AUTOMATIC TRANSMISSION VEHICLES.



Vehicle functions supported in this diagram (functional if equipped)

VEHICLE	YEARS	Immobilizer bypass	Lock	Unlock	Arm	Disarm	Heated Seats**	Rear Defrost**	RAP Disable	Parking Lights***	Tachometer	Door Status	Trunk Status	Hood Status*	Hand-Brake Status	Foot-Brake Status	Active OEM Remote Start
FORD																	
Ranger	key 2020	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•

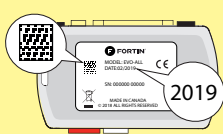

COMPATIBLE MODULE REQUIRED:

QR CODE ON THE LABEL
MANUFACTURED AFTER: 2019

FIRMWARE VERSION
58.[02]
MINIMUM

To add the firmware version and the options, use the **FLASH LINK UPDATER** or **FLASH LINK MOBILE** tool, sold separately.



Program bypass option:

UNIT OPTION

DESCRIPTION

C1

OEM Remote status (Lock/Unlock) monitoring

IF THE VEHICLE IS NOT EQUIPPED WITH FUNCTIONAL HOOD PIN:

A11

OFF

Hood trigger (Output Status).

NOTES

The vehicles OEM remote and SmartKey are still operable during remote start.

**Heated seats The heated seats and rear defrost activate automatically when it cold.

***Parking Lights The parking Lights at remote start only.



The vehicle must be equipped with the OEM remote with the door locks.

MANDATORY INSTALL

*HOOD PIN



HOOD STATUS: THE HOOD PIN SWITCH MUST BE INSTALLED IF THE VEHICLE CAN BE REMOTE STARTED WITH THE HOOD OPEN, SET FUNCTION A11 TO OFF.

A11

OFF

Notice: the installation of safety elements are mandatory. The hood pin is an essential security element and must be installed.

THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.

DESCRIPTION |

	Parts required (Not included)	PAGE
--	-------------------------------	------

WIRE TO WIRE DIAGRAM


AUTOMATIC TRANSMISSION	1x 7.5 Amp. fuse	Page 3
------------------------	------------------	--------

THARNES DIAGRAM


THARNES THAR-FOR3 AUTOMATIC TRANSMISSION	1x THAR-FOR3	Page 4
--	--------------	--------




① Gateway module, Behind OBD-II connector

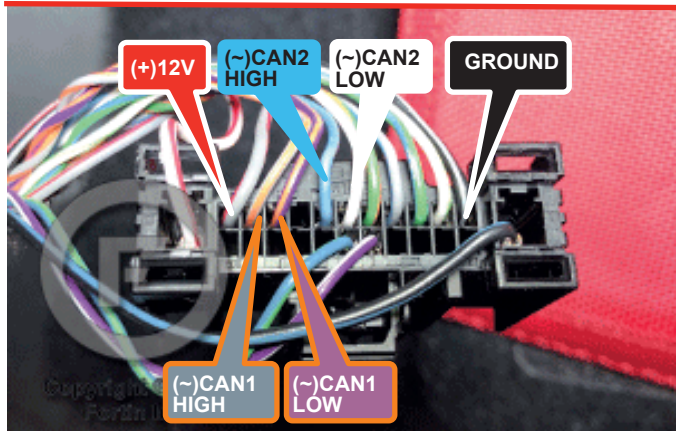




AUTOMATIC TRANSMISSION WIRING CONNECTION |

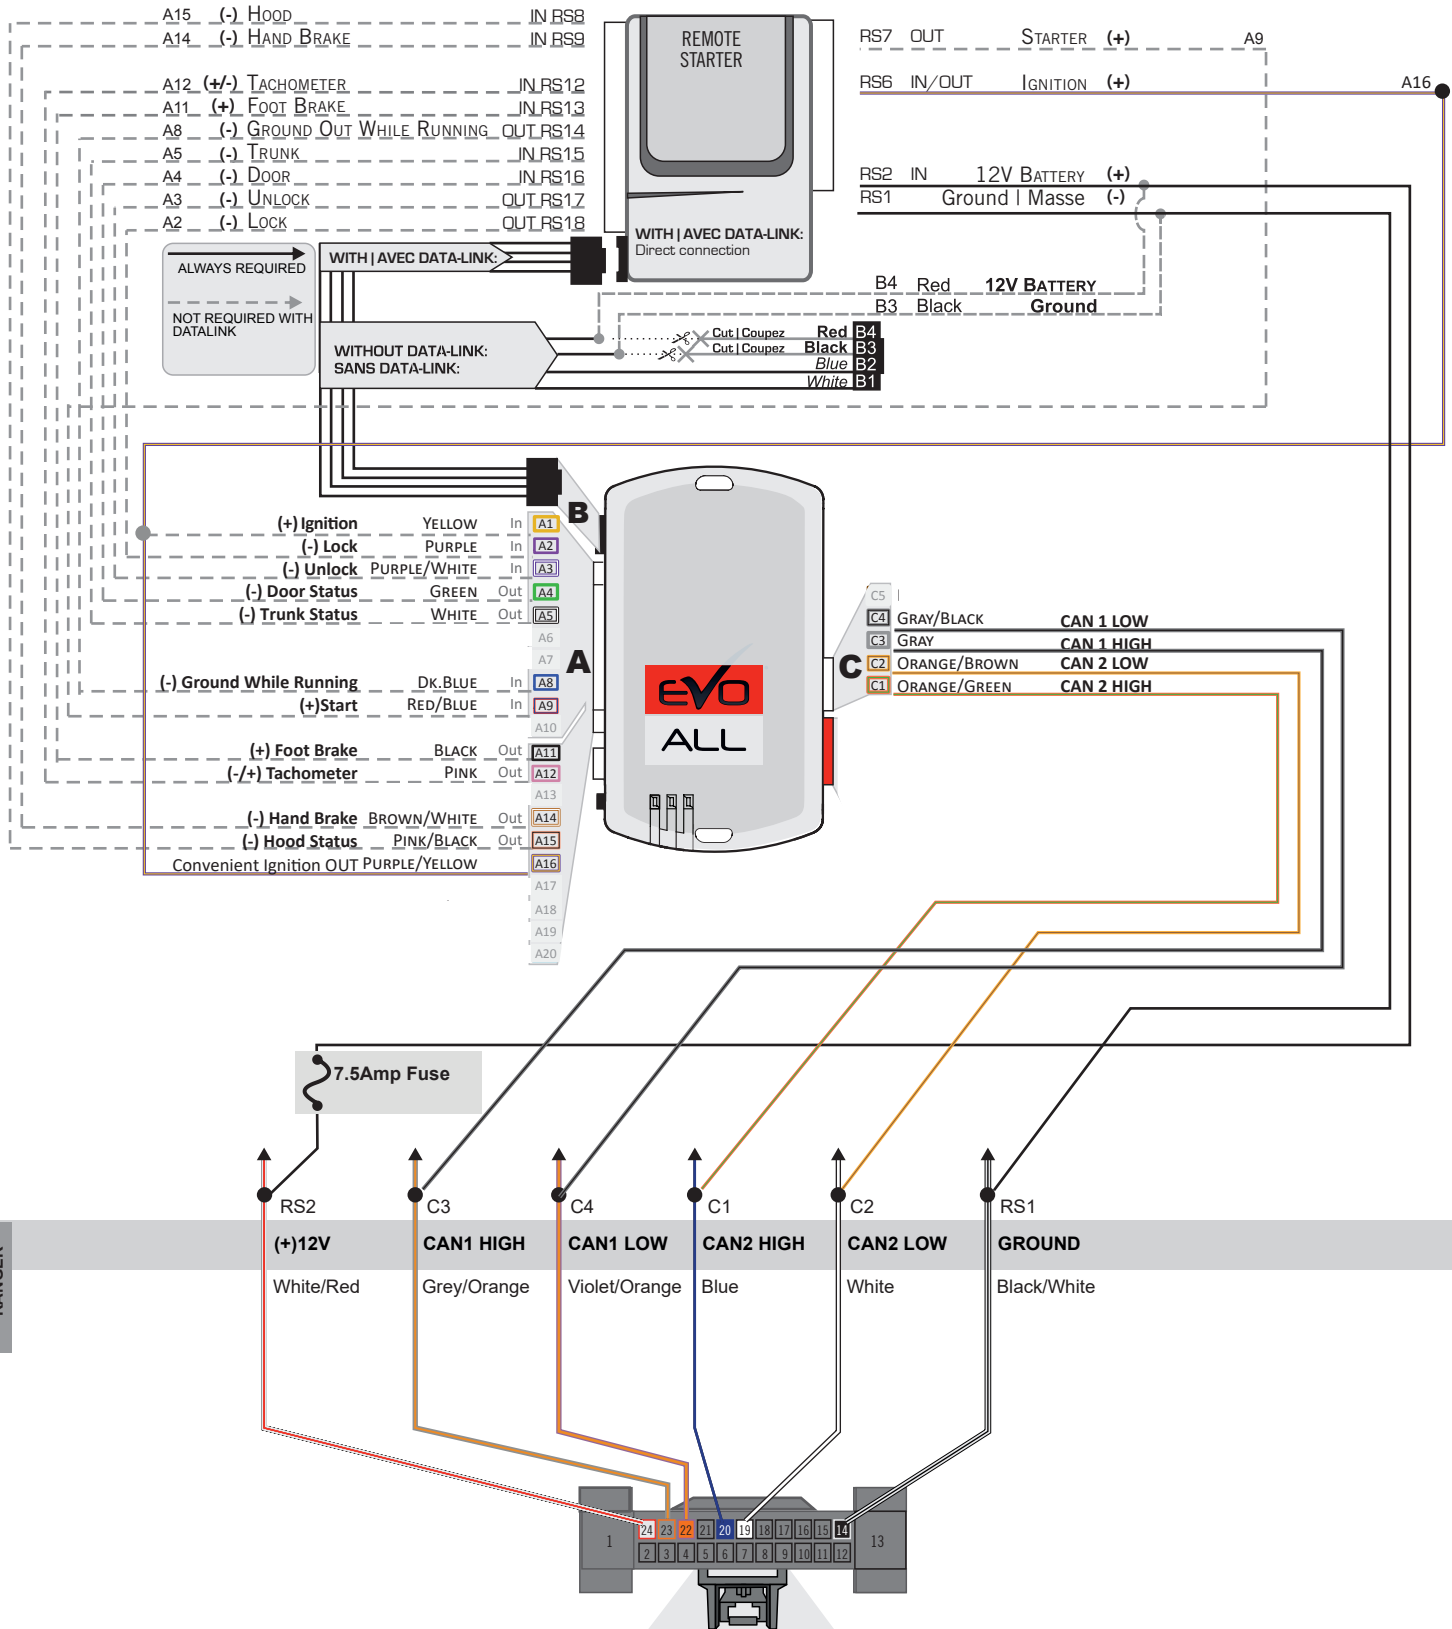


① Gateway module, Connector Behind OBD-II connector - located at dash board driver's side
 Back view, 24-pin black connector.

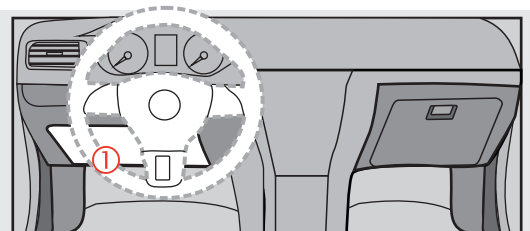

THAR-FOR3 | T-HARNESS - AUTOMATIC TRANSMISSION |

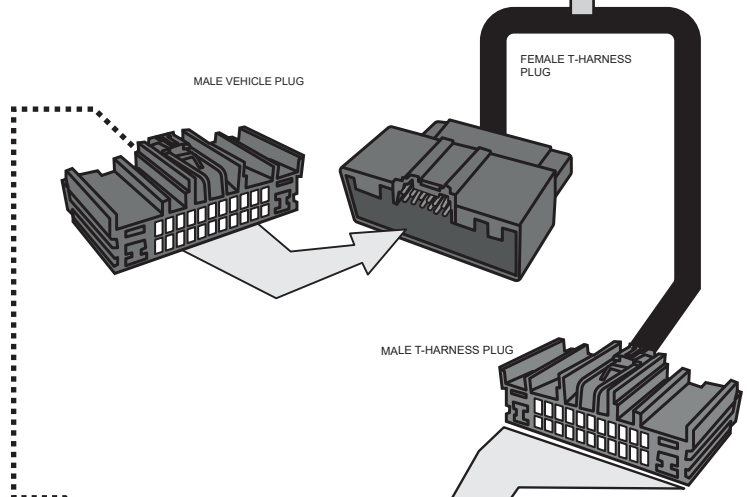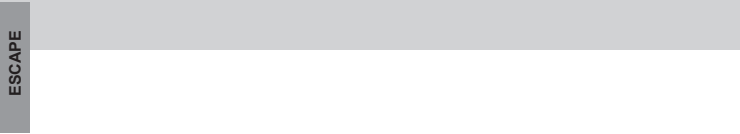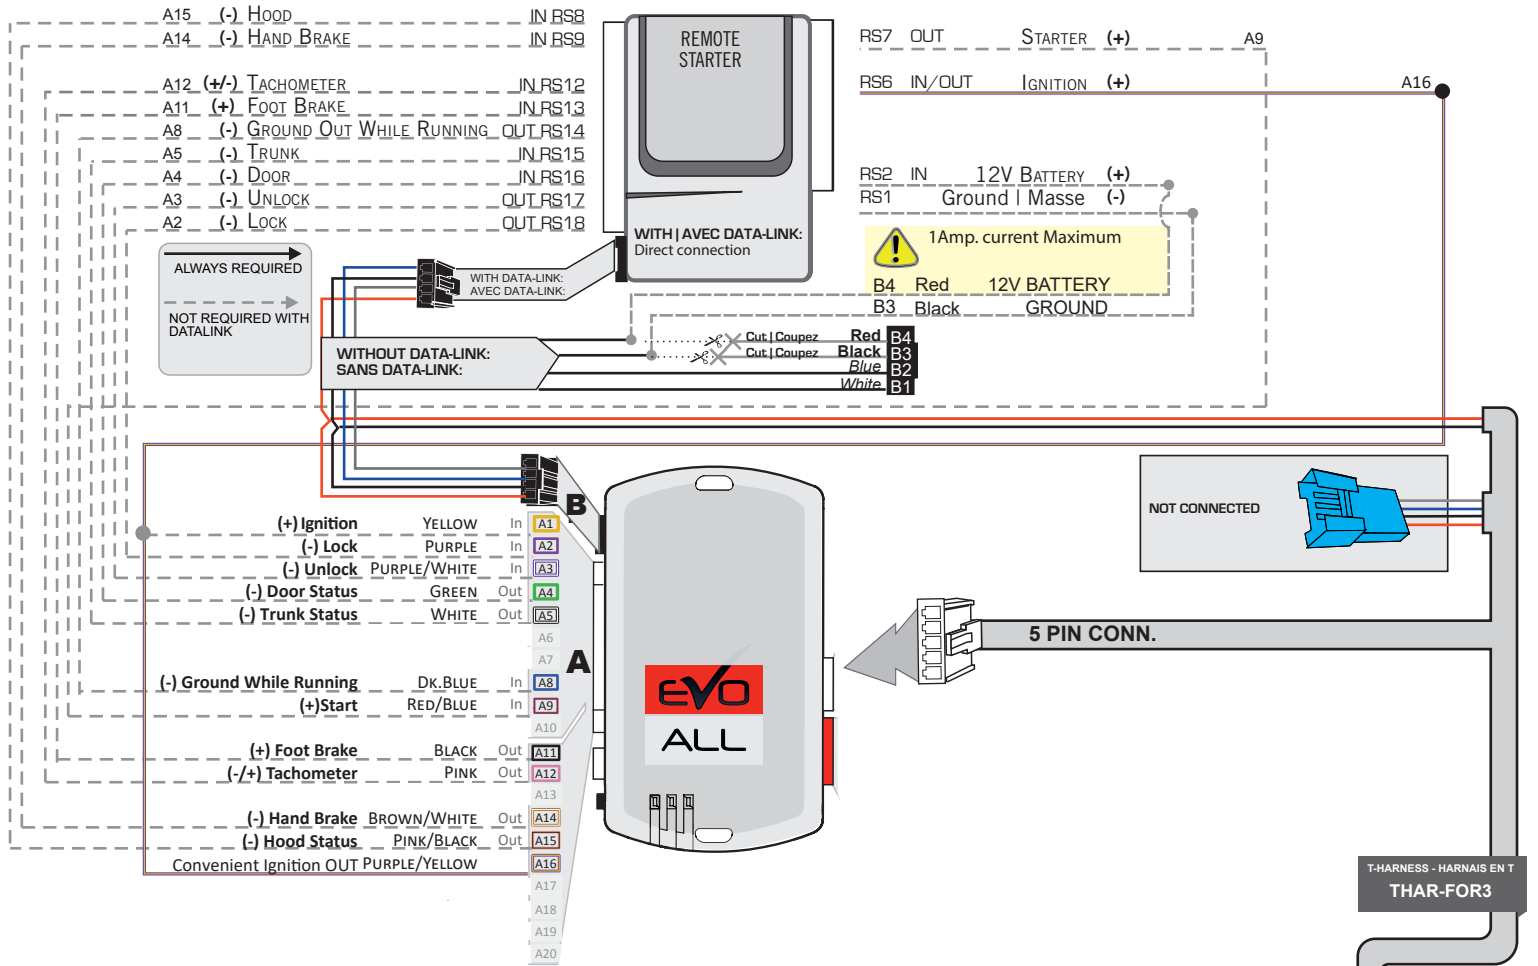

① Gateway module, Connector Behind OBD-II connector - located at dash board driver's side Back view, 24-pin black connector.

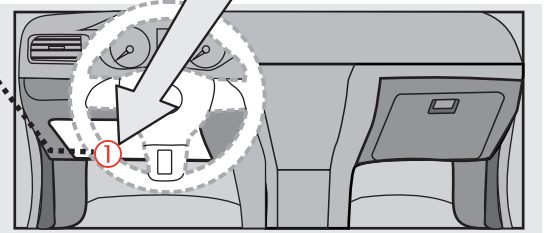



Parts required (not included)


- 1x **FLASH LINK UPDATER,**
- 1x **FLASH LINK MANAGER**
SOFTWARE | PROGRAMME
- 1x Microsoft Windows Computer with Internet connection

OR

- 1x **FLASH LINK MOBILE**
- 1x **FLASH LINK MOBILE APP**
- Smartphone Android or iOS with Internet connection
(Internet provider charges may apply)

BEFORE PROGRAMMING SET THE UNIT OPTIONS AND SAVE.


1

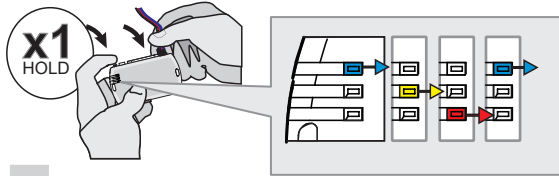

Press and hold the programming button:
Insert the 4-Pin (Data-Link) connector.


↳ The Blue, Red, Yellow and Blue & Red LEDs will alternatively illuminate.

2

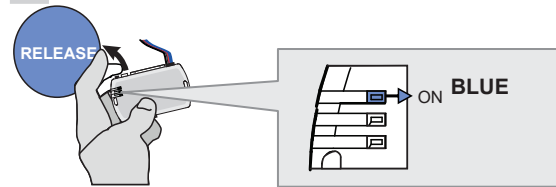


Release the programming button when the LED is BLUE.

 If the LED is not solid BLUE disconnect the 4-Pin connector (Data-Link) and go back to step 1.




3

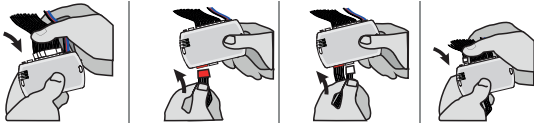

Insert the required remaining connectors.

4

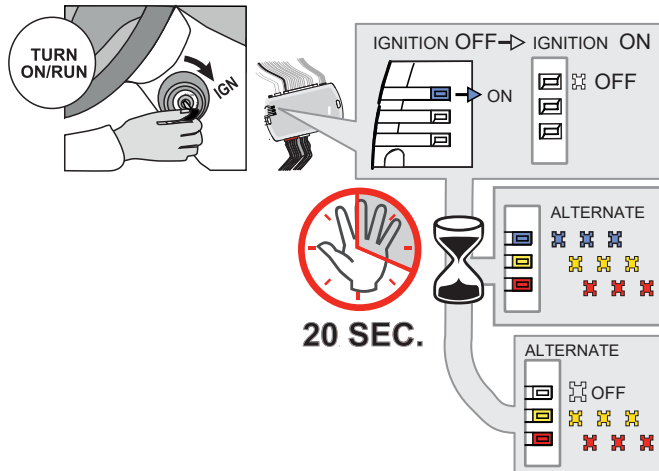

Turn the key to the Ignition ON/RUN position.

↳ The BLUE LED will turn OFF.

↳ The BLUE, YELLOW and RED LEDs will alternate.


Wait, at least 20 seconds, do not disconnect the modules or turn off the ignition.

↳ The RED and YELLOW LEDs will alternate.

Make sure that the DELs are flashing RED and YELLOW before continuing programming.



5

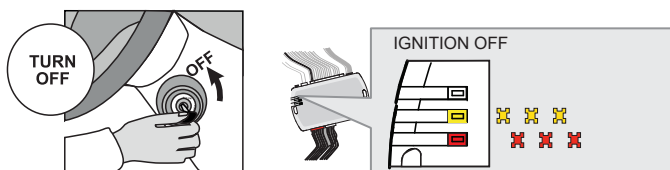


Turn the key to the OFF position.

↳ The RED and YELLOW LEDs alternate.


KEY BYPASS PROGRAMMING PROCEDURE 2/2 |

6

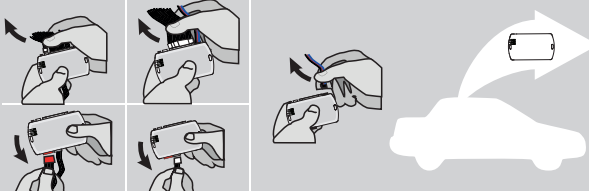

Disconnect all the connectors and after the Data-Link (4-pins) connector.

7



Microsoft Windows Computer with Internet connection*

FLASH LINK UPDATER* **FLASH LINK MANAGER***
SOFTWARE | PROGRAMME

OR


Smartphone* (Internet provider charges may apply)

VEHICLE'S OBDII CONNECTOR **FLASH LINK MOBILE***


Use the tool: FLASH LINK UPDATER or FLASH LINK MOBILE to visit the DCryptor menu.

*Parts required (not included)

8

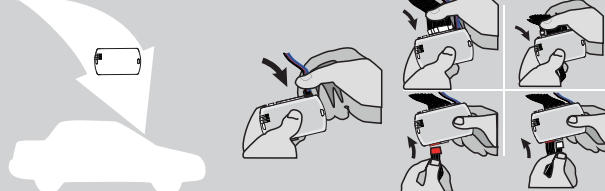


AFTER DCRYPTOR PROGRAMMING COMPLETED
Go back to the vehicle and reconnect the 4-Pin (Data-Link) connector and after, all the remaining connector.

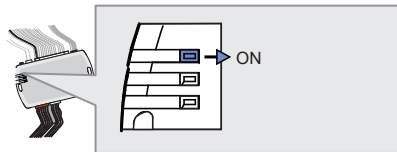

↳ The BLUE LED will turn ON.

9

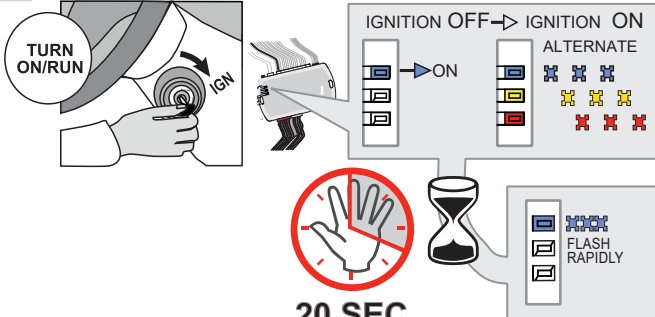

TURN ON/RUN

IGNITION OFF → IGNITION ON

ALTERNATE

ON

FLASH RAPIDLY

20 SEC.


Turn the key to the Ignition ON/RUN position.

↳ The RED and YELLOW LEDs will turn ON.

Wait, at least 20 seconds, do not disconnect the modules or turn off the ignition.

↳ The BLUE LED will flash rapidly.

10

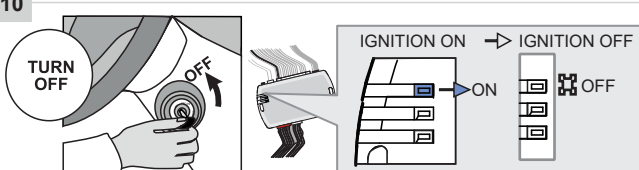

TURN OFF

IGNITION ON → IGNITION OFF

ON

OFF

Turn the key to the OFF position.

↳ The BLUE will turn OFF.



The module is now programmed.

REMOTE STARTER FUNCTIONALITY |



All doors must be closed.



Remote start the vehicle.



Unlock the doors with the remote-starter remote or the OEM remote.



Insert and Turn the key to the Ignition ON/RUN position.



Press the brake pedal.



The vehicle can now be put in to gear and driven.

REGULAR & THAR-FOR3 INSTALLATION

ADDENDUM - SUGGESTED WIRING CONFIGURATION




ONLY COMPATIBLE WITH AUTOMATIC TRANSMISSION VEHICLES.



Vehicle functions supported in this diagram (functional if equipped)

VEHICLE	YEARS	Immobilizer bypass	Lock	Unlock	Arm	Disarm	Heated Seats**	Rear Defrost**	RAP Disable	Parking Lights***	Tachometer	Door Status	Trunk Status	Hood Status*	Hand-Brake Status	Foot-Brake Status	Active OEM Remote Start
FORD Ranger	Push-to-Start 2020	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•

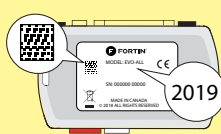

COMPATIBLE MODULE REQUIRED:

QR CODE ON THE LABEL
MANUFACTURED AFTER: 2019

FIRMWARE VERSION

58.[02]
MINIMUM

To add the firmware version and the options, use the **FLASH LINK UPDATER** or **FLASH LINK MOBILE** tool, sold separately.



Program bypass option:

UNIT OPTION

DESCRIPTION

C1

OEM Remote status (Lock/Unlock) monitoring

D6

Push-to-Start

IF THE VEHICLE IS NOT EQUIPPED WITH FUNCTIONAL HOOD PIN:

A11

OFF

Hood trigger (Output Status).

NOTES

The vehicles OEM remote and SmartKey are still operable during remote start.

**Heated seats The heated seats and rear defrost activate automatically when it cold.
**Rear Defrost

***Parking Lights The parking Lights at remote start only.

MANDATORY INSTALL

*HOOD PIN



HOOD STATUS: THE HOOD PIN SWITCH MUST BE INSTALLED IF THE VEHICLE CAN BE REMOTE STARTED WITH THE HOOD OPEN, SET FUNCTION A11 TO OFF.

A11

OFF

Notice: the installation of safety elements are mandatory. The hood pin is an essential security element and must be installed.

THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.

DESCRIPTION | DESCRIPTION

	Parts required (Not included)	PAGE
--	-------------------------------	------

WIRE TO WIRE DIAGRAM


AUTOMATIC TRANSMISSION	1x 7.5 Amp. fuse	Page 3
------------------------	------------------	--------

THARNES DIAGRAM


THARNES THAR-FOR3 AUTOMATIC TRANSMISSION	1x THAR-FOR3	Page 4
--	--------------	--------




① Gateway module, Behind OBD-II connector

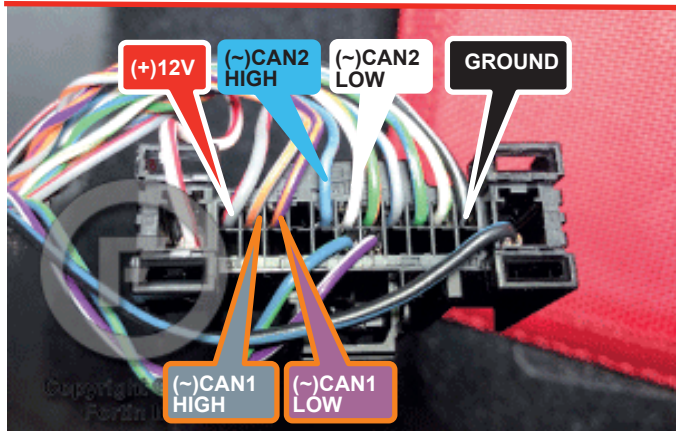


AUTOMATIC TRANSMISSION WIRING CONNECTION |

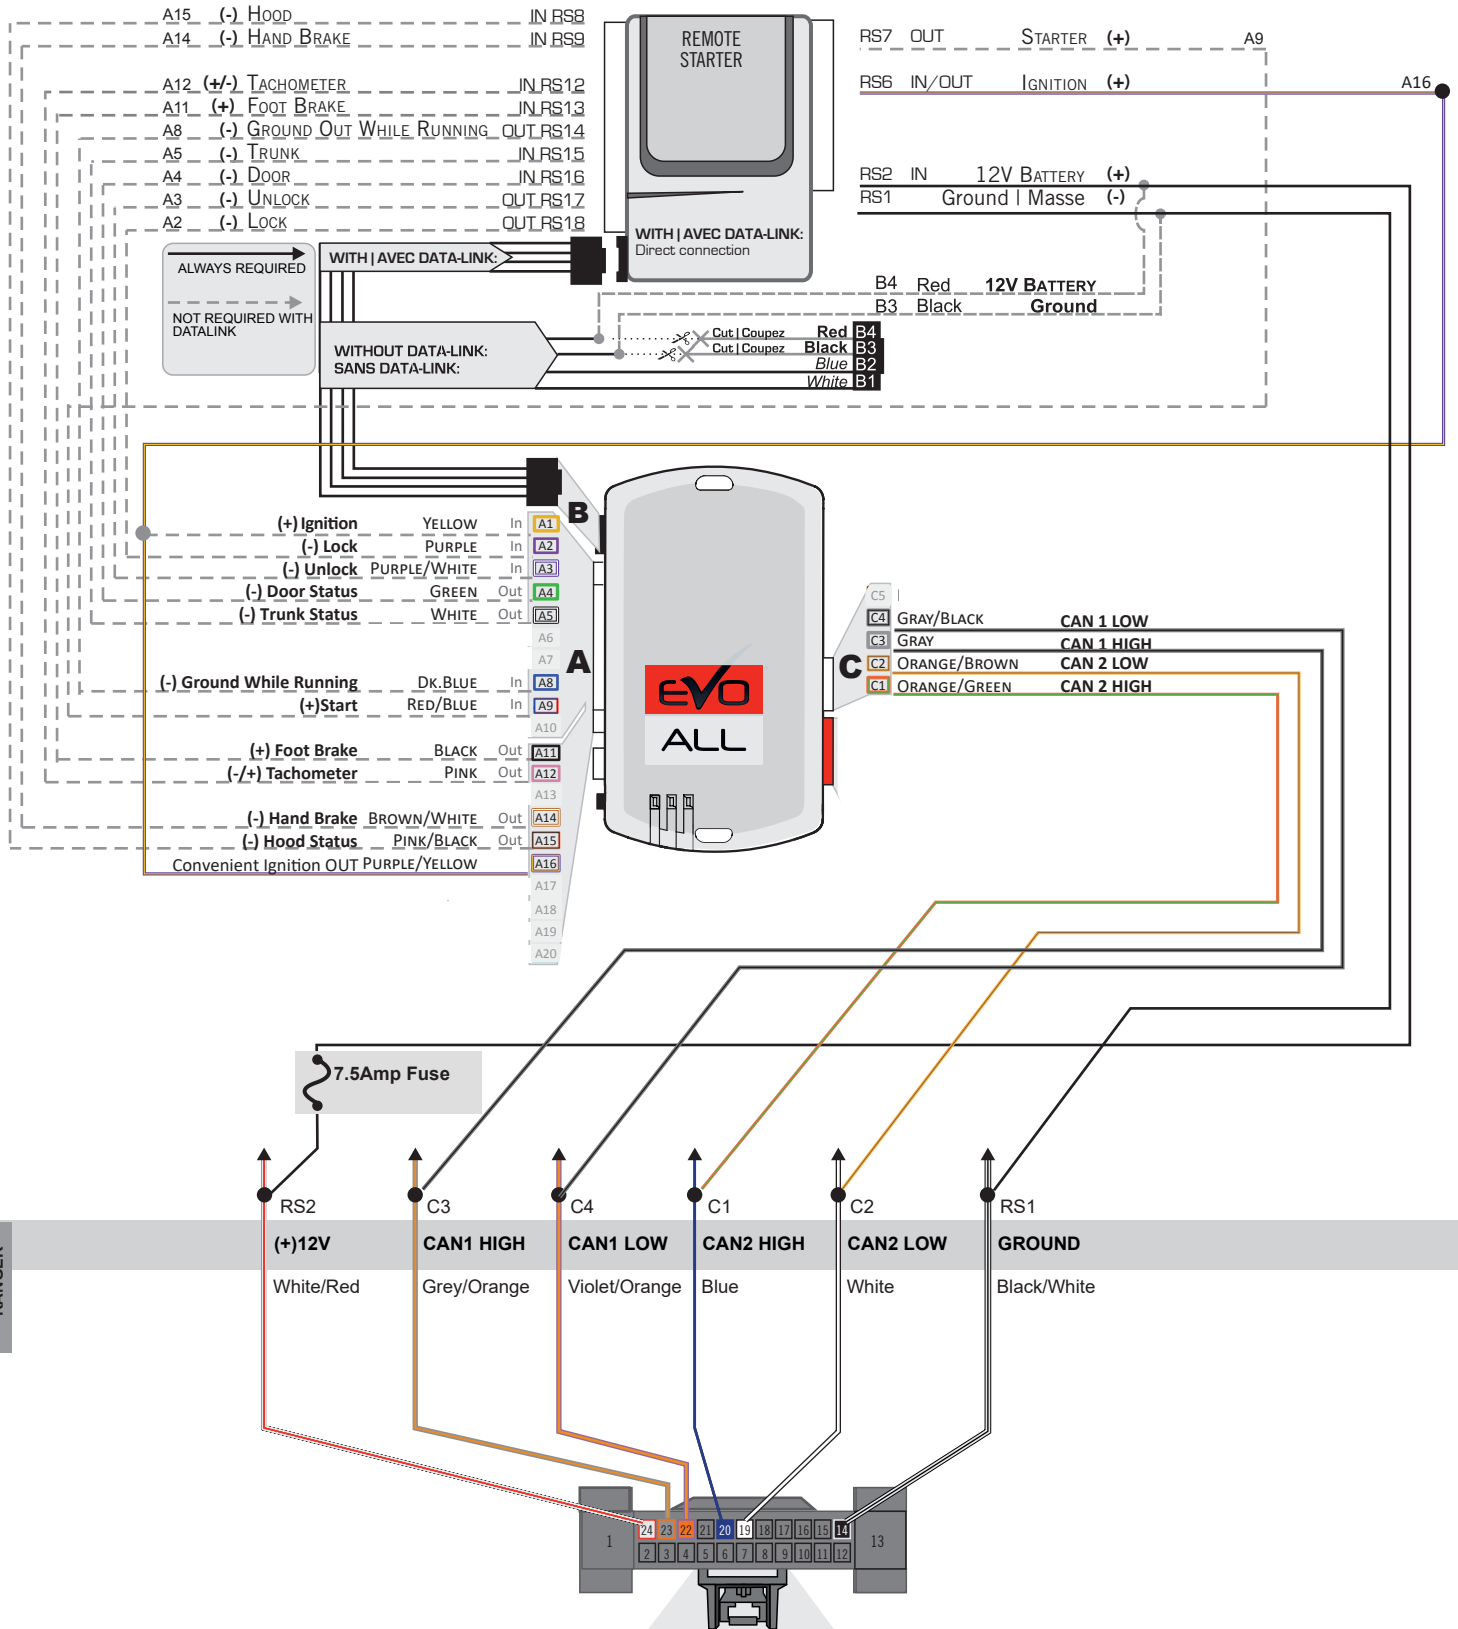


① Gateway module, Connector Behind OBD-II connector - located at dash board driver's side
Back view, 24-pin black connector.

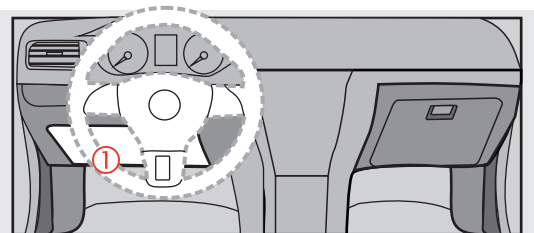


THAR-FOR3 | T-HARNESS - AUTOMATIC TRANSMISSION |

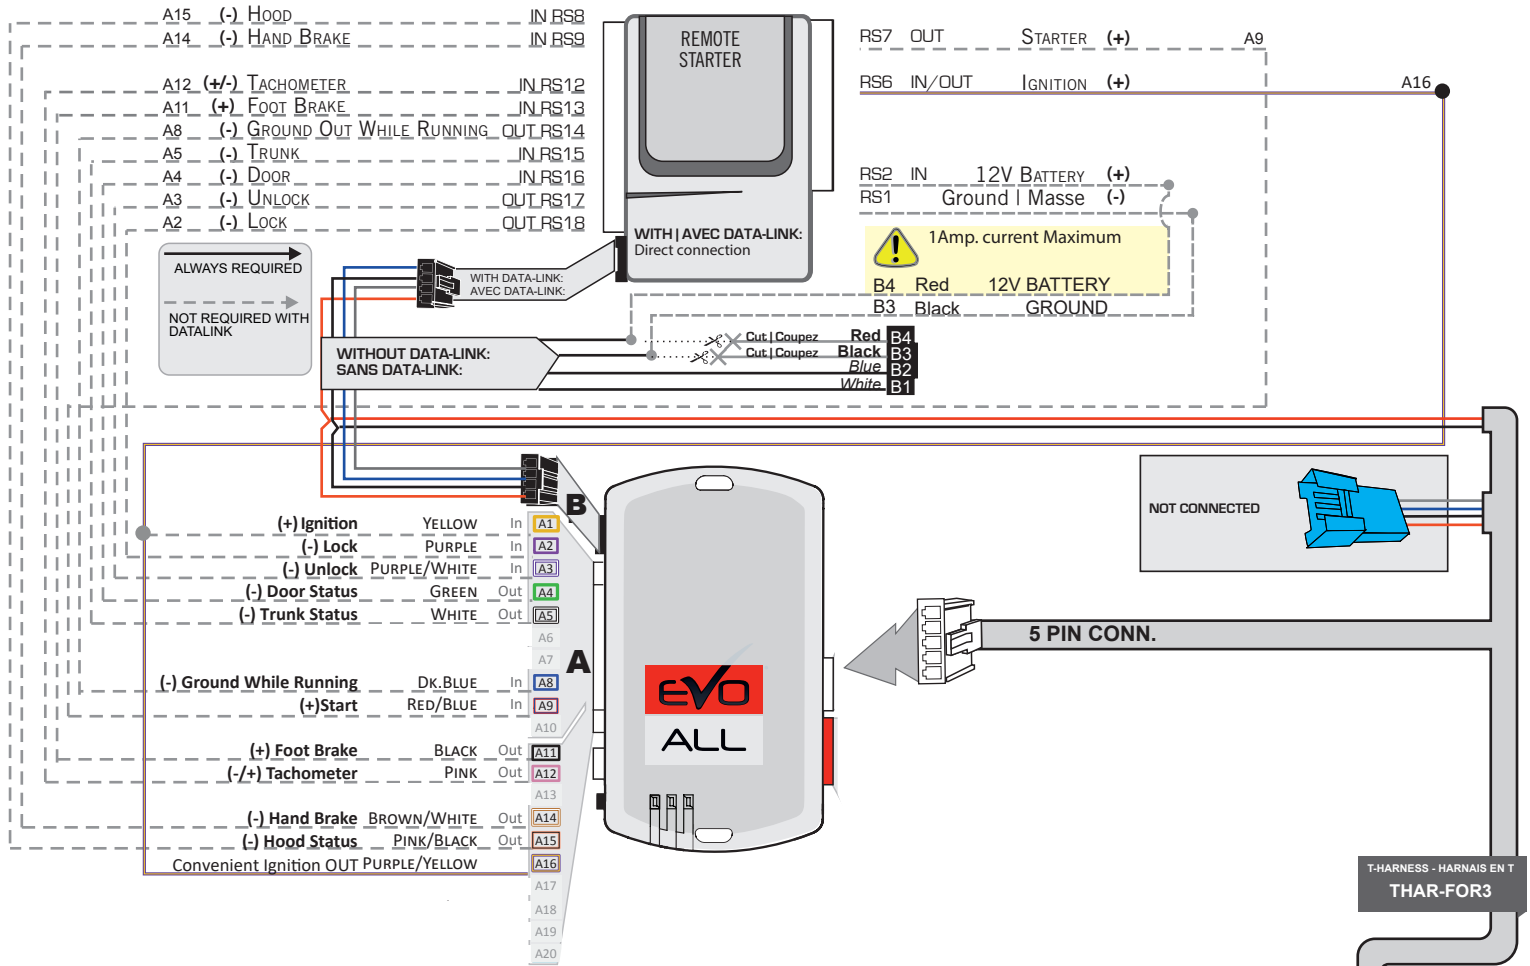

RANGER

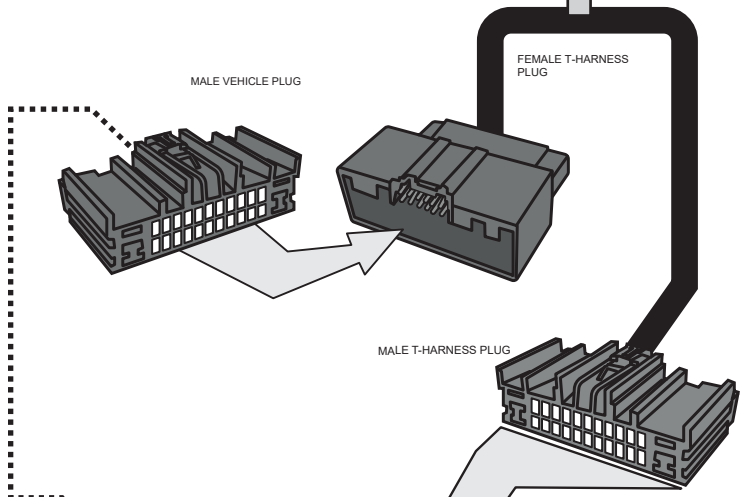

① Gateway module, Connector Behind OBD-II connector - located at dash board driver's side Back view, 24-pin black connector.

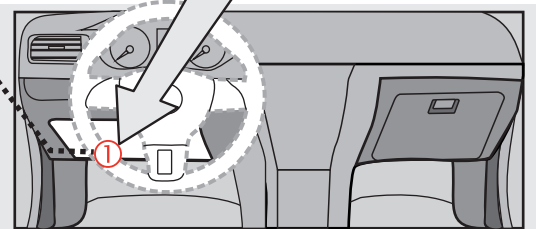



Parts required (not included)


- 1x FLASH LINK UPDATER, SOFTWARE | PROGRAMME
- 1x FLASH LINK MANAGER
- 1x Microsoft Windows Computer with Internet connection

OR

- 1x FLASH LINK MOBILE
- 1x FLASH LINK MOBILE APP
- Smartphone Android or iOS with Internet connection (Internet provider charges may apply)

BEFORE PROGRAMMING SET THE UNIT OPTIONS AND SAVE.


1

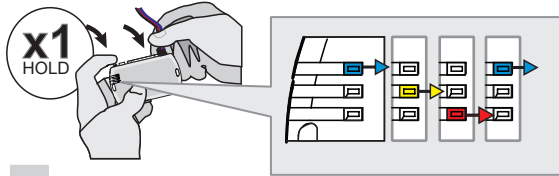

Press and hold the programming button:
Insert the 4-Pin (Data-Link) connector.


↳ The Blue, Red, Yellow and Blue & Red LEDs will alternatively illuminate.

2

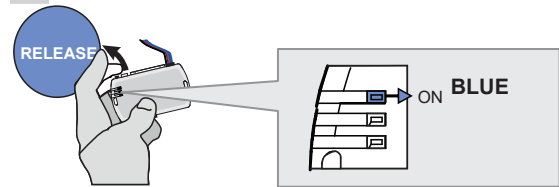


Release the programming button when the LED is BLUE.

 If the LED is not solid BLUE disconnect the 4-Pin connector (Data-Link) and go back to step 1.




3

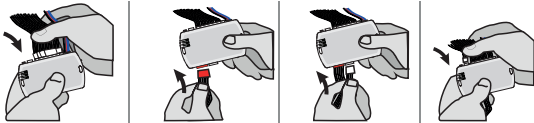

Insert the required remaining connectors.

4

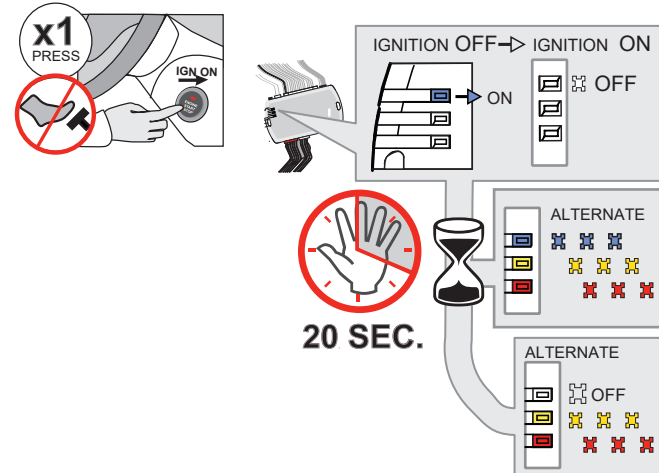

Do not press the brake pedal.
Press the Push-to-Start button once to turn on the ignition.

 
↳ The BLUE LED will turn OFF.

↳ The BLUE, YELLOW and RED LEDs will alternate.


Wait, at least 20 seconds, do not disconnect the modules or turn off the ignition.

↳ The RED and YELLOW LEDs will alternate.

Make sure that the DELs are flashing RED and YELLOW before continuing programming.



5

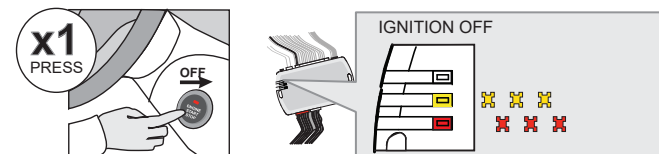


Press the Push-to-Start button once to turn off the ignition.

↳ The RED and YELLOW LEDs alternate.


KEY BYPASS PROGRAMMING PROCEDURE 2/2 |

6

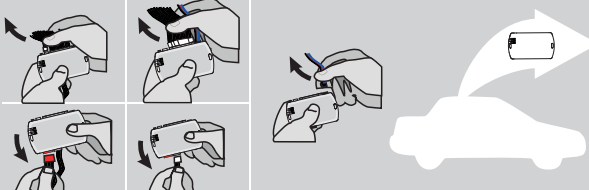

Disconnect all the connectors and after the Data-Link (4-pins) connector.

7



Microsoft Windows Computer with Internet connection*


the tool:
FLASH LINK UPDATER or **FLASH LINK MOBILE** to visit the DCryptor menu.

OR


Smartphone* (Internet provider charges may apply)

*Parts required (not included)

8

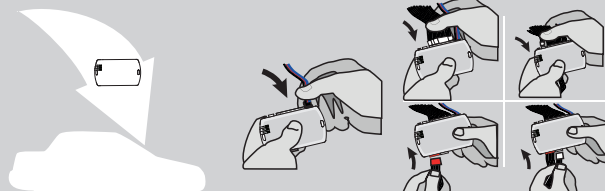


AFTER DCRYPTOR PROGRAMMING COMPLETED
Go back to the vehicle and **reconnect** the 4-Pin (Data-Link) connector and after, all the remaining connector.

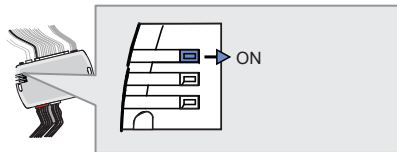

↳ The BLUE LED will turn ON.

9

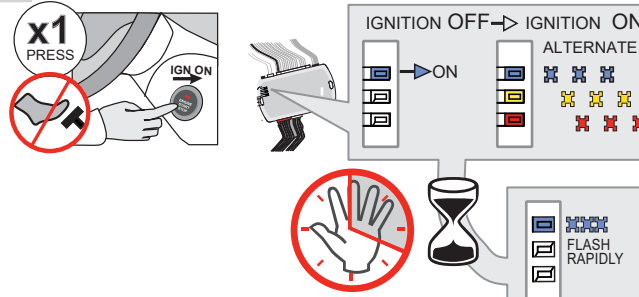

x1 PRESS (with a red 'X' over the push-to-start button)

IGNITION OFF → IGNITION ON

Do not press the brake pedal. **Press** the Push-to-Start button once to turn on the ignition.

↳ The RED and YELLOW LEDs will turn ON.


20 SEC. (with a hand icon and an hourglass)

FLASH RAPIDLY

Wait, at least 20 seconds, do not disconnect the modules or turn off the ignition.

↳ The BLUE LED will flash rapidly.

10

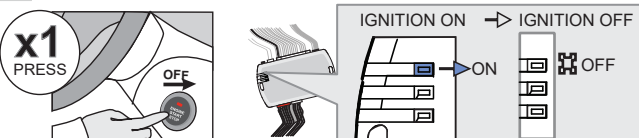

x1 PRESS (with a red 'X' over the push-to-start button)

IGNITION ON → IGNITION OFF



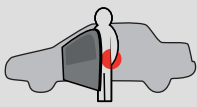

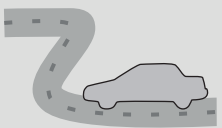
Press the Push-to-Start button once to turn off the ignition.

↳ The BLUE will turn OFF.



The module is now programmed.

REMOTE STARTER FUNCTIONALITY |

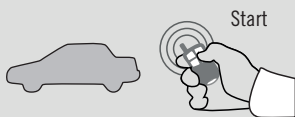 <p>Start</p> <p>All doors must be closed.</p> <p>Remote start the vehicle.</p>	 <p>UNLOCK</p> <p>Unlock the doors with either:</p> <ul style="list-style-type: none"> • The OEM remote • The remote-starter remote • Or the proximity remote 	 <p>Enter the vehicle with the SMART-KEY.</p>	 <p>DO NOT PRESS THE BRAKE PEDAL.</p> <p>Press and release the Push-to-Start button once.</p>	 <p>Press the brake pedal. The vehicle can now be put in to gear and driven.</p> <p>If the Smart-Key is not detected the vehicle will shut down.</p>
--	---	--	---	---

REGULAR & THAR-FOR3 INSTALLATION

ADDENDUM - SUGGESTED WIRING CONFIGURATION



ONLY COMPATIBLE WITH AUTOMATIC TRANSMISSION VEHICLES.




VEHICLE

YEARS

Vehicle functions supported in this diagram (functional if equipped)

VEHICLE	YEARS	Immobilizer bypass	Lock	Unlock	Arrn	Disarm	RAP Disable	Parking Lights***	Tachometer	Heated seats**	Heated Mirrors**	Rear defrost	Door Status	Trunk Status	Hood Status*	Hand-Brake Status	Foot-Brake Status	Active OEM Remote Start
FORD																		
Transit	Key 2020	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
	Diesel Key 2020	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•

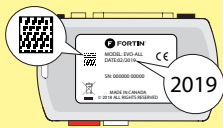

COMPATIBLE MODULE REQUIRED:

QR CODE ON THE LABEL
MANUFACTURED AFTER: 2019

FIRMWARE VERSION

58.[02]
MINIMUM

To add the firmware version and the options, use the **FLASH LINK UPDATER** or **FLASH LINK MOBILE** tool, sold separately.



Program bypass option:

UNIT OPTION

C1

DESCRIPTION

OEM Remote status (Lock/Unlock) monitoring

IF THE VEHICLE IS NOT EQUIPPED WITH FUNCTIONAL HOOD PIN:

A11

OFF

Hood trigger (Output Status).

NOTES

The vehicles OEM remote and SmartKey are still operable during remote start.

**Heated seats The heated seats and rear defrost activate automatically when it cold.

***Parking Lights The parking Lights at remote start only.



The vehicle must be equipped with the OEM remote with the door locks.

MANDATORY INSTALL

***HOOD PIN**



HOOD STATUS: THE HOOD PIN SWITCH MUST BE INSTALLED IF THE VEHICLE CAN BE REMOTE STARTED WITH THE HOOD OPEN, SET FUNCTION A11 TO OFF.

A11

OFF

Notice: the installation of safety elements are mandatory. The hood pin is an essential security element and must be installed.

THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.

DESCRIPTION |

	Parts required (Not included)	PAGE
--	-------------------------------	------


WIRE TO WIRE DIAGRAM

AUTOMATIC TRANSMISSION	1x 7.5 Amp. fuse	Page 3
------------------------	------------------	--------


THARNES DIAGRAM

THARNES THAR-FOR3 AUTOMATIC TRANSMISSION	1x THAR-FOR3	Page 4
--	--------------	--------


① Gateway module, located at dash board driver's side,

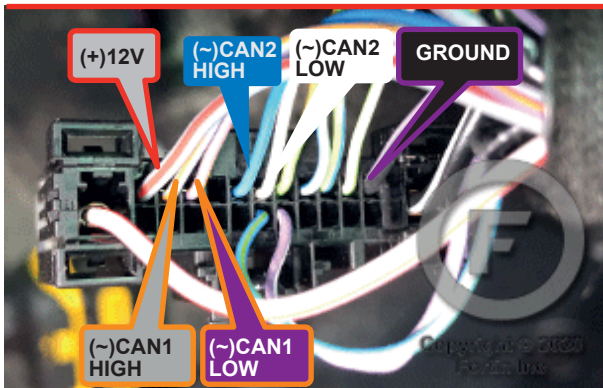


AUTOMATIC TRANSMISSION WIRING CONNECTION |

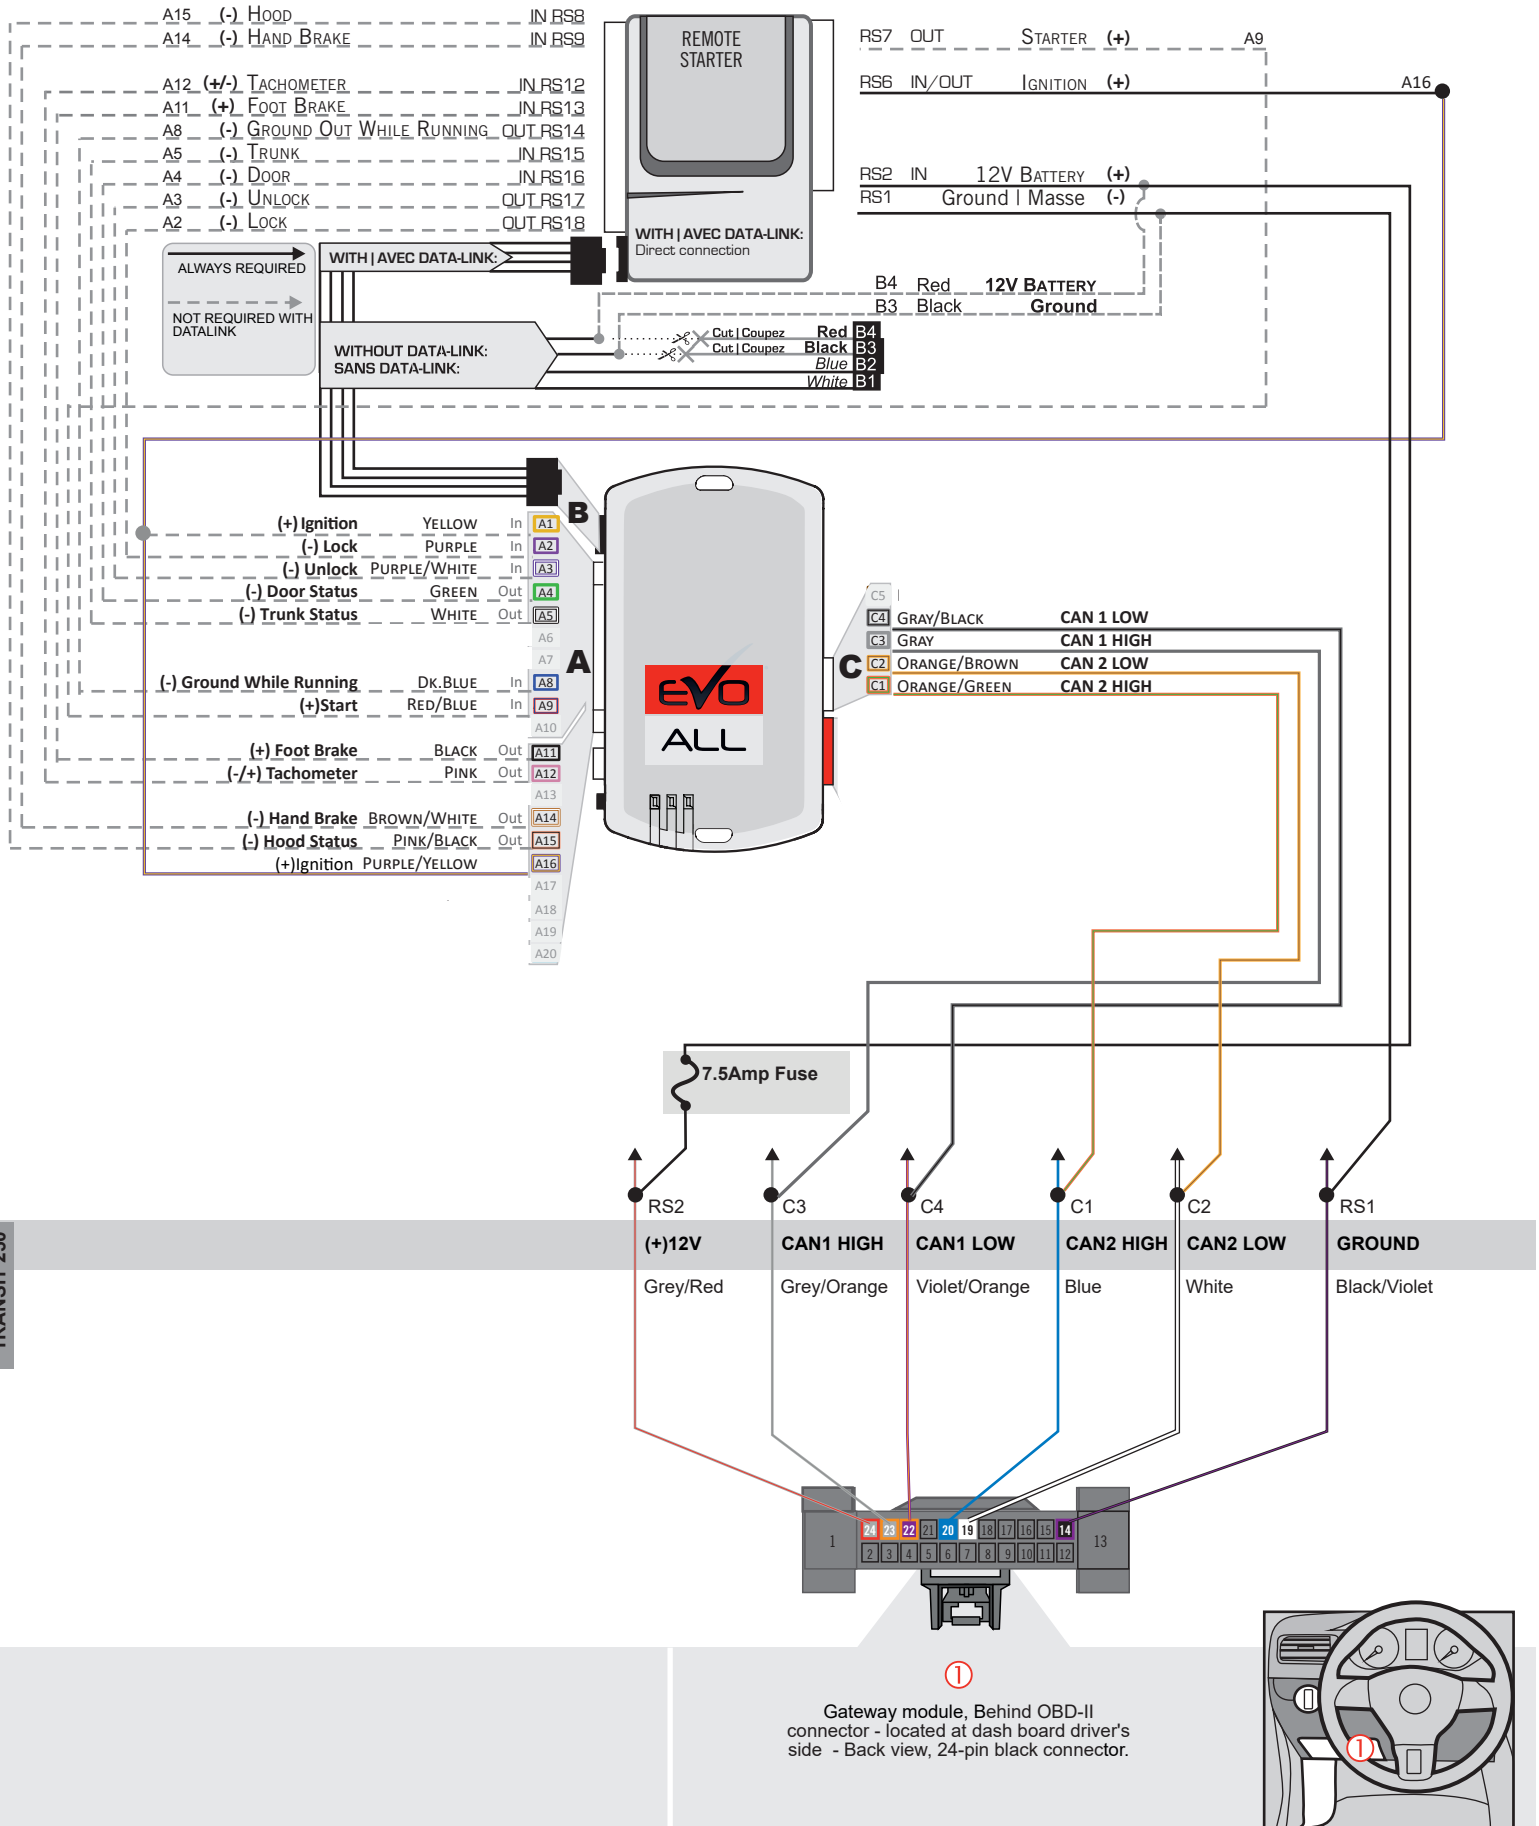

THAR-FOR3 | T-HARNESS - AUTOMATIC TRANSMISSION |

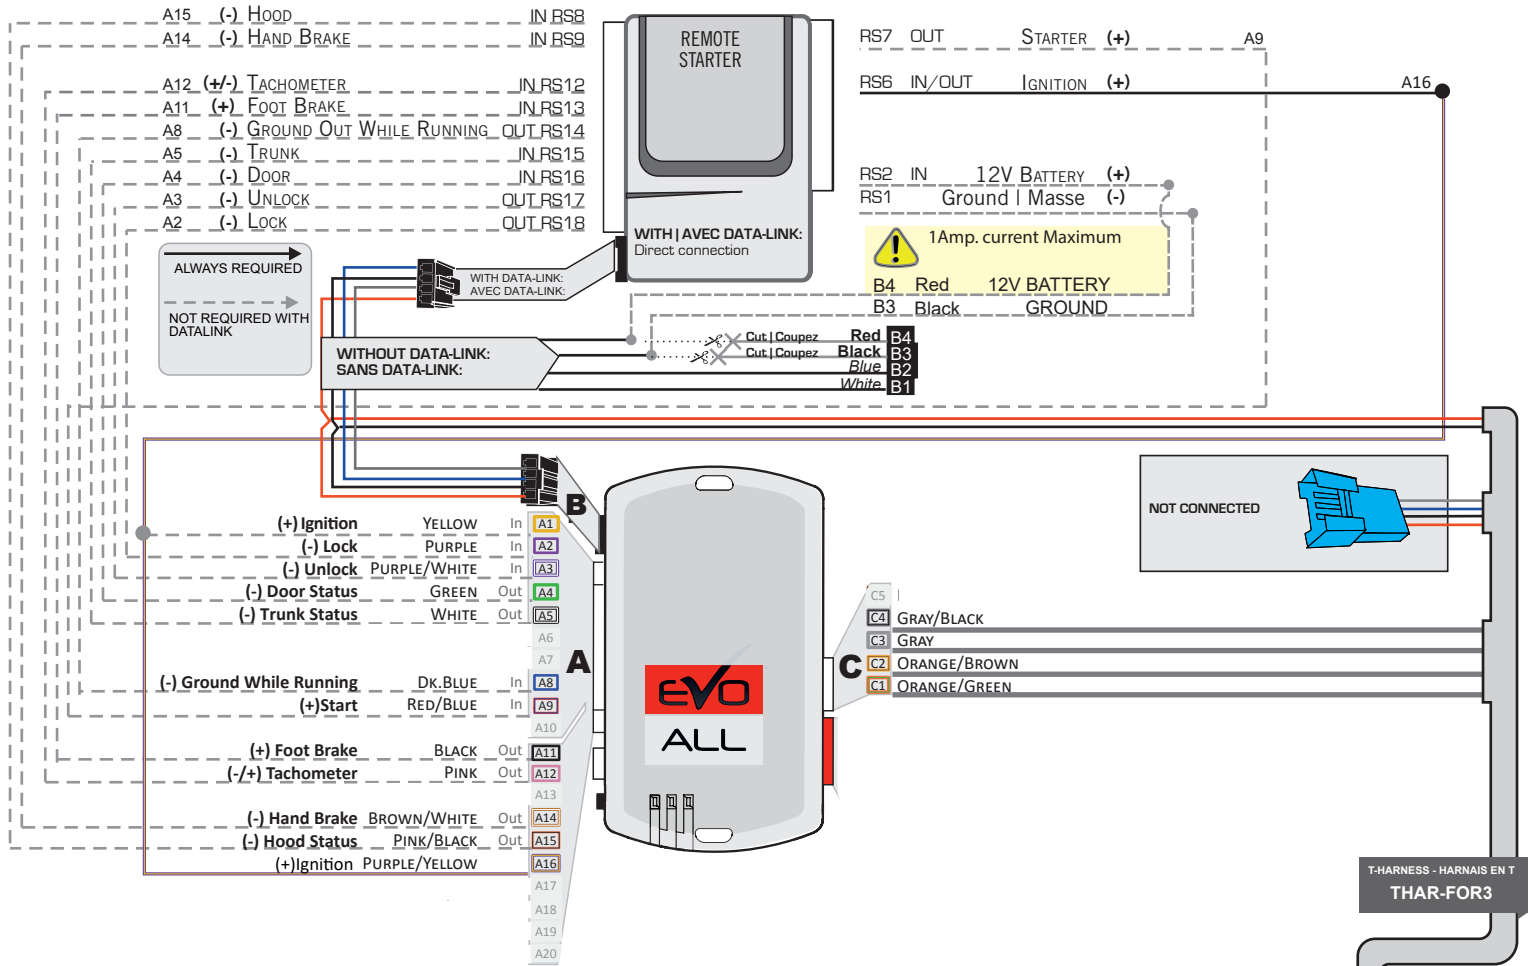

TRANSIT 250

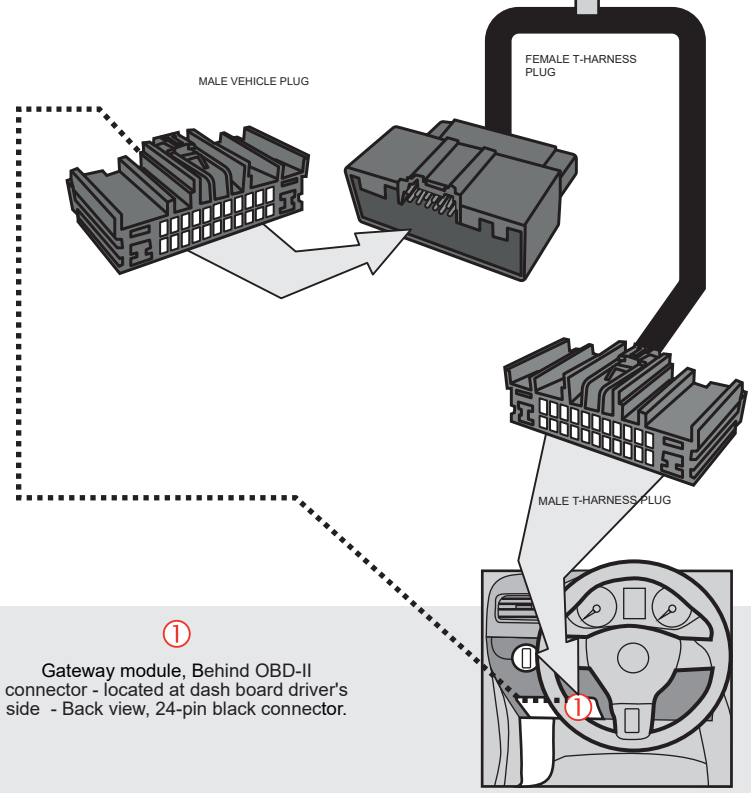



Parts required (not included)


- 1x **FLASH LINK UPDATER,**
- 1x **FLASH LINK MANAGER**
SOFTWARE | PROGRAMME
- 1x Microsoft Windows Computer with Internet connection

OR

- 1x **FLASH LINK MOBILE**
- 1x **FLASH LINK MOBILE APP**
- Smartphone Android or iOS with Internet connection
(Internet provider charges may apply)

BEFORE PROGRAMMING SET THE UNIT OPTIONS AND SAVE.


1

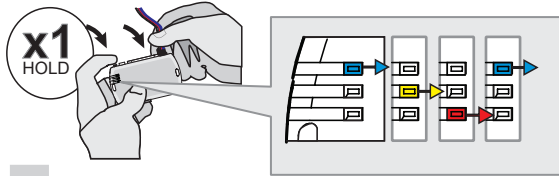

Press and hold the programming button:
Insert the 4-Pin (Data-Link) connector.


↳ The Blue, Red, Yellow and Blue & Red LEDs will alternatively illuminate.

2

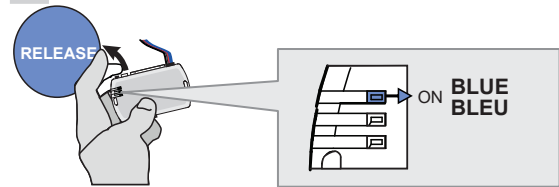


Release the programming button when the LED is BLUE.

 If the LED is not solid BLUE disconnect the 4-Pin connector (Data-Link) and go back to step 1.




3

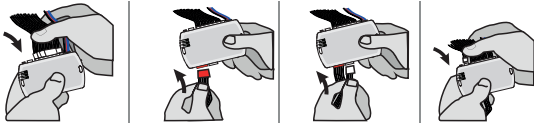

Insert the required remaining connectors.

4

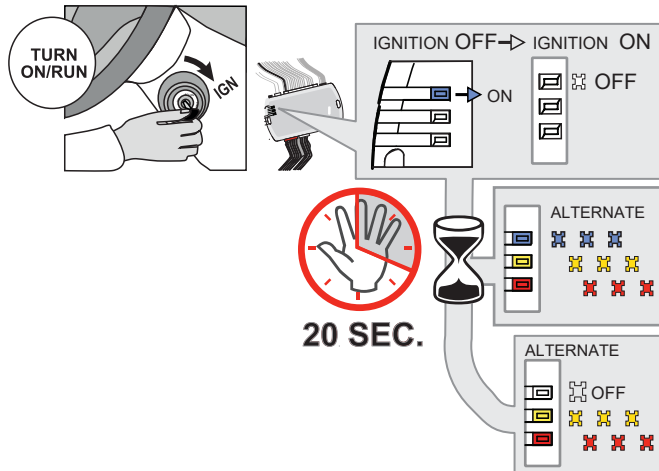

Turn the key to the Ignition ON/RUN position.

↳ The BLUE LED will turn OFF.

↳ The BLUE, YELLOW and RED LEDs will alternate.


Wait, at least 20 seconds, do not disconnect the modules or turn off the ignition.

↳ The RED and YELLOW LEDs will alternate.

Make sure that the DELs are flashing RED and YELLOW before continuing programming.



5

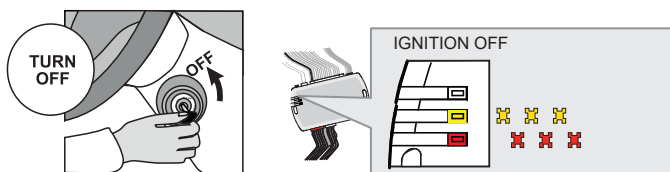


Turn the key to the OFF position.

↳ The RED and YELLOW LEDs alternate.


KEY BYPASS PROGRAMMING PROCEDURE 2/2 |

6

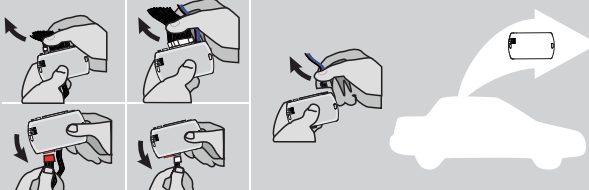

Disconnect all the connectors and after the Data-Link (4-pins) connector.

7



Microsoft Windows Computer with Internet connection*

FLASH LINK UPDATER* **FLASH LINK MANAGER***
SOFTWARE | PROGRAMME

OR


Smartphone* (Internet provider charges may apply)

VEHICLE'S OBDII CONNECTOR **FLASH LINK MOBILE***


Use the tool: FLASH LINK UPDATER or FLASH LINK MOBILE to visit the DCRYPTOR menu.

*Parts required (not included)

8

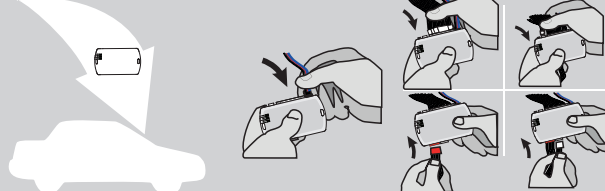


AFTER DCRYPTOR PROGRAMMING COMPLETED
Go back to the vehicle and reconnect the 4-Pin (Data-Link) connector and after, all the remaining connector.

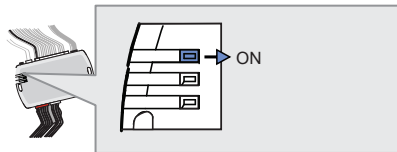

↳ The BLUE LED will turn ON.

9

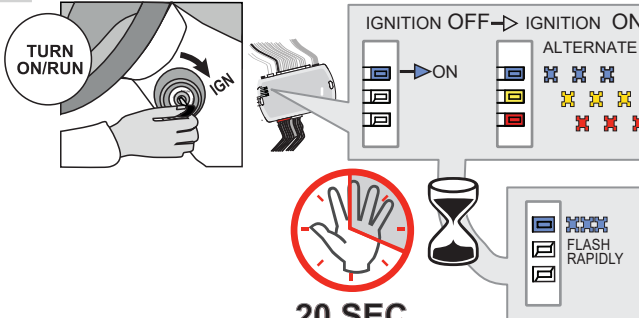

TURN ON/RUN

IGNITION OFF → IGNITION ON

ALTERNATE

ON

FLASH RAPIDLY

20 SEC.


Turn the key to the Ignition ON/RUN position.

↳ The RED and YELLOW LEDs will turn ON.

Wait, at least 20 seconds, do not disconnect the modules or turn off the ignition.

↳ The BLUE LED will flash rapidly.

10

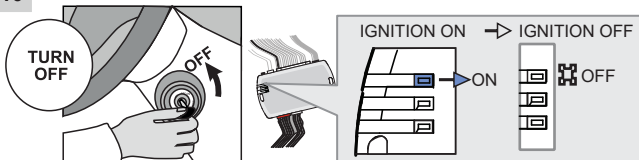

TURN OFF

IGNITION ON → IGNITION OFF

ON

OFF

Turn the key to the OFF position.

↳ The BLUE will turn OFF.



The module is now programmed.

REMOTE STARTER FUNCTIONALITY |



All doors must be closed.



Remote start the vehicle.



Unlock the doors with the remote-starter remote or the OEM remote.



Insert and Turn the key to the Ignition ON/RUN position.



Press the brake pedal.



The vehicle can now be put in to gear and driven.

REGULAR & THAR-FOR3 INSTALLATION

ADDENDUM - SUGGESTED WIRING CONFIGURATION




ONLY COMPATIBLE WITH AUTOMATIC TRANSMISSION VEHICLES.



Vehicle functions supported in this diagram (functional if equipped)

VEHICLE	YEARS	Immobilizer bypass	T-Harness available (sold separately)	Lock	Unlock	Arm	Disarm	Heated Seats**	Rear Defrost**	RAP Disable	Parking Lights***	Tachometer	Door Status	Trunk Status	Hood Status*	Hand-Brake Status	Foot-Brake Status	Active OEM Remote Start
FORD																		
Transit Connect	2020-2022	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•

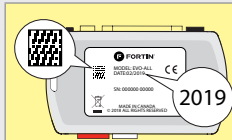

COMPATIBLE MODULE REQUIRED:

QR CODE ON THE LABEL
MANUFACTURED AFTER: 2019

FIRMWARE VERSION

58.[02]
MINIMUM

To add the firmware version and the options, use the **FLASH LINK UPDATER** or **FLASH LINK MOBILE** tool, sold separately.



Program bypass option:

UNIT OPTION

C1

DESCRIPTION

OEM Remote status (Lock/Unlock) monitoring

IF THE VEHICLE IS NOT EQUIPPED WITH FUNCTIONAL HOOD PIN:

A11

OFF

Hood trigger (Output Status).

NOTES

The vehicles OEM remote and SmartKey are still operable during remote start.

**Heated seats The heated seats and rear defrost activate automatically when it cold.

***Parking Lights The parking Lights at remote start only.



The vehicle must be equipped with the OEM remote with the door locks.

MANDATORY INSTALL

*HOOD PIN



HOOD STATUS: THE HOOD PIN SWITCH MUST BE INSTALLED IF THE VEHICLE CAN BE REMOTE STARTED WITH THE HOOD OPEN, SET FUNCTION A11 TO OFF.

A11

OFF

Notice: the installation of safety elements are mandatory. The hood pin is an essential security element and must be installed.

THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.

DESCRIPTION | DESCRIPTION

		Parts required (Not included)	PAGE
--	--	-------------------------------	------

WIRE TO WIRE DIAGRAM

AUTOMATIC TRANSMISSION	1x 7.5 Amp. fuse	Page 3
------------------------	------------------	--------



THARNESS DIAGRAM

THARNESS THAR-FOR3 AUTOMATIC TRANSMISSION	1x THAR-FOR3	Page 4
---	--------------	--------




② Parking Lights switch


① Gateway module, located at dash board driver's side,

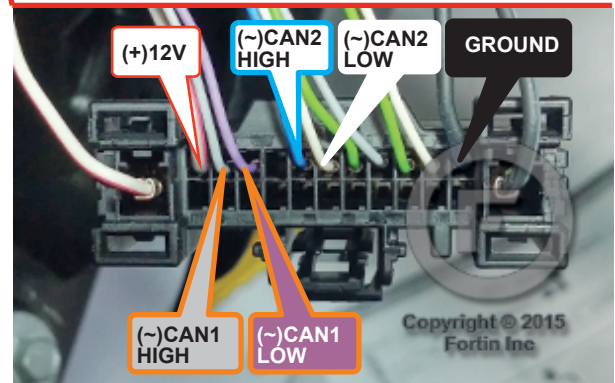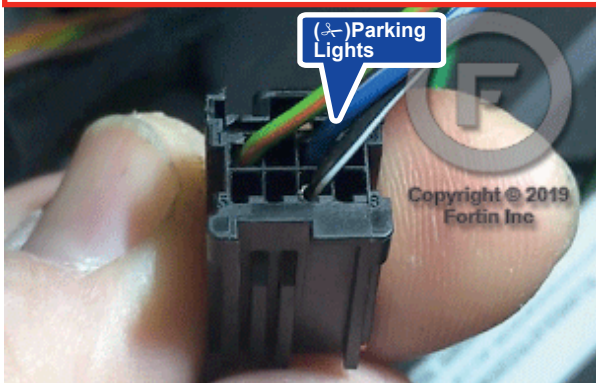


④ Under the hood If not equipped with hood pin.

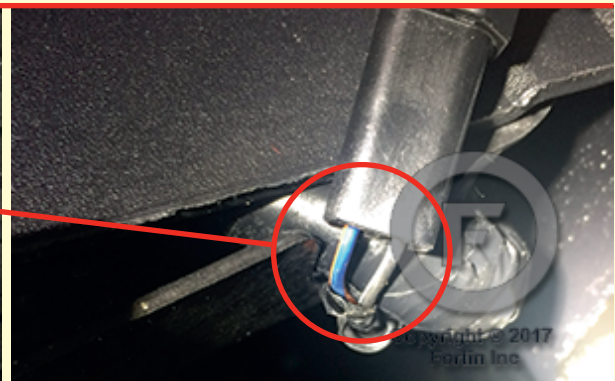

AUTOMATIC TRANSMISSION WIRING CONNECTION |

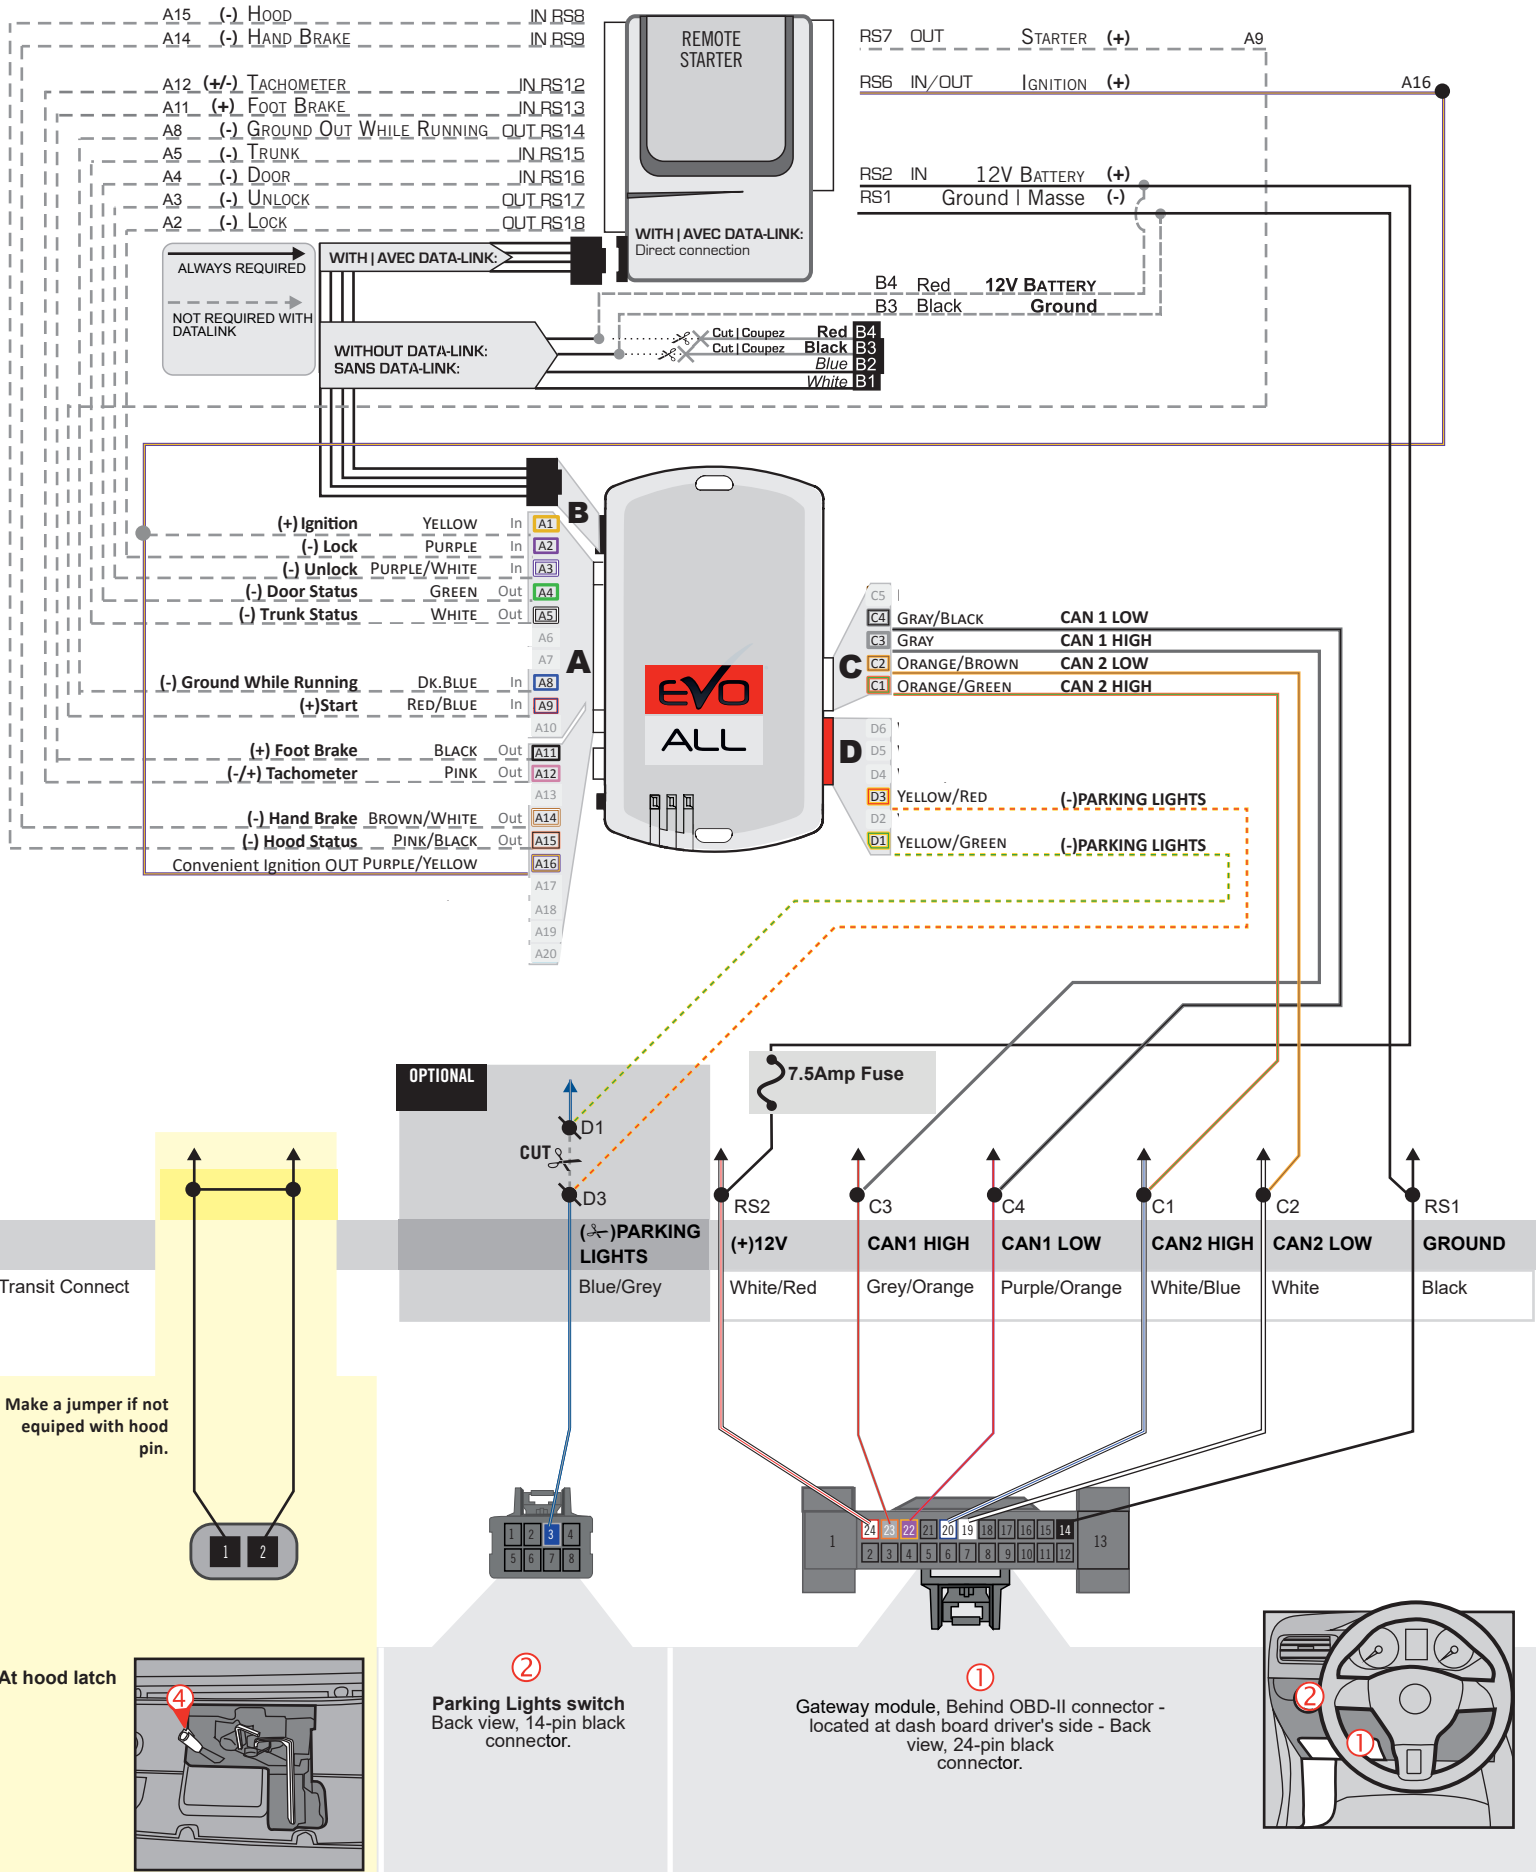

THAR-FOR3 | T-HARNESS - AUTOMATIC TRANSMISSION |

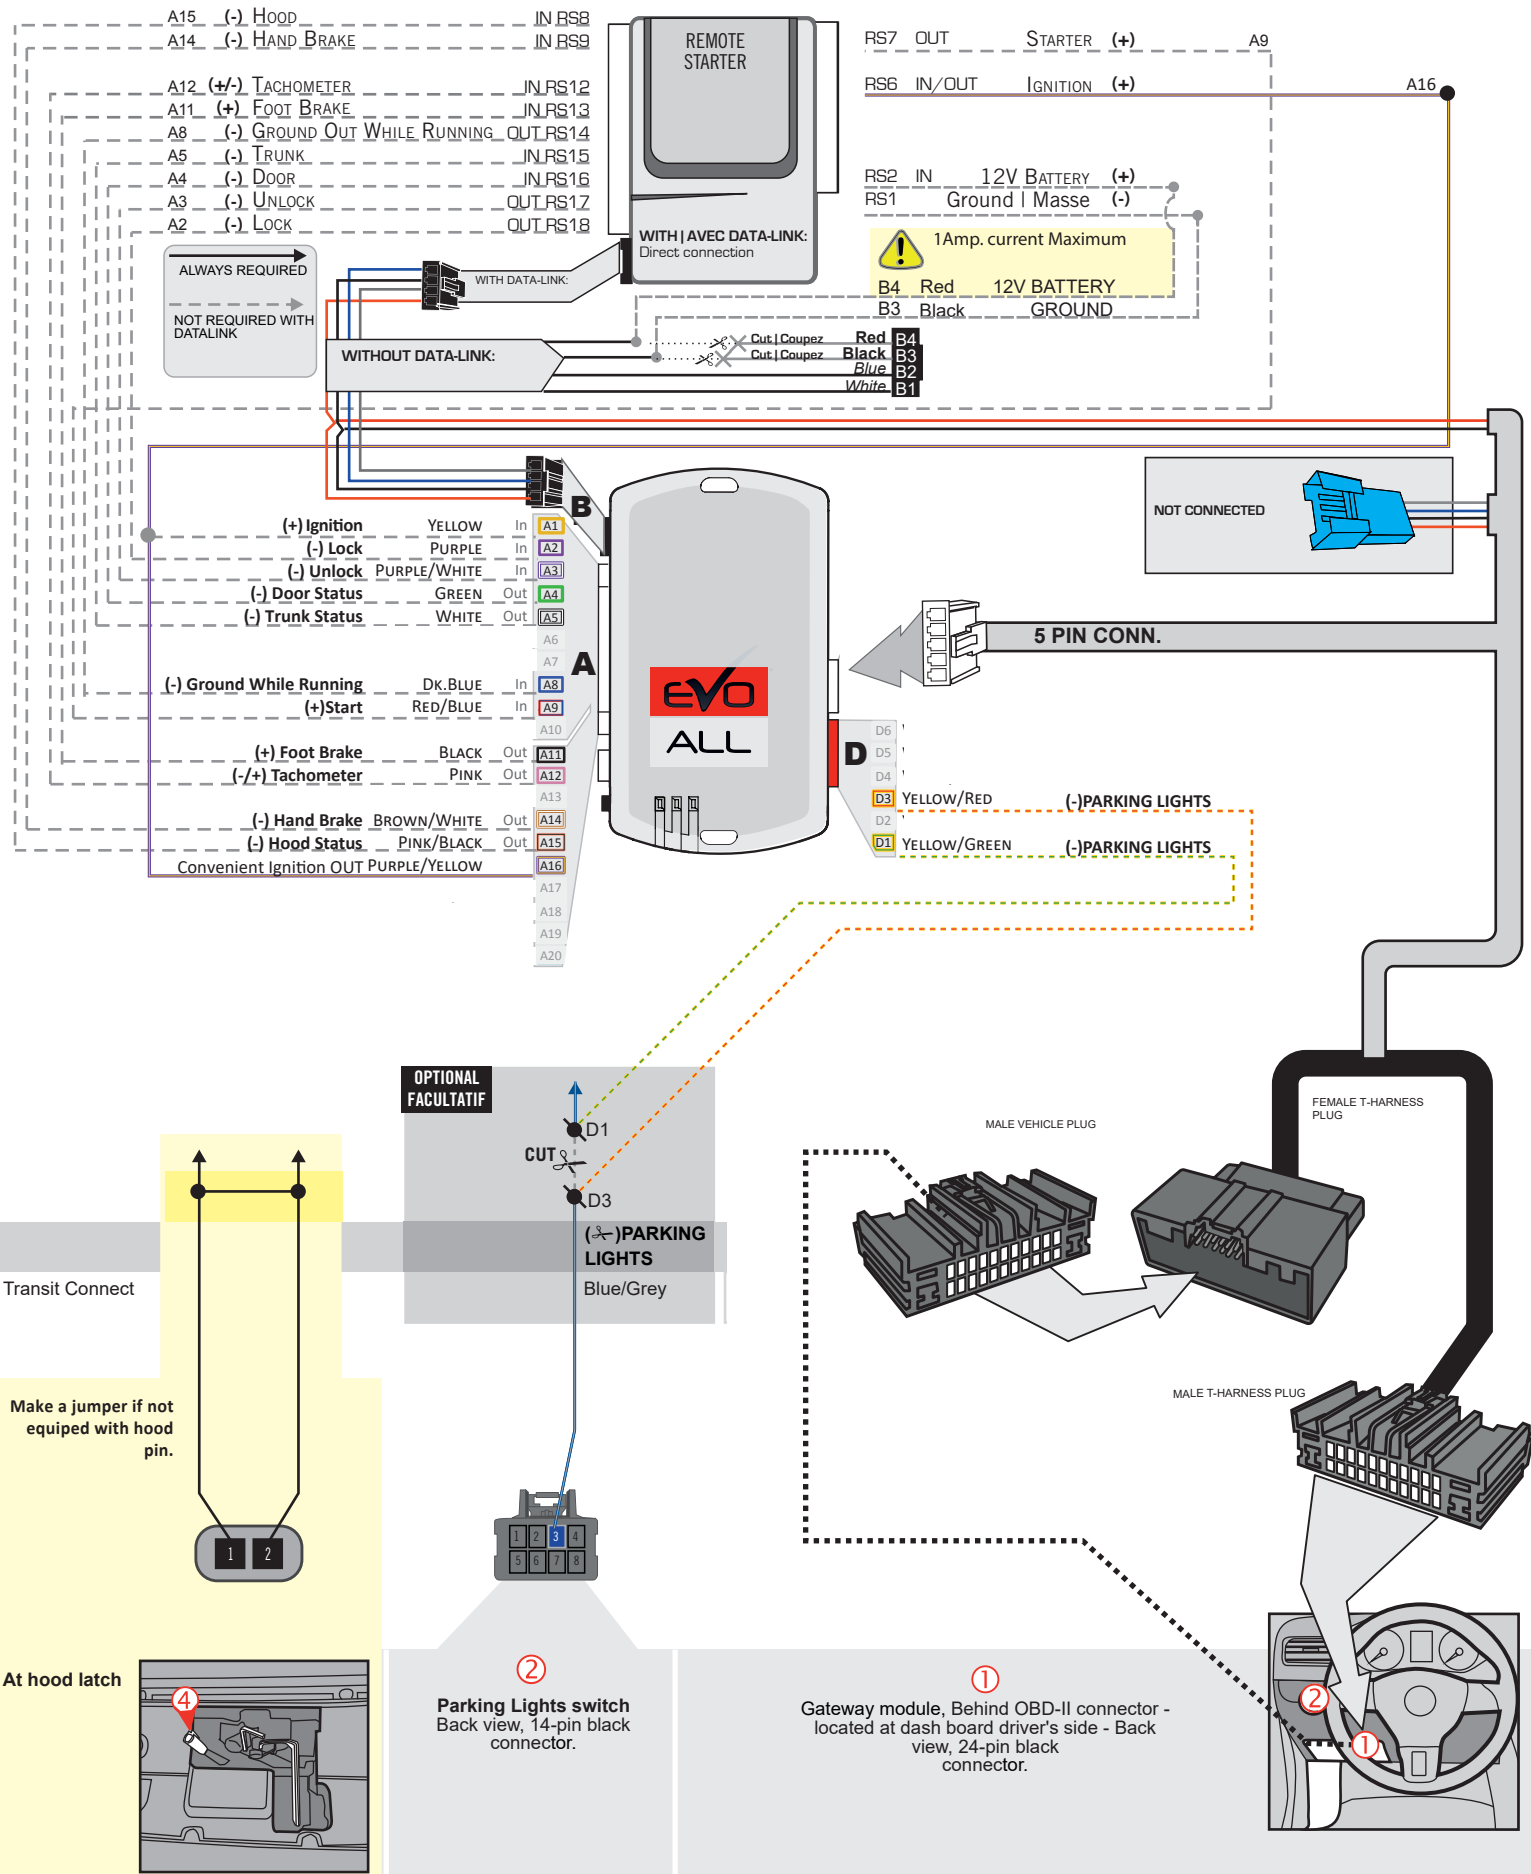



Parts required (not included)


- 1x FLASH LINK UPDATER, SOFTWARE | PROGRAMME
- 1x FLASH LINK MANAGER
- 1x Microsoft Windows Computer with Internet connection

OR

- 1x FLASH LINK MOBILE
- 1x FLASH LINK MOBILE APP
- Smartphone Android or iOS with Internet connection (Internet provider charges may apply)

BEFORE PROGRAMMING SET THE UNIT OPTIONS AND SAVE.


1

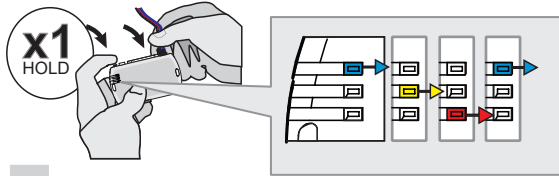

Press and hold the programming button:
Insert the 4-Pin (Data-Link) connector.


↳ The Blue, Red, Yellow and Blue & Red LEDs will alternatively illuminate.

2

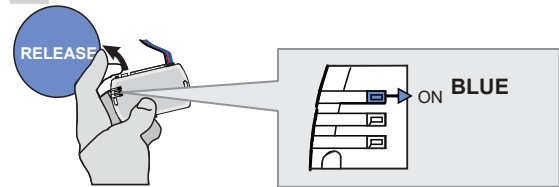


Release the programming button when the LED is BLUE.

 If the LED is not solid BLUE disconnect the 4-Pin connector (Data-Link) and go back to step 1.




3

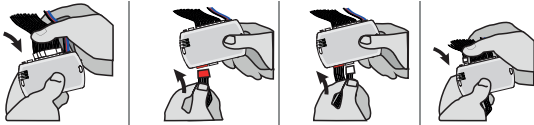

Insert the required remaining connectors.

4

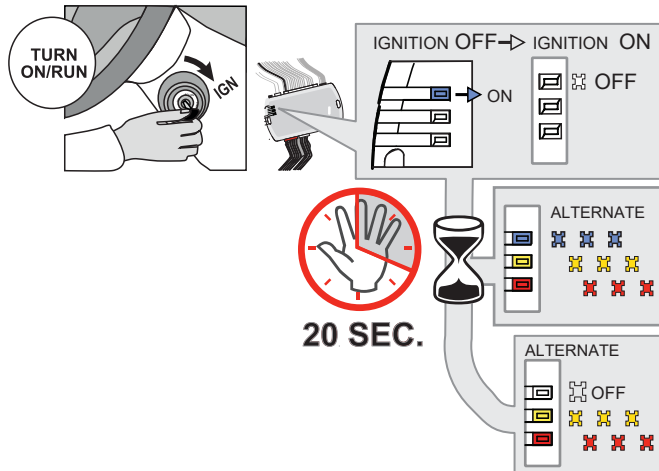

Turn the key to the Ignition ON/RUN position.

 
↳ The BLUE LED will turn OFF.

↳ The BLUE, YELLOW and RED LEDs will alternate.


Wait, at least 20 seconds, do not disconnect the modules or turn off the ignition.

↳ The RED and YELLOW LEDs will alternate.

Make sure that the DELs are flashing RED and YELLOW before continuing programming.



5

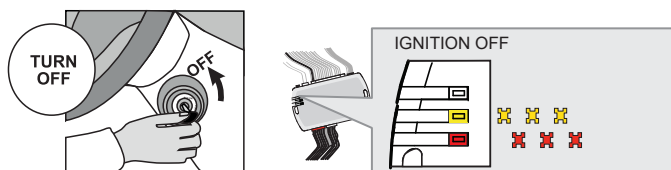


Turn the key to the OFF position.

↳ The RED and YELLOW LEDs alternate.


KEY BYPASS PROGRAMMING PROCEDURE 2/2 |

6

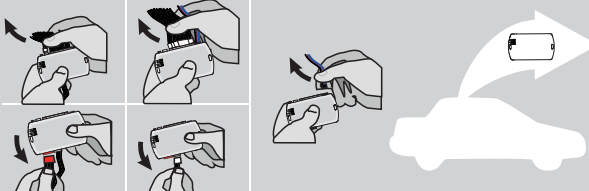

Disconnect all the connectors and after the Data-Link (4-pins) connector.

7



Microsoft Windows Computer with Internet connection*

FLASH LINK UPDATER* **FLASH LINK MANAGER***
SOFTWARE | PROGRAMME

OR


Smartphone* (Internet provider charges may apply)

VEHICLE'S OBDII CONNECTOR **FLASH LINK MOBILE***


Use the tool: FLASH LINK UPDATER or FLASH LINK MOBILE to visit the DCryptor menu.

*Parts required (not included)

8

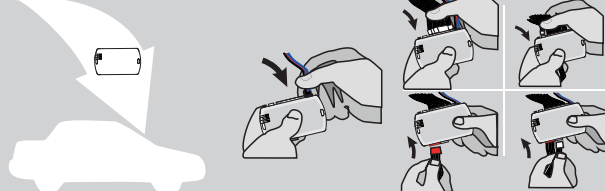


AFTER DCRYPTOR PROGRAMMING COMPLETED
Go back to the vehicle and reconnect the 4-Pin (Data-Link) connector and after, all the remaining connector.

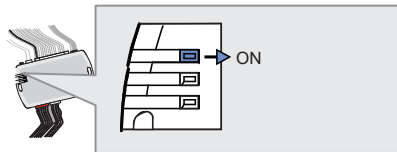

↳ The BLUE LED will turn ON.

9

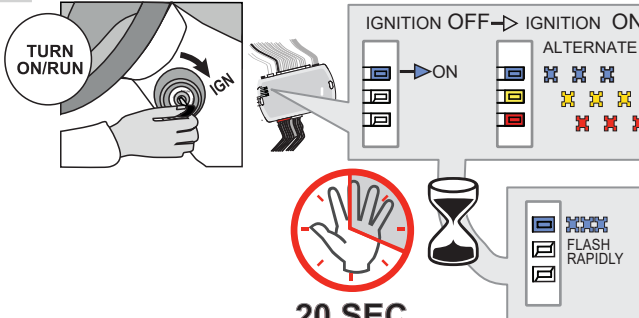

TURN ON/RUN

IGNITION OFF → IGNITION ON

ALTERNATE

ON

FLASH RAPIDLY

20 SEC.


Turn the key to the Ignition ON/RUN position.

↳ The RED and YELLOW LEDs will turn ON.

Wait, at least 20 seconds, do not disconnect the modules or turn off the ignition.

↳ The BLUE LED will flash rapidly.

10

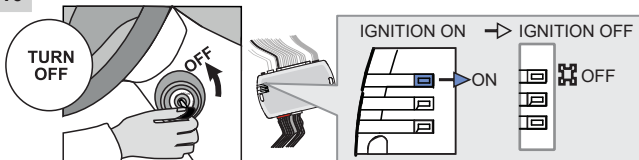

TURN OFF

IGNITION ON → IGNITION OFF

ON

OFF

Turn the key to the OFF position.

↳ The BLUE will turn OFF.



The module is now programmed.

REMOTE STARTER FUNCTIONALITY |



All doors must be closed.



Remote start the vehicle.



Unlock the doors with the remote-starter remote or the OEM remote.



Insert and Turn the key to the Ignition ON/RUN position.



Press the brake pedal.



The vehicle can now be put in to gear and driven.

REGULAR & THAR-FOR3 INSTALLATION

ADDENDUM - SUGGESTED WIRING CONFIGURATION



ONLY COMPATIBLE WITH AUTOMATIC TRANSMISSION VEHICLES.

Vehicle functions supported in this diagram (functional if equipped)



VEHICLE

YEARS


Immobilizer bypass	Lock	Unlock	Arm	Disarm	Heated Seats**	Rear Defrost**	RAP Disable	Parking Lights***	Tachometer	Door Status	Trunk Status	Hood Status*	Hand-Brake Status	Foot-Brake Status	Active OEM Remote Start
--------------------	------	--------	-----	--------	----------------	----------------	-------------	-------------------	------------	-------------	--------------	--------------	-------------------	-------------------	-------------------------

LINCOLN

Corsair

Push-to-Start 2020

•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

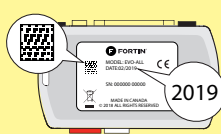

COMPATIBLE MODULE REQUIRED:

QR CODE ON THE LABEL
MANUFACTURED AFTER: 2019

FIRMWARE VERSION
58.[02]
MINIMUM

To add the firmware version and the options, use the **FLASH LINK UPDATER** or **FLASH LINK MOBILE** tool, sold separately.



Program bypass option:

UNIT OPTION

DESCRIPTION

C1

OEM Remote status (Lock/Unlock) monitoring

D6

Push-to-Start

IF THE VEHICLE IS NOT EQUIPPED WITH FUNCTIONAL HOOD PIN:

A11

OFF

Hood trigger (Output Status).

NOTES

The vehicles OEM remote and SmartKey are still operable during remote start.

**Heated seats The heated seats and rear defrost activate automatically when it cold.
**Rear Defrost

***Parking Lights The parking Lights at remote start only.

MANDATORY INSTALL

*HOOD PIN



HOOD STATUS: THE HOOD PIN SWITCH MUST BE INSTALLED IF THE VEHICLE CAN BE REMOTE STARTED WITH THE HOOD OPEN, SET FUNCTION A11 TO OFF.

A11

OFF

Notice: the installation of safety elements are mandatory. The hood pin is an essential security element and must be installed.

THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.

DESCRIPTION |

	Parts required (Not included)	PAGE
--	-------------------------------	------

WIRE TO WIRE DIAGRAM

AUTOMATIC TRANSMISSION	1x 7.5 Amp. fuse	Page 3
------------------------	------------------	--------


THARNES DIAGRAM

THARNES THAR-FOR3 AUTOMATIC TRANSMISSION	1x THAR-FOR3	Page 4
--	--------------	--------




CORSAIR

① Gateway module, Behind OBD-II connector

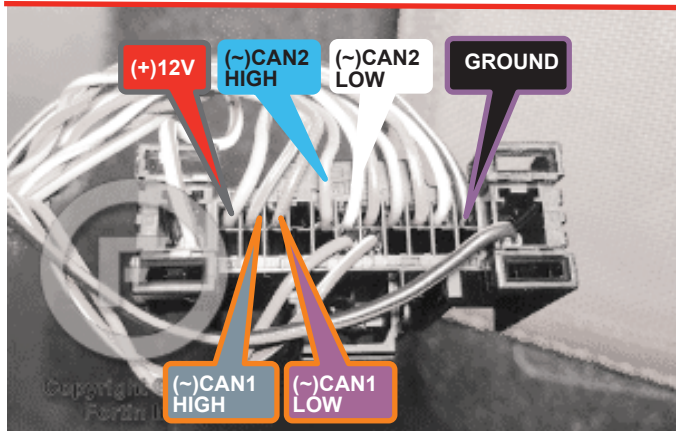


AUTOMATIC TRANSMISSION WIRING CONNECTION |

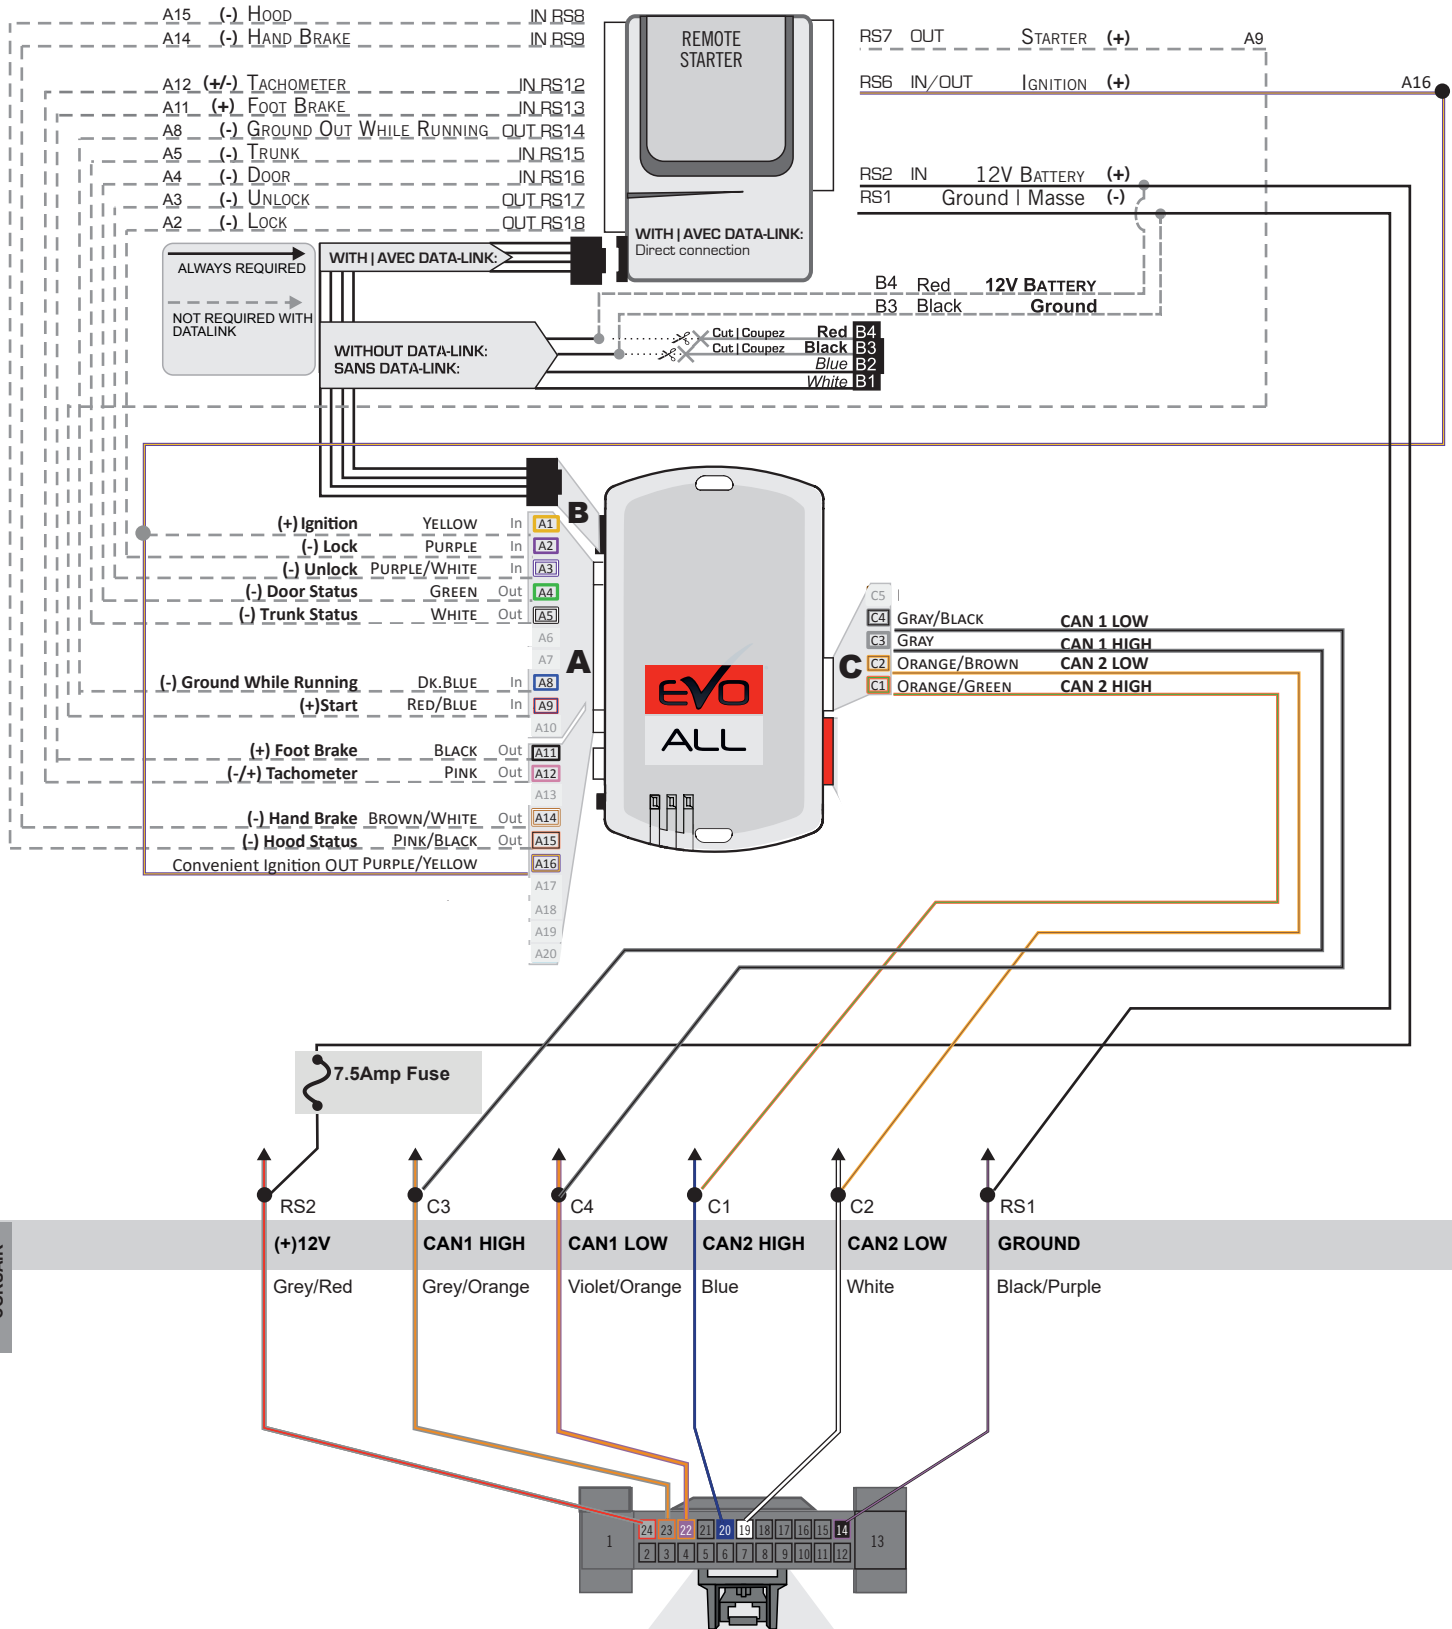


CORSAIR


① Gateway module, Connector Behind OBD-II connector - located at dash board driver's side
Back view, 24-pin black connector.

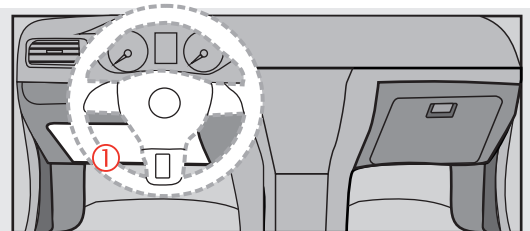


THAR-FOR3 | T-HARNESS - AUTOMATIC TRANSMISSION |

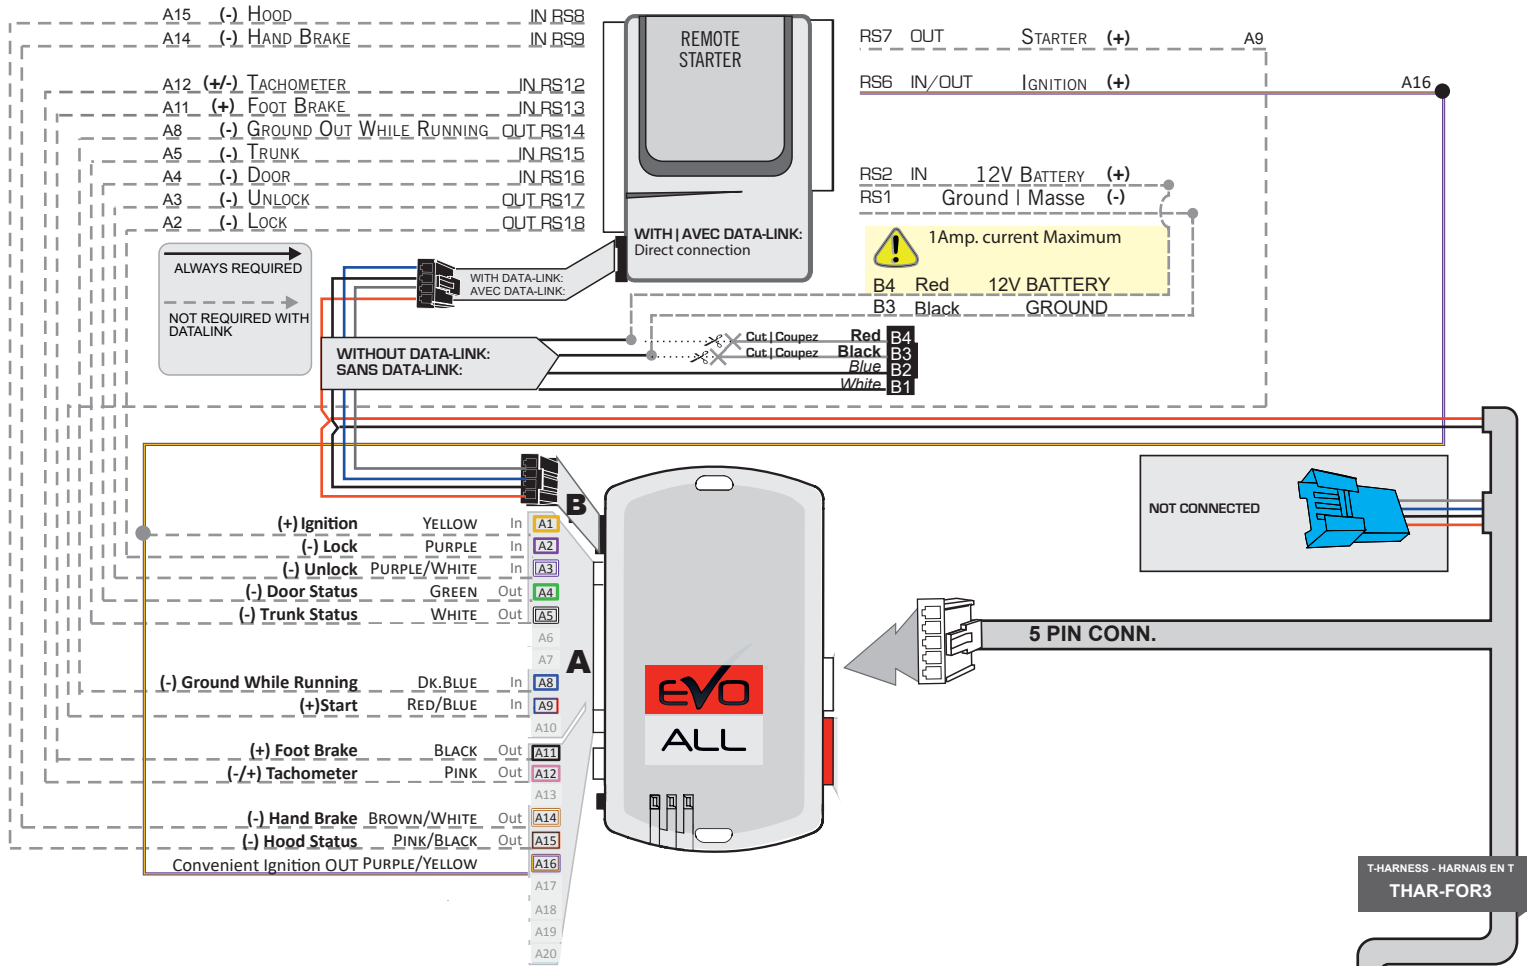

CORSAIR

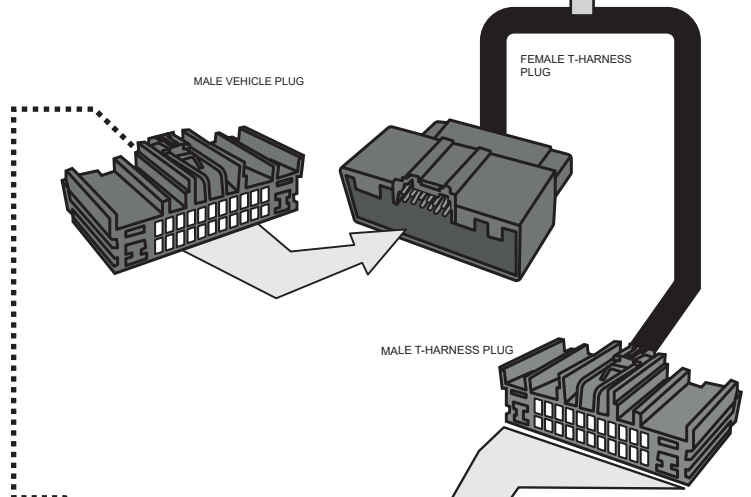

① Gateway module, Connector Behind OBD-II connector - located at dash board driver's side Back view, 24-pin black connector.

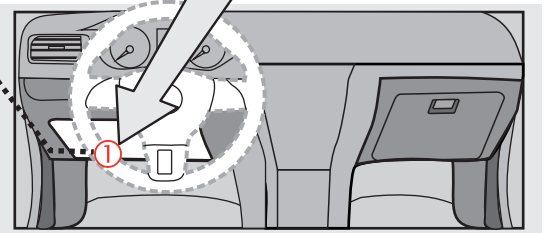



Parts required (not included)


- 1x FLASH LINK UPDATER, SOFTWARE | PROGRAMME
- 1x FLASH LINK MANAGER
- 1x Microsoft Windows Computer with Internet connection

OR

- 1x FLASH LINK MOBILE
- 1x FLASH LINK MOBILE APP
- Smartphone Android or iOS with Internet connection (Internet provider charges may apply)

BEFORE PROGRAMMING SET THE UNIT OPTIONS AND SAVE.


1

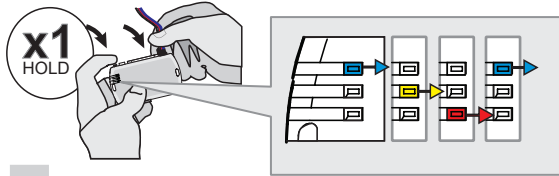

Press and hold the programming button:
Insert the 4-Pin (Data-Link) connector.


↳ The Blue, Red, Yellow and Blue & Red LEDs will alternatively illuminate.

2

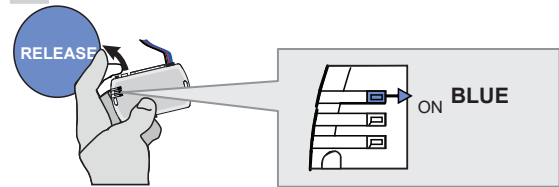


Release the programming button when the LED is BLUE.

 If the LED is not solid BLUE disconnect the 4-Pin connector (Data-Link) and go back to step 1.




3

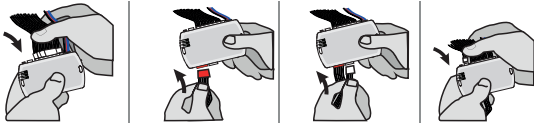

Insert the required remaining connectors.

4

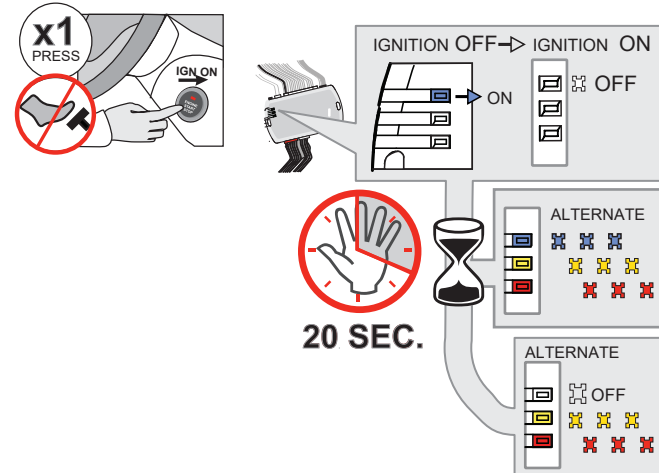

Do not press the brake pedal.
Press the Push-to-Start button once to turn on the ignition.

 
↳ The BLUE LED will turn OFF.

↳ The BLUE, YELLOW and RED LEDs will alternate.


Wait, at least 20 seconds, do not disconnect the modules or turn off the ignition.

↳ The RED and YELLOW LEDs will alternate.

Make sure that the DELs are flashing RED and YELLOW before continuing programming.



5

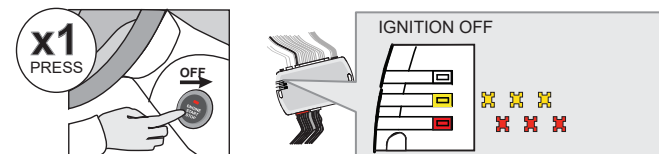

Press the Push-to-Start button once to turn off the ignition.

↳ The RED and YELLOW LEDs alternate.

KEY BYPASS PROGRAMMING PROCEDURE 2/2 |

6

Disconnect all the connectors and after the Data-Link (4-pins) connector.

7

Microsoft Windows Computer with Internet connection*

OR


Smartphone* (Internet provider charges may apply)

Use the tool:
FLASH LINK UPDATER or
FLASH LINK MOBILE
 to visit the DCryptor menu.

*Parts required (not included)

8

AFTER DCRYPTOR PROGRAMMING COMPLETED
Go back to the vehicle and reconnect the 4-Pin (Data-Link) connector and after, all the remaining connector.

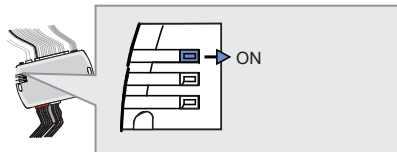

↳ The BLUE LED will turn ON.

9

x1 PRESS

IGNITION OFF → **IGNITION ON**

ALTERNATE

20 SEC.

FLASH RAPIDLY

Do not press the brake pedal.
Press the Push-to-Start button once to turn on the ignition.

↳ The RED and YELLOW LEDs will turn ON.

Wait, at least 20 seconds, do not disconnect the modules or turn off the ignition.

↳ The BLUE LED will flash rapidly.

10

x1 PRESS





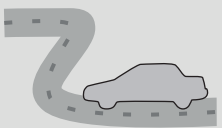
IGNITION ON → **IGNITION OFF**

Press the Push-to-Start button once to turn off the ignition.

↳ The BLUE will turn OFF.

The module is now programmed.

REMOTE STARTER FUNCTIONALITY |

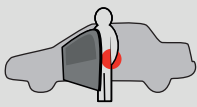 <p>Start</p> <p>All doors must be closed. Toutes les</p> <p>Remote start the vehicle.</p>	 <p>UNLOCK</p> <p>Unlock the doors with either:</p> <ul style="list-style-type: none"> • The OEM remote • The remote-starter remote • Or the proximity remote 	 <p>Enter the vehicle with the SMART-KEY.</p>	 <p>DO NOT PRESS THE BRAKE PEDAL.</p> <p>Press and release the Push-to-Start button once.</p>	 <p>Press the brake pedal. The vehicle can now be put in to gear and driven.</p> <p>If the Smart-Key is not detected the vehicle will shut down.</p>
---	---	--	---	---


STANDALONE & THAR-FOR3 INSTALLATION

ADDENDUM - SUGGESTED WIRING CONFIGURATION



Vehicle functions supported in this diagram (functional if equipped)

VEHICLE	YEARS	Vehicle functions supported in this diagram (functional if equipped)															
		Immobilizer bypass	Lock	Unlock	Arm	Disarm	Heated Seats**	Rear Defrost**	RAP Disable	Parking Lights***	Tachometer	Door Status	Trunk Status	Hood Status*	Hand-Brake Status	Foot-Brake Status	Active OEM Remote Start
FORD Bronco Sport	Push-to-Start 2021	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•

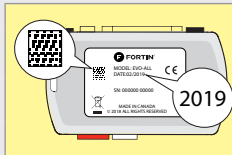

COMPATIBLE MODULE REQUIRED:

QR CODE ON THE LABEL
MANUFACTURED AFTER: 2019

FIRMWARE VERSION
58.[02]
MINIMUM

To add the firmware version and the options, use the **FLASH LINK UPDATER** or **FLASH LINK MOBILE** tool, sold separately.



Program bypass option:

UNIT OPTION	DESCRIPTION
C1	OEM Remote status (Lock/Unlock) monitoring
D6	Push-to-Start
A11	OFF Hood trigger (Output Status).

IF THE VEHICLE IS NOT EQUIPPED WITH FUNCTIONAL HOOD PIN:

NOTES

The vehicles OEM remote and SmartKey are still operable during remote start.

**Heated seats The heated seats and rear defrost will activate automatically when cold.
**Rear Defrost

***Parking Lights The parking lights will activate during remote start only.

MANDATORY INSTALL

*HOOD PIN



HOOD STATUS: THE HOOD PIN SWITCH MUST BE INSTALLED IF THE VEHICLE CAN BE REMOTE STARTED WITH THE HOOD OPEN, SET FUNCTION A11 TO OFF.

A11 **OFF**

Notice: the installation of safety elements are mandatory. The hood pin is an essential security element and must be installed.

THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.

PARTS REQUIRED (NOT INCLUDED)


1x **FLASH LINK UPDATER**
 1x **FLASH LINK MANAGER**
 SOFTWARE
 1x Microsoft Windows Computer with Internet connection

OR


1x **FLASH LINK MOBILE**
 1x **FLASH LINK MOBILE APP**
 Smartphone *Android* or *iOS* with Internet connection (*provider charges may apply*).
 1x

MANDATORY

HOOD PIN



REMOTE START SAFETY OVERRIDE SWITCH

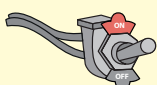
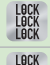






VALET SWITCH


Part #: RSPB available, Sold separately.

Notice: the installation of safety elements are mandatory. The hood pin and the valet switch are essential security elements and must be installed.


STAND ALONE CONFIGURATION

	Program bypass option	UNIT OPTION	DESCRIPTION
	OEM Remote Stand Alone Remote Starter:	D1.10 	By default, LOCK, LOCK, LOCK
		D1.1 	Par défaut, VERROUILLE, VERROUILLE, VERROUILLE
	Program bypass option with oem remote:	C1	OEM Remote Monitoring
	Program bypass option with RF KIT antenna:	H1 to H6	Supported RF Kits and select RF Kit
	Program bypass option Vehicle hybrid only:	D4	Hybrid mode (Vehicle hybrid only)


REMOTE STARTER FUNCTIONALITY




All doors must be closed.

3X 

Press the OEM remote's Lock button 3x to remote-start (or remote-stop) the vehicle.




START 

The vehicle will START.

REMOTE STARTER DIAGNOSTICS
MODULE RED LED

x2 flash :	Brake ON
x3 flash :	No tach
x4 flash :	Ignition before start
x5 flash :	Hood Open

REMOTE STARTER WARNING CARD



CUT THIS WARNING CARD AND STICK IT ON A VISIBLE PLACE:
 or use the package RSPB, Sold separately.

WARNING

REMOTE STARTER

THE VEHICLE CAN BE STARTED BY EITHER: PRESSING THE LOCK BUTTON ON THE OEM REMOTE 3 TIMES CONSECUTIVELY OR BY A SMARTPHONE. **TURN ON** THE SAFETY SWITCH LOCATED UNDER THE DASHBOARD BEFORE WORKING ON THE VEHICLE.

DESCRIPTION

	Parts required (Not included)	PAGE
--	-------------------------------	------

WIRE TO WIRE DIAGRAM

AUTOMATIC TRANSMISSION	1x 7.5 Amp. fuse	Page 3
------------------------	------------------	--------


THARNESS DIAGRAM

THARNESS THAR-FOR3 AUTOMATIC TRANSMISSION	1x THAR-FOR3	Page 4
---	--------------	--------


BRONCO SPORT




① Gateway module, Behind OBD-II connector

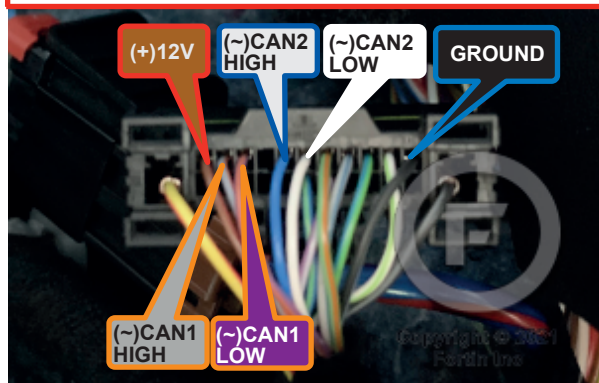

AUTOMATIC TRANSMISSION WIRING CONNECTION |

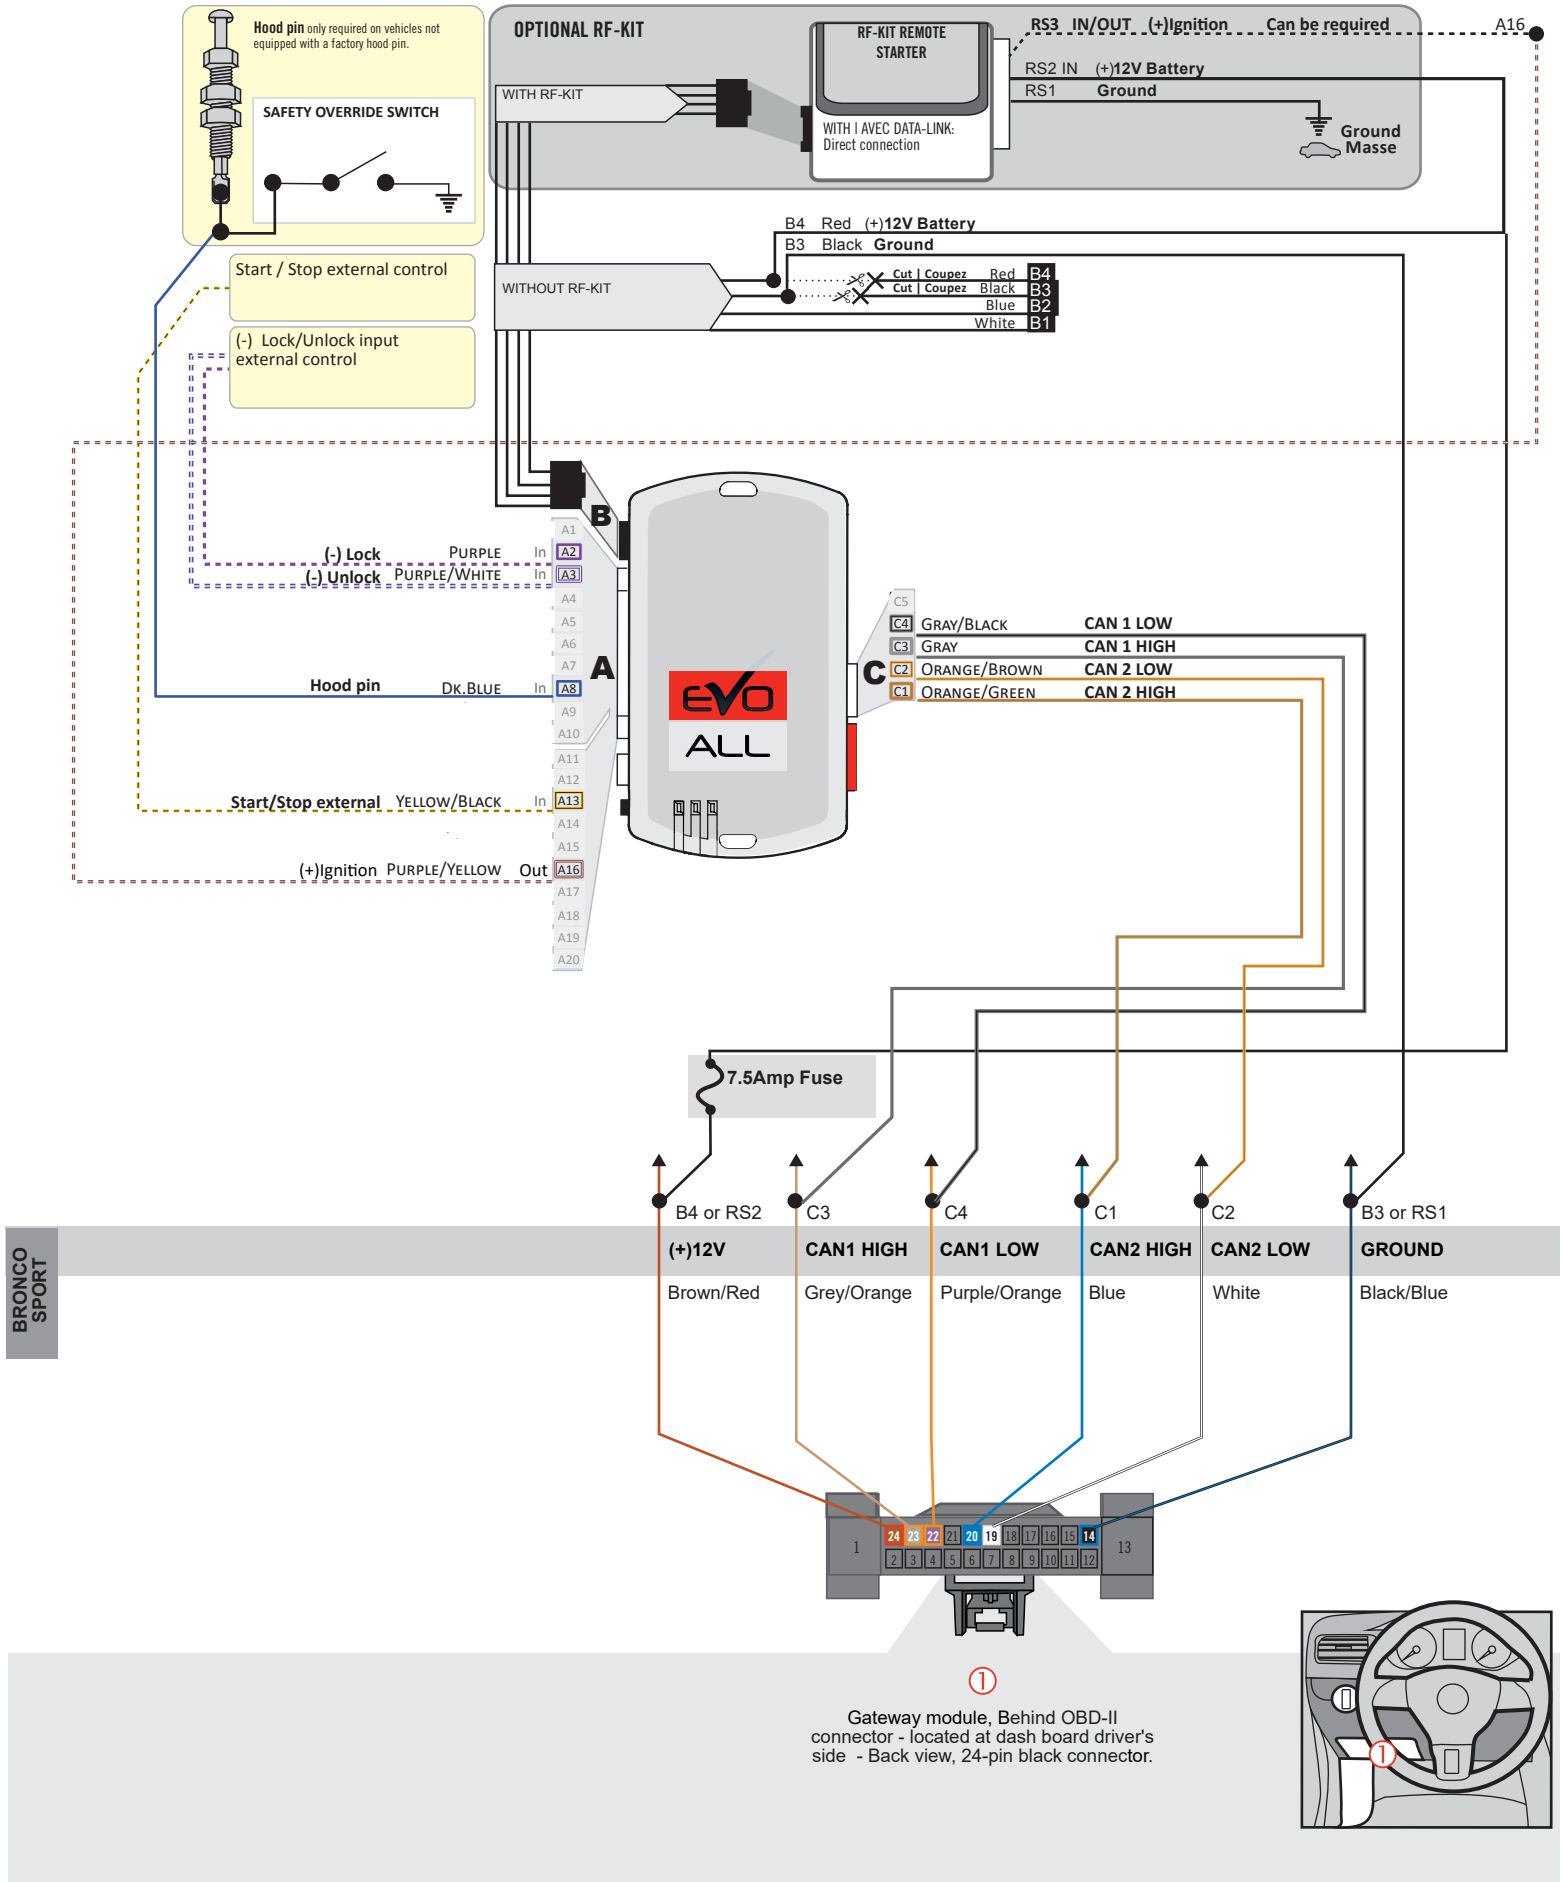

THAR-FOR3 | T-HARNESS - AUTOMATIC TRANSMISSION

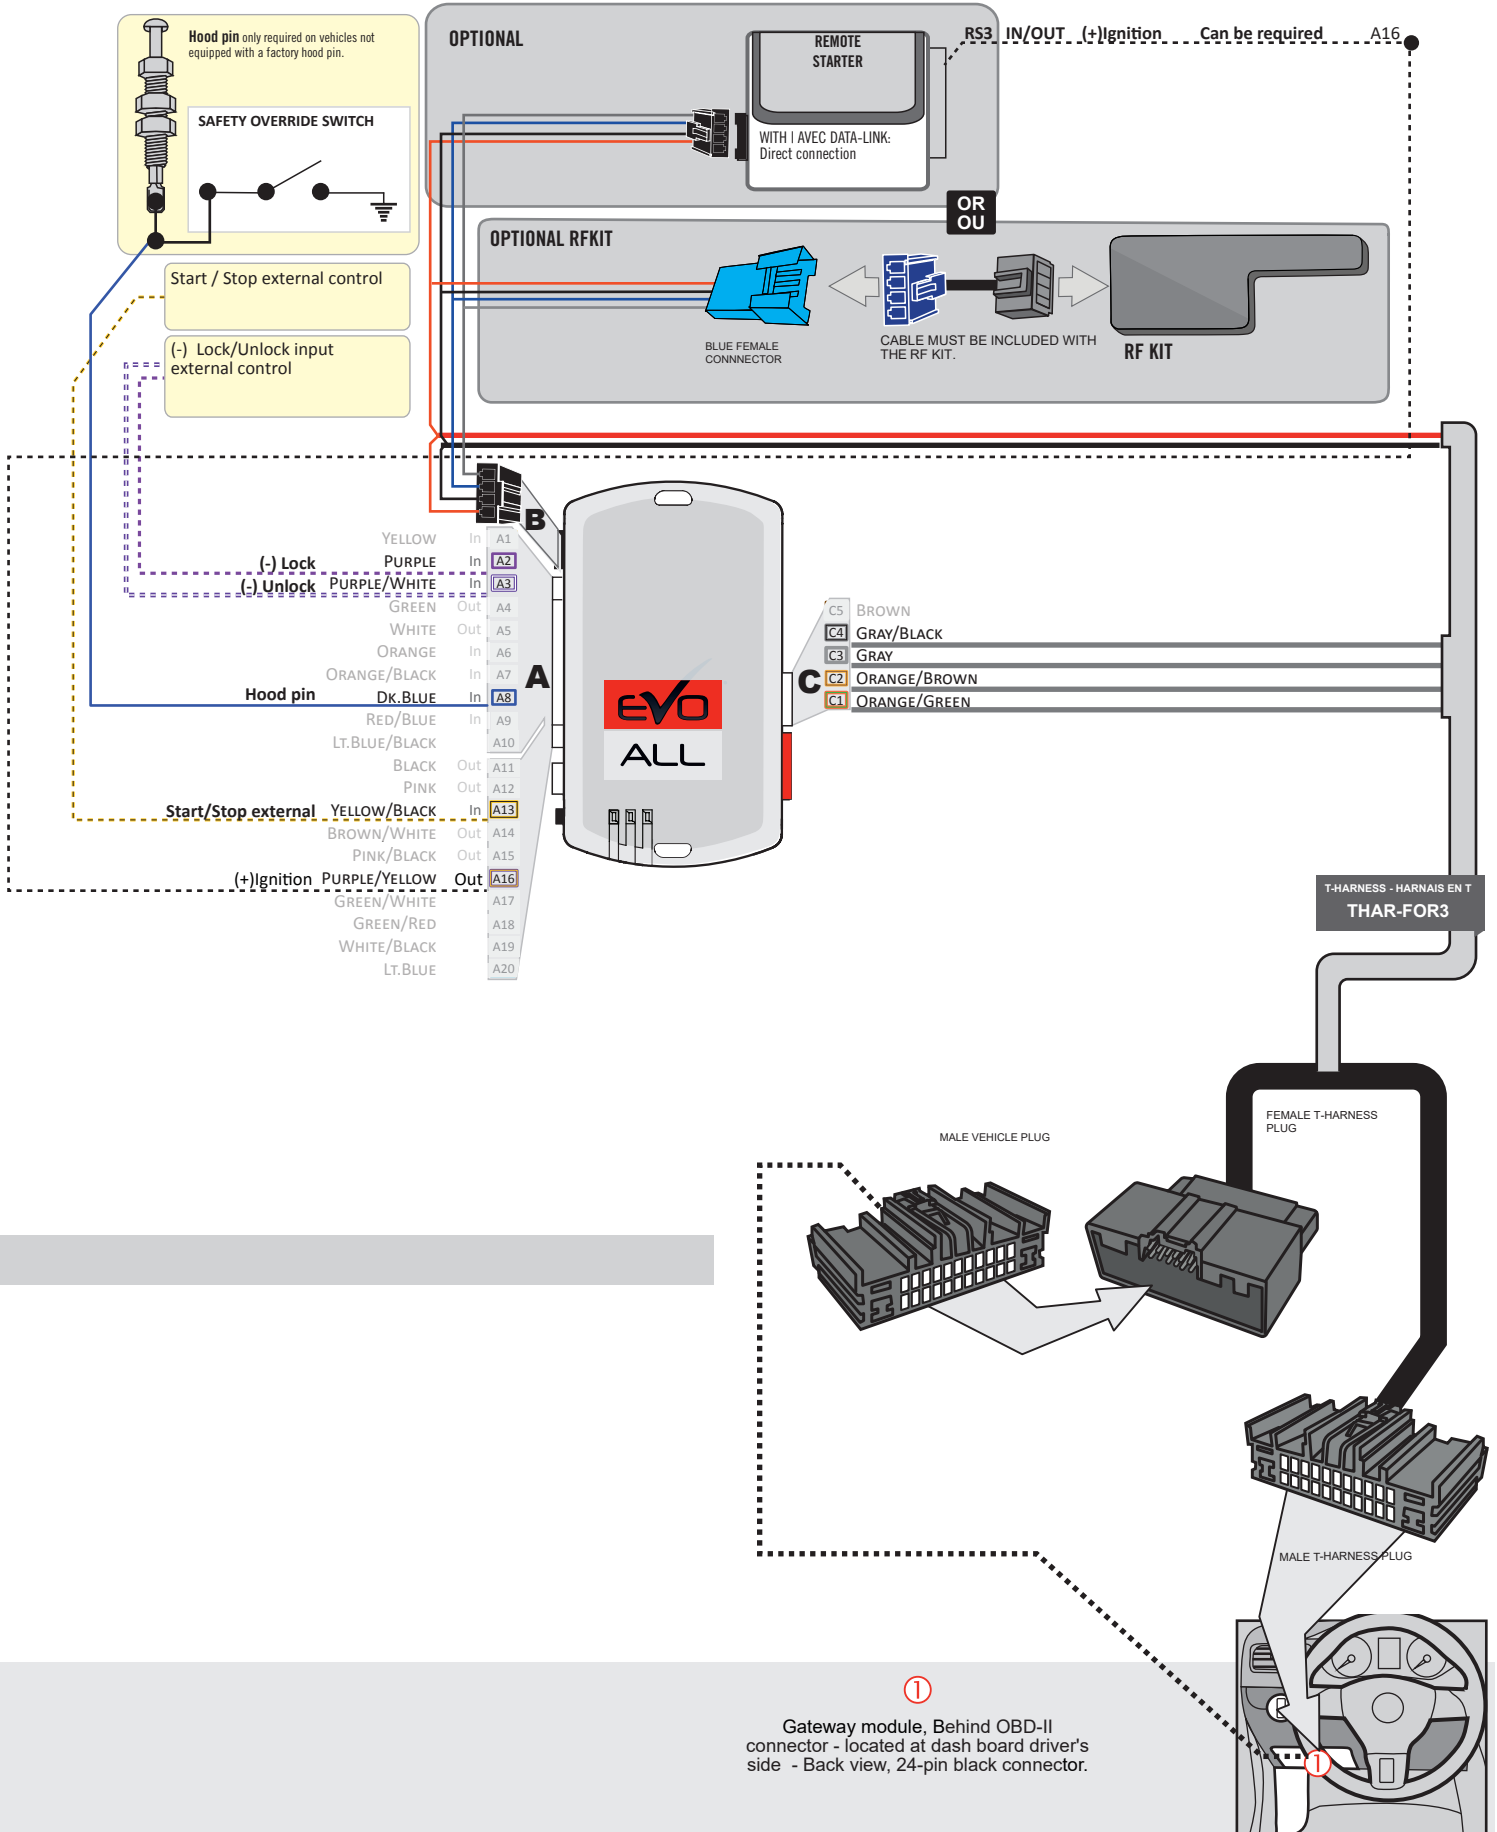

BRONCO SPORT

DCRYPTOR PROGRAMMING PROCEDURE




- Parts required (not included)**
- 1x **FLASH LINK UPDATER, FLASH LINK MANAGER** SOFTWARE
 - 1x Microsoft Windows Computer with Internet connection

OR

- 1x **FLASH LINK MOBILE**
- 1x **FLASH LINK MOBILE APP**
- Smartphone *Android or iOS* with Internet connection
(Internet provider charges may apply)

BEFORE PROGRAMMING SET THE UNIT OPTIONS AND SAVE.


1

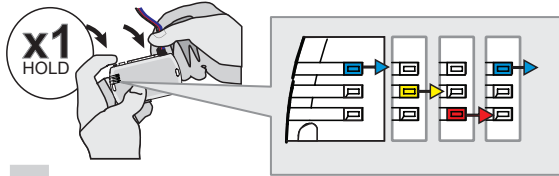

Press and hold the programming button:
Insert the 4-Pin (Data-Link) connector.

↳ The Blue, Red, Yellow and Blue & Red LEDs will alternatively illuminate.


2

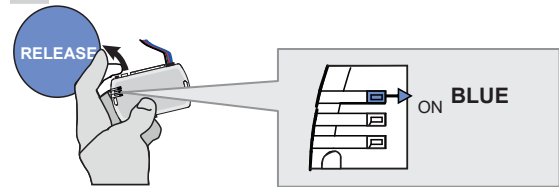

Release the programming button when the LED is **BLUE**.


If the LED is not solid BLUE disconnect the 4-Pin connector (Data-Link) and go back to step 1.

3

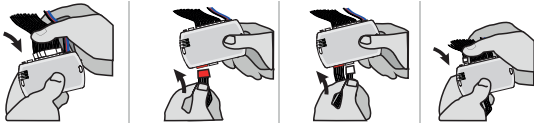

Insert the required remaining connectors.

4

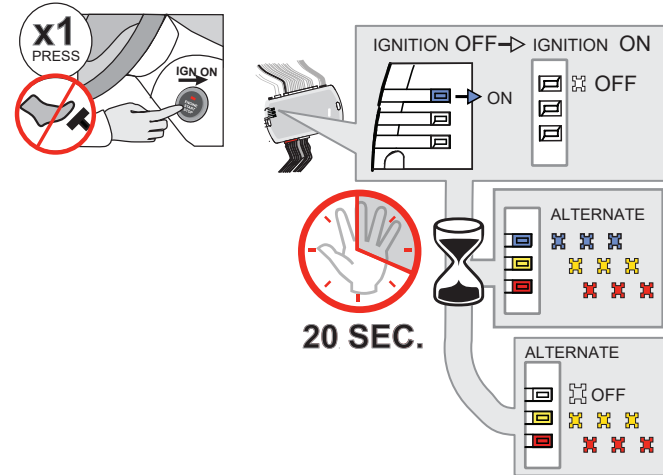

Do not press the brake pedal.
Press the Push-to-Start button once to turn on the ignition.

↳ The **BLUE** LED will turn OFF.

↳ The **BLUE, YELLOW** and **RED** LEDs will alternate.


Wait, at least 20 seconds, do not disconnect the modules or turn off the ignition.

↳ The **RED** and **YELLOW** LEDs will alternate.

Make sure that the DELs are flashing **RED** and **YELLOW** before continuing programming.



5

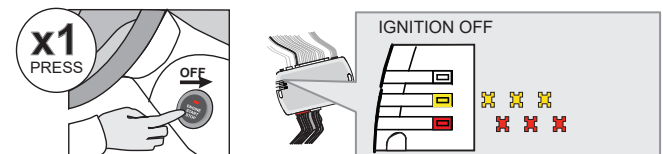


Press the Push-to-Start button once to turn off the ignition.

↳ The **RED** and **YELLOW** LEDs alternate.


KEY BYPASS PROGRAMMING PROCEDURE 2/2

6

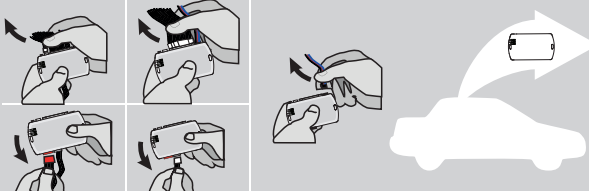

Disconnect all the connectors and after the Data-Link (4-pins) connector.

7



Microsoft Windows Computer with Internet connection*

FLASH LINK UPDATER* **FLASH LINK MANAGER*** SOFTWARE

OR

Smartphone* (Internet provider charges may apply)


FLASH LINK MOBILE*

VEHICLE'S OBDII CONNECTOR


Use the tool: FLASH LINK UPDATER or FLASH LINK MOBILE to visit the DCryptor menu.

*Parts required (not included)

8

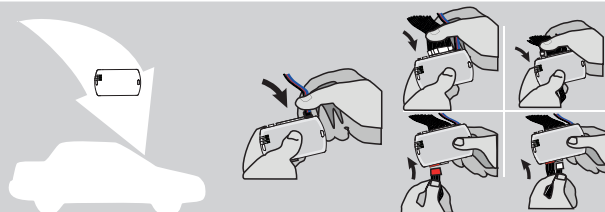


AFTER DCRYPTOR PROGRAMMING COMPLETED
Go back to the vehicle and **reconnect** the 4-Pin (Data-Link) connector and after, all the remaining connector.

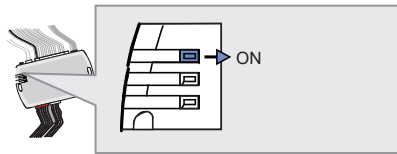

↳ The BLUE LED will turn ON.

9

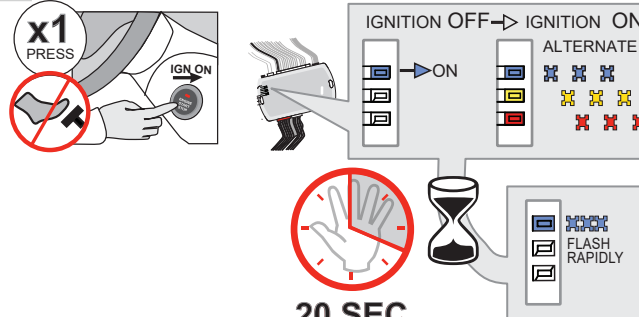

x1 PRESS (with a 'no brake pedal' symbol)

IGNITION OFF → IGNITION ON

ALTERNATE

Do not press the brake pedal. **Press** the Push-to-Start button once to turn on the ignition.

↳ The RED and YELLOW LEDs will turn ON.


Wait, at least 20 seconds, do not disconnect the modules or turn off the ignition.

↳ The BLUE LED will flash rapidly.

20 SEC.

FLASH RAPIDLY

10

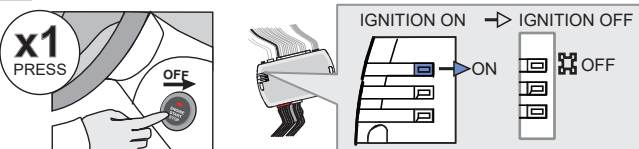

x1 PRESS (with a 'no brake pedal' symbol)

IGNITION ON → IGNITION OFF

Press the Push-to-Start button once to turn off the ignition.

↳ The BLUE will turn OFF.



The module is now programmed.




OPTIONAL RF-KIT PROGRAMMING

PROGRAM BYPASS OPTION





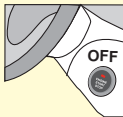


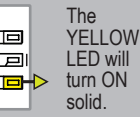
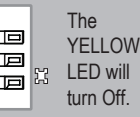
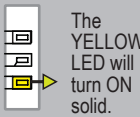
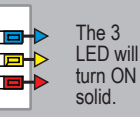

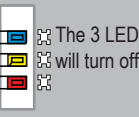
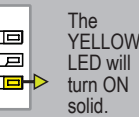
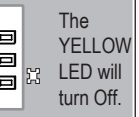
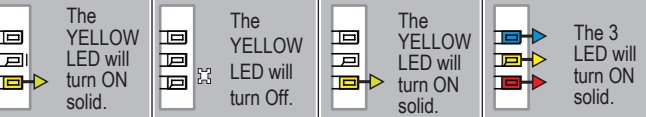
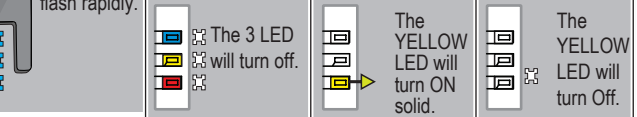
	<p>Program bypass option:</p>	<p>H2</p>	<p><input checked="" type="checkbox"/> Supported RF-KITS enable <input checked="" type="checkbox"/> H2 Fortin 2</p>
---	-------------------------------	------------------	---

OPTIONAL FORTIN RF KIT SERIES 4 OR SERIES 9 PROGRAMMING

The module must be programmed on the vehicle.



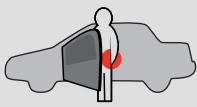

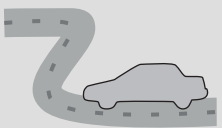




MAKE SURE THE IGNITION KEY HAS BEEN IN THE OFF POSITION FOR AT LEAST 5 SECONDS.

<p>1</p> <p>ON x1 PRESS</p>  <p>Do not press the brake pedal. Press the Push-to-Start button once to turn on the ignition.</p>	<p>2</p> <p>OFF x1 PRESS</p>  <p>Press the Push-to-Start button once to turn off the ignition.</p>	<p>3</p> <p>ON x1 PRESS</p>  <p>Do not press the brake pedal. Press the Push-to-Start button once to turn on the ignition.</p>	<p>4</p> <p>4X BRAKES</p> <p>x4 PRESS</p>  <p>Press and release the brake pedal four times. Appuyez et relâchez quatre fois la pédale de frein.</p> <p>The LED will turn off each time.</p>	<p>5</p> <p>ON EACH TRANSMITTER</p> <p>4 BUTTONS</p> <p>[-] PRESS AND RELEASE</p> <p>→ PRESS AND RELEASE</p> <p>1 BUTTON</p> <p>PRESS APPROX. 12 SEC. AND WAIT FOR THE BLUE LED TO TURN OFF THEN BACK ON SOLID THEN RELEASE.</p>	<p>6</p> <p>OFF x1 PRESS</p>  <p>Press the Push-to-Start button once to turn off the ignition.</p>	<p>7</p> <p>ON x1 PRESS</p>  <p>Do not press the brake pedal. Press the Push-to-Start button once to turn on the ignition and leave it ON for 5 sec..</p>	<p>8</p> <p>OFF x1 PRESS</p>  <p>Press the Push-to-Start button once to turn off the ignition.</p>
 <p>The YELLOW LED will turn ON solid.</p>	 <p>The YELLOW LED will turn Off.</p>	 <p>The YELLOW LED will turn ON solid.</p>	 <p>The LED will flash rapidly.</p>	 <p>The LED will turn off each time.</p>	 <p>The LED will turn Off.</p>	 <p>The YELLOW LED will turn ON solid.</p>	 <p>The YELLOW LED will turn Off.</p>
 <p>The 3 LED will turn ON solid.</p>				 <p>The 3 LED will turn off each time.</p>			

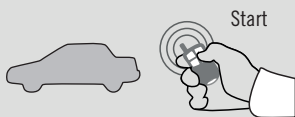

REMOTE STARTER FUNCTIONALITY

 <p>Start</p> <p>All doors must be closed.</p> <p>Remote start the vehicle.</p>	 <p>UNLOCK</p> <p>Unlock the doors with either:</p> <ul style="list-style-type: none"> • The OEM remote • The remote-starter remote • Or the proximity remote 	 <p>Enter the vehicle with the SMART-KEY.</p>	 <p>DO NOT PRESS THE BRAKE PEDAL.</p> <p>Press and release the Push-to-Start button once.</p>	 <p>Press the brake pedal. The vehicle can now be put in to gear and driven.</p> <p>If the Smart-Key is not detected the vehicle will shut down.</p>
--	---	--	---	---





STANDALONE & THAR-FOR3 INSTALLATION

ADDENDUM - SUGGESTED WIRING CONFIGURATION



ONLY COMPATIBLE WITH AUTOMATIC TRANSMISSION VEHICLES.

VEHICLE	YEARS	Vehicle functions supported in this diagram (functional if equipped)												
		T-Harness available (sold separately)	Lock	Unlock	Arm	Disarm	Parking Lights	Tachometer	Door Status	Hood Status*	Hand-Brake Status	Foot-Brake Status		
														
FORD														
E-350	2021	•	•	•	•	•	•	•	•	•	•	•	•	•
E-450	2021	•	•	•	•	•	•	•	•	•	•	•	•	•




FIRMWARE VERSION

71.[52]

MINIMUM

To add the firmware version and the options, use the **FLASH LINK UPDATER** or **FLASH LINK MOBILE** tool, sold separately.

	Program bypass option:	UNIT OPTION	DESCRIPTION
		A3	OFF
IF THE VEHICLE IS NOT EQUIPPED WITH FUNCTIONAL HOOD PIN:		A11	OFF
			Hood trigger (Output Status).

Parts required (Not included)			PAGE
WIRE TO WIRE DIAGRAM			
	2x	Diode 1Amp	Page 3
	1x	Relay (Parking lights)	
THARNESSE DIAGRAM			
	1x	THAR-FOR3	Page 4
THARNESSE THAR-FOR3	2x	Diode 1Amp	
	1x	Relay (Parking lights)	

MANDATORY INSTALL

*HOOD PIN



HOOD STATUS: THE HOOD PIN SWITCH MUST BE INSTALLED IF THE VEHICLE CAN BE REMOTE STARTED WITH THE HOOD OPEN, SET FUNCTION A11 TO OFF.

A11

OFF

Notice: the installation of safety elements are mandatory. The hood pin is an essential security element and must be installed.

THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.

PARTS REQUIRED (NOT INCLUDED)


1x **FLASH LINK UPDATER**
 1x **FLASH LINK MANAGER**
SOFTWARE | PROGRAMME
 1x Microsoft Windows Computer with Internet connection

OR


1x **FLASH LINK MOBILE**
 1x **FLASH LINK MOBILE APP**
Smartphone Android or iOS with Internet connection (provider charges may apply).

MANDATORY

HOOD PIN



REMOTE START SAFETY OVERRIDE SWITCH

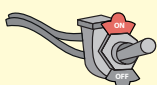


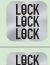




VALET SWITCH

Part #: RSPB available, Sold separately.


Notice: the installation of safety elements are mandatory. The hood pin and the valet switch are essential security elements and must be installed.

Notice: l'installation des éléments de sécurité est obligatoire. Le contact de capot et le commutateur de valet sont des éléments de sécurité essentiels et doivent absolument être installés.


STAND ALONE CONFIGURATION

	Program bypass option	UNIT OPTION	DESCRIPTION
	OEM Remote Stand Alone Remote Starter:	D1.10 	By default, LOCK, LOCK, LOCK
		D1.1 	Par défaut, VERROUILLE, VERROUILLE, VERROUILLE
	Program bypass option with oem remote:	C1	OEM Remote Monitoring
	Program bypass option with RF KIT antenna:	H1 to H6	Supported RF Kits and select RF Kit
	Program bypass option Vehicle hybrid only:	D4	Hybrid mode (Vehicle hybrid only)


REMOTE STARTER FUNCTIONALITY



All doors must be closed.

3X 

Press the OEM remote's Lock button 3x to remote-start (or remote-stop) the vehicle.




The vehicle will START.

REMOTE STARTER DIAGNOSTICS
MODULE RED LED

x2 flash :	Brake ON
x3 flash :	No tach
x4 flash :	Ignition before start
x5 flash :	Hood Open

REMOTE STARTER WARNING CARD



CUT THIS WARNING CARD AND STICK IT ON A VISIBLE PLACE:
 or use the package RSPB, Sold separately.

WARNING


REMOTE STARTER

THE VEHICLE CAN BE STARTED BY EITHER: PRESSING THE LOCK BUTTON ON THE OEM REMOTE 3 TIMES CONSECUTIVELY OR BY A SMARTPHONE. **TURN ON** THE SAFETY SWITCH LOCATED UNDER THE DASHBOARD BEFORE WORKING ON THE VEHICLE.

DESCRIPTION |






② Parking Lights switch

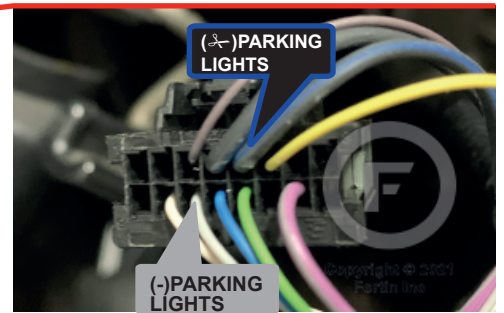


③ Gateway module, Behind OBD-II connector

④ Passenger kick panel


① Ignition switch

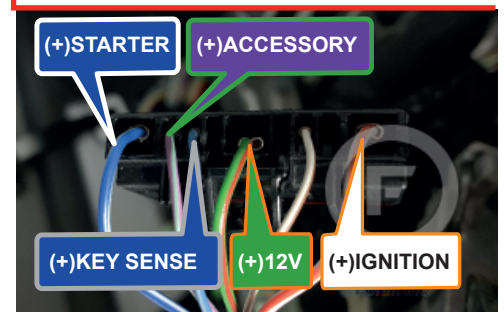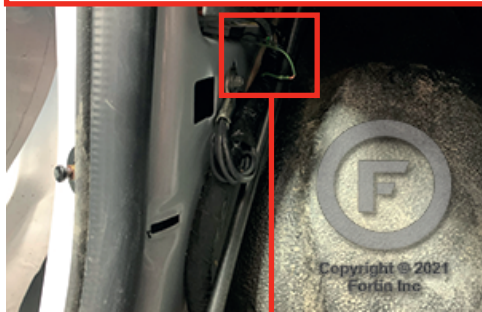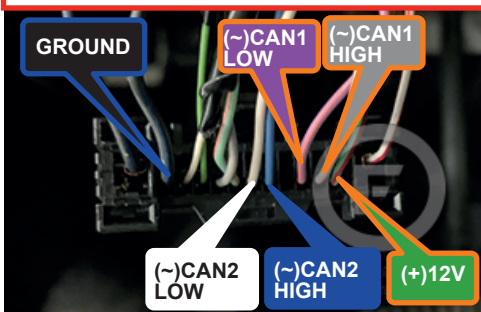

AUTOMATIC TRANSMISSION WIRING CONNECTION

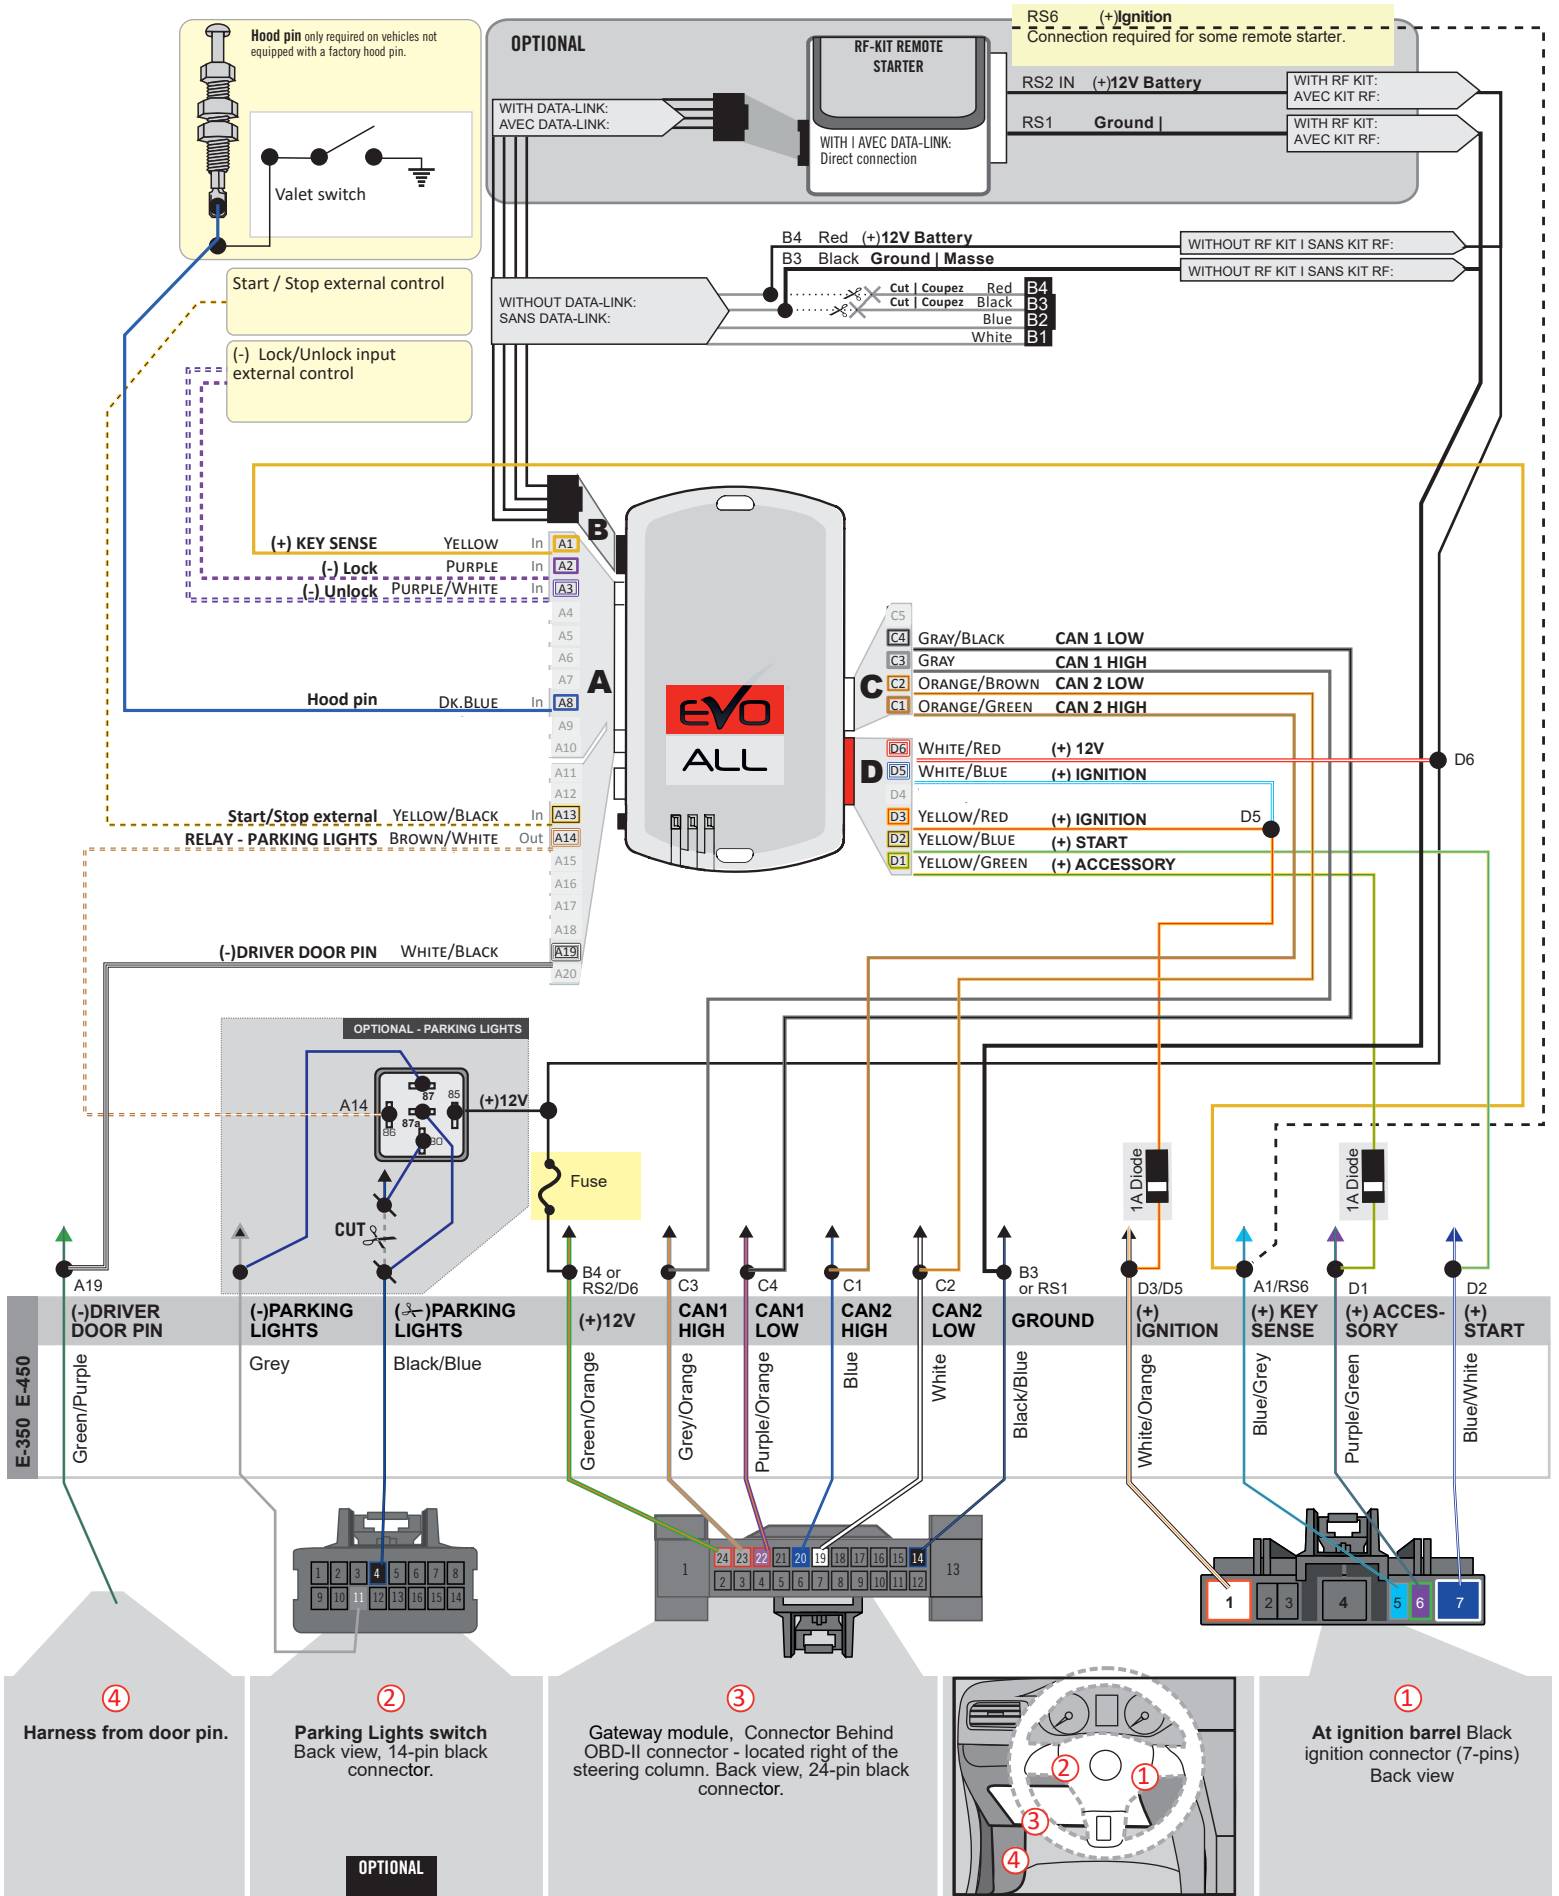


THAR-FOR3 | T-HARNESS - AUTOMATIC TRANSMISSION

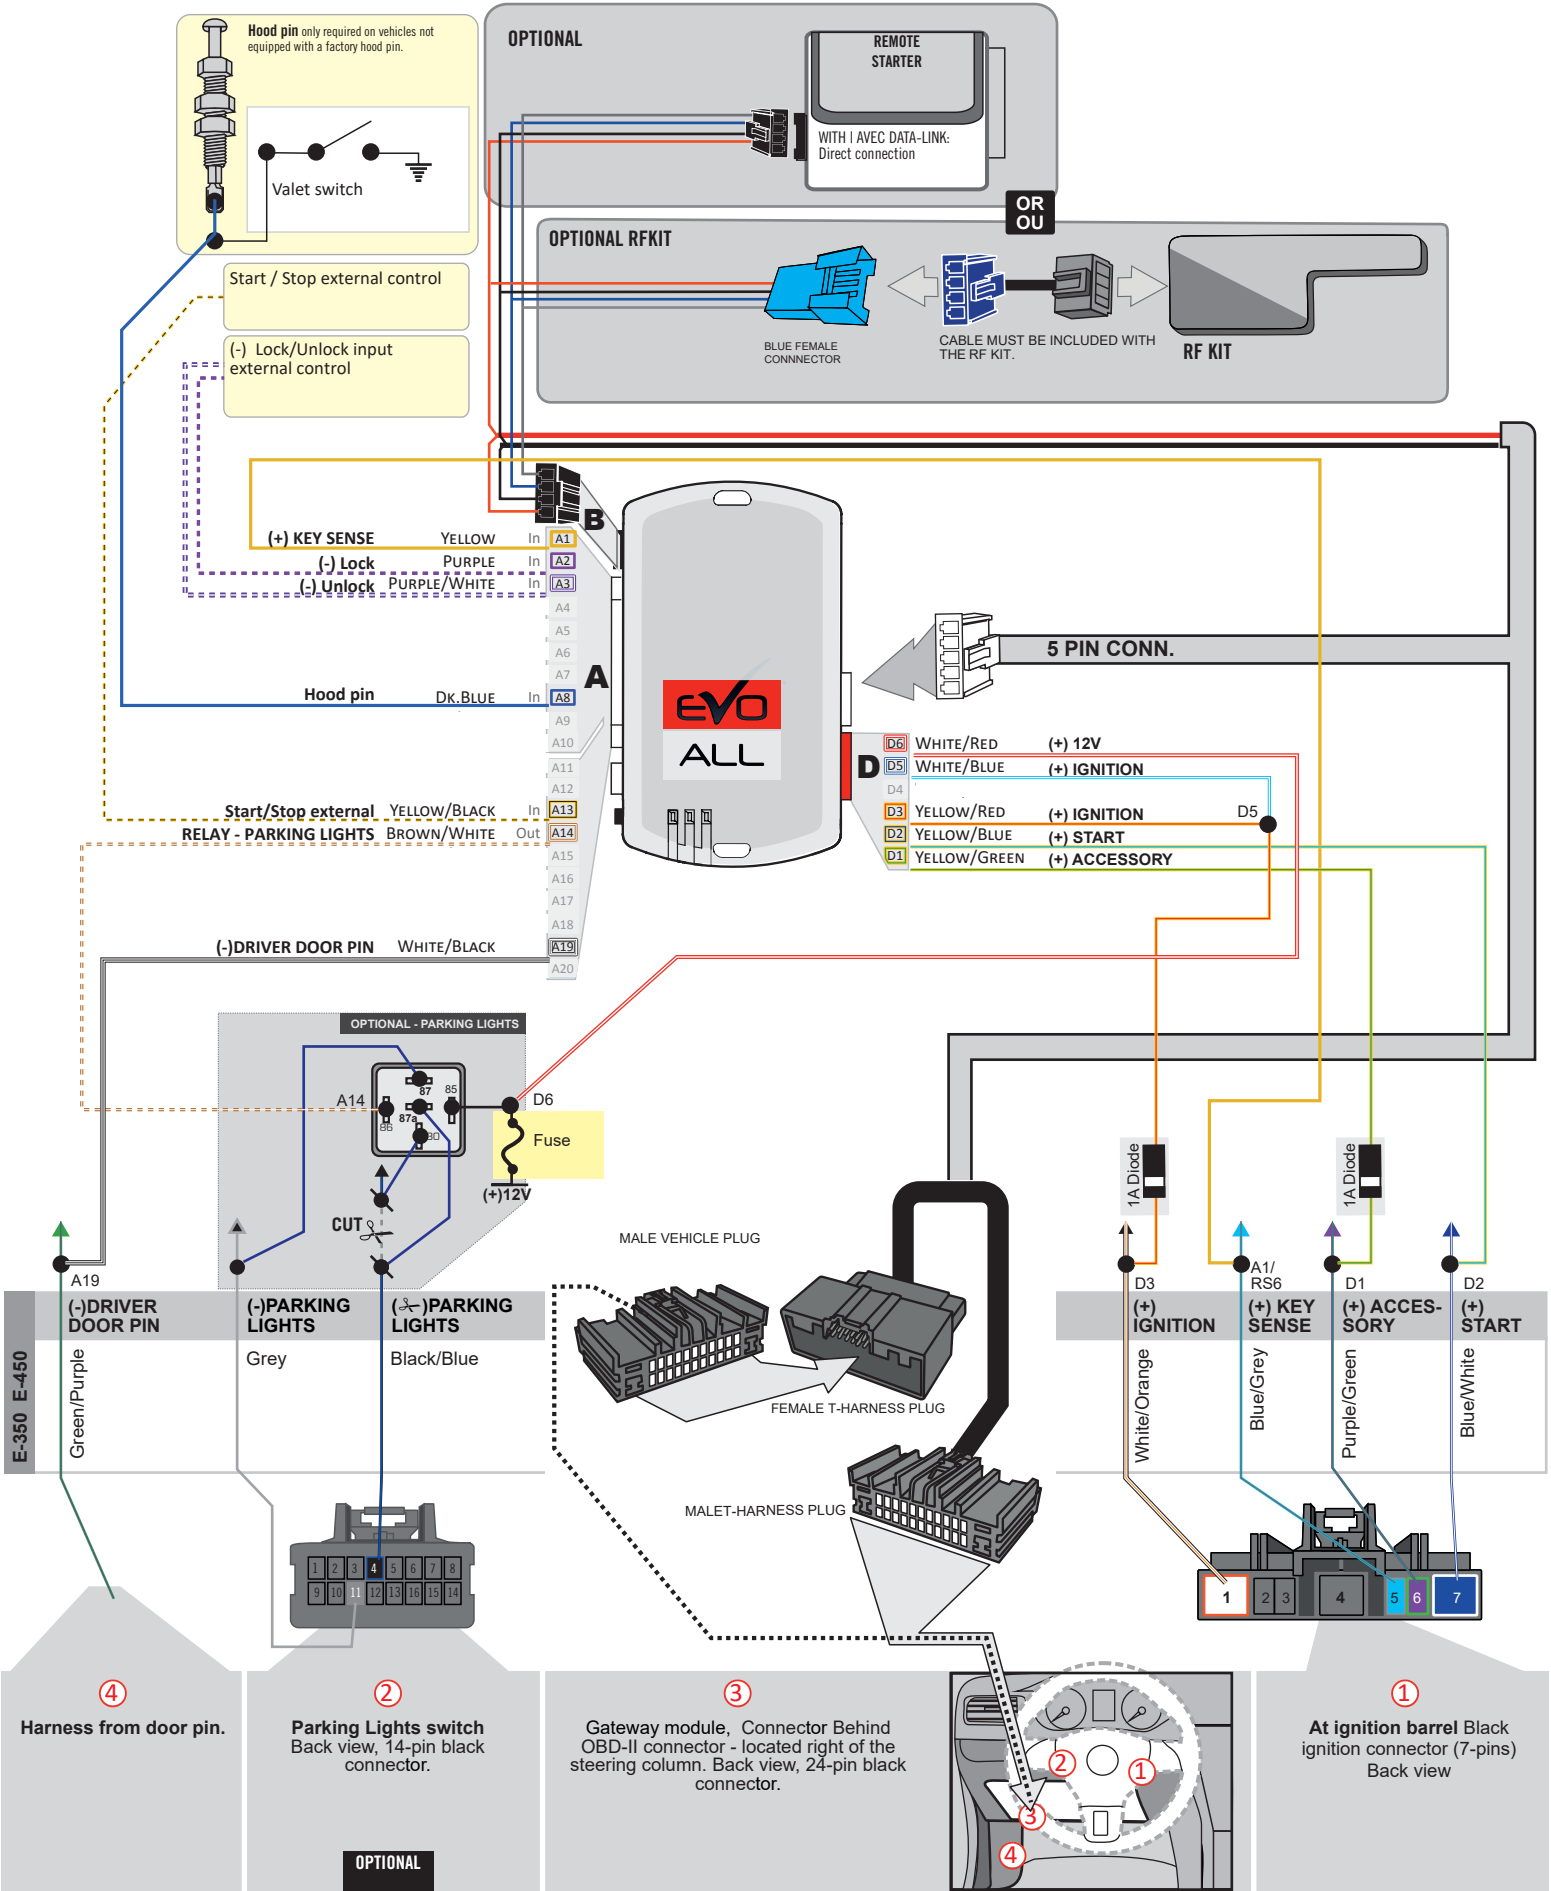

PROGRAMMING PROCEDURE


1

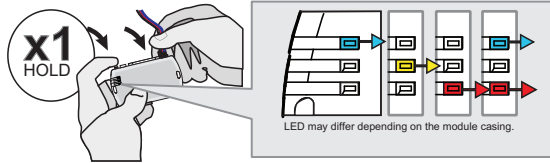

Press and hold the programming button:
Connect the 4-PIN Data-link harness (Black connector).


↳ The Blue, Red, Yellow and Blue & Red LEDs will alternatively illuminate.

2

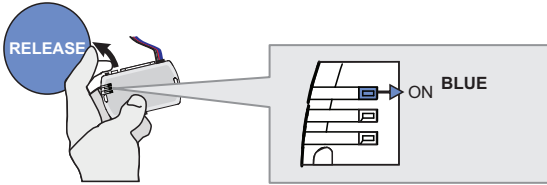


Release the programming button when the LED is BLUE.

 If the LED is not solid BLUE disconnect the 4-Pin connector (Data-Link) and go back to step 1.




3

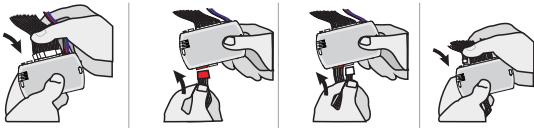

Insert the required remaining connectors.


4

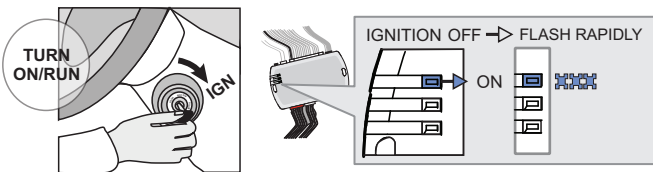

Turn the key to the Ignition ON/RUN position.

↳ The BLUE LED will flash rapidly.

5

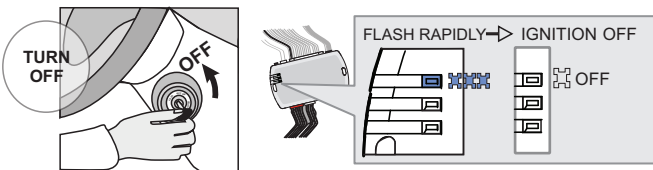

Turn the key to the OFF position.

↳ The BLUE LED will turn off.



The module is now programmed.

REMOTE STARTER FUNCTIONALITY



All doors must be closed.



Remote start the vehicle.



Unlock the doors with the remote-starter remote or the OEM remote.



Insert and Turn the key to the Ignition ON/RUN position.



Press the brake pedal.



The vehicle can now be put in to gear and driven.


STANDALONE & THAR-FOR3 INSTALLATION

ADDENDUM - SUGGESTED WIRING CONFIGURATION



Vehicle functions supported in this diagram (functional if equipped)

VEHICLE	YEARS	Immobilizer bypass	Lock	Unlock	Arm	Disarm	Heated Seats**	Rear Defrost**	RAP Disable	Parking Lights***	Tachometer	Door Status	Trunk Status	Hood Status*	Hand-Brake Status	Foot-Brake Status	Active OEM Remote Start
LINCOLN Aviator	Push-to-Start 2020	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•

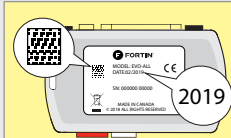

COMPATIBLE MODULE REQUIRED:

QR CODE ON THE LABEL
MANUFACTURED AFTER: 2019

FIRMWARE VERSION
58.[02]
MINIMUM

To add the firmware version and the options, use the **FLASH LINK UPDATER** or **FLASH LINK MOBILE** tool, sold separately.



Program bypass option:

UNIT OPTION

DESCRIPTION

C1

OEM Remote status (Lock/Unlock) monitoring

D6

Push-to-Start

IF THE VEHICLE IS NOT EQUIPPED WITH FUNCTIONAL HOOD PIN:

A11

OFF

Hood trigger (Output Status).

NOTES

The vehicles OEM remote and SmartKey are still operable during remote start.

**Heated seats The heated seats and rear defrost activate automatically when it cold.
**Rear Defrost

***Parking Lights The parking Lights at remote start only.

MANDATORY INSTALL

*HOOD PIN



HOOD STATUS: THE HOOD PIN SWITCH MUST BE INSTALLED IF THE VEHICLE CAN BE REMOTE STARTED WITH THE HOOD OPEN, SET FUNCTION A11 TO OFF.

A11

OFF

Notice: the installation of safety elements are mandatory. The hood pin is an essential security element and must be installed.

THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.

PARTS REQUIRED (NOT INCLUDED)


1x **FLASH LINK UPDATER**
 1x **FLASH LINK MANAGER**
SOFTWARE | PROGRAMME
 1x Microsoft Windows Computer with Internet connection

OR


1x **FLASH LINK MOBILE**
 1x **FLASH LINK MOBILE APP**
Smartphone Android or iOS with Internet connection (provider charges may apply).

MANDATORY

HOOD PIN



REMOTE START SAFETY OVERRIDE SWITCH

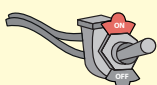
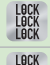






VALET SWITCH


Part #: RSPB available, Sold separately.

Notice: the installation of safety elements are mandatory. The hood pin and the valet switch are essential security elements and must be installed.


STAND ALONE CONFIGURATION

	Program bypass option	UNIT OPTION	DESCRIPTION
	OEM Remote Stand Alone Remote Starter:	D1.10 	By default, LOCK, LOCK, LOCK
		D1.1 	Par défaut, VERROUILLE, VERROUILLE, VERROUILLE
	Program bypass option with oem remote:	C1	OEM Remote Monitoring
	Program bypass option with RF KIT antenna:	H1 to H6	Supported RF Kits and select RF Kit
	Program bypass option Vehicle hybrid only:	D4	Hybrid mode (Vehicle hybrid only)


REMOTE STARTER FUNCTIONALITY




All doors must be closed.

3X 

Press the OEM remote's Lock button 3x to remote-start (or remote-stop) the vehicle.




START 

The vehicle will START.

REMOTE STARTER DIAGNOSTICS
MODULE RED LED

x2 flash :	Brake ON
x3 flash :	No tach
x4 flash :	Ignition before start
x5 flash :	Hood Open

REMOTE STARTER WARNING CARD



CUT THIS WARNING CARD AND STICK IT ON A VISIBLE PLACE:
 or use the package RSPB, Sold separately.

WARNING

REMOTE STARTER

THE VEHICLE CAN BE STARTED BY EITHER: PRESSING THE LOCK BUTTON ON THE OEM REMOTE 3 TIMES CONSECUTIVELY OR BY A SMARTPHONE. **TURN ON** THE SAFETY SWITCH LOCATED UNDER THE DASHBOARD BEFORE WORKING ON THE VEHICLE.

DESCRIPTION

	Parts required (Not included)	PAGE
--	-------------------------------	------


WIRE TO WIRE DIAGRAM

AUTOMATIC TRANSMISSION	1x 7.5 Amp. fuse	Page 3
------------------------	------------------	--------



THARNES DIAGRAM

THARNES THAR-FOR3 AUTOMATIC TRANSMISSION	1x THAR-FOR3	Page 4
--	--------------	--------




① Gateway module, located at dash board driver's side,

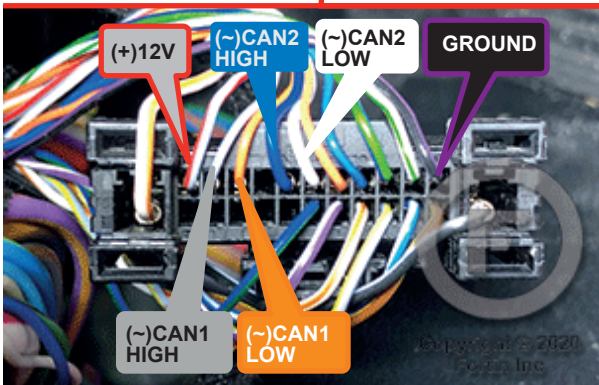






② Fuse box

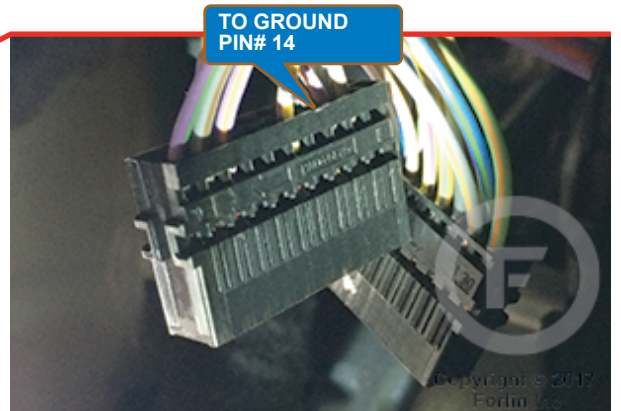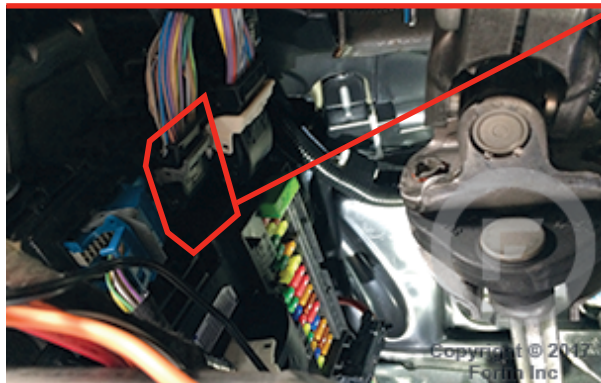

AUTOMATIC TRANSMISSION WIRING CONNECTION |

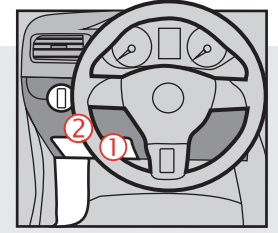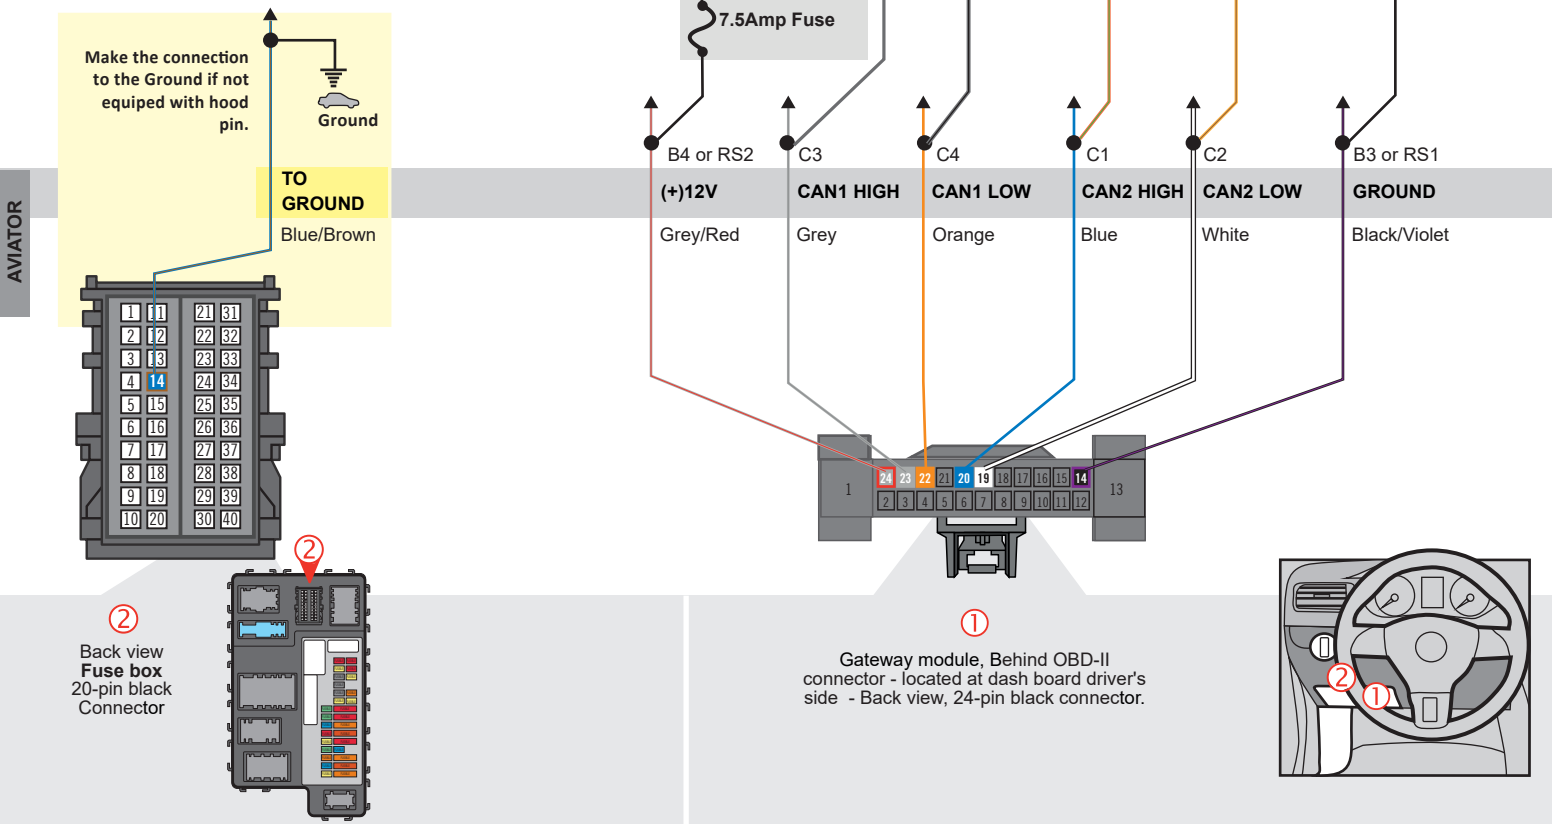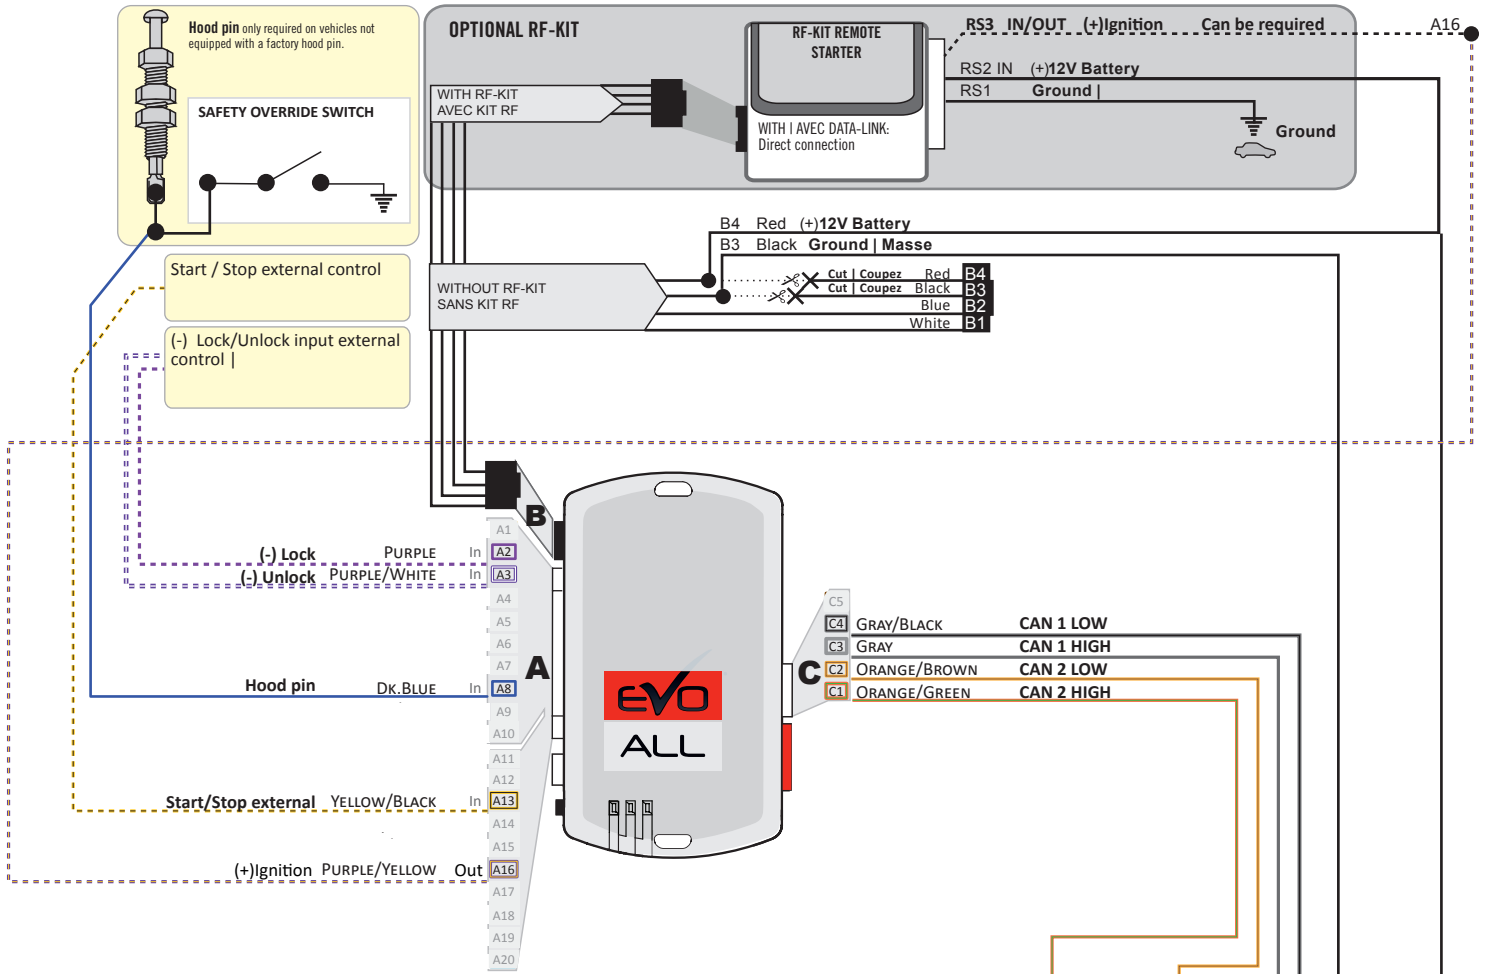

THAR-FOR3 | T-HARNESS - AUTOMATIC TRANSMISSION |

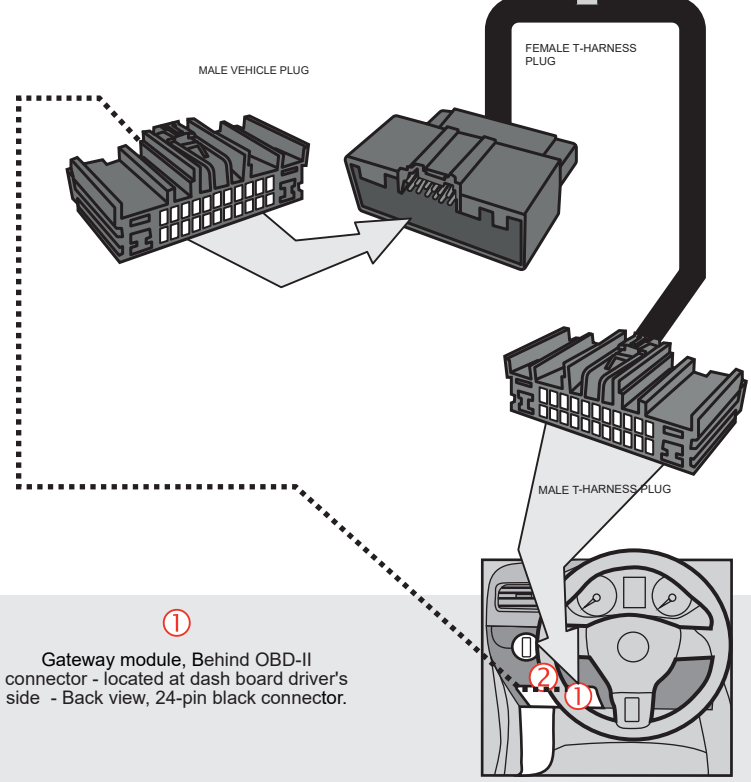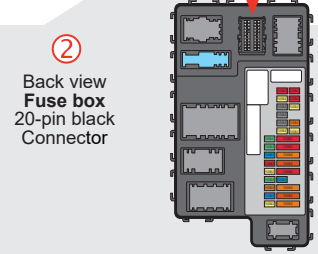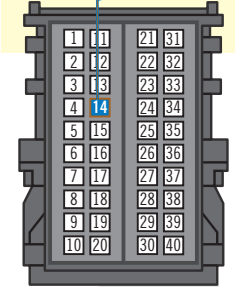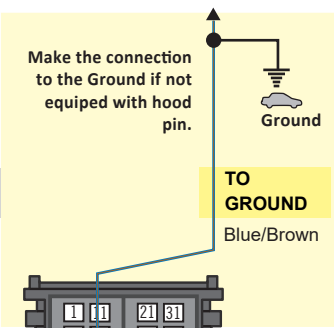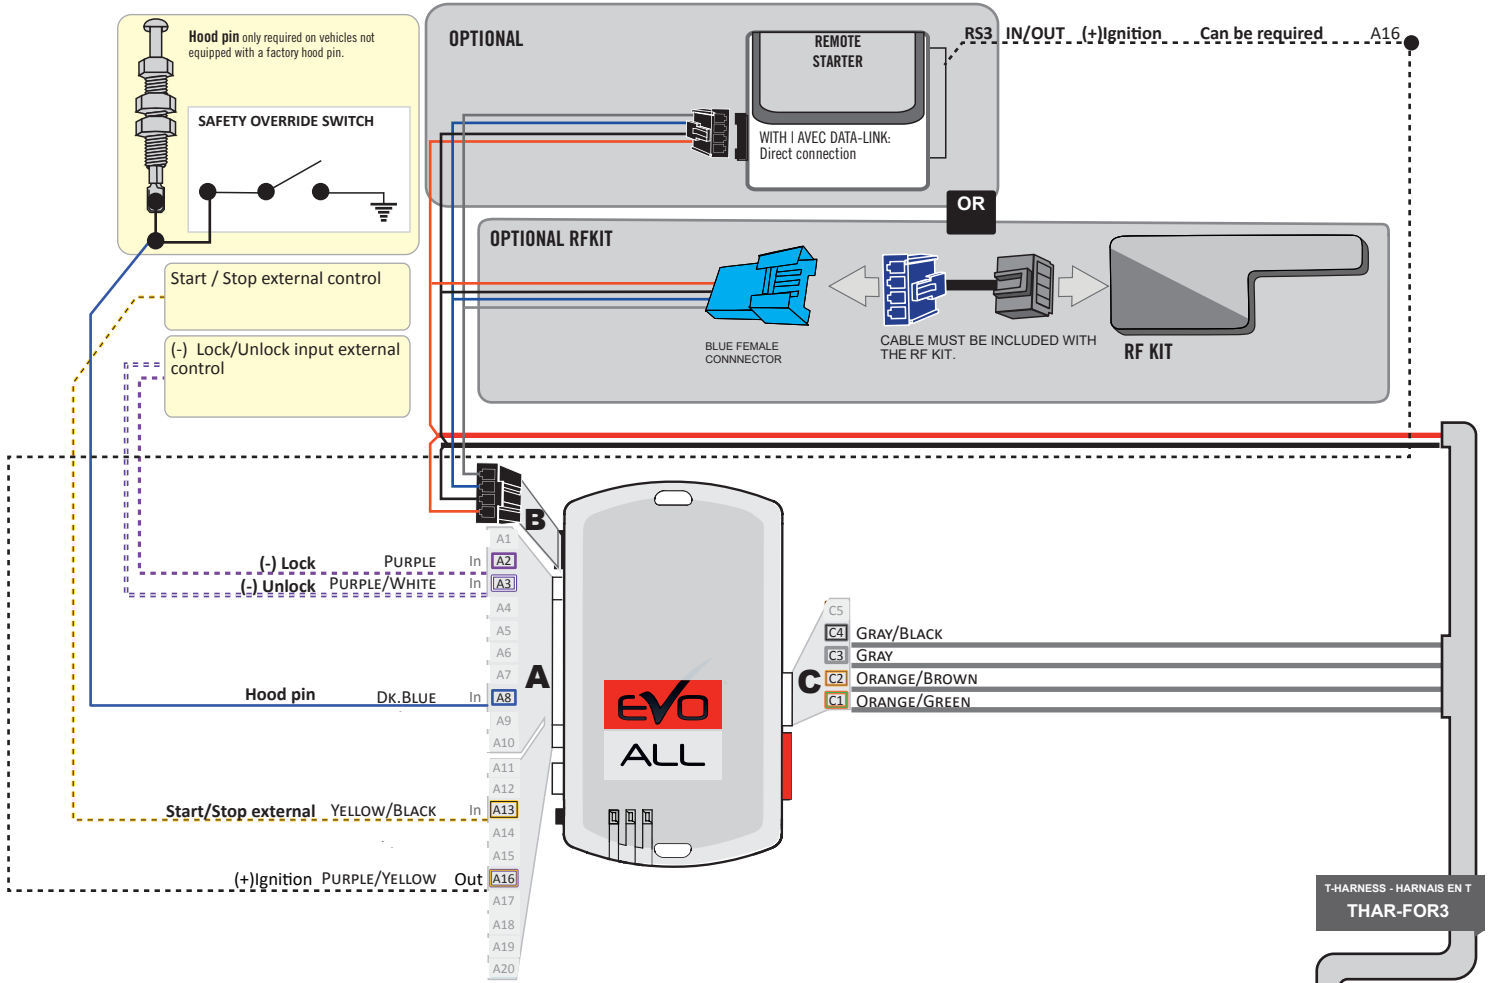



Parts required (not included)


- 1x FLASH LINK UPDATER, SOFTWARE | PROGRAMME
- 1x FLASH LINK MANAGER
- 1x Microsoft Windows Computer with Internet connection

OR
OU

- 1x FLASH LINK MOBILE
- 1x FLASH LINK MOBILE APP
- Smartphone Android or iOS with Internet connection (Internet provider charges may apply)

BEFORE PROGRAMMING SET THE UNIT OPTIONS AND SAVE.


1

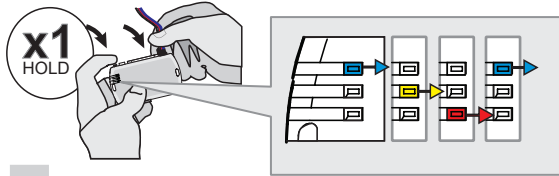

Press and hold the programming button:
Insert the 4-Pin (Data-Link) connector.


↳ The Blue, Red, Yellow and Blue & Red LEDs will alternatively illuminate.

2

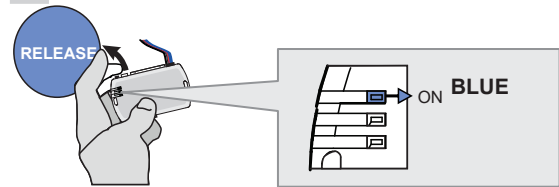


Release the programming button when the LED is BLUE.

 If the LED is not solid BLUE disconnect the 4-Pin connector (Data-Link) and go back to step 1.




3

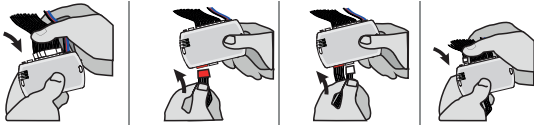

Insert the required remaining connectors.

4

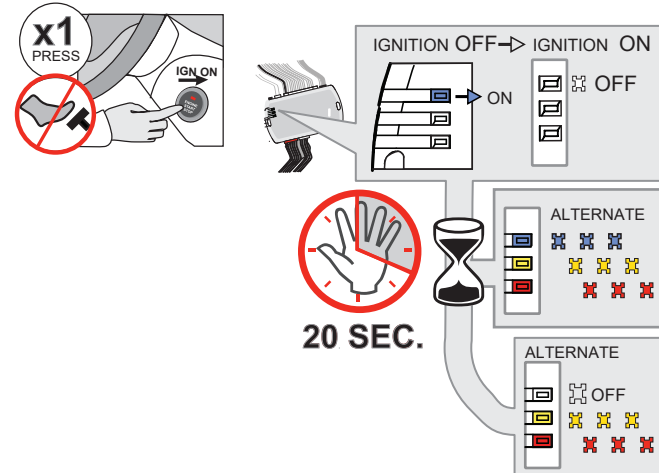

Do not press the brake pedal.
Press the Push-to-Start button once to turn on the ignition.

 
↳ The BLUE LED will turn OFF.

↳ The BLUE, YELLOW and RED LEDs will alternate.


Wait, at least 20 seconds, do not disconnect the modules or turn off the ignition.

↳ The RED and YELLOW LEDs will alternate.

Make sure that the DELs are flashing RED and YELLOW before continuing programming.



5

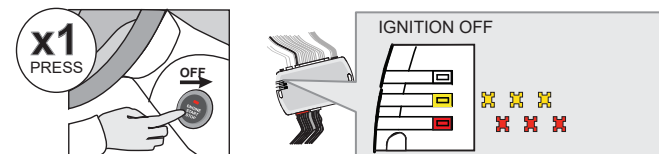

Press the Push-to-Start button once to turn off the ignition.

↳ The RED and YELLOW LEDs alternate.

KEY BYPASS PROGRAMMING PROCEDURE 2/2 |

6

Disconnect all the connectors and after the Data-Link (4-pins) connector.

7

Microsoft Windows Computer with Internet connection*

OR


Smartphone* (Internet provider charges may apply)

Use the tool:
FLASH LINK UPDATER or
FLASH LINK MOBILE
 to visit the DCryptor menu.

*Parts required (not included)

8

AFTER DCRYPTOR PROGRAMMING COMPLETED
Go back to the vehicle and reconnect the 4-Pin (Data-Link) connector and after, all the remaining connector.

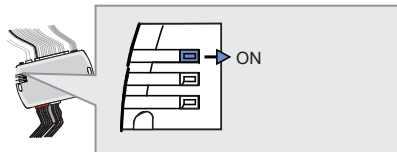

↳ The BLUE LED will turn ON.

9

x1 PRESS

IGNITION OFF → IGNITION ON

ALTERNATE

20 SEC.

FLASH RAPIDLY

Do not press the brake pedal.
Press the Push-to-Start button once to turn on the ignition.

↳ The RED and YELLOW LEDs will turn ON.

Wait, at least 20 seconds, do not disconnect the modules or turn off the ignition.

↳ The BLUE LED will flash rapidly.

10

x1 PRESS

IGNITION ON → IGNITION OFF

OFF

Press the Push-to-Start button once to turn off the ignition.

↳ The BLUE will turn OFF.



The module is now programmed.

OPTIONAL RF-KIT PROGRAMMING |

PROGRAM BYPASS OPTION



Program bypass option:

H2

Supported RF-KITS enable

H2 Fortin 2

OPTIONAL FORTIN RF KIT SERIES 4 OR SERIES 9 PROGRAMMING



The module must be programmed on the vehicle.





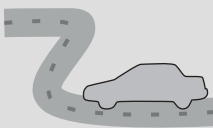


MAKE SURE THE IGNITION KEY HAS BEEN IN THE OFF POSITION FOR AT LEAST 5 SECONDS.

<p>1</p> <p>ON x1 PRESS</p> <p>Do not press the brake pedal. Press the Push-to-Start button once to turn on the ignition.</p>	<p>2</p> <p>OFF x1 PRESS</p> <p>Press the Push-to-Start button once to turn off the ignition.</p>	<p>3</p> <p>ON x1 PRESS</p> <p>Do not press the brake pedal. Press the Push-to-Start button once to turn on the ignition.</p>	<p>4</p> <p>4X BRAKES</p> <p>x4 PRESS</p> <p>Press and release the brake pedal four times.</p>	<p>5</p> <p>ON EACH TRANSMITTER</p> <p>4 BUTTONS</p> <p>[-] PRESS AND RELEASE</p> <p>→ PRESS AND RELEASE</p> <p>1 BUTTON</p> <p>PRESS APPROX. 12 SEC. AND WAIT FOR THE BLUE LED TO TURN OFF THEN BACK ON SOLID THEN RELEASE.</p>	<p>6</p> <p>OFF x1 PRESS</p> <p>Press the Push-to-Start button once to turn off the ignition.</p>	<p>7</p> <p>ON x1 PRESS</p> <p>Do not press the brake pedal. Press the Push-to-Start button once to turn on the ignition and leave it ON for 5 sec..</p>	<p>8</p> <p>OFF x1 PRESS</p> <p>Press the Push-to-Start button once to turn off the ignition.</p>
<p>The YELLOW LED will turn ON solid.</p>	<p>The YELLOW LED will turn Off.</p>	<p>The YELLOW LED will turn ON solid.</p>	<p>The LED will flash rapidly.</p>	<p>The LED will turn off each time.</p>	<p>The LED will turn Off.</p>	<p>The YELLOW LED will turn ON solid.</p>	<p>The YELLOW LED will turn Off.</p>
<p>The YELLOW LED will turn ON solid.</p>	<p>The YELLOW LED will turn Off.</p>	<p>The YELLOW LED will turn ON solid.</p>	<p>The 3 LED will turn ON solid.</p>	<p>The 3 LED will turn off each time.</p>	<p>The 3 LED will turn Off.</p>	<p>The YELLOW LED will turn ON solid.</p>	<p>The YELLOW LED will turn Off.</p>



REMOTE STARTER FUNCTIONALITY |

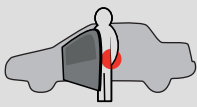 <p>Start</p> <p>All doors must be closed.</p> <p>Remote start the vehicle.</p>	 <p>UNLOCK</p> <p>Unlock the doors with either:</p> <ul style="list-style-type: none"> • The OEM remote • The remote-starter remote • Or the proximity remote 	 <p>Enter the vehicle with the SMART-KEY.</p>	 <p>DO NOT PRESS THE BRAKE PEDAL.</p> <p>Press and release the Push-to-Start button once.</p>	 <p>Press the brake pedal. The vehicle can now be put in to gear and driven.</p> <p>If the Smart-Key is not detected the vehicle will shut down.</p>
--	---	--	---	---

STANDALONE & THAR-FOR3 INSTALLATION

ADDENDUM - SUGGESTED WIRING CONFIGURATION




ONLY COMPATIBLE WITH AUTOMATIC TRANSMISSION VEHICLES.



Vehicle functions supported in this diagram (functional if equipped)

VEHICLE	YEARS	Immobilizer bypass	T-Harness available (sold separately)	Lock	Unlock	Arm	Disarm	Heated Seats**	Rear Defrost**	RAP Disable	Parking Lights***	Tachometer	Door Status	Trunk Status	Hood Status*	Hand-Brake Status	Foot-Brake Status	Active OEM Remote Start
FORD																		
Edge	2020	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•

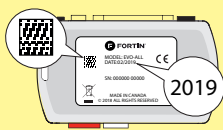

COMPATIBLE MODULE REQUIRED:

QR CODE ON THE LABEL
MANUFACTURED AFTER: 2019

FIRMWARE VERSION

58.[02]
MINIMUM

To add the firmware version and the options, use the **FLASH LINK UPDATER** or **FLASH LINK MOBILE** tool, sold separately.

UNIT OPTION	DESCRIPTION
C1	OEM Remote status (Lock/Unlock) monitoring
D6	Push-to-Start
A11	OFF Hood trigger (Output Status).

IF THE VEHICLE IS NOT EQUIPPED WITH FUNCTIONAL HOOD PIN:

NOTES

The vehicles OEM remote and SmartKey are still operable during remote start.

**Heated seats The heated seats and rear defrost activate automatically when it cold.
**Rear Defrost

***Parking Lights The parking Lights at remote start only.

MANDATORY INSTALL

*HOOD PIN



HOOD STATUS: THE HOOD PIN SWITCH MUST BE INSTALLED IF THE VEHICLE CAN BE REMOTE STARTED WITH THE HOOD OPEN, SET FUNCTION A11 TO OFF.

A11

OFF

Notice: the installation of safety elements are mandatory. The hood pin is an essential security element and must be installed.

THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.

PARTS REQUIRED (NOT INCLUDED) |


1x **FLASH LINK UPDATER,**
1x **FLASH LINK MANAGER**
SOFTWARE | PROGRAMME
1x Microsoft Windows Computer with Internet connection

OR


1x **FLASH LINK MOBILE**
1x **FLASH LINK MOBILE APP**
Smartphone *Android* or *iOS* with Internet connection (*provider charges may apply*).
1x

MANDATORY

HOOD PIN



REMOTE START SAFETY OVERRIDE SWITCH

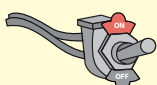
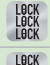






VALET SWITCH


Part #: RSPB available, Sold separately.

Notice: the installation of safety elements are mandatory. The hood pin and the valet switch are essential security elements and must be installed.


STAND ALONE CONFIGURATION |

	Program bypass option	UNIT OPTION	DESCRIPTION
	OEM Remote Stand Alone Remote Starter:	D1.10 	By default, LOCK, LOCK, LOCK
		D1.1 	Par défaut, VERROUILLE, VERROUILLE, VERROUILLE
	Program bypass option with oem remote:	C1	OEM Remote Monitoring
	Program bypass option with RF KIT antenna:	H1 to H6	Supported RF Kits and select RF Kit
	Program bypass option Vehicle hybrid only:	D4	Hybrid mode (Vehicle hybrid only)


REMOTE STARTER FUNCTIONALITY |




All doors must be closed.

3X 

Press the OEM remote's Lock button 3x to remote-start (or remote-stop) the vehicle.



START 

The vehicle will START.

REMOTE STARTER DIAGNOSTICS

MODULE RED LED


x2 flash : Brake ON

x3 flash : No tach

x4 flash : Ignition before start


x5 flash : Hood Open

REMOTE STARTER WARNING CARD |



CUT THIS WARNING CARD AND STICK IT ON A VISIBLE PLACE:
or use the package RSPB, Sold separately.

WARNING

 **REMOTE STARTER**

THE VEHICLE CAN BE STARTED BY EITHER: PRESSING THE LOCK BUTTON ON THE OEM REMOTE 3 TIMES CONSECUTIVELY OR BY A SMARTPHONE. **TURN ON** THE SAFETY SWITCH LOCATED UNDER THE DASHBOARD BEFORE WORKING ON THE VEHICLE.

DESCRIPTION |

Parts required (Not included) **PAGE**

WIRE TO WIRE DIAGRAM

AUTOMATIC TRANSMISSION	1x 7.5 Amp. fuse	1x Fusible 7.5 Amp.	Page 3
------------------------	------------------	---------------------	--------



THARNESS DIAGRAM

THARNESS THAR-FOR3 AUTOMATIC TRANSMISSION	1x THAR-FOR3	1x THAR-FOR3	Page 4
---	--------------	--------------	--------




② Parking Lights switch


① Gateway module, located at right of steering column.

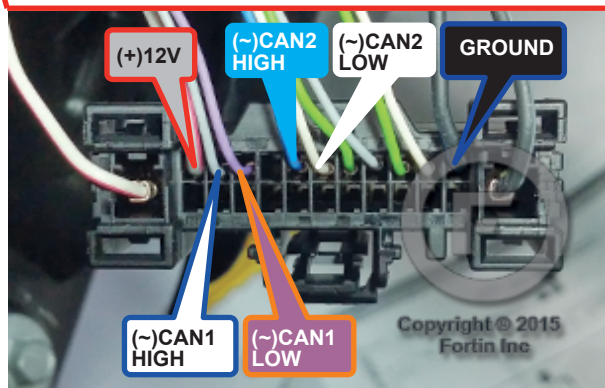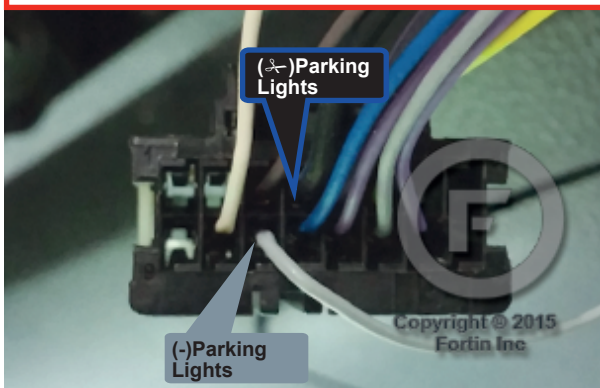

AUTOMATIC TRANSMISSION WIRING CONNECTION |

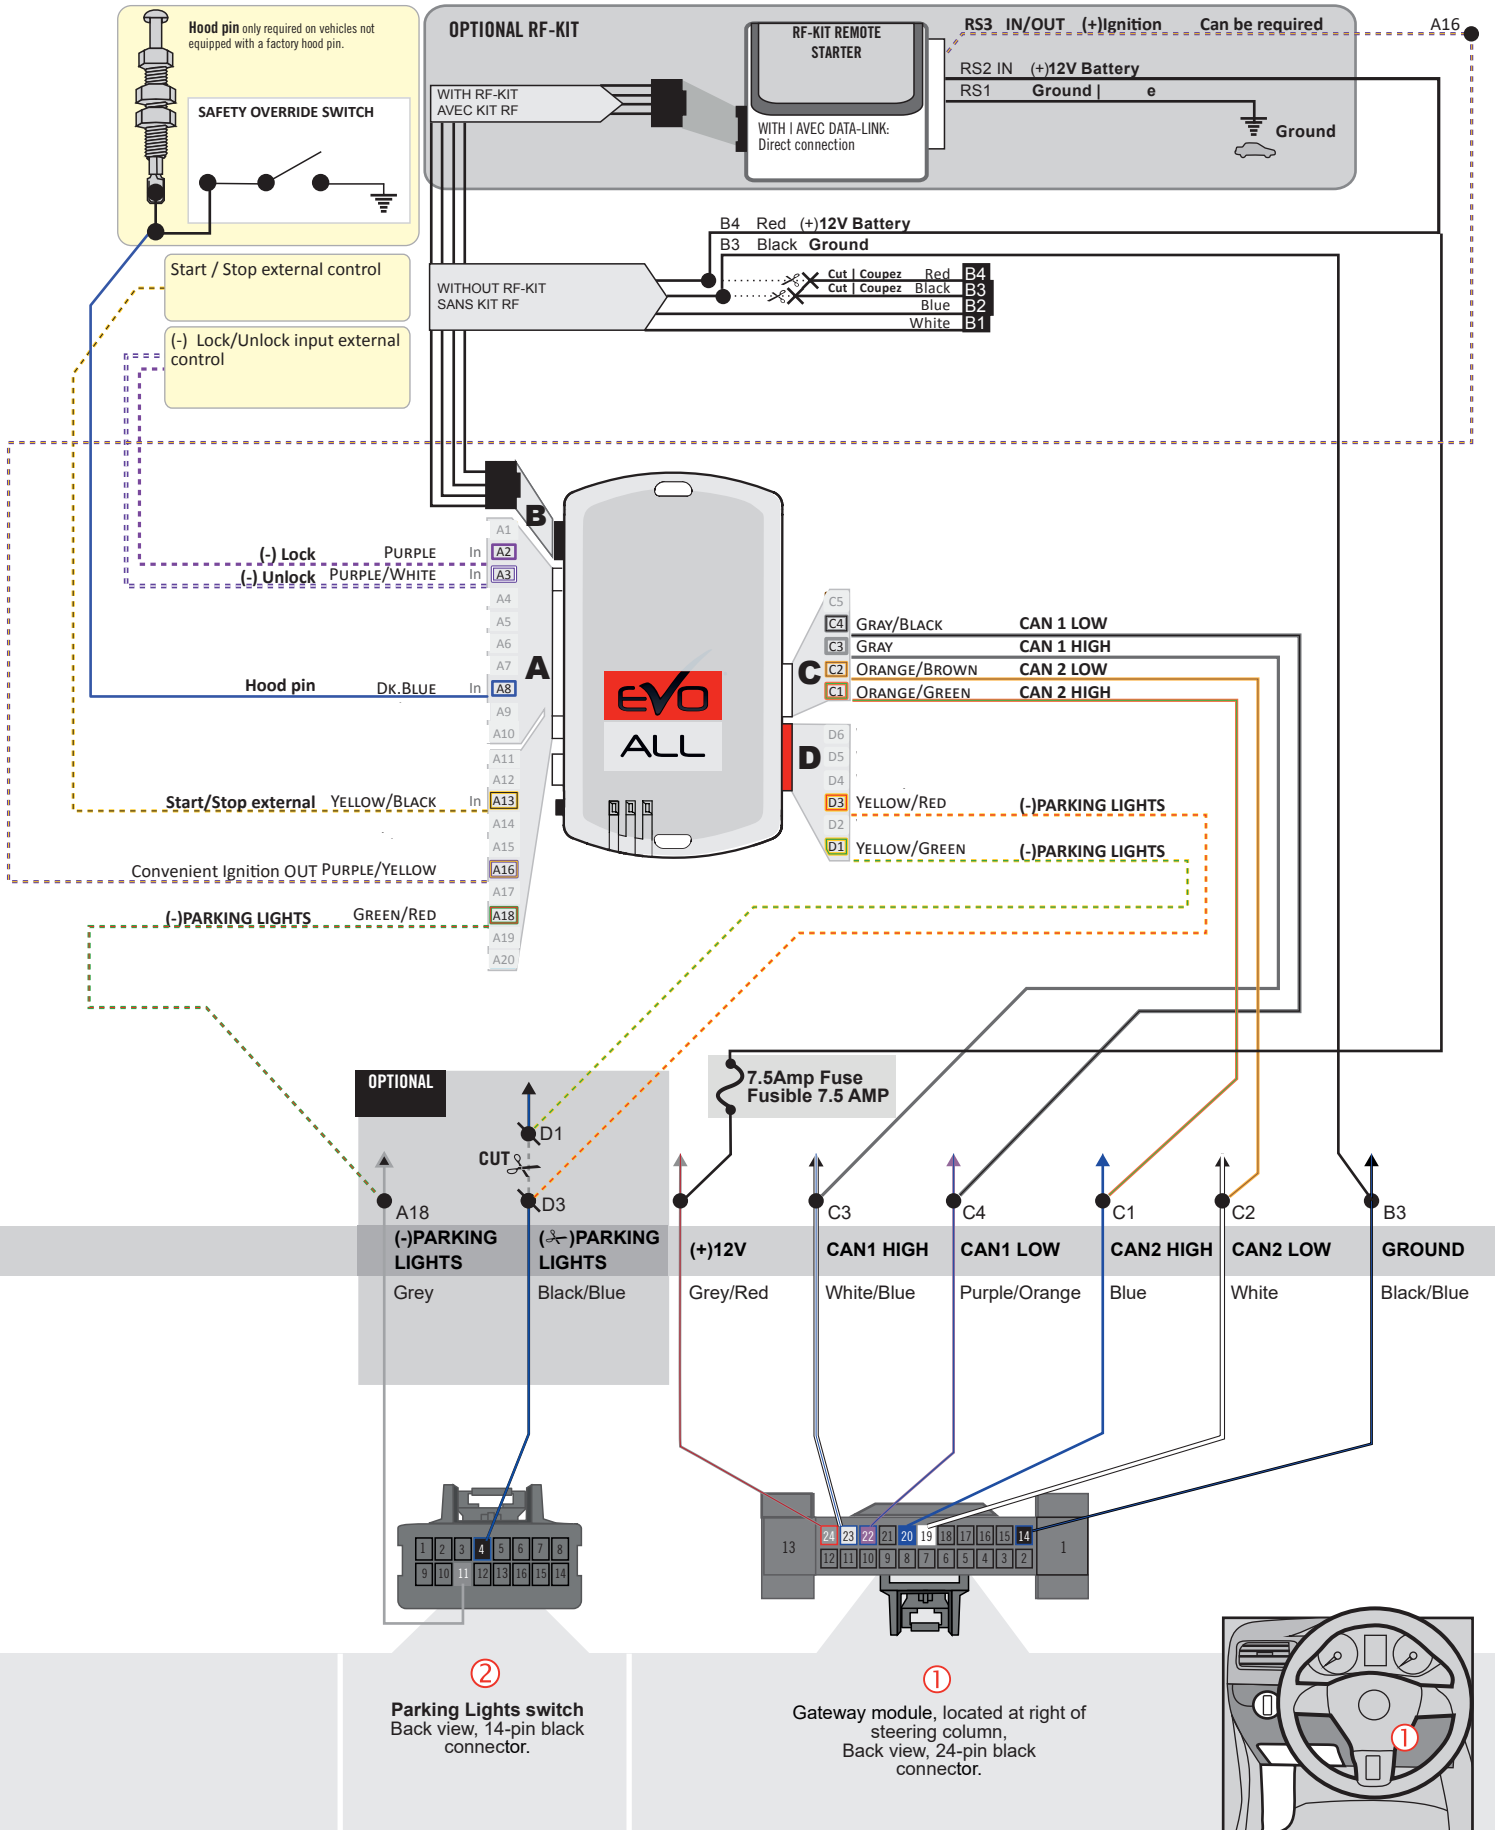

THAR-FOR3 | T-HARNESS - AUTOMATIC TRANSMISSION |

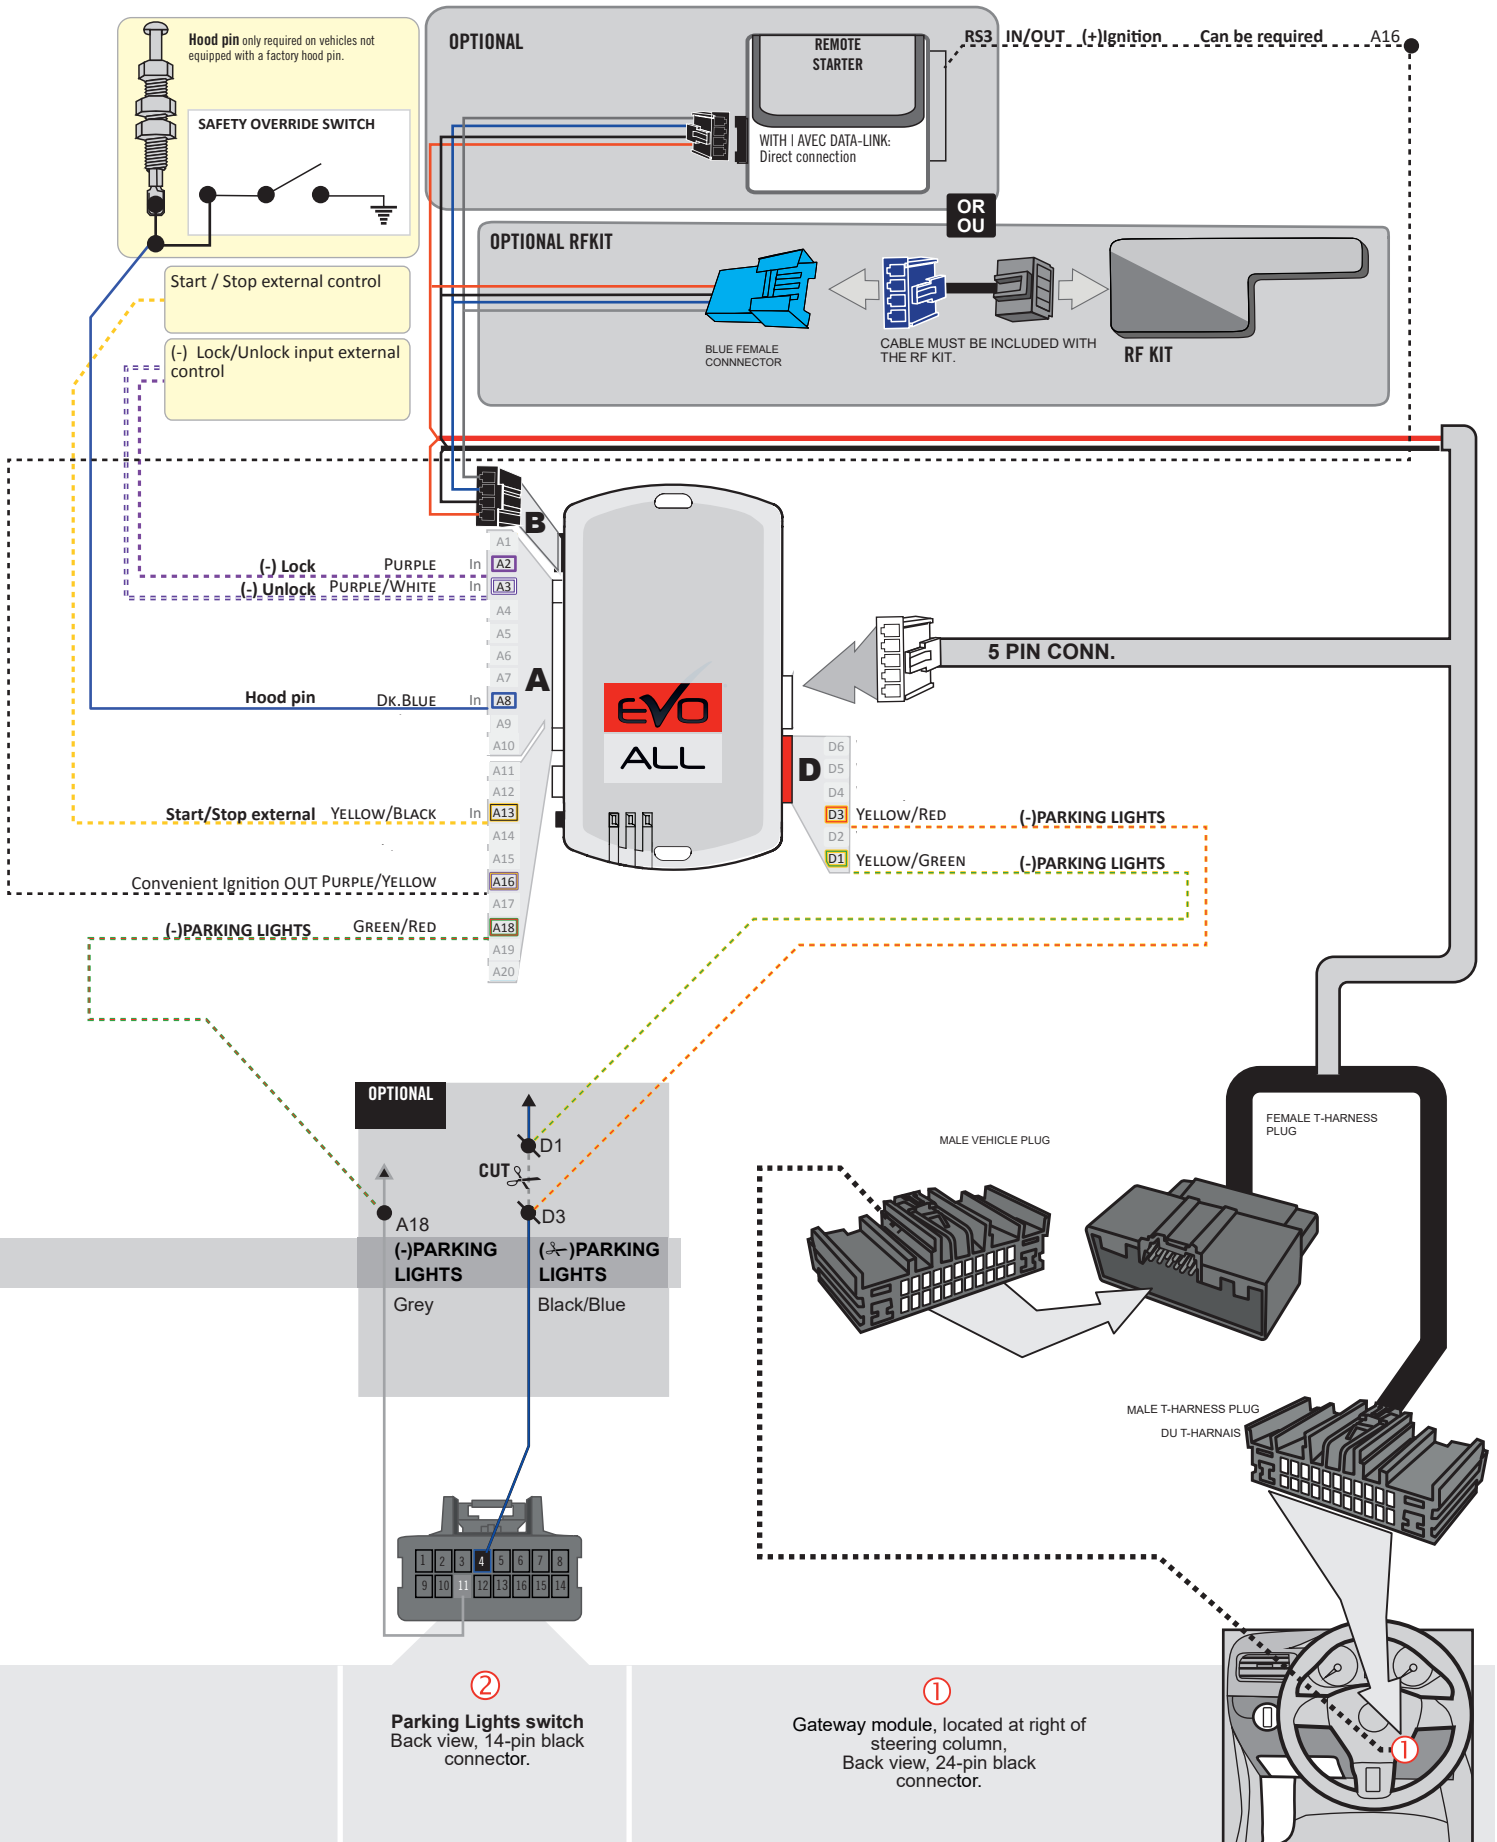



Parts required (not included)


- 1x FLASH LINK UPDATER, SOFTWARE | PROGRAMME
- 1x FLASH LINK MANAGER
- 1x Microsoft Windows Computer with Internet connection

OR

- 1x FLASH LINK MOBILE
- 1x FLASH LINK MOBILE APP
- Smartphone Android or iOS with Internet connection (Internet provider charges may apply)

BEFORE PROGRAMMING SET THE UNIT OPTIONS AND SAVE.


1

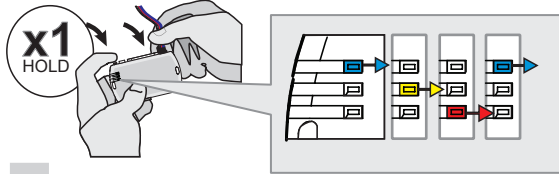

Press and hold the programming button:
Insert the 4-Pin (Data-Link) connector.


↳ The Blue, Red, Yellow and Blue & Red LEDs will alternatively illuminate.

2

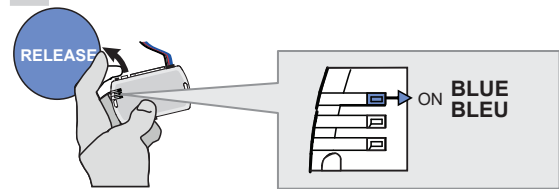


Release the programming button when the LED is BLUE.

 If the LED is not solid BLUE disconnect the 4-Pin connector (Data-Link) and go back to step 1.




3

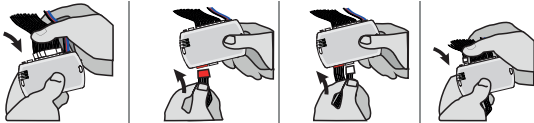

Insert the required remaining connectors.

4

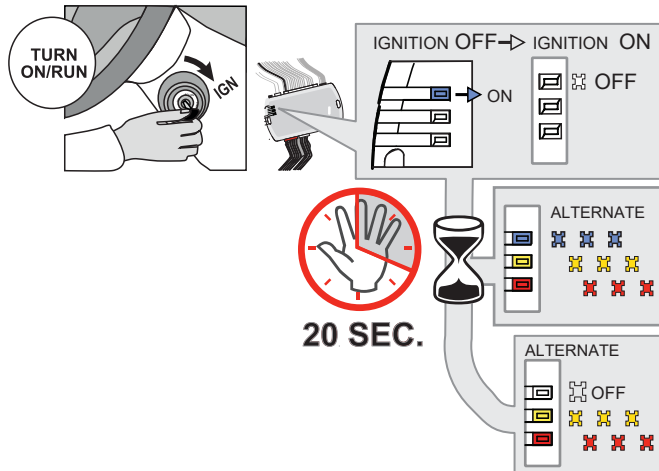

Turn the key to the Ignition ON/RUN position.

 
↳ The BLUE LED will turn OFF.

↳ The BLUE, YELLOW and RED LEDs will alternate.


Wait, at least 20 seconds, do not disconnect the modules or turn off the ignition.

↳ The RED and YELLOW LEDs will alternate.

Make sure that the DELs are flashing RED and YELLOW before continuing programming.



5

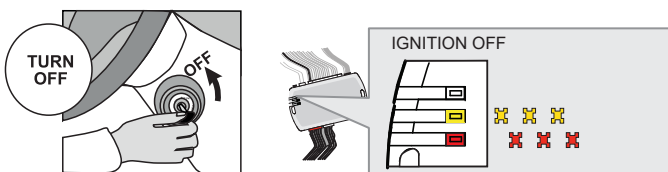


Turn the key to the OFF position.

↳ The RED and YELLOW LEDs alternate.


KEY BYPASS PROGRAMMING PROCEDURE 2/2 |

6

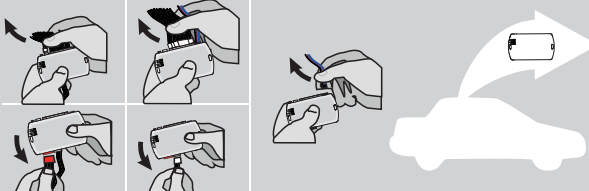

Disconnect all the connectors and after the Data-Link (4-pins) connector.

7



Microsoft Windows Computer with Internet connection*

FLASH LINK UPDATER* **FLASH LINK MANAGER***
SOFTWARE | PROGRAMME

OR


Smartphone* (Internet provider charges may apply)

VEHICLE'S OBDII CONNECTOR **FLASH LINK MOBILE***


Use the tool: FLASH LINK UPDATER or FLASH LINK MOBILE to visit the DCryptor menu.

*Parts required (not included)

8

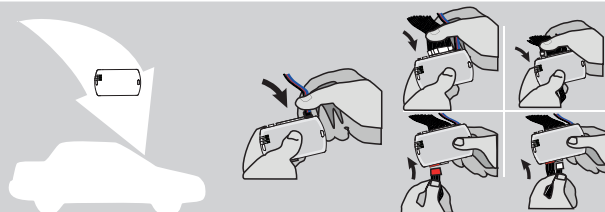


AFTER DCRYPTOR PROGRAMMING COMPLETED
Go back to the vehicle and reconnect the 4-Pin (Data-Link) connector and after, all the remaining connector.

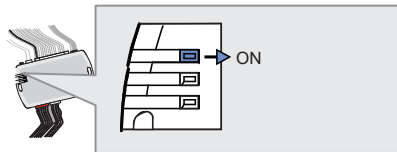

↳ The BLUE LED will turn ON.

9

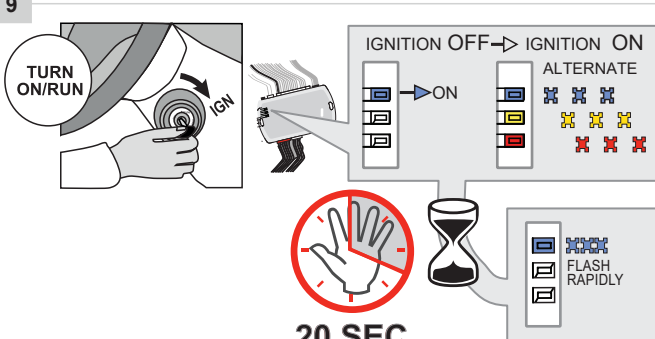

TURN ON/RUN

IGNITION OFF → IGNITION ON

ALTERNATE

ON

FLASH RAPIDLY

20 SEC.


Turn the key to the Ignition ON/RUN position.

↳ The RED and YELLOW LEDs will turn ON.

Wait, at least 20 seconds, do not disconnect the modules or turn off the ignition.

↳ The BLUE LED will flash rapidly.

10

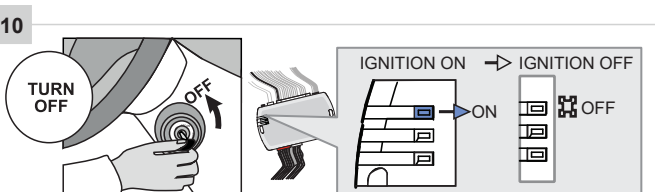

TURN OFF

IGNITION ON → IGNITION OFF

ON

OFF

Turn the key to the OFF position.

↳ The BLUE will turn OFF.



The module is now programmed.


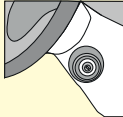
OPTIONAL RF-KIT PROGRAMMING |

PROGRAM BYPASS OPTION



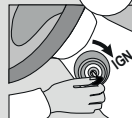




 
 
 
 

 
 
 
 
 
 
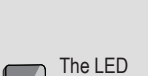
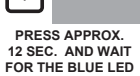
 
 
 
 
 
 
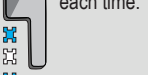

 

 
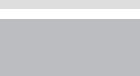
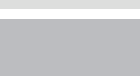
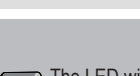
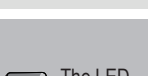
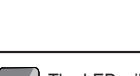
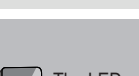

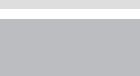
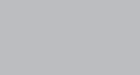
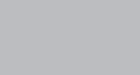
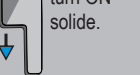
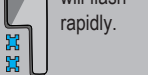
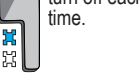
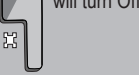
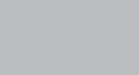
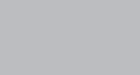

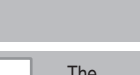
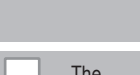



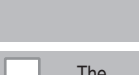
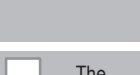
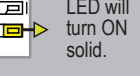
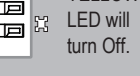
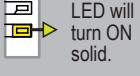
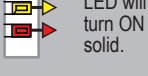
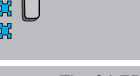
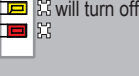
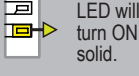
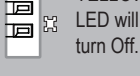
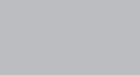
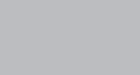
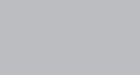
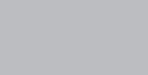
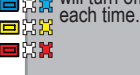
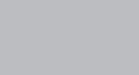
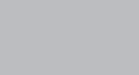
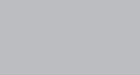
	<p>Program bypass option:</p>	<p>H2</p>	<p><input checked="" type="checkbox"/> Supported RF-KITS enable <input checked="" type="checkbox"/> H2 Fortin 2</p>
---	-------------------------------	------------------	---

OPTIONAL FORTIN RF KIT SERIES 4 OR SERIES 9 PROGRAMMING

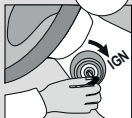The module must be programmed on the vehicle.

MAKE SURE THE IGNITION KEY HAS BEEN IN THE OFF POSITION FOR AT LEAST 5 SECONDS.

<p>1</p> <p>ON TURN ON/RUN</p> 	<p>2</p> <p>OFF TURN OFF</p> 	<p>3</p> <p>ON TURN ON/RUN</p> 	<p>4</p> <p>4X BRAKES</p> <p>x4 PRESS</p> 	<p>5</p> <p>ON EACH TRANSMITTER</p> <p>4 BUTTONS</p> <p>[-] PRESS AND RELEASE</p> <p>[+] PRESS AND RELEASE</p> <p>1 BUTTON</p> <p>PRESS APPROX. 12 SEC. AND WAIT FOR THE BLUE LED TO TURN OFF THEN BACK ON SOLID THEN RELEASE.</p>	<p>6</p> <p>OFF TURN OFF</p> 	<p>7</p> <p>ON TURN ON/RUN</p> 	<p>8</p> <p>OFF TURN OFF</p> 
<p>Turn the key to the ON/RUN position.</p>	<p>Turn the ignition to the OFF position.</p>	<p>Turn the key to the ON/RUN position.</p>	<p>Press and release the brake pedal four times.</p>	<p>The LED will turn off each time.</p>	<p>Turn the ignition to the OFF position.</p>	<p>Turn the key to the ON/RUN position and leave it ON for 5 sec.</p>	<p>Turn the ignition to the OFF position.</p>
 <p>The YELLOW LED will turn ON solid.</p>	 <p>The YELLOW LED will turn Off.</p>	 <p>The LED will turn ON solide.</p>	 <p>The LED will flash rapidly.</p>	 <p>The LED will turn off each time.</p>	 <p>The LED will turn Off.</p>	 <p>The LED will turn off.</p>	 <p>The LED will flash rapidly.</p>
 <p>The YELLOW LED will turn ON solid.</p>	 <p>The YELLOW LED will turn Off.</p>	 <p>The LED will turn ON solide.</p>	 <p>The LED will flash rapidly.</p>	 <p>The LED will turn off each time.</p>	 <p>The LED will turn Off.</p>	 <p>The LED will turn off.</p>	 <p>The LED will flash rapidly.</p>
 <p>The YELLOW LED will turn ON solid.</p>	 <p>The YELLOW LED will turn Off.</p>	 <p>The LED will turn ON solide.</p>	 <p>The LED will flash rapidly.</p>	 <p>The LED will turn off each time.</p>	 <p>The LED will turn Off.</p>	 <p>The LED will turn off.</p>	 <p>The LED will flash rapidly.</p>
 <p>The YELLOW LED will turn ON solid.</p>	 <p>The YELLOW LED will turn Off.</p>	 <p>The LED will turn ON solide.</p>	 <p>The LED will flash rapidly.</p>	 <p>The LED will turn off each time.</p>	 <p>The LED will turn Off.</p>	 <p>The LED will turn off.</p>	 <p>The LED will flash rapidly.</p>
 <p>The YELLOW LED will turn ON solid.</p>	 <p>The YELLOW LED will turn Off.</p>	 <p>The LED will turn ON solide.</p>	 <p>The LED will flash rapidly.</p>	 <p>The LED will turn off each time.</p>	 <p>The LED will turn Off.</p>	 <p>The LED will turn off.</p>	 <p>The LED will flash rapidly.</p>
 <p>The YELLOW LED will turn ON solid.</p>	 <p>The YELLOW LED will turn Off.</p>	 <p>The LED will turn ON solide.</p>	 <p>The LED will flash rapidly.</p>	 <p>The LED will turn off each time.</p>	 <p>The LED will turn Off.</p>	 <p>The LED will turn off.</p>	 <p>The LED will flash rapidly.</p>
 <p>The YELLOW LED will turn ON solid.</p>	 <p>The YELLOW LED will turn Off.</p>	 <p>The LED will turn ON solide.</p>	 <p>The LED will flash rapidly.</p>	 <p>The LED will turn off each time.</p>	 <p>The LED will turn Off.</p>	 <p>The LED will turn off.</p>	 <p>The LED will flash rapidly.</p>
 <p>The YELLOW LED will turn ON solid.</p>	 <p>The YELLOW LED will turn Off.</p>	 <p>The LED will turn ON solide.</p>	 <p>The LED will flash rapidly.</p>	 <p>The LED will turn off each time.</p>	 <p>The LED will turn Off.</p>	 <p>The LED will turn off.</p>	 <p>The LED will flash rapidly.</p>



REMOTE STARTER FUNCTIONALITY |



All doors must be closed.



Remote start the vehicle.



Unlock the doors with the remote-starter remote or the OEM remote.



Insert and Turn the key to the Ignition ON/RUN position.



Press the brake pedal.



The vehicle can now be put in to gear and driven.

STANDALONE & THAR-FOR3 INSTALLATION

ADDENDUM - SUGGESTED WIRING CONFIGURATION



ONLY COMPATIBLE WITH AUTOMATIC TRANSMISSION VEHICLES.



Vehicle functions supported in this diagram (functional if equipped)

VEHICLE	YEARS	Immobilizer bypass	T-Harness available (sold separately)	Lock	Unlock	Arm	Disarm	Heated Seats**	Rear Defrost**	RAP Disable	Parking Lights***	Tachometer	Door Status	Trunk Status	Hood Status*	Hand-Brake Status	Foot-Brake Status	Active OEM Remote Start	
FORD																			
Edge	Push-to-Start 2020	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•

COMPATIBLE MODULE REQUIRED:

2019

QR CODE ON THE LABEL

MANUFACTURED AFTER: 2019

FIRMWARE VERSION

58.[02]

MINIMUM

To add the firmware version and the options, use the **FLASH LINK UPDATER** or **FLASH LINK MOBILE** tool, sold separately.

UNIT OPTION	DESCRIPTION
C1	OEM Remote status (Lock/Unlock) monitoring
D6	Push-to-Start
A11	OFF Hood trigger (Output Status).

IF THE VEHICLE IS NOT EQUIPPED WITH FUNCTIONAL HOOD PIN:

NOTES

The vehicles OEM remote and SmartKey are still operable during remote start.

**Heated seats The heated seats and rear defrost activate automatically when it cold.

**Rear Defrost

***Parking Lights The parking Lights at remote start only.

MANDATORY INSTALL

*HOOD PIN HOOD STATUS: THE HOOD PIN SWITCH MUST BE INSTALLED IF THE VEHICLE CAN BE REMOTE STARTED WITH THE HOOD OPEN, SET FUNCTION A11 TO OFF.

DE CAPOT

A11 **OFF**

Notice: the installation of safety elements are mandatory. The hood pin is an essential security element and must be installed.

THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.

PARTS REQUIRED (NOT INCLUDED) |


1x **FLASH LINK UPDATER,**
1x **FLASH LINK MANAGER**
SOFTWARE | PROGRAMME
1x Microsoft Windows Computer with Internet connection

OR


1x **FLASH LINK MOBILE**
1x **FLASH LINK MOBILE APP**
Smartphone *Android* or *iOS* with Internet connection (*provider charges may apply*).
1x

MANDATORY

HOOD PIN



REMOTE START SAFETY OVERRIDE SWITCH

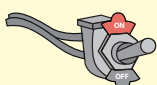
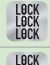






VALET SWITCH


Part #: RSPB available, Sold separately.

Notice: the installation of safety elements are mandatory. The hood pin and the valet switch are essential security elements and must be installed.


STAND ALONE CONFIGURATION |

	Program bypass option	UNIT OPTION	DESCRIPTION
	OEM Remote Stand Alone Remote Starter:	D1.10 	By default, LOCK, LOCK, LOCK
		D1.1 	Par défaut, VERROUILLE, VERROUILLE, VERROUILLE
	Program bypass option with oem remote:	C1	OEM Remote Monitoring
	Program bypass option with RF KIT antenna:	H1 to H6	Supported RF Kits and select RF Kit
	Program bypass option Vehicle hybrid only:	D4	Hybrid mode (Vehicle hybrid only)


REMOTE STARTER FUNCTIONALITY |




All doors must be closed.

3X 

Press the OEM remote's Lock button 3x to remote-start (or remote-stop) the vehicle.



START 

The vehicle will START.

REMOTE STARTER DIAGNOSTICS

MODULE RED LED


x2 flash : Brake ON

x3 flash : No tach

x4 flash : Ignition before start


x5 flash : Hood Open

REMOTE STARTER WARNING CARD |



CUT THIS WARNING CARD AND STICK IT ON A VISIBLE PLACE:
or use the package RSPB, Sold separately.

WARNING



REMOTE STARTER

THE VEHICLE CAN BE STARTED BY EITHER: PRESSING THE LOCK BUTTON ON THE OEM REMOTE 3 TIMES CONSECUTIVELY OR BY A SMARTPHONE. **TURN ON** THE SAFETY SWITCH LOCATED UNDER THE DASHBOARD BEFORE WORKING ON THE VEHICLE.

DESCRIPTION |

Parts required (Not included) **PAGE**

WIRE TO WIRE DIAGRAM

AUTOMATIC TRANSMISSION	1x 7.5 Amp. fuse	1x Fusible 7.5 Amp.	Page 3
------------------------	------------------	---------------------	--------



THARNESSE DIAGRAM

THARNESSE THAR-FOR3 AUTOMATIC TRANSMISSION	1x THAR-FOR3	1x THAR-FOR3	Page 4
--	--------------	--------------	--------




② Parking Lights switch


① Gateway module, located at right of steering column.

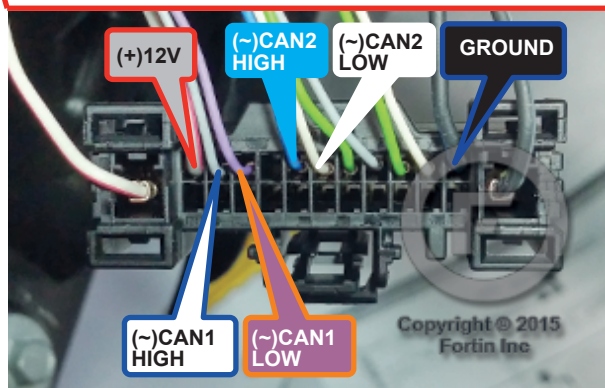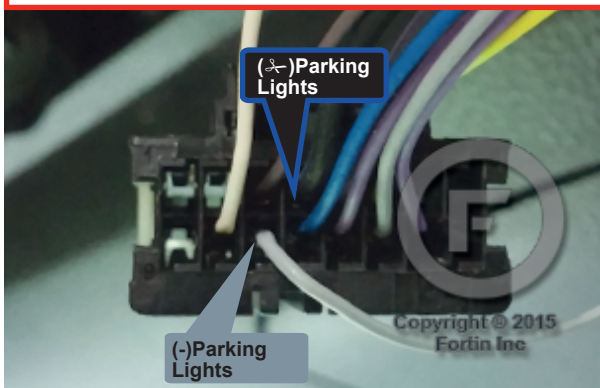

AUTOMATIC TRANSMISSION WIRING CONNECTION |

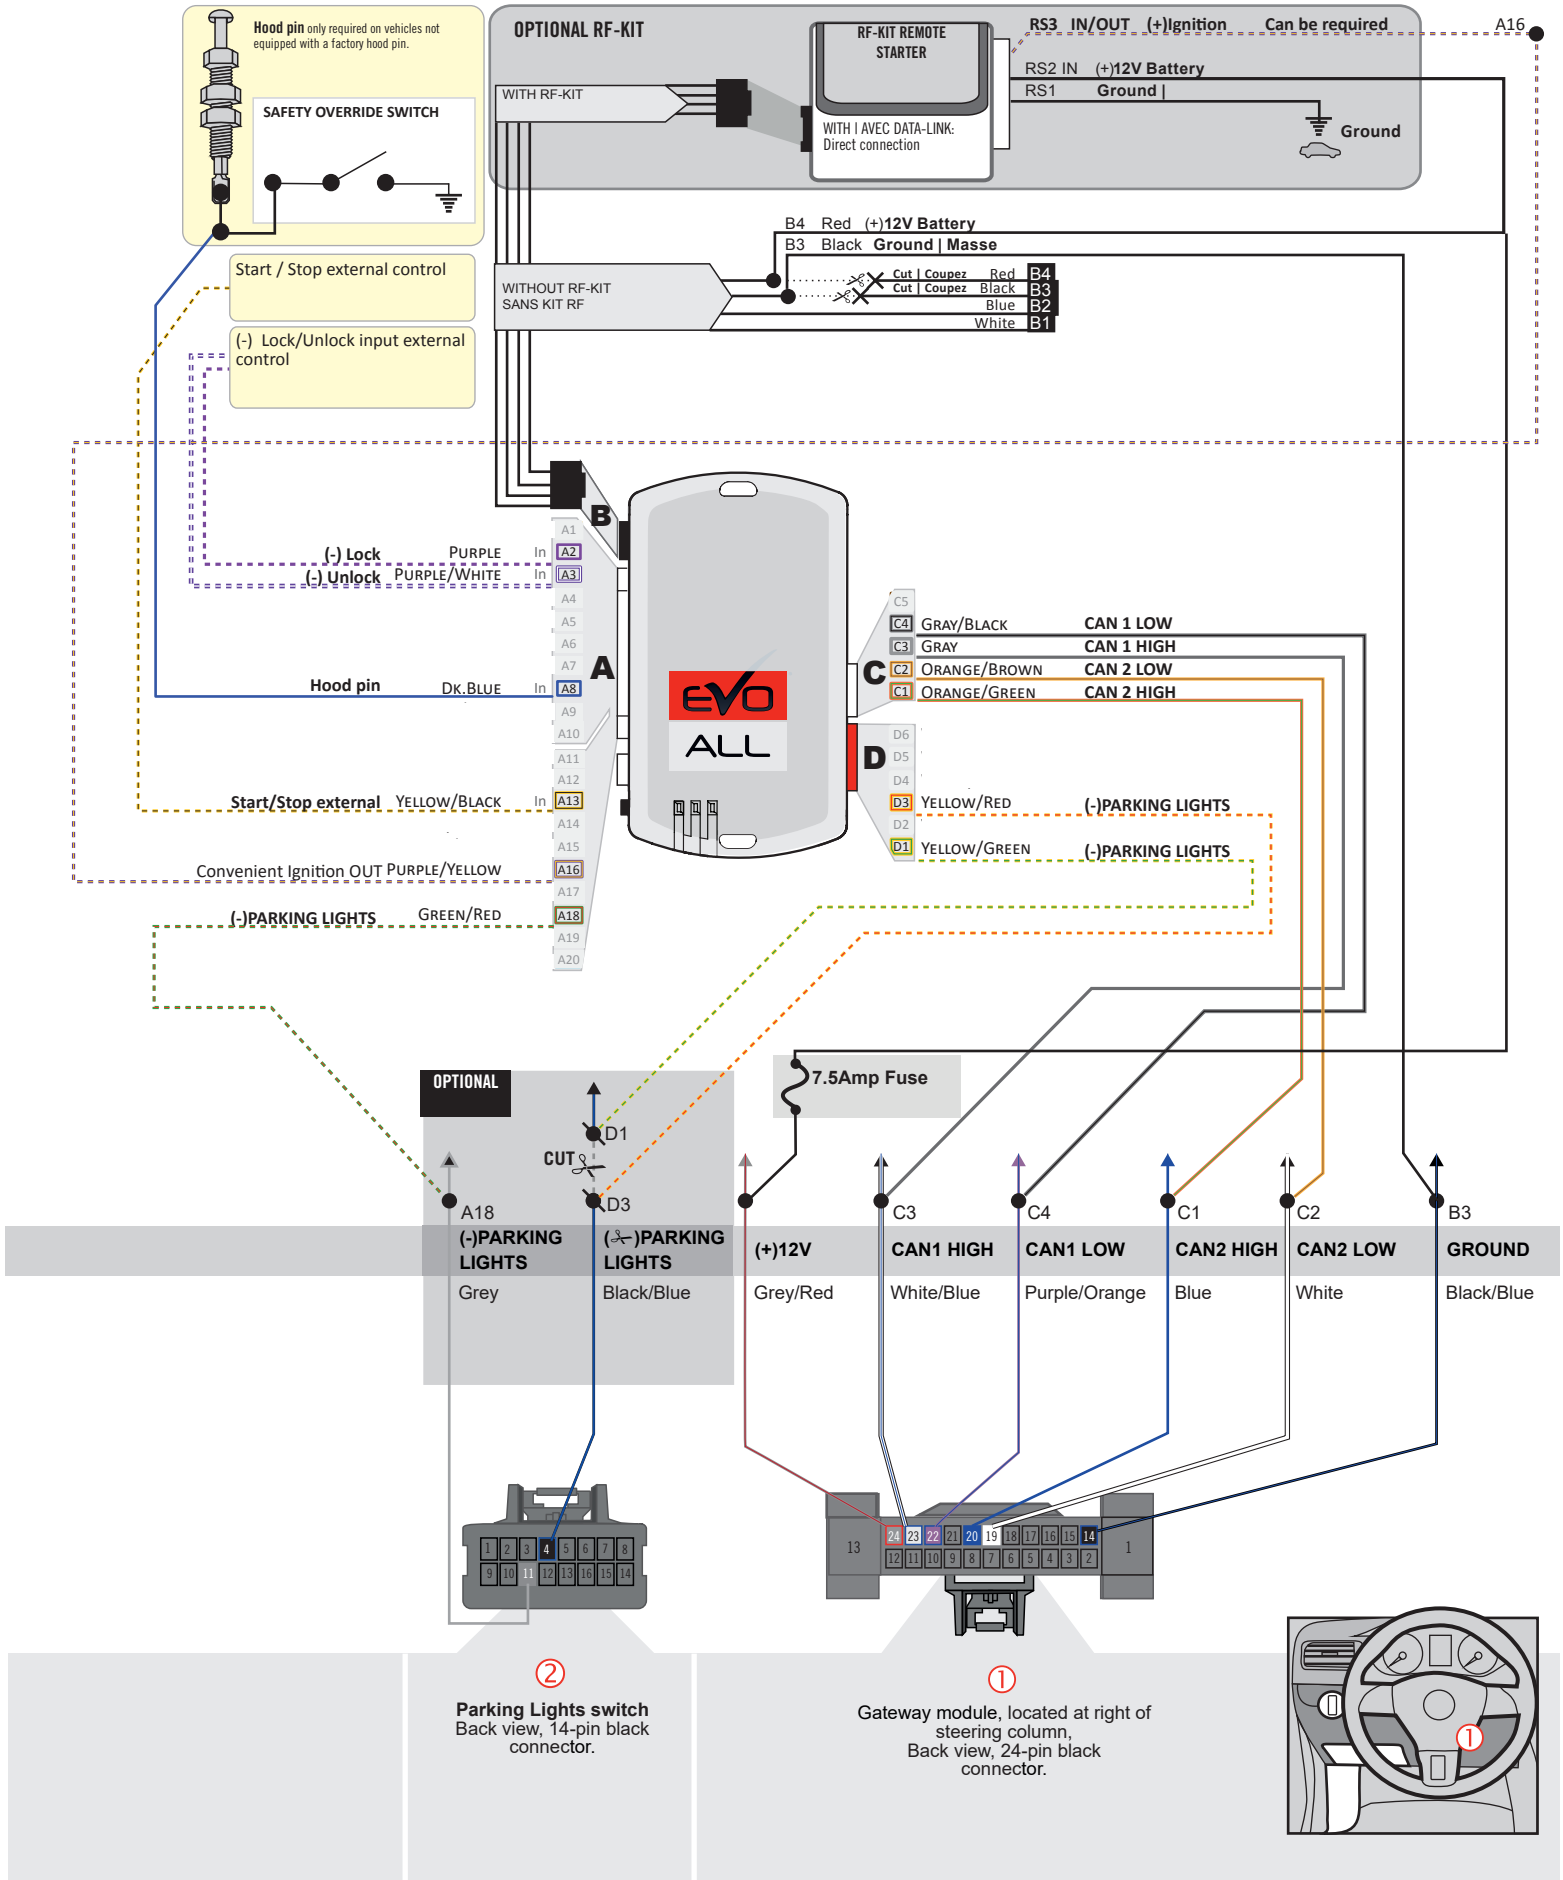

THAR-FOR3 | T-HARNESS - AUTOMATIC TRANSMISSION |

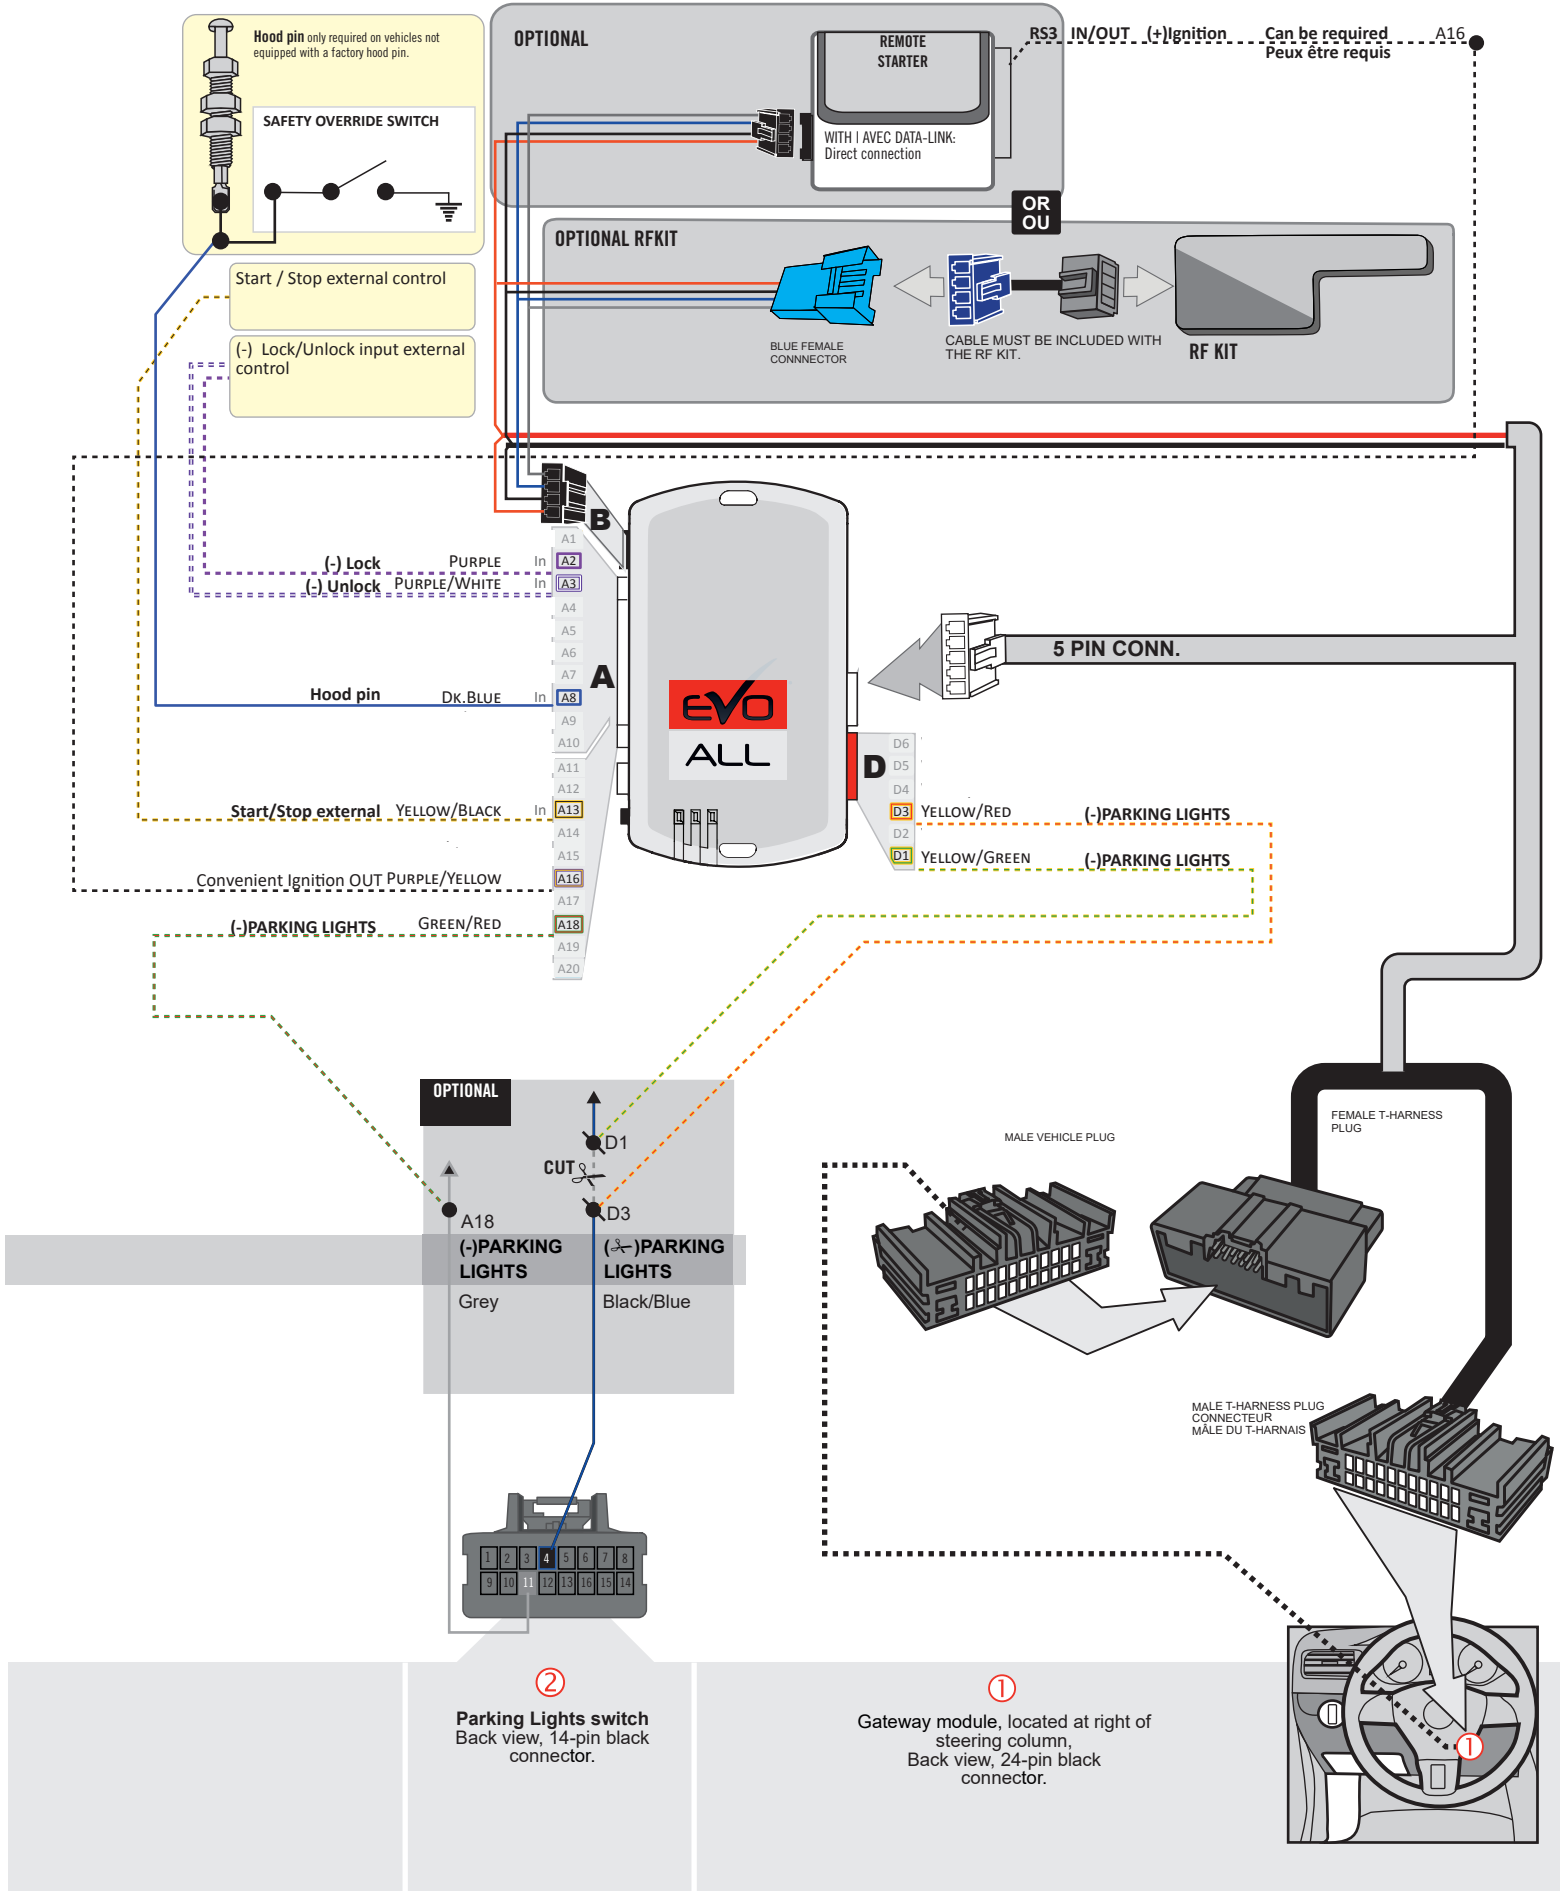



Parts required (not included)


- 1x FLASH LINK UPDATER, SOFTWARE | PROGRAMME
- 1x FLASH LINK MANAGER
- 1x Microsoft Windows Computer with Internet connection

OR

- 1x FLASH LINK MOBILE
- 1x FLASH LINK MOBILE APP
- Smartphone Android or iOS with Internet connection (Internet provider charges may apply)

BEFORE PROGRAMMING SET THE UNIT OPTIONS AND SAVE.


1

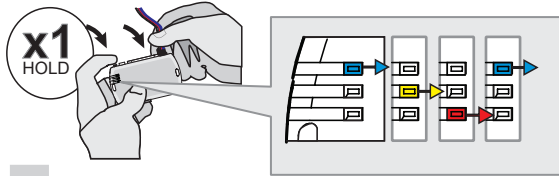

Press and hold the programming button:
Insert the 4-Pin (Data-Link) connector.

↳ The Blue, Red, Yellow and Blue & Red LEDs will alternatively illuminate.


2

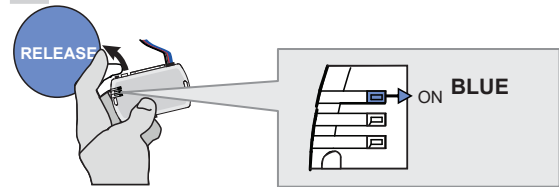

Release the programming button when the LED is BLUE.


If the LED is not solid BLUE disconnect the 4-Pin connector (Data-Link) and go back to step 1.

3

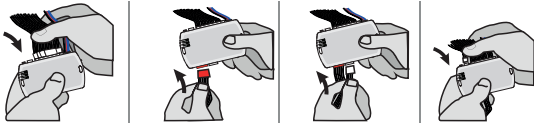

Insert the required remaining connectors.

4

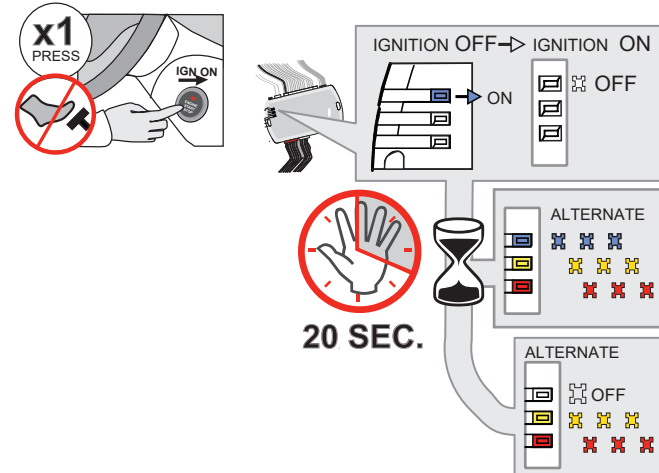

Do not press the brake pedal.
Press the Push-to-Start button once to turn on the ignition.

 
↳ The BLUE LED will turn OFF.

↳ The BLUE, YELLOW and RED LEDs will alternate.


Wait, at least 20 seconds, do not disconnect the modules or turn off the ignition.

↳ The RED and YELLOW LEDs will alternate.

Make sure that the DELs are flashing RED and YELLOW before continuing programming.



5

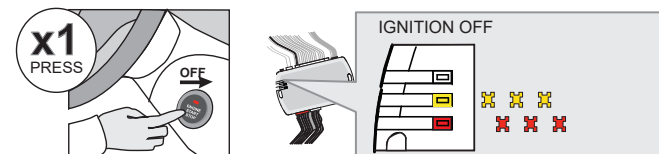

Press the Push-to-Start button once to turn off the ignition.

↳ The RED and YELLOW LEDs alternate.

KEY BYPASS PROGRAMMING PROCEDURE 2/2 |

6

Disconnect all the connectors and after the Data-Link (4-pins) connector.

7

Microsoft Windows Computer with Internet connection*

FLASH LINK UPDATER* **FLASH LINK MANAGER***
SOFTWARE | PROGRAMME

OR

Smartphone*
(Internet provider charges may apply)

FLASH LINK MOBILE*


VEHICLE'S OBDII CONNECTOR

Use the tool: FLASH LINK UPDATER or FLASH LINK MOBILE to visit the DCryptor menu.

*Parts required (not included)

8

AFTER DCRYPTOR PROGRAMMING COMPLETED
Go back to the vehicle and reconnect the 4-Pin (Data-Link) connector and after, all the remaining connector.

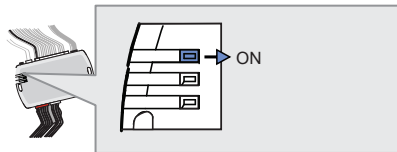

↳ The BLUE LED will turn ON.

9

x1 PRESS (with a 'no brake' symbol)

IGNITION OFF → IGNITION ON

ALTERNATE

↳ The RED and YELLOW LEDs will turn ON.

Wait, at least 20 seconds, do not disconnect the modules or turn off the ignition.

↳ The BLUE LED will flash rapidly.

20 SEC.

FLASH RAPIDLY

10

x1 PRESS

IGNITION ON → IGNITION OFF

OFF

↳ The BLUE will turn OFF.

The module is now programmed.

OPTIONAL RF-KIT PROGRAMMING |

PROGRAM BYPASS OPTION



Program bypass option:

H2

Supported RF-KITS enable

H2 Fortin 2

OPTIONAL FORTIN RF KIT SERIES 4 OR SERIES 9 PROGRAMMING



The module must be programmed on the vehicle.





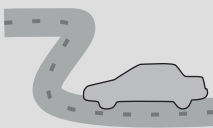


MAKE SURE THE IGNITION KEY HAS BEEN IN THE OFF POSITION FOR AT LEAST 5 SECONDS.

<p>1</p> <p>ON x1 PRESS</p> <p>Do not press the brake pedal. Press the Push-to-Start button once to turn on the ignition.</p>	<p>2</p> <p>OFF x1 PRESS</p> <p>Press the Push-to-Start button once to turn off the ignition.</p>	<p>3</p> <p>ON x1 PRESS</p> <p>Do not press the brake pedal. Press the Push-to-Start button once to turn on the ignition.</p>	<p>4</p> <p>4X BRAKES</p> <p>x4 PRESS</p> <p>Press and release the brake pedal four times.</p>	<p>5</p> <p>ON EACH TRANSMITTER</p> <p>4 BUTTONS</p> <p>[-] PRESS AND RELEASE</p> <p>→ PRESS AND RELEASE</p> <p>1 BUTTON 1 BOUTON</p> <p>PRESS APPROX. 12 SEC. AND WAIT FOR THE BLUE LED TO TURN OFF THEN BACK ON SOLID THEN RELEASE.</p>	<p>6</p> <p>OFF x1 PRESS</p> <p>Press the Push-to-Start button once to turn off the ignition.</p>	<p>7</p> <p>ON x1 PRESS</p> <p>Do not press the brake pedal. Press the Push-to-Start button once to turn on the ignition and leave it ON for 5 sec..</p>	<p>8</p> <p>OFF x1 PRESS</p> <p>Press the Push-to-Start button once to turn off the ignition.</p>
<p>The YELLOW LED will turn ON solid.</p>	<p>The YELLOW LED will turn Off.</p>	<p>The LED will turn ON solide.</p>	<p>The LED will flash rapidly.</p>	<p>The LED will turn off each time.</p>	<p>The LED will turn Off.</p>	<p>The LED will turn Off.</p>	<p>The LED will turn Off.</p>
<p>The YELLOW LED will turn ON solid.</p>	<p>The YELLOW LED will turn Off.</p>	<p>The YELLOW LED will turn ON solid.</p>	<p>The 3 LED will turn ON solid.</p>	<p>The LED will flash rapidly. Le témoin clignotera rapidement.</p>	<p>The 3 LED will turn off.</p>	<p>The YELLOW LED will turn ON solid.</p>	<p>The YELLOW LED will turn Off.</p>



REMOTE STARTER FUNCTIONALITY |

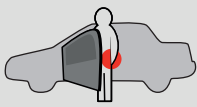 <p>Start</p> <p>All doors must be closed.</p> <p>Remote start the vehicle.</p>	 <p>UNLOCK</p> <p>Unlock the doors with either:</p> <ul style="list-style-type: none"> • The OEM remote • The remote-starter remote • Or the proximity remote 	 <p>Enter the vehicle with the SMART-KEY.</p>	 <p>DO NOT PRESS THE BRAKE PEDAL.</p> <p>Press and release the Push-to-Start button once.</p>	 <p>Press the brake pedal. The vehicle can now be put in to gear and driven.</p> <p>If the Smart-Key is not detected the vehicle will shut down.</p>
--	---	--	---	---

STANDALONE & THAR-FOR3 INSTALLATION


ADDENDUM - SUGGESTED WIRING CONFIGURATION



ONLY COMPATIBLE WITH AUTOMATIC TRANSMISSION VEHICLES.

Vehicle functions supported in this diagram (functional if equipped)

VEHICLE	YEARS	Immobilizer bypass	Lock	Unlock	Arm	Disarm	Heated Seats**	Rear Defrost**	RAP Disable	Parking Lights***	Tachometer	Door Status	Trunk Status	Hood Status*	Hand-Brake Status	Foot-Brake Status	Active OEM Remote Start
FORD Escape	Key 2020	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•

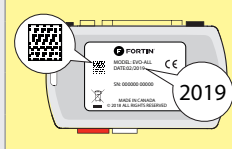

COMPATIBLE MODULE REQUIRED:

QR CODE ON THE LABEL
MANUFACTURED AFTER: 2019

FIRMWARE VERSION
58.[02]
MINIMUM

To add the firmware version and the options, use the **FLASH LINK UPDATER** or **FLASH LINK MOBILE** tool, sold separately.



Program bypass option:

UNIT OPTION

C1

DESCRIPTION

OEM Remote status (Lock/Unlock) monitoring

IF THE VEHICLE IS NOT EQUIPPED WITH FUNCTIONAL HOOD PIN:

A11

OFF

Hood trigger (Output Status).

NOTES

The vehicles OEM remote and SmartKey are still operable during remote start.

**Heated seats The heated seats and rear defrost activate automatically when it cold.

***Parking Lights The parking Lights at remote start only.



The vehicle must be equipped with the OEM remote with the door locks.

MANDATORY INSTALL

*HOOD PIN



HOOD STATUS: THE HOOD PIN SWITCH MUST BE INSTALLED IF THE VEHICLE CAN BE REMOTE STARTED WITH THE HOOD OPEN, SET FUNCTION A11 TO OFF.

A11

OFF

Notice: the installation of safety elements are mandatory. The hood pin is an essential security element and must be installed.

THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.


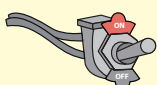
PARTS REQUIRED (NOT INCLUDED) |

1x **FLASH LINK UPDATER**
 1x **FLASH LINK MANAGER**
SOFTWARE | PROGRAMME
 1x Microsoft Windows Computer with Internet connection

OR

1x **FLASH LINK MOBILE**
 1x **FLASH LINK MOBILE APP**
Smartphone Android or iOS with Internet connection (provider charges may apply).

MANDATORY


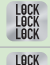




HOOD PIN  REMOTE START SAFETY OVERRIDE SWITCH 

VALET SWITCH


Part #: RSPB available, Sold separately.

Notice: the installation of safety elements are mandatory. The hood pin and the valet switch are essential security elements and must be installed.



STAND ALONE CONFIGURATION |

	Program bypass option	UNIT OPTION	DESCRIPTION
	OEM Remote Stand Alone Remote Starter:	D1.10  D1.1 	By default, LOCK, LOCK, LOCK Par défaut, VERROUILLE, VERROUILLE, VERROUILLE
	Program bypass option with oem remote:	C1	OEM Remote Monitoring
	Program bypass option with RF KIT antenna:	H1 to H6	Supported RF Kits and select RF Kit
	Program bypass option Vehicle hybrid only:	D4	Hybrid mode (Vehicle hybrid only)


REMOTE STARTER FUNCTIONALITY |



All doors must be closed.

3X  

Press the OEM remote's Lock button 3x to remote-start (or remote-stop) the vehicle.



The vehicle will START.

REMOTE STARTER DIAGNOSTICS

MODULE RED LED


x2 flash : Brake ON

x3 flash : No tach

x4 flash : Ignition before start


x5 flash : Hood Open

REMOTE STARTER WARNING CARD |



CUT THIS WARNING CARD AND STICK IT ON A VISIBLE PLACE:
 or use the package RSPB, Sold separately.

WARNING



REMOTE STARTER

THE VEHICLE CAN BE STARTED BY EITHER: PRESSING THE LOCK BUTTON ON THE OEM REMOTE 3 TIMES CONSECUTIVELY OR BY A SMARTPHONE. **TURN ON** THE SAFETY SWITCH LOCATED UNDER THE DASHBOARD BEFORE WORKING ON THE VEHICLE.

DESCRIPTION

	Parts required (Not included)	PAGE
--	-------------------------------	------

WIRE TO WIRE DIAGRAM


AUTOMATIC TRANSMISSION	1x 7.5 Amp. fuse	Page 3
------------------------	------------------	--------

THARNES DIAGRAM


THARNES THAR-FOR3 AUTOMATIC TRANSMISSION	1x THAR-FOR3	Page 4
--	--------------	--------



① Gateway module, Behind OBD-II connector

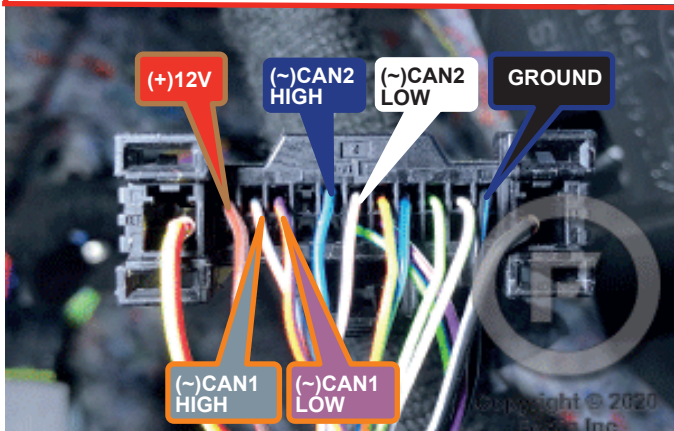


AUTOMATIC TRANSMISSION WIRING CONNECTION |


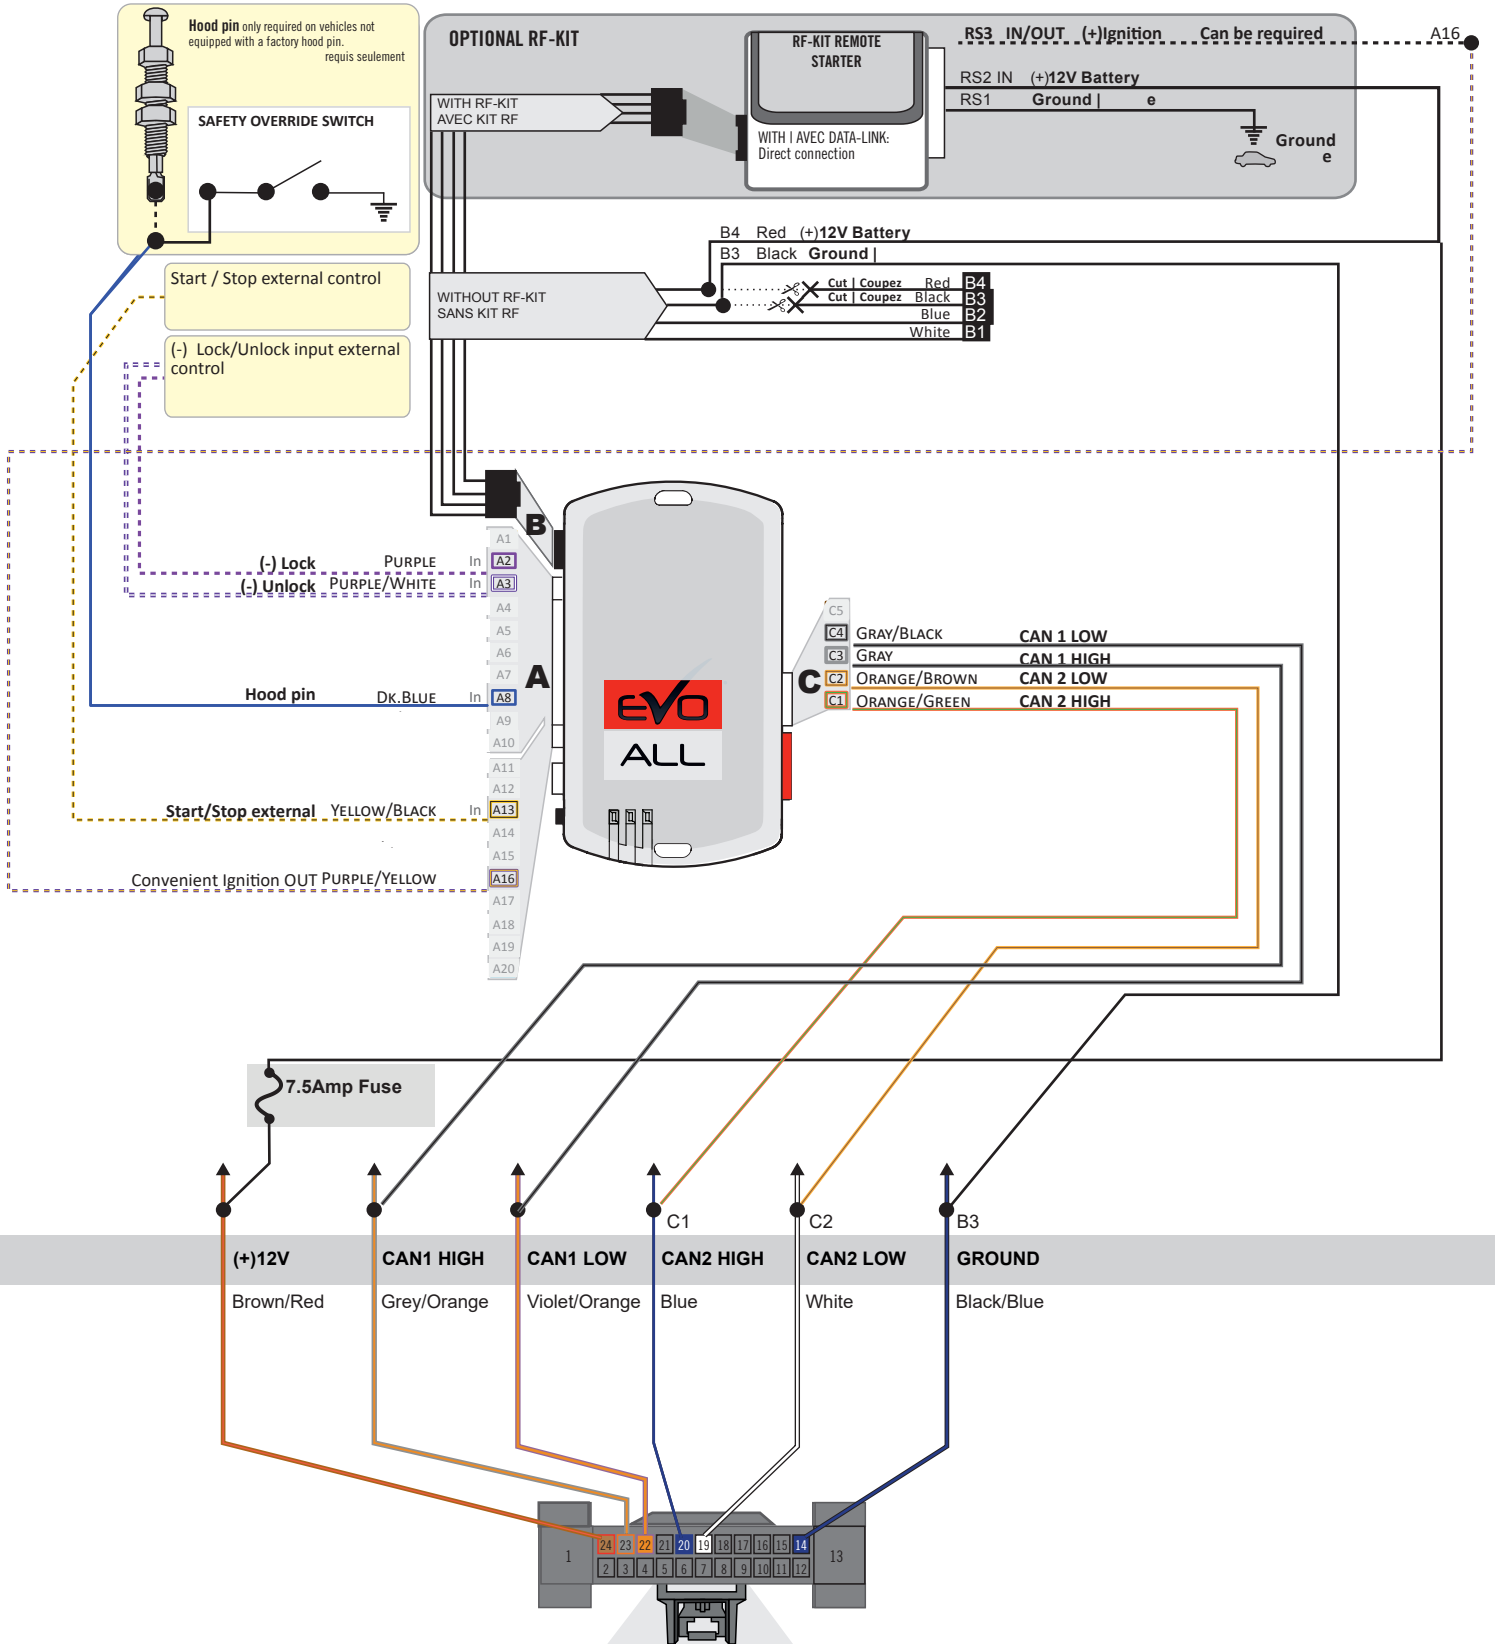


ESCAPE


① Gateway module, Connector Behind OBD-II connector - located at dash board driver's side Back view, 24-pin black connector.

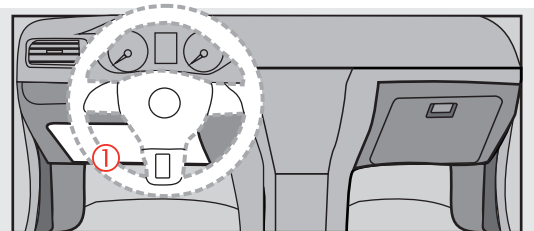

THAR-FOR3 | T-HARNESS - AUTOMATIC TRANSMISSION |

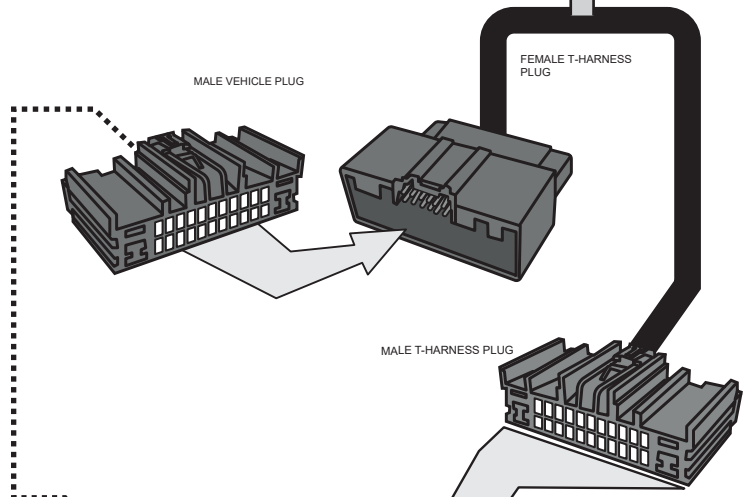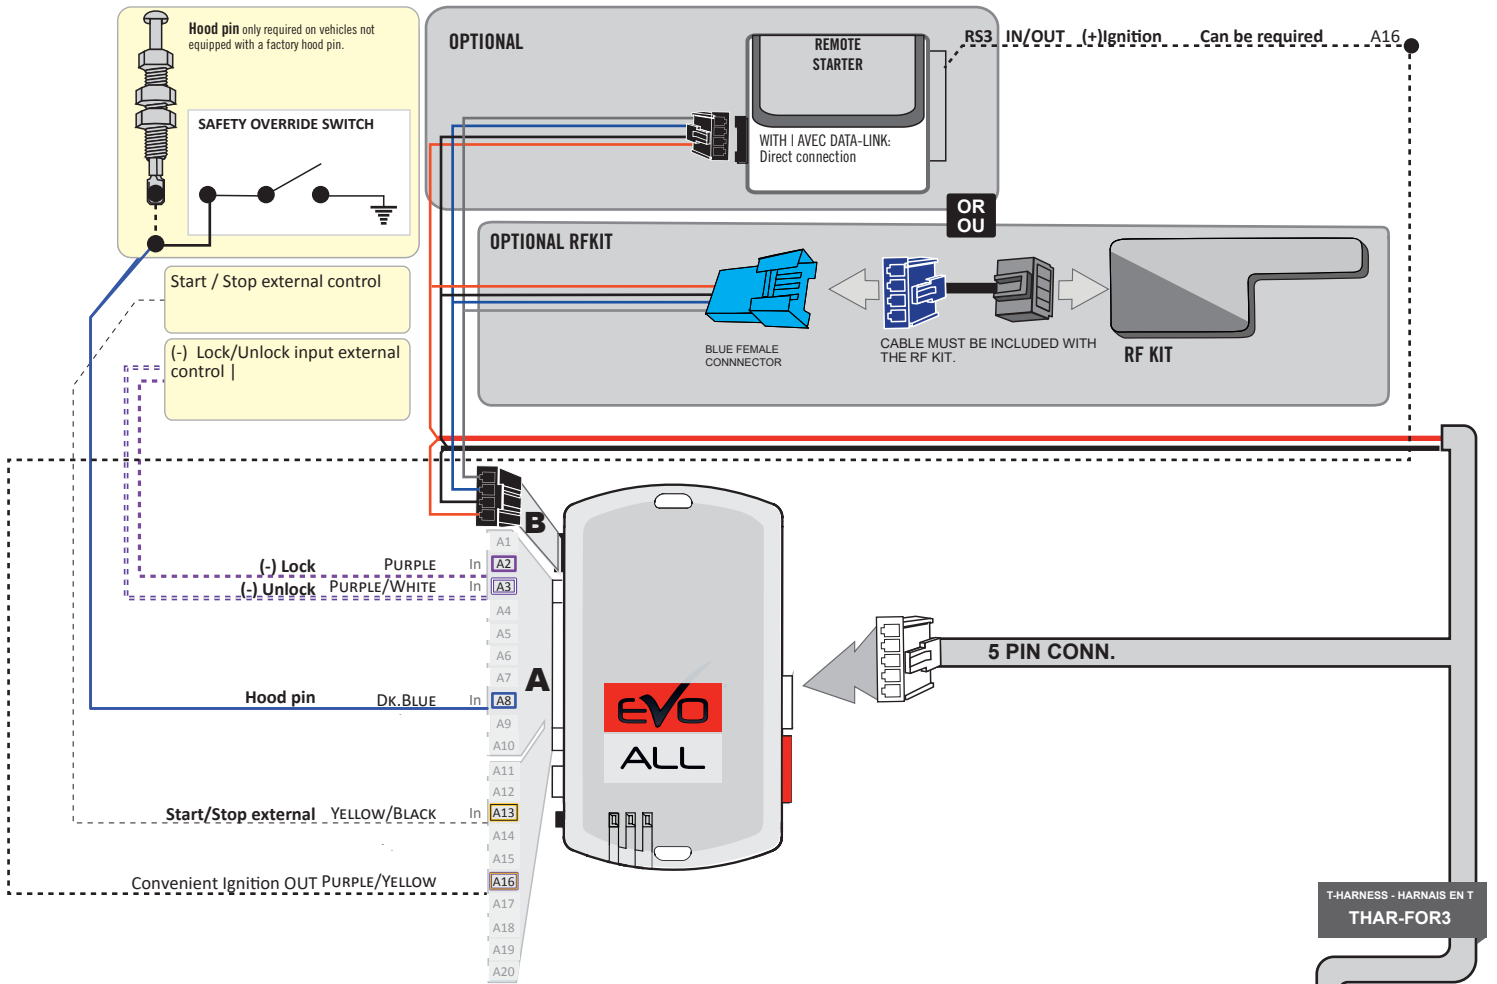

① Gateway module, Connector Behind OBD-II connector - located at dash board driver's side Back view, 24-pin black connector.

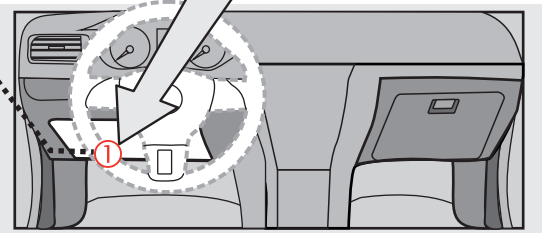



Parts required (not included)


- 1x FLASH LINK UPDATER, SOFTWARE | PROGRAMME
- 1x FLASH LINK MANAGER
- 1x Microsoft Windows Computer with Internet connection
Ordinateur Microsoft Windows avec connection Internet

OR

- 1x FLASH LINK MOBILE
- 1x FLASH LINK MOBILE APP
- Smartphone Android or iOS with Internet connection
(Internet provider charges may apply)

BEFORE PROGRAMMING SET THE UNIT OPTIONS AND SAVE.


1

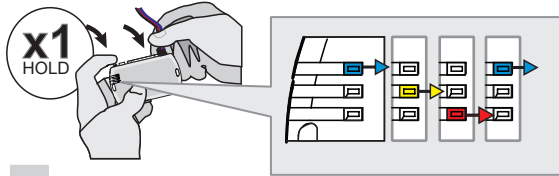

Press and hold the programming button:
Insert the 4-Pin (Data-Link) connector.


↳ The Blue, Red, Yellow and Blue & Red LEDs will alternatively illuminate.

2

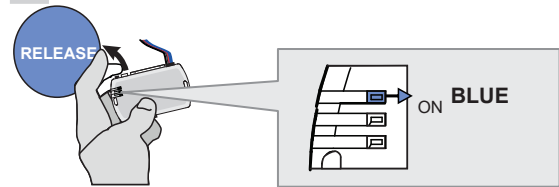


Release the programming button when the LED is BLUE.

 If the LED is not solid BLUE disconnect the 4-Pin connector (Data-Link) and go back to step 1.




3

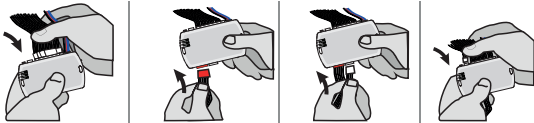

Insert the required remaining connectors.

4

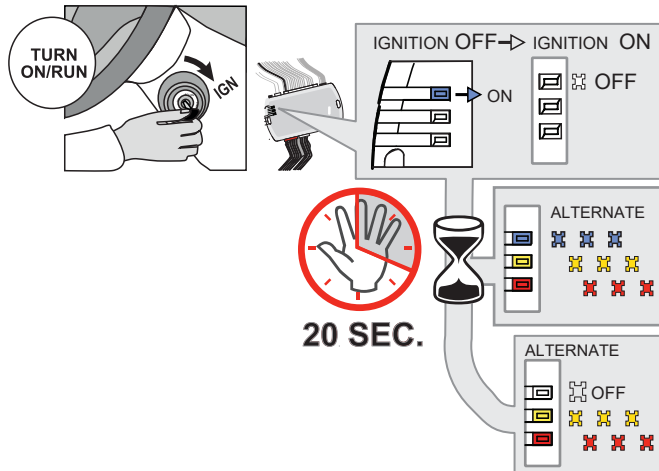

Turn the key to the Ignition ON/RUN position.

 
↳ The BLUE LED will turn OFF.

↳ The BLUE, YELLOW and RED LEDs will alternate.


Wait, at least 20 seconds, do not disconnect the modules or turn off the ignition.

↳ The RED and YELLOW LEDs will alternate.

Make sure that the DELs are flashing RED and YELLOW before continuing programming.



5

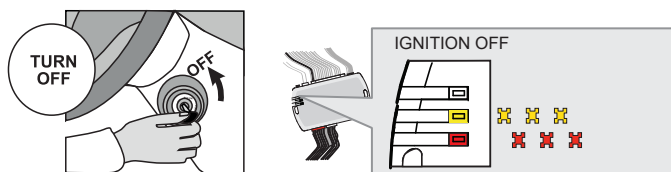


Turn the key to the OFF position.

↳ The RED and YELLOW LEDs alternate.


KEY BYPASS PROGRAMMING PROCEDURE 2/2 |

6

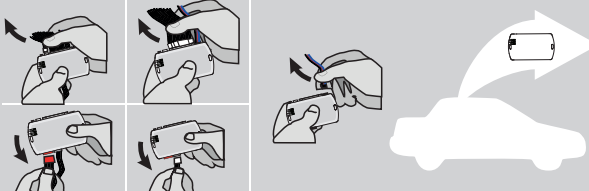

Disconnect all the connectors and after the Data-Link (4-pins) connector.

7



Microsoft Windows Computer with Internet connection*

FLASH LINK UPDATER* **FLASH LINK MANAGER***
SOFTWARE | PROGRAMME

OR


Smartphone* (Internet provider charges may apply)

VEHICLE'S OBDII CONNECTOR **FLASH LINK MOBILE***

Use the tool: FLASH LINK UPDATER or FLASH LINK MOBILE to visit the DCryptor menu.

*Parts required (not included)

8

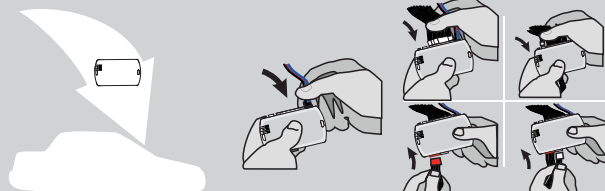


AFTER DCRYPTOR PROGRAMMING COMPLETED
Go back to the vehicle and reconnect the 4-Pin (Data-Link) connector and after, all the remaining connector.



↳ The **BLUE LED** will turn ON.

9

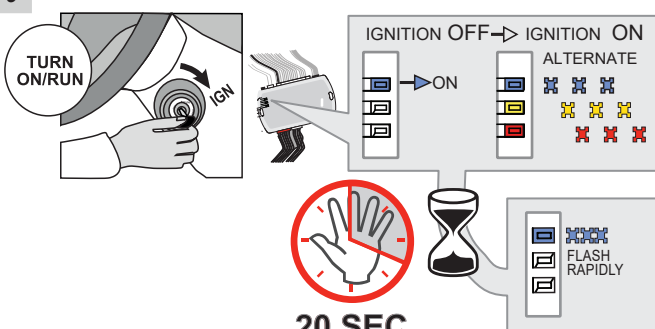

TURN ON/RUN

IGNITION OFF → IGNITION ON

ALTERNATE

↳ The **RED and YELLOW LEDs** will turn ON.


Wait, at least 20 seconds, do not disconnect the modules or turn off the ignition.

↳ The **BLUE LED** will flash rapidly.

20 SEC.

FLASH RAPIDLY


10

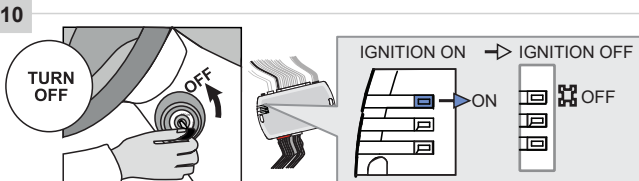

TURN OFF

IGNITION ON → IGNITION OFF

↳ The **BLUE** will turn OFF.






The module is now programmed.








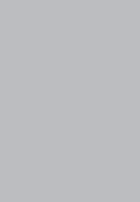
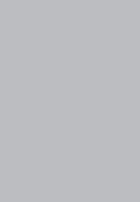
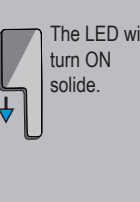
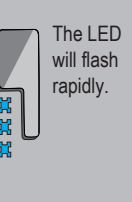
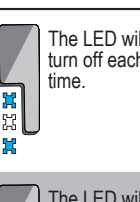
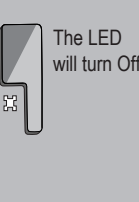

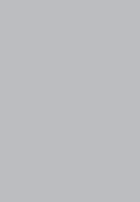
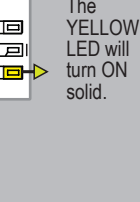
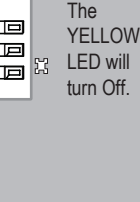
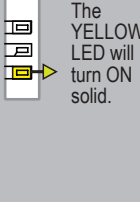
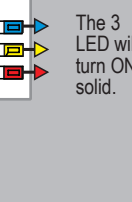
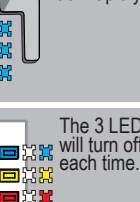
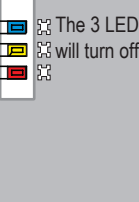
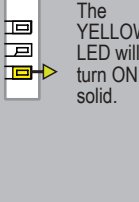
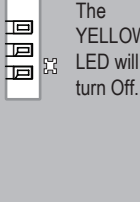

OPTIONAL RF-KIT PROGRAMMING |

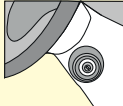PROGRAM BYPASS OPTION

	<p>Program bypass option:</p>	<p>H2</p>	<p><input checked="" type="checkbox"/> Supported RF-KITS enable <input checked="" type="checkbox"/> H2 Fortin 2</p>
---	-------------------------------	------------------	---

OPTIONAL FORTIN RF KIT SERIES 4 OR SERIES 9 PROGRAMMING

	<p>The module must be programmed on the vehicle.</p>			<p>MAKE SURE THE IGNITION KEY HAS BEEN IN THE OFF POSITION FOR AT LEAST 5 SECONDS.</p>
---	--	---	---	---

<p>1</p> <p>ON TURN ON/RUN</p> 	<p>2</p> <p>OFF TURN OFF</p> 	<p>3</p> <p>ON TURN ON/RUN</p> 	<p>4X BRAKES</p> <p>x4 PRESS</p> 	<p>ON EACH TRANSMITTER</p> <p>4 BUTTONS</p> <p>[-] PRESS AND RELEASE</p> <p>→ PRESS AND RELEASE</p> <p>1 BUTTON</p> <p>PRESS APPROX. 12 SEC. AND WAIT FOR THE BLUE LED TO TURN OFF THEN BACK ON SOLID THEN RELEASE.</p>	<p>6</p> <p>OFF TURN OFF</p> 	<p>7</p> <p>ON TURN ON/RUN</p> 	<p>8</p> <p>OFF TURN OFF</p> 
<p>Turn the key to the ON/RUN position.</p>	<p>Turn the ignition to the OFF position.</p>	<p>Turn the key to the ON/RUN position.</p>	<p>Press and release the brake pedal four times.</p>	<p>The LED will turn off each time.</p>	<p>Turn the ignition to the OFF position.</p>	<p>Turn the key to the ON/RUN position and leave it ON for 5 sec.</p>	<p>Turn the ignition to the OFF position.</p>
 <p>The LED will turn ON solide.</p>	 <p>The LED will turn Off.</p>	 <p>The LED will turn ON solide.</p>	 <p>The LED will flash rapidly.</p>	 <p>The LED will turn off each time.</p>	 <p>The LED will turn Off.</p>	 <p>pour 5 sec.</p>	 <p>The LED will flash rapidly.</p>
 <p>The YELLOW LED will turn ON solid.</p>	 <p>The YELLOW LED will turn Off.</p>	 <p>The YELLOW LED will turn ON solid.</p>	 <p>The 3 LED will turn ON solid.</p>	 <p>The LED will flash rapidly.</p>	 <p>The 3 LED will turn off.</p>	 <p>The YELLOW LED will turn ON solid.</p>	 <p>The YELLOW LED will turn Off.</p>
			 <p>The 3 LED will turn off each time.</p>				



REMOTE STARTER FUNCTIONALITY |



All doors must be closed.



Remote start the vehicle.



Unlock the doors with the remote-starter remote or the OEM remote.



Insert and Turn the key to the Ignition ON/RUN position.



Press the brake pedal.



The vehicle can now be put in to gear and driven.


STANDALONE & THAR-FOR3 INSTALLATION

ADDENDUM - SUGGESTED WIRING CONFIGURATION



Vehicle functions supported in this diagram (functional if equipped)

VEHICLE	YEARS	Vehicle functions supported in this diagram (functional if equipped)															
		Immobilizer bypass	Lock	Unlock	Arm	Disarm	Heated Seats**	Rear Defrost**	RAP Disable	Parking Lights***	Tachometer	Door Status	Trunk Status	Hood Status*	Hand-Brake Status	Foot-Brake Status	Active OEM Remote Start
FORD																	
Escape	Push-to-Start 2020	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•

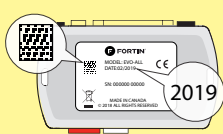

COMPATIBLE MODULE REQUIRED:

QR CODE ON THE LABEL
MANUFACTURED AFTER: 2019

FIRMWARE VERSION
58.[02]
MINIMUM

To add the firmware version and the options, use the **FLASH LINK UPDATER** or **FLASH LINK MOBILE** tool, sold separately.



Program bypass option:

UNIT OPTION

DESCRIPTION

C1

OEM Remote status (Lock/Unlock) monitoring

D6

Push-to-Start

IF THE VEHICLE IS NOT EQUIPPED WITH FUNCTIONAL HOOD PIN:

A11

OFF

Hood trigger (Output Status).

NOTES

The vehicles OEM remote and SmartKey are still operable during remote start.

**Heated seats The heated seats and rear defrost activate automatically when it cold.
**Rear Defrost

***Parking Lights The parking Lights at remote start only.

MANDATORY INSTALL

*HOOD PIN



HOOD STATUS: THE HOOD PIN SWITCH MUST BE INSTALLED IF THE VEHICLE CAN BE REMOTE STARTED WITH THE HOOD OPEN, SET FUNCTION A11 TO OFF.

A11

OFF

Notice: the installation of safety elements are mandatory. The hood pin is an essential security element and must be installed.

THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.

PARTS REQUIRED (NOT INCLUDED)


1x **FLASH LINK UPDATER,**
1x **FLASH LINK MANAGER**
SOFTWARE | PROGRAMME
1x Microsoft Windows Computer with Internet connection

OR


1x **FLASH LINK MOBILE**
1x **FLASH LINK MOBILE APP**
Smartphone *Android* or *iOS* with Internet connection (*provider charges may apply*).
1x

MANDATORY

HOOD PIN



REMOTE START SAFETY OVERRIDE SWITCH

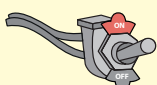
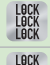






VALET SWITCH


Part #: RSPB available, Sold separately.

Notice: the installation of safety elements are mandatory. The hood pin and the valet switch are essential security elements and must be installed.


STAND ALONE CONFIGURATION

	Program bypass option	UNIT OPTION	DESCRIPTION
	OEM Remote Stand Alone Remote Starter:	D1.10 	By default, LOCK, LOCK, LOCK
		D1.1 	Par défaut, VERROUILLE, VERROUILLE, VERROUILLE
	Program bypass option with oem remote:	C1	OEM Remote Monitoring
	Program bypass option with RF KIT antenna:	H1 to H6	Supported RF Kits and select RF Kit
	Program bypass option Vehicle hybrid only:	D4	Hybrid mode (Vehicle hybrid only)


REMOTE STARTER FUNCTIONALITY




All doors must be closed.

3X 

Press the OEM remote's Lock button 3x to remote-start (or remote-stop) the vehicle.




START 

The vehicle will START.

REMOTE STARTER DIAGNOSTICS
MODULE RED LED

x2 flash :	Brake ON
x3 flash :	No tach
x4 flash :	Ignition before start
x5 flash :	Hood Open

REMOTE STARTER WARNING CARD



CUT THIS WARNING CARD AND STICK IT ON A VISIBLE PLACE:
or use the package **RSPB**, Sold separately.

WARNING

REMOTE STARTER

THE VEHICLE CAN BE STARTED BY EITHER: PRESSING THE LOCK BUTTON ON THE OEM REMOTE 3 TIMES CONSECUTIVELY OR BY A SMARTPHONE. **TURN ON** THE SAFETY SWITCH LOCATED UNDER THE DASHBOARD BEFORE WORKING ON THE VEHICLE.

DESCRIPTION

	Parts required (Not included)	PAGE
--	-------------------------------	------

WIRE TO WIRE DIAGRAM


AUTOMATIC TRANSMISSION	1x 7.5 Amp. fuse	Page 3
------------------------	------------------	--------

THARNES DIAGRAM


THARNES THAR-FOR3	AUTOMATIC TRANSMISSION	1x THAR-FOR3	Page 4
-------------------	------------------------	--------------	--------




① Gateway module, Behind OBD-II connector

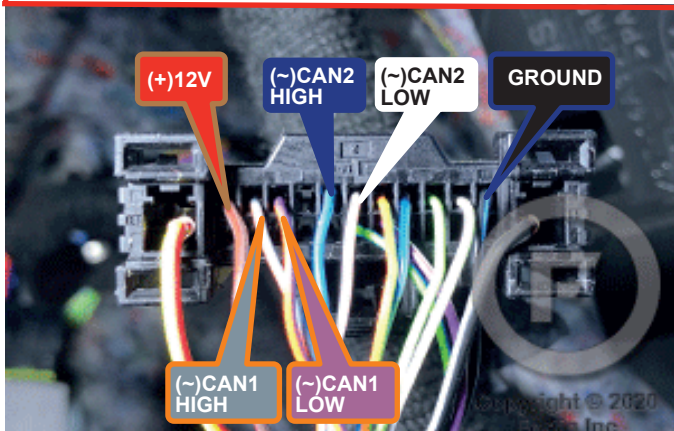




AUTOMATIC TRANSMISSION WIRING CONNECTION

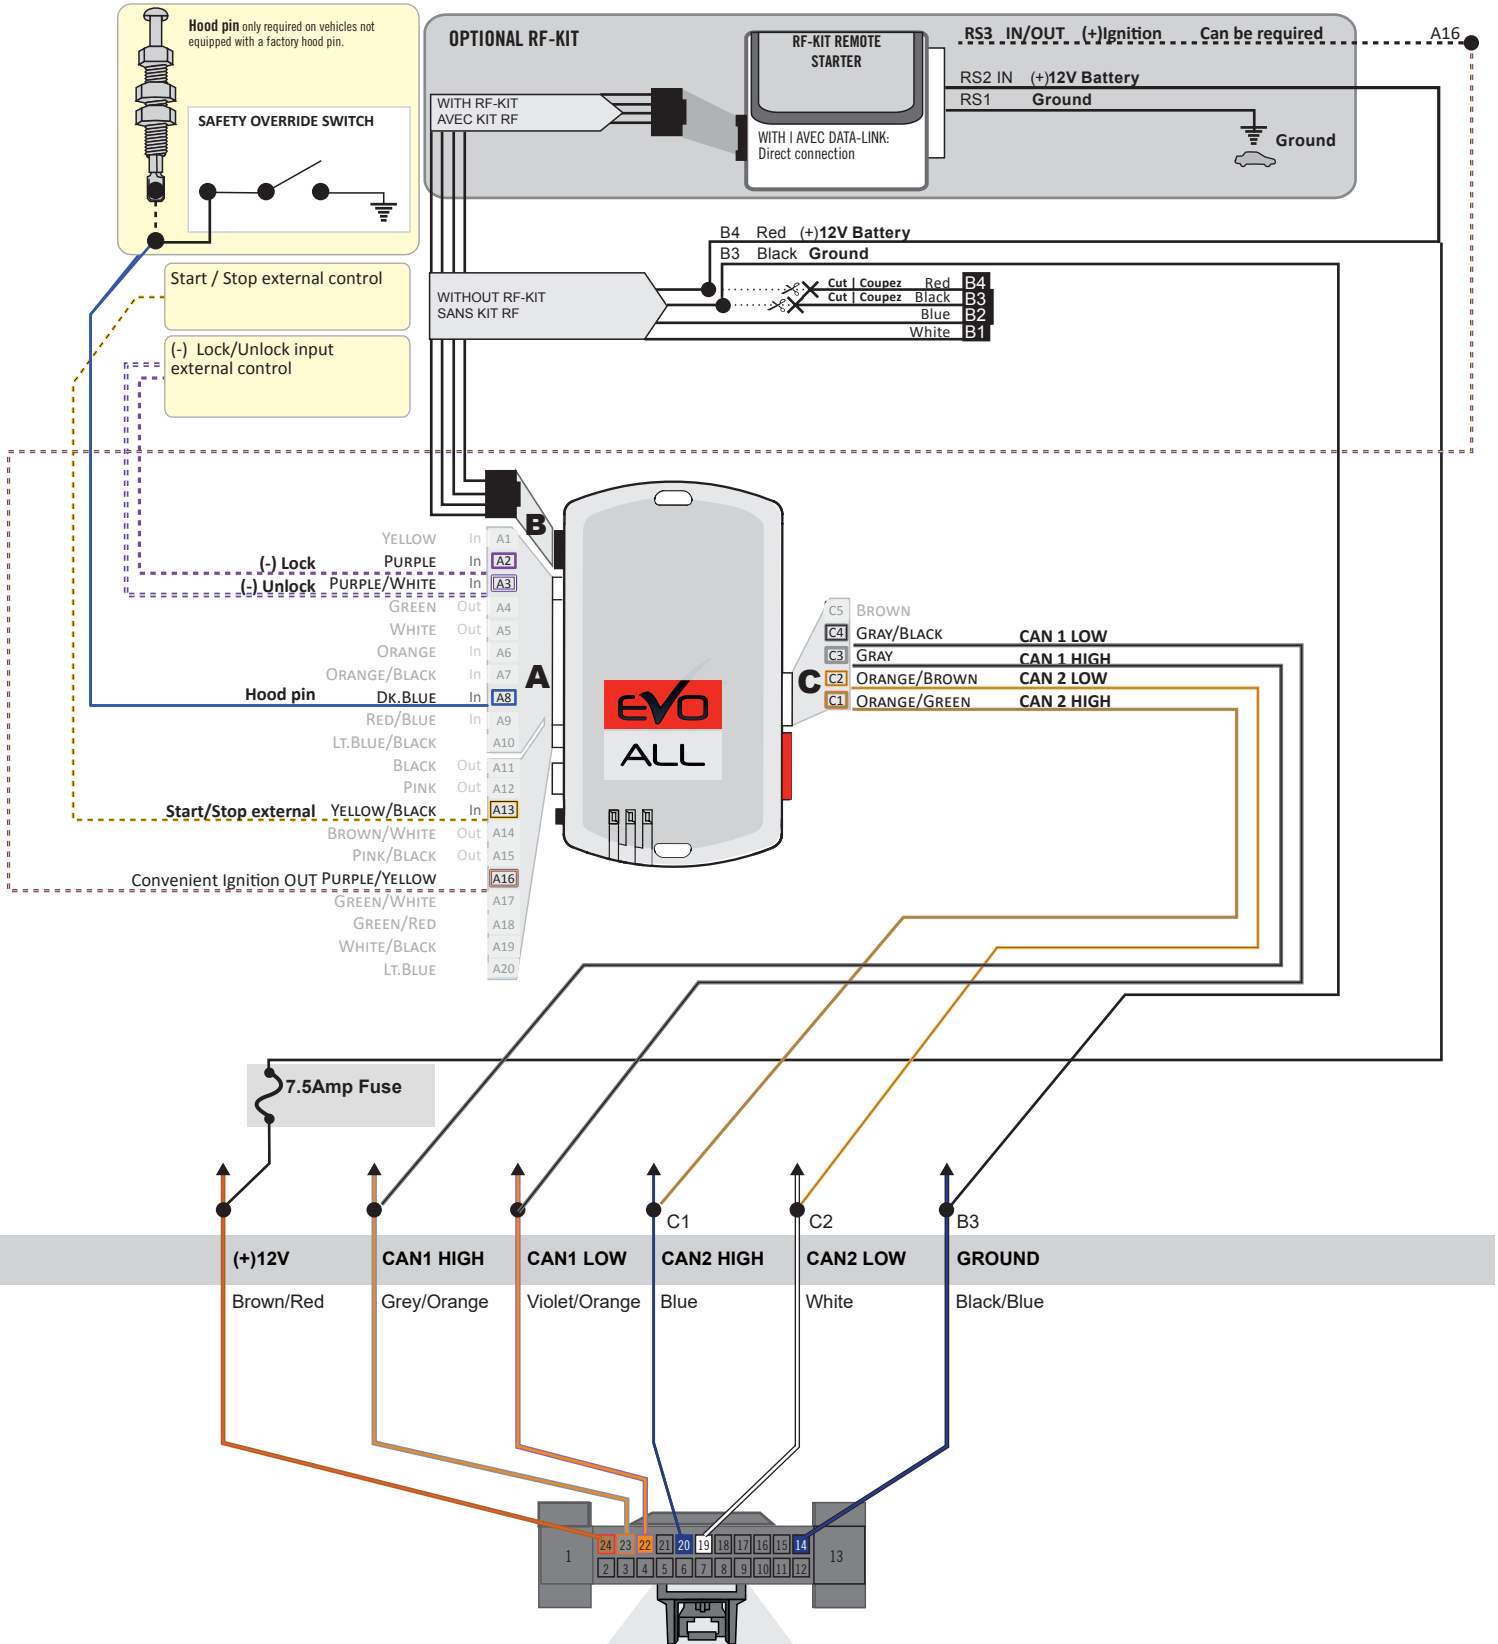


① Gateway module, Connector Behind OBD-II connector - located at dash board driver's side Back view, 24-pin black connector.

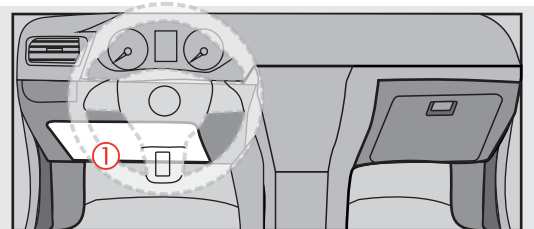

THAR-FOR3 | T-HARNESS - AUTOMATIC TRANSMISSION

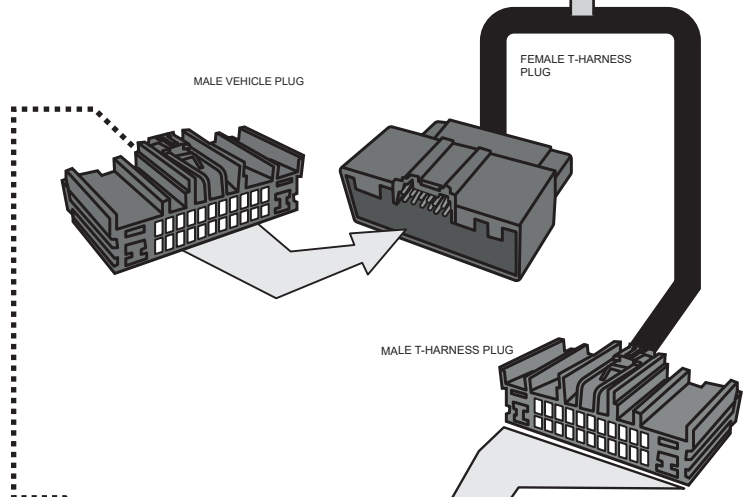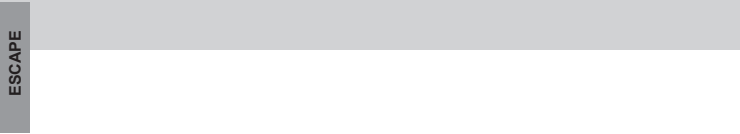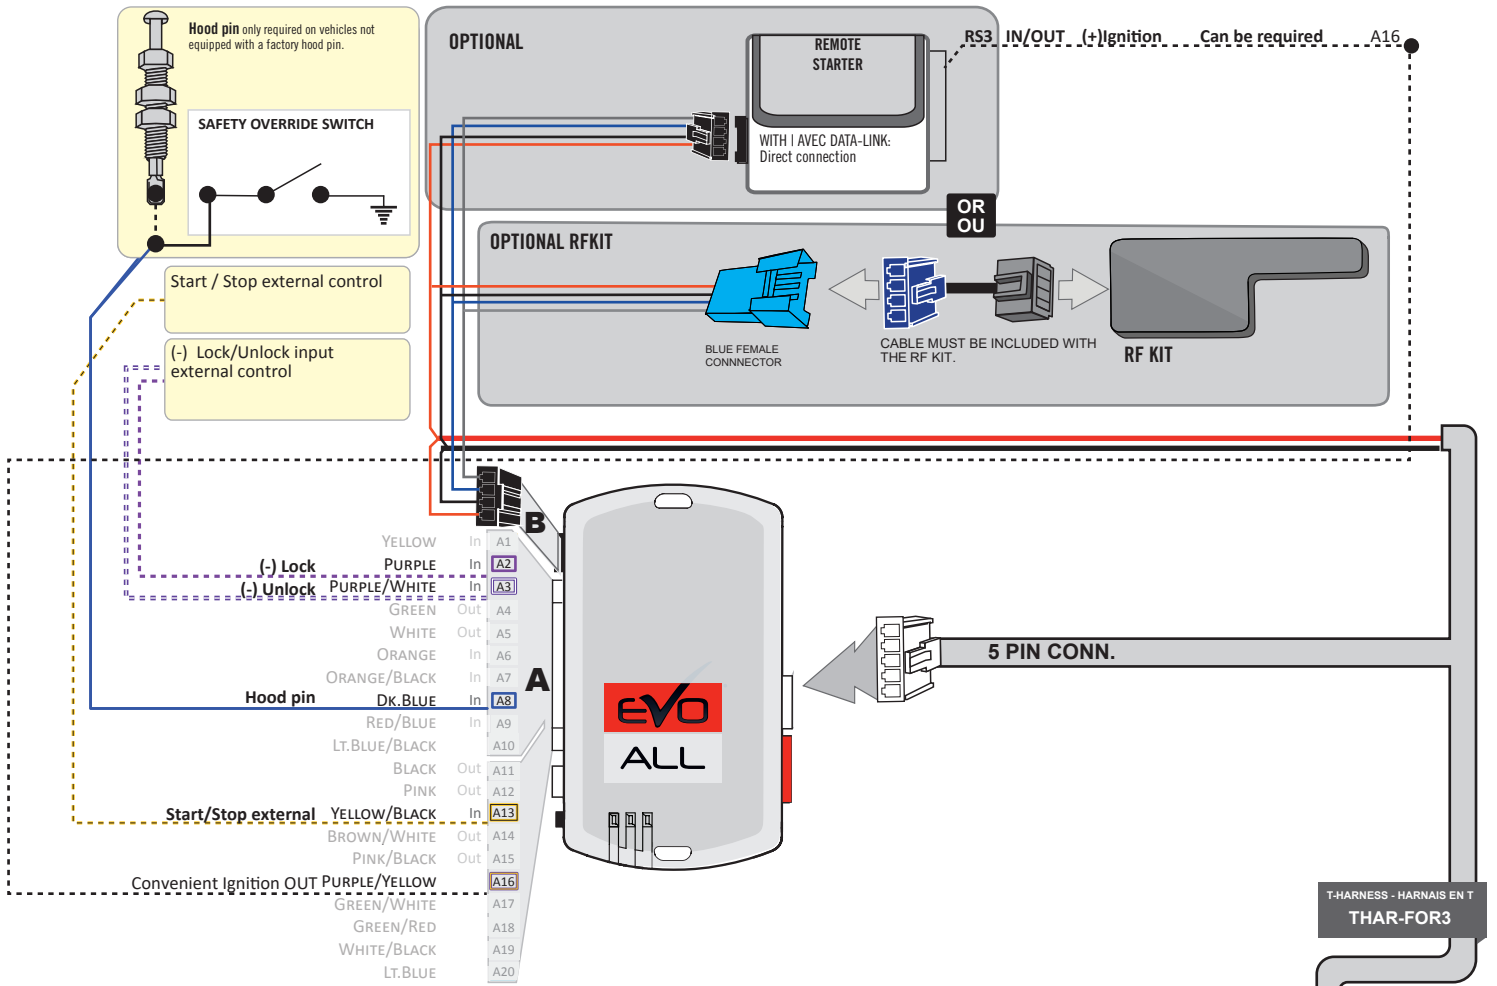

① Gateway module, Connector Behind OBD-II connector - located at dash board driver's side Back view, 24-pin black connector.

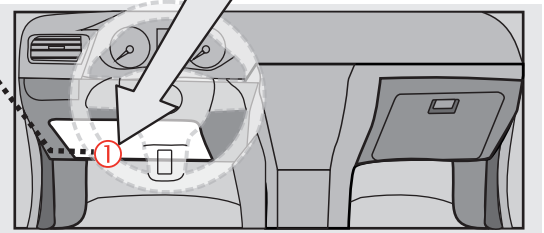

DCRYPTOR PROGRAMMING PROCEDURE



Parts required (not included)


- 1x FLASH LINK UPDATER, SOFTWARE | PROGRAMME
- 1x FLASH LINK MANAGER
- 1x Microsoft Windows Computer with Internet connection

OR

- 1x FLASH LINK MOBILE
- 1x FLASH LINK MOBILE APP
- Smartphone Android or iOS with Internet connection (Internet provider charges may apply)

BEFORE PROGRAMMING SET THE UNIT OPTIONS AND SAVE.


1

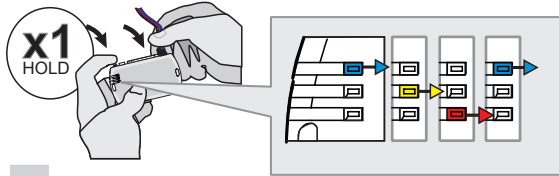

Press and hold the programming button:
Insert the 4-Pin (Data-Link) connector.


↳ The Blue, Red, Yellow and Blue & Red LEDs will alternatively illuminate.

2

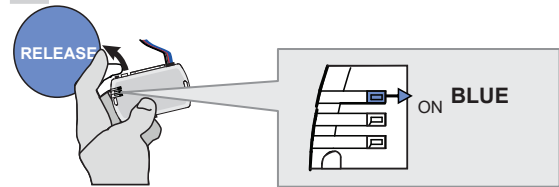


Release the programming button when the LED is BLUE.

 If the LED is not solid BLUE disconnect the 4-Pin connector (Data-Link) and go back to step 1.




3

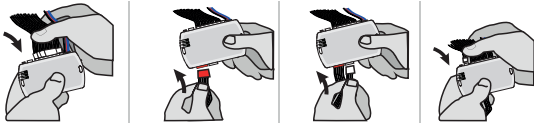

Insert the required remaining connectors.

4

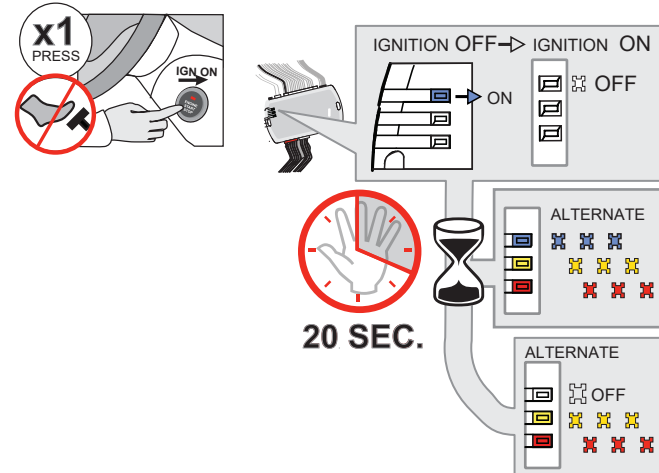

Do not press the brake pedal.
Press the Push-to-Start button once to turn on the ignition.

 
↳ The BLUE LED will turn OFF.

↳ The BLUE, YELLOW and RED LEDs will alternate.


Wait, at least 20 seconds, do not disconnect the modules or turn off the ignition.

↳ The RED and YELLOW LEDs will alternate.

Make sure that the DELs are flashing RED and YELLOW before continuing programming.



5

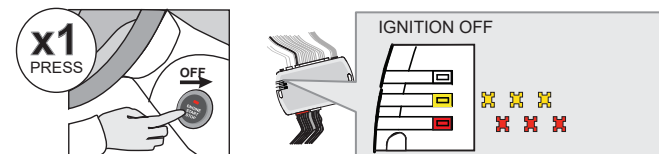

Press the Push-to-Start button once to turn off the ignition.

Appuyez 1 fois sur le bouton démarrage pour éteindre l'ignition.

↳ The RED and YELLOW LEDs alternate.

KEY BYPASS PROGRAMMING PROCEDURE 2/2

6

Disconnect all the connectors and after the Data-Link (4-pins) connector.

7

Microsoft Windows Computer with Internet connection*

Use the tool:
FLASH LINK UPDATER or
FLASH LINK MOBILE
 to visit the DCryptor menu.

OR


Smartphone* (Internet provider charges may apply)

VEHICLE'S OBDII CONNECTOR

***Parts required (not included)**

8

AFTER DCRYPTOR PROGRAMMING COMPLETED
Go back to the vehicle and reconnect the 4-Pin (Data-Link) connector and after, all the remaining connector.

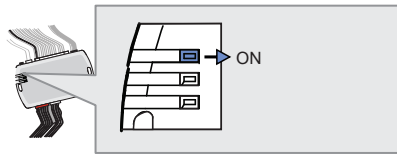

↳ The BLUE LED will turn ON.

9

x1 PRESS

IGNITION OFF → IGNITION ON

Do not press the brake pedal. **Press** the Push-to-Start button once to turn on the ignition.

↳ The RED and YELLOW LEDs will turn ON.

20 SEC.

↳ The BLUE LED will flash rapidly.

Wait, at least 20 seconds, do not disconnect the modules or turn off the ignition.

10

x1 PRESS

IGNITION ON → IGNITION OFF

↳ The BLUE will turn OFF.



The module is now programmed.


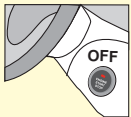
OPTIONAL RF-KIT PROGRAMMING

PROGRAM BYPASS OPTION









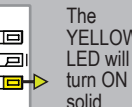
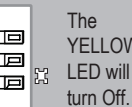
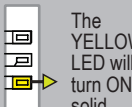
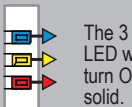

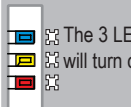
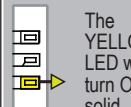
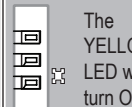
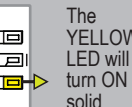
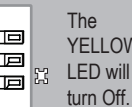
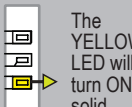
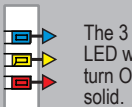

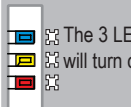
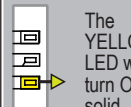
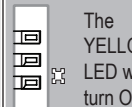
	<p>Program bypass option:</p>	<p>H2</p>	<p><input checked="" type="checkbox"/> Supported RF-KITS enable <input checked="" type="checkbox"/> H2 Fortin 2</p>
---	-------------------------------	------------------	---

OPTIONAL FORTIN RF KIT SERIES 4 OR SERIES 9 PROGRAMMING

The module must be programmed on the vehicle.

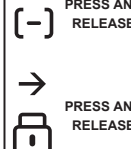



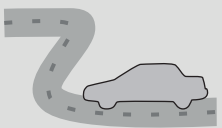



MAKE SURE THE IGNITION KEY HAS BEEN IN THE OFF POSITION FOR AT LEAST 5 SECONDS.

<p>1</p> <p>ON x1 PRESS</p>  <p>Do not press the brake pedal. Press the Push-to-Start button once to turn on the ignition.</p>	<p>2</p> <p>OFF x1 PRESS</p>  <p>Press the Push-to-Start button once to turn off the ignition.</p>	<p>3</p> <p>ON x1 PRESS</p>  <p>Do not press the brake pedal. Press the Push-to-Start button once to turn on the ignition.</p>	<p>4</p> <p>4X BRAKES</p> <p>x4 PRESS</p>  <p>Press and release the brake pedal four times.</p>	<p>5</p> <p>ON EACH TRANSMITTER</p> <p>4 BUTTONS</p> <p>PRESS AND RELEASE</p>  <p>PRESS AND RELEASE</p> <p>1 BUTTON</p> <p>PRESS APPROX. 12 SEC. AND WAIT FOR THE BLUE LED TO TURN OFF THEN BACK ON SOLID THEN RELEASE.</p> <p>APPROX. 12 SEC, LA</p>	<p>6</p> <p>OFF x1 PRESS</p>  <p>Press the Push-to-Start button once to turn off the ignition.</p>	<p>7</p> <p>ON x1 PRESS</p>  <p>Do not press the brake pedal. Press the Push-to-Start button once to turn on the ignition and leave it ON for 5 sec..</p>	<p>8</p> <p>OFF x1 PRESS</p>  <p>Press the Push-to-Start button once to turn off the ignition.</p>
 <p>The YELLOW LED will turn ON solid.</p>	 <p>The YELLOW LED will turn Off.</p>	 <p>The YELLOW LED will turn ON solid.</p>	 <p>The LED will flash rapidly.</p>	 <p>The LED will turn off each time.</p>	 <p>The LED will turn Off.</p>	 <p>The YELLOW LED will turn ON solid.</p>	 <p>The YELLOW LED will turn Off.</p>
 <p>The YELLOW LED will turn ON solid.</p>	 <p>The YELLOW LED will turn Off.</p>	 <p>The YELLOW LED will turn ON solid.</p>	 <p>The LED will flash rapidly.</p>	 <p>The LED will turn off each time.</p>	 <p>The LED will turn Off.</p>	 <p>The YELLOW LED will turn ON solid.</p>	 <p>The YELLOW LED will turn Off.</p>



REMOTE STARTER FUNCTIONALITY

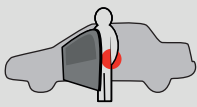 <p>Start</p> <p>All doors must be closed.</p> <p>Remote start the vehicle.</p>	 <p>UNLOCK</p> <p>Unlock the doors with either:</p> <ul style="list-style-type: none"> • The OEM remote • The remote-starter remote • Or the proximity remote 	 <p>Enter the vehicle with the SMART-KEY.</p>	 <p>DO NOT PRESS THE BRAKE PEDAL.</p> <p>Press and release the Push-to-Start button once.</p>	 <p>Press the brake pedal. The vehicle can now be put in to gear and driven.</p> <p>If the Smart-Key is not detected the vehicle will shut down.</p>
--	---	--	---	---

STANDALONE & THAR-FOR3 INSTALLATION

ADDENDUM - SUGGESTED WIRING CONFIGURATION




ONLY COMPATIBLE WITH AUTOMATIC TRANSMISSION VEHICLES.



Vehicle functions supported in this diagram (functional if equipped)

VEHICLE	YEARS	Immobilizer bypass	T-Harness available (sold separately)	Lock	Unlock	Arm	Disarm	Heated Seats**	Rear Defrost**	RAP Disable	Parking Lights***	Tachometer	Door Status	Trunk Status	Hood Status*	Hand-Brake Status	Foot-Brake Status	Active OEM Remote Start
FORD																		
Expedition	2018-2020	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•

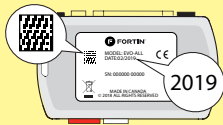

COMPATIBLE MODULE REQUIRED:

QR CODE ON THE LABEL
MANUFACTURED AFTER: 2019

FIRMWARE VERSION

58.[02]
MINIMUM

To add the firmware version and the options, use the **FLASH LINK UPDATER** or **FLASH LINK MOBILE** tool, sold separately.

UNIT OPTION OPTION UNITE	DESCRIPTION
C1	OEM Remote status (Lock/Unlock) monitoring
A11 OFF	Hood trigger (Output Status).

NOTES

The vehicles OEM remote and SmartKey are still operable during remote start.

**Heated seats The heated seats and rear defrost activate automatically when it cold.

***Parking Lights The parking Lights at remote start only.



The vehicle must be equipped with the OEM remote with the door locks.

MANDATORY INSTALL

*HOOD PIN



HOOD STATUS: THE HOOD PIN SWITCH MUST BE INSTALLED IF THE VEHICLE CAN BE REMOTE STARTED WITH THE HOOD OPEN, SET FUNCTION A11 TO OFF.

A11

OFF

Notice: the installation of safety elements are mandatory. The hood pin is an essential security element and must be installed.

THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.

PARTS REQUIRED (NOT INCLUDED) |

1x **FLASH LINK UPDATER,**
 1x **FLASH LINK MANAGER**
SOFTWARE | PROGRAMME
 1x Microsoft Windows Computer with Internet connection

OR

1x **FLASH LINK MOBILE**
 1x **FLASH LINK MOBILE APP**
Smartphone Android or iOS with Internet connection (provider charges may apply).

MANDATORY

HOOD PIN REMOTE START SAFETY OVERRIDE SWITCH

CONTACT

CAPOT VALET SWITCH

Part #: RSPB available, Sold separately.

Notice: the installation of safety elements are mandatory. The hood pin and the valet switch are essential security elements and must be installed.

STAND ALONE CONFIGURATION |

	Program bypass option	UNIT OPTION	DESCRIPTION
	OEM Remote Stand Alone Remote Starter:	OR D1.10 D1.1	By default, LOCK, LOCK, LOCK Par défaut, VERROUILLE, VERROUILLE, VERROUILLE
	Program bypass option with oem remote:	UNIT OPTION C1	DESCRIPTION OEM Remote Monitoring
	Program bypass option with RF KIT antenna:	UNIT OPTION H1 to H6	DESCRIPTION Supported RF Kits and select RF Kit
	Program bypass option Vehicle hybrid only:	UNIT OPTION D4	DESCRIPTION Hybrid mode (Vehicle hybrid only)

REMOTE STARTER FUNCTIONALITY |

All doors must be closed.

3X

Press the OEM remote's Lock button 3x to remote-start (or remote-stop) the vehicle.

The vehicle will START.

REMOTE STARTER DIAGNOSTICS

MODULE RED LED

x2 flash : Brake ON

x3 flash : No tach

x4 flash : Ignition before start

x5 flash : Hood Open

REMOTE STARTER WARNING CARD |

CUT THIS WARNING CARD AND STICK IT ON A VISIBLE PLACE:
 or use the package RSPB, Sold separately.

WARNING

REMOTE STARTER

THE VEHICLE CAN BE STARTED BY EITHER: PRESSING THE LOCK BUTTON ON THE OEM REMOTE 3 TIMES CONSECUTIVELY OR BY A SMARTPHONE. **TURN ON** THE SAFETY SWITCH LOCATED UNDER THE DASHBOARD BEFORE WORKING ON THE VEHICLE.

DESCRIPTION

	Parts required (Not included)	PAGE
--	-------------------------------	------

WIRE TO WIRE DIAGRAM

AUTOMATIC TRANSMISSION	1x 7.5 Amp. fuse	Page 3
------------------------	------------------	--------

THARNNESS DIAGRAM



THARNNESS THAR-FOR3 AUTOMATIC TRANSMISSION	1x THAR-FOR3	Page 4
--	--------------	--------

EXPÉDITION




② Parking Lights switch


① Gateway module, Behind OBD-II connector

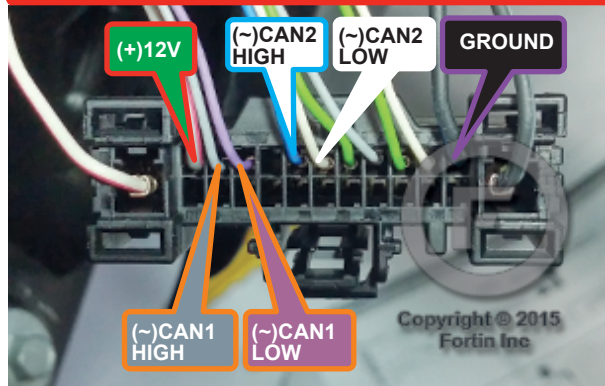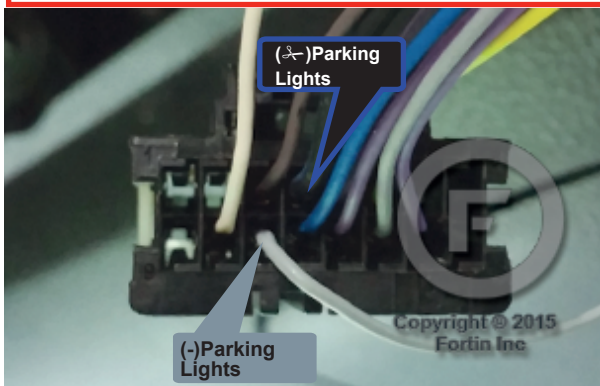

AUTOMATIC TRANSMISSION WIRING CONNECTION |

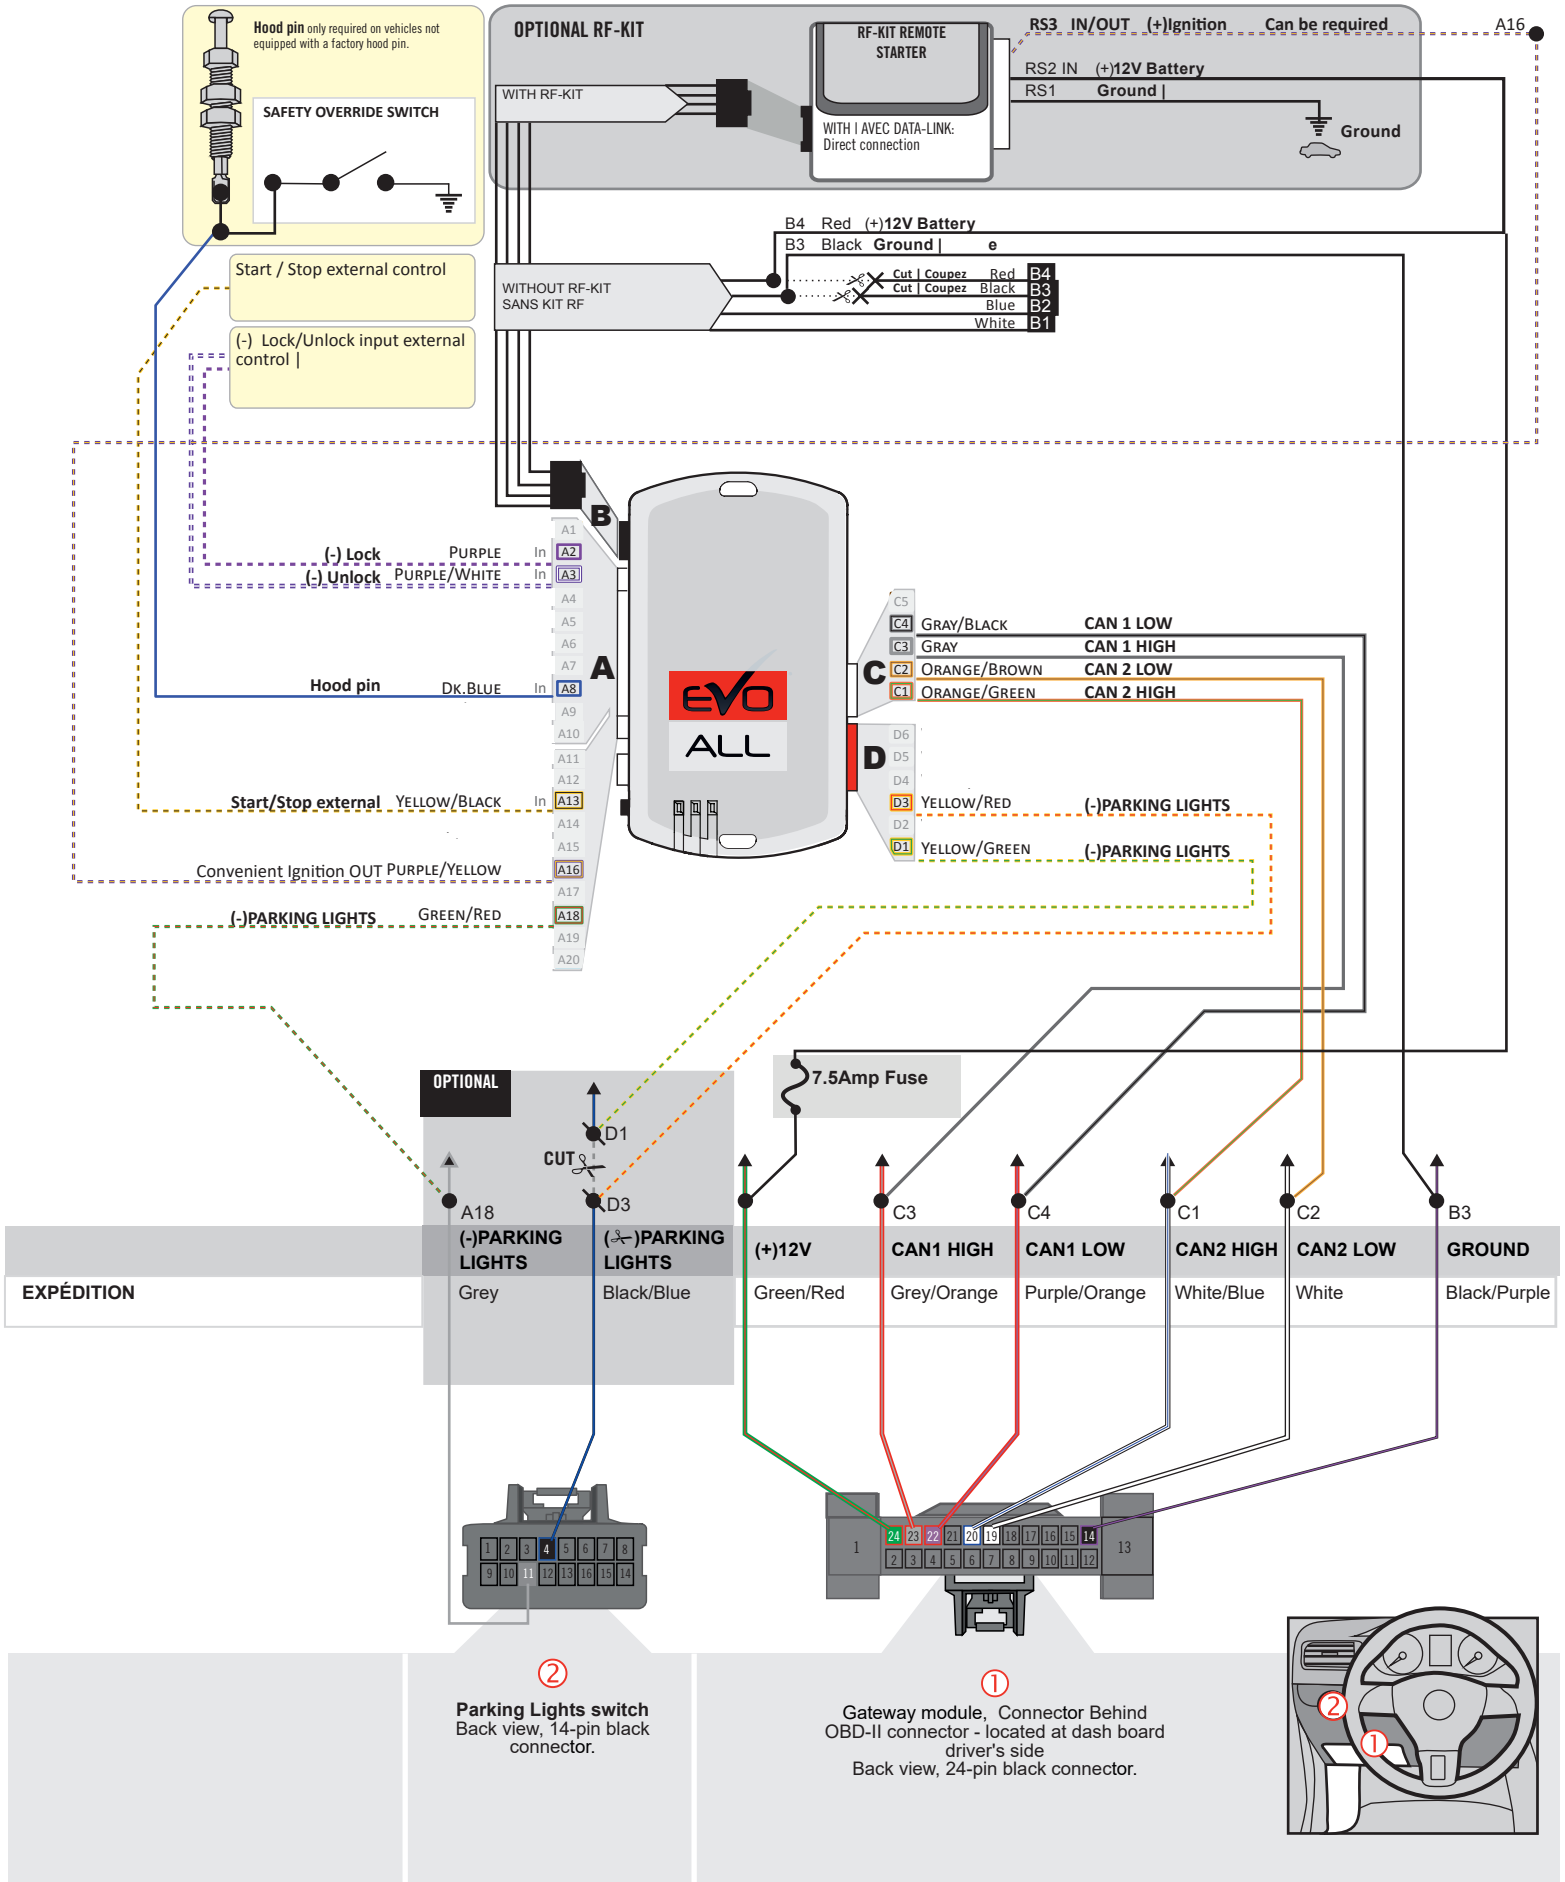

THAR-FOR3 | T-HARNESS - AUTOMATIC TRANSMISSION |

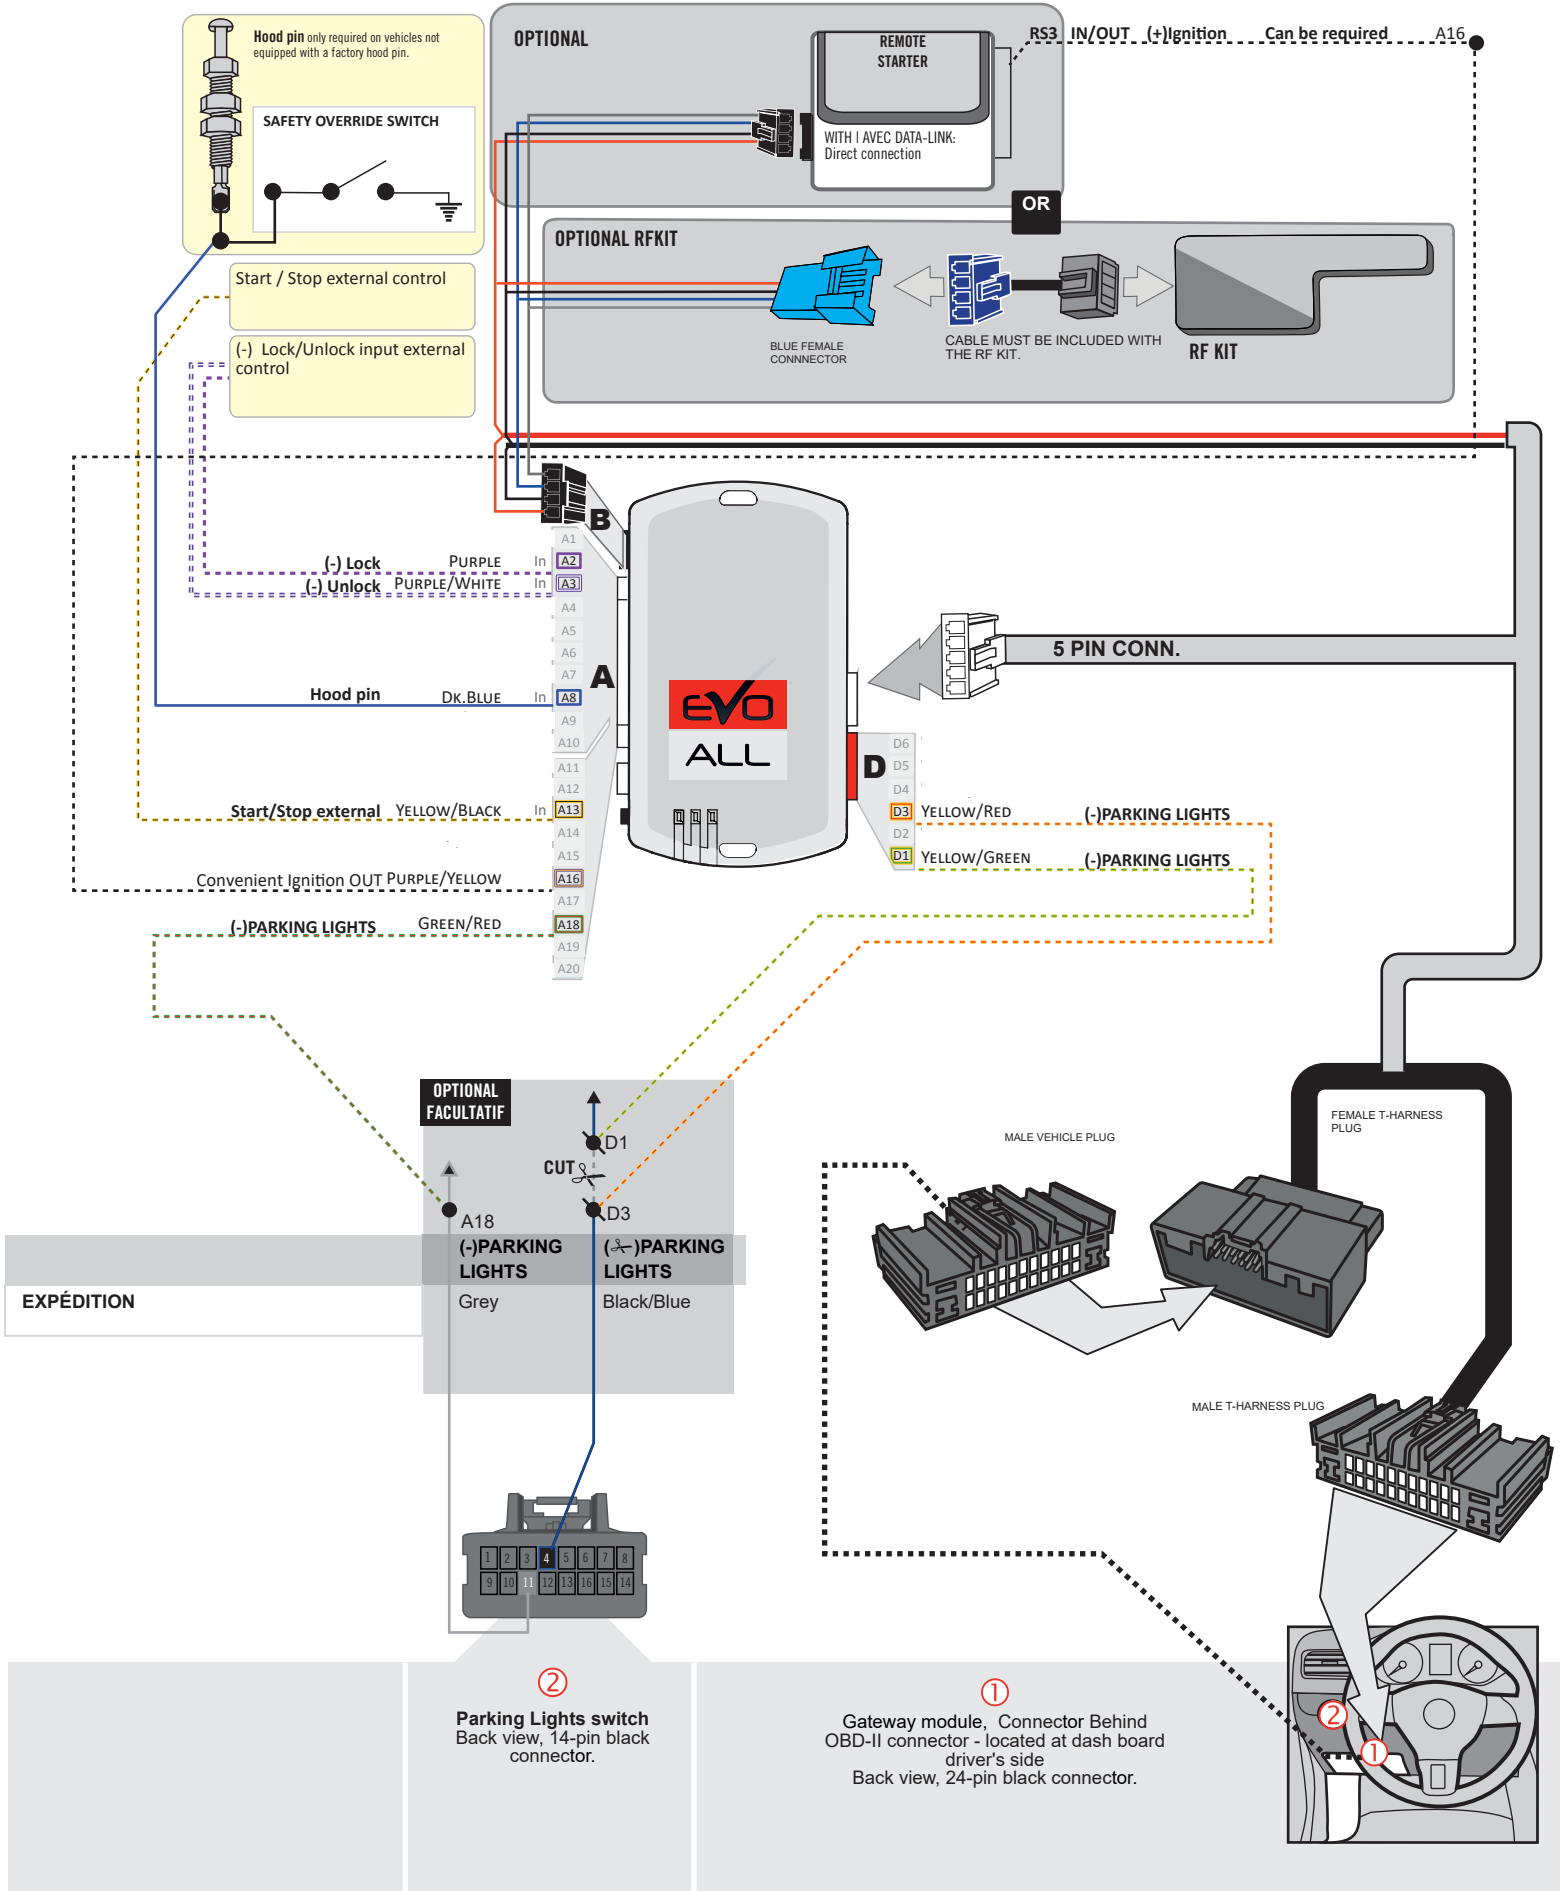



Parts required (not included)


- 1x FLASH LINK UPDATER, SOFTWARE | PROGRAMME
- 1x FLASH LINK MANAGER
- 1x Microsoft Windows Computer with Internet connection

OR

- 1x FLASH LINK MOBILE
- 1x FLASH LINK MOBILE APP
- Smartphone Android or iOS with Internet connection (Internet provider charges may apply)

BEFORE PROGRAMMING SET THE UNIT OPTIONS AND SAVE.


1

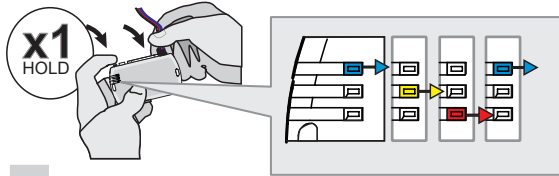

Press and hold the programming button:
Insert the 4-Pin (Data-Link) connector.


↳ The Blue, Red, Yellow and Blue & Red LEDs will alternatively illuminate.

2

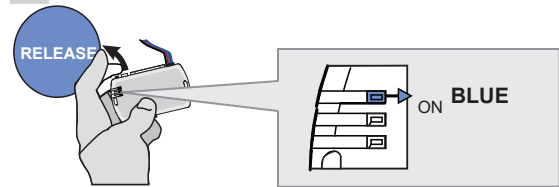


Release the programming button when the LED is BLUE.

 If the LED is not solid BLUE disconnect the 4-Pin connector (Data-Link) and go back to step 1.




3

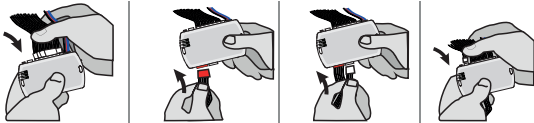

Insert the required remaining connectors.

4

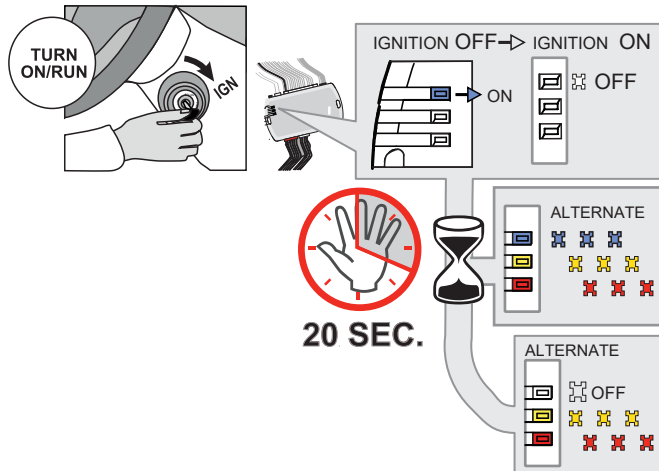

Turn the key to the Ignition ON/RUN position.

 
↳ The BLUE LED will turn OFF.

↳ The BLUE, YELLOW and RED LEDs will alternate.


Wait, at least 20 seconds, do not disconnect the modules or turn off the ignition.

↳ The RED and YELLOW LEDs will alternate.

Make sure that the DELs are flashing RED and YELLOW before continuing programming.



5

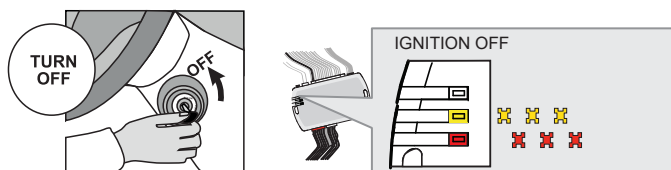


Turn the key to the OFF position.

↳ The RED and YELLOW LEDs alternate.


KEY BYPASS PROGRAMMING PROCEDURE 2/2 |

6

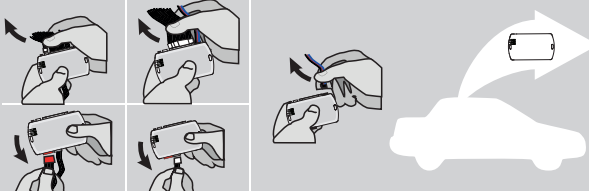

Disconnect all the connectors and after the Data-Link (4-pins) connector.

7



Microsoft Windows Computer with Internet connection*

FLASH LINK UPDATER* **FLASH LINK MANAGER***
SOFTWARE | PROGRAMME

OR


Smartphone* (Internet provider charges may apply)

VEHICLE'S OBDII CONNECTOR **FLASH LINK MOBILE***


Use the tool: FLASH LINK UPDATER or FLASH LINK MOBILE to visit the DCryptor menu.

*Parts required (not included)

8

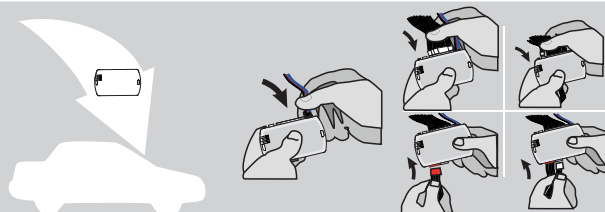


AFTER DCRYPTOR PROGRAMMING COMPLETED
Go back to the vehicle and reconnect the 4-Pin (Data-Link) connector and after, all the remaining connector.

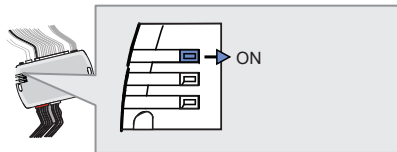

↳ The BLUE LED will turn ON.

9

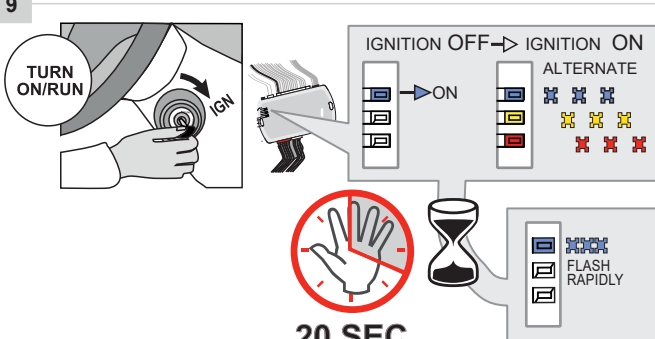

TURN ON/RUN

IGNITION OFF → IGNITION ON

ALTERNATE

↳ The RED and YELLOW LEDs will turn ON.


20 SEC.

FLASH RAPIDLY

Wait, at least 20 seconds, do not disconnect the modules or turn off the ignition.

↳ The BLUE LED will flash rapidly.


10

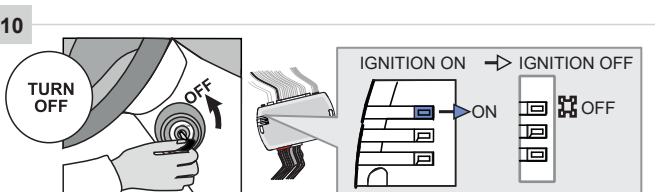

TURN OFF

IGNITION ON → IGNITION OFF


↳ The BLUE will turn OFF.



The module is now programmed.




OPTIONAL RF-KIT PROGRAMMING |

PROGRAM BYPASS OPTION



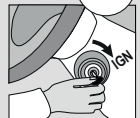





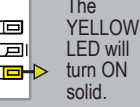
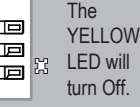
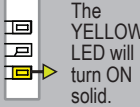
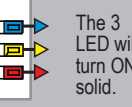

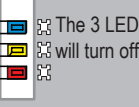
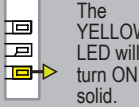
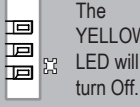
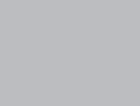
	<p>Program bypass option:</p>	<p>H2</p>	<p><input checked="" type="checkbox"/> Supported RF-KITS enable</p> <p><input checked="" type="checkbox"/> H2 Fortin 2</p> <p><input checked="" type="checkbox"/></p>
---	-------------------------------	------------------	---

OPTIONAL FORTIN RF KIT SERIES 4 OR SERIES 9 PROGRAMMING

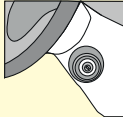The module must be programmed on the vehicle.

MAKE SURE THE IGNITION KEY HAS BEEN IN THE OFF POSITION FOR AT LEAST 5 SECONDS.
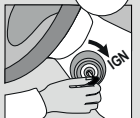
<p>1</p> <p>ON TURN ON/RUN</p> 	<p>2</p> <p>OFF TURN OFF</p> 	<p>3</p> <p>ON TURN ON/RUN</p> 	<p>4</p> <p>4X BRAKES</p> <p>x4 PRESS</p> 	<p>5</p> <p>ON EACH TRANSMITTER</p> <p>4 BUTTONS</p> <p>[-] PRESS AND RELEASE</p> <p>→ PRESS AND RELEASE</p> <p>[LOCK] PRESS AND RELEASE</p> <p>1 BUTTON</p> <p>PRESS APPROX. 12 SEC. AND WAIT FOR THE BLUE LED TO TURN OFF THEN BACK ON SOLID THEN RELEASE.</p>	<p>6</p> <p>OFF TURN OFF</p> 	<p>7</p> <p>ON TURN ON/RUN</p> 	<p>8</p> <p>OFF TURN OFF</p> 
<p>Turn the key to the ON/RUN position.</p>	<p>Turn the ignition to the OFF position.</p>	<p>Turn the key to the ON/RUN position.</p>	<p>Press and release the brake pedal four times.</p>	<p>The LED will turn off each time.</p>	<p>Turn the ignition to the OFF position.</p>	<p>Turn the key to the ON/RUN position and leave it ON for 5 sec.</p> 	<p>Turn the ignition to the OFF position.</p>
 <p>The YELLOW LED will turn ON solid.</p>	 <p>The YELLOW LED will turn Off.</p>	 <p>The LED will turn ON solide.</p> <p>The YELLOW LED will turn ON solid.</p>	 <p>The LED will flash rapidly.</p> <p>The 3 LED will turn ON solid.</p>	 <p>The LED will turn off each time.</p> <p>The LED will flash rapidly.</p>	 <p>The LED will turn Off.</p> <p>The 3 LED will turn off.</p>	 <p>The LED will turn Off.</p> <p>The YELLOW LED will turn ON solid.</p>	 <p>The LED will turn Off.</p> <p>The YELLOW LED will turn Off.</p>
 <p>The 3 LED will turn off each time.</p>							

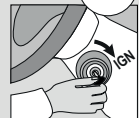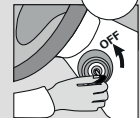

REMOTE STARTER FUNCTIONALITY |



All doors must be closed.



Remote start the vehicle.



Unlock the doors with the remote-starter remote or the OEM remote.



Insert and Turn the key to the Ignition ON/RUN position.



Press the brake pedal.



The vehicle can now be put in to gear and driven.

STANDALONE & THAR-FOR3 INSTALLATION

ADDENDUM - SUGGESTED WIRING CONFIGURATION



ONLY COMPATIBLE WITH AUTOMATIC TRANSMISSION VEHICLES.



Vehicle functions supported in this diagram (functional if equipped)

VEHICLE	YEARS	Immobilizer bypass	T-Harness available (sold separately)	Lock	Unlock	Arm	Disarm	Heated Seats**	Rear Defrost**	RAP Disable	Parking Lights***	Tachometer	Door Status	Trunk Status	Hood Status*	Hand-Brake Status	Foot-Brake Status	Active OEM Remote Start	
FORD																			
Expedition	Push-to-Start 2018-2020	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•

COMPATIBLE MODULE REQUIRED:

2019

QR CODE ON THE LABEL

MANUFACTURED AFTER: 2019

FIRMWARE VERSION

58.[02]

MINIMUM

To add the firmware version and the options, use the **FLASH LINK UPDATER** or **FLASH LINK MOBILE** tool, sold separately.

UNIT OPTION	DESCRIPTION
C1	OEM Remote status (Lock/Unlock) monitoring
D6	Push-to-Start
A11	<p>IF THE VEHICLE IS NOT EQUIPPED WITH FUNCTIONAL HOOD PIN:</p> <p>OFF Hood trigger (Output Status).</p>

- NOTES**
- The vehicles OEM remote and SmartKey are still operable during remote start.
 - **Heated seats The heated seats and rear defrost activate automatically when it cold.
 - **Rear Defrost
 - ***Parking Lights The parking Lights at remote start only.

MANDATORY INSTALL

***HOOD PIN** **HOOD STATUS:** THE HOOD PIN SWITCH MUST BE INSTALLED IF THE VEHICLE CAN BE REMOTE STARTED WITH THE HOOD OPEN, SET FUNCTION A11 TO OFF.

A11 **OFF**

Notice: the installation of safety elements are mandatory. The hood pin is an essential security element and must be installed.

THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.

PARTS REQUIRED (NOT INCLUDED) |


1x **FLASH LINK UPDATER,**
1x **FLASH LINK MANAGER**
SOFTWARE | PROGRAMME
1x Microsoft Windows Computer with Internet connection

OR


1x **FLASH LINK MOBILE**
1x **FLASH LINK MOBILE APP**
Smartphone *Android* or *iOS* with Internet connection (*provider charges may apply*).
1x

MANDATORY

HOOD PIN



REMOTE START SAFETY OVERRIDE SWITCH

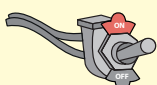
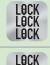






VALET SWITCH


Part #: RSPB available, Sold separately.

Notice: the installation of safety elements are mandatory. The hood pin and the valet switch are essential security elements and must be installed.


STAND ALONE CONFIGURATION |

	Program bypass option	UNIT OPTION	DESCRIPTION
	OEM Remote Stand Alone Remote Starter:	D1.10 	By default, LOCK, LOCK, LOCK
		D1.1 	Par défaut, VERROUILLE,VERROUILLE,VERROUILLE
	Program bypass option with oem remote:	C1	OEM Remote Monitoring
			télécommande d'origine
	Program bypass option with RF KIT antenna:	H1 to H6	Supported RF Kits and select RF Kit
	Program bypass option Vehicle hybrid only:	D4	Hybrid mode (Vehicle hybrid only)


REMOTE STARTER FUNCTIONALITY |




All doors must be closed.

3X 

Press the OEM remote's Lock button 3x to remote-start (or remote-stop) the vehicle.



START 

The vehicle will START.

REMOTE STARTER DIAGNOSTICS

MODULE RED LED


x2 flash : Brake ON

x3 flash : No tach

x4 flash : Ignition before start

x5 flash : Hood Open

REMOTE STARTER WARNING CARD |



CUT THIS WARNING CARD AND STICK IT ON A VISIBLE PLACE:
or use the package RSPB, Sold separately.

WARNING

REMOTE STARTER

THE VEHICLE CAN BE STARTED BY EITHER: PRESSING THE LOCK BUTTON ON THE OEM REMOTE 3 TIMES CONSECUTIVELY OR BY A SMARTPHONE. **TURN ON** THE SAFETY SWITCH LOCATED UNDER THE DASHBOARD BEFORE WORKING ON THE VEHICLE.

DESCRIPTION |

	Parts required (Not included)	PAGE
--	-------------------------------	------

WIRE TO WIRE DIAGRAM

AUTOMATIC TRANSMISSION	1x 7.5 Amp. fuse	Page 3
------------------------	------------------	--------

THARNESSE DIAGRAM



THARNESSE THAR-FOR3 AUTOMATIC TRANSMISSION	1x THAR-FOR3	Page 4
--	--------------	--------

EXPÉDITION




② Parking Lights switch


① Gateway module, Behind OBD-II connector

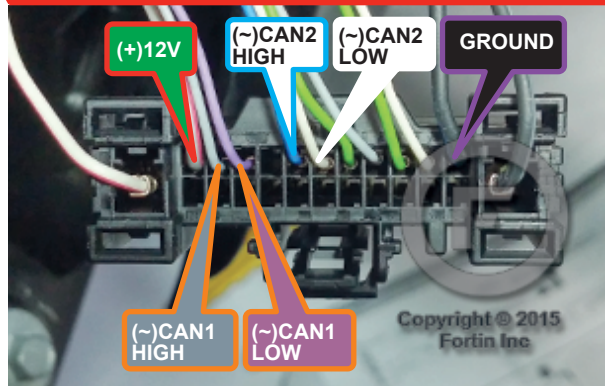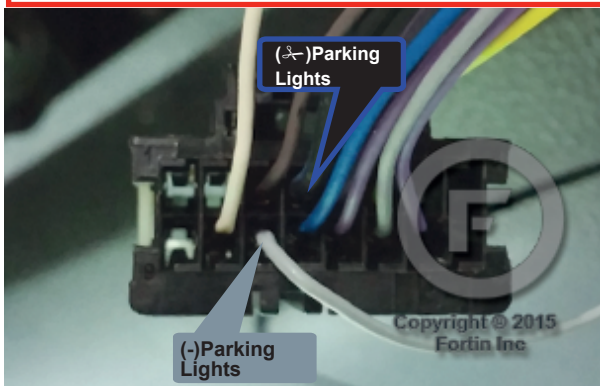

AUTOMATIC TRANSMISSION WIRING CONNECTION |

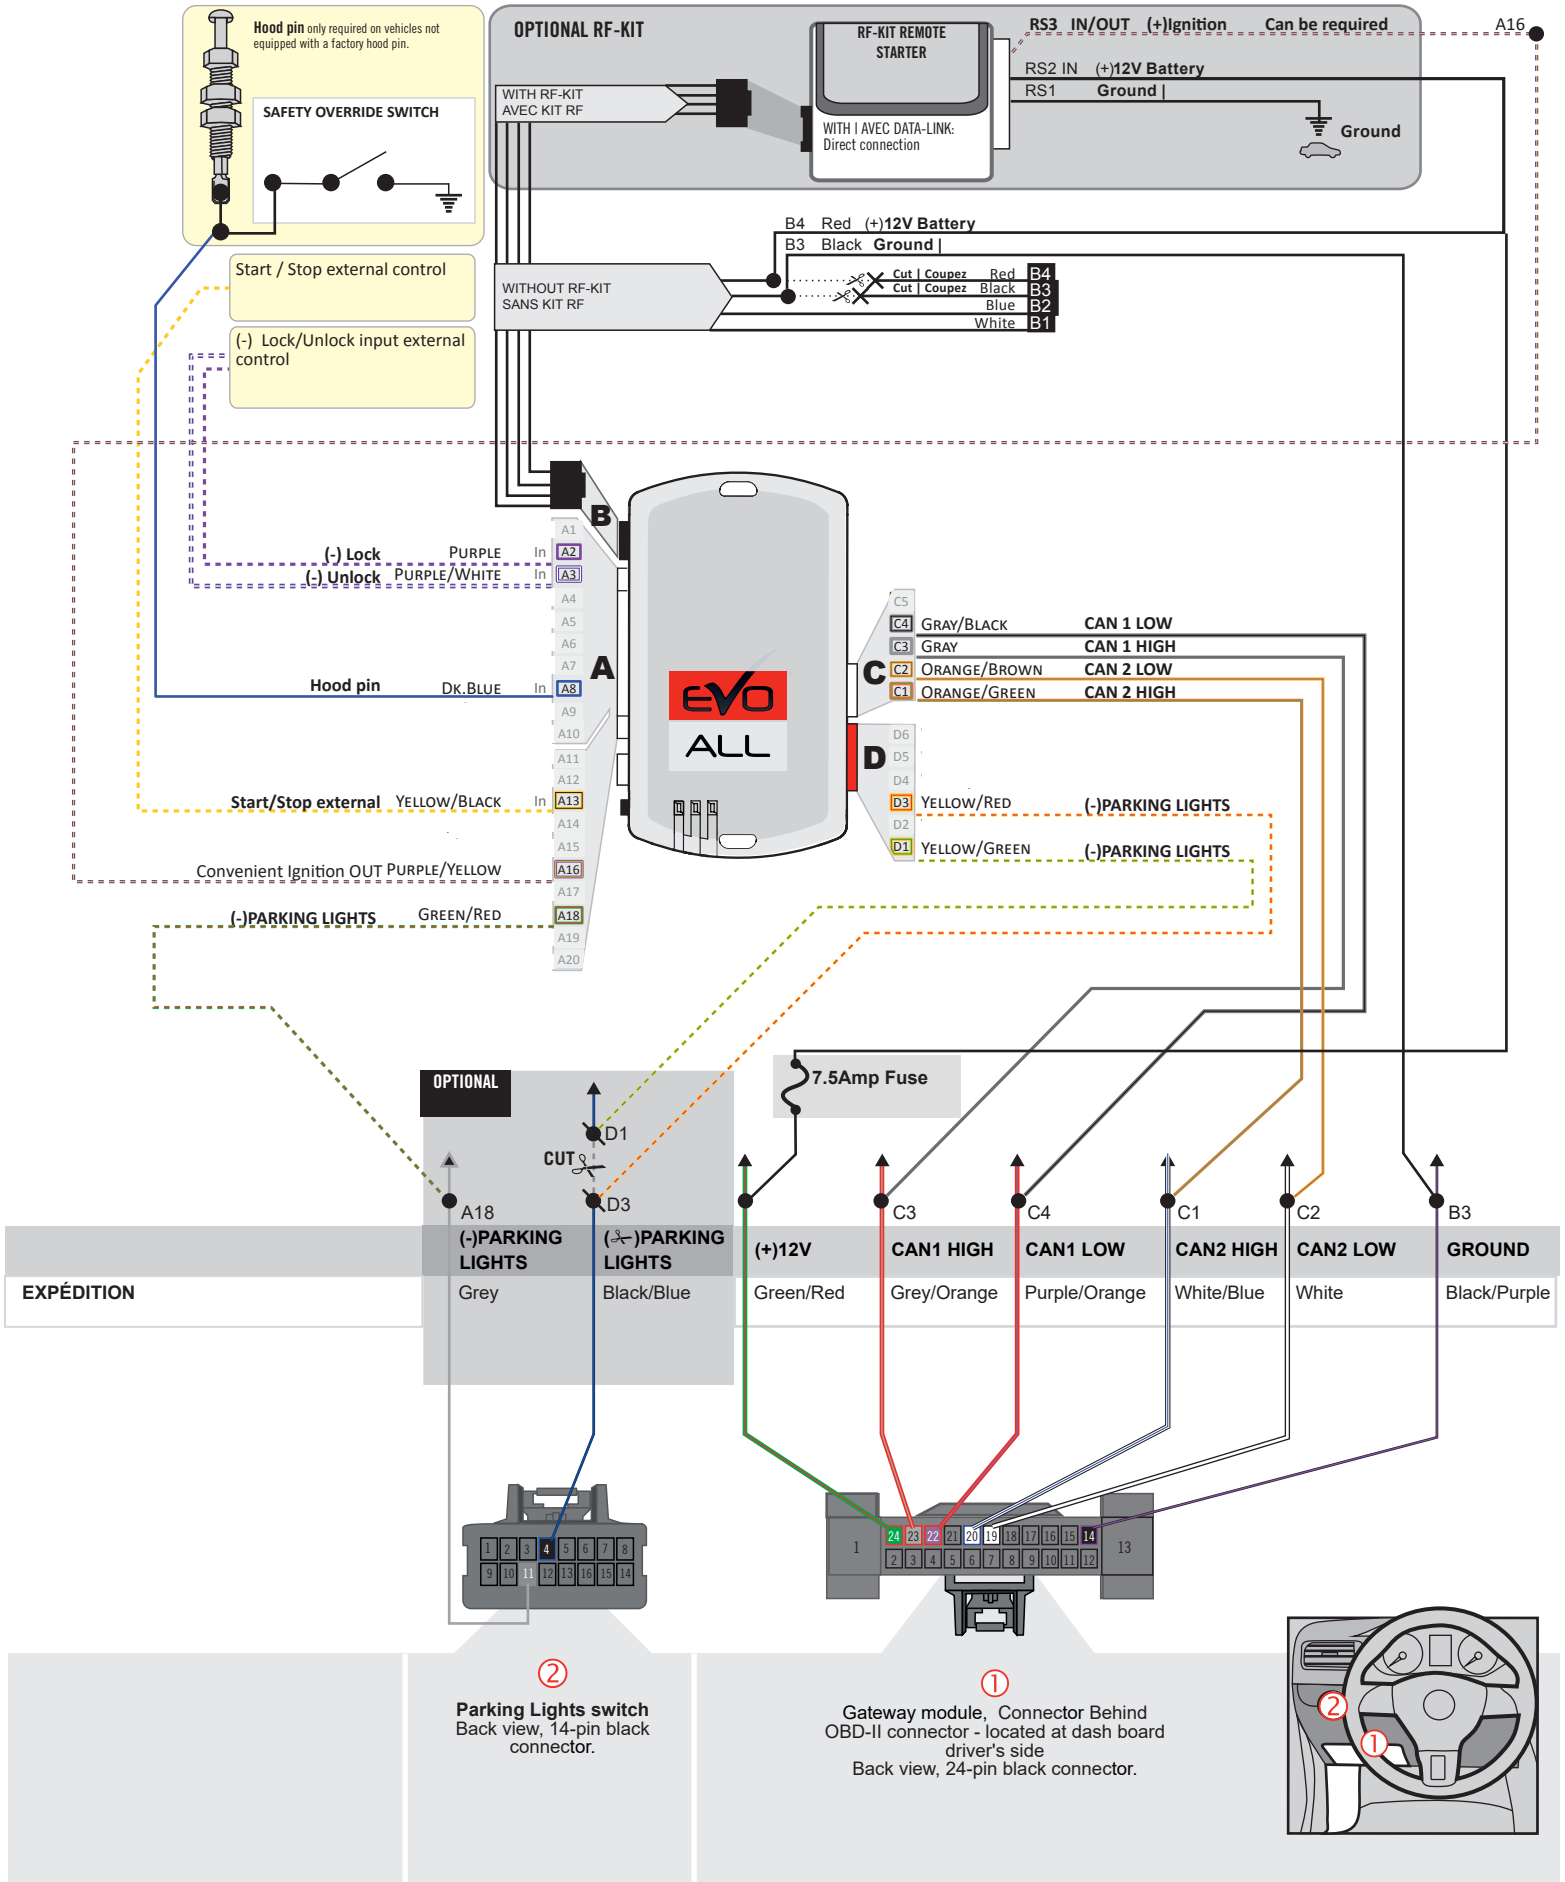

THAR-FOR3 | T-HARNESS - AUTOMATIC TRANSMISSION |

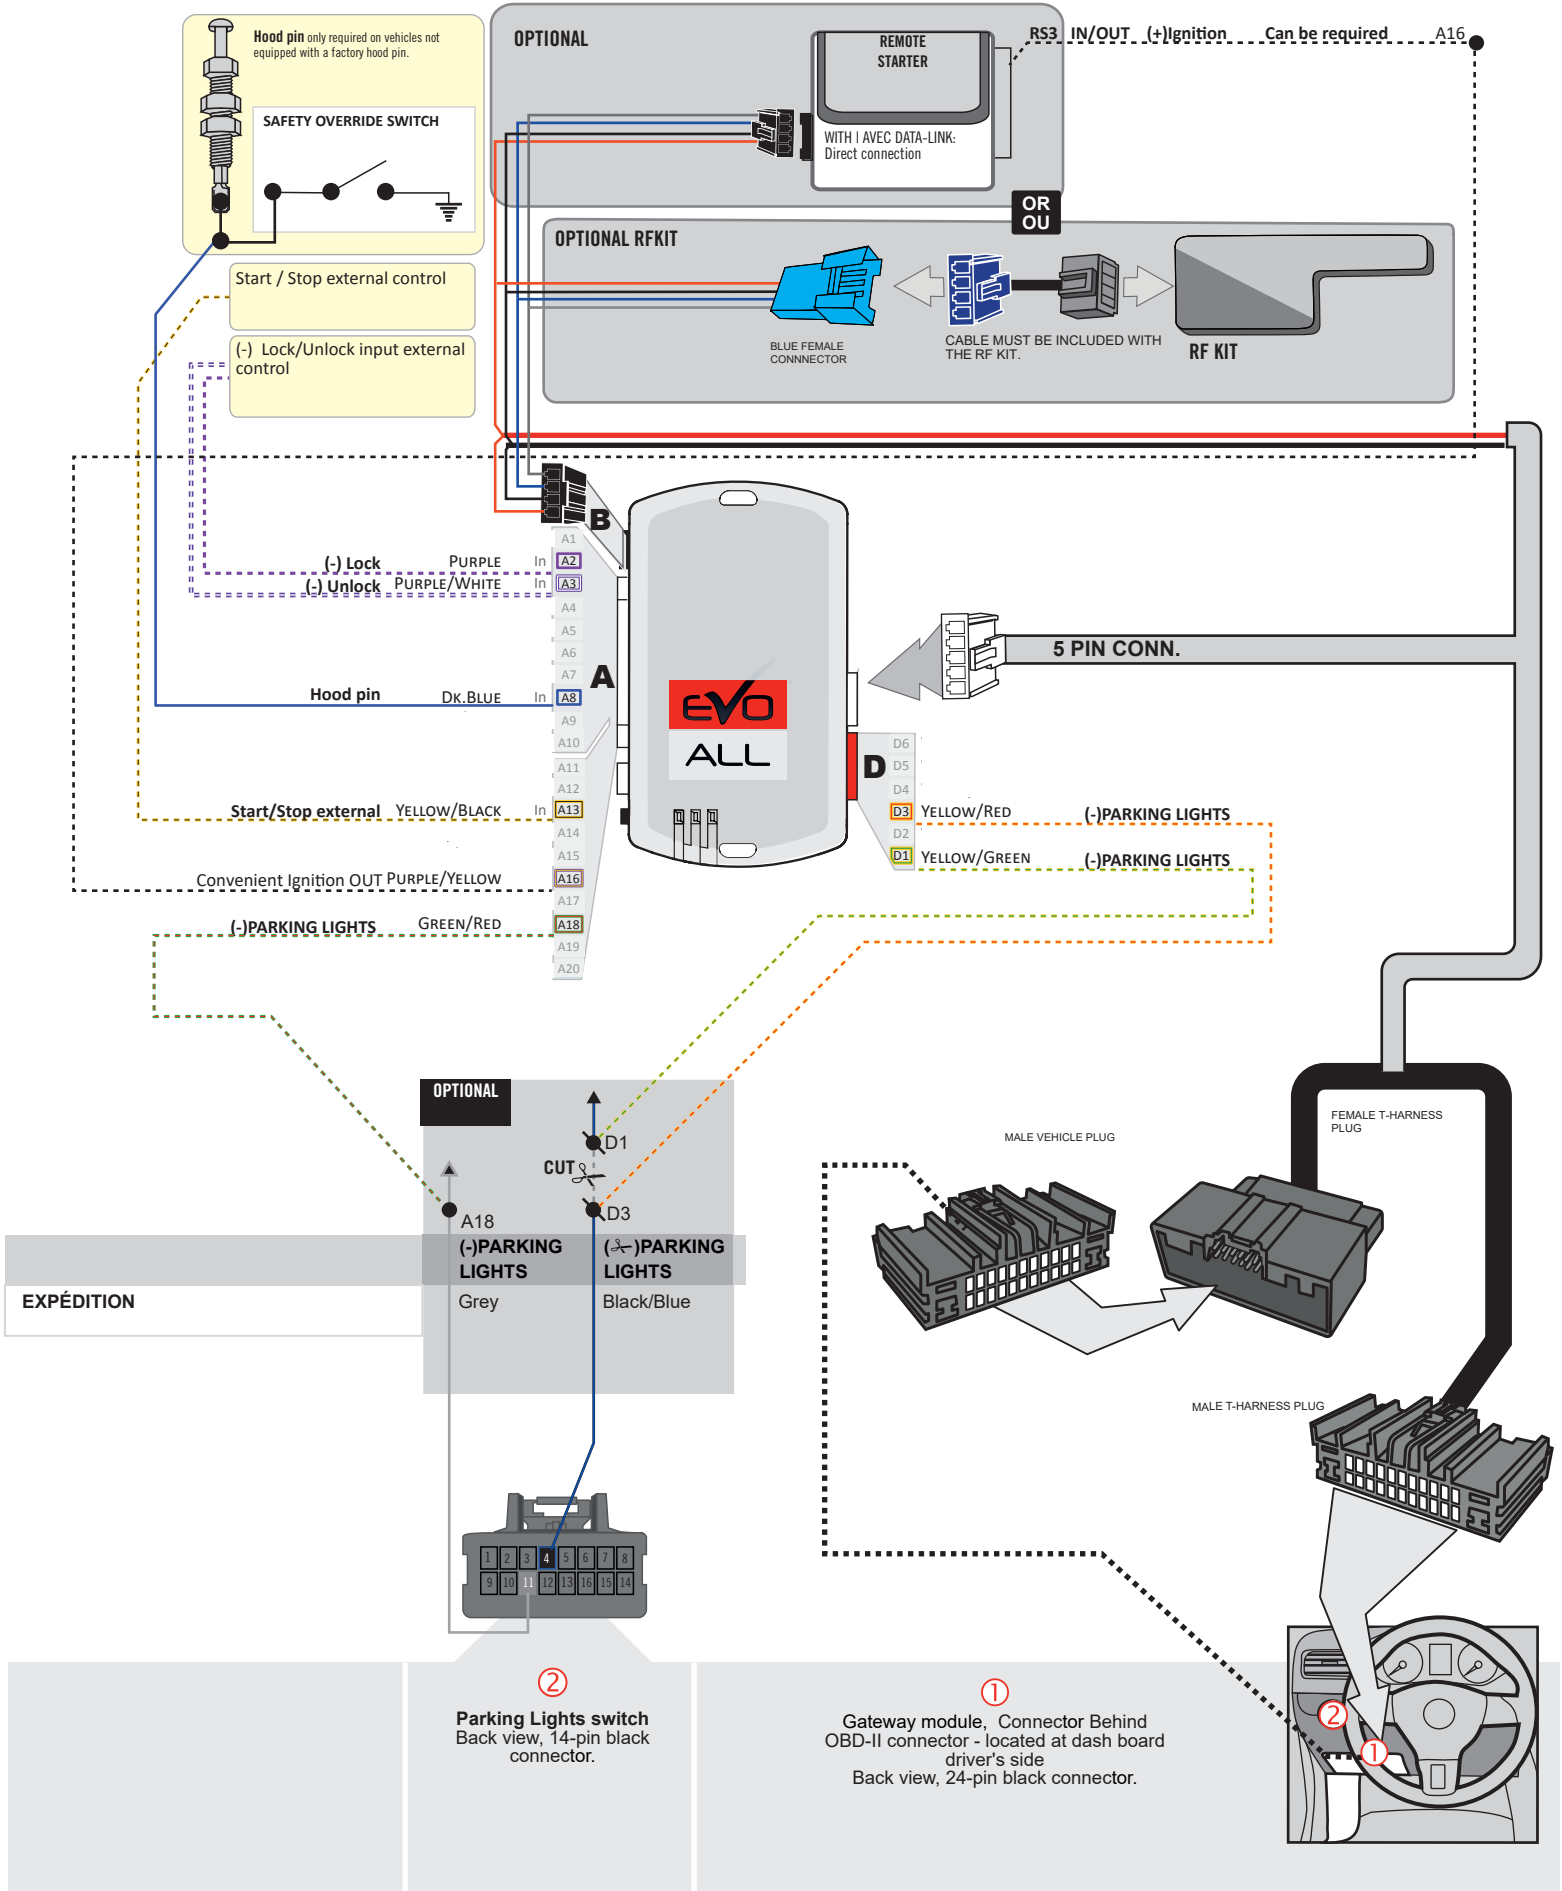



Parts required (not included)


- 1x FLASH LINK UPDATER, SOFTWARE | PROGRAMME
- 1x FLASH LINK MANAGER
- 1x Microsoft Windows Computer with Internet connection

OR

- 1x FLASH LINK MOBILE
- 1x FLASH LINK MOBILE APP
- Smartphone Android or iOS with Internet connection (Internet provider charges may apply)

BEFORE PROGRAMMING SET THE UNIT OPTIONS AND SAVE.


1

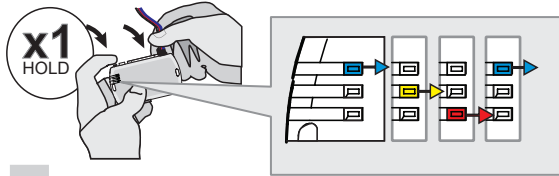

Press and hold the programming button:
Insert the 4-Pin (Data-Link) connector.

↳ The Blue, Red, Yellow and Blue & Red LEDs will alternatively illuminate.


2

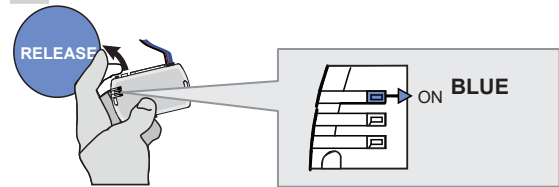

Release the programming button when the LED is BLUE.


If the LED is not solid BLUE disconnect the 4-Pin connector (Data-Link) and go back to step 1.

3

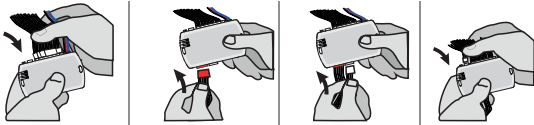

Insert the required remaining connectors.

4

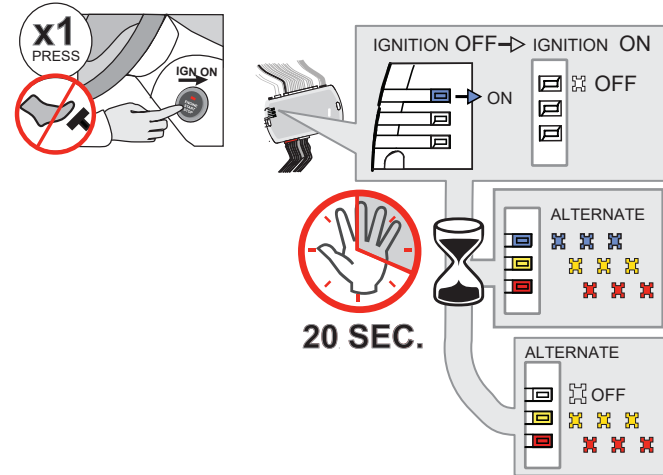

Do not press the brake pedal.
Press the Push-to-Start button once to turn on the ignition.

↳ The BLUE LED will turn OFF.


↳ The BLUE, YELLOW and RED LEDs will alternate.

Wait, at least 20 seconds, do not disconnect the modules or turn off the ignition.

↳ The RED and YELLOW LEDs will alternate.

Make sure that the DELs are flashing RED and YELLOW before continuing programming.

5

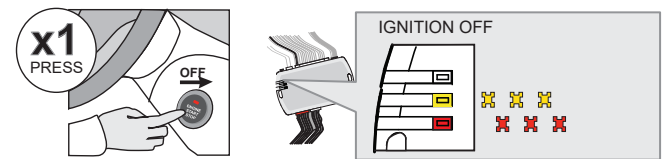

Press the Push-to-Start button once to turn off the ignition.

↳ The RED and YELLOW LEDs alternate.

KEY BYPASS PROGRAMMING PROCEDURE 2/2 |

6

Disconnect all the connectors and after the Data-Link (4-pins) connector.

7

Microsoft Windows Computer with Internet connection*

OR


Smartphone* (Internet provider charges may apply)

Use the tool: FLASH LINK UPDATER or FLASH LINK MOBILE to visit the DCryptor menu.

*Parts required (not included)

8

AFTER DCRYPTOR PROGRAMMING COMPLETED
Go back to the vehicle and **reconnect** the 4-Pin (Data-Link) connector and after, all the remaining connector.

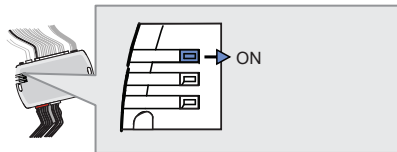

↳ The BLUE LED will turn ON.

9

x1 PRESS

IGNITION OFF → IGNITION ON

ALTERNATE

20 SEC.

FLASH RAPIDLY

Do not press the brake pedal. **Press** the Push-to-Start button once to turn on the ignition.

↳ The RED and YELLOW LEDs will turn ON.

Wait, at least 20 seconds, do not disconnect the modules or turn off the ignition.

↳ The BLUE LED will flash rapidly.

10

x1 PRESS

IGNITION ON → IGNITION OFF

Press the Push-to-Start button once to turn off the ignition.

↳ The BLUE will turn OFF.



The module is now programmed.

OPTIONAL RF-KIT PROGRAMMING |

PROGRAM BYPASS OPTION



Program bypass option:

H2

Supported RF-KITS enable

H2 Fortin 2

OPTIONAL FORTIN RF KIT SERIES 4 OR SERIES 9 PROGRAMMING



The module must be programmed on the vehicle.








MAKE SURE THE IGNITION KEY HAS BEEN IN THE OFF POSITION FOR AT LEAST 5 SECONDS.

<p>1</p> <p>ON x1 PRESS</p> <p>Do not press the brake pedal. Press the Push-to-Start button once to turn on the ignition.</p>	<p>2</p> <p>OFF x1 PRESS</p> <p>Press the Push-to-Start button once to turn off the ignition.</p>	<p>3</p> <p>ON x1 PRESS</p> <p>Do not press the brake pedal. Press the Push-to-Start button once to turn on the ignition.</p>	<p>4</p> <p>4X BRAKES</p> <p>x4 PRESS</p> <p>Press and release the brake pedal four times.</p>	<p>5</p> <p>ON EACH TRANSMITTER</p> <p>4 BUTTONS</p> <p>[-] PRESS AND RELEASE</p> <p>[+] PRESS AND RELEASE</p> <p>1 BUTTON</p> <p>PRESS APPROX. 12 SEC. AND WAIT FOR THE BLUE LED TO TURN OFF THEN BACK ON SOLID THEN RELEASE.</p>	<p>6</p> <p>OFF x1 PRESS</p> <p>Press the Push-to-Start button once to turn off the ignition.</p>	<p>7</p> <p>ON x1 PRESS</p> <p>Do not press the brake pedal. Press the Push-to-Start button once to turn on the ignition and leave it ON for 5 sec..</p>	<p>8</p> <p>OFF x1 PRESS</p> <p>Press the Push-to-Start button once to turn off the ignition.</p>
<p>The YELLOW LED will turn ON solid.</p>	<p>The YELLOW LED will turn Off.</p>	<p>The LED will turn ON solide.</p>	<p>The LED will flash rapidly.</p>	<p>The LED will turn off each time.</p>	<p>The LED will turn Off.</p>	<p>The LED will turn Off.</p>	<p>The LED will turn Off.</p>
<p>The YELLOW LED will turn ON solid.</p>	<p>The YELLOW LED will turn Off.</p>	<p>The YELLOW LED will turn ON solid.</p>	<p>The LED will flash rapidly.</p>	<p>The LED will flash rapidly.</p>	<p>The LED will turn Off.</p>	<p>The LED will turn Off.</p>	<p>The LED will turn Off.</p>

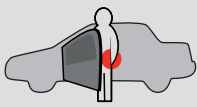

REMOTE STARTER FUNCTIONALITY |

 <p>Start</p> <p>All doors must be closed.</p> <p>Remote start the vehicle.</p>	 <p>UNLOCK</p> <p>Unlock the doors with either:</p> <ul style="list-style-type: none"> • The OEM remote • The remote-starter remote • Or the proximity remote 	 <p>Enter the vehicle with the SMART-KEY.</p>	 <p>DO NOT PRESS THE BRAKE PEDAL.</p> <p>Press and release the Push-to-Start button once.</p>	 <p>Press the brake pedal. The vehicle can now be put in to gear and driven.</p> <p>If the Smart-Key is not detected the vehicle will shut down.</p>
--	---	--	---	---

STANDALONE & THAR-FOR3 INSTALLATION

ADDENDUM - SUGGESTED WIRING CONFIGURATION



ONLY COMPATIBLE WITH AUTOMATIC TRANSMISSION VEHICLES.

VEHICLE	YEARS	Vehicle functions supported in this diagram (functional if equipped)																
		Immobilizer bypass	Lock	Unlock	Armn	Disarm	RAP Disable	Parking Lights***	Tachometer	Heated seats**	Heated Mirrors**	Rear defrost	Door Status	Trunk Status	Hood Status*	Hand-Brake Status	Foot-Brake Status	Active OEM Remote Start
FORD Explorer	Key 2020	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•

COMPATIBLE MODULE REQUIRED:

QR CODE ON THE LABEL
MANUFACTURED AFTER: 2019

FIRMWARE VERSION
58.[02]
MINIMUM

To add the firmware version and the options, use the **FLASH LINK UPDATER** or **FLASH LINK MOBILE** tool, sold separately.

UNIT OPTION	DESCRIPTION
C1	OEM Remote status (Lock/Unlock) monitoring
A11 OFF	Hood trigger (Output Status).

NOTES

- The vehicles OEM remote and SmartKey are still operable during remote start.
- **Heatd seats The heated seats and rear defrost activate automatically when it cold.
- **Rear Defrost
- ***Parking Lights The parking Lights at remote start only.
- The vehicle must be equipped with the OEM remote with the door locks.

MANDATORY INSTALL

*HOOD PIN HOOD STATUS: THE HOOD PIN SWITCH MUST BE INSTALLED IF THE VEHICLE CAN BE REMOTE STARTED WITH THE HOOD OPEN, SET FUNCTION A11 TO OFF.

A11 **OFF**

Notice: the installation of safety elements are mandatory. The hood pin is an essential security element and must be installed.

THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.


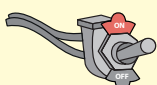
PARTS REQUIRED (NOT INCLUDED)

1x **FLASH LINK UPDATER**
 1x **FLASH LINK MANAGER**
SOFTWARE | PROGRAMME
 1x Microsoft Windows Computer with Internet connection

OR

1x **FLASH LINK MOBILE**
 1x **FLASH LINK MOBILE APP**
Smartphone Android or iOS with Internet connection (provider charges may apply).

MANDATORY


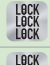




HOOD PIN  REMOTE START SAFETY OVERRIDE SWITCH 

VALET SWITCH


Part #: RSPB available, Sold separately.

Notice: the installation of safety elements are mandatory. The hood pin and the valet switch are essential security elements and must be installed.


STAND ALONE CONFIGURATION

	Program bypass option	UNIT OPTION	DESCRIPTION
	OEM Remote Stand Alone Remote Starter:	OR D1.10  D1.1 	By default, LOCK, LOCK, LOCK Par défaut, VERROUILLE, VERROUILLE, VERROUILLE
	Program bypass option with oem remote:	C1	OEM Remote Monitoring
	Program bypass option with RF KIT antenna:	H1 to H6	Supported RF Kits and select RF Kit
	Program bypass option Vehicle hybrid only:	D4	Hybrid mode (Vehicle hybrid only)


REMOTE STARTER FUNCTIONALITY




All doors must be closed.

3X 

Press the OEM remote's Lock button 3x to remote-start (or remote-stop) the vehicle.




START 

The vehicle will START.

REMOTE STARTER DIAGNOSTICS
MODULE RED LED

x2 flash :	Brake ON
x3 flash :	No tach
x4 flash :	Ignition before start
x5 flash :	Hood Open

REMOTE STARTER WARNING CARD



CUT THIS WARNING CARD AND STICK IT ON A VISIBLE PLACE:
 or use the package RSPB, Sold separately.

WARNING

REMOTE STARTER

THE VEHICLE CAN BE STARTED BY EITHER: PRESSING THE LOCK BUTTON ON THE OEM REMOTE 3 TIMES CONSECUTIVELY OR BY A SMARTPHONE. **TURN ON** THE SAFETY SWITCH LOCATED UNDER THE DASHBOARD BEFORE WORKING ON THE VEHICLE.

DESCRIPTION

	Parts required (Not included)	PAGE
--	-------------------------------	------


WIRE TO WIRE DIAGRAM

AUTOMATIC TRANSMISSION	1x 7.5 Amp. fuse	Page 3
------------------------	------------------	--------



THARNES DIAGRAM

THARNES THAR-FOR3 AUTOMATIC TRANSMISSION	1x THAR-FOR3	Page 4
--	--------------	--------


① Gateway module, located at dash board driver's side,

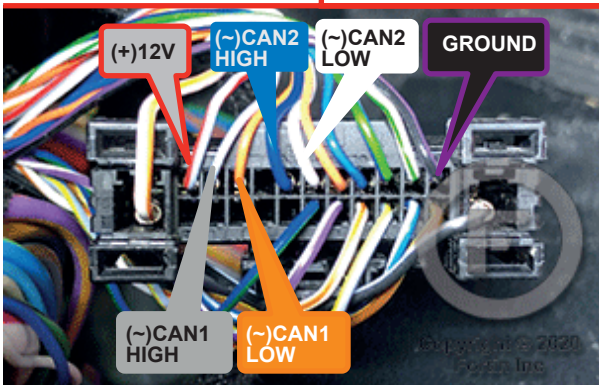





② Fuse box

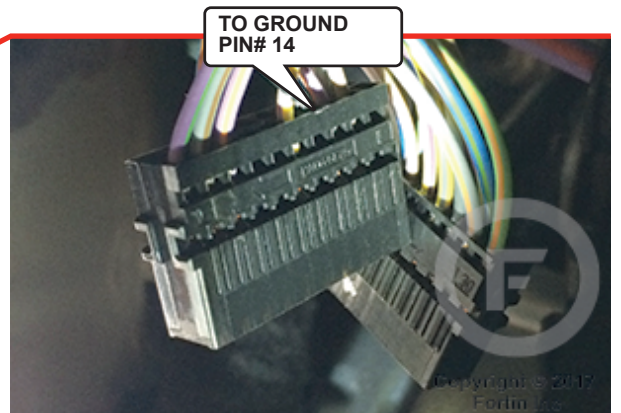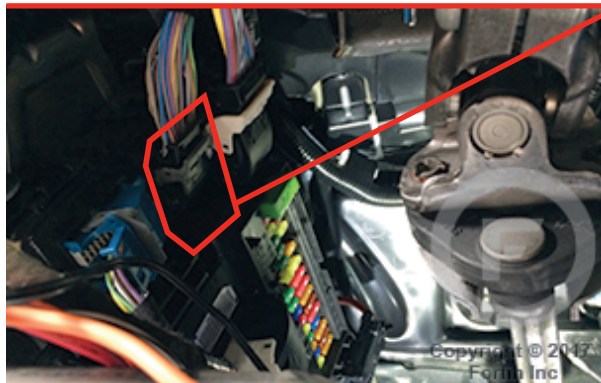


AUTOMATIC TRANSMISSION WIRING CONNECTION |

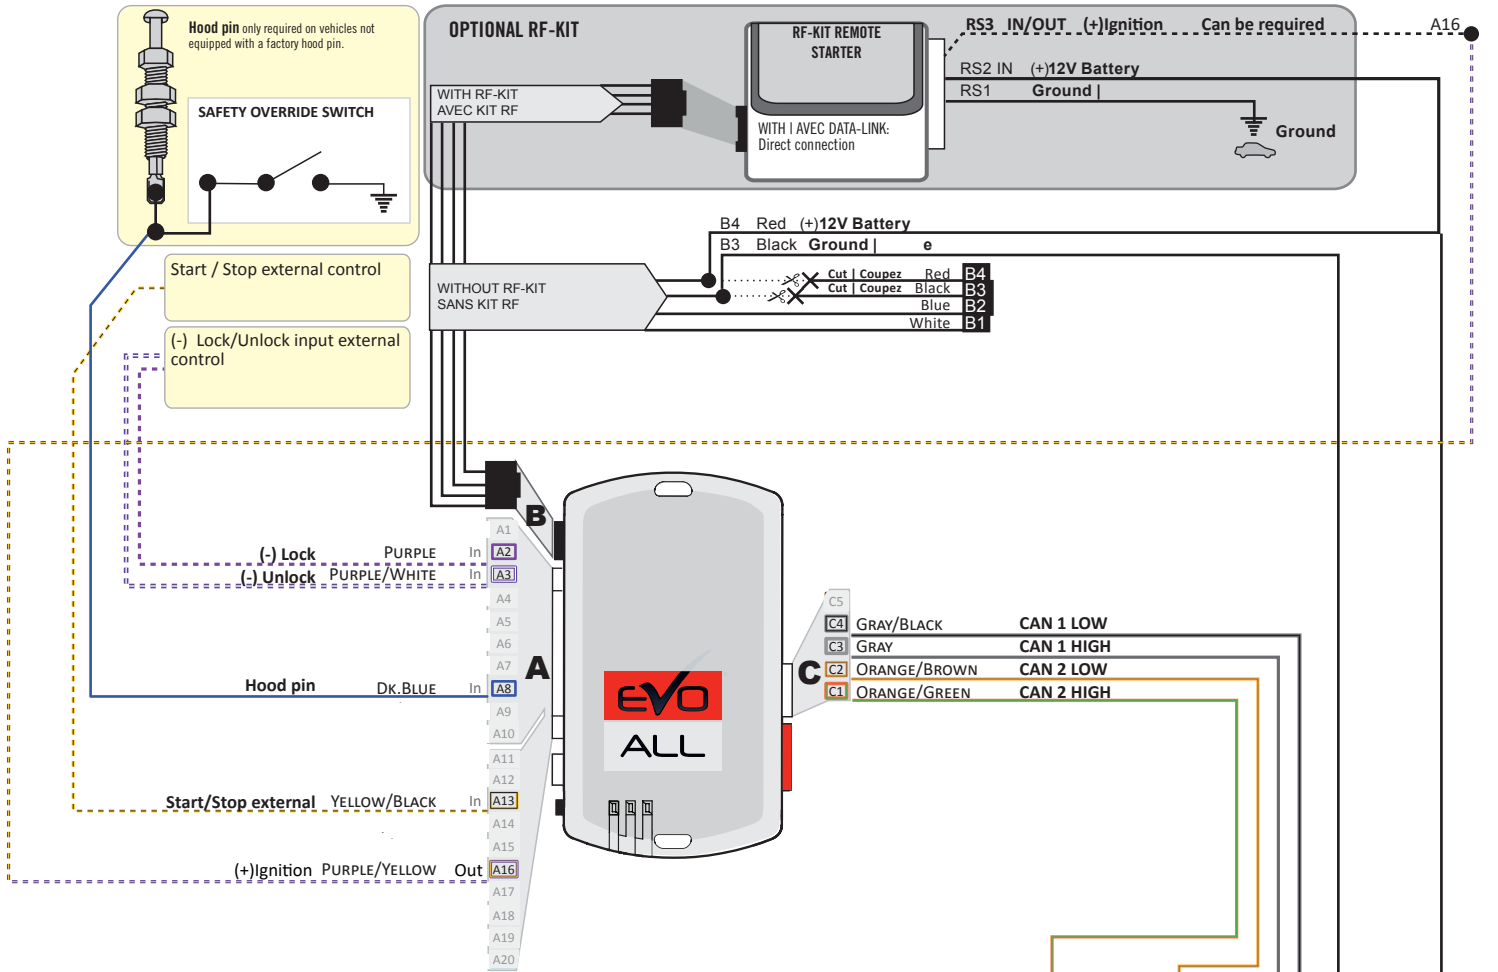


EXPLORER

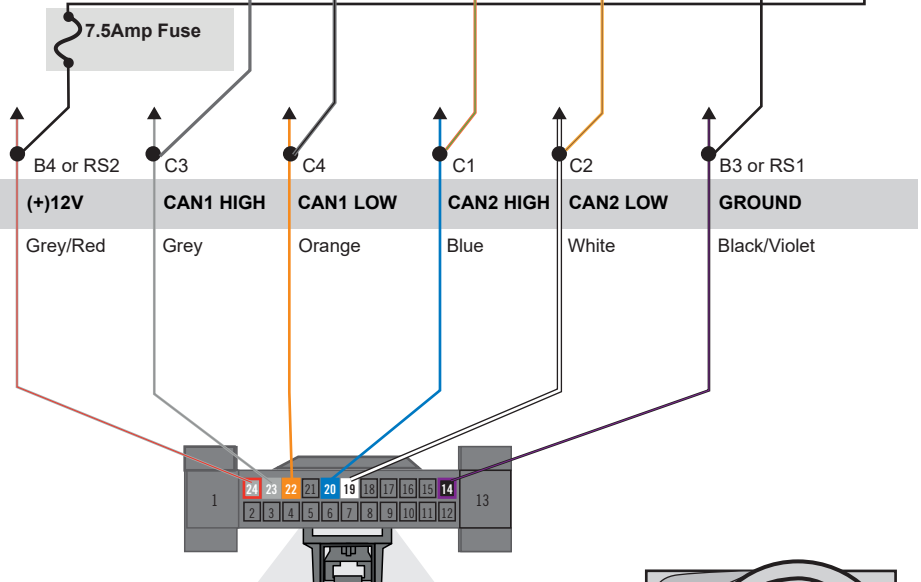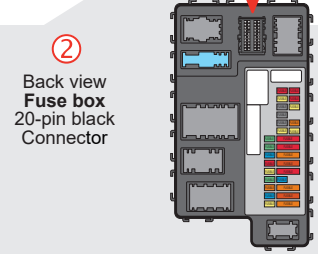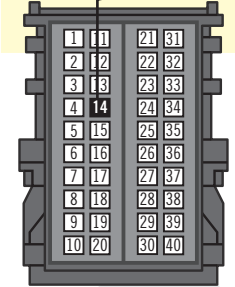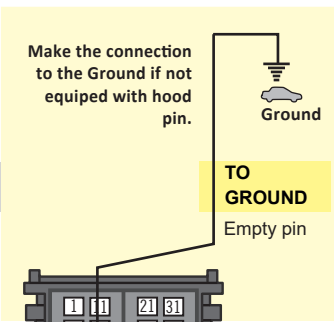





① Gateway module, Behind OBD-II connector - located at dash board driver's side - Back view, 24-pin black connector.

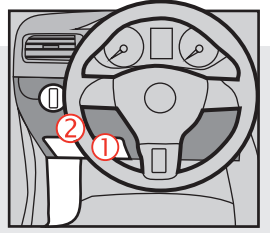

THAR-FOR3 | T-HARNESS - AUTOMATIC TRANSMISSION |

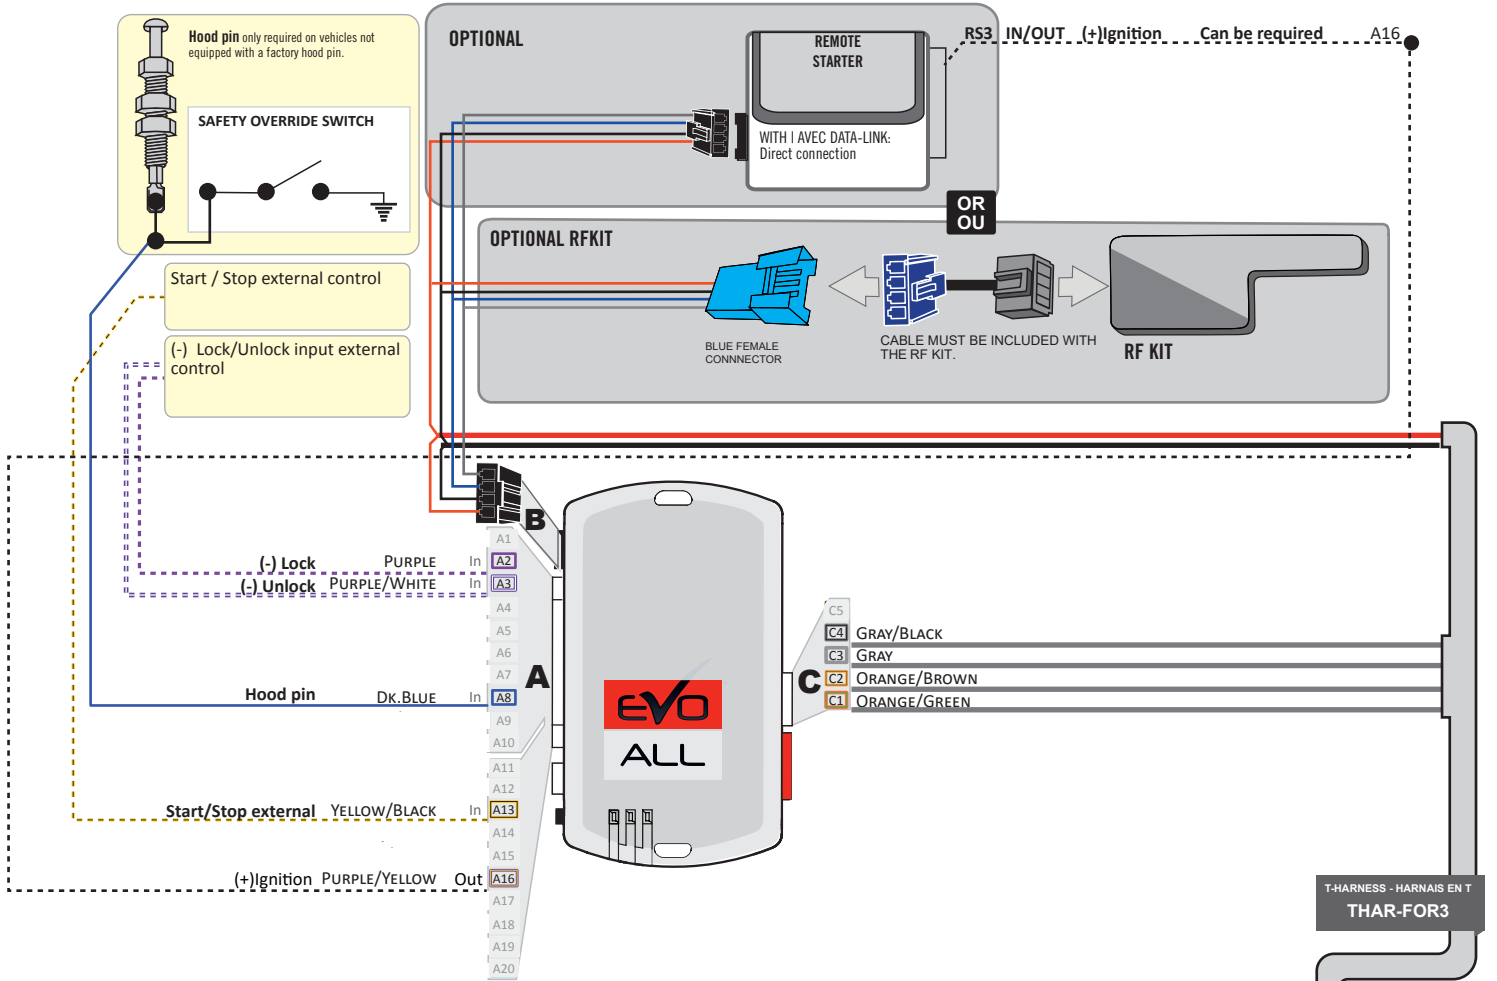

EXPLORER

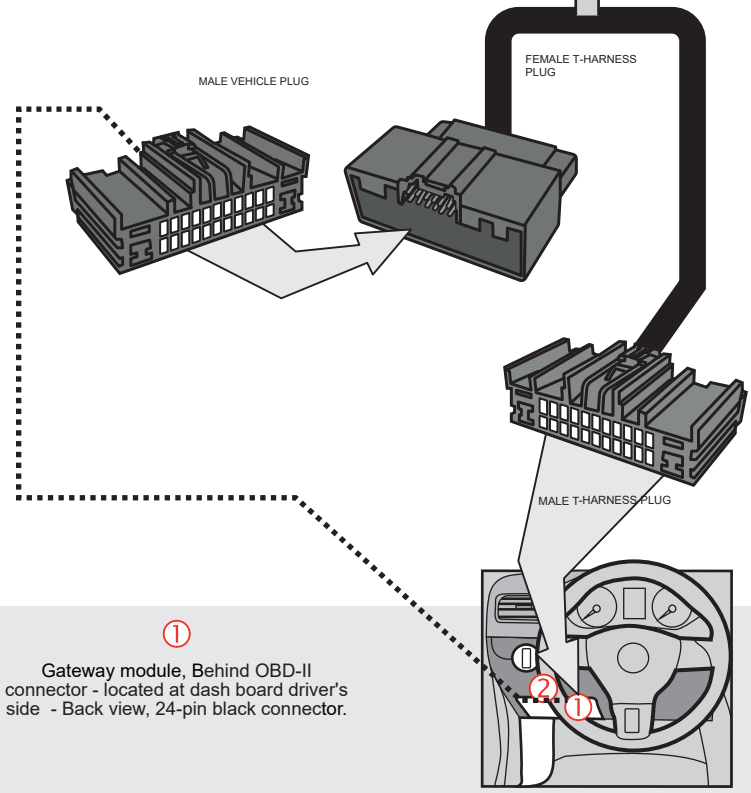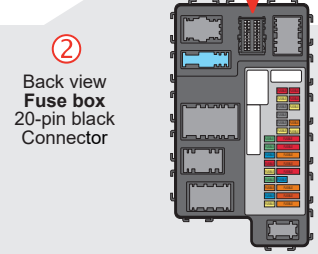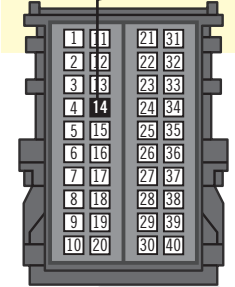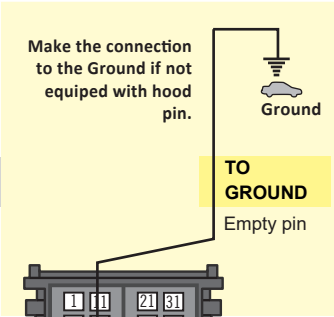



Parts required (not included)


- 1x FLASH LINK UPDATER, SOFTWARE | PROGRAMME
- 1x FLASH LINK MANAGER
- 1x Microsoft Windows Computer with Internet connection

OR
OU

- 1x FLASH LINK MOBILE
- 1x FLASH LINK MOBILE APP
- Smartphone Android or iOS with Internet connection (Internet provider charges may apply)

BEFORE PROGRAMMING SET THE UNIT OPTIONS AND SAVE.


1

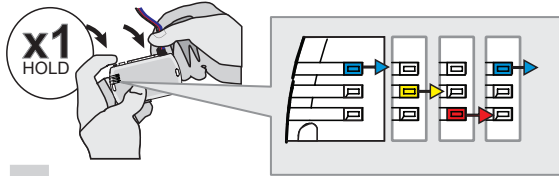

Press and hold the programming button:
Insert the 4-Pin (Data-Link) connector.


↳ The Blue, Red, Yellow and Blue & Red LEDs will alternatively illuminate.

2

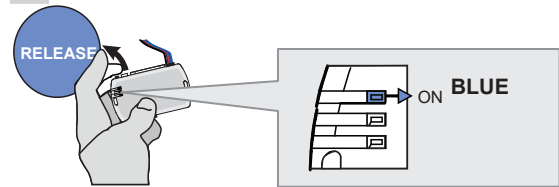


Release the programming button when the LED is BLUE.

 If the LED is not solid BLUE disconnect the 4-Pin connector (Data-Link) and go back to step 1.




3

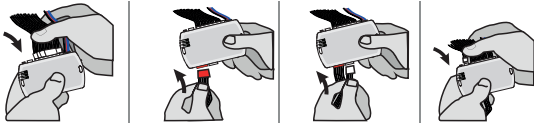

Insert the required remaining connectors.

4

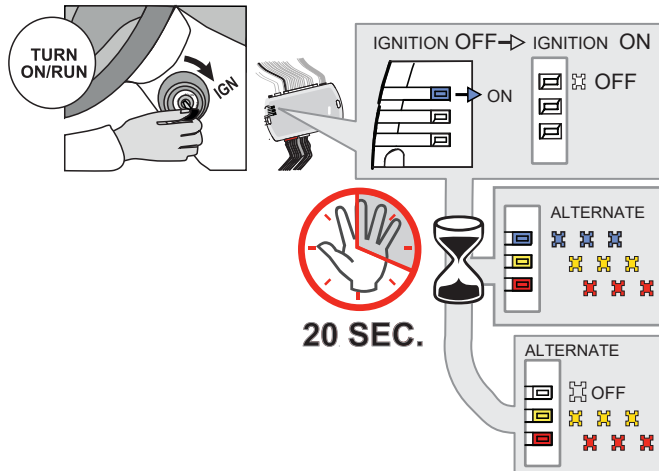

Turn the key to the Ignition ON/RUN position.

 
↳ The BLUE LED will turn OFF.

↳ The BLUE, YELLOW and RED LEDs will alternate.


Wait, at least 20 seconds, do not disconnect the modules or turn off the ignition.

↳ The RED and YELLOW LEDs will alternate.

Make sure that the DELs are flashing RED and YELLOW before continuing programming.



5

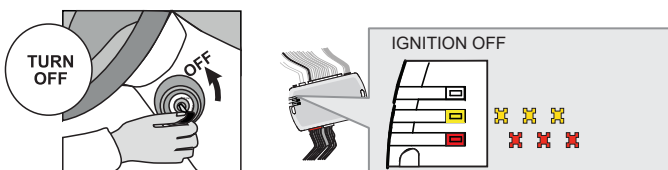


Turn the key to the OFF position.

↳ The RED and YELLOW LEDs alternate.


KEY BYPASS PROGRAMMING PROCEDURE 2/2 |

6

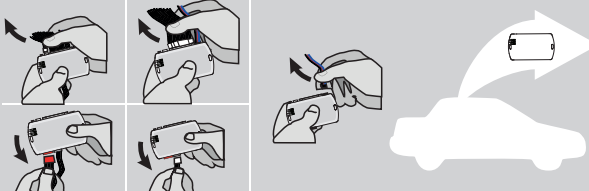

Disconnect all the connectors and after the Data-Link (4-pins) connector.

7



Microsoft Windows Computer with Internet connection*

FLASH LINK UPDATER* **FLASH LINK MANAGER***
SOFTWARE | PROGRAMME

OR


Smartphone* (Internet provider charges may apply)

VEHICLE'S OBDII CONNECTOR **FLASH LINK MOBILE***

Use the tool: FLASH LINK UPDATER or FLASH LINK MOBILE to visit the DCryptor menu.

*Parts required (not included)

8

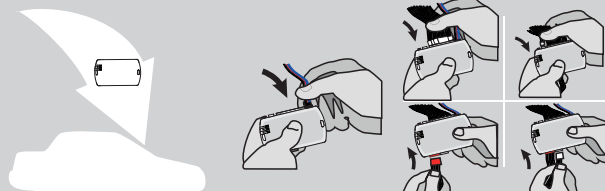


AFTER DCRYPTOR PROGRAMMING COMPLETED
Go back to the vehicle and reconnect the 4-Pin (Data-Link) connector and after, all the remaining connector.



↳ The BLUE LED will turn ON.

9

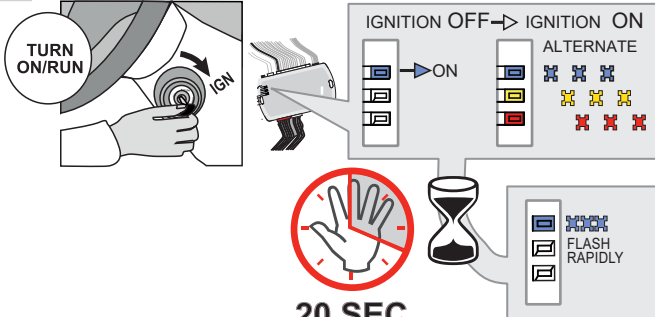

TURN ON/RUN

IGNITION OFF → IGNITION ON

ALTERNATE

↳ The RED and YELLOW LEDs will turn ON.


↳ The BLUE LED will flash rapidly.

Wait, at least 20 seconds, do not disconnect the modules or turn off the ignition.

20 SEC.

FLASH RAPIDLY


10

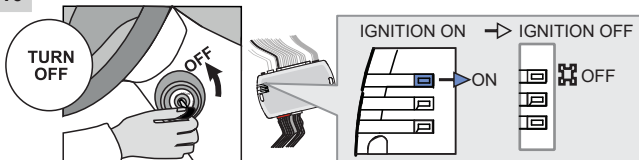

TURN OFF

IGNITION ON → IGNITION OFF

↳ The BLUE will turn OFF.



The module is now programmed.

OPTIONAL RF-KIT PROGRAMMING |

PROGRAM BYPASS OPTION



Program bypass option:

H2


Supported RF-KITS enable

H2 Fortin 2

OPTIONAL FORTIN RF KIT SERIES 4 OR SERIES 9 PROGRAMMING



The module must be programmed on the vehicle.

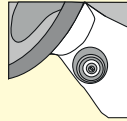

MAKE SURE THE IGNITION KEY HAS BEEN IN THE OFF POSITION FOR AT LEAST 5 SECONDS.

<p>1</p> <p>ON TURN ON/RUN</p> <p>Turn the key to the ON/RUN position.</p>	<p>2</p> <p>OFF TURN OFF</p> <p>Turn the ignition to the OFF position.</p>	<p>3</p> <p>ON TURN ON/RUN</p> <p>Turn the key to the ON/RUN position.</p>	<p>4</p> <p>4X BRAKES</p> <p>X4 PRESS</p> <p>Press and release the brake pedal four times.</p>	<p>5</p> <p>ON EACH TRANSMITTER</p> <p>4 BUTTONS</p> <p>[-] PRESS AND RELEASE</p> <p>→ PRESS AND RELEASE</p> <p>1 BUTTON</p> <p>PRESS APPROX. 12 SEC. AND WAIT FOR THE BLUE LED TO TURN OFF THEN BACK ON SOLID THEN RELEASE.</p>	<p>6</p> <p>OFF TURN OFF</p> <p>Turn the ignition to the OFF position.</p>	<p>7</p> <p>ON TURN ON/RUN</p> <p>Turn the key to the ON/RUN position and leave it ON for 5 sec.</p>	<p>8</p> <p>OFF TURN OFF</p> <p>Turn the ignition to the OFF position.</p>
<p>The YELLOW LED will turn ON solid.</p>	<p>The YELLOW LED will turn Off.</p>	<p>The LED will turn ON solide.</p> <p>The YELLOW LED will turn ON solid.</p>	<p>The LED will flash rapidly.</p> <p>The LED will turn off each time.</p>	<p>The LED will turn off each time.</p> <p>The LED will flash rapidly.</p>	<p>The LED will turn Off.</p>	<p>The LED will turn Off.</p> <p>The YELLOW LED will turn ON solid.</p>	<p>The LED will turn Off.</p>
<p>The 3 LED will turn ON solid.</p>	<p>The 3 LED will turn ON solid.</p>	<p>The 3 LED will turn ON solid.</p>	<p>The 3 LED will turn ON solid.</p>	<p>The 3 LED will flash rapidly.</p> <p>The 3 LED will turn off each time.</p>	<p>The 3 LED will turn off.</p>	<p>The 3 LED will turn ON solid.</p>	<p>The 3 LED will turn Off.</p>



REMOTE STARTER FUNCTIONALITY |



All doors must be closed.



Remote start the vehicle.



Unlock the doors with the remote-starter remote or the OEM remote.



Insert and Turn the key to the Ignition ON/RUN position.



Press the brake pedal.



The vehicle can now be put in to gear and driven.


STANDALONE & THAR-FOR3 INSTALLATION

ADDENDUM - SUGGESTED WIRING CONFIGURATION


ONLY COMPATIBLE WITH AUTOMATIC TRANSMISSION VEHICLES.

Vehicle functions supported in this diagram (functional if equipped)

VEHICLE	YEARS	Immobilizer bypass	Lock	Unlock	Arm	Disarm	Heated Seats**	Rear Defrost**	RAP Disable	Parking Lights***	Tachometer	Door Status	Trunk Status	Hood Status*	Hand-Brake Status	Foot-Brake Status	Active OEM Remote Start
FORD Explorer	Push-to-Start 2020	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•

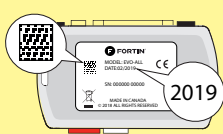
COMPATIBLE MODULE REQUIRED:
QR CODE ON THE LABEL
 MANUFACTURED AFTER: 2019

FIRMWARE VERSION

58.[02]
 MINIMUM

 To add the firmware version and the options, use the **FLASH LINK UPDATER** or **FLASH LINK MOBILE** tool, sold separately.

Program bypass option:
UNIT OPTION
DESCRIPTION
C1

OEM Remote status (Lock/Unlock) monitoring

D6

Push-to-Start

IF THE VEHICLE IS NOT EQUIPPED WITH FUNCTIONAL HOOD PIN:
A11
OFF

Hood trigger (Output Status).

NOTES

The vehicles OEM remote and SmartKey are still operable during remote start.

****Heated seats** The heated seats and rear defrost activate automatically when it cold.
****Rear Defrost**
*****Parking Lights** The parking Lights at remote start only.

MANDATORY INSTALL
***HOOD PIN**

HOOD STATUS: THE HOOD PIN SWITCH MUST BE INSTALLED IF THE VEHICLE CAN BE REMOTE STARTED WITH THE HOOD OPEN, SET FUNCTION A11 TO OFF.

A11
OFF
Notice: the installation of safety elements are mandatory. The hood pin is an essential security element and must be installed.

THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.

PARTS REQUIRED (NOT INCLUDED) |


1x **FLASH LINK UPDATER,**
1x **FLASH LINK MANAGER**
SOFTWARE | PROGRAMME
1x Microsoft Windows Computer with Internet connection

OR


1x **FLASH LINK MOBILE**
1x **FLASH LINK MOBILE APP**
Smartphone *Android* or *iOS* with Internet connection (*provider charges may apply*).
1x

MANDATORY

HOOD PIN



REMOTE START SAFETY OVERRIDE SWITCH

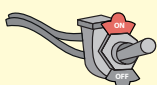
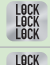






VALET SWITCH


Part #: RSPB available, Sold separately.

Notice: the installation of safety elements are mandatory. The hood pin and the valet switch are essential security elements and must be installed.


STAND ALONE CONFIGURATION |

	Program bypass option	UNIT OPTION	DESCRIPTION
	OEM Remote Stand Alone Remote Starter:	D1.10  D1.1 	By default, LOCK, LOCK, LOCK Par défaut, VERROUILLE, VERROUILLE, VERROUILLE
	Program bypass option with oem remote:	C1	OEM Remote Monitoring
	Program bypass option with RF KIT antenna:	H1 to H6	Supported RF Kits and select RF Kit
	Program bypass option Vehicle hybrid only:	D4	Hybrid mode (Vehicle hybrid only)


REMOTE STARTER FUNCTIONALITY |




All doors must be closed.

3X 

Press the OEM remote's Lock button 3x to remote-start (or remote-stop) the vehicle.



START 

The vehicle will START.

REMOTE STARTER DIAGNOSTICS

MODULE RED LED


x2 flash : Brake ON

x3 flash : No tach

x4 flash : Ignition before start


x5 flash : Hood Open

REMOTE STARTER WARNING CARD |



CUT THIS WARNING CARD AND STICK IT ON A VISIBLE PLACE:
or use the package RSPB, Sold separately.

WARNING



REMOTE STARTER

THE VEHICLE CAN BE STARTED BY EITHER: PRESSING THE LOCK BUTTON ON THE OEM REMOTE 3 TIMES CONSECUTIVELY OR BY A SMARTPHONE. **TURN ON** THE SAFETY SWITCH LOCATED UNDER THE DASHBOARD BEFORE WORKING ON THE VEHICLE.

DESCRIPTION | DESCRIPTION

	Parts required (Not included)	PAGE
--	-------------------------------	------


WIRE TO WIRE DIAGRAM

AUTOMATIC TRANSMISSION	1x 7.5 Amp. fuse	Page 3
------------------------	------------------	--------



THARNES DIAGRAM

THARNES THAR-FOR3 AUTOMATIC TRANSMISSION	1x THAR-FOR3	Page 4
--	--------------	--------


① Gateway module, located at dash board driver's side,

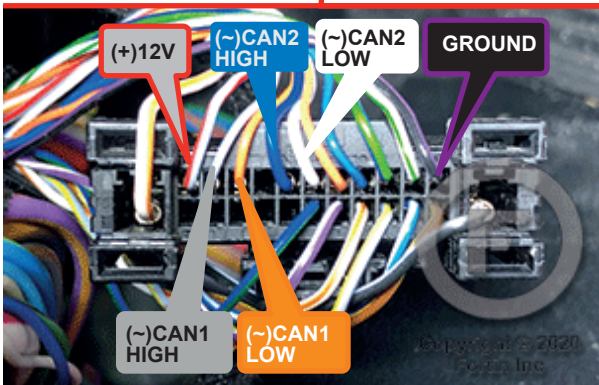




② Fuse box

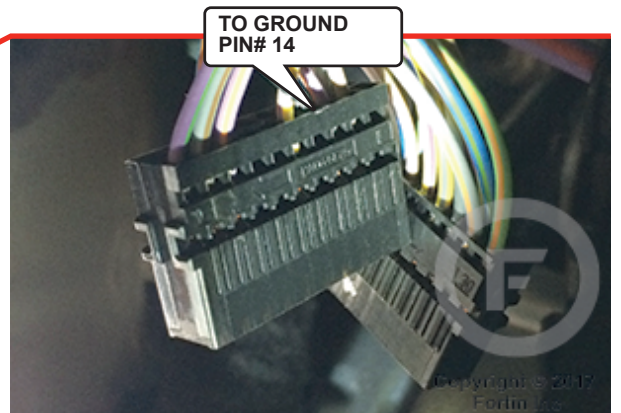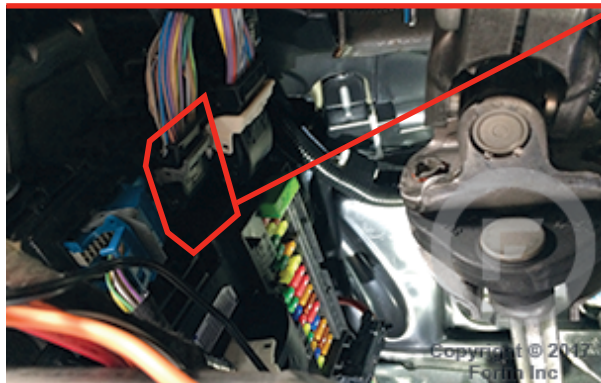



AUTOMATIC TRANSMISSION WIRING CONNECTION |

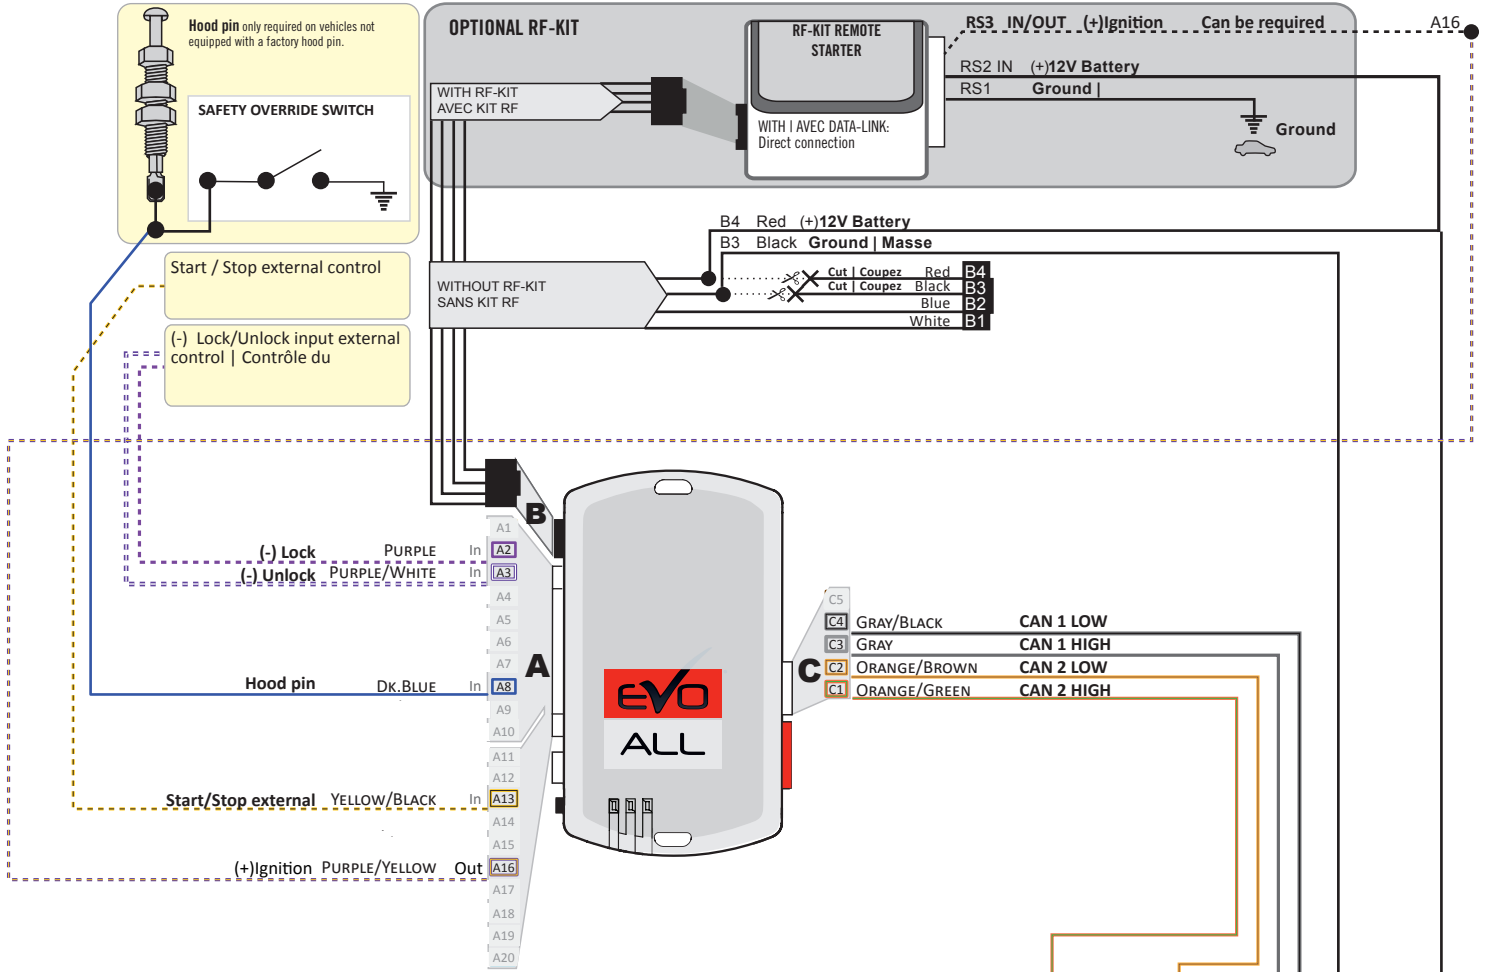

EXPLORER

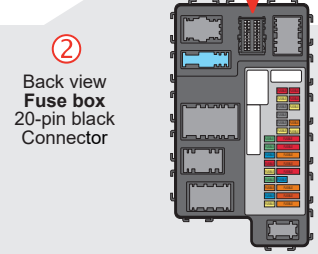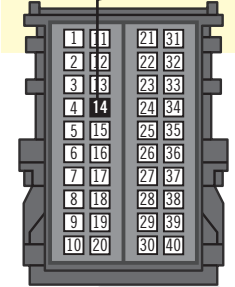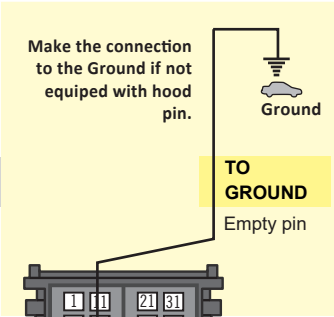


② Back view Fuse box 20-pin black Connector



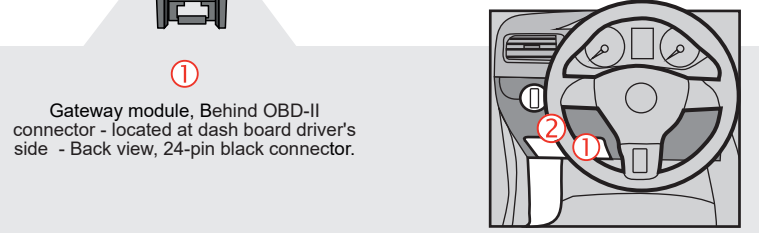
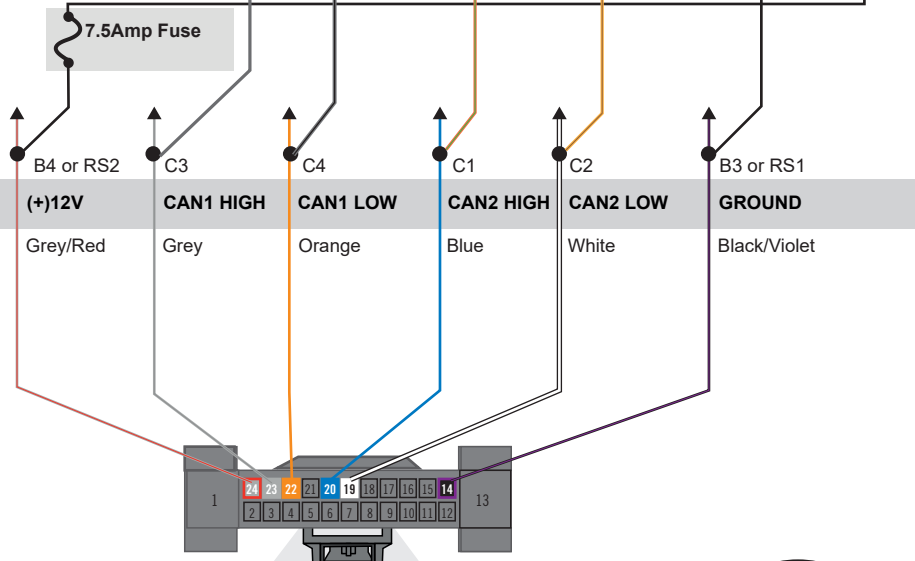


① Gateway module, Behind OBD-II connector - located at dash board driver's side - Back view, 24-pin black connector.

THAR-FOR3 | T-HARNESS - AUTOMATIC TRANSMISSION |

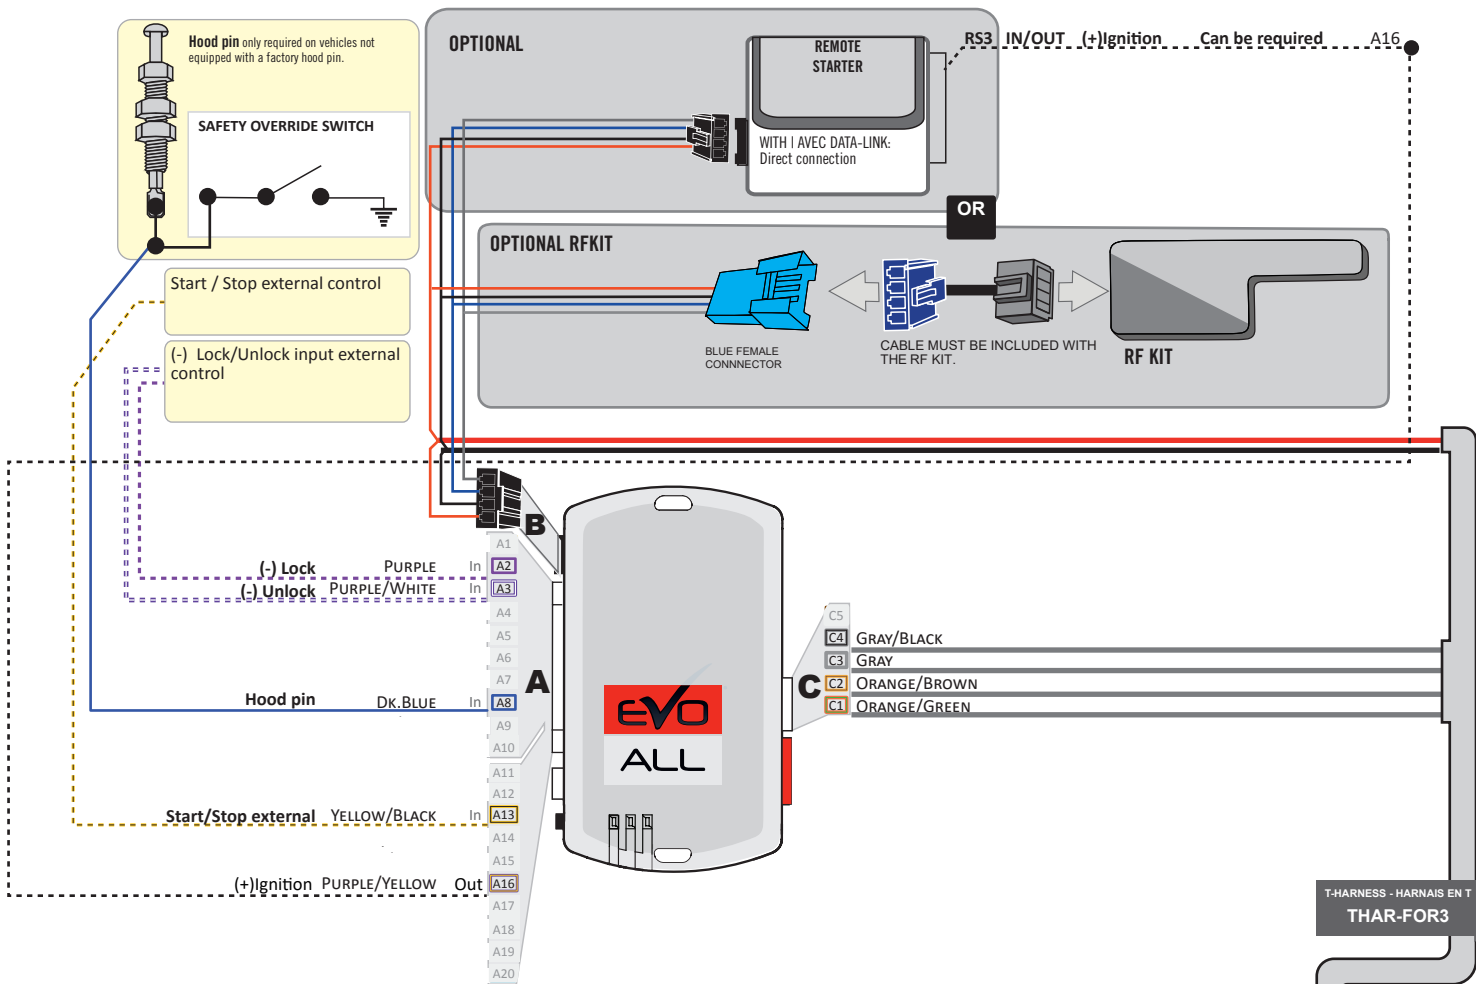

EXPLORER

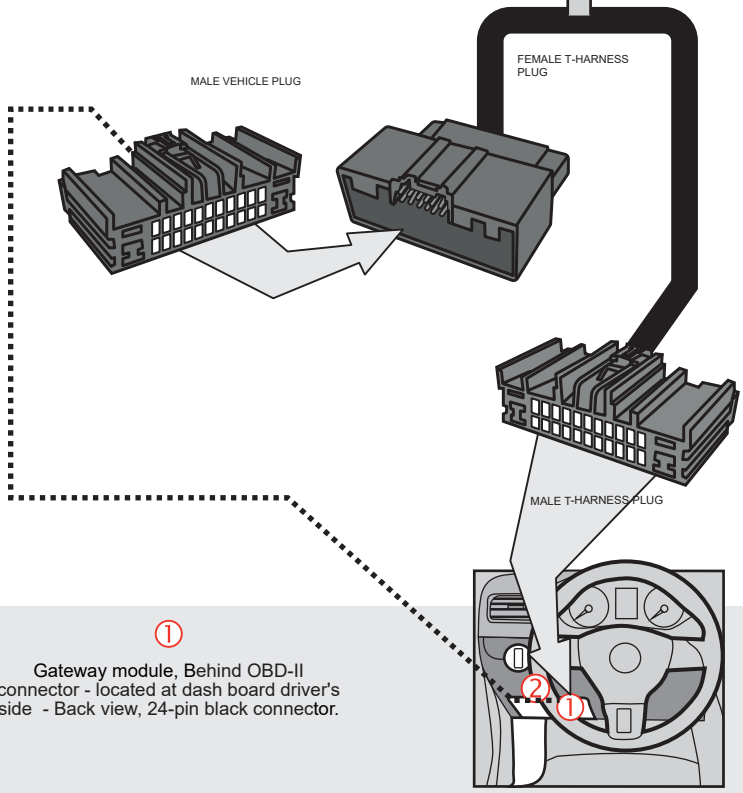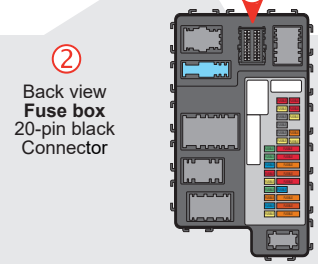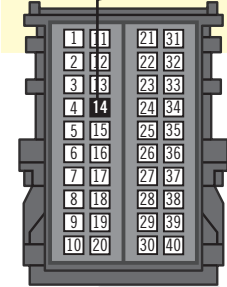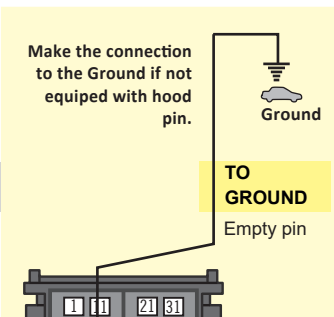




- Parts required (not included)**
- 1x **FLASH LINK UPDATER,**
 - 1x **FLASH LINK MANAGER**
SOFTWARE | PROGRAMME
 - 1x Microsoft Windows Computer with Internet connection

OR

- 1x **FLASH LINK MOBILE**
- 1x **FLASH LINK MOBILE APP**
Smartphone Android or iOS with Internet connection
(Internet provider charges may apply)

BEFORE PROGRAMMING SET THE UNIT OPTIONS AND SAVE.


1

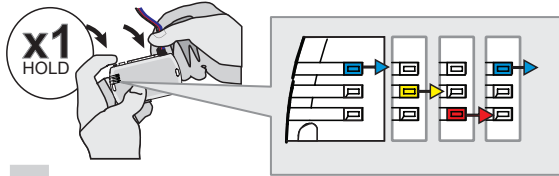

Press and hold the programming button:
Insert the 4-Pin (Data-Link) connector.


↳ The Blue, Red, Yellow and Blue & Red LEDs will alternatively illuminate.

2

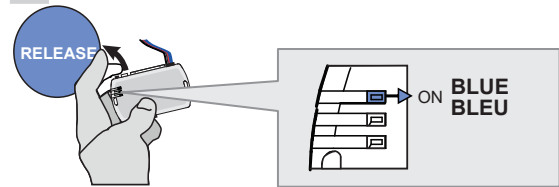


Release the programming button when the LED is BLUE.

 If the LED is not solid BLUE disconnect the 4-Pin connector (Data-Link) and go back to step 1.




3

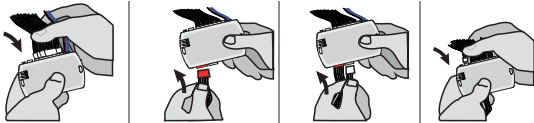

Insert the required remaining connectors.

4

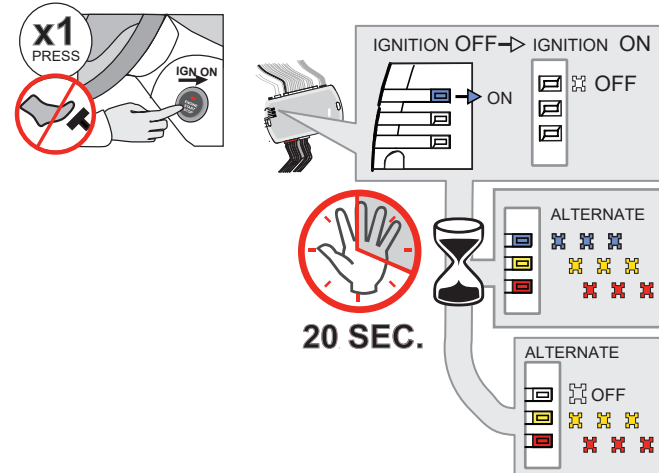

Do not press the brake pedal.
Press the Push-to-Start button once to turn on the ignition.

 
↳ The BLUE LED will turn OFF.

↳ The BLUE, YELLOW and RED LEDs will alternate.


Wait, at least 20 seconds, do not disconnect the modules or turn off the ignition.

↳ The RED and YELLOW LEDs will alternate.

Make sure that the DELs are flashing RED and YELLOW before continuing programming.



5

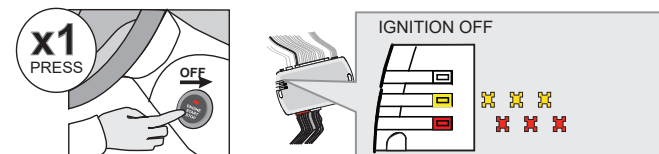

Press the Push-to-Start button once to turn off the ignition.

↳ The RED and YELLOW LEDs alternate.

KEY BYPASS PROGRAMMING PROCEDURE 2/2 |

6

Disconnect all the connectors and after the Data-Link (4-pins) connector.

7

Microsoft Windows Computer with Internet connection*

OR


Smartphone* (Internet provider charges may apply)

Use the tool: FLASH LINK UPDATER or FLASH LINK MOBILE to visit the DCryptor menu.

*Parts required (not included)

8

AFTER DCRYPTOR PROGRAMMING COMPLETED
Go back to the vehicle and **reconnect** the 4-Pin (Data-Link) connector and after, all the remaining connector.

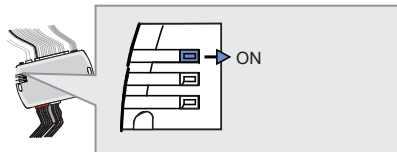

↳ The BLUE LED will turn ON.

9

Do not press the brake pedal. Press the Push-to-Start button once to turn on the ignition.

↳ The RED and YELLOW LEDs will turn ON.

Wait, at least 20 seconds, do not disconnect the modules or turn off the ignition.

↳ The BLUE LED will flash rapidly.

10


Press the Push-to-Start button once to turn off the ignition.

↳ The BLUE will turn OFF.

The module is now programmed.


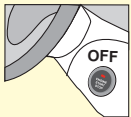
OPTIONAL RF-KIT PROGRAMMING |

PROGRAM BYPASS OPTION








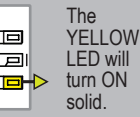
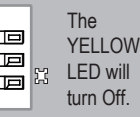
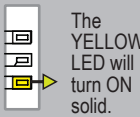
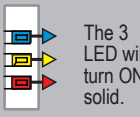

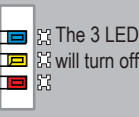
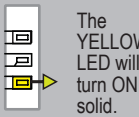
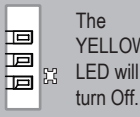
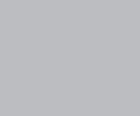
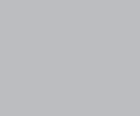
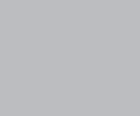
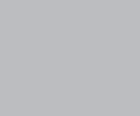
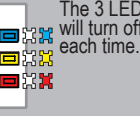
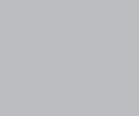
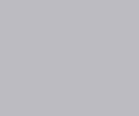

	<p>Program bypass option:</p>	<p>H2</p>	<p><input checked="" type="checkbox"/> Supported RF-KITS enable <input checked="" type="checkbox"/> H2 Fortin 2</p>
---	-------------------------------	------------------	---

OPTIONAL FORTIN RF KIT SERIES 4 OR SERIES 9 PROGRAMMING

The module must be programmed on the vehicle.



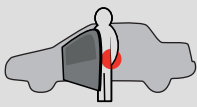

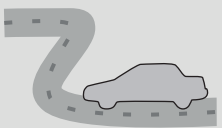



MAKE SURE THE IGNITION KEY HAS BEEN IN THE OFF POSITION FOR AT LEAST 5 SECONDS.

<p>1</p> <p>ON x1 PRESS</p>  <p>Do not press the brake pedal. Press the Push-to-Start button once to turn on the ignition.</p>	<p>2</p> <p>OFF x1 PRESS</p>  <p>Press the Push-to-Start button once to turn off the ignition.</p>	<p>3</p> <p>ON x1 PRESS</p>  <p>Do not press the brake pedal. Press the Push-to-Start button once to turn on the ignition.</p>	<p>4</p> <p>4X BRAKES</p> <p>x4 PRESS</p>  <p>Press and release the brake pedal four times.</p>	<p>5</p> <p>ON EACH TRANSMITTER</p> <p>4 BUTTONS</p> <p>[-] PRESS AND RELEASE</p> <p>[+] PRESS AND RELEASE</p> <p>1 BUTTON</p> <p>PRESS APPROX. 12 SEC. AND WAIT FOR THE BLUE LED TO TURN OFF THEN BACK ON SOLID THEN RELEASE.</p>	<p>6</p> <p>OFF x1 PRESS</p>  <p>Press the Push-to-Start button once to turn off the ignition.</p>	<p>7</p> <p>ON x1 PRESS</p>  <p>Do not press the brake pedal. Press the Push-to-Start button once to turn on the ignition and leave it ON for 5 sec..</p>	<p>8</p> <p>OFF x1 PRESS</p>  <p>Press the Push-to-Start button once to turn off the ignition.</p>
 <p>The YELLOW LED will turn ON solid.</p>	 <p>The YELLOW LED will turn Off.</p>	 <p>The YELLOW LED will turn ON solid.</p>	 <p>The 3 LED will turn ON solid.</p>	 <p>The LED will turn off each time.</p>	 <p>The 3 LED will turn Off.</p>	 <p>The YELLOW LED will turn ON solid.</p>	 <p>The YELLOW LED will turn Off.</p>
 <p>The YELLOW LED will turn ON solid.</p>	 <p>The YELLOW LED will turn Off.</p>	 <p>The YELLOW LED will turn ON solid.</p>	 <p>The 3 LED will turn ON solid.</p>	 <p>The LED will turn off each time.</p>	 <p>The 3 LED will turn Off.</p>	 <p>The YELLOW LED will turn ON solid.</p>	 <p>The YELLOW LED will turn Off.</p>



REMOTE STARTER FUNCTIONALITY |

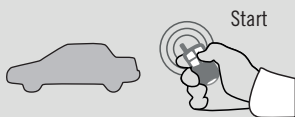 <p>Start</p> <p>All doors must be closed.</p> <p>Remote start the vehicle.</p>	 <p>UNLOCK</p> <p>Unlock the doors with either:</p> <ul style="list-style-type: none"> • The OEM remote • The remote-starter remote • Or the proximity remote 	 <p>Enter the vehicle with the SMART-KEY.</p>	 <p>DO NOT PRESS THE BRAKE PEDAL.</p> <p>Press and release the Push-to-Start button once.</p>	 <p>Press the brake pedal. The vehicle can now be put in to gear and driven.</p> <p>If the Smart-Key is not detected the vehicle will shut down.</p>
--	---	--	---	---

STANDALONE & THAR-FOR3 INSTALLATION

ADDENDUM - SUGGESTED WIRING CONFIGURATION




ONLY COMPATIBLE WITH AUTOMATIC TRANSMISSION VEHICLES.



Vehicle functions supported in this diagram (functional if equipped)

VEHICLE	YEARS	Immobilizer bypass	T-Harness available (sold separately)	Lock	Unlock	Arm	Disarm	Tachometer	Door Status	Trunk Status	Hood Status*	Hand-Brake Status	Foot-Brake Status	Active OEM Remote Start
FORD Explorer Interceptor	2020	•	•	•	•	•	•	•	•	•	•	•	•	•

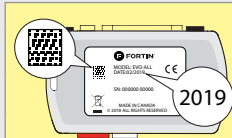

COMPATIBLE MODULE REQUIRED:

QR CODE ON THE LABEL
MANUFACTURED AFTER: 2019

FIRMWARE VERSION
58.[01]
MINIMUM

To add the firmware version and the options, use the **FLASH LINK UPDATER** or **FLASH LINK MOBILE** tool, sold separately.



Program bypass option:

UNIT OPTION

DESCRIPTION

C1

OEM Remote status (Lock/Unlock) monitoring

IF THE VEHICLE IS NOT EQUIPPED WITH FUNCTIONAL HOOD PIN:

A11

OFF

Hood trigger (Output Status).

NOTES

The vehicles OEM remote will still operable during remote start.

MANDATORY INSTALL

*HOOD PIN



HOOD STATUS: THE HOOD PIN SWITCH MUST BE INSTALLED IF THE VEHICLE CAN BE REMOTE STARTED WITH THE HOOD OPEN, SET FUNCTION A11 TO OFF.

A11

OFF

Notice: the installation of safety elements are mandatory. The hood pin is an essential security element and must be installed.

THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.

PARTS REQUIRED (NOT INCLUDED) |


1x **FLASH LINK UPDATER,**
1x **FLASH LINK MANAGER**
SOFTWARE | PROGRAMME
1x Microsoft Windows Computer with Internet connection

OR


1x **FLASH LINK MOBILE**
1x **FLASH LINK MOBILE APP**
Smartphone *Android* or *iOS* with Internet connection (*provider charges may apply*).
1x

MANDATORY

HOOD PIN



REMOTE START SAFETY OVERRIDE SWITCH

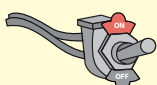
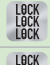






VALET SWITCH


Part #: RSPB available, Sold separately.

Notice: the installation of safety elements are mandatory. The hood pin and the valet switch are essential security elements and must be installed.


STAND ALONE CONFIGURATION |

	Program bypass option	UNIT OPTION	DESCRIPTION
	OEM Remote Stand Alone Remote Starter:	D1.10 	By default, LOCK, LOCK, LOCK
		D1.1 	Par défaut, VERROUILLE, VERROUILLE, VERROUILLE
	Program bypass option with oem remote:	C1	OEM Remote Monitoring
	Program bypass option with RF KIT antenna:	H1 to H6	Supported RF Kits and select RF Kit
	Program bypass option Vehicle hybrid only:	D4	Hybrid mode (Vehicle hybrid only)


REMOTE STARTER FUNCTIONALITY |




All doors must be closed.

3X 

Press the OEM remote's Lock button 3x to remote-start (or remote-stop) the vehicle.



START 

The vehicle will START.

REMOTE STARTER DIAGNOSTICS

MODULE RED LED


x2 flash : Brake ON

x3 flash : No tach

x4 flash : Ignition before start


x5 flash : Hood Open

REMOTE STARTER WARNING CARD |



CUT THIS WARNING CARD AND STICK IT ON A VISIBLE PLACE:
or use the package RSPB, Sold separately.

WARNING



REMOTE STARTER

THE VEHICLE CAN BE STARTED BY EITHER: PRESSING THE LOCK BUTTON ON THE OEM REMOTE 3 TIMES CONSECUTIVELY OR BY A SMARTPHONE. **TURN ON** THE SAFETY SWITCH LOCATED UNDER THE DASHBOARD BEFORE WORKING ON THE VEHICLE.

DESCRIPTION |

	Parts required (Not included)	PAGE
--	-------------------------------	------

WIRE TO WIRE DIAGRAM


AUTOMATIC TRANSMISSION	1x 7.5 Amp. fuse	Page 3
------------------------	------------------	--------

THARNESSE DIAGRAM




THARNESSE THAR-FOR3 AUTOMATIC TRANSMISSION	1x THAR-FOR3	Page 4
--	--------------	--------




① Gateway module, Behind OBD-II connector - located behind driver side fusebox

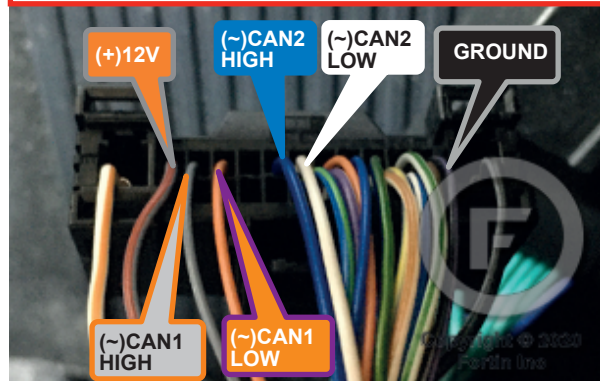


AUTOMATIC TRANSMISSION WIRING CONNECTION |

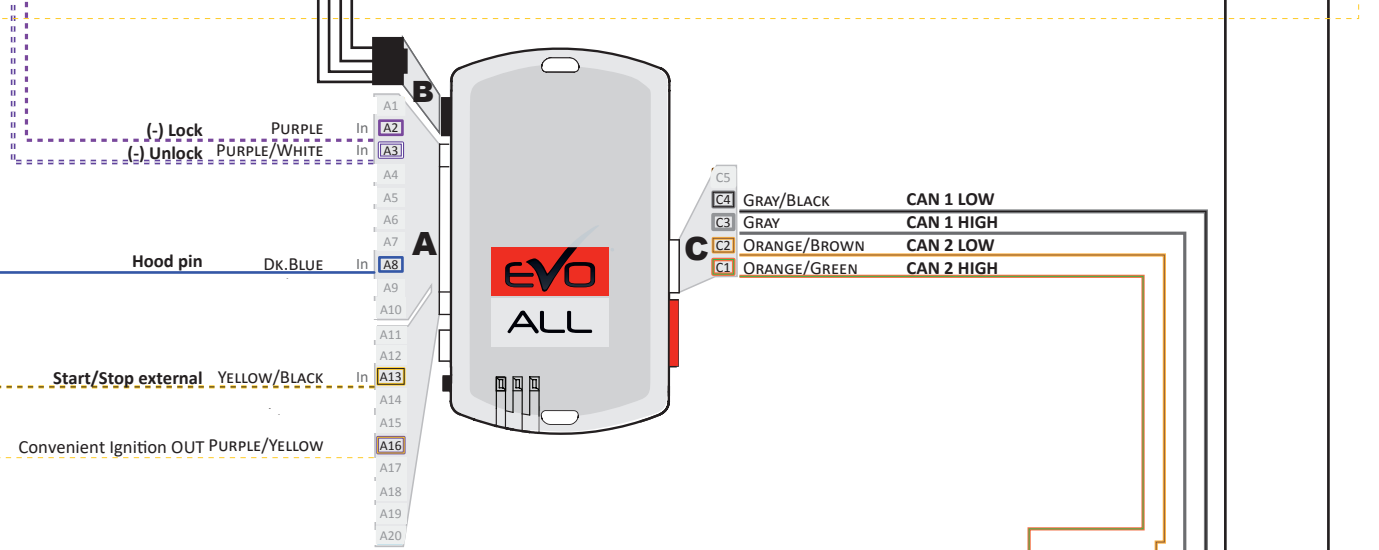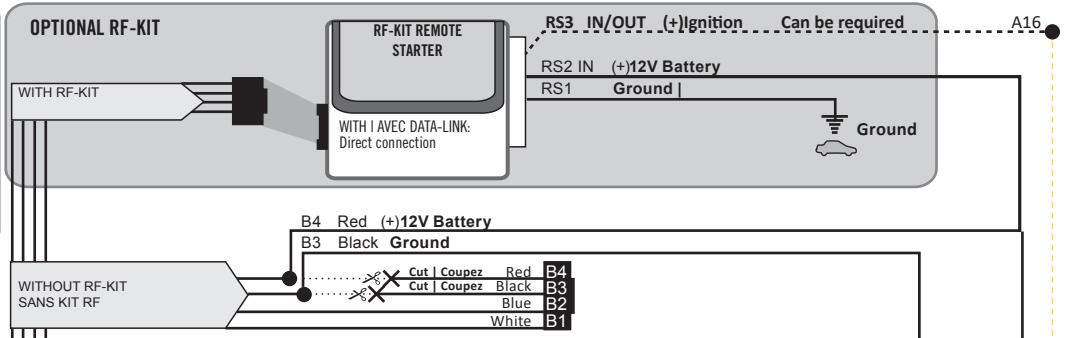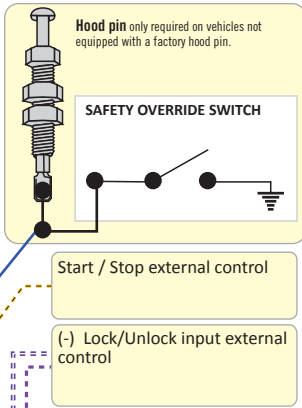


EXPLORER INTERCEPTOR

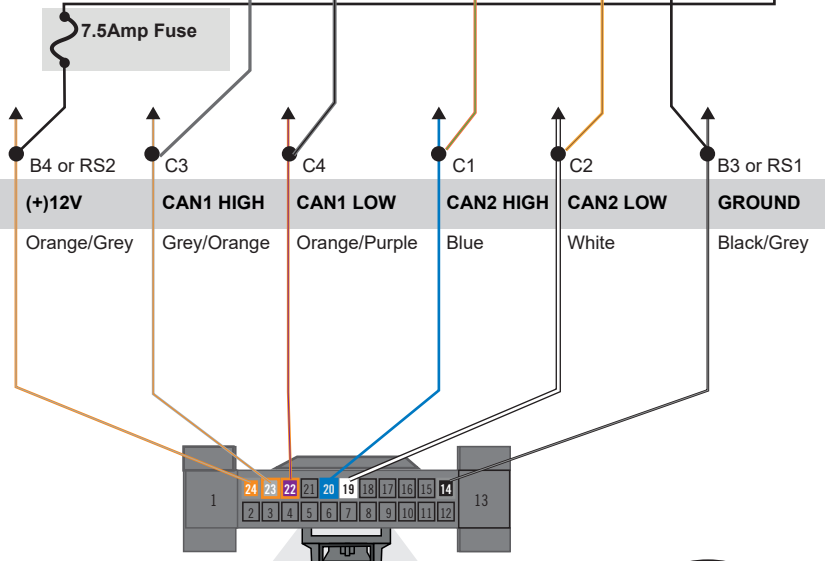

① Gateway module, Behind OBD-II connector - located behind driver side fusebox - Back view, 24-pin black connector.

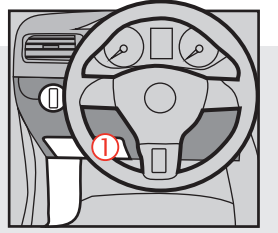

THAR-FOR3 | T-HARNESS - AUTOMATIC TRANSMISSION |

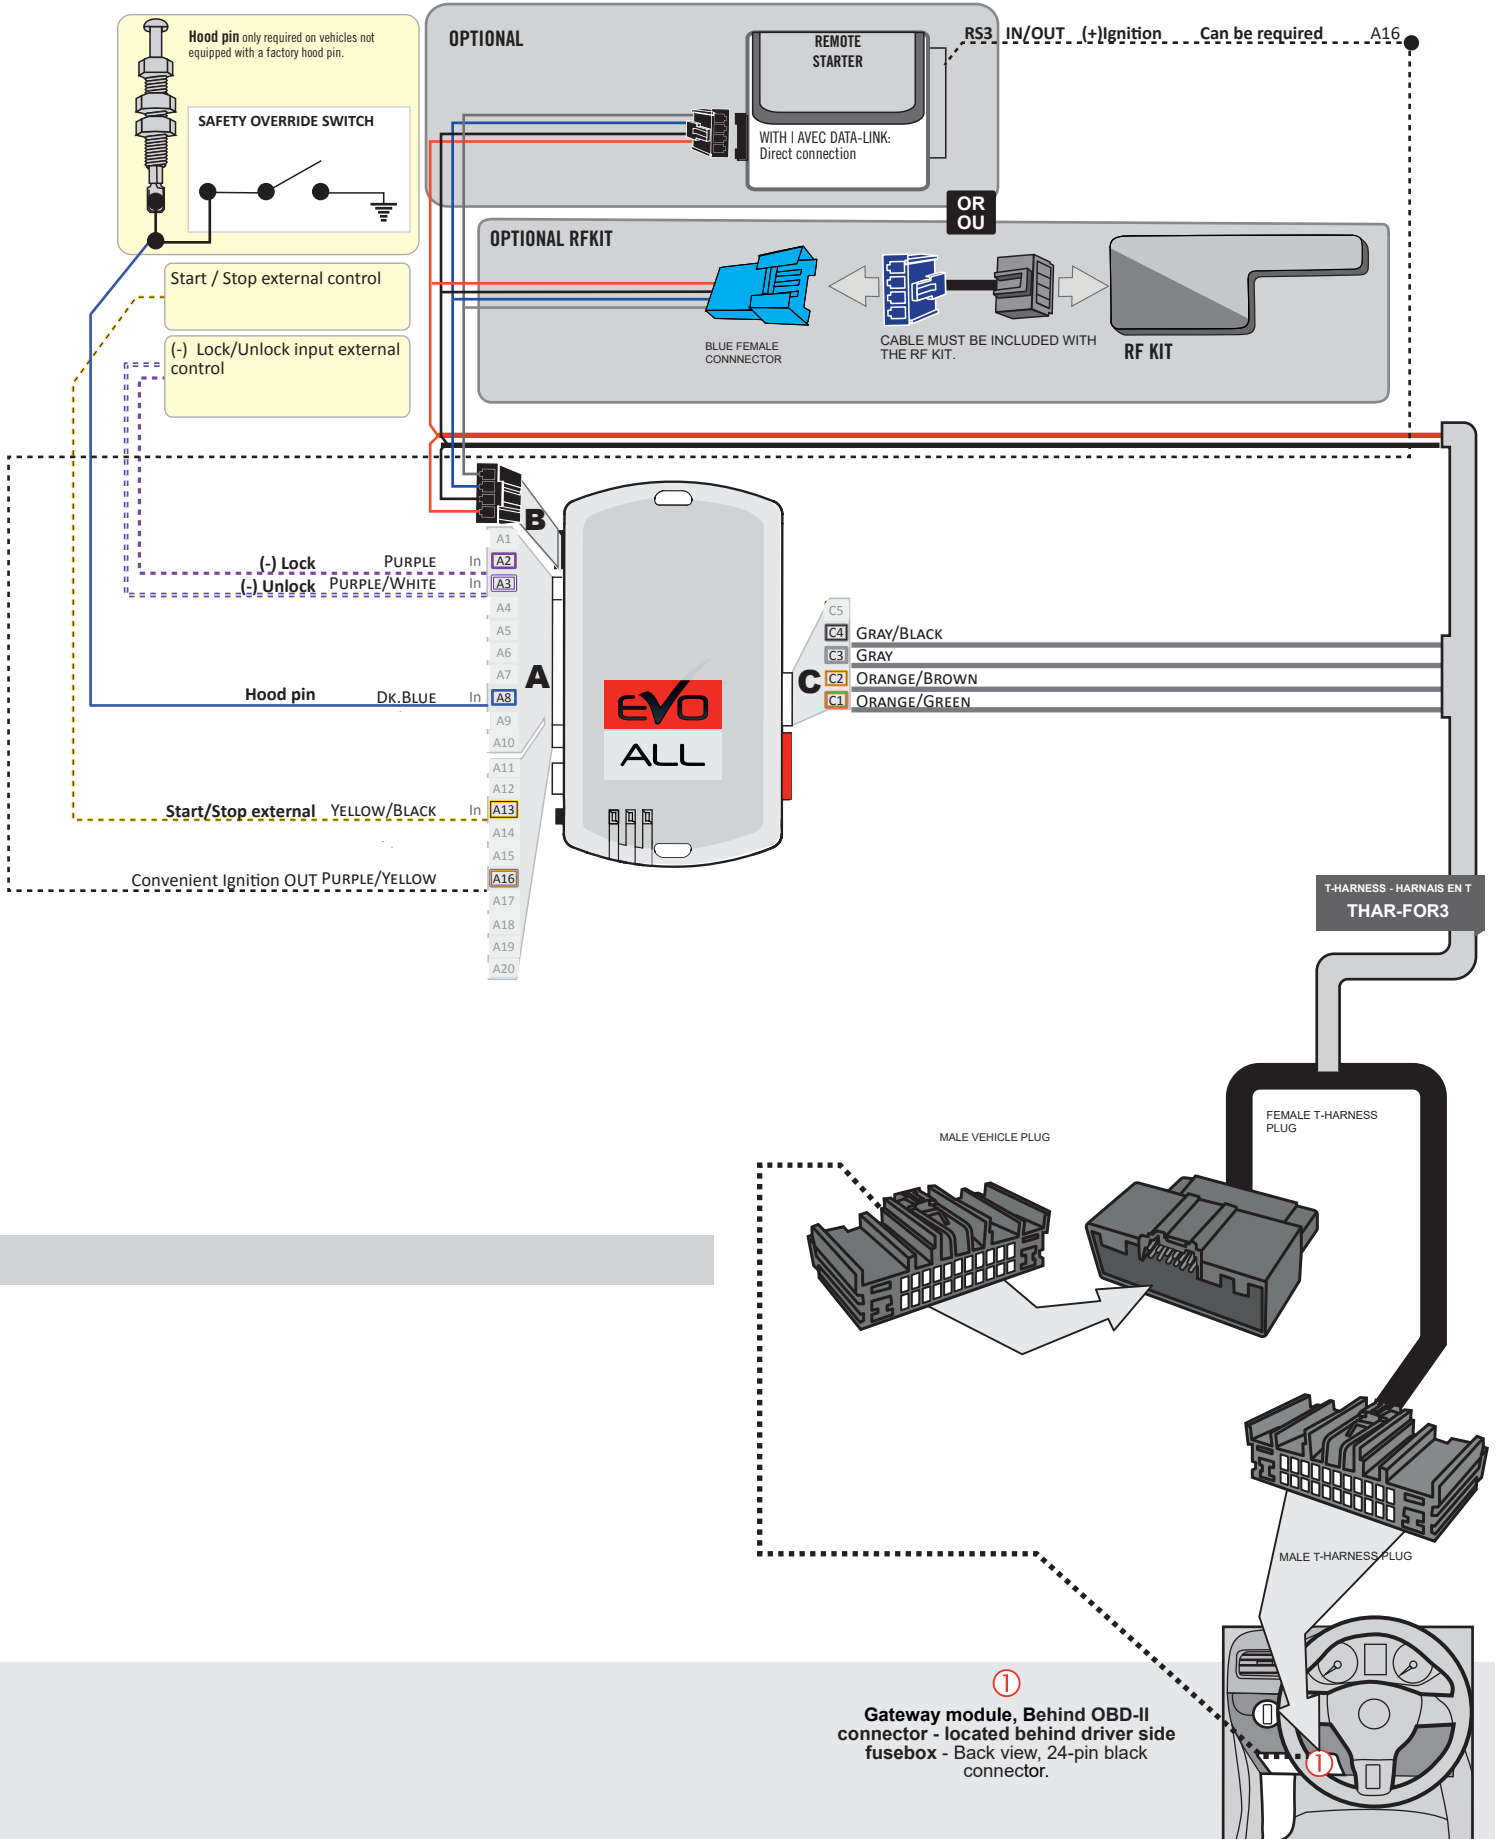



Parts required (not included)


- 1x FLASH LINK UPDATER, SOFTWARE | PROGRAMME
- 1x FLASH LINK MANAGER
- 1x Microsoft Windows Computer with Internet connection

OR

- 1x FLASH LINK MOBILE
- 1x FLASH LINK MOBILE APP
- Smartphone Android or iOS with Internet connection (Internet provider charges may apply)

BEFORE PROGRAMMING SET THE UNIT OPTIONS AND SAVE.


1

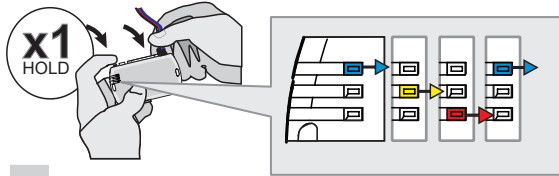

Press and hold the programming button:
Insert the 4-Pin (Data-Link) connector.

↳ The Blue, Red, Yellow and Blue & Red LEDs will alternatively illuminate.


2

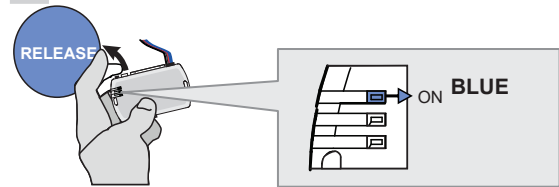

Release the programming button when the LED is BLUE.


If the LED is not solid BLUE disconnect the 4-Pin connector (Data-Link) and go back to step 1.

3

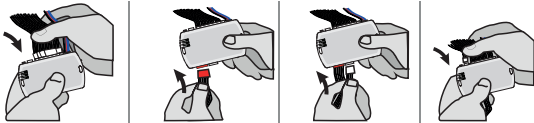

Insert the required remaining connectors.

4

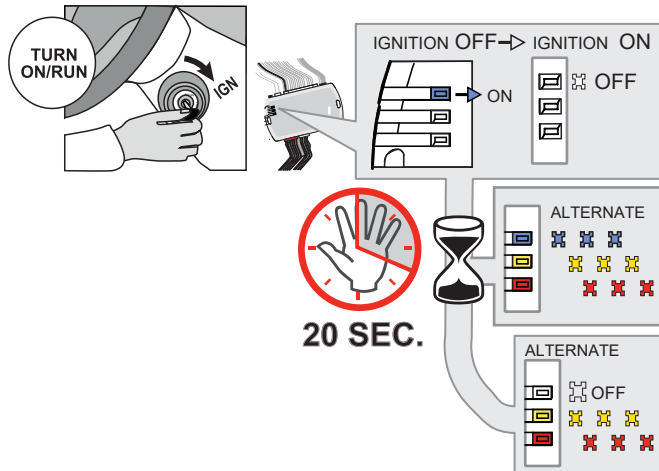

Turn the key to the Ignition ON/RUN position.

 
↳ The BLUE LED will turn OFF.

↳ The BLUE, YELLOW and RED LEDs will alternate.


Wait, at least 20 seconds, do not disconnect the modules or turn off the ignition.

↳ The RED and YELLOW LEDs will alternate.

Make sure that the DELs are flashing RED and YELLOW before continuing programming.



5

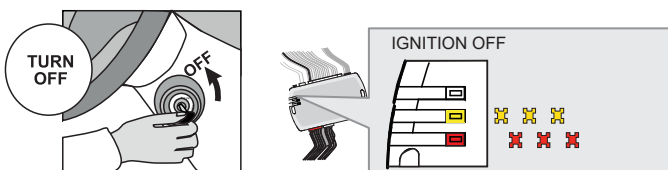


Turn the key to the OFF position.

↳ The RED and YELLOW LEDs alternate.


KEY BYPASS PROGRAMMING PROCEDURE 2/2 |

16

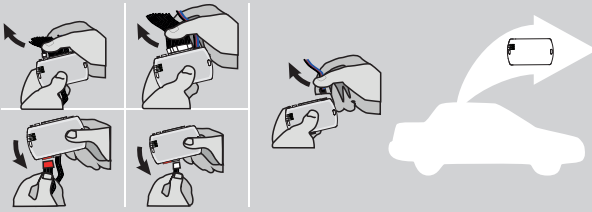

Disconnect all the connectors and after the Data-Link (4-pins) connector.


17

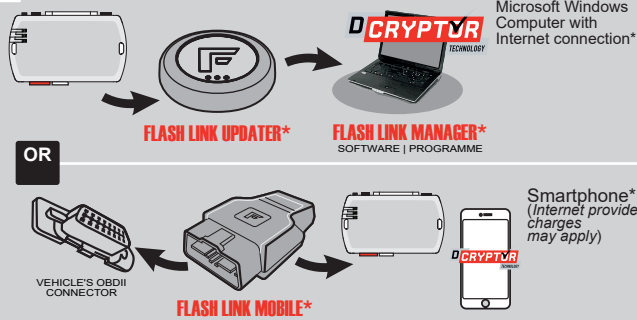

Use the tool: FLASH LINK UPDATER or FLASH LINK MOBILE to visit the DCRYPTOR menu.


*Parts required (not included)

18

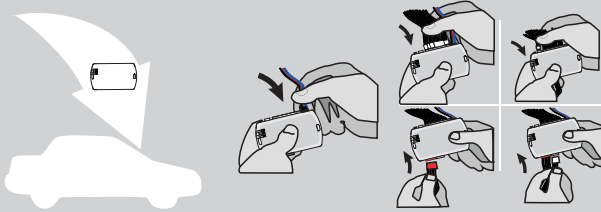

AFTER DCRYPTOR PROGRAMMING COMPLETED Go back to the vehicle and reconnect the 4-Pin (Data-Link) connector and after, all the remaining connector.

9

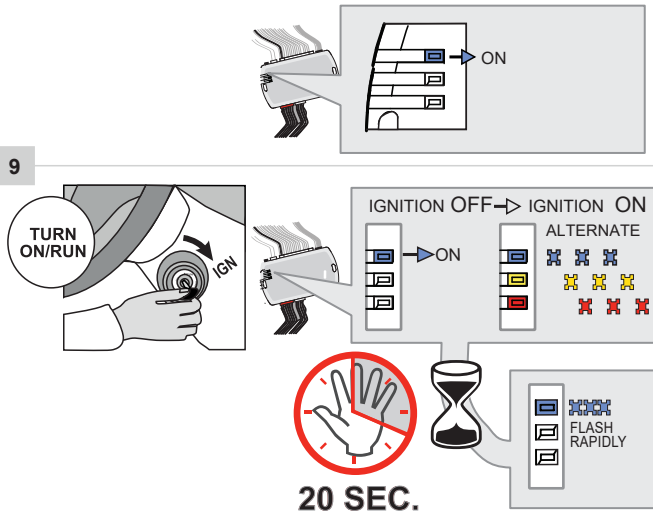

The BLUE LED will turn ON.


Turn the key to the Ignition ON/RUN position.

The RED and YELLOW LEDs will turn ON.

Wait, at least 20 seconds, do not disconnect the modules or turn off the ignition.

The BLUE LED will flash rapidly.

10

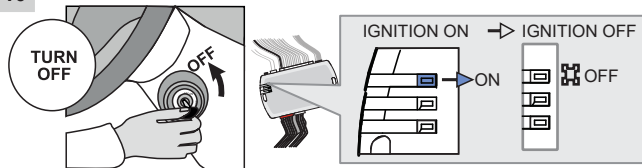

Turn the key to the OFF position.

The BLUE will turn OFF.



The module is now programmed.

OPTIONAL RF-KIT PROGRAMMING |

PROGRAM BYPASS OPTION

	Program bypass option:	H2	<input checked="" type="checkbox"/> Supported RF-KITS enable <input checked="" type="checkbox"/> H2 Fortin 2
--	------------------------	-----------	--

OPTIONAL FORTIN RF KIT SERIES 4 OR SERIES 9 PROGRAMMING

	The module must be programmed on the vehicle.			MAKE SURE THE IGNITION KEY HAS BEEN IN THE OFF POSITION FOR AT LEAST 5 SECONDS.
--	---	--	--	--

<p>1</p> <p>ON TURN ON/RUN</p>	<p>2</p> <p>OFF TURN OFF</p>	<p>3</p> <p>ON TURN ON/RUN</p>	<p>4</p> <p>4X BRAKES</p> <p>x4 PRESS</p>	<p>5</p> <p>ON EACH TRANSMITTER</p> <p>4 BUTTONS</p> <p>[-] PRESS AND RELEASE</p> <p>➔ PRESS AND RELEASE</p> <p>[LOCK] PRESS AND RELEASE</p> <p>1 BUTTON</p> <p>PRESS APPROX. 12 SEC. AND WAIT FOR THE BLUE LED TO TURN OFF THEN BACK ON SOLID THEN RELEASE.</p>	<p>6</p> <p>OFF TURN OFF</p>	<p>7</p> <p>ON TURN ON/RUN</p>	<p>8</p> <p>OFF TURN OFF</p>
<p>Turn the key to the ON/RUN position.</p>	<p>Turn the ignition to the OFF position.</p>	<p>Turn the key to the ON/RUN position.</p>	<p>Press and release the brake pedal four times.</p>		<p>Turn the ignition to the OFF position.</p>	<p>Turn the key to the ON/RUN position and leave it ON for 5 sec.</p>	<p>Turn the ignition to the OFF position.</p>
			<p>The LED will turn off each time.</p>	<p>The LED will turn off each time.</p>	<p>The LED will turn Off.</p>		
		<p>The LED will turn ON solide.</p>	<p>The LED will flash rapidly.</p>	<p>The LED will flash rapidly.</p>			
<p>The YELLOW LED will turn ON solid.</p>	<p>The YELLOW LED will turn Off.</p>	<p>The YELLOW LED will turn ON solid.</p>	<p>The 3 LED will turn ON solid.</p>	<p>The 3 LED will turn off each time.</p>	<p>The 3 LED will turn off.</p>	<p>The YELLOW LED will turn ON solid.</p>	<p>The YELLOW LED will turn Off.</p>



REMOTE STARTER FUNCTIONALITY |



All doors must be closed.



Remote start the vehicle.



Unlock the doors with the remote-starter remote or the OEM remote.



Insert and Turn the key to the Ignition ON/RUN position.



Press the brake pedal.



The vehicle can now be put in to gear and driven.

STANDALONE & THAR-FOR3 INSTALLATION

ADDENDUM - SUGGESTED WIRING CONFIGURATION




ONLY COMPATIBLE WITH AUTOMATIC TRANSMISSION VEHICLES.



Vehicle functions supported in this diagram (functional if equipped)

VEHICLE	YEARS	Immobilizer bypass	Lock	Unlock	Arm	Disarm	RAP Disable	Parking Lights	Tachometer	Heated seats	Heated Mirrors	Rear defrost	Door Status	Trunk Status	Hood Status*	Hand-Brake Status	Foot-Brake Status	Active OEM Remote Start
FORD																		
F-150	Key 2020	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
F-250	Key 2020	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
F-350	Key 2020	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
F-450	Key 2020	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•

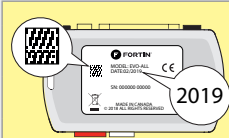

COMPATIBLE MODULE REQUIRED:

QR CODE ON THE LABEL
MANUFACTURED AFTER: 2019

FIRMWARE VERSION

58.[02]
MINIMUM

To add the firmware version and the options, use the **FLASH LINK UPDATER** or **FLASH LINK MOBILE** tool, sold separately.



Program bypass option:

UNIT OPTION

C1

DESCRIPTION

OEM Remote status (Lock/Unlock) monitoring

IF THE VEHICLE IS NOT EQUIPPED WITH FUNCTIONAL HOOD PIN:

A11

OFF

Hood trigger (Output Status).

NOTES

The vehicles OEM remote and SmartKey are still operable during remote start.

**Heated seats The heated seats and rear defrost activate automatically when it cold.

***Parking Lights The parking Lights at remote start only.



The vehicle must be equipped with the OEM remote with the door locks.

MANDATORY INSTALL

*HOOD PIN



HOOD STATUS: THE HOOD PIN SWITCH MUST BE INSTALLED IF THE VEHICLE CAN BE REMOTE STARTED WITH THE HOOD OPEN, SET FUNCTION A11 TO OFF.

A11

OFF

Notice: the installation of safety elements are mandatory. The hood pin is an essential security element and must be installed.

THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.


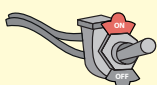
PARTS REQUIRED (NOT INCLUDED)

1x **FLASH LINK UPDATER**
 1x **FLASH LINK MANAGER**
SOFTWARE | PROGRAMME
 1x Microsoft Windows Computer with Internet connection

OR

1x **FLASH LINK MOBILE**
 1x **FLASH LINK MOBILE APP**
Smartphone Android or iOS with Internet connection (provider charges may apply).

MANDATORY


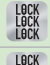




HOOD PIN  REMOTE START SAFETY OVERRIDE SWITCH 

VALET SWITCH


Part #: RSPB available, Sold separately.

Notice: the installation of safety elements are mandatory. The hood pin and the valet switch are essential security elements and must be installed.


STAND ALONE CONFIGURATION

	Program bypass option	UNIT OPTION	DESCRIPTION
	OEM Remote Stand Alone Remote Starter:	OR D1.10  D1.1 	By default, LOCK, LOCK, LOCK Par défaut, VERROUILLE, VERROUILLE, VERROUILLE
	Program bypass option with oem remote:	C1	OEM Remote Monitoring
	Program bypass option with RF KIT antenna:	H1 to H6	Supported RF Kits and select RF Kit
	Program bypass option Vehicle hybrid only:	D4	Hybrid mode (Vehicle hybrid only)


REMOTE STARTER FUNCTIONALITY




All doors must be closed.

3X 

Press the OEM remote's Lock button 3x to remote-start (or remote-stop) the vehicle.




START 

The vehicle will START.

REMOTE STARTER DIAGNOSTICS
MODULE RED LED


x2 flash :	Brake ON
x3 flash :	No tach
x4 flash :	Ignition before start
x5 flash :	Hood Open

REMOTE STARTER WARNING CARD



CUT THIS WARNING CARD AND STICK IT ON A VISIBLE PLACE:
 or use the package RSPB, Sold separately.

WARNING



REMOTE STARTER

THE VEHICLE CAN BE STARTED BY EITHER: PRESSING THE LOCK BUTTON ON THE OEM REMOTE 3 TIMES CONSECUTIVELY OR BY A SMARTPHONE. **TURN ON** THE SAFETY SWITCH LOCATED UNDER THE DASHBOARD BEFORE WORKING ON THE VEHICLE.

DESCRIPTION

	Parts required (Not included)	PAGE
--	-------------------------------	------

WIRE TO WIRE DIAGRAM


AUTOMATIC TRANSMISSION	1x 7.5 Amp. fuse	Page 3
------------------------	------------------	--------

THARNES DIAGRAM


THARNES THAR-FOR3 AUTOMATIC TRANSMISSION	1x THAR-FOR3	Page 4
--	--------------	--------






① Gateway module, located at dash board driver's side,

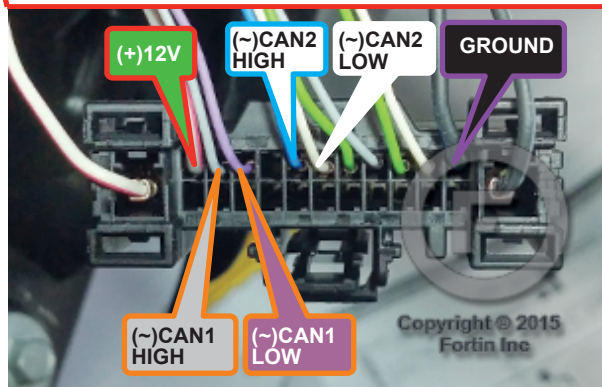


② Under the hood If not equipped with hood pin.

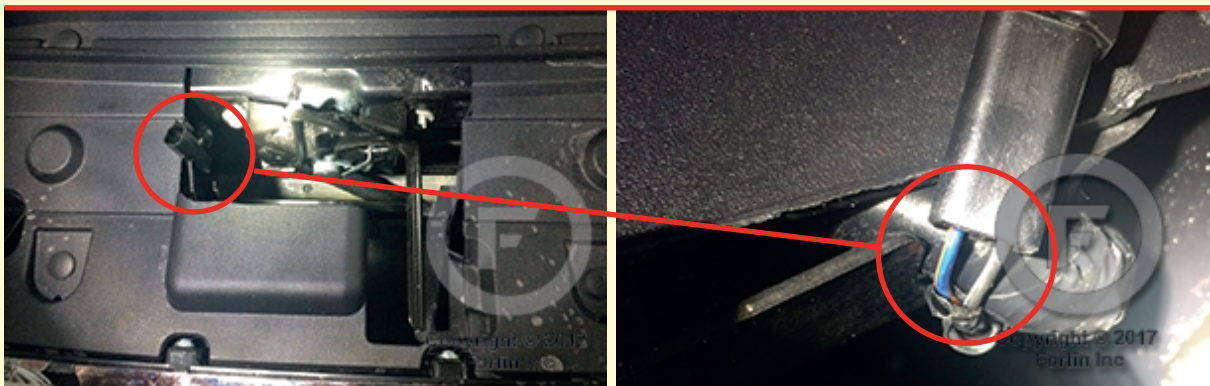


AUTOMATIC TRANSMISSION WIRING CONNECTION |

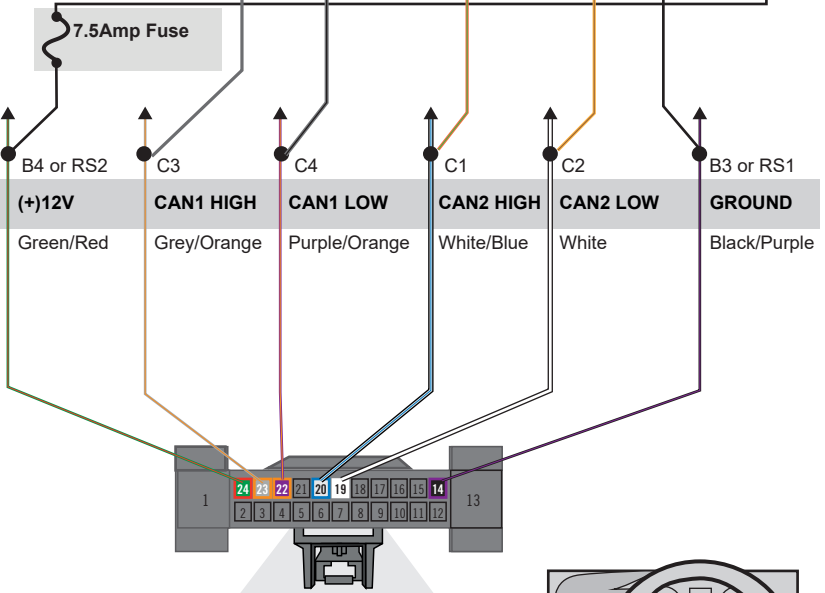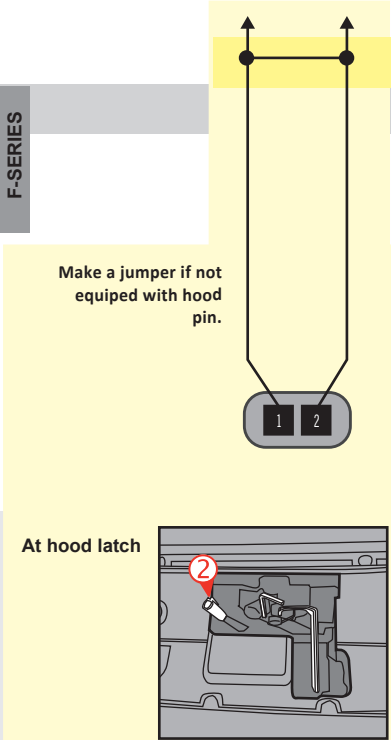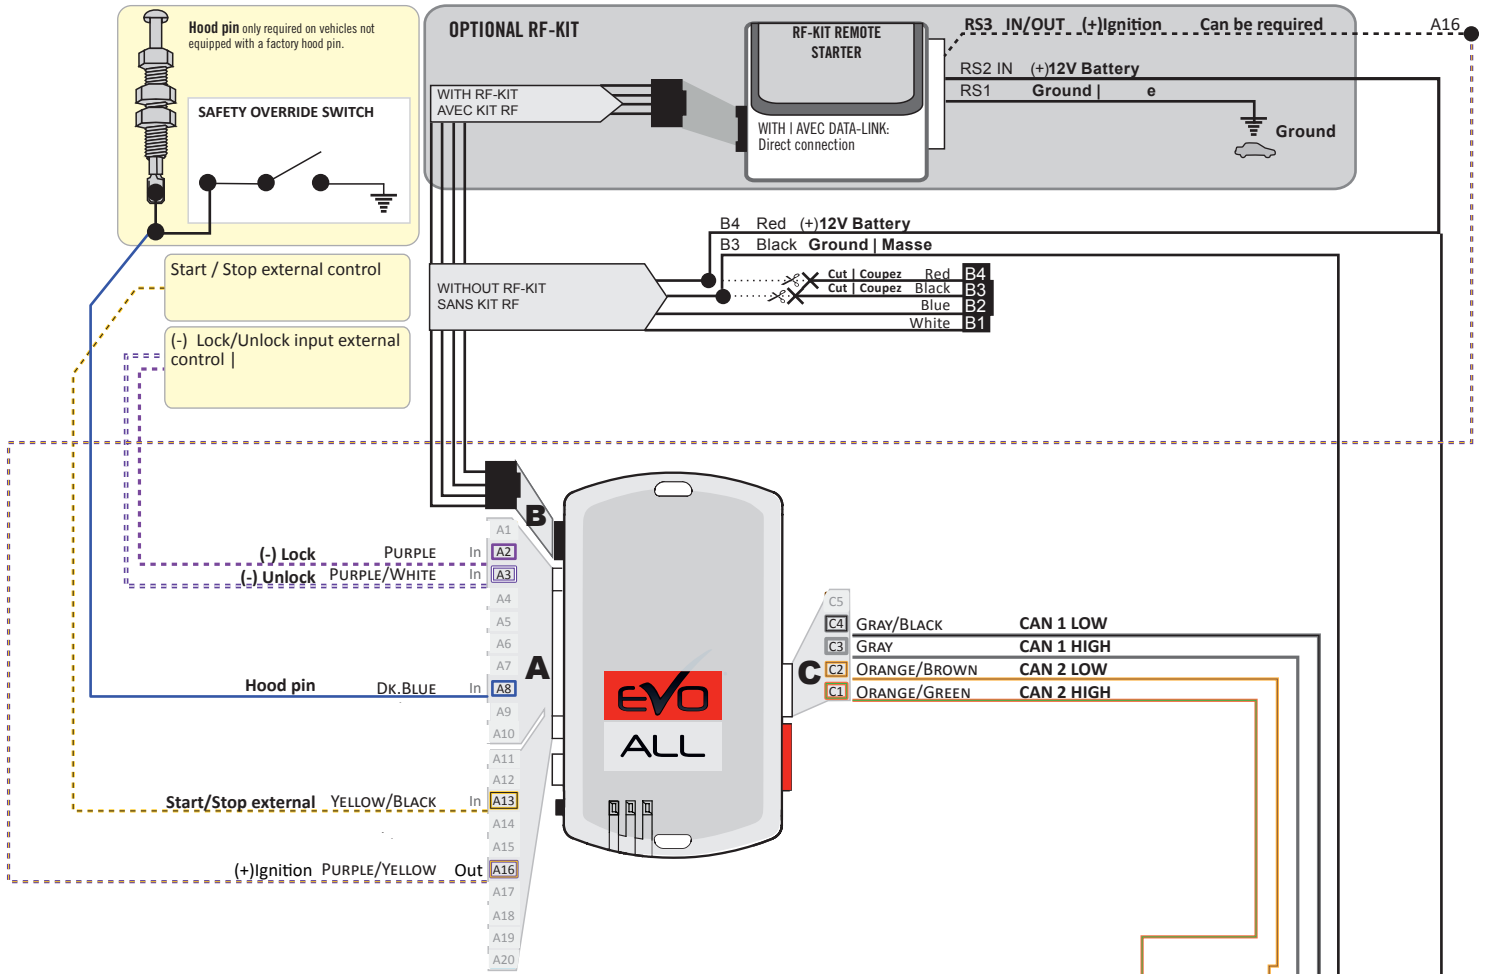




① Gateway module, Behind OBD-II connector - located at dash board driver's side - Back view, 24-pin black connector.

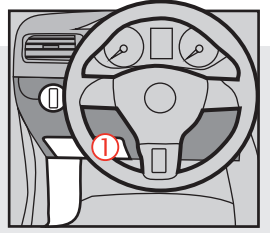

THAR-FOR3 | T-HARNESS - AUTOMATIC TRANSMISSION |

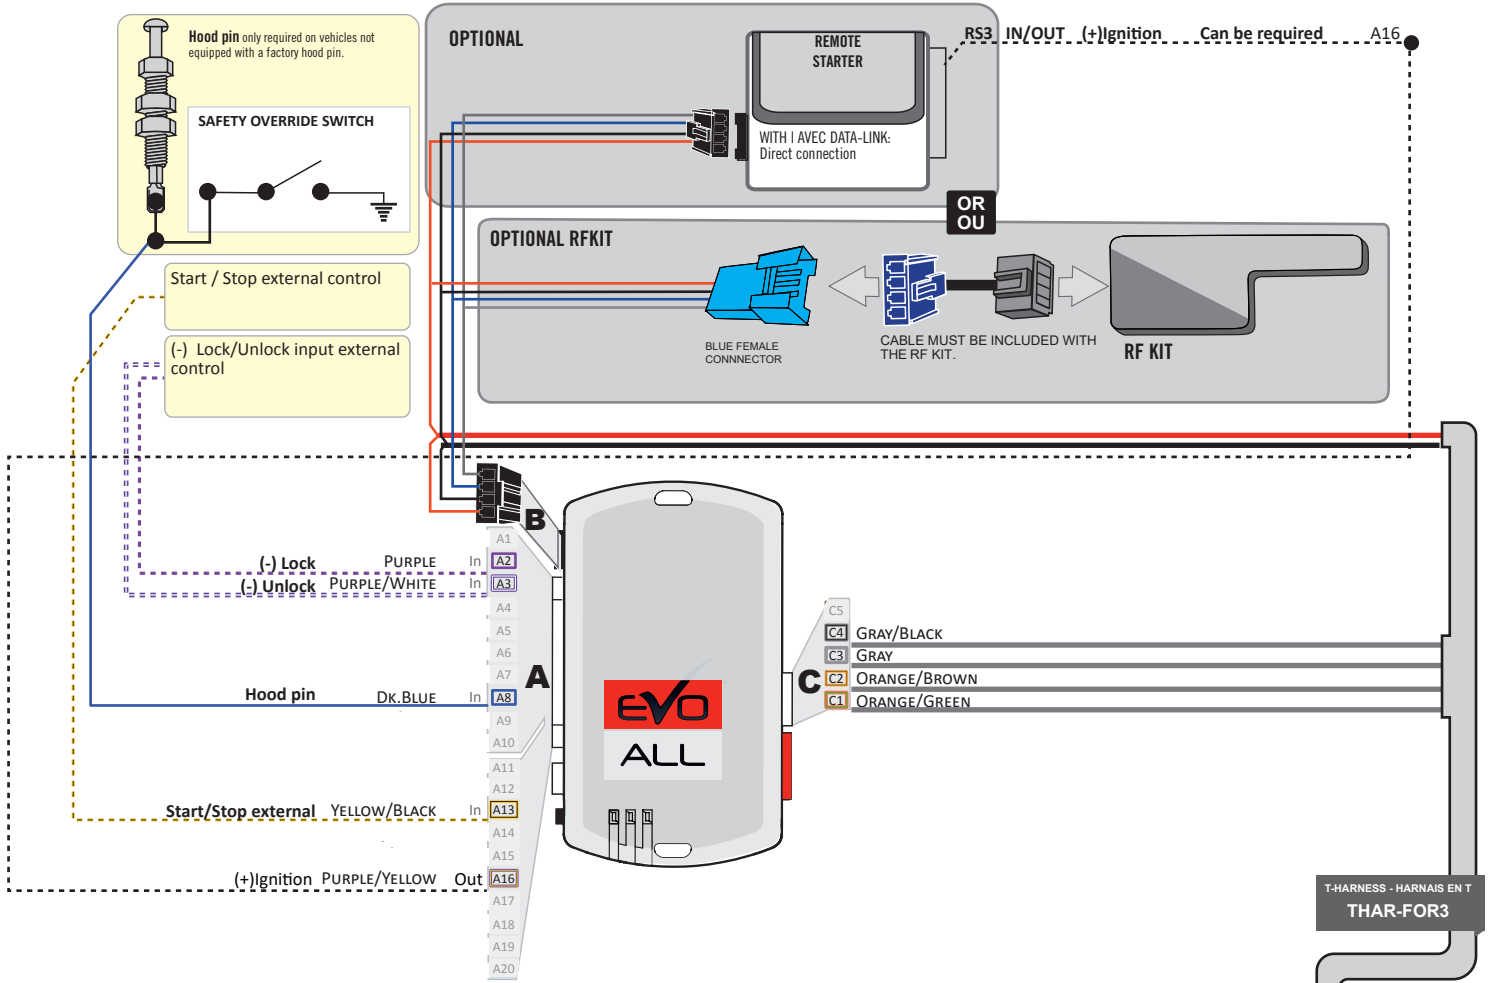

F-SERIES

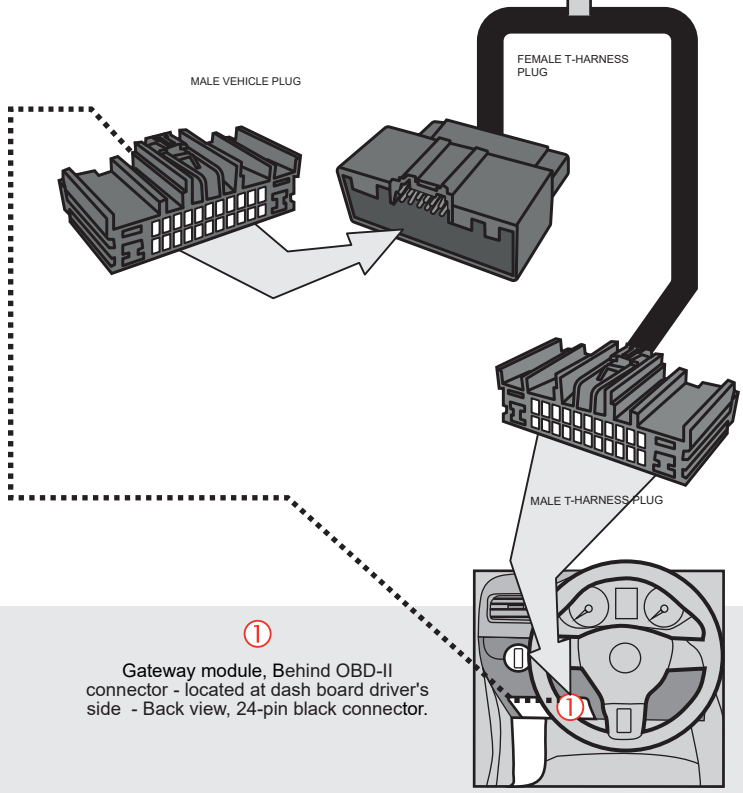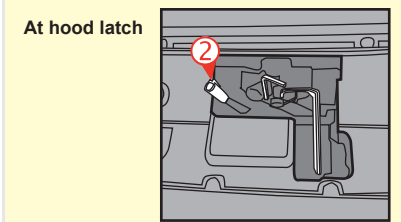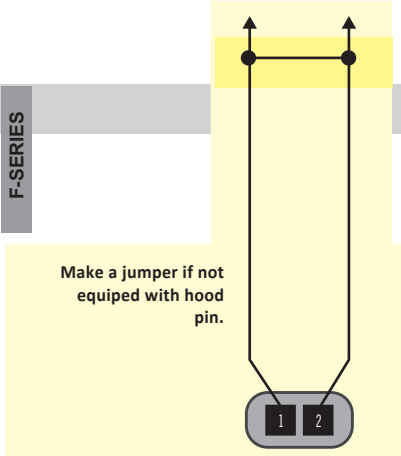



Parts required (not included) Pièces requises (non incluses)


- 1x **FLASH LINK UPDATER,**
- 1x **FLASH LINK MANAGER**
SOFTWARE | PROGRAMME
- 1x Microsoft Windows Computer with Internet connection

OR

- 1x **FLASH LINK MOBILE**
- 1x **FLASH LINK MOBILE APP**
- Smartphone Android or iOS with Internet connection
(Internet provider charges may apply)

BEFORE PROGRAMMING SET THE UNIT OPTIONS AND SAVE.


1

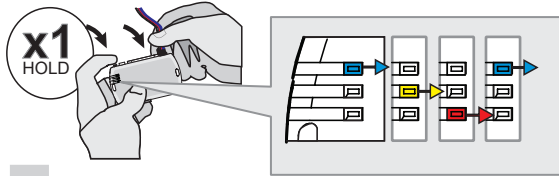

Press and hold the programming button:
Insert the 4-Pin (Data-Link) connector.


↳ The Blue, Red, Yellow and Blue & Red LEDs will alternatively illuminate.

2

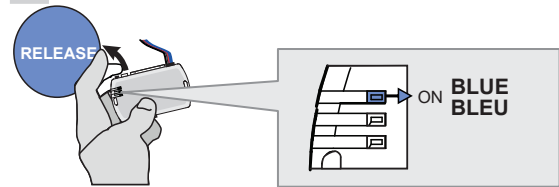


Release the programming button when the LED is BLUE.

 If the LED is not solid BLUE disconnect the 4-Pin connector (Data-Link) and go back to step 1.




3

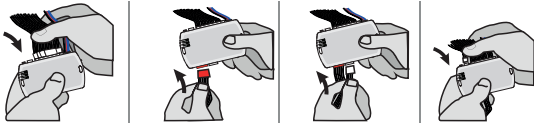

Insert the required remaining connectors.

4

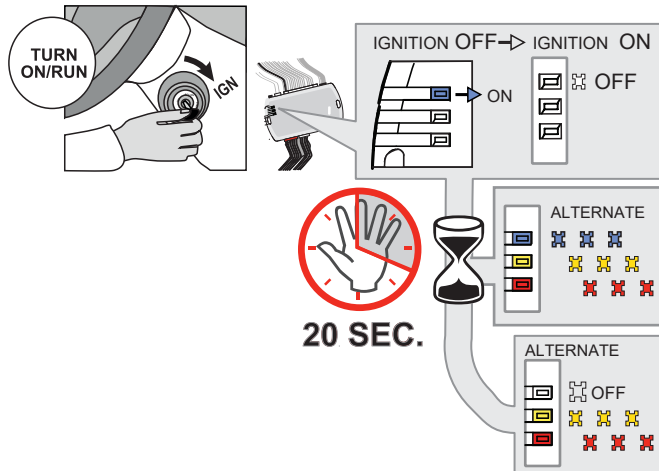

Turn the key to the Ignition ON/RUN position.

 
↳ The BLUE LED will turn OFF.

↳ The BLUE, YELLOW and RED LEDs will alternate.


Wait, at least 20 seconds, do not disconnect the modules or turn off the ignition.

↳ The RED and YELLOW LEDs will alternate.

Make sure that the DELs are flashing RED and YELLOW before continuing programming.



5

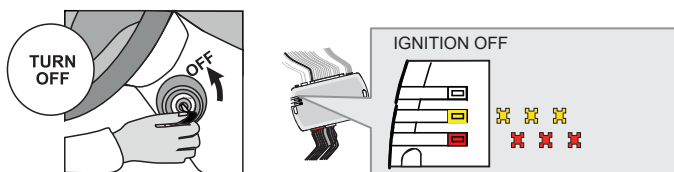


Turn the key to the OFF position.

↳ The RED and YELLOW LEDs alternate.


KEY BYPASS PROGRAMMING PROCEDURE 2/2 |

6

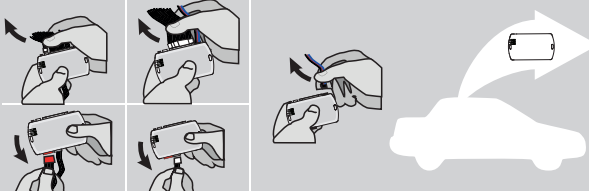

Disconnect all the connectors and after the Data-Link (4-pins) connector.

7



Microsoft Windows Computer with Internet connection*

FLASH LINK UPDATER* **FLASH LINK MANAGER***
SOFTWARE | PROGRAMME

OR


Smartphone* (Internet provider charges may apply)

VEHICLE'S OBDII CONNECTOR **FLASH LINK MOBILE***

Use the tool: FLASH LINK UPDATER or FLASH LINK MOBILE to visit the DCryptor menu.

*Parts required (not included)

8

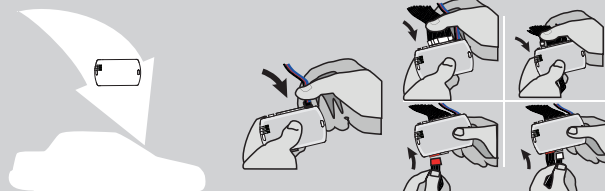


AFTER DCRYPTOR PROGRAMMING COMPLETED
Go back to the vehicle and reconnect the 4-Pin (Data-Link) connector and after, all the remaining connector.



↳ The BLUE LED will turn ON.

9

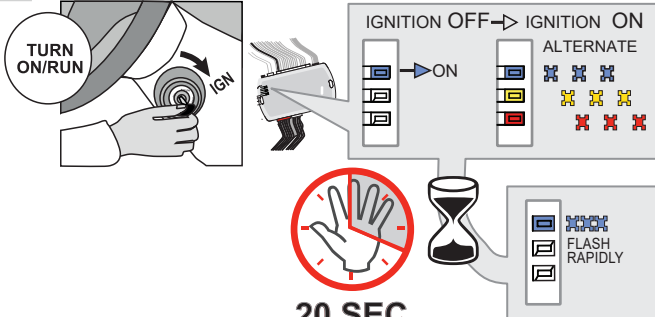

TURN ON/RUN

IGNITION OFF → IGNITION ON

ALTERNATE

↳ The RED and YELLOW LEDs will turn ON.


↳ The BLUE LED will flash rapidly.

Wait, at least 20 seconds, do not disconnect the modules or turn off the ignition.

20 SEC.

FLASH RAPIDLY


10

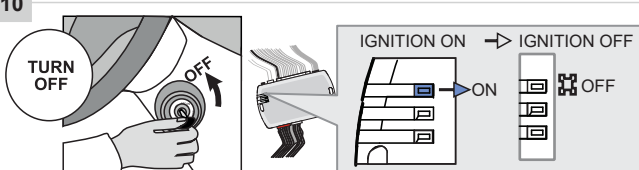

TURN OFF

IGNITION ON → IGNITION OFF

↳ The BLUE will turn OFF.



The module is now programmed.

OPTIONAL RF-KIT PROGRAMMING |

PROGRAM BYPASS OPTION



Program bypass option:

H2


Supported RF-KITS enable

H2 Fortin 2

OPTIONAL FORTIN RF KIT SERIES 4 OR SERIES 9 PROGRAMMING



The module must be programmed on the vehicle.

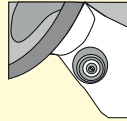

MAKE SURE THE IGNITION KEY HAS BEEN IN THE OFF POSITION FOR AT LEAST 5 SECONDS.

<p>1</p> <p>ON TURN ON/RUN</p> <p>Turn the key to the ON/RUN position.</p>	<p>2</p> <p>OFF TURN OFF</p> <p>Turn the ignition to the OFF position.</p>	<p>3</p> <p>ON TURN ON/RUN</p> <p>Turn the key to the ON/RUN position.</p>	<p>4</p> <p>4X BRAKES</p> <p>x4 PRESS</p> <p>Press and release the brake pedal four times.</p>	<p>5</p> <p>ON EACH TRANSMITTER</p> <p>4 BUTTONS</p> <p>[-] PRESS AND RELEASE</p> <p>➔ PRESS AND RELEASE APPUYEZ ET RELÂCHEZ</p> <p>1 BUTTON</p> <p>PRESS APPROX. 12 SEC. AND WAIT FOR THE BLUE LED TO TURN OFF THEN BACK ON SOLID THEN RELEASE.</p>	<p>6</p> <p>OFF TURN OFF</p> <p>Turn the ignition to the OFF position.</p>	<p>7</p> <p>ON TURN ON/RUN</p> <p>Turn the key to the ON/RUN position and leave it ON for 5 sec.</p>	<p>8</p> <p>OFF TURN OFF</p> <p>Turn the ignition to the OFF position.</p>
<p>The YELLOW LED will turn ON solid.</p>	<p>The YELLOW LED will turn Off.</p>	<p>The YELLOW LED will turn ON solid.</p>	<p>The 3 LED will turn ON solid.</p>	<p>The LED will flash rapidly.</p>	<p>The 3 LED will turn off.</p>	<p>The YELLOW LED will turn ON solid.</p>	<p>The YELLOW LED will turn Off.</p>
				<p>The 3 LED will turn off each time.</p>			



REMOTE STARTER FUNCTIONALITY |



All doors must be closed.



Remote start the vehicle.



Unlock the doors with the remote-starter remote or the OEM remote.



Insert and Turn the key to the Ignition ON/RUN position.



Press the brake pedal.



The vehicle can now be put in to gear and driven.

STANDALONE & THAR-FOR3 INSTALLATION

ADDENDUM - SUGGESTED WIRING CONFIGURATION




ONLY COMPATIBLE WITH AUTOMATIC TRANSMISSION VEHICLES.



Vehicle functions supported in this diagram (functional if equipped)

VEHICLE	YEARS	Immobilizer bypass	Lock	Unlock	Arm	Disarm	RAP Disable	Parking Lights	Tachometer	Heated seats	Heated Mirrors	Rear defrost	Door Status	Trunk Status	Hood Status*	Hand-Brake Status	Foot-Brake Status	Active OEM Remote Start
FORD																		
F-150	Push-to-start 2020	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
F-250	Push-to-start 2020	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
F-350	Push-to-start 2020	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
F-450	Push-to-start 2020	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•

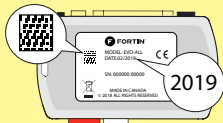

COMPATIBLE MODULE REQUIRED:

QR CODE ON THE LABEL
MANUFACTURED AFTER: 2019

FIRMWARE VERSION

58.[02]
MINIMUM

To add the firmware version and the options, use the **FLASH LINK UPDATER** or **FLASH LINK MOBILE** tool, sold separately.



Program bypass option:

UNIT OPTION

DESCRIPTION

C1

OEM Remote status (Lock/Unlock) monitoring

D6

Push-to-Start

IF THE VEHICLE IS NOT EQUIPPED WITH FUNCTIONAL HOOD PIN:

A11

OFF

Hood trigger (Output Status).

NOTES

The vehicles OEM remote and SmartKey are still operable during remote start.

**Heated seats The heated seats and rear defrost activate automatically when it cold.

***Parking Lights The parking Lights at remote start only.

MANDATORY INSTALL

*HOOD PIN



HOOD STATUS: THE HOOD PIN SWITCH MUST BE INSTALLED IF THE VEHICLE CAN BE REMOTE STARTED WITH THE HOOD OPEN, SET FUNCTION A11 TO OFF.

A11

OFF

Notice: the installation of safety elements are mandatory. The hood pin is an essential security element and must be installed.

THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.

PARTS REQUIRED (NOT INCLUDED)


1x **FLASH LINK UPDATER,**
 1x **FLASH LINK MANAGER**
 SOFTWARE | PROGRAMME
 1x Microsoft Windows Computer with Internet connection

OR


1x **FLASH LINK MOBILE**
 1x **FLASH LINK MOBILE APP**
 Smartphone *Android* or *iOS* with Internet connection (*provider charges may apply*).

MANDATORY

HOOD PIN



REMOTE START SAFETY OVERRIDE SWITCH

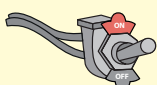
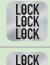






VALET SWITCH


Part #: RSPB available, Sold separately.

Notice: the installation of safety elements are mandatory. The hood pin and the valet switch are essential security elements and must be installed.


STAND ALONE CONFIGURATION

	Program bypass option	UNIT OPTION	DESCRIPTION
	OEM Remote Stand Alone Remote Starter:	D1.10 	By default, LOCK, LOCK, LOCK
		D1.1 	Par défaut, VERROUILLE, VERROUILLE, VERROUILLE
	Program bypass option with oem remote:	C1	OEM Remote Monitoring
	Program bypass option with RF KIT antenna:	H1 to H6	Supported RF Kits and select RF Kit
	Program bypass option Vehicle hybrid only:	D4	Hybrid mode (Vehicle hybrid only)


REMOTE STARTER FUNCTIONALITY




All doors must be closed.

3X 

Press the OEM remote's Lock button 3x to remote-start (or remote-stop) the vehicle.




START 

The vehicle will START.

REMOTE STARTER DIAGNOSTICS
MODULE RED LED


x2 flash :	Brake ON
x3 flash :	No tach
x4 flash :	Ignition before start
x5 flash :	Hood Open

REMOTE STARTER WARNING CARD



CUT THIS WARNING CARD AND STICK IT ON A VISIBLE PLACE:
 or use the package **RSPB**, Sold separately.

WARNING



REMOTE STARTER

THE VEHICLE CAN BE STARTED BY EITHER: PRESSING THE LOCK BUTTON ON THE OEM REMOTE 3 TIMES CONSECUTIVELY OR BY A SMARTPHONE. **TURN ON** THE SAFETY SWITCH LOCATED UNDER THE DASHBOARD BEFORE WORKING ON THE VEHICLE.

DESCRIPTION

	Parts required (Not included)	PAGE
--	-------------------------------	------

WIRE TO WIRE DIAGRAM


AUTOMATIC TRANSMISSION	1x 7.5 Amp. fuse	Page 3
------------------------	------------------	--------

THARNESS DIAGRAM


THARNESS THAR-FOR3	AUTOMATIC TRANSMISSION	1x THAR-FOR3	Page 4
--------------------	------------------------	--------------	--------




① Gateway module, located at dash board driver's side,

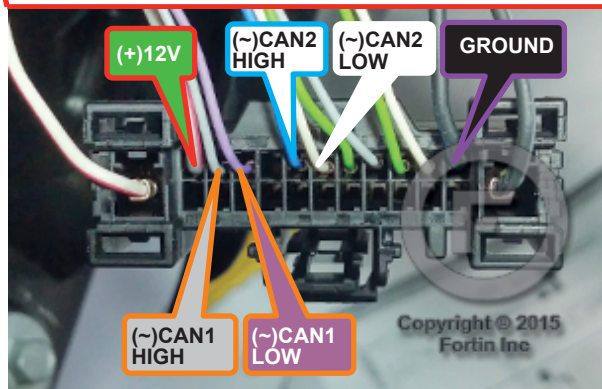


② Under the hood If not equipped with hood pin.

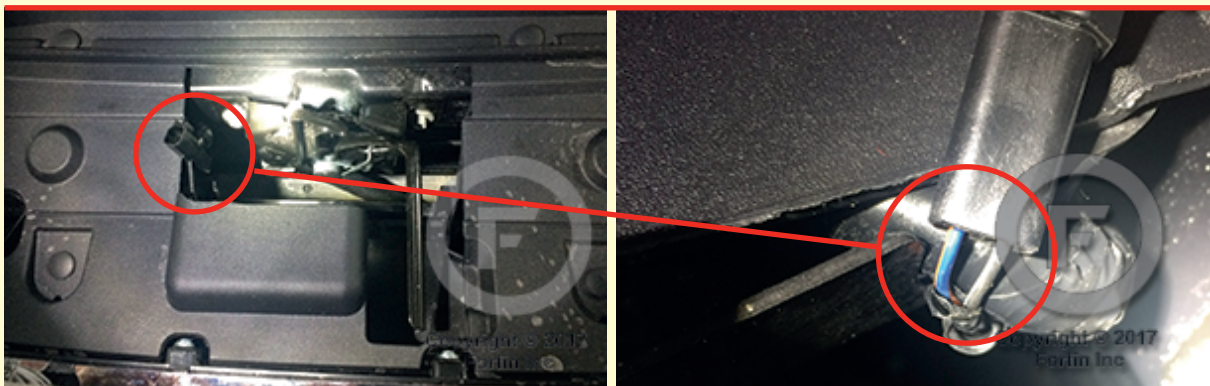




AUTOMATIC TRANSMISSION WIRING CONNECTION |

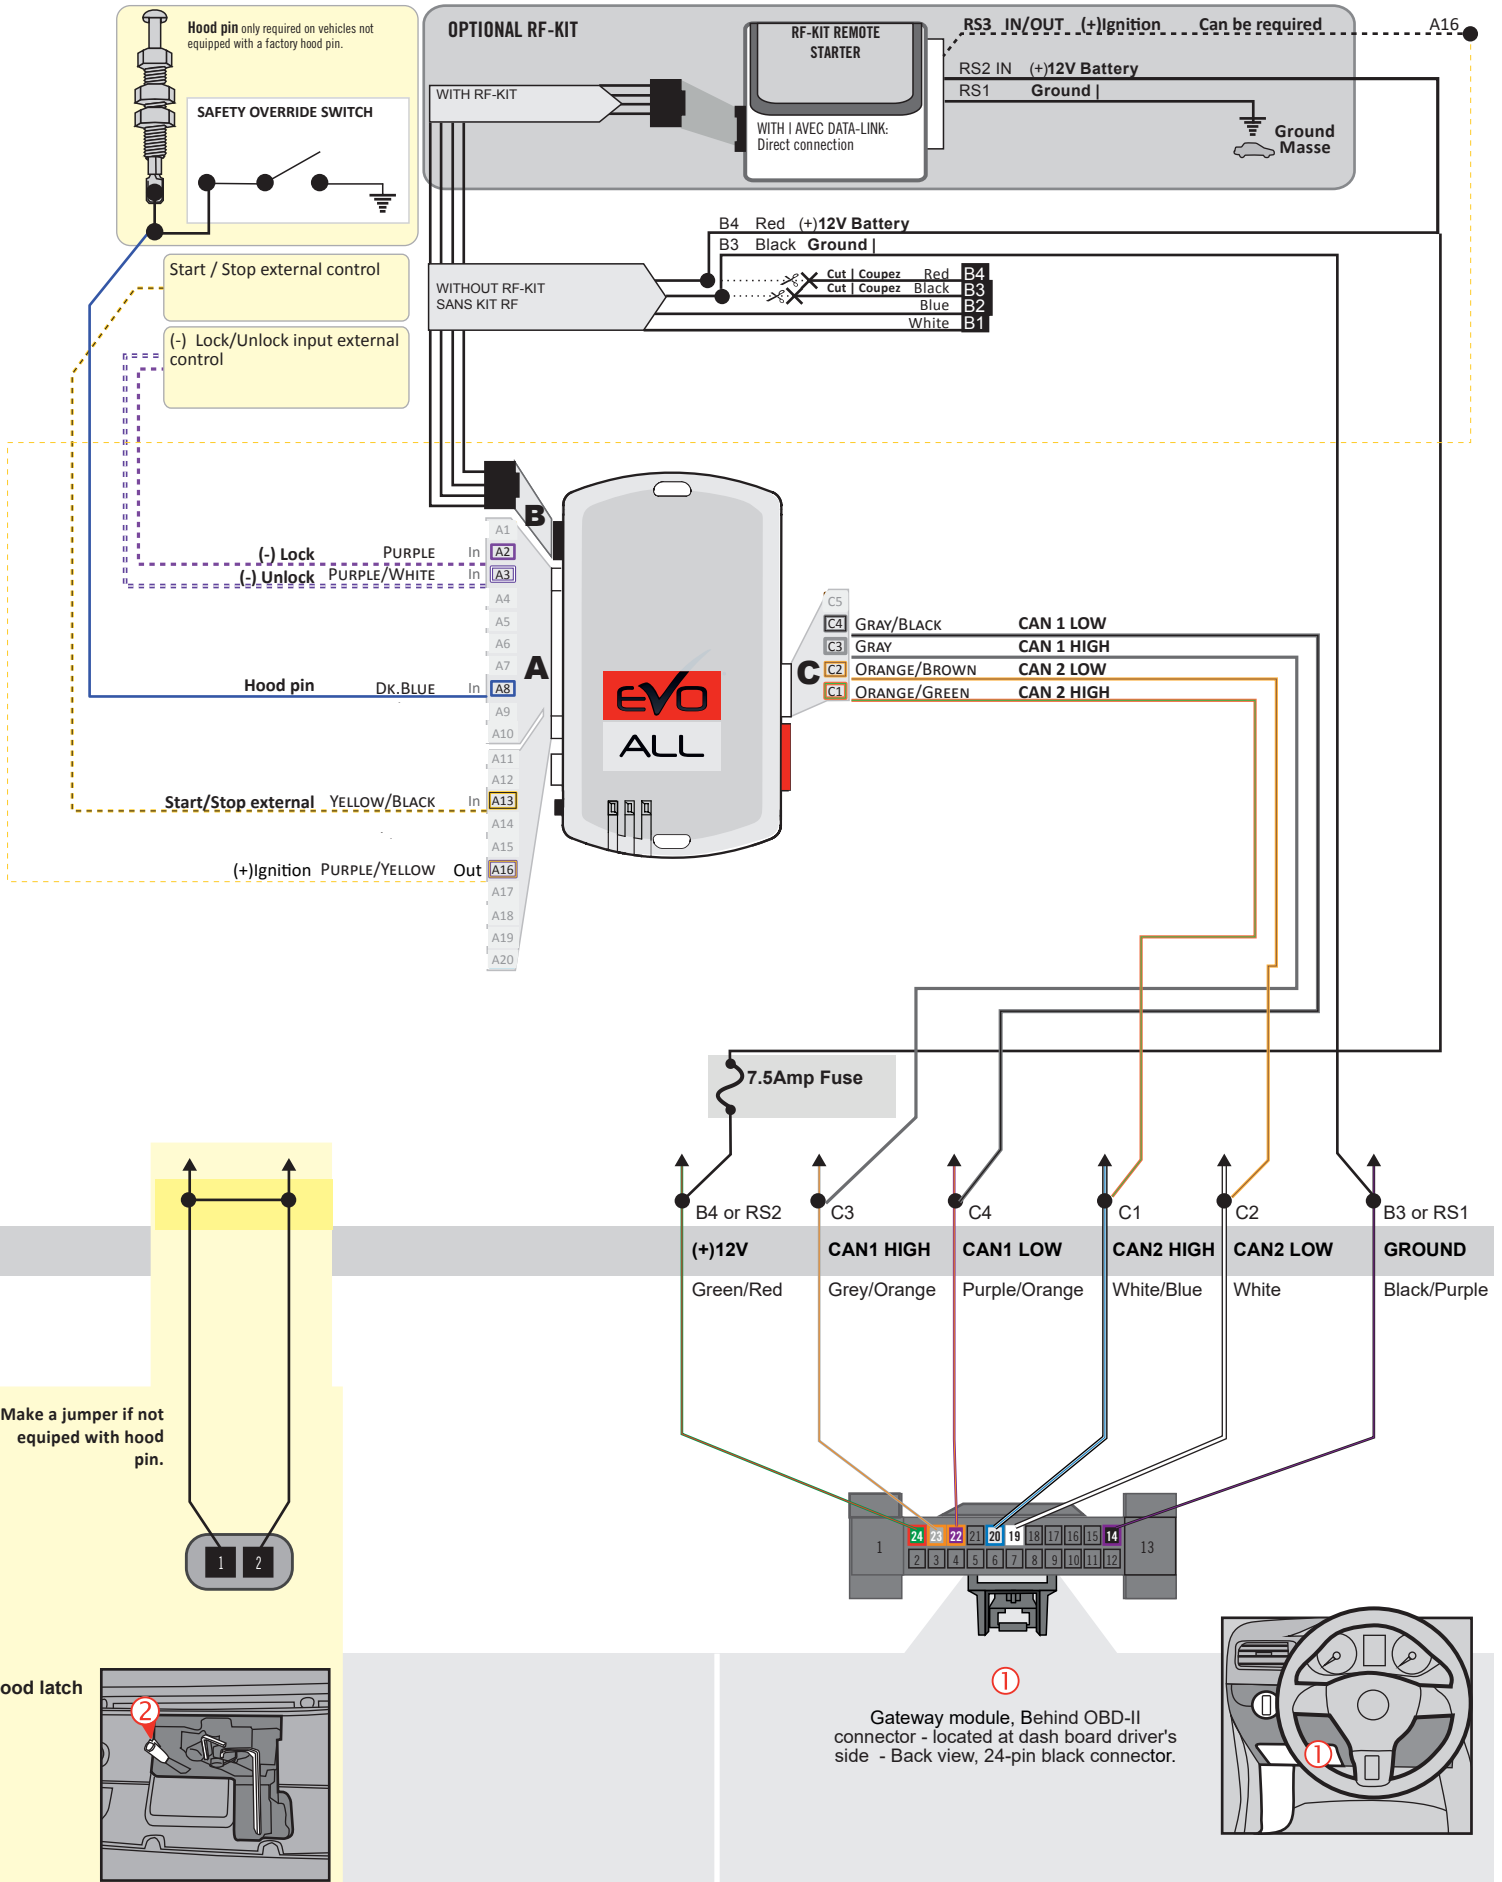

THAR-FOR3 | T-HARNESS - AUTOMATIC TRANSMISSION |

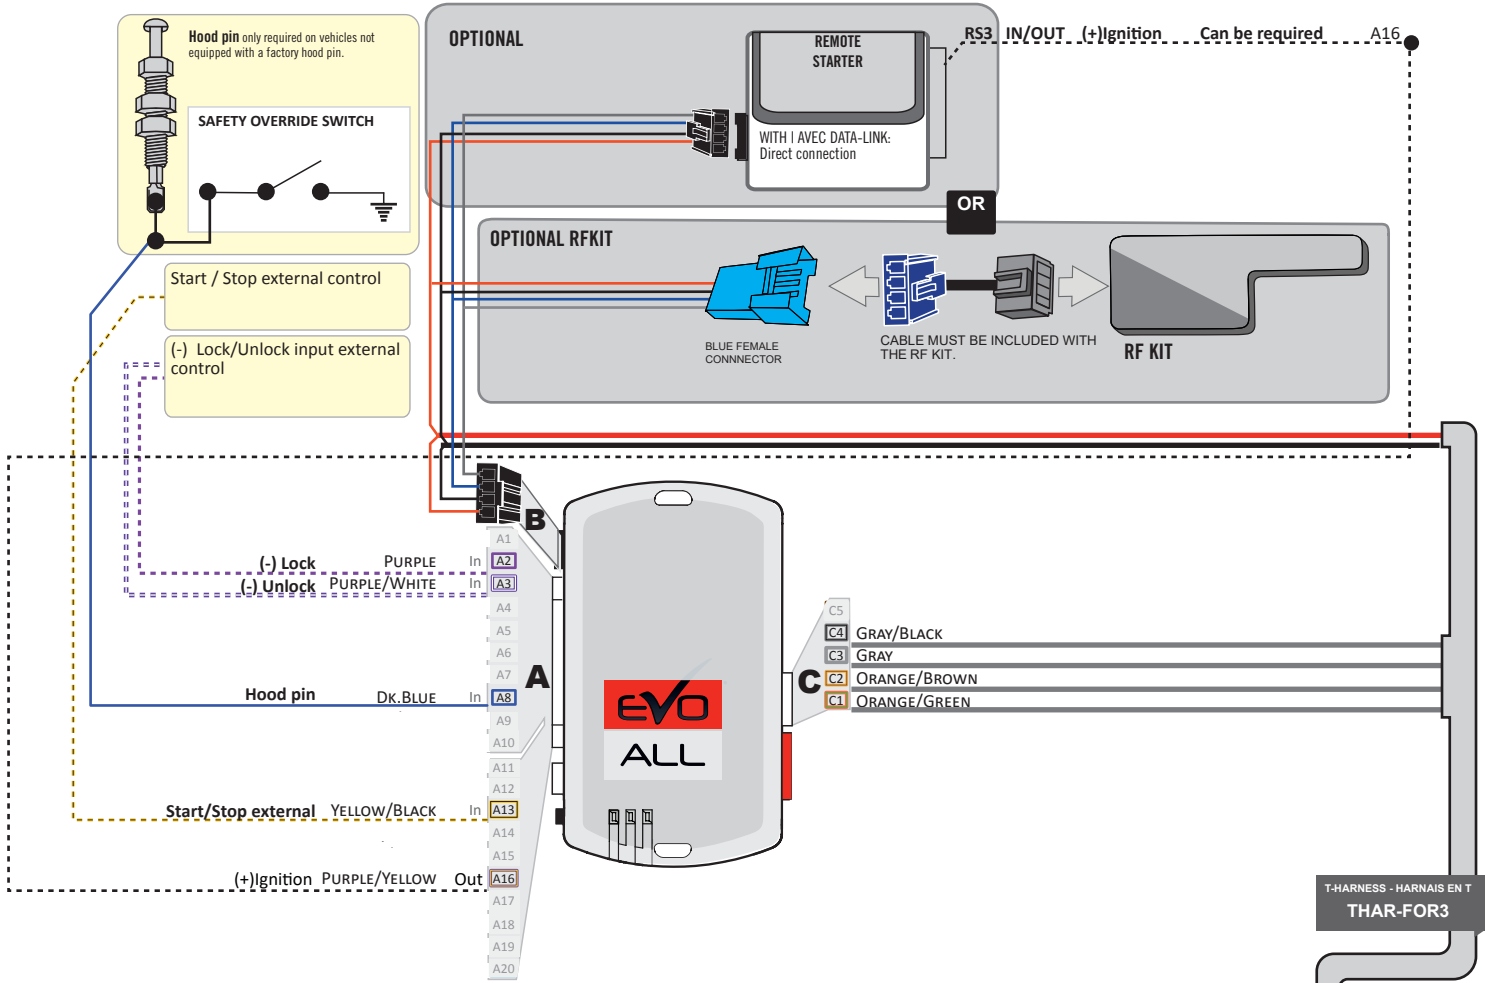

F-SERIES

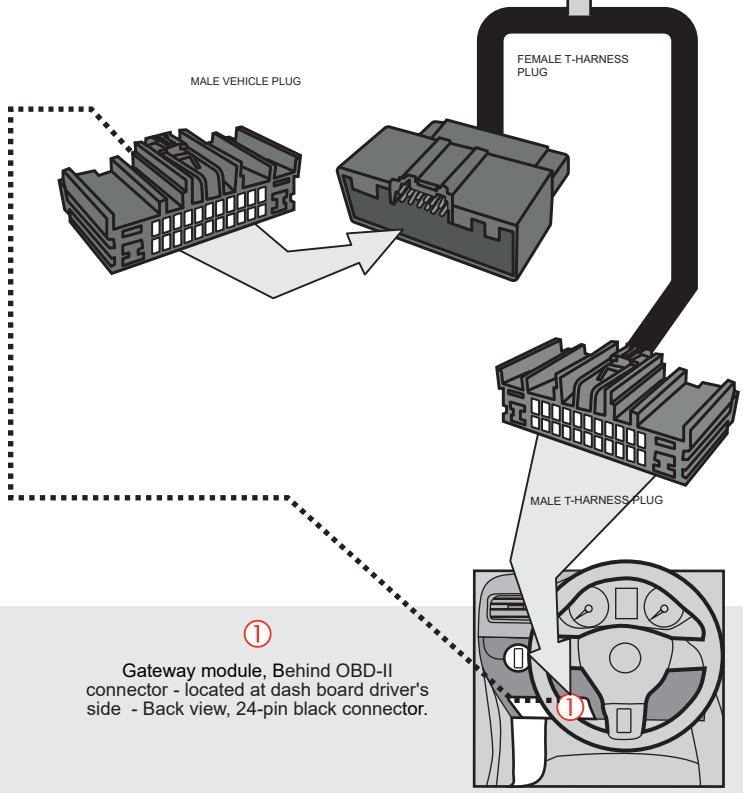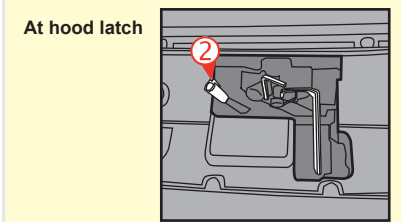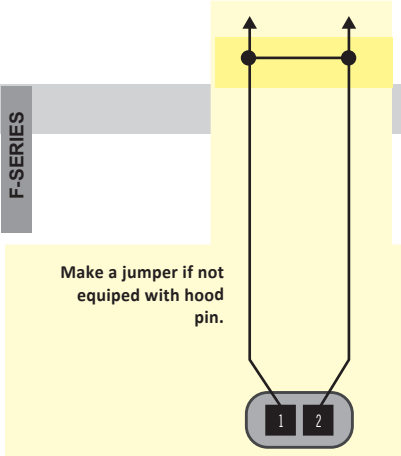



Parts required (not included)


- 1x FLASH LINK UPDATER, SOFTWARE | PROGRAMME
- 1x FLASH LINK MANAGER
- 1x Microsoft Windows Computer with Internet connection

OR

- 1x FLASH LINK MOBILE
- 1x FLASH LINK MOBILE APP
- Smartphone Android or iOS with Internet connection (Internet provider charges may apply)

BEFORE PROGRAMMING SET THE UNIT OPTIONS AND SAVE.


1

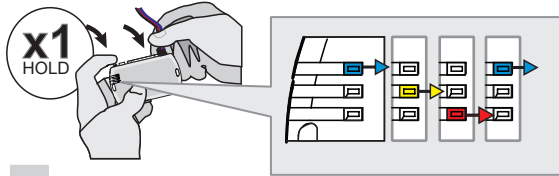

Press and hold the programming button:
Insert the 4-Pin (Data-Link) connector.

↳ The Blue, Red, Yellow and Blue & Red LEDs will alternatively illuminate.


2

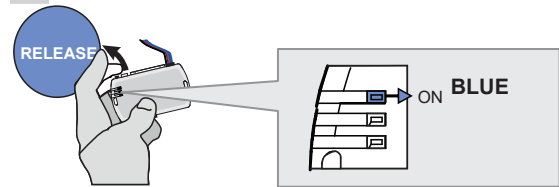

Release the programming button when the LED is BLUE.


If the LED is not solid BLUE disconnect the 4-Pin connector (Data-Link) and go back to step 1.

3

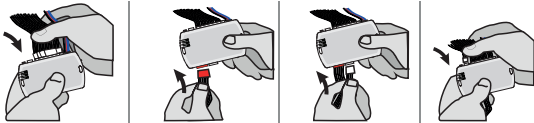

Insert the required remaining connectors.

4

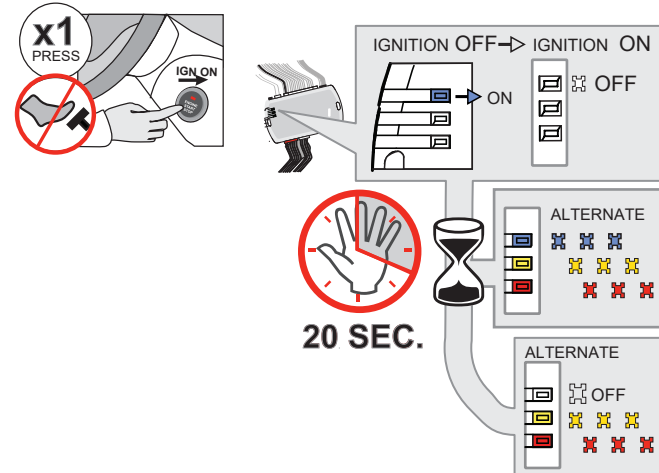

Do not press the brake pedal.
Press the Push-to-Start button once to turn on the ignition.

↳ The BLUE LED will turn OFF.

↳ The BLUE, YELLOW and RED LEDs will alternate.


Wait, at least 20 seconds, do not disconnect the modules or turn off the ignition.

↳ The RED and YELLOW LEDs will alternate.

Make sure that the DELs are flashing RED and YELLOW before continuing programming.



5

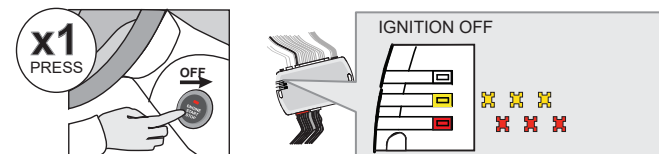

Press the Push-to-Start button once to turn off the ignition.

↳ The RED and YELLOW LEDs alternate.

KEY BYPASS PROGRAMMING PROCEDURE 2/2 |

6

Disconnect all the connectors and after the Data-Link (4-pins) connector.

7

Microsoft Windows Computer with Internet connection*

OR


Smartphone* (Internet provider charges may apply)

Use the tool: FLASH LINK UPDATER or FLASH LINK MOBILE to visit the DCryptor menu.

*Parts required (not included)

8

AFTER DCRYPTOR PROGRAMMING COMPLETED
Go back to the vehicle and **reconnect** the 4-Pin (Data-Link) connector and after, all the remaining connector.

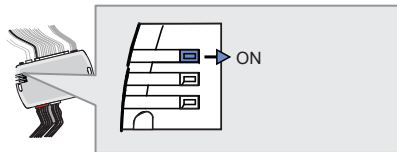

↳ The BLUE LED will turn ON.

9

Do not press the brake pedal. Press the Push-to-Start button once to turn on the ignition.

↳ The RED and YELLOW LEDs will turn ON.

Wait, at least 20 seconds, do not disconnect the modules or turn off the ignition.

↳ The BLUE LED will flash rapidly.

10

Press the Push-to-Start button once to turn off the ignition.

↳ The BLUE will turn OFF.

The module is now programmed.

OPTIONAL RF-KIT PROGRAMMING |

PROGRAM BYPASS OPTION I

	<p>Program bypass option:</p>	<p>H2</p>	<p><input checked="" type="checkbox"/> Supported RF-KITS enable <input checked="" type="checkbox"/> H2 Fortin 2</p>
--	-------------------------------	------------------	---

OPTIONAL FORTIN RF KIT SERIES 4 OR SERIES 9 PROGRAMMING



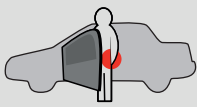

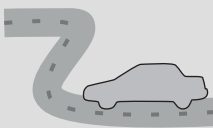
The module must be programmed on the vehicle.

MAKE SURE THE IGNITION KEY HAS BEEN IN THE OFF POSITION FOR AT LEAST 5 SECONDS.

<p>1</p> <p>ON x1 PRESS</p> <p>Do not press the brake pedal. Press the Push-to-Start button once to turn on the ignition.</p>	<p>2</p> <p>OFF x1 PRESS</p> <p>Press the Push-to-Start button once to turn off the ignition.</p>	<p>3</p> <p>ON x1 PRESS</p> <p>Do not press the brake pedal. Press the Push-to-Start button once to turn on the ignition.</p>	<p>4</p> <p>4X BRAKES</p> <p>x4 PRESS</p> <p>Press and release the brake pedal four times.</p>	<p>5</p> <p>ON EACH TRANSMITTER</p> <p>4 BUTTONS</p> <p>[-] PRESS AND RELEASE</p> <p>[+] PRESS AND RELEASE</p> <p>1 BUTTON</p> <p>PRESS APPROX. 12 SEC. AND WAIT FOR THE BLUE LED TO TURN OFF THEN BACK ON SOLID THEN RELEASE.</p>	<p>6</p> <p>OFF x1 PRESS</p> <p>Press the Push-to-Start button once to turn off the ignition.</p>	<p>7</p> <p>ON x1 PRESS</p> <p>Do not press the brake pedal. Press the Push-to-Start button once to turn on the ignition and leave it ON for 5 sec..</p>	<p>8</p> <p>OFF x1 PRESS</p> <p>Press the Push-to-Start button once to turn off the ignition.</p>
<p>The YELLOW LED will turn ON solid.</p>	<p>The YELLOW LED will turn Off.</p>	<p>The LED will turn ON solide.</p>	<p>The LED will flash rapidly.</p>	<p>The LED will turn off each time.</p>	<p>The LED will turn Off.</p>	<p>The LED will turn Off.</p>	<p>The LED will turn Off.</p>
<p>The YELLOW LED will turn ON solid.</p>	<p>The YELLOW LED will turn Off.</p>	<p>The YELLOW LED will turn ON solid.</p>	<p>The 3 LED will turn ON solid.</p>	<p>The LED will flash rapidly. Le témoin clignotera rapidement.</p>	<p>The 3 LED will turn off.</p>	<p>The YELLOW LED will turn ON solid.</p>	<p>The YELLOW LED will turn Off.</p>



REMOTE STARTER FUNCTIONALITY |

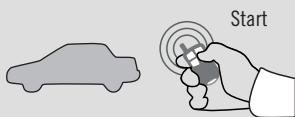 <p>Start</p> <p>All doors must be closed.</p> <p>Remote start the vehicle.</p>	 <p>UNLOCK</p> <p>Unlock the doors with either:</p> <ul style="list-style-type: none"> • The OEM remote • The remote-starter remote • Or the proximity remote 	 <p>Enter the vehicle with the SMART-KEY.</p>	 <p>DO NOT PRESS THE BRAKE PEDAL.</p> <p>Press and release the Push-to-Start button once.</p>	 <p>Press the brake pedal. The vehicle can now be put in to gear and driven.</p> <p>If the Smart-Key is not detected the vehicle will shut down.</p>
--	---	--	---	---

STANDALONE & THAR-FOR3 INSTALLATION

ADDENDUM - SUGGESTED WIRING CONFIGURATION




ONLY COMPATIBLE WITH AUTOMATIC TRANSMISSION VEHICLES.



Vehicle functions supported in this diagram (functional if equipped)

VEHICLE	YEARS	Immobilizer bypass Contournement	T-Harness available (sold separately)	Lock	Unlock	Arm	Disarm	Heated Seats**	Rear Defrost**	RAP Disable	Parking Lights****	Tachometer	Door Status	Trunk Status	Hood Status*	Hand-Brake Status	Foot-Brake Status	Active OEM Remote Start	
FORD																			
Fusion	Key 2020	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
	Hybrid Key 2020	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•

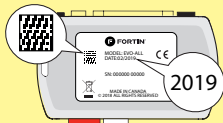

COMPATIBLE MODULE REQUIRED:

QR CODE ON THE LABEL
MANUFACTURED AFTER: 2019

FIRMWARE VERSION

58.[02]
MINIMUM

To add the firmware version and the options, use the **FLASH LINK UPDATER** or **FLASH LINK MOBILE** tool, sold separately.

UNIT OPTION	DESCRIPTION
C1	OEM Remote status (Lock/Unlock) monitoring
A11 OFF	Hood trigger (Output Status).
D4	Hybrid mode (Vehicle hybrid only)

NOTES

The vehicles OEM remote and SmartKey are still operable during remote start.

**Heated seats The heated seats and rear defrost activate automatically when it cold.

***Parking Lights The parking Lights at remote start only.



The vehicle must be equipped with the OEM remote with the door locks.

MANDATORY INSTALL

*HOOD PIN



HOOD STATUS: THE HOOD PIN SWITCH MUST BE INSTALLED IF THE VEHICLE CAN BE REMOTE STARTED WITH THE HOOD OPEN, SET FUNCTION A11 TO OFF.

A11

OFF

Notice: the installation of safety elements are mandatory. The hood pin is an essential security element and must be installed.

THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.

PARTS REQUIRED (NOT INCLUDED) |

1x **FLASH LINK UPDATER,**
 1x **FLASH LINK MANAGER**
SOFTWARE | PROGRAMME
 1x Microsoft Windows Computer with Internet connection

OR

1x **FLASH LINK MOBILE**
 1x **FLASH LINK MOBILE APP**
Smartphone Android or iOS with Internet connection (provider charges may apply).

MANDATORY

HOOD PIN

REMOTE START SAFETY OVERRIDE SWITCH

VALET SWITCH

Part #: RSPB available, Sold separately.

Notice: the installation of safety elements are mandatory. The hood pin and the valet switch are essential security elements and must be installed.

STAND ALONE CONFIGURATION |

	Program bypass option	UNIT OPTION	DESCRIPTION
	OEM Remote Stand Alone Remote Starter:	D1.10 D1.1	By default, LOCK, LOCK, LOCK Par défaut, VERROUILLE, VERROUILLE, VERROUILLE
	Program bypass option with oem remote:	C1	OEM Remote Monitoring
	Program bypass option with RF KIT antenna:	H1 to H6	Supported RF Kits and select RF Kit
	Program bypass option Vehicle hybrid only:	D4	Hybrid mode (Vehicle hybrid only)

REMOTE STARTER FUNCTIONALITY |

All doors must be closed.

3X

Press the OEM remote's Lock button 3x to remote-start (or remote-stop) the vehicle.

The vehicle will START.

REMOTE STARTER DIAGNOSTICS

MODULE RED LED

x2 flash : Brake ON

x3 flash : No tach

x4 flash : Ignition before start

x5 flash : Hood Open

REMOTE STARTER WARNING CARD |

CUT THIS WARNING CARD AND STICK IT ON A VISIBLE PLACE:
 or use the package RSPB, Sold separately.

WARNING

REMOTE STARTER

THE VEHICLE CAN BE STARTED BY EITHER: PRESSING THE LOCK BUTTON ON THE OEM REMOTE 3 TIMES CONSECUTIVELY OR BY A SMARTPHONE. **TURN ON** THE SAFETY SWITCH LOCATED UNDER THE DASHBOARD BEFORE WORKING ON THE VEHICLE.

DESCRIPTION |

Parts required (Not included) **PAGE**

WIRE TO WIRE DIAGRAM

AUTOMATIC TRANSMISSION	1x 7.5 Amp. fuse	Page 3
------------------------	------------------	--------



THARNESSE DIAGRAM

THARNESSE THAR-FOR3 AUTOMATIC TRANSMISSION	1x THAR-FOR3	Page 4
--	--------------	--------








② Parking Lights switch


① Gateway module, Behind OBD-II connector

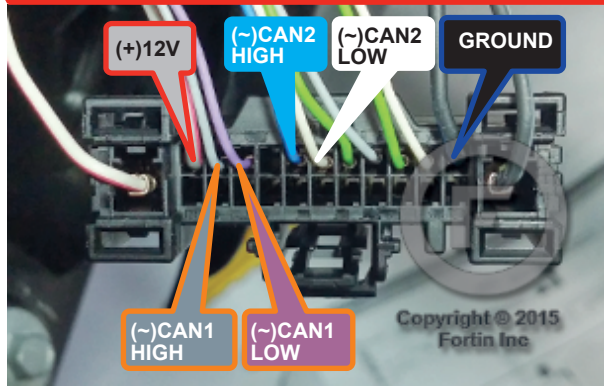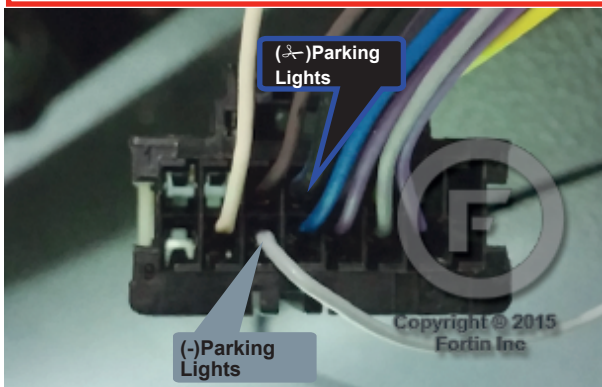


AUTOMATIC TRANSMISSION WIRING CONNECTION

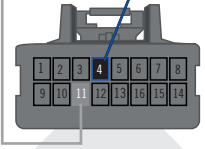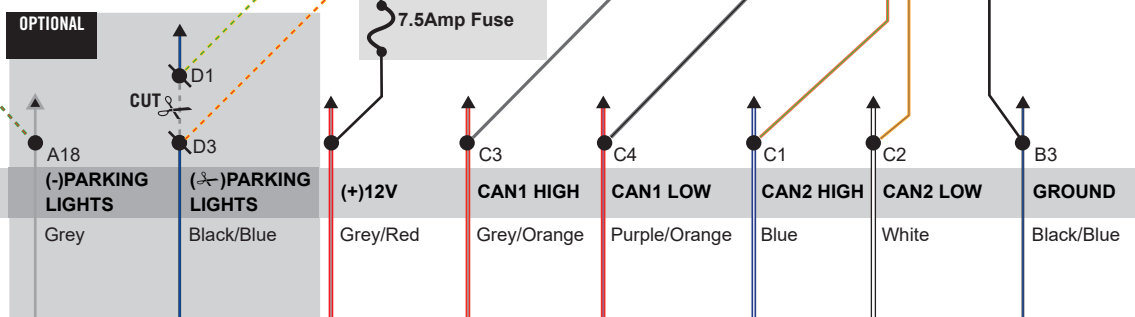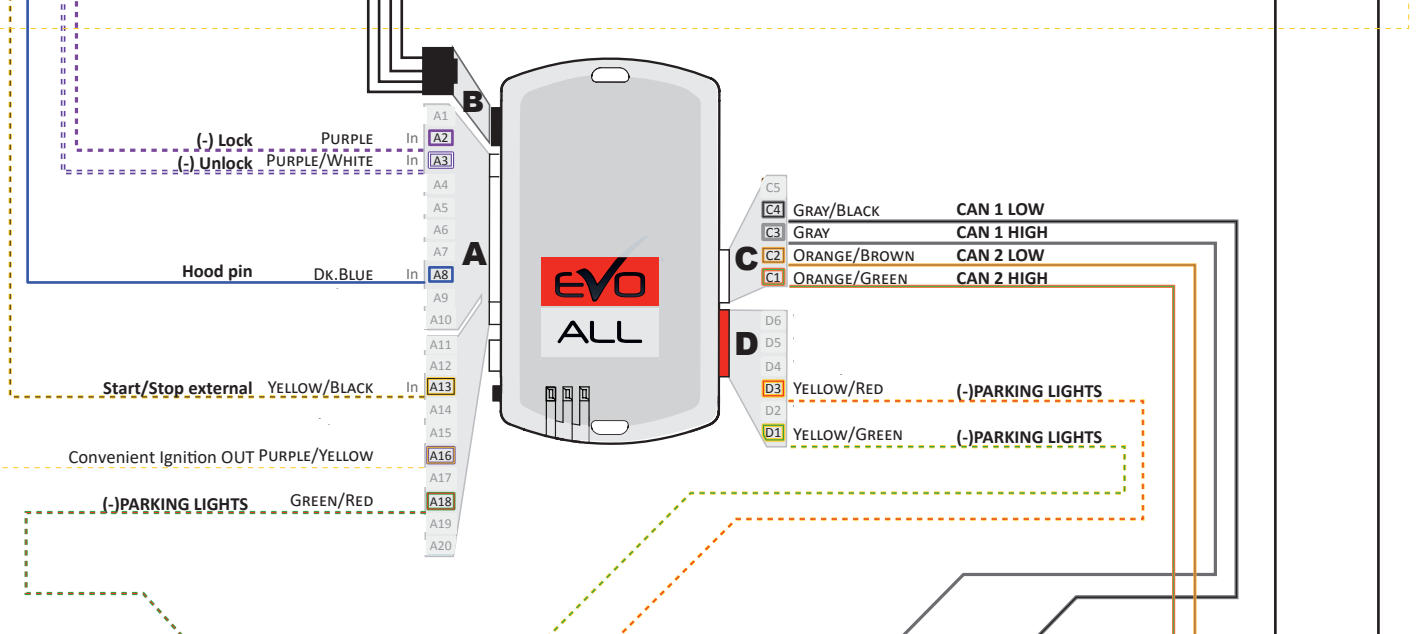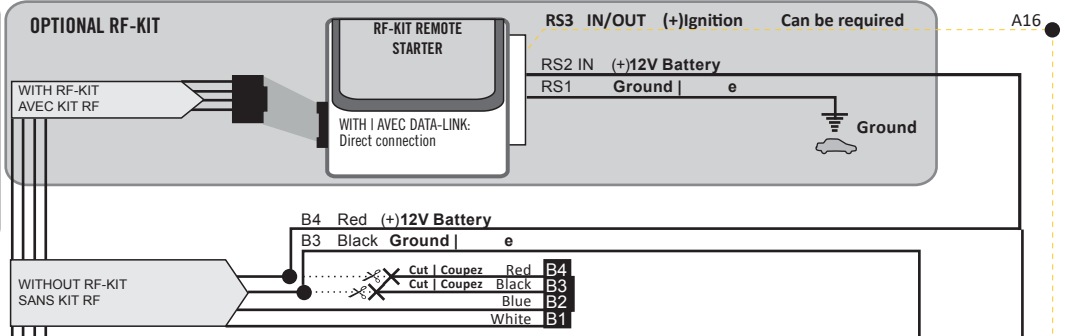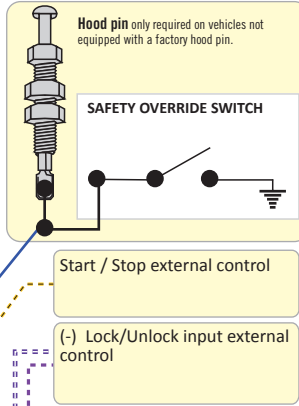


② Parking Lights switch
Back view, 14-pin black connector.

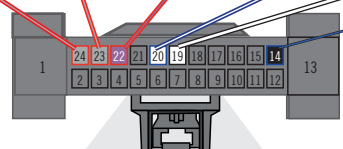

① Gateway module, Connector Behind OBD-II connector - located at dash board driver's side
Back view, 24-pin black connector.

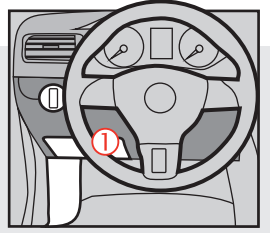

THAR-FOR3 | T-HARNESS - AUTOMATIC TRANSMISSION |

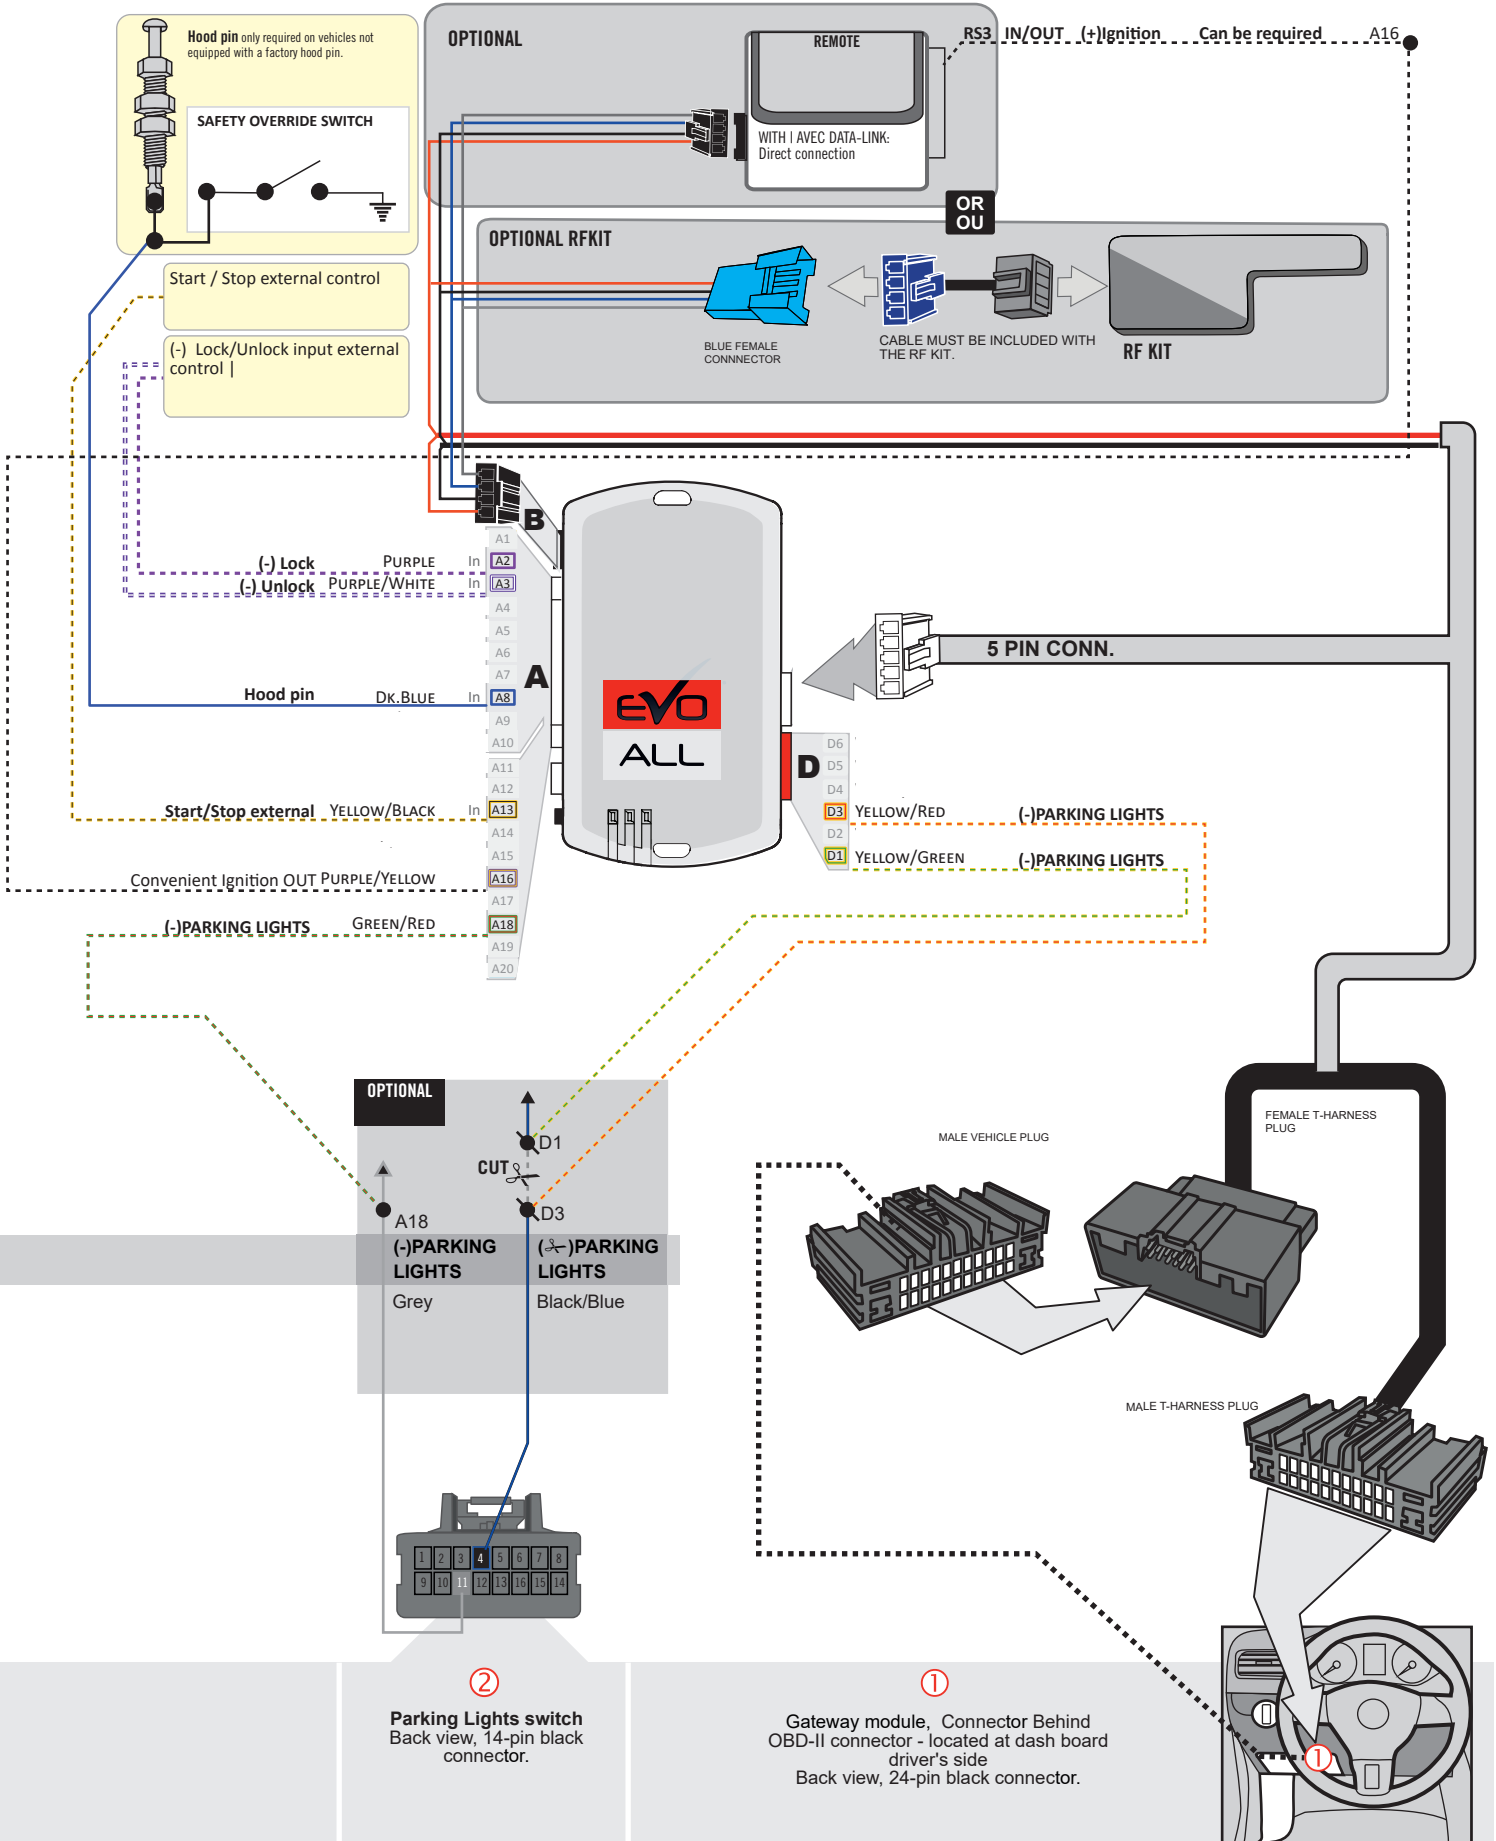



Parts required (not included)


- 1x FLASH LINK UPDATER, SOFTWARE | PROGRAMME
- 1x FLASH LINK MANAGER
- 1x Microsoft Windows Computer with Internet connection

OR

- 1x FLASH LINK MOBILE
- 1x FLASH LINK MOBILE APP
- Smartphone Android or iOS with Internet connection (Internet provider charges may apply)

BEFORE PROGRAMMING SET THE UNIT OPTIONS AND SAVE.


1

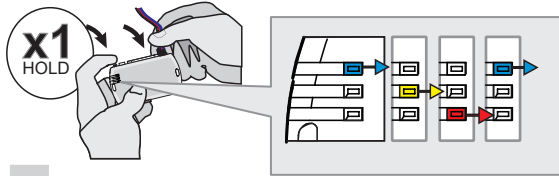

Press and hold the programming button:
Insert the 4-Pin (Data-Link) connector.


↳ The Blue, Red, Yellow and Blue & Red LEDs will alternatively illuminate.

2

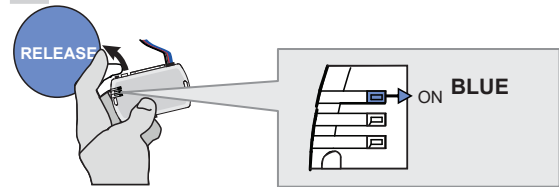


Release the programming button when the LED is BLUE.

 If the LED is not solid BLUE disconnect the 4-Pin connector (Data-Link) and go back to step 1.




3

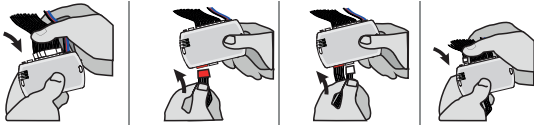

Insert the required remaining connectors.

4

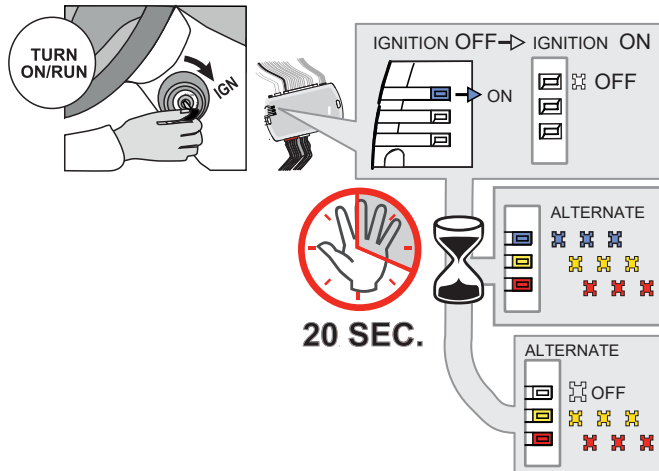

Turn the key to the Ignition ON/RUN position.

 
↳ The BLUE LED will turn OFF.

↳ The BLUE, YELLOW and RED LEDs will alternate.


Wait, at least 20 seconds, do not disconnect the modules or turn off the ignition.

↳ The RED and YELLOW LEDs will alternate.

Make sure that the DELs are flashing RED and YELLOW before continuing programming.



5

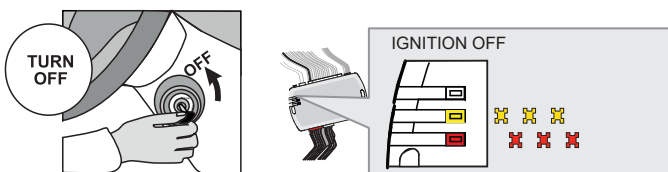


Turn the key to the OFF position.

↳ The RED and YELLOW LEDs alternate.


KEY BYPASS PROGRAMMING PROCEDURE 2/2 |

6

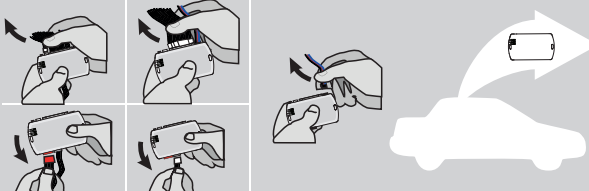

Disconnect all the connectors and after the Data-Link (4-pins) connector.

7



Microsoft Windows Computer with Internet connection*

FLASH LINK UPDATER* **FLASH LINK MANAGER***
SOFTWARE | PROGRAMME

OR


Smartphone* (Internet provider charges may apply)

VEHICLE'S OBDII CONNECTOR **FLASH LINK MOBILE***


Use the tool: FLASH LINK UPDATER or FLASH LINK MOBILE to visit the DCryptor menu.

*Parts required (not included)

8

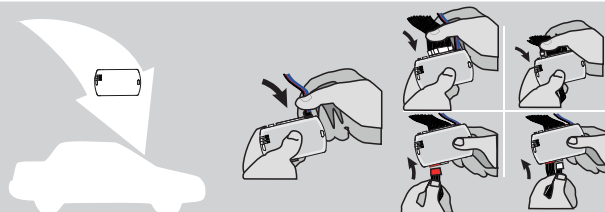


AFTER DCRYPTOR PROGRAMMING COMPLETED
Go back to the vehicle and reconnect the 4-Pin (Data-Link) connector and after, all the remaining connector.

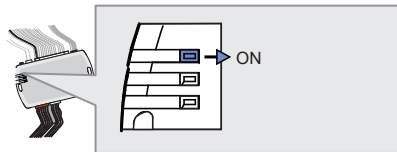

↳ The BLUE LED will turn ON.

9

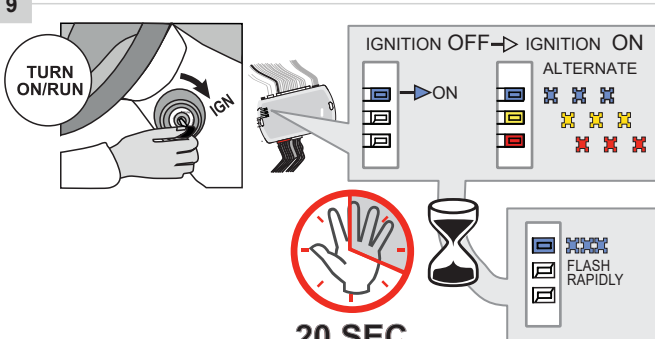

TURN ON/RUN

IGNITION OFF → IGNITION ON

ALTERNATE

↳ The RED and YELLOW LEDs will turn ON.


Wait, at least 20 seconds, do not disconnect the modules or turn off the ignition.

↳ The BLUE LED will flash rapidly.

20 SEC.

FLASH RAPIDLY

10

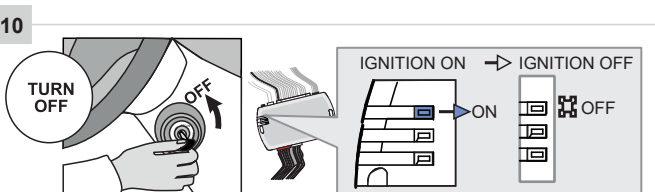

TURN OFF

IGNITION ON → IGNITION OFF


↳ The BLUE will turn OFF.



The module is now programmed.


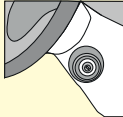
OPTIONAL RF-KIT PROGRAMMING |

PROGRAM BYPASS OPTION



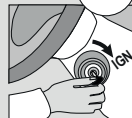





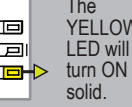
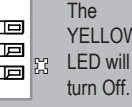
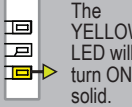
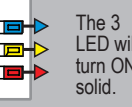
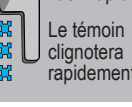
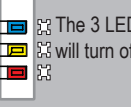
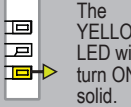
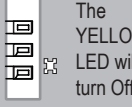
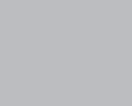
	<p>Program bypass option:</p>	<p>H2</p>	<p><input checked="" type="checkbox"/> Supported RF-KITS enable</p> <p><input checked="" type="checkbox"/> H2 Fortin 2</p> <p><input checked="" type="checkbox"/></p>
---	-------------------------------	------------------	---

OPTIONAL FORTIN RF KIT SERIES 4 OR SERIES 9 PROGRAMMING

The module must be programmed on the vehicle.

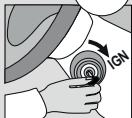MAKE SURE THE IGNITION KEY HAS BEEN IN THE OFF POSITION FOR AT LEAST 5 SECONDS.

<p>1</p> <p>ON TURN ON/RUN</p> 	<p>2</p> <p>OFF TURN OFF</p> 	<p>3</p> <p>ON TURN ON/RUN</p> 	<p>4</p> <p>4X BRAKES</p> <p>x4 PRESS</p> 	<p>5</p> <p>ON EACH TRANSMITTER</p> <p>4 BUTTONS</p> <p>[-] PRESS AND RELEASE</p> <p>[+] PRESS AND RELEASE</p> <p>1 BUTTON</p> <p>PRESS APPROX. 12 SEC. AND WAIT FOR THE BLUE LED TO TURN OFF THEN BACK ON SOLID THEN RELEASE.</p>	<p>6</p> <p>OFF TURN OFF</p> 	<p>7</p> <p>ON TURN ON/RUN</p> 	<p>8</p> <p>OFF TURN OFF</p> 
<p>Turn the key to the ON/RUN position.</p>	<p>Turn the ignition to the OFF position.</p>	<p>Turn the key to the ON/RUN position.</p>	<p>Press and release the brake pedal four times.</p>	<p>The LED will turn off each time.</p>	<p>Turn the ignition to the OFF position.</p>	<p>Turn the key to the ON/RUN position and leave it ON for 5 sec.</p> 	<p>Turn the ignition to the OFF position.</p>
 <p>The YELLOW LED will turn ON solid.</p>	 <p>The YELLOW LED will turn Off.</p>	 <p>The YELLOW LED will turn ON solid.</p>	 <p>The 3 LED will turn ON solid.</p>	 <p>The LED will flash rapidly.</p> <p>Le témoin clignotera rapidement.</p>	 <p>The LED will turn Off.</p>	 <p>The YELLOW LED will turn ON solid.</p>	 <p>The YELLOW LED will turn Off.</p>
 <p>The 3 LED will turn off each time.</p>							



REMOTE STARTER FUNCTIONALITY |



All doors must be closed.



Remote start the vehicle.



Unlock the doors with the remote-starter remote or the OEM remote.



Insert and Turn the key to the Ignition ON/RUN position.



Press the brake pedal.



The vehicle can now be put in to gear and driven.

STANDALONE & THAR-FOR3 INSTALLATION

ADDENDUM - SUGGESTED WIRING CONFIGURATION



ONLY COMPATIBLE WITH AUTOMATIC TRANSMISSION VEHICLES.



Vehicle functions supported in this diagram (functional if equipped)

VEHICLE	YEARS	Immobilizer bypass Contourment	T-Harness available (sold separately)	Lock	Unlock	Arm	Disarm	Heated Seats**	Rear Defrost**	RAP Disable	Parking Lights***	Tachometer	Door Status	Trunk Status	Hood Status*	Hand-Brake Status	Foot-Brake Status	Active OEM Remote Start	
FORD																			
Fusion	Push-to-Start 2020	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
	Hybrid Push-to-Start 2020	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
LINCOLN																			
Continental	Push-to-Start 2020	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•

COMPATIBLE MODULE REQUIRED:

QR CODE ON THE LABEL
MANUFACTURED AFTER: 2019

FIRMWARE VERSION
58.[02]
MINIMUM

To add the firmware version and the options, use the **FLASH LINK UPDATER** or **FLASH LINK MOBILE** tool, sold separately.

UNIT OPTION	DESCRIPTION
C1	OEM Remote status (Lock/Unlock) monitoring
D6	Push-to-Start
A11	OFF Hood trigger (Output Status).
D4	Hybrid mode (Vehicle hybrid only)

IF THE VEHICLE IS NOT EQUIPPED WITH FUNCTIONAL HOOD PIN:

Program bypass option (Vehicle hybrid only):

NOTES

The vehicles OEM remote and SmartKey are still operable during remote start.

**Heated seats The heated seats and rear defrost activate automatically when it cold.

**Rear Defrost

***Parking Lights The parking Lights at remote start only.

MANDATORY INSTALL

*HOOD PIN



HOOD STATUS: THE HOOD PIN SWITCH MUST BE INSTALLED IF THE VEHICLE CAN BE REMOTE STARTED WITH THE HOOD OPEN, SET FUNCTION A11 TO OFF.

A11

OFF

Notice: the installation of safety elements are mandatory. The hood pin is an essential security element and must be installed.

THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.

PARTS REQUIRED (NOT INCLUDED) |


1x **FLASH LINK UPDATER,**
1x **FLASH LINK MANAGER**
SOFTWARE | PROGRAMME
1x Microsoft Windows Computer with Internet connection

OR


1x **FLASH LINK MOBILE**
1x **FLASH LINK MOBILE APP**
Smartphone *Android* or *iOS* with Internet connection (*provider charges may apply*).
1x

MANDATORY

HOOD PIN



REMOTE START SAFETY OVERRIDE SWITCH

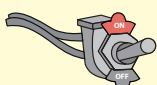
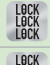






VALET SWITCH


Part #: RSPB available, Sold separately.

Notice: the installation of safety elements are mandatory. The hood pin and the valet switch are essential security elements and must be installed.


STAND ALONE CONFIGURATION |

	Program bypass option	UNIT OPTION	DESCRIPTION
	OEM Remote Stand Alone Remote Starter:	D1.10 	By default, LOCK, LOCK, LOCK
		D1.1 	Par défaut, VERROUILLE,VERROUILLE,VERROUILLE
	Program bypass option with oem remote:	C1	OEM Remote Monitoring
	Program bypass option with RF KIT antenna:	H1 to H6	Supported RF Kits and select RF Kit
	Program bypass option Vehicle hybrid only:	D4	Hybrid mode (Vehicle hybrid only)


REMOTE STARTER FUNCTIONALITY |




All doors must be closed.

3X 

Press the OEM remote's Lock button 3x to remote-start (or remote-stop) the vehicle.



START 

The vehicle will START.

REMOTE STARTER DIAGNOSTICS

MODULE RED LED


x2 flash : Brake ON

x3 flash : No tach

x4 flash : Ignition before start

x5 flash : Hood Open

REMOTE STARTER WARNING CARD |



CUT THIS WARNING CARD AND STICK IT ON A VISIBLE PLACE:
or use the package RSPB, Sold separately.

WARNING

REMOTE STARTER

THE VEHICLE CAN BE STARTED BY EITHER: PRESSING THE LOCK BUTTON ON THE OEM REMOTE 3 TIMES CONSECUTIVELY OR BY A SMARTPHONE. **TURN ON** THE SAFETY SWITCH LOCATED UNDER THE DASHBOARD BEFORE WORKING ON THE VEHICLE.

DESCRIPTION |

Parts required (Not included) **PAGE**

WIRE TO WIRE DIAGRAM

AUTOMATIC TRANSMISSION	1x 7.5 Amp. fuse	Page 3
------------------------	------------------	--------



THARNESSE DIAGRAM

THARNESSE THAR-FOR3 AUTOMATIC TRANSMISSION	1x THAR-FOR3	Page 4
--	--------------	--------




② Parking Lights switch


① Gateway module, Behind OBD-II connector

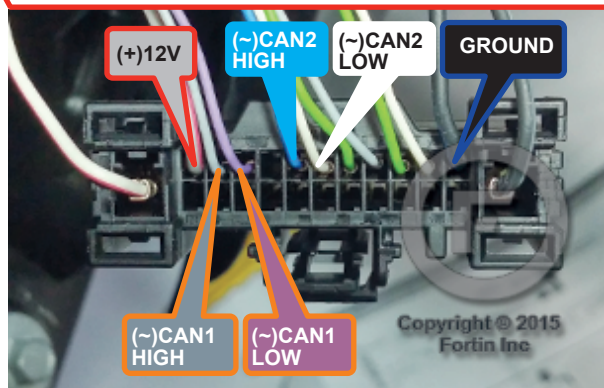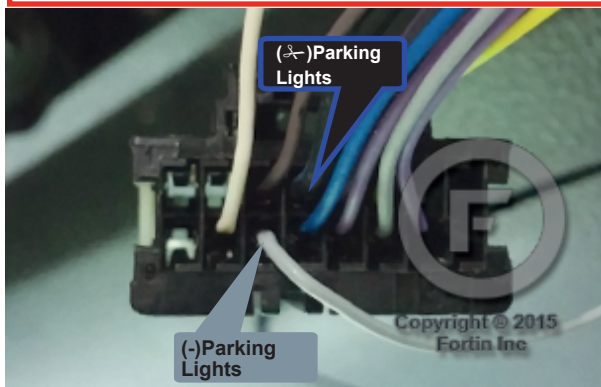

AUTOMATIC TRANSMISSION WIRING CONNECTION |

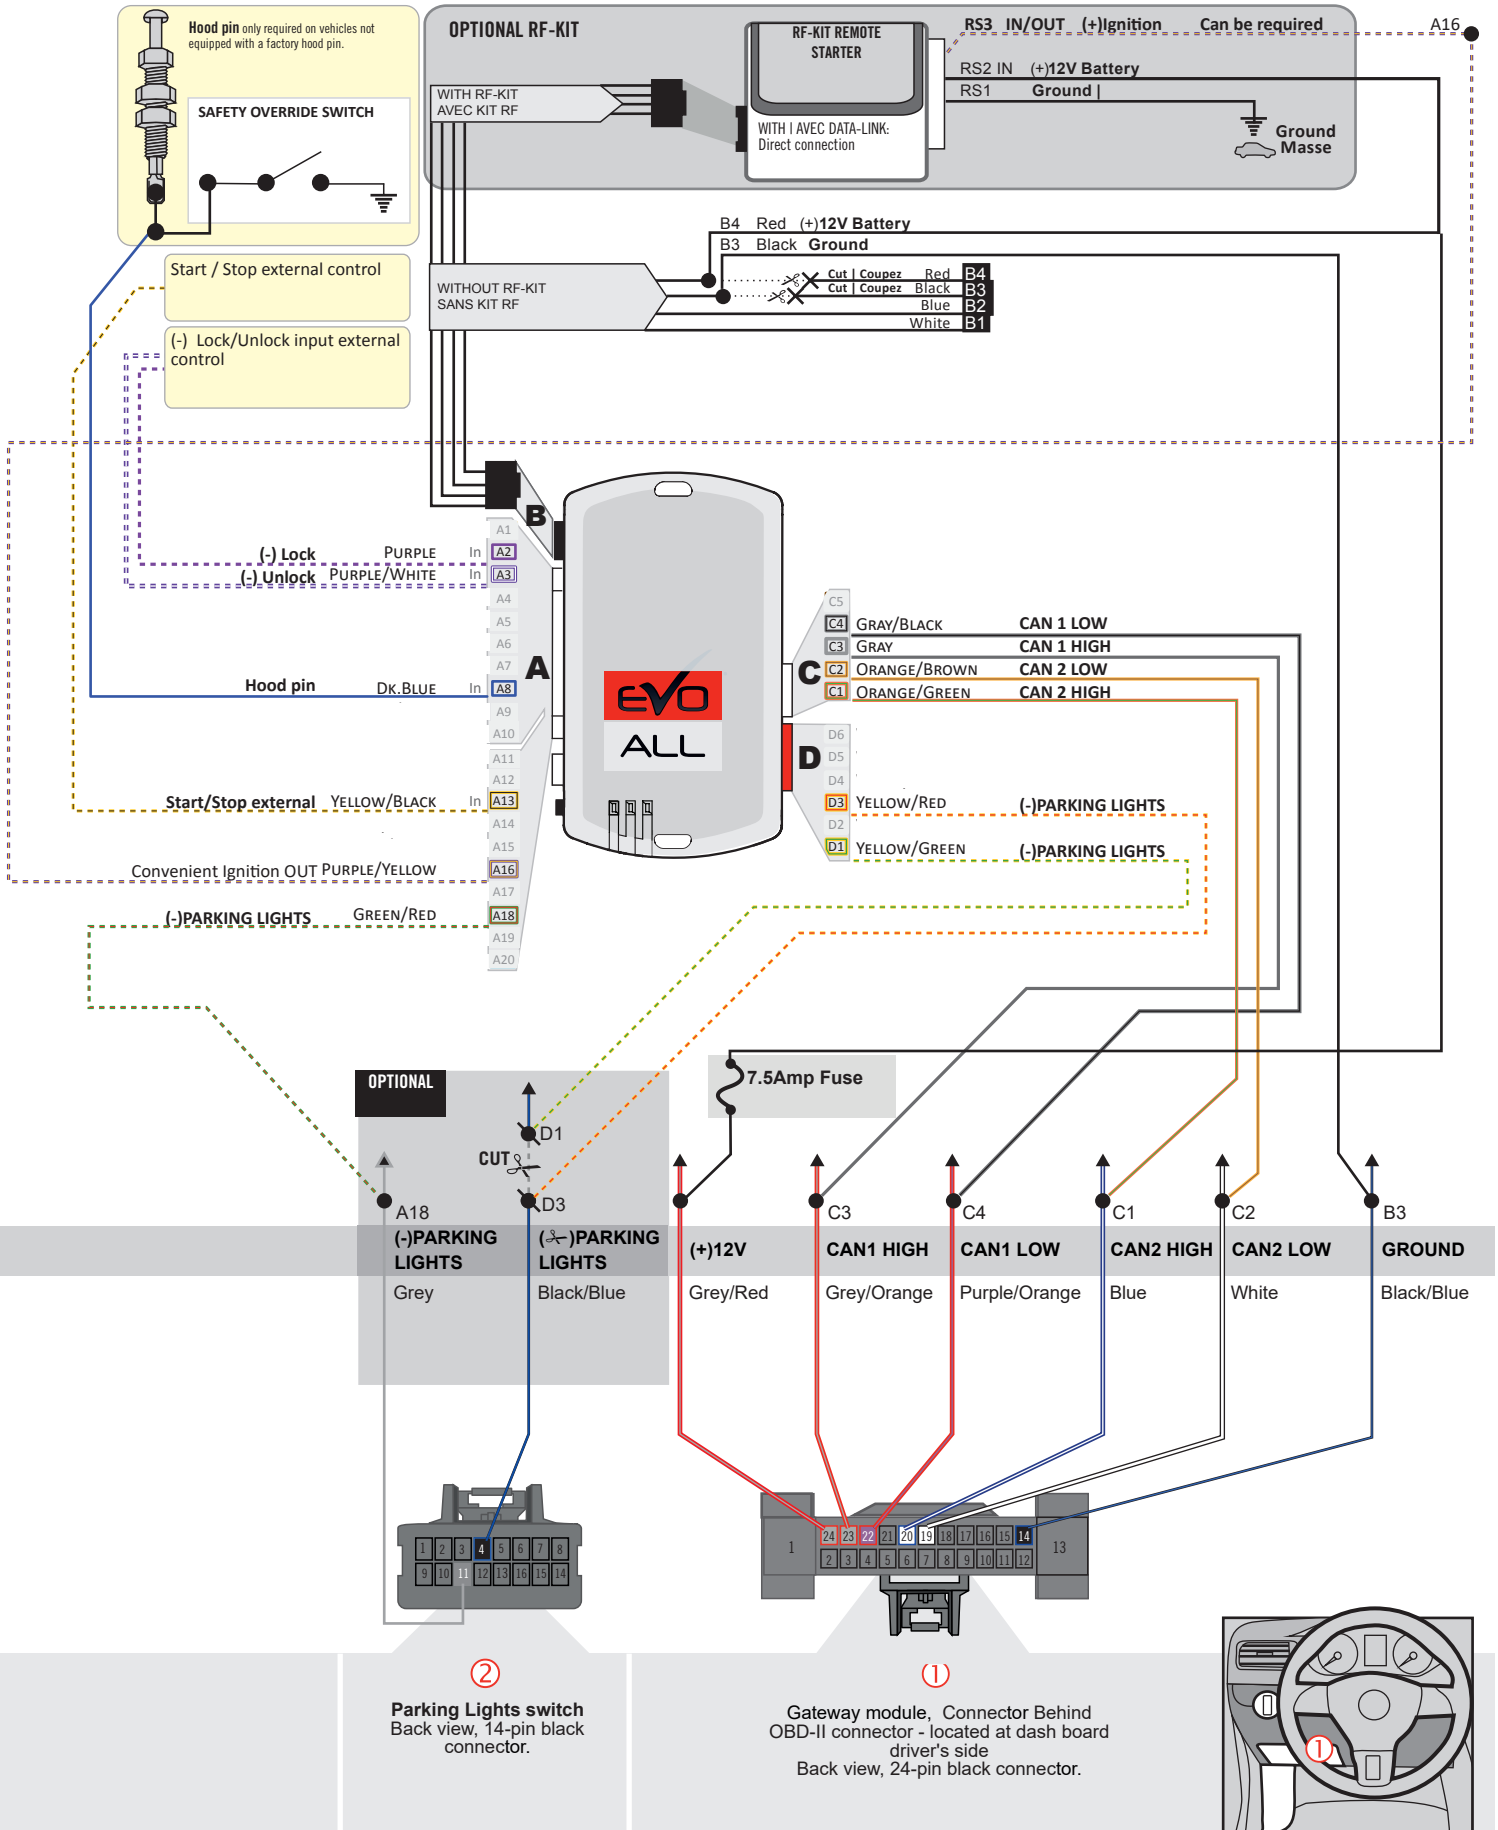

THAR-FOR3 | T-HARNESS - AUTOMATIC TRANSMISSION |

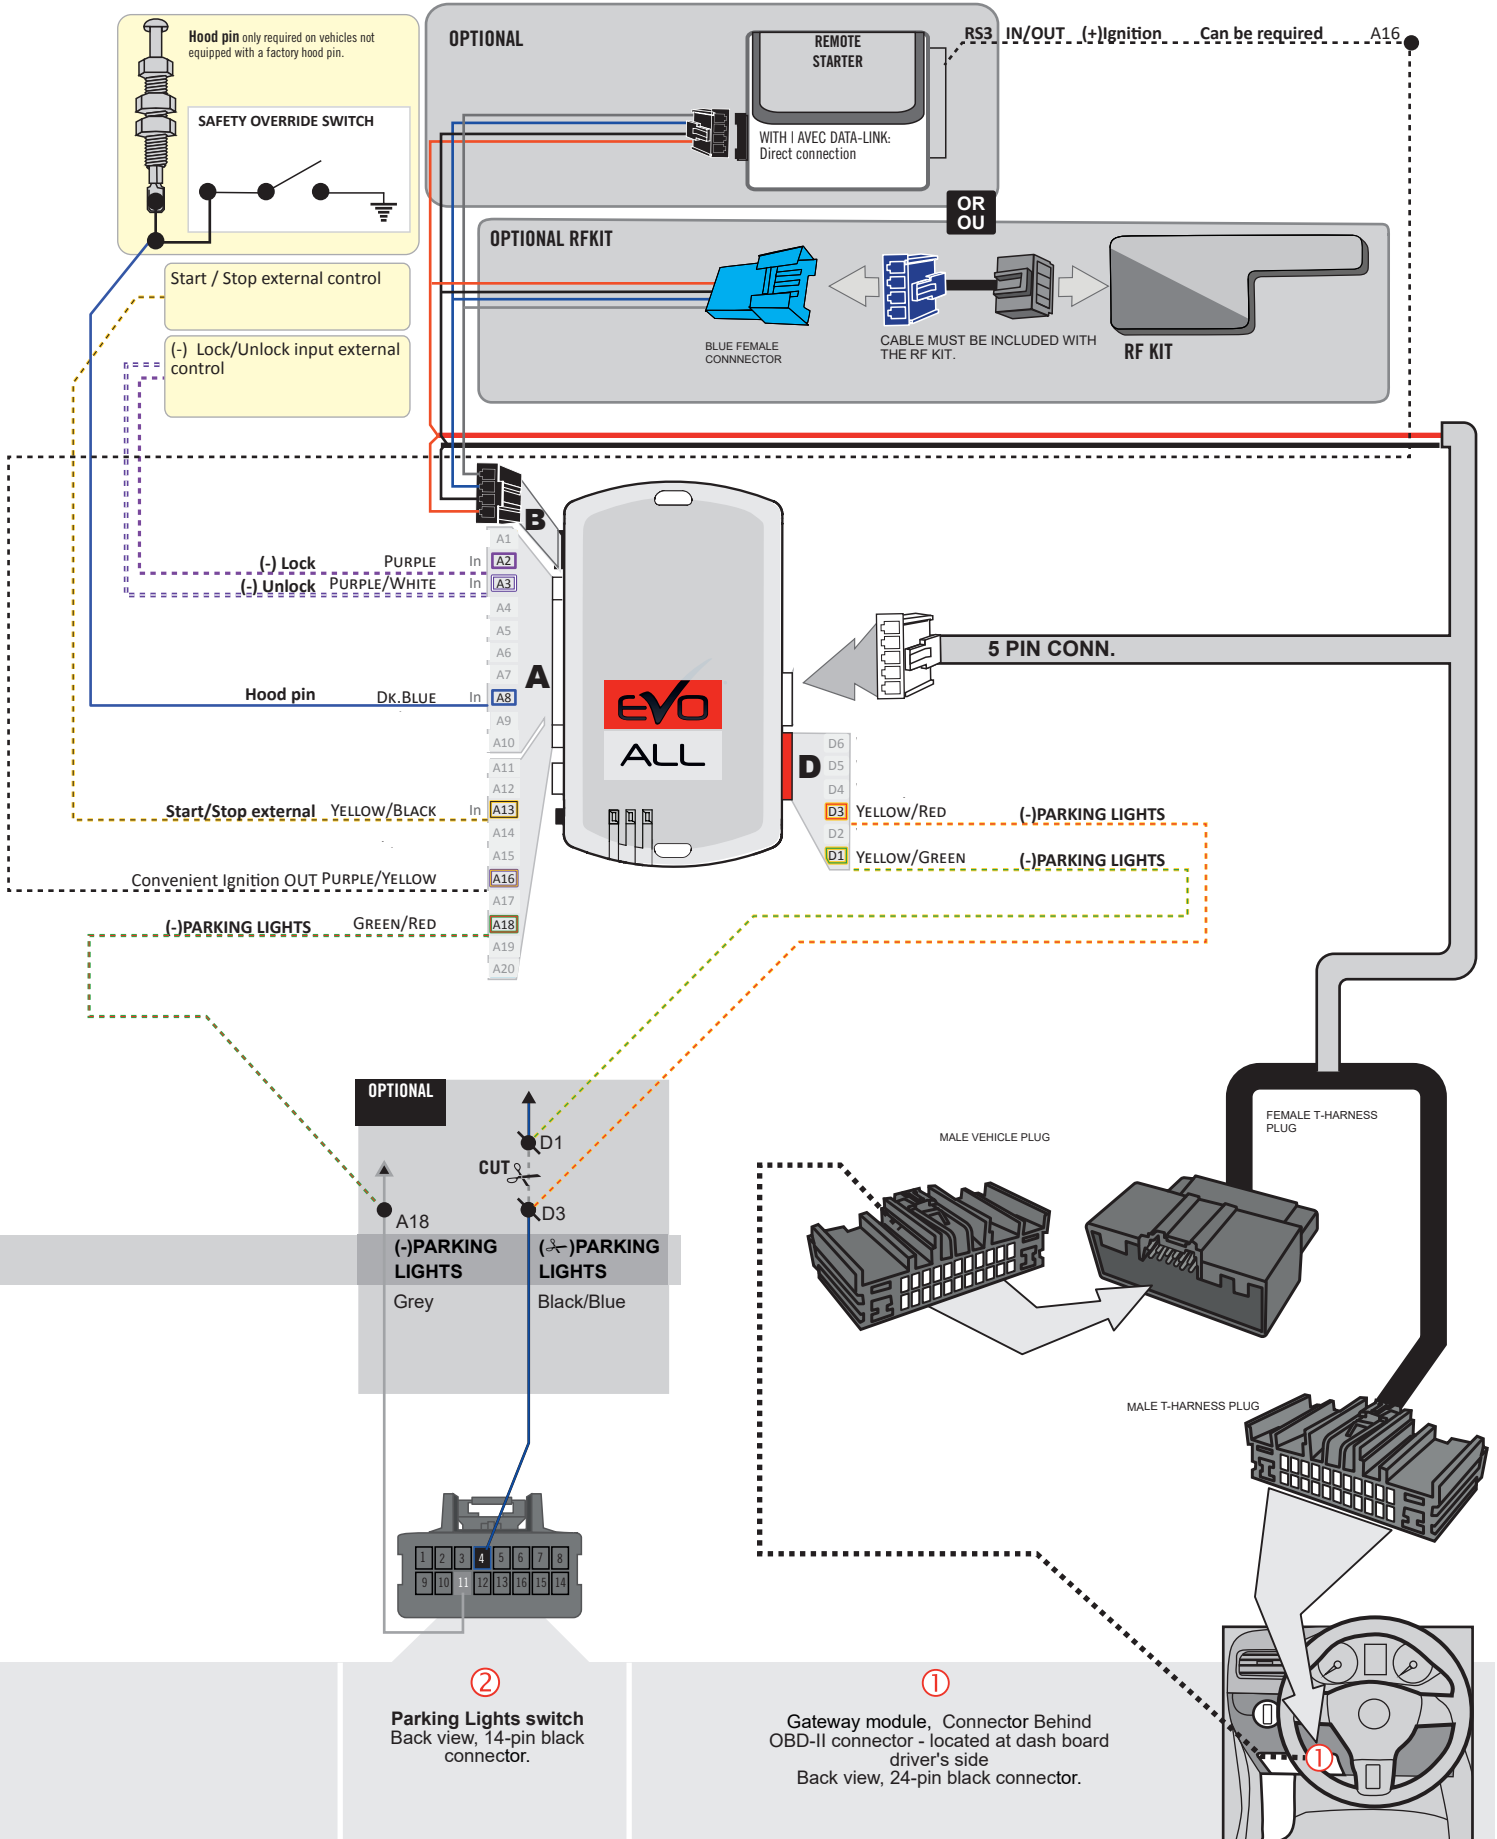



Parts required (not included)


- 1x FLASH LINK UPDATER, SOFTWARE | PROGRAMME
- 1x FLASH LINK MANAGER
- 1x Microsoft Windows Computer with Internet connection

OR

- 1x FLASH LINK MOBILE
- 1x FLASH LINK MOBILE APP
- Smartphone Android or iOS with Internet connection (Internet provider charges may apply)

BEFORE PROGRAMMING SET THE UNIT OPTIONS AND SAVE.


1

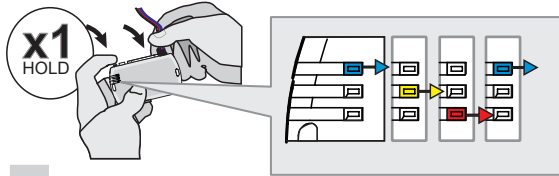

Press and hold the programming button:
Insert the 4-Pin (Data-Link) connector.


↳ The Blue, Red, Yellow and Blue & Red LEDs will alternatively illuminate.

2

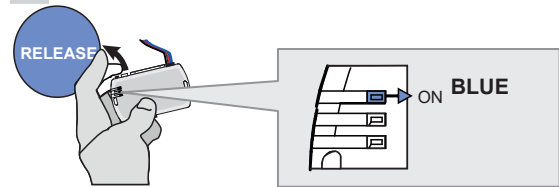


Release the programming button when the LED is BLUE.

 If the LED is not solid BLUE disconnect the 4-Pin connector (Data-Link) and go back to step 1.




3

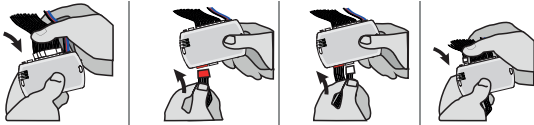

Insert the required remaining connectors.

4

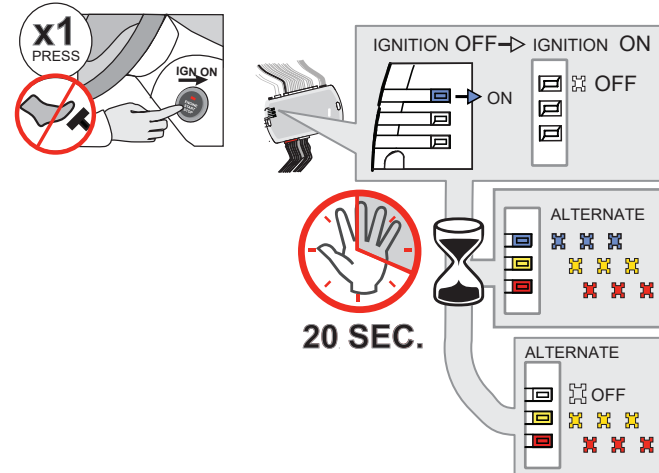

Do not press the brake pedal.
Press the Push-to-Start button once to turn on the ignition.

 
↳ The BLUE LED will turn OFF.

↳ The BLUE, YELLOW and RED LEDs will alternate.


Wait, at least 20 seconds, do not disconnect the modules or turn off the ignition.

↳ The RED and YELLOW LEDs will alternate.

Make sure that the DELs are flashing RED and YELLOW before continuing programming.



5

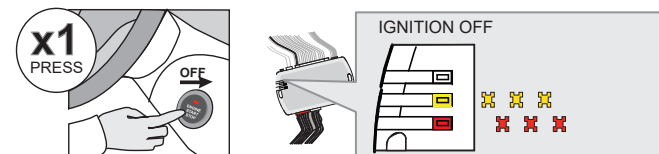

Press the Push-to-Start button once to turn off the ignition.

↳ The RED and YELLOW LEDs alternate.

KEY BYPASS PROGRAMMING PROCEDURE 2/2 |

6

Disconnect all the connectors and after the Data-Link (4-pins) connector.

7

Microsoft Windows Computer with Internet connection*

OR


Smartphone* (Internet provider charges may apply)

Use the tool: FLASH LINK UPDATER or FLASH LINK MOBILE to visit the DCryptor menu.

*Parts required (not included)

8

AFTER DCRYPTOR PROGRAMMING COMPLETED
Go back to the vehicle and **reconnect** the 4-Pin (Data-Link) connector and after, all the remaining connector.

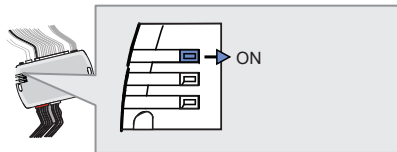

↳ The BLUE LED will turn ON.

9

x1 PRESS

IGNITION OFF → IGNITION ON

ALTERNATE

20 SEC.

FLASH RAPIDLY

Do not press the brake pedal. **Press** the Push-to-Start button once to turn on the ignition.

↳ The RED and YELLOW LEDs will turn ON.

Wait, at least 20 seconds, do not disconnect the modules or turn off the ignition.

↳ The BLUE LED will flash rapidly.

10

x1 PRESS

IGNITION ON → IGNITION OFF

Press the Push-to-Start button once to turn off the ignition.

↳ The BLUE will turn OFF.



The module is now programmed.



OPTIONAL RF-KIT PROGRAMMING |

PROGRAM BYPASS OPTION












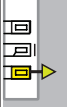

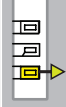
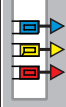





	<p>Program bypass option:</p>	<p>H2</p>	<input checked="" type="checkbox"/> Supported RF-KITS enable
			<input checked="" type="checkbox"/> H2 Fortin 2
			<input checked="" type="checkbox"/>

OPTIONAL FORTIN RF KIT SERIES 4 OR SERIES 9 PROGRAMMING

The module must be programmed on the vehicle.



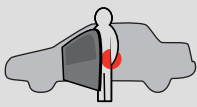

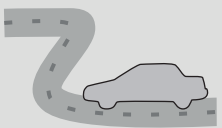


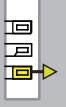
MAKE SURE THE IGNITION KEY HAS BEEN IN THE OFF POSITION FOR AT LEAST 5 SECONDS.

<p>1</p>  <p>Do not press the brake pedal. Press the Push-to-Start button once to turn on the ignition.</p>	<p>2</p>  <p>Press the Push-to-Start button once to turn off the ignition.</p>	<p>3</p>  <p>Do not press the brake pedal. Press the Push-to-Start button once to turn on the ignition.</p>	<p>4</p> <p>4X BRAKES</p>  <p>Press and release the brake pedal four times.</p>	<p>5</p> <p>ON EACH TRANSMITTER</p> <p>4 BUTTONS</p> <p>[-] PRESS AND RELEASE</p> <p>→ PRESS AND RELEASE</p> <p>[LOCK] PRESS AND RELEASE</p> <p>1 BUTTON</p> <p>PRESS APPROX. 12 SEC. AND WAIT FOR THE BLUE LED TO TURN OFF THEN BACK ON SOLID THEN RELEASE.</p>	<p>6</p>  <p>Press the Push-to-Start button once to turn off the ignition.</p>	<p>7</p>  <p>Do not press the brake pedal. Press the Push-to-Start button once to turn on the ignition and leave it ON for 5 sec..</p>	<p>8</p>  <p>Press the Push-to-Start button once to turn off the ignition.</p>
		 <p>The LED will turn ON solide.</p>	 <p>The LED will flash rapidly.</p>	 <p>The LED will turn off each time.</p>	 <p>The LED will turn Off.</p>		
 <p>The YELLOW LED will turn ON solid.</p>	 <p>The YELLOW LED will turn Off.</p>	 <p>The YELLOW LED will turn ON solid.</p>	 <p>The 3 LED will turn ON solid.</p>	 <p>The LED will flash rapidly.</p>	 <p>The 3 LED will turn Off.</p>	 <p>The YELLOW LED will turn ON solid.</p>	 <p>The YELLOW LED will turn Off.</p>
			 <p>The 3 LED will turn off each time.</p>				



REMOTE STARTER FUNCTIONALITY |

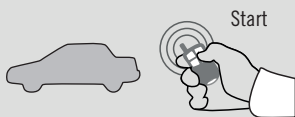 <p>Start</p> <p>All doors must be closed.</p> <p>Remote start the vehicle.</p>	 <p>UNLOCK</p> <p>Unlock the doors with either:</p> <ul style="list-style-type: none"> • The OEM remote • The remote-starter remote • Or the proximity remote 	 <p>Enter the vehicle with the SMART-KEY.</p>	 <p>DO NOT PRESS THE BRAKE PEDAL.</p> <p>Press and release the Push-to-Start button once.</p>	 <p>Press the brake pedal. The vehicle can now be put in to gear and driven.</p> <p>If the Smart-Key is not detected the vehicle will shut down.</p>
--	---	--	---	---

STANDALONE & THAR-FOR3 INSTALLATION

ADDENDUM - SUGGESTED WIRING CONFIGURATION




ONLY COMPATIBLE WITH AUTOMATIC TRANSMISSION VEHICLES.



Vehicle functions supported in this diagram (functional if equipped)

VEHICLE	YEARS	Immobilizer bypass	T-Harness available (sold separately)	Lock	Unlock	Arm	Disarm	Heated Seats**	Rear Defrost**	RAP Disable	Parking Lights***	Tachometer	Door Status	Trunk Status	Hood Status*	Hand-Brake Status	Foot-Brake Status	Active OEM Remote Start	
LINCOLN																			
Nautilus	Push-to-Start 2020	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•

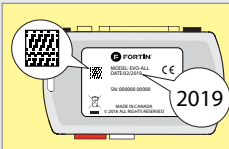

COMPATIBLE MODULE REQUIRED:

QR CODE ON THE LABEL
MANUFACTURED AFTER: 2019

FIRMWARE VERSION
58.[02]
MINIMUM

To add the firmware version and the options, use the **FLASH LINK UPDATER** or **FLASH LINK MOBILE** tool, sold separately.



Program bypass option:

UNIT OPTION

DESCRIPTION

C1

OEM Remote status (Lock/Unlock) monitoring

D6

Push-to-Start

IF THE VEHICLE IS NOT EQUIPPED WITH FUNCTIONAL HOOD PIN:

A11

OFF

Hood trigger (Output Status).

NOTES

The vehicles OEM remote and SmartKey are still operable during remote start.

**Heated seats The heated seats and rear defrost activate automatically when it cold.

***Parking Lights The parking Lights at remote start only.

MANDATORY INSTALL

*HOOD PIN



HOOD STATUS: THE HOOD PIN SWITCH MUST BE INSTALLED IF THE VEHICLE CAN BE REMOTE STARTED WITH THE HOOD OPEN, SET FUNCTION A11 TO OFF.

A11

OFF

Notice: the installation of safety elements are mandatory. The hood pin is an essential security element and must be installed.

THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.

PARTS REQUIRED (NOT INCLUDED) |


1x **FLASH LINK UPDATER,**
1x **FLASH LINK MANAGER**
SOFTWARE | PROGRAMME
1x Microsoft Windows Computer with Internet connection

OR


1x **FLASH LINK MOBILE**
1x **FLASH LINK MOBILE APP**
Smartphone *Android* or *iOS* with Internet connection (*provider charges may apply*).
1x

MANDATORY

HOOD PIN



REMOTE START SAFETY OVERRIDE SWITCH

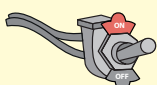
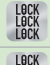






VALET SWITCH


Part #: RSPB available, Sold separately.

Notice: the installation of safety elements are mandatory. The hood pin and the valet switch are essential security elements and must be installed.


STAND ALONE CONFIGURATION |

	Program bypass option	UNIT OPTION	DESCRIPTION
	OEM Remote Stand Alone Remote Starter:	D1.10 	By default, LOCK, LOCK, LOCK
		D1.1 	Par défaut, VERROUILLE,VERROUILLE,VERROUILLE
	Program bypass option with oem remote:	C1	OEM Remote Monitoring
	Program bypass option with RF KIT antenna:	H1 to H6	Supported RF Kits and select RF Kit
	Program bypass option Vehicle hybrid only:	D4	Hybrid mode (Vehicle hybrid only)


REMOTE STARTER FUNCTIONALITY |




All doors must be closed.

3X 

Press the OEM remote's Lock button 3x to remote-start (or remote-stop) the vehicle.



START 

The vehicle will START.

REMOTE STARTER DIAGNOSTICS

MODULE RED LED


x2 flash : Brake ON

x3 flash : No tach

x4 flash : Ignition before start

x5 flash : Hood Open

REMOTE STARTER WARNING CARD |



CUT THIS WARNING CARD AND STICK IT ON A VISIBLE PLACE:
or use the package RSPB, Sold separately.

WARNING

REMOTE STARTER

THE VEHICLE CAN BE STARTED BY EITHER: PRESSING THE LOCK BUTTON ON THE OEM REMOTE 3 TIMES CONSECUTIVELY OR BY A SMARTPHONE. **TURN ON** THE SAFETY SWITCH LOCATED UNDER THE DASHBOARD BEFORE WORKING ON THE VEHICLE.

DESCRIPTION |

	Parts required (Not included)	PAGE
--	-------------------------------	------

WIRE TO WIRE DIAGRAM

AUTOMATIC TRANSMISSION	1x 7.5 Amp. fuse	Page 3
------------------------	------------------	--------



THARNES DIAGRAM

THARNES THAR-FOR3 AUTOMATIC TRANSMISSION	1x THAR-FOR3	Page 4
--	--------------	--------




② Parking Lights switch


① Gateway module, Behind OBD-II connector

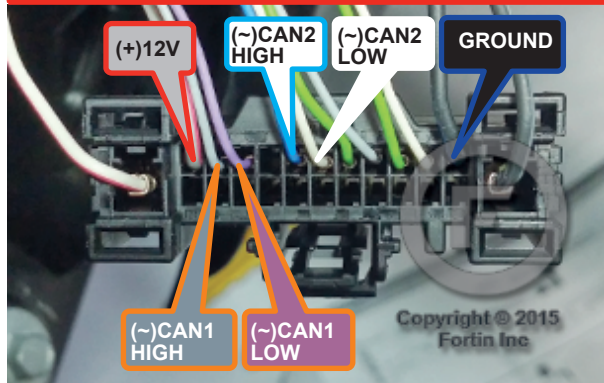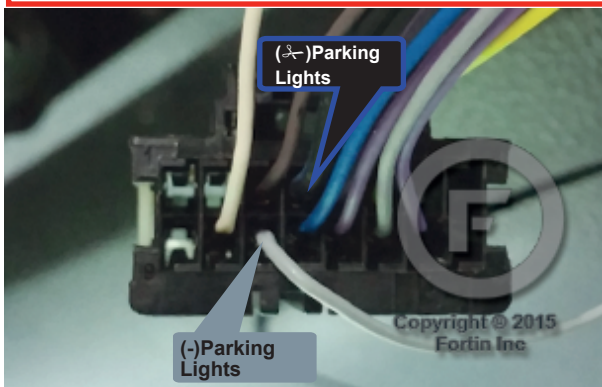

AUTOMATIC TRANSMISSION WIRING CONNECTION |

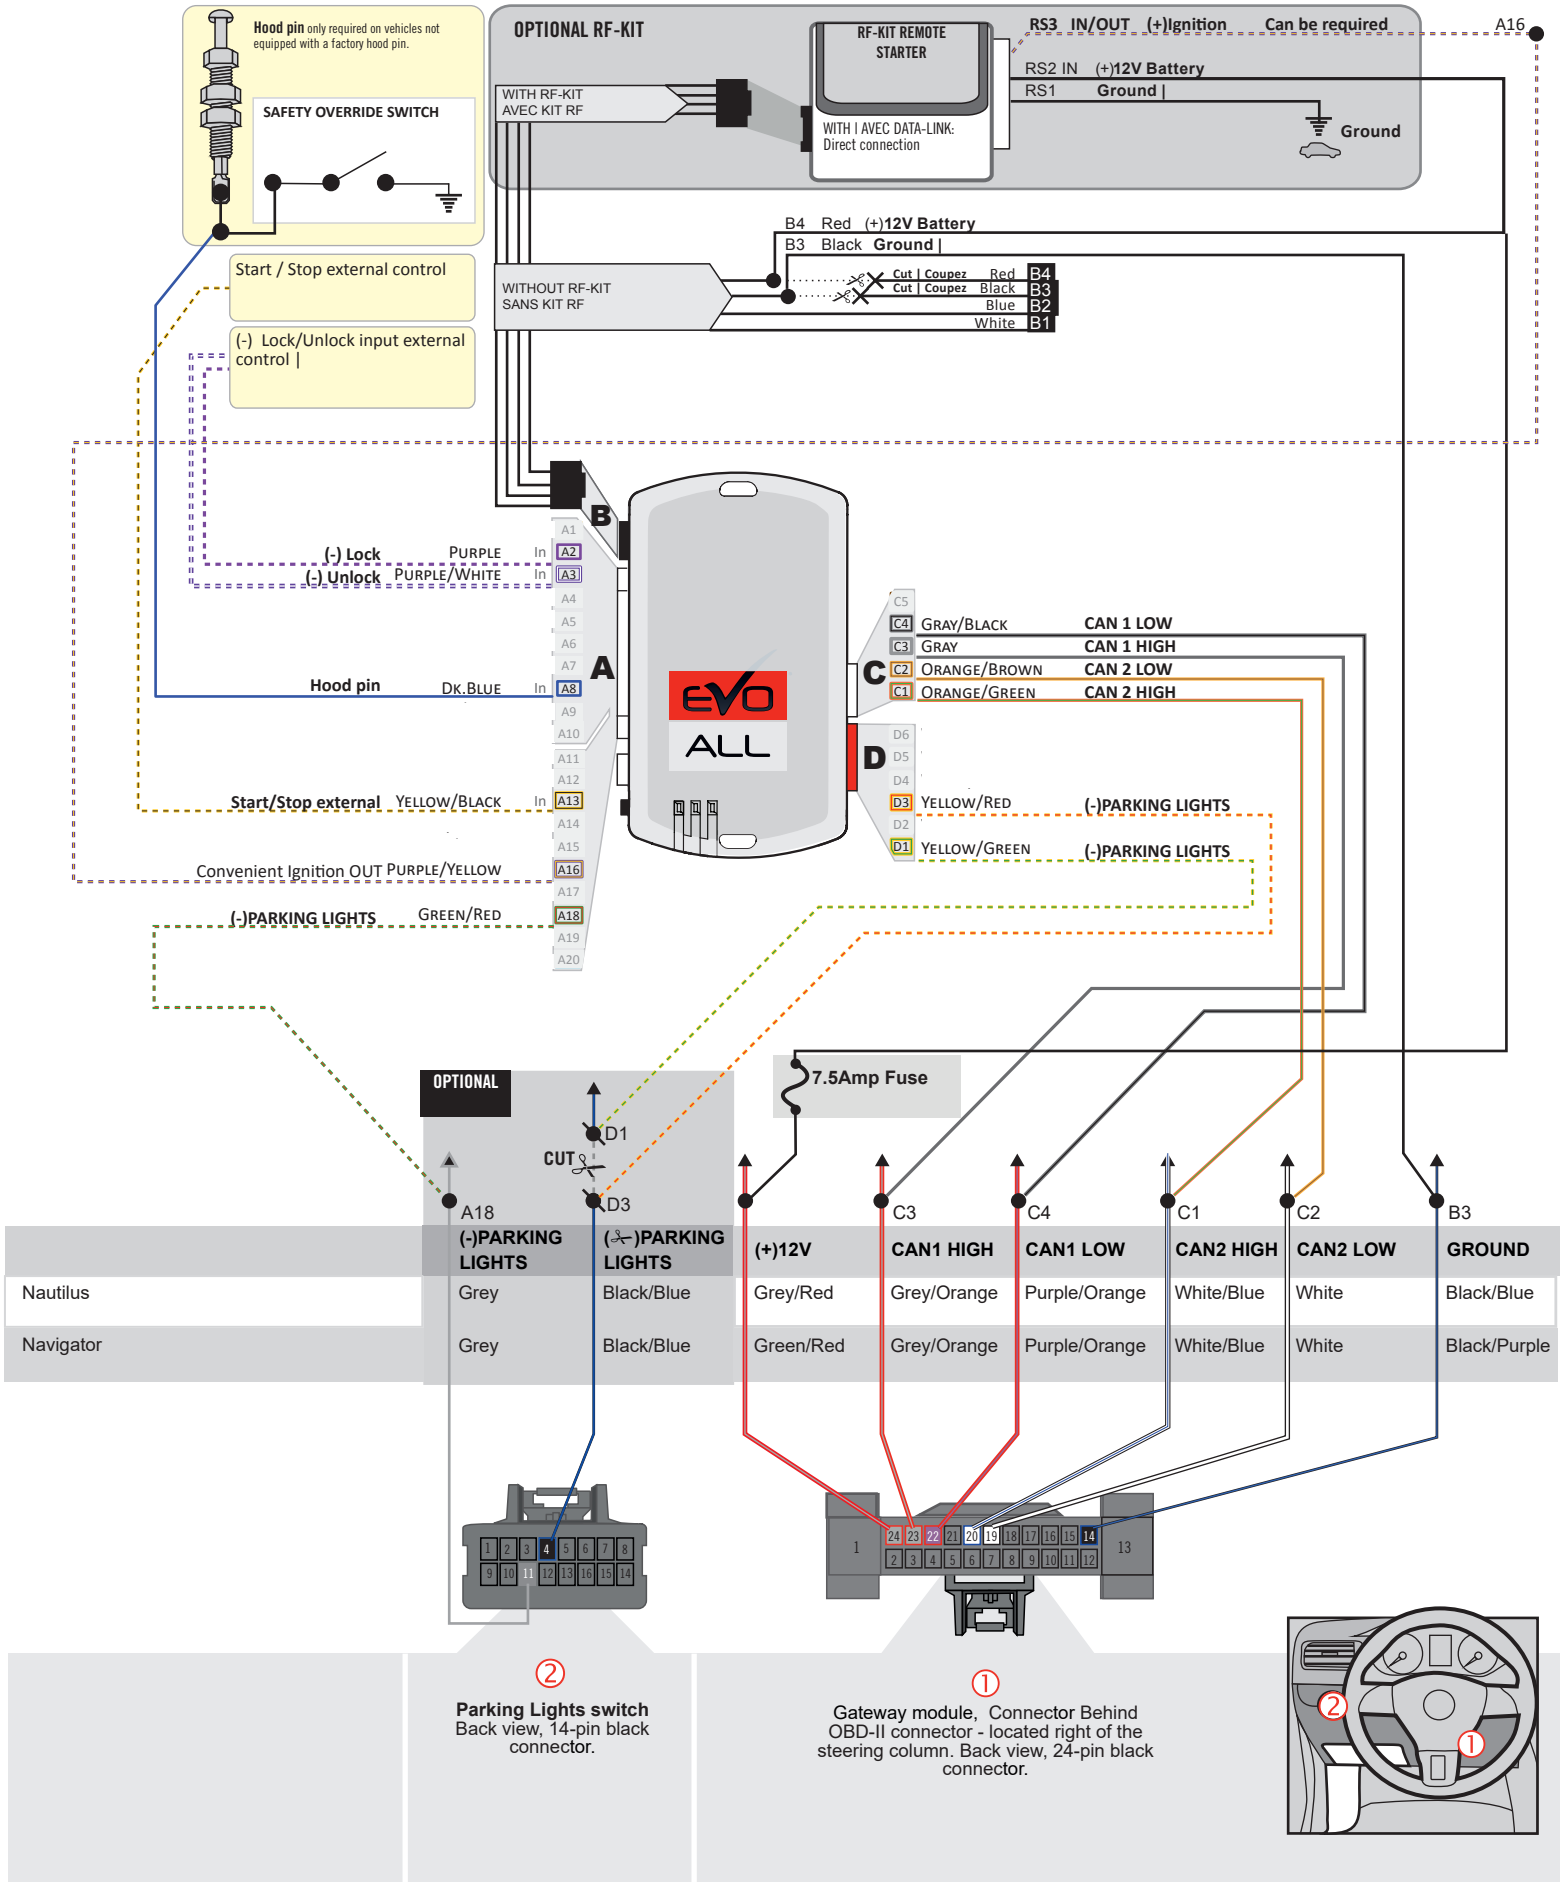

THAR-FOR3 | T-HARNESS - AUTOMATIC TRANSMISSION |

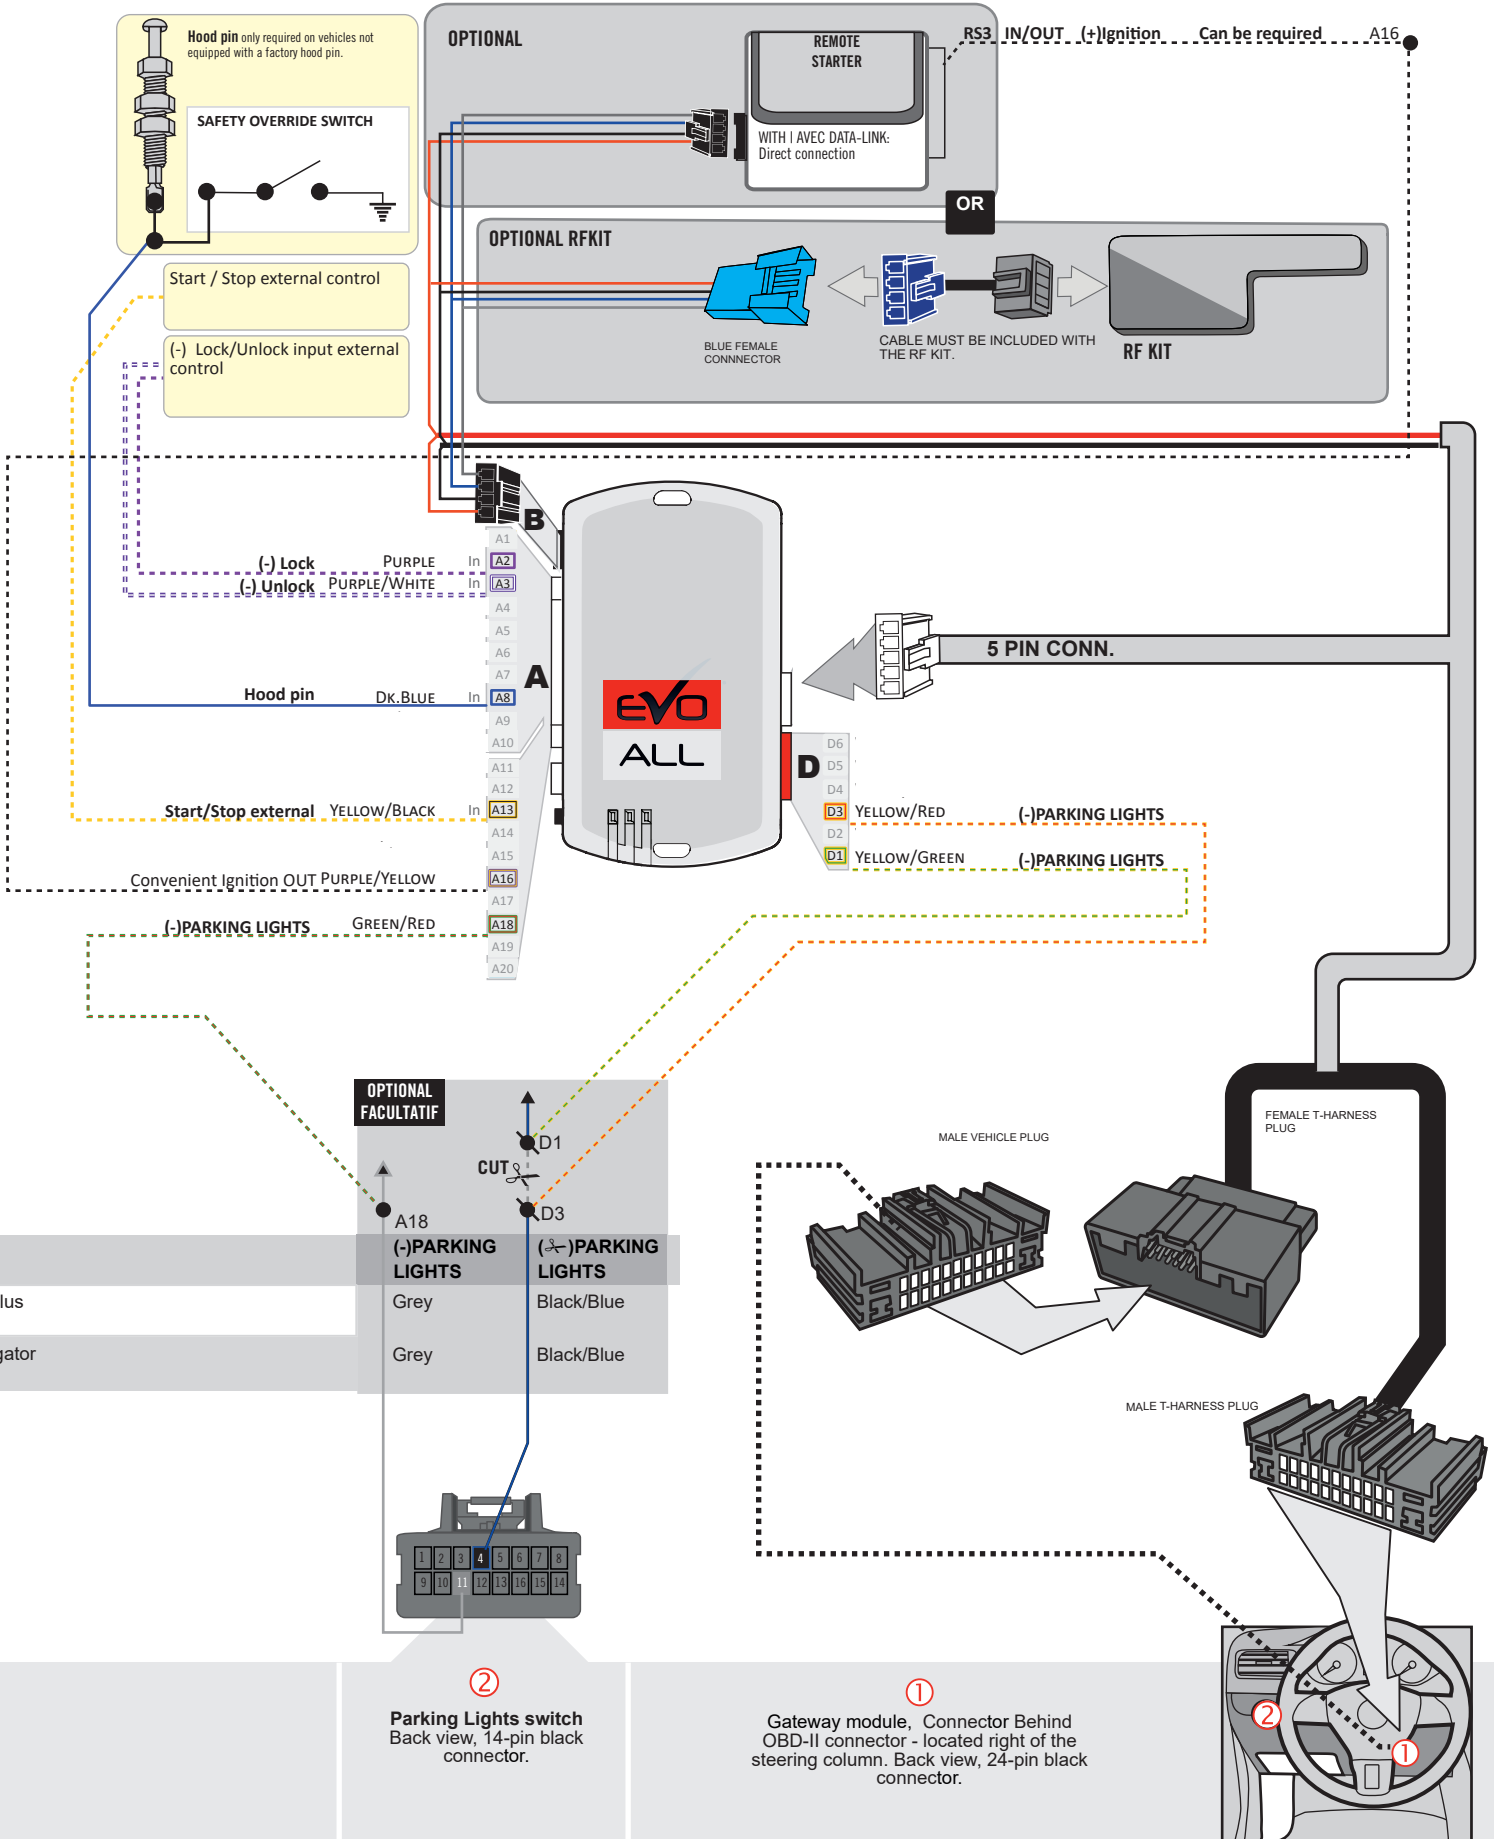




- Parts required (not included)**
- 1x **FLASH LINK UPDATER,**
 - 1x **FLASH LINK MANAGER**
SOFTWARE | PROGRAMME
 - 1x Microsoft Windows Computer with Internet connection

OR

- 1x **FLASH LINK MOBILE**
- 1x **FLASH LINK MOBILE APP**
Smartphone Android or iOS with Internet connection
(Internet provider charges may apply)

BEFORE PROGRAMMING SET THE UNIT OPTIONS AND SAVE.


1

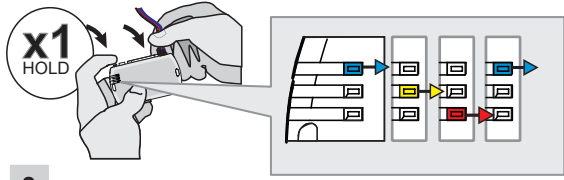

Press and hold the programming button:
Insert the 4-Pin (Data-Link) connector.

↳ The Blue, Red, Yellow and Blue & Red LEDs will alternatively illuminate.


2

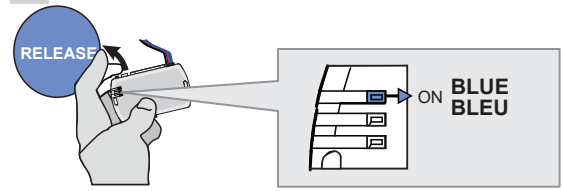

Release the programming button when the LED is BLUE.


If the LED is not solid BLUE disconnect the 4-Pin connector (Data-Link) and go back to step 1.

3

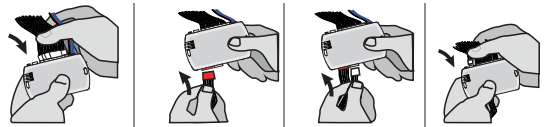

Insert the required remaining connectors.

4

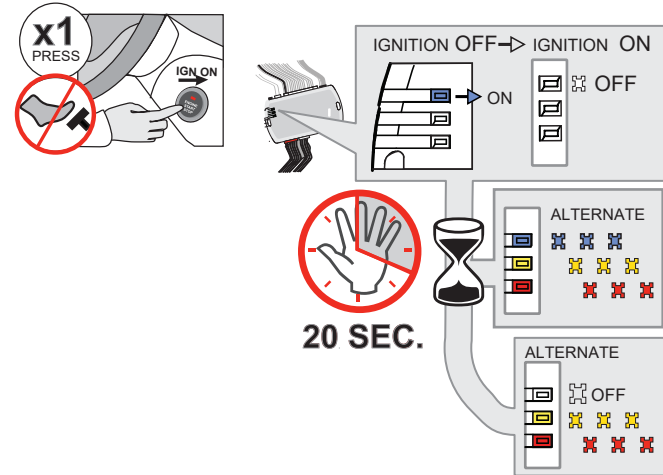

Do not press the brake pedal.
Press the Push-to-Start button once to turn on the ignition.

↳ The BLUE LED will turn OFF.


↳ The BLUE, YELLOW and RED LEDs will alternate.

Wait, at least 20 seconds, do not disconnect the modules or turn off the ignition.

↳ The RED and YELLOW LEDs will alternate.

Make sure that the DELs are flashing RED and YELLOW before continuing programming.

5

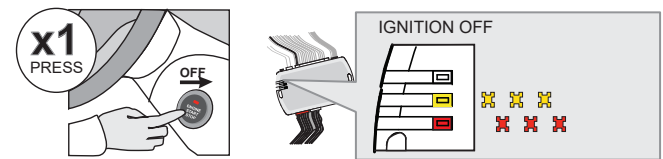

Press the Push-to-Start button once to turn off the ignition.

↳ The RED and YELLOW LEDs alternate.

KEY BYPASS PROGRAMMING PROCEDURE 2/2 |

6

Disconnect all the connectors and after the Data-Link (4-pins) connector.

7

Microsoft Windows Computer with Internet connection*

OR


Smartphone* (Internet provider charges may apply)

Use the tool: FLASH LINK UPDATER or FLASH LINK MOBILE to visit the DCryptor menu.

*Parts required (not included)

8

AFTER DCRYPTOR PROGRAMMING COMPLETED
Go back to the vehicle and **reconnect** the 4-Pin (Data-Link) connector and after, all the remaining connector.

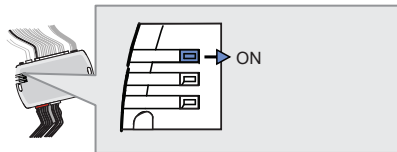

↳ The BLUE LED will turn ON.

9

x1 PRESS

Do not press the brake pedal. **Press** the Push-to-Start button once to turn on the ignition.

↳ The RED and YELLOW LEDs will turn ON.

Wait, at least 20 seconds, do not disconnect the modules or turn off the ignition.

↳ The BLUE LED will flash rapidly.

10

x1 PRESS

Press the Push-to-Start button once to turn off the ignition.

↳ The BLUE will turn OFF.

The module is now programmed.


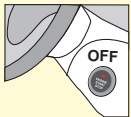
OPTIONAL RF-KIT PROGRAMMING |

PROGRAM BYPASS OPTION








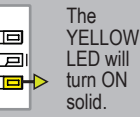
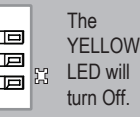
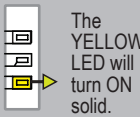
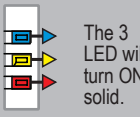

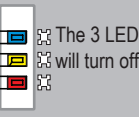
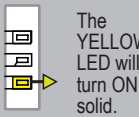
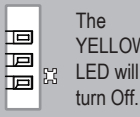
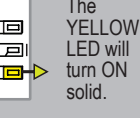
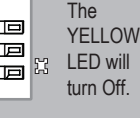
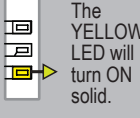
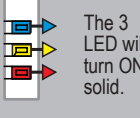

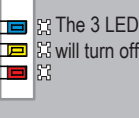
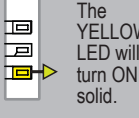
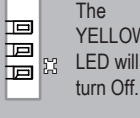

	<p>Program bypass option:</p>	<p>H2</p>	<p><input checked="" type="checkbox"/> Supported RF-KITS enable <input checked="" type="checkbox"/> H2 Fortin 2</p>
---	-------------------------------	------------------	---

OPTIONAL FORTIN RF KIT SERIES 4 OR SERIES 9 PROGRAMMING

The module must be programmed on the vehicle.



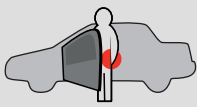

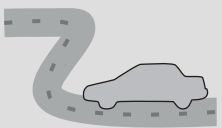



MAKE SURE THE IGNITION KEY HAS BEEN IN THE OFF POSITION FOR AT LEAST 5 SECONDS.

<p>1</p> <p>ON x1 PRESS</p>  <p>Do not press the brake pedal. Press the Push-to-Start button once to turn on the ignition.</p>	<p>2</p> <p>OFF x1 PRESS</p>  <p>Press the Push-to-Start button once to turn off the ignition.</p>	<p>3</p> <p>ON x1 PRESS</p>  <p>Do not press the brake pedal. Press the Push-to-Start button once to turn on the ignition.</p>	<p>4</p> <p>4X BRAKES</p> <p>x4 PRESS</p>  <p>Press and release the brake pedal four times.</p>	<p>5</p> <p>ON EACH TRANSMITTER</p> <p>4 BUTTONS</p> <p>[-] PRESS AND RELEASE</p> <p>[+] PRESS AND RELEASE</p> <p>1 BUTTON</p> <p>PRESS APPROX. 12 SEC. AND WAIT FOR THE BLUE LED TO TURN OFF THEN BACK ON SOLID THEN RELEASE.</p>	<p>6</p> <p>OFF x1 PRESS</p>  <p>Press the Push-to-Start button once to turn off the ignition.</p>	<p>7</p> <p>ON x1 PRESS</p>  <p>Do not press the brake pedal. Press the Push-to-Start button once to turn on the ignition and leave it ON for 5 sec..</p>	<p>8</p> <p>OFF x1 PRESS</p>  <p>Press the Push-to-Start button once to turn off the ignition.</p>
 <p>The YELLOW LED will turn ON solid.</p>	 <p>The YELLOW LED will turn Off.</p>	 <p>The YELLOW LED will turn ON solid.</p>	 <p>The LED will flash rapidly.</p>	 <p>The LED will turn off each time.</p>	 <p>The LED will turn Off.</p>	 <p>The YELLOW LED will turn ON solid.</p>	 <p>The YELLOW LED will turn Off.</p>
 <p>The YELLOW LED will turn ON solid.</p>	 <p>The YELLOW LED will turn Off.</p>	 <p>The YELLOW LED will turn ON solid.</p>	 <p>The 3 LED will turn ON solid.</p>	 <p>The LED will flash rapidly.</p>	 <p>The 3 LED will turn Off.</p>	 <p>The YELLOW LED will turn ON solid.</p>	 <p>The YELLOW LED will turn Off.</p>
				 <p>The 3 LED will turn off each time.</p>			



REMOTE STARTER FUNCTIONALITY |

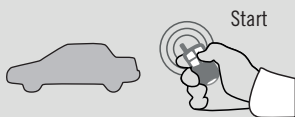 <p>Start</p> <p>All doors must be closed.</p> <p>Remote start the vehicle.</p>	 <p>UNLOCK</p> <p>Unlock the doors with either:</p> <ul style="list-style-type: none"> • The OEM remote • The remote-starter remote • Or the proximity remote 	 <p>Enter the vehicle with the SMART-KEY.</p>	 <p>DO NOT PRESS THE BRAKE PEDAL.</p> <p>Press and release the Push-to-Start button once.</p>	 <p>Press the brake pedal. The vehicle can now be put in to gear and driven.</p> <p>If the Smart-Key is not detected the vehicle will shut down.</p>
--	---	--	---	---

STANDALONE & THAR-FOR3 INSTALLATION

ADDENDUM - SUGGESTED WIRING CONFIGURATION




ONLY COMPATIBLE WITH AUTOMATIC TRANSMISSION VEHICLES.



Vehicle functions supported in this diagram (functional if equipped)

VEHICLE	YEARS	Immobilizer bypass	Lock	Unlock	Arm	Disarm	Heated Seats**	Rear Defrost**	RAP Disable	Parking Lights***	Tachometer	Door Status	Trunk Status	Hood Status*	Hand-Brake Status	Foot-Brake Status	Active OEM Remote Start
FORD																	
Ranger	key 2020	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•

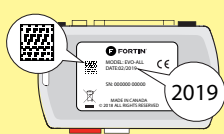

COMPATIBLE MODULE REQUIRED:

QR CODE ON THE LABEL
MANUFACTURED AFTER: 2019

FIRMWARE VERSION
58.[02]
MINIMUM

To add the firmware version and the options, use the **FLASH LINK UPDATER** or **FLASH LINK MOBILE** tool, sold separately.



Program bypass option:

UNIT OPTION

C1

DESCRIPTION

OEM Remote status (Lock/Unlock) monitoring

IF THE VEHICLE IS NOT EQUIPPED WITH FUNCTIONAL HOOD PIN:

A11

OFF

Hood trigger (Output Status).

NOTES

The vehicles OEM remote and SmartKey are still operable during remote start.

**Heated seats The heated seats and rear defrost activate automatically when it cold.

***Parking Lights The parking Lights at remote start only.



The vehicle must be equipped with the OEM remote with the door locks.

MANDATORY INSTALL

*HOOD PIN



HOOD STATUS: THE HOOD PIN SWITCH MUST BE INSTALLED IF THE VEHICLE CAN BE REMOTE STARTED WITH THE HOOD OPEN, SET FUNCTION A11 TO OFF.

A11

OFF

Notice: the installation of safety elements are mandatory. The hood pin is an essential security element and must be installed.

THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.


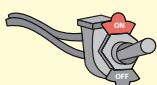
PARTS REQUIRED (NOT INCLUDED) |

1x **FLASH LINK UPDATER**
 1x **FLASH LINK MANAGER**
SOFTWARE | PROGRAMME
 1x Microsoft Windows Computer with Internet connection

OR

1x **FLASH LINK MOBILE**
 1x **FLASH LINK MOBILE APP**
Smartphone *Android* or *iOS* with Internet connection (*provider charges may apply*).

MANDATORY


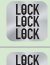




HOOD PIN  REMOTE START SAFETY OVERRIDE SWITCH 

VALET SWITCH


Part #: RSPB available, Sold separately.

Notice: the installation of safety elements are mandatory. The hood pin and the valet switch are essential security elements and must be installed.



STAND ALONE CONFIGURATION | CONFIGURATION EN DÉMARREUR AUTONOME

	Program bypass option	UNIT OPTION	DESCRIPTION
	OEM Remote Stand Alone Remote Starter:	D1.10 	By default, LOCK, LOCK, LOCK Par défaut, VERROUILLE,VERROUILLE,VERROUILLE
		D1.1 	
	Program bypass option with oem remote:	C1	OEM Remote Monitoring
	Program bypass option with RF KIT antenna:	H1 to H6	Supported RF Kits and select RF Kit
	Program bypass option Vehicle hybrid only:	D4	Hybrid mode (Vehicle hybrid only)


REMOTE STARTER FUNCTIONALITY |



All doors must be closed.

3X  

Press the OEM remote's Lock button 3x to remote-start (or remote-stop) the vehicle.




The vehicle will START.

REMOTE STARTER DIAGNOSTICS


MODULE RED LED
x2 flash : Brake ON
x3 flash : No tach
x4 flash : Ignition before start
x5 flash : Hood Open

REMOTE STARTER WARNING CARD |



CUT THIS WARNING CARD AND STICK IT ON A VISIBLE PLACE:
 or use the package RSPB, Sold separately.

WARNING | ATTENTION



REMOTE STARTER

THE VEHICLE CAN BE STARTED BY EITHER: PRESSING THE LOCK BUTTON ON THE OEM REMOTE 3 TIMES CONSECUTIVELY OR BY A SMARTPHONE. **TURN ON** THE SAFETY SWITCH LOCATED UNDER THE DASHBOARD BEFORE WORKING ON THE VEHICLE.

DESCRIPTION | DESCRIPTION

	Parts required (Not included)	PAGE
--	-------------------------------	------

WIRE TO WIRE DIAGRAM

AUTOMATIC TRANSMISSION	1x 7.5 Amp. fuse	Page 3
------------------------	------------------	--------


THARNES DIAGRAM

THARNES THAR-FOR3 AUTOMATIC TRANSMISSION	1x THAR-FOR3	Page 4
--	--------------	--------




RANGER

① Gateway module, Behind OBD-II connector

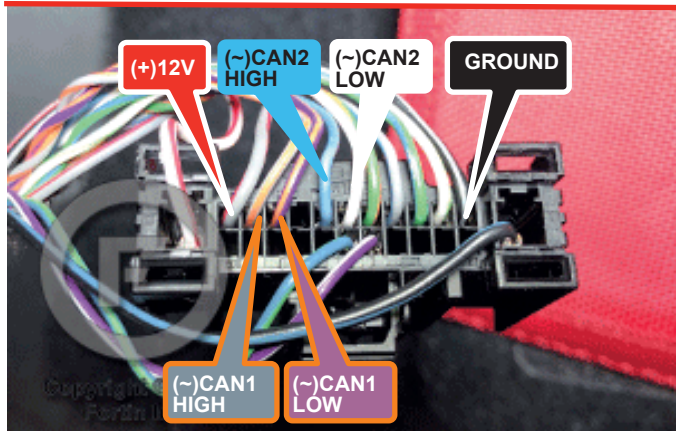


AUTOMATIC TRANSMISSION WIRING CONNECTION |

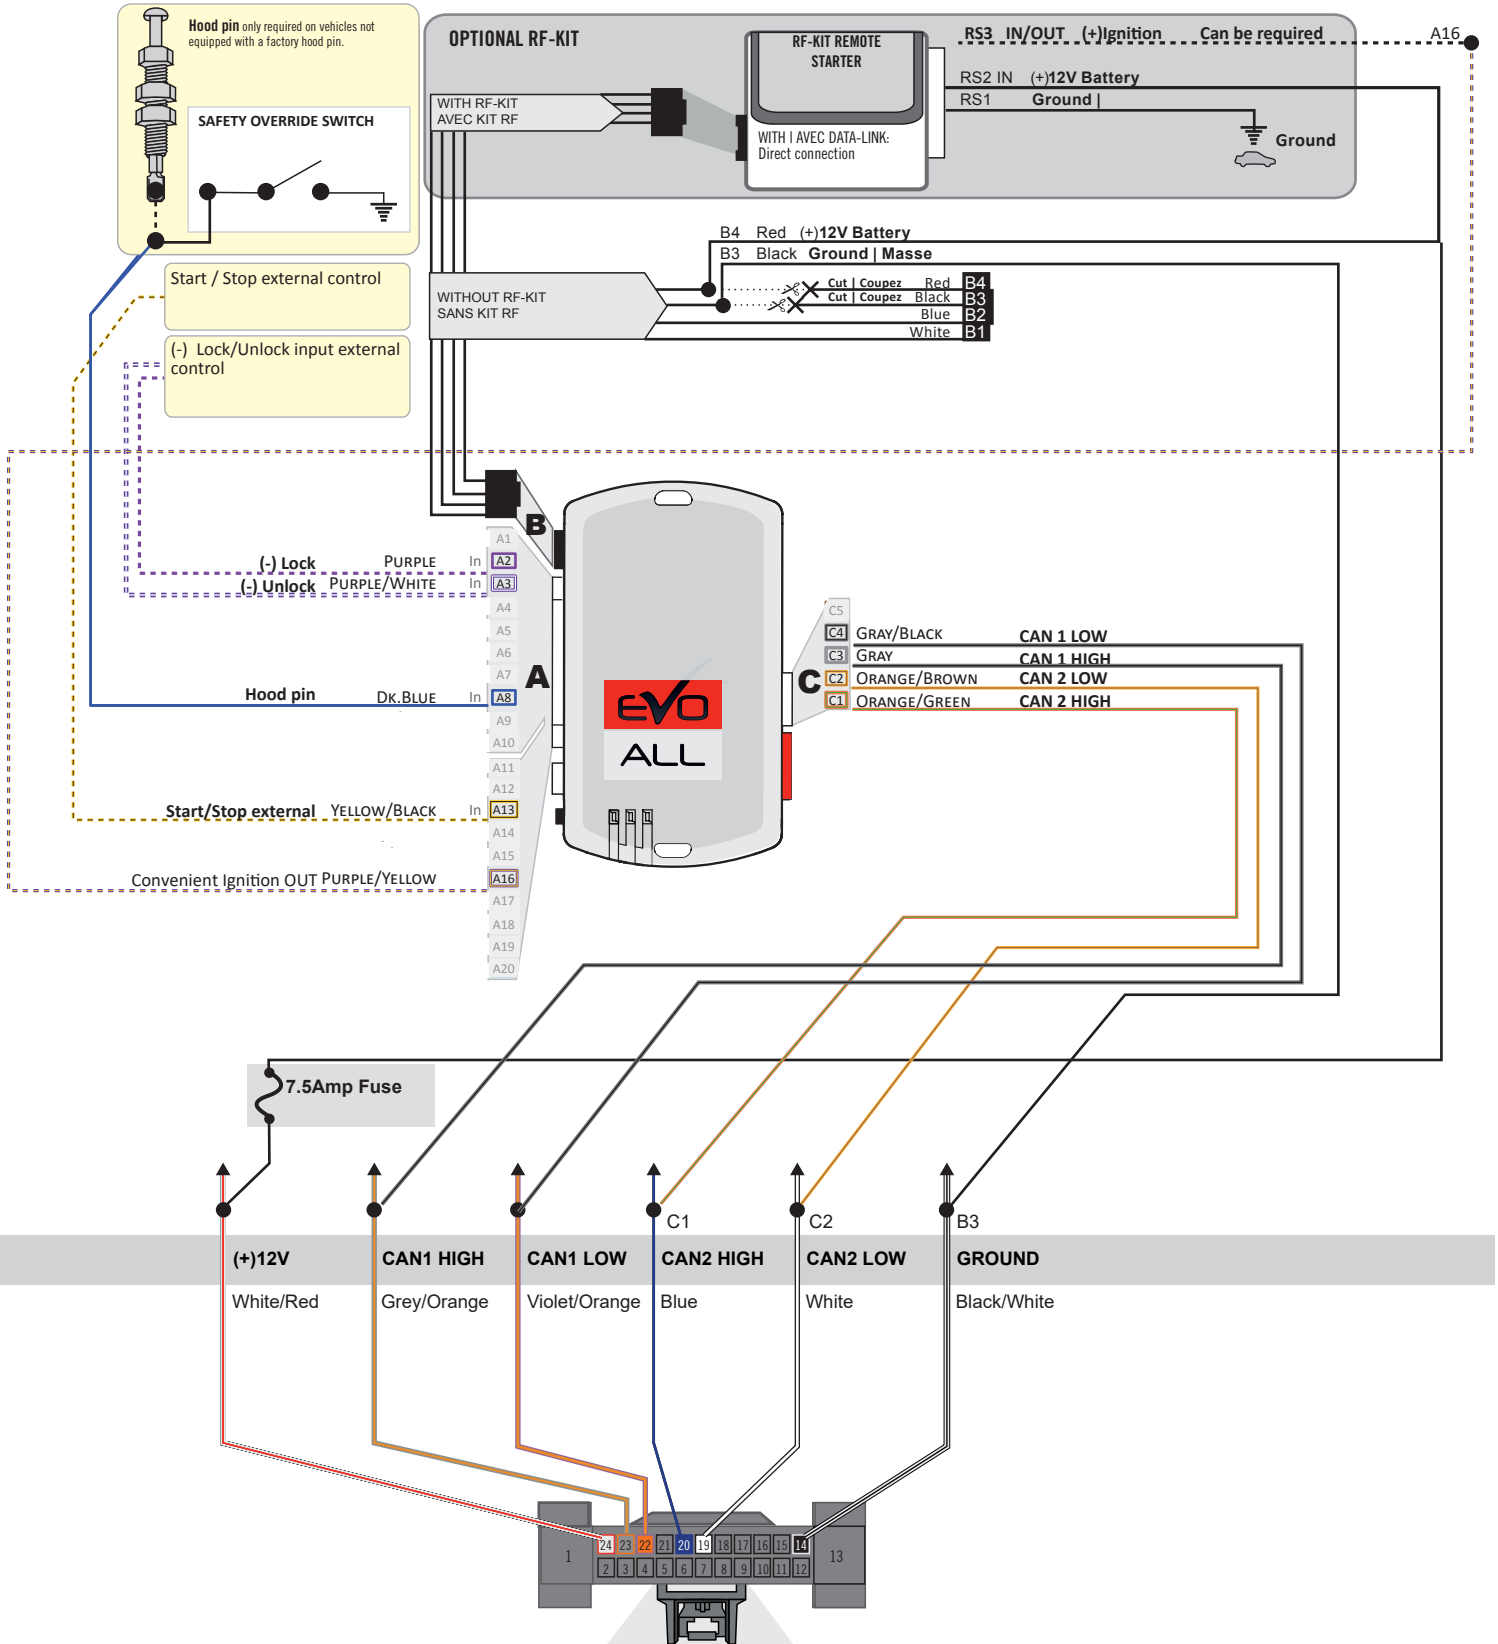




RANGER

①


Gateway module, Connector Behind OBD-II connector - located at dash board driver's side Back view, 24-pin black connector.

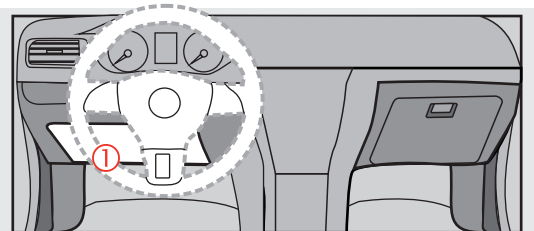

THAR-FOR3 | T-HARNESS - AUTOMATIC TRANSMISSION |

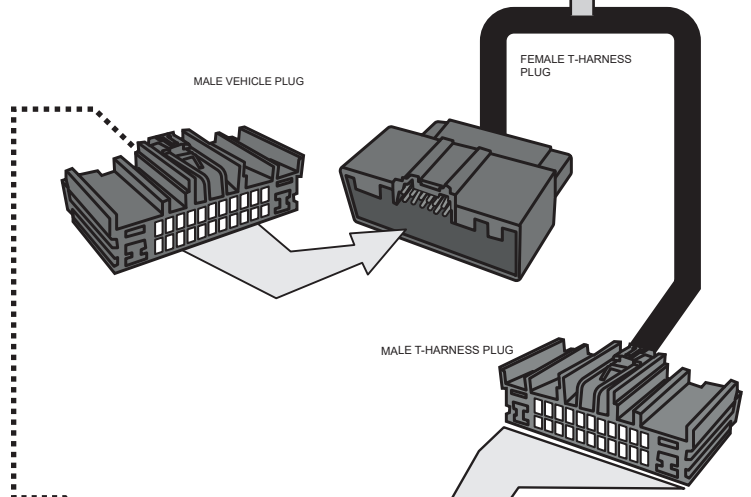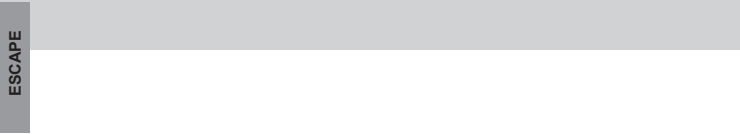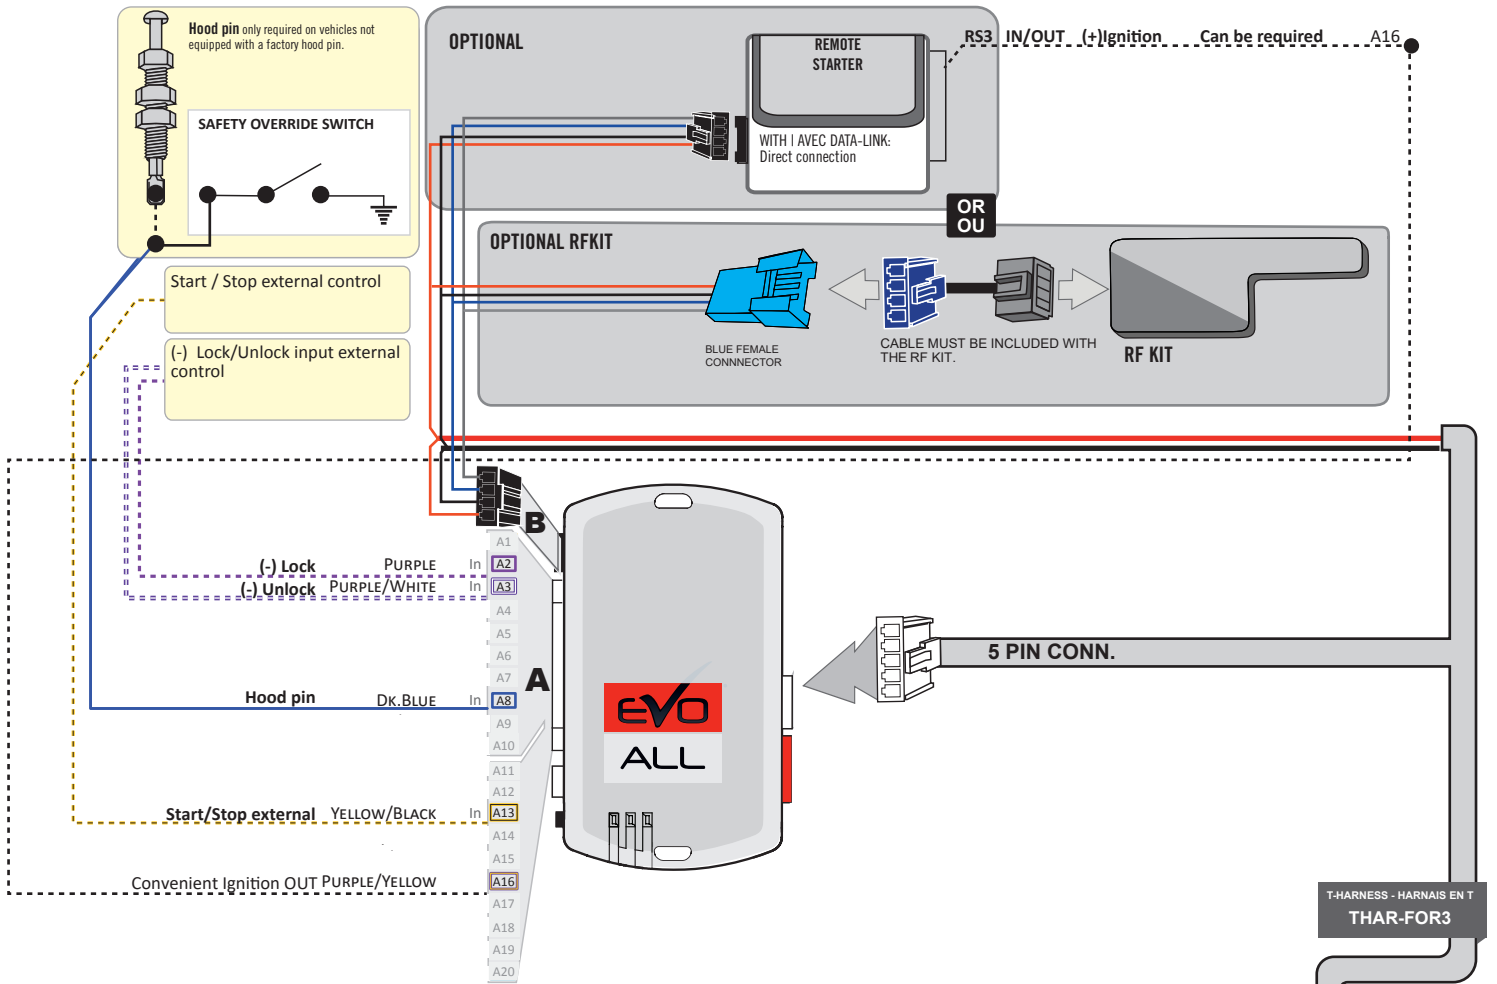

① Gateway module, Connector Behind OBD-II connector - located at dash board driver's side Back view, 24-pin black connector.

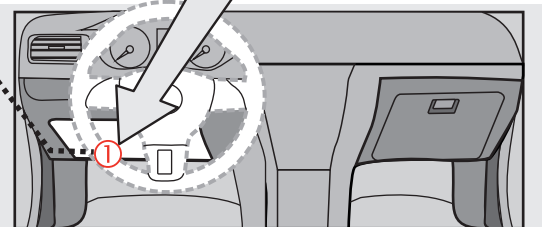



Parts required (not included)


- 1x FLASH LINK UPDATER, SOFTWARE | PROGRAMME
- 1x FLASH LINK MANAGER
- 1x Microsoft Windows Computer with Internet connection

OR

- 1x FLASH LINK MOBILE
- 1x FLASH LINK MOBILE APP
- Smartphone Android or iOS with Internet connection (Internet provider charges may apply)

BEFORE PROGRAMMING SET THE UNIT OPTIONS AND SAVE.


1

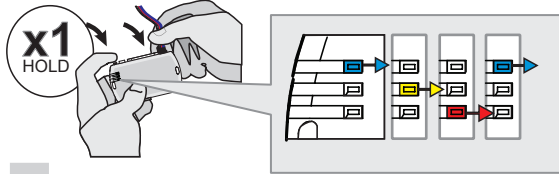

Press and hold the programming button:
Insert the 4-Pin (Data-Link) connector.


↳ The Blue, Red, Yellow and Blue & Red LEDs will alternatively illuminate.

2

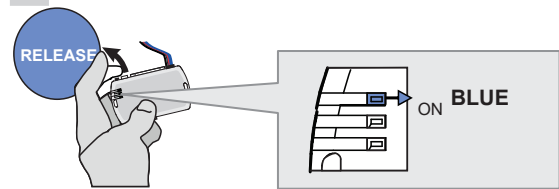


Release the programming button when the LED is BLUE.

 If the LED is not solid BLUE disconnect the 4-Pin connector (Data-Link) and go back to step 1.




3

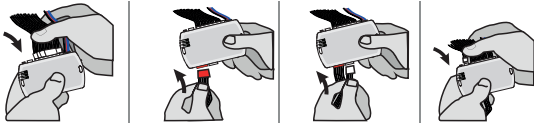

Insert the required remaining connectors.

4

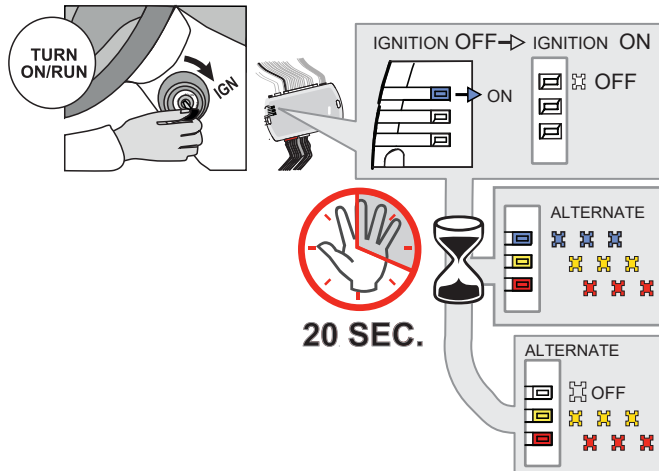

Turn the key to the Ignition ON/RUN position.

 
↳ The BLUE LED will turn OFF.

↳ The BLUE, YELLOW and RED LEDs will alternate.


Wait, at least 20 seconds, do not disconnect the modules or turn off the ignition.

↳ The RED and YELLOW LEDs will alternate.

Make sure that the DELs are flashing RED and YELLOW before continuing programming.



5

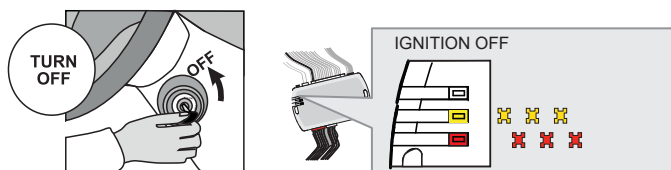


Turn the key to the OFF position.

↳ The RED and YELLOW LEDs alternate.


KEY BYPASS PROGRAMMING PROCEDURE 2/2 |

6

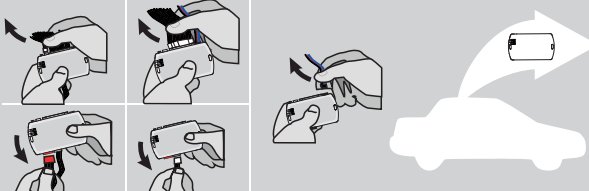

Disconnect all the connectors and after the Data-Link (4-pins) connector.

7



Microsoft Windows Computer with Internet connection*

FLASH LINK UPDATER* **FLASH LINK MANAGER***
SOFTWARE | PROGRAMME

OR


Smartphone* (Internet provider charges may apply)

VEHICLE'S OBDII CONNECTOR **FLASH LINK MOBILE***


Use the tool: FLASH LINK UPDATER or FLASH LINK MOBILE to visit the DCRYPTOR menu.

*Parts required (not included)

8

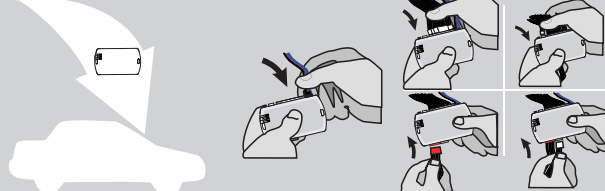


AFTER DCRYPTOR PROGRAMMING COMPLETED
Go back to the vehicle and reconnect the 4-Pin (Data-Link) connector and after, all the remaining connector.

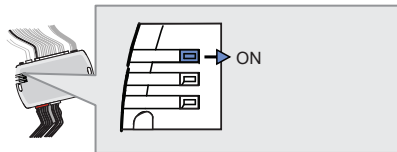

↳ The BLUE LED will turn ON.

9

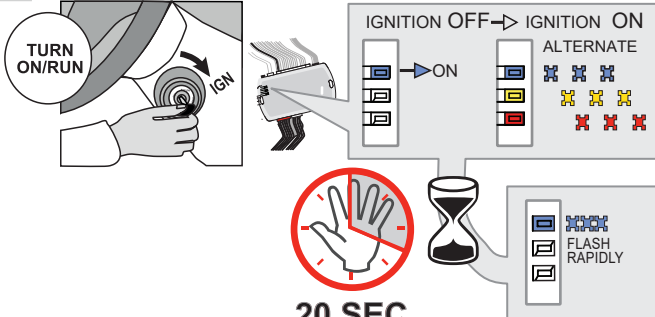

TURN ON/RUN

IGNITION OFF → IGNITION ON

ALTERNATE

ON

FLASH RAPIDLY

20 SEC.


Turn the key to the Ignition ON/RUN position.

↳ The RED and YELLOW LEDs will turn ON.

Wait, at least 20 seconds, do not disconnect the modules or turn off the ignition.

↳ The BLUE LED will flash rapidly.

10

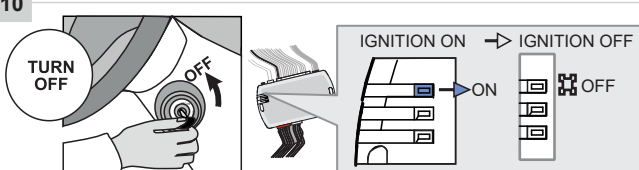

TURN OFF

IGNITION ON → IGNITION OFF

ON

OFF

Turn the key to the OFF position.

↳ The BLUE will turn OFF.



The module is now programmed.

OPTIONAL RF-KIT PROGRAMMING |

PROGRAM BYPASS OPTION



Program bypass option:

H2


Supported RF-KITS enable

H2 Fortin 2

OPTIONAL FORTIN RF KIT SERIES 4 OR SERIES 9 PROGRAMMING



The module must be programmed on the vehicle.

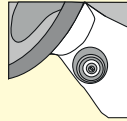

MAKE SURE THE IGNITION KEY HAS BEEN IN THE OFF POSITION FOR AT LEAST 5 SECONDS.

<p>1</p> <p>ON TURN ON/RUN</p> <p>Turn the key to the ON/RUN position.</p>	<p>2</p> <p>OFF TURN OFF</p> <p>Turn the ignition to the OFF position.</p>	<p>3</p> <p>ON TURN ON/RUN</p> <p>Turn the key to the ON/RUN position.</p>	<p>4</p> <p>4X BRAKES</p> <p>x4 PRESS</p> <p>Press and release the brake pedal four times.</p>	<p>5</p> <p>ON EACH TRANSMITTER</p> <p>4 BUTTONS</p> <p>[-] PRESS AND RELEASE</p> <p>→ PRESS AND RELEASE</p> <p>1 BUTTON</p> <p>PRESS APPROX. 12 SEC. AND WAIT FOR THE BLUE LED TO TURN OFF THEN BACK ON SOLID THEN RELEASE.</p>	<p>6</p> <p>OFF TURN OFF</p> <p>Turn the ignition to the OFF position.</p>	<p>7</p> <p>ON TURN ON/RUN</p> <p>Turn the key to the ON/RUN position and leave it ON for 5 sec.</p>	<p>8</p> <p>OFF TURN OFF</p> <p>Turn the ignition to the OFF position.</p>
<p>The YELLOW LED will turn ON solid.</p>	<p>The YELLOW LED will turn Off.</p>	<p>The LED will turn ON solide.</p> <p>The YELLOW LED will turn ON solid.</p>	<p>The LED will flash rapidly.</p> <p>The LED will turn off each time.</p>	<p>The LED will turn off each time.</p> <p>The LED will flash rapidly.</p>	<p>The LED will turn Off.</p>	<p>The LED will turn Off.</p> <p>The YELLOW LED will turn ON solid.</p>	<p>The LED will turn Off.</p> <p>The YELLOW LED will turn Off.</p>
<p>The YELLOW LED will turn ON solid.</p>	<p>The YELLOW LED will turn Off.</p>	<p>The YELLOW LED will turn ON solid.</p>	<p>The 3 LED will turn ON solid.</p>	<p>The 3 LED will turn off each time.</p>	<p>The 3 LED will turn off.</p>	<p>The YELLOW LED will turn ON solid.</p>	<p>The YELLOW LED will turn Off.</p>



REMOTE STARTER FUNCTIONALITY |



All doors must be closed.



Remote start the vehicle.



Unlock the doors with the remote-starter remote or the OEM remote.



Insert and Turn the key to the Ignition ON/RUN position.



Press the brake pedal.



The vehicle can now be put in to gear and driven.

STANDALONE & THAR-FOR3 INSTALLATION

ADDENDUM - SUGGESTED WIRING CONFIGURATION




ONLY COMPATIBLE WITH AUTOMATIC TRANSMISSION VEHICLES.



Vehicle functions supported in this diagram (functional if equipped)

VEHICLE	YEARS	Immobilizer bypass	Lock	Unlock	Arm	Disarm	Heated Seats**	Rear Defrost**	RAP Disable	Parking Lights***	Tachometer	Door Status	Trunk Status	Hood Status*	Hand-Brake Status	Foot-Brake Status	Active OEM Remote Start
FORD Ranger	Push-to-Start 2020	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•

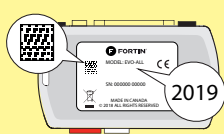

COMPATIBLE MODULE REQUIRED:

QR CODE ON THE LABEL
MANUFACTURED AFTER: 2019

FIRMWARE VERSION

58.[02]
MINIMUM

To add the firmware version and the options, use the **FLASH LINK UPDATER** or **FLASH LINK MOBILE** tool, sold separately.



Program bypass option:

UNIT OPTION

DESCRIPTION

C1

OEM Remote status (Lock/Unlock) monitoring

D6

Push-to-Start

IF THE VEHICLE IS NOT EQUIPPED WITH FUNCTIONAL HOOD PIN:

A11

OFF

Hood trigger (Output Status).

NOTES

The vehicles OEM remote and SmartKey are still operable during remote start.

**Heated seats The heated seats and rear defrost activate automatically when it cold.
**Rear Defrost

***Parking Lights The parking Lights at remote start only.

MANDATORY INSTALL

*HOOD PIN



HOOD STATUS: THE HOOD PIN SWITCH MUST BE INSTALLED IF THE VEHICLE CAN BE REMOTE STARTED WITH THE HOOD OPEN, SET FUNCTION A11 TO OFF.

A11

OFF

Notice: the installation of safety elements are mandatory. The hood pin is an essential security element and must be installed.

THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.

PARTS REQUIRED (NOT INCLUDED) |

1x **FLASH LINK UPDATER,**
 1x **FLASH LINK MANAGER**
SOFTWARE | PROGRAMME
 1x Microsoft Windows Computer with Internet connection

OR

1x **FLASH LINK MOBILE**
 1x **FLASH LINK MOBILE APP**
Smartphone Android or iOS with Internet connection (provider charges may apply).

MANDATORY

HOOD PIN

REMOTE START SAFETY OVERRIDE SWITCH

VALET SWITCH

Part #: RSPB available, Sold separately.

Notice: the installation of safety elements are mandatory. The hood pin and the valet switch are essential security elements and must be installed.

STAND ALONE CONFIGURATION

	Program bypass option	UNIT OPTION	DESCRIPTION
	OEM Remote Stand Alone Remote Starter:	D1.10 D1.1	By default, LOCK, LOCK, LOCK Par défaut, VERROUILLE, VERROUILLE, VERROUILLE
	Program bypass option with oem remote:	C1	OEM Remote Monitoring
	Program bypass option with RF KIT antenna:	H1 to H6	Supported RF Kits and select RF Kit
	Program bypass option Vehicle hybrid only:	D4	Hybrid mode (Vehicle hybrid only)

REMOTE STARTER FUNCTIONALITY |

All doors must be closed.

3X

Press the OEM remote's Lock button 3x to remote-start (or remote-stop) the vehicle.

The vehicle will START.

REMOTE STARTER DIAGNOSTICS

MODULE RED LED

x2 flash : Brake ON

x3 flash : No tach

x4 flash : Ignition before start

x5 flash : Hood Open

REMOTE STARTER WARNING CARD |

CUT THIS WARNING CARD AND STICK IT ON A VISIBLE PLACE:
 or use the package RSPB, Sold separately.

WARNING

REMOTE STARTER

THE VEHICLE CAN BE STARTED BY EITHER: PRESSING THE LOCK BUTTON ON THE OEM REMOTE 3 TIMES CONSECUTIVELY OR BY A SMARTPHONE. **TURN ON** THE SAFETY SWITCH LOCATED UNDER THE DASHBOARD BEFORE WORKING ON THE VEHICLE.

DESCRIPTION | DESCRIPTION

	Parts required (Not included)	PAGE
--	-------------------------------	------

WIRE TO WIRE DIAGRAM


AUTOMATIC TRANSMISSION	1x 7.5 Amp. fuse	Page 3
------------------------	------------------	--------

THARNES DIAGRAM


THARNES THAR-FOR3 AUTOMATIC TRANSMISSION	1x THAR-FOR3	Page 4
--	--------------	--------



① Gateway module, Behind OBD-II connector

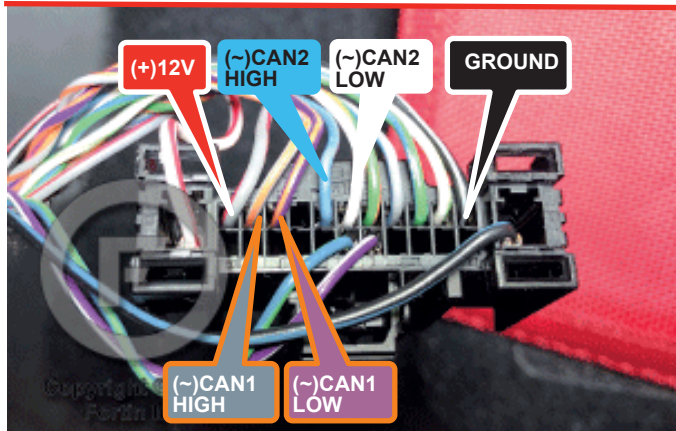


AUTOMATIC TRANSMISSION WIRING CONNECTION |

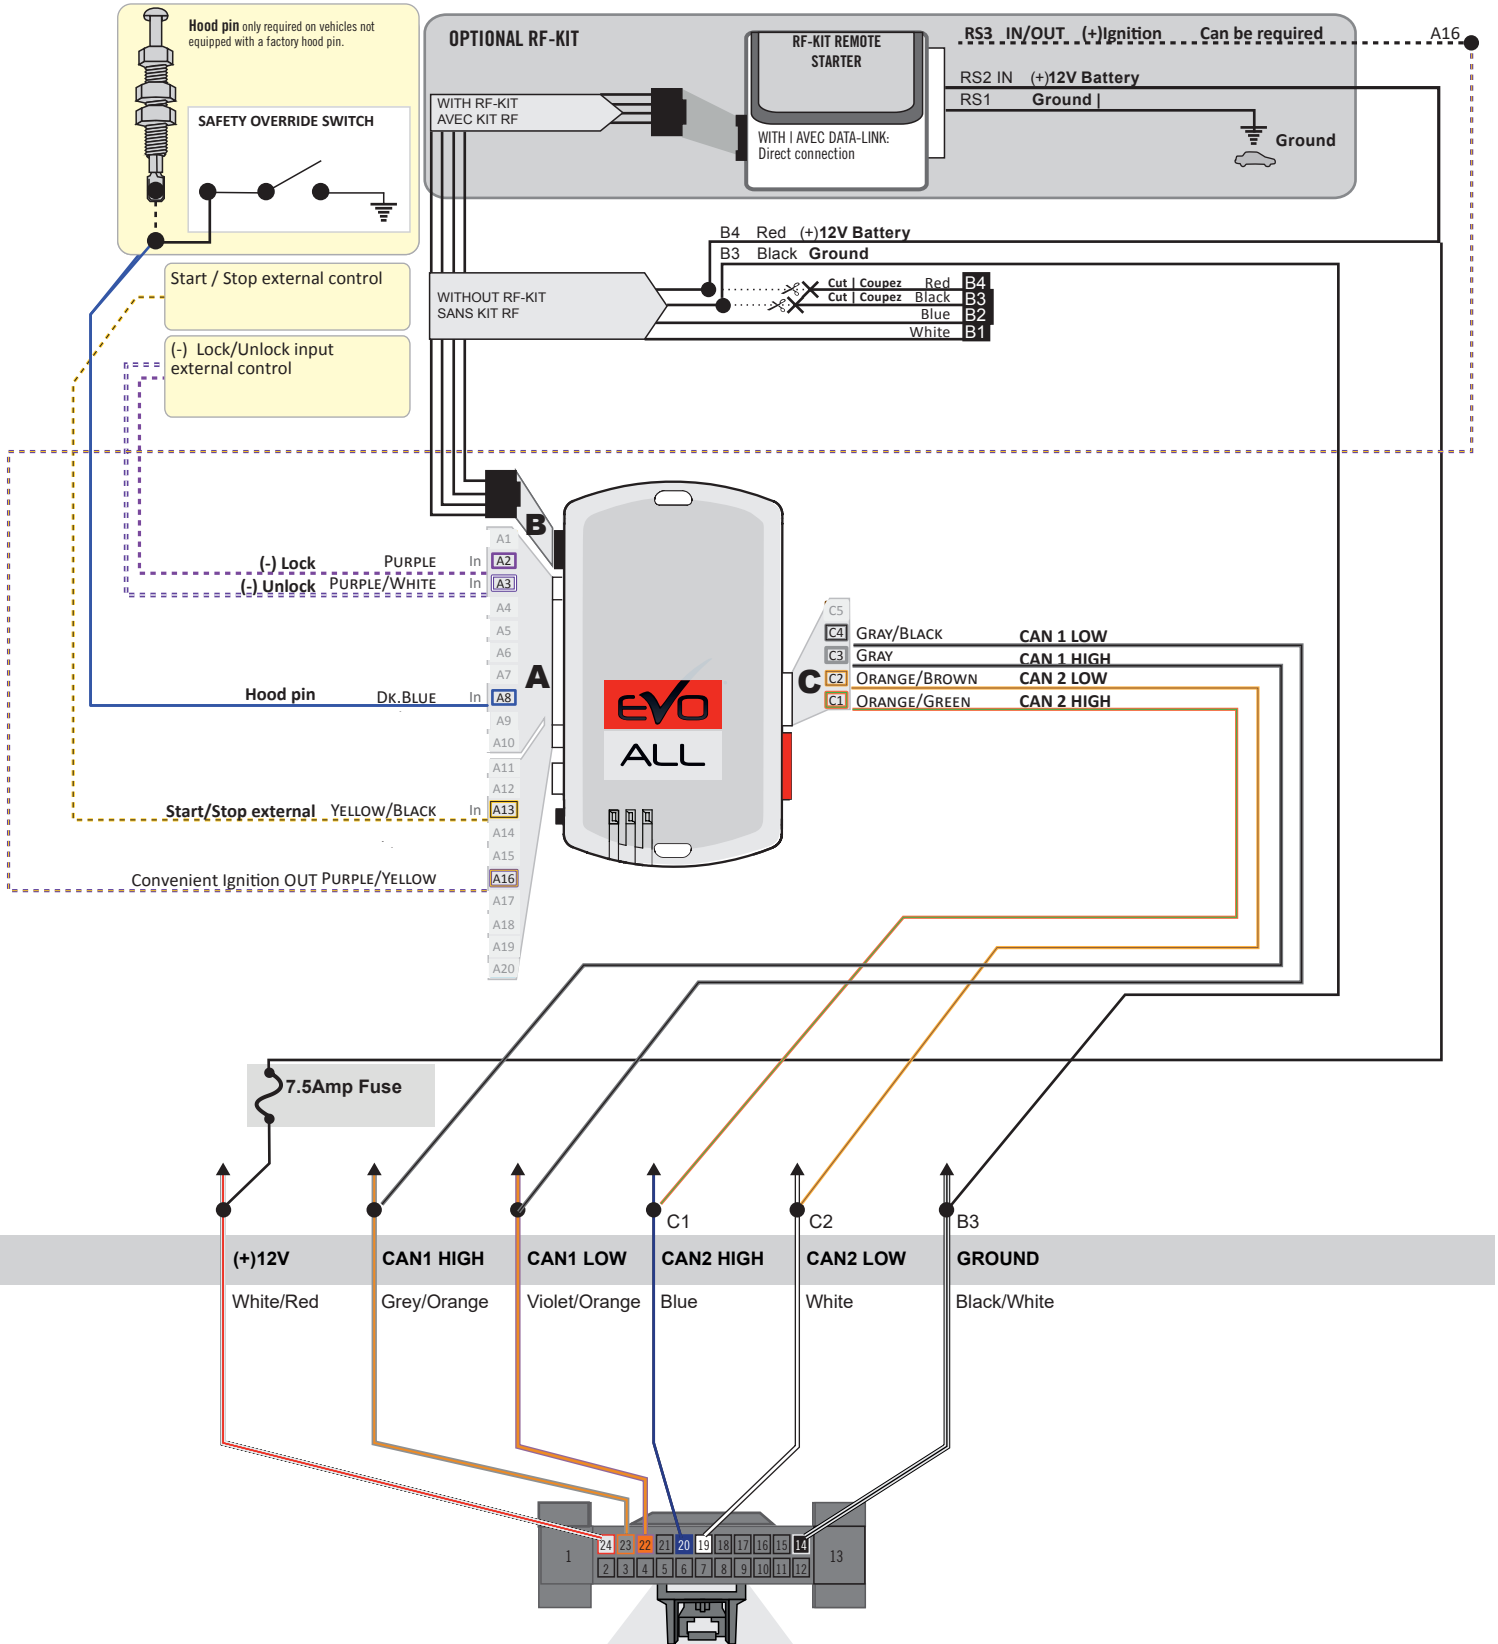


RANGER


① Gateway module, Connector Behind OBD-II connector - located at dash board driver's side Back view, 24-pin black connector.

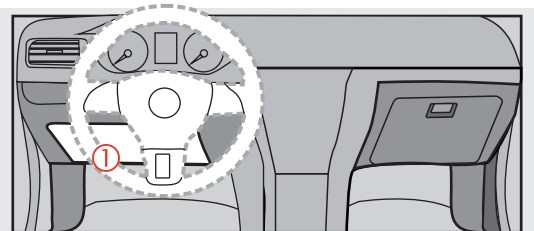


THAR-FOR3 | T-HARNESS - AUTOMATIC TRANSMISSION |

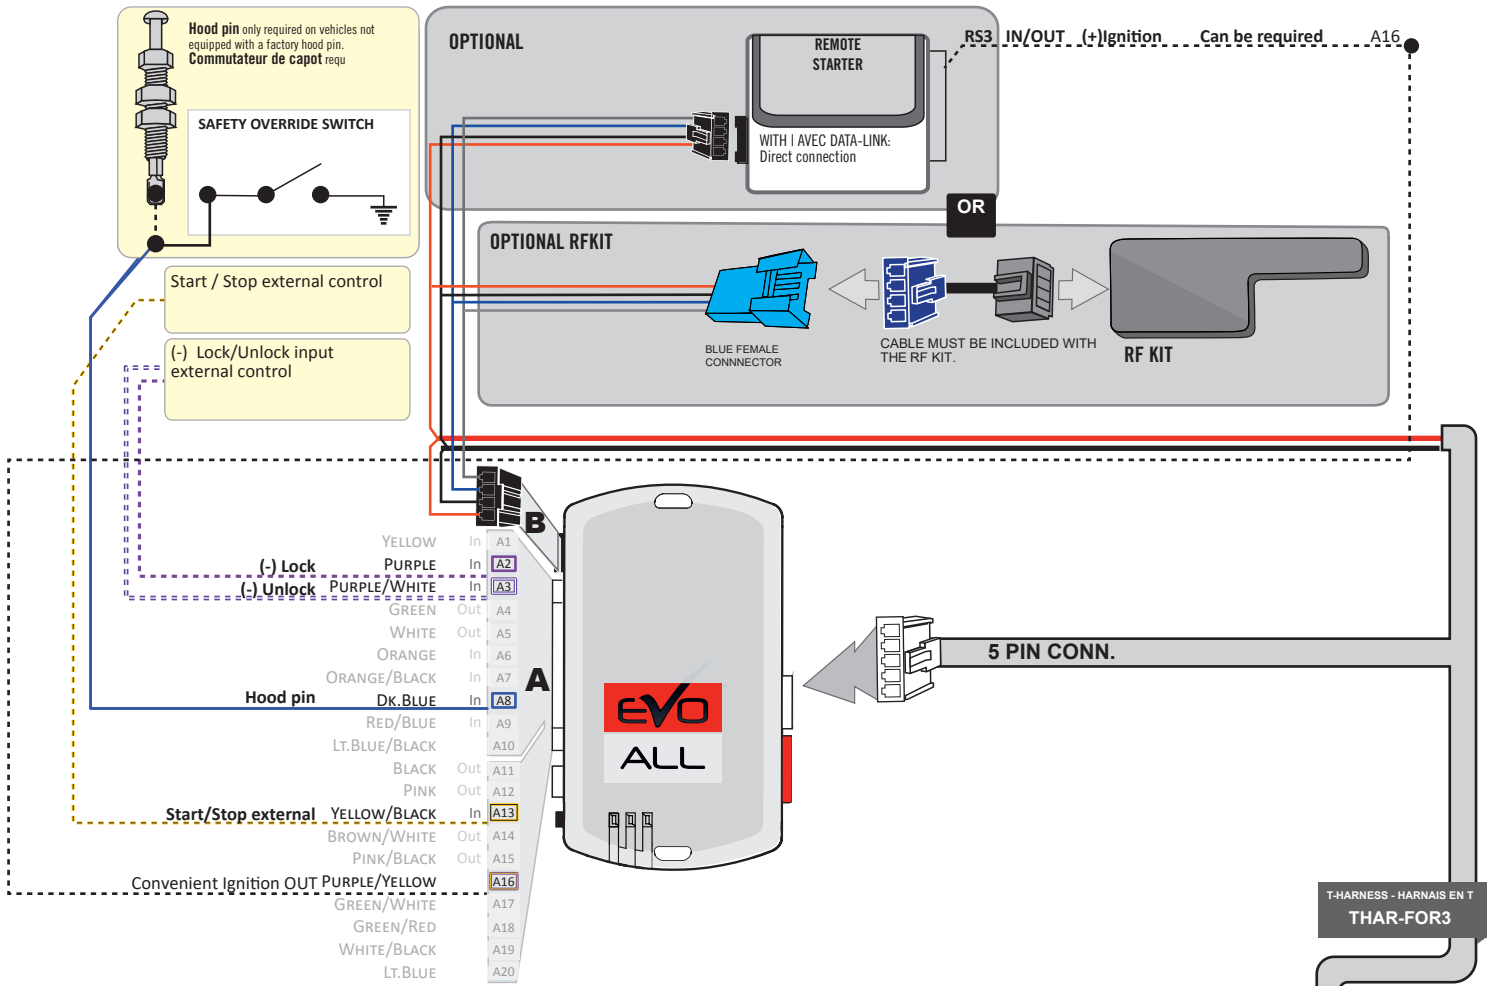

RANGER

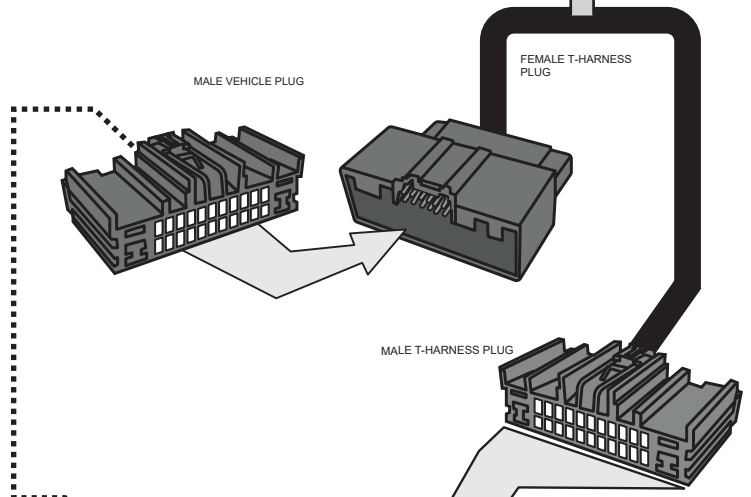

① Gateway module, Connector Behind OBD-II connector - located at dash board driver's side Back view, 24-pin black connector.

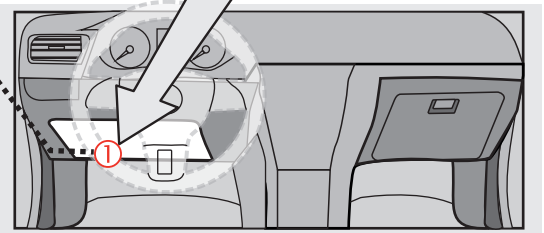

DCRYPTOR PROGRAMMING PROCEDURE




- Parts required (not included)**
- 1x **FLASH LINK UPDATER,**
 - 1x **FLASH LINK MANAGER**
SOFTWARE | PROGRAMME
 - 1x Microsoft Windows Computer with Internet connection

OR

- 1x **FLASH LINK MOBILE**
- 1x **FLASH LINK MOBILE APP**
- Smartphone *Android* or *iOS* with Internet connection
(Internet provider charges may apply)

BEFORE PROGRAMMING SET THE UNIT OPTIONS AND SAVE.


1

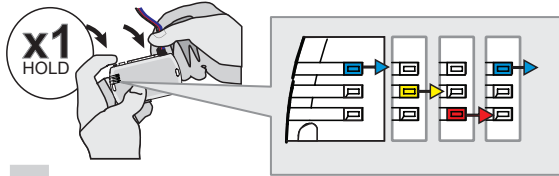

Press and hold the programming button:
Insert the 4-Pin (Data-Link) connector.

↳ The Blue, Red, Yellow and Blue & Red LEDs will alternatively illuminate.


2

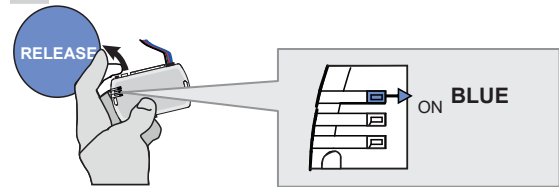

Release the programming button when the LED is **BLUE**.


If the LED is not solid BLUE disconnect the 4-Pin connector (Data-Link) and go back to step 1.

3

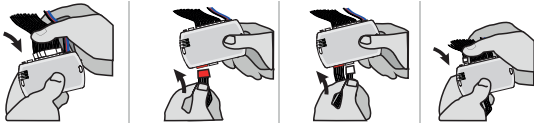

Insert the required remaining connectors.

4

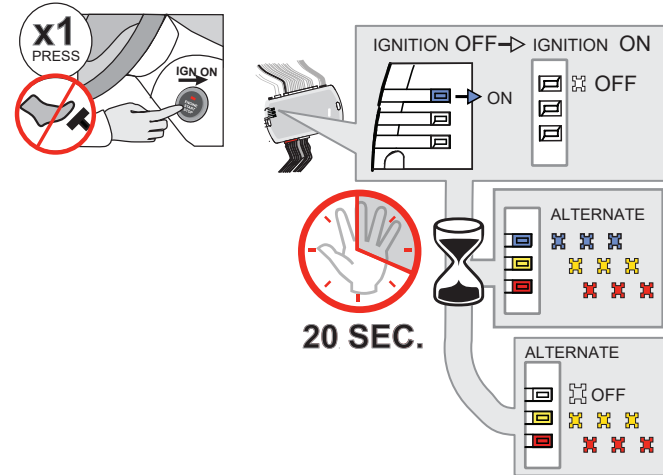

Do not press the brake pedal.
Press the Push-to-Start button once to turn on the ignition.

↳ The **BLUE** LED will turn OFF.


↳ The **BLUE, YELLOW** and **RED** LEDs will alternate.

Wait, at least 20 seconds, do not disconnect the modules or turn off the ignition.

↳ The **RED** and **YELLOW** LEDs will alternate.

Make sure that the DELs are flashing **RED** and **YELLOW** before continuing programming.

5

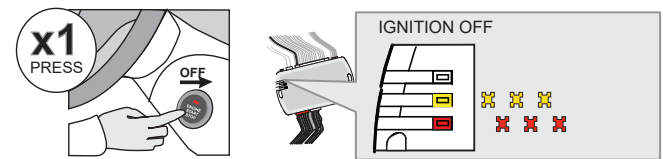

Press the Push-to-Start button once to turn off the ignition.

↳ The **RED** and **YELLOW** LEDs alternate.

KEY BYPASS PROGRAMMING PROCEDURE 2/2

6

Disconnect all the connectors and after the Data-Link (4-pins) connector.

7

Use the tool: **FLASH LINK UPDATER** or **FLASH LINK MOBILE** to visit the DCRYPTOR menu.


OR

Smartphone* (Internet provider charges may apply)

*Parts required (not included)

8

AFTER DCRYPTOR PROGRAMMING COMPLETED
Go back to the vehicle and **reconnect** the 4-Pin (Data-Link) connector and after, all the remaining connector.

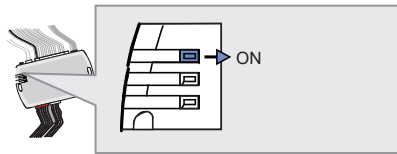

↳ The BLUE LED will turn ON.

9

x1 PRESS

Do not press the brake pedal. **Press** the Push-to-Start button once to turn on the ignition.

↳ The RED and YELLOW LEDs will turn ON.

20 SEC.

↳ The BLUE LED will flash rapidly.

Wait, at least 20 seconds, do not disconnect the modules or turn off the ignition.

10

x1 PRESS

Press the Push-to-Start button once to turn off the ignition.

↳ The BLUE will turn OFF.

The module is now programmed.

OPTIONAL RF-KIT PROGRAMMING

PROGRAM BYPASS OPTION



Program bypass option:

H2

Supported RF-KITS enable

H2 Fortin 2

OPTIONAL FORTIN RF KIT SERIES 4 OR SERIES 9 PROGRAMMING



The module must be programmed on the vehicle.




MAKE SURE THE IGNITION KEY HAS BEEN IN THE OFF POSITION FOR AT LEAST 5 SECONDS.

<p>1</p> <p>ON x1 PRESS</p> <p>Do not press the brake pedal. Press the Push-to-Start button once to turn on the ignition.</p>	<p>2</p> <p>OFF x1 PRESS</p> <p>Press the Push-to-Start button once to turn off the ignition.</p>	<p>3</p> <p>ON x1 PRESS</p> <p>Do not press the brake pedal. Press the Push-to-Start button once to turn on the ignition.</p>	<p>4</p> <p>4X BRAKES</p> <p>x4 PRESS</p> <p>Press and release the brake pedal four times.</p> <p>Appuyez et relâchez quatre fois la pédale de frein.</p> <p>The LED will turn off each time.</p>	<p>5</p> <p>ON EACH TRANSMITTER</p> <p>4 BUTTONS</p> <p>[-] PRESS AND RELEASE</p> <p>→ PRESS AND RELEASE</p> <p>1 BUTTON</p> <p>PRESS APPROX. 12 SEC. AND WAIT FOR THE BLUE LED TO TURN OFF THEN BACK ON SOLID THEN RELEASE.</p>	<p>6</p> <p>OFF x1 PRESS</p> <p>Press the Push-to-Start button once to turn off the ignition.</p>	<p>7</p> <p>ON x1 PRESS</p> <p>Do not press the brake pedal. Press the Push-to-Start button once to turn on the ignition and leave it ON for 5 sec..</p>	<p>8</p> <p>OFF x1 PRESS</p> <p>Press the Push-to-Start button once to turn off the ignition.</p>
<p>The YELLOW LED will turn ON solid.</p>	<p>The YELLOW LED will turn Off.</p>	<p>The LED will turn ON solide.</p> <p>The YELLOW LED will turn ON solid.</p>	<p>The LED will flash rapidly.</p> <p>The 3 LED will turn ON solid.</p>	<p>The LED will turn off each time.</p> <p>The LED will flash rapidly.</p>	<p>The LED will turn Off.</p> <p>The 3 LED will turn off.</p>	<p>The LED will turn Off.</p> <p>The YELLOW LED will turn ON solid.</p>	<p>The LED will turn Off.</p> <p>The YELLOW LED will turn Off.</p>
<p>The 3 LED will turn off each time.</p>							



REMOTE STARTER FUNCTIONALITY

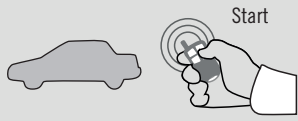


All doors must be closed.

Remote start the vehicle.



Unlock the doors with either:

 - The OEM remote
- The remote-starter remote
- Or the proximity remote



Enter the vehicle with the SMART-KEY.



DO NOT PRESS THE BRAKE PEDAL.

Press and release the Push-to-Start button once.



Press the brake pedal. The vehicle can now be put in to gear and driven.

If the Smart-Key is not detected the vehicle will shut down.

STANDALONE & THAR-FOR3 INSTALLATION

ADDENDUM - SUGGESTED WIRING CONFIGURATION



ONLY COMPATIBLE WITH AUTOMATIC TRANSMISSION VEHICLES.

VEHICLE	YEARS	Vehicle functions supported in this diagram (functional if equipped)																	
		Immobilizer bypass	Lock	Unlock	Arrn	Disarm	RAP Disable	Parking Lights***	Tachometer	Heated seats**	Heated Mirrors**	Rear defrost	Door Status	Trunk Status	Hood Status*	Hand-Brake Status	Foot-Brake Status	Active OEM Remote Start	
FORD	Transit	Key 2020	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
		Diesel Key 2020	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•

	COMPATIBLE MODULE REQUIRED:	QR CODE ON THE LABEL MANUFACTURED AFTER: 2019	FIRMWARE VERSION 58.[02] MINIMUM	To add the firmware version and the options, use the FLASH LINK UPDATER or FLASH LINK MOBILE tool, sold separately.

UNIT OPTION	DESCRIPTION
C1	OEM Remote status (Lock/Unlock) monitoring
A11 OFF	Hood trigger (Output Status).

IF THE VEHICLE IS NOT EQUIPPED WITH FUNCTIONAL HOOD PIN:

NOTES

The vehicles OEM remote and SmartKey are still operable during remote start.

**Heated seats The heated seats and rear defrost activate automatically when it cold.

***Parking Lights The parking Lights at remote start only.



The vehicle must be equipped with the OEM remote with the door locks.

MANDATORY INSTALL

*HOOD PIN



HOOD STATUS: THE HOOD PIN SWITCH MUST BE INSTALLED IF THE VEHICLE CAN BE REMOTE STARTED WITH THE HOOD OPEN, SET FUNCTION A11 TO OFF.

A11

OFF

Notice: the installation of safety elements are mandatory. The hood pin is an essential security element and must be installed.

THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.

PARTS REQUIRED (NOT INCLUDED) |

1x **FLASH LINK UPDATER**
 1x **FLASH LINK MANAGER**
 SOFTWARE | PROGRAMME
 1x Microsoft Windows Computer with Internet connection

OR

 
1x **FLASH LINK MOBILE**
 1x **FLASH LINK MOBILE APP**
 Smartphone *Android* or *iOS* with Internet connection (*provider charges may apply*).
 1x

MANDATORY

HOOD PIN



REMOTE START SAFETY OVERRIDE SWITCH



VALET SWITCH

Part #: RSPB available, Sold separately.

Notice: the installation of safety elements are mandatory. The hood pin and the valet switch are essential security elements and must be installed.

STAND ALONE CONFIGURATION |

	Program bypass option	UNIT OPTION	DESCRIPTION
	OEM Remote Stand Alone Remote Starter:	D1.10	By default, LOCK, LOCK, LOCK Par défaut, VERROUILLE, VERROUILLE, VERROUILLE
		D1.1	
	Program bypass option with oem remote:	C1	OEM Remote Monitoring
	Program bypass option with RF KIT antenna:	H1 to H6	Supported RF Kits and select RF Kit
	Program bypass option Vehicle hybrid only:	D4	Hybrid mode (Vehicle hybrid only)

REMOTE STARTER FUNCTIONALITY |

All doors must be closed.

3X

Press the OEM remote's Lock button 3x to remote-start (or remote-stop) the vehicle.

START

The vehicle will START.

REMOTE STARTER DIAGNOSTICS

MODULE RED LED
x2 flash : Brake ON
x3 flash : No tach
x4 flash : Ignition before start
x5 flash : Hood Open

REMOTE STARTER WARNING CARD |



CUT THIS WARNING CARD AND STICK IT ON A VISIBLE PLACE:
 or use the package RSPB, Sold separately.

WARNING

REMOTE STARTER

THE VEHICLE CAN BE STARTED BY EITHER: PRESSING THE LOCK BUTTON ON THE OEM REMOTE 3 TIMES CONSECUTIVELY OR BY A SMARTPHONE. **TURN ON** THE SAFETY SWITCH LOCATED UNDER THE DASHBOARD BEFORE WORKING ON THE VEHICLE.

DESCRIPTION |

	Parts required (Not included)	PAGE
--	-------------------------------	------


WIRE TO WIRE DIAGRAM

AUTOMATIC TRANSMISSION	1x 7.5 Amp. fuse	Page 3
------------------------	------------------	--------


THARNES DIAGRAM

THARNES THAR-FOR3 AUTOMATIC TRANSMISSION	1x THAR-FOR3	Page 4
--	--------------	--------


① Gateway module, located at dash board driver's side,

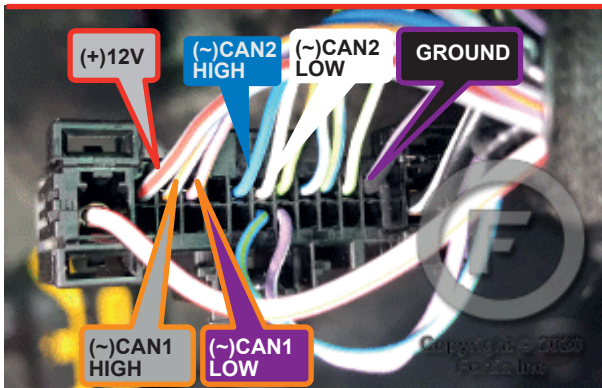


AUTOMATIC TRANSMISSION WIRING CONNECTION |

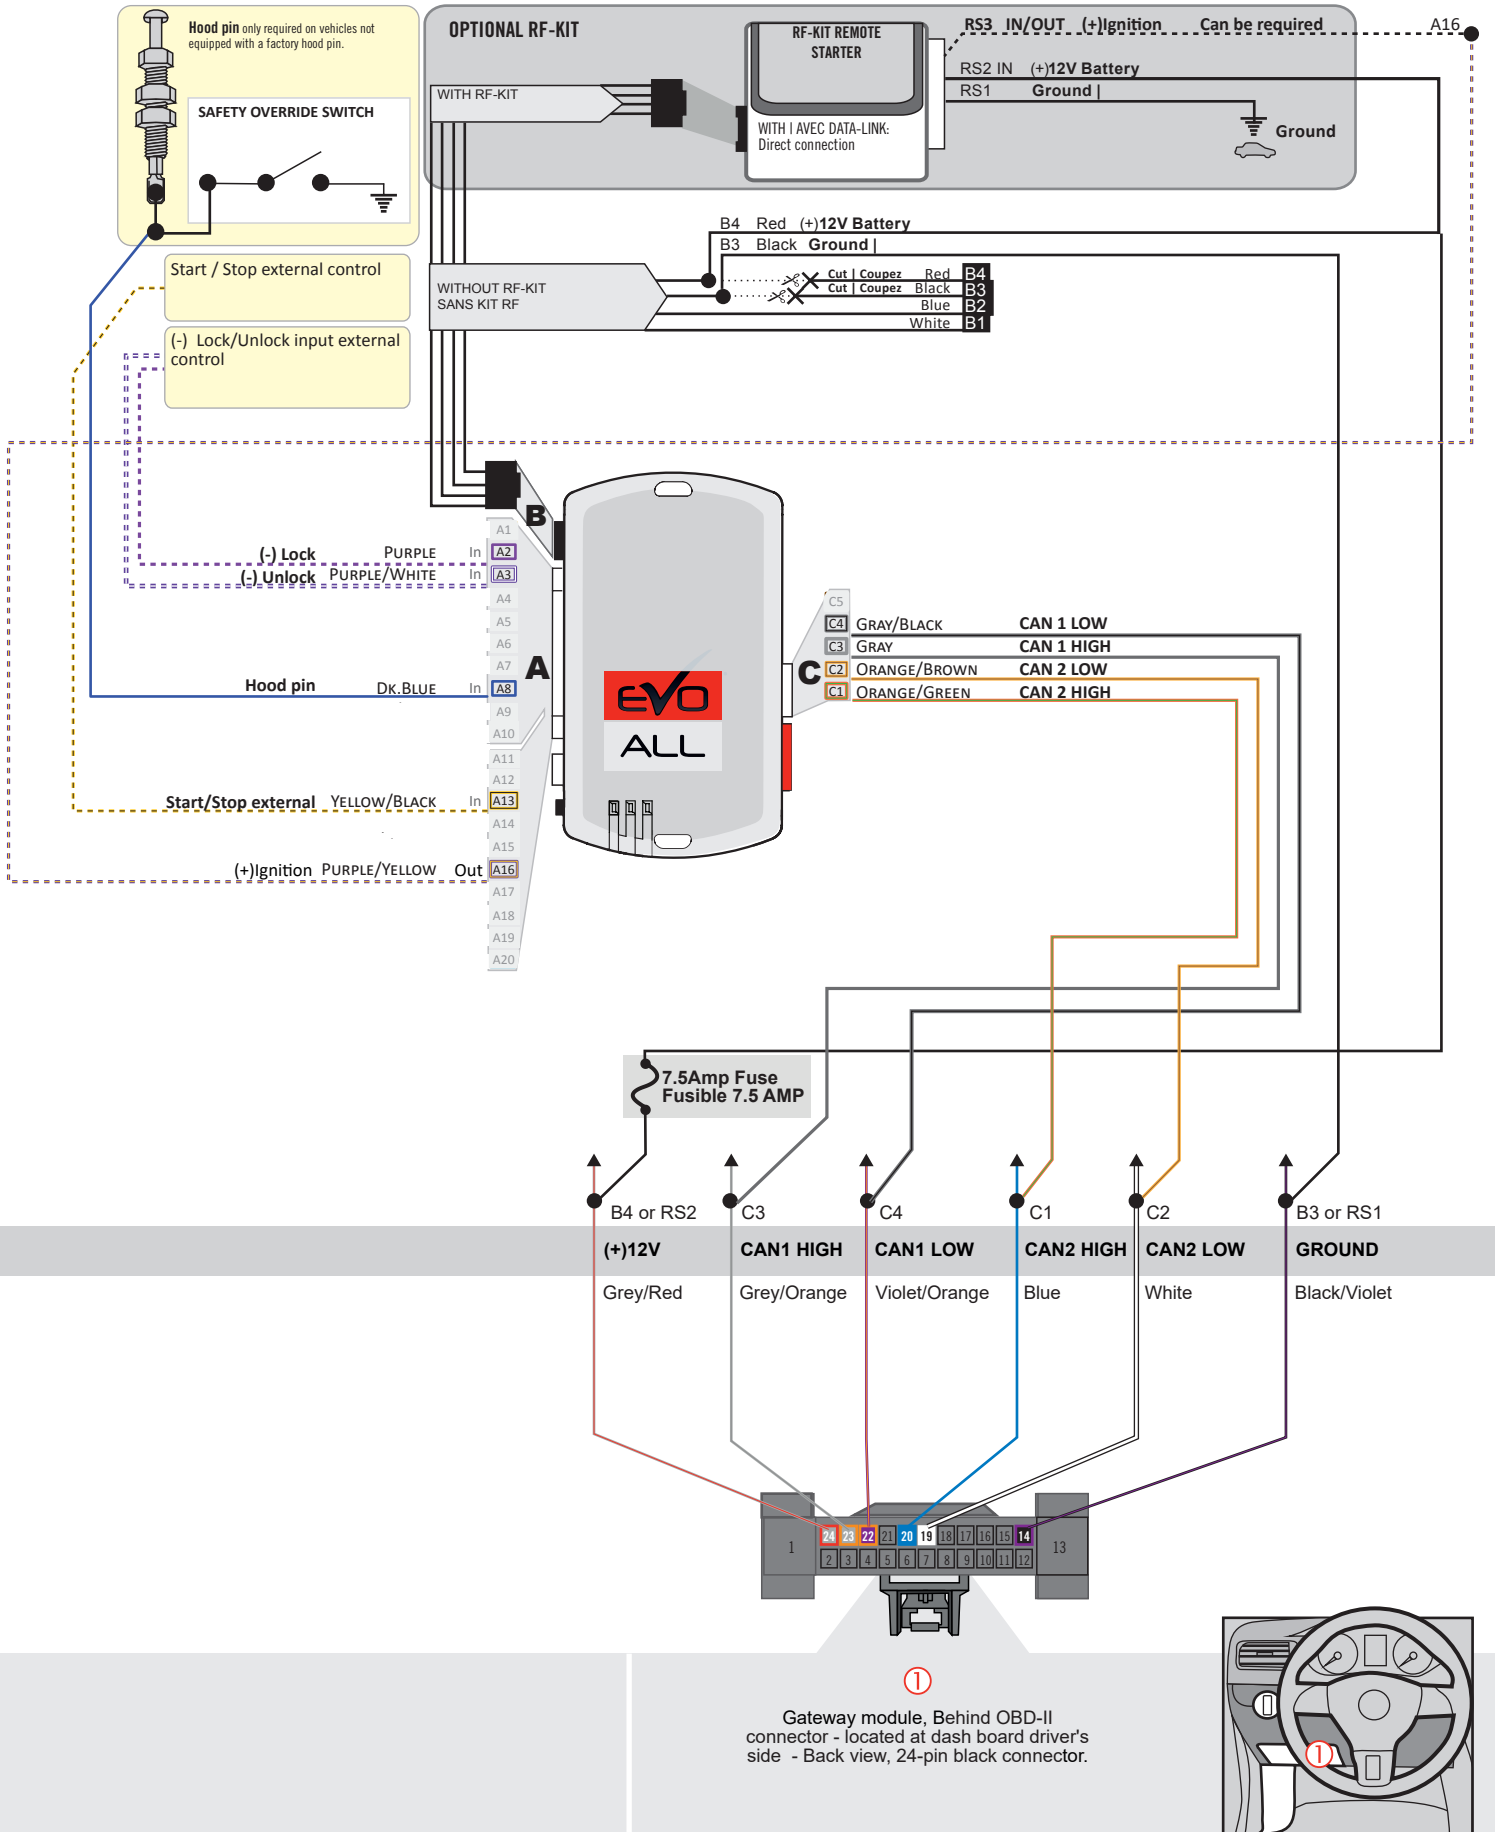

THAR-FOR3 | T-HARNESS - AUTOMATIC TRANSMISSION |

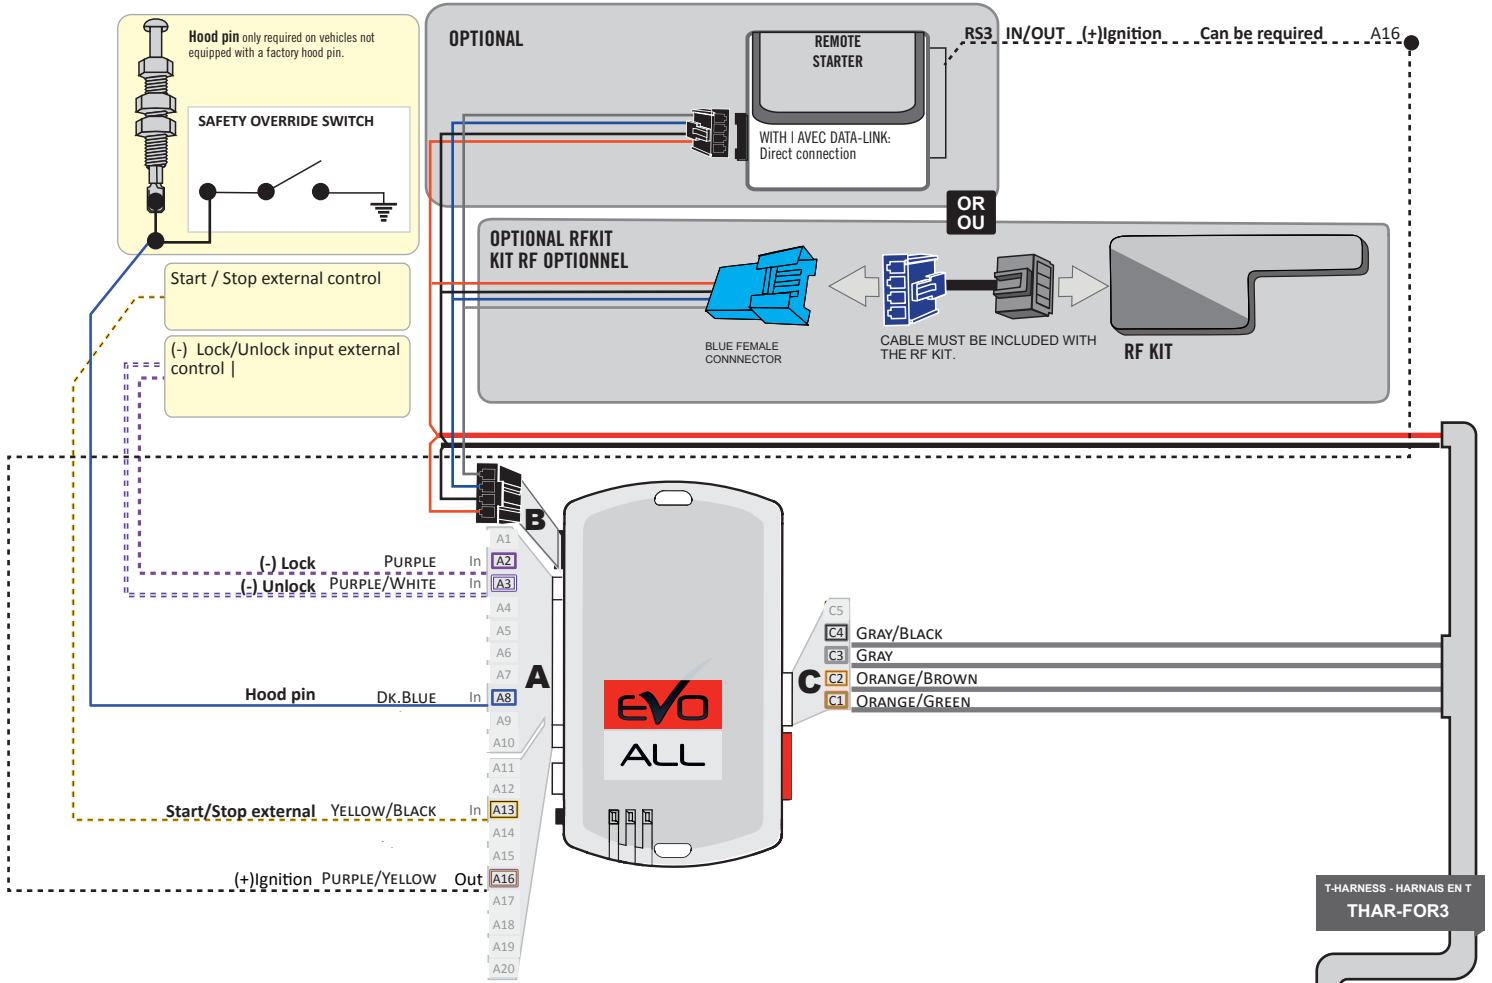

TRANSIT 250

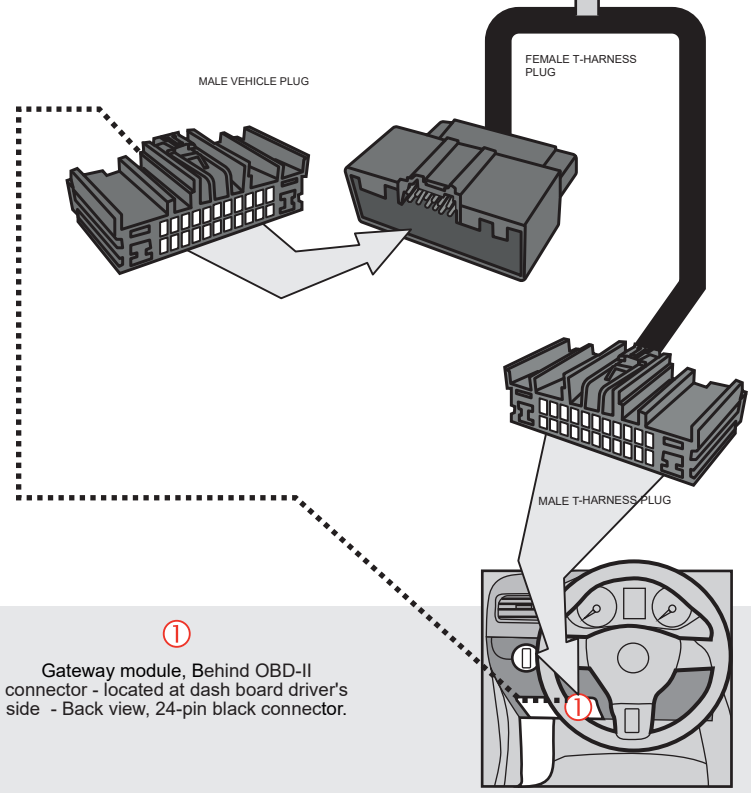

① Gateway module, Behind OBD-II connector - located at dash board driver's side - Back view, 24-pin black connector.



Parts required (not included)


- 1x FLASH LINK UPDATER, SOFTWARE | PROGRAMME
- 1x FLASH LINK MANAGER
- 1x Microsoft Windows Computer with Internet connection

OR

- 1x FLASH LINK MOBILE
- 1x FLASH LINK MOBILE APP
- Smartphone Android or iOS with Internet connection (Internet provider charges may apply)

BEFORE PROGRAMMING SET THE UNIT OPTIONS AND SAVE.


1

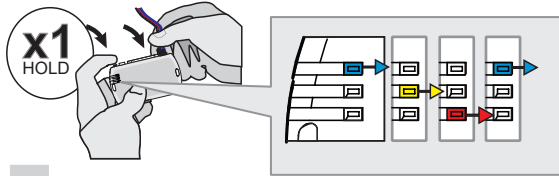

Press and hold the programming button:
Insert the 4-Pin (Data-Link) connector.


↳ The Blue, Red, Yellow and Blue & Red LEDs will alternatively illuminate.

2

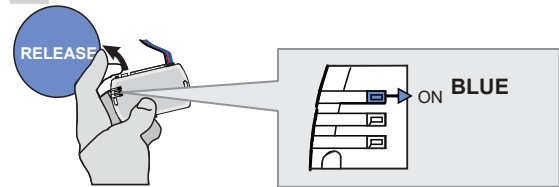


Release the programming button when the LED is BLUE.

 If the LED is not solid BLUE disconnect the 4-Pin connector (Data-Link) and go back to step 1.




3

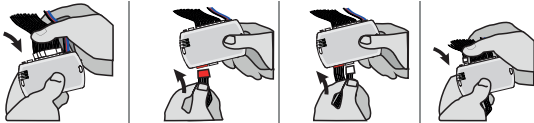

Insert the required remaining connectors.

4

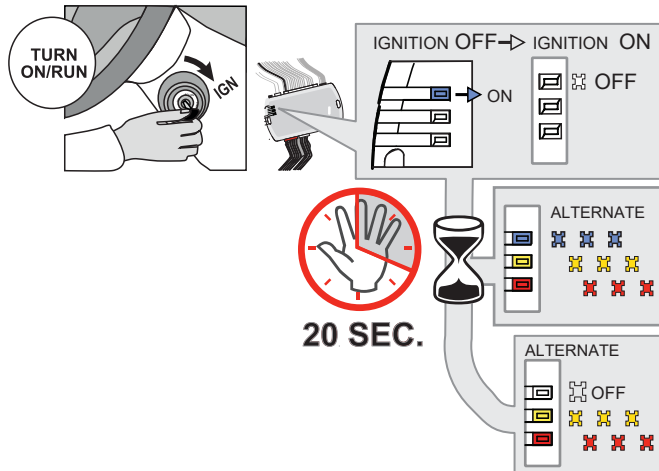

Turn the key to the Ignition ON/RUN position.

 
↳ The BLUE LED will turn OFF.

↳ The BLUE, YELLOW and RED LEDs will alternate.


Wait, at least 20 seconds, do not disconnect the modules or turn off the ignition.

↳ The RED and YELLOW LEDs will alternate.

Make sure that the DELs are flashing RED and YELLOW before continuing programming.



5

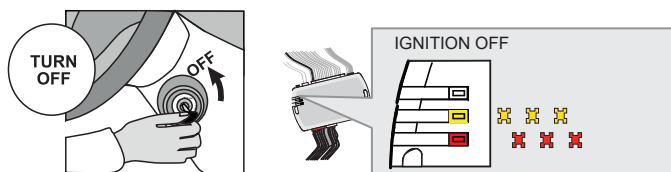


Turn the key to the OFF position.

↳ The RED and YELLOW LEDs alternate.


KEY BYPASS PROGRAMMING PROCEDURE 2/2 |

6

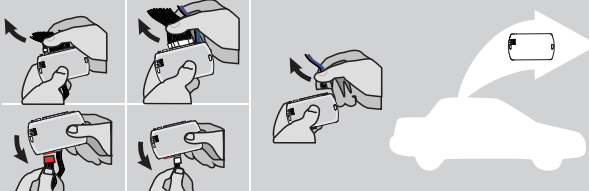

Disconnect all the connectors and after the Data-Link (4-pins) connector.

7



Microsoft Windows Computer with Internet connection*

FLASH LINK UPDATER* **FLASH LINK MANAGER***
SOFTWARE | PROGRAMME

OR


Smartphone* (Internet provider charges may apply)

VEHICLE'S OBDII CONNECTOR **FLASH LINK MOBILE***


Use the tool: FLASH LINK UPDATER or FLASH LINK MOBILE to visit the DCRYPTOR menu.

*Parts required (not included)

8

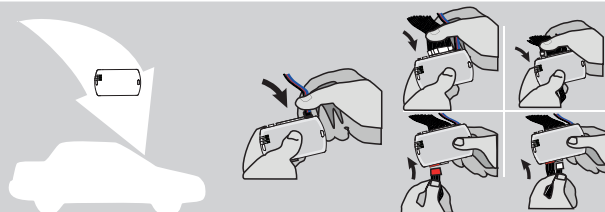


AFTER DCRYPTOR PROGRAMMING COMPLETED
Go back to the vehicle and reconnect the 4-Pin (Data-Link) connector and after, all the remaining connector.

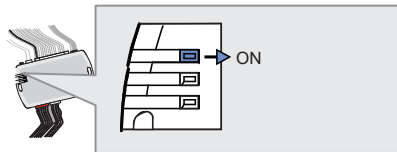

↳ The BLUE LED will turn ON.

9

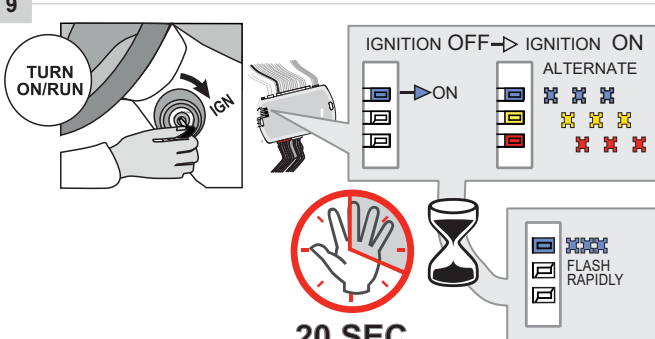

TURN ON/RUN

IGNITION OFF → IGNITION ON

ALTERNATE

↳ The RED and YELLOW LEDs will turn ON.


20 SEC.

FLASH RAPIDLY

Wait, at least 20 seconds, do not disconnect the modules or turn off the ignition.

↳ The BLUE LED will flash rapidly.

10

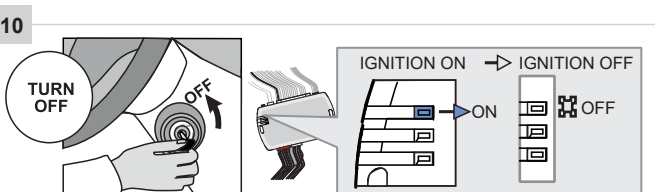

TURN OFF

IGNITION ON → IGNITION OFF

↳ The BLUE will turn OFF.




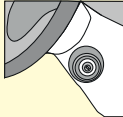
The module is now programmed.

OPTIONAL RF-KIT PROGRAMMING |

PROGRAM BYPASS OPTION I

	Program bypass option:	H2	<input checked="" type="checkbox"/> Supported RF-KITS enable <input checked="" type="checkbox"/> H2 Fortin 2 <input checked="" type="checkbox"/>
--	------------------------	-----------	---

OPTIONAL FORTIN RF KIT SERIES 4 OR SERIES 9 PROGRAMMING

The module must be programmed on the vehicle.   **MAKE SURE THE IGNITION KEY HAS BEEN IN THE OFF POSITION FOR AT LEAST 5 SECONDS.**

<p>1</p> <p>ON TURN ON/RUN</p>	<p>2</p> <p>OFF TURN OFF</p>	<p>3</p> <p>ON TURN ON/RUN</p>	<p>4X BRAKES</p> <p>x4 PRESS</p>	<p>ON EACH TRANSMITTER</p> <p>4 BUTTONS</p> <p>[-] PRESS AND RELEASE</p> <p>→ PRESS AND RELEASE</p> <p>1 BUTTON</p> <p>PRESS APPROX. 12 SEC. AND WAIT FOR THE BLUE LED TO TURN OFF THEN BACK ON SOLID THEN RELEASE.</p>	<p>6</p> <p>OFF TURN OFF</p>	<p>7</p> <p>ON TURN ON/RUN</p>	<p>8</p> <p>OFF TURN OFF</p>
<p>Turn the key to the ON/RUN position.</p>	<p>Turn the ignition to the OFF position.</p>	<p>Turn the key to the ON/RUN position.</p>	<p>Press and release the brake pedal four times.</p>	<p>The LED will turn off each time.</p>	<p>Turn the ignition to the OFF position.</p>	<p>Turn the key to the ON/RUN position and leave it ON for 5 sec.</p>	<p>Turn the ignition to the OFF position.</p>
<p>The YELLOW LED will turn ON solid.</p>	<p>The YELLOW LED will turn Off.</p>	<p>The LED will turn ON solide.</p>	<p>The LED will flash rapidly.</p>	<p>The LED will turn off each time.</p>	<p>The LED will turn Off.</p>	<p>The LED will flash rapidly.</p>	<p>The LED will turn Off.</p>
<p>The YELLOW LED will turn ON solid.</p>	<p>The YELLOW LED will turn Off.</p>	<p>The YELLOW LED will turn ON solid.</p>	<p>The LED will flash rapidly.</p>	<p>The LED will turn off each time.</p>	<p>The LED will turn Off.</p>	<p>The LED will flash rapidly.</p>	<p>The LED will turn Off.</p>
<p>The YELLOW LED will turn ON solid.</p>	<p>The YELLOW LED will turn Off.</p>	<p>The YELLOW LED will turn ON solid.</p>	<p>The LED will flash rapidly.</p>	<p>The LED will turn off each time.</p>	<p>The LED will turn Off.</p>	<p>The LED will flash rapidly.</p>	<p>The LED will turn Off.</p>
<p>The YELLOW LED will turn ON solid.</p>	<p>The YELLOW LED will turn Off.</p>	<p>The YELLOW LED will turn ON solid.</p>	<p>The LED will flash rapidly.</p>	<p>The LED will turn off each time.</p>	<p>The LED will turn Off.</p>	<p>The LED will flash rapidly.</p>	<p>The LED will turn Off.</p>
<p>The YELLOW LED will turn ON solid.</p>	<p>The YELLOW LED will turn Off.</p>	<p>The YELLOW LED will turn ON solid.</p>	<p>The LED will flash rapidly.</p>	<p>The LED will turn off each time.</p>	<p>The LED will turn Off.</p>	<p>The LED will flash rapidly.</p>	<p>The LED will turn Off.</p>
<p>The YELLOW LED will turn ON solid.</p>	<p>The YELLOW LED will turn Off.</p>	<p>The YELLOW LED will turn ON solid.</p>	<p>The LED will flash rapidly.</p>	<p>The LED will turn off each time.</p>	<p>The LED will turn Off.</p>	<p>The LED will flash rapidly.</p>	<p>The LED will turn Off.</p>
<p>The YELLOW LED will turn ON solid.</p>	<p>The YELLOW LED will turn Off.</p>	<p>The YELLOW LED will turn ON solid.</p>	<p>The LED will flash rapidly.</p>	<p>The LED will turn off each time.</p>	<p>The LED will turn Off.</p>	<p>The LED will flash rapidly.</p>	<p>The LED will turn Off.</p>
<p>The YELLOW LED will turn ON solid.</p>	<p>The YELLOW LED will turn Off.</p>	<p>The YELLOW LED will turn ON solid.</p>	<p>The LED will flash rapidly.</p>	<p>The LED will turn off each time.</p>	<p>The LED will turn Off.</p>	<p>The LED will flash rapidly.</p>	<p>The LED will turn Off.</p>



REMOTE STARTER FUNCTIONALITY |



All doors must be closed.



Remote start the vehicle.



Unlock the doors with the remote-starter remote or the OEM remote.



Insert and Turn the key to the Ignition ON/RUN position.



Press the brake pedal.



The vehicle can now be put in to gear and driven.

STANDALONE & THAR-FOR3 INSTALLATION

ADDENDUM - SUGGESTED WIRING CONFIGURATION




ONLY COMPATIBLE WITH AUTOMATIC TRANSMISSION VEHICLES.



Vehicle functions supported in this diagram (functional if equipped)

VEHICLE	YEARS	Immobilizer bypass	T-Harness available (sold separately)	Lock	Unlock	Arm	Disarm	Heated Seats**	Rear Defrost**	RAP Disable	Parking Lights***	Tachometer	Door Status	Trunk Status	Hood Status*	Hand-Brake Status	Foot-Brake Status	Active OEM Remote Start
FORD																		
Transit Connect	2020-2022	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•

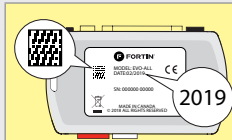

COMPATIBLE MODULE REQUIRED:

QR CODE ON THE LABEL
MANUFACTURED AFTER: 2019

FIRMWARE VERSION

58.[02]
MINIMUM

To add the firmware version and the options, use the **FLASH LINK UPDATER** or **FLASH LINK MOBILE** tool, sold separately.



Program bypass option:

UNIT OPTION

C1

DESCRIPTION

OEM Remote status (Lock/Unlock) monitoring

IF THE VEHICLE IS NOT EQUIPPED WITH FUNCTIONAL HOOD PIN:

A11

OFF

Hood trigger (Output Status).

NOTES

The vehicles OEM remote and SmartKey are still operable during remote start.

**Heated seats The heated seats and rear defrost activate automatically when it cold.

***Parking Lights The parking Lights at remote start only.



The vehicle must be equipped with the OEM remote with the door locks.

MANDATORY INSTALL

*HOOD PIN



HOOD STATUS: THE HOOD PIN SWITCH MUST BE INSTALLED IF THE VEHICLE CAN BE REMOTE STARTED WITH THE HOOD OPEN, SET FUNCTION A11 TO OFF.

A11

OFF

Notice: the installation of safety elements are mandatory. The hood pin is an essential security element and must be installed.

THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.

PARTS REQUIRED (NOT INCLUDED) |


1x **FLASH LINK UPDATER,**
1x **FLASH LINK MANAGER**
SOFTWARE | PROGRAMME
1x Microsoft Windows Computer with Internet connection

OR


1x **FLASH LINK MOBILE**
1x **FLASH LINK MOBILE APP**
Smartphone *Android* or *iOS* with Internet connection (*provider charges may apply*).

MANDATORY

HOOD PIN



REMOTE START SAFETY OVERRIDE SWITCH

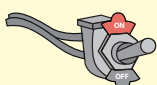
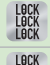






VALET SWITCH


Part #: RSPB available, Sold separately.

Notice: the installation of safety elements are mandatory. The hood pin and the valet switch are essential security elements and must be installed.


STAND ALONE CONFIGURATION |

	Program bypass option	UNIT OPTION	DESCRIPTION
	OEM Remote Stand Alone Remote Starter:	D1.10 	By default, LOCK, LOCK, LOCK Par défaut, VERROUILLE, VERROUILLE, VERROUILLE
		D1.1 	
	Program bypass option with oem remote:	C1	OEM Remote Monitoring
	Program bypass option with RF KIT antenna:	H1 to H6	Supported RF Kits and select RF Kit
	Program bypass option Vehicle hybrid only:	D4	Hybrid mode (Vehicle hybrid only)


REMOTE STARTER FUNCTIONALITY |




All doors must be closed.

3X 

Press the OEM remote's Lock button 3x to remote-start (or remote-stop) the vehicle.




START 

The vehicle will START.

REMOTE STARTER DIAGNOSTICS

MODULE RED LED
x2 flash : Brake ON
x3 flash : No tach
x4 flash : Ignition before start
x5 flash : Hood Open

REMOTE STARTER WARNING CARD |



CUT THIS WARNING CARD AND STICK IT ON A VISIBLE PLACE:
or use the package RSPB, Sold separately.

WARNING | ATTENTION

REMOTE STARTER

THE VEHICLE CAN BE STARTED BY EITHER: PRESSING THE LOCK BUTTON ON THE OEM REMOTE 3 TIMES CONSECUTIVELY OR BY A SMARTPHONE. **TURN ON** THE SAFETY SWITCH LOCATED UNDER THE DASHBOARD BEFORE WORKING ON THE VEHICLE.

DESCRIPTION |

Parts required (Not included) **PAGE**

WIRE TO WIRE DIAGRAM

AUTOMATIC TRANSMISSION	1x 7.5 Amp. fuse	Page 3
------------------------	------------------	--------



THARNESSE DIAGRAM

THARNESSE THAR-FOR3 AUTOMATIC TRANSMISSION	1x THAR-FOR3	Page 4
--	--------------	--------




② Parking Lights switch


① Gateway module, located at dash board driver's side,

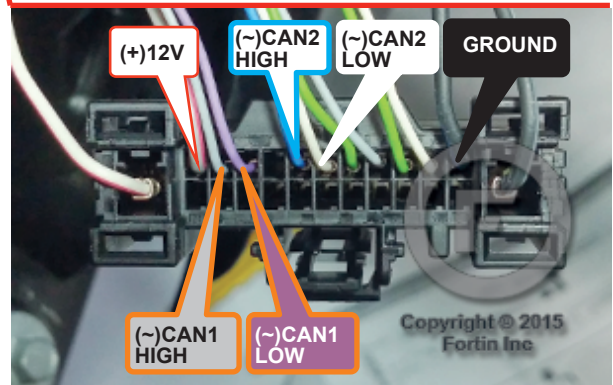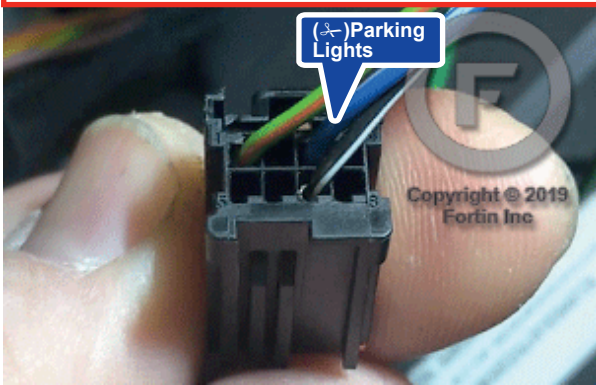



④ Under the hood If not equipped with hood pin.

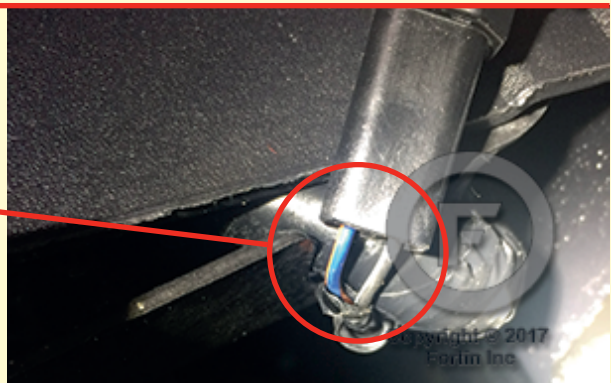

AUTOMATIC TRANSMISSION WIRING CONNECTION |

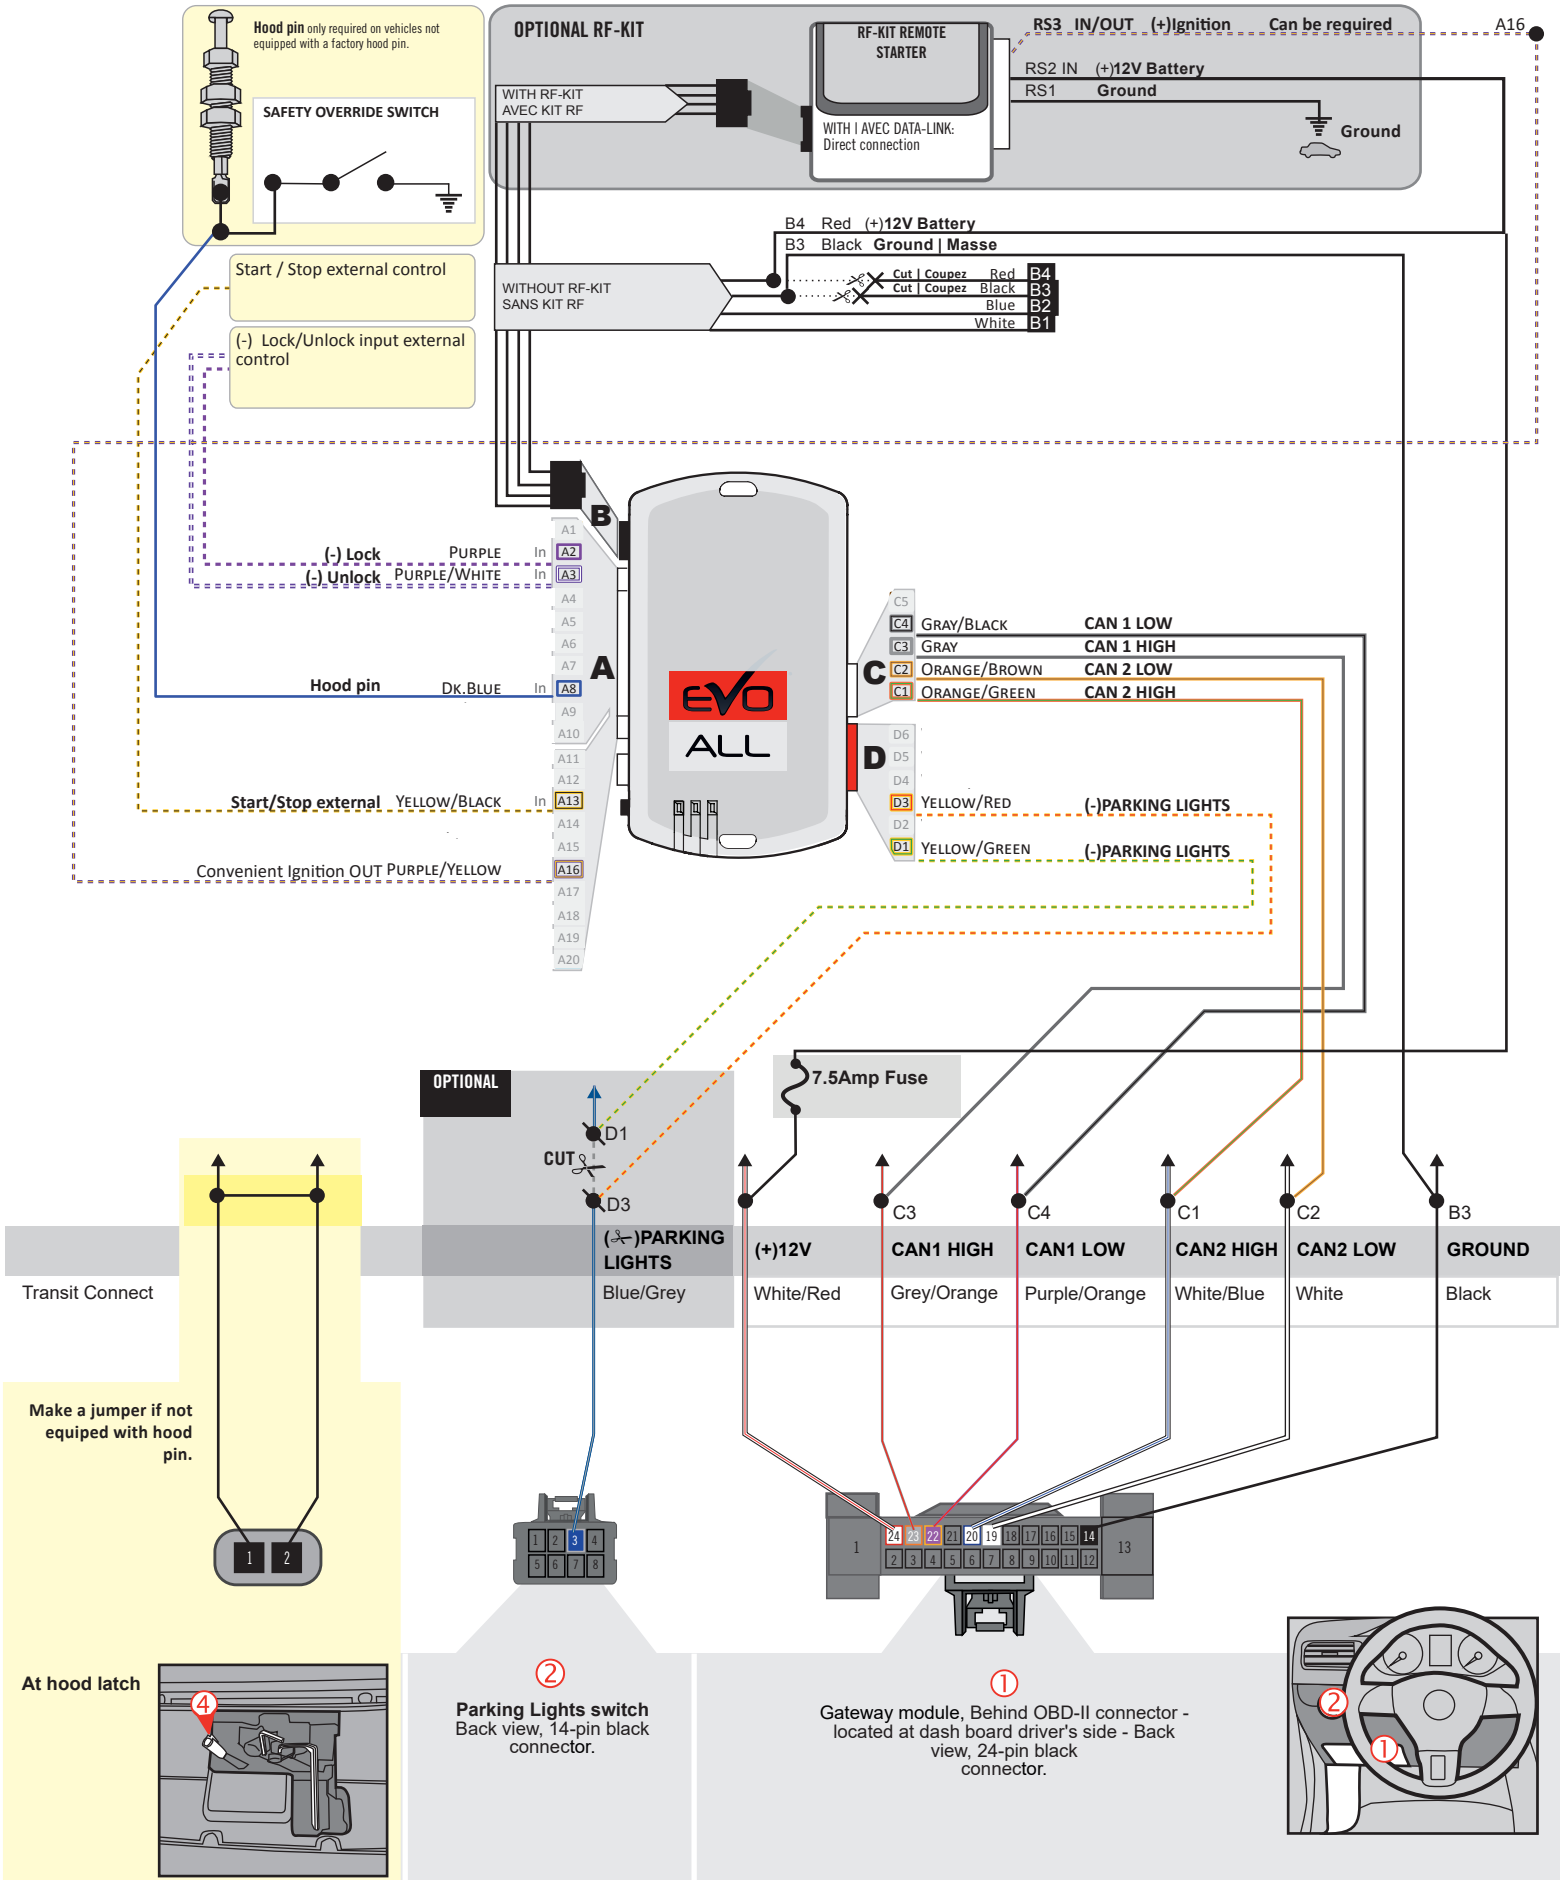

THAR-FOR3 | T-HARNESS - AUTOMATIC TRANSMISSION |

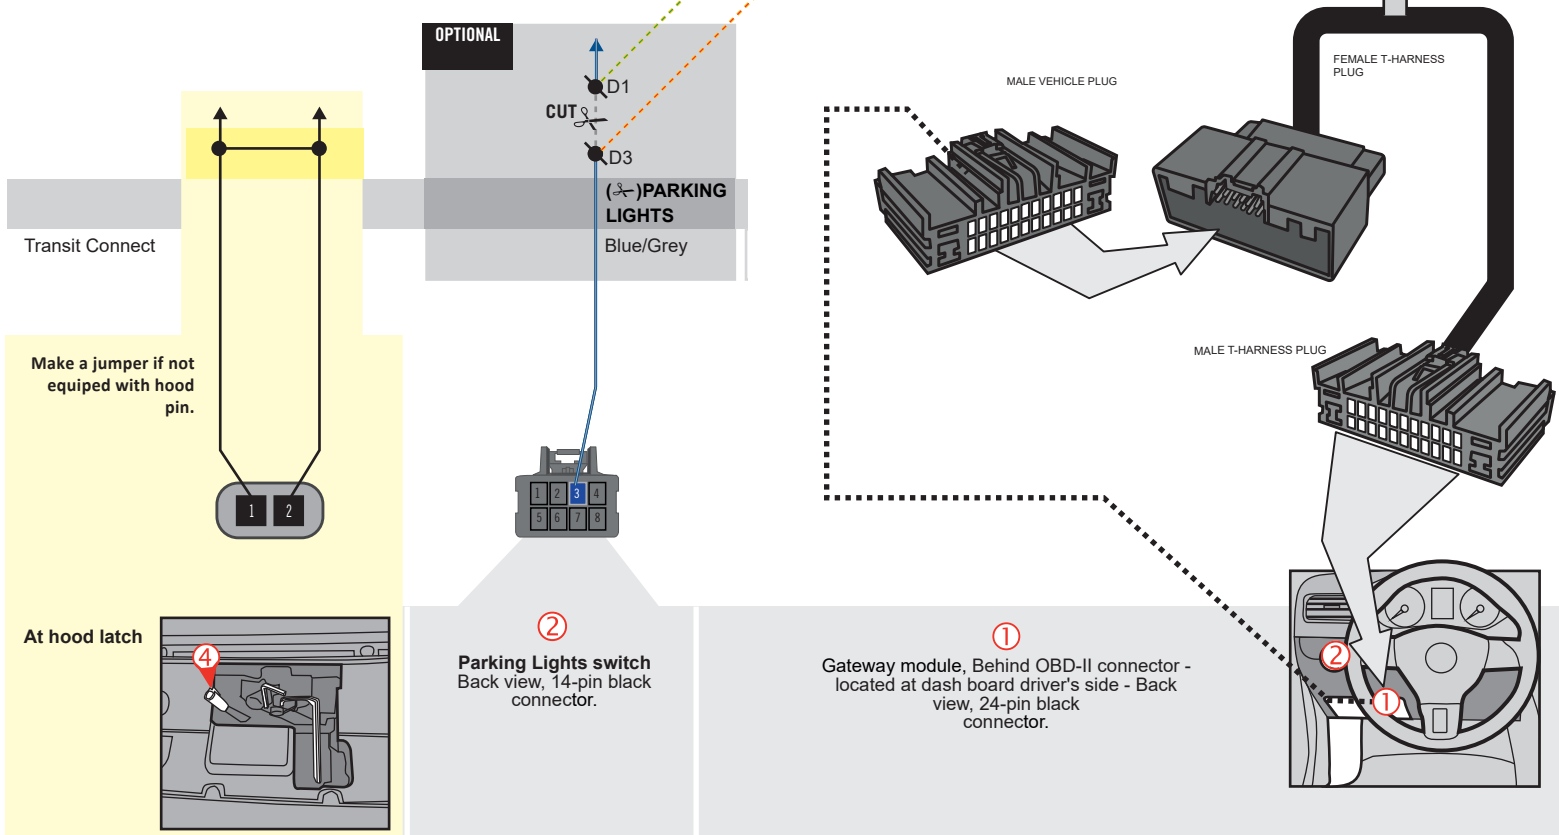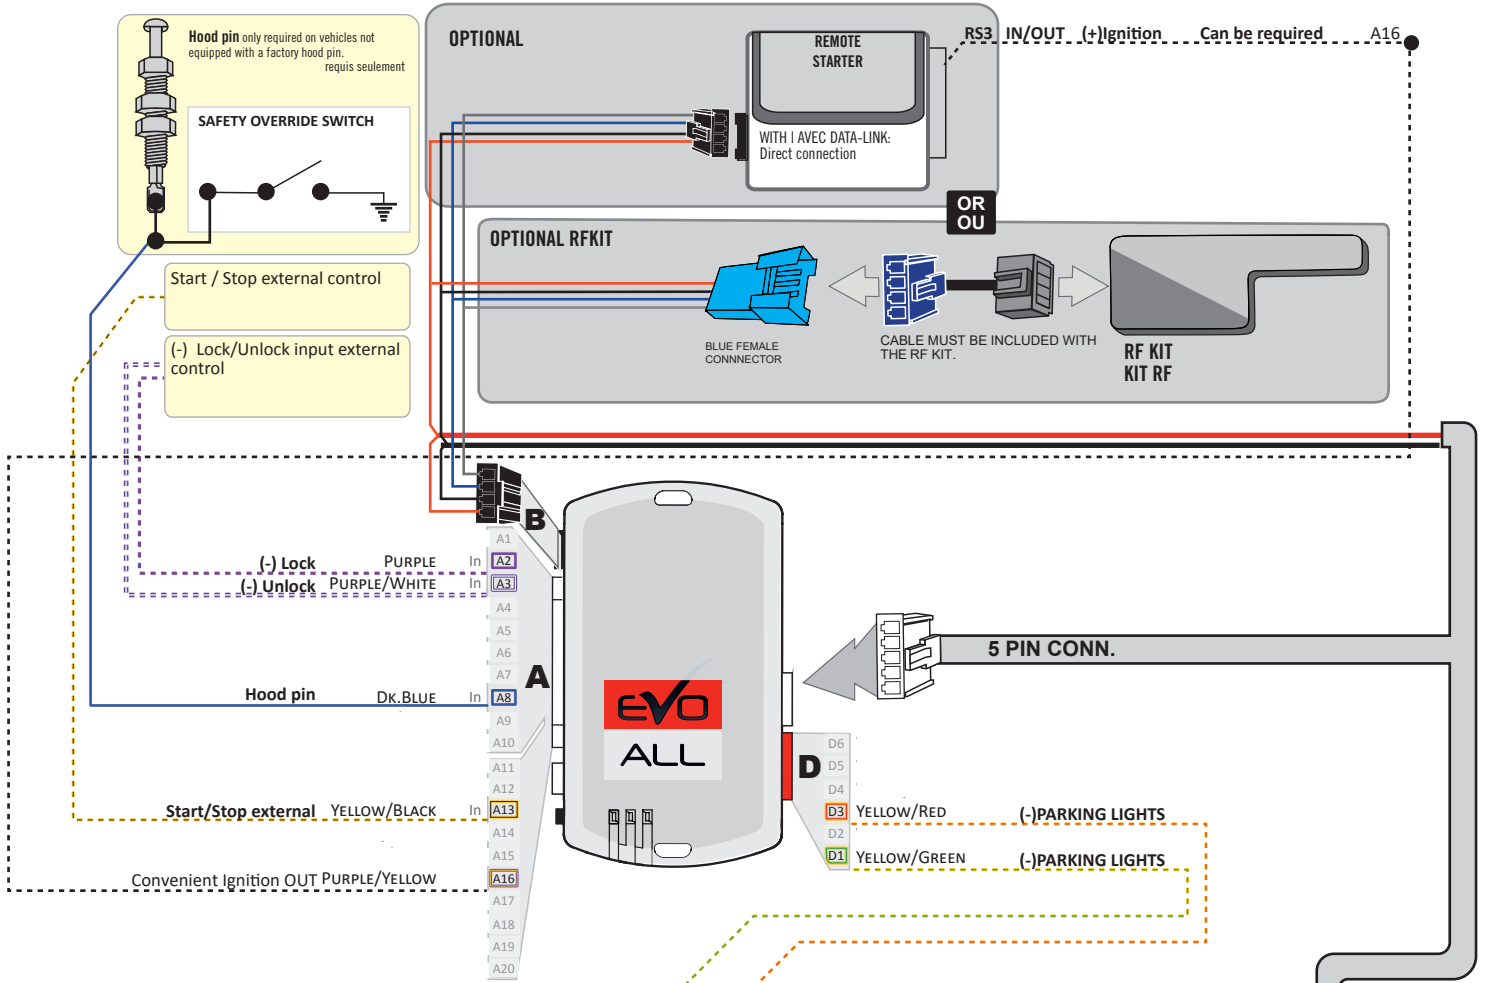



Parts required (not included)


- 1x FLASH LINK UPDATER, SOFTWARE | PROGRAMME
- 1x FLASH LINK MANAGER
- 1x Microsoft Windows Computer with Internet connection

OR
OU

- 1x FLASH LINK MOBILE
- 1x FLASH LINK MOBILE APP
- Smartphone Android or iOS with Internet connection (Internet provider charges may apply)

BEFORE PROGRAMMING SET THE UNIT OPTIONS AND SAVE.


1

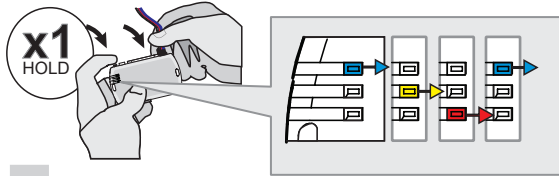

Press and hold the programming button:
Insert the 4-Pin (Data-Link) connector.


↳ The Blue, Red, Yellow and Blue & Red LEDs will alternatively illuminate.

2

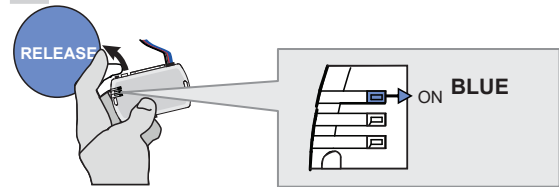


Release the programming button when the LED is BLUE.

 If the LED is not solid BLUE disconnect the 4-Pin connector (Data-Link) and go back to step 1.




3

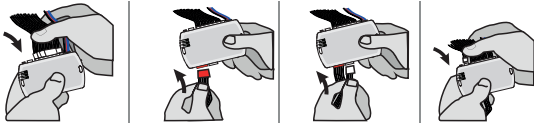

Insert the required remaining connectors.

4

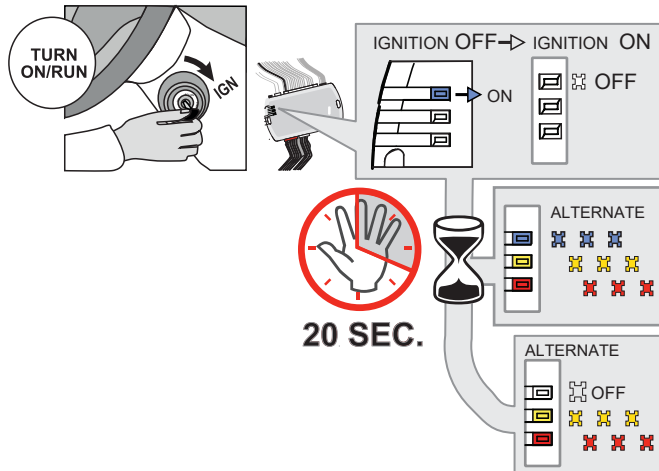

Turn the key to the Ignition ON/RUN position.

 
↳ The BLUE LED will turn OFF.

↳ The BLUE, YELLOW and RED LEDs will alternate.


Wait, at least 20 seconds, do not disconnect the modules or turn off the ignition.

↳ The RED and YELLOW LEDs will alternate.

Make sure that the DELs are flashing RED and YELLOW before continuing programming.



5

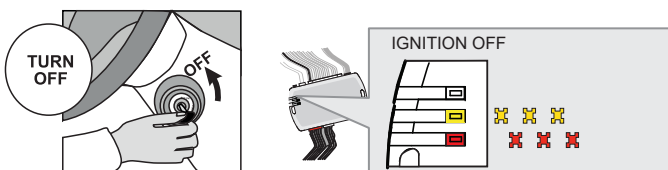


Turn the key to the OFF position.

↳ The RED and YELLOW LEDs alternate.


KEY BYPASS PROGRAMMING PROCEDURE 2/2 |

6

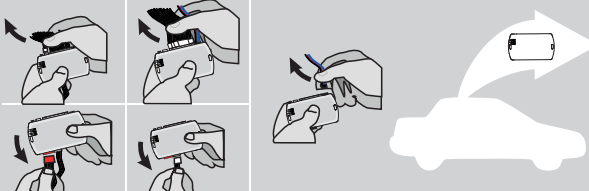

Disconnect all the connectors and after the Data-Link (4-pins) connector.

7



Microsoft Windows Computer with Internet connection*

FLASH LINK UPDATER* **FLASH LINK MANAGER***
SOFTWARE | PROGRAMME

OR


Smartphone* (Internet provider charges may apply)

VEHICLE'S OBDII CONNECTOR **FLASH LINK MOBILE***


Use the tool: FLASH LINK UPDATER or FLASH LINK MOBILE to visit the DCRYPTOR menu.

*Parts required (not included)

8

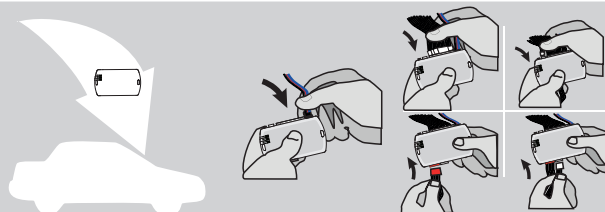


AFTER DCRYPTOR PROGRAMMING COMPLETED
Go back to the vehicle and reconnect the 4-Pin (Data-Link) connector and after, all the remaining connector.

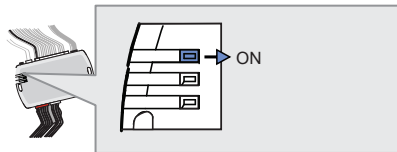

↳ The BLUE LED will turn ON.

9

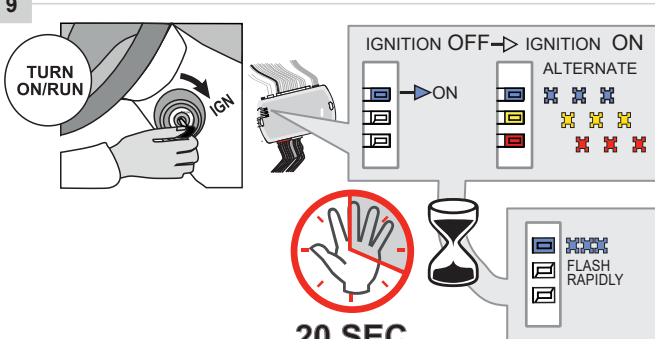

TURN ON/RUN

IGNITION OFF → IGNITION ON

ALTERNATE

↳ The RED and YELLOW LEDs will turn ON.


20 SEC.

FLASH RAPIDLY

Wait, at least 20 seconds, do not disconnect the modules or turn off the ignition.

↳ The BLUE LED will flash rapidly.

10

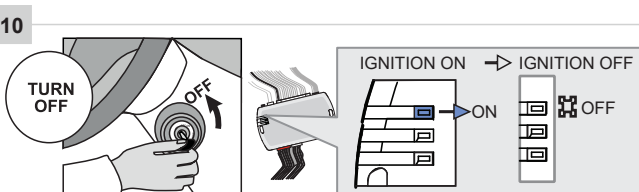

TURN OFF

IGNITION ON → IGNITION OFF


↳ The BLUE will turn OFF.




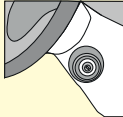
The module is now programmed.



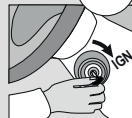














OPTIONAL RF-KIT PROGRAMMING |

PROGRAM BYPASS OPTION

	<p>Program bypass option: H2</p>	<p><input checked="" type="checkbox"/> Supported RF-KITS enable <input checked="" type="checkbox"/> H2 Fortin 2</p>
---	---	---

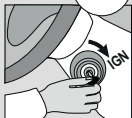OPTIONAL FORTIN RF KIT SERIES 4 OR SERIES 9 PROGRAMMING

The module must be programmed on the vehicle.   **MAKE SURE THE IGNITION KEY HAS BEEN IN THE OFF POSITION FOR AT LEAST 5 SECONDS.**
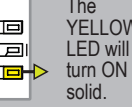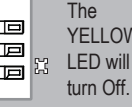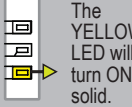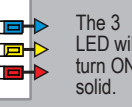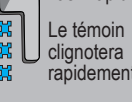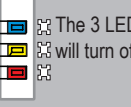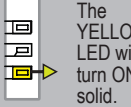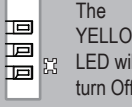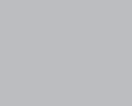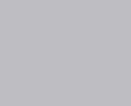
<p>1</p> <p>ON TURN ON/RUN</p> 	<p>2</p> <p>OFF TURN OFF</p> 	<p>3</p> <p>ON TURN ON/RUN</p> 	<p>4</p> <p>4X BRAKES</p> <p>x4 PRESS</p> 	<p>5</p> <p>ON EACH TRANSMITTER</p> <p>4 BUTTONS</p> <p>[-] PRESS AND RELEASE</p> <p>→ PRESS AND RELEASE</p> <p>🔒</p> <p>1 BUTTON</p> <p>PRESS APPROX. 12 SEC. AND WAIT FOR THE BLUE LED TO TURN OFF THEN BACK ON SOLID THEN RELEASE.</p>	<p>6</p> <p>OFF TURN OFF</p> 	<p>7</p> <p>ON TURN ON/RUN</p> 	<p>8</p> <p>OFF TURN OFF</p> 
<p>Turn the key to the ON/RUN position.</p>	<p>Turn the ignition to the OFF position.</p>	<p>Turn the key to the ON/RUN position.</p>	<p>Press and release the brake pedal four times.</p>	<p>The LED will turn off each time.</p>	<p>Turn the ignition to the OFF position.</p>	<p>Turn the key to the ON/RUN position and leave it ON for 5 sec.</p>	<p>Turn the ignition to the OFF position.</p>
 <p>The YELLOW LED will turn ON solid.</p>	 <p>The YELLOW LED will turn Off.</p>	 <p>The LED will turn ON solide.</p> <p>The YELLOW LED will turn ON solid.</p>	 <p>The LED will flash rapidly.</p> <p>The 3 LED will turn ON solid.</p>	 <p>The LED will turn off each time.</p> <p>The LED will flash rapidly.</p> <p>Le témoin clignotera rapidement.</p>	 <p>The LED will turn Off.</p>	 <p>The LED will turn Off.</p> <p>The YELLOW LED will turn ON solid.</p>	 <p>The LED will turn Off.</p> <p>The YELLOW LED will turn Off.</p>
 <p>The 3 LED will turn off each time.</p>					 <p>The 3 LED will turn off.</p>		



REMOTE STARTER FUNCTIONALITY |



All doors must be closed.



Remote start the vehicle.



Unlock the doors with the remote-starter remote or the OEM remote.



Insert and Turn the key to the Ignition ON/RUN position.



Press the brake pedal.



The vehicle can now be put in to gear and driven.


STANDALONE & THAR-FOR3 INSTALLATION


ADDENDUM - SUGGESTED WIRING CONFIGURATION



ONLY COMPATIBLE WITH AUTOMATIC TRANSMISSION VEHICLES.

Vehicle functions supported in this diagram (functional if equipped)

VEHICLE	YEARS	Vehicle functions supported in this diagram (functional if equipped)															
		Immobilizer bypass	Lock	Unlock	Arm	Disarm	Heated Seats**	Rear Defrost**	RAP Disable	Parking Lights***	Tachometer	Door Status	Trunk Status	Hood Status*	Hand-Brake Status	Foot-Brake Status	Active OEM Remote Start
 PUSH ART																	
LINCOLN																	
Corsair	Push-to-Start 2020	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•

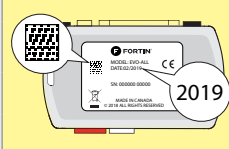

COMPATIBLE MODULE REQUIRED:

QR CODE ON THE LABEL
MANUFACTURED AFTER: 2019

FIRMWARE VERSION
58.[02]
MINIMUM

To add the firmware version and the options, use the **FLASH LINK UPDATER** or **FLASH LINK MOBILE** tool, sold separately.



Program bypass option:

UNIT OPTION

DESCRIPTION

C1

OEM Remote status (Lock/Unlock) monitoring

D6

Push-to-Start

IF THE VEHICLE IS NOT EQUIPPED WITH FUNCTIONAL HOOD PIN:

A11

OFF

Hood trigger (Output Status).

NOTES

The vehicles OEM remote and SmartKey are still operable during remote start.

**Heated seats The heated seats and rear defrost activate automatically when it cold.
**Rear Defrost

***Parking Lights The parking Lights at remote start only.

MANDATORY INSTALL

*HOOD PIN



HOOD STATUS: THE HOOD PIN SWITCH MUST BE INSTALLED IF THE VEHICLE CAN BE REMOTE STARTED WITH THE HOOD OPEN, SET FUNCTION A11 TO OFF.

A11

OFF

Notice: the installation of safety elements are mandatory. The hood pin is an essential security element and must be installed.

THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.

PARTS REQUIRED (NOT INCLUDED) |

1x **FLASH LINK UPDATER,**
1x **FLASH LINK MANAGER**
SOFTWARE | PROGRAMME
1x Microsoft Windows Computer with Internet connection

OR

1x **FLASH LINK MOBILE**
1x **FLASH LINK MOBILE APP**
Smartphone *Android* or *iOS* with Internet connection (*provider charges may apply*).

MANDATORY

HOOD PIN
CONTACT DE CAPOT

REMOTE START SAFETY OVERRIDE SWITCH
VALET SWITCH

Part #: RSPB available, Sold separately.

Notice: the installation of safety elements are mandatory. The hood pin and the valet switch are essential security elements and must be installed.

STAND ALONE CONFIGURATION |

	Program bypass option	UNIT OPTION	DESCRIPTION
	OEM Remote Stand Alone Remote Starter:	D1.10	By default, LOCK, LOCK, LOCK Par défaut, VERROUILLE, VERROUILLE, VERROUILLE
		D1.1	
	Program bypass option with oem remote:	C1	OEM Remote Monitoring
	Program bypass option with RF KIT antenna:	H1 to H6	Supported RF Kits and select RF Kit
	Program bypass option Vehicle hybrid only:	D4	Hybrid mode (Vehicle hybrid only)

REMOTE STARTER FUNCTIONALITY |

All doors must be closed.

3X

Press the OEM remote's Lock button 3x to remote-start (or remote-stop) the vehicle.

START

The vehicle will START.

REMOTE STARTER DIAGNOSTICS

MODULE RED LED

x2 flash : Brake ON

x3 flash : No tach

x4 flash : Ignition before start

x5 flash : Hood Open

REMOTE STARTER WARNING CARD |

CUT THIS WARNING CARD AND STICK IT ON A VISIBLE PLACE:
or use the package **RSPB**, Sold separately.

WARNING

REMOTE STARTER

THE VEHICLE CAN BE STARTED BY EITHER: PRESSING THE LOCK BUTTON ON THE OEM REMOTE 3 TIMES CONSECUTIVELY OR BY A SMARTPHONE. **TURN ON** THE SAFETY SWITCH LOCATED UNDER THE DASHBOARD BEFORE WORKING ON THE VEHICLE.

DESCRIPTION | DESCRIPTION

	Parts required (Not included)	PAGE
--	-------------------------------	------

WIRE TO WIRE DIAGRAM

AUTOMATIC TRANSMISSION	1x 7.5 Amp. fuse	Page 3
------------------------	------------------	--------


THARNES DIAGRAM

THARNES THAR-FOR3 AUTOMATIC TRANSMISSION	1x THAR-FOR3	Page 4
--	--------------	--------




CORSAIR

① Gateway module, Behind OBD-II connector

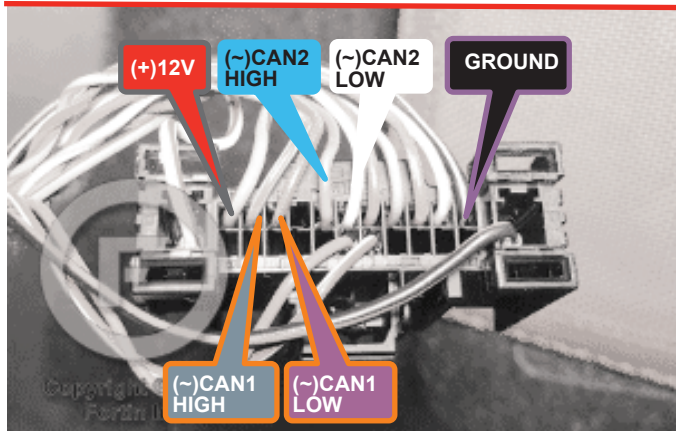


AUTOMATIC TRANSMISSION WIRING CONNECTION

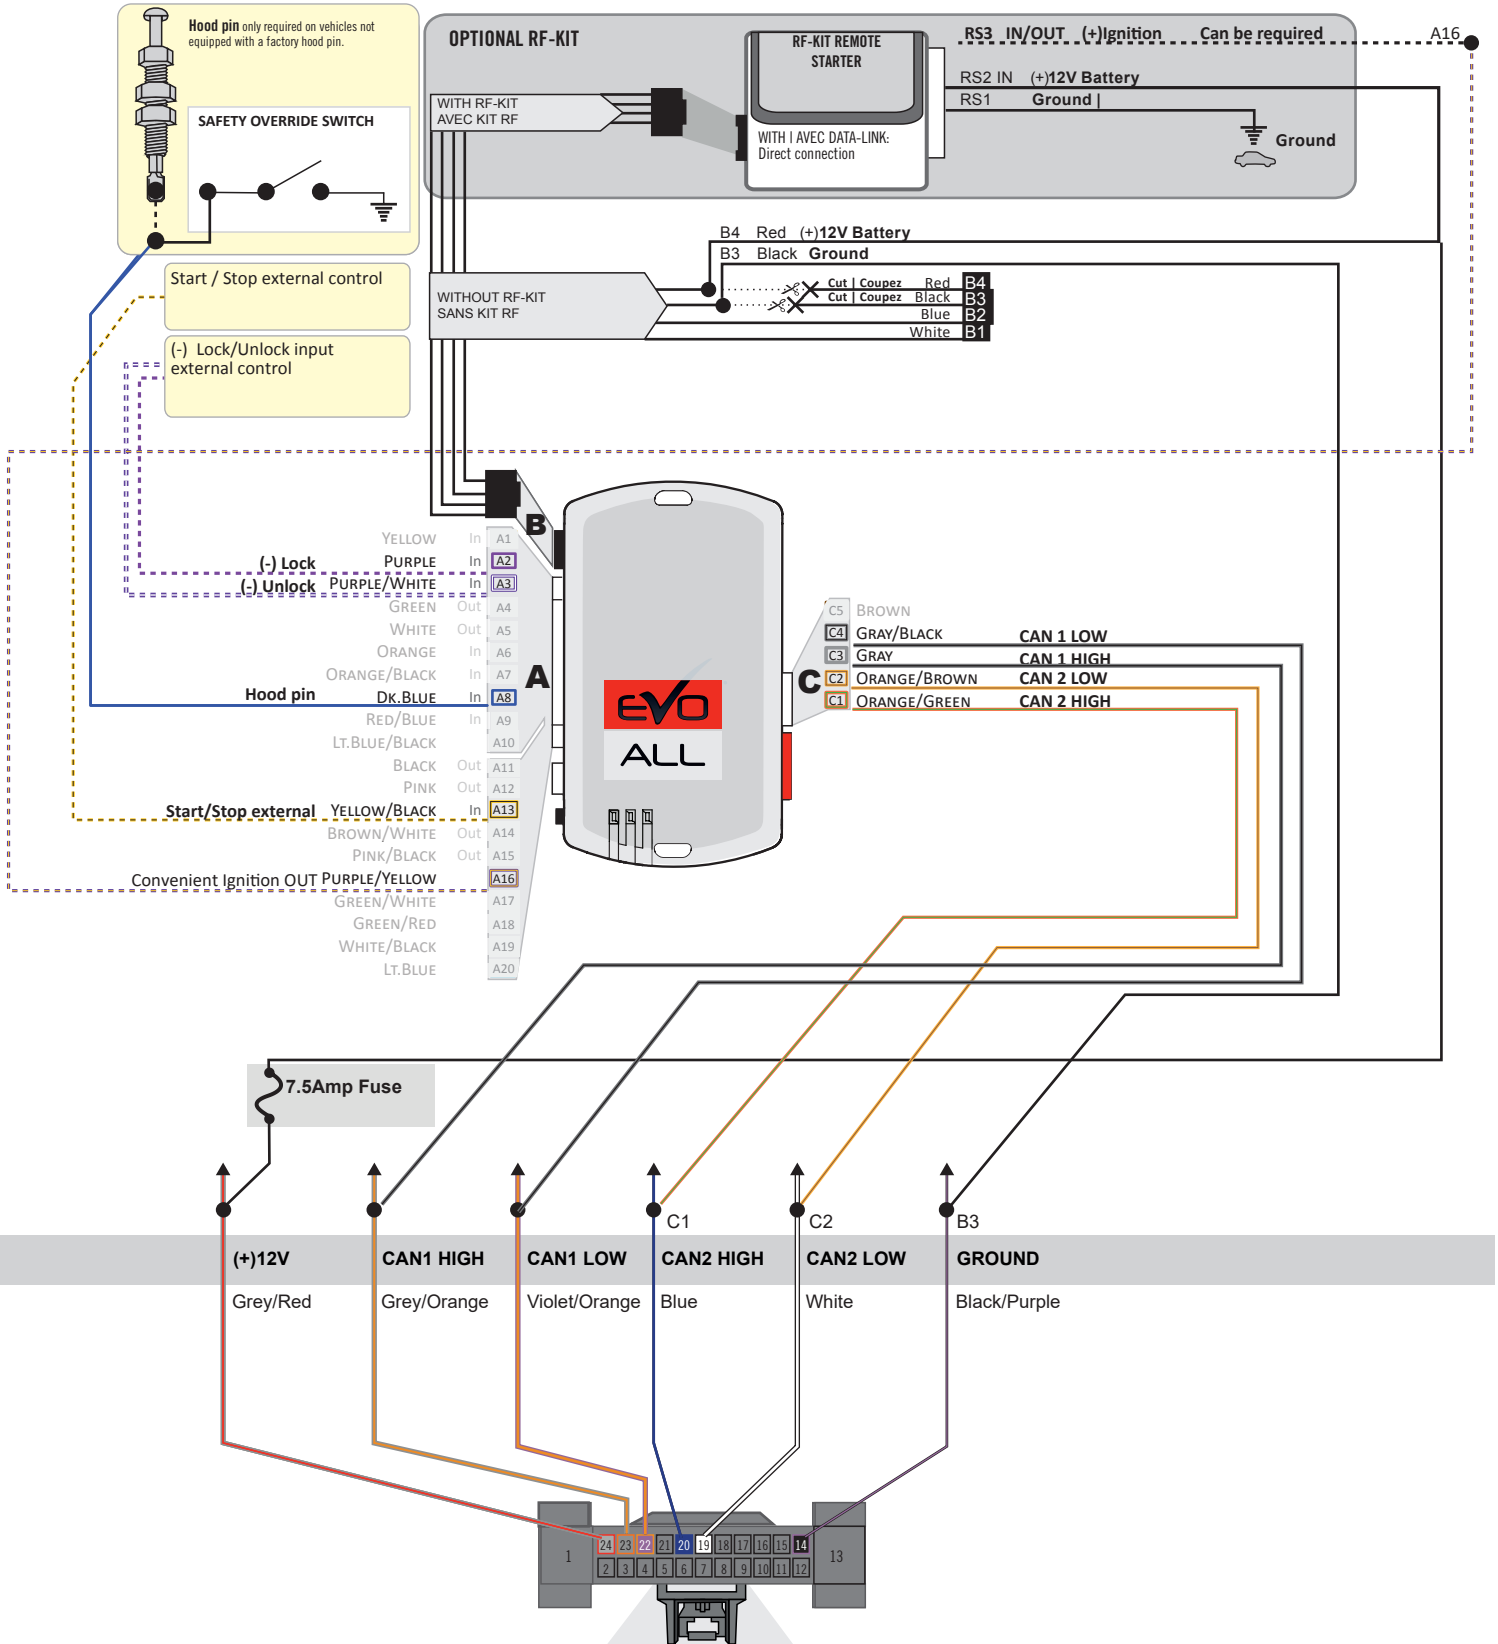



CORSAIR

①


Gateway module, Connector Behind OBD-II connector - located at dash board driver's side Back view, 24-pin black connector.

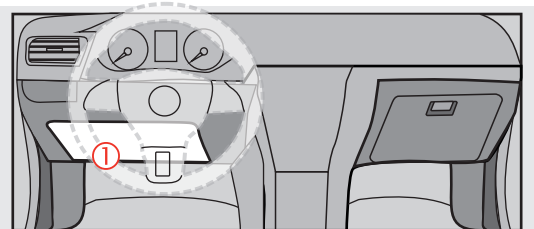

THAR-FOR3 | T-HARNESS - AUTOMATIC TRANSMISSION

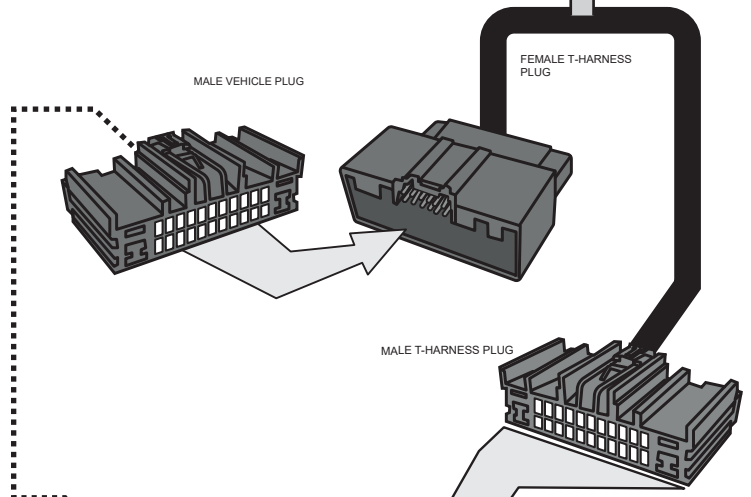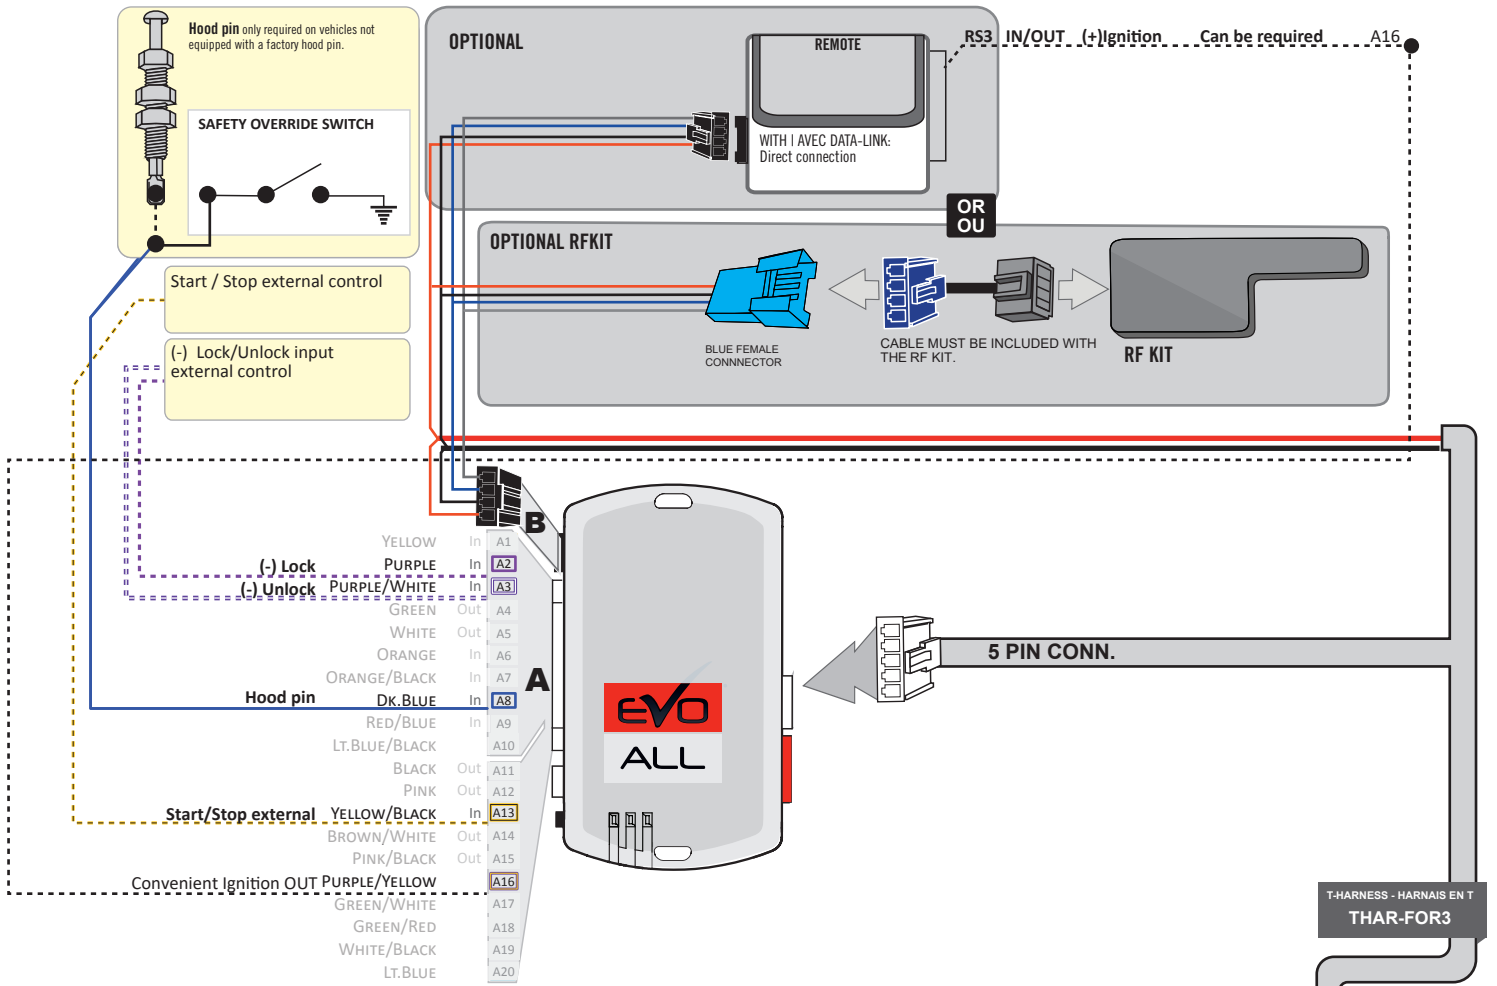

① Gateway module, Connector Behind OBD-II connector - located at dash board driver's side Back view, 24-pin black connector.

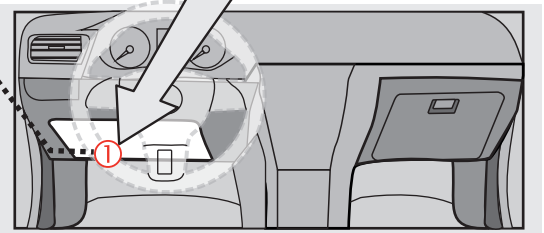

DCRYPTOR PROGRAMMING PROCEDURE




- Parts required (not included)**
- 1x **FLASH LINK UPDATER,**
 - 1x **FLASH LINK MANAGER**
SOFTWARE | PROGRAMME
 - 1x Microsoft Windows Computer with Internet connection

OR

- 1x **FLASH LINK MOBILE**
- 1x **FLASH LINK MOBILE APP**
Smartphone Android or iOS with Internet connection
(Internet provider charges may apply)

BEFORE PROGRAMMING SET THE UNIT OPTIONS AND SAVE.


1

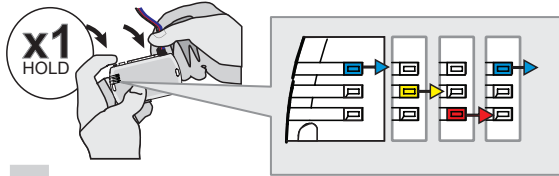

Press and hold the programming button:
Insert the 4-Pin (Data-Link) connector.

↳ The Blue, Red, Yellow and Blue & Red LEDs will alternatively illuminate.


2

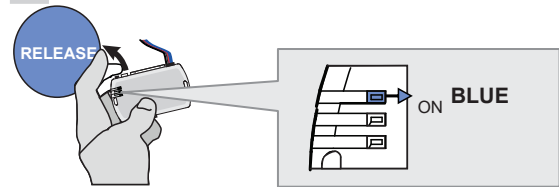

Release the programming button when the LED is BLUE.


If the LED is not solid BLUE disconnect the 4-Pin connector (Data-Link) and go back to step 1.

3

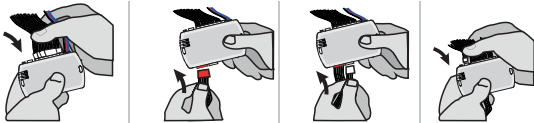

Insert the required remaining connectors.

4

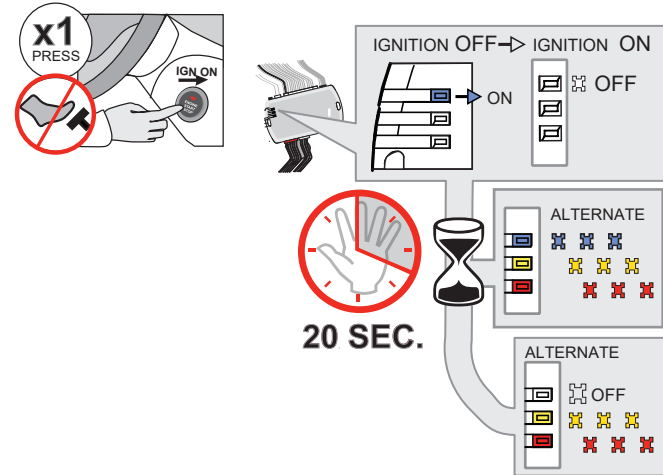

Do not press the brake pedal.
Press the Push-to-Start button once to turn on the ignition.

↳ The BLUE LED will turn OFF.


↳ The BLUE, YELLOW and RED LEDs will alternate.

Wait, at least 20 seconds, do not disconnect the modules or turn off the ignition.

↳ The RED and YELLOW LEDs will alternate.

Make sure that the DELs are flashing RED and YELLOW before continuing programming.

5

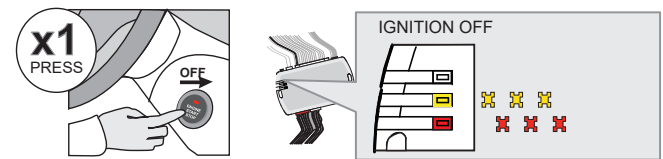

Press the Push-to-Start button once to turn off the ignition.

↳ The RED and YELLOW LEDs alternate.

KEY BYPASS PROGRAMMING PROCEDURE 2/2

6

Disconnect all the connectors and after the Data-Link (4-pins) connector.

7

Microsoft Windows Computer with Internet connection*

Use the tool: **FLASH LINK UPDATER** or **FLASH LINK MOBILE** to visit the DCryptor menu.


OR

Smartphone* (Internet provider charges may apply)

*Parts required (not included)

8

AFTER DCRYPTOR PROGRAMMING COMPLETED
Go back to the vehicle and **reconnect** the 4-Pin (Data-Link) connector and after, all the remaining connector.

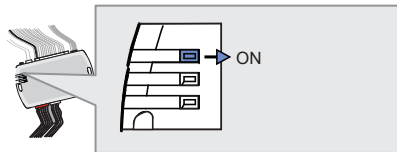

↳ The BLUE LED will turn ON.

9

x1 PRESS

IGNITION OFF → IGNITION ON

Do not press the brake pedal. **Press** the Push-to-Start button once to turn on the ignition.

↳ The RED and YELLOW LEDs will turn ON.

20 SEC.

↳ The BLUE LED will flash rapidly.

Wait, at least 20 seconds, do not disconnect the modules or turn off the ignition.

10

x1 PRESS

IGNITION ON → IGNITION OFF

↳ The BLUE will turn OFF.

The module is now programmed.


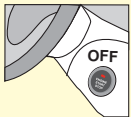
OPTIONAL RF-KIT PROGRAMMING

PROGRAM BYPASS OPTION








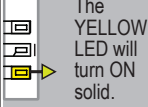
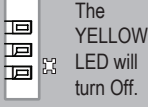
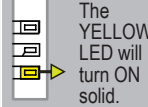
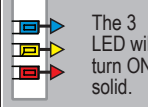

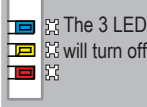
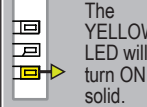
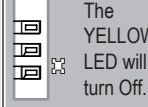
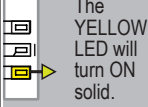
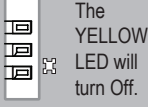
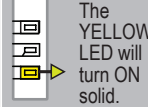
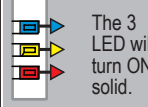

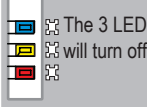
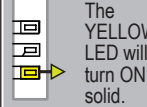
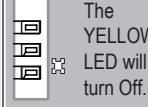
	<p>Program bypass option:</p>	<p>H2</p>	<p><input checked="" type="checkbox"/> Supported RF-KITS enable <input checked="" type="checkbox"/> H2 Fortin 2</p>
---	-------------------------------	------------------	---

OPTIONAL FORTIN RF KIT SERIES 4 OR SERIES 9 PROGRAMMING

The module must be programmed on the vehicle.





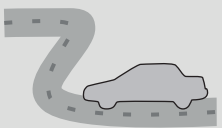



MAKE SURE THE IGNITION KEY HAS BEEN IN THE OFF POSITION FOR AT LEAST 5 SECONDS.

<p>1</p> <p>ON x1 PRESS</p>  <p>Do not press the brake pedal. Press the Push-to-Start button once to turn on the ignition.</p>	<p>2</p> <p>OFF x1 PRESS</p>  <p>Press the Push-to-Start button once to turn off the ignition.</p>	<p>3</p> <p>ON x1 PRESS</p>  <p>Do not press the brake pedal. Press the Push-to-Start button once to turn on the ignition.</p>	<p>4</p> <p>4X BRAKES</p> <p>x4 PRESS</p>  <p>Press and release the brake pedal four times.</p>	<p>5</p> <p>ON EACH TRANSMITTER</p> <p>4 BUTTONS</p> <p>[-] PRESS AND RELEASE</p> <p>→ PRESS AND RELEASE</p> <p>LOCK PRESS AND RELEASE</p> <p>1 BUTTON</p> <p>PRESS APPROX. 12 SEC. AND WAIT FOR THE BLUE LED TO TURN OFF THEN BACK ON SOLID THEN RELEASE.</p>	<p>6</p> <p>OFF x1 PRESS</p>  <p>Press the Push-to-Start button once to turn off the ignition.</p>	<p>7</p> <p>ON x1 PRESS</p>  <p>Do not press the brake pedal. Press the Push-to-Start button once to turn on the ignition and leave it ON for 5 sec..</p>	<p>8</p> <p>OFF x1 PRESS</p>  <p>Press the Push-to-Start button once to turn off the ignition.</p>
 <p>The YELLOW LED will turn ON solid.</p>	 <p>The YELLOW LED will turn Off.</p>	 <p>The YELLOW LED will turn ON solid.</p>	 <p>The LED will turn off each time.</p>	 <p>The LED will flash rapidly.</p>	 <p>The LED will turn off each time.</p>	 <p>The LED will turn Off.</p>	 <p>The LED will turn Off.</p>
 <p>The YELLOW LED will turn ON solid.</p>	 <p>The YELLOW LED will turn Off.</p>	 <p>The YELLOW LED will turn ON solid.</p>	 <p>The LED will flash rapidly.</p>	 <p>The LED will flash rapidly.</p>	 <p>The LED will turn off each time.</p>	 <p>The YELLOW LED will turn ON solid.</p>	 <p>The YELLOW LED will turn Off.</p>



REMOTE STARTER FUNCTIONALITY

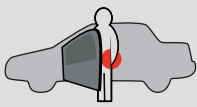 <p>Start</p> <p>All doors must be closed.</p> <p>Remote start the vehicle.</p>	 <p>UNLOCK</p> <p>Unlock the doors with either:</p> <ul style="list-style-type: none"> • The OEM remote • The remote-starter remote • Or the proximity remote 	 <p>Enter the vehicle with the SMART-KEY.</p>	 <p>DO NOT PRESS THE BRAKE PEDAL.</p> <p>Press and release the Push-to-Start button once.</p>	 <p>Press the brake pedal. The vehicle can now be put in to gear and driven.</p> <p>If the Smart-Key is not detected the vehicle will shut down.</p>
--	---	--	---	---

THAR-FOR3 THARNNESS INSTALLATION

ADDENDUM - SUGGESTED WIRING CONFIGURATION



ONLY COMPATIBLE WITH AUTOMATIC TRANSMISSION VEHICLES.



Vehicle functions supported in this diagram (functional if equipped)

VEHICLE	YEARS	Immobilizer bypass	T-Harness	Lock	Unlock	Arm	Disarm	RAP Disable	Parking Lights	Tachometer	Door Status	Trunk Status	Hood Status*	Hand-Brake Status	Foot-Brake Status	Active OEM Remote Start
FORD EcoSport	Key 2018-2020	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•



FIRMWARE VERSION

4.02

ONLY - SEULEMENT

To add the firmware version and the options, use the **FLASH LINK UPDATER** or **FLASH LINK MOBILE** tool, sold separately.



Program bypass option:

UNIT OPTION

C1

DESCRIPTION

OEM Remote status (Lock/Unlock) monitoring

IF THE VEHICLE IS NOT EQUIPPED WITH FUNCTIONAL HOOD PIN:

A11

OFF

Hood trigger (Output Status).



Parts required (Not included)

1x THAR-FOR3

NOTES

The vehicles OEM remote and SmartKey are still operable during remote start.



The vehicle must be equipped with the OEM remote with the door locks.

MANDATORY INSTALL

*HOOD PIN



HOOD STATUS: THE HOOD PIN SWITCH MUST BE INSTALLED IF THE VEHICLE CAN BE REMOTE STARTED WITH THE HOOD OPEN, SET FUNCTION **A11** TO OFF.

A11



OFF

Notice: the installation of safety elements are mandatory. The hood pin is an essential security element and must be installed.



THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.

DESCRIPTION




③ Behind glove box

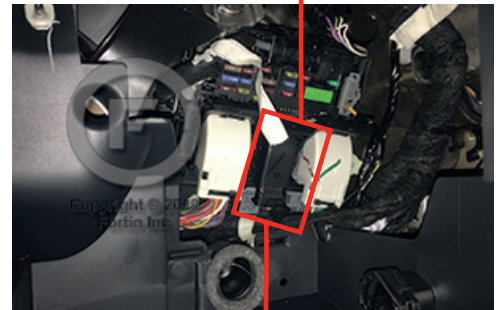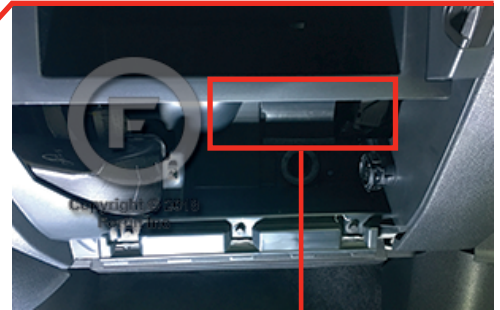

① Gateway module, Behind OBD-II connector

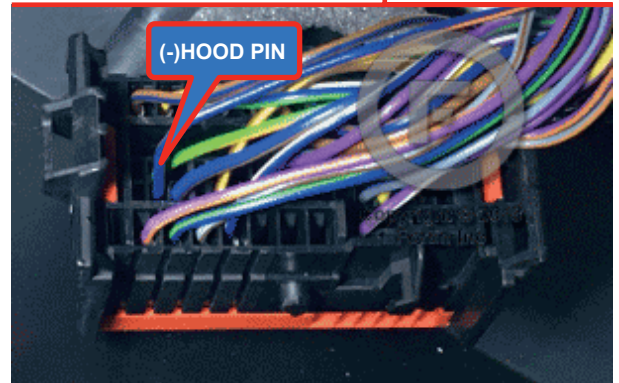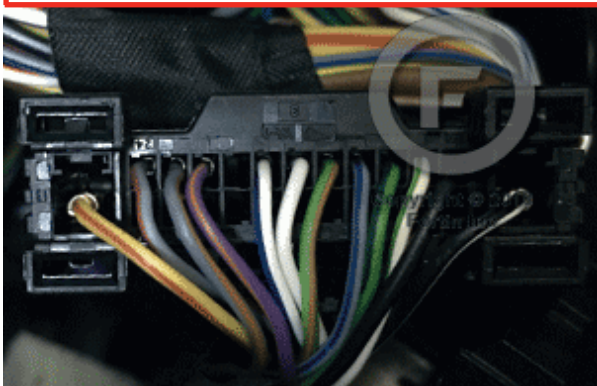


AUTOMATIC TRANSMISSION WIRING CONNECTION

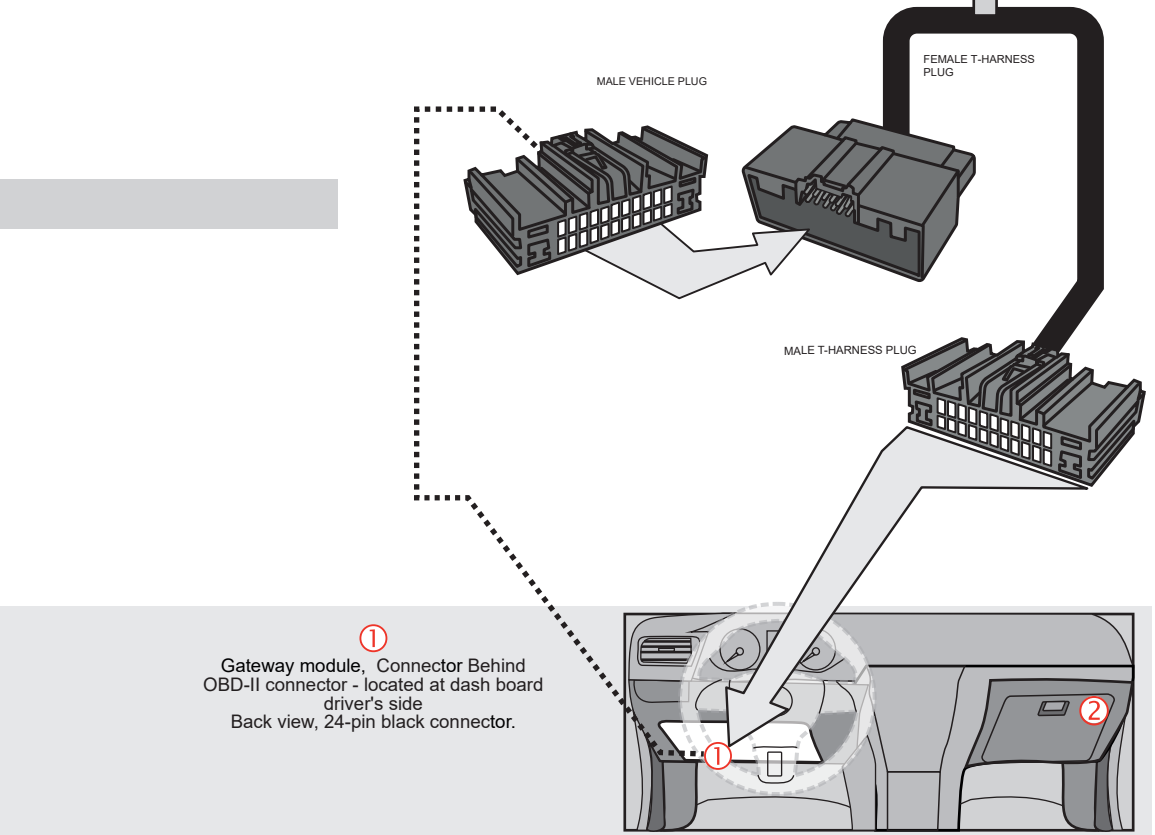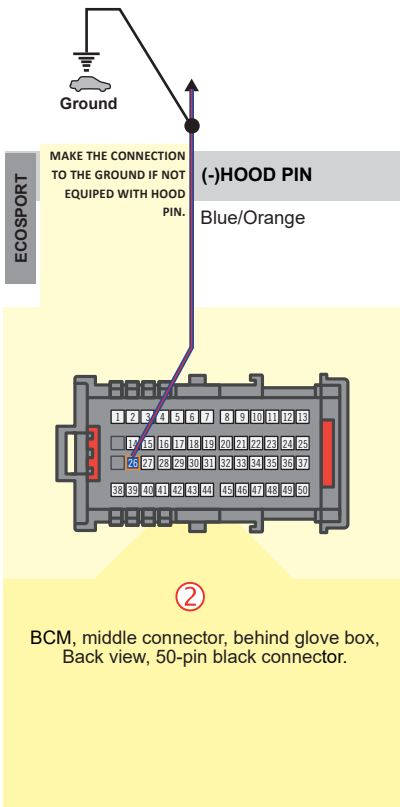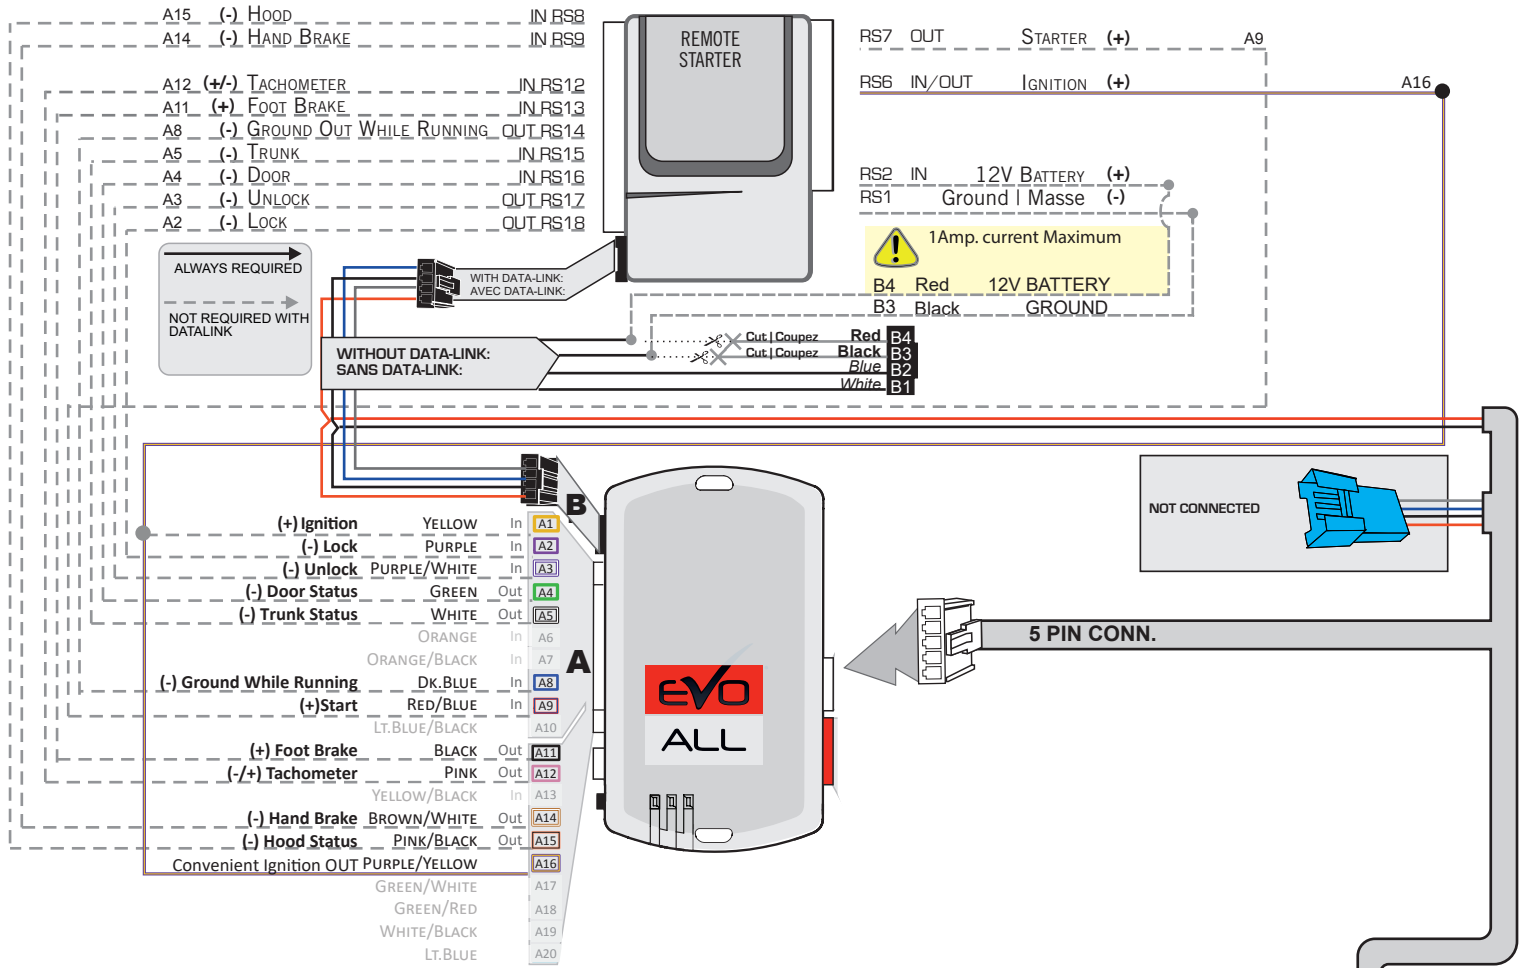

KEY BYPASS PROGRAMMING PROCEDURE 1/2


1

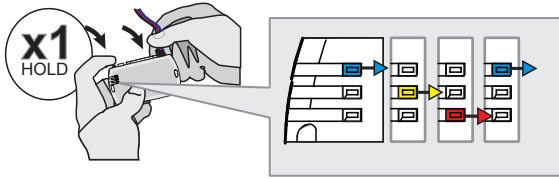

Press and hold the programming button:
Insert the 4-Pin (Data-Link) connector.


↳ The Blue, Red, Yellow and Blue & Red LEDs will alternatively illuminate.

2

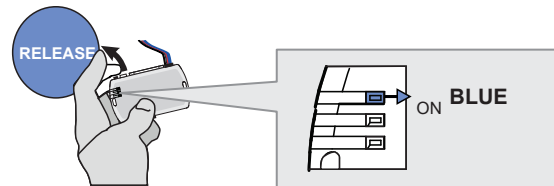


Release the programming button when the LED is BLUE.

 If the LED is not solid BLUE disconnect the 4-Pin connector (Data-Link) and go back to step 1.




3

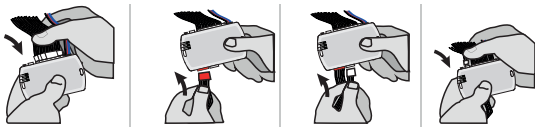

Insert the required remaining connectors.

4

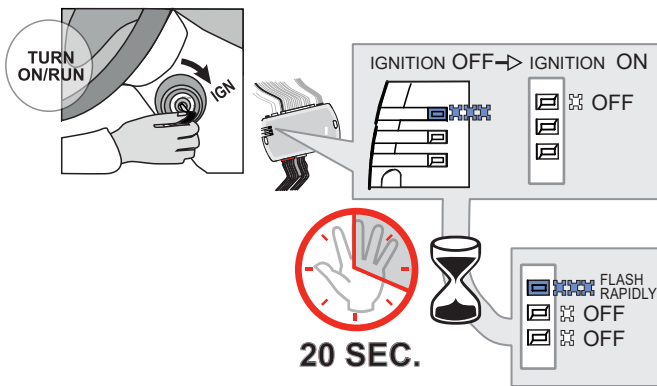


Turn the key to the Ignition ON/RUN position.

↳ The BLUE LED will turn OFF.

↳ The BLUE LED will flash rapidly.


5

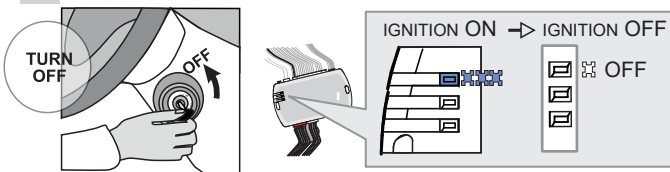

Turn the key to the OFF position.

↳ The BLUE LED will turn off.


6

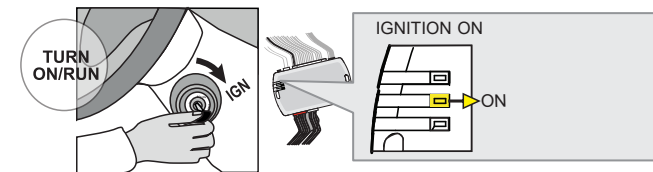

Turn the key to the Ignition ON/RUN position.

↳ The YELLOW LED will turn ON.


7

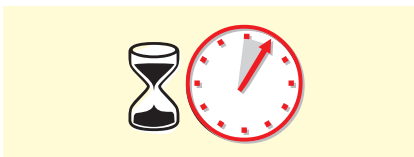

Wait 5 seconds.

KEY BYPASS PROGRAMMING PROCEDURE 2/2

8

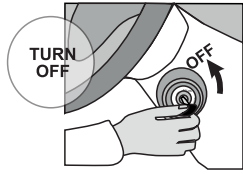

Turn the key to the OFF position.



The module is now programmed.

REMOTE STARTER FUNCTIONALITY



All doors must be closed.



Remote start the vehicle.



Unlock the doors with the remote-starter remote or the OEM remote.



Insert and Turn the key to the Ignition ON/RUN position.



Press the brake pedal.



The vehicle can now be put in to gear and driven.

THAR-FOR3 THARNNESS INSTALLATION

ADDENDUM - SUGGESTED WIRING CONFIGURATION


ONLY COMPATIBLE WITH AUTOMATIC TRANSMISSION VEHICLES.

Vehicle functions supported in this diagram (functional if equipped)

VEHICLE	YEARS	Immobilizer bypass	T-Harness	Lock	Unlock	Arm	Disarm	RAP Disable	Parking Lights	Tachometer	Door Status	Trunk Status	Hood Status*	Hand-Brake Status	Foot-Brake Status	Active OEM Remote Start
FORD EcoSport	<i>Push-to-Start</i> 2018-2020	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•



FIRMWARE VERSION

4.02

ONLY - SEULEMENT

 To add the firmware version and the options, use the **FLASH LINK UPDATER** or **FLASH LINK MOBILE** tool, sold separately.

Program bypass option:
UNIT OPTION
DESCRIPTION
C1

OEM Remote status (Lock/Unlock) monitoring

D6

Push-to-Start

IF THE VEHICLE IS NOT EQUIPPED WITH FUNCTIONAL HOOD PIN:
A11
OFF

Hood trigger (Output Status).


Parts required (Not included)

1x THAR-FOR3

NOTES

The vehicles OEM remote and SmartKey are still operable during remote start.

MANDATORY INSTALL
***HOOD PIN**



HOOD STATUS: THE HOOD PIN SWITCH MUST BE INSTALLED IF THE VEHICLE CAN BE REMOTE STARTED WITH THE HOOD OPEN, SET FUNCTION **A11** TO OFF.

A11
OFF
Notice: the installation of safety elements are mandatory. The hood pin is an essential security element and must be installed.



THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.

DESCRIPTION




③ Behind glove box

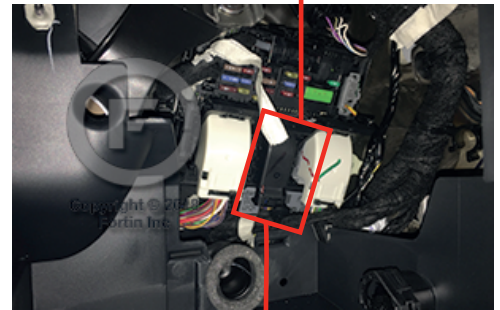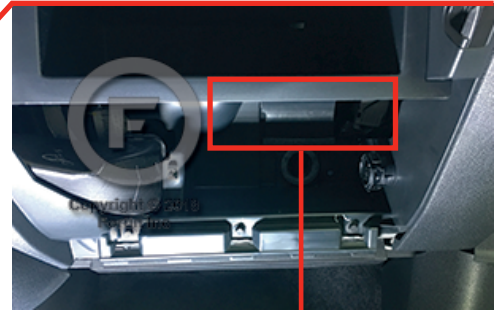

① Gateway module, Behind OBD-II connector

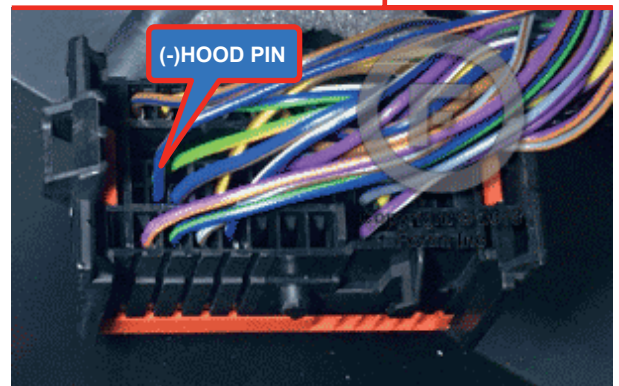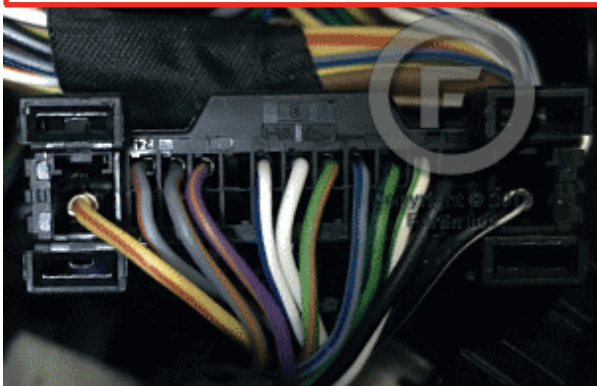


AUTOMATIC TRANSMISSION WIRING CONNECTION

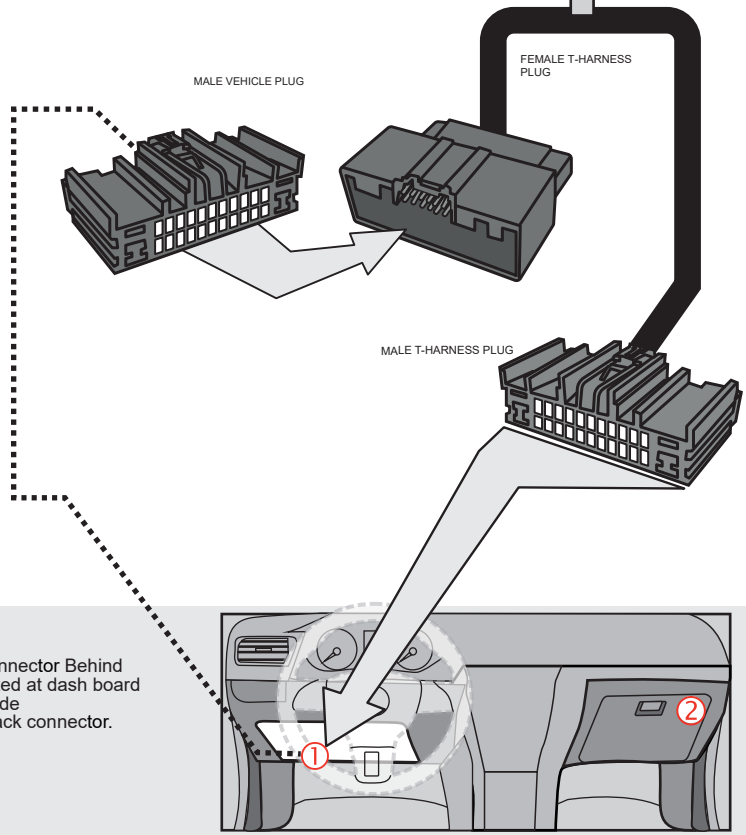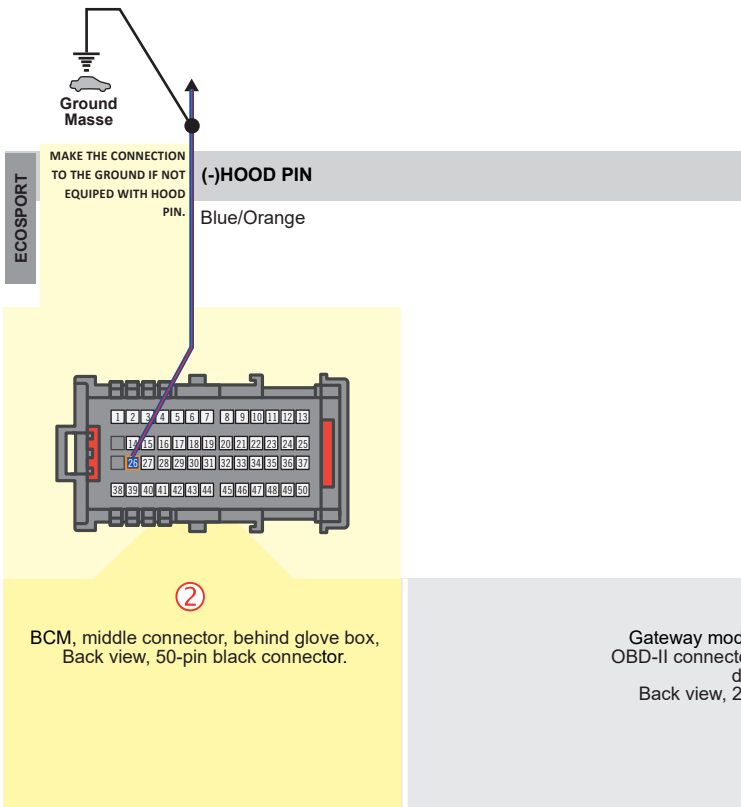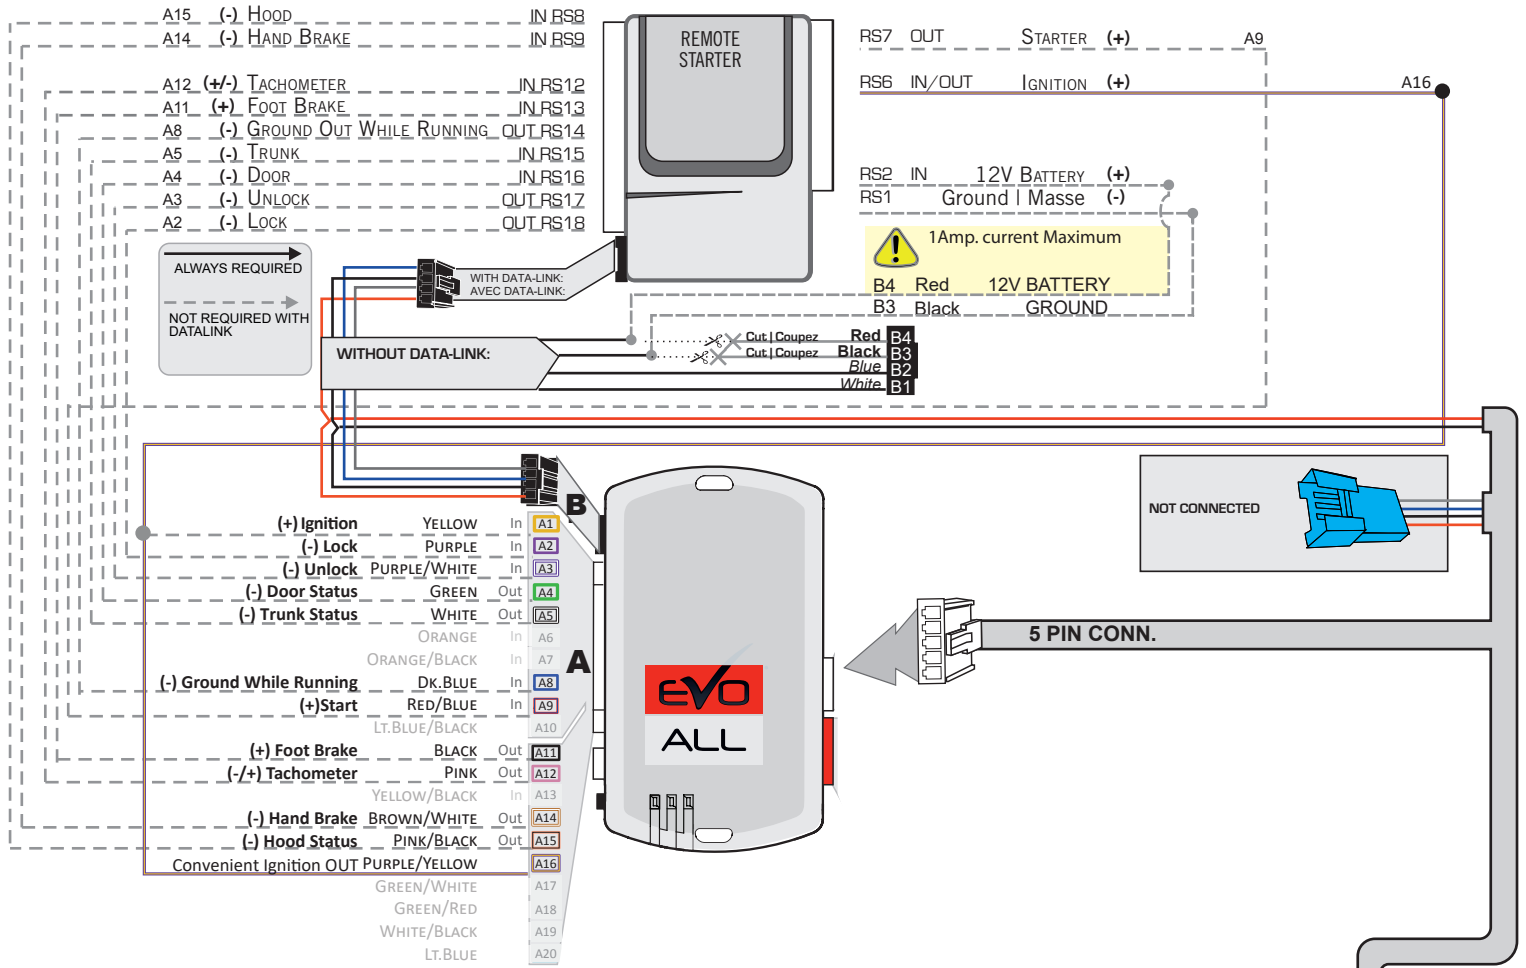

KEY BYPASS PROGRAMMING PROCEDURE 1/2


1

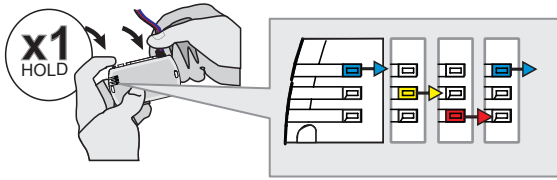

Press and hold the programming button:
Insert the 4-Pin (Data-Link) connector.


↳ The Blue, Red, Yellow and Blue & Red LEDs will alternatively illuminate.

2

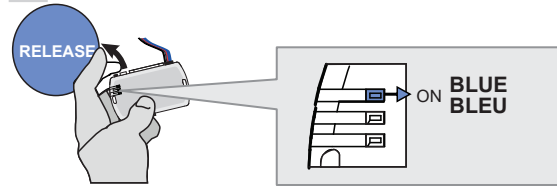


Release the programming button when the LED is BLUE.

If the LED is not solid BLUE disconnect the 4-Pin connector (Data-Link) and go back to step 1.

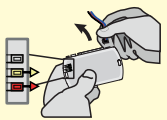


3

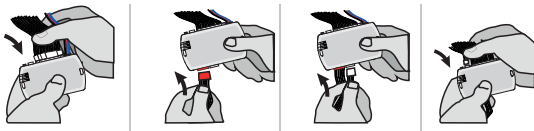

Insert the required remaining connectors.

4

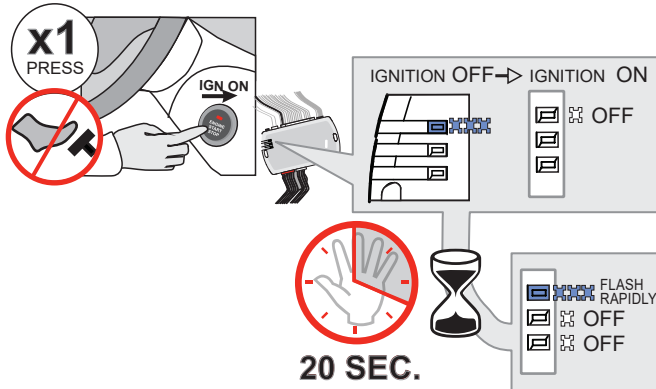


Do not press the brake pedal.
Press the Push-to-Start button once to turn on the ignition.

↳ The BLUE LED will turn OFF.

↳ The BLUE LED will flash rapidly.


5

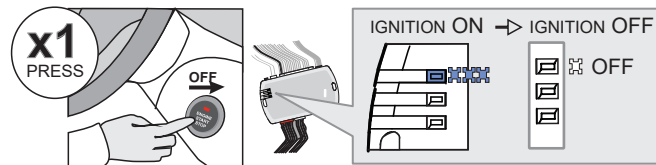

Press the Push-to-Start button once to turn off the ignition.

↳ The BLUE LED will turn off.

6

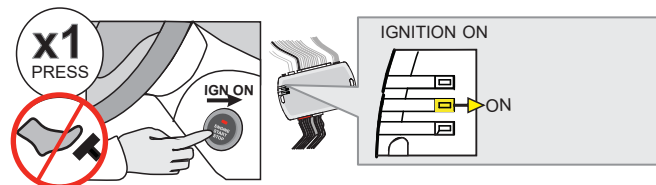

Do not press the brake pedal.
Press the Push-to-Start button once to turn on the ignition.

↳ The YELLOW LED will turn ON.


KEY BYPASS PROGRAMMING PROCEDURE 2/2

7



Wait 5 seconds.

8

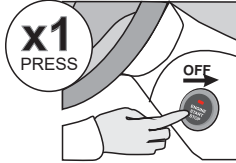

Press the Push-to-Start button once to turn off the ignition.

The module is now programmed.

REMOTE STARTER FUNCTIONALITY



All doors must be closed.

 


Remote start the vehicle.



Unlock the doors with either:

- The OEM remote
- The remote-starter remote
- Or the proximity remote

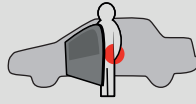

Enter the vehicle with the SMART-KEY.



DO NOT PRESS THE BRAKE PEDAL.

Press and release the Push-to-Start button once.



Press the brake pedal. The vehicle can now be put in to gear and driven.

If the Smart-Key is not detected the vehicle will shut down.

THAR-FOR3 THARNNESS INSTALLATION

ADDENDUM - SUGGESTED WIRING CONFIGURATION


ONLY COMPATIBLE WITH AUTOMATIC TRANSMISSION VEHICLES.

Vehicle functions supported in this diagram (functional if equipped)

VEHICLE

YEARS

Immobilizer bypass	Lock	Unlock	Arm	Disarm	RAP Disable	Parking Lights	Tachometer	Heated seats	Heated Mirrors	Rear defrost	Door Status	Trunk Status	Hood Status*	Hand-Brake Status	Foot-Brake Status	Active OEM Remote Start
--------------------	------	--------	-----	--------	-------------	----------------	------------	--------------	----------------	--------------	-------------	--------------	--------------	-------------------	-------------------	-------------------------

FORD

Edge	Push-to-Start	2015-2019	•	•	•	•	•	•	•	•	•	•	•	•	•	•
------	---------------	-----------	---	---	---	---	---	---	---	---	---	---	---	---	---	---

LINCOLN

MKX	Push-to-Start	2017	•	•	•	•	•	•	•	•	•	•	•	•	•	•
-----	---------------	------	---	---	---	---	---	---	---	---	---	---	---	---	---	---



FIRMWARE VERSION

4.01

ONLY - SEULEMENT

 To add the firmware version and the options, use the **FLASH LINK UPDATER** or **FLASH LINK MOBILE** tool, sold separately.

Program bypass option:

UNIT OPTION

DESCRIPTION

C1

OEM Remote status (Lock/Unlock) monitoring

D6

Push-to-Start

IF THE VEHICLE IS NOT EQUIPPED WITH FUNCTIONAL HOOD PIN:
A11
OFF

Hood trigger (Output Status).


Parts required (Not included)

1x THAR-FOR3

MANDATORY INSTALL
***HOOD PIN**

HOOD STATUS: THE HOOD PIN SWITCH MUST BE INSTALLED IF THE VEHICLE CAN BE REMOTE STARTED WITH THE HOOD OPEN, SET FUNCTION **A11** TO OFF.

A11
OFF
Notice: the installation of safety elements are mandatory. The hood pin is an essential security element and must be installed.



THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.

DESCRIPTION




② Parking Lights switch


① Gateway module, located at right of steering column.

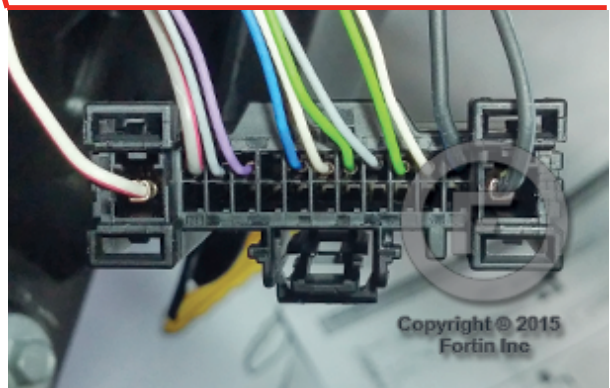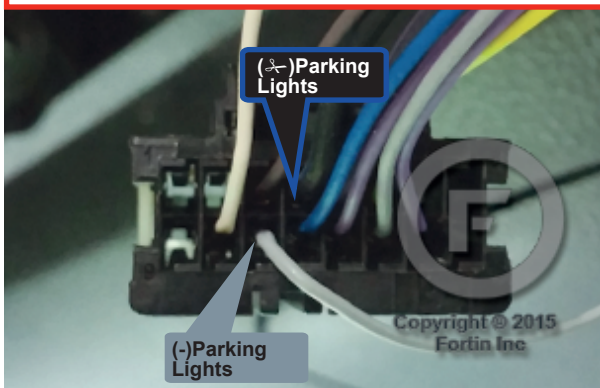

AUTOMATIC TRANSMISSION WIRING CONNECTION

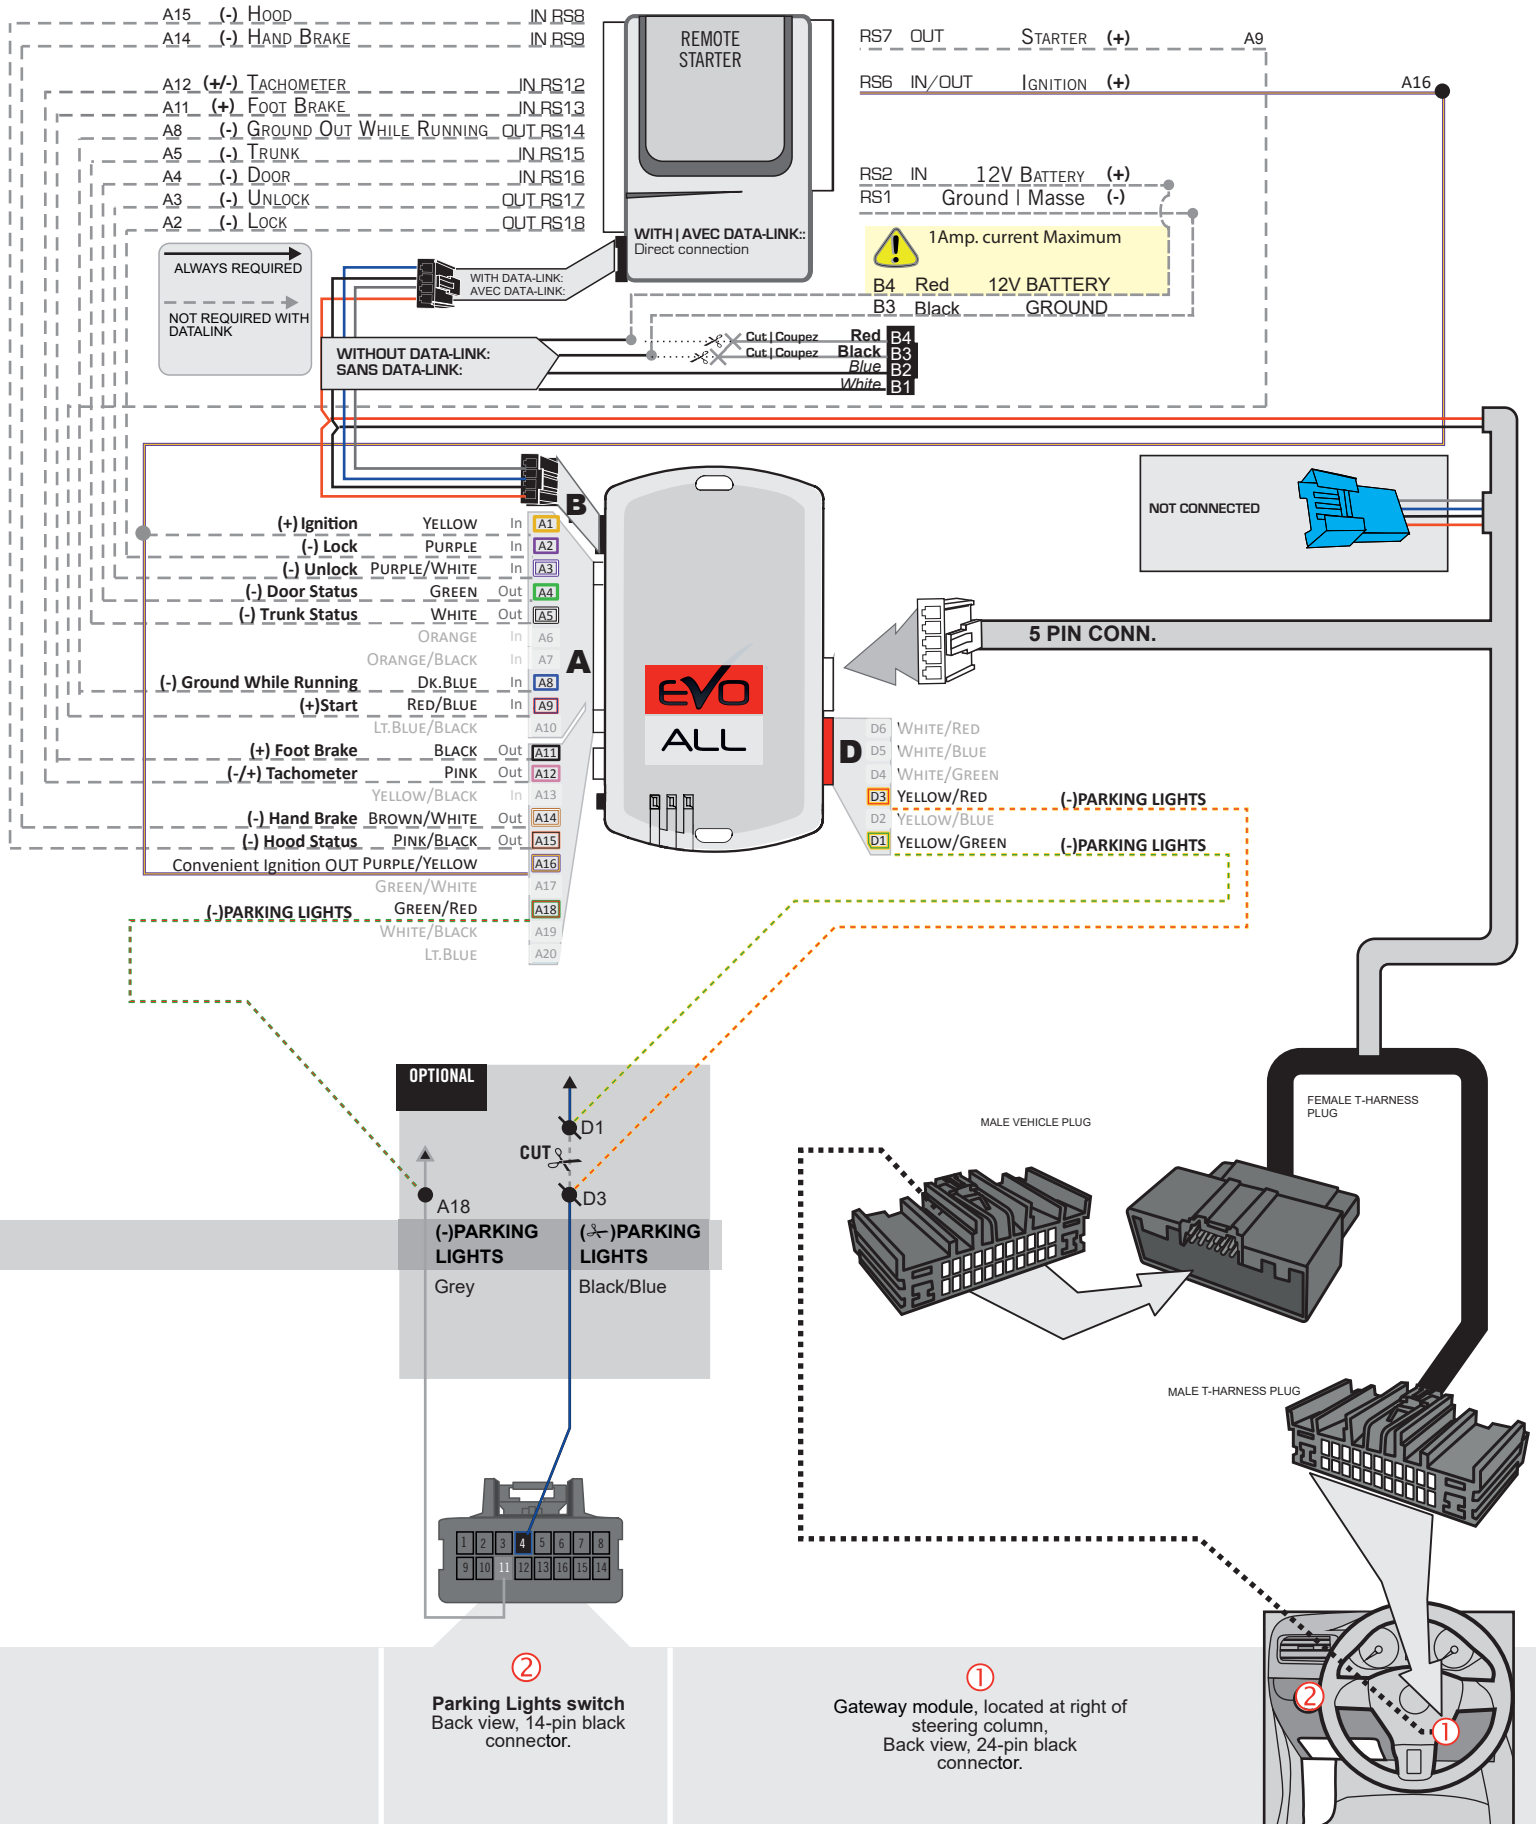


PROGRAMMING PROCEDURE

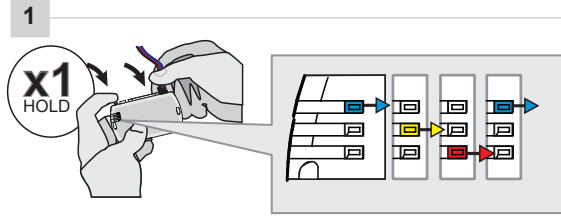



Press and hold the programming button:
Insert the 4-Pin (Data-Link) connector.

↳ The Blue, Red, Yellow and Blue & Red LEDs will alternatively illuminate.

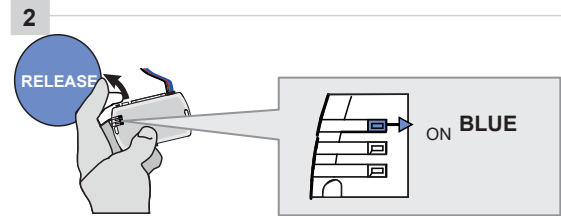


Release the programming button when the LED is BLUE.

 If the LED is not solid BLUE disconnect the 4-Pin connector (Data-Link) and go back to step 1.

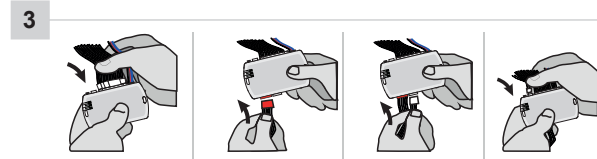


Insert the required remaining connectors.

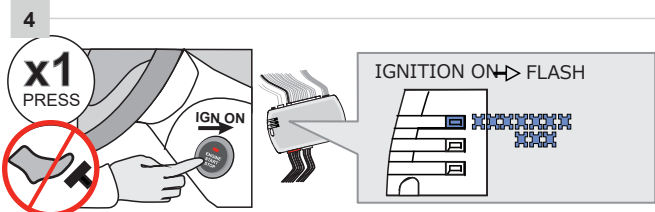


Do not press the brake pedal.
Press the Push-to-Start button once to turn on the ignition.

↳ The BLUE LED will flash rapidly.

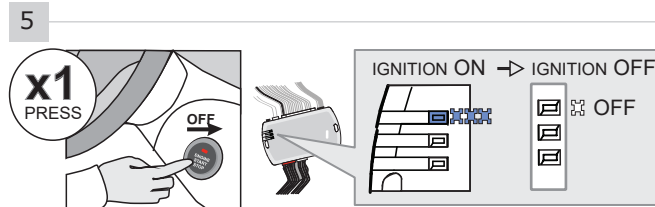



Press the Push-to-Start button once to turn off the ignition.

↳ The BLUE LED will turn off.

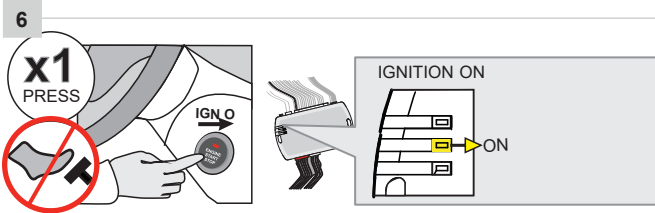

Do not press the brake pedal.
Press the Push-to-Start button once to turn on the ignition.

↳ The YELLOW LED will turn ON.

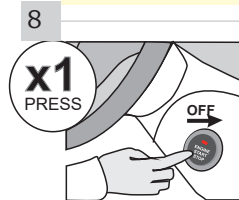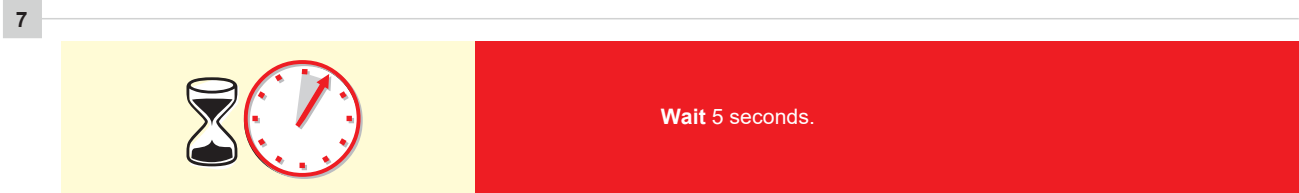

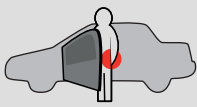

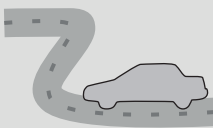


Press the Push-to-Start button once to turn off the ignition.



The module is now programmed.

REMOTE STARTER FUNCTIONALITY

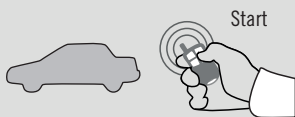 <p>Start</p> <p>All doors must be closed.</p> <p>Remote start the vehicle.</p>	 <p>UNLOCK</p> <p>Unlock the doors with either:</p> <ul style="list-style-type: none"> • The OEM remote • The remote-starter remote • Or the proximity remote 	 <p>Enter the vehicle with the SMART-KEY.</p>	 <p>DO NOT PRESS THE BRAKE PEDAL.</p> <p>Press and release the Push-to-Start button once.</p>	 <p>Press the brake pedal. The vehicle can now be put in to gear and driven.</p> <p>If the Smart-Key is not detected the vehicle will shut down.</p>
--	---	--	---	---

**THAR-FOR3 THARNNESS
INSTALLATION**

ADDENDUM - SUGGESTED WIRING CONFIGURATION



ONLY COMPATIBLE WITH AUTOMATIC TRANSMISSION VEHICLES.



Vehicle functions supported in this diagram (functional if equipped)

VEHICLE

YEARS

Immobilizer bypass	Lock	Unlock	Arm	Disarm	RAP Disable	Parking Lights	Tachometer	Heated seats	Heated Mirrors	Rear defrost	Door Status	Trunk Status	Hood Status*	Hand-Brake Status	Foot-Brake Status	Active OEM Remote Start
--------------------	------	--------	-----	--------	-------------	----------------	------------	--------------	----------------	--------------	-------------	--------------	--------------	-------------------	-------------------	-------------------------

FORD

Edge	Key 2015-2019	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
------	---------------	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

FIRMWARE VERSION

4.01

ONLY - SEULEMENT

To add the firmware version and the options, use the **FLASH LINK UPDATER** or **FLASH LINK MOBILE** tool, sold separately.

	UNIT OPTION	DESCRIPTION
<p>Program bypass option:</p>	C1	OEM Remote status (Lock/Unlock) monitoring
<p>IF THE VEHICLE IS NOT EQUIPPED WITH FUNCTIONAL HOOD PIN:</p>	A11	OFF
		Hood trigger (Output Status).



Parts required (Not included)

1x THAR-FOR3



The vehicle must be equipped with the OEM remote with the door locks.

MANDATORY INSTALL

*HOOD PIN



HOOD STATUS: THE HOOD PIN SWITCH MUST BE INSTALLED IF THE VEHICLE CAN BE REMOTE STARTED WITH THE HOOD OPEN, SET FUNCTION **A11** TO OFF.

A11

OFF

Notice: the installation of safety elements are mandatory. The hood pin is an essential security element and must be installed.



THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.

DESCRIPTION




② Parking Lights switch


① Gateway module, located at right of steering column.

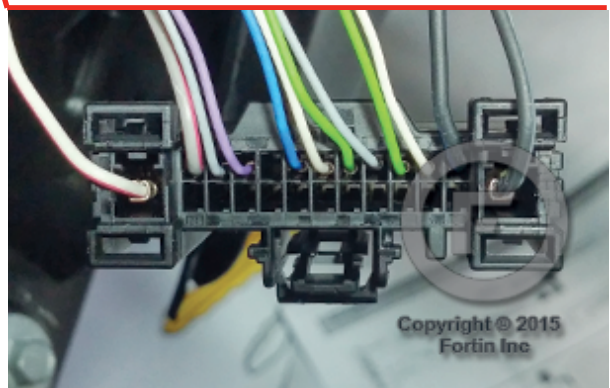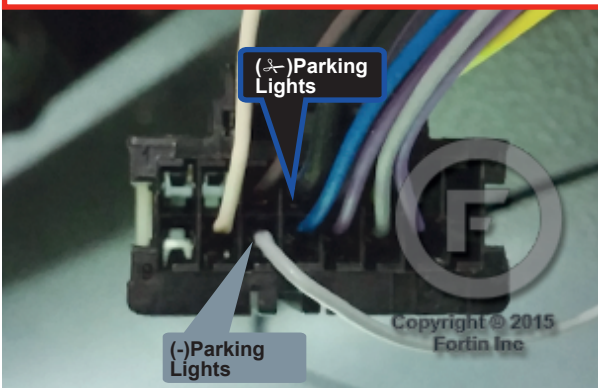

AUTOMATIC TRANSMISSION WIRING CONNECTION

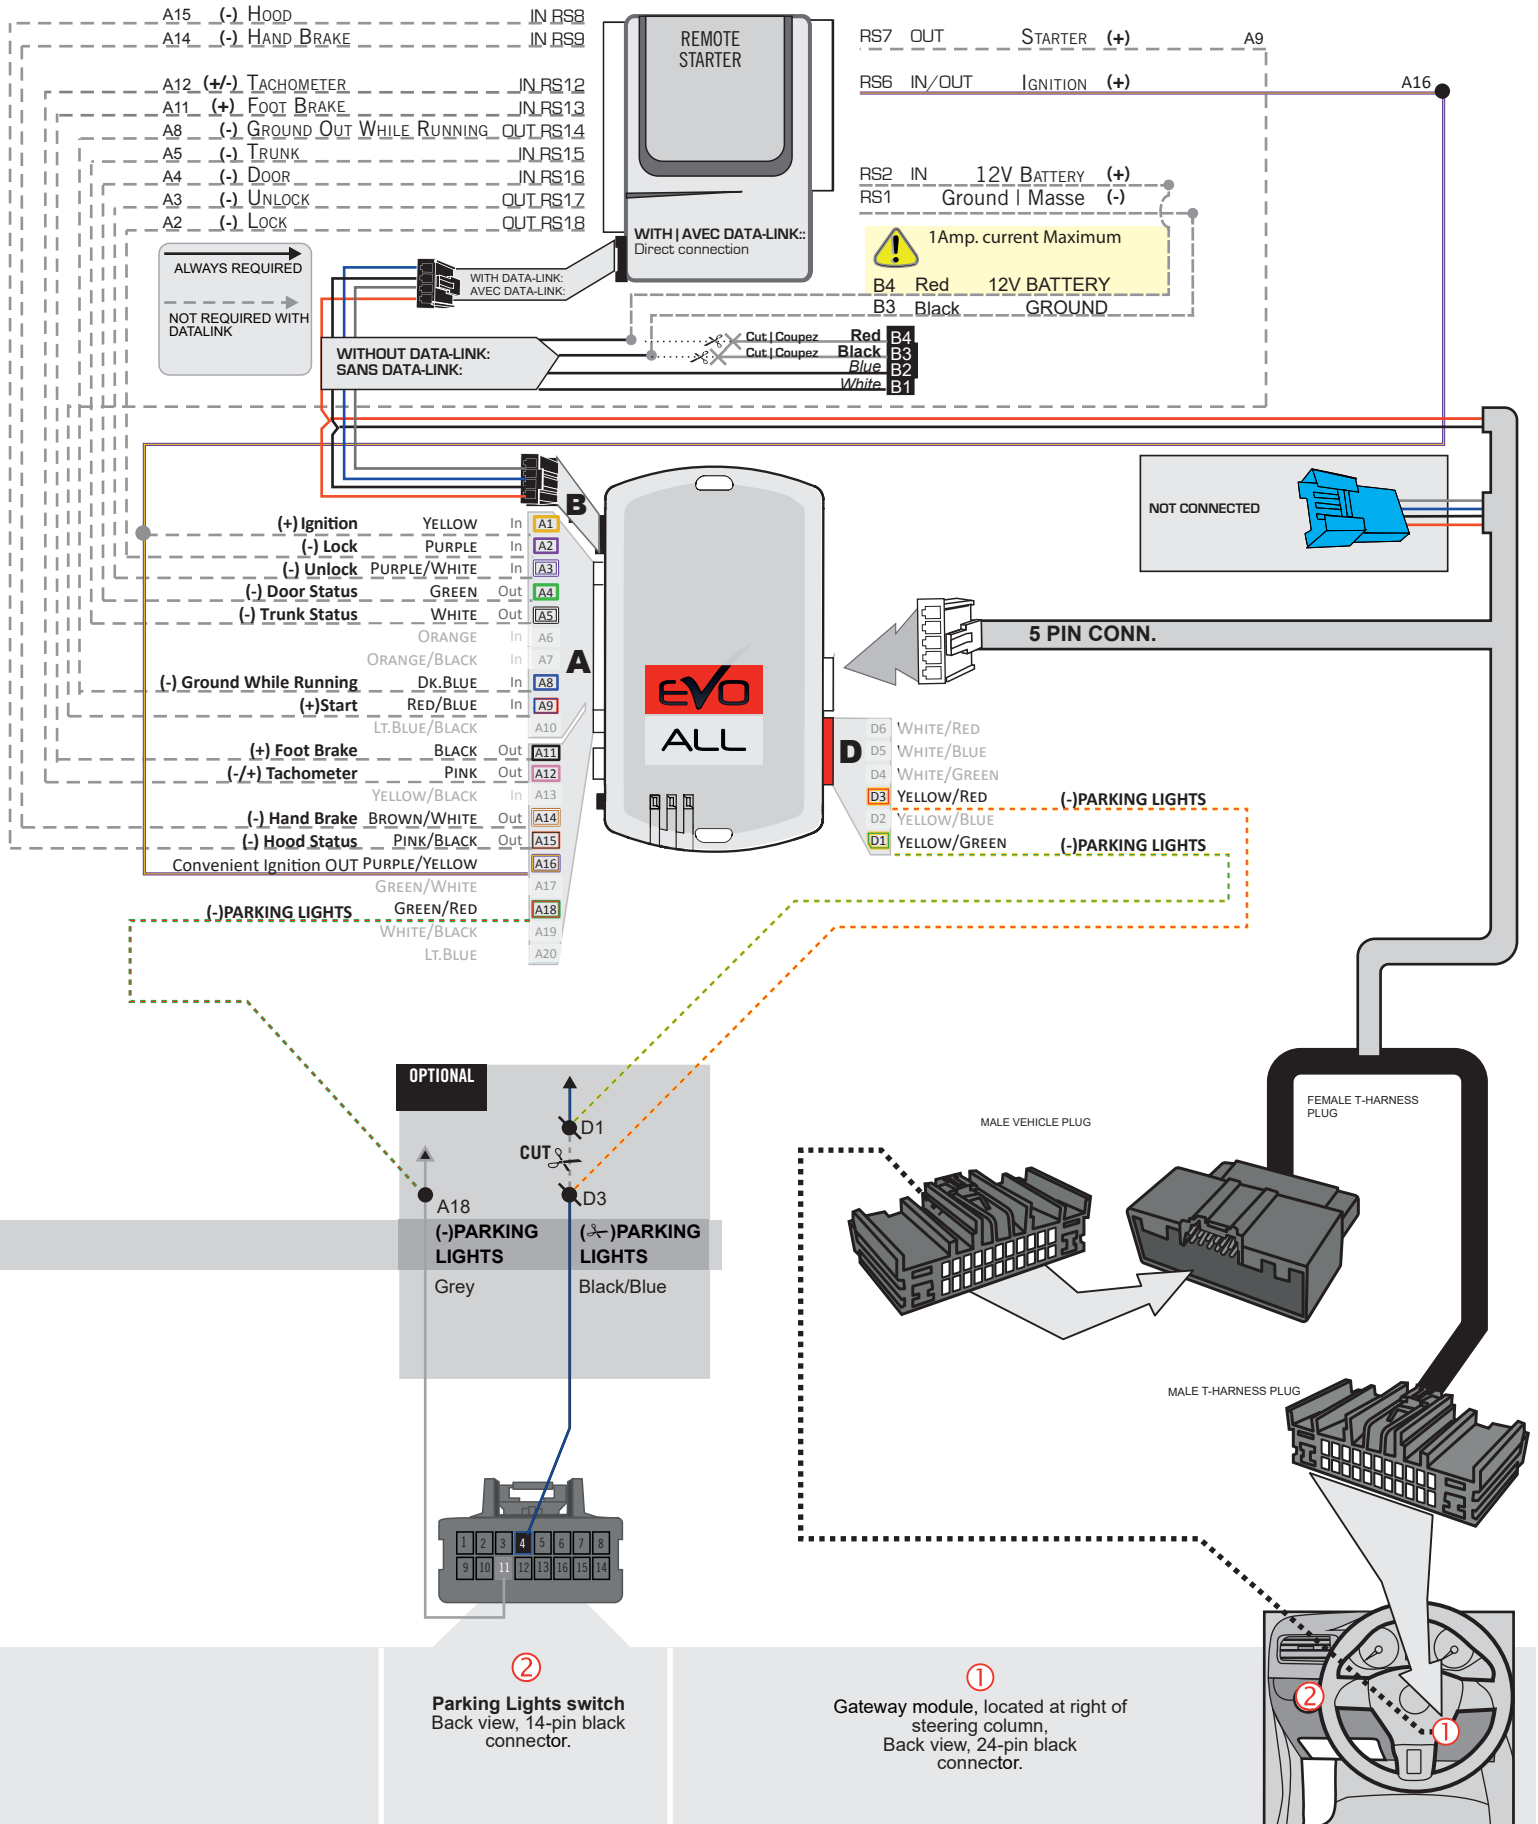


PROGRAMMING PROCEDURE

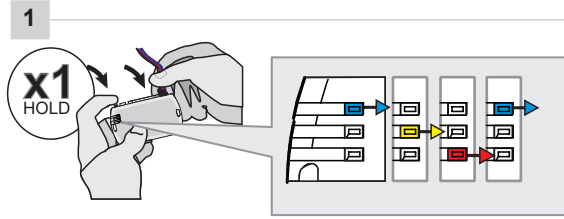



Press and hold the programming button:
Insert the 4-Pin (Data-Link) connector.

↳ The Blue, Red, Yellow and Blue & Red LEDs will alternatively illuminate.

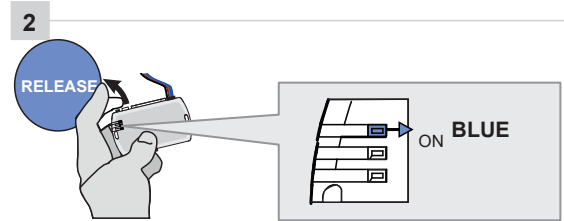


Release the programming button when the LED is BLUE.

If the LED is not solid BLUE disconnect the 4-Pin connector (Data-Link) and go back to step 1.

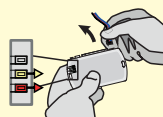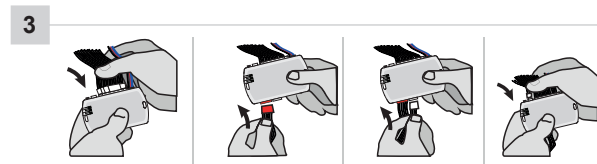



Insert the required remaining connectors.

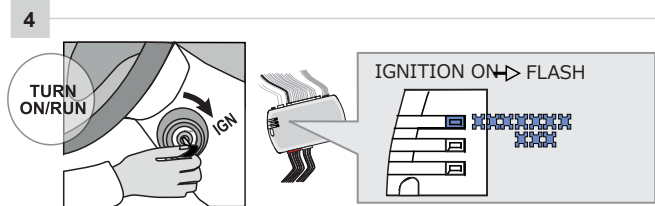


Turn the key to the Ignition ON/RUN position.

↳ The BLUE LED will flash rapidly.

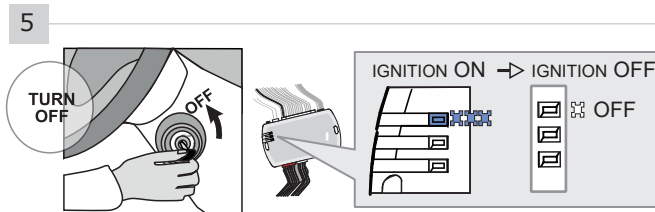


Turn the key to the OFF position.

↳ The BLUE LED will turn off.

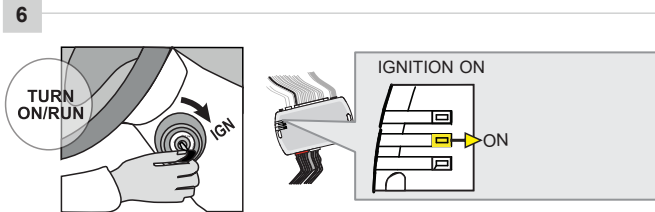


Turn the key to the Ignition ON/RUN position.

↳ The YELLOW LED will turn ON.



Wait 5 seconds.

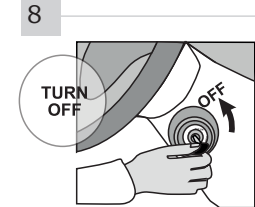

Turn the key to the OFF position.



The module is now programmed.

REMOTE STARTER FUNCTIONALITY



 
All doors must be closed.



Remote start the vehicle.



Unlock the doors with the remote-starter remote or the OEM remote.



Insert and Turn the key to the Ignition ON/RUN position.



Press the brake pedal.



The vehicle can now be put in to gear and driven.

**THAR-FOR3 THARNNESS
INSTALLATION**

ADDENDUM - SUGGESTED WIRING CONFIGURATION



ONLY COMPATIBLE WITH AUTOMATIC TRANSMISSION VEHICLES.



Vehicle functions supported in this diagram (functional if equipped)

VEHICLE	YEARS	Immobilizer bypass	Lock	Unlock	Arm	Disarm	RAP Disable	Parking Lights	Tachometer	Heated seats	Heated Mirrors	Rear defrost	Door Status	Trunk Status	Hood Status*	Hand-Brake Status	Foot-Brake Status	Active OEM Remote Start
FORD																		
Explorer	Key 2016-2019	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•

FIRMWARE VERSION

4.01

ONLY - SEULEMENT

To add the firmware version and the options, use the **FLASH LINK UPDATER** or **FLASH LINK MOBILE** tool, sold separately.


	Program bypass option:	UNIT OPTION	DESCRIPTION
		C1	OEM Remote status (Lock/Unlock) monitoring

IF THE VEHICLE IS NOT EQUIPPED WITH FUNCTIONAL HOOD PIN:	A11	OFF	Hood trigger (Output Status).
--	------------	-----	-------------------------------



Parts required (Not included)

 1x THAR-FOR3



The vehicle must be equipped with the OEM remote with the door locks.

MANDATORY INSTALL

*HOOD PIN



HOOD STATUS: THE HOOD PIN SWITCH MUST BE INSTALLED IF THE VEHICLE CAN BE REMOTE STARTED WITH THE HOOD OPEN, SET FUNCTION **A11** TO OFF.

A11


OFF

Notice: the installation of safety elements are mandatory. The hood pin is an essential security element and must be installed.




THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.

DESCRIPTION


② Parking Lights switch

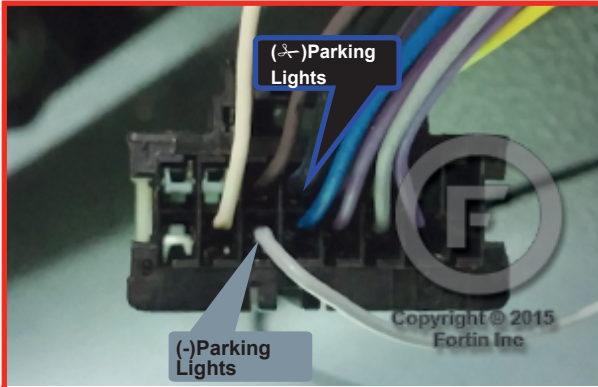


③ Fuse box

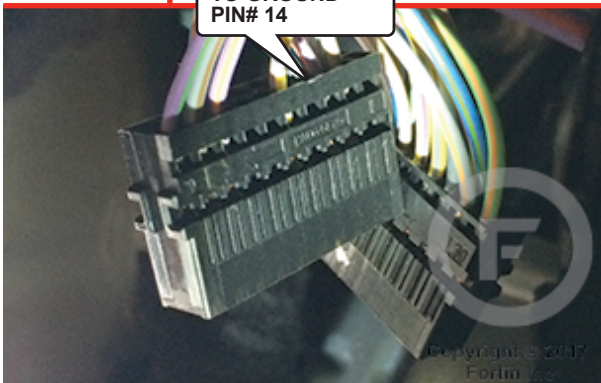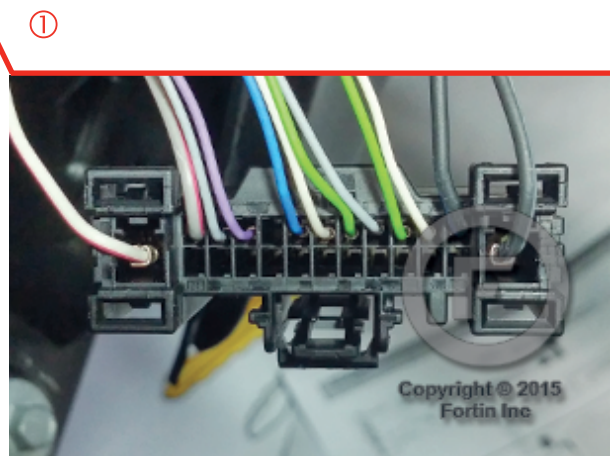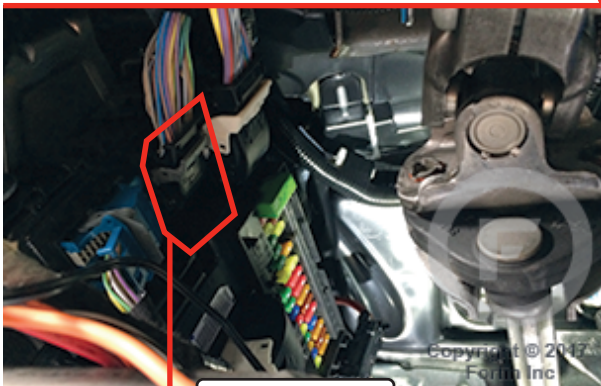

AUTOMATIC TRANSMISSION WIRING CONNECTION

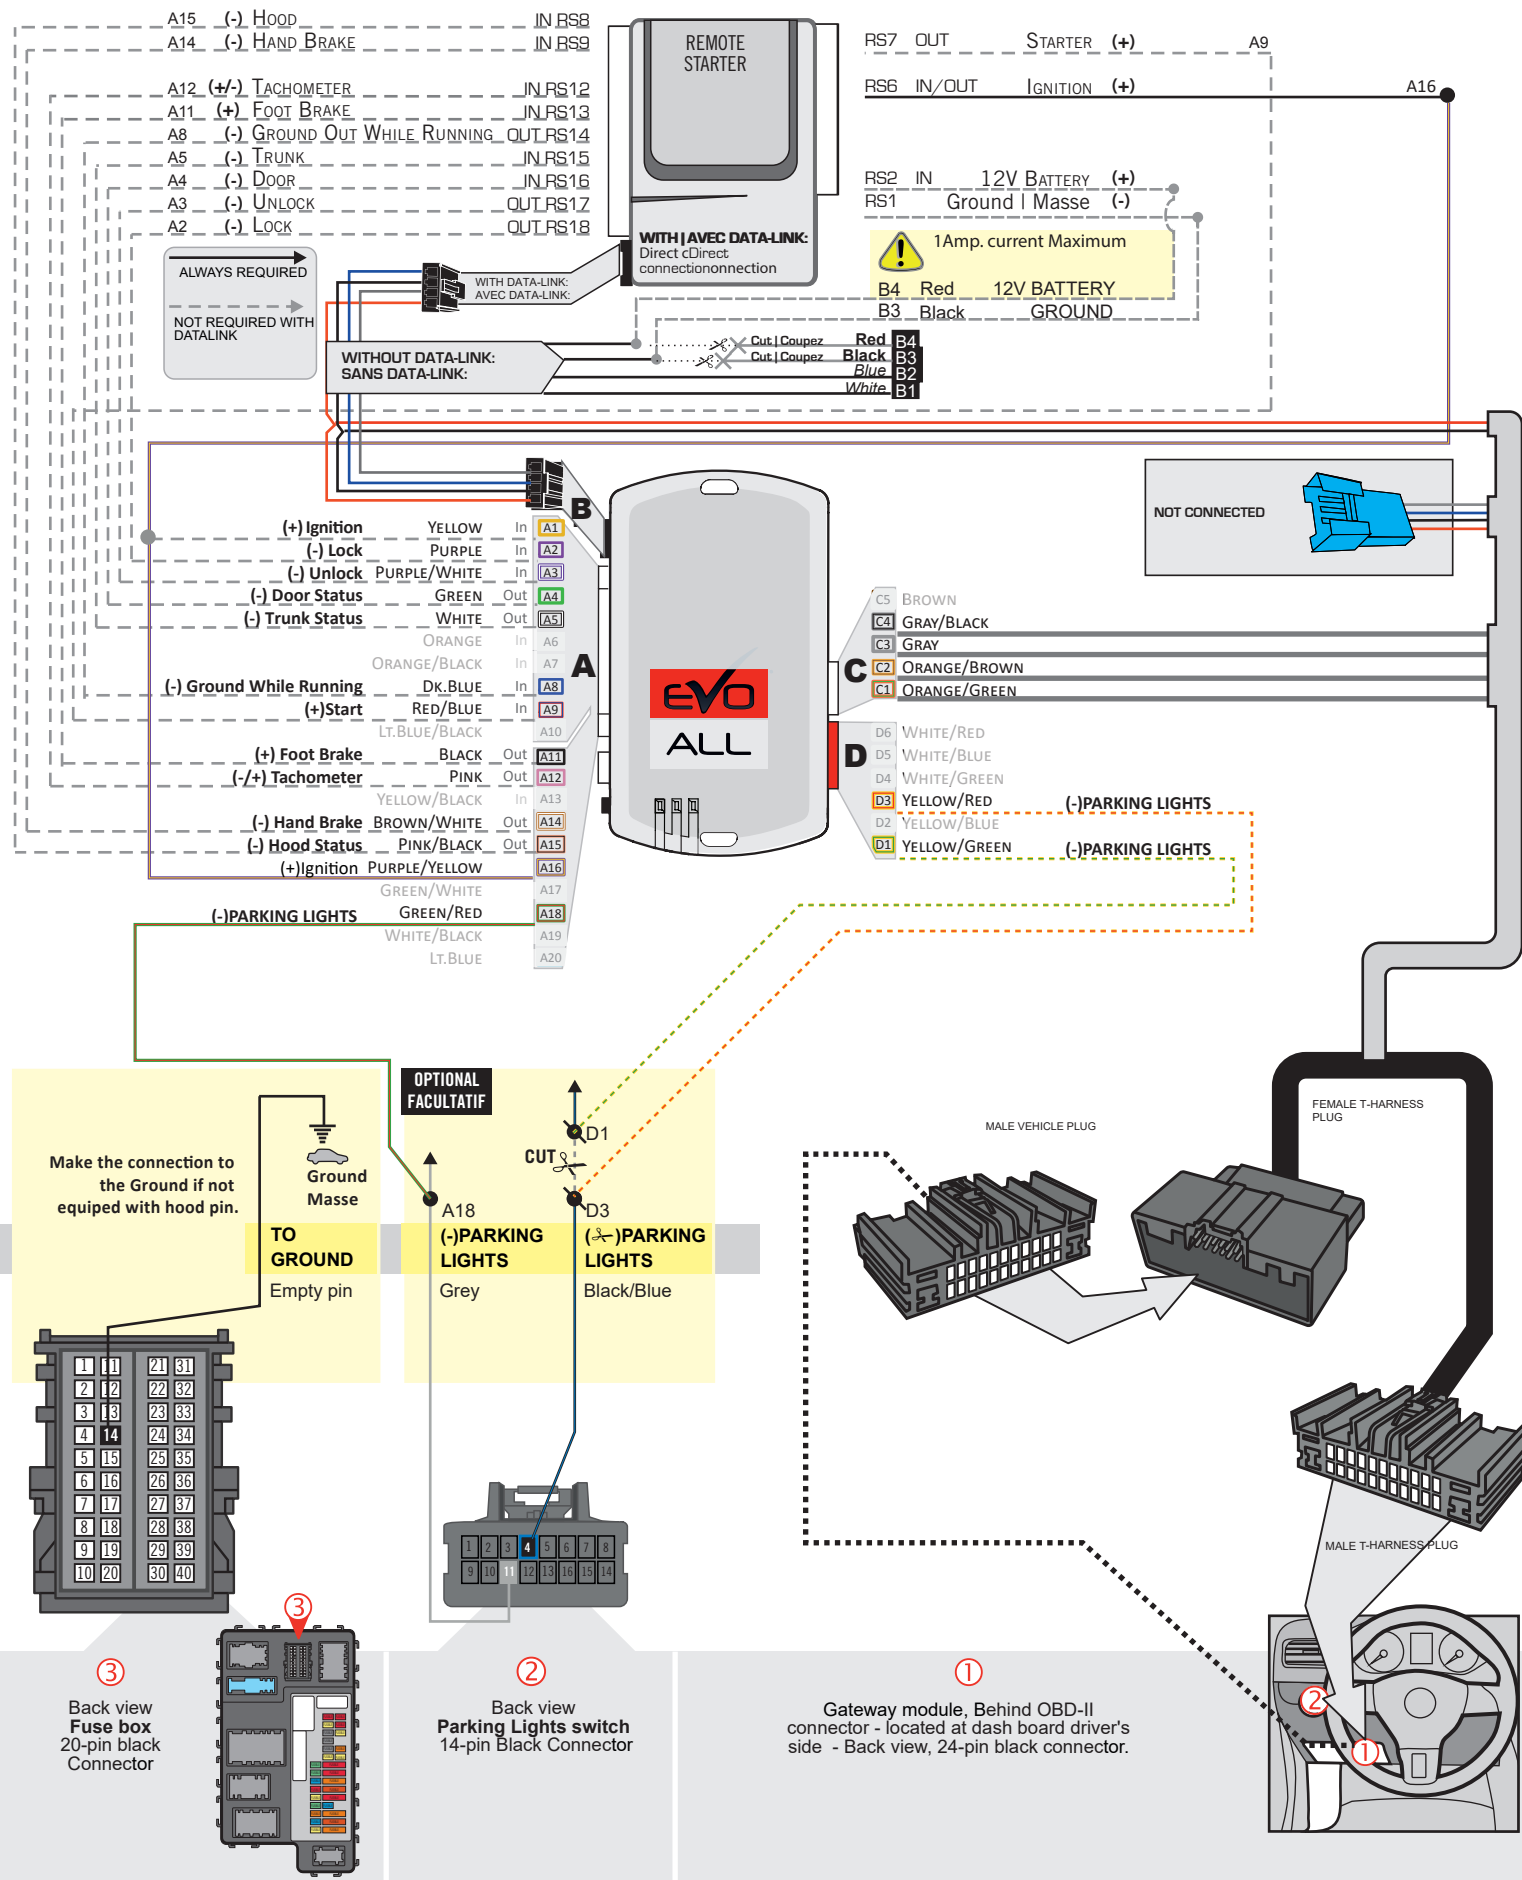


PROGRAMMING PROCEDURE

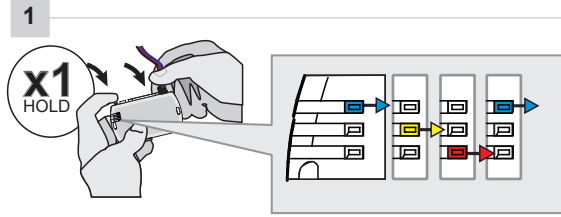



Press and hold the programming button:
Insert the 4-Pin (Data-Link) connector.

↳ The Blue, Red, Yellow and Blue & Red LEDs will alternatively illuminate.

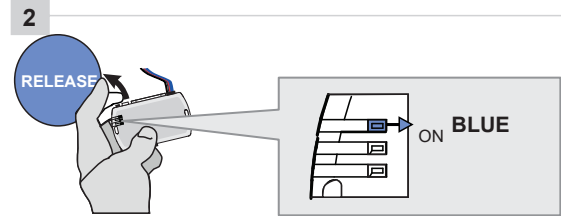


Release the programming button when the LED is BLUE.

If the LED is not solid BLUE disconnect the 4-Pin connector (Data-Link) and go back to step 1.

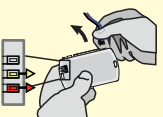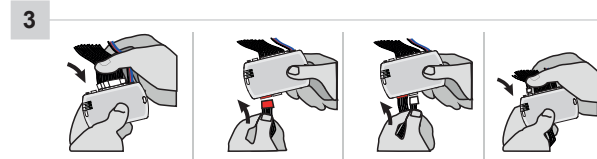



Insert the required remaining connectors.

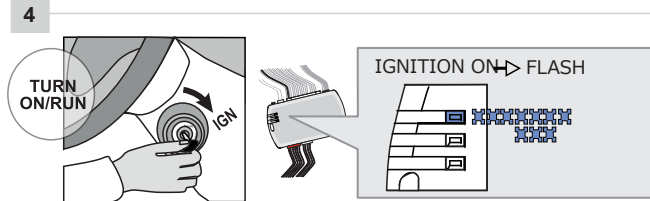


Turn the key to the Ignition ON/RUN position.

↳ The BLUE LED will flash rapidly.

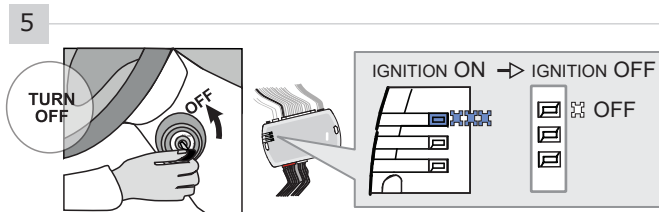


Turn the key to the OFF position.

↳ The BLUE LED will turn off.

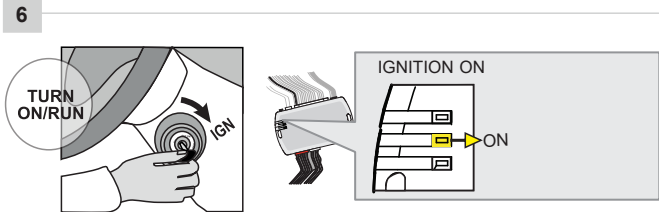


Turn the key to the Ignition ON/RUN position.


↳ The YELLOW LED will turn ON.



Wait 5 seconds.

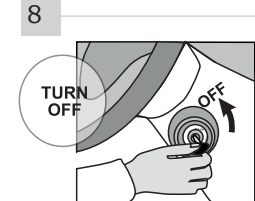

Turn the key to the OFF position.



The module is now programmed.

REMOTE STARTER FUNCTIONALITY



All doors must be closed.



Remote start the vehicle.



Unlock the doors with the remote-starter remote or the OEM remote.



Insert and Turn the key to the Ignition ON/RUN position.



Press the brake pedal.



The vehicle can now be put in to gear and driven.

**THAR-FOR3 THARNESSE
INSTALLATION**

ADDENDUM - SUGGESTED WIRING CONFIGURATION



ONLY COMPATIBLE WITH AUTOMATIC TRANSMISSION VEHICLES.



VEHICLE

YEARS

Vehicle functions supported in this diagram (functional if equipped)

Immobilizer bypass	Lock	Unlock	Arm	Disarm	RAP Disable	Tachometer	Heated seats	Heated Mirrors	Rear defrost	Door Status	Trunk Status	Hood Status*	Hand-Brake Status	Foot-Brake Status	Active OEM Remote Start
--------------------	------	--------	-----	--------	-------------	------------	--------------	----------------	--------------	-------------	--------------	--------------	-------------------	-------------------	-------------------------

FORD

Explorer

Push-to-Start 2016-2019

•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

FIRMWARE VERSION

4.01

ONLY - SEULEMENT

To add the firmware version and the options, use the **FLASH LINK UPDATER** or **FLASH LINK MOBILE** tool, sold separately.

	Program bypass option:	UNIT OPTION	DESCRIPTION
		C1	OEM Remote status (Lock/Unlock) monitoring
		D6	Push-to-Start
IF THE VEHICLE IS NOT EQUIPPED WITH FUNCTIONAL HOOD PIN:		A11	OFF
			Hood trigger (Output Status).



Parts required (Not included)

1x THAR-FOR3

MANDATORY INSTALL

*HOOD PIN



HOOD STATUS: THE HOOD PIN SWITCH MUST BE INSTALLED IF THE VEHICLE CAN BE REMOTE STARTED WITH THE HOOD OPEN, SET FUNCTION **A11** TO OFF.


A11	OFF
------------	------------

Notice: the installation of safety elements are mandatory. The hood pin is an essential security element and must be installed.


THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.

DESCRIPTION


① Gateway module left side of dash

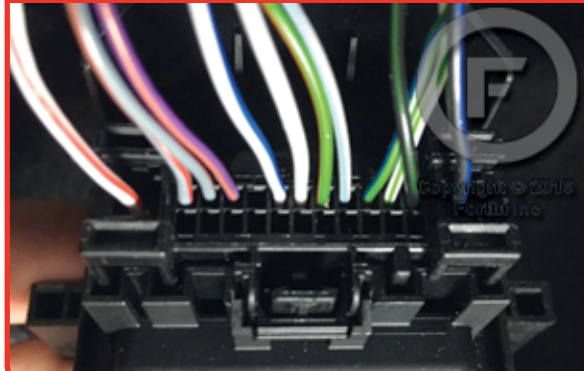


② Parking Lights switch

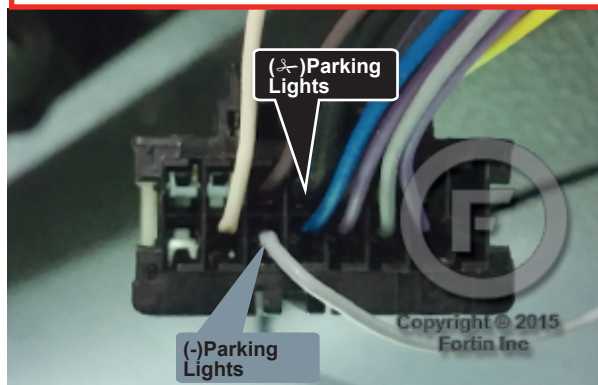

AUTOMATIC TRANSMISSION WIRING CONNECTION

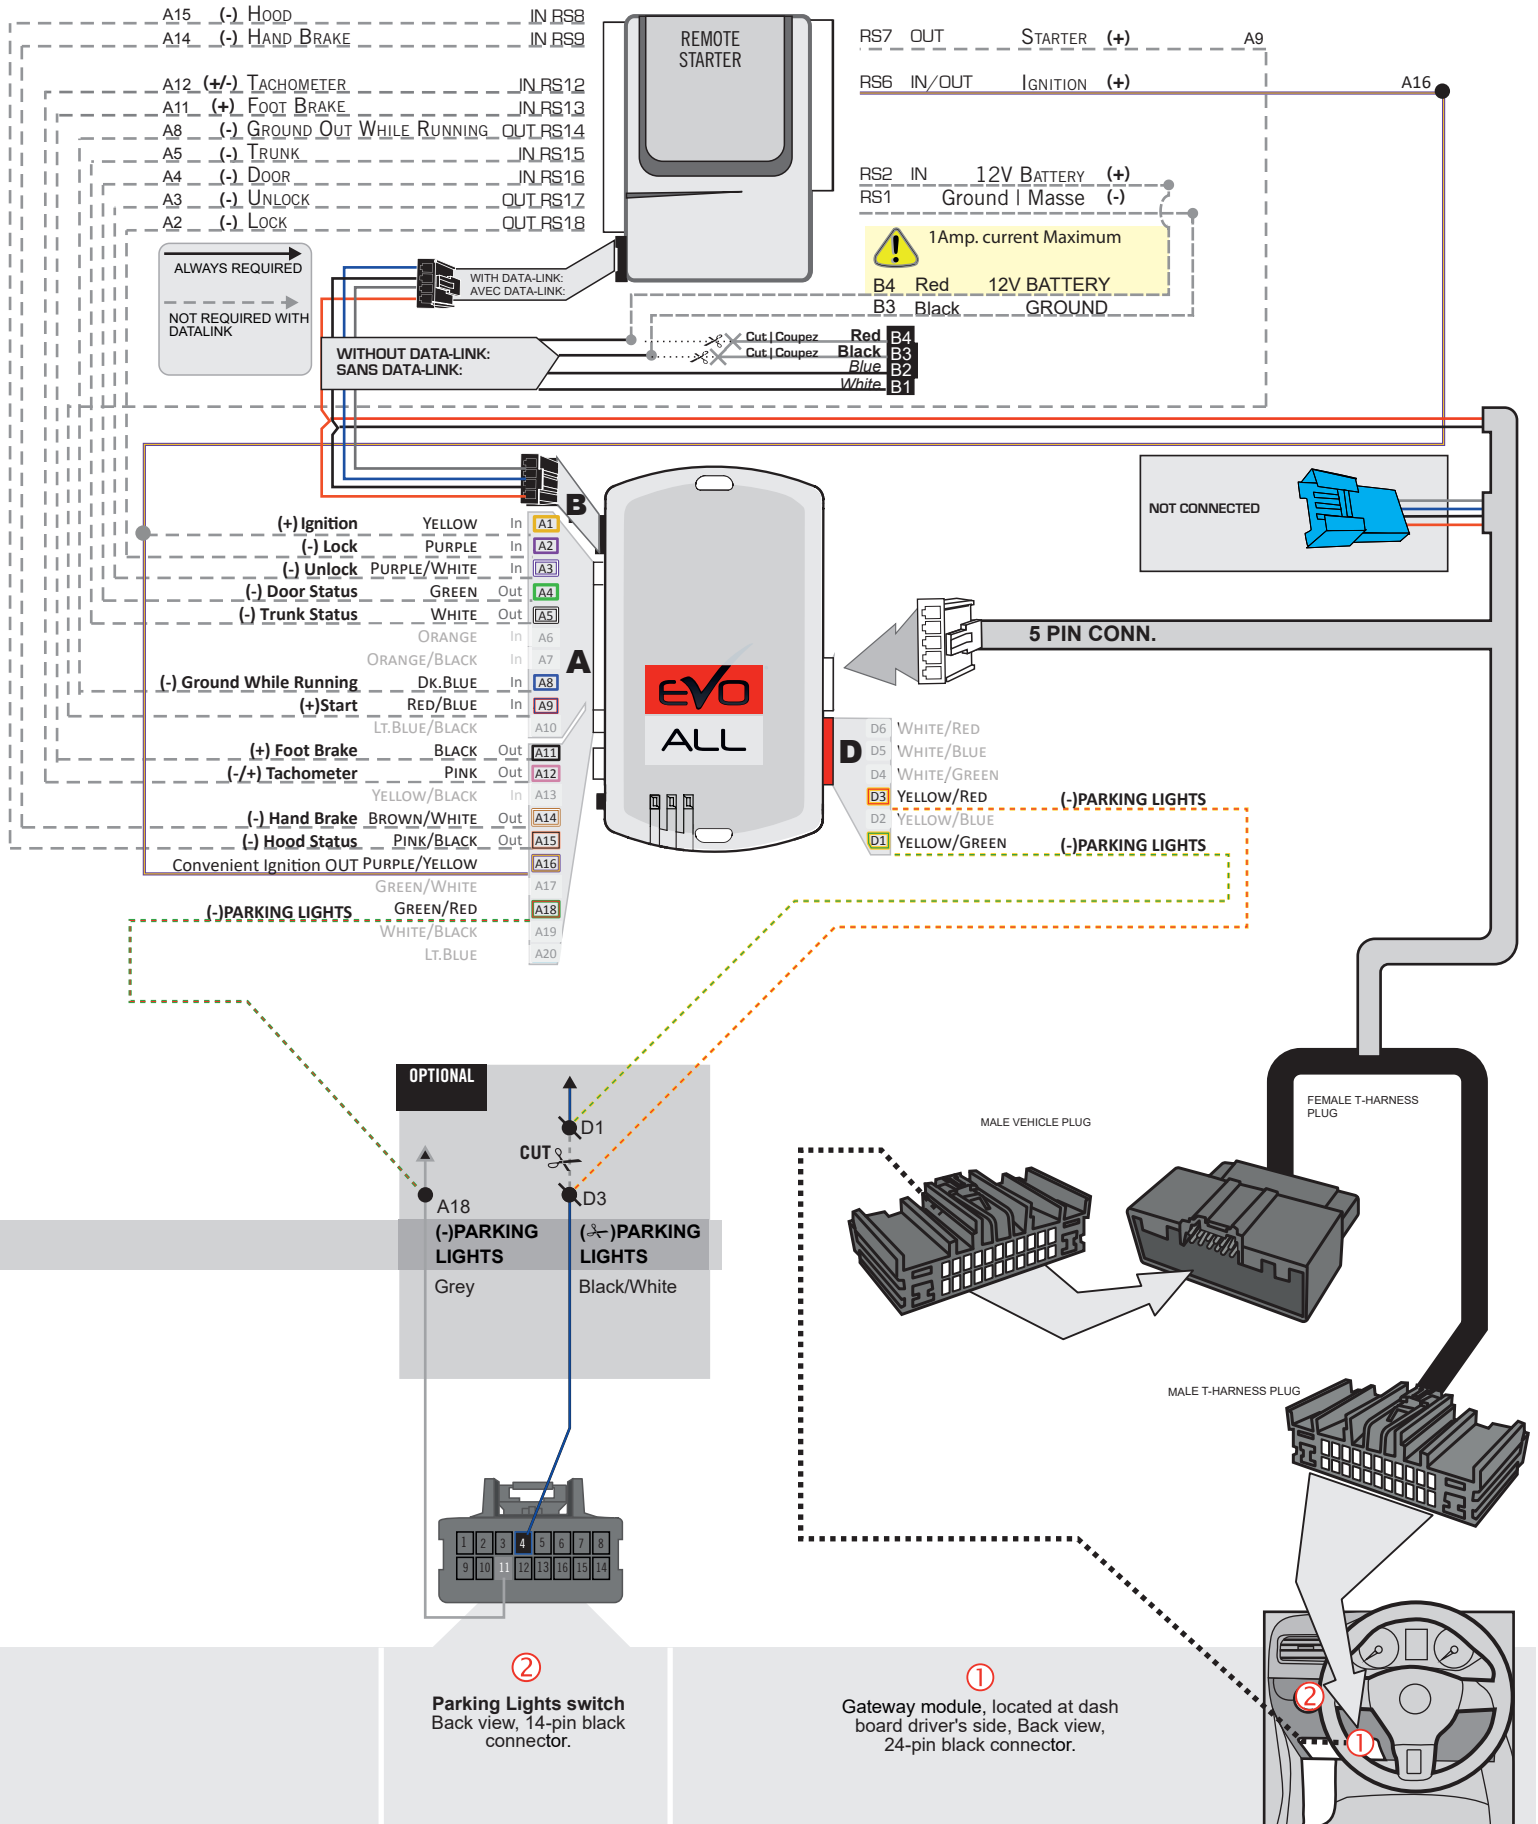


PROGRAMMING PROCEDURE

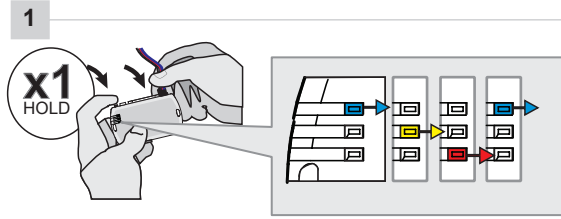


Press and hold the programming button:
Insert the 4-Pin (Data-Link) connector.

↳ The Blue, Red, Yellow and Blue & Red LEDs will alternatively illuminate.

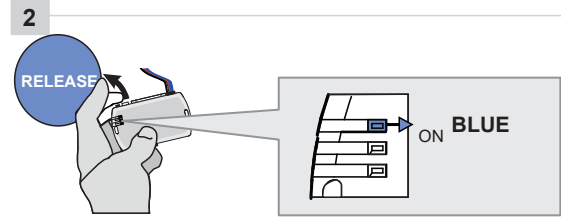


Release the programming button when the LED is BLUE.

If the LED is not solid BLUE disconnect the 4-Pin connector (Data-Link) and go back to step 1.

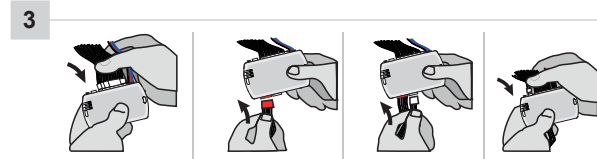



Insert the required remaining connectors.

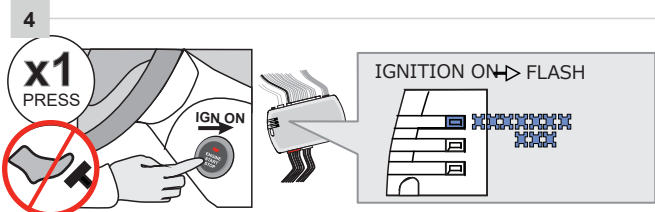


Do not press the brake pedal.
Press the Push-to-Start button once to turn on the ignition.

↳ The BLUE LED will flash rapidly.

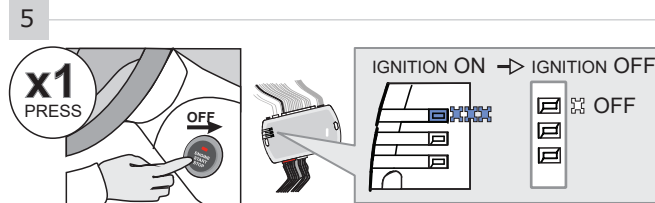


Press the Push-to-Start button once to turn off the ignition.

↳ The BLUE LED will turn off.

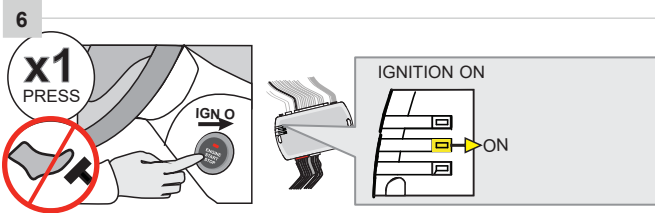


Do not press the brake pedal.
Press the Push-to-Start button once to turn on the ignition.

↳ The YELLOW LED will turn ON.



Wait 5 seconds.

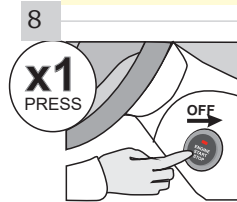

Press the Push-to-Start button once to turn off the ignition.



The module is now programmed.

REMOTE STARTER FUNCTIONALITY



All doors must be closed.

 


Remote start the vehicle.



Unlock the doors with either:

- The OEM remote
- The remote-starter remote
- Or the proximity remote



Enter the vehicle with the SMART-KEY.



DO NOT PRESS THE BRAKE PEDAL.

Press and release the Push-to-Start button once.



Press the brake pedal. The vehicle can now be put in to gear and driven.
If the Smart-Key is not detected the vehicle will shut down.

THAR-FOR3 THARNNESS INSTALLATION

ADDENDUM - SUGGESTED WIRING CONFIGURATION



ONLY COMPATIBLE WITH AUTOMATIC TRANSMISSION VEHICLES.



Vehicle functions supported in this diagram (functional if equipped)

VEHICLE	YEARS	Immobilizer bypass	Lock	Unlock	Arm	Disarm	RAP Disable	Parking Lights	Tachometer	Heated seats	Heated Mirrors	Rear defrost	Door Status	Trunk Status	Hood Status*	Hand-Brake Status	Foot-Brake Status	Active OEM Remote Start	
FORD																			
F-150	Push-to-Start 2015-2018	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
F-250	Push-to-Start 2017	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
F-350	Push-to-Start 2017	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
F-450	Push-to-Start 2017	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
LINCOLN																			
MKC	Push-to-Start 2015-2019	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•



FIRMWARE VERSION

4.01

ONLY - SEULEMENT

To add the firmware version and the options, use the **FLASH LINK UPDATER** or **FLASH LINK MOBILE** tool, sold separately.



**Program bypass option
IF THE VEHICLE IS NOT EQUIPPED
WITH FUNCTIONAL HOOD PIN:**

UNIT OPTION

A11

OFF

DESCRIPTION

Hood trigger (Output Status).



Program bypass option:

UNIT OPTION

C1

DESCRIPTION

OEM Remote status (Lock/Unlock) monitoring



Parts required (Not included)

1x THAR-FOR3

MANDATORY INSTALL

*HOOD PIN



HOOD STATUS: THE HOOD PIN SWITCH MUST BE INSTALLED IF THE VEHICLE CAN BE REMOTE STARTED WITH THE HOOD OPEN, SET FUNCTION **A11** TO OFF.

A11

OFF

Notice: the installation of safety elements are mandatory. The hood pin is an essential security element and must be installed.



THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.

DESCRIPTION




② Parking Lights switch


① Gateway module, located at dash board driver's side,

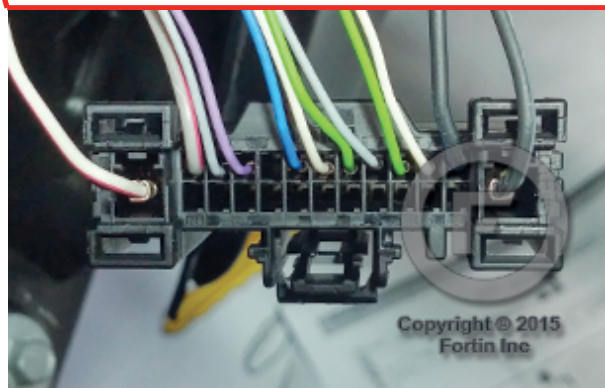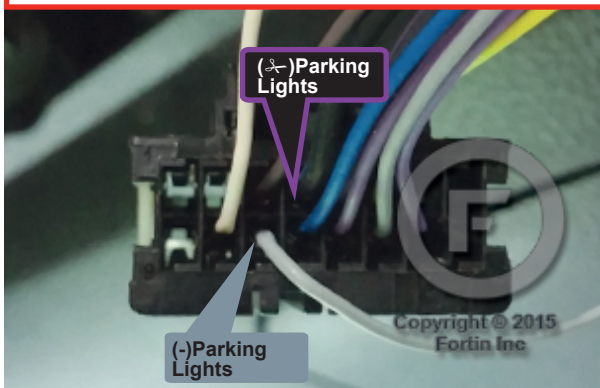


④ Under the hood If not equipped with hood pin.

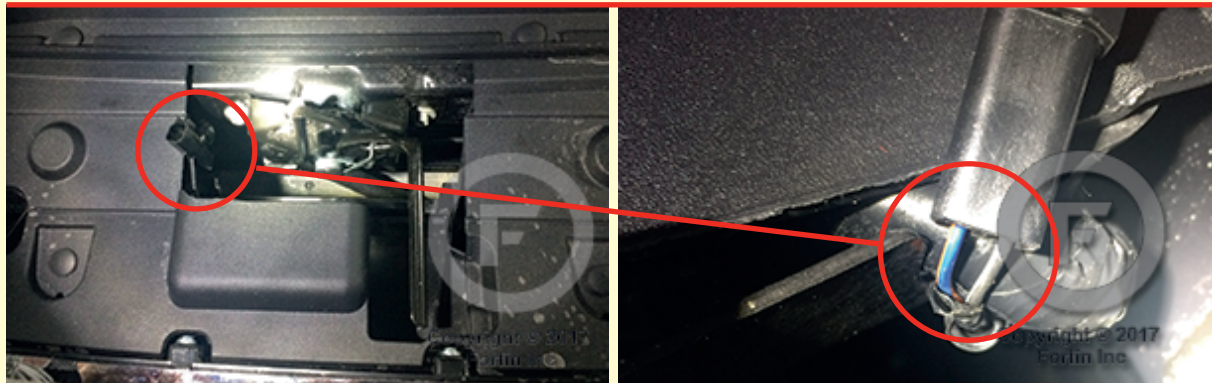

AUTOMATIC TRANSMISSION WIRING CONNECTION

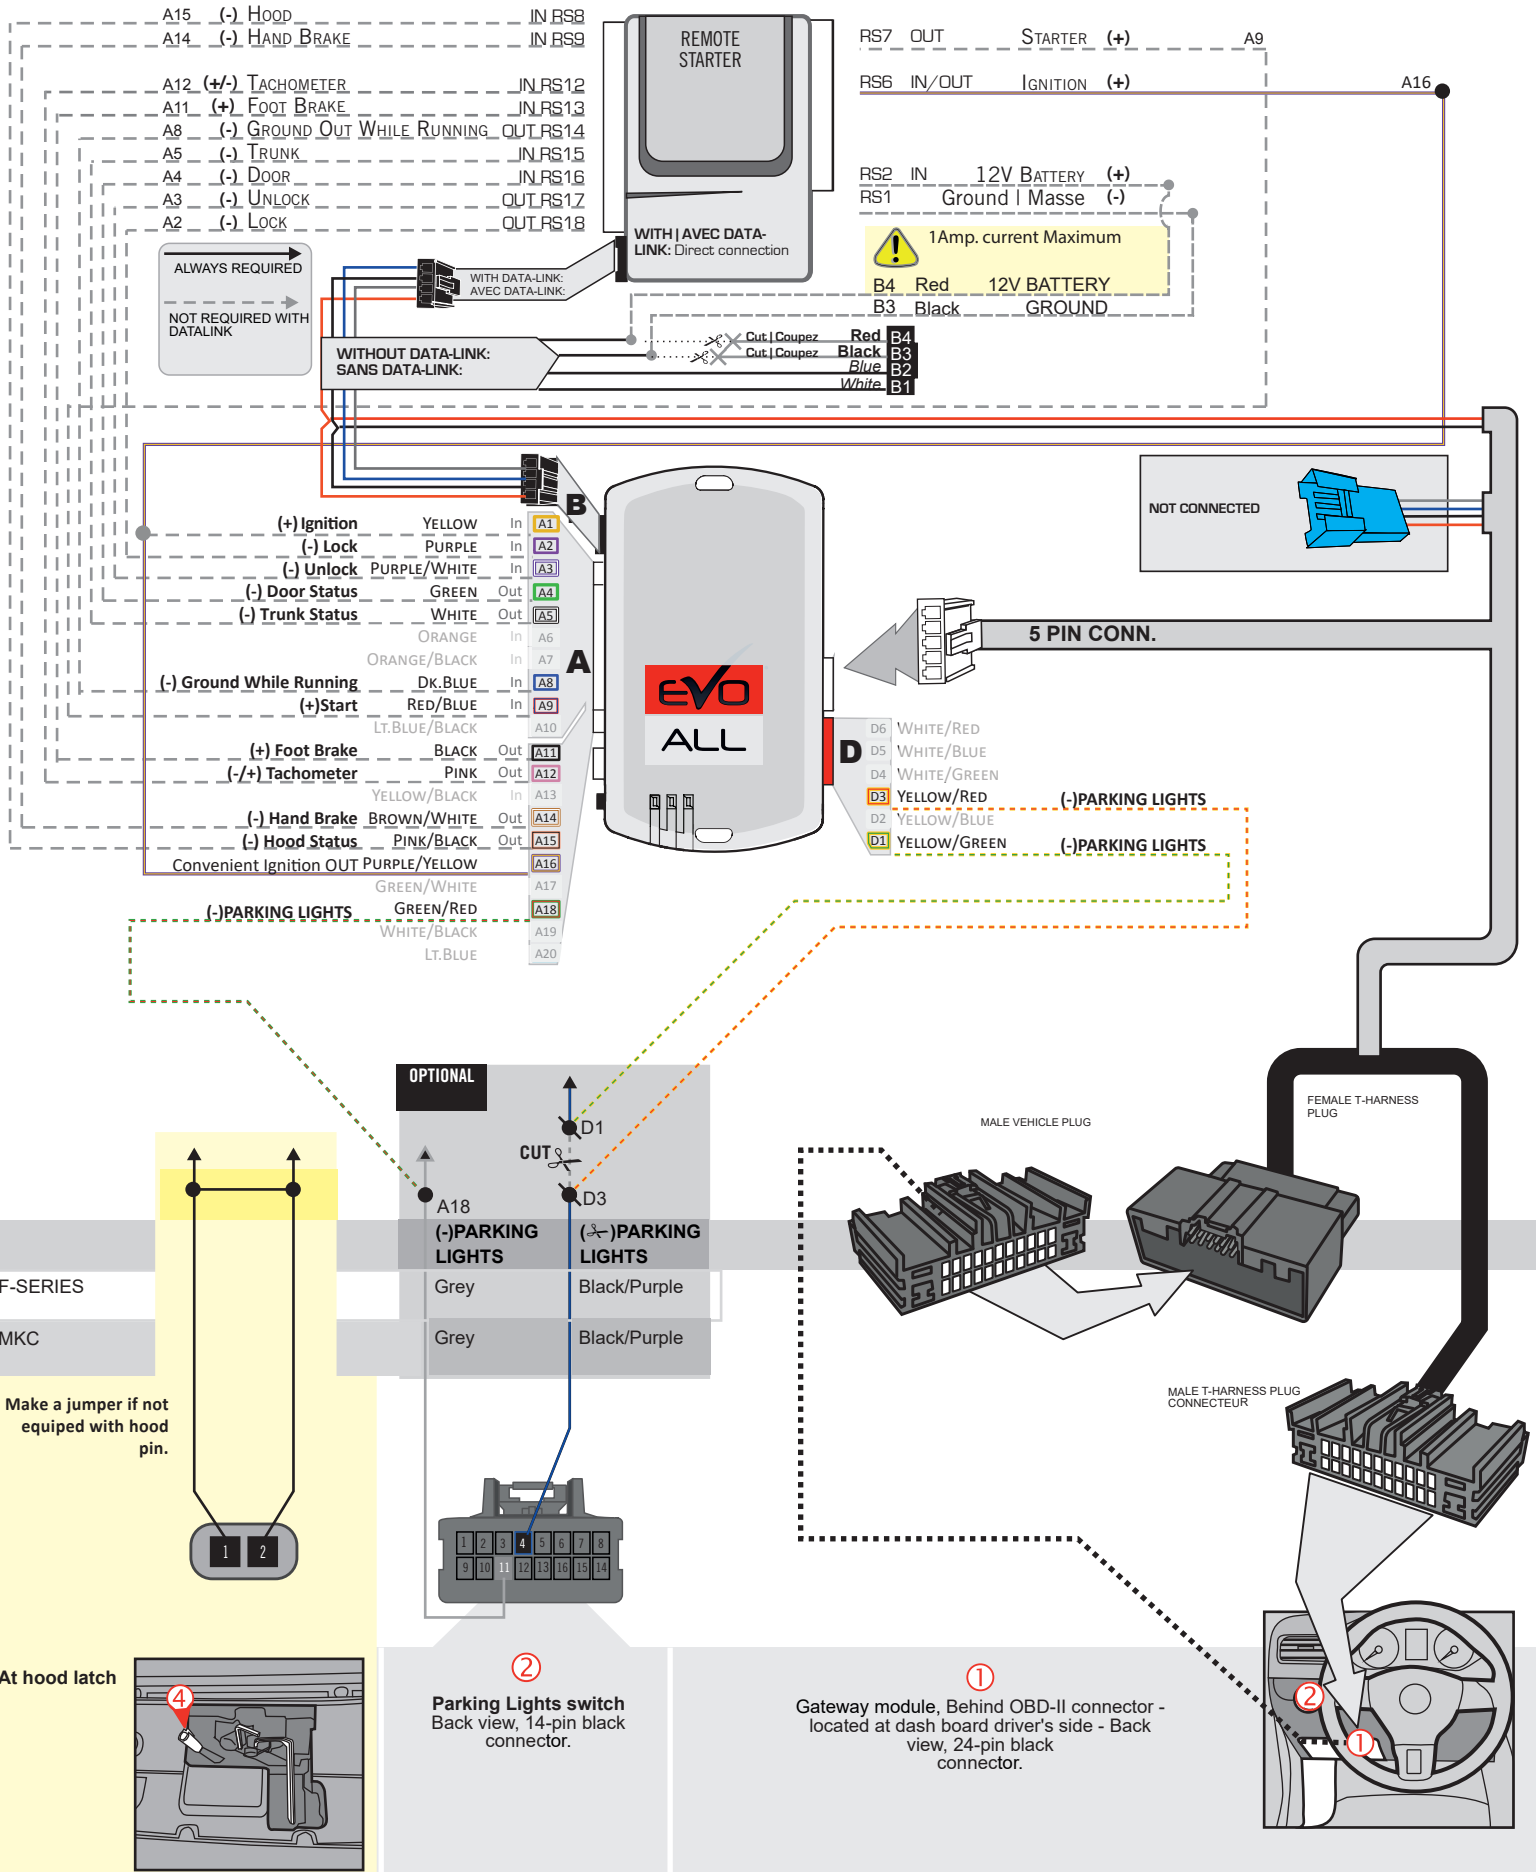


PROGRAMMING PROCEDURE

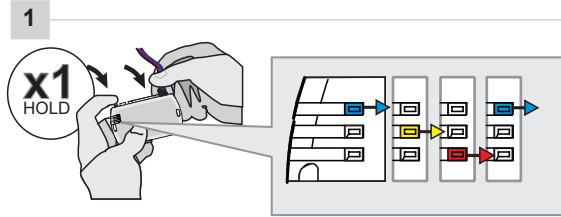



Press and hold the programming button:
Insert the 4-Pin (Data-Link) connector.

↳ The Blue, Red, Yellow and Blue & Red LEDs will alternatively illuminate.

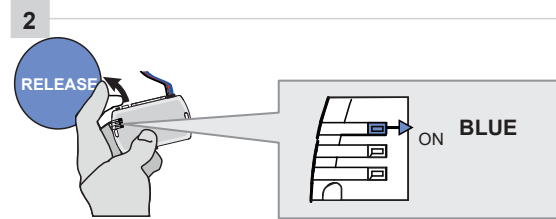


Release the programming button when the LED is BLUE.

If the LED is not solid BLUE disconnect the 4-Pin connector (Data-Link) and go back to step 1.

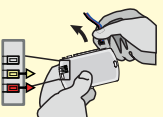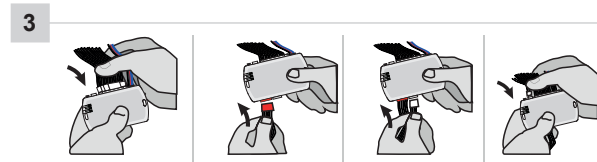



Insert the required remaining connectors.

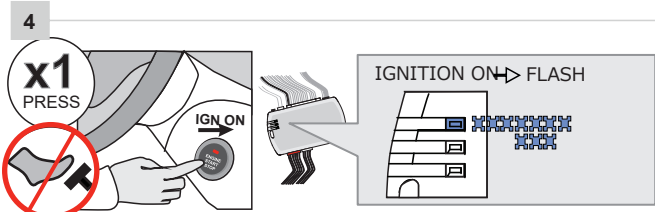


Do not press the brake pedal.
Press the Push-to-Start button once to turn on the ignition.

↳ The BLUE LED will flash rapidly.

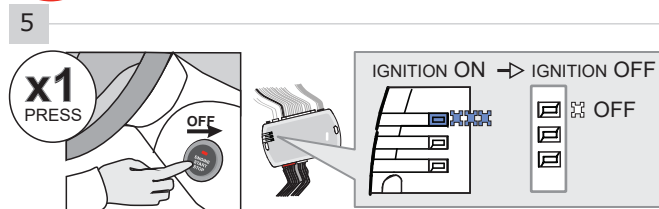


Press the Push-to-Start button once to turn off the ignition.

↳ The BLUE LED will turn off.

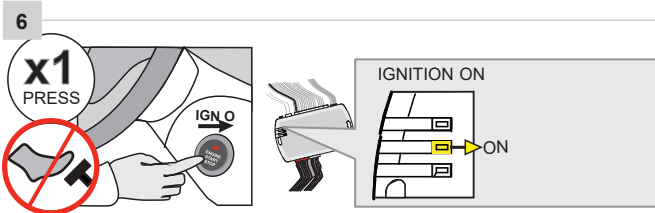


Do not press the brake pedal.
Press the Push-to-Start button once to turn on the ignition.

↳ The YELLOW LED will turn ON.



Wait 5 seconds.

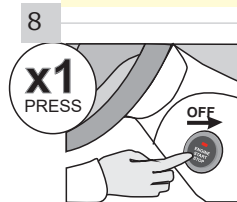

Press the Push-to-Start button once to turn off the ignition.



The module is now programmed.

REMOTE STARTER FUNCTIONALITY



All doors must be closed.

 


Remote start the vehicle.



Unlock the doors with either:

- The OEM remote
- The remote-starter remote
- Or the proximity remote



Enter the vehicle with the SMART-KEY.



DO NOT PRESS THE BRAKE PEDAL.

Press and release the Push-to-Start button once.



Press the brake pedal. The vehicle can now be put in to gear and driven.

If the Smart-Key is not detected the vehicle will shut down.

THAR-FOR3 THARNNESS INSTALLATION

ADDENDUM - SUGGESTED WIRING CONFIGURATION



ONLY COMPATIBLE WITH AUTOMATIC TRANSMISSION VEHICLES.



Vehicle functions supported in this diagram (functional if equipped)

VEHICLE	YEARS	Immobilizer bypass	Lock	Unlock	Arm	Disarm	RAP Disable	Parking Lights	Tachometer	Heated seats	Heated Mirrors	Rear defrost	Door Status	Trunk Status	Hood Status*	Hand-Brake Status	Foot-Brake Status	Active OEM Remote Start
FORD																		
F-150	Key 2015-2019	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
F-250	Key 2017-2019	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
F-350	Key 2017-2019	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
F-450	Key 2017-2019	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
F-550	Key 2017	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•

FIRMWARE VERSION

4.01

ONLY - SEULEMENT

To add the firmware version and the options, use the **FLASH LINK UPDATER** or **FLASH LINK MOBILE** tool, sold separately.

		UNIT OPTION	DESCRIPTION
	Program bypass option IF THE VEHICLE IS NOT EQUIPPED WITH FUNCTIONAL HOOD PIN:	A11	OFF Hood trigger (Output Status).

		UNIT OPTION	DESCRIPTION
	Program bypass option:	C1	OEM Remote status (Lock/Unlock) monitoring



Parts required (Not included)

1x THAR-FOR3



The vehicle must be equipped with the OEM remote with the door locks.

MANDATORY INSTALL

*HOOD PIN



HOOD STATUS: THE HOOD PIN SWITCH MUST BE INSTALLED IF THE VEHICLE CAN BE REMOTE STARTED WITH THE HOOD OPEN, SET FUNCTION A11 TO OFF.

A11

OFF

Notice: the installation of safety elements are mandatory. The hood pin is an essential security element and must be installed.



THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.

DESCRIPTION




② Parking Lights switch


① Gateway module, located at dash board driver's side,

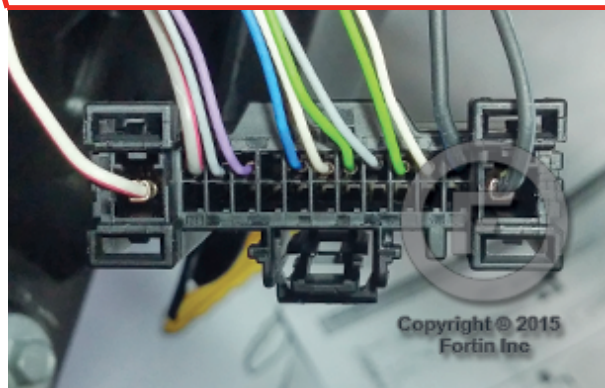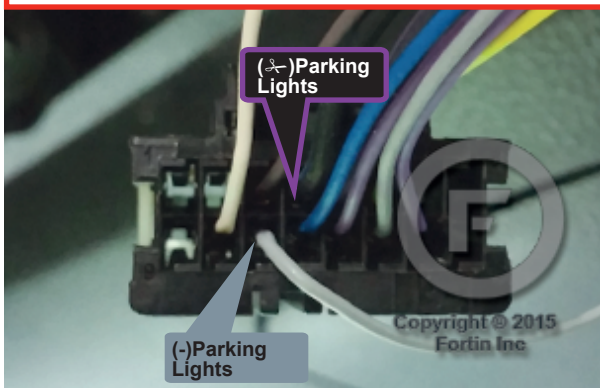


④ Under the hood If not equipped with hood pin.

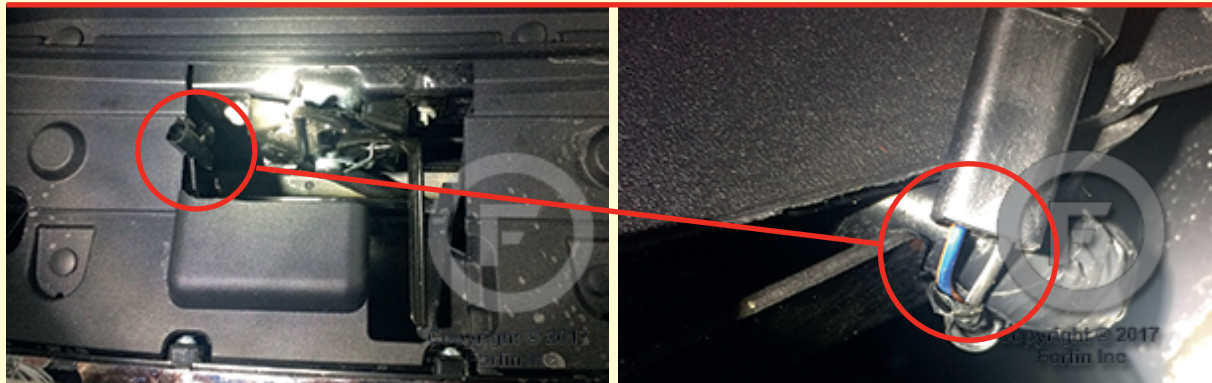

AUTOMATIC TRANSMISSION WIRING CONNECTION

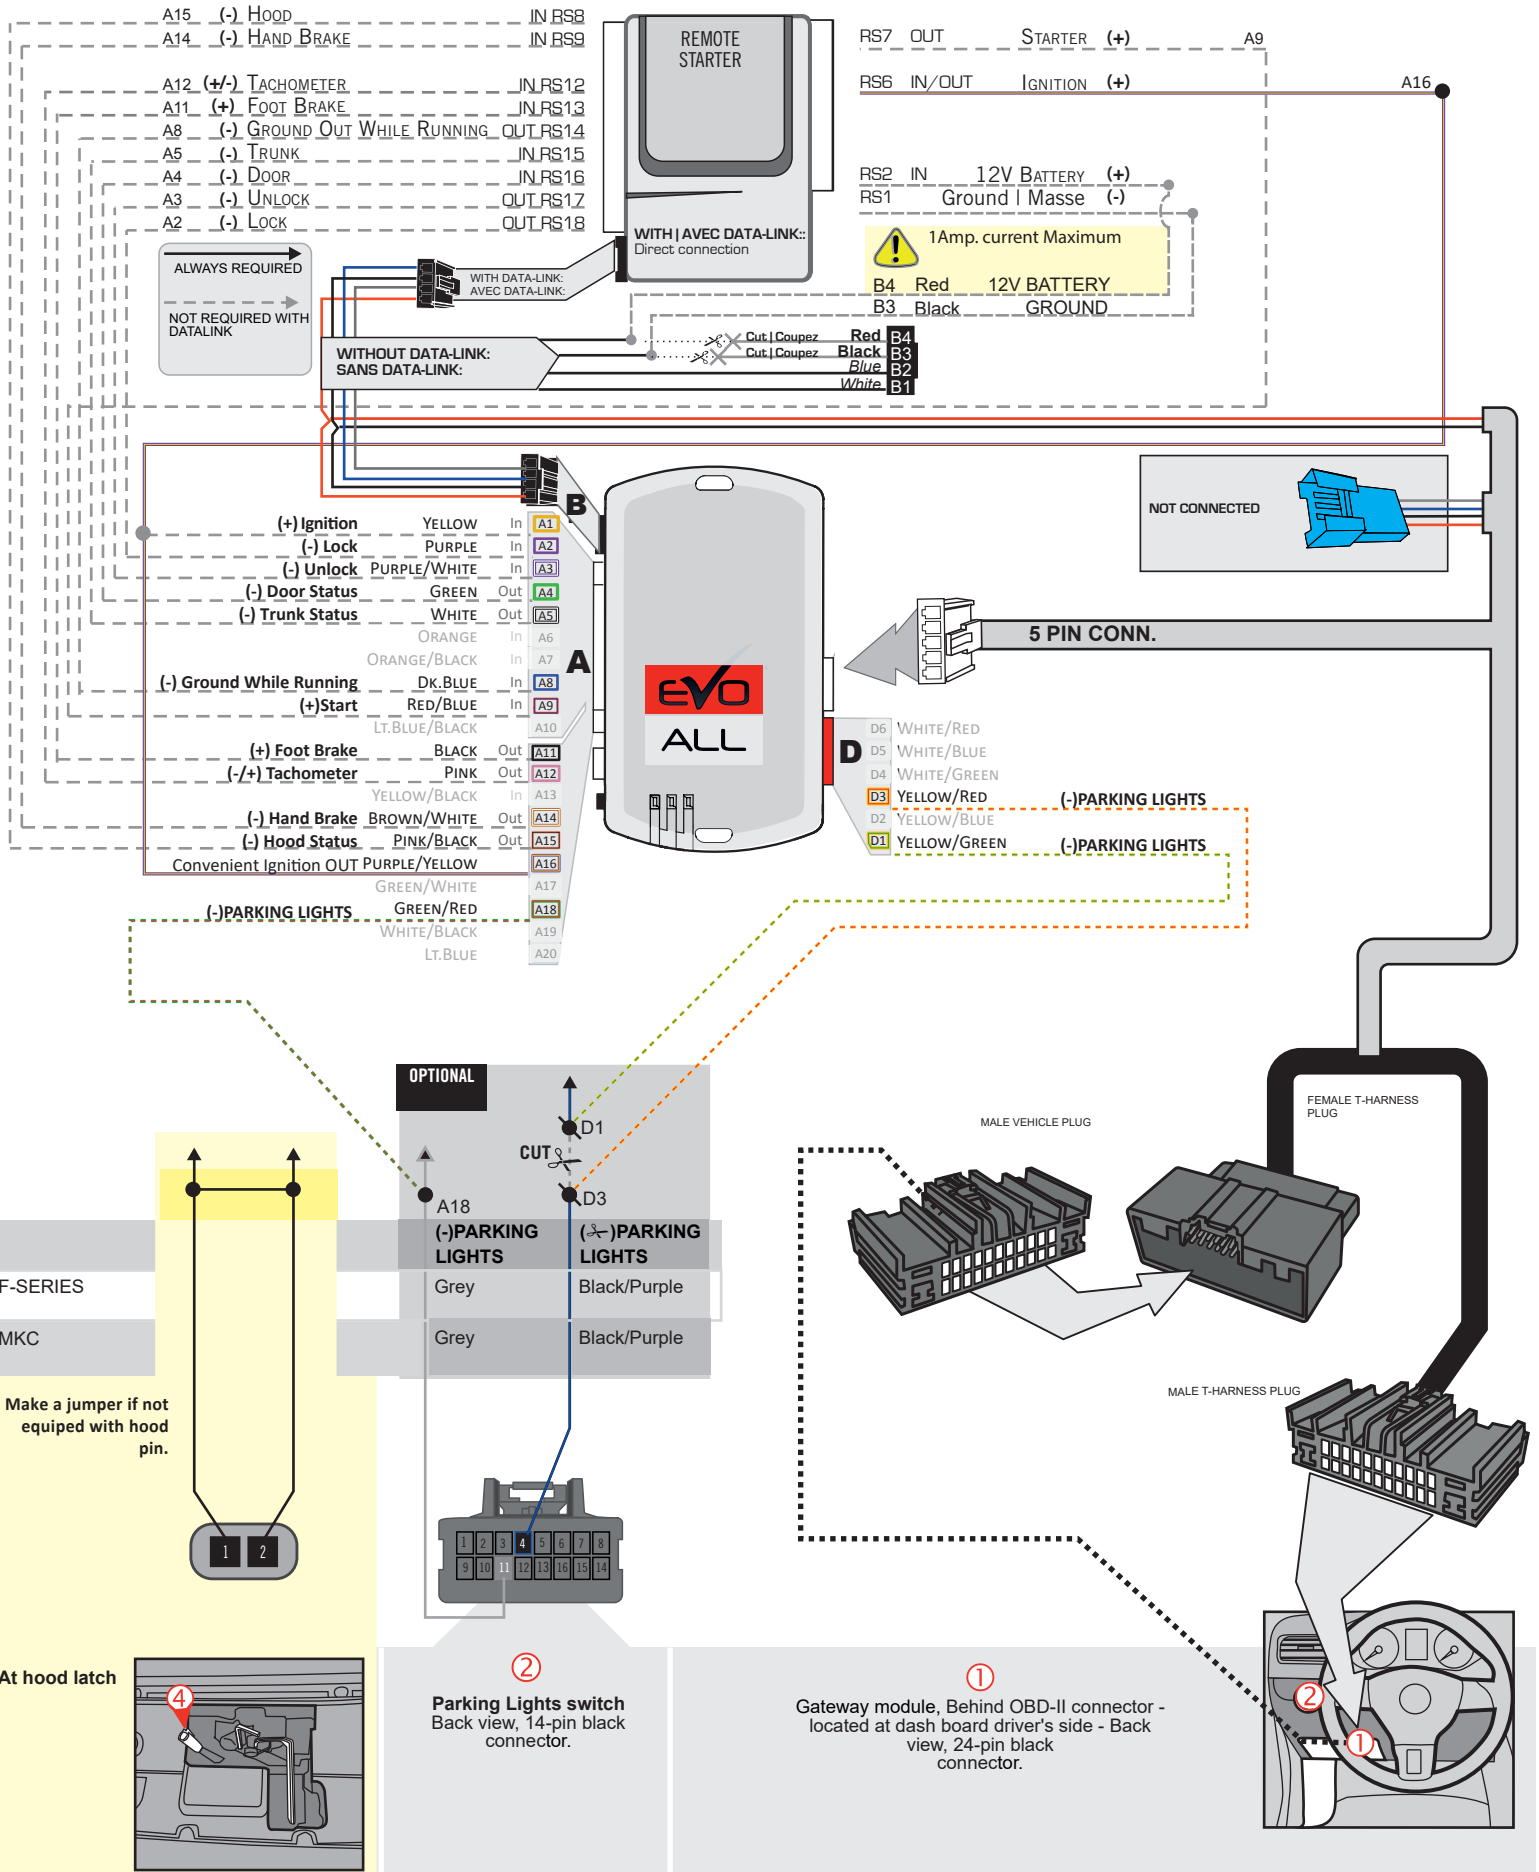


PROGRAMMING PROCEDURE

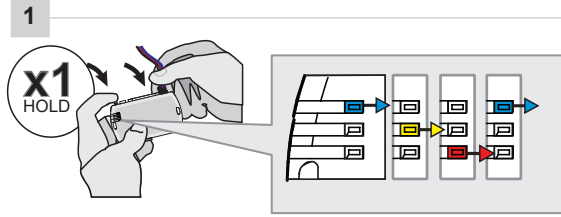



Press and hold the programming button:
Insert the 4-Pin (Data-Link) connector.

↳ The Blue, Red, Yellow and Blue & Red LEDs will alternatively illuminate.

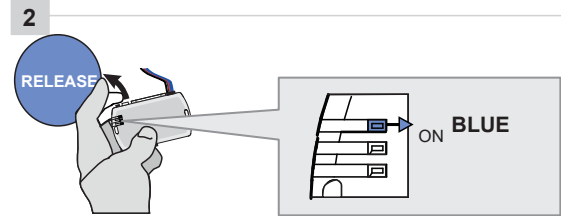


Release the programming button when the LED is BLUE.

If the LED is not solid BLUE disconnect the 4-Pin connector (Data-Link) and go back to step 1.

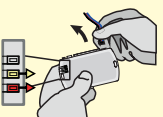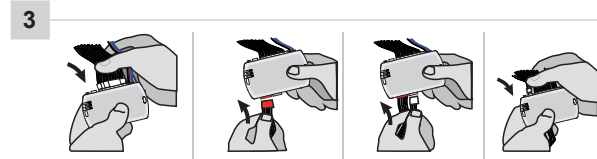



Insert the required remaining connectors.

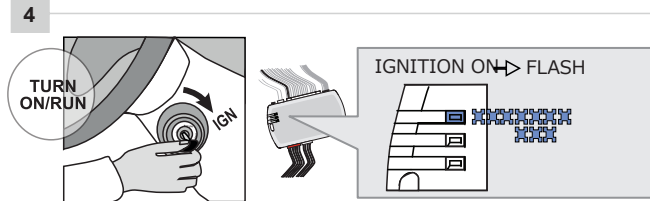


Turn the key to the Ignition ON/RUN position.

↳ The BLUE LED will flash rapidly.

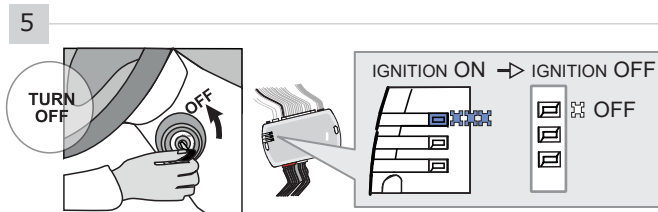


Turn the key to the OFF position.

↳ The BLUE LED will turn off.

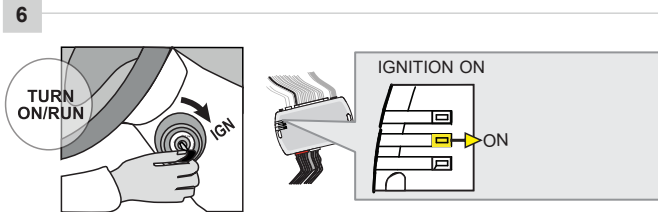


Turn the key to the Ignition ON/RUN position.


↳ The YELLOW LED will turn ON.



Wait 5 seconds.

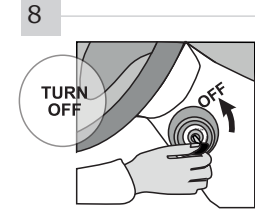

Turn the key to the OFF position.



The module is now programmed.

REMOTE STARTER FUNCTIONALITY



 
All doors must be closed.



Remote start the vehicle.



Unlock the doors with the remote-starter remote or the OEM remote.



Insert and Turn the key to the Ignition ON/RUN position.



Press the brake pedal.



The vehicle can now be put in to gear and driven.

THAR-FOR3 THARNNESS INSTALLATION

ADDENDUM - SUGGESTED WIRING CONFIGURATION



ONLY COMPATIBLE WITH AUTOMATIC TRANSMISSION VEHICLES.



Vehicle functions supported in this diagram (functional if equipped)

VEHICLE	YEARS	Immobilizer bypass	Lock	Unlock	Arm	Disarm	RAP Disable	Parking Lights	Tachometer	Heated seats	Heated Mirrors	Rear defrost	Door Status	Trunk Status	Hood Status*	Hand-Brake Status	Foot-Brake Status	Active OEM Remote Start	
FORD																			
Fusion	Push-to-Start	2014-2019	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
	Hybrid Push-to-Start	2014-2019	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
LINCOLN																			
Continental	Push-to-Start	2017-2019	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
MKZ	Push-to-Start	2013-2019	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
	Hybrid Push-to-Start	2013-2019	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•



4.01

ONLY - SEULEMENT

To add the firmware version and the options, use the **FLASH LINK UPDATER** or **FLASH LINK MOBILE** tool, sold separately.

EVO ALL	Program bypass option IF THE VEHICLE IS NOT EQUIPPED WITH FUNCTIONAL HOOD PIN:	UNIT OPTION	DESCRIPTION
		A11	OFF
EVO ALL	Program bypass option:	UNIT OPTION	DESCRIPTION
		C1	OEM Remote status (Lock/Unlock) monitoring
EVO ALL	Program bypass option (Vehicle hybrid only):	UNIT OPTION	DESCRIPTION
		D4	Hybrid mode (Vehicle hybrid only)



Parts required (Not included)

1x THAR-FOR3

MANDATORY INSTALL

*HOOD PIN



HOOD STATUS: THE HOOD PIN SWITCH MUST BE INSTALLED IF THE VEHICLE CAN BE REMOTE STARTED WITH THE HOOD OPEN, SET FUNCTION A11 TO OFF.

A11

OFF

Notice: the installation of safety elements are mandatory. The hood pin is an essential security element and must be installed.

THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.

DESCRIPTION





②


Parking Lights switch

①


Gateway module, Behind
OBD-II connector

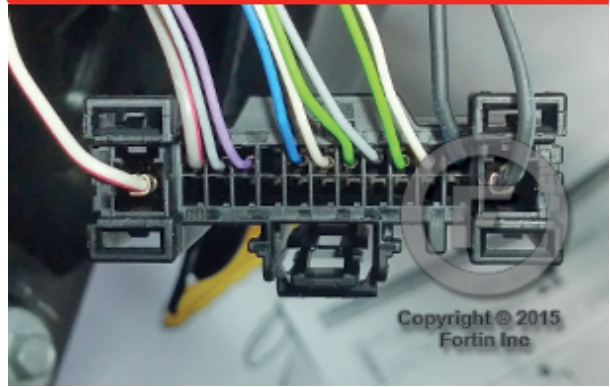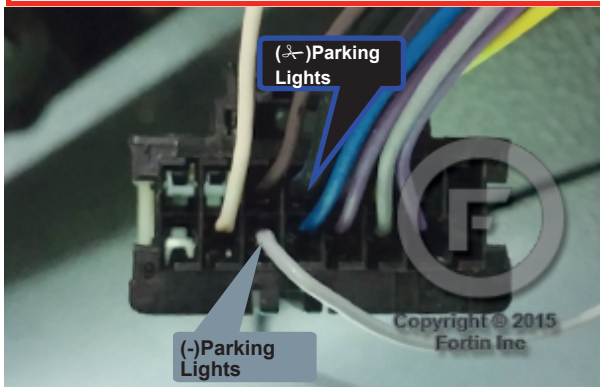

AUTOMATIC TRANSMISSION WIRING CONNECTION

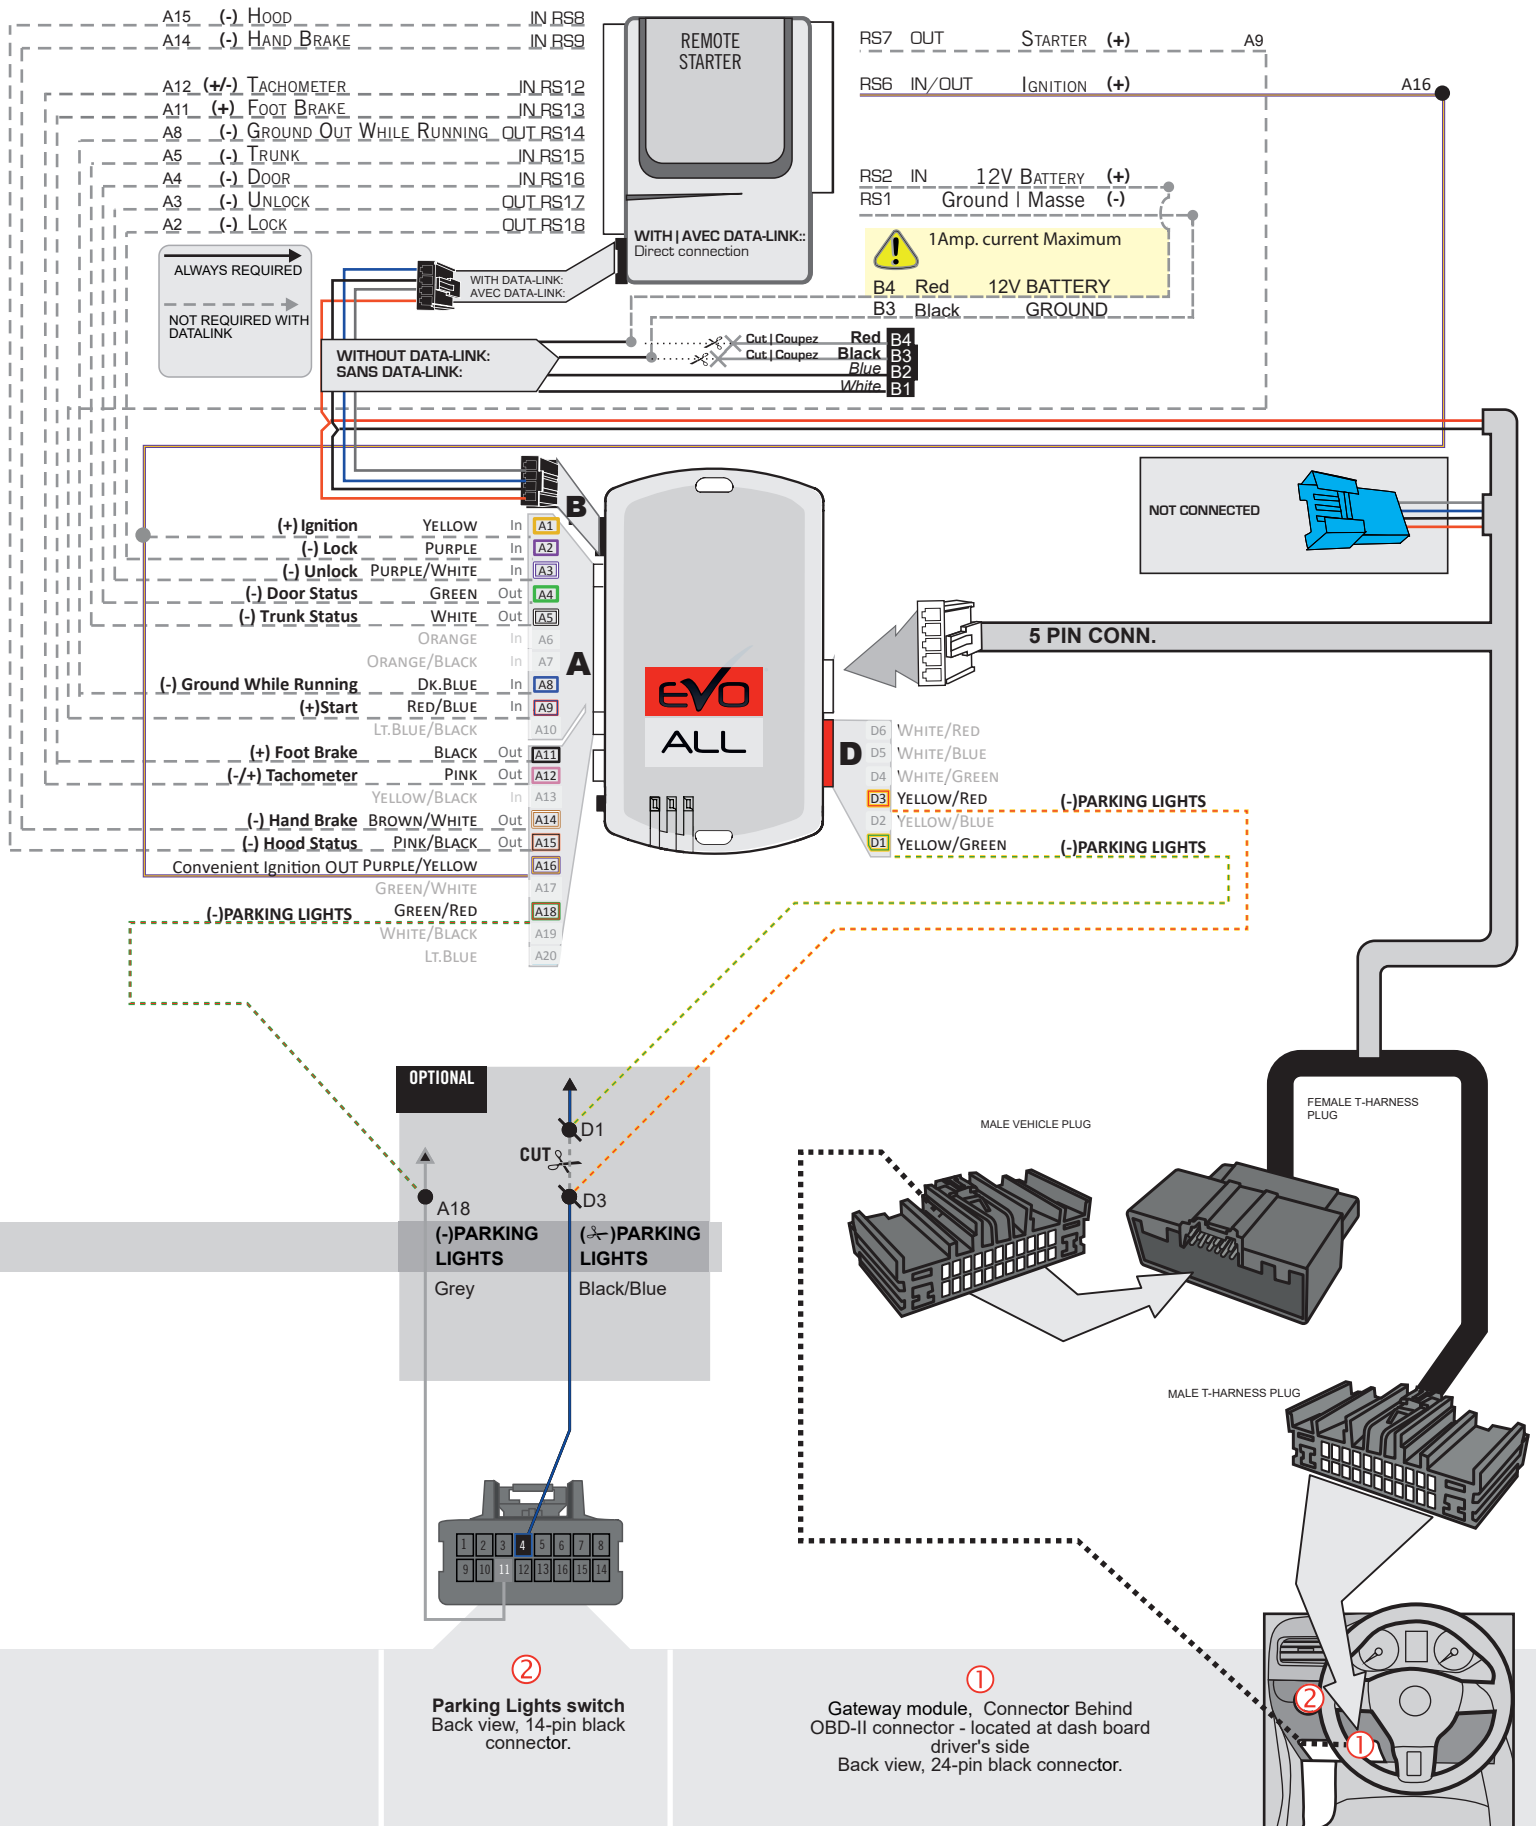


PROGRAMMING PROCEDURE

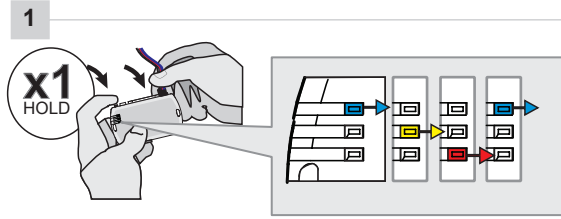



Press and hold the programming button:
Insert the 4-Pin (Data-Link) connector.

↳ The Blue, Red, Yellow and Blue & Red LEDs will alternatively illuminate.

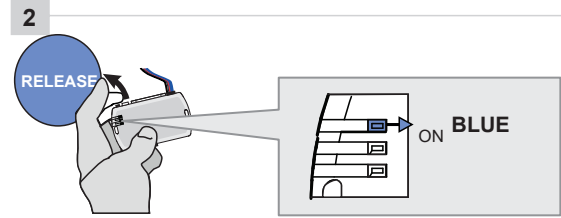


Release the programming button when the LED is BLUE.

If the LED is not solid BLUE disconnect the 4-Pin connector (Data-Link) and go back to step 1.

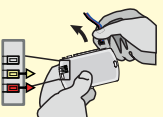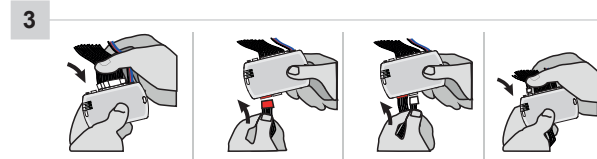



Insert the required remaining connectors.

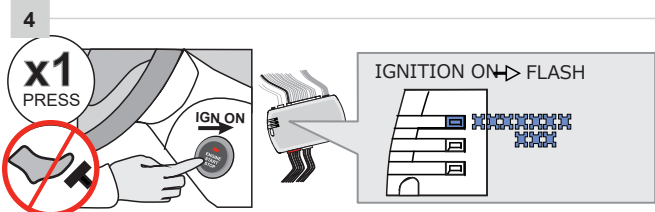


Do not press the brake pedal.
Press the Push-to-Start button once to turn on the ignition.

↳ The BLUE LED will flash rapidly.

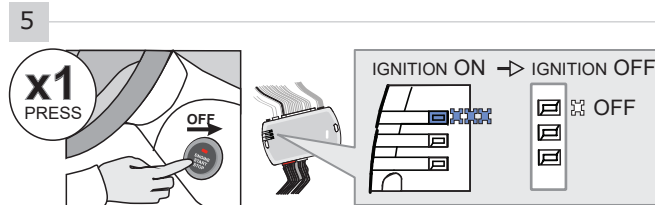



Press the Push-to-Start button once to turn off the ignition.

↳ The BLUE LED will turn off.

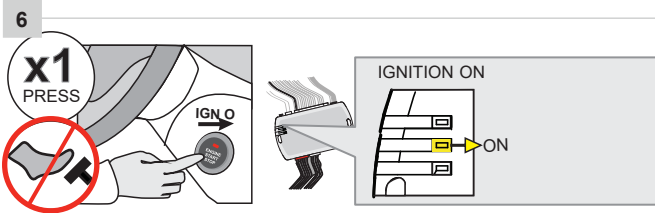

Do not press the brake pedal.
Press the Push-to-Start button once to turn on the ignition.

↳ The YELLOW LED will turn ON.

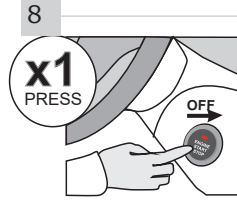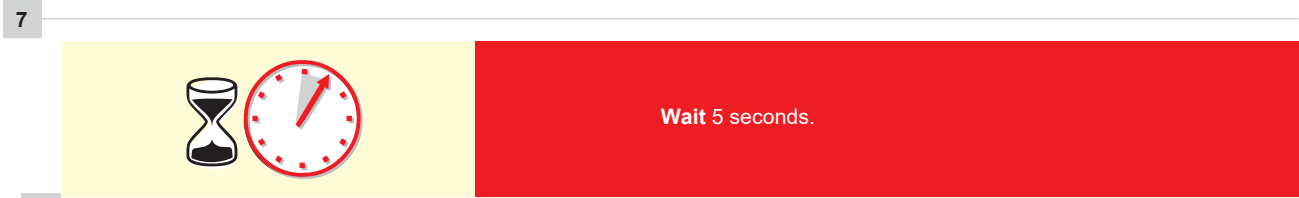

Press the Push-to-Start button once to turn off the ignition.



REMOTE STARTER FUNCTIONALITY



All doors must be closed.

 


Remote start the vehicle.



Unlock the doors with either:

- The OEM remote
- The remote-starter remote
- Or the proximity remote



Enter the vehicle with the SMART-KEY.



DO NOT PRESS THE BRAKE PEDAL.

Press and release the Push-to-Start button once.



Press the brake pedal. The vehicle can now be put in to gear and driven.
If the Smart-Key is not detected the vehicle will shut down.

**THAR-FOR3 THARNNESS
INSTALLATION**

ADDENDUM - SUGGESTED WIRING CONFIGURATION



ONLY COMPATIBLE WITH AUTOMATIC TRANSMISSION VEHICLES.

VEHICLE	YEARS	Vehicle functions supported in this diagram (functional if equipped)																	
		Immobilizer bypass	Lock	Unlock	Arrn	Disarm	RAP Disable	Parking Lights	Tachometer	Heated seats	Heated Mirrors	Rear defrost	Door Status	Trunk Status	Hood Status*	Hand-Brake Status	Foot-Brake Status	Active OEM Remote Start	
FORD																			
Fusion	Key 2014-2019	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
	Hybrid Key 2014-2019	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•

FIRMWARE VERSION

4.01

ONLY - SEULEMENT

To add the firmware version and the options, use the **FLASH LINK UPDATER** or **FLASH LINK MOBILE** tool, sold separately.

evo ALL	Program bypass option IF THE VEHICLE IS NOT EQUIPPED WITH FUNCTIONAL HOOD PIN:	UNIT OPTION	DESCRIPTION
		A11	OFF
evo ALL	Program bypass option:	UNIT OPTION	DESCRIPTION
		C1	OEM Remote status (Lock/Unlock) monitoring
evo ALL	Program bypass option (Vehicle hybrid only):	UNIT OPTION	DESCRIPTION
		D4	Hybrid mode (Vehicle hybrid only)



Parts required (Not included)

1x THAR-FOR3



The vehicle must be equipped with the OEM remote with the door locks.

MANDATORY INSTALL

*HOOD PIN



HOOD STATUS: THE HOOD PIN SWITCH MUST BE INSTALLED IF THE VEHICLE CAN BE REMOTE STARTED WITH THE HOOD OPEN, SET FUNCTION **A11** TO OFF.

A11

OFF

Notice: the installation of safety elements are mandatory. The hood pin is an essential security element and must be installed.



THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.

DESCRIPTION




② Parking Lights switch


① Gateway module, Behind OBD-II connector

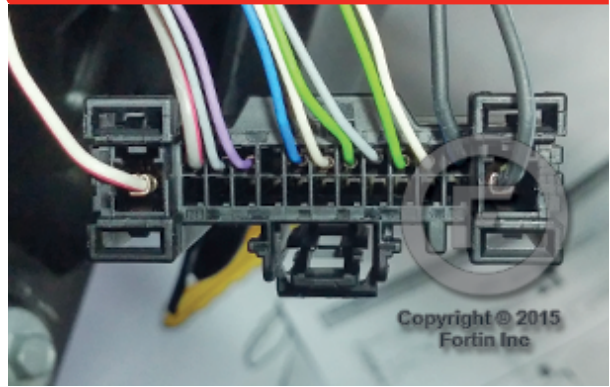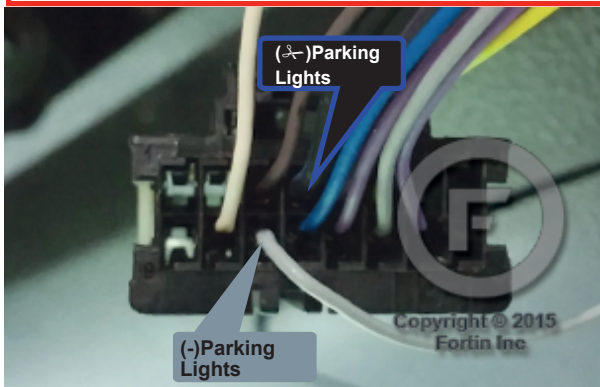

AUTOMATIC TRANSMISSION WIRING CONNECTION

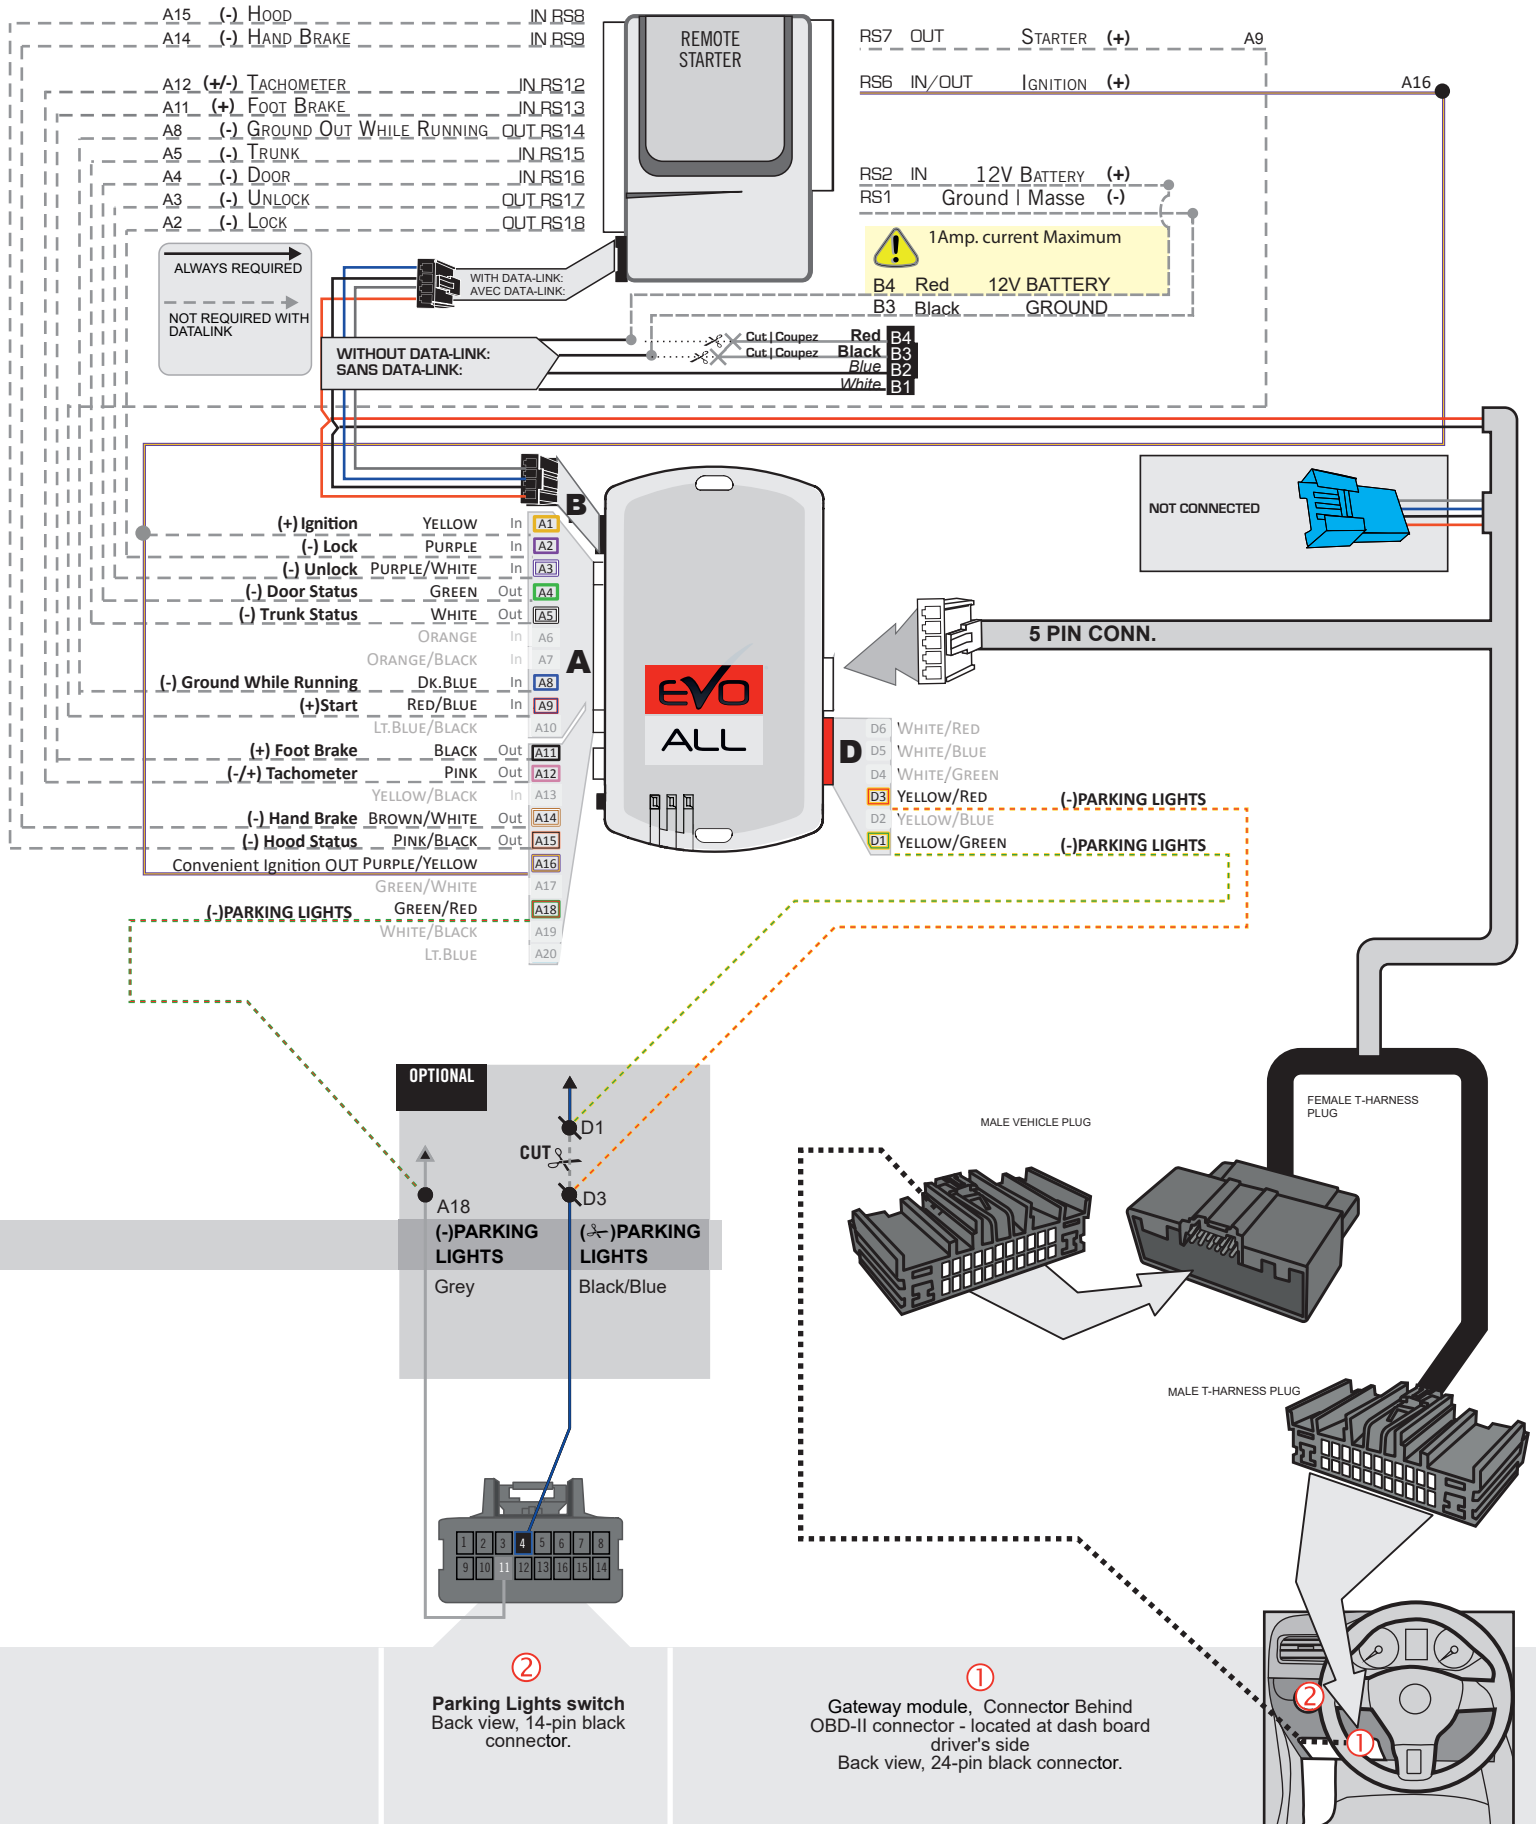


PROGRAMMING PROCEDURE

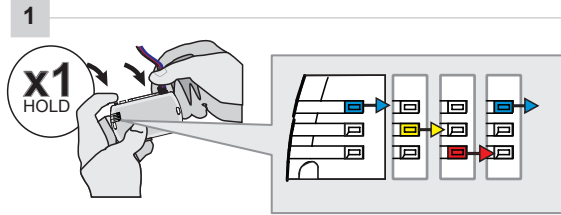



Press and hold the programming button:
Insert the 4-Pin (Data-Link) connector.

↳ The Blue, Red, Yellow and Blue & Red LEDs will alternatively illuminate.

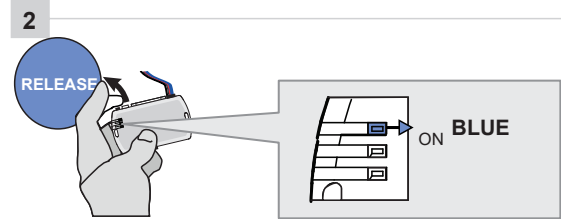


Release the programming button when the LED is BLUE.

If the LED is not solid BLUE disconnect the 4-Pin connector (Data-Link) and go back to step 1.

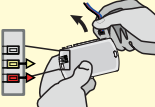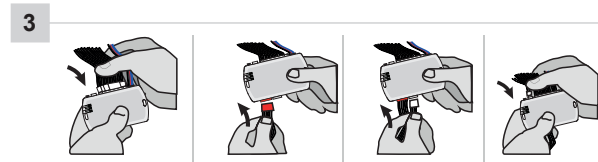



Insert the required remaining connectors.

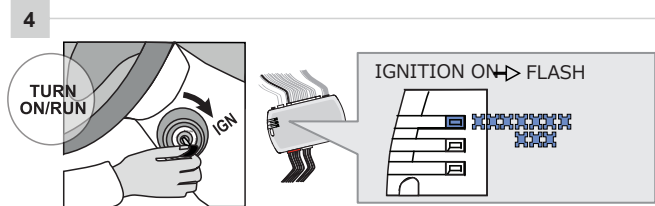


Turn the key to the Ignition ON/RUN position.

↳ The BLUE LED will flash rapidly.

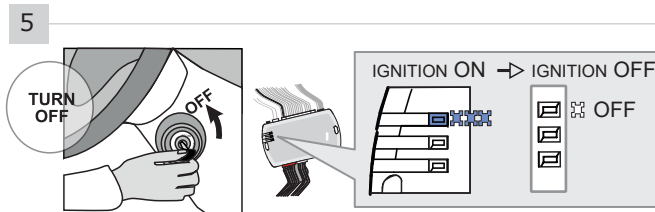


Turn the key to the OFF position.

↳ The BLUE LED will turn off.

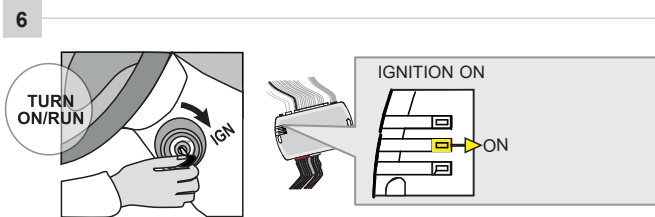


Turn the key to the Ignition ON/RUN position.

↳ The YELLOW LED will turn ON.



Wait 5 seconds.

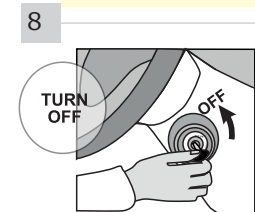

Turn the key to the OFF position.



The module is now programmed.

REMOTE STARTER FUNCTIONALITY



All doors must be closed.



Remote start the vehicle.



Unlock the doors with the remote-starter remote or the OEM remote.



Insert and Turn the key to the Ignition ON/RUN position.



Press the brake pedal.



The vehicle can now be put in to gear and driven.

**THAR-FOR3 THARNESSE
INSTALLATION**

ADDENDUM - SUGGESTED WIRING CONFIGURATION



ONLY COMPATIBLE WITH AUTOMATIC TRANSMISSION VEHICLES.



Vehicle functions supported in this diagram (functional if equipped)

VEHICLE	YEARS	Immobilizer bypass	Lock	Unlock	Arm	Disarm	RAP Disable	Parking Lights	Tachometer	Heated seats	Heated Mirrors	Rear defrost	Door Status	Trunk Status	Hood Status*	Hand-Brake Status	Foot-Brake Status	Active OEM Remote Start	
FORD																			
Mondeo	Key 2013-2015	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•



FIRMWARE VERSION

4.01

ONLY - SEULEMENT

To add the firmware version and the options, use the **FLASH LINK UPDATER** or **FLASH LINK MOBILE** tool, sold separately.



Program bypass option:

UNIT OPTION

C1

DESCRIPTION

OEM Remote status (Lock/Unlock) monitoring

IF THE VEHICLE IS NOT EQUIPPED WITH FUNCTIONAL HOOD PIN:

A11

OFF

 
Hood trigger (Output Status).



Parts required (Not included)

1x THAR-FOR3

NOTES



The vehicle must be equipped with the OEM remote with the door locks.

MANDATORY INSTALL

*HOOD PIN



HOOD STATUS: THE HOOD PIN SWITCH MUST BE INSTALLED IF THE VEHICLE CAN BE REMOTE STARTED WITH THE HOOD OPEN, SET FUNCTION **A11** TO OFF.

A11

OFF

Notice: the installation of safety elements are mandatory. The hood pin is an essential security element and must be installed.


THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.

DESCRIPTION


① Gateway module, located at dash board driver's side,




② Parking Lights switch

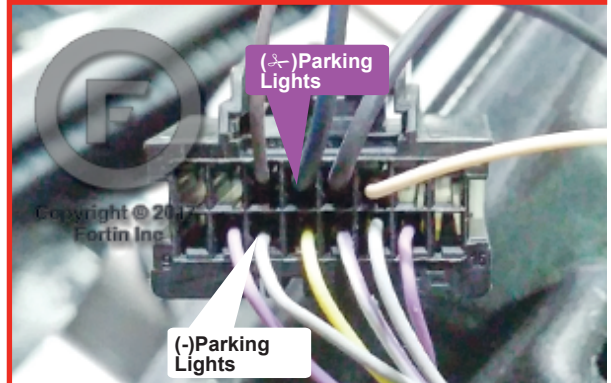


AUTOMATIC TRANSMISSION WIRING CONNECTION

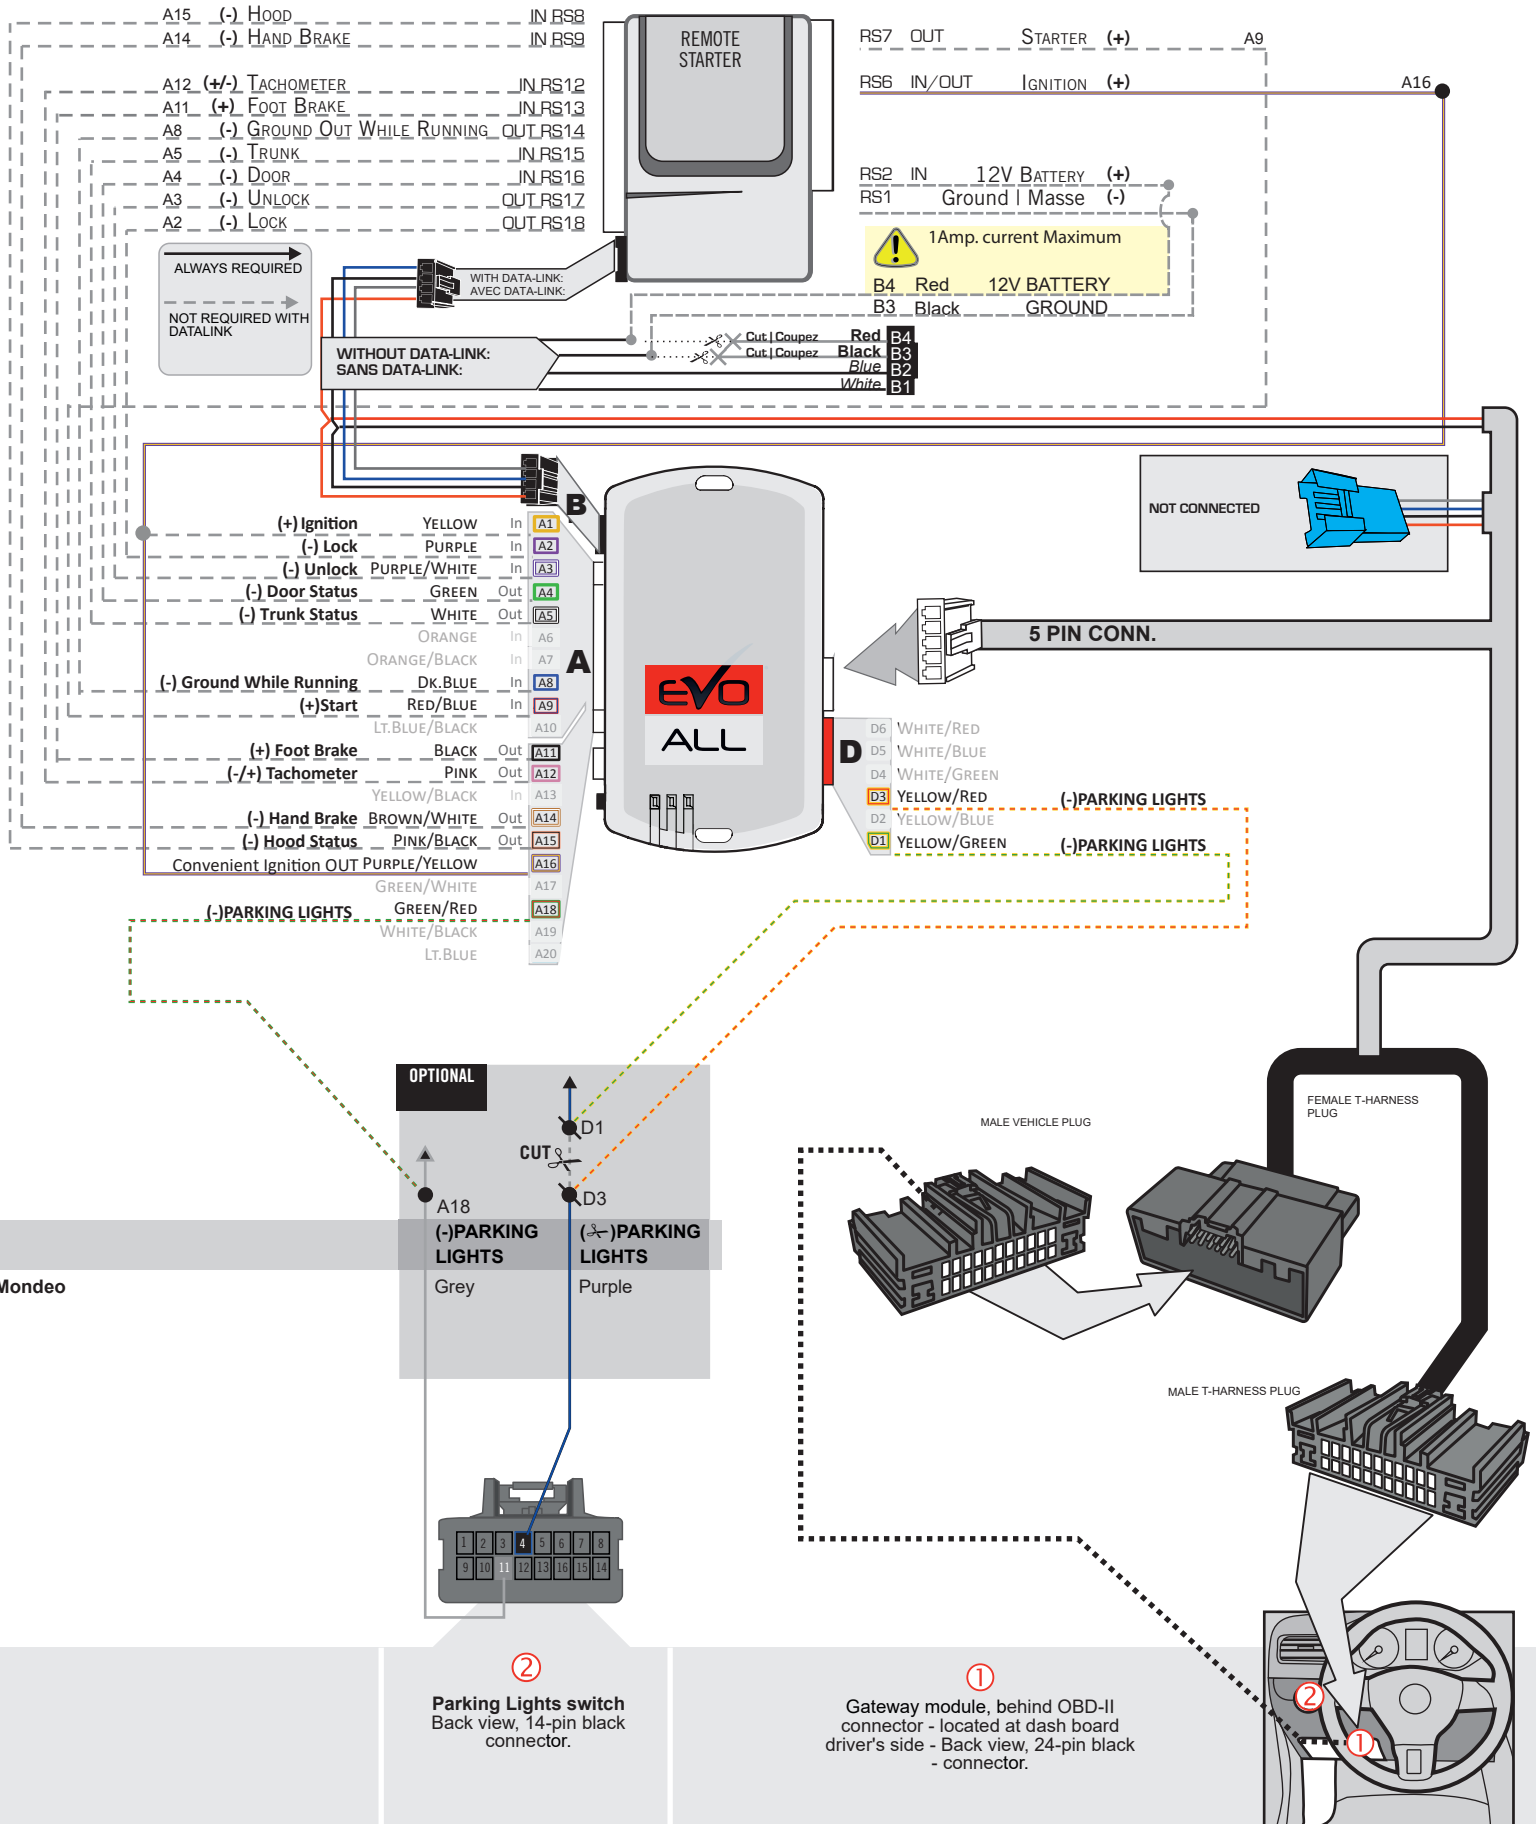

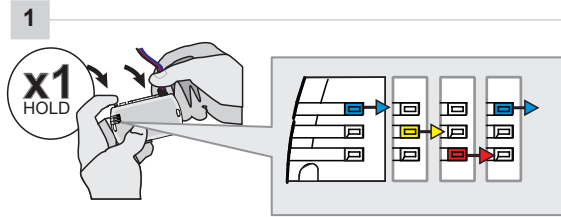



Press and hold the programming button:
Insert the 4-Pin (Data-Link) connector.

↳ The Blue, Red, Yellow and Blue & Red LEDs will alternatively illuminate.

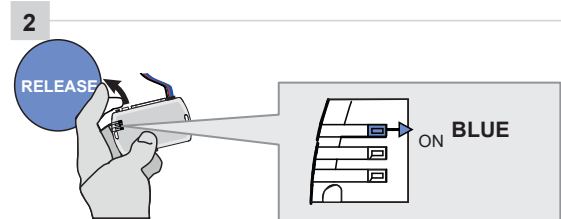


Release the programming button when the LED is BLUE.

If the LED is not solid BLUE disconnect the 4-Pin connector (Data-Link) and go back to step 1.

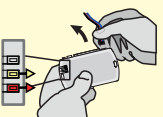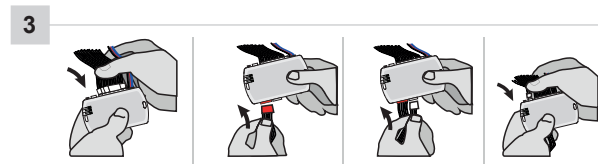



Insert the required remaining connectors.

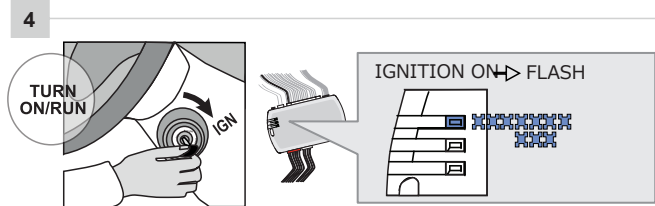


Turn the key to the Ignition ON/RUN position.

↳ The BLUE LED will flash rapidly.

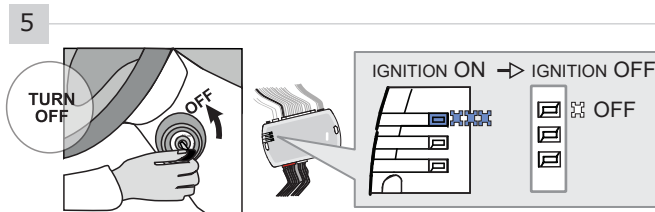


Turn the key to the OFF position.

↳ The BLUE LED will turn off.

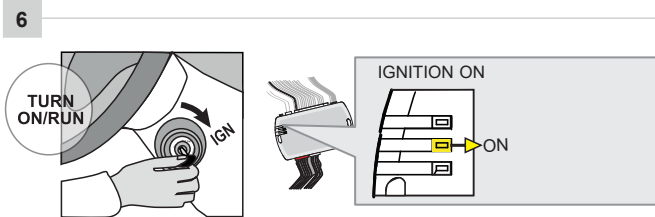


Turn the key to the Ignition ON/RUN position.


↳ The YELLOW LED will turn ON.



Wait 5 seconds.

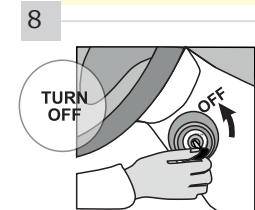

Turn the key to the OFF position.



The module is now programmed.

REMOTE STARTER FUNCTIONALITY



 
All doors must be closed.



Remote start the vehicle.



Unlock the doors with the remote-starter remote or the OEM remote.



Insert and Turn the key to the Ignition ON/RUN position.



Press the brake pedal.



The vehicle can now be put in to gear and driven.

THAR-FOR3 THARNNESS INSTALLATION

ADDENDUM - SUGGESTED WIRING CONFIGURATION

VEHICLE	YEARS	Vehicle functions supported in this diagram (functional if equipped)														
		KEY CONTROL	T-Harness	Lock	Unlock	Arm	Disarm	RAP Disable	Parking Lights	Tachometer	Door Status	Trunk Status	Hood Status*	Hand-Brake Status	Foot-Brake Status	OEM Remote monitoring
FORD																
Mustang	PTS 2015-2018	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•



	HARDWARE VERSION	FIRMWARE VERSION	To add the firmware version and the options, use the FLASH LINK UPDATER or FLASH LINK MOBILE tool, sold separately.
	MINIMUM 6	4.05 <small>ONLY - SEULEMENT</small>	

	Program bypass option IF THE VEHICLE IS NOT EQUIPPED WITH FUNCTIONAL HOOD PIN:	UNIT OPTION	DESCRIPTION
		A11	OFF

	Program bypass option:	UNIT OPTION	DESCRIPTION
		C1	OEM Remote status (Lock/Unlock) monitoring
		D6	Push-to-Start

Parts required (Not included)	
1X	Vehicle key
1X	7.5 Amp. Fuse
1X	Relay
1X	Diode

MANDATORY INSTALL

***HOOD PIN**


HOOD STATUS: THE HOOD PIN SWITCH MUST BE INSTALLED IF THE VEHICLE CAN BE REMOTE STARTED WITH THE HOOD OPEN, SET FUNCTION **A11** TO OFF.




A11	OFF
------------	------------

Notice: the installation of safety elements are mandatory. The hood pin is an essential security element and must be installed.


THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.

DESCRIPTION


③ ④ BCM, Passenger kick panel

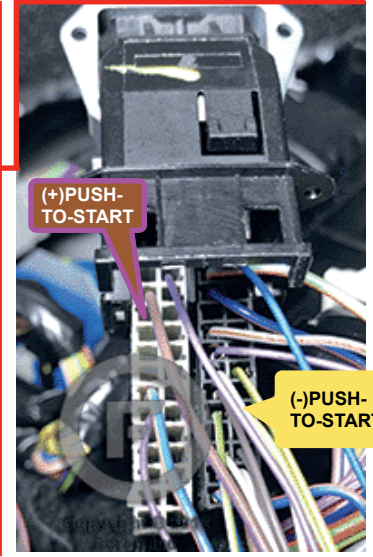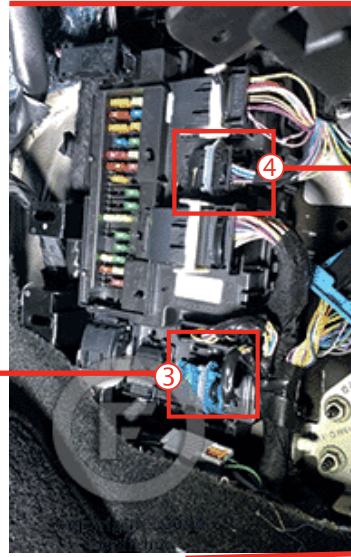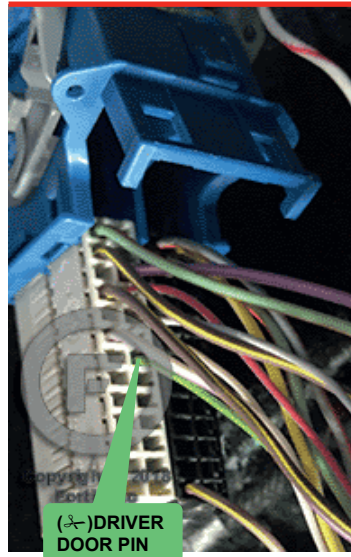


② Parking Lights switch

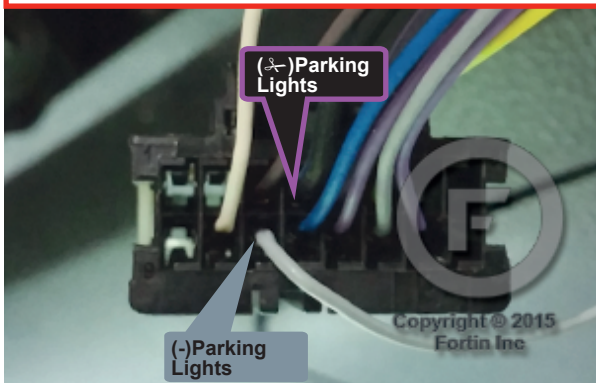

① Gateway module, located at right of steering column.

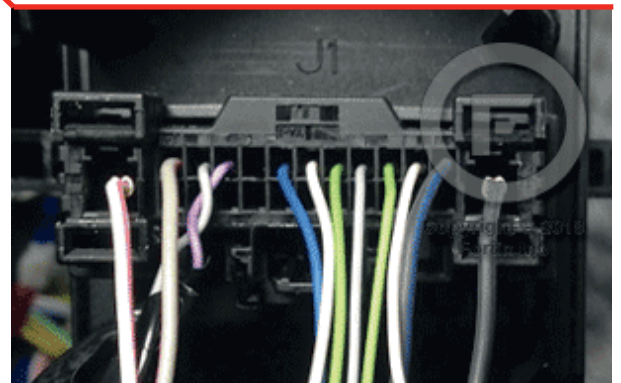

AUTOMATIC TRANSMISSION WIRING CONNECTION

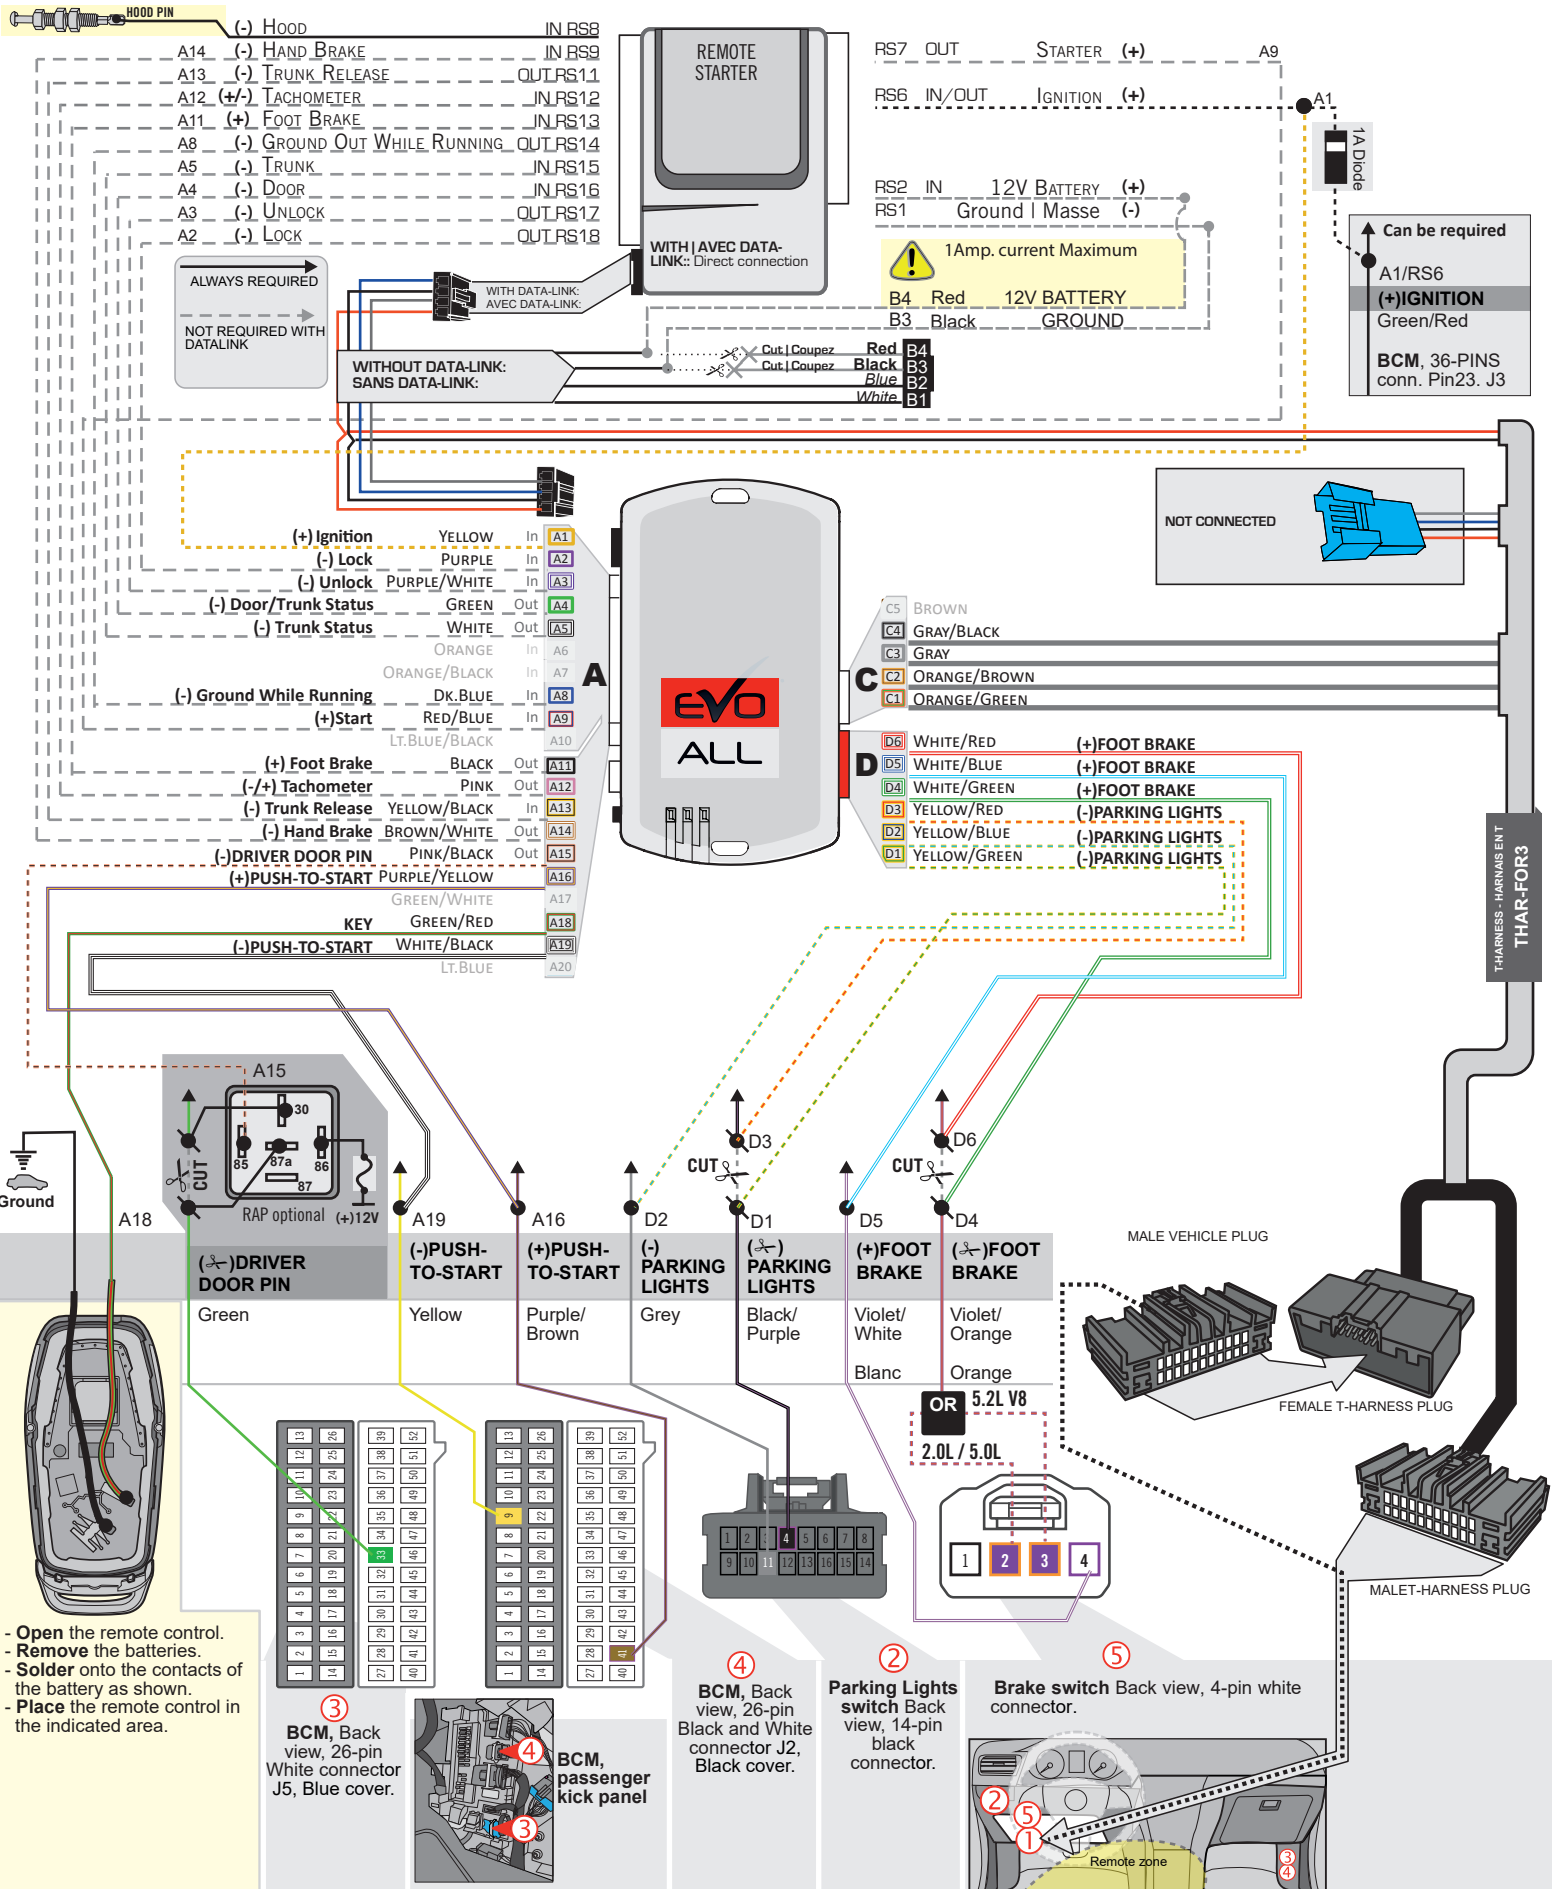

- Open the remote control.
- Remove the batteries.
- Solder onto the contacts of the battery as shown.
- Place the remote control in the indicated area.


③ BCM, Back view, 26-pin White connector J5, Blue cover.

④ BCM, passenger kick panel

④ BCM, Back view, 26-pin Black and White connector J2, Black cover.


② Parking Lights switch Back view, 14-pin black connector.

⑤ Brake switch Back view, 4-pin white connector.

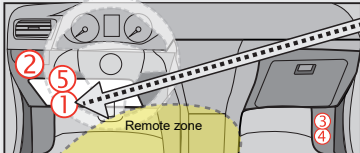

PROGRAMMING PROCEDURE


1

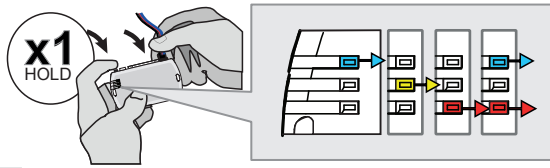

Press and hold the programming button:
Connect the 4-Pin Data-link connector.


↳ The BLUE, RED, YELLOW and BLUE & RED LEDs will alternatively illuminate.

2

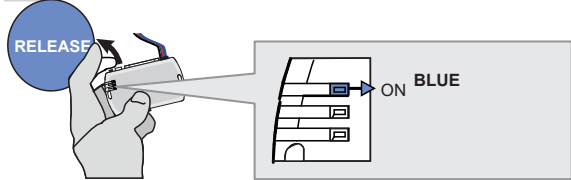


Release the programming button when the LED is BLUE.

 Relâchez le bouton de programmation quand la DEL est BLEU.




3

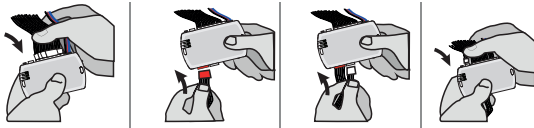


Insert the required remaining connectors.

4

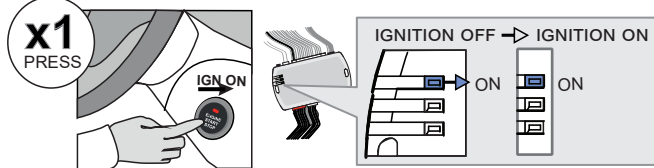

Press the Push-to-Start button to turn ON the ignition.

5

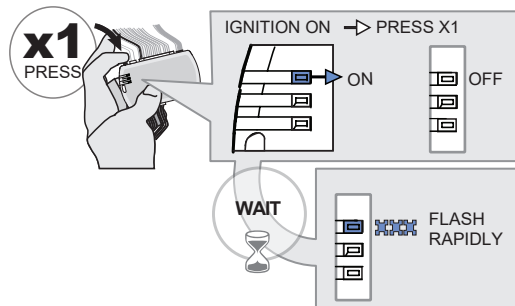


Press and release the programming button once (1x).

↳ The BLUE LED will turn off.

Wait,

↳ The BLUE LED will flash rapidly.

6

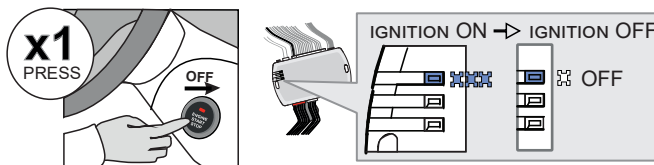

Press the Push-to-Start button once to turn off the ignition.

↳ The BLUE LED will turn off.



The module is now programmed.

REMOTE STARTER FUNCTIONALITY



All doors must be closed.



Remote start the vehicle.



Unlock the doors with either:

- The OEM remote
- The remote-starter remote
- Or the proximity remote



Enter the vehicle with the Intelligent Key.



The vehicle can now be put in to gear and driven.

If the vehicle is not unlocked with one of these conditions the remote-starter will shut down as soon as any door is opened.



THAR-FOR3 THARNESSE

INSTALLATION HARNAIS THAR-FOR3

ADDENDUM - SUGGESTED WIRING CONFIGURATION


ONLY COMPATIBLE WITH AUTOMATIC TRANSMISSION VEHICLES.


VEHICLE

YEARS

Vehicle functions supported in this diagram (functional if equipped)

VEHICLE	YEARS	Immobilizer bypass	Lock	Unlock	Armn	Disarm	RAP Disable	Parking Lights	Tachometer	Heated seats	Heated Mirrors	Rear defrost	Door Status	Trunk Status	Hood Status*	Hand-Brake Status	Foot-Brake Status	Active OEM Remote Start	
LINCOLN																			
Nautilus	Push-to-Start 2019	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
Navigator	Push-to-Start 2018-2019	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•



FIRMWARE VERSION

4.01

ONLY - SEULEMENT

 To add the firmware version and the options, use the **FLASH LINK UPDATER** or **FLASH LINK MOBILE** tool, sold separately.


Program bypass option:

UNIT OPTION

DESCRIPTION

C1

OEM Remote status (Lock/Unlock) monitoring

D6

Push-to-Start

IF THE VEHICLE IS NOT EQUIPPED WITH FUNCTIONAL HOOD PIN:
A11
OFF

Hood trigger (Output Status).


Parts required (Not included)

1x THAR-FOR3

MANDATORY INSTALL

*HOOD PIN


HOOD STATUS: THE HOOD PIN SWITCH MUST BE INSTALLED IF THE VEHICLE CAN BE REMOTE STARTED WITH THE HOOD OPEN, SET FUNCTION **A11** TO OFF.

A11
OFF
Notice: the installation of safety elements are mandatory. The hood pin is an essential security element and must be installed.



THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.

DESCRIPTION




② Parking Lights switch


① Gateway module, Behind OBD-II connector II

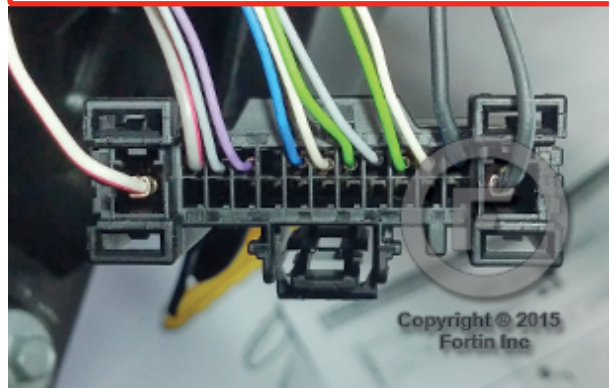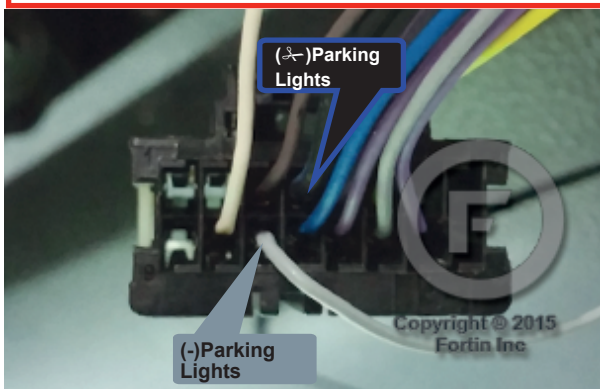

AUTOMATIC TRANSMISSION WIRING CONNECTION

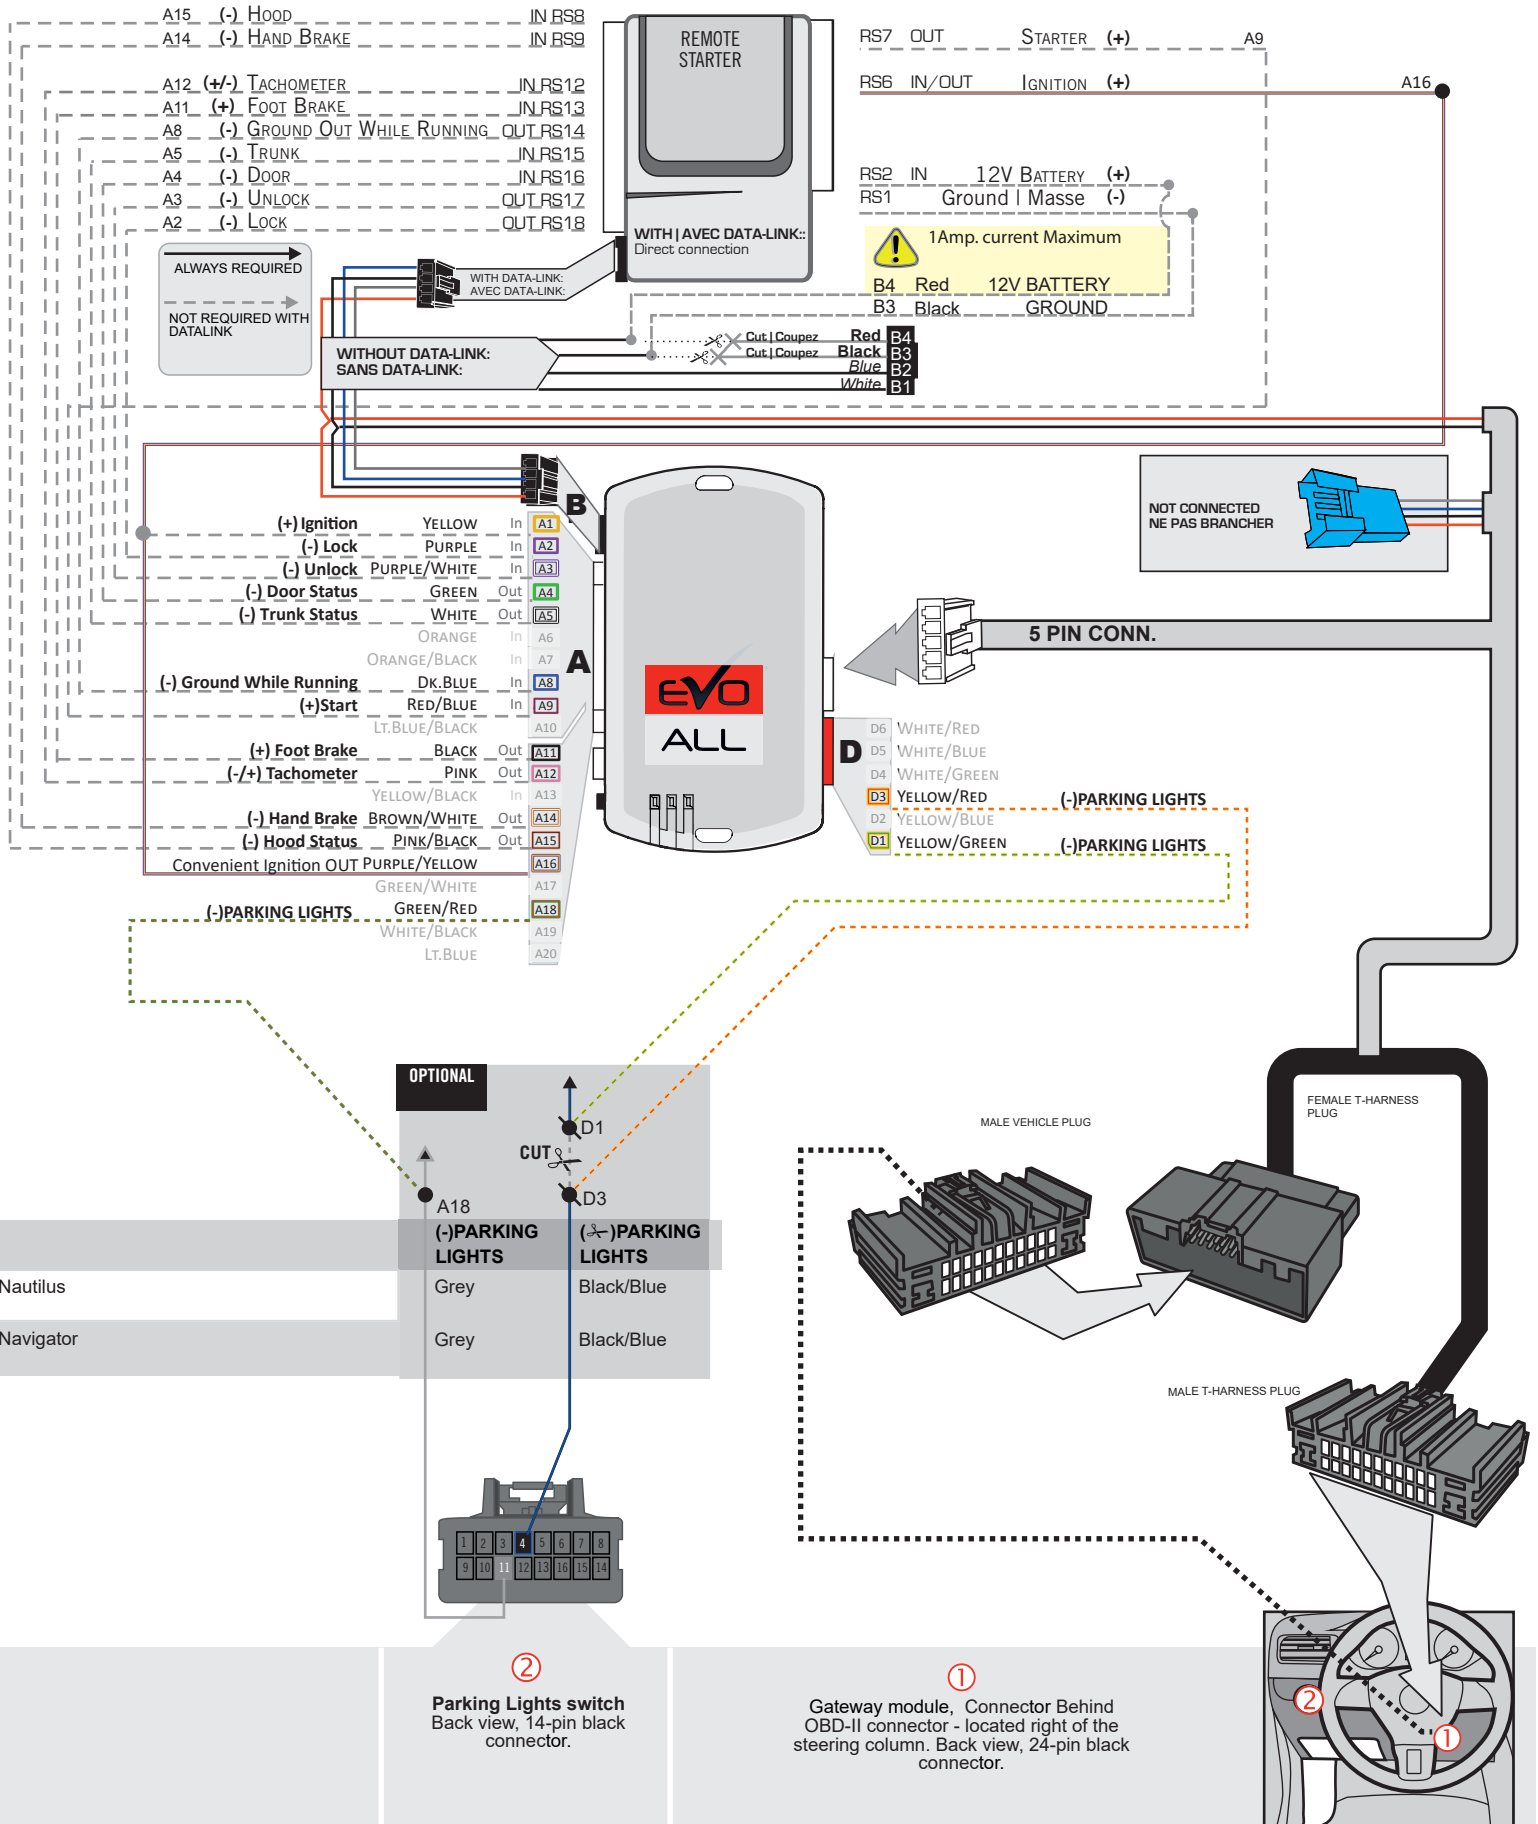


PROGRAMMING PROCEDURE

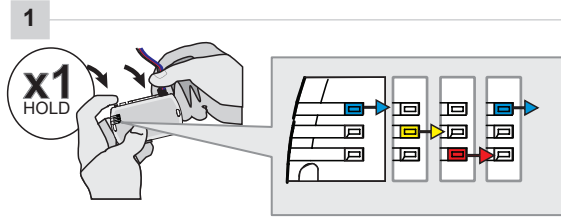



Press and hold the programming button:
Insert the 4-Pin (Data-Link) connector.

↳ The Blue, Red, Yellow and Blue & Red LEDs will alternatively illuminate.

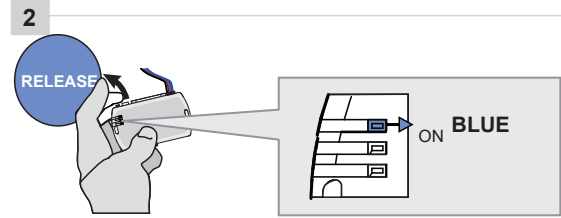


Release the programming button when the LED is BLUE.

If the LED is not solid BLUE disconnect the 4-Pin connector (Data-Link) and go back to step 1.

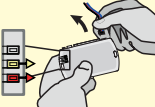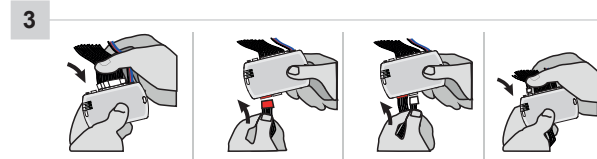



Insert the required remaining connectors.

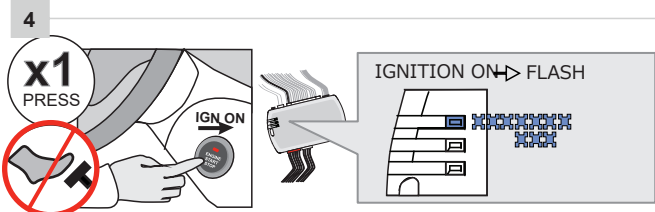


Do not press the brake pedal.
Press the Push-to-Start button once to turn on the ignition.

↳ The BLUE LED will flash rapidly.

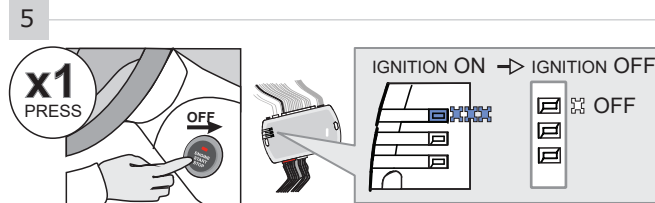



Press the Push-to-Start button once to turn off the ignition.

↳ The BLUE LED will turn off.

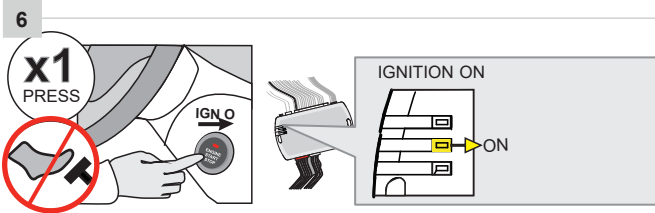

Do not press the brake pedal.
Press the Push-to-Start button once to turn on the ignition.


↳ The YELLOW LED will turn ON.

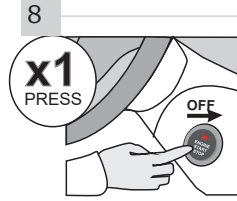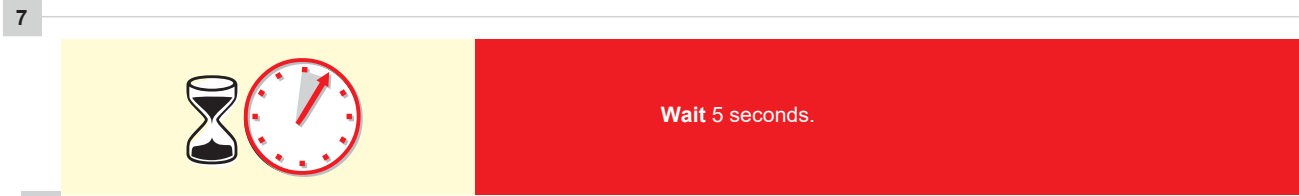

Press the Push-to-Start button once to turn off the ignition.



REMOTE STARTER FUNCTIONALITY

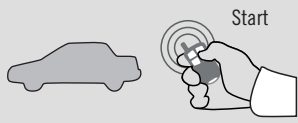


All doors must be closed.

Remote start the vehicle.



Unlock the doors with either:

 - The OEM remote
- The remote-starter remote
- Or the proximity remote



Enter the vehicle with the SMART-KEY.



DO NOT PRESS THE BRAKE PEDAL.

Press and release the Push-to-Start button once.



Press the brake pedal. The vehicle can now be put in to gear and driven.

If the Smart-Key is not detected the vehicle will shut down.

**THAR-FOR3 THARNESSE
INSTALLATION**

ADDENDUM - SUGGESTED WIRING CONFIGURATION



ONLY COMPATIBLE WITH AUTOMATIC TRANSMISSION VEHICLES.



Vehicle functions supported in this diagram (functional if equipped)

VEHICLE	YEARS	Immobilizer bypass	T-Harness available (sold separately)	Lock	Unlock	Arm	Disarm	RAP Disable	Horn	Parking Lights	Tachometer	Heated seats	Heated Mirrors	Rear defrost	Door Status	Trunk Status	Hood Status*	Hand-Brake Status	Foot-Brake Status	Active OEM Remote Start	
FORD Ranger	Push-to-Start 2019	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•

FIRMWARE VERSION

4.01

ONLY - SEULEMENT

To add the firmware version and the options, use the **FLASH LINK UPDATER** or **FLASH LINK MOBILE** tool, sold separately.

	Program bypass option IF THE VEHICLE IS NOT EQUIPPED WITH FUNCTIONAL HOOD PIN:	UNIT OPTION	DESCRIPTION
		A11	OFF Hood trigger (Output Status).
	Program bypass option:	C1	OEM Remote status (Lock/Unlock) monitoring

Parts required (Not included)

1x 7.5Amp. Fuse

MANDATORY INSTALL

*HOOD PIN

HOOD STATUS: THE HOOD PIN SWITCH MUST BE INSTALLED IF THE VEHICLE CAN BE REMOTE STARTED WITH THE HOOD OPEN, SET FUNCTION **A11** TO OFF.

A11

OFF

Notice: the installation of safety elements are mandatory. The hood pin is an essential security element and must be installed.

THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.


DESCRIPTION |




① Gateway module, located at dash board driver's side,



WIRING CONNECTION |

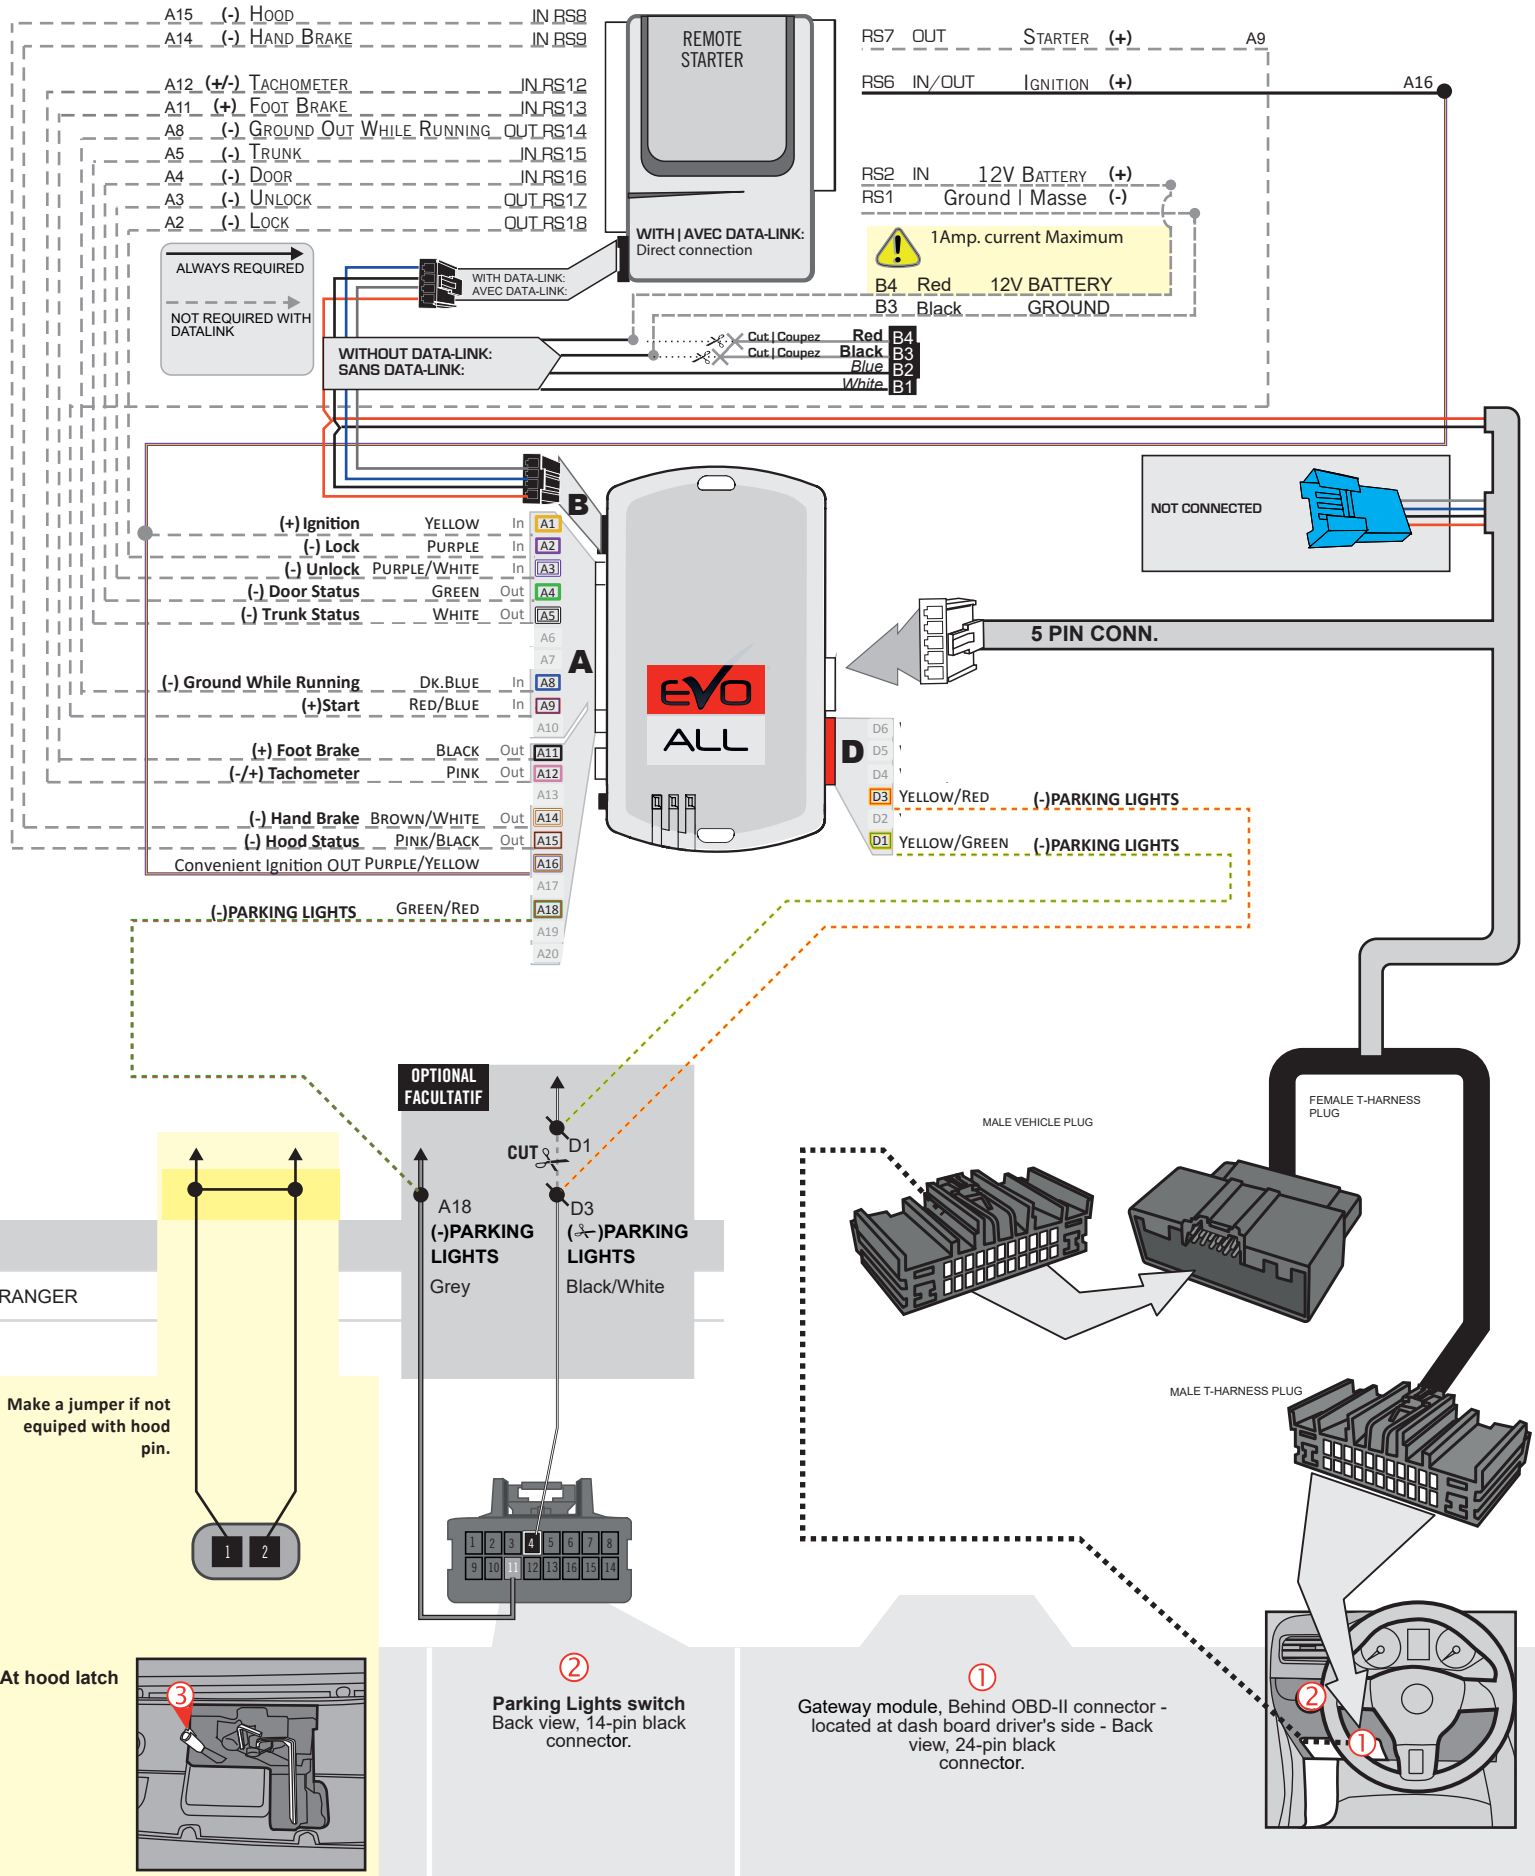


PROGRAMMING PROCEDURE |

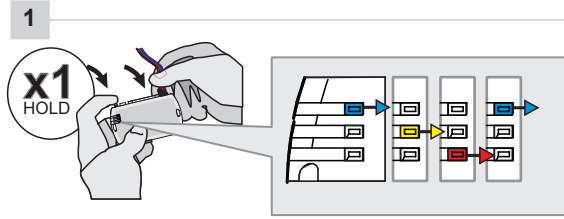



Press and hold the programming button:
Insert the 4-Pin (Data-Link) connector.

↳ The Blue, Red, Yellow and Blue & Red LEDs will alternatively illuminate.

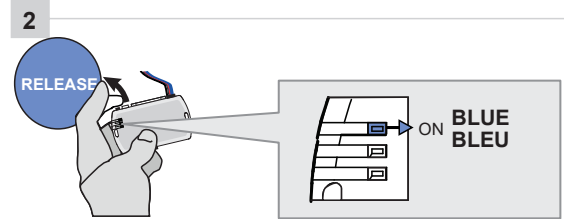


Release the programming button when the LED is BLUE.

 If the LED is not solid BLUE disconnect the 4-Pin connector (Data-Link) and go back to step 1.

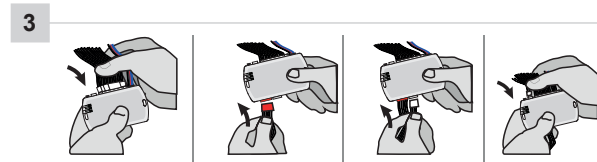


Insert the required remaining connectors.

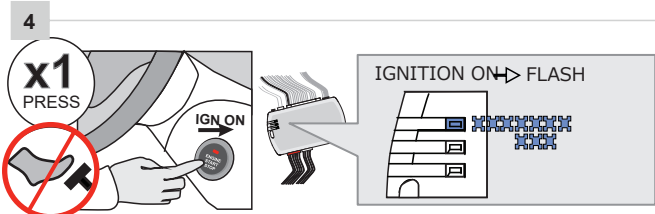


Do not press the brake pedal.
Press the Push-to-Start button once to turn on the ignition.

↳ The BLUE LED will flash rapidly.

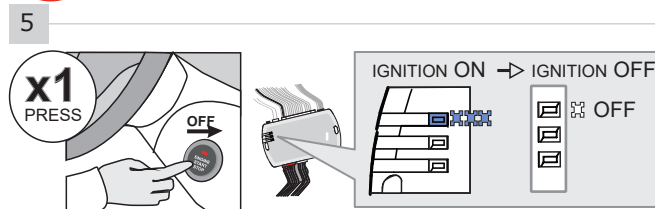

Press the Push-to-Start button once to turn off the ignition.


↳ The BLUE LED will turn off.

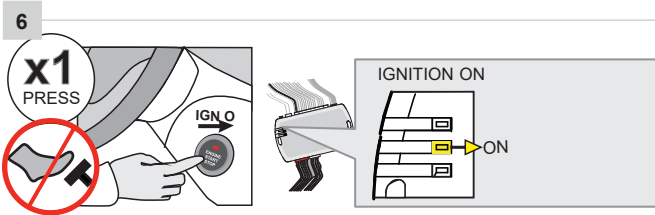

Do not press the brake pedal.
Press the Push-to-Start button once to turn on the ignition.

↳ The YELLOW LED will turn ON.



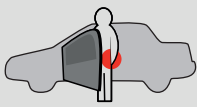

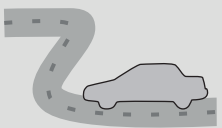
Wait 5 seconds.

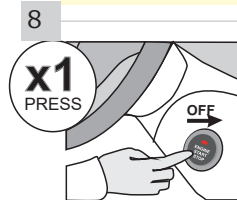

Press the Push-to-Start button once to turn off the ignition.

The module is now programmed.

REMOTE STARTER FUNCTIONALITY |

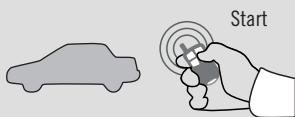 <p>Start</p> <p>All doors must be closed.</p> <p>Remote start the vehicle.</p>	 <p>UNLOCK</p> <p>Unlock the doors with either:</p> <ul style="list-style-type: none"> • The OEM remote • The remote-starter remote • Or the proximity remote 	 <p>Enter the vehicle with the SMART-KEY.</p>	 <p>DO NOT PRESS THE BRAKE PEDAL.</p> <p>Press and release the Push-to-Start button once.</p>	 <p>Press the brake pedal. The vehicle can now be put in to gear and driven.</p> <p>If the Smart-Key is not detected the vehicle will shut down.</p>
--	---	--	---	---

THAR-FOR3 THARNNESS INSTALLATION

ADDENDUM - SUGGESTED WIRING CONFIGURATION



ONLY COMPATIBLE WITH AUTOMATIC TRANSMISSION VEHICLES.



Vehicle functions supported in this diagram (functional if equipped)

VEHICLE	YEARS	Immobilizer bypass	Lock	Unlock	Arm	Disarm	RAP Disable	Parking Lights	Tachometer	Heated seats	Heated Mirrors	Rear defrost	Door Status	Trunk Status	Hood Status*	Hand-Brake Status	Foot-Brake Status	Active OEM Remote Start	
FORD Transit Connect	Key 2019	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•



FIRMWARE VERSION

4.02

ONLY - SEULEMENT

To add the firmware version and the options, use the **FLASH LINK UPDATER** or **FLASH LINK MOBILE** tool, sold separately.



Program bypass option:

UNIT OPTION

C1

DESCRIPTION

OEM Remote status (Lock/Unlock) monitoring

IF THE VEHICLE IS NOT EQUIPPED WITH FUNCTIONAL HOOD PIN:

A11

OFF

Hood trigger (Output Status).



Parts required (Not included)

1x THAR-FOR3

NOTES



The vehicle must be equipped with the OEM remote with the door locks.

MANDATORY INSTALL

*HOOD PIN



HOOD STATUS: THE HOOD PIN SWITCH MUST BE INSTALLED IF THE VEHICLE CAN BE REMOTE STARTED WITH THE HOOD OPEN, SET FUNCTION **A11** TO OFF.

A11

OFF

Notice: the installation of safety elements are mandatory. The hood pin is an essential security element and must be installed.



THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.

DESCRIPTION






② Parking Lights switch

① Gateway module, located at dash board driver's side,

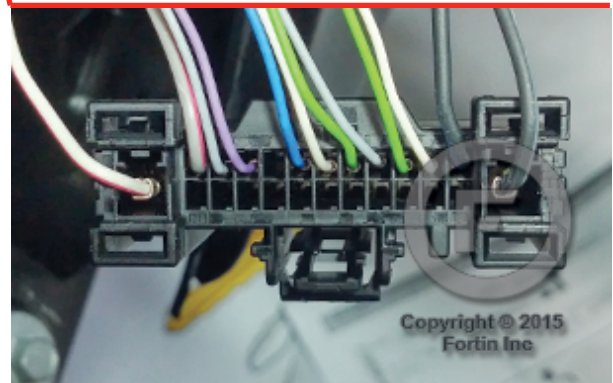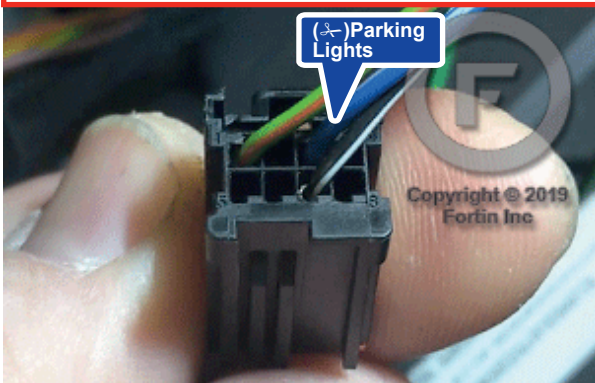


④ Under the hood If not equipped with hood pin.

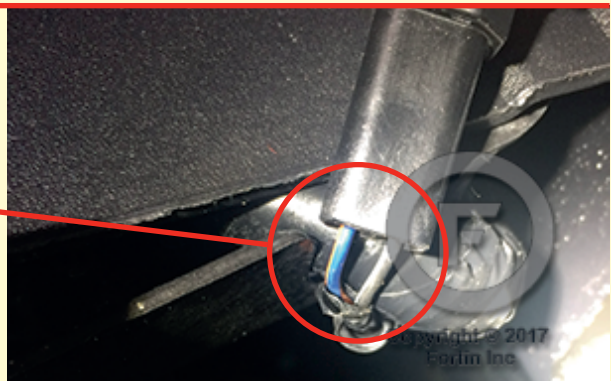

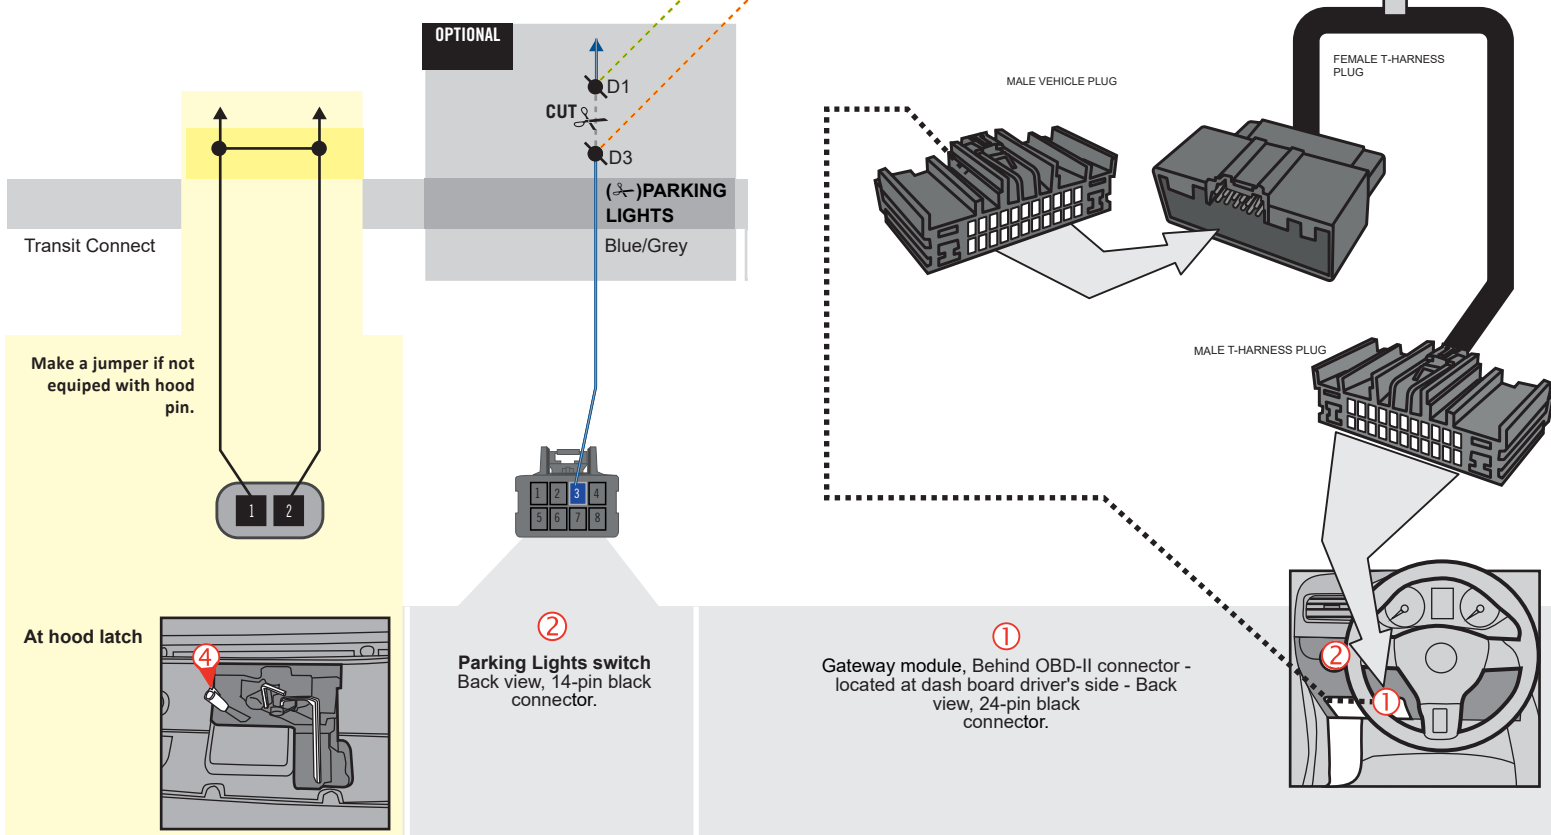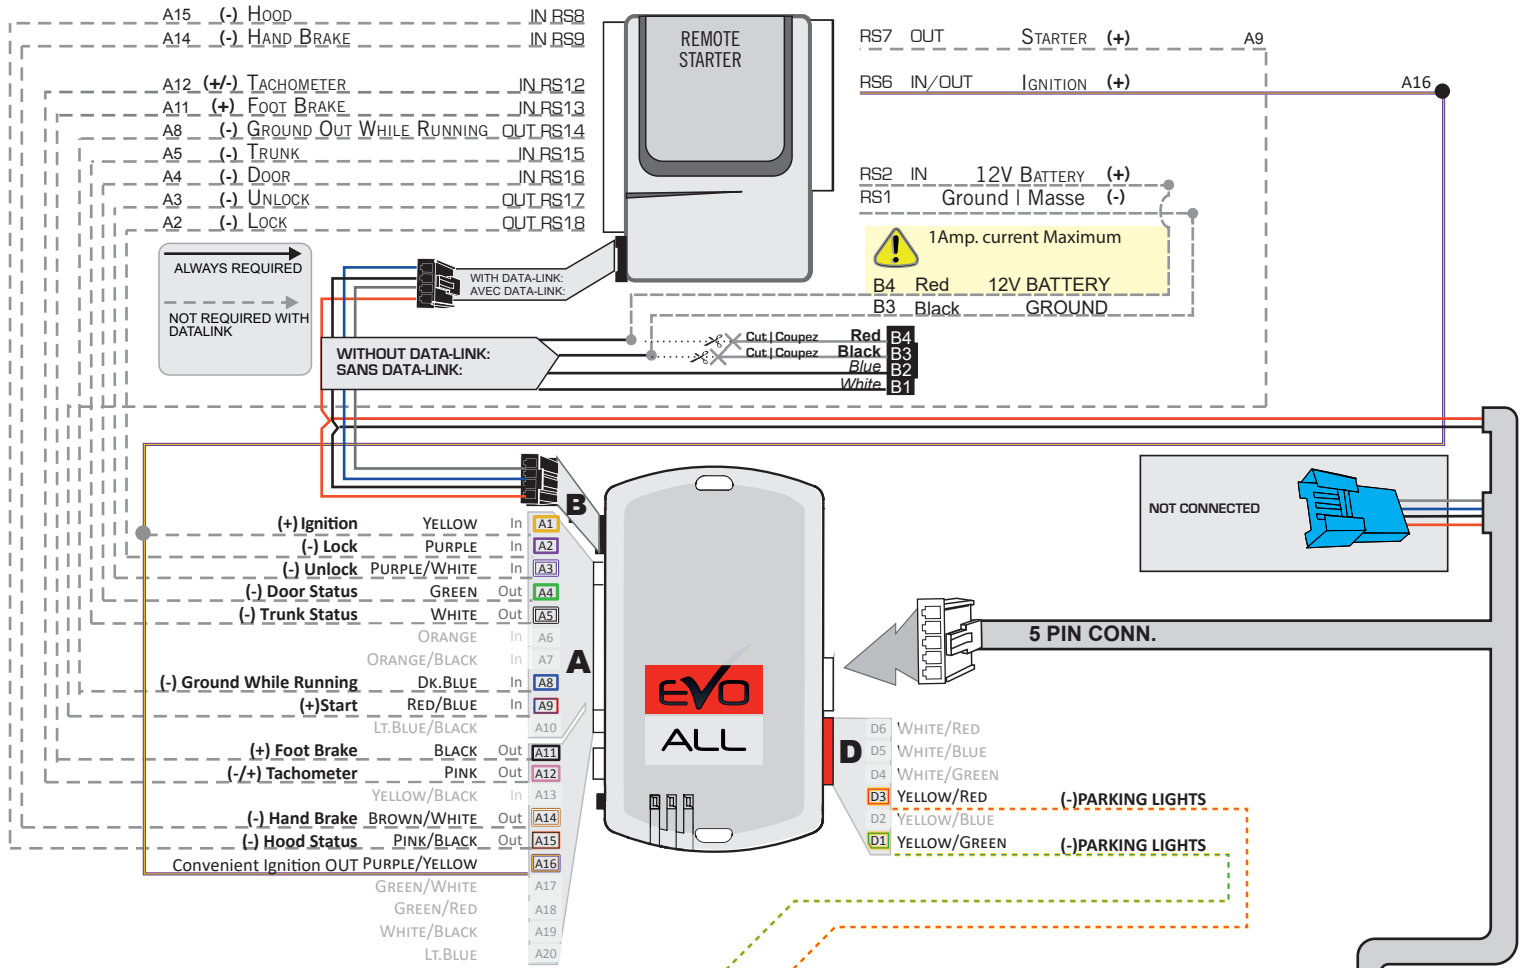

KEY BYPASS PROGRAMMING PROCEDURE 1/2


1

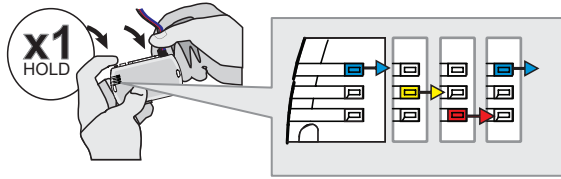

Press and hold the programming button:
Insert the 4-Pin (Data-Link) connector.


↳ The Blue, Red, Yellow and Blue & Red LEDs will alternatively illuminate.

2

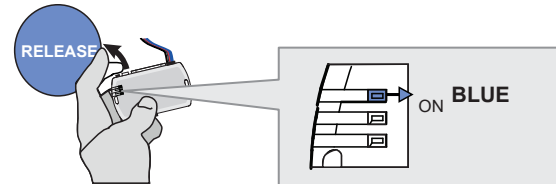


Release the programming button when the LED is BLUE.

 If the LED is not solid BLUE disconnect the 4-Pin connector (Data-Link) and go back to step 1.




3

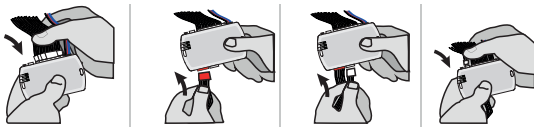

Insert the required remaining connectors.

4

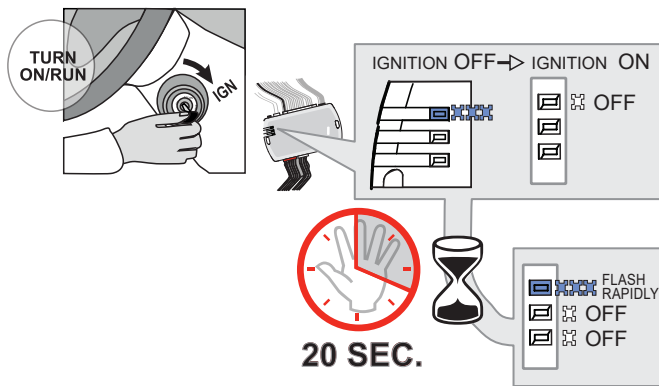


Turn the key to the Ignition ON/RUN position.

↳ The BLUE LED will turn OFF.

↳ The BLUE LED will flash rapidly.


5

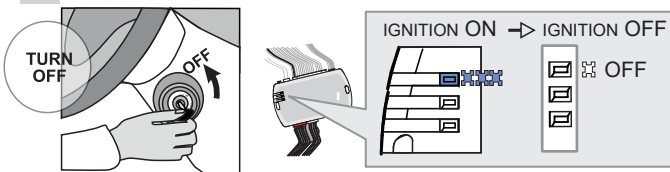

Turn the key to the OFF position.

↳ The BLUE LED will turn off.


6

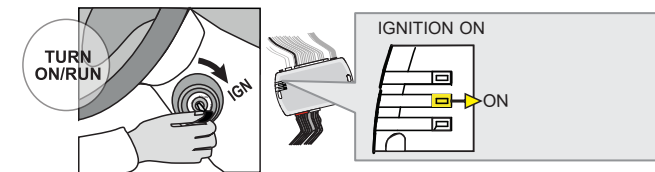

Turn the key to the Ignition ON/RUN position.

↳ The YELLOW LED will turn ON.


7

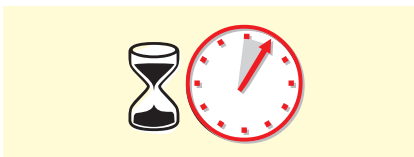

Wait 5 seconds.

KEY BYPASS PROGRAMMING PROCEDURE 2/2

8

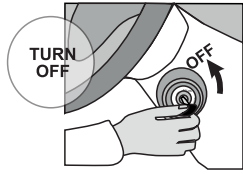

Turn the key to the OFF position.



The module is now programmed.

REMOTE STARTER FUNCTIONALITY



All doors must be closed.



Remote start the vehicle.



Unlock the doors with the remote-starter remote or the OEM remote.



Insert and Turn the key to the Ignition ON/RUN position.



Press the brake pedal.



The vehicle can now be put in to gear and driven.

THAR-FOR3 THARNNESS STAND ALONE INSTALLATION

ADDENDUM - SUGGESTED WIRING CONFIGURATION



ONLY COMPATIBLE WITH AUTOMATIC TRANSMISSION VEHICLES.



Vehicle functions supported in this diagram (functional if equipped)

VEHICLE	YEARS	Immobilizer bypass	T-Harness	Lock	Unlock	Arm	Disarm	RAP Disable	Parking Lights	Tachometer	Door Status	Trunk Status	Hood Status*	Hand-Brake Status	Foot-Brake Status	Active OEM Remote Start
FORD EcoSport	key 2018-2020	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•

FIRMWARE VERSION



4.02

ONLY - SEULEMENT

To add the firmware version and the options, use the **FLASH LINK UPDATER** or **FLASH LINK MOBILE** tool, sold separately.



Program bypass option:

UNIT OPTION

C1

DESCRIPTION

OEM Remote status (Lock/Unlock) monitoring

IF THE VEHICLE IS NOT EQUIPPED WITH FUNCTIONAL HOOD PIN:

A11

OFF

Hood trigger (Output Status).

 


Parts required (Not included)

1x THAR-FOR3

NOTES

The vehicles OEM remote and SmartKey are still operable during remote start.



The vehicle must be equipped with the OEM remote with the door locks.

MANDATORY INSTALL

*HOOD PIN



HOOD STATUS: THE HOOD PIN SWITCH MUST BE INSTALLED IF THE VEHICLE CAN BE REMOTE STARTED WITH THE HOOD OPEN, SET FUNCTION A11 TO OFF.

A11

OFF

Notice: the installation of safety elements are mandatory. The hood pin is an essential security element and must be installed.

THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.

PARTS REQUIRED (NOT INCLUDED)


1x **FLASH LINK UPDATER,**
 1x **FLASH LINK MANAGER**
 SOFTWARE | PROGRAMME
 1x Microsoft Windows Computer with Internet connection

OR


1x **FLASH LINK MOBILE**
 1x **FLASH LINK MOBILE APP**
 Smartphone *Android* or *iOS* with Internet connection (*provider charges may apply*).

MANDATORY

HOOD PIN



REMOTE START SAFETY OVERRIDE SWITCH

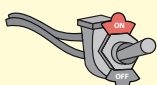
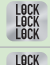






VALET SWITCH


Part #: RSPB available, Sold separately.

Notice: the installation of safety elements are mandatory. The hood pin and the valet switch are essential security elements and must be installed.


STAND ALONE CONFIGURATION

	Program bypass option	UNIT OPTION	DESCRIPTION
	OEM Remote Stand Alone Remote Starter:	D1.10 	By default, LOCK, LOCK, LOCK
		D1.1 	Par défaut, VERROUILLE, VERROUILLE, VERROUILLE
	Program bypass option with oem remote:	C1	OEM Remote Monitoring
	Program bypass option with RF KIT antenna:	H1 to H6	Supported RF Kits and select RF Kit
	Program bypass option Vehicle hybrid only:	D4	Hybrid mode (Vehicle hybrid only)


REMOTE STARTER FUNCTIONALITY



All doors must be closed.

3X 

Press the OEM remote's Lock button 3x to remote-start (or remote-stop) the vehicle.




The vehicle will START.

REMOTE STARTER DIAGNOSTICS
MODULE RED LED


x2 flash :	Brake ON
x3 flash :	No tach
x4 flash :	Ignition before start
x5 flash :	Hood Open

REMOTE STARTER WARNING CARD



CUT THIS WARNING CARD AND STICK IT ON A VISIBLE PLACE:
 or use the package **RSPB**, Sold separately.

WARNING



REMOTE STARTER

THE VEHICLE CAN BE STARTED BY EITHER: PRESSING THE LOCK BUTTON ON THE OEM REMOTE 3 TIMES CONSECUTIVELY OR BY A SMARTPHONE. **TURN ON** THE SAFETY SWITCH LOCATED UNDER THE DASHBOARD BEFORE WORKING ON THE VEHICLE.




DESCRIPTION






① Gateway module, Behind OBD-II connector



③ Behind glove box

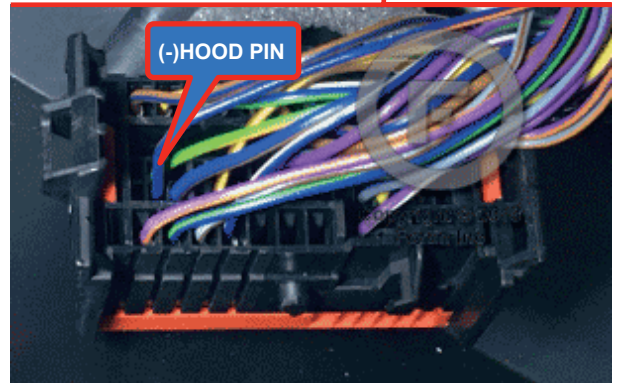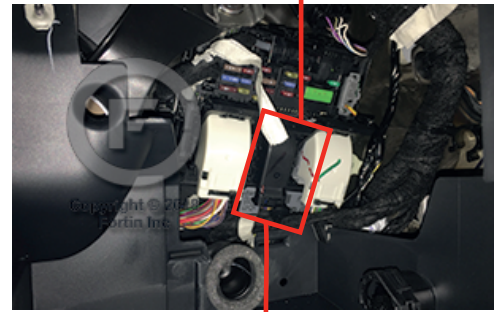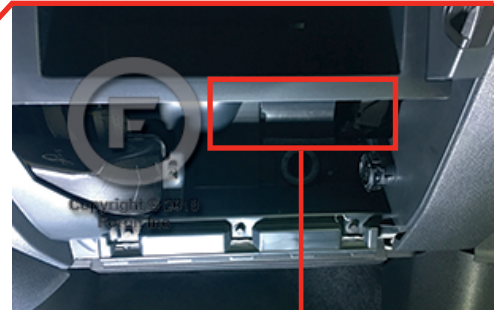


AUTOMATIC TRANSMISSION WIRING CONNECTION

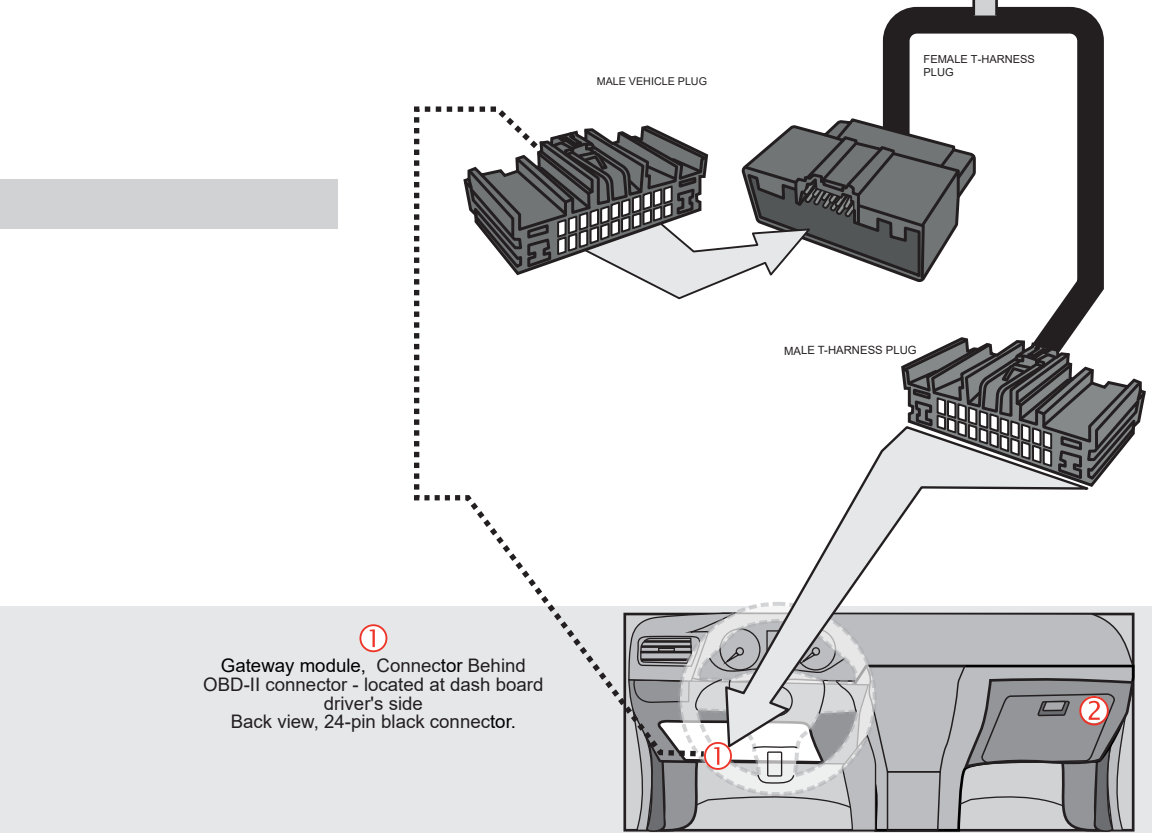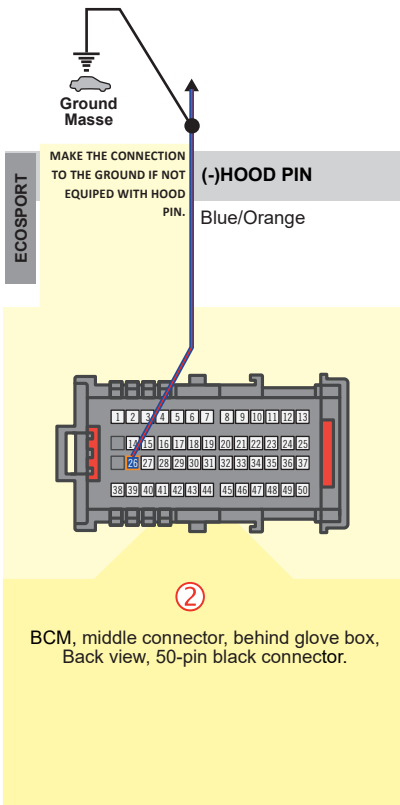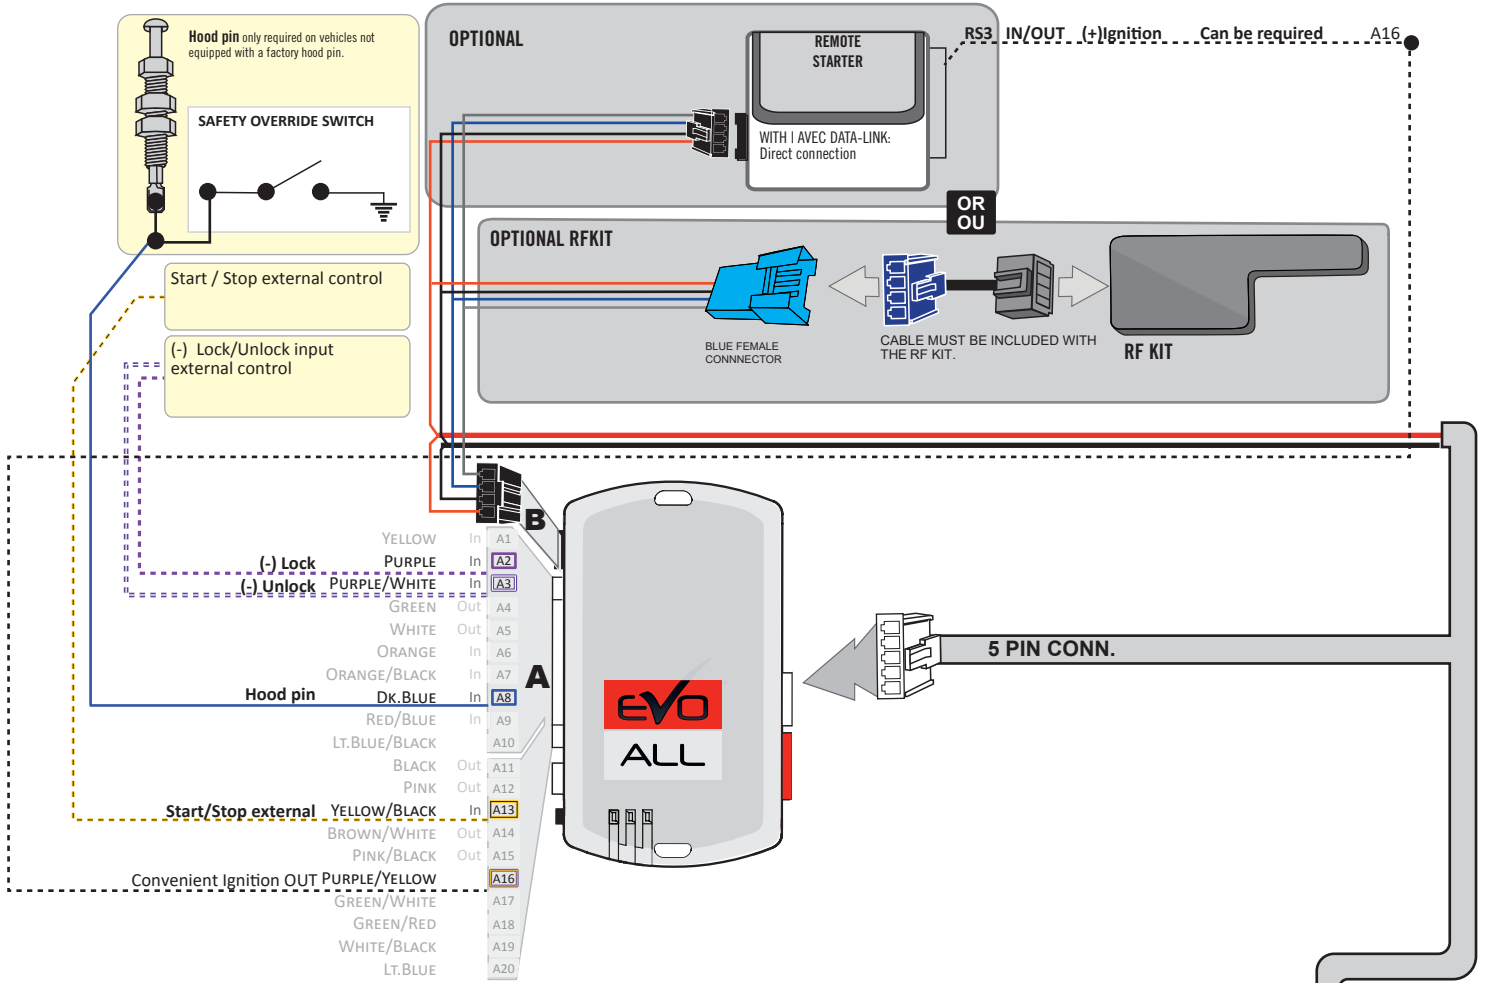

KEY BYPASS PROGRAMMING PROCEDURE 1/2


1

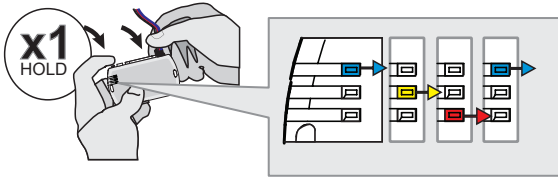

Press and hold the programming button:
Insert the 4-Pin (Data-Link) connector.


↳ The Blue, Red, Yellow and Blue & Red LEDs will alternatively illuminate.

2

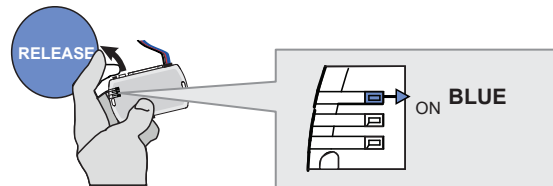


Release the programming button when the LED is BLUE.

 If the LED is not solid BLUE disconnect the 4-Pin connector (Data-Link) and go back to step 1.




3

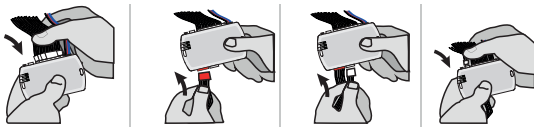

Insert the required remaining connectors.

4

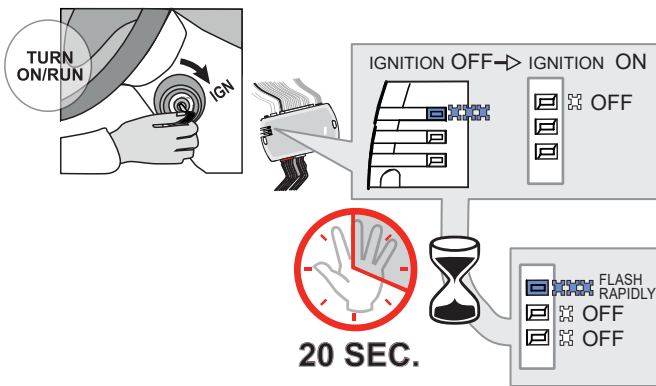


Turn the key to the Ignition ON/RUN position.

↳ The BLUE LED will turn OFF.

↳ The BLUE LED will flash rapidly.


5

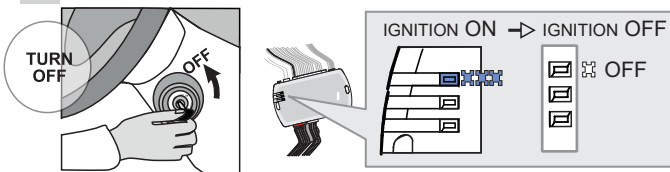

Turn the key to the OFF position.

↳ The BLUE LED will turn off.

6

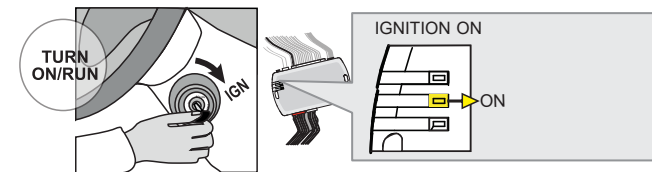

Turn the key to the Ignition ON/RUN position.

↳ The YELLOW LED will turn ON.


7



Wait 5 seconds.

KEY BYPASS PROGRAMMING PROCEDURE 2/2

8

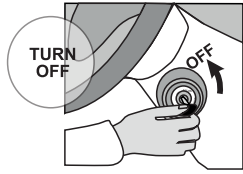

Turn the key to the OFF position.




The module is now programmed.

OPTIONAL RF-KIT PROGRAMMING


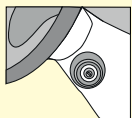
PROGRAM BYPASS OPTION

	<p>Program bypass option:</p>	<p>H2</p>	<p>Supported RF-KITS enable H2 Fortin 2</p>
---	-------------------------------	------------------	--

OPTIONAL FORTIN RF KIT SERIES 4 OR SERIES 9 PROGRAMMING




The module must be programmed on the vehicle.

MAKE SURE THE IGNITION KEY HAS BEEN IN THE OFF POSITION FOR AT LEAST 5 SECONDS.

1


ON TURN ON/RUN

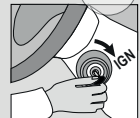

Turn the key to the ON/RUN position.

2


OFF TURN OFF



Turn the ignition to the OFF position.

3

ON TURN ON/RUN




Turn the key to the ON/RUN position.

4

4X BRAKES

x4 PRESS



Press and release the brake pedal four times.

5

ON EACH TRANSMITTER

4 BUTTONS

[-] PRESS AND RELEASE

→ PRESS AND RELEASE


🔒 PRESS AND RELEASE

1 BUTTON


PRESS APPROX. 12 SEC. AND WAIT FOR THE BLUE LED TO TURN OFF THEN BACK ON SOLID THEN RELEASE.

6


OFF TURN OFF




Turn the ignition to the OFF position.

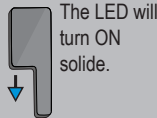


The LED will turn ON solide.

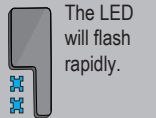


The LED will flash rapidly.

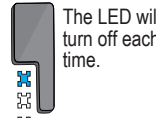


The LED will turn off each time.

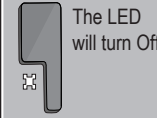


The LED will turn Off.

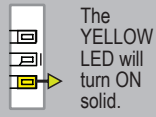


The YELLOW LED will turn ON solid.

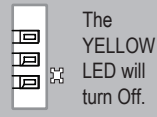


The YELLOW LED will turn Off.

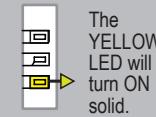


The YELLOW LED will turn ON solid.

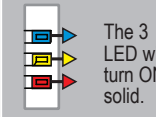


The 3 LED will turn ON solid.

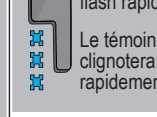

The LED will flash rapidly.
Le témoin clignotera rapidement.

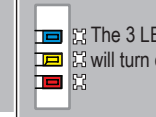

The 3 LED will turn off.

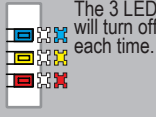

The 3 LED will turn off each time.



REMOTE STARTER FUNCTIONALITY



All doors must be closed.



Remote start the vehicle.



Unlock the doors with the remote-starter remote or the OEM remote.



Insert and Turn the key to the Ignition ON/RUN position.



Press the brake pedal.



The vehicle can now be put in to gear and driven.

THAR-FOR3 THARNNESS STAND ALONE INSTALLATION

ADDENDUM - SUGGESTED WIRING CONFIGURATION



ONLY COMPATIBLE WITH AUTOMATIC TRANSMISSION VEHICLES.



Vehicle functions supported in this diagram (functional if equipped)

VEHICLE	YEARS	Immobilizer bypass	T-Harness	Lock	Unlock	Arm	Disarm	RAP Disable	Parking Lights	Tachometer	Door Status	Trunk Status	Hood Status*	Hand-Brake Status	Foot-Brake Status	Active OEM Remote Start
FORD EcoSport	<i>Push-to-Start</i> 2018-2020	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•

FIRMWARE VERSION

4.02

ONLY - SEULEMENT

To add the firmware version and the options, use the **FLASH LINK UPDATER** or **FLASH LINK MOBILE** tool, sold separately.

	UNIT OPTION	DESCRIPTION
<p>Program bypass option:</p>	C1	OEM Remote status (Lock/Unlock) monitoring
	D6	Push-to-Start
<p>IF THE VEHICLE IS NOT EQUIPPED WITH FUNCTIONAL HOOD PIN:</p>	A11	OFF
		Hood trigger (Output Status).



Parts required (Not included)

1x THAR-FOR3

NOTES

The vehicles OEM remote and SmartKey are still operable during remote start.

MANDATORY INSTALL

*HOOD PIN



HOOD STATUS: THE HOOD PIN SWITCH MUST BE INSTALLED IF THE VEHICLE CAN BE REMOTE STARTED WITH THE HOOD OPEN, SET FUNCTION A11 TO OFF.

A11

OFF

Notice: the installation of safety elements are mandatory. The hood pin is an essential security element and must be installed.

THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.

PARTS REQUIRED (NOT INCLUDED)


1x **FLASH LINK UPDATER,**
1x **FLASH LINK MANAGER**
SOFTWARE | PROGRAMME
1x Microsoft Windows Computer with Internet connection
Ordinateur Microsoft Windows

OR


1x **FLASH LINK MOBILE**
1x **FLASH LINK MOBILE APP**
Smartphone *Android* or *iOS* with Internet connection (*provider charges may apply*).

MANDATORY

HOOD PIN



REMOTE START SAFETY OVERRIDE SWITCH

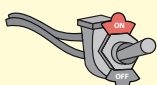
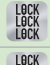






VALET SWITCH


Part #: RSPB available, Sold separately.

Notice: the installation of safety elements are mandatory. The hood pin and the valet switch are essential security elements and must be installed.


STAND ALONE CONFIGURATION

	Program bypass option	UNIT OPTION	DESCRIPTION
	OEM Remote Stand Alone Remote Starter:	D1.10 	By default, LOCK, LOCK, LOCK
		D1.1 	Par défaut, VERROUILLE, VERROUILLE, VERROUILLE
	Program bypass option with oem remote:	C1	OEM Remote Monitoring
	Program bypass option with RF KIT antenna:	H1 to H6	Supported RF Kits and select RF Kit
	Program bypass option Vehicle hybrid only:	D4	Hybrid mode (Vehicle hybrid only)


REMOTE STARTER FUNCTIONALITY




All doors must be closed.

3X 

Press the OEM remote's Lock button 3x to remote-start (or remote-stop) the vehicle.




START 

The vehicle will START.

REMOTE STARTER DIAGNOSTICS
MODULE RED LED


x2 flash :	Brake ON
x3 flash :	No tach
x4 flash :	Ignition before start
x5 flash :	Hood Open

REMOTE STARTER WARNING CARD



CUT THIS WARNING CARD AND STICK IT ON A VISIBLE PLACE:
or use the package **RSPB**, Sold separately.

WARNING




REMOTE STARTER

THE VEHICLE CAN BE STARTED BY EITHER: PRESSING THE LOCK BUTTON ON THE OEM REMOTE 3 TIMES CONSECUTIVELY OR BY A SMARTPHONE. **TURN ON** THE SAFETY SWITCH LOCATED UNDER THE DASHBOARD BEFORE WORKING ON THE VEHICLE.




DESCRIPTION






① Gateway module, Behind OBD-II connector

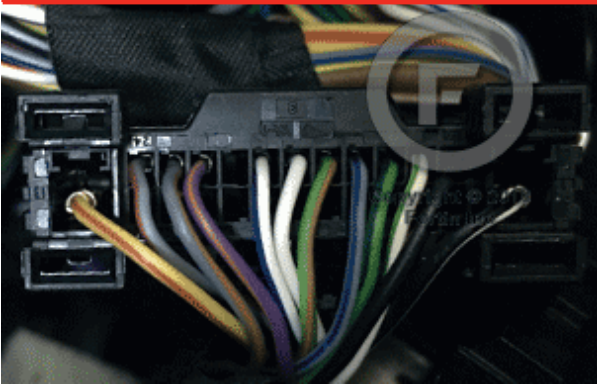

③ Behind glove box

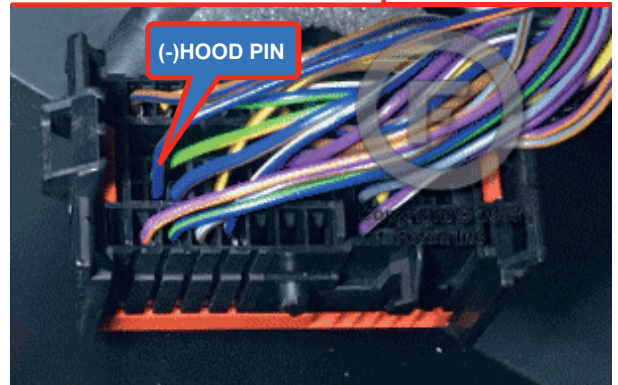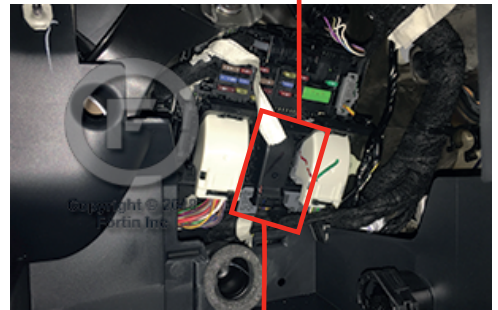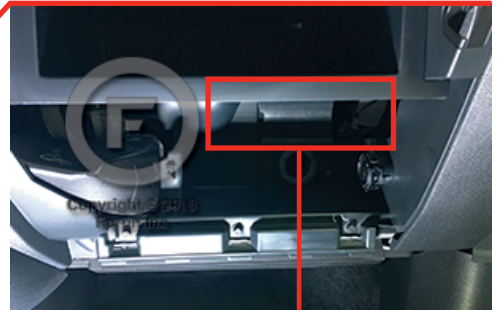


AUTOMATIC TRANSMISSION WIRING CONNECTION

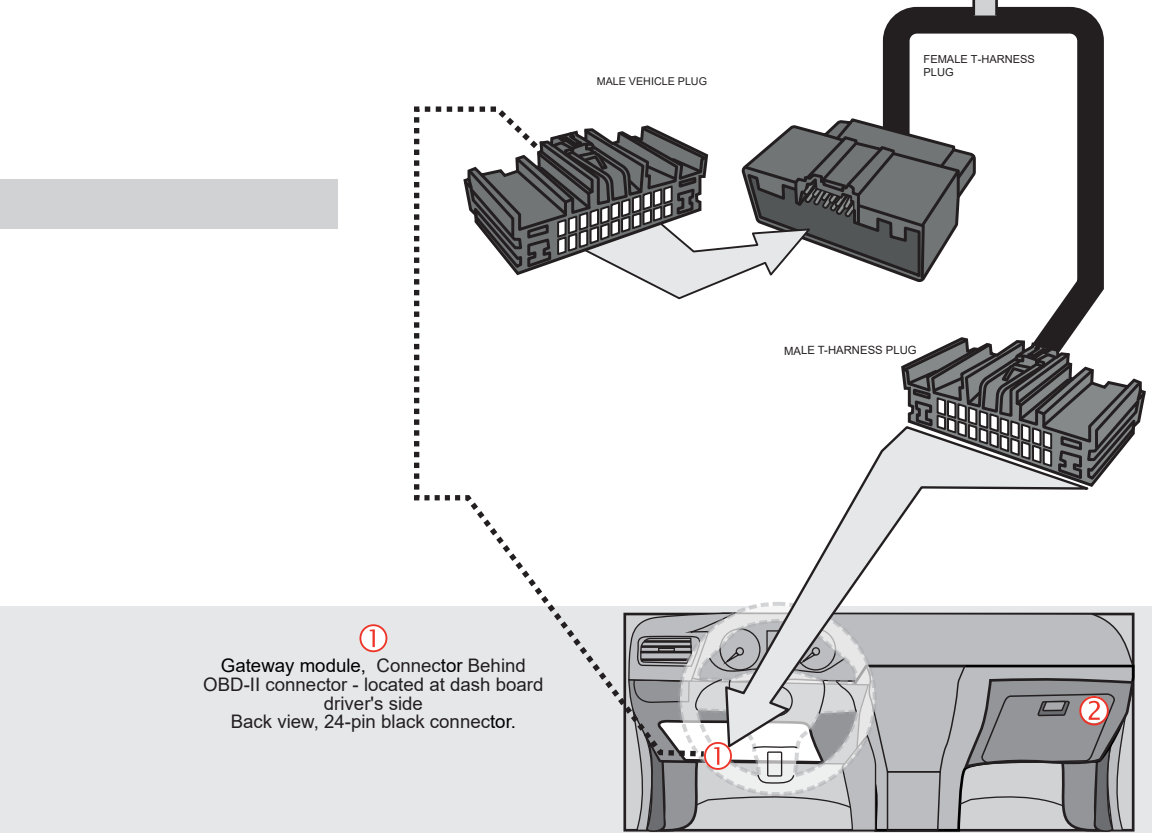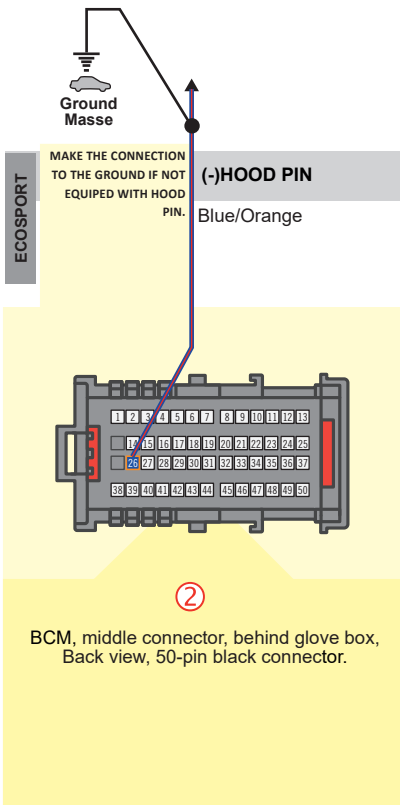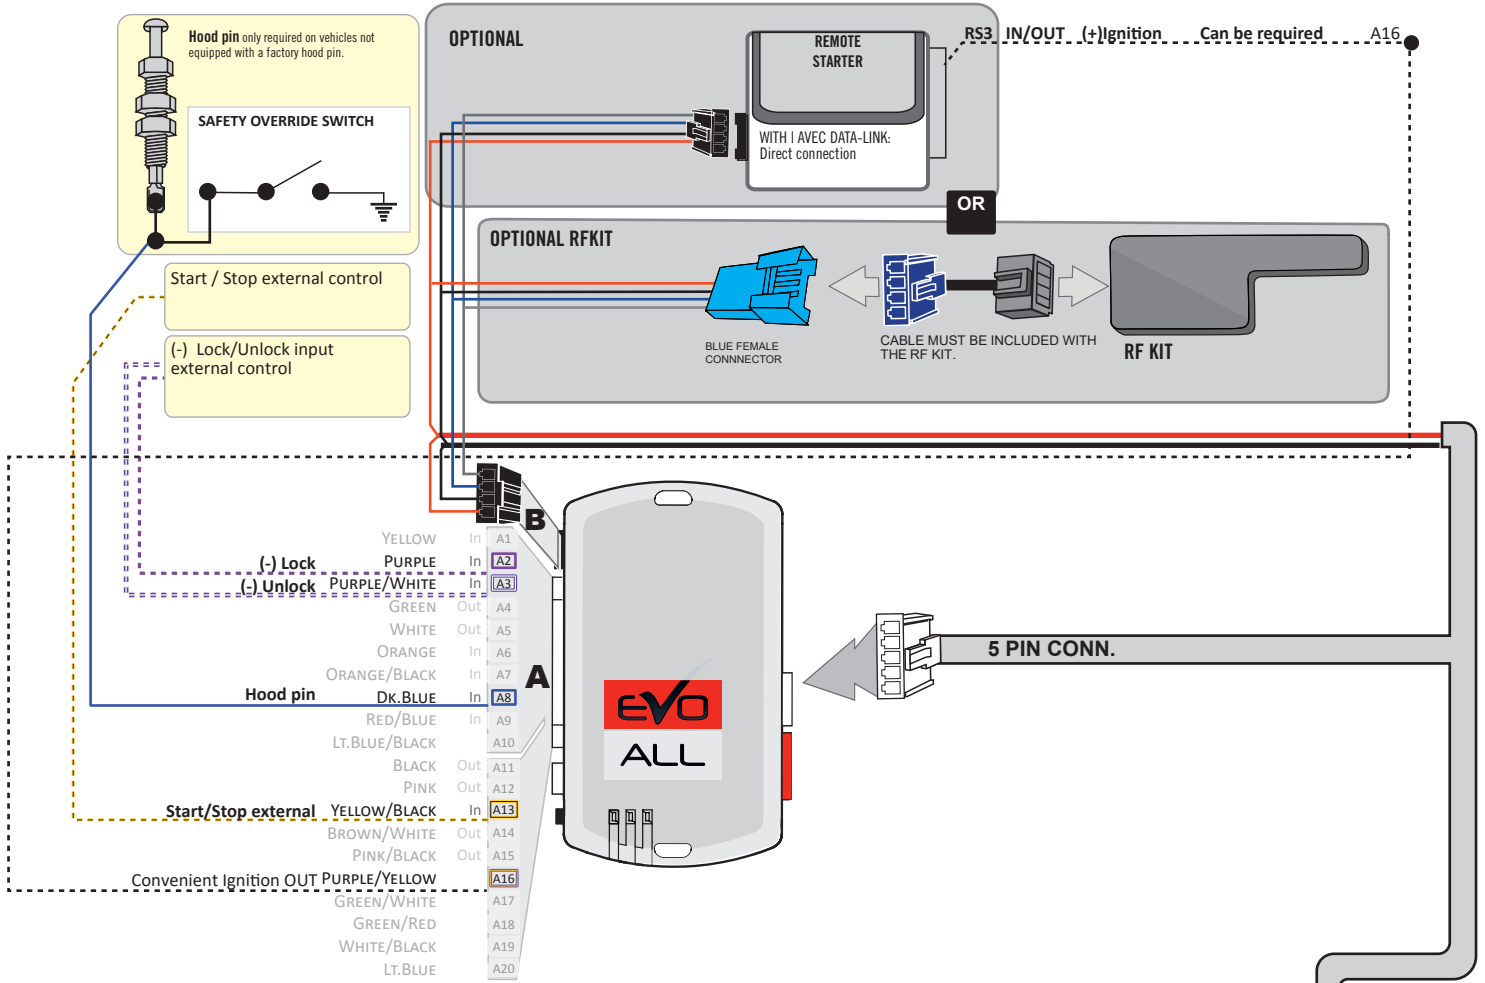

KEY BYPASS PROGRAMMING PROCEDURE 1/2


1

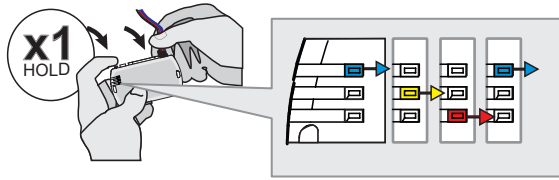

Press and hold the programming button:
Insert the 4-Pin (Data-Link) connector.


↳ The Blue, Red, Yellow and Blue & Red LEDs will alternatively illuminate.

2

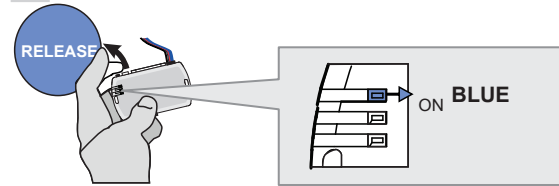


Release the programming button when the LED is BLUE.

If the LED is not solid BLUE disconnect the 4-Pin connector (Data-Link) and go back to step 1.

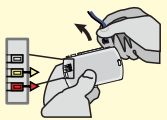


3

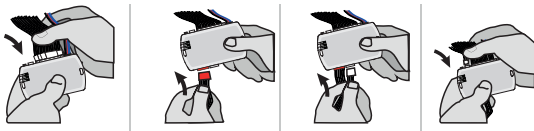

Insert the required remaining connectors.

4

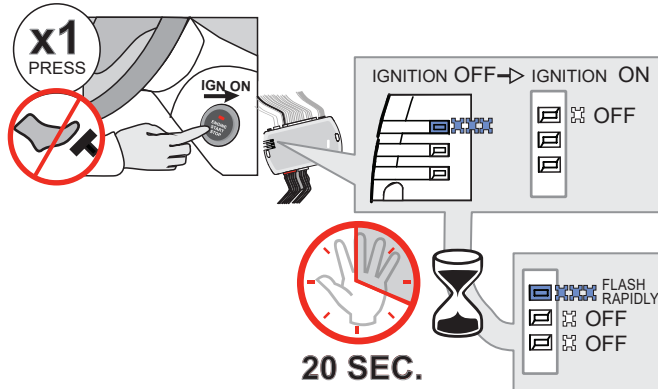


Do not press the brake pedal.
Press the Push-to-Start button once to turn on the ignition.

↳ The BLUE LED will turn OFF.

↳ The BLUE LED will flash rapidly.


5

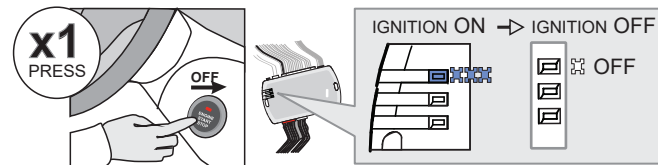

Press the Push-to-Start button once to turn off the ignition.

↳ The BLUE LED will turn off.

6

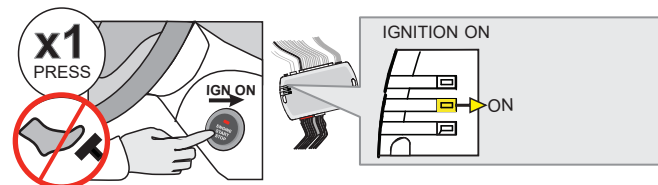

Do not press the brake pedal.
Press the Push-to-Start button once to turn on the ignition.

↳ The YELLOW LED will turn ON.


KEY BYPASS PROGRAMMING PROCEDURE 2/2

7



Wait 5 seconds.

8

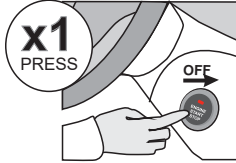

Press the Push-to-Start button once to turn off the ignition.

The module is now programmed.

OPTIONAL RF-KIT PROGRAMMING

PROGRAM BYPASS OPTION

	<p>Program bypass option:</p>	<p>H2</p>	<p>Supported RF-KITS enable H2 Fortin 2</p>
---	-------------------------------	------------------	--








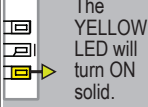
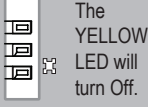
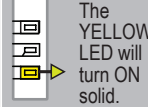
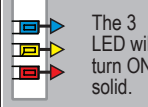

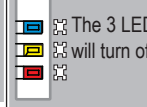
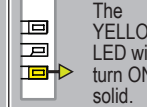
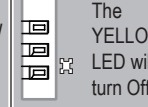
 
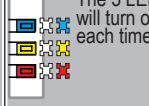
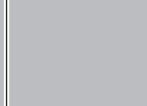
OPTIONAL FORTIN RF KIT SERIES 4 OR SERIES 9 PROGRAMMING



The module must be programmed on the vehicle.



MAKE SURE THE IGNITION KEY HAS BEEN IN THE OFF POSITION FOR AT LEAST 5 SECONDS.

<p>1</p> <p>ON x1 PRESS</p>  <p>Do not press the brake pedal. Press the Push-to-Start button once to turn on the ignition.</p>	<p>2</p> <p>OFF x1 PRESS</p>  <p>Press the Push-to-Start button once to turn off the ignition.</p>	<p>3</p> <p>ON x1 PRESS</p>  <p>Do not press the brake pedal. Press the Push-to-Start button once to turn on the ignition.</p>	<p>4</p> <p>4X BRAKES</p> <p>x4 PRESS</p>  <p>Press and release the brake pedal four times.</p>	<p>5</p> <p>ON EACH TRANSMITTER</p> <p>4 BUTTONS</p> <p>[-] PRESS AND RELEASE</p> <p>→ PRESS AND RELEASE</p> <p>1 BUTTON</p> <p>PRESS APPROX. 12 SEC. AND WAIT FOR THE BLUE LED TO TURN OFF THEN BACK ON SOLID THEN RELEASE.</p>	<p>6</p> <p>OFF x1 PRESS</p>  <p>Press the Push-to-Start button once to turn off the ignition.</p>	<p>7</p> <p>ON x1 PRESS</p>  <p>Do not press the brake pedal. Press the Push-to-Start button once to turn on the ignition and leave it ON for 5 sec..</p>	<p>8</p> <p>OFF x1 PRESS</p>  <p>Press the Push-to-Start button once to turn off the ignition.</p>
 <p>The YELLOW LED will turn ON solid.</p>	 <p>The YELLOW LED will turn Off.</p>	 <p>The YELLOW LED will turn ON solid.</p>	 <p>The 3 LED will turn ON solid.</p>	 <p>The LED will turn off each time.</p>	 <p>The LED will turn Off.</p>	 <p>The YELLOW LED will turn ON solid.</p>	 <p>The YELLOW LED will turn Off.</p>
 <p>The 3 LED will turn off each time.</p>				 <p>The LED will flash rapidly.</p>	 <p>The 3 LED will turn off.</p>		



REMOTE STARTER FUNCTIONALITY



All doors must be closed.

 


Remote start the vehicle.



Unlock the doors with either:

- The OEM remote
- The remote-starter remote
- Or the proximity remote



Enter the vehicle with the SMART-KEY.



DO NOT PRESS THE BRAKE PEDAL.

Press and release the Push-to-Start button once.



Press the brake pedal. The vehicle can now be put in to gear and driven.
If the Smart-Key is not detected the vehicle will shut down.

THAR-FOR3 THARNNESS STAND ALONE INSTALLATION

ADDENDUM - SUGGESTED WIRING CONFIGURATION



ONLY COMPATIBLE WITH AUTOMATIC TRANSMISSION VEHICLES.



Vehicle functions supported in this diagram (functional if equipped)

VEHICLE

YEARS

Immobilizer bypass	Lock	Unlock	Arm	Disarm	RAP Disable	Parking Lights	Tachometer	Heated seats	Heated Mirrors	Rear defrost	Door Status	Trunk Status	Hood Status*	Hand-Brake Status	Foot-Brake Status	Active OEM Remote Start
--------------------	------	--------	-----	--------	-------------	----------------	------------	--------------	----------------	--------------	-------------	--------------	--------------	-------------------	-------------------	-------------------------

FORD

Edge	Push-to-Start	2015-2019	•	•	•	•	•	•	•	•	•	•	•	•	•	•
------	---------------	-----------	---	---	---	---	---	---	---	---	---	---	---	---	---	---

LINCOLN

MKX	Push-to-Start	2017	•	•	•	•	•	•	•	•	•	•	•	•	•	•
-----	---------------	------	---	---	---	---	---	---	---	---	---	---	---	---	---	---

FIRMWARE VERSION

4.01

ONLY - SEULEMENT

To add the firmware version and the options, use the **FLASH LINK UPDATER** or **FLASH LINK MOBILE** tool, sold separately.

Program bypass option:	UNIT OPTION	DESCRIPTION
	C1	OEM Remote status (Lock/Unlock) monitoring
	D6	Push-to-Start
IF THE VEHICLE IS NOT EQUIPPED WITH FUNCTIONAL HOOD PIN:	A11	OFF
		Hood trigger (Output Status).



Parts required (Not included)

1x THAR-FOR3

MANDATORY INSTALL

*HOOD PIN



HOOD STATUS: THE HOOD PIN SWITCH MUST BE INSTALLED IF THE VEHICLE CAN BE REMOTE STARTED WITH THE HOOD OPEN, SET FUNCTION **A11** TO OFF.

A11

OFF

Notice: the installation of safety elements are mandatory. The hood pin is an essential security element and must be installed.

THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.

PARTS REQUIRED (NOT INCLUDED)


1x **FLASH LINK UPDATER, FLASH LINK MANAGER**
SOFTWARE | PROGRAMME
1x Microsoft Windows Computer with Internet connection
Ordinateur Microsoft Windows avec connection Internet

OR


1x **FLASH LINK MOBILE, FLASH LINK MOBILE APP**
Smartphone *Android* or *iOS* with Internet connection (*provider charges may apply*).
1x

MANDATORY

HOOD PIN



REMOTE START SAFETY OVERRIDE SWITCH

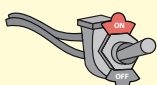
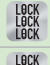






VALET SWITCH


Part #: RSPB available, Sold separately.

Notice: the installation of safety elements are mandatory. The hood pin and the valet switch are essential security elements and must be installed.


STAND ALONE CONFIGURATION

	Program bypass option	UNIT OPTION	DESCRIPTION
	OEM Remote Stand Alone Remote Starter:	OR D1.10  D1.1 	By default, LOCK, LOCK, LOCK Par défaut, VERROUILLE, VERROUILLE, VERROUILLE
	Program bypass option with oem remote:	C1	OEM Remote Monitoring
	Program bypass option with RF KIT antenna:	H1 to H6	Supported RF Kits and select RF Kit
	Program bypass option Vehicle hybrid only:	D4	Hybrid mode (Vehicle hybrid only)


REMOTE STARTER FUNCTIONALITY



All doors must be closed.

3X 

Press the OEM remote's Lock button 3x to remote-start (or remote-stop) the vehicle.




START

The vehicle will START.

REMOTE STARTER DIAGNOSTICS
MODULE RED LED

x2 flash :	Brake ON
x3 flash :	No tach
x4 flash :	Ignition before start
x5 flash :	Hood Open

REMOTE STARTER WARNING CARD



CUT THIS WARNING CARD AND STICK IT ON A VISIBLE PLACE:
or use the package **RSPB**, Sold separately.

WARNING

REMOTE STARTER



THE VEHICLE CAN BE STARTED BY EITHER: PRESSING THE LOCK BUTTON ON THE OEM REMOTE 3 TIMES CONSECUTIVELY OR BY A SMARTPHONE. **TURN ON** THE SAFETY SWITCH LOCATED UNDER THE DASHBOARD BEFORE WORKING ON THE VEHICLE.

DESCRIPTION




② Parking Lights switch


① Gateway module, located at right of steering column.

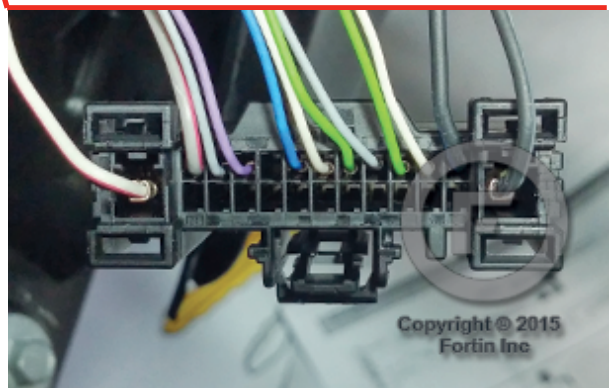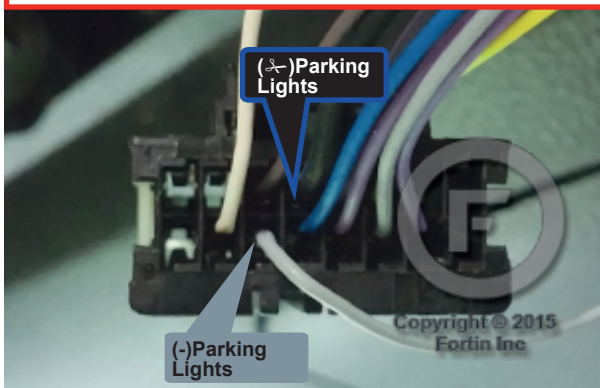

AUTOMATIC TRANSMISSION WIRING CONNECTION

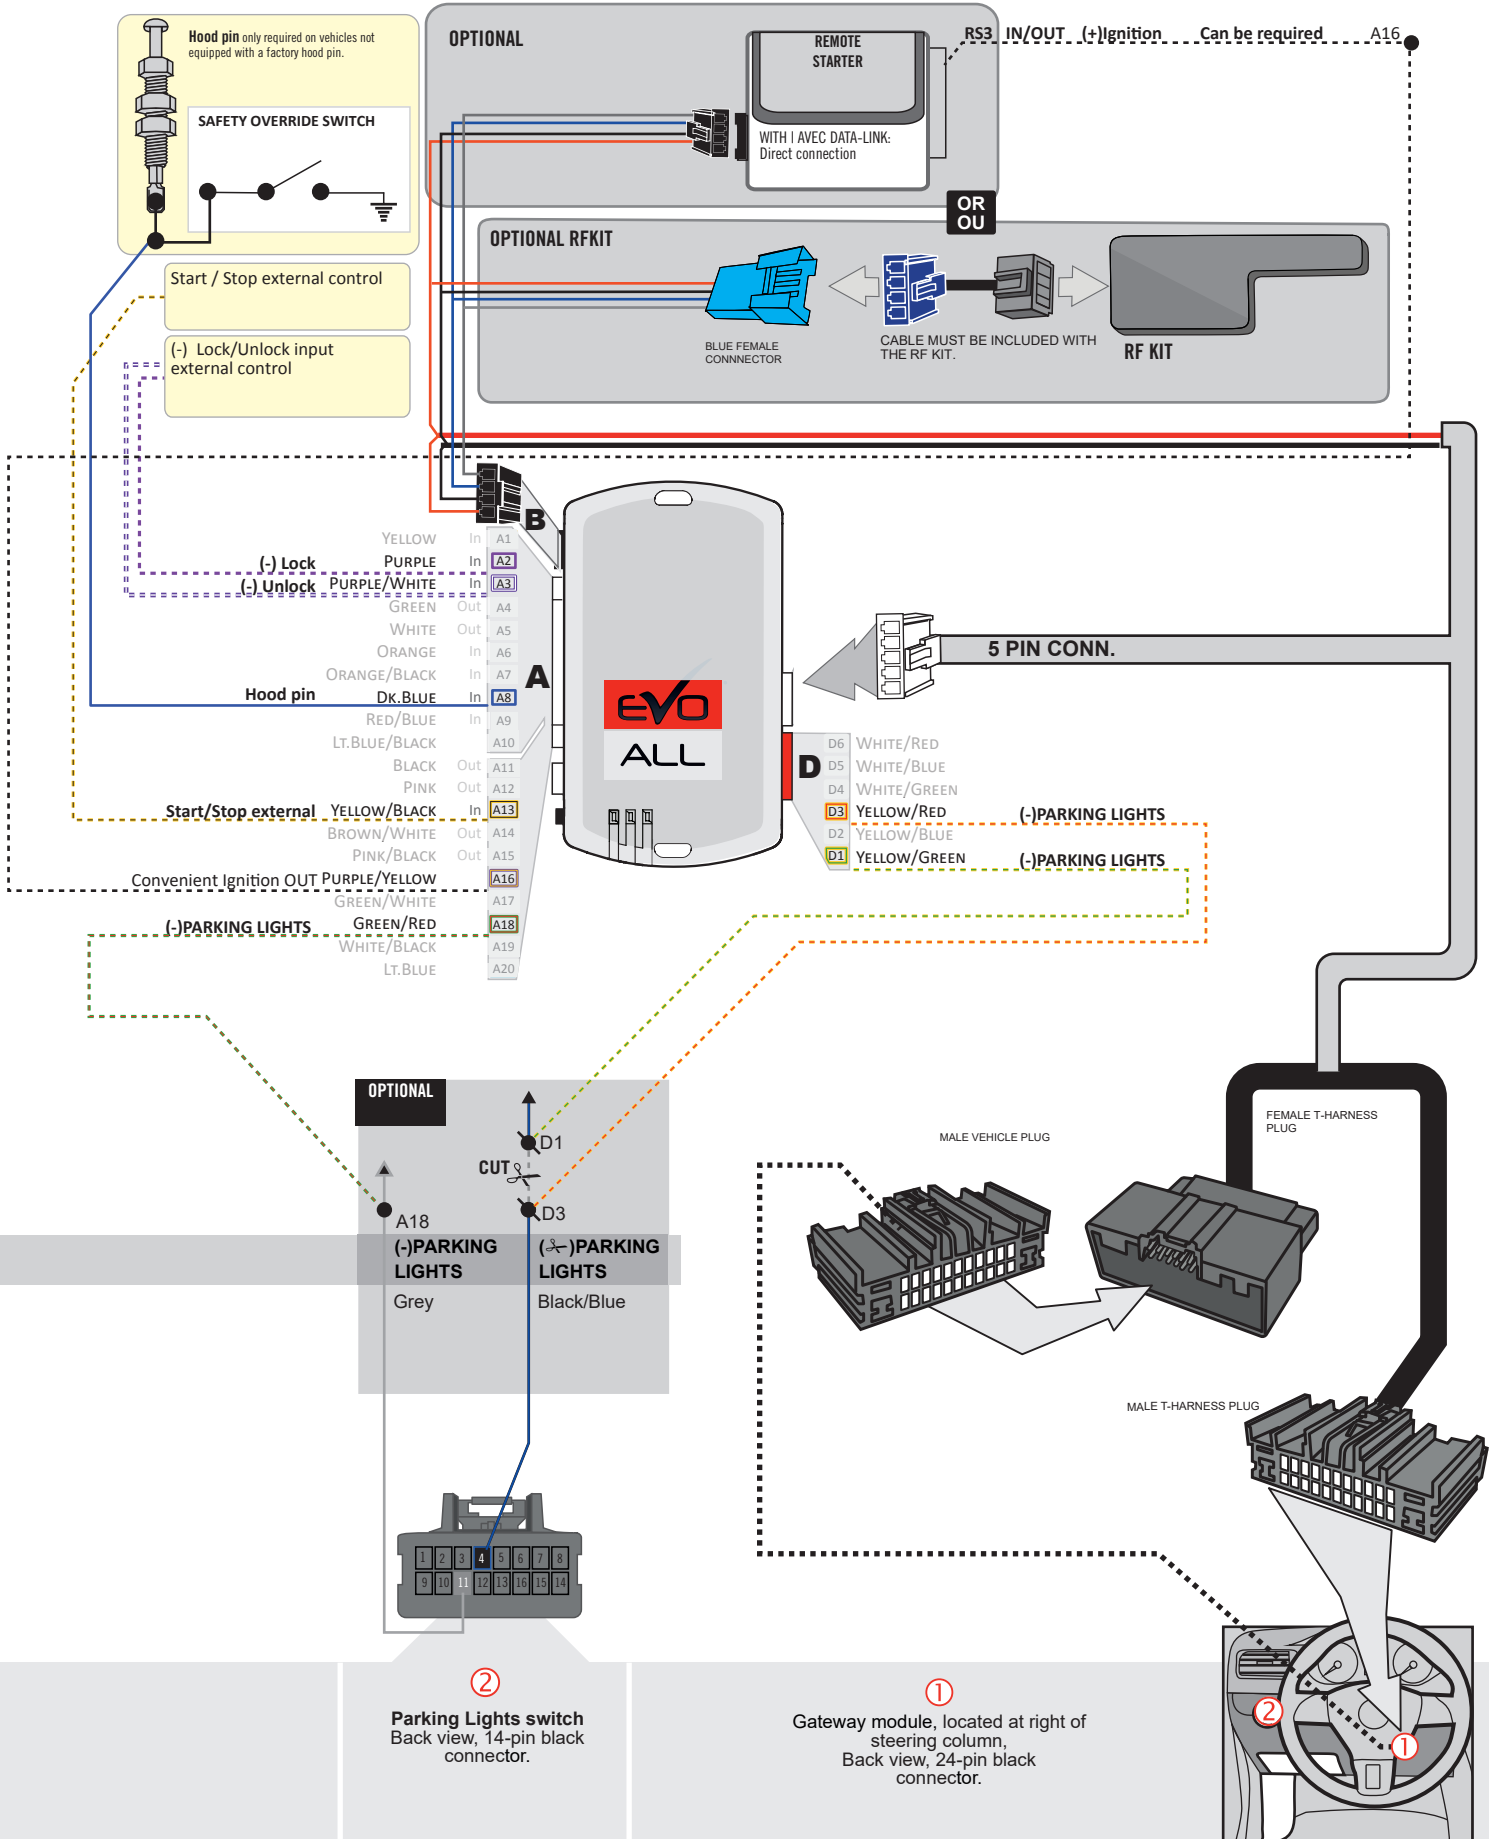


PROGRAMMING PROCEDURE

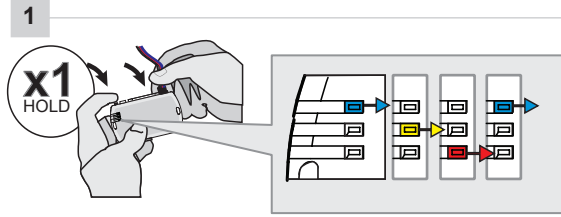



Press and hold the programming button:
Insert the 4-Pin (Data-Link) connector.

↳ The Blue, Red, Yellow and Blue & Red LEDs will alternatively illuminate.

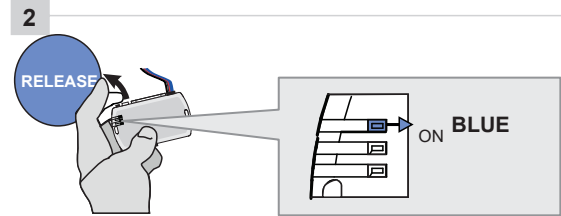


Release the programming button when the LED is BLUE.

If the LED is not solid BLUE disconnect the 4-Pin connector (Data-Link) and go back to step 1.

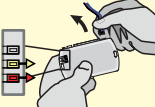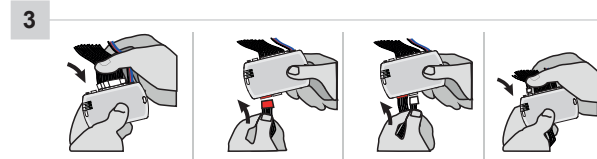



Insert the required remaining connectors.

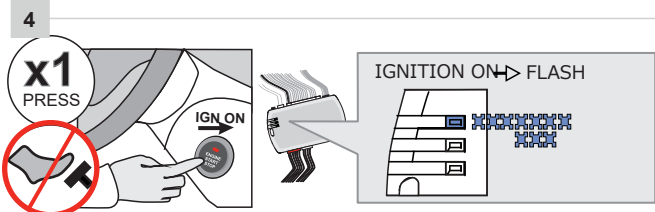


Do not press the brake pedal.
Press the Push-to-Start button once to turn on the ignition.

↳ The BLUE LED will flash rapidly.

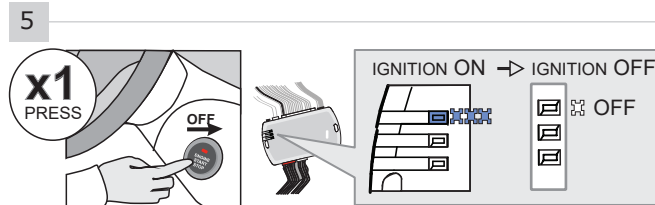



Press the Push-to-Start button once to turn off the ignition.

↳ The BLUE LED will turn off.

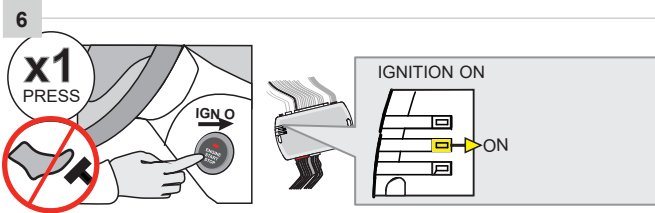


Do not press the brake pedal.
Press the Push-to-Start button once to turn on the ignition.

↳ The YELLOW LED will turn ON.

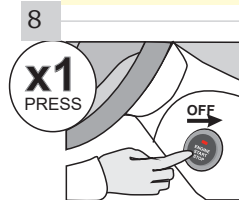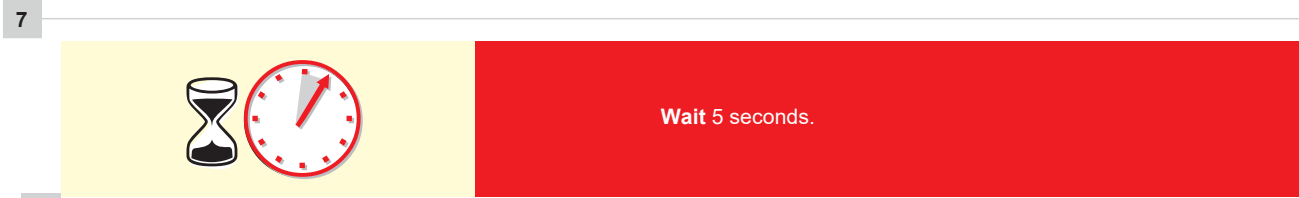


Press the Push-to-Start button once to turn off the ignition.

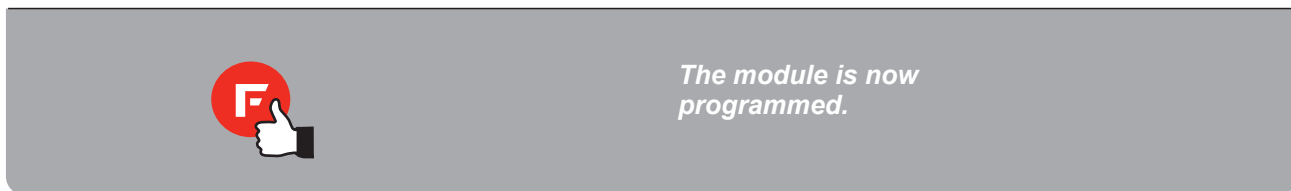


OPTIONAL RF-KIT PROGRAMMING



PROGRAM BYPASS OPTION

	<p>Program bypass option:</p>	<p>H2</p>	<p>Supported RF-KITS enable H2 Fortin 2</p>
---	-------------------------------	------------------	--

OPTIONAL FORTIN RF KIT SERIES 4 OR SERIES 9 PROGRAMMING




The module must be programmed on the vehicle.

MAKE SURE THE IGNITION KEY HAS BEEN IN THE OFF POSITION FOR AT LEAST 5 SECONDS.

1


ON **x1** PRESS



Do not press the brake pedal. **Press** the Push-to-Start button once to turn on the ignition.

2


OFF **x1** PRESS



Press the Push-to-Start button once to turn off the ignition.

3

ON **x1** PRESS




Do not press the brake pedal. **Press** the Push-to-Start button once to turn on the ignition.

4

4X BRAKES

x4 PRESS



Press and release the brake pedal four times.

The LED will turn off each time.

5

ON EACH TRANSMITTER

4 BUTTONS

[-] PRESS AND RELEASE

→ PRESS AND RELEASE


1 BUTTON

PRESS APPROX. 12 SEC. AND WAIT FOR THE BLUE LED


The LED will turn off each time.

6


OFF **x1** PRESS




Press the Push-to-Start button once to turn off the ignition.

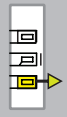


The **YELLOW** LED will turn ON solid.




The **YELLOW** LED will turn Off.

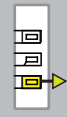


The **YELLOW** LED will turn ON solid.

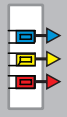


The **3** LED will turn ON solid.




The LED will flash rapidly.





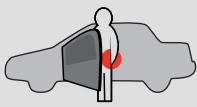

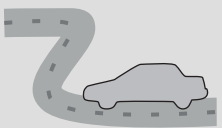
The **3** LED will turn off.



The **3** LED will turn off each time.



REMOTE STARTER FUNCTIONALITY

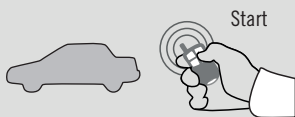 <p>Start</p> <p>All doors must be closed.</p> <p>Remote start the vehicle.</p>	 <p>UNLOCK</p> <p>Unlock the doors with either:</p> <ul style="list-style-type: none"> • The OEM remote • The remote-starter remote • Or the proximity remote 	 <p>Enter the vehicle with the SMART-KEY.</p>	 <p>DO NOT PRESS THE BRAKE PEDAL.</p> <p>Press and release the Push-to-Start button once.</p>	 <p>Press the brake pedal. The vehicle can now be put in to gear and driven.</p> <p>If the Smart-Key is not detected the vehicle will shut down.</p>
--	---	--	---	---

THAR-FOR3 THARNNESS STAND ALONE INSTALLATION

ADDENDUM - SUGGESTED WIRING CONFIGURATION



ONLY COMPATIBLE WITH AUTOMATIC TRANSMISSION VEHICLES.



Vehicle functions supported in this diagram (functional if equipped)

VEHICLE	YEARS	Immobilizer bypass	Lock	Unlock	Arm	Disarm	RAP Disable	Parking Lights	Tachometer	Heated seats	Heated Mirrors	Rear defrost	Door Status	Trunk Status	Hood Status*	Hand-Brake Status	Foot-Brake Status	Active OEM Remote Start
FORD																		
Edge	Key 2015-2019	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•

FIRMWARE VERSION

4.01

ONLY - SEULEMENT

To add the firmware version and the options, use the **FLASH LINK UPDATER** or **FLASH LINK MOBILE** tool, sold separately.


	PROGRAM BYPASS OPTION:	UNIT OPTION	DESCRIPTION
		C1	OEM Remote status (Lock/Unlock) monitoring

IF THE VEHICLE IS NOT EQUIPPED WITH FUNCTIONAL HOOD PIN:	A11	OFF	Hood trigger (Output Status).
--	-----	-----	-------------------------------



Parts required (Not included)

 1x THAR-FOR3



The vehicle must be equipped with the OEM remote with the door locks.

MANDATORY INSTALL

*HOOD PIN



HOOD STATUS: THE HOOD PIN SWITCH MUST BE INSTALLED IF THE VEHICLE CAN BE REMOTE STARTED WITH THE HOOD OPEN, SET FUNCTION A11 TO OFF.

A11

OFF

Notice: the installation of safety elements are mandatory. The hood pin is an essential security element and must be installed.

THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.

PARTS REQUIRED (NOT INCLUDED)


1x **FLASH LINK UPDATER,**
 1x **FLASH LINK MANAGER**
 SOFTWARE | PROGRAMME
 1x Microsoft Windows Computer with Internet connection

OR


1x **FLASH LINK MOBILE**
 1x **FLASH LINK MOBILE APP**
 Smartphone *Android* or *iOS* with Internet connection (*provider charges may apply*).

MANDATORY

HOOD PIN



REMOTE START SAFETY OVERRIDE SWITCH

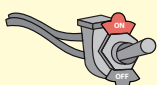





VALET SWITCH


Part #: RSPB available, Sold separately.

Notice: the installation of safety elements are mandatory. The hood pin and the valet switch are essential security elements and must be installed.


STAND ALONE CONFIGURATION

	Program bypass option	UNIT OPTION	DESCRIPTION
	OEM Remote Stand Alone Remote Starter:	OR D1.10 D1.1	By default, LOCK, LOCK, LOCK Par défaut, VERROUILLE, VERROUILLE, VERROUILLE
	Program bypass option with oem remote:	C1	OEM Remote Monitoring
	Program bypass option with RF KIT antenna:	H1 to H6	Supported RF Kits and select RF Kit
	Program bypass option Vehicle hybrid only:	D4	Hybrid mode (Vehicle hybrid only)


REMOTE STARTER FUNCTIONALITY



All doors must be closed.

3X 

Press the OEM remote's Lock button 3x to remote-start (or remote-stop) the vehicle.




The vehicle will START.

REMOTE STARTER DIAGNOSTICS
MODULE RED LED

x2 flash :	Brake ON
x3 flash :	No tach
x4 flash :	Ignition before start
x5 flash :	Hood Open

REMOTE STARTER WARNING CARD



CUT THIS WARNING CARD AND STICK IT ON A VISIBLE PLACE:
 or use the package RSPB, Sold separately.

WARNING

REMOTE STARTER



THE VEHICLE CAN BE STARTED BY EITHER: PRESSING THE LOCK BUTTON ON THE OEM REMOTE 3 TIMES CONSECUTIVELY OR BY A SMARTPHONE. **TURN ON** THE SAFETY SWITCH LOCATED UNDER THE DASHBOARD BEFORE WORKING ON THE VEHICLE.

DESCRIPTION




② Parking Lights switch


① Gateway module, located at right of steering column.

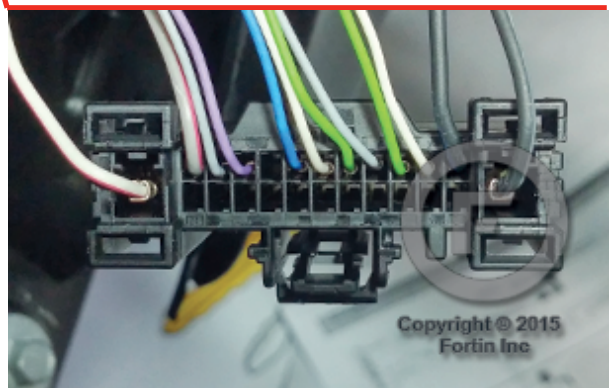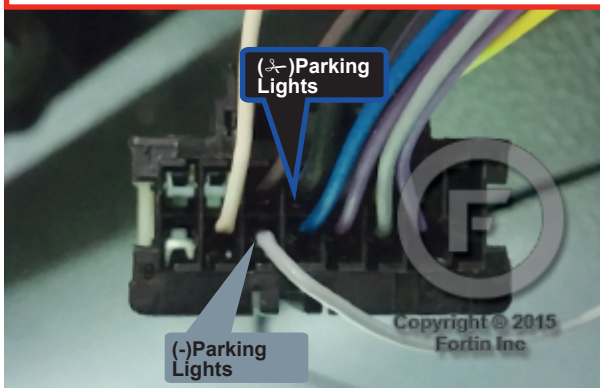

AUTOMATIC TRANSMISSION WIRING CONNECTION

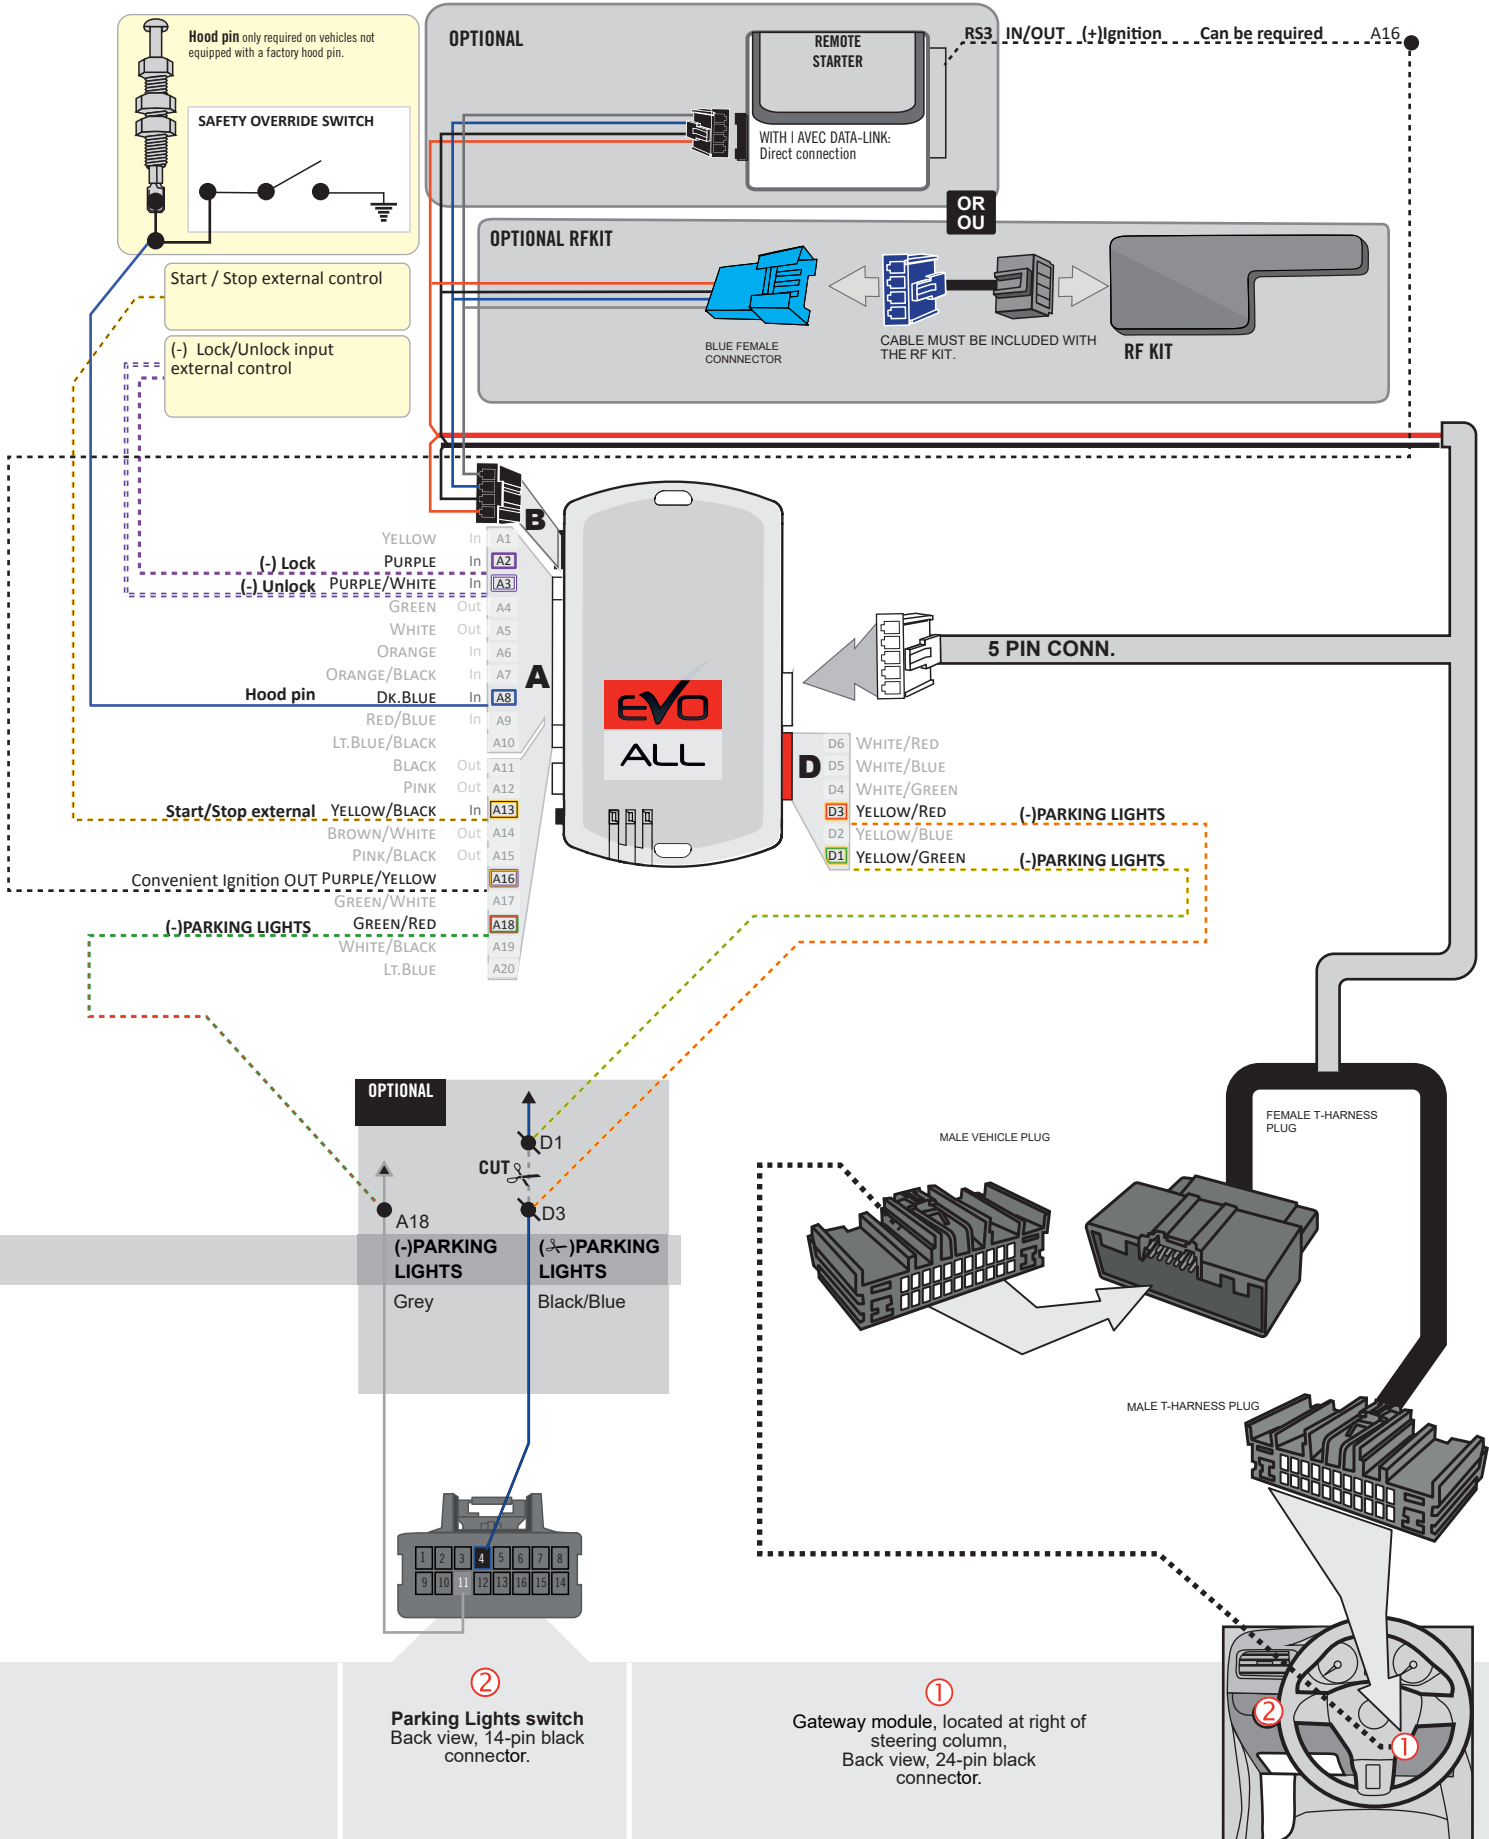


PROGRAMMING PROCEDURE

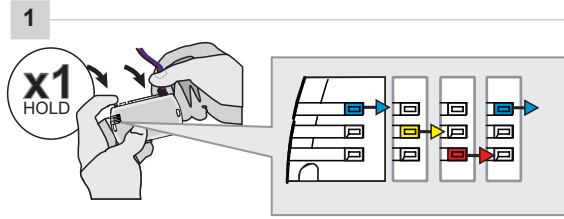


Press and hold the programming button:
Insert the 4-Pin (Data-Link) connector.

↳ The Blue, Red, Yellow and Blue & Red LEDs will alternatively illuminate.

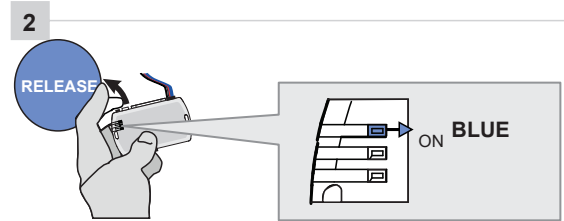


Release the programming button when the LED is BLUE.

If the LED is not solid BLUE disconnect the 4-Pin connector (Data-Link) and go back to step 1.

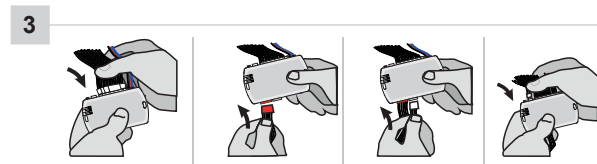


Insert the required remaining connectors.

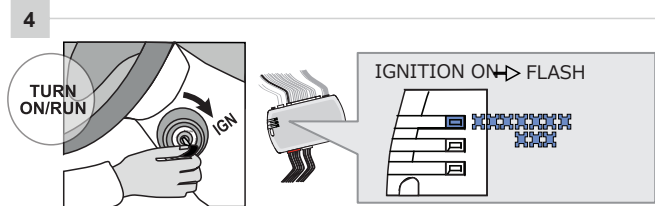


Turn the key to the Ignition ON/RUN position.

↳ The BLUE LED will flash rapidly.

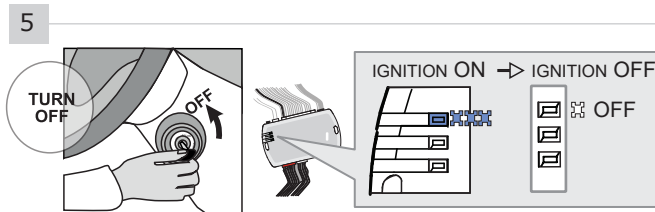


Turn the key to the OFF position.

↳ The BLUE LED will turn off.

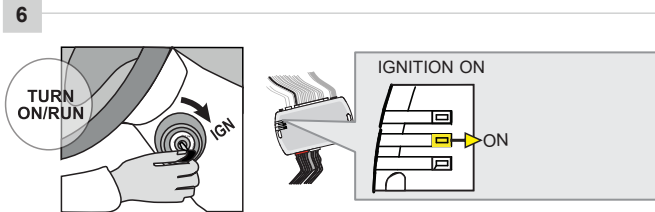


Turn the key to the Ignition ON/RUN position.

↳ The YELLOW LED will turn ON.

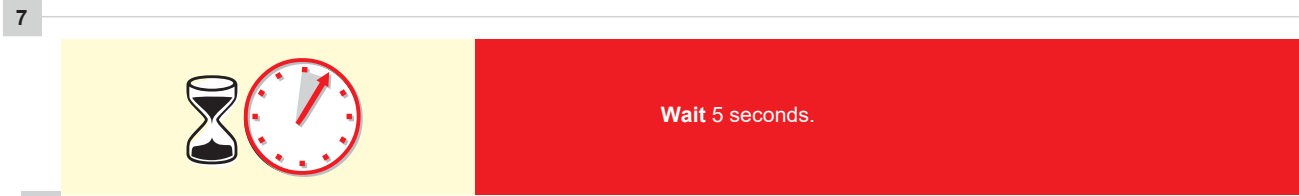


Wait 5 seconds.

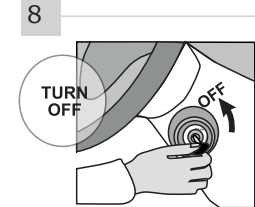

Turn the key to the OFF position.


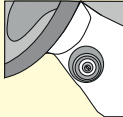


The module is now programmed.














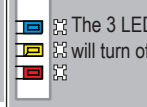
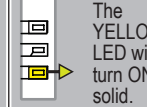
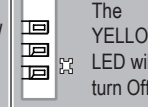
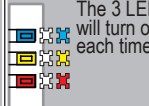
	<p>Program bypass option:</p>	<p>H2</p>	<p>Supported RF-KITS enable H2 Fortin 2</p>
---	-------------------------------	------------------	--

OPTIONAL FORTIN RF KIT SERIES 4 OR SERIES 9 PROGRAMMING

The module must be programmed on the vehicle.

MAKE SURE THE IGNITION KEY HAS BEEN IN THE OFF POSITION FOR AT LEAST 5 SECONDS.

<p>1</p> <p>ON TURN ON/RUN</p>  <p>Turn the key to the ON/RUN position.</p>	<p>2</p> <p>OFF TURN OFF</p>  <p>Turn the ignition to the OFF position.</p>	<p>3</p> <p>ON TURN ON/RUN</p>  <p>Turn the key to the ON/RUN position.</p>	<p>4</p> <p>4X BRAKES</p> <p>x4 PRESS</p>  <p>Press and release the brake pedal four times.</p>	<p>5</p> <p>ON EACH TRANSMITTER</p> <p>TÉLÉCOMMANDES</p> <p>4 BUTTONS</p> <p>[-] PRESS AND RELEASE</p> <p>→ PRESS AND RELEASE</p> <p>[LOCK] PRESS AND RELEASE</p> <p>1 BUTTON</p> <p>PRESS APPROX. 12 SEC. AND WAIT FOR THE BLUE LED TO TURN OFF THEN BACK ON SOLID THEN RELEASE.</p>	<p>6</p> <p>OFF TURN OFF</p>  <p>Turn the ignition to the OFF position.</p>	<p>7</p> <p>ON TURN ON/RUN</p>  <p>Turn the key to the ON/RUN position and leave it ON for 5 sec.</p> 	<p>8</p> <p>OFF TURN OFF</p>  <p>Turn the ignition to the OFF position.</p>
 <p>The YELLOW LED will turn ON solid.</p>	 <p>The YELLOW LED will turn Off.</p>	 <p>The LED will turn ON solide.</p> <p>The YELLOW LED will turn ON solid.</p>	 <p>The LED will flash rapidly.</p> <p>The 3 LED will turn ON solid.</p>	 <p>The LED will turn off each time.</p> <p>The LED will flash rapidly.</p>	 <p>The LED will turn Off.</p>	 <p>The 3 LED will turn off.</p> <p>The YELLOW LED will turn ON solid.</p>	 <p>The LED will turn Off.</p> <p>The YELLOW LED will turn Off.</p>
 <p>The 3 LED will turn off each time.</p>							

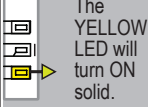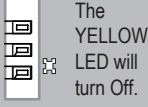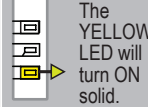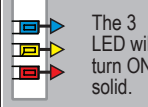

REMOTE STARTER FUNCTIONALITY



All doors must be closed.



Remote start the vehicle.



Unlock the doors with the remote-starter remote or the OEM remote.



Insert and Turn the key to the Ignition ON/RUN position.



Press the brake pedal.



The vehicle can now be put in to gear and driven.

THAR-FOR3 THARNNESS STAND ALONE INSTALLATION

ADDENDUM - SUGGESTED WIRING CONFIGURATION



ONLY COMPATIBLE WITH AUTOMATIC TRANSMISSION VEHICLES.



Vehicle functions supported in this diagram (functional if equipped)

VEHICLE	YEARS	Immobilizer bypass	Lock	Unlock	Arm	Disarm	RAP Disable	Parking Lights	Tachometer	Heated seats	Heated Mirrors	Rear defrost	Door Status	Trunk Status	Hood Status*	Hand-Brake Status	Foot-Brake Status	Active OEM Remote Start
FORD																		
Explorer	Key 2016-2019	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•

FIRMWARE VERSION

4.01

ONLY - SEULEMENT

To add the firmware version and the options, use the **FLASH LINK UPDATER** or **FLASH LINK MOBILE** tool, sold separately.


UNIT OPTION	DESCRIPTION
C1	OEM Remote status (Lock/Unlock) monitoring

IF THE VEHICLE IS NOT EQUIPPED WITH FUNCTIONAL HOOD PIN:	A11	OFF	Hood trigger (Output Status).
--	------------	------------	-------------------------------



Parts required (Not included)

 1x THAR-FOR3



The vehicle must be equipped with the OEM remote with the door locks.

MANDATORY INSTALL

*HOOD PIN



HOOD STATUS: THE HOOD PIN SWITCH MUST BE INSTALLED IF THE VEHICLE CAN BE REMOTE STARTED WITH THE HOOD OPEN, SET FUNCTION **A11** TO OFF.

A11

OFF

Notice: the installation of safety elements are mandatory. The hood pin is an essential security element and must be installed.

THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.


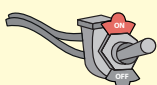
PARTS REQUIRED (NOT INCLUDED)

1x **FLASH LINK UPDATER**
 1x **FLASH LINK MANAGER**
SOFTWARE | PROGRAMME
 1x Microsoft Windows Computer with Internet connection

OR

1x **FLASH LINK MOBILE**
 1x **FLASH LINK MOBILE APP**
Smartphone *Android* or *iOS* with Internet connection (*provider charges may apply*).

MANDATORY


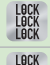




HOOD PIN  REMOTE START SAFETY OVERRIDE SWITCH 

VALET SWITCH


Part #: RSPB available, Sold separately.

Notice: the installation of safety elements are mandatory. The hood pin and the valet switch are essential security elements and must be installed.



STAND ALONE CONFIGURATION

	Program bypass option	UNIT OPTION	DESCRIPTION
	OEM Remote Stand Alone Remote Starter:	OR D1.10  D1.1 	By default, LOCK, LOCK, LOCK Par défaut, VERROUILLE, VERROUILLE, VERROUILLE
	Program bypass option with oem remote:	C1	OEM Remote Monitoring
	Program bypass option with RF KIT antenna:	H1 to H6	Supported RF Kits and select RF Kit
	Program bypass option Vehicle hybrid only:	D4	Hybrid mode (Vehicle hybrid only) Mode hybride (vehicule hybride seulement)


REMOTE STARTER FUNCTIONALITY



All doors must be closed.

3X  

Press the OEM remote's Lock button 3x to remote-start (or remote-stop) the vehicle.




The vehicle will START.

REMOTE STARTER DIAGNOSTICS
MODULE RED LED


x2 flash :	Brake ON
x3 flash :	No tach
x4 flash :	Ignition before start
x5 flash :	Hood Open

REMOTE STARTER WARNING CARD



CUT THIS WARNING CARD AND STICK IT ON A VISIBLE PLACE:
or use the package RSPB, Sold separately.

WARNING




REMOTE STARTER




THE VEHICLE CAN BE STARTED BY EITHER: PRESSING THE LOCK BUTTON ON THE OEM REMOTE 3 TIMES CONSECUTIVELY OR BY A SMARTPHONE. **TURN ON** THE SAFETY SWITCH LOCATED UNDER THE DASHBOARD BEFORE WORKING ON THE VEHICLE.

DESCRIPTION









② Parking Lights switch

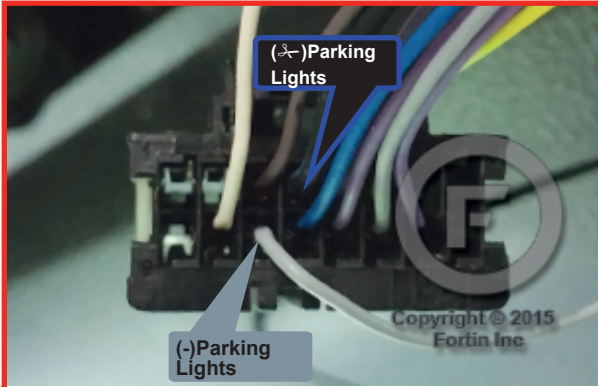

③ Fuse box

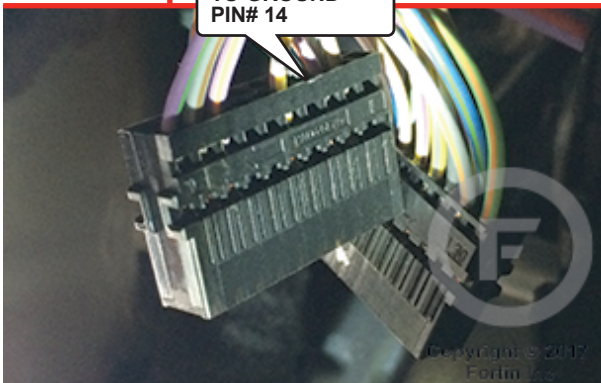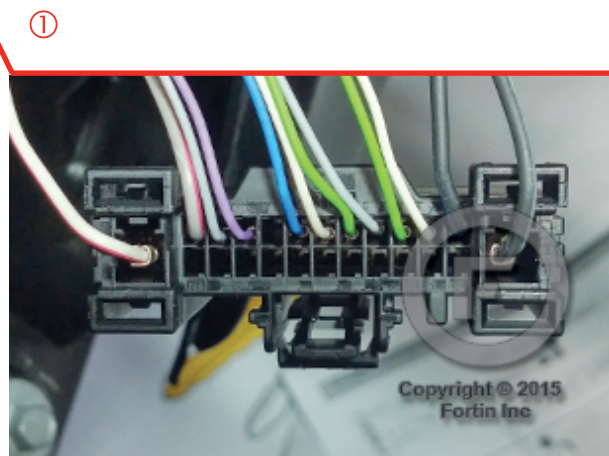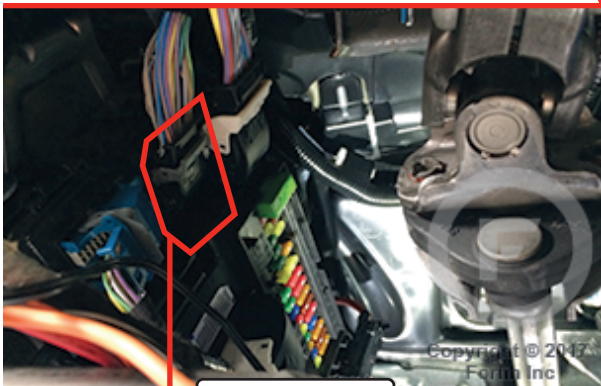

AUTOMATIC TRANSMISSION WIRING CONNECTION

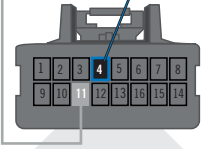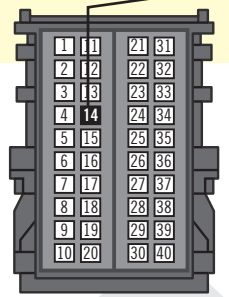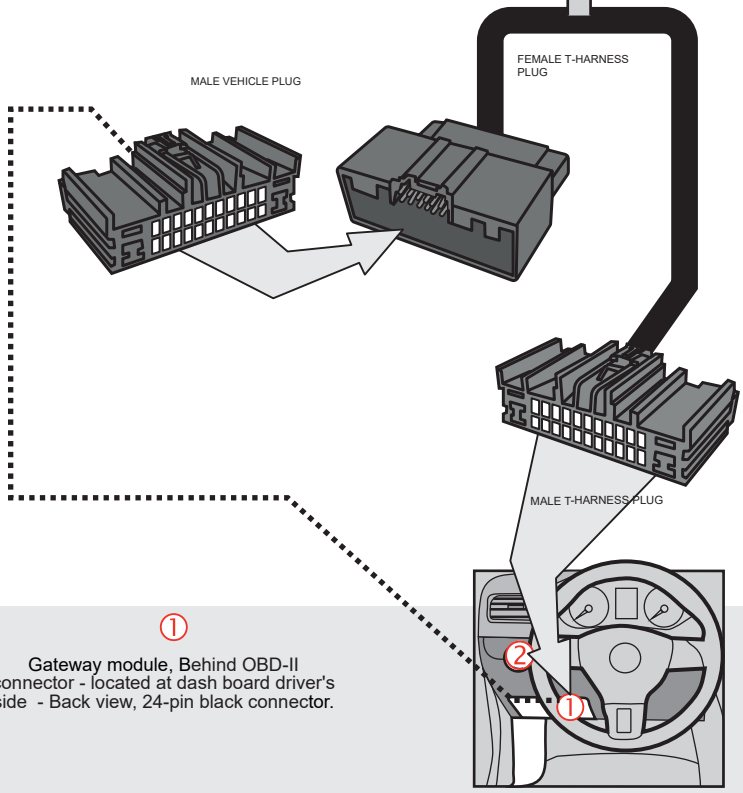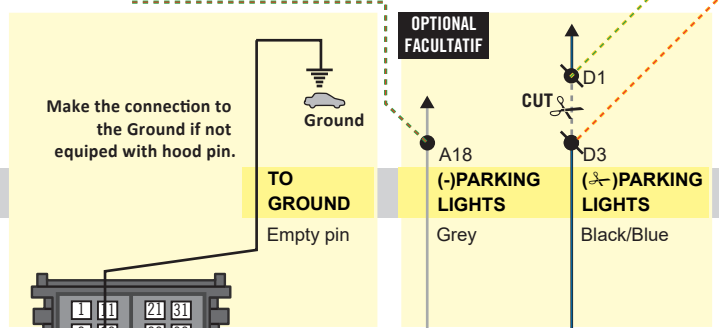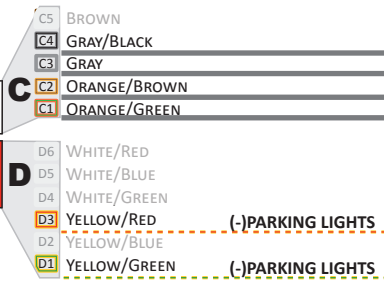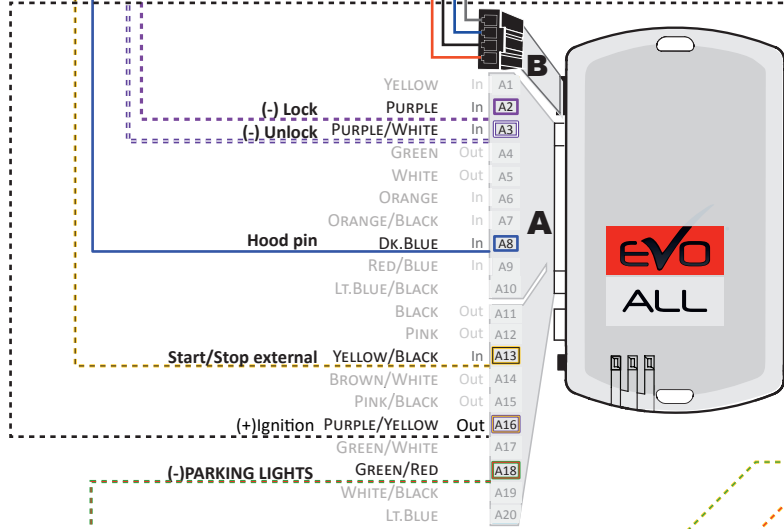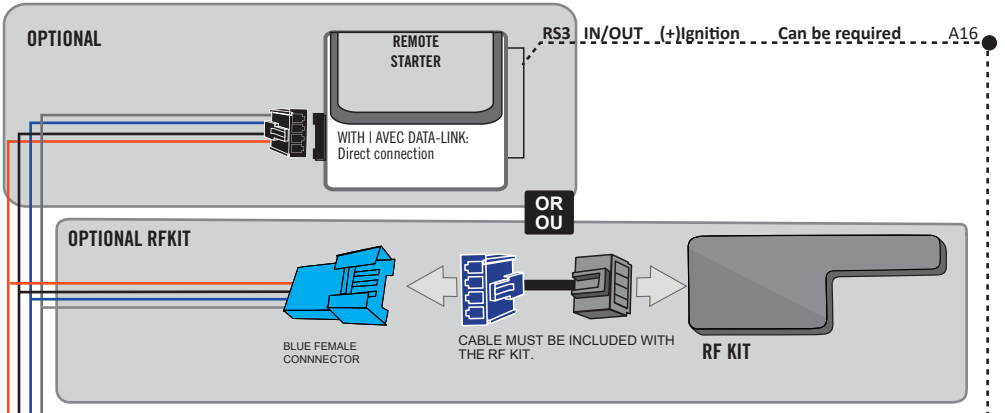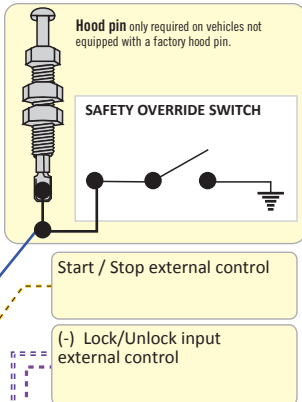


③ Back view Fuse box 20-pin black Connector

② Back view Parking Lights switch 14-pin Black Connector


① Gateway module, Behind OBD-II connector - located at dash board driver's side - Back view, 24-pin black connector.

PROGRAMMING PROCEDURE

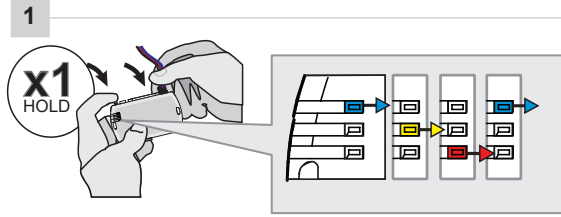



Press and hold the programming button:
Insert the 4-Pin (Data-Link) connector.

↳ The Blue, Red, Yellow and Blue & Red LEDs will alternatively illuminate.

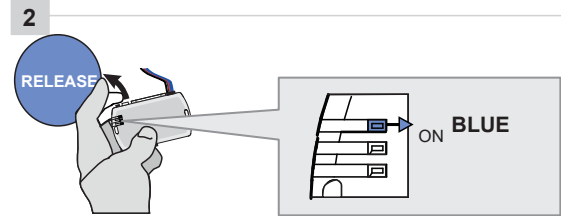


Release the programming button when the LED is BLUE.

If the LED is not solid BLUE disconnect the 4-Pin connector (Data-Link) and go back to step 1.

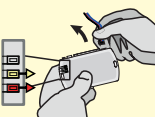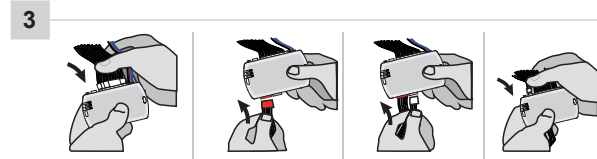



Insert the required remaining connectors.

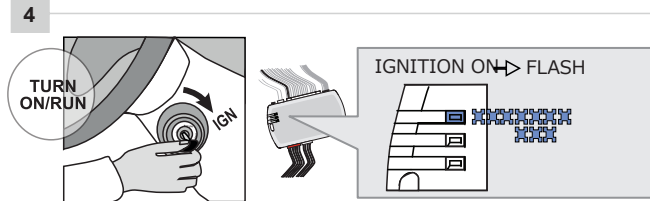


Turn the key to the Ignition ON/RUN position.

↳ The BLUE LED will flash rapidly.

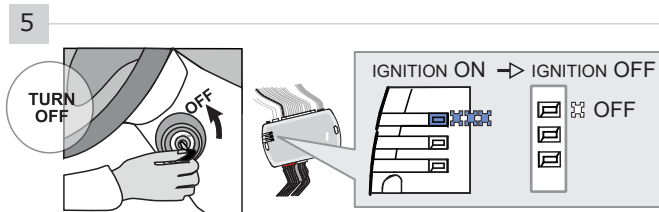


Turn the key to the OFF position.

↳ The BLUE LED will turn off.

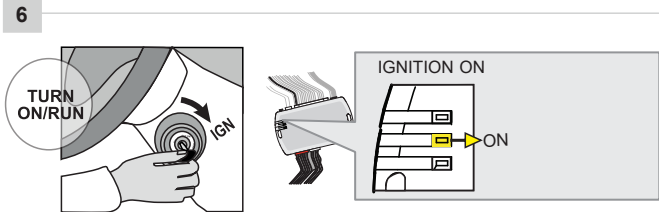


Turn the key to the Ignition ON/RUN position.

↳ The YELLOW LED will turn ON.



Wait 5 seconds.

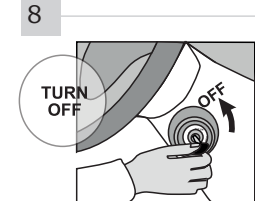

Turn the key to the OFF position.



The module is now programmed.

REMOTE STARTER FUNCTIONALITY



All doors must be closed.



Remote start the vehicle.



Unlock the doors with the remote-starter remote or the OEM remote.



Insert and Turn the key to the Ignition ON/RUN position.



Press the brake pedal.



The vehicle can now be put in to gear and driven.

THAR-FOR3 THARNNESS STAND ALONE INSTALLATION

ADDENDUM - SUGGESTED WIRING CONFIGURATION



ONLY COMPATIBLE WITH AUTOMATIC TRANSMISSION VEHICLES.



Vehicle functions supported in this diagram (functional if equipped)

VEHICLE	YEARS	Immobilizer bypass	Lock	Unlock	Arm	Disarm	RAP Disable	Tachometer	Heated seats	Heated Mirrors	Rear defrost	Door Status	Trunk Status	Hood Status*	Hand-Brake Status	Foot-Brake Status	Active OEM Remote Start
FORD																	
Explorer	Push-to-Start 2016-2019	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•

FIRMWARE VERSION

4.01

ONLY - SEULEMENT

To add the firmware version and the options, use the **FLASH LINK UPDATER** or **FLASH LINK MOBILE** tool, sold separately.

	PROGRAM BYPASS OPTION:	UNIT OPTION	DESCRIPTION
	Program bypass option:	C1	OEM Remote status (Lock/Unlock) monitoring
		D6	Push-to-Start
IF THE VEHICLE IS NOT EQUIPPED WITH FUNCTIONAL HOOD PIN:		A11	OFF
			Hood trigger (Output Status).



Parts required (Not included)

1x THAR-FOR3

MANDATORY INSTALL

***HOOD PIN**



HOOD STATUS: THE HOOD PIN SWITCH MUST BE INSTALLED IF THE VEHICLE CAN BE REMOTE STARTED WITH THE HOOD OPEN, SET FUNCTION **A11** TO OFF.

A11

OFF

Notice: the installation of safety elements are mandatory. The hood pin is an essential security element and must be installed.

THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.


PARTS REQUIRED (NOT INCLUDED)


1x **FLASH LINK UPDATER**
 1x **FLASH LINK MANAGER**
SOFTWARE | PROGRAMME
 1x Microsoft Windows Computer with Internet connection

OR

1x **FLASH LINK MOBILE**
 1x **FLASH LINK MOBILE APP**
Smartphone Android or iOS with Internet connection (provider charges may apply).

MANDATORY

HOOD PIN 

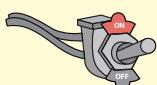
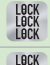



REMOTE START SAFETY OVERRIDE SWITCH 

VALET SWITCH


Part #: RSPB available, Sold separately.

Notice: the installation of safety elements are mandatory. The hood pin and the valet switch are essential security elements and must be installed.


STAND ALONE CONFIGURATION

	Program bypass option	UNIT OPTION	DESCRIPTION
	OEM Remote Stand Alone Remote Starter:	D1.10 	By default, LOCK, LOCK, LOCK Par défaut, VERROUILLE,VERROUILLE,VERROUILLE
		D1.1 	
	Program bypass option with oem remote:	C1	OEM Remote Monitoring
	Program bypass option with RF KIT antenna:	H1 to H6	Supported RF Kits and select RF Kit


REMOTE STARTER FUNCTIONALITY



All doors must be closed.

3X 

Press the OEM remote's Lock button 3x to remote-start (or remote-stop) the vehicle.




START

The vehicle will START.

REMOTE STARTER DIAGNOSTICS
MODULE RED LED


x2 flash :	Brake ON
x3 flash :	No tach
x4 flash :	Ignition before start
x5 flash :	Hood Open

REMOTE STARTER WARNING CARD



CUT THIS WARNING CARD AND STICK IT ON A VISIBLE PLACE:
 or use the package RSPB, Sold separately.

WARNING




REMOTE STARTER


THE VEHICLE CAN BE STARTED BY EITHER: PRESSING THE LOCK BUTTON ON THE OEM REMOTE 3 TIMES CONSECUTIVELY OR BY A SMARTPHONE. **TURN ON** THE SAFETY SWITCH LOCATED UNDER THE DASHBOARD BEFORE WORKING ON THE VEHICLE.

DESCRIPTION






① Gateway module left side of dash

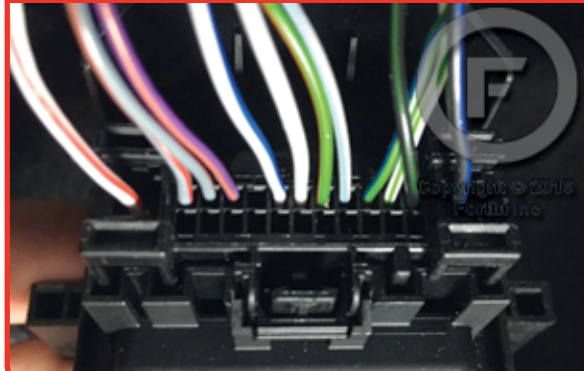

② Parking Lights switch

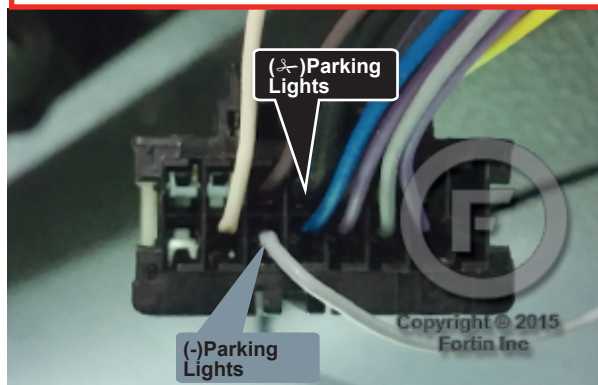


AUTOMATIC TRANSMISSION WIRING CONNECTION

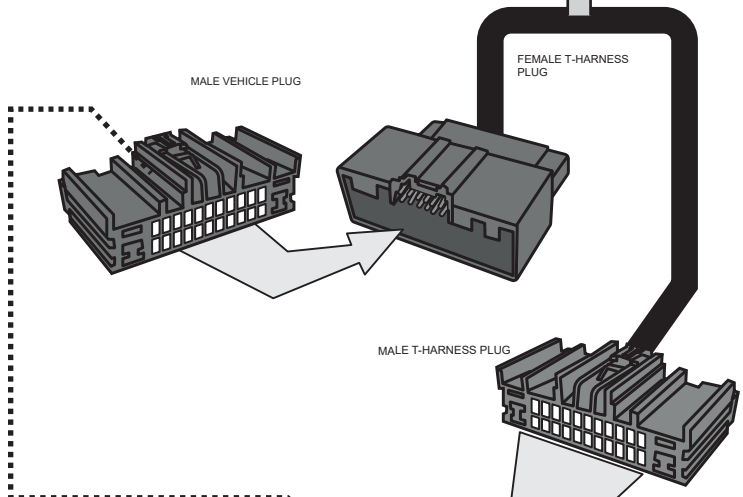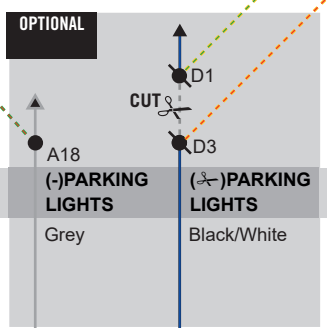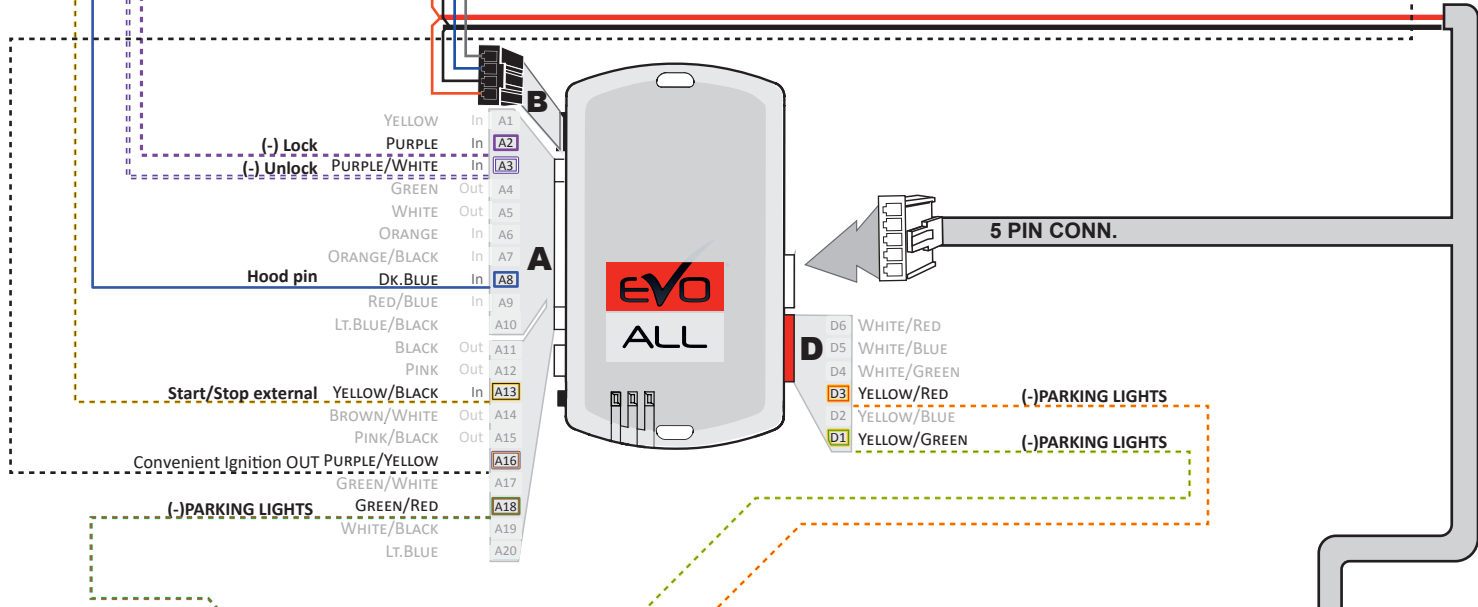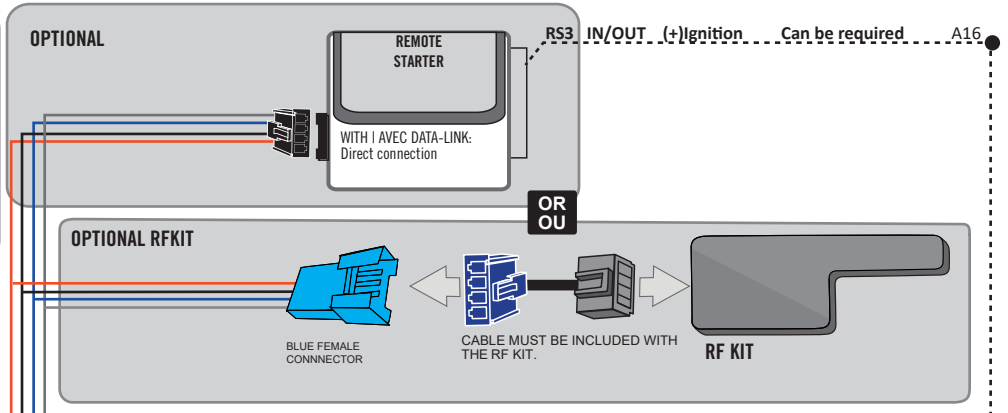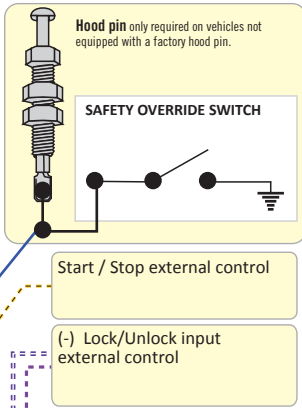


② Parking Lights switch
Back view, 14-pin black connector.

① Gateway module, located at dash board driver's side, Back view, 24-pin black connector.

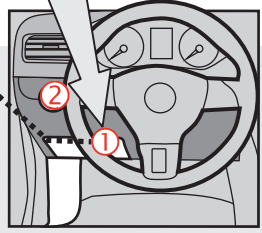


PROGRAMMING PROCEDURE

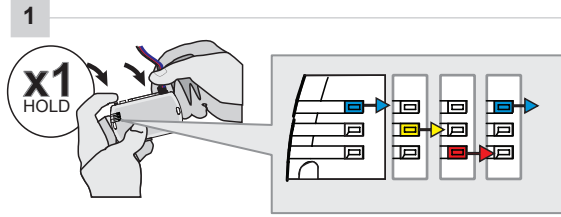



Press and hold the programming button:
Insert the 4-Pin (Data-Link) connector.

↳ The Blue, Red, Yellow and Blue & Red LEDs will alternatively illuminate.

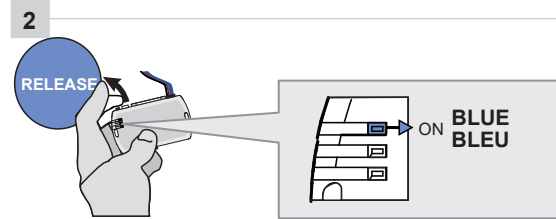


Release the programming button when the LED is BLUE.

 If the LED is not solid BLUE disconnect the 4-Pin connector (Data-Link) and go back to step 1.

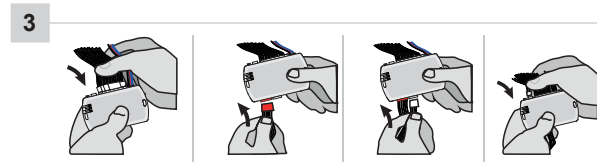


Insert the required remaining connectors.

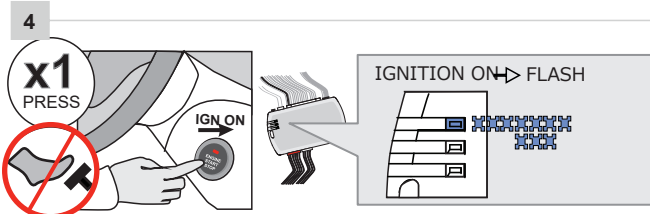


Do not press the brake pedal.
Press the Push-to-Start button once to turn on the ignition.

↳ The BLUE LED will flash rapidly.

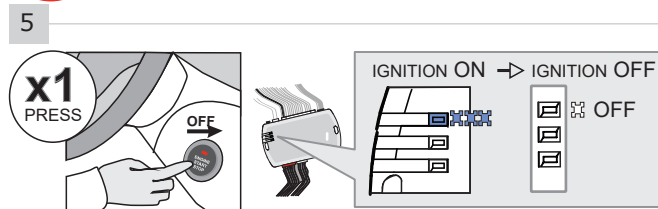

Press the Push-to-Start button once to turn off the ignition.


↳ The BLUE LED will turn off.

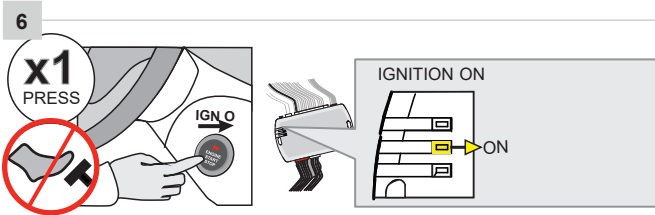

Do not press the brake pedal.
Press the Push-to-Start button once to turn on the ignition.

↳ The YELLOW LED will turn ON.

Wait 5 seconds.

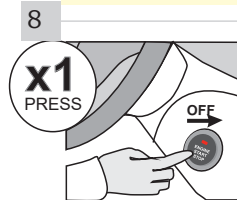

Press the Push-to-Start button once to turn off the ignition.

The module is now programmed.

REMOTE STARTER FUNCTIONALITY



All doors must be closed.

 


Remote start the vehicle.



Unlock the doors with either:

- The OEM remote
- The remote-starter remote
- Or the proximity remote



Enter the vehicle with the SMART-KEY.



DO NOT PRESS THE BRAKE PEDAL.

Press and release the Push-to-Start button once.



Press the brake pedal. The vehicle can now be put in to gear and driven.
If the Smart-Key is not detected the vehicle will shut down.

THAR-FOR3 THARNNESS STAND ALONE INSTALLATION

ADDENDUM - SUGGESTED WIRING CONFIGURATION



ONLY COMPATIBLE WITH AUTOMATIC TRANSMISSION VEHICLES.



Vehicle functions supported in this diagram (functional if equipped)

VEHICLE	YEARS	Immobilizer bypass	Lock	Unlock	Arm	Disarm	RAP Disable	Parking Lights	Tachometer	Heated seats	Heated Mirrors	Rear defrost	Door Status	Trunk Status	Hood Status*	Hand-Brake Status	Foot-Brake Status	Active OEM Remote Start	
FORD																			
F-150	Push-to-Start 2015-2018	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
F-250	Push-to-Start 2017	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
F-350	Push-to-Start 2017	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
F-450	Push-to-Start 2017	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
LINCOLN																			
MKC	Push-to-Start 2015-2019	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•

FIRMWARE VERSION

4.01

ONLY - SEULEMENT

To add the firmware version and the options, use the **FLASH LINK UPDATER** or **FLASH LINK MOBILE** tool, sold separately.

EVO ALL	Program bypass option IF THE VEHICLE IS NOT EQUIPPED WITH FUNCTIONAL HOOD PIN:	UNIT OPTION	DESCRIPTION
		A11	OFF
EVO ALL	Program bypass option:	UNIT OPTION	DESCRIPTION
		C1	OEM Remote status (Lock/Unlock) monitoring



Parts required (Not included)

1x THAR-FOR3

MANDATORY INSTALL

*HOOD PIN



HOOD STATUS: THE HOOD PIN SWITCH MUST BE INSTALLED IF THE VEHICLE CAN BE REMOTE STARTED WITH THE HOOD OPEN, SET FUNCTION **A11** TO OFF.

A11

OFF

Notice: the installation of safety elements are mandatory. The hood pin is an essential security element and must be installed.

THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.

PARTS REQUIRED (NOT INCLUDED)


1x **FLASH LINK UPDATER**
 1x **FLASH LINK MANAGER**
SOFTWARE | PROGRAMME
 1x Microsoft Windows Computer with Internet connection

OR


1x **FLASH LINK MOBILE**
 1x **FLASH LINK MOBILE APP**
Smartphone Android or iOS with Internet connection (provider charges may apply).

MANDATORY

HOOD PIN



REMOTE START SAFETY OVERRIDE SWITCH

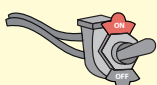
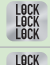






VALET SWITCH


Part #: RSPB available, Sold separately.

Notice: the installation of safety elements are mandatory. The hood pin and the valet switch are essential security elements and must be installed.


STAND ALONE CONFIGURATION

	Program bypass option	UNIT OPTION	DESCRIPTION
	OEM Remote Stand Alone Remote Starter:	OR D1.10  D1.1 	By default, LOCK, LOCK, LOCK Par défaut, VERROUILLE, VERROUILLE, VERROUILLE
	Program bypass option with oem remote:	C1	OEM Remote Monitoring
	Program bypass option with RF KIT antenna:	H1 to H6	Supported RF Kits and select RF Kit
	Program bypass option Vehicle hybrid only:	D4	Hybrid mode (Vehicle hybrid only)


REMOTE STARTER FUNCTIONALITY



All doors must be closed.

3X 

Press the OEM remote's Lock button 3x to remote-start (or remote-stop) the vehicle.




START

The vehicle will START.

REMOTE STARTER DIAGNOSTICS
MODULE RED LED


x2 flash :	Brake ON
x3 flash :	No tach
x4 flash :	Ignition before start
x5 flash :	Hood Open

REMOTE STARTER WARNING CARD



CUT THIS WARNING CARD AND STICK IT ON A VISIBLE PLACE:
 or use the package RSPB, Sold separately.

WARNING



REMOTE STARTER



THE VEHICLE CAN BE STARTED BY EITHER: PRESSING THE LOCK BUTTON ON THE OEM REMOTE 3 TIMES CONSECUTIVELY OR BY A SMARTPHONE. **TURN ON** THE SAFETY SWITCH LOCATED UNDER THE DASHBOARD BEFORE WORKING ON THE VEHICLE.

DESCRIPTION













② Parking Lights switch

① Gateway module, located at dash board driver's side,

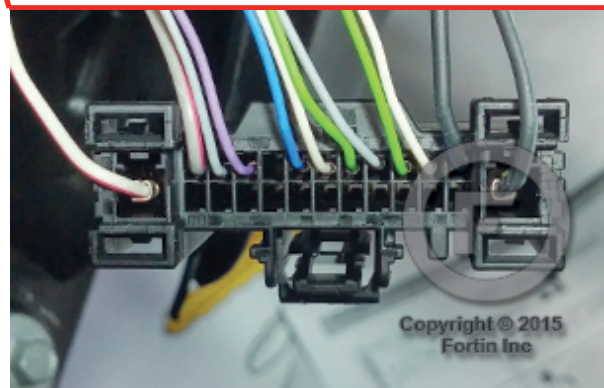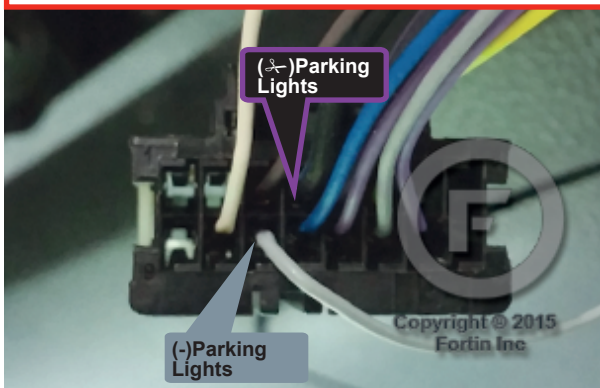


 ④ Under the hood If not equipped with hood pin.

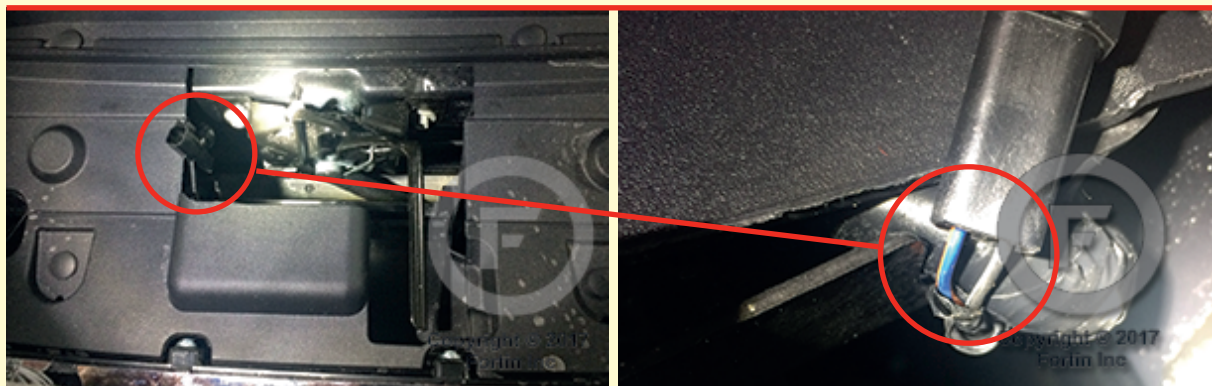

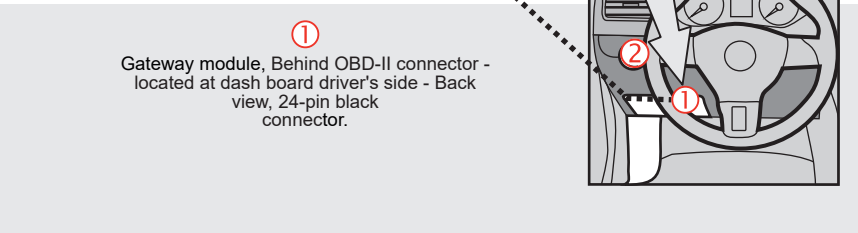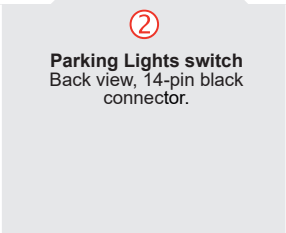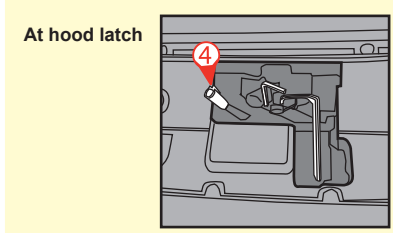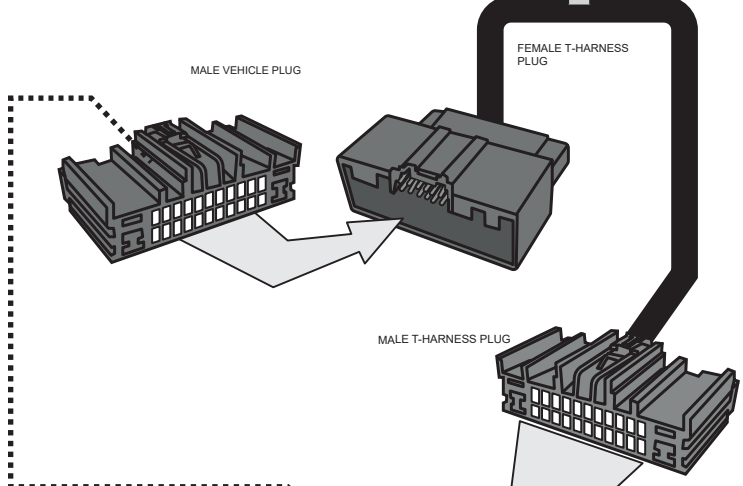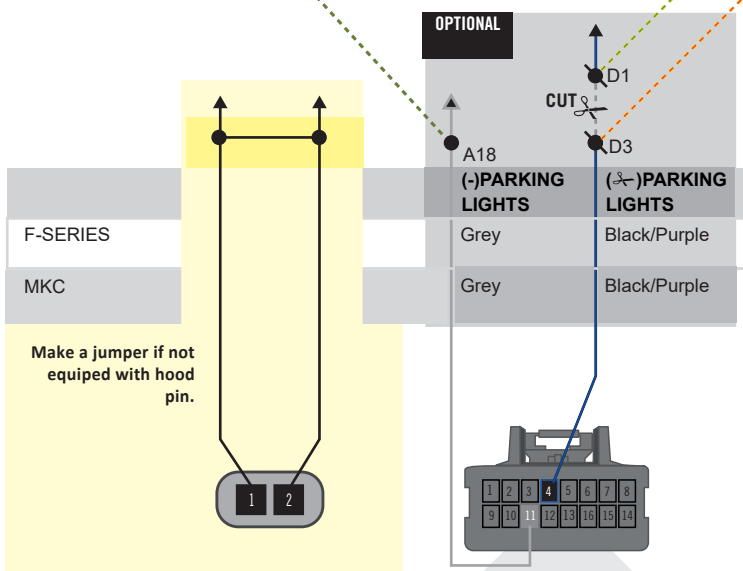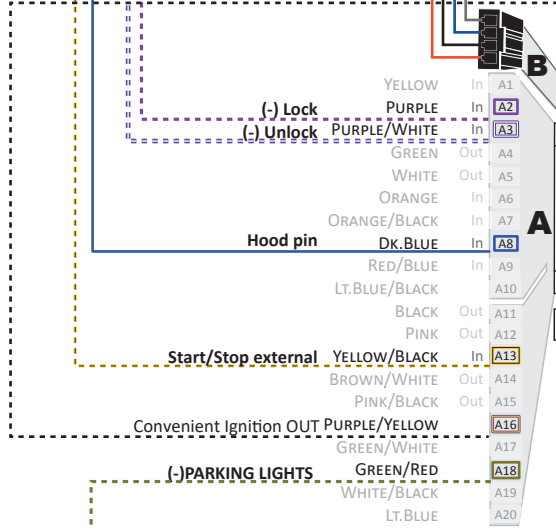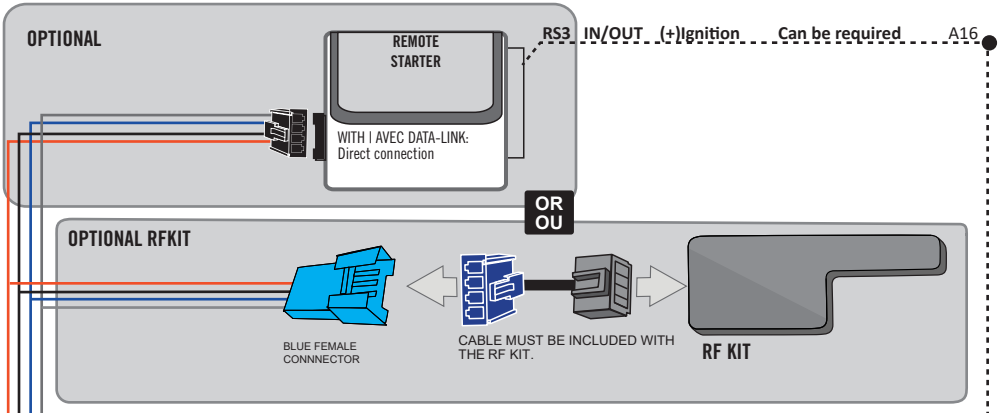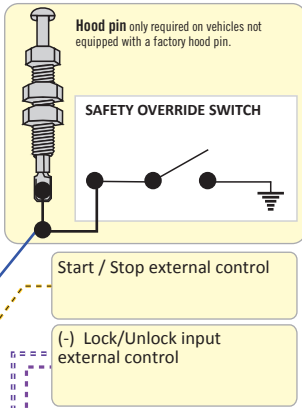


PROGRAMMING PROCEDURE

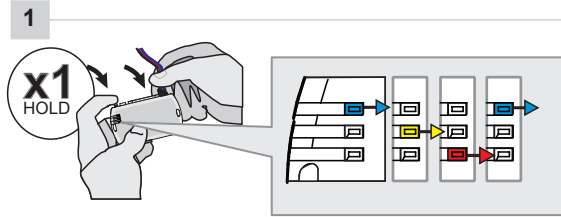


Press and hold the programming button:
Insert the 4-Pin (Data-Link) connector.

↳ The Blue, Red, Yellow and Blue & Red LEDs will alternatively illuminate.

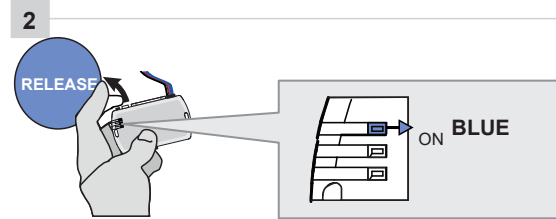


Release the programming button when the LED is BLUE.

If the LED is not solid BLUE disconnect the 4-Pin connector (Data-Link) and go back to step 1.

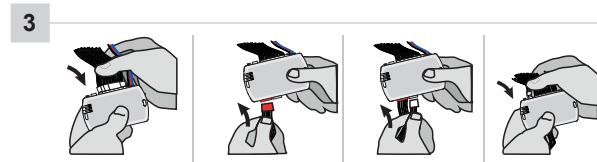



Insert the required remaining connectors.

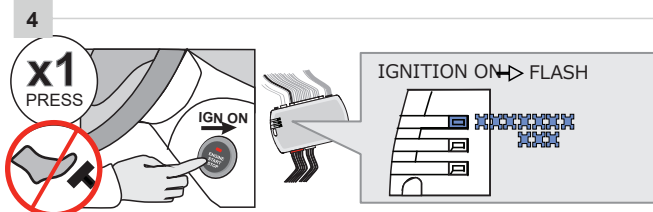


Do not press the brake pedal.
Press the Push-to-Start button once to turn on the ignition.

↳ The BLUE LED will flash rapidly.

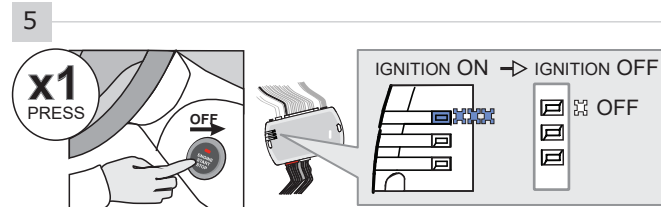

Press the Push-to-Start button once to turn off the ignition.


↳ The BLUE LED will turn off.

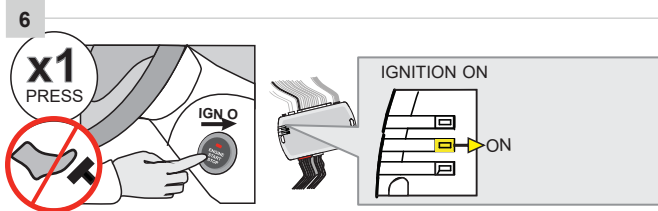


Do not press the brake pedal.
Press the Push-to-Start button once to turn on the ignition.

↳ The YELLOW LED will turn ON.


7



Wait 5 seconds.

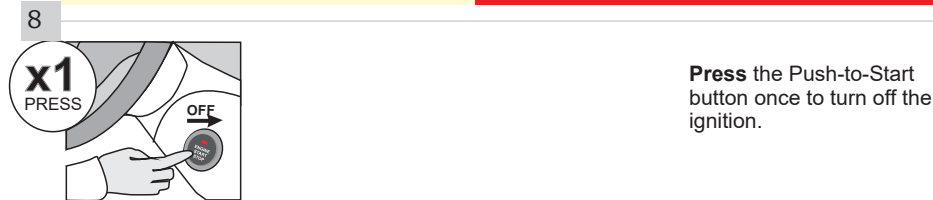

Press the Push-to-Start button once to turn off the ignition.



The module is now programmed.

REMOTE STARTER FUNCTIONALITY



All doors must be closed.

 


Remote start the vehicle.



Unlock the doors with either:

- The OEM remote
- The remote-starter remote
- Or the proximity remote



Enter the vehicle with the SMART-KEY.



DO NOT PRESS THE BRAKE PEDAL.

Press and release the Push-to-Start button once.



Press the brake pedal. The vehicle can now be put in to gear and driven.

If the Smart-Key is not detected the vehicle will shut down.

THAR-FOR3 THARNNESS STAND ALONE INSTALLATION

ADDENDUM - SUGGESTED WIRING CONFIGURATION



ONLY COMPATIBLE WITH AUTOMATIC TRANSMISSION VEHICLES.



Vehicle functions supported in this diagram (functional if equipped)

VEHICLE	YEARS	Immobilizer bypass	Lock	Unlock	Arm	Disarm	RAP Disable	Parking Lights	Tachometer	Heated seats	Heated Mirrors	Rear defrost	Door Status	Trunk Status	Hood Status*	Hand-Brake Status	Foot-Brake Status	Active OEM Remote Start
FORD																		
F-150	Key 2015-2019	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
F-250	Key 2017-2019	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
F-350	Key 2017-2019	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
F-450	Key 2017-2019	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
F-550	Key 2017	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•



FIRMWARE VERSION

4.01

ONLY - SEULEMENT

To add the firmware version and the options, use the **FLASH LINK UPDATER** or **FLASH LINK MOBILE** tool, sold separately.



Program bypass option IF THE VEHICLE IS NOT EQUIPPED WITH FUNCTIONAL HOOD PIN:

UNIT OPTION

A11

OFF

DESCRIPTION

Hood trigger (Output Status).



Program bypass option:

UNIT OPTION

C1

DESCRIPTION

OEM Remote status (Lock/Unlock) monitoring



Parts required (Not included)

1x THAR-FOR3



The vehicle must be equipped with the OEM remote with the door locks.

MANDATORY INSTALL

***HOOD PIN**



HOOD STATUS: THE HOOD PIN SWITCH MUST BE INSTALLED IF THE VEHICLE CAN BE REMOTE STARTED WITH THE HOOD OPEN, SET FUNCTION A11 TO OFF.

A11

OFF

Notice: the installation of safety elements are mandatory. The hood pin is an essential security element and must be installed.

THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.

PARTS REQUIRED (NOT INCLUDED)


1x **FLASH LINK UPDATER,**
 1x **FLASH LINK MANAGER**
 SOFTWARE | PROGRAMME
 1x Microsoft Windows Computer with Internet connection

OR


1x **FLASH LINK MOBILE**
 1x **FLASH LINK MOBILE APP**
 Smartphone *Android* or *iOS* with Internet connection (*provider charges may apply*).

MANDATORY

HOOD PIN



REMOTE START SAFETY OVERRIDE SWITCH

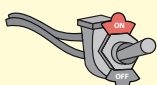
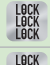






VALET SWITCH


Part #: RSPB available, Sold separately.

Notice: the installation of safety elements are mandatory. The hood pin and the valet switch are essential security elements and must be installed.


STAND ALONE CONFIGURATION

	Program bypass option	UNIT OPTION	DESCRIPTION
	OEM Remote Stand Alone Remote Starter:	D1.10 	By default, LOCK, LOCK, LOCK
		D1.1 	Par défaut, VERROUILLE, VERROUILLE, VERROUILLE
	Program bypass option with oem remote:	C1	OEM Remote Monitoring
	Program bypass option with RF KIT antenna:	H1 to H6	Supported RF Kits and select RF Kit
	Program bypass option Vehicle hybrid only:	D4	Hybrid mode (Vehicle hybrid only)


REMOTE STARTER FUNCTIONALITY




All doors must be closed.

3X 

Press the OEM remote's Lock button 3x to remote-start (or remote-stop) the vehicle.




START 

The vehicle will START.

REMOTE STARTER DIAGNOSTICS
MODULE RED LED


x2 flash :	Brake ON
x3 flash :	No tach
x4 flash :	Ignition before start
x5 flash :	Hood Open

REMOTE STARTER WARNING CARD



CUT THIS WARNING CARD AND STICK IT ON A VISIBLE PLACE:
 or use the package RSPB, Sold separately.

WARNING



REMOTE STARTER



THE VEHICLE CAN BE STARTED BY EITHER: PRESSING THE LOCK BUTTON ON THE OEM REMOTE 3 TIMES CONSECUTIVELY OR BY A SMARTPHONE. **TURN ON** THE SAFETY SWITCH LOCATED UNDER THE DASHBOARD BEFORE WORKING ON THE VEHICLE.

DESCRIPTION




② Parking Lights switch










① Gateway module, located at dash board driver's side,

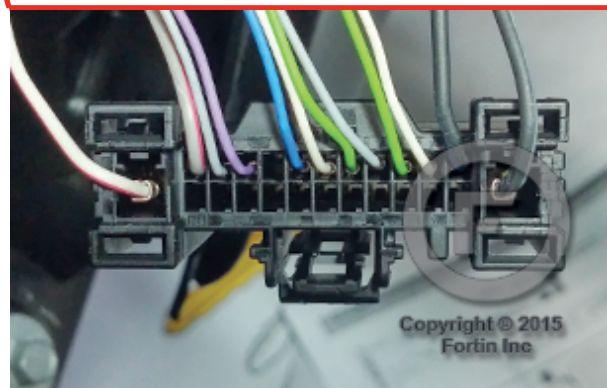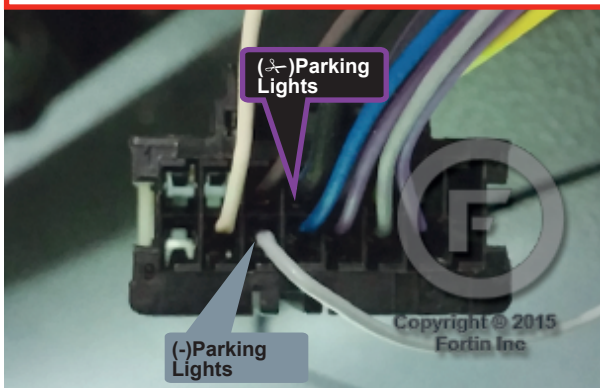

④ Under the hood If not equipped with hood pin.

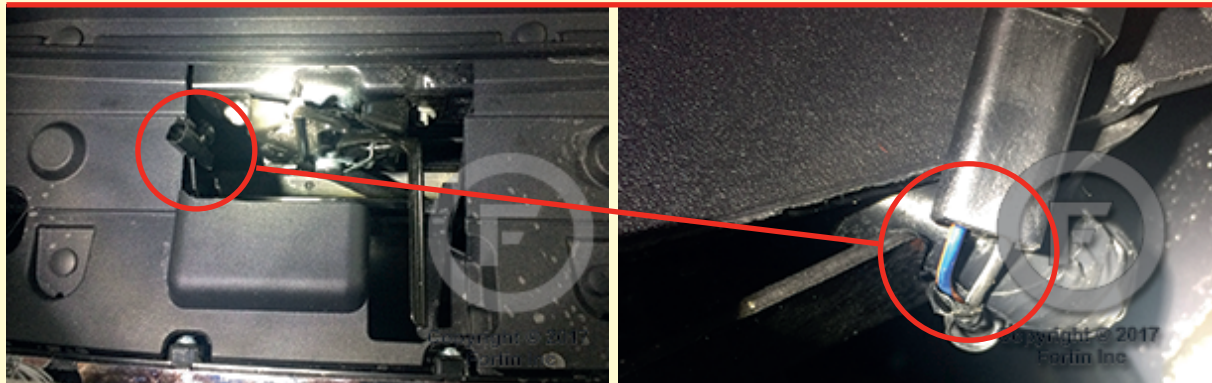


AUTOMATIC TRANSMISSION WIRING CONNECTION

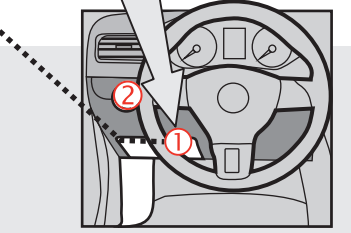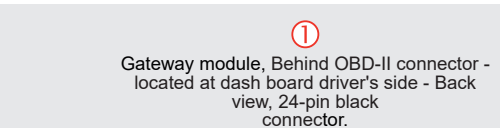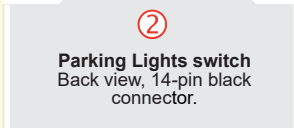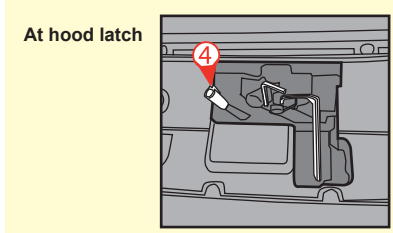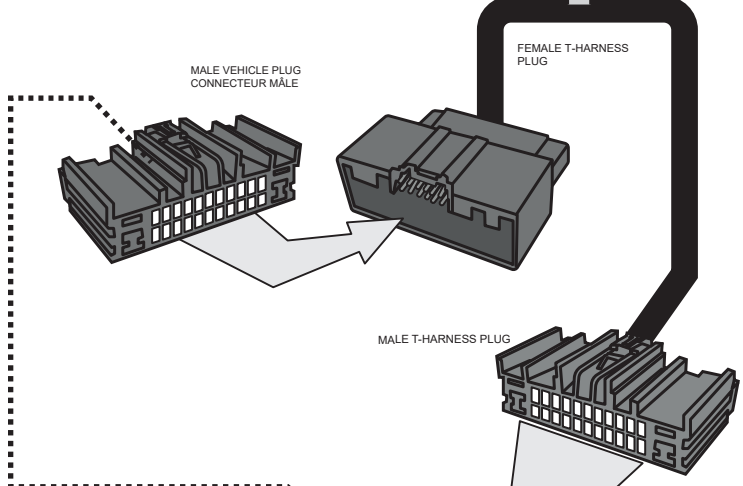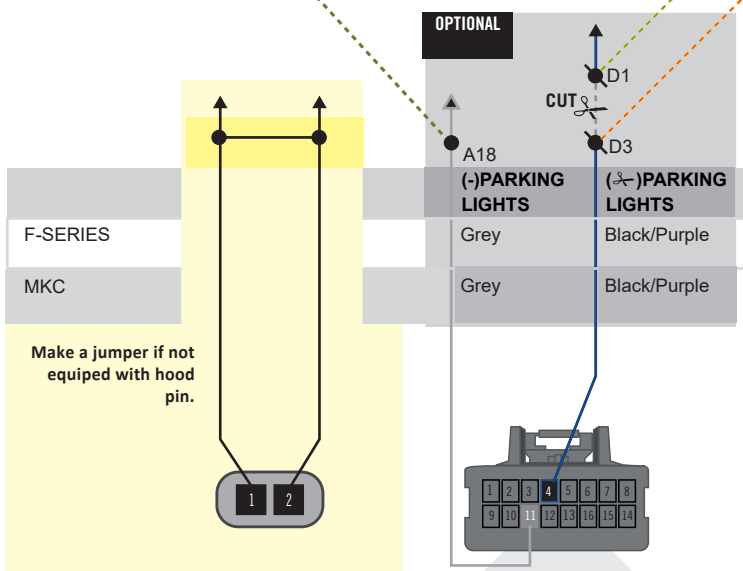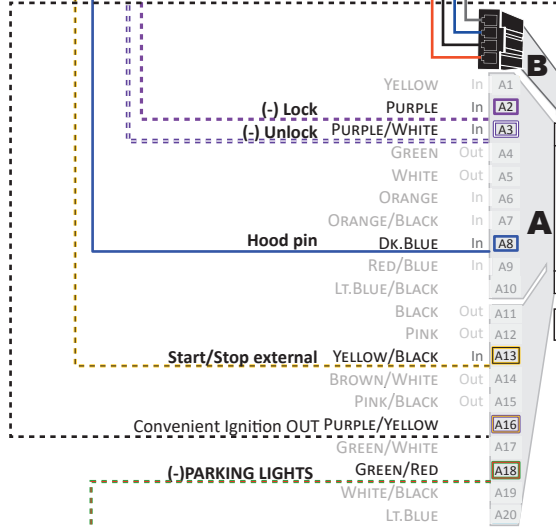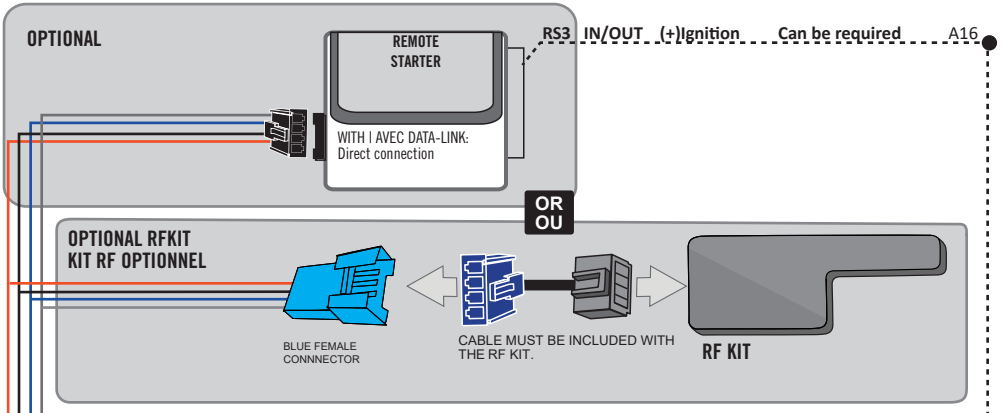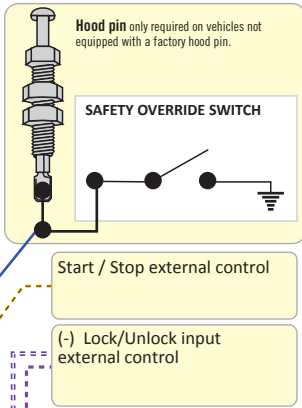

② Parking Lights switch
Back view, 14-pin black connector.


① Gateway module, Behind OBD-II connector - located at dash board driver's side - Back view, 24-pin black connector.

PROGRAMMING PROCEDURE

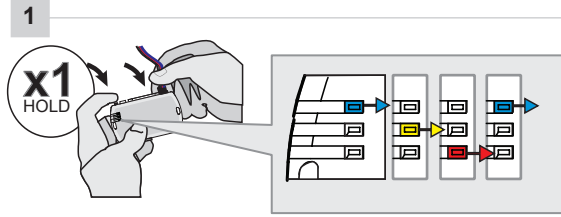


Press and hold the programming button:
Insert the 4-Pin (Data-Link) connector.

↳ The Blue, Red, Yellow and Blue & Red LEDs will alternatively illuminate.

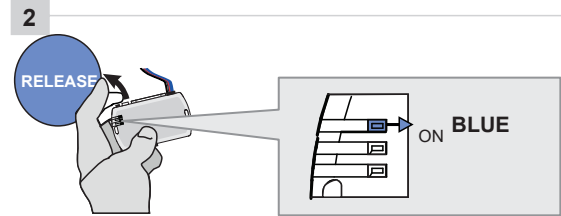


Release the programming button when the LED is BLUE.

If the LED is not solid BLUE disconnect the 4-Pin connector (Data-Link) and go back to step 1.

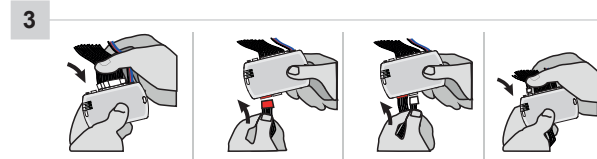


Insert the required remaining connectors.

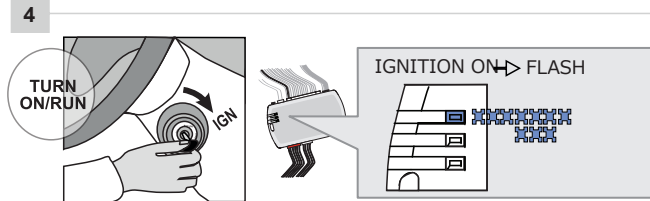


Turn the key to the Ignition ON/RUN position.

↳ The BLUE LED will flash rapidly.

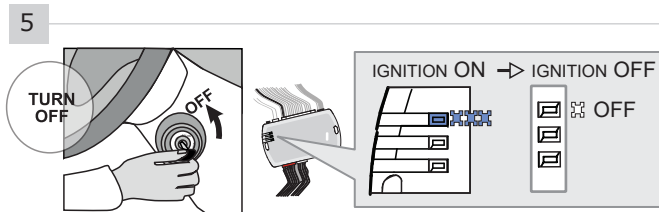

Turn the key to the OFF position.

↳ The BLUE LED will turn off.

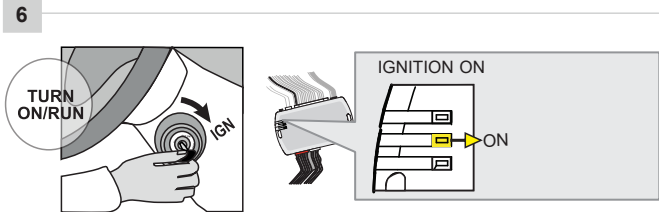


Turn the key to the Ignition ON/RUN position.

↳ The YELLOW LED will turn ON.

7

Wait 5 seconds.

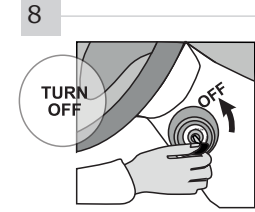

Turn the key to the OFF position.

The module is now programmed.

REMOTE STARTER FUNCTIONALITY



All doors must be closed.



Remote start the vehicle.



Unlock the doors with the remote-starter remote or the OEM remote.



Insert and Turn the key to the Ignition ON/RUN position.



Press the brake pedal.



The vehicle can now be put in to gear and driven.

**THAR-FOR3 THARNNESS STAND ALONE
INSTALLATION**

ADDENDUM - SUGGESTED WIRING CONFIGURATION


ONLY COMPATIBLE WITH AUTOMATIC TRANSMISSION VEHICLES.

VEHICLE	YEARS	Vehicle functions supported in this diagram (functional if equipped)																
		Immobilizer bypass	Lock	Unlock	Arrn	Disarm	RAP Disable	Parking Lights	Tachometer	Heated seats	Heated Mirrors	Rear defrost	Door Status	Trunk Status	Hood Status*	Hand-Brake Status	Foot-Brake Status	Active OEM Remote Start
FORD																		
Fusion	Push-to-Start	2014-2019	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
	Hybrid Push-to-Start	2014-2019	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
LINCOLN																		
Continental	Push-to-Start	2017-2019	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
MKZ	Push-to-Start	2013-2019	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
	Hybrid Push-to-Start	2013-2019	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•


4.01

ONLY - SEULEMENT

 To add the firmware version and the options, use the **FLASH LINK UPDATER** or **FLASH LINK MOBILE** tool, sold separately.

	Program bypass option IF THE VEHICLE IS NOT EQUIPPED WITH FUNCTIONAL HOOD PIN: :	UNIT OPTION	DESCRIPTION
		A11	OFF
	Program bypass option:	UNIT OPTION	DESCRIPTION
		C1	OEM Remote status (Lock/Unlock) monitoring
	Program bypass option (Vehicle hybrid only):	UNIT OPTION	DESCRIPTION
		D4	Hybrid mode (Vehicle hybrid only)
		D6	Push-to-Start


Parts required (Not included)

1x THAR-FOR3

MANDATORY INSTALL
***HOOD PIN**

HOOD STATUS: THE HOOD PIN SWITCH MUST BE INSTALLED IF THE VEHICLE CAN BE REMOTE STARTED WITH THE HOOD OPEN, SET FUNCTION A11 TO OFF.

A11
OFF
Notice: the installation of safety elements are mandatory. The hood pin is an essential security element and must be installed.

THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.

PARTS REQUIRED (NOT INCLUDED)


1x **FLASH LINK UPDATER,**
 1x **FLASH LINK MANAGER**
 SOFTWARE | PROGRAMME
 1x Microsoft Windows Computer with Internet connection

OR


1x **FLASH LINK MOBILE**
 1x **FLASH LINK MOBILE APP**
 Smartphone *Android* or *iOS* with Internet connection (*provider charges may apply*).
 1x

MANDATORY

HOOD PIN



REMOTE START SAFETY OVERRIDE SWITCH

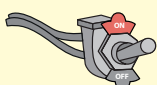
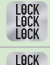






VALET SWITCH


Part #: RSPB available, Sold separately.

Notice: the installation of safety elements are mandatory. The hood pin and the valet switch are essential security elements and must be installed.


STAND ALONE CONFIGURATION

	Program bypass option	UNIT OPTION	DESCRIPTION
	OEM Remote Stand Alone Remote Starter:	D1.10 	By default, LOCK, LOCK, LOCK Par défaut, VERROUILLE, VERROUILLE, VERROUILLE
		D1.1 	
	Program bypass option with oem remote:	C1	OEM Remote Monitoring
	Program bypass option with RF KIT antenna:	H1 to H6	Supported RF Kits and select RF Kit
	Program bypass option Vehicle hybrid only:	D4	Hybrid mode (Vehicle hybrid only)


REMOTE STARTER FUNCTIONALITY




All doors must be closed.

3X 

Press the OEM remote's Lock button 3x to remote-start (or remote-stop) the vehicle.




START 

The vehicle will START.

REMOTE STARTER DIAGNOSTICS
MODULE RED LED

x2 flash :	Brake ON
x3 flash :	No tach
x4 flash :	Ignition before start
x5 flash :	Hood Open

REMOTE STARTER WARNING CARD



CUT THIS WARNING CARD AND STICK IT ON A VISIBLE PLACE:
 or use the package RSPB, Sold separately.

WARNING

REMOTE STARTER

THE VEHICLE CAN BE STARTED BY EITHER: PRESSING THE LOCK BUTTON ON THE OEM REMOTE 3 TIMES CONSECUTIVELY OR BY A SMARTPHONE. **TURN ON** THE SAFETY SWITCH LOCATED UNDER THE DASHBOARD BEFORE WORKING ON THE VEHICLE.

DESCRIPTION





②


Parking Lights switch

①


Gateway module, Behind
OBD-II connector

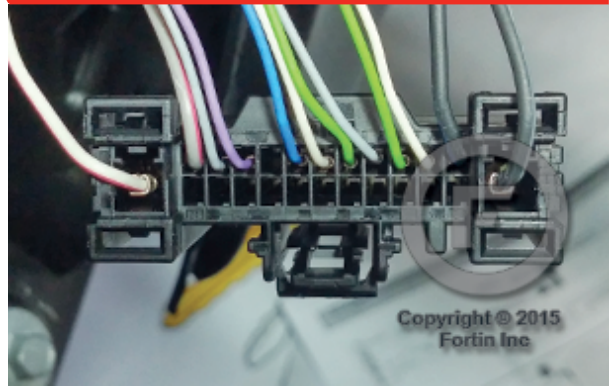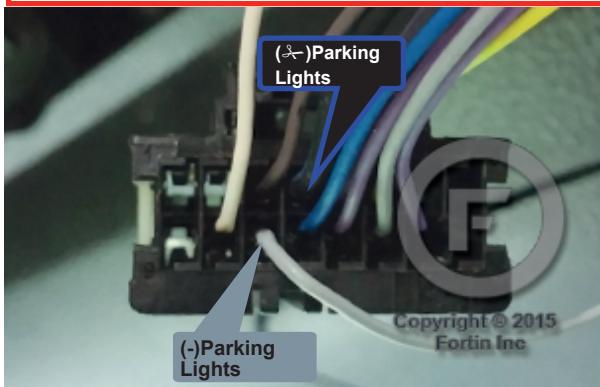

AUTOMATIC TRANSMISSION WIRING CONNECTION

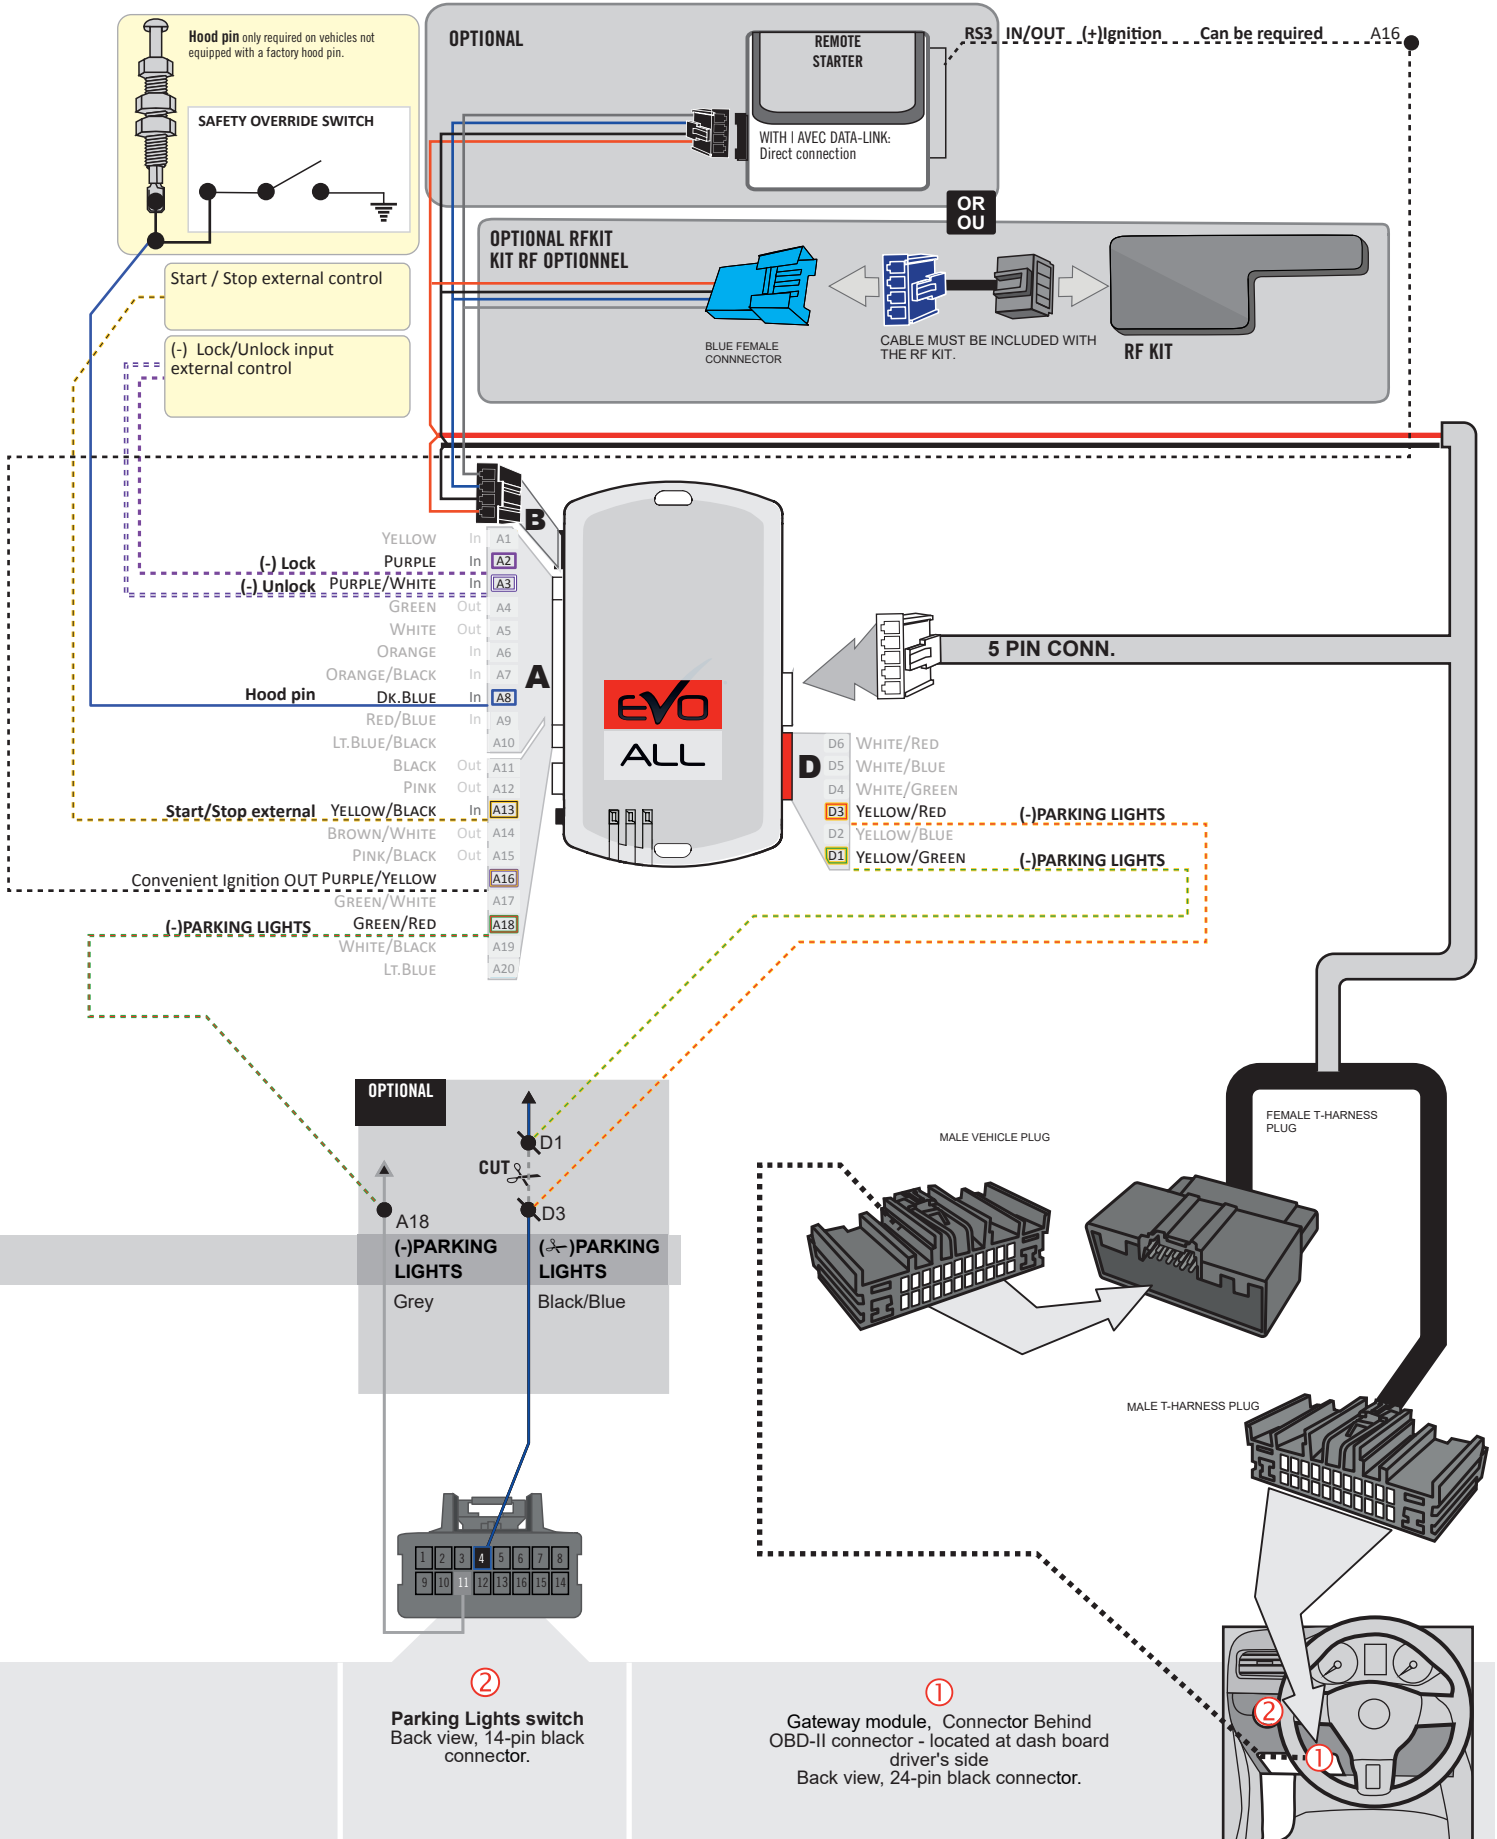


PROGRAMMING PROCEDURE

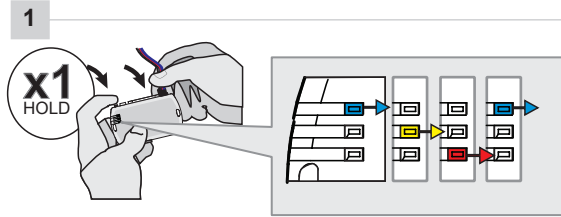


Press and hold the programming button:
Insert the 4-Pin (Data-Link) connector.

↳ The Blue, Red, Yellow and Blue & Red LEDs will alternatively illuminate.

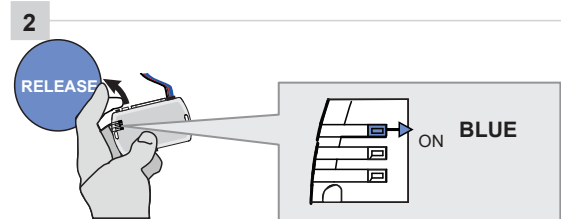


Release the programming button when the LED is BLUE.

If the LED is not solid BLUE disconnect the 4-Pin connector (Data-Link) and go back to step 1.

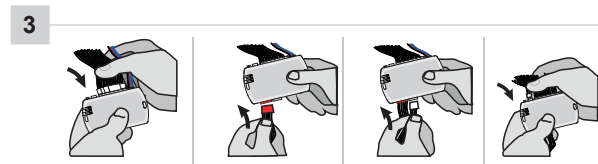


Insert the required remaining connectors.

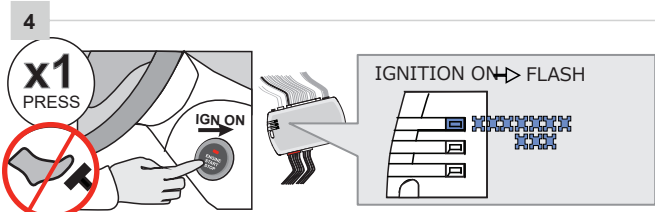


Do not press the brake pedal.
Press the Push-to-Start button once to turn on the ignition.

↳ The BLUE LED will flash rapidly.

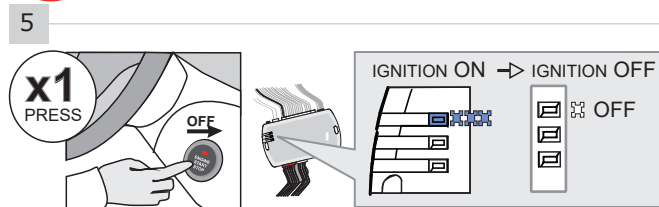


Press the Push-to-Start button once to turn off the ignition.

↳ The BLUE LED will turn off.

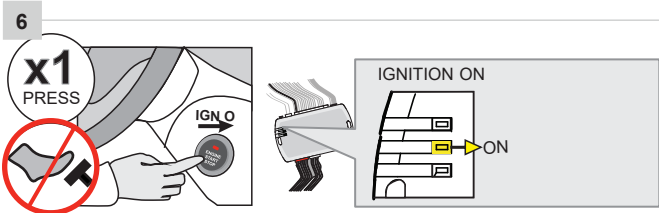


Do not press the brake pedal.
Press the Push-to-Start button once to turn on the ignition.


↳ The YELLOW LED will turn ON.

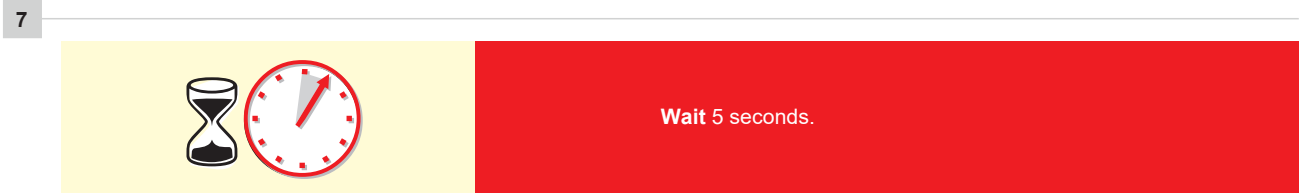

Wait 5 seconds.

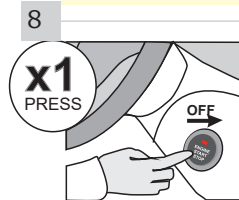

Press the Push-to-Start button once to turn off the ignition.

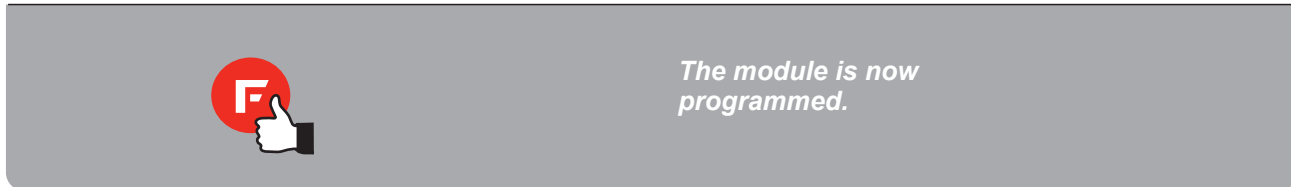


The module is now programmed.

OPTIONAL RF-KIT PROGRAMMING



PROGRAM BYPASS OPTION

	<p>Program bypass option:</p>	<p>H2</p>	<p>Supported RF-KITS enable</p> <p>H2 Fortin 2</p>

OPTIONAL FORTIN RF KIT SERIES 4 OR SERIES 9 PROGRAMMING




The module must be programmed on the vehicle.

MAKE SURE THE IGNITION KEY HAS BEEN IN THE OFF POSITION FOR AT LEAST 5 SECONDS.

1


ON **x1** PRESS



Do not press the brake pedal. **Press** the Push-to-Start button once to turn on the ignition.

2


OFF **x1** PRESS



Press the Push-to-Start button once to turn off the ignition.

3

ON **x1** PRESS




Do not press the brake pedal. **Press** the Push-to-Start button once to turn on the ignition.

4

4X BRAKES

x4 PRESS



Press and release the brake pedal four times.

The LED will turn off each time.

5

ON EACH TRANSMITTER

4 BUTTONS

[-] PRESS AND RELEASE

→ PRESS AND RELEASE


LOCK PRESS AND RELEASE

1 BUTTON

PRESS APPROX. 12 SEC. AND WAIT FOR THE BLUE LED TO TURN OFF THEN BACK ON SOLID THEN RELEASE.


6

OFF **x1** PRESS




Press the Push-to-Start button once to turn off the ignition.


The LED will turn ON solid.

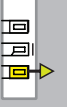


The LED will turn Off.




The LED will turn ON solid.

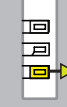


The LED will flash rapidly.

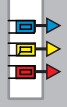


The LED will turn off each time.




The LED will flash rapidly.




The LED will turn Off. Le témoin s'éteint




The 3 LED will turn ON solid.

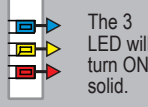

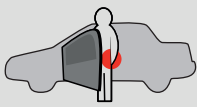

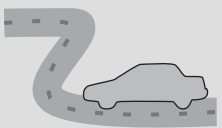


The 3 LED will turn off.

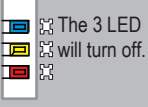



REMOTE STARTER FUNCTIONALITY

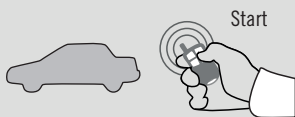 <p>Start</p> <p>All doors must be closed.</p> <p>Remote start the vehicle.</p>	 <p>UNLOCK</p> <p>Unlock the doors with either:</p> <ul style="list-style-type: none"> • The OEM remote • The remote-starter remote • Or the proximity remote 	 <p>Enter the vehicle with the SMART-KEY.</p>	 <p>DO NOT PRESS THE BRAKE PEDAL.</p> <p>Press and release the Push-to-Start button once.</p>	 <p>Press the brake pedal. The vehicle can now be put in to gear and driven.</p> <p>If the Smart-Key is not detected the vehicle will shut down.</p>
--	---	--	---	---

THAR-FOR3 THARNNESS STAND ALONE INSTALLATION

ADDENDUM - SUGGESTED WIRING CONFIGURATION



ONLY COMPATIBLE WITH AUTOMATIC TRANSMISSION VEHICLES.

VEHICLE	YEARS	Vehicle functions supported in this diagram (functional if equipped)																	
		Immobilizer bypass	Lock	Unlock	Armn	Disarm	RAP Disable	Parking Lights	Tachometer	Heated seats	Heated Mirrors	Rear defrost	Door Status	Trunk Status	Hood Status*	Hand-Brake Status	Foot-Brake Status	Active OEM Remote Start	
FORD																			
Fusion	Key 2014-2019	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
	Hybrid Key 2014-2019	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•

FIRMWARE VERSION

4.01

ONLY - SEULEMENT

To add the firmware version and the options, use the **FLASH LINK UPDATER** or **FLASH LINK MOBILE** tool, sold separately.

Program bypass option IF THE VEHICLE IS NOT EQUIPPED WITH FUNCTIONAL HOOD PIN:	UNIT OPTION	DESCRIPTION
		A11
		Hood trigger (Output Status).
Program bypass option:	UNIT OPTION	DESCRIPTION
	C1	OEM Remote status (Lock/Unlock) monitoring
Program bypass option (Vehicle hybrid only):	UNIT OPTION	DESCRIPTION
	D4	Hybrid mode (Vehicle hybrid only)



Parts required (Not included)

1x THAR-FOR3



The vehicle must be equipped with the OEM remote with the door locks.

MANDATORY INSTALL

*HOOD PIN



HOOD STATUS: THE HOOD PIN SWITCH MUST BE INSTALLED IF THE VEHICLE CAN BE REMOTE STARTED WITH THE HOOD OPEN, SET FUNCTION A11 TO OFF.

A11

OFF

Notice: the installation of safety elements are mandatory. The hood pin is an essential security element and must be installed.

THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.


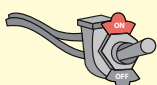
PARTS REQUIRED (NOT INCLUDED)

1x **FLASH LINK UPDATER**
 1x **FLASH LINK MANAGER**
SOFTWARE | PROGRAMME
 1x Microsoft Windows Computer with Internet connection

OR

1x **FLASH LINK MOBILE**
 1x **FLASH LINK MOBILE APP**
Smartphone Android or iOS with Internet connection (provider charges may apply).

MANDATORY


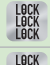




HOOD PIN  REMOTE START SAFETY OVERRIDE SWITCH 

VALET SWITCH


Part #: RSPB available, Sold separately.

Notice: the installation of safety elements are mandatory. The hood pin and the valet switch are essential security elements and must be installed.


STAND ALONE CONFIGURATION

	Program bypass option	UNIT OPTION	DESCRIPTION
	OEM Remote Stand Alone Remote Starter:	OR D1.10  D1.1 	By default, LOCK, LOCK, LOCK Par défaut, VERROUILLE,VERROUILLE,VERROUILLE
	Program bypass option with oem remote:	C1	OEM Remote Monitoring
	Program bypass option with RF KIT antenna:	H1 to H6	Supported RF Kits and select RF Kit
	Program bypass option Vehicle hybrid only:	D4	Hybrid mode (Vehicle hybrid only)


REMOTE STARTER FUNCTIONALITY




All doors must be closed.

3X 

Press the OEM remote's Lock button 3x to remote-start (or remote-stop) the vehicle.




START 

The vehicle will START.

REMOTE STARTER DIAGNOSTICS
MODULE RED LED

x2 flash :	Brake ON
x3 flash :	No tach
x4 flash :	Ignition before start
x5 flash :	Hood Open

REMOTE STARTER WARNING CARD



CUT THIS WARNING CARD AND STICK IT ON A VISIBLE PLACE:
 or use the package RSPB, Sold separately.

WARNING

REMOTE STARTER

THE VEHICLE CAN BE STARTED BY EITHER: PRESSING THE LOCK BUTTON ON THE OEM REMOTE 3 TIMES CONSECUTIVELY OR BY A SMARTPHONE. **TURN ON** THE SAFETY SWITCH LOCATED UNDER THE DASHBOARD BEFORE WORKING ON THE VEHICLE.

DESCRIPTION





②








Parking Lights switch

①

Gateway module, Behind
OBD-II connector

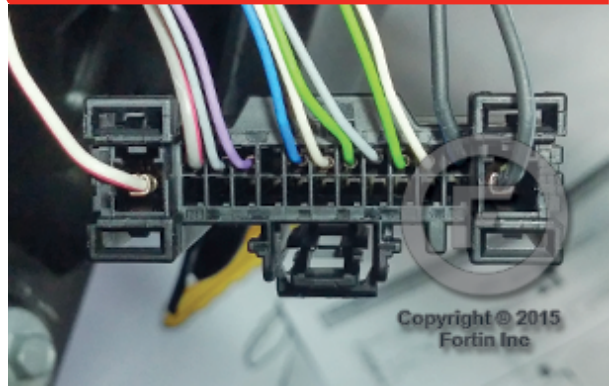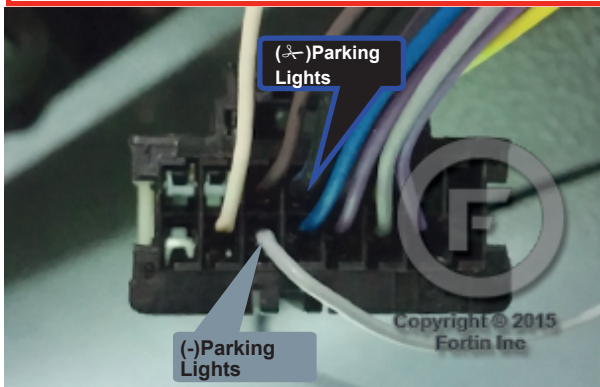


AUTOMATIC TRANSMISSION WIRING CONNECTION

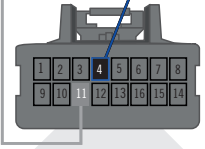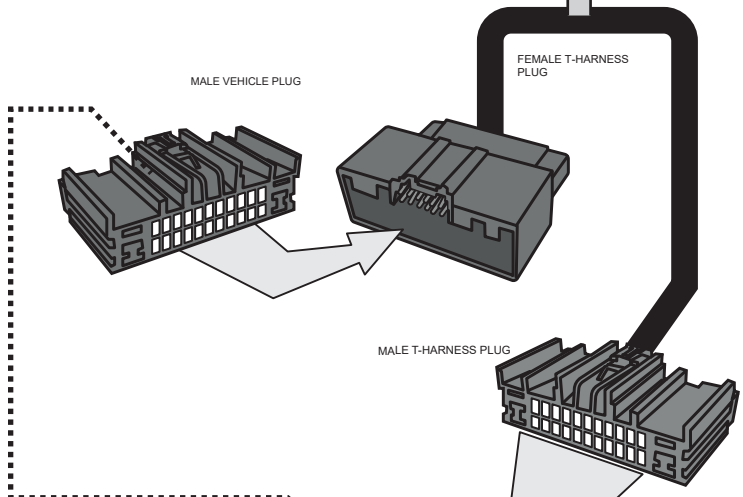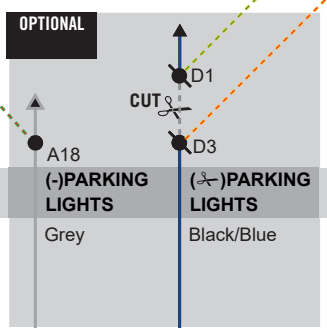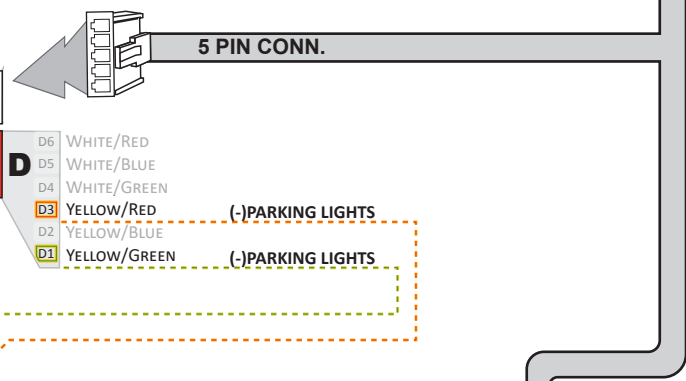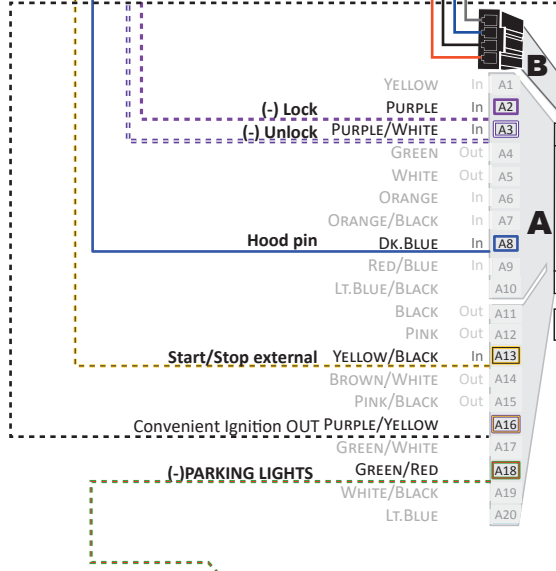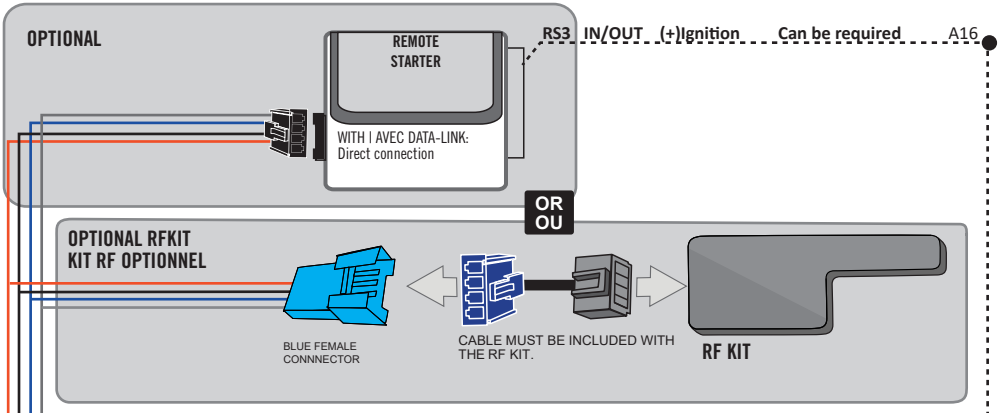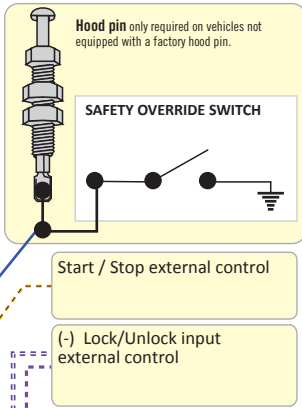


② Parking Lights switch
Back view, 14-pin black connector.

① Gateway module, Connector Behind OBD-II connector - located at dash board driver's side
Back view, 24-pin black connector.

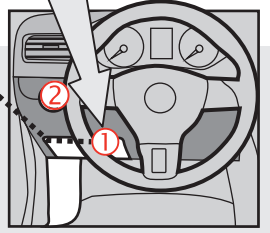


PROGRAMMING PROCEDURE

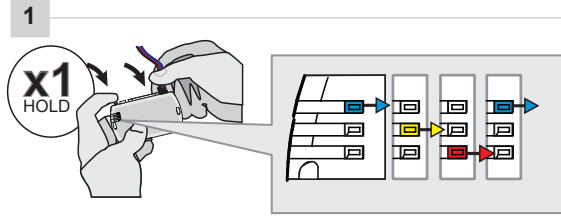


Press and hold the programming button:
Insert the 4-Pin (Data-Link) connector.

↳ The Blue, Red, Yellow and Blue & Red LEDs will alternatively illuminate.

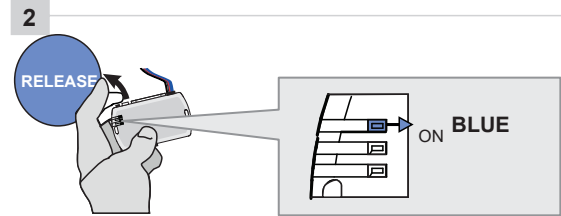


Release the programming button when the LED is BLUE.

If the LED is not solid BLUE disconnect the 4-Pin connector (Data-Link) and go back to step 1.

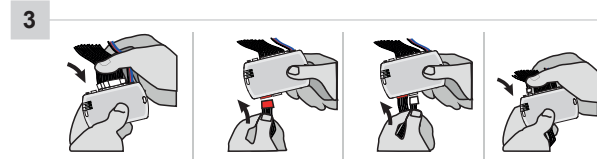


Insert the required remaining connectors.

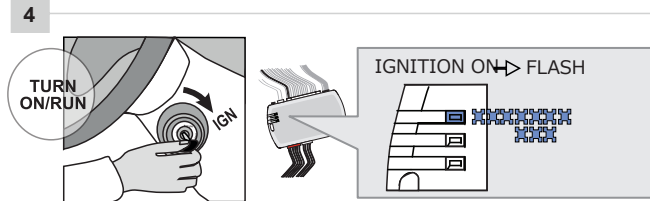


Turn the key to the Ignition ON/RUN position.

↳ The BLUE LED will flash rapidly.

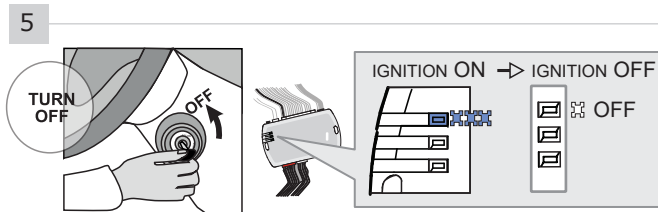



Turn the key to the OFF position.

↳ The BLUE LED will turn off.

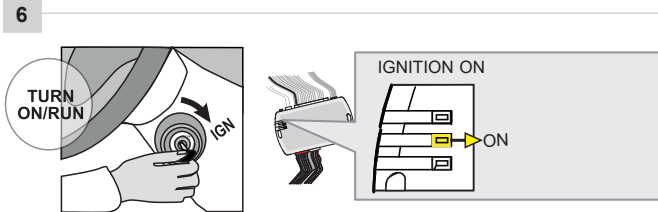

Turn the key to the Ignition ON/RUN position.

↳ The YELLOW LED will turn ON.

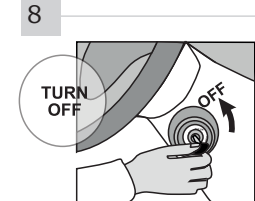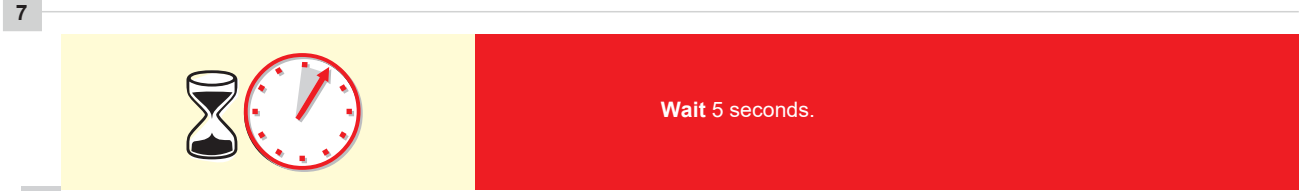

Turn the key to the OFF position.






OPTIONAL RF-KIT PROGRAMMING

PROGRAM BYPASS OPTION







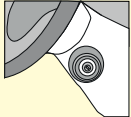






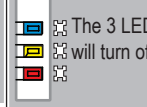
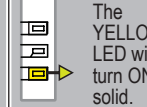
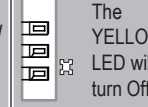
	<p>Program bypass option:</p>	<p>H2</p>	<p>Supported RF-KITS enable H2 Fortin 2</p>
---	-------------------------------	------------------	--

OPTIONAL FORTIN RF KIT SERIES 4 OR SERIES 9 PROGRAMMING

The module must be programmed on the vehicle.

MAKE SURE THE IGNITION KEY HAS BEEN IN THE OFF POSITION FOR AT LEAST 5 SECONDS.

<p>1</p> <p>ON TURN ON/RUN</p>  <p>Turn the key to the ON/RUN position.</p>	<p>2</p> <p>OFF TURN OFF</p>  <p>Turn the ignition to the OFF position.</p>	<p>3</p> <p>ON TURN ON/RUN</p>  <p>Turn the key to the ON/RUN position.</p>	<p>4</p> <p>4X BRAKES</p> <p>x4 PRESS</p>  <p>Press and release the brake pedal four times.</p>	<p>5</p> <p>ON EACH TRANSMITTER</p> <p>4 BUTTONS</p> <p>[-] PRESS AND RELEASE</p> <p>→ PRESS AND RELEASE</p> <p>LOCK</p> <p>1 BUTTON</p> <p>PRESS APPROX. 12 SEC. AND WAIT FOR THE BLUE LED TO TURN OFF THEN BACK ON SOLID THEN RELEASE.</p>	<p>6</p> <p>OFF TURN OFF</p>  <p>Turn the ignition to the OFF position.</p>	<p>7</p> <p>ON TURN ON/RUN</p>  <p>Turn the key to the ON/RUN position and leave it ON for 5 sec.</p> 	<p>8</p> <p>OFF TURN OFF</p>  <p>Turn the ignition to the OFF position.</p>
 <p>The YELLOW LED will turn ON solid.</p>	 <p>The YELLOW LED will turn Off.</p>	 <p>The LED will turn ON solide.</p> <p>The YELLOW LED will turn ON solid.</p>	 <p>The LED will flash rapidly.</p> <p>The 3 LED will turn ON solid.</p>	 <p>The LED will turn off each time.</p> <p>The LED will flash rapidly.</p> <p>The 3 LED will turn off each time.</p>	 <p>The LED will turn Off.</p> <p>The 3 LED will turn off.</p>	 <p>The YELLOW LED will turn ON solid.</p>	 <p>The YELLOW LED will turn Off.</p>

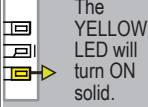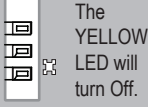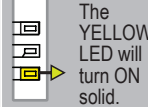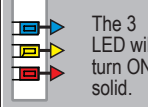

REMOTE STARTER FUNCTIONALITY



All doors must be closed.



Remote start the vehicle.



Unlock the doors with the remote-starter remote or the OEM remote.



Insert and Turn the key to the Ignition ON/RUN position.



Press the brake pedal.



The vehicle can now be put in to gear and driven.

THAR-FOR3 THARNNESS STAND ALONE INSTALLATION

ADDENDUM - SUGGESTED WIRING CONFIGURATION



ONLY COMPATIBLE WITH AUTOMATIC TRANSMISSION VEHICLES.



Vehicle functions supported in this diagram (functional if equipped)

VEHICLE	YEARS	Immobilizer bypass	Lock	Unlock	Arm	Disarm	RAP Disable	Parking Lights	Tachometer	Heated seats	Heated Mirrors	Rear defrost	Door Status	Trunk Status	Hood Status*	Hand-Brake Status	Foot-Brake Status	Active OEM Remote Start
FORD																		
Mondeo	Key 2013-2015	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•

FIRMWARE VERSION

4.01

ONLY - SEULEMENT

To add the firmware version and the options, use the **FLASH LINK UPDATER** or **FLASH LINK MOBILE** tool, sold separately.

	UNIT OPTION		DESCRIPTION
<p>Program bypass option:</p>	C1		OEM Remote status (Lock/Unlock) monitoring
<p>IF THE VEHICLE IS NOT EQUIPPED WITH FUNCTIONAL HOOD PIN:</p>	A11	OFF	Hood trigger (Output Status).



Parts required (Not included)

1x THAR-FOR3

NOTES



The vehicle must be equipped with the OEM remote with the door locks.

MANDATORY INSTALL

*HOOD PIN



HOOD STATUS: THE HOOD PIN SWITCH MUST BE INSTALLED IF THE VEHICLE CAN BE REMOTE STARTED WITH THE HOOD OPEN, SET FUNCTION A11 TO OFF.

A11

OFF

Notice: the installation of safety elements are mandatory. The hood pin is an essential security element and must be installed.

THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.

PARTS REQUIRED (NOT INCLUDED)


1x **FLASH LINK UPDATER**
 1x **FLASH LINK MANAGER**
SOFTWARE | PROGRAMME
 1x Microsoft Windows Computer with Internet connection

OR


1x **FLASH LINK MOBILE**
 1x **FLASH LINK MOBILE APP**
Smartphone Android or iOS with Internet connection (provider charges may apply).

MANDATORY

HOOD PIN



REMOTE START SAFETY OVERRIDE SWITCH

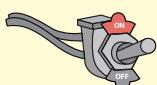
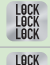






VALET SWITCH


Part #: RSPB available, Sold separately.

Notice: the installation of safety elements are mandatory. The hood pin and the valet switch are essential security elements and must be installed.


STAND ALONE CONFIGURATION

	Program bypass option	UNIT OPTION	DESCRIPTION
	OEM Remote Stand Alone Remote Starter:	D1.10 	By default, LOCK, LOCK, LOCK
		D1.1 	Par défaut, VERROUILLE, VERROUILLE, VERROUILLE
	Program bypass option with oem remote:	C1	OEM Remote Monitoring
	Program bypass option with RF KIT antenna:	H1 to H6	Supported RF Kits and select RF Kit
	Program bypass option Vehicle hybrid only:	D4	Hybrid mode (Vehicle hybrid only)


REMOTE STARTER FUNCTIONALITY




All doors must be closed.

3X 

Press the OEM remote's Lock button 3x to remote-start (or remote-stop) the vehicle.




START 

The vehicle will START.

REMOTE STARTER DIAGNOSTICS
MODULE RED LED


x2 flash :	Brake ON
x3 flash :	No tach
x4 flash :	Ignition before start
x5 flash :	Hood Open

REMOTE STARTER WARNING CARD



CUT THIS WARNING CARD AND STICK IT ON A VISIBLE PLACE:
 or use the package RSPB, Sold separately.

WARNING



REMOTE STARTER


THE VEHICLE CAN BE STARTED BY EITHER: PRESSING THE LOCK BUTTON ON THE OEM REMOTE 3 TIMES CONSECUTIVELY OR BY A SMARTPHONE. **TURN ON** THE SAFETY SWITCH LOCATED UNDER THE DASHBOARD BEFORE WORKING ON THE VEHICLE.

DESCRIPTION


① Gateway module, located at dash board driver's side,




② Parking Lights switch

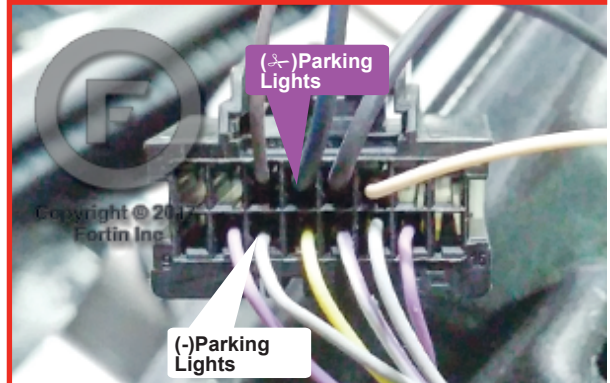

AUTOMATIC TRANSMISSION WIRING CONNECTION

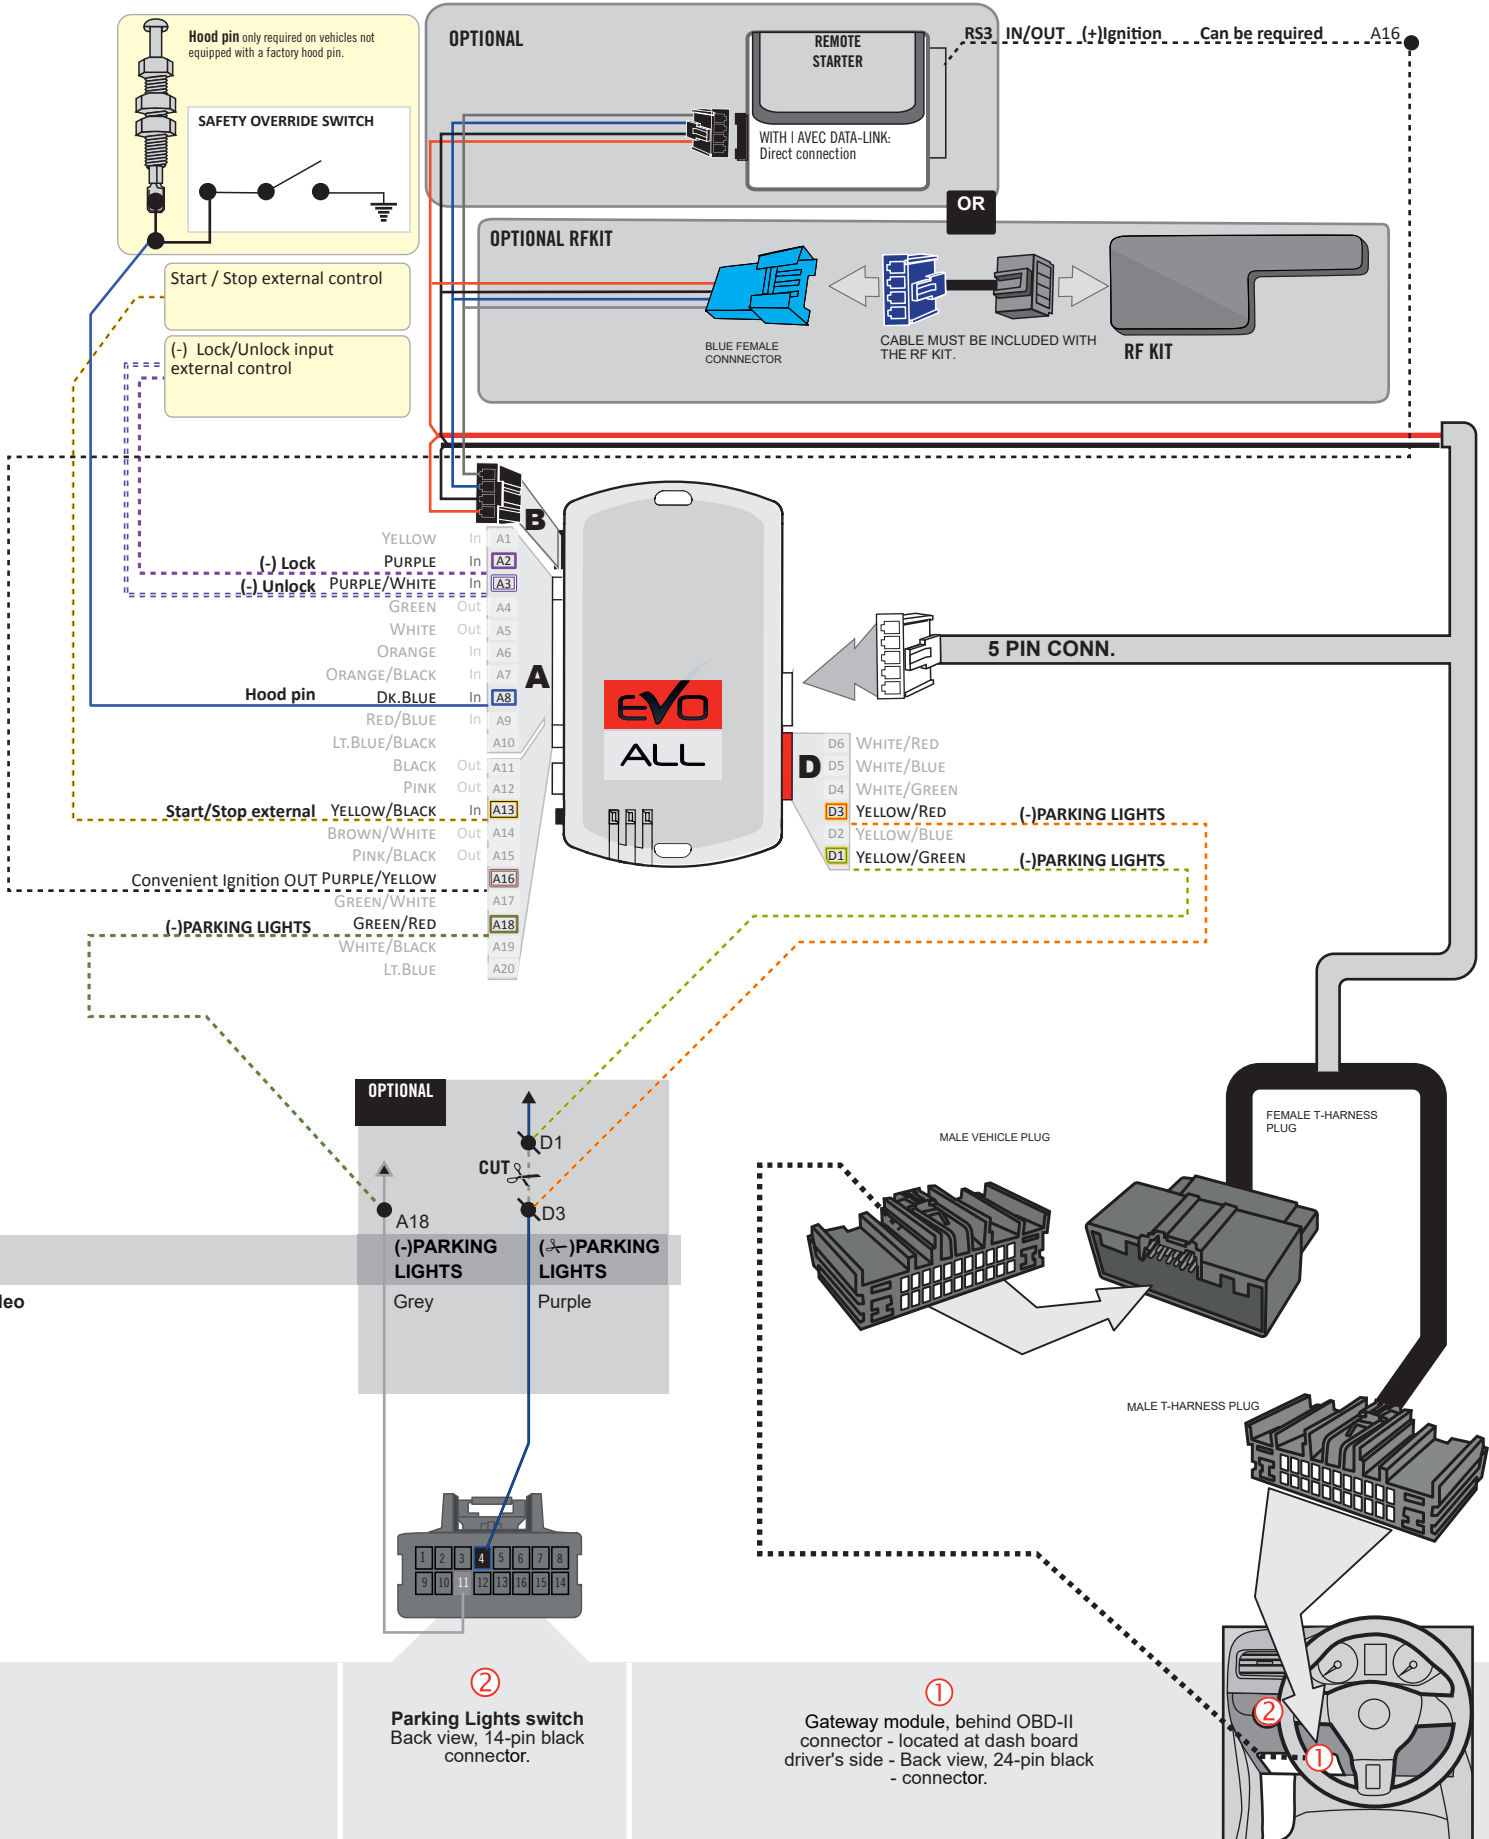


PROGRAMMING PROCEDURE

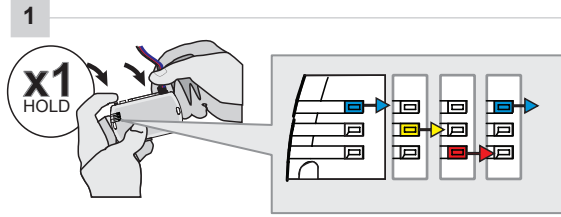


Press and hold the programming button:
Insert the 4-Pin (Data-Link) connector.

↳ The Blue, Red, Yellow and Blue & Red LEDs will alternatively illuminate.

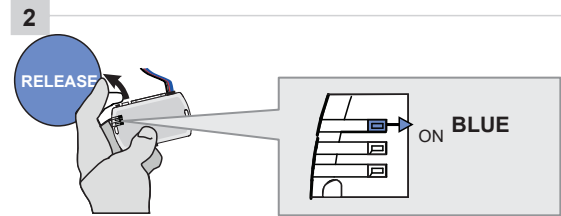


Release the programming button when the LED is BLUE.

If the LED is not solid BLUE disconnect the 4-Pin connector (Data-Link) and go back to step 1.

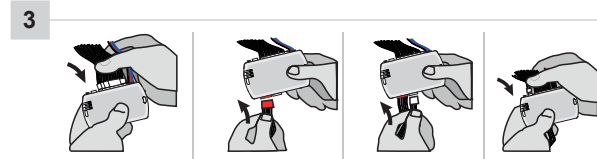


Insert the required remaining connectors.

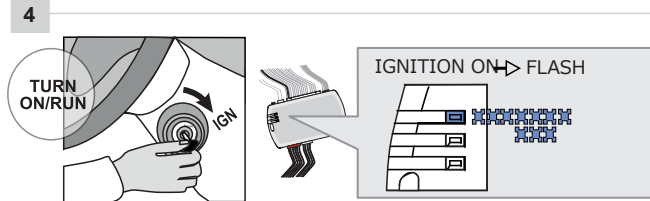


Turn the key to the Ignition ON/RUN position.

↳ The BLUE LED will flash rapidly.

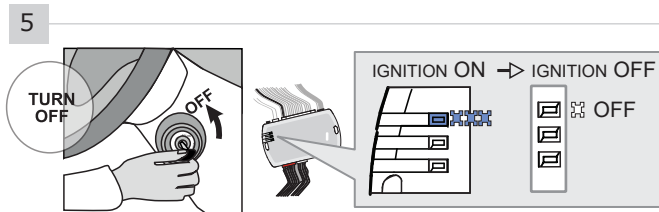



Turn the key to the OFF position.

↳ The BLUE LED will turn off.

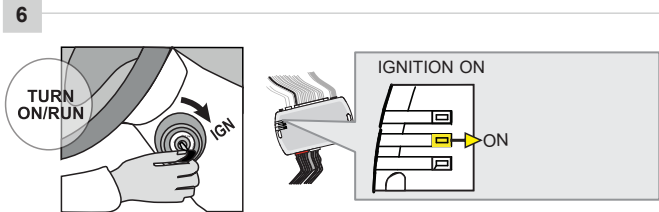

Turn the key to the Ignition ON/RUN position.

↳ The YELLOW LED will turn ON.

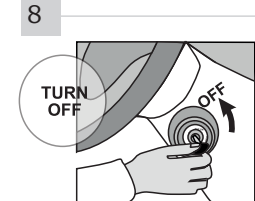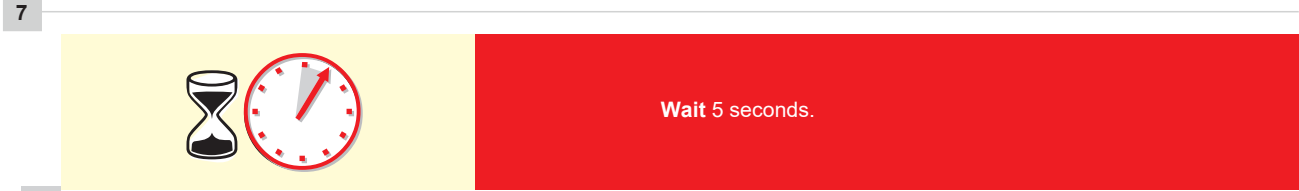

Turn the key to the OFF position.



REMOTE STARTER FUNCTIONALITY



All doors must be closed.



Remote start the vehicle.



Unlock the doors with the remote-starter remote or the OEM remote.



Insert and Turn the key to the Ignition ON/RUN position.



Press the brake pedal.



The vehicle can now be put in to gear and driven.

THAR-FOR3 THARNNESS STAND ALONE INSTALLATION

ADDENDUM - SUGGESTED WIRING CONFIGURATION



ONLY COMPATIBLE WITH AUTOMATIC TRANSMISSION VEHICLES.



VEHICLE

YEARS

Vehicle functions supported in this diagram (functional if equipped)

FORD

Mustang

PTS 2015-2018

KEY CONTROL

T-Harness

Lock

Unlock

Arm

Disarm

RAP Disable

Parking Lights

Tachometer

Door Status

Trunk Status

Hood Status*

Hand-Brake Status

Foot-Brake Status

OEM Remote monitoring

• •

HARDWARE VERSION



MINIMUM **6**

4.05

ONLY - SEULEMENT

To add the firmware version and the options, use the **FLASH LINK UPDATER** or **FLASH LINK MOBILE** tool, sold separately.



Program bypass option IF THE VEHICLE IS NOT EQUIPPED WITH FUNCTIONAL HOOD PIN:

UNIT OPTION

DESCRIPTION

A11

OFF

Hood trigger (Output Status).



Program bypass option:

UNIT OPTION

DESCRIPTION

C1

OEM Remote status (Lock/Unlock) monitoring

D6

Push-to-Start



Parts required (Not included)

- 1X Vehicle key
- 1X 7.5 Amp. Fuse
- 1X Relay
- 1X Diode

MANDATORY INSTALL

*HOOD PIN



HOOD STATUS: THE HOOD PIN SWITCH MUST BE INSTALLED IF THE VEHICLE CAN BE REMOTE STARTED WITH THE HOOD OPEN, SET FUNCTION **A11** TO OFF.

A11

OFF

Notice: the installation of safety elements are mandatory. The hood pin is an essential security element and must be installed.

THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.


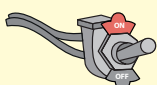
PARTS REQUIRED (NOT INCLUDED)

1x **FLASH LINK UPDATER**
 1x **FLASH LINK MANAGER**
SOFTWARE | PROGRAMME
 1x Microsoft Windows Computer with Internet connection

OR

1x **FLASH LINK MOBILE**
 1x **FLASH LINK MOBILE APP**
Smartphone Android or iOS with Internet connection (provider charges may apply).

MANDATORY


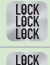




HOOD PIN  REMOTE START SAFETY OVERRIDE SWITCH 

VALET SWITCH


Part #: RSPB available, Sold separately.

Notice: the installation of safety elements are mandatory. The hood pin and the valet switch are essential security elements and must be installed.


STAND ALONE CONFIGURATION

	Program bypass option	UNIT OPTION	DESCRIPTION
	OEM Remote Stand Alone Remote Starter:	D1.10 	By default, LOCK, LOCK, LOCK
		D1.1 	Par défaut, VERROUILLE, VERROUILLE, VERROUILLE
	Program bypass option with oem remote:	C1	OEM Remote Monitoring
	Program bypass option with RF KIT antenna:	H1 to H6	Supported RF Kits and select RF Kit
	Program bypass option Vehicle hybrid only:	D4	Hybrid mode (Vehicle hybrid only)


REMOTE STARTER FUNCTIONALITY




All doors must be closed.

3X 

Press the OEM remote's Lock button 3x to remote-start (or remote-stop) the vehicle.




START 

The vehicle will START.

REMOTE STARTER DIAGNOSTICS
MODULE RED LED


x2 flash :	Brake ON
x3 flash :	No tach
x4 flash :	Ignition before start
x5 flash :	Hood Open

REMOTE STARTER WARNING CARD



CUT THIS WARNING CARD AND STICK IT ON A VISIBLE PLACE:
 or use the package RSPB, Sold separately.

WARNING






REMOTE STARTER


THE VEHICLE CAN BE STARTED BY EITHER: PRESSING THE LOCK BUTTON ON THE OEM REMOTE 3 TIMES CONSECUTIVELY OR BY A SMARTPHONE. **TURN ON** THE SAFETY SWITCH LOCATED UNDER THE DASHBOARD BEFORE WORKING ON THE VEHICLE.

DESCRIPTION


③ ④ BCM, Passenger kick panel

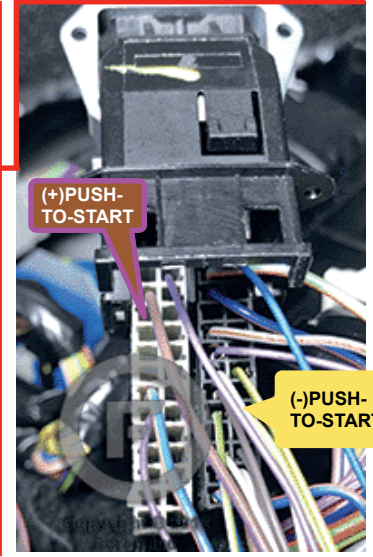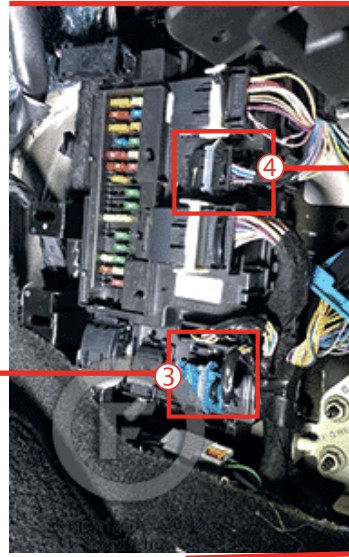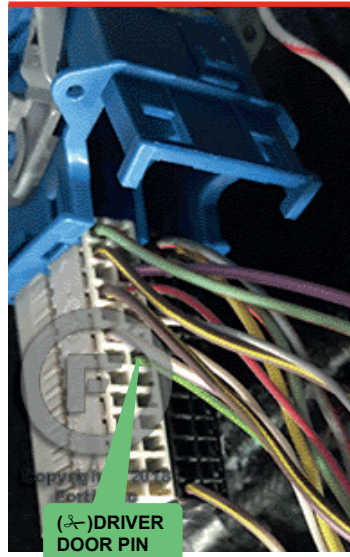



② Parking Lights switch

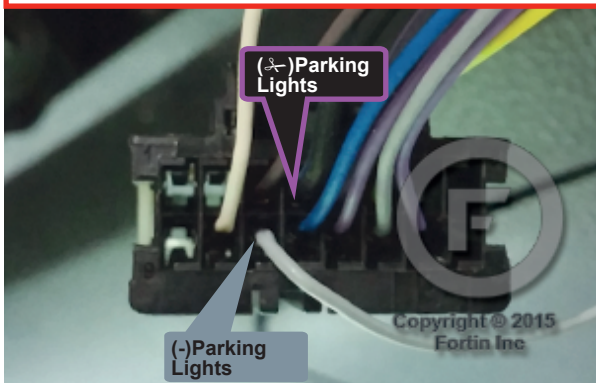


① Gateway module, located at right of steering column.

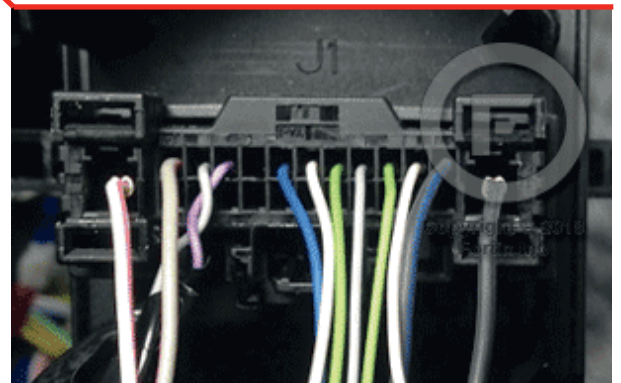

AUTOMATIC TRANSMISSION WIRING CONNECTION

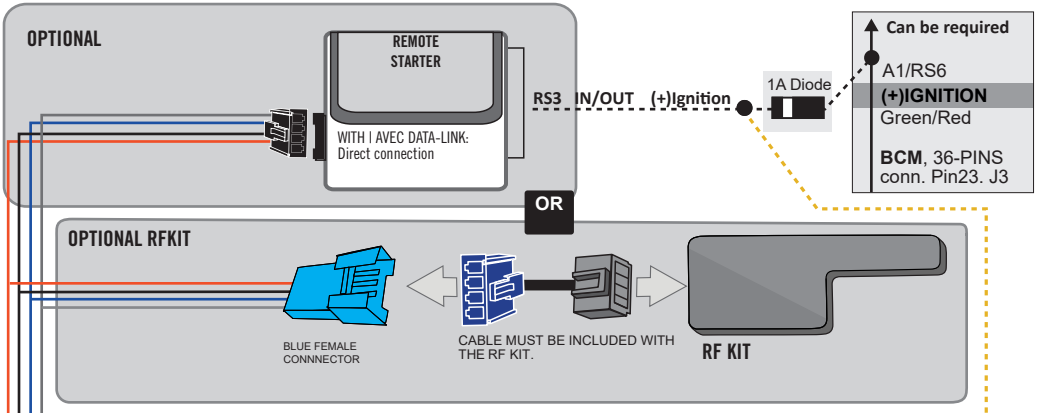
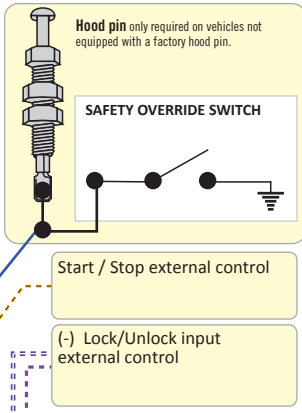


(+) Ignition	YELLOW	In	A1
(-) Lock	PURPLE	In	A2
(-) Unlock	PURPLE/WHITE	In	A3
	GREEN	Out	A4
	WHITE	Out	A5
	ORANGE	In	A6
	ORANGE/BLACK	In	A7
Hood pin	Dk.BLUE	In	A8
	Red/BLUE	In	A9
	Lt.BLUE/BLACK	In	A10
	BLACK	Out	A11
	PINK	Out	A12
Start/Stop external	YELLOW/BLACK	In	A13
	BROWN/WHITE	Out	A14
(-)DRIVER DOOR PIN	PINK/BLACK	Out	A15
(+)PUSH-TO-START	PURPLE/YELLOW	Out	A16
	GREEN/WHITE	Out	A17
KEY	GREEN/RED	Out	A18
(-)PUSH-TO-START	WHITE/BLACK	Out	A19
	Lt.BLUE	Out	A20



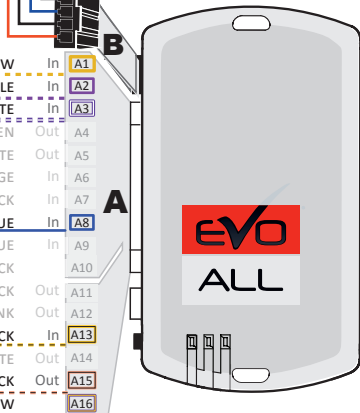


C5	BROWN
C4	GRAY/BLACK
C3	GRAY
C2	ORANGE/BROWN
C1	ORANGE/GREEN

D6	WHITE/RED	(+)FOOT BRAKE
D5	WHITE/BLUE	(+)FOOT BRAKE
D4	WHITE/GREEN	(+)FOOT BRAKE
D3	YELLOW/RED	(-)PARKING LIGHTS
D2	YELLOW/BLUE	(-)PARKING LIGHTS
D1	YELLOW/GREEN	(-)PARKING LIGHTS

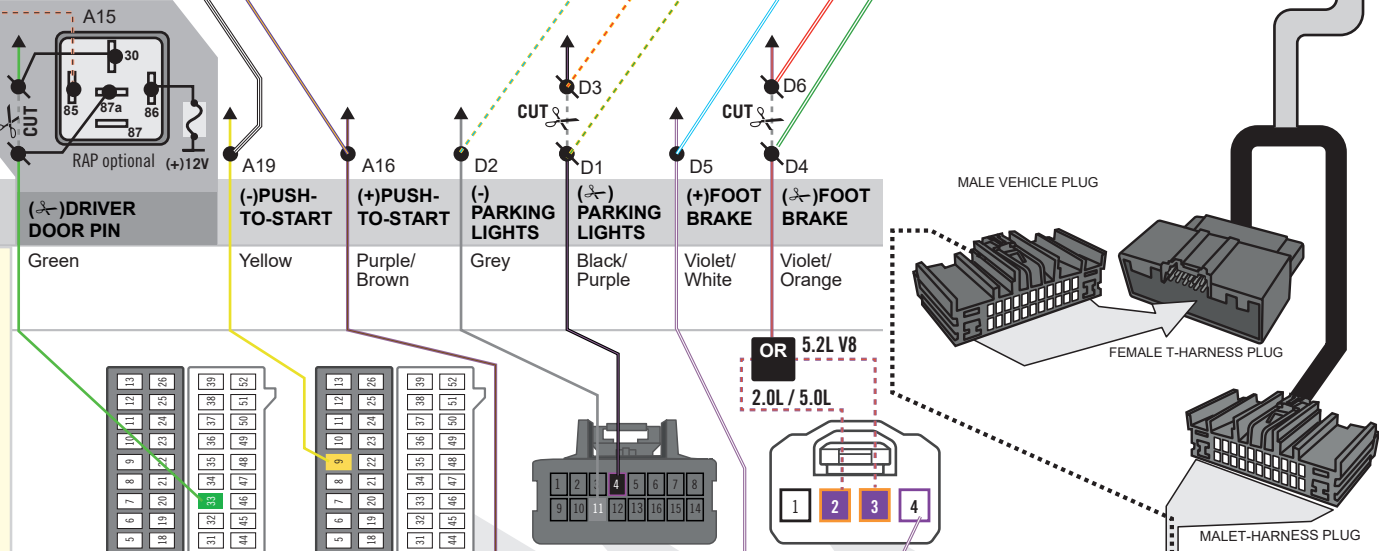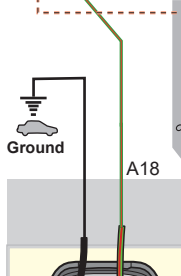


- Open the remote control.
- Remove the batteries.
- Solder onto the contacts of the battery as shown.
- Place the remote control in the indicated area.

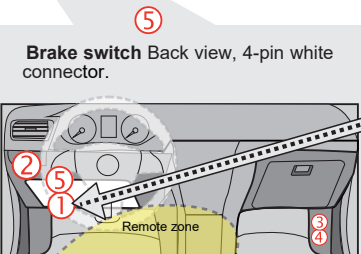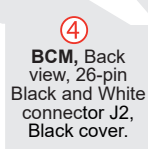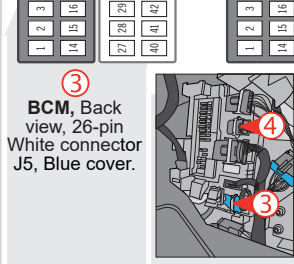

PROGRAMMING PROCEDURE


1

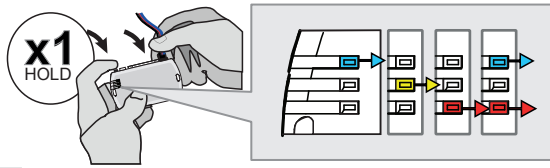

Press and hold the programming button:
Connect the 4-Pin Data-link connector.


↳ The BLUE, RED, YELLOW and BLUE & RED LEDs will alternatively illuminate.

2

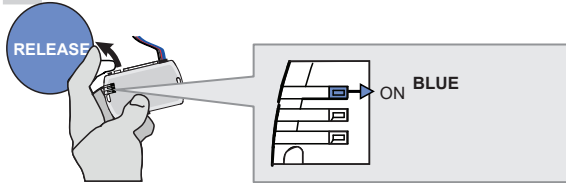


Release the programming button when the LED is BLUE.

 If the LED is not solid BLUE disconnect the 4-Pin connector (Data-Link) and go back to step 1.




3

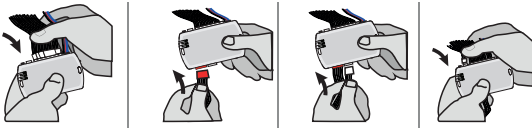


Insert the required remaining connectors.

4

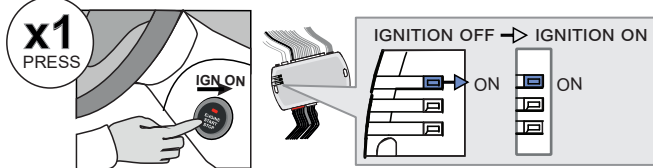

Press the Push-to-Start button to turn ON the ignition.

5

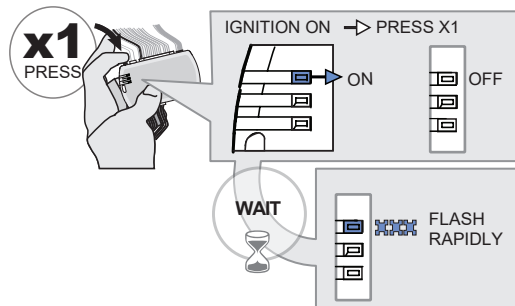


Press and release the programming button once (1x).

↳ The BLUE LED will turn off.

Wait,

↳ The BLUE LED will flash rapidly.

6

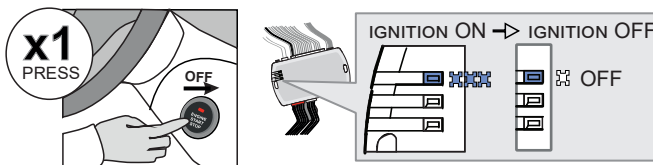

Press the Push-to-Start button once to turn off the ignition.

↳ The BLUE LED will turn off.



The module is now programmed.


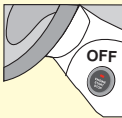
OPTIONAL RF-KIT PROGRAMMING

PROGRAM BYPASS OPTION

	<p>Program bypass option:</p>	<p>H2</p>	<p><input checked="" type="checkbox"/> Supported RF-KITS enable <input checked="" type="checkbox"/> H2 Fortin 2</p>
--	-------------------------------	------------------	---

OPTIONAL FORTIN RF KIT SERIES 4 OR SERIES 9 PROGRAMMING

The module must be programmed on the vehicle.

MAKE SURE THE IGNITION KEY HAS BEEN IN THE OFF POSITION FOR AT LEAST 5 SECONDS.

<p>1</p> <p>ON x1 PRESS</p> <p>Do not press the brake pedal. Press the Push-to-Start button once to turn on the ignition.</p>	<p>2</p> <p>OFF x1 PRESS</p> <p>Press the Push-to-Start button once to turn off the ignition.</p>	<p>3</p> <p>ON x1 PRESS</p> <p>Do not press the brake pedal. Press the Push-to-Start button once to turn on the ignition.</p>	<p>4</p> <p>4X BRAKES</p> <p>x4 PRESS</p> <p>Press and release the brake pedal four times.</p>	<p>5</p> <p>ON EACH TRANSMITTER</p> <p>4 BUTTONS 4 BOUTONS</p> <p>[-] PRESS AND RELEASE</p> <p>→ PRESS AND RELEASE</p> <p>[LOCK] PRESS AND RELEASE</p> <p>1 BUTTON</p> <p>PRESS APPROX. 12 SEC. AND WAIT FOR THE BLUE LED TO TURN OFF THEN BACK ON SOLID THEN RELEASE.</p>	<p>6</p> <p>OFF x1 PRESS</p> <p>Press the Push-to-Start button once to turn off the ignition.</p>	<p>7</p> <p>ON x1 PRESS</p> <p>Do not press the brake pedal. Press the Push-to-Start button once to turn on the ignition and leave it ON for 5 sec..</p>	<p>8</p> <p>OFF x1 PRESS</p> <p>Press the Push-to-Start button once to turn off the ignition.</p>
<p>The LED will turn ON solide.</p>	<p>The LED will flash rapidly.</p>	<p>The LED will turn ON solide.</p>	<p>The LED will flash rapidly.</p>	<p>The LED will turn off each time.</p>	<p>The LED will turn Off.</p>	<p>The LED will turn Off.</p>	<p>The LED will turn Off.</p>
<p>The YELLOW LED will turn ON solid.</p>	<p>The YELLOW LED will turn Off.</p>	<p>The YELLOW LED will turn ON solid.</p>	<p>The 3 LED will turn ON solid.</p>	<p>The LED will flash rapidly.</p>	<p>The 3 LED will turn off.</p>	<p>The YELLOW LED will turn ON solid.</p>	<p>The YELLOW LED will turn Off.</p>



REMOTE STARTER FUNCTIONALITY



All doors must be closed.



Remote start the vehicle.



Unlock the doors with either:

- The OEM remote
- The remote-starter remote
- Or the proximity remote



Enter the vehicle with the Intelligent Key.



The vehicle can now be put in to gear and driven.

If the vehicle is not unlocked with one of these conditions the remote-starter will shut down as soon as any door is opened.



THAR-FOR3 THARNNESS STAND ALONE INSTALLATION

ADDENDUM - SUGGESTED WIRING CONFIGURATION


ONLY COMPATIBLE WITH AUTOMATIC TRANSMISSION VEHICLES.

VEHICLE
YEARS

Vehicle functions supported in this diagram (functional if equipped)

VEHICLE	YEARS	Immobilizer bypass	Lock	Unlock	Armn	Disarm	RAP Disable	Parking Lights	Tachometer	Heated seats	Heated Mirrors	Rear defrost	Door Status	Trunk Status	Hood Status*	Hand-Brake Status	Foot-Brake Status	Active OEM Remote Start	
LINCOLN																			
Nautilus	Push-to-Start 2019	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
Navigator	Push-to-Start 2018-2019	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•



FIRMWARE VERSION

4.01

ONLY - SEULEMENT

 To add the firmware version and the options, use the **FLASH LINK UPDATER** or **FLASH LINK MOBILE** tool, sold separately.

Program bypass option:
UNIT OPTION
DESCRIPTION
C1

OEM Remote status (Lock/Unlock) monitoring

D6

Push-to-Start

IF THE VEHICLE IS NOT EQUIPPED WITH FUNCTIONAL HOOD PIN:
A11
OFF

Hood trigger (Output Status).


Parts required (Not included)

1x THAR-FOR3

MANDATORY INSTALL
***HOOD PIN**

HOOD STATUS: THE HOOD PIN SWITCH MUST BE INSTALLED IF THE VEHICLE CAN BE REMOTE STARTED WITH THE HOOD OPEN, SET FUNCTION **A11** TO OFF.

A11
OFF
Notice: the installation of safety elements are mandatory. The hood pin is an essential security element and must be installed.

THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.

PARTS REQUIRED (NOT INCLUDED)


1x **FLASH LINK UPDATER**
 1x **FLASH LINK MANAGER**
 SOFTWARE | PROGRAMME
 1x Microsoft Windows Computer with Internet connection

OR


1x **FLASH LINK MOBILE**
 1x **FLASH LINK MOBILE APP**
 Smartphone *Android* or *iOS* with Internet connection (*provider charges may apply*).
 1x

MANDATORY

HOOD PIN



REMOTE START SAFETY OVERRIDE SWITCH

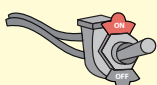
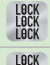






VALET SWITCH


Part #: RSPB available, Sold separately.

Notice: the installation of safety elements are mandatory. The hood pin and the valet switch are essential security elements and must be installed.


STAND ALONE CONFIGURATION

	Program bypass option	UNIT OPTION	DESCRIPTION
	OEM Remote Stand Alone Remote Starter:	D1.10 	By default, LOCK, LOCK, LOCK
		D1.1 	Par défaut, VERROUILLE, VERROUILLE, VERROUILLE
	Program bypass option with oem remote:	C1	OEM Remote Monitoring
	Program bypass option with RF KIT antenna:	H1 to H6	Supported RF Kits and select RF Kit
	Program bypass option Vehicle hybrid only:	D4	Hybrid mode (Vehicle hybrid only)


REMOTE STARTER FUNCTIONALITY




All doors must be closed.

3X 

Press the OEM remote's Lock button 3x to remote-start (or remote-stop) the vehicle.




START 

The vehicle will START.

REMOTE STARTER DIAGNOSTICS
MODULE RED LED


x2 flash :	Brake ON
x3 flash :	No tach
x4 flash :	Ignition before start
x5 flash :	Hood Open

REMOTE STARTER WARNING CARD



CUT THIS WARNING CARD AND STICK IT ON A VISIBLE PLACE:
 or use the package RSPB, Sold separately.

WARNING



REMOTE STARTER

THE VEHICLE CAN BE STARTED BY EITHER: PRESSING THE LOCK BUTTON ON THE OEM REMOTE 3 TIMES CONSECUTIVELY OR BY A SMARTPHONE. **TURN ON** THE SAFETY SWITCH LOCATED UNDER THE DASHBOARD BEFORE WORKING ON THE VEHICLE.

DESCRIPTION





②





Parking Lights switch

①




Gateway module, Behind
OBD-II connector

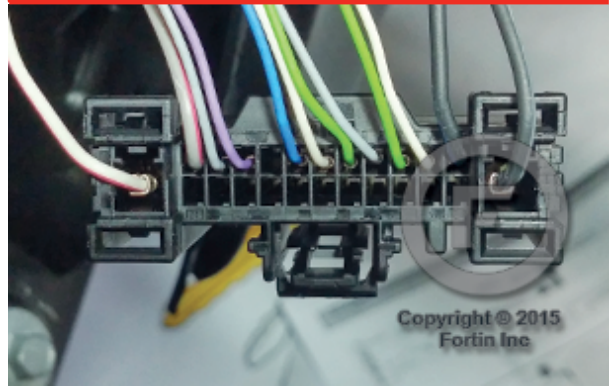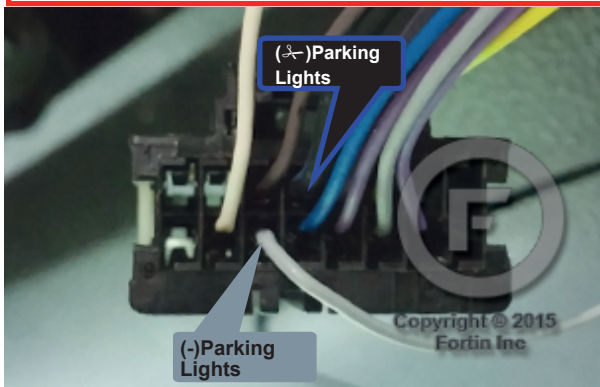


AUTOMATIC TRANSMISSION WIRING CONNECTION

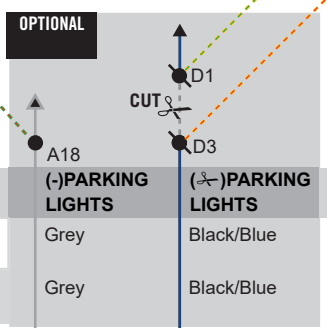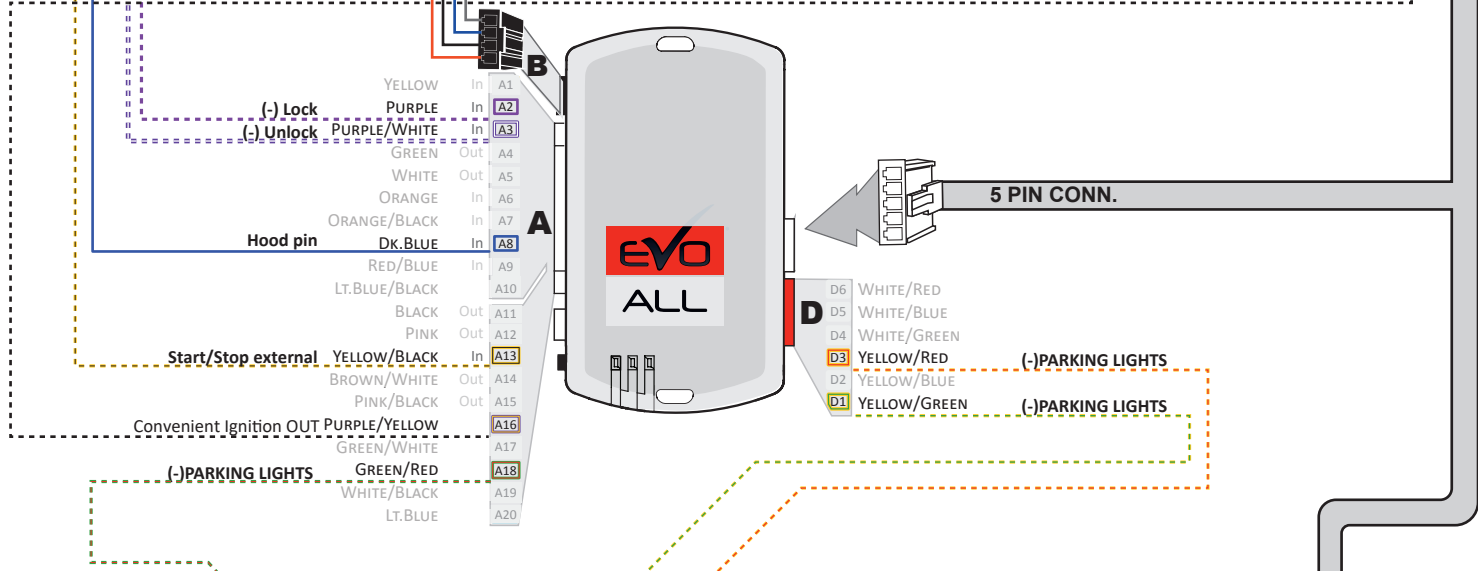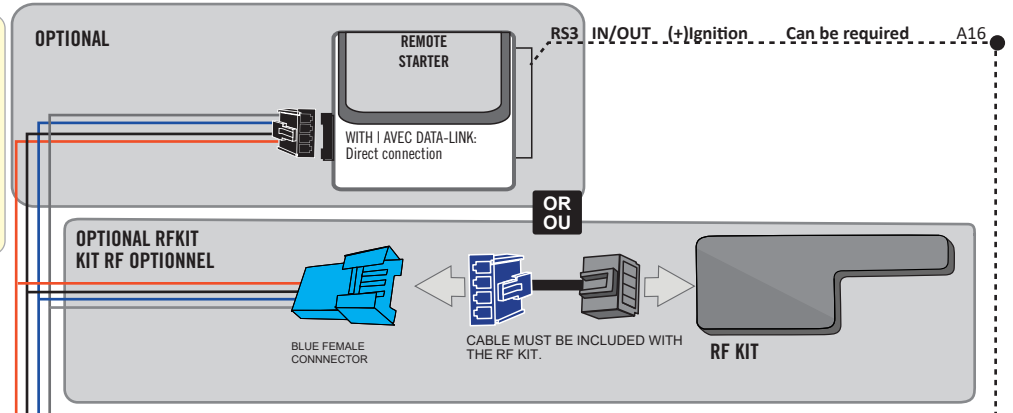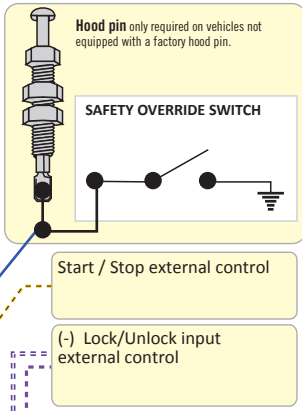

Nautilus	Grey	Black/Blue
Navigator	Grey	Black/Blue

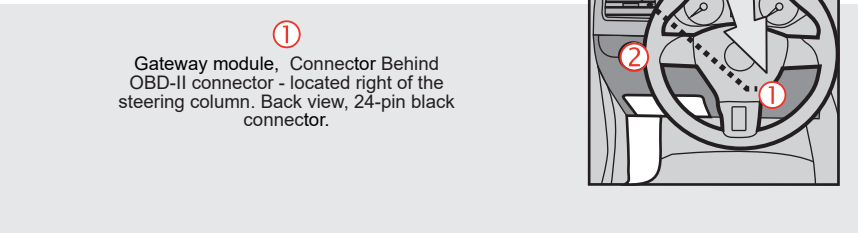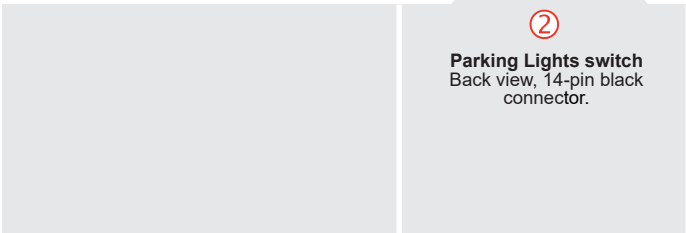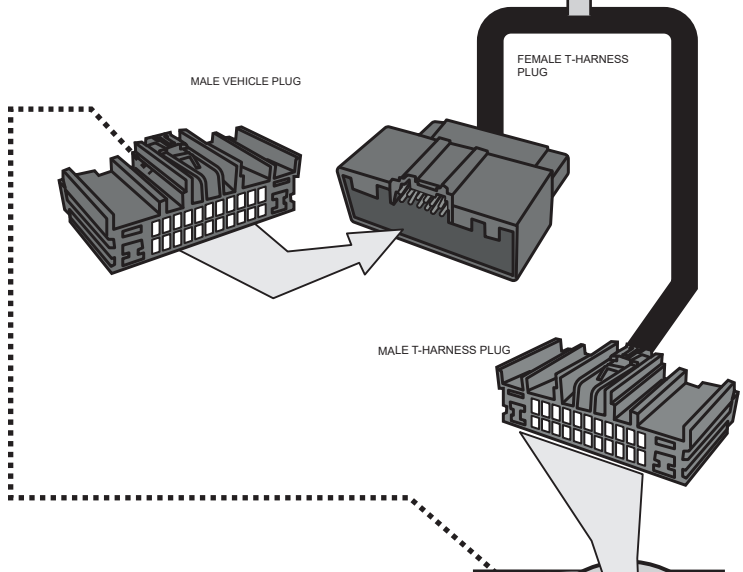


PROGRAMMING PROCEDURE

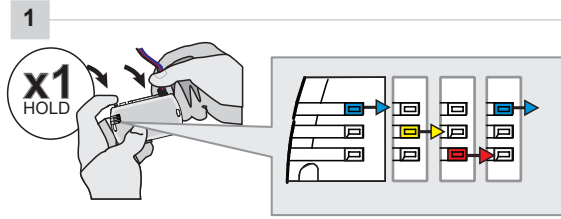



Press and hold the programming button:
Insert the 4-Pin (Data-Link) connector.

↳ The Blue, Red, Yellow and Blue & Red LEDs will alternatively illuminate.

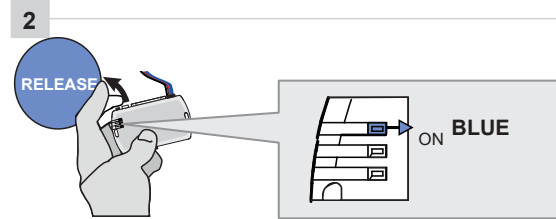


Release the programming button when the LED is BLUE.

 If the LED is not solid BLUE disconnect the 4-Pin connector (Data-Link) and go back to step 1.

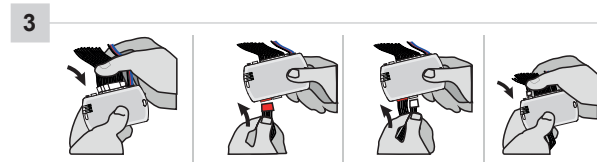


Insert the required remaining connectors.

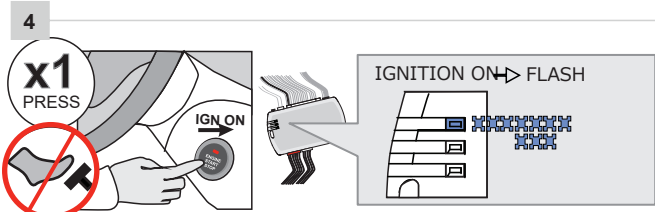


Do not press the brake pedal.
Press the Push-to-Start button once to turn on the ignition.

↳ The BLUE LED will flash rapidly.

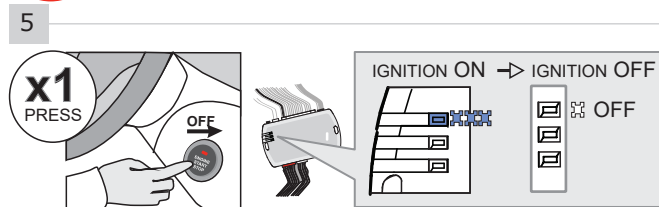

Press the Push-to-Start button once to turn off the ignition.


↳ The BLUE LED will turn off.

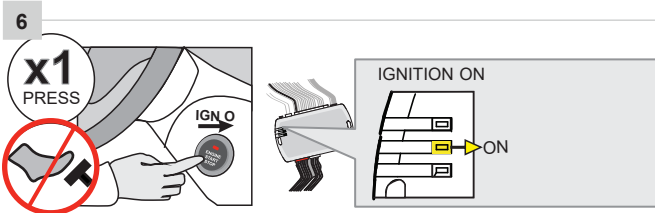

Do not press the brake pedal.
Press the Push-to-Start button once to turn on the ignition.

↳ The YELLOW LED will turn ON.

Wait 5 seconds.

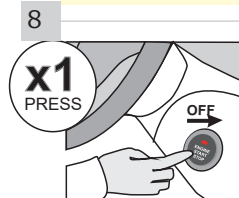

Press the Push-to-Start button once to turn off the ignition.




The module is now programmed.

OPTIONAL RF-KIT PROGRAMMING



PROGRAM BYPASS OPTION

	<p>Program bypass option:</p>	<p>H2</p>	<p>Supported RF-KITS enable H2 Fortin 2</p>
---	-------------------------------	------------------	--

OPTIONAL FORTIN RF KIT SERIES 4 OR SERIES 9 PROGRAMMING




The module must be programmed on the vehicle.

MAKE SURE THE IGNITION KEY HAS BEEN IN THE OFF POSITION FOR AT LEAST 5 SECONDS.

1


ON **x1** PRESS



Do not press the brake pedal. **Press** the Push-to-Start button once to turn on the ignition.

2


OFF **x1** PRESS



Press the Push-to-Start button once to turn off the ignition.

3

ON **x1** PRESS




Do not press the brake pedal. **Press** the Push-to-Start button once to turn on the ignition.

4

4X BRAKES

x4 PRESS



Press and release the brake pedal four times.

The LED will turn off each time.

5

ON EACH TRANSMITTER

4 BUTTONS

[-] PRESS AND RELEASE

→ PRESS AND RELEASE


🔒 PRESS AND RELEASE

1 BUTTON 1 BOUTON

PRESS APPROX. 12 SEC. AND WAIT FOR THE BLUE LED TO TURN OFF THEN BACK ON SOLID THEN RELEASE.


6

OFF **x1** PRESS




Press the Push-to-Start button once to turn off the ignition.


The LED will turn ON solide.

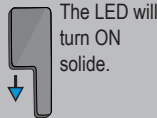


The LED will flash rapidly.

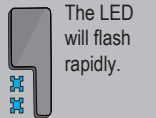


The LED will turn off each time.

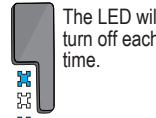


The LED will turn Off.

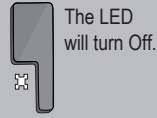


The YELLOW LED will turn ON solid.

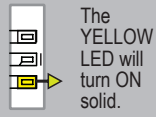


The YELLOW LED will turn Off.

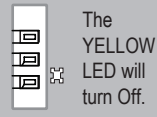


The YELLOW LED will turn ON solide.

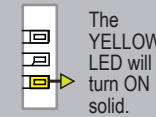


The 3 LED will turn ON solid.

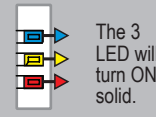


The LED will flash rapidly.



The 3 LED will turn off.

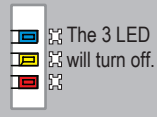



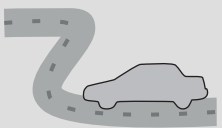


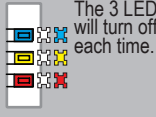The 3 LED will turn off each time.





REMOTE STARTER FUNCTIONALITY

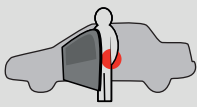 <p>Start</p> <p>All doors must be closed.</p> <p>Remote start the vehicle.</p>	 <p>UNLOCK</p> <p>Unlock the doors with either:</p> <ul style="list-style-type: none"> • The OEM remote • The remote-starter remote • Or the proximity remote 	 <p>Enter the vehicle with the SMART-KEY.</p>	 <p>DO NOT PRESS THE BRAKE PEDAL.</p> <p>Press and release the Push-to-Start button once.</p>	 <p>Press the brake pedal. The vehicle can now be put in to gear and driven.</p> <p>If the Smart-Key is not detected the vehicle will shut down.</p>
--	---	--	---	---

THAR-FOR3 THARNNESS STAND ALONE INSTALLATION

ADDENDUM - SUGGESTED WIRING CONFIGURATION



ONLY COMPATIBLE WITH AUTOMATIC TRANSMISSION VEHICLES.



Vehicle functions supported in this diagram (functional if equipped)

VEHICLE

YEARS

Immobilizer bypass	T-Harness	Lock	Unlock	Arm	Disarm	RAP Disable	Horn	Parking Lights	Tachometer	Heated seats	Heated Mirrors	Rear defrost	Door Status	Trunk Status	Hood Status*	Hand-Brake Status	Foot-Brake Status	Active OEM Remote Start
--------------------	-----------	------	--------	-----	--------	-------------	------	----------------	------------	--------------	----------------	--------------	-------------	--------------	--------------	-------------------	-------------------	-------------------------

FORD

Ranger

Push-to-Start 2019

•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---



FIRMWARE VERSION

4.01

ONLY - SEULEMENT

To add the firmware version and the options, use the **FLASH LINK UPDATER** or **FLASH LINK MOBILE** tool, sold separately.



**Program bypass option
IF THE VEHICLE IS NOT EQUIPPED
WITH FUNCTIONAL HOOD PIN:**

UNIT OPTION

A11

OFF

DESCRIPTION

Hood trigger (Output Status).



Program bypass option:

UNIT OPTION

C1

DESCRIPTION

OEM Remote status (Lock/Unlock) monitoring



Parts required (Not included)

1x 7.5Amp. Fuse

MANDATORY INSTALL

*HOOD PIN



HOOD STATUS: THE HOOD PIN SWITCH MUST BE INSTALLED IF THE VEHICLE CAN BE REMOTE STARTED WITH THE HOOD OPEN, SET FUNCTION **A11** TO OFF.

A11

OFF

Notice: the installation of safety elements are mandatory. The hood pin is an essential security element and must be installed.

THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.

PARTS REQUIRED (NOT INCLUDED)


1x **FLASH LINK UPDATER,**
 1x **FLASH LINK MANAGER**
 SOFTWARE | PROGRAMME
 1x Microsoft Windows Computer with Internet connection

OR


1x **FLASH LINK MOBILE**
 1x **FLASH LINK MOBILE APP**
 Smartphone *Android* or *iOS* with Internet connection (*provider charges may apply*).
 1x

MANDATORY

HOOD PIN



REMOTE START SAFETY OVERRIDE SWITCH

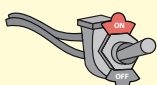
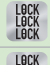





VALET SWITCH


Part #: RSPB available, Sold separately.

Notice: the installation of safety elements are mandatory. The hood pin and the valet switch are essential security elements and must be installed.


STAND ALONE CONFIGURATION

	Program bypass option	UNIT OPTION	DESCRIPTION
	OEM Remote Stand Alone Remote Starter:	D1.10 	By default, LOCK, LOCK, LOCK Par défaut, VERROUILLE,VERROUILLE,VERROUILLE
		D1.1 	
	Program bypass option with oem remote:	C1	OEM Remote Monitoring
	Program bypass option with RF KIT antenna:	H1 to H6	Supported RF Kits and select RF Kit


REMOTE STARTER FUNCTIONALITY




All doors must be closed.

3X 

Press the OEM remote's Lock button 3x to remote-start (or remote-stop) the vehicle.




START 

The vehicle will START.

REMOTE STARTER DIAGNOSTICS
MODULE RED LED


x2 flash :	Brake ON
x3 flash :	No tach
x4 flash :	Ignition before start
x5 flash :	Hood Open

REMOTE STARTER WARNING CARD



CUT THIS WARNING CARD AND STICK IT ON A VISIBLE PLACE:
 or use the package **RSPB**, Sold separately.

WARNING



REMOTE STARTER

THE VEHICLE CAN BE STARTED BY EITHER: PRESSING THE LOCK BUTTON ON THE OEM REMOTE 3 TIMES CONSECUTIVELY OR BY A SMARTPHONE. **TURN ON** THE SAFETY SWITCH LOCATED UNDER THE DASHBOARD BEFORE WORKING ON THE VEHICLE.





 



DESCRIPTION



① Gateway module, located at dash board driver's side,




AUTOMATIC TRANSMISSION WIRING CONNECTION

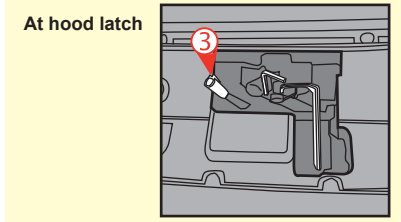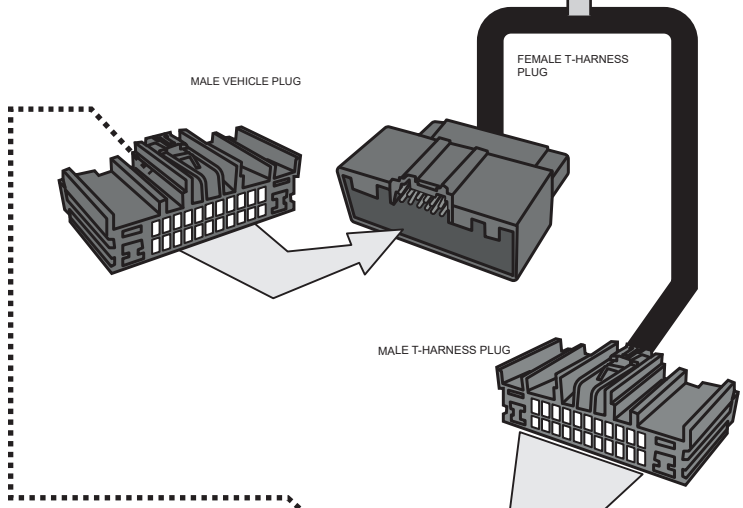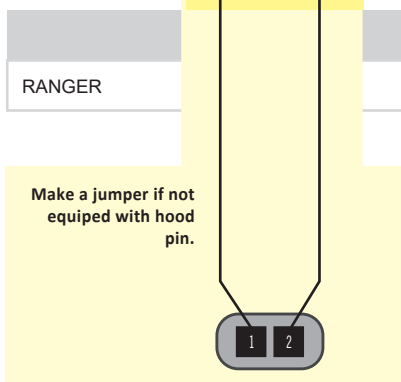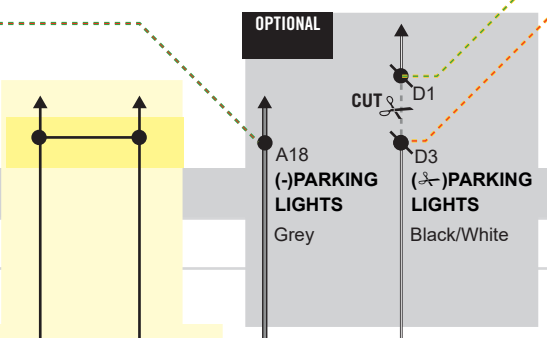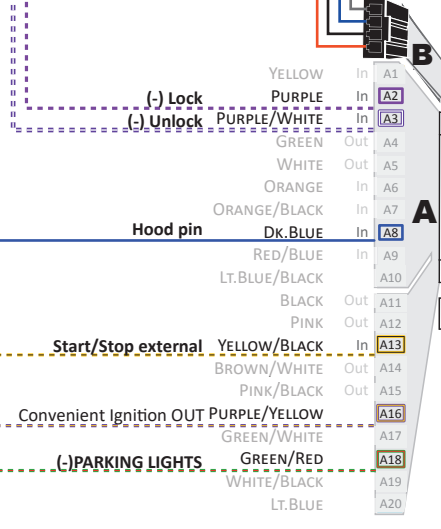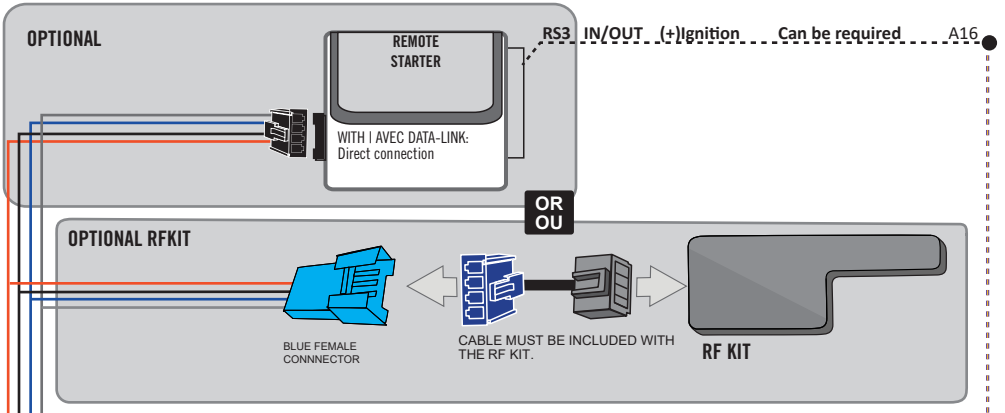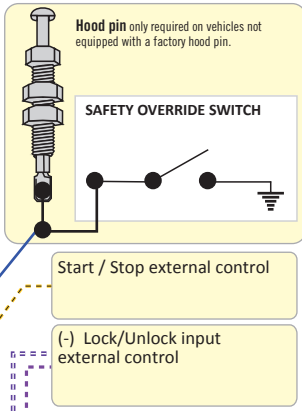


② Parking Lights switch
Back view, 14-pin black connector.

① Gateway module, Behind OBD-II connector - located at dash board driver's side - Back view, 24-pin black connector.

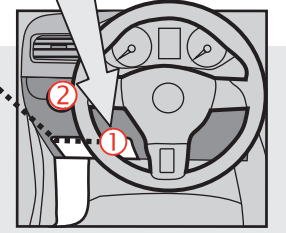

PROGRAMMING PROCEDURE


1

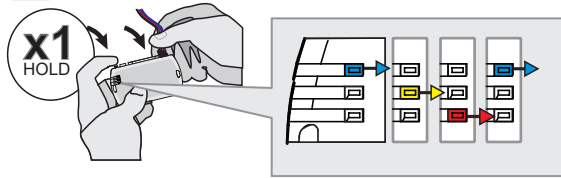

Press and hold the programming button:
Insert the 4-Pin (Data-Link) connector.


↳ The Blue, Red, Yellow and Blue & Red LEDs will alternatively illuminate.

2

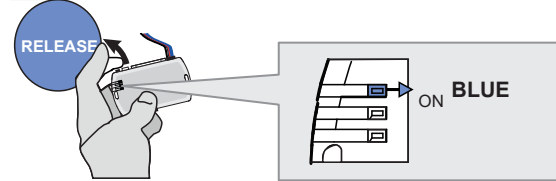


Release the programming button when the LED is BLUE.

If the LED is not solid BLUE disconnect the 4-Pin connector (Data-Link) and go back to step 1.

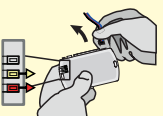


3

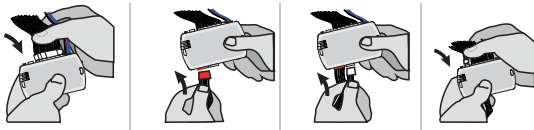

Insert the required remaining connectors.


4

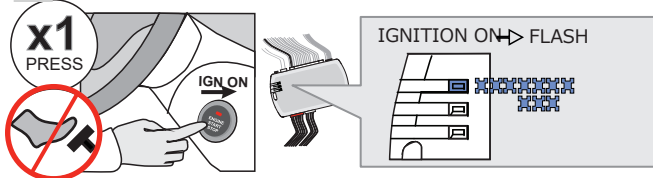

Do not press the brake pedal.
Press the Push-to-Start button once to turn on the ignition.

↳ The BLUE LED will flash rapidly.


5

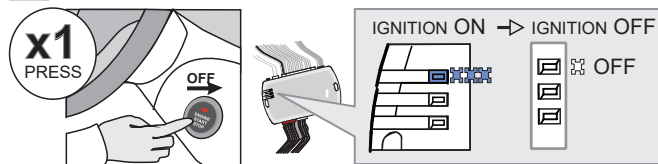

Press the Push-to-Start button once to turn off the ignition.

↳ The BLUE LED will turn off.


6

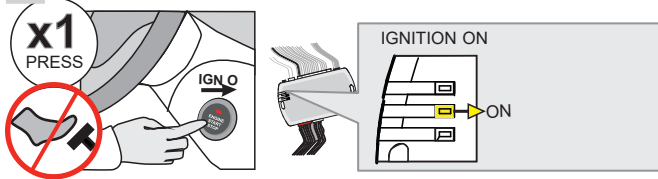

Do not press the brake pedal.
Press the Push-to-Start button once to turn on the ignition.


↳ The YELLOW LED will turn ON.

7



Wait 5 seconds.

8

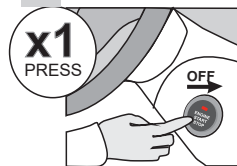

Press the Push-to-Start button once to turn off the ignition.



The module is now programmed.

REMOTE STARTER FUNCTIONALITY



All doors must be closed.

 


Remote start the vehicle.



Unlock the doors with either:

- The OEM remote
- The remote-starter remote
- Or the proximity remote

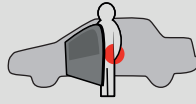

Enter the vehicle with the SMART-KEY.



DO NOT PRESS THE BRAKE PEDAL.

Press and release the Push-to-Start button once.



Press the brake pedal. The vehicle can now be put in to gear and driven.

If the Smart-Key is not detected the vehicle will shut down.

THAR-FOR3 THARNNESS STAND ALONE INSTALLATION

ADDENDUM - SUGGESTED WIRING CONFIGURATION



ONLY COMPATIBLE WITH AUTOMATIC TRANSMISSION VEHICLES.



VEHICLE

YEARS

Vehicle functions supported in this diagram (functional if equipped)

VEHICLE	YEARS	Immobilizer bypass	Lock	Unlock	Arm	Disarm	RAP Disable	Parking Lights	Tachometer	Heated seats	Heated Mirrors	Rear defrost	Door Status	Trunk Status	Hood Status*	Hand-Brake Status	Foot-Brake Status	Active OEM Remote Start	
FORD Transit Connect	Key 2019	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•



FIRMWARE VERSION

4.02

ONLY - SEULEMENT

To add the firmware version and the options, use the **FLASH LINK UPDATER** or **FLASH LINK MOBILE** tool, sold separately.



**Program bypass option:
Programmez l'option du contournement:**

**UNIT OPTION
OPTION UNITE**

C1

DESCRIPTION

OEM Remote status (Lock/Unlock) monitoring

Suivi des status (Verrouillage/Déverrouillage) de la télécommande d'origine

**IF THE VEHICLE IS NOT EQUIPPED WITH FUNCTIONAL HOOD PIN:
SI LE VÉHICULE N'EST PAS ÉQUIPÉ D'UN CONTACT DE CAPOT FONCTIONNEL:**

A11

**OFF
NON**

Hood trigger (Output Status).

Contact de capot (état de sortie).



Parts required (Not included)

1x THAR-FOR3

Pièce(s) requise(s) (Non incluse(s))

1x THAR-FOR3

NOTES



The vehicle must be equipped with the OEM remote with the door locks.

Le véhicule doit être muni sur la clé d'origine avec le verrouillage des portes.

MANDATORY INSTALL

*HOOD PIN



HOOD STATUS: THE HOOD PIN SWITCH MUST BE INSTALLED IF THE VEHICLE CAN BE REMOTE STARTED WITH THE HOOD OPEN, SET FUNCTION A11 TO OFF.

A11

OFF

Notice: the installation of safety elements are mandatory. The hood pin is an essential security element and must be installed.

THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.

PARTS REQUIRED (NOT INCLUDED)


1x **FLASH LINK UPDATER,**
 1x **FLASH LINK MANAGER**
 SOFTWARE | PROGRAMME
 1x Microsoft Windows Computer with Internet connection

OR


1x **FLASH LINK MOBILE**
 1x **FLASH LINK MOBILE APP**
 Smartphone *Android* or *iOS* with Internet connection (*provider charges may apply*).

MANDATORY

HOOD PIN



REMOTE START SAFETY OVERRIDE SWITCH

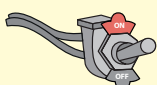
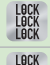






VALET SWITCH


Part #: RSPB available, Sold separately.

Notice: the installation of safety elements are mandatory. The hood pin and the valet switch are essential security elements and must be installed.


STAND ALONE CONFIGURATION

	Program bypass option	UNIT OPTION	DESCRIPTION
	OEM Remote Stand Alone Remote Starter:	D1.10 	By default, LOCK, LOCK, LOCK
		D1.1 	Par défaut, VERROUILLE, VERROUILLE, VERROUILLE
	Program bypass option with oem remote:	C1	OEM Remote Monitoring
	Program bypass option with RF KIT antenna:	H1 to H6	Supported RF Kits and select RF Kit
	Program bypass option Vehicle hybrid only:	D4	Hybrid mode (Vehicle hybrid only)


REMOTE STARTER FUNCTIONALITY




All doors must be closed.

3X 

Press the OEM remote's Lock button 3x to remote-start (or remote-stop) the vehicle.




START 

The vehicle will START.

REMOTE STARTER DIAGNOSTICS
MODULE RED LED


x2 flash :	Brake ON
x3 flash :	No tach
x4 flash :	Ignition before start
x5 flash :	Hood Open

REMOTE STARTER WARNING CARD



CUT THIS WARNING CARD AND STICK IT ON A VISIBLE PLACE:
 or use the package RSPB, Sold separately.

WARNING



REMOTE STARTER



THE VEHICLE CAN BE STARTED BY EITHER: PRESSING THE LOCK BUTTON ON THE OEM REMOTE 3 TIMES CONSECUTIVELY OR BY A SMARTPHONE. **TURN ON** THE SAFETY SWITCH LOCATED UNDER THE DASHBOARD BEFORE WORKING ON THE VEHICLE.

DESCRIPTION




② Parking Lights switch



① Gateway module, located at dash board driver's side,

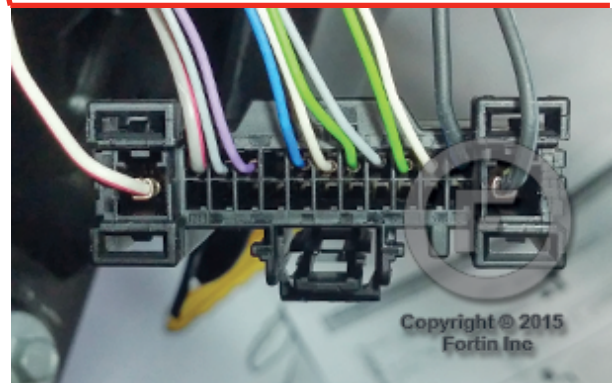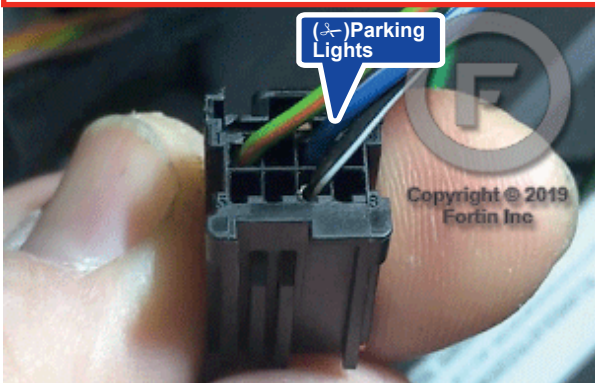

④ Under the hood If not equipped with hood pin.

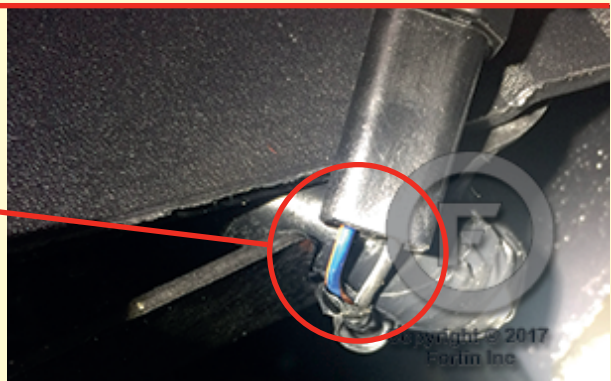


AUTOMATIC TRANSMISSION WIRING CONNECTION

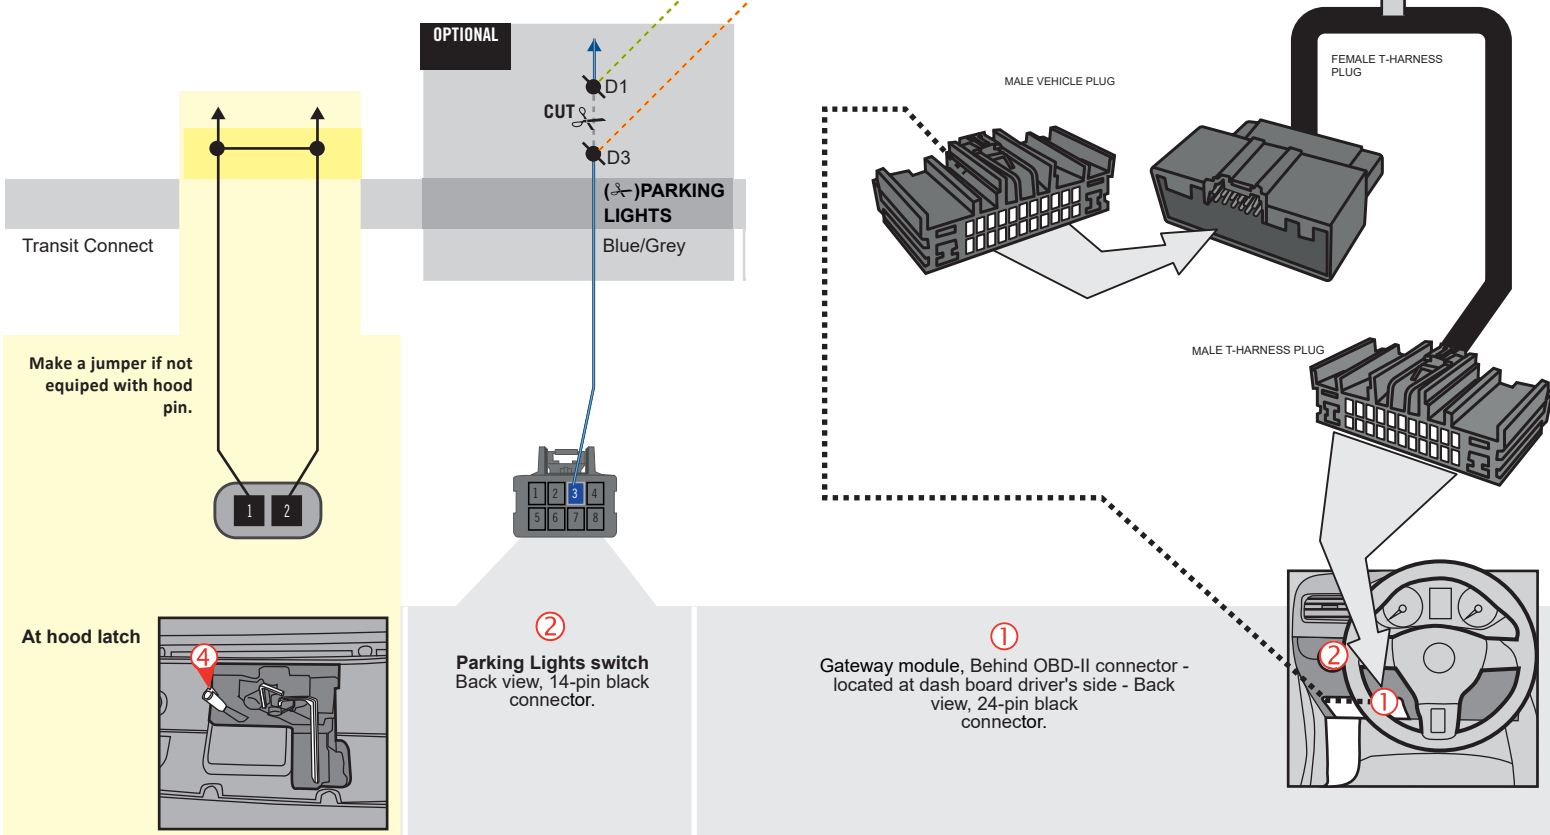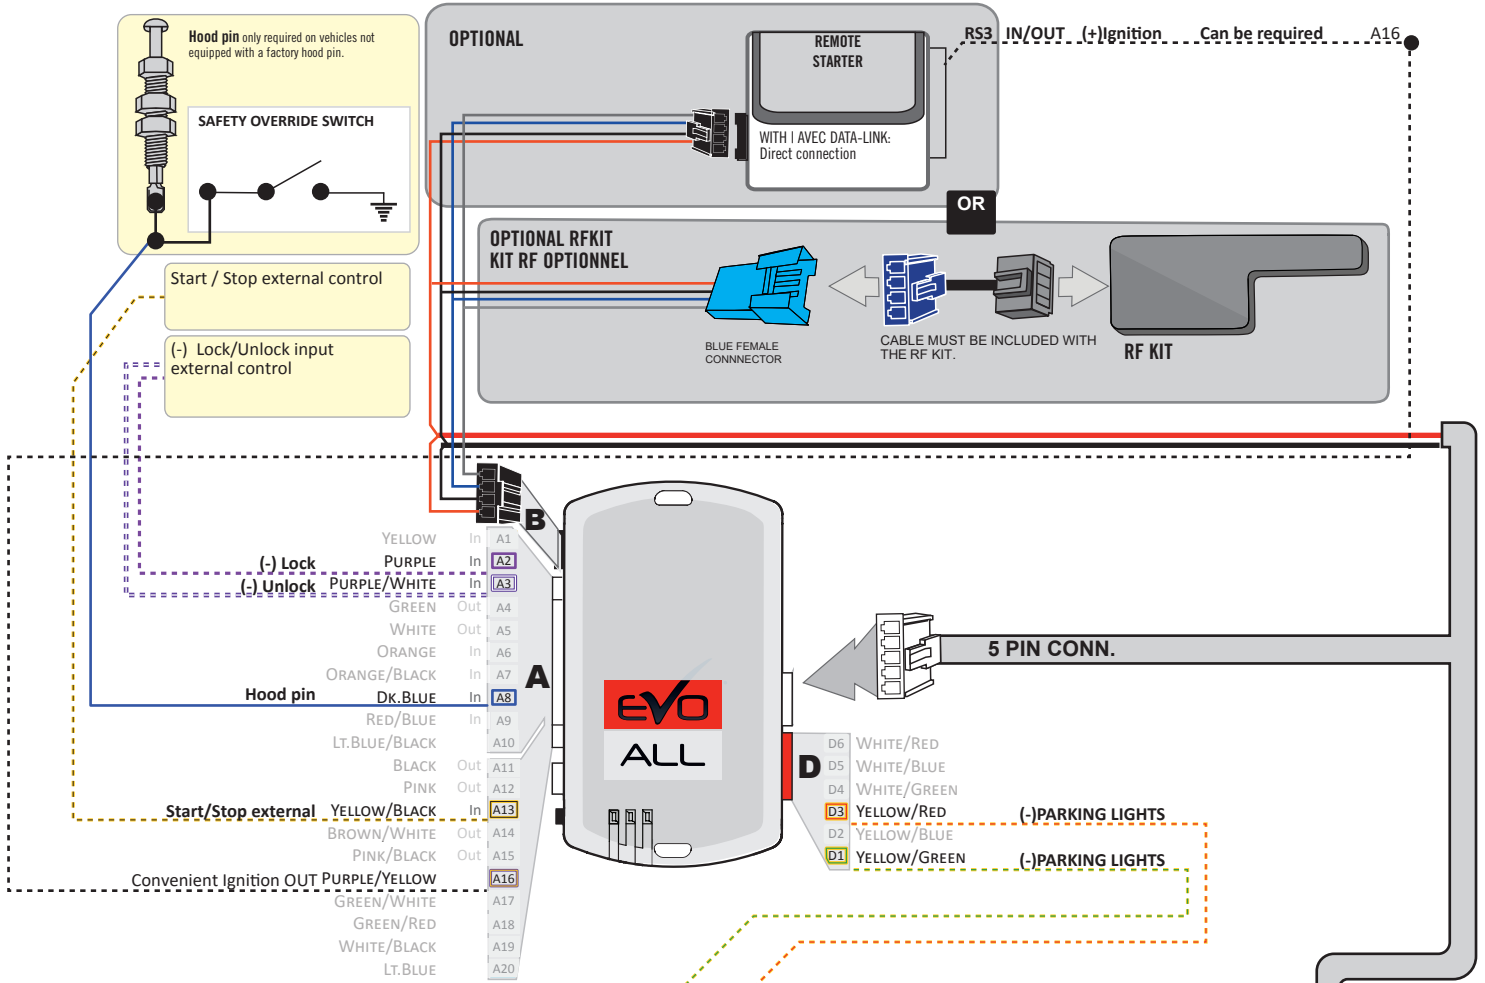

KEY BYPASS PROGRAMMING PROCEDURE 1/2


1

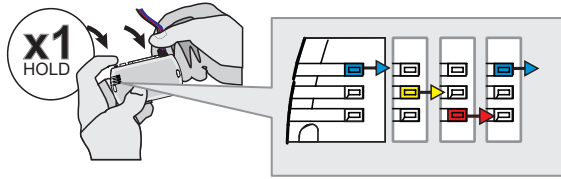

Press and hold the programming button:
Insert the 4-Pin (Data-Link) connector.


↳ The Blue, Red, Yellow and Blue & Red LEDs will alternatively illuminate.

2

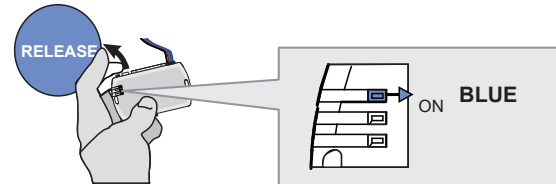


Release the programming button when the LED is BLUE.

 If the LED is not solid BLUE disconnect the 4-Pin connector (Data-Link) and go back to step 1.




3

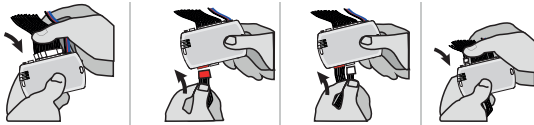

Insert the required remaining connectors.

4

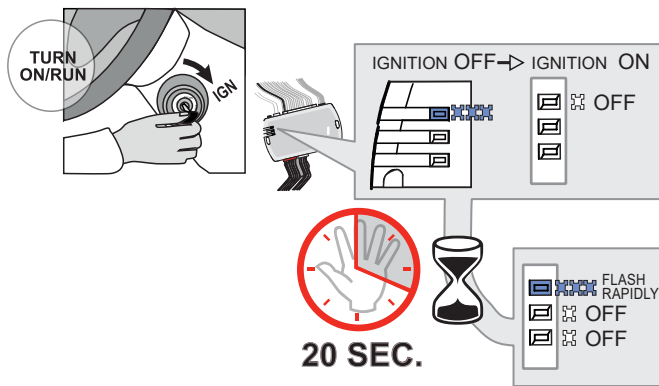


Turn the key to the Ignition ON/RUN position.

↳ The BLUE LED will turn OFF.

↳ The BLUE LED will flash rapidly.


5

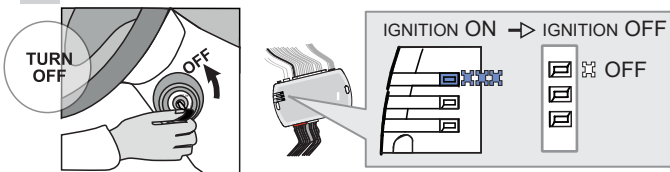

Turn the key to the OFF position.

↳ The BLUE LED will turn off.

6

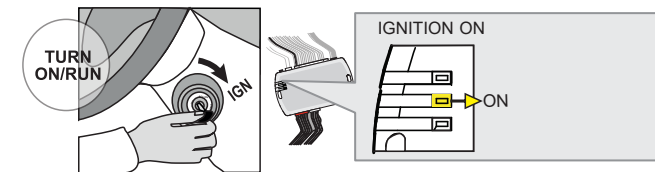

Turn the key to the Ignition ON/RUN position.

↳ The YELLOW LED will turn ON.


7



Wait 5 seconds.

KEY BYPASS PROGRAMMING PROCEDURE 2/2

8

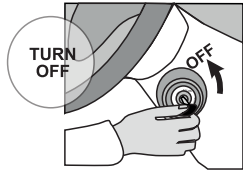


Turn the key to the OFF position.




The module is now programmed.

OPTIONAL RF-KIT PROGRAMMING


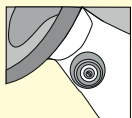
PROGRAM BYPASS OPTION

	<p>Program bypass option:</p>	<p>H2</p>	<p>Supported RF-KITS enable H2 Fortin 2</p>
---	-------------------------------	------------------	--

OPTIONAL FORTIN RF KIT SERIES 4 OR SERIES 9 PROGRAMMING




The module must be programmed on the vehicle.

MAKE SURE THE IGNITION KEY HAS BEEN IN THE OFF POSITION FOR AT LEAST 5 SECONDS.

1


ON TURN ON/RUN

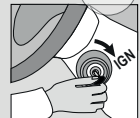

Turn the key to the ON/RUN position.

2


OFF TURN OFF



Turn the ignition to the OFF position.

3

ON TURN ON/RUN




Turn the key to the ON/RUN position.

4

4X BRAKES

x4 PRESS



Press and release the brake pedal four times.

The LED will turn off each time.

5

ON EACH TRANSMITTER

4 BUTTONS 4 BOUTONS

[-] PRESS AND RELEASE

➔ PRESS AND RELEASE

🔒 PRESS AND RELEASE

1 BUTTON

PRESS APPROX. 12 SEC. AND WAIT FOR THE BLUE LED TO TURN OFF THEN BACK ON SOLID THEN RELEASE.


The LED will turn off each time.

The LED will flash rapidly.

The 3 LED will turn off each time.

6


OFF TURN OFF




Turn the ignition to the OFF position.

The LED will turn Off.


The 3 LED will turn off.

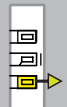


The YELLOW LED will turn ON solid.




The YELLOW LED will turn Off.

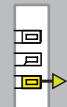


The YELLOW LED will turn ON solid.

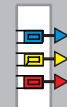

The 3 LED will turn ON solid.



The LED will flash rapidly.



The 3 LED will turn off.



REMOTE STARTER FUNCTIONALITY



All doors must be closed.



Remote start the vehicle.



Unlock the doors with the remote-starter remote or the OEM remote.



Insert and Turn the key to the Ignition ON/RUN position.



Press the brake pedal.



The vehicle can now be put in to gear and driven.

REGULAR & THAR-FOR3 INSTALLATION
ADDENDUM - SUGGESTED WIRING CONFIGURATION

ONLY COMPATIBLE WITH AUTOMATIC TRANSMISSION VEHICLES.

VEHICLE
YEARS
Vehicle functions supported in this diagram (functional if equipped)


Immobilizer bypass	T-Harness available (sold separately)	Lock	Unlock	Arm	Disarm	Heated Seats**	Rear Defrost**	RAP Disable	Parking Lights****	Tachometer	Door Status	Trunk Status	Hood Status*	Hand-Brake Status	Foot-Brake Status	Active OEM Remote Start	R.S. OEM remote Stand Alone compatible
--------------------	---------------------------------------	------	--------	-----	--------	----------------	----------------	-------------	--------------------	------------	-------------	--------------	--------------	-------------------	-------------------	-------------------------	--

FORD

Bronco Sport

Push-to-Start 2021

•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

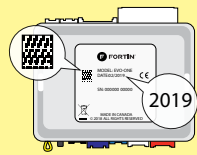
COMPATIBLE MODULE REQUIRED:
QR CODE ON THE LABEL MANUFACTURED AFTER: 2019
FIRMWARE VERSION
58.[02]
MINIMUM

 To add the firmware version and the options, use the **FLASH LINK UPDATER** or **FLASH LINK MOBILE** tool, sold separately.

Program bypass option:
UNIT OPTION
DESCRIPTION
C1

OEM Remote status (Lock/Unlock) monitoring

D6

Push-to-Start

IF THE VEHICLE IS NOT EQUIPPED WITH FUNCTIONAL HOOD PIN:
A11
OFF NON

Hood trigger (Output Status).


Program remote starter option for R.S. OEM REMOTE STAND ALONE:
FUNCTION
MODE
DESCRIPTION
38
2

Enable Press 3x Lock to remote start with the OEM remote.

NOTES

The vehicles OEM remote and SmartKey are still operable during remote start.

****Heated seats** The heated seats and rear defrost will activate automatically when cold.
****Rear Defrost**
*****Parking Lights** The parking lights will activate during remote start only.

MANDATORY INSTALL
*** HOOD PIN**

HOOD STATUS: THE HOOD PIN SWITCH (INCLUDED) MUST BE INSTALLED IF THE VEHICLE CAN BE REMOTE STARTED WITH THE HOOD OPEN, SET FUNCTION A11 TO OFF.

A11
OFF
SECURITY STICKER


Included

Notice: the installation of safety elements are mandatory. The hood pin and the sticker are essential security elements and must be installed.

THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.

DESCRIPTION

Parts required (Not included)		PAGE
-------------------------------	--	------

WIRE TO WIRE DIAGRAM

		Page 3
--	--	--------


THARNESS DIAGRAM

THARNESS THAR-FOR3	1x THAR-FOR3	1x THAR-FOR3	Page 4
--------------------	--------------	--------------	--------


BRONCO SPORT




① Gateway module, Behind OBD-II connector

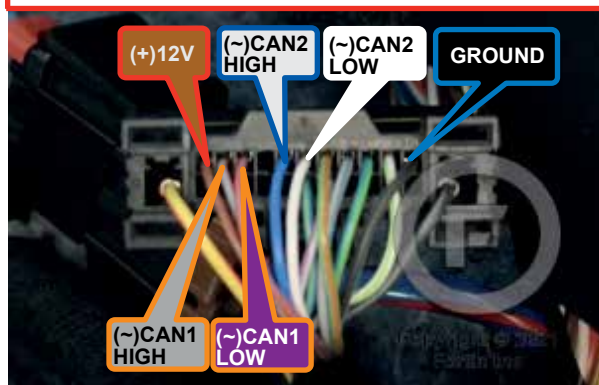


AUTOMATIC TRANSMISSION WIRING CONNECTION

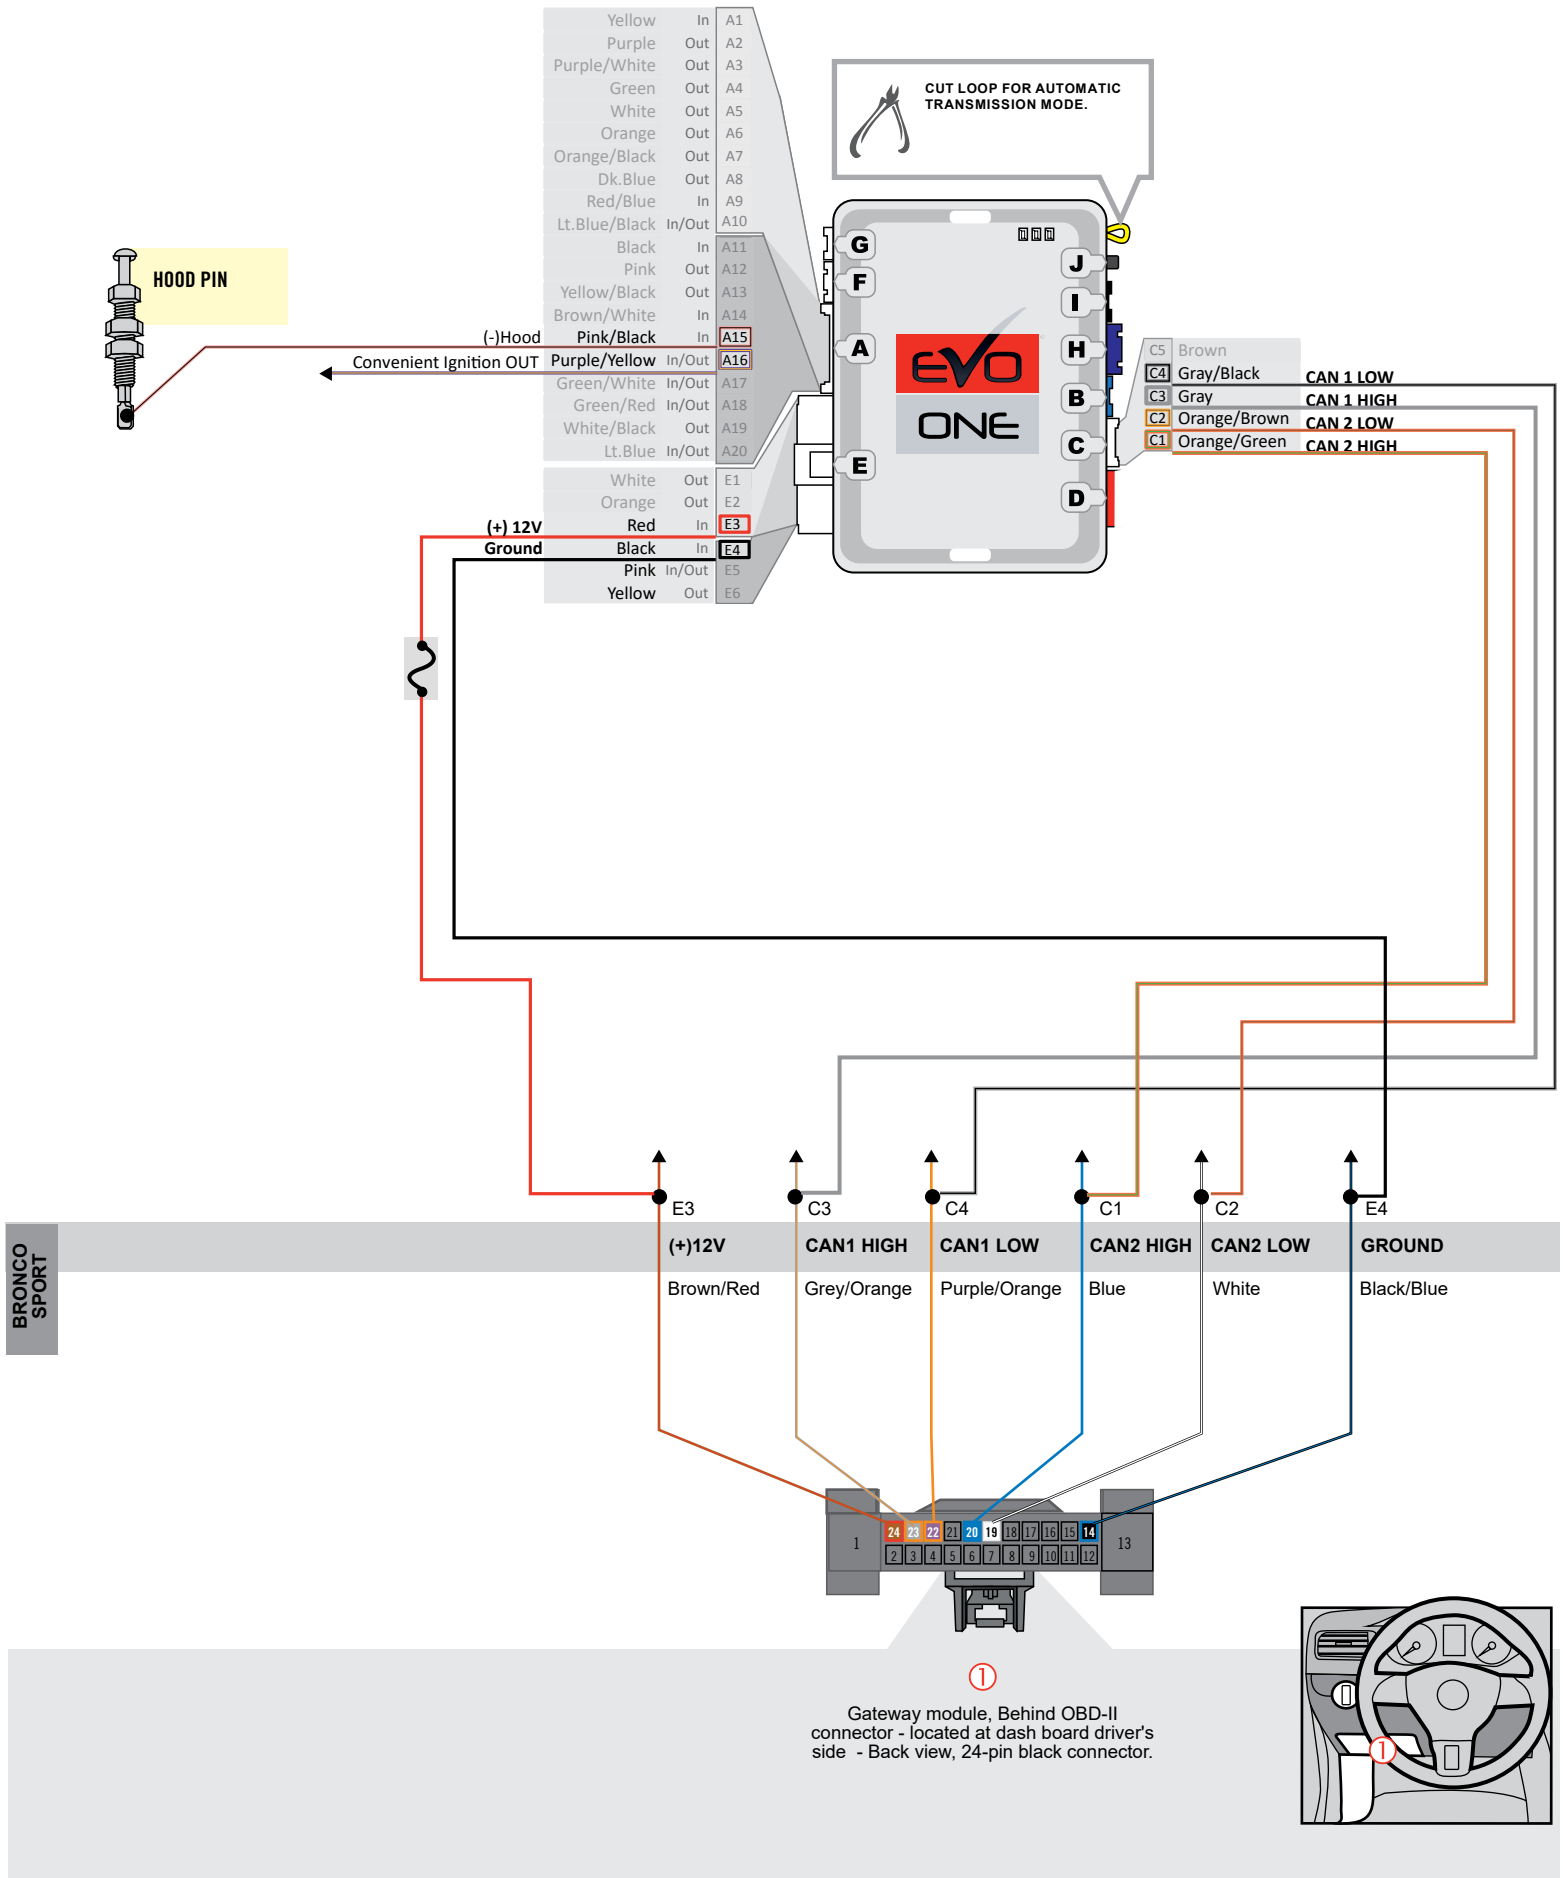

THAR-FOR3 | T-HARNESS - AUTOMATIC TRANSMISSION

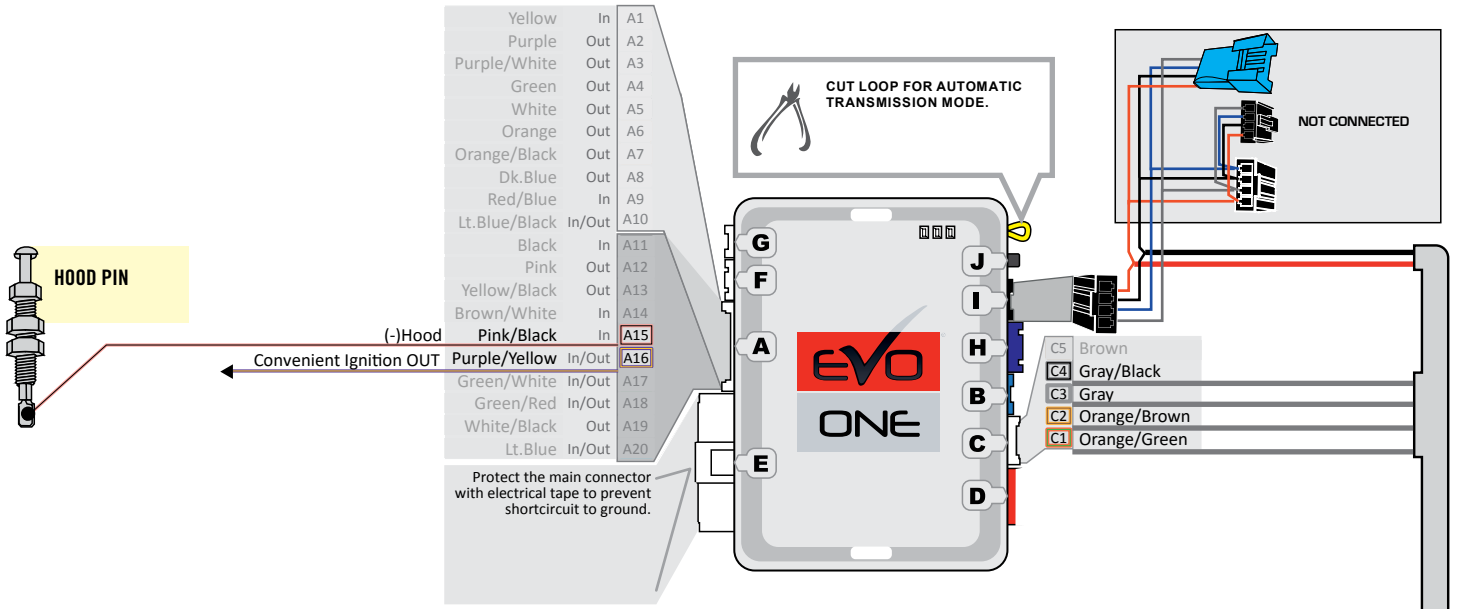

BRONCO SPORT

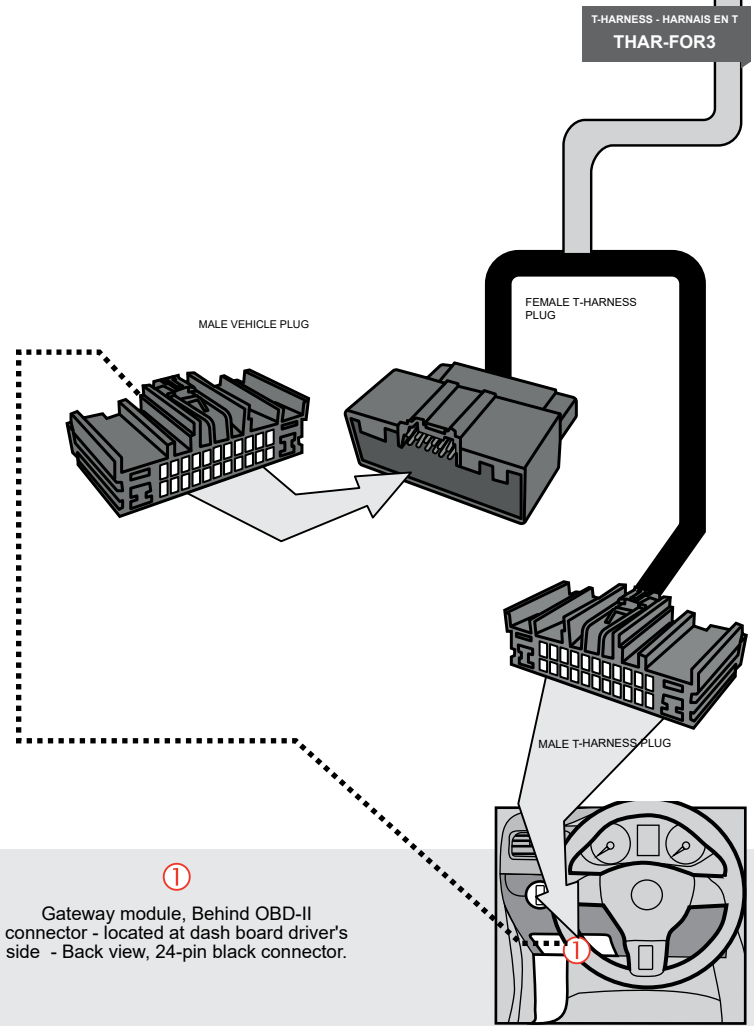

DCRYPTOR PROGRAMMING PROCEDURE



Parts required (not included)


- 1x FLASH LINK UPDATER, SOFTWARE | PROGRAMME
- 1x FLASH LINK MANAGER
- 1x Microsoft Windows Computer with Internet connection

OR
OU

- 1x FLASH LINK MOBILE
- 1x FLASH LINK MOBILE APP
- 1x Smartphone Android or iOS with Internet connection (Internet provider charges may apply)


BEFORE PROGRAMMING SET THE UNIT OPTIONS AND SAVE.

1

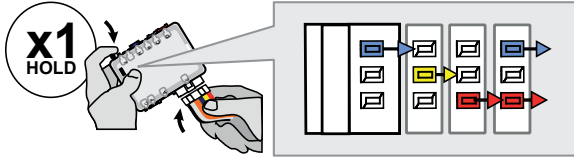

Press and hold the programming button:
Insert the 6-Pin Main connector.


WITH T-HARNESS
AVEC HARNAIS EN T

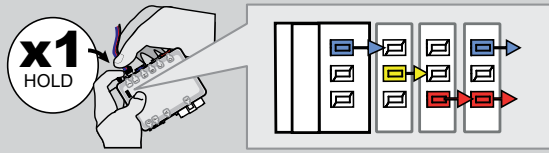

Press and hold the programming button:
Connect the 4-PIN Data-link harness (Black connector).


↳ The LEDs will alternate between BLUE, RED, YELLOW & BLUE/RED flashes.

2

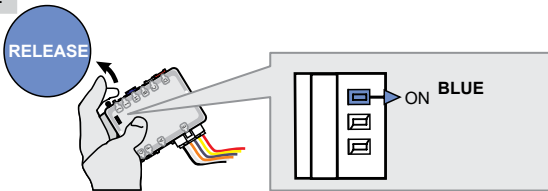


Release the programming button when the BLUE LED is ON.

 If the BLUE LED is not ON solid disconnect the 6-Pin Main connector and go back to step 1.




WITH T-HARNESS
AVEC HARNAIS EN T

 If the LED is not solid BLUE disconnect the 4 Pin connector (Data-Link) and go back to step 1.




3

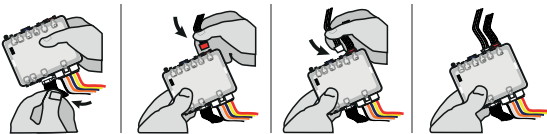

Insert the required remaining connectors.

4

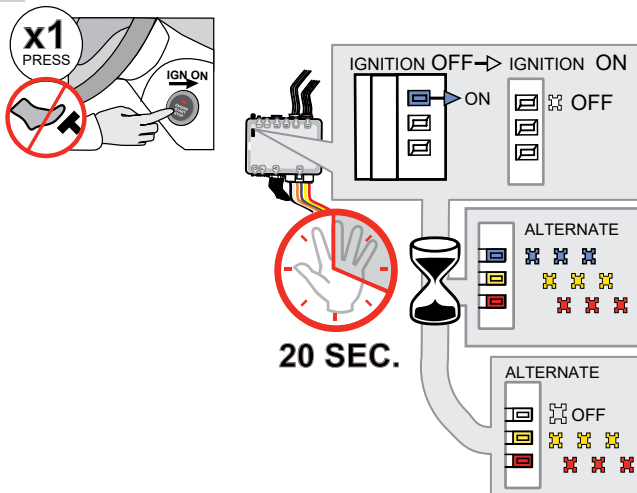

Do not press the brake pedal.
Press the Push-to-Start button once to turn on the ignition.

 
↳ The BLUE LED will turn OFF.

↳ The BLUE, YELLOW and RED LEDs will alternate.

Wait, at least 20 seconds, do not disconnect the modules or turn off the ignition.


↳ The RED and YELLOW LEDs will alternate.

Make sure that the DELs are flashing RED and YELLOW before continuing programming.



KEY BYPASS PROGRAMMING PROCEDURE 2/2


5

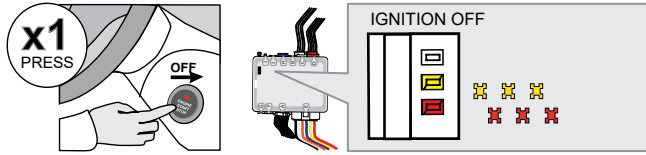

Press the Push-to-Start button once to turn off the ignition.


The RED and YELLOW LEDs alternate.

6

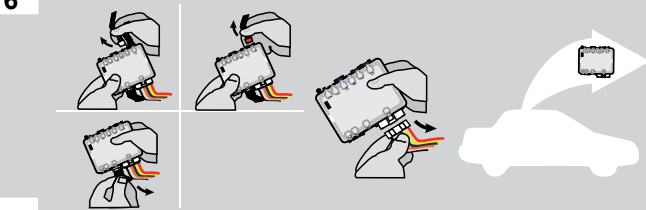

Disconnect all connectors and after the 6-Pin (Main-Harness) or the 4-Pin Data-link connector.


7

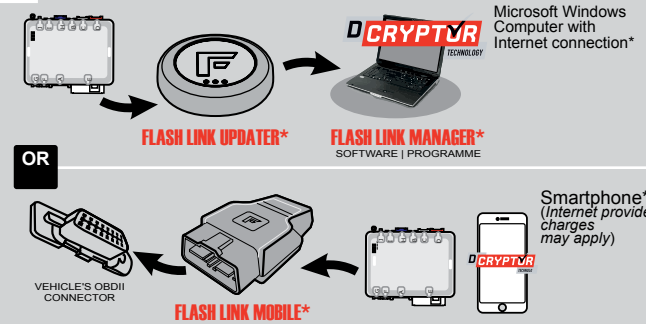


Use the tool: FLASH LINK UPDATER or FLASH LINK MOBILE to visit the DCryptor menu.

*Parts required (not included)

8

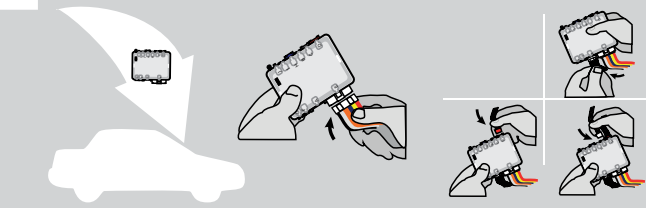


AFTER DCRYPTOR PROGRAMMING COMPLETED Go back to the vehicle and reconnect the 6-Pin (Main-Harness) or the 4-pins (Data-Link) connector and after all the remaining connector.

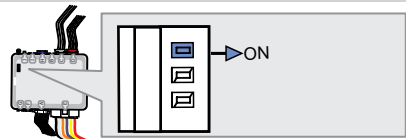

The BLUE LED will turn ON.

La DEL BLEUE s'allume solide

9

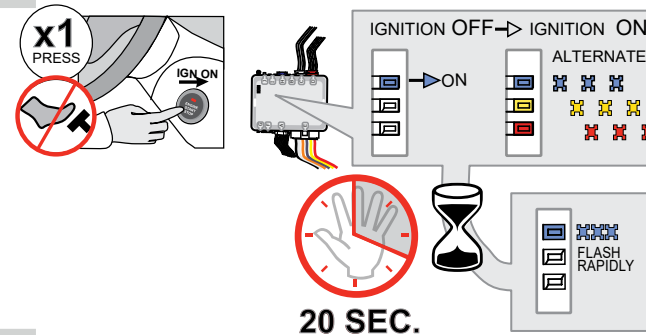


Do not press the brake pedal. Press the Push-to-Start button once to turn on the ignition.

The BLUE, YELLOW and RED LEDs will alternate.

Wait, at least 20 seconds, do not disconnect the modules or turn off the ignition.

The BLUE LED will flash rapidly.

10

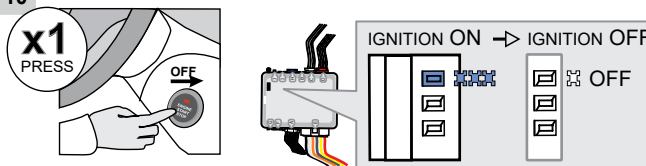

Press the Push-to-Start button once to turn off the ignition.

The BLUE will turn OFF.




The module is now programmed.

REMOTE STARTER PROGRAMMING PROCEDURE



REFER TO THE **QUICK INSTALL GUIDE** INCLUDED WITH THE MODULE FOR THE REMOTE STARTER PROGRAMMING.

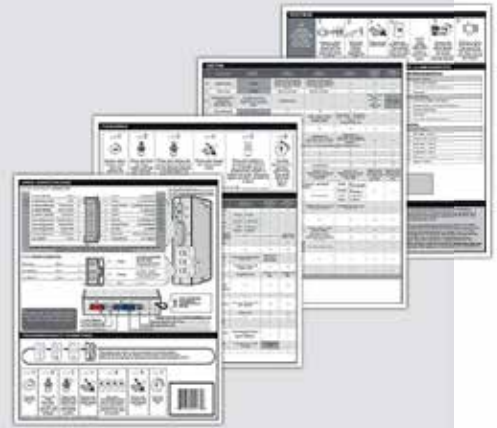

REMOTE STARTER FUNCTIONALITY



All doors must be closed.



 
Remote start the vehicle.



Unlock the doors with either:

- The OEM remote
- The remote-starter remote

Or the proximity remote



Enter the vehicle with the SMART-KEY.



DO NOT PRESS THE BRAKE PEDAL.

Press and release the Push-to-Start button once.



Press the brake pedal. The vehicle can now be put in to gear and driven.

If the Smart-Key is not detected the vehicle will shut down.

REGULAR & THAR-FOR3 INSTALLATION

ADDENDUM - SUGGESTED WIRING CONFIGURATION


ONLY COMPATIBLE WITH AUTOMATIC TRANSMISSION VEHICLES.

VEHICLE	YEARS	Vehicle functions supported in this diagram (functional if equipped)										
		T-Harness available (sold separately)	Lock	Unlock	Arm	Disarm	Parking Lights	Tachometer	Door Status	Hood Status*	Hand-Brake Status	Foot-Brake Status
FORD												
E-350	2021	•	•	•	•	•	•	•	•	•	•	•
E-450	2021	•	•	•	•	•	•	•	•	•	•	•

BYPASS FIRMWARE VERSION

71.[53]

MINIMUM

To add the firmware version and the options, use the **FLASH LINK UPDATER** or **FLASH LINK MOBILE** tool, sold separately.

	UNIT OPTION	DESCRIPTION
	A3	<div style="background-color: red; color: white; padding: 5px; display: inline-block; font-weight: bold;">OFF</div>
IF THE VEHICLE IS NOT EQUIPPED WITH FUNCTIONAL HOOD PIN:		<div style="background-color: red; color: white; padding: 5px; display: inline-block; font-weight: bold;">OFF</div>

Parts required (Not included)		PAGE
WIRE TO WIRE DIAGRAM		
1x	Relay (Parking lights)	Page 3
THARNESH DIAGRAM		
1x	THAR-FOR3	Page 4
1x	Relay (Parking lights)	

MANDATORY INSTALL
*** HOOD PIN**

HOOD STATUS : THE HOOD PIN SWITCH (INCLUDED) MUST BE INSTALLED IF THE VEHICLE CAN BE REMOTE STARTED WITH THE HOOD OPEN, SET FUNCTION A11 TO OFF.

A11
OFF
SECURITY STICKER


Included


Notice: the installation of safety elements are mandatory. The hood pin and the sticker are essential security elements and must be installed.

THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.

DESCRIPTION






② Parking Lights switch

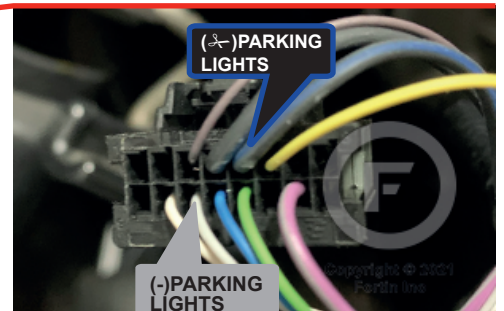


③ Gateway module, Behind OBD-II connector

④ Passenger kick panel


① Ignition switch

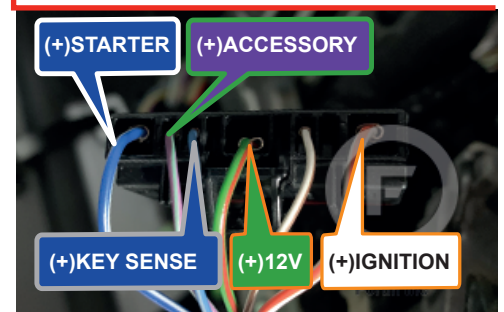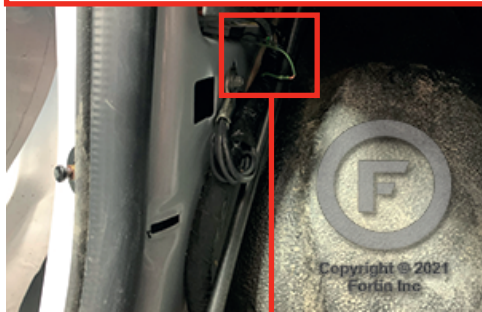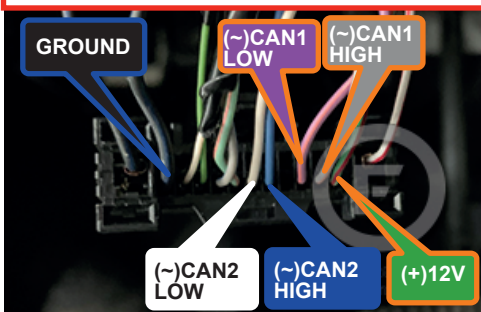

AUTOMATIC TRANSMISSION WIRING CONNECTION

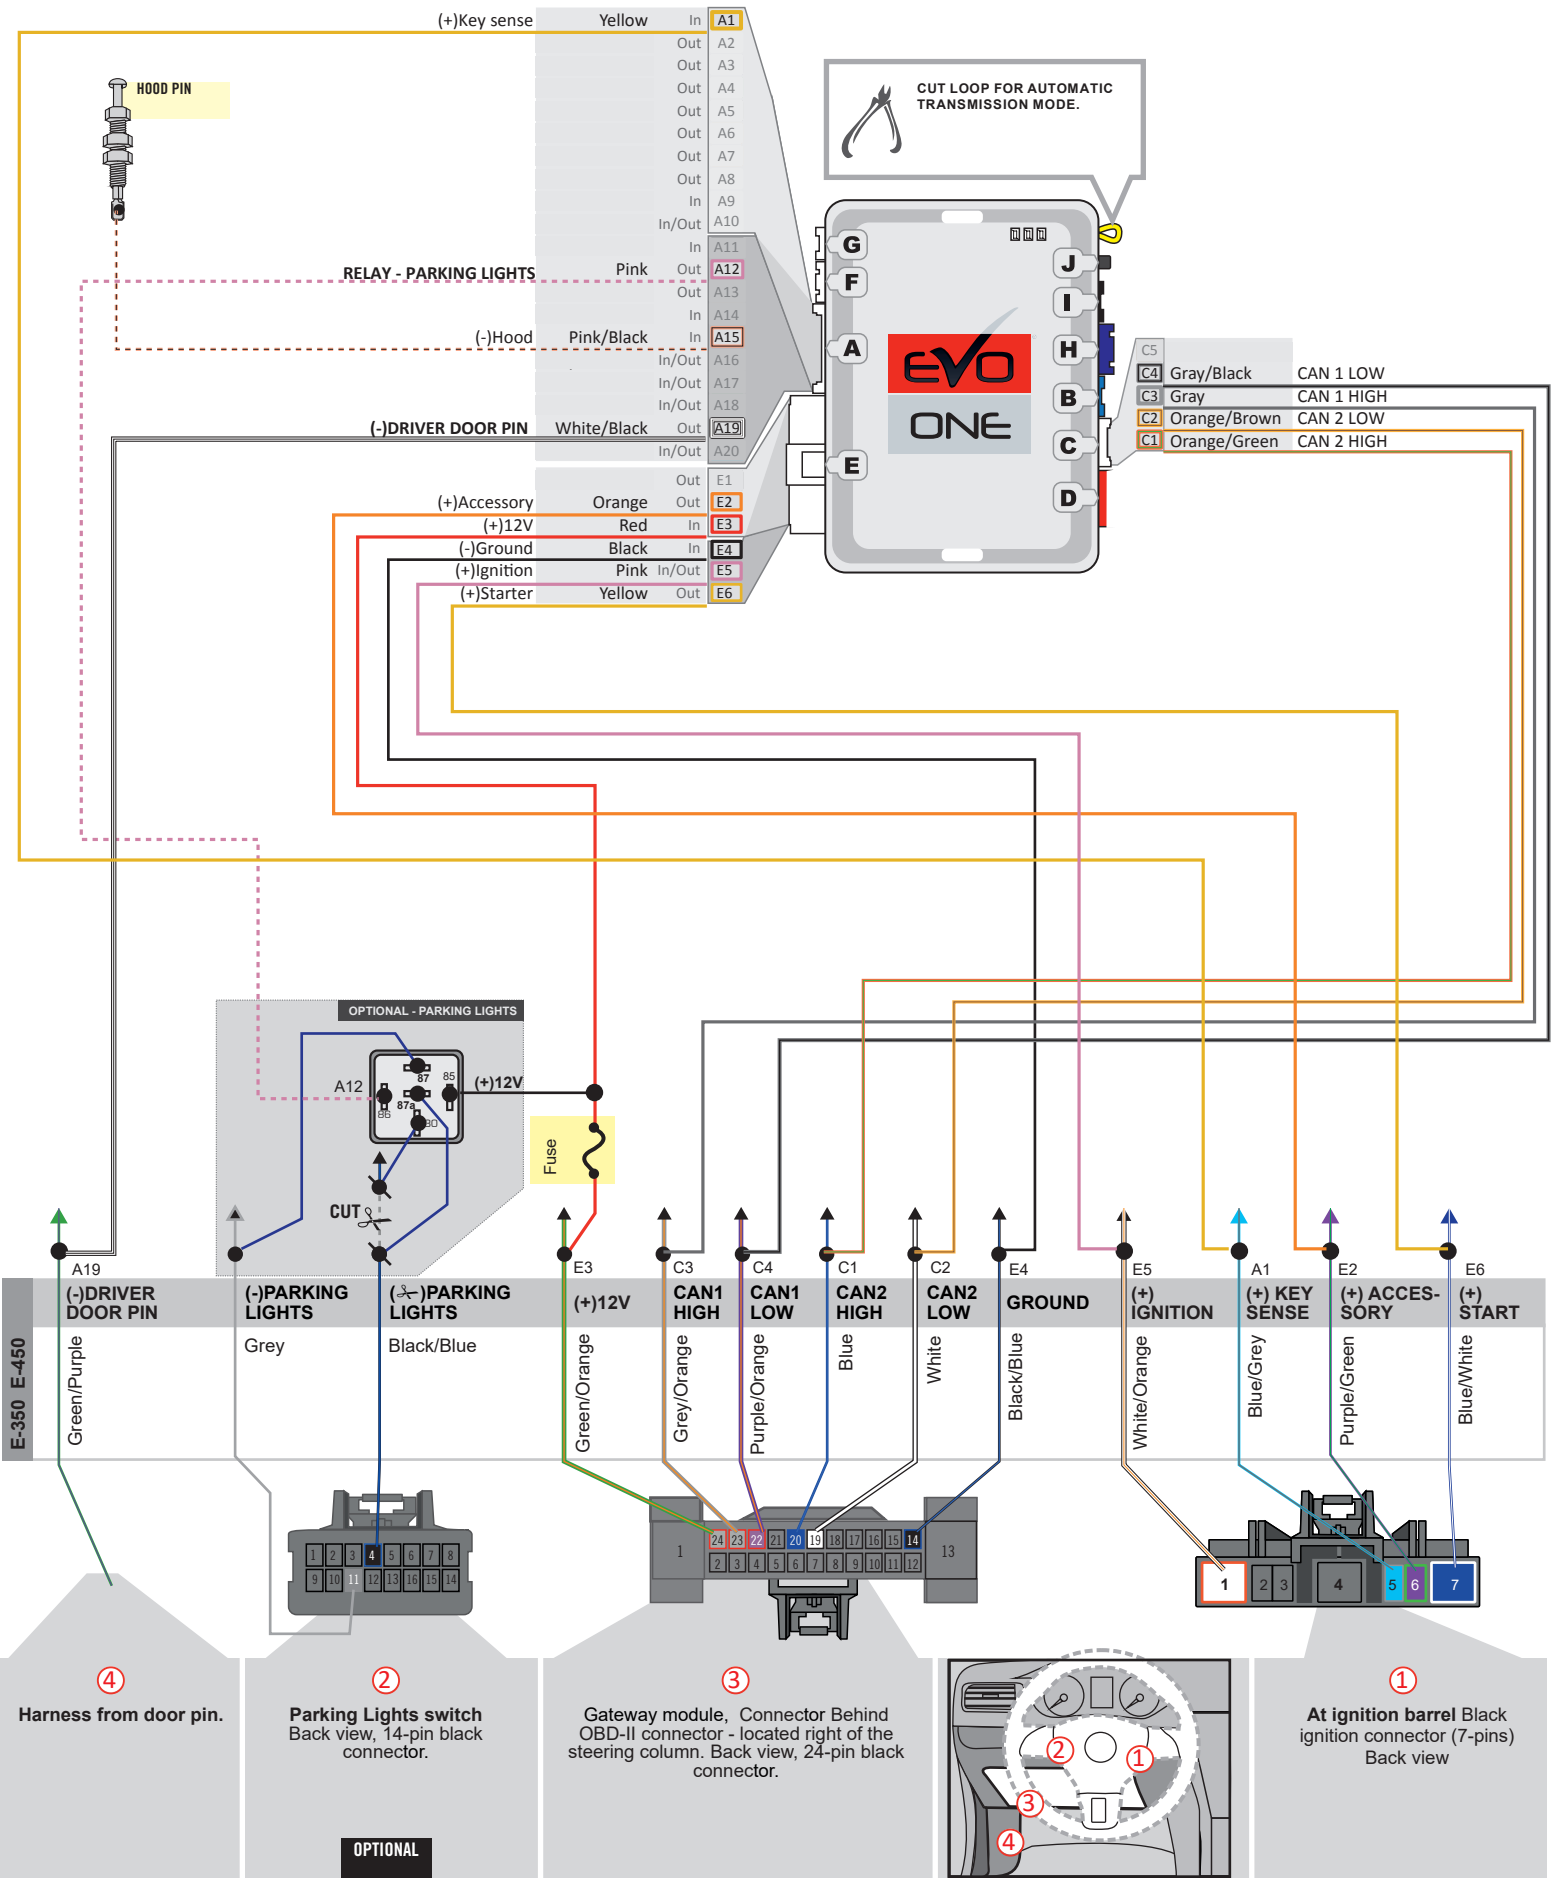


THAR-FOR3 | T-HARNESS - AUTOMATIC TRANSMISSION

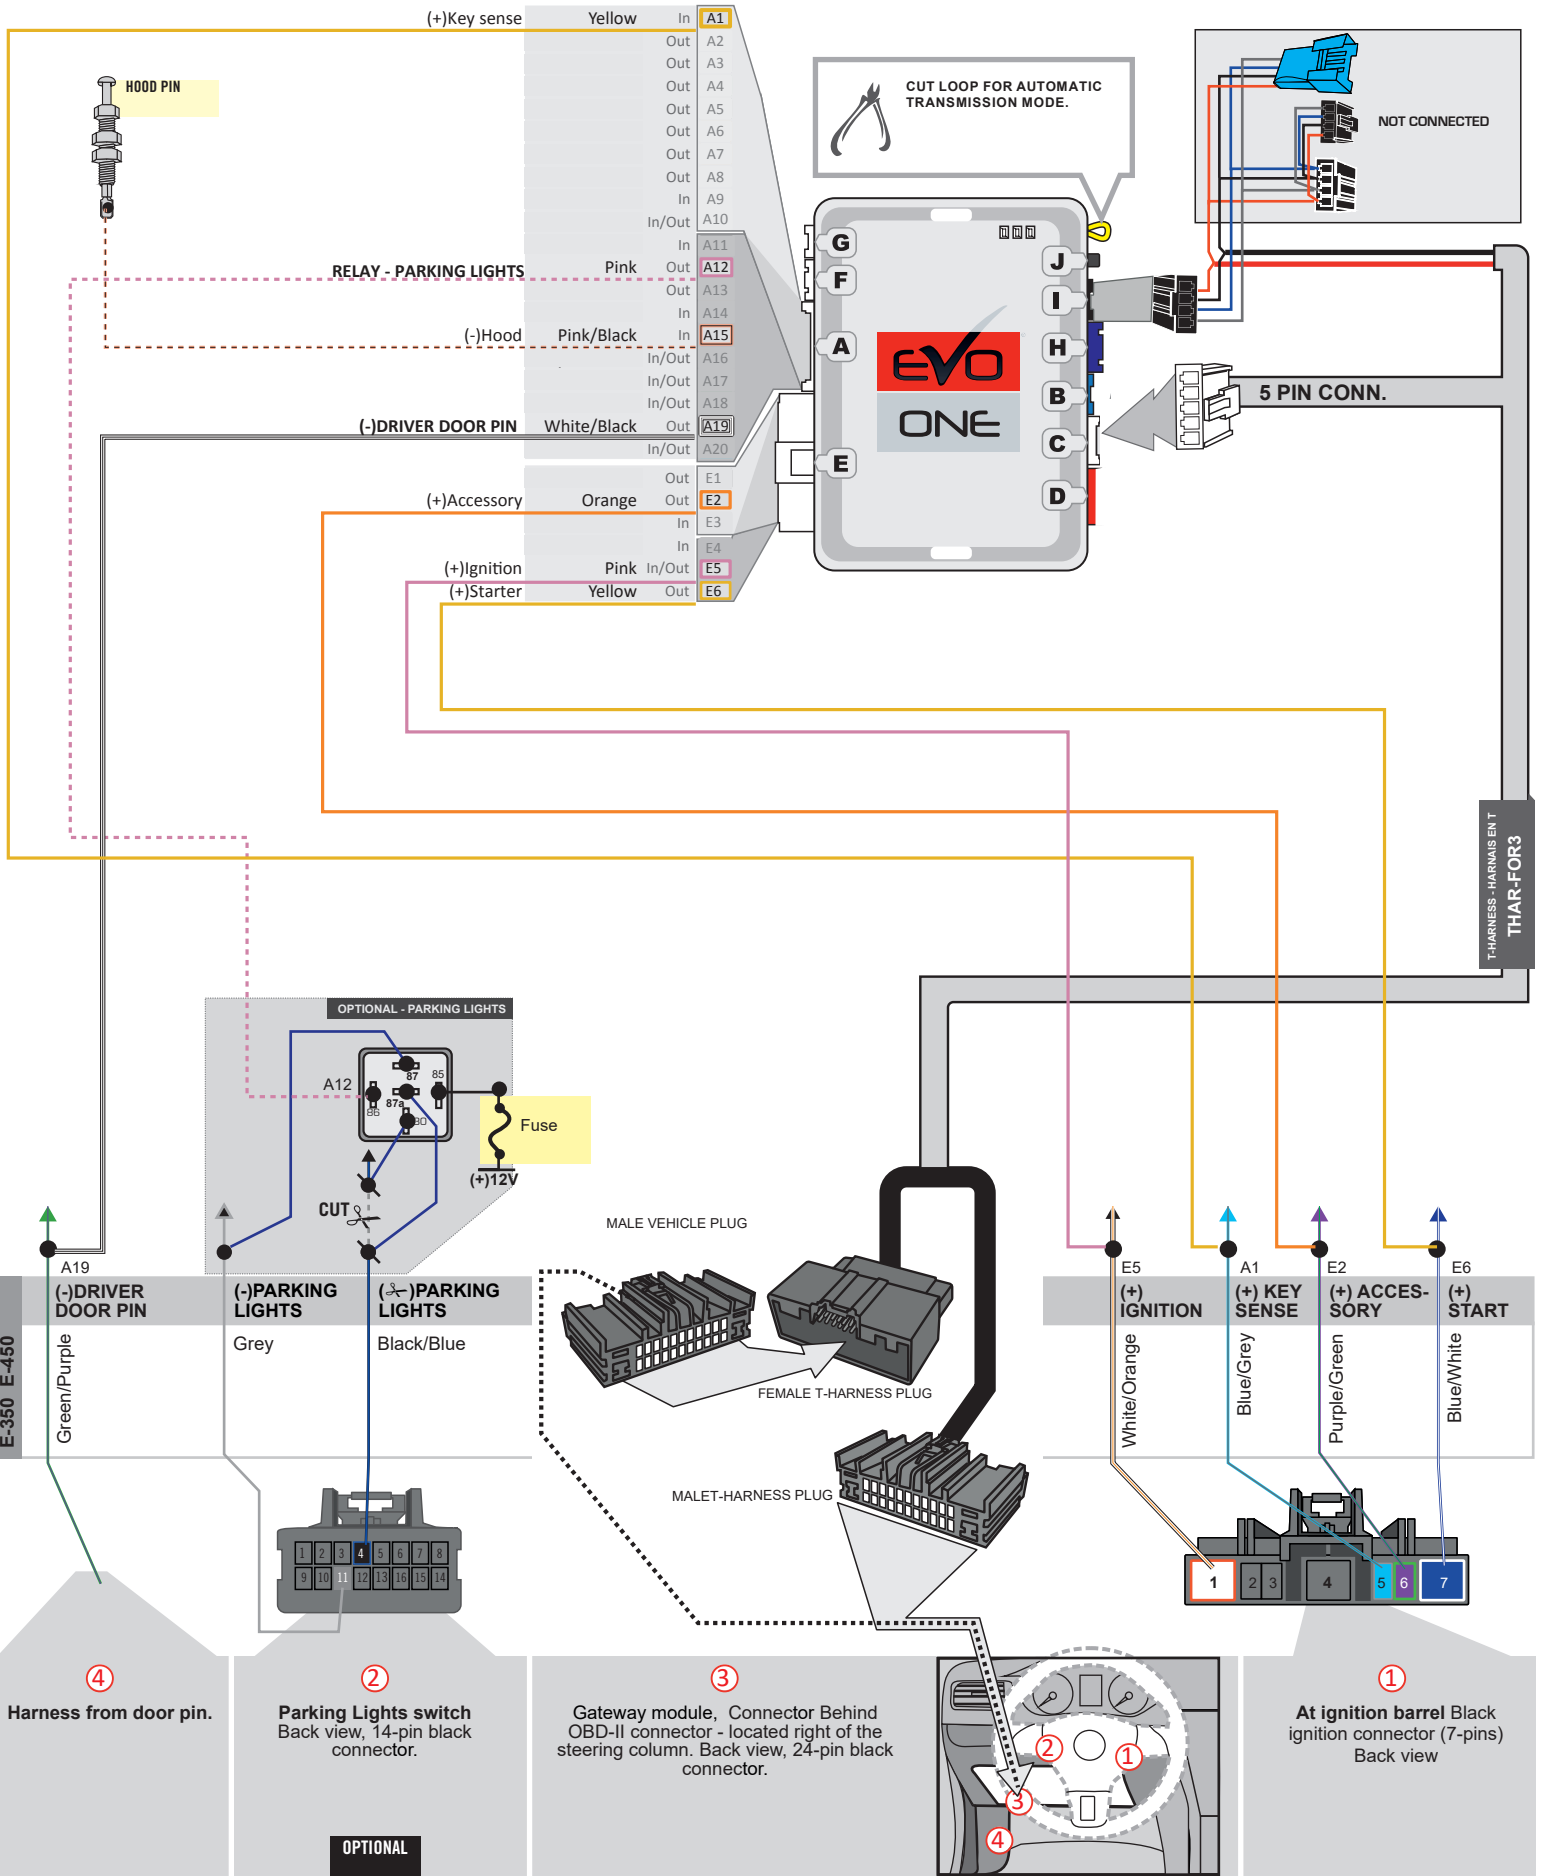

KEY BYPASS PROGRAMMING PROCEDURE

1

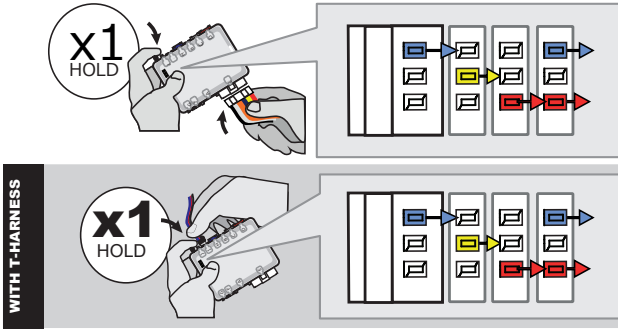


Press and hold the programming button:
Insert the 6-Pin Main connector.

Press and hold the programming button:
Connect the 4-PIN Data-link harness (Black connector).


↳ The LEDs will alternate between BLUE, RED, YELLOW & BLUE/RED flashes.

2

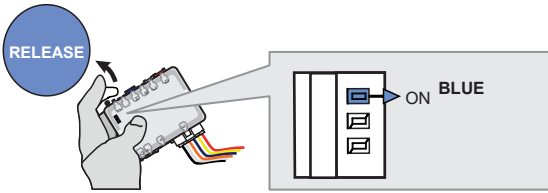


Release the programming button when the BLUE LED is ON.

 If the BLUE LED is not ON solid **disconnect** the 6-Pin Main connector and **go back** to step 1.




3

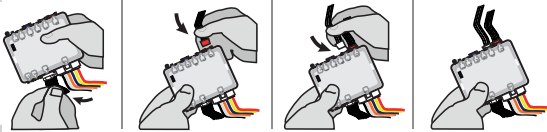

Insert the required remaining connectors.


4

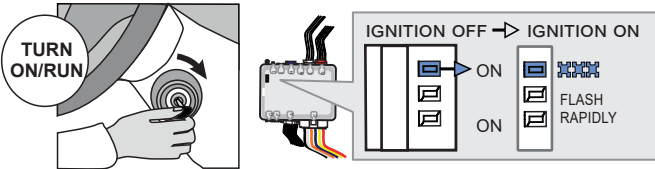

Turn the key to the Ignition ON/RUN position.

↳ The BLUE LED will flash rapidly.

5

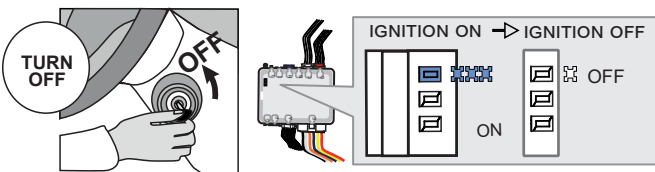

Turn the key to the OFF position.

↳ The BLUE LED will turn off.




The module is now programmed.

REMOTE STARTER PROGRAMMING PROCEDURE



REFER TO THE **QUICK INSTALL GUIDE** INCLUDED WITH THE MODULE FOR THE REMOTE STARTER PROGRAMMING.

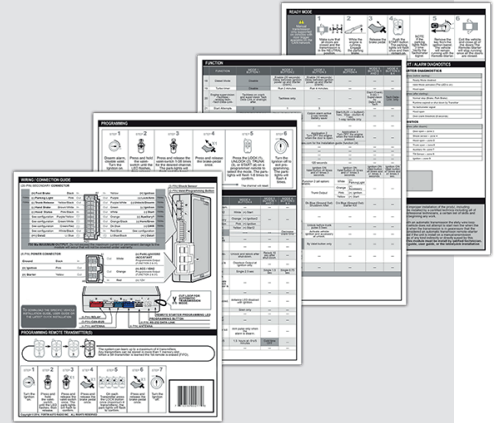

REMOTE STARTER FUNCTIONALITY



All doors must be closed.



Remote start the vehicle.



Unlock the doors with the remote-starter remote or the OEM remote.



Insert and Turn the key to the Ignition ON/RUN position.



Press the brake pedal.



The vehicle can now be put in to gear and driven.

REGULAR & THAR-FOR3 INSTALLATION

ADDENDUM - SUGGESTED WIRING CONFIGURATION



ONLY COMPATIBLE WITH AUTOMATIC TRANSMISSION VEHICLES.



VEHICLE


YEARS

Vehicle functions supported in this diagram (functional if equipped)

Immobilizer bypass	T-Harness available (sold separately)	Lock	Unlock	Arm	Disarm	Heated Seats**	Rear Defrost**	RAP Disable	Parking Lights****	Tachometer	Door Status	Trunk Status	Hood Status*	Hand-Brake Status	Foot-Brake Status	Active OEM Remote Start	R.S. OEM remote Stand Alone compatible
--------------------	---------------------------------------	------	--------	-----	--------	----------------	----------------	-------------	--------------------	------------	-------------	--------------	--------------	-------------------	-------------------	-------------------------	--

LINCOLN

Aviator	Push-to-Start 2020	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
---------	--------------------	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

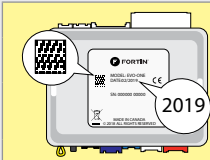

COMPATIBLE MODULE REQUIRED:

QR CODE ON THE LABEL MANUFACTURED AFTER: 2019

FIRMWARE VERSION

58.[02]
MINIMUM

To add the firmware version and the options, use the **FLASH LINK UPDATER** or **FLASH LINK MOBILE** tool, sold separately.



Program bypass option:

UNIT OPTION OPTION UNITE

DESCRIPTION

C1

OEM Remote status (Lock/Unlock) monitoring

D6

Push-to-Start

IF THE VEHICLE IS NOT EQUIPPED WITH FUNCTIONAL HOOD PIN:

A11

OFF

Hood trigger (Output Status).



Program remote starter option for R.S. OEM REMOTE STAND ALONE:

FUNCTION

MODE

DESCRIPTION

38

2

Enable Press 3x Lock to remote start with the OEM remote.

NOTES

The vehicles OEM remote and SmartKey are still operable during remote start.

**Heated seats The heated seats and rear defrost activate automatically when it cold.

***Parking Lights The parking Lights at remote start only.

MANDATORY INSTALL

* HOOD PIN



HOOD STATUS: THE HOOD PIN SWITCH (INCLUDED) MUST BE INSTALLED IF THE VEHICLE CAN BE REMOTE STARTED WITH THE HOOD OPEN, SET FUNCTION A11 TO OFF.

A11

OFF

SECURITY STICKER



Included

Notice: the installation of safety elements are mandatory. The hood pin and the sticker are essential security elements and must be installed.

THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.

DESCRIPTION |

	Parts required (Not included)	PAGE
--	-------------------------------	------


WIRE TO WIRE DIAGRAM

		Page 3
--	--	--------



THARNESS DIAGRAM

THARNESS THAR-FOR3	1x THAR-FOR3	1x THAR-FOR3	Page 4
--------------------	--------------	--------------	--------


① Gateway module, located at dash board driver's side,

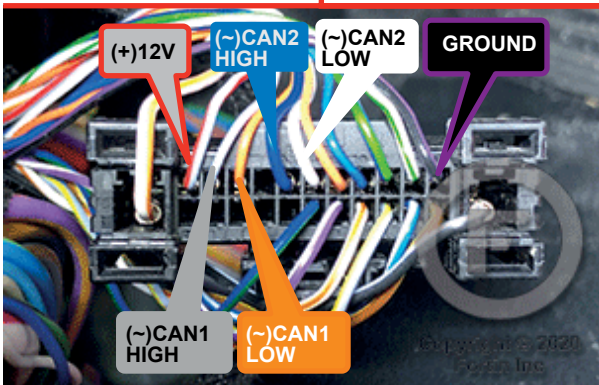




② Fuse box

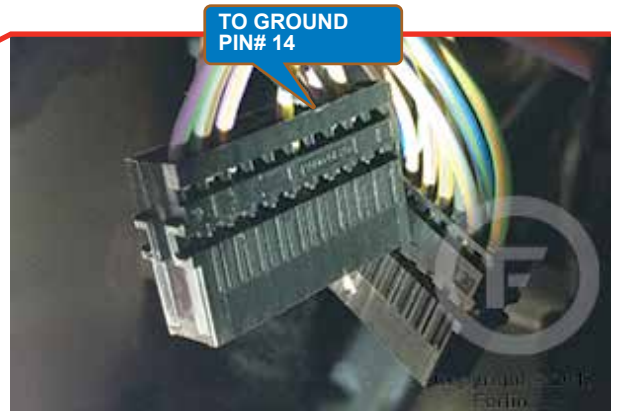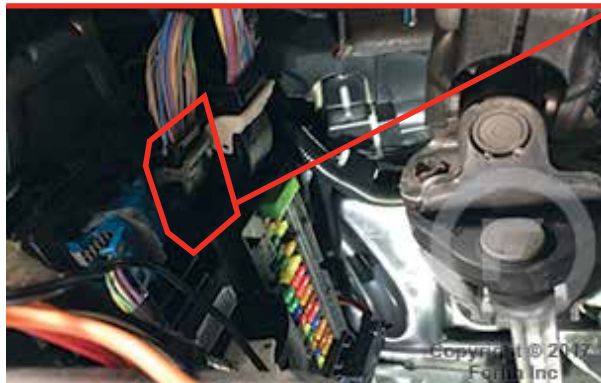

AUTOMATIC TRANSMISSION WIRING CONNECTION |

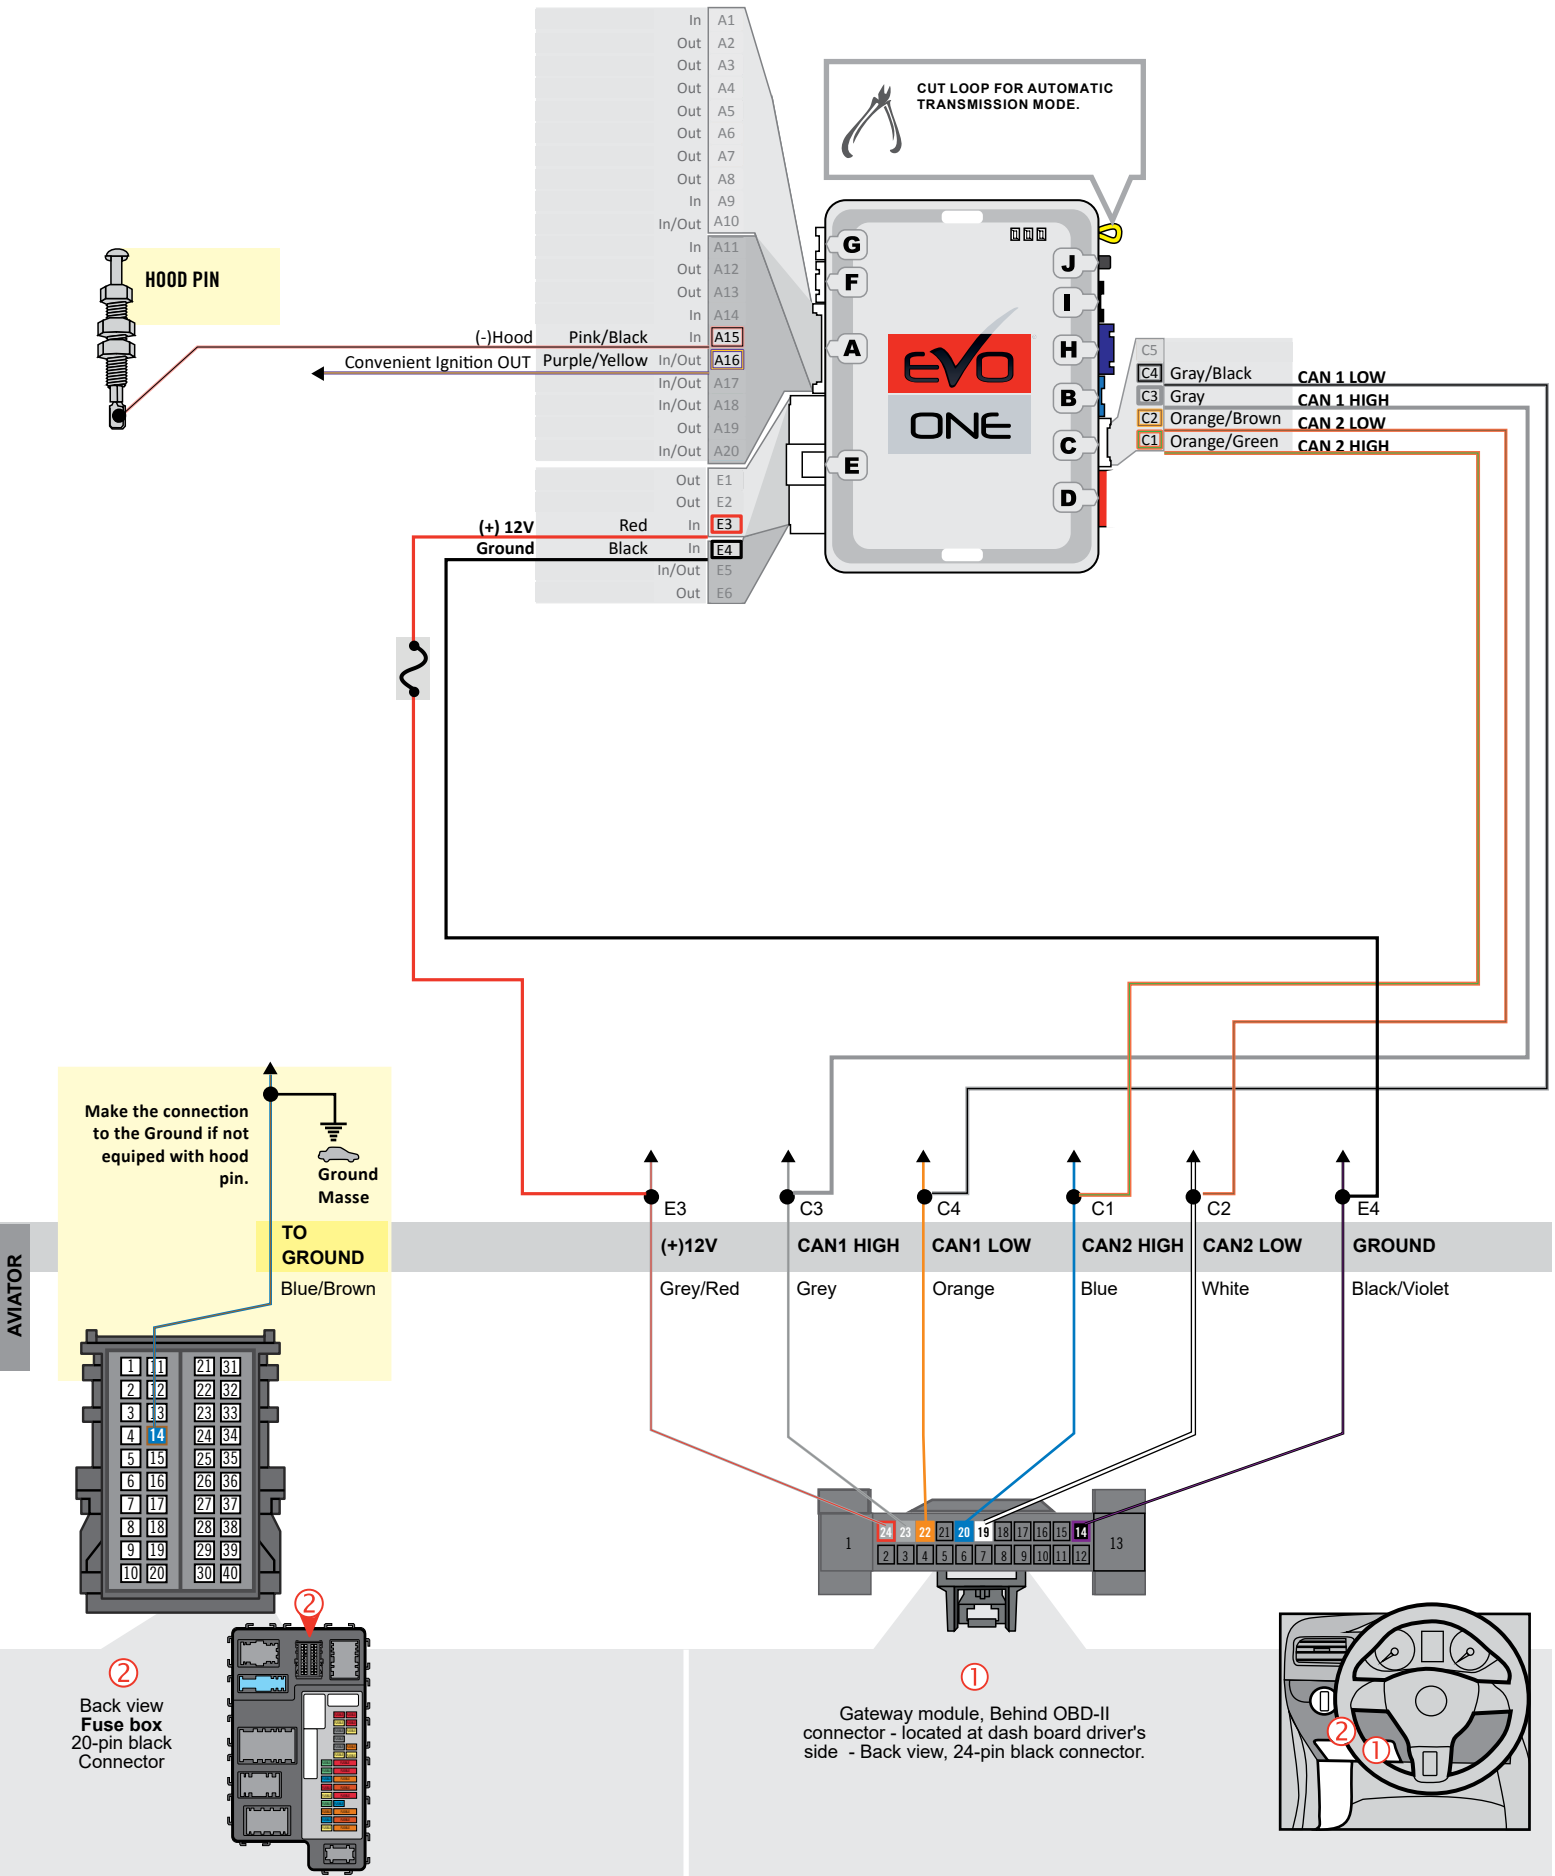

THAR-FOR3 | T-HARNESS - AUTOMATIC TRANSMISSION |

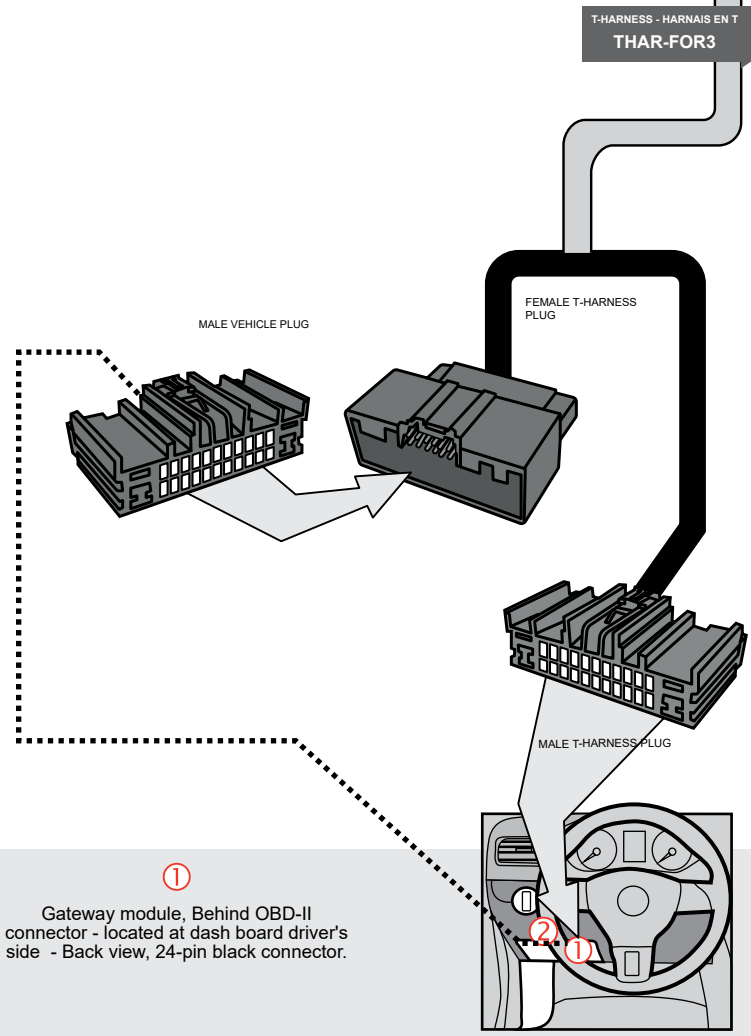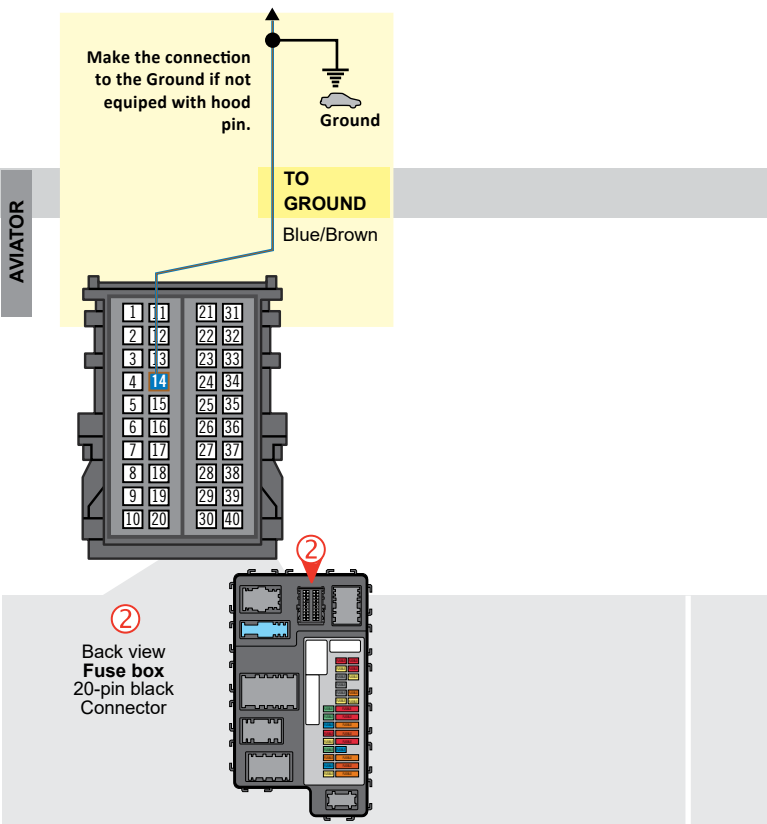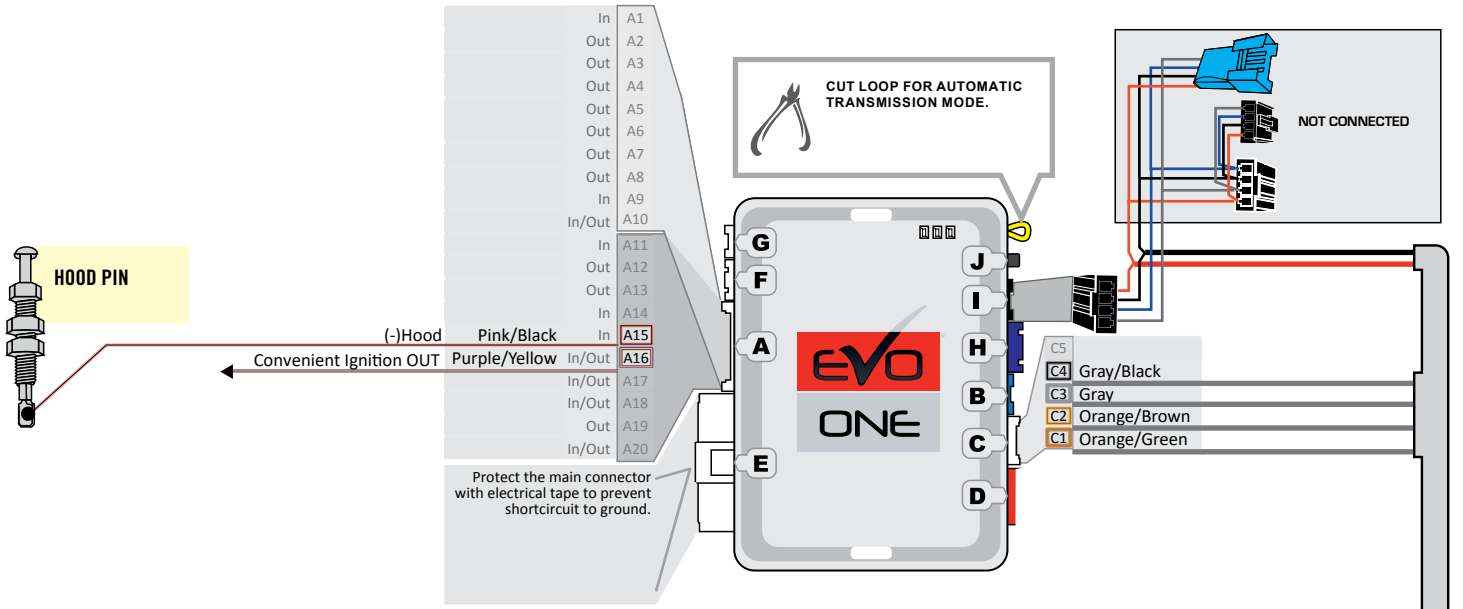

DCRYPTOR PROGRAMMING PROCEDURE |



Parts required (not included)


- 1x **FLASH LINK UPDATER,**
- 1x **FLASH LINK MANAGER**
SOFTWARE | PROGRAMME
- 1x Microsoft Windows Computer with Internet connection

OR

- 1x **FLASH LINK MOBILE**
- 1x **FLASH LINK MOBILE APP**
- 1x Smartphone Android or iOS with Internet connection
(Internet provider charges may apply)


BEFORE PROGRAMMING SET THE UNIT OPTIONS AND SAVE.

1

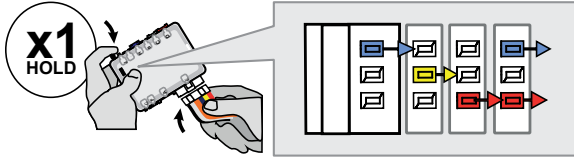

Press and hold the programming button:
Insert the 6-Pin Main connector.


WITH T-HARNES

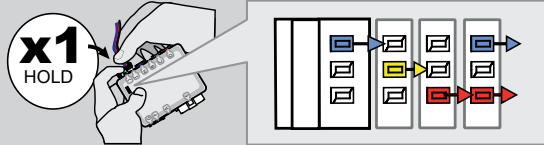

Press and hold the programming button:
Connect the 4-PIN Data-link harness (Black connector).


↳ The LEDs will alternate between BLUE, RED, YELLOW & BLUE/RED flashes.

2

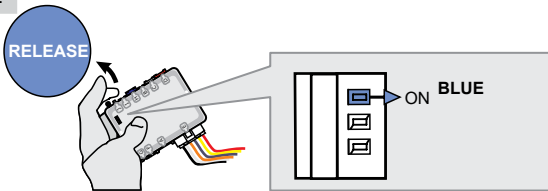


Release the programming button when the BLUE LED is ON.

 If the BLUE LED is not ON solid disconnect the 6-Pin Main connector and go back to step 1.




WITH T-HARNES AVEC HARNAIS EN T

 If the LED is not solid BLUE disconnect the 4 Pin connector (Data-Link) and go back to step 1.




3

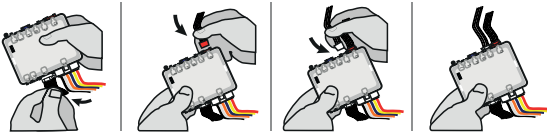

Insert the required remaining connectors.

4

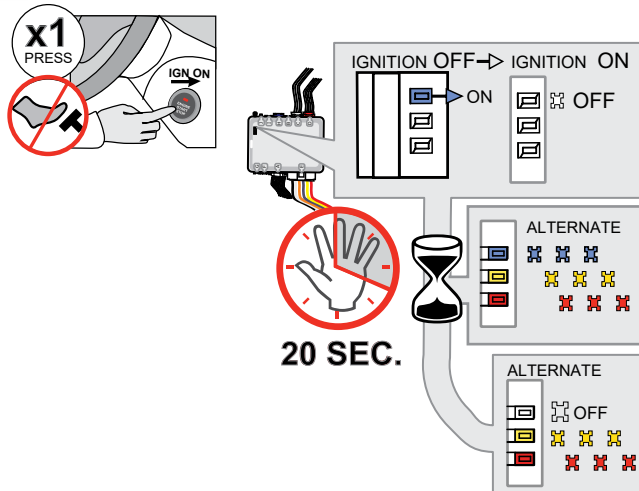

Do not press the brake pedal. **Press** the Push-to-Start button once to turn on the ignition.

 
↳ The BLUE LED will turn OFF.

↳ The BLUE, YELLOW and RED LEDs will alternated.

Wait, at least 20 seconds, do not disconnect the modules or turn off the ignition.


↳ The RED and YELLOW LEDs will alternated.

Make sure that the DELs are flashing RED and YELLOW before continuing programming.



KEY BYPASS PROGRAMMING PROCEDURE 2/2 |


5

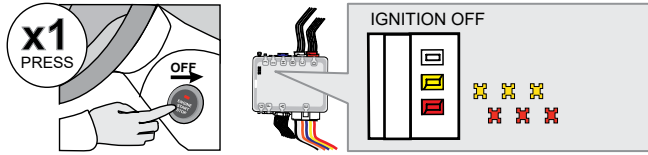

Press the Push-to-Start button once to turn off the ignition.


↳ The RED and YELLOW LEDs alternate.

6

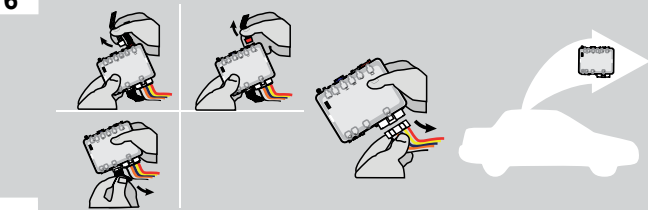

Disconnect all connectors and after the 6-Pin (Main-Harness) or the 4-Pin Data-link connector.


7

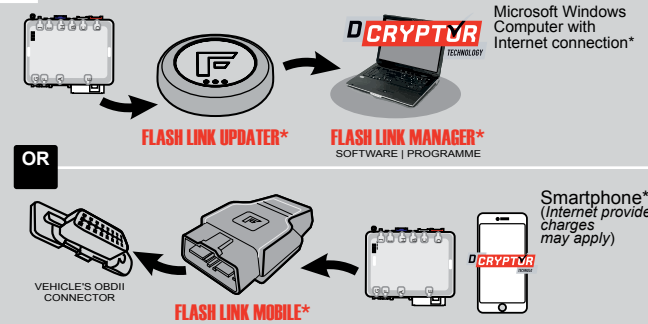


Use the tool: FLASH LINK UPDATER or FLASH LINK MOBILE to visit the DCryptor menu.

*Parts required (not included)

8

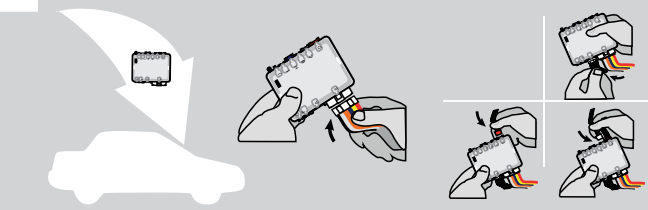


AFTER DCRYPTOR PROGRAMMING COMPLETED Go back to the vehicle and reconnect the 6-Pin (Main-Harness) or the 4-pins (Data-Link) connector and after all the remaining connector.

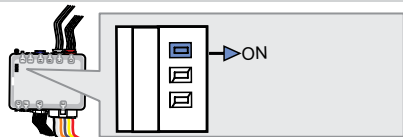

↳ The BLUE LED will turn ON.

9

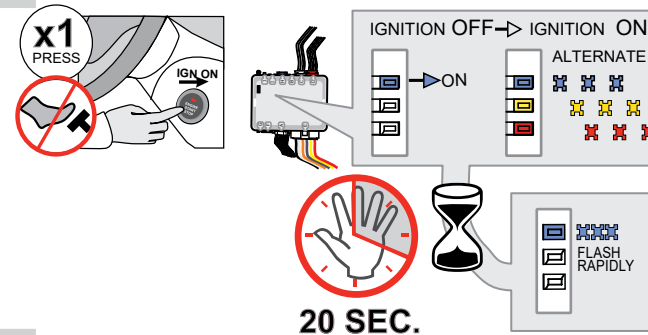


Do not press the brake pedal. Press the Push-to-Start button once to turn on the ignition.

↳ The BLUE, YELLOW and RED LEDs will alternate.

Wait, at least 20 seconds, do not disconnect the modules or turn off the ignition.

↳ The BLUE LED will flash rapidly.

10

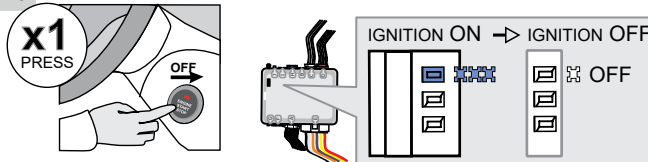

Press the Push-to-Start button once to turn off the ignition.

↳ The BLUE will turn OFF.




The module is now programmed.

REMOTE STARTER PROGRAMMING PROCEDURE |



REFER TO THE **QUICK INSTALL GUIDE** INCLUDED WITH THE MODULE FOR THE REMOTE STARTER PROGRAMMING.

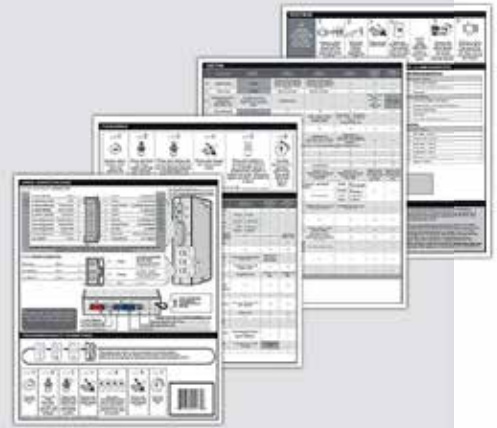

REMOTE STARTER FUNCTIONALITY |



 
All doors must be closed.
Toutes les



Start
Remote start the vehicle.



Unlock the doors with either:
 • The OEM remote
 • The remote-starter remote
 • Or the proximity remote



Enter the vehicle with the SMART-KEY.



DO NOT PRESS THE BRAKE PEDAL.
 Press and release the Push-to-Start button once.




Press the brake pedal. The vehicle can now be put in to gear and driven.
 If the Smart-Key is not detected the vehicle will shut down.

REGULAR & THAR-FOR3 INSTALLATION
ADDENDUM - SUGGESTED WIRING CONFIGURATION

ONLY COMPATIBLE WITH AUTOMATIC TRANSMISSION VEHICLES.

VEHICLE
YEARS
Vehicle functions supported in this diagram (functional if equipped)

Immobilizer bypass	T-Harness available (sold separately)	Lock	Unlock	Arm	Disarm	Heated Seats**	Rear Defrost**	RAP Disable	Parking Lights****	Tachometer	Door Status	Trunk Status	Hood Status*	Hand-Brake Status	Foot-Brake Status	Active OEM Remote Start	R.S. OEM remote Stand Alone compatible
FORD	Edge	2020	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•

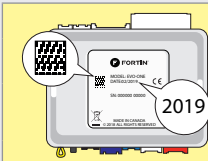
COMPATIBLE MODULE REQUIRED:
QR CODE ON THE LABEL MANUFACTURED AFTER: 2019
FIRMWARE VERSION
58.[02]
MINIMUM

 To add the firmware version and the options, use the **FLASH LINK UPDATER** or **FLASH LINK MOBILE** tool, sold separately.

Program bypass option:
UNIT OPTION
C1
DESCRIPTION

OEM Remote status (Lock/Unlock) monitoring

IF THE VEHICLE IS NOT EQUIPPED WITH FUNCTIONAL HOOD PIN:
A11
OFF

Hood trigger (Output Status).


Program remote starter option for R.S. OEM REMOTE STAND ALONE:
FUNCTION
38
MODE
2
DESCRIPTION

Enable Press 3x Lock to remote start with the OEM remote.

NOTES

The vehicles OEM remote and SmartKey are still operable during remote start.

****Heated seats** The heated seats and rear defrost activate automatically when it cold.
****Rear Defrost**
*****Parking Lights** The parking Lights at remote start only.


The vehicle must be equipped with the OEM remote with the door locks.

MANDATORY INSTALL
*** HOOD PIN**

HOOD STATUS: THE HOOD PIN SWITCH (INCLUDED) MUST BE INSTALLED IF THE VEHICLE CAN BE REMOTE STARTED WITH THE HOOD OPEN, SET FUNCTION A11 TO OFF.

A11
OFF
SECURITY STICKER


Included

Notice: the installation of safety elements are mandatory. The hood pin and the sticker are essential security elements and must be installed.

THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.

DESCRIPTION | DESCRIPTION

	Parts required (Not included)	PAGE
--	-------------------------------	------

WIRE TO WIRE DIAGRAM

		Page 3
--	--	--------



THARNESS DIAGRAM

THARNESS THAR-FOR3	1x THAR-FOR3	Page 4
--------------------	--------------	--------




② Parking Lights switch


① Gateway module, located at right of steering column.

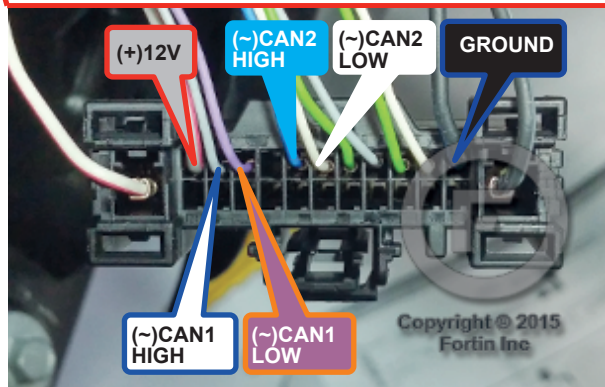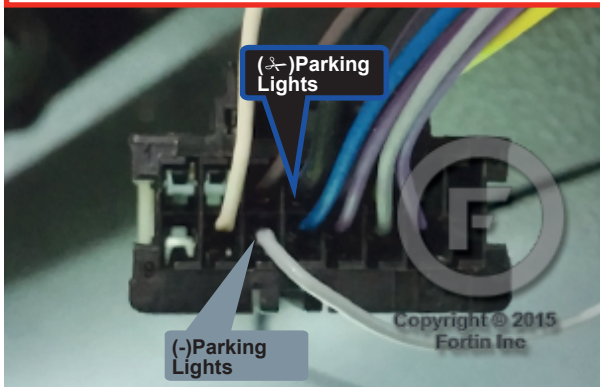


AUTOMATIC TRANSMISSION WIRING CONNECTION |

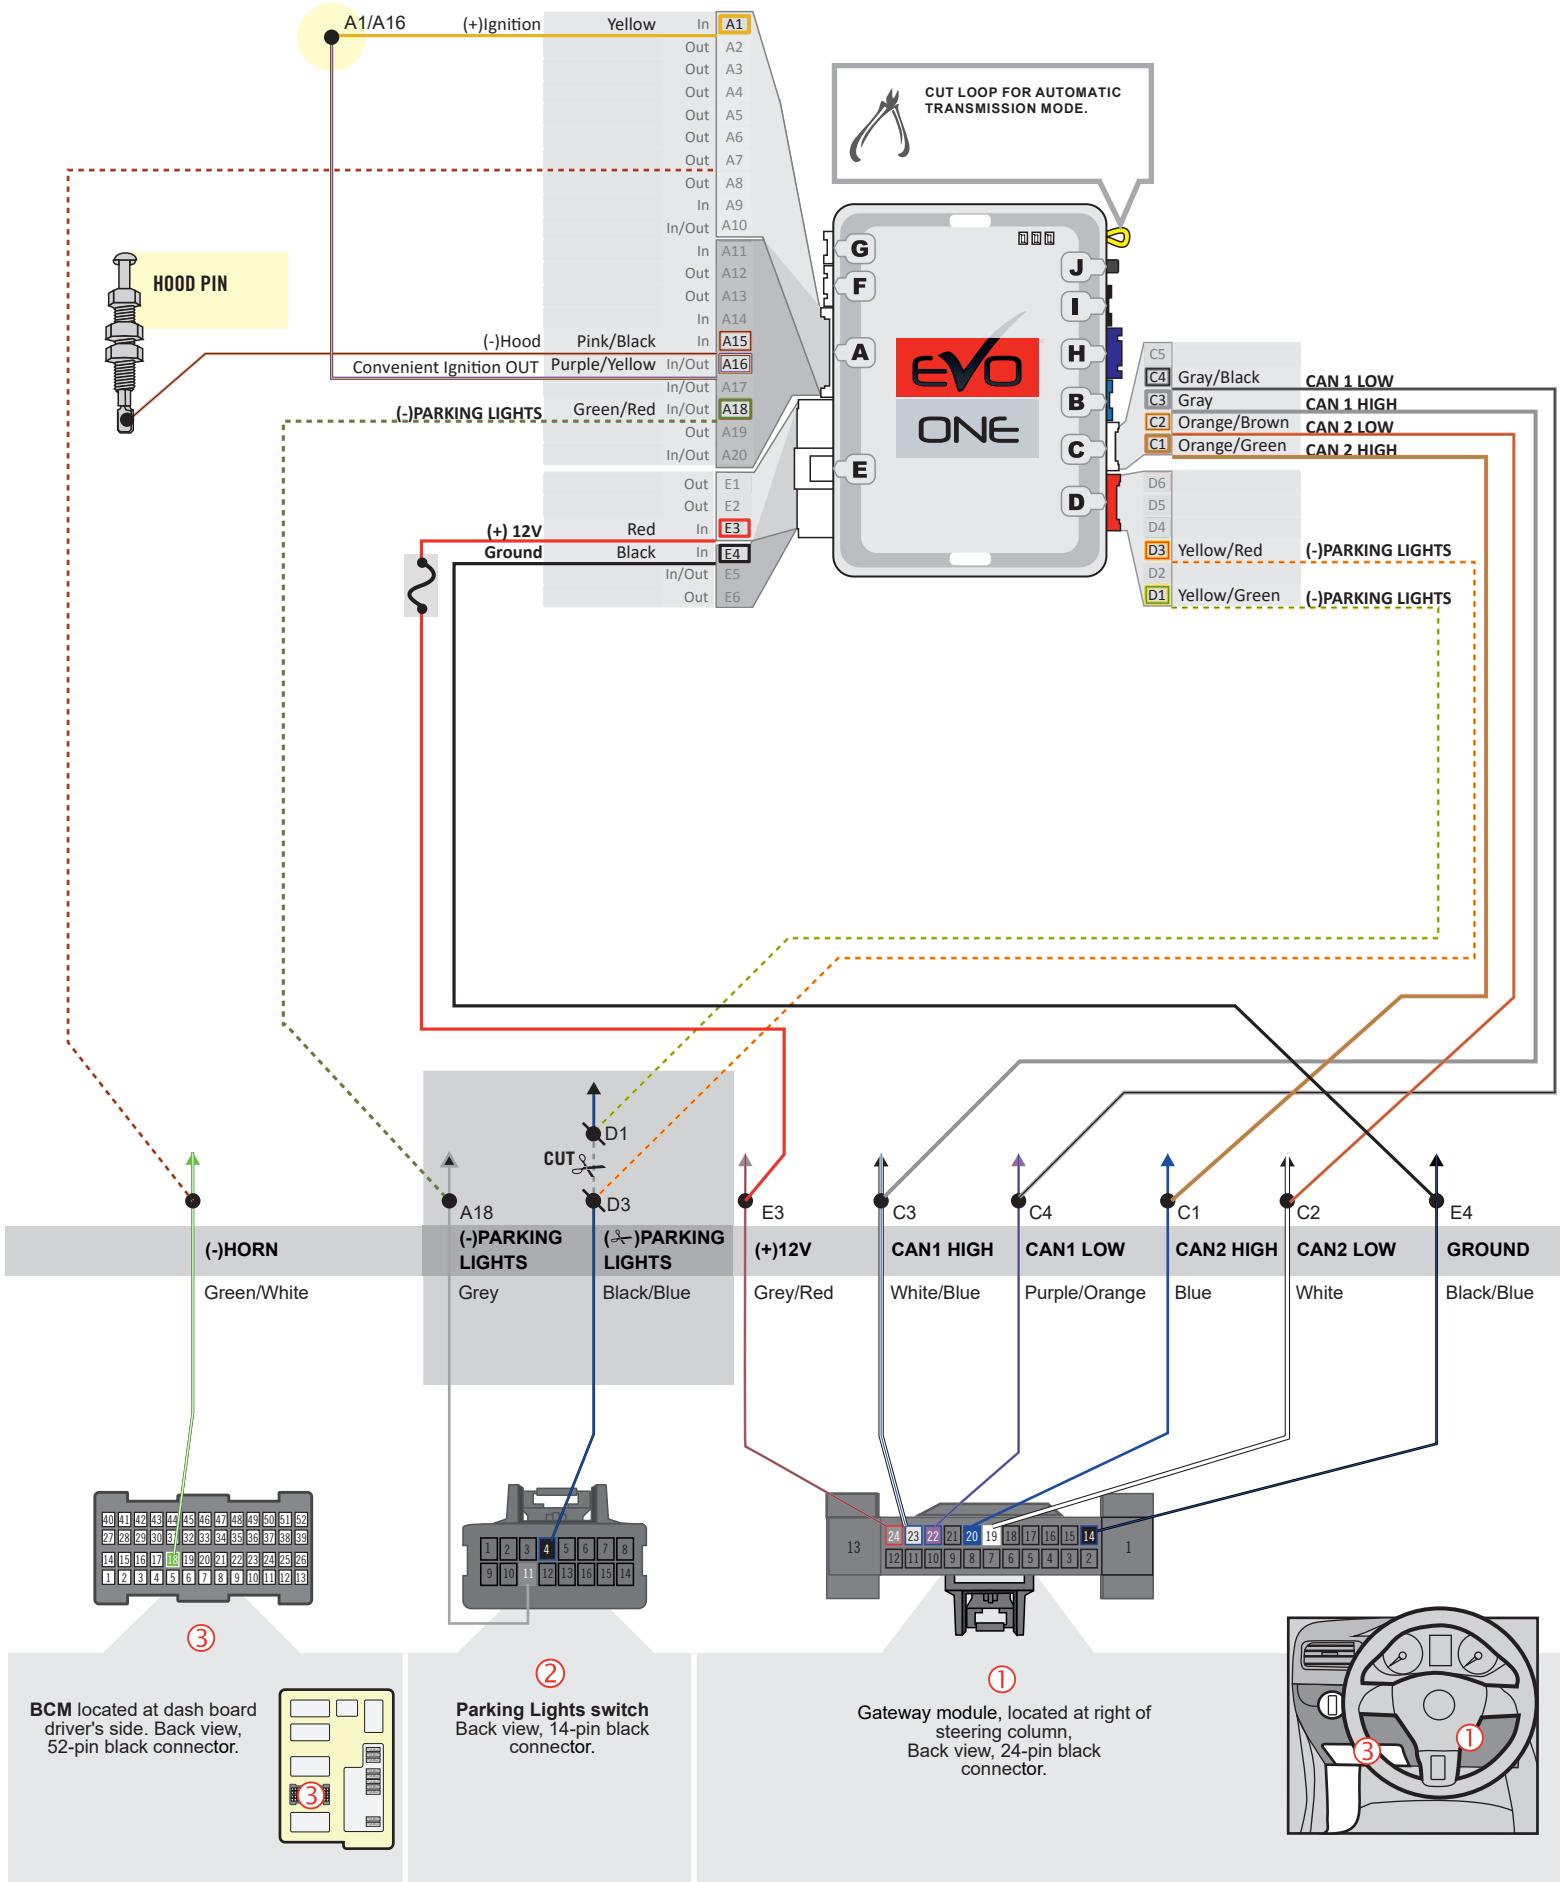


THAR-FOR3 | T-HARNESS - AUTOMATIC TRANSMISSION |

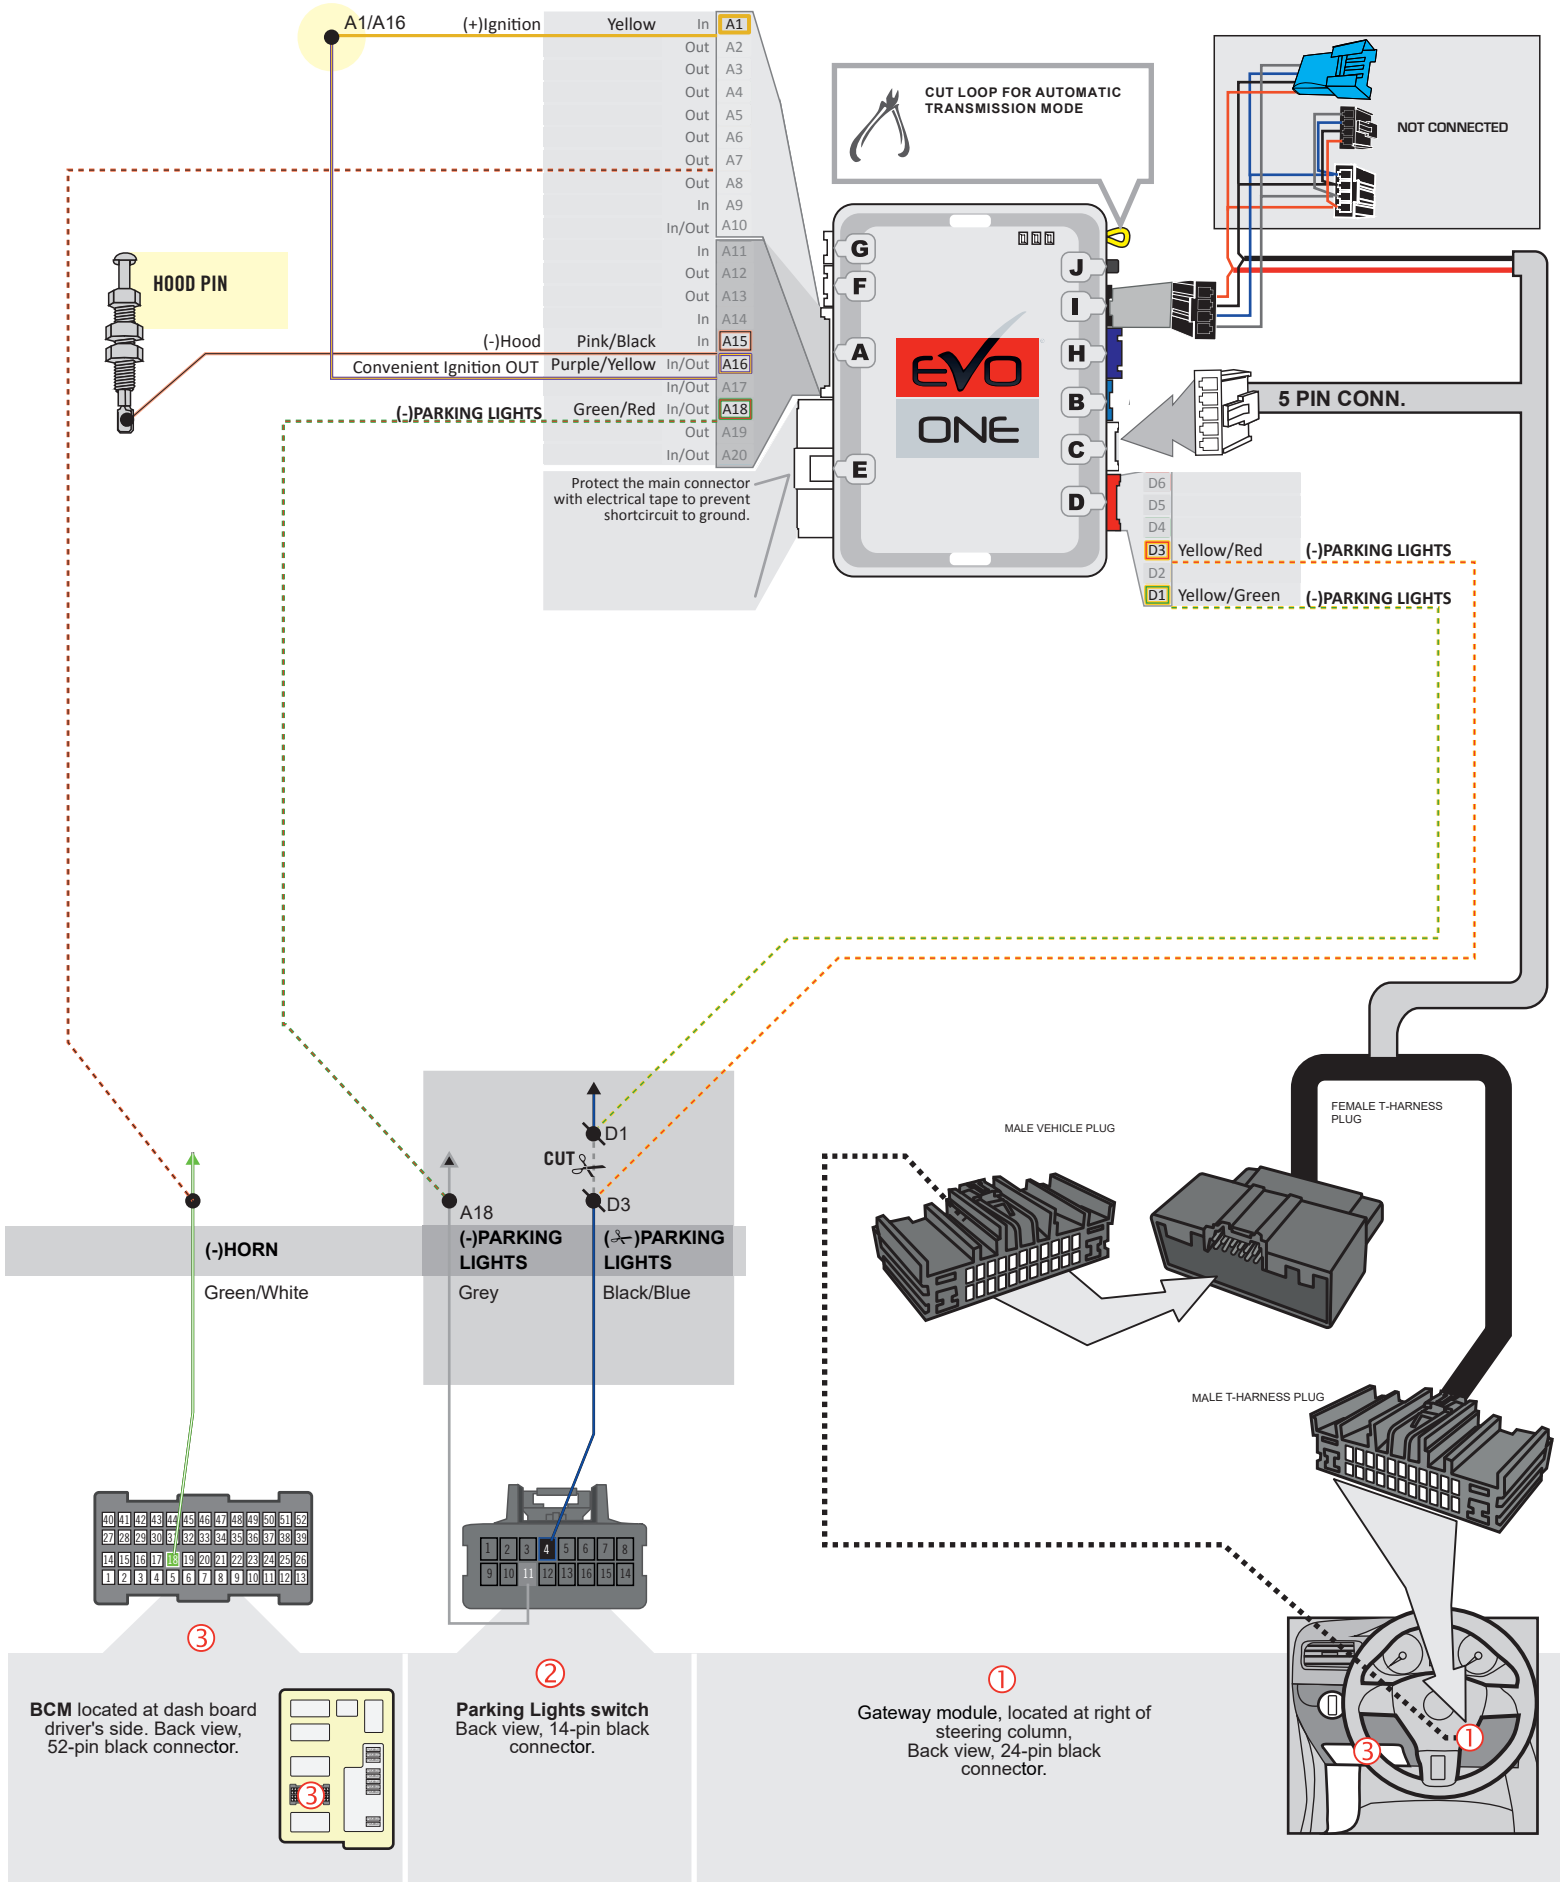


BCM located at dash board driver's side. Back view, 52-pin black connector.

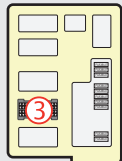

Parking Lights switch Back view, 14-pin black connector.

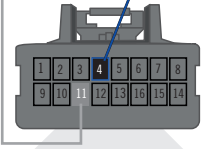

Gateway module, located at right of steering column, Back view, 24-pin black connector.

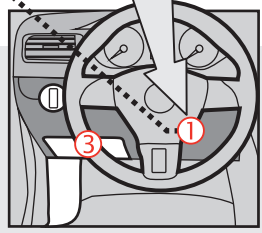

DCRYPTOR PROGRAMMING PROCEDURE |



Parts required (not included)


- 1x FLASH LINK UPDATER, SOFTWARE | PROGRAMME
- 1x FLASH LINK MANAGER
- 1x Microsoft Windows Computer with Internet connection

OR

- 1x FLASH LINK MOBILE
- 1x FLASH LINK MOBILE APP
- Smartphone Android or iOS with Internet connection (Internet provider charges may apply)


BEFORE PROGRAMMING SET THE UNIT OPTIONS AND SAVE.

1

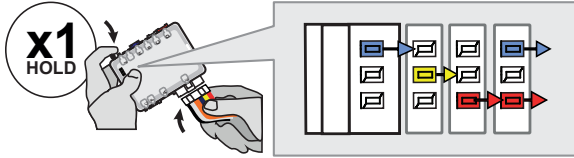

Press and hold the programming button:
Insert the 6-Pin Main connector.


WITH T-HARNESS

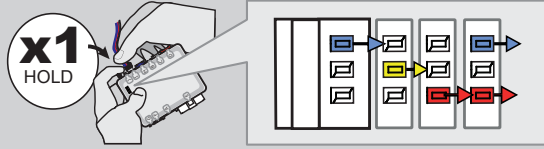

Press and hold the programming button:
Connect the 4-PIN Data-link harness (Black connector).


↳ The LEDs will alternate between BLUE, RED, YELLOW & BLUE/RED flashes.

2

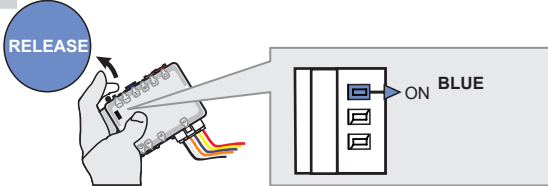


Release the programming button when the BLUE LED is ON.

 If the BLUE LED is not ON solid disconnect the 6-Pin Main connector and go back to step 1.




WITH T-HARNESS

 If the LED is not solid BLUE disconnect the 4 Pin connector (Data-Link) and go back to step 1.




3

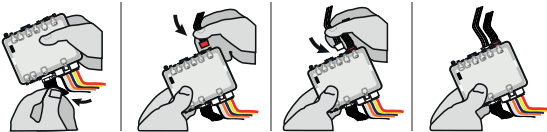

Insert the required remaining connectors.

4

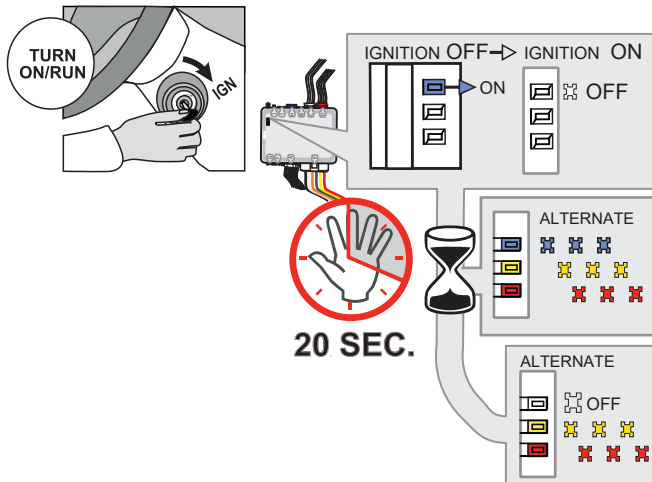

Turn the key to the Ignition ON/RUN position.

 
↳ The BLUE LED will turn OFF.

↳ The BLUE, YELLOW and RED LEDs will alternate.

Wait, at least 20 seconds, do not disconnect the modules or turn off the ignition.


↳ The RED and YELLOW LEDs will alternate.

Make sure that the DELs are flashing RED and YELLOW before continuing programming.



KEY BYPASS PROGRAMMING PROCEDURE 2/2 |


5

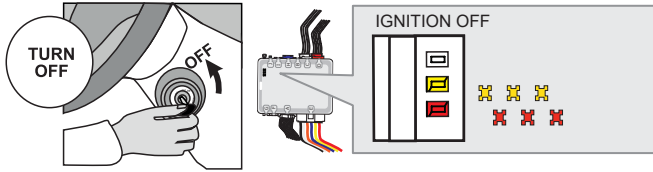

Turn the key to the OFF position.


↳ The RED and YELLOW LEDs alternate.

6

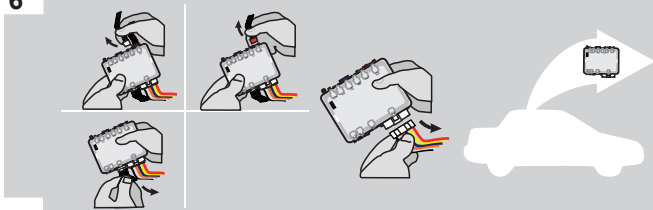

Disconnect all connectors and after the 6-Pin (Main-Harness) or the 4-Pin Data-link connector.


7

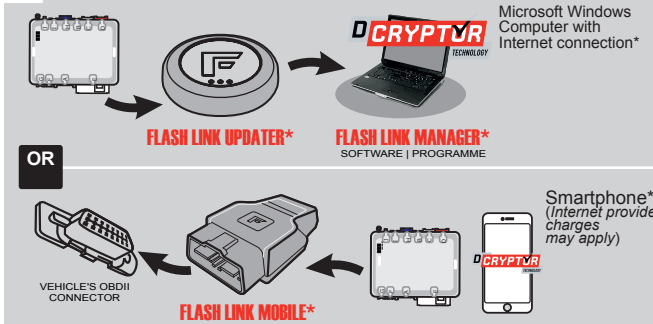


Use the tool: FLASH LINK UPDATER or FLASH LINK MOBILE to visit the DCryptor menu.

*Parts required (not included)

8

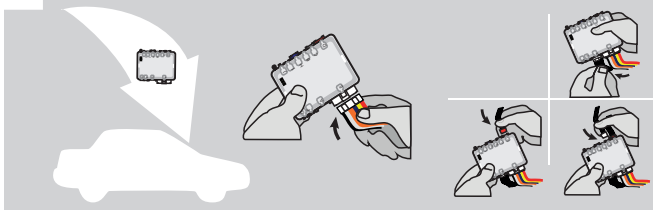


AFTER DCRYPTOR PROGRAMMING COMPLETED Go back to the vehicle and reconnect the 6-Pin (Main-Harness) or the 4-pins (Data-Link) connector and after all the remaining connector.

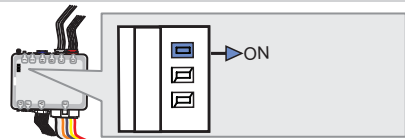

↳ The BLUE LED will turn ON.

9

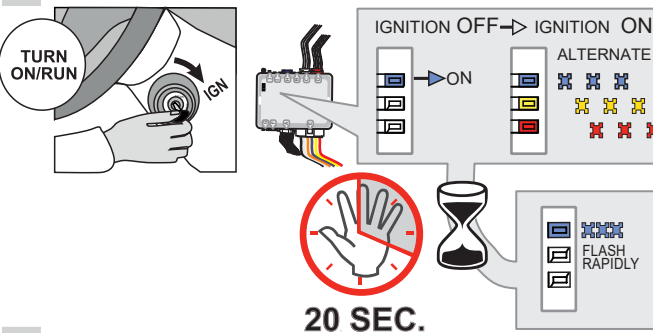


Turn the key to the Ignition ON/RUN position.

↳ The BLUE, YELLOW and RED LEDs will alternate.

Wait, at least 20 seconds, do not disconnect the modules or turn off the ignition.

↳ The BLUE LED will flash rapidly.

10

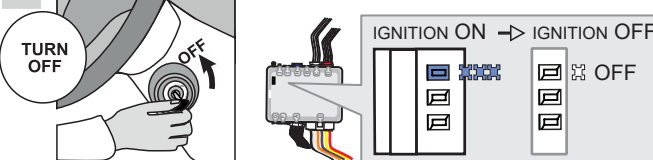

Turn the key to the OFF position.

↳ The BLUE will turn OFF.




The module is now programmed.

REMOTE STARTER PROGRAMMING PROCEDURE |



REFER TO THE **QUICK INSTALL GUIDE** INCLUDED WITH THE MODULE FOR THE REMOTE STARTER PROGRAMMING.

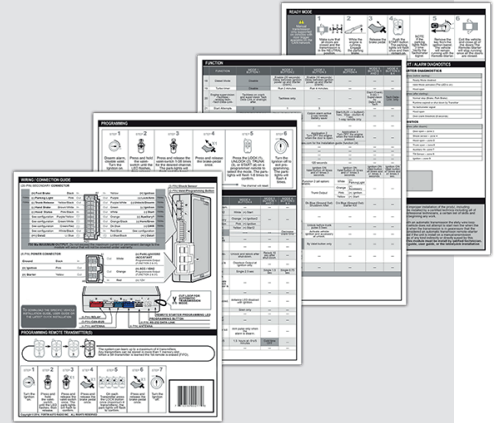

REMOTE STARTER FUNCTIONALITY |



All doors must be closed.



Remote start the vehicle.



Unlock the doors with the remote-starter remote or the OEM remote.



Insert and Turn the key to the Ignition ON/RUN position.



Press the brake pedal.



The vehicle can now be put in to gear and driven.

REGULAR & THAR-FOR3 INSTALLATION

ADDENDUM - SUGGESTED WIRING CONFIGURATION



ONLY COMPATIBLE WITH AUTOMATIC TRANSMISSION VEHICLES.




VEHICLE

YEARS

Vehicle functions supported in this diagram (functional if equipped)

VEHICLE	YEARS	Immobilizer bypass	T-Harness available (sold separately)	Lock	Unlock	Arm	Disarm	Heated Seats**	Rear Defrost**	RAP Disable	Parking Lights****	Tachometer	Door Status	Trunk Status	Hood Status*	Hand-Brake Status	Foot-Brake Status	Active OEM Remote Start	R.S. OEM remote Stand Alone compatible	
FORD																				
Edge	Push-to-Start 2020	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•

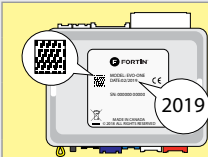

COMPATIBLE MODULE REQUIRED:

QR CODE ON THE LABEL
MANUFACTURED AFTER: 2019

FIRMWARE VERSION

58.[02]
MINIMUM

To add the firmware version and the options, use the **FLASH LINK UPDATER** or **FLASH LINK MOBILE** tool, sold separately.

UNIT OPTION	DESCRIPTION
C1	OEM Remote status (Lock/Unlock) monitoring
D6	Push-to-Start
A11	OFF Hood trigger (Output Status).

IF THE VEHICLE IS NOT EQUIPPED WITH FUNCTIONAL HOOD PIN:

FUNCTION	MODE	DESCRIPTION
38	2	Enable Press 3x Lock to remote start with the OEM remote.

Program remote starter option for R.S. OEM REMOTE STAND ALONE:

NOTES

The vehicles OEM remote and SmartKey are still operable during remote start.

**Heated seats The heated seats and rear defrost activate automatically when it cold.

***Parking Lights The parking Lights at remote start only.

MANDATORY INSTALL

* HOOD PIN



HOOD STATUS : THE HOOD PIN SWITCH (INCLUDED) MUST BE INSTALLED IF THE VEHICLE CAN BE REMOTE STARTED WITH THE HOOD OPEN, SET FUNCTION A11 TO OFF.

A11

OFF

SECURITY STICKER



Included

Notice: the installation of safety elements are mandatory. The hood pin and the sticker are essential security elements and must be installed.

THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.

DESCRIPTION |

	Parts required (Not included)	PAGE
--	-------------------------------	------

WIRE TO WIRE DIAGRAM

		Page 3
--	--	--------


THARNESS DIAGRAM

THARNESS THAR-FOR3	1x THAR-FOR3	1x THAR-FOR3	Page 4
--------------------	--------------	--------------	--------




② Parking Lights switch


① Gateway module, located at right of steering column.

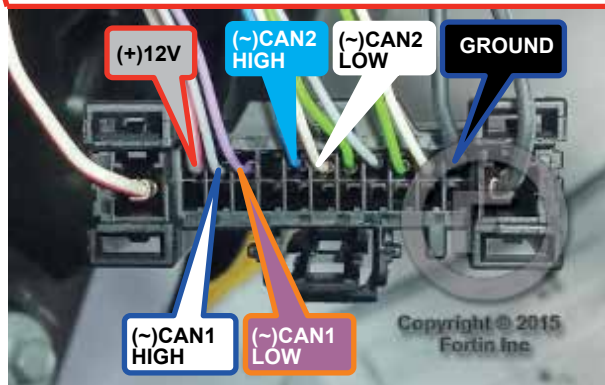

AUTOMATIC TRANSMISSION WIRING CONNECTION |

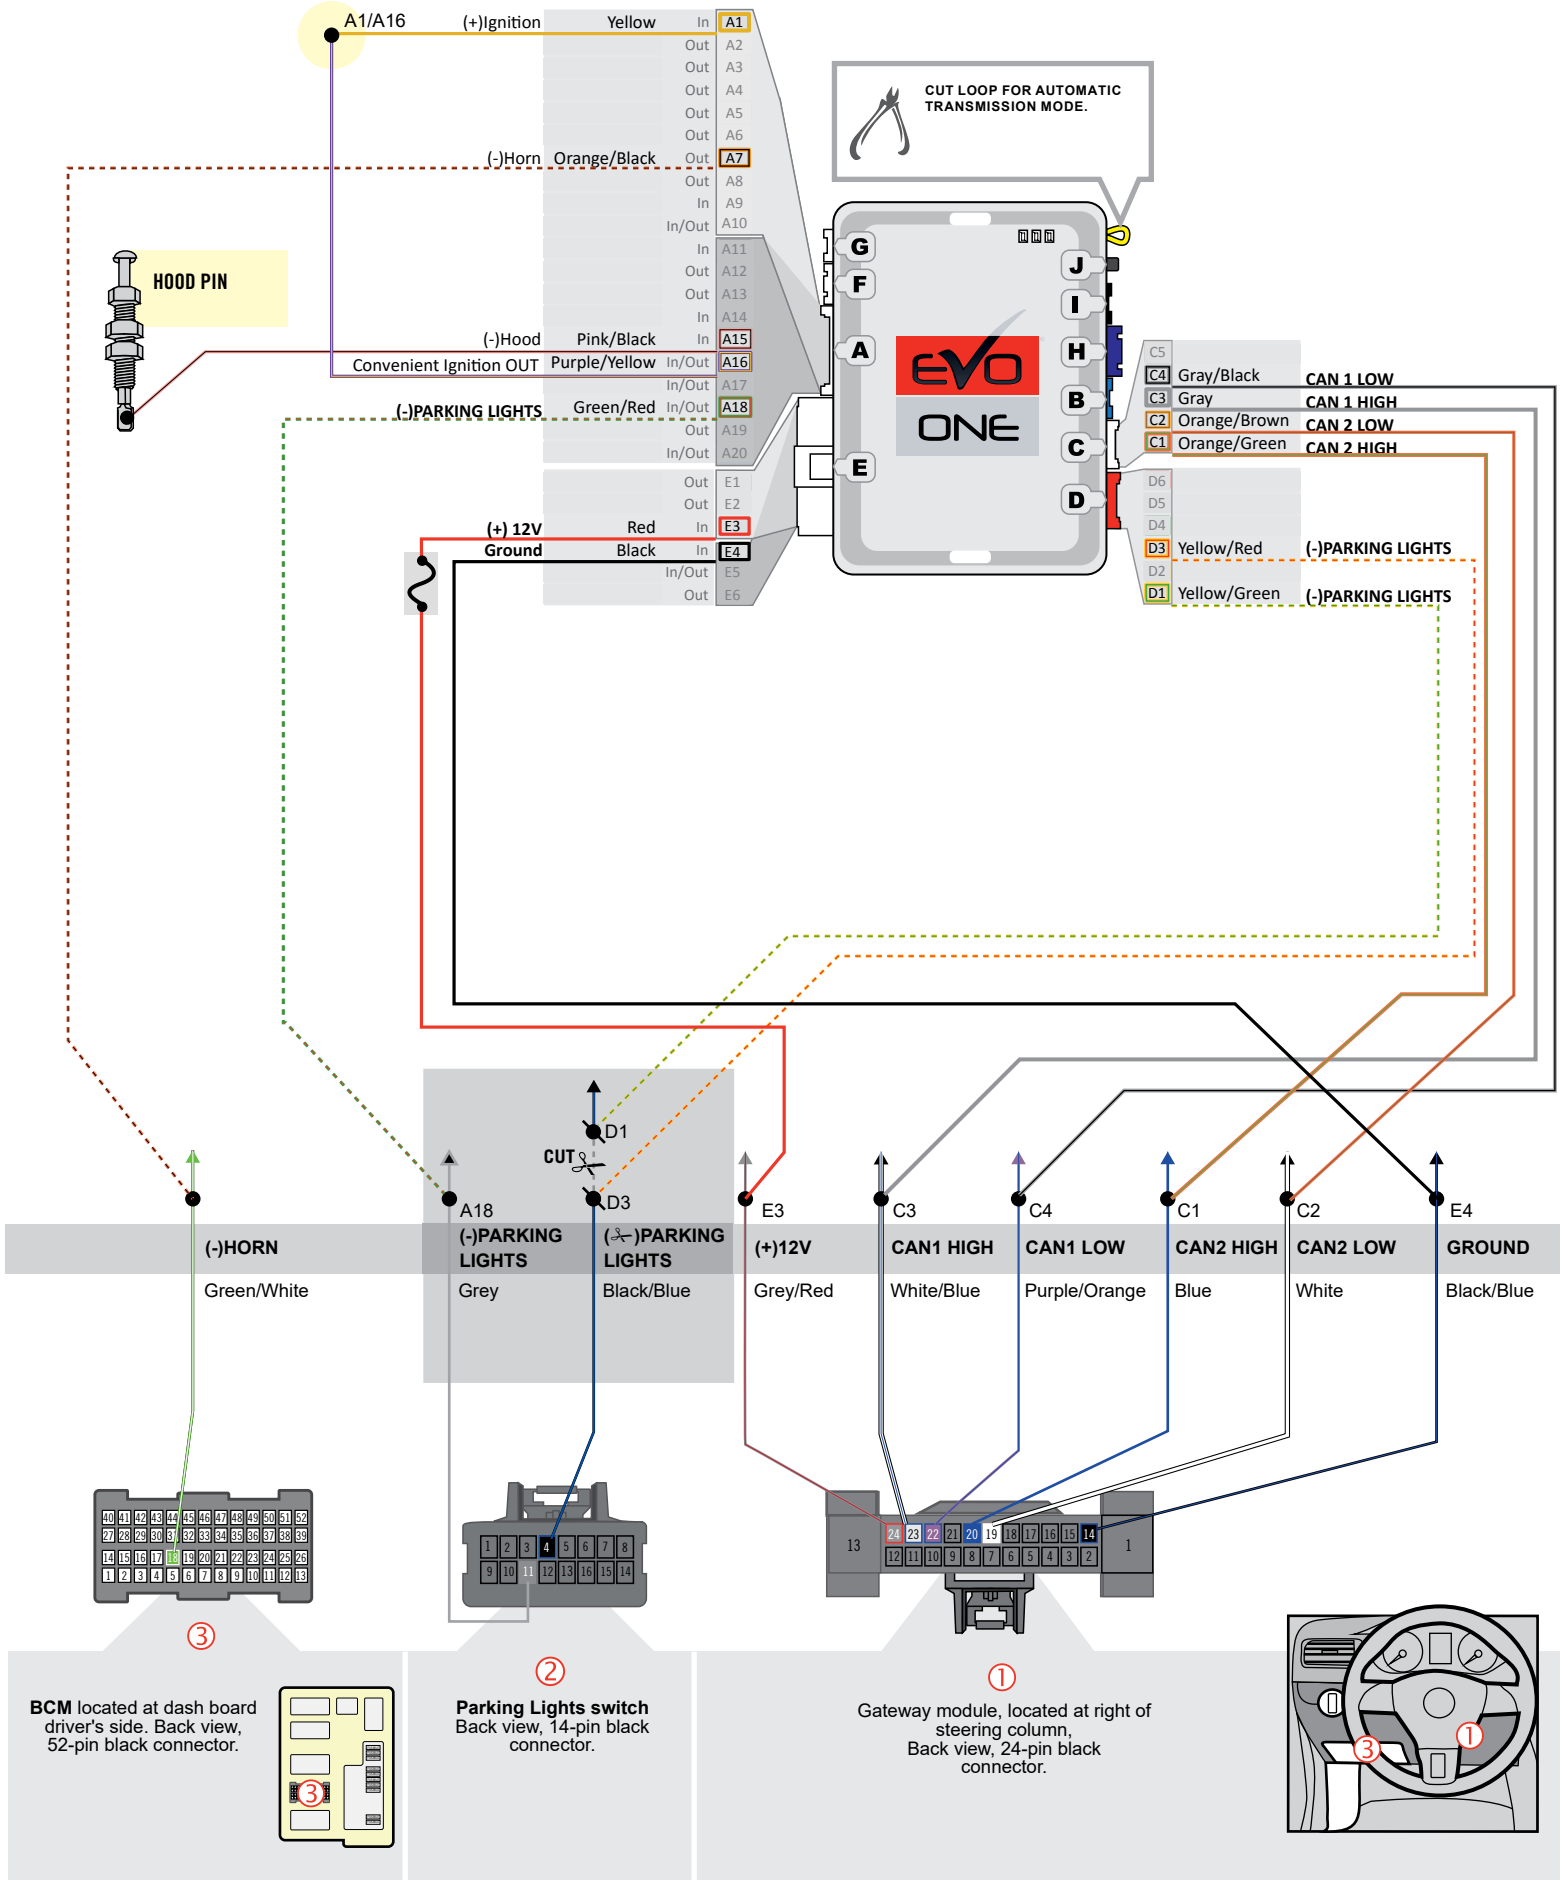

THAR-FOR3 | T-HARNESS - AUTOMATIC TRANSMISSION |

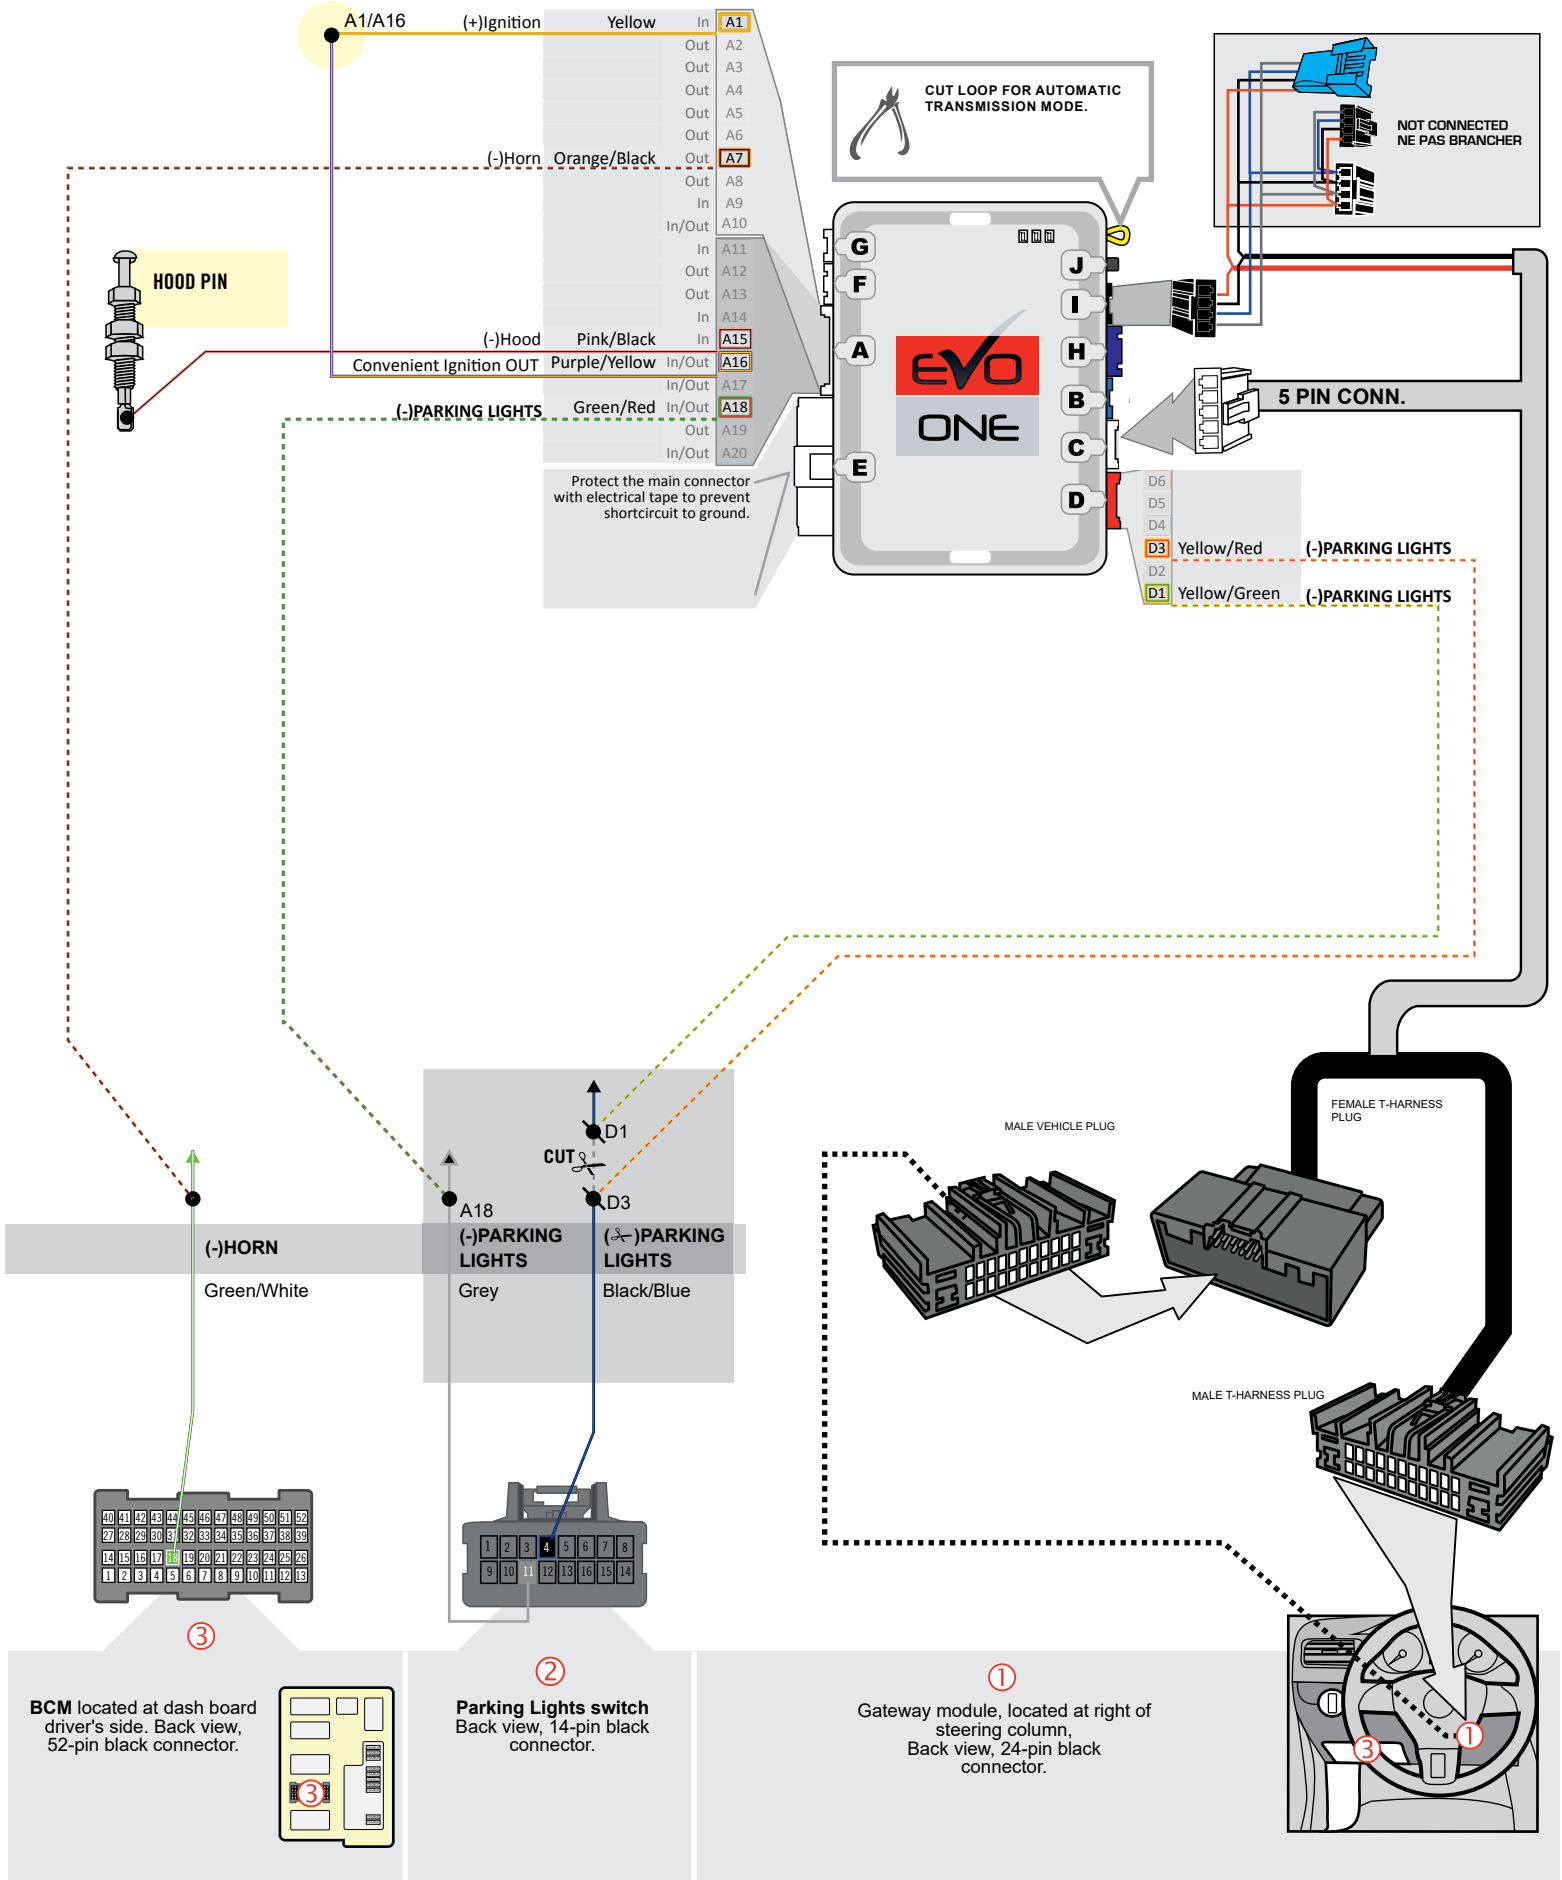

DCRYPTOR PROGRAMMING PROCEDURE |



Parts required (not included)


- 1x **FLASH LINK UPDATER,**
- 1x **FLASH LINK MANAGER**
SOFTWARE | PROGRAMME
- 1x Microsoft Windows Computer with Internet connection

OR

- 1x **FLASH LINK MOBILE**
- 1x **FLASH LINK MOBILE APP**
- Smartphone Android or iOS with Internet connection
(Internet provider charges may apply)

BEFORE PROGRAMMING SET THE UNIT OPTIONS AND SAVE.

1

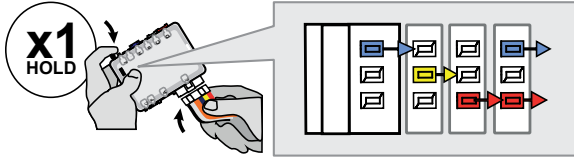


Press and hold the programming button:
Insert the 6-Pin Main connector.


Press and hold the programming button:
Connect the 4-PIN Data-link harness (Black connector).

↳ The LEDs will alternate between BLUE, RED, YELLOW & BLUE/RED flashes.

WITH T-HARNESS

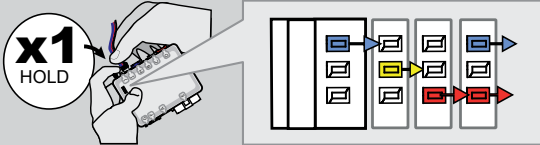


2

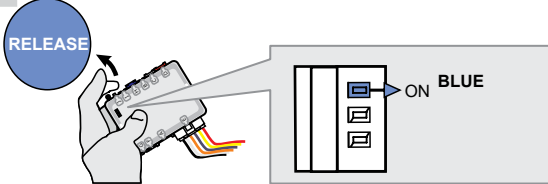


Release the programming button when the BLUE LED is ON.

 If the BLUE LED is not ON solid disconnect the 6-Pin Main connector and go back to step 1.




WITH T-HARNESS

 If the LED is not solid BLUE disconnect the 4 Pin connector (Data-Link) and go back to step 1.




3

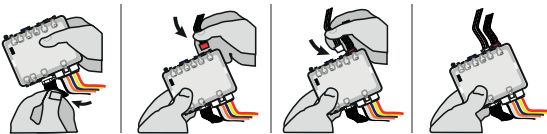

Insert the required remaining connectors.

4

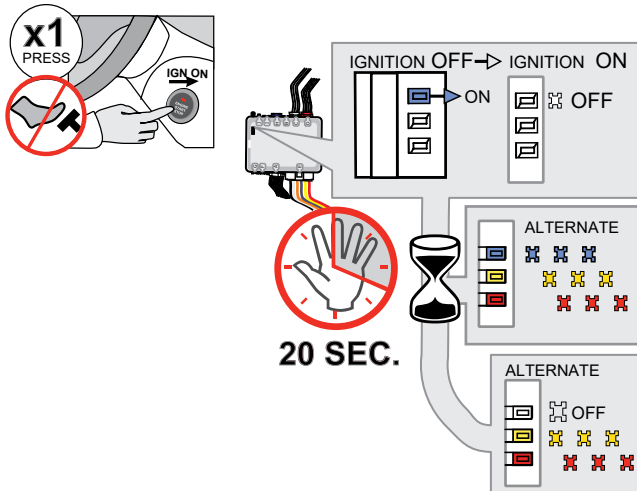

Do not press the brake pedal. **Press** the Push-to-Start button once to turn on the ignition.

↳ The BLUE LED will turn OFF.

↳ The BLUE, YELLOW and RED LEDs will alternated.

Wait, at least 20 seconds, do not disconnect the modules or turn off the ignition.


↳ The RED and YELLOW LEDs will alternated.

Make sure that the DELs are flashing RED and YELLOW before continuing programming.



KEY BYPASS PROGRAMMING PROCEDURE 2/2 |


5

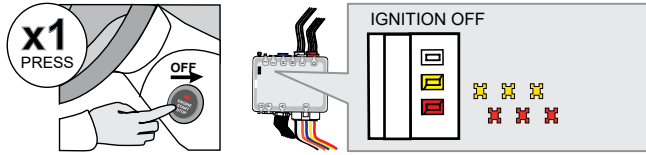

Press the Push-to-Start button once to turn off the ignition.


↳ The RED and YELLOW LEDs alternate.

6

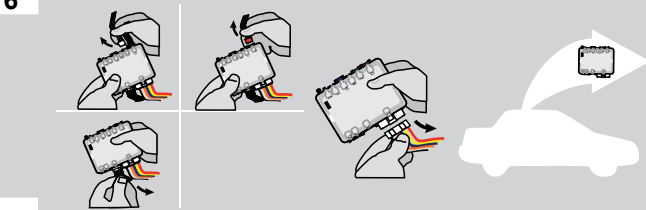

Disconnect all connectors and after the 6-Pin (Main-Harness) or the 4-Pin Data-link connector.


7

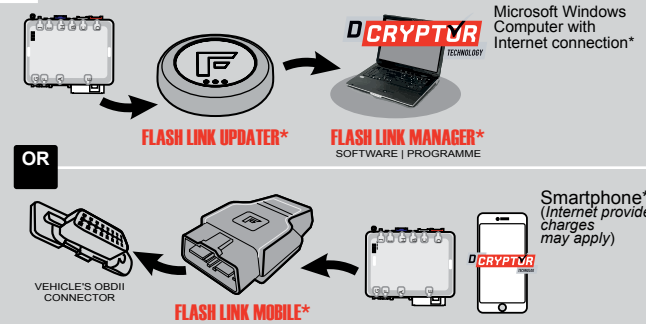


Use the tool: FLASH LINK UPDATER or FLASH LINK MOBILE to visit the DCryptor menu.

*Parts required (not included)

8

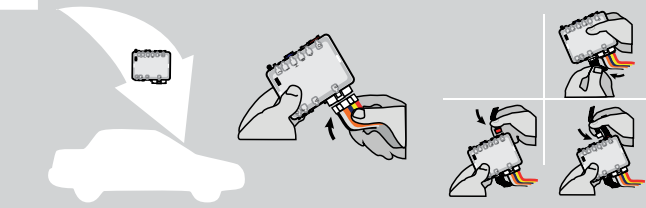


AFTER DCRYPTOR PROGRAMMING COMPLETED Go back to the vehicle and reconnect the 6-Pin (Main-Harness) or the 4-pins (Data-Link) connector and after all the remaining connector.

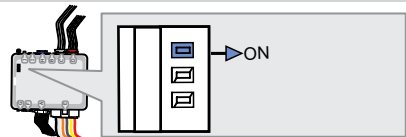

↳ The BLUE LED will turn ON.

9

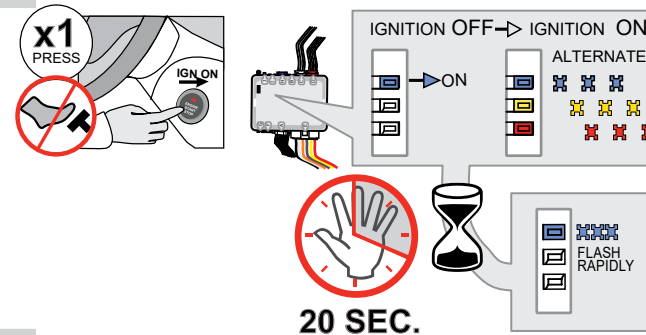


Do not press the brake pedal. Press the Push-to-Start button once to turn on the ignition.

↳ The BLUE, YELLOW and RED LEDs will alternate.

Wait, at least 20 seconds, do not disconnect the modules or turn off the ignition.

↳ The BLUE LED will flash rapidly.

10

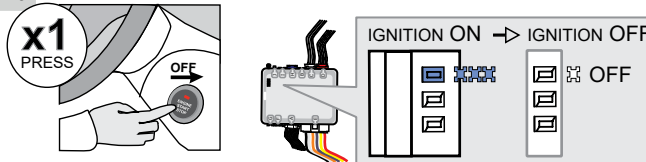

Press the Push-to-Start button once to turn off the ignition.

↳ The BLUE will turn OFF.




The module is now programmed.

REMOTE STARTER PROGRAMMING PROCEDURE |



REFER TO THE **QUICK INSTALL GUIDE** INCLUDED WITH THE MODULE FOR THE REMOTE STARTER PROGRAMMING.

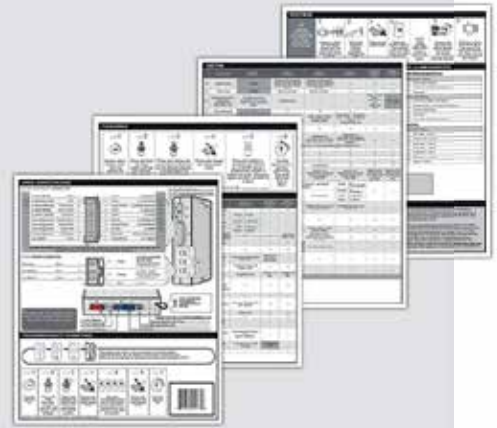

REMOTE STARTER FUNCTIONALITY |



All doors must be closed.

 


Remote start the vehicle.



Unlock the doors with either:

- The OEM remote
- The remote-starter remote
- Or the proximity remote



Enter the vehicle with the SMART-KEY.



DO NOT PRESS THE BRAKE PEDAL.

Press and release the Push-to-Start button once.



Press the brake pedal. The vehicle can now be put in to gear and driven.

If the Smart-Key is not detected the vehicle will shut down.

REGULAR & THAR-FOR3 INSTALLATION

ADDENDUM - SUGGESTED WIRING CONFIGURATION




ONLY COMPATIBLE WITH AUTOMATIC TRANSMISSION VEHICLES.



Vehicle functions supported in this diagram (functional if equipped)

VEHICLE	YEARS	Immobilizer bypass	T-Harness available (sold separately)	Lock	Unlock	Arm	Disarm	Heated Seats**	Rear Defrost**	RAP Disable	Parking Lights***	Tachometer	Door Status	Trunk Status	Hood Status*	Hand-Brake Status	Foot-Brake Status	Active OEM Remote Start	R.S. OEM remote Stand Alone compatible	
FORD																				
Escape	Key 2020	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•

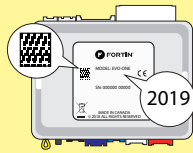

COMPATIBLE MODULE REQUIRED:

QR CODE ON THE LABEL MANUFACTURED AFTER: 2019

FIRMWARE VERSION

58.[02]

MINIMUM

To add the firmware version and the options, use the **FLASH LINK UPDATER** or **FLASH LINK MOBILE** tool, sold separately.

2019



Program bypass option:

UNIT OPTION

C1

DESCRIPTION

OEM Remote status (Lock/Unlock) monitoring

IF THE VEHICLE IS NOT EQUIPPED WITH FUNCTIONAL HOOD PIN:

A11

OFF NON

Hood trigger (Output Status).



Program remote starter option for R.S. OEM REMOTE STAND ALONE:

FUNCTION

MODE

DESCRIPTION

38

2

Enable Press 3x Lock to remote start with the OEM remote.

NOTES

The vehicles OEM remote and SmartKey are still operable during remote start.

**Heated seats The heated seats and rear defrost activate automatically when it cold.

***Parking Lights The parking Lights at remote start only.



The vehicle must be equipped with the OEM remote with the door locks.

MANDATORY INSTALL

* HOOD PIN



HOOD STATUS : THE HOOD PIN SWITCH (INCLUDED) MUST BE INSTALLED IF THE VEHICLE CAN BE REMOTE STARTED WITH THE HOOD OPEN, SET FUNCTION A11 TO OFF.

A11

OFF

SECURITY STICKER



Included

Notice: the installation of safety elements are mandatory. The hood pin and the sticker are essential security elements and must be installed.

THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.

DESCRIPTION |

	Parts required (Not included)	PAGE
--	-------------------------------	------

WIRE TO WIRE DIAGRAM


		Page 3
--	--	--------

THARNESS DIAGRAM


THARNESS THAR-FOR3	1x THAR-FOR3	Page 4
--------------------	--------------	--------



① Gateway module, Behind OBD-II connector

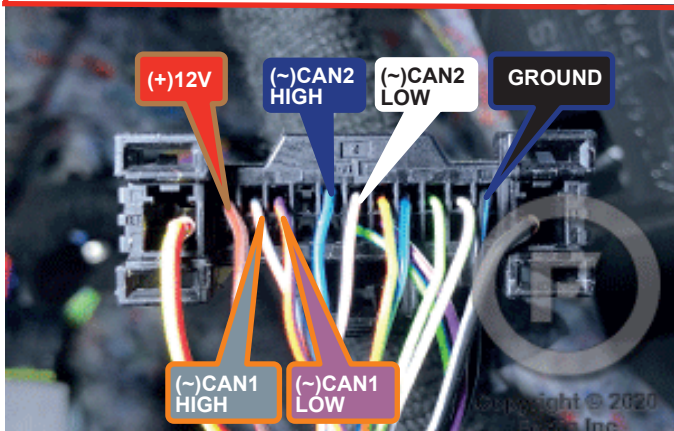


AUTOMATIC TRANSMISSION WIRING CONNECTION |

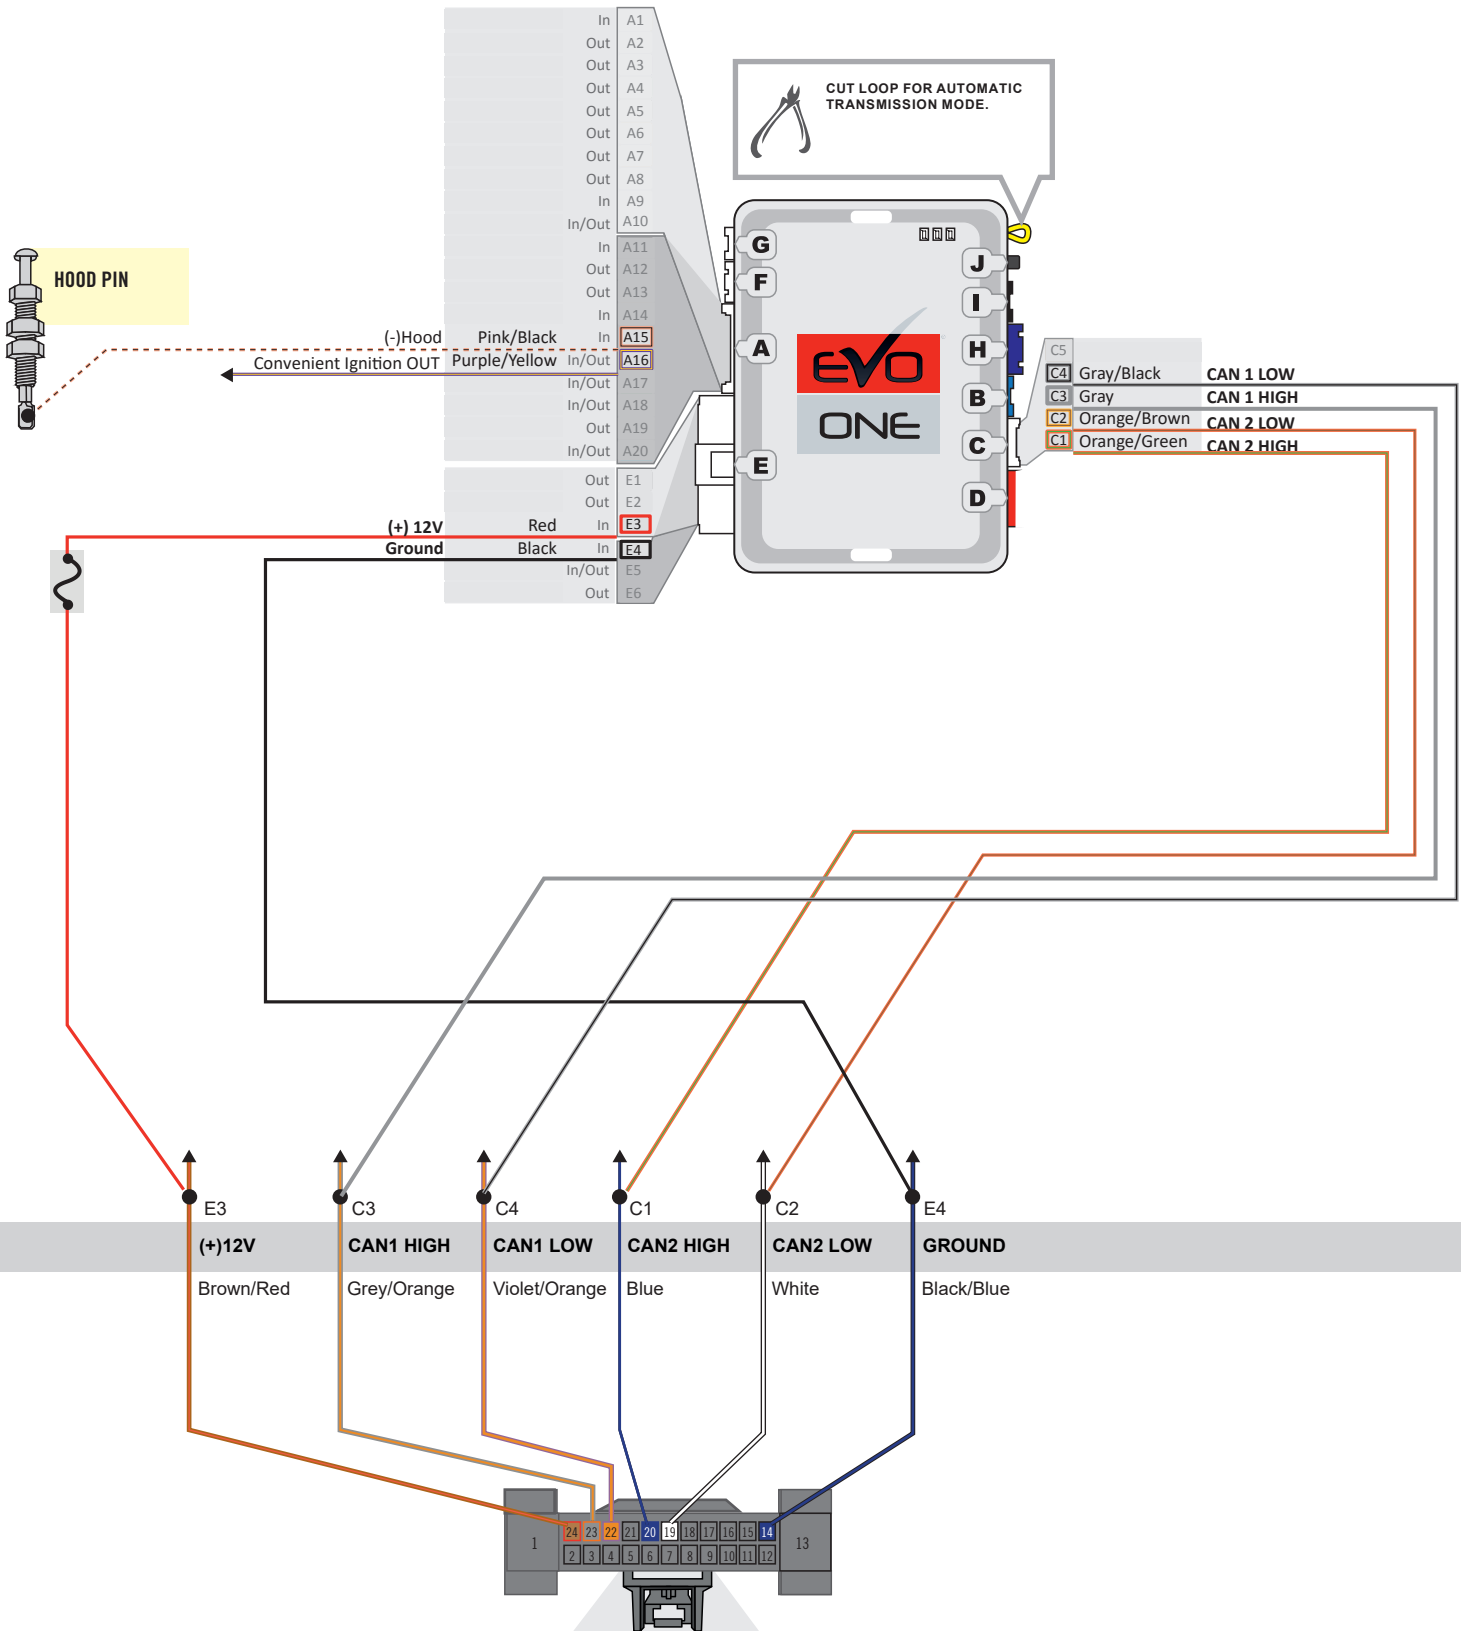


ESCAPE


① Gateway module, Connector Behind OBD-II connector - located at dash board driver's side Back view, 24-pin black connector.

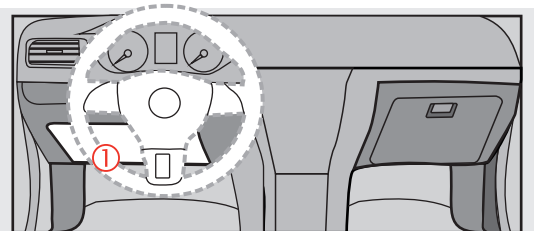


THAR-FOR3 | T-HARNESS - AUTOMATIC TRANSMISSION |

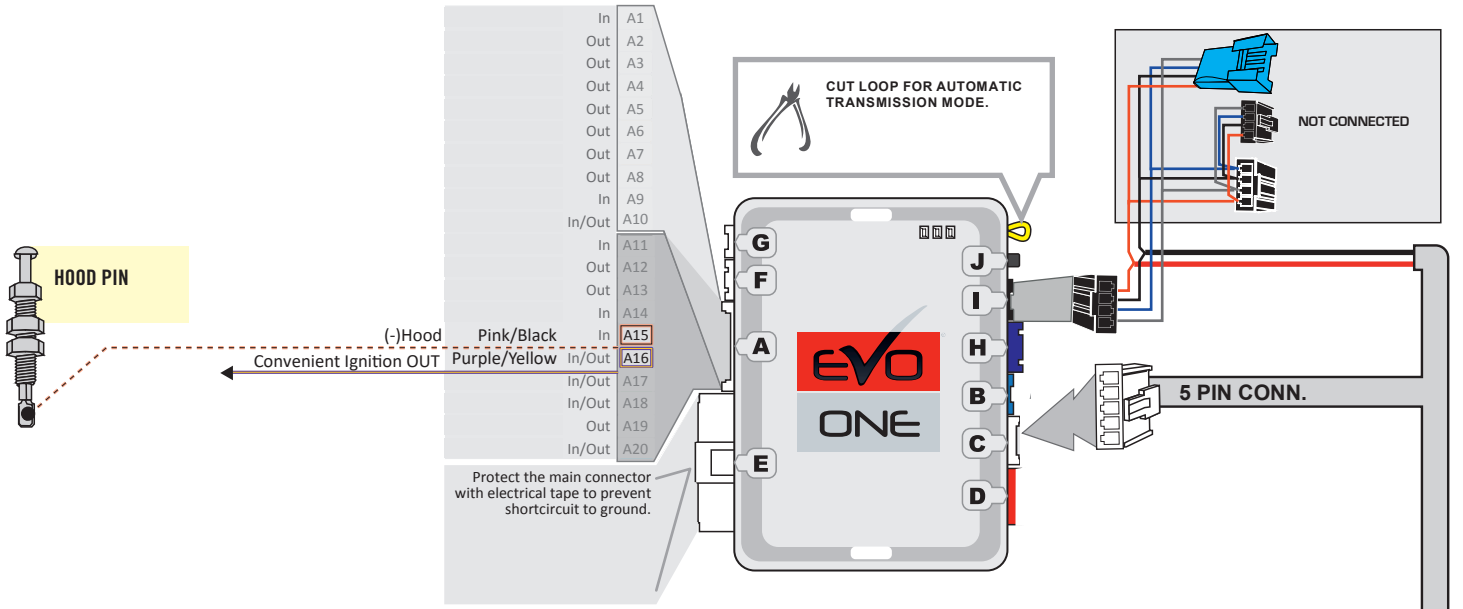

ESCAPE

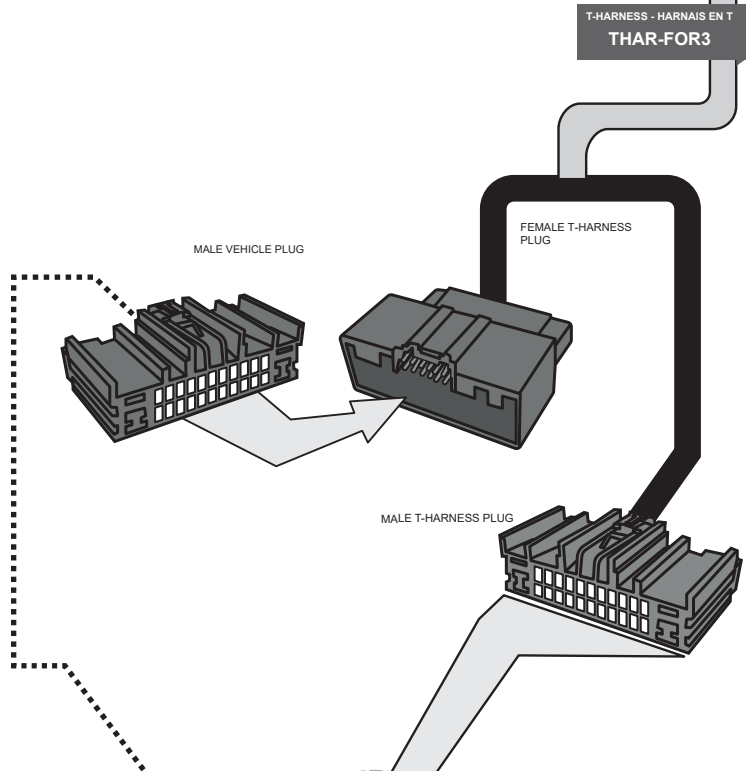

① Gateway module, Connector Behind OBD-II connector - located at dash board driver's side
Back view, 24-pin black connector.

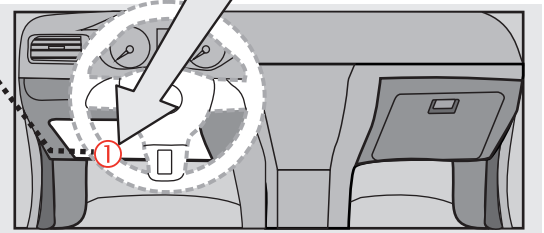

DCRYPTOR PROGRAMMING PROCEDURE |



Parts required (not included)


- 1x FLASH LINK UPDATER,
- 1x FLASH LINK MANAGER SOFTWARE | PROGRAMME
- 1x Microsoft Windows Computer with Internet connection

OR

- 1x FLASH LINK MOBILE
- 1x FLASH LINK MOBILE APP
- Smartphone Android or iOS with Internet connection (Internet provider charges may apply)


BEFORE PROGRAMMING SET THE UNIT OPTIONS AND SAVE.

1

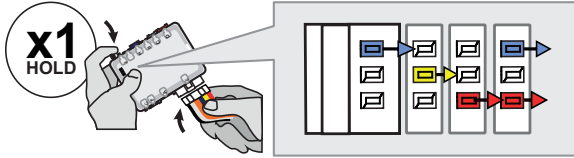

Press and hold the programming button:
Insert the 6-Pin Main connector.


WITH T-HARNESS

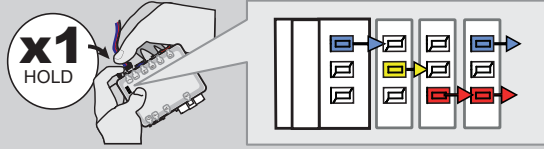

Press and hold the programming button:
Connect the 4-PIN Data-link harness (Black connector).


↳ The LEDs will alternate between BLUE, RED, YELLOW & BLUE/RED flashes.

2

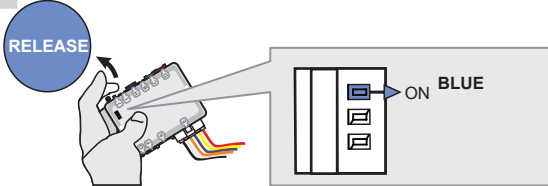


Release the programming button when the BLUE LED is ON.

 If the BLUE LED is not ON solid disconnect the 6-Pin Main connector and go back to step 1.




WITH T-HARNESS

 If the LED is not solid BLUE disconnect the 4 Pin connector (Data-Link) and go back to step 1.




3

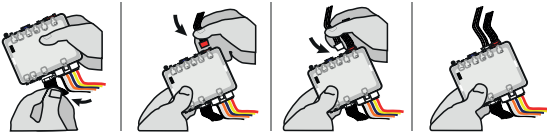

Insert the required remaining connectors.

4

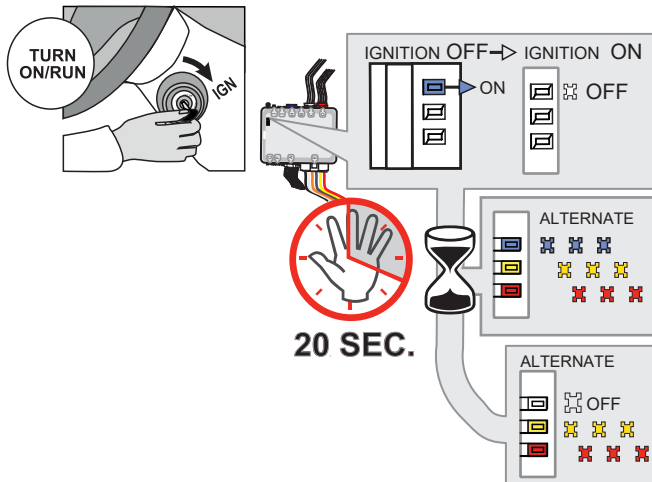

Turn the key to the Ignition ON/RUN position.

 
↳ The BLUE LED will turn OFF.

↳ The BLUE, YELLOW and RED LEDs will alternate.

Wait, at least 20 seconds, do not disconnect the modules or turn off the ignition.


↳ The RED and YELLOW LEDs will alternate.

Make sure that the DELs are flashing RED and YELLOW before continuing programming.



KEY BYPASS PROGRAMMING PROCEDURE 2/2 |


5

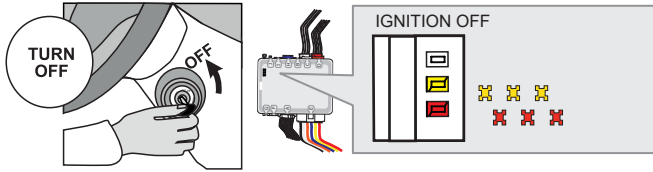

Turn the key to the OFF position.


↳ The RED and YELLOW LEDs alternate.

6

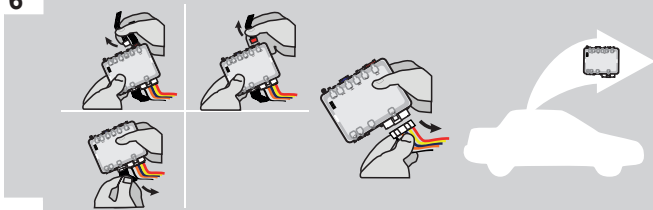

Disconnect all connectors and after the 6-Pin (Main-Harness) or the 4-Pin Data-link connector.


7

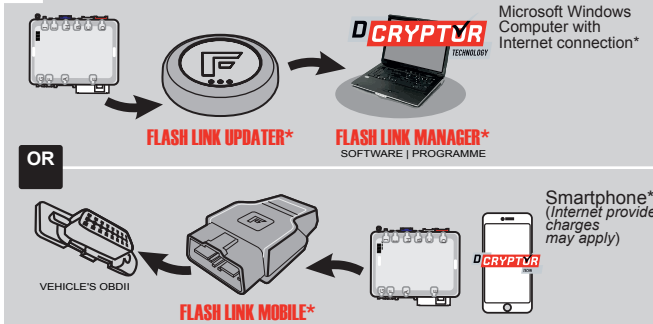


Use the tool: FLASH LINK UPDATER or FLASH LINK MOBILE to visit the DCryptor menu.

*Parts required (not included)

8

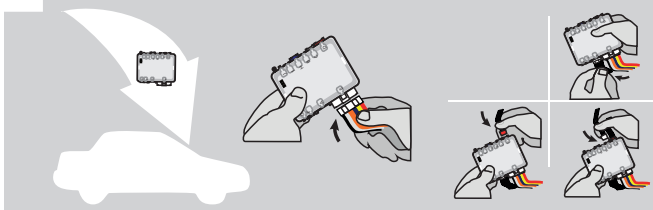


AFTER DCRYPTOR PROGRAMMING COMPLETED Go back to the vehicle and reconnect the 6-Pin (Main-Harness) or the 4-pins (Data-Link) connector and after all the remaining connector.

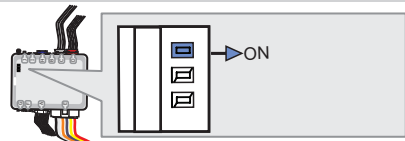

↳ The BLUE LED will turn ON.

9

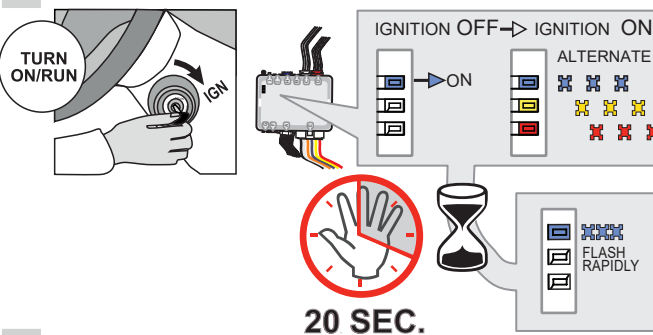


Turn the key to the Ignition ON/RUN position.

↳ The BLUE, YELLOW and RED LEDs will alternate.

Wait, at least 20 seconds, do not disconnect the modules or turn off the ignition.

↳ The BLUE LED will flash rapidly.

10

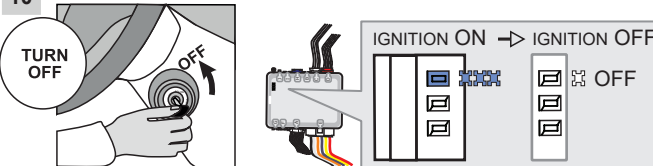

Turn the key to the OFF position.

↳ The BLUE will turn OFF.




The module is now programmed.

REMOTE STARTER PROGRAMMING PROCEDURE |



REFER TO THE **QUICK INSTALL GUIDE** INCLUDED WITH THE MODULE FOR THE REMOTE STARTER PROGRAMMING.

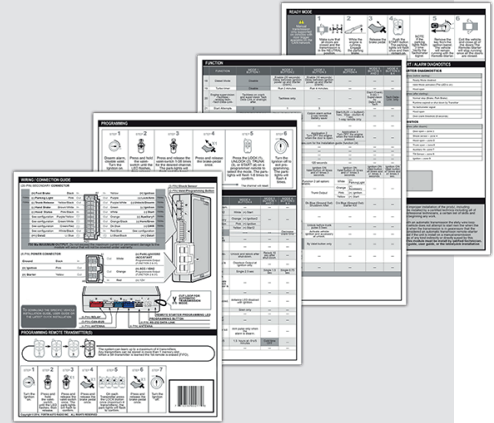

REMOTE STARTER FUNCTIONALITY |



All doors must be closed.



Remote start the vehicle.



Unlock the doors with the remote-starter remote or the OEM remote.



Insert and Turn the key to the Ignition ON/RUN position.



Press the brake pedal.



The vehicle can now be put in to gear and driven.

REGULAR & THAR-FOR3 INSTALLATION

ADDENDUM - SUGGESTED WIRING CONFIGURATION




ONLY COMPATIBLE WITH AUTOMATIC TRANSMISSION VEHICLES.



Vehicle functions supported in this diagram (functional if equipped)

VEHICLE	YEARS	Immobilizer bypass	T-Harness available (sold separately)	Lock	Unlock	Arm	Disarm	Heated Seats**	Rear Defrost**	RAP Disable	Parking Lights***	Tachometer	Door Status	Trunk Status	Hood Status*	Hand-Brake Status	Foot-Brake Status	Active OEM Remote Start	R.S. OEM remote Stand Alone compatible	
FORD																				
Escape	Push-to-Start 2020	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•

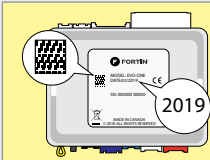

COMPATIBLE MODULE REQUIRED:

QR CODE ON THE LABEL MANUFACTURED AFTER: 2019

FIRMWARE VERSION

58.[02]

MINIMUM

To add the firmware version and the options, use the **FLASH LINK UPDATER** or **FLASH LINK MOBILE** tool, sold separately.

2019



Program bypass option:

UNIT OPTION

DESCRIPTION

C1

OEM Remote status (Lock/Unlock) monitoring

D6

Push-to-Start

IF THE VEHICLE IS NOT EQUIPPED WITH FUNCTIONAL HOOD PIN:

A11

OFF

Hood trigger (Output Status).



Program remote starter option for R.S. OEM REMOTE STAND ALONE:

FUNCTION

MODE

DESCRIPTION

38

2

Enable Press 3x Lock to remote start with the OEM remote.

NOTES

The vehicles OEM remote and SmartKey are still operable during remote start.

**Heated seats The heated seats and rear defrost activate automatically when it cold.

***Parking Lights The parking Lights at remote start only.

MANDATORY INSTALL

* HOOD PIN



HOOD STATUS: THE HOOD PIN SWITCH (INCLUDED) MUST BE INSTALLED IF THE VEHICLE CAN BE REMOTE STARTED WITH THE HOOD OPEN, SET FUNCTION A11 TO OFF.

A11

OFF

SECURITY STICKER



Included

Notice: the installation of safety elements are mandatory. The hood pin and the sticker are essential security elements and must be installed.

THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.

DESCRIPTION | DESCRIPTION

	Parts required (Not included)	PAGE
--	-------------------------------	------

WIRE TO WIRE DIAGRAM


		Page 3
--	--	--------

THARNESS DIAGRAM


THARNESS THAR-FOR3	1x THAR-FOR3	Page 4
--------------------	--------------	--------




① Gateway module, Behind OBD-II connector

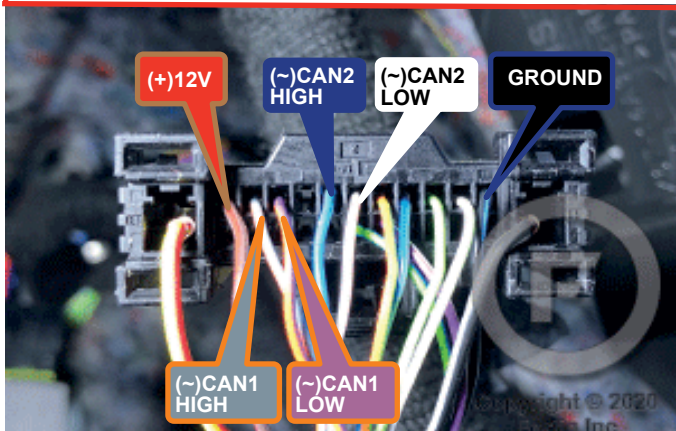


AUTOMATIC TRANSMISSION WIRING CONNECTION |

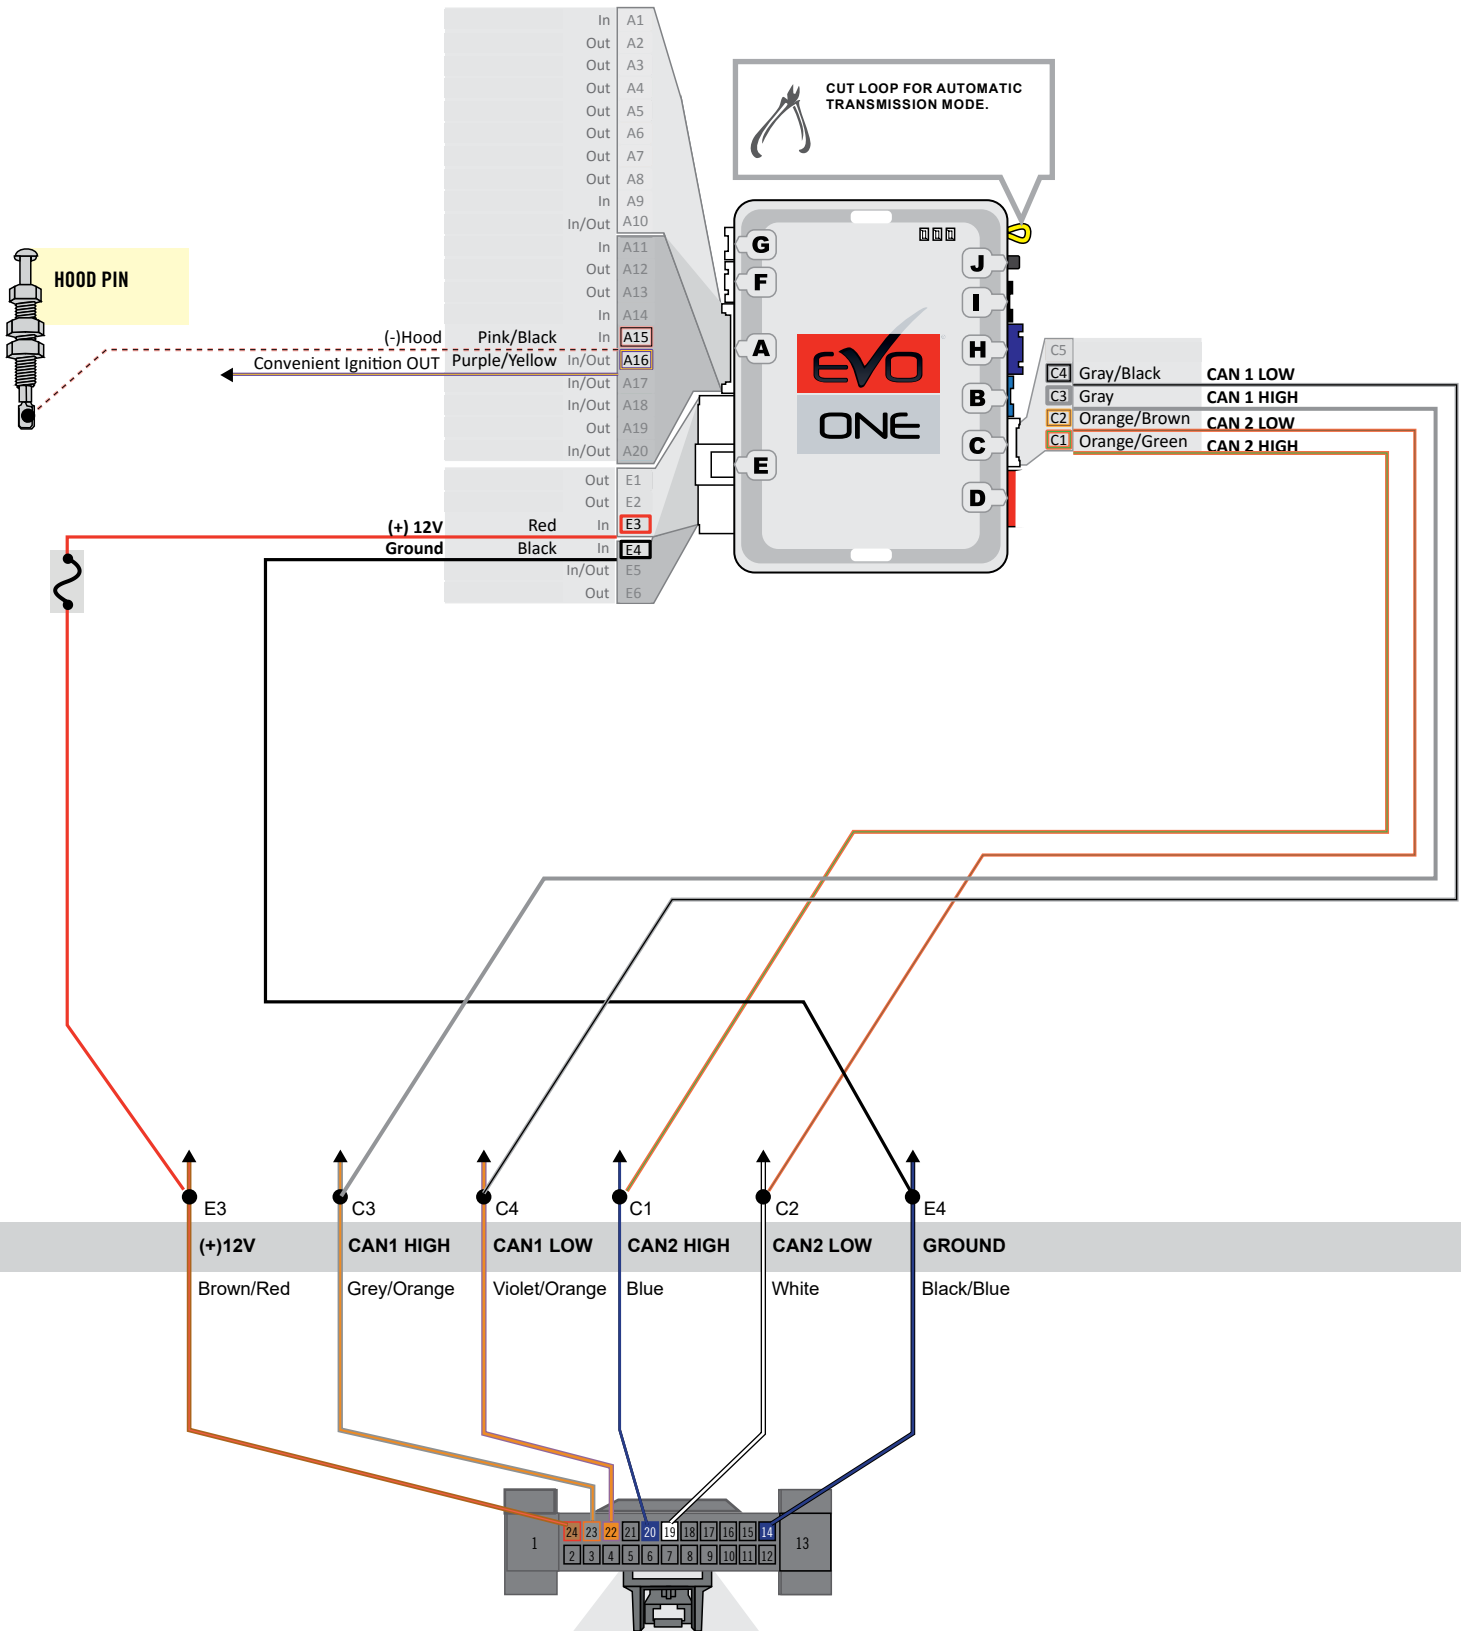


① Gateway module, Connector Behind OBD-II connector - located at dash board driver's side Back view, 24-pin black connector.

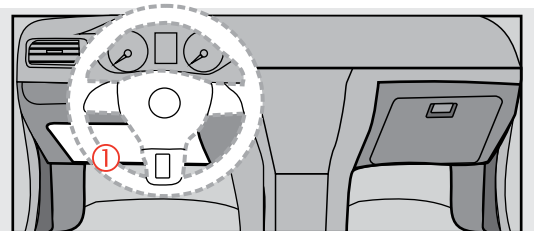


THAR-FOR3 | T-HARNESS - AUTOMATIC TRANSMISSION |

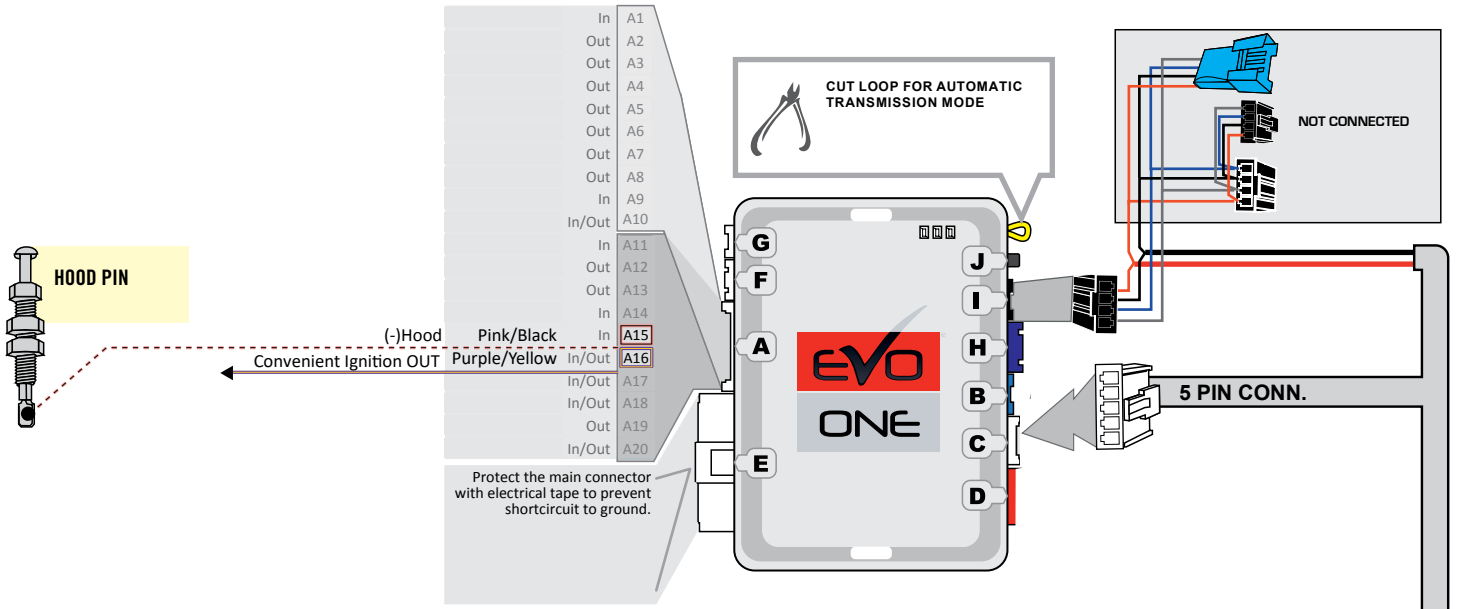

ESCAPE

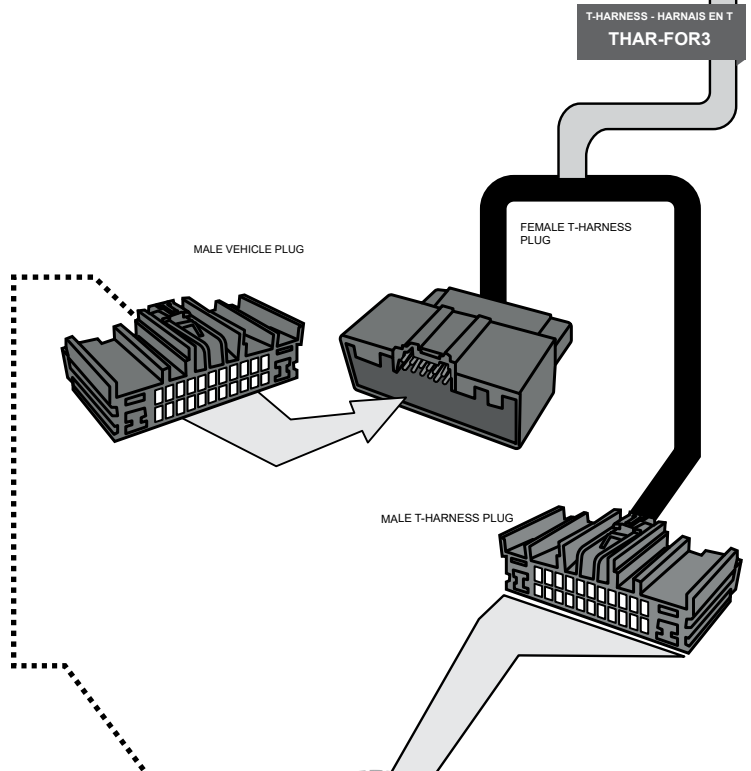

① Gateway module, Connector Behind OBD-II connector - located at dash board driver's side
Back view, 24-pin black connector.

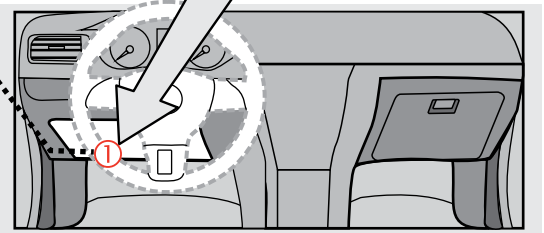

DCRYPTOR PROGRAMMING PROCEDURE |



Parts required (not included)


- 1x **FLASH LINK UPDATER,**
- 1x **FLASH LINK MANAGER**
SOFTWARE | PROGRAMME
- 1x Microsoft Windows Computer with Internet connection

OR

- 1x **FLASH LINK MOBILE**
- 1x **FLASH LINK MOBILE APP**
- Smartphone Android or iOS with Internet connection
(Internet provider charges may apply)


BEFORE PROGRAMMING SET THE UNIT OPTIONS AND SAVE.

1

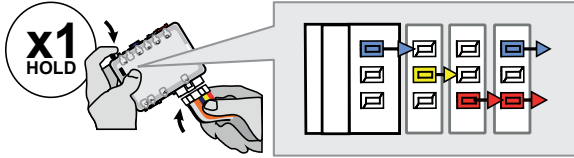

Press and hold the programming button:
Insert the 6-Pin Main connector.


WITH T-HARNESS

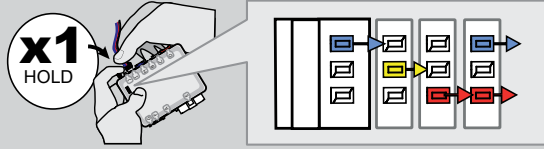

Press and hold the programming button:
Connect the 4-PIN Data-link harness (Black connector).


↳ The LEDs will alternate between BLUE, RED, YELLOW & BLUE/RED flashes.

2

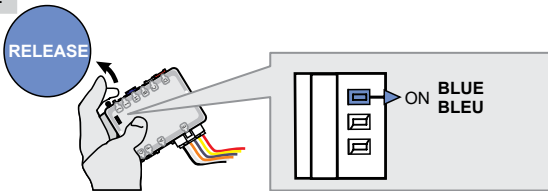


Release the programming button when the BLUE LED is ON.

 If the BLUE LED is not ON solid disconnect the 6-Pin Main connector and go back to step 1.




WITH T-HARNESS

 If the LED is not solid BLUE disconnect the 4 Pin connector (Data-Link) and go back to step 1.




3

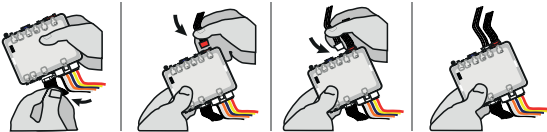

Insert the required remaining connectors.

4

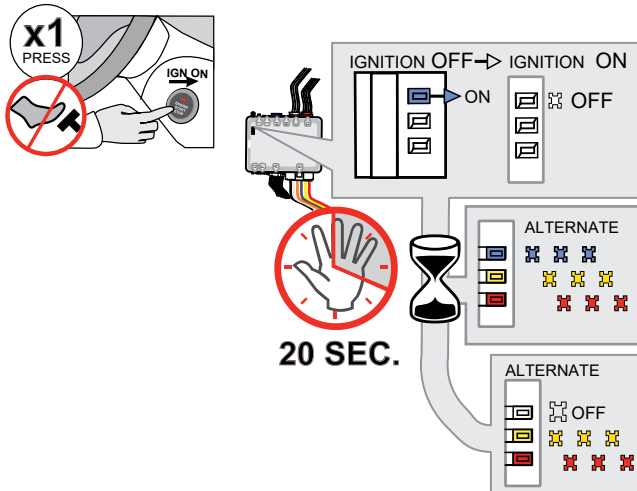

Do not press the brake pedal.
Press the Push-to-Start button once to turn on the ignition.

 
↳ The BLUE LED will turn OFF.

↳ The BLUE, YELLOW and RED LEDs will alternate.

Wait, at least 20 seconds, do not disconnect the modules or turn off the ignition.


↳ The RED and YELLOW LEDs will alternate.

Make sure that the DELs are flashing RED and YELLOW before continuing programming.



KEY BYPASS PROGRAMMING PROCEDURE 2/2 |


5

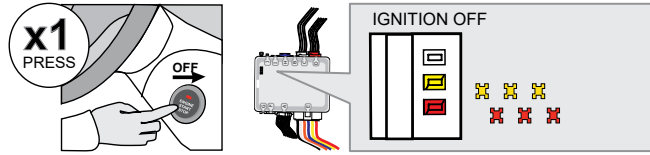

Press the Push-to-Start button once to turn off the ignition.


↳ The RED and YELLOW LEDs alternate.

6

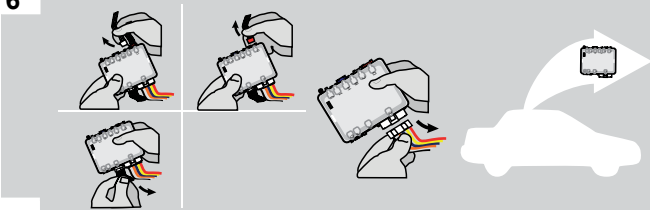

Disconnect all connectors and after the 6-Pin (Main-Harness) or the 4-Pin Data-link connector.


7

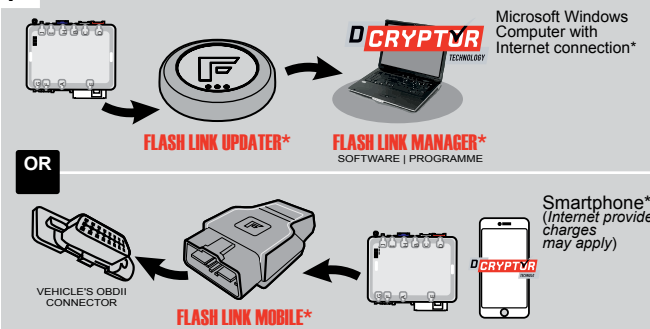


Use the tool: FLASH LINK UPDATER or FLASH LINK MOBILE to visit the DCryptor menu.

*Parts required (not included)

8

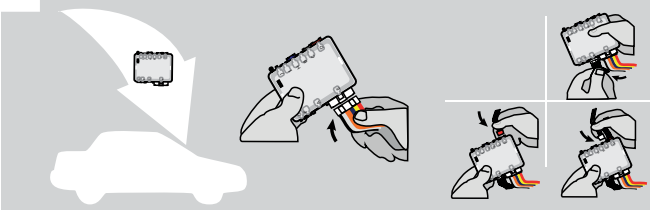


AFTER DCRYPTOR PROGRAMMING COMPLETED Go back to the vehicle and reconnect the 6-Pin (Main-Harness) or the 4-pins (Data-Link) connector and after all the remaining connector.

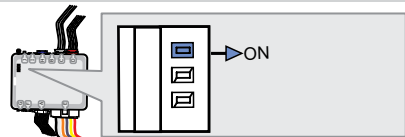

↳ The BLUE LED will turn ON.

9

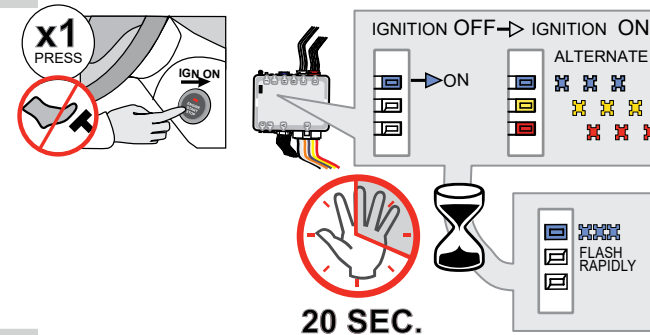


Do not press the brake pedal. Press the Push-to-Start button once to turn on the ignition.

↳ The BLUE, YELLOW and RED LEDs will alternated.

Wait, at least 20 seconds, do not disconnect the modules or turn off the ignition.

↳ The BLUE LED will flash rapidly.

10

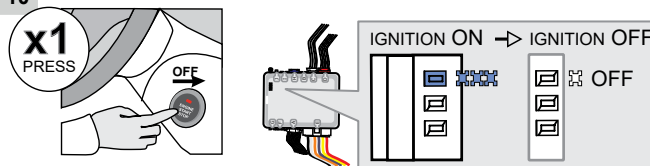

Press the Push-to-Start button once to turn off the ignition.

↳ The BLUE will turn OFF.




The module is now programmed.

REMOTE STARTER PROGRAMMING PROCEDURE |



REFER TO THE **QUICK INSTALL GUIDE** INCLUDED WITH THE MODULE FOR THE REMOTE STARTER PROGRAMMING.

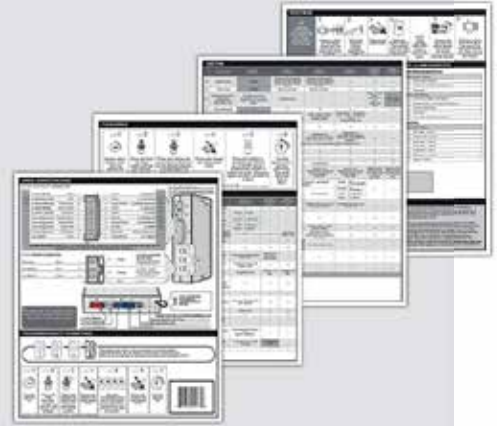

REMOTE STARTER FUNCTIONALITY |



All doors must be closed.



Start

 
Remote start the vehicle.



UNLOCK

Unlock the doors with either:

- The OEM remote
- The remote-starter remote
- Or the proximity remote



Enter the vehicle with the SMART-KEY.



DO NOT PRESS THE BRAKE PEDAL.

Press and release the Push-to-Start button once.



Press the brake pedal. The vehicle can now be put in to gear and driven.


If the Smart-Key is not detected the vehicle will shut down.

REGULAR & THAR-FOR3 INSTALLATION
ADDENDUM - SUGGESTED WIRING CONFIGURATION

ONLY COMPATIBLE WITH AUTOMATIC TRANSMISSION VEHICLES.

Vehicle functions supported in this diagram (functional if equipped)

VEHICLE	YEARS	Immobilizer bypass	T-Harness available (sold separately)	Lock	Unlock	Arm	Disarm	Heated Seats**	Rear Defrost**	RAP Disable	Parking Lights***	Tachometer	Door Status	Trunk Status	Hood Status*	Hand-Brake Status	Foot-Brake Status	Active OEM Remote Start	R.S. OEM remote Stand Alone compatible	
FORD Expedition	2018-2020	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•

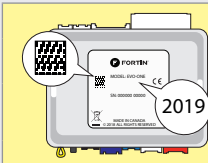
COMPATIBLE MODULE REQUIRED:
QR CODE ON THE LABEL MANUFACTURED AFTER: 2019
FIRMWARE VERSION
58.[02]
MINIMUM

 To add the firmware version and the options, use the **FLASH LINK UPDATER** or **FLASH LINK MOBILE** tool, sold separately.

Program bypass option:
UNIT OPTION
DESCRIPTION
C1

OEM Remote status (Lock/Unlock) monitoring

IF THE VEHICLE IS NOT EQUIPPED WITH FUNCTIONAL HOOD PIN:
A11
OFF

Hood trigger (Output Status).


Program remote starter option for R.S. OEM REMOTE STAND ALONE:
FUNCTION
MODE
DESCRIPTION
38
2

Enable Press 3x Lock to remote start with the OEM remote.

NOTES

The vehicles OEM remote and SmartKey are still operable during remote start.

****Heated seats** The heated seats and rear defrost activate automatically when it cold.

*****Parking Lights** The parking Lights at remote start only.


The vehicle must be equipped with the OEM remote with the door locks.

MANDATORY INSTALL
*** HOOD PIN**

HOOD STATUS : THE HOOD PIN SWITCH (INCLUDED) MUST BE INSTALLED IF THE VEHICLE CAN BE REMOTE STARTED WITH THE HOOD OPEN, SET FUNCTION A11 TO OFF.

A11
OFF
SECURITY STICKER


Included

Notice: the installation of safety elements are mandatory. The hood pin and the sticker are essential security elements and must be installed.

THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.

DESCRIPTION | DESCRIPTION

	Parts required (Not included)	PAGE
--	-------------------------------	------

WIRE TO WIRE DIAGRAM

		Page 3
--	--	--------

THARNESS DIAGRAM



THARNESS THAR-FOR3	1x THAR-FOR3	1x THAR-FOR3	Page 4
--------------------	--------------	--------------	--------

EXPÉDITION




② Parking Lights switch


① Gateway module, Behind OBD-II connector

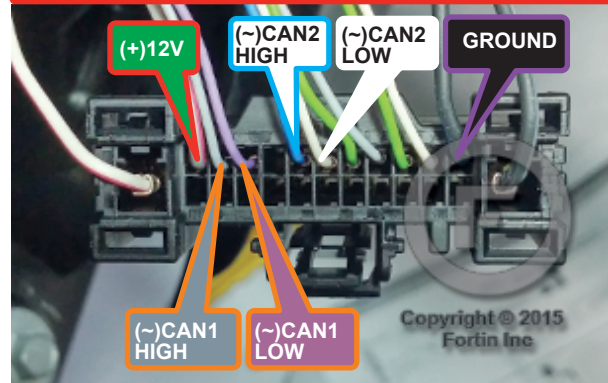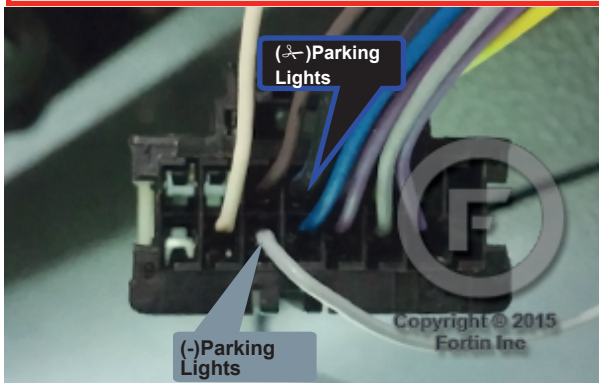

AUTOMATIC TRANSMISSION WIRING CONNECTION |

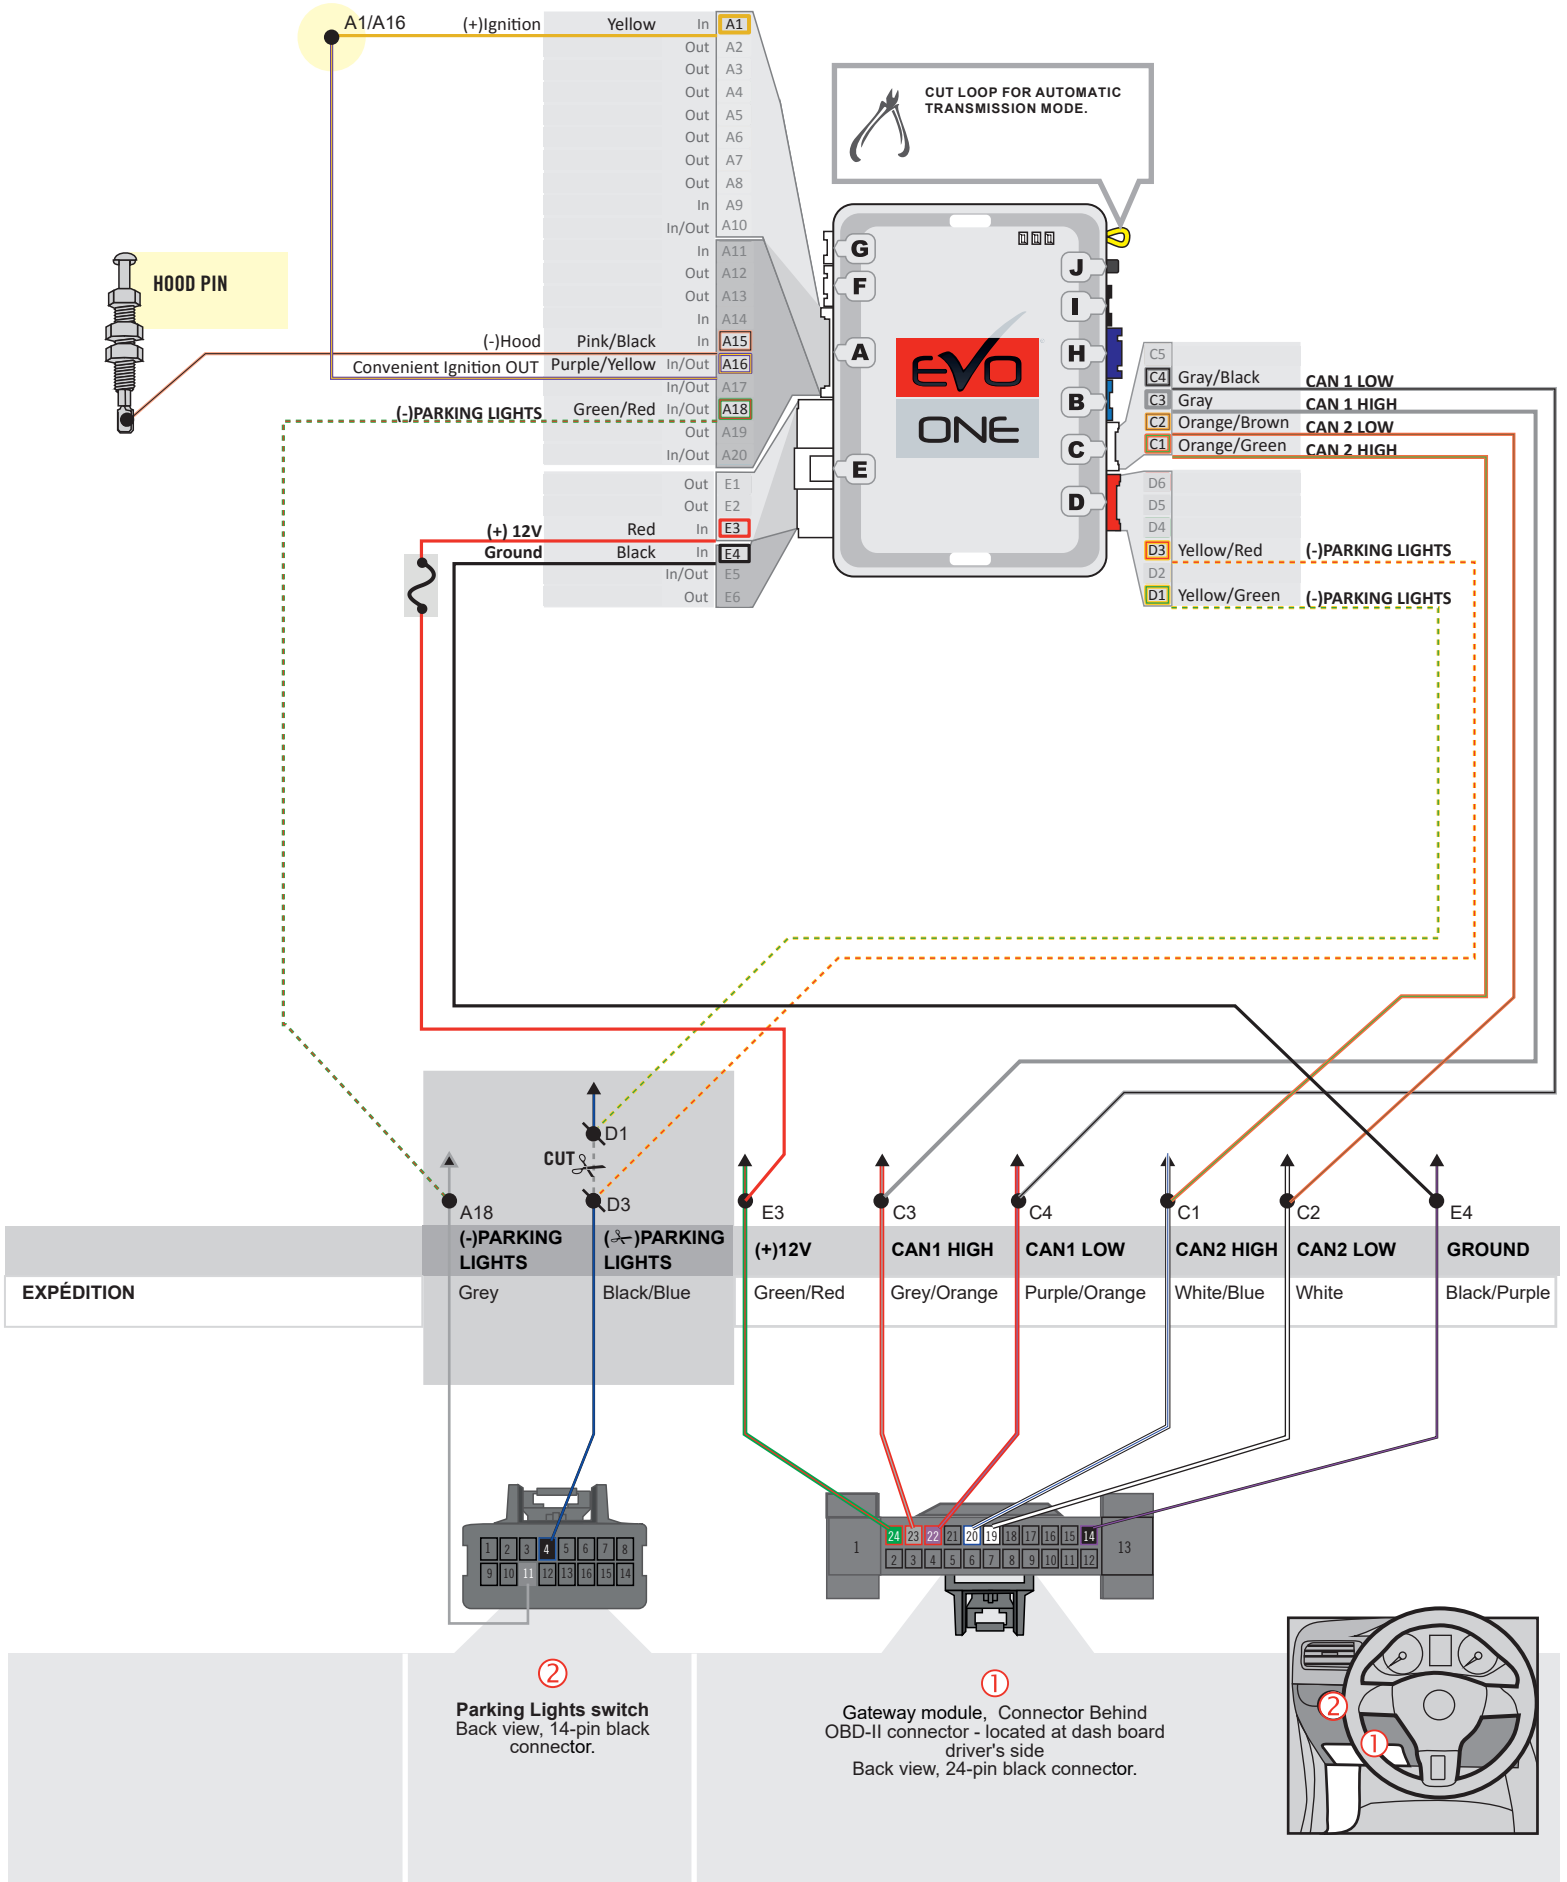

THAR-FOR3 | T-HARNESS - AUTOMATIC TRANSMISSION |

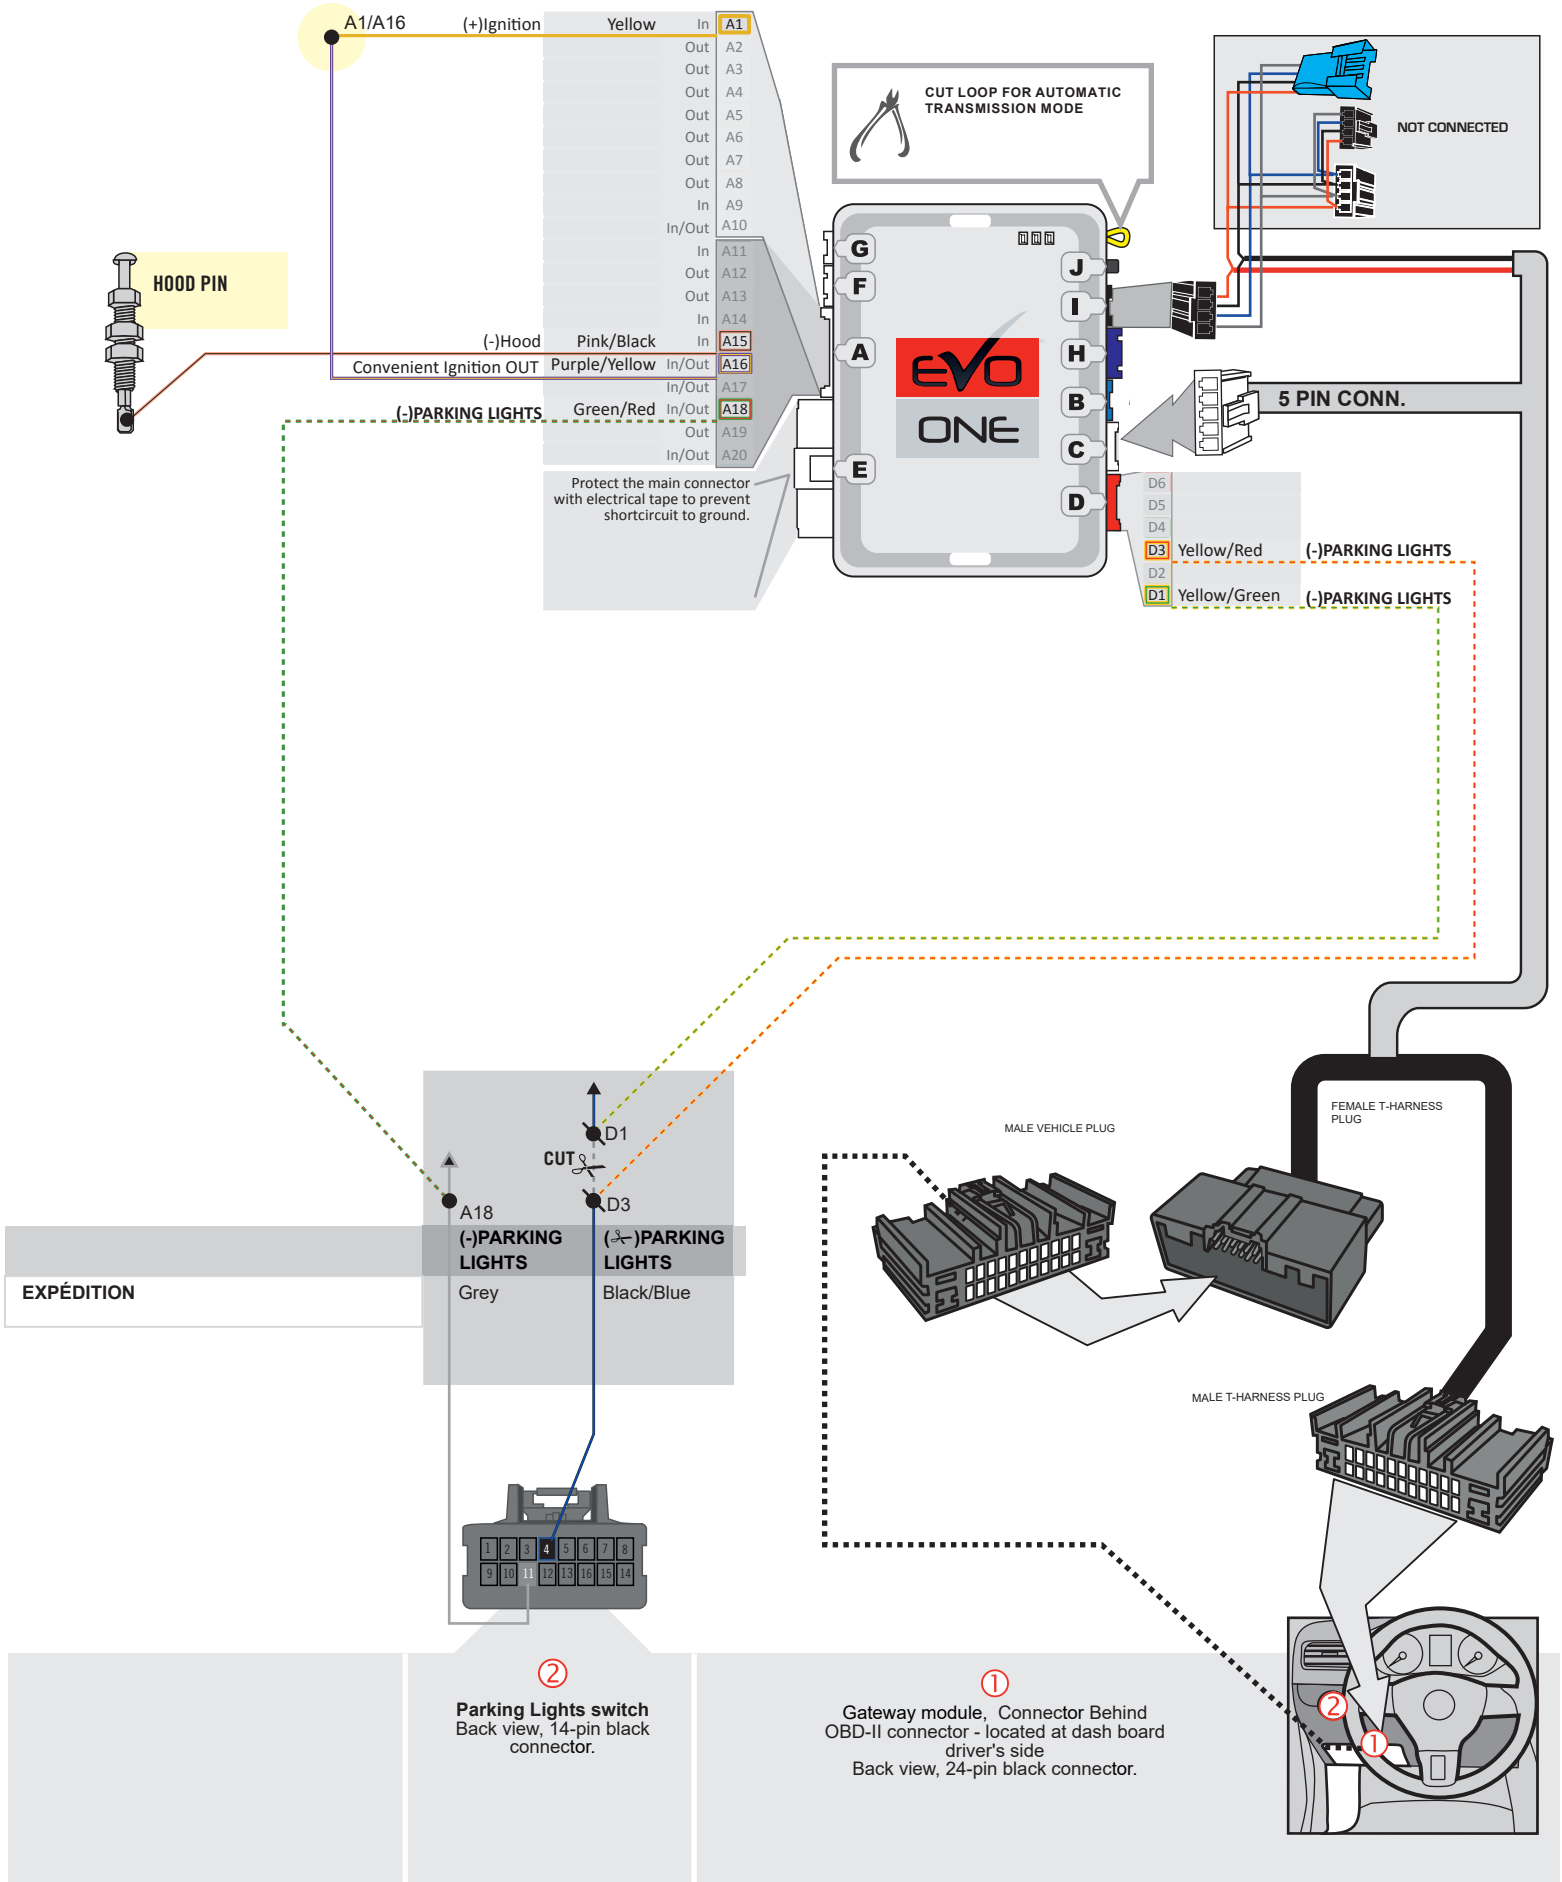

EXPÉDITION

②

Parking Lights switch
Back view, 14-pin black connector.

①

Gateway module, Connector Behind OBD-II connector - located at dash board driver's side
Back view, 24-pin black connector.

DCRYPTOR PROGRAMMING PROCEDURE |



Parts required (not included)


- 1x FLASH LINK UPDATER, SOFTWARE | PROGRAMME
- 1x FLASH LINK MANAGER
- 1x Microsoft Windows Computer with Internet connection

OR

- 1x FLASH LINK MOBILE
- 1x FLASH LINK MOBILE APP
- 1x Smartphone Android or iOS with Internet connection (Internet provider charges may apply)


BEFORE PROGRAMMING SET THE UNIT OPTIONS AND SAVE.

1

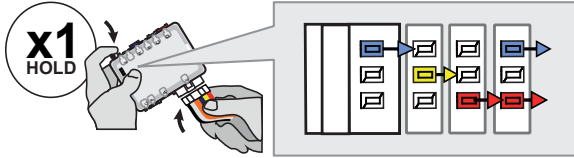

Press and hold the programming button:
Insert the 6-Pin Main connector.


WITH T-HARNES

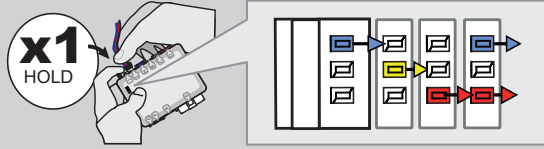

Press and hold the programming button:
Connect the 4-PIN Data-link harness (Black connector).


↳ The LEDs will alternate between BLUE, RED, YELLOW & BLUE/RED flashes.

2

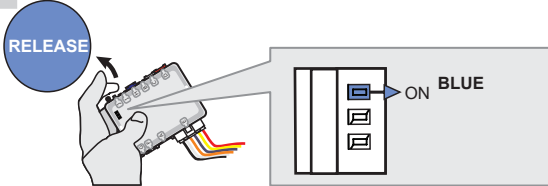


Release the programming button when the BLUE LED is ON.

 If the BLUE LED is not ON solid **disconnect** the 6-Pin Main connector and go back to step 1.




WITH T-HARNES AVEC

 If the LED is not solid BLUE disconnect the 4 Pin connector (Data-Link) and go back to step 1.




3

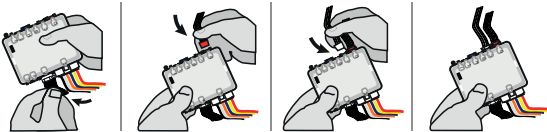

Insert the required remaining connectors.

4

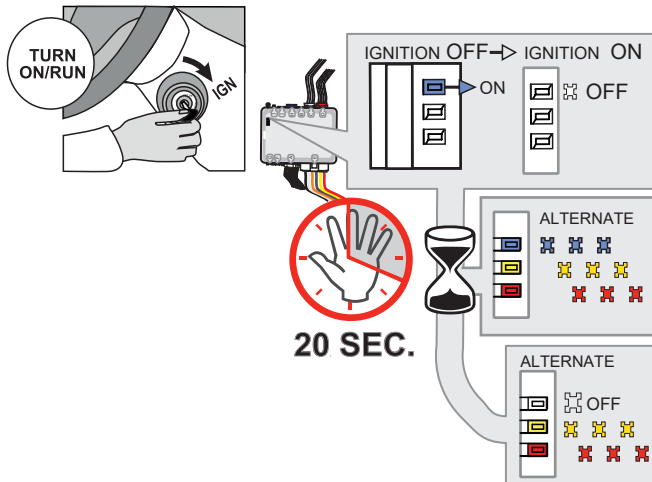

Turn the key to the Ignition ON/RUN position.

↳ The BLUE LED will turn OFF.

↳ The BLUE, YELLOW and RED LEDs will alternate.

Wait, at least 20 seconds, do not disconnect the modules or turn off the ignition.

↳ The RED and YELLOW LEDs will alternate.


Make sure that the DELs are flashing RED and YELLOW before continuing programming.

clignotent ROUGE et JAUNE



KEY BYPASS PROGRAMMING PROCEDURE 2/2 |


5

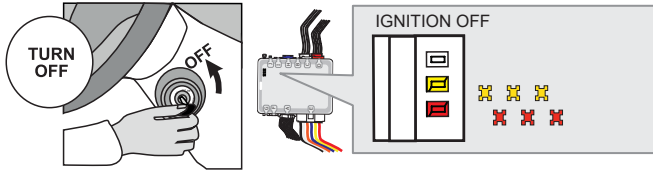

Turn the key to the OFF position.


↳ The RED and YELLOW LEDs alternate.

6

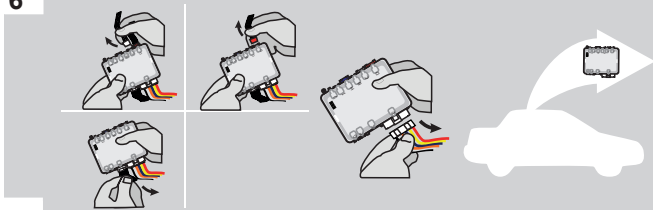

Disconnect all connectors and after the 6-Pin (Main-Harness) or the 4-Pin Data-link connector.


7

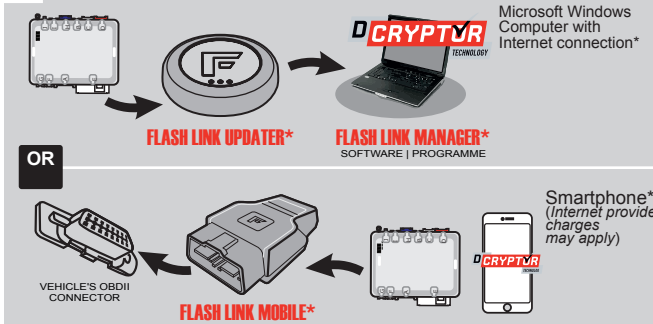


Use the tool: FLASH LINK UPDATER or FLASH LINK MOBILE to visit the DCryptor menu.

*Parts required (not included)

8

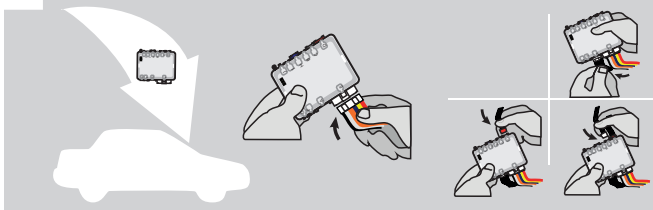


AFTER DCRYPTOR PROGRAMMING COMPLETED Go back to the vehicle and reconnect the 6-Pin (Main-Harness) or the 4-Pins (Data-Link) connector and after all the remaining connector.

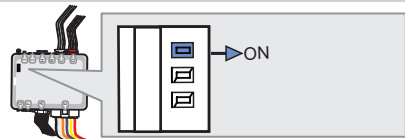

↳ The BLUE LED will turn ON.

9

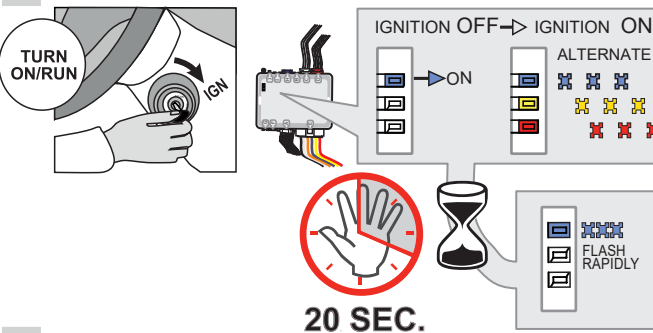


Turn the key to the Ignition ON/RUN position.

↳ The BLUE, YELLOW and RED LEDs will alternate.

Wait, at least 20 seconds, do not disconnect the modules or turn off the ignition.

↳ The BLUE LED will flash rapidly.

10

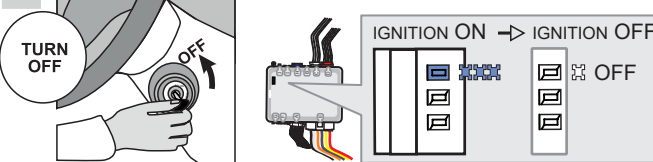

Turn the key to the OFF position.

↳ The BLUE will turn OFF.




The module is now programmed.

REMOTE STARTER PROGRAMMING PROCEDURE |



REFER TO THE **QUICK INSTALL GUIDE** INCLUDED WITH THE MODULE FOR THE REMOTE STARTER PROGRAMMING.

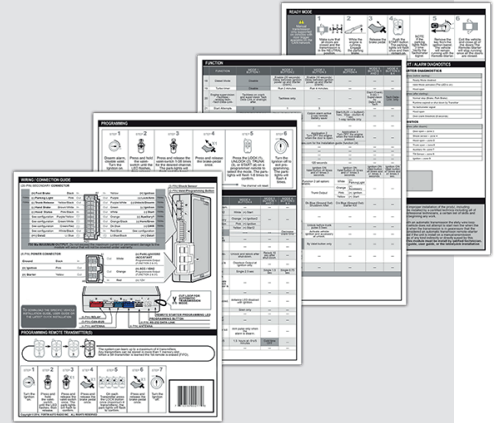

REMOTE STARTER FUNCTIONALITY |



All doors must be closed.



Remote start the vehicle.



Unlock the doors with the remote-starter remote or the OEM remote.



Insert and Turn the key to the Ignition ON/RUN position.



Press the brake pedal.



The vehicle can now be put in to gear and driven.

REGULAR & THAR-FOR3 INSTALLATION

ADDENDUM - SUGGESTED WIRING CONFIGURATION



ONLY COMPATIBLE WITH AUTOMATIC TRANSMISSION VEHICLES.

Vehicle functions supported in this diagram (functional if equipped)

VEHICLE	YEARS	Immobilizer bypass	T-Harness available (sold separately)	Lock	Unlock	Arm	Disarm	Heated Seats**	Rear Defrost**	RAP Disable	Parking Lights***	Tachometer	Door Status	Trunk Status	Hood Status*	Hand-Brake Status	Foot-Brake Status	Active OEM Remote Start	R.S. OEM remote Stand Alone compatible	
FORD Expedition	Push-to-Start 2018-2020	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•



COMPATIBLE MODULE REQUIRED:

QR CODE ON THE LABEL MANUFACTURED AFTER: 2019

FIRMWARE VERSION

58.[02]

MINIMUM

To add the firmware version and the options, use the **FLASH LINK UPDATER** or **FLASH LINK MOBILE** tool, sold separately.

UNIT OPTION	DESCRIPTION
C1	OEM Remote status (Lock/Unlock) monitoring
D6	Push-to-Start
A11	<div style="display: flex; align-items: center;"> <div style="margin-right: 10px;">IF THE VEHICLE IS NOT EQUIPPED WITH FUNCTIONAL HOOD PIN:</div> <div style="background-color: red; color: white; padding: 2px 5px; border-radius: 3px;">OFF</div> </div> Hood trigger (Output Status).

FUNCTION	MODE	DESCRIPTION
38	2	Enable Press 3x Lock to remote start with the OEM remote.

NOTES

The vehicles OEM remote and SmartKey are still operable during remote start.

**Heated seats The heated seats and rear defrost activate automatically when it cold.

**Rear Defrost

***Parking Lights The parking Lights at remote start only.

MANDATORY INSTALL

* **HOOD PIN**

HOOD STATUS: THE HOOD PIN SWITCH (INCLUDED) MUST BE INSTALLED IF THE VEHICLE CAN BE REMOTE STARTED WITH THE HOOD OPEN, SET FUNCTION A11 TO OFF.

A11

OFF
NON

SECURITY STICKER

Included

Notice: the installation of safety elements are mandatory. The hood pin and the sticker are essential security elements and must be installed.

Notice: l'installation des éléments de

THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.

DESCRIPTION | DESCRIPTION

	Parts required (Not included)	PAGE
--	-------------------------------	------

WIRE TO WIRE DIAGRAM

		Page 3
--	--	--------


THARNESS DIAGRAM

THARNESS THAR-FOR3	1x THAR-FOR3	1x THAR-FOR3	Page 4
--------------------	--------------	--------------	--------


EXPÉDITION




② Parking Lights switch

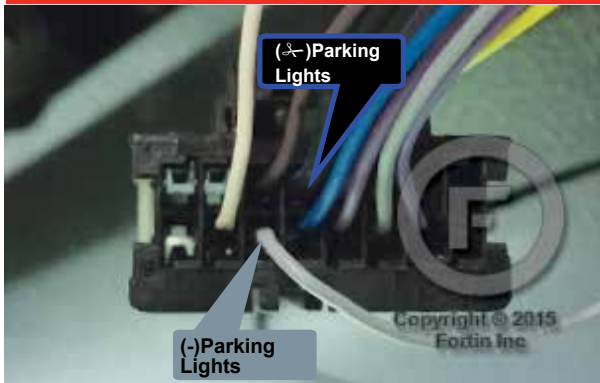


① Gateway module, Behind OBD-II connector

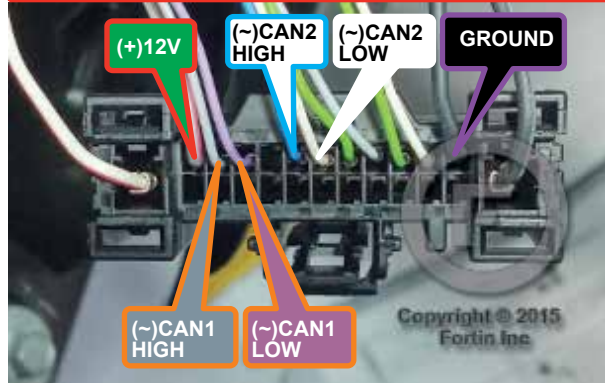

AUTOMATIC TRANSMISSION WIRING CONNECTION |

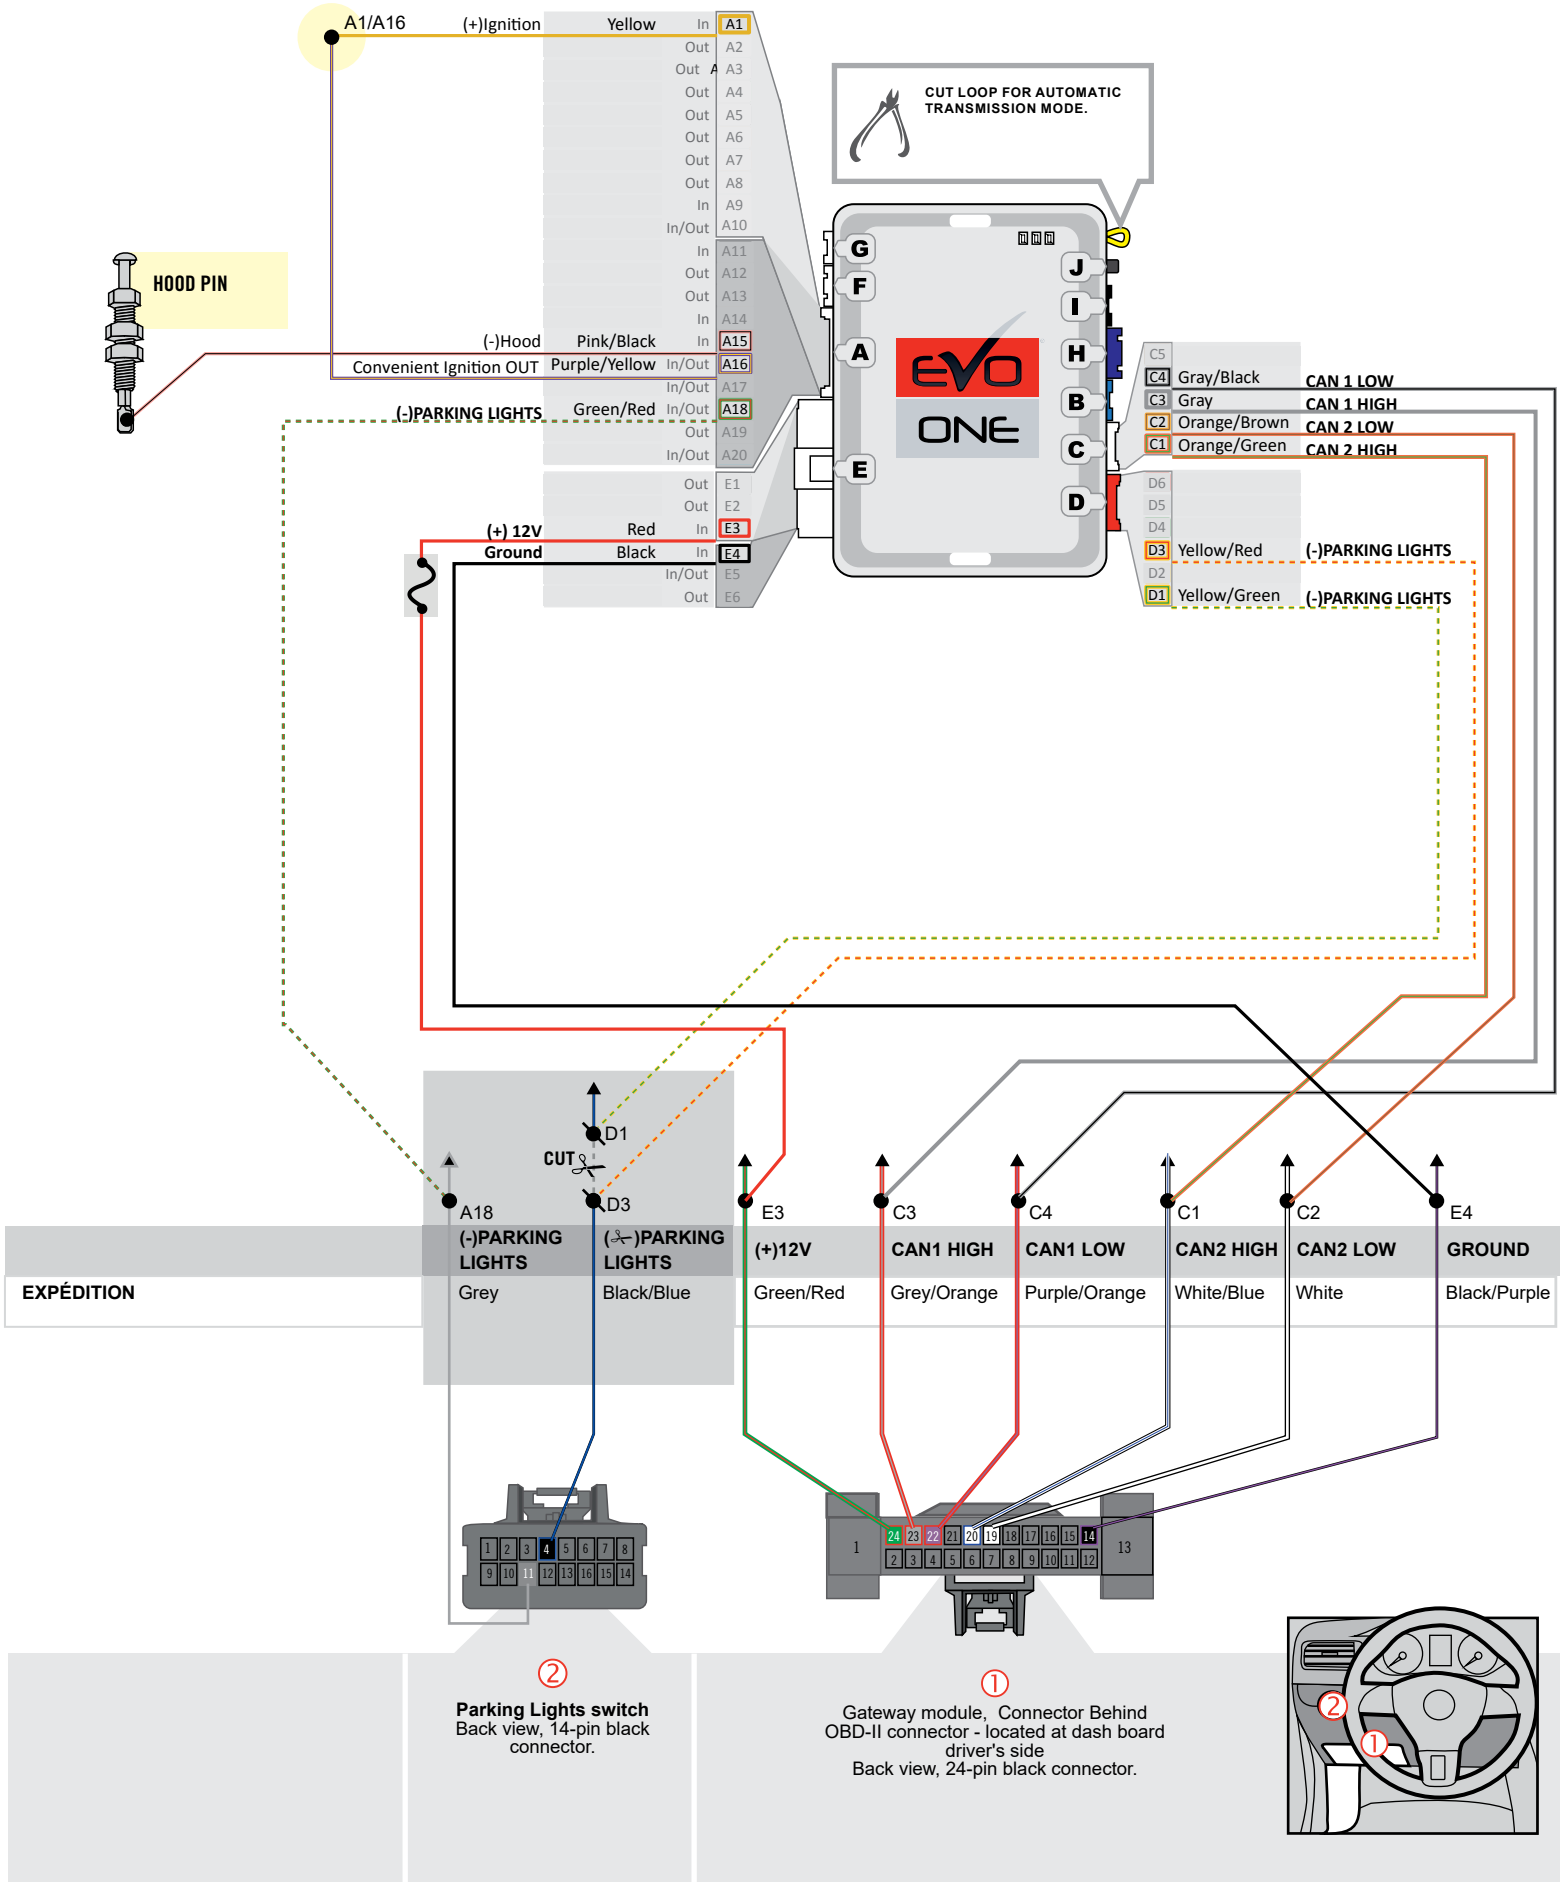


THAR-FOR3 | T-HARNESS - AUTOMATIC TRANSMISSION |

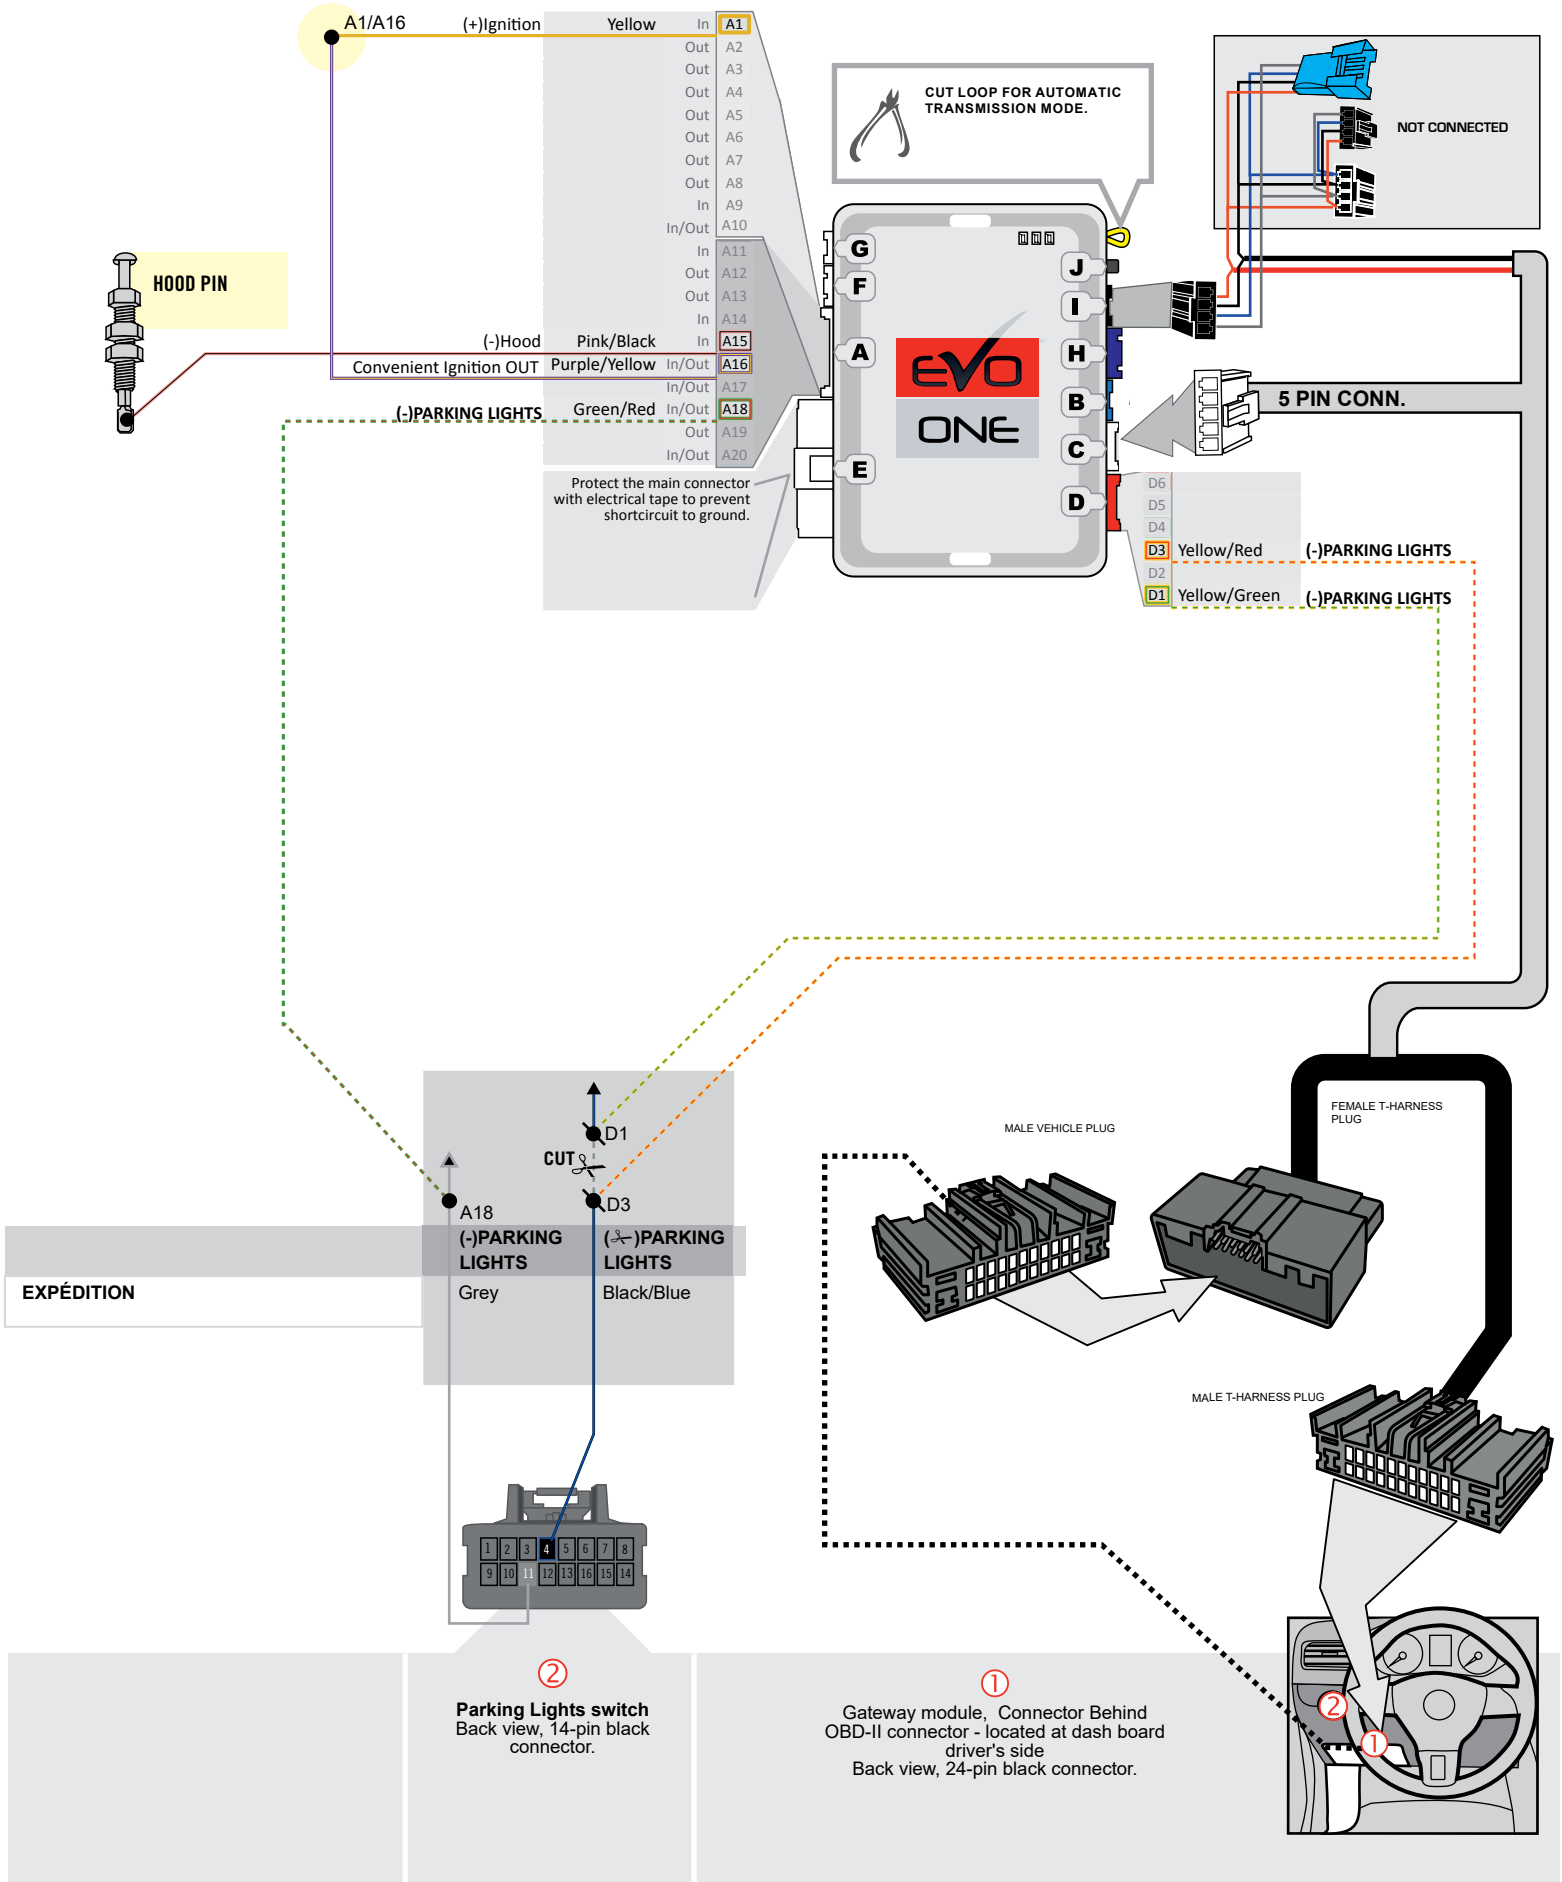

② Parking Lights switch
Back view, 14-pin black connector.

① Gateway module, Connector Behind OBD-II connector - located at dash board driver's side
Back view, 24-pin black connector.

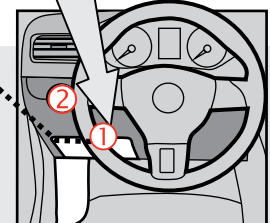

DCRYPTOR PROGRAMMING PROCEDURE |



Parts required (not included)


- 1x FLASH LINK UPDATER,
- 1x FLASH LINK MANAGER SOFTWARE | PROGRAMME
- 1x Microsoft Windows Computer with Internet connection

OR

- 1x FLASH LINK MOBILE
- 1x FLASH LINK MOBILE APP
- Smartphone Android or iOS with Internet connection (Internet provider charges may apply)


BEFORE PROGRAMMING SET THE UNIT OPTIONS AND SAVE.

1

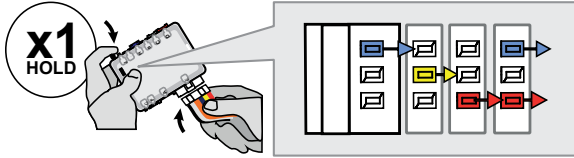

Press and hold the programming button:
Insert the 6-Pin Main connector.


WITH T-HARNESS

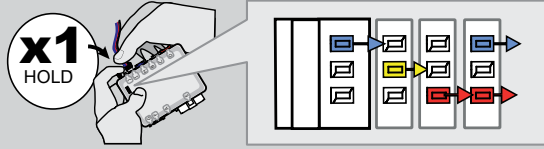

Press and hold the programming button:
Connect the 4-PIN Data-link harness (Black connector).


↳ The LEDs will alternate between BLUE, RED, YELLOW & BLUE/RED flashes.

2

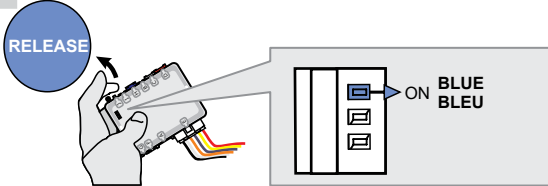


Release the programming button when the BLUE LED is ON.

 If the BLUE LED is not ON solid disconnect the 6-Pin Main connector and go back to step 1.




WITH T-HARNESS

 If the LED is not solid BLUE disconnect the 4 Pin connector (Data-Link) and go back to step 1.




3

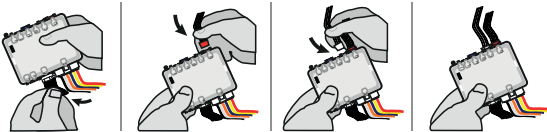

Insert the required remaining connectors.

4

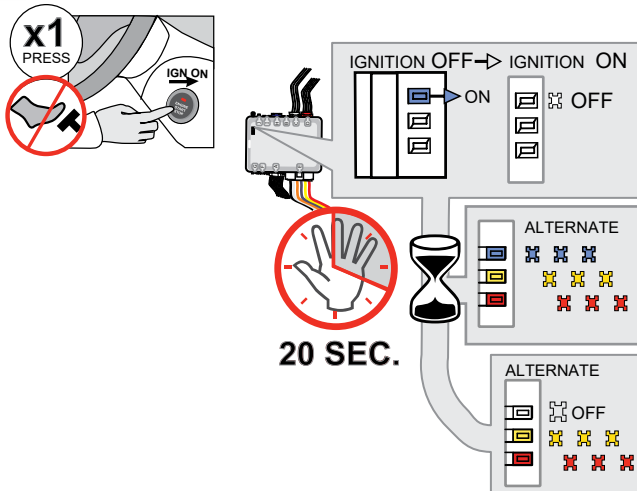

Do not press the brake pedal. **Press** the Push-to-Start button once to turn on the ignition.

 
↳ The BLUE LED will turn OFF.

↳ The BLUE, YELLOW and RED LEDs will alternate.

Wait, at least 20 seconds, do not disconnect the modules or turn off the ignition.


↳ The RED and YELLOW LEDs will alternate.

Make sure that the DELs are flashing RED and YELLOW before continuing programming.



KEY BYPASS PROGRAMMING PROCEDURE 2/2 |


5

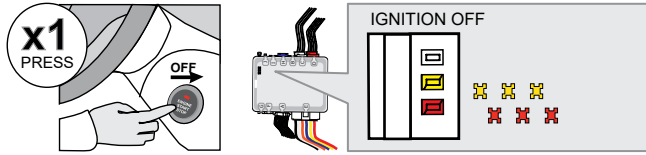

Press the Push-to-Start button once to turn off the ignition.


↳ The RED and YELLOW LEDs alternate.

6

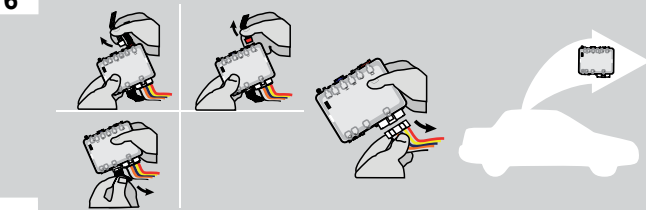

Disconnect all connectors and after the 6-Pin (Main-Harness) or the 4-Pin Data-link connector.


7

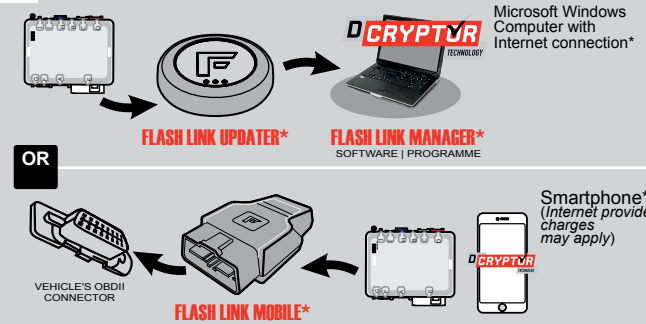


Use the tool: FLASH LINK UPDATER or FLASH LINK MOBILE to visit the DCryptor menu.

*Parts required (not included)

8

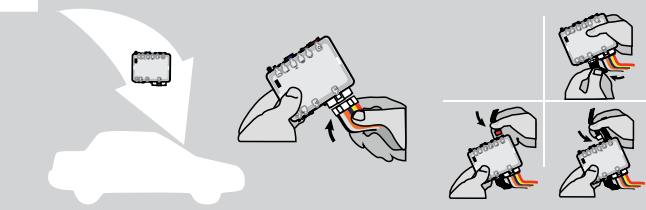


AFTER DCRYPTOR PROGRAMMING COMPLETED Go back to the vehicle and reconnect the 6-Pin (Main-Harness) or the 4-pins (Data-Link) connector and after all the remaining connector.

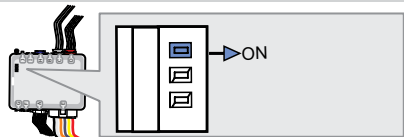

↳ The BLUE LED will turn ON.

9

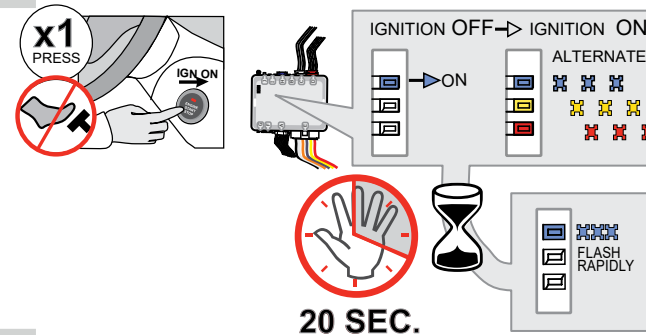


Do not press the brake pedal. Press the Push-to-Start button once to turn on the ignition.

↳ The BLUE, YELLOW and RED LEDs will alternate.

Wait, at least 20 seconds, do not disconnect the modules or turn off the ignition.

↳ The BLUE LED will flash rapidly.

10

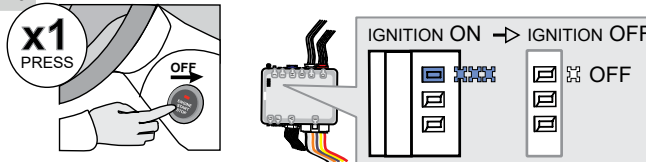

Press the Push-to-Start button once to turn off the ignition.

↳ The BLUE will turn OFF.




The module is now programmed.

REMOTE STARTER PROGRAMMING PROCEDURE |



REFER TO THE **QUICK INSTALL GUIDE** INCLUDED WITH THE MODULE FOR THE REMOTE STARTER PROGRAMMING.

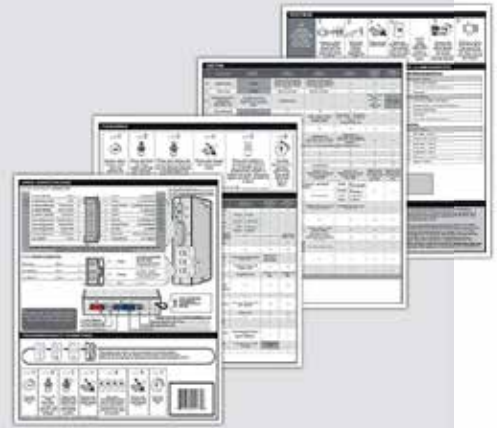

REMOTE STARTER FUNCTIONALITY |



All doors must be closed.

 


Remote start the vehicle.



Unlock the doors with either:

- The OEM remote
- The remote-starter remote
- Or the proximity remote



Enter the vehicle with the SMART-KEY.



DO NOT PRESS THE BRAKE PEDAL.

Press and release the Push-to-Start button once.



Press the brake pedal. The vehicle can now be put in to gear and driven.

If the Smart-Key is not detected the vehicle will shut down.


REGULAR & THAR-FOR3 INSTALLATION

ADDENDUM - SUGGESTED WIRING CONFIGURATION


ONLY COMPATIBLE WITH AUTOMATIC TRANSMISSION VEHICLES.

Vehicle functions supported in this diagram (functional if equipped)

VEHICLE	YEARS	Immobilizer bypass	T-Harness available (sold separately)	Lock	Unlock	Arm	Disarm	Heated Seats**	Rear Defrost**	RAP Disable	Parking Lights****	Tachometer	Door Status	Trunk Status	Hood Status*	Hand-Brake Status	Foot-Brake Status	Active OEM Remote Start	R.S. OEM remote Stand Alone compatible	
FORD Explorer	Key 2020	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•

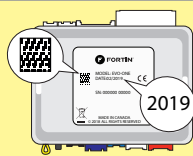
COMPATIBLE MODULE REQUIRED:

2019

QR CODE ON THE LABEL MANUFACTURED AFTER: 2019
FIRMWARE VERSION
58.[02]
MINIMUM

 To add the firmware version and the options, use the **FLASH LINK UPDATER** or **FLASH LINK MOBILE** tool, sold separately.

Program bypass option:
UNIT OPTION
C1
DESCRIPTION

OEM Remote status (Lock/Unlock) monitoring

IF THE VEHICLE IS NOT EQUIPPED WITH FUNCTIONAL HOOD PIN:
A11
OFF

Hood trigger (Output Status).


Program remote starter option for R.S. OEM REMOTE STAND ALONE:
FUNCTION
38
MODE
2
DESCRIPTION

Enable Press 3x Lock to remote start with the OEM remote.

NOTES

The vehicles OEM remote and SmartKey are still operable during remote start.

****Heated seats** The heated seats and rear defrost activate automatically when it cold.

*****Parking Lights** The parking Lights at remote start only.


The vehicle must be equipped with the OEM remote with the door locks.

MANDATORY INSTALL
*** HOOD PIN**

HOOD STATUS: THE HOOD PIN SWITCH (INCLUDED) MUST BE INSTALLED IF THE VEHICLE CAN BE REMOTE STARTED WITH THE HOOD OPEN, SET FUNCTION A11 TO OFF.

A11
OFF
SECURITY STICKER


Included

Notice: the installation of safety elements are mandatory. The hood pin and the sticker are essential security elements and must be installed.

THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.

DESCRIPTION |

	Parts required (Not included)	PAGE
--	-------------------------------	------


WIRE TO WIRE DIAGRAM |

		Page 3
--	--	--------



THARNESS DIAGRAM |

THARNESS THAR-FOR3	1x THAR-FOR3	Page 4
--------------------	--------------	--------


① Gateway module, located at dash board driver's side,

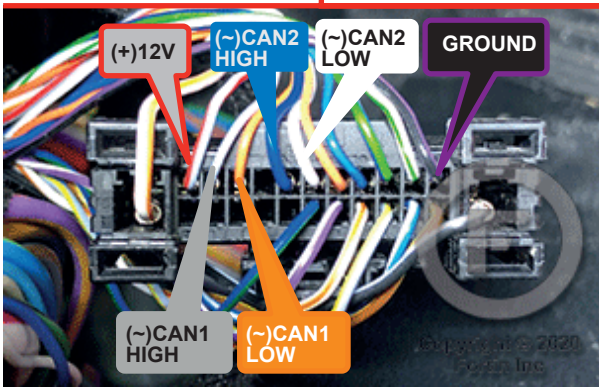


② Fuse box

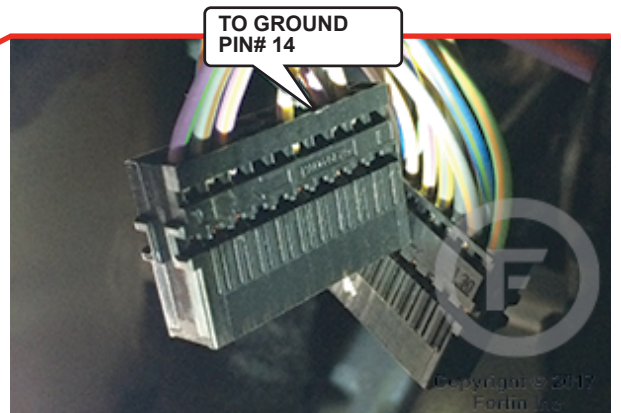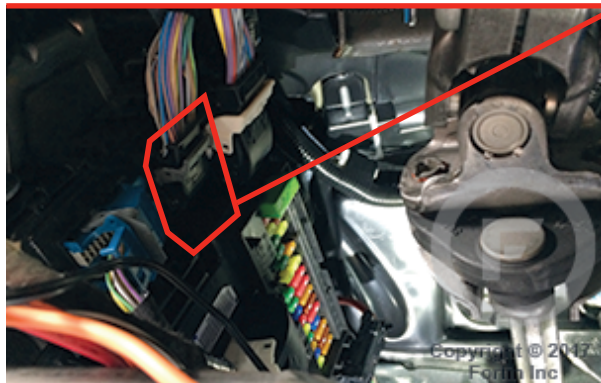

AUTOMATIC TRANSMISSION WIRING CONNECTION |



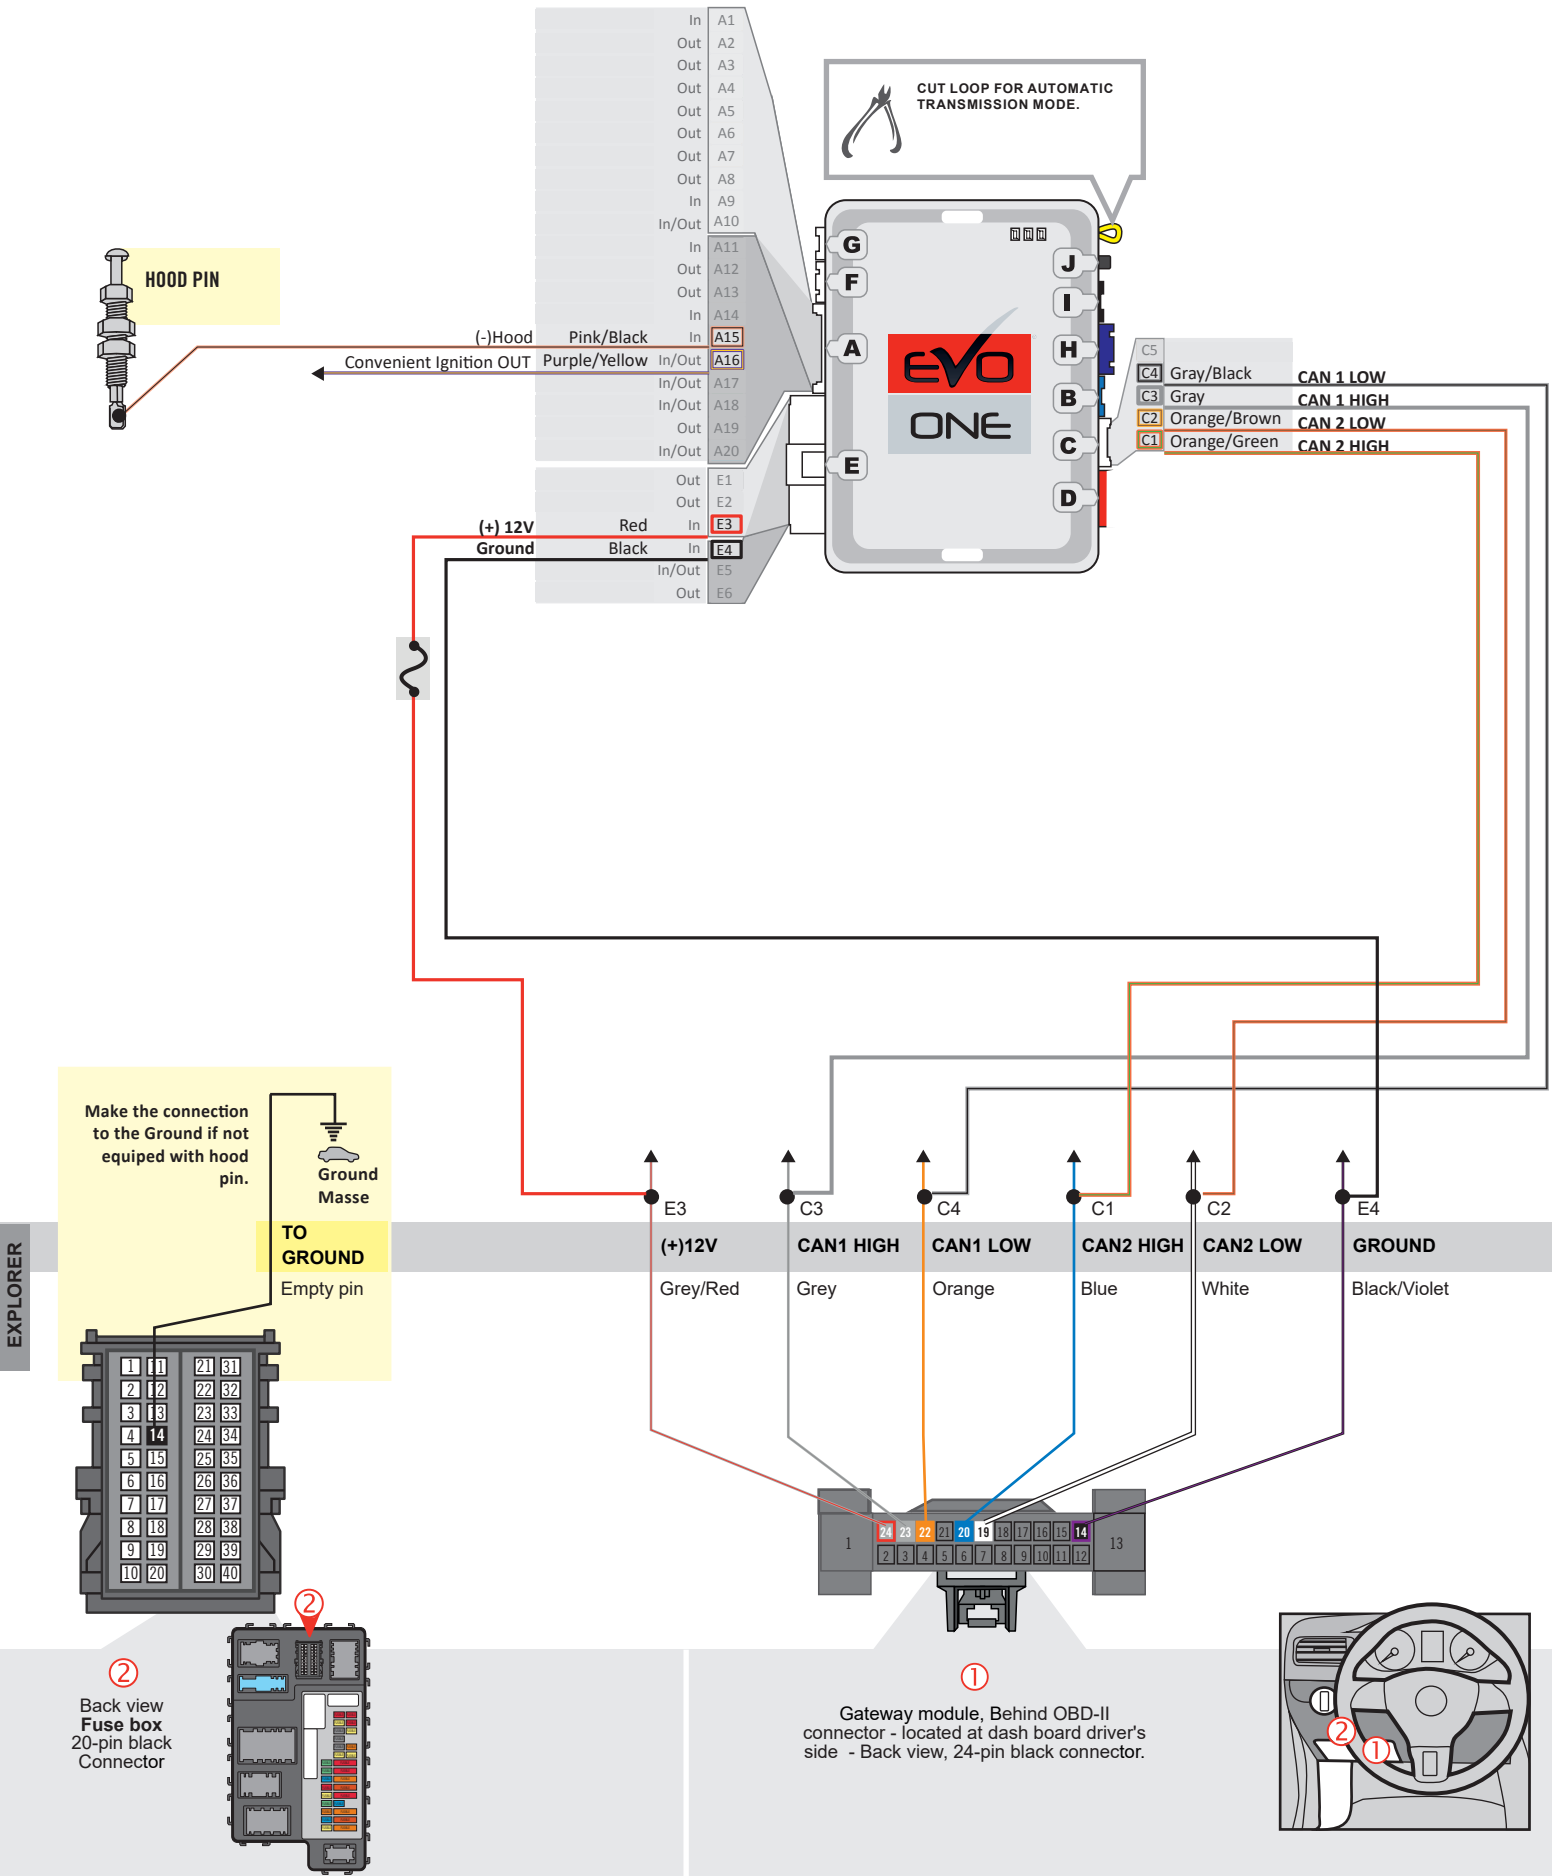


THAR-FOR3 | T-HARNESS - AUTOMATIC TRANSMISSION |

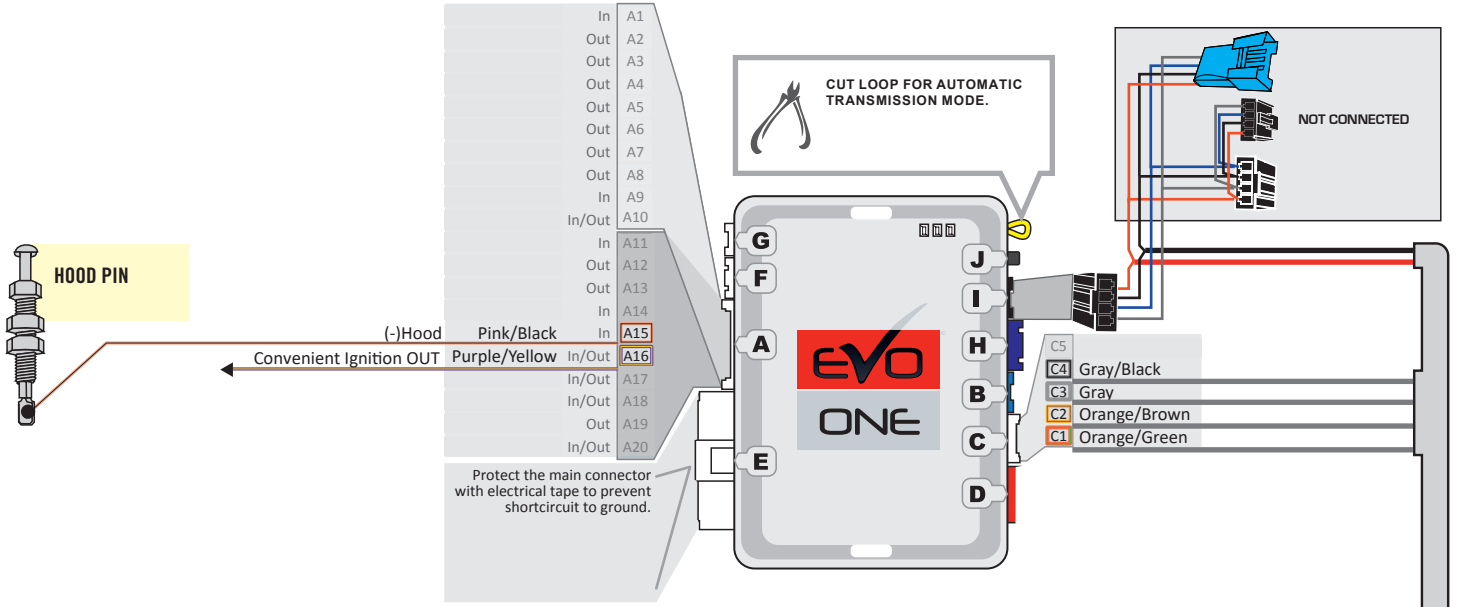

EXPLORER

Make the connection to the Ground if not equipped with hood pin.

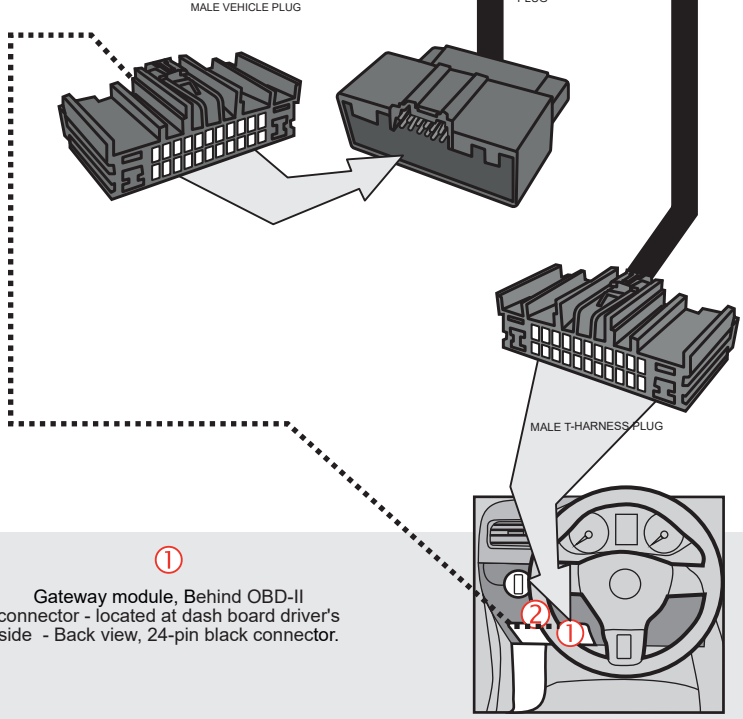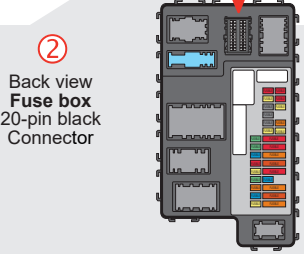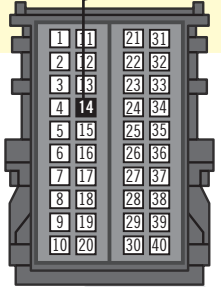

T-HARNESS - HARNAIS EN T
THAR-FOR3

DCRYPTOR PROGRAMMING PROCEDURE |



Parts required (not included)


- 1x FLASH LINK UPDATER, SOFTWARE | PROGRAMME
- 1x FLASH LINK MANAGER
- 1x Microsoft Windows Computer with Internet connection

OR

- 1x FLASH LINK MOBILE
- 1x FLASH LINK MOBILE APP
- 1x Smartphone Android or iOS with Internet connection (Internet provider charges may apply)


BEFORE PROGRAMMING SET THE UNIT OPTIONS AND SAVE.

1

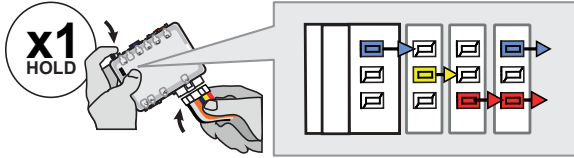

Press and hold the programming button:
Insert the 6-Pin Main connector.


WITH T-HARNES

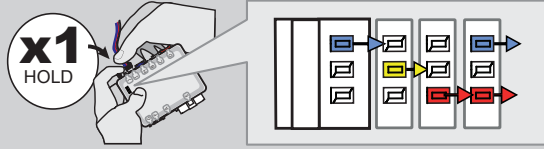

Press and hold the programming button:
Connect the 4-PIN Data-link harness (Black connector).


↳ The LEDs will alternate between BLUE, RED, YELLOW & BLUE/RED flashes.

2

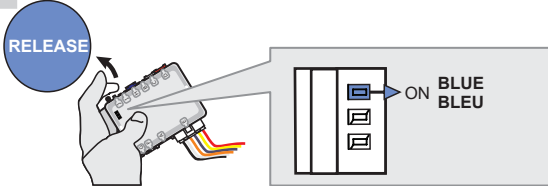


Release the programming button when the BLUE LED is ON.

 If the BLUE LED is not ON solid **disconnect** the 6-Pin Main connector and go back to step 1.




WITH T-HARNES EC

 If the LED is not solid BLUE disconnect the 4 Pin connector (Data-Link) and go back to step 1.




3

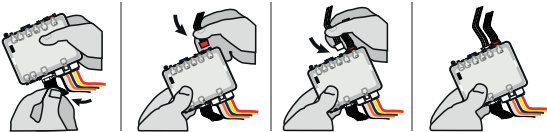

Insert the required remaining connectors.

4

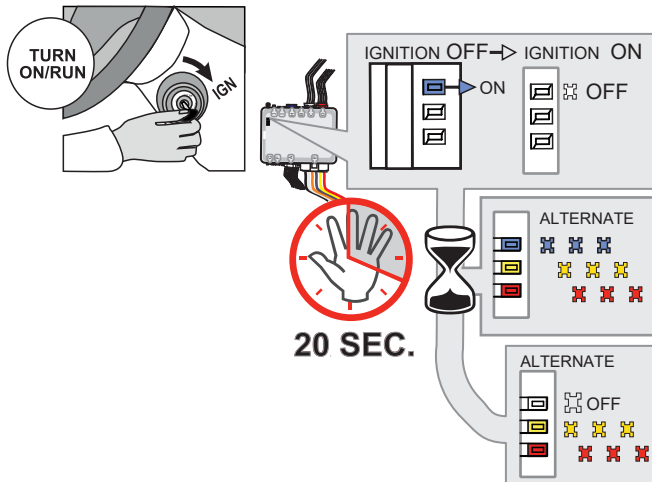

Turn the key to the Ignition ON/RUN position.

 
↳ The BLUE LED will turn OFF.

↳ The BLUE, YELLOW and RED LEDs will alternated.

Wait, at least 20 seconds, do not disconnect the modules or turn off the ignition.


↳ The RED and YELLOW LEDs will alternated.

Make sure that the DELs are flashing RED and YELLOW before continuing programming.



KEY BYPASS PROGRAMMING PROCEDURE 2/2 |


5

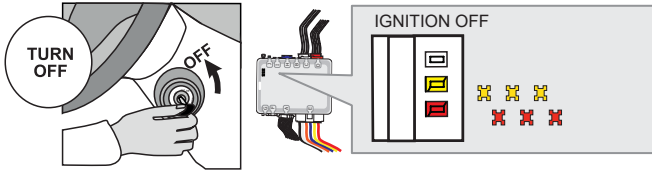

Turn the key to the OFF position.


↳ The RED and YELLOW LEDs alternate.

6

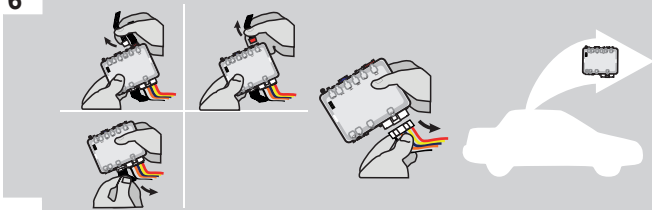

Disconnect all connectors and after the 6-Pin (Main-Harness) or the 4-Pin Data-link connector.


7

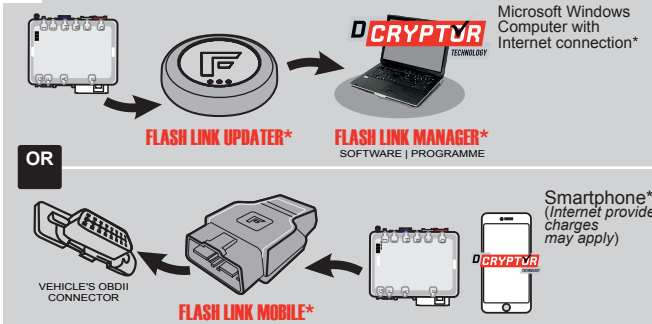


Use the tool: FLASH LINK UPDATER or FLASH LINK MOBILE to visit the DCryptor menu.

*Parts required (not included)

8

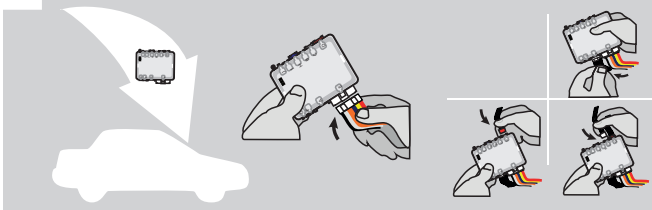


AFTER DCRYPTOR PROGRAMMING COMPLETED Go back to the vehicle and reconnect the 6-Pin (Main-Harness) or the 4-pins (Data-Link) connector and after all the remaining connector.

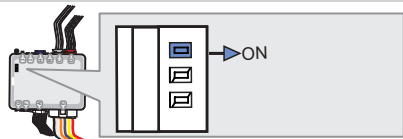

↳ The BLUE LED will turn ON.

9

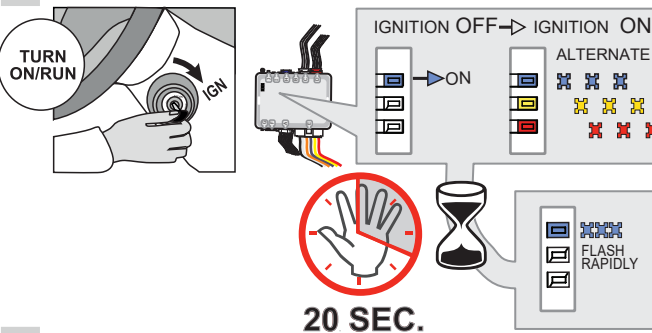


Turn the key to the Ignition ON/RUN position.

↳ The BLUE, YELLOW and RED LEDs will alternate.

Wait, at least 20 seconds, do not disconnect the modules or turn off the ignition.

↳ The BLUE LED will flash rapidly.

10

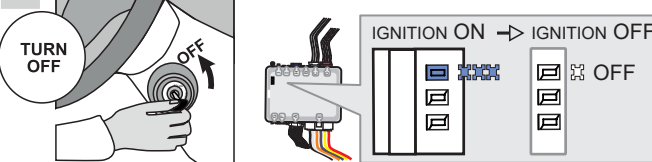

Turn the key to the OFF position.

↳ The BLUE will turn OFF.




The module is now programmed.

REMOTE STARTER PROGRAMMING PROCEDURE |



REFER TO THE **QUICK INSTALL GUIDE** INCLUDED WITH THE MODULE FOR THE REMOTE STARTER PROGRAMMING.

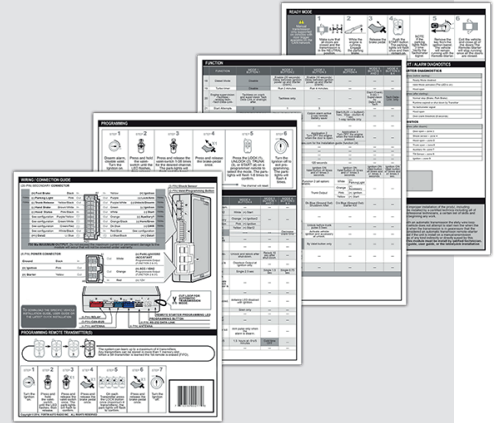

REMOTE STARTER FUNCTIONALITY |



All doors must be closed.



Remote start the vehicle.



Unlock the doors with the remote-starter remote or the OEM remote.



Insert and Turn the key to the Ignition ON/RUN position.



Press the brake pedal.



The vehicle can now be put in to gear and driven.

REGULAR & THAR-FOR3 INSTALLATION

ADDENDUM - SUGGESTED WIRING CONFIGURATION




ONLY COMPATIBLE WITH AUTOMATIC TRANSMISSION VEHICLES.



Vehicle functions supported in this diagram (functional if equipped)

VEHICLE	YEARS	Immobilizer bypass	T-Harness available (sold separately)	Lock	Unlock	Arm	Disarm	Heated Seats**	Rear Defrost**	RAP Disable	Parking Lights****	Tachometer	Door Status	Trunk Status	Hood Status*	Hand-Brake Status	Foot-Brake Status	Active OEM Remote Start	R.S. OEM remote Stand Alone compatible	
FORD																				
Explorer	Push-to-Start 2020	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•

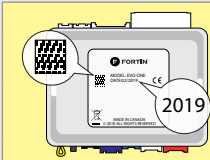

COMPATIBLE MODULE REQUIRED:

QR CODE ON THE LABEL MANUFACTURED AFTER: 2019

FIRMWARE VERSION

58.[02]
MINIMUM

To add the firmware version and the options, use the **FLASH LINK UPDATER** or **FLASH LINK MOBILE** tool, sold separately.



Program bypass option:

UNIT OPTION

DESCRIPTION

C1

OEM Remote status (Lock/Unlock) monitoring

D6

Push-to-Start

IF THE VEHICLE IS NOT EQUIPPED WITH FUNCTIONAL HOOD PIN:

A11

OFF

Hood trigger (Output Status).

NOTES

The vehicles OEM remote and SmartKey are still operable during remote start.

**Heated seats The heated seats and rear defrost activate automatically when it cold.

***Parking Lights The parking Lights at remote start only.

MANDATORY INSTALL

* HOOD PIN



HOOD STATUS: THE HOOD PIN SWITCH (INCLUDED) MUST BE INSTALLED IF THE VEHICLE CAN BE REMOTE STARTED WITH THE HOOD OPEN, SET FUNCTION A11 TO OFF.

A11

OFF

SECURITY STICKER



Included

Notice: the installation of safety elements are mandatory. The hood pin and the sticker are essential security elements and must be installed.

THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.

DESCRIPTION

	Parts required (Not included)	PAGE
--	-------------------------------	------


WIRE TO WIRE DIAGRAM

		Page 3
--	--	--------



THARNESS DIAGRAM

THARNESS THAR-FOR3	1x THAR-FOR3	Page 4
--------------------	--------------	--------


① Gateway module, located at dash board driver's side,

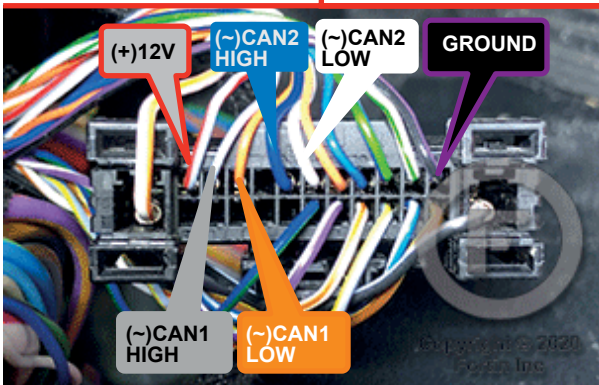


② Fuse box

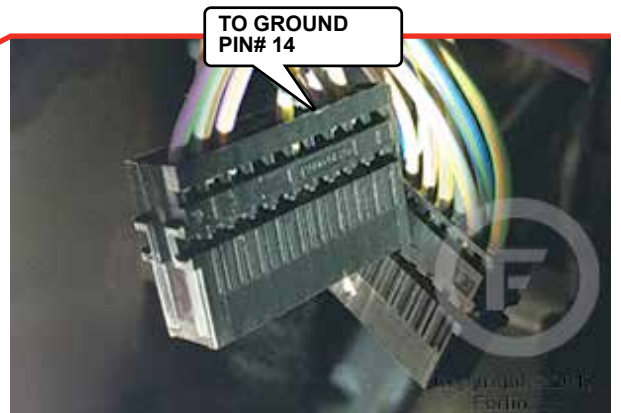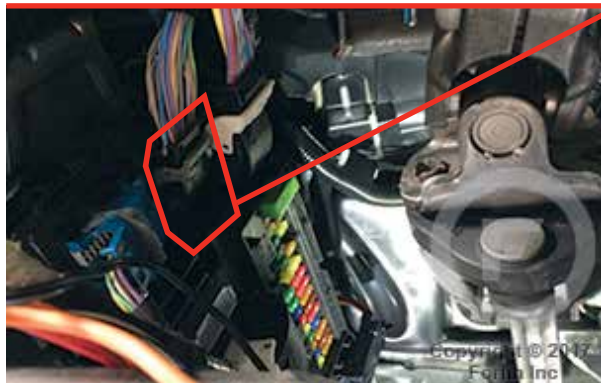

AUTOMATIC TRANSMISSION WIRING CONNECTION

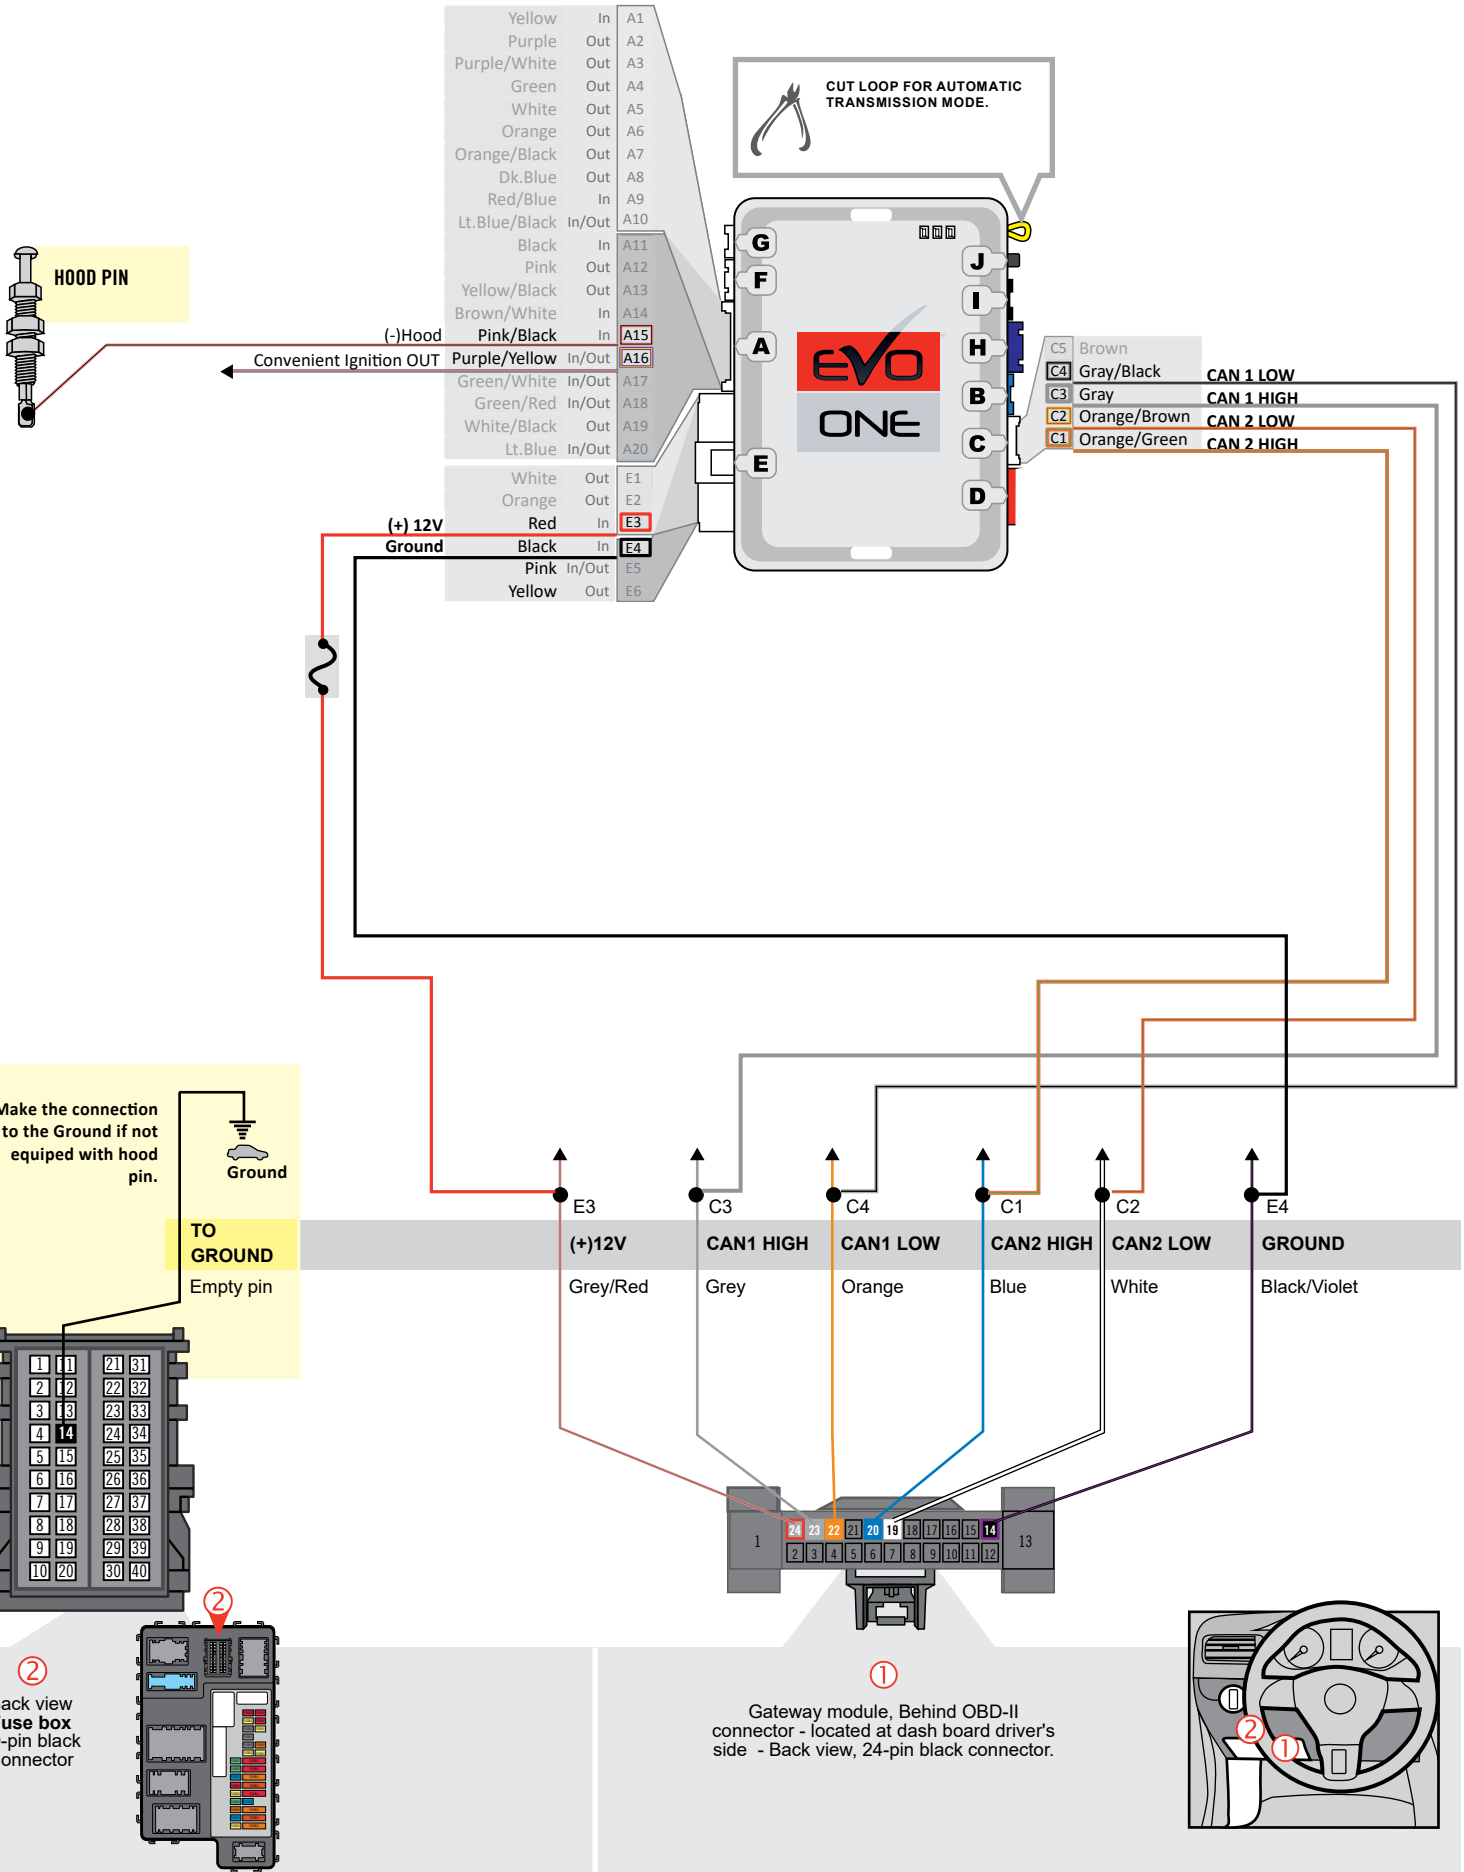



THAR-FOR3 | T-HARNESS - AUTOMATIC TRANSMISSION

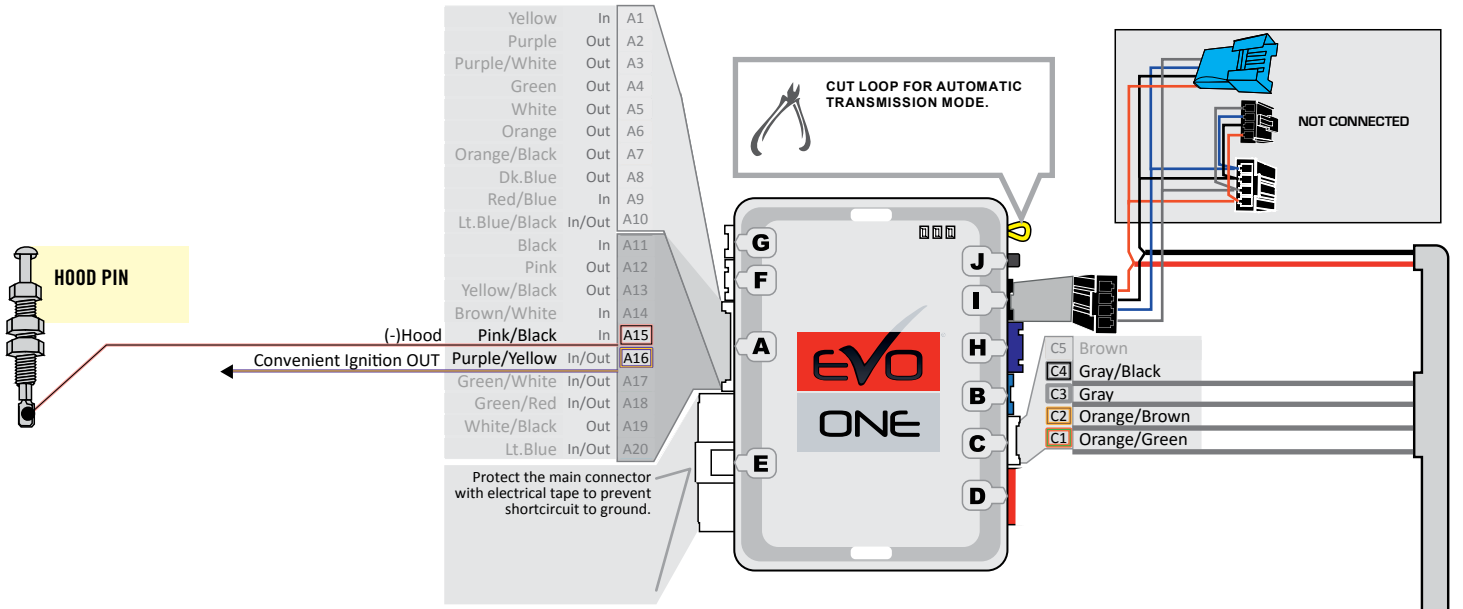


Make the connection to the Ground if not equipped with hood pin.



EXPLORER

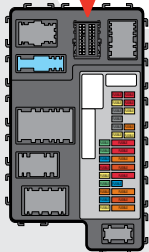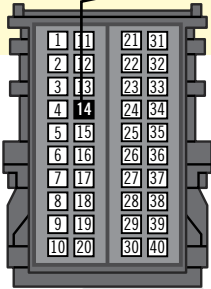

2 Back view Fuse box 20-pin black Connector

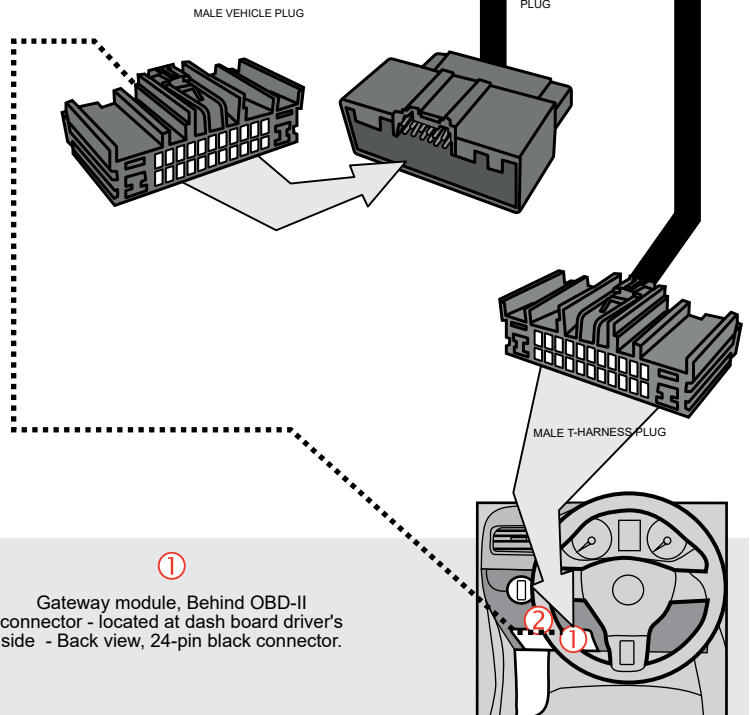

1 Gateway module, Behind OBD-II connector - located at dash board driver's side - Back view, 24-pin black connector.

T-HARNESS - HARNAIS EN T THAR-FOR3

DCRYPTOR PROGRAMMING PROCEDURE



Parts required (not included)


- 1x **FLASH LINK UPDATER,**
- 1x **FLASH LINK MANAGER**
SOFTWARE | PROGRAMME
- 1x Microsoft Windows Computer with Internet connection

OR

- 1x **FLASH LINK MOBILE**
- 1x **FLASH LINK MOBILE APP**
- 1x Smartphone Android or iOS with Internet connection
(Internet provider charges may apply)


BEFORE PROGRAMMING SET THE UNIT OPTIONS AND SAVE.

1

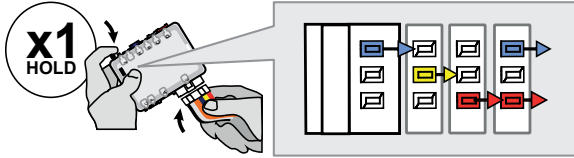

Press and hold the programming button:
Insert the 6-Pin Main connector.


WITH T-HARNESS
AVEC HARNAIS EN T

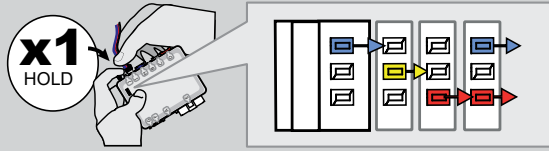

Press and hold the programming button:
Connect the 4-PIN Data-link harness (Black connector).


↳ The LEDs will alternate between BLUE, RED, YELLOW & BLUE/RED flashes.

2

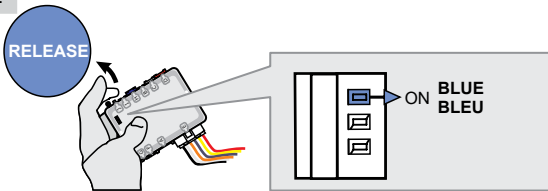


Release the programming button when the BLUE LED is ON.

 If the BLUE LED is not ON solid disconnect the 6-Pin Main connector and go back to step 1.




WITH T-HARNESS
AVEC HARNAIS EN T

 If the LED is not solid BLUE disconnect the 4 Pin connector (Data-Link) and go back to step 1.




3

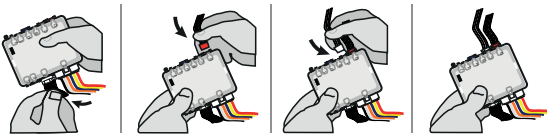

Insert the required remaining connectors.

4

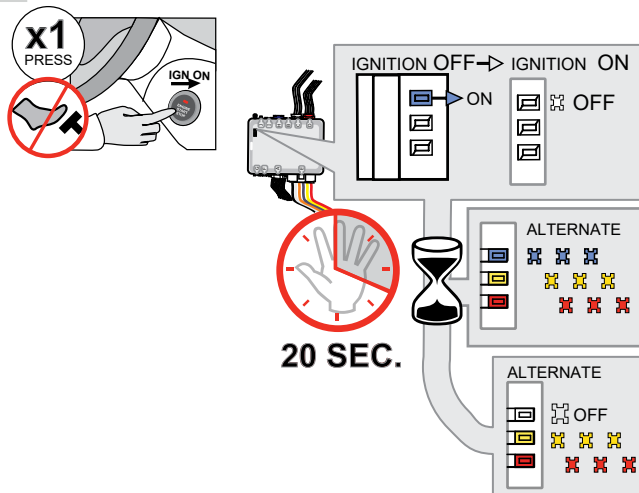

Do not press the brake pedal. **Press** the Push-to-Start button once to turn on the ignition.

 
↳ The BLUE LED will turn OFF.

↳ The BLUE, YELLOW and RED LEDs will alternated.

Wait, at least 20 seconds, do not disconnect the modules or turn off the ignition.


↳ The RED and YELLOW LEDs will alternated.

Make sure that the DELs are flashing RED and YELLOW before continuing programming.



KEY BYPASS PROGRAMMING PROCEDURE 2/2


5

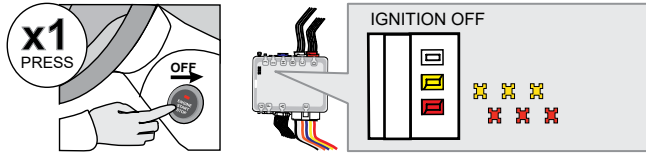

Press the Push-to-Start button once to turn off the ignition.


↳ The RED and YELLOW LEDs alternate.

6

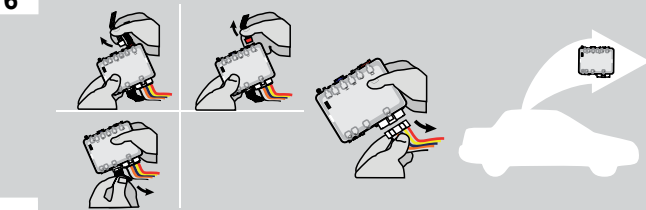

Disconnect all connectors and after the 6-Pin (Main-Harness) or the 4-Pin Data-link connector.


7

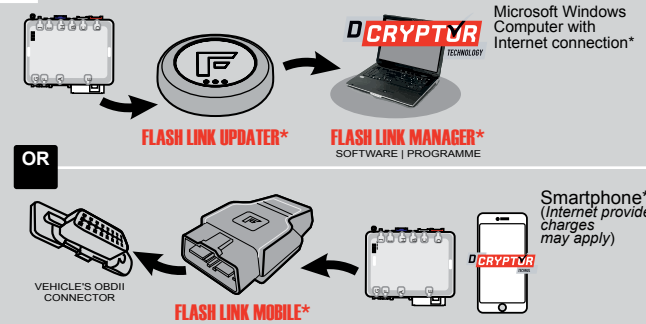


Use the tool: FLASH LINK UPDATER or FLASH LINK MOBILE to visit the DCryptor menu.

*Parts required (not included)

8

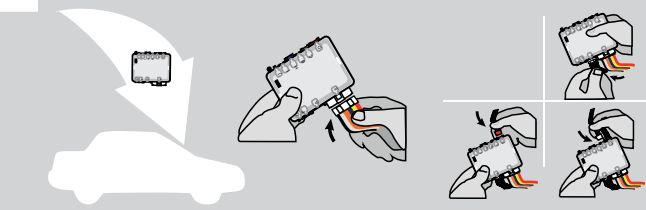


AFTER DCRYPTOR PROGRAMMING COMPLETED Go back to the vehicle and reconnect the 6-Pin (Main-Harness) or the 4-pins (Data-Link) connector and after all the remaining connector.

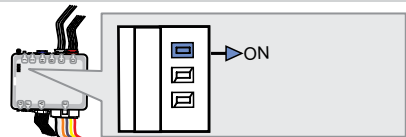

↳ The BLUE LED will turn ON.

9

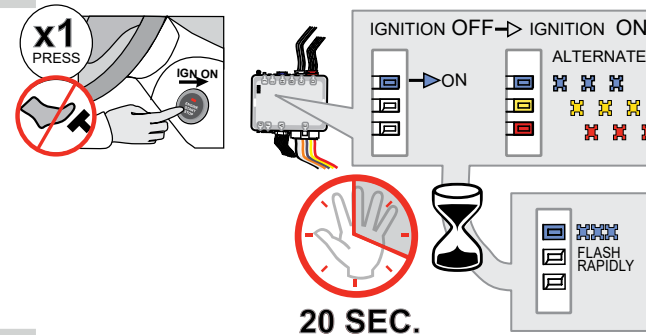


Do not press the brake pedal. Press the Push-to-Start button once to turn on the ignition.

↳ The BLUE, YELLOW and RED LEDs will alternate.

Wait, at least 20 seconds, do not disconnect the modules or turn off the ignition.

↳ The BLUE LED will flash rapidly.

10

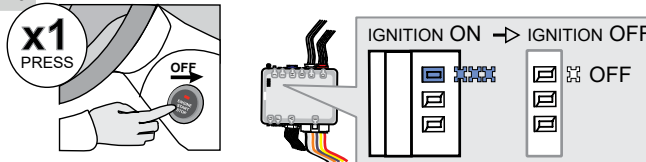

Press the Push-to-Start button once to turn off the ignition.

↳ The BLUE will turn OFF.




The module is now programmed.

REMOTE STARTER PROGRAMMING PROCEDURE



REFER TO THE **QUICK INSTALL GUIDE** INCLUDED WITH THE MODULE FOR THE REMOTE STARTER PROGRAMMING.

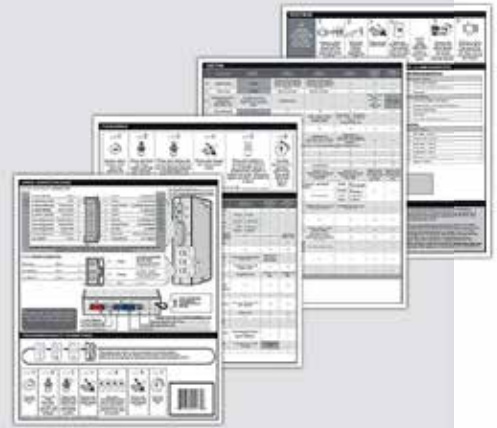

REMOTE STARTER FUNCTIONALITY |



All doors must be closed.



 
Remote start the vehicle.



Unlock the doors with either:

- The OEM remote
- The remote-starter remote

Or the proximity remote



Enter the vehicle with the SMART-KEY.



DO NOT PRESS THE BRAKE PEDAL.

Press and release the Push-to-Start button once.



Press the brake pedal. The vehicle can now be put in to gear and driven.

If the Smart-Key is not detected the vehicle will shut down.

REGULAR & THAR-FOR3 INSTALLATION

ADDENDUM - SUGGESTED WIRING CONFIGURATION




ONLY COMPATIBLE WITH AUTOMATIC TRANSMISSION VEHICLES.



Vehicle functions supported in this diagram (functional if equipped)

VEHICLE	YEARS	Immobilizer bypass	T-Harness available (sold separately)	Lock	Unlock	Arm	Disarm	Tachometer	Door Status	Trunk Status	Hood Status*	Hand-Brake Status	Foot-Brake Status	Active OEM Remote Start	R.S. OEM remote Stand Alone compatible
FORD Explorer Interceptor	2020	•	•	•	•	•	•	•	•	•	•	•	•	•	•

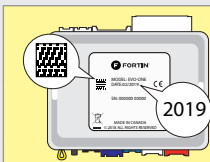

COMPATIBLE MODULE REQUIRED:

QR CODE ON THE LABEL
MANUFACTURED AFTER: 2019

FIRMWARE VERSION

58.[01]
MINIMUM

To add the firmware version and the options, use the **FLASH LINK UPDATER** or **FLASH LINK MOBILE** tool, sold separately.



Program bypass option:

UNIT OPTION
C1

DESCRIPTION

OEM Remote status (Lock/Unlock) monitoring

IF THE VEHICLE IS NOT EQUIPPED WITH FUNCTIONAL HOOD PIN:

A11

OFF

Hood trigger (Output Status).



Program remote starter option for R.S. OEM REMOTE STAND ALONE:

FUNCTION
38

MODE
2

DESCRIPTION

Enable
Press 3x Lock to remote start with the OEM remote.

NOTES

The vehicles OEM remote will still operable during remote start.

MANDATORY INSTALL

* HOOD PIN



HOOD STATUS: THE HOOD PIN SWITCH (INCLUDED) MUST BE INSTALLED IF THE VEHICLE CAN BE REMOTE STARTED WITH THE HOOD OPEN, SET FUNCTION A11 TO OFF.

A11

OFF

SECURITY STICKER AUTOCOLLANT DE



Included

Notice: the installation of safety elements are mandatory. The hood pin and the sticker are essential security elements and must be installed.


THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.

DESCRIPTION | DESCRIPTION


		Parts required (Not included)	PAGE
WIRE TO WIRE DIAGRAM			
			Page 3
THARNESS DIAGRAM			
THARNESS THAR-FOR3	1x THAR-FOR3	1x THAR-FOR3	Page 4




① Gateway module, Behind OBD-II connector - located behind driver side fusebox

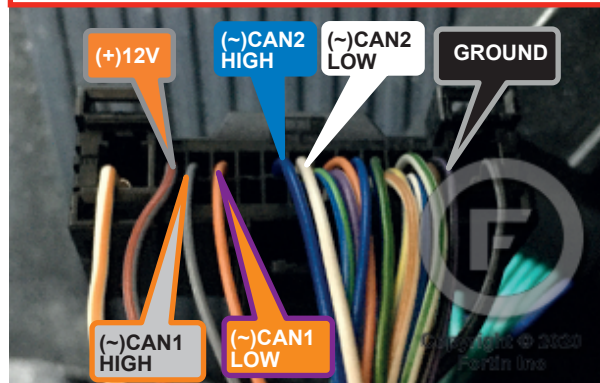


AUTOMATIC TRANSMISSION WIRING CONNECTION |

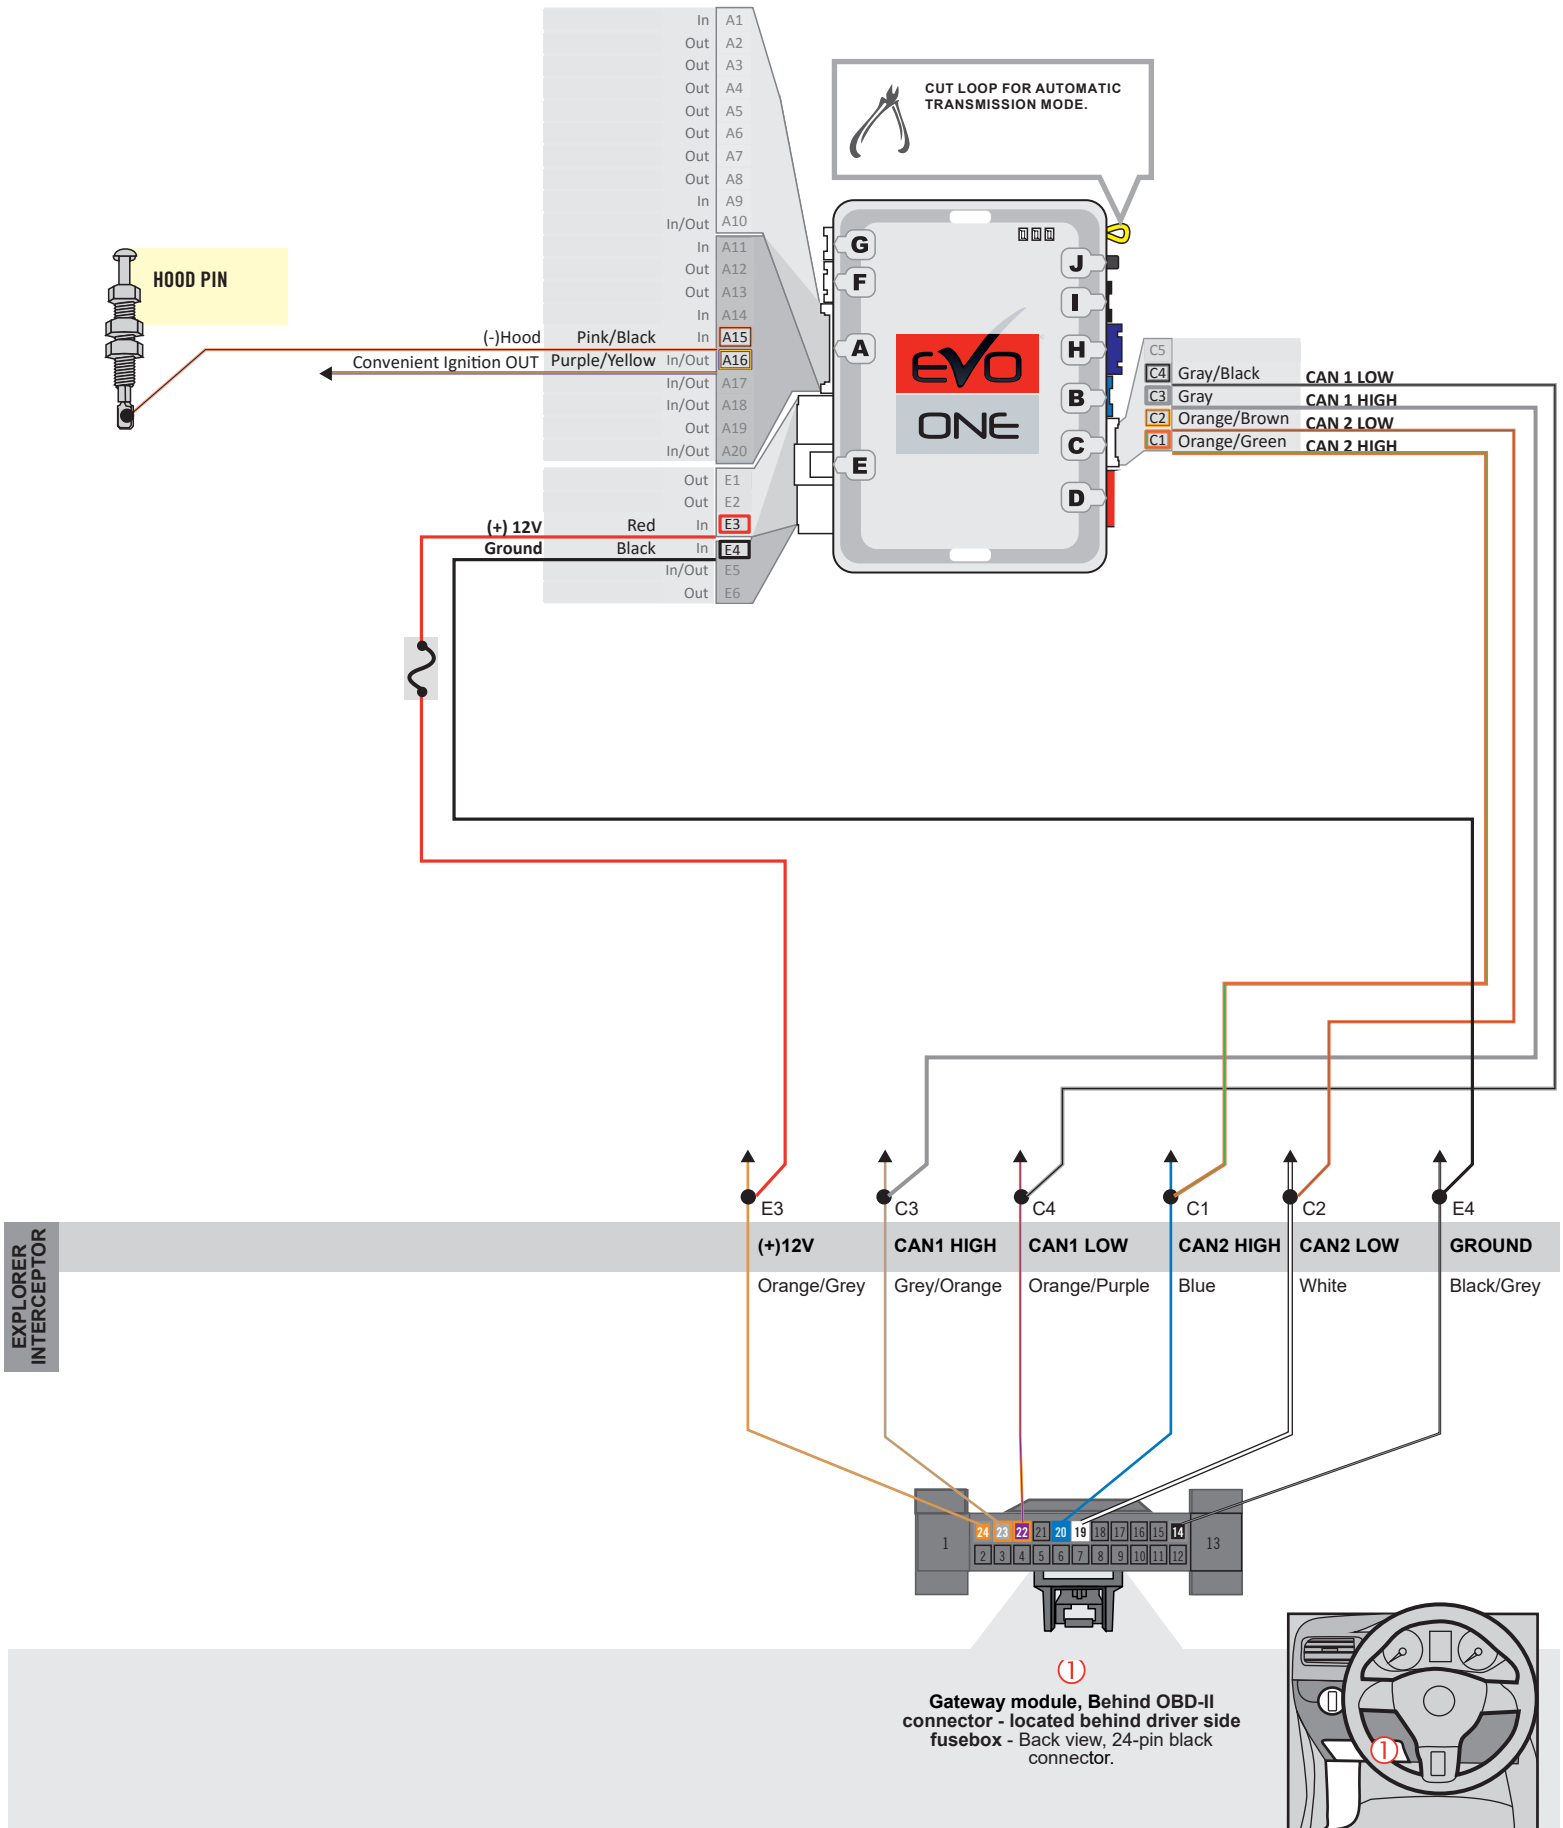

THAR-FOR3 | T-HARNESS - AUTOMATIC TRANSMISSION |

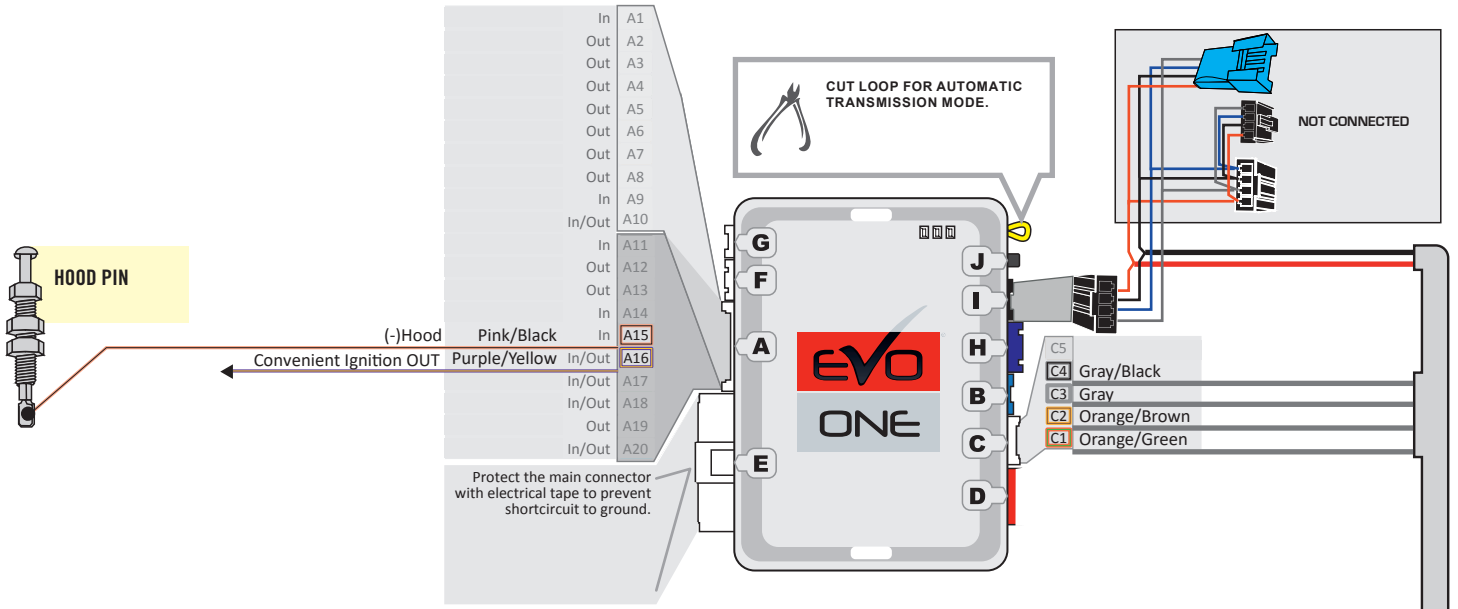

EXPLORER INTERCEPTOR

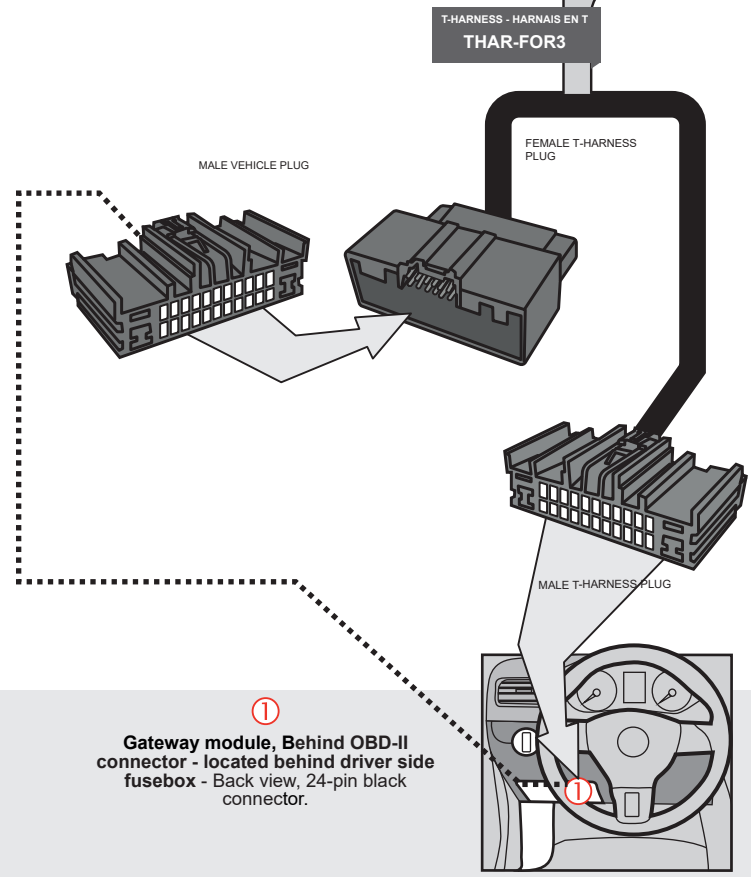

DCRYPTOR PROGRAMMING PROCEDURE |



Parts required (not included)


- 1x FLASH LINK UPDATER, SOFTWARE | PROGRAMME
- 1x FLASH LINK MANAGER
- 1x Microsoft Windows Computer with Internet connection

OR

- 1x FLASH LINK MOBILE
- 1x FLASH LINK MOBILE APP
- Smartphone Android or iOS with Internet connection (Internet provider charges may apply)


BEFORE PROGRAMMING SET THE UNIT OPTIONS AND SAVE.

1

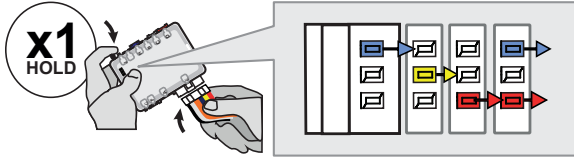

Press and hold the programming button:
Insert the 6-Pin Main connector.


WITH T-HARNESS

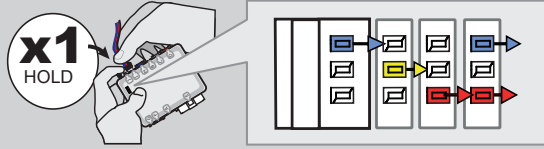

Press and hold the programming button:
Connect the 4-PIN Data-link harness (Black connector).


↳ The LEDs will alternate between BLUE, RED, YELLOW & BLUE/RED flashes.

2

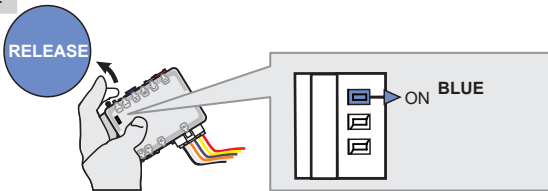


Release the programming button when the BLUE LED is ON.

 If the BLUE LED is not ON solid disconnect the 6-Pin Main connector and go back to step 1.




WITH T-HARNESS

 If the LED is not solid BLUE disconnect the 4 Pin connector (Data-Link) and go back to step 1.




3

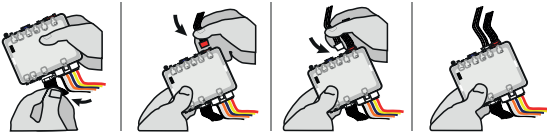

Insert the required remaining connectors.

4

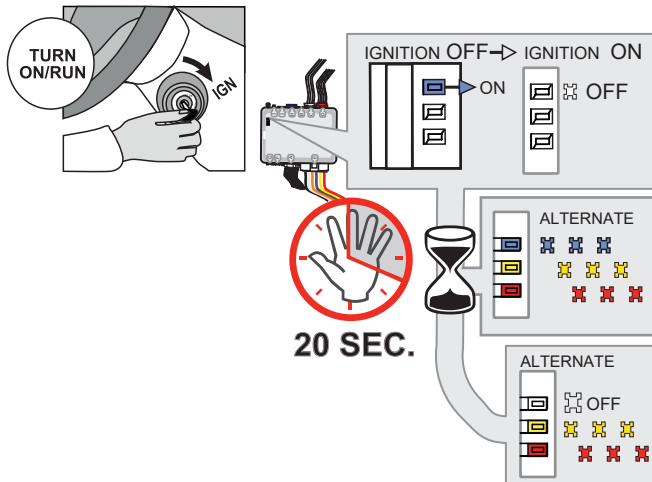

Turn the key to the Ignition ON/RUN position.

 
↳ The BLUE LED will turn OFF.

↳ The BLUE, YELLOW and RED LEDs will alternate.

Wait, at least 20 seconds, do not disconnect the modules or turn off the ignition.


↳ The RED and YELLOW LEDs will alternate.

Make sure that the DELs are flashing RED and YELLOW before continuing programming.



KEY BYPASS PROGRAMMING PROCEDURE 2/2 |


5

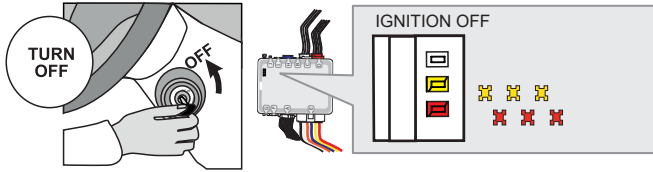

Turn the key to the OFF position.


↳ The RED and YELLOW LEDs alternate.

6

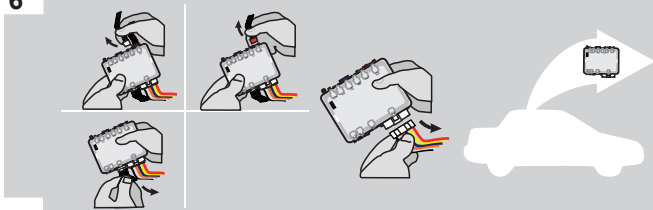

Disconnect all connectors and after the 6-Pin (Main-Harness) or the 4-Pin Data-link connector.


7

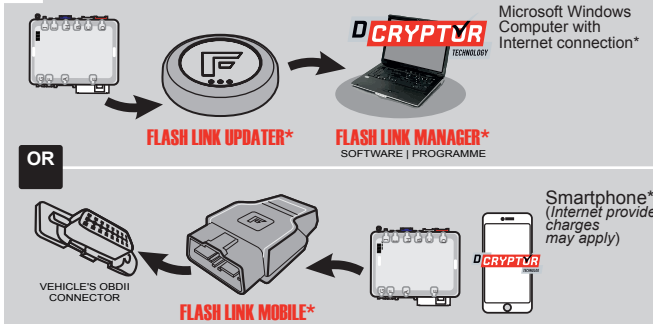


Use the tool: FLASH LINK UPDATER or FLASH LINK MOBILE to visit the DCryptor menu.

*Parts required (not included)

8

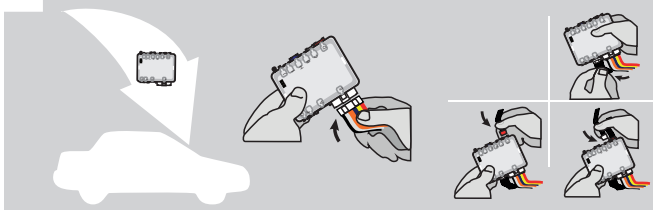


AFTER DCRYPTOR PROGRAMMING COMPLETED Go back to the vehicle and reconnect the 6-Pin (Main-Harness) or the 4-pins (Data-Link) connector and after all the remaining connector.

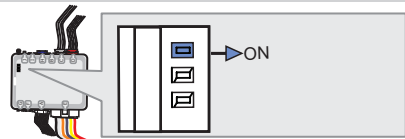

↳ The BLUE LED will turn ON.

9

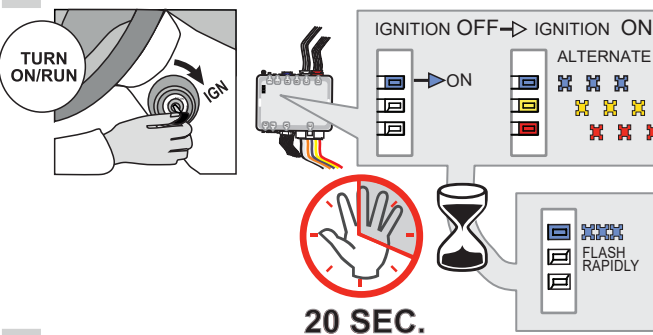


Turn the key to the Ignition ON/RUN position.

↳ The BLUE, YELLOW and RED LEDs will alternate.

Wait, at least 20 seconds, do not disconnect the modules or turn off the ignition.

↳ The BLUE LED will flash rapidly.

10

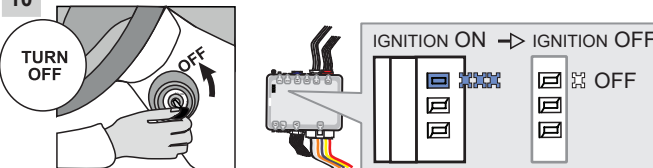

Turn the key to the OFF position.

↳ The BLUE will turn OFF.




The module is now programmed.

REMOTE STARTER PROGRAMMING PROCEDURE |



REFER TO THE **QUICK INSTALL GUIDE** INCLUDED WITH THE MODULE FOR THE REMOTE STARTER PROGRAMMING.

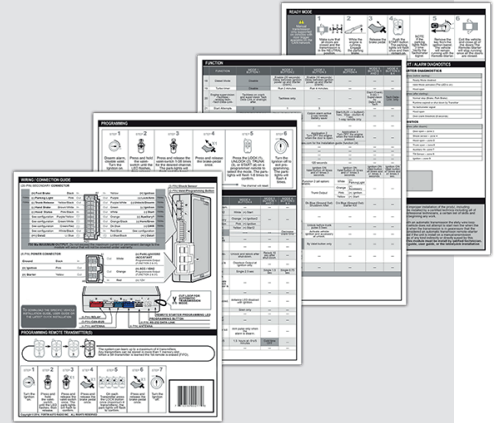

REMOTE STARTER FUNCTIONALITY |



All doors must be closed.



Remote start the vehicle.



Unlock the doors with the remote-starter remote or the OEM remote.



Insert and Turn the key to the Ignition ON/RUN position.



Press the brake pedal.




The vehicle can now be put in to gear and driven.

REGULAR & THAR-FOR3 INSTALLATION
ADDENDUM - SUGGESTED WIRING CONFIGURATION

ONLY COMPATIBLE WITH AUTOMATIC TRANSMISSION VEHICLES.

VEHICLE
YEARS
Vehicle functions supported in this diagram (functional if equipped)

VEHICLE	YEARS	Immobilizer bypass	T-Harness available (sold separately)	Lock	Unlock	Arm	Disarm	Heated Seats**	Rear Defrost**	RAP Disable	Parking Lights***	Tachometer	Door Status	Trunk Status	Hood Status*	Hand-Brake Status	Foot-Brake Status	Active OEM Remote	R.S. OEM remote Stand Alone compatible
FORD																			
F-150	2020	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
F-250	2020	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
F-350	2020	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
F-450	2020	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•

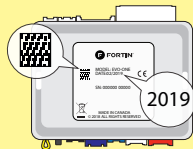
COMPATIBLE MODULE REQUIRED:
QR CODE ON THE LABEL MANUFACTURED AFTER: 2019
FIRMWARE VERSION
58.[02]
MINIMUM

 To add the firmware version and the options, use the **FLASH LINK UPDATER** or **FLASH LINK MOBILE** tool, sold separately.

Program bypass option:
UNIT OPTION
C1
DESCRIPTION

OEM Remote status (Lock/Unlock) monitoring

IF THE VEHICLE IS NOT EQUIPPED WITH FUNCTIONAL HOOD PIN:
A11
OFF

Hood trigger (Output Status).


Program remote starter option for R.S. OEM REMOTE STAND ALONE:
FUNCTION
38
MODE
2
DESCRIPTION

Enable Press 3x Lock to remote start with the OEM remote.

NOTES

The vehicles OEM remote and SmartKey are still operable during remote start.

****Heated seats** The heated seats and rear defrost activate automatically when it cold.

*****Parking Lights** The parking Lights at remote start only.


The vehicle must be equipped with the OEM remote with the door locks.

MANDATORY INSTALL
*** HOOD PIN**

HOOD STATUS: THE HOOD PIN SWITCH (INCLUDED) MUST BE INSTALLED IF THE VEHICLE CAN BE REMOTE STARTED WITH THE HOOD OPEN, SET FUNCTION A11 TO OFF.

A11
OFF
SECURITY STICKER


Included

Notice: the installation of safety elements are mandatory. The hood pin and the sticker are essential security elements and must be installed.

THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.

DESCRIPTION

	Parts required (Not included)	PAGE
--	-------------------------------	------

WIRE TO WIRE DIAGRAM


Page 3

THARNESSE DIAGRAM

THARNESSE THAR-FOR3	1x THAR-FOR3	1x THAR-FOR3	Page 4
---------------------	--------------	--------------	--------




① Gateway module, located at dash board driver's side,

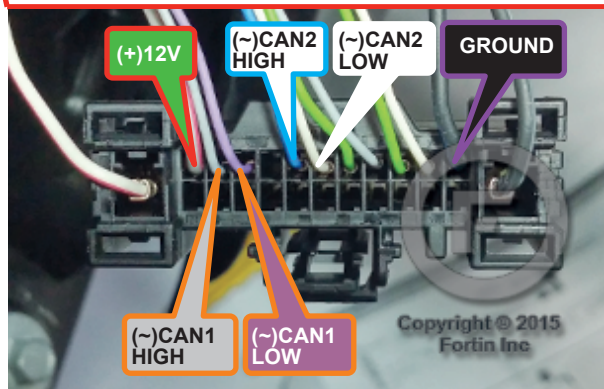




② Under the hood If not equipped with hood pin.



AUTOMATIC TRANSMISSION WIRING CONNECTION

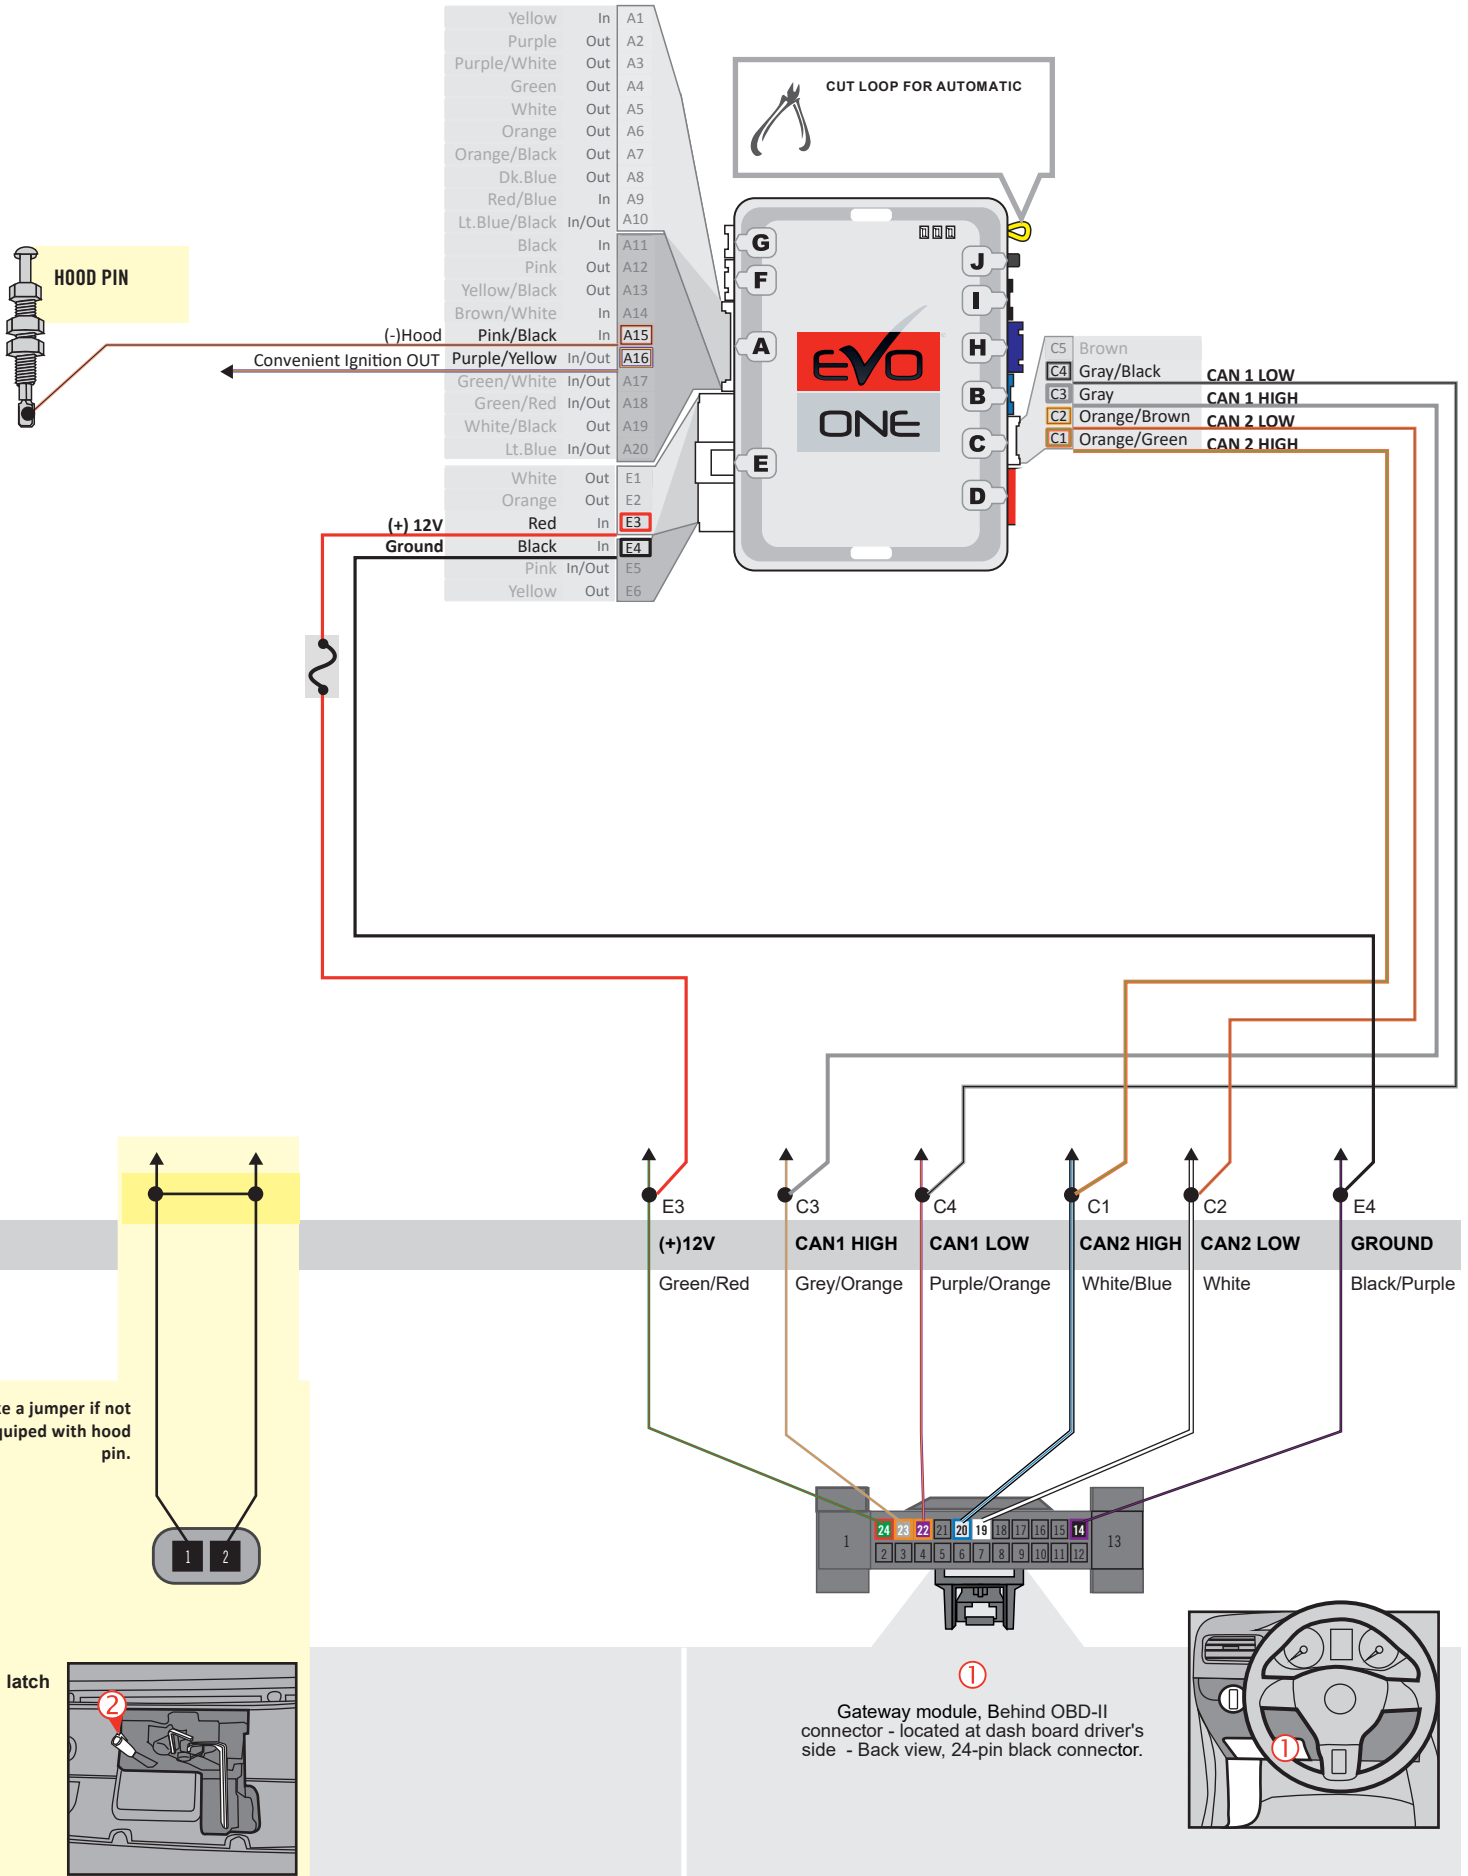

THAR-FOR3 | T-HARNESS - AUTOMATIC TRANSMISSION

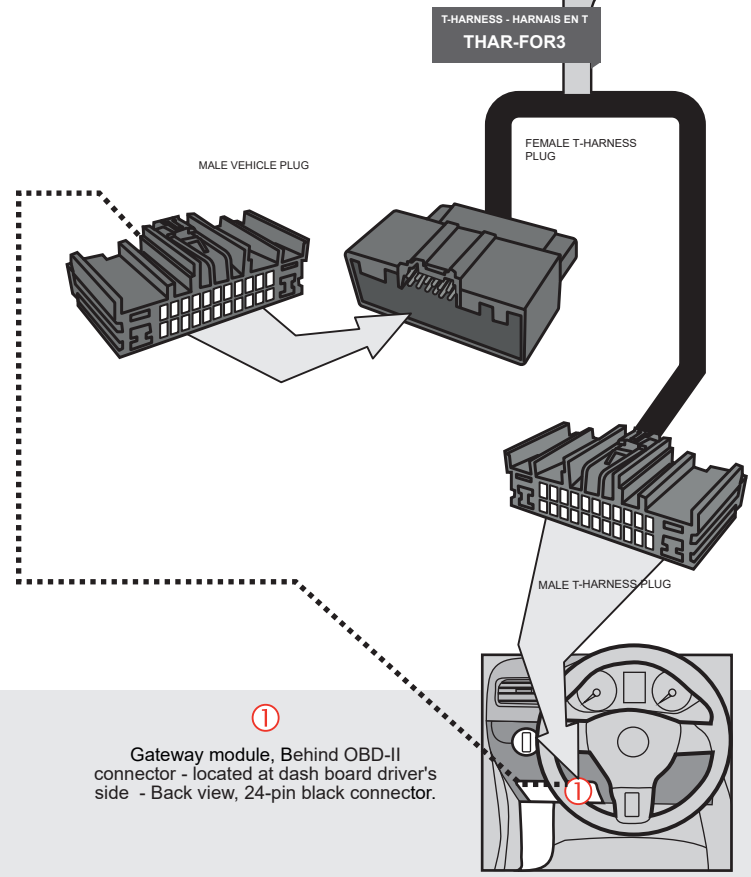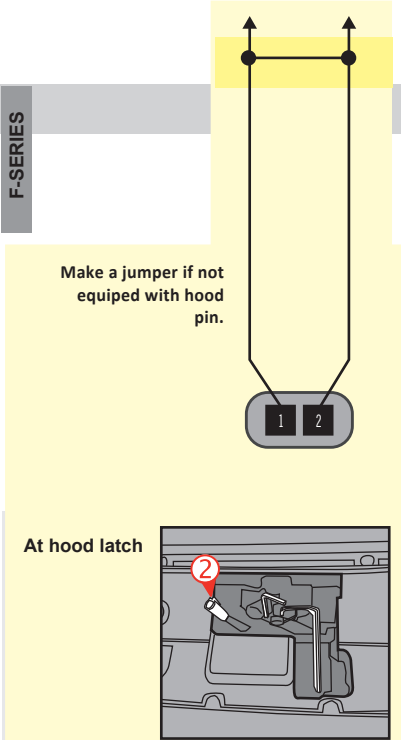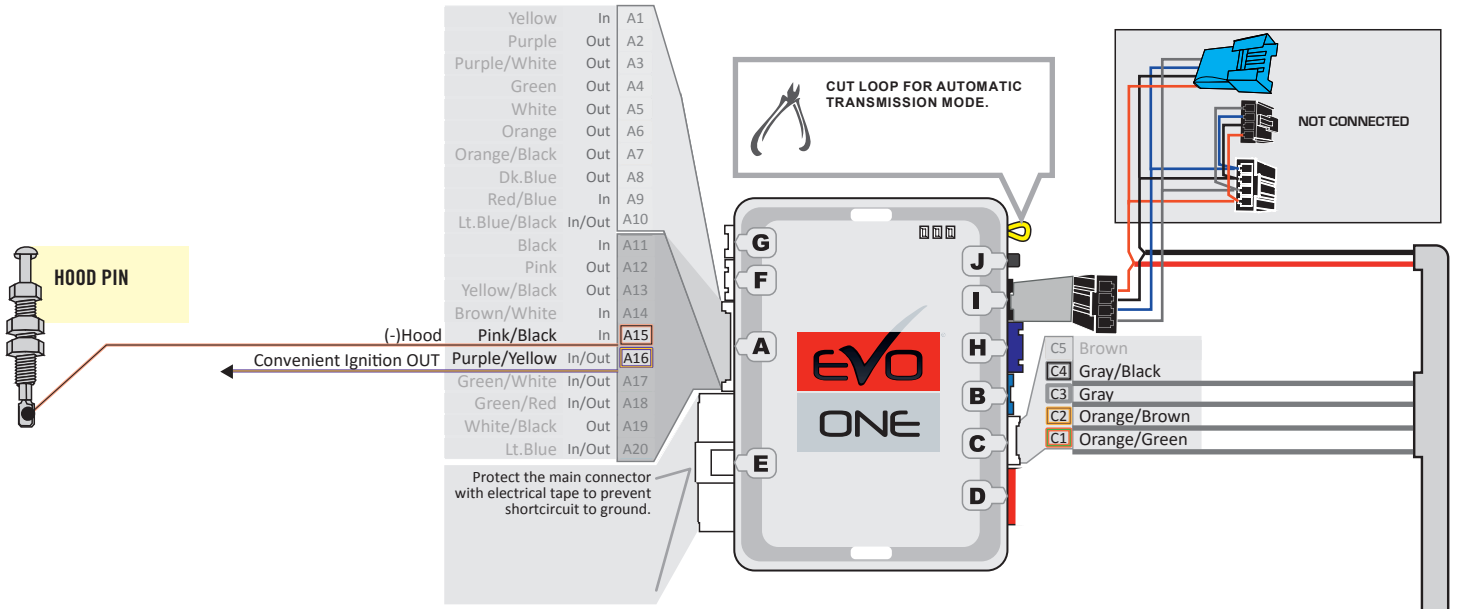

DCRYPTOR PROGRAMMING PROCEDURE



Parts required (not included)


- 1x **FLASH LINK UPDATER,**
- 1x **FLASH LINK MANAGER**
SOFTWARE | PROGRAMME
- 1x Microsoft Windows Computer with Internet connection

OR
OU

- 1x **FLASH LINK MOBILE**
- 1x **FLASH LINK MOBILE APP**
- 1x Smartphone Android or iOS with Internet connection
(Internet provider charges may apply)


BEFORE PROGRAMMING SET THE UNIT OPTIONS AND SAVE.

1

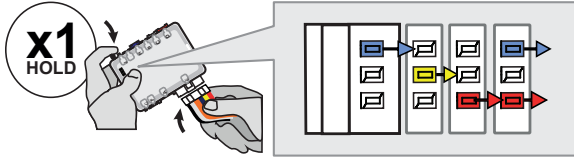

Press and hold the programming button:
Insert the 6-Pin Main connector.


WITH T-HARNESS

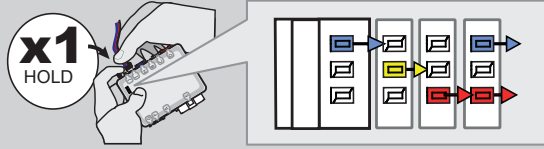

Press and hold the programming button:
Connect the 4-PIN Data-link harness (Black connector).


↳ The LEDs will alternate between BLUE, RED, YELLOW & BLUE/RED flashes.

2

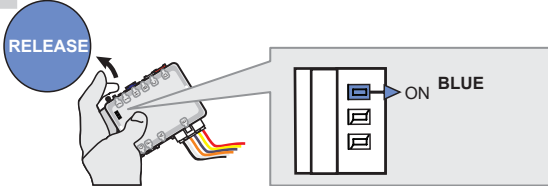


Release the programming button when the BLUE LED is ON.

 If the BLUE LED is not ON solid disconnect the 6-Pin Main connector and go back to step 1.




WITH T-HARNESS

 If the LED is not solid BLUE disconnect the 4 Pin connector (Data-Link) and go back to step 1.




3

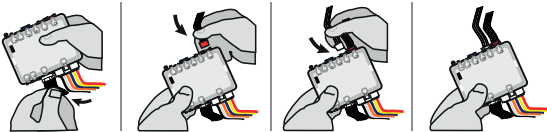

Insert the required remaining connectors.

4

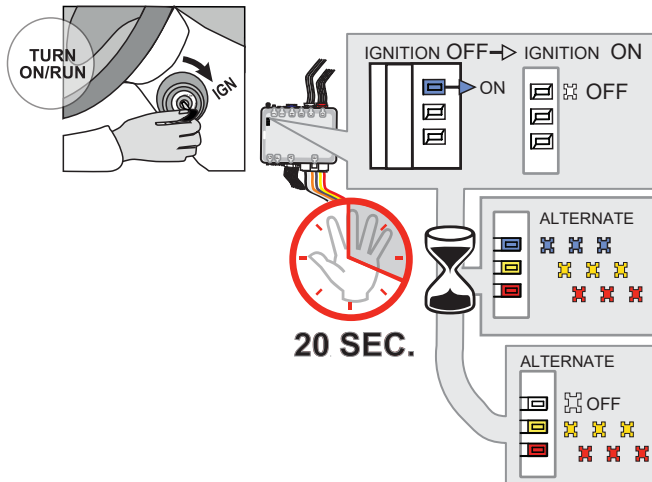

Turn the key to the Ignition ON/RUN position.

 
↳ The BLUE LED will turn OFF.

↳ The BLUE, YELLOW and RED LEDs will alternate.

Wait, at least 20 seconds, do not disconnect the modules or turn off the ignition.


↳ The RED and YELLOW LEDs will alternate.

Make sure that the DELs are flashing RED and YELLOW before continuing programming.



KEY BYPASS PROGRAMMING PROCEDURE 2/2


5

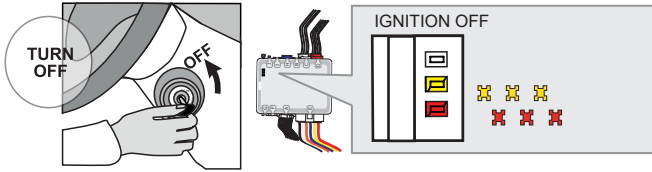

Turn the key to the OFF position.


↳ The RED and YELLOW LEDs alternate.

6

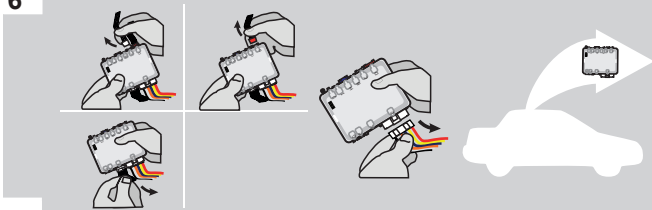

Disconnect all connectors and after the 6-Pin (Main-Harness) or the 4-Pin Data-link connector.

7

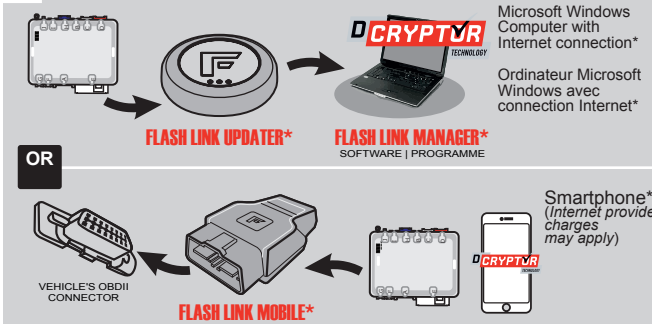


Microsoft Windows Computer with Internet connection*
Ordinateur Microsoft Windows avec connection Internet*


Use the tool: FLASH LINK UPDATER or FLASH LINK MOBILE to visit the DCryptor menu.

*Parts required (not included)

8

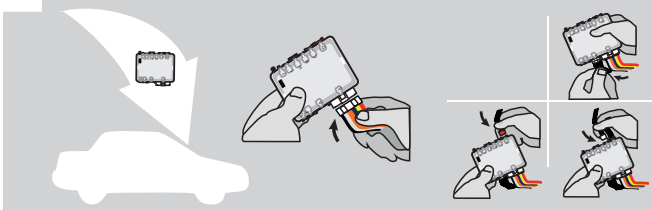


AFTER DCRYPTOR PROGRAMMING COMPLETED Go back to the vehicle and reconnect the 6-Pin (Main-Harness) or the 4-pins (Data-Link) connector and after all the remaining connector.

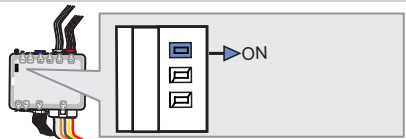

↳ The BLUE LED will turn ON.

9

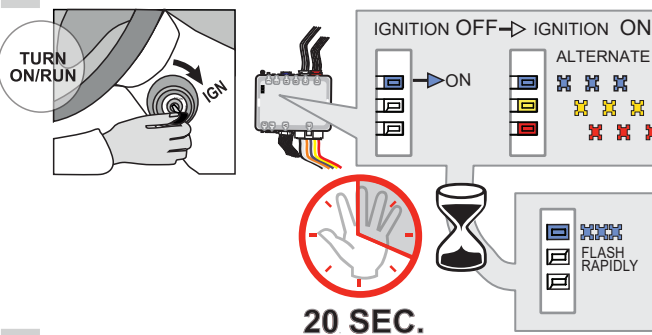


Turn the key to the Ignition ON/RUN position.

↳ The BLUE, YELLOW and RED LEDs will alternate.

Wait, at least 20 seconds, do not disconnect the modules or turn off the ignition.

↳ The BLUE LED will flash rapidly.

10

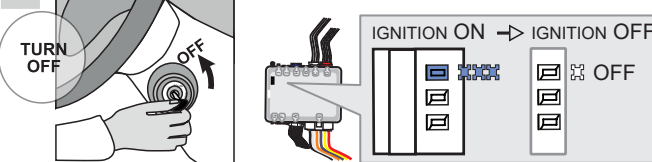

Turn the key to the OFF position.

↳ The BLUE will turn OFF.




The module is now programmed.

REMOTE STARTER PROGRAMMING PROCEDURE



REFER TO THE **QUICK INSTALL GUIDE** INCLUDED WITH THE MODULE FOR THE REMOTE STARTER PROGRAMMING.

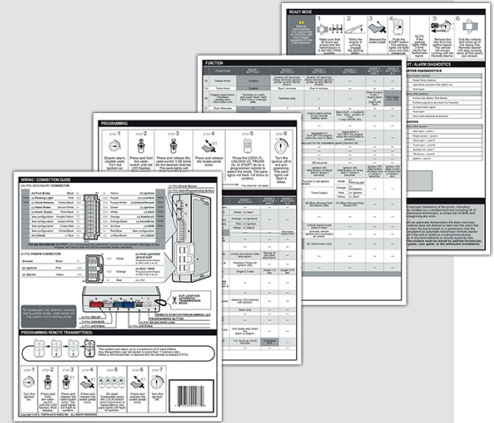

REMOTE STARTER FUNCTIONALITY



 
All doors must be closed.



Remote start the vehicle.



Unlock the doors with the remote-starter remote or the OEM remote.



Insert and Turn the key to the Ignition ON/RUN position.



Press the brake pedal.



The vehicle can now be put in to gear and driven.

REGULAR & THAR-FOR3 INSTALLATION

ADDENDUM - SUGGESTED WIRING CONFIGURATION



ONLY COMPATIBLE WITH AUTOMATIC TRANSMISSION VEHICLES.




VEHICLE

YEARS

Vehicle functions supported in this diagram (functional if equipped)

VEHICLE	YEARS	Immobilizer bypass	T-Harness available (sold separately)	Lock	Unlock	Arm	Disarm	Heated Seats**	Rear Defrost**	RAP Disable	Parking Lights***	Tachometer	Door Status	Trunk Status	Hood Status*	Hand-Brake Status	Foot-Brake Status	Active OEM Remote	R.S. OEM remote Stand Alone compatible	
FORD																				
F-150	Push-to-Start 2020	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
F-250	Push-to-Start 2020	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
F-350	Push-to-Start 2020	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
F-450	Push-to-Start 2020	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•

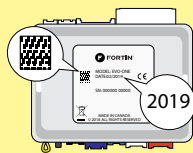

COMPATIBLE MODULE REQUIRED:

QR CODE ON THE LABEL MANUFACTURED AFTER: 2019

FIRMWARE VERSION

58.[02]
MINIMUM

To add the firmware version and the options, use the **FLASH LINK UPDATER** or **FLASH LINK MOBILE** tool, sold separately.



Program bypass option:

UNIT OPTION

DESCRIPTION

C1

OEM Remote status (Lock/Unlock) monitoring

D6

Push-to-Start

IF THE VEHICLE IS NOT EQUIPPED WITH FUNCTIONAL HOOD PIN:

A11

OFF

Hood trigger (Output Status).



Program remote starter option for R.S. OEM REMOTE STAND ALONE:

FUNCTION

MODE

DESCRIPTION

38

2

Enable Press 3x Lock to remote start with the OEM remote.

NOTES

The vehicles OEM remote and SmartKey are still operable during remote start.

**Heated seats The heated seats and rear defrost activate automatically when it cold.

***Parking Lights The parking Lights at remote start only.

MANDATORY INSTALL

* HOOD PIN



HOOD STATUS: THE HOOD PIN SWITCH (INCLUDED) MUST BE INSTALLED IF THE VEHICLE CAN BE REMOTE STARTED WITH THE HOOD OPEN, SET FUNCTION A11 TO OFF.

A11

OFF

SECURITY STICKER



Included

Notice: the installation of safety elements are mandatory. The hood pin and the sticker are essential security elements and must be installed.

THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.

DESCRIPTION |

	Parts required (Not included)	PAGE
--	-------------------------------	------

WIRE TO WIRE DIAGRAM


Page 3

THARNESSE DIAGRAM

THARNESSE THAR-FOR3	1x THAR-FOR3	Page 4
---------------------	--------------	--------




① Gateway module, located at dash board driver's side,

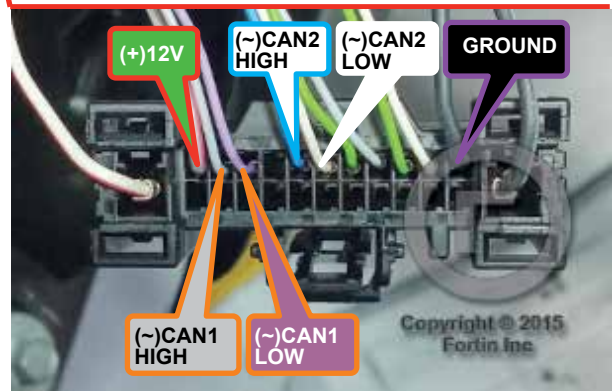


② Under the hood If not equipped with hood pin.



AUTOMATIC TRANSMISSION WIRING CONNECTION |

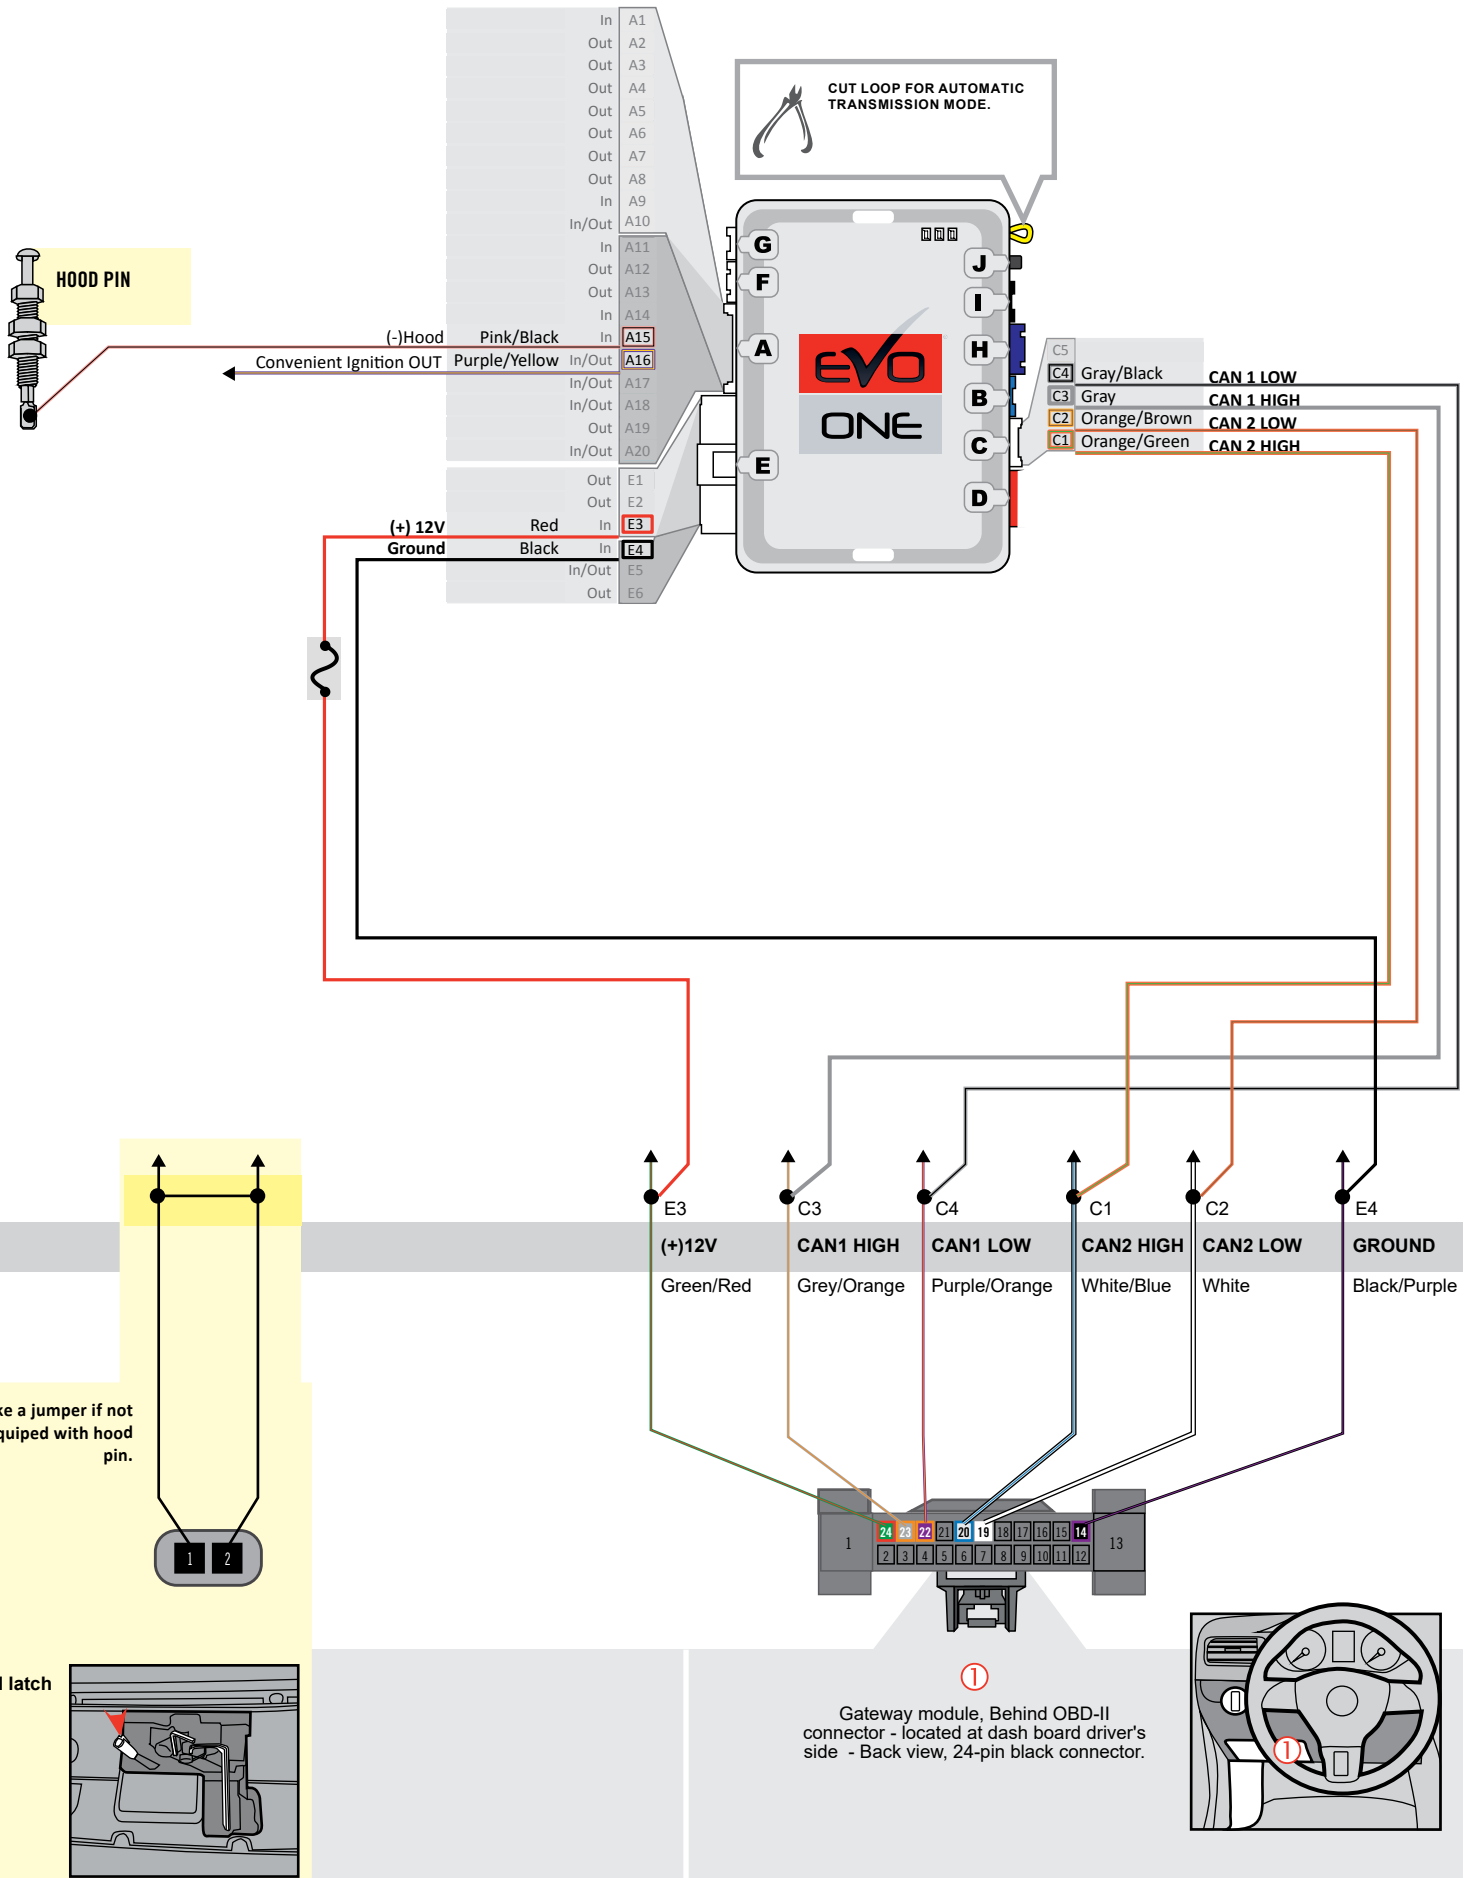


THAR-FOR3 | T-HARNESS - AUTOMATIC TRANSMISSION |


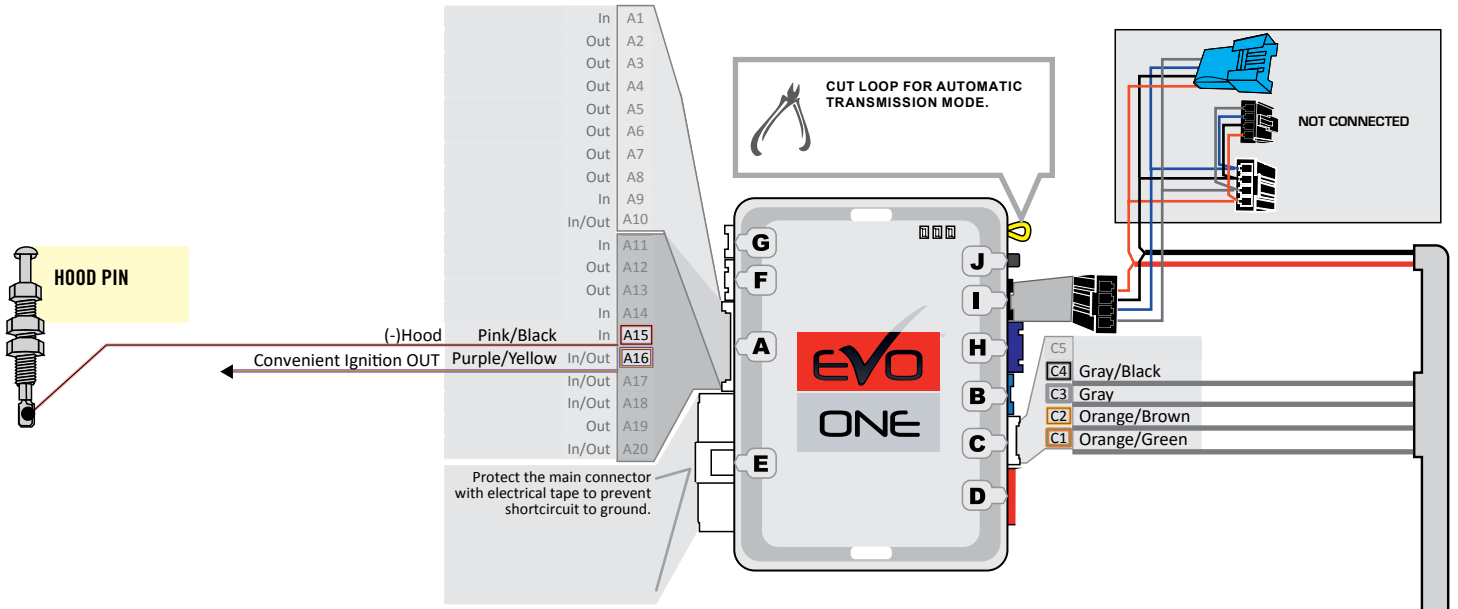


F-SERIES

Make a jumper if not equipped with hood pin.

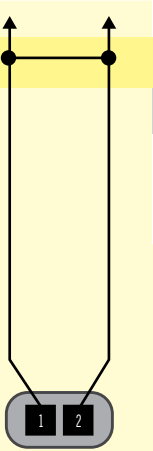

At hood latch

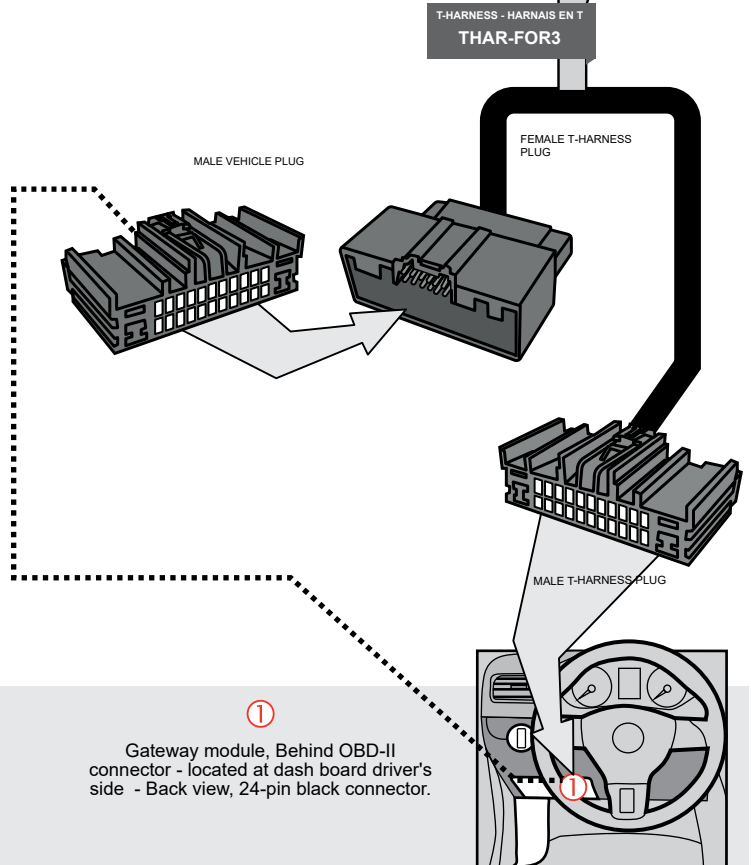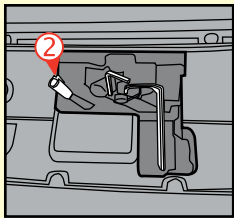

DCRYPTOR PROGRAMMING PROCEDURE |



Parts required (not included)


- 1x **FLASH LINK UPDATER,**
- 1x **FLASH LINK MANAGER**
SOFTWARE | PROGRAMME
- 1x Microsoft Windows Computer with Internet connection

OR

- 1x **FLASH LINK MOBILE**
- 1x **FLASH LINK MOBILE APP**
- Smartphone Android or iOS with Internet connection
(Internet provider charges may apply)

BEFORE PROGRAMMING SET THE UNIT OPTIONS AND SAVE.

1

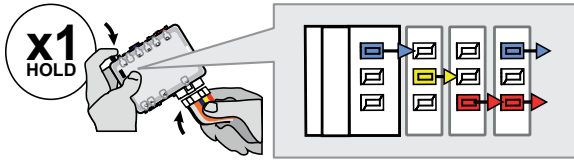


Press and hold the programming button:
Insert the 6-Pin Main connector.


Press and hold the programming button:
Connect the 4-PIN Data-link harness (Black connector).

↳ The LEDs will alternate between BLUE, RED, YELLOW & BLUE/RED flashes.

WITH T-HARNESS

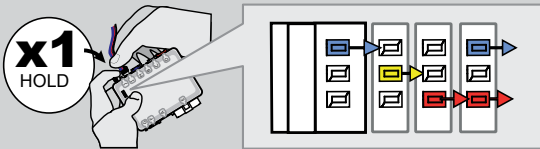


2

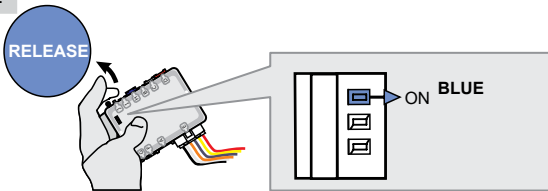


Release the programming button when the BLUE LED is ON.

 If the BLUE LED is not ON solid disconnect the 6-Pin Main connector and go back to step 1.




WITH T-HARNESS

 If the LED is not solid BLUE disconnect the 4 Pin connector (Data-Link) and go back to step 1.




3

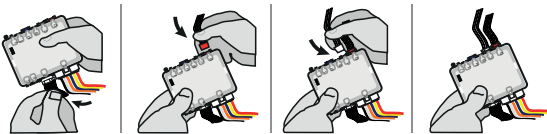

Insert the required remaining connectors.

4

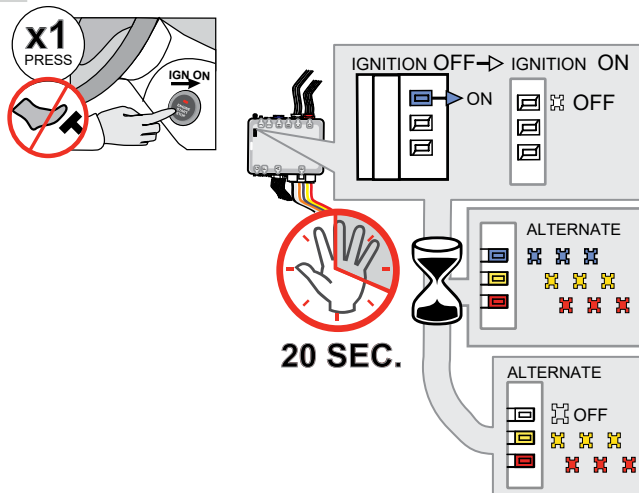

Do not press the brake pedal. **Press** the Push-to-Start button once to turn on the ignition.

 
↳ The BLUE LED will turn OFF.

↳ The BLUE, YELLOW and RED LEDs will alternate.

Wait, at least 20 seconds, do not disconnect the modules or turn off the ignition.


↳ The RED and YELLOW LEDs will alternate.

Make sure that the DELs are flashing RED and YELLOW before continuing programming.



KEY BYPASS PROGRAMMING PROCEDURE 2/2 |


5

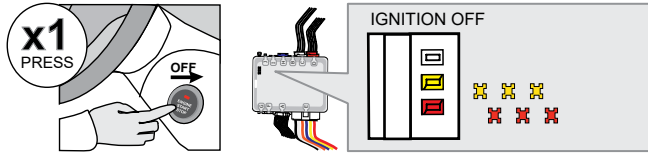

Press the Push-to-Start button once to turn off the ignition.

↳ The RED and YELLOW LEDs alternate.

6

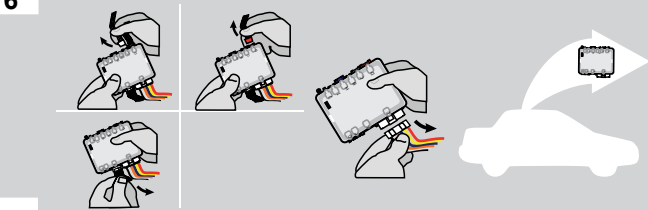

Disconnect all connectors and after the 6-Pin (Main-Harness) or the 4-Pin Data-link connector.


7




Use the tool: FLASH LINK UPDATER or FLASH LINK MOBILE to visit the DCryptor menu.

*Parts required (not included)

8

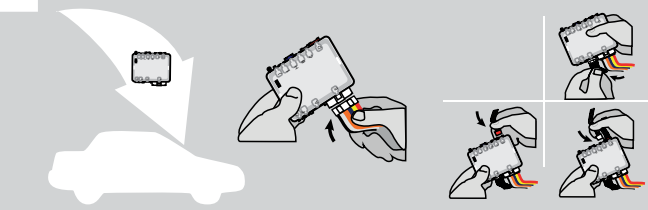


AFTER DCRYPTOR PROGRAMMING COMPLETED Go back to the vehicle and reconnect the 6-Pin (Main-Harness) or the 4-pins (Data-Link) connector and after all the remaining connector.

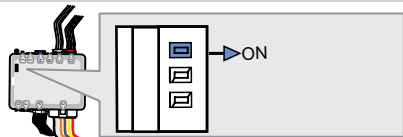

↳ The BLUE LED will turn ON.

9

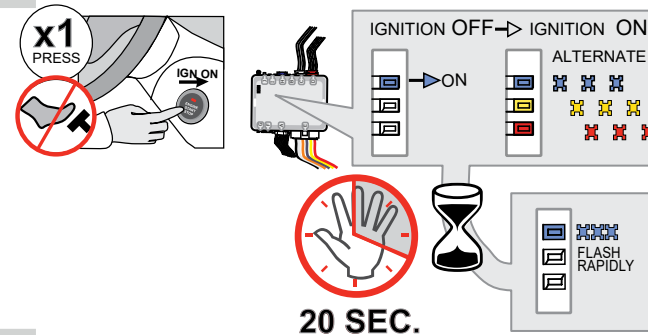


Do not press the brake pedal. Press the Push-to-Start button once to turn on the ignition.

↳ The BLUE, YELLOW and RED LEDs will alternate.

Wait, at least 20 seconds, do not disconnect the modules or turn off the ignition.

↳ The BLUE LED will flash rapidly.

10

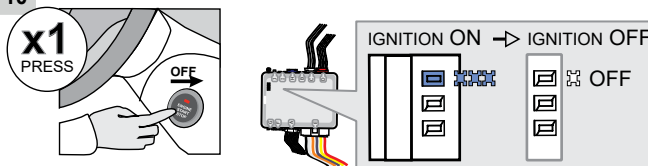

Press the Push-to-Start button once to turn off the ignition.

↳ The BLUE will turn OFF.




The module is now programmed.

REMOTE STARTER PROGRAMMING PROCEDURE |



REFER TO THE **QUICK INSTALL GUIDE** INCLUDED WITH THE MODULE FOR THE REMOTE STARTER PROGRAMMING.

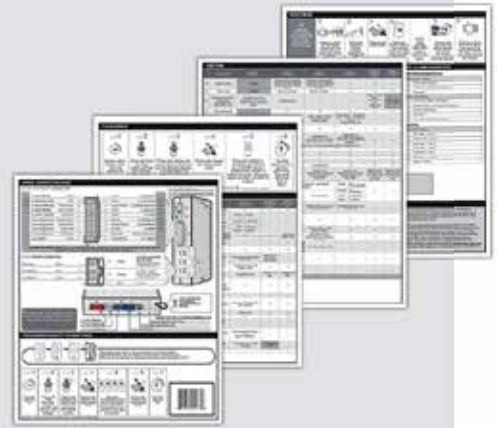

REMOTE STARTER FUNCTIONALITY |



All doors must be closed.



Start

 
Remote start the vehicle.



UNLOCK

Unlock the doors with either:

- The OEM remote
- The remote-starter remote
- Or the proximity remote



Enter the vehicle with the SMART-KEY.



DO NOT PRESS THE BRAKE PEDAL.

Press and release the Push-to-Start button once.



Press the brake pedal. The vehicle can now be put in to gear and driven.

If the Smart-Key is not detected the vehicle will shut down.

REGULAR & THAR-FOR3 INSTALLATION

ADDENDUM - SUGGESTED WIRING CONFIGURATION



ONLY COMPATIBLE WITH AUTOMATIC TRANSMISSION VEHICLES.




VEHICLE

YEARS

Vehicle functions supported in this diagram (functional if equipped)

VEHICLE	YEARS	Immobilizer bypass Contournement	T-Harness available (sold separately)	Lock	Unlock	Arm	Disarm	Heated Seats**	Rear Defrost**	RAP Disable	Parking Lights***	Tachometer	Door Status	Trunk Status	Hood Status*	Hand-Brake Status	Foot-Brake Status	Active OEM Remote Start	R.S. OEM remote Stand Alone compatible	
FORD Fusion	Key 2020	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
	Hybrid Key 2020	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•

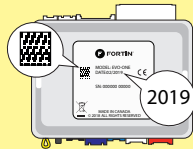

COMPATIBLE
MODULE
REQUIRED:

QR CODE ON THE
LABEL
MANUFACTURED
AFTER: 2019

FIRMWARE VERSION

58.[02]
MINIMUM

To add the firmware version and the options, use the
FLASH LINK UPDATER or **FLASH LINK MOBILE** tool,
sold separately.



Program bypass option:

UNIT OPTION

DESCRIPTION

C1

OEM Remote status (Lock/Unlock)
monitoring

IF THE VEHICLE IS NOT EQUIPPED WITH FUNCTIONAL HOOD PIN:

A11

OFF

Hood trigger (Output Status).

Vehicle hybrid only
véhicule hybride seulement

D4

Hybrid mode (Vehicle hybrid only)



Program remote
starter option for R.S.
OEM REMOTE STAND
ALONE:

FUNCTION

MODE

DESCRIPTION

38

2

 
Enable
Press 3x Lock to remote start with the OEM remote.

NOTES

The vehicles OEM remote and SmartKey are still operable during remote start.

**Heated seats The heated seats and rear defrost activate automatically when it cold.

***Parking Lights The parking Lights at remote start only.



The vehicle must be equipped with the OEM remote with the door locks.

MANDATORY INSTALL

* HOOD PIN



HOOD STATUS : THE HOOD PIN SWITCH (INCLUDED) MUST BE INSTALLED IF THE VEHICLE CAN BE REMOTE STARTED WITH THE HOOD OPEN, SET FUNCTION A11 TO OFF.

A11

OFF

SECURITY STICKER



Included

Notice: the installation of safety elements are mandatory. The hood pin and the sticker are essential security elements and must be installed.

THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.

DESCRIPTION

Parts required (Not included)		PAGE
-------------------------------	--	------

WIRE TO WIRE DIAGRAM

Page 3

THARNESS DIAGRAM

THARNESS THAR-FOR3



1x THAR-FOR3

Page 4




② Parking Lights switch



① Gateway module, Behind OBD-II connector

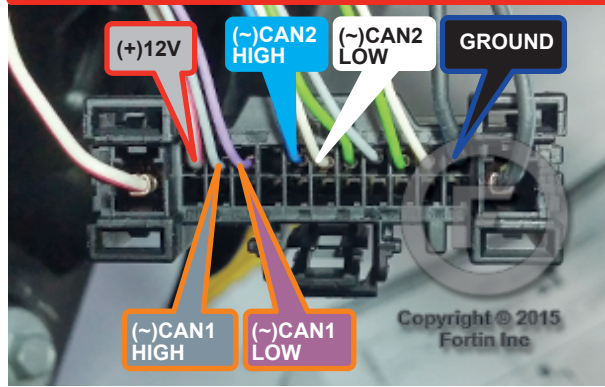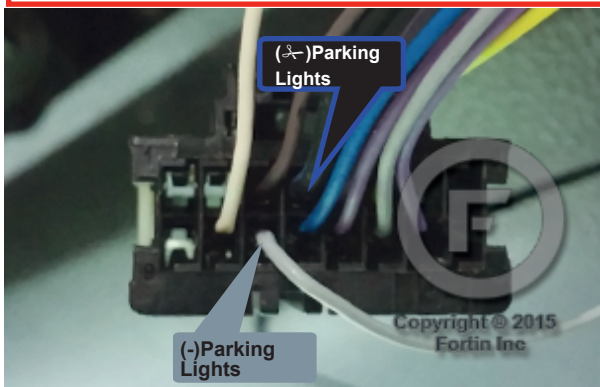


AUTOMATIC TRANSMISSION WIRING CONNECTION |

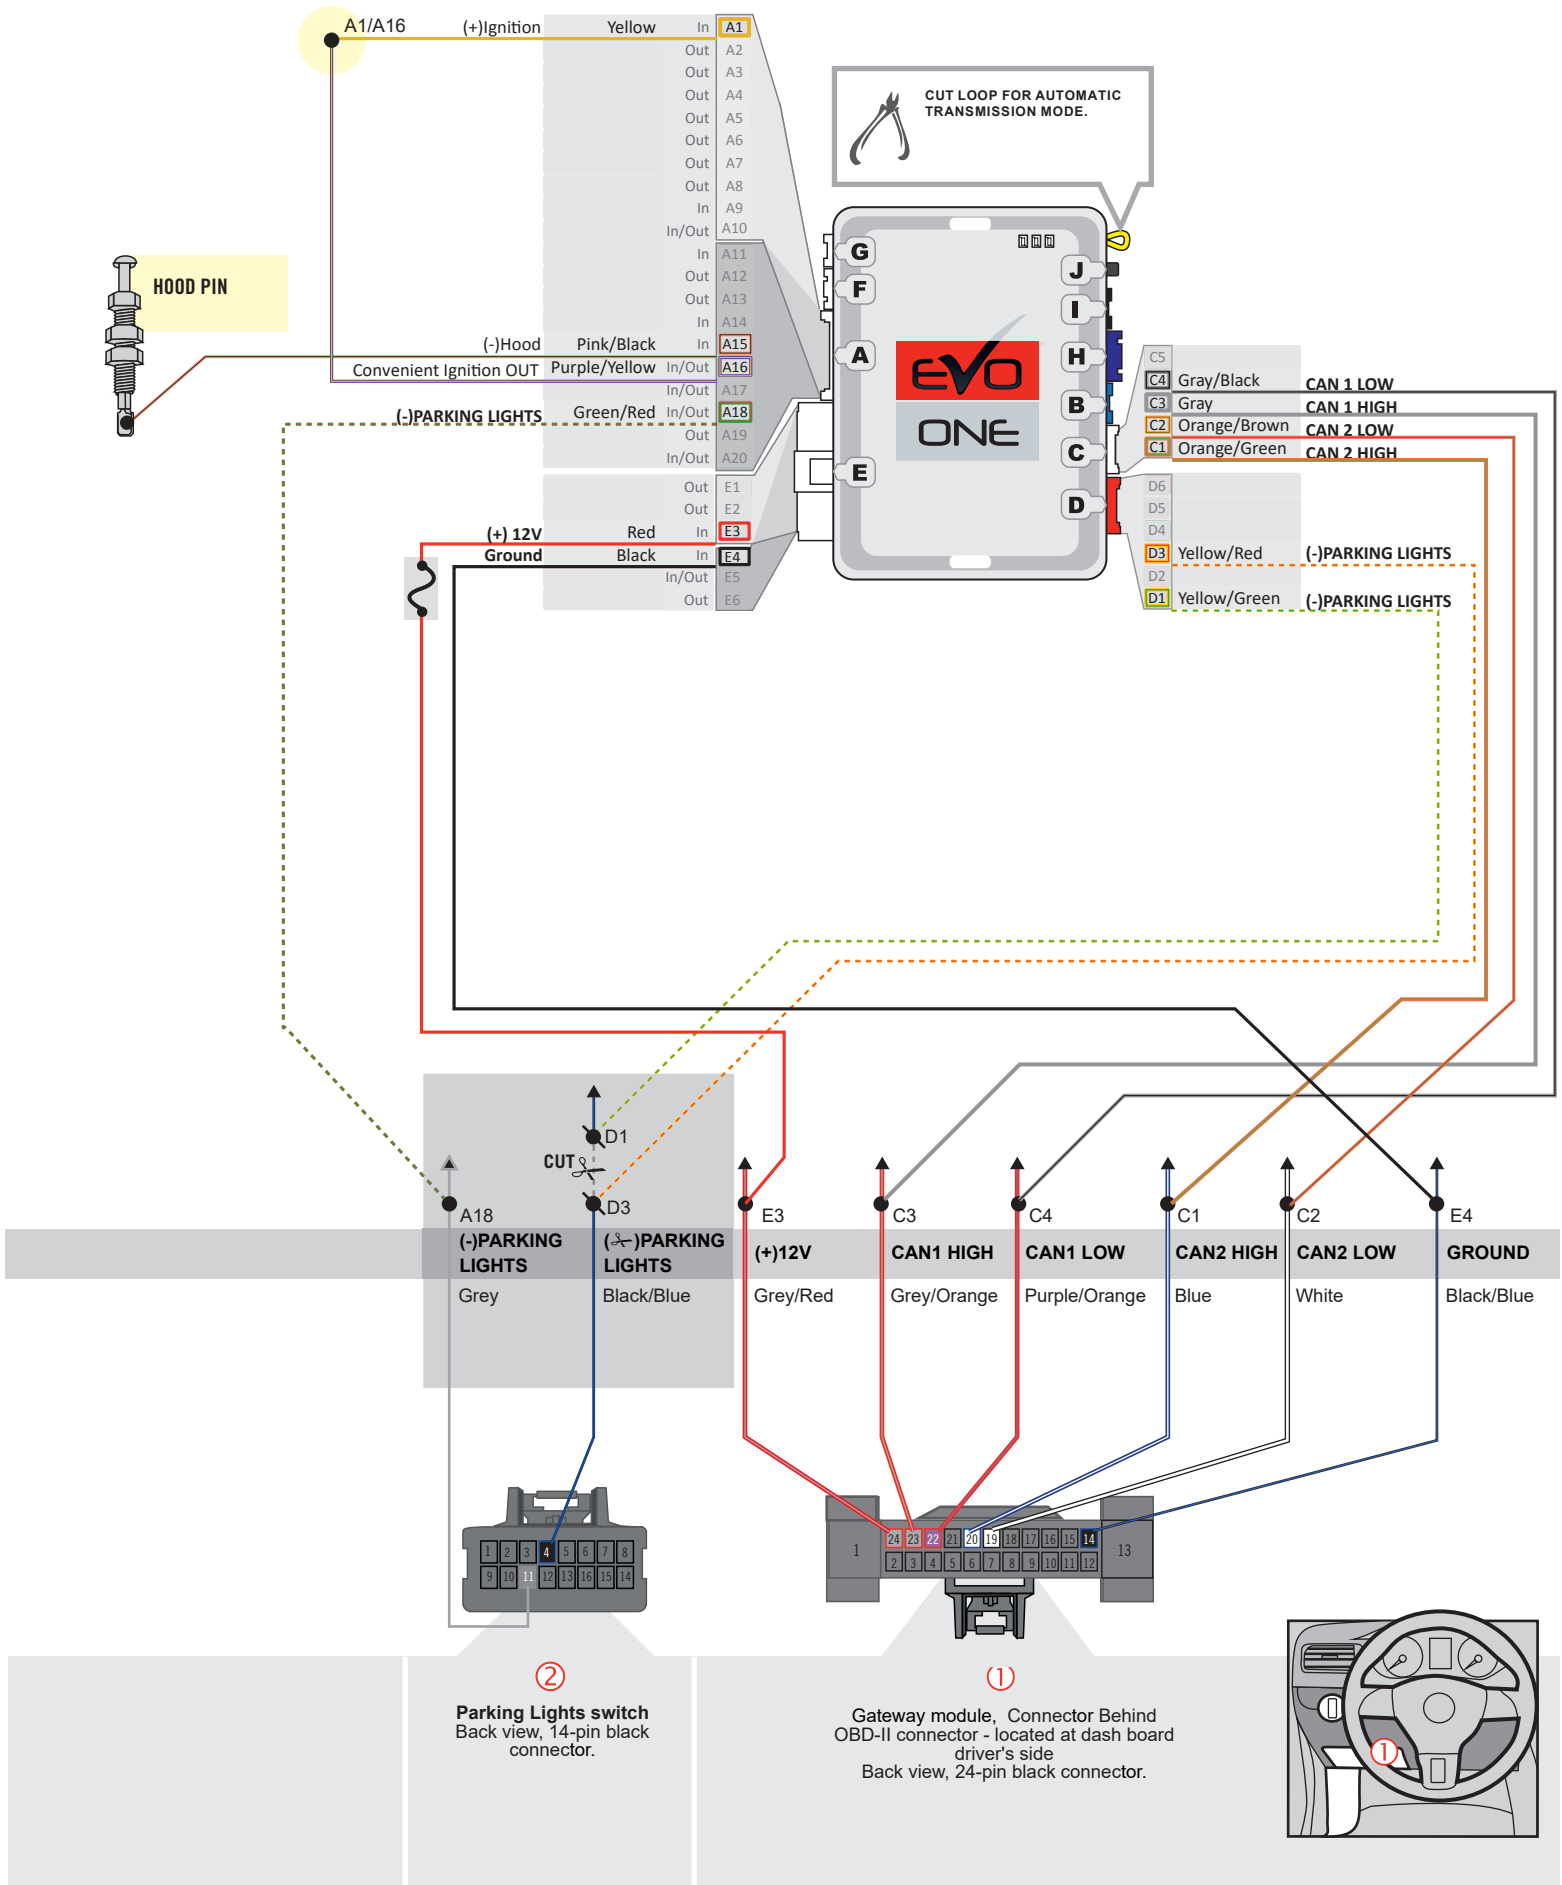

THAR-FOR3 | T-HARNESS - AUTOMATIC TRANSMISSION |

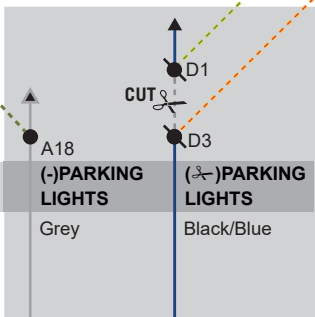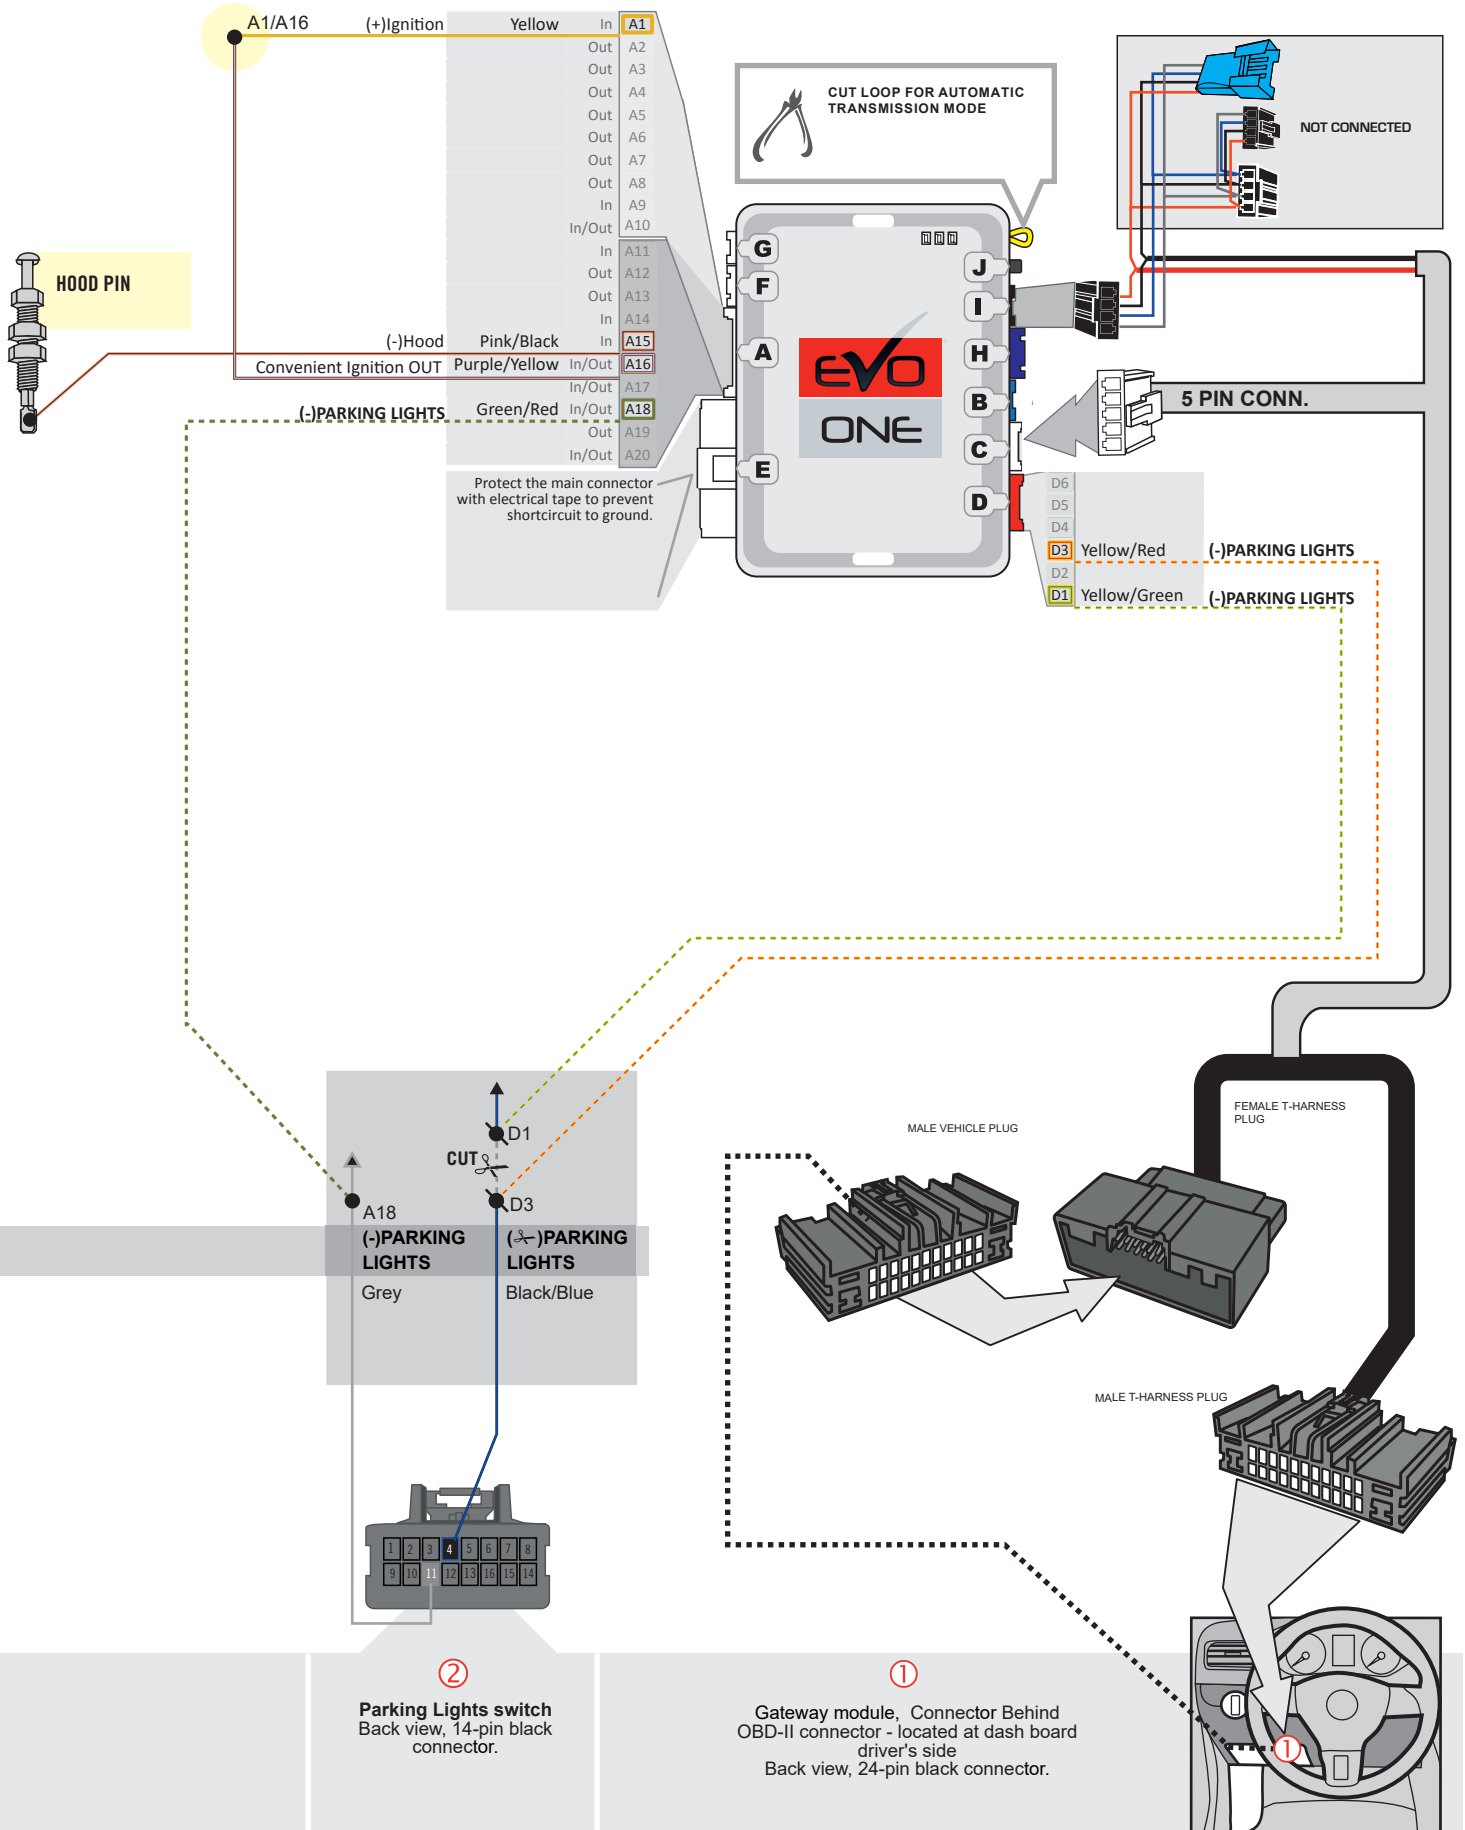

② Parking Lights switch
Back view, 14-pin black connector.

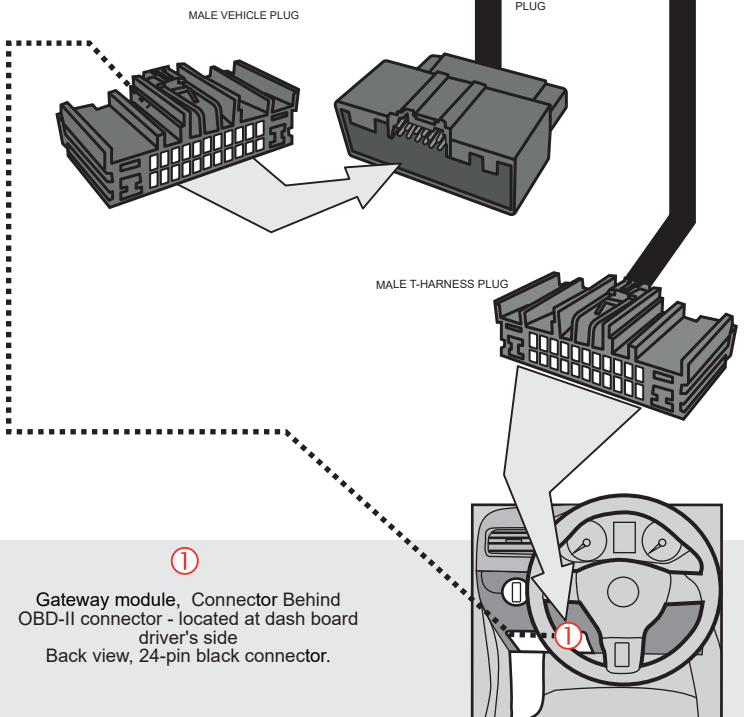

① Gateway module, Connector Behind OBD-II connector - located at dash board driver's side
Back view, 24-pin black connector.

DCRYPTOR PROGRAMMING PROCEDURE |



Parts required (not included)


- 1x FLASH LINK UPDATER, SOFTWARE | PROGRAMME
- 1x FLASH LINK MANAGER
- 1x Microsoft Windows Computer with Internet connection

OR

- 1x FLASH LINK MOBILE
- 1x FLASH LINK MOBILE APP
- Smartphone Android or iOS with Internet connection (Internet provider charges may apply)


BEFORE PROGRAMMING SET THE UNIT OPTIONS AND SAVE.

1

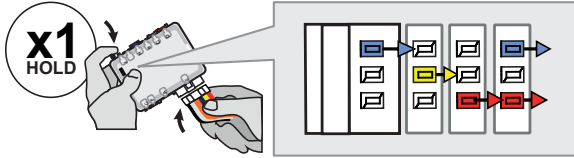

Press and hold the programming button:
Insert the 6-Pin Main connector.


WITH T-HARNESS

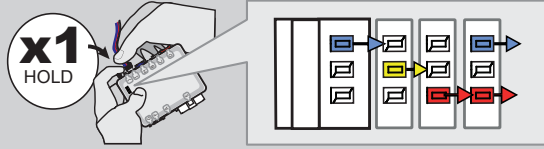

Press and hold the programming button:
Connect the 4-PIN Data-link harness (Black connector).


↳ The LEDs will alternate between BLUE, RED, YELLOW & BLUE/RED flashes.

2

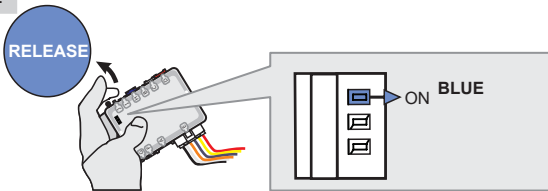


Release the programming button when the BLUE LED is ON.

 If the BLUE LED is not ON solid **disconnect** the 6-Pin Main connector and go back to step 1.




WITH T-HARNESS

 If the LED is not solid BLUE disconnect the 4 Pin connector (Data-Link) and go back to step 1.




3

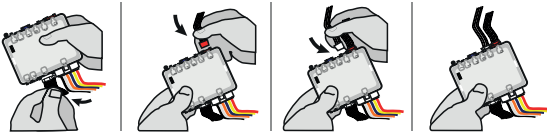

Insert the required remaining connectors.

4

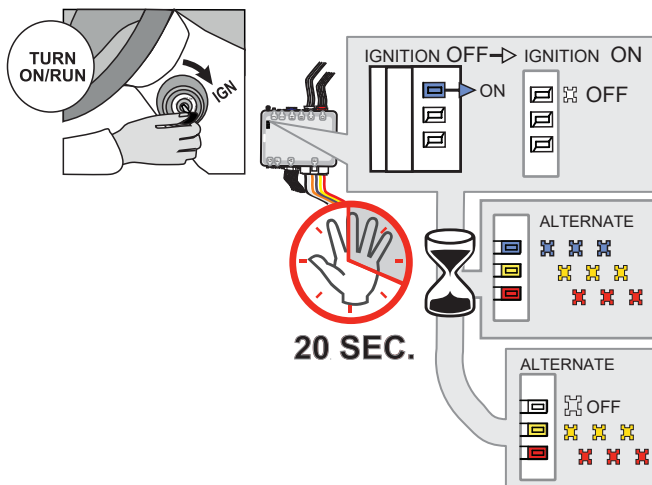

Turn the key to the Ignition ON/RUN position.

↳ The BLUE LED will turn OFF.

↳ The BLUE, YELLOW and RED LEDs will alternated.

Wait, at least 20 seconds, do not disconnect the modules or turn off the ignition.


↳ The RED and YELLOW LEDs will alternated.

Make sure that the DELs are flashing RED and YELLOW before continuing programming.



KEY BYPASS PROGRAMMING PROCEDURE 2/2


5

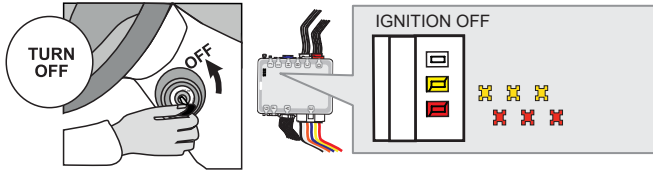

Turn the key to the OFF position.


↳ The RED and YELLOW LEDs alternate.

6

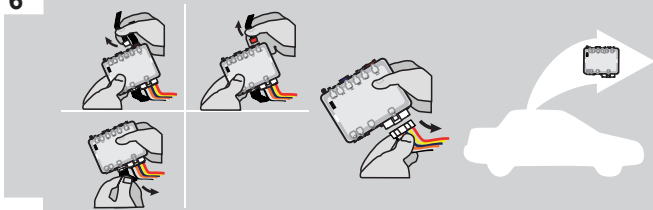

Disconnect all connectors and after the 6-Pin (Main-Harness) or the 4-Pin Data-link connector.


7

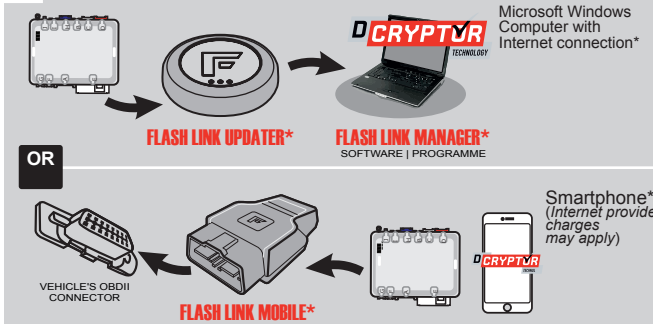


Use the tool: FLASH LINK UPDATER or FLASH LINK MOBILE to visit the DCryptor menu.

*Parts required (not included)

8

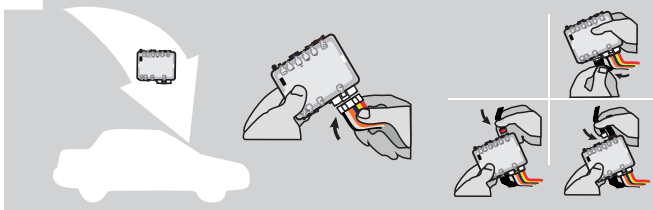


AFTER DCRYPTOR PROGRAMMING COMPLETED Go back to the vehicle and reconnect the 6-Pin (Main-Harness) or the 4-pins (Data-Link) connector and after all the remaining connector.

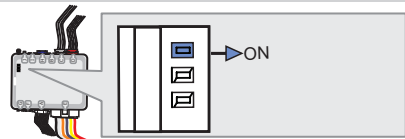

↳ The BLUE LED will turn ON.

9

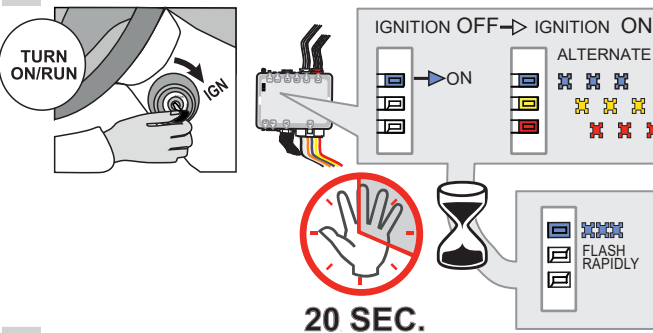


Turn the key to the Ignition ON/RUN position.

↳ The BLUE, YELLOW and RED LEDs will alternate.

Wait, at least 20 seconds, do not disconnect the modules or turn off the ignition.

↳ The BLUE LED will flash rapidly.

10

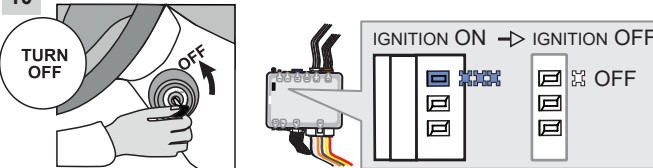

Turn the key to the OFF position.

↳ The BLUE will turn OFF.




The module is now programmed.

REMOTE STARTER PROGRAMMING PROCEDURE



REFER TO THE **QUICK INSTALL GUIDE** INCLUDED WITH THE MODULE FOR THE REMOTE STARTER PROGRAMMING.

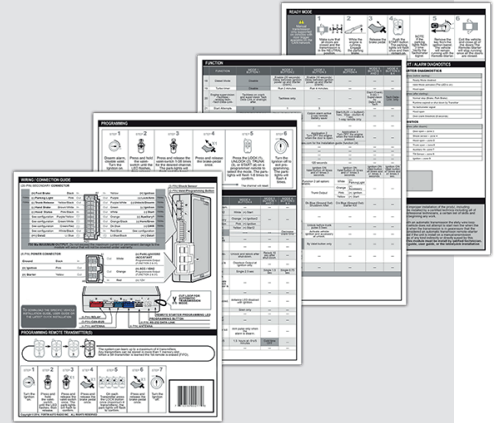

REMOTE STARTER FUNCTIONALITY |



All doors must be closed.



Remote start the vehicle.



Unlock the doors with the remote-starter remote or the OEM remote.



Insert and Turn the key to the Ignition ON/RUN position.



Press the brake pedal.




The vehicle can now be put in to gear and driven.

REGULAR & THAR-FOR3 INSTALLATION
ADDENDUM - SUGGESTED WIRING CONFIGURATION

ONLY COMPATIBLE WITH AUTOMATIC TRANSMISSION VEHICLES.

Vehicle functions supported in this diagram (functional if equipped)

VEHICLE	YEARS	Immobilizer bypass	T-Harness available (sold separately)	Lock	Unlock	Arm	Disarm	Heated Seats**	Rear Defrost**	RAP Disable	Parking Lights****	Tachometer	Door Status	Trunk Status	Hood Status*	Hand-Brake Status	Foot-Brake Status	Active OEM Remote Start	R.S. OEM remote Stand Alone compatible
FORD																			
Fusion	Push-to-Start 2020	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
	Hybrid Push-to-Start 2020	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
LINCOLN																			
Continental	Push-to-Start 2020	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•

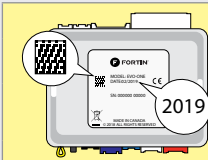
COMPATIBLE MODULE REQUIRED:
QR CODE ON THE LABEL MANUFACTURED AFTER: 2019

FIRMWARE VERSION

58.[02]

MINIMUM

 To add the firmware version and the options, use the **FLASH LINK UPDATER** or **FLASH LINK MOBILE** tool, sold separately.

Program bypass option:

UNIT OPTION

DESCRIPTION

C1

OEM Remote status (Lock/Unlock) monitoring

D6

Push-to-Start

IF THE VEHICLE IS NOT EQUIPPED WITH FUNCTIONAL HOOD PIN:
A11
OFF

Hood trigger (Output Status).

Vehicle hybrid only
D4

Hybrid mode (Vehicle hybrid only)

(vehicule hybride seulement)


Program remote starter option for R.S. OEM REMOTE STAND ALONE:

FUNCTION

MODE

DESCRIPTION

38
2

Enable Press 3x Lock to remote start with the OEM remote.

NOTES

The vehicles OEM remote and SmartKey are still operable during remote start.

****Heated seats** The heated seats and rear defrost activate automatically when it cold.

****Rear Defrost**
*****Parking Lights** The parking Lights at remote start only.

MANDATORY INSTALL
*** HOOD PIN**

HOOD STATUS : THE HOOD PIN SWITCH (INCLUDED) MUST BE INSTALLED IF THE VEHICLE CAN BE REMOTE STARTED WITH THE HOOD OPEN, SET FUNCTION A11 TO OFF.

A11
OFF
SECURITY STICKER


Included

Notice: the installation of safety elements are mandatory. The hood pin and the sticker are essential security elements and must be installed.

THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.

DESCRIPTION | DESCRIPTION

	Parts required (Not included)	PAGE
--	-------------------------------	------

WIRE TO WIRE DIAGRAM

Page 3

THARNESS DIAGRAM

THARNESS THAR-FOR3


1x THAR-FOR3

Page 4




② Parking Lights switch


① Gateway module, Behind OBD-II connector

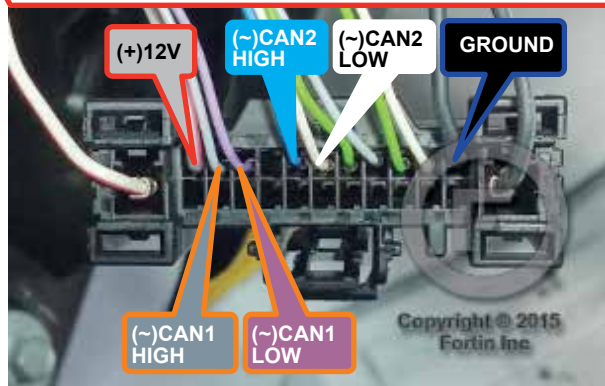

AUTOMATIC TRANSMISSION WIRING CONNECTION |

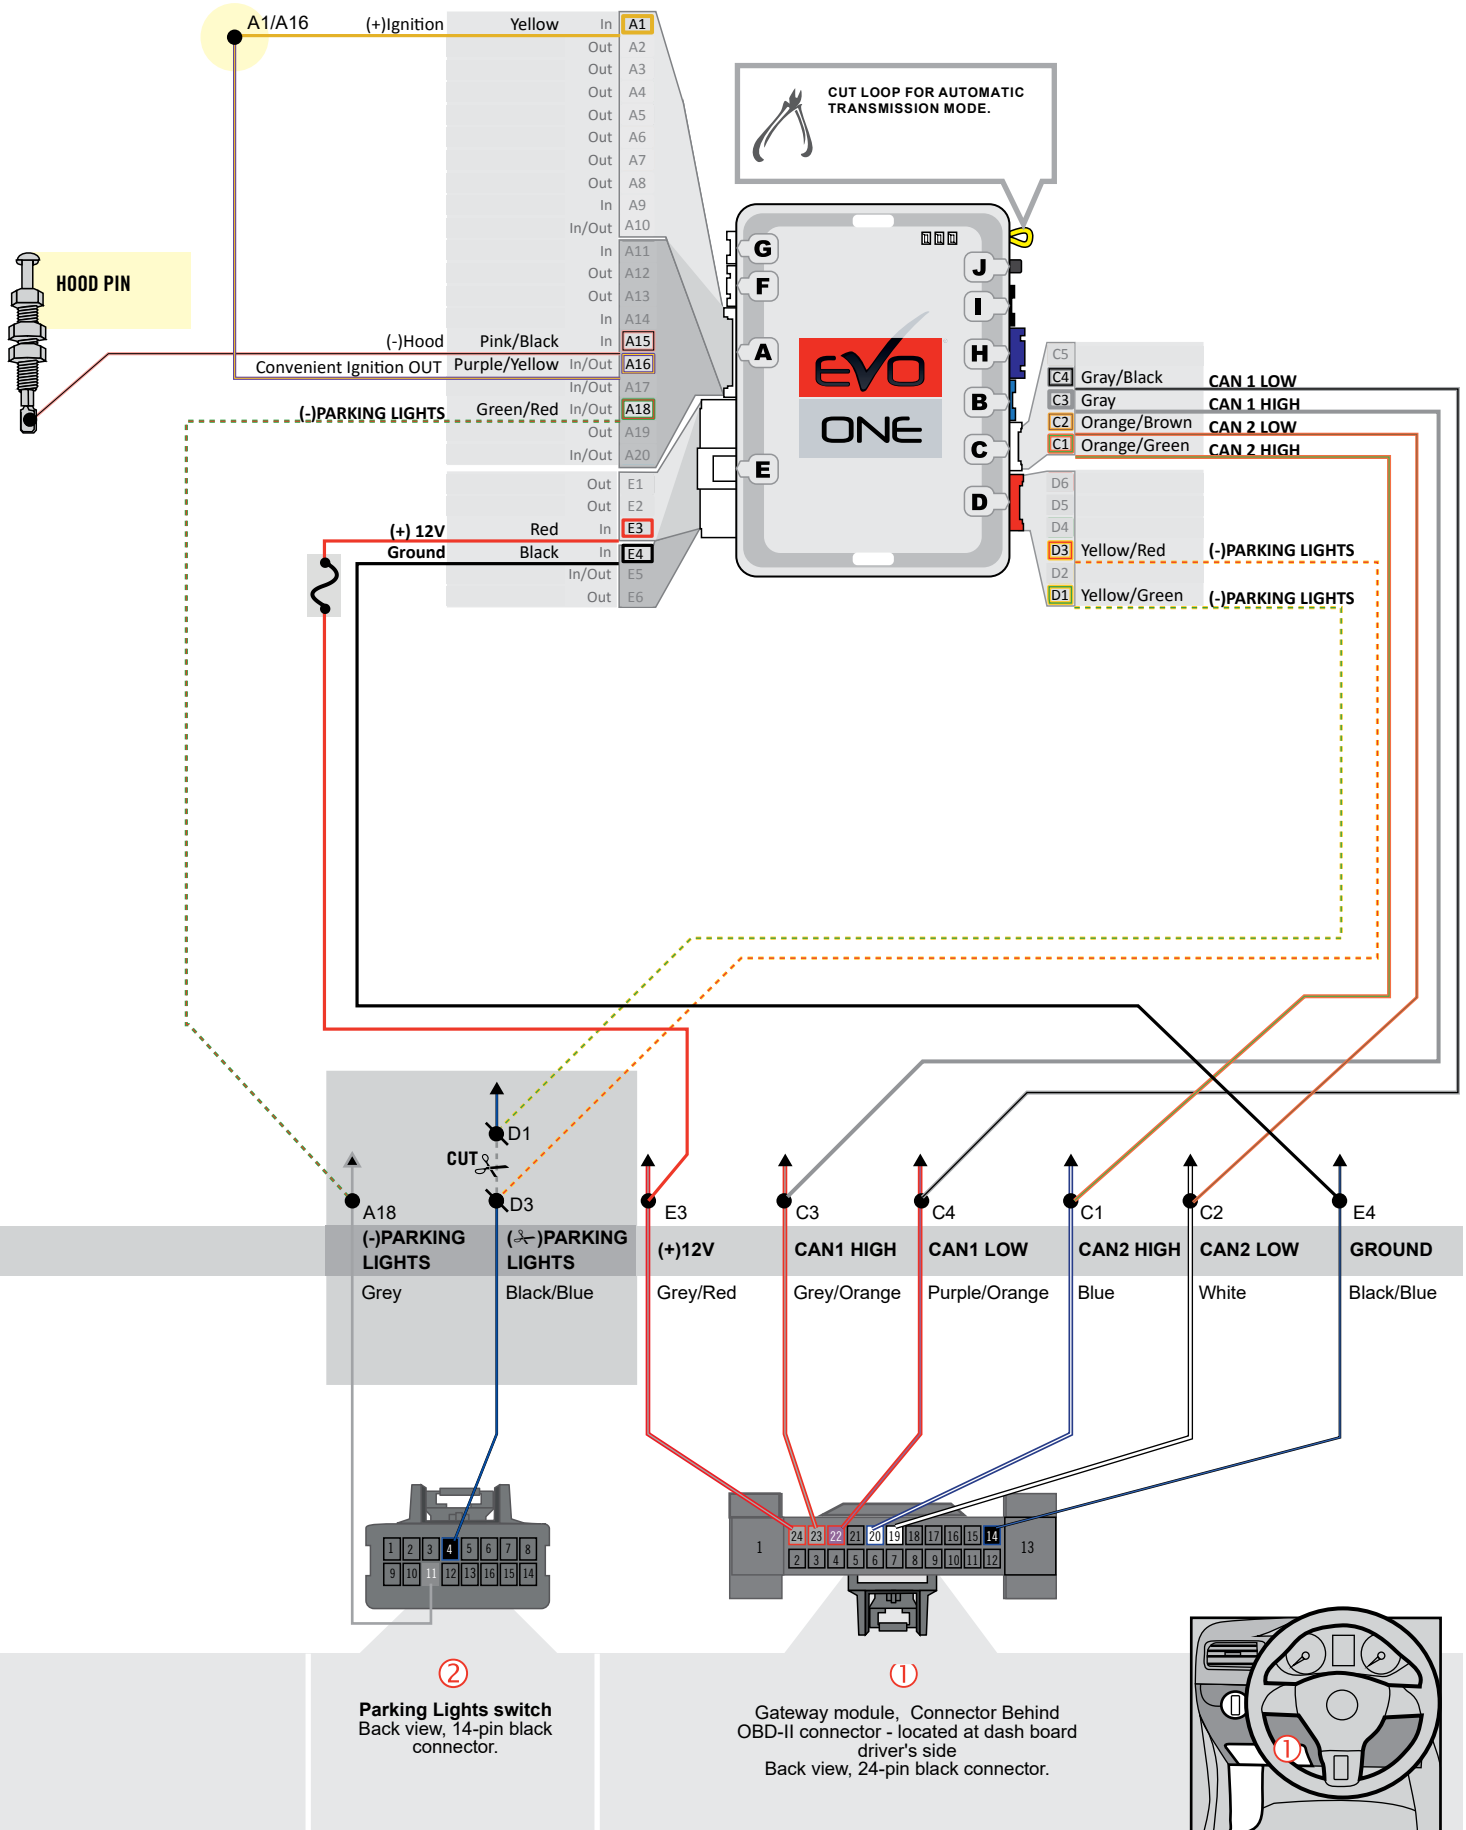

THAR-FOR3 | T-HARNESS - AUTOMATIC TRANSMISSION |

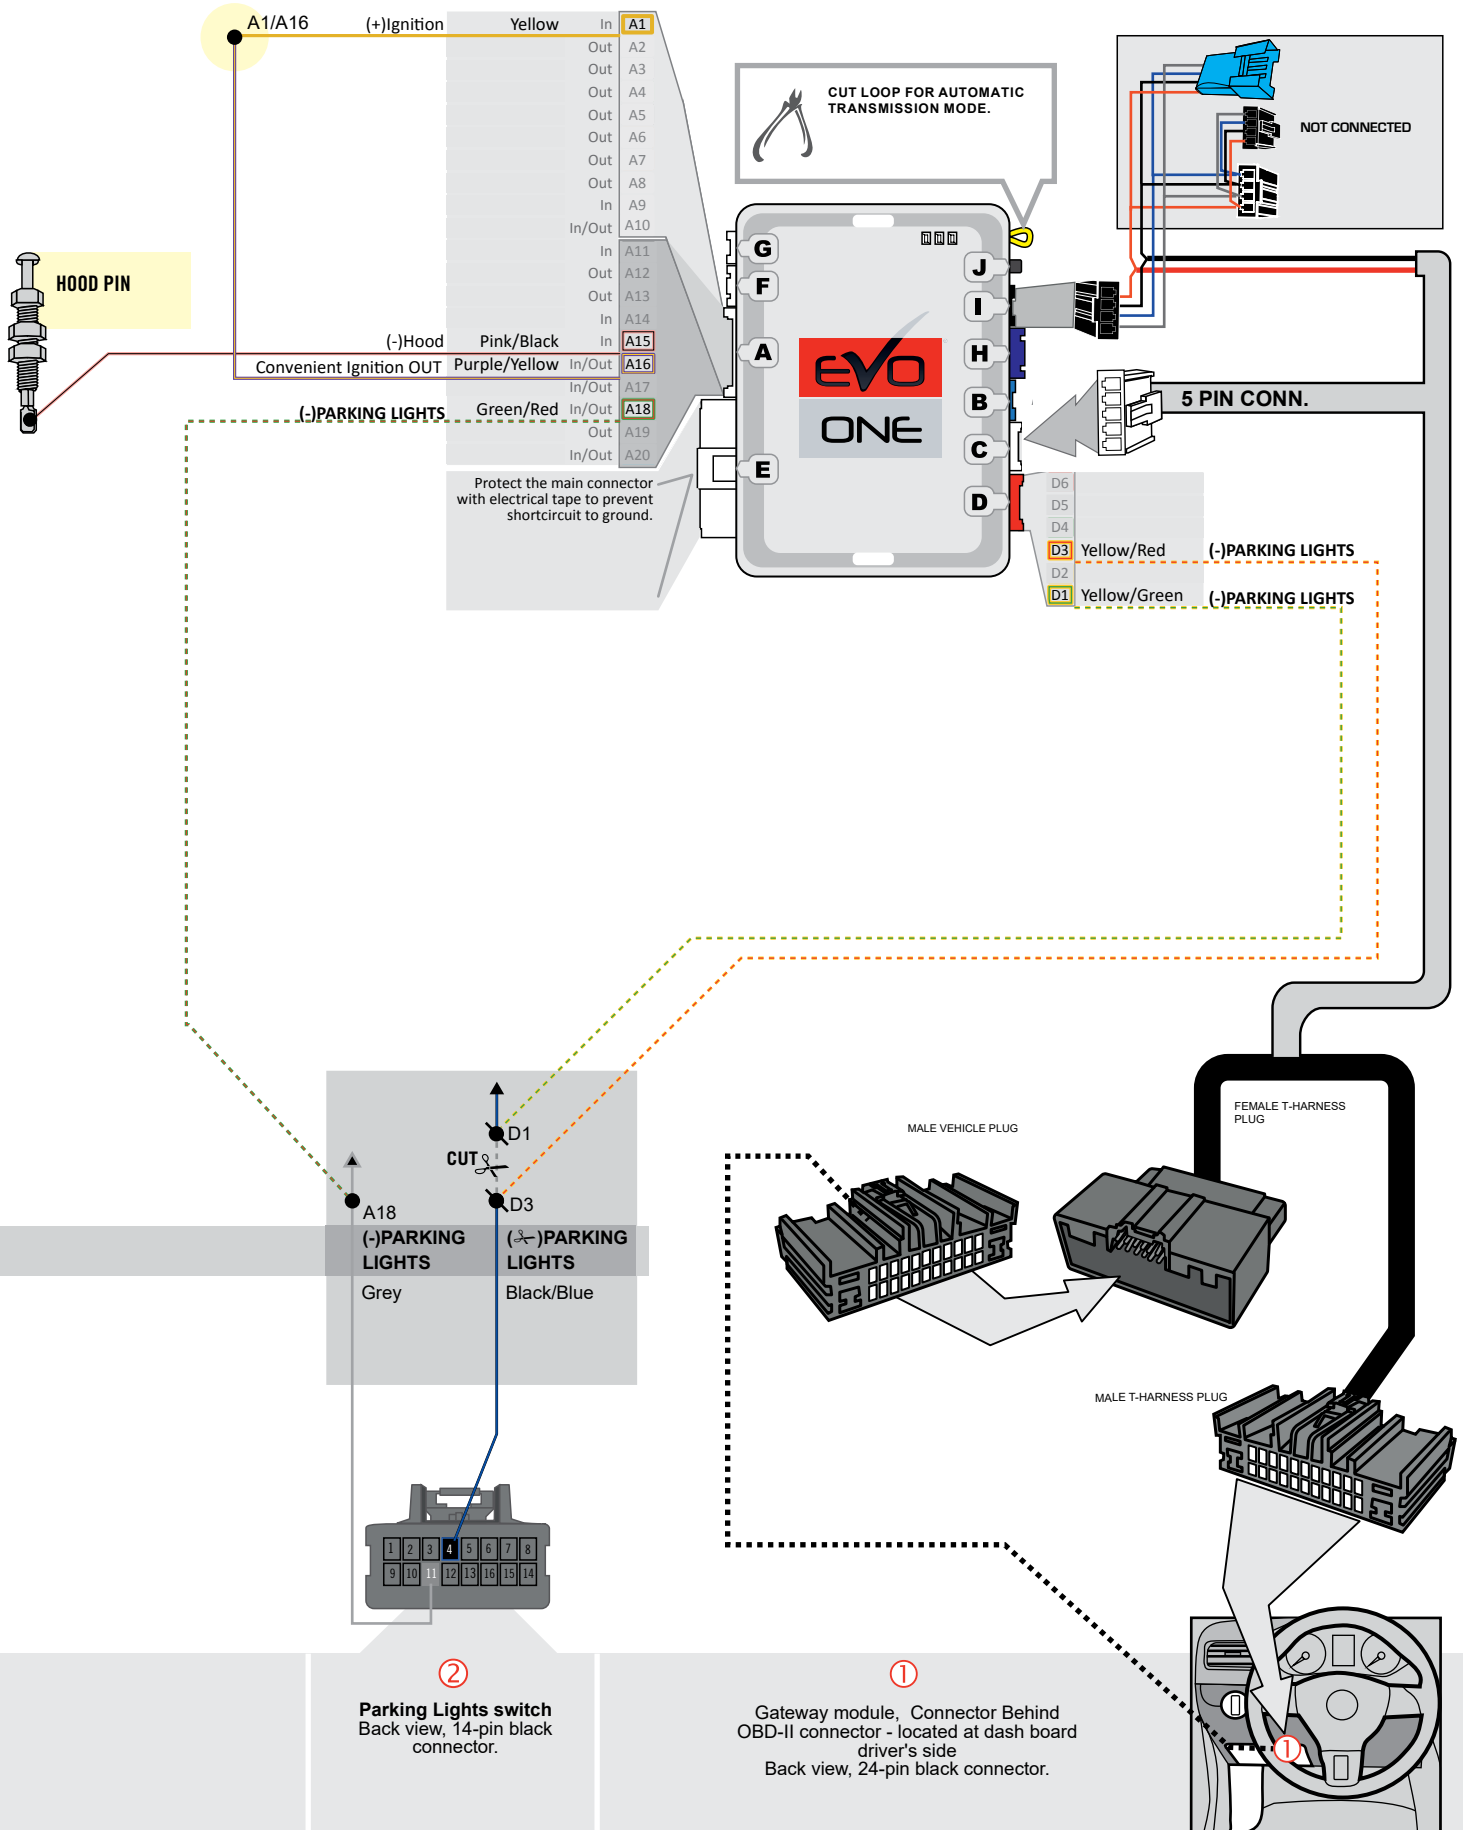

DCRYPTOR PROGRAMMING PROCEDURE |



Parts required (not included)


- 1x **FLASH LINK UPDATER,**
- 1x **FLASH LINK MANAGER**
SOFTWARE | PROGRAMME
- 1x Microsoft Windows Computer with Internet connection

OR

- 1x **FLASH LINK MOBILE**
- 1x **FLASH LINK MOBILE APP**
- Smartphone Android or iOS with Internet connection
(Internet provider charges may apply)

BEFORE PROGRAMMING SET THE UNIT OPTIONS AND SAVE.

1

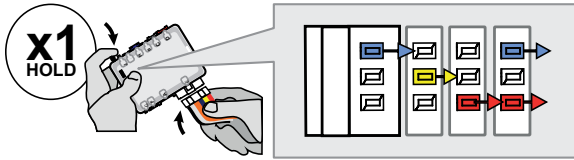


Press and hold the programming button:
Insert the 6-Pin Main connector.


Press and hold the programming button:
Connect the 4-PIN Data-link harness (Black connector).

↳ The LEDs will alternate between BLUE, RED, YELLOW & BLUE/RED flashes.

WITH T-HARNESS

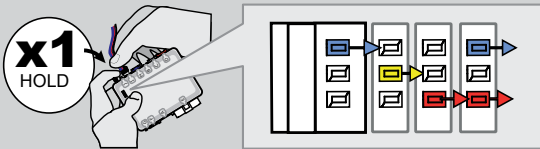


2

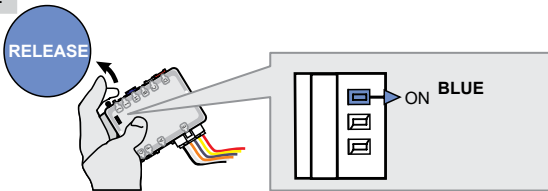


Release the programming button when the BLUE LED is ON.

 If the BLUE LED is not ON solid disconnect the 6-Pin Main connector and go back to step 1.




WITH T-HARNESS

 If the LED is not solid BLUE disconnect the 4 Pin connector (Data-Link) and go back to step 1.




3

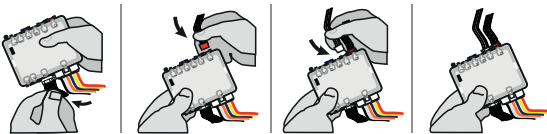

Insert the required remaining connectors.

4

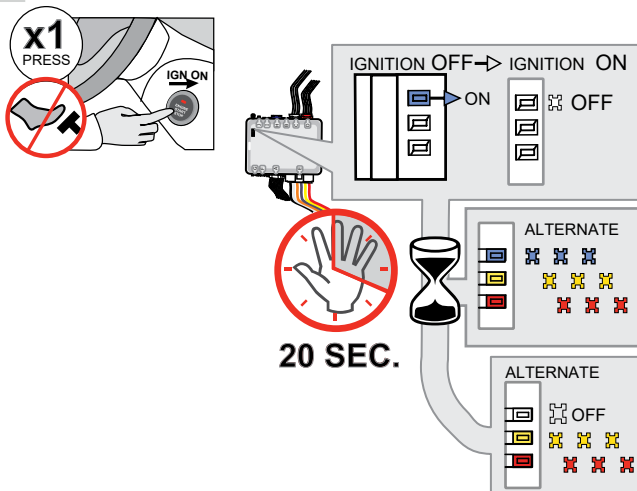

Do not press the brake pedal. **Press** the Push-to-Start button once to turn on the ignition.

 
↳ The BLUE LED will turn OFF.

↳ The BLUE, YELLOW and RED LEDs will alternated.

Wait, at least 20 seconds, do not disconnect the modules or turn off the ignition.


↳ The RED and YELLOW LEDs will alternated.

Make sure that the DELs are flashing RED and YELLOW before continuing programming.



KEY BYPASS PROGRAMMING PROCEDURE 2/2 |


5

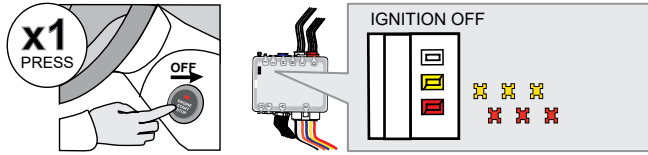

Press the Push-to-Start button once to turn off the ignition.

The RED and YELLOW LEDs alternate.

6

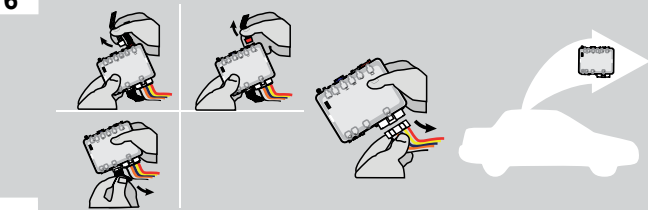

Disconnect all connectors and after the 6-Pin (Main-Harness) or the 4-Pin Data-link connector.


7




Use the tool: FLASH LINK UPDATER or FLASH LINK MOBILE to visit the DCryptor menu.

*Parts required (not included)

8

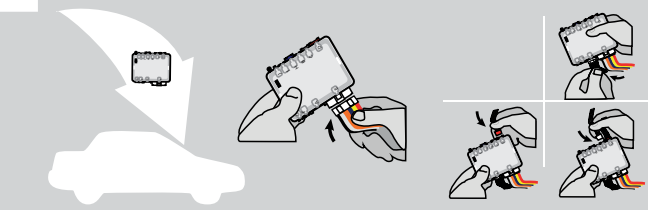


AFTER DCRYPTOR PROGRAMMING COMPLETED Go back to the vehicle and reconnect the 6-Pin (Main-Harness) or the 4-pins (Data-Link) connector and after all the remaining connector.

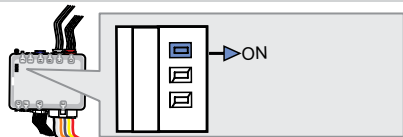

The BLUE LED will turn ON.

9

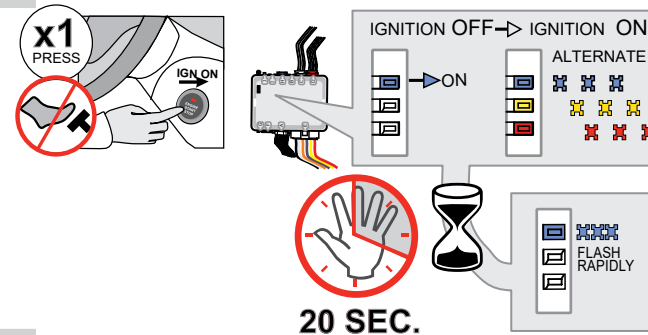


Do not press the brake pedal. Press the Push-to-Start button once to turn on the ignition.

The BLUE, YELLOW and RED LEDs will alternate.

Wait, at least 20 seconds, do not disconnect the modules or turn off the ignition.

The BLUE LED will flash rapidly.

10

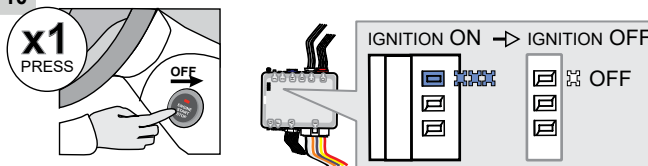

Press the Push-to-Start button once to turn off the ignition.

The BLUE will turn OFF.




The module is now programmed.

REMOTE STARTER PROGRAMMING PROCEDURE |



REFER TO THE **QUICK INSTALL GUIDE** INCLUDED WITH THE MODULE FOR THE REMOTE STARTER PROGRAMMING.

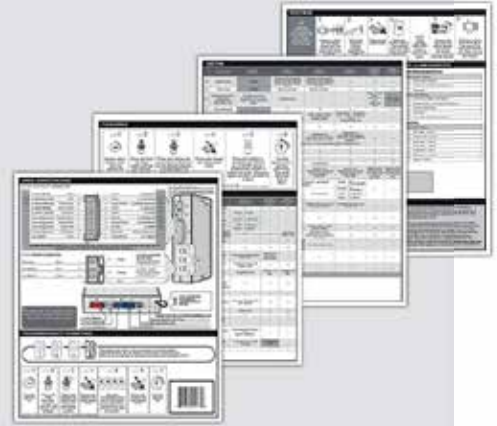

REMOTE STARTER FUNCTIONALITY |



All doors must be closed.

 


Remote start the vehicle.



Unlock the doors with either:

- The OEM remote
- The remote-starter remote
- Or the proximity remote



Enter the vehicle with the SMART-KEY.



DO NOT PRESS THE BRAKE PEDAL.

Press and release the Push-to-Start button once.



Press the brake pedal. The vehicle can now be put in to gear and driven.

If the Smart-Key is not detected the vehicle will shut down.

REGULAR & THAR-FOR3 INSTALLATION

ADDENDUM - SUGGESTED WIRING CONFIGURATION



ONLY COMPATIBLE WITH AUTOMATIC TRANSMISSION VEHICLES.

Vehicle functions supported in this diagram (functional if equipped)

	VEHICLE	YEARS ANNÉES	Immobilizer bypass	T-Harness available (sold separately)	Lock	Unlock	Arm	Disarm	Heated Seats**	Rear Defrost**	RAP Disable	Parking Lights****	Tachometer	Door Status	Trunk Status	Hood Status*	Hand-Brake Status	Foot-Brake Status	Active OEM Remote Start	R.S. OEM remote Stand Alone compatible	
	LINCOLN																				
Nautilus	Push-to-Start	2020	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•

	COMPATIBLE MODULE REQUIRED:	QR CODE ON THE LABEL MANUFACTURED AFTER: 2019	FIRMWARE VERSION 58.[02] MINIMUM	To add the firmware version and the options, use the FLASH LINK UPDATER or FLASH LINK MOBILE tool, sold separately.

UNIT OPTION	DESCRIPTION
C1	OEM Remote status (Lock/Unlock) monitoring
D6	Push-to-Start
A11	OFF Hood trigger (Output Status).

IF THE VEHICLE IS NOT EQUIPPED WITH FUNCTIONAL HOOD PIN:

FUNCTION	MODE	DESCRIPTION
38	2	Enable Press 3x Lock to remote start with the OEM remote.

Program remote starter option for R.S. OEM REMOTE STAND ALONE:

NOTES

The vehicles OEM remote and SmartKey are still operable during remote start.

**Heated seats The heated seats and rear defrost activate automatically when it cold.

***Parking Lights The parking Lights at remote start only.

MANDATORY INSTALL

* HOOD PIN



HOOD STATUS : THE HOOD PIN SWITCH (INCLUDED) MUST BE INSTALLED IF THE VEHICLE CAN BE REMOTE STARTED WITH THE HOOD OPEN, SET FUNCTION A11 TO OFF.

A11

OFF

SECURITY STICKER



Included

Notice: the installation of safety elements are mandatory. The hood pin and the sticker are essential security elements and must be installed.

THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.

DESCRIPTION | DESCRIPTION

	Parts required (Not included)	PAGE
--	-------------------------------	------

WIRE TO WIRE DIAGRAM

		Page 3
--	--	--------



THARNESS DIAGRAM

THARNESS THAR-FOR3	1x THAR-FOR3	Page 4
--------------------	--------------	--------




② Parking Lights switch


① Gateway module, Behind OBD-II connector

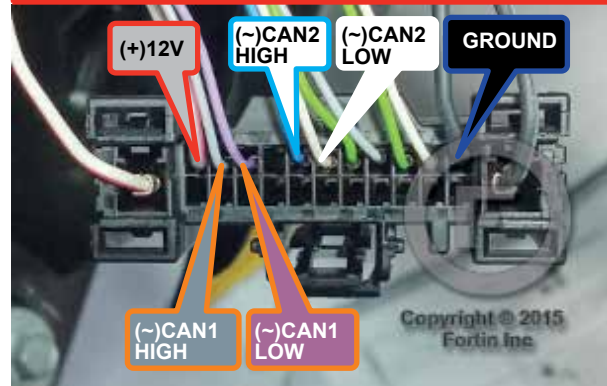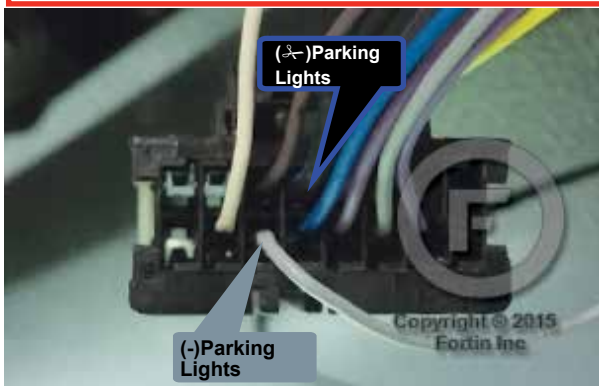

AUTOMATIC TRANSMISSION WIRING CONNECTION

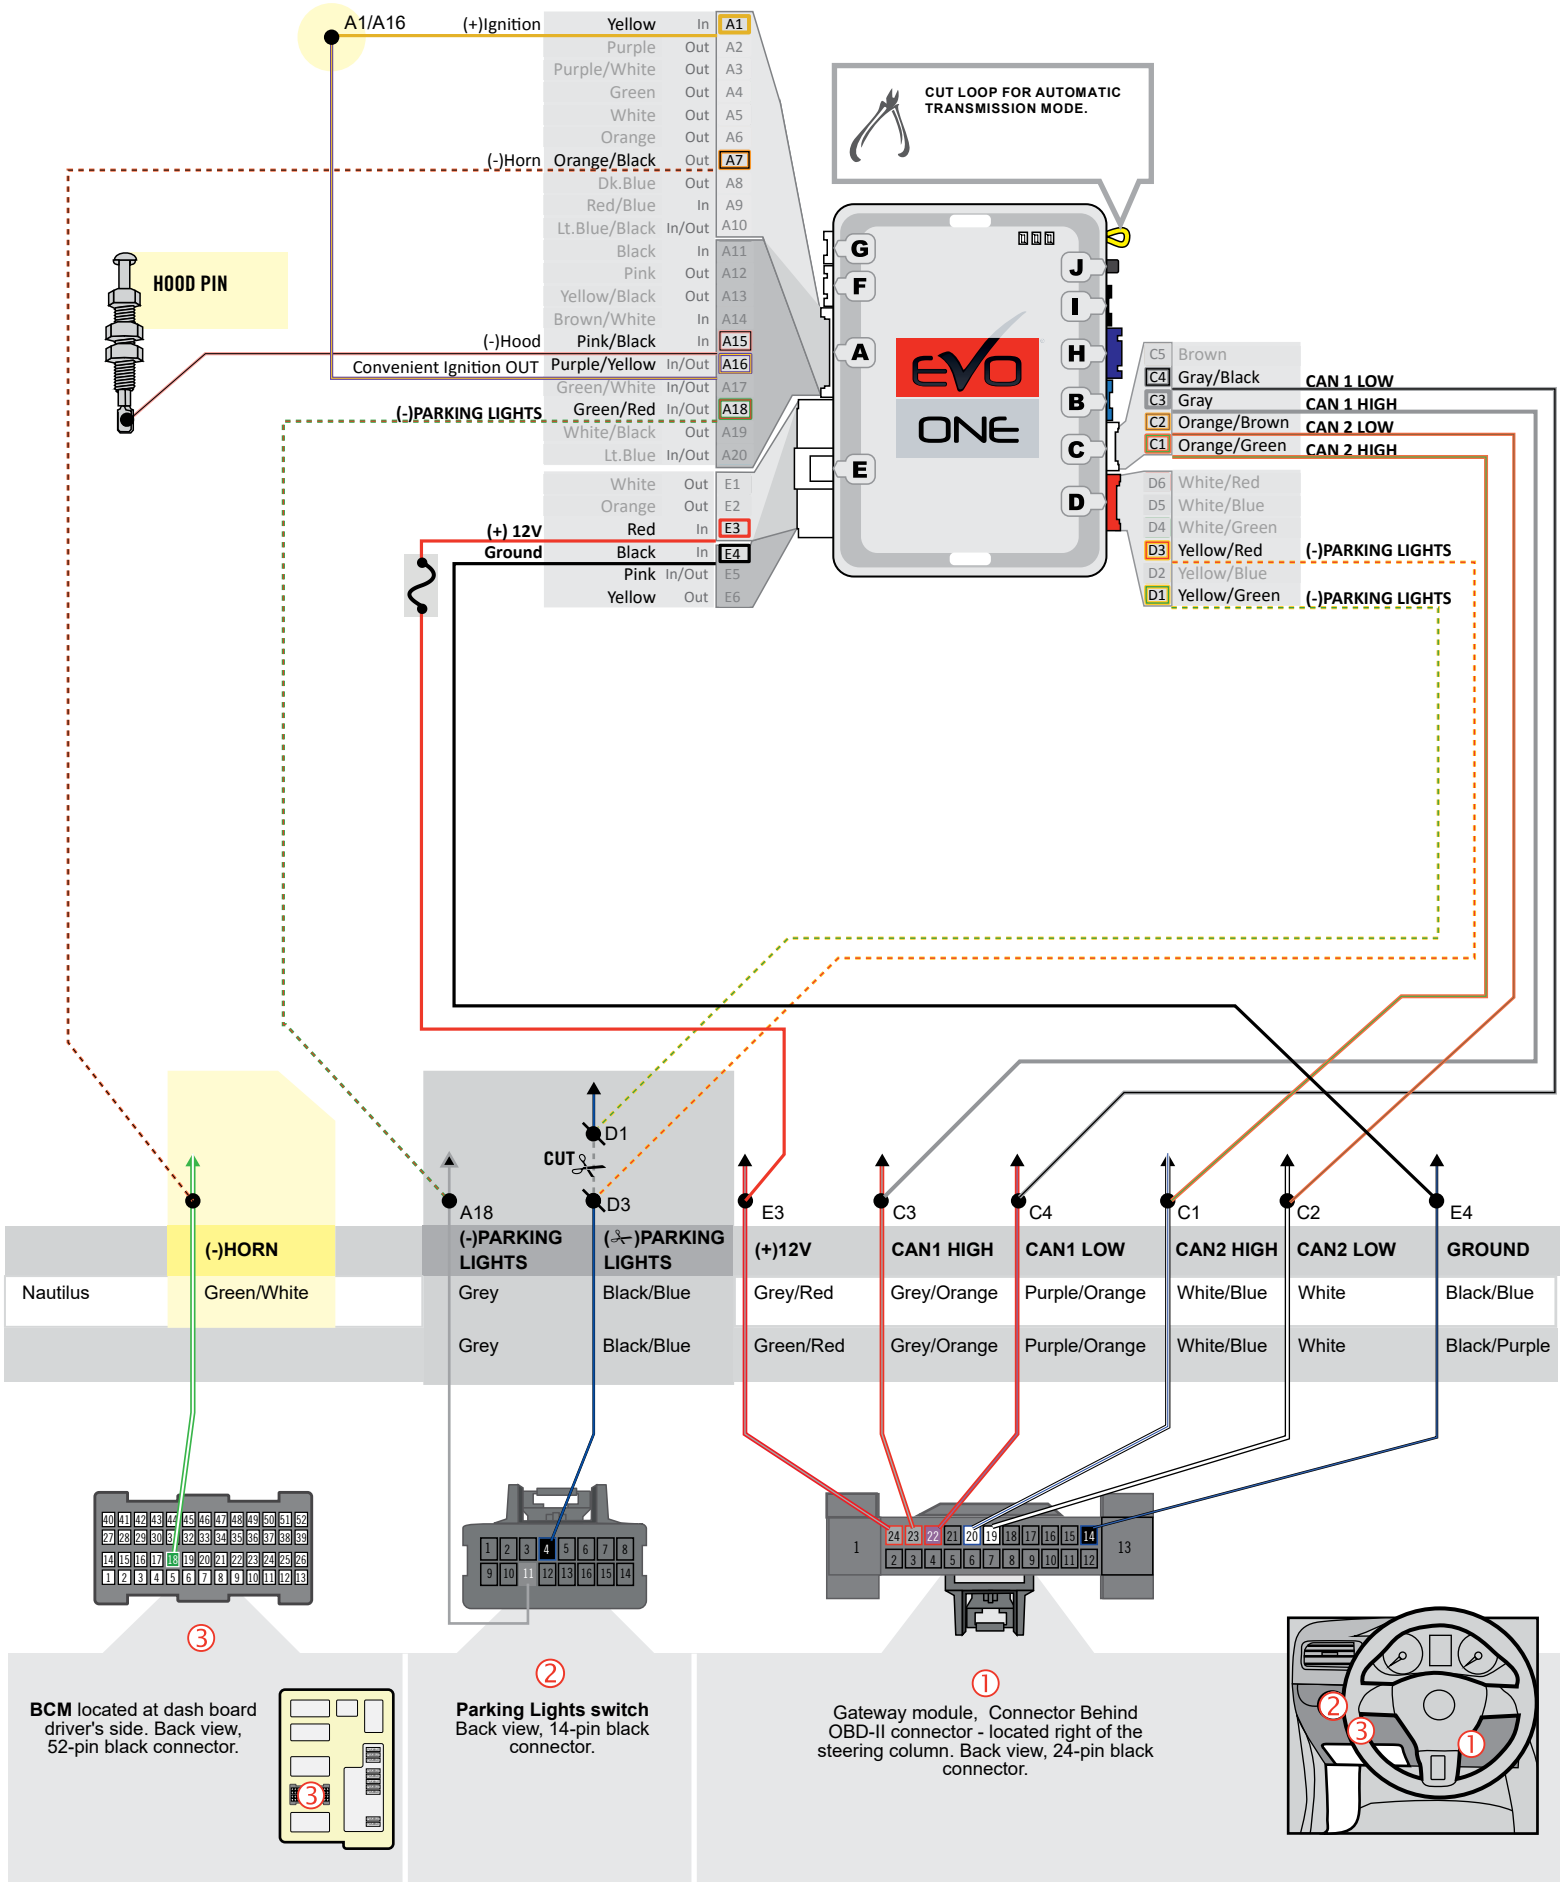

THAR-FOR3 | T-HARNESS - AUTOMATIC TRANSMISSION

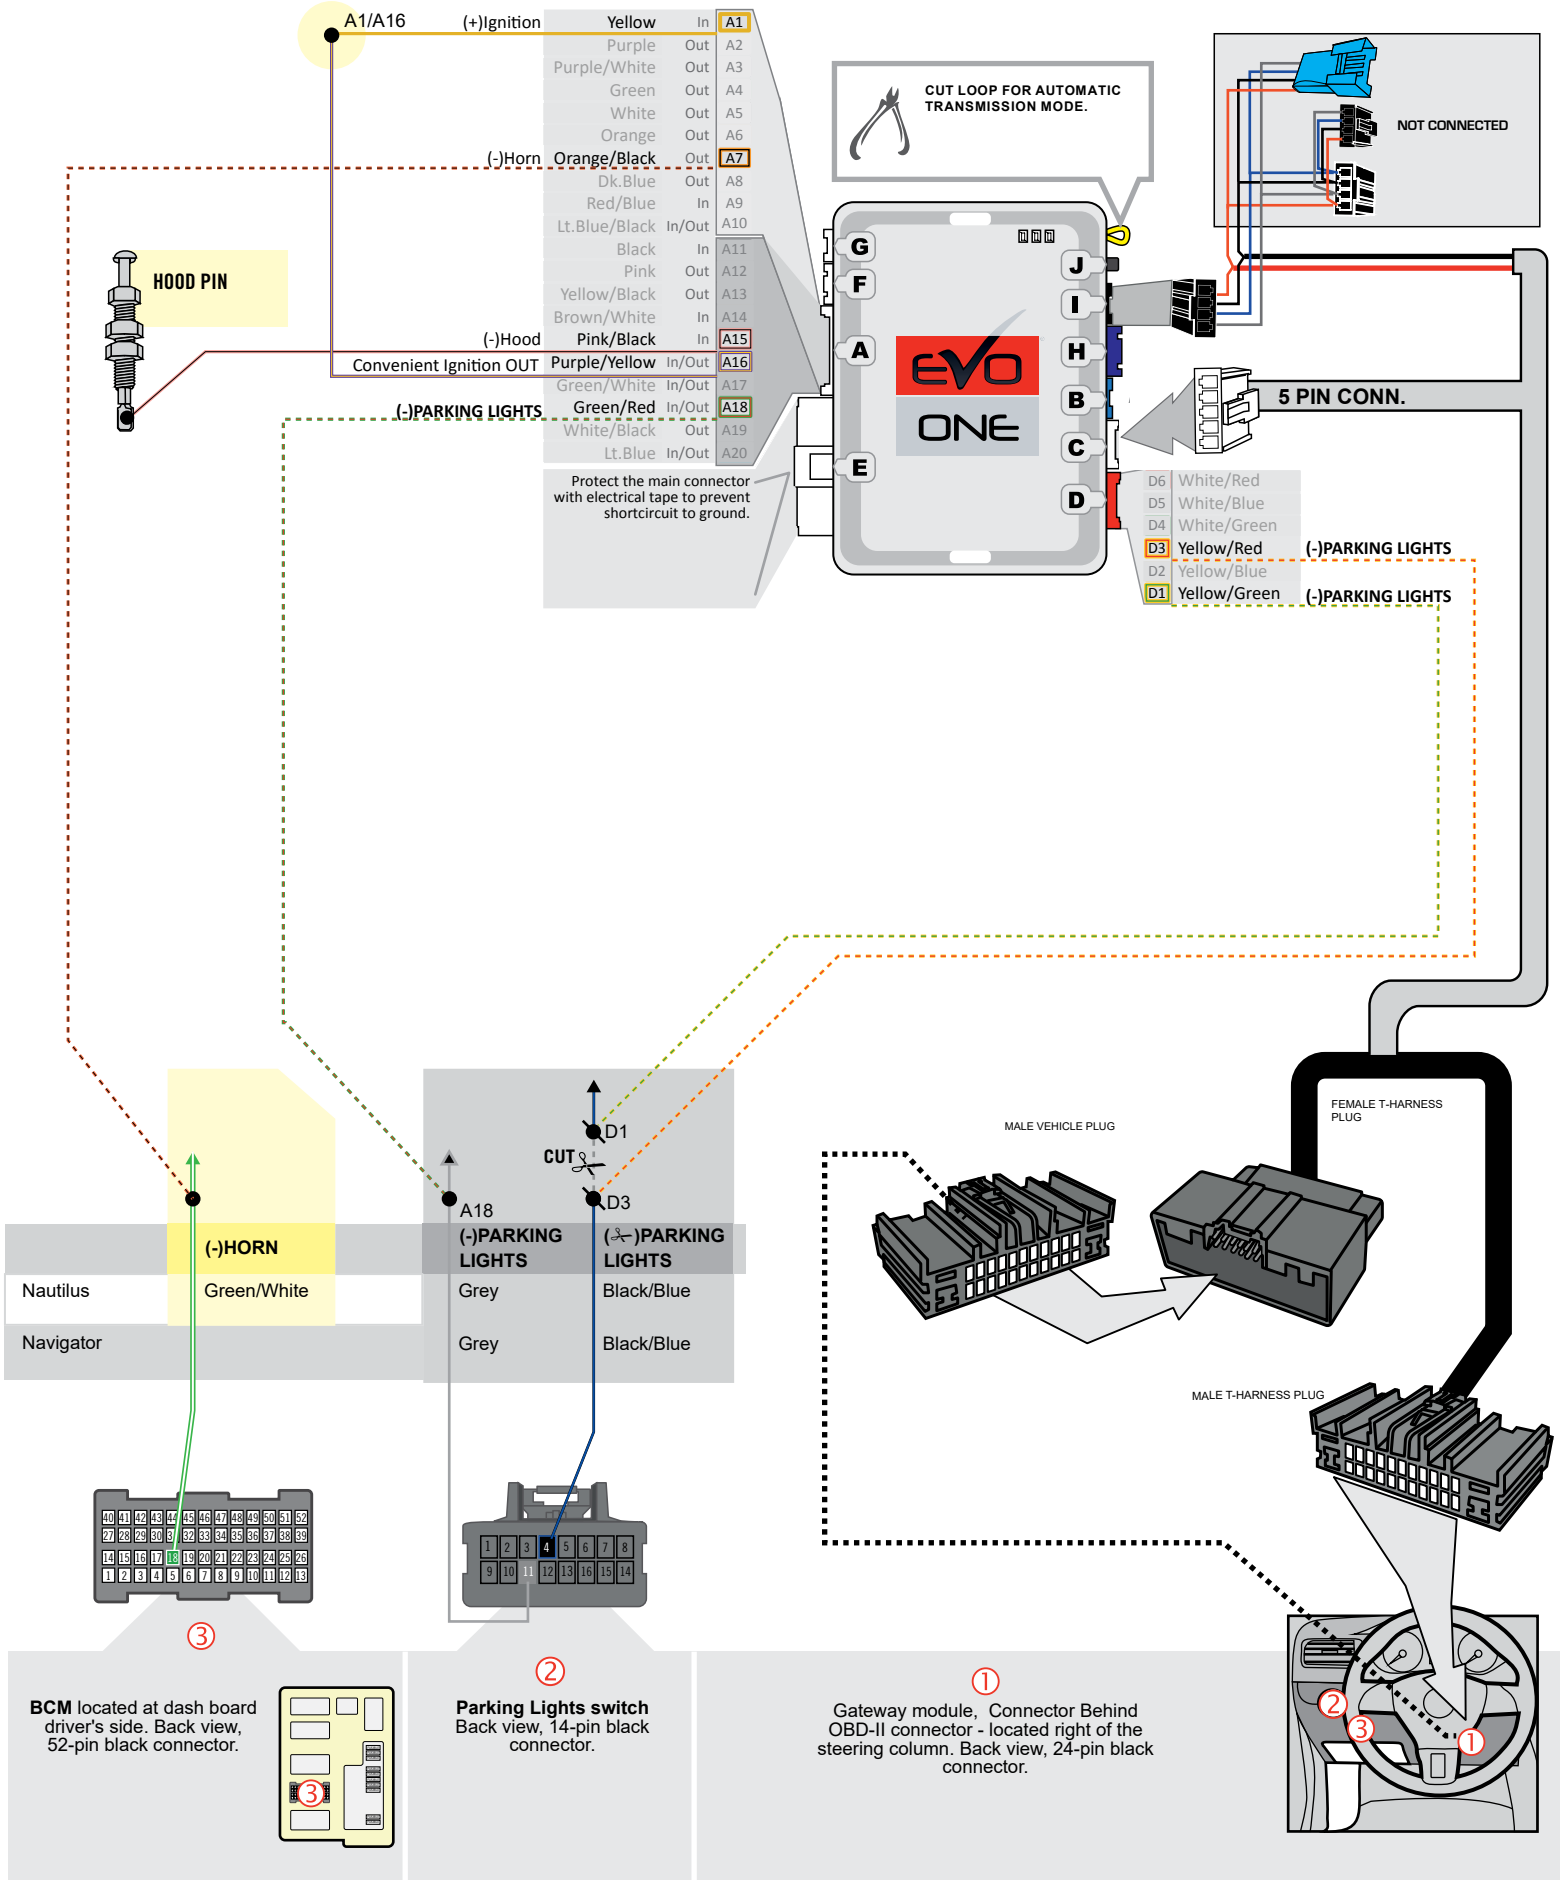

DCRYPTOR PROGRAMMING PROCEDURE



Parts required (not included)


- 1x **FLASH LINK UPDATER,**
- 1x **FLASH LINK MANAGER**
SOFTWARE | PROGRAMME
- 1x Microsoft Windows Computer with Internet connection

OR

- 1x **FLASH LINK MOBILE**
- 1x **FLASH LINK MOBILE APP**
- 1x Smartphone Android or iOS with Internet connection
(Internet provider charges may apply)


BEFORE PROGRAMMING SET THE UNIT OPTIONS AND SAVE.

1

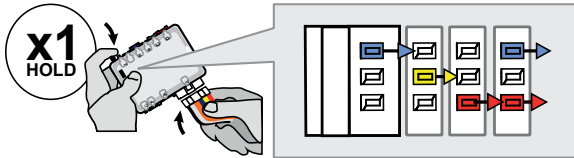

Press and hold the programming button:
Insert the 6-Pin Main connector.


WITH T-HARNESS

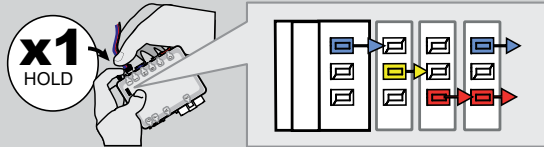

Press and hold the programming button:
Connect the 4-PIN Data-link harness (Black connector).


↳ The LEDs will alternate between BLUE, RED, YELLOW & BLUE/RED flashes.

2

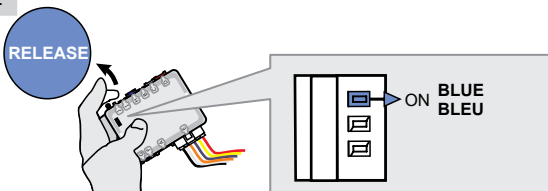


Release the programming button when the BLUE LED is ON.

 If the BLUE LED is not ON solid disconnect the 6-Pin Main connector and go back to step 1.




WITH T-HARNESS

 If the LED is not solid BLUE disconnect the 4 Pin connector (Data-Link) and go back to step 1.




3

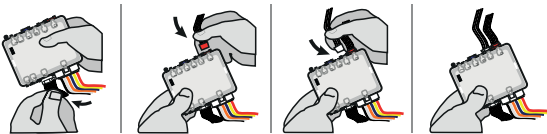

Insert the required remaining connectors.

4

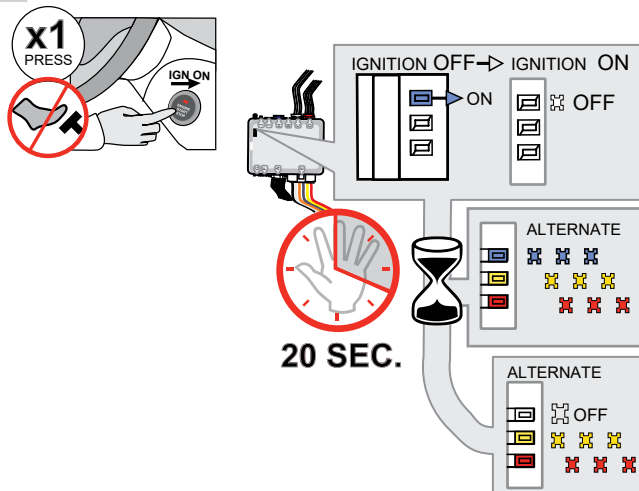

Do not press the brake pedal.
Press the Push-to-Start button once to turn on the ignition.

 
↳ The BLUE LED will turn OFF.

↳ The BLUE, YELLOW and RED LEDs will alternated.

Wait, at least 20 seconds, do not disconnect the modules or turn off the ignition.


↳ The RED and YELLOW LEDs will alternated.

Make sure that the DELs are flashing RED and YELLOW before continuing programming.



KEY BYPASS PROGRAMMING PROCEDURE 2/2


5

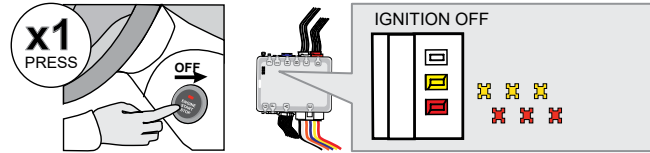

Press the Push-to-Start button once to turn off the ignition.


The RED and YELLOW LEDs alternate.

6

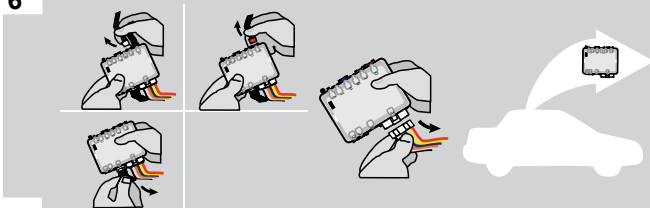

Disconnect all connectors and after the 6-Pin (Main-Harness) or the 4-Pin Data-link connector.


7

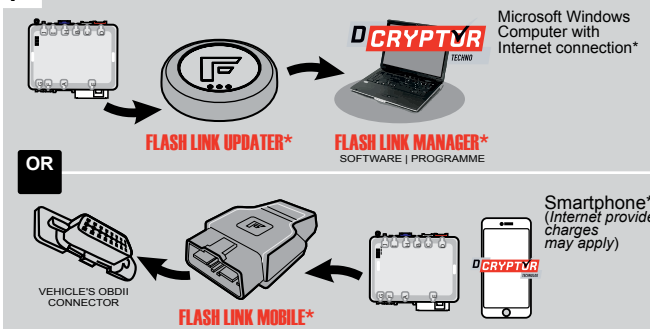


Use the tool: FLASH LINK UPDATER or FLASH LINK MOBILE to visit the DCryptor menu.

*Parts required (not included)

8

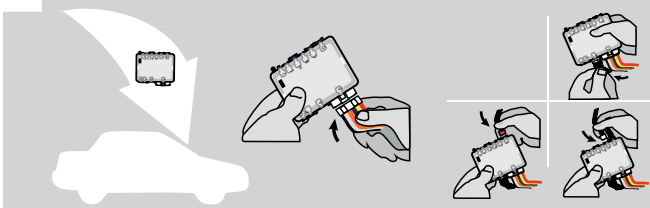


AFTER DCRYPTOR PROGRAMMING COMPLETED Go back to the vehicle and reconnect the 6-Pin (Main-Harness) or the 4-pins (Data-Link) connector and after all the remaining connector.

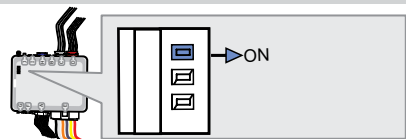

The BLUE LED will turn ON.

9

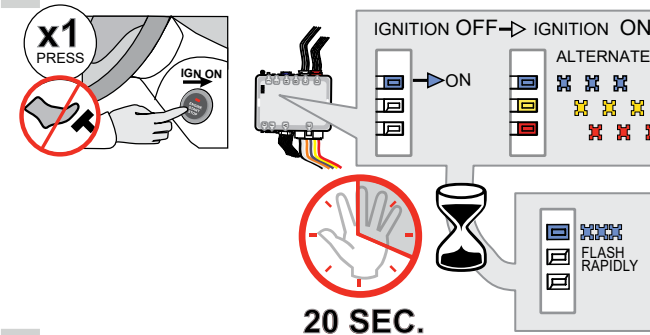


Do not press the brake pedal. Press the Push-to-Start button once to turn on the ignition.

The BLUE, YELLOW and RED LEDs will alternate.

Wait, at least 20 seconds, do not disconnect the modules or turn off the ignition.

The BLUE LED will flash rapidly.

10

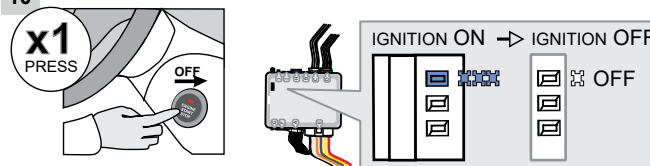

Press the Push-to-Start button once to turn off the ignition.

The BLUE will turn OFF.




The module is now programmed.

REMOTE STARTER PROGRAMMING PROCEDURE



REFER TO THE **QUICK INSTALL GUIDE** INCLUDED WITH THE MODULE FOR THE REMOTE STARTER PROGRAMMING.

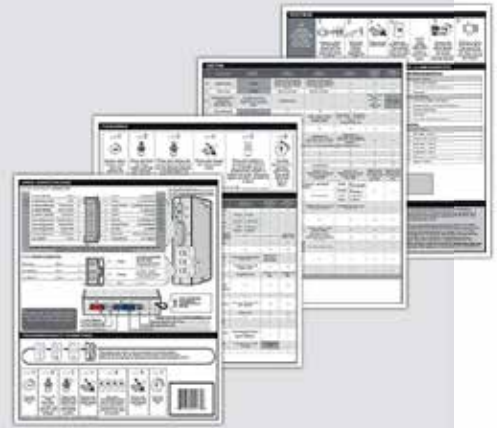

REMOTE STARTER FUNCTIONALITY



All doors must be closed.

 


Remote start the vehicle.



Unlock the doors with either:

- The OEM remote
- The remote-starter remote
- Or the proximity remote



Enter the vehicle with the SMART-KEY.



DO NOT PRESS THE BRAKE PEDAL.

Press and release the Push-to-Start button once.



Press the brake pedal. The vehicle can now be put in to gear and driven.

If the Smart-Key is not detected the vehicle will shut down.

REGULAR & THAR-FOR3 INSTALLATION

ADDENDUM - SUGGESTED WIRING CONFIGURATION



ONLY COMPATIBLE WITH AUTOMATIC TRANSMISSION VEHICLES.



VEHICLE

YEARS

Vehicle functions supported in this diagram (functional if equipped)


Immobilizer bypass	T-Harness available (sold separately)	Lock	Unlock	Arm	Disarm	Heated Seats**	Rear Defrost**	RAP Disable	Parking Lights****	Tachometer	Door Status	Trunk Status	Hood Status*	Hand-Brake Status	Foot-Brake Status	Active OEM Remote Start	R.S. OEM remote Stand Alone compatible
--------------------	---------------------------------------	------	--------	-----	--------	----------------	----------------	-------------	--------------------	------------	-------------	--------------	--------------	-------------------	-------------------	-------------------------	--

FORD

Ranger

Key 2020

•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

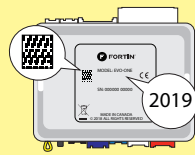

COMPATIBLE MODULE REQUIRED:

QR CODE ON THE LABEL MANUFACTURED AFTER: 2019

FIRMWARE VERSION

58.[02]
MINIMUM

To add the firmware version and the options, use the **FLASH LINK UPDATER** or **FLASH LINK MOBILE** tool, sold separately.



Program bypass option:

UNIT OPTION OPTION UNITE

DESCRIPTION

C1

OEM Remote status (Lock/Unlock) monitoring

IF THE VEHICLE IS NOT EQUIPPED WITH FUNCTIONAL HOOD PIN:

A11

OFF

Hood trigger (Output Status).



Program remote starter option for R.S. OEM REMOTE STAND ALONE:

FUNCTION

MODE

DESCRIPTION

38

2

Enable Press 3x Lock to remote start with the OEM remote.

NOTES

The vehicles OEM remote and SmartKey are still operable during remote start.

**Heated seats The heated seats and rear defrost activate automatically when it cold.

***Parking Lights The parking Lights at remote start only.



The vehicle must be equipped with the OEM remote with the door locks.

MANDATORY INSTALL

*HOOD PIN



HOOD STATUS: THE HOOD PIN SWITCH (INCLUDED) MUST BE INSTALLED IF THE VEHICLE CAN BE REMOTE STARTED WITH THE HOOD OPEN, SET FUNCTION A11 TO OFF.

A11

OFF

SECURITY STICKER



Included

Notice: the installation of safety elements are mandatory. The hood pin and the sticker are essential security elements and must be installed.

THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.

DESCRIPTION |

	Parts required (Not included)	PAGE
--	-------------------------------	------

WIRE TO WIRE DIAGRAM


		Page 3
--	--	--------

THARNESS DIAGRAM


THARNESS THAR-FOR3	1x THAR-FOR3	1x THAR-FOR3	Page 4
--------------------	--------------	--------------	--------




① Gateway module, Behind OBD-II connector

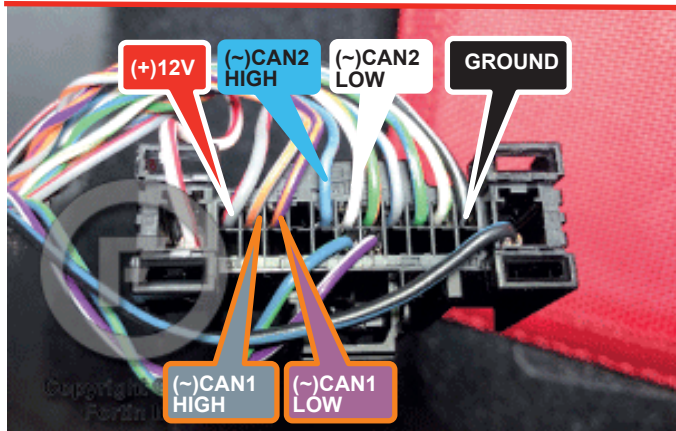


AUTOMATIC TRANSMISSION WIRING CONNECTION |

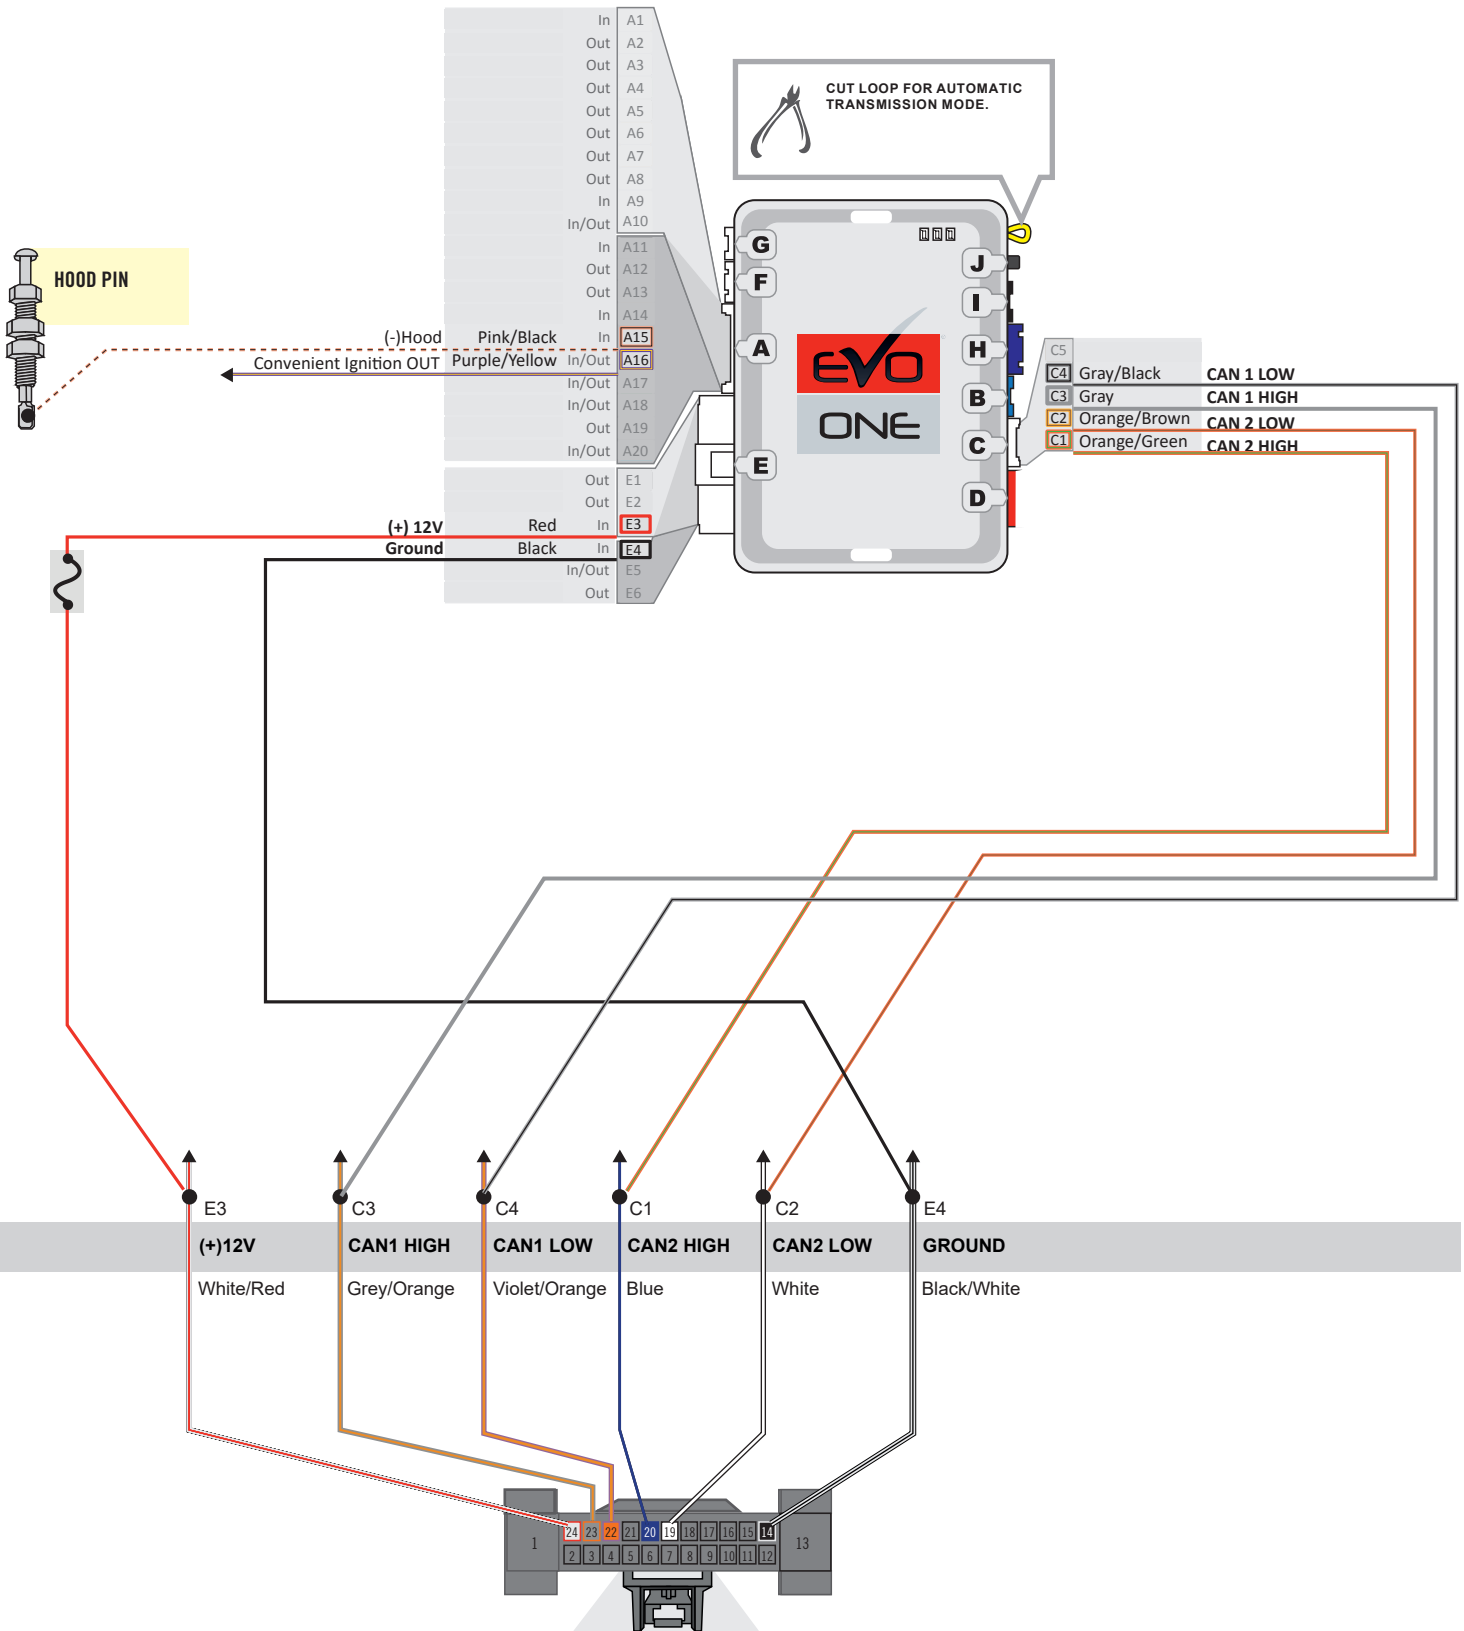


① Gateway module, Connector Behind OBD-II connector - located at dash board driver's side Back view, 24-pin black connector.

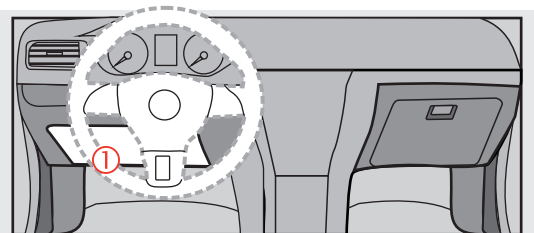


THAR-FOR3 | T-HARNESS - AUTOMATIC TRANSMISSION |

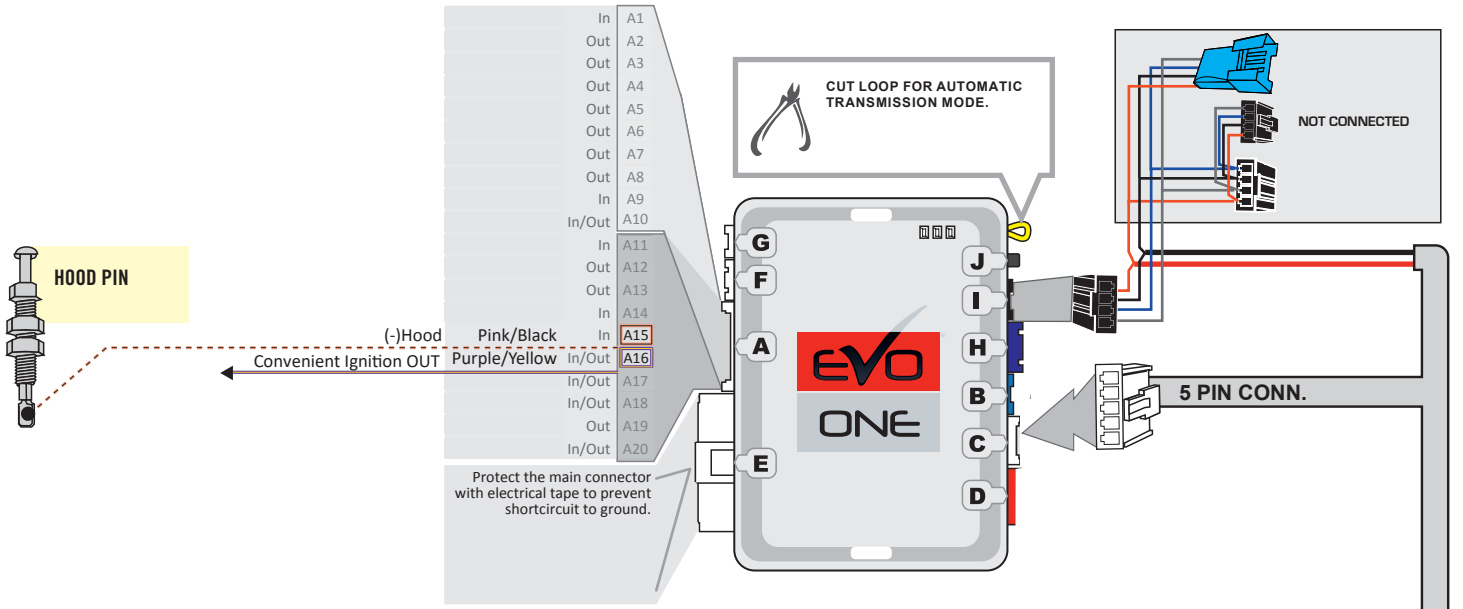

ESCAPE

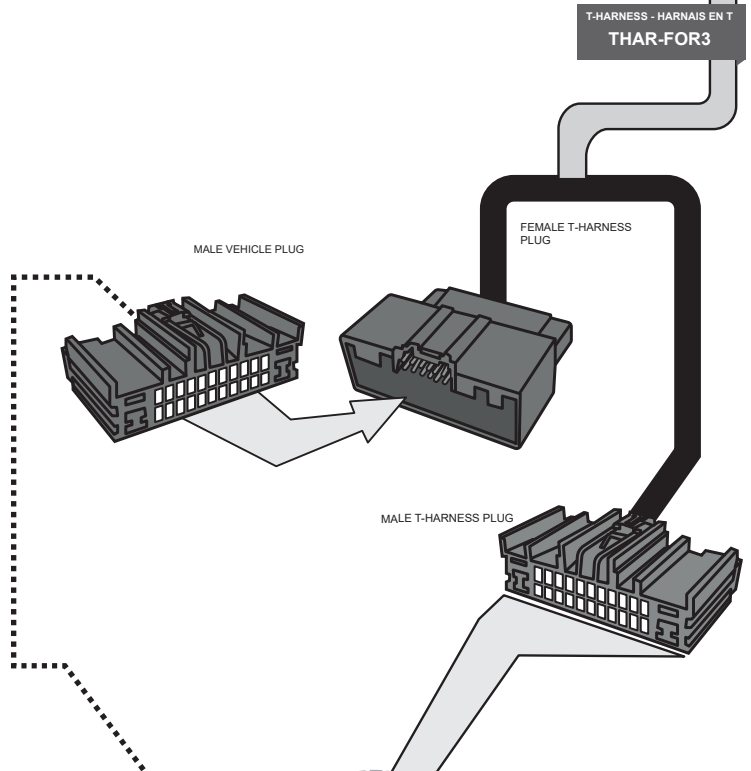

① Gateway module, Connector Behind OBD-II connector - located at dash board driver's side
Back view, 24-pin black connector.

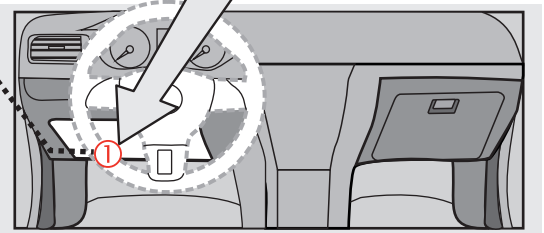

DCRYPTOR PROGRAMMING PROCEDURE |



Parts required (not included)


- 1x FLASH LINK UPDATER, SOFTWARE | PROGRAMME
- 1x FLASH LINK MANAGER
- 1x Microsoft Windows Computer with Internet connection

OR

- 1x FLASH LINK MOBILE
- 1x FLASH LINK MOBILE APP
- Smartphone Android or iOS with Internet connection (Internet provider charges may apply)


BEFORE PROGRAMMING SET THE UNIT OPTIONS AND SAVE.

1

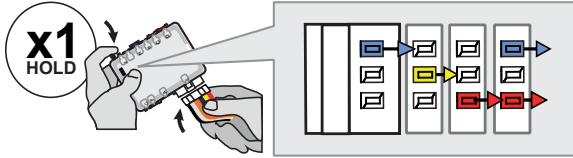

Press and hold the programming button:
Insert the 6-Pin Main connector.


WITH T-HARNESS

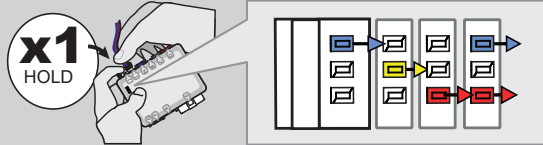

Press and hold the programming button:
Connect the 4-PIN Data-link harness (Black connector).

↳ The LEDs will alternate between BLUE, RED, YELLOW & BLUE/RED flashes.


2

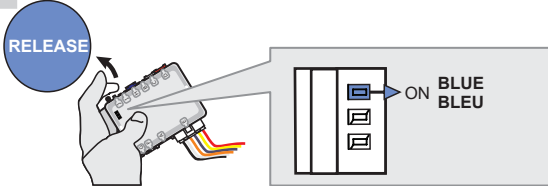

Release the programming button when the BLUE LED is ON.


If the BLUE LED is not ON solid disconnect the 6-Pin Main connector and go back to step 1.

 et retournez au début de l'étape 1.




WITH T-HARNESS

 If the LED is not solid BLUE disconnect the 4 Pin connector (Data-Link) and go back to step 1.




3

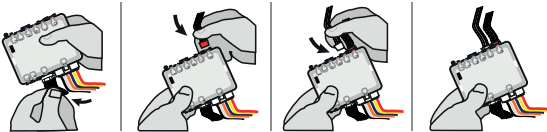

Insert the required remaining connectors.

4

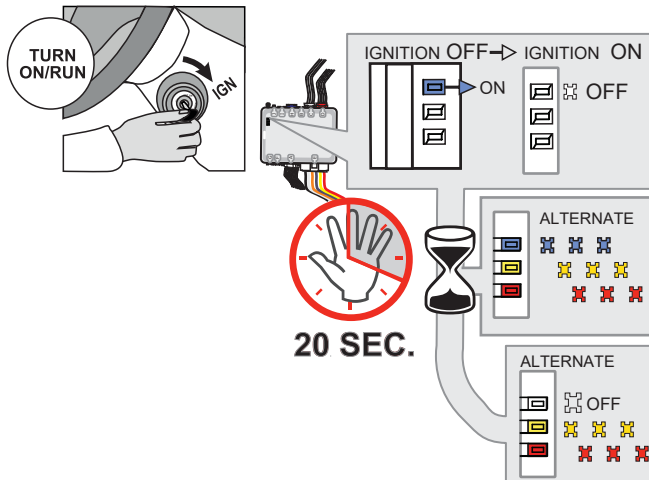

Turn the key to the Ignition ON/RUN position.

↳ The BLUE LED will turn OFF.

↳ The BLUE, YELLOW and RED LEDs will alternate.

Wait, at least 20 seconds, do not disconnect the modules or turn off the ignition.


↳ The RED and YELLOW LEDs will alternate.

Make sure that the DELs are flashing RED and YELLOW before continuing programming.



KEY BYPASS PROGRAMMING PROCEDURE 2/2 |


5

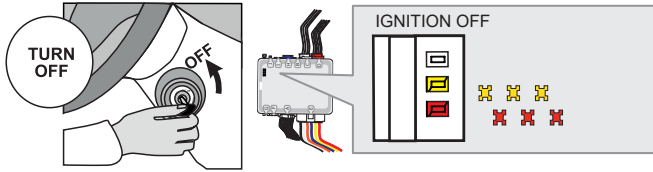

Turn the key to the OFF position.


↳ The RED and YELLOW LEDs alternate.

6

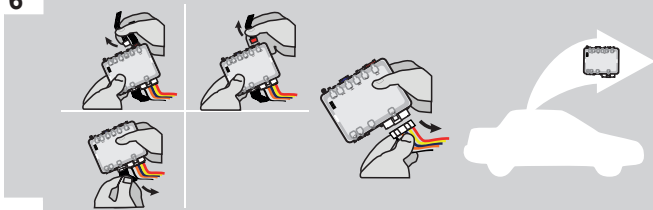

Disconnect all connectors and after the 6-Pin (Main-Harness) or the 4-Pin Data-link connector.


7

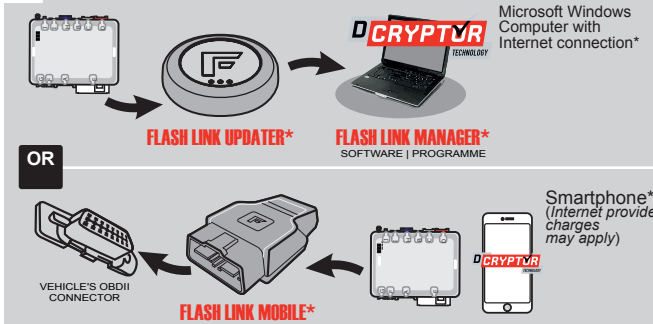


Use the tool: FLASH LINK UPDATER or FLASH LINK MOBILE to visit the DCryptor menu.

*Parts required (not included)

8

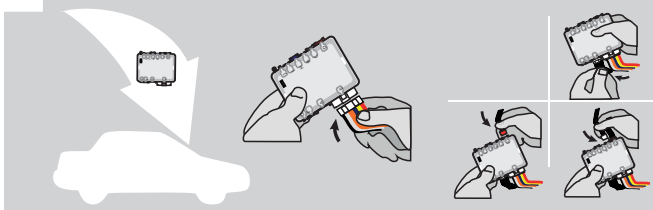


AFTER DCRYPTOR PROGRAMMING COMPLETED Go back to the vehicle and reconnect the 6-Pin (Main-Harness) or the 4-pins (Data-Link) connector and after all the remaining connector.

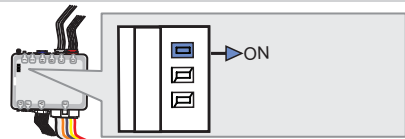

↳ The BLUE LED will turn ON.

9

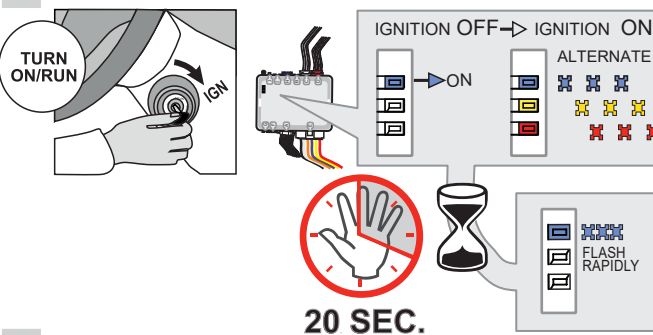


Turn the key to the Ignition ON/RUN position.

↳ The BLUE, YELLOW and RED LEDs will alternate.

Wait, at least 20 seconds, do not disconnect the modules or turn off the ignition.

↳ The BLUE LED will flash rapidly.

10

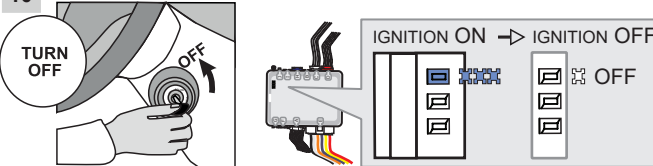

Turn the key to the OFF position.

↳ The BLUE will turn OFF.




The module is now programmed.

REMOTE STARTER PROGRAMMING PROCEDURE |



REFER TO THE **QUICK INSTALL GUIDE** INCLUDED WITH THE MODULE FOR THE REMOTE STARTER PROGRAMMING.

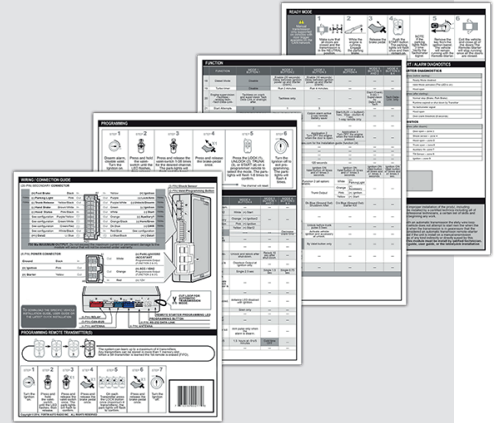

REMOTE STARTER FUNCTIONALITY |



All doors must be closed.



Remote start the vehicle.



Unlock the doors with the remote-starter remote or the OEM remote.



Insert and Turn the key to the Ignition ON/RUN position.



Press the brake pedal.



The vehicle can now be put in to gear and driven.

REGULAR & THAR-FOR3 INSTALLATION

ADDENDUM - SUGGESTED WIRING CONFIGURATION



ONLY COMPATIBLE WITH AUTOMATIC TRANSMISSION VEHICLES.




VEHICLE

YEARS

Vehicle functions supported in this diagram (functional if equipped)

Immobilizer bypass	T-Harness available (sold separately)	Lock	Unlock	Arm	Disarm	Heated Seats**	Rear Defrost**	RAP Disable	Parking Lights****	Tachometer	Door Status	Trunk Status	Hood Status*	Hand-Brake Status	Foot-Brake Status	Active OEM Remote Start	R.S. OEM remote Stand Alone compatible
FORD	Ranger	Push-to-Start	2020	•	•	•	•	•	•	•	•	•	•	•	•	•	•

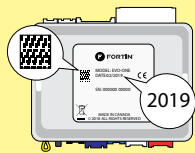

COMPATIBLE MODULE REQUIRED:

QR CODE ON THE LABEL MANUFACTURED AFTER: 2019

FIRMWARE VERSION

58.[02]
MINIMUM

To add the firmware version and the options, use the **FLASH LINK UPDATER** or **FLASH LINK MOBILE** tool, sold separately.



Program bypass option:

UNIT OPTION OPTION UNITE

DESCRIPTION

C1

OEM Remote status (Lock/Unlock) monitoring

D6

Push-to-Start

IF THE VEHICLE IS NOT EQUIPPED WITH FUNCTIONAL HOOD PIN:

D'UN CONTACT DE CAPOT FONCTIONNEL:

A11

OFF

Hood trigger (Output Status).



Program remote starter option for R.S. OEM REMOTE STAND ALONE:

FUNCTION

MODE

DESCRIPTION

38

2

Enable Press 3x Lock to remote start with the OEM remote.

NOTES

The vehicles OEM remote and SmartKey are still operable during remote start.

**Heated seats The heated seats and rear defrost activate automatically when it cold.

***Parking Lights The parking Lights at remote start only.

MANDATORY INSTALL

* HOOD PIN



HOOD STATUS: THE HOOD PIN SWITCH (INCLUDED) MUST BE INSTALLED IF THE VEHICLE CAN BE REMOTE STARTED WITH THE HOOD OPEN, SET FUNCTION A11 TO OFF.

A11

OFF

SECURITY STICKER



Included

Notice: the installation of safety elements are mandatory. The hood pin and the sticker are essential security elements and must be installed.

THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.

DESCRIPTION |

	Parts required (Not included)	PAGE
--	-------------------------------	------

WIRE TO WIRE DIAGRAM


		Page 3
--	--	--------

THARNESS DIAGRAM


THARNESS THAR-FOR3	1x THAR-FOR3	Page 4
--------------------	--------------	--------




① Gateway module, Behind OBD-II connector

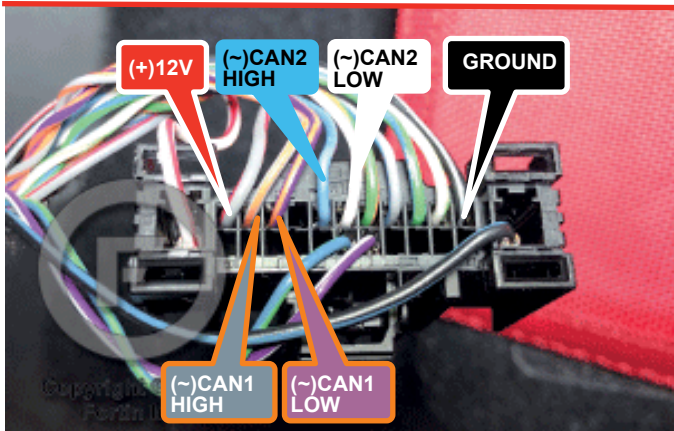


AUTOMATIC TRANSMISSION WIRING CONNECTION |

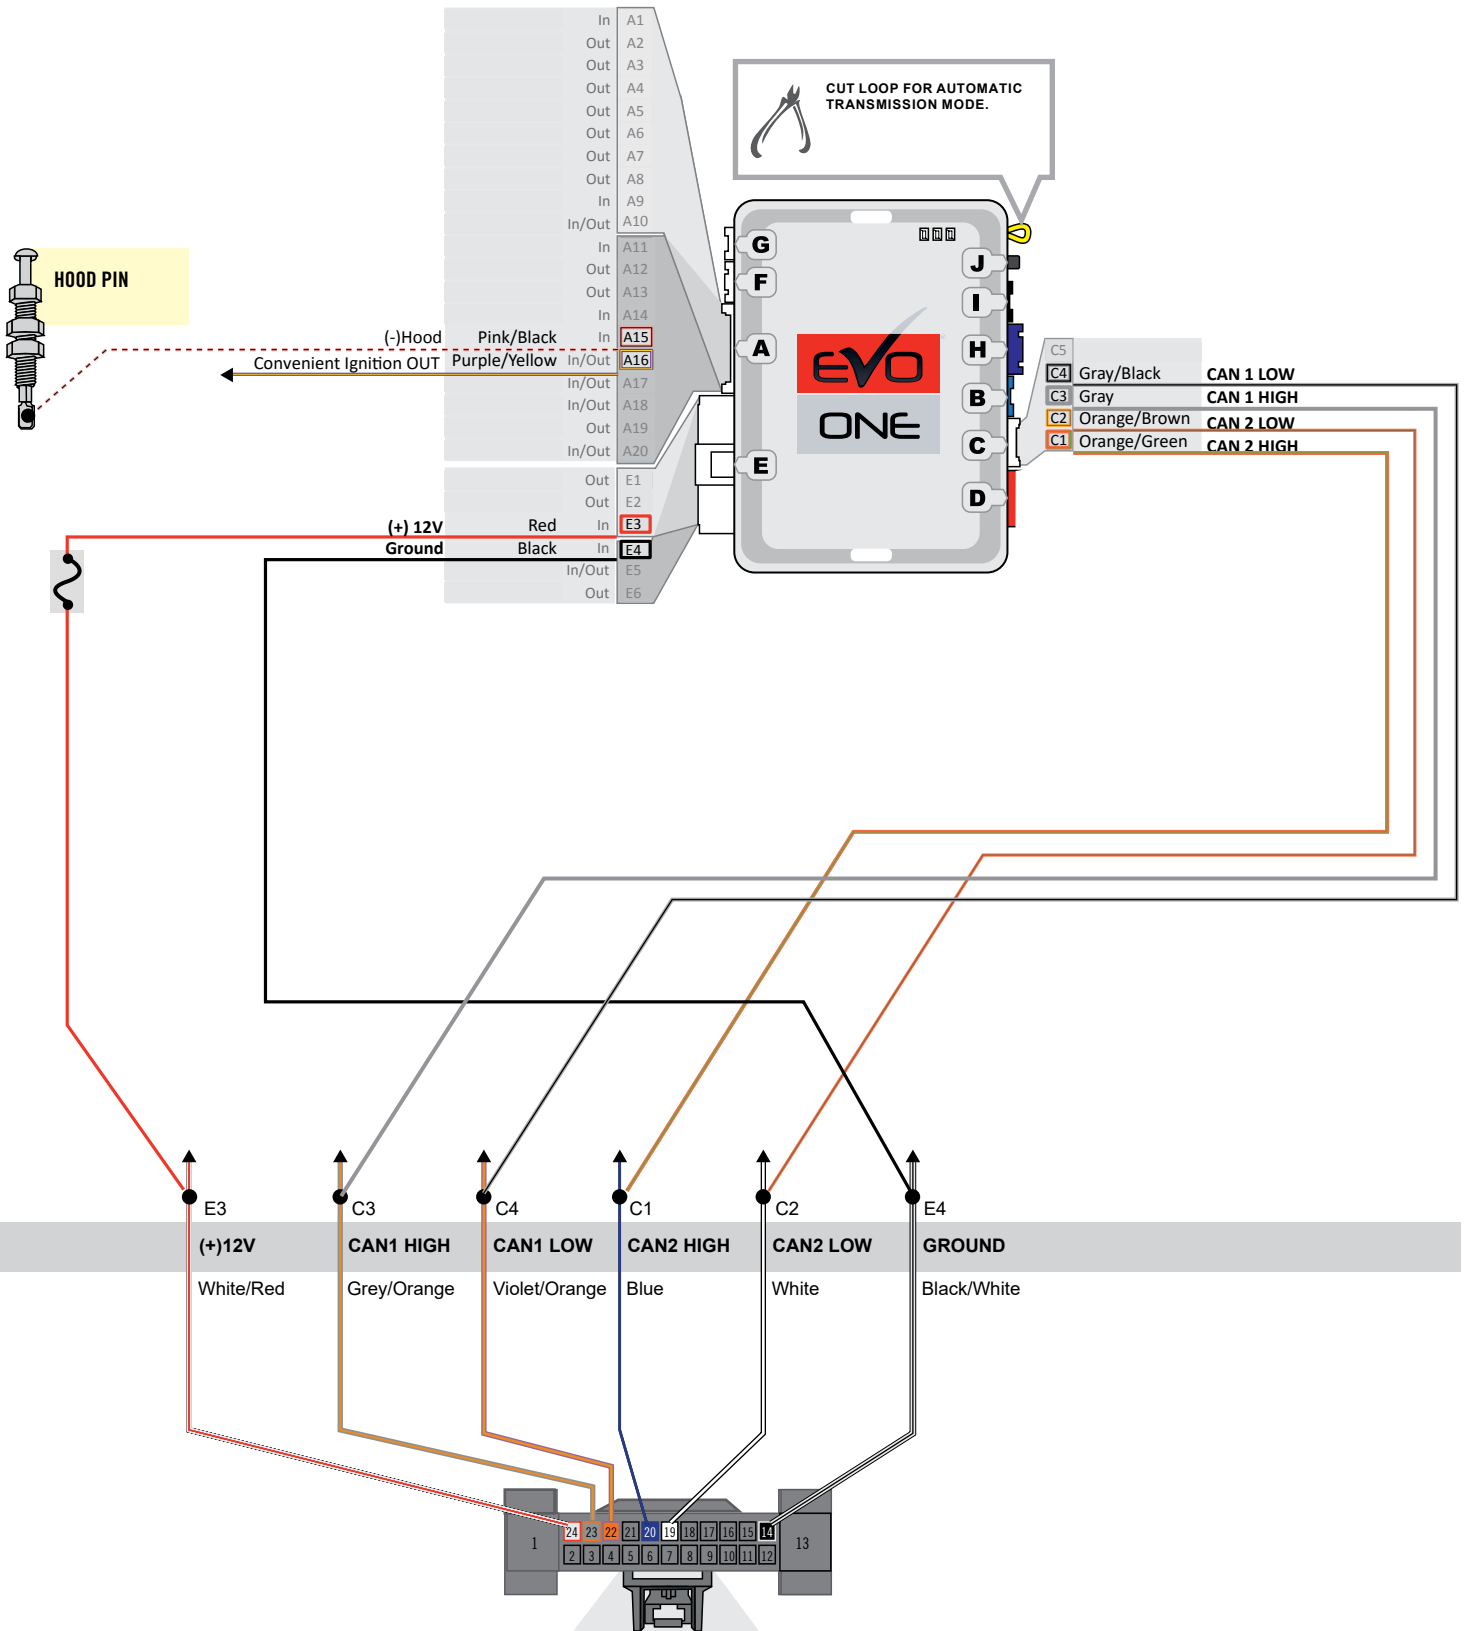


① Gateway module, Connector Behind OBD-II connector - located at dash board driver's side Back view, 24-pin black connector.

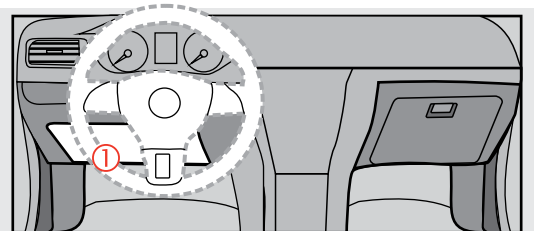


THAR-FOR3 | T-HARNESS - AUTOMATIC TRANSMISSION |

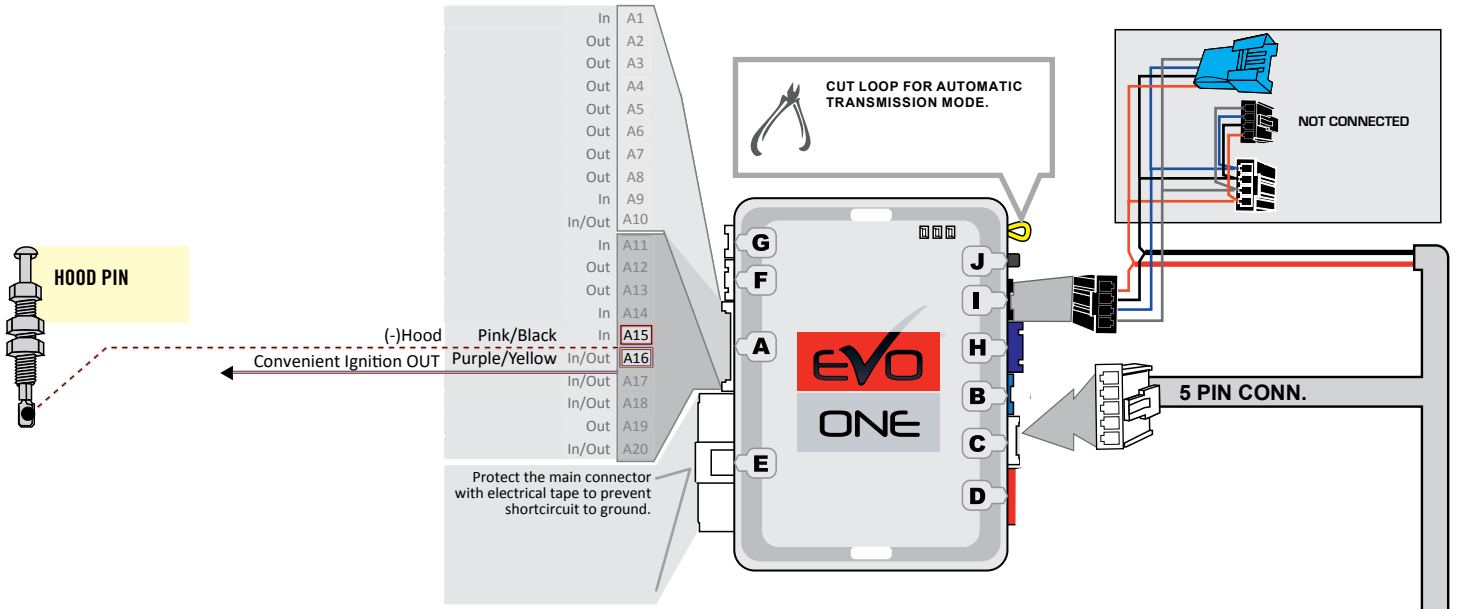

RANGER

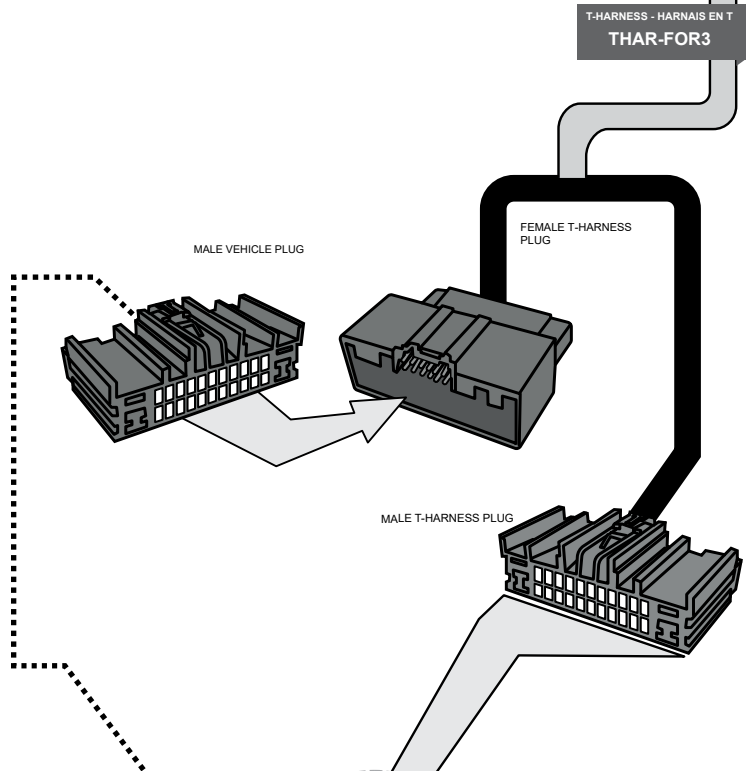

① Gateway module, Connector Behind OBD-II connector - located at dash board driver's side
Back view, 24-pin black connector.

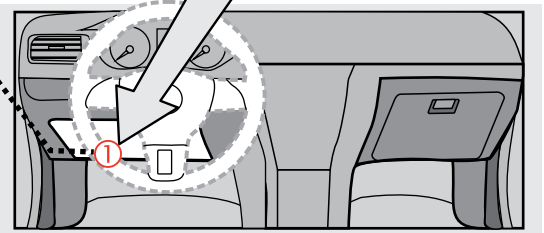

DCRYPTOR PROGRAMMING PROCEDURE |



Parts required (not included)


- 1x FLASH LINK UPDATER,
- 1x FLASH LINK MANAGER SOFTWARE | PROGRAMME
- 1x Microsoft Windows Computer with Internet connection

OR

- 1x FLASH LINK MOBILE
- 1x FLASH LINK MOBILE APP
- Smartphone Android or iOS with Internet connection (Internet provider charges may apply)


BEFORE PROGRAMMING SET THE UNIT OPTIONS AND SAVE.

1

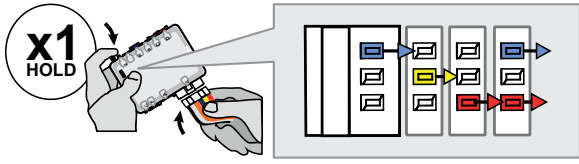

Press and hold the programming button:
Insert the 6-Pin Main connector.


WITH T-HARNESS

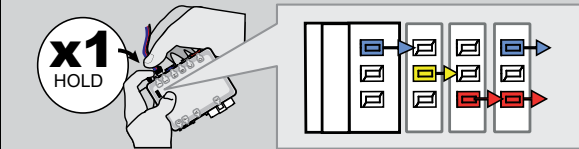

Press and hold the programming button:
Connect the 4-PIN Data-link harness (Black connector).


↳ The LEDs will alternate between BLUE, RED, YELLOW & BLUE/RED flashes.

2

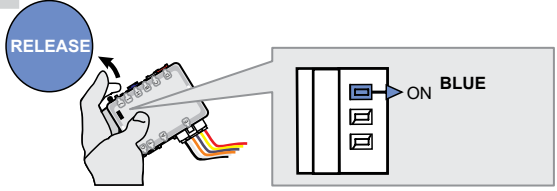


Release the programming button when the BLUE LED is ON.

 If the BLUE LED is not ON solid disconnect the 6-Pin Main connector and go back to step 1.




WITH T-HARNESS

 If the LED is not solid BLUE disconnect the 4 Pin connector (Data-Link) and go back to step 1.




3

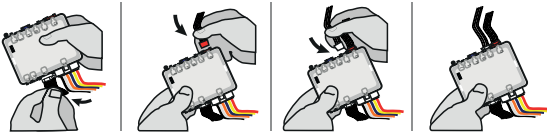

Insert the required remaining connectors.

4

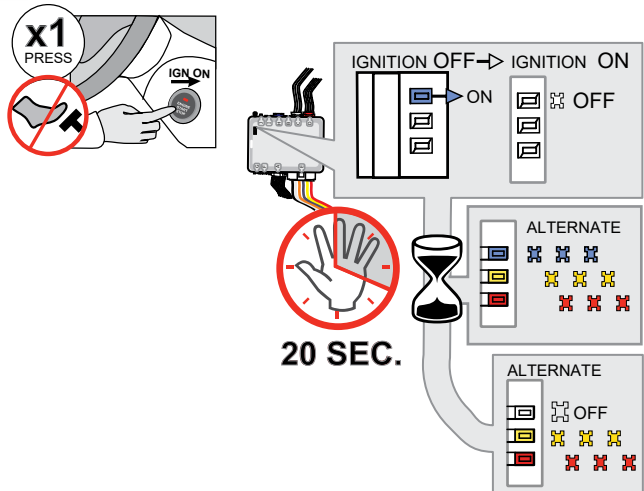

Do not press the brake pedal. **Press** the Push-to-Start button once to turn on the ignition.

 
↳ The BLUE LED will turn OFF.

↳ The BLUE, YELLOW and RED LEDs will alternated.

Wait, at least 20 seconds, do not disconnect the modules or turn off the ignition.


↳ The RED and YELLOW LEDs will alternated.

Make sure that the DELs are flashing RED and YELLOW before continuing programming.



KEY BYPASS PROGRAMMING PROCEDURE 2/2 |


5

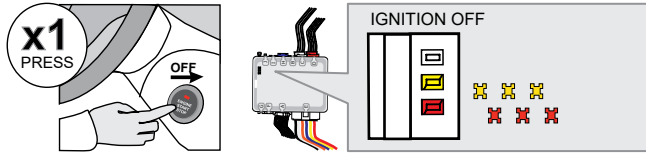

Press the Push-to-Start button once to turn off the ignition.


↳ The RED and YELLOW LEDs alternate.

6

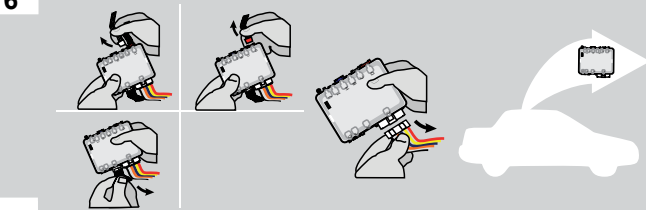

Disconnect all connectors and after the 6-Pin (Main-Harness) or the 4-Pin Data-link connector.


7

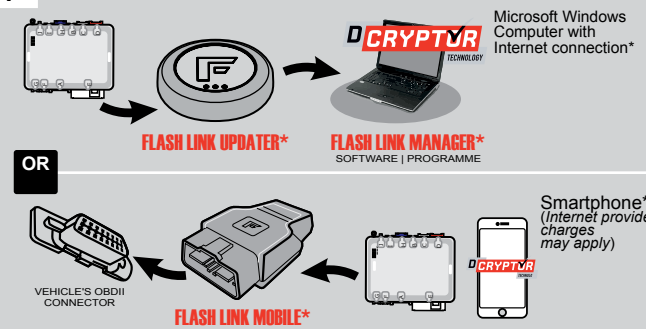


Use the tool: FLASH LINK UPDATER or FLASH LINK MOBILE to visit the DCryptor menu.

*Parts required (not included)

8

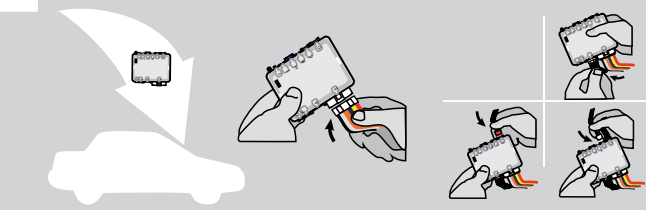


AFTER DCRYPTOR PROGRAMMING COMPLETED Go back to the vehicle and reconnect the 6-Pin (Main-Harness) or the 4-pins (Data-Link) connector and after all the remaining connector.

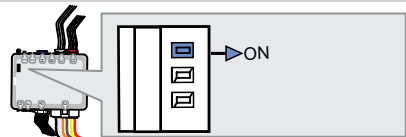

↳ The BLUE LED will turn ON.

9

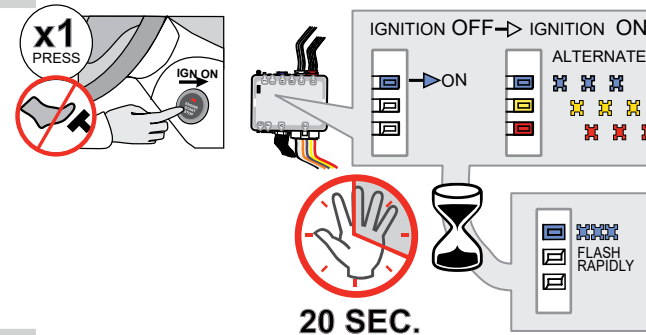


Do not press the brake pedal. Press the Push-to-Start button once to turn on the ignition.

↳ The BLUE, YELLOW and RED LEDs will alternate.

Wait, at least 20 seconds, do not disconnect the modules or turn off the ignition.

↳ The BLUE LED will flash rapidly.

10

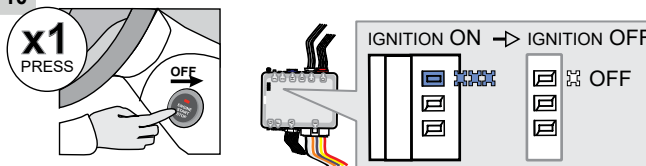

Press the Push-to-Start button once to turn off the ignition.

↳ The BLUE will turn OFF.




The module is now programmed.

REMOTE STARTER PROGRAMMING PROCEDURE |



REFER TO THE **QUICK INSTALL GUIDE** INCLUDED WITH THE MODULE FOR THE REMOTE STARTER PROGRAMMING.

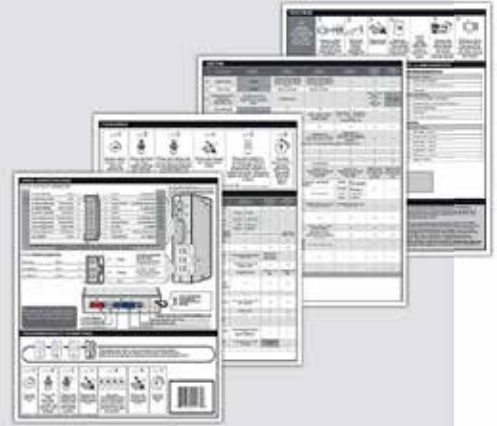

REMOTE STARTER FUNCTIONALITY |



All doors must be closed.

 


Remote start the vehicle.



Unlock the doors with either:

- The OEM remote
- The remote-starter remote
- Or the proximity remote



Enter the vehicle with the SMART-KEY.



DO NOT PRESS THE BRAKE PEDAL.

Press and release the Push-to-Start button once.



Press the brake pedal. The vehicle can now be put in to gear and driven.

If the Smart-Key is not detected the vehicle will shut down.

REGULAR & THAR-FOR3 INSTALLATION

ADDENDUM - SUGGESTED WIRING CONFIGURATION



ONLY COMPATIBLE WITH AUTOMATIC TRANSMISSION VEHICLES.



VEHICLE

YEARS

Vehicle functions supported in this diagram (functional if equipped)


Immobilizer bypass	T-Harness available (sold separately)	Lock	Unlock	Arm	Disarm	Heated Seats**	Rear Defrost**	RAP Disable	Parking Lights****	Tachometer	Door Status	Trunk Status	Hood Status*	Hand-Brake Status	Foot-Brake Status	Active OEM Remote Start	R.S. OEM remote Stand Alone compatible
•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•

FORD

Transit

Key 2020

Key Diesel 2020

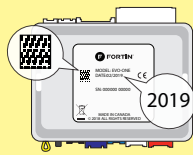

COMPATIBLE MODULE REQUIRED:

QR CODE ON THE LABEL MANUFACTURED AFTER: 2019

FIRMWARE VERSION

58.[02]
MINIMUM

To add the firmware version and the options, use the **FLASH LINK UPDATER** or **FLASH LINK MOBILE** tool, sold separately.



Program bypass option:

UNIT OPTION

C1

DESCRIPTION

OEM Remote status (Lock/Unlock) monitoring

IF THE VEHICLE IS NOT EQUIPPED WITH FUNCTIONAL HOOD PIN:

A11

OFF

Hood trigger (Output Status).



Program remote starter option for R.S. OEM REMOTE STAND ALONE:

FUNCTION

MODE

DESCRIPTION

38

2

Enable Press 3x Lock to remote start with the OEM remote.

NOTES

The vehicles OEM remote and SmartKey are still operable during remote start.

**Heated seats The heated seats and rear defrost activate automatically when it cold.

***Parking Lights The parking Lights at remote start only.



The vehicle must be equipped with the OEM remote with the door locks.

MANDATORY INSTALL

* HOOD PIN



HOOD STATUS: THE HOOD PIN SWITCH (INCLUDED) MUST BE INSTALLED IF THE VEHICLE CAN BE REMOTE STARTED WITH THE HOOD OPEN, SET FUNCTION A11 TO OFF.

A11

OFF

SECURITY STICKER



Included

Notice: the installation of safety elements are mandatory. The hood pin and the sticker are essential security elements and must be installed.

THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.

DESCRIPTION

Parts required (Not included)		PAGE
-------------------------------	--	------


WIRE TO WIRE DIAGRAM

		Page 3
--	--	--------


THARNESS DIAGRAM

THARNESS THAR-FOR3	1x THAR-FOR3	Page 4
--------------------	--------------	--------


① Gateway module, located at dash board driver's side,

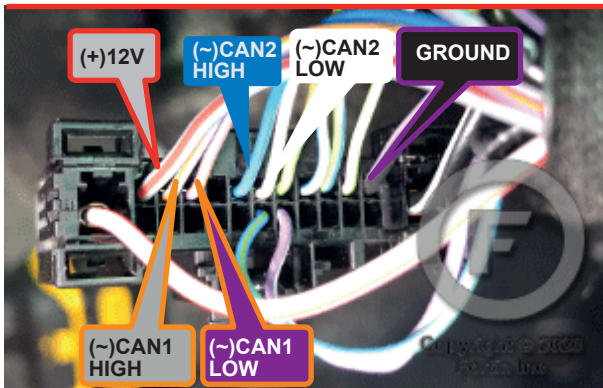


AUTOMATIC TRANSMISSION WIRING CONNECTION

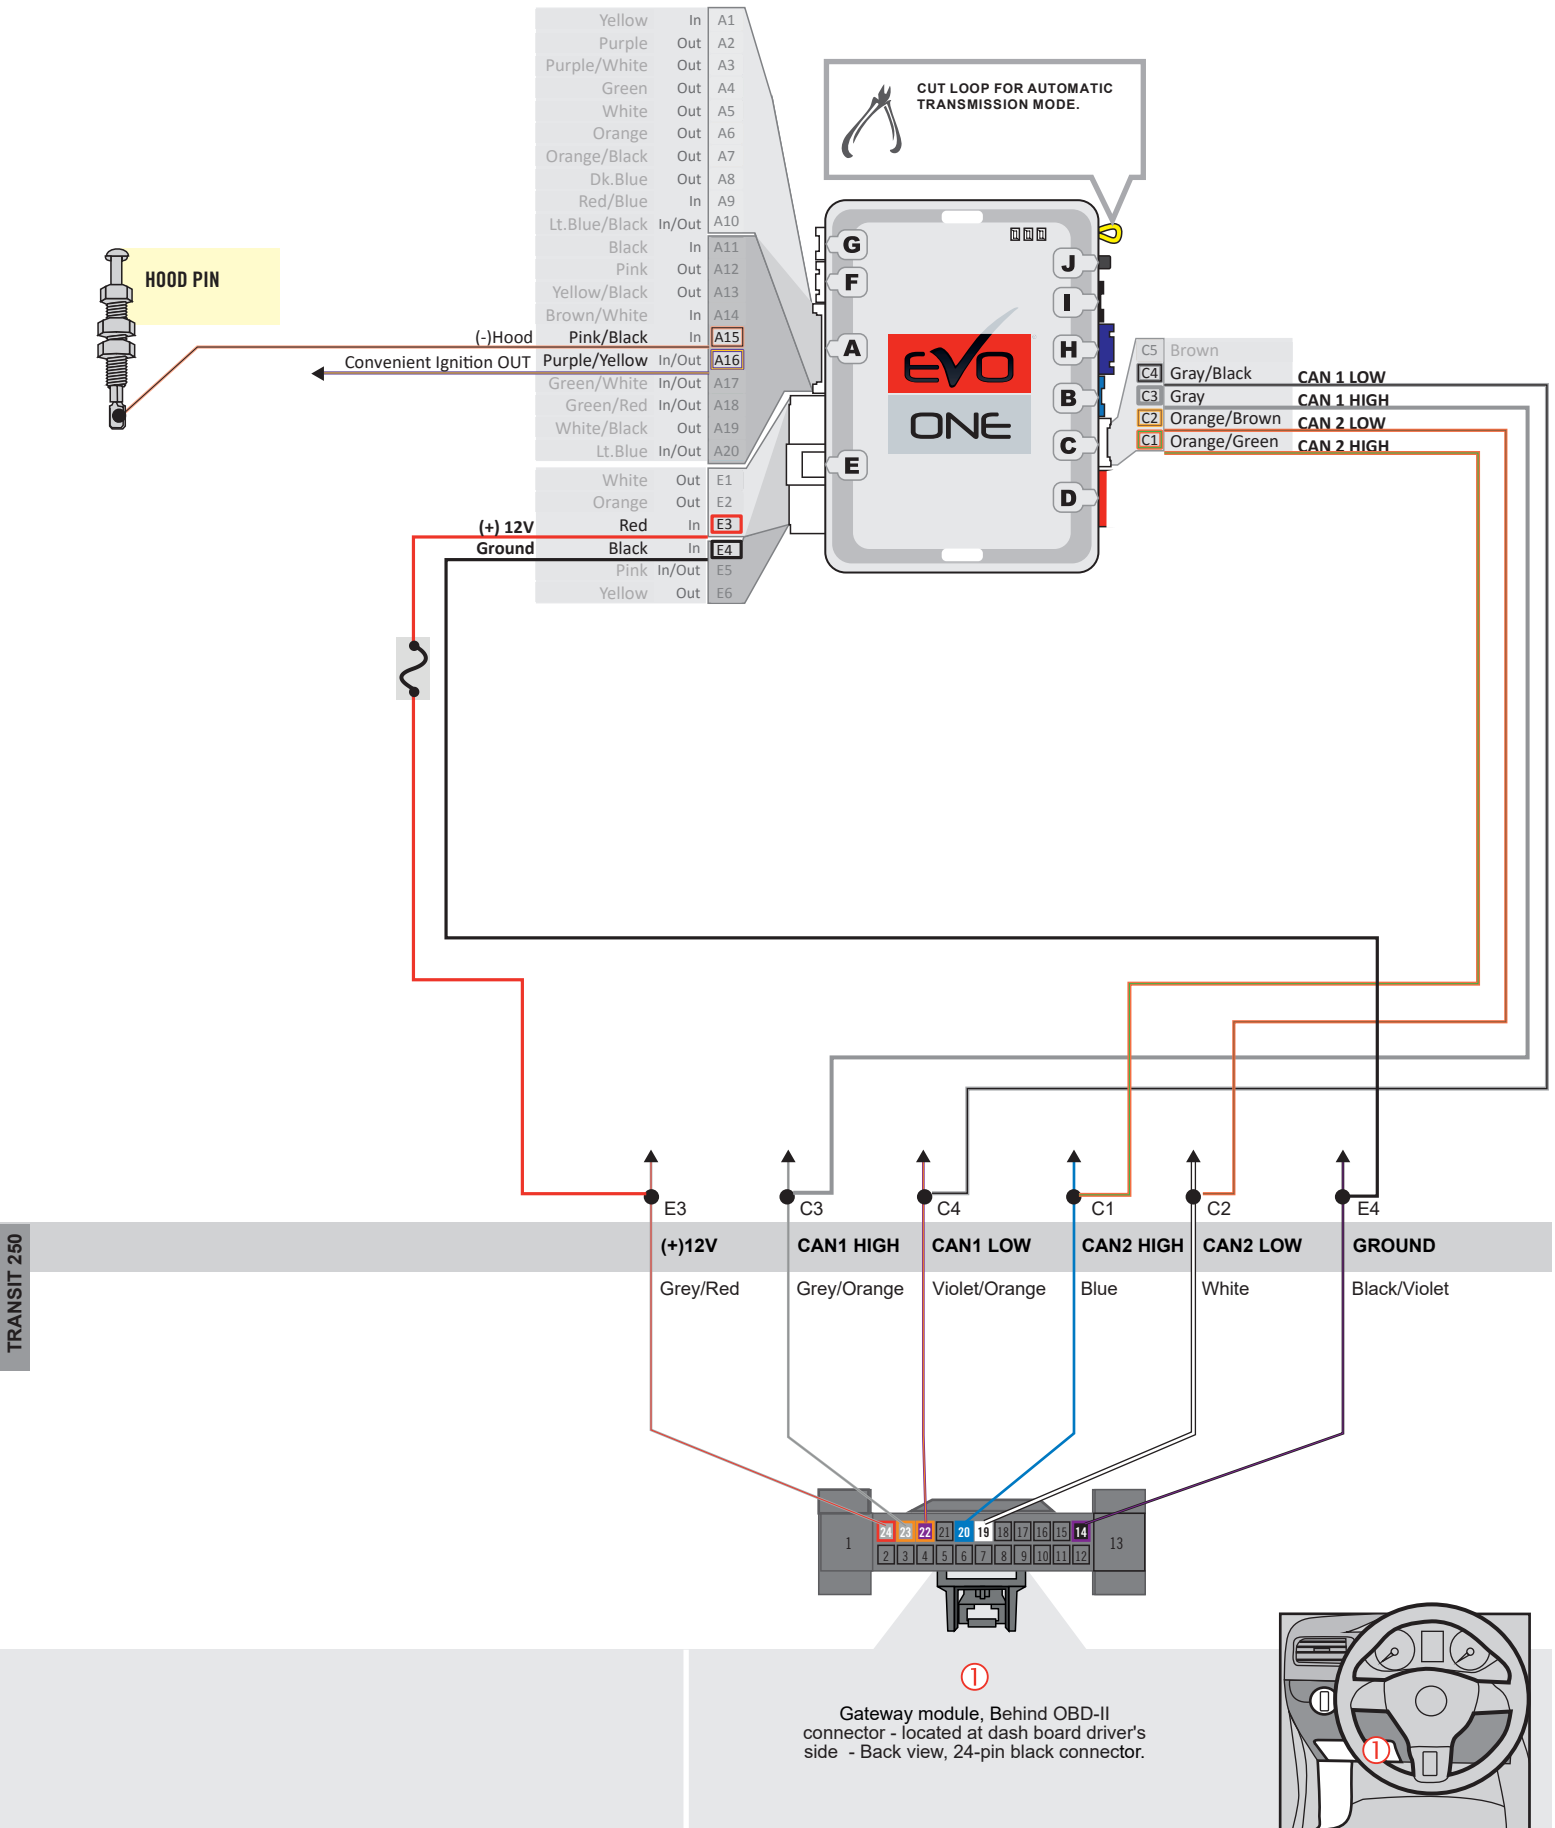

THAR-FOR3 | T-HARNESS - AUTOMATIC TRANSMISSION

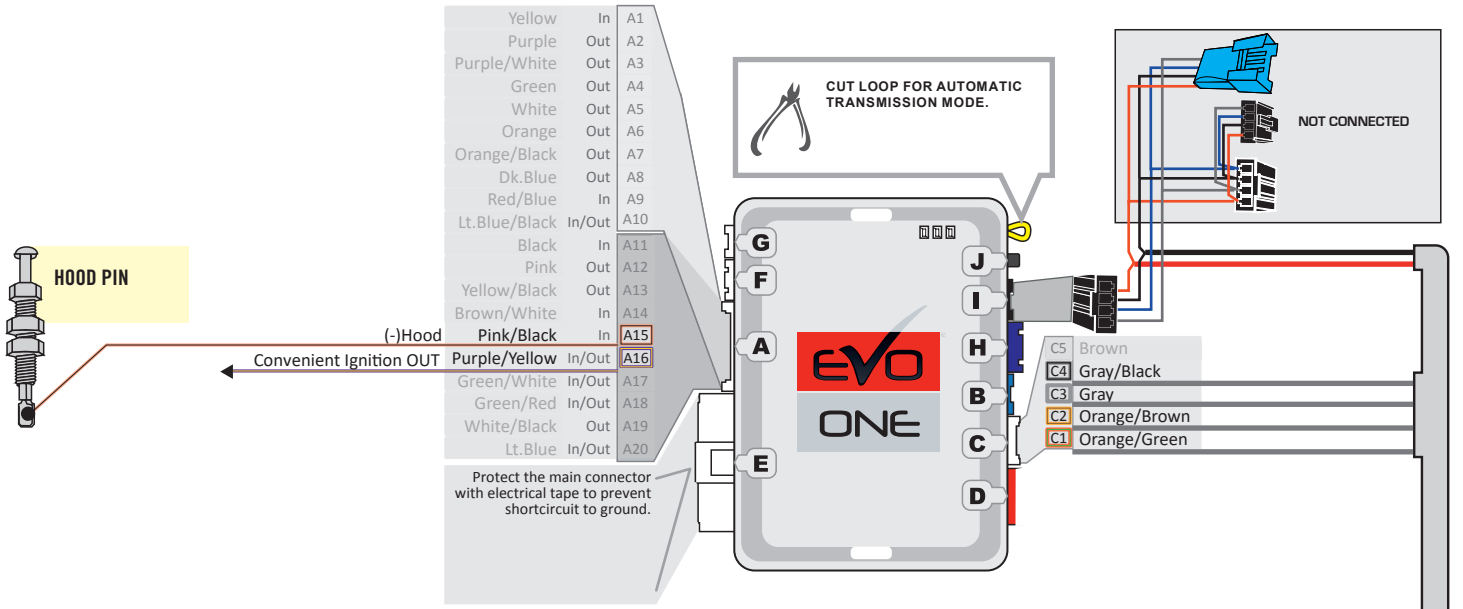

TRANSIT 250

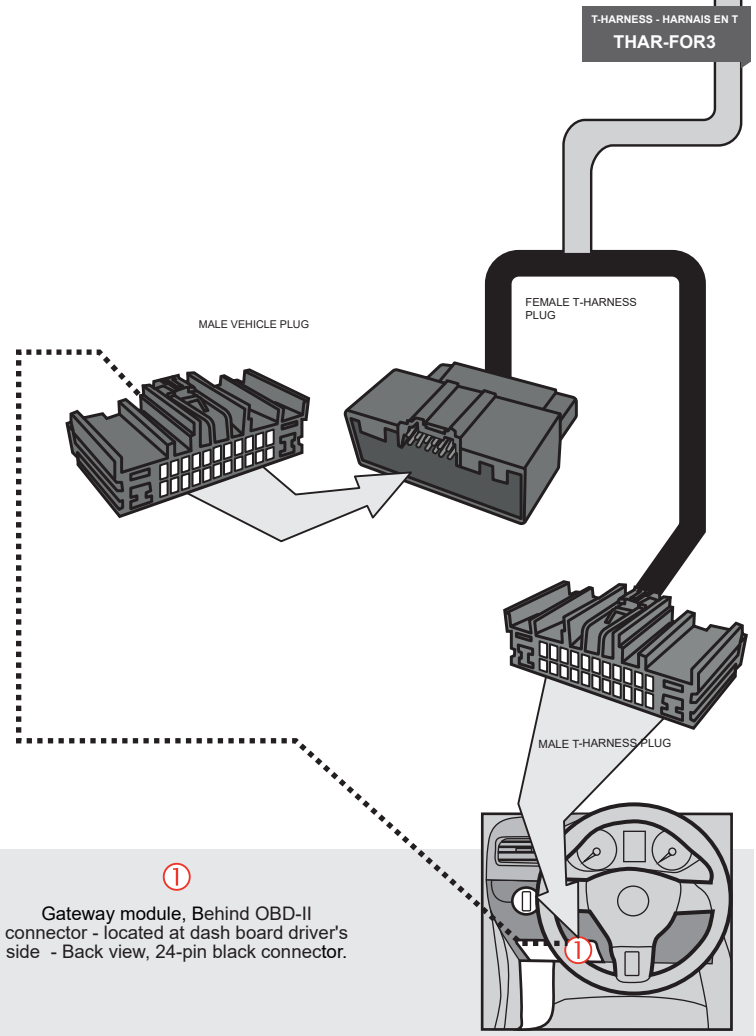

DCRYPTOR PROGRAMMING PROCEDURE



Parts required (not included)


- 1x FLASH LINK UPDATER, SOFTWARE | PROGRAMME
- 1x FLASH LINK MANAGER
- 1x Microsoft Windows Computer with Internet connection

OR

- 1x FLASH LINK MOBILE
- 1x FLASH LINK MOBILE APP
- Smartphone Android or iOS with Internet connection (Internet provider charges may apply)


BEFORE PROGRAMMING SET THE UNIT OPTIONS AND SAVE.

1

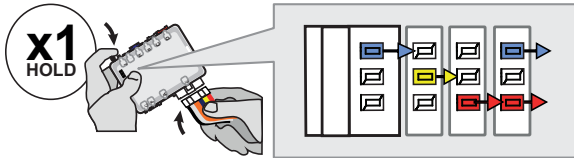

Press and hold the programming button:
Insert the 6-Pin Main connector.


WITH T-HARNESS

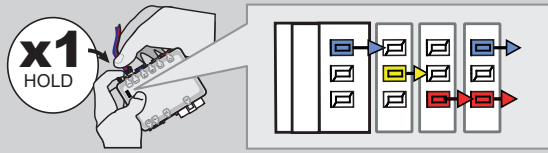

Press and hold the programming button:
Connect the 4-PIN Data-link harness (Black connector).


↳ The LEDs will alternate between BLUE, RED, YELLOW & BLUE/RED flashes.

2

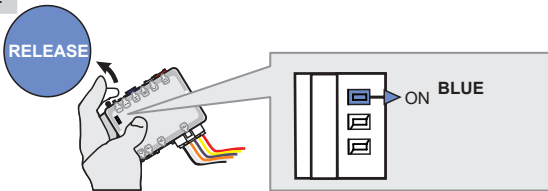


Release the programming button when the BLUE LED is ON.

 If the BLUE LED is not ON solid disconnect the 6-Pin Main connector and go back to step 1.




WITH T-HARNESS

 If the LED is not solid BLUE disconnect the 4 Pin connector (Data-Link) and go back to step 1.




3

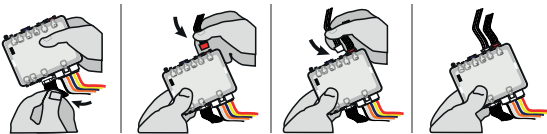

Insert the required remaining connectors.

4

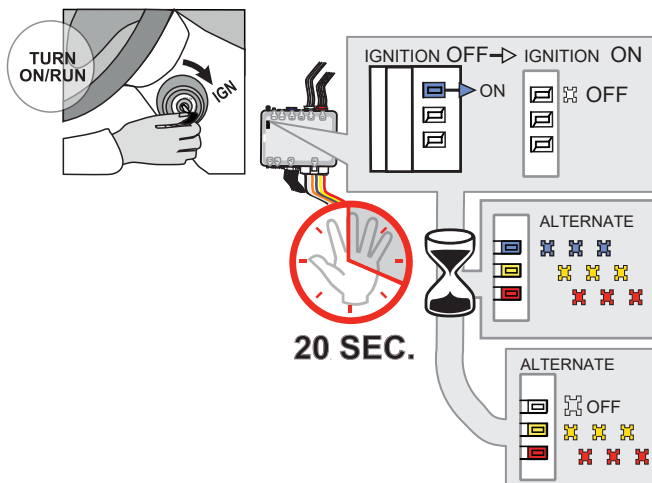

Turn the key to the Ignition ON/RUN position.

 
↳ The BLUE LED will turn OFF.

↳ The BLUE, YELLOW and RED LEDs will alternate.

Wait, at least 20 seconds, do not disconnect the modules or turn off the ignition.


↳ The RED and YELLOW LEDs will alternate.

Make sure that the DELs are flashing RED and YELLOW before continuing programming.



KEY BYPASS PROGRAMMING PROCEDURE 2/2


5

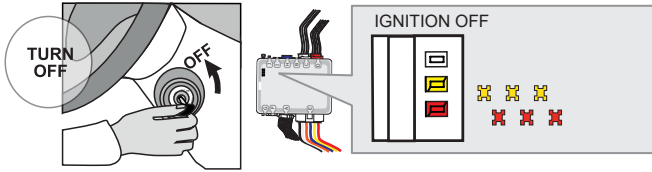

Turn the key to the OFF position.


↳ The RED and YELLOW LEDs alternate.

6

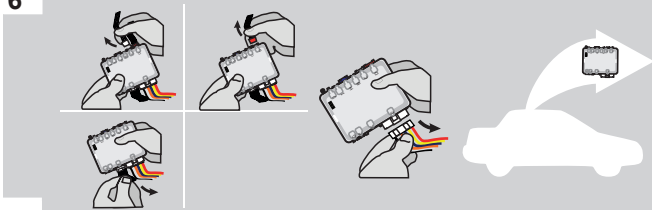

Disconnect all connectors and after the 6-Pin (Main-Harness) or the 4-Pin Data-link connector.

7

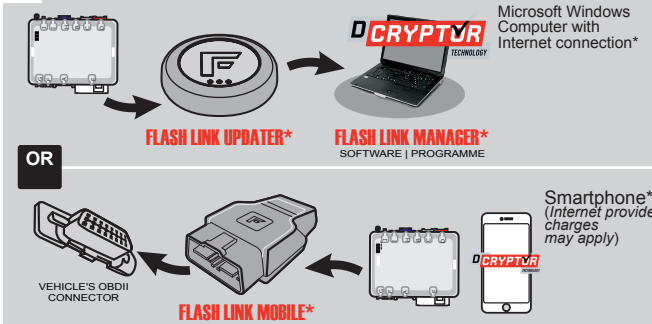


Microsoft Windows Computer with Internet connection*


Use the tool: FLASH LINK UPDATER or FLASH LINK MOBILE to visit the DCryptor menu.

*Parts required (not included)

8

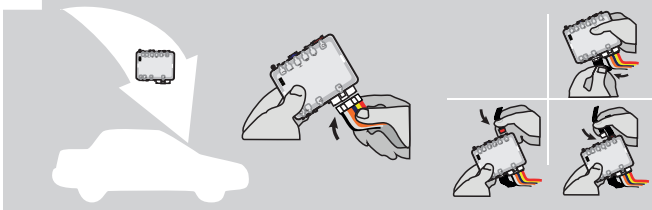


AFTER DCRYPTOR PROGRAMMING COMPLETED Go back to the vehicle and reconnect the 6-Pin (Main-Harness) or the 4-pins (Data-Link) connector and after all the remaining connector.

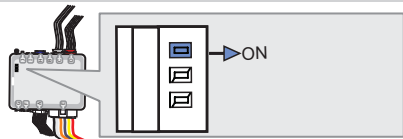

↳ The BLUE LED will turn ON.

9

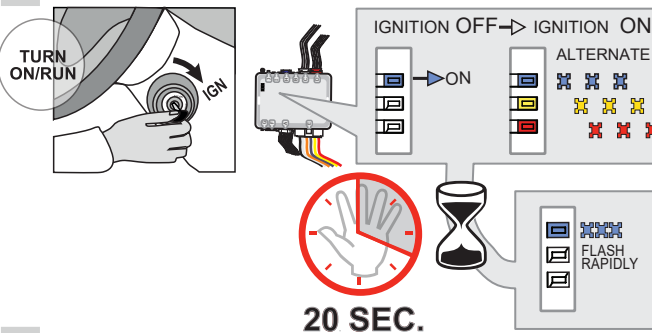


Turn the key to the Ignition ON/RUN position.

↳ The BLUE, YELLOW and RED LEDs will alternate.

Wait, at least 20 seconds, do not disconnect the modules or turn off the ignition.

↳ The BLUE LED will flash rapidly.

10

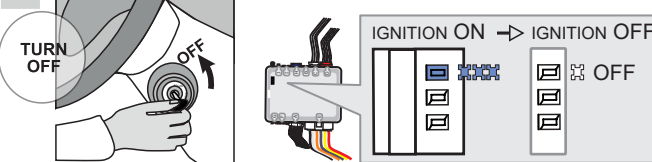

Turn the key to the OFF position.

↳ The BLUE will turn OFF.




The module is now programmed.

REMOTE STARTER PROGRAMMING PROCEDURE



REFER TO THE **QUICK INSTALL GUIDE** INCLUDED WITH THE MODULE FOR THE REMOTE STARTER PROGRAMMING.

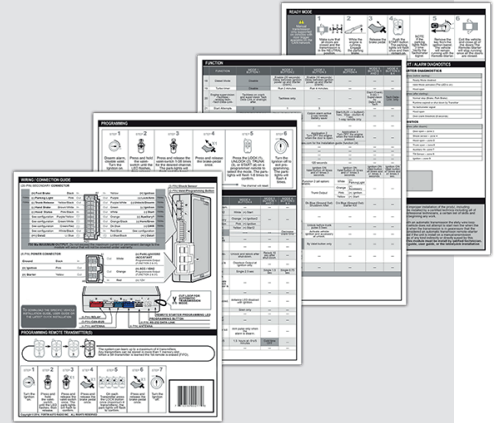

REMOTE STARTER FUNCTIONALITY



 
All doors must be closed.



Remote start the vehicle.



Unlock the doors with the remote-starter remote or the OEM remote.



Insert and Turn the key to the Ignition ON/RUN position.



Press the brake pedal.




The vehicle can now be put in to gear and driven.

REGULAR & THAR-FOR3 INSTALLATION

ADDENDUM - SUGGESTED WIRING CONFIGURATION


ONLY COMPATIBLE WITH AUTOMATIC TRANSMISSION VEHICLES.

VEHICLE	YEARS	Vehicle functions supported in this diagram (functional if equipped)																		
		Immobilizer bypass	T-Harness available (sold separately)	Lock	Unlock	Arm	Disarm	Heated Seats**	Rear Defrost**	RAP Disable	Parking Lights****	Tachometer	Door Status	Trunk Status	Hood Status*	Hand-Brake Status	Foot-Brake Status	Active OEM Remote Start	R.S. OEM remote Stand Alone compatible	
FORD																				
Transit Connect	Key 2020-2022	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•

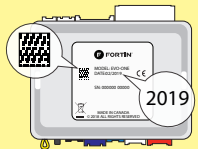

COMPATIBLE MODULE REQUIRED:

QR CODE ON THE LABEL
MANUFACTURED AFTER: 2019

FIRMWARE VERSION

58.[02]
MINIMUM

To add the firmware version and the options, use the **FLASH LINK UPDATER** or **FLASH LINK MOBILE** tool, sold separately.


UNIT OPTION	DESCRIPTION
C1	OEM Remote status (Lock/Unlock) monitoring
A11	OFF NON
IF THE VEHICLE IS NOT EQUIPPED WITH FUNCTIONAL HOOD PIN:	
	Hood trigger (Output Status).

FUNCTION	MODE	DESCRIPTION
38	2	Enable Press 3x Lock to remote start with the OEM remote.

Program remote starter option for R.S. OEM REMOTE STAND ALONE:

NOTES


- The vehicles OEM remote and SmartKey are still operable during remote start.
- **Heated seats The heated seats and rear defrost activate automatically when it cold.
- **Rear Defrost
- ***Parking Lights The parking Lights at remote start only.

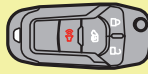

The vehicle must be equipped with the OEM remote with the door locks.

MANDATORY INSTALL


*** HOOD PIN**



HOOD STATUS: THE HOOD PIN SWITCH (INCLUDED) MUST BE INSTALLED IF THE VEHICLE CAN BE REMOTE STARTED WITH THE HOOD OPEN, SET FUNCTION A11 TO OFF.

A11 OFF

SECURITY STICKER



Included

Notice: the installation of safety elements are mandatory. The hood pin and the sticker are essential security elements and must be installed.

THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.



DESCRIPTION

		Parts required (Not included)	PAGE
WIRE TO WIRE DIAGRAM			
			Page 3
THARNNESS DIAGRAM			
THARNNESS THAR-FOR3	1x THAR-FOR3		Page 4




② Parking Lights switch


① Gateway module, located at dash board driver's side,

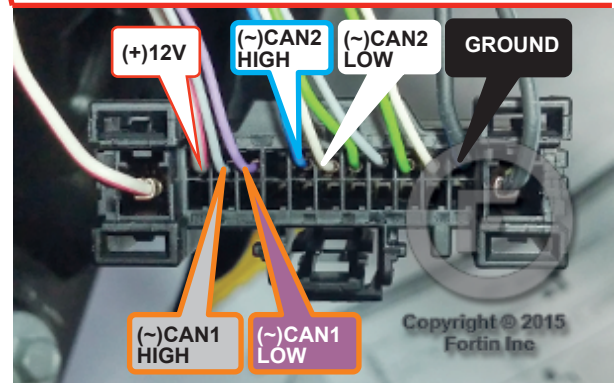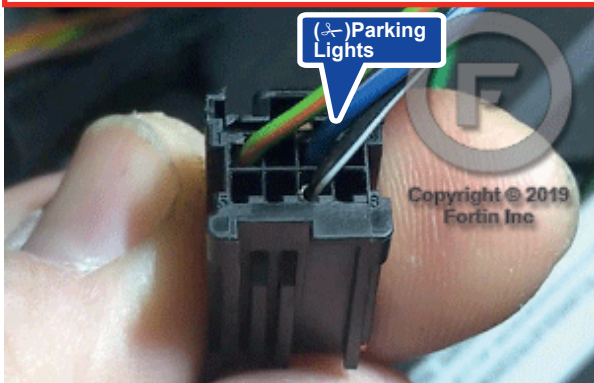



④ Under the hood If not equipped with hood pin.

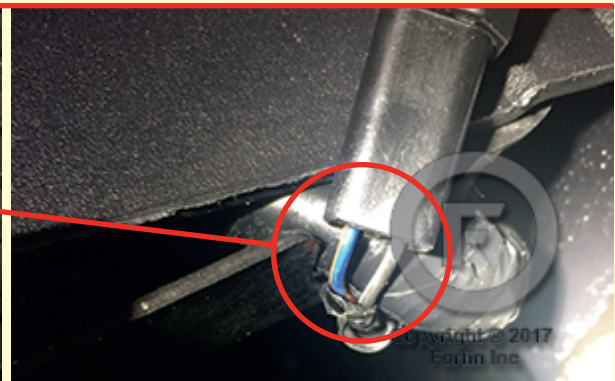

AUTOMATIC TRANSMISSION WIRING CONNECTION

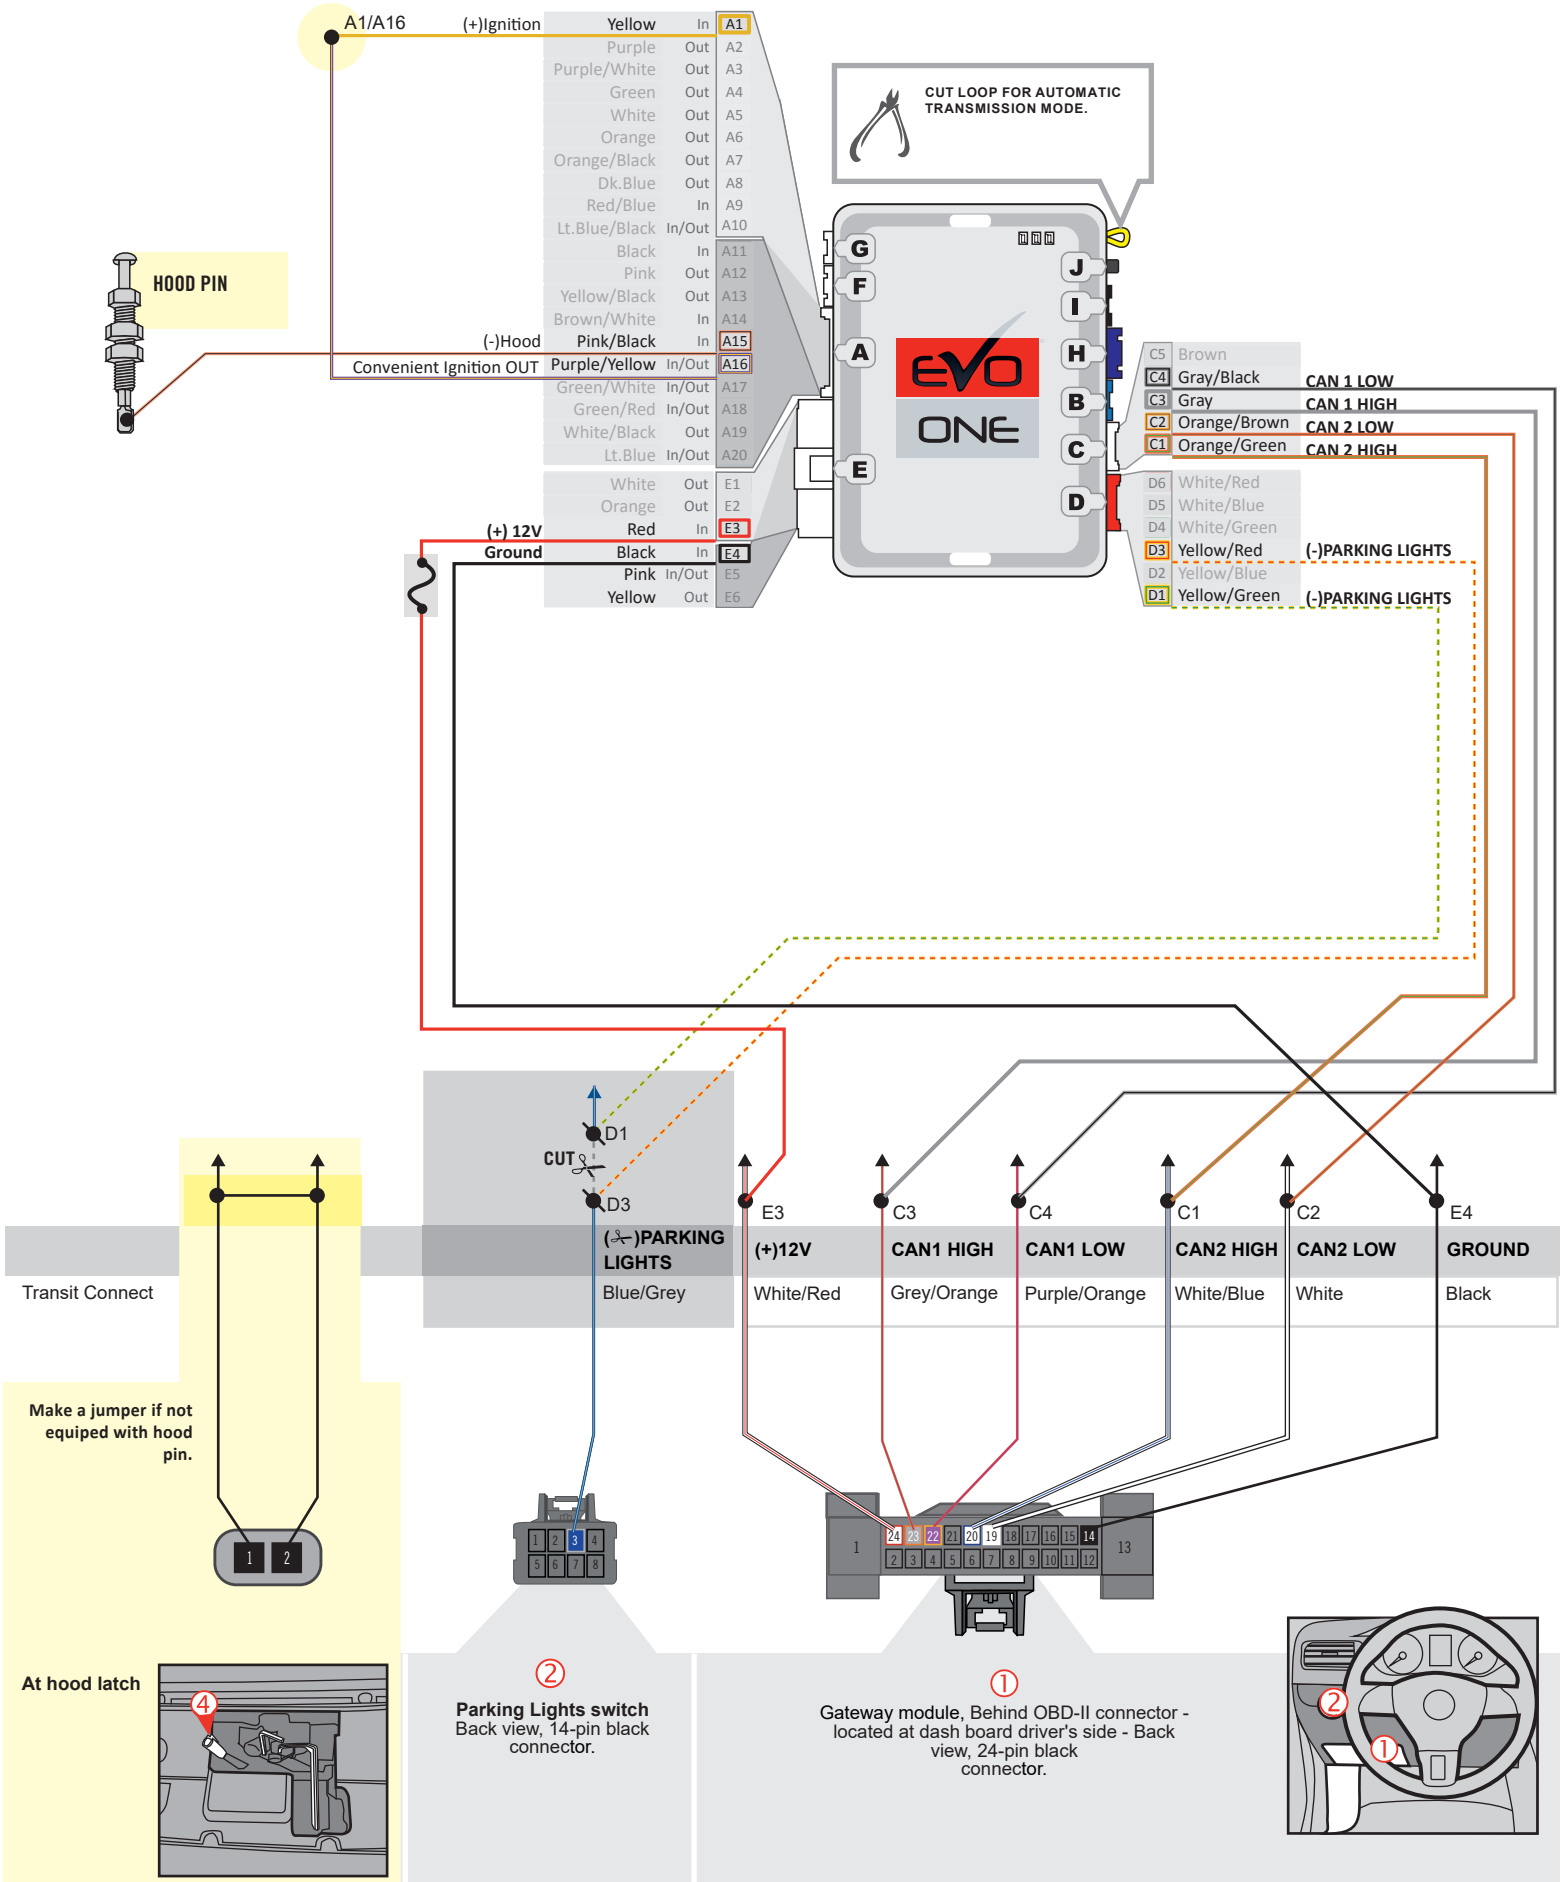

THAR-FOR3 | T-HARNESS - AUTOMATIC TRANSMISSION | T-HARNAIS - TRANSMISSION AUTOMATIQUE

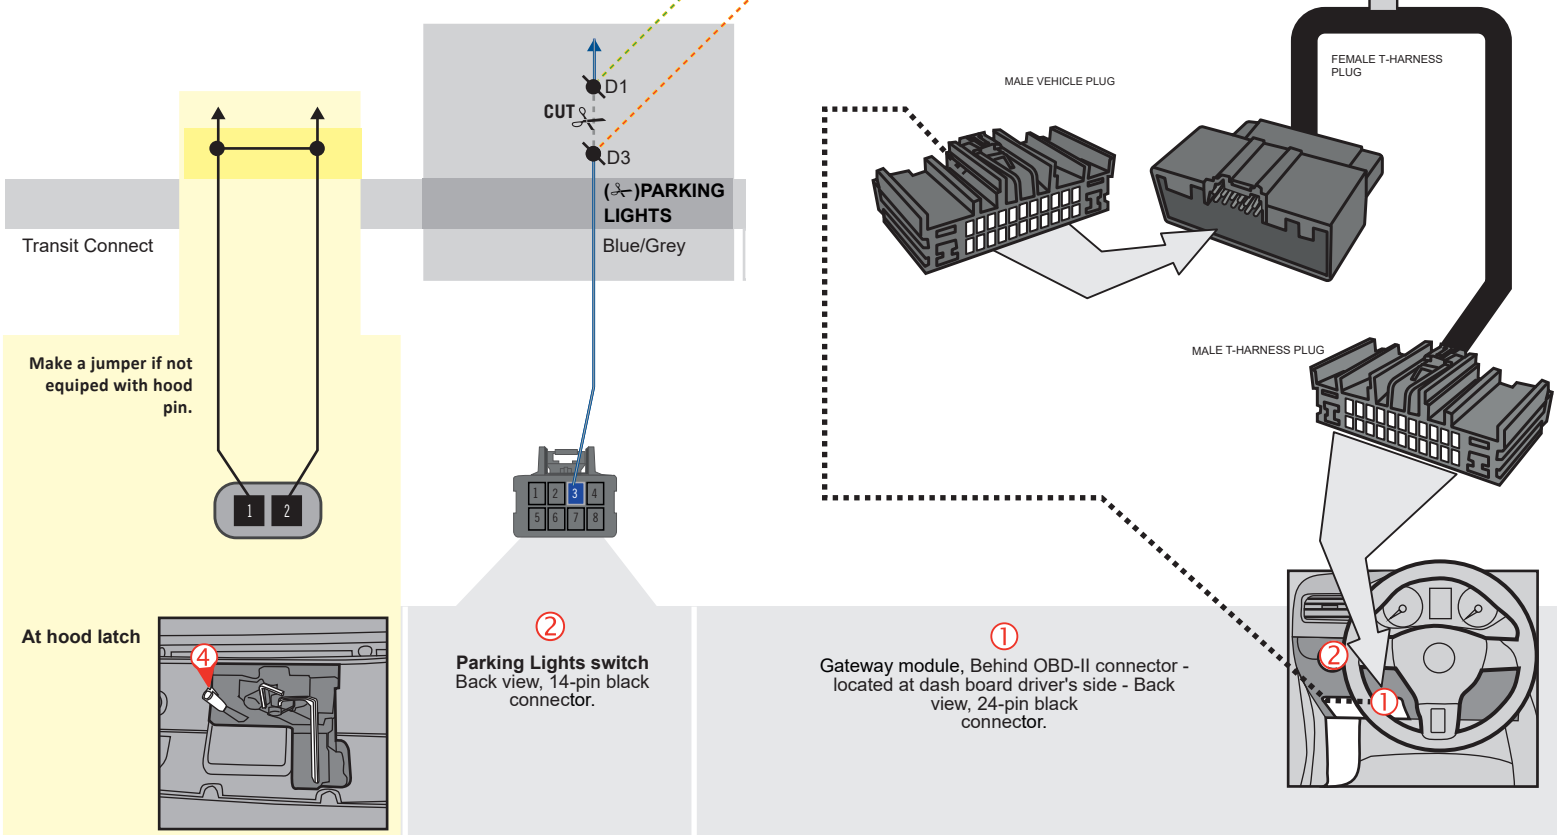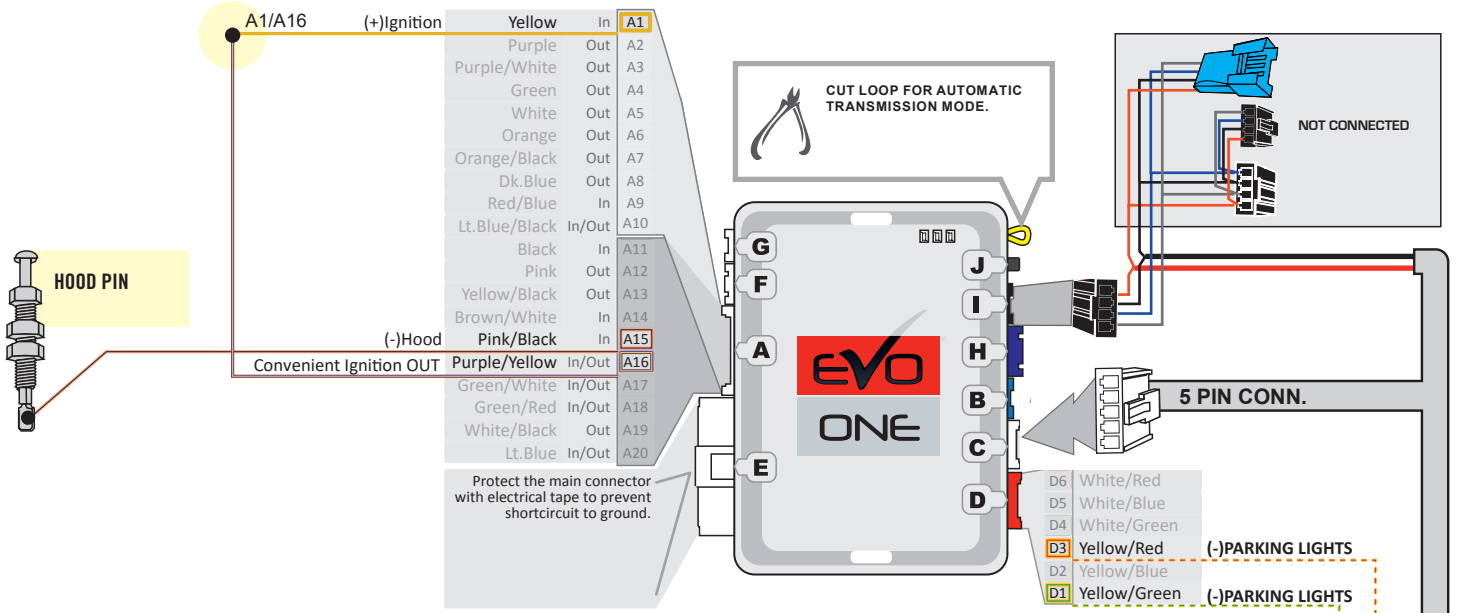

DCRYPTOR PROGRAMMING PROCEDURE



Parts required (not included)


- 1x FLASH LINK UPDATER, SOFTWARE | PROGRAMME
- 1x FLASH LINK MANAGER
- 1x Microsoft Windows Computer with Internet connection

OR

- 1x FLASH LINK MOBILE
- 1x FLASH LINK MOBILE APP
- Smartphone Android or iOS with Internet connection (Internet provider charges may apply)


BEFORE PROGRAMMING SET THE UNIT OPTIONS AND SAVE.

1

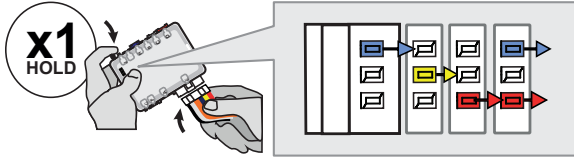

Press and hold the programming button:
Insert the 6-Pin Main connector.


WITH T-HARNESS

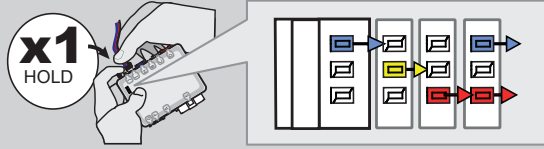

Press and hold the programming button:
Connect the 4-PIN Data-link harness (Black connector).


↳ The LEDs will alternate between BLUE, RED, YELLOW & BLUE/RED flashes.

2

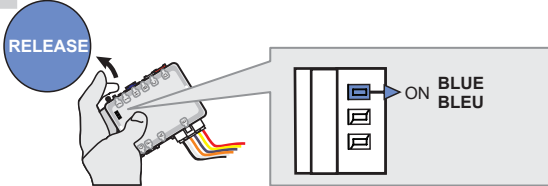


Release the programming button when the BLUE LED is ON.

 If the BLUE LED is not ON solid disconnect the 6-Pin Main connector and go back to step 1.




WITH T-HARNESS

 If the LED is not solid BLUE disconnect the 4 Pin connector (Data-Link) and go back to step 1.




3

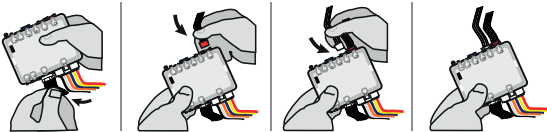

Insert the required remaining connectors.

4

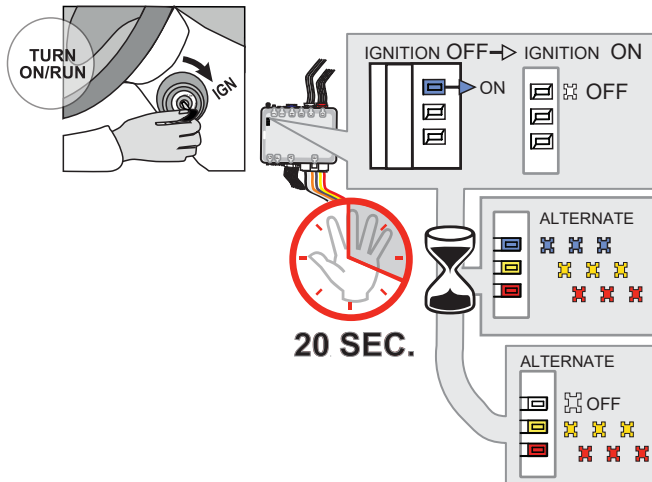

Turn the key to the Ignition ON/RUN position.

 
↳ The BLUE LED will turn OFF.

↳ The BLUE, YELLOW and RED LEDs will alternate.

Wait, at least 20 seconds, do not disconnect the modules or turn off the ignition.


↳ The RED and YELLOW LEDs will alternate.

Make sure that the DELs are flashing RED and YELLOW before continuing programming.



KEY BYPASS PROGRAMMING PROCEDURE 2/2


5

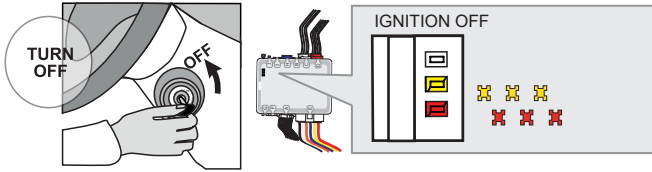

Turn the key to the OFF position.


↳ The RED and YELLOW LEDs alternate.

6

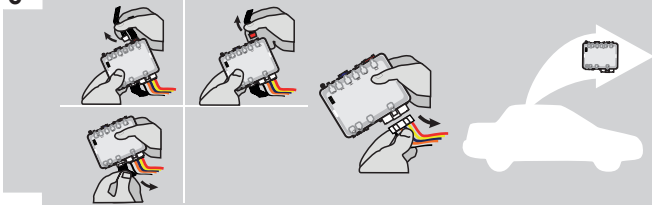

Disconnect all connectors and after the 6-Pin (Main-Harness) or the 4-Pin Data-link connector.


7

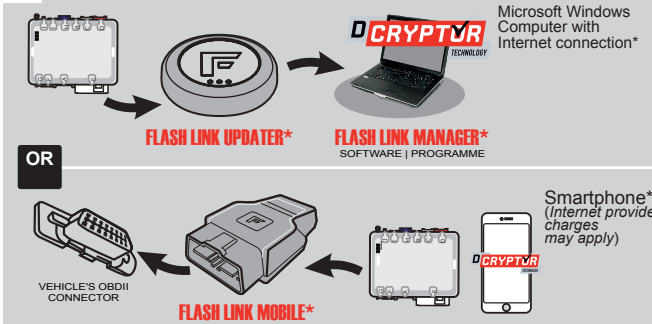

Use the tool: FLASH LINK UPDATER or FLASH LINK MOBILE to visit the DCryptor menu.


*Parts required (not included)

8

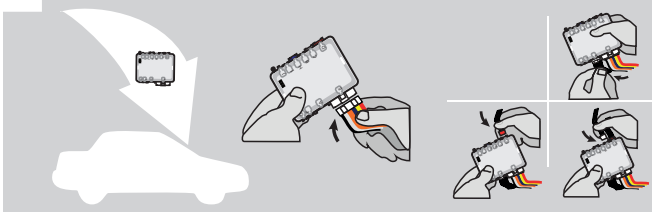

AFTER DCRYPTOR PROGRAMMING COMPLETED Go back to the vehicle and reconnect the 6-Pin (Main-Harness) or the 4-pins (Data-Link) connector and after all the remaining connector.

9

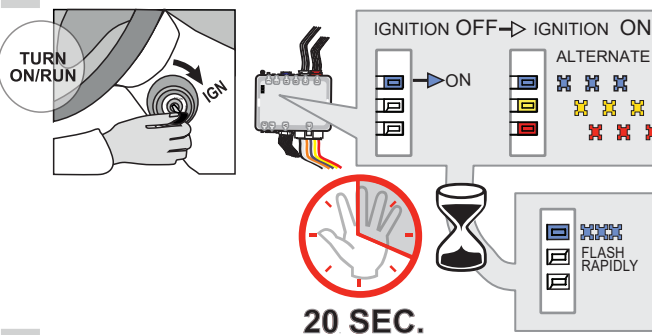


Turn the key to the Ignition ON/RUN position.

↳ The BLUE, YELLOW and RED LEDs will alternate.

Wait, at least 20 seconds, do not disconnect the modules or turn off the ignition.

↳ The BLUE LED will flash rapidly.

10

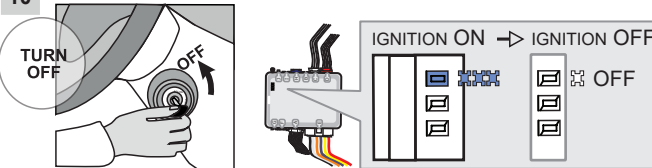

Turn the key to the OFF position.

↳ The BLUE will turn OFF.




The module is now programmed.

REMOTE STARTER PROGRAMMING PROCEDURE



REFER TO THE **QUICK INSTALL GUIDE** INCLUDED WITH THE MODULE FOR THE REMOTE STARTER PROGRAMMING.

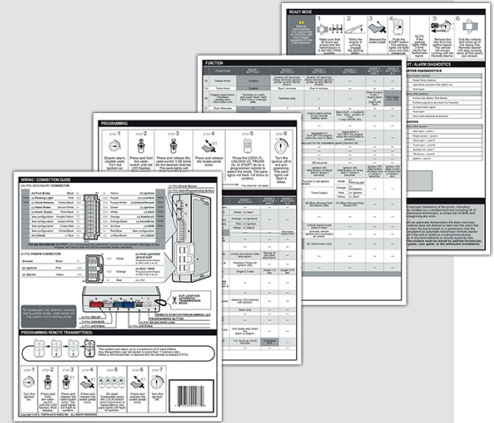

REMOTE STARTER FUNCTIONALITY



 
All doors must be closed.



Remote start the vehicle.



Unlock the doors with the remote-starter remote or the OEM remote.



Insert and Turn the key to the Ignition ON/RUN position.



Press the brake pedal.



The vehicle can now be put in to gear and driven.

REGULAR & THAR-FOR3 INSTALLATION

ADDENDUM - SUGGESTED WIRING CONFIGURATION



ONLY COMPATIBLE WITH AUTOMATIC TRANSMISSION VEHICLES.

Vehicle functions supported in this diagram (functional if equipped)



VEHICLE

YEARS


Immobilizer bypass	T-Harness available (sold separately)	Lock	Unlock	Arm	Disarm	Heated Seats**	Rear Defrost**	RAP Disable	Parking Lights***	Tachometer	Door Status	Trunk Status	Hood Status*	Hand-Brake Status	Foot-Brake Status	Active OEM Remote Start	R.S. OEM remote Stand Alone compatible
--------------------	---------------------------------------	------	--------	-----	--------	----------------	----------------	-------------	-------------------	------------	-------------	--------------	--------------	-------------------	-------------------	-------------------------	--

LINCOLN

Corsair

Push-to-Start 2020

•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

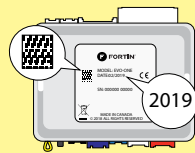

COMPATIBLE MODULE REQUIRED:

QR CODE ON THE LABEL MANUFACTURED AFTER: 2019

FIRMWARE VERSION

58.[02]
MINIMUM

To add the firmware version and the options, use the **FLASH LINK UPDATER** or **FLASH LINK MOBILE** tool, sold separately.



Program bypass option:

UNIT OPTION

DESCRIPTION

C1

OEM Remote status (Lock/Unlock) monitoring

D6

Push-to-Start

IF THE VEHICLE IS NOT EQUIPPED WITH FUNCTIONAL HOOD PIN:

A11

OFF

Hood trigger (Output Status).



Program remote starter option for R.S. OEM REMOTE STAND ALONE:

FUNCTION

MODE

DESCRIPTION

38

2

Enable Press 3x Lock to remote start with the OEM remote.

NOTES

The vehicles OEM remote and SmartKey are still operable during remote start.

**Heated seats The heated seats and rear defrost activate automatically when it cold.

***Parking Lights The parking Lights at remote start only.

MANDATORY INSTALL

* HOOD PIN



HOOD STATUS: THE HOOD PIN SWITCH (INCLUDED) MUST BE INSTALLED IF THE VEHICLE CAN BE REMOTE STARTED WITH THE HOOD OPEN, SET FUNCTION A11 TO OFF.

A11

OFF

SECURITY STICKER



Included

Notice: the installation of safety elements are mandatory. The hood pin and the sticker are essential security elements and must be installed.

THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.

DESCRIPTION |

	Parts required (Not included)	PAGE
--	-------------------------------	------

WIRE TO WIRE DIAGRAM


		Page 3
--	--	--------

THARNESS DIAGRAM


THARNESS THAR-FOR3	1x THAR-FOR3	Page 4
--------------------	--------------	--------



① Gateway module, Behind OBD-II connector

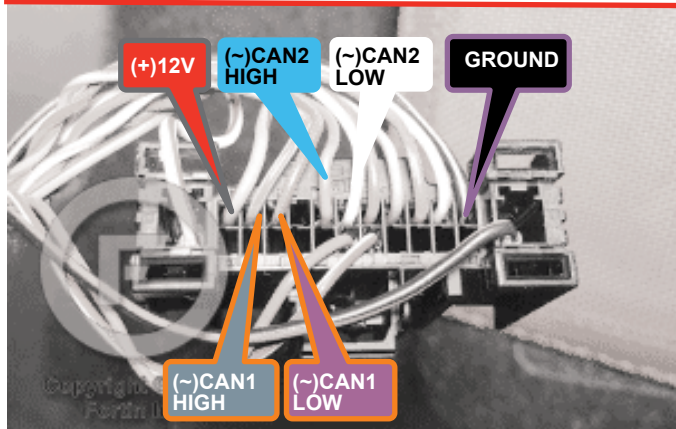


AUTOMATIC TRANSMISSION WIRING CONNECTION |

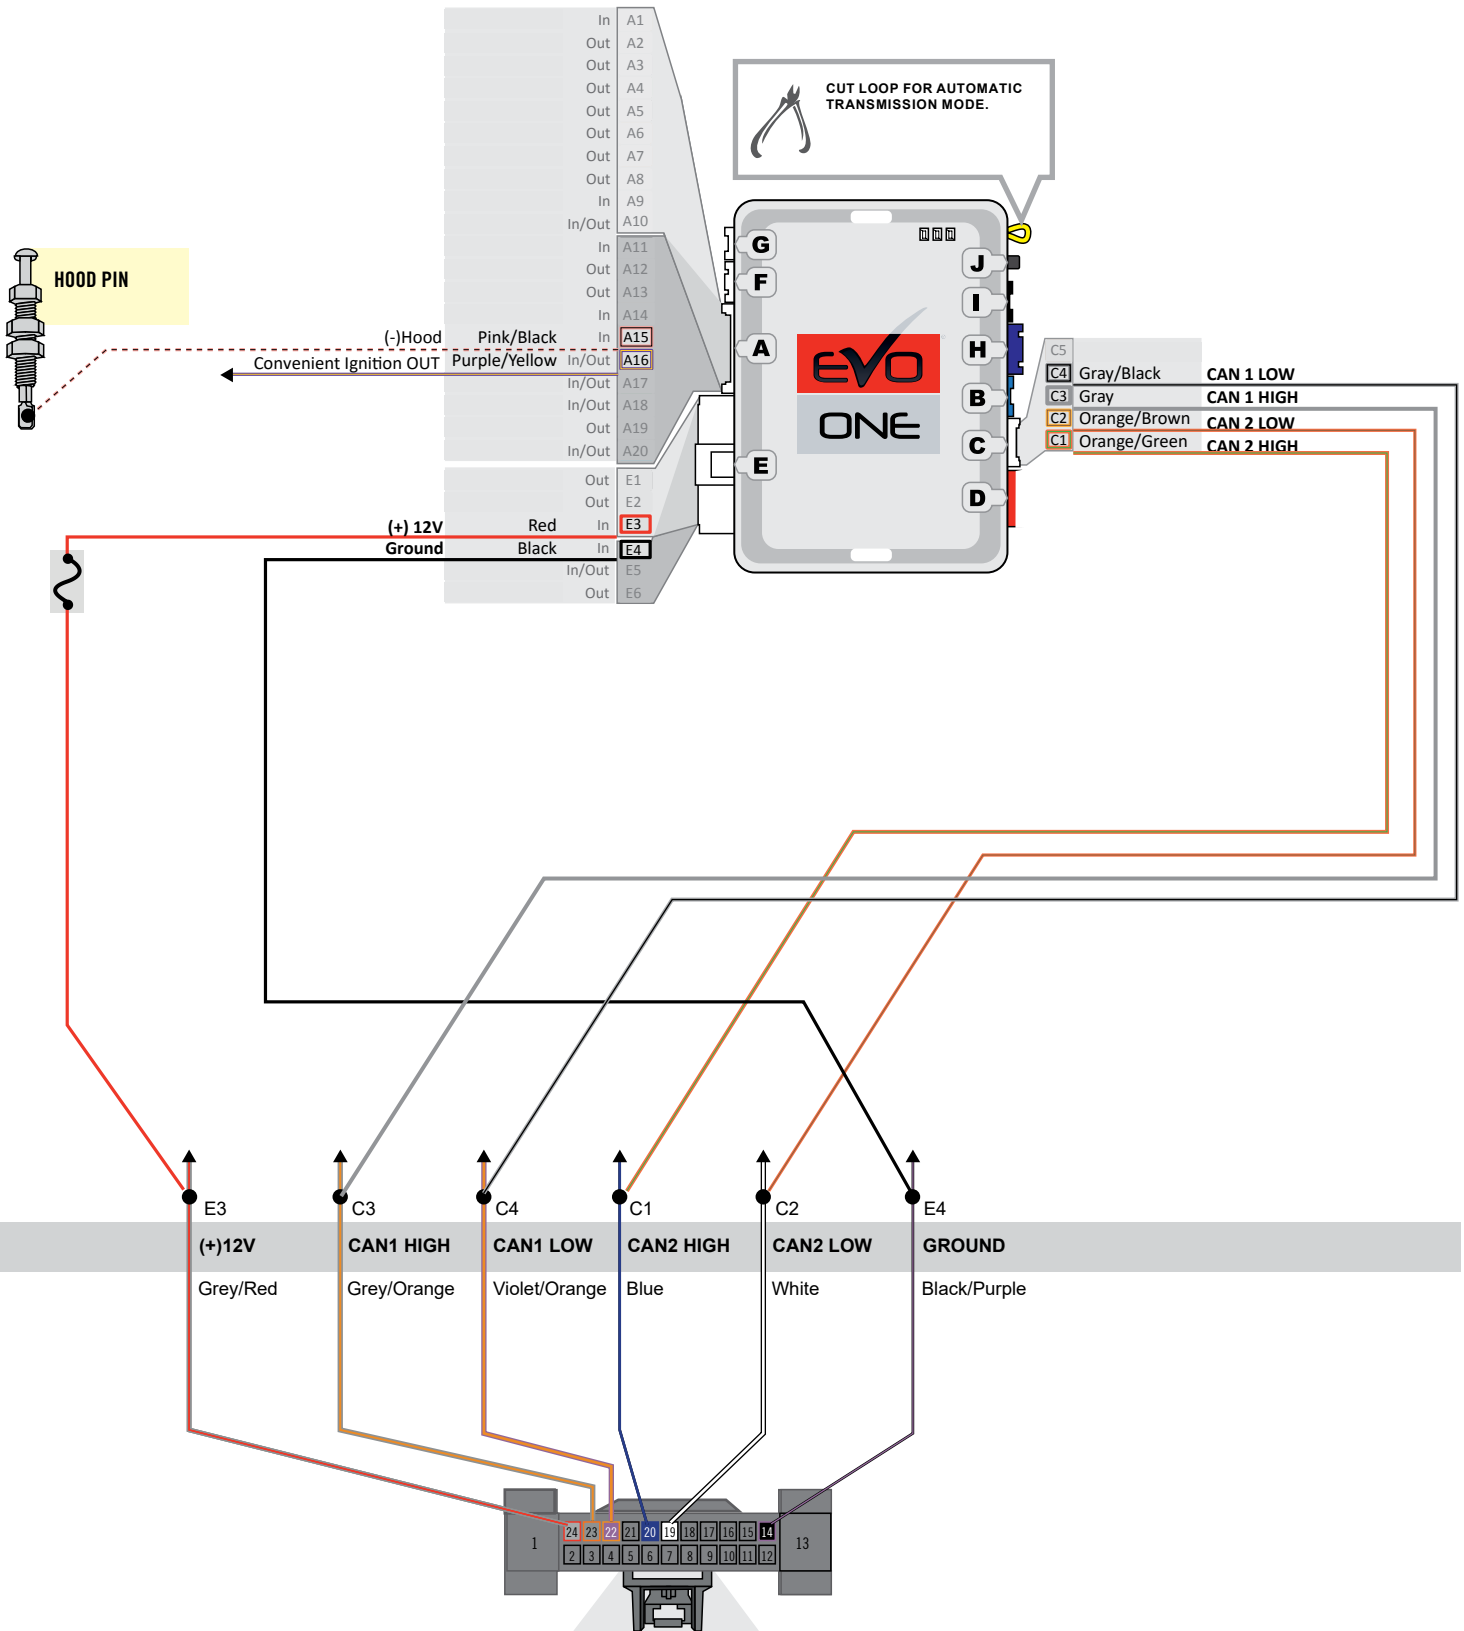


CORSAIR


① Gateway module, Connector Behind OBD-II connector - located at dash board driver's side Back view, 24-pin black connector.

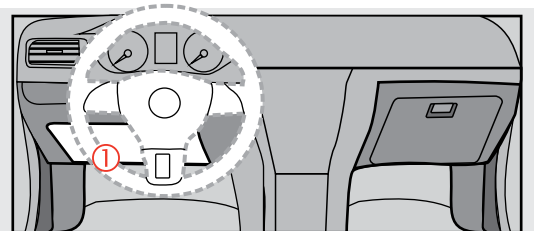

THAR-FOR3 | T-HARNESS - AUTOMATIC TRANSMISSION |

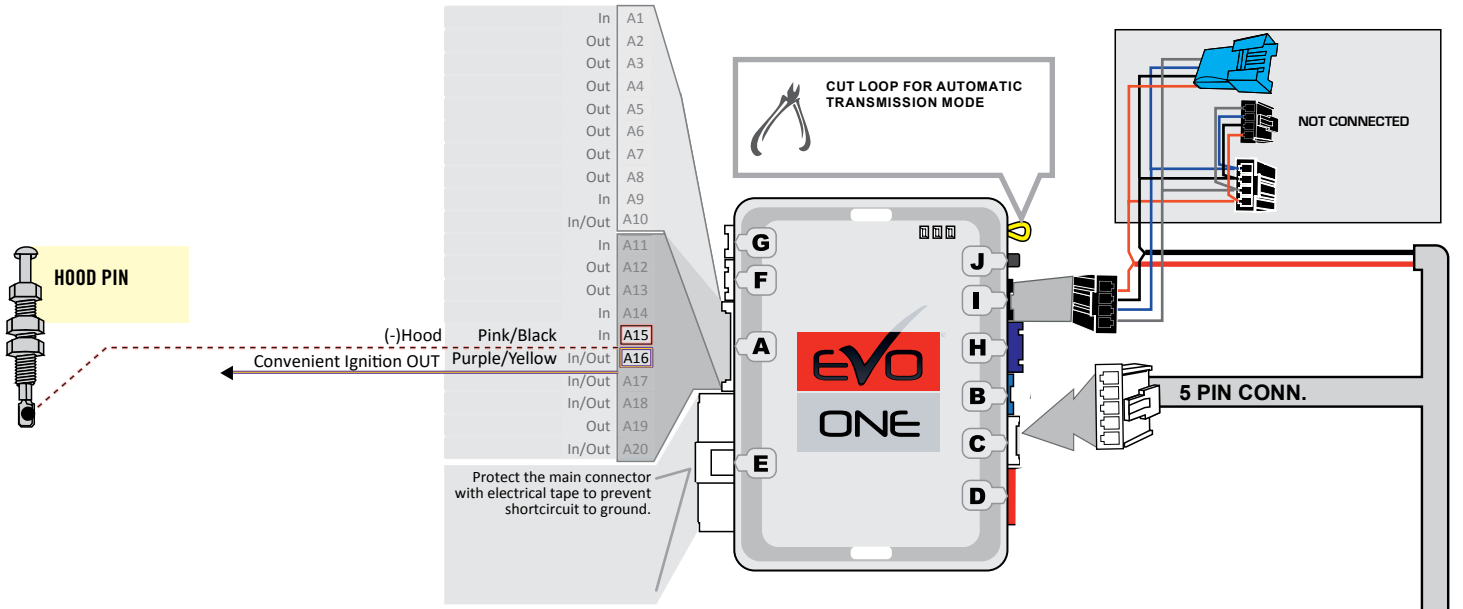


T-HARNESS - HARNAIS EN T
THAR-FOR3

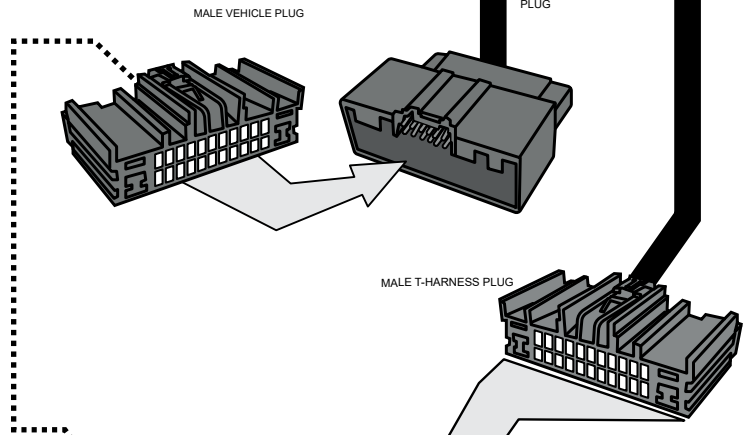

CORSAIR

① Gateway module, Connector Behind OBD-II connector - located at dash board driver's side
Back view, 24-pin black connector.

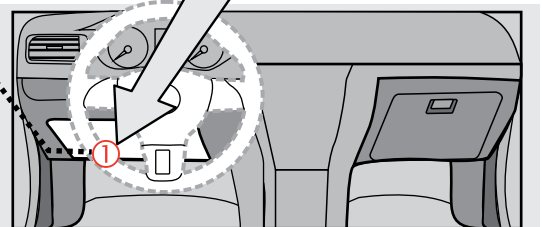

DCRYPTOR PROGRAMMING PROCEDURE |




- Parts required (not included)**
- 1x **FLASH LINK UPDATER,**
 - 1x **FLASH LINK MANAGER**
SOFTWARE | PROGRAMME
 - 1x **Microsoft Windows Computer with Internet connection**

OR

- 1x **FLASH LINK MOBILE**
- 1x **FLASH LINK MOBILE APP**
Smartphone Android or iOS with Internet connection
(Internet provider charges may apply)


BEFORE PROGRAMMING SET THE UNIT OPTIONS AND SAVE.

1

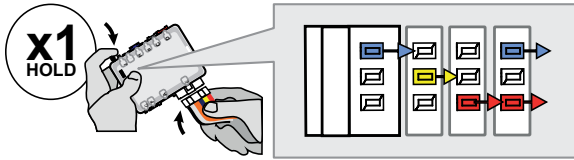

Press and hold the programming button:
Insert the 6-Pin Main connector.


**WITH T-HARNESS
AVEC HARNAIS EN T**

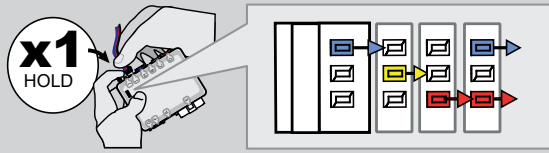

Press and hold the programming button:
Connect the 4-PIN Data-link harness (Black connector).


↳ The LEDs will alternate between BLUE, RED, YELLOW & BLUE/RED flashes.

2

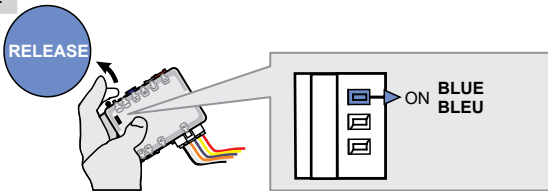


Release the programming button when the BLUE LED is ON.

 If the BLUE LED is not ON solid disconnect the 6-Pin Main connector and go back to step 1.




**WITH T-HARNESS
AVEC HARNAIS EN T**

 If the LED is not solid BLUE disconnect the 4 Pin connector (Data-Link) and go back to step 1.




3

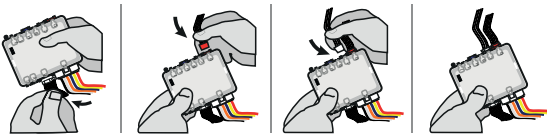

Insert the required remaining connectors.

4

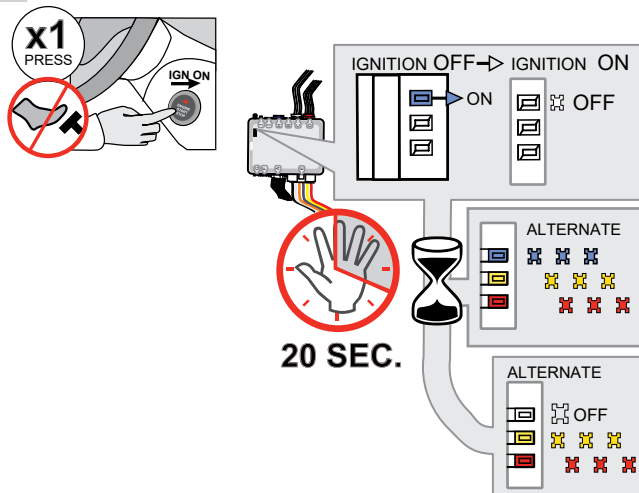

Do not press the brake pedal.
Press the Push-to-Start button once to turn on the ignition.

 
↳ The BLUE LED will turn OFF.

↳ The BLUE, YELLOW and RED LEDs will alternate.

Wait, at least 20 seconds, do not disconnect the modules or turn off the ignition.


↳ The RED and YELLOW LEDs will alternate.

Make sure that the DELs are flashing RED and YELLOW before continuing programming.



KEY BYPASS PROGRAMMING PROCEDURE 2/2 |


5

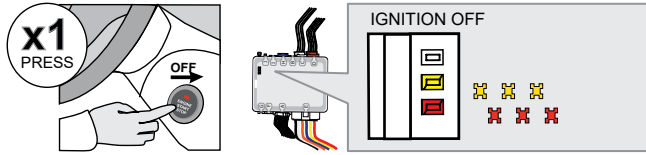

Press the Push-to-Start button once to turn off the ignition.


↳ The RED and YELLOW LEDs alternate.

6

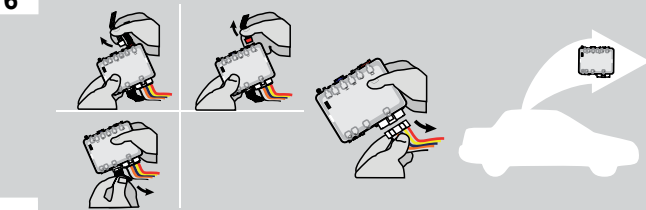

Disconnect all connectors and after the 6-Pin (Main-Harness) or the 4-Pin Data-link connector.


7

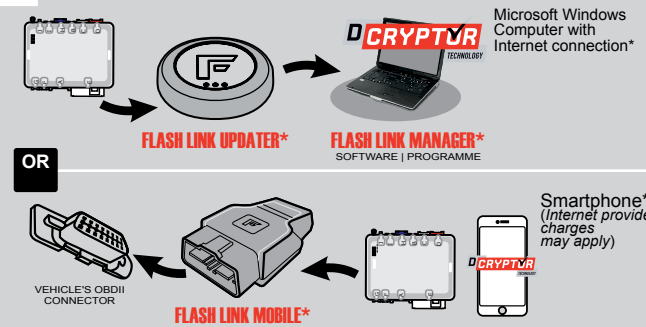


Use the tool: FLASH LINK UPDATER or FLASH LINK MOBILE to visit the DCryptor menu.

*Parts required (not included)

8

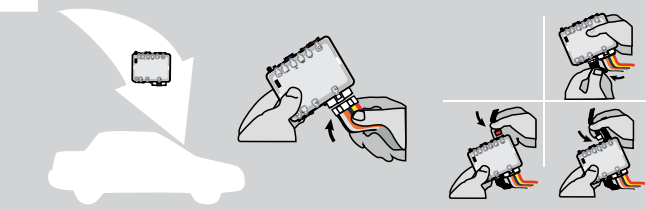


AFTER DCRYPTOR PROGRAMMING COMPLETED Go back to the vehicle and reconnect the 6-Pin (Main-Harness) or the 4-pins (Data-Link) connector and after all the remaining connector.

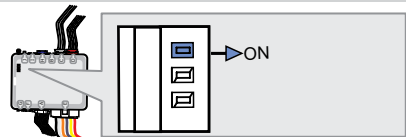

↳ The BLUE LED will turn ON.

9

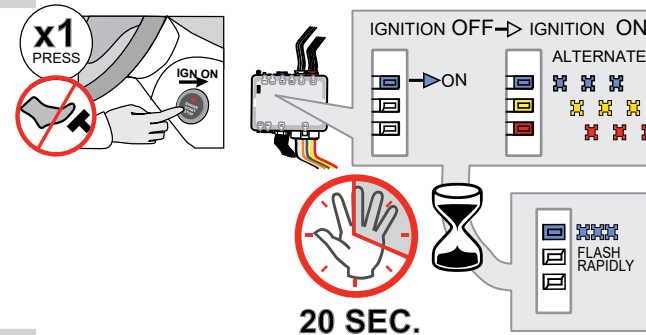


Do not press the brake pedal. Press the Push-to-Start button once to turn on the ignition.

↳ The BLUE, YELLOW and RED LEDs will alternate.

Wait, at least 20 seconds, do not disconnect the modules or turn off the ignition.

↳ The BLUE LED will flash rapidly.

10

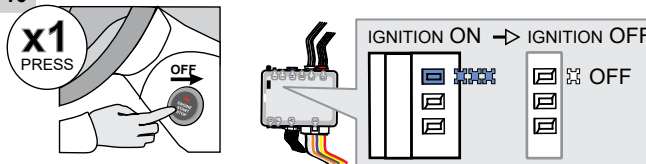

Press the Push-to-Start button once to turn off the ignition.

↳ The BLUE will turn OFF.




The module is now programmed.

REMOTE STARTER PROGRAMMING PROCEDURE |



REFER TO THE **QUICK INSTALL GUIDE** INCLUDED WITH THE MODULE FOR THE REMOTE STARTER PROGRAMMING.

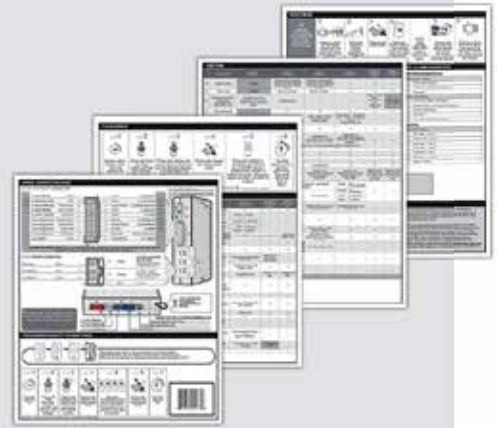

REMOTE STARTER FUNCTIONALITY |



All doors must be closed.

 


Remote start the vehicle.



Unlock the doors with either:

- The OEM remote
- The remote-starter remote
- Or the proximity remote



Enter the vehicle with the SMART-KEY.



DO NOT PRESS THE BRAKE PEDAL.

Press and release the Push-to-Start button once.



Press the brake pedal. The vehicle can now be put in to gear and driven.

If the Smart-Key is not detected the vehicle will shut down.

THAR-FOR3 THARNESSE INSTALLATION

ADDENDUM - SUGGESTED WIRING CONFIGURATION


ONLY COMPATIBLE WITH AUTOMATIC TRANSMISSION VEHICLES.


Vehicle functions supported in this diagram (functional if equipped)

VEHICLE	YEARS	Immobilizer bypass	T-Harness	Lock	Unlock	Arm	Disarm	RAP Disable	Parking Lights	Tachometer	Door Status	Trunk Status	Hood Status*	Hand-Brake Status	Foot-Brake Status	Active OEM Remote Start	R.S. OEM remote Stand Alone compatible
FORD																	
EcoSport	Key 2018-2020	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•

BYPASS FIRMWARE VERSION

4.02

ONLY - SEULEMENT


To add the firmware version and the options, use the **FLASH LINK UPDATER** or **FLASH LINK MOBILE** tool, sold separately.

	Program bypass option:	UNIT OPTION	DESCRIPTION
		C1	OEM Remote status (Lock/Unlock) monitoring
IF THE VEHICLE IS NOT EQUIPPED WITH FUNCTIONAL HOOD PIN:			
		A11	OFF
			Hood trigger (Output Status).

	Program remote starter option for R.S. OEM REMOTE STAND ALONE:	FUNCTION	MODE	DESCRIPTION
		38	2	Enable Press 3x Lock to remote start with the OEM remote.

NOTES

 The vehicles OEM remote and SmartKey are still operable during remote start.



The vehicle must be equipped with the OEM remote with the door locks.

MANDATORY INSTALL

* HOOD PIN



HOOD STATUS: THE HOOD PIN SWITCH (INCLUDED) MUST BE INSTALLED IF THE VEHICLE CAN BE REMOTE STARTED WITH THE HOOD OPEN, SET FUNCTION A11 TO OFF.

A11

OFF

SECURITY STICKER





Included

Notice: the installation of safety elements are mandatory. The hood pin and the sticker are essential security elements and must be installed.



THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.

DESCRIPTION




③ Behind glove box

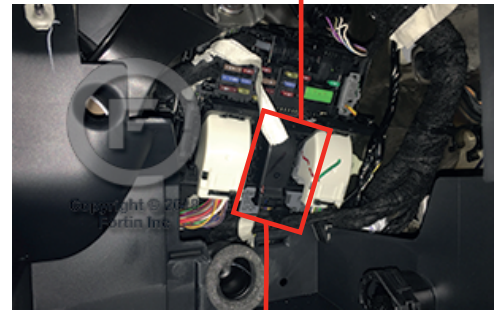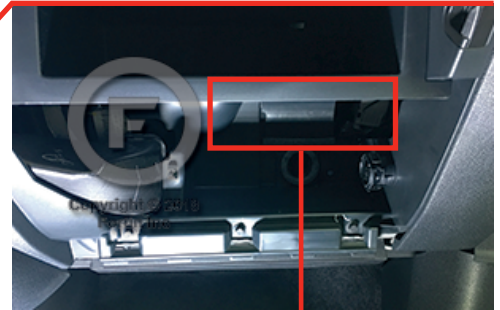

① Gateway module, Behind OBD-II connector

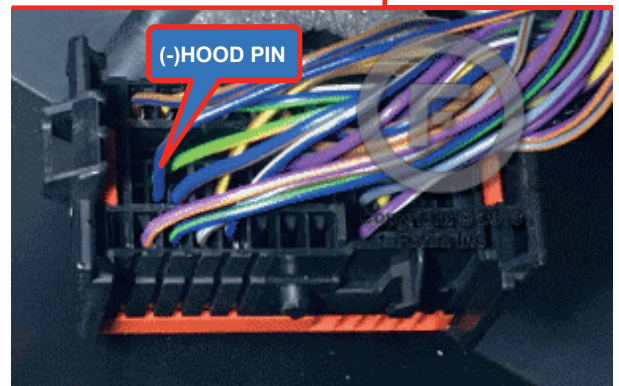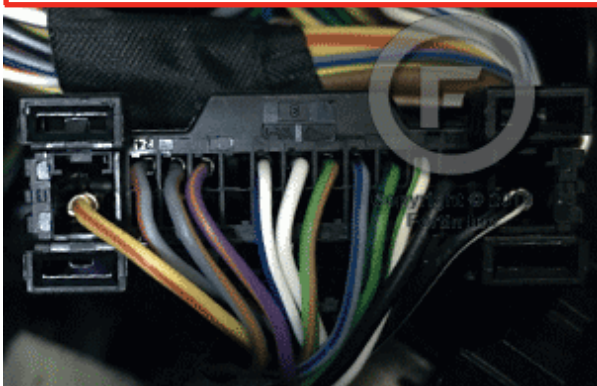


AUTOMATIC TRANSMISSION WIRING CONNECTION

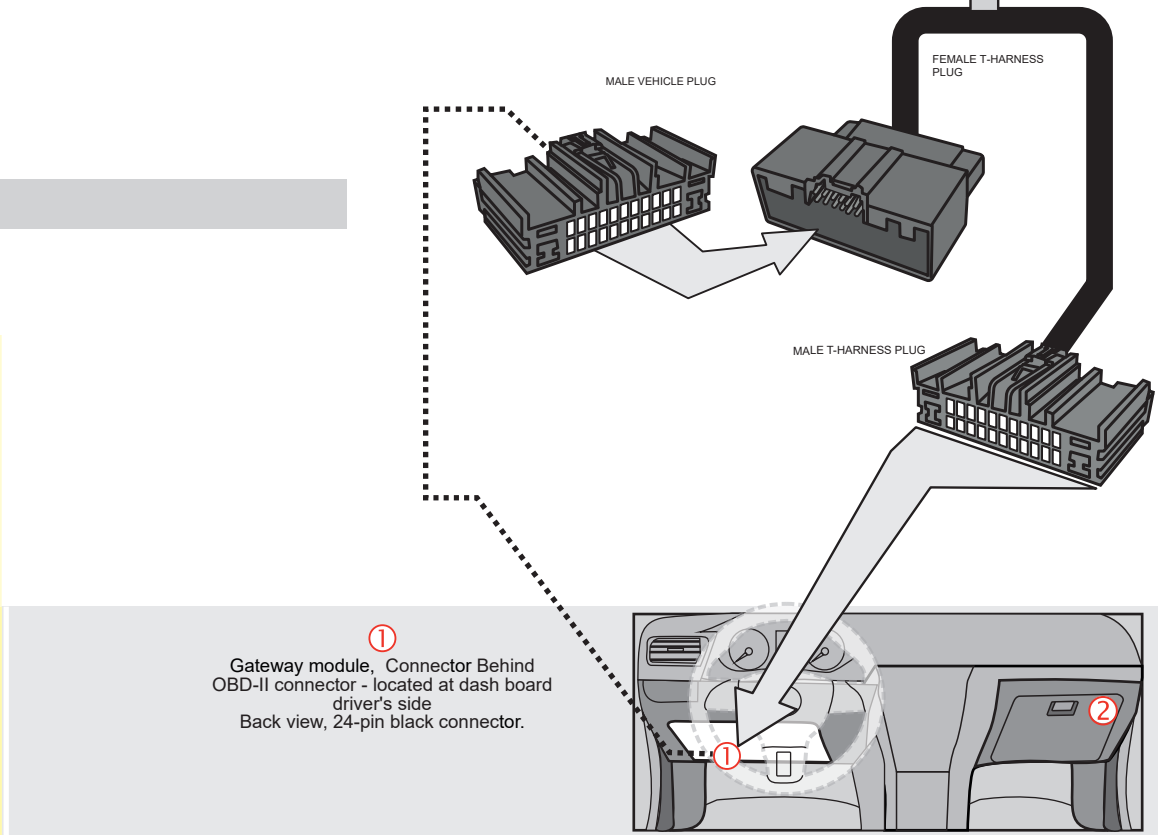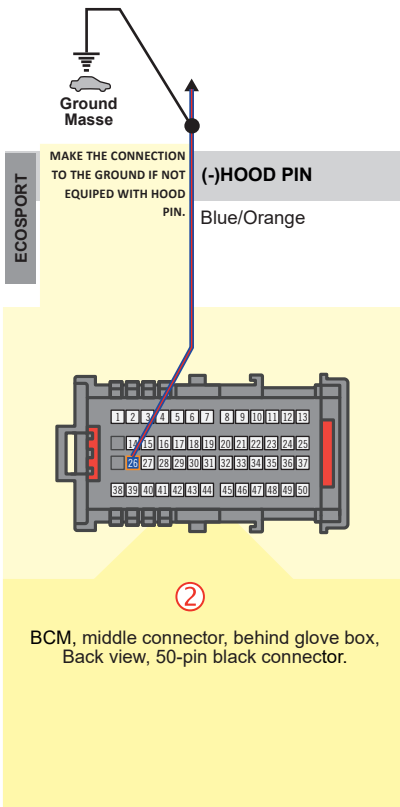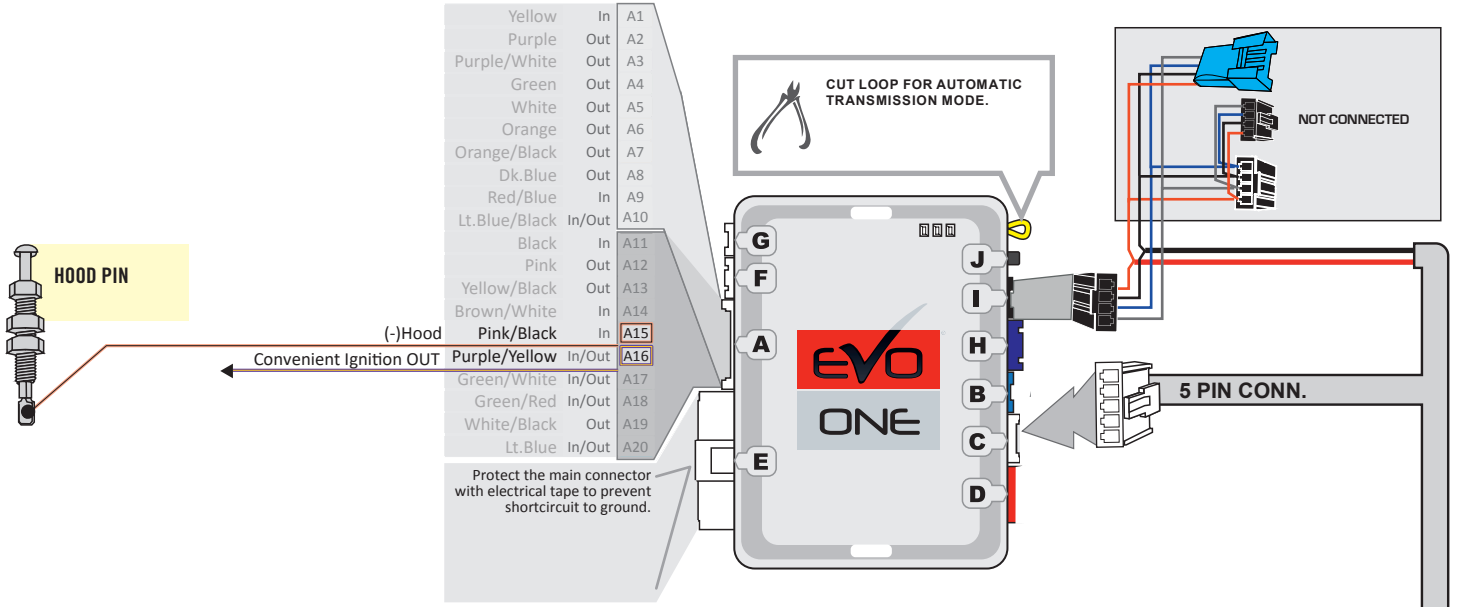


KEY BYPASS PROGRAMMING PROCEDURE 1/2

1

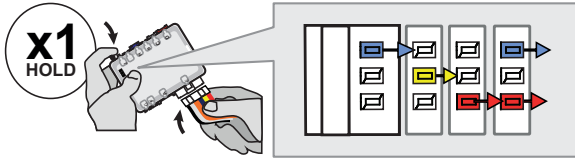

Press and hold the programming button:
Insert the 6-Pin Main connector.


WITH T-HARNESS

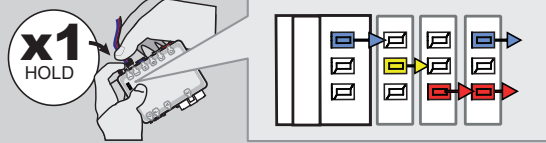

Press and hold the programming button:
Connect the 4-PIN Data-link harness (Black connector).


↳ The LEDs will alternate between BLUE, RED, YELLOW & BLUE/RED flashes.

2

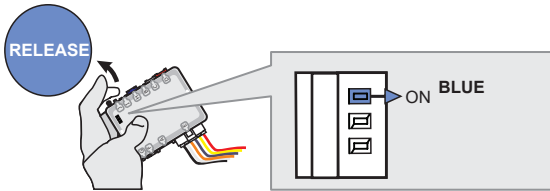


Release the programming button when the BLUE LED is ON.

 If the BLUE LED is not ON solid **disconnect** the 6-Pin Main connector and go back to step 1.




WITH T-HARNESS

 If the LED is not solid BLUE disconnect the 4 Pin connector (Data-Link) and go back to step 1.




3

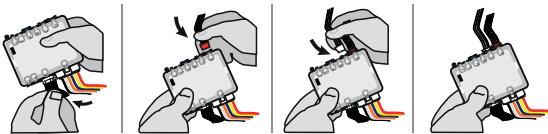

Insert the required remaining connectors.

4

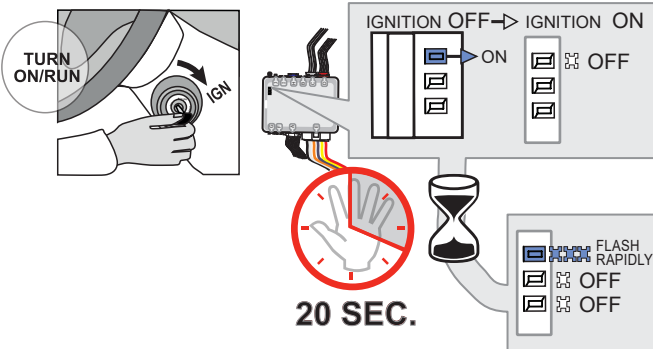


Turn the key to the Ignition ON/RUN position.

↳ The BLUE LED will turn OFF.

↳ The BLUE LED will flash rapidly.

5


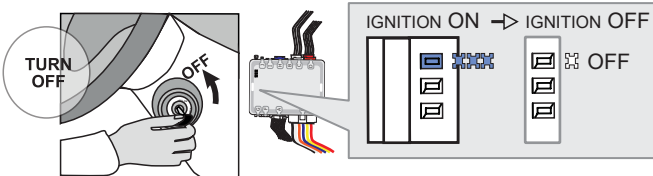


Turn the key to the OFF position.

↳ The BLUE LED will turn off.

KEY BYPASS PROGRAMMING PROCEDURE 2/2

6

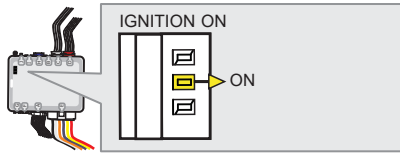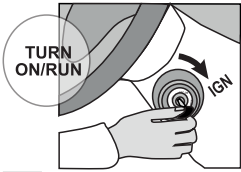


Turn the key to the Ignition ON/RUN position.

↳ The YELLOW LED will turn ON.

7

8

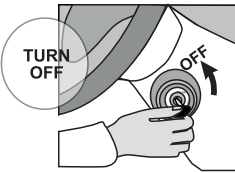

Turn the key to the OFF position.




The module is now programmed.

REMOTE STARTER PROGRAMMING PROCEDURE



REFER TO THE **QUICK INSTALL GUIDE** INCLUDED WITH THE MODULE FOR THE REMOTE STARTER PROGRAMMING.

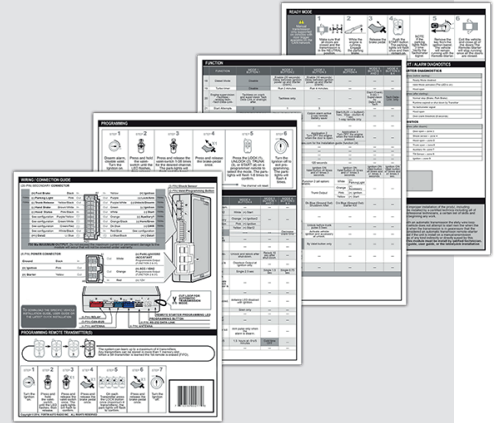

REMOTE STARTER FUNCTIONALITY



 
All doors must be closed.



Remote start the vehicle.



Unlock the doors with the remote-starter remote or the OEM remote.



Insert and Turn the key to the Ignition ON/RUN position.



Press the brake pedal.



The vehicle can now be put in to gear and driven.

THAR-FOR3 THARNNESS INSTALLATION

ADDENDUM - SUGGESTED WIRING CONFIGURATION



ONLY COMPATIBLE WITH AUTOMATIC TRANSMISSION VEHICLES.



Vehicle functions supported in this diagram (functional if equipped)

VEHICLE	YEARS	Immobilizer bypass	T-Harness	Lock	Unlock	Arm	Disarm	RAP Disable	Parking Lights	Tachometer	Door Status	Trunk Status	Hood Status*	Hand-Brake Status	Foot-Brake Status	Active OEM Remote Start	R.S. OEM remote Stand Alone compatible
FORD																	
EcoSport	Push-to-Start 2018-2020	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•

BYPASS FIRMWARE VERSION

4.02

ONLY - SEULEMENT

To add the firmware version and the options, use the **FLASH LINK UPDATER** or **FLASH LINK MOBILE** tool, sold separately.

	Program bypass option:	UNIT OPTION	DESCRIPTION
		C1	OEM Remote status (Lock/Unlock) monitoring
		D6	Push-to-Start
IF THE VEHICLE IS NOT EQUIPPED WITH FUNCTIONAL HOOD PIN:		A11	OFF
			Hood trigger (Output Status).

	Program remote starter option for R.S. OEM REMOTE STAND ALONE:	FUNCTION	MODE	DESCRIPTION
		38	2	Enable Press 3x Lock to remote start with the OEM remote.

NOTES

The vehicles OEM remote and SmartKey are still operable during remote start.

*** HOOD PIN**

MANDATORY INSTALL

HOOD STATUS: THE HOOD PIN SWITCH (INCLUDED) MUST BE INSTALLED IF THE VEHICLE CAN BE REMOTE STARTED WITH THE HOOD OPEN, SET FUNCTION **A11** TO OFF.

A11 OFF

SECURITY STICKER

Included

Notice: the installation of safety elements are mandatory. The hood pin and the sticker are essential security elements and must be installed.





THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.

DESCRIPTION |




③ Behind glove box



① Gateway module, Behind OBD-II connector

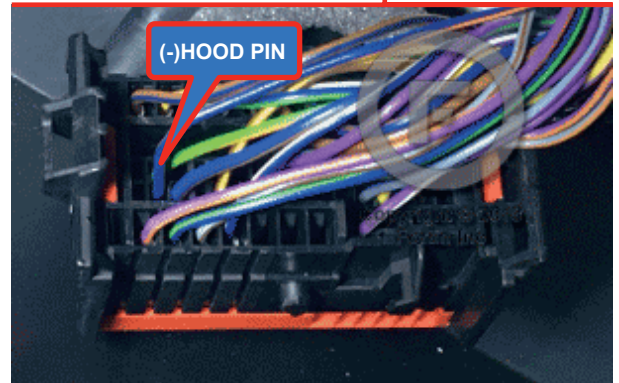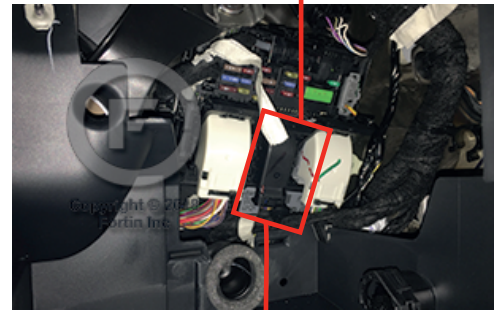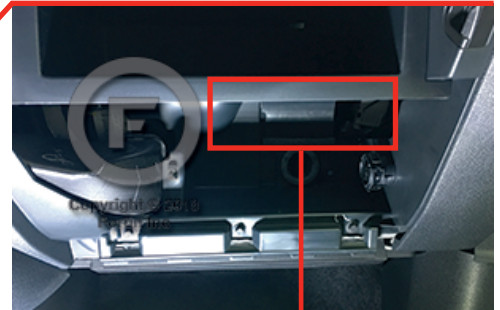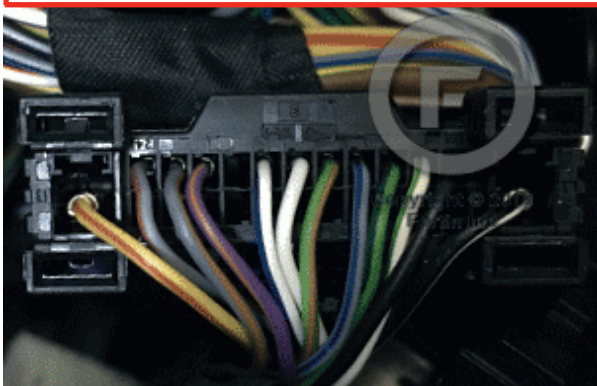


AUTOMATIC TRANSMISSION WIRING CONNECTION |

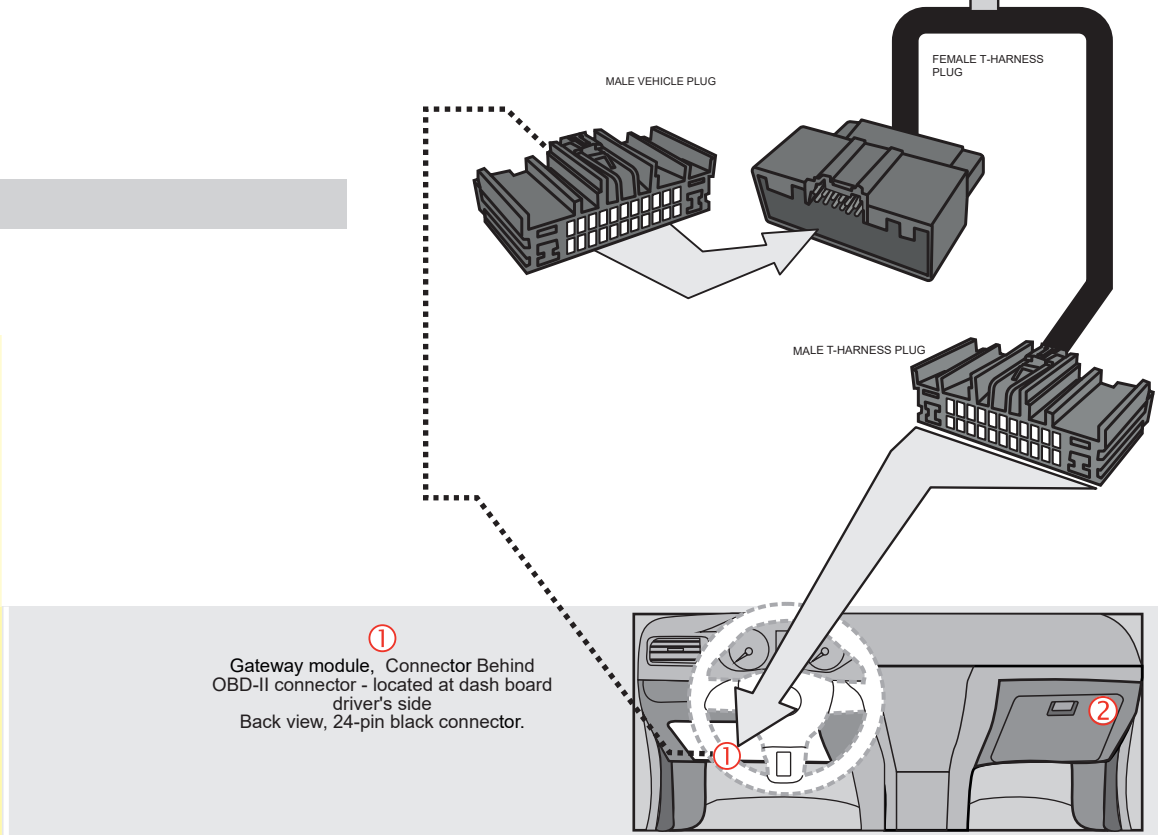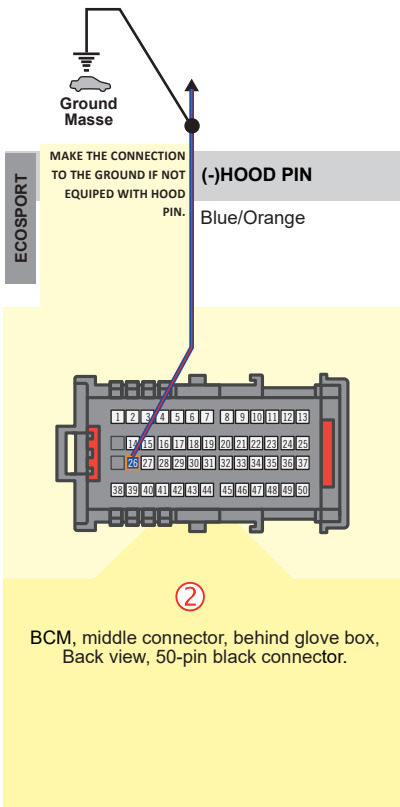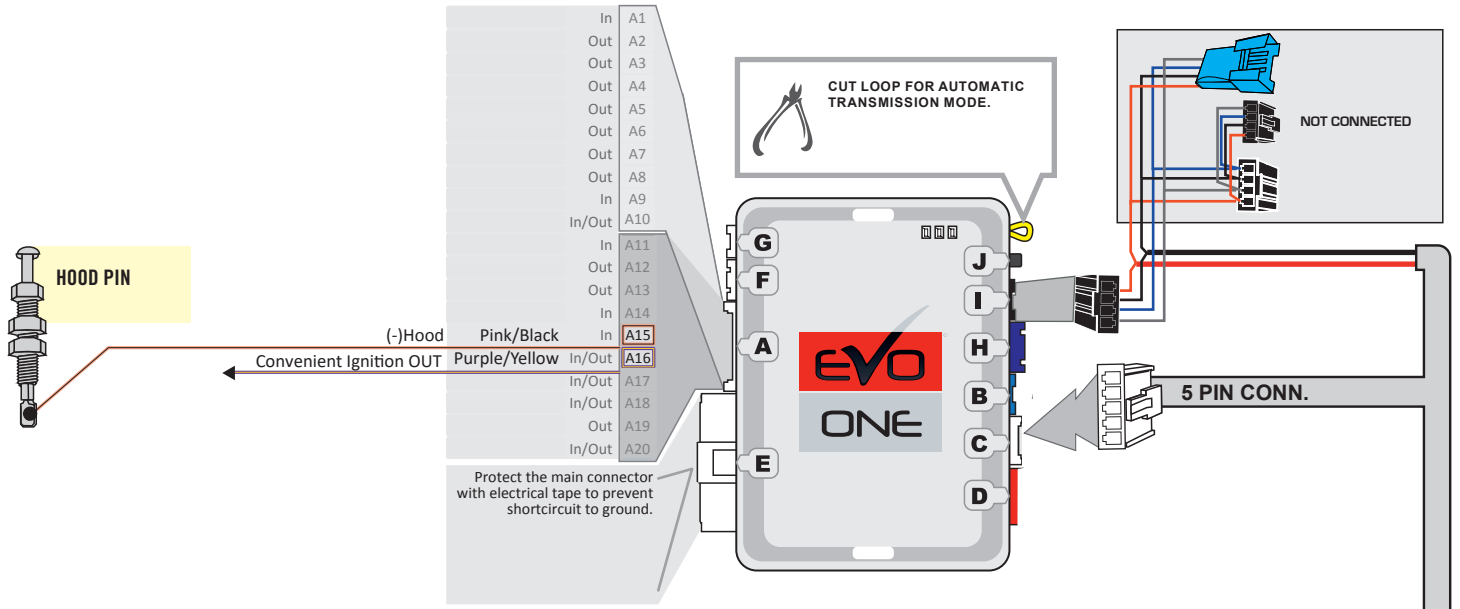


KEY BYPASS PROGRAMMING PROCEDURE 1/2 |

1

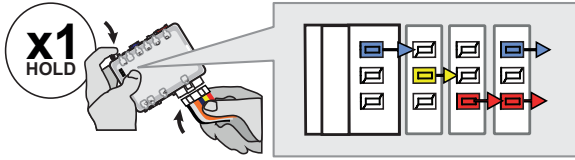

Press and hold the programming button:
Insert the 6-Pin Main connector.


WITH T-HARNESS

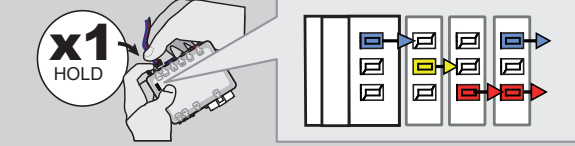

Press and hold the programming button:
Connect the 4-PIN Data-link harness (Black connector).


↳ The LEDs will alternate between BLUE, RED, YELLOW & BLUE/RED flashes.

2

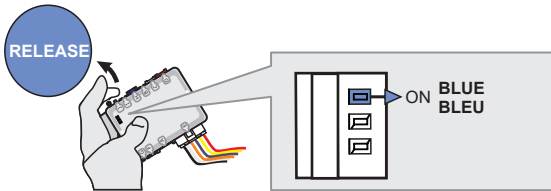


Release the programming button when the BLUE LED is ON.

 If the BLUE LED is not ON solid disconnect the 6-Pin Main connector and go back to step 1.




WITH T-HARNESS

 If the LED is not solid BLUE disconnect the 4 Pin connector (Data-Link) and go back to step 1.




3

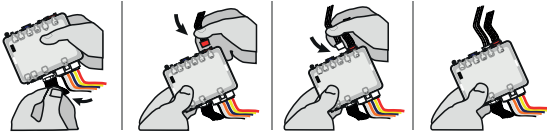

Insert the required remaining connectors.

4

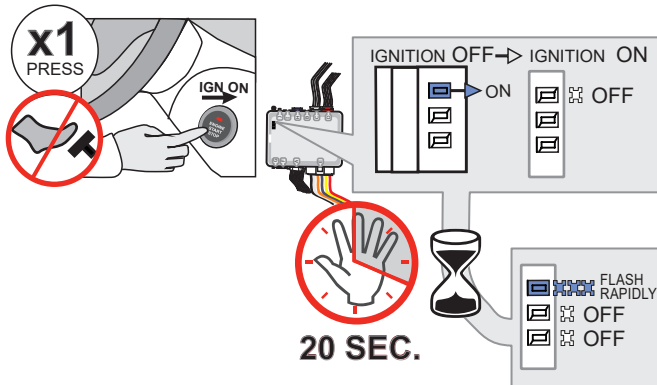


Do not press the brake pedal.
Press the Push-to-Start button once to turn on the ignition.

↳ The BLUE LED will turn OFF.

↳ The BLUE LED will flash rapidly.

5

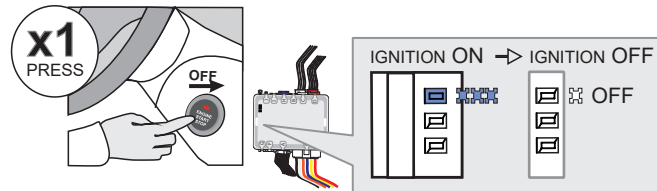


Press the Push-to-Start button once to turn off the ignition.

↳ The BLUE LED will turn off.


KEY BYPASS PROGRAMMING PROCEDURE 2/2 |

6

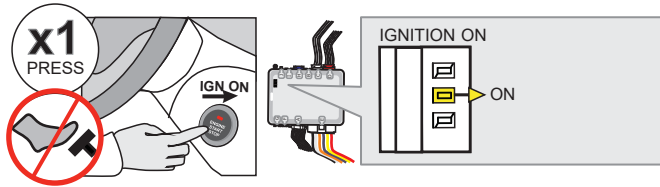


Do not press the brake pedal.
Press the Push-to-Start button once to turn on the ignition.
 ↳ The YELLOW LED will turn ON.

7

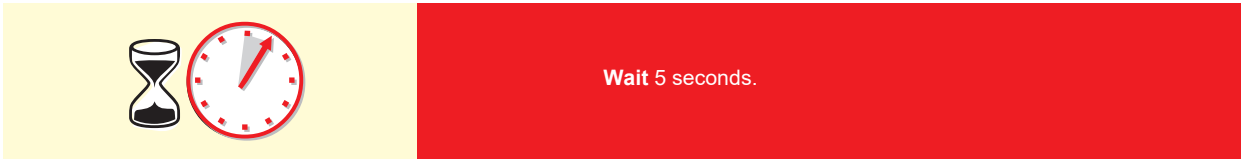

8

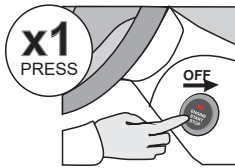

Press the Push-to-Start button once to turn off the ignition.




The module is now programmed.

REMOTE STARTER PROGRAMMING PROCEDURE |



REFER TO THE **QUICK INSTALL GUIDE** INCLUDED WITH THE MODULE FOR THE REMOTE STARTER PROGRAMMING.

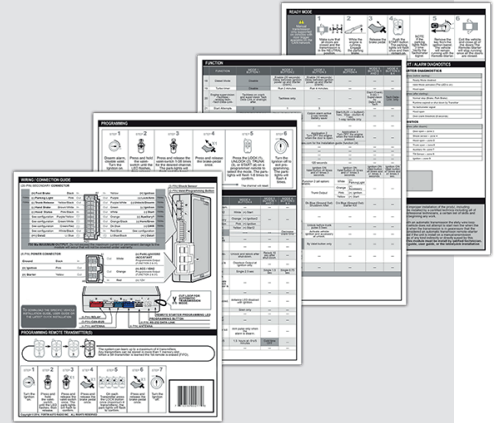

REMOTE STARTER FUNCTIONALITY | FONCTIONNALITÉS DU DÉMARREUR À DISTANCE



All doors must be closed.

 


Remote start the vehicle.



Unlock the doors with either:

- The OEM remote
- The remote-starter remote
- Or the proximity remote



Enter the vehicle with the SMART-KEY.



DO NOT PRESS THE BRAKE PEDAL.



Press the brake pedal. The vehicle can now be put in to gear and driven.
If the Smart-Key is not detected the vehicle will shut down.

THAR-FOR3 THARNESSE INSTALLATION

ADDENDUM - SUGGESTED WIRING CONFIGURATION


ONLY COMPATIBLE WITH AUTOMATIC TRANSMISSION VEHICLES.


Vehicle functions supported in this diagram (functional if equipped)

VEHICLE

YEARS

Immobilizer bypass	Lock	Unlock	Arm	Disarm	RAP Disable	Parking Lights	Horn	Tachometer	Heated seats	Heated Mirrors	Rear defrost	Door Status	Trunk Status	Hood Status*	Hand-Brake Status	Foot-Brake Status	Active OEM Remote Start	R.S. OEM remote Stand Alone compatible
--------------------	------	--------	-----	--------	-------------	----------------	------	------------	--------------	----------------	--------------	-------------	--------------	--------------	-------------------	-------------------	-------------------------	--

FORD

Edge	Push-to-Start	2015-2019	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
------	---------------	-----------	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

LINCOLN

MKX	Push-to-Start	2017	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
-----	---------------	------	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---


BYPASS FIRMWARE VERSION
4.[01]

MINIMUM

 To add the firmware version and the options, use the **FLASH LINK UPDATER** or **FLASH LINK MOBILE** tool, sold separately.

Program bypass option:
UNIT OPTION
DESCRIPTION
C1

OEM Remote status (Lock/Unlock) monitoring

IF THE VEHICLE IS NOT EQUIPPED WITH FUNCTIONAL HOOD PIN:
A11
OFF

Hood trigger (Output Status).


Program remote starter option for R.S. OEM REMOTE STAND ALONE:
FUNCTION
MODE
DESCRIPTION
38
2

 Enable
Press 3x Lock to remote start with the OEM remote.

Parts required (Not included)

1x THAR-FOR3

MANDATORY INSTALL
*** HOOD PIN**

HOOD STATUS: THE HOOD PIN SWITCH (INCLUDED) MUST BE INSTALLED IF THE VEHICLE CAN BE REMOTE STARTED WITH THE HOOD OPEN, SET FUNCTION A11 TO OFF.

A11
OFF
SECURITY STICKER


Included

Notice: the installation of safety elements are mandatory. The hood pin and the sticker are essential security elements and must be installed.



THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.

DESCRIPTION




② Parking Lights switch

① Gateway module, located at right of steering column.

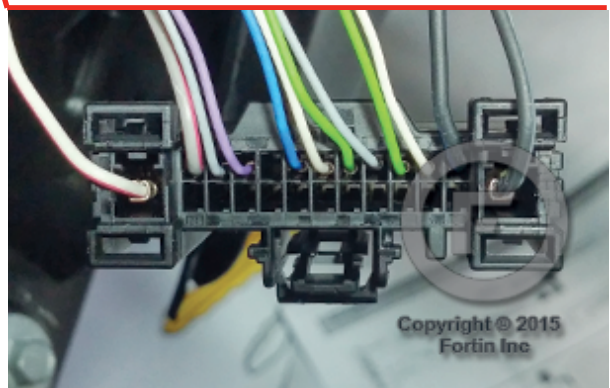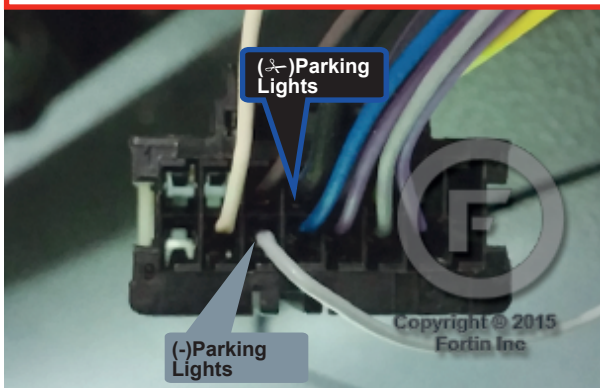


AUTOMATIC TRANSMISSION WIRING CONNECTION

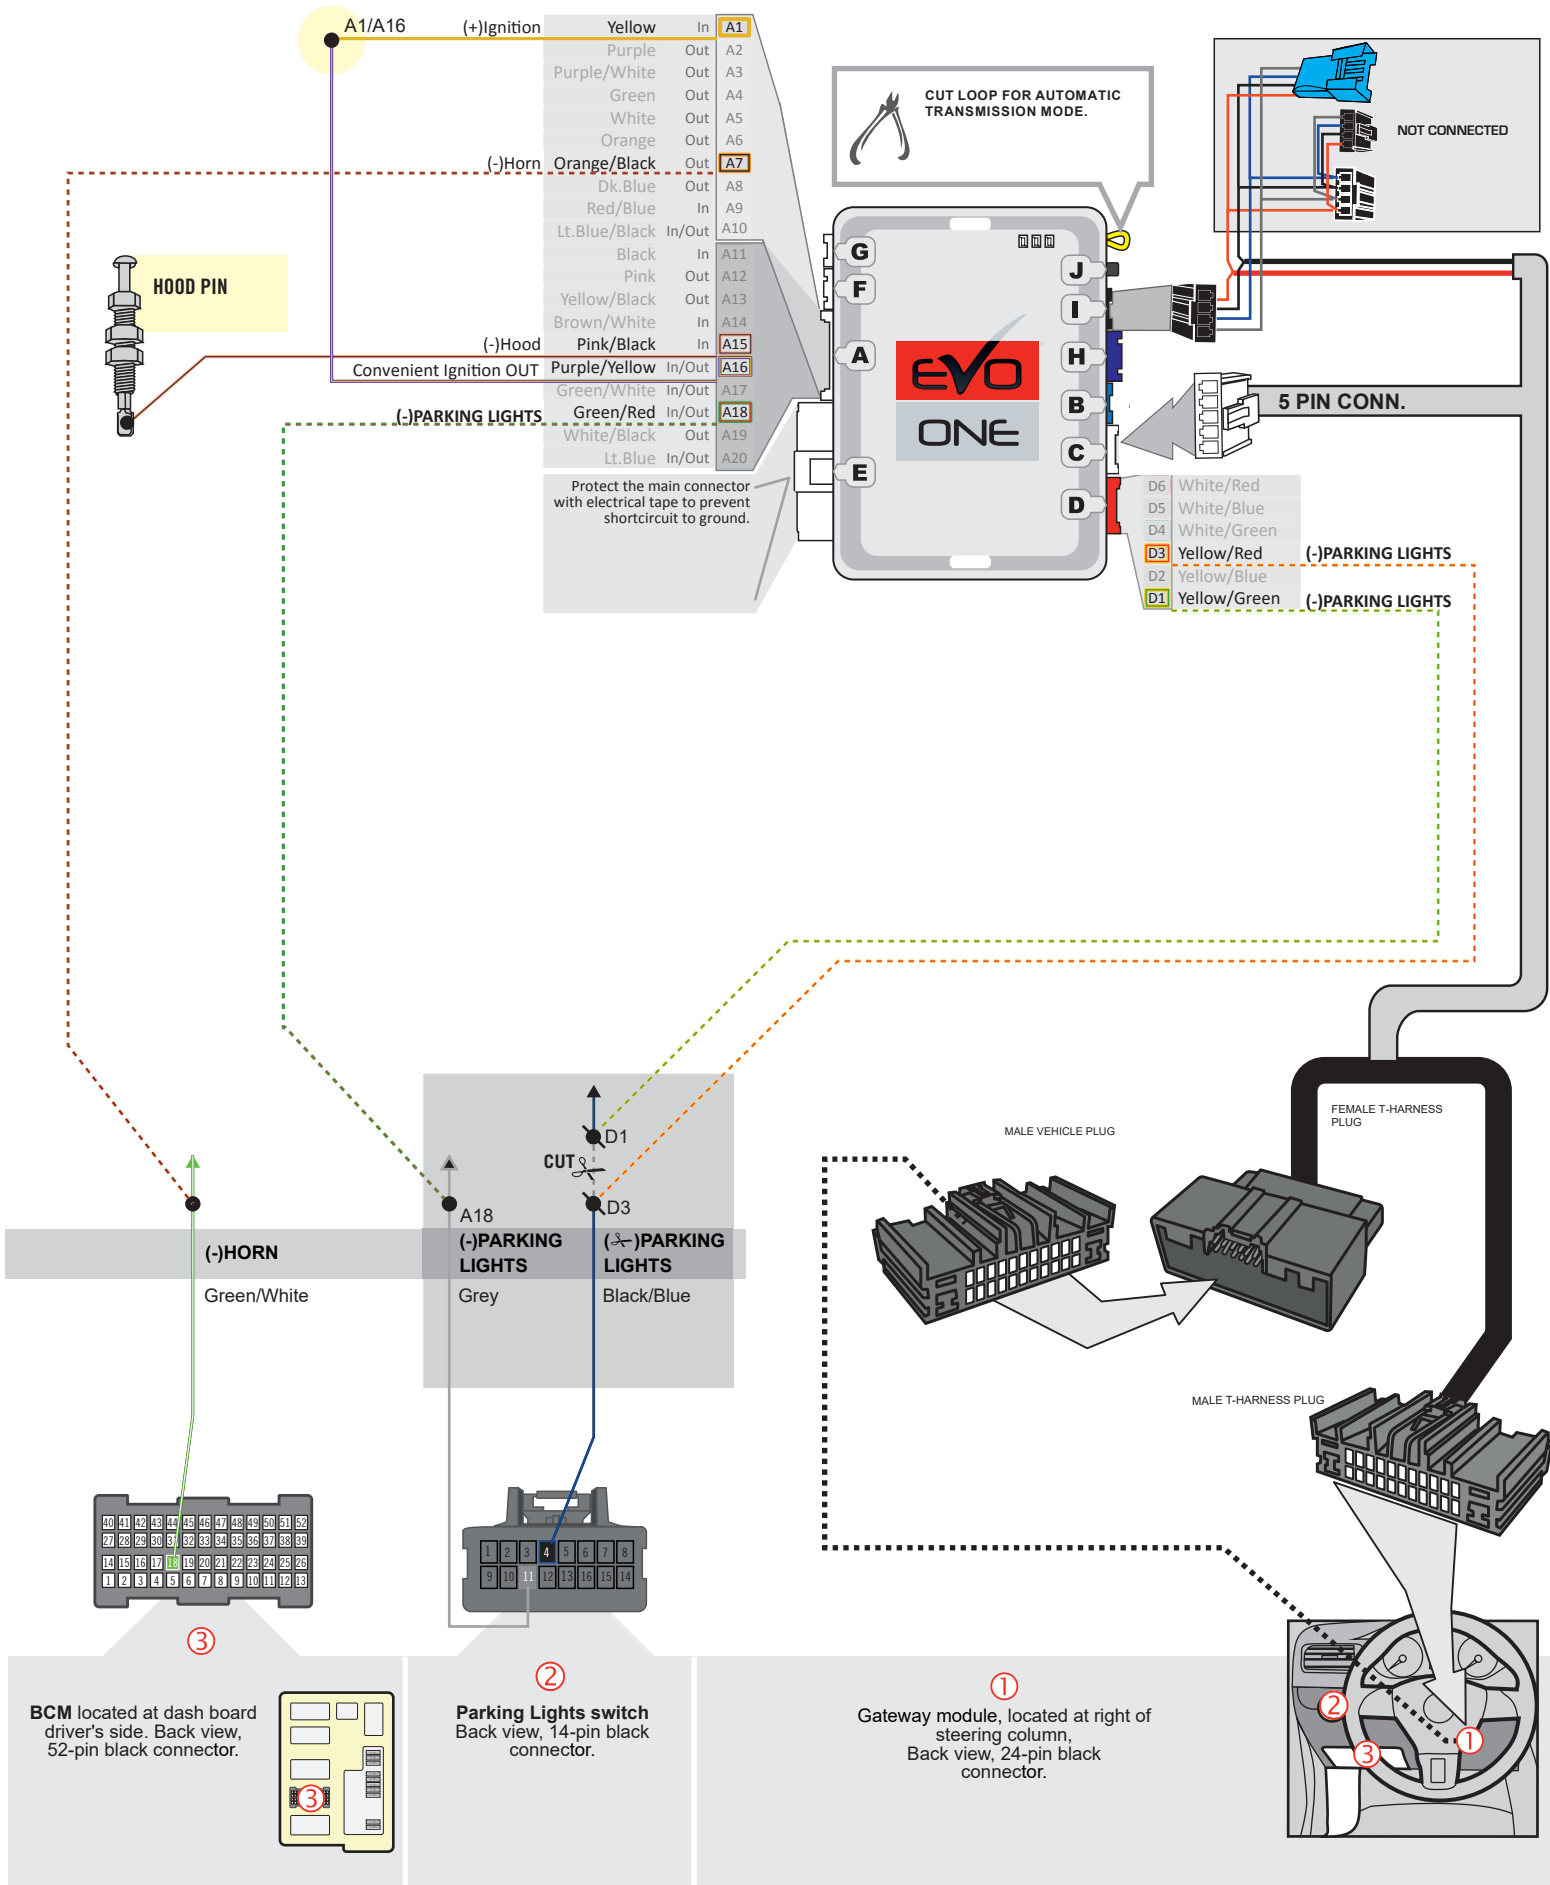


KEY BYPASS PROGRAMMING PROCEDURE 1/2

1

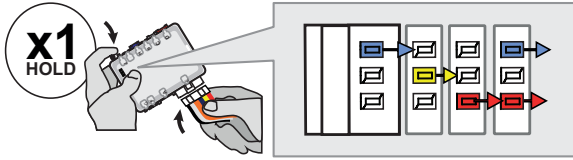

Press and hold the programming button:
Insert the 6-Pin Main connector.


WITH T-HARNESS

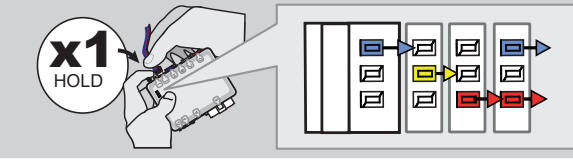

Press and hold the programming button:
Connect the 4-PIN Data-link harness (Black connector).


↳ The LEDs will alternate between BLUE, RED, YELLOW & BLUE/RED flashes.

2

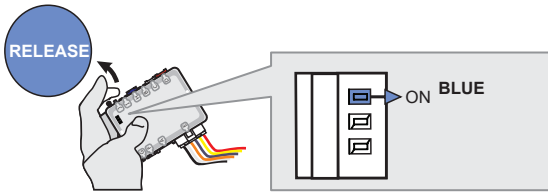


Release the programming button when the BLUE LED is ON.

 If the BLUE LED is not ON solid disconnect the 6-Pin Main connector and go back to step 1.




WITH T-HARNESS

 If the LED is not solid BLUE disconnect the 4 Pin connector (Data-Link) and go back to step 1.




3

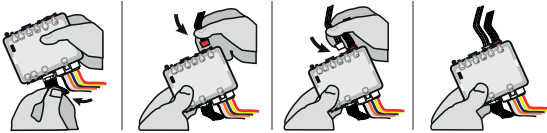

Insert the required remaining connectors.


4

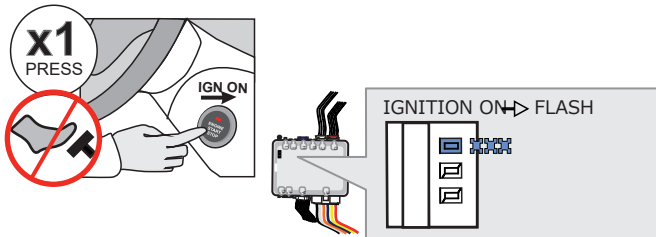

Do not press the brake pedal.
Press the Push-to-Start button once to turn on the ignition.

↳ The BLUE LED will flash rapidly.
Key bypass programmed.


5

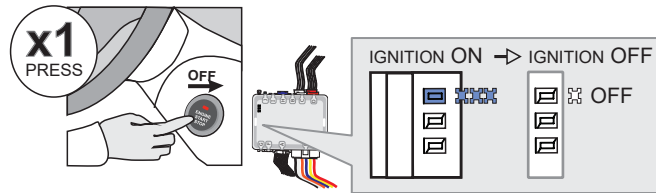

Press the Push-to-Start button once to turn off the ignition.

↳ The BLUE LED will turn off.

6

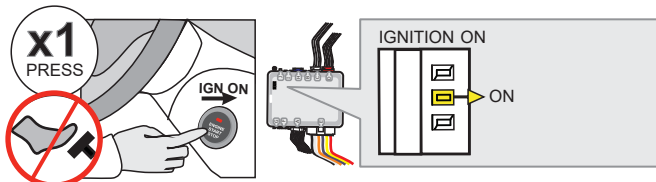

Do not press the brake pedal.
Press the Push-to-Start button once to turn on the ignition.

↳ The YELLOW LED will turn ON.


KEY BYPASS PROGRAMMING PROCEDURE 2/2

7



Wait 5 seconds.

8

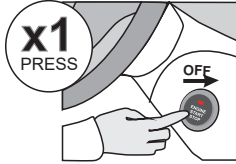

Press the Push-to-Start button once to turn off the ignition.




The module is now programmed.

REMOTE STARTER PROGRAMMING PROCEDURE



REFER TO THE **QUICK INSTALL GUIDE** INCLUDED WITH THE MODULE FOR THE REMOTE STARTER PROGRAMMING.

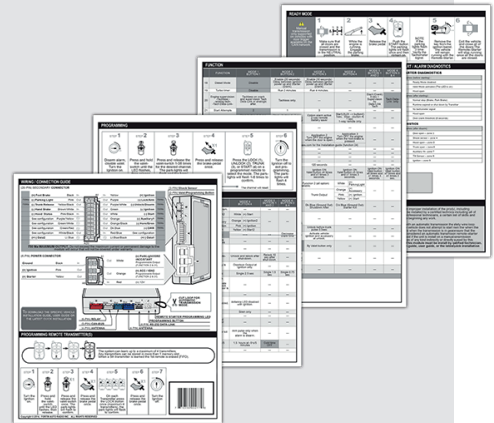

REMOTE STARTER FUNCTIONALITY



All doors must be closed.

 


Remote start the vehicle.



Unlock the doors with either:

- The OEM remote
- The remote-starter remote
- Or the proximity remote



Enter the vehicle with the SMART-KEY.



DO NOT PRESS THE BRAKE PEDAL.

Press and release the Push-to-Start button once.



Press the brake pedal. The vehicle can now be put in to gear and driven.



If the Smart-Key is not detected the vehicle will shut down.

DESCRIPTION |




② Parking Lights switch

① Gateway module, located at right of steering column.

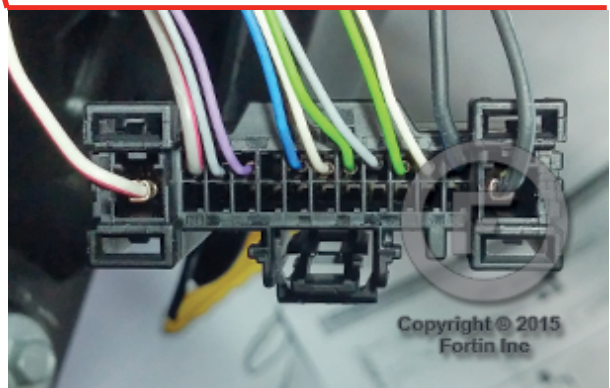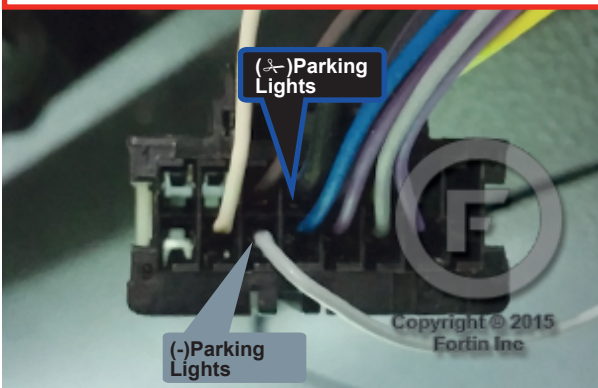


AUTOMATIC TRANSMISSION WIRING CONNECTION |

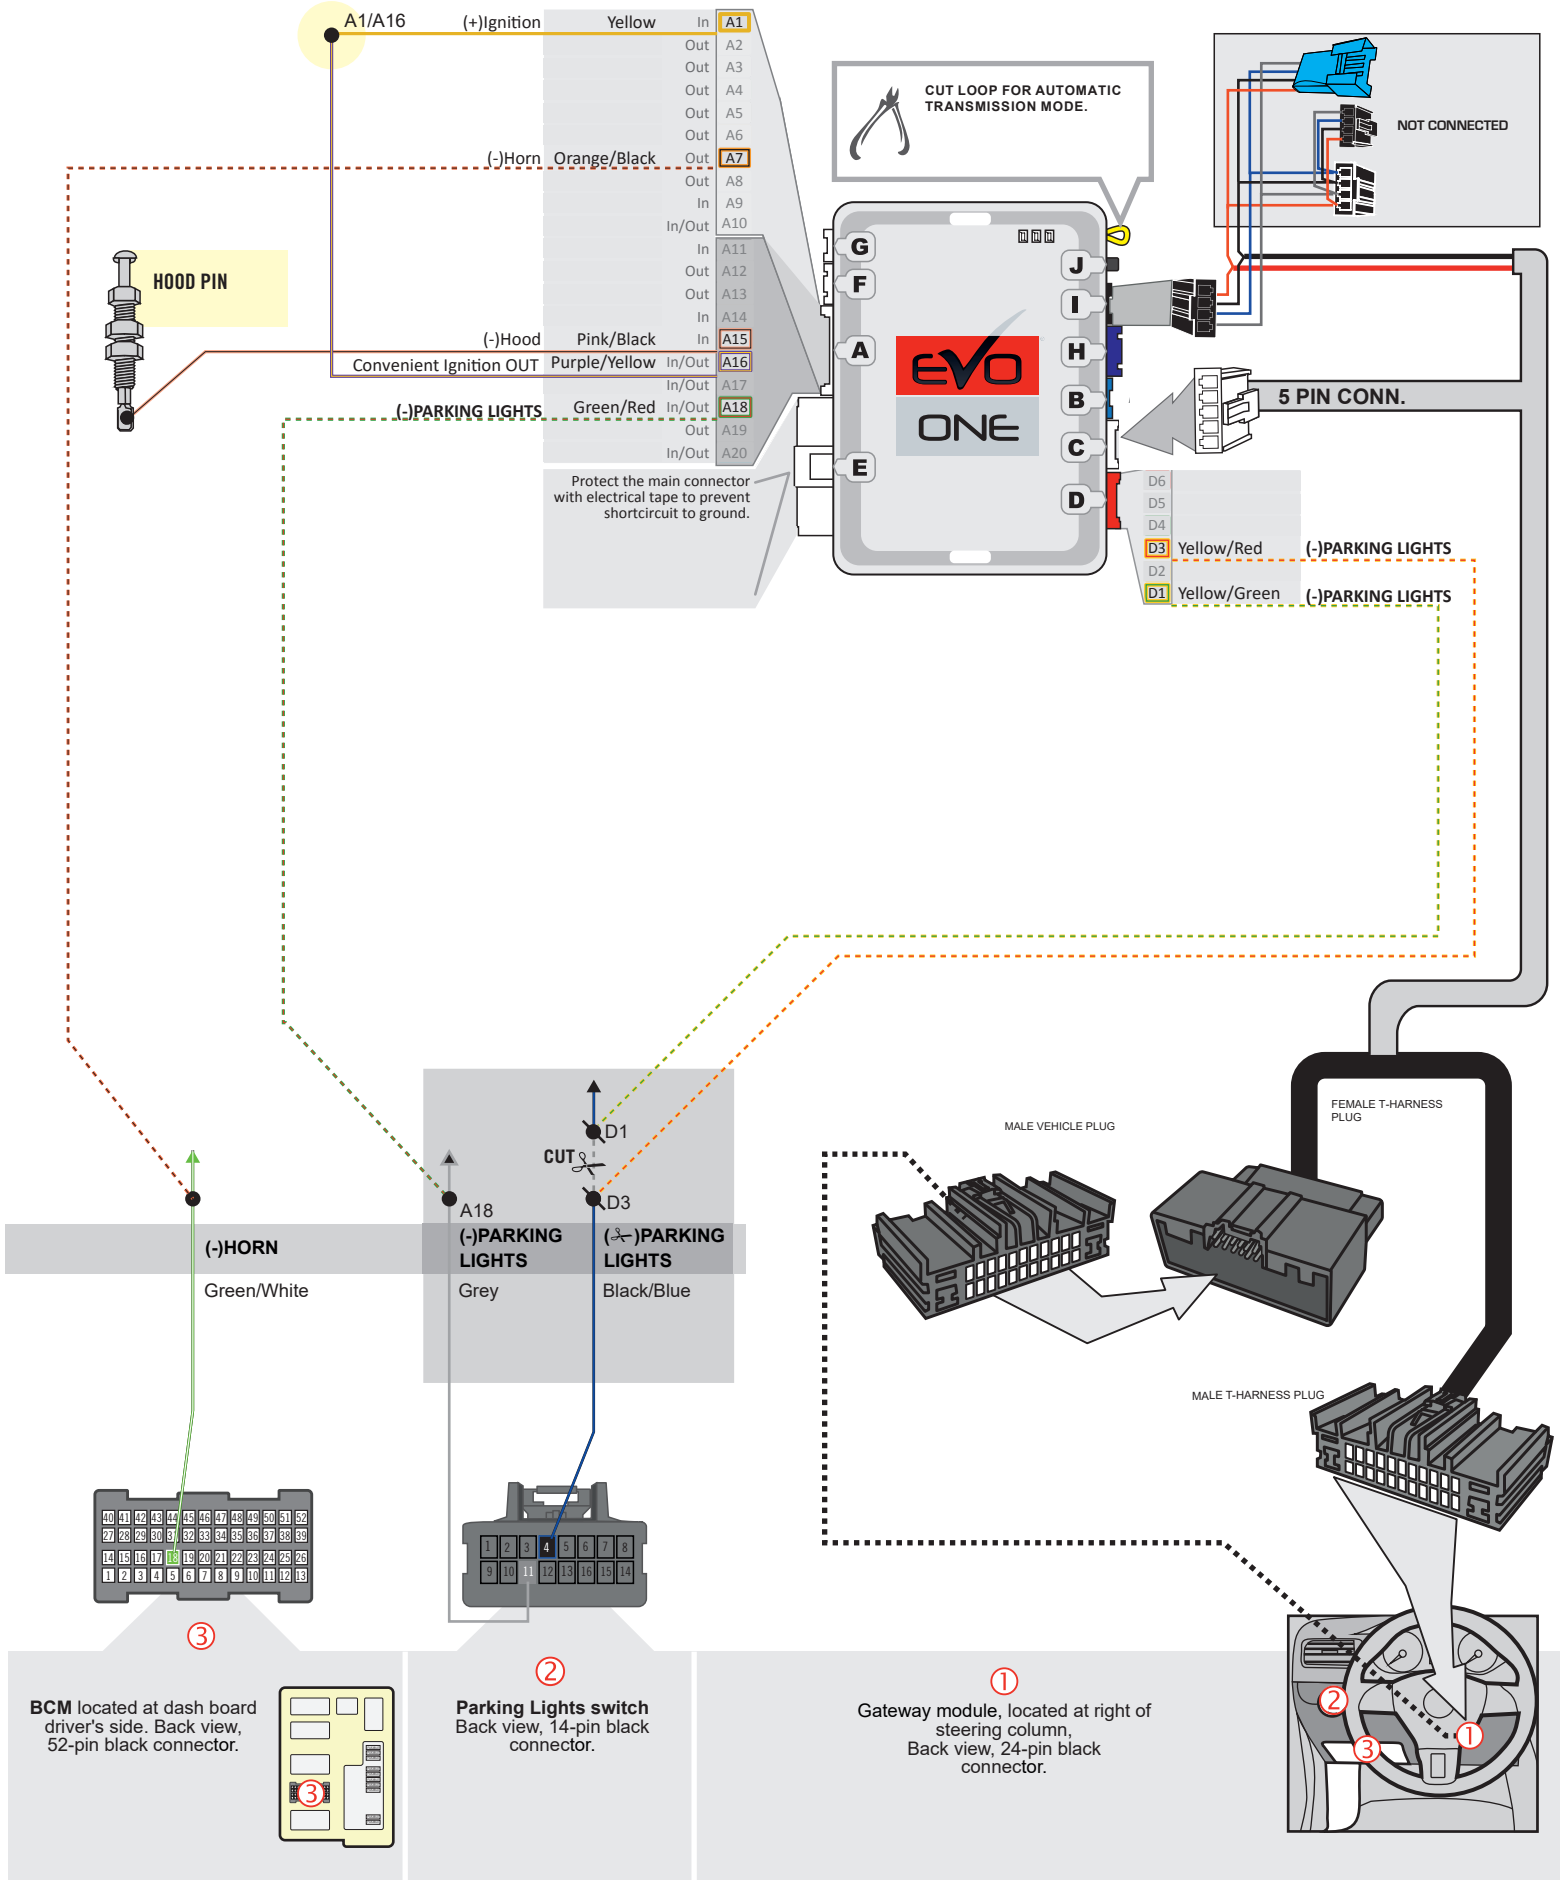


KEY BYPASS PROGRAMMING PROCEDURE 1/2 |

1

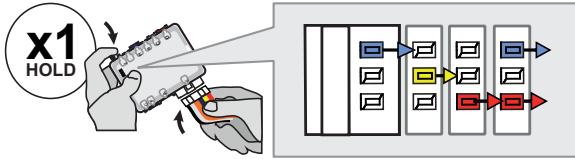

Press and hold the programming button:
Insert the 6-Pin Main connector.


WITH T-HARNESS

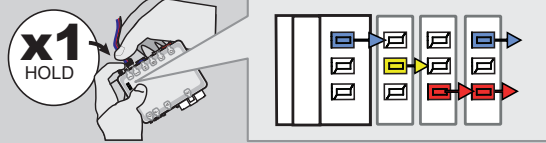

Press and hold the programming button:
Connect the 4-PIN Data-link harness (Black connector).


↳ The LEDs will alternate between BLUE, RED, YELLOW & BLUE/RED flashes.

2

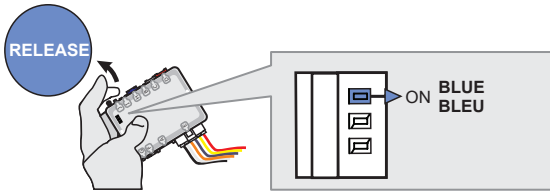


Release the programming button when the BLUE LED is ON.

 If the BLUE LED is not ON solid disconnect the 6-Pin Main connector and go back to step 1.




WITH T-HARNESS

 If the LED is not solid BLUE disconnect the 4 Pin connector (Data-Link) and go back to step 1.




3

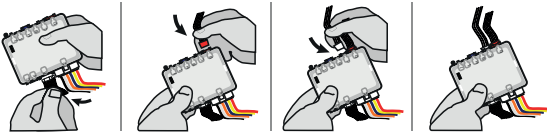

Insert the required remaining connectors.


4

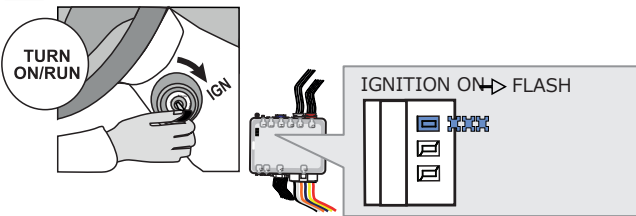

Turn the key to the Ignition ON/RUN position.

↳ The BLUE LED will flash rapidly.
Key bypass programmed.


5

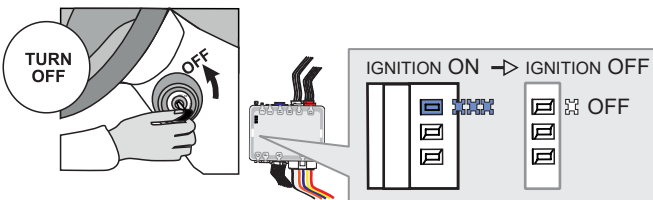

Turn the key to the OFF position.

↳ The BLUE LED will turn off.

6

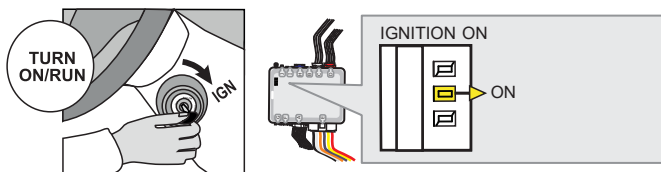

Turn the key to the Ignition ON/RUN position.

↳ The YELLOW LED will turn ON.


KEY BYPASS PROGRAMMING PROCEDURE 1/2 |

7



Wait 5 seconds.

8

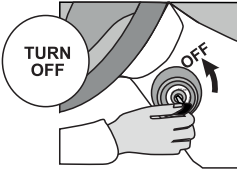

Turn the key to the OFF position.




The module is now programmed.

REMOTE STARTER PROGRAMMING PROCEDURE |



REFER TO THE **QUICK INSTALL GUIDE** INCLUDED WITH THE MODULE FOR THE REMOTE STARTER PROGRAMMING.

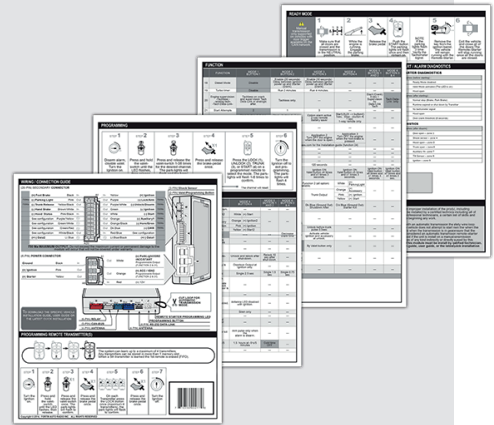

REMOTE STARTER FUNCTIONALITY |



All doors must be closed.



Remote start the vehicle.



Unlock the doors with the remote-starter remote or the OEM remote.



Insert and Turn the key to the Ignition ON/RUN position.



Press the brake pedal.



The vehicle can now be put in to gear and driven.

THAR-FOR3 THARNESSE INSTALLATION

ADDENDUM - SUGGESTED WIRING CONFIGURATION


ONLY COMPATIBLE WITH AUTOMATIC TRANSMISSION VEHICLES.


Vehicle functions supported in this diagram (functional if equipped)

VEHICLE	YEARS	Immobilizer bypass	Lock	Unlock	Arrn	Disarm	RAP Disable	Horn	Parking Lights	Tachometer	Heated seats	Heated Mirrors	Rear defrost	Door Status	Trunk Status	Hood Status*	Hand-Brake Status	Foot-Brake Status	Active OEM Remote Start	R.S. OEM remote Stand Alone compatible	
FORD																					
Explorer	Key 2016-2019	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•

BYPASS FIRMWARE VERSION

4.[01]

MINIMUM

To add the firmware version and the options, use the **FLASH LINK UPDATER** or **FLASH LINK MOBILE** tool, sold separately.

	Program bypass option:	UNIT OPTION	DESCRIPTION
		C1	OEM Remote status (Lock/Unlock) monitoring
	IF THE VEHICLE IS NOT EQUIPPED WITH FUNCTIONAL HOOD PIN:	A11	OFF
			Hood trigger (Output Status).

	Program remote starter option for R.S. OEM REMOTE STAND ALONE:	FUNCTION	MODE	DESCRIPTION
		38	2	Enable Press 3x Lock to remote start with the OEM remote.



Parts required (Not included)
1x THAR-FOR3

NOTES



The vehicle must be equipped with the OEM remote with the door locks.

MANDATORY INSTALL

* HOOD PIN



HOOD STATUS: THE HOOD PIN SWITCH (INCLUDED) MUST BE INSTALLED IF THE VEHICLE CAN BE REMOTE STARTED WITH THE HOOD OPEN, SET FUNCTION A11 TO OFF.

A11

OFF

SECURITY STICKER




Included

Notice: the installation of safety elements are mandatory. The hood pin and the sticker are essential security elements and must be installed.




THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.

DESCRIPTION |


② Parking Lights switch

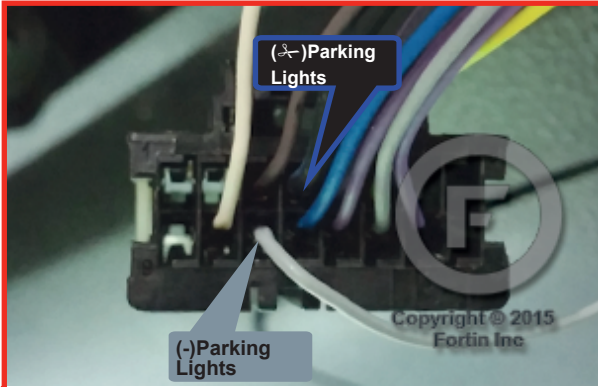

③ Fuse box

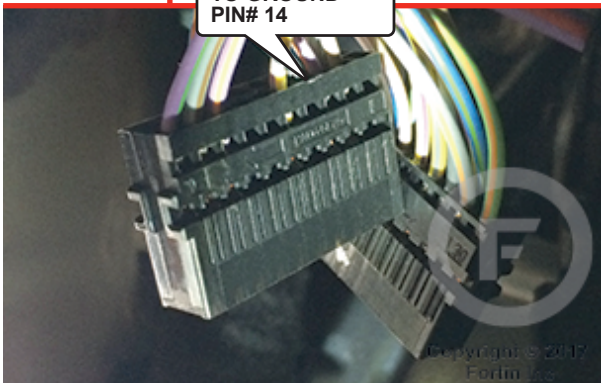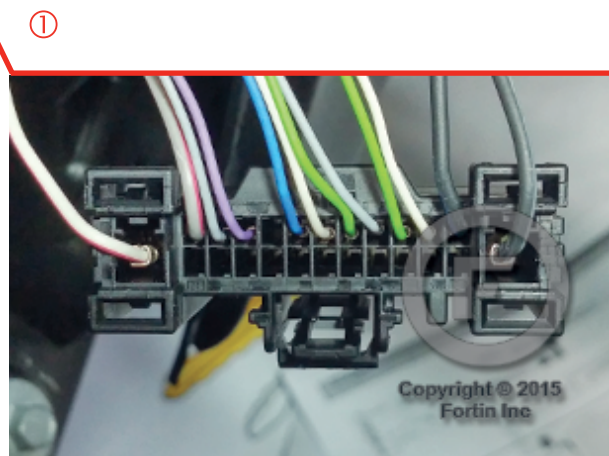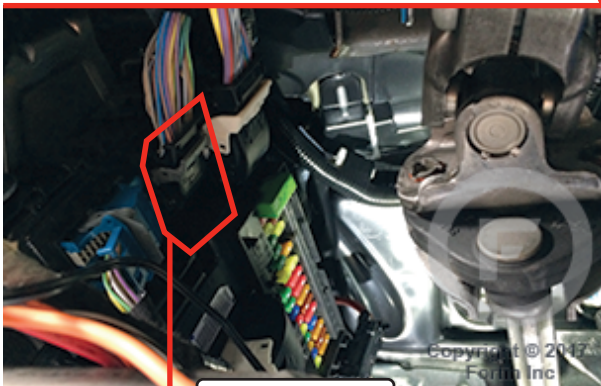


AUTOMATIC TRANSMISSION WIRING CONNECTION |

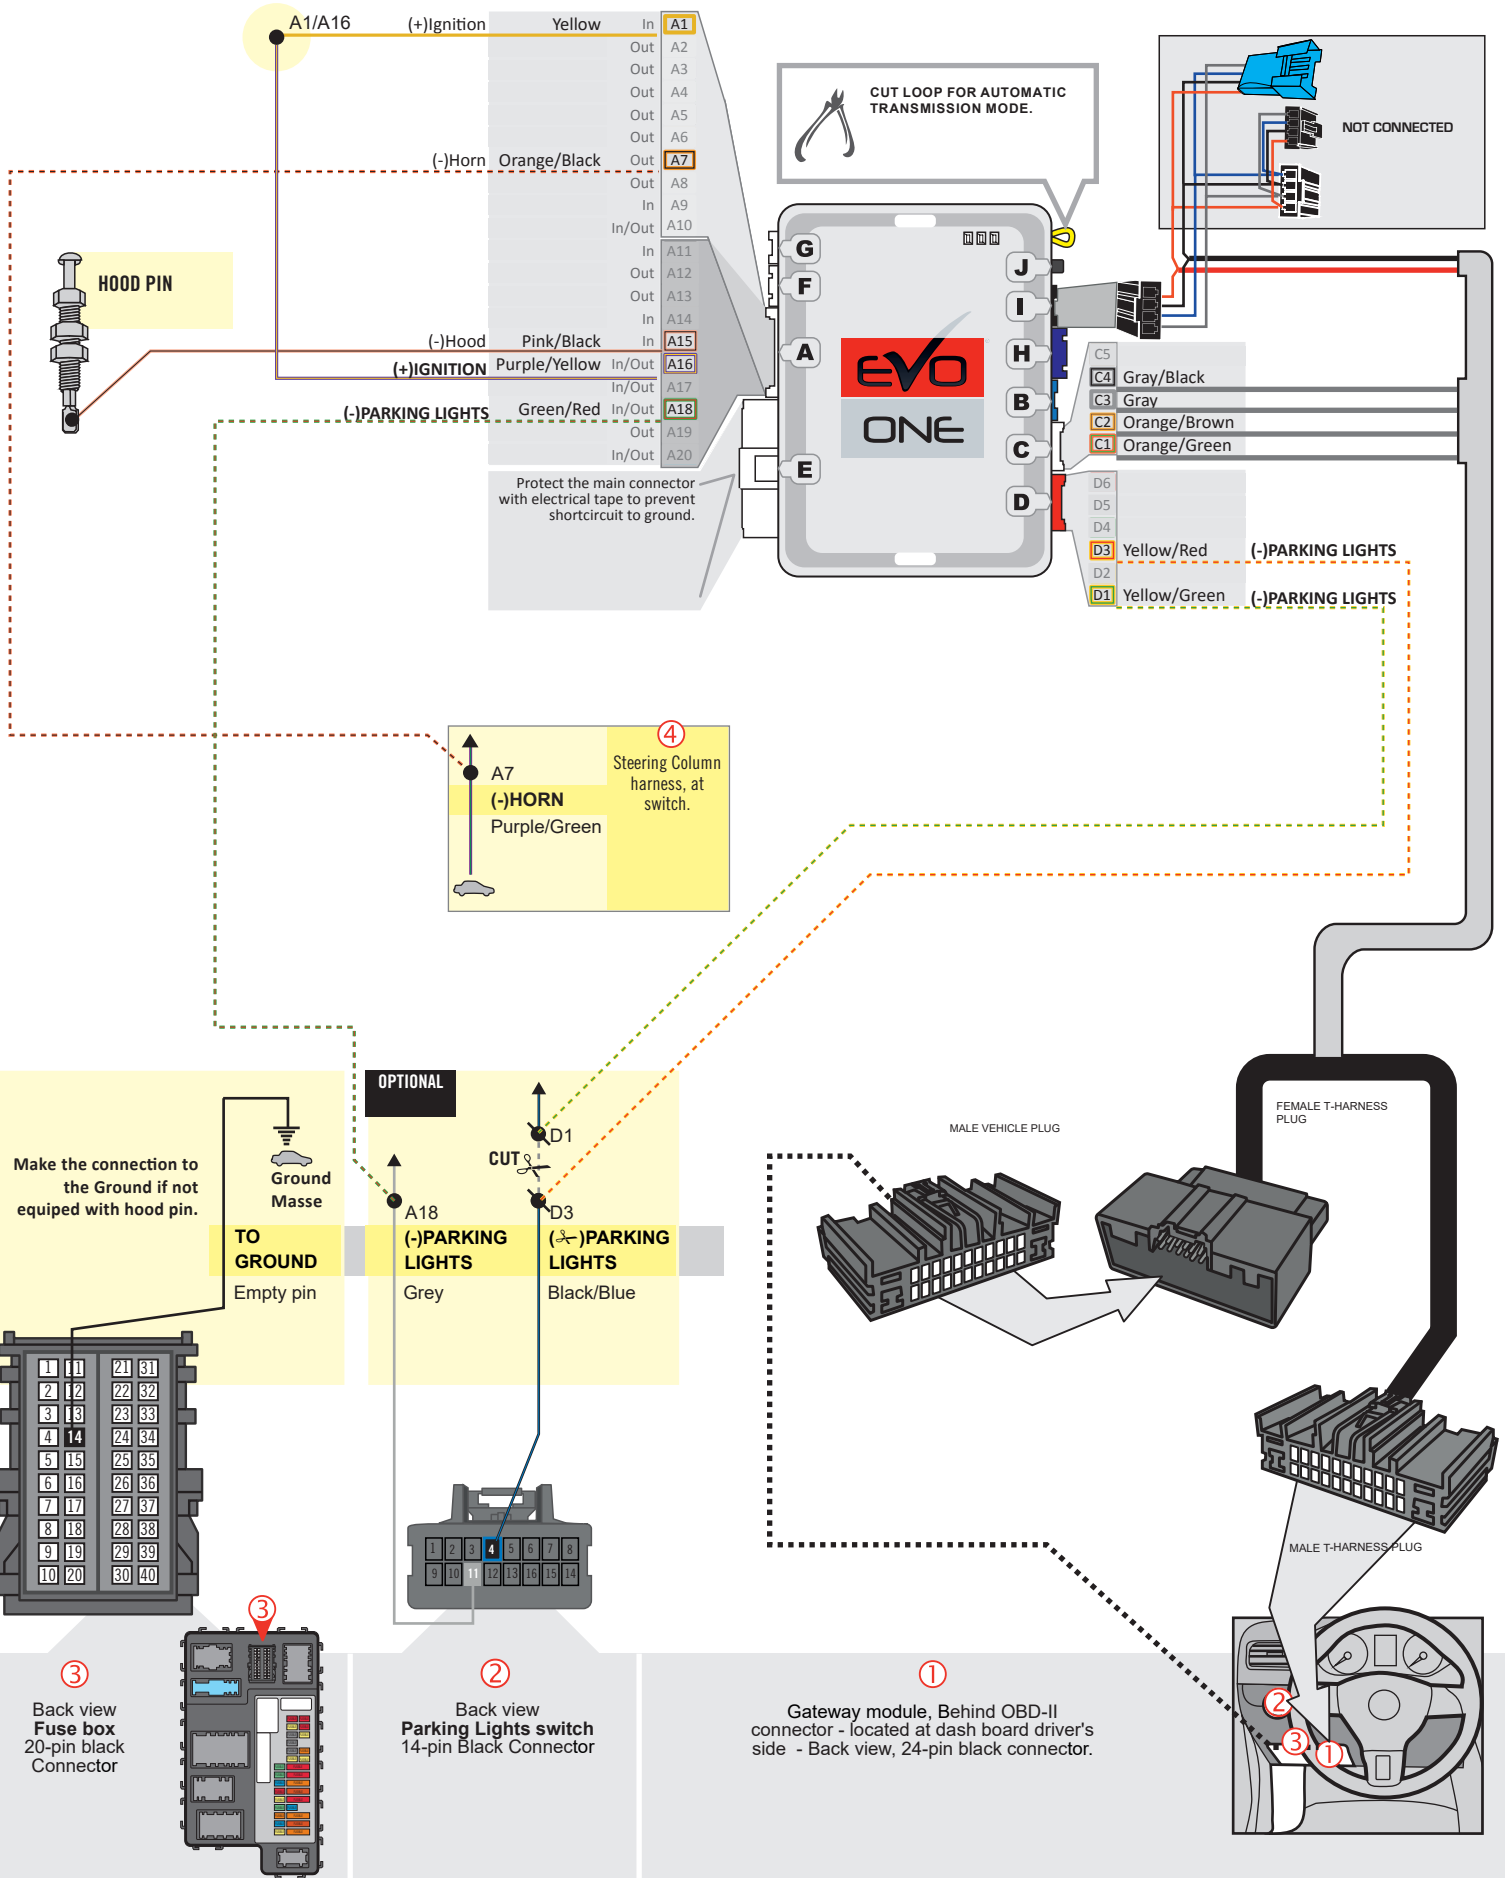


KEY BYPASS PROGRAMMING PROCEDURE 1/2 |

1

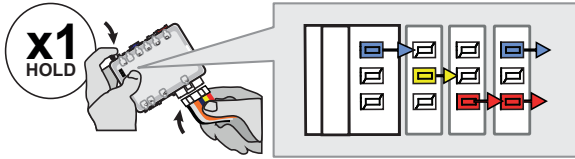

Press and hold the programming button:
Insert the 6-Pin Main connector.


WITH T-HARNESS

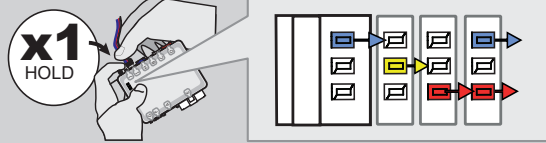

Press and hold the programming button:
Connect the 4-PIN Data-link harness (Black connector).


↳ The LEDs will alternate between BLUE, RED, YELLOW & BLUE/RED flashes.

2

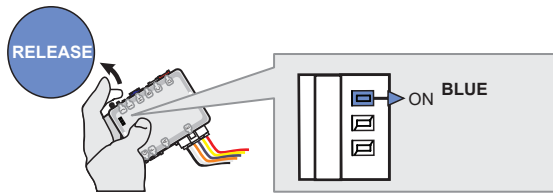


Release the programming button when the BLUE LED is ON.

 If the BLUE LED is not ON solid disconnect the 6-Pin Main connector and go back to step 1.




WITH T-HARNESS

 If the LED is not solid BLUE disconnect the 4 Pin connector (Data-Link) and go back to step 1.




3

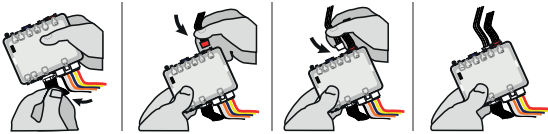

Insert the required remaining connectors.


4

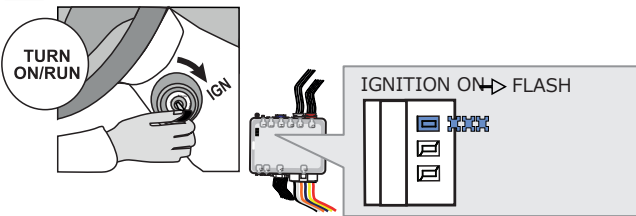

Turn the key to the Ignition ON/RUN position.

↳ The BLUE LED will flash rapidly.
Key bypass programmed.


5

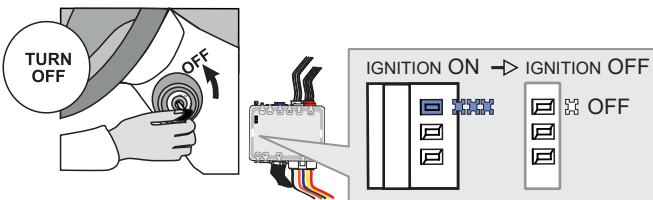

Turn the key to the OFF position.

↳ The BLUE LED will turn off.

6

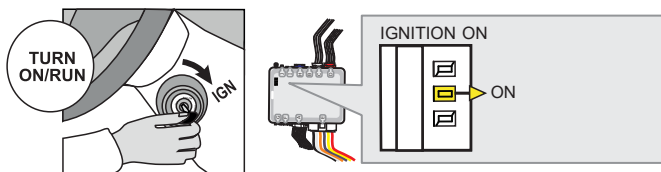

Turn the key to the Ignition ON/RUN position.

↳ The YELLOW LED will turn ON.


KEY BYPASS PROGRAMMING PROCEDURE 1/2 |

7



Wait 5 seconds.

8

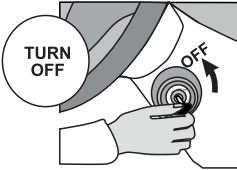

Turn the key to the OFF position.




The module is now programmed.

REMOTE STARTER PROGRAMMING PROCEDURE |



REFER TO THE **QUICK INSTALL GUIDE** INCLUDED WITH THE MODULE FOR THE REMOTE STARTER PROGRAMMING.

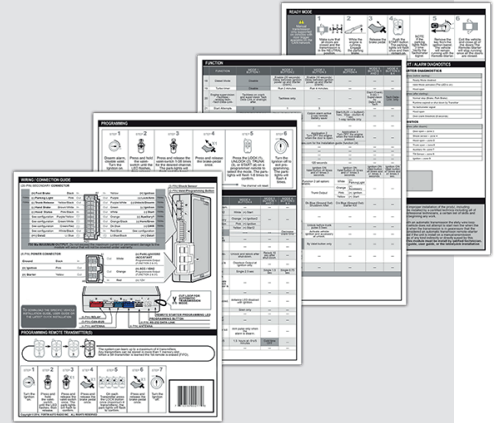

REMOTE STARTER FUNCTIONALITY |



All doors must be closed.



Remote start the vehicle.



Unlock the doors with the remote-starter remote or the OEM remote.



Insert and Turn the key to the Ignition ON/RUN position.



Press the brake pedal.



The vehicle can now be put in to gear and driven.

THAR-FOR3 THARNESSE INSTALLATION

ADDENDUM - SUGGESTED WIRING CONFIGURATION


ONLY COMPATIBLE WITH AUTOMATIC TRANSMISSION VEHICLES.

VEHICLE
YEARS

Vehicle functions supported in this diagram (functional if equipped)

FORD

Explorer

Push-to-Start 2016-2019

Immobilizer bypass	Lock	Unlock	Arm	Disarm	RAP Disable	Tachometer	Heated seats	Heated Mirrors	Rear defrost	Door Status	Trunk Status	Hood Status*	Hand-Brake Status	Foot-Brake Status	Active OEM Remote Start	R.S. OEM remote Stand Alone compatible
•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•


BYPASS FIRMWARE VERSION
4.[01]

MINIMUM

 To add the firmware version and the options, use the **FLASH LINK UPDATER** or **FLASH LINK MOBILE** tool, sold separately.

Program bypass option:
UNIT OPTION
DESCRIPTION
C1

OEM Remote status (Lock/Unlock) monitoring

IF THE VEHICLE IS NOT EQUIPPED WITH FUNCTIONAL HOOD PIN:
A11
OFF

Hood trigger (Output Status).


Program remote starter option for R.S. OEM REMOTE STAND ALONE:
FUNCTION
MODE
DESCRIPTION
38
2

 Enable
Press 3x Lock to remote start with the OEM remote.

Parts required (Not included)

1x THAR-FOR3

MANDATORY INSTALL
*** HOOD PIN**

HOOD STATUS: THE HOOD PIN SWITCH (INCLUDED) MUST BE INSTALLED IF THE VEHICLE CAN BE REMOTE STARTED WITH THE HOOD OPEN, SET FUNCTION A11 TO OFF.

A11
OFF
SECURITY STICKER



Included

Notice: the installation of safety elements are mandatory. The hood pin and the sticker are essential security elements and must be installed.


THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.

DESCRIPTION


① Gateway module left side of dash

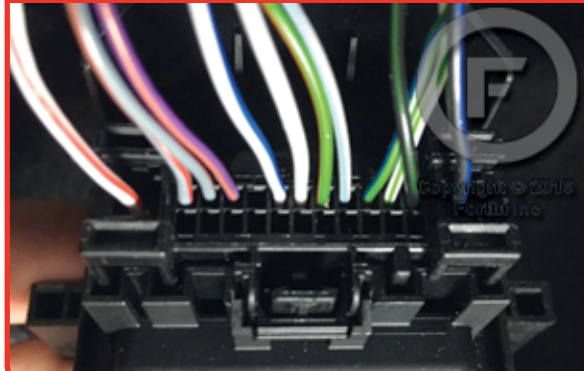

② Parking Lights switch

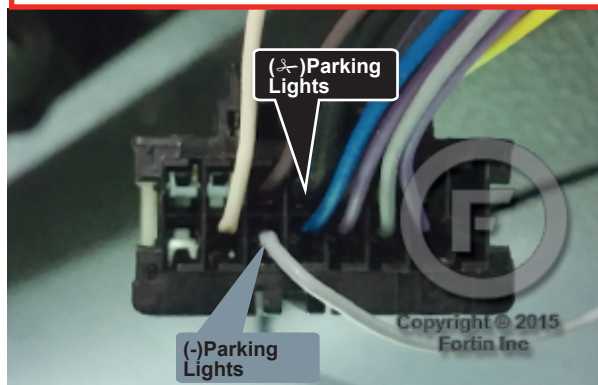


AUTOMATIC TRANSMISSION WIRING CONNECTION

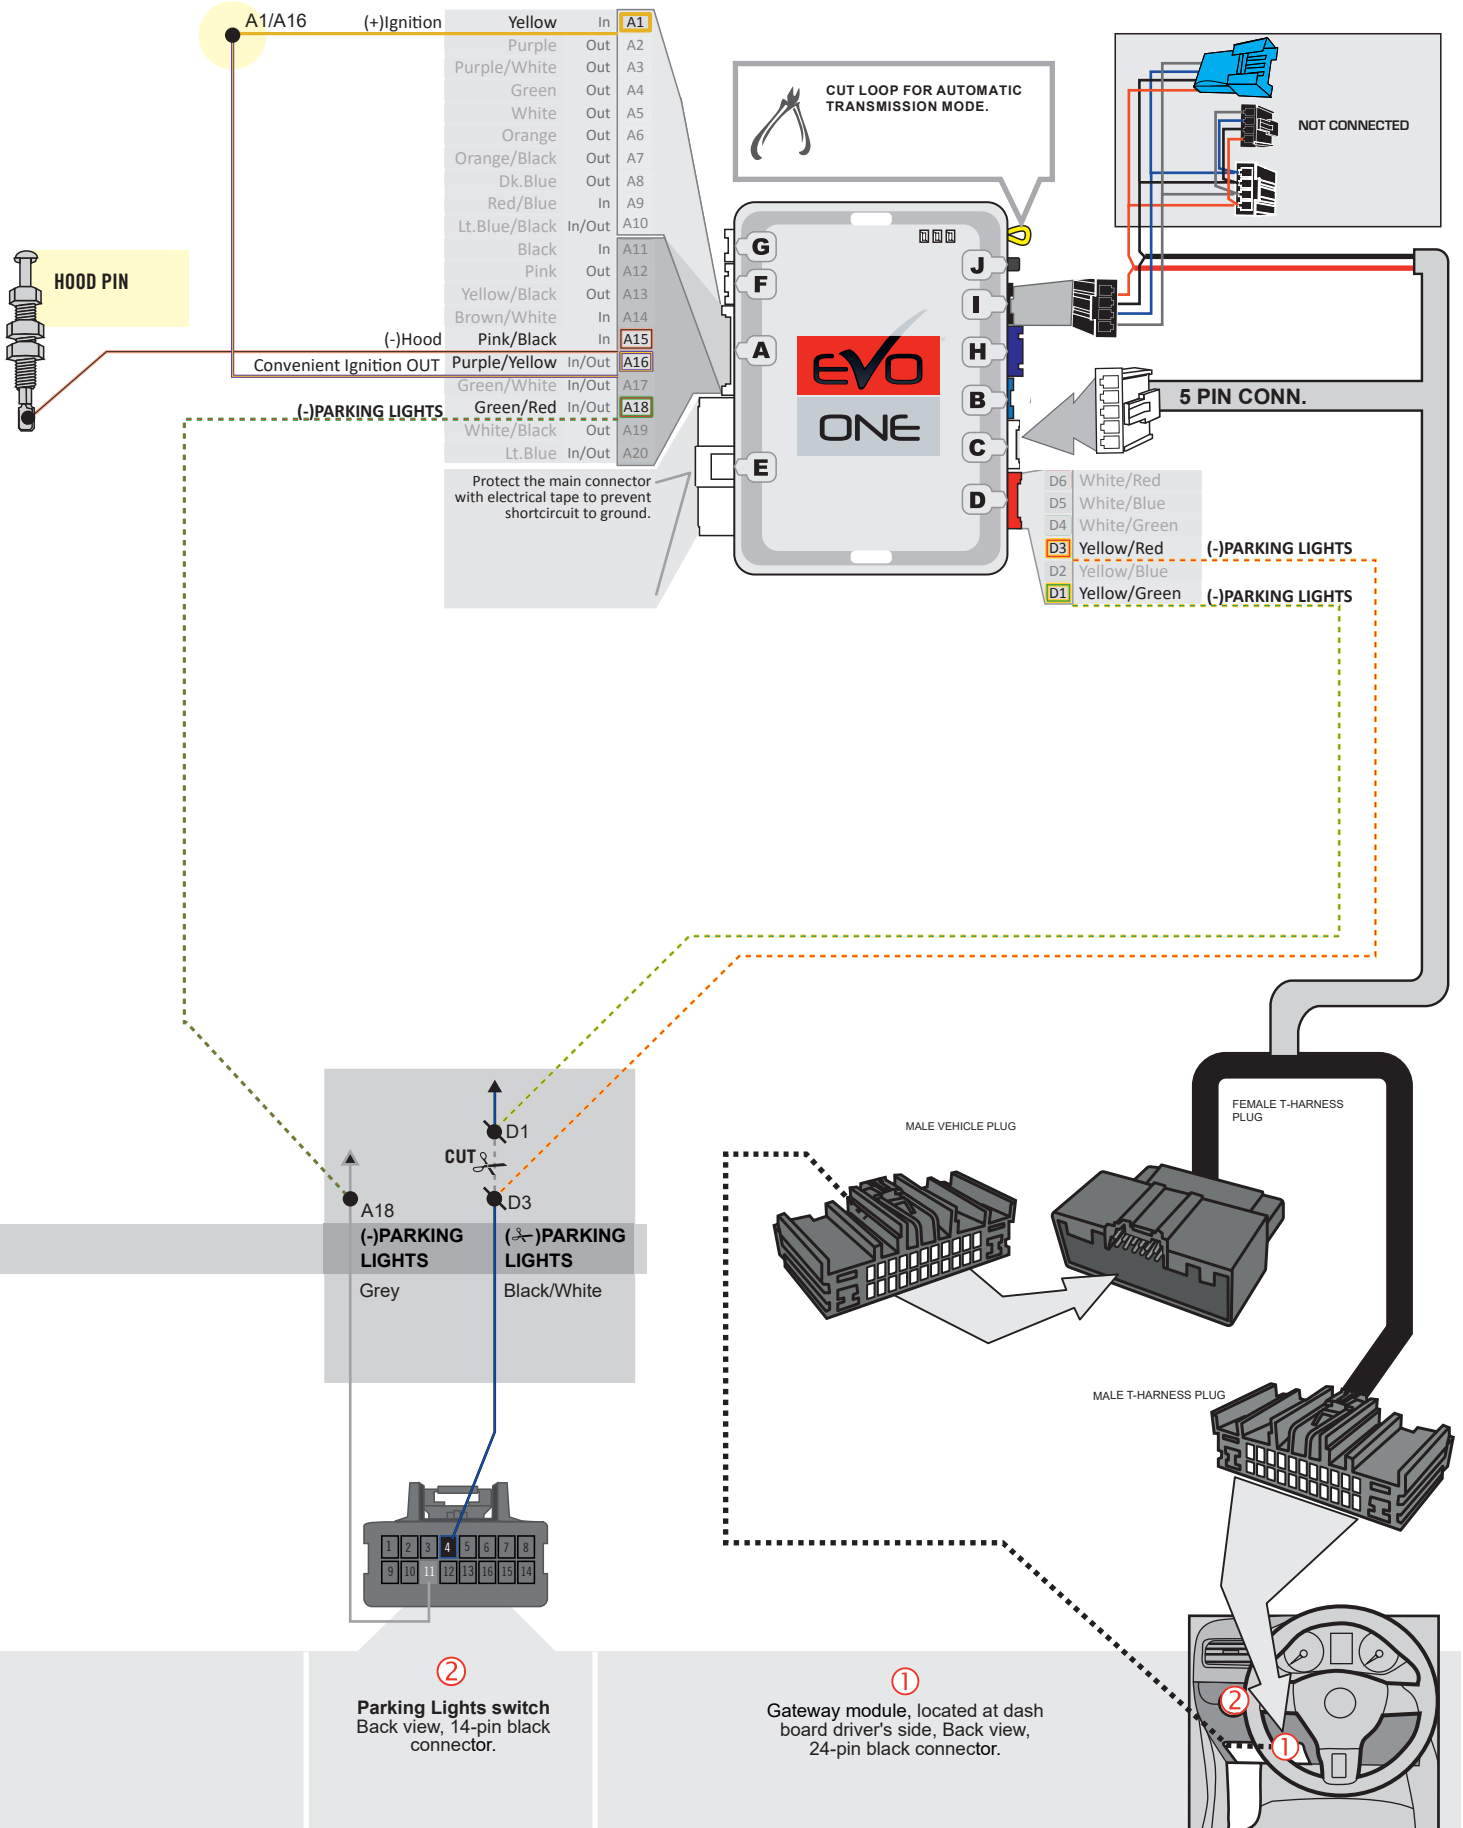


KEY BYPASS PROGRAMMING PROCEDURE 1/2

1

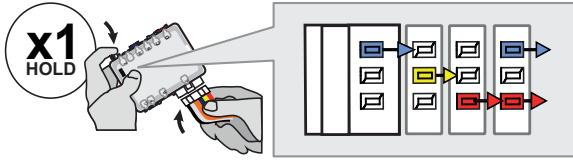

Press and hold the programming button:
Insert the 6-Pin Main connector.


WITH T-HARNESS

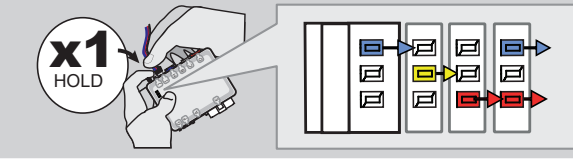

Press and hold the programming button:
Connect the 4-PIN Data-link harness (Black connector).


↳ The LEDs will alternate between BLUE, RED, YELLOW & BLUE/RED flashes.

2

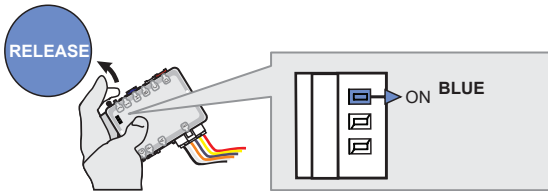


Release the programming button when the BLUE LED is ON.

 If the BLUE LED is not ON solid disconnect the 6-Pin Main connector and go back to step 1.




WITH T-HARNESS

 If the LED is not solid BLUE disconnect the 4 Pin connector (Data-Link) and go back to step 1.




3

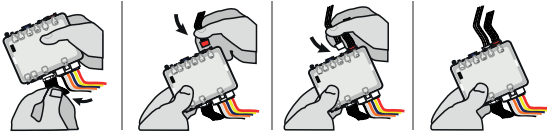

Insert the required remaining connectors.


4

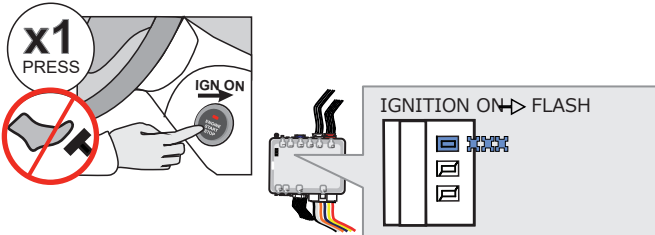

Do not press the brake pedal.
Press the Push-to-Start button once to turn on the ignition.

↳ The BLUE LED will flash rapidly.
Key bypass programmed.


5

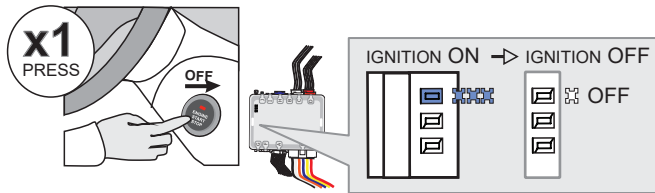

Press the Push-to-Start button once to turn off the ignition.

↳ The BLUE LED will turn off.

6

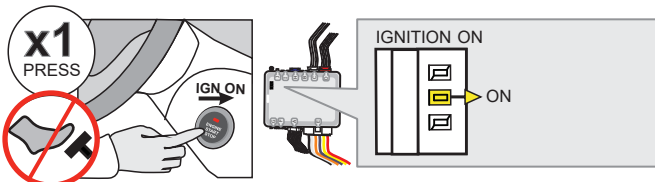

Do not press the brake pedal.
Press the Push-to-Start button once to turn on the ignition.

↳ The YELLOW LED will turn ON.


KEY BYPASS PROGRAMMING PROCEDURE 2/2

7



Wait 5 seconds.

8

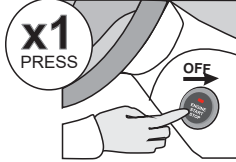

Press the Push-to-Start button once to turn off the ignition.




The module is now programmed.

REMOTE STARTER PROGRAMMING PROCEDURE



REFER TO THE **QUICK INSTALL GUIDE** INCLUDED WITH THE MODULE FOR THE REMOTE STARTER PROGRAMMING.

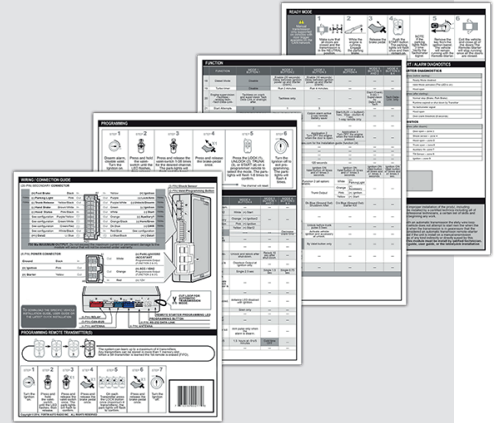

REMOTE STARTER FUNCTIONALITY



All doors must be closed.

 


Remote start the vehicle.



Unlock the doors with either:

- The OEM remote
- The remote-starter remote
- Or the proximity remote

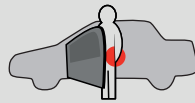

Enter the vehicle with the SMART-KEY.



DO NOT PRESS THE BRAKE PEDAL.

Press and release the Push-to-Start button once.



Press the brake pedal. The vehicle can now be put in to gear and driven.

If the Smart-Key is not detected the vehicle will shut down.


THAR-FOR3 THARNNESS INSTALLATION

ADDENDUM - SUGGESTED WIRING CONFIGURATION


ONLY COMPATIBLE WITH AUTOMATIC TRANSMISSION VEHICLES.


Vehicle functions supported in this diagram (functional if equipped)

VEHICLE	YEARS	Immobilizer bypass	Lock	Unlock	Arm	Disarm	RAP Disable	Horn	Parking Lights	Tachometer	Heated seats	Heated Mirrors	Rear defrost	Door Status	Trunk Status	Hood Status*	Hand-Brake Status	Foot-Brake Status	Active OEM Remote Start	R.S. OEM remote Stand Alone compatible
FORD																				
F-150	<i>Push-to-Start</i> 2015-2018	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
F-250	<i>Push-to-Start</i> 2017	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
F-350	<i>Push-to-Start</i> 2017	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
F-450	<i>Push-to-Start</i> 2017	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
LINCOLN																				
MKC	<i>Push-to-Start</i> 2015-2019	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•





BYPASS FIRMWARE VERSION


4.[01]

MINIMUM

To add the firmware version and the options, use the **FLASH LINK UPDATER** or **FLASH LINK MOBILE** tool, sold separately.

	Program bypass option:	UNIT OPTION	DESCRIPTION
		C1	OEM Remote status (Lock/Unlock) monitoring
		D6	Push-to-Start

	IF THE VEHICLE IS NOT EQUIPPED WITH FUNCTIONAL HOOD PIN:	A11	OFF	Hood trigger (Output Status).
		A11	OFF	

	Program remote starter option for R.S. OEM REMOTE STAND ALONE :	FUNCTION	MODE	DESCRIPTION
		38	2	Enable : Press 3x Lock to remote start with the OEM remote.


Parts required (Not included)

1x THAR-FOR3

MANDATORY INSTALL

*** HOOD PIN**

HOOD STATUS : THE HOOD PIN SWITCH (INCLUDED) MUST BE INSTALLED IF THE VEHICLE CAN BE REMOTE STARTED WITH THE HOOD OPEN, SET FUNCTION A11 TO OFF.

A11
OFF
SECURITY STICKER


Included

Notice: the installation of safety elements are mandatory. The hood pin and the sticker are essential security elements and must be installed.



THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.

DESCRIPTION




② Parking Lights switch


① Gateway module, located at dash board driver's side,

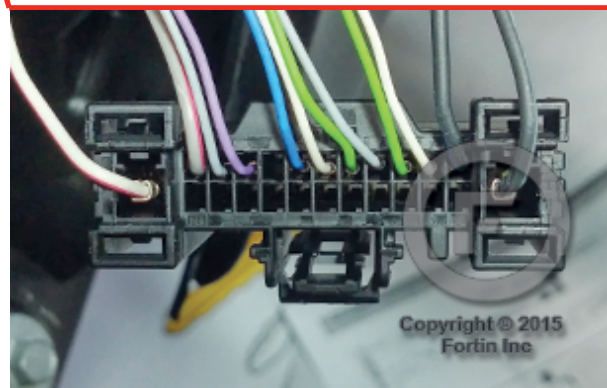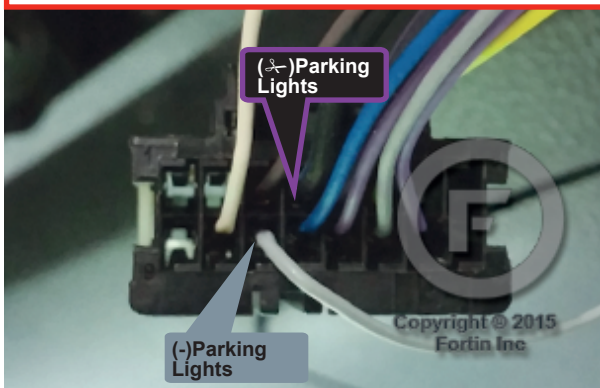

④ Under the hood If not equipped with hood pin.

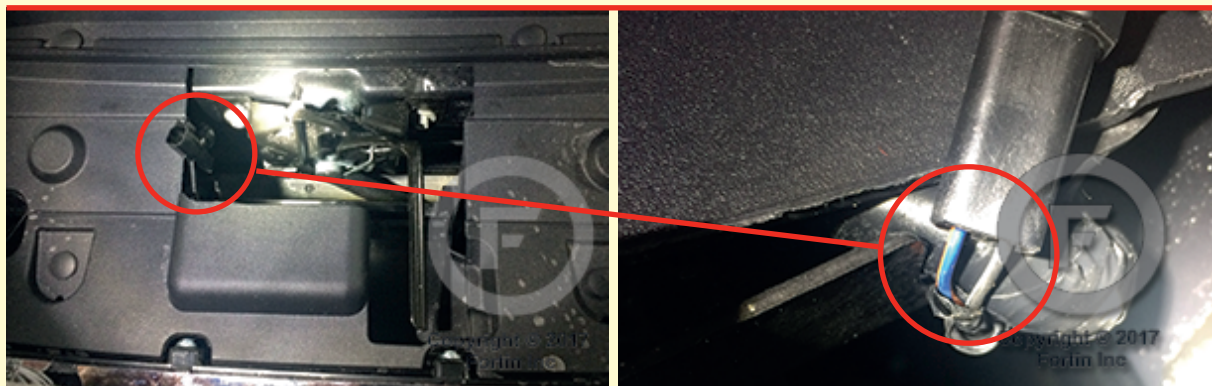


AUTOMATIC TRANSMISSION WIRING CONNECTION

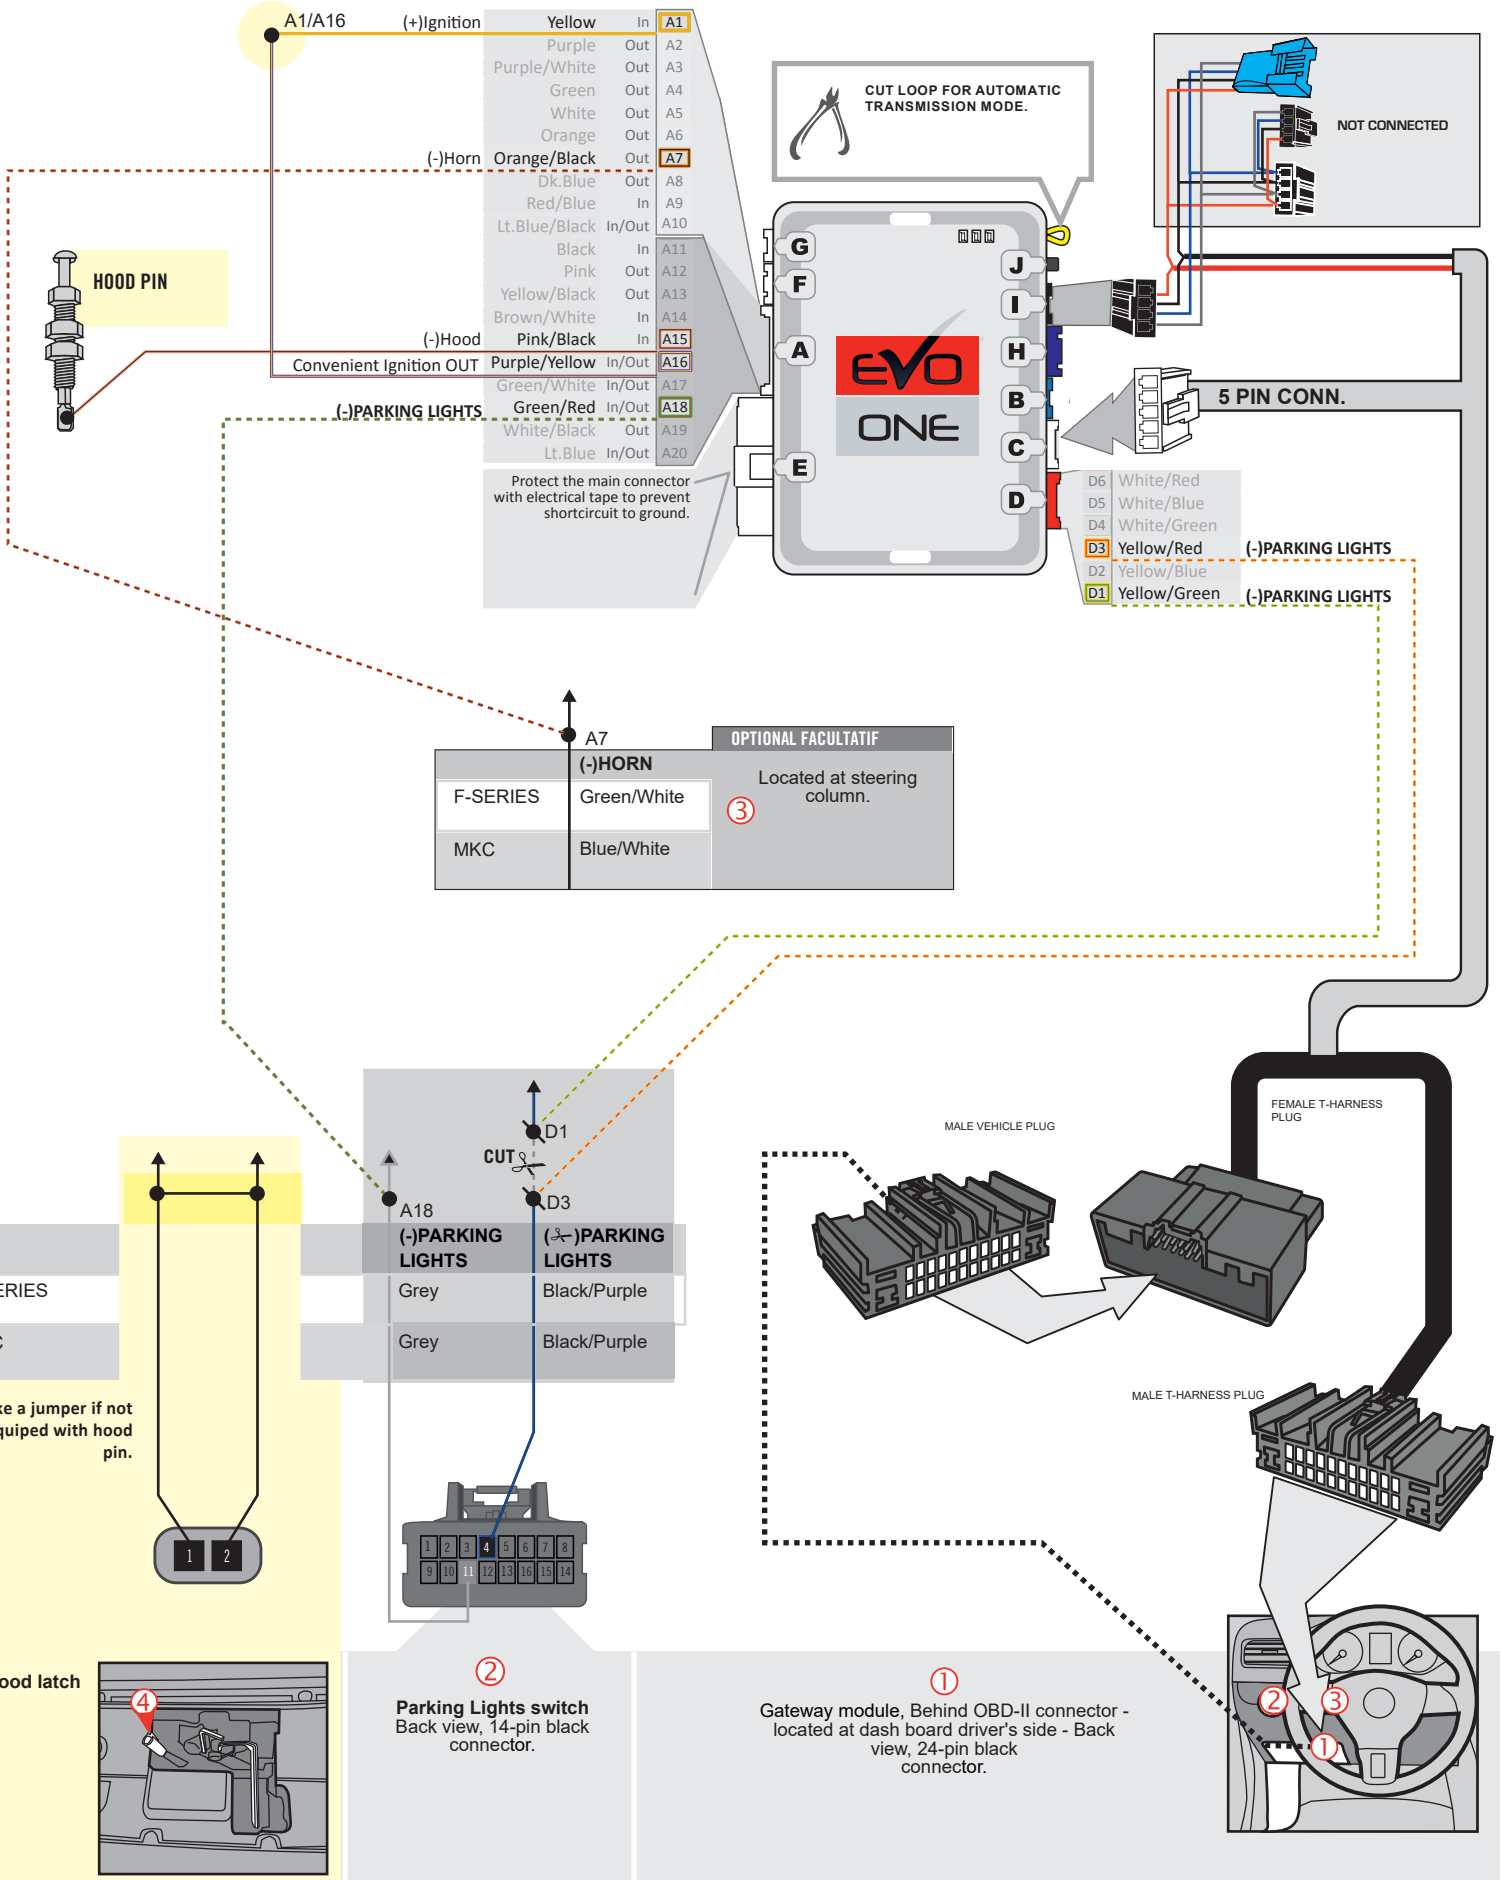


KEY BYPASS PROGRAMMING PROCEDURE 1/2

1

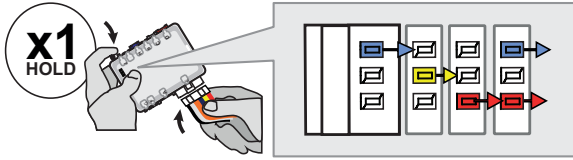

Press and hold the programming button:
Insert the 6-Pin Main connector.


WITH T-HARNESS

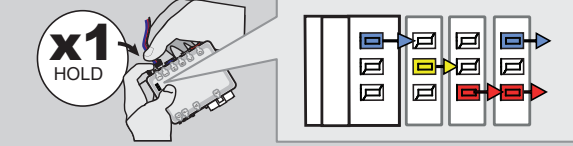

Press and hold the programming button:
Connect the 4-PIN Data-link harness (Black connector).


↳ The LEDs will alternate between BLUE, RED, YELLOW & BLUE/RED flashes.

2

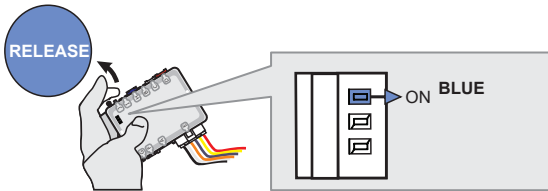


Release the programming button when the BLUE LED is ON.

 If the BLUE LED is not ON solid disconnect the 6-Pin Main connector and go back to step 1.




WITH T-HARNESS

 If the LED is not solid BLUE disconnect the 4 Pin connector (Data-Link) and go back to step 1.




3

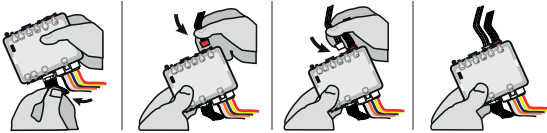

Insert the required remaining connectors.


4

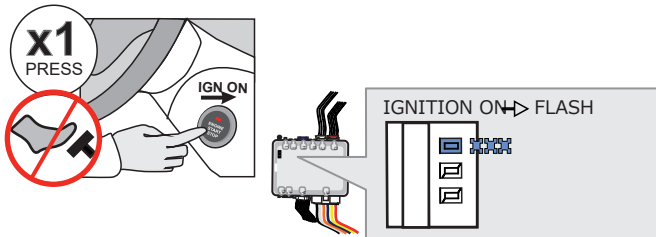

Do not press the brake pedal.
Press the Push-to-Start button once to turn on the ignition.

↳ The BLUE LED will flash rapidly.
Key bypass programmed.


5

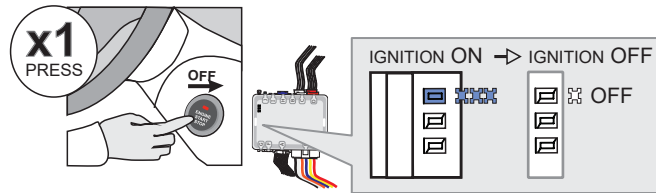

Press the Push-to-Start button once to turn off the ignition.

↳ The BLUE LED will turn off.

6

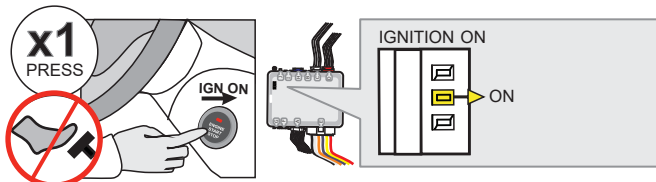

Do not press the brake pedal.
Press the Push-to-Start button once to turn on the ignition.

↳ The YELLOW LED will turn ON.


KEY BYPASS PROGRAMMING PROCEDURE 2/2

7



Wait 5 seconds.

8

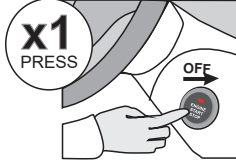

Press the Push-to-Start button once to turn off the ignition.




The module is now programmed.

REMOTE STARTER PROGRAMMING PROCEDURE



REFER TO THE **QUICK INSTALL GUIDE** INCLUDED WITH THE MODULE FOR THE REMOTE STARTER PROGRAMMING.

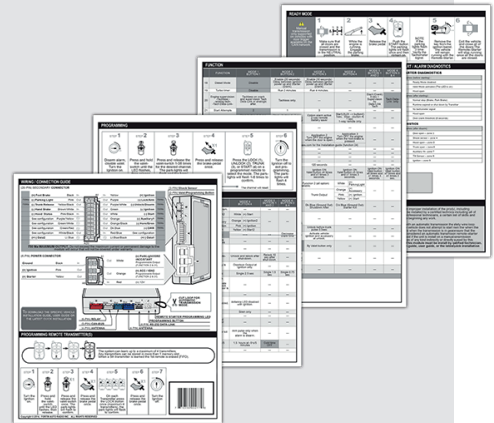

REMOTE STARTER FUNCTIONALITY



All doors must be closed.

 


Remote start the vehicle.



Unlock the doors with either:

- The OEM remote
- The remote-starter remote
- Or the proximity remote



Enter the vehicle with the SMART-KEY.



DO NOT PRESS THE BRAKE PEDAL.

Press and release the Push-to-Start button once.



Press the brake pedal. The vehicle can now be put in to gear and driven.

If the Smart-Key is not detected the vehicle will shut down.

THAR-FOR3 THARNESSE INSTALLATION

ADDENDUM - SUGGESTED WIRING CONFIGURATION


ONLY COMPATIBLE WITH AUTOMATIC TRANSMISSION VEHICLES.

Vehicle functions supported in this diagram (functional if equipped)

VEHICLE	YEARS	Immobilizer bypass	Lock	Unlock	Arm	Disarm	RAP Disable	Horn	Parking Lights	Tachometer	Heated seats	Heated Mirrors	Rear defrost	Door Status	Trunk Status	Hood Status*	Hand-Brake Status	Foot-Brake Status	Active OEM Remote Start	R.S. OEM remote Stand Alone compatible
FORD																				
F-150	Key 2015-2019	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
F-250	Key 2017-2019	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
F-350	Key 2017-2019	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
F-450	Key 2017-2019	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
F-550	Key 2017	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•


BYPASS FIRMWARE VERSION
4.01

ONLY SEULEMENT

 To add the firmware version and the options, use the **FLASH LINK UPDATER** or **FLASH LINK MOBILE** tool, sold separately.

IF THE VEHICLE IS NOT EQUIPPED WITH FUNCTIONAL HOOD PIN:
A11
OFF

Hood trigger (Output Status).


Program bypass option:
UNIT OPTION
C1
DESCRIPTION

OEM Remote status (Lock/Unlock) monitoring


Program remote starter option for R.S. OEM REMOTE STAND ALONE:
FUNCTION
38
MODE
2
DESCRIPTION

Enable : Press 3x Lock to remote start with the OEM remote.


Parts required (Not included)

1x THAR-FOR3

NOTES


The vehicle must be equipped with the OEM remote with the door locks.

MANDATORY INSTALL
*** HOOD PIN**

HOOD STATUS: THE HOOD PIN SWITCH (INCLUDED) MUST BE INSTALLED IF THE VEHICLE CAN BE REMOTE STARTED WITH THE HOOD OPEN, SET FUNCTION A11 TO OFF.

A11
OFF
SECURITY STICKER


Included

Notice: the installation of safety elements are mandatory. The hood pin and the sticker are essential security elements and must be installed.



THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.

DESCRIPTION




② Parking Lights switch


① Gateway module, located at dash board driver's side,

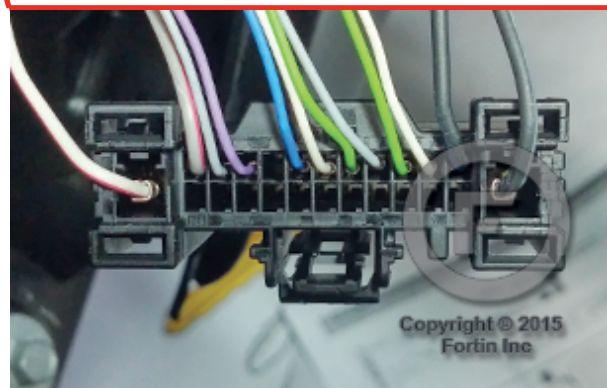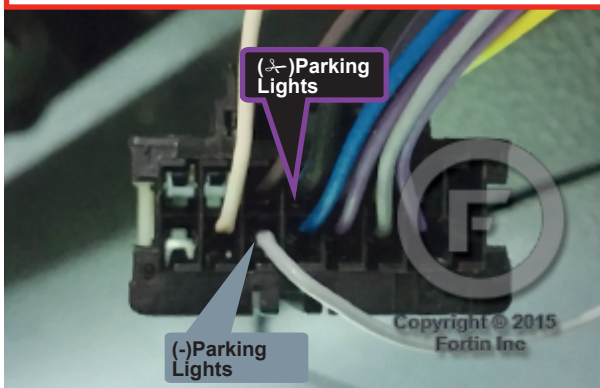

④ Under the hood If not equipped with hood pin.

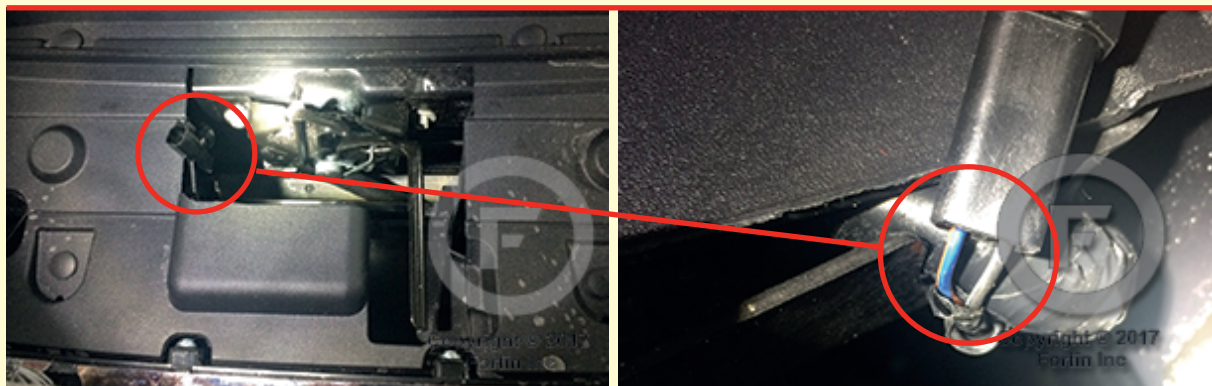


AUTOMATIC TRANSMISSION WIRING CONNECTION

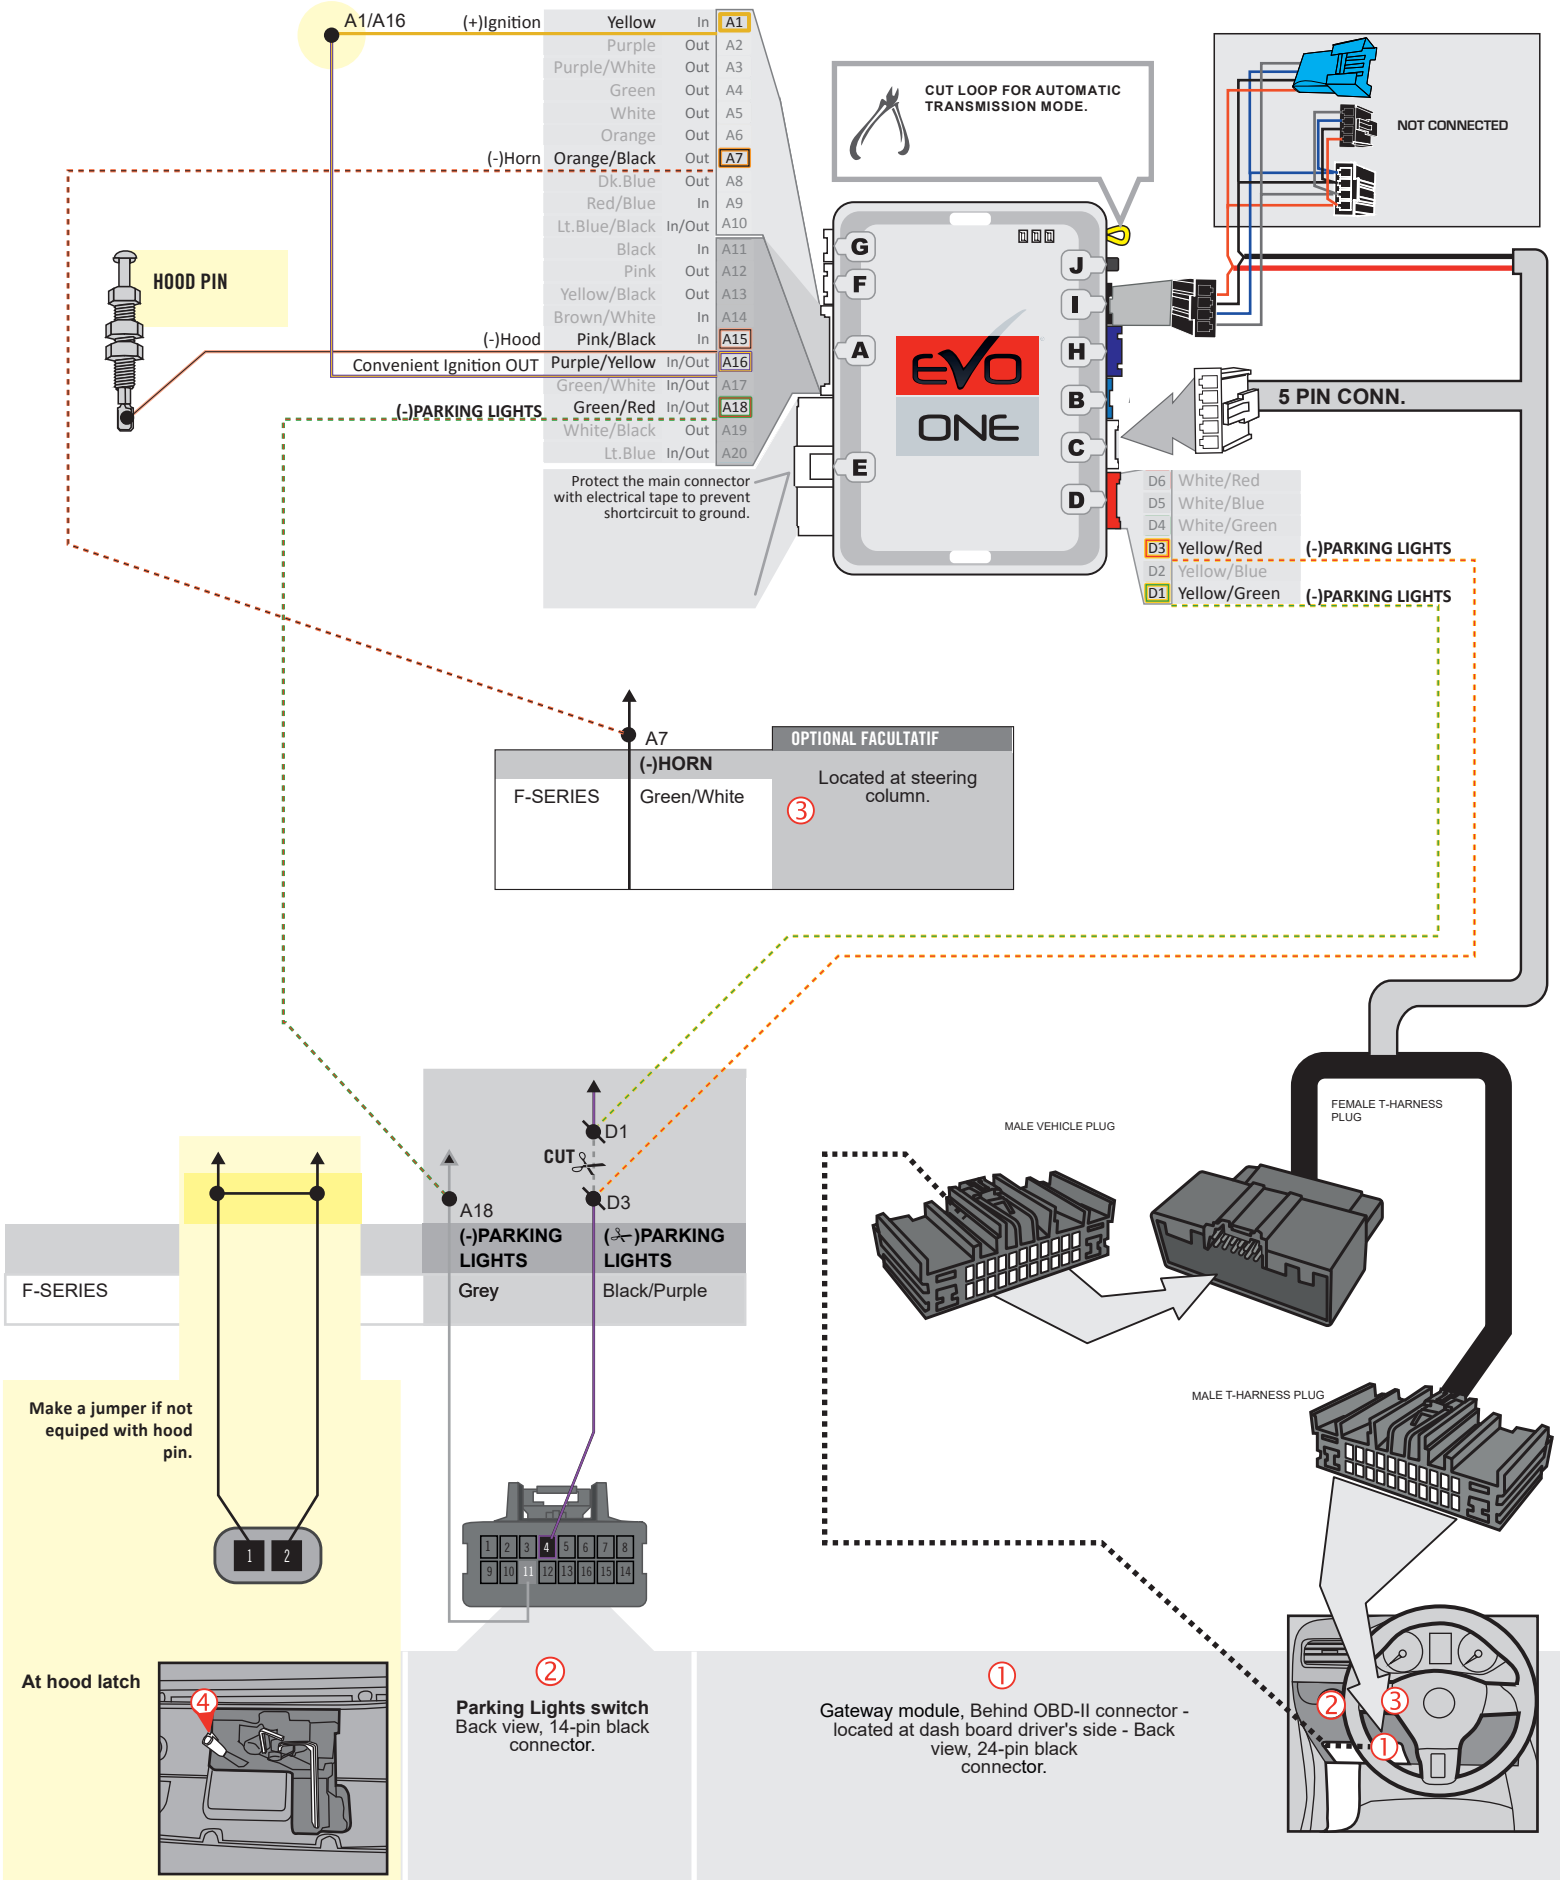


KEY BYPASS PROGRAMMING PROCEDURE 1/2

1

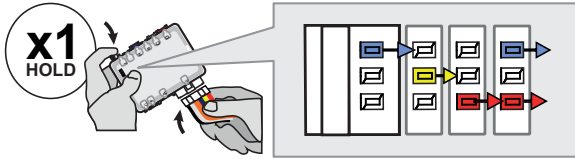

Press and hold the programming button:
Insert the 6-Pin Main connector.


WITH T-HARNESS

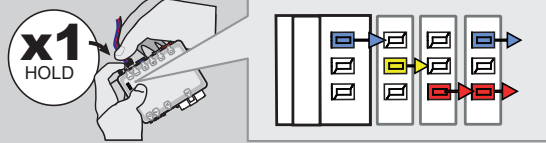

Press and hold the programming button:
Connect the 4-PIN Data-link harness (Black connector).


↳ The LEDs will alternate between BLUE, RED, YELLOW & BLUE/RED flashes.

2

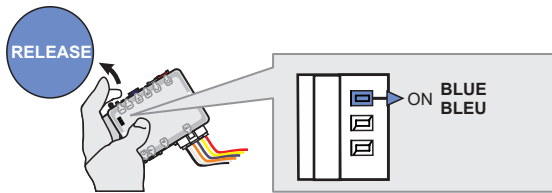


Release the programming button when the BLUE LED is ON.

 If the BLUE LED is not ON solid disconnect the 6-Pin Main connector and go back to step 1.




WITH T-HARNESS

 If the LED is not solid BLUE disconnect the 4 Pin connector (Data-Link) and go back to step 1.




3

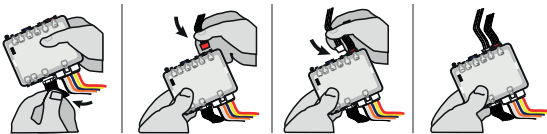

Insert the required remaining connectors.


4

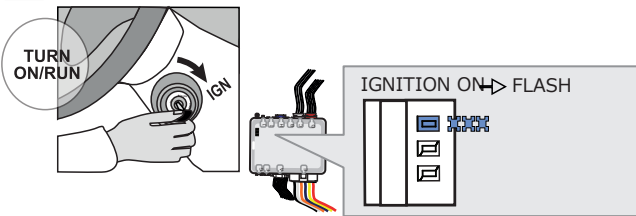

Turn the key to the Ignition ON/RUN position.

↳ The BLUE LED will flash rapidly.
Key bypass programmed.


5

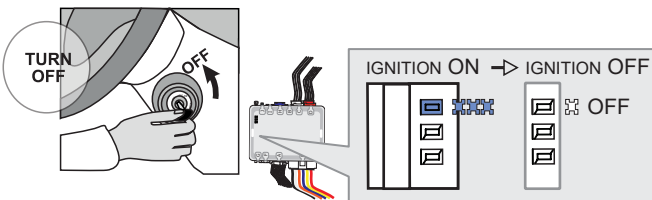

Turn the key to the OFF position.

↳ The BLUE LED will turn off.

6

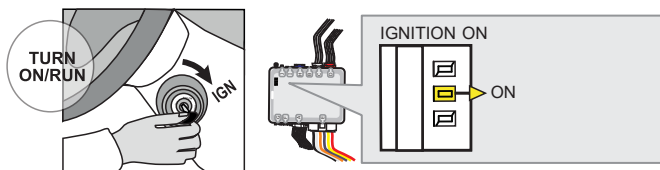

Turn the key to the Ignition ON/RUN position.

↳ The YELLOW LED will turn ON.


KEY BYPASS PROGRAMMING PROCEDURE 1/2

7



Wait 5 seconds.

8

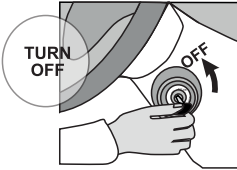

Turn the key to the OFF position.




The module is now programmed.

REMOTE STARTER PROGRAMMING PROCEDURE



REFER TO THE **QUICK INSTALL GUIDE** INCLUDED WITH THE MODULE FOR THE REMOTE STARTER PROGRAMMING.

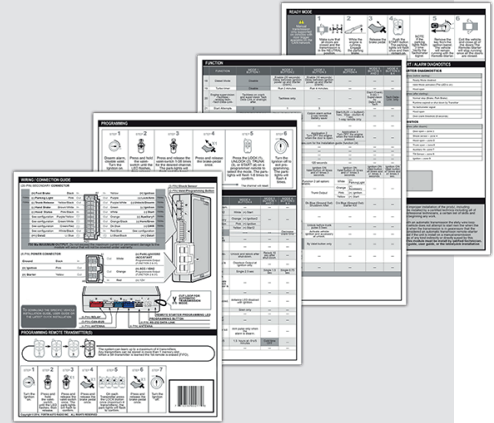

REMOTE STARTER FUNCTIONALITY



 
All doors must be closed.



Remote start the vehicle.



Unlock the doors with the remote-starter remote or the OEM remote.



Insert and Turn the key to the Ignition ON/RUN position.



Press the brake pedal.



The vehicle can now be put in to gear and driven.

THAR-FOR3 THARNNESS INSTALLATION

ADDENDUM - SUGGESTED WIRING CONFIGURATION



ONLY COMPATIBLE WITH AUTOMATIC TRANSMISSION VEHICLES.




VEHICLE

YEARS

Vehicle functions supported in this diagram (functional if equipped)

VEHICLE	YEARS	Immobilizer bypass	Lock	Unlock	Armn	Disarm	RAP Disable	Parking Lights	Tachometer	Heated seats	Heated Mirrors	Rear defrost	Door Status	Trunk Status	Hood Status*	Hand-Brake Status	Foot-Brake Status	Active OEM Remote Start	R.S. OEM remote Stand Alone compatible	
FORD																				
Fusion	Push-to-Start	2014-2019	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
	Hybrid Push-to-Start	2014-2019	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
LINCOLN																				
Continental	Push-to-Start	2017-2019	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
MKZ	Push-to-Start	2013-2019	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
	Hybrid Push-to-Start	2013-2019	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•




BYPASS FIRMWARE VERSION

4.[01]


MINIMUM


To add the firmware version and the options, use the **FLASH LINK UPDATER** or **FLASH LINK MOBILE** tool, sold separately.

	Program bypass option:	UNIT OPTION	DESCRIPTION
		C1	OEM Remote status (Lock/Unlock) monitoring
		D6	Push-to-Start

IF THE VEHICLE IS NOT EQUIPPED WITH FUNCTIONAL HOOD PIN:

		A11	OFF	Hood trigger (Output Status).
--	--	-----	-----	-------------------------------


	Program bypass option (Vehicle hybrid only):	UNIT OPTION	DESCRIPTION
		D4	Hybrid mode (Vehicle hybrid only)

	Program remote starter option for R.S. OEM REMOTE STAND ALONE:	FUNCTION	MODE	DESCRIPTION
		38	2	Enable : Press 3x Lock to remote start with the OEM remote.



Parts required (Not included)
1x THAR-FOR3

MANDATORY INSTALL

*** HOOD PIN**  **HOOD STATUS** : THE HOOD PIN SWITCH (INCLUDED) MUST BE INSTALLED IF THE VEHICLE CAN BE REMOTE STARTED WITH THE HOOD OPEN, SET FUNCTION A11 TO OFF.

A11	OFF
-----	-----

SECURITY STICKER



Notice: the installation of safety elements are mandatory. The hood pin and the sticker are essential security elements and must be installed.
Notice: l'installation des éléments de


THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.

DESCRIPTION |




②

Parking Lights switch

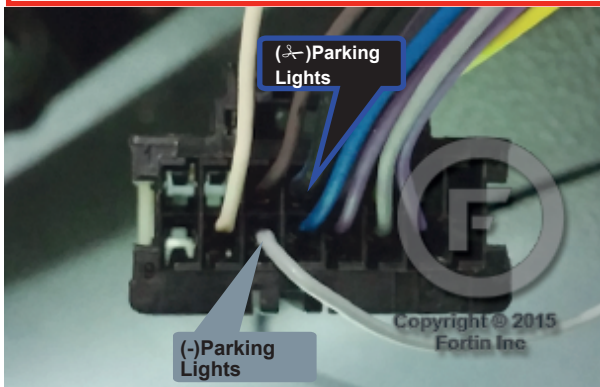


①

Gateway module, Behind OBD-II connector

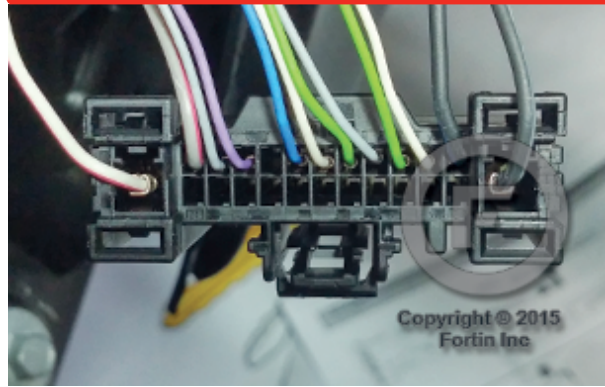


AUTOMATIC TRANSMISSION WIRING CONNECTION |

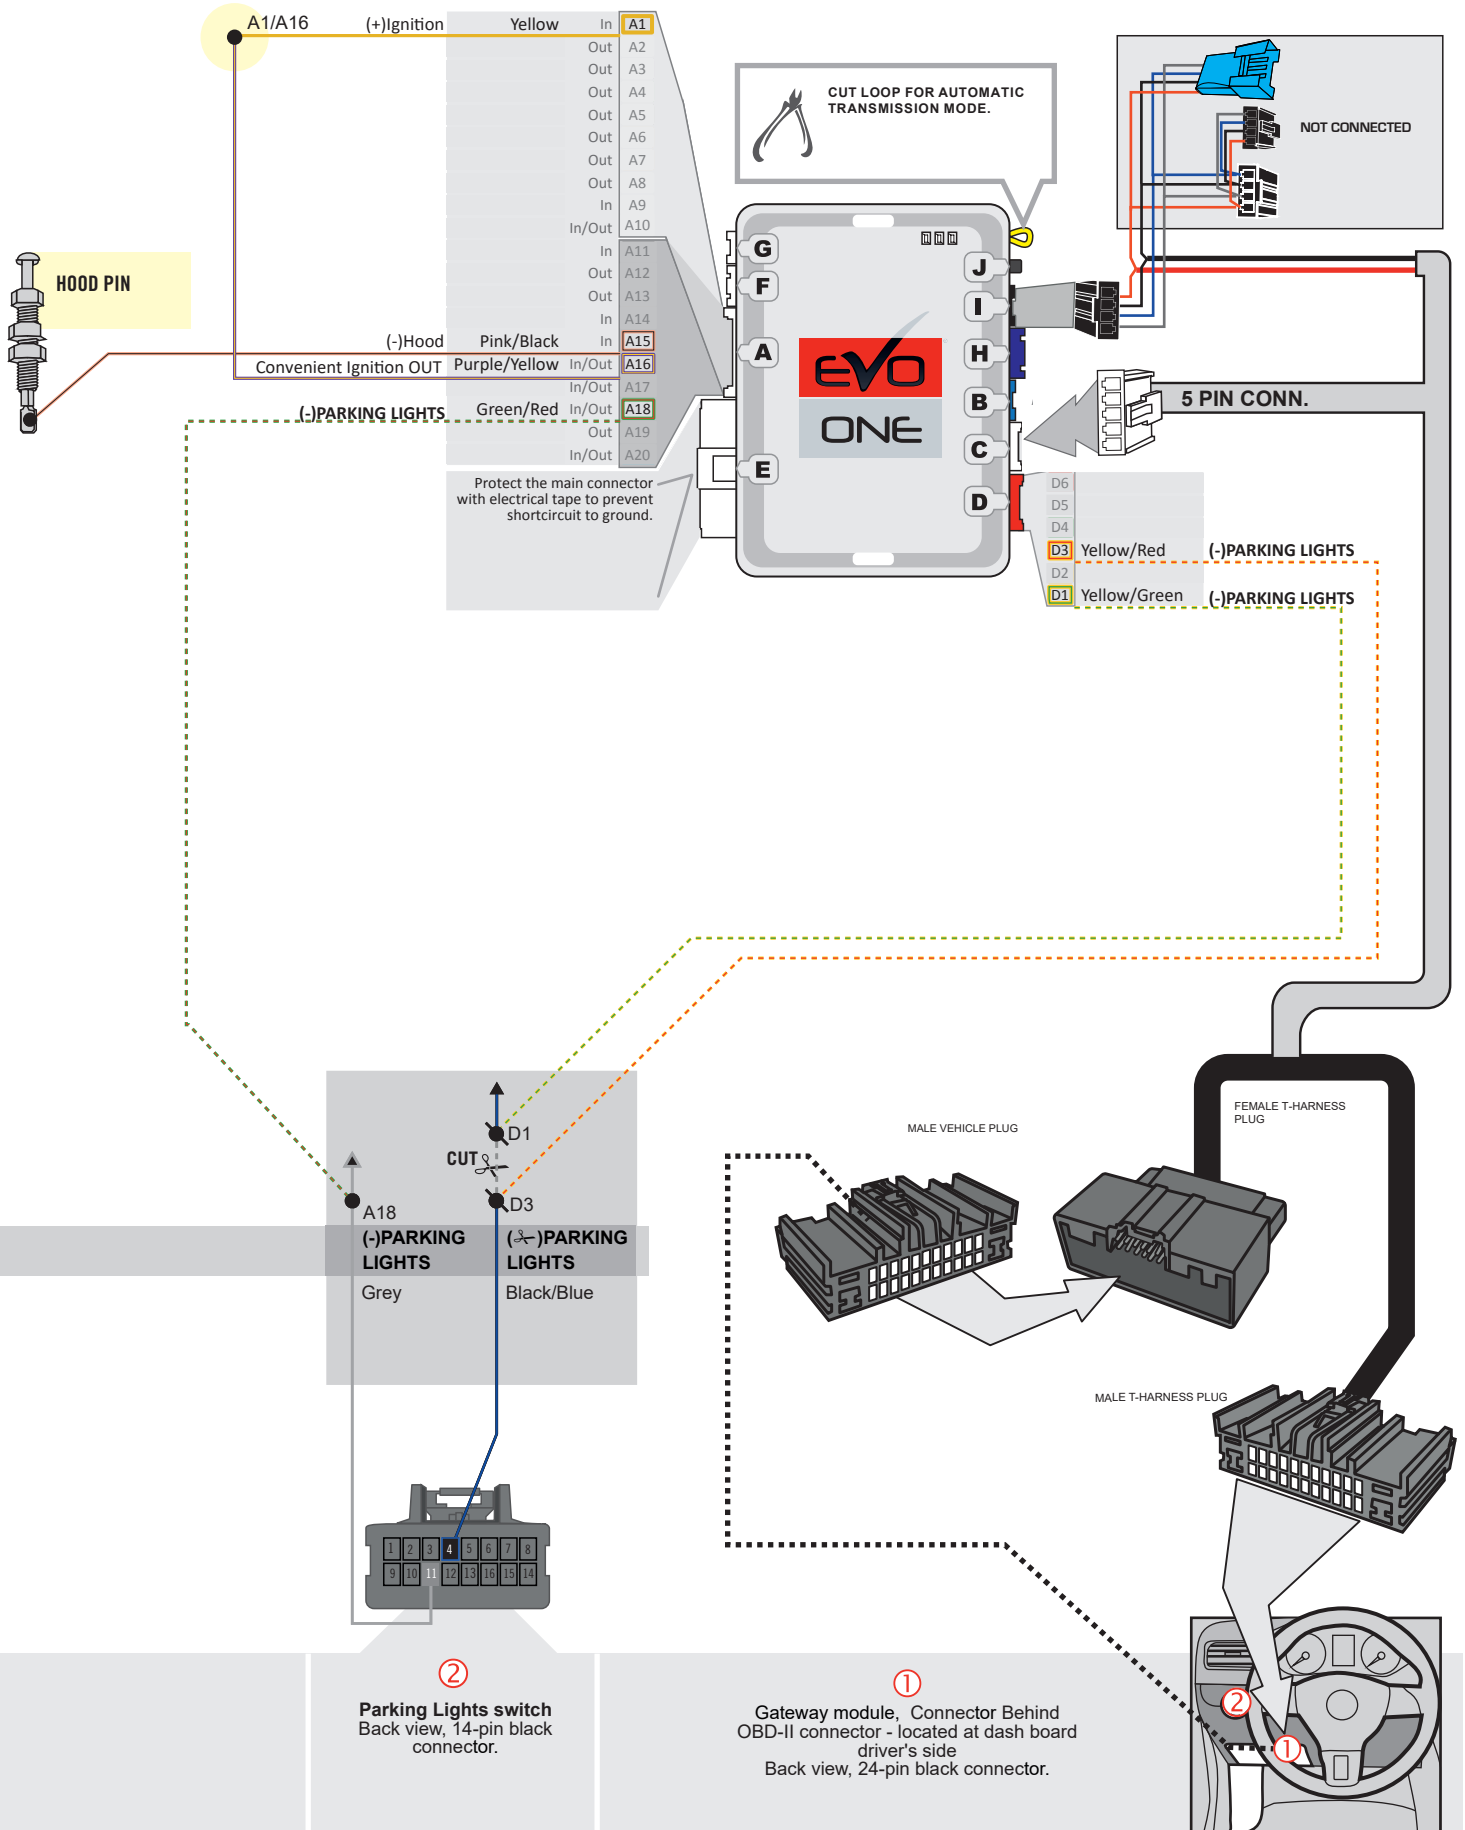


KEY BYPASS PROGRAMMING PROCEDURE 1/2 |

1

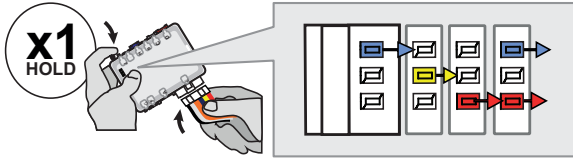

Press and hold the programming button:
Insert the 6-Pin Main connector.


WITH T-HARNESS

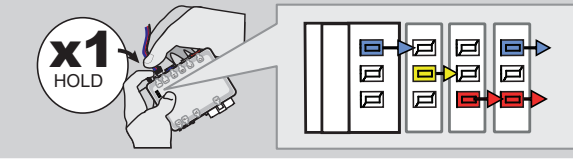

Press and hold the programming button:
Connect the 4-PIN Data-link harness (Black connector).


↳ The LEDs will alternate between BLUE, RED, YELLOW & BLUE/RED flashes.

2

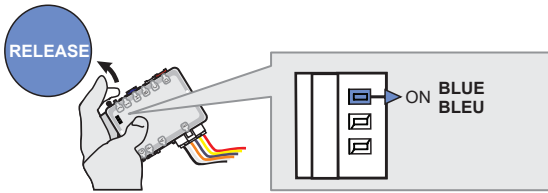


Release the programming button when the BLUE LED is ON.

 If the BLUE LED is not ON solid disconnect the 6-Pin Main connector and go back to step 1.




WITH T-HARNESS

 If the LED is not solid BLUE disconnect the 4 Pin connector (Data-Link) and go back to step 1.




3

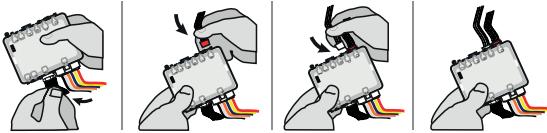

Insert the required remaining connectors.


4

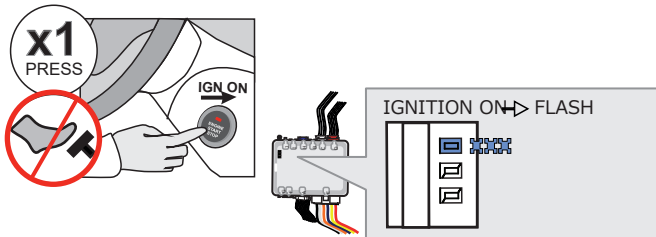

Do not press the brake pedal.
Press the Push-to-Start button once to turn on the ignition.

↳ The BLUE LED will flash rapidly.
Key bypass programmed.


5

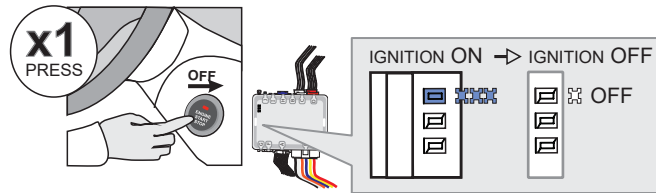

Press the Push-to-Start button once to turn off the ignition.

↳ The BLUE LED will turn off.

6

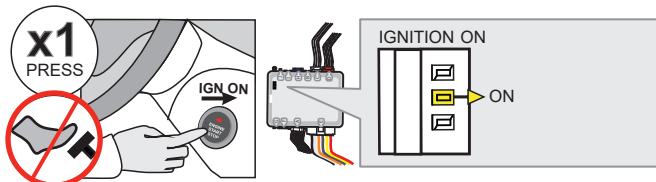

Do not press the brake pedal.
Press the Push-to-Start button once to turn on the ignition.


↳ The YELLOW LED will turn ON.

7



Wait 5 seconds.

8

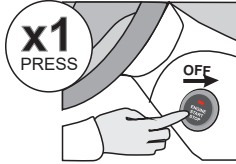

Press the Push-to-Start button once to turn off the ignition.




The module is now programmed.

REMOTE STARTER PROGRAMMING PROCEDURE |



REFER TO THE **QUICK INSTALL GUIDE** INCLUDED WITH THE MODULE FOR THE REMOTE STARTER PROGRAMMING.

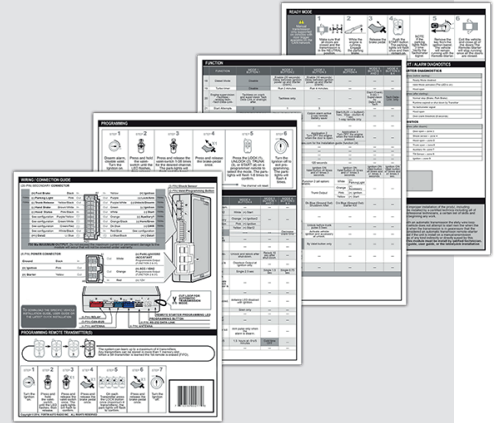

REMOTE STARTER FUNCTIONALITY |



All doors must be closed.

 


Remote start the vehicle.



Unlock the doors with either:

- The OEM remote
- The remote-starter remote
- Or the proximity remote



Enter the vehicle with the SMART-KEY.



DO NOT PRESS THE BRAKE PEDAL.

Press and release the Push-to-Start button once.



Press the brake pedal. The vehicle can now be put in to gear and driven.

If the Smart-Key is not detected the vehicle will shut down.

THAR-FOR3 THARNNESS INSTALLATION

ADDENDUM - SUGGESTED WIRING CONFIGURATION


ONLY COMPATIBLE WITH AUTOMATIC TRANSMISSION VEHICLES.

VEHICLE
YEARS

Vehicle functions supported in this diagram (functional if equipped)

VEHICLE	YEARS	Immobilizer bypass	Lock	Unlock	Arrn	Disarm	RAP Disable	Parking Lights	Tachometer	Heated seats	Heated Mirrors	Rear defrost	Door Status	Trunk Status	Hood Status*	Hand-Brake Status	Foot-Brake Status	Active OEM Remote Start	R.S. OEM remote Stand Alone compatible
FORD																			
Fusion	Key 2014-2019	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
	Hybrid Key 2014-2019	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•


BYPASS FIRMWARE VERSION
4.[01]

MINIMUM

 To add the firmware version and the options, use the **FLASH LINK UPDATER** or **FLASH LINK MOBILE** tool, sold separately.

IF THE VEHICLE IS NOT EQUIPPED WITH FUNCTIONAL HOOD PIN:
A11
OFF

Hood trigger (Output Status).


Program bypass option:
UNIT OPTION
DESCRIPTION
C1

OEM Remote status (Lock/Unlock) monitoring


**Program bypass option
(Vehicle hybrid only):**
**UNIT OPTION
OPTION UNITE**
DESCRIPTION
D4

Hybrid mode (Vehicle hybrid only)

(véhicule hybride seulement)

**Program remote
starter option for R.S. OEM
REMOTE STAND ALONE:**
FUNCTION
MODE
DESCRIPTION
38
2

Enable : Press 3x Lock to remote start with the OEM remote.


Parts required (Not included)

1x THAR-FOR3

NOTES


The vehicle must be equipped with the OEM remote with the door locks.

MANDATORY INSTALL
*** HOOD PIN**

HOOD STATUS : THE HOOD PIN SWITCH (INCLUDED) MUST BE INSTALLED IF THE VEHICLE CAN BE REMOTE STARTED WITH THE HOOD OPEN, SET FUNCTION A11 TO OFF.

A11
OFF
SECURITY STICKER


Included

Notice: the installation of safety elements are mandatory. The hood pin and the sticker are essential security elements and must be installed.


THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.

DESCRIPTION |




②

Parking Lights switch

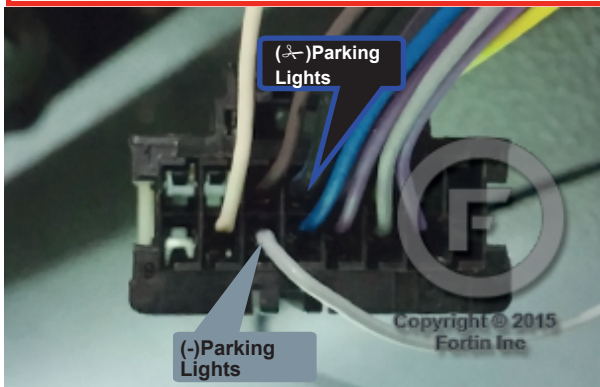


①

Gateway module, Behind OBD-II connector

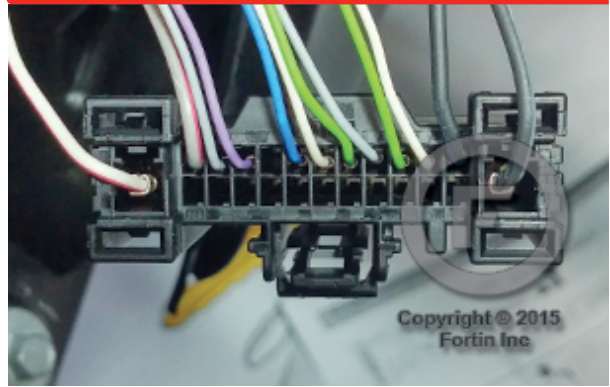


AUTOMATIC TRANSMISSION WIRING CONNECTION |

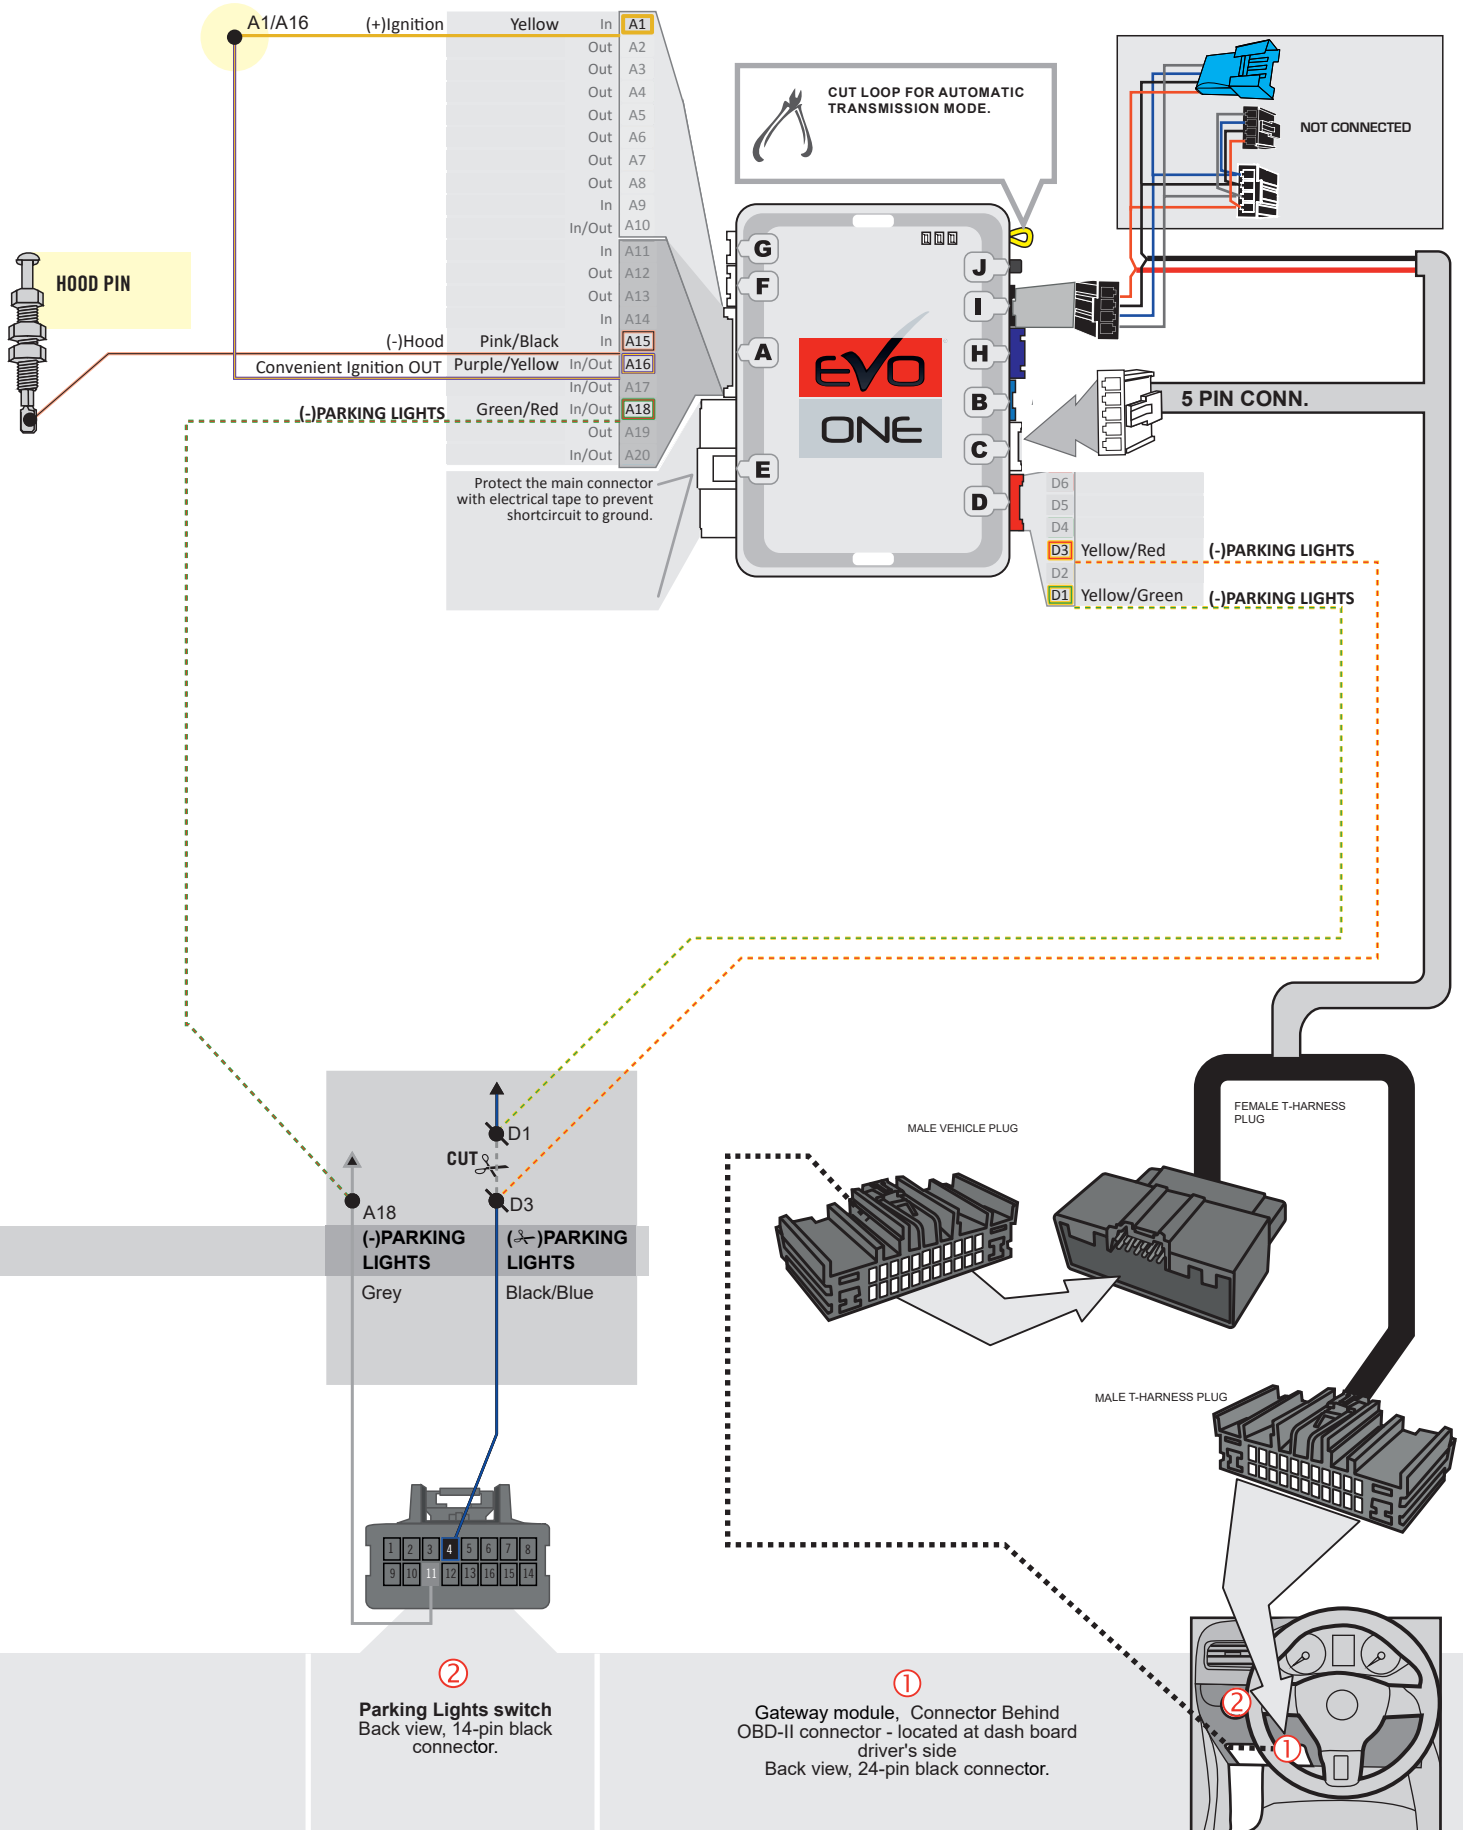


KEY BYPASS PROGRAMMING PROCEDURE 1/2 |

1

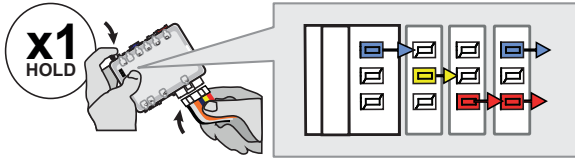

Press and hold the programming button:
Insert the 6-Pin Main connector.


WITH T-HARNESS

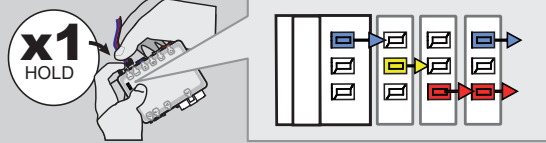

Press and hold the programming button:
Connect the 4-PIN Data-link harness (Black connector).


↳ The LEDs will alternate between BLUE, RED, YELLOW & BLUE/RED flashes.

2

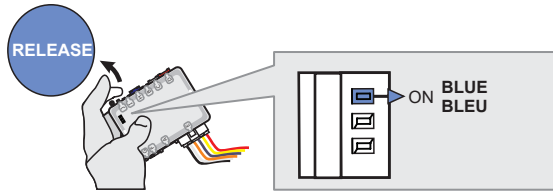


Release the programming button when the BLUE LED is ON.

 If the BLUE LED is not ON solid disconnect the 6-Pin Main connector and go back to step 1.




WITH T-HARNESS

 If the LED is not solid BLUE disconnect the 4 Pin connector (Data-Link) and go back to step 1.




3

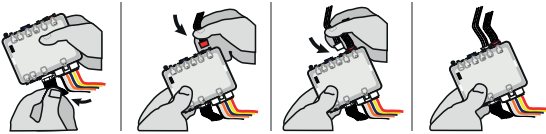

Insert the required remaining connectors.


4

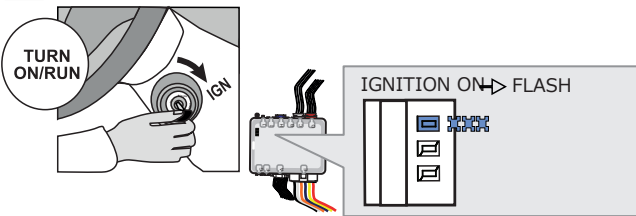

Turn the key to the Ignition ON/RUN position.

↳ The BLUE LED will flash rapidly.
Key bypass programmed.


5

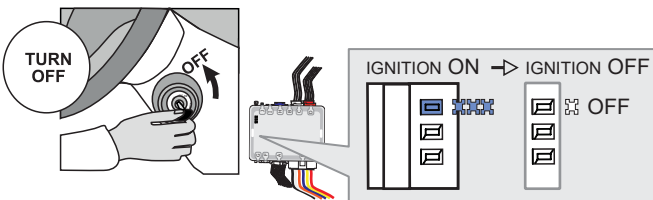

Turn the key to the OFF position.

↳ The BLUE LED will turn off.

6

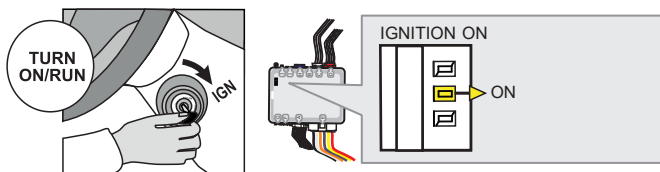

Turn the key to the Ignition ON/RUN position.

↳ The YELLOW LED will turn ON.


KEY BYPASS PROGRAMMING PROCEDURE 1/2 |

7



Wait 5 seconds.

8

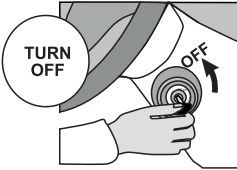

Turn the key to the OFF position.




The module is now programmed.

REMOTE STARTER PROGRAMMING PROCEDURE |



REFER TO THE **QUICK INSTALL GUIDE** INCLUDED WITH THE MODULE FOR THE REMOTE STARTER PROGRAMMING.

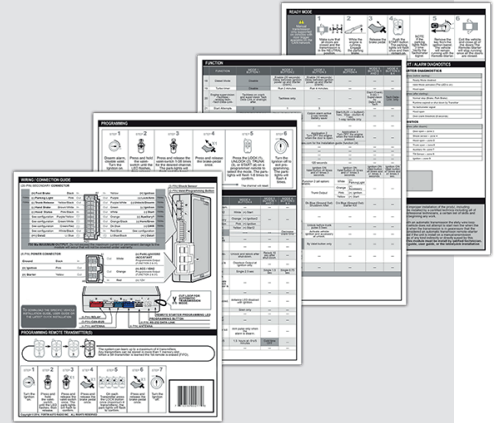

REMOTE STARTER FUNCTIONALITY |



All doors must be closed.



Remote start the vehicle.



Unlock the doors with the remote-starter remote or the OEM remote.



Insert and Turn the key to the Ignition ON/RUN position.



Press the brake pedal.



The vehicle can now be put in to gear and driven.

THAR-FOR3 THARNNESS INSTALLATION

ADDENDUM - SUGGESTED WIRING CONFIGURATION



ONLY COMPATIBLE WITH AUTOMATIC TRANSMISSION VEHICLES.



Vehicle functions supported in this diagram (functional if equipped)

VEHICLE	YEARS	Immobilizer bypass	Lock	Unlock	Arm	Disarm	RAP Disable	Horn	Parking Lights	Tachometer	Heated seats	Heated Mirrors	Rear defrost	Door Status	Trunk Status	Hood Status*	Hand-Brake Status	Foot-Brake Status	Active OEM Remote Start	R.S. OEM remote Stand Alone compatible	
FORD																					
Mondeo	Key 2013-2015	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•

BYPASS FIRMWARE VERSION

4.[01]

MINIMUM

To add the firmware version and the options, use the **FLASH LINK UPDATER** or **FLASH LINK MOBILE** tool, sold separately.

	Program bypass option:	UNIT OPTION	DESCRIPTION
		C1	OEM Remote status (Lock/Unlock) monitoring
	IF THE VEHICLE IS NOT EQUIPPED WITH FUNCTIONAL HOOD PIN:	A11	OFF
			Hood trigger (Output Status).

	Program remote starter option for R.S. OEM REMOTE STAND ALONE	FUNCTION	MODE	DESCRIPTION
		38	2	Enable Press 3x Lock to remote start with the OEM remote.



Parts required (Not included)
1x THAR-FOR3

NOTES



The vehicle must be equipped with the OEM remote with the door locks.

MANDATORY INSTALL

* HOOD PIN



HOOD STATUS: THE HOOD PIN SWITCH (INCLUDED) MUST BE INSTALLED IF THE VEHICLE CAN BE REMOTE STARTED WITH THE HOOD OPEN, SET FUNCTION A11 TO OFF.

A11

OFF

SECURITY STICKER



Included

Notice: the installation of safety elements are mandatory. The hood pin and the sticker are essential security elements and must be installed.


THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.

DESCRIPTION |


① Gateway module, located at dash board driver's side,




② Parking Lights switch

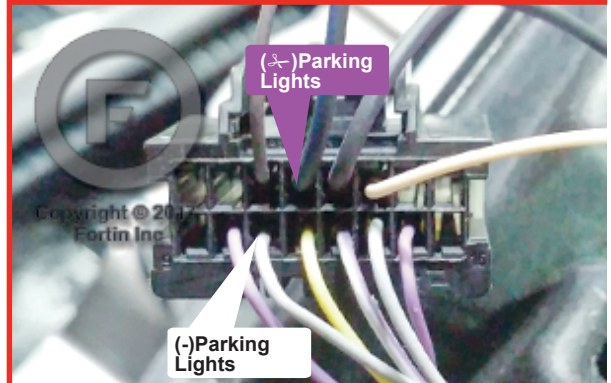

③ Located at steering column.

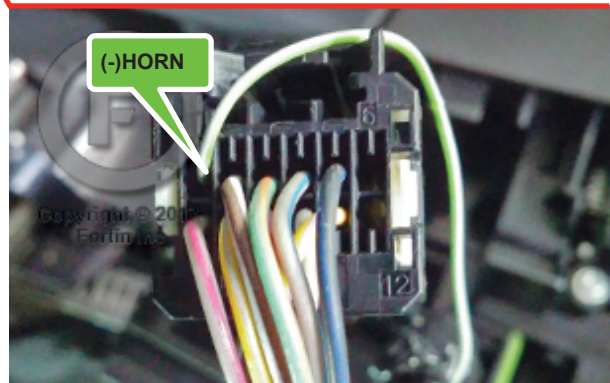


AUTOMATIC TRANSMISSION WIRING CONNECTION |

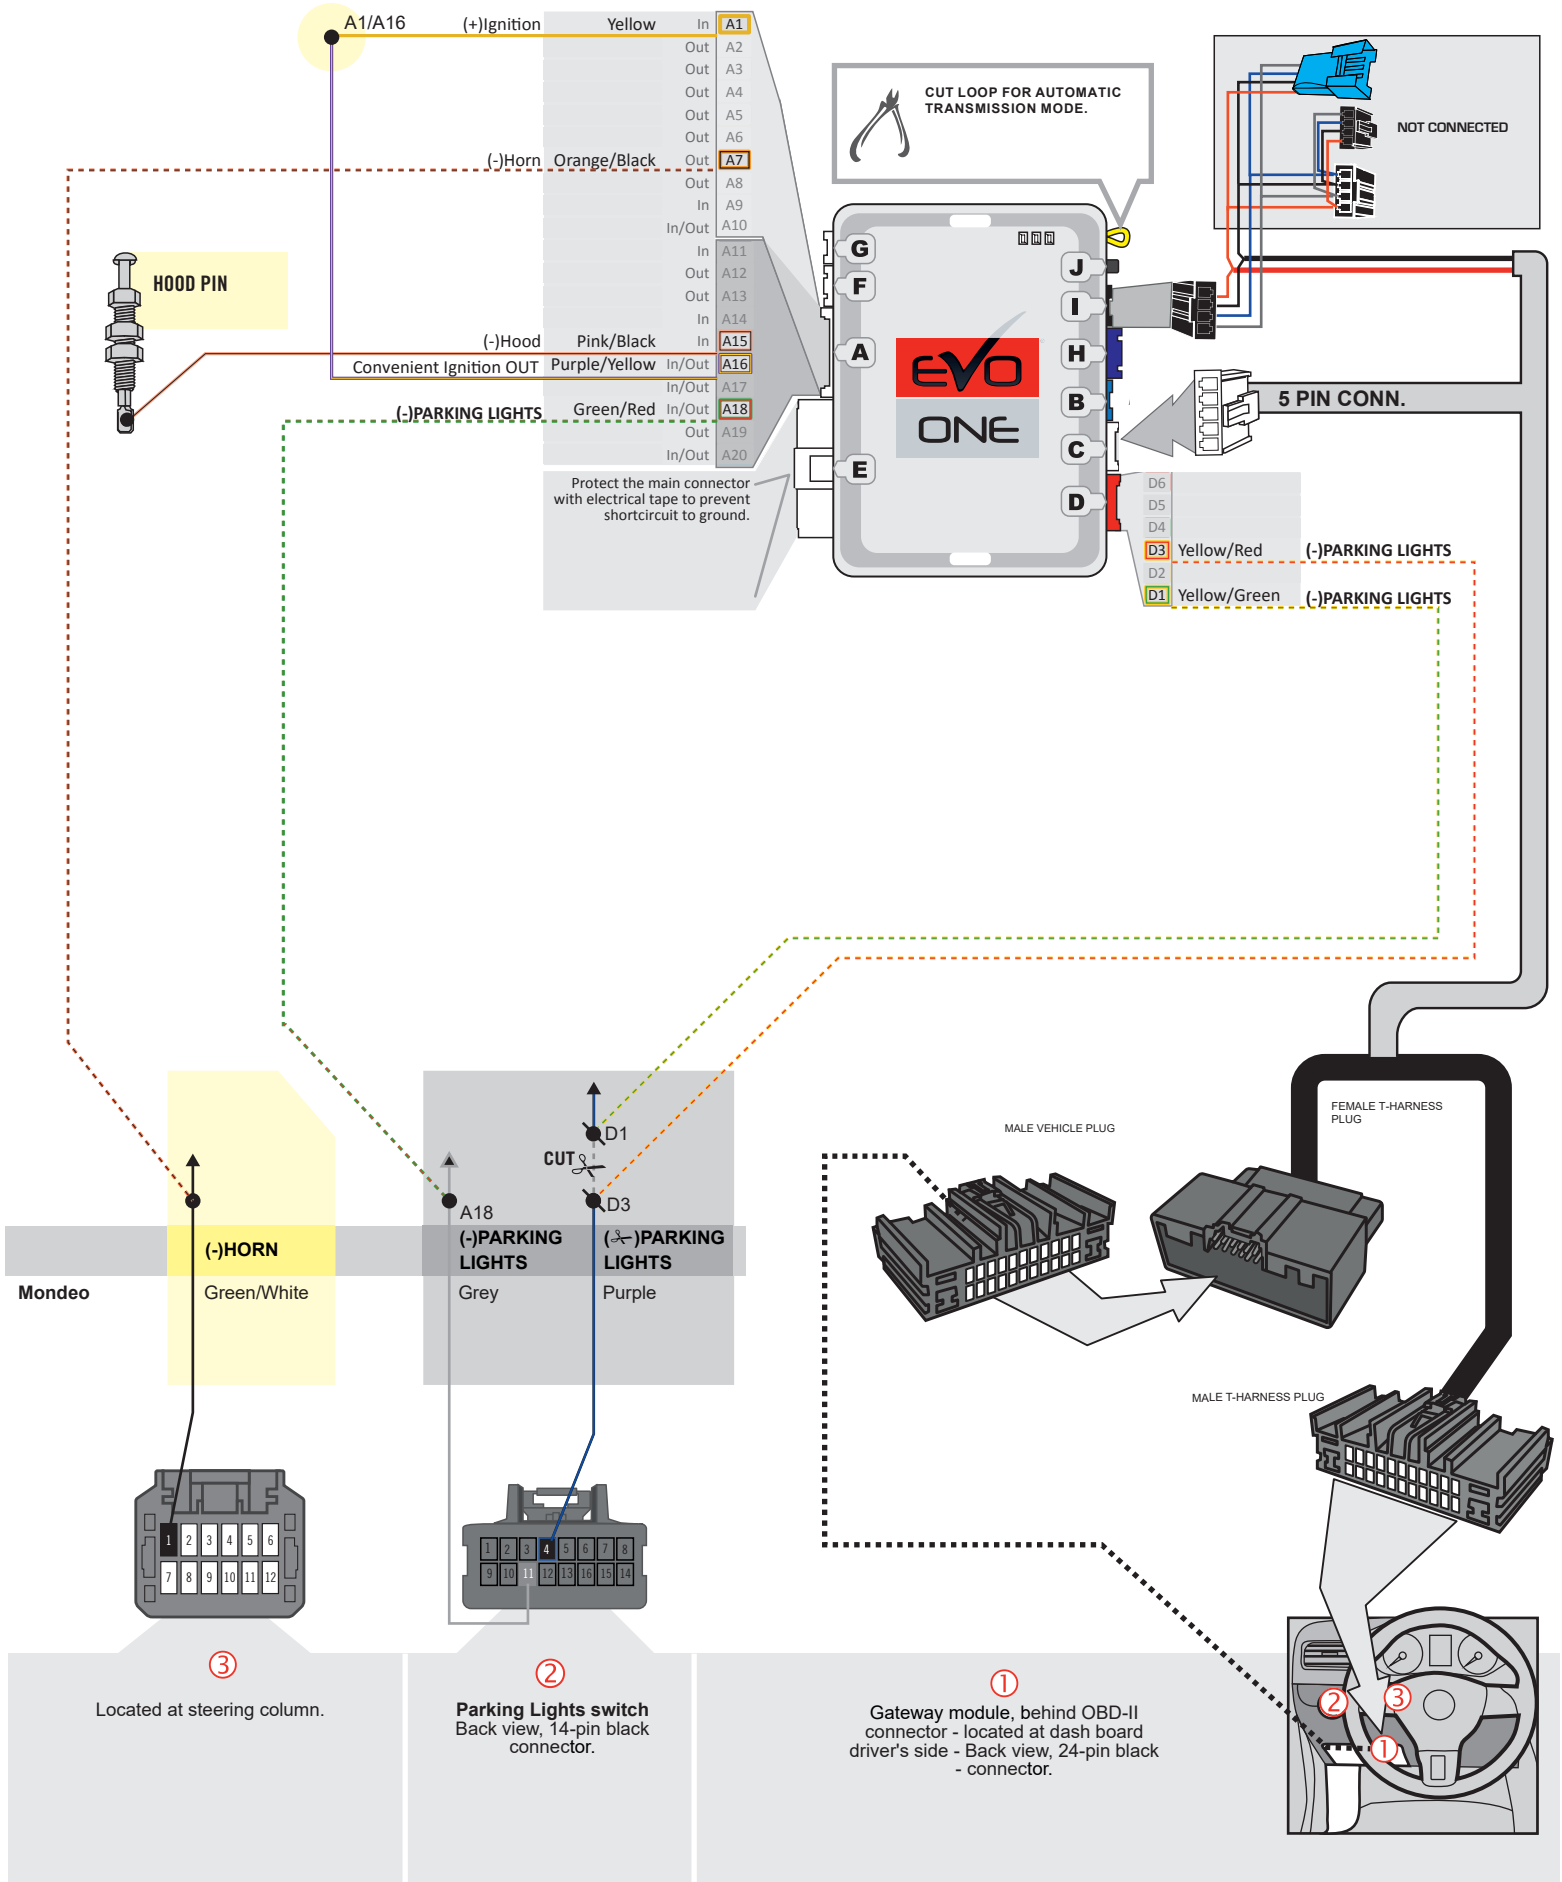

KEY BYPASS PROGRAMMING PROCEDURE 1/2 |

1

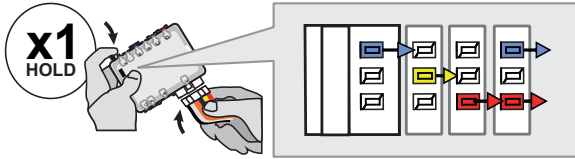


Press and hold the programming button:
Insert the 6-Pin Main connector.


Press and hold the programming button:
Connect the 4-PIN Data-link harness (Black connector).

↳ The LEDs will alternate between BLUE, RED, YELLOW & BLUE/RED flashes.

WITH T-HARNESS

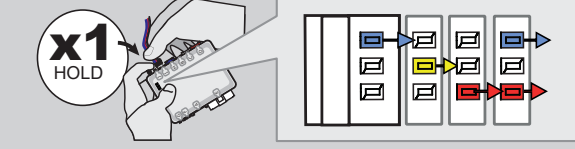


2

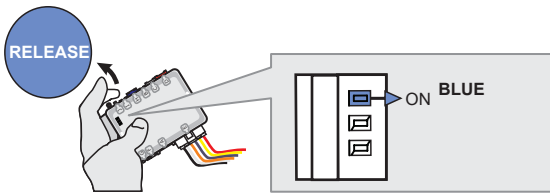


Release the programming button when the BLUE LED is ON.

If the BLUE LED is not ON solid disconnect the 6-Pin Main connector and go back to step 1.

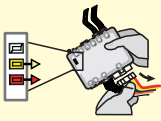


 If the LED is not solid BLUE disconnect the 4 Pin connector (Data-Link) and go back to step 1.




WITH T-HARNESS

3

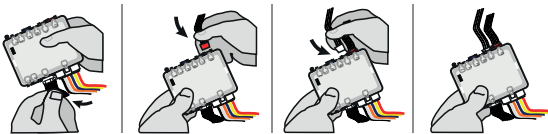

Insert the required remaining connectors.


4

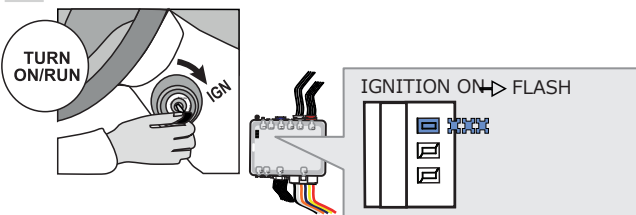

Turn the key to the Ignition ON/RUN position.

↳ The BLUE LED will flash rapidly.
Key bypass programmed.


5

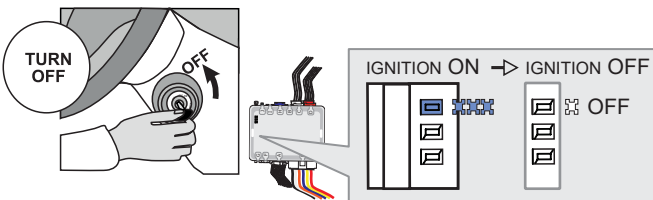

Turn the key to the OFF position.

↳ The BLUE LED will turn off.

6

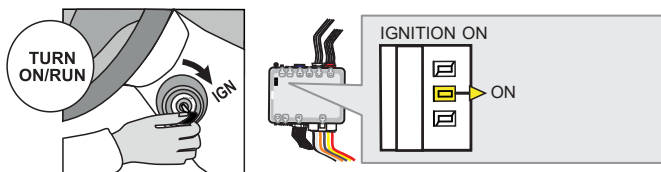

Turn the key to the Ignition ON/RUN position.

↳ The YELLOW LED will turn ON.


KEY BYPASS PROGRAMMING PROCEDURE 1/2 |

7



Wait 5 seconds.

8

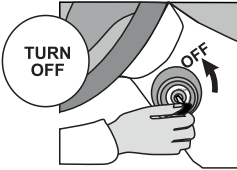

Turn the key to the OFF position.




The module is now programmed.

REMOTE STARTER PROGRAMMING PROCEDURE |



REFER TO THE **QUICK INSTALL GUIDE** INCLUDED WITH THE MODULE FOR THE REMOTE STARTER PROGRAMMING.

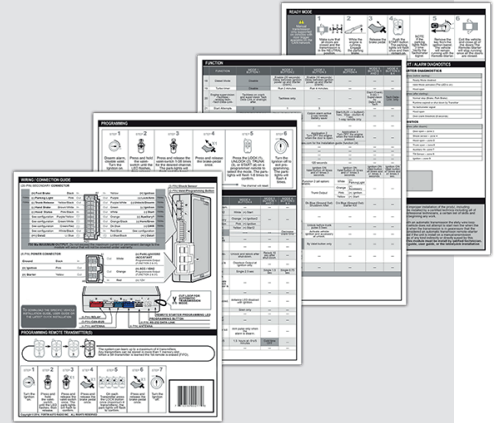

REMOTE STARTER FUNCTIONALITY |



All doors must be closed.



Remote start the vehicle.



Unlock the doors with the remote-starter remote or the OEM remote.



Insert and Turn the key to the Ignition ON/RUN position.



Press the brake pedal.



The vehicle can now be put in to gear and driven.

THAR-FOR3 THARNNESS INSTALLATION

ADDENDUM - SUGGESTED WIRING CONFIGURATION

VEHICLE	YEARS	Vehicle functions supported in this diagram (functional if equipped)															
		KEY CONTROL	T-Harness	Lock	Unlock	Arm	Disarm	RAP Disable	Parking Lights	Tachometer	Door Status	Trunk Status	Hood Status*	Hand-Brake Status	Foot-Brake Status	OEM Remote monitoring	R.S. OEM remote Stand Alone compatible
FORD Mustang	PTS 2015-2018	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•

	HARDWARE VERSION 7 MINIMUM	BYPASS FIRMWARE VERSION 4.05 ONLY - SEULEMENT	To add the firmware version and the options, use the FLASH LINK UPDATER or FLASH LINK MOBILE tool, sold separately.
--	--	---	---

IF THE VEHICLE IS NOT EQUIPPED WITH FUNCTIONAL HOOD PIN:	A11	OFF	Hood trigger (Output Status).
---	------------	------------	-------------------------------

	Program bypass option:	UNIT OPTION	DESCRIPTION
		C1	OEM Remote status (Lock/Unlock) monitoring
		D6	Push-to-Start

	Program remote starter option:	FUNCTION	MODE	DESCRIPTION
		32	3	DK.Blue (GWR) Shut Down After

	Program remote starter option for R.S. OEM REMOTE STAND ALONE:	FUNCTION	MODE	DESCRIPTION
		38	2	Enable Press 3x Lock to remote start with the OEM remote.



	Parts required (Not included)
1X	Vehicle key
1X	7.5 Amp. Fuse
1X	Relay

MANDATORY INSTALL		HOOD STATUS: THE HOOD PIN SWITCH (INCLUDED) MUST BE INSTALLED IF THE VEHICLE CAN BE REMOTE STARTED WITH THE HOOD OPEN, SET FUNCTION A11 TO OFF.	A11	OFF	SECURITY STICKER Included	Notice: the installation of safety elements are mandatory. The hood pin and the sticker are essential security elements and must be installed.
--------------------------	--	---	------------	------------	---	---



THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.

DESCRIPTION


⑥ Clutch switch

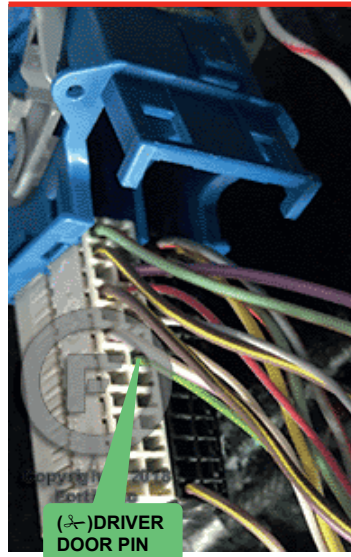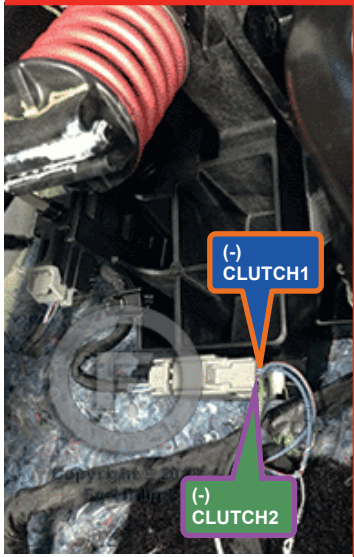


③ ④ BCM, Passenger kick panel

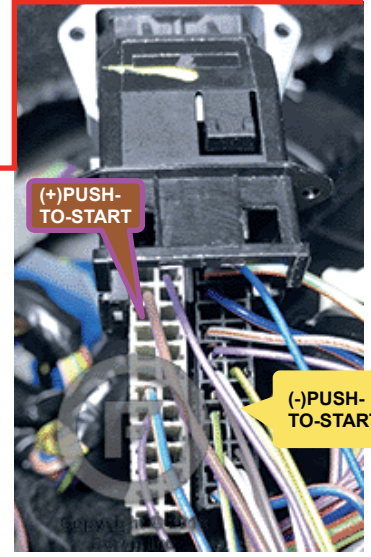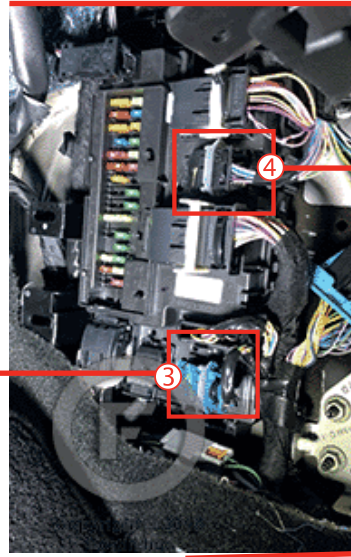


② Parking Lights switch

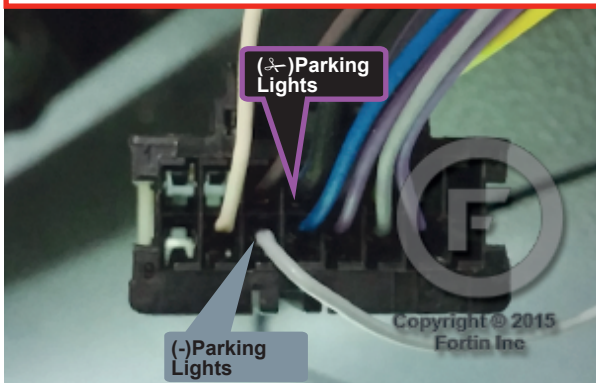

① Gateway module, located at right of steering column.

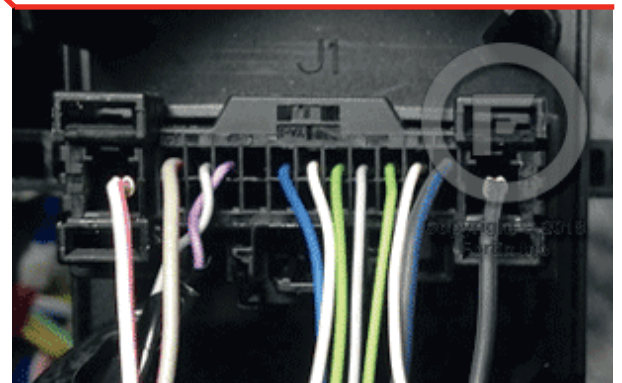


AUTOMATIC TRANSMISSION WIRING CONNECTION

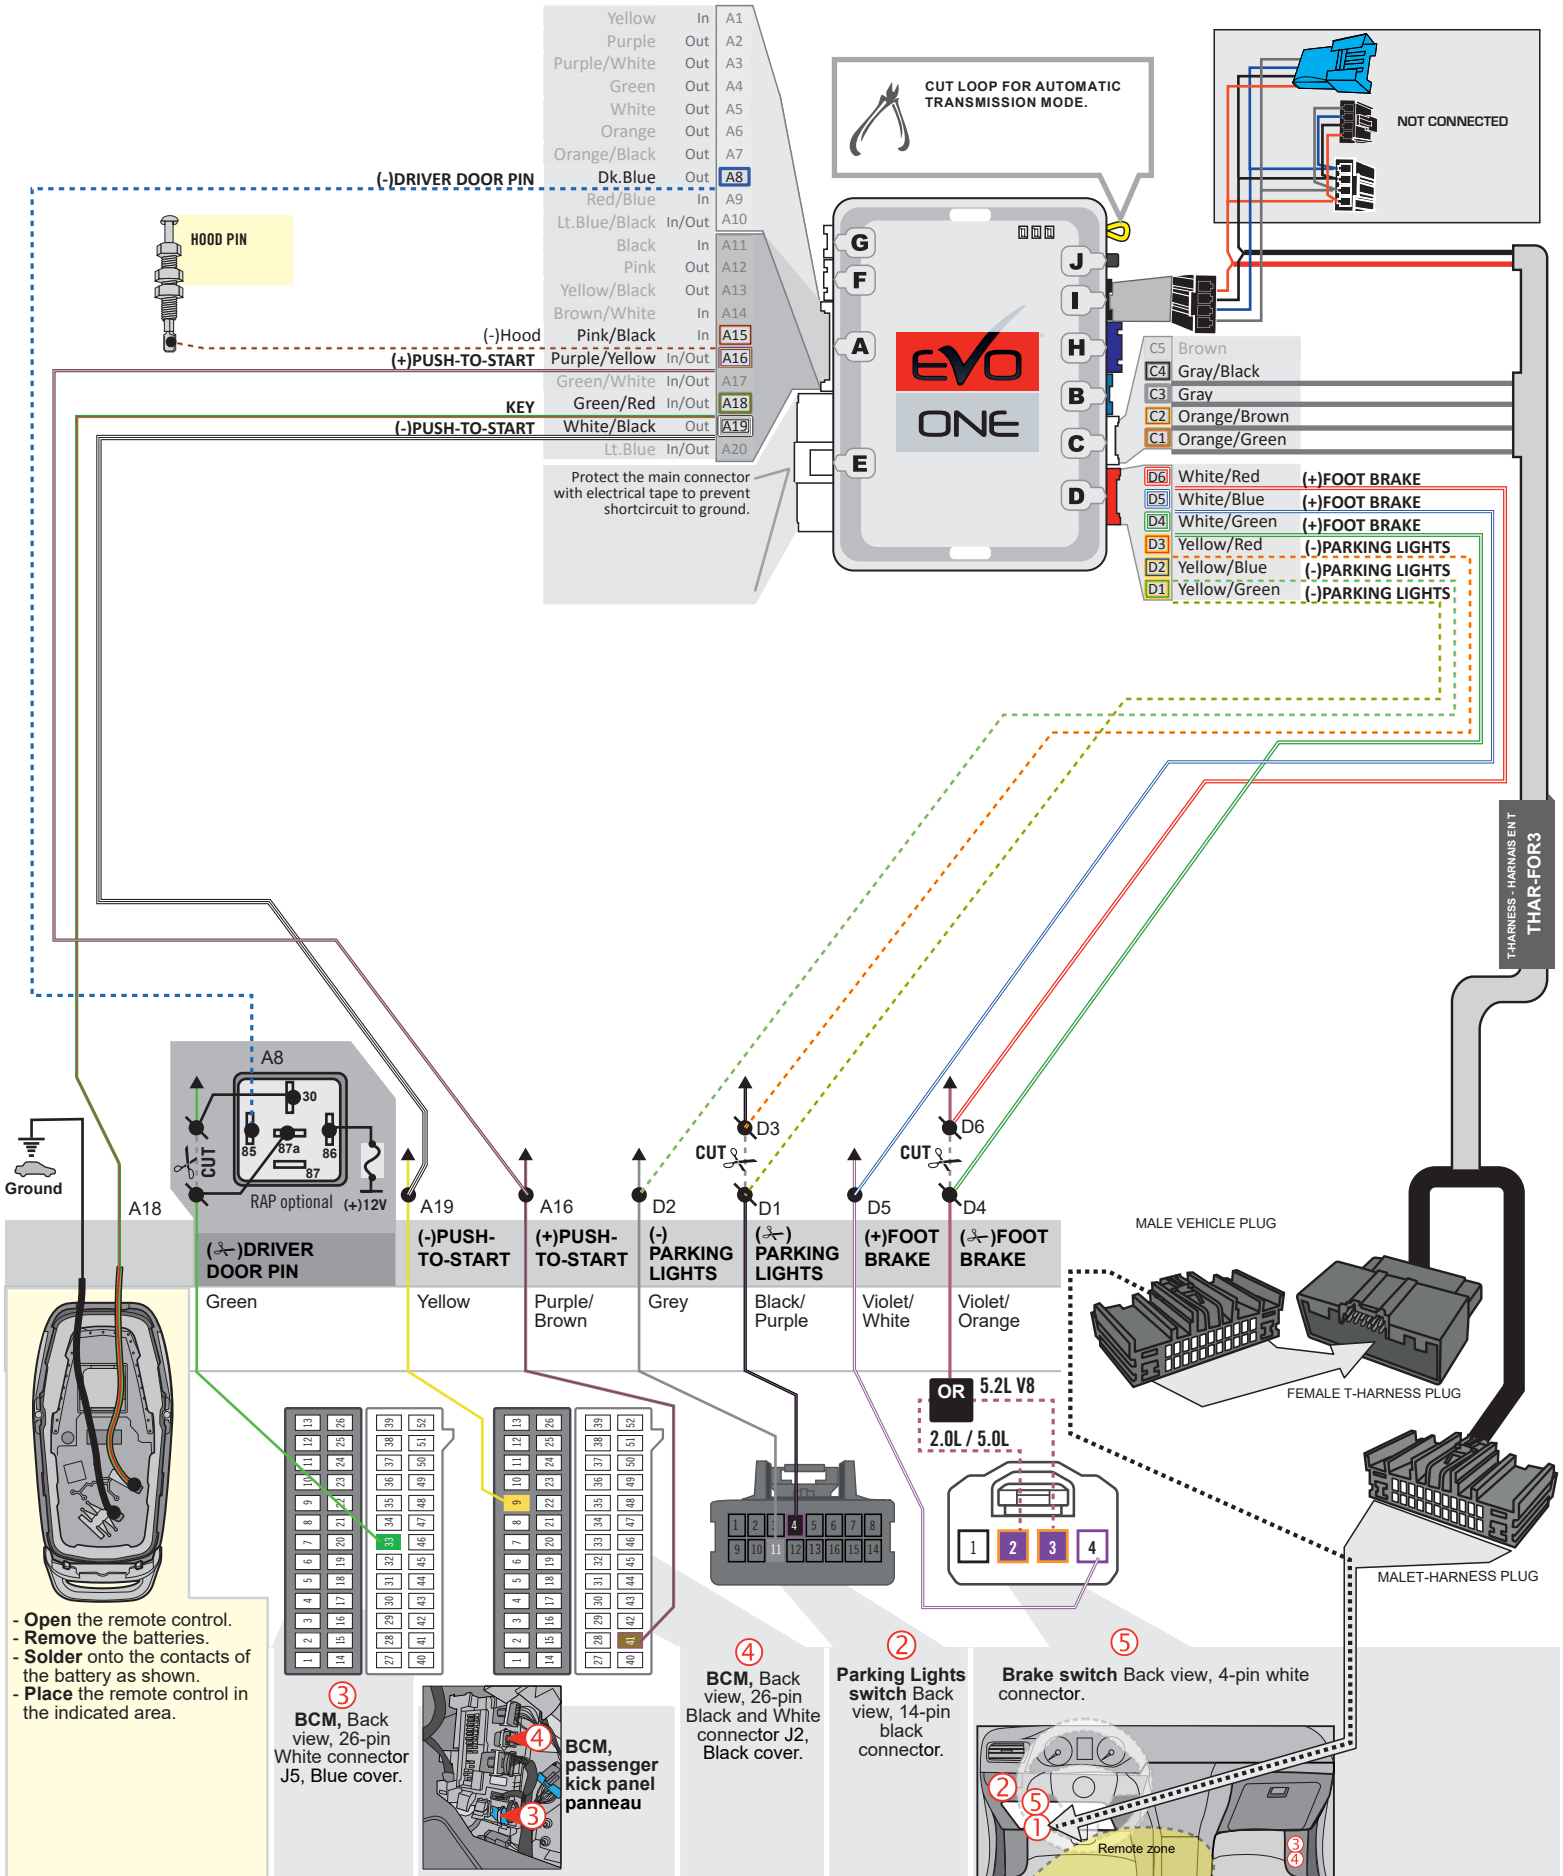

- Open the remote control.
- Remove the batteries.
- Solder onto the contacts of the battery as shown.
- Place the remote control in the indicated area.

③ BCM, Back view, 26-pin White connector J5, Blue cover.

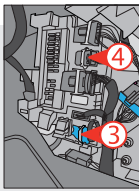


BCM, passenger kick panel panneau


④ BCM, Back view, 26-pin Black and White connector J2, Black cover.

② Parking Lights switch Back view, 14-pin black connector.

⑤ Brake switch Back view, 4-pin white connector.

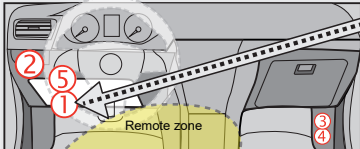


MANUAL TRANSMISSION WIRING CONNECTION

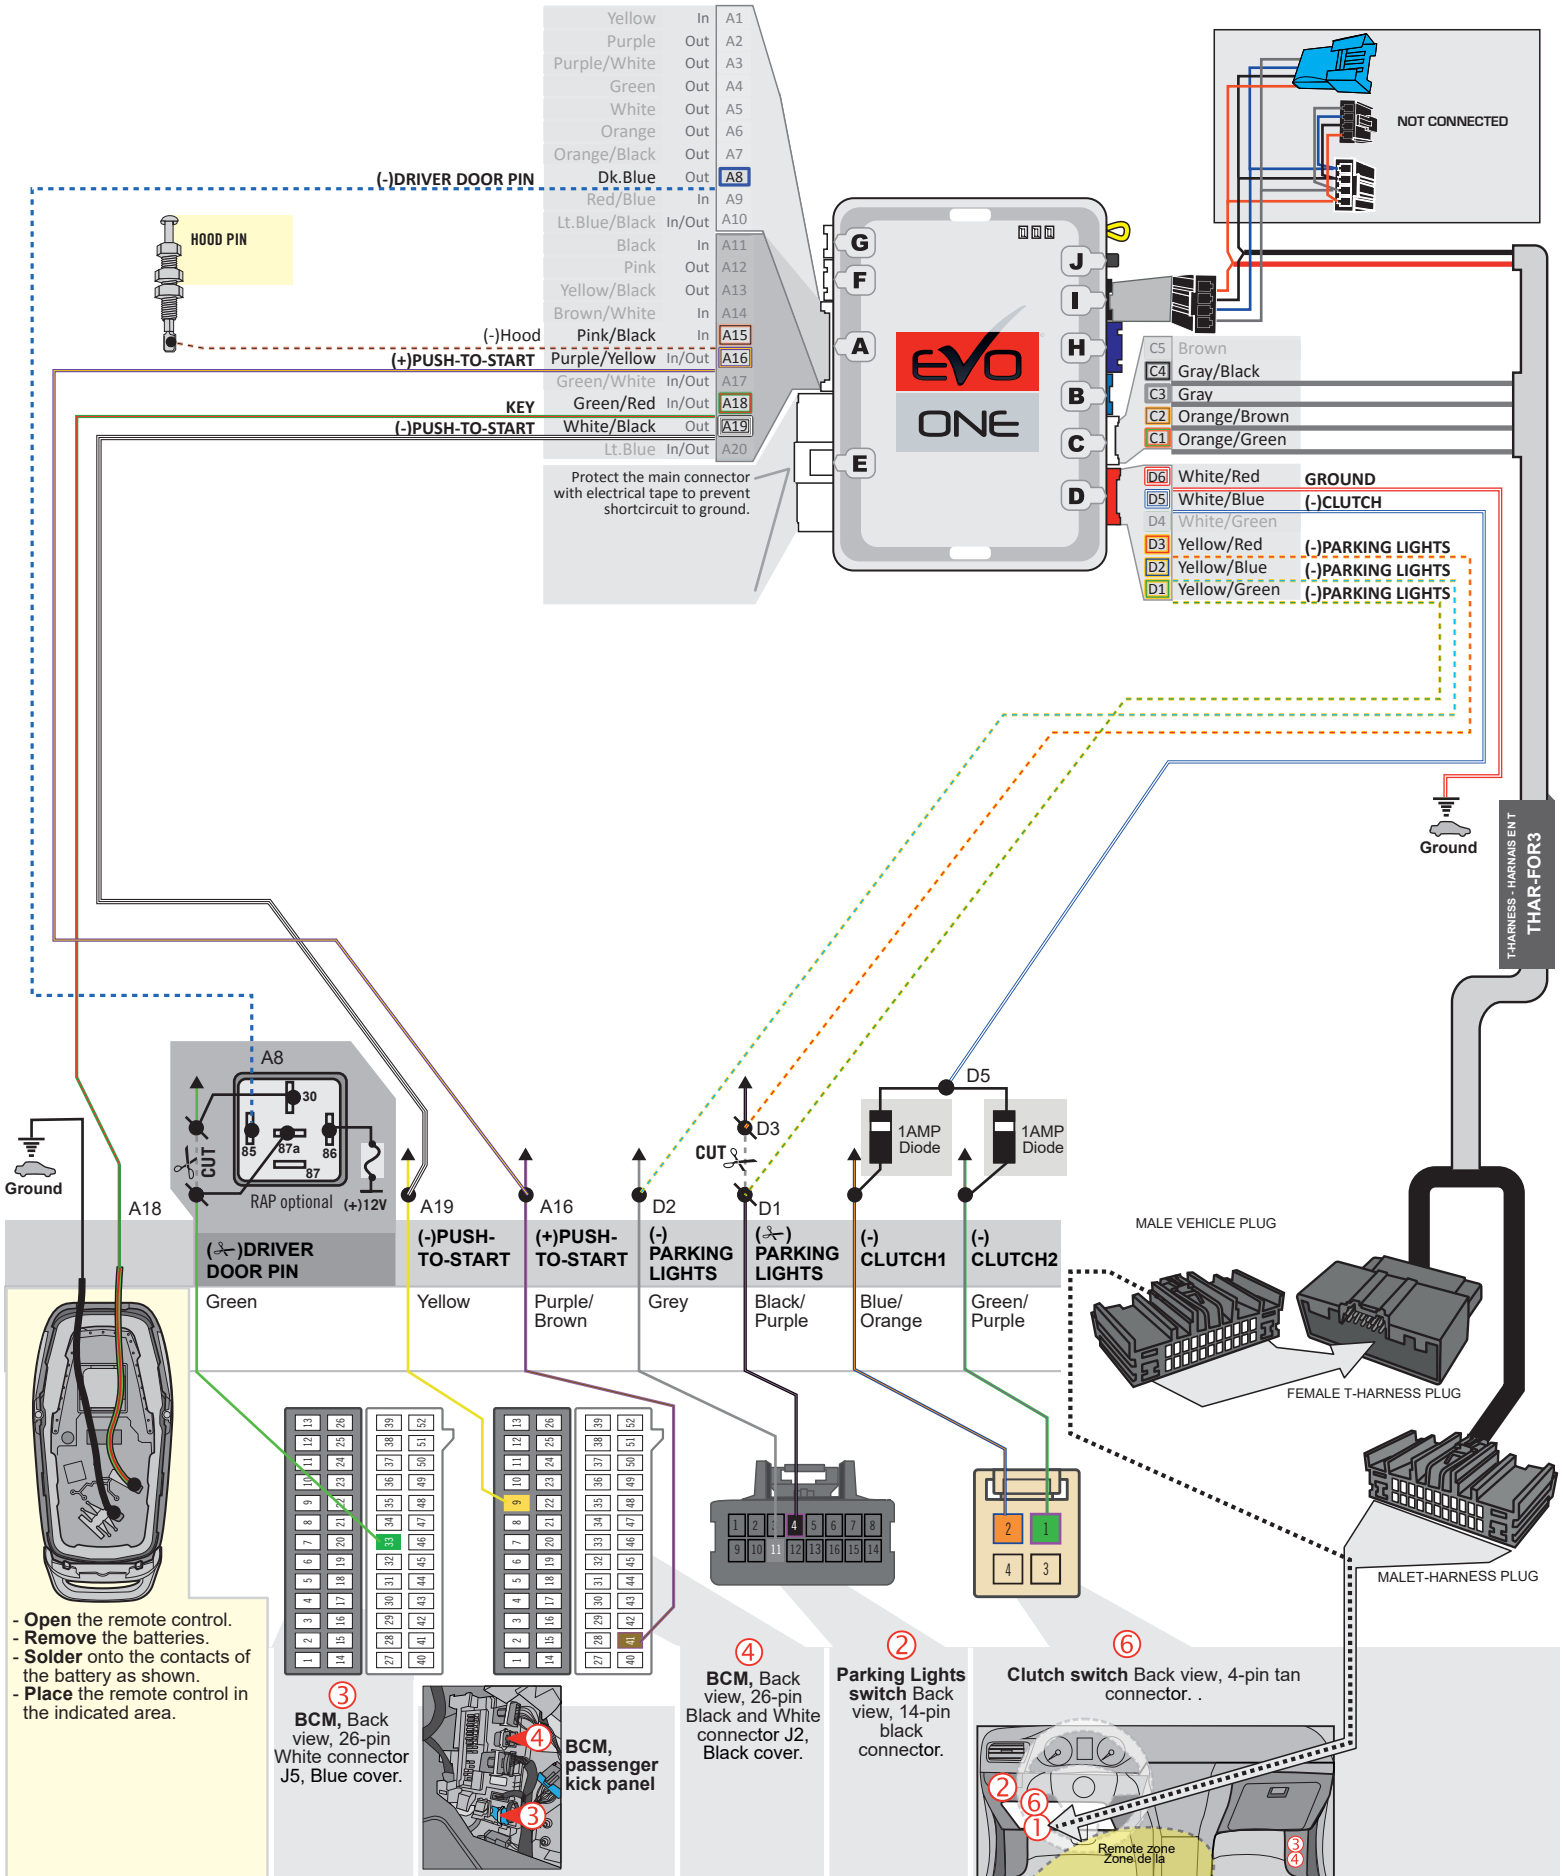


KEY BYPASS PROGRAMMING PROCEDURE

1

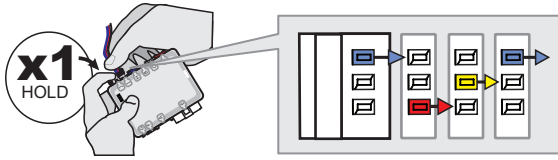


Press and hold the programming button:
Connect the 4-PIN Data-link harness (Black connector).

2

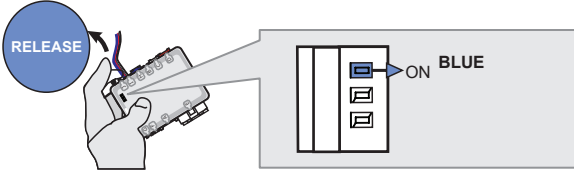


Release the programming button when the BLUE LED is ON.

 If the LED is not solid BLUE disconnect the 4-PIN Data-link harness (Black connector).




3

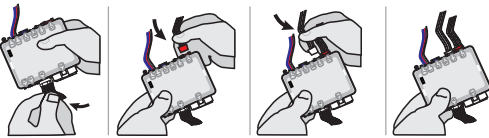


Insert the required remaining connectors.

4

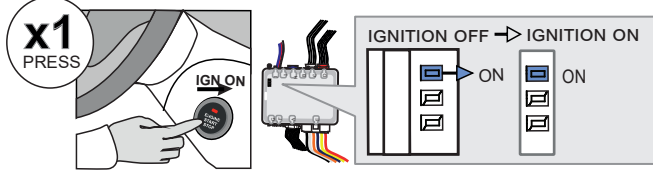

Press the Push-to-Start button to turn ON the ignition.

5

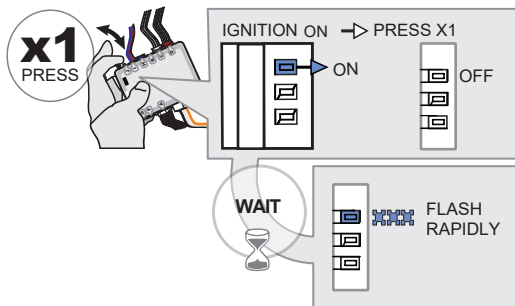


Press and release the programming button once (1x).

↳ The BLUE LED will turn off.

Wait,

↳ The BLUE LED will flash rapidly.

6

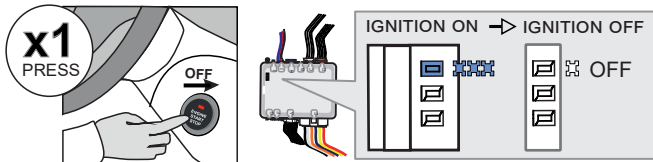

Press the Push-to-Start button once to turn off the ignition.


↳ The BLUE LED will turn off.

The module is now programmed.

REMOTE STARTER PROGRAMMING PROCEDURE |




REFER TO THE **QUICK INSTALL GUIDE** INCLUDED WITH THE MODULE FOR THE REMOTE STARTER PROGRAMMING.

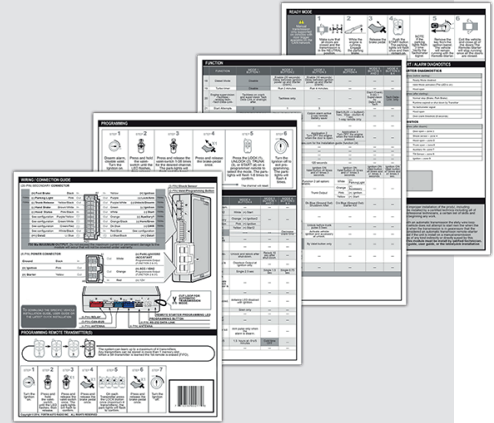

REMOTE STARTER FUNCTIONALITY |



 All doors must be closed.




Remote start the vehicle.



Unlock the doors with either:

 - The OEM remote
- The remote-starter remote
- Or the proximity remote



Enter the vehicle with the Intelligent Key.



The vehicle can now be put in to gear and driven.



If the vehicle is not unlocked with one of these conditions the remote-starter will shut down as soon as any door is opened.

THAR-FOR3 THARNESSE INSTALLATION

ADDENDUM - SUGGESTED WIRING CONFIGURATION


ONLY COMPATIBLE WITH AUTOMATIC TRANSMISSION VEHICLES.


Vehicle functions supported in this diagram (functional if equipped)

VEHICLE

YEARS

Immobilizer bypass	Lock	Unlock	Arrn	Disarm	RAP Disable	Horn	Parking Lights	Tachometer	Heated seats	Heated Mirrors	Rear defrost	Door Status	Trunk Status	Hood Status*	Hand-Brake Status	Foot-Brake Status	Active OEM Remote Start	R.S. OEM remote Stand Alone compatible
--------------------	------	--------	------	--------	-------------	------	----------------	------------	--------------	----------------	--------------	-------------	--------------	--------------	-------------------	-------------------	-------------------------	--

LINCOLN

Nautilus	Push-to-Start	2019	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
Navigator	Push-to-Start	2018-2019	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•


BYPASS FIRMWARE VERSION
4.[01]

MINIMUM

 To add the firmware version and the options, use the **FLASH LINK UPDATER** or **FLASH LINK MOBILE** tool, sold separately.

Program bypass option:
UNIT OPTION
DESCRIPTION
C1

OEM Remote status (Lock/Unlock) monitoring

D6

Push-to-Start

IF THE VEHICLE IS NOT EQUIPPED WITH FUNCTIONAL HOOD PIN:
A11
OFF

Hood trigger (Output Status).


Program remote starter option for R.S. OEM REMOTE STAND ALONE:
FUNCTION
MODE
DESCRIPTION
38
2

Enable Press 3x Lock to remote start with the OEM remote.


Parts required (Not included)

1x THAR-FOR3

MANDATORY INSTALL
*** HOOD PIN**

HOOD STATUS: THE HOOD PIN SWITCH (INCLUDED) MUST BE INSTALLED IF THE VEHICLE CAN BE REMOTE STARTED WITH THE HOOD OPEN, SET FUNCTION A11 TO OFF.

A11
OFF
SECURITY STICKER


Included

Notice: the installation of safety elements are mandatory. The hood pin and the sticker are essential security elements and must be installed.

THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.

DESCRIPTION





②


Parking Lights switch

①


Gateway module, Behind
OBD-II connector

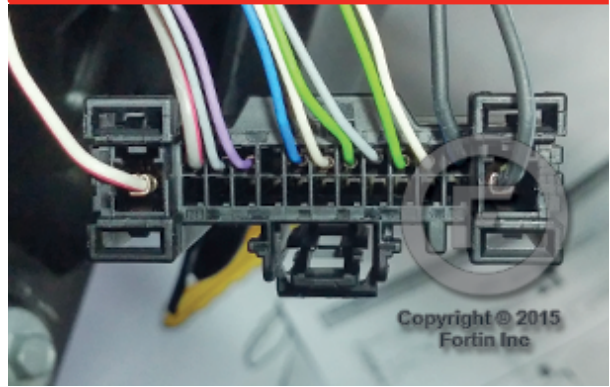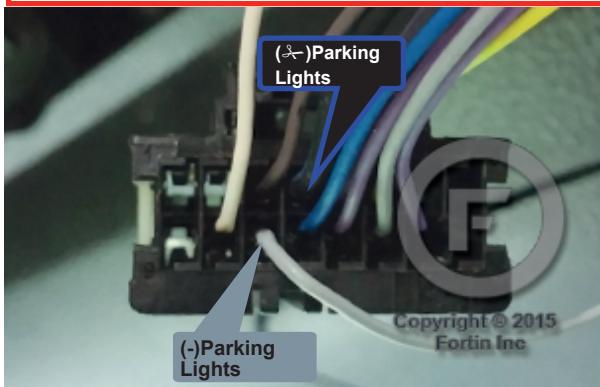


AUTOMATIC TRANSMISSION WIRING CONNECTION

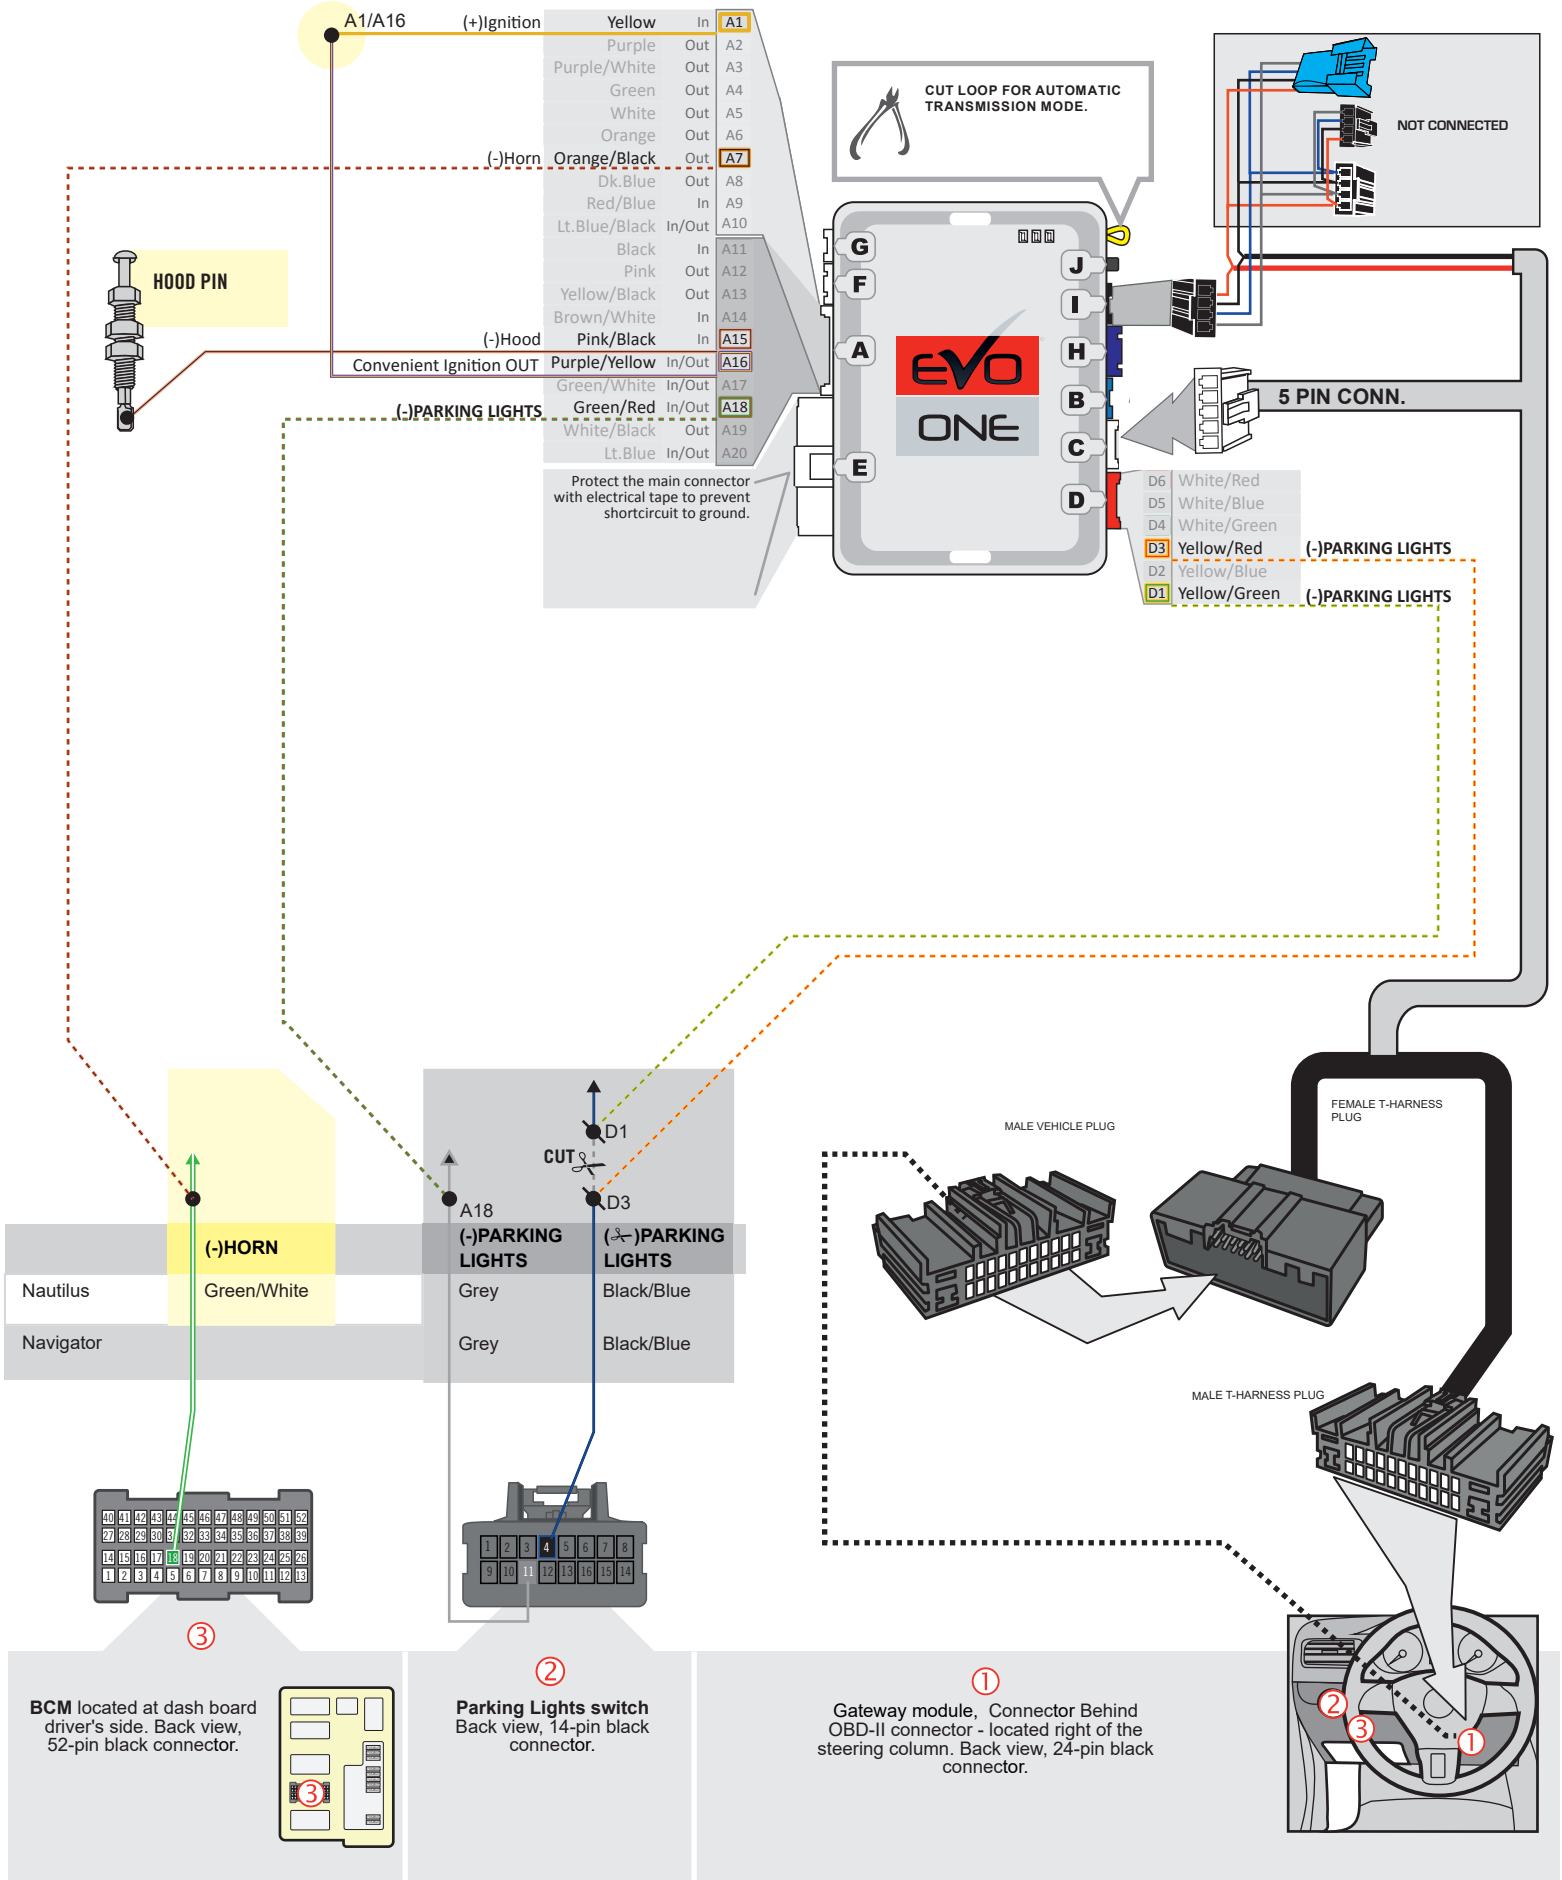

KEY BYPASS PROGRAMMING PROCEDURE 1/2

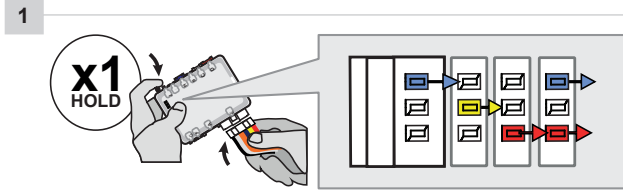


Press and hold the programming button: Insert the 6-Pin Main connector.

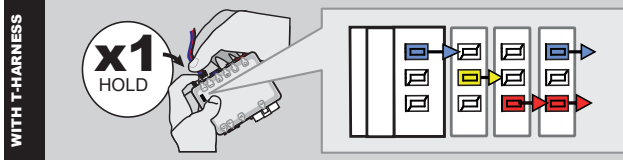



Press and hold the programming button: Connect the 4-PIN Data-link harness (Black connector).

↳ The LEDs will alternate between BLUE, RED, YELLOW & BLUE/RED flashes.

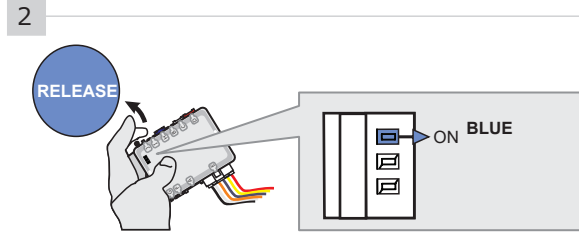


Release the programming button when the BLUE LED is ON.

 If the BLUE LED is not ON solid disconnect the 6-Pin Main connector and go back to step 1.

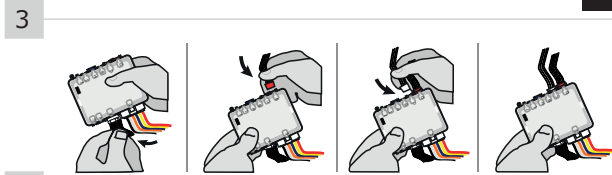


Insert the required remaining connectors.

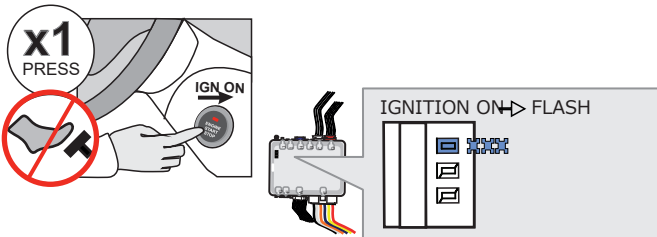


Do not press the brake pedal. **Press** the Push-to-Start button once to turn on the ignition.

↳ The BLUE LED will flash rapidly. Key bypass programmed.

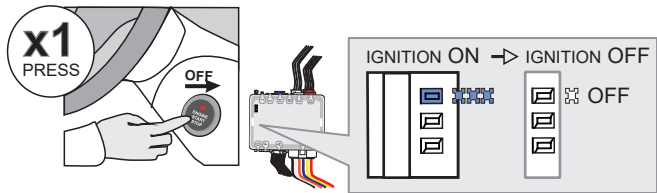

Press the Push-to-Start button once to turn off the ignition.

↳ The BLUE LED will turn off.

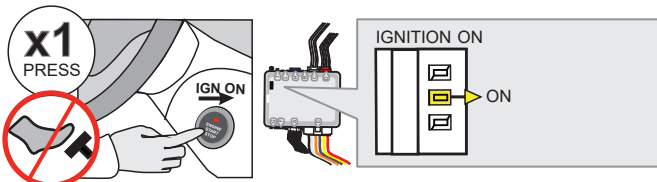

Do not press the brake pedal. **Press** the Push-to-Start button once to turn on the ignition.

↳ The YELLOW LED will turn ON.


KEY BYPASS PROGRAMMING PROCEDURE 2/2

7



Wait 5 seconds.

8

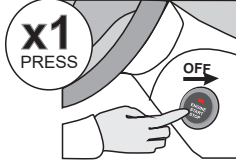

Press the Push-to-Start button once to turn off the ignition.




The module is now programmed.

REMOTE STARTER PROGRAMMING PROCEDURE



REFER TO THE **QUICK INSTALL GUIDE** INCLUDED WITH THE MODULE FOR THE REMOTE STARTER PROGRAMMING.

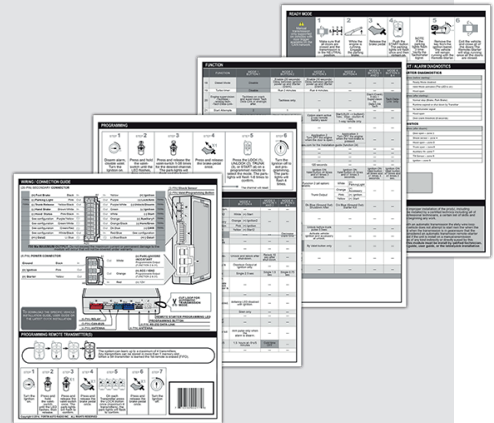

REMOTE STARTER FUNCTIONALITY



All doors must be closed.

 


Remote start the vehicle.



Unlock the doors with either:

- The OEM remote
- The remote-starter remote
- Or the proximity remote



Enter the vehicle with the SMART-KEY.



DO NOT PRESS THE BRAKE PEDAL.

Press and release the Push-to-Start button once.



Press the brake pedal. The vehicle can now be put in to gear and driven.

If the Smart-Key is not detected the vehicle will shut down.

THAR-FOR3 THARNESSE INSTALLATION

ADDENDUM - SUGGESTED WIRING CONFIGURATION


ONLY COMPATIBLE WITH AUTOMATIC TRANSMISSION VEHICLES.


Vehicle functions supported in this diagram (functional if equipped)

VEHICLE

YEARS

Immobilizer bypass	T-Harness	Lock	Unlock	Arm	Disarm	RAP Disable	Parking Lights	Tachometer	Door Status	Trunk Status	Hood Status*	Hand-Brake Status	Foot-Brake Status	Active OEM Remote Start	R. S. OEM remote Stand Alone compatible
--------------------	-----------	------	--------	-----	--------	-------------	----------------	------------	-------------	--------------	--------------	-------------------	-------------------	-------------------------	---

FORD

Ranger

Push-to-Start 2019

•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---



BYPASS FIRMWARE VERSION

4.[01]

MINIMUM

 To add the firmware version and the options, use the **FLASH LINK UPDATER** or **FLASH LINK MOBILE** tool, sold separately.


Program bypass option:

UNIT OPTION

DESCRIPTION

C1

OEM Remote status (Lock/Unlock) monitoring

D6

Push-to-Start

IF THE VEHICLE IS NOT EQUIPPED WITH FUNCTIONAL HOOD PIN:
A11
OFF

Hood trigger (Output Status).


Program remote starter option for R.S. OEM REMOTE STAND ALONE:

FUNCTION

MODE

DESCRIPTION

38
2

 Enable
Press 3x Lock to remote start with the OEM remote.

MANDATORY INSTALL
*** HOOD PIN**

HOOD STATUS: THE HOOD PIN SWITCH (INCLUDED) MUST BE INSTALLED IF THE VEHICLE CAN BE REMOTE STARTED WITH THE HOOD OPEN, SET FUNCTION A11 TO OFF.

A11
OFF
SECURITY STICKER


Included

Notice: the installation of safety elements are mandatory. The hood pin and the sticker are essential security elements and must be installed.

THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.


DESCRIPTION



① Gateway module, located at dash board driver's side,




WIRING CONNECTION

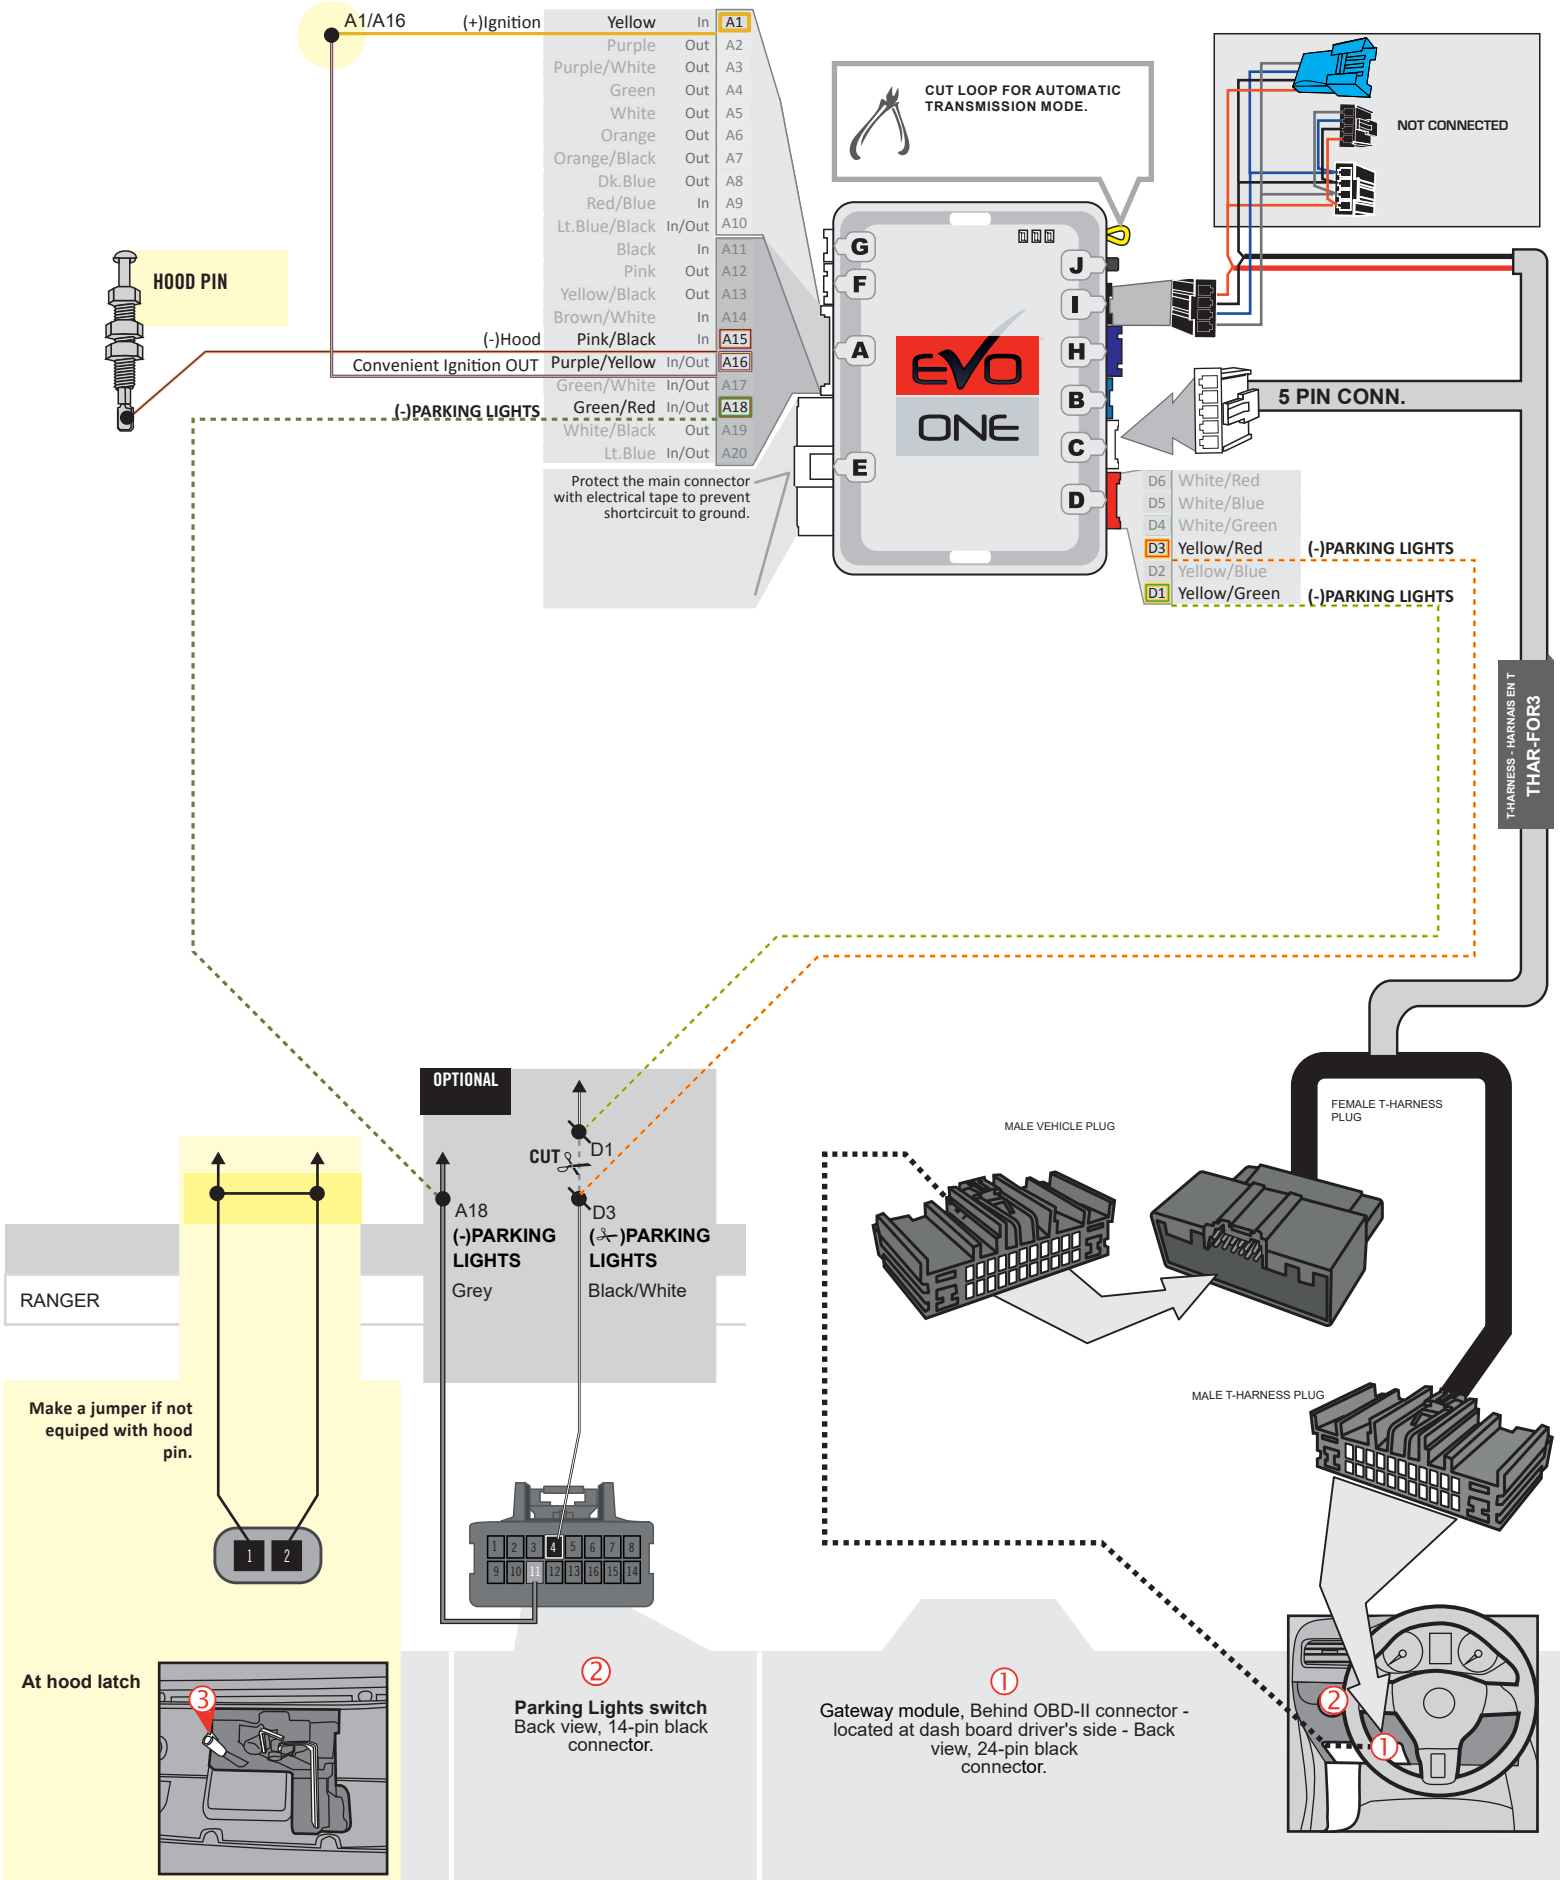


KEY BYPASS PROGRAMMING PROCEDURE 1/2

1

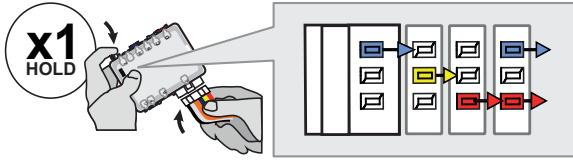

Press and hold the programming button:
Insert the 6-Pin Main connector.


WITH T-HARNESS

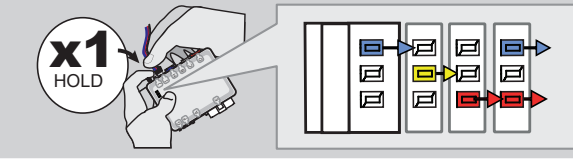

Press and hold the programming button:
Connect the 4-PIN Data-link harness (Black connector).


↳ The LEDs will alternate between BLUE, RED, YELLOW & BLUE/RED flashes.

2

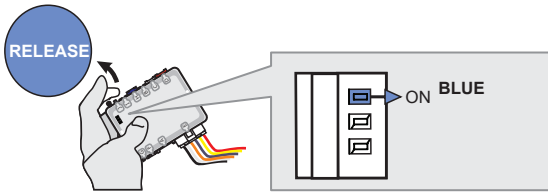


Release the programming button when the BLUE LED is ON.

 If the BLUE LED is not ON solid disconnect the 6-Pin Main connector and go back to step 1.




WITH T-HARNESS

 If the LED is not solid BLUE disconnect the 4 Pin connector (Data-Link) and go back to step 1.




3

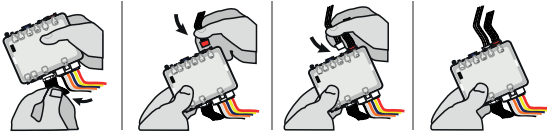

Insert the required remaining connectors.


4

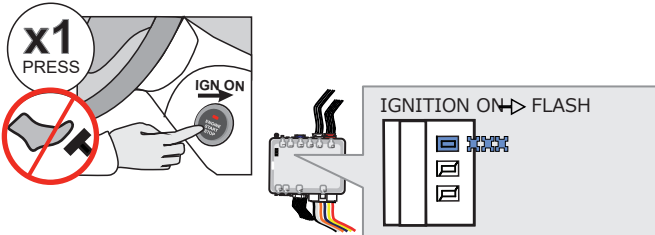

Do not press the brake pedal.
Press the Push-to-Start button once to turn on the ignition.

↳ The BLUE LED will flash rapidly.
Key bypass programmed.


5

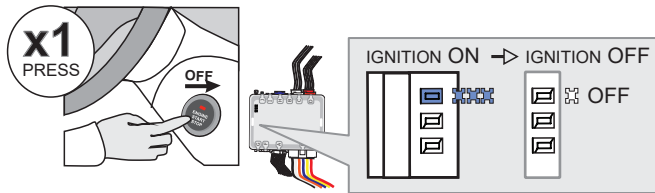

Press the Push-to-Start button once to turn off the ignition.

↳ The BLUE LED will turn off.

6

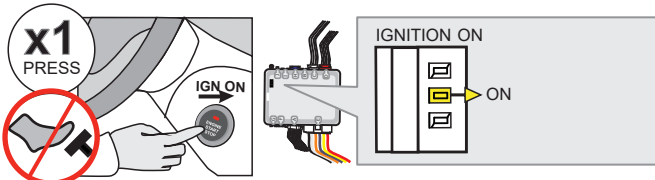

Do not press the brake pedal.
Press the Push-to-Start button once to turn on the ignition.

↳ The YELLOW LED will turn ON.


KEY BYPASS PROGRAMMING PROCEDURE 2/2

7



Wait 5 seconds.

8

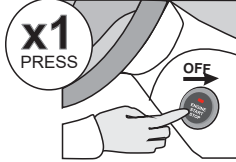

Press the Push-to-Start button once to turn off the ignition.




The module is now programmed.

REMOTE STARTER PROGRAMMING PROCEDURE



REFER TO THE **QUICK INSTALL GUIDE** INCLUDED WITH THE MODULE FOR THE REMOTE STARTER PROGRAMMING.

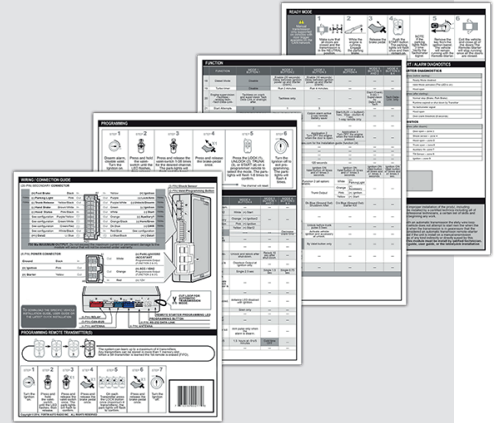

REMOTE STARTER FUNCTIONALITY



All doors must be closed.

 


Remote start the vehicle.



Unlock the doors with either:

- The OEM remote
- The remote-starter remote
- Or the proximity remote

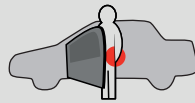

Enter the vehicle with the SMART-KEY.



DO NOT PRESS THE BRAKE PEDAL.

Press and release the Push-to-Start button once.



Press the brake pedal. The vehicle can now be put in to gear and driven.

If the Smart-Key is not detected the vehicle will shut down.

THAR-FOR3 THARNESSE INSTALLATION

ADDENDUM - SUGGESTED WIRING
CONFIGURATION



ONLY COMPATIBLE WITH AUTOMATIC TRANSMISSION VEHICLES.



VEHICLE

YEARS

Vehicle functions supported in this diagram (functional if equipped) |

FORD

Transit Connect

Key 2019

Immobilizer bypass	Lock	Unlock	Arm	Disarm	RAP Disable	Parking Lights	Tachometer	Heated seats	Heated Mirrors	Rear defrost	Door Status	Trunk Status	Hood Status*	Hand-Brake Status	Foot-Brake Status	Active OEM Remote Start	R.S. OEM remote Stand Alone compatible
•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•

BYPASS FIRMWARE VERSION

4.02

ONLY - SEULEMENT

To add the firmware version and the options, use the **FLASH LINK UPDATER** or **FLASH LINK MOBILE** tool, sold separately.

Program bypass option:

C1

DESCRIPTION

OEM Remote status (Lock/Unlock) monitoring

IF THE VEHICLE IS NOT EQUIPPED WITH FUNCTIONAL HOOD PIN:

A11


OFF

DESCRIPTION

Hood trigger (Output Status).

	Program remote starter option for R.S. OEM REMOTE STAND ALONE:	FUNCTION	MODE	DESCRIPTION
		38	2	Enable Press 3x Lock to remote start with the OEM remote.

 NOTES



The vehicle must be equipped with the OEM remote with the door locks.

MANDATORY INSTALL I

* HOOD PIN



HOOD STATUS: THE HOOD PIN SWITCH (INCLUDED) MUST BE INSTALLED IF THE VEHICLE CAN BE REMOTE STARTED WITH THE HOOD OPEN, SET FUNCTION A11 TO OFF.

A11

OFF

SECURITY STICKER



Included

Notice: the installation of safety elements are mandatory. The hood pin and the sticker are essential security elements and must be installed.



THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.

DESCRIPTION




② Parking Lights switch



① Gateway module, located at dash board driver's side,

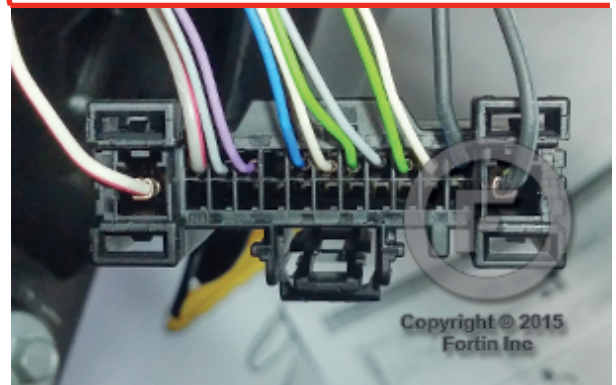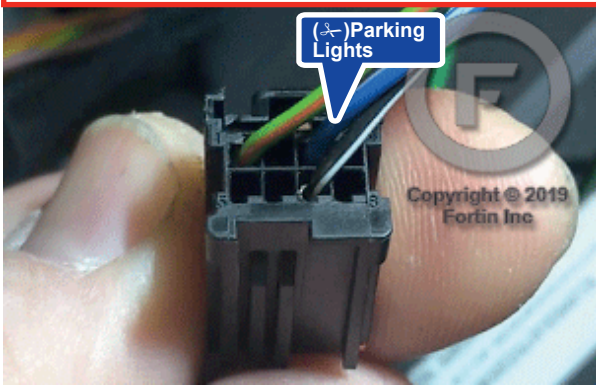

④ Under the hood If not equipped with hood pin.

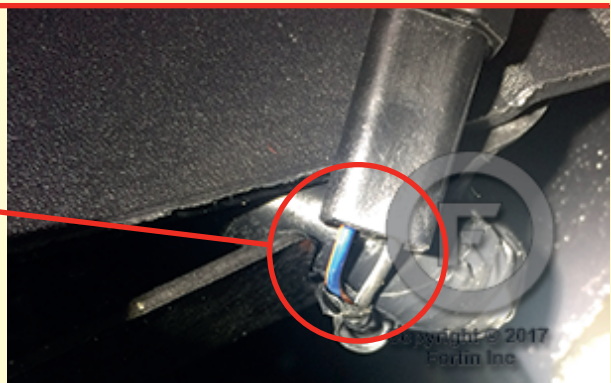


AUTOMATIC TRANSMISSION WIRING CONNECTION

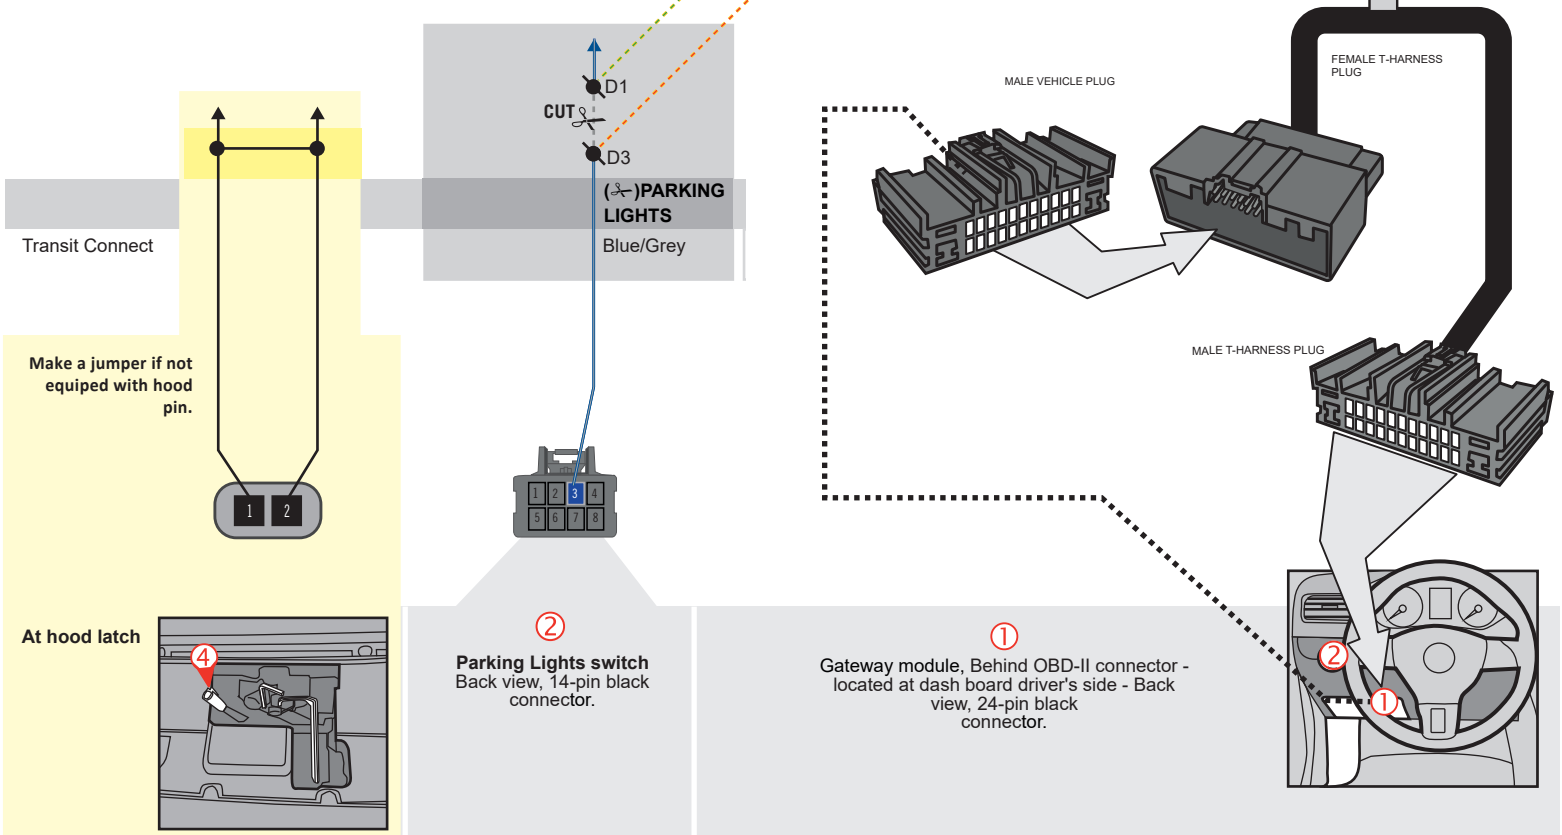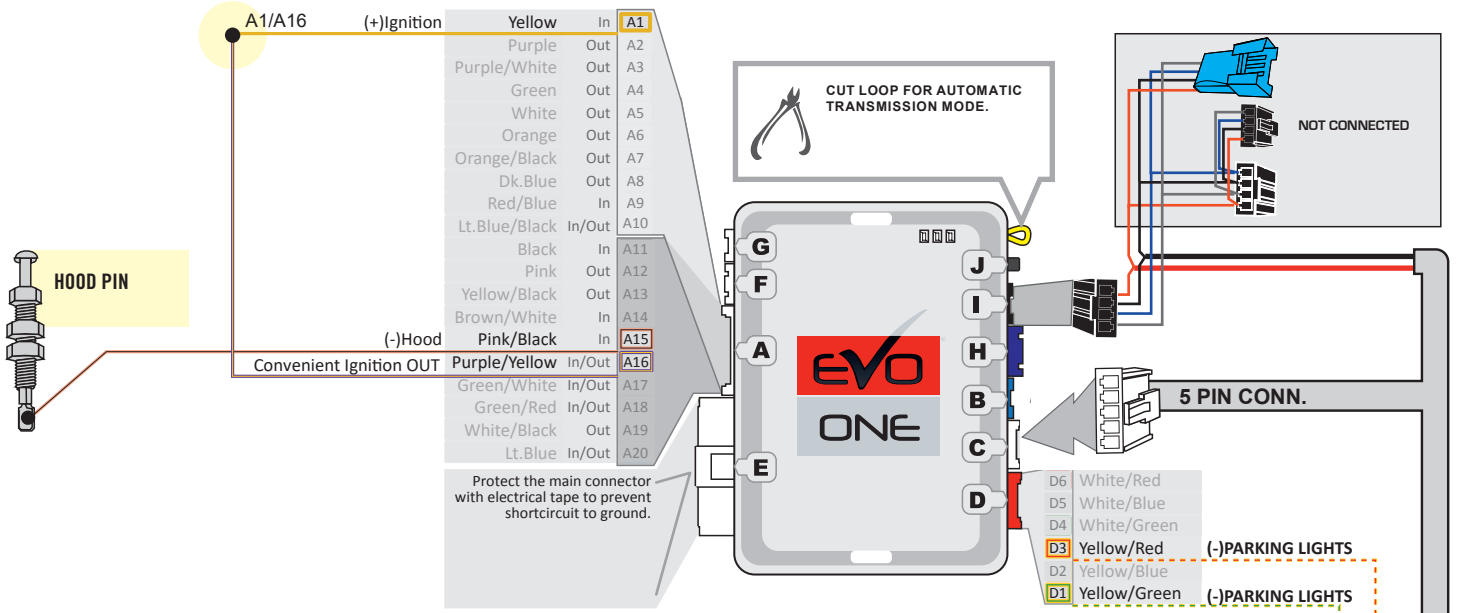

KEY BYPASS PROGRAMMING PROCEDURE 1/2

1

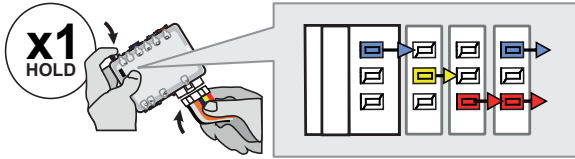

Press and hold the programming button:
Insert the 6-Pin Main connector.


WITH T-HARNESS



Press and hold the programming button:
Connect the 4-PIN Data-link harness (Black connector).


↳ The LEDs will alternate between BLUE, RED, YELLOW & BLUE/RED flashes.

2

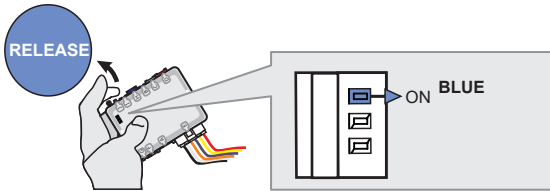


Release the programming button when the BLUE LED is ON.

 If the BLUE LED is not ON solid disconnect the 6-Pin Main connector and go back to step 1.




WITH T-HARNESS

 If the LED is not solid BLUE disconnect the 4 Pin connector (Data-Link) and go back to step 1.




3

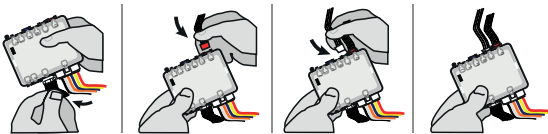

Insert the required remaining connectors.

4

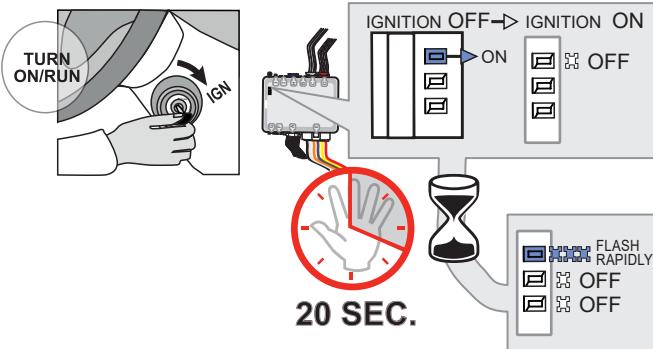


Turn the key to the Ignition ON/RUN position.

↳ The BLUE LED will turn OFF.

↳ The BLUE LED will flash rapidly.

5


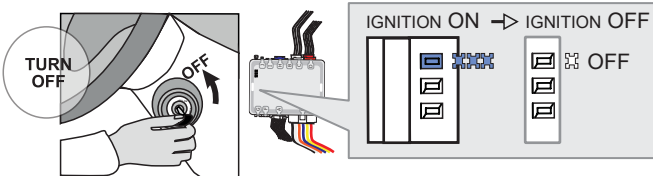


Turn the key to the OFF position.

↳ The BLUE LED will turn off.

KEY BYPASS PROGRAMMING PROCEDURE 2/2


6

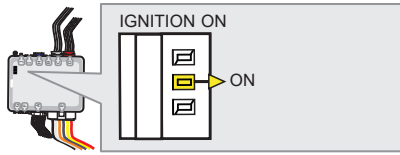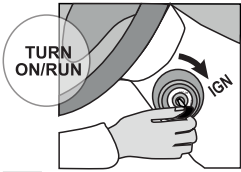

Turn the key to the Ignition ON/RUN position.


↳ The YELLOW LED will turn ON.

7

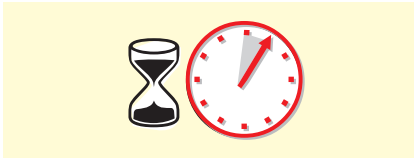

Wait 5 seconds.

8

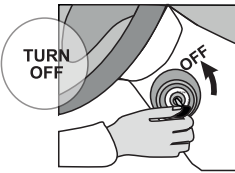

Turn the key to the OFF position.




The module is now programmed.

REMOTE STARTER PROGRAMMING PROCEDURE



REFER TO THE **QUICK INSTALL GUIDE** INCLUDED WITH THE MODULE FOR THE REMOTE STARTER PROGRAMMING.

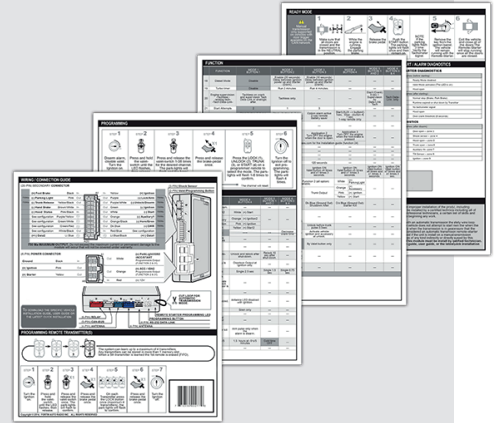

REMOTE STARTER FUNCTIONALITY



 
All doors must be closed.



Remote start the vehicle.



Unlock the doors with the remote-starter remote or the OEM remote.



Insert and Turn the key to the Ignition ON/RUN position.



Press the brake pedal.



The vehicle can now be put in to gear and driven.