

REGULAR INSTALLATION AND THAR-GM6 INSTALLATION

ADDENDUM - SUGGESTED WIRING
CONFIGURATION

Vehicle functions supported in this diagram (functional if equipped)



VEHICLE

YEARS

Immobilizer bypass	Lock	Unlock	Arm	Disarm	Parking Light	Trunk (open)	RAP Disable	Tachometer	Door Status	Trunk Status	Hand-Brake Status	Foot-Brake Status	OEM Remote Monitoring
•	•	•	•	•	•	•	•	•	•	•	•	•	•

CHEVROLET

Impala	Push-To-Start	2014-2019	•	•	•	•	•	•	•	•	•	•	•
--------	---------------	-----------	---	---	---	---	---	---	---	---	---	---	---

FIRMWARE VERSION

70.[41]

GM MINIMUM

To add the firmware version and the options, use the **FLASH LINK UPDATER** or **FLASH LINK MOBILE** tool, sold separately.

<p>IF THE VEHICLE IS NOT EQUIPPED WITH FUNCTIONAL HOOD PIN:</p>	A11	OFF	Hood trigger (Output Status).
--	------------	-----	-------------------------------

	UNIT OPTION	DESCRIPTION
<p>Program bypass option:</p>	C1	OEM Remote status (Lock/Unlock) monitoring
	D6	Push-to-Start

	<p>ATTENTION!</p>	<p>DATE: XX-XX</p>	E5	OFF	<p>SPECIAL FUNCTIONS: BY DEFAULT DEACTIVATED</p>
				ON	<p>MANUFACTURED MODULES BETWEEN: 04/2018 TO 04/2019</p>

MANDATORY INSTALL

*HOOD PIN



HOOD STATUS: THE HOOD PIN SWITCH MUST BE INSTALLED IF THE VEHICLE CAN BE REMOTE STARTED WITH THE HOOD OPEN, SET FUNCTION **A11** TO OFF.

A11	OFF
------------	-----

Notice: the installation of safety elements are mandatory. The hood pin is an essential security element and must be installed.

THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.

DESCRIPTION

Parts required (Not included) PAGE



WIRE TO WIRE DIAGRAM

	1X 1Amp Diode 1X 5 Amp Fuse 1X 1k Ohm Resistor	Page 3
--	--	--------






THARNESSE DIAGRAM

THARNESSE THAR-GM6	1x THAR-GM6	Page 4
--------------------	-------------	--------

BCM

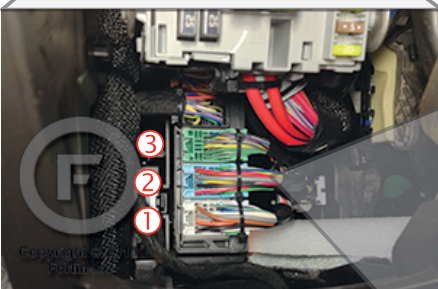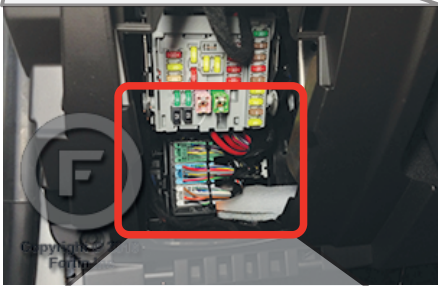


Impala

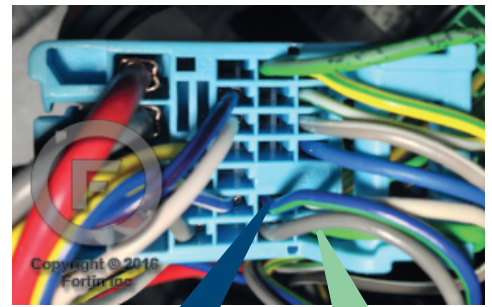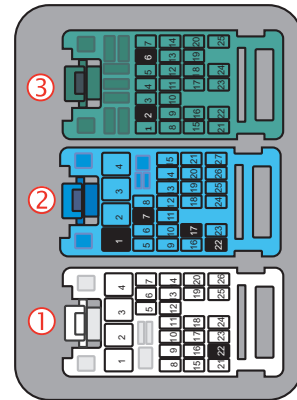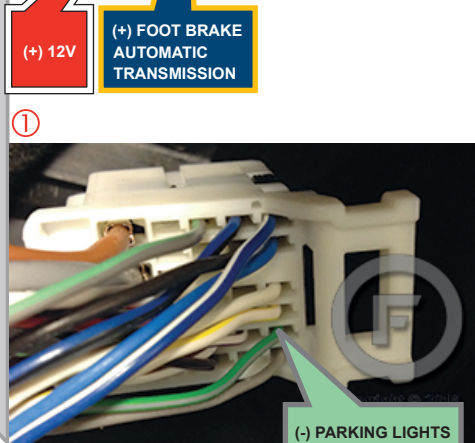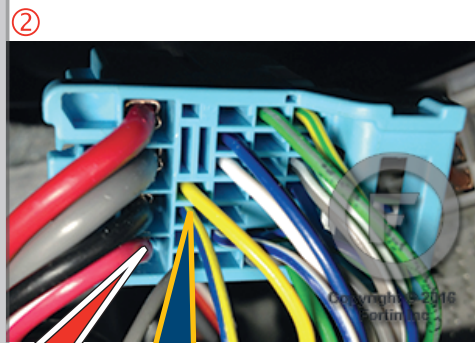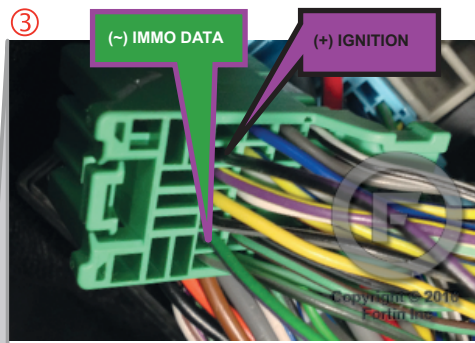


(-) START/STOP (-) CAN SW

AUTOMATIC TRANSMISSION WIRING CONNECTION

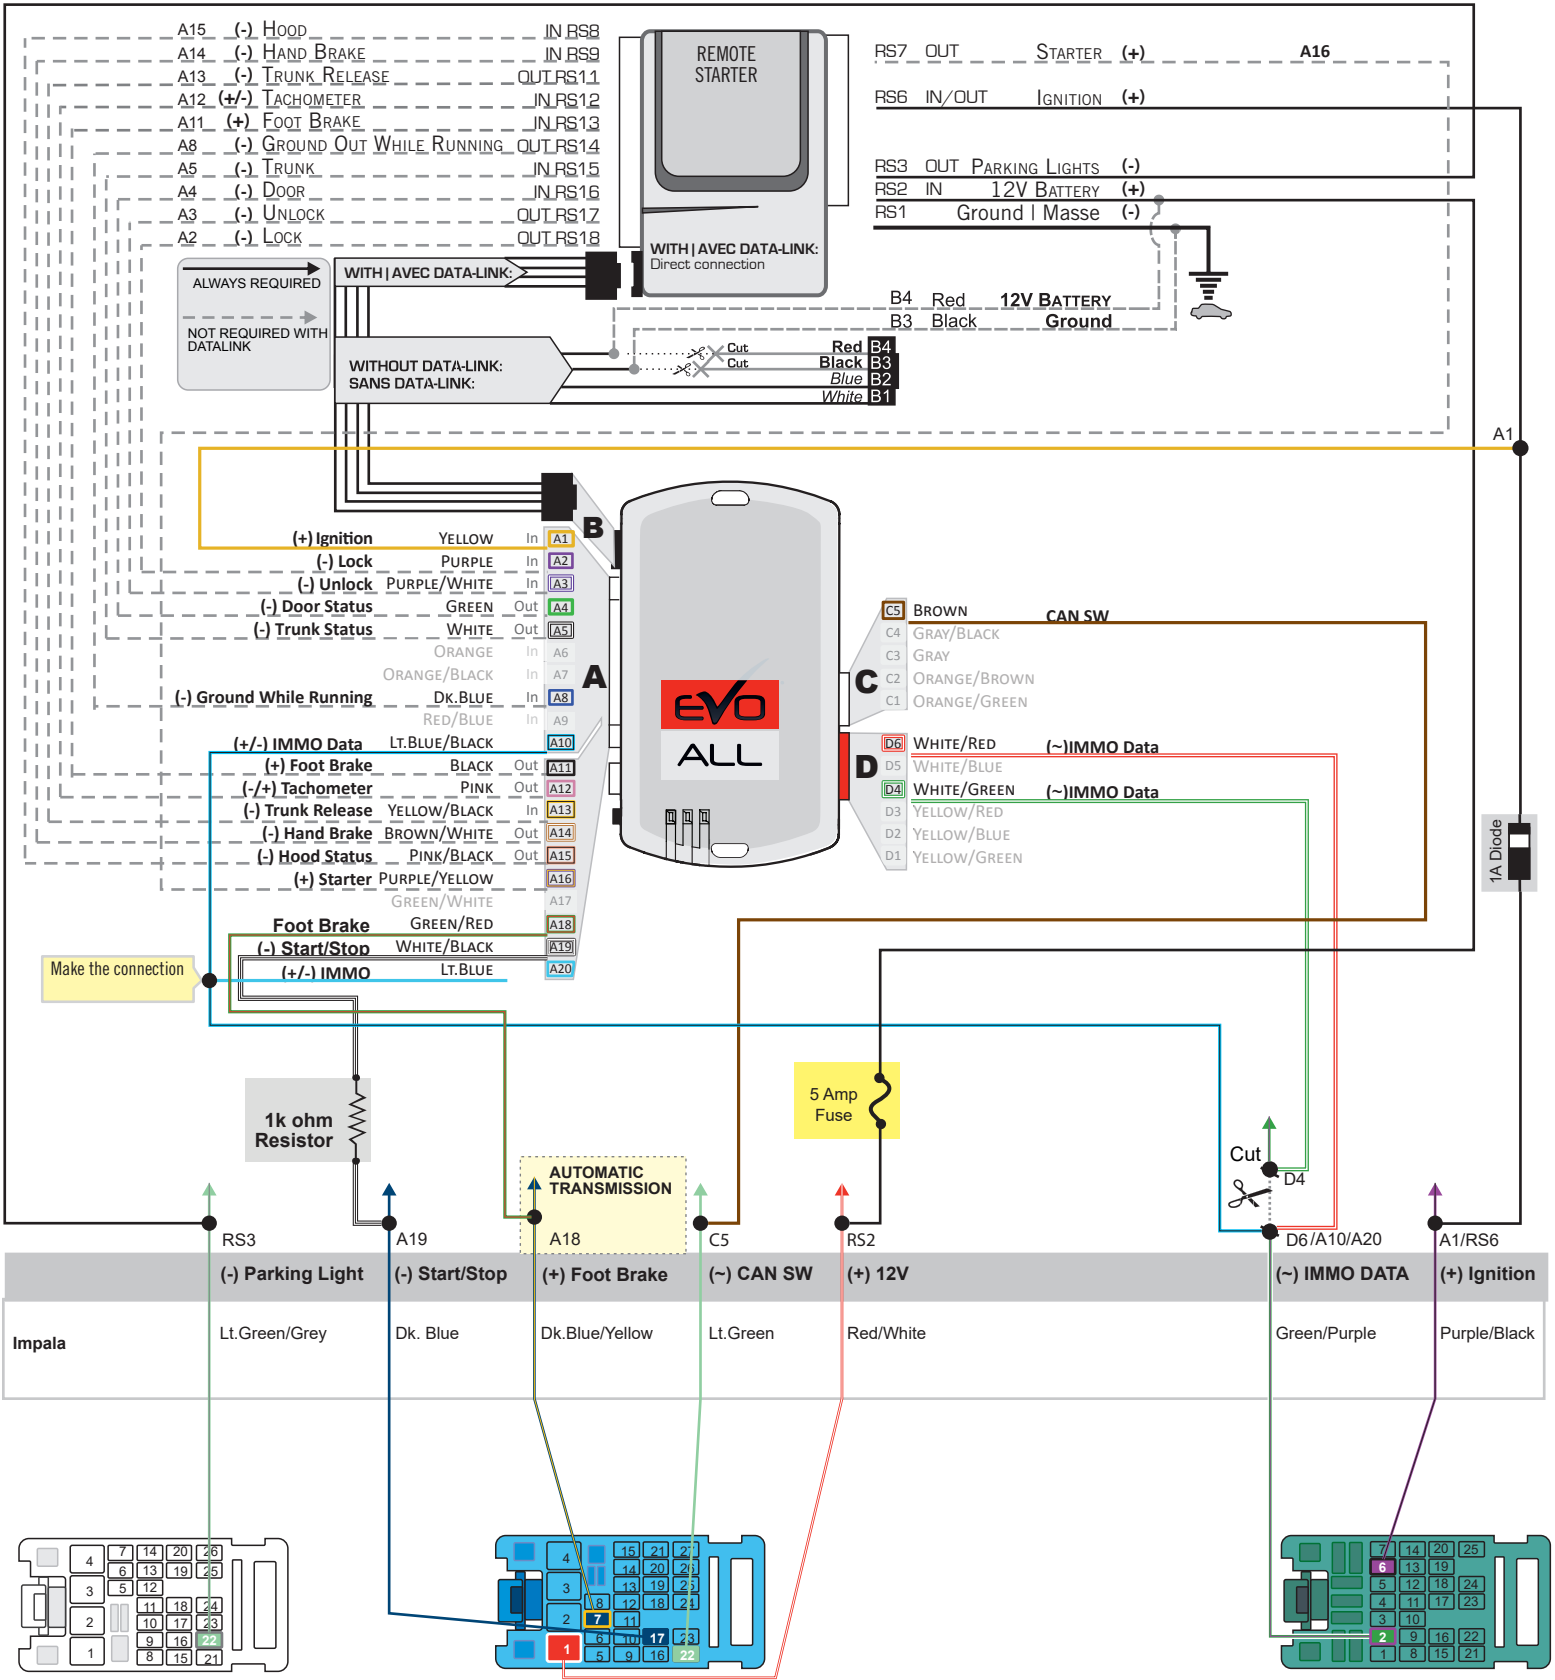


① Back view, 26-Pin White connector, at BCM.

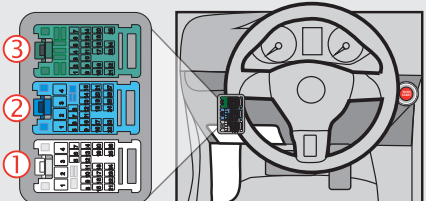


② Back view, 27-Pin Blue connector, at BCM.

③ Back view, 25-Pin Green connector, at BCM.


THAR-GM6 | WIRING CONNECTION |

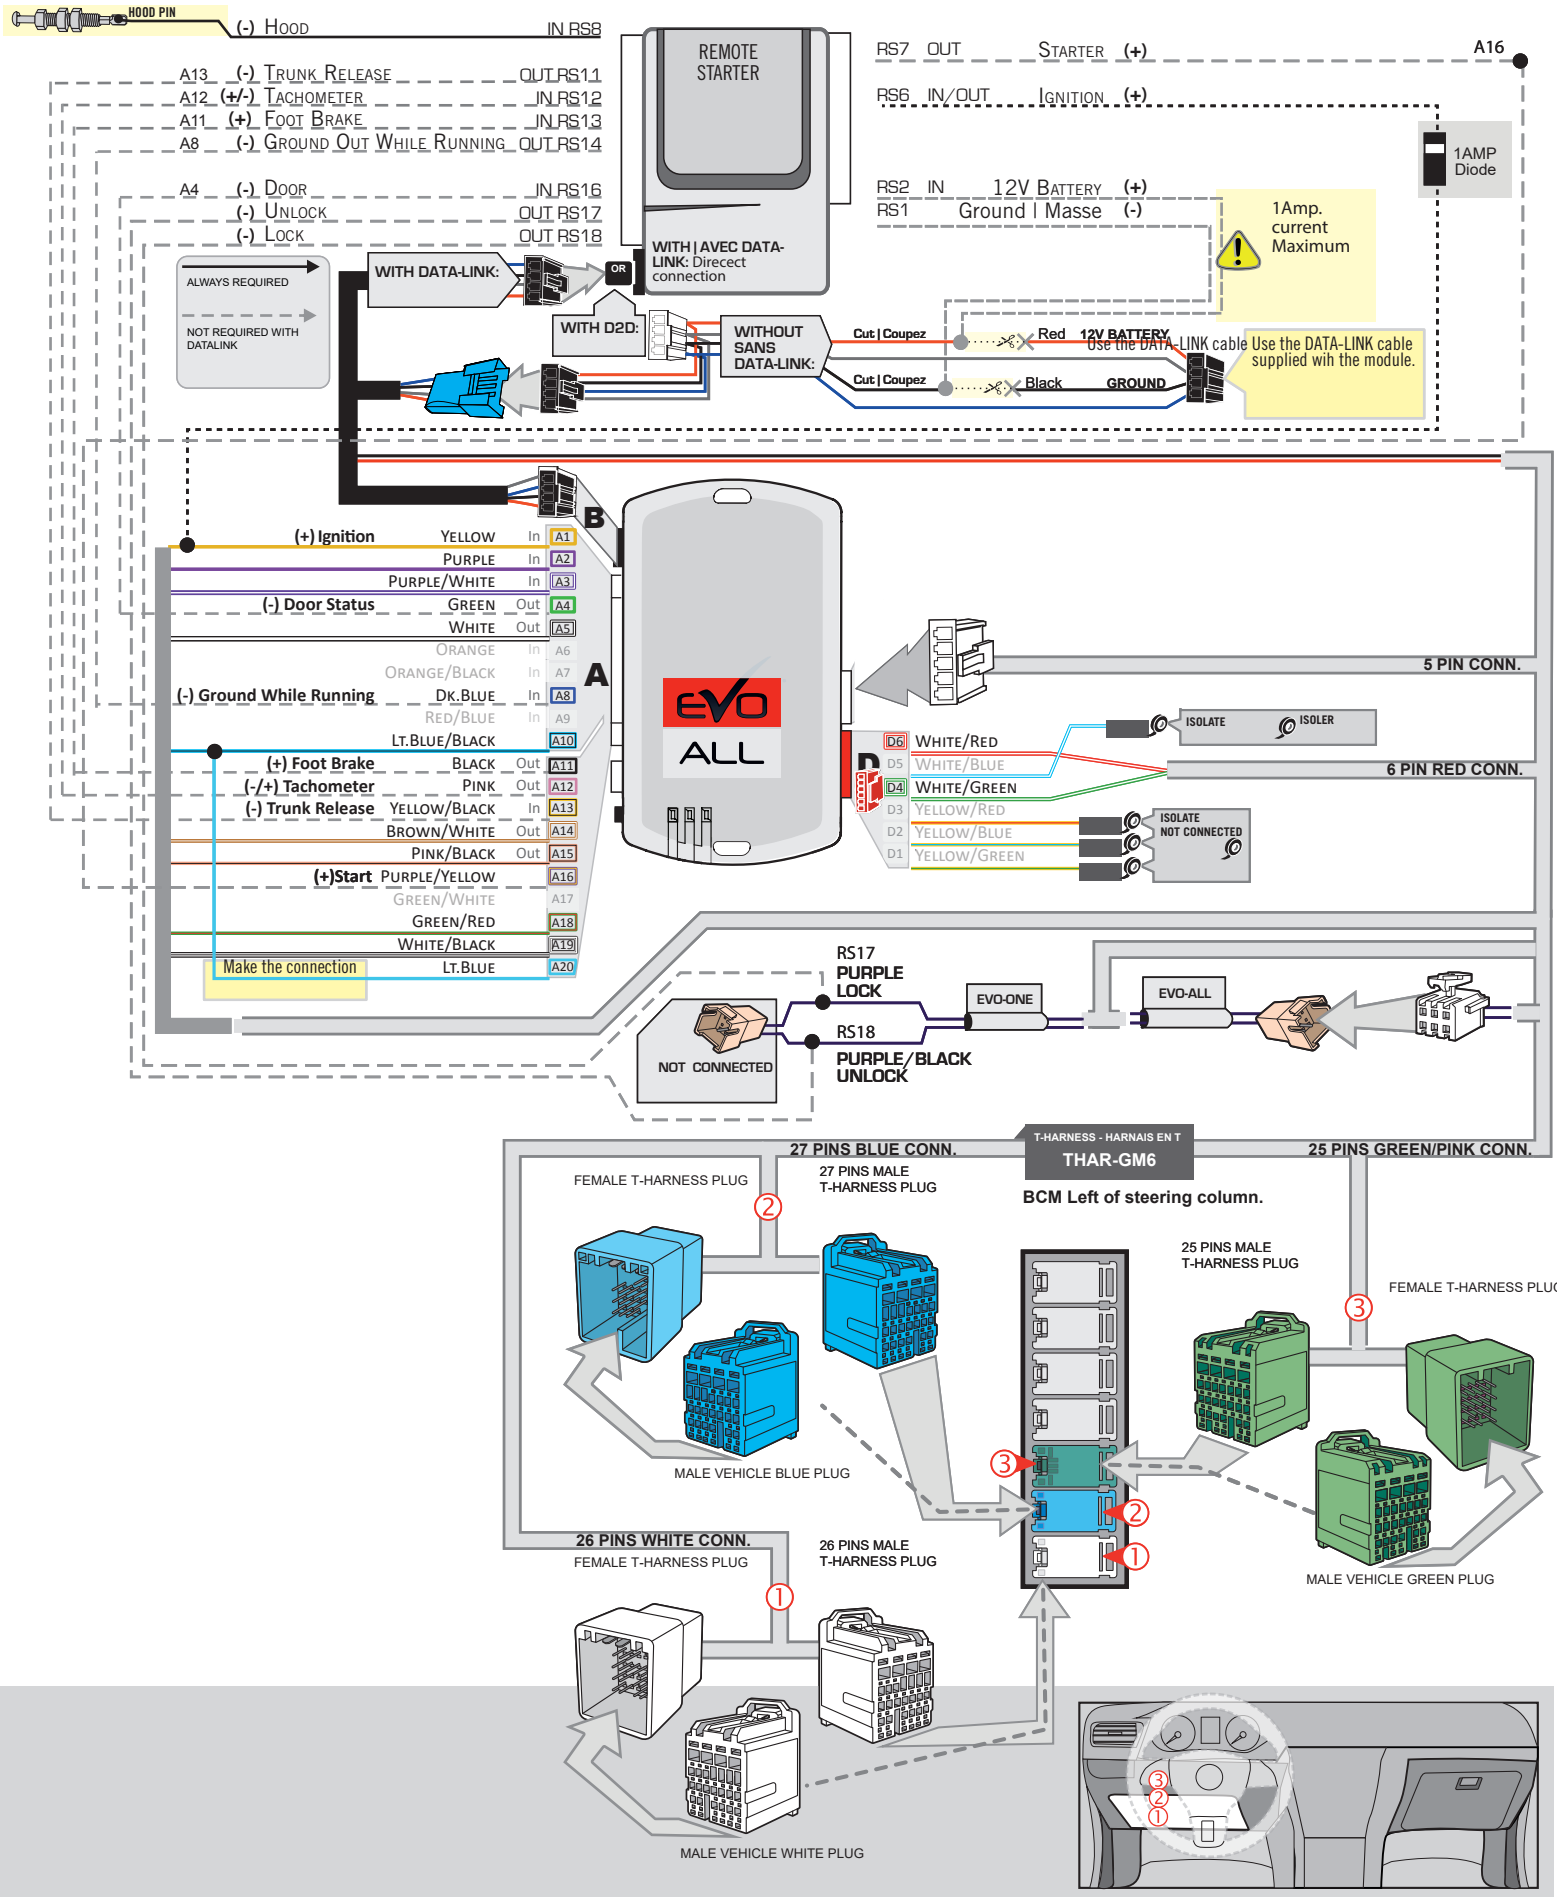


KEY BYPASS PROGRAMMING PROCEDURE 1/3 |



- 1 Remove** the battery from the OEM remote.
- 2 Place** the OEM remote into the transmitter pocket of the center console.
Refer to vehicle user guide for keyport location.

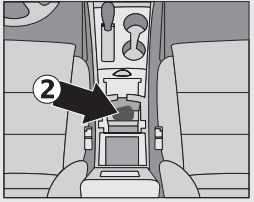


1

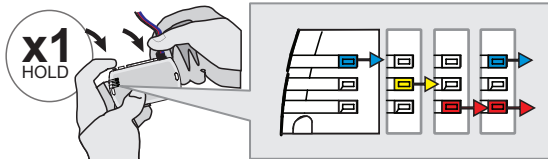

Press and hold the programming button:
Connect the 4-PIN Data-link harness (Black connector).


↳The Blue, Red, Yellow and Blue & Red LEDs will alternatively illuminate.

2

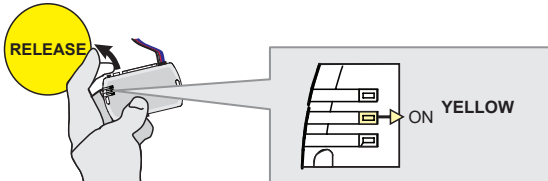


Release the programming button when the LED is YELLOW.

 If the LED is not solid YELLOW disconnect the 4-Pin connector (Data-Link) and go back to step 1.




3

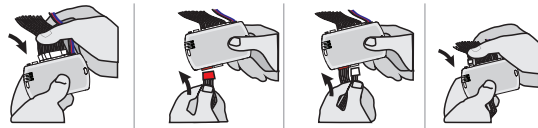

Insert the required remaining connectors.

4

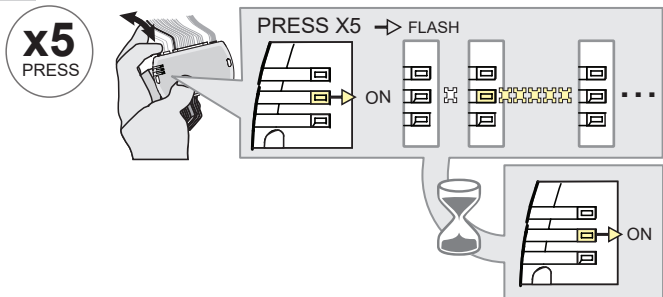


Press and release the programming button five (5x) times.

↳The YELLOW LED will flash 5 times each second.


↳**WAIT** for the YELLOW LED to turn ON solide.

5

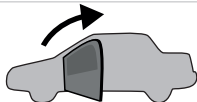

Open the driver door.

6

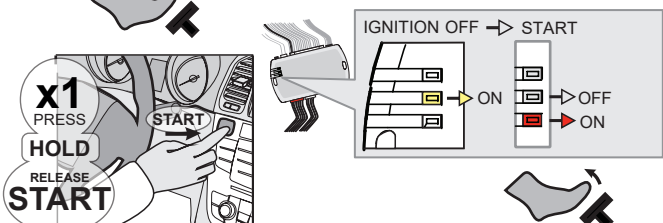

Press the foot-brake pedal.

Press the Push-to-Start button until the engine start.

Release the foot-brake pedal.

↳The RED LED will turn ON.
↳The YELLOW LED will turn OFF.


KEY BYPASS PROGRAMMING PROCEDURE 2/3 |

7




Press the Push-to-Start button until the engine turn OFF.

8

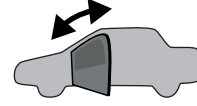

Close and open the driver door.

9

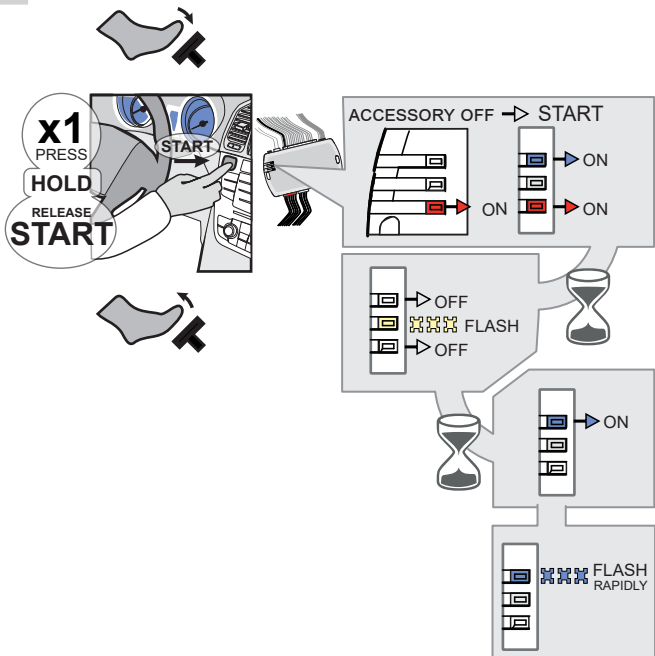


Press the foot-brake pedal.

Press the Push-to-Start button until the engine start.

Release the foot-brake pedal.

- ↳ The BLUE LED will turn ON.
- ↳ The BLUE LED will turn OFF. The RED LED will turn OFF.
- ↳ The YELLOW LED will flash rapidly
- ↳ The BLUE LED will turn ON.
- ↳ The BLUE LED will flash rapidly


10

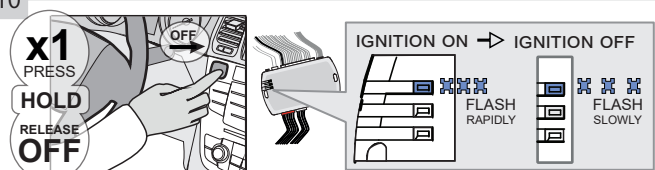

Press the Push-to-Start button until the engine turn OFF.


- ↳ The BLUE LED will flash slowly

11

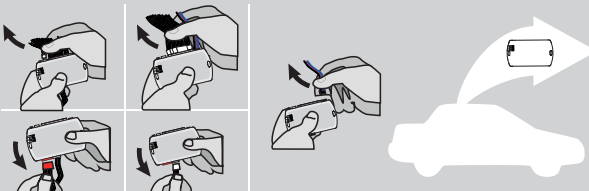

Disconnect all the connectors and after the Data-Link (4-pins) connector.

12

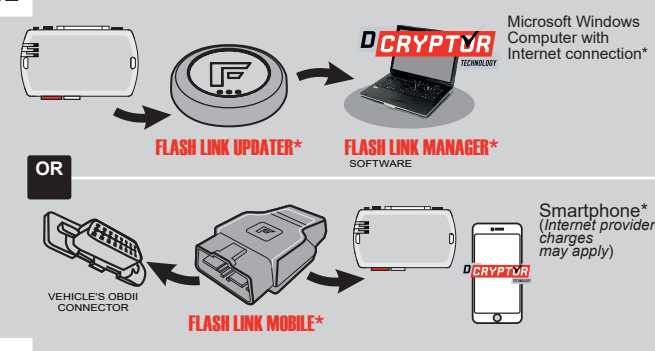

Microsoft Windows Computer with Internet connection*

FLASH LINK UPDATER* FLASH LINK MANAGER* SOFTWARE

OR



FLASH LINK MOBILE*

Smartphone* (Internet provider charges may apply)

Use the tool: FLASH LINK UPDATER or FLASH LINK MOBILE to visit the DCryptor menu.

*Parts required (not included)

13

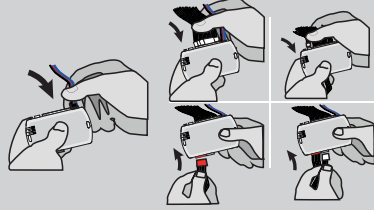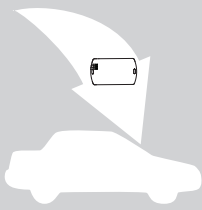

AFTER DCRYPTOR PROGRAMMING COMPLETED
Go back to the vehicle and **reconnect** the 4-Pin (Data-Link) connector and after, all the remaining connector.



The module is now programmed.



REMOTE STARTER / ALARM VERIFICATION PROCEDURE

Test the remote starter. Remote start the vehicle.

REMOTE STARTER FUNCTIONALITY |



All doors must be closed.



Remote start the vehicle.




Unlock the doors with either:

- The OEM remote
- The remote-starter remote
- Or the proximity remote



Enter the vehicle with the Intelligent Key.

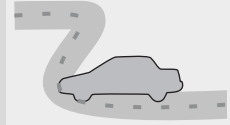

The vehicle can now be put in to gear and driven.


If the vehicle is not unlocked with one of these conditions the remote-starter will shut down as soon as any door is opened.



REGULAR INSTALLATION AND THAR-GM6 INSTALLATION

ADDENDUM - SUGGESTED WIRING CONFIGURATION

VEHICLE	YEARS	Vehicle functions supported in this diagram (functional if equipped)													
		Immobilizer bypass	Lock	Unlock	Arm	Disarm	Parking Light	Trunk (open)	RAP Disable	Tachometer	Door Status	Trunk Status	Hand-Brake Status	Foot-Brake Status	OEM Remote Monitoring
BUICK															
LaCrosse	Push-To-Start	2010	•	•	•	•	•	•	•	•	•	•	•	•	•




FIRMWARE VERSION


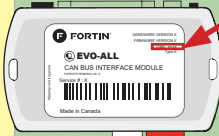
70.[41]

GM MINIMUM

To add the firmware version and the options, use the **FLASH LINK UPDATER** or **FLASH LINK MOBILE** tool, sold separately.

IF THE VEHICLE IS NOT EQUIPPED WITH FUNCTIONAL HOOD PIN:	A11	OFF NON	Hood trigger (Output Status).
---	------------	--------------------------	-------------------------------

	UNIT OPTION	DESCRIPTION
 <p>Program bypass option:</p>	C1	OEM Remote status (Lock/Unlock) monitoring
	D6	Push-to-Start

	<p>ATTENTION!</p>	 <p>DATE: XX-XX</p>	E5	OFF	<p>SPECIAL FUNCTIONS: BY DEFAULT DEACTIVATED</p>
				ON	<p>MANUFACTURED MODULES BETWEEN: 04/2018 TO 04/2019</p>

MANDATORY INSTALL

*HOOD PIN



HOOD STATUS: THE HOOD PIN SWITCH MUST BE INSTALLED IF THE VEHICLE CAN BE REMOTE STARTED WITH THE HOOD OPEN, SET FUNCTION **A11** TO OFF.

A11

OFF

Notice: the installation of safety elements are mandatory. The hood pin is an essential security element and must be installed.

THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.

DESCRIPTION

Parts required (Not included) PAGE







WIRE TO WIRE DIAGRAM

	1X 1Amp Diode 1X 5 Amp Fuse 1X 1k Ohm Resistor	Page 3
--	--	--------


THARNESSE DIAGRAM

THARNESSE THAR-GM6	1x THAR-GM6	Page 4
--------------------	-------------	--------

BCM

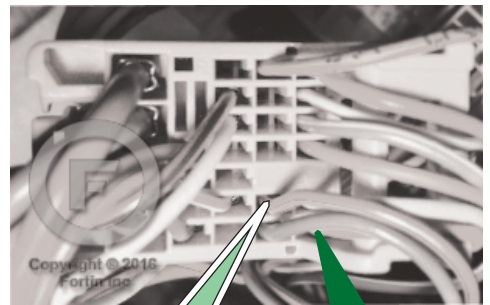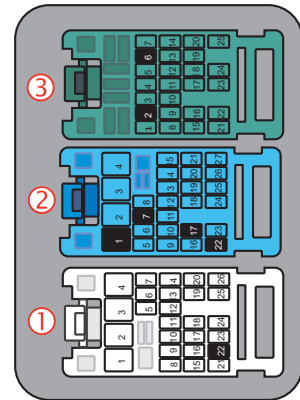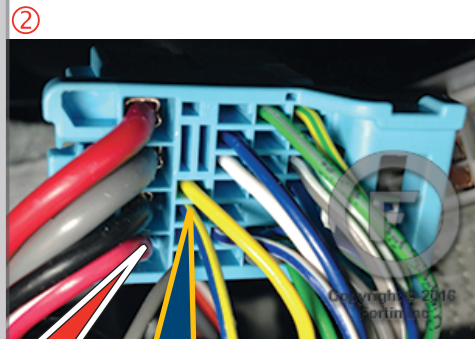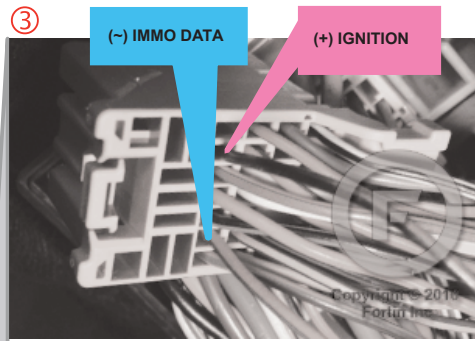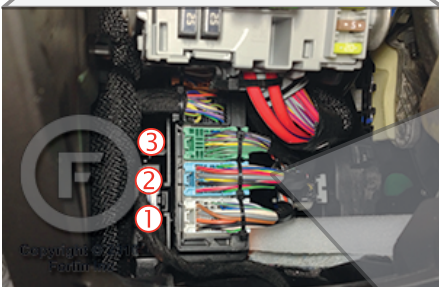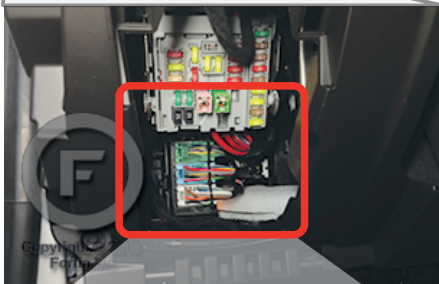


AUTOMATIC TRANSMISSION WIRING CONNECTION

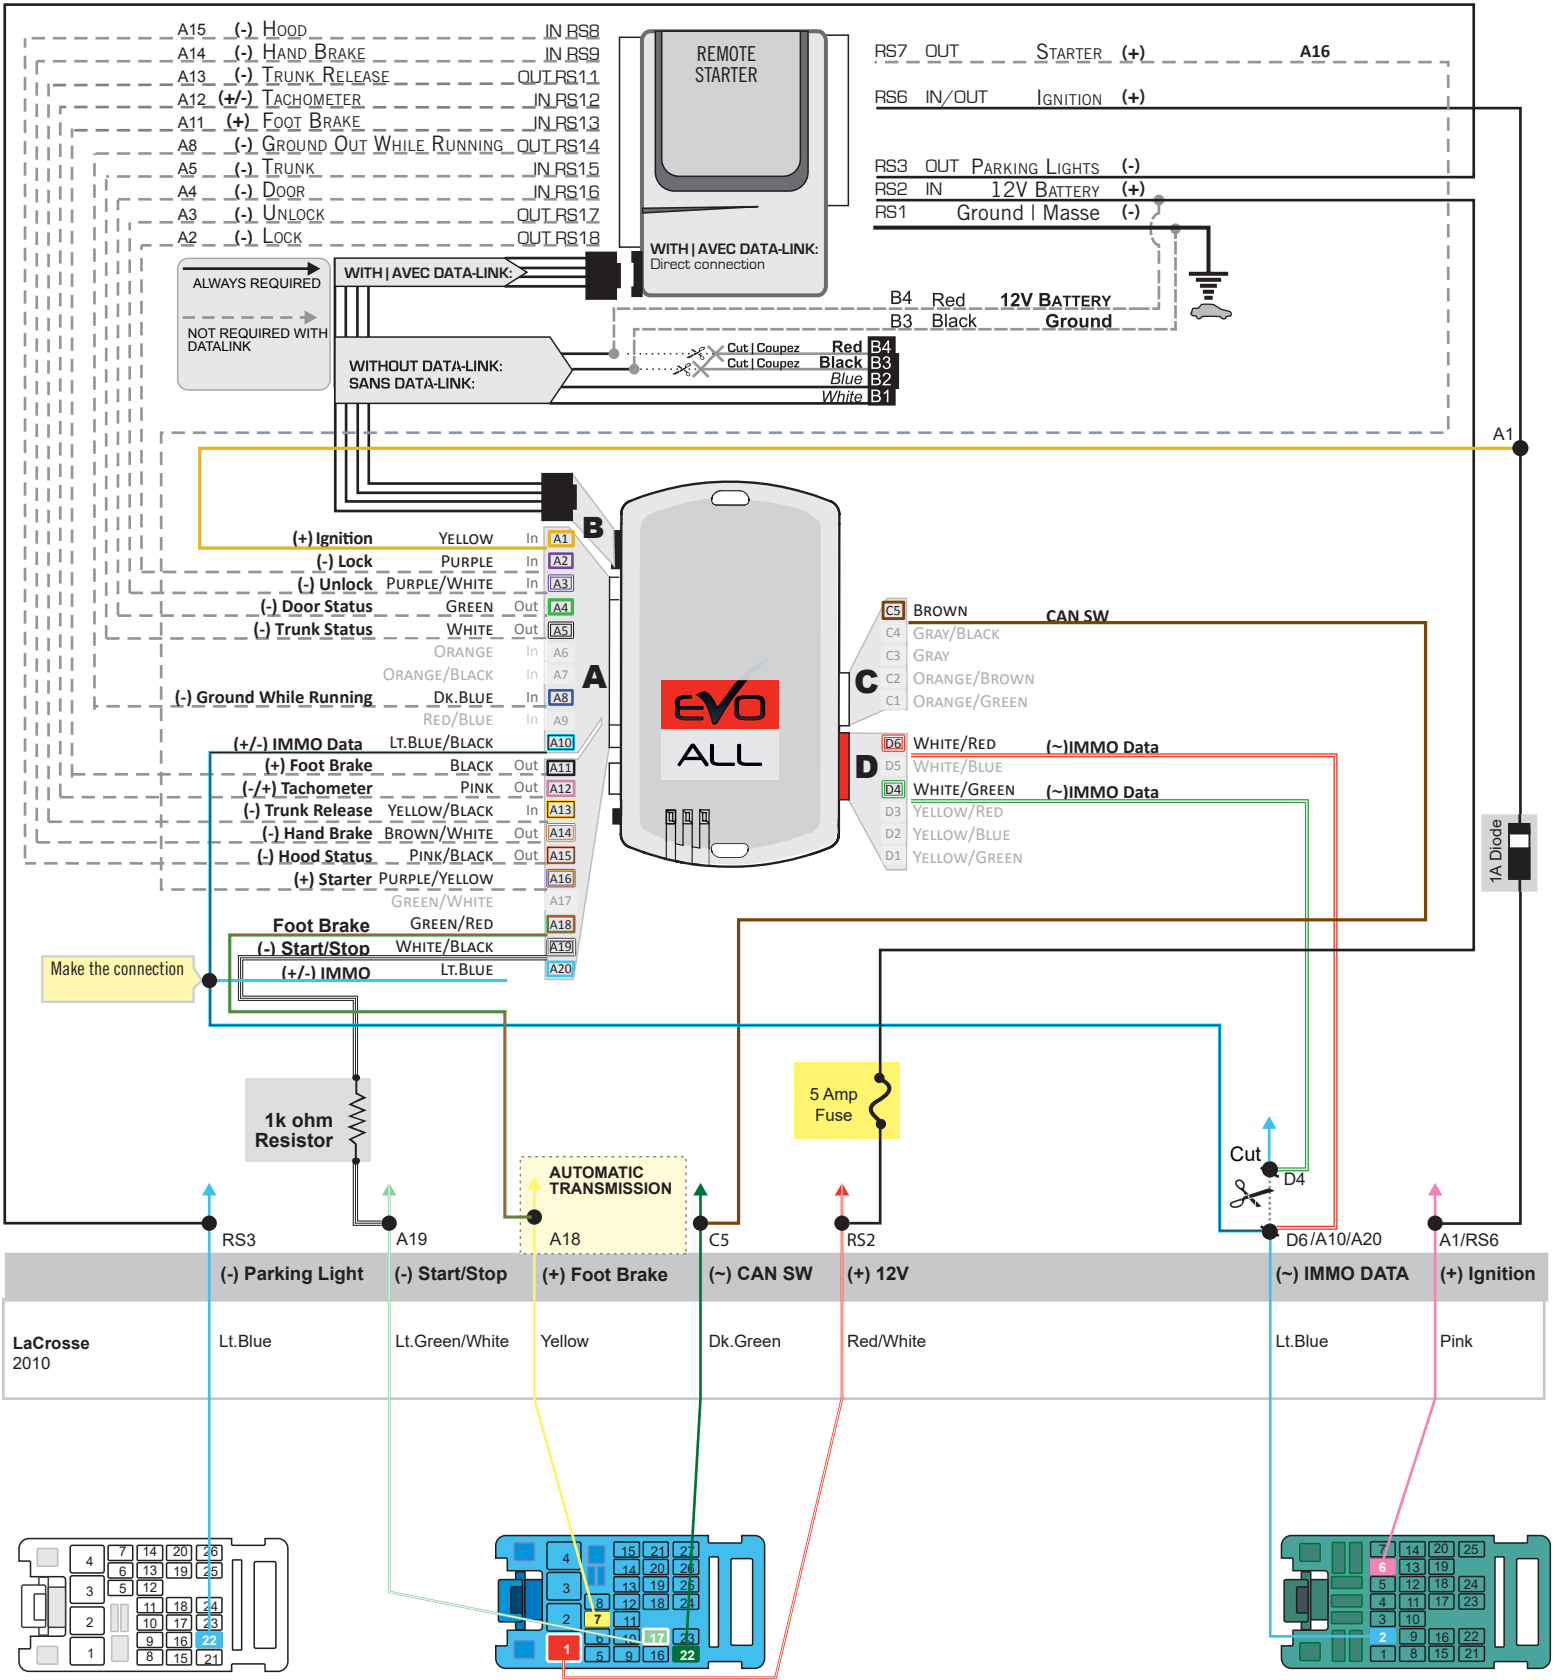


- Back view, 26-Pin White connector, at BCM.
- Back view, 27-Pin Blue connector, at BCM.
- Back view, 25-Pin Green connector, at BCM.

THAR-GM6 | WIRING CONNECTION

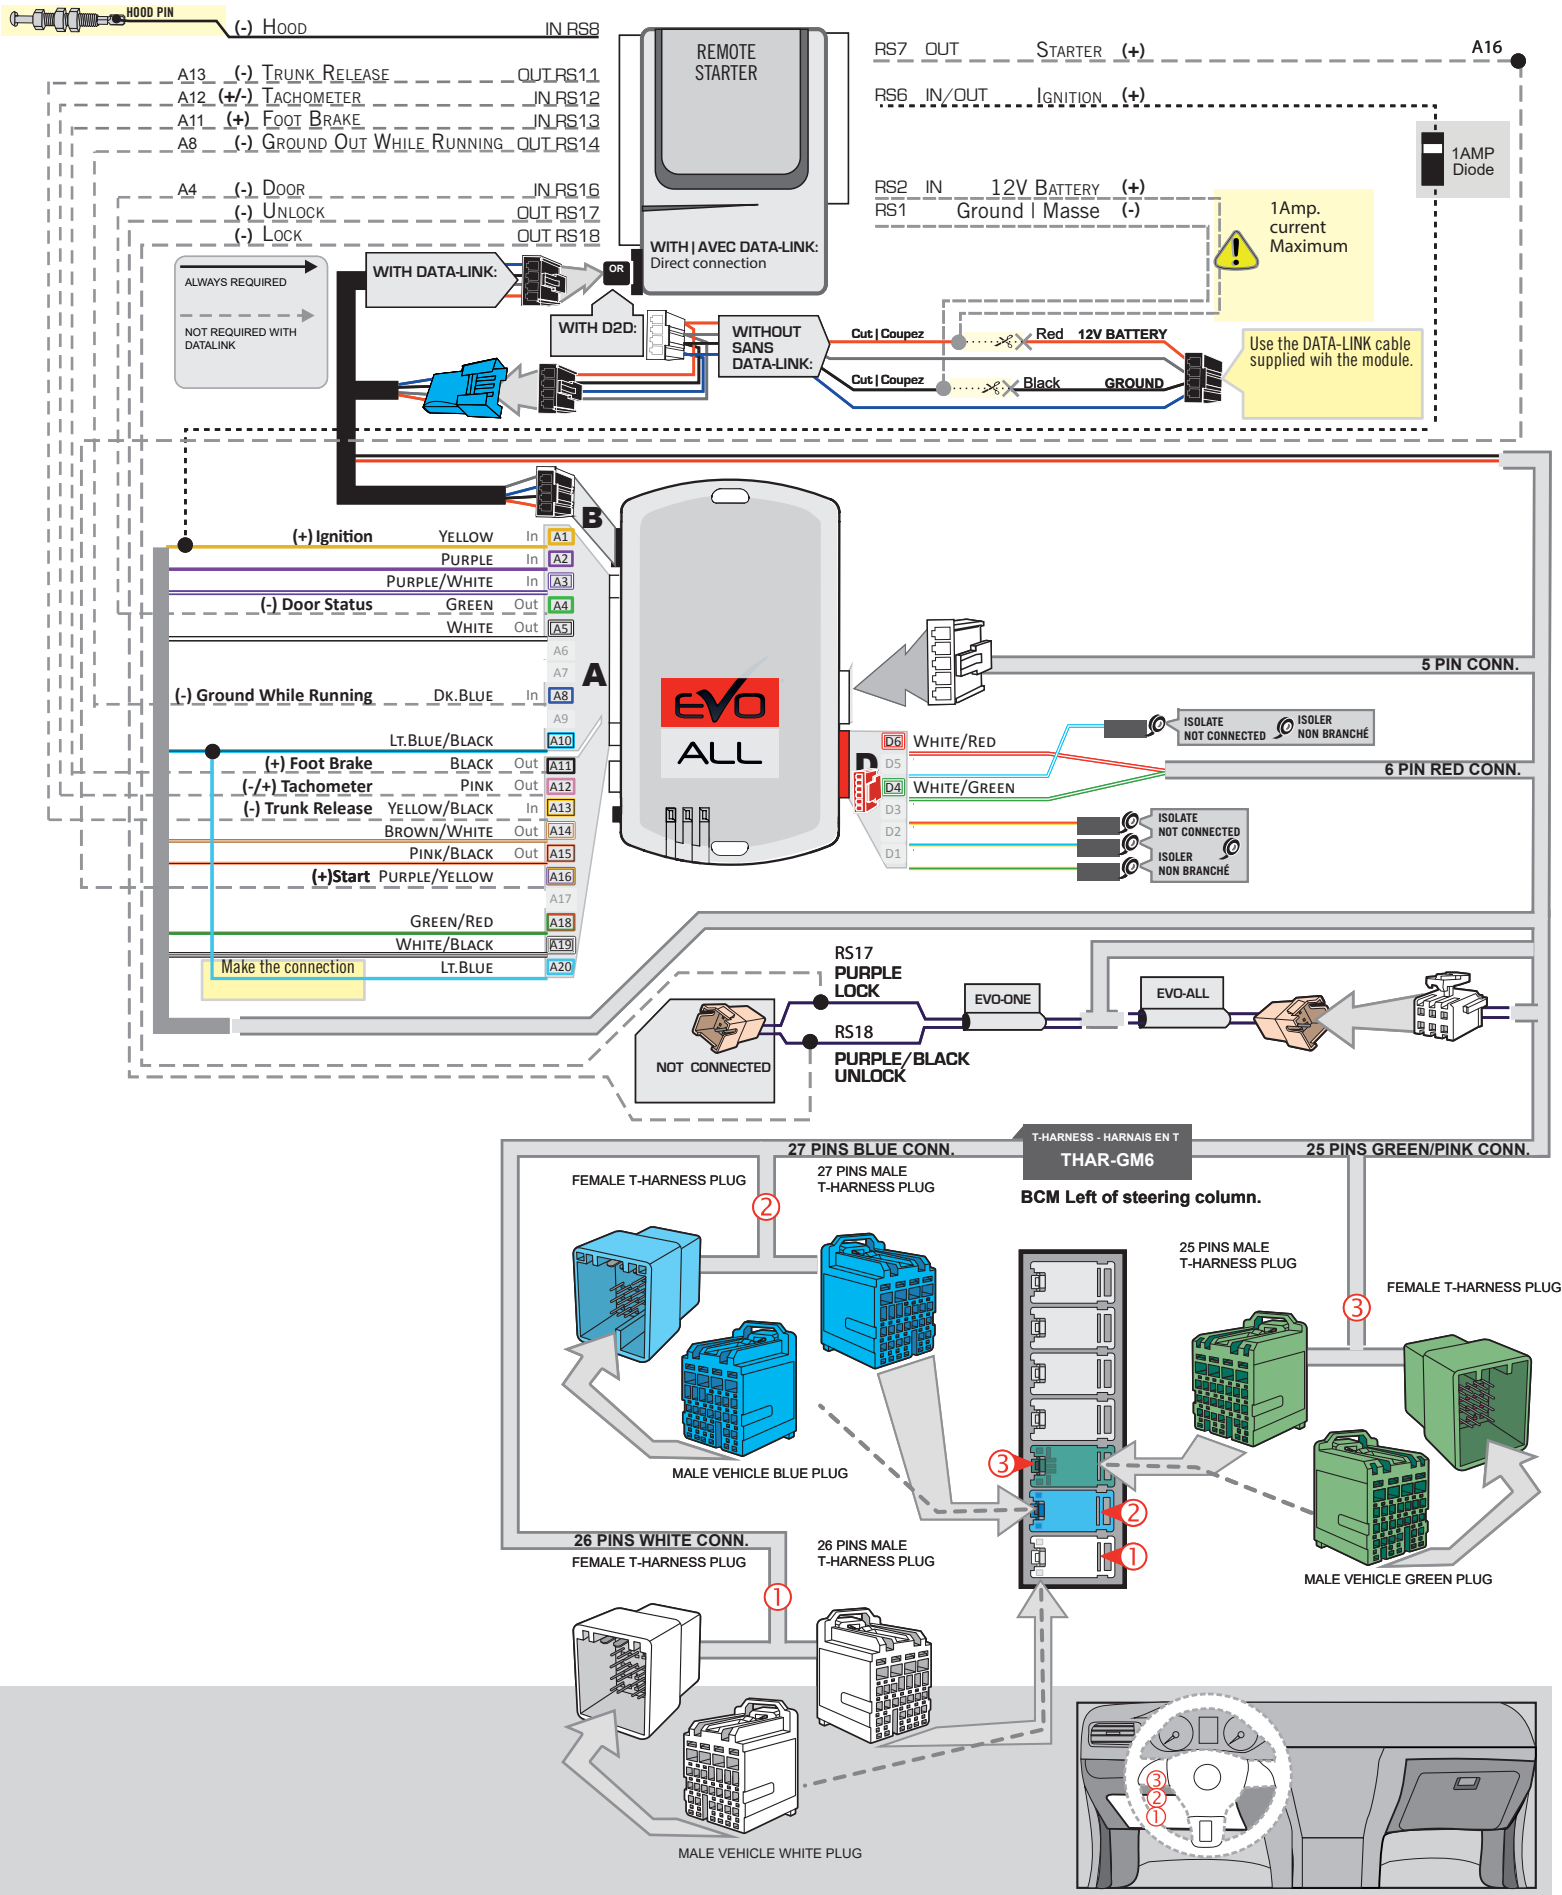


KEY BYPASS PROGRAMMING PROCEDURE 1/3 |

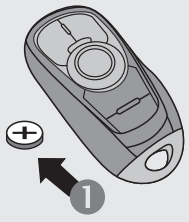

1 Remove the battery from the OEM remote.


2 Place the OEM remote into the transmitter pocket of the center console.

Refer to vehicle user guide for keyport location.

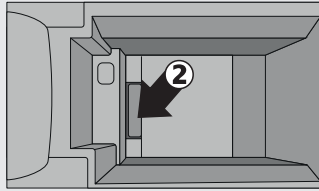

1

x1 HOLD

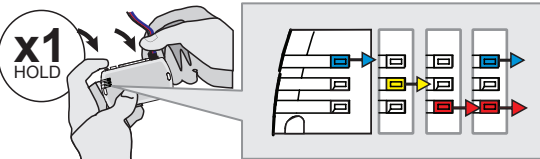


Press and hold the programming button:
Connect the 4-PIN Data-link harness (Black connector).

↳The Blue, Red, Yellow and Blue & Red LEDs will alternatively illuminate.

2


RELEASE

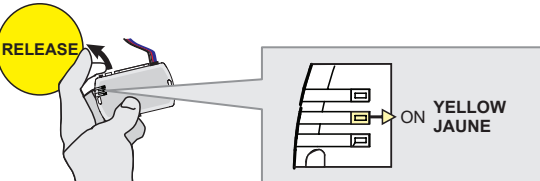


YELLOW JAUNE

Release the programming button when the LED is **YELLOW**.

 If the LED is not solid YELLOW disconnect the 4-Pin connector (Data-Link) and go back to step 1.



3

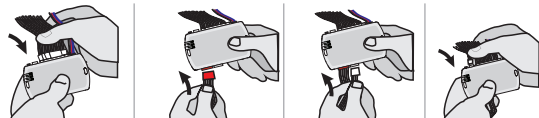


Insert the required remaining connectors.

4

x5 PRESS

PRESS X5 → FLASH

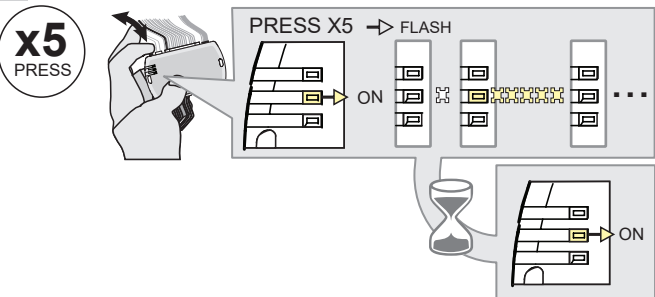

ON


WAIT

Press and release the programming button five (5x) times.

↳The **YELLOW LED** will flash 5 times each second.

↳**WAIT** for the **YELLOW LED** to turn **ON** solide.

5



Open the driver door.


6

x1 PRESS

HOLD

RELEASE

START

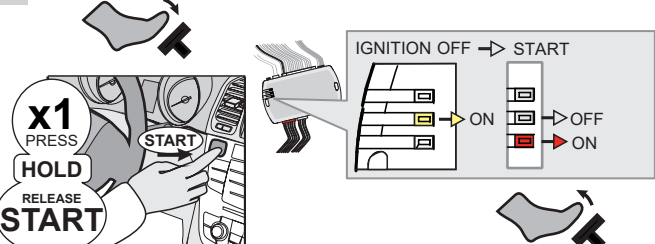

IGNITION OFF → START

ON

OFF

ON

Press the foot-brake pedal.

Press the Push-to-Start button until the engine start.

Release the foot-brake pedal.

↳The **RED LED** will turn **ON**.
 ↳The **YELLOW LED** will turn **OFF**.


KEY BYPASS PROGRAMMING PROCEDURE 2/3 |

7




Press the Push-to-Start button until the engine turn OFF.

8

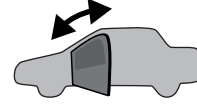

Close and open the driver door.

9

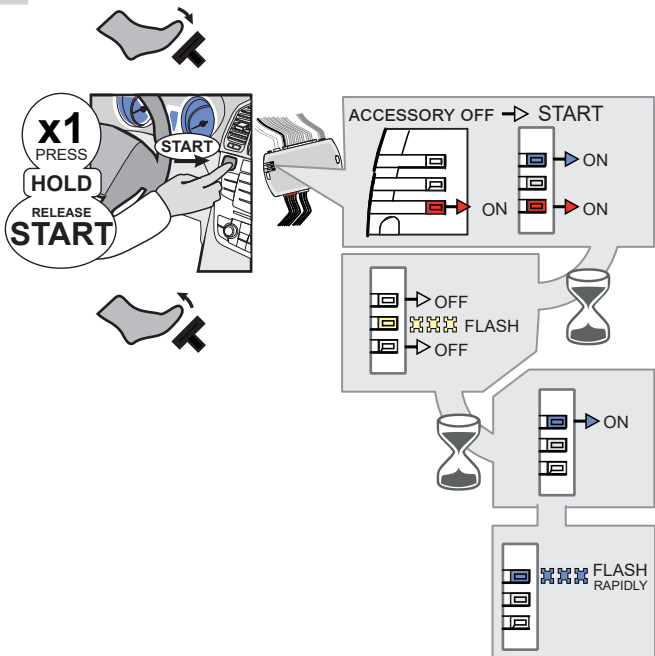


Press the foot-brake pedal.

Press the Push-to-Start button until the engine start.

Release the foot-brake pedal.

- ↳ The BLUE LED will turn ON.
- ↳ The BLUE LED will turn OFF. The RED LED will turn OFF.
- ↳ The YELLOW LED will flash rapidly
- ↳ The BLUE LED will turn ON.
- ↳ The BLUE LED will flash rapidly


10

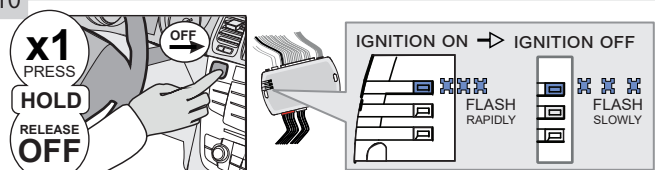

Press the Push-to-Start button until the engine turn OFF.


- ↳ The BLUE LED will flash slowly

11

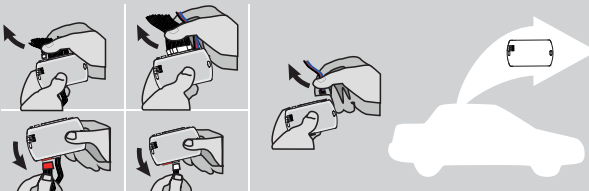

Disconnect all the connectors and after the Data-Link (4-pins) connector.


12

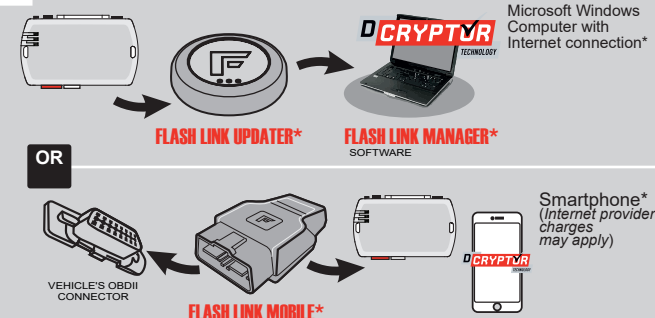

Use the tool: FLASH LINK UPDATER or FLASH LINK MOBILE to visit the DCRYPTOR menu.

*Parts required (not included)

13

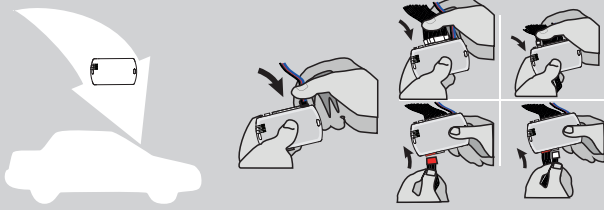

AFTER DCRYPTOR PROGRAMMING COMPLETED
Go back to the vehicle and **reconnect** the 4-Pin (Data-Link) connector and after, all the remaining connector.



The module is now programmed.



REMOTE STARTER / ALARM VERIFICATION PROCEDURE

Test the remote starter. Remote start the vehicle.

REMOTE STARTER FUNCTIONALITY |



All doors must be closed.



Remote start the vehicle.



Unlock the doors with either:

- The OEM remote
- The remote-starter remote
- Or the proximity remote



Enter the vehicle with the Intelligent Key.



The vehicle can now be put in to gear and driven.

If the vehicle is not unlocked with one of these conditions the remote-starter will shut down as soon as any door is opened.



REGULAR INSTALLATION AND THAR-GM6 INSTALLATION

ADDENDUM - SUGGESTED WIRING CONFIGURATION

VEHICLE	YEARS	Vehicle functions supported in this diagram (functional if equipped)													
		Immobilizer bypass	Lock	Unlock	Arm	Disarm	Parking Light	Trunk (open)	RAP Disable	Tachometer	Door Status	Trunk Status	Hand-Brake Status	Foot-Brake Status	OEM Remote Monitoring
BUICK															
LaCrosse	Push-To-Start	2011-2013	•	•	•	•	•	•	•	•	•	•	•	•	•




FIRMWARE VERSION


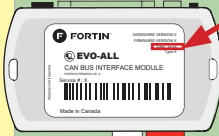
70.[41]

GM MINIMUM

To add the firmware version and the options, use the **FLASH LINK UPDATER** or **FLASH LINK MOBILE** tool, sold separately.

IF THE VEHICLE IS NOT EQUIPPED WITH FUNCTIONAL HOOD PIN:	A11	OFF	Hood trigger (Output Status).
--	------------	------------	-------------------------------

	UNIT OPTION	DESCRIPTION
 <p>Program bypass option:</p>	C1	OEM Remote status (Lock/Unlock) monitoring
	D6	Push-to-Start

 <p>ATTENTION!</p>	 <p>DATE: XX-XX</p>	E5	OFF	<p>SPECIAL FUNCTIONS: BY DEFAULT DEACTIVATED</p>
		ON	<p>MANUFACTURED MODULES BETWEEN: 04/2018 TO 04/2019</p>	

MANDATORY INSTALL

*HOOD PIN



HOOD STATUS: THE HOOD PIN SWITCH MUST BE INSTALLED IF THE VEHICLE CAN BE REMOTE STARTED WITH THE HOOD OPEN, SET FUNCTION **A11** TO OFF.

A11	OFF
------------	------------

Notice: the installation of safety elements are mandatory. The hood pin is an essential security element and must be installed.

THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.









DESCRIPTION

Parts required (Not included) PAGE


	1X 1Amp Diode 1X 5 Amp Fuse 1X 1k Ohm Resistor	Page 3
--	--	--------

THARNES THAR-GM6	1x THAR-GM6	Page 4
------------------	-------------	--------

BCM

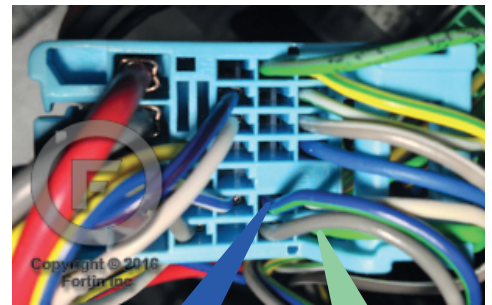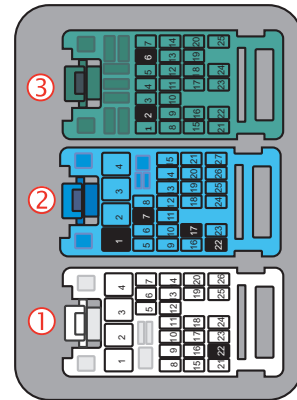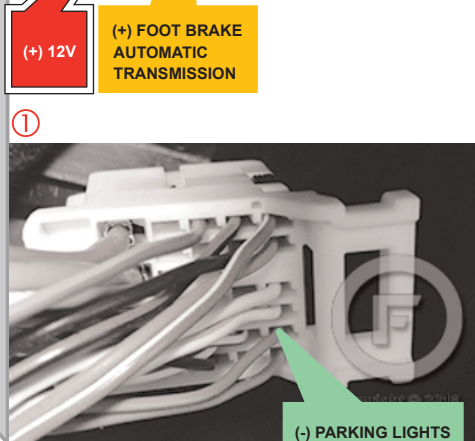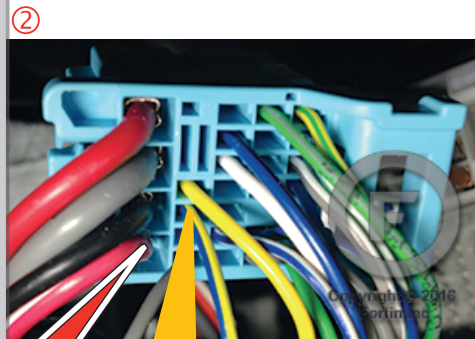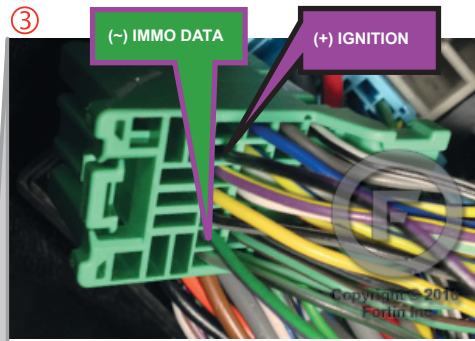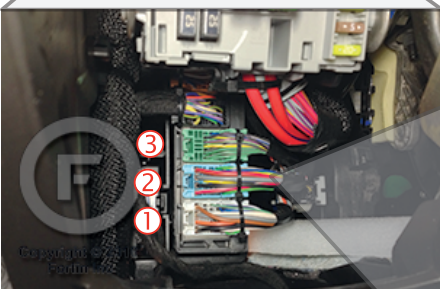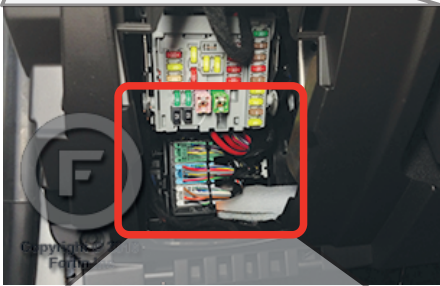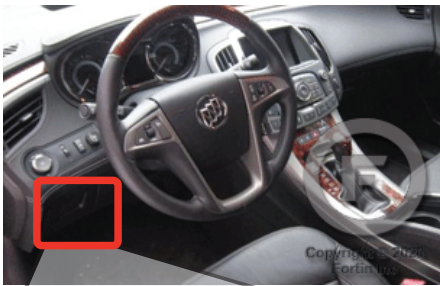


AUTOMATIC TRANSMISSION WIRING CONNECTION

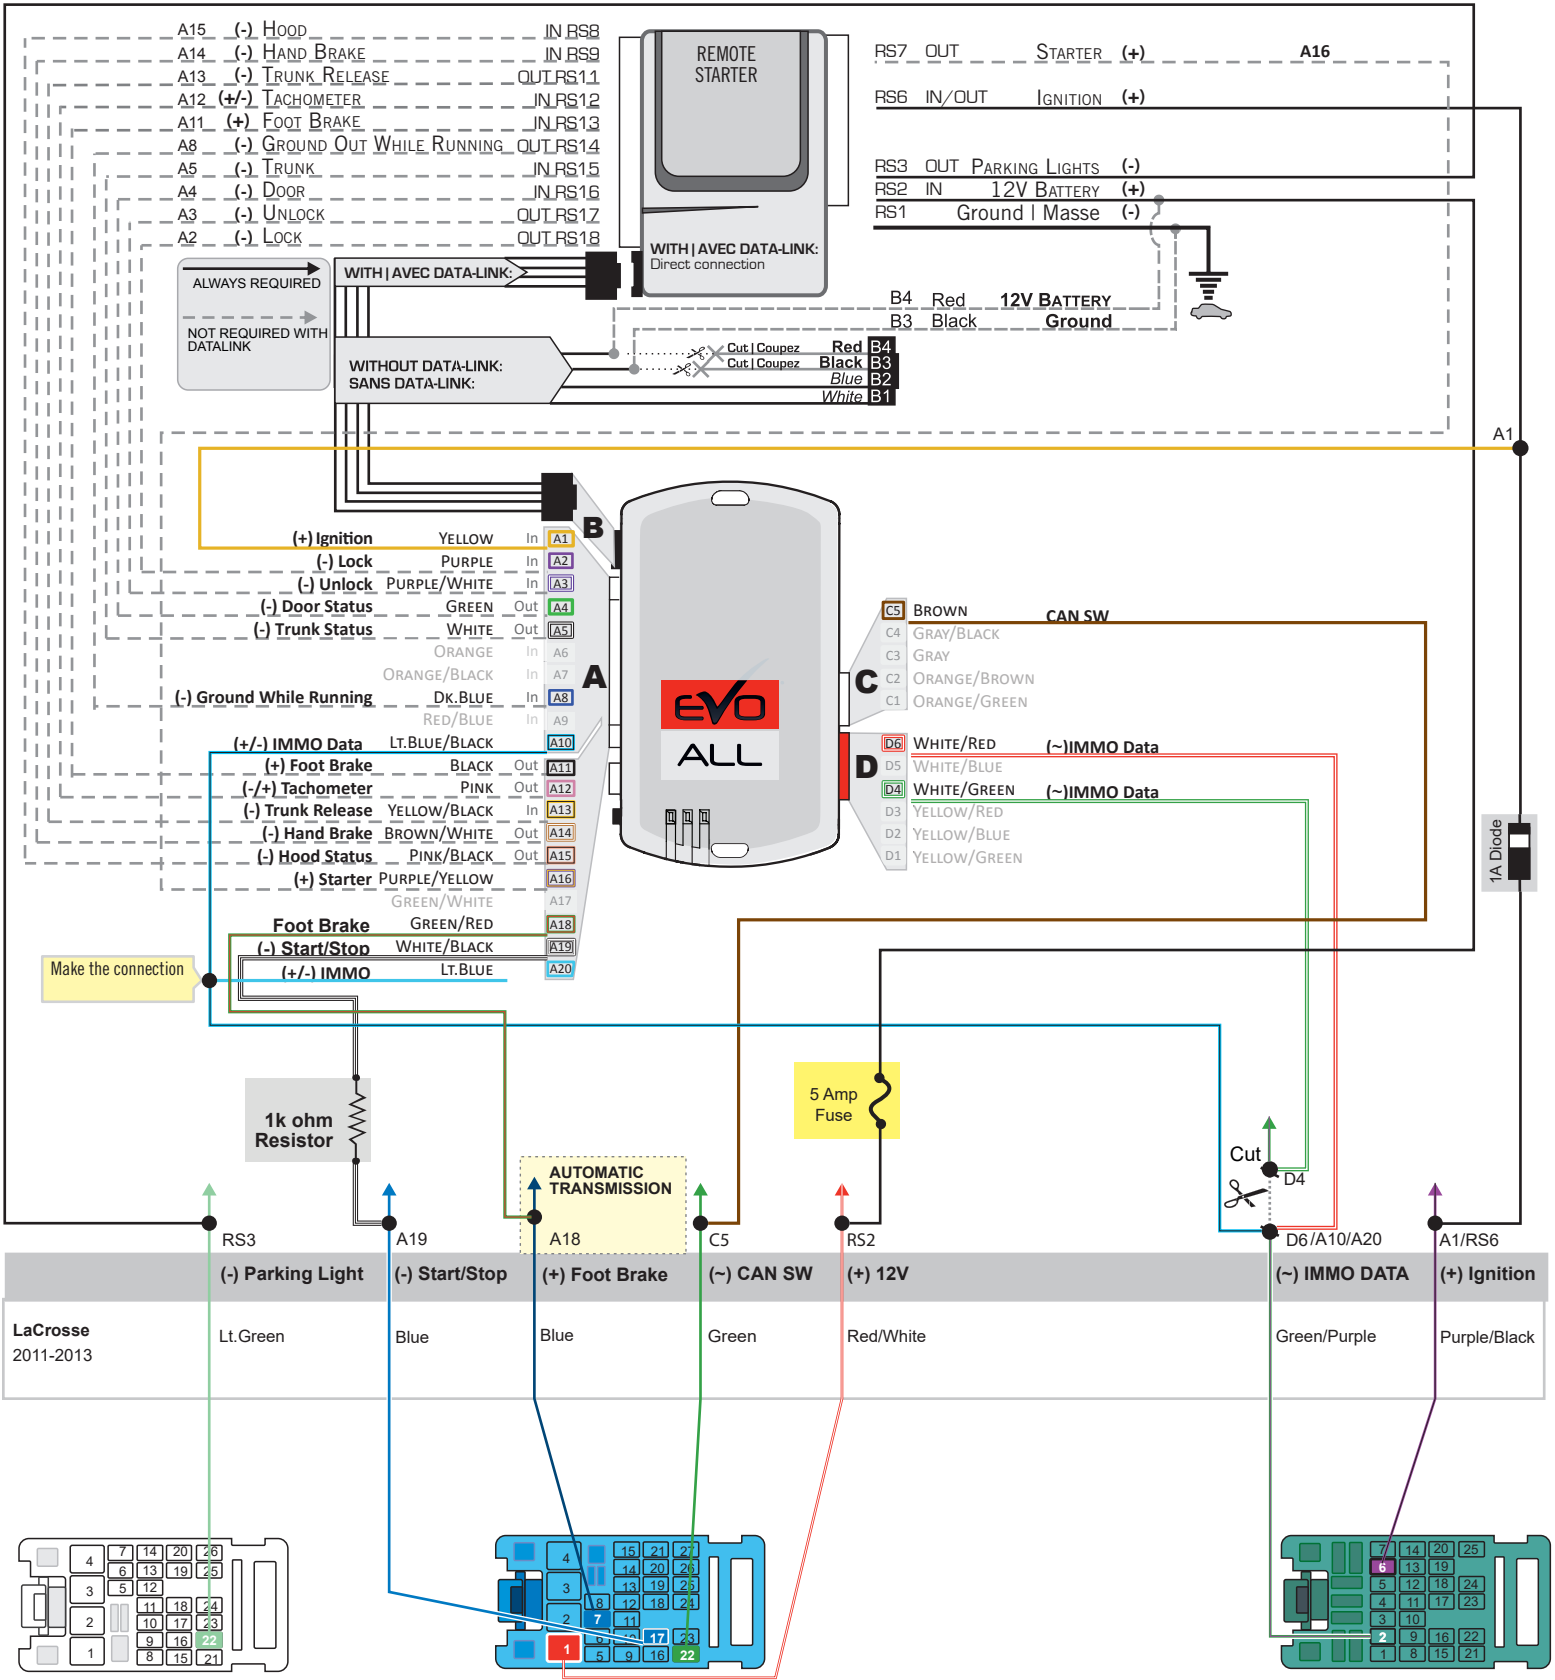


- Back view, 26-Pin White connector, at BCM.
- Back view, 27-Pin Blue connector, at BCM.
- Back view, 25-Pin Green connector, at BCM.

THAR-GM6 | WIRING CONNECTION

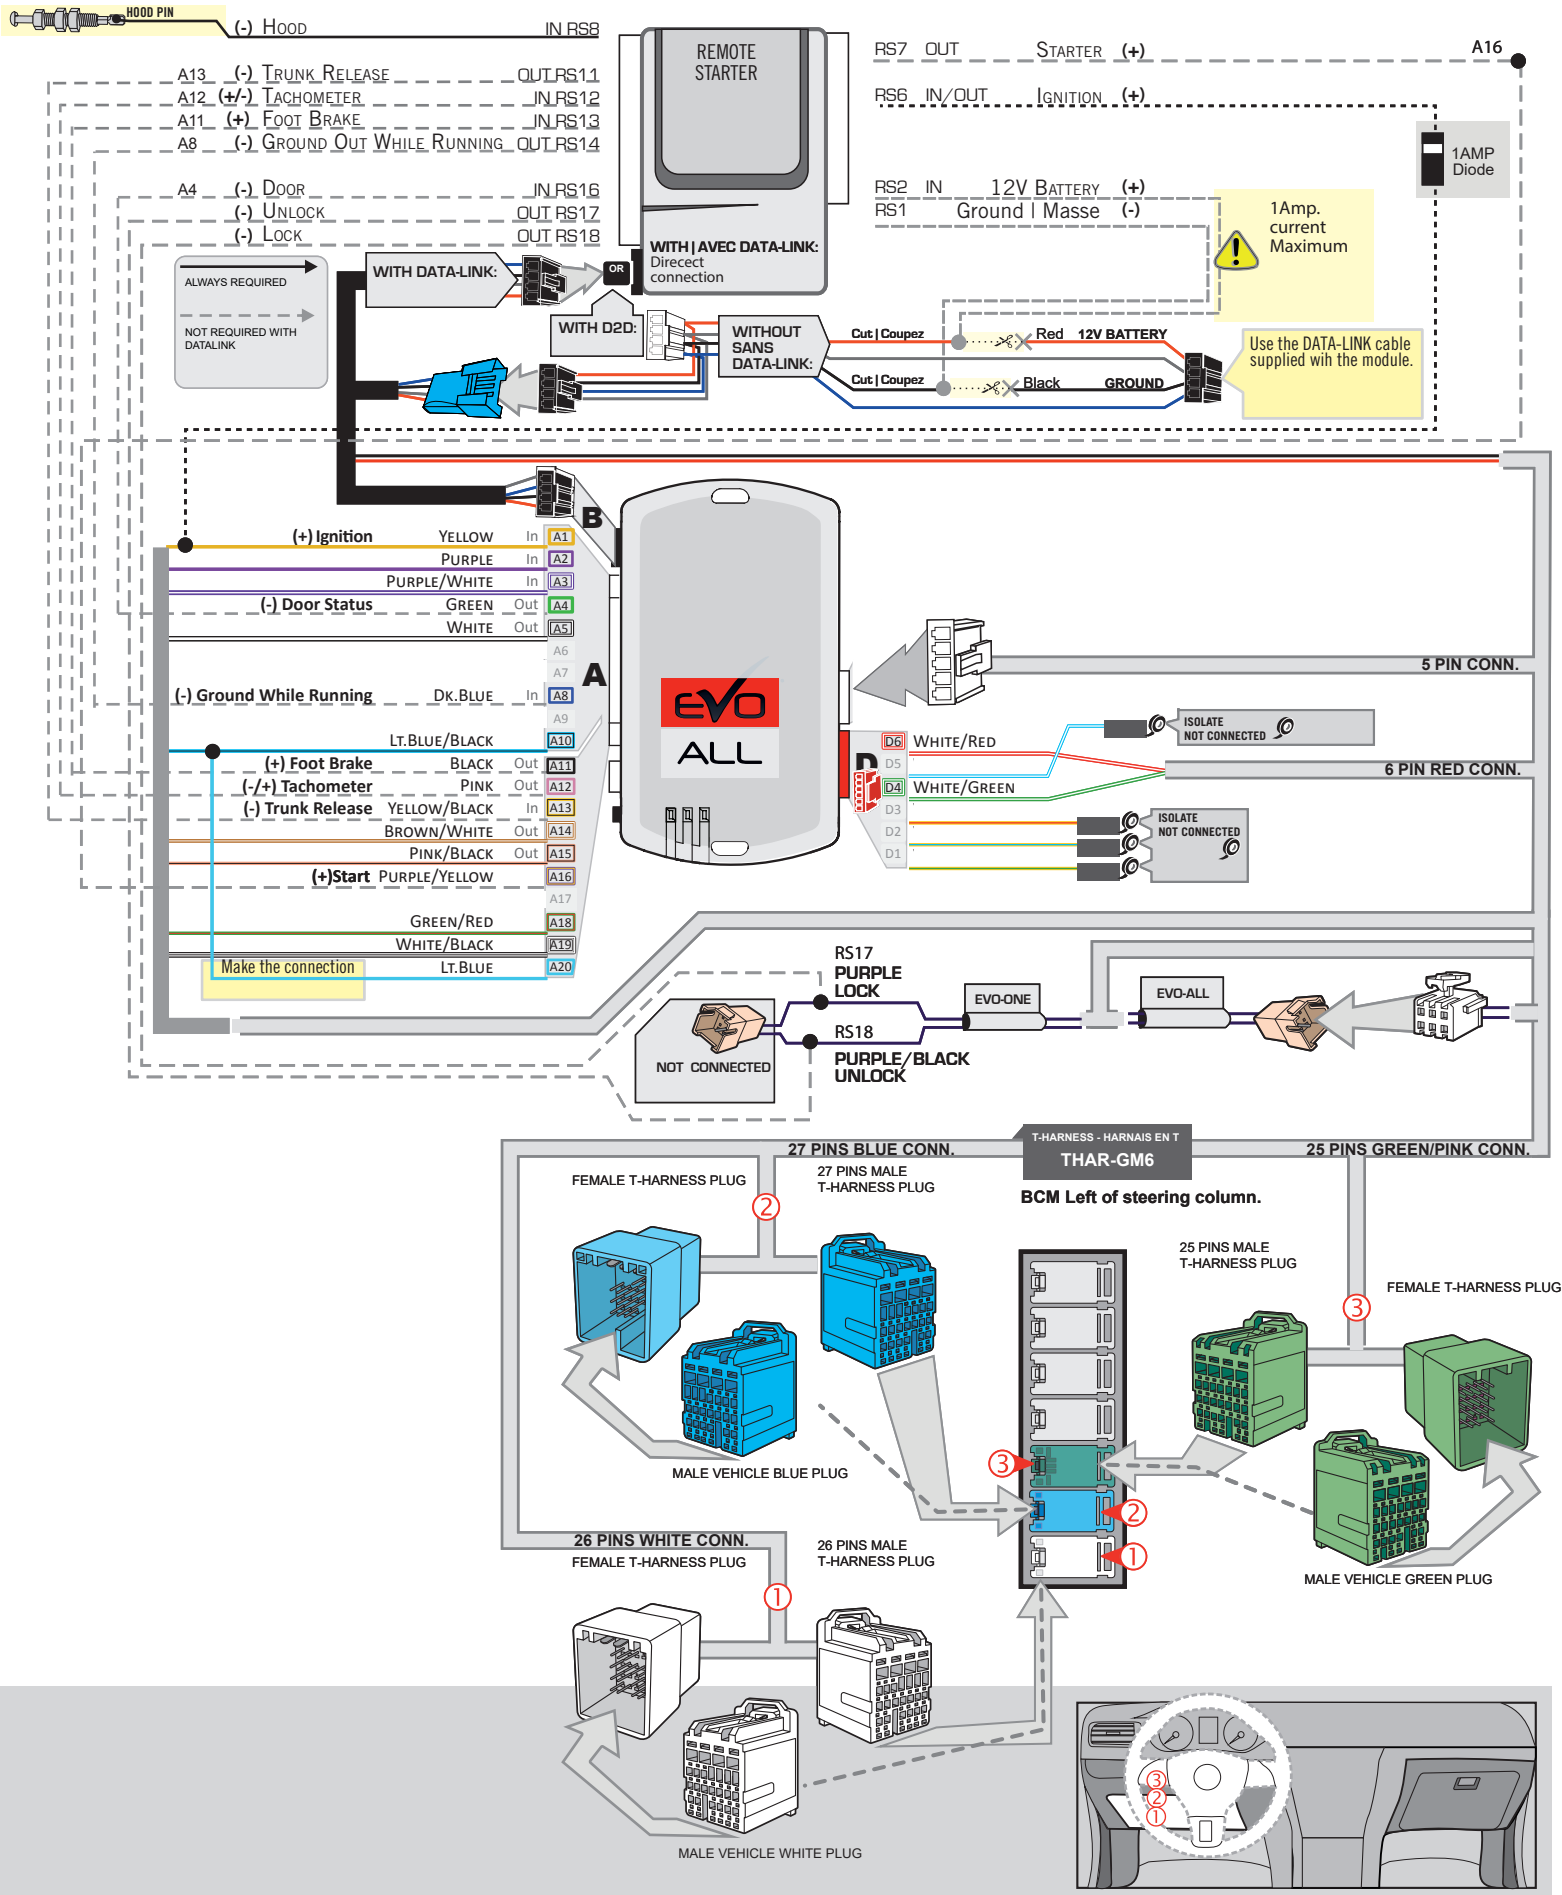


KEY BYPASS PROGRAMMING PROCEDURE 1/3

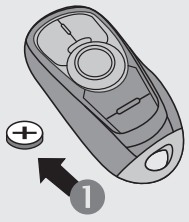

1 Remove the battery from the OEM remote.


2 Place the OEM remote into the transmitter pocket of the center console.

Refer to vehicle user guide for keyport location.

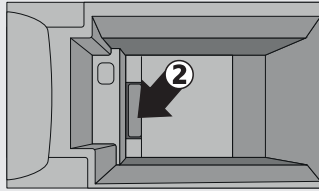

1

x1 HOLD

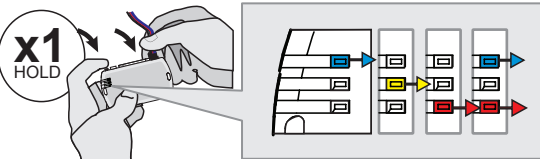


Press and hold the programming button:
Connect the 4-PIN Data-link harness (Black connector).

↳The Blue, Red, Yellow and Blue & Red LEDs will alternatively illuminate.


2

RELEASE

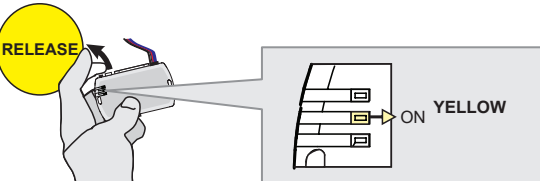


Release the programming button when the LED is **YELLOW**.

If the LED is not solid YELLOW disconnect the 4-Pin connector (Data-Link) and go back to step 1.

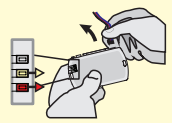

3

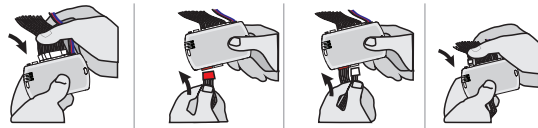


Insert the required remaining connectors.

4

x5 PRESS

PRESS X5 → FLASH

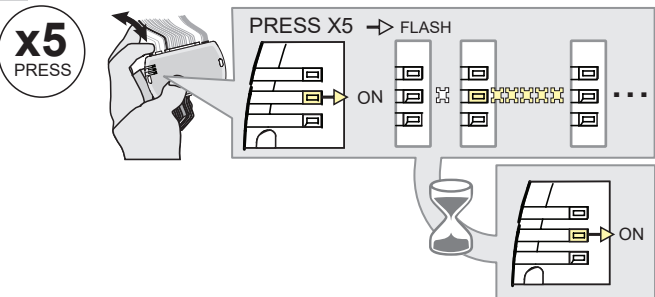


Press and release the programming button five (5x) times.

↳The **YELLOW LED** will flash 5 times each second.

↳**WAIT** for the **YELLOW LED** to turn ON solide.

5

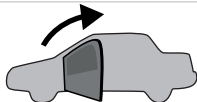


Open the driver door.

6

x1 PRESS HOLD START

RELEASE START

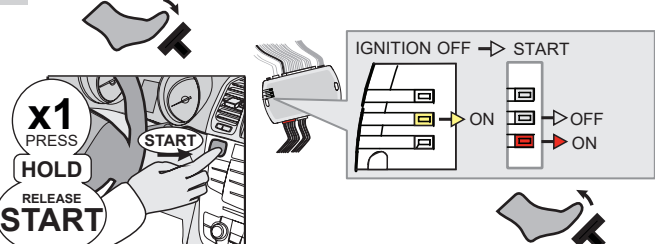

Press the foot-brake pedal.

Press the Push-to-Start button until the engine start.

Release the foot-brake pedal.

↳The **RED LED** will turn ON.
 ↳The **YELLOW LED** will turn OFF.


KEY BYPASS PROGRAMMING PROCEDURE 2/3

7




Press the Push-to-Start button until the engine turn OFF.

8

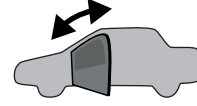

Close and open the driver door.

9

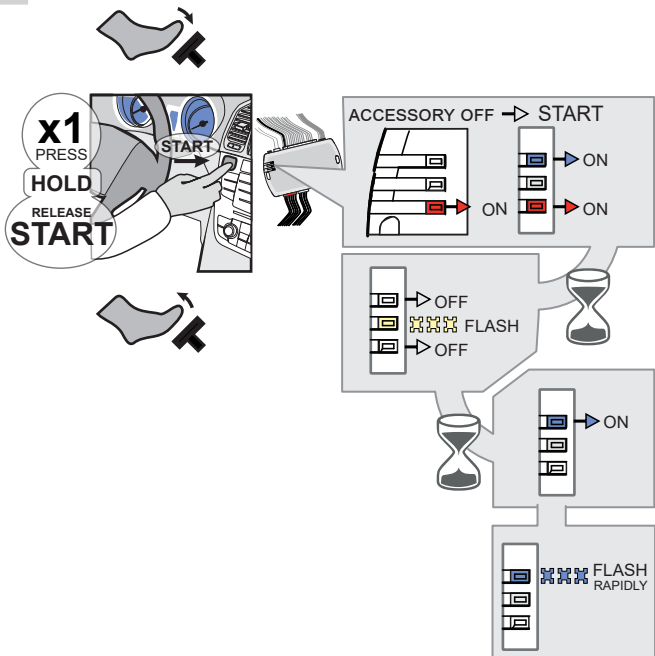


Press the foot-brake pedal.

Press the Push-to-Start button until the engine start.

Release the foot-brake pedal.

- ↳ The BLUE LED will turn ON.
- ↳ The BLUE LED will turn OFF. The RED LED will turn OFF.
- ↳ The YELLOW LED will flash rapidly
- ↳ The BLUE LED will turn ON.
- ↳ The BLUE LED will flash rapidly


10

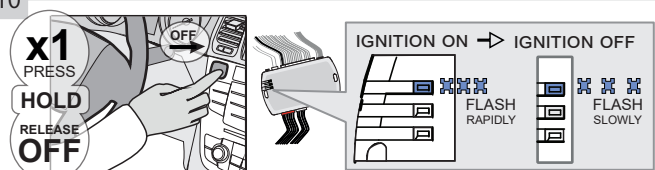

Press the Push-to-Start button until the engine turn OFF.


- ↳ The BLUE LED will flash slowly

11

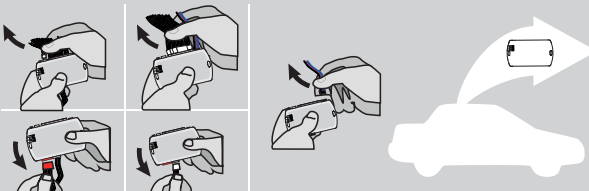

Disconnect all the connectors and after the Data-Link (4-pins) connector.

12


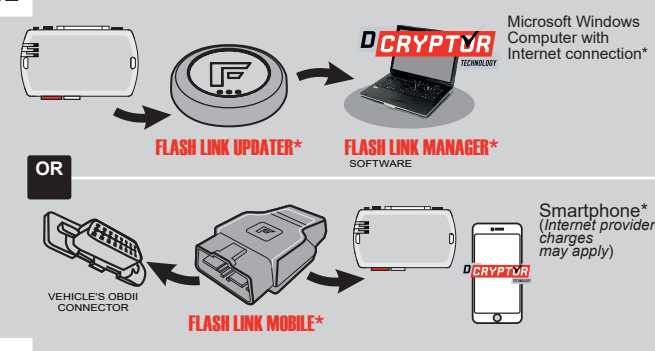


Use the tool: FLASH LINK UPDATER or FLASH LINK MOBILE to visit the DCRYPTOR menu.

*Parts required (not included)

KEY BYPASS PROGRAMMING PROCEDURE 3/3

13

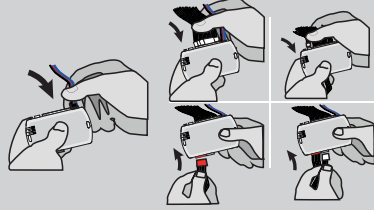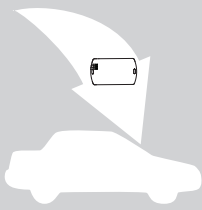

AFTER DCRYPTOR PROGRAMMING COMPLETED
Go back to the vehicle and **reconnect** the 4-Pin (Data-Link) connector and after, all the remaining connector.



The module is now programmed.



REMOTE STARTER / ALARM VERIFICATION PROCEDURE

Test the remote starter. Remote start the vehicle.

REMOTE STARTER FUNCTIONALITY



All doors must be closed.

 


Remote start the vehicle.



Unlock the doors with either:

- The OEM remote
- The remote-starter remote
- Or the proximity remote



Enter the vehicle with the Intelligent Key.



The vehicle can now be put in to gear and driven.

If the vehicle is not unlocked with one of these conditions the remote-starter will shut down as soon as any door is opened.



REGULAR INSTALLATION AND THAR-GM6 INSTALLATION

ADDENDUM - SUGGESTED WIRING CONFIGURATION

VEHICLE	YEARS	Vehicle functions supported in this diagram (functional if equipped)													
		Immobilizer bypass	Lock	Unlock	Arm	Disarm	Parking Light	Trunk (open)	RAP Disable	Tachometer	Door Status	Trunk Status	Hand-Brake Status	Foot-Brake Status	OEM Remote Monitoring
BUICK															
LaCrosse	Push-To-Start	2014	•	•	•	•	•	•	•	•	•	•	•	•	•




FIRMWARE VERSION


70.[41]

GM MINIMUM

To add the firmware version and the options, use the **FLASH LINK UPDATER** or **FLASH LINK MOBILE** tool, sold separately.

IF THE VEHICLE IS NOT EQUIPPED WITH FUNCTIONAL HOOD PIN:	A11	OFF	Hood trigger (Output Status).
---	------------	------------	-------------------------------

	UNIT OPTION	DESCRIPTION
 Program bypass option:	C1	OEM Remote status (Lock/Unlock) monitoring
	D6	Push-to-Start

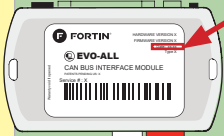	ATTENTION!	 <p>DATE: XX-XX</p>	E5	OFF	SPECIAL FUNCTIONS: BY DEFAULT DEACTIVATED
				ON	MANUFACTURED MODULES BETWEEN: 04/2018 TO 04/2019

MANDATORY INSTALL

*HOOD PIN



HOOD STATUS: THE HOOD PIN SWITCH MUST BE INSTALLED IF THE VEHICLE CAN BE REMOTE STARTED WITH THE HOOD OPEN, SET FUNCTION **A11** TO OFF.

A11 OFF

Notice: the installation of safety elements are mandatory. The hood pin is an essential security element and must be installed.

THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.

DESCRIPTION

Parts required (Not included) PAGE







WIRE TO WIRE DIAGRAM

<p>1X 1Amp Diode 1X 5 Amp Fuse 1X 1k Ohm Resistor</p>	<p>Page 3</p>
---	---------------


THARNNESS DIAGRAM

<p>THARNNESS THAR-GM6</p>	<p>1x THAR-GM6</p>	<p>Page 4</p>
---------------------------	--------------------	---------------


BCM

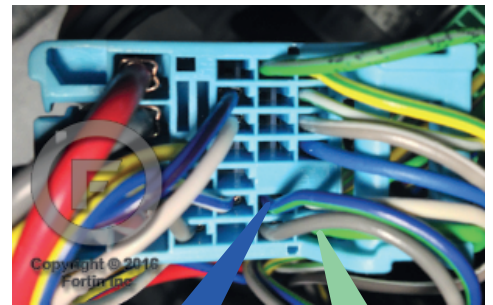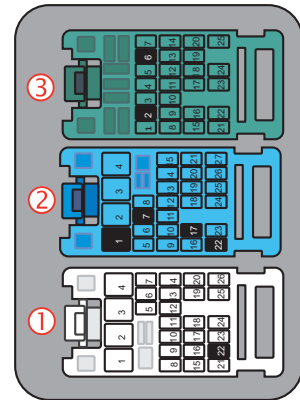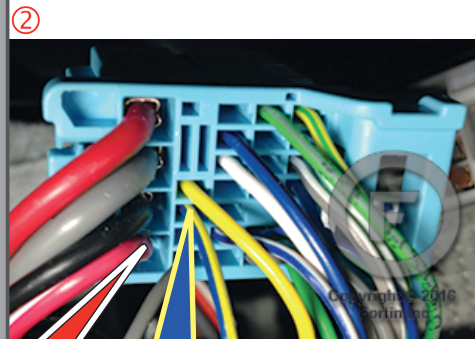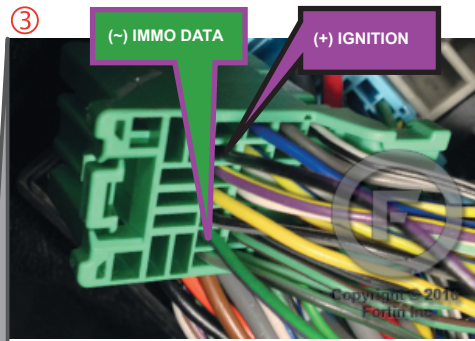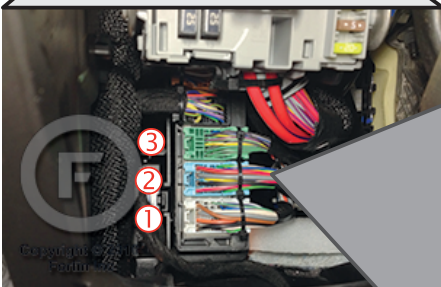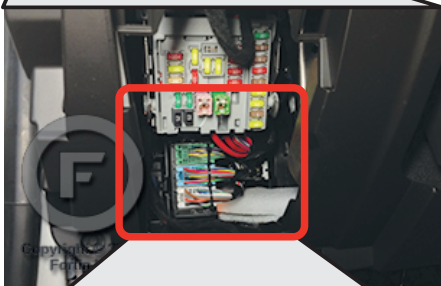

AUTOMATIC TRANSMISSION WIRING CONNECTION

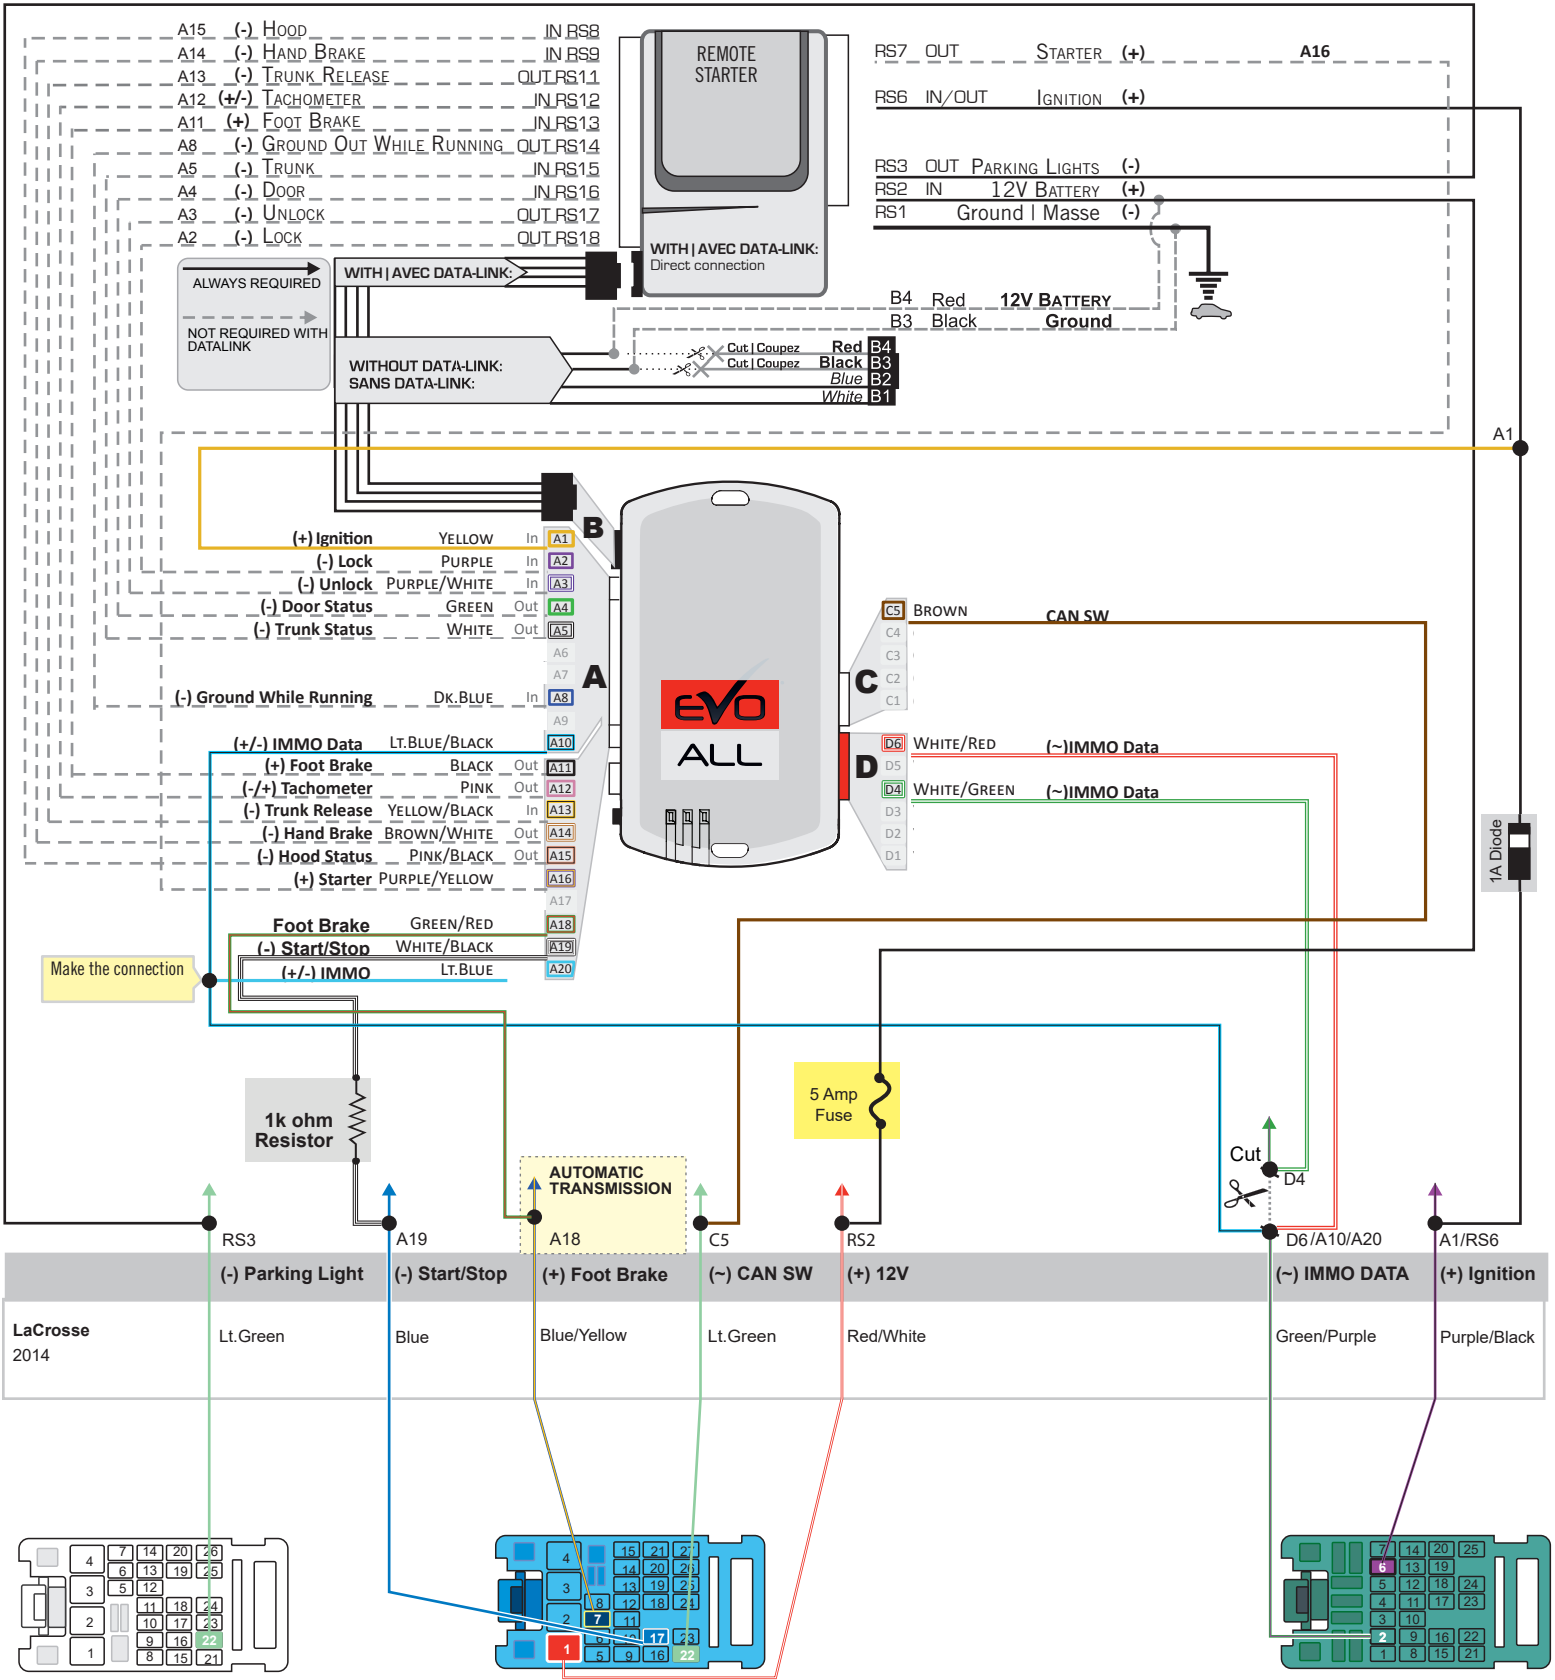


① Back view, 26-Pin White connector, at BCM.

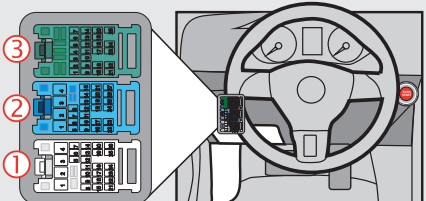


② Back view, 27-Pin Blue connector, at BCM.

③ Back view, 25-Pin Green connector, at BCM.

THAR-GM6 | WIRING CONNECTION

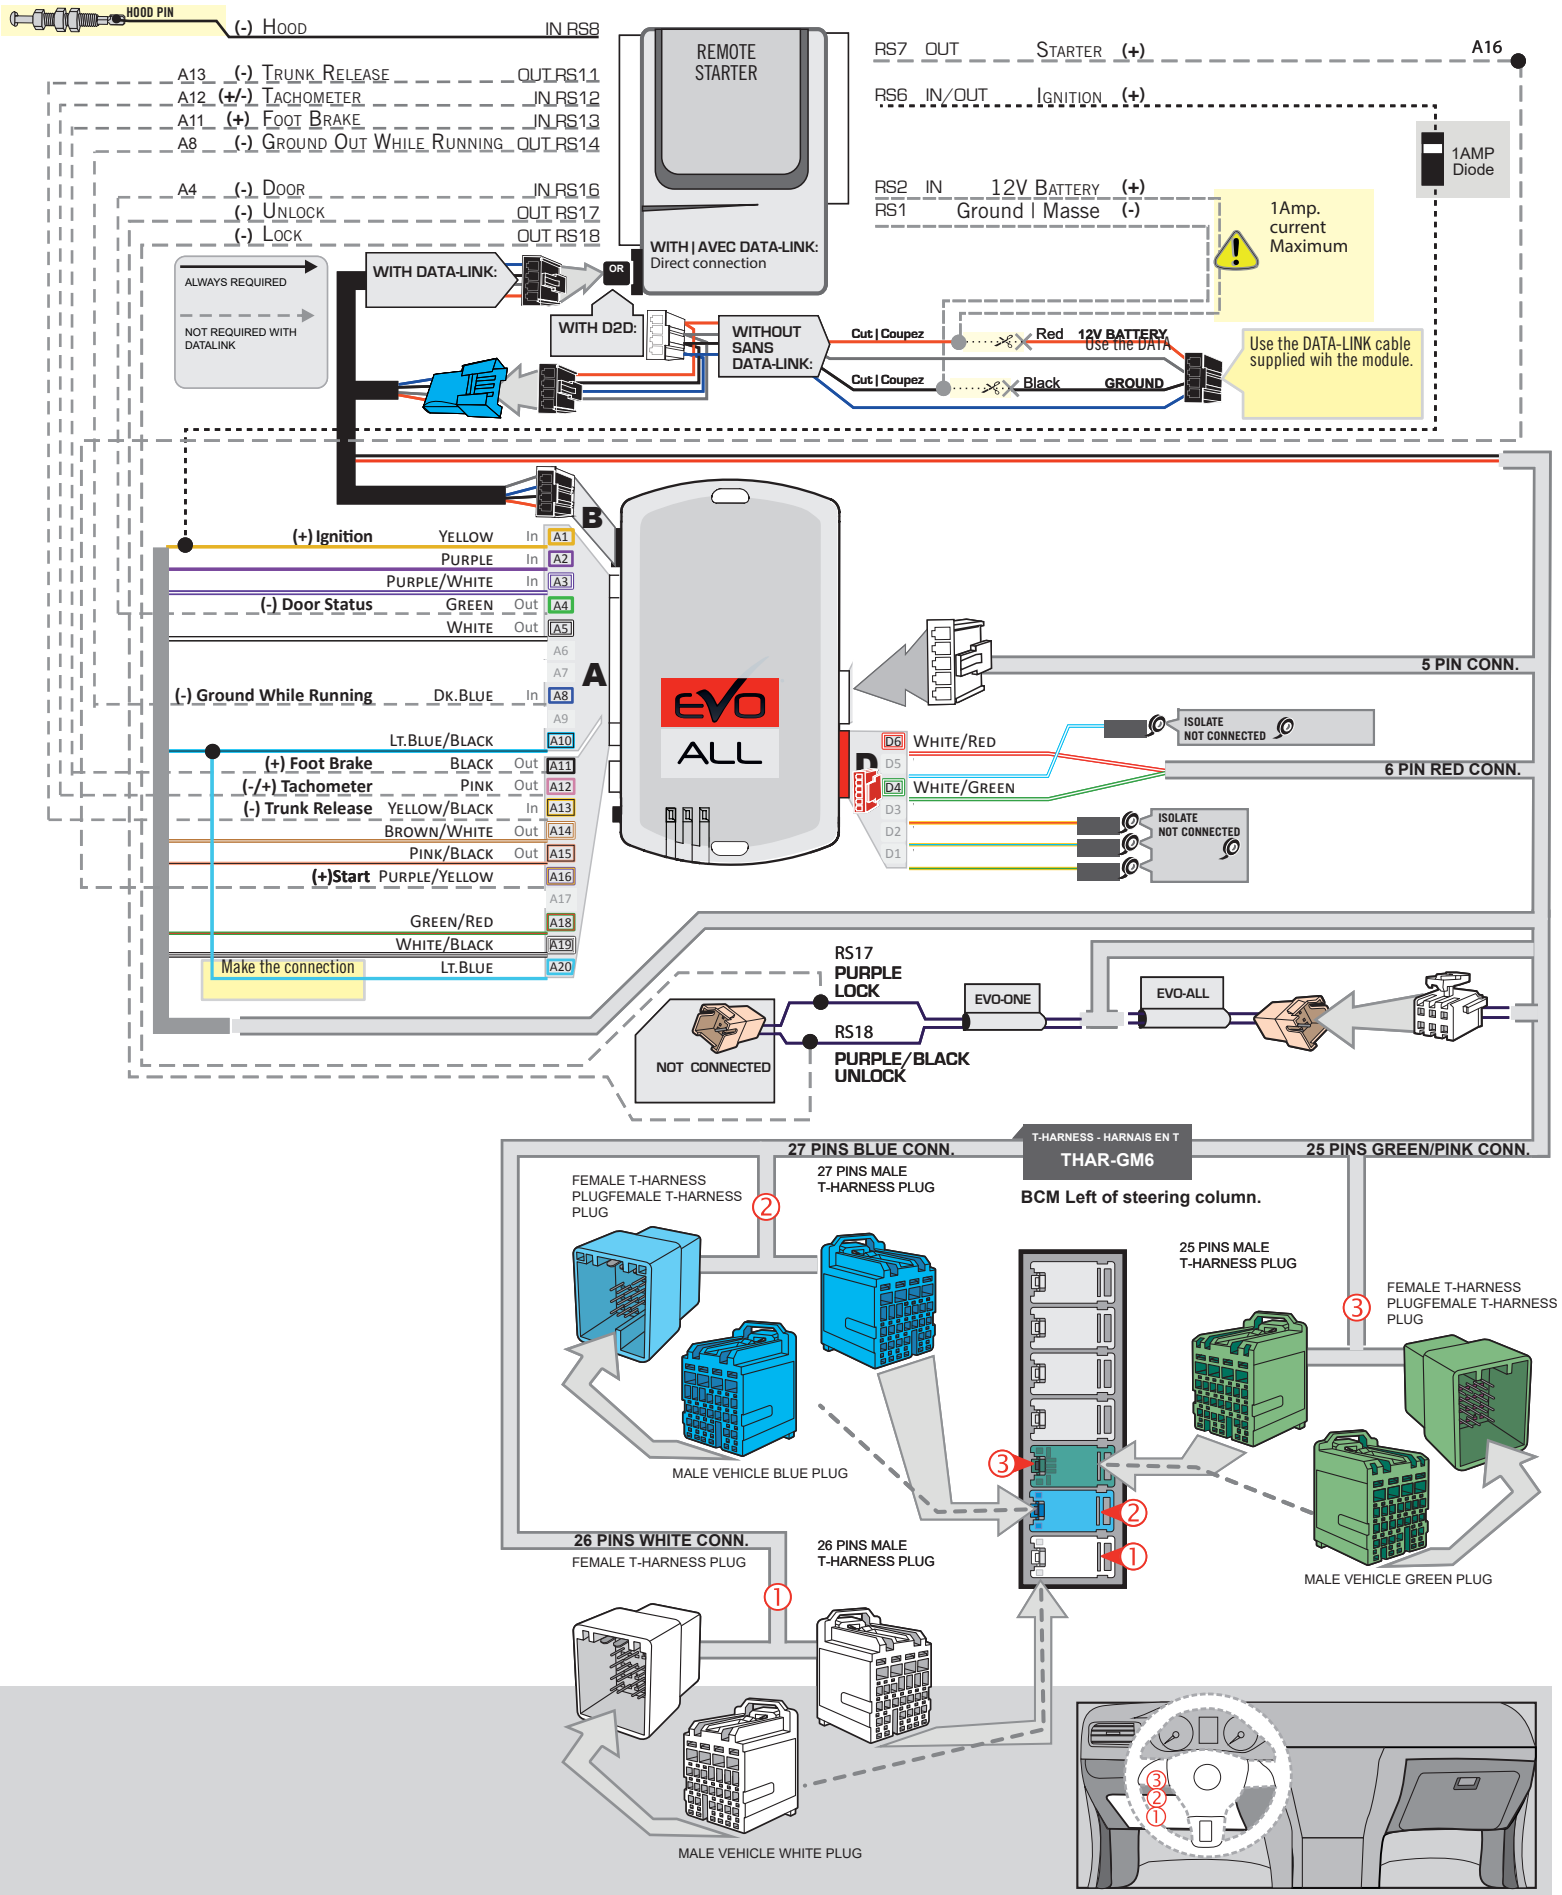


KEY BYPASS PROGRAMMING PROCEDURE 1/3

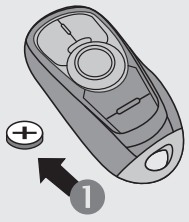

1 Remove the battery from the OEM remote.


2 Place the OEM remote into the transmitter pocket of the center console.

Refer to vehicle user guide for keyport location.

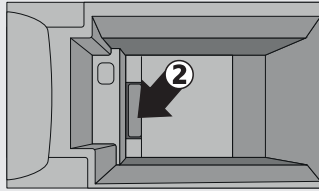

1

x1 HOLD

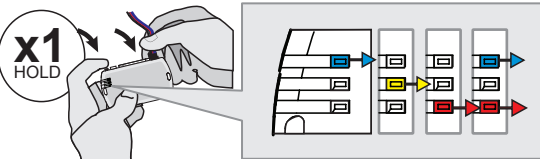


Press and hold the programming button:
Connect the 4-PIN Data-link harness (Black connector).

↳The Blue, Red, Yellow and Blue & Red LEDs will alternatively illuminate.

2


RELEASE

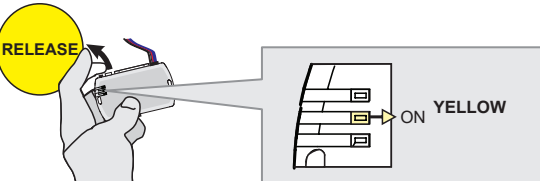


ON YELLOW

Release the programming button when the LED is YELLOW.

 If the LED is not solid YELLOW disconnect the 4-Pin connector (Data-Link) and go back to step 1.



3

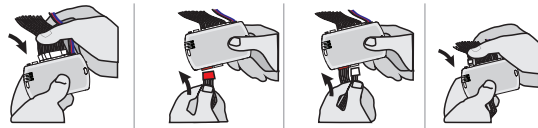


Insert the required remaining connectors.

4

x5 PRESS

ON FLASH

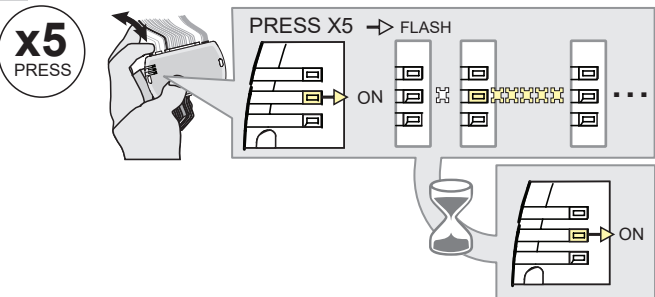


ON

Press and release the programming button five (5x) times.

↳The YELLOW LED will flash 5 times each second.

↳**WAIT** for the YELLOW LED to turn ON solide.

5

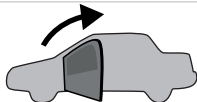


Open the driver door.

6

x1 PRESS HOLD START

IGNITION OFF → START

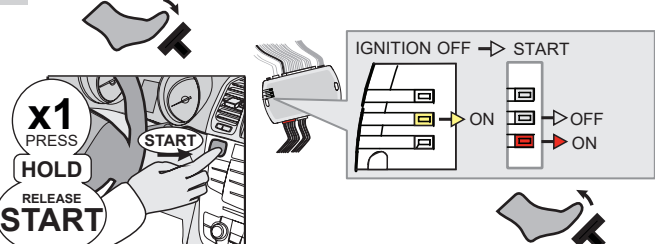

ON OFF ON

Press the foot-brake pedal.

Press the Push-to-Start button until the engine start.

Release the foot-brake pedal.

↳The RED LED will turn ON.
 ↳The YELLOW LED will turn OFF.


KEY BYPASS PROGRAMMING PROCEDURE 2/3

7




Press the Push-to-Start button until the engine turn OFF.

8

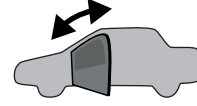

Close and open the driver door.

9

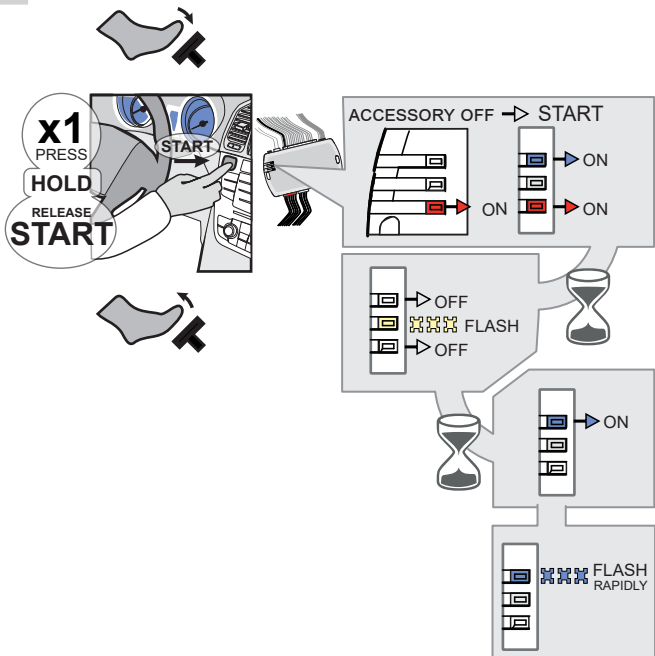


Press the foot-brake pedal.

Press the Push-to-Start button until the engine start.

Release the foot-brake pedal.

- ↳ The BLUE LED will turn ON.
- ↳ The BLUE LED will turn OFF. The RED LED will turn OFF.
- ↳ The YELLOW LED will flash rapidly
- ↳ The BLUE LED will turn ON.
- ↳ The BLUE LED will flash rapidly


10

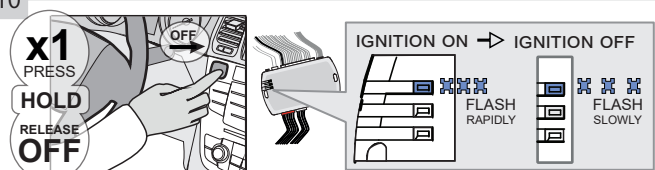

Press the Push-to-Start button until the engine turn OFF.


- ↳ The BLUE LED will flash slowly

11

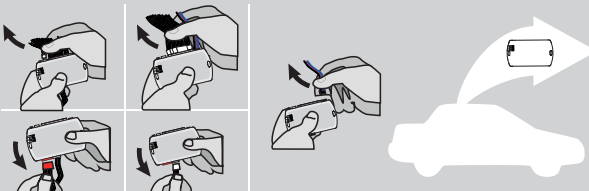

Disconnect all the connectors and after the Data-Link (4-pins) connector.

12

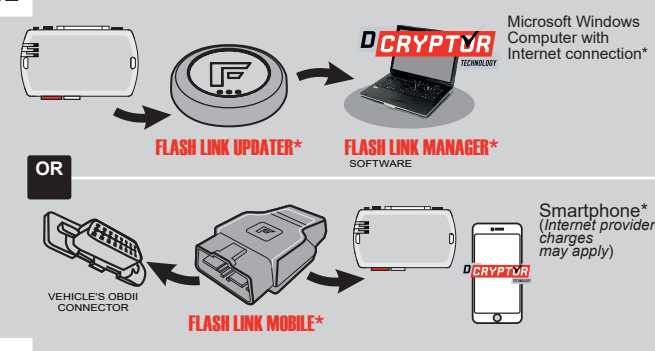

Microsoft Windows Computer with Internet connection*

FLASH LINK UPDATER* **FLASH LINK MANAGER* SOFTWARE**

OR



Vehicle's OBDII Connector **FLASH LINK MOBILE*** Smartphone* (Internet provider charges may apply)

Use the tool: FLASH LINK UPDATER or FLASH LINK MOBILE to visit the DCryptor menu.

*Parts required (not included)

KEY BYPASS PROGRAMMING PROCEDURE 3/3

13

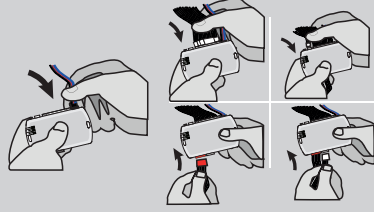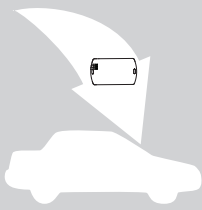

AFTER DCRYPTOR PROGRAMMING COMPLETED
Go back to the vehicle and **reconnect** the 4-Pin (Data-Link) connector and after, all the remaining connector.



The module is now programmed.



REMOTE STARTER / ALARM VERIFICATION PROCEDURE

Test the remote starter. Remote start the vehicle.

REMOTE STARTER FUNCTIONALITY |



All doors must be closed.



Remote start the vehicle.




Unlock the doors with either:

- The OEM remote
- The remote-starter remote
- Or the proximity remote



Enter the vehicle with the Intelligent Key.

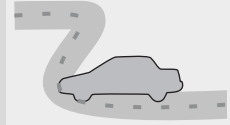


The vehicle can now be put in to gear and driven.


If the vehicle is not unlocked with one of these conditions the remote-starter will shut down as soon as any door is opened.



REGULAR INSTALLATION AND THAR-GM6

ADDENDUM - SUGGESTED WIRING CONFIGURATION

VEHICLE	YEARS	Vehicle functions supported in this diagram (functional if equipped)																	
		Immobilizer bypass	Lock	Unlock	Arm	Disarm	Parking Light	Trunk (open)	RAP Disable	Tachometer	Door Status	Trunk Status	Hand-Brake Status	Foot-Brake Status	OEM Remote Monitoring				
																			
BUICK																			
LaCrosse	Push-To-Start	2015-2016	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•




FIRMWARE VERSION


70.[41]

GM MINIMUM

To add the firmware version and the options, use the **FLASH LINK UPDATER** or **FLASH LINK MOBILE** tool, sold separately.

<p>IF THE VEHICLE IS NOT EQUIPPED WITH FUNCTIONAL HOOD PIN:</p>	A11	OFF	Hood trigger (Output Status).
--	------------	------------	-------------------------------

	UNIT OPTION	DESCRIPTION
 <p>Program bypass option:</p>	C1	OEM Remote status (Lock/Unlock) monitoring
	D6	Push-to-Start

	<p>ATTENTION!</p>	 <p>DATE: XX-XX</p>	E5	OFF	<p>SPECIAL FUNCTIONS: BY DEFAULT DEACTIVATED</p>
				ON	<p>MANUFACTURED MODULES BETWEEN: 04/2018 TO 04/2019</p>

MANDATORY INSTALL

*HOOD PIN



HOOD STATUS: THE HOOD PIN SWITCH MUST BE INSTALLED IF THE VEHICLE CAN BE REMOTE STARTED WITH THE HOOD OPEN, SET FUNCTION **A11** TO OFF.

A11

OFF

Notice: the installation of safety elements are mandatory. The hood pin is an essential security element and must be installed.

THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.

DESCRIPTION

Parts required (Not included) PAGE






WIRE TO WIRE DIAGRAM

	1X 1Amp Diode 1X 5 Amp Fuse 1X 1k Ohm Resistor	Page 3
--	--	--------


THARNESS DIAGRAM

THARNESS THAR-GM6	1x THAR-GM6	Page 4
-------------------	-------------	--------


BCM

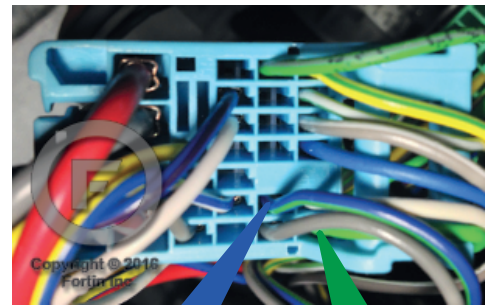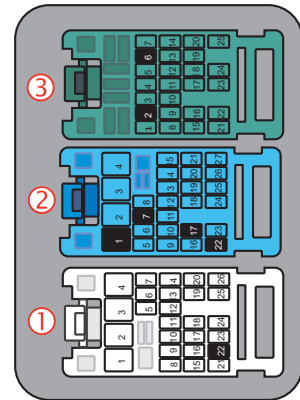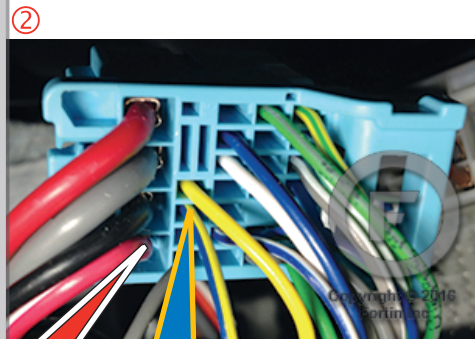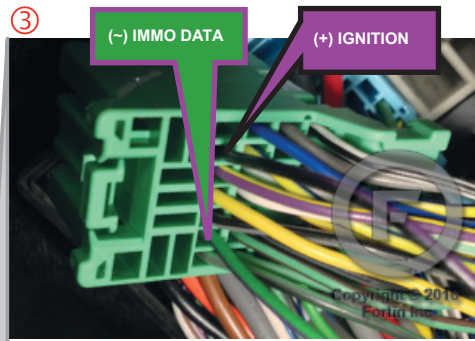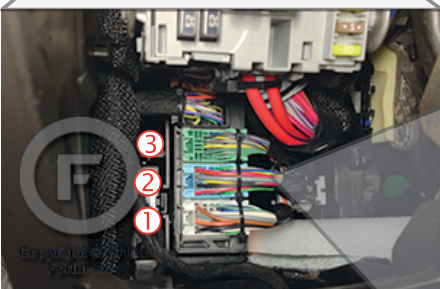

AUTOMATIC TRANSMISSION WIRING CONNECTION

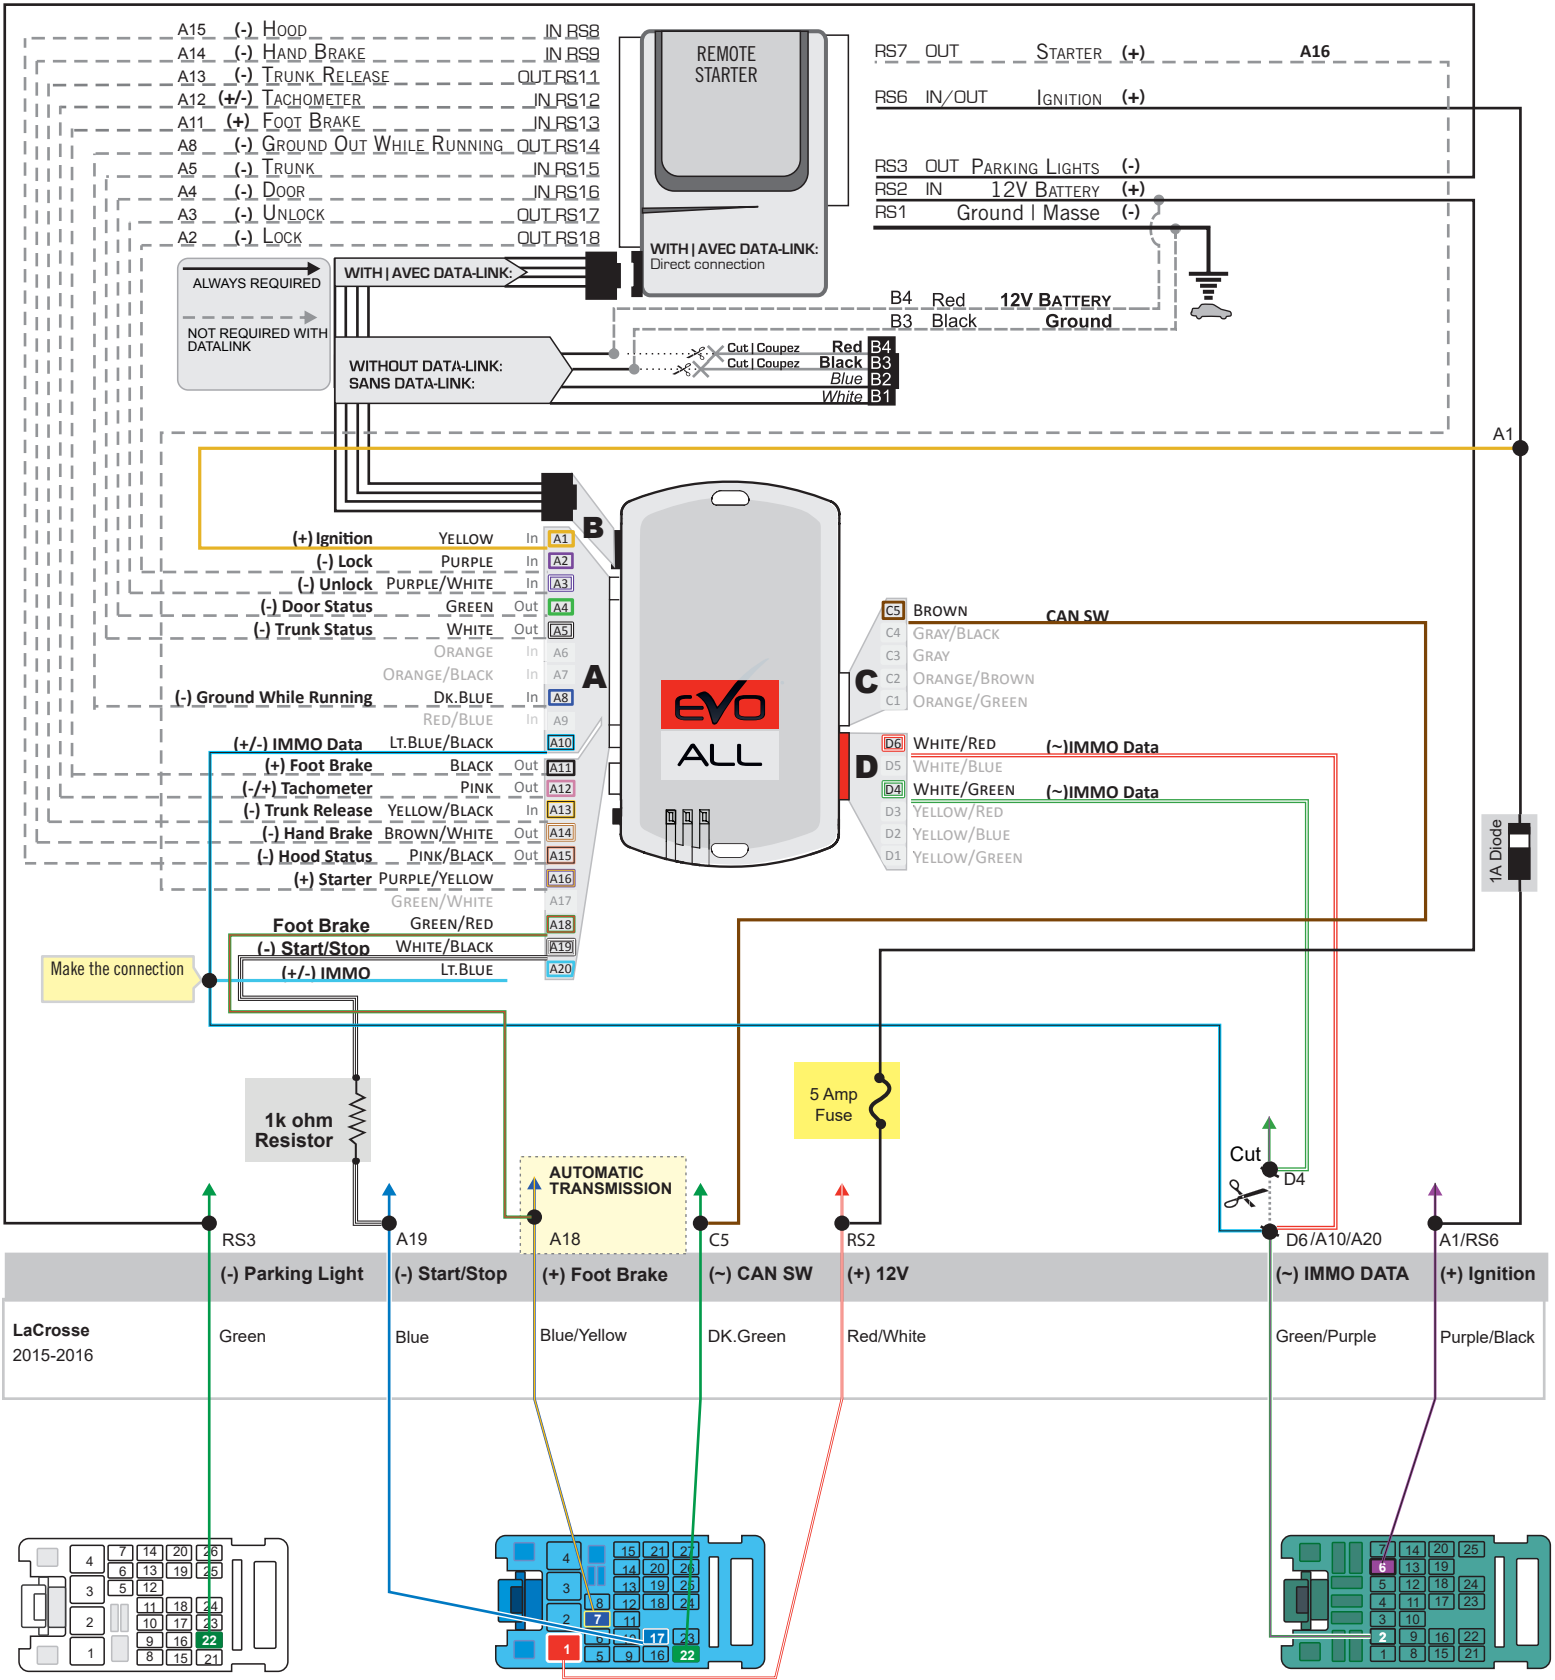


① Back view, 26-Pin White connector, at BCM.

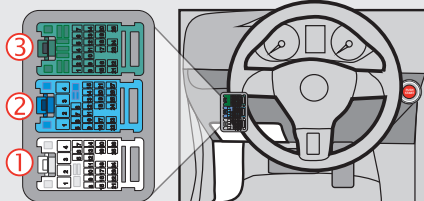


② Back view, 27-Pin Blue connector, at BCM.

③ Back view, 25-Pin Green connector, at BCM.

THAR-GM6 | WIRING CONNECTION

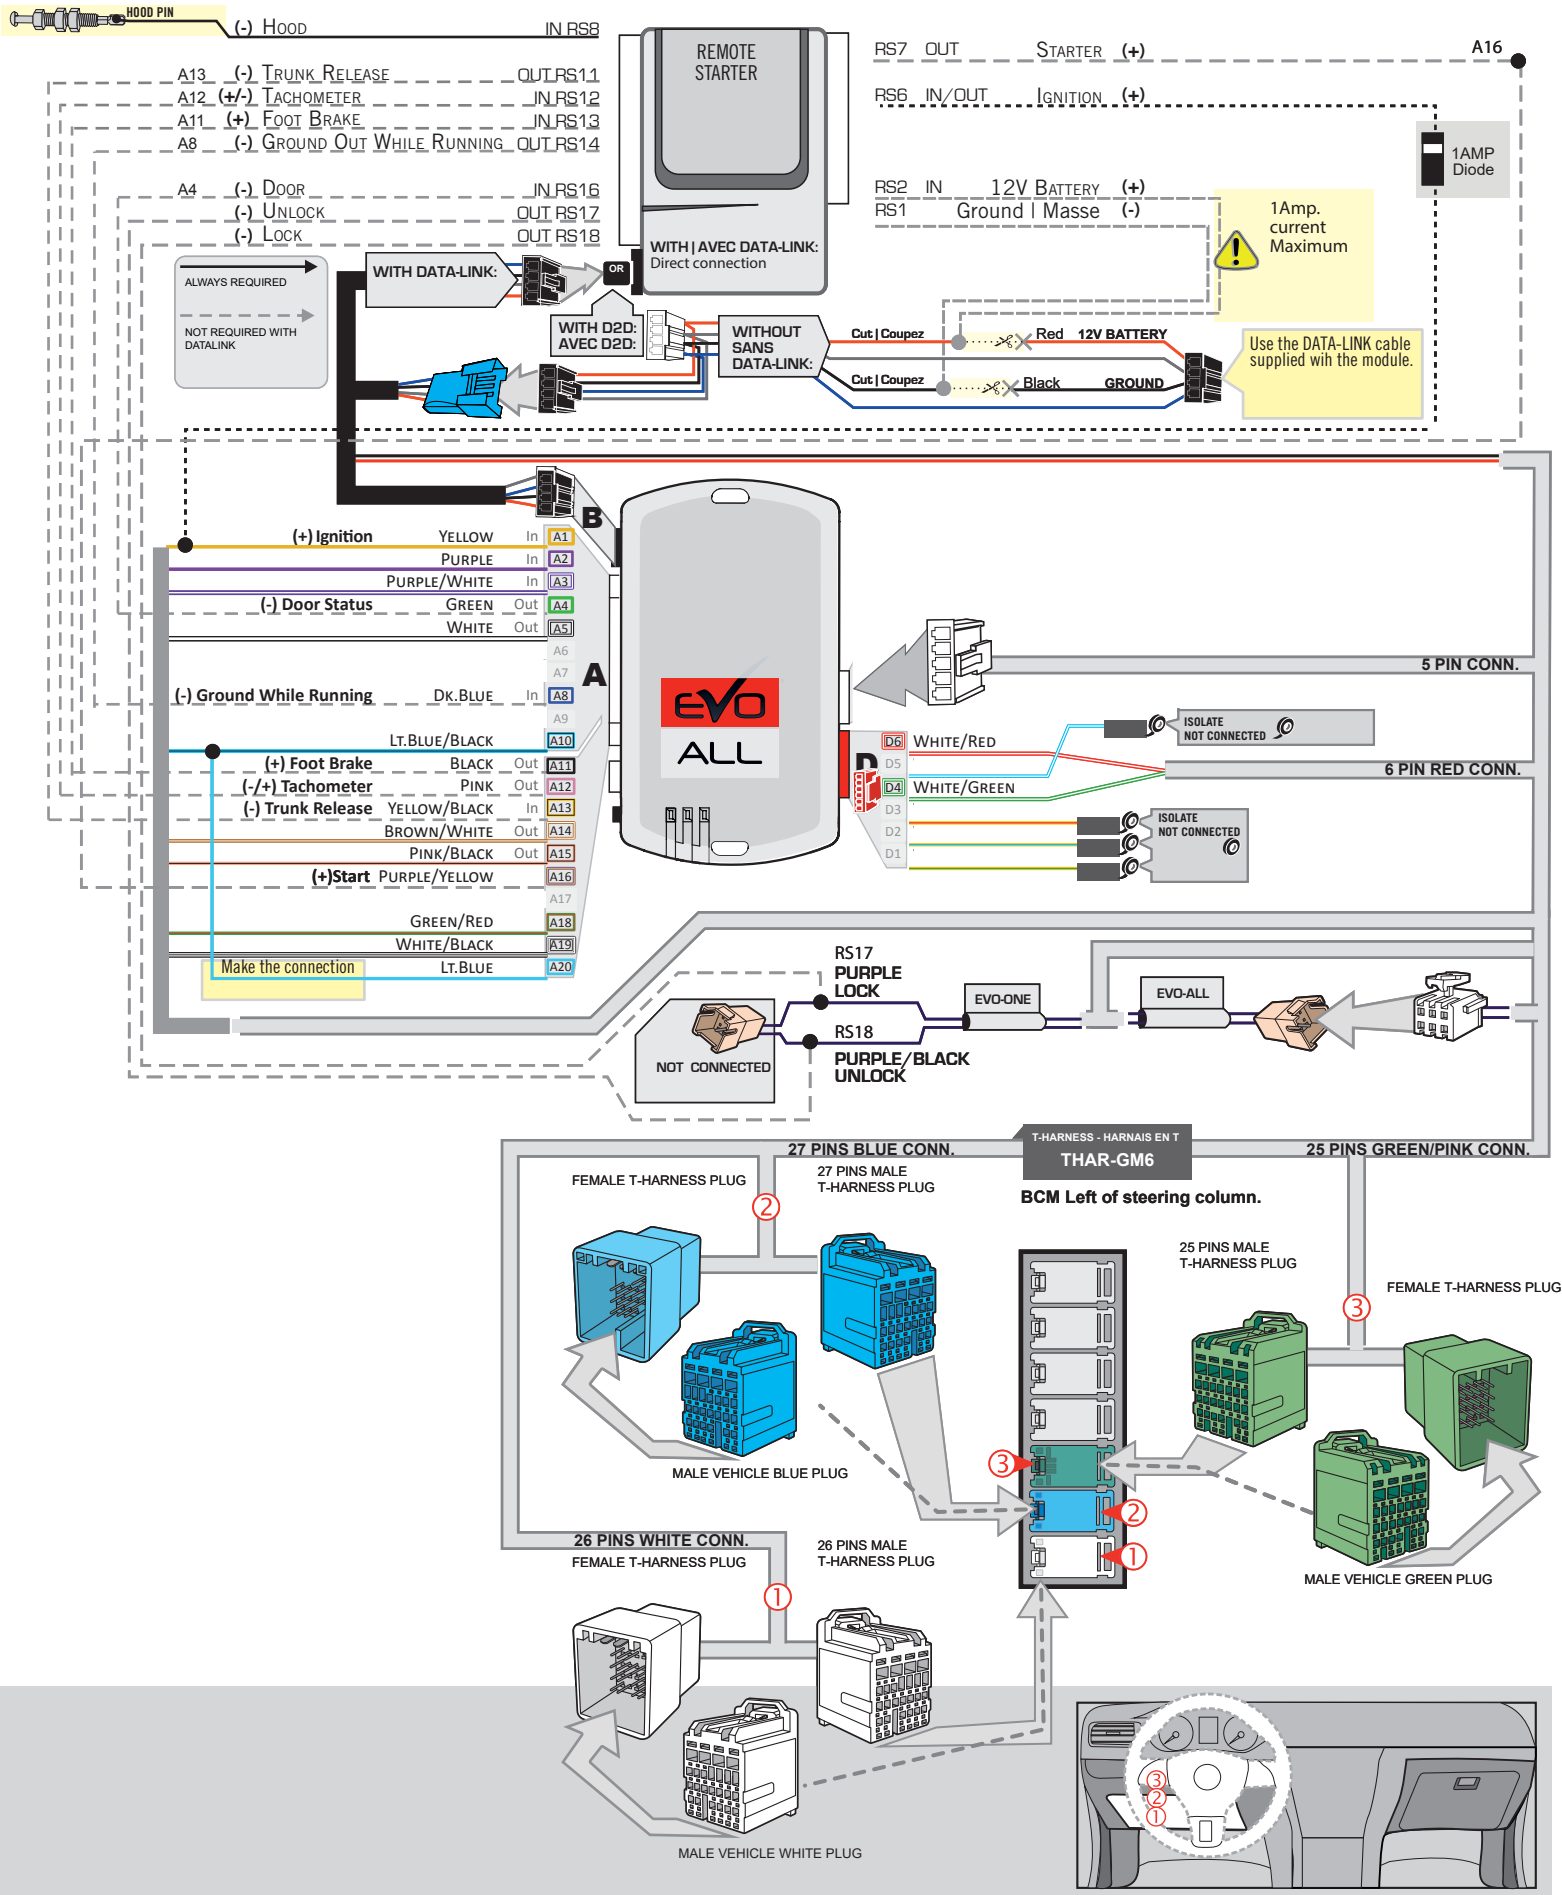


KEY BYPASS PROGRAMMING PROCEDURE 1/3 |

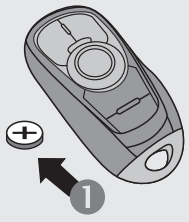


1 Remove the battery from the OEM remote.

2 Place the OEM remote into the transmitter pocket of the center console.


Refer to vehicle user guide for keyport location.

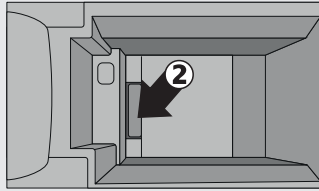

1

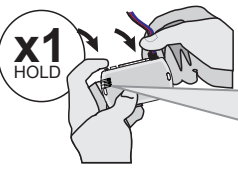


x1 HOLD

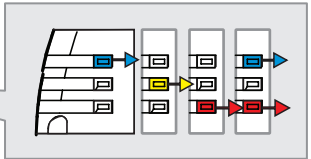


Press and hold the programming button:
Connect the 4-PIN Data-link harness (Black connector).

↳The Blue, Red, Yellow and Blue & Red LEDs will alternatively illuminate.

2




RELEASE

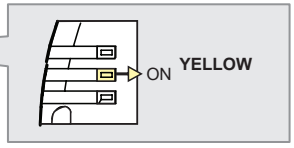


YELLOW ON

Release the programming button when the LED is **YELLOW**.

If the LED is not solid YELLOW disconnect the 4-Pin connector (Data-Link) and go back to step 1.

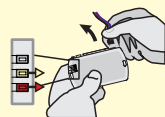


3

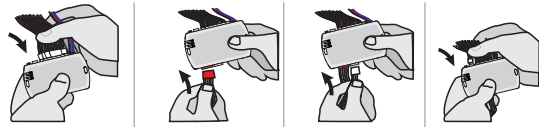


Insert the required remaining connectors.

4




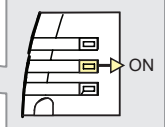
x5 PRESS

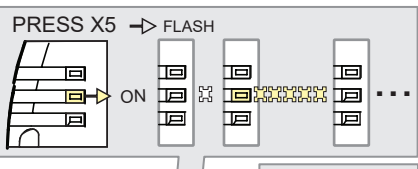

PRESS X5 → FLASH


Press and release the programming button five (5x) times.

↳The YELLOW LED will flash 5 times each second.


WAIT for the YELLOW LED to turn ON solid.

5

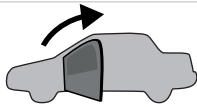


Open the driver door.


6



Press the foot-brake pedal.



x1 PRESS HOLD START RELEASE START

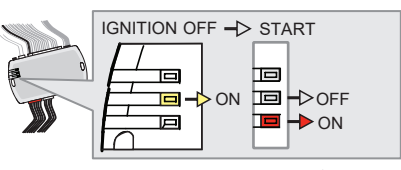

IGNITION OFF → START

Press the Push-to-Start button until the engine start.

Release the foot-brake pedal.

↳The RED LED will turn ON.
↳The YELLOW LED will turn OFF.


KEY BYPASS PROGRAMMING PROCEDURE 2/3 |

7





Press the Push-to-Start button until the engine turn OFF.

8

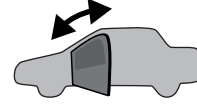

Close and open the driver door.

9

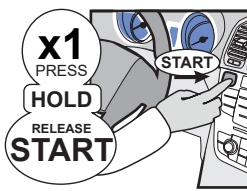
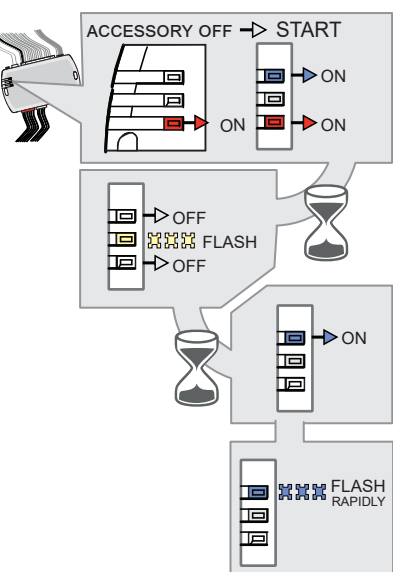
Press the foot-brake pedal.

Press the Push-to-Start button until the engine start.

Release the foot-brake pedal.

- ↳ The BLUE LED will turn ON.
- ↳ The BLUE LED will turn OFF. The RED LED will turn OFF.
- ↳ The YELLOW LED will flash rapidly
- ↳ The BLUE LED will turn ON.
- ↳ The BLUE LED will flash rapidly


10

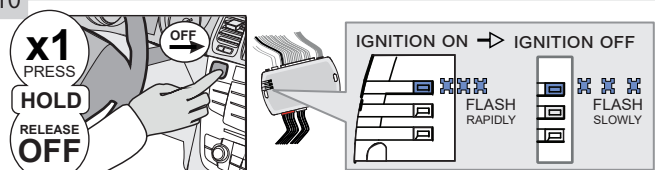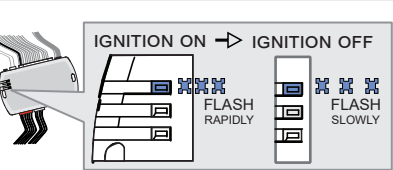Press the Push-to-Start button until the engine turn OFF.


- ↳ The BLUE LED will flash slowly

11

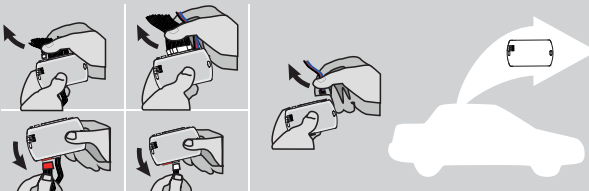

Disconnect all the connectors and after the Data-Link (4-pins) connector.


12

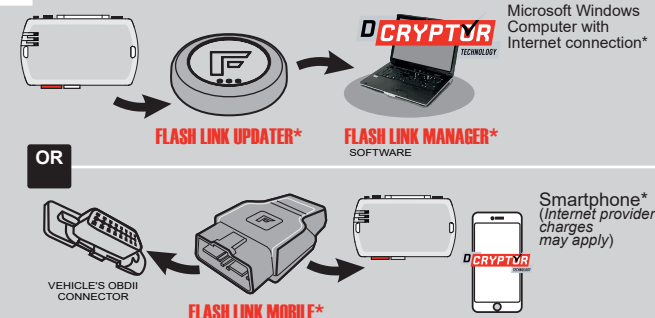

Use the tool: FLASH LINK UPDATER or FLASH LINK MOBILE to visit the DCRYPTOR menu.

*Parts required (not included)

13

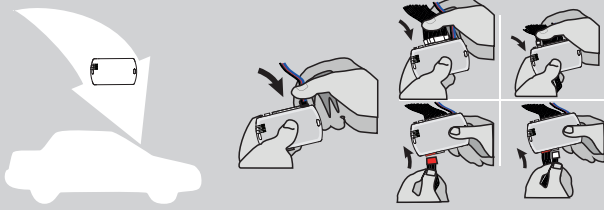

AFTER DCRYPTOR PROGRAMMING COMPLETED
Go back to the vehicle and **reconnect** the 4-Pin (Data-Link) connector and after, all the remaining connector.



The module is now programmed.



REMOTE STARTER / ALARM VERIFICATION PROCEDURE

Test the remote starter. Remote start the vehicle.

REMOTE STARTER FUNCTIONALITY |



All doors must be closed.

 


Remote start the vehicle.



Unlock the doors with either:

- The OEM remote
- The remote-starter remote
- Or the proximity remote



Enter the vehicle with the Intelligent Key.



The vehicle can now be put in to gear and driven.

If the vehicle is not unlocked with one of these conditions the remote-starter will shut down as soon as any door is opened.



REGULAR INSTALLATION AND THAR-GM6 INSTALLATION

ADDENDUM - SUGGESTED WIRING CONFIGURATION

VEHICLE	YEARS	Vehicle functions supported in this diagram (functional if equipped)													
		Immobilizer bypass	Lock	Unlock	Arm	Disarm	Parking Light	Trunk (open)	RAP Disable	Tachometer	Door Status	Trunk Status	Hand-Brake Status	Foot-Brake Status	OEM Remote Monitoring
CHEVROLET															
Malibu	Push-To-Start	2013-2015	•	•	•	•	•	•	•	•	•	•	•	•	•




FIRMWARE VERSION

70.[41]

GM MINIMUM

To add the firmware version and the options, use the **FLASH LINK UPDATER** or **FLASH LINK MOBILE** tool, sold separately.

<p>IF THE VEHICLE IS NOT EQUIPPED WITH FUNCTIONAL HOOD PIN:</p>	A11	OFF	Hood trigger (Output Status).
--	-----	------------	-------------------------------

	UNIT OPTION	DESCRIPTION
 <p>Program bypass option:</p>	C1	OEM Remote status (Lock/Unlock) monitoring
	D6	Push-to-Start

 <p style="font-size: 18px; font-weight: bold; color: black;">ATTENTION!</p>	 <p>DATE: XX-XX</p>	E5	OFF	SPECIAL FUNCTIONS: BY DEFAULT DEACTIVATED
		ON	MANUFACTURED MODULES BETWEEN: 04/2018 TO 04/2019	

MANDATORY INSTALL

***HOOD PIN**



HOOD STATUS: THE HOOD PIN SWITCH MUST BE INSTALLED IF THE VEHICLE CAN BE REMOTE STARTED WITH THE HOOD OPEN, SET FUNCTION A11 TO OFF.

A11 OFF

Notice: the installation of safety elements are mandatory. The hood pin is an essential security element and must be installed.

THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.

DESCRIPTION

Parts required (Not included) PAGE



WIRE TO WIRE DIAGRAM

<p>1X 1Amp Diode 1X 5 Amp Fuse 1X 1k Ohm Resistor</p>	<p>Page 3</p>
---	---------------




THARNESS DIAGRAM

<p>THARNESS THAR-GM6</p>	<p>1x THAR-GM6</p>	<p>Page 4</p>
--------------------------	--------------------	---------------

BCM

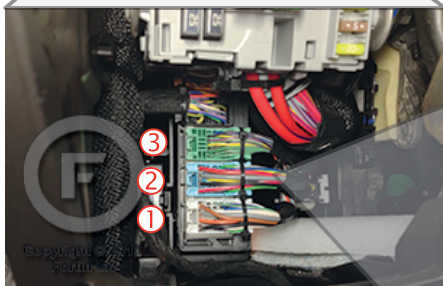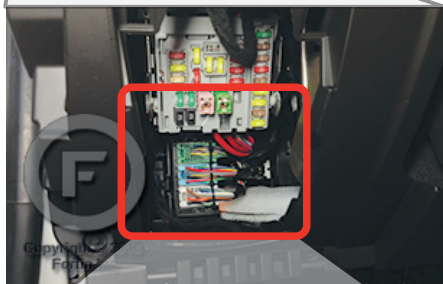


Malibu

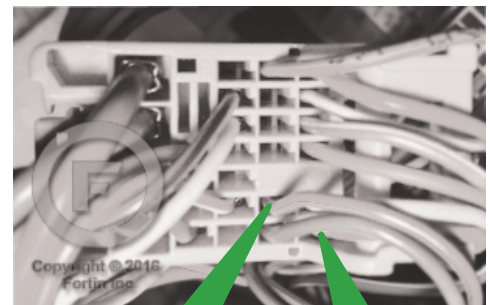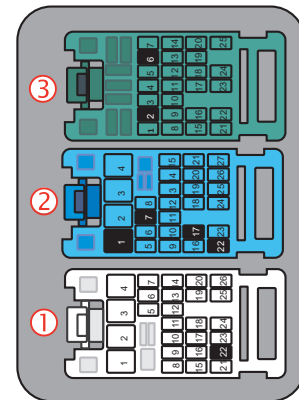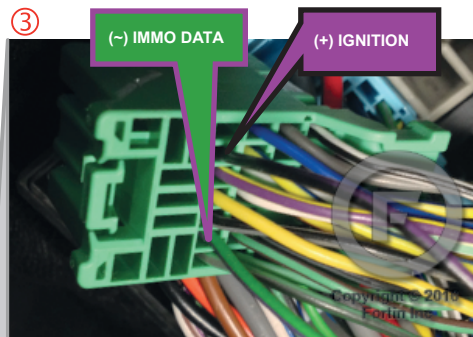


(-) PARKING LIGHTS

AUTOMATIC TRANSMISSION WIRING CONNECTION

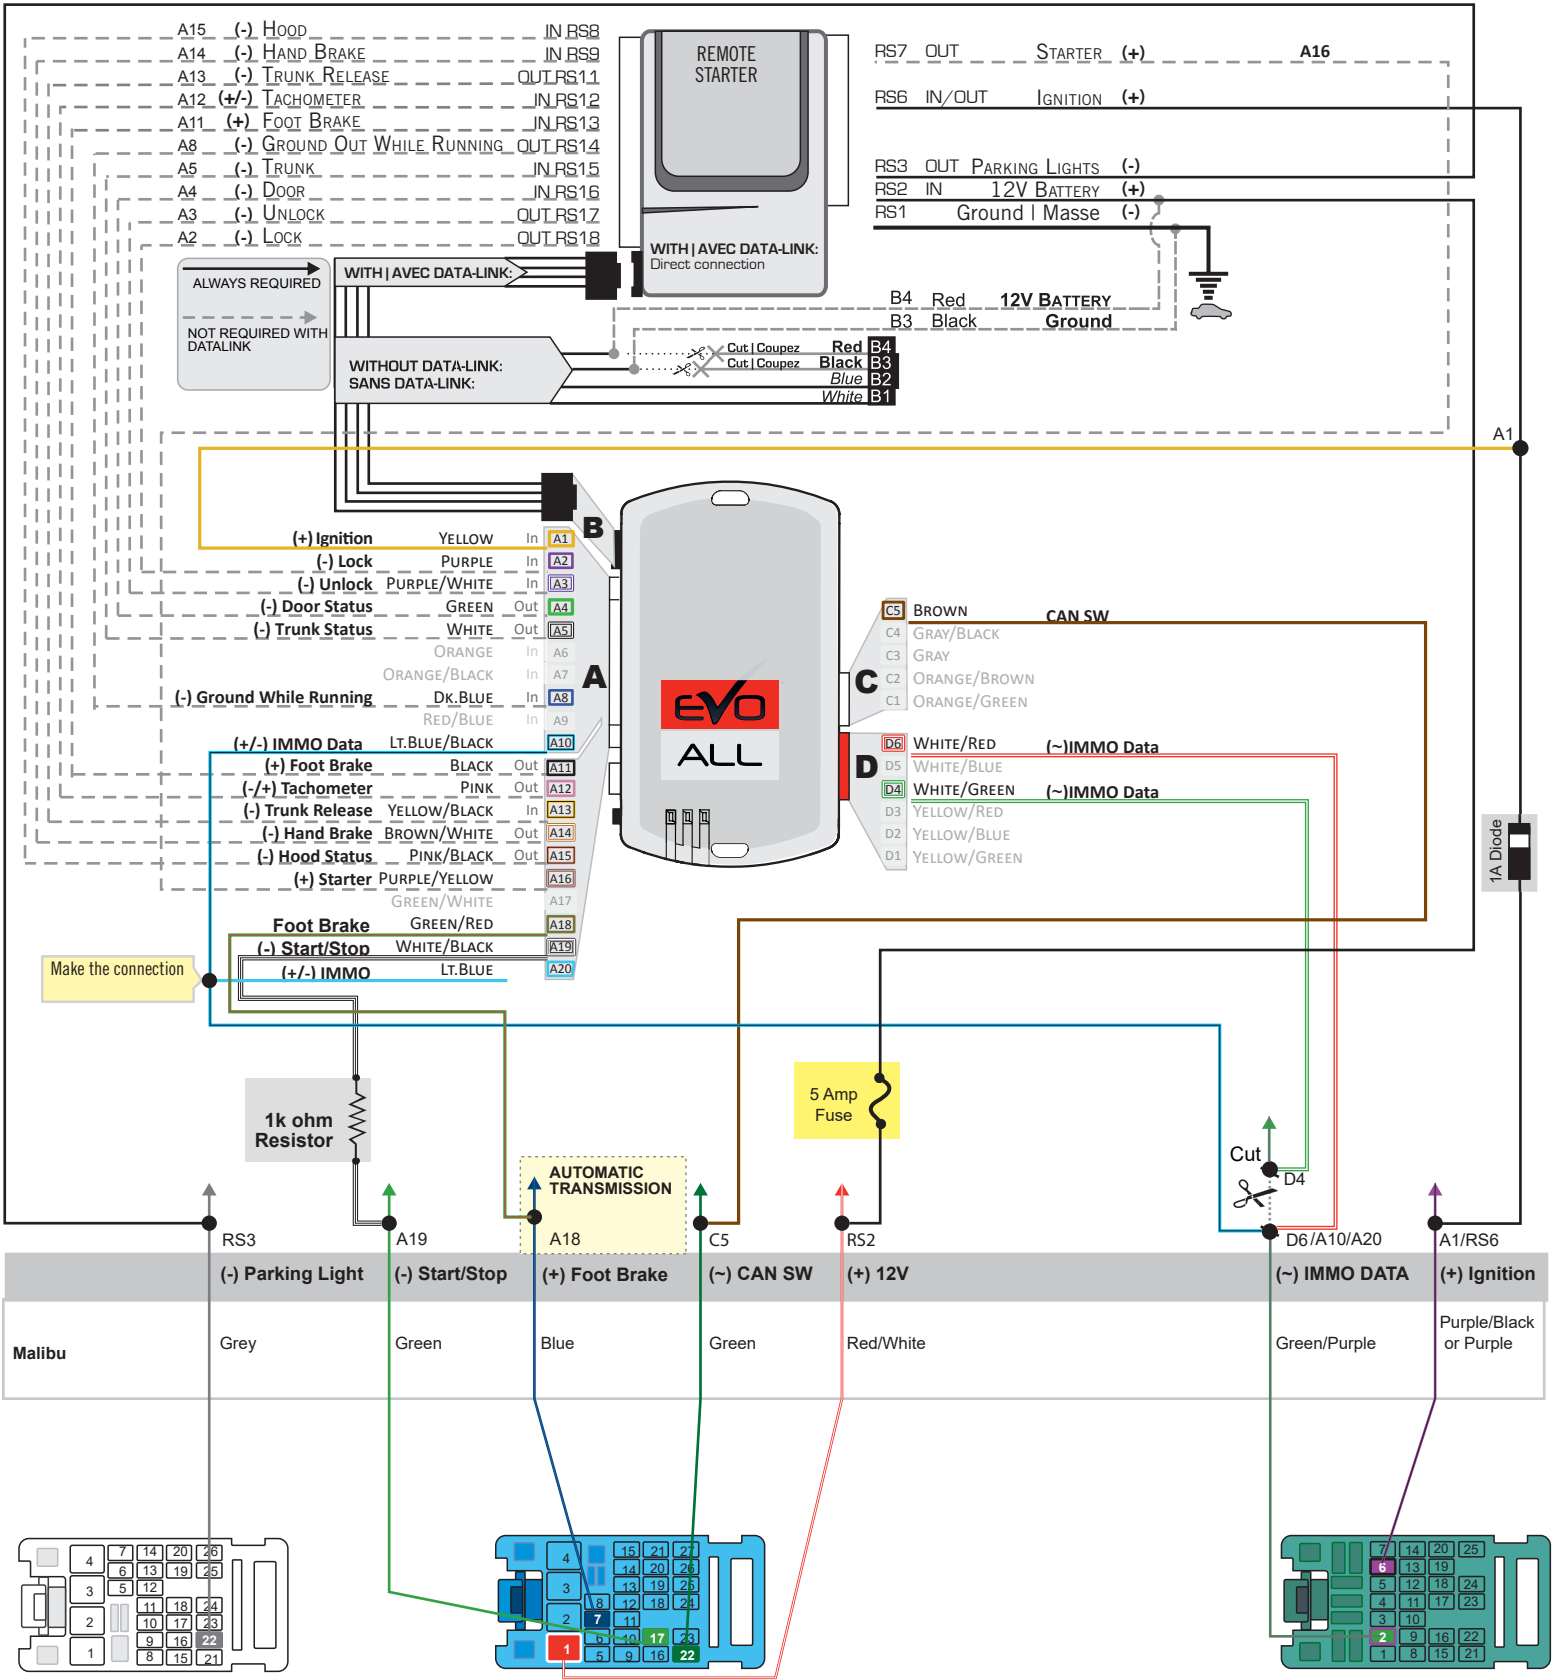


① Back view, 26-Pin White connector, at BCM.

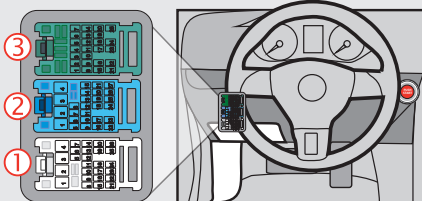

② Back view, 27-Pin Blue connector, at BCM.

③ Back view, 25-Pin Green connector, at BCM.

THAR-GM6 | WIRING CONNECTION

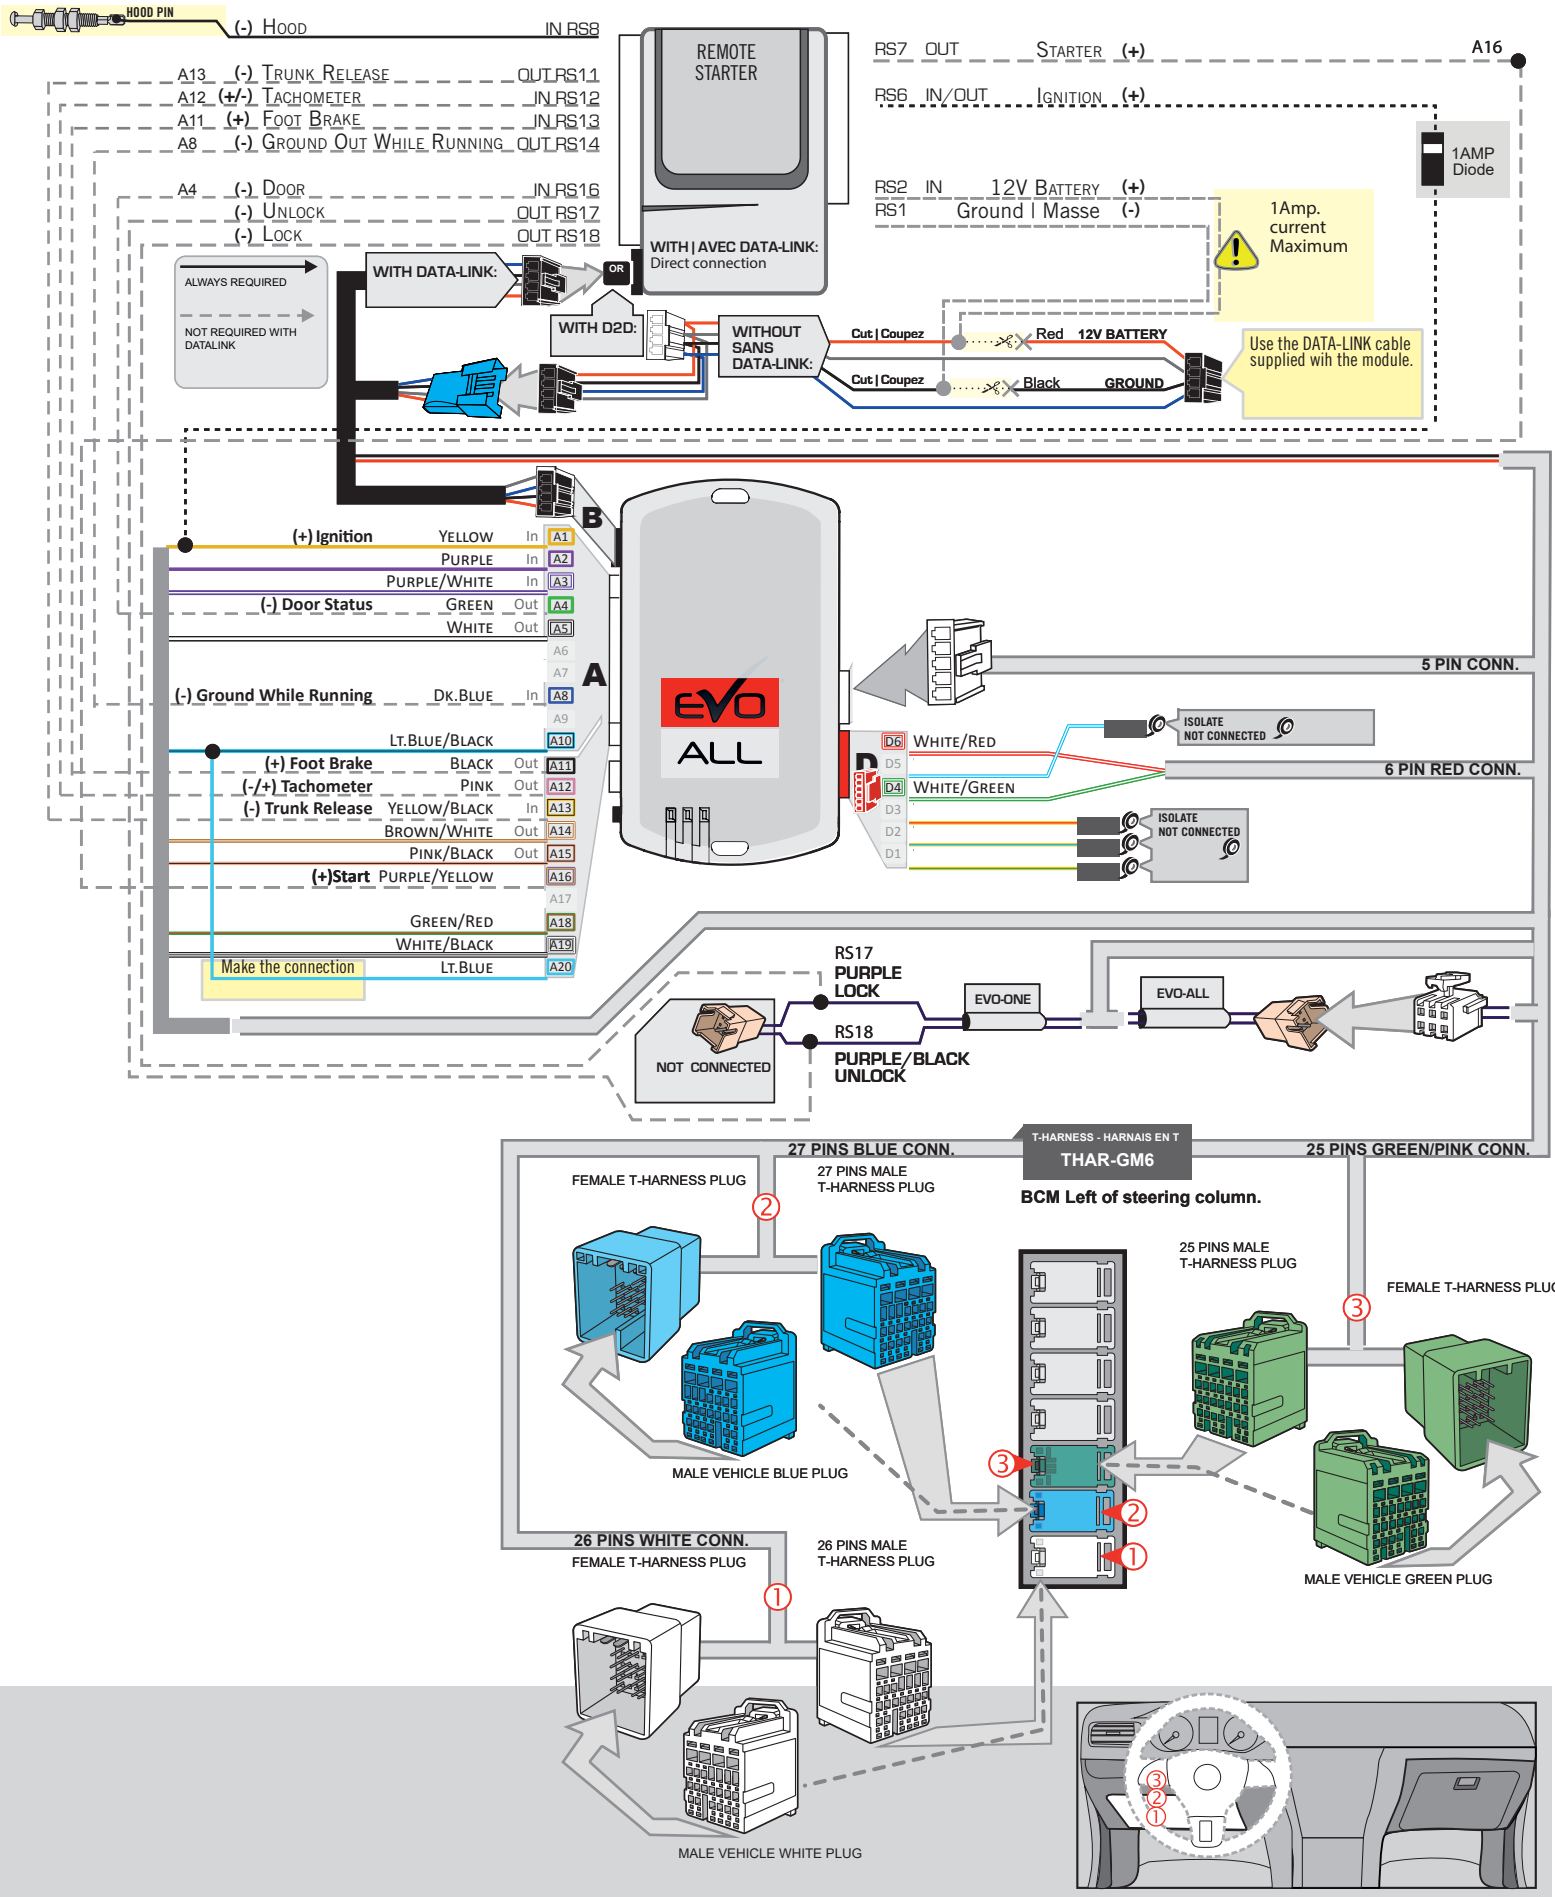


KEY BYPASS PROGRAMMING PROCEDURE 1/3 |


Chevrolet Malibu



- 1 Remove the battery from the OEM remote.
- 2 Place the OEM remote into the transmitter pocket of the center console.
Refer to vehicle user guide for keyport location.

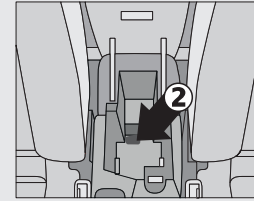


1

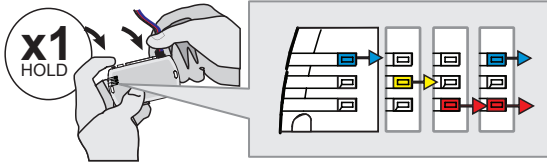

Press and hold the programming button:
Connect the 4-PIN Data-link harness (Black connector).


↳The Blue, Red, Yellow and Blue & Red LEDs will alternatively illuminate.

2

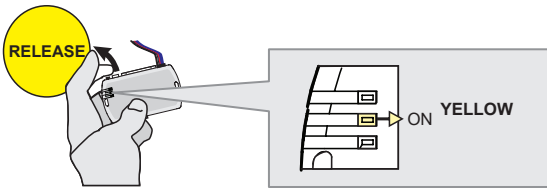


Release the programming button when the LED is YELLOW.

 If the LED is not solid YELLOW disconnect the 4-Pin connector (Data-Link) and go back to step 1.




3

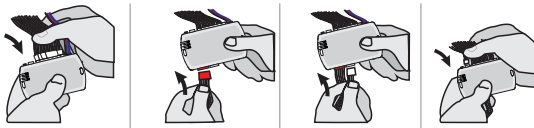

Insert the required remaining connectors.

4

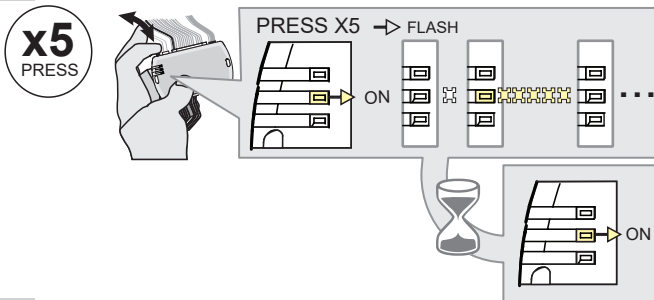


Press and release the programming button five (5x) times.

↳The YELLOW LED will flash 5 times each second.


↳**WAIT** for the YELLOW LED to turn ON solide.

 5



Open the driver door.

6

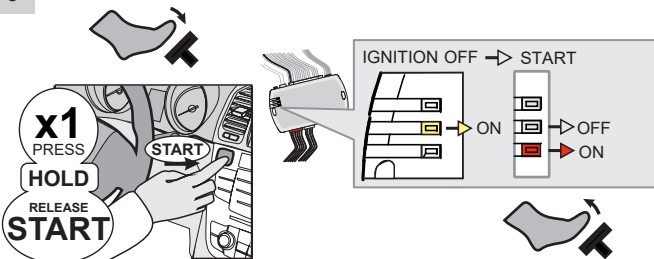

Press the foot-brake pedal.

Press the Push-to-Start button until the engine start.

Release the foot-brake pedal.

↳The RED LED will turn ON.
↳The YELLOW LED will turn OFF.


KEY BYPASS PROGRAMMING PROCEDURE 2/3 |

7




Press the Push-to-Start button until the engine turn OFF.

8

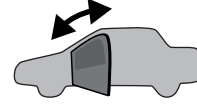

Close and open the driver door.

9

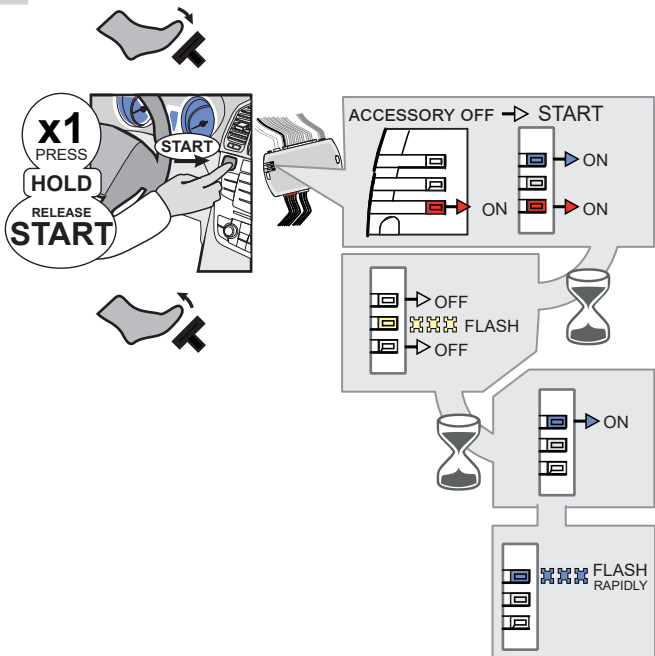


Press the foot-brake pedal.

Press the Push-to-Start button until the engine start.

Release the foot-brake pedal.

- ↳ The BLUE LED will turn ON.
- ↳ The BLUE LED will turn OFF. The RED LED will turn OFF.
- ↳ The YELLOW LED will flash rapidly
- ↳ The BLUE LED will turn ON.
- ↳ The BLUE LED will flash rapidly


10

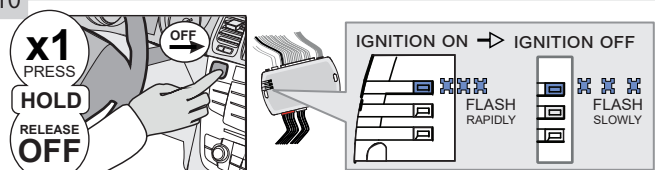

Press the Push-to-Start button until the engine turn OFF.


- ↳ The BLUE LED will flash slowly

11

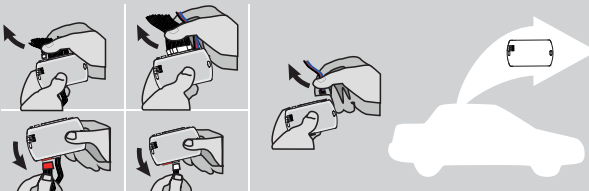

Disconnect all the connectors and after the Data-Link (4-pins) connector.


12

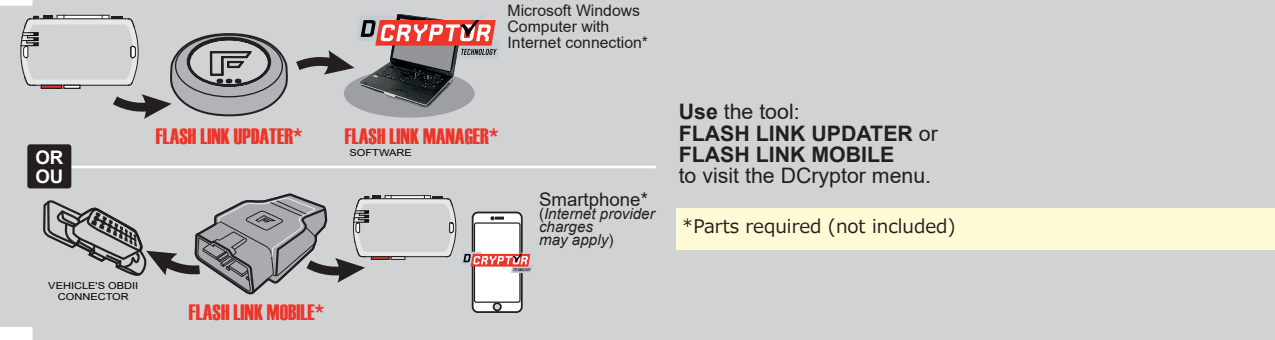

Use the tool: FLASH LINK UPDATER or FLASH LINK MOBILE to visit the DCryptor menu.

***Parts required (not included)**

13

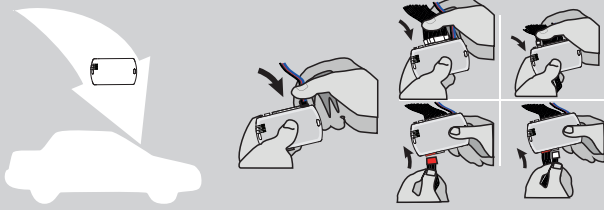

AFTER DCRYPTOR PROGRAMMING COMPLETED
Go back to the vehicle and **reconnect** the 4-Pin (Data-Link) connector and after, all the remaining connector.



The module is now programmed.



REMOTE STARTER / ALARM VERIFICATION PROCEDURE

Test the remote starter. Remote start the vehicle.

REMOTE STARTER FUNCTIONALITY |



All doors must be closed.

 


Remote start the vehicle.



Unlock the doors with either:

- The OEM remote
- The remote-starter remote
- Or the proximity remote



Enter the vehicle with the Intelligent Key.




The vehicle can now be put in to gear and driven.


If the vehicle is not unlocked with one of these conditions the remote-starter will shut down as soon as any door is opened.



REGULAR INSTALLATION AND THAR-GM6 INSTALLATION

ADDENDUM - SUGGESTED WIRING CONFIGURATION

VEHICLE		YEARS	Vehicle functions supported in this diagram (functional if equipped)													
			Immobilizer bypass	Lock	Unlock	Arm	Disarm	Parking Light	Trunk (open)	RAP Disable	Tachometer	Door Status	Trunk Status	Hand-Brake Status	Foot-Brake Status	OEM Remote Monitoring
BUICK																
Regal	Push-To-Start	2011-2017	•	•	•	•	•	•	•	•	•	•	•	•	•	•




FIRMWARE VERSION

70.[41]

GM MINIMUM

To add the firmware version and the options, use the **FLASH LINK UPDATER** or **FLASH LINK MOBILE** tool, sold separately.


IF THE VEHICLE IS NOT EQUIPPED WITH FUNCTIONAL HOOD PIN:	A11	OFF	Hood trigger (Output Status).
---	------------	------------	-------------------------------

	UNIT OPTION	DESCRIPTION
 <p>Program bypass option:</p>	C1	OEM Remote status (Lock/Unlock) monitoring
	D6	Push-to-Start

	ATTENTION!	 <p>DATE: XX-XX</p>	E5	OFF	SPECIAL FUNCTIONS: BY DEFAULT DEACTIVATED
				ON	MANUFACTURED MODULES BETWEEN: 04/2018 TO 04/2019

NOTES

****Manuelle Transmission.** Remote starter with compatible Data-Link required

MANDATORY INSTALL		
<p>*HOOD PIN</p> 	<p>HOOD STATUS: THE HOOD PIN SWITCH MUST BE INSTALLED IF THE VEHICLE CAN BE REMOTE STARTED WITH THE HOOD OPEN, SET FUNCTION A11 TO OFF.</p>	<div style="display: flex; align-items: center;"> <div style="margin-right: 10px;"> <p style="font-size: 24px; color: red;">A11</p> </div> <div style="background-color: red; color: white; padding: 5px; text-align: center;"> OFF </div> </div>
		<p>Notice: the installation of safety elements are mandatory. The hood pin is an essential security element and must be installed.</p>
		<p>THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.</p>

DESCRIPTION

Parts required (Not included) PAGE



WIRE TO WIRE DIAGRAM

AUTOMATIC TRANSMISSION	1X 1Amp Diode 1X 5 Amp Fuse 1X 1k Ohm Resistor	Page 3
MANUAL TRANSMISSION	1X 1Amp Diode 1X 5 Amp Fuse 1X 1k Ohm Resistor 1X 180 Ohm Resistor	Page 4

THARNESS DIAGRAM






THARNESS THAR-GM6	AUTOMATIC TRANSMISSION	1x THAR-GM6	Page 5
THARNESS THAR-GM6	MANUAL TRANSMISSION	1x THAR-GM6 1X 180 Ohm Resistor	Page 6

BCM

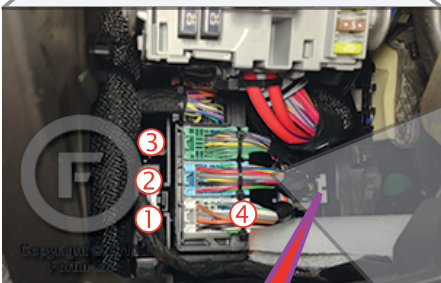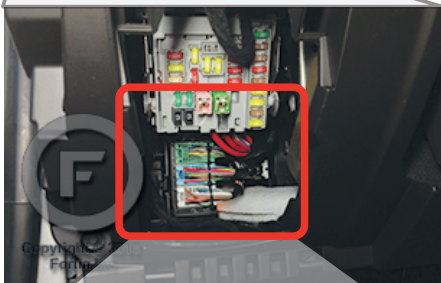


Regal


(-) CLUTCH BYPASS
MANUAL
TRANSMISSION

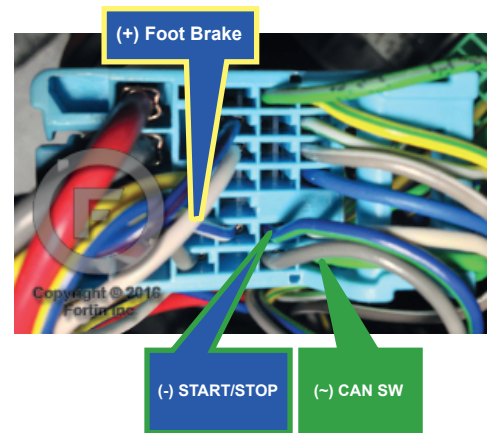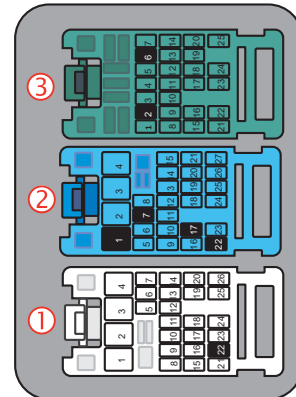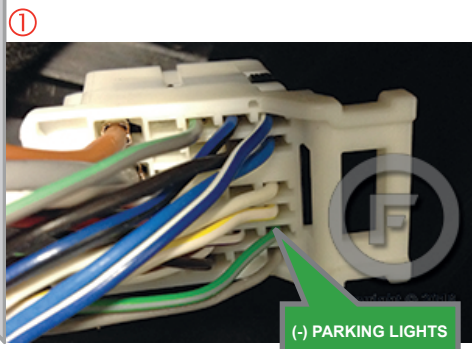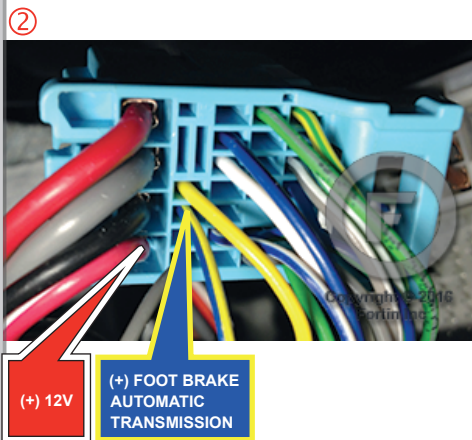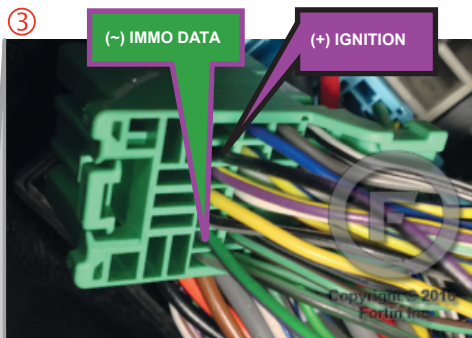

AUTOMATIC TRANSMISSION WIRING CONNECTION

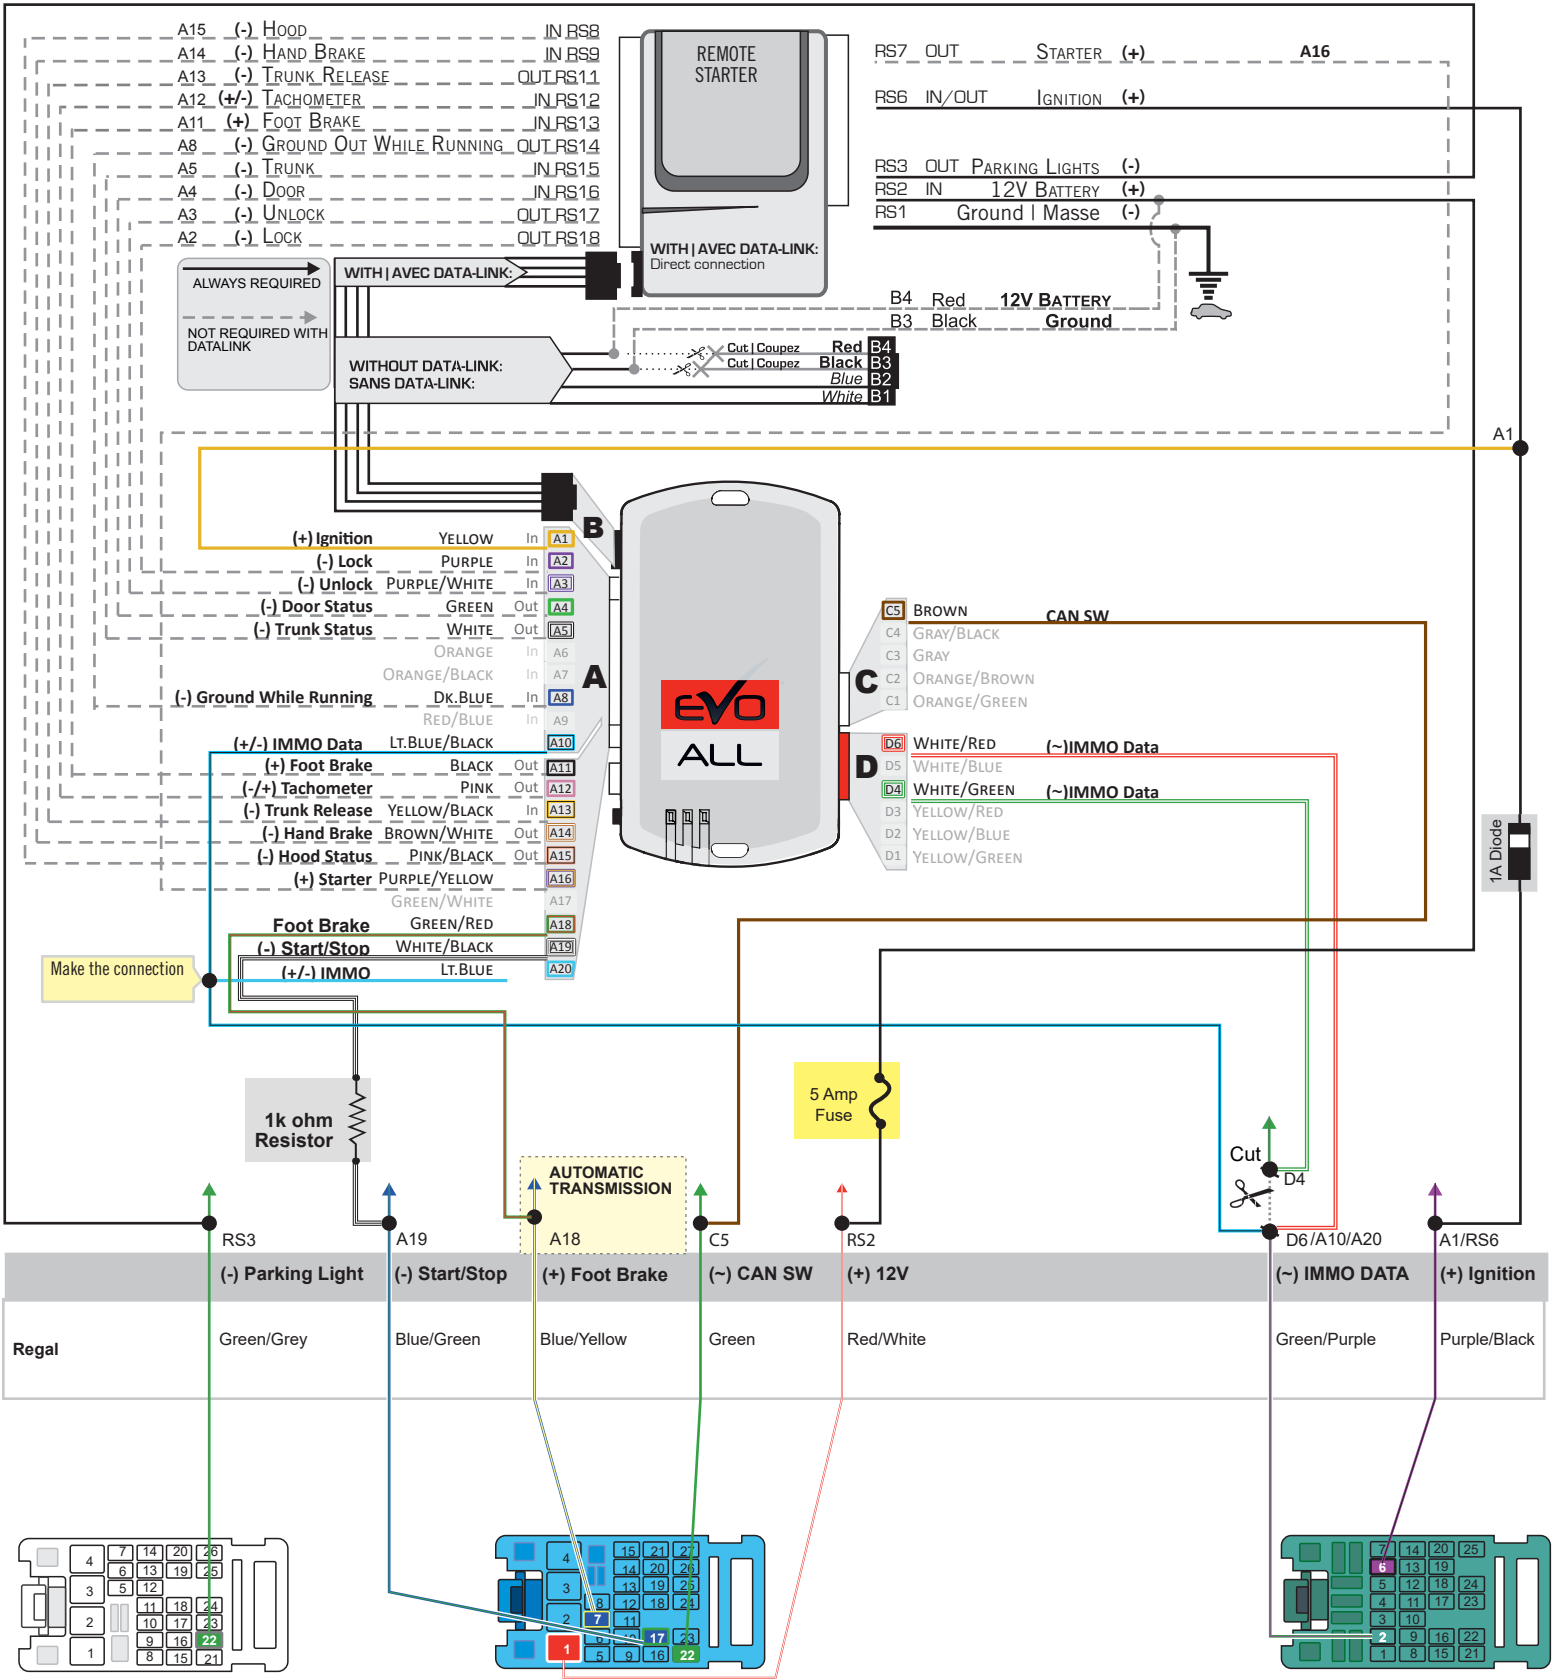


① Back view, 26-Pin White connector, at BCM.

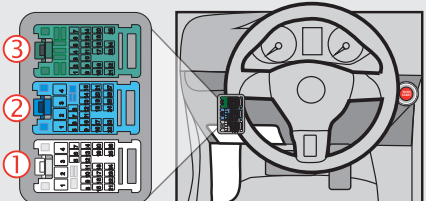


② Back view, 27-Pin Blue connector, at BCM.

③ Back view, 25-Pin Green connector, at BCM.

MANUAL TRANSMISSION WIRING CONNECTION

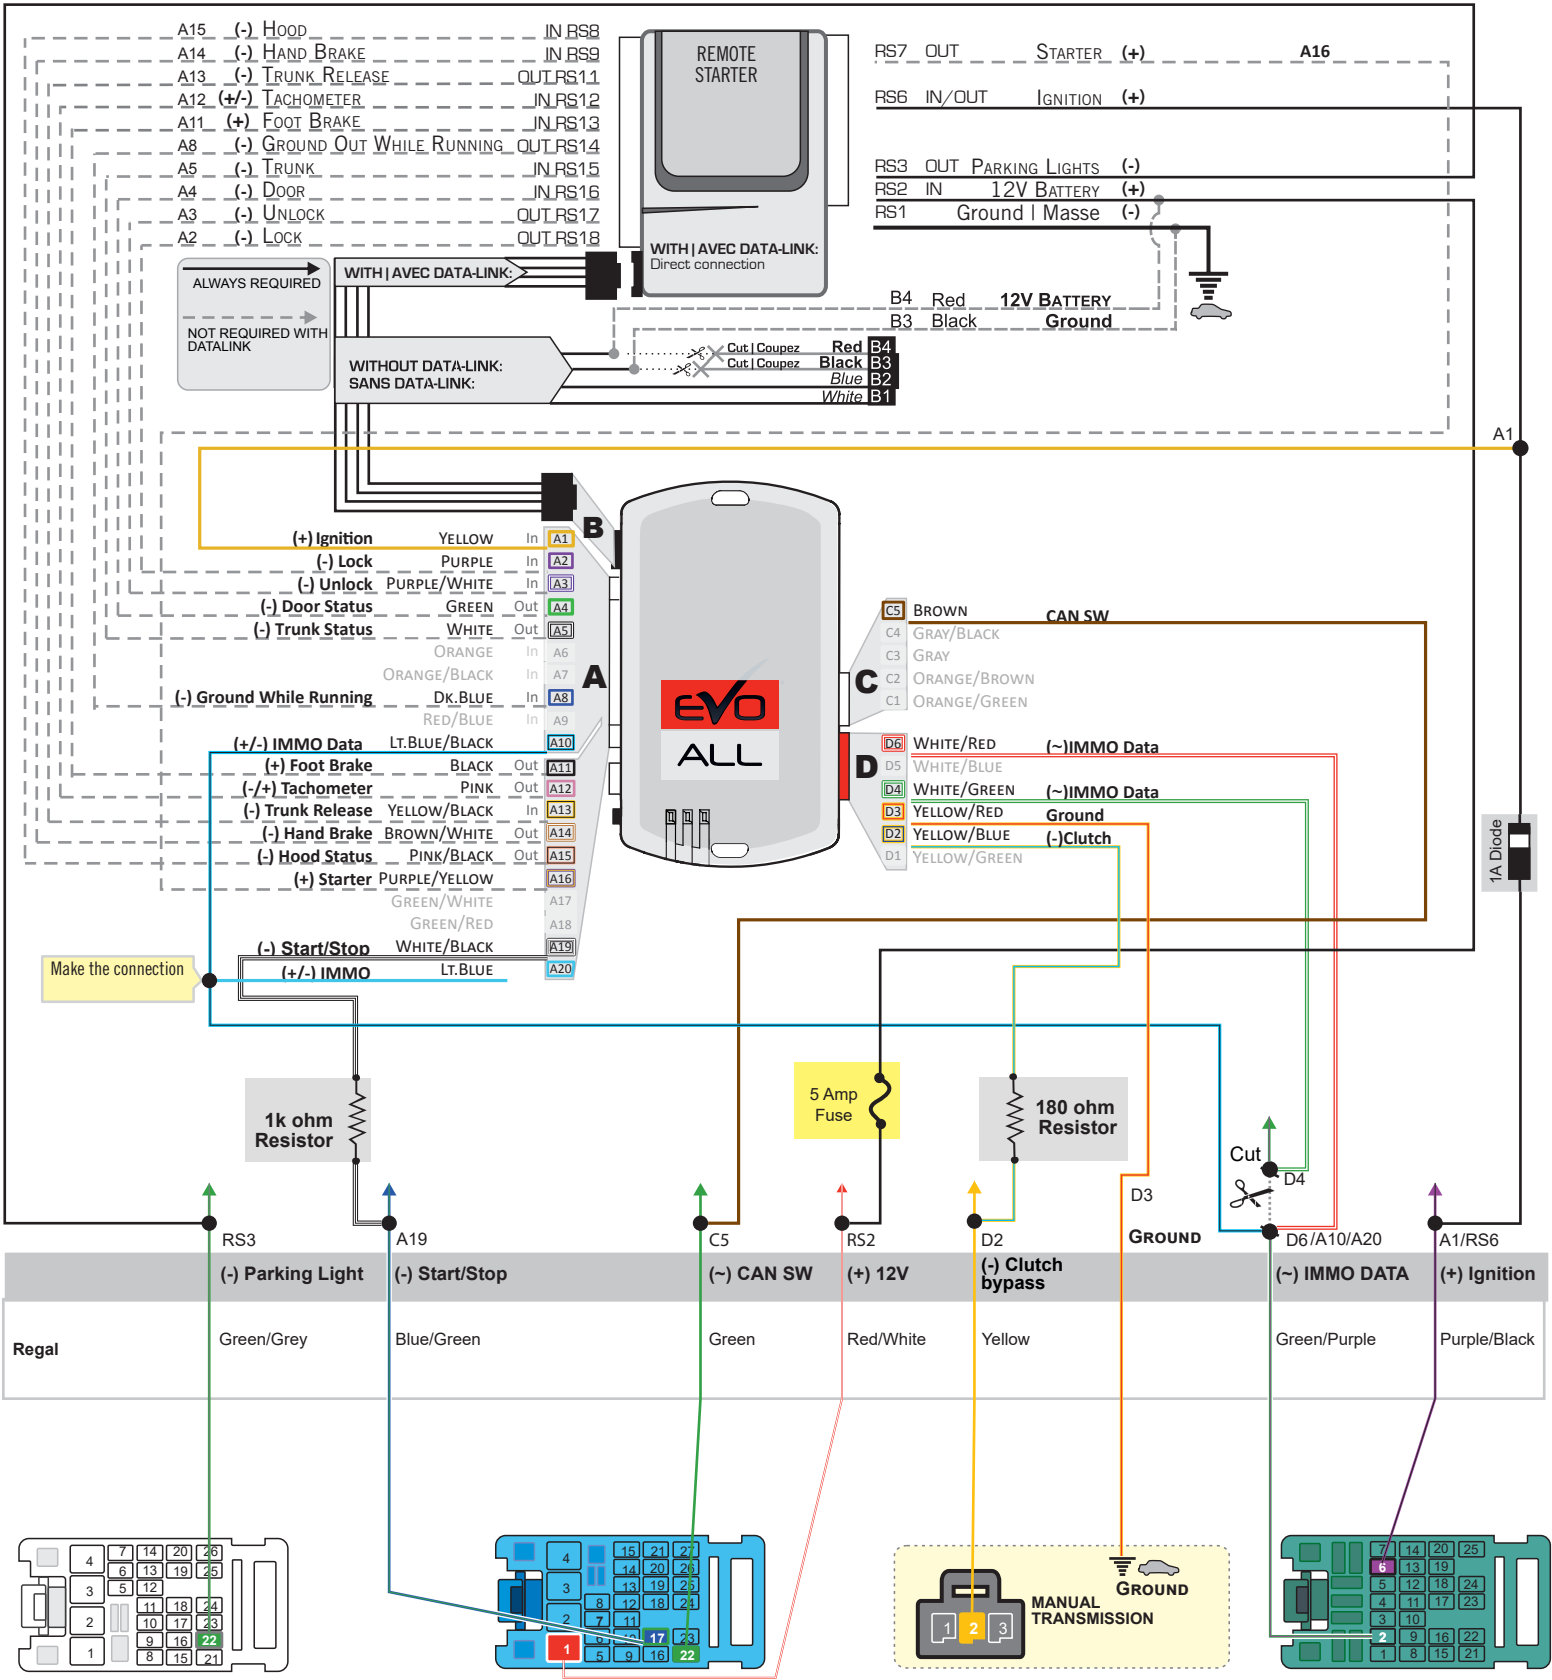

① Back view, 26-Pin White connector, at BCM.

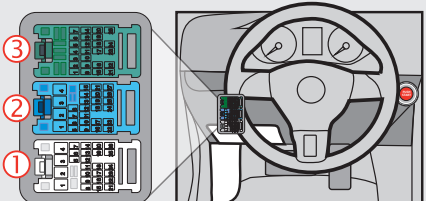



② Back view, 27-Pin Blue connector, at BCM.

④ Back view, 3-Pin Black connector, at Switch.

③ Back view, 25-Pin Green connector, at BCM.

THAR-GM6 | AUTOMATIC TRANSMISSION CONNECTION

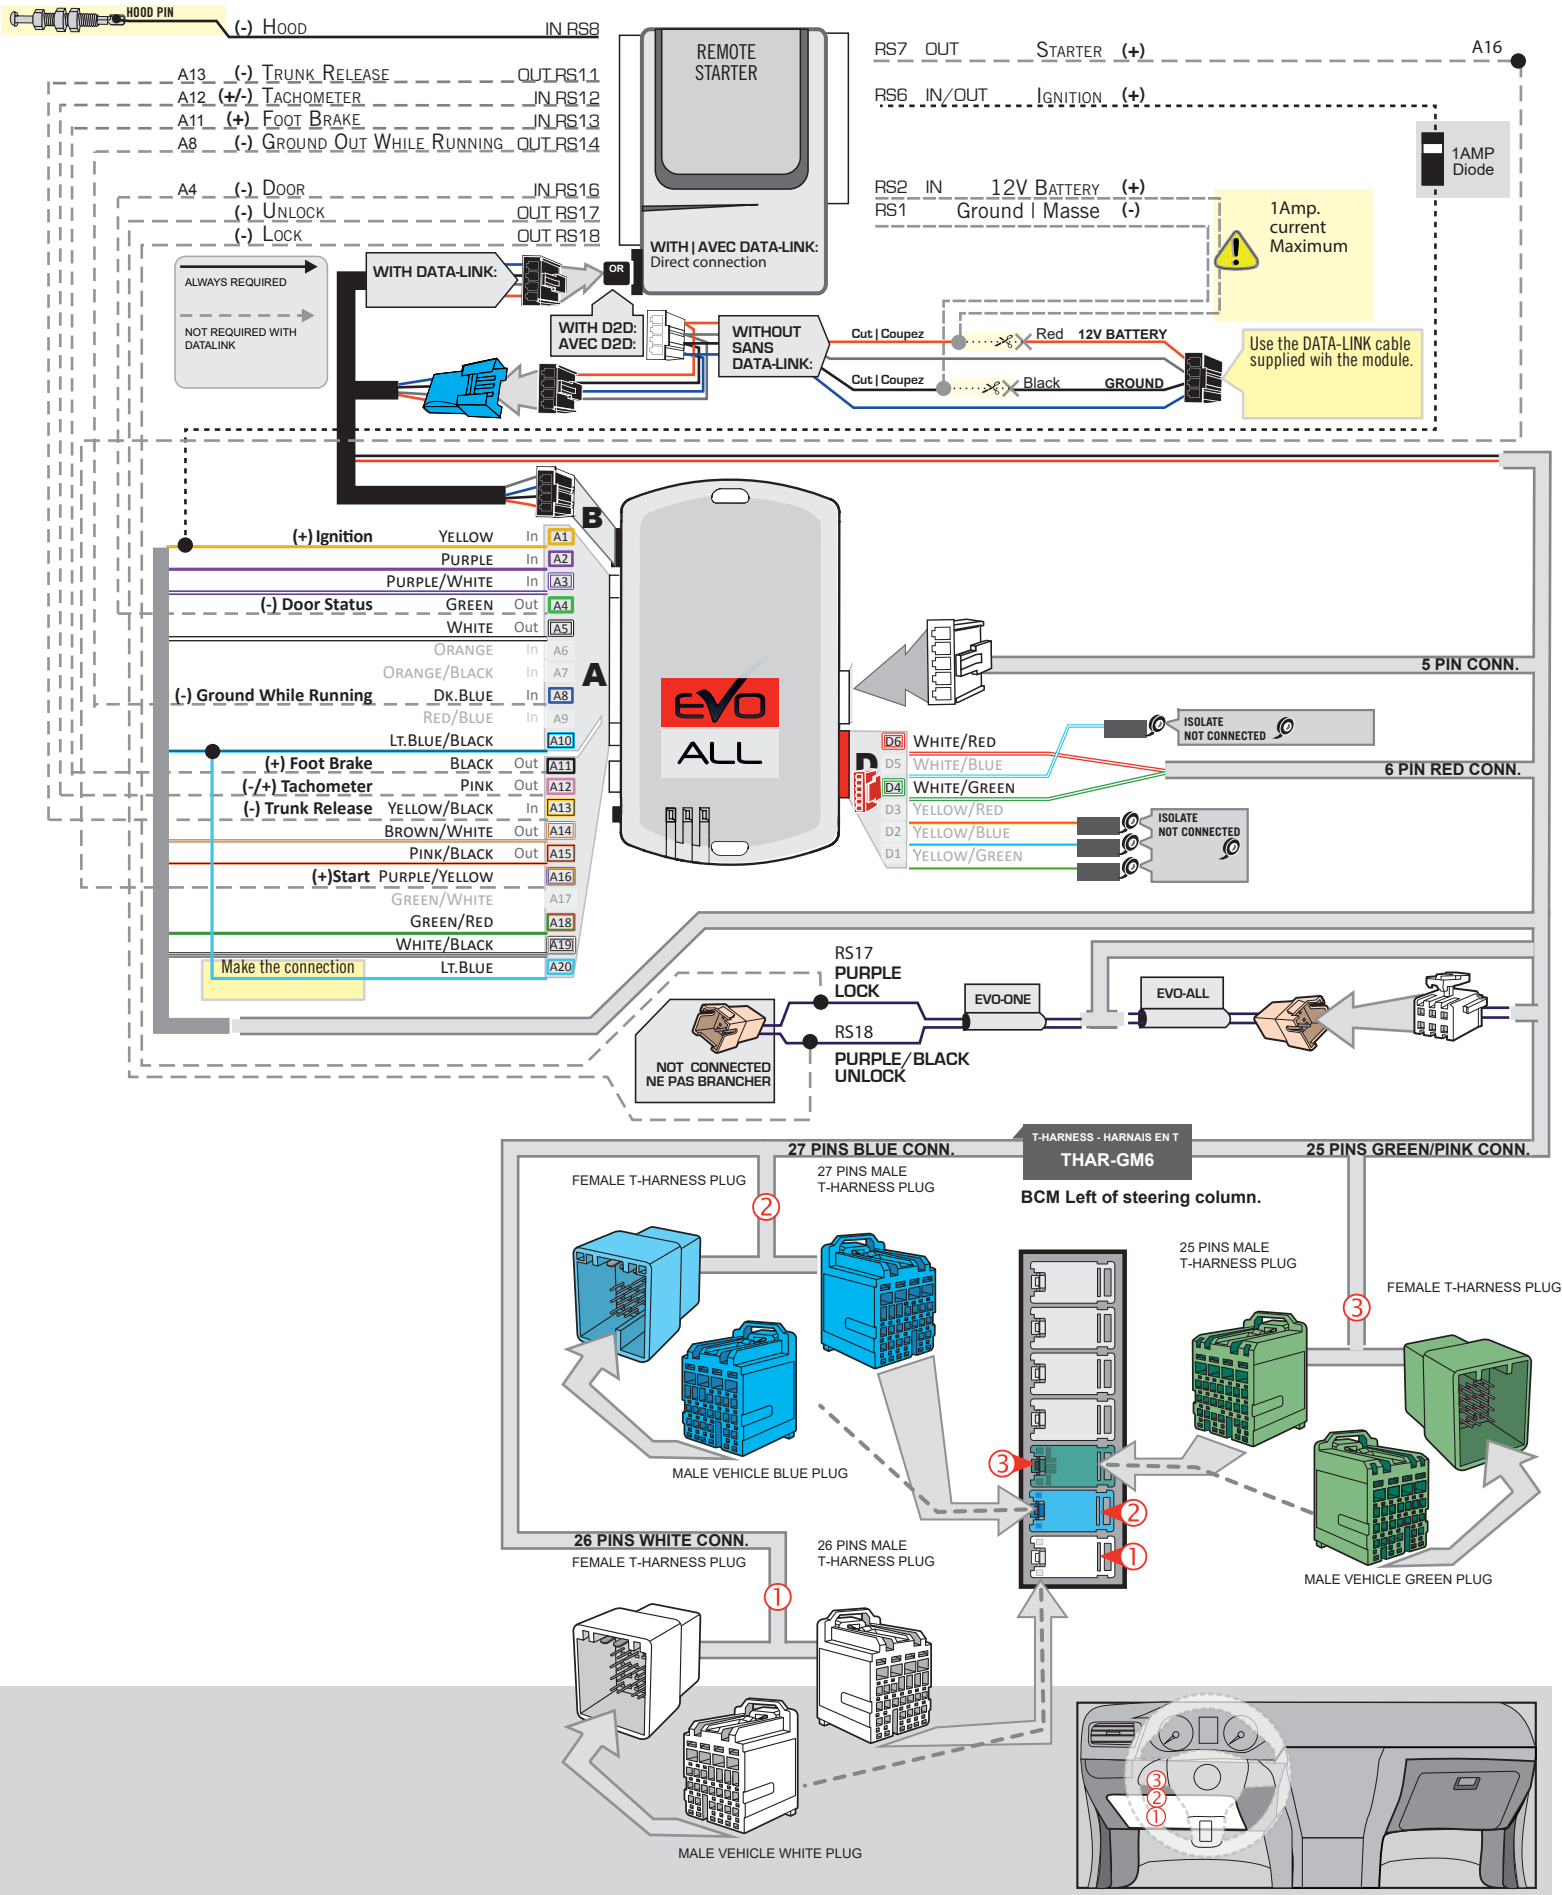


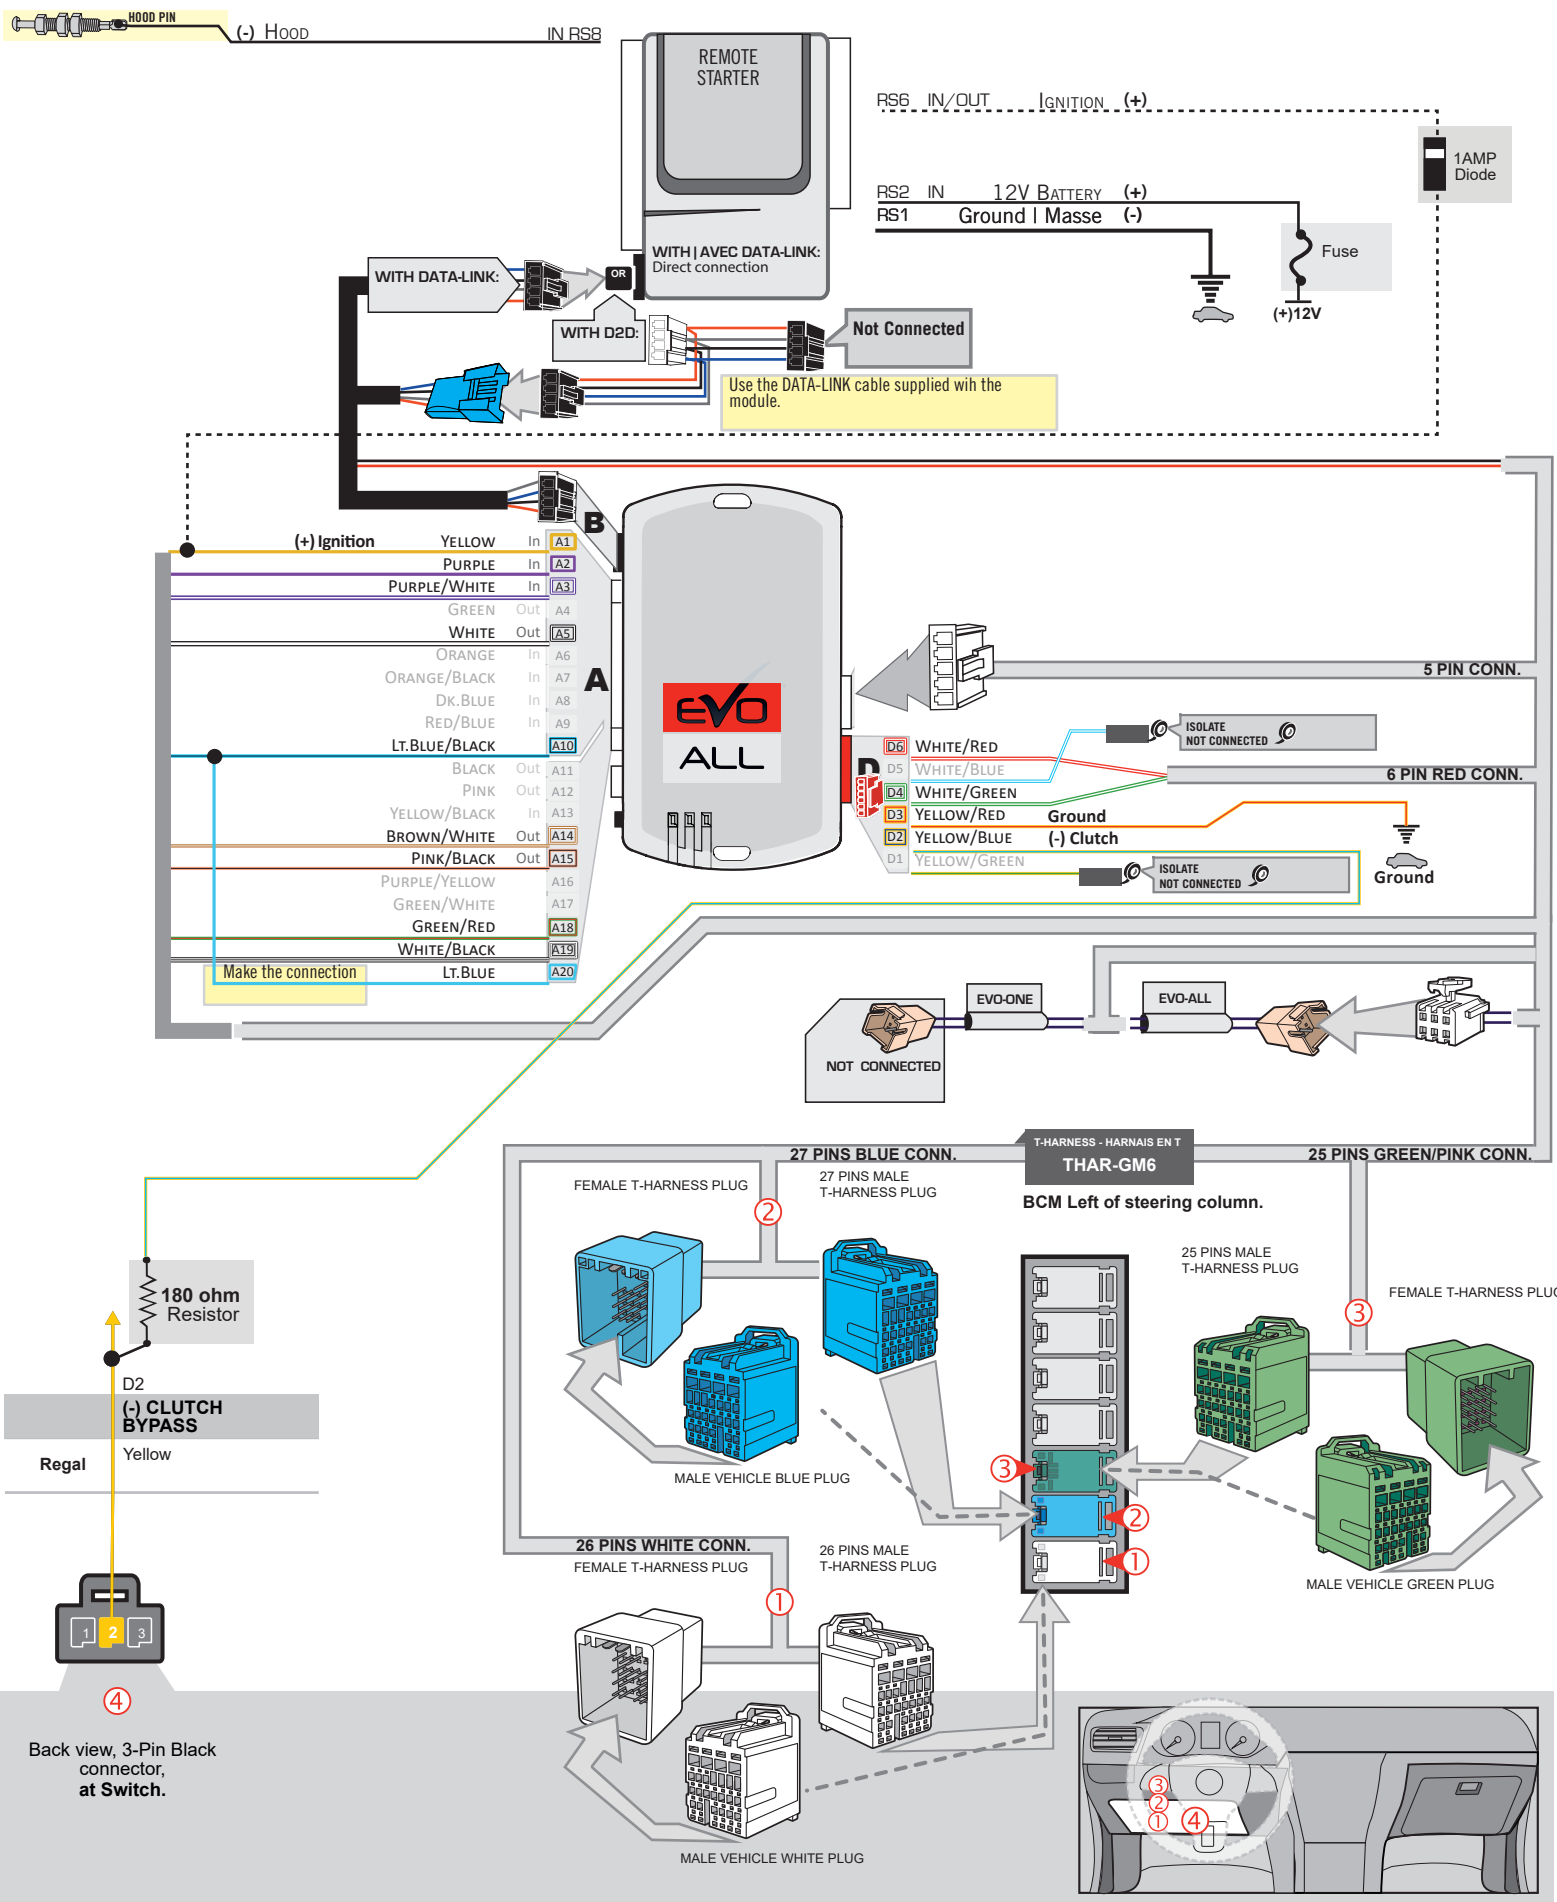


KEY BYPASS PROGRAMMING PROCEDURE 1/3



- 1** Remove the battery from the OEM remote
- 2** Place the OEM remote in the **back** cup holder in the center console.
Refer to vehicle user guide for keyport location.

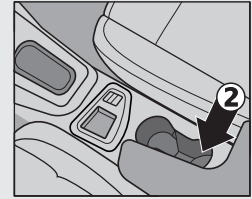


1

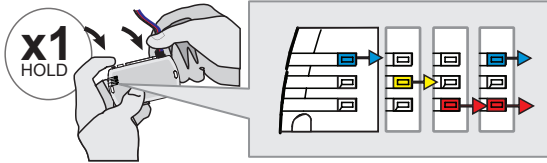

Press and hold the programming button:
Connect the 4-PIN Data-link harness (Black connector).


↳The Blue, Red, Yellow and Blue & Red LEDs will alternatively illuminate.

2

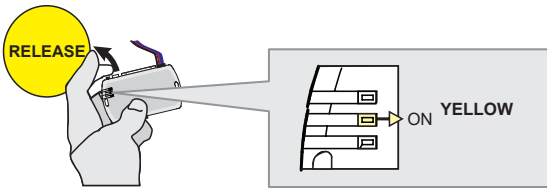


Release the programming button when the LED is **YELLOW**.

 If the LED is not solid YELLOW disconnect the 4-Pin connector (Data-Link) and go back to step 1.




3

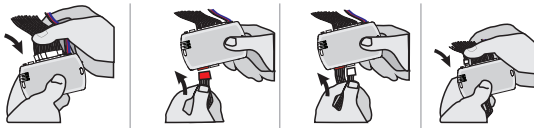

Insert the required remaining connectors.

4

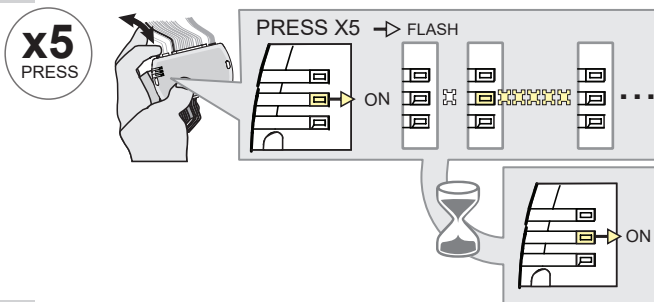


Press and release the programming button five (5x) times.

↳The **YELLOW LED** will flash 5 times each second.


↳**WAIT** for the **YELLOW LED** to turn ON solide.

 5



Open the driver door.

6

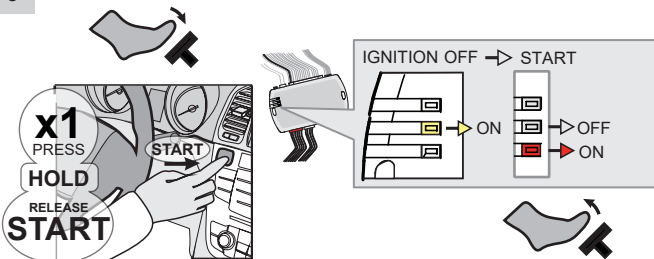

Press the foot-brake pedal.

Press the Push-to-Start button until the engine start.

Release the foot-brake pedal.

↳The **RED LED** will turn ON.
↳The **YELLOW LED** will turn OFF.


KEY BYPASS PROGRAMMING PROCEDURE 2/3

7




Press the Push-to-Start button until the engine turn OFF.

8

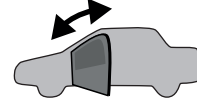

Close and open the driver door.

9

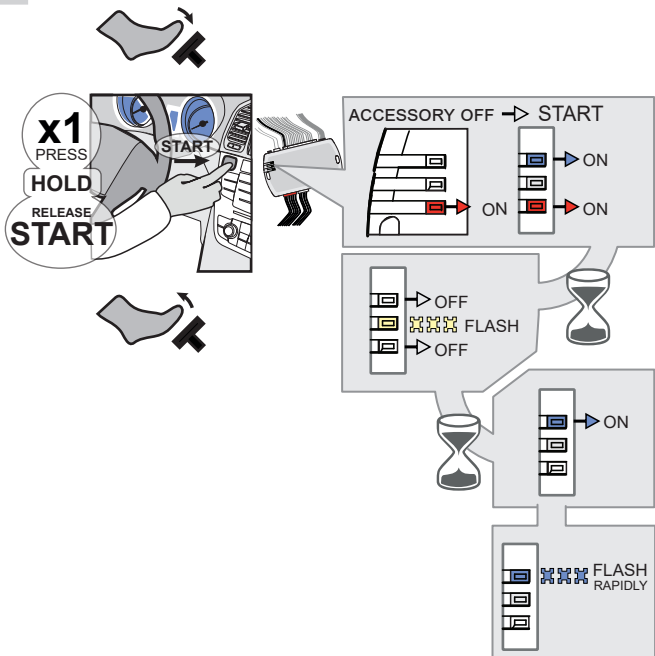


Press the foot-brake pedal.

Press the Push-to-Start button until the engine start.

Release the foot-brake pedal.

- ↳ The BLUE LED will turn ON.
- ↳ The BLUE LED will turn OFF. The RED LED will turn OFF.
- ↳ The YELLOW LED will flash rapidly
- ↳ The BLUE LED will turn ON.
- ↳ The BLUE LED will flash rapidly


10

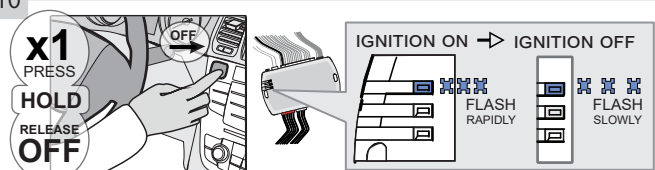

Press the Push-to-Start button until the engine turn OFF.


- ↳ The BLUE LED will flash slowly

11

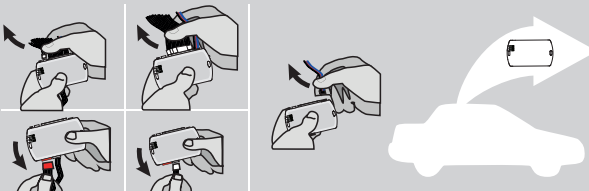

Disconnect all the connectors and after the Data-Link (4-pins) connector.

12


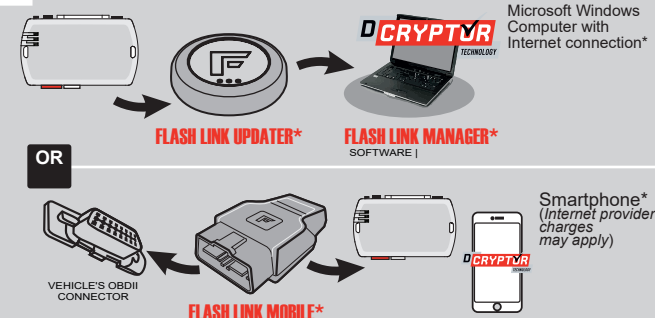


Use the tool: FLASH LINK UPDATER or FLASH LINK MOBILE to visit the DCRYPTOR menu.

***Parts required (not included)**

KEY BYPASS PROGRAMMING PROCEDURE 3/3

13

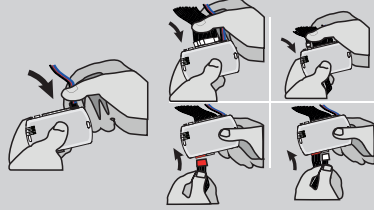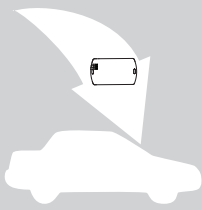

AFTER DCRYPTOR PROGRAMMING COMPLETED
Go back to the vehicle and **reconnect** the 4-Pin (Data-Link) connector and after, all the remaining connector.



The module is now programmed.



REMOTE STARTER / ALARM VERIFICATION PROCEDURE

Test the remote starter. Remote start the vehicle.

REMOTE STARTER FUNCTIONALITY



All doors must be closed.



Remote start the vehicle.



Unlock the doors with either:

- The OEM remote
- The remote-starter remote
- Or the proximity remote



Enter the vehicle with the Intelligent Key.



The vehicle can now be put in to gear and driven.

proximité.

If the vehicle is not unlocked with one of these conditions the remote-starter will shut down as soon as any door is opened.



REGULAR INSTALLATION AND THAR-GM6 INSTALLATION

ADDENDUM - SUGGESTED WIRING CONFIGURATION

VEHICLE		YEARS	Vehicle functions supported in this diagram (functional if equipped)													
			Immobilizer bypass	Lock	Unlock	Arm	Disarm	Parking Light	Trunk (open)	RAP Disable	Tachometer	Door Status	Trunk Status	Hand-Brake Status	Foot-Brake Status	OEM Remote Monitoring
BUICK																
Regal	Push-To-Start	2018-2019	•	•	•	•	•	•	•	•	•	•	•	•	•	•

FIRMWARE VERSION

70.[41]

GM MINIMUM

To add the firmware version and the options, use the **FLASH LINK UPDATER** or **FLASH LINK MOBILE** tool, sold separately.

IF THE VEHICLE IS NOT EQUIPPED WITH FUNCTIONAL HOOD PIN:	A11	OFF	Hood trigger (Output Status).
---	------------	------------	-------------------------------

	UNIT OPTION	DESCRIPTION
Program bypass option:	C1	OEM Remote status (Lock/Unlock) monitoring
	D6	Push-to-Start

	ATTENTION!	<p>DATE: XX-XX</p>	E5	OFF	SPECIAL FUNCTIONS: BY DEFAULT DEACTIVATED
				ON	MANUFACTURED MODULES

NOTES

****Manuelle Transmission.** Remote starter with compatible Data-Link required

MANDATORY INSTALL

*HOOD PIN



HOOD STATUS: THE HOOD PIN SWITCH MUST BE INSTALLED IF THE VEHICLE CAN BE REMOTE STARTED WITH THE HOOD OPEN, SET FUNCTION **A11** TO OFF.

A11
OFF

Notice: the installation of safety elements are mandatory. The hood pin is an essential security element and must be installed.

THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.

DESCRIPTION

Parts required (Not included)		PAGE
-------------------------------	--	------







WIRE TO WIRE DIAGRAM

AUTOMATIC TRANSMISSION	1X 1Amp Diode 1X 5 Amp Fuse 1X 1k Ohm Resistor	Page 3
MANUAL TRANSMISSION	1X 1Amp Diode 1X 5 Amp Fuse 1X 1k Ohm Resistor 1X 180 Ohm Resistor	Page 4


THARNESS DIAGRAM

THARNESS THAR-GM6	AUTOMATIC TRANSMISSION	1x THAR-GM6	Page 5
THARNESS THAR-GM6	MANUAL TRANSMISSION	1x THAR-GM6 1X 180 Ohm Resistor	Page 6


Regal
2018-2019

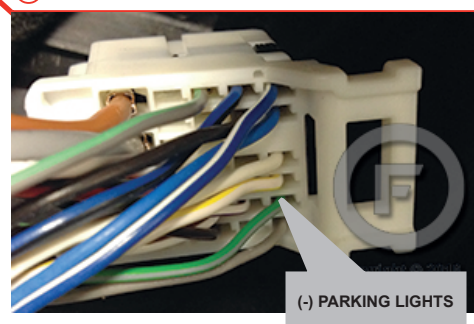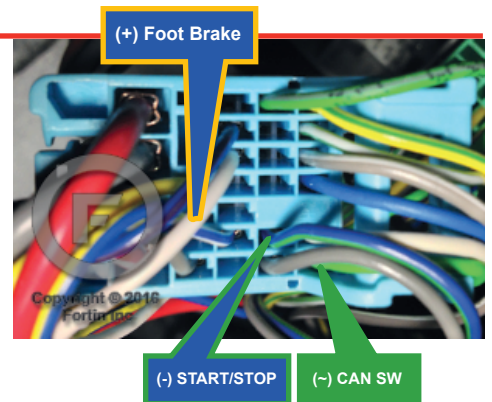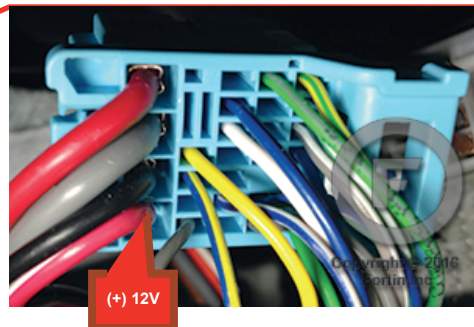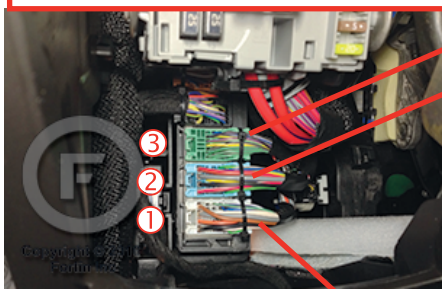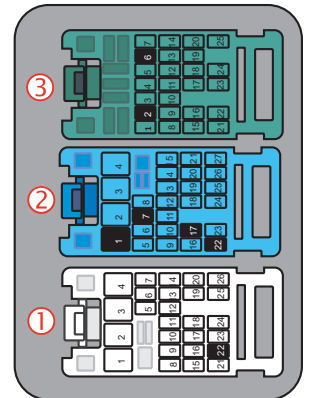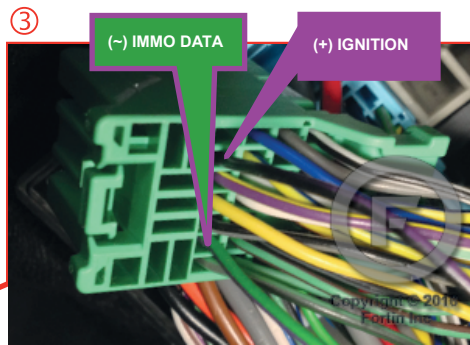

AUTOMATIC TRANSMISSION WIRING CONNECTION

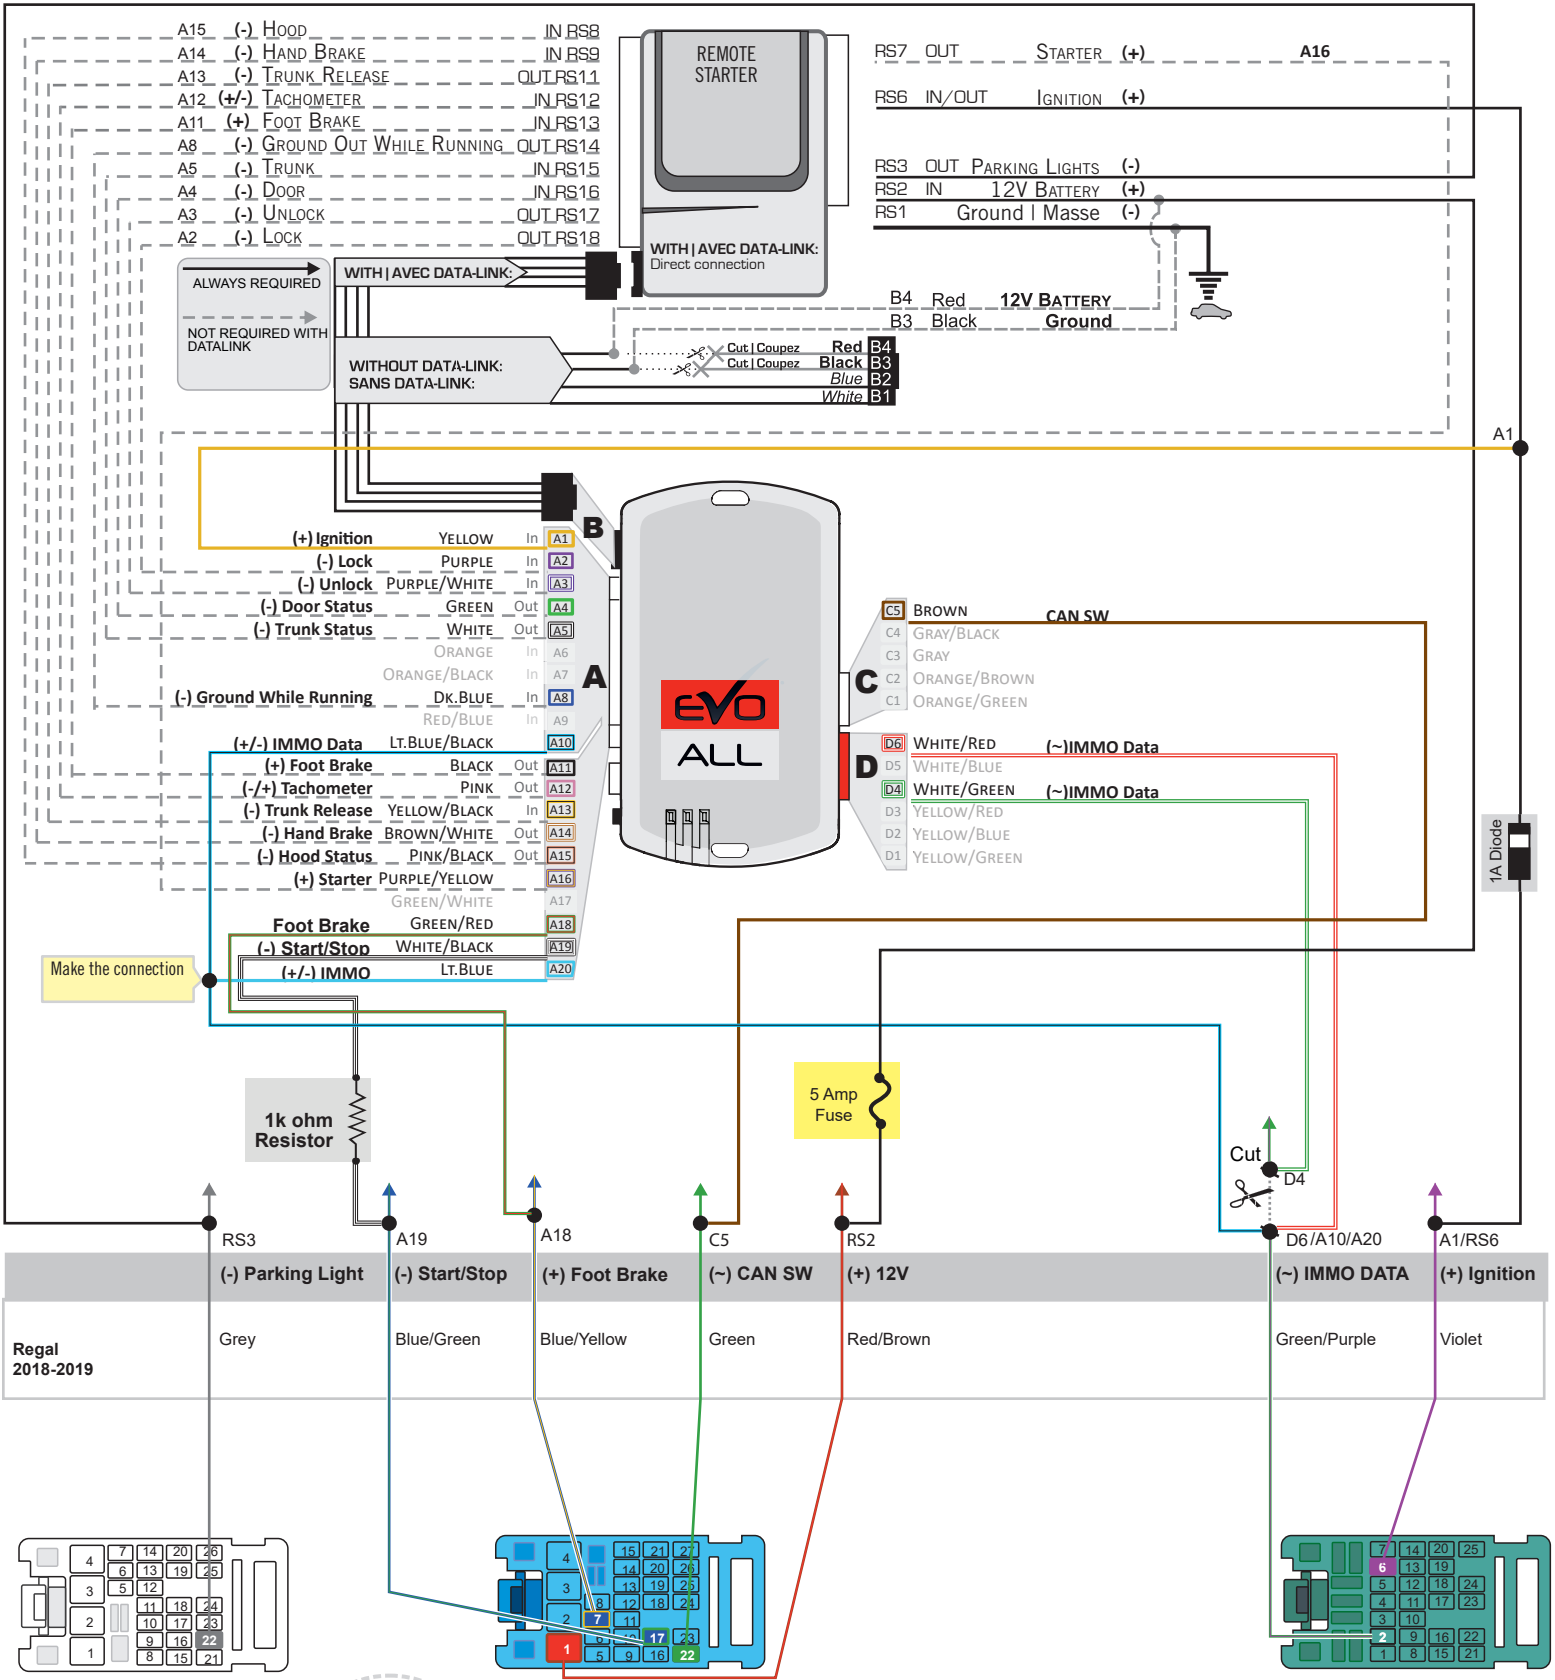


① Back view, 26-Pin White connector, at BCM.

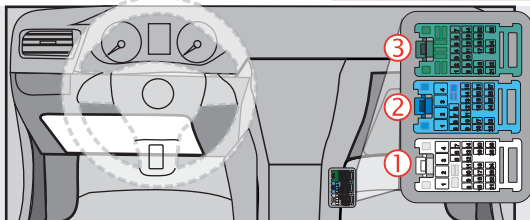


② Back view, 27-Pin Blue connector, at BCM.

③ Back view, 25-Pin Green connector, at BCM.

MANUAL TRANSMISSION WIRING CONNECTION

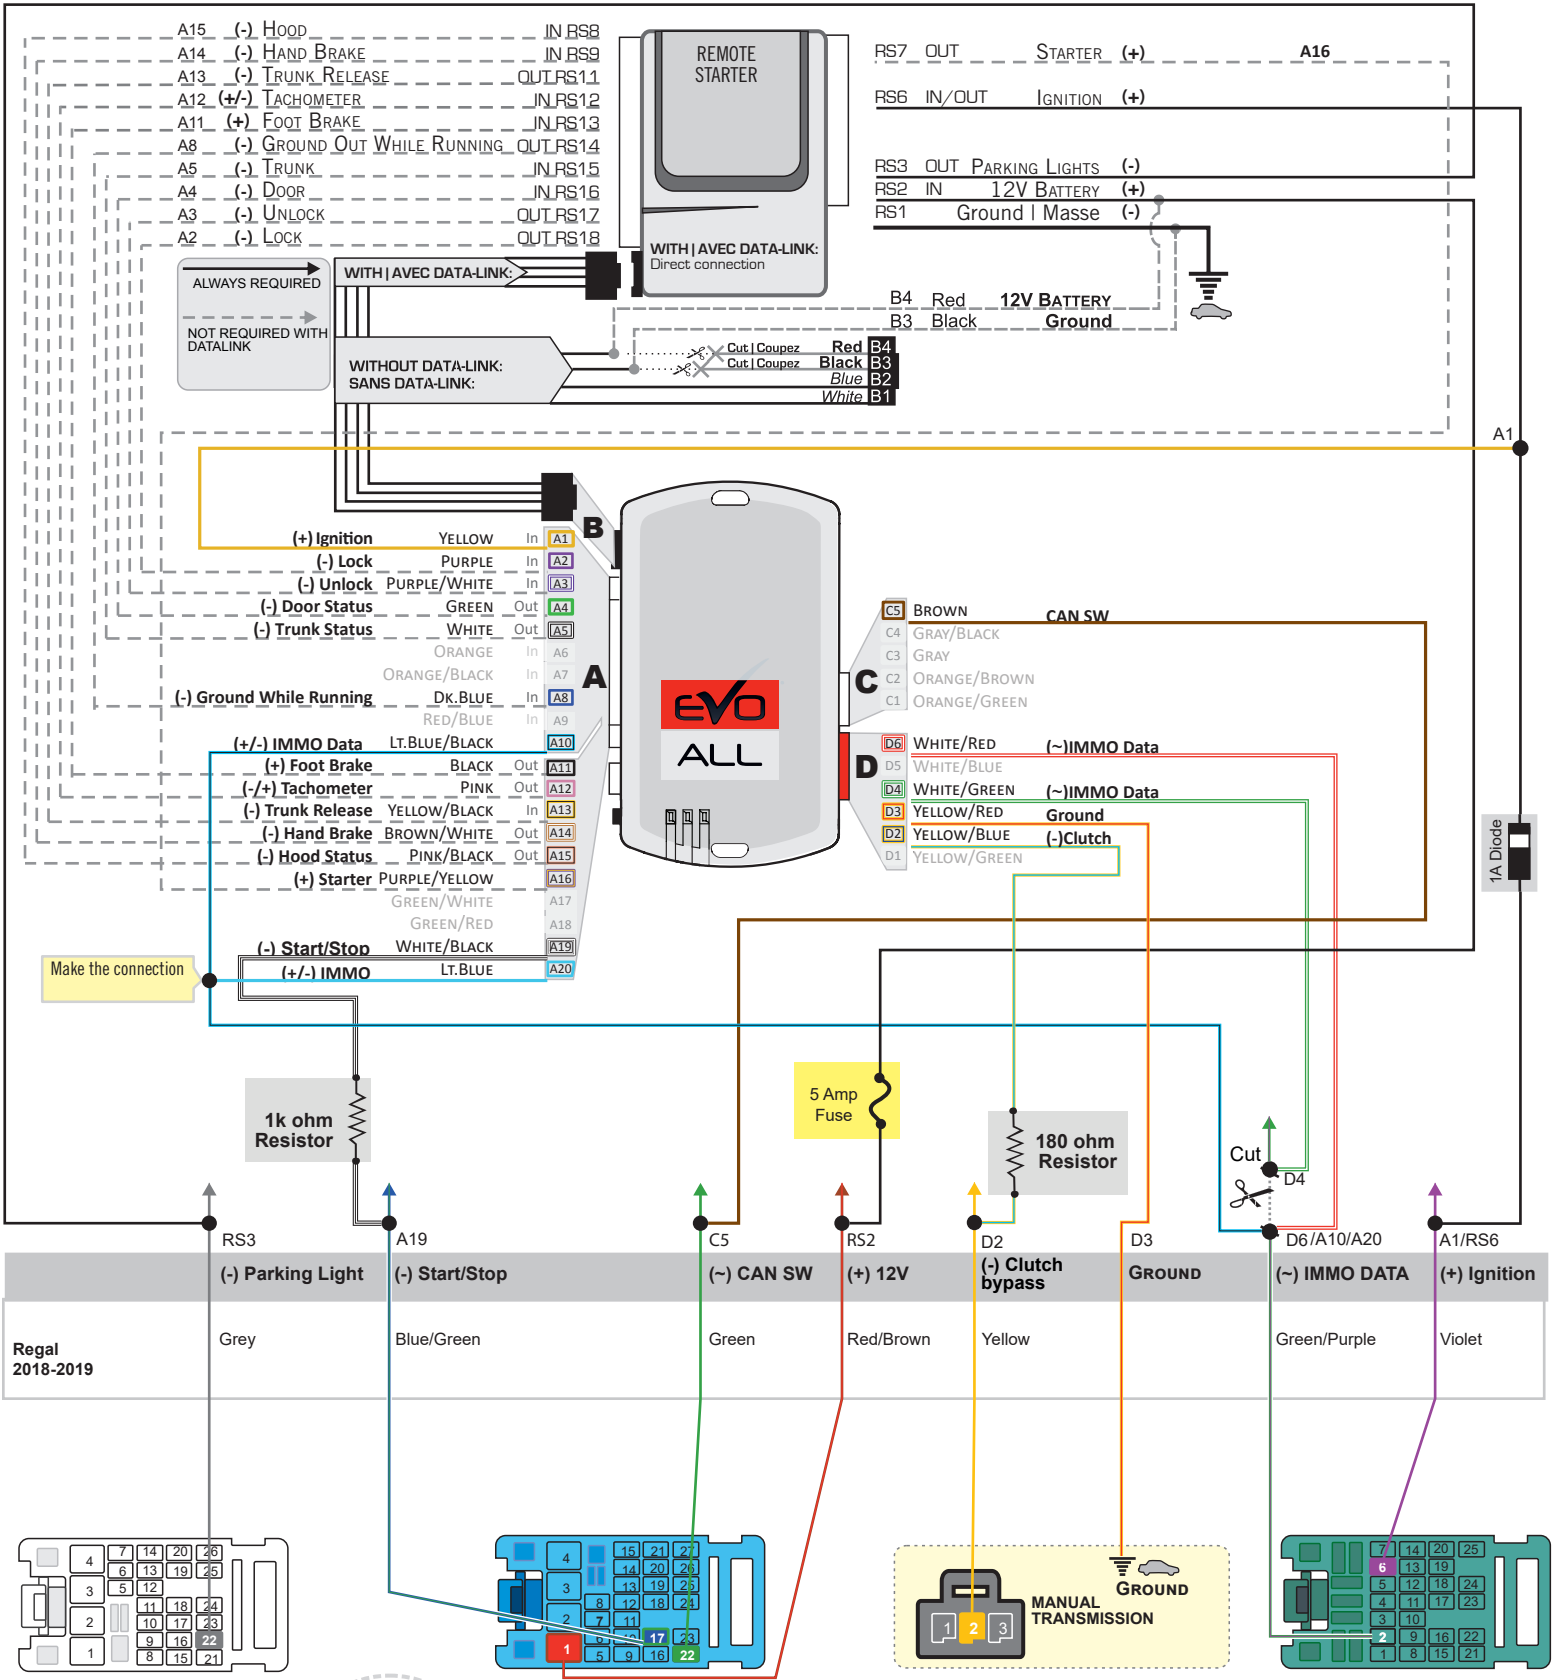

① Back view, 26-Pin White connector, at BCM.

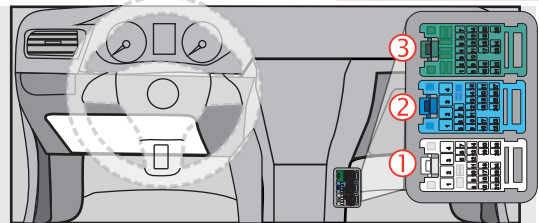



② Back view, 27-Pin Blue connector, at BCM.

④ Back view, 3-Pin Black connector, at Switch.

③ Back view, 25-Pin Green connector, at BCM.

THAR-GM6 | AUTOMATIC TRANSMISSION CONNECTION

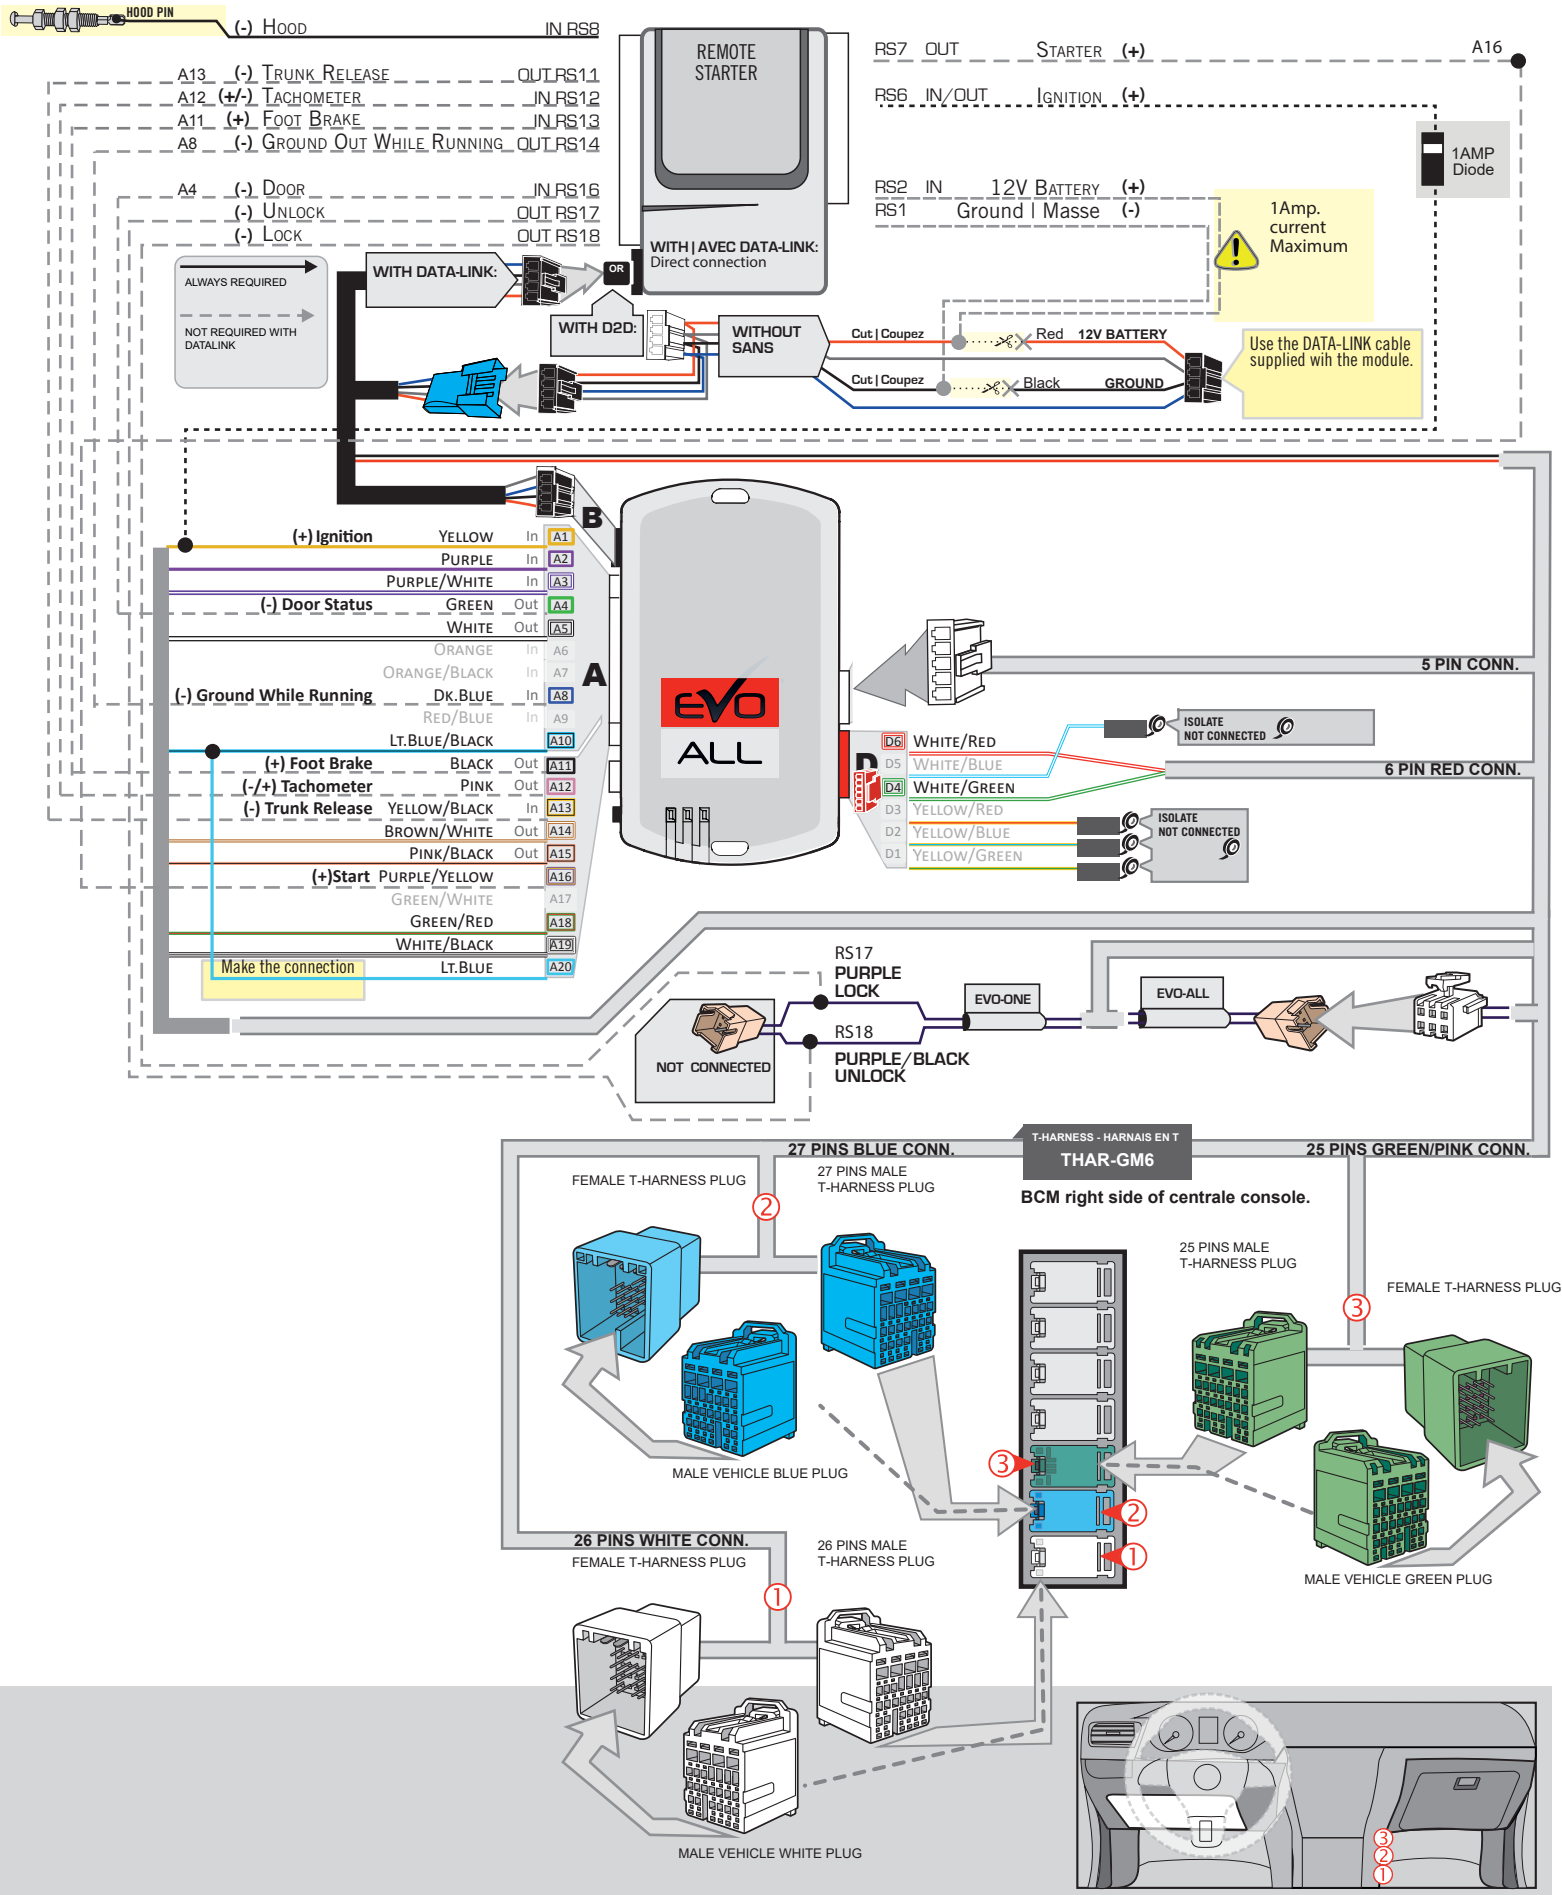

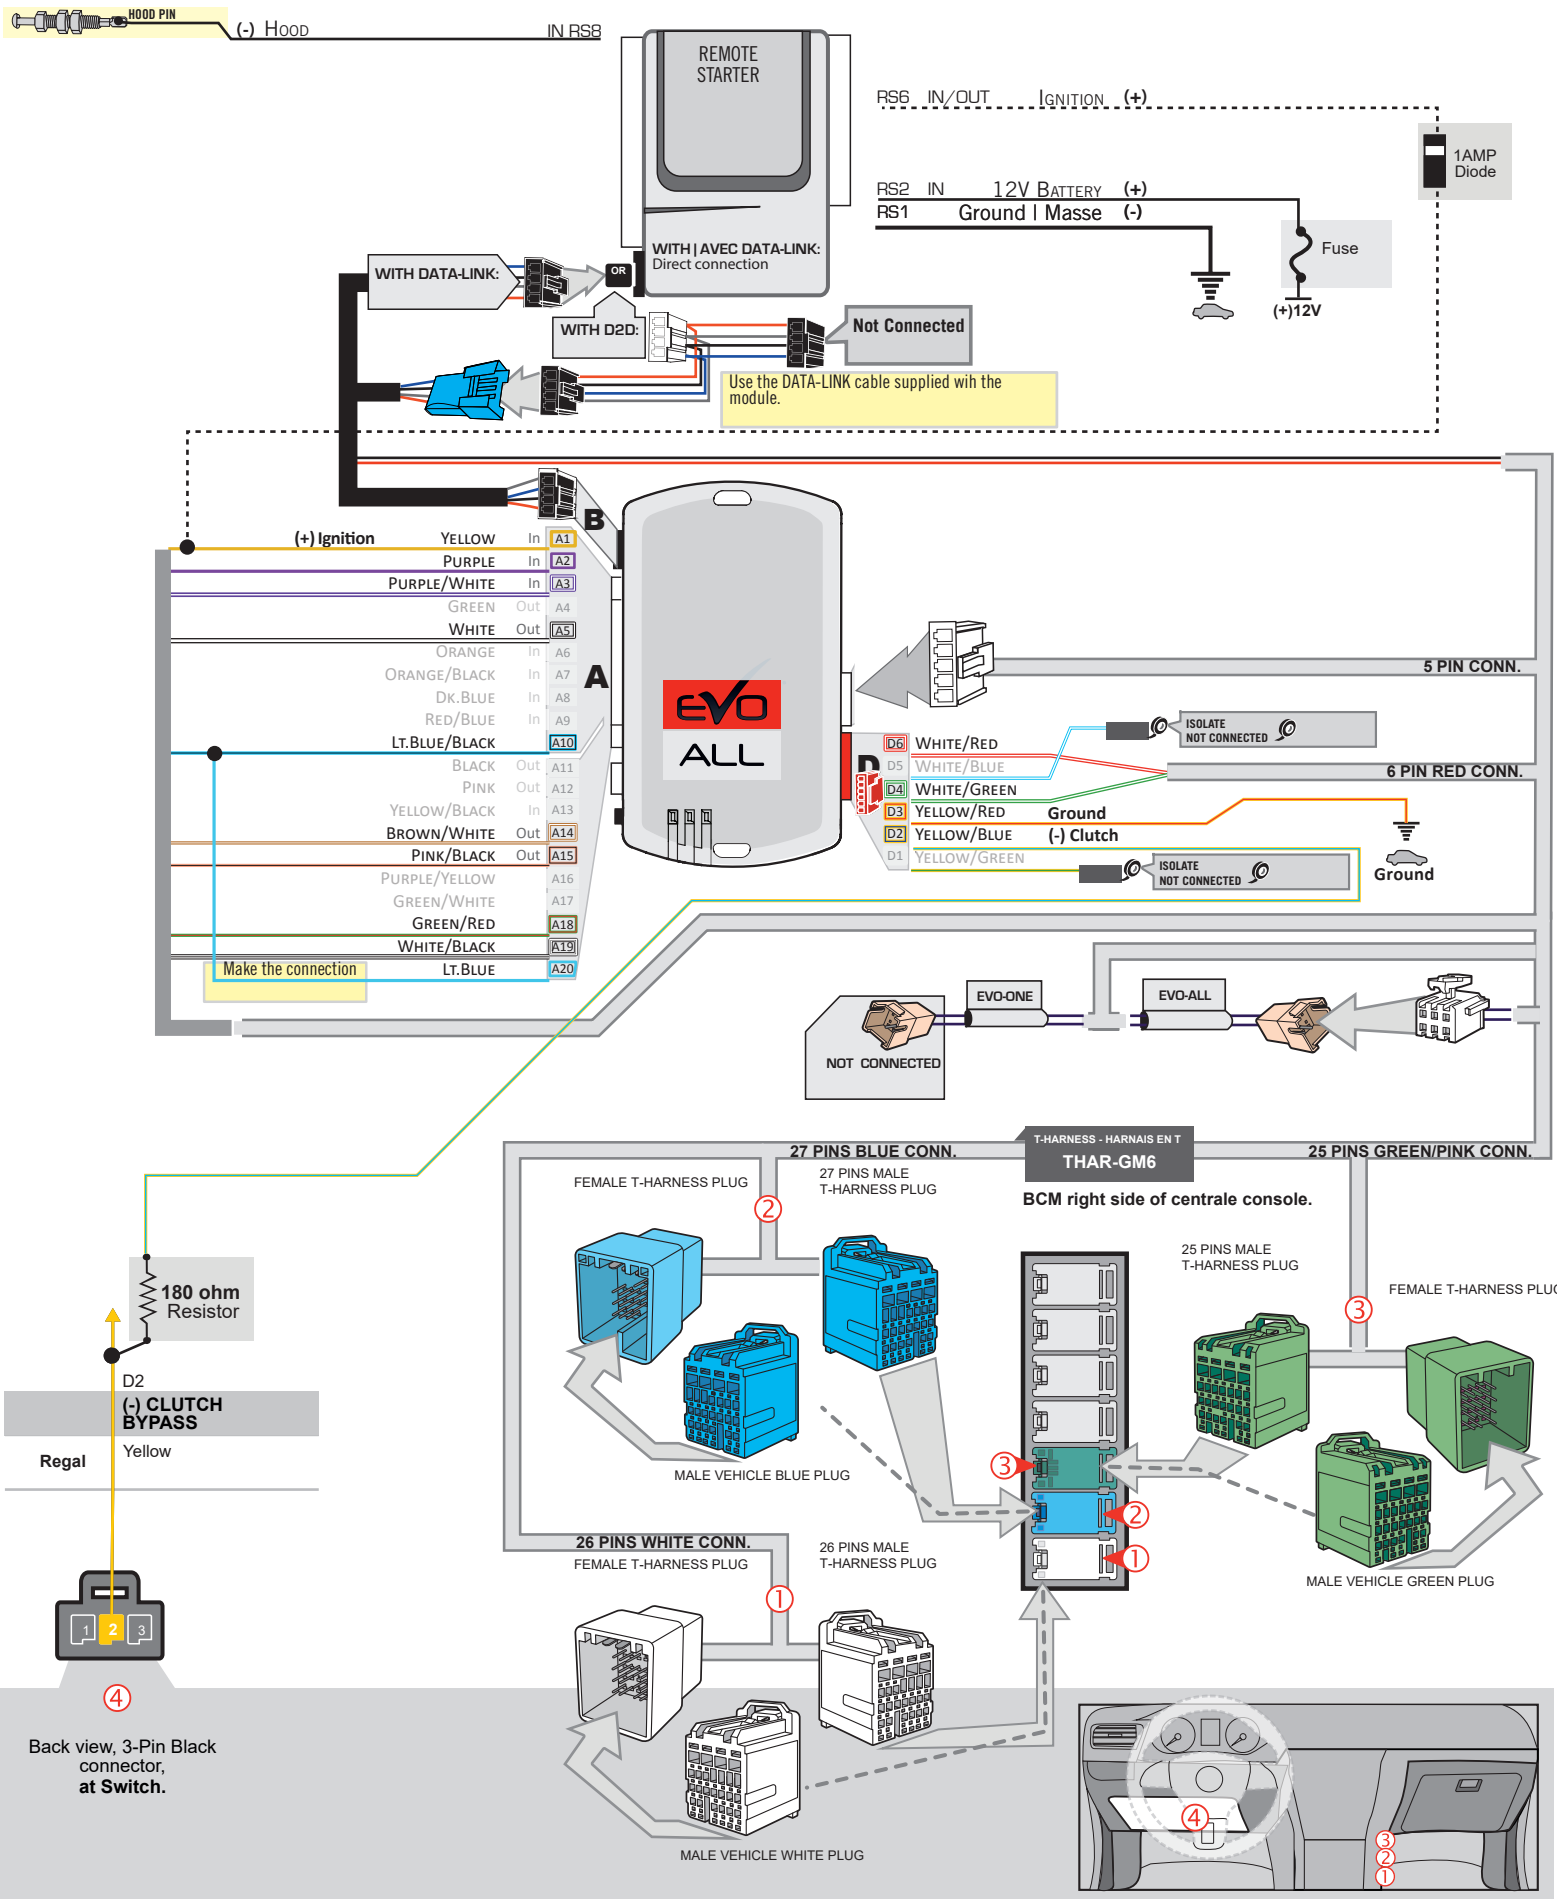


KEY BYPASS PROGRAMMING PROCEDURE 1/3



- 1** Remove the battery from the OEM remote
- 2** Place the OEM remote in the **back** cup holder in the center console.
Refer to vehicle user guide for keyport location.




1

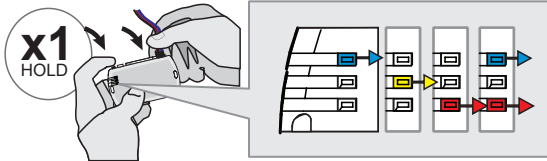

Press and hold the programming button:
Connect the 4-PIN Data-link harness (Black connector).


↳The Blue, Red, Yellow and Blue & Red LEDs will alternatively illuminate.

2

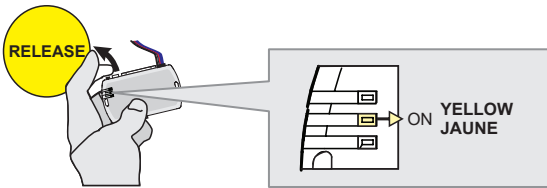


Release the programming button when the LED is **YELLOW**.

 If the LED is not solid YELLOW disconnect the 4-Pin connector (Data-Link) and go back to step 1.




3

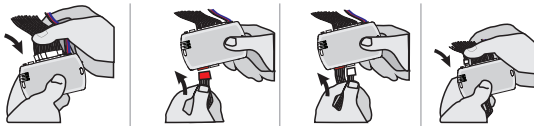

Insert the required remaining connectors.

4

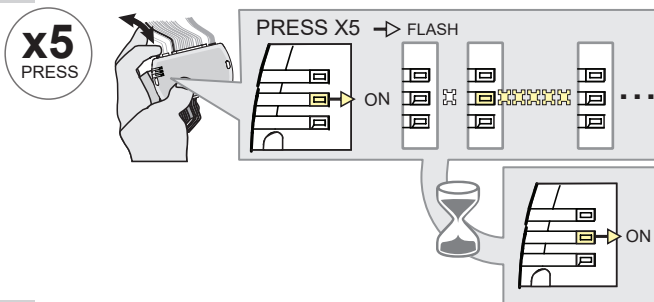


Press and release the programming button five (5x) times.

↳The **YELLOW LED** will flash 5 times each second.


↳**WAIT** for the **YELLOW LED** to turn **ON** solide.

 5



Open the driver door.

6

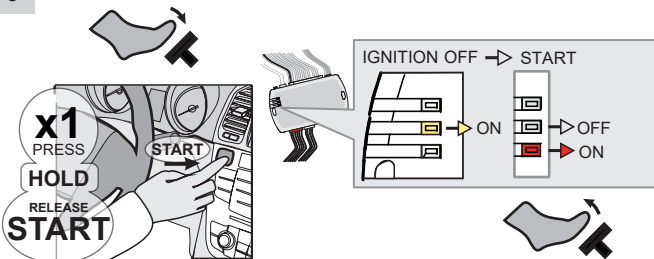

Press the foot-brake pedal.

Press the Push-to-Start button until the engine start.

Release the foot-brake pedal.

↳The **RED LED** will turn **ON**.
↳The **YELLOW LED** will turn **OFF**.


KEY BYPASS PROGRAMMING PROCEDURE 2/3

7




Press the Push-to-Start button until the engine turn OFF.

8

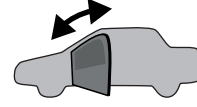

Close and open the driver door.

9

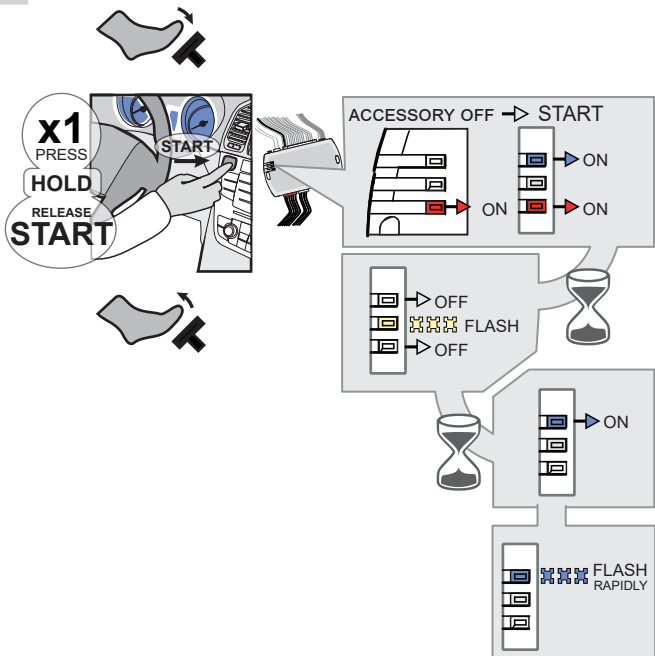


Press the foot-brake pedal.

Press the Push-to-Start button until the engine start.

Release the foot-brake pedal.

- ↳ The BLUE LED will turn ON.
- ↳ The BLUE LED will turn OFF. The RED LED will turn OFF.
- ↳ The YELLOW LED will flash rapidly
- ↳ The BLUE LED will turn ON.
- ↳ The BLUE LED will flash rapidly


10

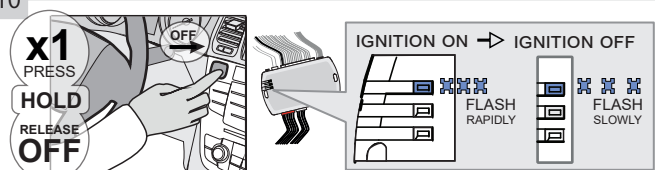

Press the Push-to-Start button until the engine turn OFF.


- ↳ The BLUE LED will flash slowly

11

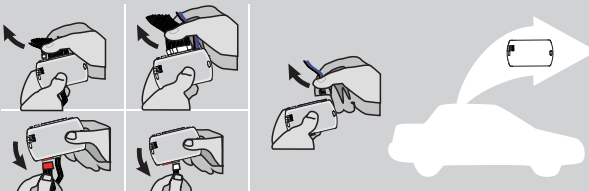

Disconnect all the connectors and after the Data-Link (4-pins) connector.

12


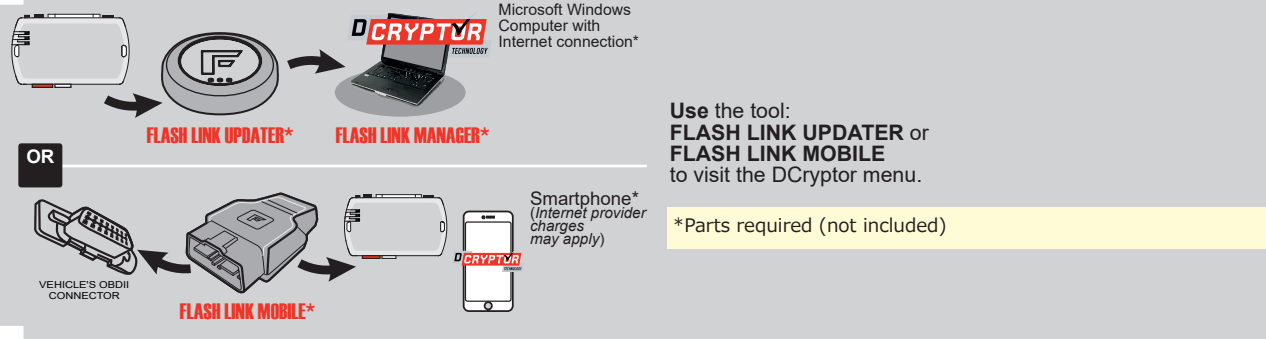


Use the tool: FLASH LINK UPDATER or FLASH LINK MOBILE to visit the DCRYPTOR menu.

***Parts required (not included)**

KEY BYPASS PROGRAMMING PROCEDURE 3/3

13

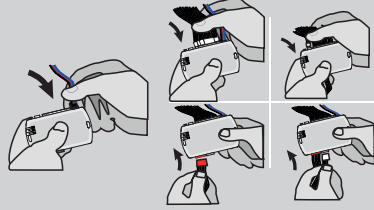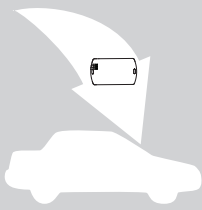

AFTER DCRYPTOR PROGRAMMING COMPLETED
Go back to the vehicle and **reconnect** the 4-Pin (Data-Link) connector and after, all the remaining connector.



The module is now programmed.



REMOTE STARTER / ALARM VERIFICATION PROCEDURE

Test the remote starter. Remote start the vehicle.

REMOTE STARTER FUNCTIONALITY



All doors must be closed.



Remote start the vehicle.



Unlock the doors with either:

- The OEM remote
- The remote-starter remote
- Or the proximity remote



Enter the vehicle with the Intelligent Key.




The vehicle can now be put in to gear and driven.


If the vehicle is not unlocked with one of these conditions the remote-starter will shut down as soon as any door is opened.



REGULAR INSTALLATION AND THAR-GM6 INSTALLATION

ADDENDUM - SUGGESTED WIRING CONFIGURATION

VEHICLE	YEARS	Vehicle functions supported in this diagram (functional if equipped)															
		Immobilizer bypass	Lock	Unlock	Arm	Disarm	Parking Light	Trunk (open)	RAP Disable	Tachometer	Door Status	Trunk Status	Hand-Brake Status	Foot-Brake Status	OEM Remote Monitoring		
																	
CADILLAC																	
SRX	Push-To-Start	2010-2012	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•




FIRMWARE VERSION


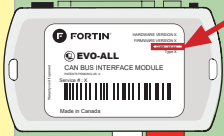
70.[41]

GM MINIMUM

To add the firmware version and the options, use the **FLASH LINK UPDATER** or **FLASH LINK MOBILE** tool, sold separately.

IF THE VEHICLE IS NOT EQUIPPED WITH FUNCTIONAL HOOD PIN:	A11	OFF	Hood trigger (Output Status).
---	------------	-----	-------------------------------

	UNIT OPTION	DESCRIPTION
 <p>Program bypass option:</p>	C1	OEM Remote status (Lock/Unlock) monitoring
	D6	Push-to-Start

	ATTENTION!	 <p>DATE: XX-XX</p>	E5	OFF	SPECIAL FUNCTIONS: BY DEFAULT DEACTIVATED
				ON	MANUFACTURED MODULES BETWEEN: 04/2018 TO 04/2019

MANDATORY INSTALL

*HOOD PIN



HOOD STATUS: THE HOOD PIN SWITCH MUST BE INSTALLED IF THE VEHICLE CAN BE REMOTE STARTED WITH THE HOOD OPEN, SET FUNCTION **A11** TO OFF.

A11

OFF

Notice: the installation of safety elements are mandatory. The hood pin is an essential security element and must be installed.

THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.

DESCRIPTION

Parts required (Not included) PAGE








WIRE TO WIRE DIAGRAM

<p>1X 1Amp Diode 1X 5 Amp Fuse 1X 1k Ohm Resistor</p>	<p>Page 3</p>
---	---------------


THARNESS DIAGRAM

<p>THARNESS THAR-GM6</p>	<p>1x THAR-GM6</p>	<p>Page 4</p>
--------------------------	--------------------	---------------


BCM

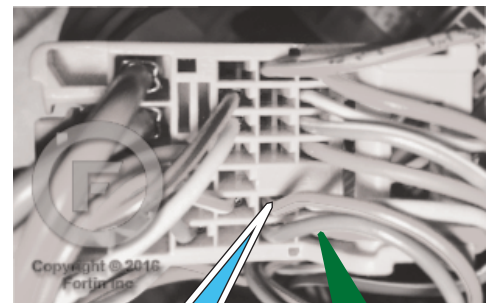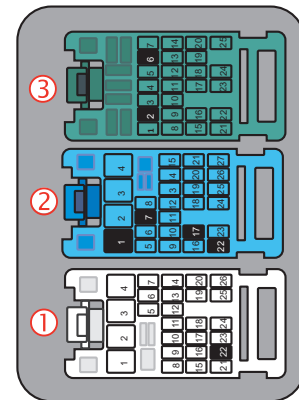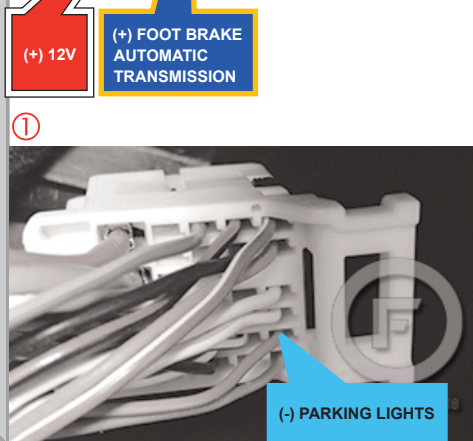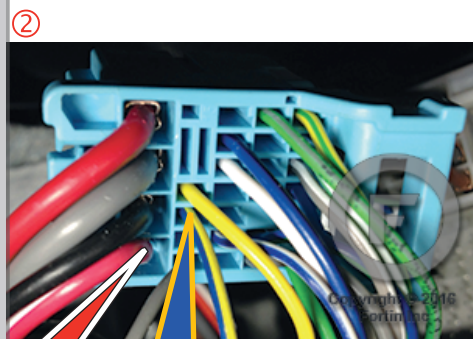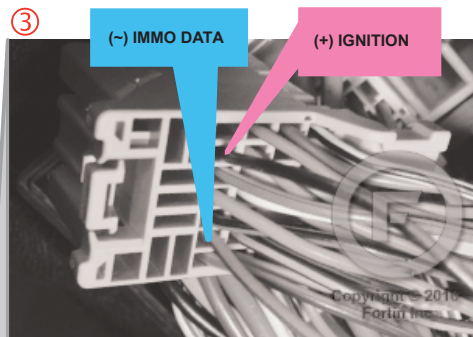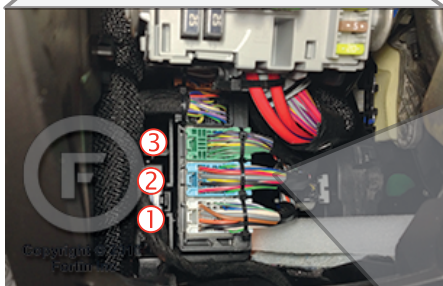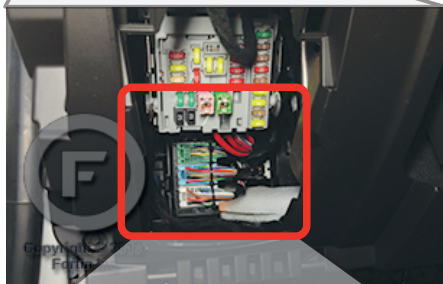

AUTOMATIC TRANSMISSION WIRING CONNECTION

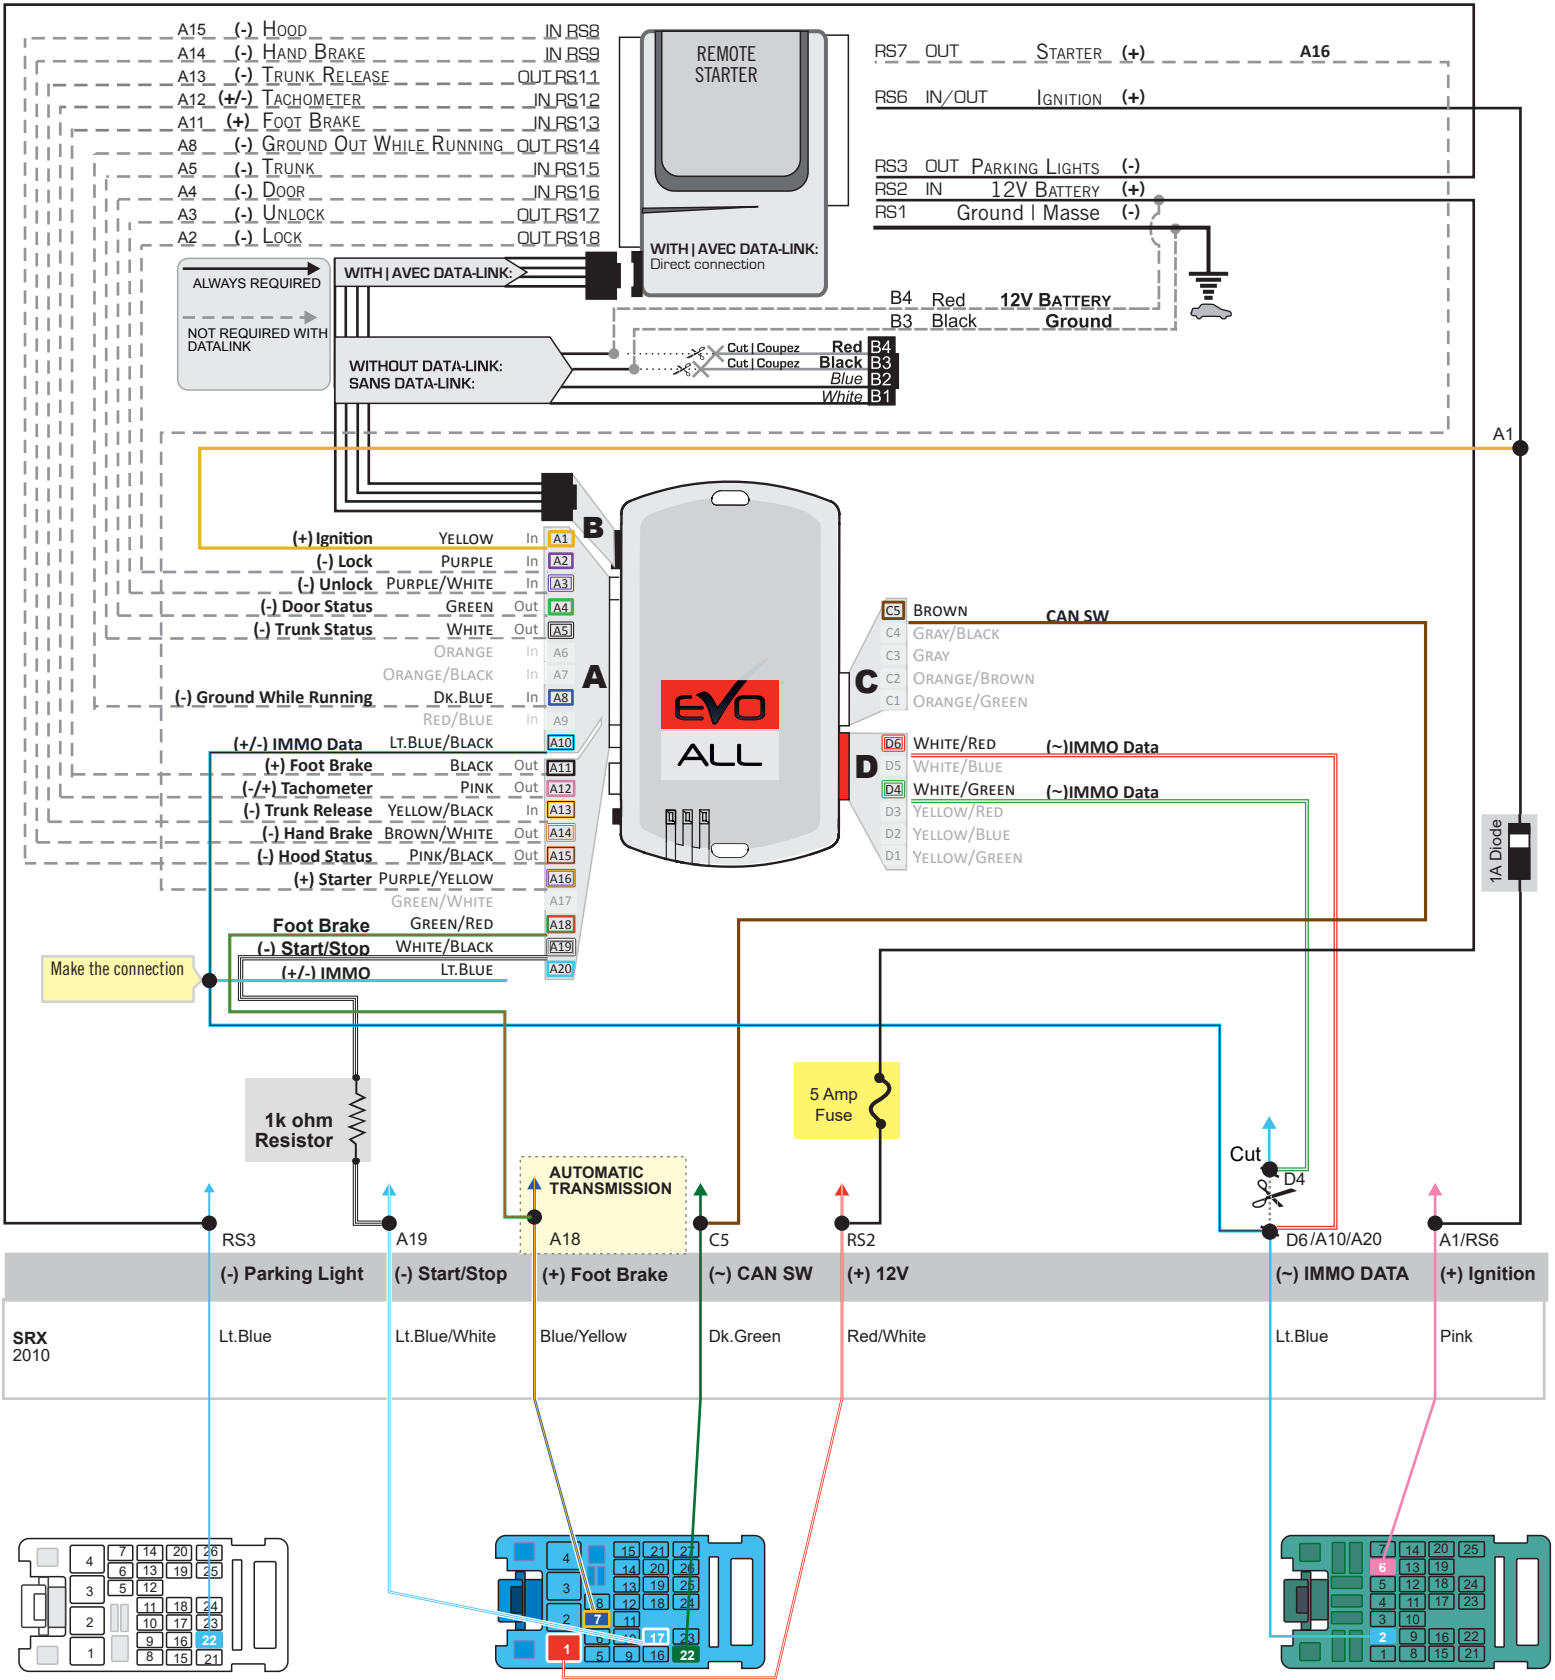


① Back view, 26-Pin White connector, at BCM.

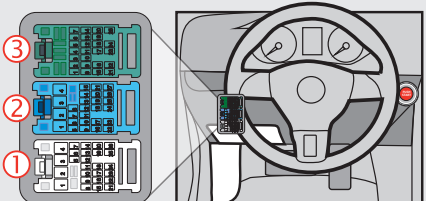


② Back view, 27-Pin Blue connector, at BCM.

③ Back view, 25-Pin Green connector, at BCM.

THAR-GM6 | WIRING CONNECTION

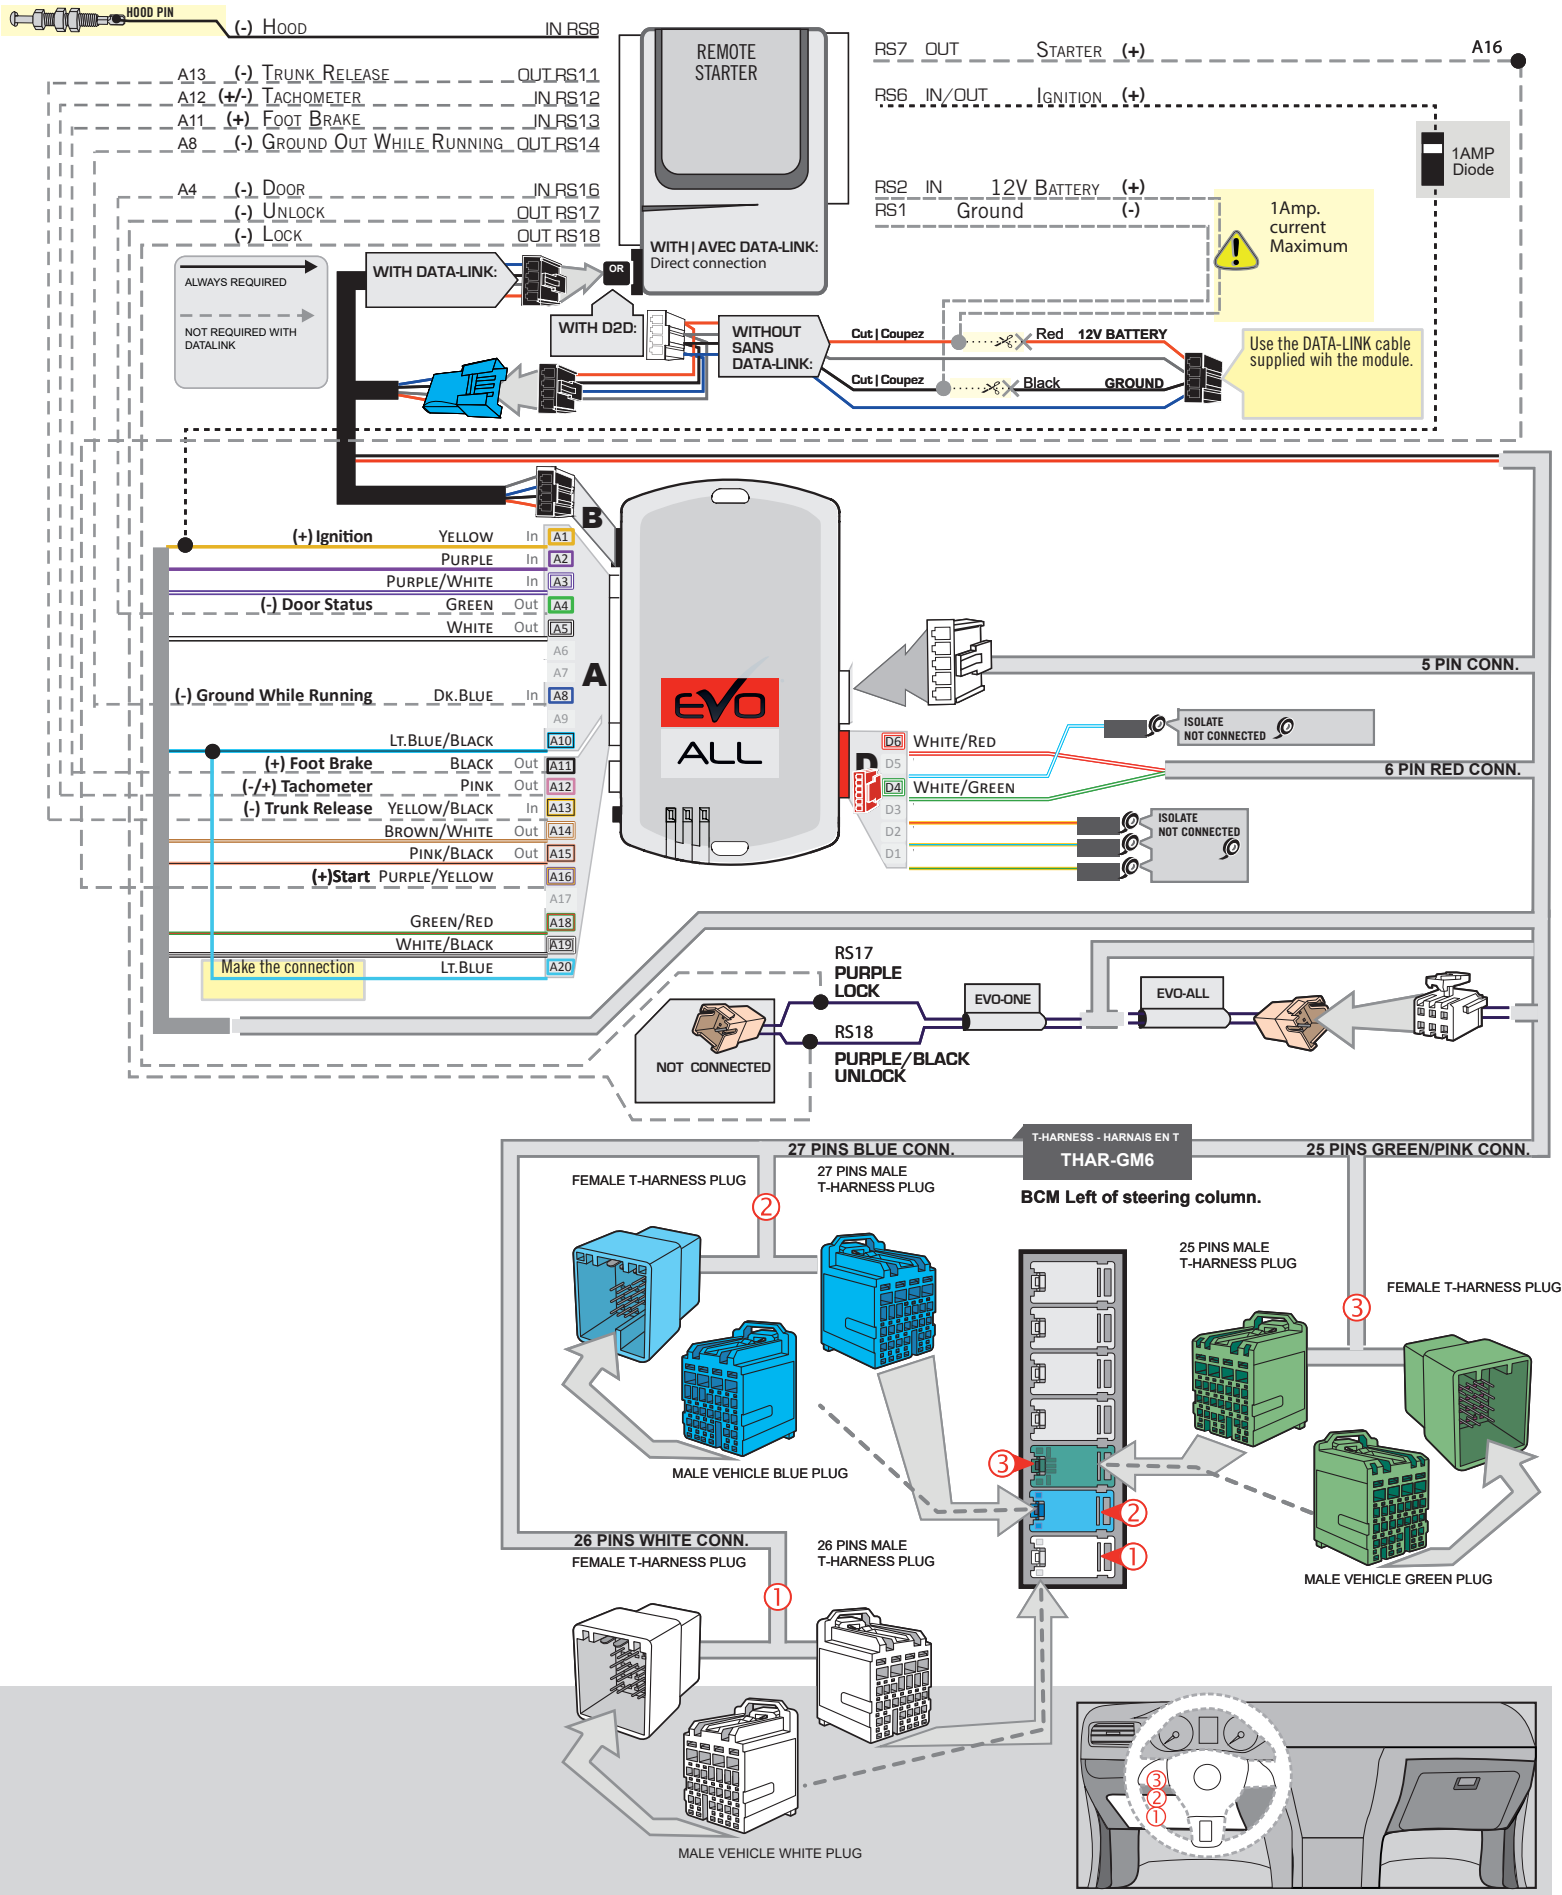


KEY BYPASS PROGRAMMING PROCEDURE 1/3 |

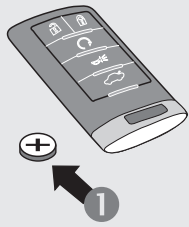


1 Remove the battery from the OEM remote.

2 Place the OEM remote into the transmitter pocket of the center console.

Refer to vehicle user guide for keyport location.

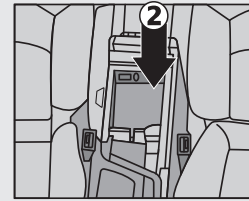


1

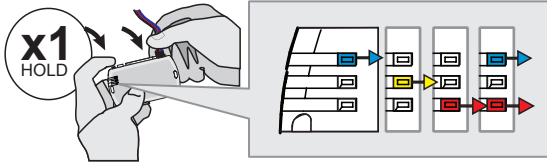

Press and hold the programming button:
Connect the 4-PIN Data-link harness (Black connector).


↳The Blue, Red, Yellow and Blue & Red LEDs will alternatively illuminate.

2

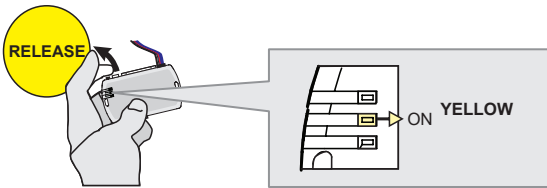


Release the programming button when the LED is YELLOW.

 If the LED is not solid YELLOW disconnect the 4-Pin connector (Data-Link) and go back to step 1.




3

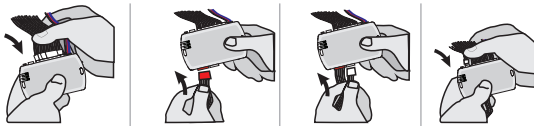

Insert the required remaining connectors.

4

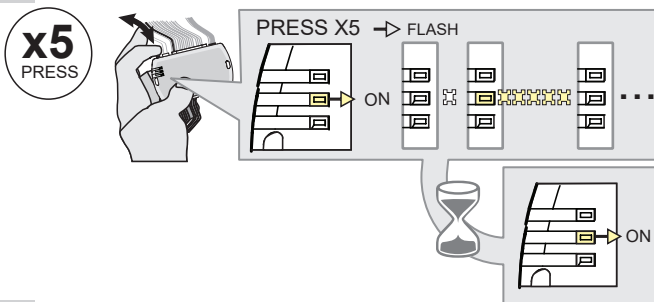


Press and release the programming button five (5x) times.

↳The YELLOW LED will flash 5 times each second.


↳**WAIT** for the YELLOW LED to turn ON solide.

 5



Open the driver door.

6

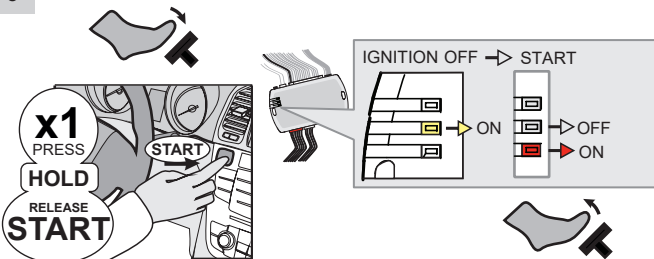

Press the foot-brake pedal.

Press the Push-to-Start button until the engine start.

Release the foot-brake pedal.

↳The RED LED will turn ON.
 ↳The YELLOW LED will turn OFF.


KEY BYPASS PROGRAMMING PROCEDURE 2/3 |

7





Press the Push-to-Start button until the engine turn OFF.

8

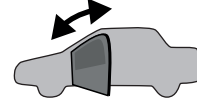

Close and open the driver door.

9

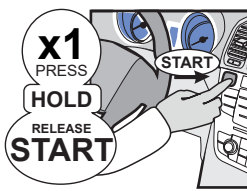
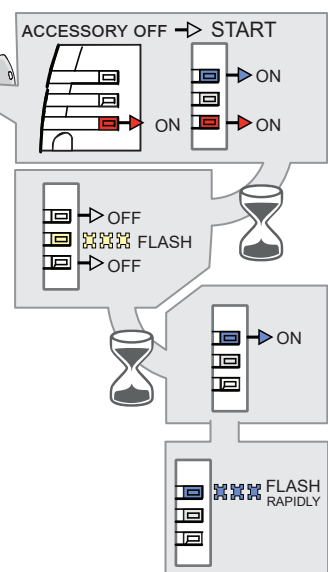
Press the foot-brake pedal.

Press the Push-to-Start button until the engine start.

Release the foot-brake pedal.

- ↳ The BLUE LED will turn ON.
- ↳ The BLUE LED will turn OFF. The RED LED will turn OFF.
- ↳ The YELLOW LED will flash rapidly
- ↳ The BLUE LED will turn ON.
- ↳ The BLUE LED will flash rapidly


10

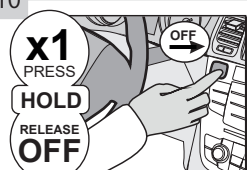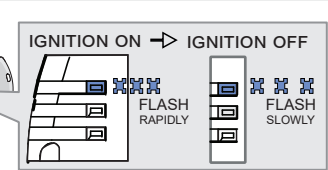Press the Push-to-Start button until the engine turn OFF.


- ↳ The BLUE LED will flash slowly

11

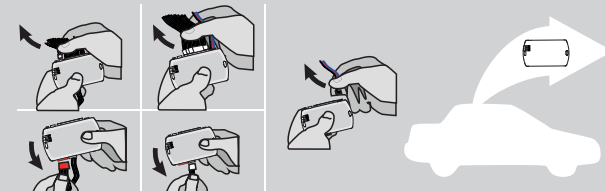

Disconnect all the connectors and after the Data-Link (4-pins) connector.

12

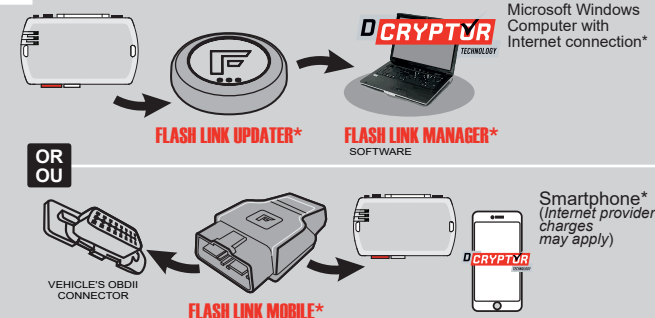

Microsoft Windows Computer with Internet connection*

FLASH LINK UPDATER* **FLASH LINK MANAGER*** SOFTWARE

OR


Smartphone* (Internet provider charges may apply)

FLASH LINK MOBILE*

Use the tool: FLASH LINK UPDATER or FLASH LINK MOBILE to visit the DCryptor menu.

*Parts required (not included)

13

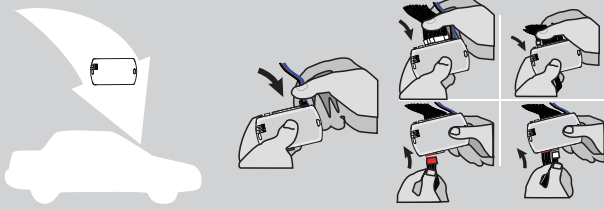

AFTER DCRYPTOR PROGRAMMING COMPLETED
Go back to the vehicle and **reconnect** the 4-Pin (Data-Link) connector and after, all the remaining connector.



The module is now programmed.



REMOTE STARTER / ALARM VERIFICATION PROCEDURE

Test the remote starter. Remote start the vehicle.

REMOTE STARTER FUNCTIONALITY |



All doors must be closed.



Remote start the vehicle.



Unlock the doors with either:

- The OEM remote
- The remote-starter remote
- Or the proximity remote



Enter the vehicle with the Intelligent Key.



The vehicle can now be put in to gear and driven.

If the vehicle is not unlocked with one of these conditions the remote-starter will shut down as soon as any door is opened.



REGULAR INSTALLATION AND THAR-GM6 INSTALLATION

ADDENDUM - SUGGESTED WIRING CONFIGURATION

VEHICLE		YEARS	Vehicle functions supported in this diagram (functional if equipped)													
			Immobilizer bypass	Lock	Unlock	Arm	Disarm	Parking Light	Trunk (open)	RAP Disable	Tachometer	Door Status	Trunk Status	Hand-Brake Status	Foot-Brake Status	OEM Remote Monitoring
CADILLAC																
SRX	Push-To-Start	2013-2016	•	•	•	•	•	•	•	•	•	•	•	•	•	•

FIRMWARE VERSION

70.[41]

GM MINIMUM

To add the firmware version and the options, use the **FLASH LINK UPDATER** or **FLASH LINK MOBILE** tool, sold separately.

IF THE VEHICLE IS NOT EQUIPPED WITH FUNCTIONAL HOOD PIN:	A11	OFF	Hood trigger (Output Status).
---	------------	------------	-------------------------------

	UNIT OPTION	DESCRIPTION
<p>Program bypass option:</p>	C1	OEM Remote status (Lock/Unlock) monitoring
	D6	Push-to-Start

	ATTENTION!	<p>DATE: XX-XX</p>	E5	OFF	SPECIAL FUNCTIONS: BY DEFAULT DEACTIVATED
			ON	MANUFACTURED MODULES BETWEEN: 04/2018 TO 04/2019	

MANDATORY INSTALL

*HOOD PIN



HOOD STATUS: THE HOOD PIN SWITCH MUST BE INSTALLED IF THE VEHICLE CAN BE REMOTE STARTED WITH THE HOOD OPEN, SET FUNCTION **A11** TO OFF.

A11	OFF
------------	------------

Notice: the installation of safety elements are mandatory. The hood pin is an essential security element and must be installed.

THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.

DESCRIPTION

Parts required (Not included) PAGE

WIRE TO WIRE DIAGRAM








	Page 3
--	--------

1X 1Amp Diode
1X 5 Amp Fuse
1X 1k Ohm Resistor






THARNESS DIAGRAM

THARNESS THAR-GM6	1x THAR-GM6	Page 4
-------------------	-------------	--------

BCM

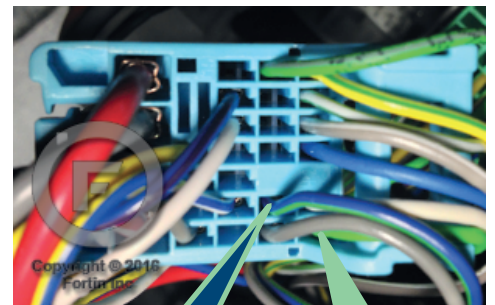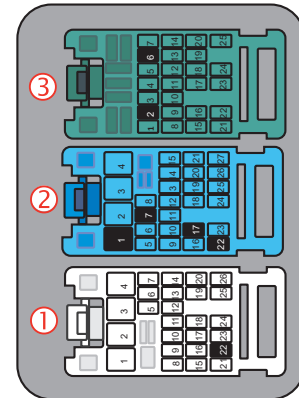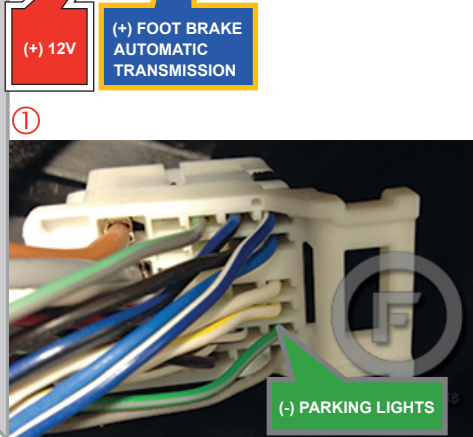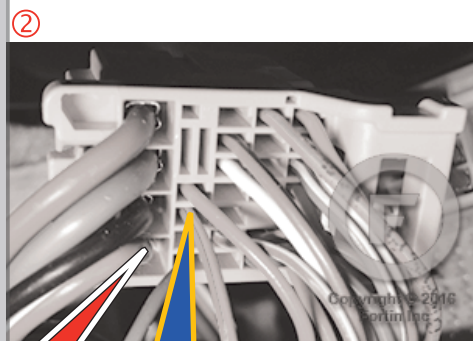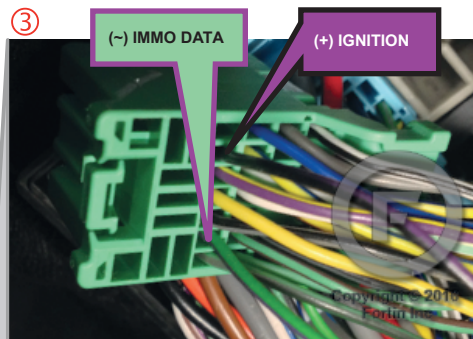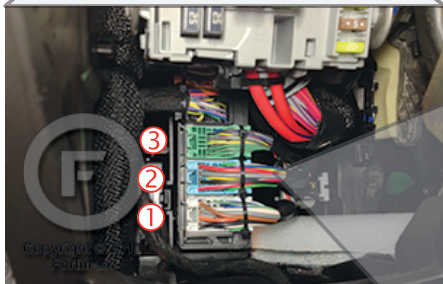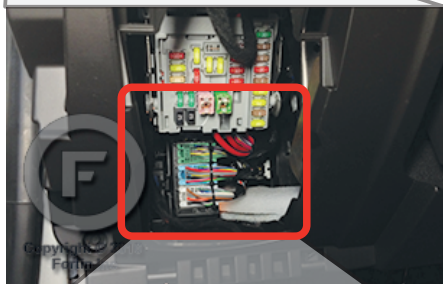

AUTOMATIC TRANSMISSION WIRING CONNECTION

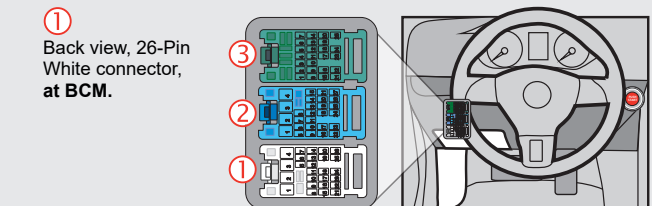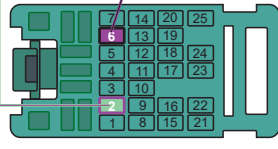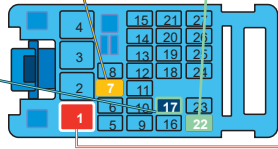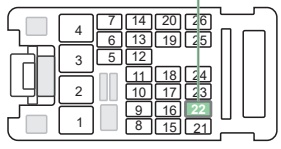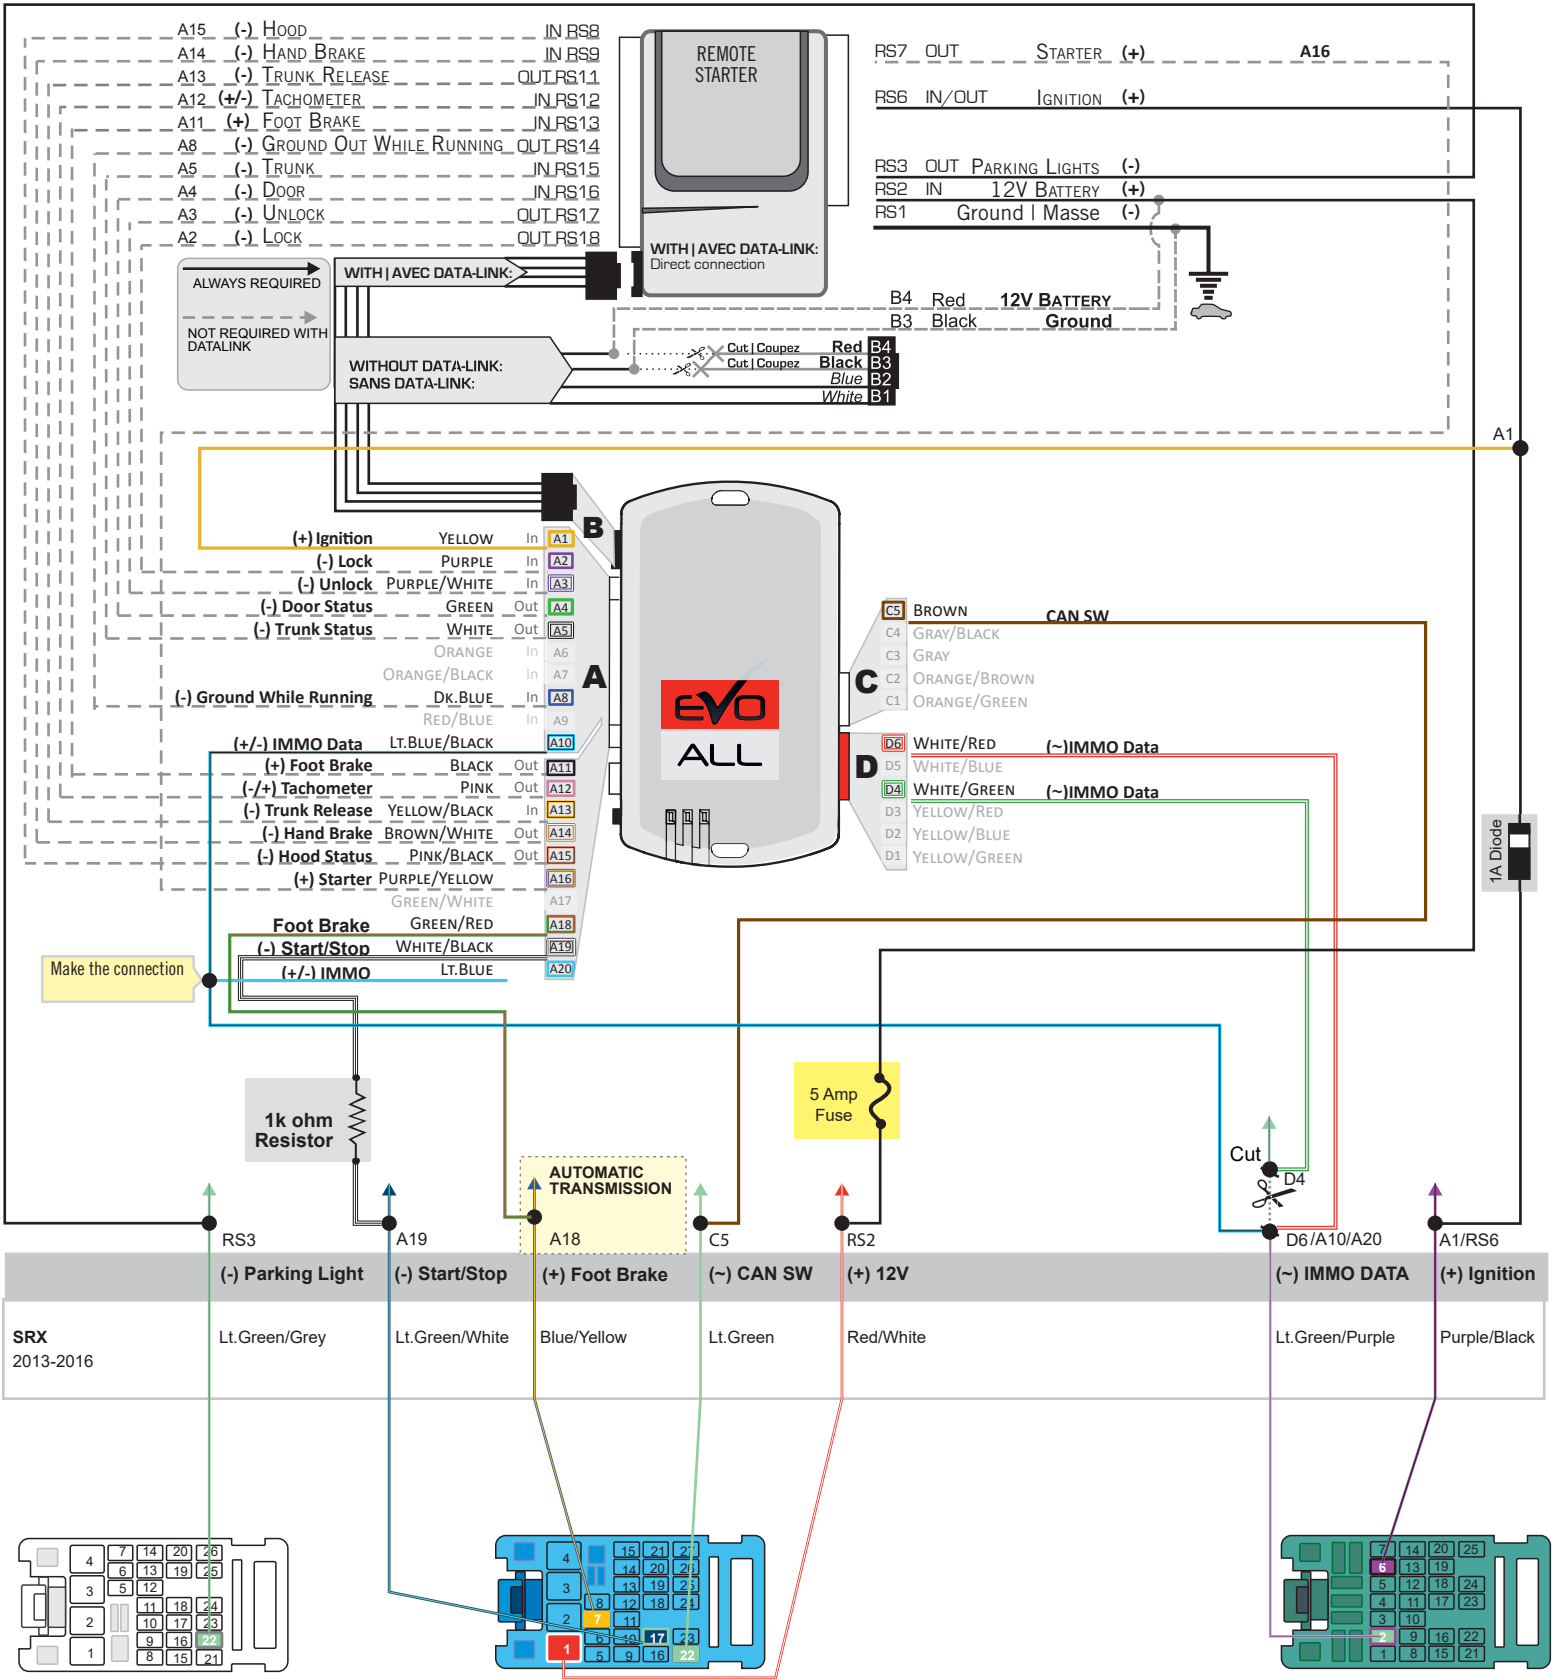


② Back view, 27-Pin Blue connector, at BCM.


③ Back view, 25-Pin Green connector, at BCM.

① Back view, 26-Pin White connector, at BCM.

THAR-GM6 | WIRING CONNECTION

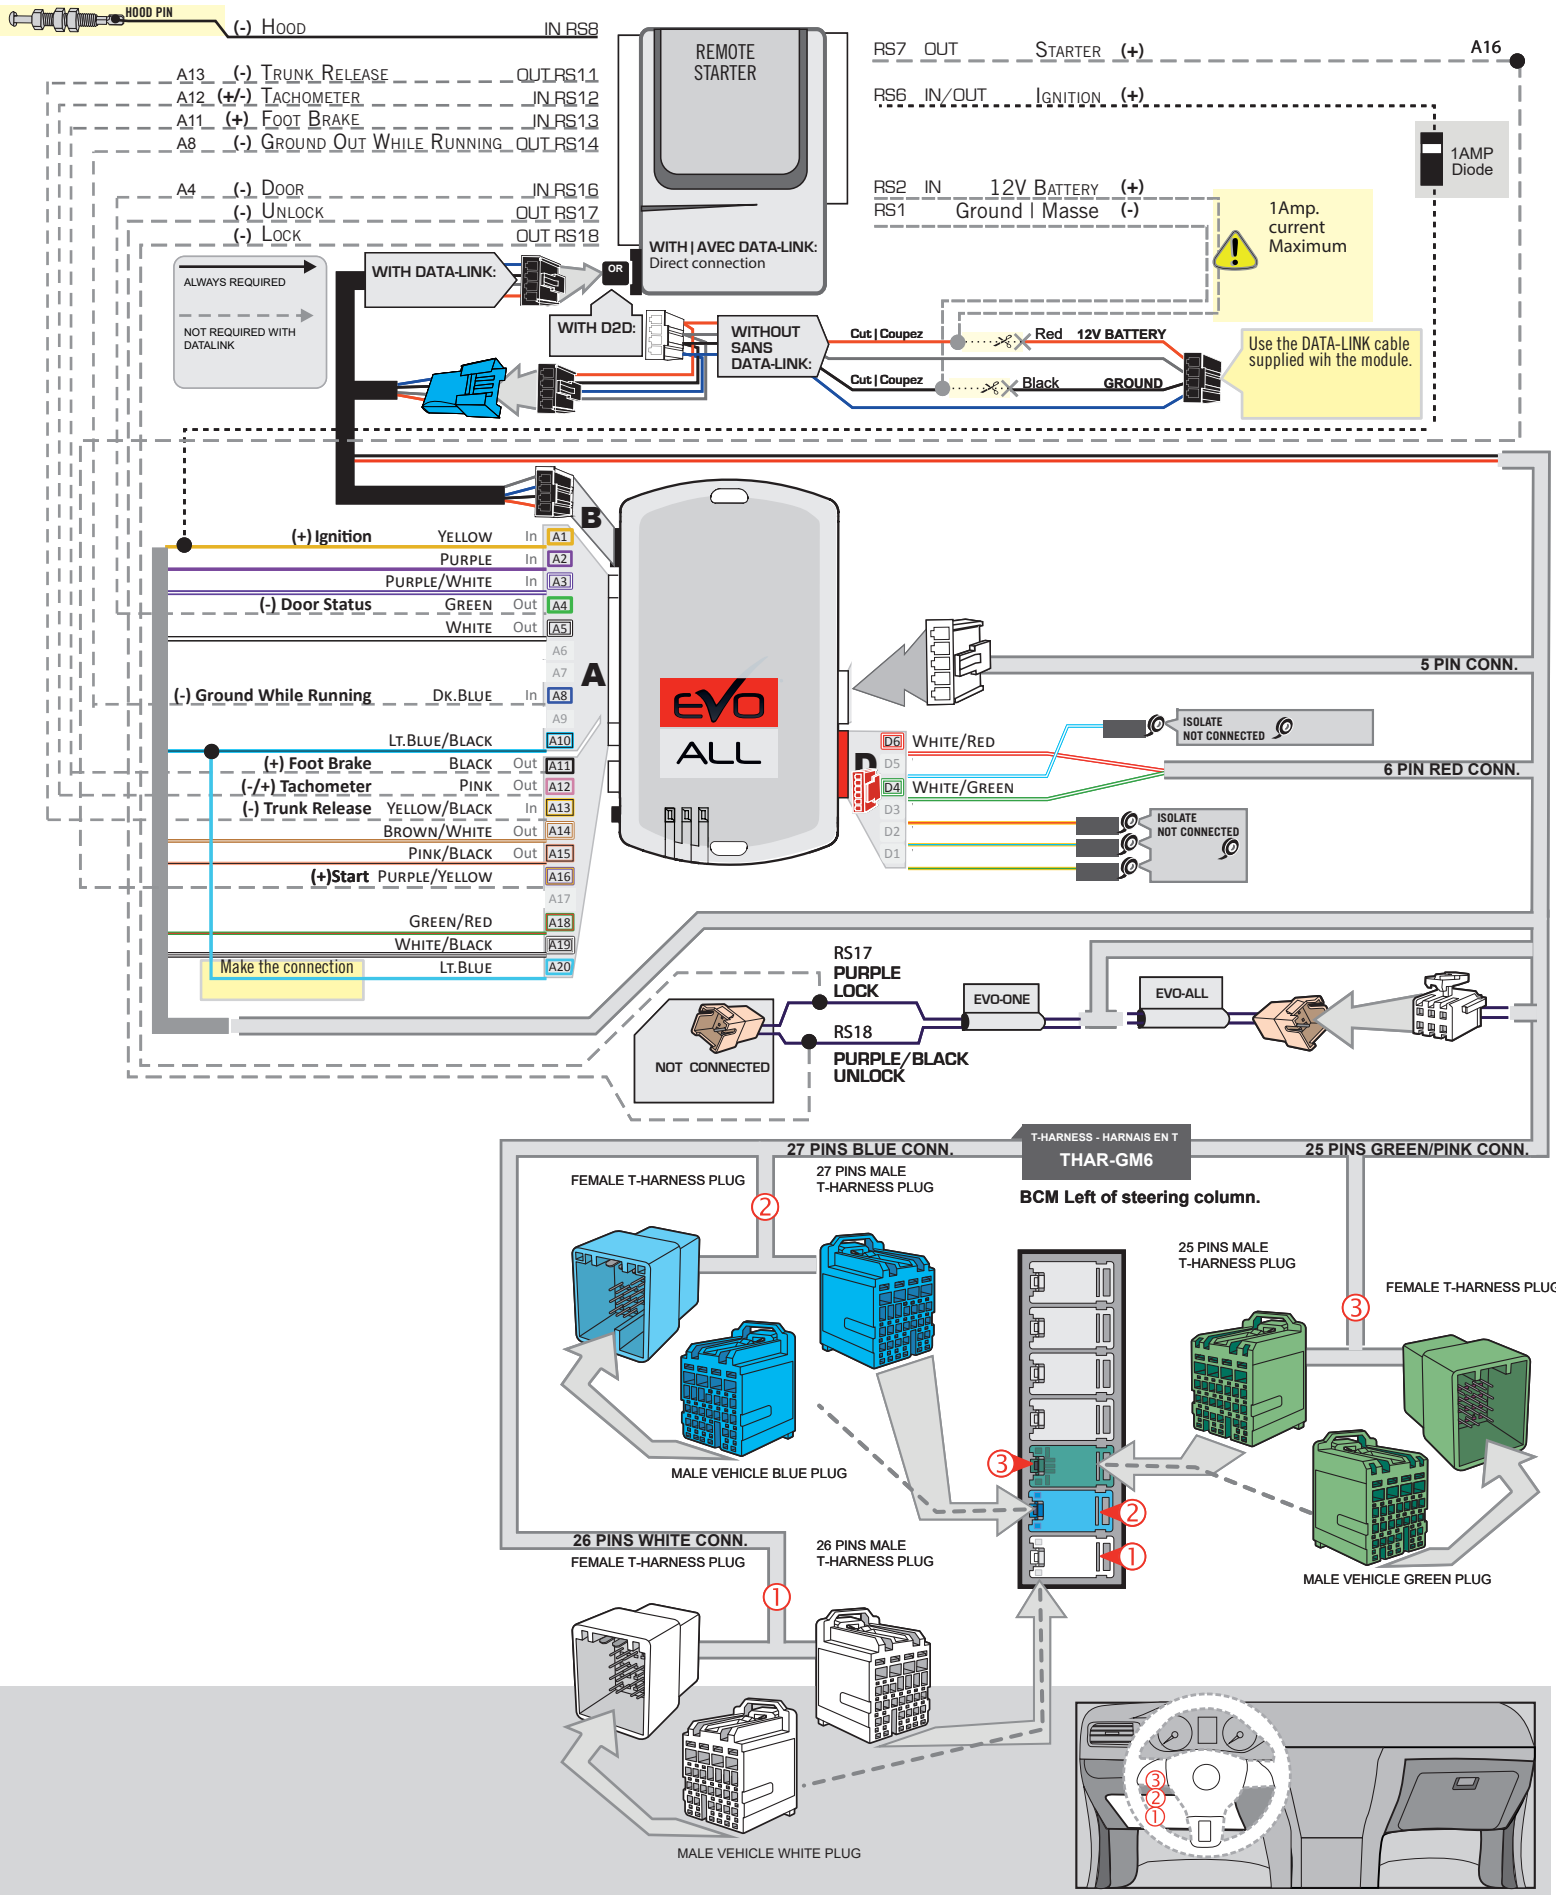


KEY BYPASS PROGRAMMING PROCEDURE 1/3 |

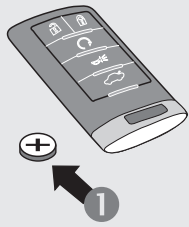


1 Remove the battery from the OEM remote.

2 Place the OEM remote into the transmitter pocket of the center console.

Refer to vehicle user guide for keyport location.

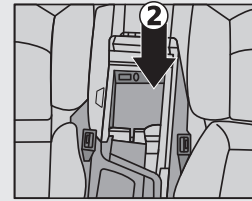


1

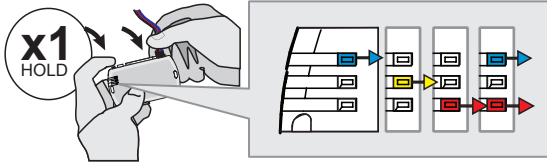

Press and hold the programming button:
Connect the 4-PIN Data-link harness (Black connector).


↳The Blue, Red, Yellow and Blue & Red LEDs will alternatively illuminate.

2

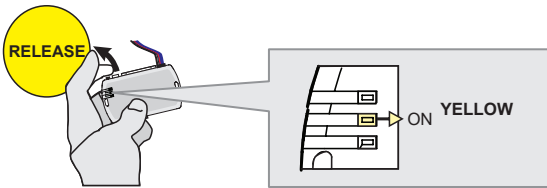


Release the programming button when the LED is YELLOW.

 If the LED is not solid YELLOW disconnect the 4-Pin connector (Data-Link) and go back to step 1.




3

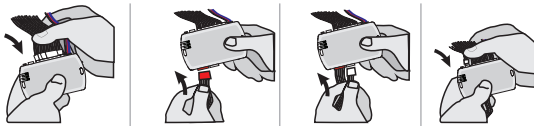

Insert the required remaining connectors.

4

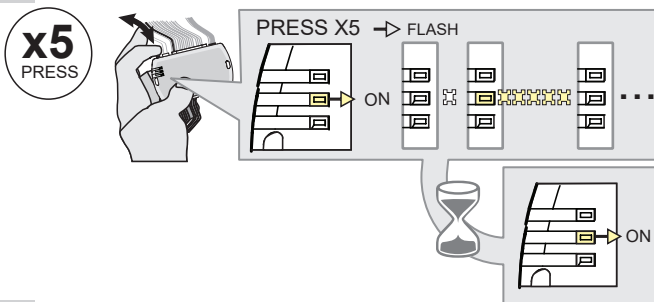


Press and release the programming button five (5x) times.

↳The YELLOW LED will flash 5 times each second.


↳**WAIT** for the YELLOW LED to turn ON solide.

 5



Open the driver door.

6

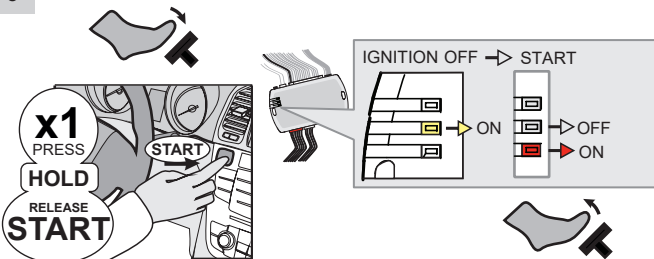

Press the foot-brake pedal.

Press the Push-to-Start button until the engine start.

Release the foot-brake pedal.

↳The RED LED will turn ON.
↳The YELLOW LED will turn OFF.


KEY BYPASS PROGRAMMING PROCEDURE 2/3 |

7








Press the Push-to-Start button until the engine turn OFF.

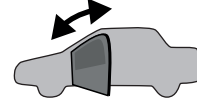8



Close and open the driver door.

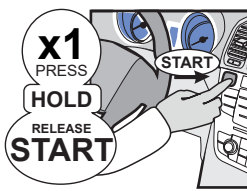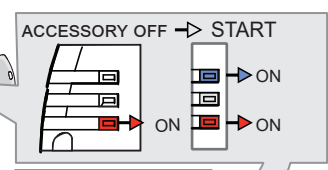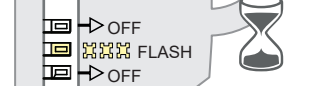9



Press the foot-brake pedal.

Press the Push-to-Start button until the engine start.

Release the foot-brake pedal.

- ↳ The BLUE LED will turn ON.
- ↳ The BLUE LED will turn OFF. The RED LED will turn OFF.
- ↳ The YELLOW LED will flash rapidly
- ↳ The BLUE LED will turn ON.
- ↳ The BLUE LED will flash rapidly


10

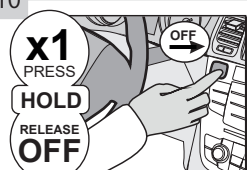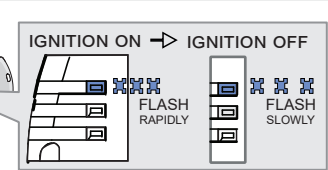Press the Push-to-Start button until the engine turn OFF.


- ↳ The BLUE LED will flash slowly

11

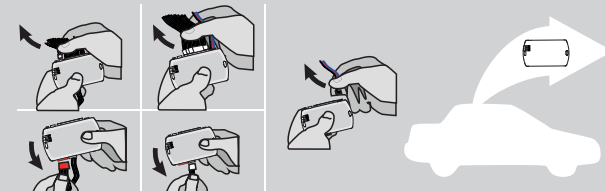

Disconnect all the connectors and after the Data-Link (4-pins) connector.

12

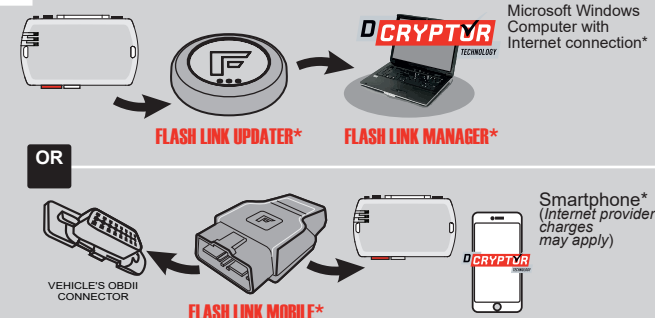

Microsoft Windows Computer with Internet connection*

FLASH LINK UPDATER* FLASH LINK MANAGER*

OR


Smartphone* (Internet provider charges may apply)

VEHICLE'S OBDII CONNECTOR FLASH LINK MOBILE*

Use the tool: FLASH LINK UPDATER or FLASH LINK MOBILE to visit the DCryptor menu.

*Parts required (not included)

13

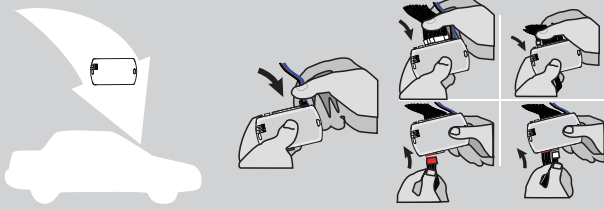

AFTER DCRYPTOR PROGRAMMING COMPLETED
Go back to the vehicle and **reconnect** the 4-Pin (Data-Link) connector and after, all the remaining connector.



The module is now programmed.



REMOTE STARTER / ALARM VERIFICATION PROCEDURE

Test the remote starter. Remote start the vehicle.

REMOTE STARTER FUNCTIONALITY |



All doors must be closed.

 


Remote start the vehicle.



Unlock the doors with either:

- The OEM remote
- The remote-starter remote
- Or the proximity remote



Enter the vehicle with the Intelligent Key.



The vehicle can now be put in to gear and driven.


If the vehicle is not unlocked with one of these conditions the remote-starter will shut down as soon as any door is opened.



REGULAR INSTALLATION AND THAR-GM6 INSTALLATION

ADDENDUM - SUGGESTED WIRING CONFIGURATION

VEHICLE	YEARS	Vehicle functions supported in this diagram (functional if equipped)													
		Immobilizer bypass	Lock	Unlock	Arm	Disarm	Parking Light	Trunk (open)	RAP Disable	Tachometer	Door Status	Trunk Status	Hand-Brake Status	Foot-Brake Status	OEM Remote Monitoring
CADILLAC															
XTS	Push-To-Start	2013-2018	•	•	•	•	•	•	•	•	•	•	•	•	•




FIRMWARE VERSION

70.[41]

GM MINIMUM

To add the firmware version and the options, use the **FLASH LINK UPDATER** or **FLASH LINK MOBILE** tool, sold separately.

IF THE VEHICLE IS NOT EQUIPPED WITH FUNCTIONAL HOOD PIN:	A11	OFF	Hood trigger (Output Status).
---	------------	------------	-------------------------------

	UNIT OPTION	DESCRIPTION
 Program bypass option:	C1	OEM Remote status (Lock/Unlock) monitoring
	D6	Push-to-Start

	ATTENTION!	 <p>DATE: XX-XX</p>	E5	OFF	SPECIAL FUNCTIONS: BY DEFAULT DEACTIVATED
				ON	MANUFACTURED MODULES BETWEEN: 04/2018 TO 04/2019

MANDATORY INSTALL

*HOOD PIN



HOOD STATUS: THE HOOD PIN SWITCH MUST BE INSTALLED IF THE VEHICLE CAN BE REMOTE STARTED WITH THE HOOD OPEN, SET FUNCTION **A11** TO OFF.

A11	OFF
------------	------------

Notice: the installation of safety elements are mandatory. The hood pin is an essential security element and must be installed.

THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.

DESCRIPTION | DESCRIPTION

Parts required (Not included) PAGE




WIRE TO WIRE DIAGRAM

<p>1X 1Amp Diode 1X 5 Amp Fuse 1X 1k Ohm Resistor</p>	<p>Page 3</p>
---	---------------





THARNESSE DIAGRAM

<p>THARNESSE THAR-GM6</p>	<p>1x THAR-GM6</p>	<p>Page 4</p>
---------------------------	--------------------	---------------


BCM

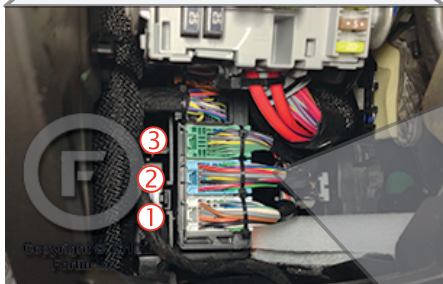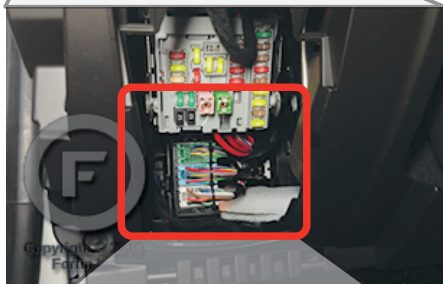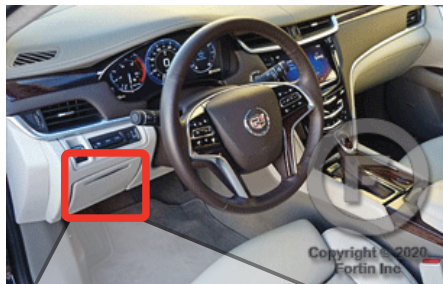


XTS

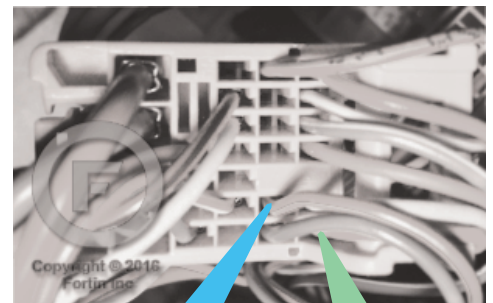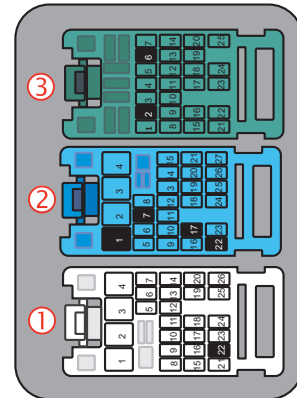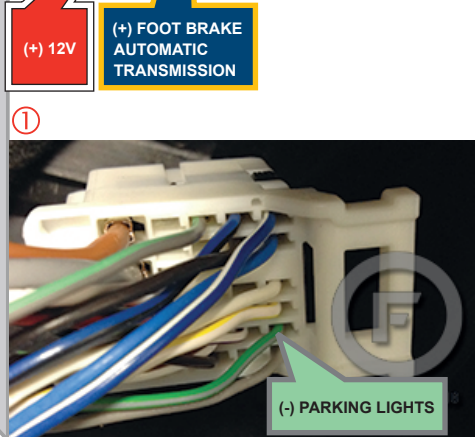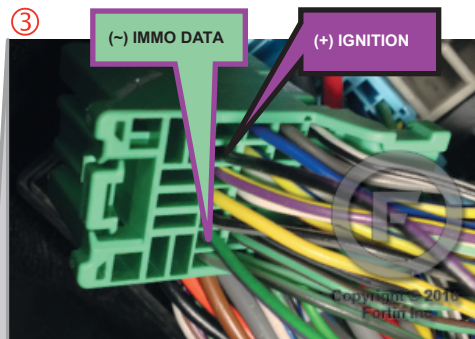

AUTOMATIC TRANSMISSION WIRING CONNECTION

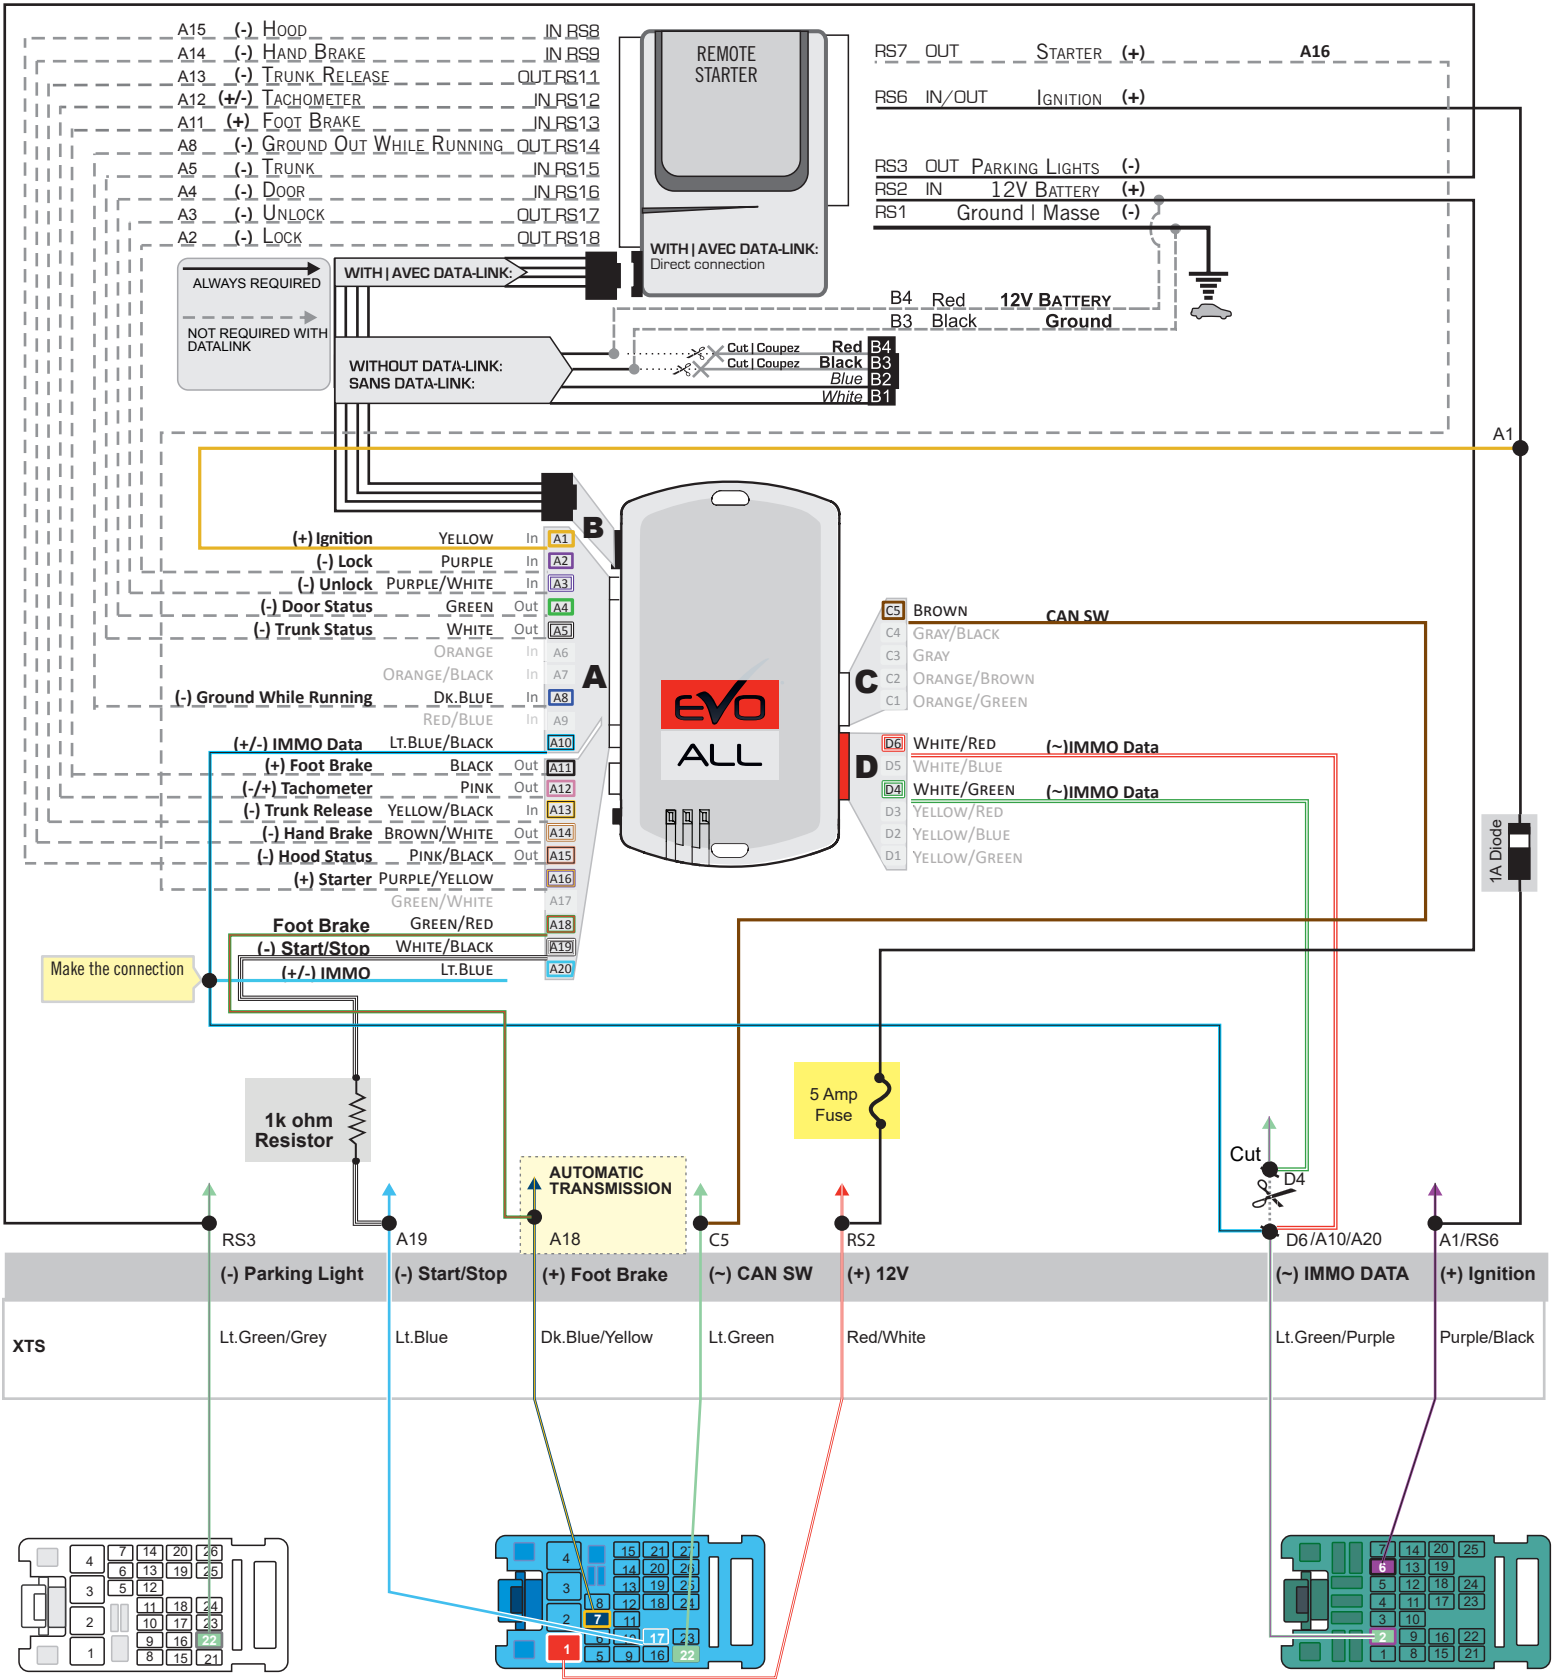


① Back view, 26-Pin White connector, at BCM.

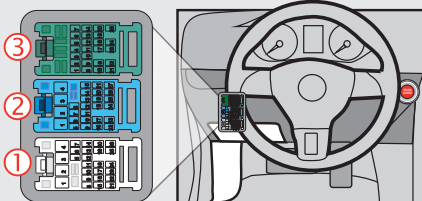

② Back view, 27-Pin Blue connector, at BCM.

③ Back view, 25-Pin Green connector, at BCM.


THAR-GM6 | WIRING CONNECTION

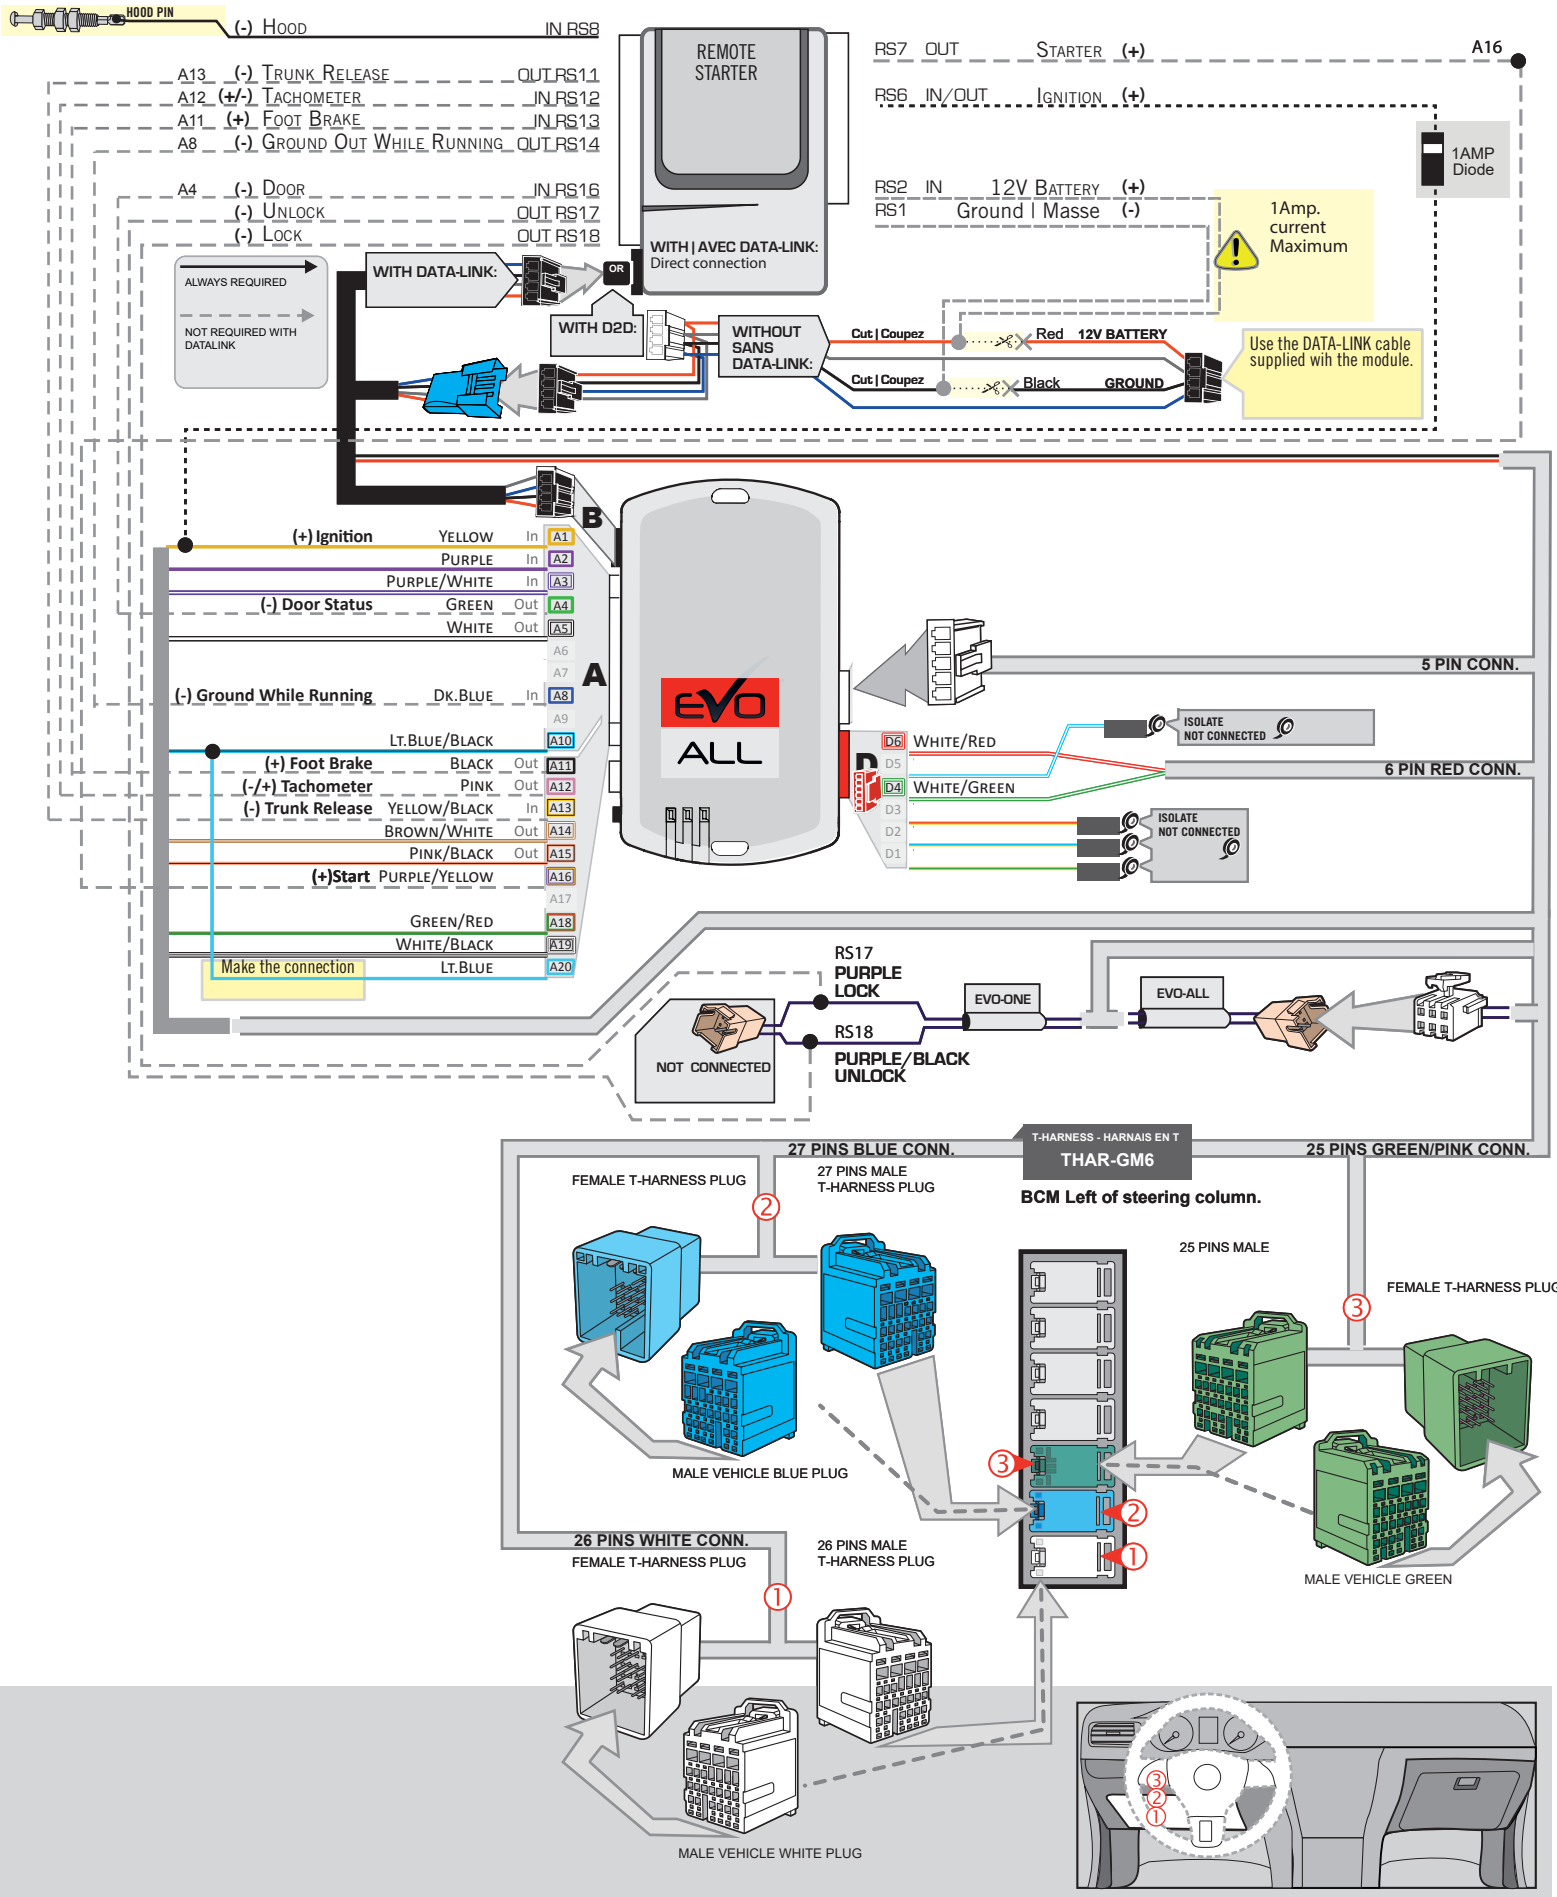


KEY BYPASS PROGRAMMING PROCEDURE 1/3 |



- 1 Remove the battery from the OEM remote.
- 2 Place the OEM remote into the transmitter pocket of the center console.
Refer to vehicle user guide for keyport location.

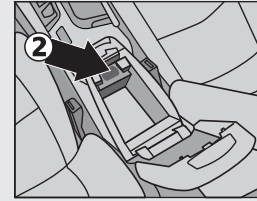


1

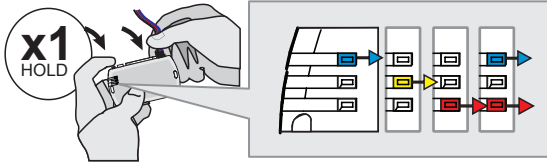

Press and hold the programming button:
Connect the 4-PIN Data-link harness (Black connector).


↳The Blue, Red, Yellow and Blue & Red LEDs will alternatively illuminate.

2

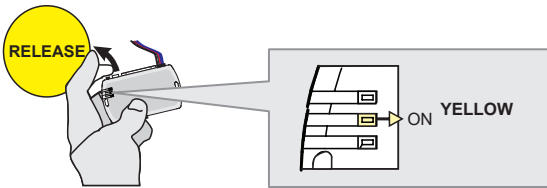


Release the programming button when the LED is YELLOW.

 If the LED is not solid YELLOW disconnect the 4-Pin connector (Data-Link) and go back to step 1.




3

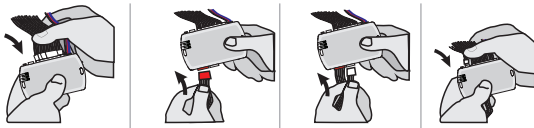

Insert the required remaining connectors.

4

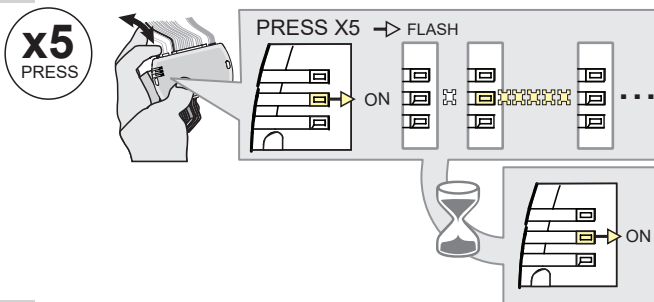


Press and release the programming button five (5x) times.

↳The YELLOW LED will flash 5 times each second.


↳**WAIT** for the YELLOW LED to turn ON solide.

 5



Open the driver door.

6

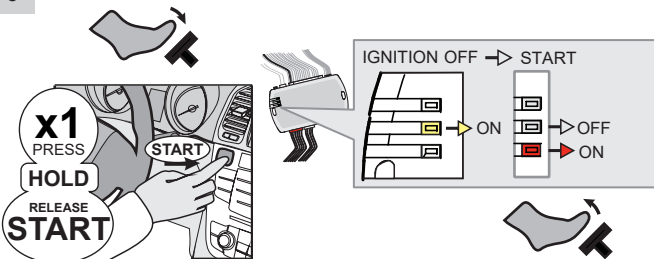

Press the foot-brake pedal.

Press the Push-to-Start button until the engine start.

Release the foot-brake pedal.

↳The RED LED will turn ON.
↳The YELLOW LED will turn OFF.


KEY BYPASS PROGRAMMING PROCEDURE 2/3 |

7





Press the Push-to-Start button until the engine turn OFF.

8

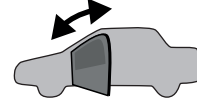

Close and open the driver door.

9

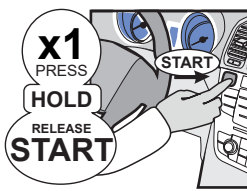
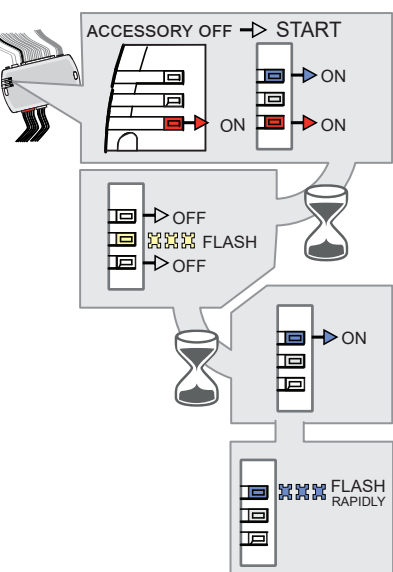
Press the foot-brake pedal.

Press the Push-to-Start button until the engine start.

Release the foot-brake pedal.

- ↳ The BLUE LED will turn ON.
- ↳ The BLUE LED will turn OFF. The RED LED will turn OFF.
- ↳ The YELLOW LED will flash rapidly
- ↳ The BLUE LED will turn ON.
- ↳ The BLUE LED will flash rapidly


10

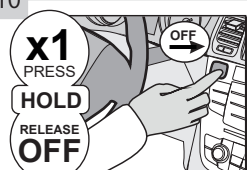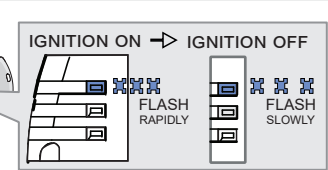Press the Push-to-Start button until the engine turn OFF.


- ↳ The BLUE LED will flash slowly

11

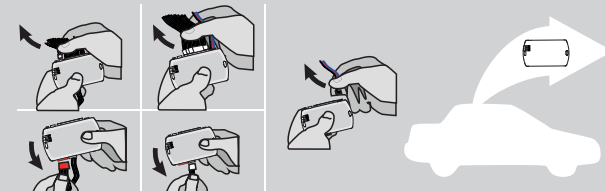

Disconnect all the connectors and after the Data-Link (4-pins) connector.

12

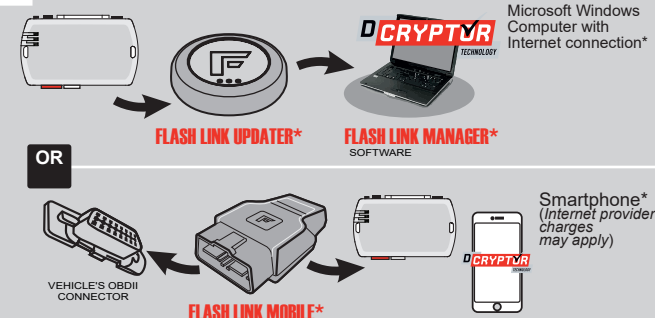

Microsoft Windows Computer with Internet connection*

FLASH LINK UPDATER* **FLASH LINK MANAGER*** SOFTWARE

OR


Smartphone* (Internet provider charges may apply)

FLASH LINK MOBILE*

Use the tool: FLASH LINK UPDATER or FLASH LINK MOBILE to visit the DCryptor menu.

*Parts required (not included)

13

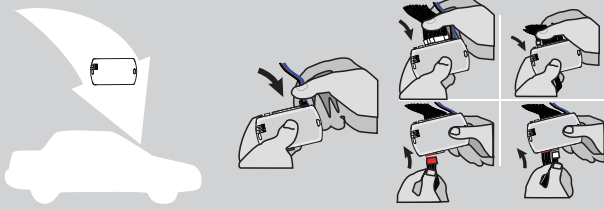

AFTER DCRYPTOR PROGRAMMING COMPLETED
Go back to the vehicle and **reconnect** the 4-Pin (Data-Link) connector and after, all the remaining connector.



The module is now programmed.



REMOTE STARTER / ALARM VERIFICATION PROCEDURE

Test the remote starter. Remote start the vehicle.

REMOTE STARTER FUNCTIONALITY |



All doors must be closed.



Remote start the vehicle.



Unlock the doors with either:

- The OEM remote
- The remote-starter remote
- Or the proximity remote



Enter the vehicle with the Intelligent Key.



The vehicle can now be put in to gear and driven.

If the vehicle is not unlocked with one of these conditions the remote-starter will shut down as soon as any door is opened.



**STAND ALONE INSTALLATION AND THAR-GM6
INSTALLATION**

ADDENDUM - SUGGESTED WIRING CONFIGURATION



ONLY COMPATIBLE WITH AUTOMATIC TRANSMISSION VEHICLES.



VEHICLE

YEARS

Vehicle functions supported in this diagram (functional if equipped)

VEHICLE	YEARS	Immobilizer bypass	Lock	Unlock	Arm	Disarm	Parking Light	Trunk (open)	RAP Disable	Tachometer	Door Status	Trunk Status	Hand-Brake Status	Foot-Brake Status	OEM Remote Monitoring
CHEVROLET															
Impala	Push-To-Start	2014-2019	•	•	•	•	•	•	•	•	•	•	•	•	•



FIRMWARE VERSION

70.[41]

GM MINIMUM

To add the firmware version and the options, use the **FLASH LINK UPDATER** or **FLASH LINK MOBILE** tool, sold separately.

IF THE VEHICLE IS NOT EQUIPPED WITH FUNCTIONAL HOOD PIN:

A11

OFF

Hood trigger (Output Status).



Program bypass option:

UNIT OPTION

DESCRIPTION

C1


OEM Remote status (Lock/Unlock) monitoring

D6

Push-to-Start



ATTENTION!

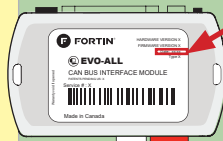

DATE: XX-XX

E5

OFF

SPECIAL FUNCTIONS: BY DEFAULT DEACTIVATED

ON

MANUFACTURED MODULES BETWEEN: 04/2018 TO 04/2019

MANDATORY INSTALL

*HOOD PIN



HOOD STATUS: THE HOOD PIN SWITCH MUST BE INSTALLED IF THE VEHICLE CAN BE REMOTE STARTED WITH THE HOOD OPEN, SET FUNCTION **A11** TO OFF.

A11

OFF

Notice: the installation of safety elements are mandatory. The hood pin is an essential security element and must be installed.

THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.

PARTS REQUIRED (NOT INCLUDED)

1x **FLASH LINK UPDATER**
 1x **FLASH LINK MANAGER**
 SOFTWARE
 1x Microsoft Windows Computer with Internet connection

OR

 
1x **FLASH LINK MOBILE**
 1x **FLASH LINK MOBILE APP**
 Smartphone *Android* or *iOS* with Internet connection (*provider charges may apply*).
 1x

MANDATORY

HOOD PIN



REMOTE START SAFETY OVERRIDE SWITCH

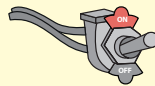

VALET SWITCH

Part #: RSPB available, Sold separately.

Notice: the installation of safety elements are mandatory. The hood pin and the valet switch are essential security elements and must be installed.

STAND ALONE CONFIGURATION

	Program bypass option	UNIT OPTION	DESCRIPTION
	OEM Remote Stand Alone Remote Starter:	D1.10	By default, LOCK, LOCK, LOCK Par défaut, VERROUILLE,VERROUILLE,VERROUILLE
		D1.1	
	Program bypass option with oem remote:	C1	OEM Remote Monitoring
	Program bypass option with RF KIT antenna:	H1 to H6	Supported RF Kits and select RF Kit

REMOTE STARTER FUNCTIONALITY

All doors must be closed.

3X

Press the OEM remote's Lock button 3x to remote-start (or remote-stop) the vehicle.

START

The vehicle will START.

REMOTE STARTER DIAGNOSTICS
MODULE RED LED

x2 flash :	Brake ON
x3 flash :	No tach
x4 flash :	Ignition before start
x5 flash :	Hood Open

REMOTE STARTER WARNING CARD



CUT THIS WARNING CARD AND STICK IT ON A VISIBLE PLACE:
 or use the package **RSPB**, Sold separately.

WARNING

REMOTE STARTER

THE VEHICLE CAN BE STARTED BY EITHER: PRESSING THE LOCK BUTTON ON THE OEM REMOTE 3 TIMES CONSECUTIVELY OR BY A SMARTPHONE. **TURN ON** THE SAFETY SWITCH LOCATED UNDER THE DASHBOARD BEFORE WORKING ON THE VEHICLE.

DESCRIPTION

Parts required (Not included)		PAGE
-------------------------------	--	------



WIRE TO WIRE DIAGRAM

	1X 5 Amp Fuse 1X 1k Ohm Resistor	Page 4
--	-------------------------------------	--------






THARNESS DIAGRAM

THARNESS THAR-GM6	1x THAR-GM6	Page 5
-------------------	-------------	--------





BCM

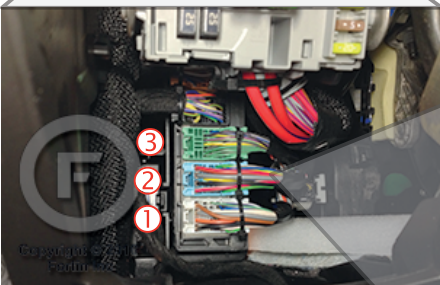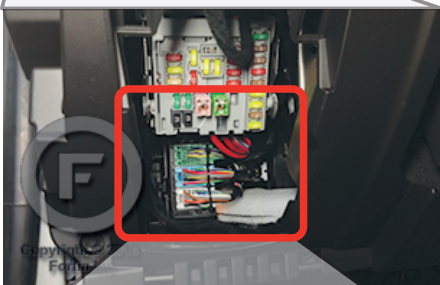


Impala

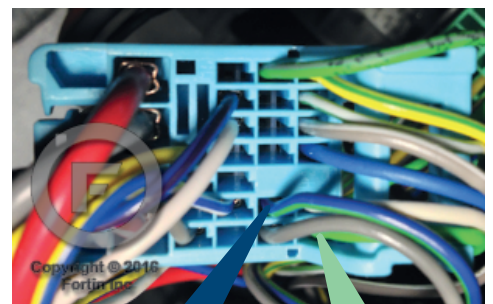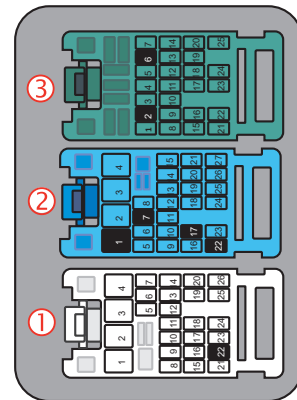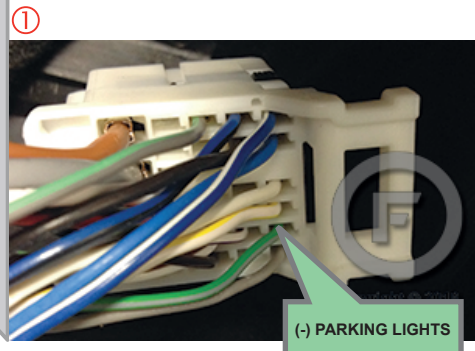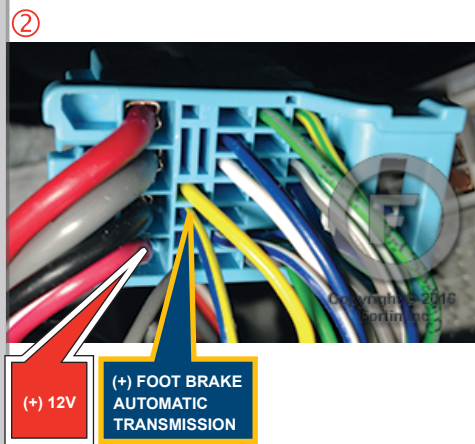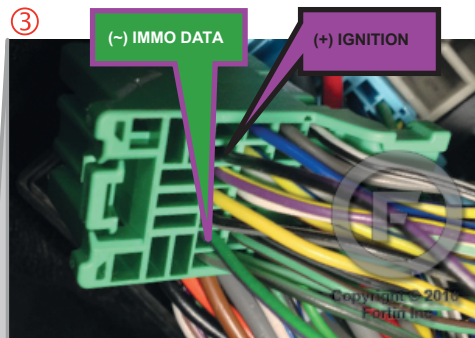

AUTOMATIC TRANSMISSION WIRING CONNECTION

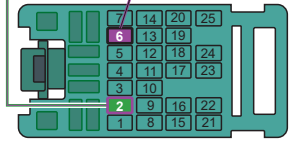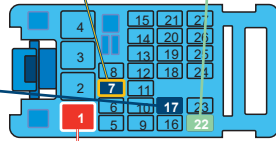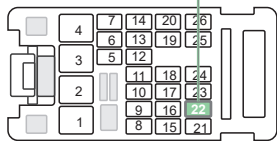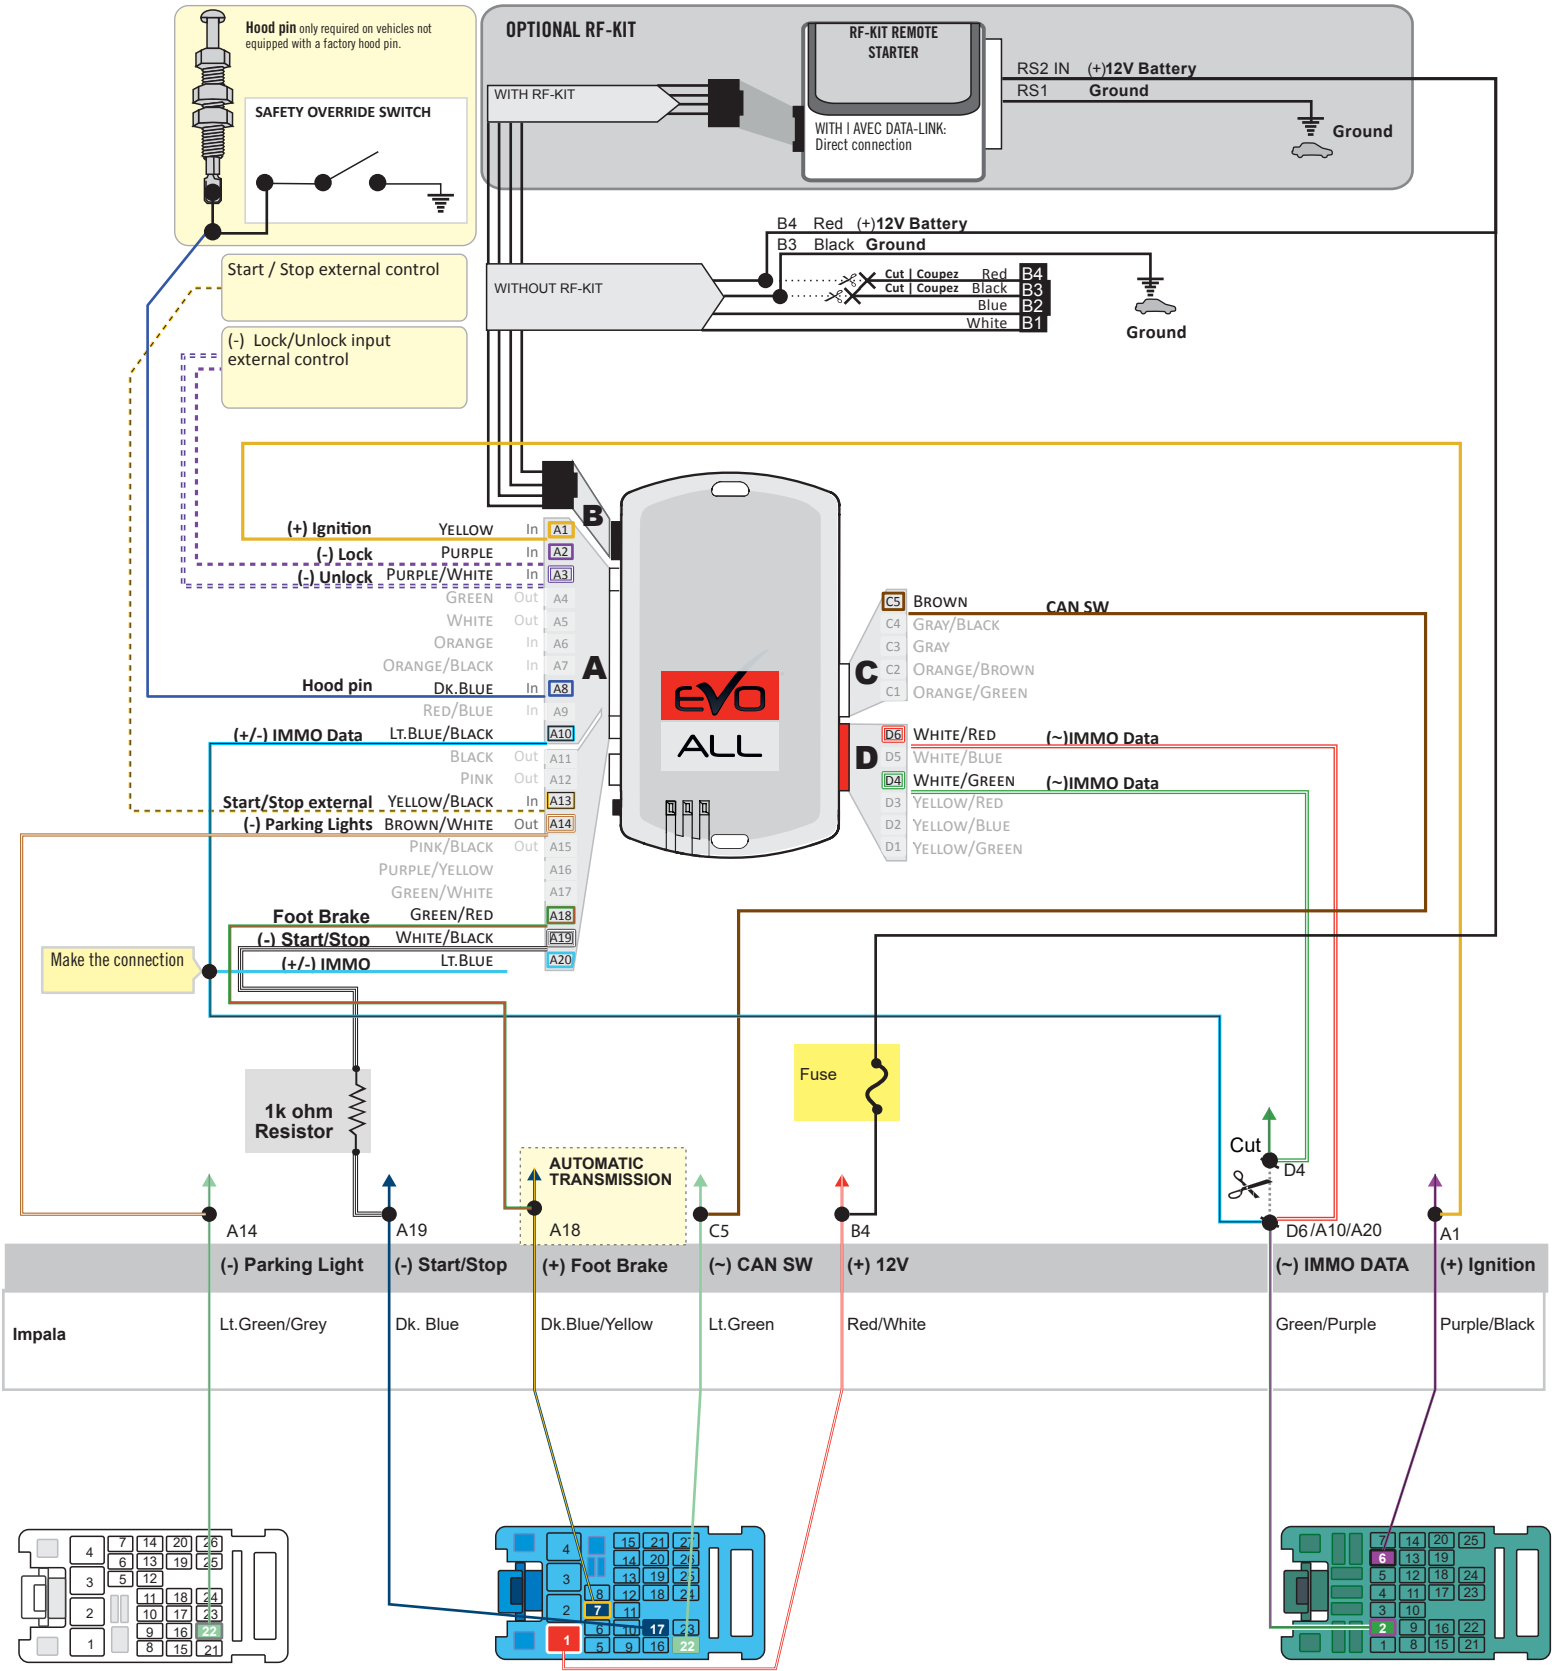


① Back view, 26-Pin White connector, at BCM.

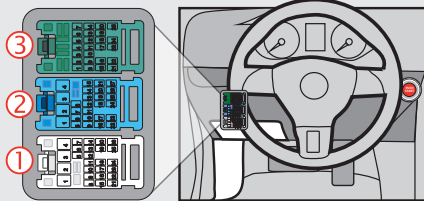

② Back view, 27-Pin Blue connector, at BCM.

③ Back view, 25-Pin Green connector, at BCM.

THAR-GM6 | AUTOMATIC TRANSMISSION CONNECTION

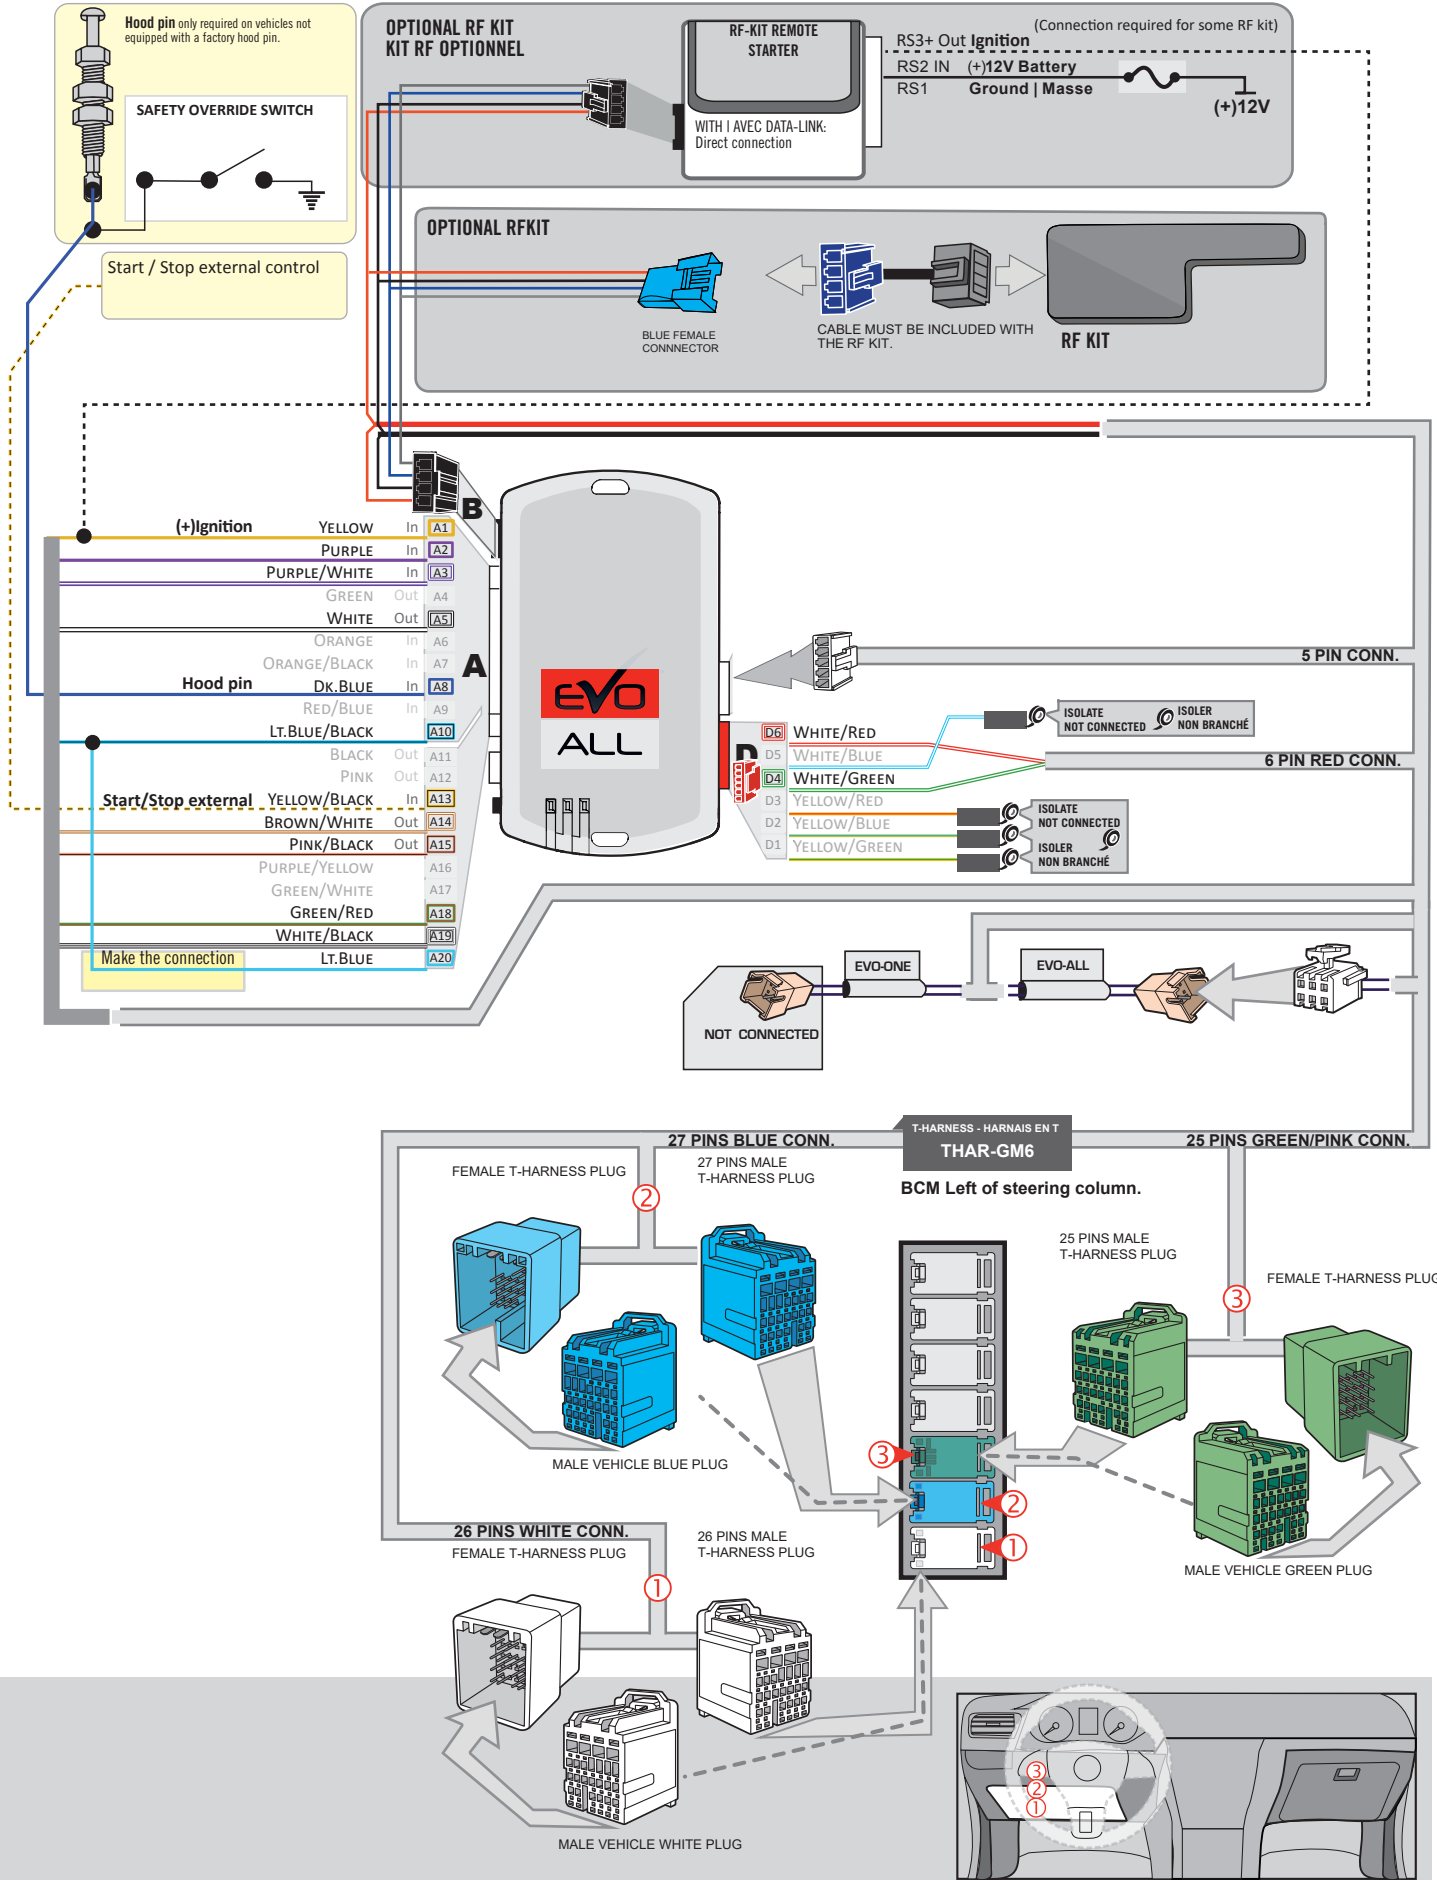


KEY BYPASS PROGRAMMING PROCEDURE 1/3




1 Remove the battery from the OEM remote.

2 Place the OEM remote into the transmitter pocket of the center console.

Refer to vehicle user guide for keyport location.

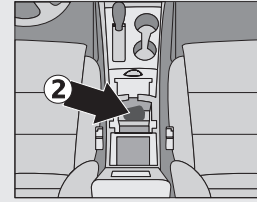


1

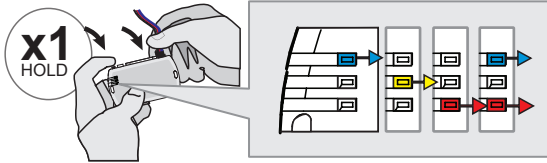

Press and hold the programming button:
Connect the 4-PIN Data-link harness (Black connector).


↳The Blue, Red, Yellow and Blue & Red LEDs will alternatively illuminate.

2

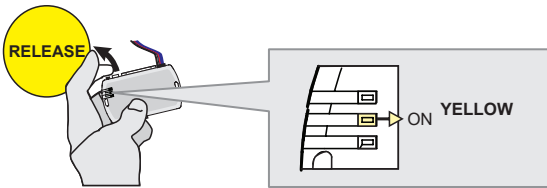


Release the programming button when the LED is YELLOW.

 If the LED is not solid YELLOW disconnect the 4-Pin connector (Data-Link) and go back to step 1.




3

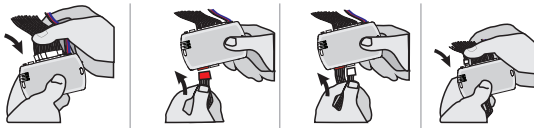

Insert the required remaining connectors.

4

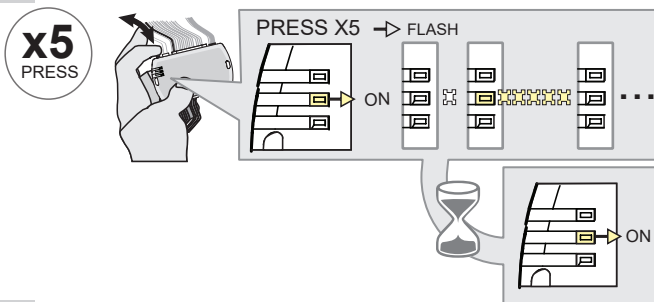


Press and release the programming button five (5x) times.

↳The YELLOW LED will flash 5 times each second.


↳**WAIT** for the YELLOW LED to turn ON solide.

 5



Open the driver door.

6

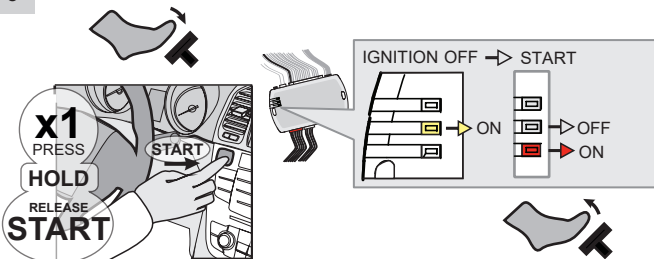

Press the foot-brake pedal.

Press the Push-to-Start button until the engine start.

Release the foot-brake pedal.

↳The RED LED will turn ON.
 ↳The YELLOW LED will turn OFF.


KEY BYPASS PROGRAMMING PROCEDURE 2/3

7




Press the Push-to-Start button until the engine turn OFF.

8

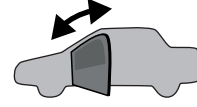

Close and open the driver door.

9

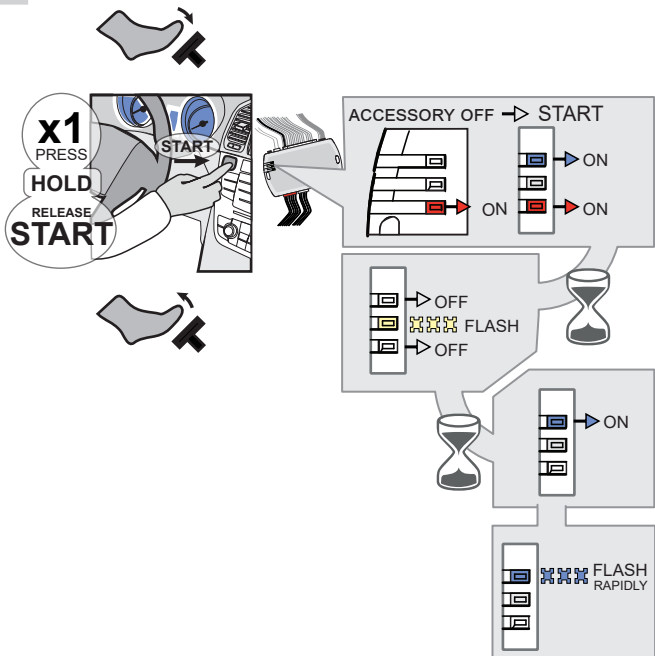


Press the foot-brake pedal.

Press the Push-to-Start button until the engine start.

Release the foot-brake pedal.

- ↳ The BLUE LED will turn ON.
- ↳ The BLUE LED will turn OFF. The RED LED will turn OFF.
- ↳ The YELLOW LED will flash rapidly
- ↳ The BLUE LED will turn ON.
- ↳ The BLUE LED will flash rapidly


10

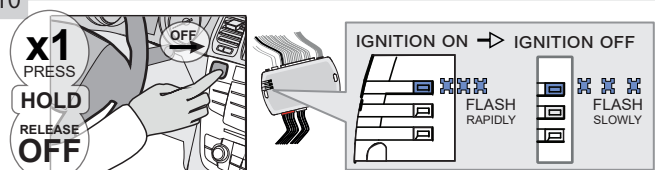

Press the Push-to-Start button until the engine turn OFF.


- ↳ The BLUE LED will flash slowly

11

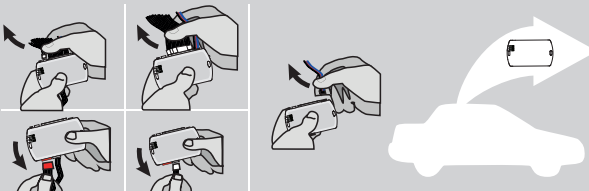

Disconnect all the connectors and after the Data-Link (4-pins) connector.

12


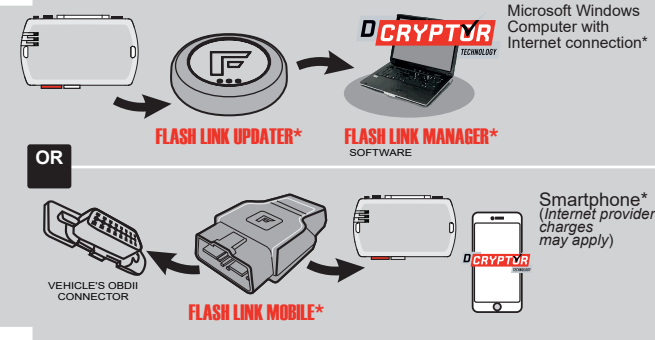


Use the tool: FLASH LINK UPDATER or FLASH LINK MOBILE to visit the DCRYPTOR menu.

***Parts required (not included)**

KEY BYPASS PROGRAMMING PROCEDURE 3/3

13

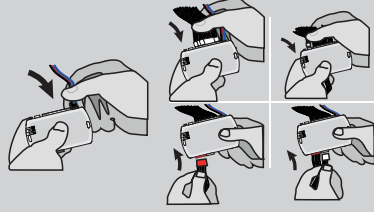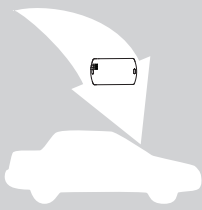

AFTER DCRYPTOR PROGRAMMING COMPLETED
Go back to the vehicle and **reconnect** the 4-Pin (Data-Link) connector and after, all the remaining connector.



The module is now programmed.




REMOTE STARTER / ALARM VERIFICATION PROCEDURE


Test the remote starter. Remote start the vehicle.

OPTIONAL RF-KIT PROGRAMMING


PROGRAM BYPASS OPTION

	<p>Program bypass option:</p>	<p>H2</p>	<p>Supported RF-KITS enable</p> <p>H2 Fortin 2</p>

OPTIONAL FORTIN RF KIT SERIES 4 OR SERIES 9 PROGRAMMING




The module must be programmed on the vehicle.



MAKE SURE THE IGNITION KEY HAS BEEN IN THE OFF POSITION FOR AT LEAST 5 SECONDS.

1

ON




ON

Press the foot-brake pedal. Press the Push-to-Start button until the engine start. Release the foot-brake pedal.

2

OFF

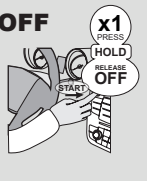


OFF

Press the Push-to-Start button until the engine turn OFF.

3

ON




ON

Press the foot-brake pedal. Press the Push-to-Start button until the engine start. Release the foot-brake pedal.

4

4X BRAKES




4X PRESS

Press and release the brake pedal four times.


5

ON EACH TRANSMITTER

4 BUTTONS

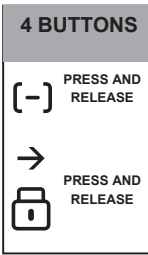


1 BUTTON

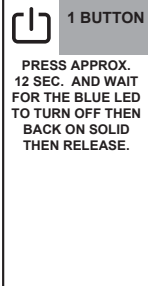

Press approx. 12 sec. and wait for the blue led to turn off then back on solid then release.


6

OFF

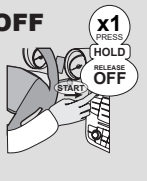


OFF


Press the Push-to-Start button until the engine turn OFF.

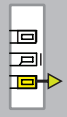


The YELLOW LED will turn ON solid.




The YELLOW LED will turn Off.

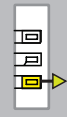


The YELLOW LED will turn ON solid.

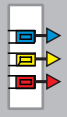


The 3 LED will turn ON solid.



The LED will flash rapidly.



The 3 LED will turn off.



REMOTE STARTER FUNCTIONALITY



All doors must be closed.



Remote start the vehicle.



Unlock the doors with either:

- The OEM remote
- The remote-starter remote
- Or the proximity remote



Enter the vehicle with the Intelligent Key.



The vehicle can now be put in to gear and driven.

If the vehicle is not unlocked with one of these conditions the remote-starter will shut down as soon as any door is opened.



STAND ALONE INSTALLATION AND THAR-GM6 INSTALLATION

ADDENDUM - SUGGESTED WIRING CONFIGURATION



ONLY COMPATIBLE WITH AUTOMATIC TRANSMISSION VEHICLES.



Vehicle functions supported in this diagram (functional if equipped)

VEHICLE	YEARS	Immobilizer bypass	Lock	Unlock	Arm	Disarm	Parking Light	Trunk (open)	RAP Disable	Tachometer	Door Status	Trunk Status	Hand-Brake Status	Foot-Brake Status	OEM Remote Monitoring
BUICK															
LaCrosse	Push-To-Start	2010	•	•	•	•	•	•	•	•	•	•	•	•	•

FIRMWARE VERSION

70.[41]

GM MINIMUM

To add the firmware version and the options, use the **FLASH LINK UPDATER** or **FLASH LINK MOBILE** tool, sold separately.

IF THE VEHICLE IS NOT EQUIPPED WITH FUNCTIONAL HOOD PIN:	A11	OFF	Hood trigger (Output Status).
--	------------	------------	-------------------------------

	UNIT OPTION	DESCRIPTION
<p>Program bypass option:</p>	C1	OEM Remote status (Lock/Unlock) monitoring
	D6	Push-to-Start

<p>ATTENTION!</p>	<p>DATE: XX-XX</p>	E5	OFF	<p>SPECIAL FUNCTIONS: BY DEFAULT DEACTIVATED</p>
		ON	<p>MANUFACTURED MODULES BETWEEN: 04/2018 TO 04/2019</p>	

MANDATORY INSTALL

*HOOD PIN



HOOD STATUS: THE HOOD PIN SWITCH MUST BE INSTALLED IF THE VEHICLE CAN BE REMOTE STARTED WITH THE HOOD OPEN, SET FUNCTION **A11** TO OFF.

A11	OFF
------------	------------

Notice: the installation of safety elements are mandatory. The hood pin is an essential security element and must be installed.

THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.

PARTS REQUIRED (NOT INCLUDED)


1x **FLASH LINK UPDATER**
 1x **FLASH LINK MANAGER**
 SOFTWARE
 1x Microsoft Windows Computer with Internet connection

OR


1x **FLASH LINK MOBILE**
 1x **FLASH LINK MOBILE APP**
 Smartphone *Android* or *iOS* with Internet connection (*provider charges may apply*).
 1x

MANDATORY

HOOD PIN



REMOTE START SAFETY OVERRIDE SWITCH

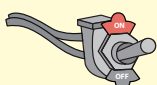
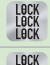





VALET SWITCH


Part #: RSPB available, Sold separately.

Notice: the installation of safety elements are mandatory. The hood pin and the valet switch are essential security elements and must be installed.


STAND ALONE CONFIGURATION

	Program bypass option	UNIT OPTION	DESCRIPTION
	OEM Remote Stand Alone Remote Starter:	D1.10 	By default, LOCK, LOCK, LOCK Par défaut, VERROUILLE,VERROUILLE,VERROUILLE
		D1.1 	
	Program bypass option with oem remote:	C1	OEM Remote Monitoring
	Program bypass option with RF KIT antenna:	H1 to H6	Supported RF Kits and select RF Kit


REMOTE STARTER FUNCTIONALITY



All doors must be closed.

3X 

Press the OEM remote's Lock button 3x to remote-start (or remote-stop) the vehicle.




The vehicle will START.

REMOTE STARTER DIAGNOSTICS
MODULE RED LED


x2 flash :	Brake ON
x3 flash :	No tach
x4 flash :	Ignition before start
x5 flash :	Hood Open

REMOTE STARTER WARNING CARD



CUT THIS WARNING CARD AND STICK IT ON A VISIBLE PLACE:
 or use the package RSPB, Sold separately.

WARNING



REMOTE STARTER

THE VEHICLE CAN BE STARTED BY EITHER: PRESSING THE LOCK BUTTON ON THE OEM REMOTE 3 TIMES CONSECUTIVELY OR BY A SMARTPHONE. **TURN ON** THE SAFETY SWITCH LOCATED UNDER THE DASHBOARD BEFORE WORKING ON THE VEHICLE.

DESCRIPTION

Parts required (Not included) PAGE







WIRE TO WIRE DIAGRAM

	1X 5 Amp Fuse 1X 1k Ohm Resistor	Page 4
--	-------------------------------------	--------






THARNESH DIAGRAM

THARNESH THAR-GM6	1x THAR-GM6	Page 5
-------------------	-------------	--------

BCM

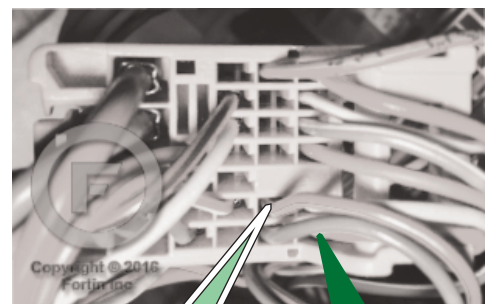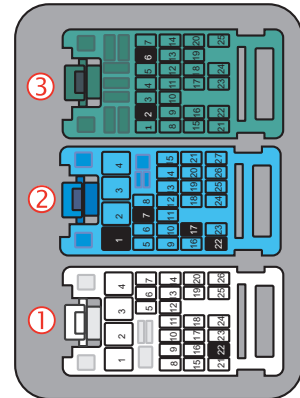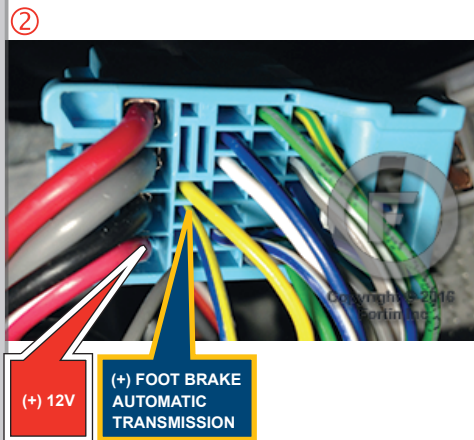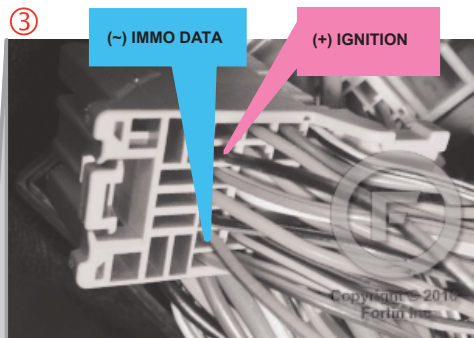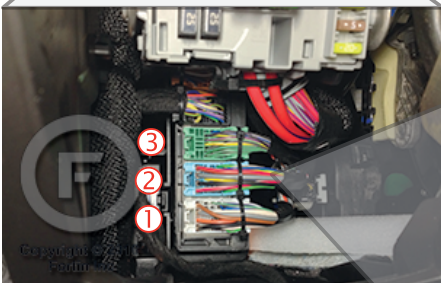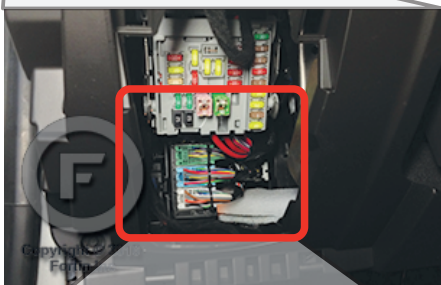

AUTOMATIC TRANSMISSION WIRING CONNECTION

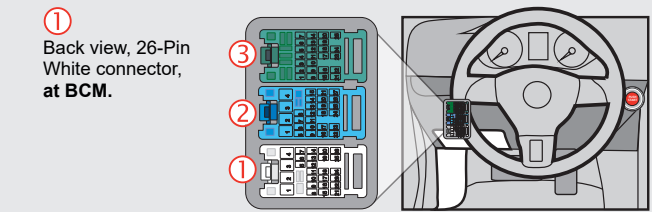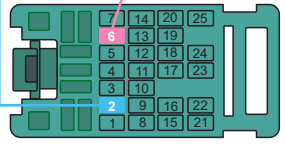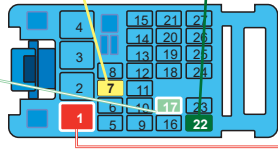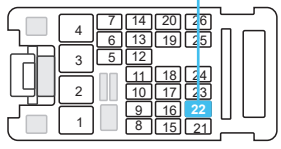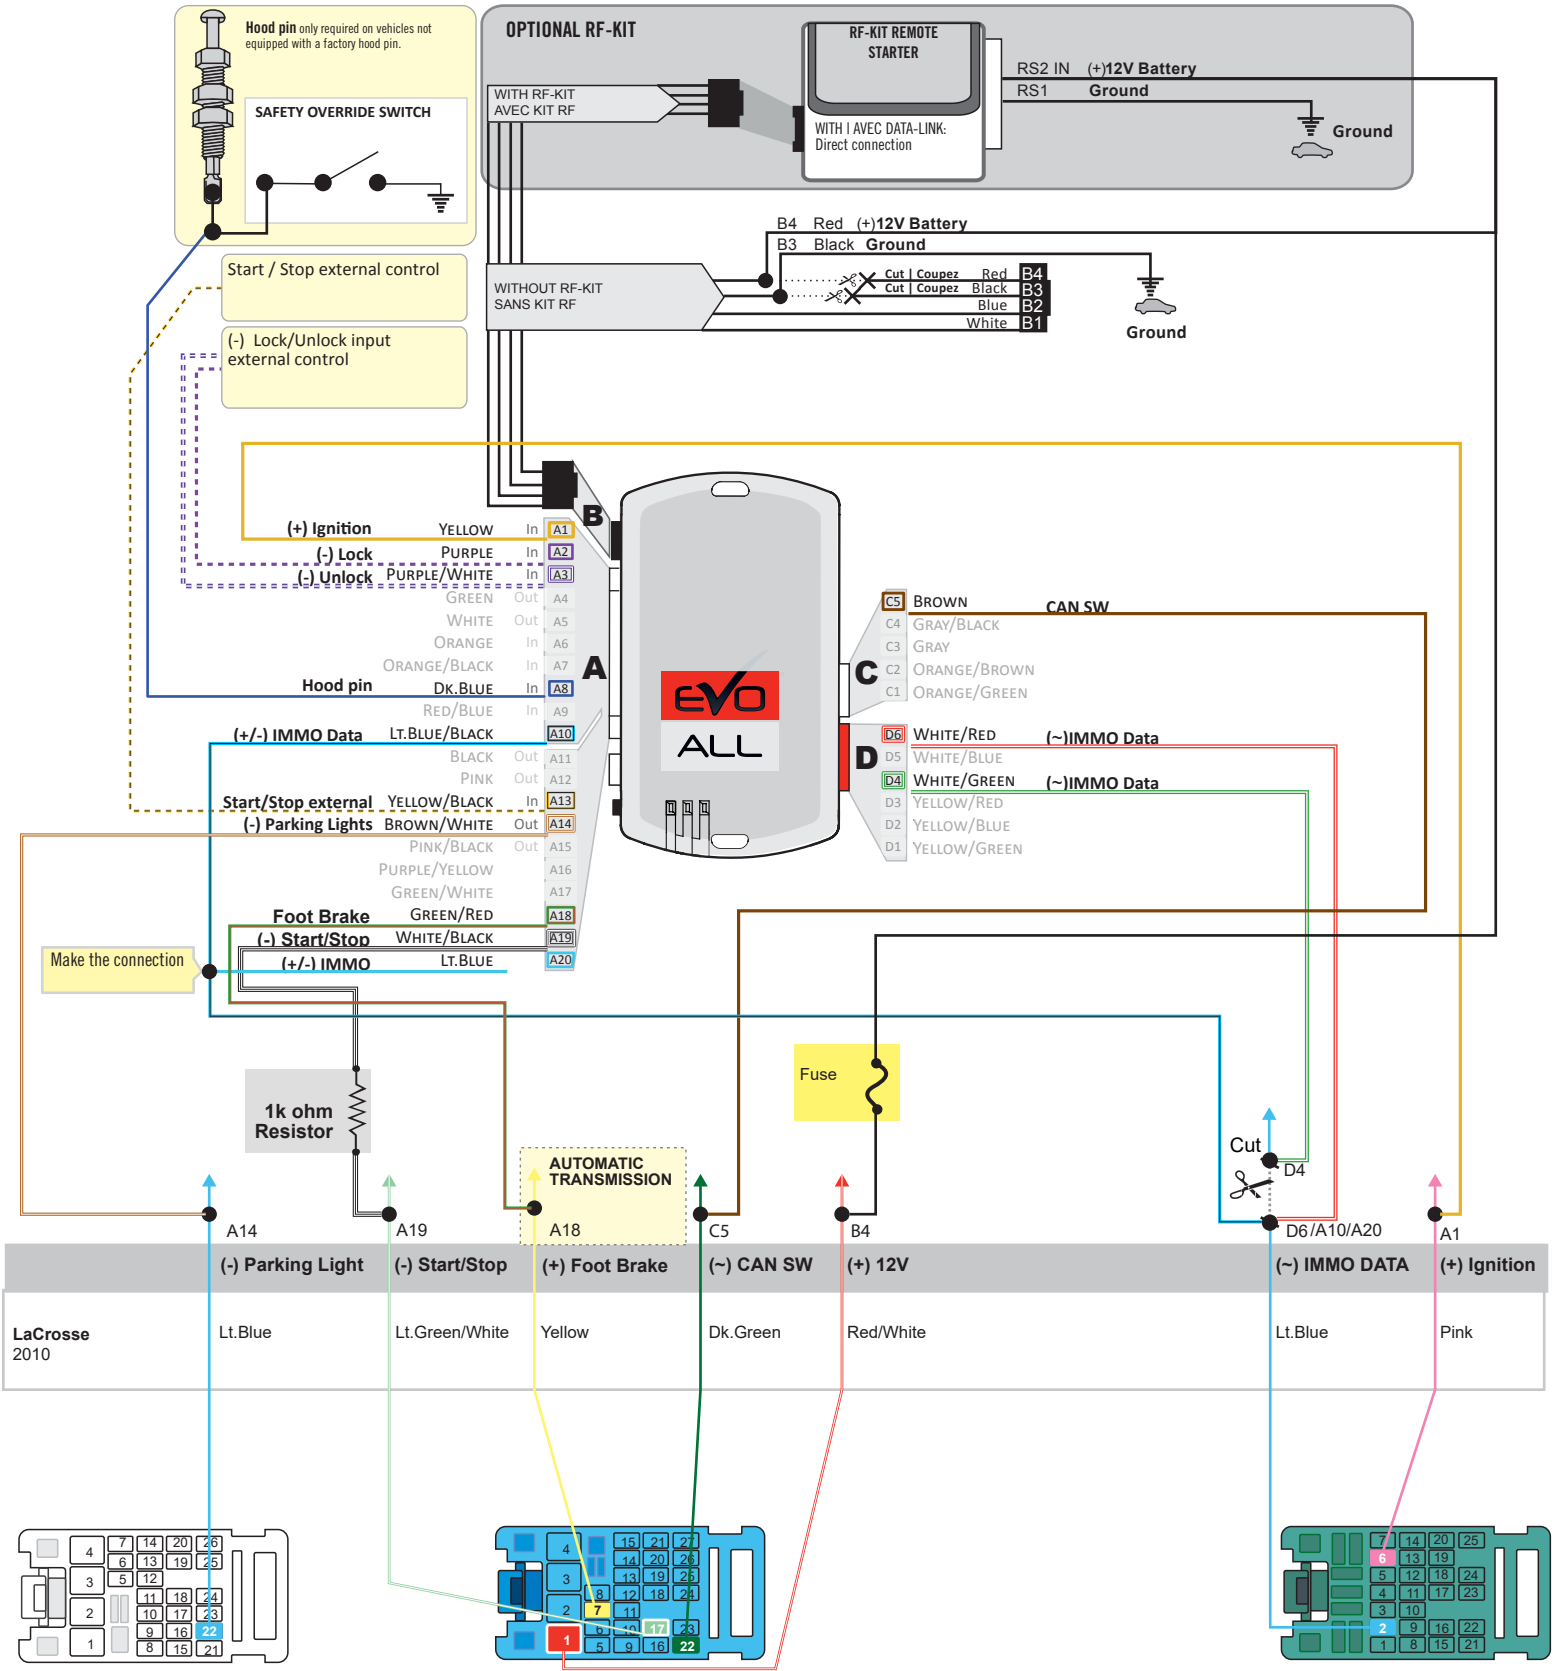


① Back view, 26-Pin White connector, at BCM.


② Back view, 27-Pin Blue connector, at BCM.

③ Back view, 25-Pin Green connector, at BCM.

THAR-GM6 | AUTOMATIC TRANSMISSION CONNECTION

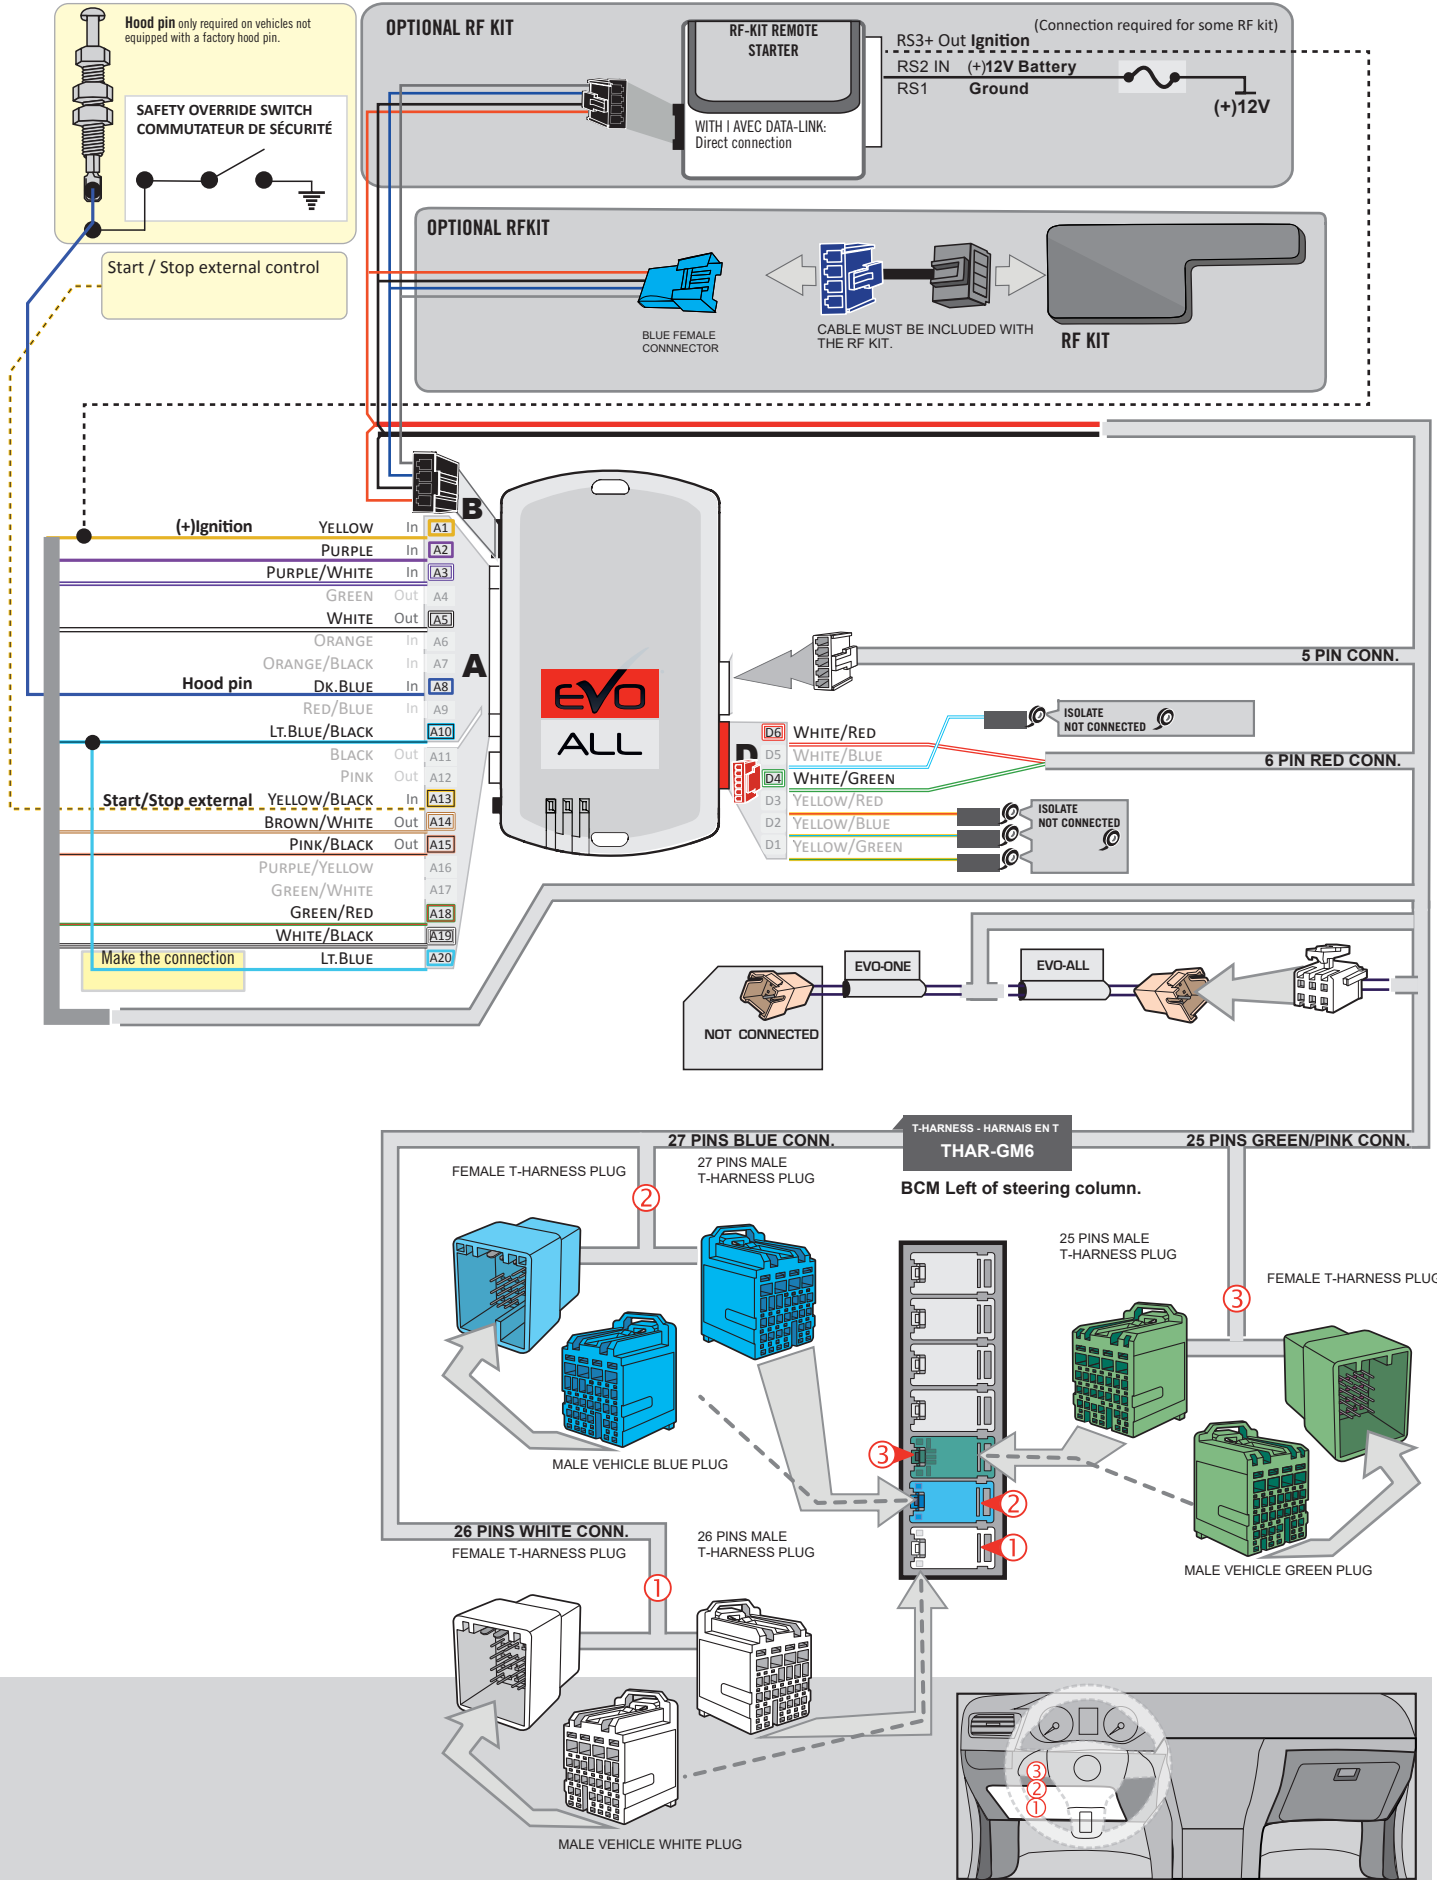

KEY BYPASS PROGRAMMING PROCEDURE 1/3

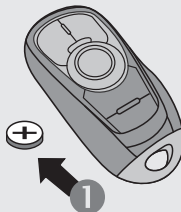


1 Remove the battery from the OEM remote.


2 Place the OEM remote into the transmitter pocket of the center console.

Refer to vehicle user guide for keyport location.

Retire

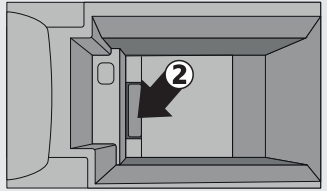


1

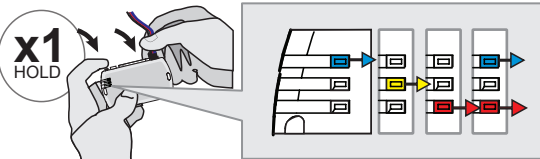

Press and hold the programming button:
Connect the 4-PIN Data-link harness (Black connector).


↳The Blue, Red, Yellow and Blue & Red LEDs will alternatively illuminate.

2

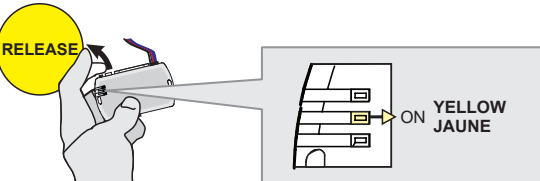


Release the programming button when the LED is YELLOW.

If the LED is not solid YELLOW disconnect the 4-Pin connector (Data-Link) and go back to step 1.

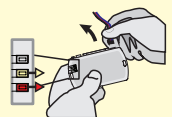


3

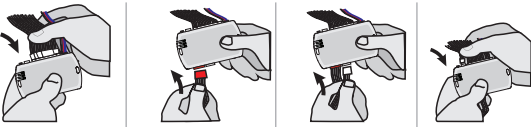

Insert the required remaining connectors.

4

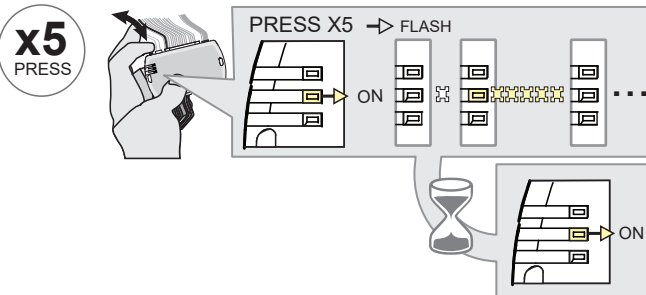


Press and release the programming button five (5x) times.

↳The YELLOW LED will flash 5 times each second.


↳WAIT for the YELLOW LED to turn ON solide.

5

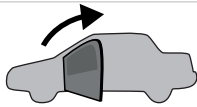

Open the driver door.

6

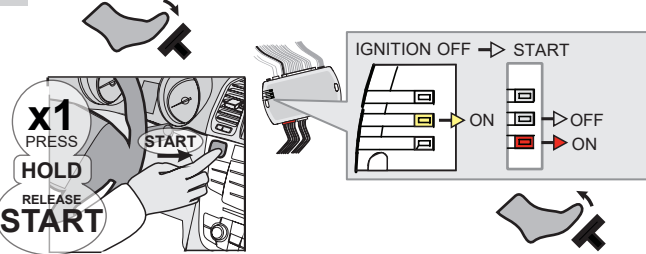

Press the foot-brake pedal.

Press the Push-to-Start button until the engine start.

Release the foot-brake pedal.

↳The RED LED will turn ON.
↳The YELLOW LED will turn OFF.


KEY BYPASS PROGRAMMING PROCEDURE 2/3

7





Press the Push-to-Start button until the engine turn OFF.

8

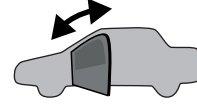

Close and open the driver door.

9

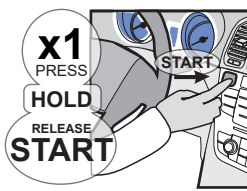
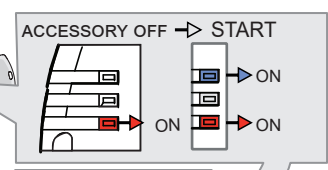
Press the foot-brake pedal.

Press the Push-to-Start button until the engine start.

Release the foot-brake pedal.

- ↳ The BLUE LED will turn ON.
- ↳ The BLUE LED will turn OFF. The RED LED will turn OFF.
- ↳ The YELLOW LED will flash rapidly
- ↳ The BLUE LED will turn ON.
- ↳ The BLUE LED will flash rapidly


10

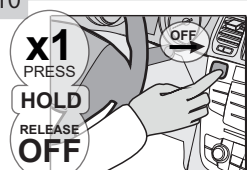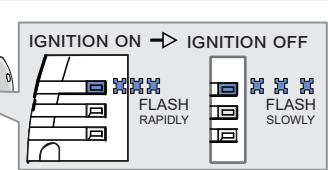Press the Push-to-Start button until the engine turn OFF.


- ↳ The BLUE LED will flash slowly

11

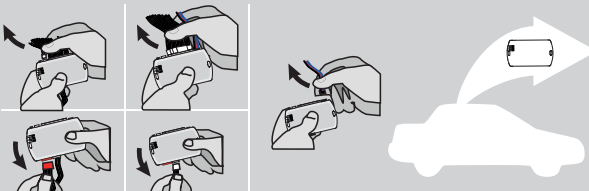

Disconnect all the connectors and after the Data-Link (4-pins) connector.

12

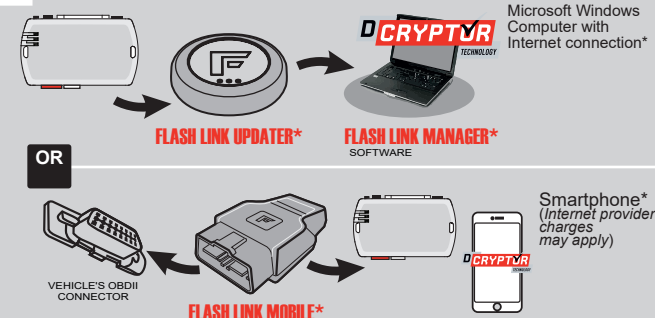

Microsoft Windows Computer with Internet connection*

FLASH LINK UPDATER* **FLASH LINK MANAGER*** SOFTWARE

OR

Smartphone* (Internet provider charges may apply)



FLASH LINK MOBILE*

Use the tool: FLASH LINK UPDATER or FLASH LINK MOBILE to visit the DCryptor menu.

*Parts required (not included)

KEY BYPASS PROGRAMMING PROCEDURE 3/3

13

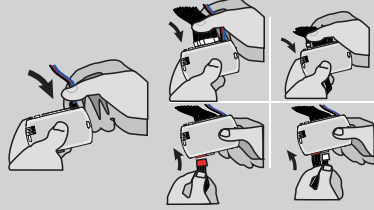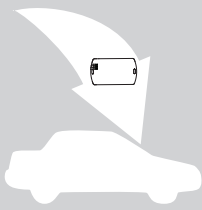

AFTER DCRYPTOR PROGRAMMING COMPLETED
Go back to the vehicle and **reconnect** the 4-Pin (Data-Link) connector and after, all the remaining connector.



The module is now programmed.



REMOTE STARTER / ALARM VERIFICATION PROCEDURE

Test the remote starter. Remote start the vehicle.

REMOTE STARTER FUNCTIONALITY



All doors must be closed.



Remote start the vehicle.



Unlock the doors with either:

- The OEM remote
- The remote-starter remote
- Or the proximity remote



Enter the vehicle with the Intelligent Key.



The vehicle can now be put in to gear and driven.

If the vehicle is not unlocked with one of these conditions the remote-starter will shut down as soon as any door is opened.



**STAND ALONE INSTALLATION AND THAR-GM6
INSTALLATION**

ADDENDUM - SUGGESTED WIRING CONFIGURATION



ONLY COMPATIBLE WITH AUTOMATIC TRANSMISSION VEHICLES.



VEHICLE

YEARS

Vehicle functions supported in this diagram (functional if equipped)

VEHICLE	YEARS	Immobilizer bypass	Lock	Unlock	Arm	Disarm	Parking Light	Trunk (open)	RAP Disable	Tachometer	Door Status	Trunk Status	Hand-Brake Status	Foot-Brake Status	OEM Remote Monitoring
BUICK															
LaCrosse	Push-To-Start	2011-2013	•	•	•	•	•	•	•	•	•	•	•	•	•



FIRMWARE VERSION

70.[41]

GM MINIMUM

To add the firmware version and the options, use the **FLASH LINK UPDATER** or **FLASH LINK MOBILE** tool, sold separately.

IF THE VEHICLE IS NOT EQUIPPED WITH FUNCTIONAL HOOD PIN:

A11

OFF

Hood trigger (Output Status).



Program bypass option:

UNIT OPTION

DESCRIPTION

C1


OEM Remote status (Lock/Unlock) monitoring

D6

Push-to-Start



ATTENTION!

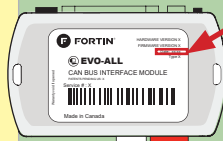

DATE: XX-XX

E5

OFF

SPECIAL FUNCTIONS: BY DEFAULT DEACTIVATED

ON

MANUFACTURED MODULES BETWEEN: 04/2018 TO 04/2019

MANDATORY INSTALL

*HOOD PIN



HOOD STATUS: THE HOOD PIN SWITCH MUST BE INSTALLED IF THE VEHICLE CAN BE REMOTE STARTED WITH THE HOOD OPEN, SET FUNCTION **A11** TO OFF.

A11

OFF

Notice: the installation of safety elements are mandatory. The hood pin is an essential security element and must be installed.

THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.

PARTS REQUIRED (NOT INCLUDED)


1x **FLASH LINK UPDATER**
 1x **FLASH LINK MANAGER**
 SOFTWARE
 1x Microsoft Windows Computer with Internet connection

OR


1x **FLASH LINK MOBILE**
 1x **FLASH LINK MOBILE APP**
 Smartphone *Android* or *iOS* with Internet connection (*provider charges may apply*).
 1x

MANDATORY

HOOD PIN



REMOTE START SAFETY OVERRIDE SWITCH

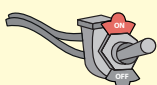
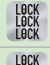





VALET SWITCH


Part #: RSPB available, Sold separately.

Notice: the installation of safety elements are mandatory. The hood pin and the valet switch are essential security elements and must be installed.


STAND ALONE CONFIGURATION

	Program bypass option	UNIT OPTION	DESCRIPTION
	OEM Remote Stand Alone Remote Starter:	D1.10 	By default, LOCK, LOCK, LOCK Par défaut, VERROUILLE,VERROUILLE,VERROUILLE
		D1.1 	
	Program bypass option with oem remote:	C1	OEM Remote Monitoring
	Program bypass option with RF KIT antenna:	H1 to H6	Supported RF Kits and select RF Kit


REMOTE STARTER FUNCTIONALITY




All doors must be closed.

3X 

Press the OEM remote's Lock button 3x to remote-start (or remote-stop) the vehicle.




START 

The vehicle will START.

REMOTE STARTER DIAGNOSTICS
MODULE RED LED


x2 flash :	Brake ON
x3 flash :	No tach
x4 flash :	Ignition before start
x5 flash :	Hood Open

REMOTE STARTER WARNING CARD



CUT THIS WARNING CARD AND STICK IT ON A VISIBLE PLACE:
 or use the package **RSPB**, Sold separately.

WARNING



REMOTE STARTER

THE VEHICLE CAN BE STARTED BY EITHER: PRESSING THE LOCK BUTTON ON THE OEM REMOTE 3 TIMES CONSECUTIVELY OR BY A SMARTPHONE. **TURN ON** THE SAFETY SWITCH LOCATED UNDER THE DASHBOARD BEFORE WORKING ON THE VEHICLE.

DESCRIPTION

	Parts required (Not included)	PAGE
--	-------------------------------	------


WIRE TO WIRE DIAGRAM

	1X 5 Amp Fuse 1X 1k Ohm Resistor	Page 4
--	-------------------------------------	--------





THARNESSE DIAGRAM

THARNESSE THAR-GM6	1x THAR-GM6	Page 5
--------------------	-------------	--------


BCM

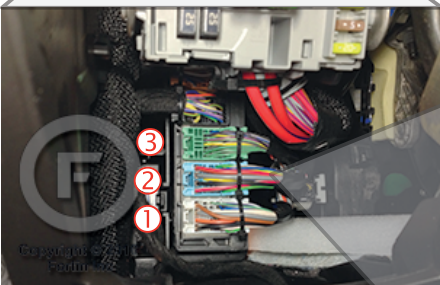


LaCrosse
2011-2013

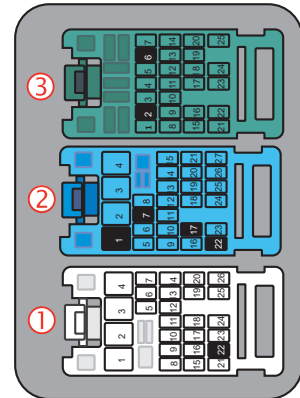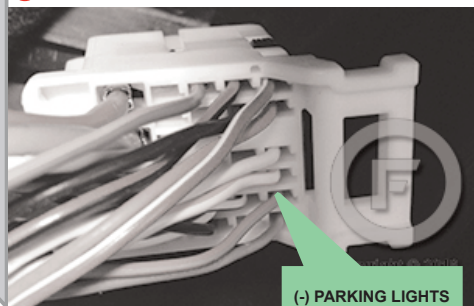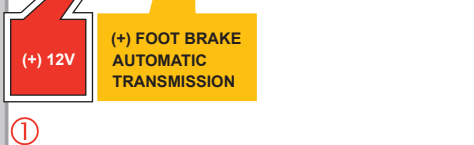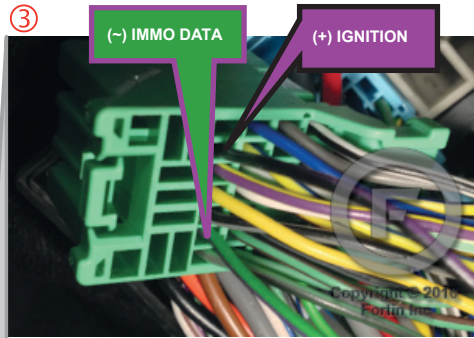


AUTOMATIC TRANSMISSION WIRING CONNECTION

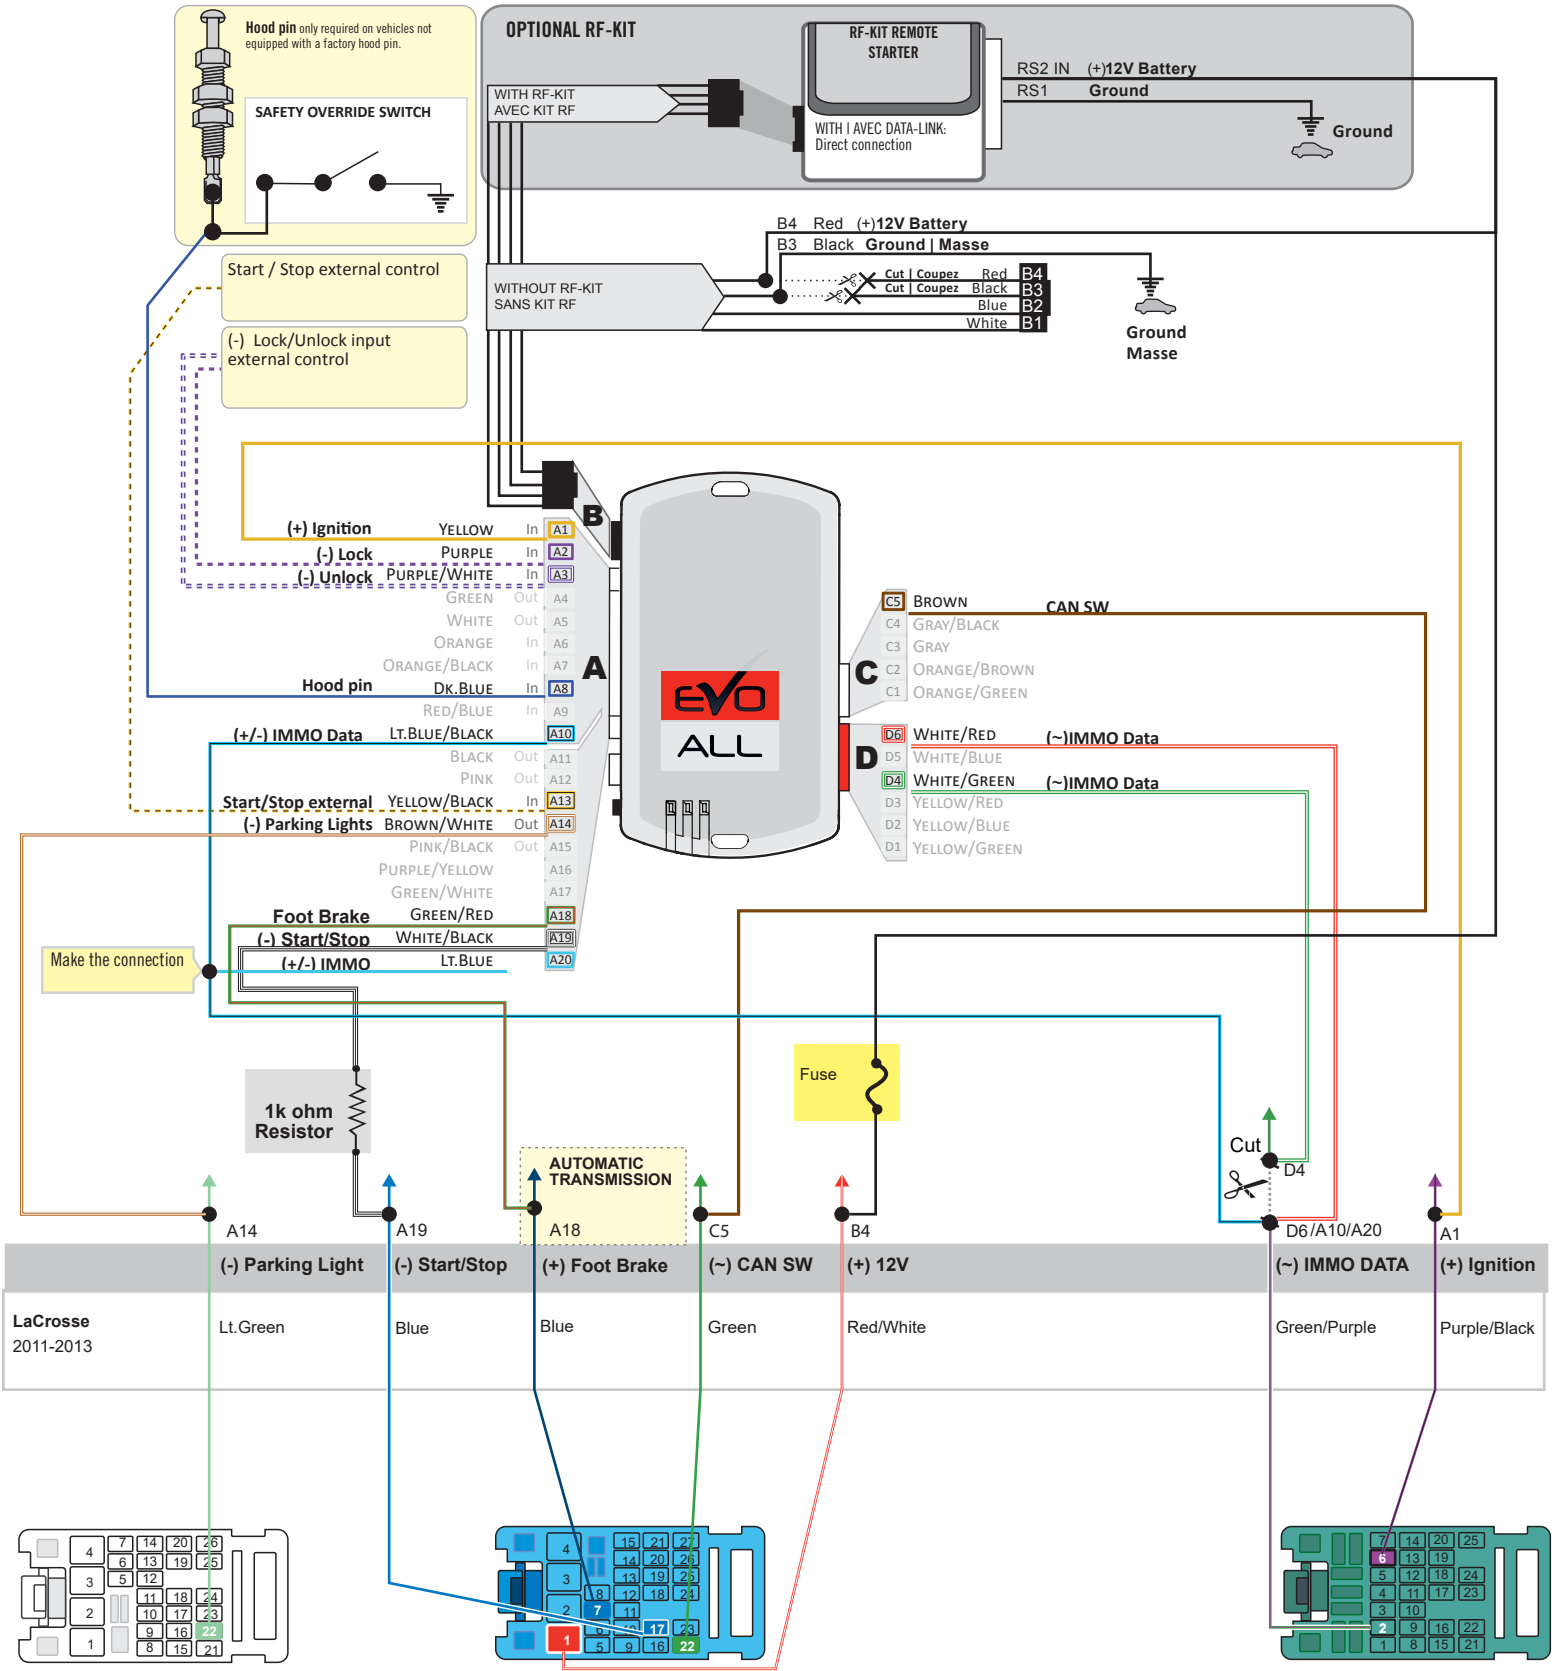


① Back view, 26-Pin White connector, at BCM.

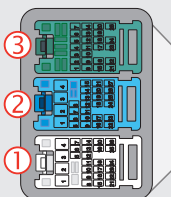


② Back view, 27-Pin Blue connector, at BCM.

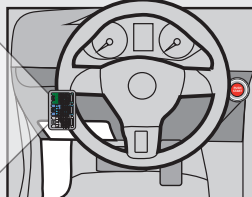


③ Back view, 25-Pin Green connector, at BCM.

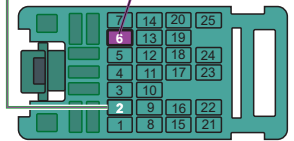

THAR-GM6 | AUTOMATIC TRANSMISSION CONNECTION

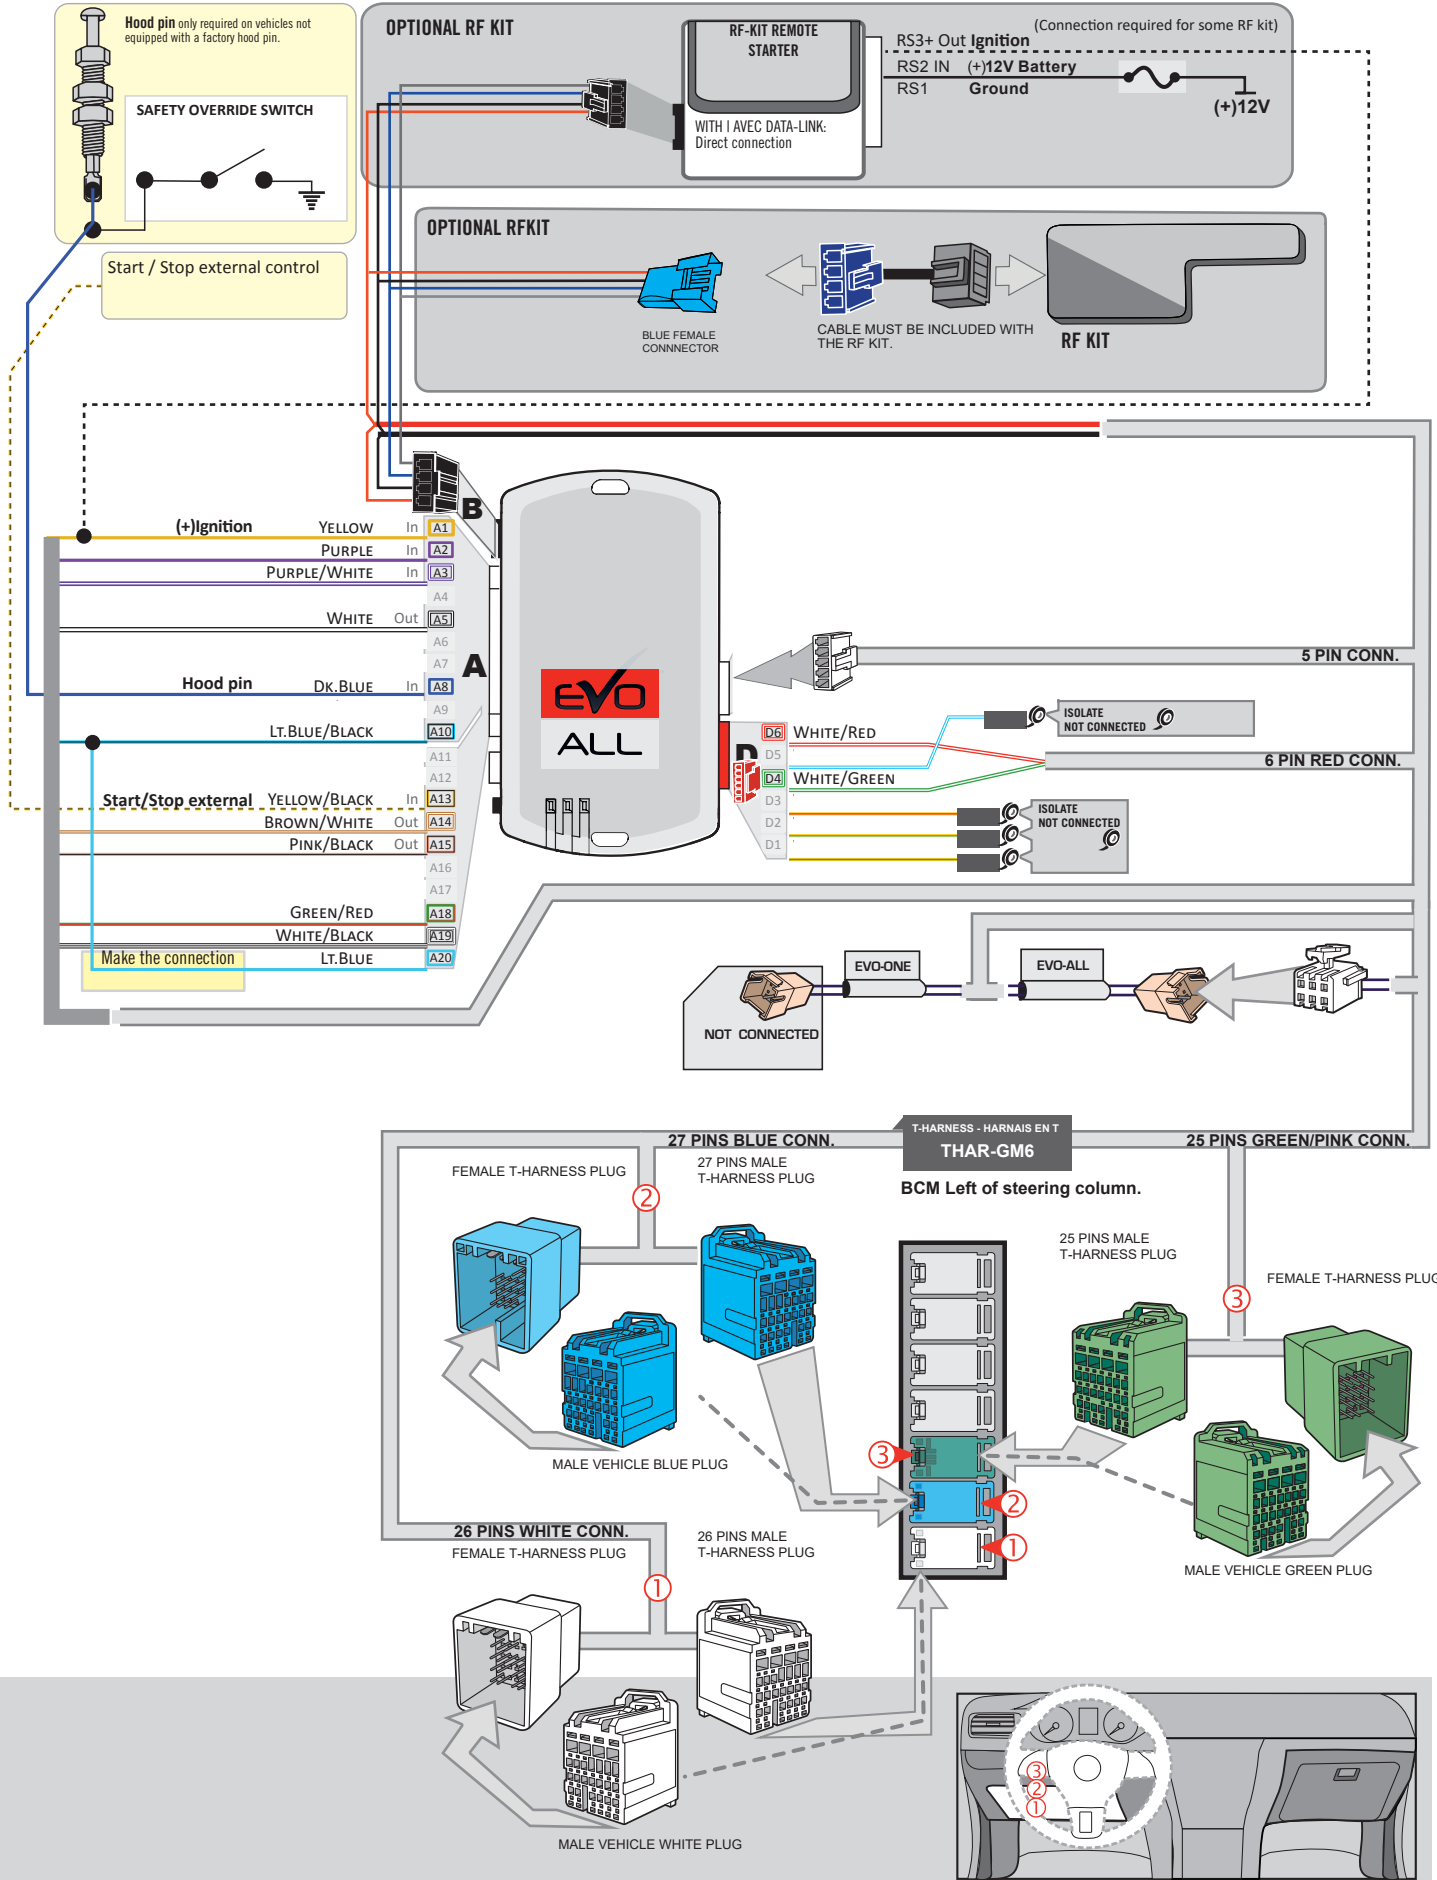


KEY BYPASS PROGRAMMING PROCEDURE 1/3

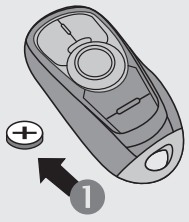

1 Remove the battery from the OEM remote.


2 Place the OEM remote into the transmitter pocket of the center console.

Refer to vehicle user guide for keyport location.

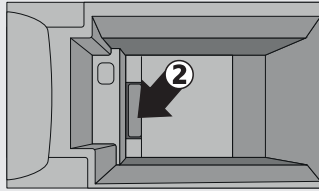

1

x1 HOLD

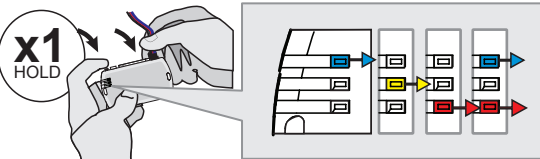


Press and hold the programming button:
Connect the 4-PIN Data-link harness (Black connector).

↳The Blue, Red, Yellow and Blue & Red LEDs will alternatively illuminate.


2

RELEASE

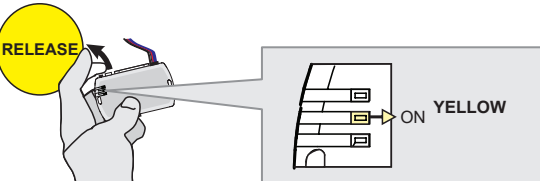


Release the programming button when the LED is **YELLOW**.

If the LED is not solid YELLOW disconnect the 4-Pin connector (Data-Link) and go back to step 1.

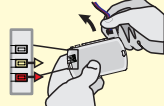

3

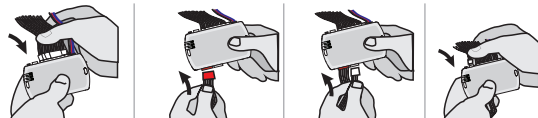


Insert the required remaining connectors.

4

x5 PRESS

PRESS X5 → FLASH

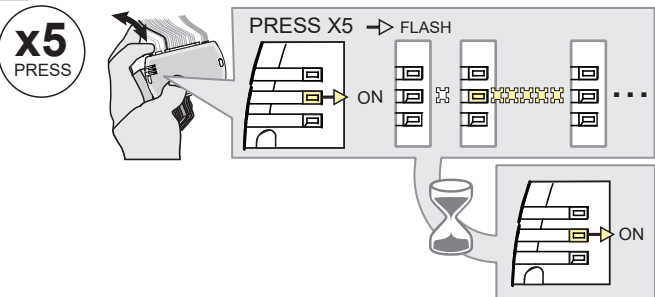


Press and release the programming button five (5x) times.

↳The **YELLOW LED** will flash 5 times each second.

↳**WAIT** for the **YELLOW LED** to turn ON solide.

5




Open the driver door.

6

x1 PRESS HOLD START

RELEASE START

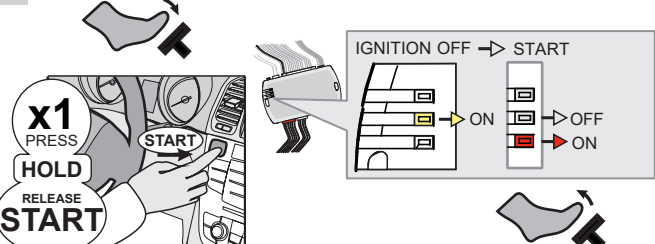

Press the foot-brake pedal.

Press the Push-to-Start button until the engine start.

Release the foot-brake pedal.

↳The **RED LED** will turn ON.
 ↳The **YELLOW LED** will turn OFF.


KEY BYPASS PROGRAMMING PROCEDURE 2/3

7




Press the Push-to-Start button until the engine turn OFF.

8

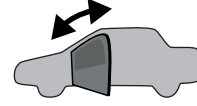

Close and open the driver door.

9

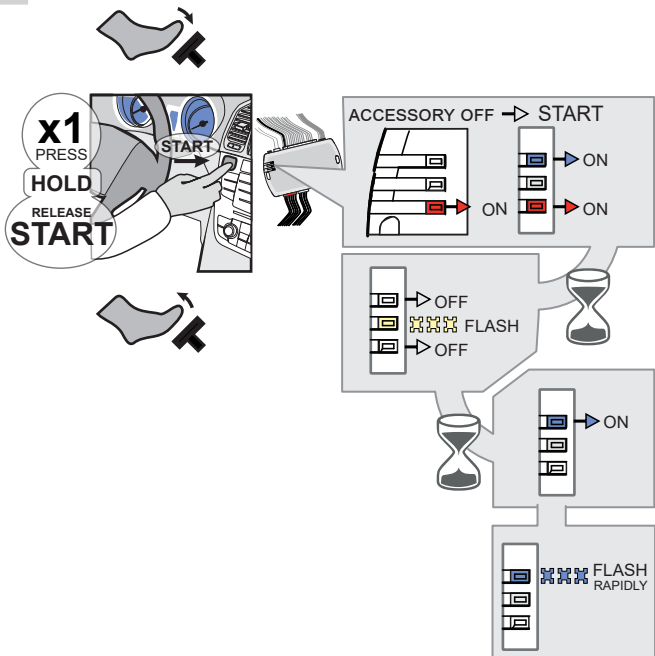


Press the foot-brake pedal.

Press the Push-to-Start button until the engine start.

Release the foot-brake pedal.

- ↳ The BLUE LED will turn ON.
- ↳ The BLUE LED will turn OFF. The RED LED will turn OFF.
- ↳ The YELLOW LED will flash rapidly
- ↳ The BLUE LED will turn ON.
- ↳ The BLUE LED will flash rapidly

10

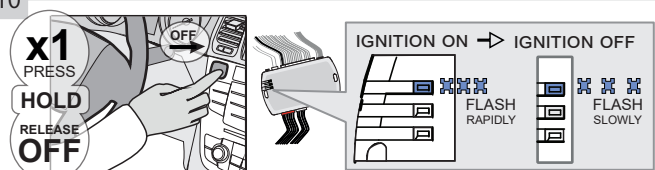

Press the Push-to-Start button until the engine turn OFF.


- ↳ The BLUE LED will flash slowly

11



Disconnect all the connectors and after the Data-Link (4-pins) connector.

12


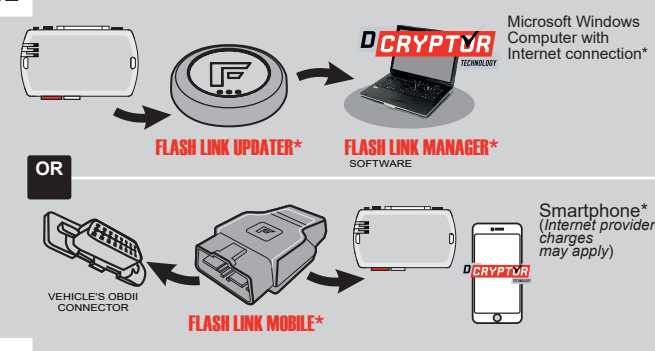


Use the tool: FLASH LINK UPDATER or FLASH LINK MOBILE to visit the DCryptor menu.

***Parts required (not included)**

KEY BYPASS PROGRAMMING PROCEDURE 3/3

13

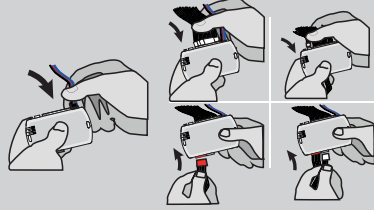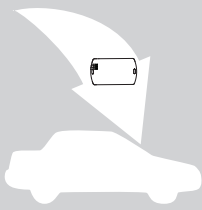

AFTER DCRYPTOR PROGRAMMING COMPLETED
Go back to the vehicle and **reconnect** the 4-Pin (Data-Link) connector and after, all the remaining connector.



The module is now programmed.



REMOTE STARTER / ALARM VERIFICATION PROCEDURE

Test the remote starter. Remote start the vehicle.

REMOTE STARTER FUNCTIONALITY



All doors must be closed.



Remote start the vehicle.




Unlock the doors with either:

- The OEM remote
- The remote-starter remote
- Or the proximity remote



Enter the vehicle with the Intelligent Key.

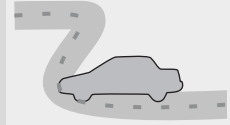

The vehicle can now be put in to gear and driven.

If the vehicle is not unlocked with one of these conditions the remote-starter will shut down as soon as any door is opened.



STAND ALONE INSTALLATION AND THAR-GM6

ADDENDUM - SUGGESTED WIRING CONFIGURATION



ONLY COMPATIBLE WITH AUTOMATIC TRANSMISSION VEHICLES.



VEHICLE

YEARS

Vehicle functions supported in this diagram (functional if equipped)

BUICK

LaCrosse

Push-To-Start

2014

Immobilizer bypass

Lock

Unlock

Arm

Disarm

Parking Light

Trunk (open)

RAP Disable

Tachometer

Door Status

Trunk Status

Hand-Brake Status

Foot-Brake Status

OEM Remote Monitoring

•

•

•

•

•

•

•

•

•

•

•

•

•

•



FIRMWARE VERSION

70.[41]

GM MINIMUM

To add the firmware version and the options use the **FLASH LINK UPDATER** or **FLASH LINK MOBILE** tool, sold separately.

IF THE VEHICLE IS NOT EQUIPPED WITH FUNCTIONAL HOOD PIN:

A11

OFF

Hood trigger (Output Status).



Program bypass option:

UNIT OPTION

DESCRIPTION

C1


OEM Remote status (Lock/Unlock) monitoring

D6

Push-to-Start



ATTENTION!

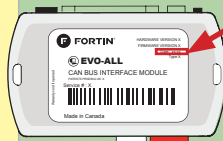

DATE: XX-XX

E5

OFF

SPECIAL FUNCTIONS: BY DEFAULT DEACTIVATED

ON

MANUFACTURED MODULES BETWEEN: 04/2018 TO 04/2019

MANDATORY INSTALL

*HOOD PIN



HOOD STATUS: THE HOOD PIN SWITCH MUST BE INSTALLED IF THE VEHICLE CAN BE REMOTE STARTED WITH THE HOOD OPEN, SET FUNCTION **A11** TO OFF.

A11

OFF

Notice: the installation of safety elements are mandatory. The hood pin is an essential security element and must be installed.

THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.

PARTS REQUIRED (NOT INCLUDED)


1x **FLASH LINK UPDATER**
 1x **FLASH LINK MANAGER**
 SOFTWARE | PROGRAMME
 1x Microsoft Windows Computer with Internet connection

OR


1x **FLASH LINK MOBILE**
 1x **FLASH LINK MOBILE APP**
 Smartphone *Android* or *iOS* with Internet connection (*provider charges may apply*).
 1x

MANDATORY

HOOD PIN



REMOTE START SAFETY OVERRIDE SWITCH

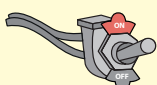
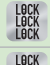





VALET SWITCH


Part #: RSPB available, Sold separately.

Notice: the installation of safety elements are mandatory. The hood pin and the valet switch are essential security elements and must be installed.


STAND ALONE CONFIGURATION

	Program bypass option	UNIT OPTION	DESCRIPTION
	OEM Remote Stand Alone Remote Starter:	D1.10 	By default, LOCK, LOCK, LOCK Par défaut, VERROUILLE,VERROUILLE,VERROUILLE
		D1.1 	
	Program bypass option with oem remote:	C1	OEM Remote Monitoring
	Program bypass option with RF KIT antenna:	H1 to H6	Supported RF Kits and select RF Kit


REMOTE STARTER FUNCTIONALITY




All doors must be closed.

3X 

Press the OEM remote's Lock button 3x to remote-start (or remote-stop) the vehicle.



START 

The vehicle will START.

REMOTE STARTER DIAGNOSTICS
MODULE RED LED


x2 flash :	Brake ON
x3 flash :	No tach
x4 flash :	Ignition before start
x5 flash :	Hood Open

REMOTE STARTER WARNING CARD



CUT THIS WARNING CARD AND STICK IT ON A VISIBLE PLACE:
 or use the package **RSPB**, Sold separately.

WARNING



REMOTE STARTER

THE VEHICLE CAN BE STARTED BY EITHER: PRESSING THE LOCK BUTTON ON THE OEM REMOTE 3 TIMES CONSECUTIVELY OR BY A SMARTPHONE. **TURN ON** THE SAFETY SWITCH LOCATED UNDER THE DASHBOARD BEFORE WORKING ON THE VEHICLE.

DESCRIPTION

Parts required (Not included) PAGE







WIRE TO WIRE DIAGRAM

	1X 5 Amp Fuse 1X 1k Ohm Resistor	Page 4
--	-------------------------------------	--------


THARNESSE DIAGRAM

THARNESSE THAR-GM6	1x THAR-GM6	Page 5
--------------------	-------------	--------


BCM

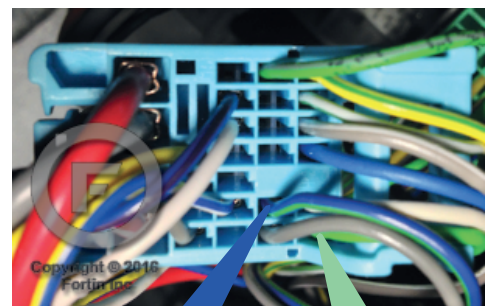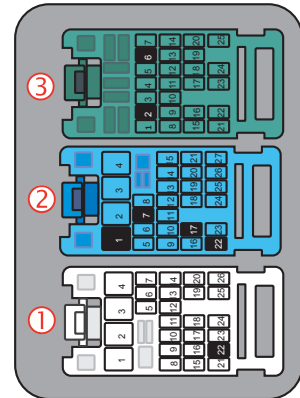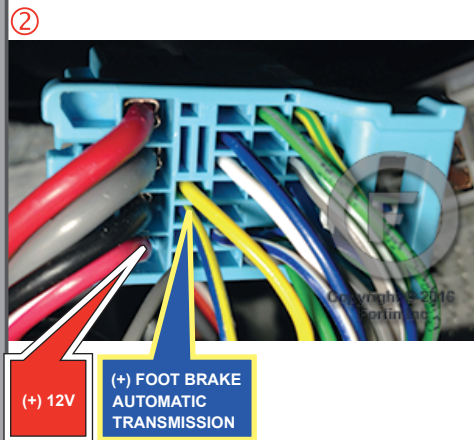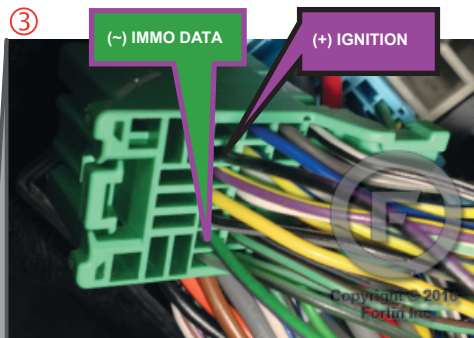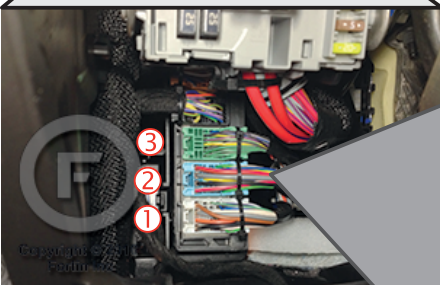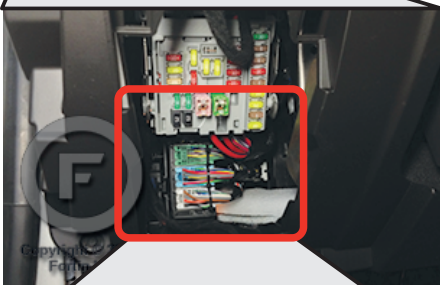

AUTOMATIC TRANSMISSION WIRING CONNECTION

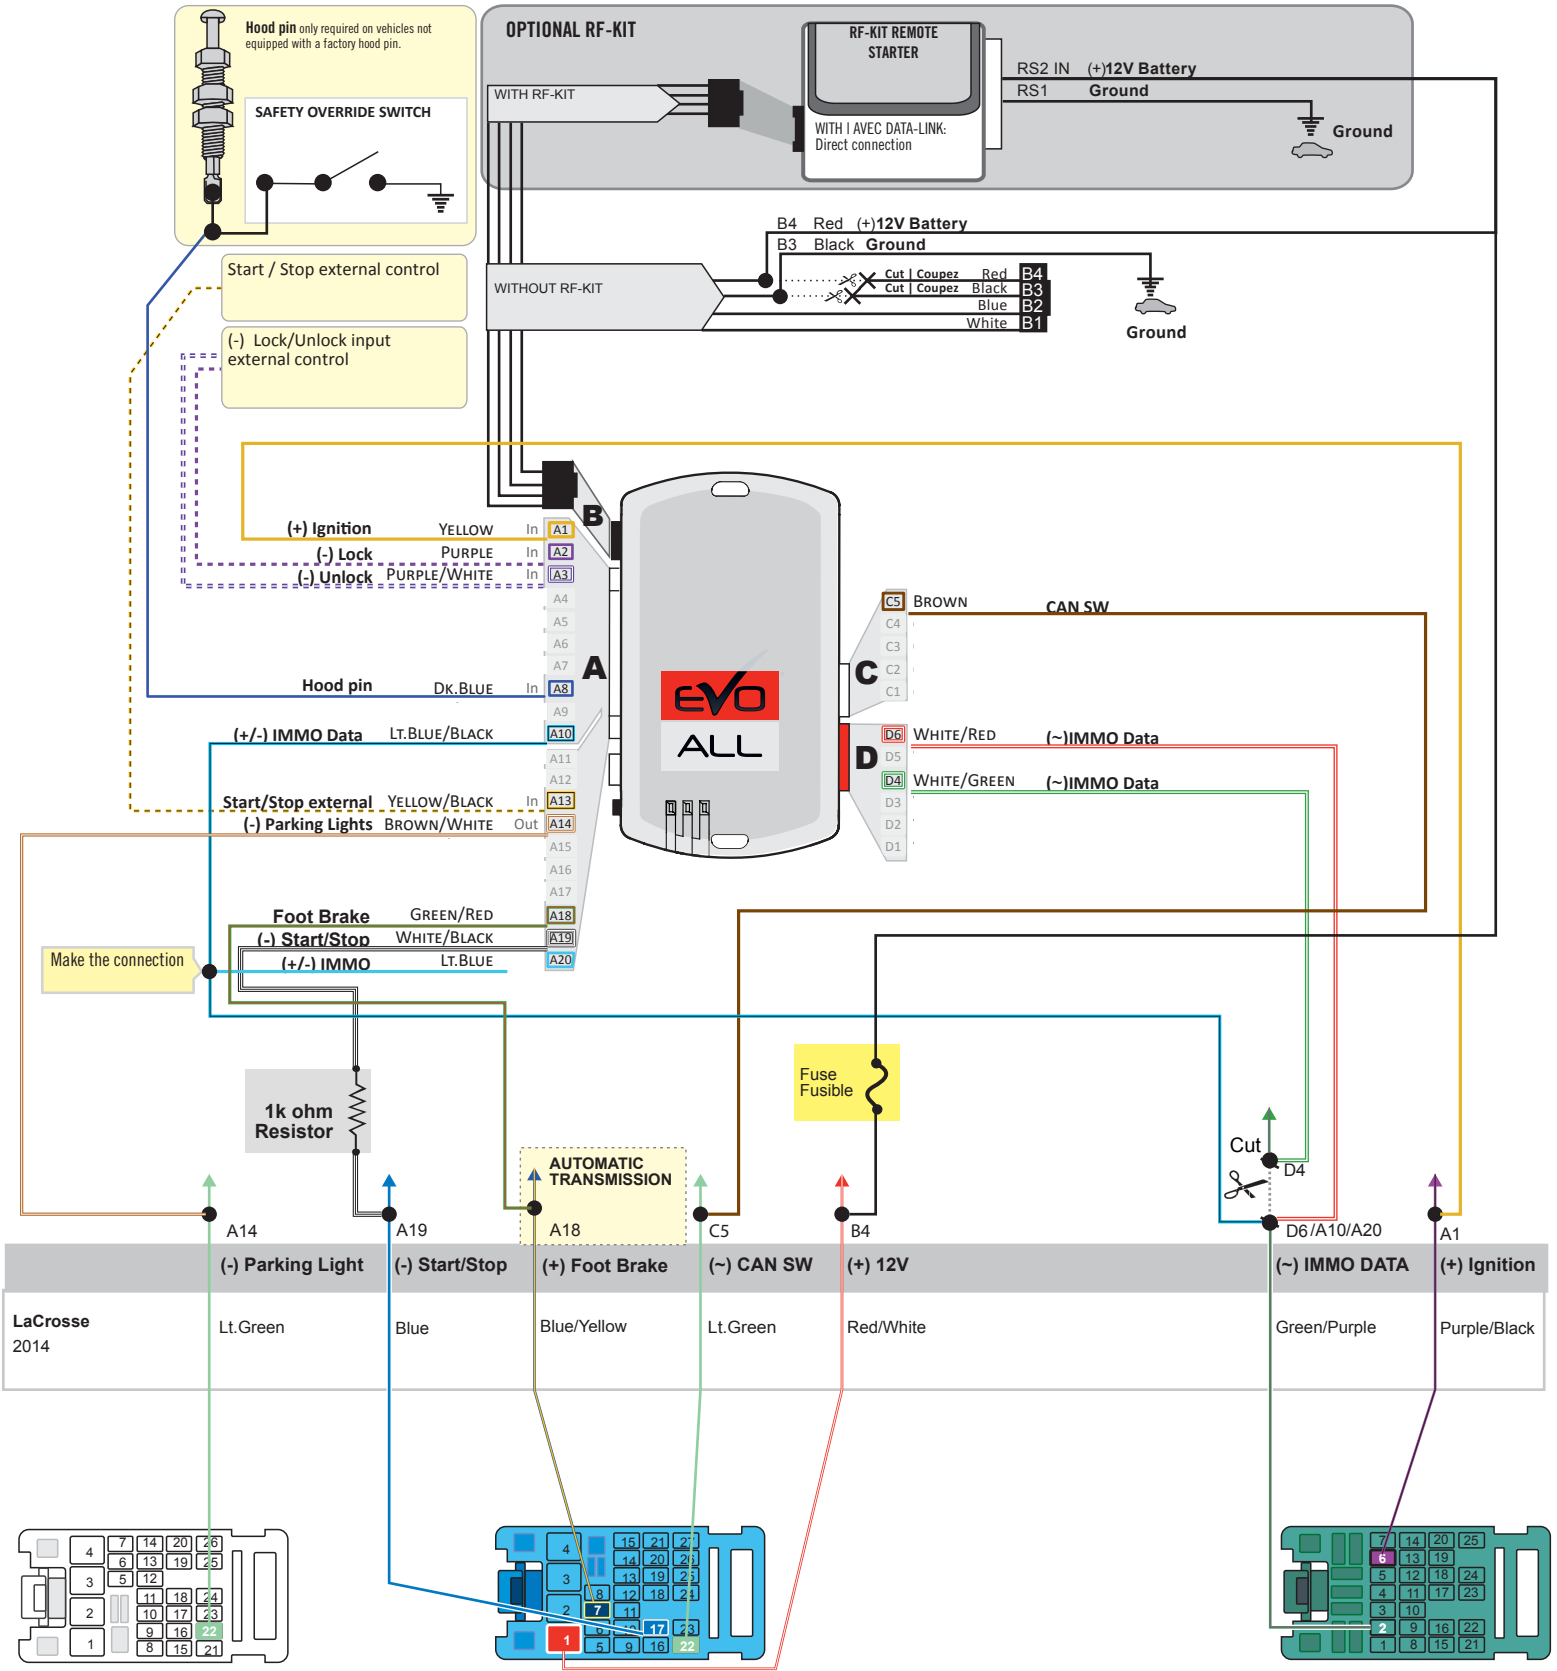


① Back view, 26-Pin White connector, at BCM.

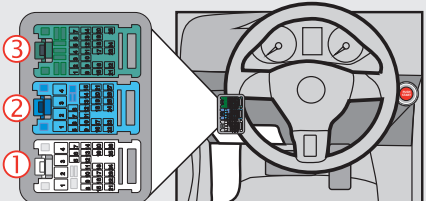


② Back view, 27-Pin Blue connector, at BCM.

③ Back view, 25-Pin Green connector, at BCM.

THAR-GM6 | AUTOMATIC TRANSMISSION CONNECTION

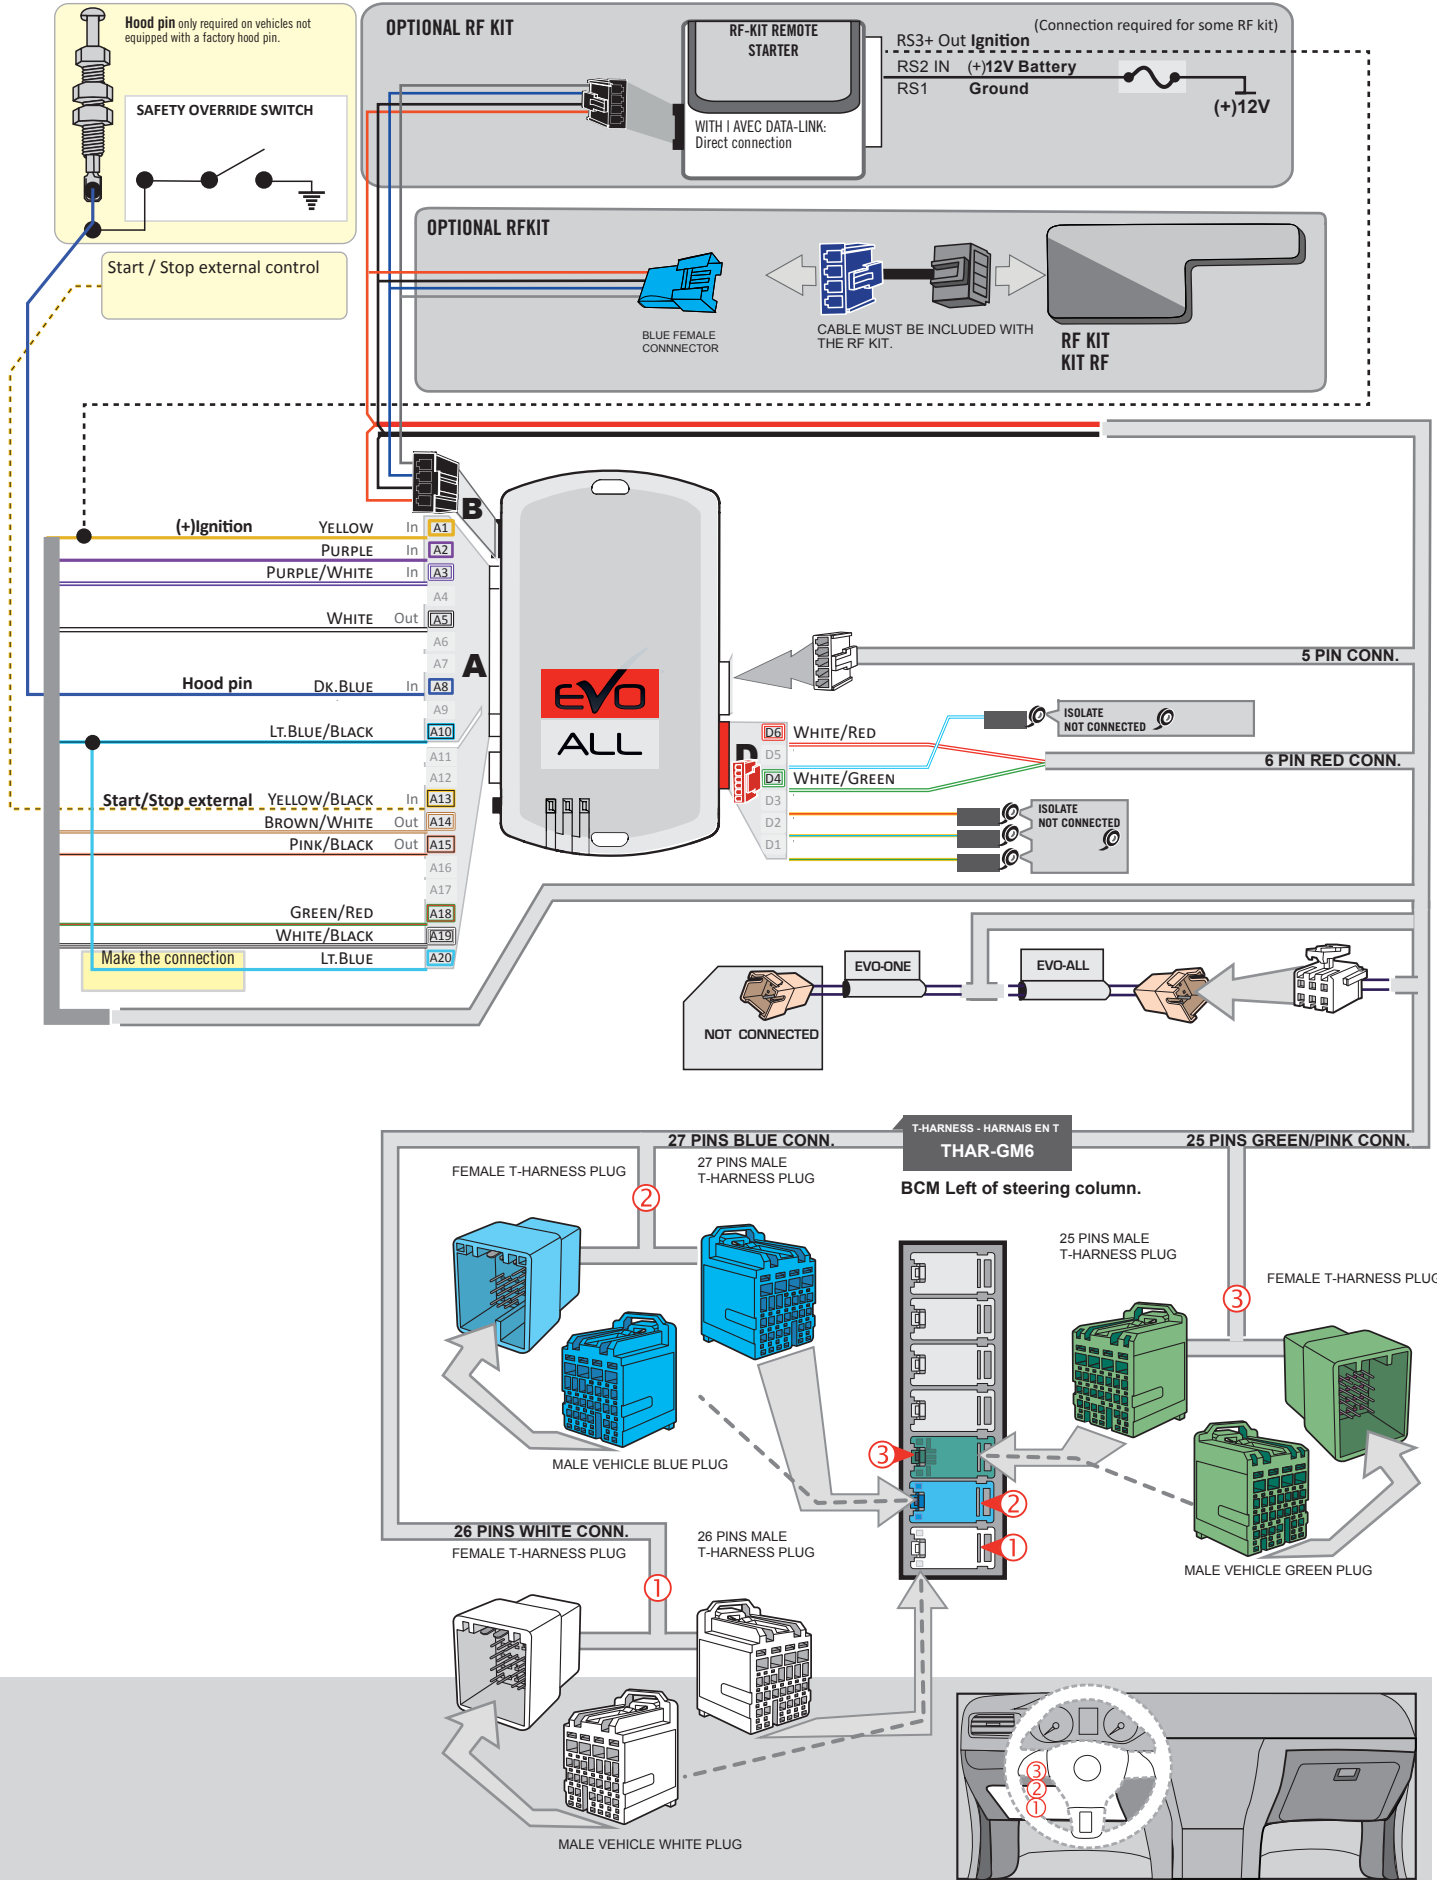


KEY BYPASS PROGRAMMING PROCEDURE 1/3

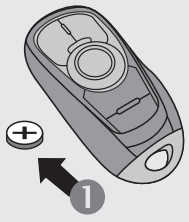

1 Remove the battery from the OEM remote.


2 Place the OEM remote into the transmitter pocket of the center console.

Refer to vehicle user guide for keyport location.

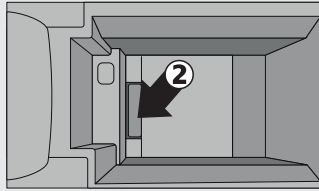

1

x1 HOLD

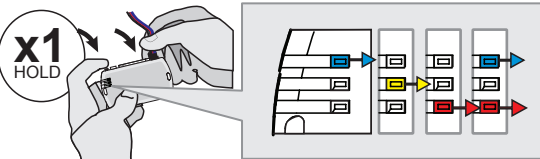


Press and hold the programming button:
Connect the 4-PIN Data-link harness (Black connector).

↳The Blue, Red, Yellow and Blue & Red LEDs will alternatively illuminate.


2

RELEASE

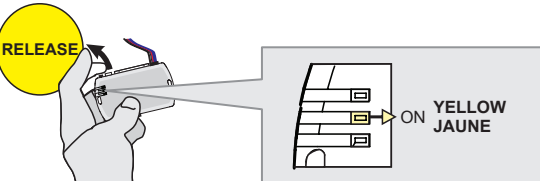


Release the programming button when the LED is YELLOW.

 If the LED is not solid YELLOW disconnect the 4-Pin connector (Data-Link) and go back to step 1.



3

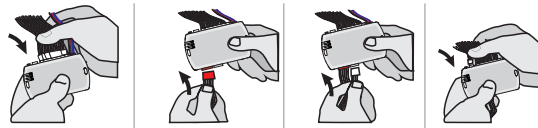


Insert the required remaining connectors.

4

x5 PRESS

PRESS X5 → FLASH

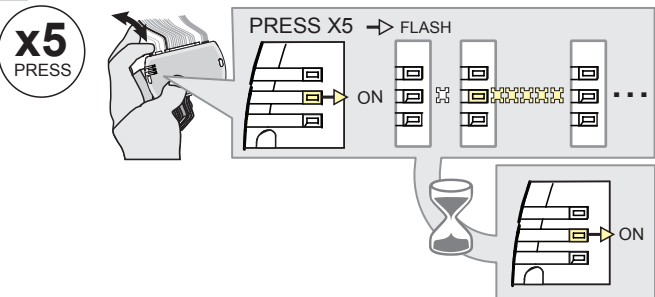


Press and release the programming button five (5x) times.

↳The YELLOW LED will flash 5 times each second.

↳**WAIT** for the YELLOW LED to turn ON solide.

5

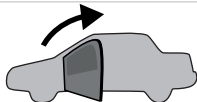


Open the driver door.

6

x1 PRESS HOLD START

RELEASE START

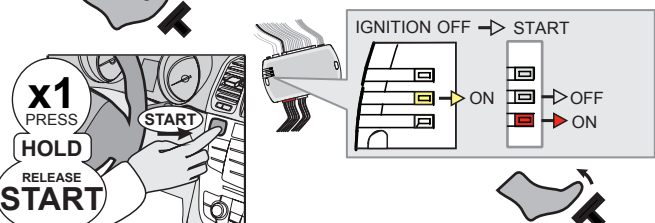

Press the foot-brake pedal.

Press the Push-to-Start button until the engine start.

Release the foot-brake pedal.

↳The RED LED will turn ON.
 ↳The YELLOW LED will turn OFF.


KEY BYPASS PROGRAMMING PROCEDURE 2/3

7




Press the Push-to-Start button until the engine turn OFF.

8

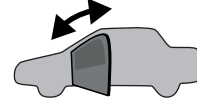

Close and open the driver door.

9

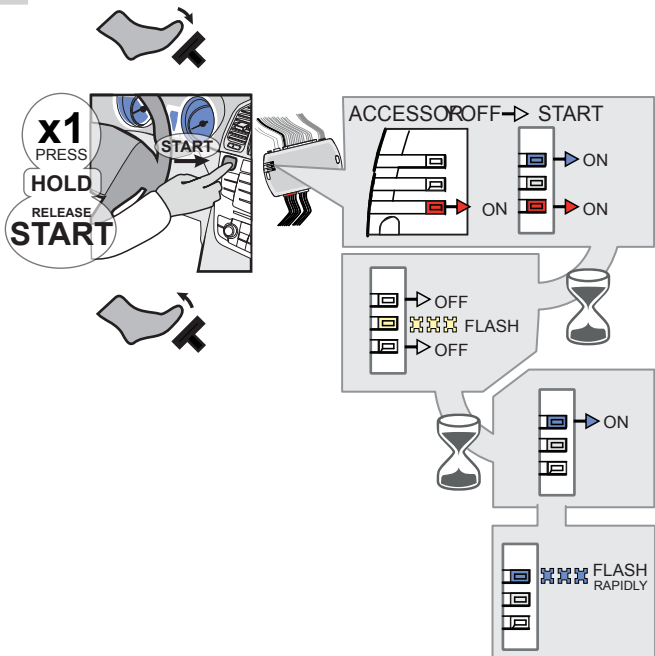


Press the foot-brake pedal.

Press the Push-to-Start button until the engine start.

Release the foot-brake pedal.

- ↳ The BLUE LED will turn ON.
- ↳ The BLUE LED will turn OFF. The RED LED will turn OFF.
- ↳ The YELLOW LED will flash rapidly
- ↳ The BLUE LED will turn ON.
- ↳ The BLUE LED will flash rapidly


10

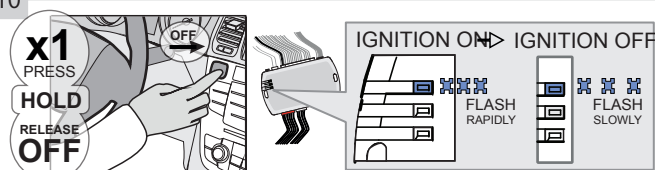

Press the Push-to-Start button until the engine turn OFF.


- ↳ The BLUE LED will flash slowly

11

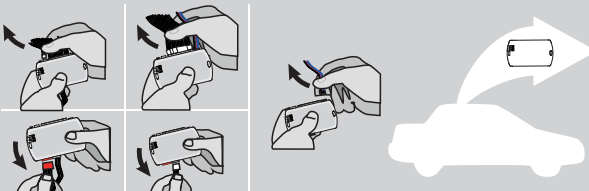

Disconnect all the connectors and after the Data-Link (4-pins) connector.

12

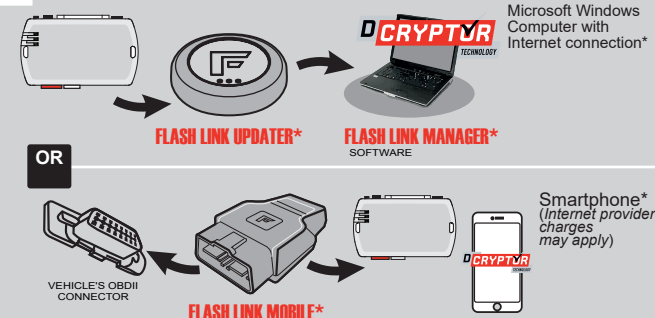


Use the tool: FLASH LINK UPDATER or FLASH LINK MOBILE to visit the DCRYPTOR menu.

***Parts required (not included)**

KEY BYPASS PROGRAMMING PROCEDURE 3/3

13

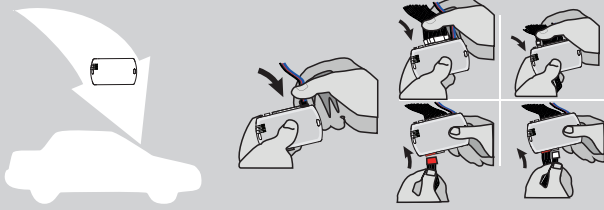

AFTER DCRYPTOR PROGRAMMING COMPLETED
Go back to the vehicle and **reconnect** the 4-Pin (Data-Link) connector and after, all the remaining connector.



The module is now programmed.



REMOTE STARTER / ALARM VERIFICATION PROCEDURE

Test the remote starter. **Remote start** the vehicle.

REMOTE STARTER FUNCTIONALITY



All doors must be closed.

 


Remote start the vehicle.



Unlock the doors with either:

- The OEM remote
- The remote-starter remote
- Or the proximity remote



Enter the vehicle with the Intelligent Key.



The vehicle can now be put in to gear and driven.

If the vehicle is not unlocked with one of these conditions the remote-starter will shut down as soon as any door is opened.



STAND ALONE INSTALLATION AND THAR-GM6

ADDENDUM - SUGGESTED WIRING CONFIGURATION



ONLY COMPATIBLE WITH AUTOMATIC TRANSMISSION VEHICLES.



VEHICLE

YEARS

Vehicle functions supported in this diagram (functional if equipped)

BUICK

VEHICLE	YEARS	Immobilizer bypass	Lock	Unlock	Arm	Disarm	Parking Light	Trunk (open)	RAP Disable	Tachometer	Door Status	Trunk Status	Hand-Brake Status	Foot-Brake Status	OEM Remote Monitoring
LaCrosse	Push-To-Start	2015-2016	•	•	•	•	•	•	•	•	•	•	•	•	•



FIRMWARE VERSION

70.[41]

GM MINIMUM

To add the firmware version and the options, use the **FLASH LINK UPDATER** or **FLASH LINK MOBILE** tool, sold separately.

IF THE VEHICLE IS NOT EQUIPPED WITH FUNCTIONAL HOOD PIN:

A11

OFF

Hood trigger (Output Status).



Program bypass option:

UNIT OPTION

DESCRIPTION

C1


OEM Remote status (Lock/Unlock) monitoring

D6

Push-to-Start



ATTENTION!

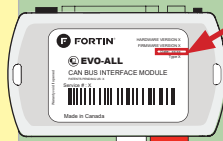

DATE: XX-XX

E5

OFF

SPECIAL FUNCTIONS: BY DEFAULT DEACTIVATED

ON

MANUFACTURED MODULES BETWEEN: 04/2018 TO 04/2019

MANDATORY INSTALL

*HOOD PIN



HOOD STATUS: THE HOOD PIN SWITCH MUST BE INSTALLED IF THE VEHICLE CAN BE REMOTE STARTED WITH THE HOOD OPEN, SET FUNCTION **A11** TO OFF.

A11

OFF

Notice: the installation of safety elements are mandatory. The hood pin is an essential security element and must be installed.

THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.

PARTS REQUIRED (NOT INCLUDED)


1x **FLASH LINK UPDATER**
 1x **FLASH LINK MANAGER**
 SOFTWARE
 1x Microsoft Windows Computer with Internet connection

OR


1x **FLASH LINK MOBILE**
 1x **FLASH LINK MOBILE APP**
 Smartphone *Android* or *iOS* with Internet connection (*provider charges may apply*).
 1x

MANDATORY

HOOD PIN



REMOTE START SAFETY OVERRIDE SWITCH

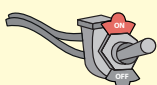
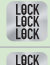





VALET SWITCH


Part #: RSPB available, Sold separately.

Notice: the installation of safety elements are mandatory. The hood pin and the valet switch are essential security elements and must be installed.


STAND ALONE CONFIGURATION

	Program bypass option	UNIT OPTION	DESCRIPTION
	OEM Remote Stand Alone Remote Starter:	D1.10 	By default, LOCK, LOCK, LOCK Par défaut, VERROUILLE,VERROUILLE,VERROUILLE
		D1.1 	
	Program bypass option with oem remote:	C1	OEM Remote Monitoring
	Program bypass option with RF KIT antenna:	H1 to H6	Supported RF Kits and select RF Kit


REMOTE STARTER FUNCTIONALITY




All doors must be closed.

3X 

Press the OEM remote's Lock button 3x to remote-start (or remote-stop) the vehicle.



START 

The vehicle will START.

REMOTE STARTER DIAGNOSTICS
MODULE RED LED

x2 flash :	Brake ON
x3 flash :	No tach
x4 flash :	Ignition before start
x5 flash :	Hood Open

REMOTE STARTER WARNING CARD



CUT THIS WARNING CARD AND STICK IT ON A VISIBLE PLACE:
 or use the package **RSPB**, Sold separately.

WARNING | ATTENTION

REMOTE STARTER

THE VEHICLE CAN BE STARTED BY EITHER: PRESSING THE LOCK BUTTON ON THE OEM REMOTE 3 TIMES CONSECUTIVELY OR BY A SMARTPHONE. **TURN ON** THE SAFETY SWITCH LOCATED UNDER THE DASHBOARD BEFORE WORKING ON THE VEHICLE.

DESCRIPTION

Parts required (Not included) PAGE






WIRE TO WIRE DIAGRAM

	1X 5 Amp Fuse 1X 1k Ohm Resistor	Page 4
--	-------------------------------------	--------





THARNESSE DIAGRAM

THARNESSE THAR-GM6	1x THAR-GM6	Page 5
--------------------	-------------	--------


BCM

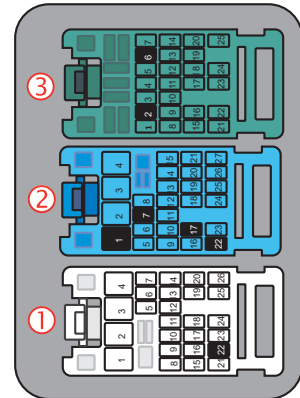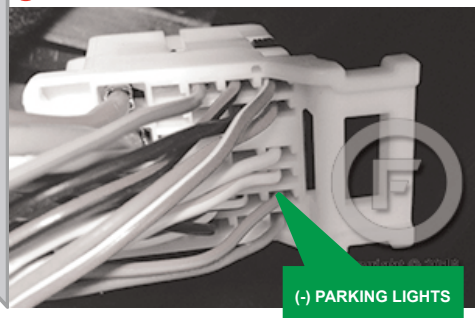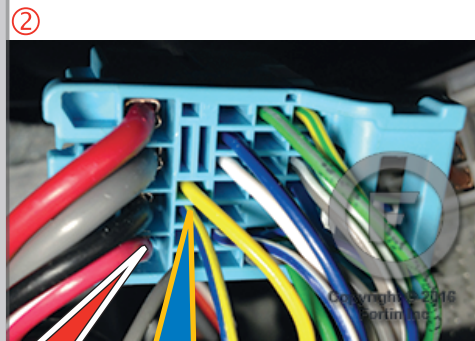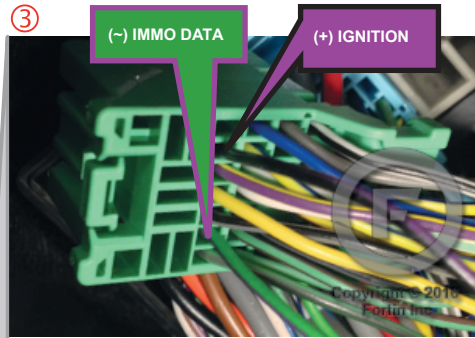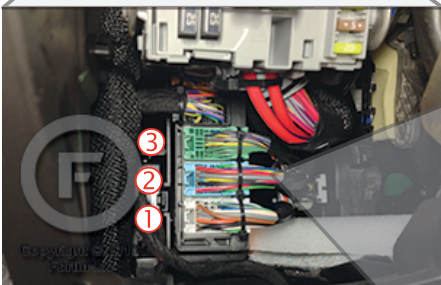

AUTOMATIC TRANSMISSION WIRING CONNECTION

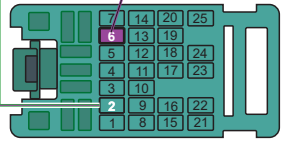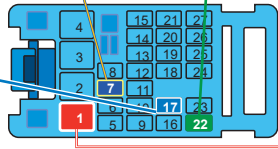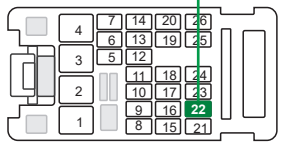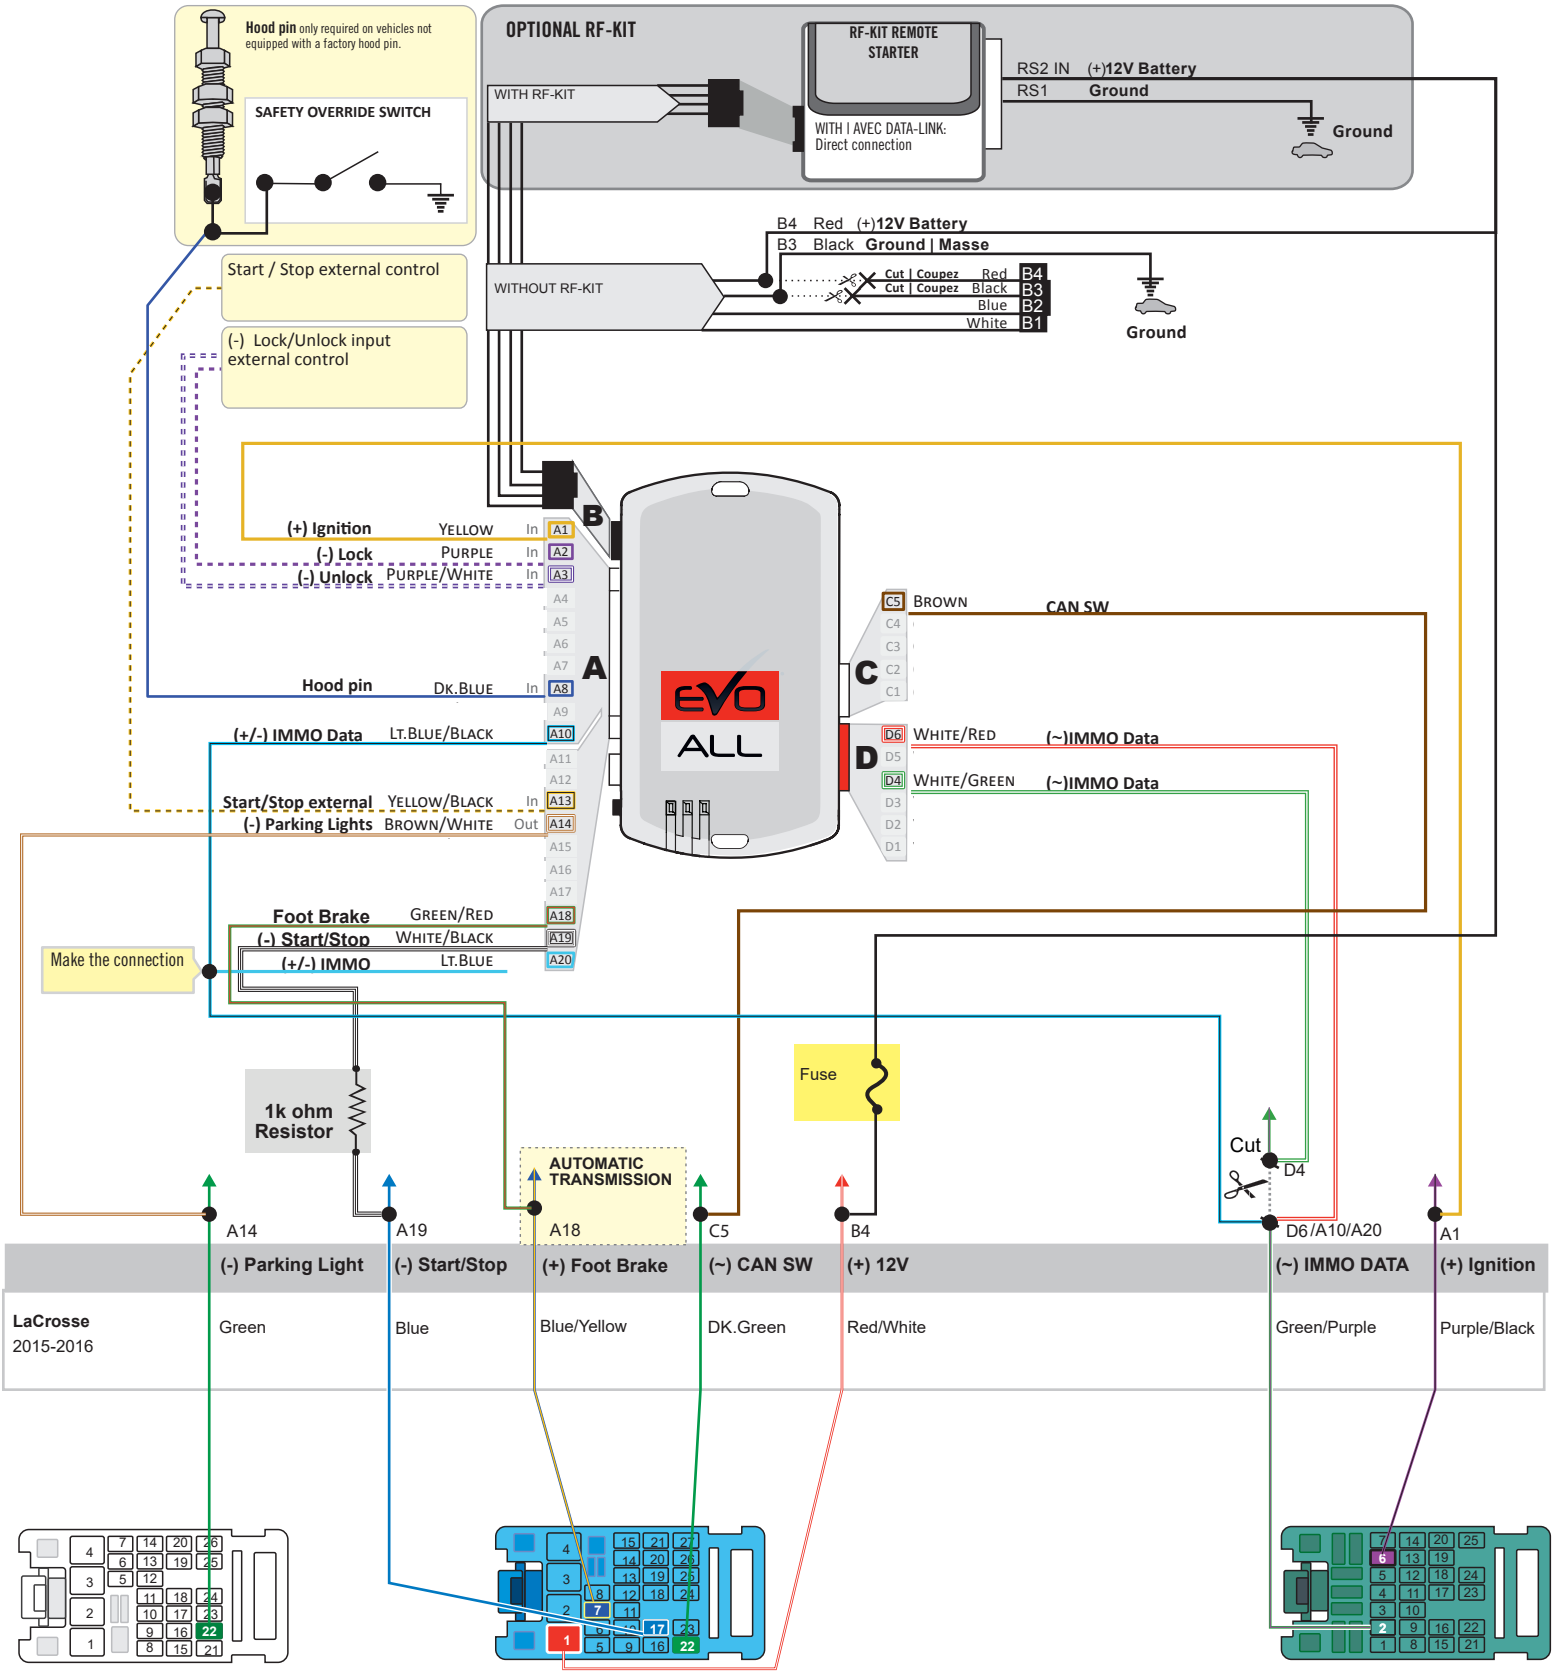


① Back view, 26-Pin White connector, at BCM.

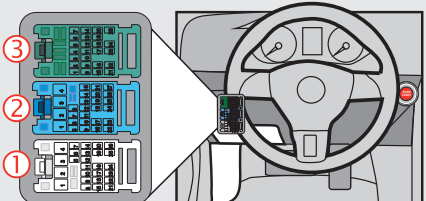


② Back view, 27-Pin Blue connector, at BCM.

③ Back view, 25-Pin Green connector, at BCM.

THAR-GM6 | AUTOMATIC TRANSMISSION CONNECTION

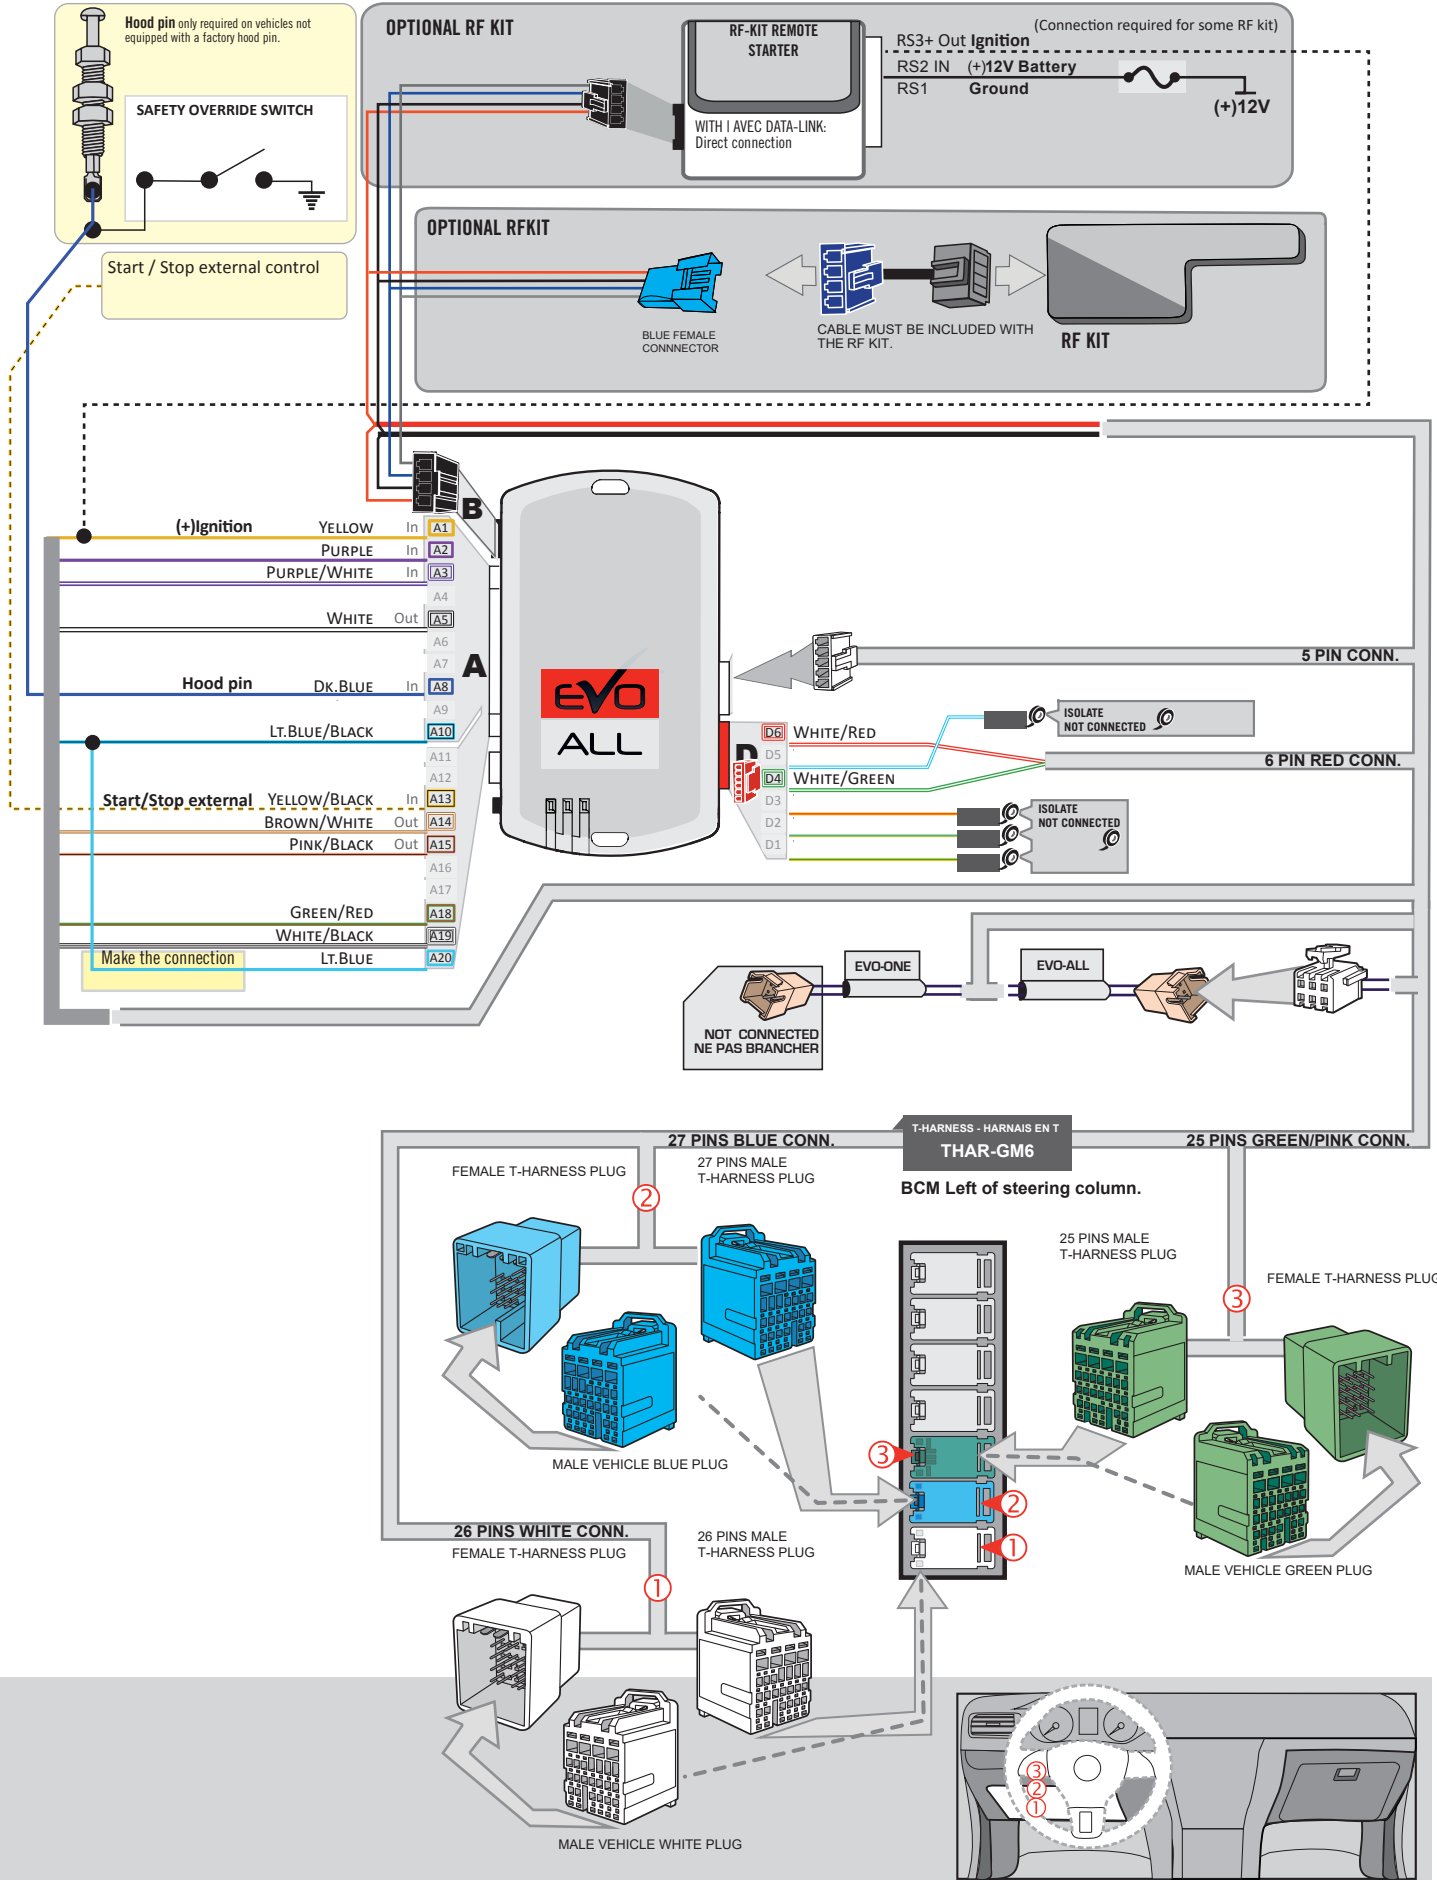


KEY BYPASS PROGRAMMING PROCEDURE 1/3

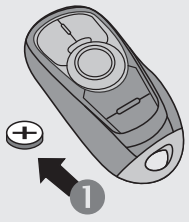

1 Remove the battery from the OEM remote.


2 Place the OEM remote into the transmitter pocket of the center console.

Refer to vehicle user guide for keyport location.

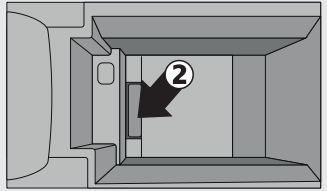

1

x1 HOLD

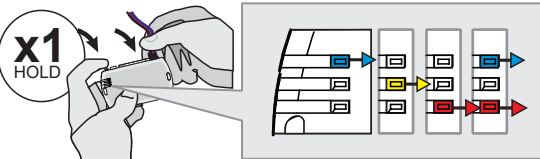


Press and hold the programming button:
Connect the 4-PIN Data-link harness (Black connector).

↳The Blue, Red, Yellow and Blue & Red LEDs will alternatively illuminate.


2

RELEASE

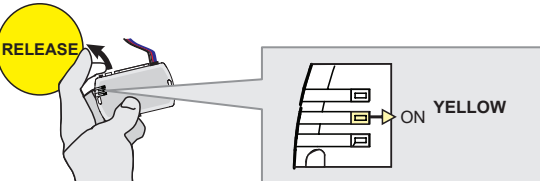


Release the programming button when the LED is YELLOW.

If the LED is not solid YELLOW disconnect the 4-Pin connector (Data-Link) and go back to step 1.

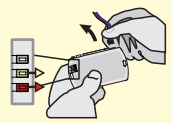

3

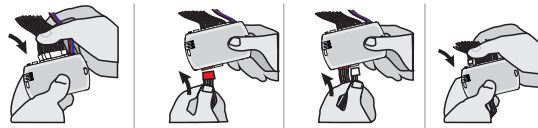


Insert the required remaining connectors.

4

x5 PRESS

PRESS X5 → FLASH

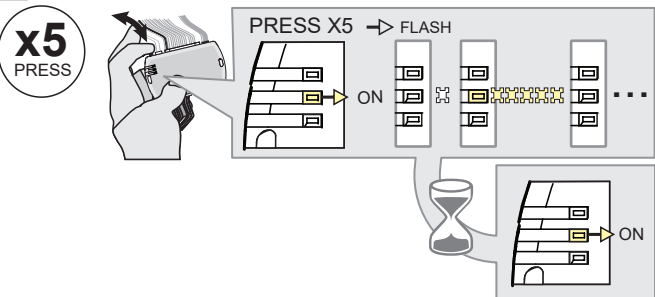


Press and release the programming button five (5x) times.

↳The YELLOW LED will flash 5 times each second.

↳**WAIT** for the YELLOW LED to turn ON solide.

5

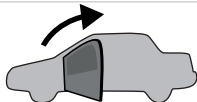


Open the driver door.

6

x1 PRESS HOLD START

RELEASE START

IGNITION OFF → START

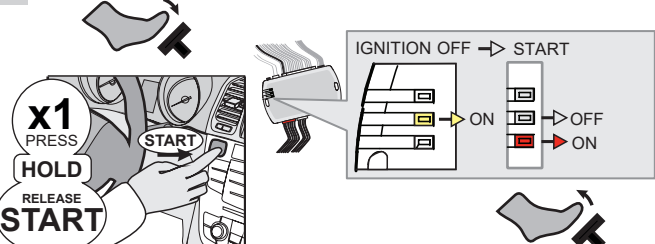

Press the foot-brake pedal.

Press the Push-to-Start button until the engine start.

Release the foot-brake pedal.

↳The RED LED will turn ON.
 ↳The YELLOW LED will turn OFF.

KEY BYPASS PROGRAMMING PROCEDURE 2/3

7

Press the Push-to-Start button until the engine turn OFF.

8

Close and open the driver door.

9

Press the foot-brake pedal.

Press the Push-to-Start button until the engine start.

Release the foot-brake pedal.

- ↳ The BLUE LED will turn ON.
- ↳ The BLUE LED will turn OFF. The RED LED will turn OFF.
- ↳ The YELLOW LED will flash rapidly
- ↳ The BLUE LED will turn ON.
- ↳ The BLUE LED will flash rapidly

10

Press the Push-to-Start button until the engine turn OFF.

- ↳ The BLUE LED will flash slowly

11

Disconnect all the connectors and after the Data-Link (4-pins) connector.

12

Microsoft Windows Computer with Internet connection*

FLASH LINK UPDATER* FLASH LINK MANAGER* SOFTWARE

OR

FLASH LINK MOBILE*

Smartphone* (Internet provider charges may apply)



VEHICLE'S OBDII CONNECTOR

Use the tool: FLASH LINK UPDATER or FLASH LINK MOBILE to visit the DCRYPTOR menu.

*Parts required (not included)

KEY BYPASS PROGRAMMING PROCEDURE 3/3

13

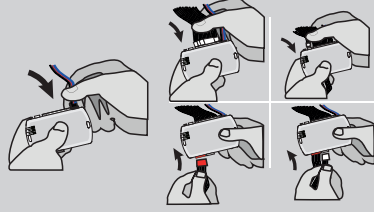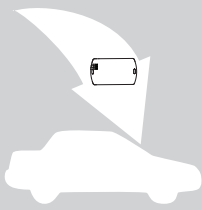

AFTER DCRYPTOR PROGRAMMING COMPLETED
Go back to the vehicle and **reconnect** the 4-Pin (Data-Link) connector and after, all the remaining connector.



The module is now programmed.



REMOTE STARTER / ALARM VERIFICATION PROCEDURE

Test the remote starter. Remote start the vehicle.

REMOTE STARTER FUNCTIONALITY



All doors must be closed.



Remote start the vehicle.



Unlock the doors with either:

- The OEM remote
- The remote-starter remote
- Or the proximity remote



Enter the vehicle with the Intelligent Key.



The vehicle can now be put in to gear and driven.

If the vehicle is not unlocked with one of these conditions the remote-starter will shut down as soon as any door is opened.



**STAND ALONE INSTALLATION AND THAR-GM6
INSTALLATION**

ADDENDUM - SUGGESTED WIRING CONFIGURATION



ONLY COMPATIBLE WITH AUTOMATIC TRANSMISSION VEHICLES.

VEHICLE	YEARS	Vehicle functions supported in this diagram (functional if equipped)													
		Immobilizer bypass	Lock	Unlock	Arm	Disarm	Parking Light	Trunk (open)	RAP Disable	Tachometer	Door Status	Trunk Status	Hand-Brake Status	Foot-Brake Status	OEM Remote Monitoring
CHEVROLET															
Malibu	Push-To-Start	2013-2015	•	•	•	•	•	•	•	•	•	•	•	•	•

FIRMWARE VERSION

70.[41]

GM MINIMUM

To add the firmware version and the options, use the **FLASH LINK UPDATER** or **FLASH LINK MOBILE** tool, sold separately.

<p>IF THE VEHICLE IS NOT EQUIPPED WITH FUNCTIONAL HOOD PIN:</p>	A11	OFF	Hood trigger (Output Status).
<p>Program bypass option:</p>	UNIT OPTION		DESCRIPTION
	C1		OEM Remote status (Lock/Unlock) monitoring
	D6		Push-to-Start
<p>ATTENTION!</p>	<p>DATE: XX-XX</p>	E5	<p>SPECIAL FUNCTIONS: BY DEFAULT DEACTIVATED</p> <p>MANUFACTURED MODULES BETWEEN: 04/2018 TO 04/2019</p>
		ON	

MANDATORY INSTALL

***HOOD PIN**

HOOD STATUS: THE HOOD PIN SWITCH MUST BE INSTALLED IF THE VEHICLE CAN BE REMOTE STARTED WITH THE HOOD OPEN, SET FUNCTION **A11** TO OFF.

A11

OFF

Notice: the installation of safety elements are mandatory. The hood pin is an essential security element and must be installed.

THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.

PARTS REQUIRED (NOT INCLUDED)


1x **FLASH LINK UPDATER,**
 1x **FLASH LINK MANAGER**
 SOFTWARE | PROGRAMME
 1x Microsoft Windows Computer with Internet connection

OR


1x **FLASH LINK MOBILE**
 1x **FLASH LINK MOBILE APP**
 Smartphone *Android* or *iOS* with Internet connection (*provider charges may apply*).

MANDATORY

HOOD PIN



REMOTE START SAFETY OVERRIDE SWITCH

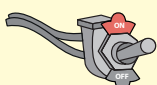
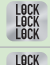





VALET SWITCH


Part #: RSPB available, Sold separately.

Notice: the installation of safety elements are mandatory. The hood pin and the valet switch are essential security elements and must be installed.


STAND ALONE CONFIGURATION

	Program bypass option	UNIT OPTION	DESCRIPTION
	OEM Remote Stand Alone Remote Starter:	D1.10 	By default, LOCK, LOCK, LOCK
		D1.1 	Par défaut, VERROUILLE,VERROUILLE,VERROUILLE
	Program bypass option with oem remote:	C1	OEM Remote Monitoring
	Program bypass option with RF KIT antenna:	H1 to H6	Supported RF Kits and select RF Kit


REMOTE STARTER FUNCTIONALITY



All doors must be closed.

3X 

Press the OEM remote's Lock button 3x to remote-start (or remote-stop) the vehicle.




START

The vehicle will START.

REMOTE STARTER DIAGNOSTICS
MODULE RED LED


x2 flash :	Brake ON
x3 flash :	No tach
x4 flash :	Ignition before start
x5 flash :	Hood Open

REMOTE STARTER WARNING CARD



CUT THIS WARNING CARD AND STICK IT ON A VISIBLE PLACE:
 or use the package **RSPB**, Sold separately.

WARNING



REMOTE STARTER

THE VEHICLE CAN BE STARTED BY EITHER: PRESSING THE LOCK BUTTON ON THE OEM REMOTE 3 TIMES CONSECUTIVELY OR BY A SMARTPHONE. **TURN ON** THE SAFETY SWITCH LOCATED UNDER THE DASHBOARD BEFORE WORKING ON THE VEHICLE.

DESCRIPTION

Parts required (Not included) PAGE



WIRE TO WIRE DIAGRAM

1X 5 Amp Fuse 1X 1k Ohm Resistor	Page 4
-------------------------------------	--------






THARNES DIAGRAM




THARNES THAR-GM6	1x THAR-GM6	Page 5
------------------	-------------	--------

BCM

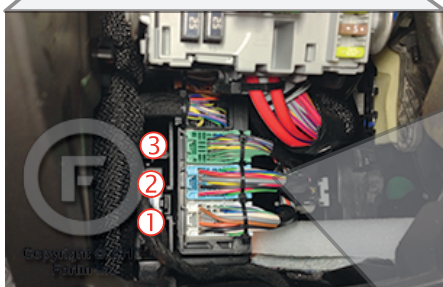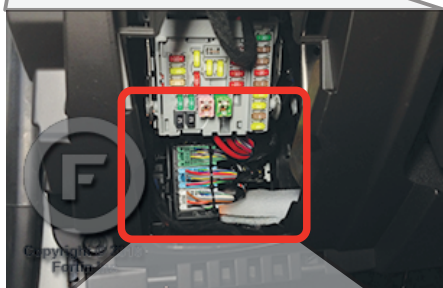


Malibu

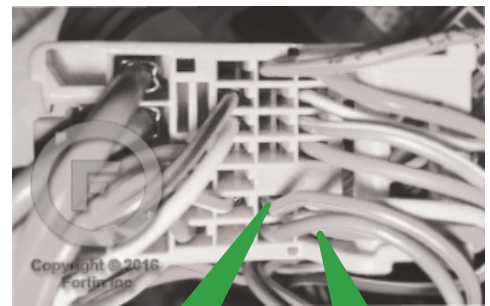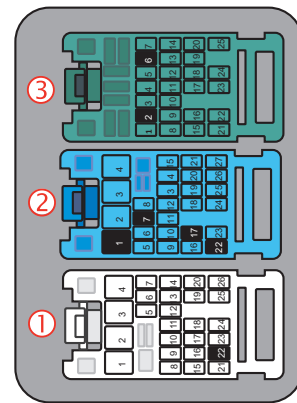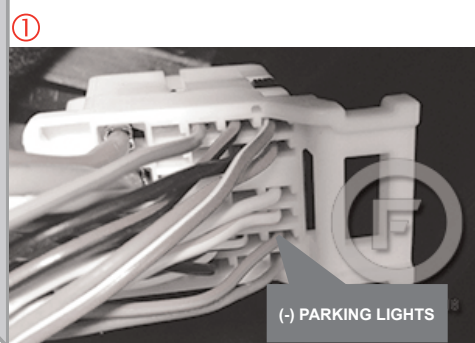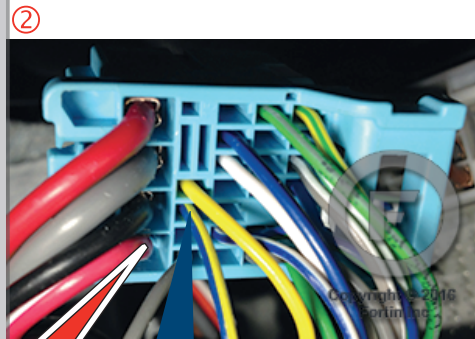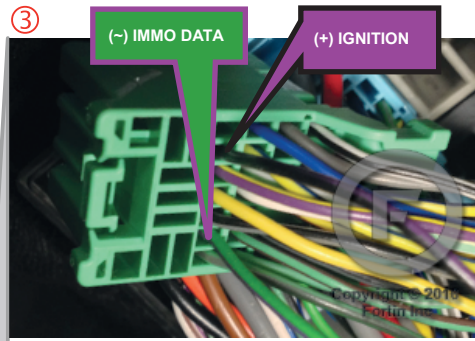

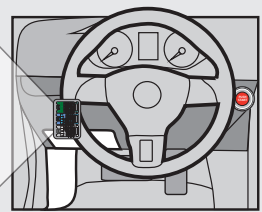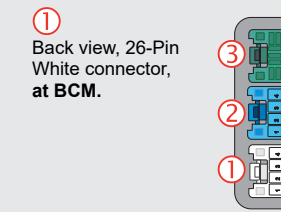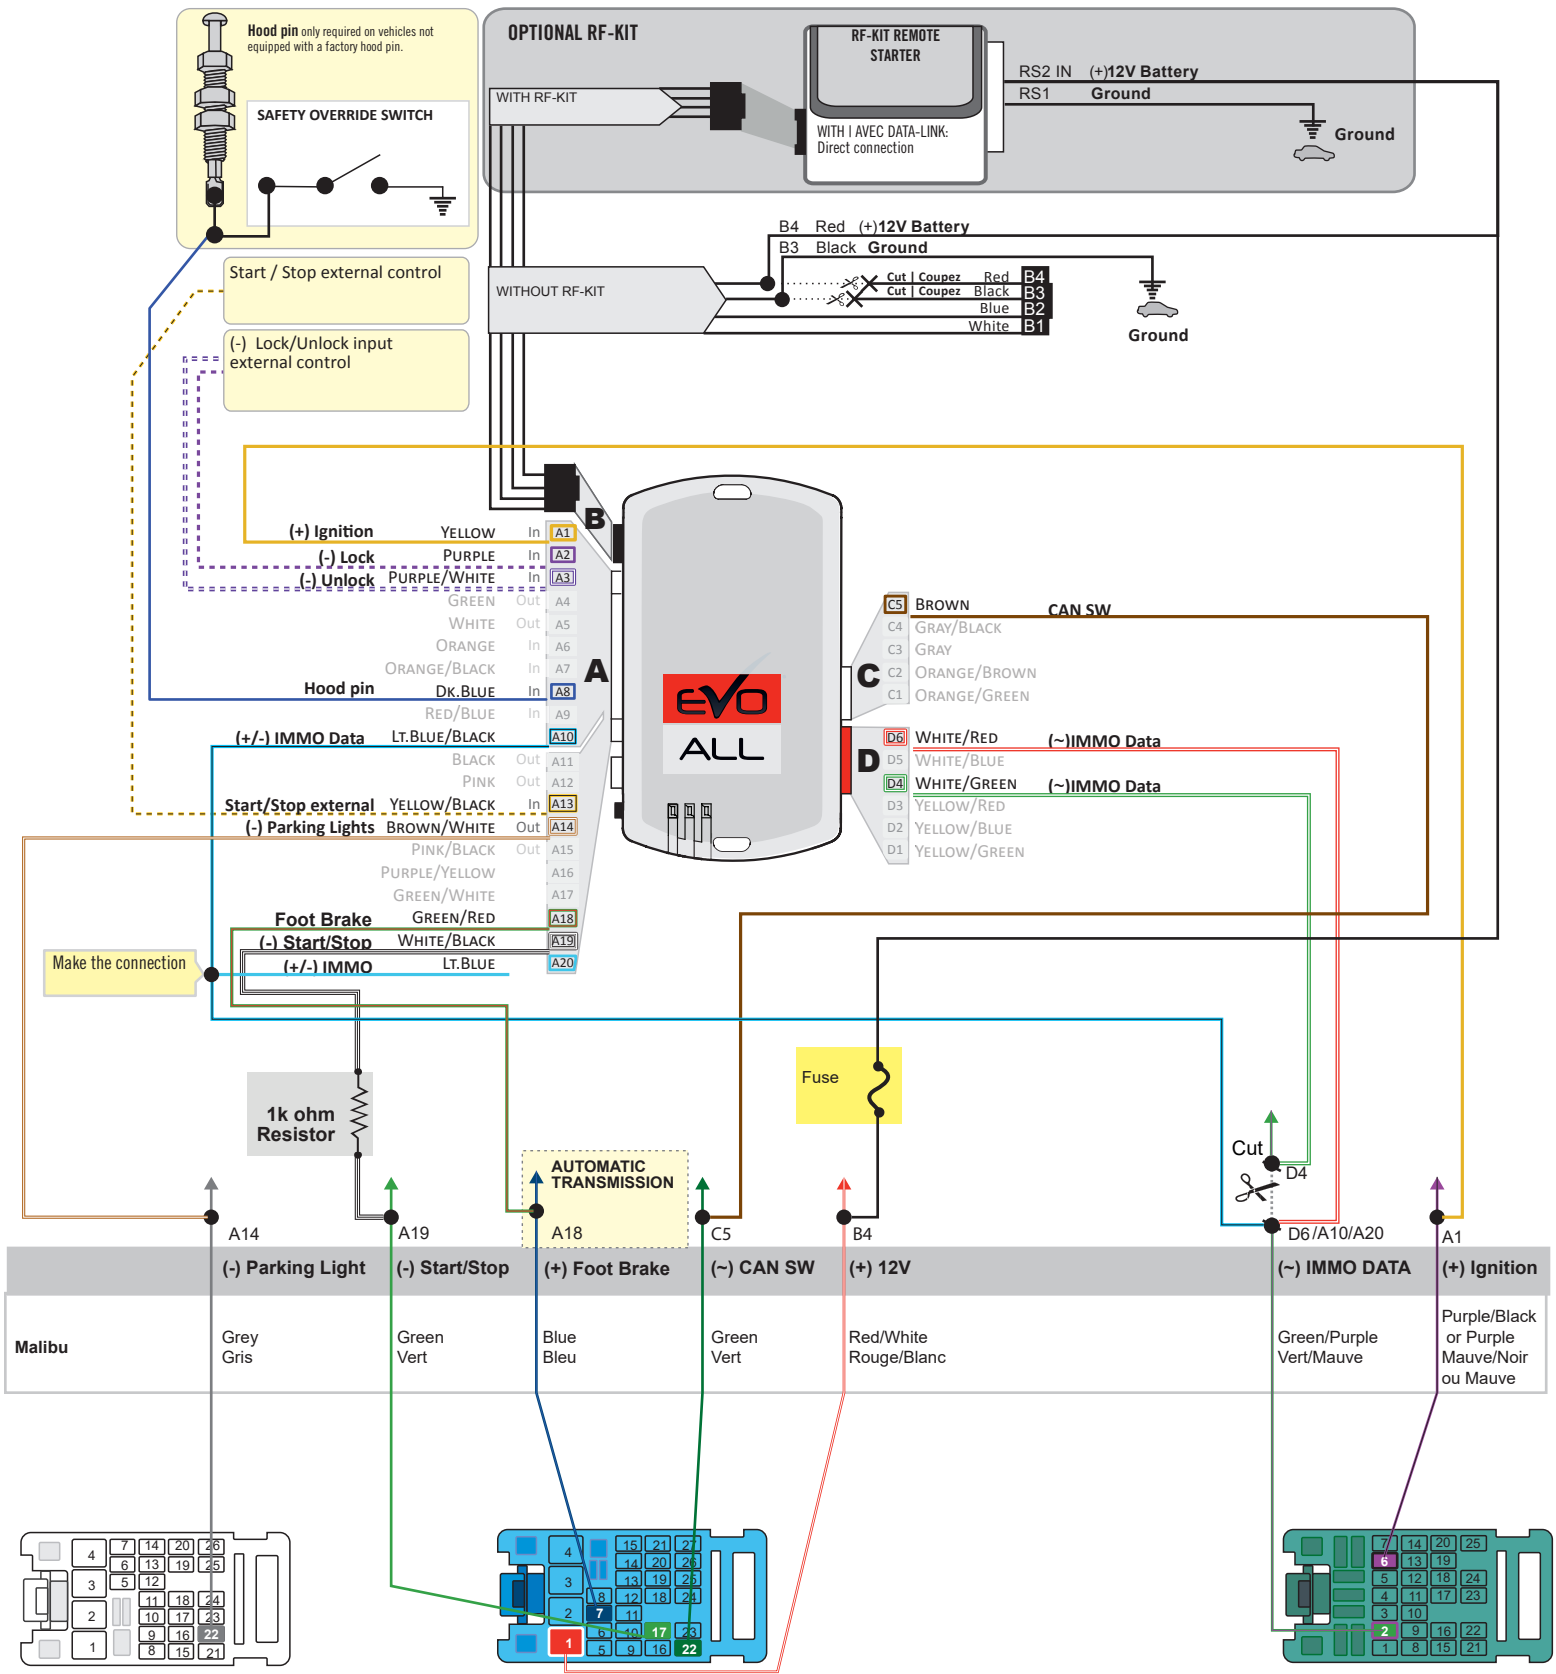

THAR-GM6 | AUTOMATIC TRANSMISSION CONNECTION

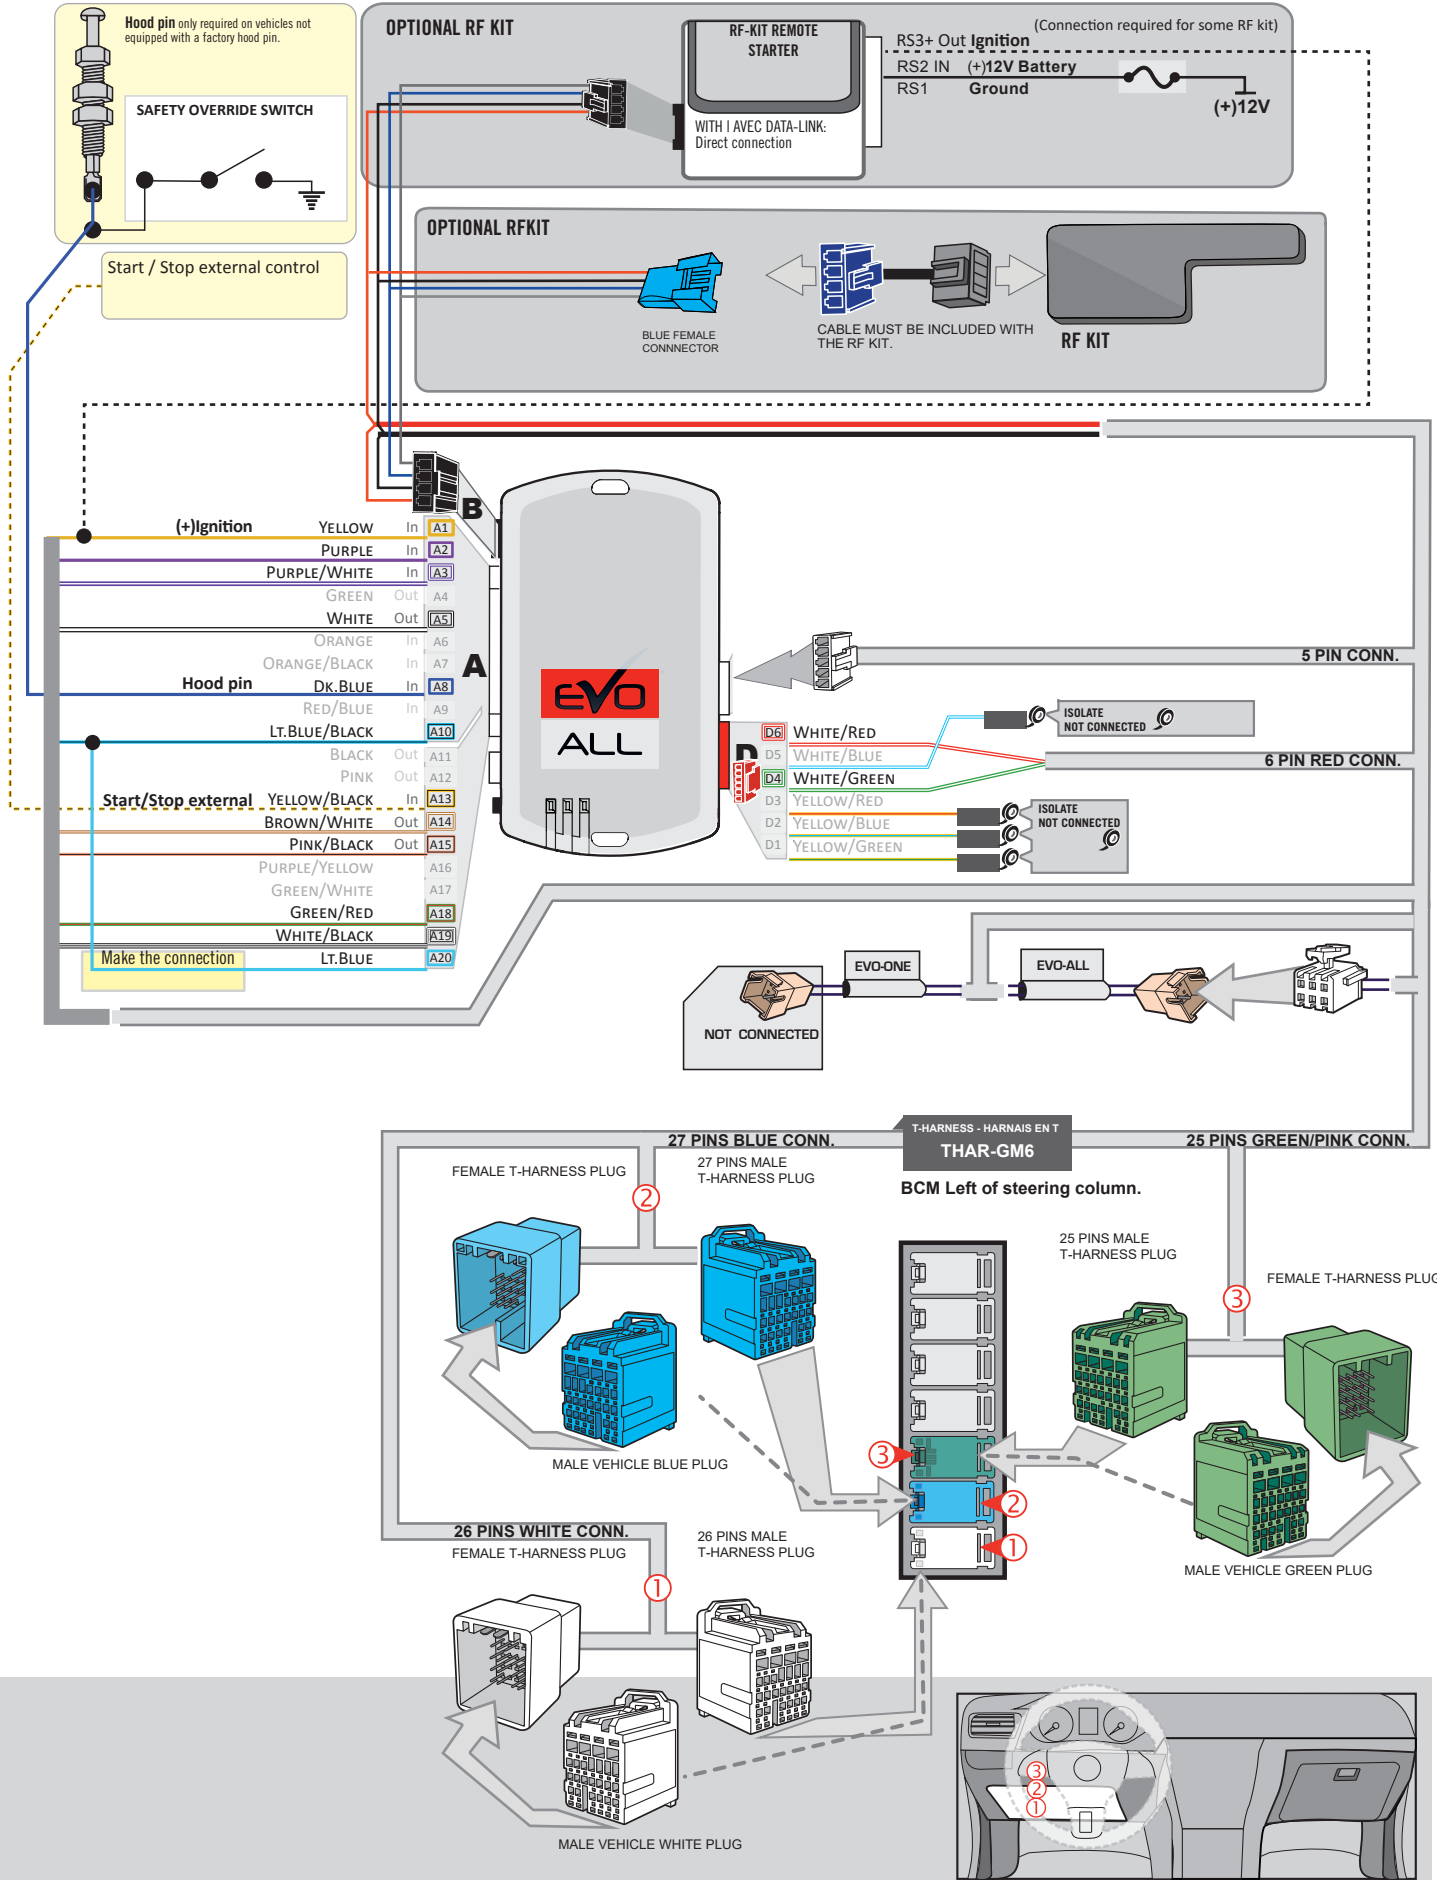


KEY BYPASS PROGRAMMING PROCEDURE 1/3


Chevrolet Malibu



- 1** Remove the battery from the OEM remote.
- 2** Place the OEM remote into the transmitter pocket of the center console.
Refer to vehicle user guide for keyport location.

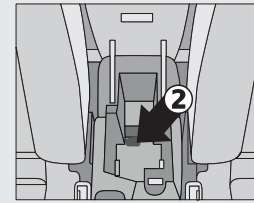


1

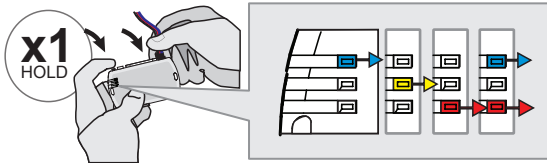

Press and hold the programming button:
Connect the 4-PIN Data-link harness (Black connector).


↳The Blue, Red, Yellow and Blue & Red LEDs will alternatively illuminate.

2

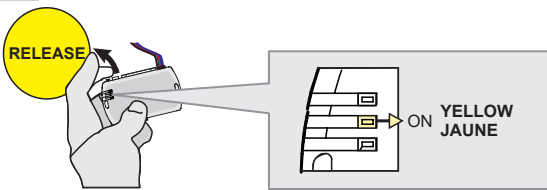


Release the programming button when the LED is YELLOW.

 If the LED is not solid YELLOW disconnect the 4-Pin connector (Data-Link) and go back to step 1.




3

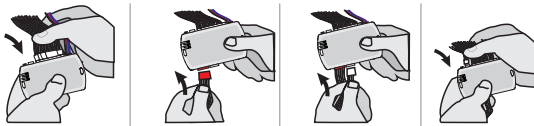

Insert the required remaining connectors.

4

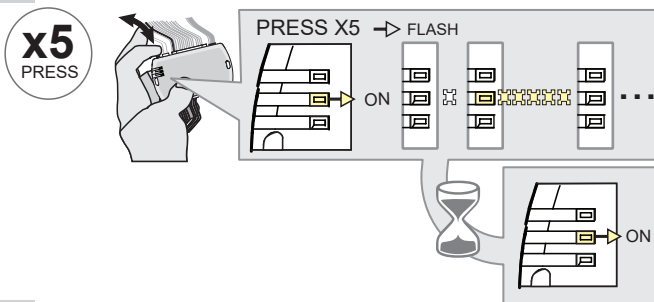


Press and release the programming button five (5x) times.

↳The YELLOW LED will flash 5 times each second.


↳**WAIT** for the YELLOW LED to turn ON solide.

 5



Open the driver door.

6

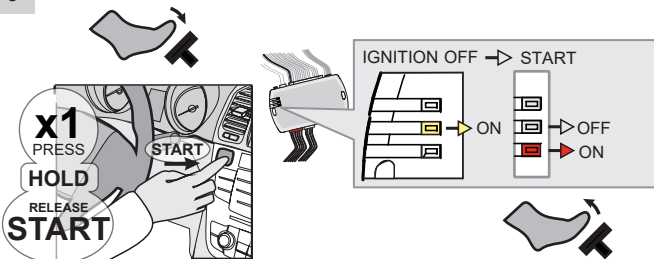


Press the foot-brake pedal.

Press the Push-to-Start button until the engine start.


Release the foot-brake pedal.

↳The RED LED will turn ON.
↳The YELLOW LED will turn OFF.


KEY BYPASS PROGRAMMING PROCEDURE 2/3

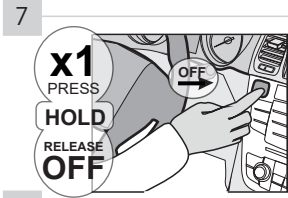

 Press the Push-to-Start button until the engine turn OFF.



Close and open the driver door.

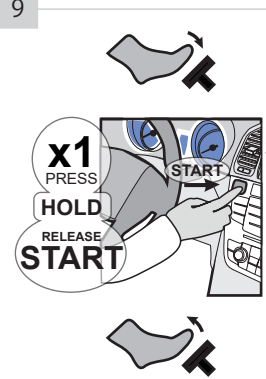

Press the foot-brake pedal.

Press the Push-to-Start button until the engine start.

Release the foot-brake pedal.


↳ The BLUE LED will turn ON.

↳ The BLUE LED will turn OFF. The RED LED will turn OFF.

↳ The YELLOW LED will flash rapidly


↳ The BLUE LED will turn ON.

↳ The BLUE LED will flash rapidly

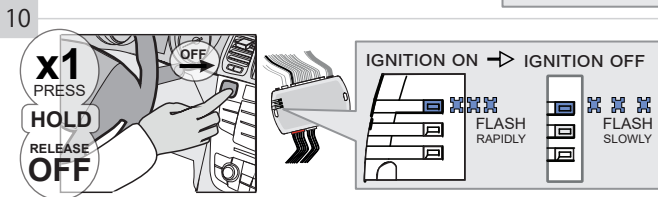


Press the Push-to-Start button until the engine turn OFF.

↳ The BLUE LED will flash slowly

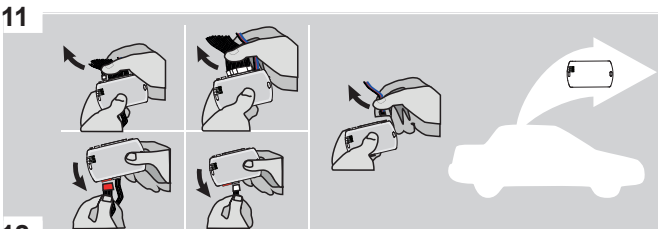

Disconnect all the connectors and after the Data-Link (4-pins) connector.


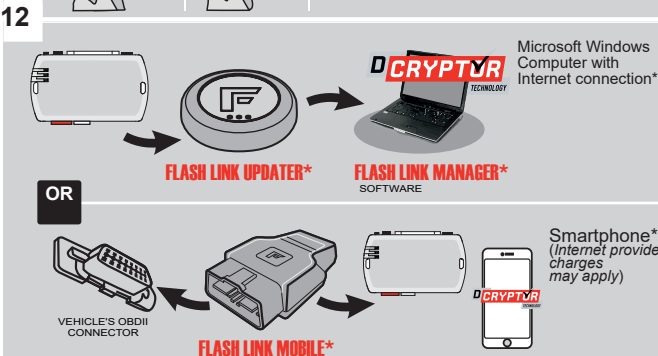


Use the tool: FLASH LINK UPDATER or FLASH LINK MOBILE to visit the DCryptor menu.

*Parts required (not included)

KEY BYPASS PROGRAMMING PROCEDURE 3/3

13

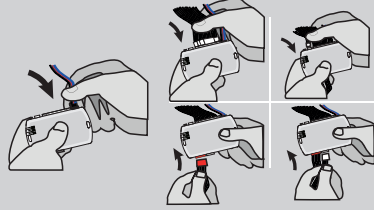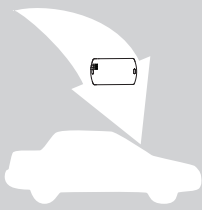

AFTER DCRYPTOR PROGRAMMING COMPLETED
Go back to the vehicle and **reconnect** the 4-Pin (Data-Link) connector and after, all the remaining connector.



The module is now programmed.



REMOTE STARTER / ALARM VERIFICATION PROCEDURE

Test the remote starter. Remote start the vehicle.

OPTIONAL RF-KIT PROGRAMMING

PROGRAM BYPASS OPTION



Program bypass option:

 
H2

Supported RF-KITS enable

H2 Fortin 2

OPTIONAL FORTIN RF KIT SERIES 4 OR SERIES 9 PROGRAMMING

The module must be programmed on the vehicle.



MAKE SURE THE IGNITION KEY HAS BEEN IN THE OFF POSITION FOR AT LEAST 5 SECONDS.

	1	2	3	4	5	6
	<p>ON</p> <p>x1 PRESS (HOLD) START</p>	<p>OFF</p> <p>x1 PRESS (HOLD) START OFF</p>	<p>ON</p> <p>x1 PRESS (HOLD) START</p>	<p>4X BRAKES</p> <p>x4 PRESS</p>	<p>ON EACH TRANSMITTER</p> <p>4 BUTTONS</p> <p>[-] PRESS AND RELEASE</p> <p>→ PRESS AND RELEASE</p> <p>[LOCK] PRESS AND RELEASE</p> <p>1 BUTTON</p> <p>POWER OFF</p> <p>PRESS APPROX. 12 SEC. AND WAIT FOR THE BLUE LED TO TURN OFF THEN BACK ON SOLID THEN RELEASE.</p>	<p>OFF</p> <p>x1 PRESS (HOLD) START OFF</p>
	<p>Press the foot-brake pedal. Press the Push-to-Start button until the engine start. Release the foot-brake pedal.</p>	<p>Press the Push-to-Start button until the engine turn OFF.</p>	<p>Press the foot-brake pedal. Press the Push-to-Start button until the engine start. Release the foot-brake pedal.</p>	<p>Press and release the brake pedal four times.</p>		<p>Press the Push-to-Start button until the engine turn OFF.</p>
	<p>The LED will turn ON solid.</p>	<p>The YELLOW LED will turn Off.</p>	<p>The LED will turn ON solide.</p>	<p>The LED will flash rapidly.</p>	<p>The LED will turn off each time.</p>	<p>The LED will turn Off.</p>
	<p>The YELLOW LED will turn ON solid.</p>	<p>The YELLOW LED will turn Off.</p>	<p>The YELLOW LED will turn ON solid.</p>	<p>The 3 LED will turn ON solid.</p>	<p>The LED will flash rapidly. Le témoin clignotera rapidement.</p>	<p>The 3 LED will turn off.</p>
				<p>The LED will turn off each time.</p>	<p>The 3 LED will turn off each time.</p>	



REMOTE STARTER FUNCTIONALITY



All doors must be closed.



Remote start the vehicle.



Unlock the doors with either:

- The OEM remote
- The remote-starter remote
- Or the proximity remote



Enter the vehicle with the Intelligent Key.



The vehicle can now be put in to gear and driven.

If the vehicle is not unlocked with one of these conditions the remote-starter will shut down as soon as any door is opened.



STAND ALONE INSTALLATION AND THAR-GM6

ADDENDUM - SUGGESTED WIRING CONFIGURATION



ONLY COMPATIBLE WITH AUTOMATIC TRANSMISSION VEHICLES.



VEHICLE

YEARS

Vehicle functions supported in this diagram (functional if equipped)

VEHICLE	YEARS	Immobilizer bypass	Lock	Unlock	Arm	Disarm	Parking Light	Trunk (open)	RAP Disable	Tachometer	Door Status	Trunk Status	Hand-Brake Status	Foot-Brake Status	OEM Remote Monitoring
BUICK															
Regal	Push-To-Start	2011-2017	•	•	•	•	•	•	•	•	•	•	•	•	•

FIRMWARE VERSION

70.[41]

GM MINIMUM

To add the firmware version and the options, use the **FLASH LINK UPDATER** or **FLASH LINK MOBILE** tool, sold separately.

IF THE VEHICLE IS NOT EQUIPPED WITH FUNCTIONAL HOOD PIN:	A11	OFF	Hood trigger (Output Status).
--	-----	-----	-------------------------------

	UNIT OPTION	DESCRIPTION
<p>Program bypass option:</p>	C1	OEM Remote status (Lock/Unlock) monitoring
	D6	Push-to-Start

	ATTENTION!	<p>DATE: XX-XX</p>	E5	OFF	<p>SPECIAL FUNCTIONS: BY DEFAULT DEACTIVATED</p>
				ON	<p>MANUFACTURED MODULES BETWEEN: 04/2018 TO 04/2019</p>

MANDATORY INSTALL

*HOOD PIN



HOOD STATUS: THE HOOD PIN SWITCH MUST BE INSTALLED IF THE VEHICLE CAN BE REMOTE STARTED WITH THE HOOD OPEN, SET FUNCTION A11 TO OFF.

A11	OFF
-----	-----

Notice: the installation of safety elements are mandatory. The hood pin is an essential security element and must be installed.

THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.

PARTS REQUIRED (NOT INCLUDED)

1x **FLASH LINK UPDATER**
 1x **FLASH LINK MANAGER**
 SOFTWARE
 1x Microsoft Windows Computer with Internet connection

OR

1x **FLASH LINK MOBILE**
 1x **FLASH LINK MOBILE APP**
 Smartphone *Android* or *iOS* with Internet connection (*provider charges may apply*).
 1x

MANDATORY

HOOD PIN



REMOTE START SAFETY OVERRIDE SWITCH


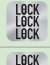





VALET SWITCH


Part #: RSPB available, Sold separately.

Notice: the installation of safety elements are mandatory. The hood pin and the valet switch are essential security elements and must be installed.


STAND ALONE CONFIGURATION

	Program bypass option	UNIT OPTION	DESCRIPTION
	OEM Remote Stand Alone Remote Starter:	D1.10 	By default, LOCK, LOCK, LOCK Par défaut, VERROUILLE,VERROUILLE,VERROUILLE
		D1.1 	
	Program bypass option with oem remote:	C1	OEM Remote Monitoring
	Program bypass option with RF KIT antenna:	H1 to H6	Supported RF Kits and select RF Kit


REMOTE STARTER FUNCTIONALITY



All doors must be closed.

3X 

Press the OEM remote's Lock button 3x to remote-start (or remote-stop) the vehicle.




The vehicle will START.

REMOTE STARTER DIAGNOSTICS
MODULE RED LED


x2 flash :	Brake ON
x3 flash :	No tach
x4 flash :	Ignition before start
x5 flash :	Hood Open

REMOTE STARTER WARNING CARD



CUT THIS WARNING CARD AND STICK IT ON A VISIBLE PLACE:
 or use the package **RSPB**, Sold separately.

WARNING



REMOTE STARTER

THE VEHICLE CAN BE STARTED BY EITHER: PRESSING THE LOCK BUTTON ON THE OEM REMOTE 3 TIMES CONSECUTIVELY OR BY A SMARTPHONE. **TURN ON** THE SAFETY SWITCH LOCATED UNDER THE DASHBOARD BEFORE WORKING ON THE VEHICLE.

DESCRIPTION

		Parts required (Not included)	PAGE
--	--	-------------------------------	------



WIRE TO WIRE DIAGRAM

AUTOMATIC TRANSMISSION	1X 5 Amp Fuse 1X 1k Ohm Resistor	Page 4
------------------------	-------------------------------------	--------






THARNESSE DIAGRAM

THARNESSE THAR-GM6	AUTOMATIC TRANSMISSION	1x THAR-GM6	Page 5
--------------------	------------------------	-------------	--------


BCM

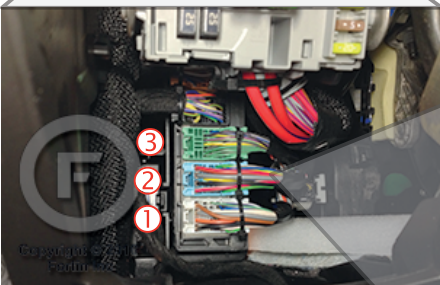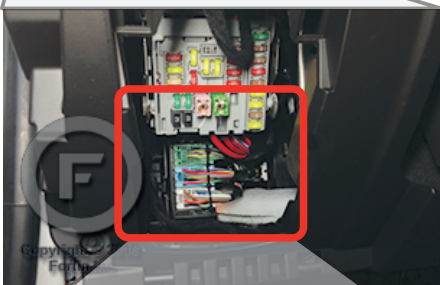


Regal

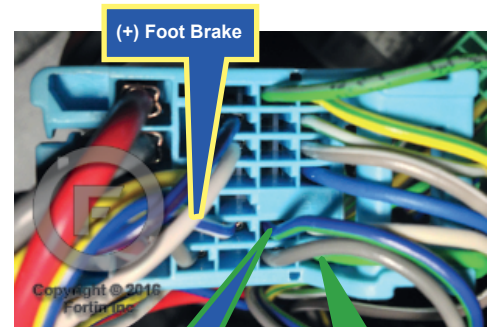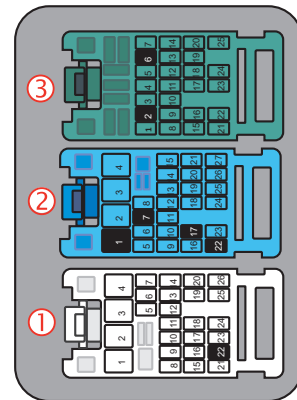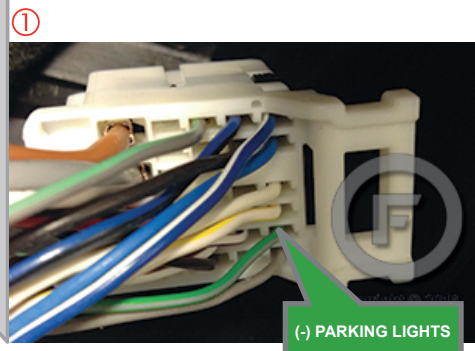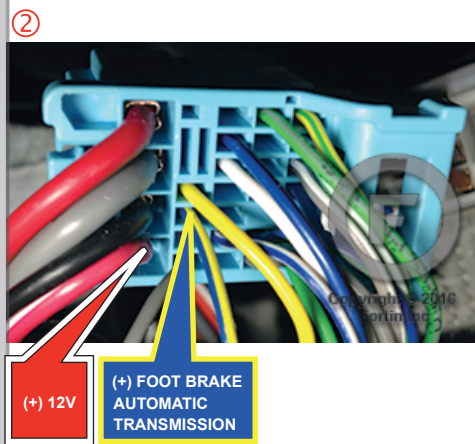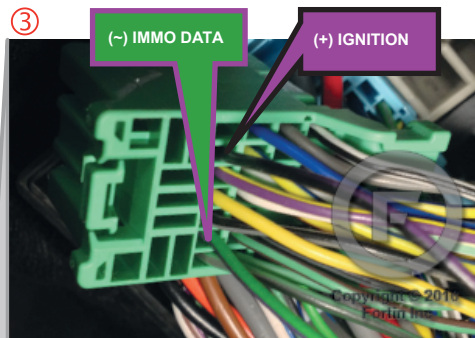

AUTOMATIC TRANSMISSION WIRING CONNECTION

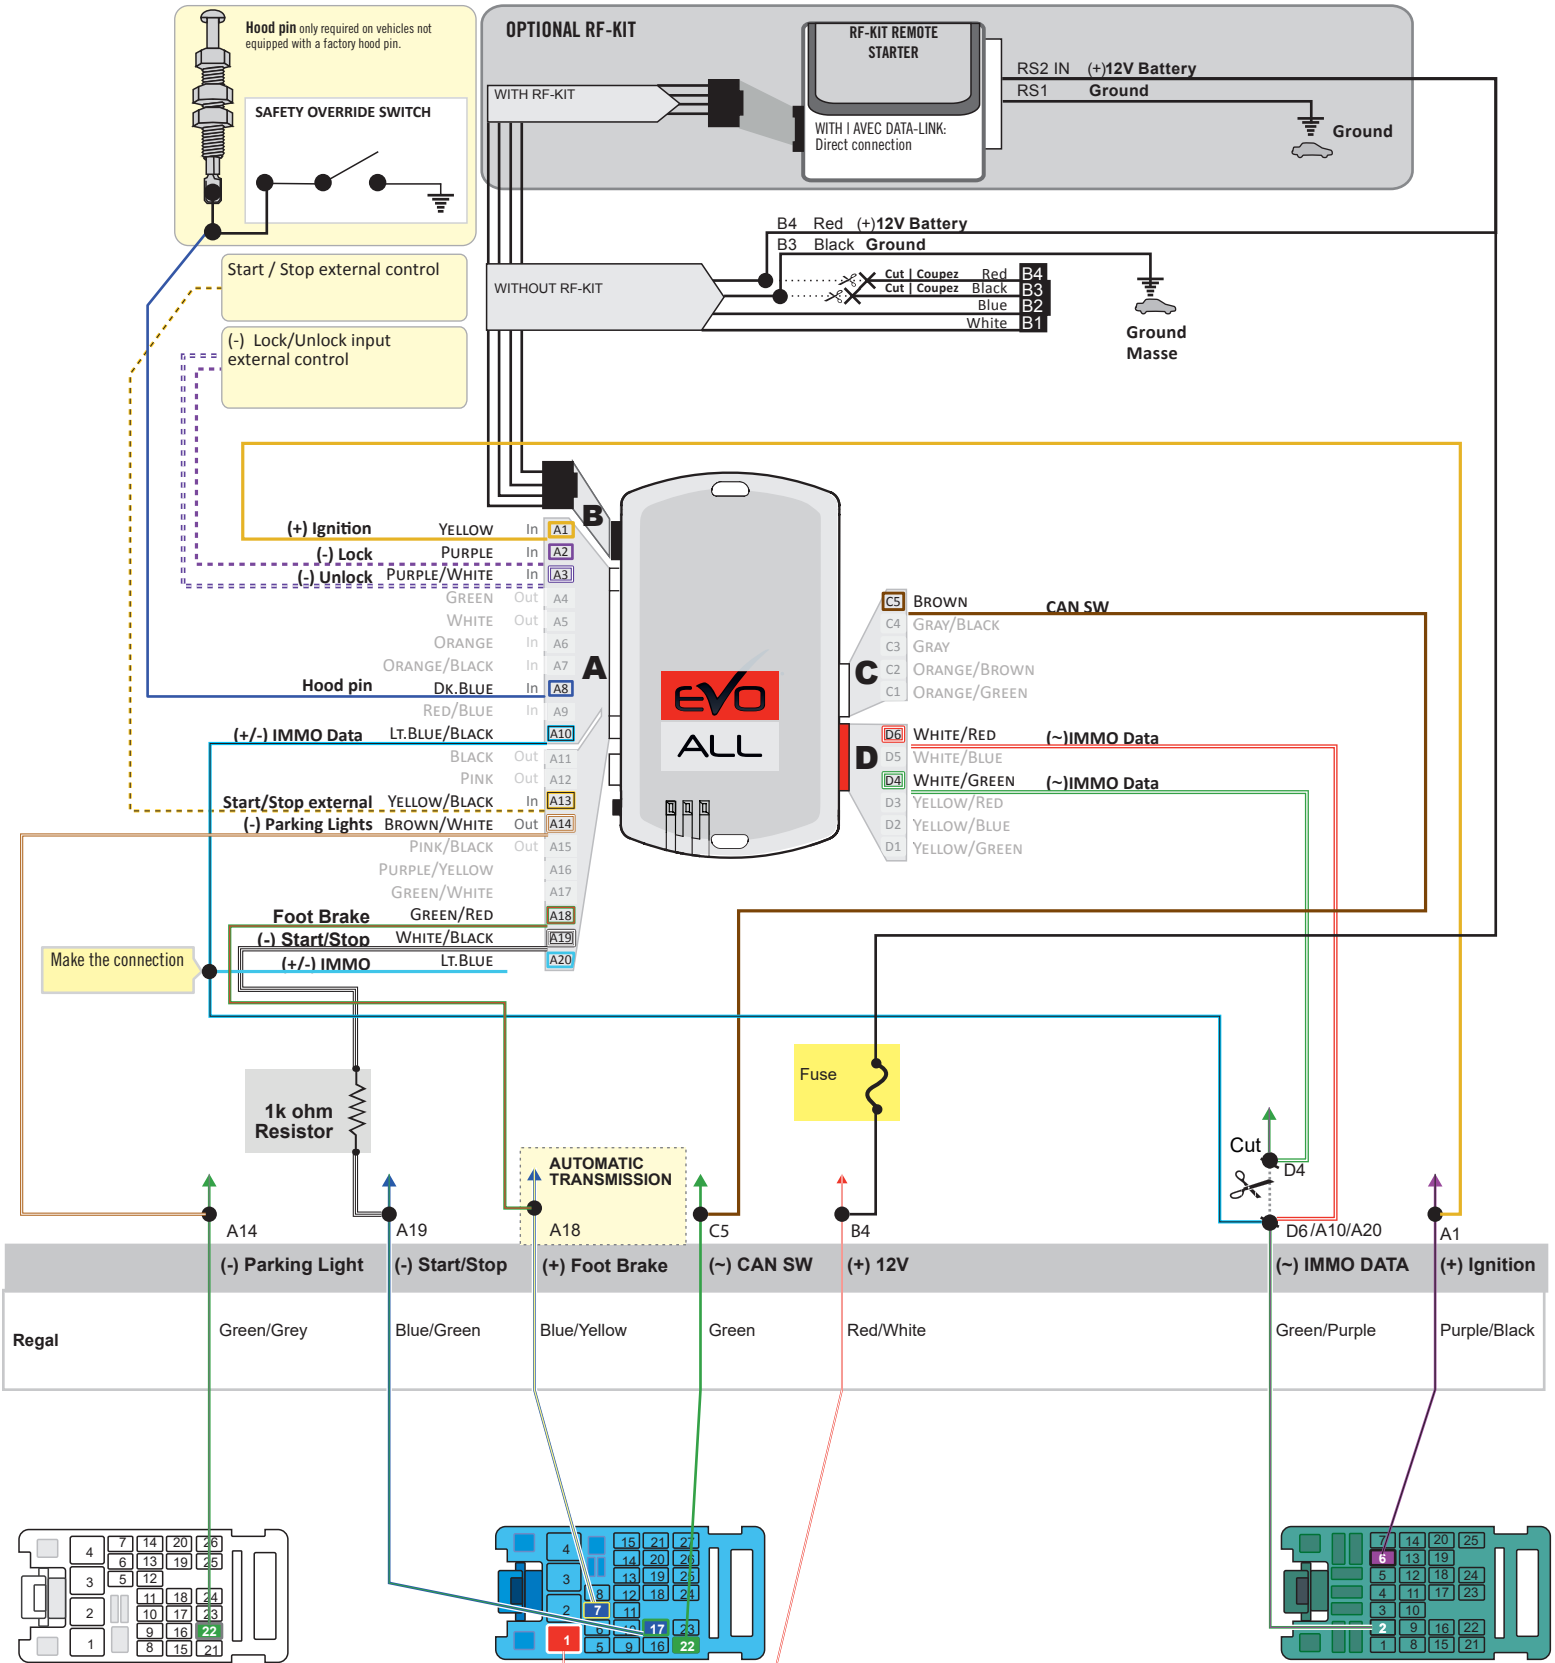


① Back view, 26-Pin White connector, at BCM.

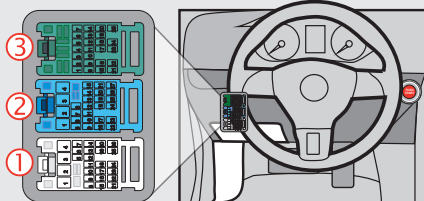

② Back view, 27-Pin Blue connector, at BCM.

③ Back view, 25-Pin Green connector, at BCM.


THAR-GM6 | AUTOMATIC TRANSMISSION CONNECTION

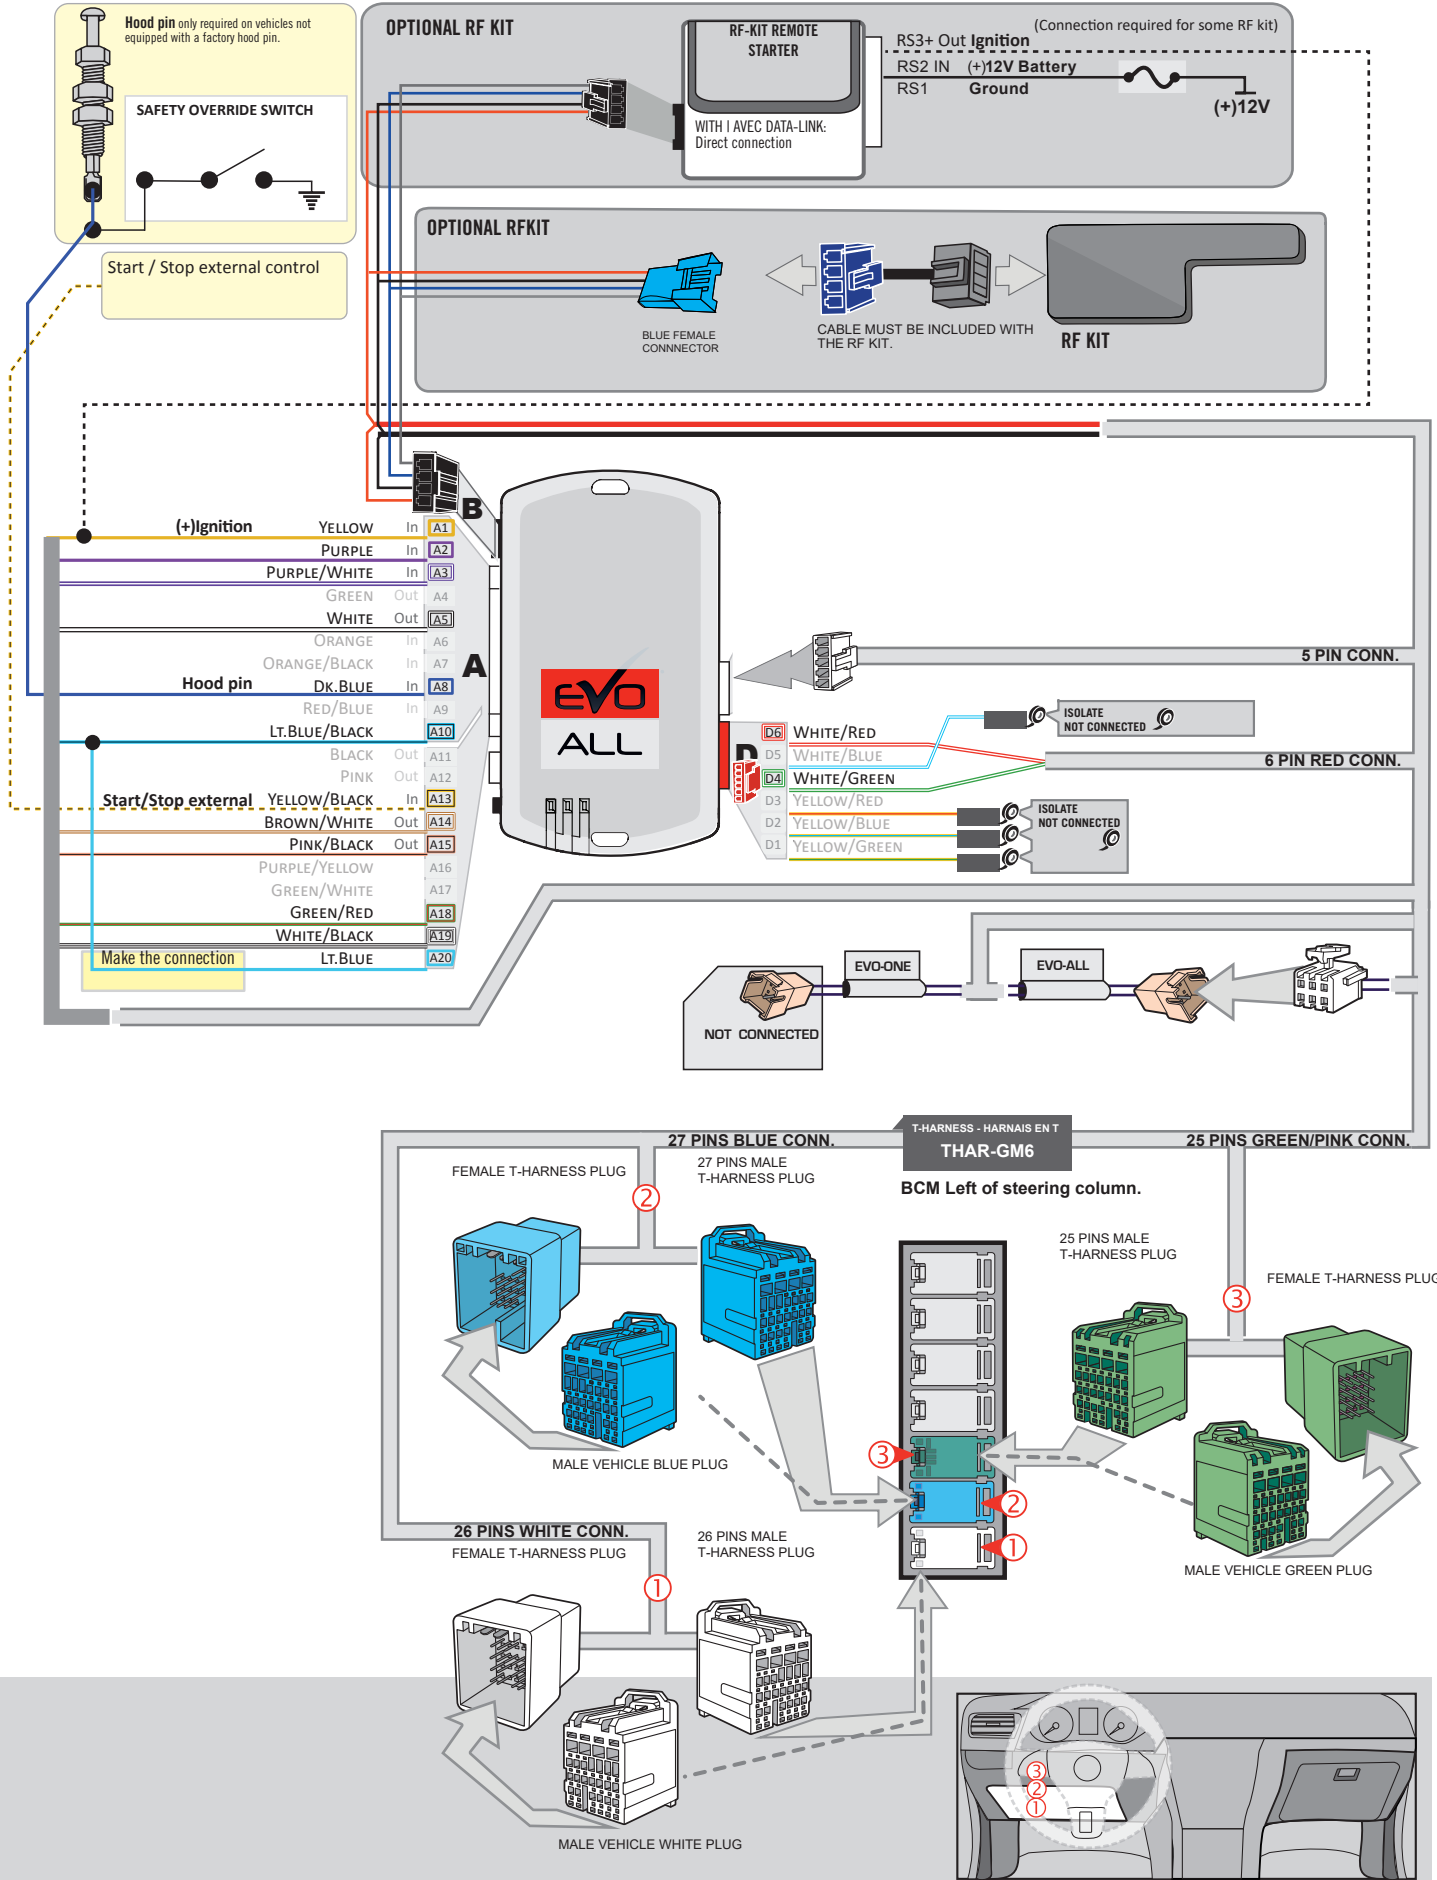


KEY BYPASS PROGRAMMING PROCEDURE 1/3



- 1** Remove the battery from the OEM remote
- 2** Place the OEM remote in the **back** cup holder in the center console.
Refer to vehicle user guide for keyport location.

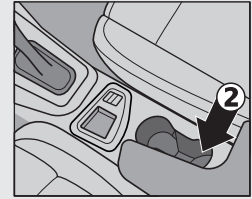


1

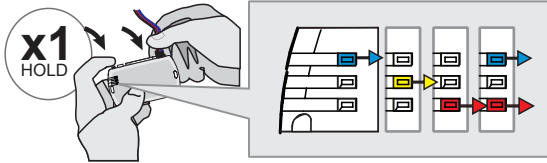

Press and hold the programming button:
Connect the 4-PIN Data-link harness (Black connector).


↳The Blue, Red, Yellow and Blue & Red LEDs will alternatively illuminate.

2

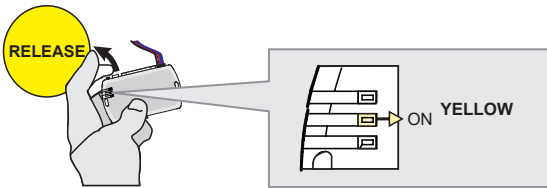


Release the programming button when the LED is **YELLOW**.

 If the LED is not solid YELLOW disconnect the 4-Pin connector (Data-Link) and go back to step 1.




3

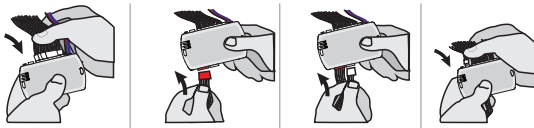

Insert the required remaining connectors.

4

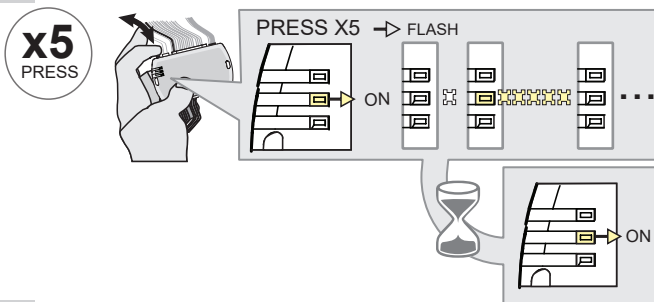


Press and release the programming button five (5x) times.

↳The **YELLOW LED** will flash 5 times each second.


↳**WAIT** for the **YELLOW LED** to turn **ON** solide.

 5



Open the driver door.

6

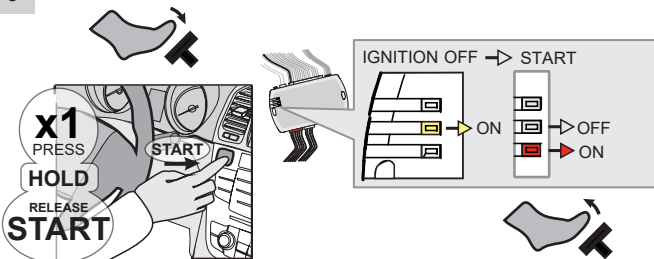

Press the foot-brake pedal.

Press the Push-to-Start button until the engine start.

Release the foot-brake pedal.

↳The **RED LED** will turn **ON**.
↳The **YELLOW LED** will turn **OFF**.


KEY BYPASS PROGRAMMING PROCEDURE 2/3

7




Press the Push-to-Start button until the engine turn OFF.

8

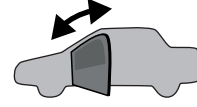

Close and open the driver door.

9

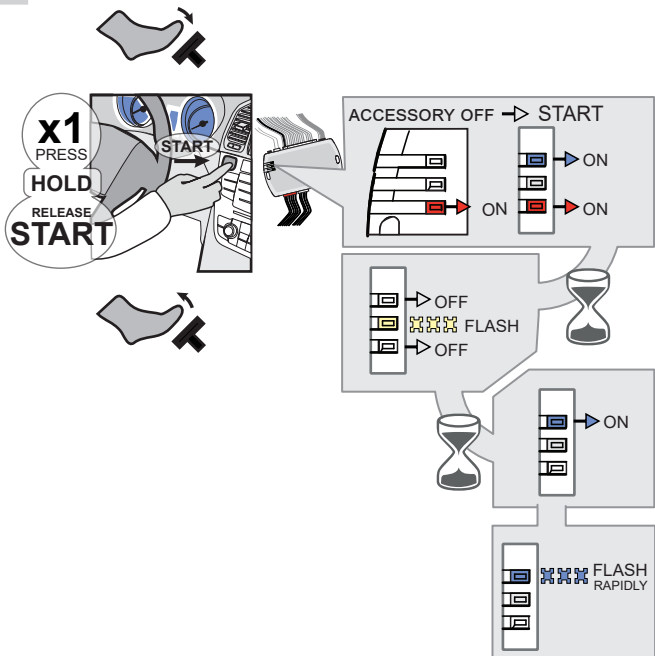


Press the foot-brake pedal.

Press the Push-to-Start button until the engine start.

Release the foot-brake pedal.

- ↳ The BLUE LED will turn ON.
- ↳ The BLUE LED will turn OFF. The RED LED will turn OFF.
- ↳ The YELLOW LED will flash rapidly
- ↳ The BLUE LED will turn ON.
- ↳ The BLUE LED will flash rapidly


10

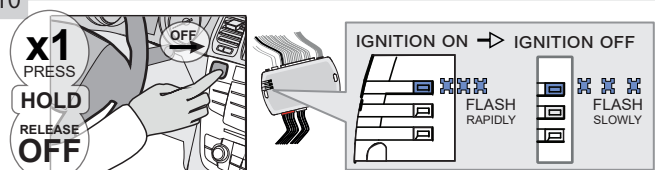

Press the Push-to-Start button until the engine turn OFF.


- ↳ The BLUE LED will flash slowly

11

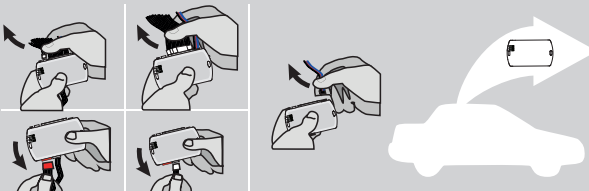

Disconnect all the connectors and after the Data-Link (4-pins) connector.

12

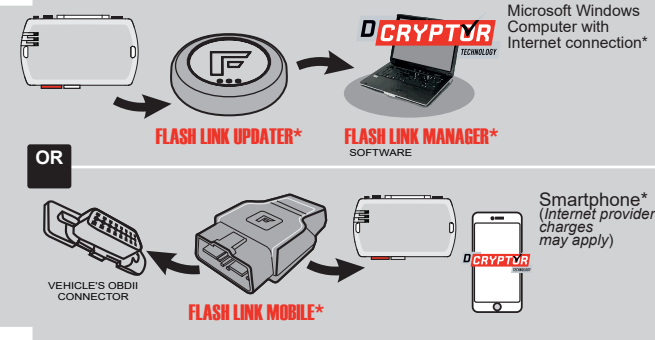

Microsoft Windows Computer with Internet connection*

FLASH LINK UPDATER* **FLASH LINK MANAGER*** SOFTWARE

OR


VEHICLE'S OBDII CONNECTOR **FLASH LINK MOBILE*** Smartphone* (Internet provider charges may apply)

Use the tool: FLASH LINK UPDATER or FLASH LINK MOBILE to visit the DCryptor menu.

***Parts required (not included)**

KEY BYPASS PROGRAMMING PROCEDURE 3/3

13

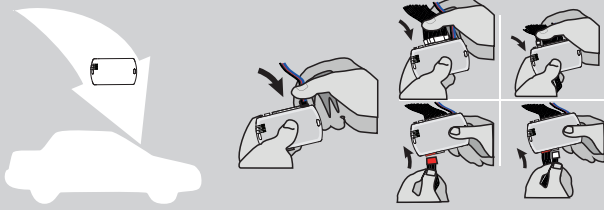

AFTER DCRYPTOR PROGRAMMING COMPLETED
 Go back to the vehicle and **reconnect** the 4-Pin (Data-Link) connector and after, all the remaining connector.



The module is now programmed.



REMOTE STARTER / ALARM VERIFICATION PROCEDURE

Test the remote starter. Remote start the vehicle.

OPTIONAL RF-KIT PROGRAMMING

PROGRAM BYPASS OPTION



Program bypass option:


H2

Supported RF-KITS enable

H2 Fortin 2

OPTIONAL FORTIN RF KIT SERIES 4 OR SERIES 9 PROGRAMMING

The module must be programmed on the vehicle.

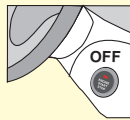

MAKE SURE THE IGNITION KEY HAS BEEN IN THE OFF POSITION FOR AT LEAST 5 SECONDS.

	1	2	3	4	5	6
	<p>ON</p> <p>x1 PRESS (HOLD) START</p> <p>Press the foot-brake pedal. Press the Push-to-Start button until the engine start. Release the foot-brake pedal.</p>	<p>OFF</p> <p>x1 PRESS (HOLD) START OFF</p> <p>Press the Push-to-Start button until the engine turn OFF.</p>	<p>ON</p> <p>x1 PRESS (HOLD) START</p> <p>Press the foot-brake pedal. Press the Push-to-Start button until the engine start. Release the foot-brake pedal.</p>	<p>4X BRAKES</p> <p>x4 PRESS</p> <p>Press and release the brake pedal four times.</p>	<p>ON EACH TRANSMITTER</p> <p>4 BUTTONS</p> <p>[-] PRESS AND RELEASE</p> <p>→ PRESS AND RELEASE</p> <p>[LOCK] PRESS AND RELEASE</p> <p>1 BUTTON</p> <p>⏻ PRESS APPROX. 12 SEC. AND WAIT FOR THE BLUE LED TO TURN OFF THEN BACK ON SOLID THEN RELEASE.</p>	<p>OFF</p> <p>x1 PRESS (HOLD) START OFF</p> <p>Press the Push-to-Start button until the engine turn OFF.</p>
			<p>The LED will turn ON solide.</p>	<p>The LED will flash rapidly.</p>	<p>The LED will turn off each time.</p>	<p>The LED will turn Off.</p>
	<p>The YELLOW LED will turn ON solid.</p>	<p>The YELLOW LED will turn Off.</p>	<p>The YELLOW LED will turn ON solid.</p>	<p>The 3 LED will turn ON solid.</p>	<p>The LED will flash rapidly.</p>	<p>The 3 LED will turn off.</p>
				<p>The 3 LED will turn ON solid.</p>	<p>The 3 LED will flash rapidly.</p>	<p>The 3 LED will turn off each time.</p>



REMOTE STARTER FUNCTIONALITY |



All doors must be closed.

 


Remote start the vehicle.



Unlock the doors with either:

- The OEM remote
- The remote-starter remote
- Or the proximity remote



Enter the vehicle with the Intelligent Key.



The vehicle can now be put in to gear and driven.

If the vehicle is not unlocked with one of these conditions the remote-starter will shut down as soon as any door is opened.



STAND ALONE INSTALLATION AND THAR-GM6
INSTALLATION

ADDENDUM - SUGGESTED WIRING CONFIGURATION



ONLY COMPATIBLE WITH AUTOMATIC TRANSMISSION VEHICLES.



VEHICLE

YEARS

Vehicle functions supported in this diagram (functional if equipped)

BUICK

Regal	Push-To-Start	2018-2019	•	•	•	•	•	•	•	•	•	•	•	•	•	•
-------	---------------	-----------	---	---	---	---	---	---	---	---	---	---	---	---	---	---



FIRMWARE VERSION

70.[41]

GM MINIMUM

To add the firmware version and the options, use the **FLASH LINK UPDATER** or **FLASH LINK MOBILE** tool, sold separately.

IF THE VEHICLE IS NOT EQUIPPED WITH FUNCTIONAL HOOD PIN:

A11

OFF

Hood trigger (Output Status).



Program bypass option:

UNIT OPTION

DESCRIPTION

C1


OEM Remote status (Lock/Unlock) monitoring

D6

Push-to-Start



ATTENTION!

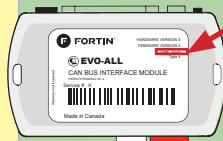

DATE: XX-XX

E5

OFF

SPECIAL FUNCTIONS: BY DEFAULT DEACTIVATED

ON

MANUFACTURED MODULES BETWEEN: 04/2018 TO 04/2019

MANDATORY INSTALL

*HOOD PIN



HOOD STATUS: THE HOOD PIN SWITCH MUST BE INSTALLED IF THE VEHICLE CAN BE REMOTE STARTED WITH THE HOOD OPEN, SET FUNCTION **A11** TO OFF.

A11

OFF

Notice: the installation of safety elements are mandatory. The hood pin is an essential security element and must be installed.

THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.

PARTS REQUIRED (NOT INCLUDED)


1x **FLASH LINK UPDATER**
 1x **FLASH LINK MANAGER**
 SOFTWARE
 1x Microsoft Windows Computer with Internet connection

OR


1x **FLASH LINK MOBILE**
 1x **FLASH LINK MOBILE APP**
 Smartphone *Android* or *iOS* with Internet connection (*provider charges may apply*).
 1x

MANDATORY

HOOD PIN



REMOTE START SAFETY OVERRIDE SWITCH

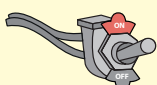
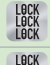





VALET SWITCH


Part #: RSPB available, Sold separately.

Notice: the installation of safety elements are mandatory. The hood pin and the valet switch are essential security elements and must be installed.


STAND ALONE CONFIGURATION

	Program bypass option	UNIT OPTION	DESCRIPTION
	OEM Remote Stand Alone Remote Starter:	D1.10 	By default, LOCK, LOCK, LOCK Par défaut, VERROUILLE,VERROUILLE,VERROUILLE
		D1.1 	
	Program bypass option with oem remote:	C1	OEM Remote Monitoring
	Program bypass option with RF KIT antenna:	H1 to H6	Supported RF Kits and select RF Kit


REMOTE STARTER FUNCTIONALITY




All doors must be closed.

3X 

Press the OEM remote's Lock button 3x to remote-start (or remote-stop) the vehicle.




START 

The vehicle will START.

REMOTE STARTER DIAGNOSTICS
MODULE RED LED


x2 flash :	Brake ON
x3 flash :	No tach
x4 flash :	Ignition before start
x5 flash :	Hood Open

REMOTE STARTER WARNING CARD



CUT THIS WARNING CARD AND STICK IT ON A VISIBLE PLACE:
 or use the package **RSPB**, Sold separately.

WARNING



REMOTE STARTER

THE VEHICLE CAN BE STARTED BY EITHER: PRESSING THE LOCK BUTTON ON THE OEM REMOTE 3 TIMES CONSECUTIVELY OR BY A SMARTPHONE. **TURN ON** THE SAFETY SWITCH LOCATED UNDER THE DASHBOARD BEFORE WORKING ON THE VEHICLE.

DESCRIPTION

Parts required (Not included)		PAGE
-------------------------------	--	------






WIRE TO WIRE DIAGRAM

AUTOMATIC TRANSMISSION	1X 5 Amp Fuse 1X 1k Ohm Resistor	Page 4
------------------------	-------------------------------------	--------





THARNES DIAGRAM

THARNES THAR-GM6	AUTOMATIC TRANSMISSION	1x THAR-GM6	Page 5
------------------	------------------------	-------------	--------


Regal
2018-2019

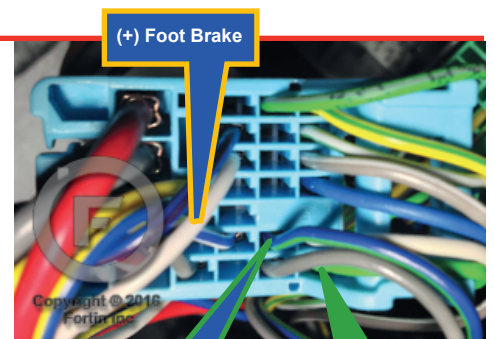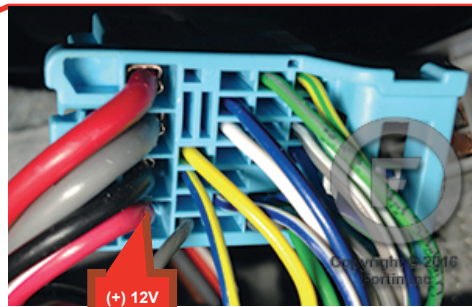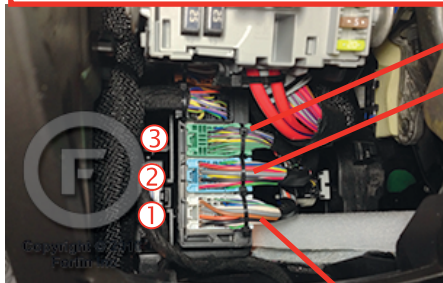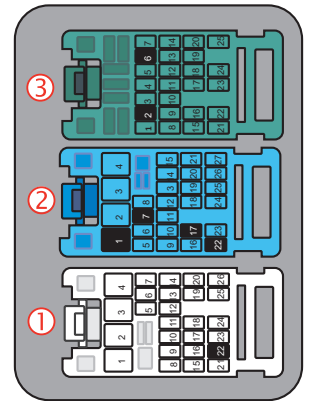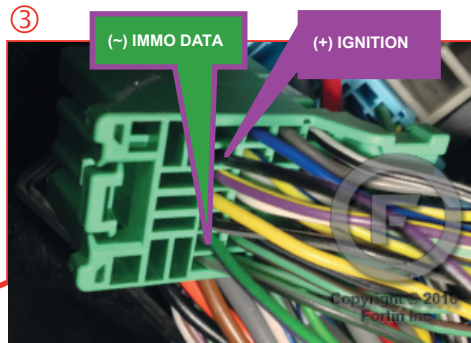

AUTOMATIC TRANSMISSION WIRING CONNECTION

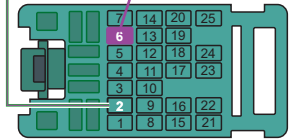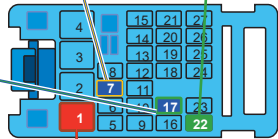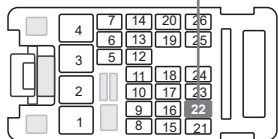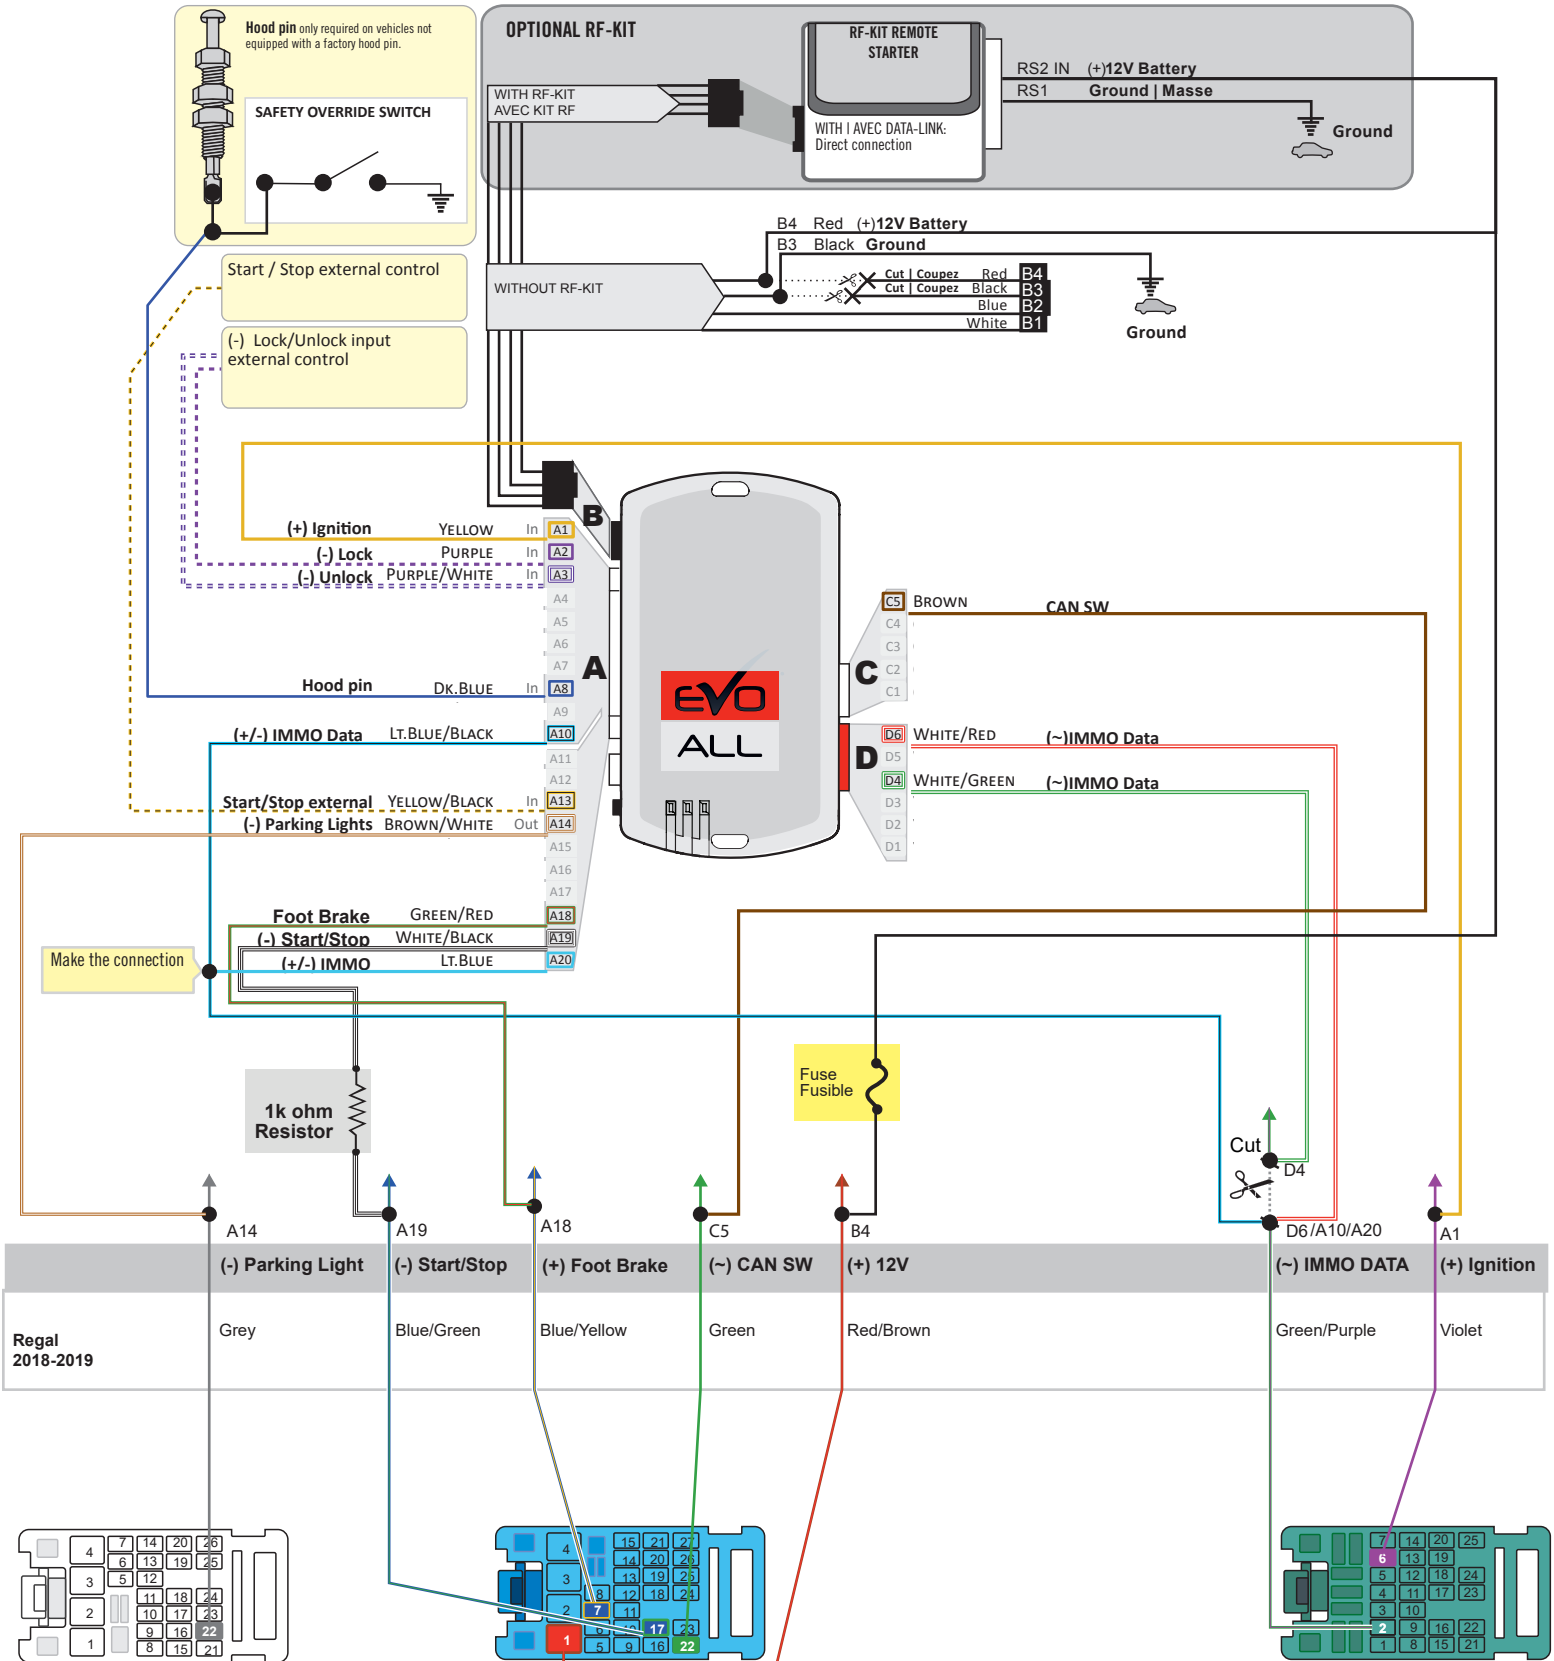


① Back view, 26-Pin White connector, at BCM.

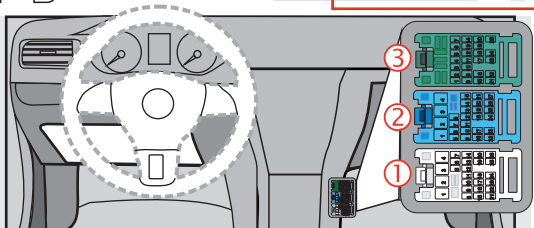


② Back view, 27-Pin Blue connector, at BCM.

③ Back view, 25-Pin Green connector, at BCM.


THAR-GM6 | AUTOMATIC TRANSMISSION CONNECTION

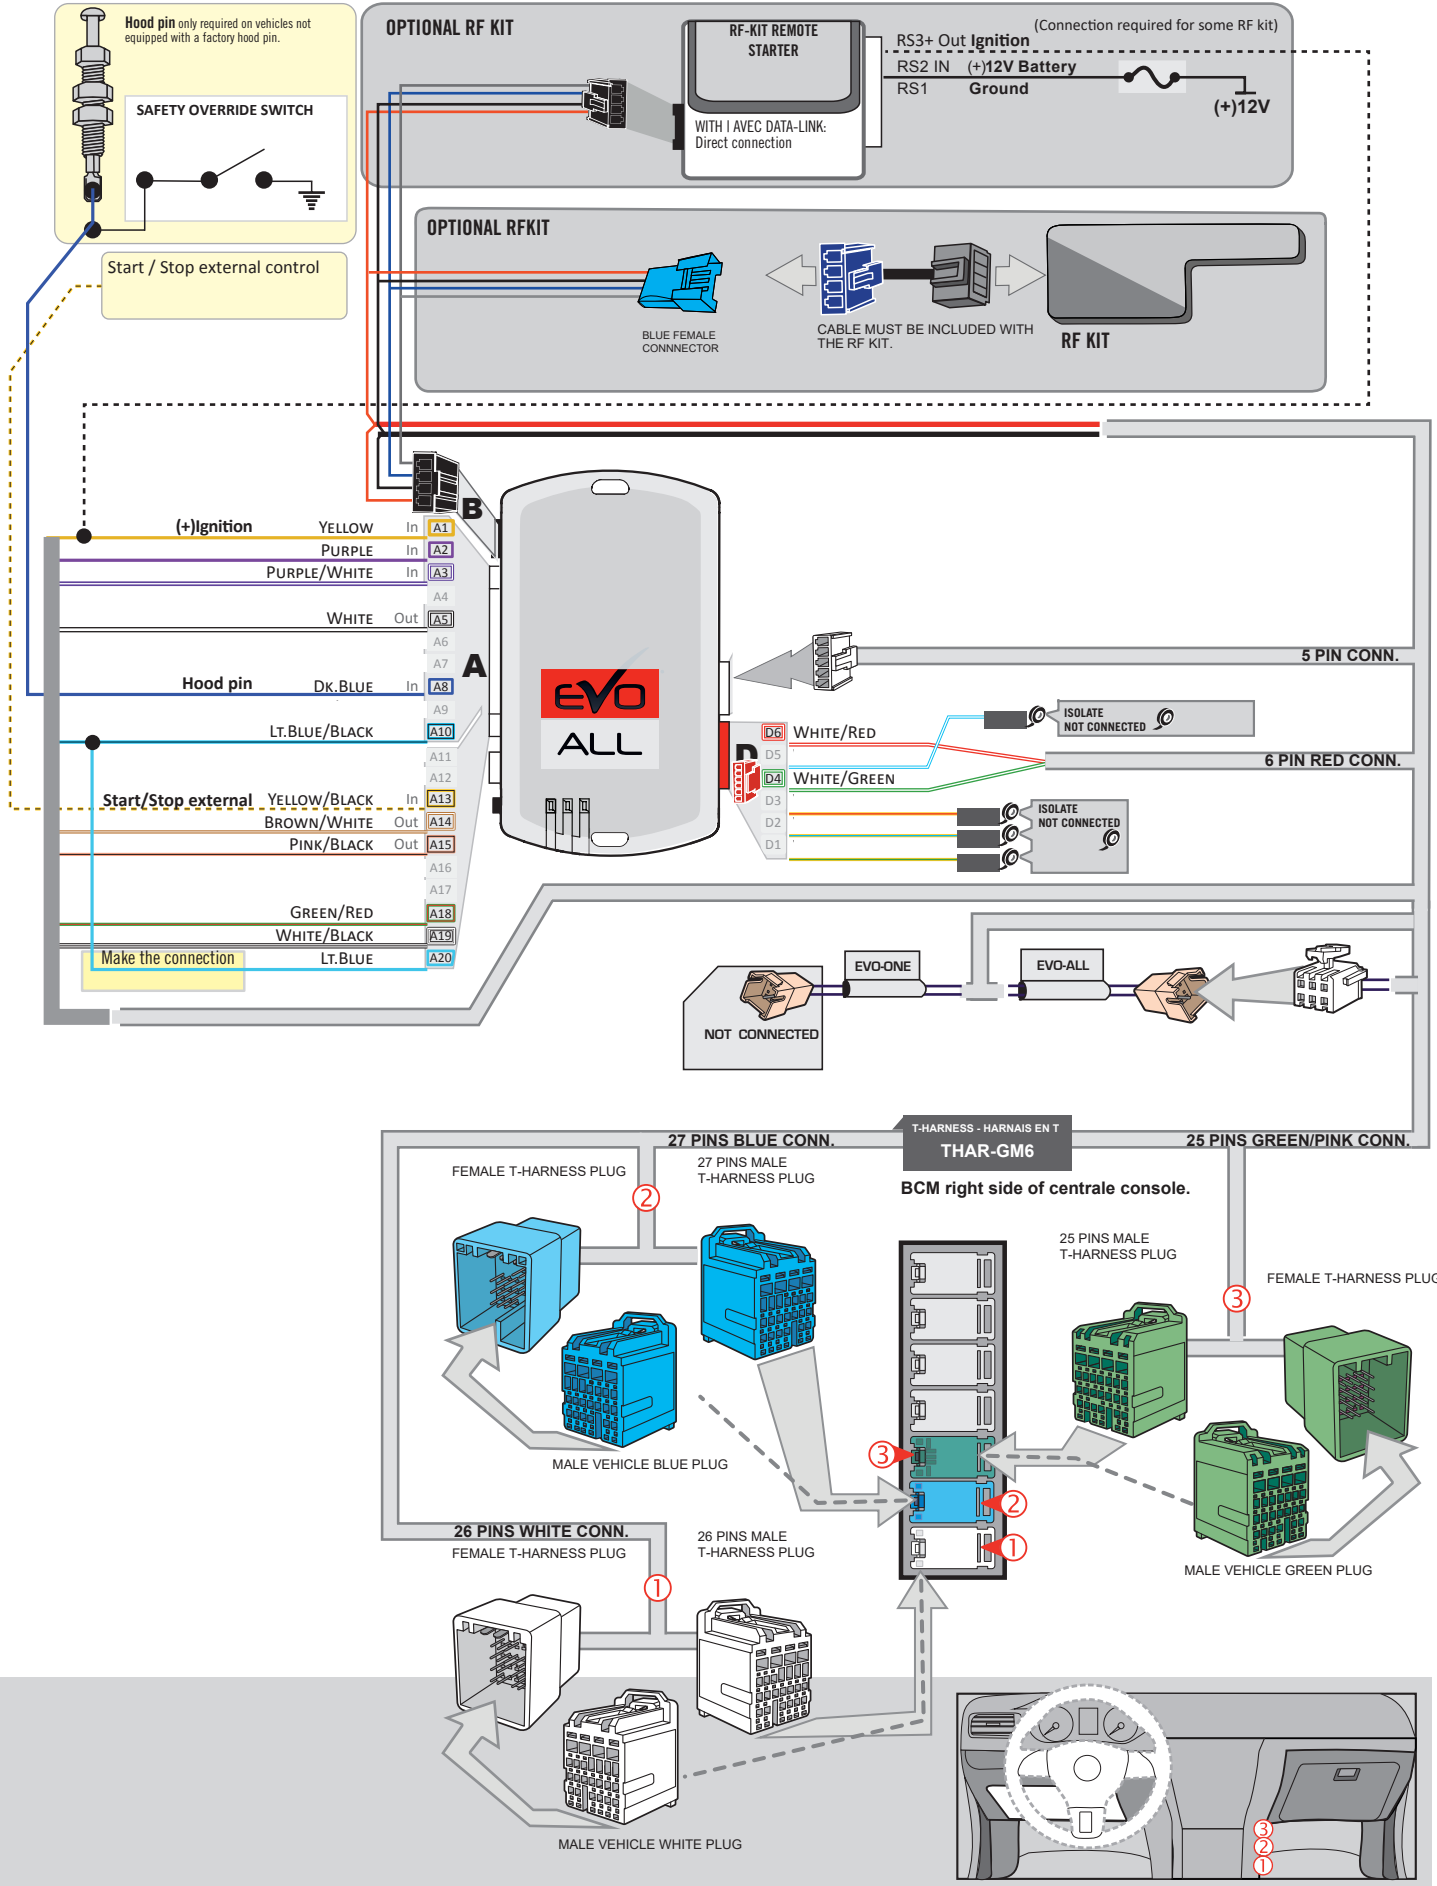


KEY BYPASS PROGRAMMING PROCEDURE 1/3 |



- 1 Remove** the battery from the OEM remote.
- 2 Place** the OEM remote in the **back** cup holder in the center console.
Refer to vehicle user guide for keyport location.




1

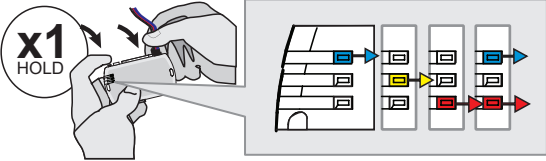

Press and hold the programming button:
Connect the 4-PIN Data-link harness (Black connector).


↳The Blue, Red, Yellow and Blue & Red LEDs will alternatively illuminate.

2

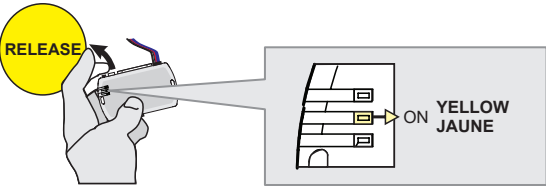

Release the programming button when the LED is **YELLOW**.

 
If the LED is not solid YELLOW disconnect the 4-Pin connector (Data-Link) and go back to step 1.



3

Insert the required remaining connectors.

4

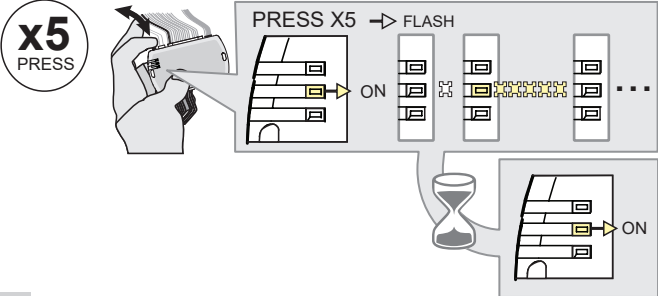

Press and release the programming button five (5x) times.


↳The **YELLOW LED** will flash 5 times each second.

↳**WAIT** for the **YELLOW LED** to turn **ON** solide.

5

Open the driver door.

6

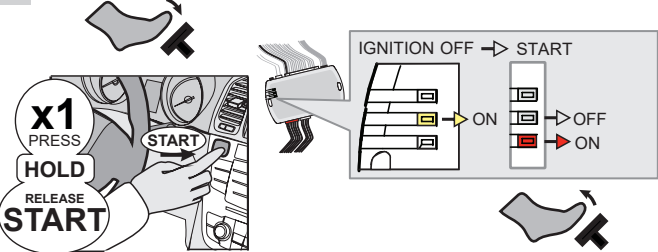

Press the foot-brake pedal.

Press the Push-to-Start button until the engine start.

Release the foot-brake pedal.

↳The **RED LED** will turn **ON**.
↳The **YELLOW LED** will turn **OFF**.


KEY BYPASS PROGRAMMING PROCEDURE 2/3

7




Press the Push-to-Start button until the engine turn OFF.

8

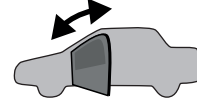

Close and open the driver door.

9

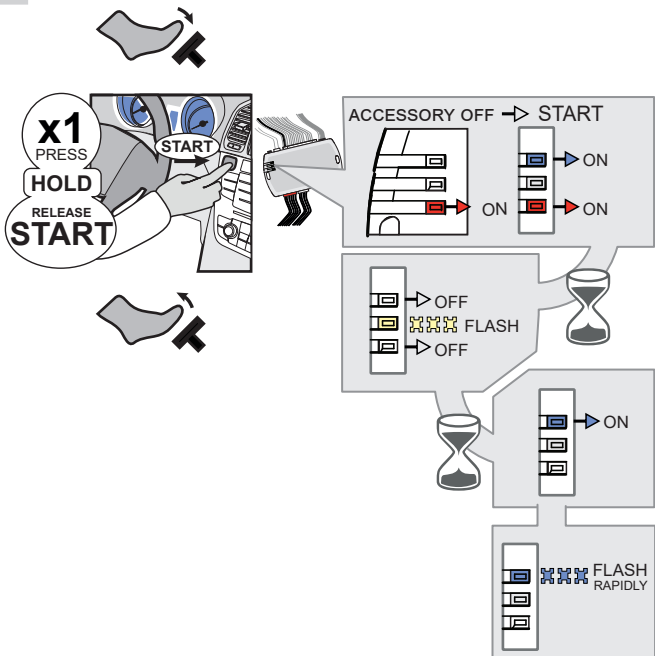


Press the foot-brake pedal.

Press the Push-to-Start button until the engine start.

Release the foot-brake pedal.

- ↳ The BLUE LED will turn ON.
- ↳ The BLUE LED will turn OFF. The RED LED will turn OFF.
- ↳ The YELLOW LED will flash rapidly
- ↳ The BLUE LED will turn ON.
- ↳ The BLUE LED will flash rapidly


10

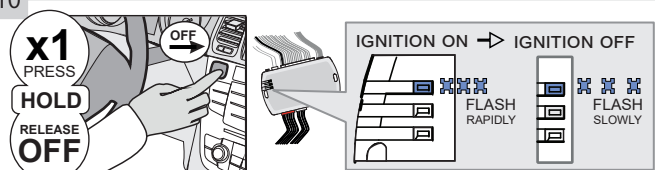

Press the Push-to-Start button until the engine turn OFF.


- ↳ The BLUE LED will flash slowly

11

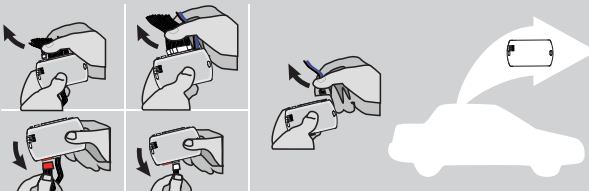

Disconnect all the connectors and after the Data-Link (4-pins) connector.

12


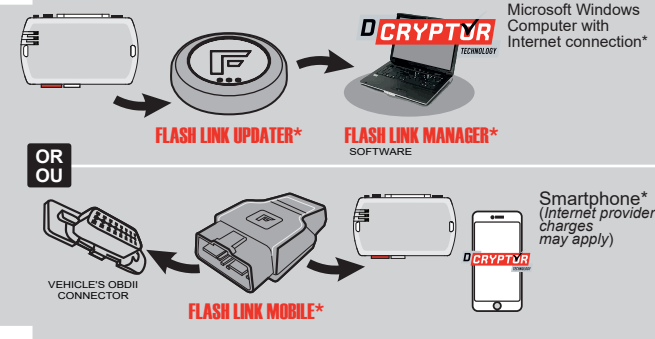


Use the tool: FLASH LINK UPDATER or FLASH LINK MOBILE to visit the DCryptor menu.

*Parts required (not included)

KEY BYPASS PROGRAMMING PROCEDURE 3/3

13

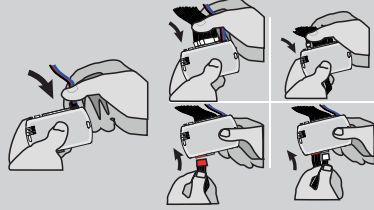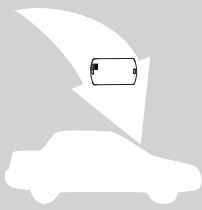

AFTER DCRYPTOR PROGRAMMING COMPLETED
Go back to the vehicle and **reconnect** the 4-Pin (Data-Link) connector and after, all the remaining connector.



The module is now programmed.



REMOTE STARTER / ALARM VERIFICATION PROCEDURE


Test the remote starter. Remote start the vehicle.

OPTIONAL RF-KIT PROGRAMMING


PROGRAM BYPASS OPTION

	<p>Program bypass option:</p>	<p>H2</p>	<p>Supported RF-KITS enable</p> <p>H2 Fortin 2</p>

OPTIONAL FORTIN RF KIT SERIES 4 OR SERIES 9 PROGRAMMING




The module must be programmed on the vehicle.



MAKE SURE THE IGNITION KEY HAS BEEN IN THE OFF POSITION FOR AT LEAST 5 SECONDS.

1

ON




x1 PRESS (HOLD) START

Press the foot-brake pedal. Press the Push-to-Start button until the engine start. Release the foot-brake pedal.

2

OFF




x1 PRESS (HOLD) START OFF

Press the Push-to-Start button until the engine turn OFF.

3

ON




x1 PRESS (HOLD) START

Press the foot-brake pedal. Press the Push-to-Start button until the engine start. Release the foot-brake pedal.

4

4X BRAKES




x4 PRESS

Press and release the brake pedal four times.

5

ON EACH TRANSMITTER


4 BUTTONS



PRESS AND RELEASE

PRESS AND RELEASE


1 BUTTON



PRESS APPROX. 12 SEC. AND WAIT FOR THE BLUE LED TO TURN OFF THEN BACK ON SOLID THEN RELEASE.


6

OFF




x1 PRESS (HOLD) START OFF


Press the Push-to-Start button until the engine turn OFF.

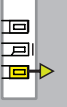


The YELLOW LED will turn ON solid.




The YELLOW LED will turn Off.

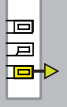


The YELLOW LED will turn ON solid.

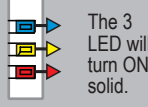


The 3 LED will turn ON solid.



The LED will flash rapidly.

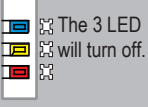

The 3 LED will turn off.



REMOTE STARTER FUNCTIONALITY



All doors must be closed.



Remote start the vehicle.



Unlock the doors with either:

- The OEM remote
- The remote-starter remote
- Or the proximity remote



Enter the vehicle with the Intelligent Key.



The vehicle can now be put in to gear and driven.

If the vehicle is not unlocked with one of these conditions the remote-starter will shut down as soon as any door is opened.





**STAND ALONE INSTALLATION AND THAR-GM6
INSTALLATION**

ADDENDUM - SUGGESTED WIRING CONFIGURATION



ONLY COMPATIBLE WITH AUTOMATIC TRANSMISSION VEHICLES.

VEHICLE	YEARS	Vehicle functions supported in this diagram (functional if equipped)															
		Immobilizer bypass	Lock	Unlock	Arm	Disarm	Parking Light	Trunk (open)	RAP Disable	Tachometer	Door Status	Trunk Status	Hand-Brake Status	Foot-Brake Status	OEM Remote Monitoring		
																	
CADILLAC																	
SRX	Push-To-Start	2010-2012	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•




FIRMWARE VERSION

70.[41]

GM MINIMUM

To add the firmware version and the options, use the **FLASH LINK UPDATER** or **FLASH LINK MOBILE** tool, sold separately.

IF THE VEHICLE IS NOT EQUIPPED WITH FUNCTIONAL HOOD PIN:	A11	OFF	Hood trigger (Output Status).
--	------------	------------	-------------------------------

	UNIT OPTION	DESCRIPTION
 <p>Program bypass option:</p>	C1	OEM Remote status (Lock/Unlock) monitoring
	D6	Push-to-Start

	ATTENTION!	 <p>DATE: XX-XX</p>	E5	OFF	<p>SPECIAL FUNCTIONS: BY DEFAULT DEACTIVATED</p>
				ON	<p>MANUFACTURED MODULES BETWEEN: 04/2018 TO 04/2019</p>

MANDATORY INSTALL

*HOOD PIN



HOOD STATUS: THE HOOD PIN SWITCH MUST BE INSTALLED IF THE VEHICLE CAN BE REMOTE STARTED WITH THE HOOD OPEN, SET FUNCTION **A11** TO OFF.

A11	OFF
------------	------------

Notice: the installation of safety elements are mandatory. The hood pin is an essential security element and must be installed.

THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.

PARTS REQUIRED (NOT INCLUDED)

1x **FLASH LINK UPDATER**,
 1x **FLASH LINK MANAGER**
 SOFTWARE
 1x Microsoft Windows Computer with Internet connection

OR

1x **FLASH LINK MOBILE**
 1x **FLASH LINK MOBILE APP**
 Smartphone *Android* or *iOS* with Internet connection (*provider charges may apply*).

MANDATORY

HOOD PIN REMOTE START SAFETY OVERRIDE SWITCH

Part #: RSPB available, Sold separately.
 Pièce #: RSPB disponible, vendu séparément.

Notice: the installation of safety elements are mandatory. The hood pin and the valet switch are essential security elements and must be installed.

STAND ALONE CONFIGURATION

	Program bypass option	UNIT OPTION	DESCRIPTION
	OEM Remote Stand Alone Remote Starter:	D1.10	By default, LOCK, LOCK, LOCK Par défaut, VERROUILLE,VERROUILLE,VERROUILLE
		D1.1	
	Program bypass option with oem remote:	C1	OEM Remote Monitoring
	Program bypass option with RF KIT antenna:	H1 to H6	Supported RF Kits and select RF Kit

REMOTE STARTER FUNCTIONALITY

All doors must be closed.

3X

Press the OEM remote's Lock button 3x to remote-start (or remote-stop) the vehicle.

The vehicle will START.

REMOTE STARTER DIAGNOSTICS
MODULE RED LED

x2 flash :	Brake ON
x3 flash :	No tach
x4 flash :	Ignition before start
x5 flash :	Hood Open

REMOTE STARTER WARNING CARD

CUT THIS WARNING CARD AND STICK IT ON A VISIBLE PLACE:
 or use the package **RSPB**, Sold separately.

WARNING

REMOTE STARTER

THE VEHICLE CAN BE STARTED BY EITHER: PRESSING THE LOCK BUTTON ON THE OEM REMOTE 3 TIMES CONSECUTIVELY OR BY A SMARTPHONE. **TURN ON** THE SAFETY SWITCH LOCATED UNDER THE DASHBOARD BEFORE WORKING ON THE VEHICLE.

DESCRIPTION

Parts required (Not included) PAGE








WIRE TO WIRE DIAGRAM

1X 5 Amp Fuse 1X 1k Ohm Resistor	Page 4
-------------------------------------	--------






THARNES DIAGRAM

THARNES THAR-GM6	1x THAR-GM6	Page 5
------------------	-------------	--------

BCM

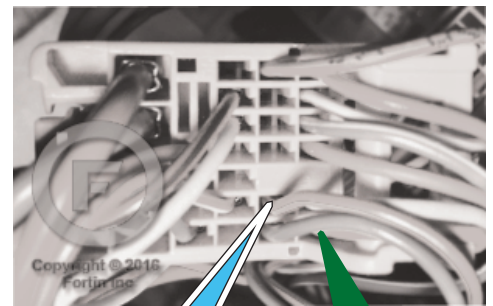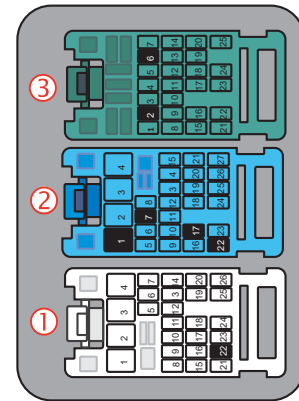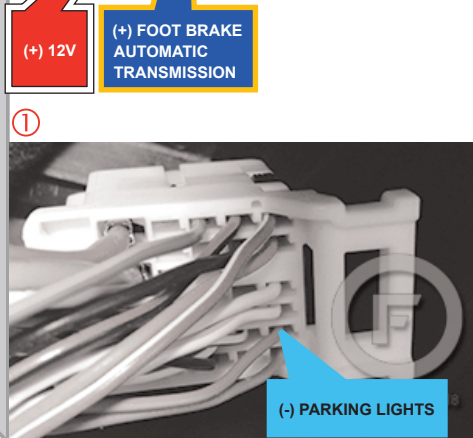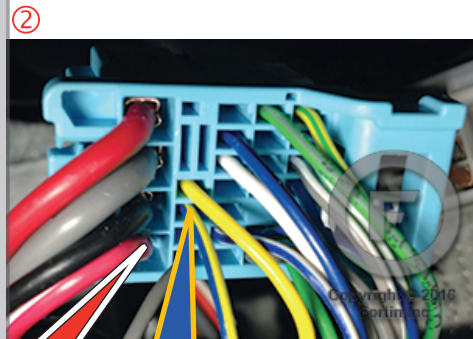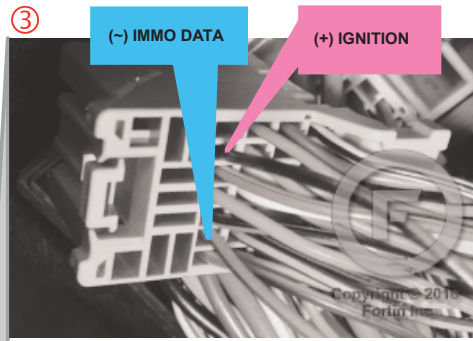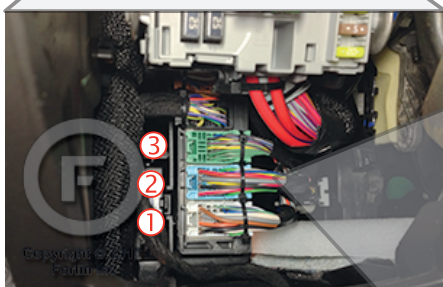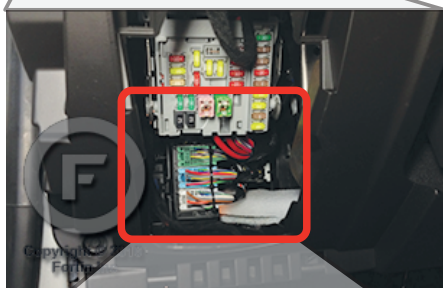

AUTOMATIC TRANSMISSION WIRING CONNECTION

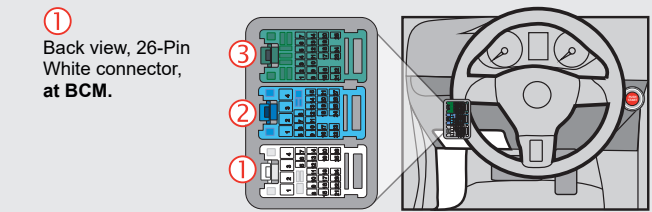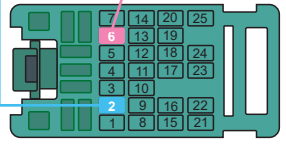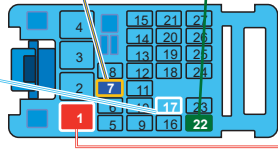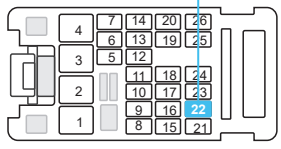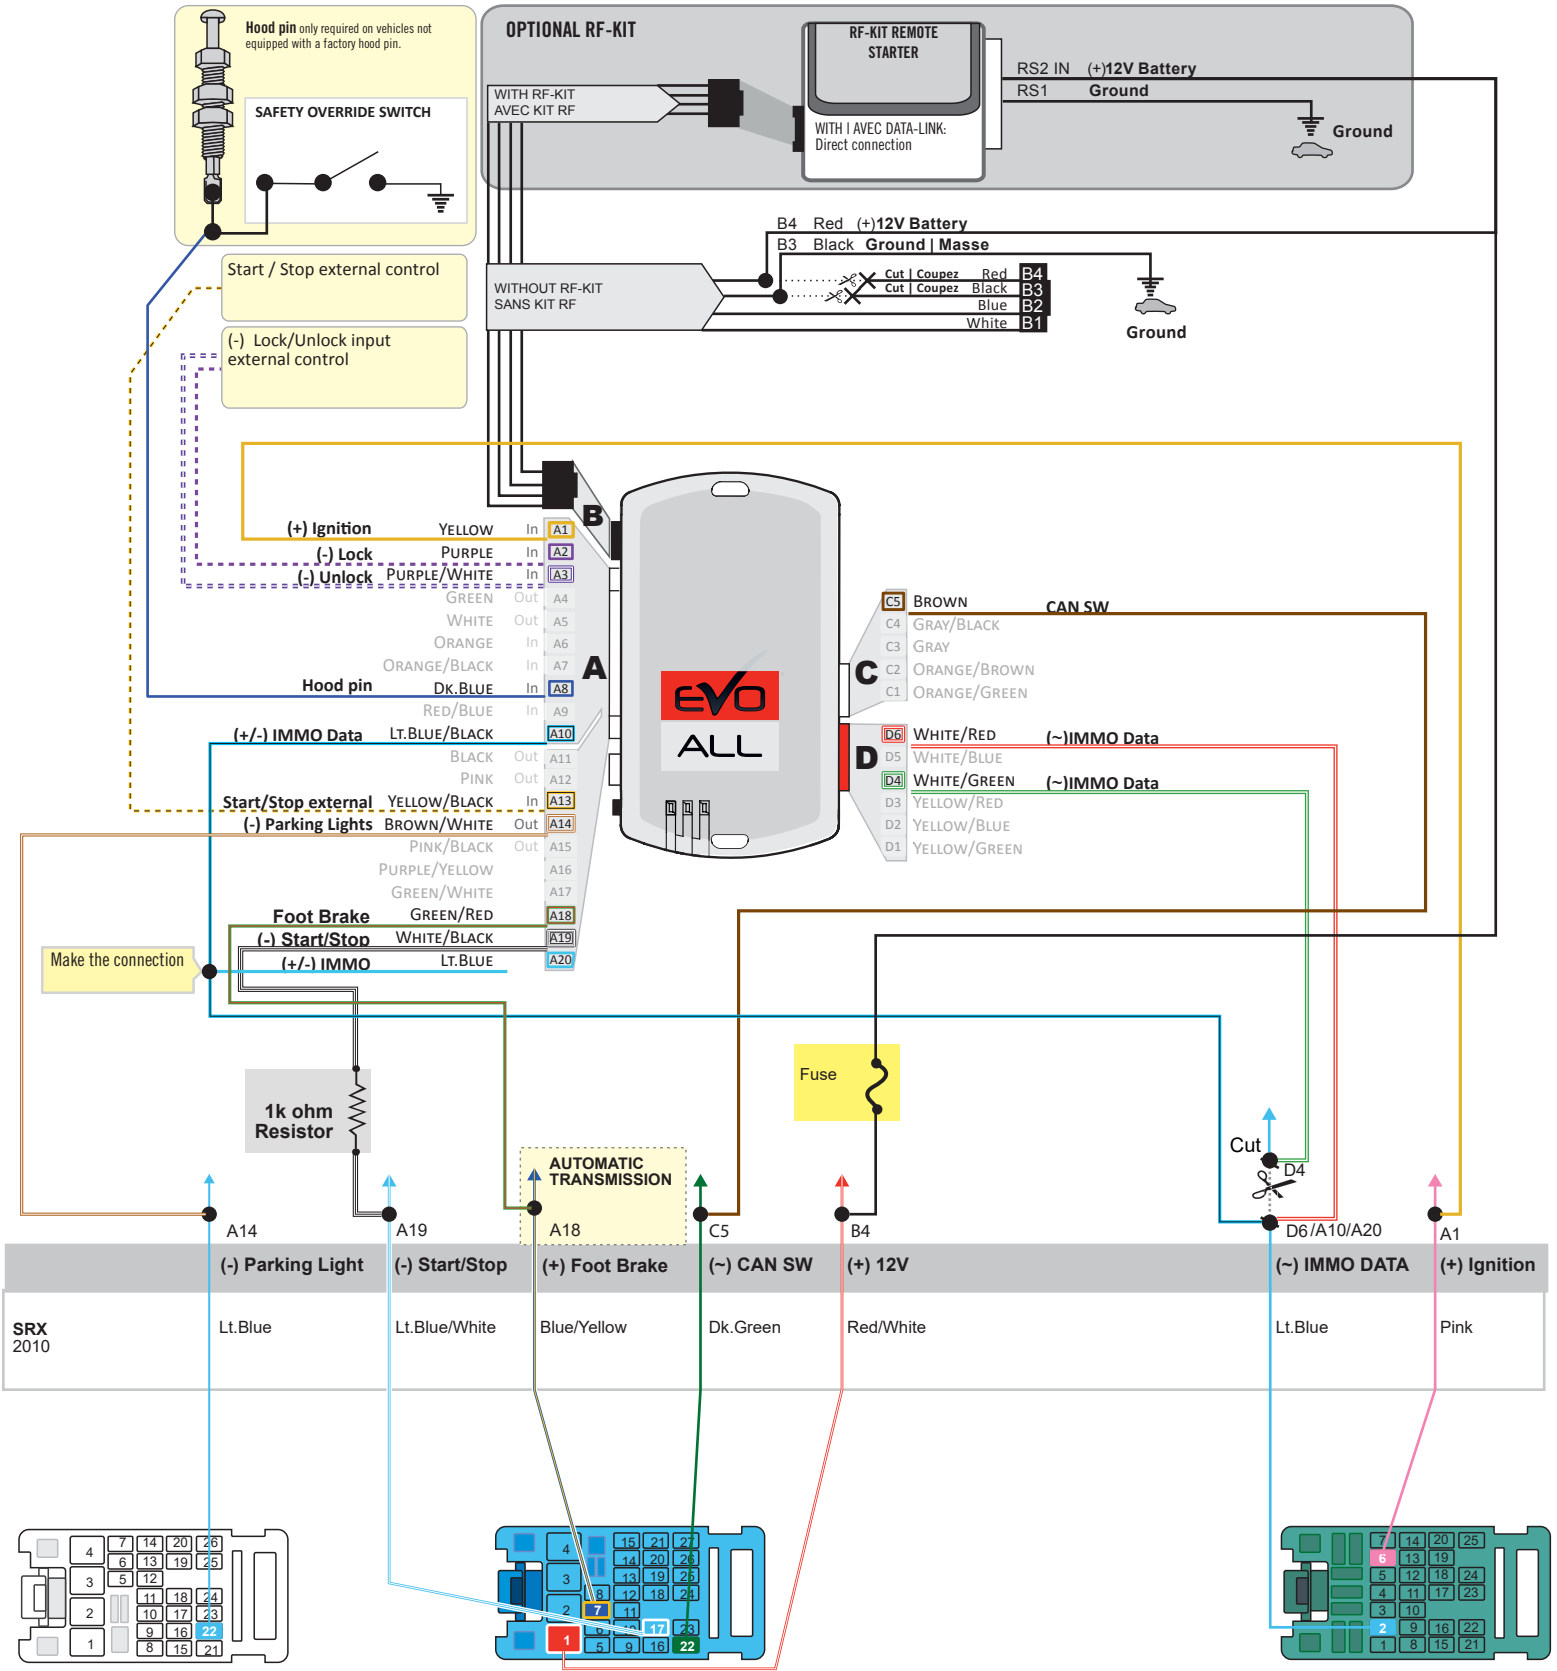


① Back view, 26-Pin White connector, at BCM.


② Back view, 27-Pin Blue connector, at BCM.

③ Back view, 25-Pin Green connector, at BCM.

THAR-GM6 | AUTOMATIC TRANSMISSION CONNECTION

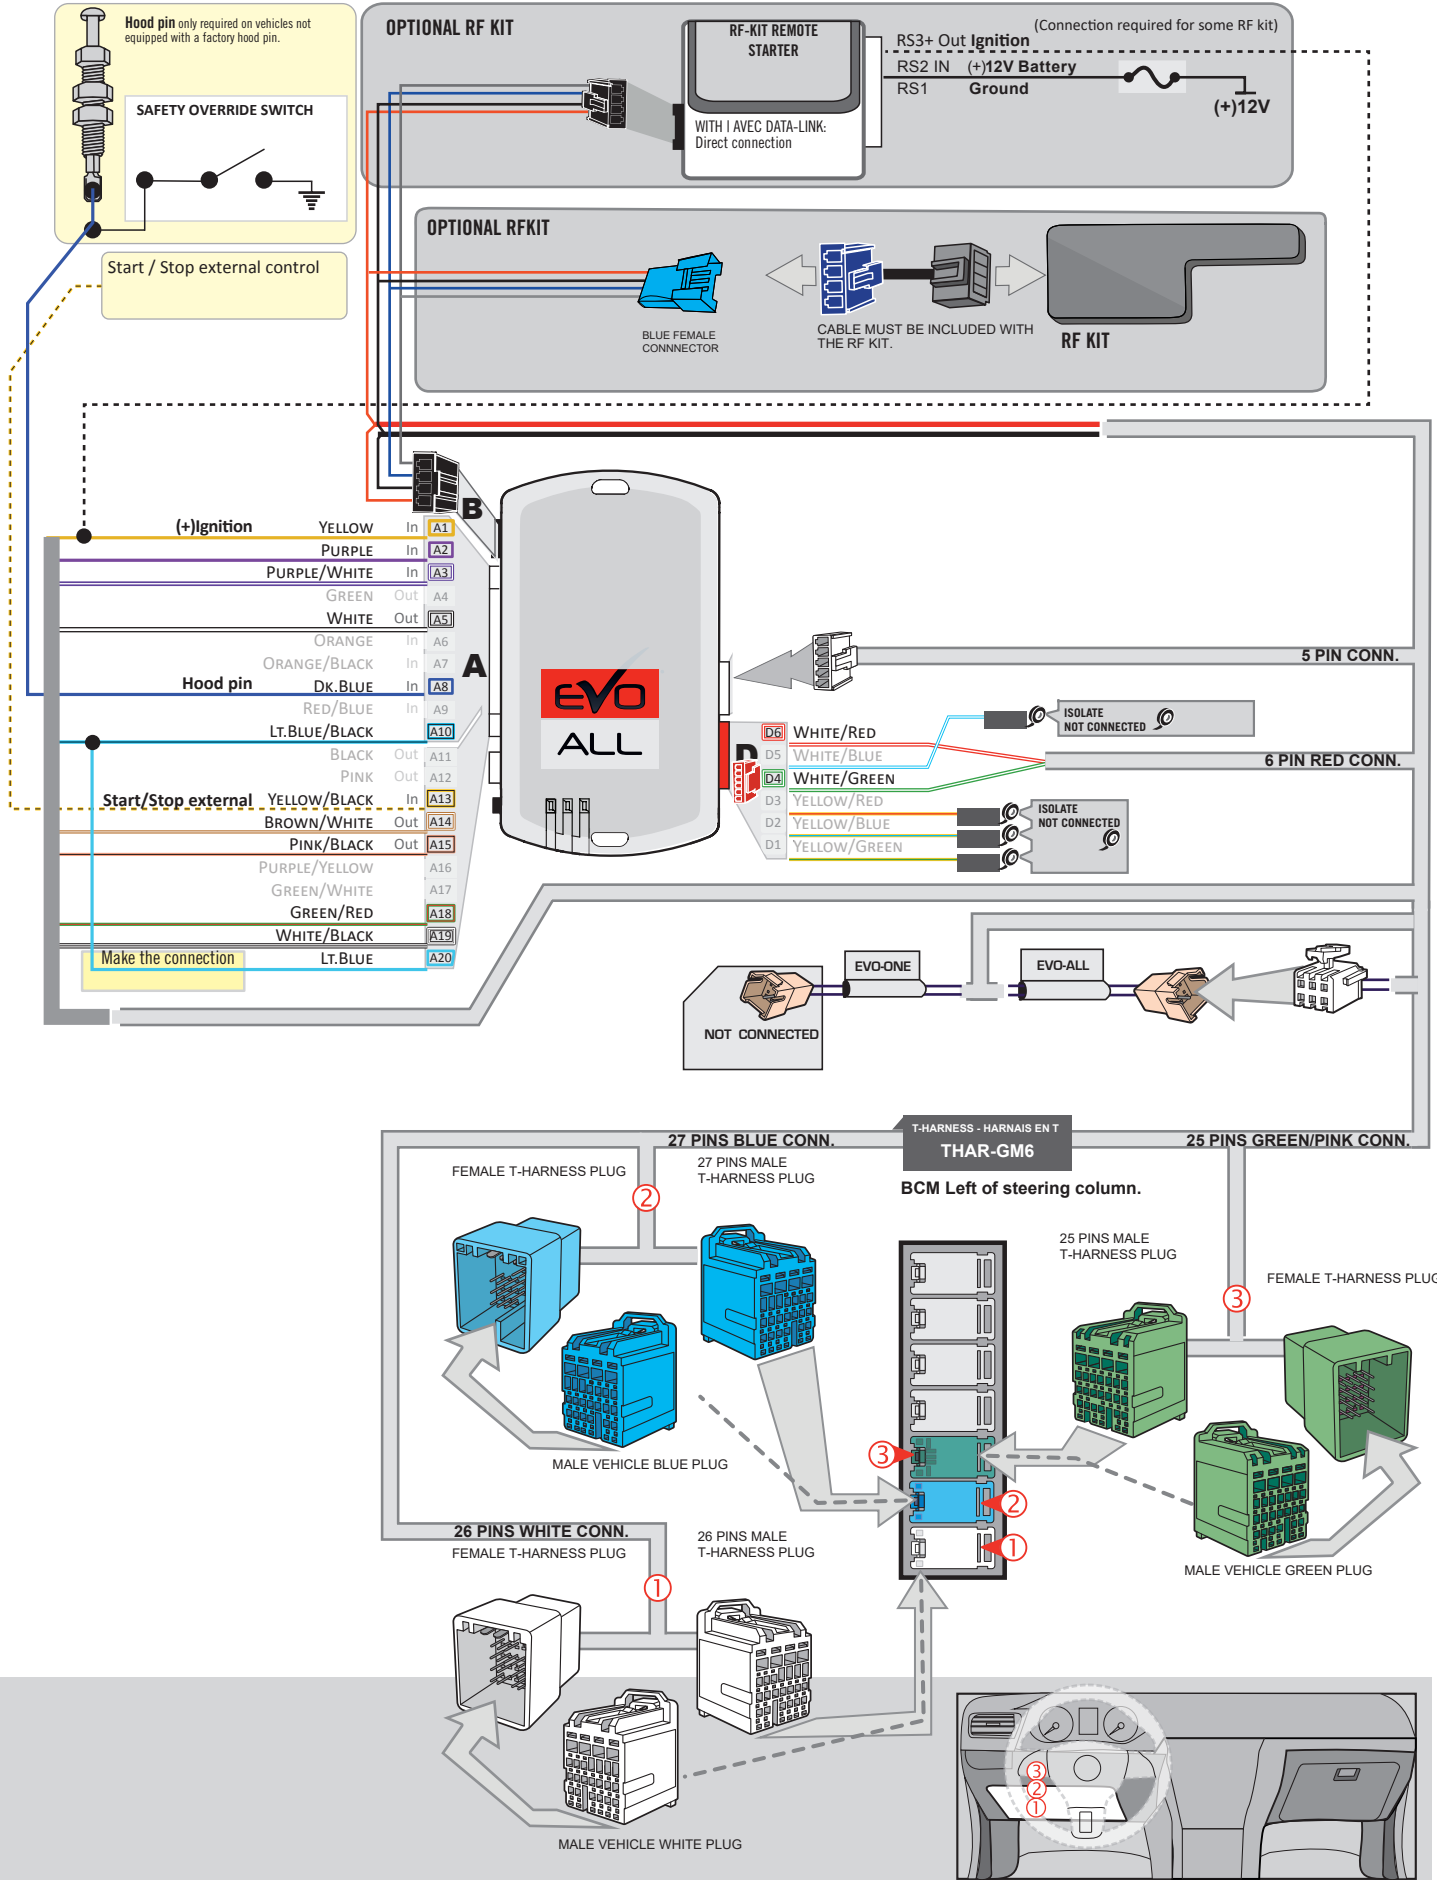


KEY BYPASS PROGRAMMING PROCEDURE 1/3

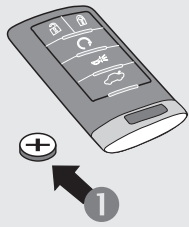


1 Remove the battery from the OEM remote.

2 Place the OEM remote into the transmitter pocket of the center console.

Refer to vehicle user guide for keyport location.

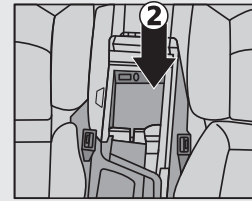


1

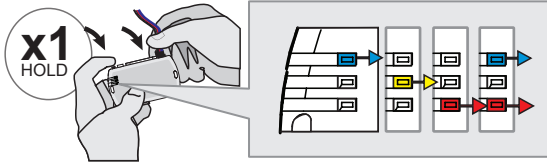

Press and hold the programming button:
Connect the 4-PIN Data-link harness (Black connector).


↳The Blue, Red, Yellow and Blue & Red LEDs will alternatively illuminate.

2

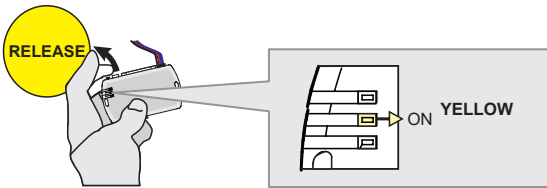


Release the programming button when the LED is **YELLOW**.

 If the LED is not solid **YELLOW** disconnect the 4-Pin connector (Data-Link) and go back to step 1.




3

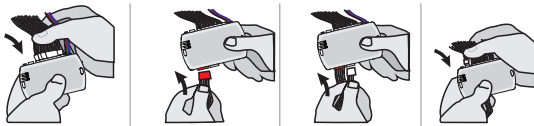

Insert the required remaining connectors.

4

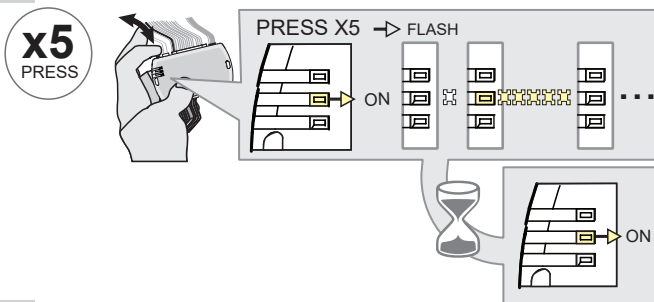


Press and release the programming button five (5x) times.

↳The **YELLOW LED** will flash 5 times each second.


↳**WAIT** for the **YELLOW LED** to turn ON solid.

 5



Open the driver door.

6

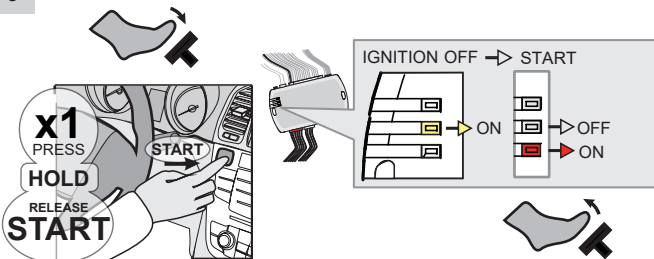

Press the foot-brake pedal.

Press the Push-to-Start button until the engine start.

Release the foot-brake pedal.

↳The **RED LED** will turn ON.
↳The **YELLOW LED** will turn OFF.


KEY BYPASS PROGRAMMING PROCEDURE 2/3

7




Press the Push-to-Start button until the engine turn OFF.

8

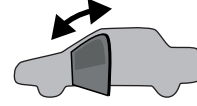

Close and open the driver door.

9

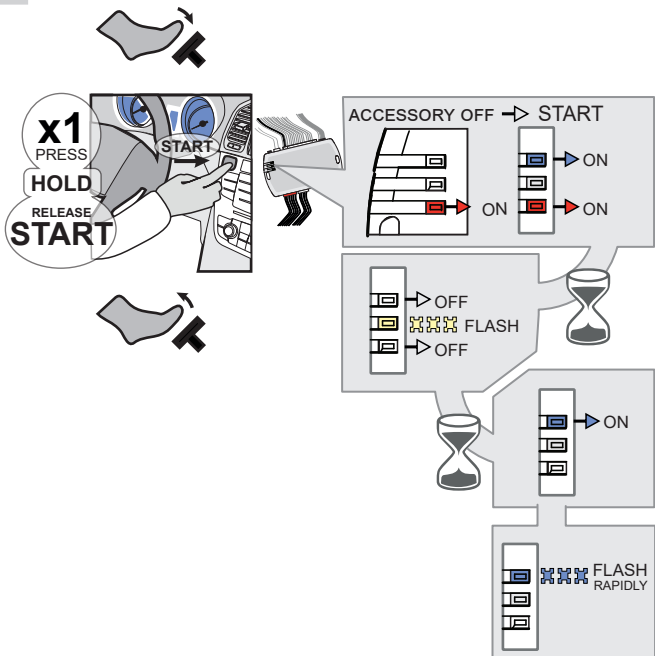


Press the foot-brake pedal.

Press the Push-to-Start button until the engine start.

Release the foot-brake pedal.

- ↳ The BLUE LED will turn ON.
- ↳ The BLUE LED will turn OFF. The RED LED will turn OFF.
- ↳ The YELLOW LED will flash rapidly
- ↳ The BLUE LED will turn ON.
- ↳ The BLUE LED will flash rapidly


10

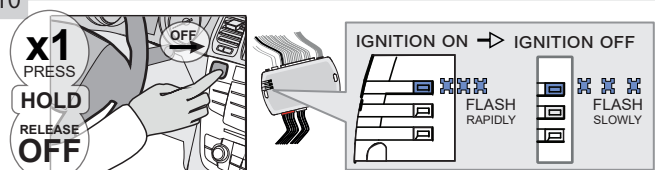

Press the Push-to-Start button until the engine turn OFF.


- ↳ The BLUE LED will flash slowly

11

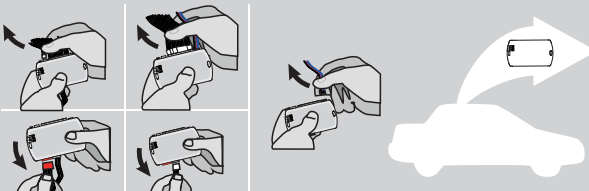

Disconnect all the connectors and after the Data-Link (4-pins) connector.

12


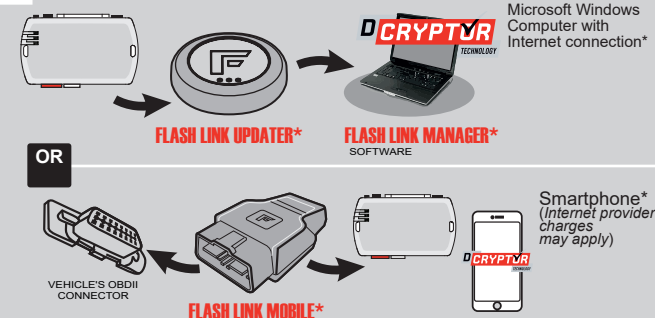


Use the tool: FLASH LINK UPDATER or FLASH LINK MOBILE to visit the DCryptor menu.

***Parts required (not included)**

KEY BYPASS PROGRAMMING PROCEDURE 3/3

13

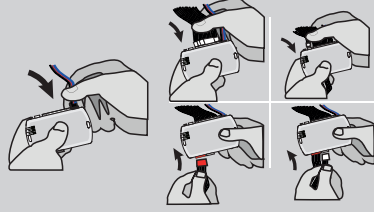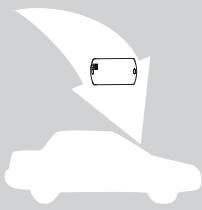

AFTER DCRYPTOR PROGRAMMING COMPLETED
Go back to the vehicle and **reconnect** the 4-Pin (Data-Link) connector and after, all the remaining connector.



The module is now programmed.



REMOTE STARTER / ALARM VERIFICATION PROCEDURE

Test the remote starter. Remote start the vehicle.

REMOTE STARTER FUNCTIONALITY |



All doors must be closed.

 


Remote start the vehicle.



Unlock the doors with either:

- The OEM remote
- The remote-starter remote
- Or the proximity remote



Enter the vehicle with the Intelligent Key.



The vehicle can now be put in to gear and driven.

If the vehicle is not unlocked with one of these conditions the remote-starter will shut down as soon as any door is opened.





**STAND ALONE INSTALLATION AND THAR-GM6
INSTALLATION**

ADDENDUM - SUGGESTED WIRING CONFIGURATION



ONLY COMPATIBLE WITH AUTOMATIC TRANSMISSION VEHICLES.

VEHICLE	YEARS	Vehicle functions supported in this diagram (functional if equipped)															
		Immobilizer bypass	Lock	Unlock	Arm	Disarm	Parking Light	Trunk (open)	RAP Disable	Tachometer	Door Status	Trunk Status	Hand-Brake Status	Foot-Brake Status	OEM Remote Monitoring		
																	
CADILLAC																	
SRX	Push-To-Start	2013-2016	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•






FIRMWARE VERSION

70.[41]

GM MINIMUM

To add the firmware version and the options, use the **FLASH LINK UPDATER** or **FLASH LINK MOBILE** tool, sold separately.
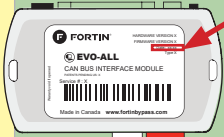
<p>IF THE VEHICLE IS NOT EQUIPPED WITH FUNCTIONAL HOOD PIN:</p>	A11	OFF	Hood trigger (Output Status). ontact de capot (état de sortie).
<p>Program bypass option:</p>	UNIT OPTION		DESCRIPTION
	C1		OEM Remote status (Lock/Unlock) monitoring
	D6		Push-to-Start
 <p>ATTENTION!</p>	E5	OFF	SPECIAL FUNCTIONS: BY DEFAULT DEACTIVATED
 <p>DATE: XX-XX</p>		ON	MANUFACTURED MODULES BETWEEN: 04/2018 TO 04/2019

MANDATORY INSTALL

*HOOD PIN



HOOD STATUS: THE HOOD PIN SWITCH MUST BE INSTALLED IF THE VEHICLE CAN BE REMOTE STARTED WITH THE HOOD OPEN, SET FUNCTION A11 TO OFF.

A11

OFF

Notice: the installation of safety elements are mandatory. The hood pin is an essential security element and must be installed.

THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.

PARTS REQUIRED (NOT INCLUDED)

1x **FLASH LINK UPDATER**,
 1x **FLASH LINK MANAGER**
 SOFTWARE
 1x Microsoft Windows Computer with Internet connection

OR

1x **FLASH LINK MOBILE**
 1x **FLASH LINK MOBILE APP**
 Smartphone *Android* or *iOS* with Internet connection (*provider charges may apply*).
 1x

MANDATORY

HOOD PIN

REMOTE START SAFETY OVERRIDE SWITCH

VALET SWITCH

Part #: RSPB available, Sold separately.

Notice: the installation of safety elements are mandatory. The hood pin and the valet switch are essential security elements and must be installed.

STAND ALONE CONFIGURATION

	Program bypass option	UNIT OPTION	DESCRIPTION
	OEM Remote Stand Alone Remote Starter:	D1.10	By default, LOCK, LOCK, LOCK Par défaut, VERROUILLE,VERROUILLE,VERROUILLE
		D1.1	
	Program bypass option with oem remote:	C1	OEM Remote Monitoring
	Program bypass option with RF KIT antenna:	H1 to H6	Supported RF Kits and select RF Kit

REMOTE STARTER FUNCTIONALITY

All doors must be closed.

3X

Press the OEM remote's Lock button 3x to remote-start (or remote-stop) the vehicle.

START

The vehicle will START.

REMOTE STARTER DIAGNOSTICS
MODULE RED LED

x2 flash :	Brake ON
x3 flash :	No tach
x4 flash :	Ignition before start
x5 flash :	Hood Open

REMOTE STARTER WARNING CARD

CUT THIS WARNING CARD AND STICK IT ON A VISIBLE PLACE:
 or use the package RSPB, Sold separately.

WARNING

REMOTE STARTER

THE VEHICLE CAN BE STARTED BY EITHER: PRESSING THE LOCK BUTTON ON THE OEM REMOTE 3 TIMES CONSECUTIVELY OR BY A SMARTPHONE. **TURN ON** THE SAFETY SWITCH LOCATED UNDER THE DASHBOARD BEFORE WORKING ON THE VEHICLE.

DESCRIPTION

Parts required (Not included) PAGE



WIRE TO WIRE DIAGRAM

1X 5 Amp Fuse 1X 1k Ohm Resistor	Page 4
-------------------------------------	--------





THARNES DIAGRAM

THARNES THAR-GM6	1x THAR-GM6	Page 5
------------------	-------------	--------


BCM

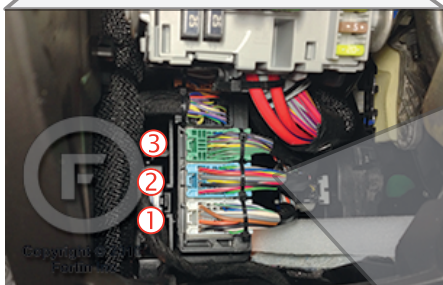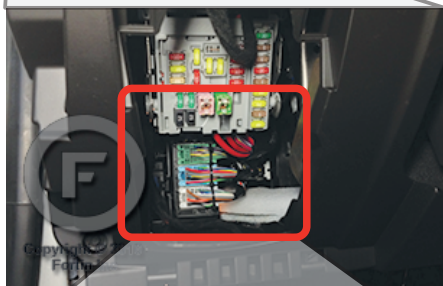


SRX
2013-2016

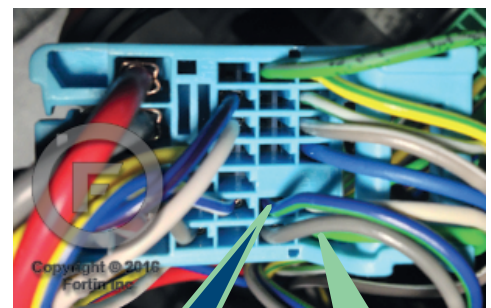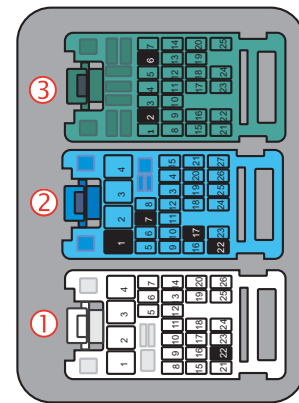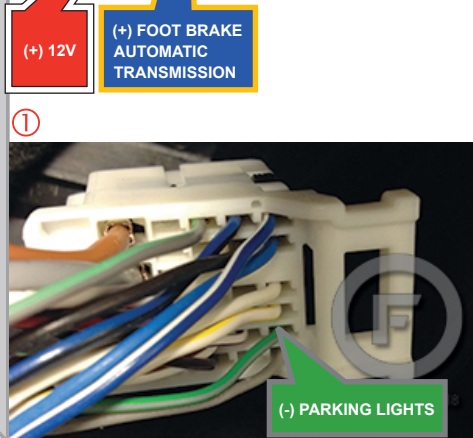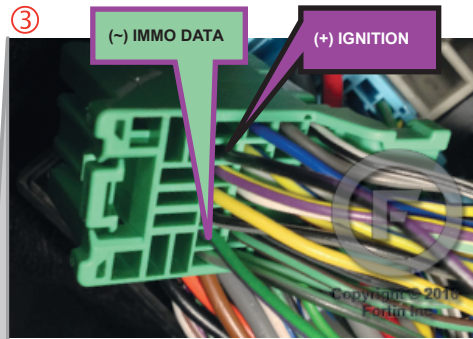

AUTOMATIC TRANSMISSION WIRING CONNECTION

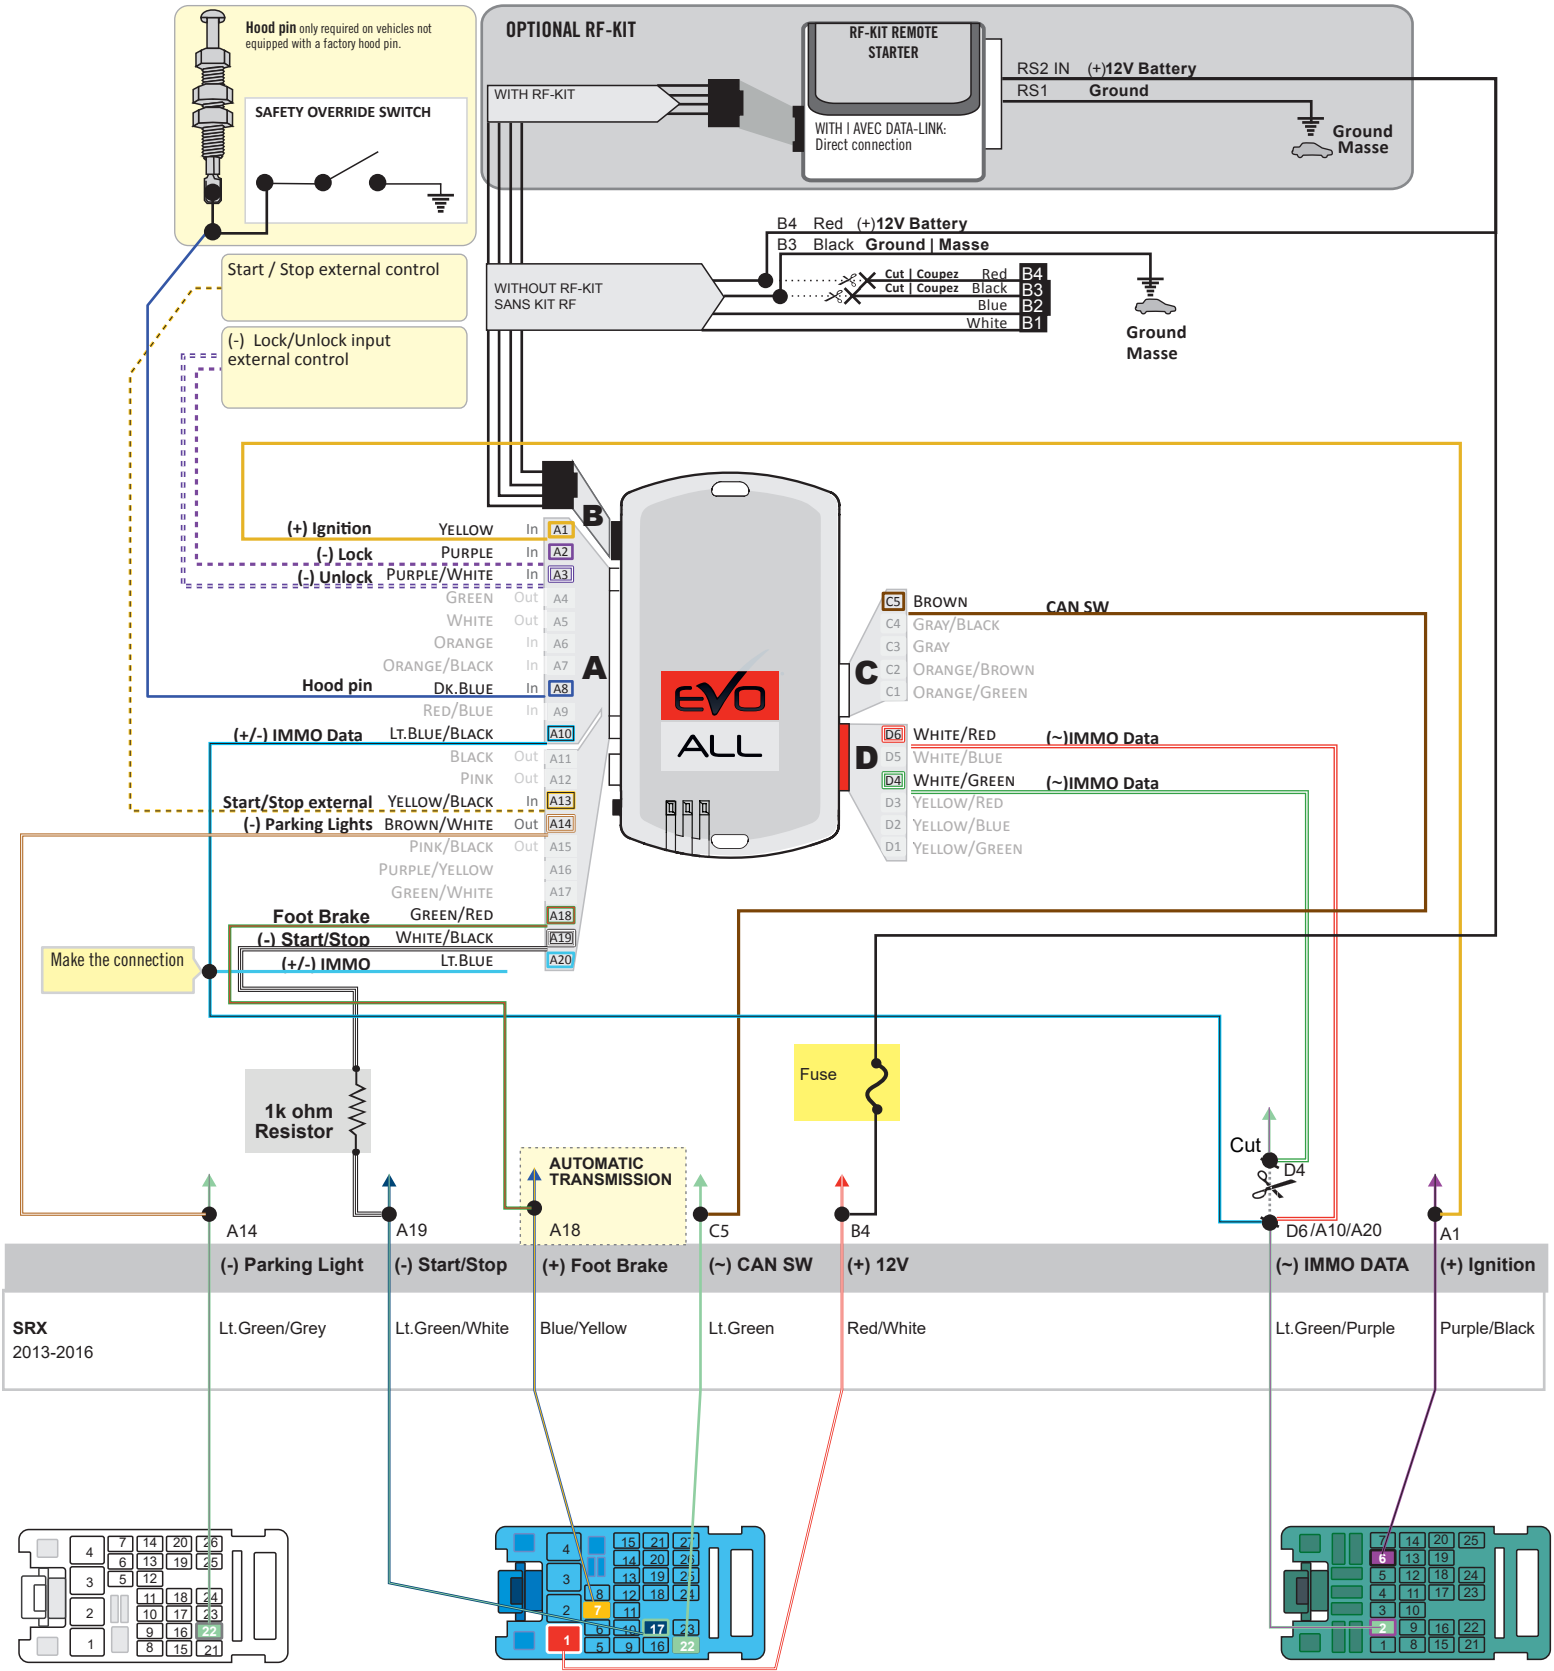


① Back view, 26-Pin White connector, at BCM.

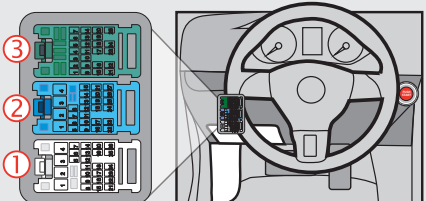


② Back view, 27-Pin Blue connector, at BCM.

③ Back view, 25-Pin Green connector, at BCM.

THAR-GM6 | AUTOMATIC TRANSMISSION CONNECTION

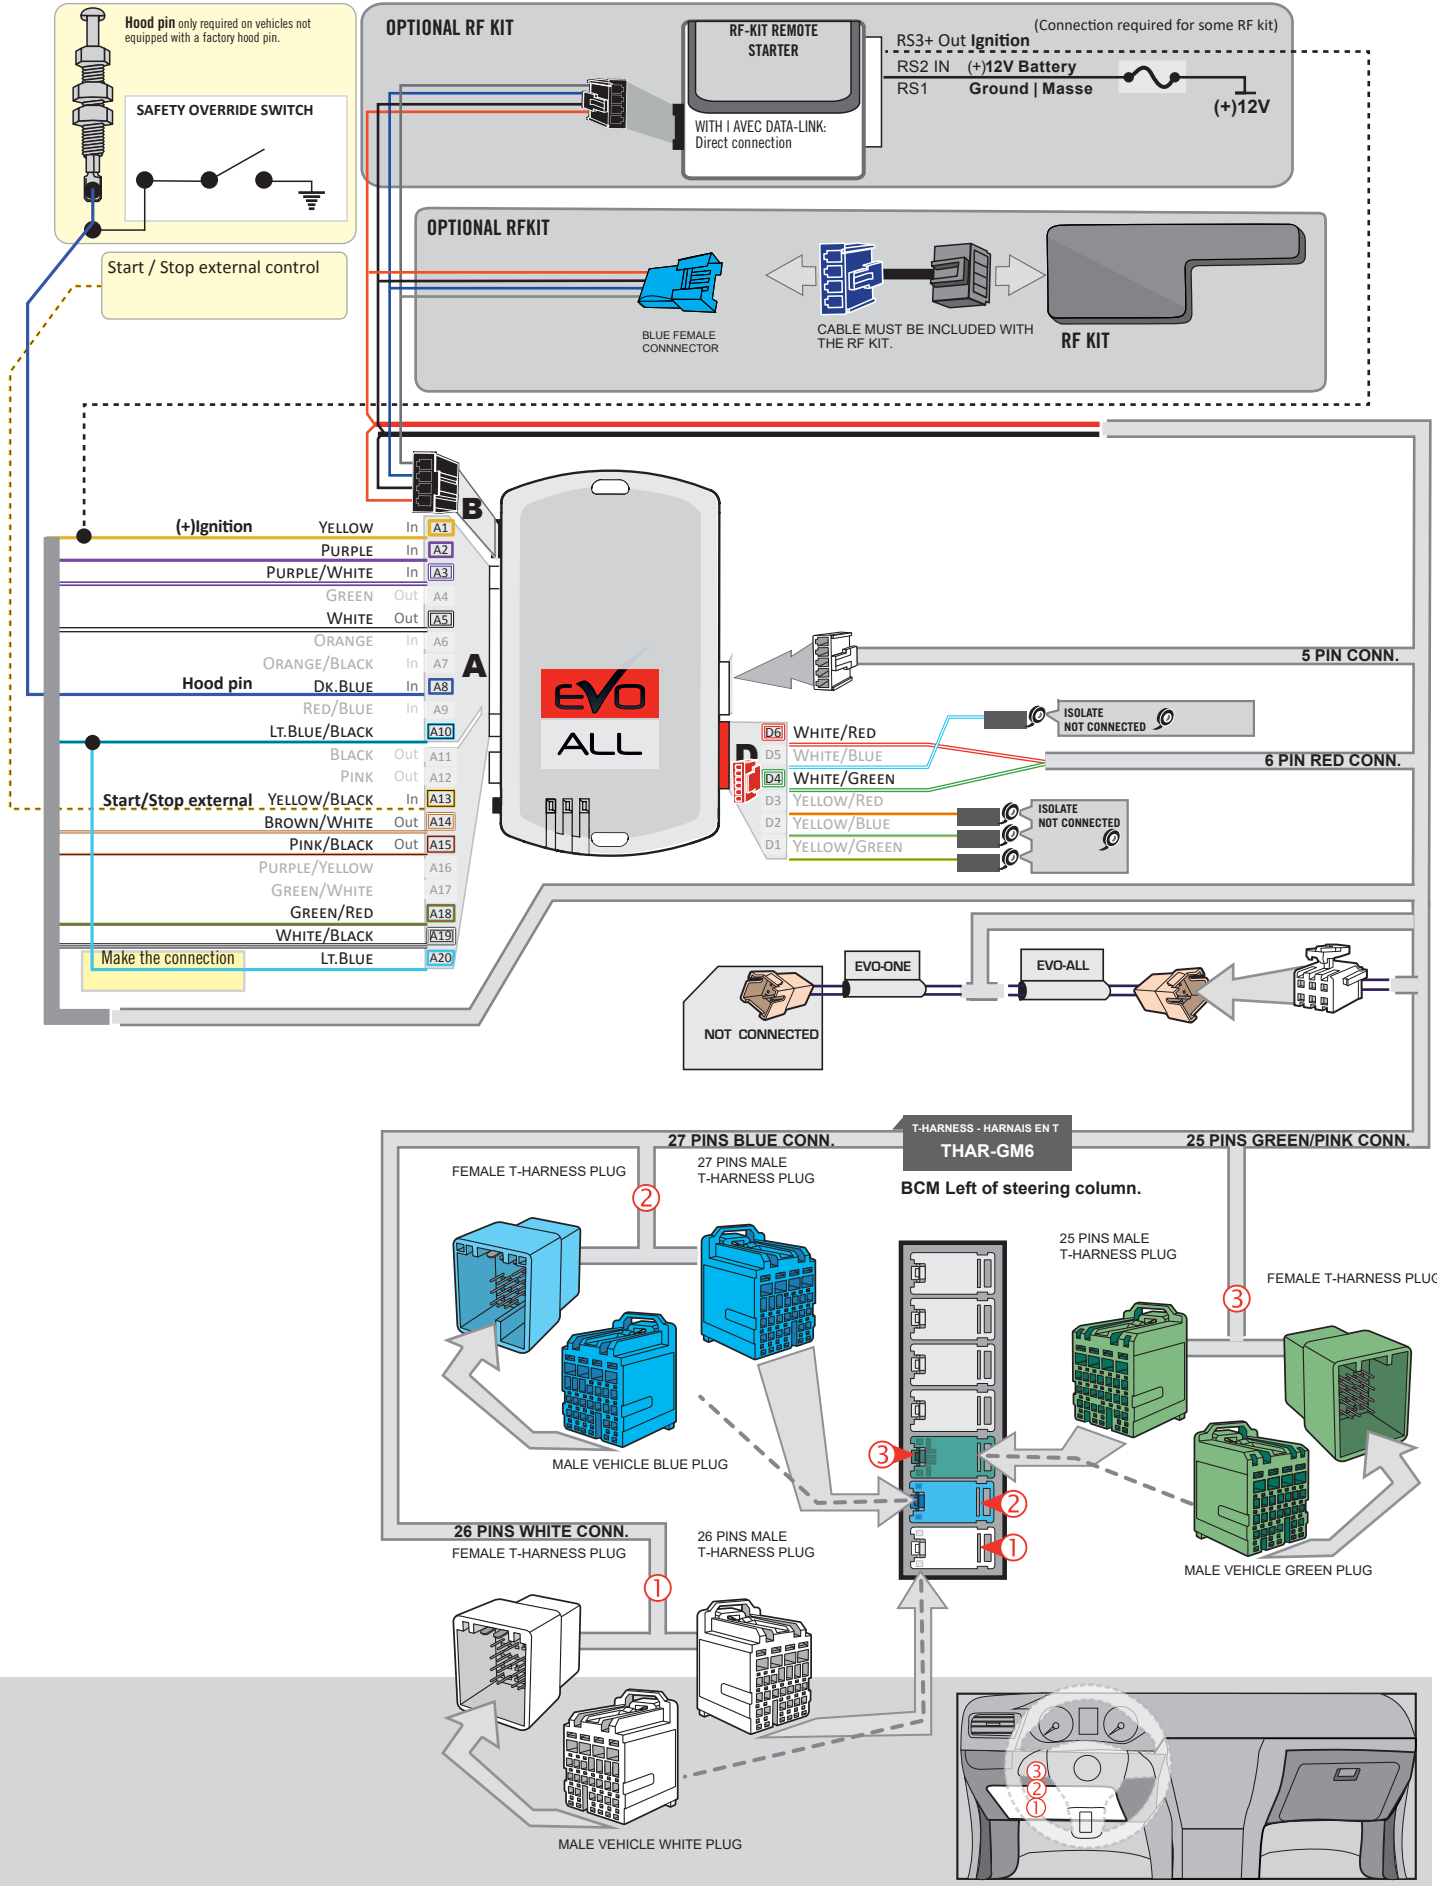


KEY BYPASS PROGRAMMING PROCEDURE 1/3

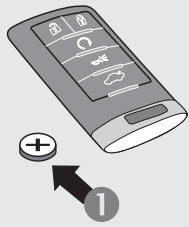


1 Remove the battery from the OEM remote.

2 Place the OEM remote into the transmitter pocket of the center console.

Refer to vehicle user guide for keyport location.

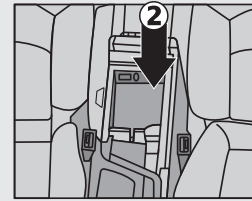


1

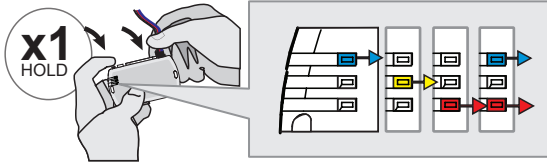

Press and hold the programming button:
Connect the 4-PIN Data-link harness (Black connector).


↳The Blue, Red, Yellow and Blue & Red LEDs will alternatively illuminate.

2

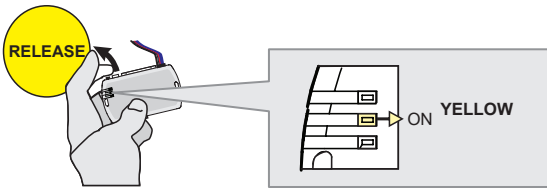


Release the programming button when the LED is YELLOW.

 If the LED is not solid YELLOW disconnect the 4-Pin connector (Data-Link) and go back to step 1.




3

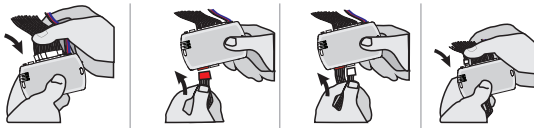

Insert the required remaining connectors.

4

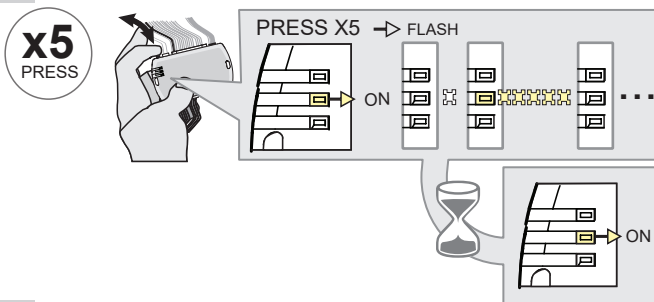


Press and release the programming button five (5x) times.

↳The YELLOW LED will flash 5 times each second.


↳**WAIT** for the YELLOW LED to turn ON solide.

 5



Open the driver door.

6

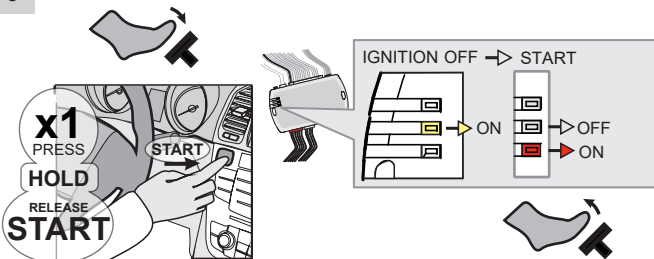

Press the foot-brake pedal.

Press the Push-to-Start button until the engine start.

Release the foot-brake pedal.

↳The RED LED will turn ON.
↳The YELLOW LED will turn OFF.


KEY BYPASS PROGRAMMING PROCEDURE 2/3

7




Press the Push-to-Start button until the engine turn OFF.

8

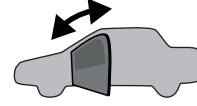

Close and open the driver door.

9

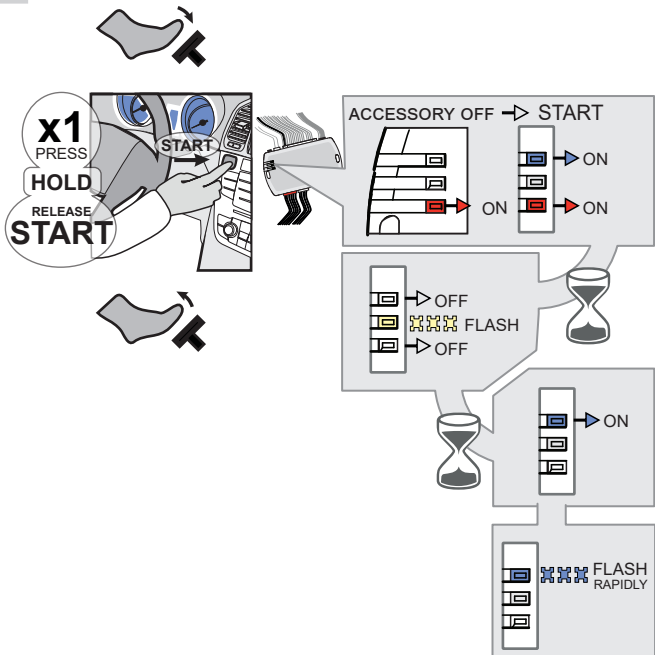


Press the foot-brake pedal.

Press the Push-to-Start button until the engine start.

Release the foot-brake pedal.

- ↳ The BLUE LED will turn ON.
- ↳ The BLUE LED will turn OFF. The RED LED will turn OFF.
- ↳ The YELLOW LED will flash rapidly
- ↳ The BLUE LED will turn ON.
- ↳ The BLUE LED will flash rapidly


10

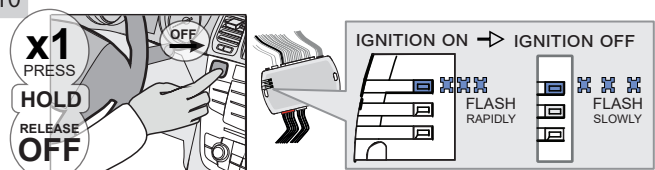

Press the Push-to-Start button until the engine turn OFF.


- ↳ The BLUE LED will flash slowly

11

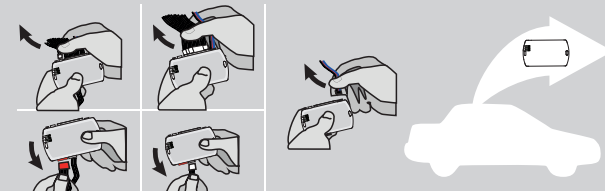

Disconnect all the connectors and after the Data-Link (4-pins) connector.

12


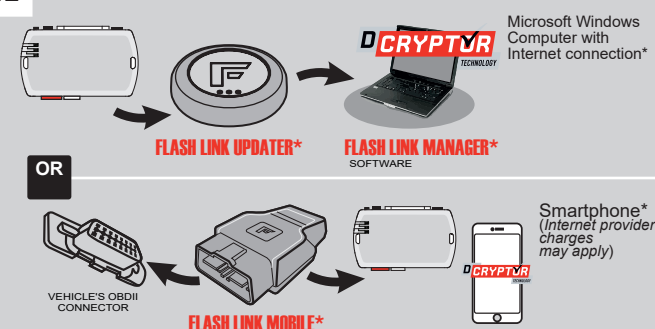


Use the tool: FLASH LINK UPDATER or FLASH LINK MOBILE to visit the DCryptor menu.

***Parts required (not included)**

KEY BYPASS PROGRAMMING PROCEDURE 3/3

13

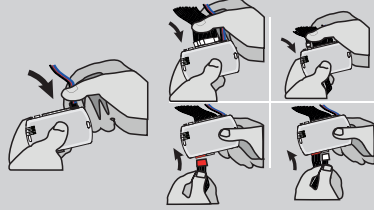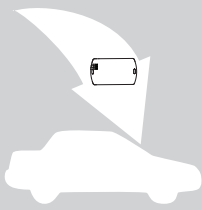

AFTER DCRYPTOR PROGRAMMING COMPLETED
Go back to the vehicle and **reconnect** the 4-Pin (Data-Link) connector and after, all the remaining connector.



The module is now programmed.



REMOTE STARTER / ALARM VERIFICATION PROCEDURE


Test the remote starter. Remote start the vehicle.

OPTIONAL RF-KIT PROGRAMMING


PROGRAM BYPASS OPTION

	<p>Program bypass option:</p>	<p>H2</p>	<p>Supported RF-KITS enable</p> <p>H2 Fortin 2</p>

OPTIONAL FORTIN RF KIT SERIES 4 OR SERIES 9 PROGRAMMING




The module must be programmed on the vehicle.



MAKE SURE THE IGNITION KEY HAS BEEN IN THE OFF POSITION FOR AT LEAST 5 SECONDS.

1

ON




ON

Press the foot-brake pedal. Press the Push-to-Start button until the engine start. Release the foot-brake pedal.

2

OFF




OFF

Press the Push-to-Start button until the engine turn OFF.

3

ON




ON

Press the foot-brake pedal. Press the Push-to-Start button until the engine start. Release the foot-brake pedal.

4


4X BRAKES



4X PRESS

Press and release the brake pedal four times.

frein.




The LED will turn off each time.


5

ON EACH TRANSMITTER

4 BUTTONS




PRESS AND RELEASE




PRESS AND RELEASE


1 BUTTON




PRESS APPROX. 12 SEC. AND WAIT FOR THE BLUE LED TO TURN OFF THEN BACK ON SOLID THEN RELEASE.



The LED will turn off each time.




The LED will flash rapidly.



The 3 LED will turn off each time.


6

OFF




OFF

Press the Push-to-Start button until the engine turn OFF.



The LED will turn Off.



The 3 LED will turn off.



REMOTE STARTER FUNCTIONALITY



All doors must be closed.



Remote start the vehicle.



Unlock the doors with either:

- The OEM remote
- The remote-starter remote
- Or the proximity remote



Enter the vehicle with the Intelligent Key.



The vehicle can now be put in to gear and driven.

If the vehicle is not unlocked with one of these conditions the remote-starter will shut down as soon as any door is opened.



**STAND ALONE INSTALLATION AND THAR-GM6
INSTALLATION**

ADDENDUM - SUGGESTED WIRING CONFIGURATION



ONLY COMPATIBLE WITH AUTOMATIC TRANSMISSION VEHICLES.



VEHICLE

YEARS

Vehicle functions supported in this diagram (functional if equipped)

VEHICLE	YEARS	Immobilizer bypass	Lock	Unlock	Arm	Disarm	Parking Light	Trunk (open)	RAP Disable	Tachometer	Door Status	Trunk Status	Hand-Brake Status	Foot-Brake Status	OEM Remote Monitoring
CADILLAC															
XTS	Push-To-Start	2013-2018	•	•	•	•	•	•	•	•	•	•	•	•	•

FIRMWARE VERSION

70.[41]

GM MINIMUM

To add the firmware version and the options, use the **FLASH LINK UPDATER** or **FLASH LINK MOBILE** tool, sold separately.

IF THE VEHICLE IS NOT EQUIPPED WITH FUNCTIONAL HOOD PIN:	A11	OFF	Hood trigger (Output Status).
--	------------	-----	-------------------------------

	UNIT OPTION	DESCRIPTION
Program bypass option:	C1	OEM Remote status (Lock/Unlock) monitoring
	D6	Push-to-Start

	ATTENTION!	<p>DATE: XX-XX</p>	E5	OFF	<p>SPECIAL FUNCTIONS: BY DEFAULT DEACTIVATED</p>
				ON	<p>MANUFACTURED MODULES BETWEEN: 04/2018 TO 04/2019</p>

MANDATORY INSTALL

*HOOD PIN



HOOD STATUS: THE HOOD PIN SWITCH MUST BE INSTALLED IF THE VEHICLE CAN BE REMOTE STARTED WITH THE HOOD OPEN, SET FUNCTION **A11** TO OFF.

A11

OFF

Notice: the installation of safety elements are mandatory. The hood pin is an essential security element and must be installed.

THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.


PARTS REQUIRED (NOT INCLUDED)


1x **FLASH LINK UPDATER**
 1x **FLASH LINK MANAGER**
SOFTWARE
 1x Microsoft Windows Computer with Internet connection
 Ordinateur Microsoft Windows

OR

1x **FLASH LINK MOBILE**
 1x **FLASH LINK MOBILE APP**
Smartphone Android or iOS with Internet connection (provider charges may apply).

MANDATORY

HOOD PIN 

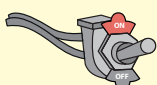
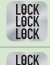



REMOTE START SAFETY OVERRIDE SWITCH 

VALET SWITCH


Part #: RSPB available, Sold separately.

Notice: the installation of safety elements are mandatory. The hood pin and the valet switch are essential security elements and must be installed.


STAND ALONE CONFIGURATION

	Program bypass option	UNIT OPTION	DESCRIPTION
	OEM Remote Stand Alone Remote Starter:	D1.10  D1.1 	By default, LOCK, LOCK, LOCK Par défaut, VERROUILLE,VERROUILLE,VERROUILLE
	Program bypass option with oem remote:	C1	OEM Remote Monitoring
	Program bypass option with RF KIT antenna:	H1 to H6	Supported RF Kits and select RF Kit


REMOTE STARTER FUNCTIONALITY



All doors must be closed.

3X 

Press the OEM remote's Lock button 3x to remote-start (or remote-stop) the vehicle.




START

The vehicle will START.

REMOTE STARTER DIAGNOSTICS
MODULE RED LED


x2 flash :	Brake ON
x3 flash :	No tach
x4 flash :	Ignition before start
x5 flash :	Hood Open

REMOTE STARTER WARNING CARD



CUT THIS WARNING CARD AND STICK IT ON A VISIBLE PLACE:
 or use the package RSPB, Sold separately.

WARNING



REMOTE STARTER

THE VEHICLE CAN BE STARTED BY EITHER: PRESSING THE LOCK BUTTON ON THE OEM REMOTE 3 TIMES CONSECUTIVELY OR BY A SMARTPHONE. **TURN ON** THE SAFETY SWITCH LOCATED UNDER THE DASHBOARD BEFORE WORKING ON THE VEHICLE.

DESCRIPTION

Parts required (Not included) PAGE




WIRE TO WIRE DIAGRAM

	1X 5 Amp Fuse 1X 1k Ohm Resistor	Page 4
--	-------------------------------------	--------






THARNES DIAGRAM

THARNES THAR-GM6	1x THAR-GM6 1x Fuse	Page 5
------------------	------------------------	--------

BCM


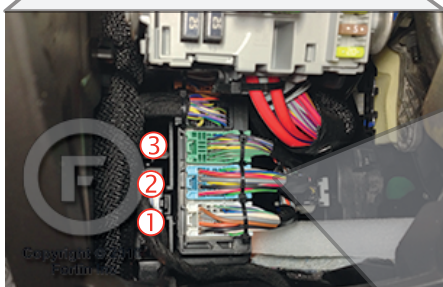
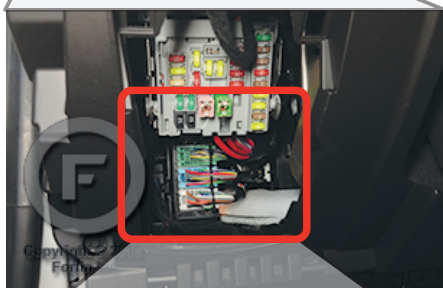
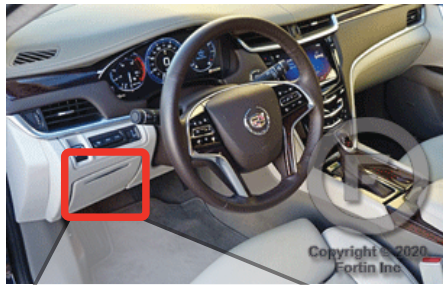


XTS

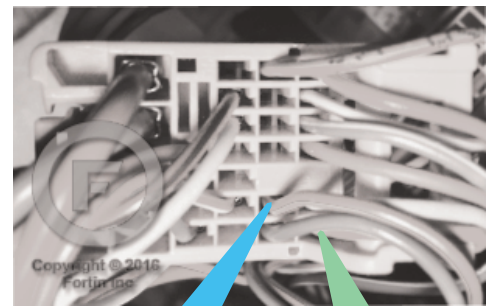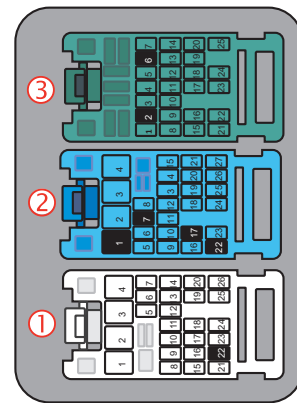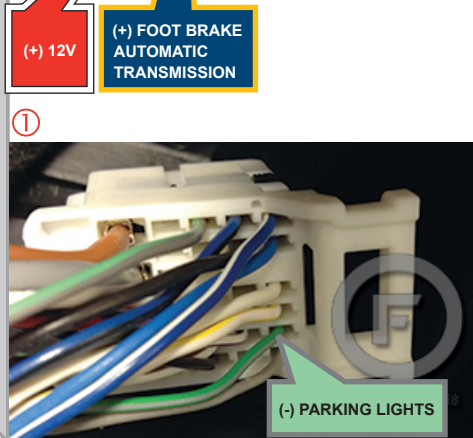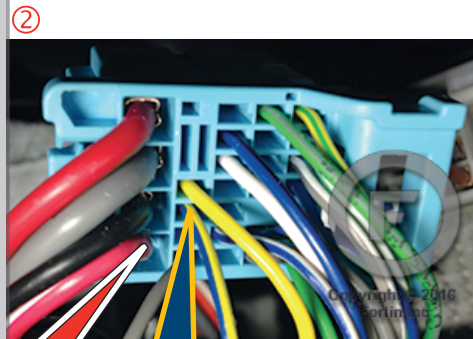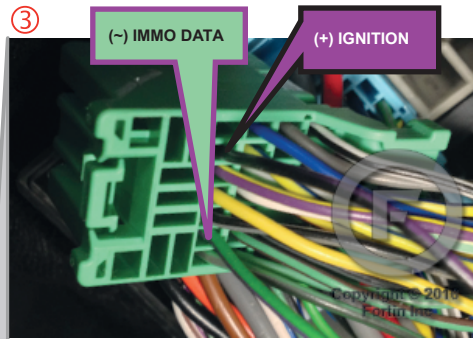


(-) START/STOP (-) CAN SW


AUTOMATIC TRANSMISSION WIRING CONNECTION

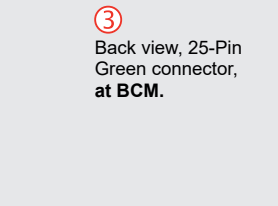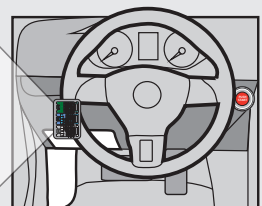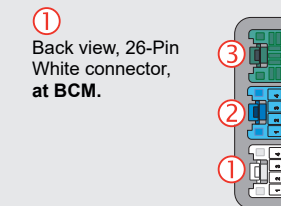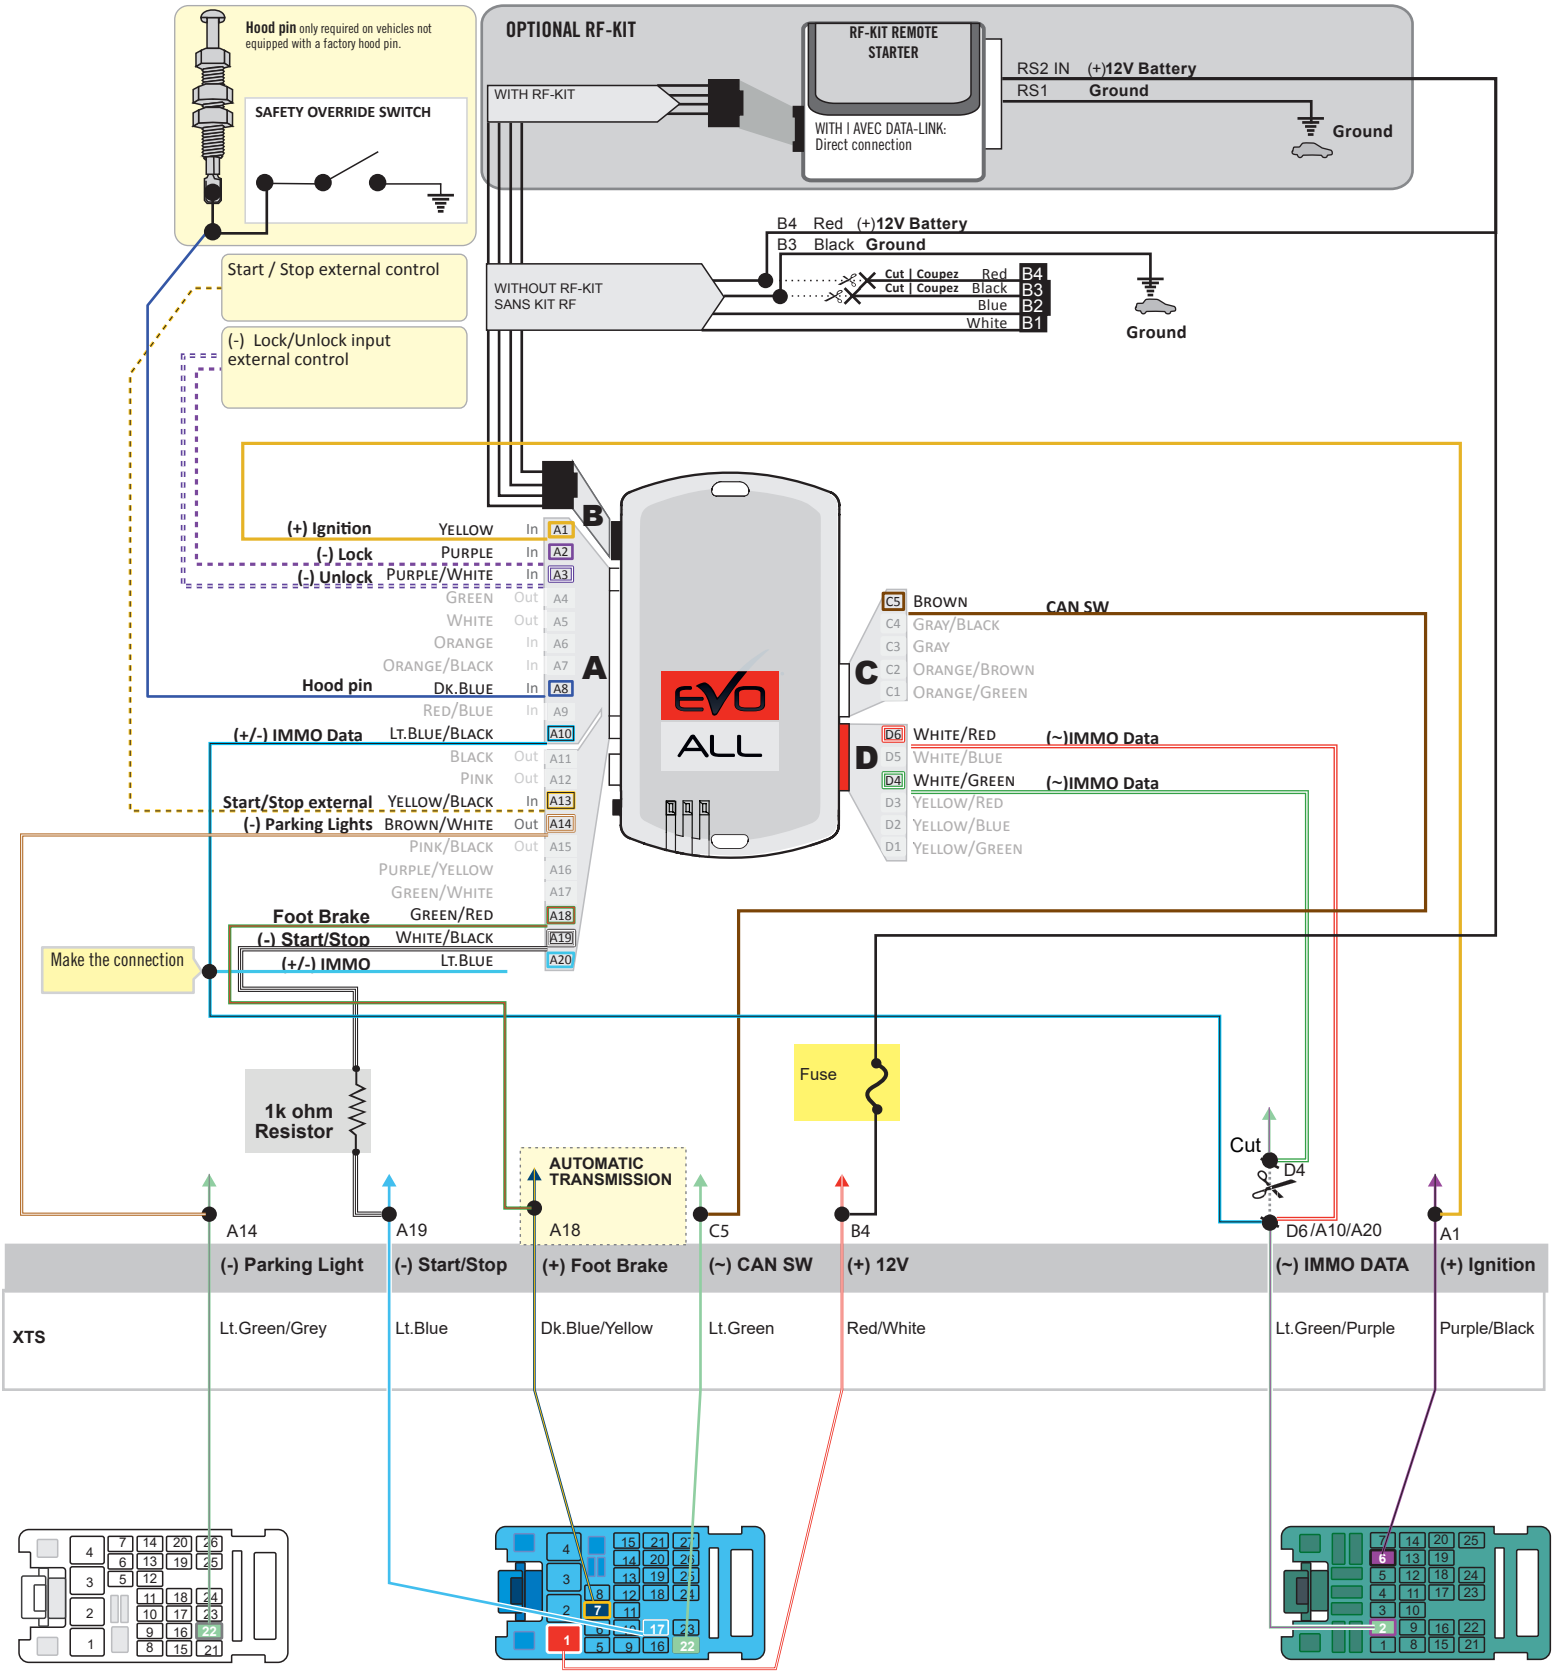


THAR-GM6 | AUTOMATIC TRANSMISSION CONNECTION

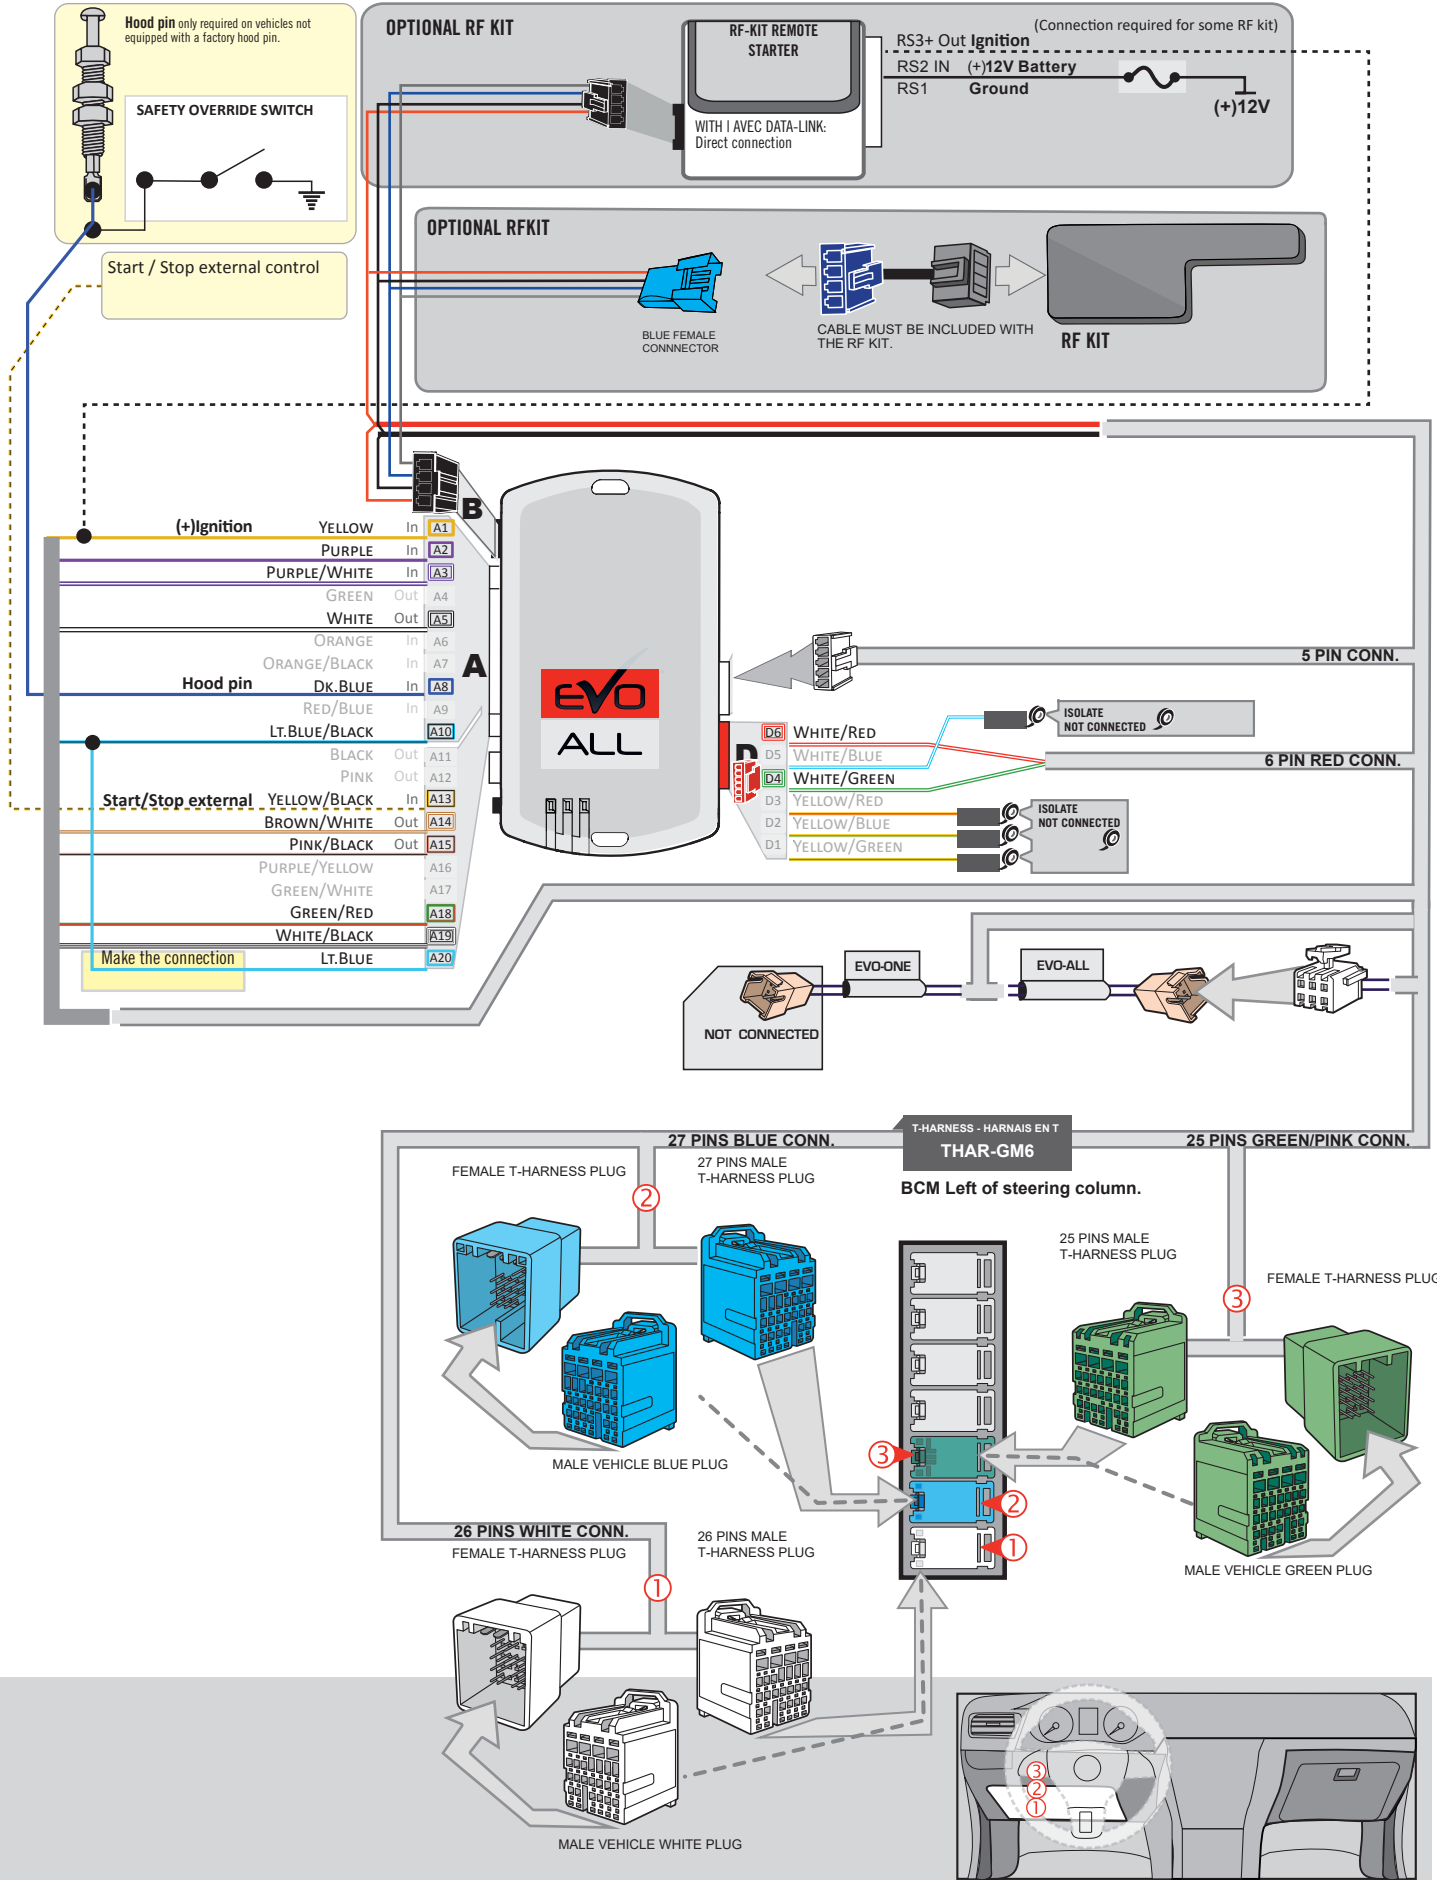


KEY BYPASS PROGRAMMING PROCEDURE 1/3

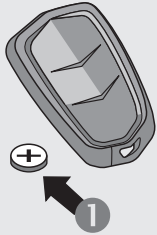

- 1** Remove the battery from the OEM remote.
- 2** Place the OEM remote into the transmitter pocket of the center console.
Refer to vehicle user guide for keyport location

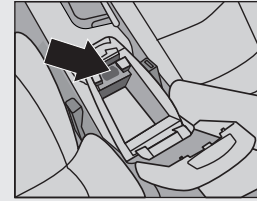


1

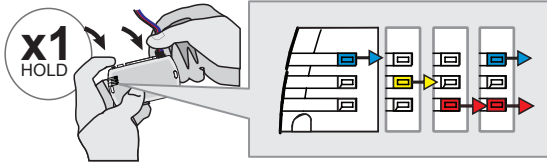

Press and hold the programming button:
Connect the 4-PIN Data-link harness (Black connector).


↳The Blue, Red, Yellow and Blue & Red LEDs will alternatively illuminate.

2

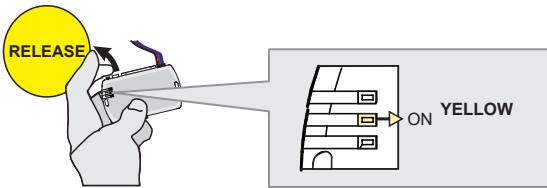


Release the programming button when the LED is **YELLOW**.

 If the LED is not solid YELLOW disconnect the 4-Pin connector (Data-Link) and go back to step 1.




3

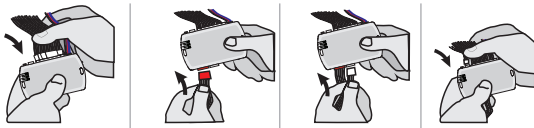

Insert the required remaining connectors.

4

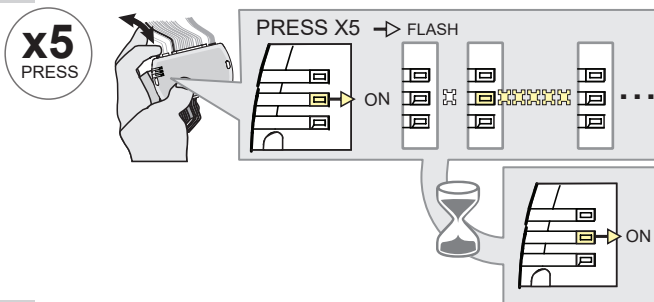


Press and release the programming button five (5x) times.

↳The **YELLOW LED** will flash 5 times each second.


↳**WAIT** for the **YELLOW LED** to turn **ON** solide.

 5



Open the driver door.

6

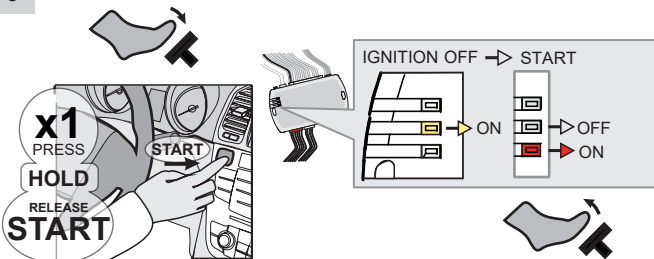

Press the foot-brake pedal.


Press the Push-to-Start button until the engine start.

Release the foot-brake pedal.

↳The **RED LED** will turn **ON**.
↳The **YELLOW LED** will turn **OFF**.


KEY BYPASS PROGRAMMING PROCEDURE 2/3

7

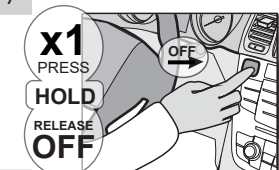


Press the Push-to-Start button until the engine turn OFF.

8

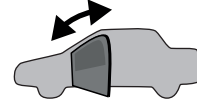

Close and open the driver door.

9

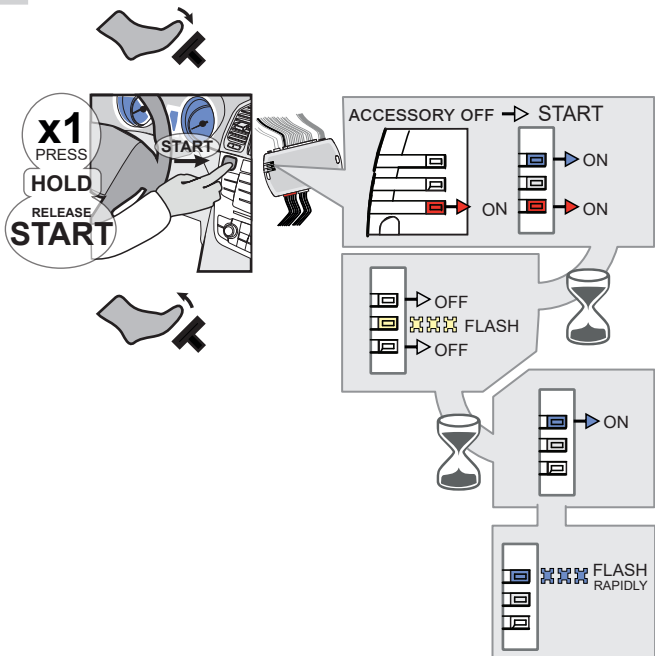


Press the foot-brake pedal.

Press the Push-to-Start button until the engine start.

Release the foot-brake pedal.

- ↳ The BLUE LED will turn ON.
- ↳ The BLUE LED will turn OFF. The RED LED will turn OFF.
- ↳ The YELLOW LED will flash rapidly
- ↳ The BLUE LED will turn ON.
- ↳ The BLUE LED will flash rapidly


10

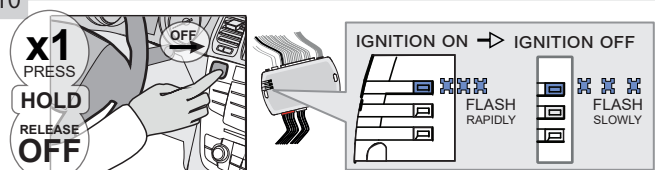

Press the Push-to-Start button until the engine turn OFF.


- ↳ The BLUE LED will flash slowly

11

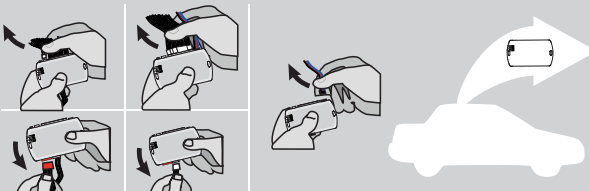

Disconnect all the connectors and after the Data-Link (4-pins) connector.

12


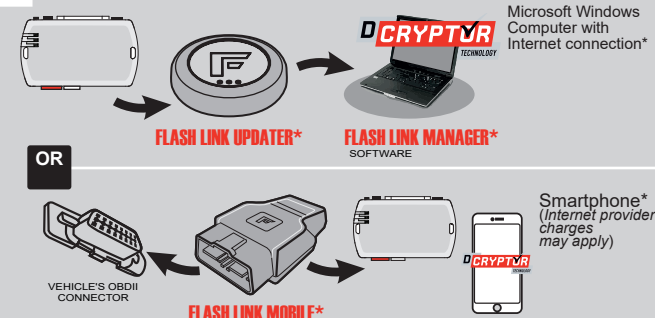


Use the tool: FLASH LINK UPDATER or FLASH LINK MOBILE to visit the DCryptor menu.

*Parts required (not included)

KEY BYPASS PROGRAMMING PROCEDURE 3/3

13

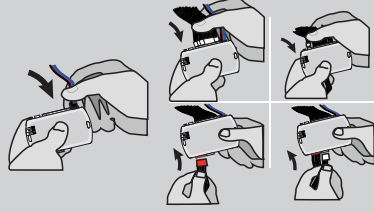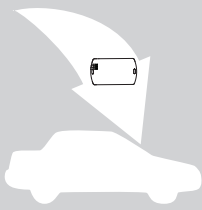

AFTER DCRYPTOR PROGRAMMING COMPLETED
Go back to the vehicle and **reconnect** the 4-Pin (Data-Link) connector and after, all the remaining connector.



The module is now programmed.



REMOTE STARTER / ALARM VERIFICATION PROCEDURE


Test the remote starter. **Remote start** the vehicle.

OPTIONAL RF-KIT PROGRAMMING



PROGRAM BYPASS OPTION

	<p>Program bypass option:</p>	<p>H2</p>	<p>Supported RF-KITS enable</p> <p>H2 Fortin 2</p>

OPTIONAL FORTIN RF KIT SERIES 4 OR SERIES 9 PROGRAMMING




The module must be programmed on the vehicle.

MAKE SURE THE IGNITION KEY HAS BEEN IN THE OFF POSITION FOR AT LEAST 5 SECONDS.

1

ON

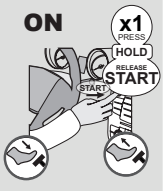


ON

Press the foot-brake pedal. Press the Push-to-Start button until the engine start. Release the foot-brake pedal.

2

OFF

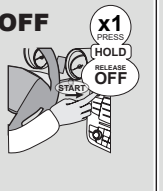


OFF

Press the Push-to-Start button until the engine turn OFF.

3

ON

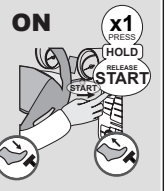


ON

Press the foot-brake pedal. Press the Push-to-Start button until the engine start. Release the foot-brake pedal.

4

4X BRAKES




4X PRESS

Press and release the brake pedal four times.


5

ON EACH TRANSMITTER

4 BUTTONS




PRESS AND RELEASE



PRESS AND RELEASE


1 BUTTON



PRESS APPROX. 12 SEC. AND WAIT FOR THE BLUE LED TO TURN OFF THEN BACK ON SOLID THEN RELEASE.


6

OFF

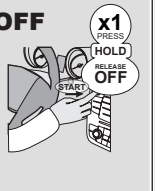


OFF


Press the Push-to-Start button until the engine turn OFF.

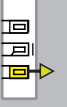


The YELLOW LED will turn ON solid.




The YELLOW LED will turn Off.

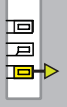


The YELLOW LED will turn ON solid.

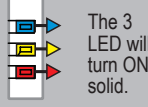


The 3 LED will turn ON solid.

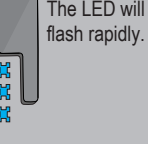

The LED will flash rapidly.

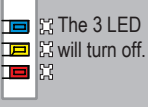

The 3 LED will turn off.



REMOTE STARTER FUNCTIONALITY



All doors must be closed.



Remote start the vehicle.



Unlock the doors with either:

- The OEM remote
- The remote-starter remote
- Or the proximity remote



Enter the vehicle with the Intelligent Key.



The vehicle can now be put in to gear and driven.

If the vehicle is not unlocked with one of these conditions the remote-starter will shut down as soon as any door is opened.



THAR-GM6

THARNNESS
INSTALLATION

ADDENDUM - SUGGESTED WIRING CONFIGURATION

VEHICLE			Vehicle functions supported in this diagram (functional if equipped)												
VEHICLE	YEARS		Immobilizer bypass	Lock	Unlock	Arm	Disarm	Trunk (open)	RAP Disable	Tachometer	Door Status	Trunk Status (Data-Link Only, Data-Link Seuilment)	Hand-Brake Status (Data-Link Only, Data-Link Seuilment)	Foot-Brake Status	OEM Remote Monitoring
GMC															
Acadia	Push-To-Start	2017-2020	•	•	•	•	•	•	•	•	•	•	•	•	•

COMPATIBLE MODULE REQUIRED:

QR CODE ON THE LABEL MANUFACTURED AFTER: 2019

FIRMWARE VERSION

70.[39]

GM MINIMUM

To add the firmware version and the options, use the **FLASH LINK UPDATER** or **FLASH LINK MOBILE** tool, sold separately.

IF THE VEHICLE IS NOT EQUIPPED WITH FUNCTIONAL HOOD PIN:	A11	OFF	Hood trigger (Output Status).
---	------------	------------	-------------------------------

	Program bypass option:	UNIT OPTION	DESCRIPTION
		C1	OEM Remote status (Lock/Unlock) monitoring
		D6	Push-to-Start

	ATTENTION!	<p>DATE: XX-XX</p>	<p>SPECIAL FUNCTIONS: BY DEFAULT DEACTIVATED</p> <p>MANUFACTURED MODULES BETWEEN: 04/2018 TO 04/2019</p>
		E5	<p>OFF</p> <p>ON</p>

Parts required (Not included)

1X 1Amp Diode

MANDATORY INSTALL

*HOOD PIN



HOOD STATUS: THE HOOD PIN SWITCH MUST BE INSTALLED IF THE VEHICLE CAN BE REMOTE STARTED WITH THE HOOD OPEN, SET FUNCTION A11 TO OFF.

A11

OFF

Notice: the installation of safety elements are mandatory. The hood pin is an essential security element and must be installed.


THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.

DESCRIPTION



BCM located on passenger side center console



③

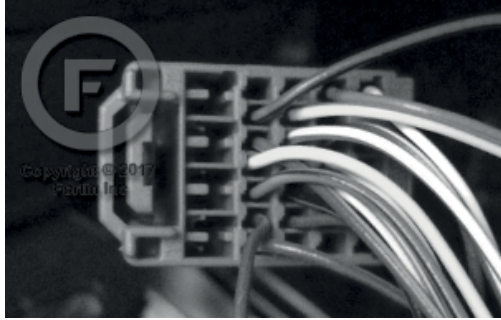


②

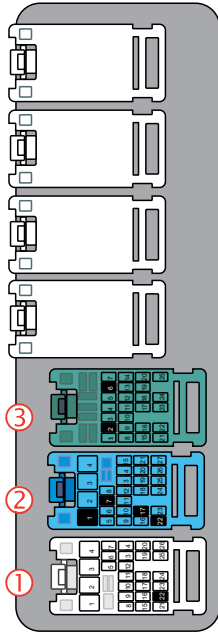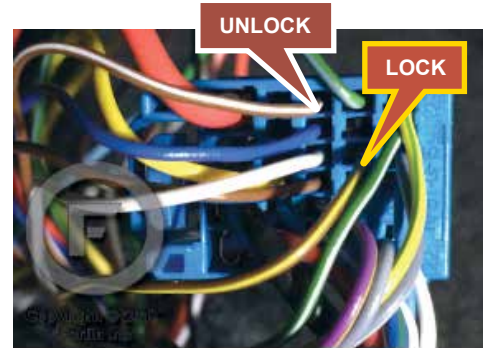


①



AUTOMATIC TRANSMISSION WIRING CONNECTION

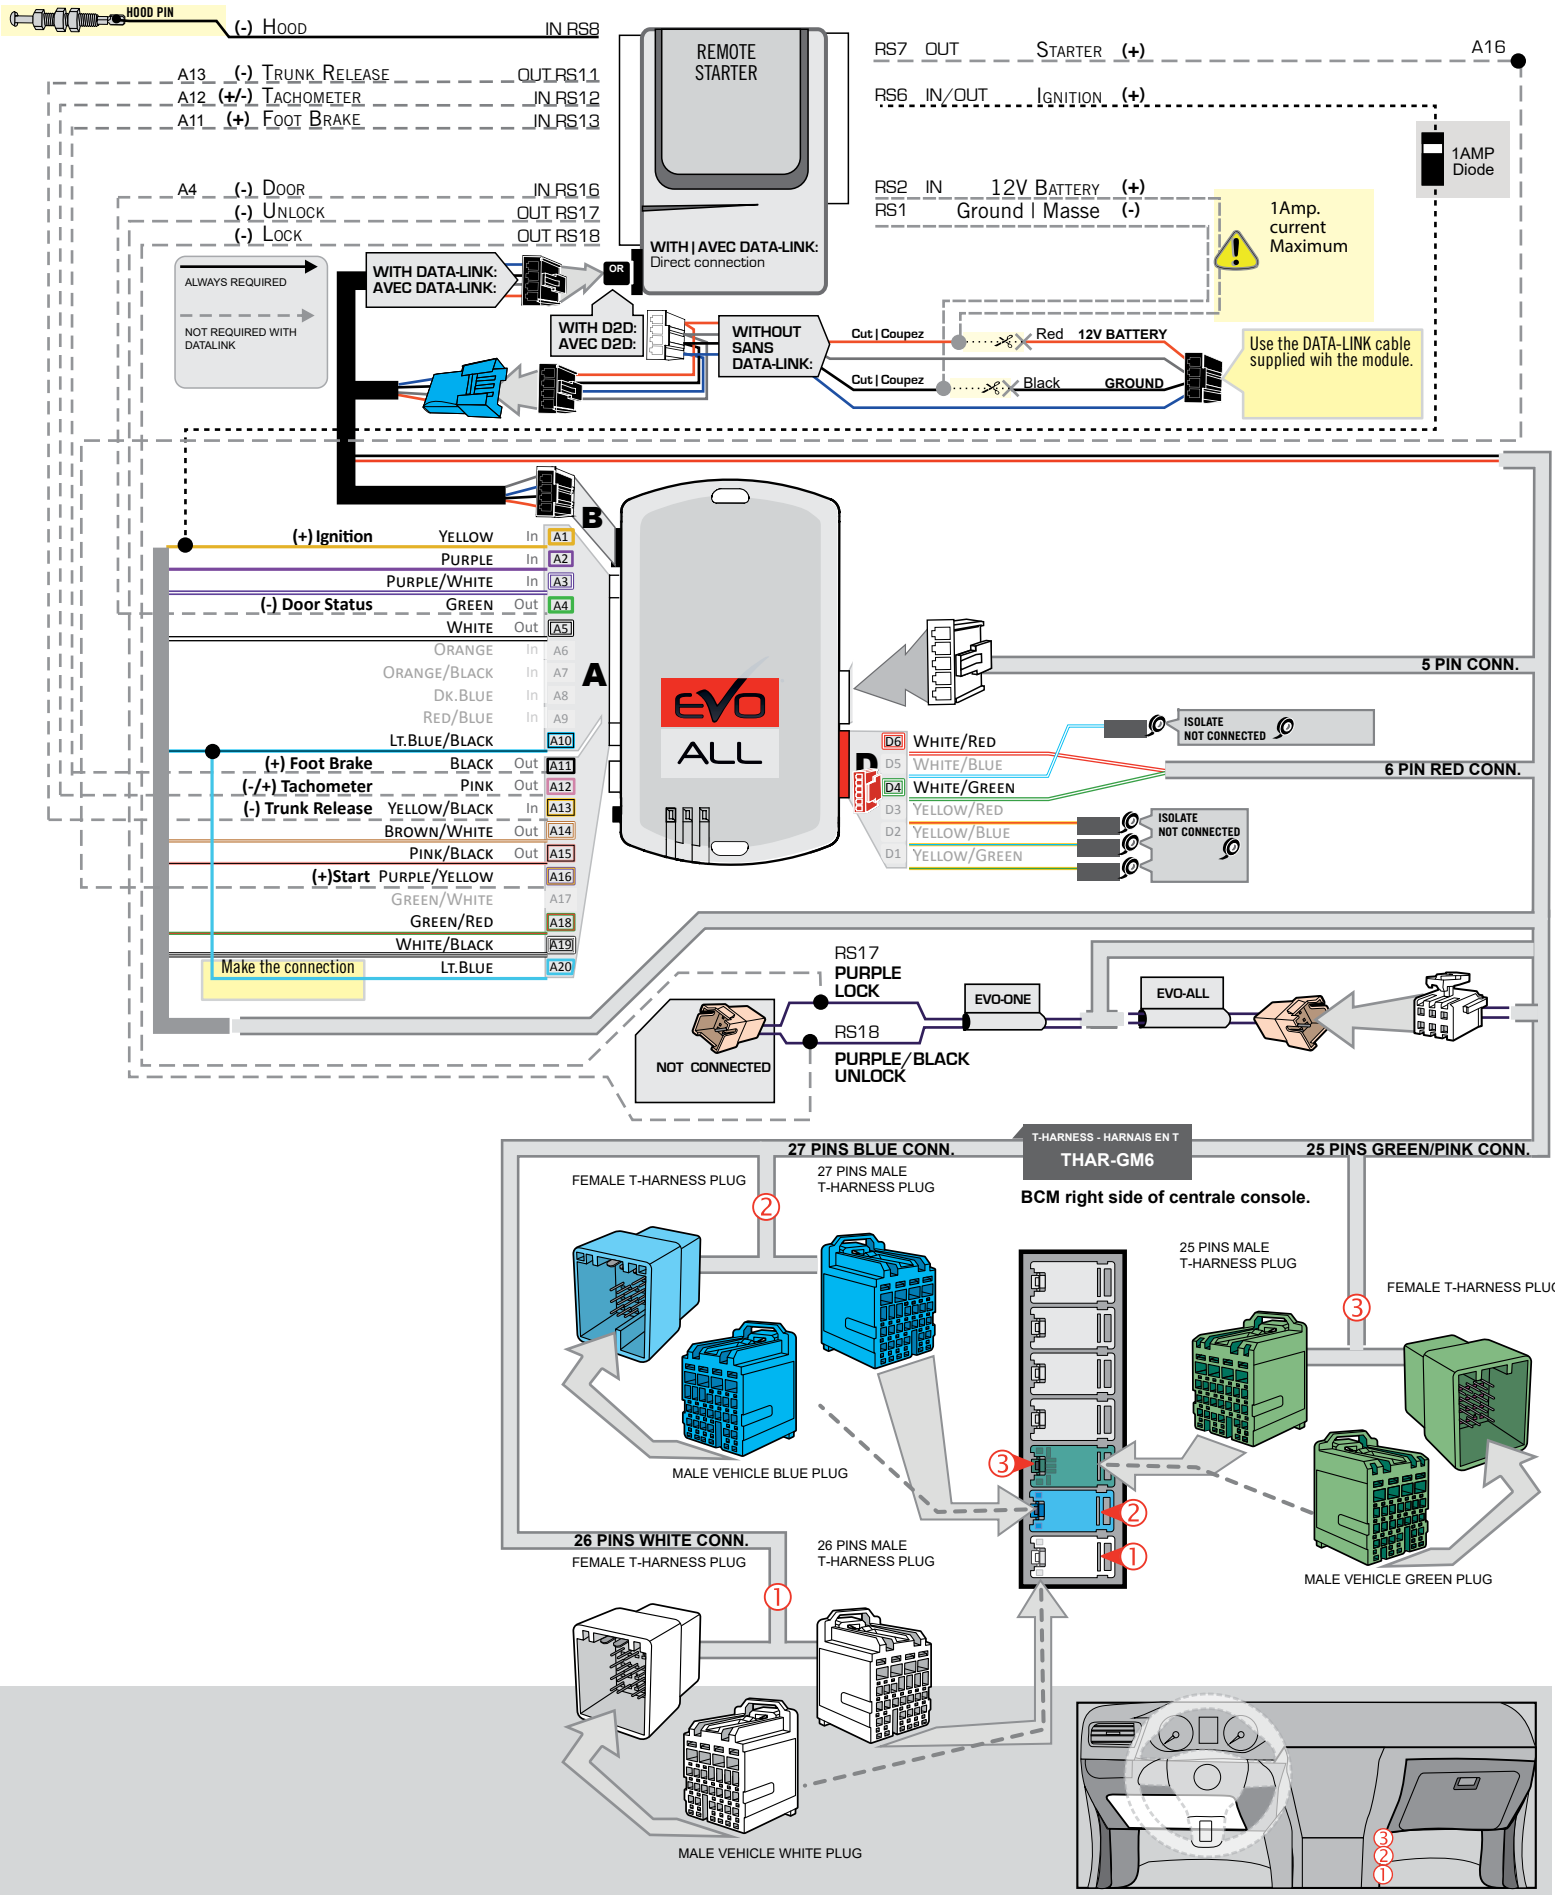


KEY BYPASS PROGRAMMING PROCEDURE 1/3

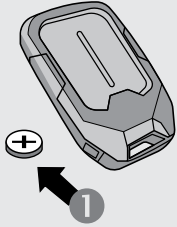


1 Remove the battery from the OEM remote.

2 Place the OEM remote into the transmitter pocket of the center console.

Refer to vehicle user guide for keyport location.

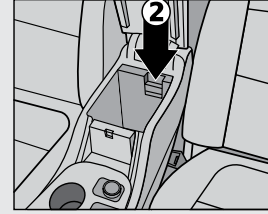


1

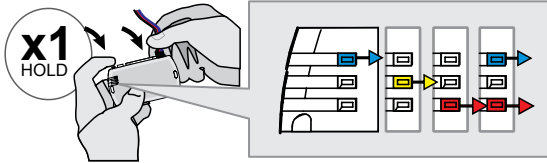

Press and hold the programming button:
Connect the 4-PIN Data-link harness (Black connector).


↳The Blue, Red, Yellow and Blue & Red LEDs will alternatively illuminate.

2

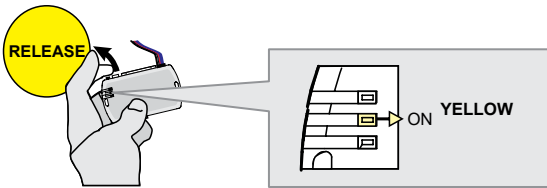


Release the programming button when the LED is YELLOW.

 If the LED is not solid YELLOW disconnect the 4-Pin connector (Data-Link) and go back to step 1.




3

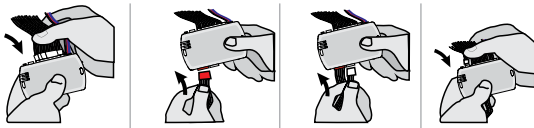

Insert the required remaining connectors.

4

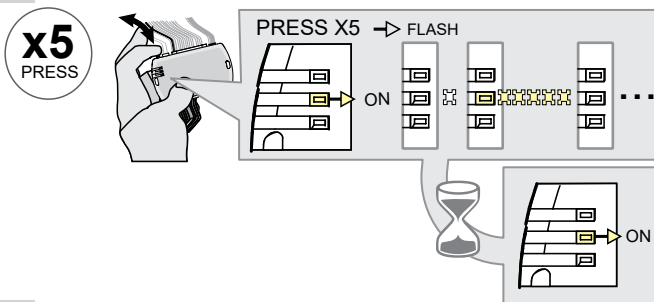


Press and release the programming button five (5x) times.

↳The YELLOW LED will flash 5 times each second.


↳WAIT for the YELLOW LED to turn ON solide.

 5



Open the driver door.

6

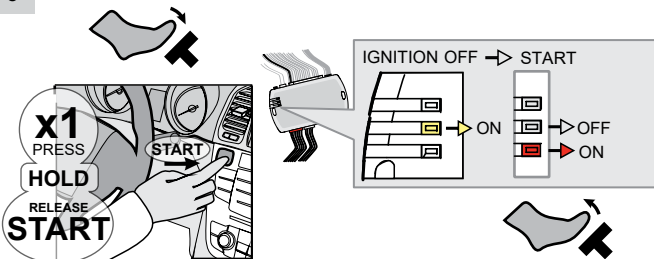

Press the foot-brake pedal.

Press the Push-to-Start button until the engine start.

Release the foot-brake pedal.

*↳The RED LED will turn ON.
↳The YELLOW LED will turn OFF.*


KEY BYPASS PROGRAMMING PROCEDURE 2/3

7




Press the Push-to-Start button until the engine turn OFF.

8

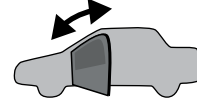

Close and open the driver door.

9

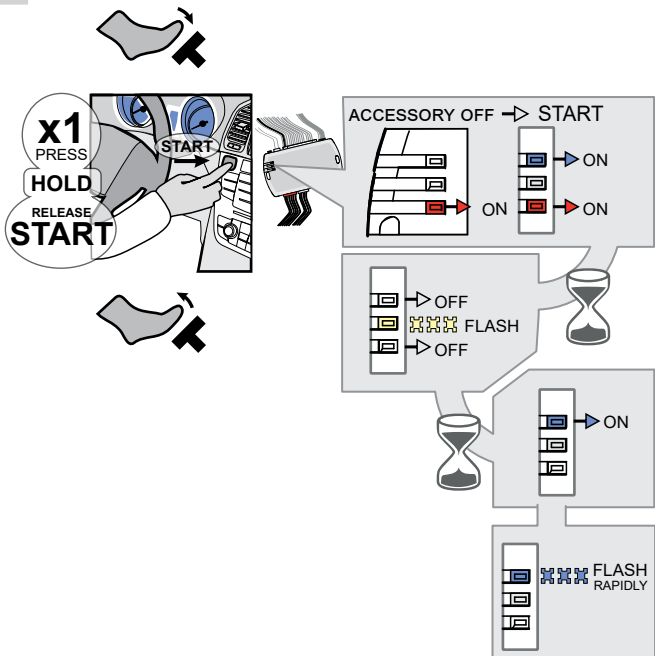


Press the foot-brake pedal.

Press the Push-to-Start button until the engine start.

Release the foot-brake pedal.

- ↳ The BLUE LED will turn ON.
- ↳ The BLUE LED will turn OFF. The RED LED will turn OFF.
- ↳ The YELLOW LED will flash rapidly
- ↳ The BLUE LED will turn ON.
- ↳ The BLUE LED will flash rapidly


10

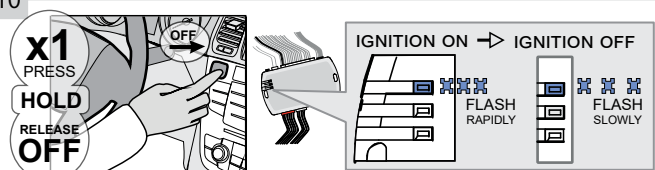

Press the Push-to-Start button until the engine turn OFF.


- ↳ The BLUE LED will flash slowly

11

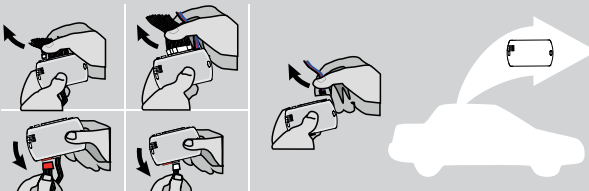

Disconnect all the connectors and after the Data-Link (4-pins) connector.

12


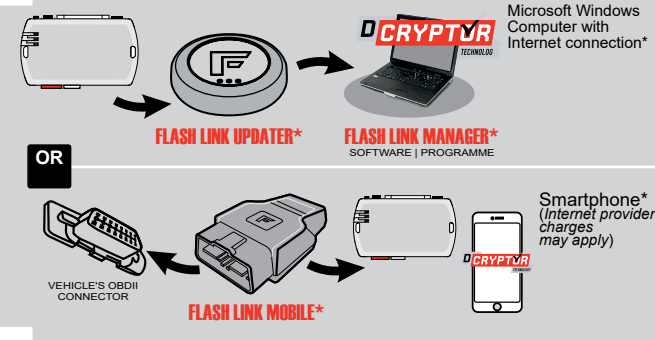


Use the tool: FLASH LINK UPDATER or FLASH LINK MOBILE to visit the DCryptor menu.

***Parts required (not included)**

KEY BYPASS PROGRAMMING PROCEDURE 3/3

13

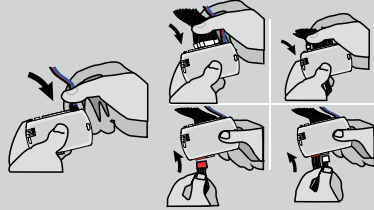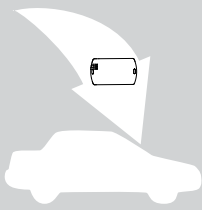

AFTER DCRYPTOR PROGRAMMING COMPLETED
Go back to the vehicle and **reconnect** the 4-Pin (Data-Link) connector and after, all the remaining connector.



The module is now programmed.



REMOTE STARTER / ALARM VERIFICATION PROCEDURE

Test the remote starter. Remote start the vehicle.

REMOTE STARTER FUNCTIONALITY

 


All doors must be closed.


Remote start the vehicle.



Press the Unlock button of the remote car starter.



Enter the vehicle with the Intelligent Access Key.

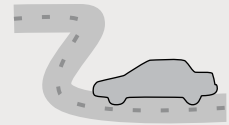

The vehicle can now be put in to gear and driven.




If the vehicle is not unlocked the module will shut down the remote-starter and the vehicle as soon as any door is opened.

THAR-GM6

THARNNESS INSTALLATION

ADDENDUM - SUGGESTED WIRING CONFIGURATION

VEHICLE	YEARS	Vehicle functions supported in this diagram (functional if equipped)														
		Immobilizer bypass	T-Harness	Lock	Unlock	Arm	Disarm	Trunk (open)	RAP Disable	Tachometer	Heated Seats	Door Status	Trunk Status (Data-Link Only/Data-Link Seulement)	Hand-Brake Status (Data-Link Only/Data-Link Seulement)	Foot-Brake Status	OEM Remote monitoring
CHEVROLET																
Bolt	Push-To-Start	2016-2019	•	•	•	•	•	•	•	•	•	•	•	•	•	•




FIRMWARE VERSION


70.[41]



GM MINIMUM


To add the firmware version and the options, use the **FLASH LINK UPDATER** or **FLASH LINK MOBILE** tool, sold separately.

IF THE VEHICLE IS NOT EQUIPPED WITH FUNCTIONAL HOOD PIN:	A11	OFF	Hood trigger (Output Status).
--	-----	-----	-------------------------------


	UNIT OPTION	DESCRIPTION
 <p>Program bypass option:</p>	C1	OEM Remote status (Lock/Unlock) monitoring
	D6	Push-to-Start

	UNIT OPTION	DESCRIPTION
 <p>Program bypass option (Vehicle hybrid only):</p>	D4	Hybrid mode (Vehicle hybrid only)

	ATTENTION!	 <p>DATE: XX-XX</p>	E5	<p style="color: red; font-weight: bold;">SPECIAL FUNCTIONS: BY DEFAULT DEACTIVATED</p> <p style="color: red; font-weight: bold;">MANUFACTURED MODULES BETWEEN: 04/2018 TO 04/2019</p>
---	------------	--	----	--

 **Parts required (Not included)**






1X 1Amp Diode

MANDATORY INSTALL	<p>*HOOD PIN</p> <p> HOOD STATUS: THE HOOD PIN SWITCH MUST BE INSTALLED IF THE VEHICLE CAN BE REMOTE STARTED WITH THE HOOD OPEN, SET FUNCTION A11 TO OFF.</p>	A11	OFF	<p style="font-size: 10px; color: red;">Notice: the installation of safety elements are mandatory. The hood pin is an essential security element and must be installed.</p>	<p style="font-size: 10px; color: red;">THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.</p>
-------------------	--	-----	-----	---	--


DESCRIPTION



BCM

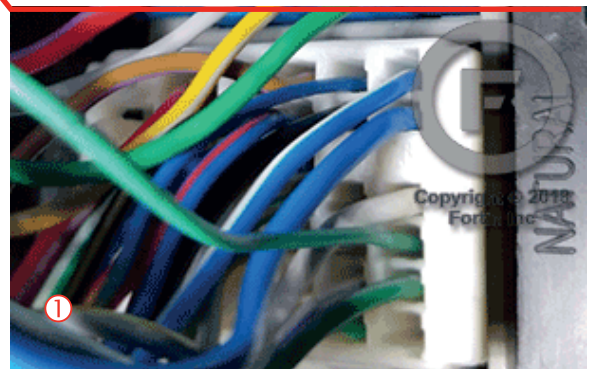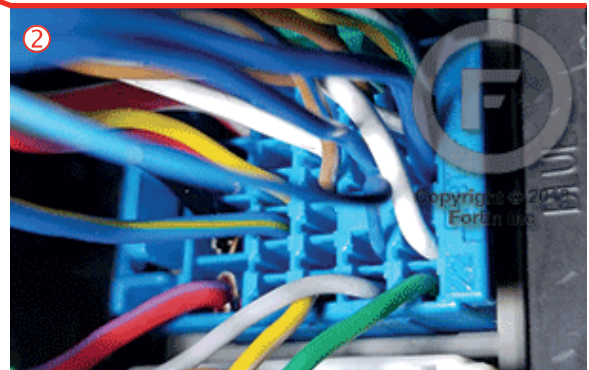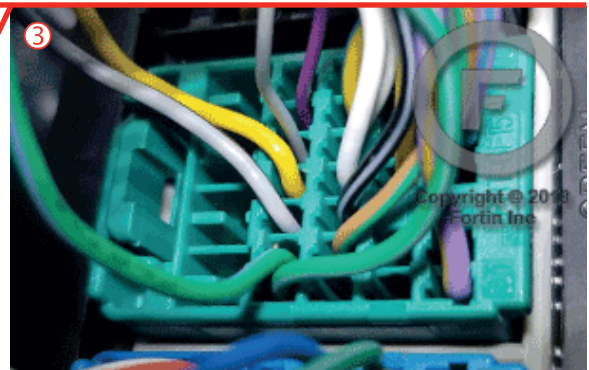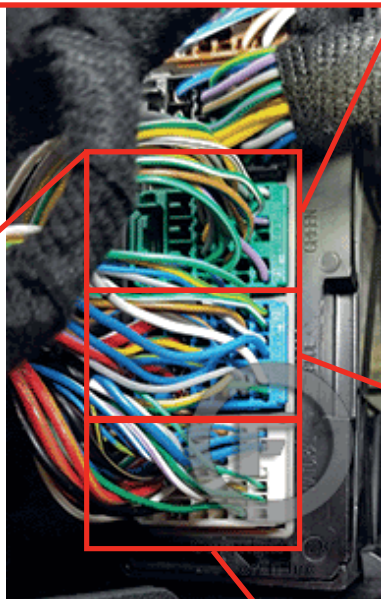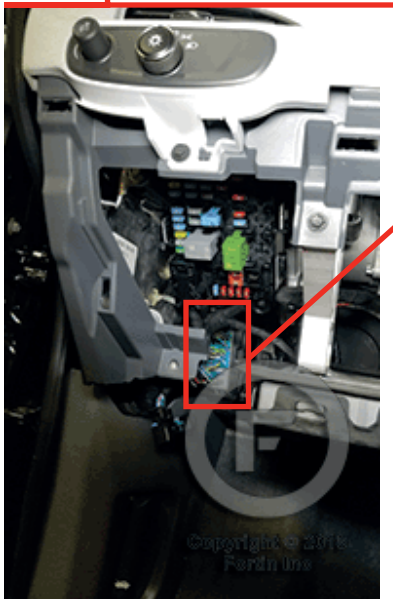


AUTOMATIC TRANSMISSION WIRING CONNECTION

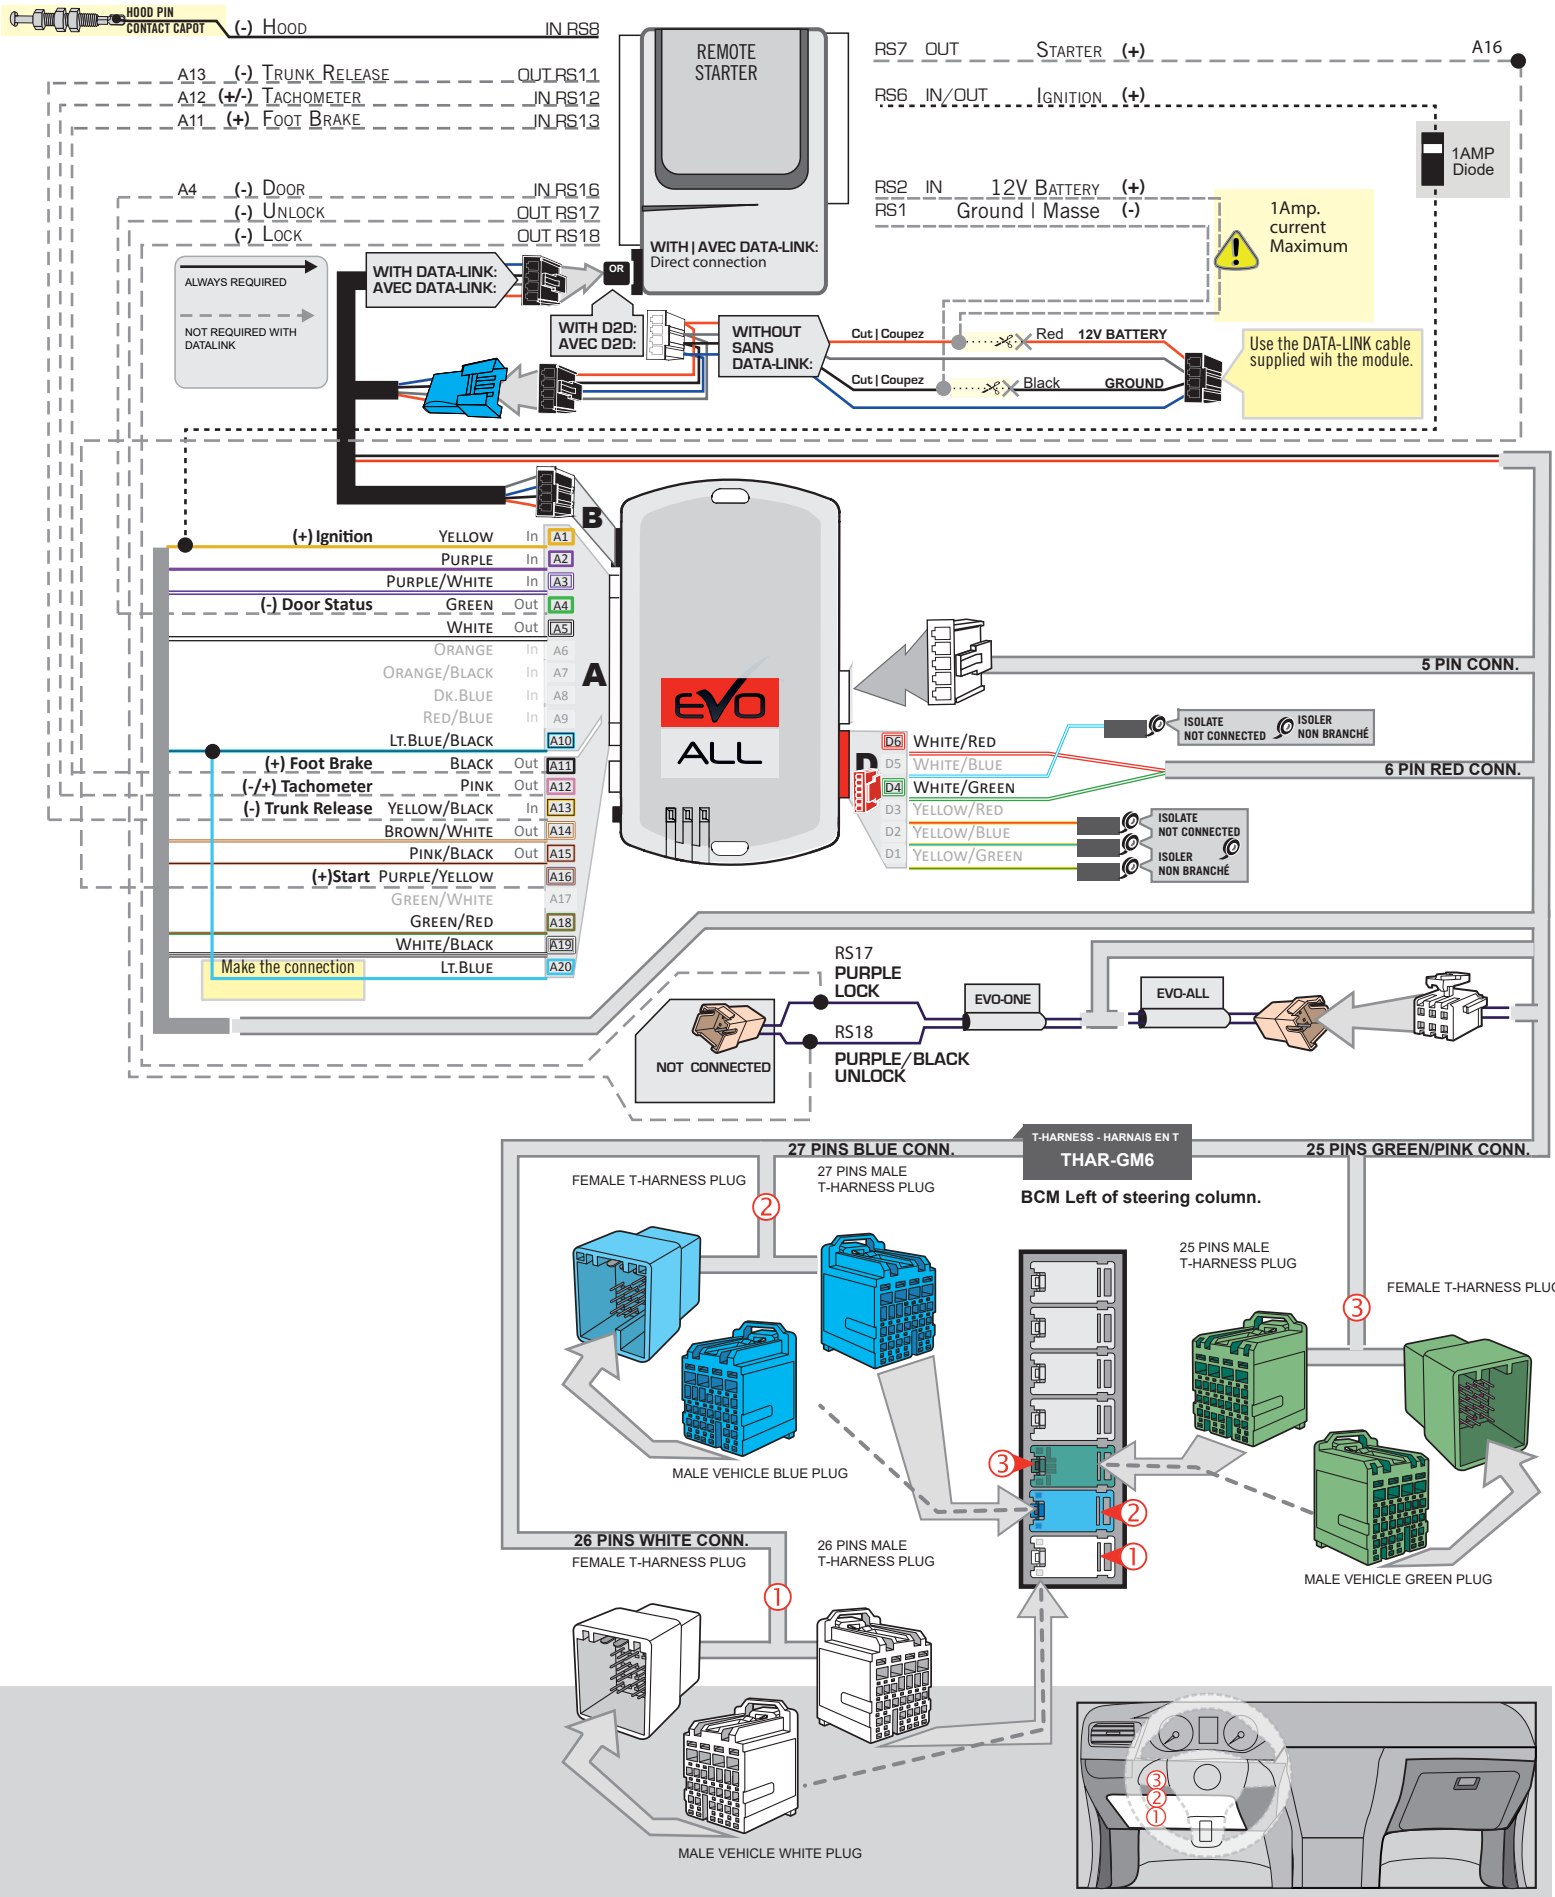


KEY BYPASS PROGRAMMING PROCEDURE 1/3



- 1 Remove the battery from the OEM remote.
- 2 Place the OEM remote into the center console. Refer to vehicle user guide for keyport location.

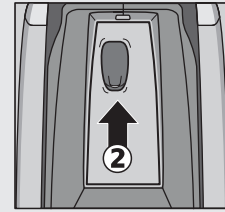


1

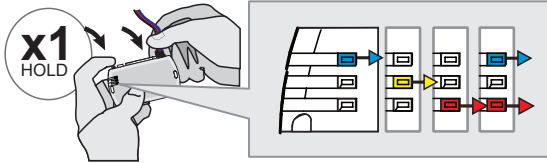

Press and hold the programming button:
Connect the 4-PIN Data-link harness (Black connector).


↳The Blue, Red, Yellow and Blue & Red LEDs will alternatively illuminate.

2

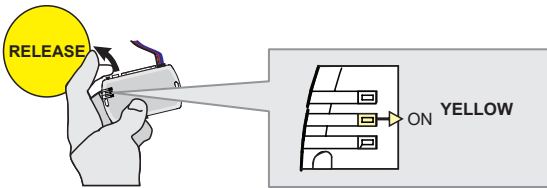


Release the programming button when the LED is YELLOW.

 If the LED is not solid YELLOW disconnect the 4-Pin connector (Data-Link) and go back to step 1.




3

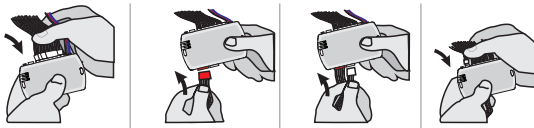

Insert the required remaining connectors.

4

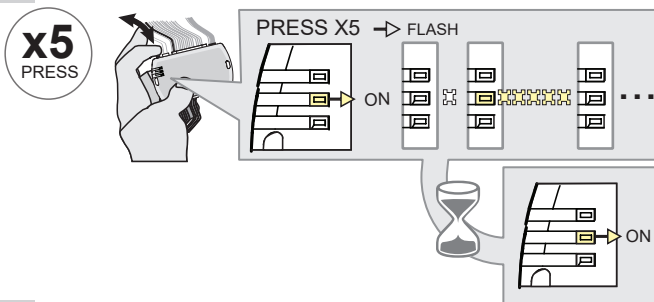


Press and release the programming button five (5x) times.

↳The YELLOW LED will flash 5 times each second.


↳WAIT for the YELLOW LED to turn ON solide.

 5



Open the driver door.

6

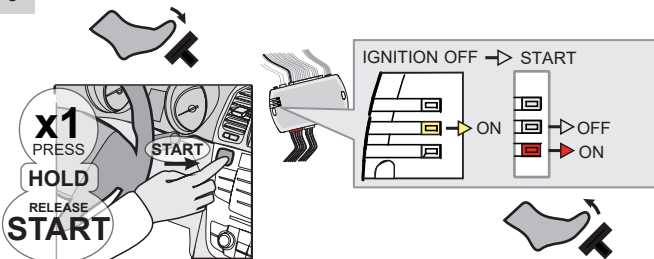

Press the foot-brake pedal.

Press the Push-to-Start button until the engine start.

Release the foot-brake pedal.

↳The RED LED will turn ON.
↳The YELLOW LED will turn OFF.


KEY BYPASS PROGRAMMING PROCEDURE 2/3

7




Press the Push-to-Start button until the engine turn OFF.

8

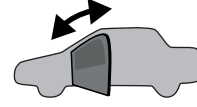

Close and open the driver door.

9

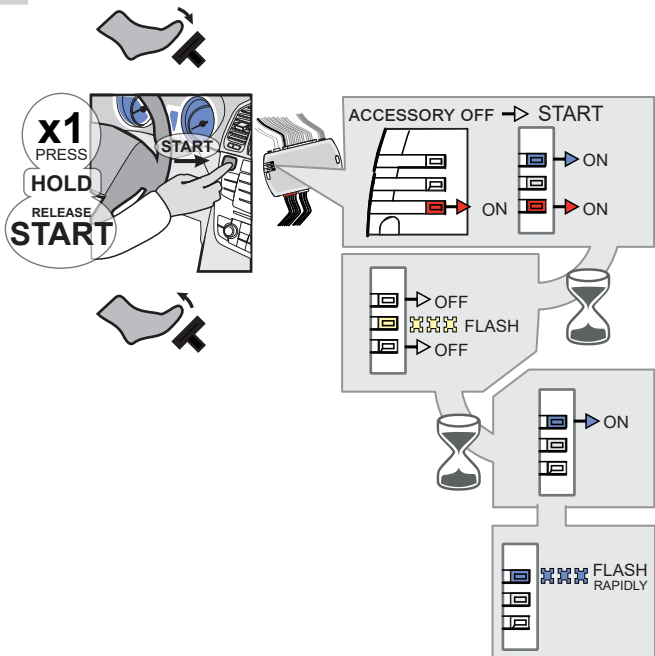


Press the foot-brake pedal.

Press the Push-to-Start button until the engine start.

Release the foot-brake pedal.

- ↳ The BLUE LED will turn ON.
- ↳ The BLUE LED will turn OFF. The RED LED will turn OFF.
- ↳ The YELLOW LED will flash rapidly
- ↳ The BLUE LED will turn ON.
- ↳ The BLUE LED will flash rapidly


10

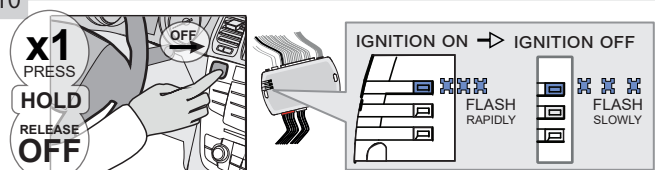

Press the Push-to-Start button until the engine turn OFF.


- ↳ The BLUE LED will flash slowly

11

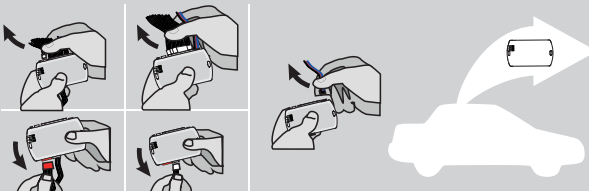

Disconnect all the connectors and after the Data-Link (4-pins) connector.

12

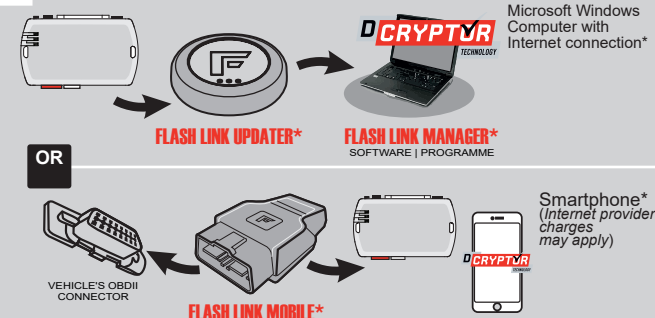

Microsoft Windows Computer with Internet connection*

FLASH LINK UPDATER* **FLASH LINK MANAGER***
SOFTWARE | PROGRAMME

OR

Smartphone* (Internet provider charges may apply)



FLASH LINK MOBILE*

Use the tool: FLASH LINK UPDATER or FLASH LINK MOBILE to visit the DCryptor menu.

*Parts required (not included)

KEY BYPASS PROGRAMMING PROCEDURE 3/3

13

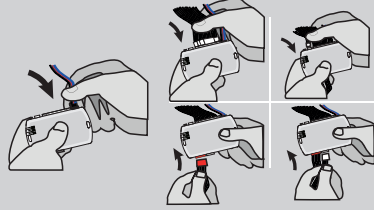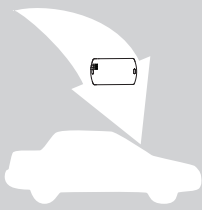

AFTER DCRYPTOR PROGRAMMING COMPLETED
Go back to the vehicle and **reconnect** the 4-Pin (Data-Link) connector and after, all the remaining connector.



The module is now programmed.



REMOTE STARTER / ALARM VERIFICATION PROCEDURE

Test the remote starter. Remote start the vehicle.

REMOTE STARTER FUNCTIONALITY



All doors must be closed.

Remote start the vehicle.



Press the Unlock button of the remote car starter or the OEM remote.



Enter the vehicle with the Intelligent Access Key.

The vehicle can now be put in to gear and driven.



If the vehicle is not unlocked the module will shut down the remote-starter and the vehicle as soon as any door is opened.

THAR-GM6

THARNNESS INSTALLATION

ADDENDUM - SUGGESTED WIRING CONFIGURATION

VEHICLE	YEARS	Vehicle functions supported in this diagram (functional if equipped)																	
		Immobilizer bypass	Lock	Unlock	Arm	Disarm	Trunk (open)	Parking Light	RAP Disable	Tachometer	Heated Seats	Door Status	Trunk Status (Data-Link Only, Data-Link Seule-ment)	Hand-Brake Status (Data-Link Only, Data-Link Seule-ment)	Foot-Brake Status	OEM Remote Monitoring			
CHEVROLET																			
Camaro	Push-To-Start **	2016-2019	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•

NOTES

****Manuelle Transmission, Transmission Manuelle** Remote starter with compatible Data-Link required

FIRMWARE VERSION

70.[41]

GM MINIMUM

To add the firmware version and the options, use the **FLASH LINK UPDATER** or **FLASH LINK MOBILE** tool, sold separately.

IF THE VEHICLE IS NOT EQUIPPED WITH FUNCTIONAL HOOD PIN:	A11	OFF	Hood trigger (Output Status).
--	-----	-----	-------------------------------

	UNIT OPTION	DESCRIPTION
<p>Program bypass option:</p>	C1	OEM Remote status (Lock/Unlock) monitoring
	D6	Push-to-Start

	ATTENTION!	<p>DATE: XX-XX</p>	E5	OFF	<p>SPECIAL FUNCTIONS: BY DEFAULT DEACTIVATED</p>
			ON	<p>MANUFACTURED MODULES BETWEEN: 04/2018 TO 04/2019</p>	

- Parts required (Not included)**
- 1X 1Amp Diode
 - 1X Fuse (manual transmission)
 - 1X 180 Ohm Resistor (manual transmission)

MANDATORY INSTALL



HOOD STATUS: THE HOOD PIN SWITCH MUST BE INSTALLED IF THE VEHICLE CAN BE REMOTE STARTED WITH THE HOOD OPEN, SET FUNCTION A11 TO OFF.


A11	OFF
-----	-----

Notice: the installation of safety elements are mandatory. The hood pin is an essential security element and must be installed.


THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.

DESCRIPTION


BCM located on left side of the steering column

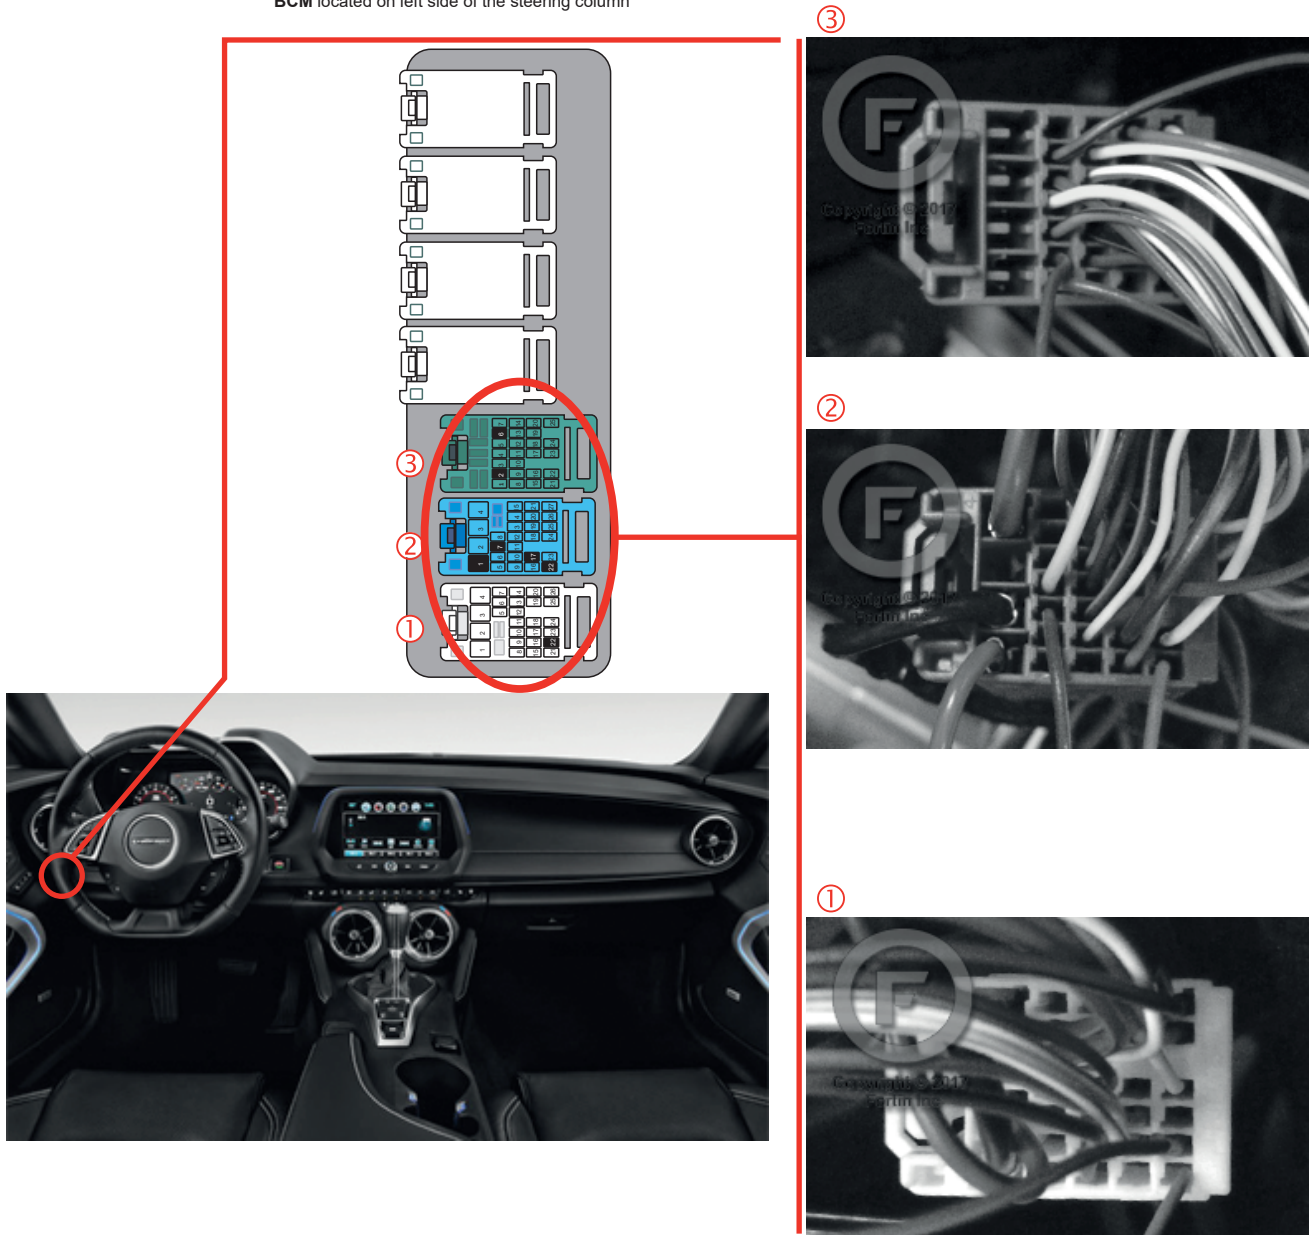


AUTOMATIC TRANSMISSION WIRING CONNECTION

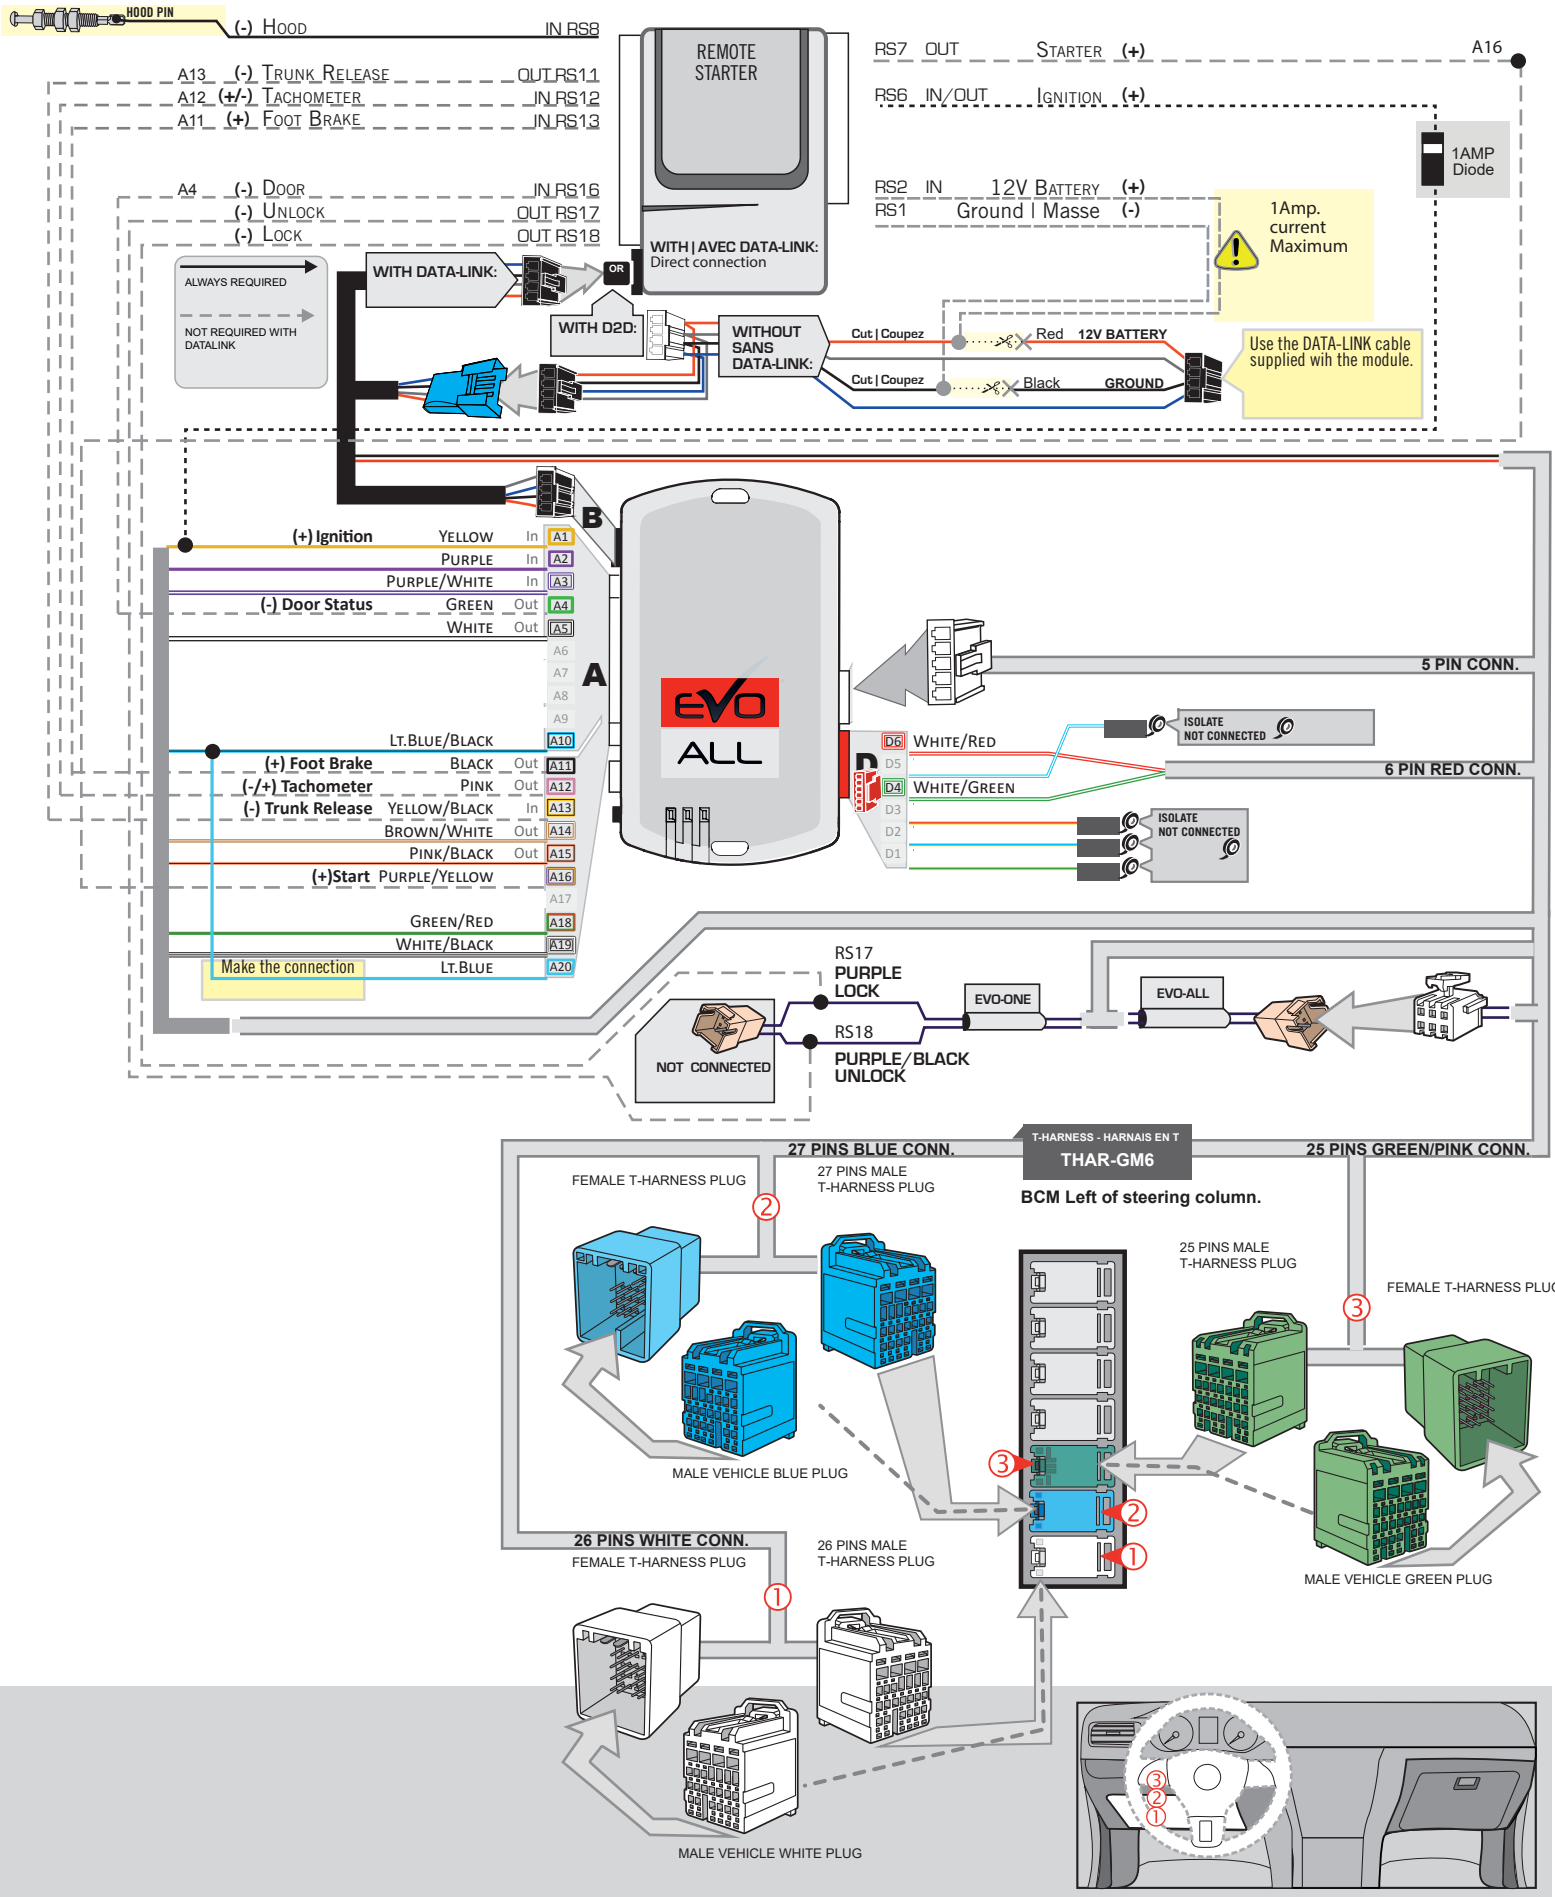

MANUAL TRANSMISSION WIRING CONNECTION

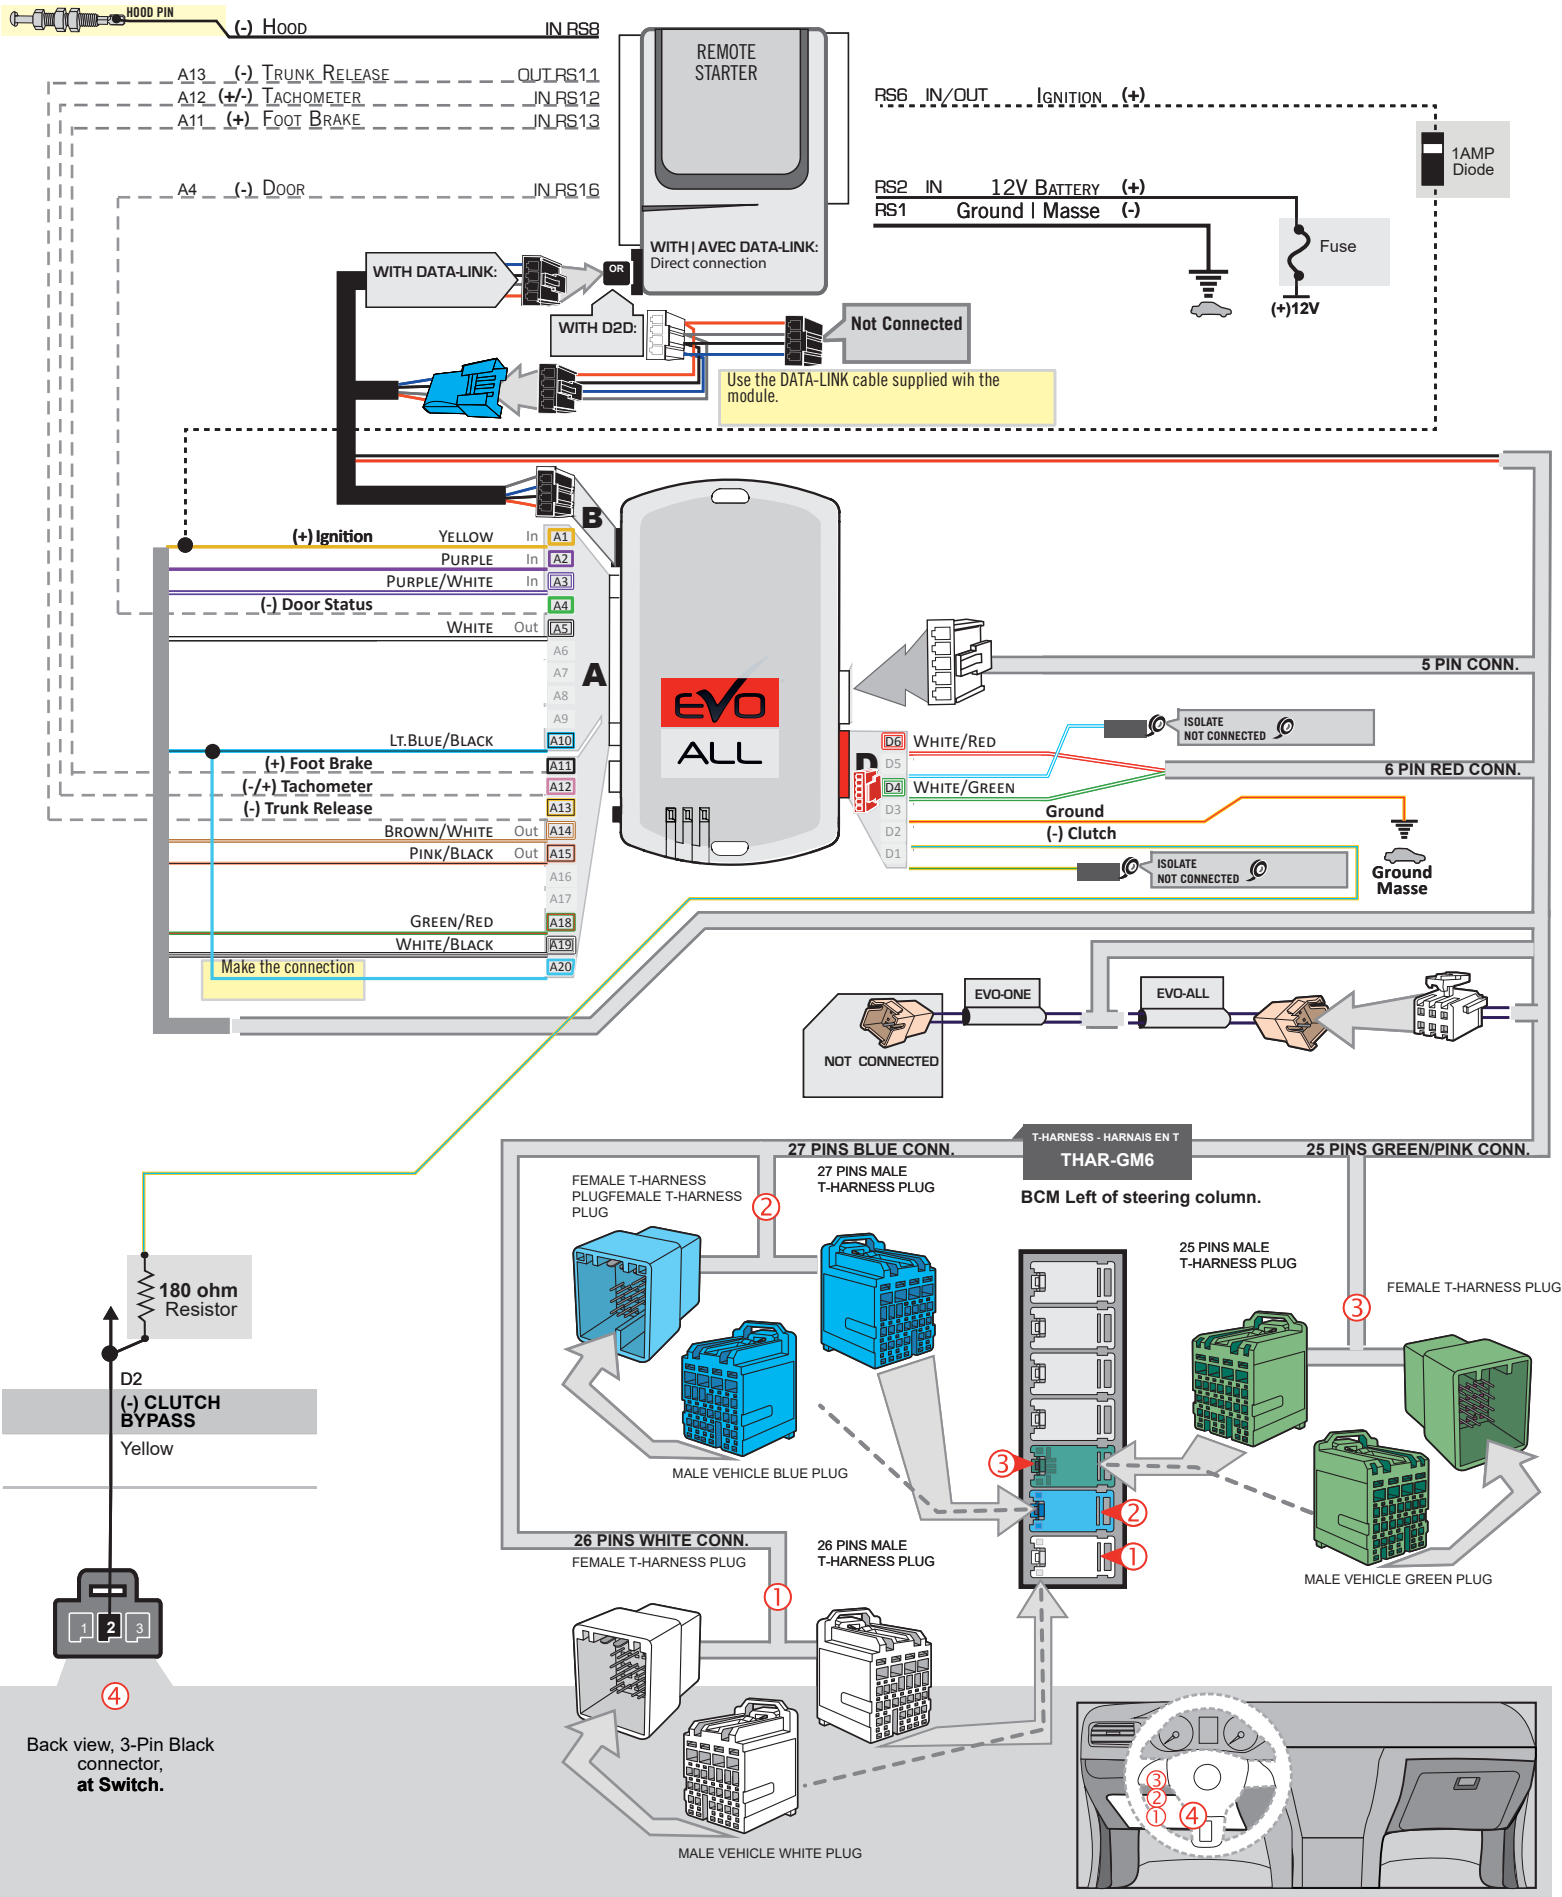


KEY BYPASS PROGRAMMING PROCEDURE 1/3

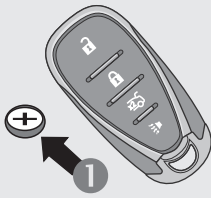


1 Remove the battery from the OEM remote.

2 Place the OEM remotes in to the center console.

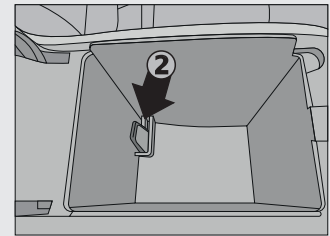


1

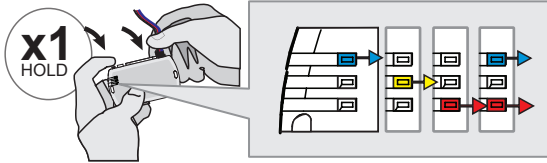

Press and hold the programming button:
Connect the 4-PIN Data-link harness (Black connector).


↳The Blue, Red, Yellow and Blue & Red LEDs will alternatively illuminate.

2

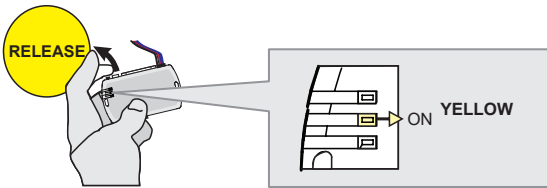


Release the programming button when the LED is YELLOW.

 If the LED is not solid YELLOW disconnect the 4-Pin connector (Data-Link) and go back to step 1.




3

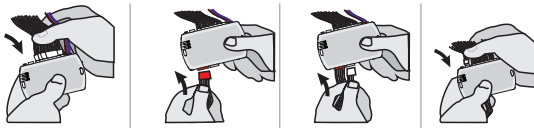

Insert the required remaining connectors.

4

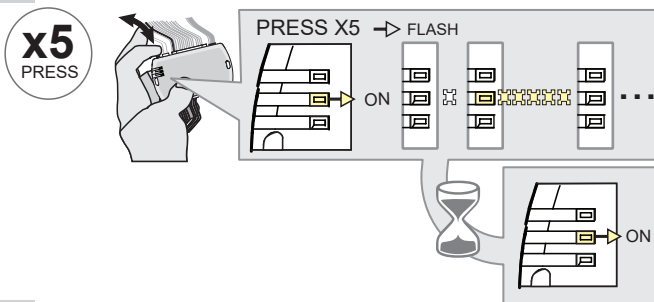


Press and release the programming button five (5x) times.

↳The YELLOW LED will flash 5 times each second.


↳WAIT for the YELLOW LED to turn ON solide.

 5



Open the driver door.

6

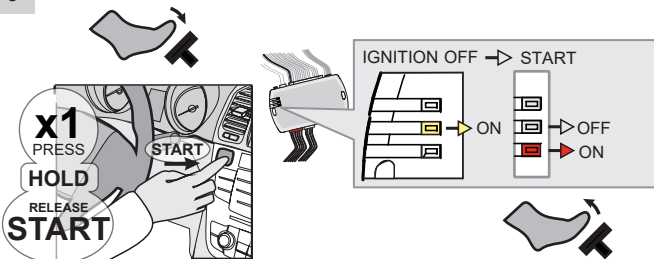

Press the foot-brake pedal.

Press the Push-to-Start button until the engine start.

Release the foot-brake pedal.

↳The RED LED will turn ON.
↳The YELLOW LED will turn OFF.

KEY BYPASS PROGRAMMING PROCEDURE 2/3

7

Press the Push-to-Start button until the engine turn OFF.

8

Close and open the driver door.

9

Press the foot-brake pedal.

Press the Push-to-Start button until the engine start.

Release the foot-brake pedal.

- ↳ The BLUE LED will turn ON.
- ↳ The BLUE LED will turn OFF. The RED LED will turn OFF.
- ↳ The YELLOW LED will flash rapidly
- ↳ The BLUE LED will turn ON.
- ↳ The BLUE LED will flash rapidly

10

Press the Push-to-Start button until the engine turn OFF.

- ↳ The BLUE LED will flash slowly

11

Disconnect all the connectors and after the Data-Link (4-pins) connector.



12

Use the tool: FLASH LINK UPDATER or FLASH LINK MOBILE to visit the DCryptor menu.

***Parts required (not included)**

KEY BYPASS PROGRAMMING PROCEDURE 3/3

13

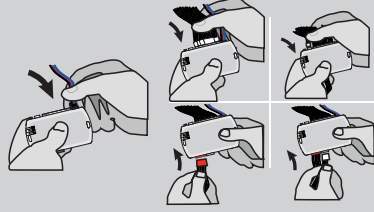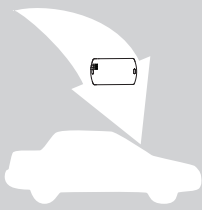

AFTER DCRYPTOR PROGRAMMING COMPLETED
Go back to the vehicle and **reconnect** the 4-Pin (Data-Link) connector and after, all the remaining connector.



The module is now programmed.



REMOTE STARTER / ALARM VERIFICATION PROCEDURE

Test the remote starter. Remote start the vehicle.

REMOTE STARTER FUNCTIONALITY



All doors must be closed.

 


Remote start the vehicle.



Unlock the doors with either:

- The OEM remote
- The remote-starter remote
- Or the proximity remote



Enter the vehicle with the Intelligent Key.



The vehicle can now be put in to gear and driven.

If the vehicle is not unlocked with one of these conditions the remote-starter will shut down as soon as any door is opened.



THAR-GM6
THARNNESS INSTALLATION

ADDENDUM - SUGGESTED WIRING CONFIGURATION


Vehicle functions supported in this diagram (functional if equipped)

VEHICLE	YEARS	Immobilizer bypass	Lock	Unlock	Arm	Disarm	Trunk (open)	RAP Disable	Tachometer	Door Status	Trunk Status (Data-Link Only, Data-Link Seulement)	Hood Status*	Hand-Brake Status (Data-Link Only, Data-Link Seulement)	Foot-Brake Status	Push-to-Start Control	OEM Remote monitoring
CADILLAC																
ATS	Push-to-start**	2013-2018	•	•	•	•	•	•	•	•	•	•	•	•	•	•
CTS	Push-to-start**	2014-2016	•	•	•	•	•	•	•	•	•	•	•	•	•	•
CTS-V	Push-to-start	2013-2016	•	•	•	•	•	•	•	•	•	•	•	•	•	•
Escalade	Push-to-start**	2015-2019	•	•	•	•	•	•	•	•	•	•	•	•	•	•
CHEVROLET																
Tahoe	Push-to-start**	2015-2019	•	•	•	•	•	•	•	•	•	•	•	•	•	•
Suburban	Push-to-start**	2015-2019	•	•	•	•	•	•	•	•	•	•	•	•	•	•
GMC																
Yukon	Push-to-start**	2015-2019	•	•	•	•	•	•	•	•	•	•	•	•	•	•
	XL Push-to-start	2015	•	•	•	•	•	•	•	•	•	•	•	•	•	•

FIRMWARE VERSION

70.[41]

GM MINIMUM

To add the firmware version and the options, use the **FLASH LINK UPDATER** or **FLASH LINK MOBILE** tool, sold separately.

<p>IF THE VEHICLE IS NOT EQUIPPED WITH FUNCTIONAL HOOD PIN:</p>	A11	OFF	Hood trigger (Output Status).
--	------------	------------	-------------------------------

		UNIT OPTION	DESCRIPTION
	<p>Program bypass option:</p>	C1	OEM Remote status (Lock/Unlock) monitoring
		D6	Push-to-Start

	<p>ATTENTION!</p>	<p>DATE: XX-XX</p>	E5	<div style="background-color: red; color: white; padding: 5px; margin-bottom: 5px;">OFF</div> <div style="background-color: green; color: white; padding: 5px;">ON</div>	<p>SPECIAL FUNCTIONS: BY DEFAULT DEACTIVATED</p> <p>MANUFACTURED MODULES BETWEEN: 04/2018 TO 04/2019</p>
--	--------------------------	--------------------	-----------	--	--

NOTES

****Manuelle Transmission. Transmission Manuelle** Remote starter with compatible Data-Link required

<p>*HOOD PIN</p>	<p>MANDATORY INSTALL</p> <p>HOOD STATUS: THE HOOD PIN SWITCH MUST BE INSTALLED IF THE VEHICLE CAN BE REMOTE STARTED WITH THE HOOD OPEN, SET FUNCTION A11 TO OFF.</p>	A11	OFF	<p>Notice: the installation of safety elements are mandatory. The hood pin is an essential security element and must be installed.</p>	<p>THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.</p>
-------------------------	--	------------	------------	---	---




DESCRIPTION




Parts required (Not included)
 1X 1Amp Diode
 1X Fuse (manual transmission)
 1X 180 Ohm Resistor (manual transmission)




BCM		ATS
CTS		
Escalade Tahoe Suburban Yukon	Under driver dash	Behind glove box

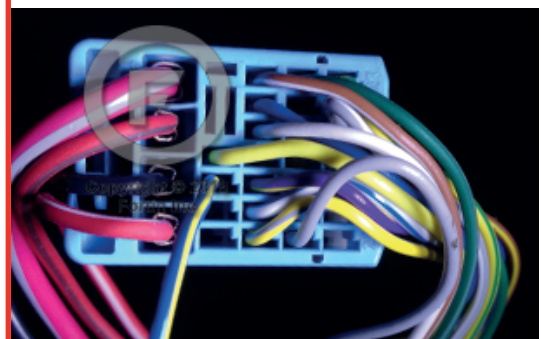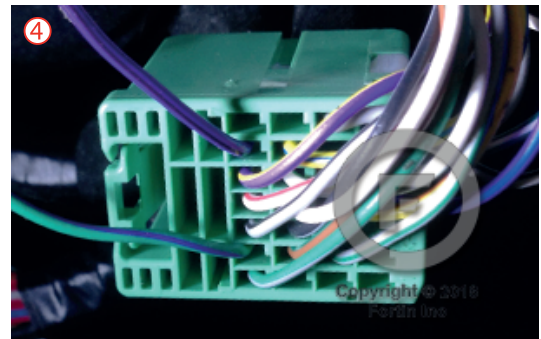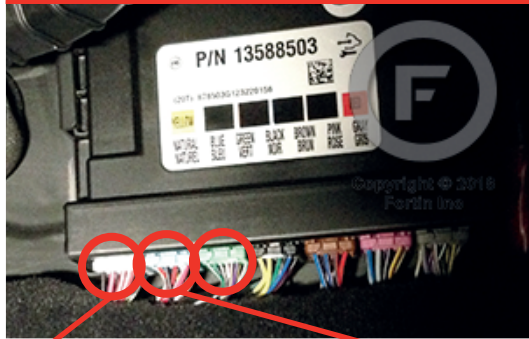


AUTOMATIC TRANSMISSION WIRING CONNECTION

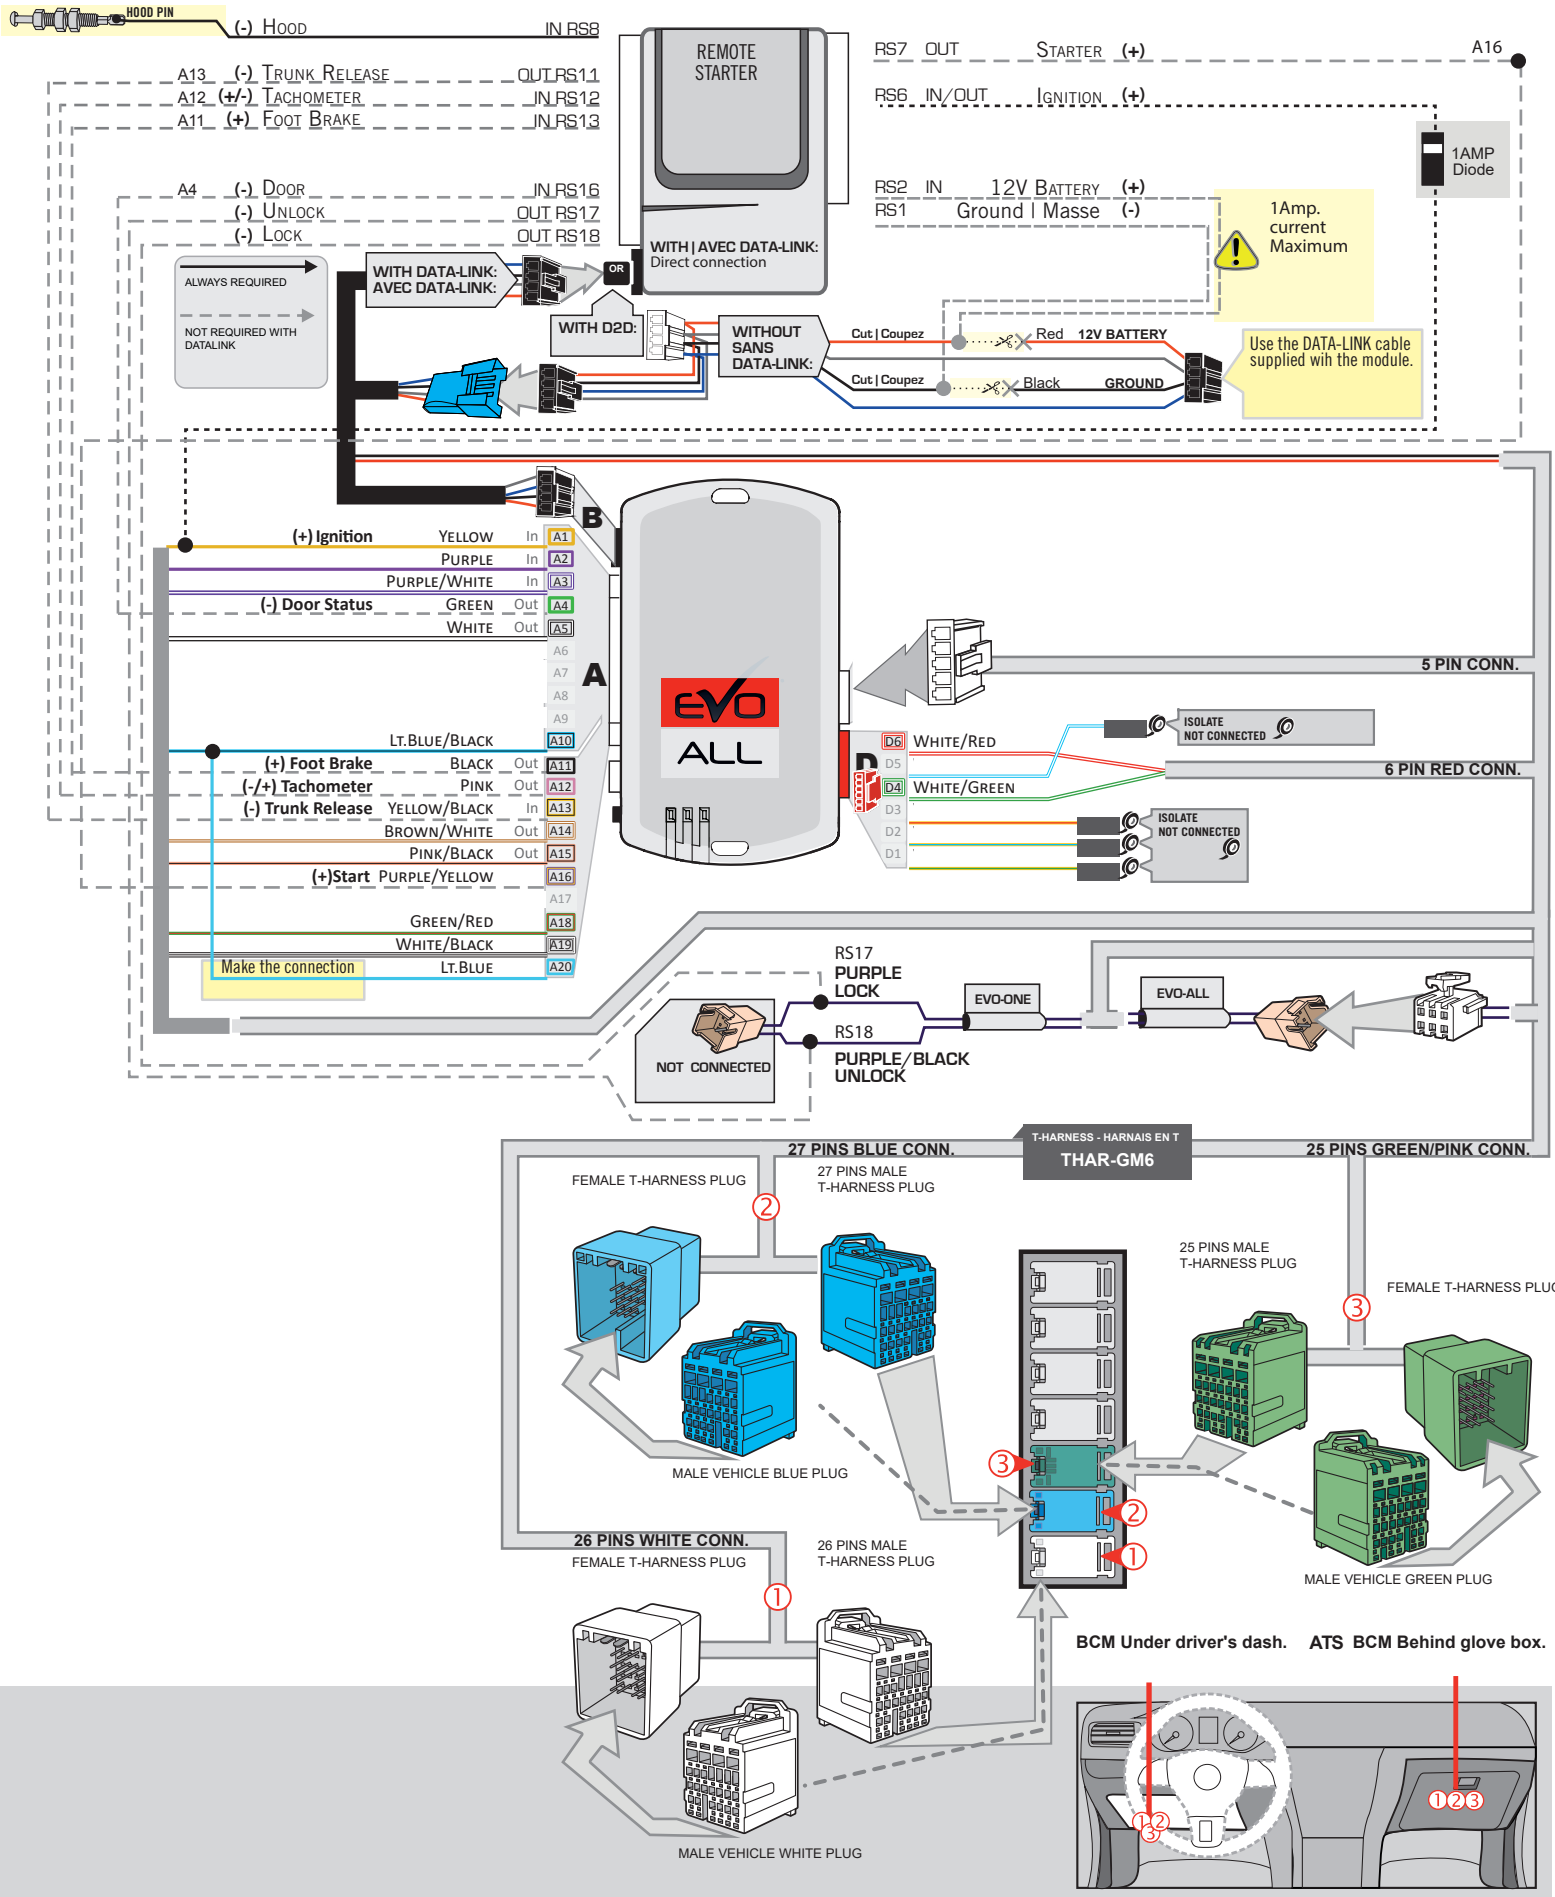

MANUAL TRANSMISSION WIRING CONNECTION

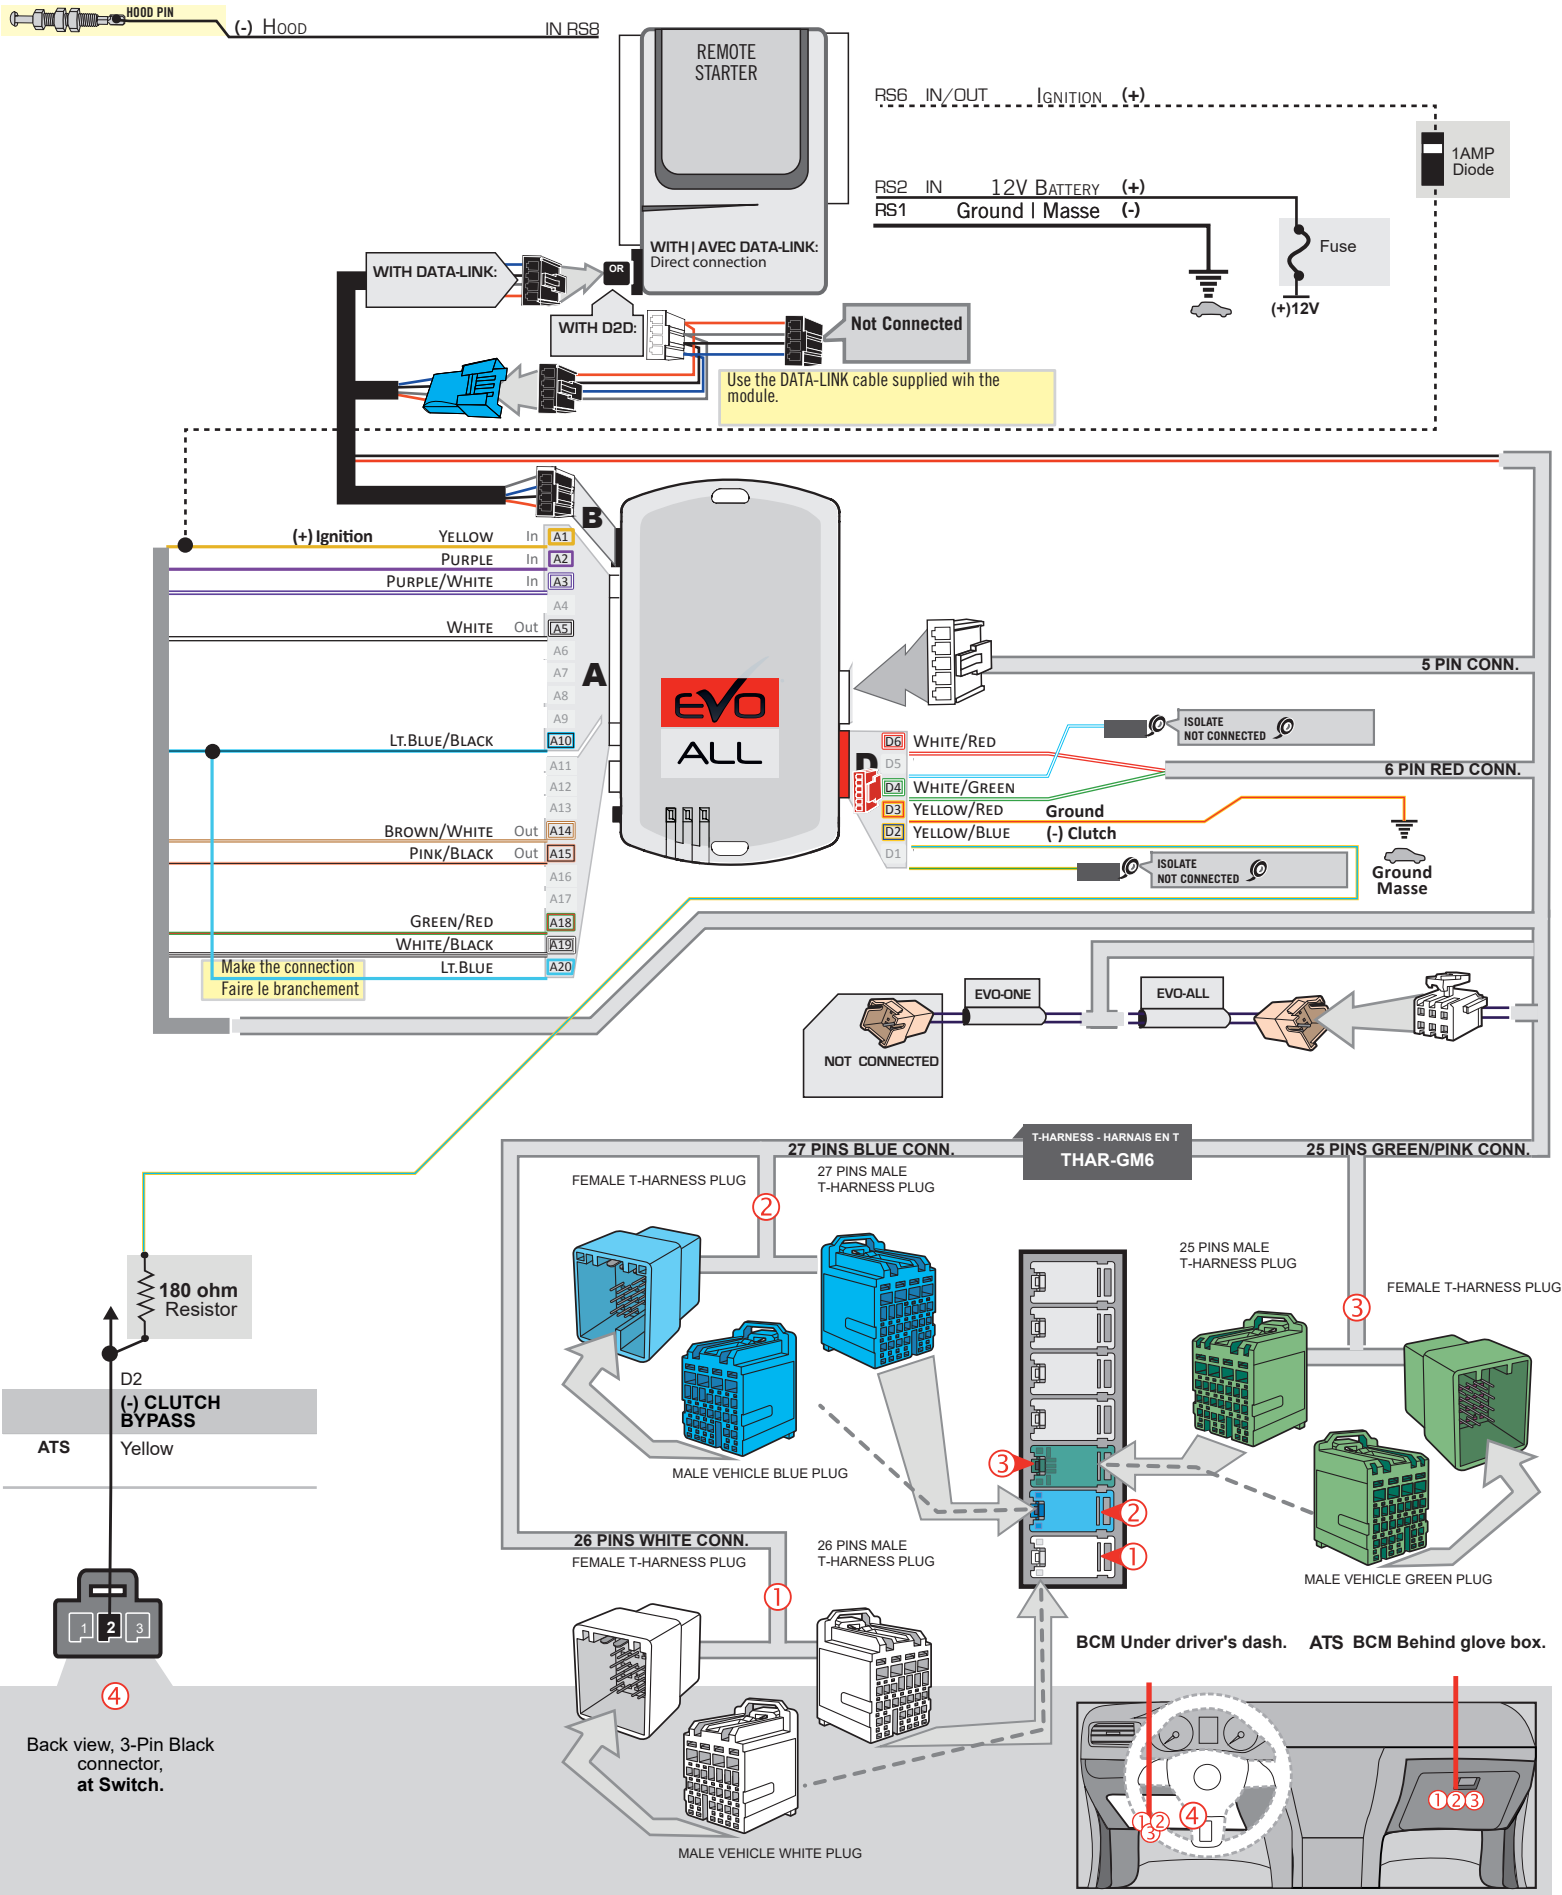


KEY BYPASS PROGRAMMING PROCEDURE 1/3



1 Remove the battery from the OEM remote.

2 Place the OEM remote in the **back** cup holder in the center console.

Refer to vehicle user guide for keyport location.




ATS


1 Remove the battery from the OEM remote.

2 Place the transmitter in the transmitter pocket, which is inside the **centre** console storage area.

Refer to vehicle user guide for keyport location.

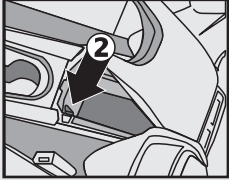

1

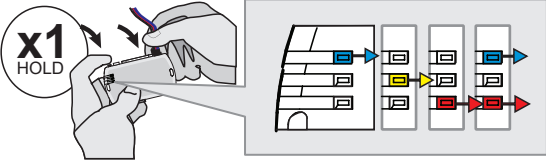


x1 HOLD

Press and hold the programming button:
Connect the 4-PIN Data-link harness (Black connector).

↳The Blue, Red, Yellow and Blue & Red LEDs will alternatively illuminate.


2

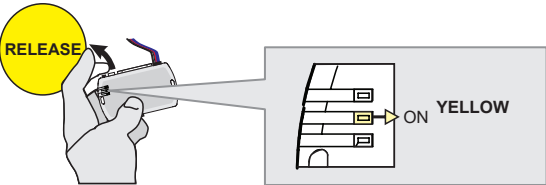


RELEASE

Release the programming button when the LED is **YELLOW**.

If the LED is not solid YELLOW disconnect the 4-Pin connector (Data-Link) and go back to step 1.

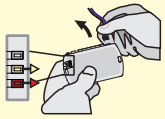


3

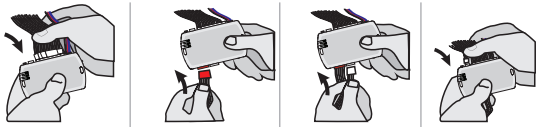

Insert the required remaining connectors.

4

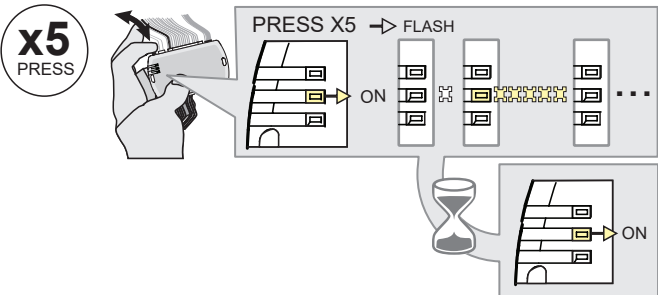


x5 PRESS

Press and release the programming button five (5x) times.

↳The YELLOW LED will flash 5 times each second.


↳WAIT for the YELLOW LED to turn ON solide.

5

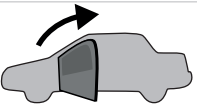

Open the driver door.

6

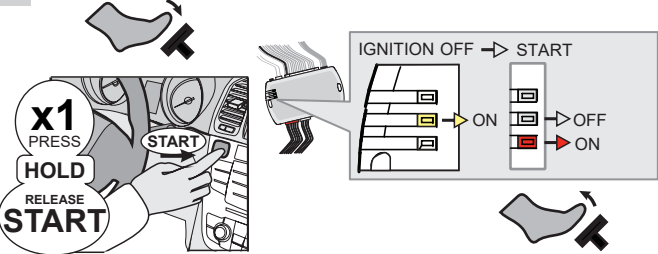

x1 PRESS
HOLD
RELEASE
START

Press the foot-brake pedal.

Press the Push-to-Start button until the engine start.

Release the foot-brake pedal.

↳The RED LED will turn ON.
↳The YELLOW LED will turn OFF.


KEY BYPASS PROGRAMMING PROCEDURE 2/3

7




Press the Push-to-Start button until the engine turn OFF.

8

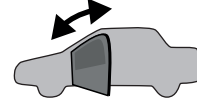

Close and open the driver door.

9

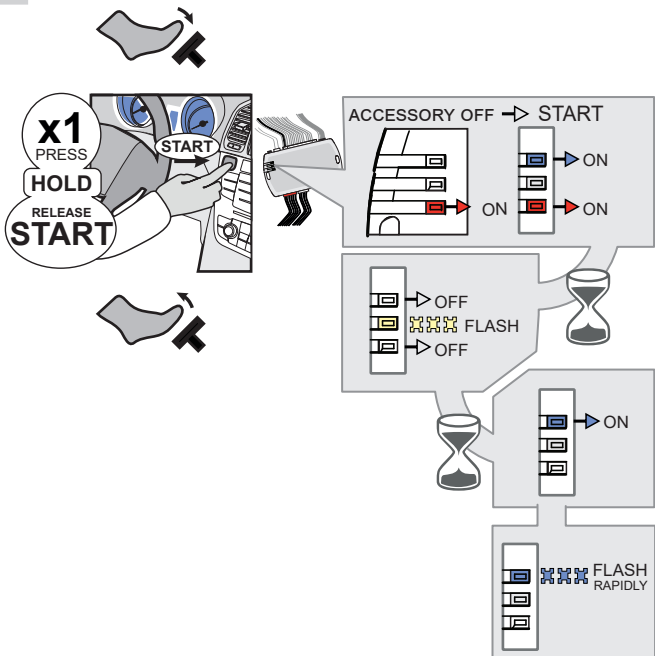


Press the foot-brake pedal.

Press the Push-to-Start button until the engine start.

Release the foot-brake pedal.

- ↳ The BLUE LED will turn ON.
- ↳ The BLUE LED will turn OFF. The RED LED will turn OFF.
- ↳ The YELLOW LED will flash rapidly
- ↳ The BLUE LED will turn ON.
- ↳ The BLUE LED will flash rapidly


10

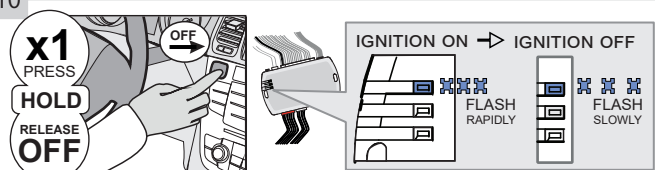

Press the Push-to-Start button until the engine turn OFF.


- ↳ The BLUE LED will flash slowly

11

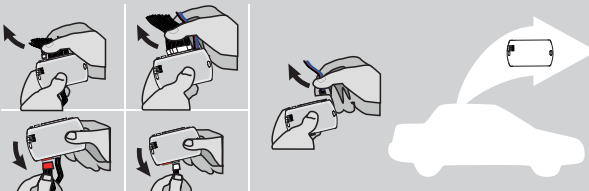

Disconnect all the connectors and after the Data-Link (4-pins) connector.

12


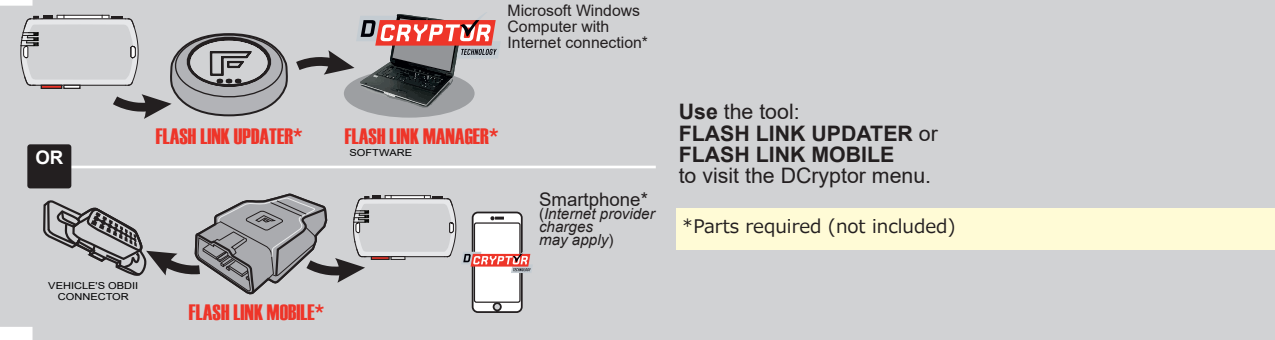


Use the tool: FLASH LINK UPDATER or FLASH LINK MOBILE to visit the DCryptor menu.

***Parts required (not included)**

KEY BYPASS PROGRAMMING PROCEDURE 3/3

13

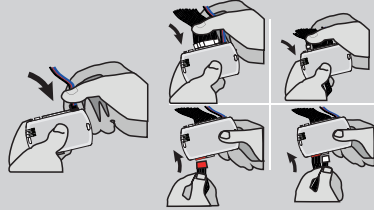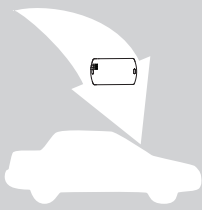

AFTER DCRYPTOR PROGRAMMING COMPLETED
Go back to the vehicle and **reconnect** the 4-Pin (Data-Link) connector and after, all the remaining connector.



The module is now programmed.



REMOTE STARTER / ALARM VERIFICATION PROCEDURE

Test the remote starter. **Remote start** the vehicle.

REMOTE STARTER FUNCTIONALITY |



All doors must be closed.



Remote start the vehicle.



Unlock the doors with either:

- The OEM remote
- The remote-starter remote
- Or the proximity remote



Enter the vehicle with the Intelligent Key.



The vehicle can now be put in to gear and driven.


If the vehicle is not unlocked with one of these conditions the remote-starter will shut down as soon as any door is opened.




THAR-GM6

THARNNESS INSTALLATION

ADDENDUM - SUGGESTED WIRING CONFIGURATION

			Vehicle functions supported in this diagram (functional if equipped)															
VEHICLE	YEARS		Immobilizer bypass	Lock	Unlock	Arm	Disarm	Trunk (open)	Parking Light	RAP Disable	Tachometer	Heated Seats	Door Status	Hood Status*	Trunk Status (Data-Link Only,Data-Link Seulement)	Hand-Brake Status (Data-Link Only,Data-Link Seulement)	Foot-Brake Status	OEM Remote Monitoring
																		
CHEVROLET																		
Corvette	Push-To-Start	2014-2019	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•




FIRMWARE VERSION



70.[41]


GM MINIMUM

To add the firmware version and the options, use the **FLASH LINK UPDATER** or **FLASH LINK MOBILE** tool, sold separately.

<p>IF THE VEHICLE IS NOT EQUIPPED WITH FUNCTIONAL HOOD PIN:</p>	A11	OFF	Hood trigger (Output Status).
--	-----	-----	-------------------------------

	Program bypass option:	UNIT OPTION	DESCRIPTION
		C1	OEM Remote status (Lock/Unlock) monitoring
		D6	Push-to-Start

 <p>ATTENTION!</p>	 <p>DATE: XX-XX</p>	E5	OFF	<p>SPECIAL FUNCTIONS: BY DEFAULT DEACTIVATED</p> <p>MANUFACTURED MODULES BETWEEN: 04/2018 TO 04/2019</p>
			ON	




Parts required (Not included)

1X 1Amp Diode

MANDATORY INSTALL

***HOOD PIN**



HOOD STATUS: THE HOOD PIN SWITCH MUST BE INSTALLED IF THE VEHICLE CAN BE REMOTE STARTED WITH THE HOOD OPEN, SET FUNCTION A11 TO OFF.

A11	OFF
-----	-----

Notice: the installation of safety elements are mandatory. The hood pin is an essential security element and must be installed.

THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.


DESCRIPTION



At the BCM




③

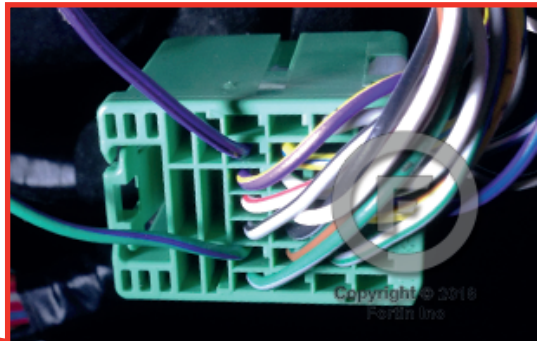


①




②

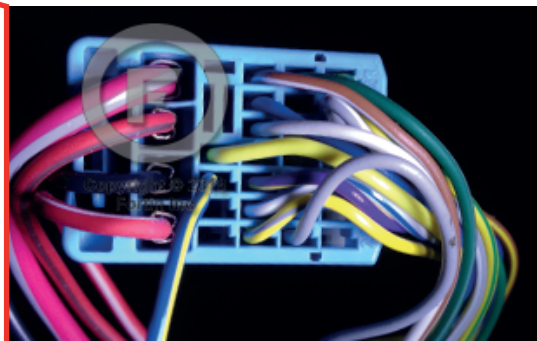




AUTOMATIC TRANSMISSION WIRING CONNECTION

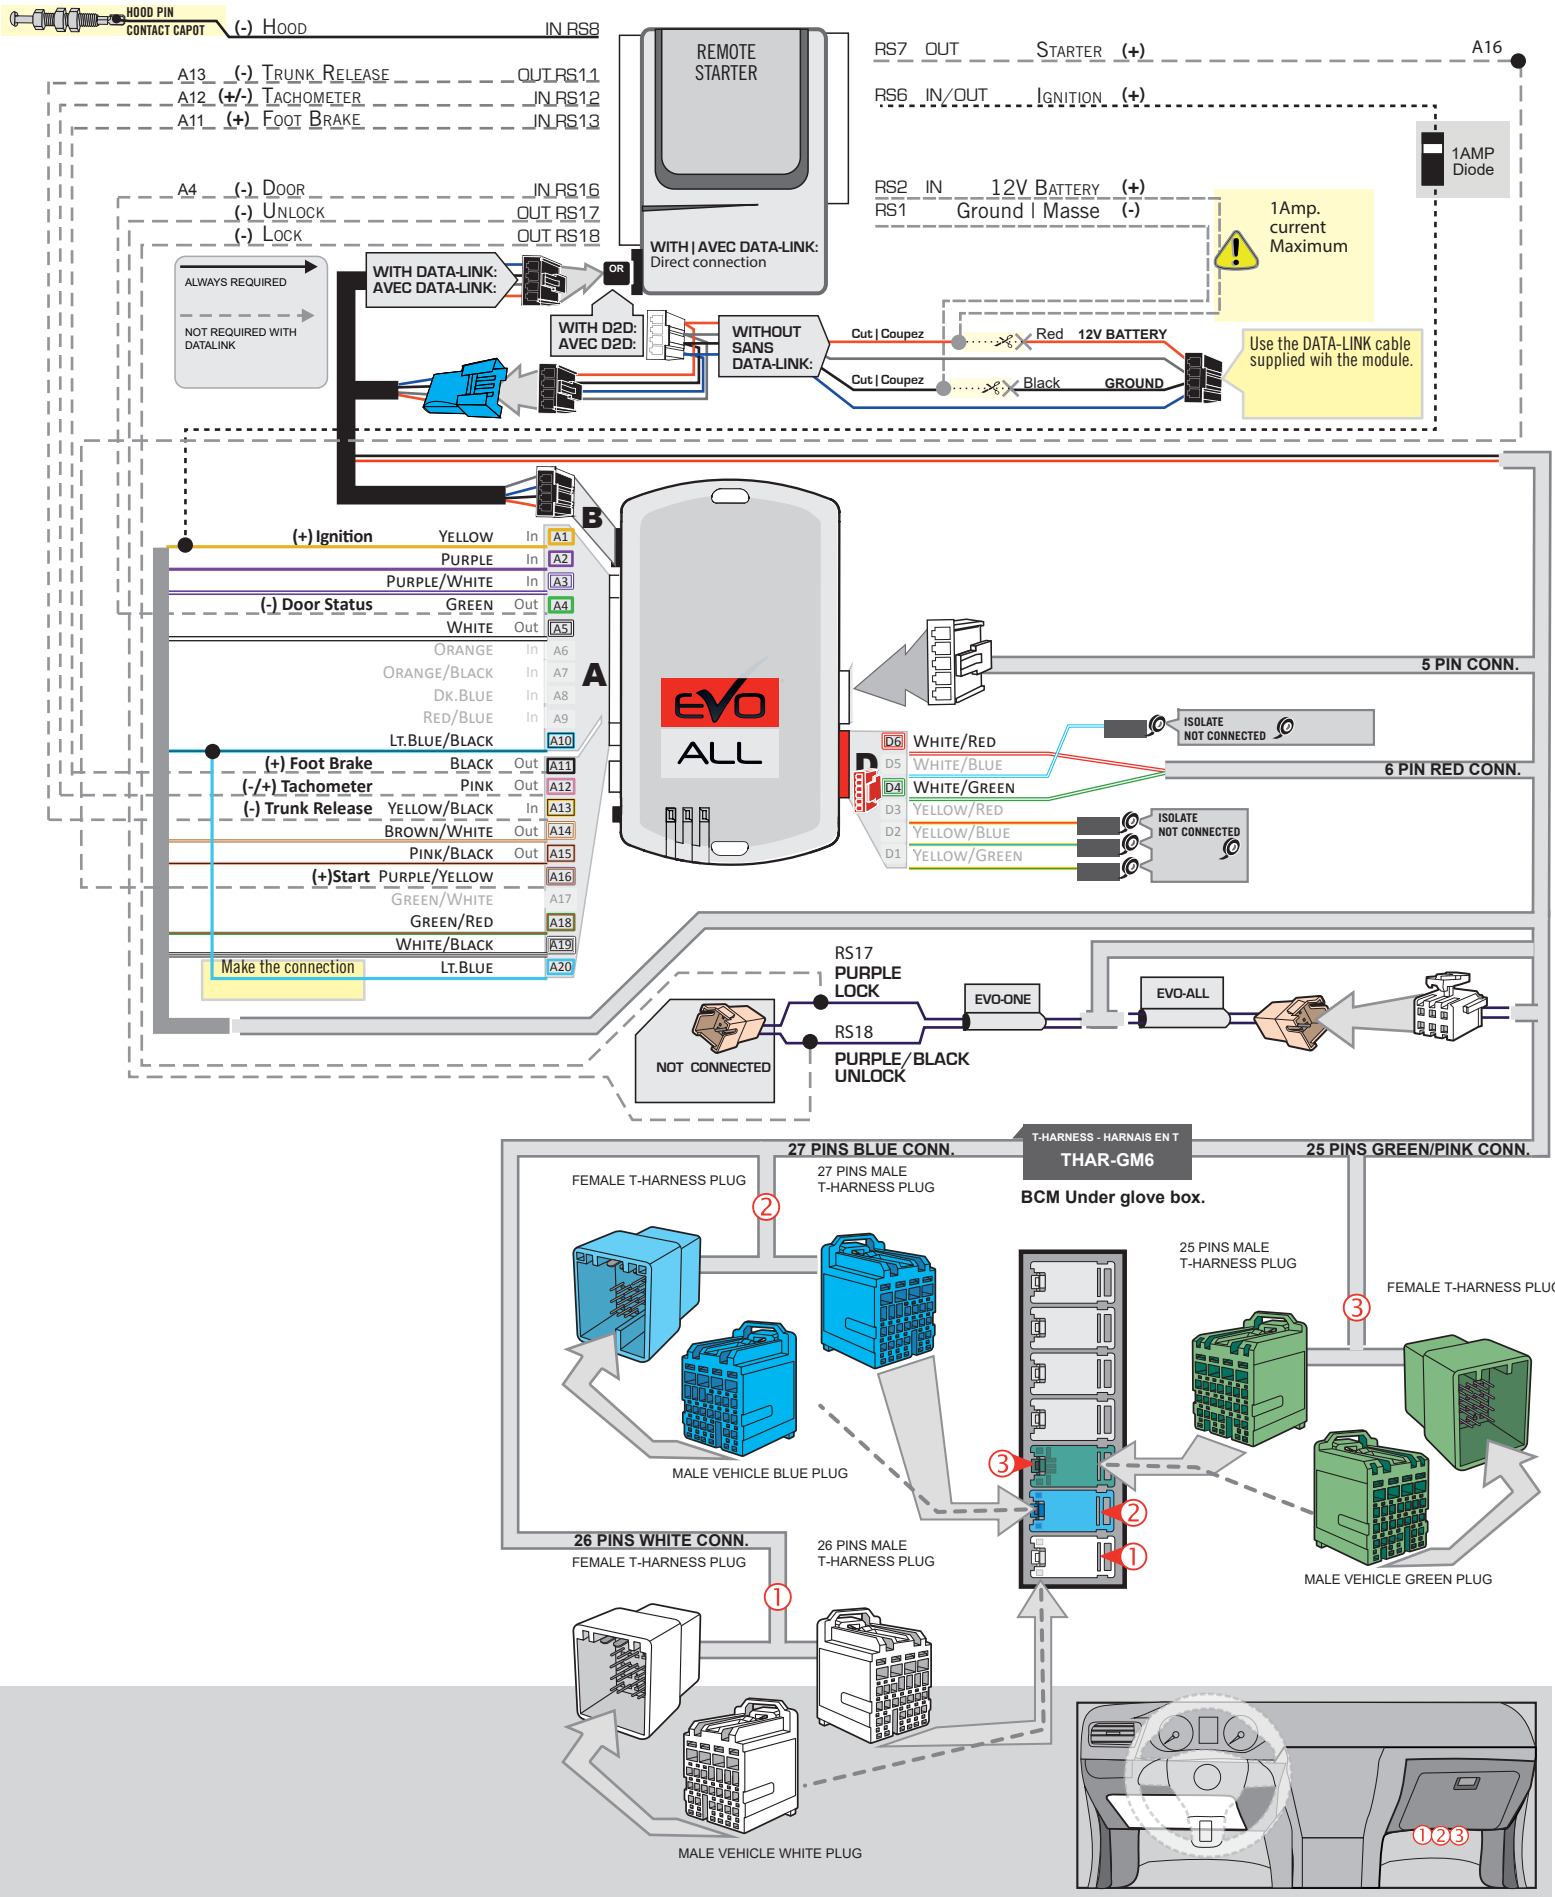


MANUAL TRANSMISSION WIRING CONNECTION

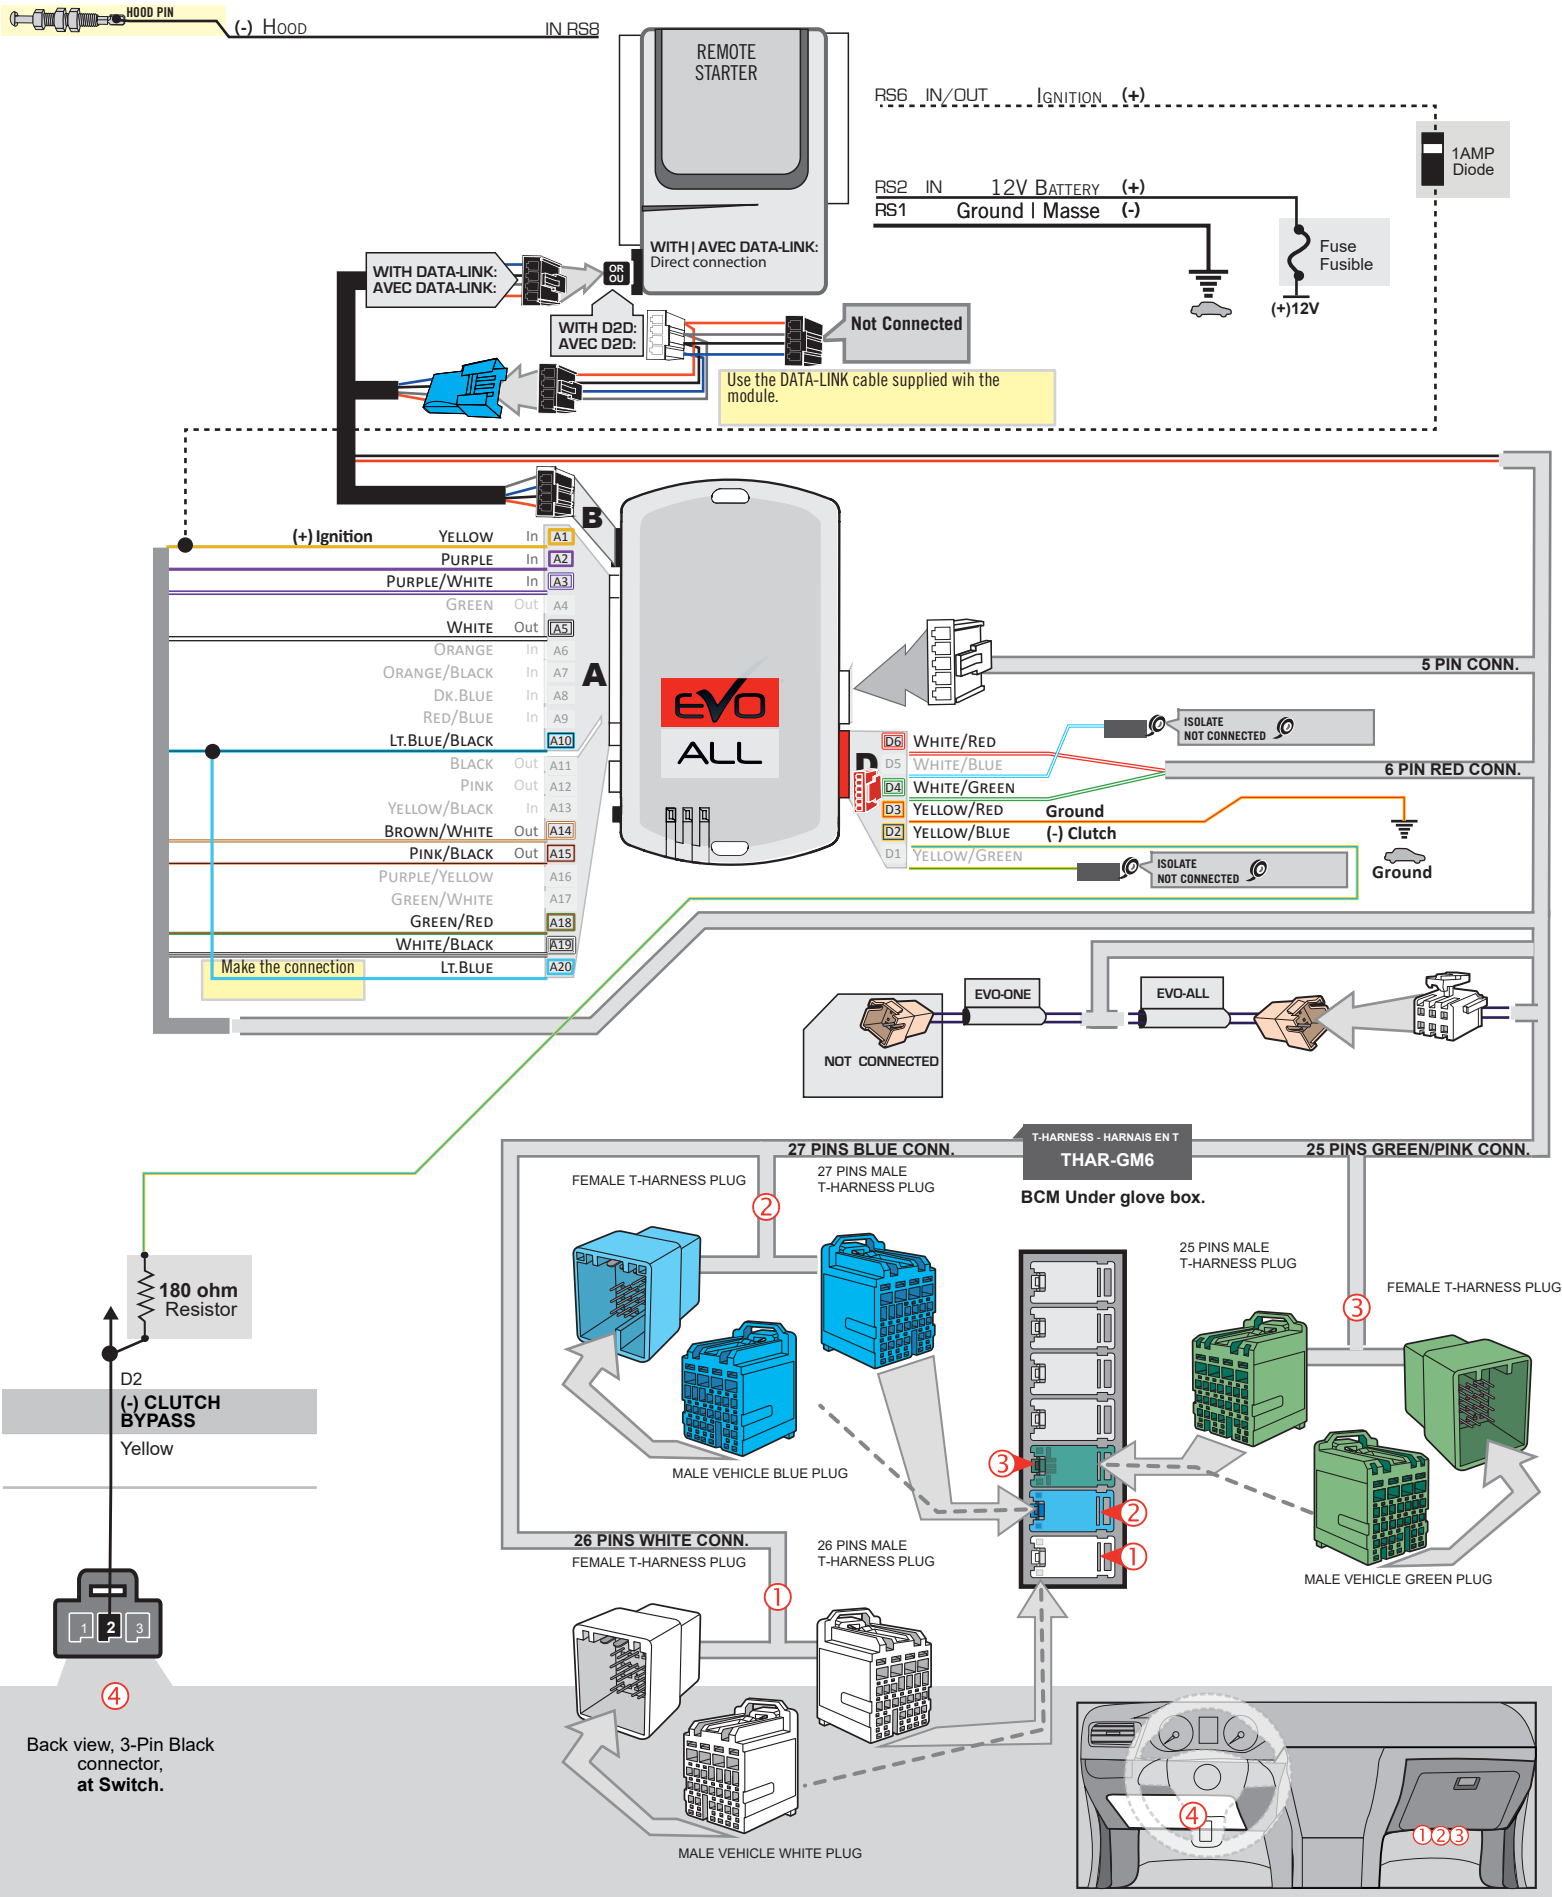

KEY BYPASS PROGRAMMING PROCEDURE 1/3

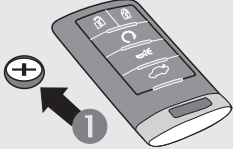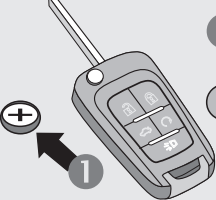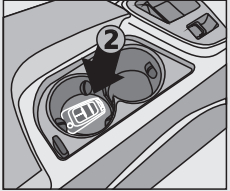FIRST GENERATION	 <p>1 Remove the battery from the OEM remote.</p> <p>2 First generation OEM remotes: Place the OEM remotes in the key older.</p>	
SECOND GENERATION	 <p>1 Remove the battery from the OEM remote.</p> <p>2 Second generation OEM remotes: Place the OEM remotes in to the center console.</p>	


1

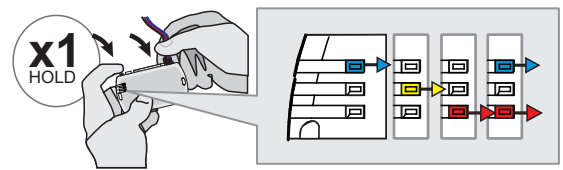

Press and hold the programming button:
Connect the 4-PIN Data-link harness (Black connector).

↳The Blue, Red, Yellow and Blue & Red LEDs will alternatively illuminate.

2

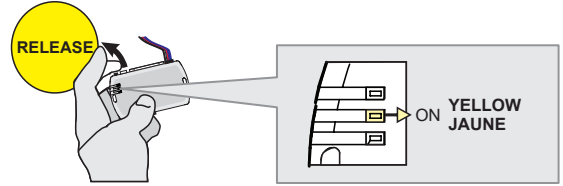


Release the programming button when the LED is YELLOW.

If the LED is not solid YELLOW disconnect the 4-Pin connector (Data-Link) and go back to step 1.




3

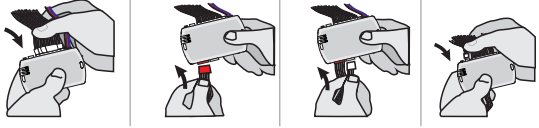

Insert the required remaining connectors.

4

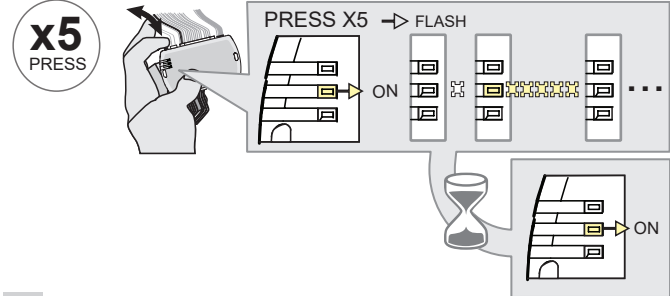


Press and release the programming button five (5x) times.

↳The YELLOW LED will flash 5 times each second.


↳WAIT for the YELLOW LED to turn ON solide.

 5



Open the driver door.

6

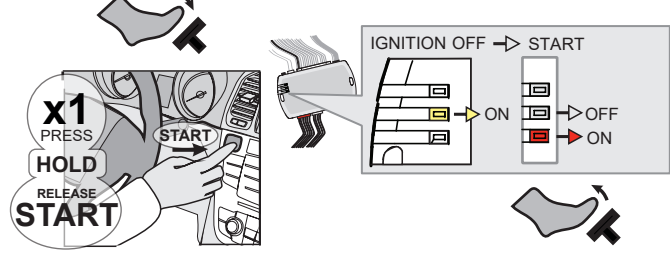

Press the foot-brake pedal.

Press the Push-to-Start button until the engine start.

Release the foot-brake pedal.

↳The RED LED will turn ON.
 ↳The YELLOW LED will turn OFF.


KEY BYPASS PROGRAMMING PROCEDURE 2/3

7




Press the Push-to-Start button until the engine turn OFF.

8

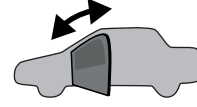

Close and open the driver door.

9

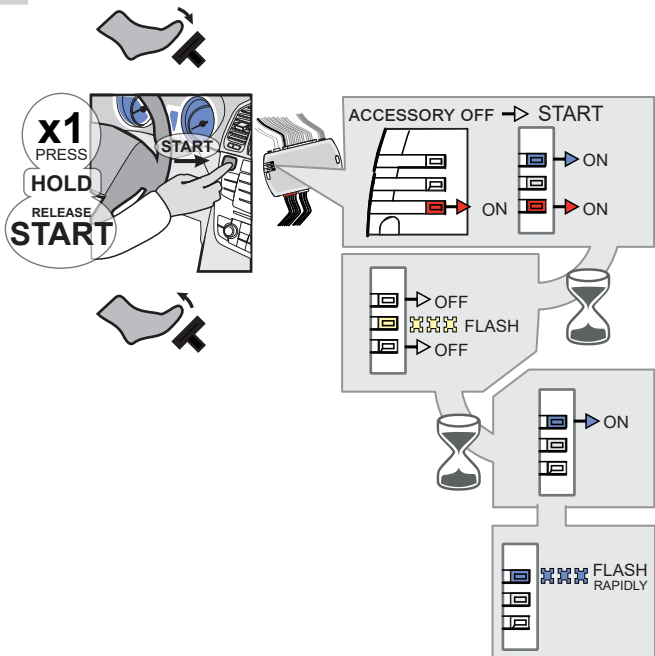


Press the foot-brake pedal.

Press the Push-to-Start button until the engine start.

Release the foot-brake pedal.

- ↳ The BLUE LED will turn ON.
- ↳ The BLUE LED will turn OFF. The RED LED will turn OFF.
- ↳ The YELLOW LED will flash rapidly
- ↳ The BLUE LED will turn ON.
- ↳ The BLUE LED will flash rapidly


10

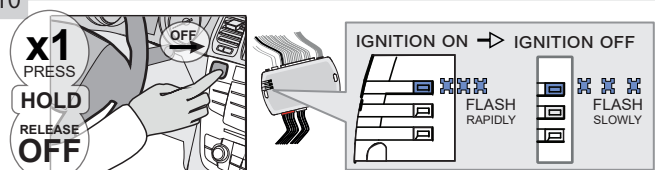

Press the Push-to-Start button until the engine turn OFF.


- ↳ The BLUE LED will flash slowly

11

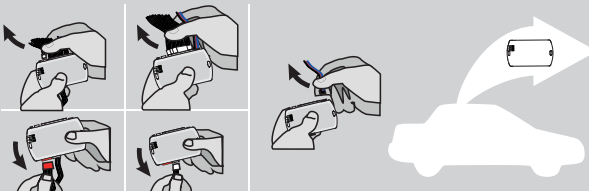

Disconnect all the connectors and after the Data-Link (4-pins) connector.

12


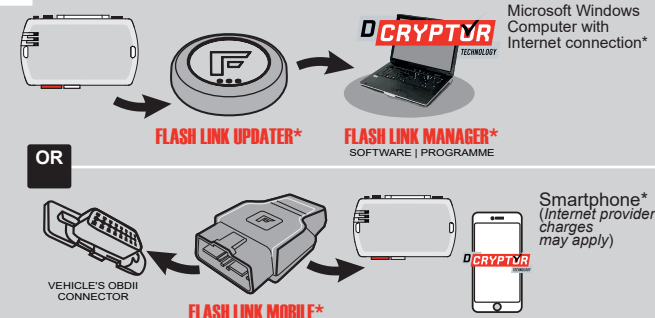


Use the tool: FLASH LINK UPDATER or FLASH LINK MOBILE to visit the DCRYPTOR menu.

***Parts required (not included)**

KEY BYPASS PROGRAMMING PROCEDURE 3/3

13

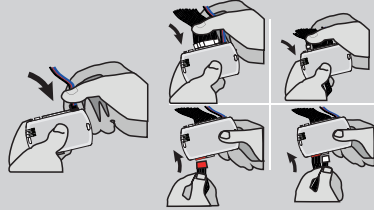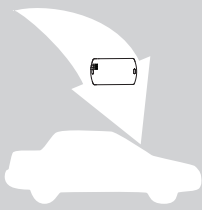

AFTER DCRYPTOR PROGRAMMING COMPLETED
Go back to the vehicle and **reconnect** the 4-Pin (Data-Link) connector and after, all the remaining connector.



The module is now programmed.



REMOTE STARTER / ALARM VERIFICATION PROCEDURE

Test the remote starter. **Remote start** the vehicle.

REMOTE STARTER FUNCTIONALITY



All doors must be closed.

Remote start the vehicle.



Press the Unlock button of the remote car starter.



Enter the vehicle with the Intelligent Access Key.



The vehicle can now be put in to gear and driven.





If the vehicle is not unlocked the module will shut down the remote-starter and the vehicle as soon as any door is opened.

THAR-GM6

THARNNESS INSTALLATION

ADDENDUM - SUGGESTED WIRING CONFIGURATION

VEHICLE	YEARS	Vehicle functions supported in this diagram (functional if equipped)												
		Immobilizer bypass	Lock	Unlock	Arm	Disarm	Trunk (open)	RAP Disable	Tachometer	Heated Seats	Door Status	Trunk Status (Data-Link Only, Data-Link Seule-Hand-Brake Status (Data-Link Only, Data-Link Seule-	Foot-Brake Status	OEM Remote
														
CHEVROLET														
Cruze	Push-To-Start**	2012-2015	•	•	•	•	•	•	•	•	•	•	•	•



FIRMWARE VERSION


70.[41]


GM MINIMUM

To add the firmware version and the options, use the **FLASH LINK UPDATER** or **FLASH LINK MOBILE** tool, sold separately.


IF THE VEHICLE IS NOT EQUIPPED WITH FUNCTIONAL HOOD PIN:

	A11	OFF	Hood trigger (Output Status).
--	-----	-----	-------------------------------

	Program bypass option:	UNIT OPTION	DESCRIPTION
		C1	OEM Remote status (Lock/Unlock) monitoring
		D6	Push-to-Start



ATTENTION!



DATE: XX-XX


E5

OFF

ON


SPECIAL FUNCTIONS: BY DEFAULT DEACTIVATED

MANUFACTURED MODULES BETWEEN: 04/2018 TO 04/2019

-  **Parts required (Not included)**
- 1X 1Amp Diode
 - 1X THAR-GM6

MANDATORY INSTALL

*HOOD PIN



HOOD STATUS: THE HOOD PIN SWITCH MUST BE INSTALLED IF THE VEHICLE CAN BE REMOTE STARTED WITH THE HOOD OPEN, SET FUNCTION A11 TO OFF.

A11

OFF

Notice:


the installation of safety elements are mandatory. The hood pin is an essential security element and must be installed.

THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.

DESCRIPTION




BCM

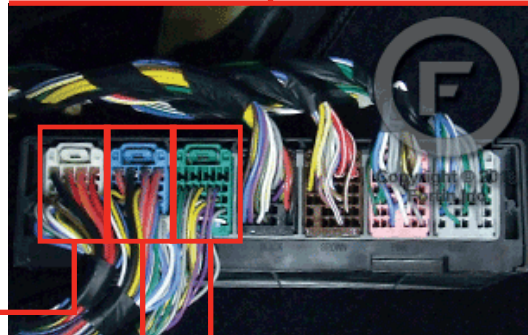


①




②

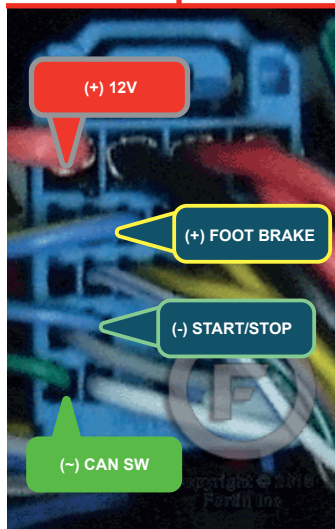




③

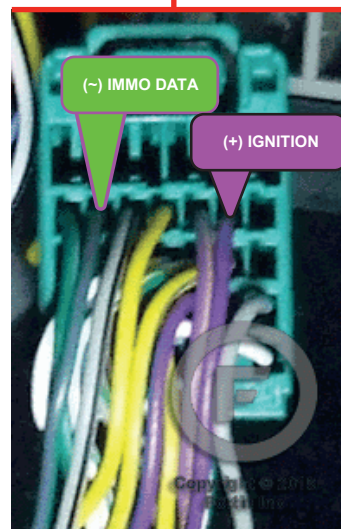


AUTOMATIC TRANSMISSION WIRING CONNECTION

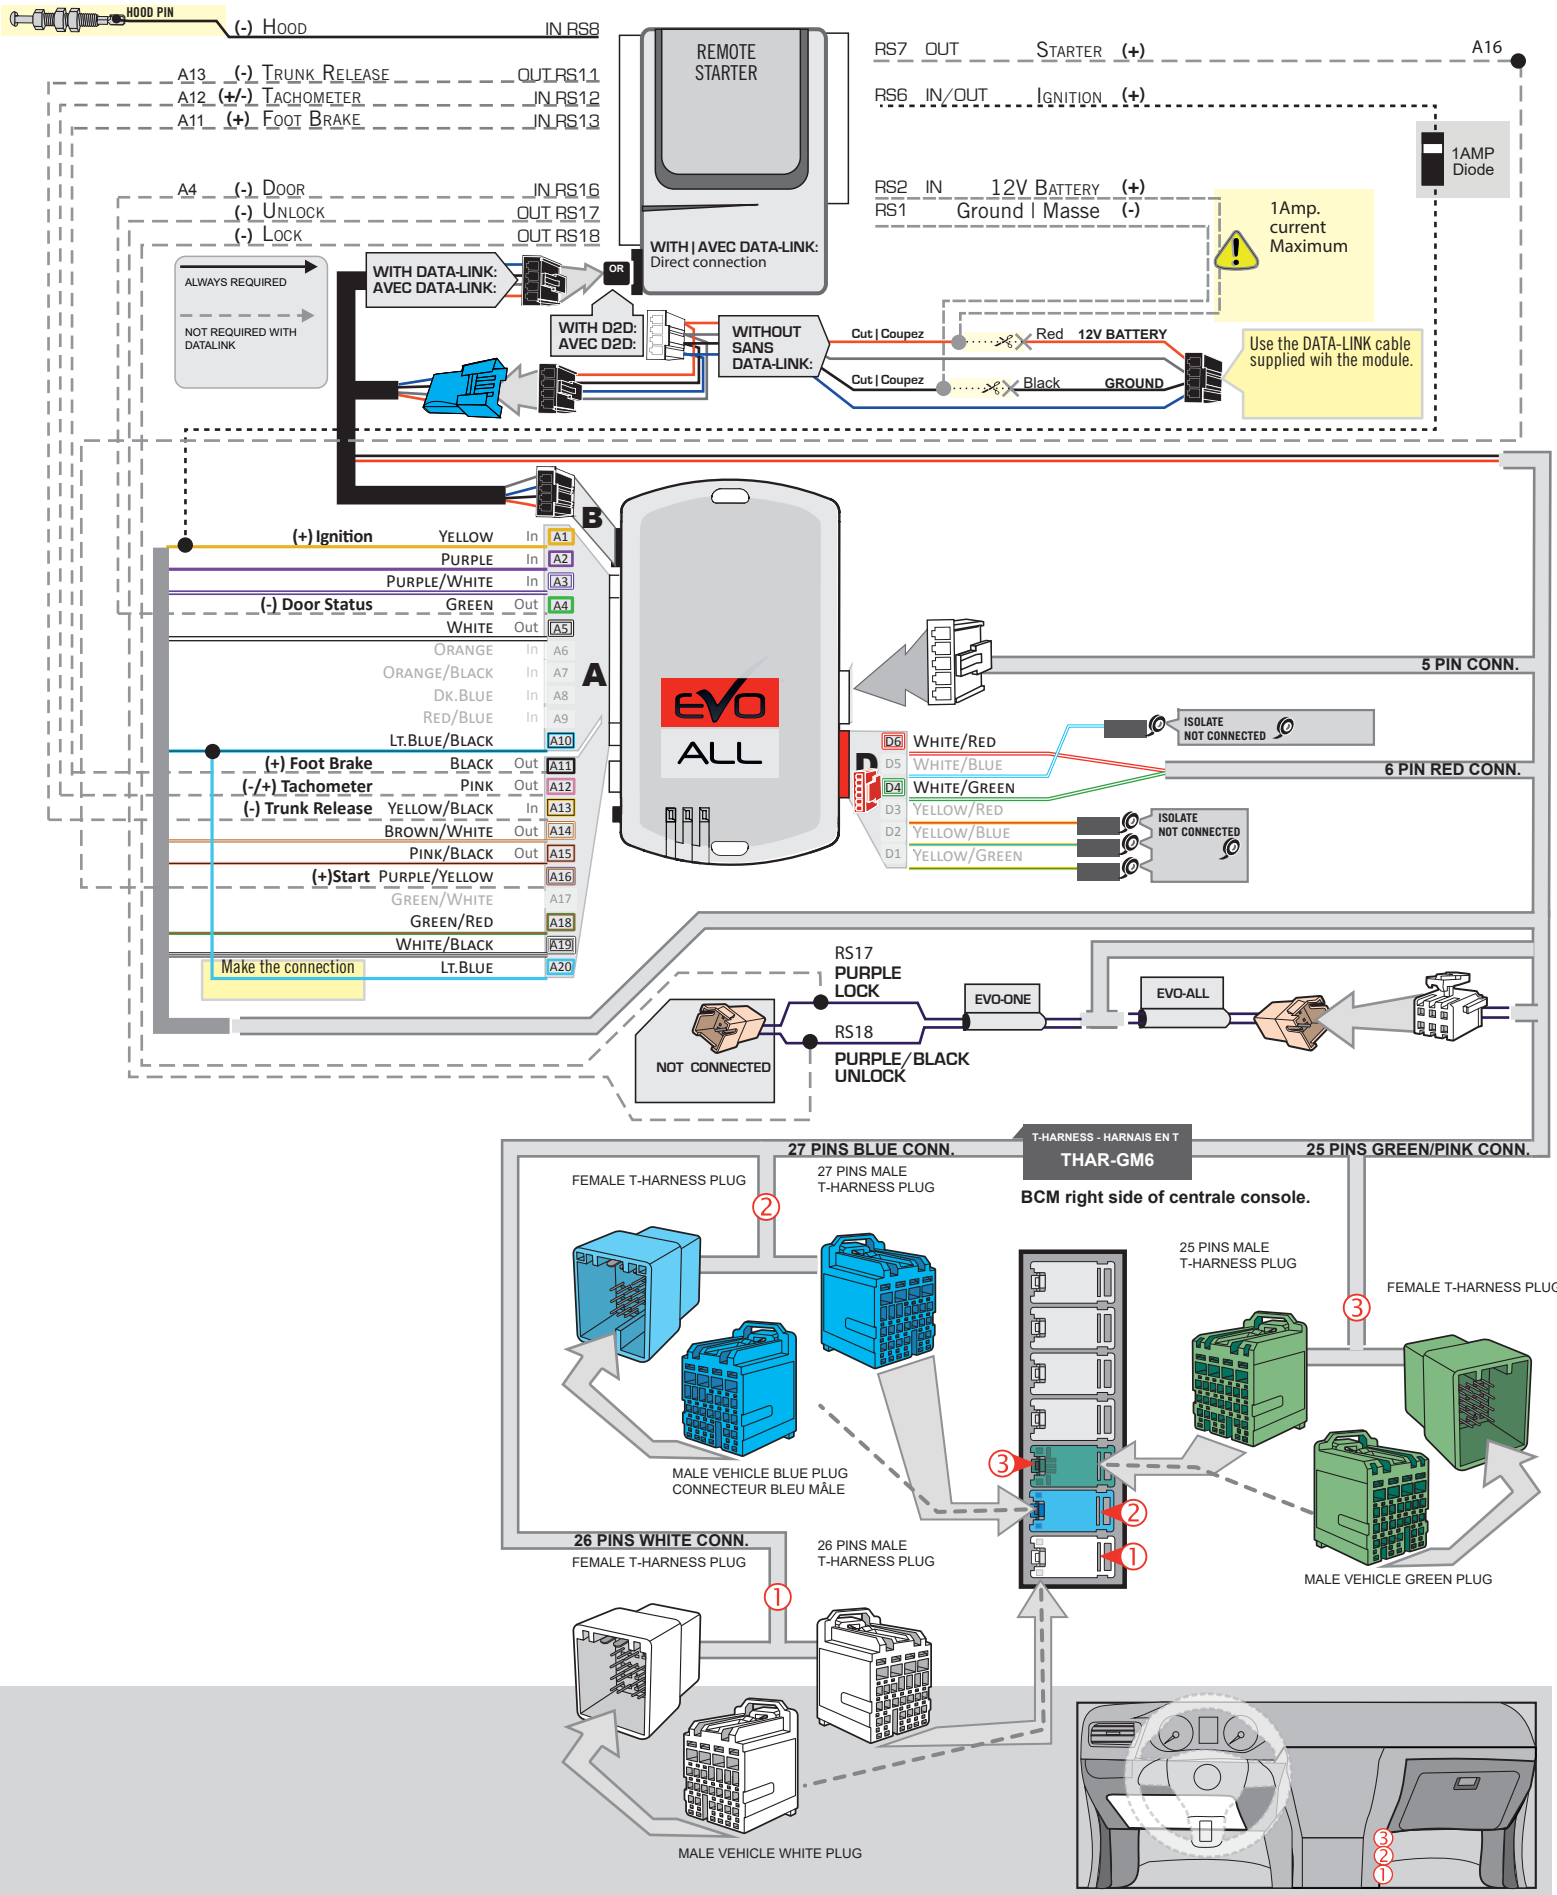

KEY BYPASS PROGRAMMING PROCEDURE 1/3

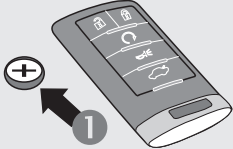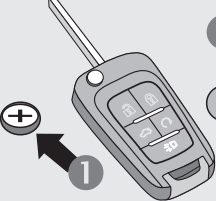FIRST GENERATION	 <p>1 Remove the battery from the OEM remote.</p> <p>2 First generation OEM remotes: Place the OEM remotes in the key older.</p>	
SECOND GENERATION	 <p>1 Remove the battery from the OEM remote.</p> <p>2 Second generation OEM remotes: Place the OEM remotes in to the center console.</p>	


1

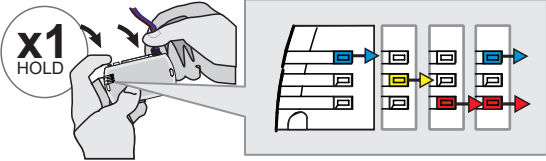

Press and hold the programming button:
Connect the 4-PIN Data-link harness (Black connector).


↳The Blue, Red, Yellow and Blue & Red LEDs will alternatively illuminate.

2

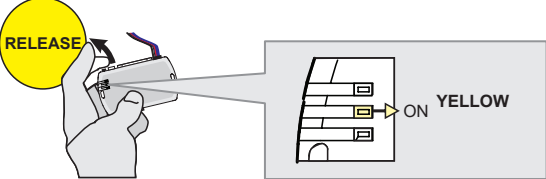


Release the programming button when the LED is YELLOW.

 If the LED is not solid YELLOW disconnect the 4-Pin connector (Data-Link) and go back to step 1.




3

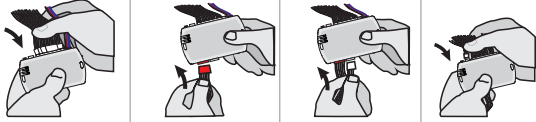

Insert the required remaining connectors.


4

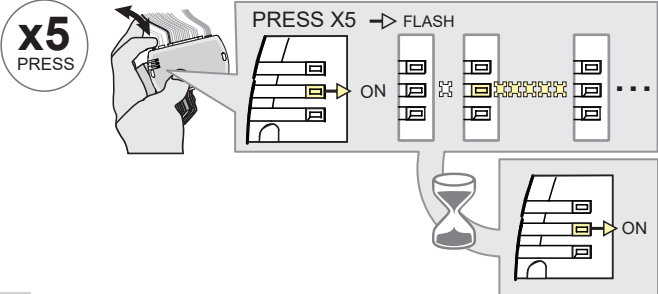

Press and release the programming button five (5x) times.


↳The YELLOW LED will flash 5 times each second.

↳**WAIT** for the YELLOW LED to turn ON solide.

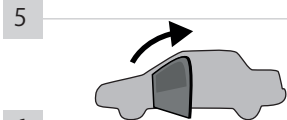

Open the driver door.

6

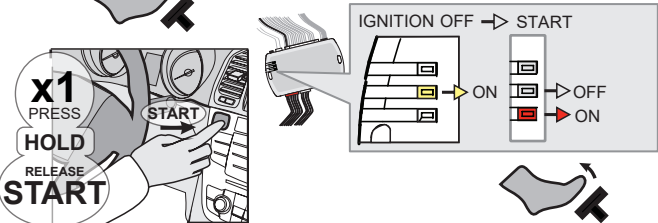

Press the foot-brake pedal.

Press the Push-to-Start button until the engine start.

Release the foot-brake pedal.

↳The RED LED will turn ON.
 ↳The YELLOW LED will turn OFF.


KEY BYPASS PROGRAMMING PROCEDURE 2/3

7




Press the Push-to-Start button until the engine turn OFF.

8

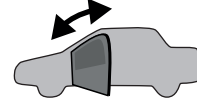

Close and open the driver door.

9

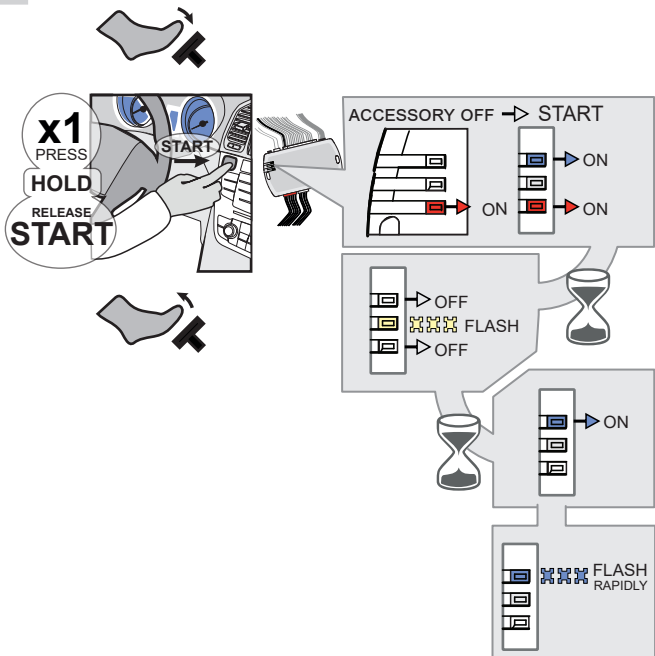


Press the foot-brake pedal.

Press the Push-to-Start button until the engine start.

Release the foot-brake pedal.

- ↳ The BLUE LED will turn ON.
- ↳ The BLUE LED will turn OFF. The RED LED will turn OFF.
- ↳ The YELLOW LED will flash rapidly
- ↳ The BLUE LED will turn ON.
- ↳ The BLUE LED will flash rapidly


10

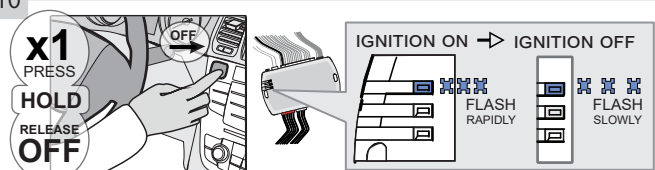

Press the Push-to-Start button until the engine turn OFF.


- ↳ The BLUE LED will flash slowly

11

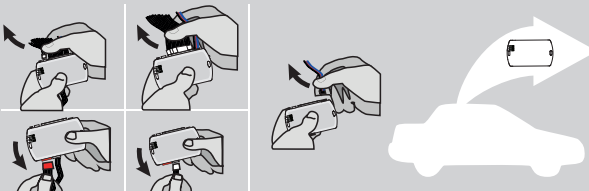

Disconnect all the connectors and after the Data-Link (4-pins) connector.

12


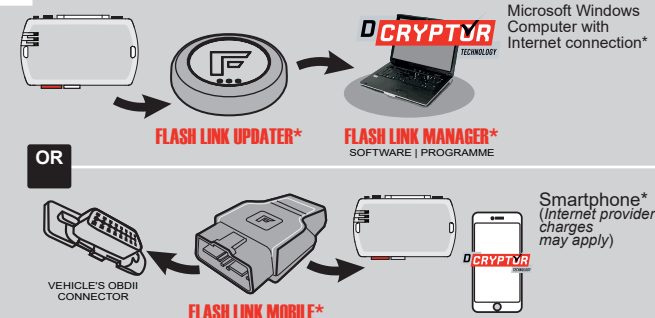


Use the tool: FLASH LINK UPDATER or FLASH LINK MOBILE to visit the DCRYPTOR menu.

***Parts required (not included)**

KEY BYPASS PROGRAMMING PROCEDURE 3/3

13

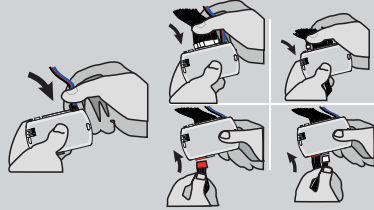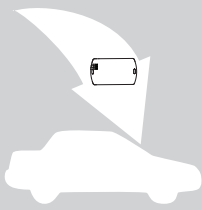

AFTER DCRYPTOR PROGRAMMING COMPLETED
Go back to the vehicle and **reconnect** the 4-Pin (Data-Link) connector and after, all the remaining connector.



The module is now programmed.



REMOTE STARTER / ALARM VERIFICATION PROCEDURE

Test the remote starter. Remote start the vehicle.

REMOTE STARTER FUNCTIONALITY



All doors must be closed.

Remote start the vehicle.



Press the Unlock button of the remote car starter.



Enter the vehicle with the Intelligent Access Key.



The vehicle can now be put in to gear and driven.





If the vehicle is not unlocked the module will shut down the remote-starter and the vehicle as soon as any door is opened.

THAR-GM6

THARNNESS INSTALLATION

ADDENDUM - SUGGESTED WIRING CONFIGURATION

VEHICLE	YEARS	Vehicle functions supported in this diagram (functional if equipped)															
		Immobilizer bypass	Lock	Unlock	Arm	Disarm	Trunk (open)	RAP Disable	Tachometer	Heated Seats	Door Status	Trunk Status (Data-Link Only, Data-Link Seulement)	Hand-Brake Status (Data-Link Only, Data-Link Seulement)	Foot-Brake Status	OEM Remote		
																	
CHEVROLET																	
Cruze	Push-To-Start**	2016-2019	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•



FIRMWARE VERSION

70.[41]

GM MINIMUM


To add the firmware version and the options, use the **FLASH LINK UPDATER** or **FLASH LINK MOBILE** tool, sold separately.


IF THE VEHICLE IS NOT EQUIPPED WITH FUNCTIONAL HOOD PIN:

A11


OFF

Hood trigger (Output Status).

	Program bypass option:	UNIT OPTION	DESCRIPTION
		C1	OEM Remote status (Lock/Unlock) monitoring
		D6	Push-to-Start



ATTENTION!

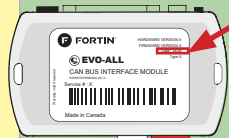

DATE: XX-XX


E5

OFF

ON

SPECIAL FUNCTIONS:
BY DEFAULT DEACTIVATED

MANUFACTURED MODULES BETWEEN: 04/2018 TO 04/2019




Parts required (Not included)

1X 1Amp Diode

1X THAR-GM6

MANDATORY INSTALL

***HOOD PIN**  **HOOD STATUS:** THE HOOD PIN SWITCH MUST BE INSTALLED IF THE VEHICLE CAN BE REMOTE STARTED WITH THE HOOD OPEN, SET FUNCTION A11 TO OFF.

A11

OFF


Notice: the installation of safety elements are mandatory. The hood pin is an essential security element and must be installed.

THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.

DESCRIPTION




BCM, Above Driver kick panel

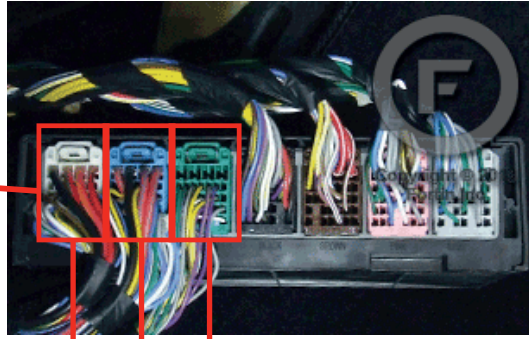


①




②

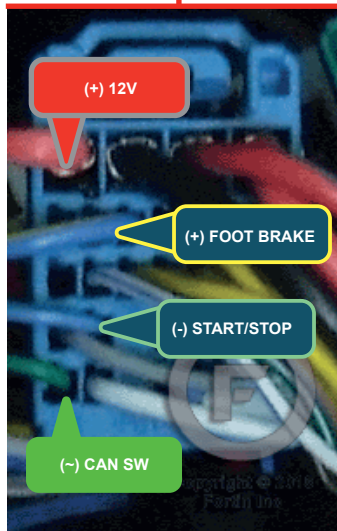




③

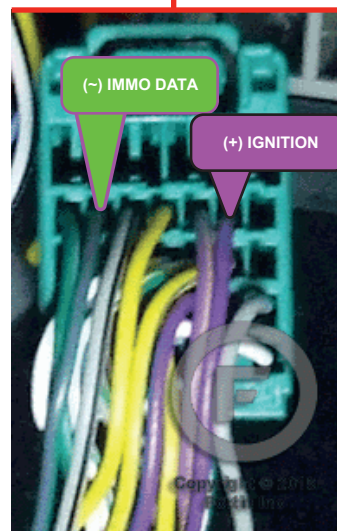


AUTOMATIC TRANSMISSION WIRING CONNECTION

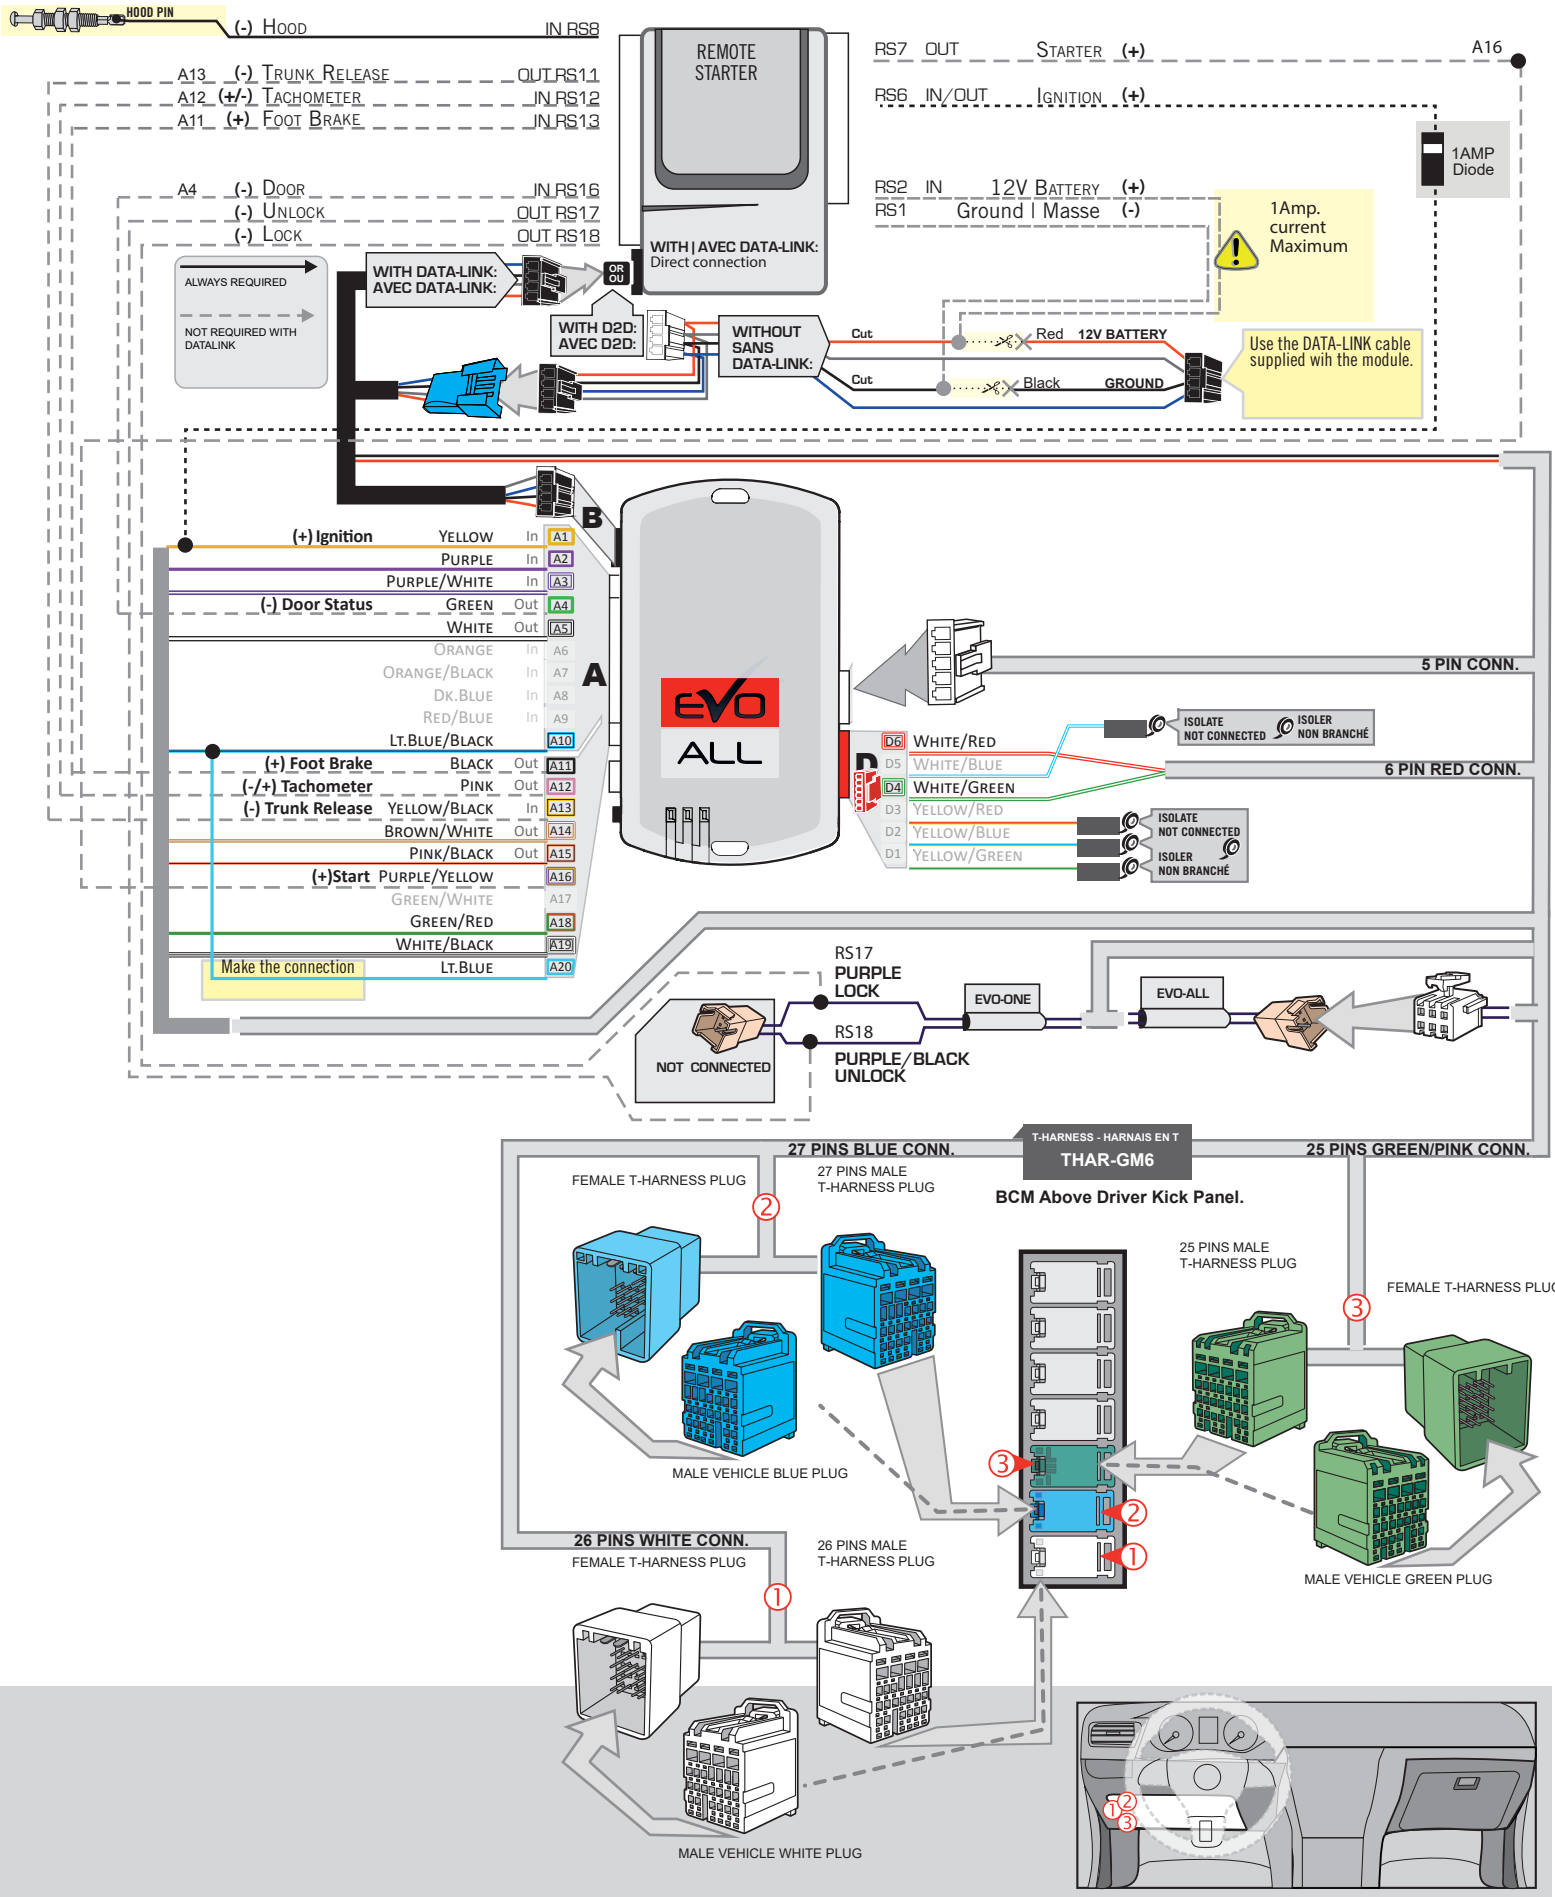

KEY BYPASS PROGRAMMING PROCEDURE 1/3

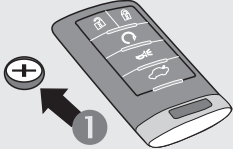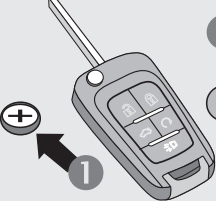FIRST GENERATION	 <p>1 Remove the battery from the OEM remote.</p> <p>2 First generation OEM remotes: Place the OEM remotes in the key older.</p>	
SECOND GENERATION	 <p>1 Remove the battery from the OEM remote.</p> <p>2 Second generation OEM remotes: Place the OEM remotes in to the center console.</p>	

1

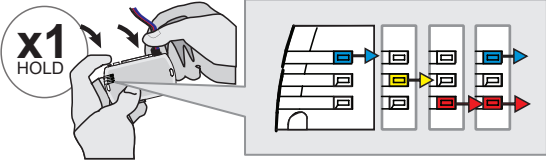


x1 HOLD

Press and hold the programming button:
Connect the 4-PIN Data-link harness (Black connector).

↳The Blue, Red, Yellow and Blue & Red LEDs will alternatively illuminate.

2

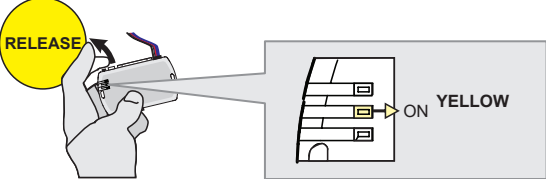


RELEASE


ON YELLOW

Release the programming button when the LED is YELLOW.

 If the LED is not solid YELLOW disconnect the 4-Pin connector (Data-Link) and go back to step 1.




3

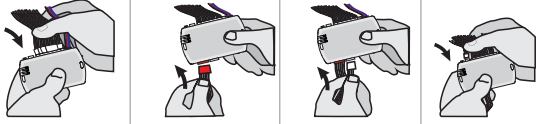

Insert the required remaining connectors.

4

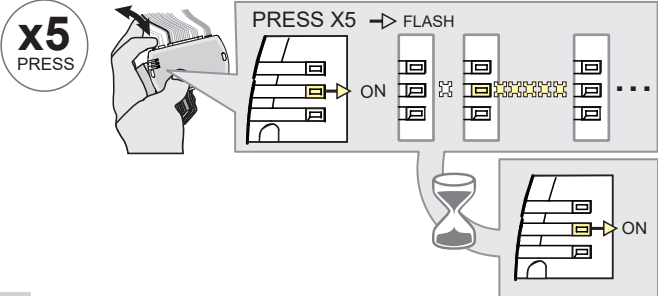

x5 PRESS

PRESS X5 → FLASH

 
ON

ON

Press and release the programming button five (5x) times.


↳The YELLOW LED will flash 5 times each second.

↳**WAIT** for the YELLOW LED to turn ON solide.



Open the driver door.

6

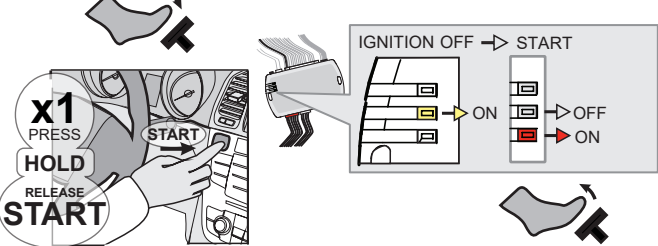

x1 PRESS

HOLD

RELEASE

START

IGNITION OFF → START

ON

OFF

ON

Press the foot-brake pedal.

Press the Push-to-Start button until the engine start.

Release the foot-brake pedal.

↳The RED LED will turn ON.
 ↳The YELLOW LED will turn OFF.


KEY BYPASS PROGRAMMING PROCEDURE 2/3

7




Press the Push-to-Start button until the engine turn OFF.

8

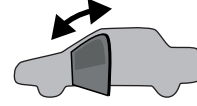

Close and open the driver door.

9

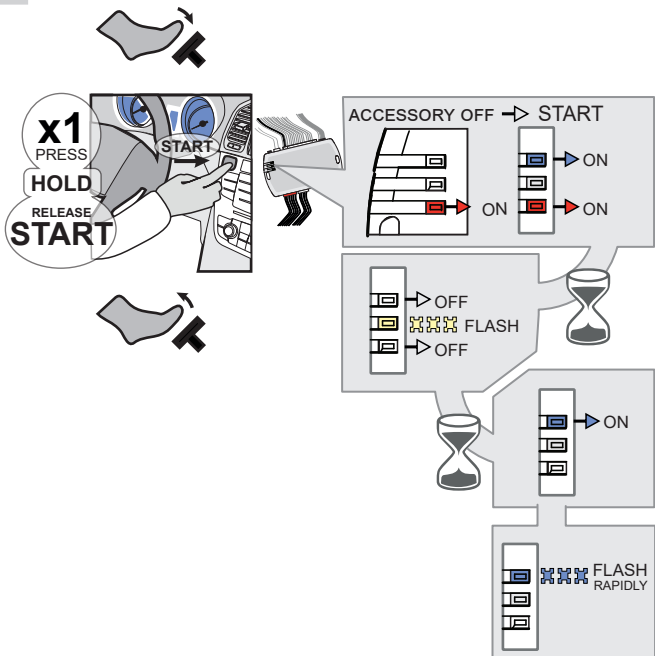


Press the foot-brake pedal.

Press the Push-to-Start button until the engine start.

Release the foot-brake pedal.

- ↳ The BLUE LED will turn ON.
- ↳ The BLUE LED will turn OFF. The RED LED will turn OFF.
- ↳ The YELLOW LED will flash rapidly
- ↳ The BLUE LED will turn ON.
- ↳ The BLUE LED will flash rapidly


10

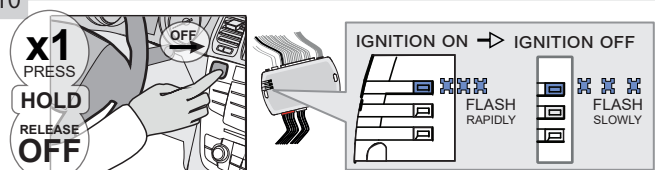

Press the Push-to-Start button until the engine turn OFF.


- ↳ The BLUE LED will flash slowly

11

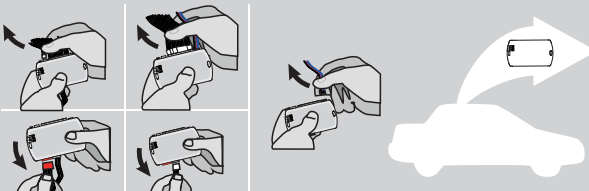

Disconnect all the connectors and after the Data-Link (4-pins) connector.

12


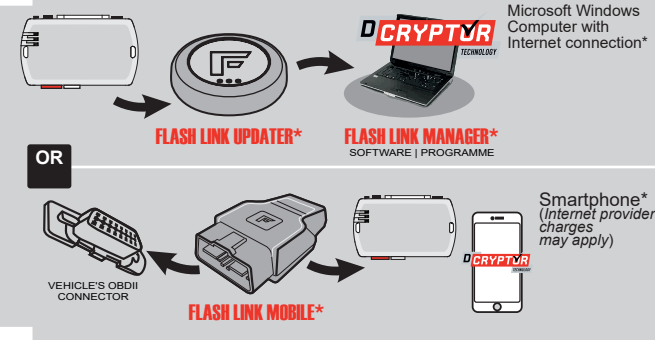


Use the tool: FLASH LINK UPDATER or FLASH LINK MOBILE to visit the DCryptor menu.

*Parts required (not included)

KEY BYPASS PROGRAMMING PROCEDURE 3/3

13

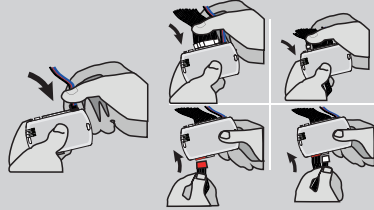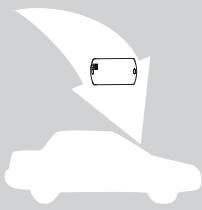

AFTER DCRYPTOR PROGRAMMING COMPLETED
Go back to the vehicle and **reconnect** the 4-Pin (Data-Link) connector and after, all the remaining connector.



The module is now programmed.



REMOTE STARTER / ALARM VERIFICATION PROCEDURE

Test the remote starter. Remote start the vehicle.

REMOTE STARTER FUNCTIONALITY



All doors must be closed.

Remote start the vehicle.



Press the Unlock button of the remote car starter.



Enter the vehicle with the Intelligent Access Key.



The vehicle can now be put in to gear and driven.





If the vehicle is not unlocked the module will shut down the remote-starter and the vehicle as soon as any door is opened.

THAR-GM6


THARNNESS INSTALLATION



ADDENDUM - SUGGESTED WIRING CONFIGURATION


VEHICLE	YEARS	Vehicle functions supported in this diagram (functional if equipped)																
		Immobilizer bypass	Lock	Unlock	Arm	Disarm	Trunk (open)	Parking Lights	RAP Disable	Tachometer	Heated Seats	Door Status	Trunk Status (Data-Link Only, Data-Link Seulement)	Hand-Brake Status (Data-Link Only, Data-Link Seulement)	Foot-Brake Status	OEM Remote Monitoring		
																		
CADILLAC																		
CT6	Push-To-Start	2016-2018	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•

	FIRMWARE VERSION 70.[41] GM MINIMUM	To add the firmware version and the options, use the FLASH LINK UPDATER or FLASH LINK MOBILE tool, sold separately.
--	---	---

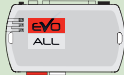IF THE VEHICLE IS NOT EQUIPPED WITH FUNCTIONAL HOOD PIN:	A11	OFF	Hood trigger (Output Status).
---	------------	------------	-------------------------------

	Program bypass option:	UNIT OPTION	DESCRIPTION
		C1	OEM Remote status (Lock/Unlock) monitoring
		D6	Push-to-Start

	ATTENTION!		DATE: XX-XX	E5	OFF	SPECIAL FUNCTIONS: BY DEFAULT DEACTIVATED
					ON	MANUFACTURED MODULES BETWEEN: 04/2018 TO 04/2019

 **Parts required (Not included)**
1X 1Amp Diode

MANDATORY INSTALL

*HOOD PIN



HOOD STATUS: THE HOOD PIN SWITCH MUST BE INSTALLED IF THE VEHICLE CAN BE REMOTE STARTED WITH THE HOOD OPEN, SET FUNCTION A11 TO OFF.

A11


OFF

Notice: the installation of safety elements are mandatory. The hood pin is an essential security element and must be installed.

THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.

DESCRIPTION


BCM

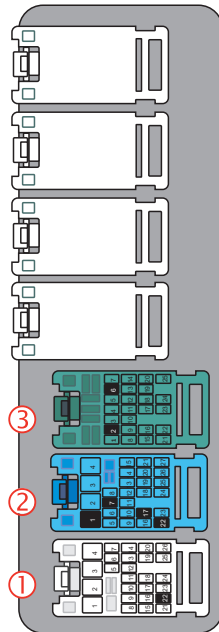

③




②

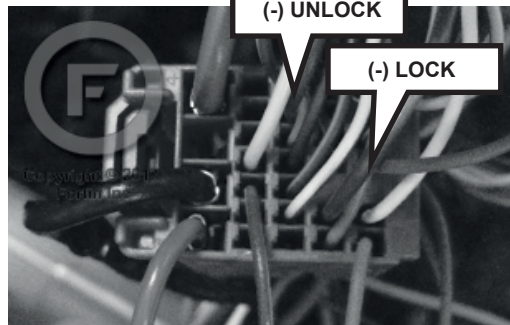


①




AUTOMATIC TRANSMISSION WIRING CONNECTION

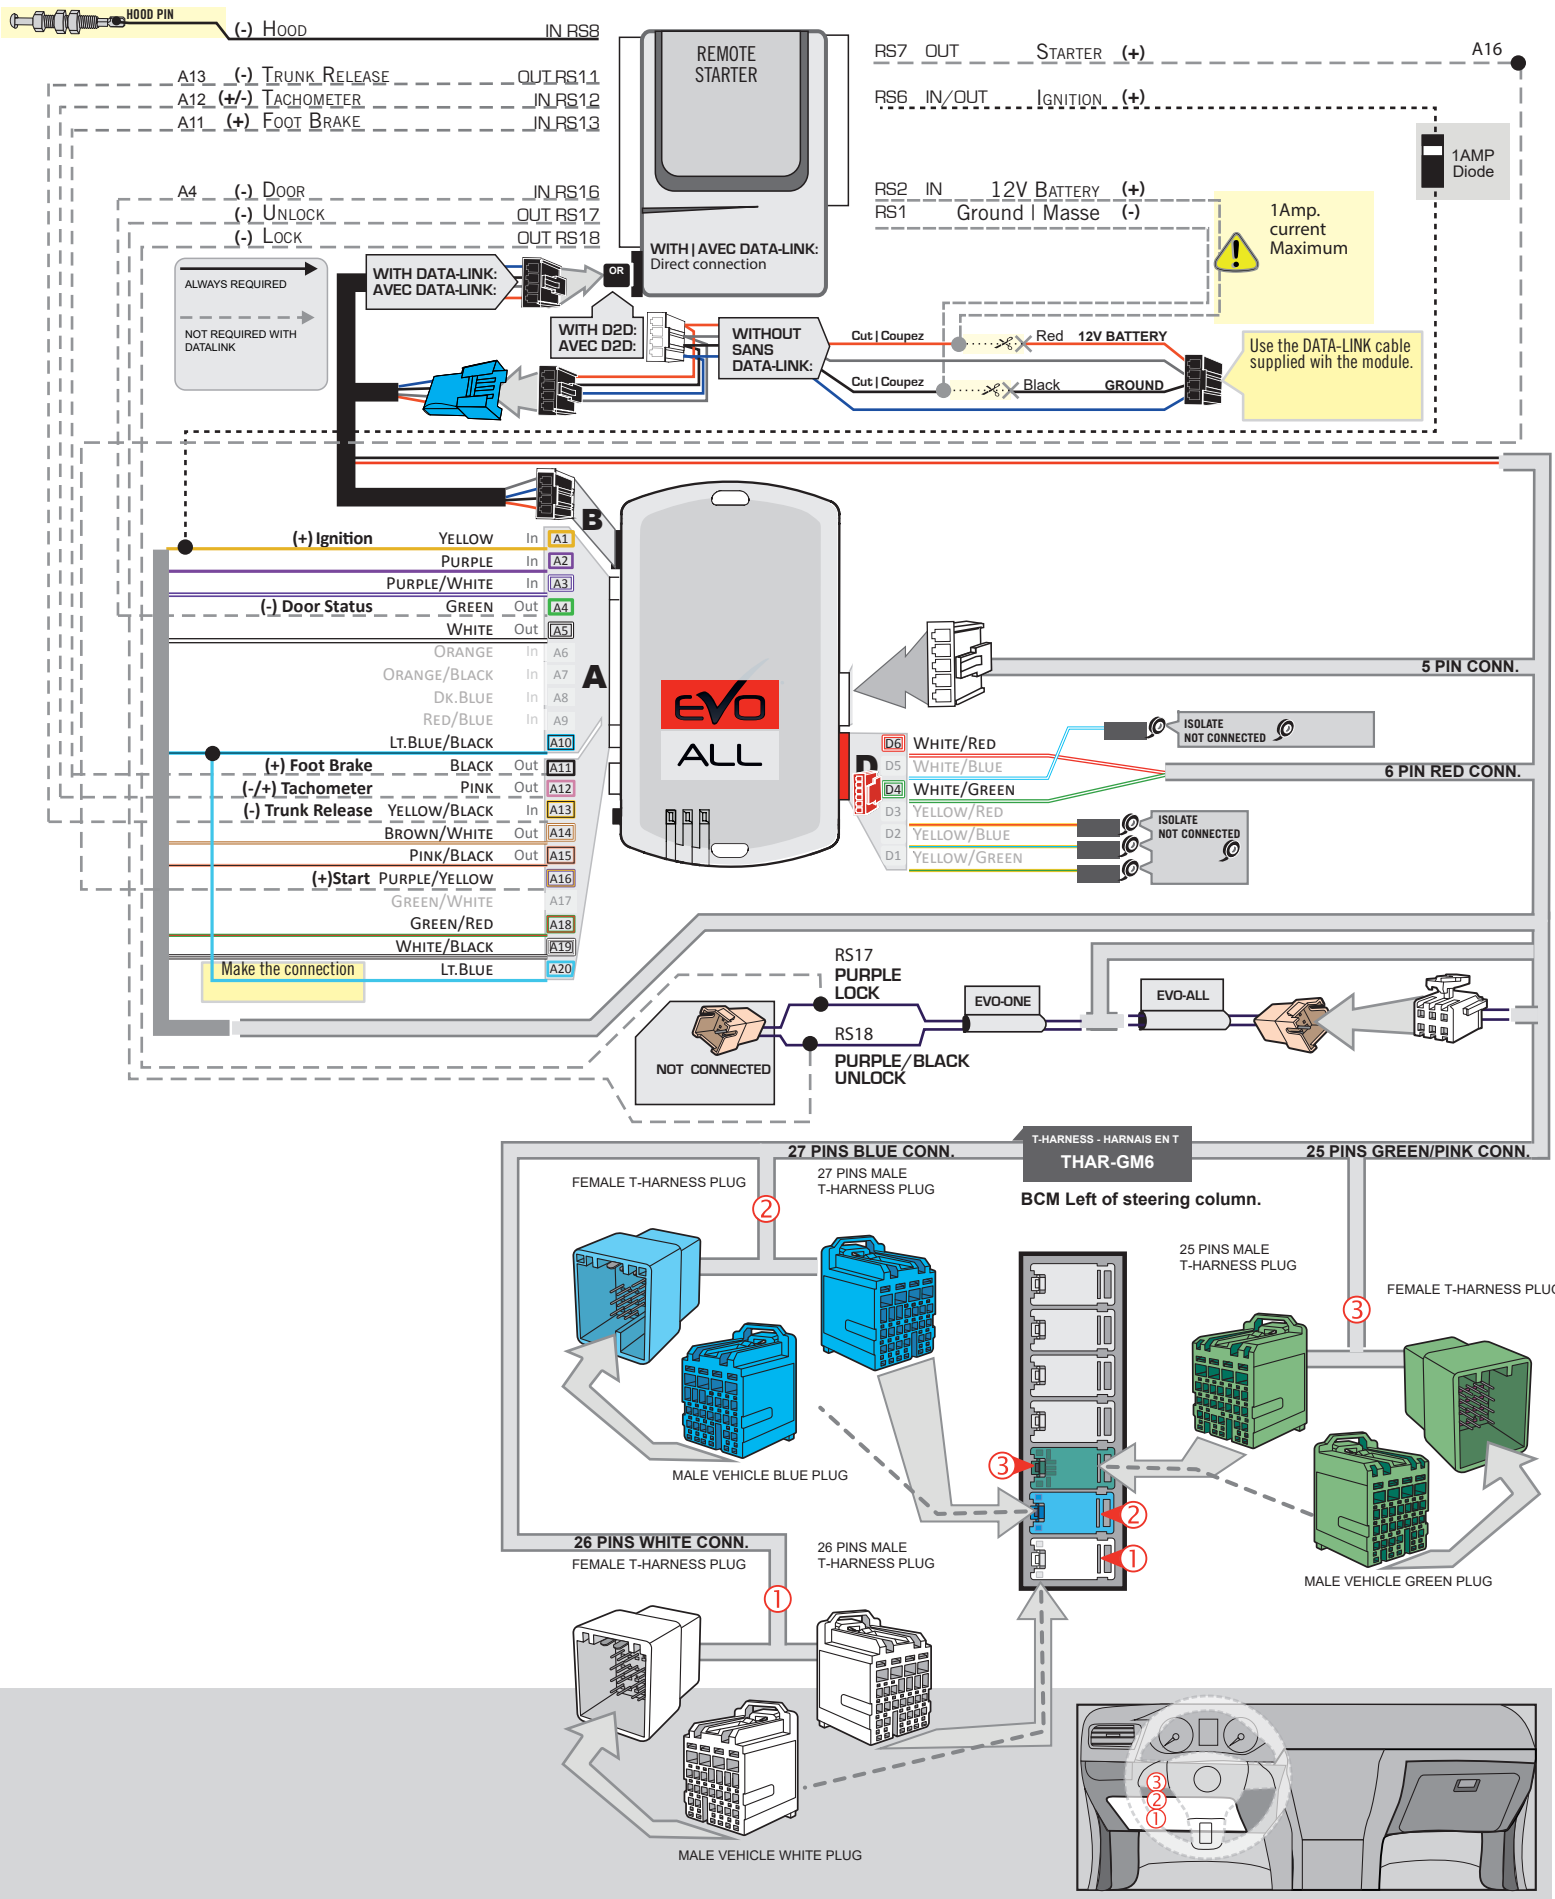


KEY BYPASS PROGRAMMING PROCEDURE 1/3

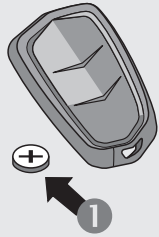

- 1** Remove the battery from the OEM remote.
- 2** Place the OEM remote into the transmitter pocket of the center console.
Refer to vehicle user guide for keyport location.

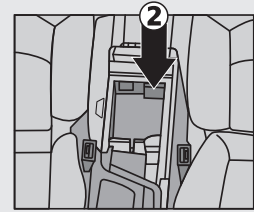


1

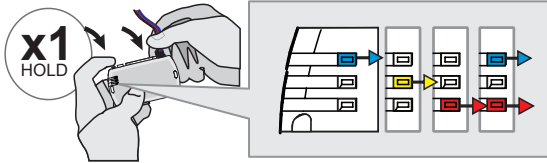

Press and hold the programming button:
Connect the 4-PIN Data-link harness (Black connector).


↳The Blue, Red, Yellow and Blue & Red LEDs will alternatively illuminate.

2

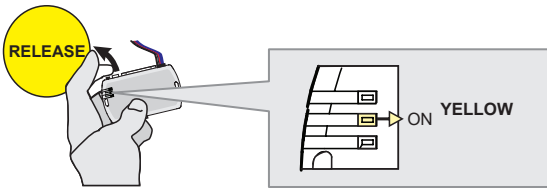


Release the programming button when the LED is YELLOW.

 If the LED is not solid YELLOW disconnect the 4-Pin connector (Data-Link) and go back to step 1.




3

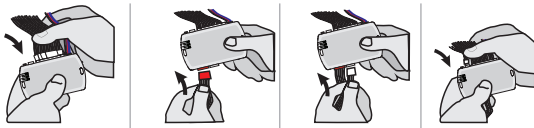

Insert the required remaining connectors.

4

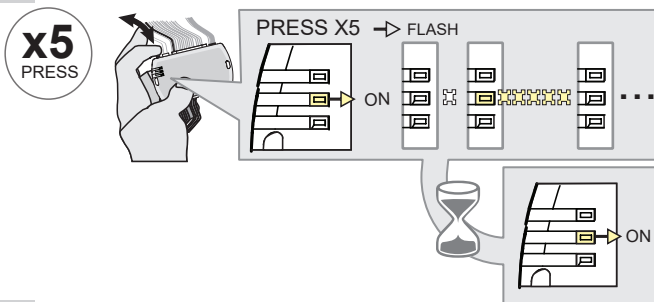


Press and release the programming button five (5x) times.

↳The YELLOW LED will flash 5 times each second.


↳**WAIT** for the YELLOW LED to turn ON solide.

 5



Open the driver door.

6

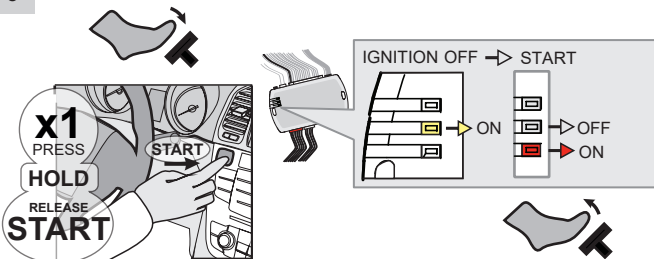

Press the foot-brake pedal.

Press the Push-to-Start button until the engine start.

Release the foot-brake pedal.

↳The RED LED will turn ON.
↳The YELLOW LED will turn OFF.


KEY BYPASS PROGRAMMING PROCEDURE 2/3

7




Press the Push-to-Start button until the engine turn OFF.

8

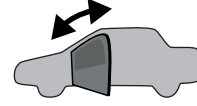

Close and open the driver door.

9

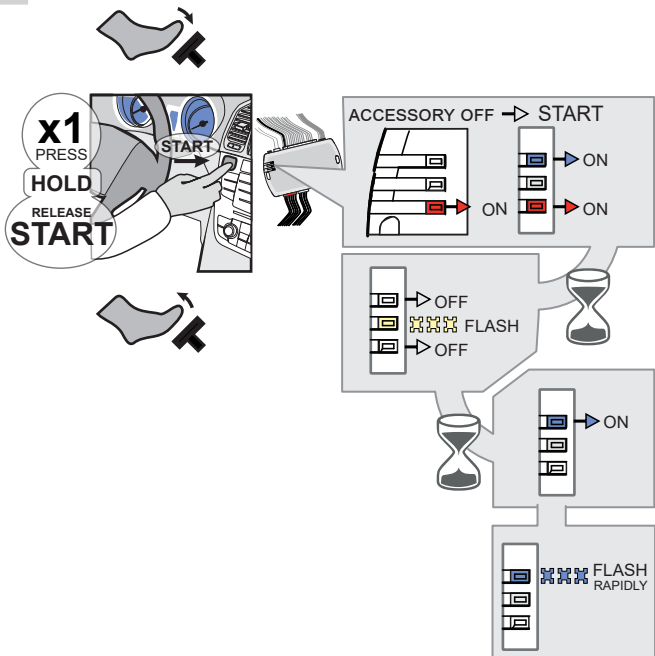


Press the foot-brake pedal.

Press the Push-to-Start button until the engine start.

Release the foot-brake pedal.

- ↳ The BLUE LED will turn ON.
- ↳ The BLUE LED will turn OFF. The RED LED will turn OFF.
- ↳ The YELLOW LED will flash rapidly
- ↳ The BLUE LED will turn ON.
- ↳ The BLUE LED will flash rapidly


10

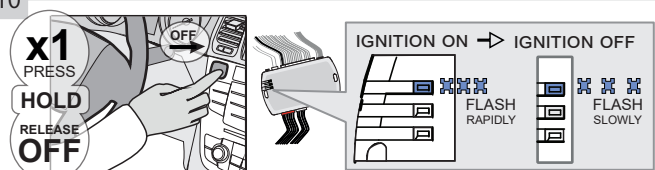

Press the Push-to-Start button until the engine turn OFF.


- ↳ The BLUE LED will flash slowly

11

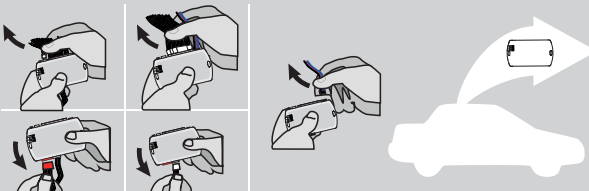

Disconnect all the connectors and after the Data-Link (4-pins) connector.

12


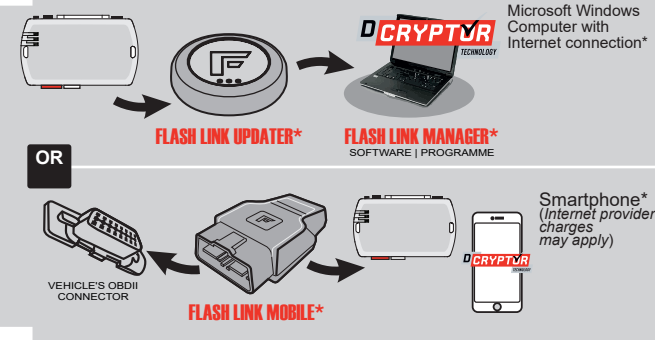


Use the tool: FLASH LINK UPDATER or FLASH LINK MOBILE to visit the DCryptor menu.

***Parts required (not included)**

KEY BYPASS PROGRAMMING PROCEDURE 3/3

13

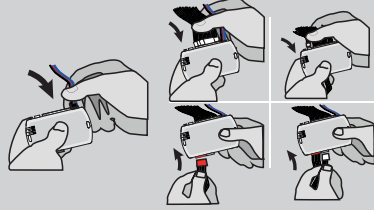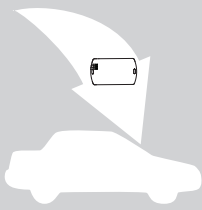

AFTER DCRYPTOR PROGRAMMING COMPLETED
Go back to the vehicle and **reconnect** the 4-Pin (Data-Link) connector and after, all the remaining connector.



The module is now programmed.



REMOTE STARTER / ALARM VERIFICATION PROCEDURE

Test the remote starter. Remote start the vehicle.

REMOTE STARTER FUNCTIONALITY

 


All doors must be closed.


Remote start the vehicle.



Press the Unlock button of the remote car starter or the OEM remote.



Enter the vehicle with the Intelligent Access Key.

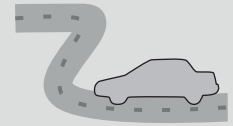

The vehicle can now be put in to gear and driven.




If the vehicle is not unlocked the module will shut down the remote-starter and the vehicle as soon as any door is opened.

THAR-GM6

THARNNESS INSTALLATION

ADDENDUM - SUGGESTED WIRING CONFIGURATION

VEHICLE	YEARS	Vehicle functions supported in this diagram (functional if equipped)													
		Immobilizer bypass	Lock	Unlock	Arm	Disarm	Trunk (open)	RAP Disable	Tachometer	Heated Seats	Door Status	Trunk Status (Data-Link Only, Data-Link Seulement)	Hand-Brake Status (Data-Link Only, Data-Link Seulement)	Foot-Brake Status	OEM Remote Monitoring
															
BUICK															
Encore GX	Push-To-Start	2020-2021	•	•	•	•	•	•	•	•	•	•	•	•	•

FIRMWARE VERSION

To add the firmware version and the options, use the **FLASH LINK UPDATER** or **FLASH LINK MOBILE** tool, sold separately.

70.[45]

GM MINIMUM

UNIT OPTION	DESCRIPTION
C1	OEM Remote status (Lock/Unlock) monitoring
A11 <input type="checkbox"/>	Hood trigger (Output Status).
D6	Push-to-Start
	Push-to-Start

ATTENTION!

DATE: XX-XX

E5 OFF

SPECIAL FUNCTIONS: BY DEFAULT DEACTIVATED

MANUFACTURED MODULES BETWEEN: 04/2018 TO 04/2019

ON

Parts required (Not included)

1X 1Amp Diode

MANDATORY INSTALL

*HOOD PIN



HOOD STATUS: THE HOOD PIN SWITCH MUST BE INSTALLED IF THE VEHICLE CAN BE REMOTE STARTED WITH THE HOOD OPEN, SET FUNCTION A11 TO OFF.

A11

Notice: the installation of safety elements are mandatory. The hood pin is an essential security element and must be installed.

THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.




DESCRIPTION



③ BCM Right side of the center console, passenger side.




②

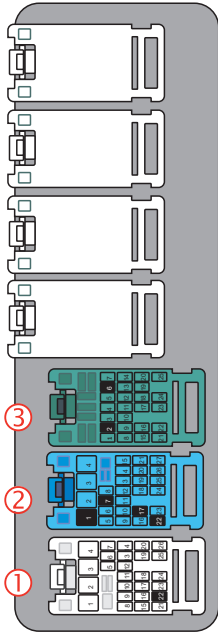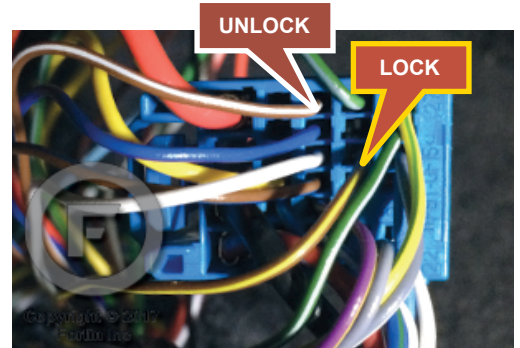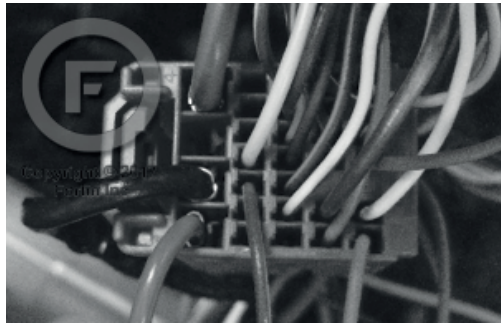


①



AUTOMATIC TRANSMISSION WIRING CONNECTION

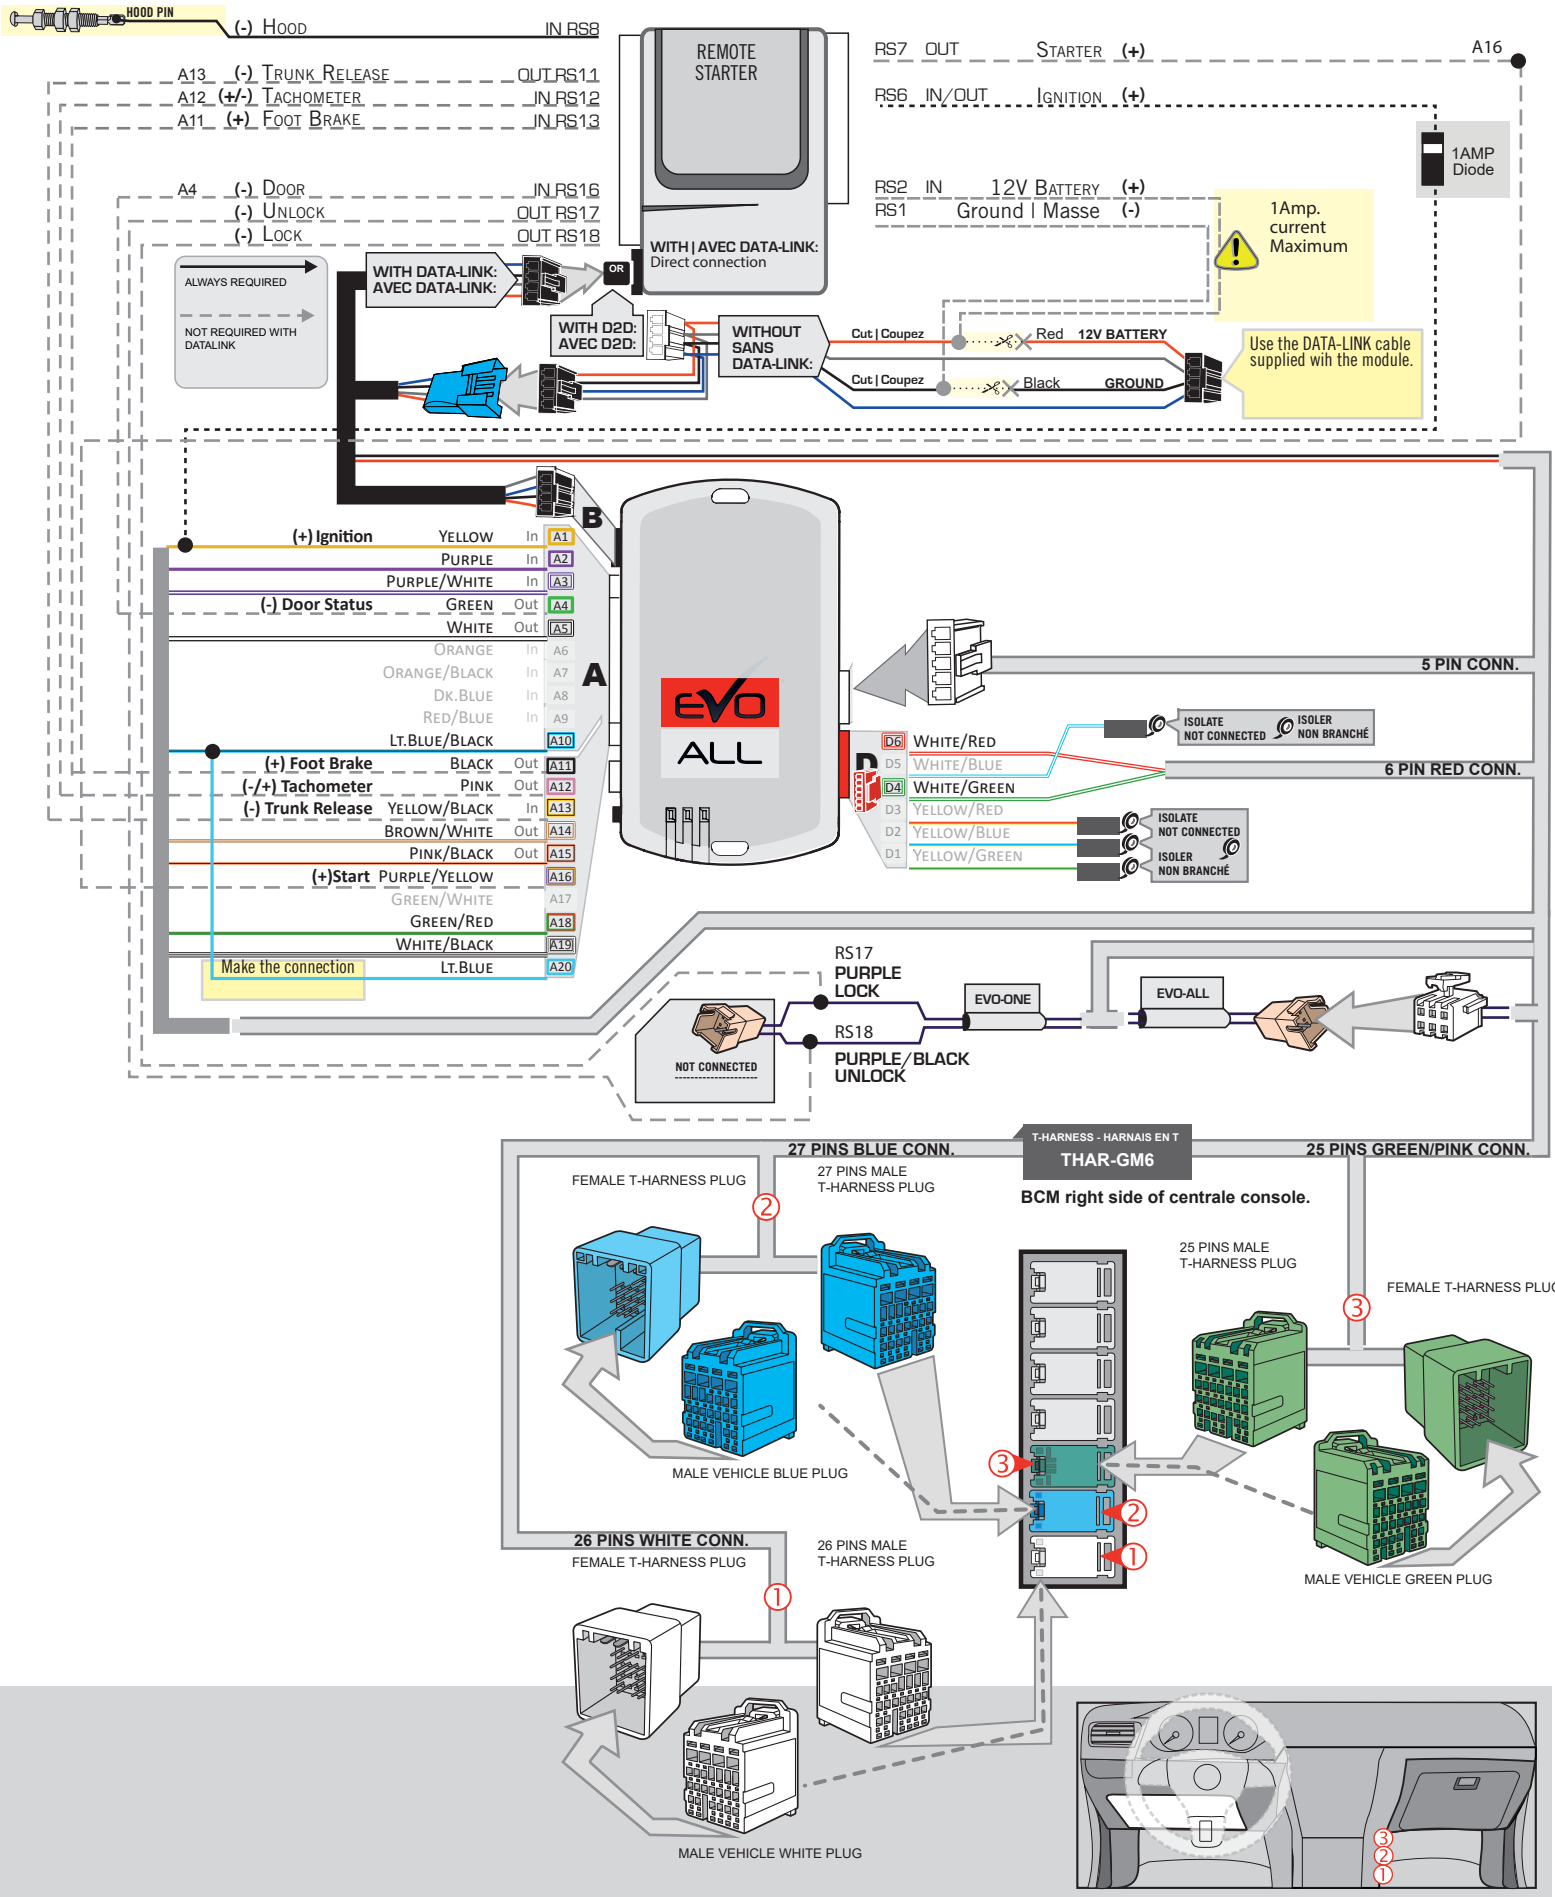


KEY BYPASS PROGRAMMING PROCEDURE 1/3

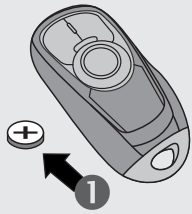


- 1** Remove the battery from the OEM remote.
- 2** Place the OEM in the remote Key reader behind cup holders in the center console.

Refer to vehicle user guide for keyport location.

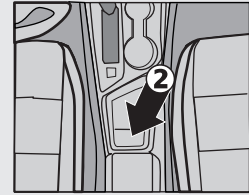


1

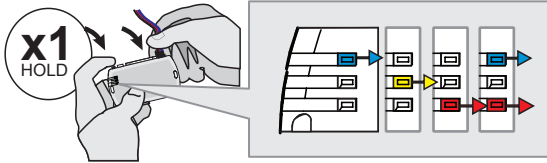

Press and hold the programming button:
Connect the 4-PIN Data-link harness (Black connector).


↳The Blue, Red, Yellow and Blue & Red LEDs will alternatively illuminate.

2

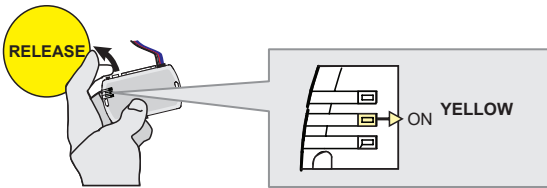


Release the programming button when the LED is **YELLOW**.

 If the LED is not solid YELLOW disconnect the 4-Pin connector (Data-Link) and go back to step 1.




3

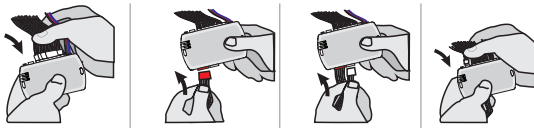

Insert the required remaining connectors.

4

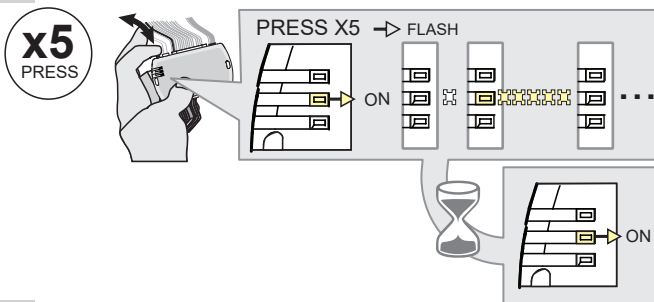


Press and release the programming button five (5x) times.

↳The YELLOW LED will flash 5 times each second.


↳**WAIT** for the YELLOW LED to turn ON solide.

 5



Open the driver door.

6

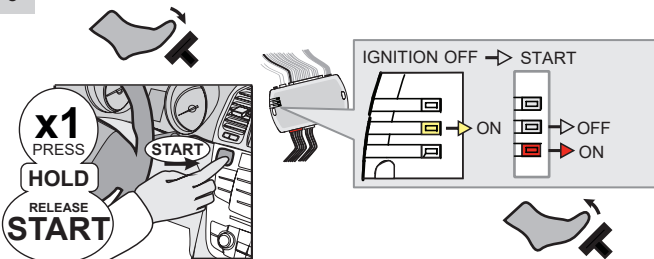

Press the foot-brake pedal.

Press the Push-to-Start button until the engine start.

Release the foot-brake pedal.

↳The RED LED will turn ON.
 ↳The YELLOW LED will turn OFF.


KEY BYPASS PROGRAMMING PROCEDURE 2/3 |

7





Press the Push-to-Start button until the engine turn OFF.

8

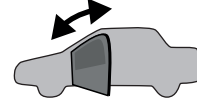

Close and open the driver door.

9

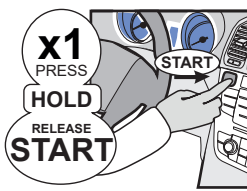
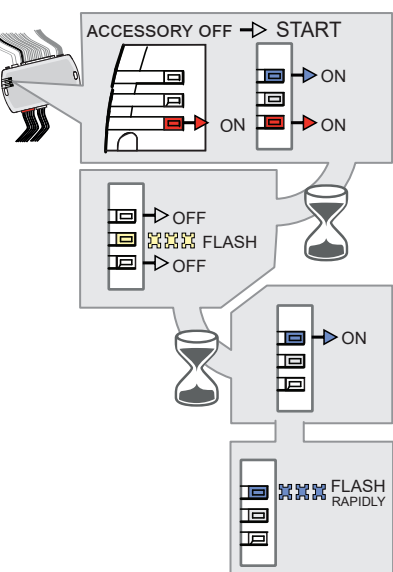
Press the foot-brake pedal.

Press the Push-to-Start button until the engine start.

Release the foot-brake pedal.

- ↳ The BLUE LED will turn ON.
- ↳ The BLUE LED will turn OFF. The RED LED will turn OFF.
- ↳ The YELLOW LED will flash rapidly
- ↳ The BLUE LED will turn ON.
- ↳ The BLUE LED will flash rapidly


10

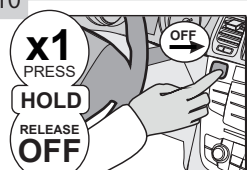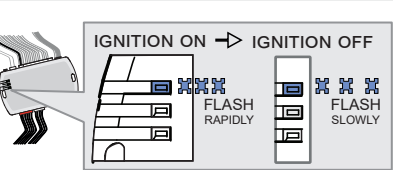Press the Push-to-Start button until the engine turn OFF.


- ↳ The BLUE LED will flash slowly

11

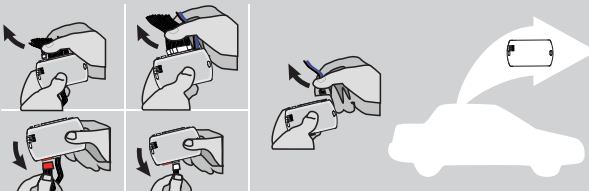

Disconnect all the connectors and after the Data-Link (4-pins) connector.



12

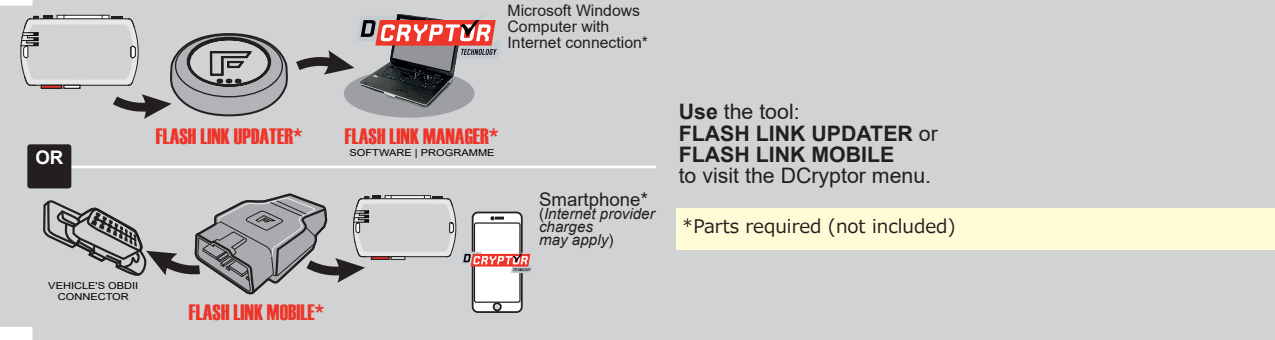

Use the tool: FLASH LINK UPDATER or FLASH LINK MOBILE to visit the DCryptor menu.

***Parts required (not included)**

13

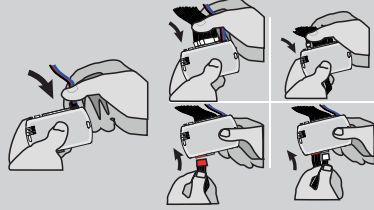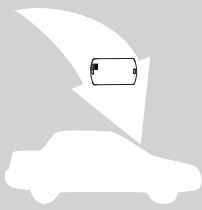

AFTER DCRYPTOR PROGRAMMING COMPLETED
Go back to the vehicle and **reconnect** the 4-Pin (Data-Link) connector and after, all the remaining connector.



The module is now programmed.



REMOTE STARTER / ALARM VERIFICATION PROCEDURE

Test the remote starter. Remote start the vehicle.

REMOTE STARTER FUNCTIONALITY |



All doors must be closed.


Remote start the vehicle.



Press the Unlock button of the remote car starter.



Enter the vehicle with the Intelligent Access Key.

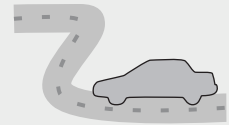

The vehicle can now be put in to gear and driven.





If the vehicle is not unlocked the module will shut down the remote-starter and the vehicle as soon as any door is opened.

THAR-GM6

THARNNESS INSTALLATION

ADDENDUM - SUGGESTED WIRING CONFIGURATION

VEHICLE	YEARS	Vehicle functions supported in this diagram (functional if equipped)													
		Immobilizer bypass	Lock	Unlock	Arm	Disarm	Trunk (open)	RAP Disable	Tachometer	Heated Seats	Door Status	Trunk Status (Data-Link Only, Data-Link Seulement)	Hand-Brake Status (Data-Link Only, Data-Link Seulement)	Foot-Brake Status	OEM Remote Monitoring
															
BUICK															
Encore	Push-To-Start	2017-2020	•	•	•	•	•	•	•	•	•	•	•	•	•
CHEVROLET															
Trax	Push-To-Start	2017-2021	•	•	•	•	•	•	•	•	•	•	•	•	•





FIRMWARE VERSION

70.[45]


GM MINIMUM

To add the firmware version and the options, use the **FLASH LINK UPDATER** or **FLASH LINK MOBILE** tool, sold separately.

	UNIT OPTION		DESCRIPTION
 <p>Program bypass option:</p>	C1		OEM Remote status (Lock/Unlock) monitoring
	A11	OFF	Hood trigger (Output Status).
IF THE VEHICLE IS NOT EQUIPPED WITH FUNCTIONAL HOOD PIN:		D6	Push-to-Start



ATTENTION!

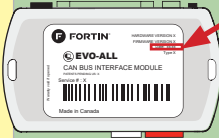

DATE: XX-XX

E5

OFF

ON

SPECIAL FUNCTIONS: BY DEFAULT DEACTIVATED

MANUFACTURED MODULES BETWEEN: 04/2018 TO 04/2019



Parts required (Not included)

1X 1Amp Diode

MANDATORY INSTALL

*HOOD PIN



HOOD STATUS: THE HOOD PIN SWITCH MUST BE INSTALLED IF THE VEHICLE CAN BE REMOTE STARTED WITH THE HOOD OPEN, SET FUNCTION A11 TO OFF.

A11




OFF

Notice: the installation of safety elements are mandatory. The hood pin is an essential security element and must be installed.


THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.

DESCRIPTION


BCM

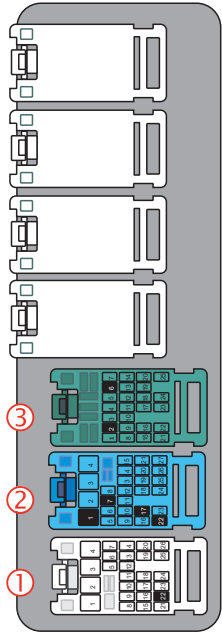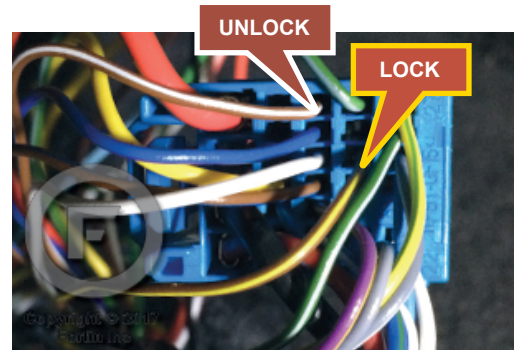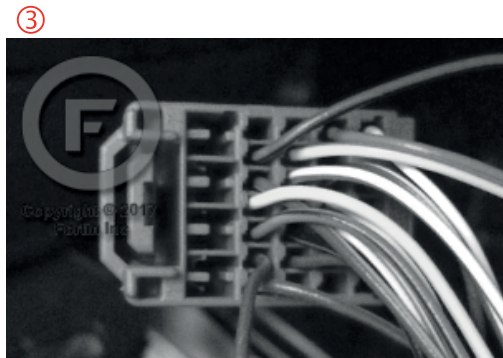


AUTOMATIC TRANSMISSION WIRING CONNECTION |

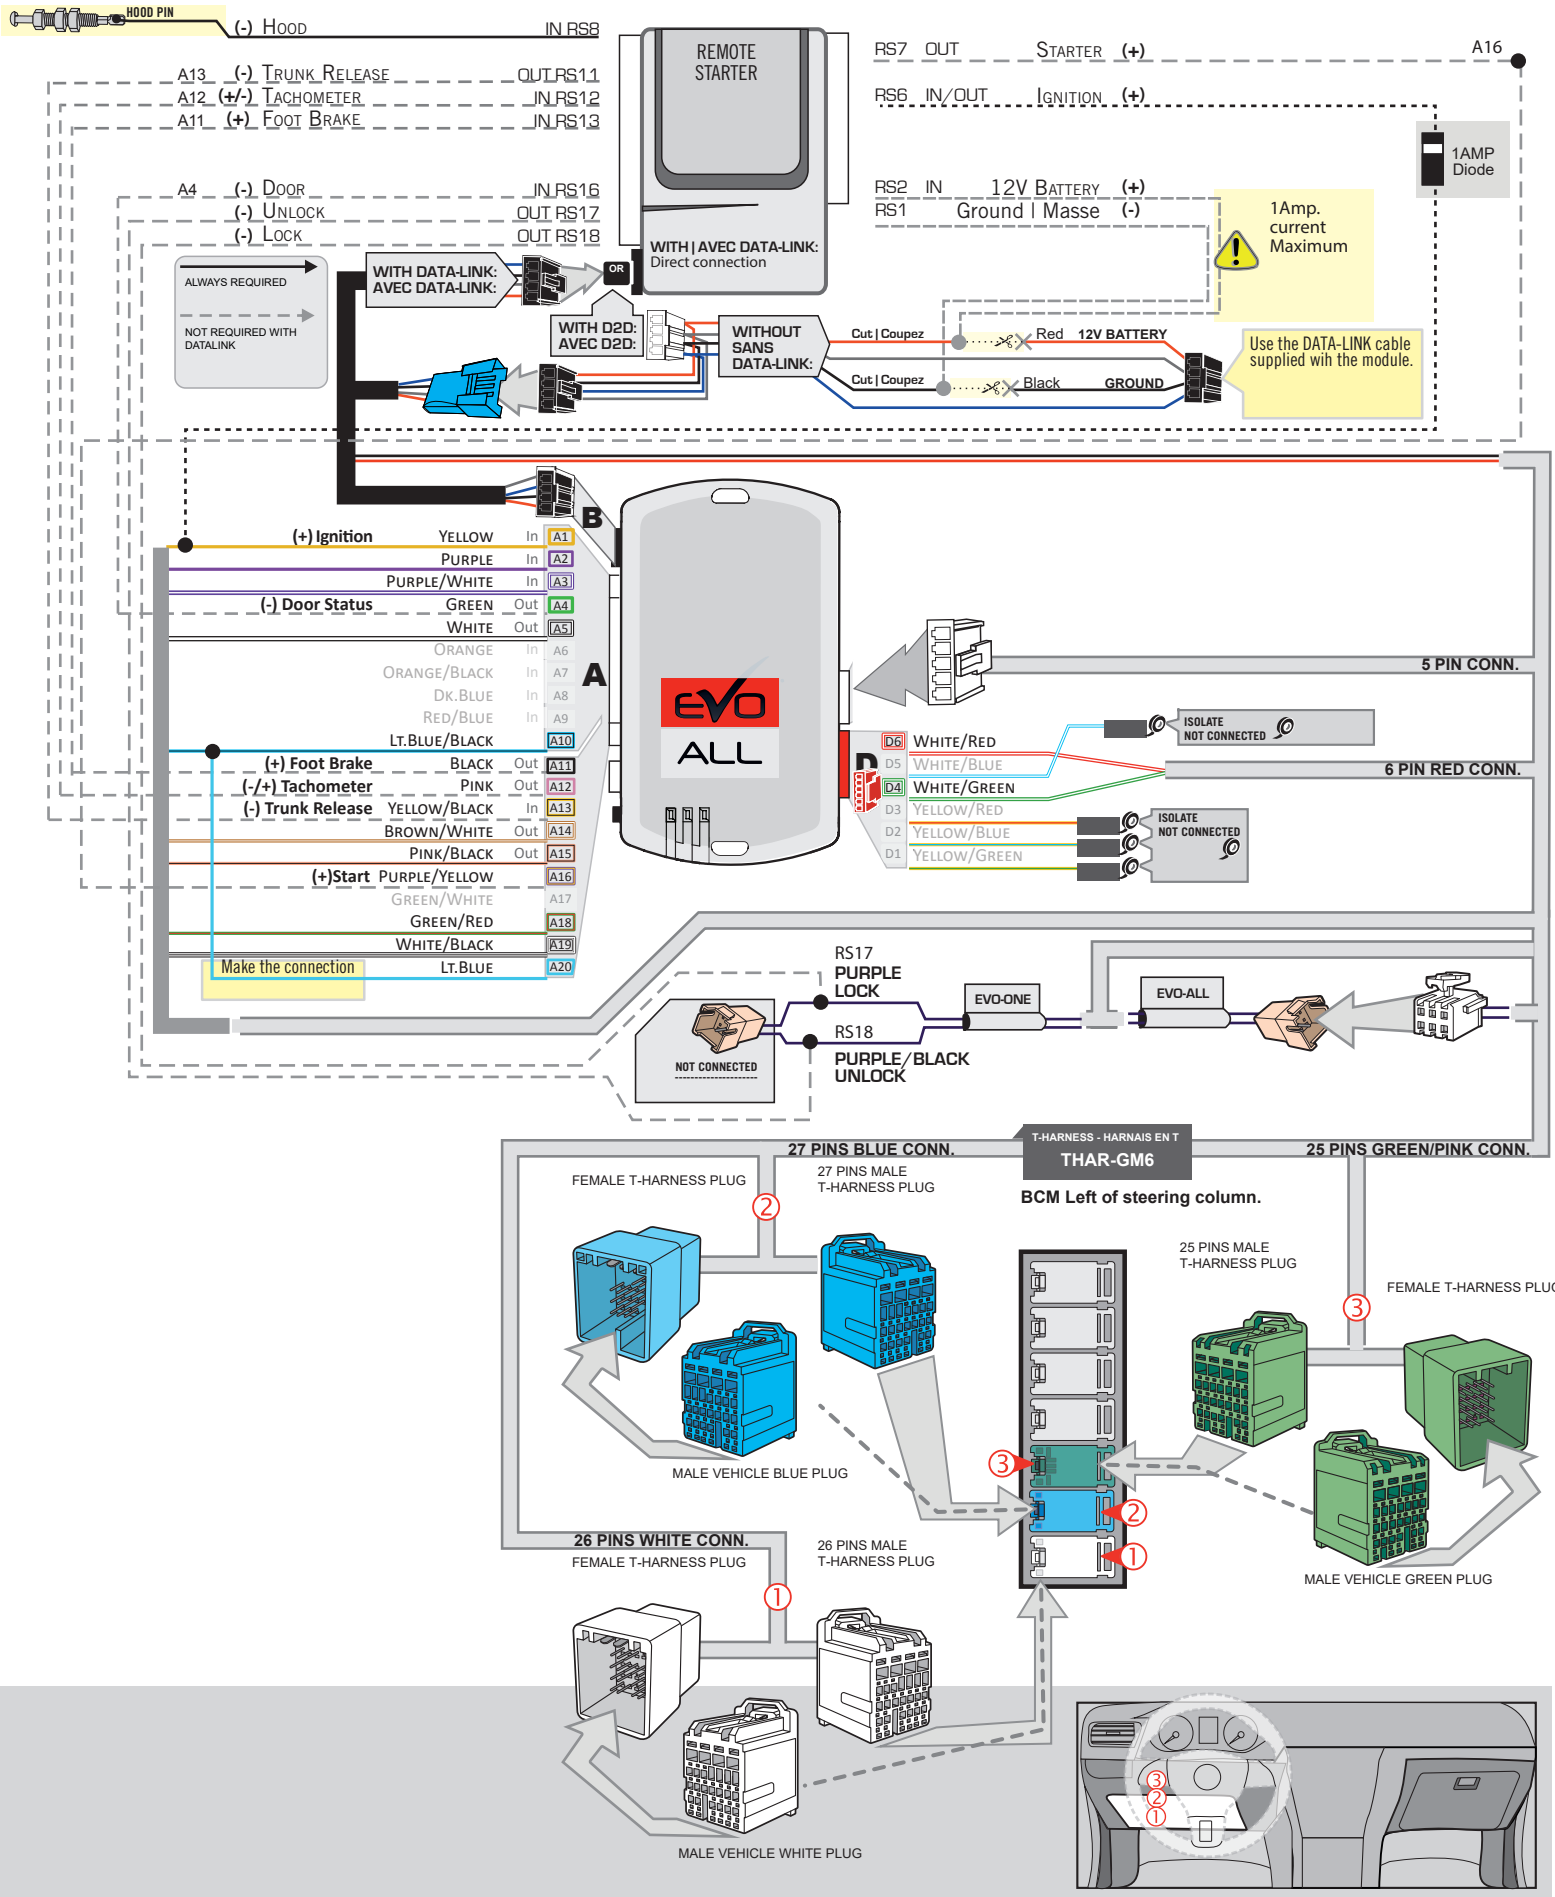


KEY BYPASS PROGRAMMING PROCEDURE 1/3

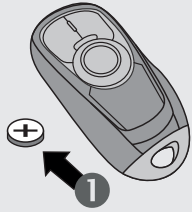

- 1 Remove** the battery from the OEM remote.
- 2 Place** the OEM remote in the front cup holder in the center console.
Refer to vehicle user guide for keyport location.

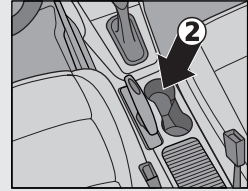


1

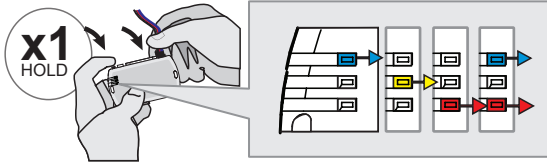

Press and hold the programming button:
Connect the 4-PIN Data-link harness (Black connector).


↳The Blue, Red, Yellow and Blue & Red LEDs will alternatively illuminate.

2

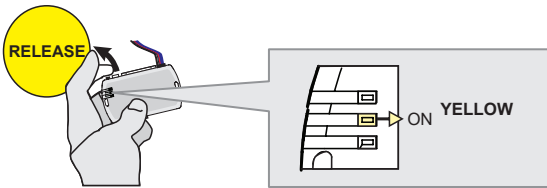


Release the programming button when the LED is YELLOW.

 If the LED is not solid YELLOW disconnect the 4-Pin connector (Data-Link) and go back to step 1.




3

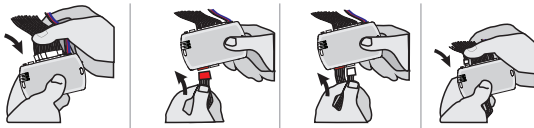

Insert the required remaining connectors.

4

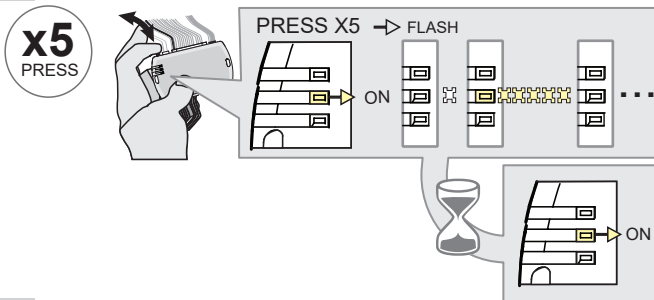


Press and release the programming button five (5x) times.

↳The YELLOW LED will flash 5 times each second.


↳**WAIT** for the YELLOW LED to turn ON solide.

 5



Open the driver door.

6

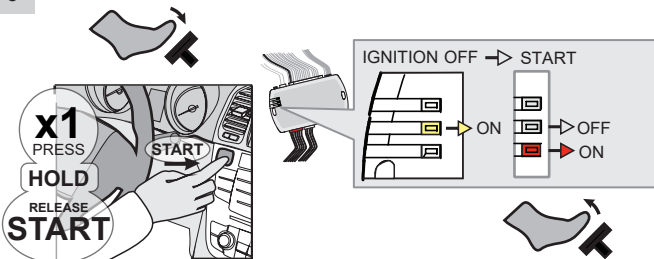

Press the foot-brake pedal.

Press the Push-to-Start button until the engine start.

Release the foot-brake pedal.

↳The RED LED will turn ON.
↳The YELLOW LED will turn OFF.


KEY BYPASS PROGRAMMING PROCEDURE 2/3

7




Press the Push-to-Start button until the engine turn OFF.

8

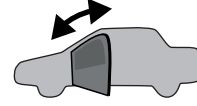

Close and open the driver door.

9

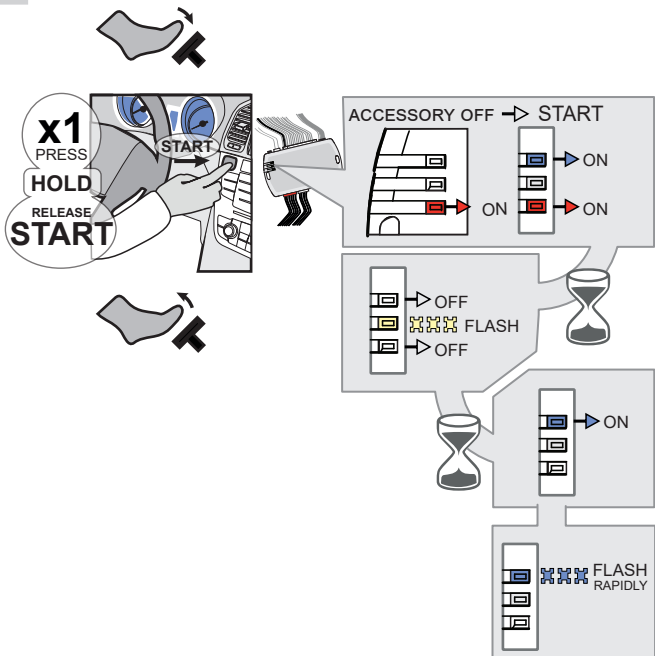


Press the foot-brake pedal.

Press the Push-to-Start button until the engine start.

Release the foot-brake pedal.

- ↳ The BLUE LED will turn ON.
- ↳ The BLUE LED will turn OFF. The RED LED will turn OFF.
- ↳ The YELLOW LED will flash rapidly
- ↳ The BLUE LED will turn ON.
- ↳ The BLUE LED will flash rapidly


10

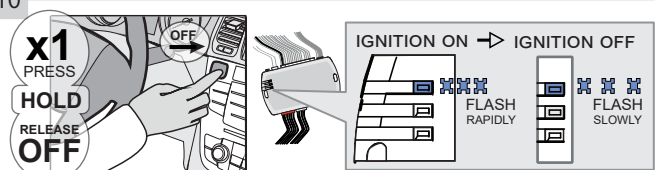

Press the Push-to-Start button until the engine turn OFF.


- ↳ The BLUE LED will flash slowly

11

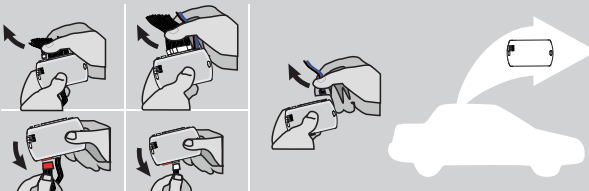

Disconnect all the connectors and after the Data-Link (4-pins) connector.

12

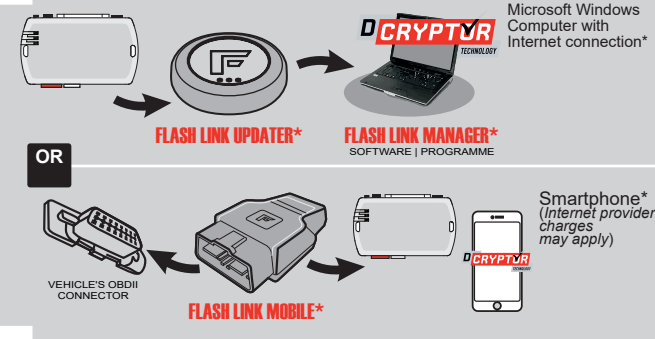

Microsoft Windows Computer with Internet connection*

FLASH LINK UPDATER* **FLASH LINK MANAGER***
SOFTWARE | PROGRAMME

OR

Smartphone* (Internet provider charges may apply)

FLASH LINK MOBILE*


VEHICLE'S OBDII CONNECTOR

Use the tool: FLASH LINK UPDATER or FLASH LINK MOBILE to visit the DCryptor menu.

*Parts required (not included)

KEY BYPASS PROGRAMMING PROCEDURE 3/3

13

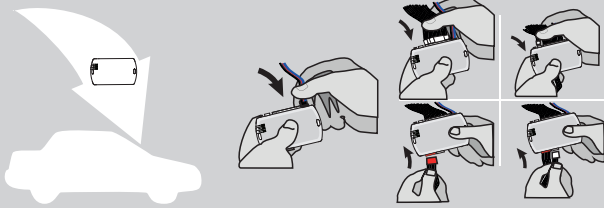

AFTER DCRYPTOR PROGRAMMING COMPLETED
Go back to the vehicle and **reconnect** the 4-Pin (Data-Link) connector and after, all the remaining connector.



The module is now programmed.



REMOTE STARTER / ALARM VERIFICATION PROCEDURE

Test the remote starter. Remote start the vehicle.

REMOTE STARTER FUNCTIONALITY



All doors must be closed.

Remote start the vehicle.



Press the Unlock button of the remote car starter.



Enter the vehicle with the Intelligent Access Key.



The vehicle can now be put in to gear and driven.




If the vehicle is not unlocked the module will shut down the remote-starter and the vehicle as soon as any door is opened.

THAR-GM6

THARNNESS INSTALLATION

ADDENDUM - SUGGESTED WIRING CONFIGURATION

	Vehicle functions supported in this diagram (functional if equipped)													
	Immobilizer bypass	Lock	Unlock	Arm	Disarm	Trunk (open)	RAP Disable	Tachometer	Heated Seats	Door Status	Trunk Status (Data-Link Only, Data-Link Seulement)	Hand-Brake Status (Data-Link Only, Data-Link Seulement)	Foot-Brake Status	OEM Remote Monitoring
VEHICLE	YEARS													
BUICK														
Envision	Push-To-Start	2017-2020	•	•	•	•	•	•	•	•	•	•	•	•

FIRMWARE VERSION




70.[41]
GM MINIMUM


To add the firmware version and the options, use the **FLASH LINK UPDATER** or **FLASH LINK MOBILE** tool, sold separately.

IF THE VEHICLE IS NOT EQUIPPED WITH FUNCTIONAL HOOD PIN:

A11 **OFF** Hood trigger (Output Status).

	Program bypass option:	UNIT OPTION	DESCRIPTION
		C1	OEM Remote status (Lock/Unlock) monitoring
		D6	Push-to-Start


ATTENTION!

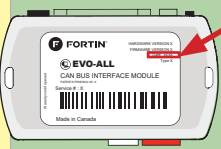

DATE: XX-XX


E5 **OFF** **SPECIAL FUNCTIONS: BY DEFAULT DEACTIVATED**

ON **MANUFACTURED MODULES BETWEEN: 04/2018 TO 04/2019**

 **Parts required (Not included)**

1X 1Amp Diode

MANDATORY INSTALL

***HOOD PIN**  **HOOD STATUS: THE HOOD PIN SWITCH MUST BE INSTALLED IF THE VEHICLE CAN BE REMOTE STARTED WITH THE HOOD OPEN, SET FUNCTION A11 TO OFF.**


A11 **OFF**

Notice: the installation of safety elements are mandatory. The hood pin is an essential security element and must be installed.


THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.

DESCRIPTION




BCM located on passenger side center console

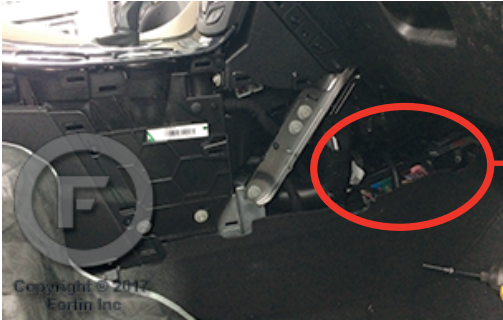

③

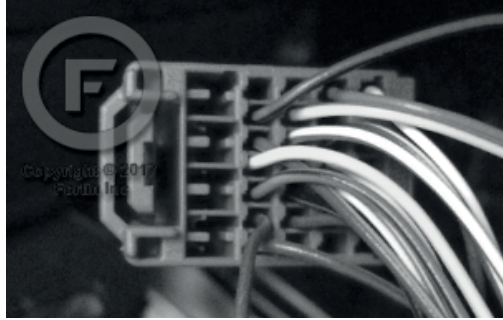


②

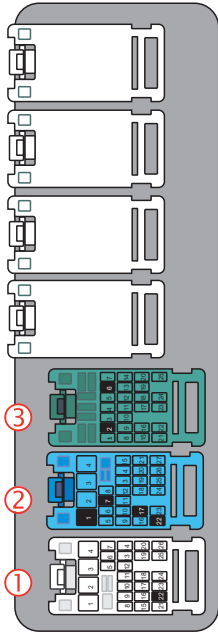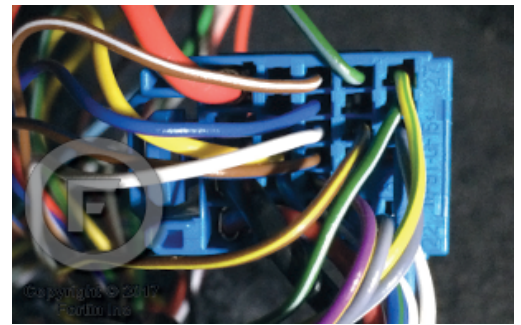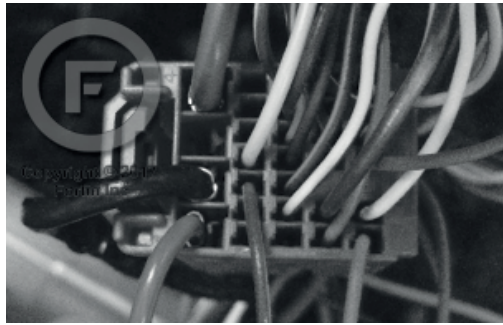


①




AUTOMATIC TRANSMISSION WIRING CONNECTION

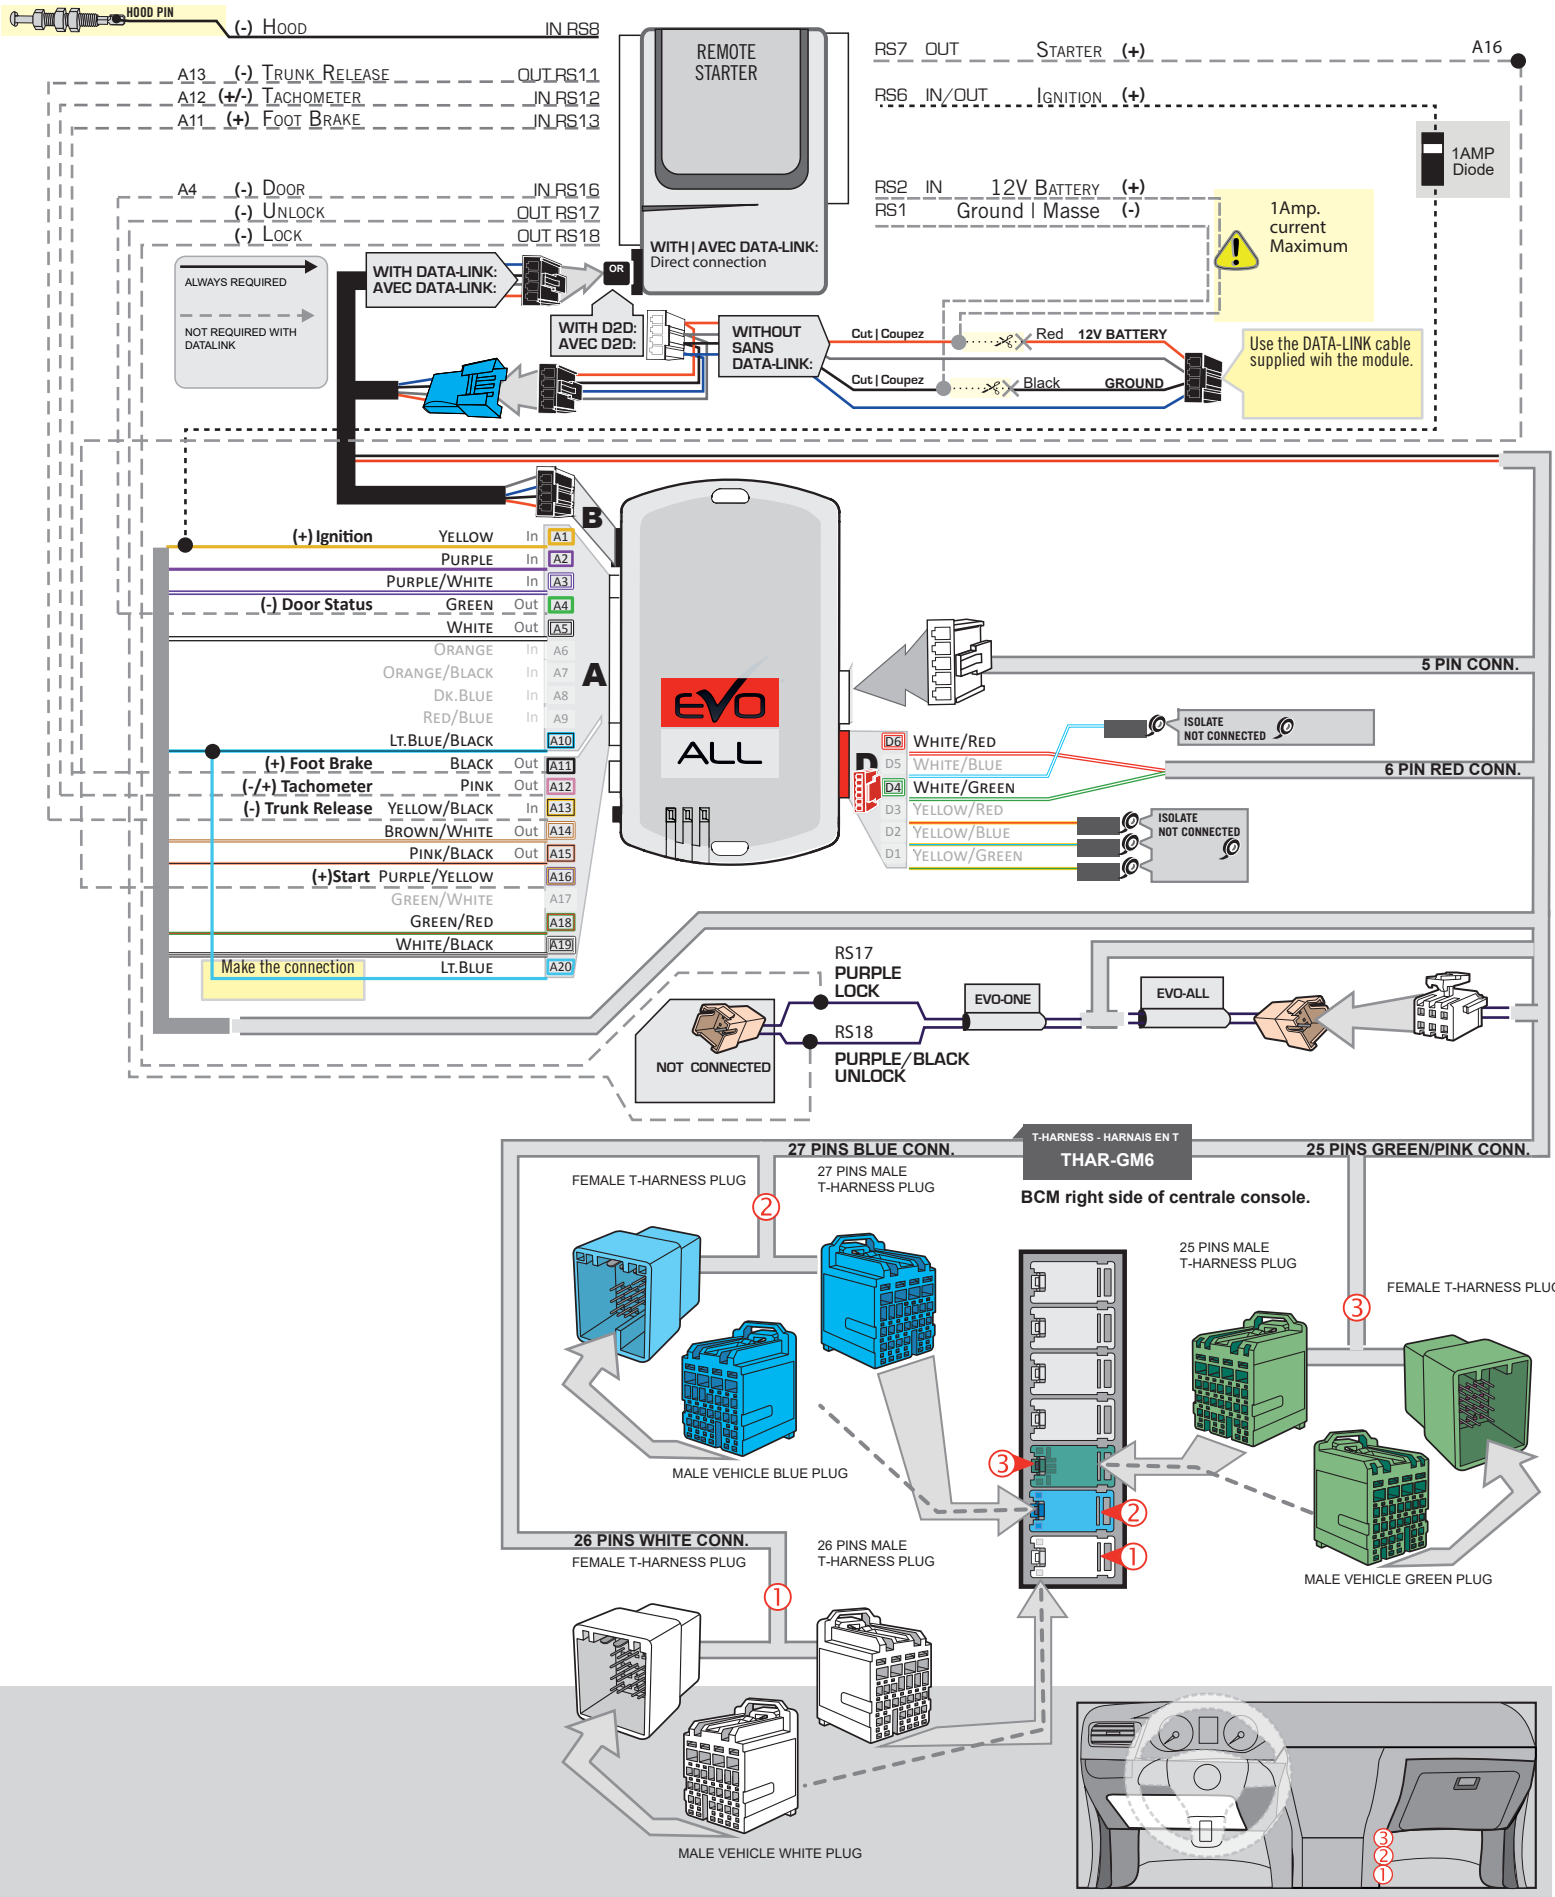


KEY BYPASS PROGRAMMING PROCEDURE 1/3

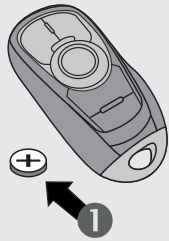

- 1** Remove the battery from the OEM remote.
- 2** Place the OEM remote in the front cup holder in the center console.
Refer to vehicle user guide for keyport location.

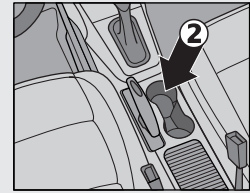


1

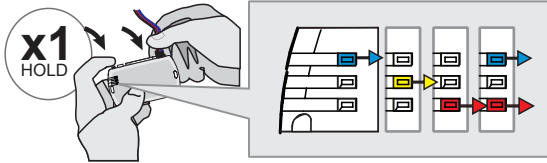

Press and hold the programming button:
Connect the 4-PIN Data-link harness (Black connector).


↳The Blue, Red, Yellow and Blue & Red LEDs will alternatively illuminate.

2

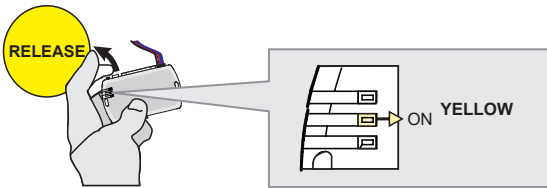


Release the programming button when the LED is YELLOW.

 If the LED is not solid YELLOW disconnect the 4-Pin connector (Data-Link) and go back to step 1.




3

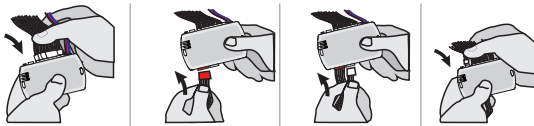

Insert the required remaining connectors.

4

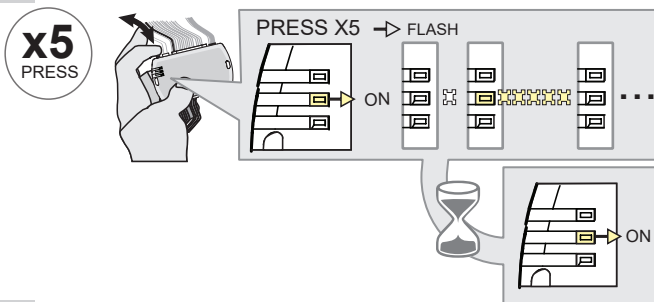


Press and release the programming button five (5x) times.

↳The YELLOW LED will flash 5 times each second.


↳**WAIT** for the YELLOW LED to turn ON solide.

 5



Open the driver door.

6

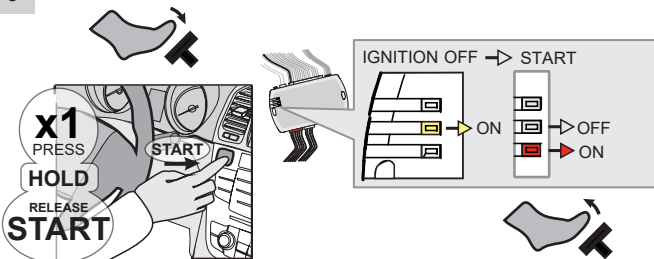

Press the foot-brake pedal.

Press the Push-to-Start button until the engine start.

Release the foot-brake pedal.

↳The RED LED will turn ON.
↳The YELLOW LED will turn OFF.


KEY BYPASS PROGRAMMING PROCEDURE 2/3

7




Press the Push-to-Start button until the engine turn OFF.

8

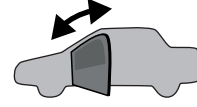

Close and open the driver door.

9

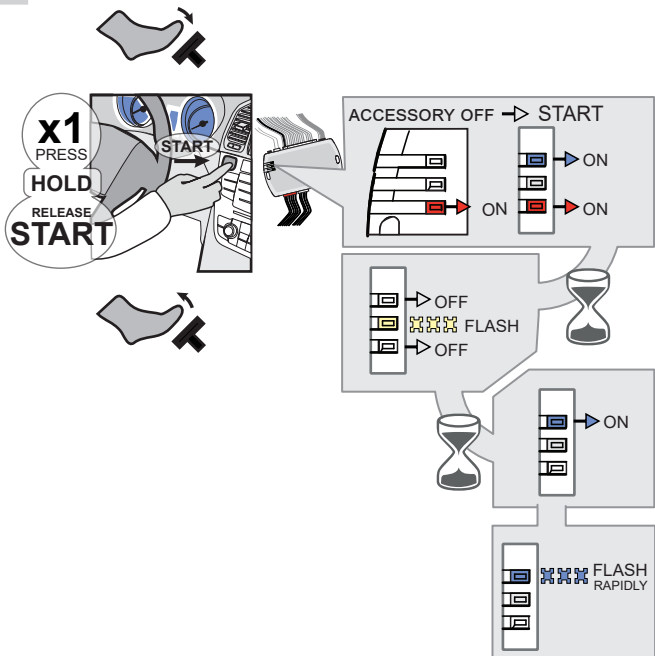


Press the foot-brake pedal.

Press the Push-to-Start button until the engine start.

Release the foot-brake pedal.

- ↳ The BLUE LED will turn ON.
- ↳ The BLUE LED will turn OFF. The RED LED will turn OFF.
- ↳ The YELLOW LED will flash rapidly
- ↳ The BLUE LED will turn ON.
- ↳ The BLUE LED will flash rapidly


10

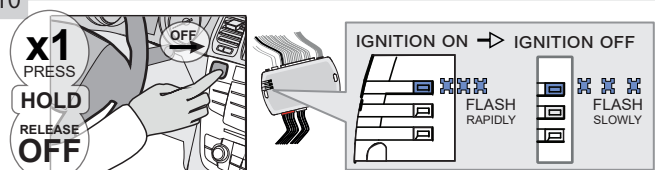

Press the Push-to-Start button until the engine turn OFF.


- ↳ The BLUE LED will flash slowly

11

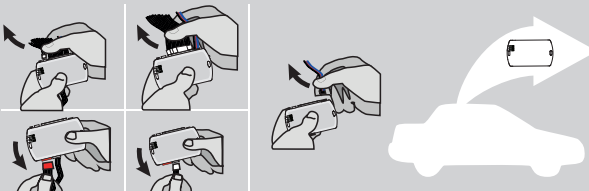

Disconnect all the connectors and after the Data-Link (4-pins) connector.

12

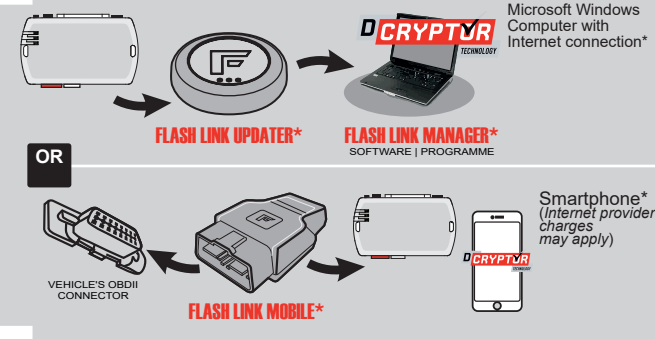

Microsoft Windows Computer with Internet connection*

FLASH LINK UPDATER* FLASH LINK MANAGER*
SOFTWARE | PROGRAMME

OR

Smartphone* (Internet provider charges may apply)



VEHICLE'S OBDII CONNECTOR FLASH LINK MOBILE*

Use the tool: FLASH LINK UPDATER or FLASH LINK MOBILE to visit the DCryptor menu.

*Parts required (not included)

KEY BYPASS PROGRAMMING PROCEDURE 3/3

13

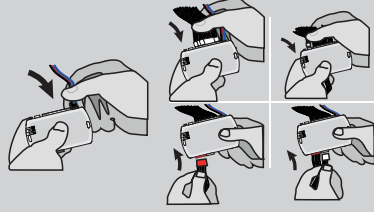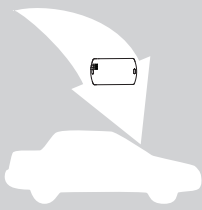

AFTER DCRYPTOR PROGRAMMING COMPLETED
Go back to the vehicle and **reconnect** the 4-Pin (Data-Link) connector and after, all the remaining connector.



The module is now programmed.



REMOTE STARTER / ALARM VERIFICATION PROCEDURE

Test the remote starter. Remote start the vehicle.

REMOTE STARTER FUNCTIONALITY



All doors must be closed.

Remote start the vehicle.



Press the Unlock button of the remote car starter.



Enter the vehicle with the Intelligent Access Key.



The vehicle can now be put in to gear and driven.



If the vehicle is not unlocked the module will shut down the remote-starter and the vehicle as soon as any door is opened.

THAR-GM6
THARNNESS INSTALLATION

ADDENDUM - SUGGESTED WIRING CONFIGURATION

VEHICLE	YEARS	Vehicle functions supported in this diagram (functional if equipped)														
		Immobilizer bypass	Lock	Unlock	Arm	Disarm	Trunk (open)	Parking Light	RAP Disable	Tachometer	Heated Seats	Door Status	Trunk Status (Data-Link Only, Data-Link Seulement)	Hand-Brake Status (Data-Link Only, Data-Link Seulement)	Foot-Brake Status	OEM Remote Monitoring
CHEVROLET																
Equinox	Push-To-Start	2018-2020	•	•	•	•	•	•	•	•	•	•	•	•	•	•



FIRMWARE VERSION

70.[45]

GM MINIMUM

To add the firmware version and the options, use the **FLASH LINK UPDATER** or **FLASH LINK MOBILE** tool, sold separately.

	PROGRAM BYPASS OPTION:	UNIT OPTION	DESCRIPTION
		C1	OEM Remote status (Lock/Unlock) monitoring
	IF THE VEHICLE IS NOT EQUIPPED WITH FUNCTIONAL HOOD PIN:	A11	OFF
		D6	Push-to-Start

ATTENTION!

DATE: XX-XX

E5

SPECIAL FUNCTIONS: BY DEFAULT DEACTIVATED

OFF

ON

MANUFACTURED MODULES BETWEEN: 04/2018 TO 04/2019

Parts required (Not included)

1X 1Amp Diode

MANDATORY INSTALL

***HOOD PIN**



HOOD STATUS: THE HOOD PIN SWITCH MUST BE INSTALLED IF THE VEHICLE CAN BE REMOTE STARTED WITH THE HOOD OPEN, SET FUNCTION **A11** TO OFF.

A11

OFF

Notice: the installation of safety elements are mandatory. The hood pin is an essential security element and must be installed.




THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.

DESCRIPTION


BCM



Centrale console

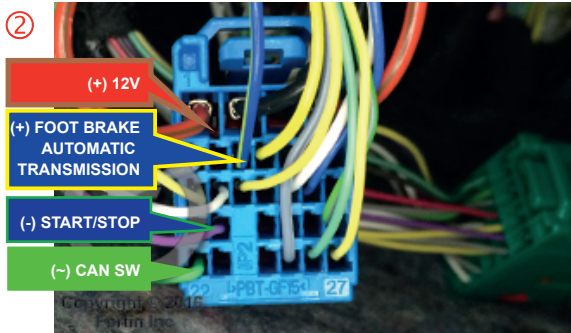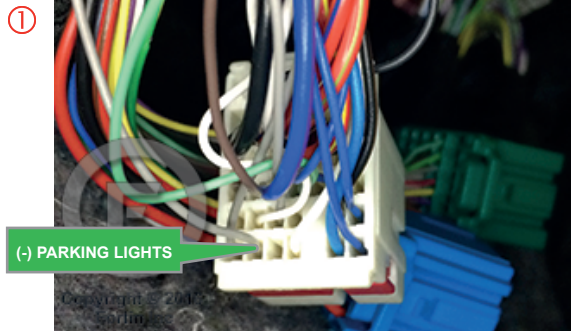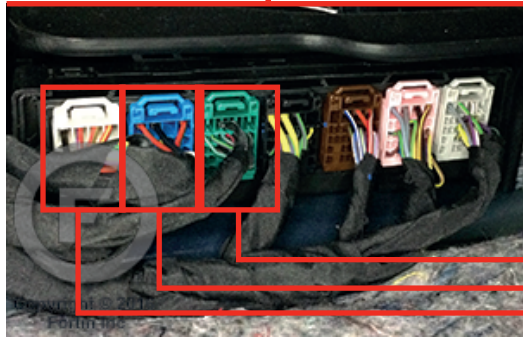


AUTOMATIC TRANSMISSION WIRING CONNECTION

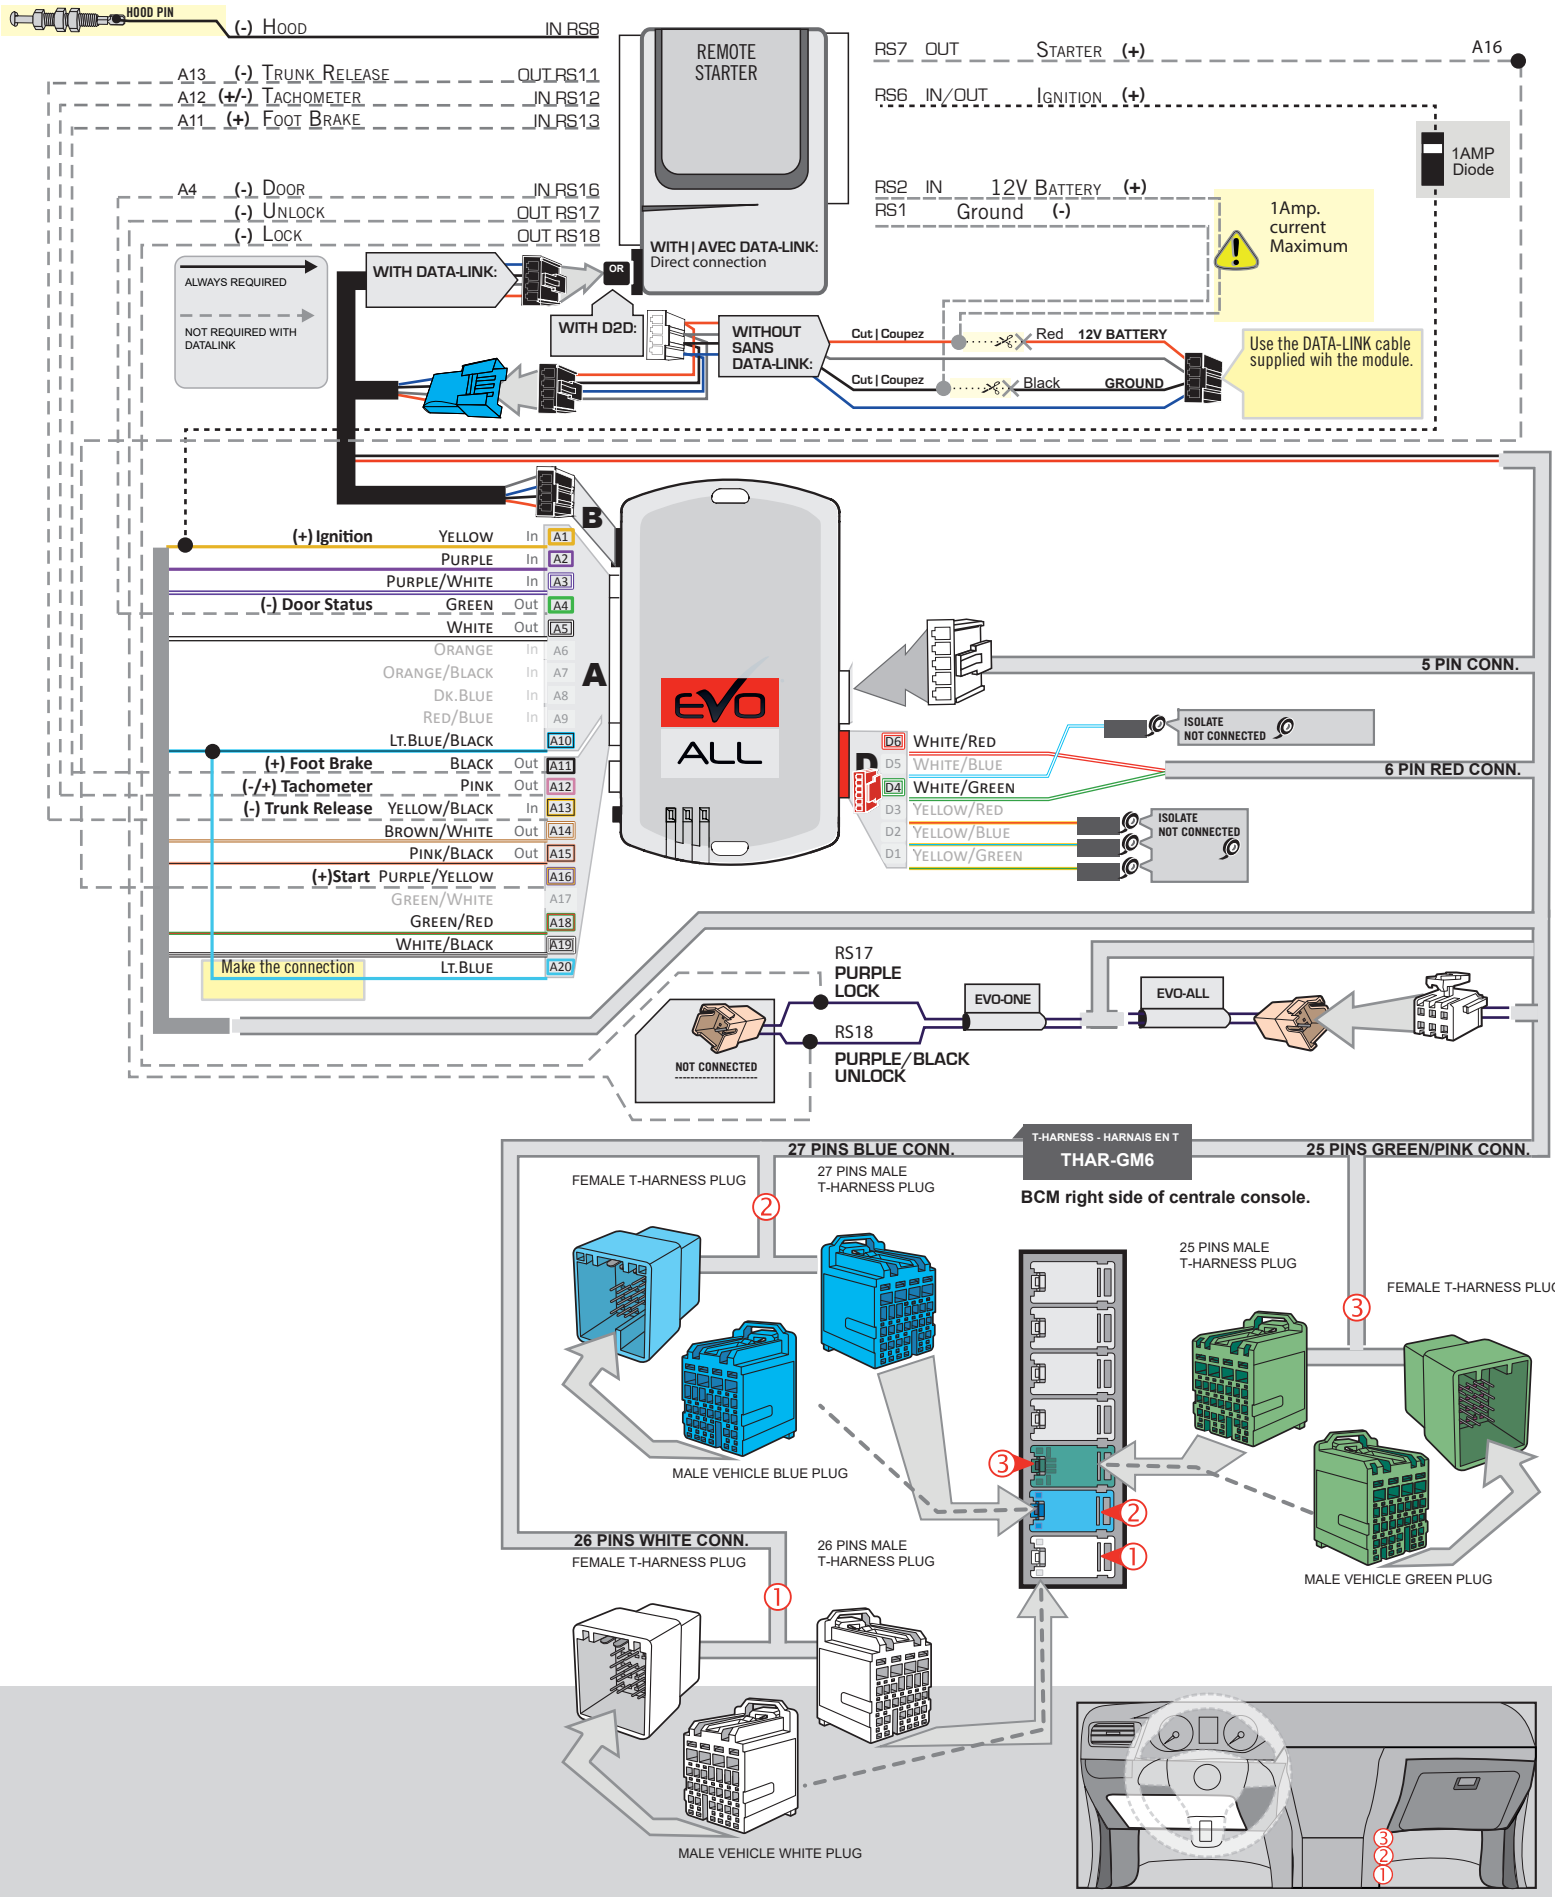


KEY BYPASS PROGRAMMING PROCEDURE 1/3



- 1** Remove the battery from the OEM remote.
- 2** Place the OEM remote in the front cup holder in the center console.
Refer to vehicle user guide for keyport location.

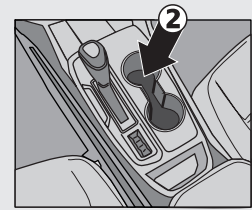


1

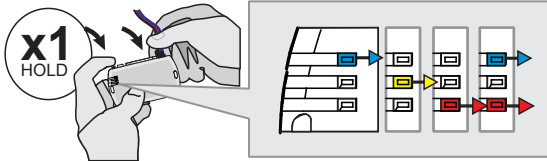

Press and hold the programming button:
Connect the 4-PIN Data-link harness (Black connector).


↳The Blue, Red, Yellow and Blue & Red LEDs will alternatively illuminate.

2

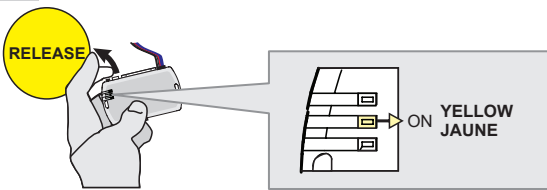


Release the programming button when the LED is YELLOW.

 If the LED is not solid YELLOW disconnect the 4-Pin connector (Data-Link) and go back to step 1.




3

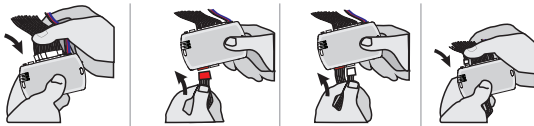

Insert the required remaining connectors.

4

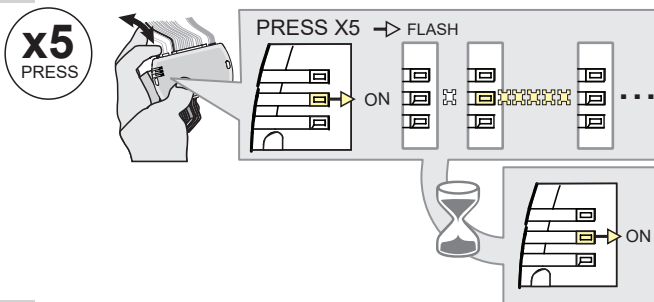


Press and release the programming button five (5x) times.

↳The YELLOW LED will flash 5 times each second.


↳**WAIT** for the YELLOW LED to turn ON solide.

 5



Open the driver door.

6

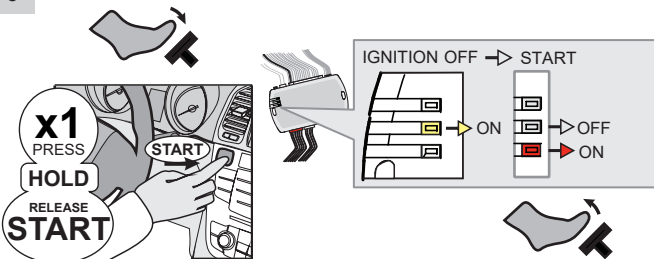

Press the foot-brake pedal.

Press the Push-to-Start button until the engine start.

Release the foot-brake pedal.

↳The RED LED will turn ON.
↳The YELLOW LED will turn OFF.


KEY BYPASS PROGRAMMING PROCEDURE 2/3 |

7




Press the Push-to-Start button until the engine turn OFF.

8

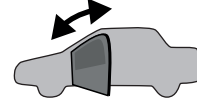

Close and open the driver door.

9

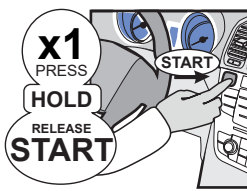


Press the foot-brake pedal.

Press the Push-to-Start button until the engine start.

Release the foot-brake pedal.

- ↳ The BLUE LED will turn ON.
- ↳ The BLUE LED will turn OFF. The RED LED will turn OFF.
- ↳ The YELLOW LED will flash rapidly
- ↳ The BLUE LED will turn ON.
- ↳ The BLUE LED will flash rapidly


10

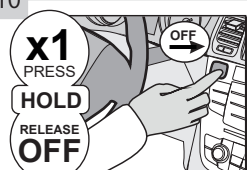

Press the Push-to-Start button until the engine turn OFF.


- ↳ The BLUE LED will flash slowly

11

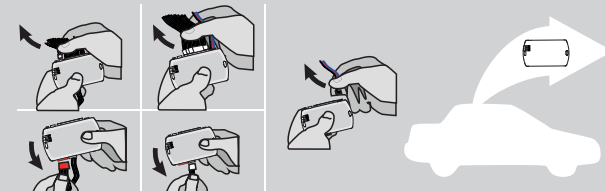

Disconnect all the connectors and after the Data-Link (4-pins) connector.



12

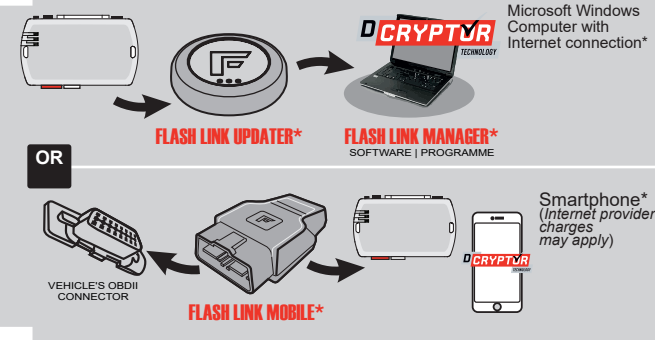

Use the tool: FLASH LINK UPDATER or FLASH LINK MOBILE to visit the DCRYPTOR menu.

*Parts required (not included)

13

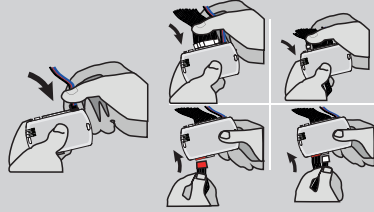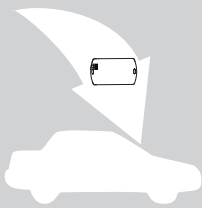

AFTER DCRYPTOR PROGRAMMING COMPLETED
Go back to the vehicle and **reconnect** the 4-Pin (Data-Link) connector and after, all the remaining connector.



The module is now programmed.



REMOTE STARTER / ALARM VERIFICATION PROCEDURE

Test the remote starter. Remote start the vehicle.

REMOTE STARTER FUNCTIONALITY |

 


All doors must be closed.

Remote start the vehicle.



Press the Unlock button of the remote car starter.



Enter the vehicle with the Intelligent Access Key.



The vehicle can now be put in to gear and driven.



If the vehicle is not unlocked the module will shut down the remote-starter and the vehicle as soon as any door is opened.

THAR-GM6

THARNNESS INSTALLATION

ADDENDUM - SUGGESTED WIRING CONFIGURATION



Vehicle functions supported in this diagram (functional if equipped)

VEHICLE	YEARS	Immobilizer bypass	Lock	Unlock	Arm	Disarm	Trunk (open)	RAP Disable	Tachometer	Heated Seats	Door Status	Trunk Status (Data-Link Only,Data-Link Seulement)	Hand-Brake Status (Data-Link Only,Data-Link Seulement)	Foot-Brake Status	OEM Remote Monitoring
BUICK Lacrosse	Push-To-Start 2017-2018	•	•	•	•	•	•	•	•	•	•	•	•	•	•

FIRMWARE VERSION

70.[41]

GM MINIMUM

To add the firmware version and the options, use the **FLASH LINK UPDATER** or **FLASH LINK MOBILE** tool, sold separately.

<p>IF THE VEHICLE IS NOT EQUIPPED WITH FUNCTIONAL HOOD PIN:</p>	A11	OFF	<p>Hood trigger (Output Status). Contact de capot (état de sortie).</p>
--	------------	------------	---

	UNIT OPTION	DESCRIPTION
<p>Program bypass option:</p>	C1	OEM Remote status (Lock/Unlock) monitoring
	D6	Push-to-Start

	<p>ATTENTION!</p>	<p>DATE: XX-XX</p>	E5	<p>SPECIAL FUNCTIONS: BY DEFAULT DEACTIVATED</p> <p>MANUFACTURED MODULES BETWEEN: 04/2018 TO 04/2019</p>
--	--------------------------	--------------------	-----------	--

Parts required (Not included)
1X 1Amp Diode

MANDATORY INSTALL

*HOOD PIN



HOOD STATUS: THE HOOD PIN SWITCH MUST BE INSTALLED IF THE VEHICLE CAN BE REMOTE STARTED WITH THE HOOD OPEN, SET FUNCTION A11 TO OFF.

A11 OFF

Notice: the installation of safety elements are mandatory. The hood pin is an essential security element and must be installed.


THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.

DESCRIPTION


BCM located on passenger side center console




③

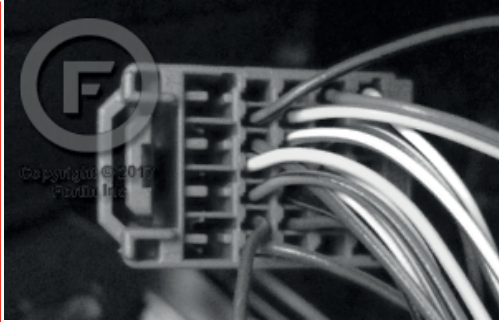


②

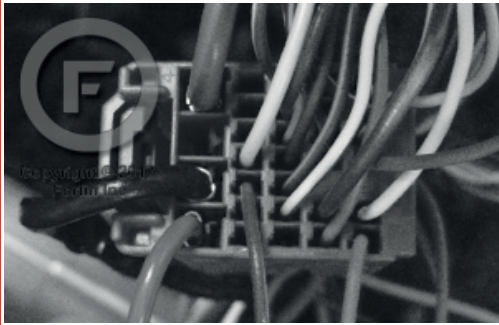


①

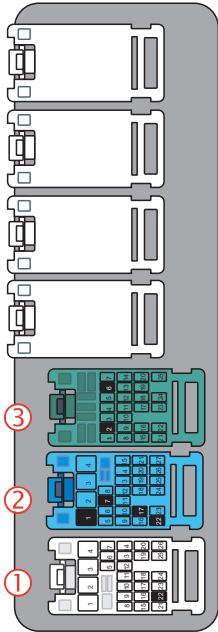

AUTOMATIC TRANSMISSION WIRING CONNECTION

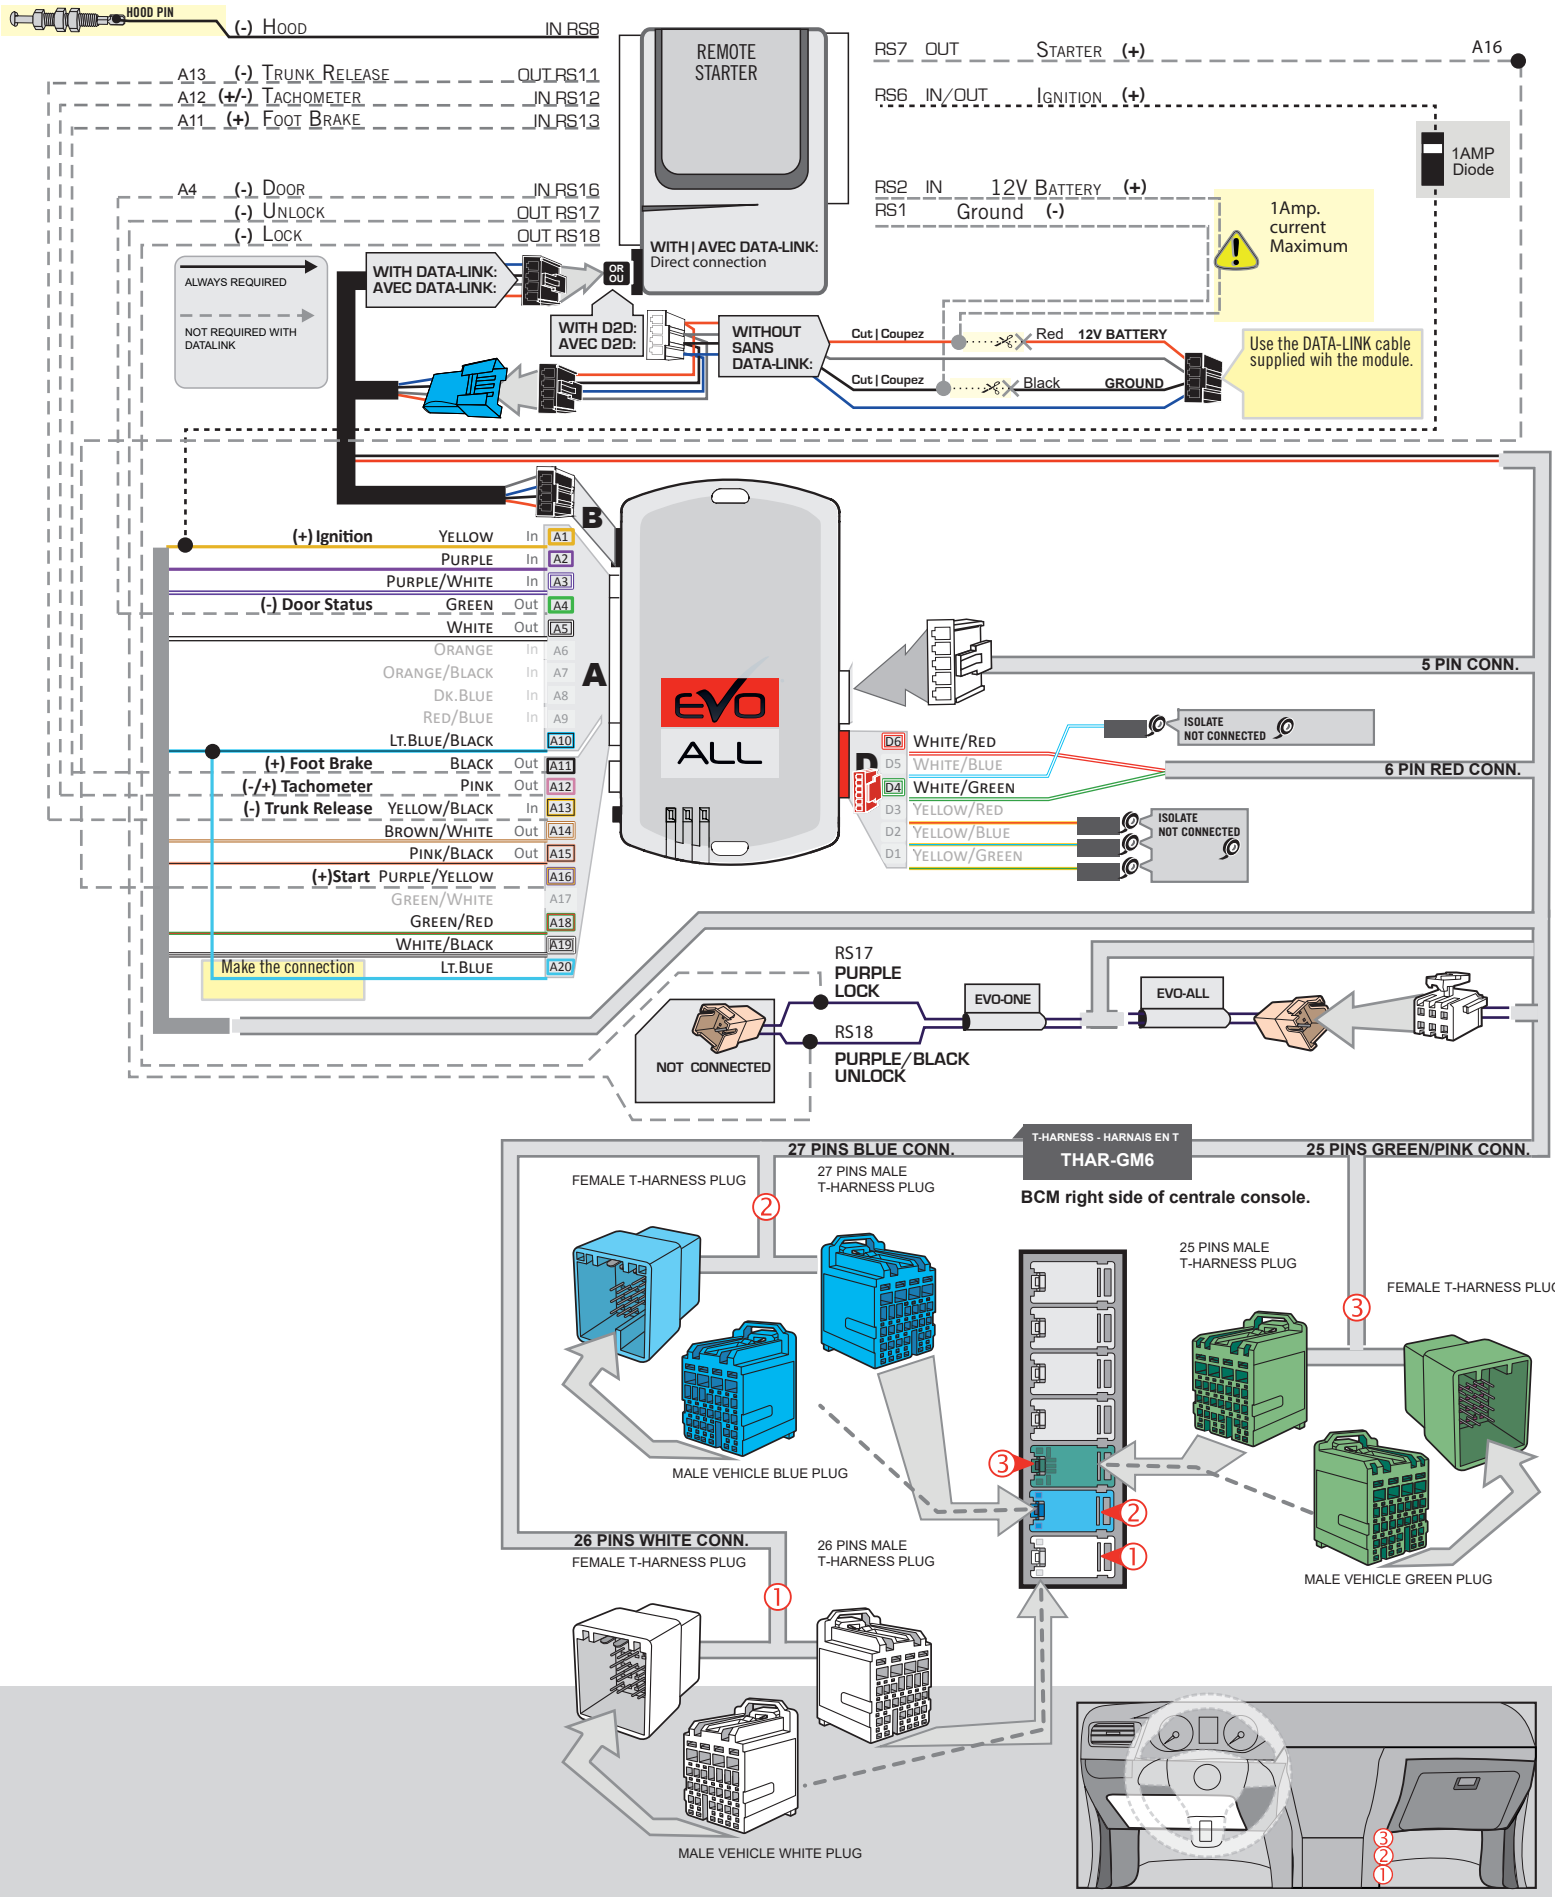


KEY BYPASS PROGRAMMING PROCEDURE 1/3

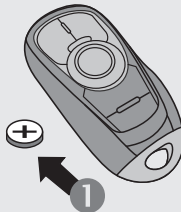

1 Remove the battery from the OEM remote.


2 Place the OEM remote into the transmitter pocket of the center console.

Refer to vehicle user guide for keyport location.

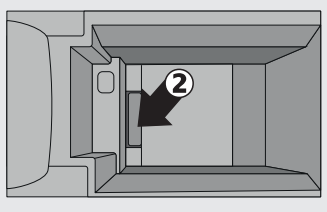

1

x1 HOLD

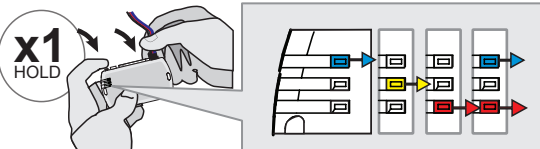


Press and hold the programming button:
Connect the 4-PIN Data-link harness (Black connector).

↳The Blue, Red, Yellow and Blue & Red LEDs will alternatively illuminate.


2

RELEASE

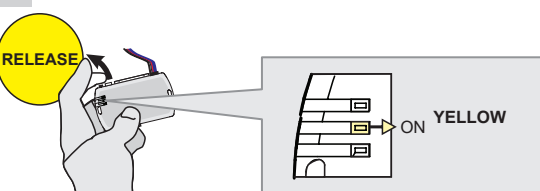


Release the programming button when the LED is YELLOW.

 If the LED is not solid YELLOW disconnect the 4-Pin connector (Data-Link) and go back to step 1.



3

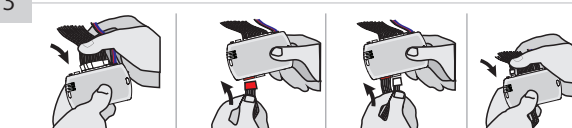


Insert the required remaining connectors.

4

x5 PRESS

PRESS X5 → FLASH

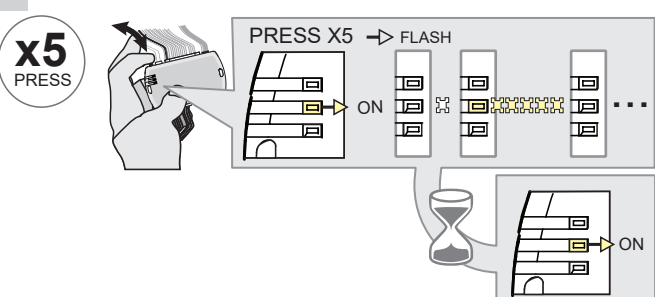


Press and release the programming button five (5x) times.

↳The YELLOW LED will flash 5 times each second.

↳**WAIT** for the YELLOW LED to turn ON solide.

5

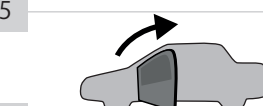

Open the driver door.


6

x1 PRESS

HOLD

RELEASE

START

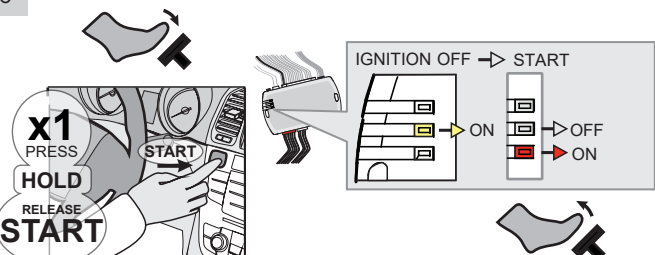

Press the foot-brake pedal.

Press the Push-to-Start button until the engine start.

Release the foot-brake pedal.

↳The RED LED will turn ON.
 ↳The YELLOW LED will turn OFF.


KEY BYPASS PROGRAMMING PROCEDURE 2/3

7




Press the Push-to-Start button until the engine turn OFF.

8

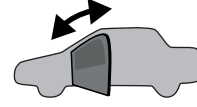

Close and open the driver door.

9

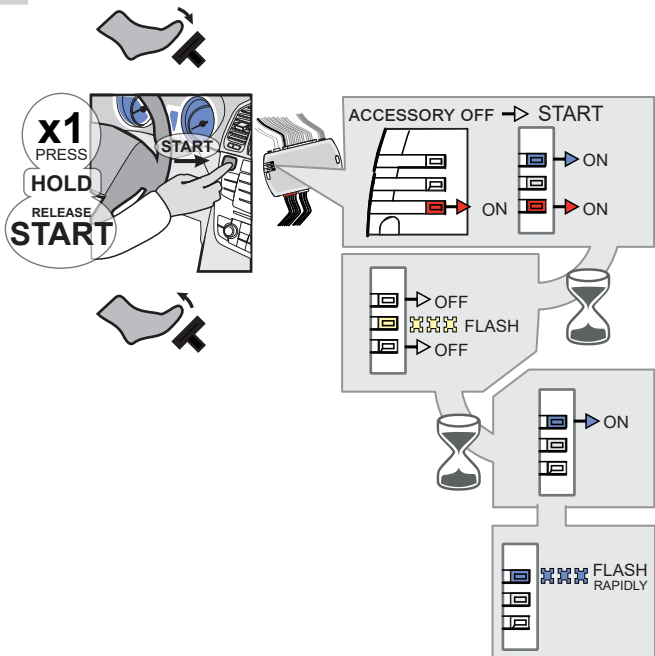


Press the foot-brake pedal.

Press the Push-to-Start button until the engine start.

Release the foot-brake pedal.

- ↳ The BLUE LED will turn ON.
- ↳ The BLUE LED will turn OFF. The RED LED will turn OFF.
- ↳ The YELLOW LED will flash rapidly
- ↳ The BLUE LED will turn ON.
- ↳ The BLUE LED will flash rapidly


10

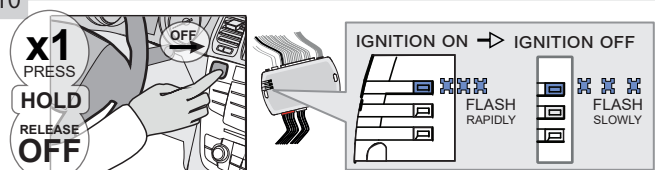

Press the Push-to-Start button until the engine turn OFF.


- ↳ The BLUE LED will flash slowly

11

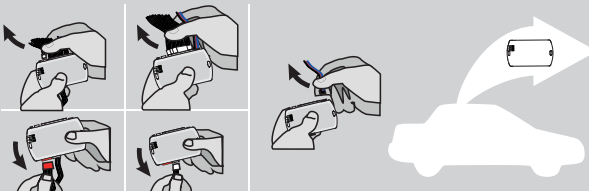

Disconnect all the connectors and after the Data-Link (4-pins) connector.

12


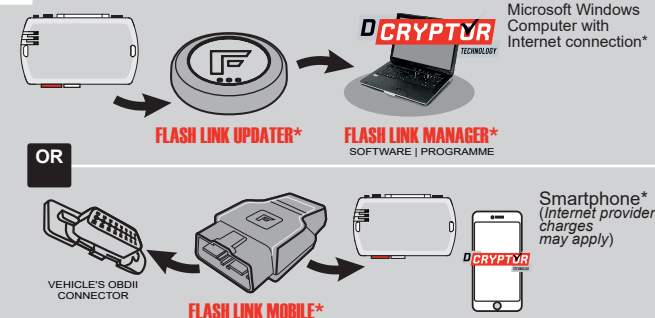


Use the tool: FLASH LINK UPDATER or FLASH LINK MOBILE to visit the DCryptor menu.

***Parts required (not included)**

KEY BYPASS PROGRAMMING PROCEDURE 3/3

13

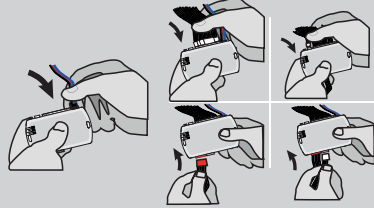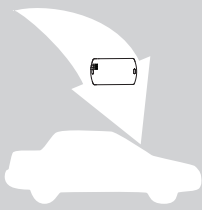

AFTER DCRYPTOR PROGRAMMING COMPLETED
Go back to the vehicle and **reconnect** the 4-Pin (Data-Link) connector and after, all the remaining connector.



The module is now programmed.



REMOTE STARTER / ALARM VERIFICATION PROCEDURE

Test the remote starter. **Remote start** the vehicle.

REMOTE STARTER FUNCTIONALITY



All doors must be closed.

Remote start the vehicle.



Press the Unlock button of the remote car starter.



Enter the vehicle with the Intelligent Access Key.



The vehicle can now be put in to gear and driven.



If the vehicle is not unlocked the module will shut down the remote-starter and the vehicle as soon as any door is opened.

THAR-GM6
THARNNESS INSTALLATION

ADDENDUM - SUGGESTED WIRING CONFIGURATION

VEHICLE	YEARS	Vehicle functions supported in this diagram (functional if equipped)															
		Immobilizer bypass	Lock	Unlock	Arm	Disarm	Trunk (open)	Parking Light	RAP Disable	Tachometer	Heated Seats	Door Status	Trunk Status (Data-Link Only, Data-Link Seulement)	Hand-Brake Status (Data-Link Only, Data-Link Seulement)	Foot-Brake Status	OEM Remote Monitoring	
BUICK																	
Verano	Push-To-Start	2012-2017	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
CHEVROLET																	
Blazer	Push-To-Start	2019-2020	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
Malibu	Push-To-Start	2016-2020	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
Traverse	Push-To-Start	2018-2020	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
GMC																	
Terrain	Push-To-Start	2018-2020	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•

FIRMWARE VERSION

70.[41]

GM MINIMUM

To add the firmware version and the options, use the **FLASH LINK UPDATER** or **FLASH LINK MOBILE** tool, sold separately.

IF THE VEHICLE IS NOT EQUIPPED WITH FUNCTIONAL HOOD PIN:	A11	OFF	Hood trigger (Output Status).
--	-----	-----	-------------------------------

	Program bypass option:	UNIT OPTION	DESCRIPTION
		C1	OEM Remote status (Lock/Unlock) monitoring
		D6	Push-to-Start

ATTENTION!

DATE: XX-XX

E5

OFF

ON

SPECIAL FUNCTIONS:
BY DEFAULT DEACTIVATED

MANUFACTURED MODULES BETWEEN: 04/2018 TO 04/2019

Parts required (Not included)

1X 1Amp Diode

MANDATORY INSTALL

*HOOD PIN

HOOD STATUS: THE HOOD PIN SWITCH MUST BE INSTALLED IF THE VEHICLE CAN BE REMOTE STARTED WITH THE HOOD OPEN, SET FUNCTION A11 TO OFF.

A11

OFF

Notice: the installation of safety elements are mandatory. The hood pin is an essential security element and must be installed.


THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.

DESCRIPTION


BCM




Centrale console

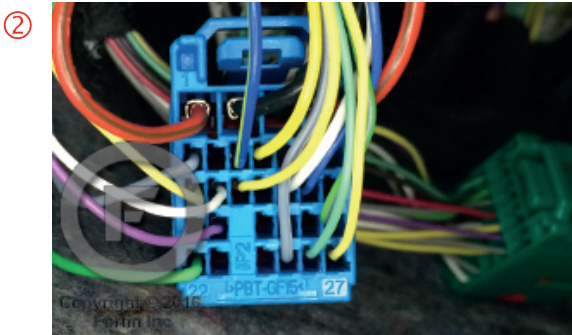

AUTOMATIC TRANSMISSION WIRING CONNECTION

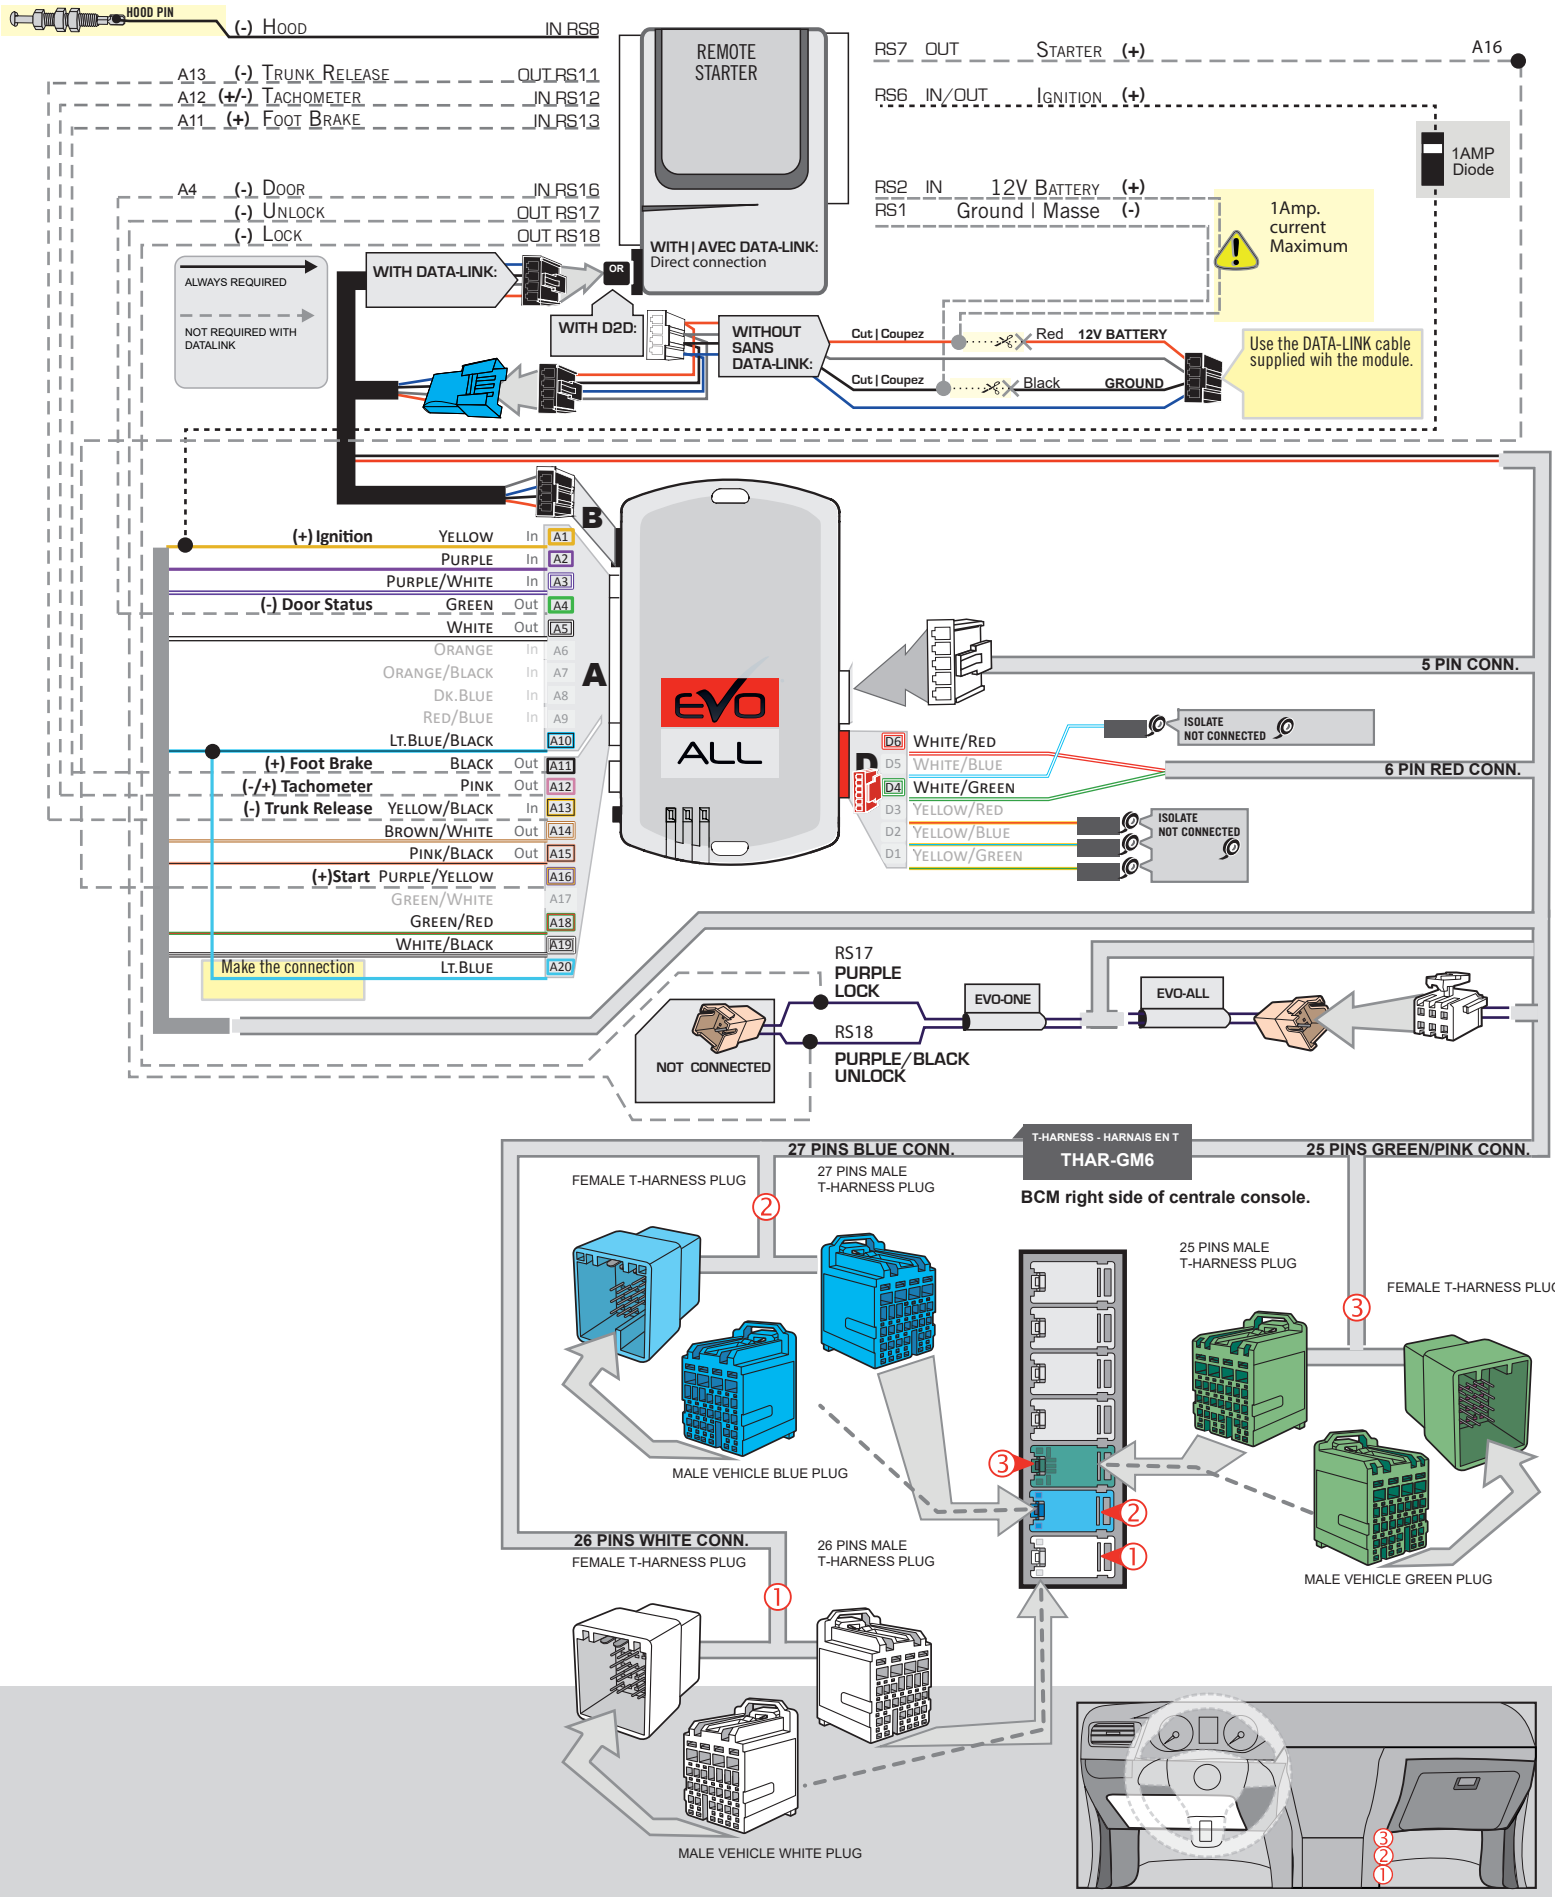


KEY BYPASS PROGRAMMING PROCEDURE 1/3

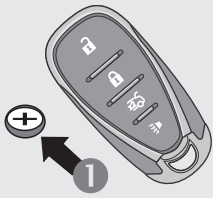


1 Remove the battery from the OEM remote.

2 Place the OEM remotes in to the center console.

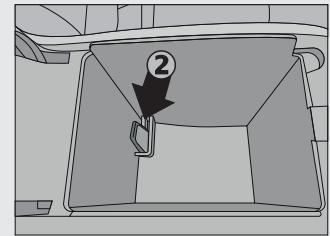


1

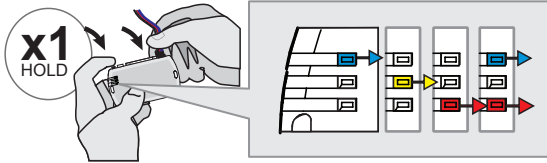

Press and hold the programming button:
Connect the 4-PIN Data-link harness (Black connector).


↳The Blue, Red, Yellow and Blue & Red LEDs will alternatively illuminate.

2

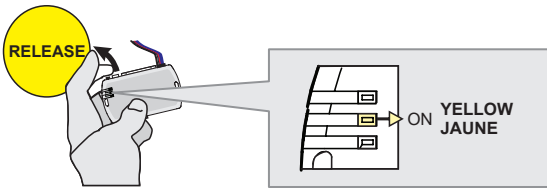


Release the programming button when the LED is YELLOW.

 If the LED is not solid YELLOW disconnect the 4-Pin connector (Data-Link) and go back to step 1.




3

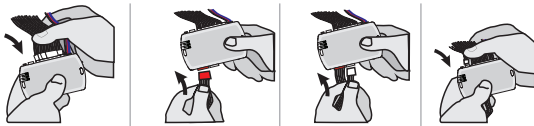

Insert the required remaining connectors.

4

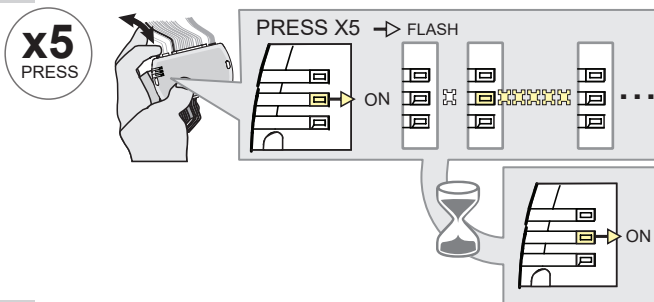


Press and release the programming button five (5x) times.

↳The YELLOW LED will flash 5 times each second.


↳**WAIT** for the YELLOW LED to turn ON solide.

 5



Open the driver door.

6

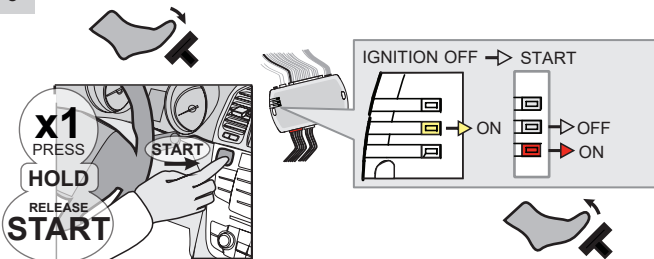

Press the foot-brake pedal.

Press the Push-to-Start button until the engine start.

Release the foot-brake pedal.

↳The RED LED will turn ON.
↳The YELLOW LED will turn OFF.


KEY BYPASS PROGRAMMING PROCEDURE 2/3

7




Press the Push-to-Start button until the engine turn OFF.

8

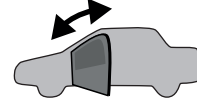

Close and open the driver door.

9

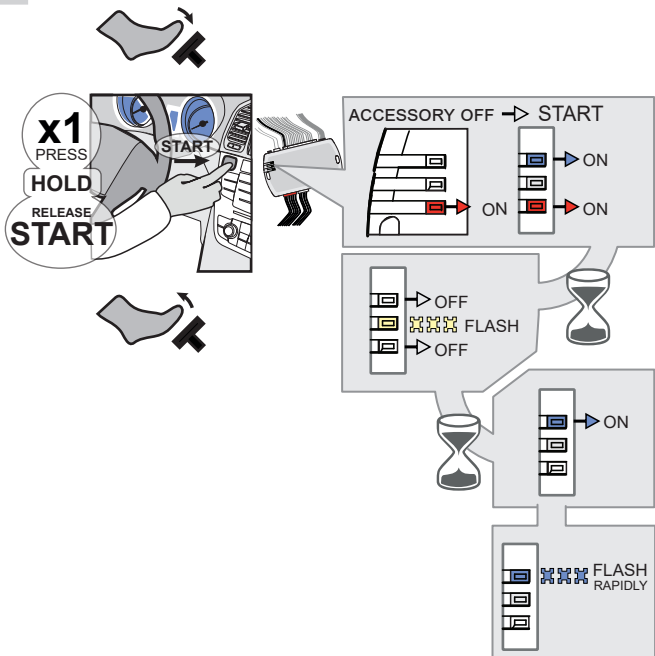


Press the foot-brake pedal.

Press the Push-to-Start button until the engine start.

Release the foot-brake pedal.

- ↳ The BLUE LED will turn ON.
- ↳ The BLUE LED will turn OFF. The RED LED will turn OFF.
- ↳ The YELLOW LED will flash rapidly
- ↳ The BLUE LED will turn ON.
- ↳ The BLUE LED will flash rapidly


10

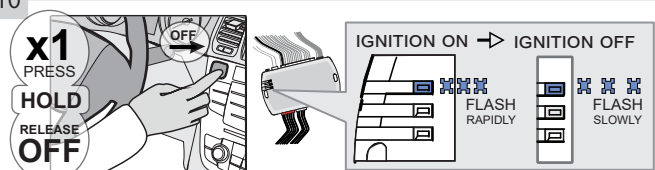

Press the Push-to-Start button until the engine turn OFF.


- ↳ The BLUE LED will flash slowly

11

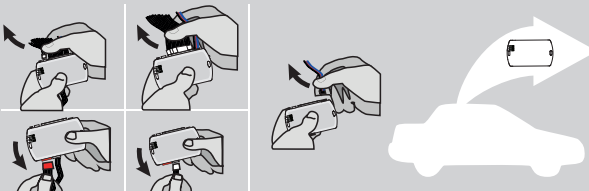

Disconnect all the connectors and after the Data-Link (4-pins) connector.

12

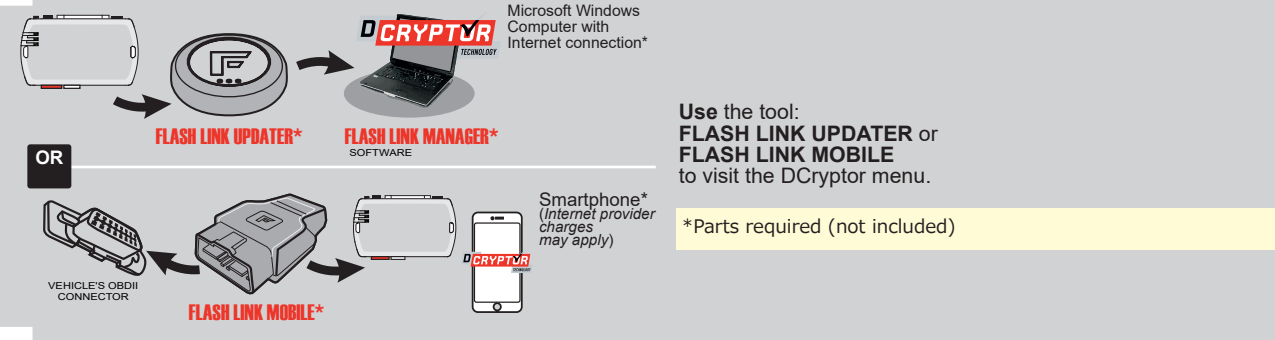

Microsoft Windows Computer with Internet connection*

FLASH LINK UPDATER* **FLASH LINK MANAGER***
SOFTWARE


OR

VEHICLE'S OBDII CONNECTOR **FLASH LINK MOBILE*** Smartphone*
(Internet provider charges may apply)

Use the tool: FLASH LINK UPDATER or FLASH LINK MOBILE to visit the DCRYPTOR menu.

***Parts required (not included)**

13

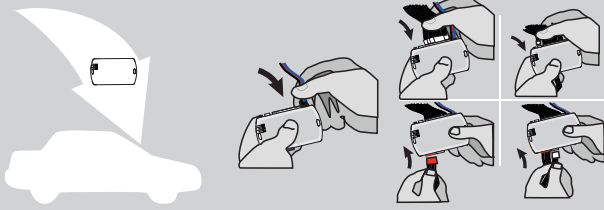

AFTER DCRYPTOR PROGRAMMING COMPLETED
Go back to the vehicle and **reconnect** the 4-Pin (Data-Link) connector and after, all the remaining connector.



The module is now programmed.



REMOTE STARTER / ALARM VERIFICATION PROCEDURE

Test the remote starter. Remote start the vehicle.

REMOTE STARTER FUNCTIONALITY |



All doors must be closed.



Remote start the vehicle.



Unlock the doors with either:

- The OEM remote
- The remote-starter remote
- Or the proximity remote



Enter the vehicle with the Intelligent Key.



The vehicle can now be put in to gear and driven.


If the vehicle is not unlocked with one of these conditions the remote-starter will shut down as soon as any door is opened.




THAR-GM6


THARNNESS INSTALLATION

ADDENDUM - SUGGESTED WIRING CONFIGURATION

VEHICLE	YEARS	Vehicle functions supported in this diagram (functional if equipped)												
		Immobilizer bypass	Lock	Unlock	Arm	Disarm	RAP Disable	Tachometer	Heated Seats	Door Status	Hand-Brake Status (Data-Link Only, Data-Link Seule-ment)	Foot-Brake Status	OEM Remote	
 PUSH START														
GMC														
Sierra 1500	Push-To-Start	2019-2020	•	•	•	•	•	•	•	•	•	•	•	•

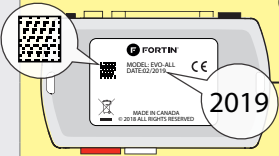	COMPATIBLE MODULE REQUIRED:	QR CODE ON THE LABEL MANUFACTURED AFTER: 2019	FIRMWARE VERSION	To add the firmware version and the options, use the FLASH LINK UPDATER or FLASH LINK MOBILE tool, sold separately.
			70.[40] GM MINIMUM	

IF THE VEHICLE IS NOT EQUIPPED WITH FUNCTIONAL HOOD PIN:	A11	OFF	Hood trigger (Output Status).
---	------------	------------	-------------------------------

	Program bypass option:	UNIT OPTION	DESCRIPTION
		C1	OEM Remote status (Lock/Unlock) monitoring
		D6	Push-to-Start

	ATTENTION!		DATE: XX-XX	E5	OFF	SPECIAL FUNCTIONS: BY DEFAULT DEACTIVATED
					ON	MANUFACTURED MODULES BETWEEN: 04/2018 TO 04/2019



Parts required (Not included)

- 1X 1Amp Diode
- 1X THAR-GM6

MANDATORY INSTALL

***HOOD PIN**



HOOD STATUS: THE HOOD PIN SWITCH MUST BE INSTALLED IF THE VEHICLE CAN BE REMOTE STARTED WITH THE HOOD OPEN, SET FUNCTION **A11** TO OFF.


A11	OFF
------------	------------

Notice: the installation of safety elements are mandatory. The hood pin is an essential security element and must be installed.

THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.

DESCRIPTION


BCM, Above Driver kick panel

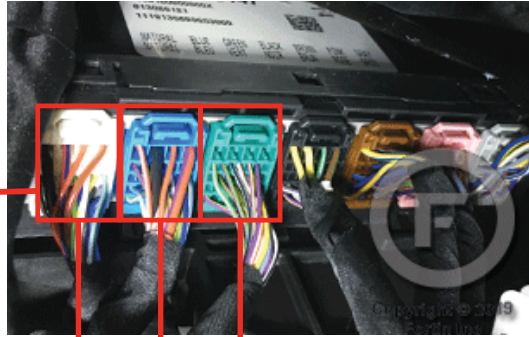


①




②

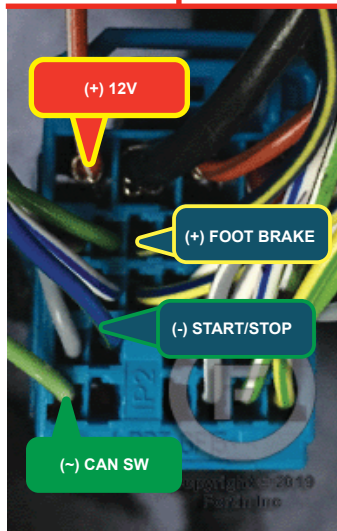


③

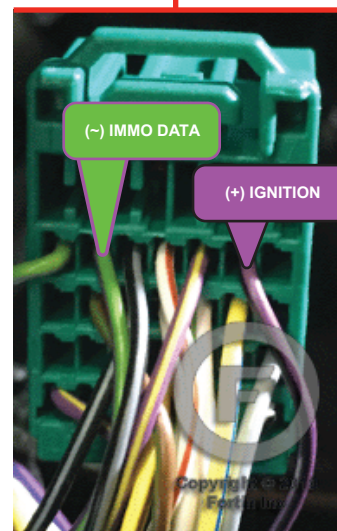

AUTOMATIC TRANSMISSION WIRING CONNECTION

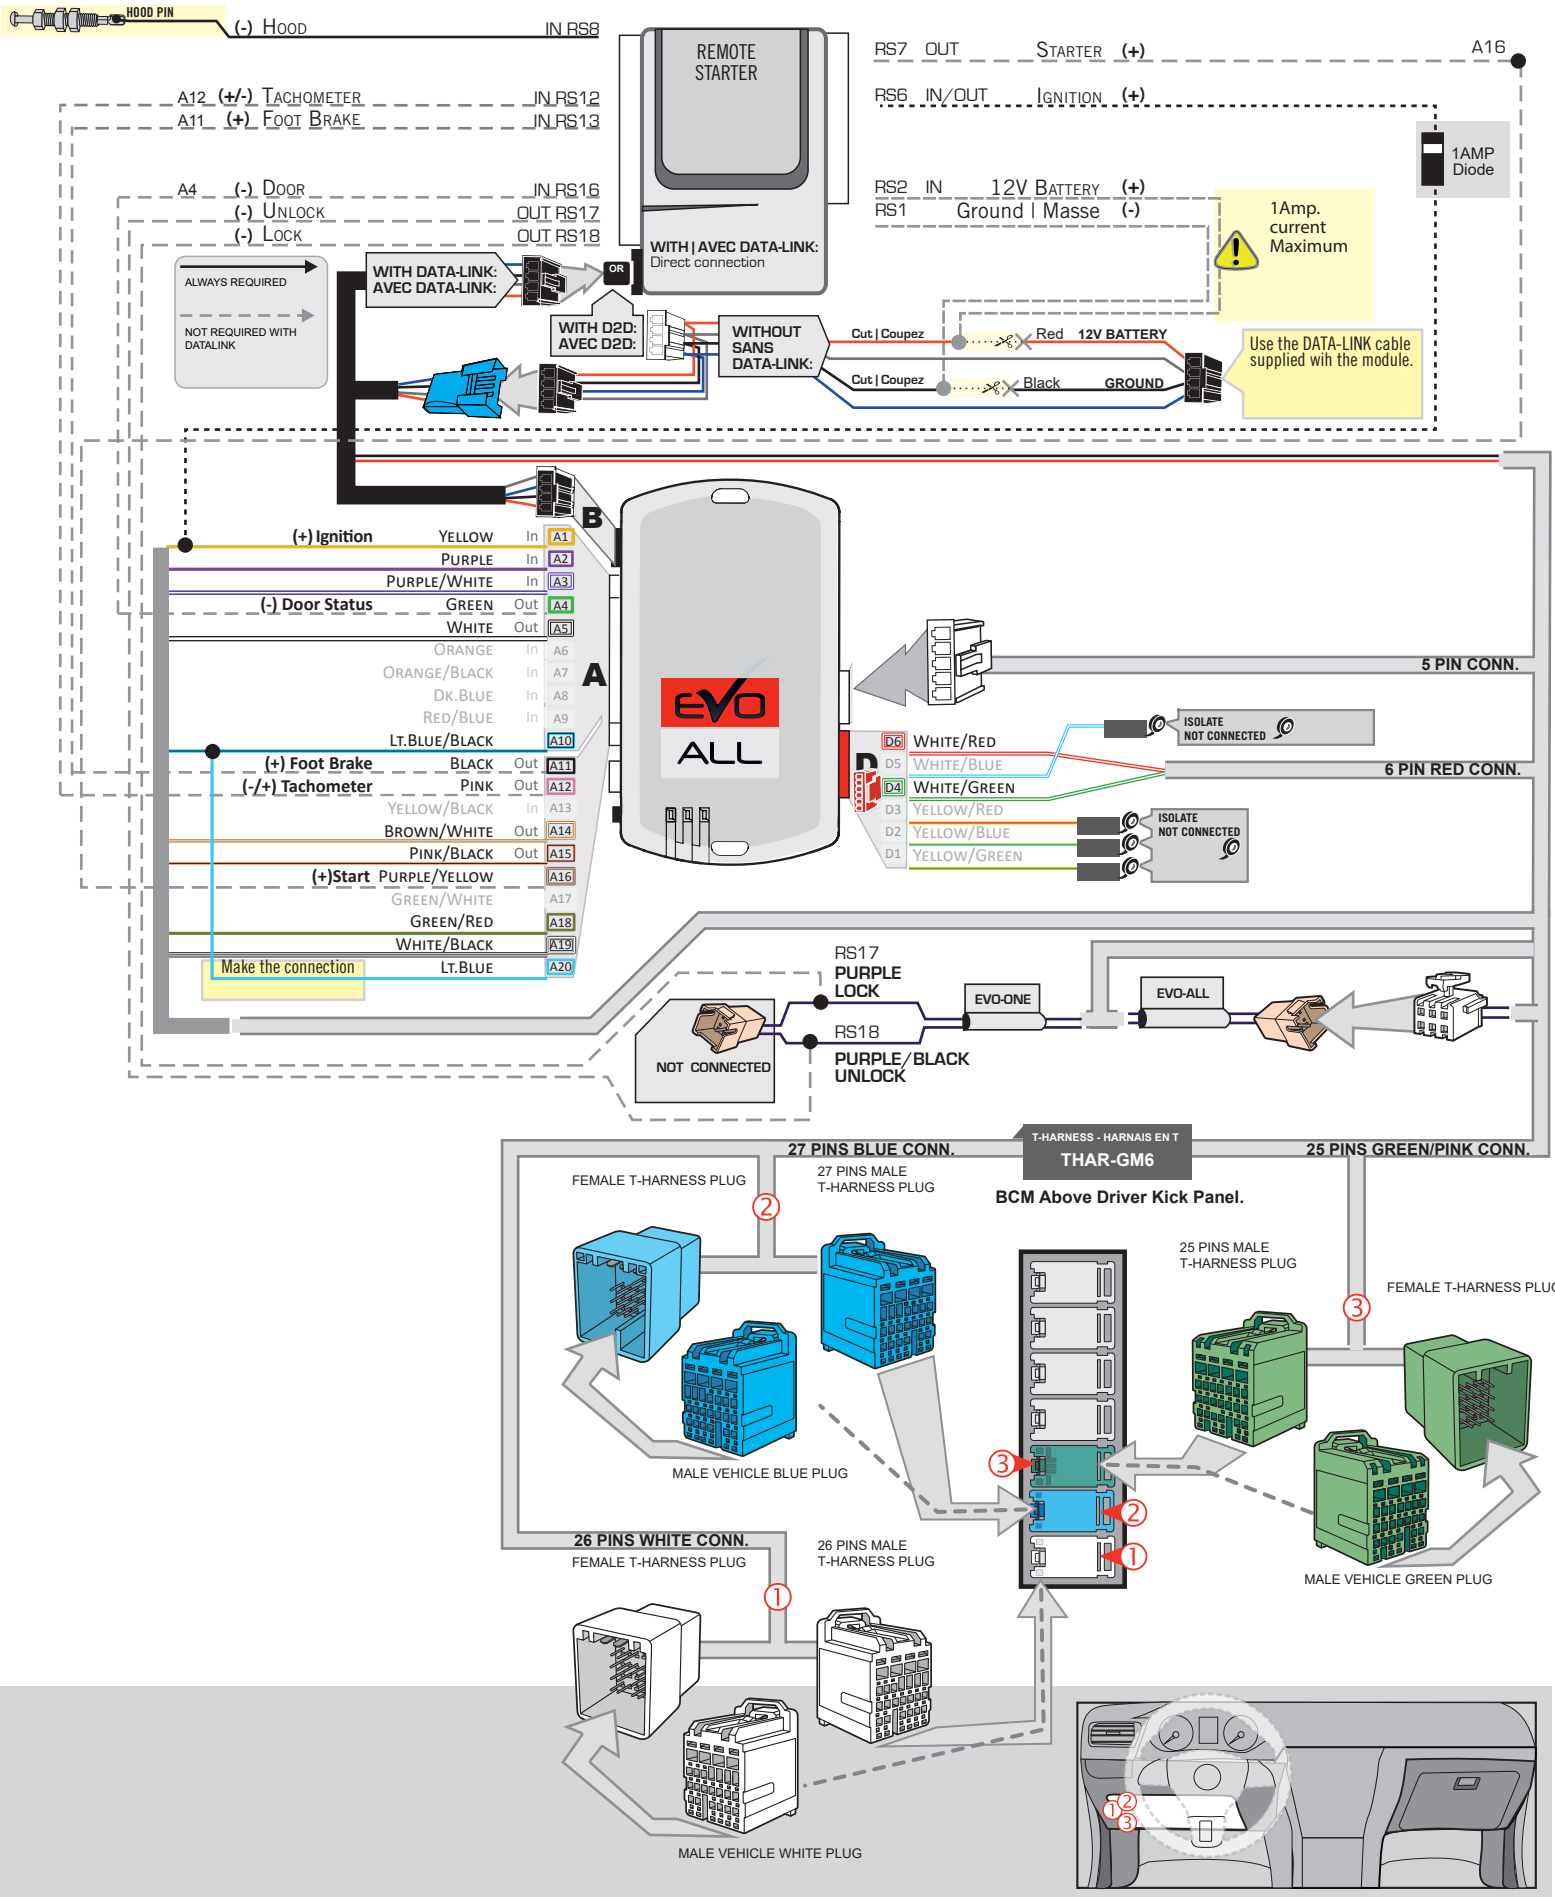

KEY BYPASS PROGRAMMING PROCEDURE 1/3

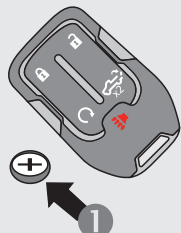



1 Remove the battery from the OEM remote.

2 Place the OEM remotes in to the center console.


1 Remove the battery from the OEM remote.

2 Place the transmitter in the cupholder

Refer to vehicle user guide for keyport location.

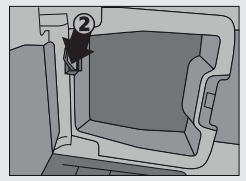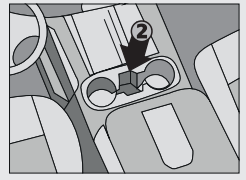
1

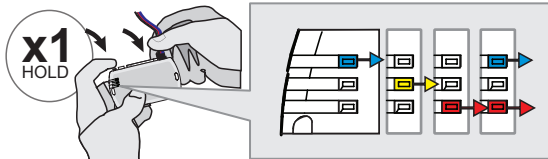

Press and hold the programming button:
Connect the 4-PIN Data-link harness (Black connector).


↳The Blue, Red, Yellow and Blue & Red LEDs will alternatively illuminate.

2

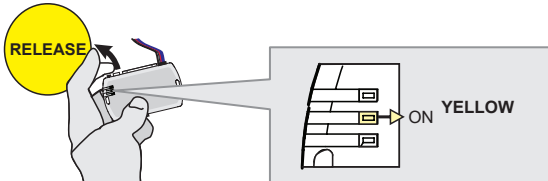


Release the programming button when the LED is YELLOW.

If the LED is not solid YELLOW disconnect the 4-Pin connector (Data-Link) and go back to step 1.

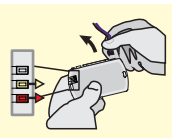


3

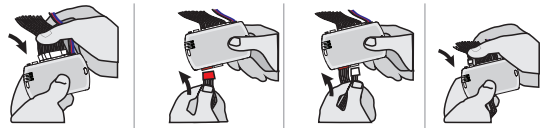

Insert the required remaining connectors.

4

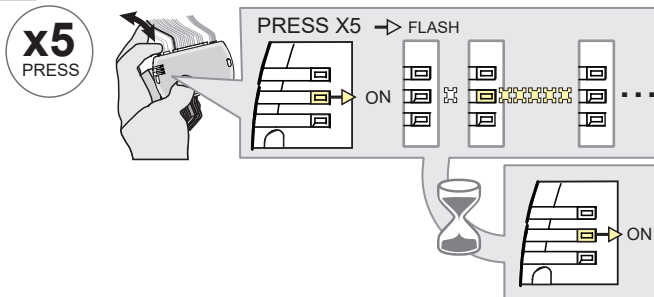


Press and release the programming button five (5x) times.

↳The YELLOW LED will flash 5 times each second.


↳WAIT for the YELLOW LED to turn ON solide.

 5



Open the driver door.

6

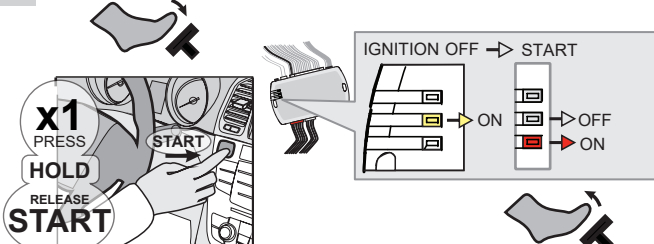

Press the foot-brake pedal.

Press the Push-to-Start button until the engine start.

Release the foot-brake pedal.

↳The RED LED will turn ON.
↳The YELLOW LED will turn OFF.


KEY BYPASS PROGRAMMING PROCEDURE 2/3

7




Press the Push-to-Start button until the engine turn OFF.

8

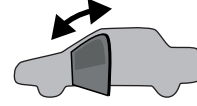

Close and open the driver door.

9

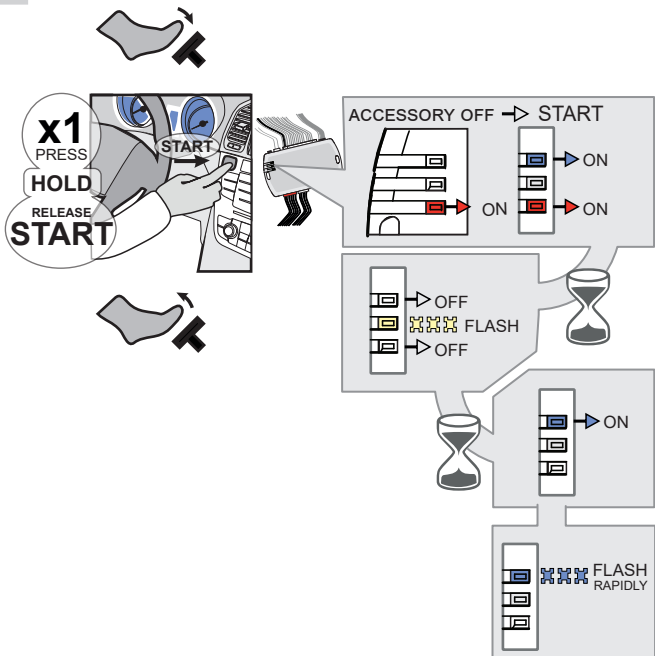


Press the foot-brake pedal.

Press the Push-to-Start button until the engine start.

Release the foot-brake pedal.

- ↳ The BLUE LED will turn ON.
- ↳ The BLUE LED will turn OFF. The RED LED will turn OFF.
- ↳ The YELLOW LED will flash rapidly
- ↳ The BLUE LED will turn ON.
- ↳ The BLUE LED will flash rapidly


10

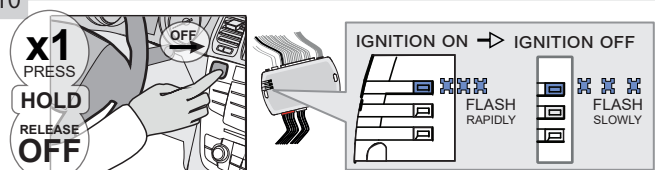

Press the Push-to-Start button until the engine turn OFF.


- ↳ The BLUE LED will flash slowly

11

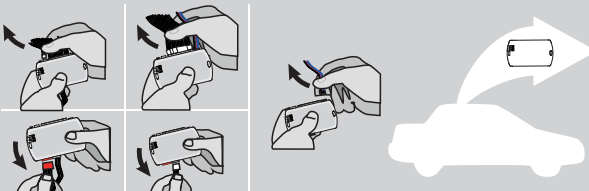

Disconnect all the connectors and after the Data-Link (4-pins) connector.

12


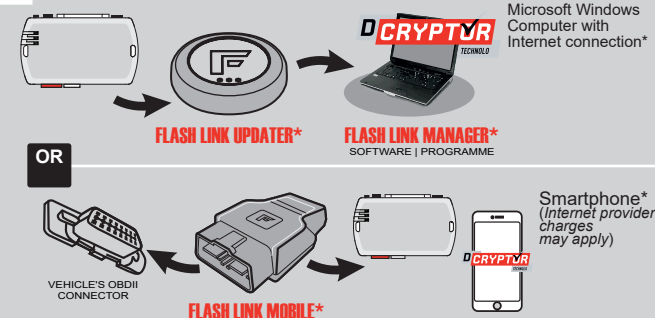


Use the tool: FLASH LINK UPDATER or FLASH LINK MOBILE to visit the DCRYPTOR menu.

***Parts required (not included)**

KEY BYPASS PROGRAMMING PROCEDURE 3/3

13

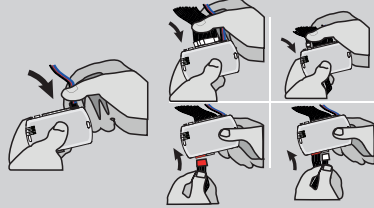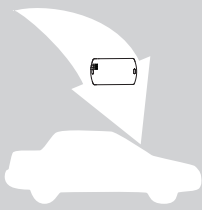

AFTER DCRYPTOR PROGRAMMING COMPLETED
Go back to the vehicle and **reconnect** the 4-Pin (Data-Link) connector and after, all the remaining connector.



The module is now programmed.



REMOTE STARTER / ALARM VERIFICATION PROCEDURE

Test the remote starter. **Remote start** the vehicle.

REMOTE STARTER FUNCTIONALITY



All doors must be closed.

Remote start the vehicle.



Press the Unlock button of the remote car starter.



Enter the vehicle with the Intelligent Access Key.



The vehicle can now be put in to gear and driven.



If the vehicle is not unlocked the module will shut down the remote-starter and the vehicle as soon as any door is opened.

THAR-GM6

THARNNESS INSTALLATION

ADDENDUM - SUGGESTED WIRING CONFIGURATION



Vehicle functions supported in this diagram (functional if eq

VEHICLE	YEARS	Immobilizer bypass	Lock	Unlock	Arm	Disarm	RAP Disable	Tachometer	Heated Seats	Door Status	Hand-Brake Status	Foot-Brake Status	OEM Remote Monitoring
CHEVROLET													
Silverado 2500	Push-To-Start	2020-2021	•	•	•	•	•	•	•	•	•	•	•
GMC													
Sierra 2500	Push-To-Start	2020-2021	•	•	•	•	•	•	•	•	•	•	•

FIRMWARE VERSION

70.[45]

GM MINIMUM

To add the firmware version and the options, use the **FLASH LINK UPDATER** or **FLASH LINK MOBILE** tool, sold separately.

	UNIT OPTION	DESCRIPTION
	C1	OEM Remote status (Lock/Unlock) monitoring
IF THE VEHICLE IS NOT EQUIPPED WITH FUNCTIONAL HOOD PIN:	A11 <input type="checkbox" value="OFF"/>	Hood trigger (Output Status).
	D6	Push-to-Start

ATTENTION!

DATE: XX-XX

SPECIAL FUNCTIONS:
BY DEFAULT DEACTIVATED

MANUFACTURED MODULES BETWEEN: 04/2018 TO 04/2019

Parts required (Not included)

1X 1Amp Diode

MANDATORY INSTALL

*HOOD PIN



HOOD STATUS: THE HOOD PIN SWITCH MUST BE INSTALLED IF THE VEHICLE CAN BE REMOTE STARTED WITH THE HOOD OPEN, SET FUNCTION A11 TO OFF.



OFF

Notice: the installation of safety elements are mandatory. The hood pin is an essential security element and must be installed.


THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.

DESCRIPTION

BCM

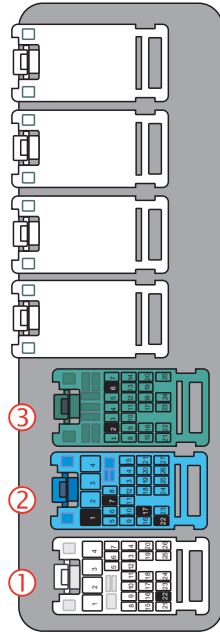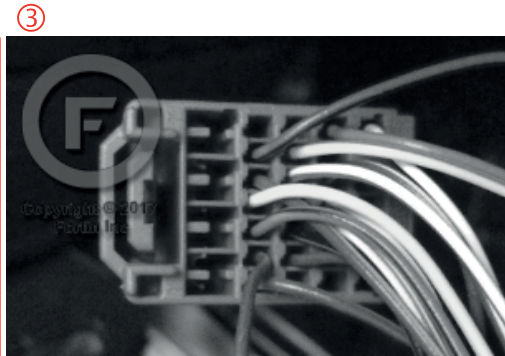


AUTOMATIC TRANSMISSION WIRING CONNECTION

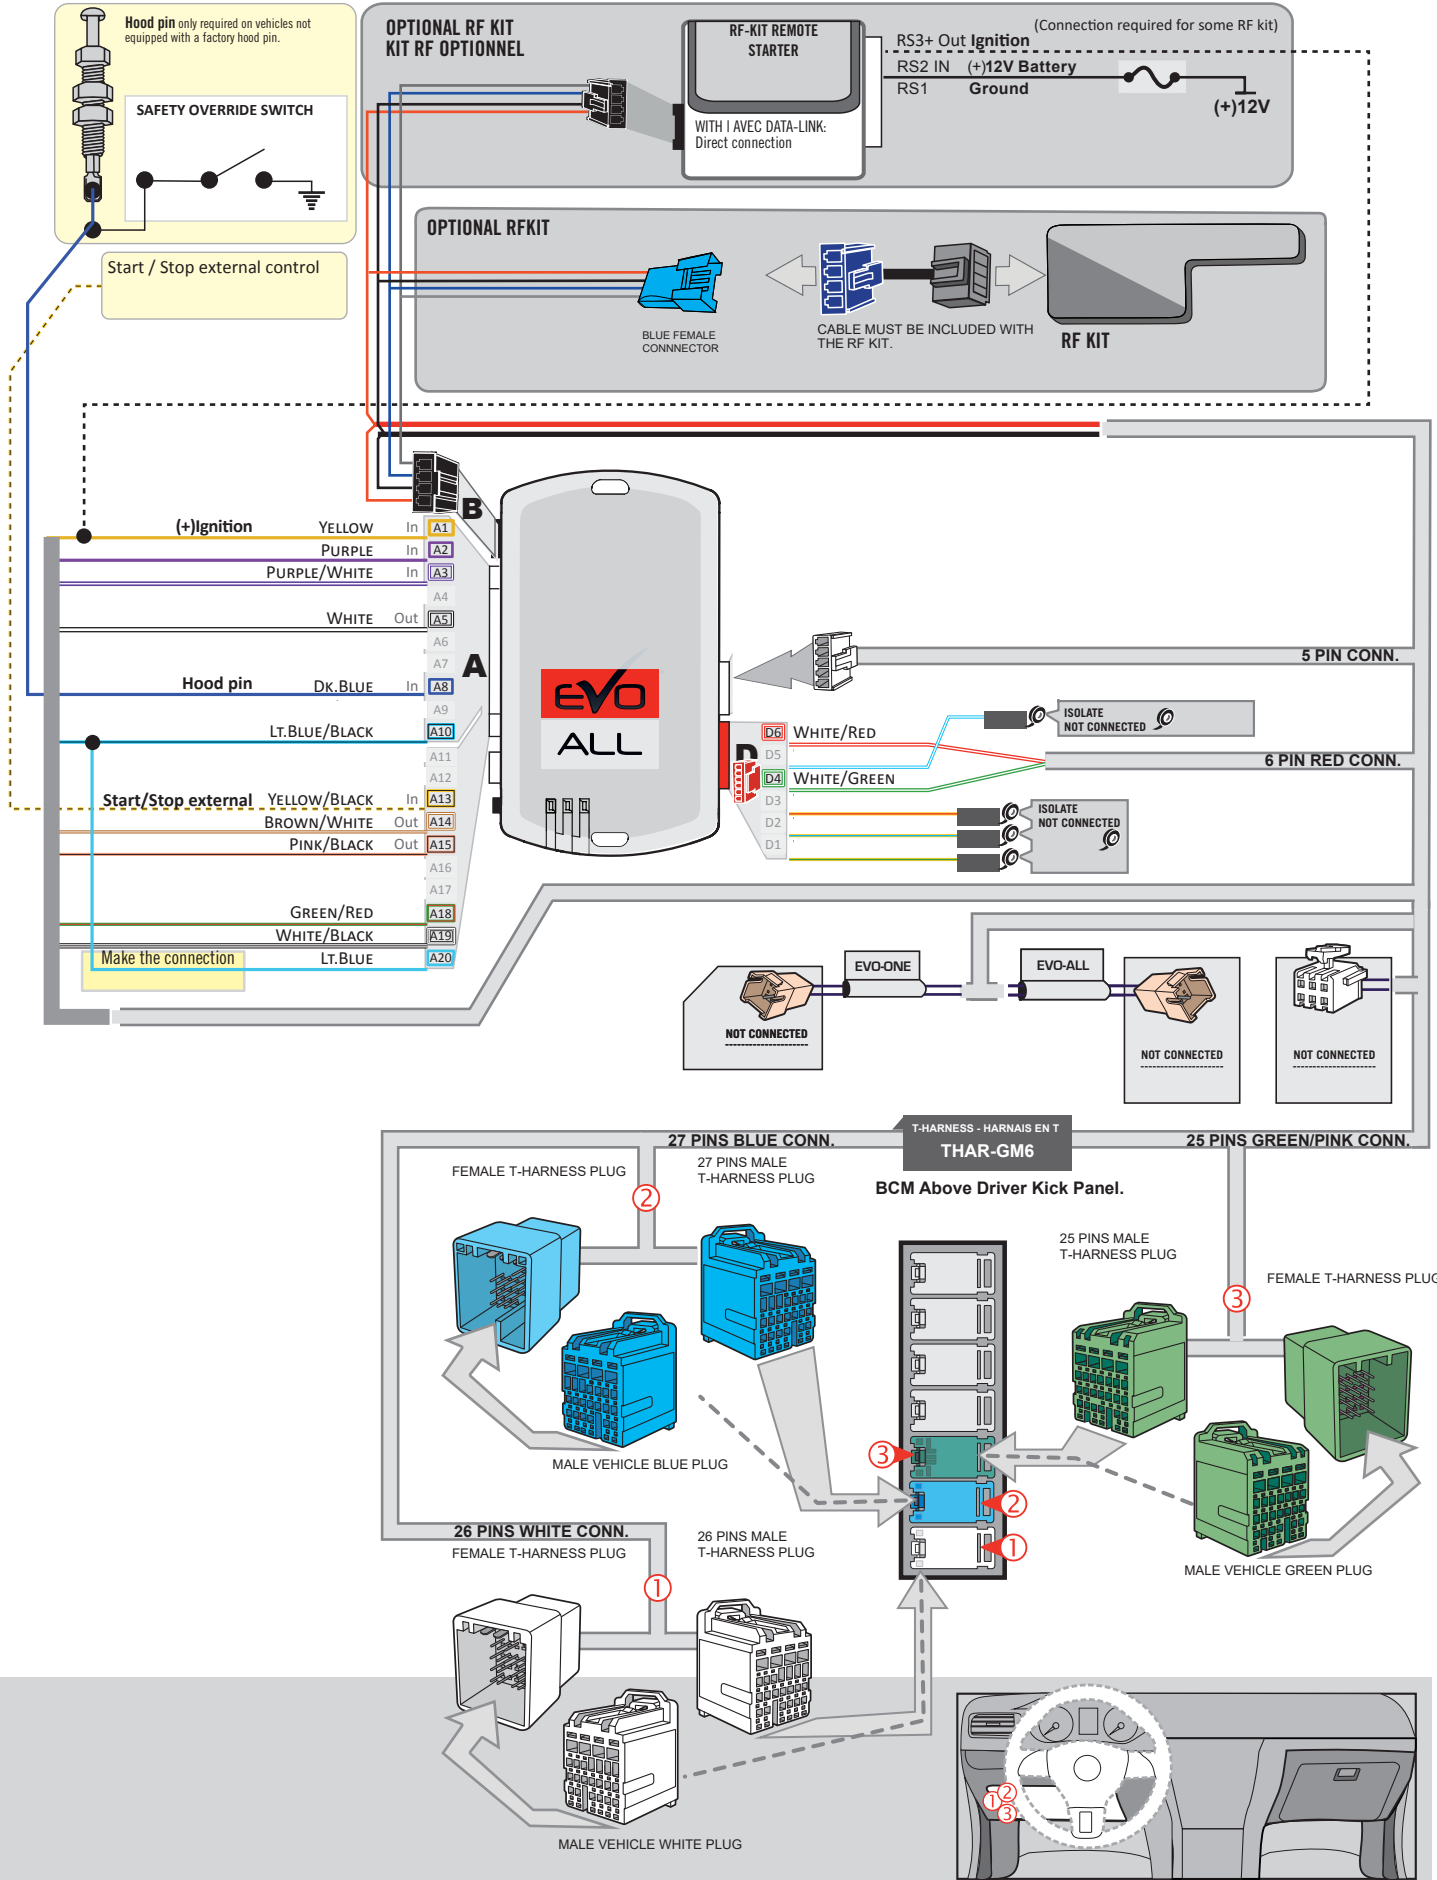


KEY BYPASS PROGRAMMING PROCEDURE 1/3

**SIERRA
SILVERADO**

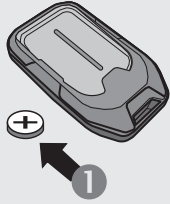


- 1** Remove the battery from the OEM remote.
- 2** Place the OEM remote in the middle part of the cup holder in the center console.

Refer to vehicle user guide for keyport location.

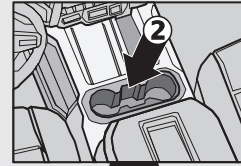


OR
OU

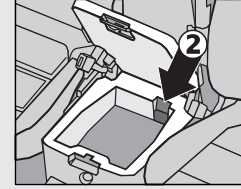

- 1** Remove the battery from the OEM remote.
- 2** Place the transmitter in the transmitter pocket, which is inside the **centre** console storage area.

Refer to vehicle user guide for keyport location.


1

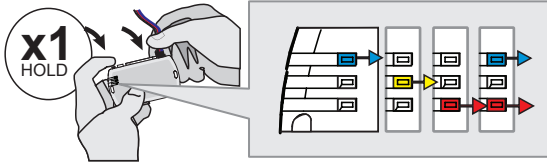

Press and hold the programming button:
Connect the 4-PIN Data-link harness (Black connector).


↳The Blue, Red, Yellow and Blue & Red LEDs will alternatively illuminate.

2

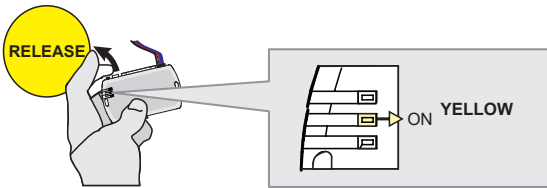


Release the programming button when the LED is **YELLOW**.

 If the LED is not solid **YELLOW** disconnect the 4-Pin connector (Data-Link) and go back to step 1.




3

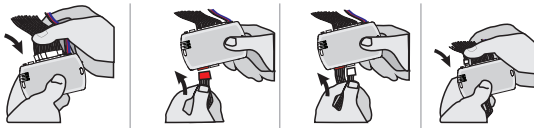

Insert the required remaining connectors.

4

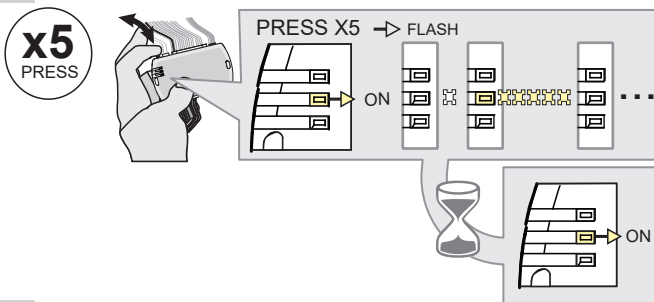


Press and release the programming button five (5x) times.

↳The **YELLOW LED** will flash 5 times each second.


↳**WAIT** for the **YELLOW LED** to turn **ON** solide.

 5



Open the driver door.

6

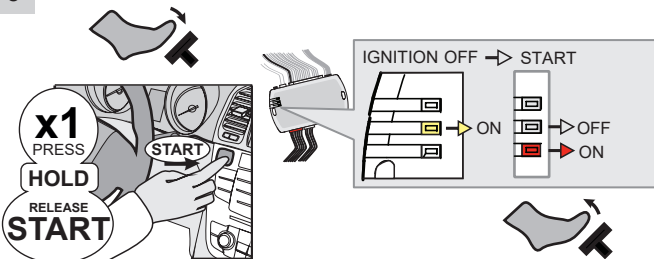

Press the foot-brake pedal.

Press the Push-to-Start button until the engine start.

Release the foot-brake pedal.

↳The **RED LED** will turn **ON**.
↳The **YELLOW LED** will turn **OFF**.


KEY BYPASS PROGRAMMING PROCEDURE 2/3 |

7




Press the Push-to-Start button until the engine turn OFF.

8

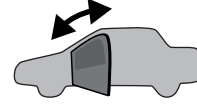

Close and open the driver door.

9

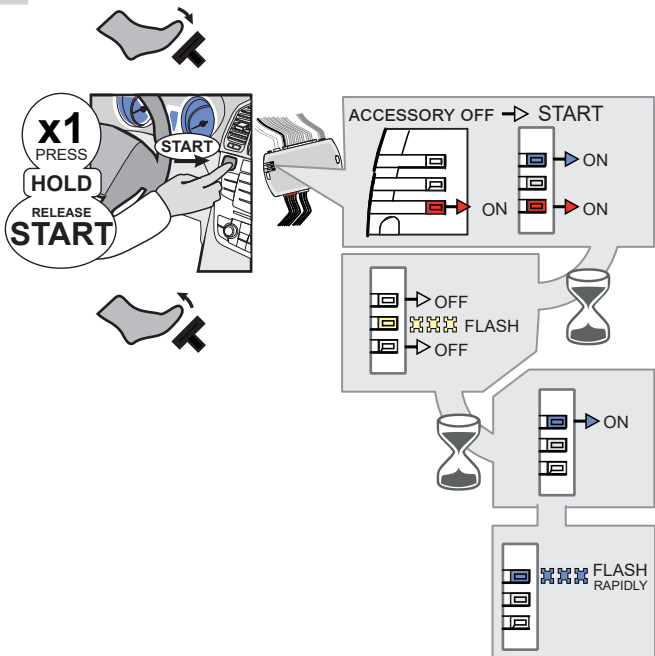


Press the foot-brake pedal.

Press the Push-to-Start button until the engine start.

Release the foot-brake pedal.

- ↳ The BLUE LED will turn ON.
- ↳ The BLUE LED will turn OFF. The RED LED will turn OFF.
- ↳ The YELLOW LED will flash rapidly
- ↳ The BLUE LED will turn ON.
- ↳ The BLUE LED will flash rapidly


10

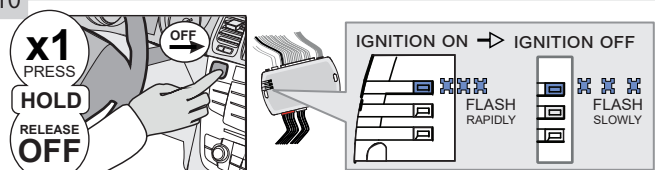

Press the Push-to-Start button until the engine turn OFF.


- ↳ The BLUE LED will flash slowly

11

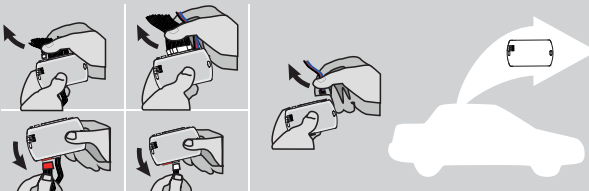

Disconnect all the connectors and after the Data-Link (4-pins) connector.

12

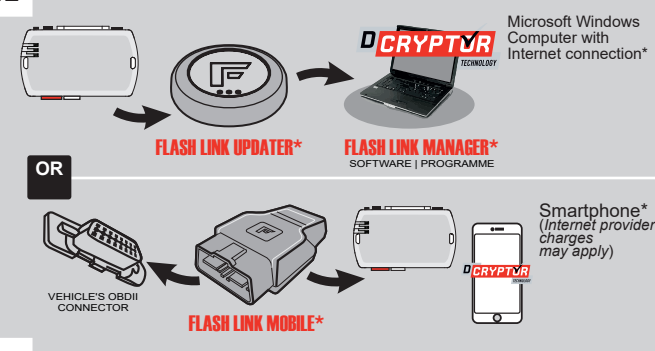

Microsoft Windows Computer with Internet connection*

FLASH LINK UPDATER* **FLASH LINK MANAGER***
SOFTWARE | PROGRAMME

OR



Smartphone* (Internet provider charges may apply)

FLASH LINK MOBILE*

Use the tool: FLASH LINK UPDATER or FLASH LINK MOBILE to visit the DCRYPTOR menu.

*Parts required (not included)

13

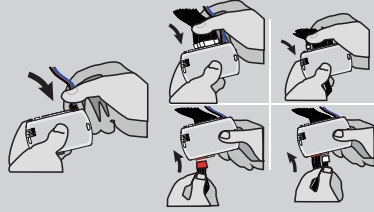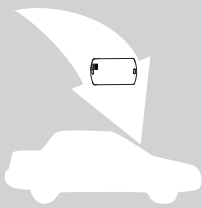

AFTER DCRYPTOR PROGRAMMING COMPLETED
Go back to the vehicle and **reconnect** the 4-Pin (Data-Link) connector and after, all the remaining connector.



The module is now programmed.



REMOTE STARTER / ALARM VERIFICATION PROCEDURE

Test the remote starter. Remote start the vehicle.

REMOTE STARTER FUNCTIONALITY |

 


All doors must be closed.


Remote start the vehicle.



Press the Unlock button of the remote car starter or the OEM remote.



Enter the vehicle with the Intelligent Access Key.

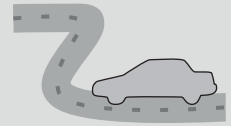

The vehicle can now be put in to gear and driven.




If the vehicle is not unlocked the module will shut down the remote-starter and the vehicle as soon as any door is opened.

THAR-GM6

**THARNNESS
INSTALLATION**

ADDENDUM - SUGGESTED WIRING CONFIGURATION

VEHICLE	YEARS	Vehicle functions supported in this diagram (functional if equipped)															
		Immobilizer bypass	Lock	Unlock	Arm	Disarm	RAP Disable	Tachometer	Heated Seats	Door Status	Hand-Brake Status (Data-Link Only, Data-Link Seule-ment)	Foot-Brake Status	OEM Remote				
CHEVROLET																	
Silverado 1500	Push-To-Start**	2019	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•




FIRMWARE VERSION


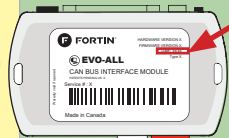
70.[41]


GM MINIMUM

To add the firmware version and the options, use the **FLASH LINK UPDATER** or **FLASH LINK MOBILE** tool, sold separately.

IF THE VEHICLE IS NOT EQUIPPED WITH FUNCTIONAL HOOD PIN:	A11	OFF	Hood trigger (Output Status).
---	------------	-----	-------------------------------

	Program bypass option:	UNIT OPTION	DESCRIPTION
		C1	OEM Remote status (Lock/Unlock) monitoring
		D6	Push-to-Start

	ATTENTION!	 <p>DATE: XX-XX</p>	E5	OFF	SPECIAL FUNCTIONS: BY DEFAULT DEACTIVATED
				ON	MANUFACTURED MODULES BETWEEN: 04/2018 TO 04/2019



Parts required (Not included)


1X 1Amp Diode

1X THAR-GM6

MANDATORY INSTALL	<p>*HOOD PIN</p> <p>HOOD STATUS: THE HOOD PIN SWITCH MUST BE INSTALLED IF THE VEHICLE CAN BE REMOTE STARTED WITH THE HOOD OPEN, SET FUNCTION A11 TO OFF.</p>	A11	OFF	<p>Notice: the installation of safety elements are mandatory. The hood pin is an essential security element and must be installed.</p>	<p>THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.</p>
-------------------	---	------------	-----	---	---

DESCRIPTION


BCM, Above Driver kick panel

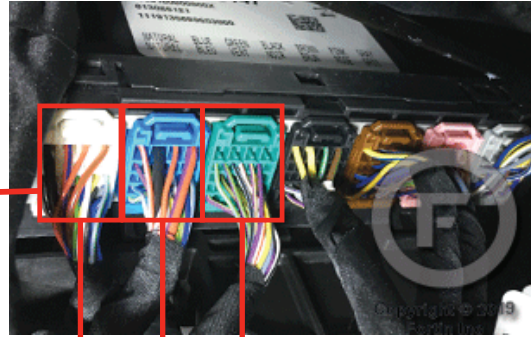


①




②

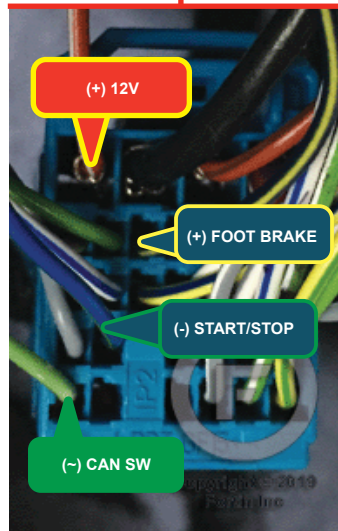



③

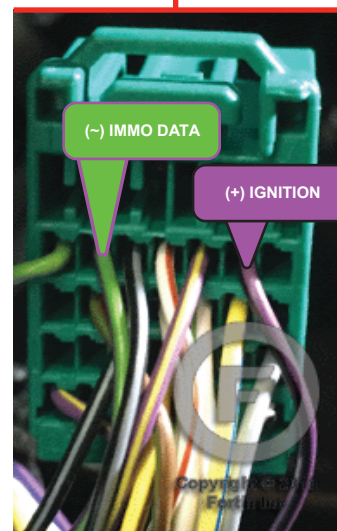

AUTOMATIC TRANSMISSION WIRING CONNECTION

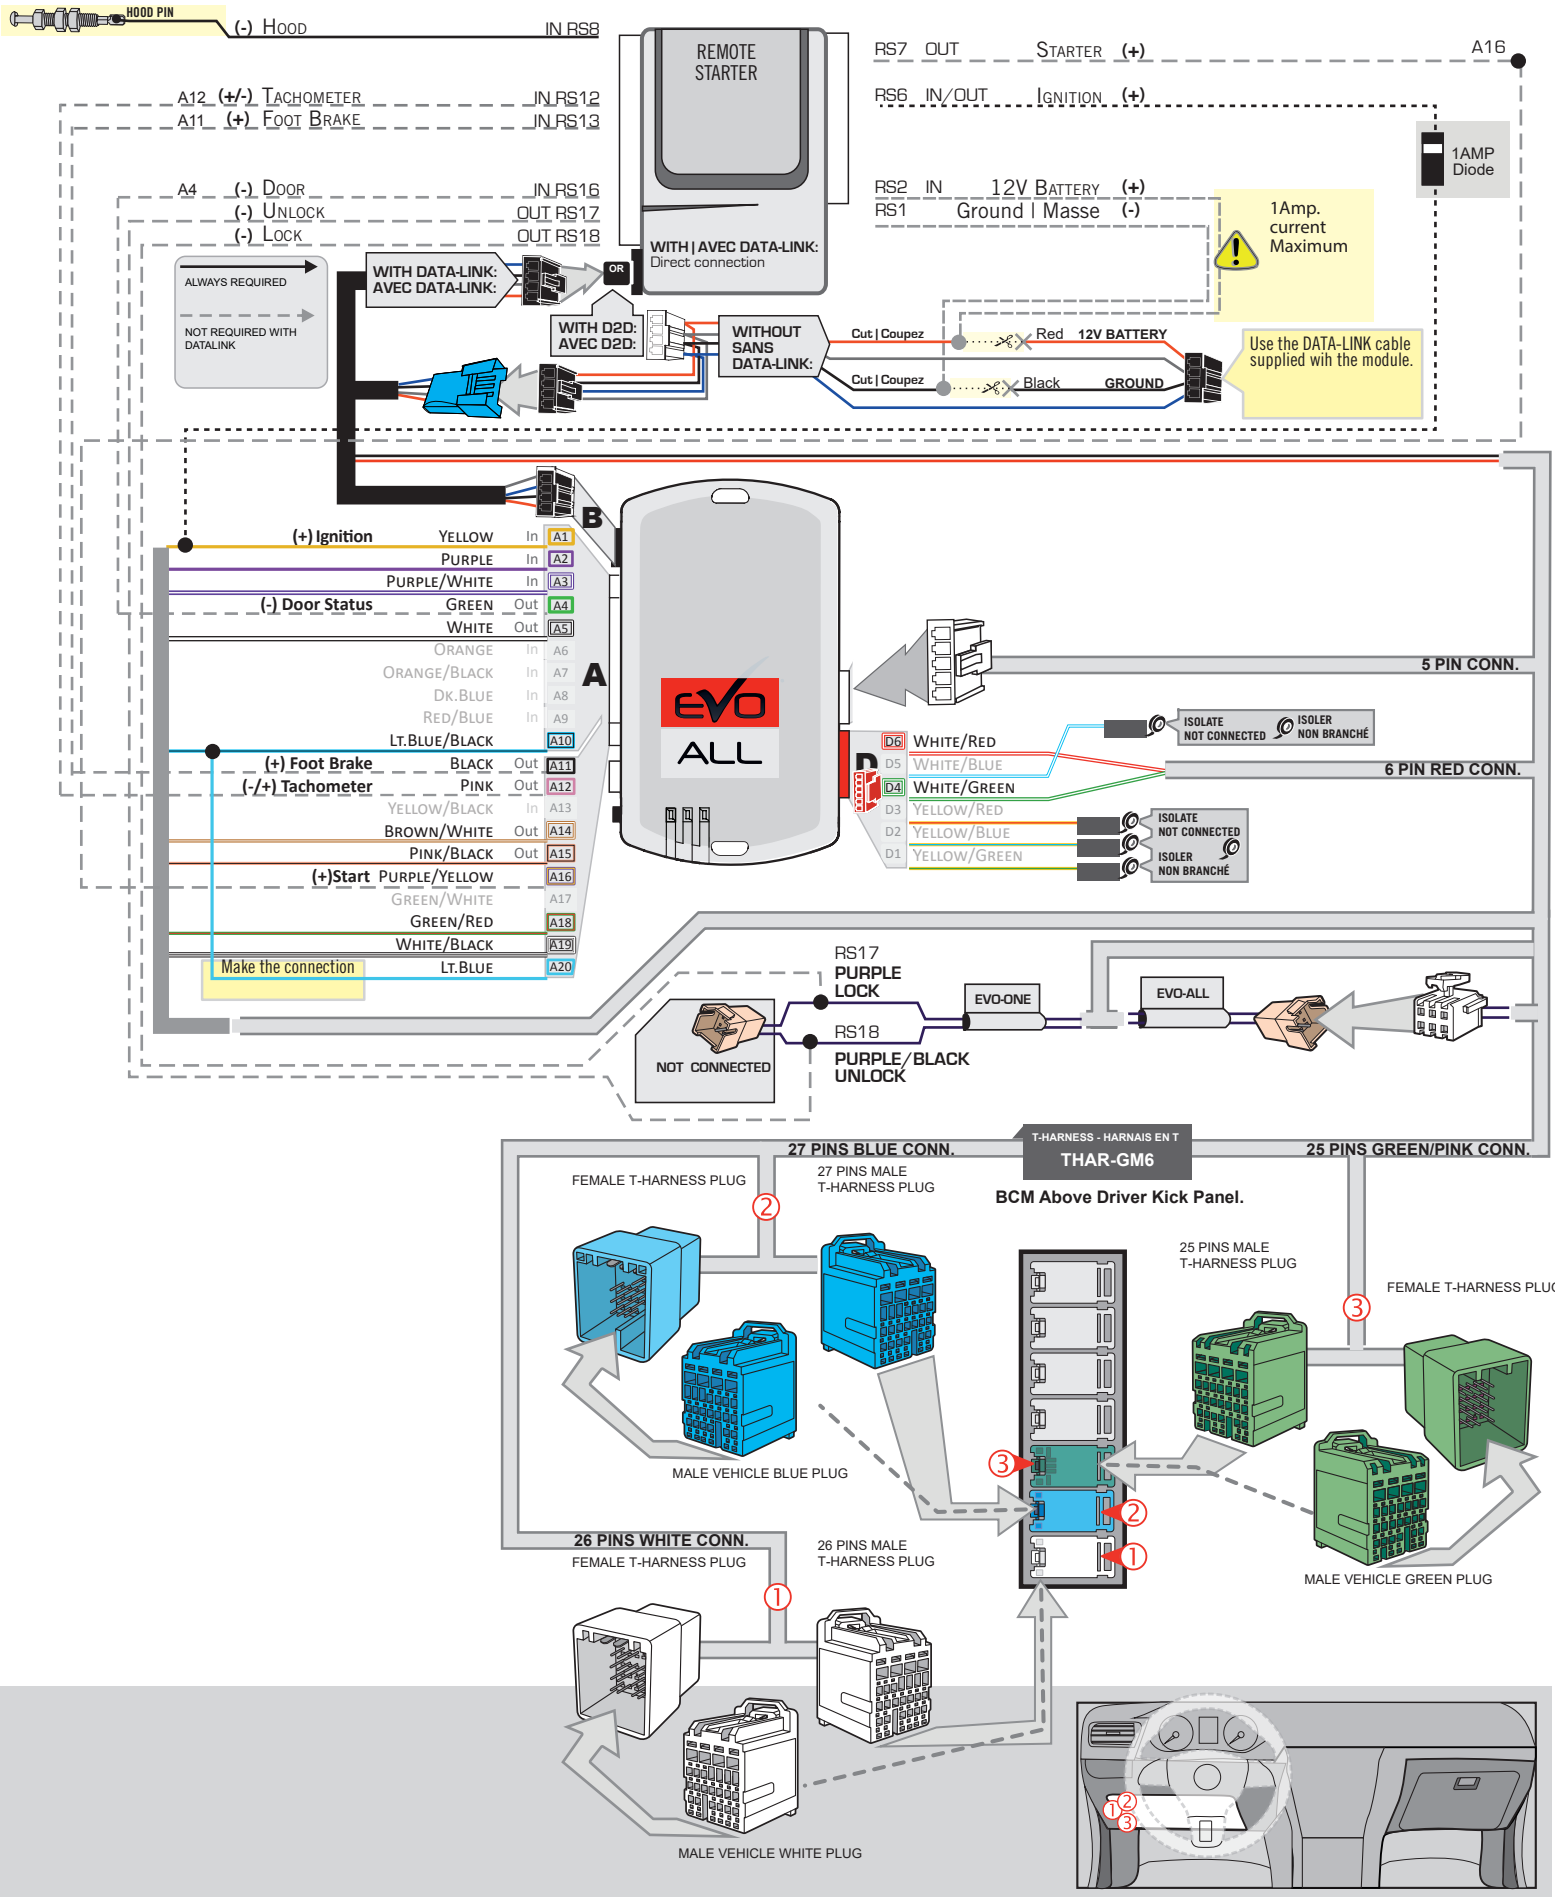


KEY BYPASS PROGRAMMING PROCEDURE 1/3

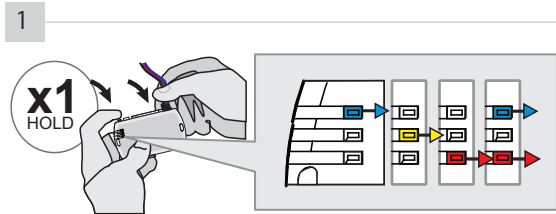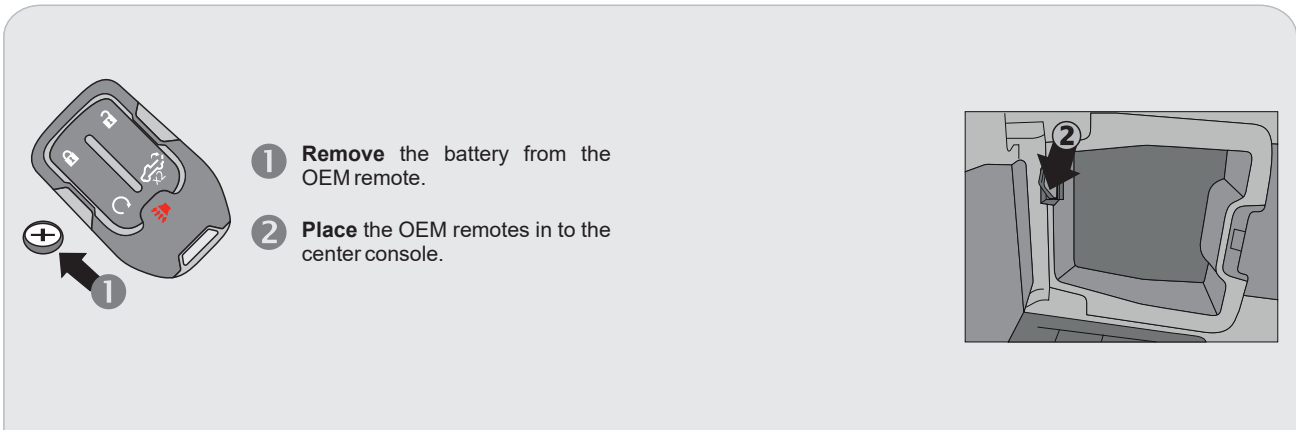



Press and hold the programming button:
Connect the 4-PIN Data-link harness (Black connector).

↳The Blue, Red, Yellow and Blue & Red LEDs will alternatively illuminate.

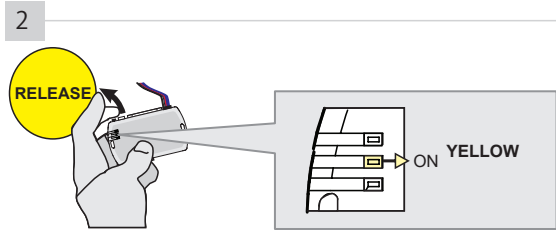


Release the programming button when the LED is YELLOW.

If the LED is not solid YELLOW disconnect the 4-Pin connector (Data-Link) and go back to step 1.

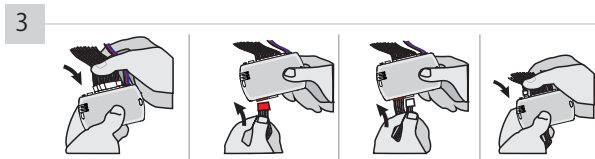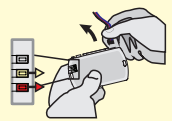


Insert the required remaining connectors.

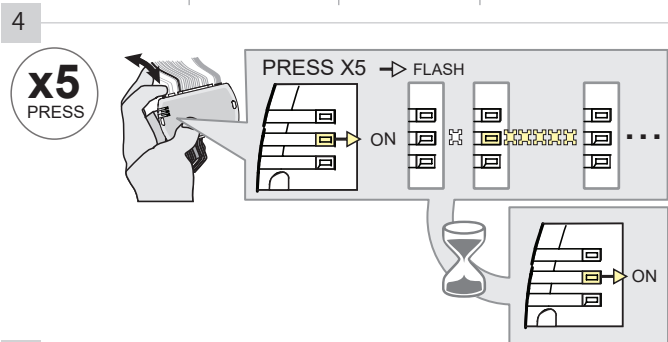


Press and release the programming button five (5x) times.

↳The YELLOW LED will flash 5 times each second.

↳**WAIT** for the YELLOW LED to turn ON solide.

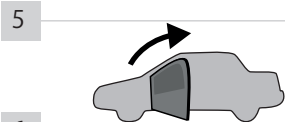

Open the driver door.

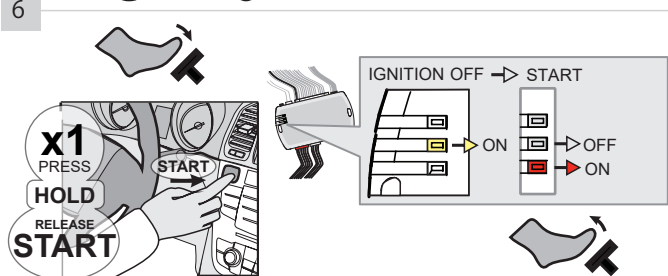

Press the foot-brake pedal.

Press the Push-to-Start button until the engine start.

Release the foot-brake pedal.

↳The RED LED will turn ON.
 ↳The YELLOW LED will turn OFF.


KEY BYPASS PROGRAMMING PROCEDURE 2/3

7




Press the Push-to-Start button until the engine turn OFF.

8

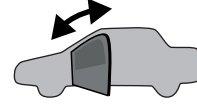

Close and open the driver door.

9

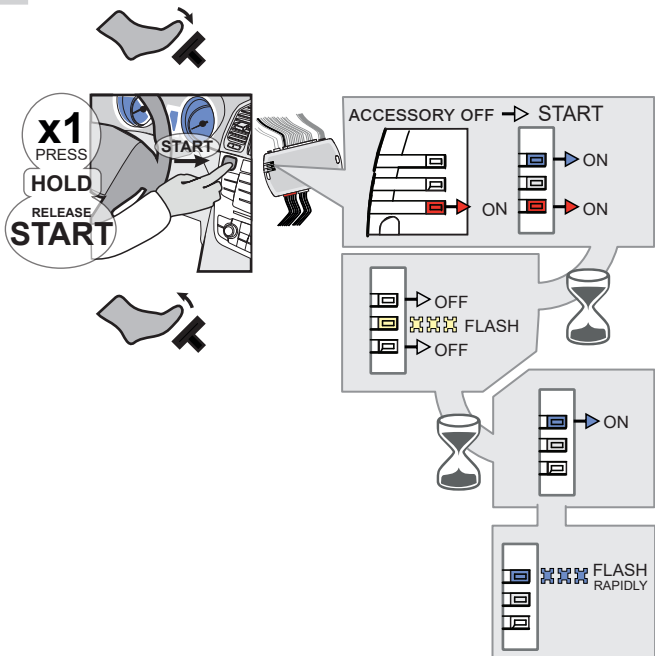


Press the foot-brake pedal.

Press the Push-to-Start button until the engine start.

Release the foot-brake pedal.

- ↳ The BLUE LED will turn ON.
- ↳ The BLUE LED will turn OFF. The RED LED will turn OFF.
- ↳ The YELLOW LED will flash rapidly
- ↳ The BLUE LED will turn ON.
- ↳ The BLUE LED will flash rapidly

10

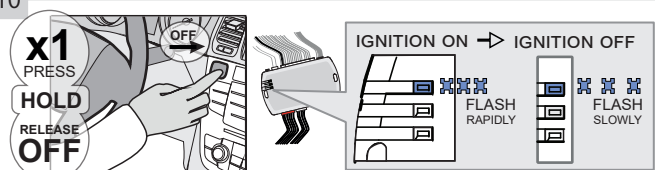

Press the Push-to-Start button until the engine turn OFF.


- ↳ The BLUE LED will flash slowly

11



Disconnect all the connectors and after the Data-Link (4-pins) connector.

12


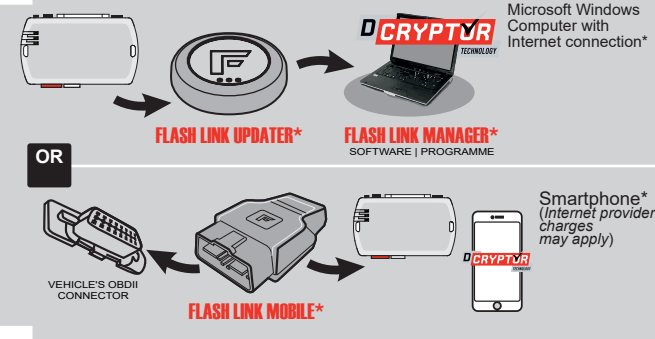


Use the tool: FLASH LINK UPDATER or FLASH LINK MOBILE to visit the DCRYPTOR menu.

*Parts required (not included)

KEY BYPASS PROGRAMMING PROCEDURE 3/3

13

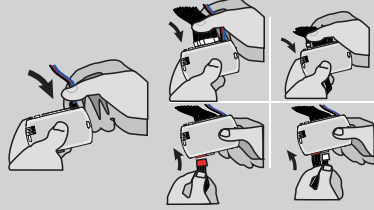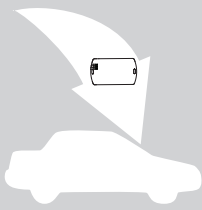

AFTER DCRYPTOR PROGRAMMING COMPLETED
Go back to the vehicle and **reconnect** the 4-Pin (Data-Link) connector and after, all the remaining connector.



The module is now programmed.



REMOTE STARTER / ALARM VERIFICATION PROCEDURE

Test the remote starter. Remote start the vehicle.

REMOTE STARTER FUNCTIONALITY



All doors must be closed.

Remote start the vehicle.



Press the Unlock button of the remote car starter.



Enter the vehicle with the Intelligent Access Key.



The vehicle can now be put in to gear and driven.



If the vehicle is not unlocked the module will shut down the remote-starter and the vehicle as soon as any door is opened.

THAR-GM6

THARNNESS INSTALLATION

ADDENDUM - SUGGESTED WIRING CONFIGURATION

VEHICLE	YEARS	Vehicle functions supported in this diagram (functional if equipped)													
		Immobilizer bypass	Lock	Unlock	Arm	Disarm	Trunk (open)	RAP Disable	Tachometer	Heated Seats	Door Status	Trunk Status (Data-Link Only, Data-Link Seule-ment)	Hand-Brake Status (Data-Link Only, Data-Link Seule-ment)	Foot-Brake Status	OEM Remote Monitoring
CHEVROLET															
Sonic	Push-To-Start	2017-2018	•	•	•	•	•	•	•	•	•	•	•	•	•
Spark	Push-To-Start	2016-2021	•	•	•	•	•	•	•	•	•	•	•	•	•

FIRMWARE VERSION

70.[45]

GM MINIMUM

To add the firmware version and the options, use the **FLASH LINK UPDATER** or **FLASH LINK MOBILE** tool, sold separately.

	UNIT OPTION		DESCRIPTION
<p>Program bypass option:</p>	C1		OEM Remote status (Lock/Unlock) monitoring
	IF THE VEHICLE IS NOT EQUIPPED WITH FUNCTIONAL HOOD PIN:		
	A11	OFF	Hood trigger (Output Status).
	D6		Push-to-Start

ATTENTION!

DATE: XX-XX

E5

SPECIAL FUNCTIONS: BY DEFAULT DEACTIVATED

OFF

ON

MANUFACTURED MODULES BETWEEN: 04/2018 TO 04/2019

Parts required (Not included)

1X 1Amp Diode

MANDATORY INSTALL

*HOOD PIN



HOOD STATUS: THE HOOD PIN SWITCH MUST BE INSTALLED IF THE VEHICLE CAN BE REMOTE STARTED WITH THE HOOD OPEN, SET FUNCTION A11 TO OFF.

A11


OFF

Notice: the installation of safety elements are mandatory. The hood pin is an essential security element and must be installed.


THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.

DESCRIPTION



BCM

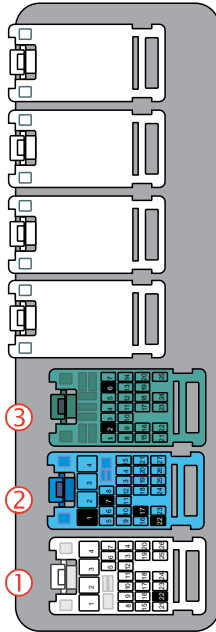

③

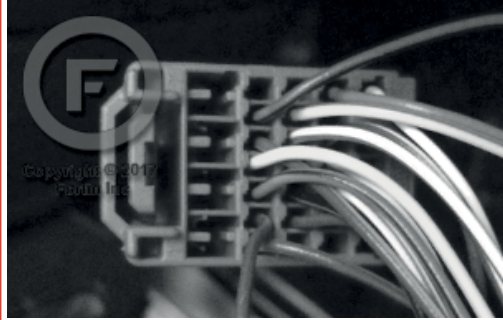


②

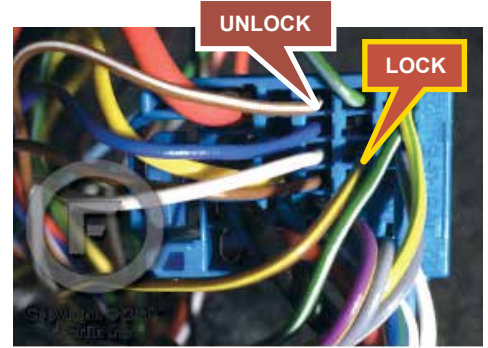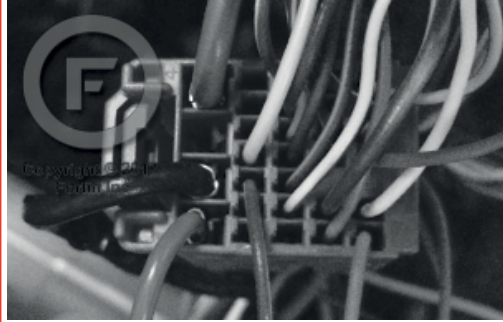

①



AUTOMATIC TRANSMISSION WIRING CONNECTION

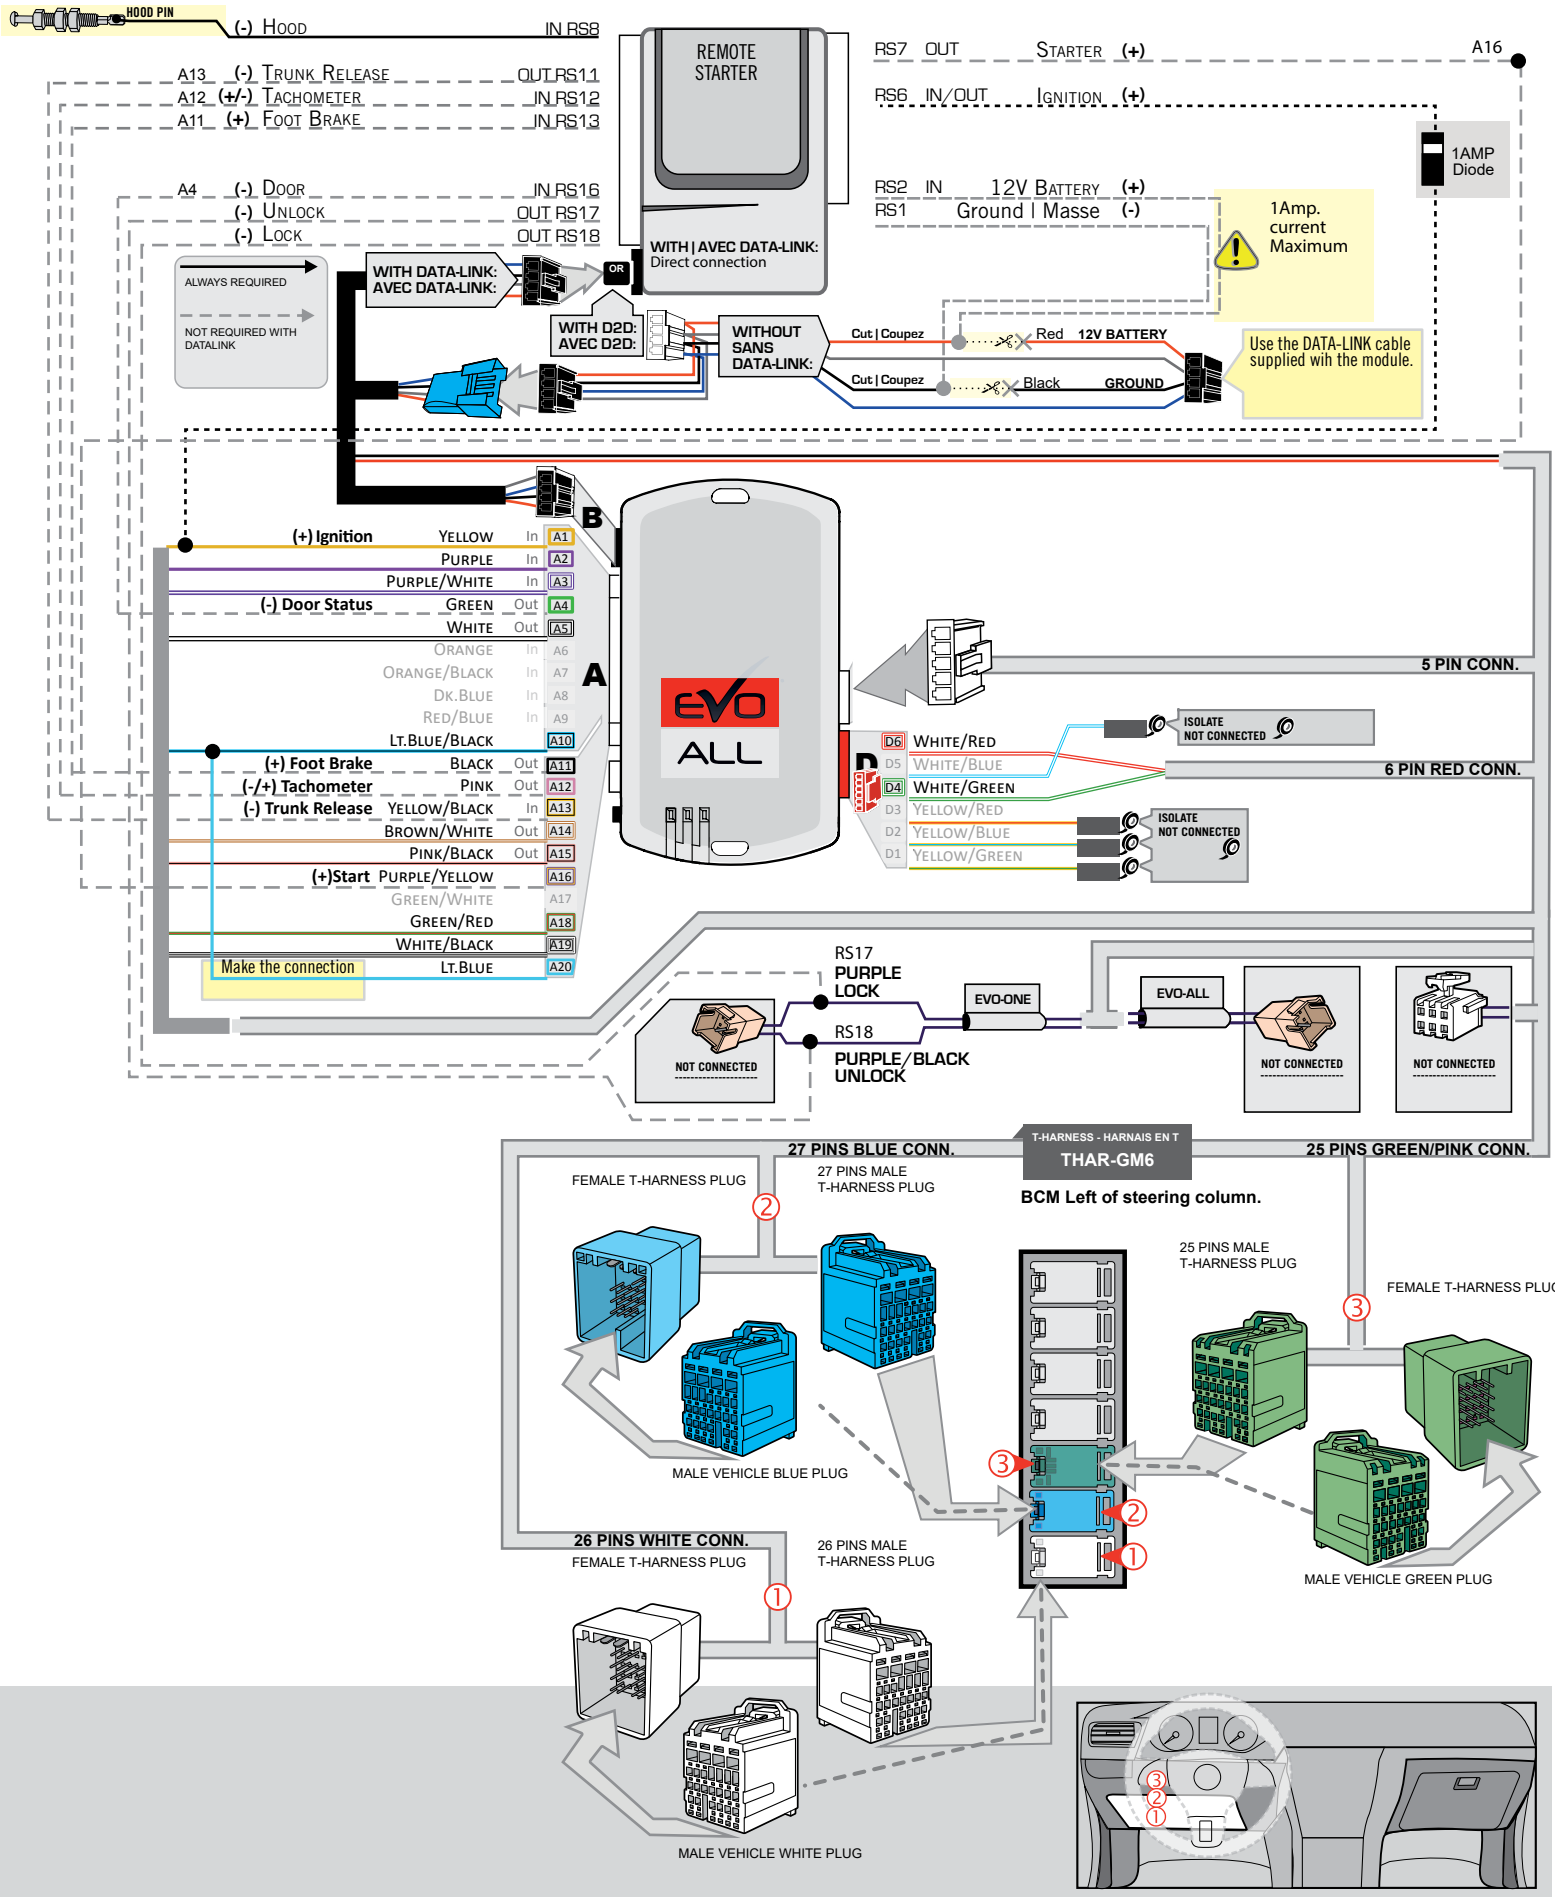


KEY BYPASS PROGRAMMING PROCEDURE 1/3

SONIC




- 1** Remove the battery from the OEM remote.
- 2** Place the OEM remote in the front cup holder in the center console.
Refer to vehicle user guide for keyport location.

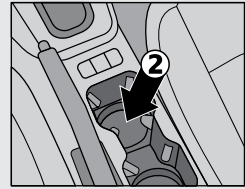


SPARK

- 1** Remove the battery from the OEM remote.
- 2** Place the transmitter in the transmitter pocket, which is inside the centre console storage area.
Refer to vehicle user guide for keyport location.

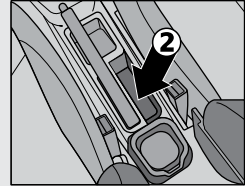


1

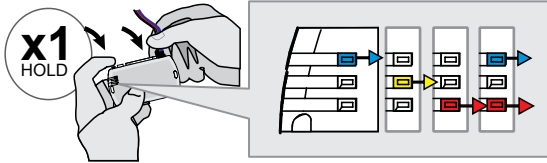

Press and hold the programming button:
Connect the 4-PIN Data-link harness (Black connector).


↳The Blue, Red, Yellow and Blue & Red LEDs will alternatively illuminate.

2

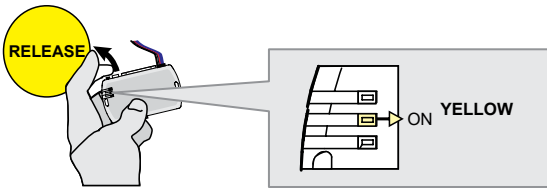


Release the programming button when the LED is YELLOW.

 If the LED is not solid YELLOW disconnect the 4-Pin connector (Data-Link) and go back to step 1.




3

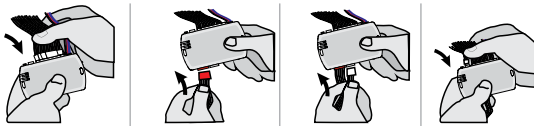

Insert the required remaining connectors.

4

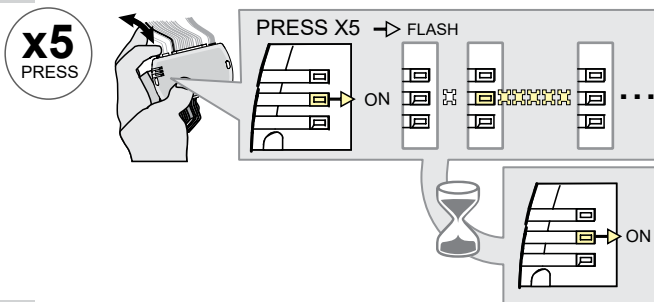


Press and release the programming button five (5x) times.

↳The YELLOW LED will flash 5 times each second.


↳**WAIT** for the YELLOW LED to turn ON solide.

 5



Open the driver door.

6

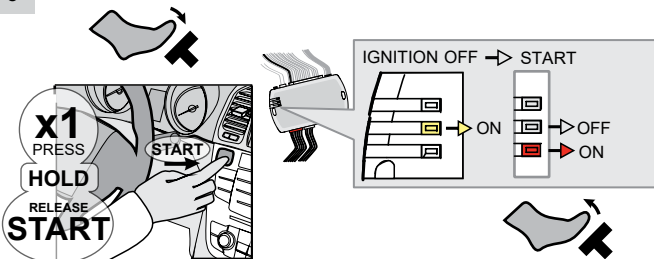

Press the foot-brake pedal.

Press the Push-to-Start button until the engine start.

Release the foot-brake pedal.

↳The RED LED will turn ON.
↳The YELLOW LED will turn OFF.


KEY BYPASS PROGRAMMING PROCEDURE 2/3

7




Press the Push-to-Start button until the engine turn OFF.

8

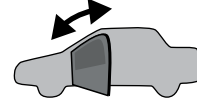

Close and open the driver door.

9

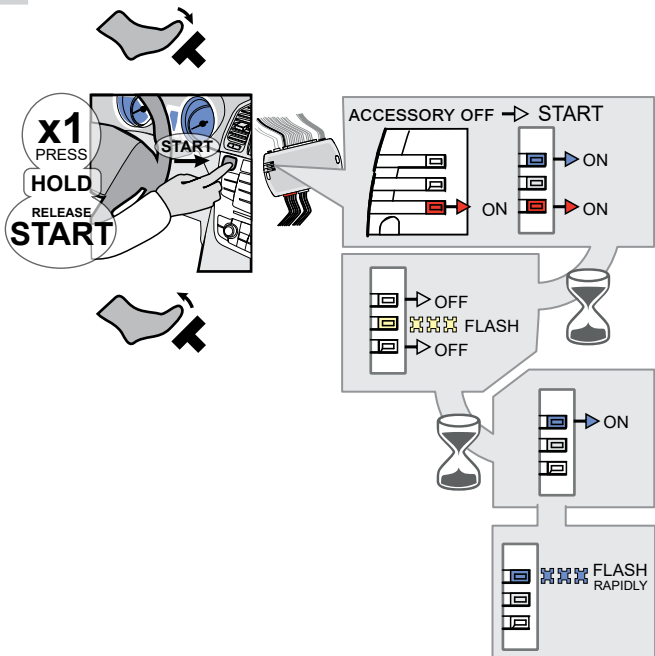


Press the foot-brake pedal.

Press the Push-to-Start button until the engine start.

Release the foot-brake pedal.

- ↳ The BLUE LED will turn ON.
- ↳ The BLUE LED will turn OFF. The RED LED will turn OFF.
- ↳ The YELLOW LED will flash rapidly
- ↳ The BLUE LED will turn ON.
- ↳ The BLUE LED will flash rapidly


10

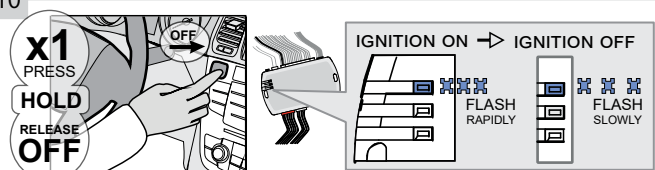

Press the Push-to-Start button until the engine turn OFF.


- ↳ The BLUE LED will flash slowly

11

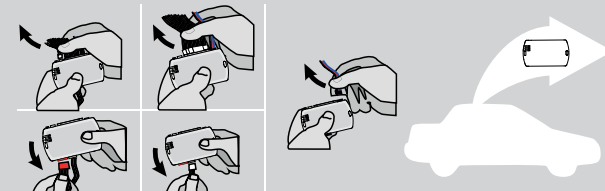

Disconnect all the connectors and after the Data-Link (4-pins) connector.

12


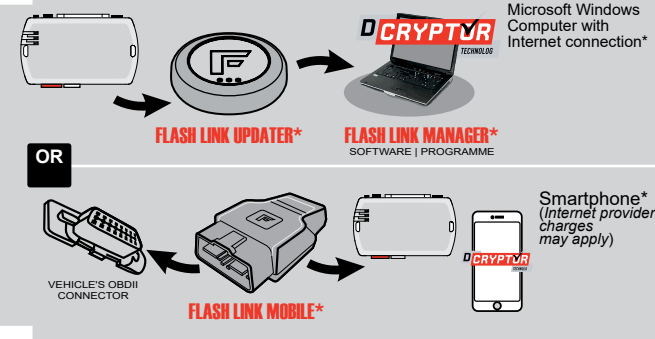


Use the tool: FLASH LINK UPDATER or FLASH LINK MOBILE to visit the DCryptor menu.

***Parts required (not included)**

KEY BYPASS PROGRAMMING PROCEDURE 3/3

13

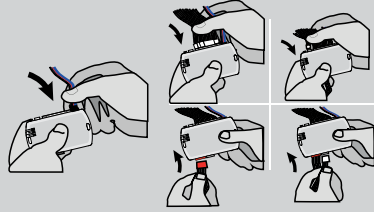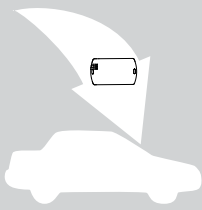

AFTER DCRYPTOR PROGRAMMING COMPLETED
Go back to the vehicle and **reconnect** the 4-Pin (Data-Link) connector and after, all the remaining connector.



The module is now programmed.



REMOTE STARTER / ALARM VERIFICATION PROCEDURE

Test the remote starter. Remote start the vehicle.

REMOTE STARTER FUNCTIONALITY

 


All doors must be closed.


Remote start the vehicle.



Press the Unlock button of the remote car starter or the OEM remote.



Enter the vehicle with the Intelligent Access Key.

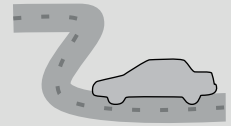

The vehicle can now be put in to gear and driven.



If the vehicle is not unlocked the module will shut down the remote-starter and the vehicle as soon as any door is opened.

THAR-GM6


THARNESS INSTALLATION

ADDENDUM - SUGGESTED WIRING CONFIGURATION



Vehicle functions supported in this diagram (functional if equipped)

VEHICLE	YEARS	Immobilizer bypass	T-Harness	Lock	Unlock	Arm	Disarm	Trunk (open)	RAP Disable	Tachometer	Heated Seats	Door Status	Trunk Status (Data-Link Only/Data-Link Seulement)	Hand-Brake Status (Data-Link Only/Data-Link Seulement)	Foot-Brake Status	OEM Remote monitoring
CHEVROLET																
Volt	Push-To-Start	2016-2019	•	•	•	•	•	•	•	•	•	•	•	•	•	•



FIRMWARE VERSION

70.[41]

GM MINIMUM


To add the firmware version and the options, use the **FLASH LINK UPDATER** or **FLASH LINK MOBILE** tool, sold separately.

IF THE VEHICLE IS NOT EQUIPPED WITH FUNCTIONAL HOOD PIN:


A11

OFF


Hood trigger (Output Status).

	Program bypass option:	UNIT OPTION	DESCRIPTION
		C1	OEM Remote status (Lock/Unlock) monitoring
		D6	Push-to-Start

	Program bypass option (Vehicle hybrid only):	UNIT OPTION	DESCRIPTION
		D4	Hybrid mode (Vehicle hybrid only)



ATTENTION!



DATE: XX-XX


E5

OFF

ON


SPECIAL FUNCTIONS: BY DEFAULT DEACTIVATED

MANUFACTURED MODULES BETWEEN: 04/2018 TO 04/2019

 **Parts required (Not included)**

1X 1Amp Diode

MANDATORY INSTALL

***HOOD PIN**  **HOOD STATUS: THE HOOD PIN SWITCH MUST BE INSTALLED IF THE VEHICLE CAN BE REMOTE STARTED WITH THE HOOD OPEN, SET FUNCTION A11 TO OFF.**


A11

OFF


Notice: the installation of safety elements are mandatory. The hood pin is an essential security element and must be installed.

THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.


DESCRIPTION

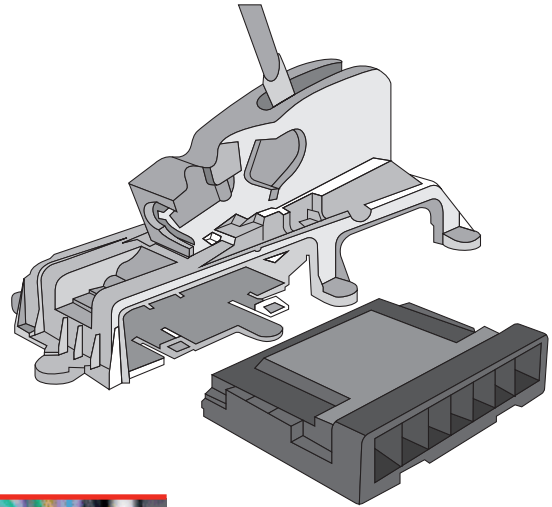

BCM

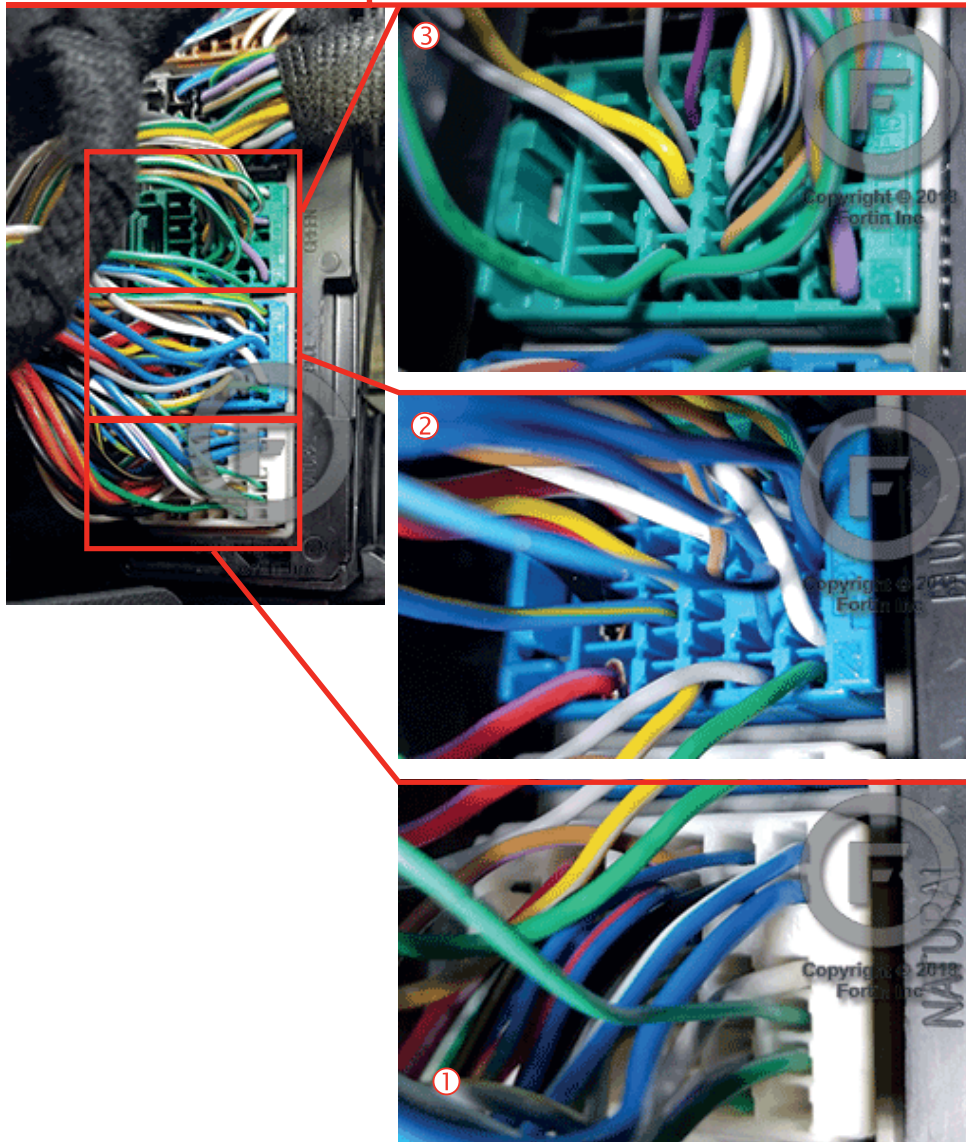


AUTOMATIC TRANSMISSION WIRING CONNECTION

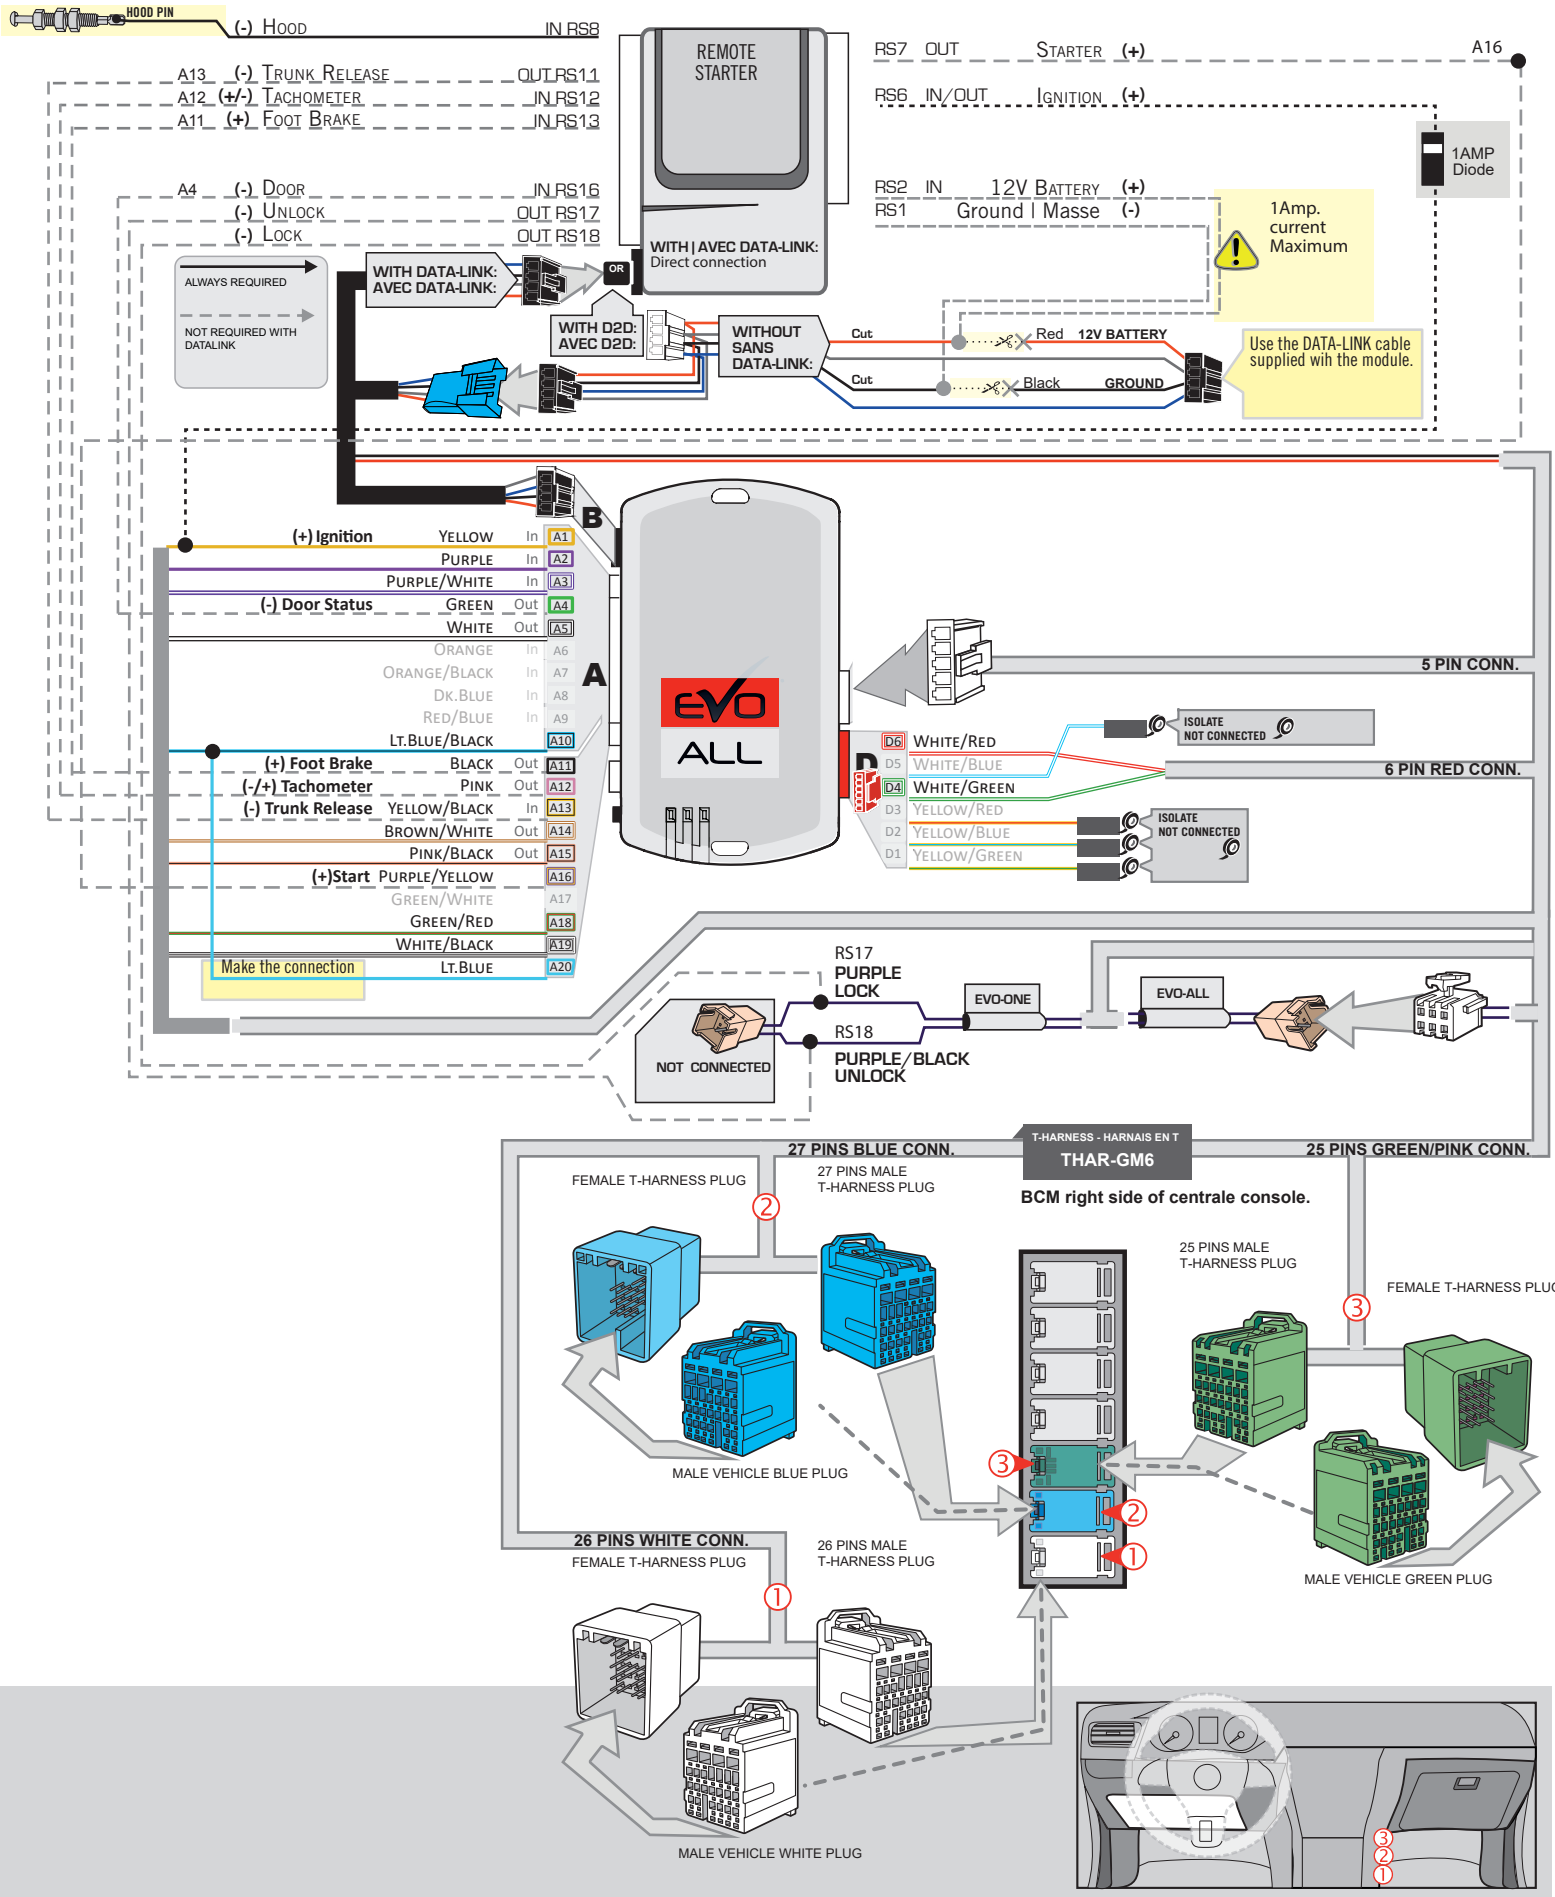


KEY BYPASS PROGRAMMING PROCEDURE 1/3



- 1 Remove the battery from the OEM remote.
- 2 Place the OEM remote into the center console. Refer to vehicle user guide for keyport location.

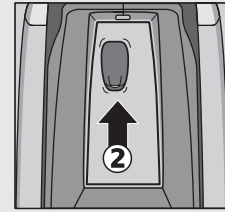


1

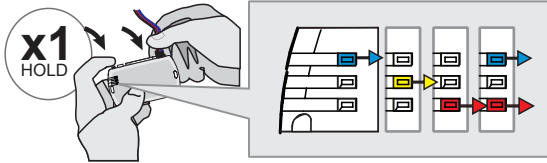

Press and hold the programming button:
Connect the 4-PIN Data-link harness (Black connector).


↳The Blue, Red, Yellow and Blue & Red LEDs will alternatively illuminate.

2

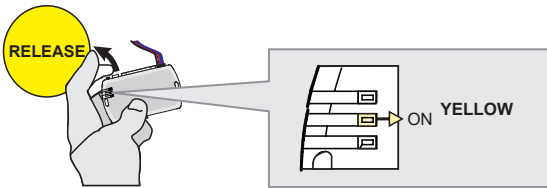


Release the programming button when the LED is YELLOW.

 If the LED is not solid YELLOW disconnect the 4-Pin connector (Data-Link) and go back to step 1.




3

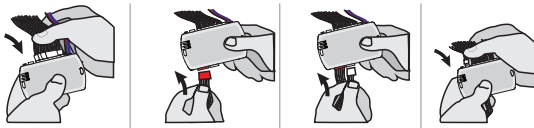

Insert the required remaining connectors.

4

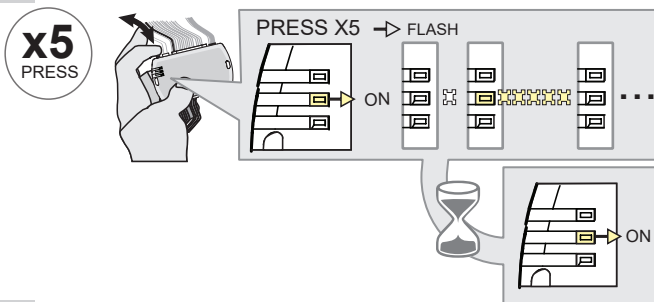


Press and release the programming button five (5x) times.

↳The YELLOW LED will flash 5 times each second.


↳WAIT for the YELLOW LED to turn ON solide.

 5



Open the driver door.

6

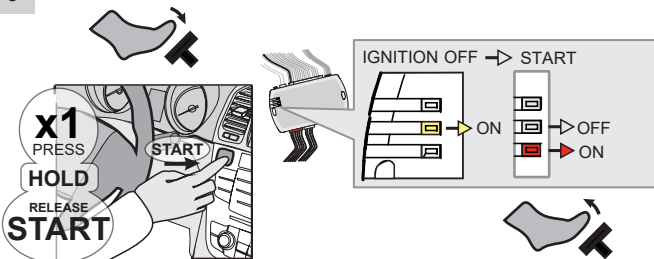

Press the foot-brake pedal.

Press the Push-to-Start button until the engine start.

Release the foot-brake pedal.

↳The RED LED will turn ON.
↳The YELLOW LED will turn OFF.


KEY BYPASS PROGRAMMING PROCEDURE 2/3

7




Press the Push-to-Start button until the engine turn OFF.

8

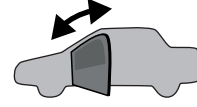

Close and open the driver door.

9

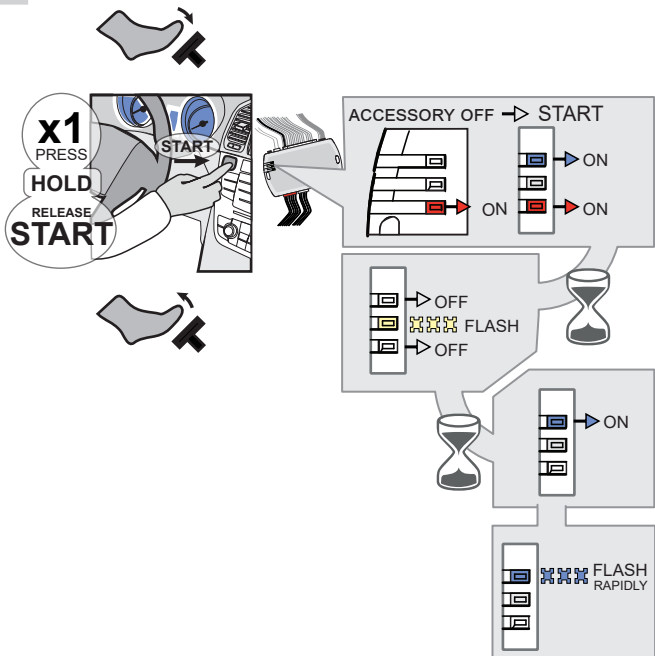


Press the foot-brake pedal.

Press the Push-to-Start button until the engine start.

Release the foot-brake pedal.

- ↳ The BLUE LED will turn ON.
- ↳ The BLUE LED will turn OFF. The RED LED will turn OFF.
- ↳ The YELLOW LED will flash rapidly
- ↳ The BLUE LED will turn ON.
- ↳ The BLUE LED will flash rapidly


10

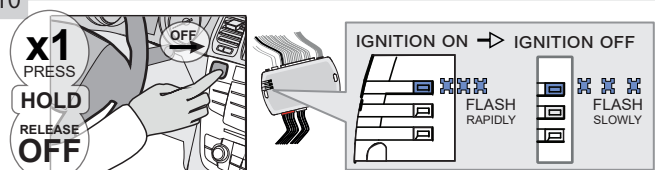

Press the Push-to-Start button until the engine turn OFF.


- ↳ The BLUE LED will flash slowly

11

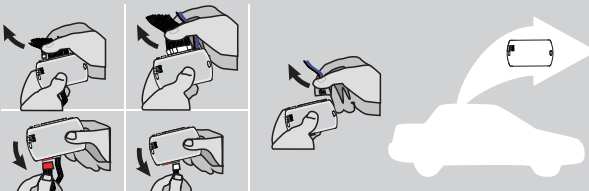

Disconnect all the connectors and after the Data-Link (4-pins) connector.

12


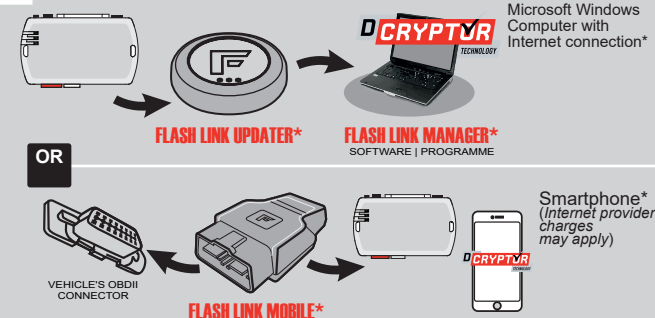


Use the tool: FLASH LINK UPDATER or FLASH LINK MOBILE to visit the DCRYPTOR menu.

***Parts required (not included)**

KEY BYPASS PROGRAMMING PROCEDURE 3/3

13

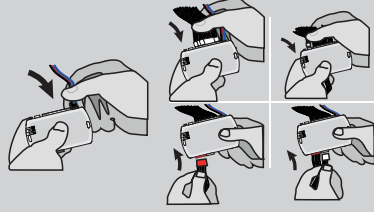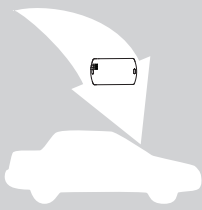

AFTER DCRYPTOR PROGRAMMING COMPLETED
Go back to the vehicle and **reconnect** the 4-Pin (Data-Link) connector and after, all the remaining connector.



The module is now programmed.



REMOTE STARTER / ALARM VERIFICATION PROCEDURE

Test the remote starter. Remote start the vehicle.

REMOTE STARTER FUNCTIONALITY

 


All doors must be closed.


Remote start the vehicle.



Press the Unlock button of the remote car starter or the OEM remote.



Enter the vehicle with the Intelligent Access Key.

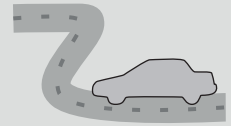

The vehicle can now be put in to gear and driven.



If the vehicle is not unlocked the module will shut down the remote-starter and the vehicle as soon as any door is opened.

THAR-GM6

THARNNESS INSTALLATION

ADDENDUM - SUGGESTED WIRING CONFIGURATION



Vehicle functions supported in this diagram (functional if equipped)

VEHICLE	YEARS	Immobilizer bypass	Lock	Unlock	Arm	Disarm	Trunk (open)	RAP Disable	Tachometer	Heated Seats	Door Status	Trunk Status (Data-Link Only,Data-Link Seule-ment)	Hand-Brake Status (Data-Link Only,Data-Link Seule-ment)	Foot-Brake Status	OEM Remote Monitoring
CADILLAC															
Escalade	Push-To-Start	2020-2021	•	•	•	•	•	•	•	•	•	•	•	•	•
XT4	Push-To-Start	2019-2021	•	•	•	•	•	•	•	•	•	•	•	•	•
XT5	Push-To-Start	2017-2021	•	•	•	•	•	•	•	•	•	•	•	•	•
XT6	Push-To-Start	2020-2021	•	•	•	•	•	•	•	•	•	•	•	•	•

FIRMWARE VERSION

70.[45]

GM MINIMUM

To add the firmware version and the options, use the **FLASH LINK UPDATER** or **FLASH LINK MOBILE** tool, sold separately.

	UNIT OPTION	DESCRIPTION
<p>Program bypass option:</p>	C1	OEM Remote status (Lock/Unlock) monitoring
	A11 <input type="checkbox" value="OFF"/>	Hood trigger (Output Status).
D6	Push-to-Start	

ATTENTION!

DATE: XX-XX

E5

SPECIAL FUNCTIONS:
BY DEFAULT DEACTIVATED

MANUFACTURED MODULES BETWEEN: 04/2018 TO 04/2019

Parts required (Not included)

1X 1Amp Diode

MANDATORY INSTALL

*HOOD PIN



HOOD STATUS: THE HOOD PIN SWITCH MUST BE INSTALLED IF THE VEHICLE CAN BE REMOTE STARTED WITH THE HOOD OPEN, SET FUNCTION A11 TO OFF.



A11

Notice: the installation of safety elements are mandatory. The hood pin is an essential security element and must be installed.


THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.

DESCRIPTION


BCM located on passenger side center console

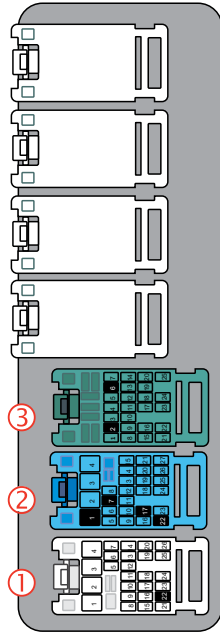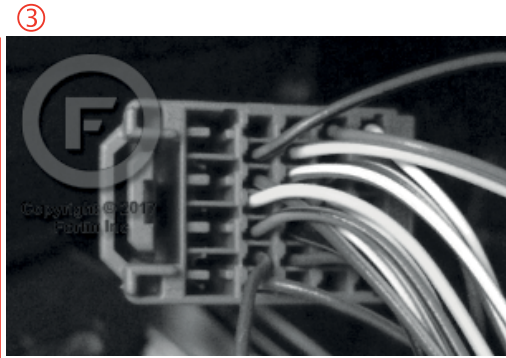


AUTOMATIC TRANSMISSION WIRING CONNECTION

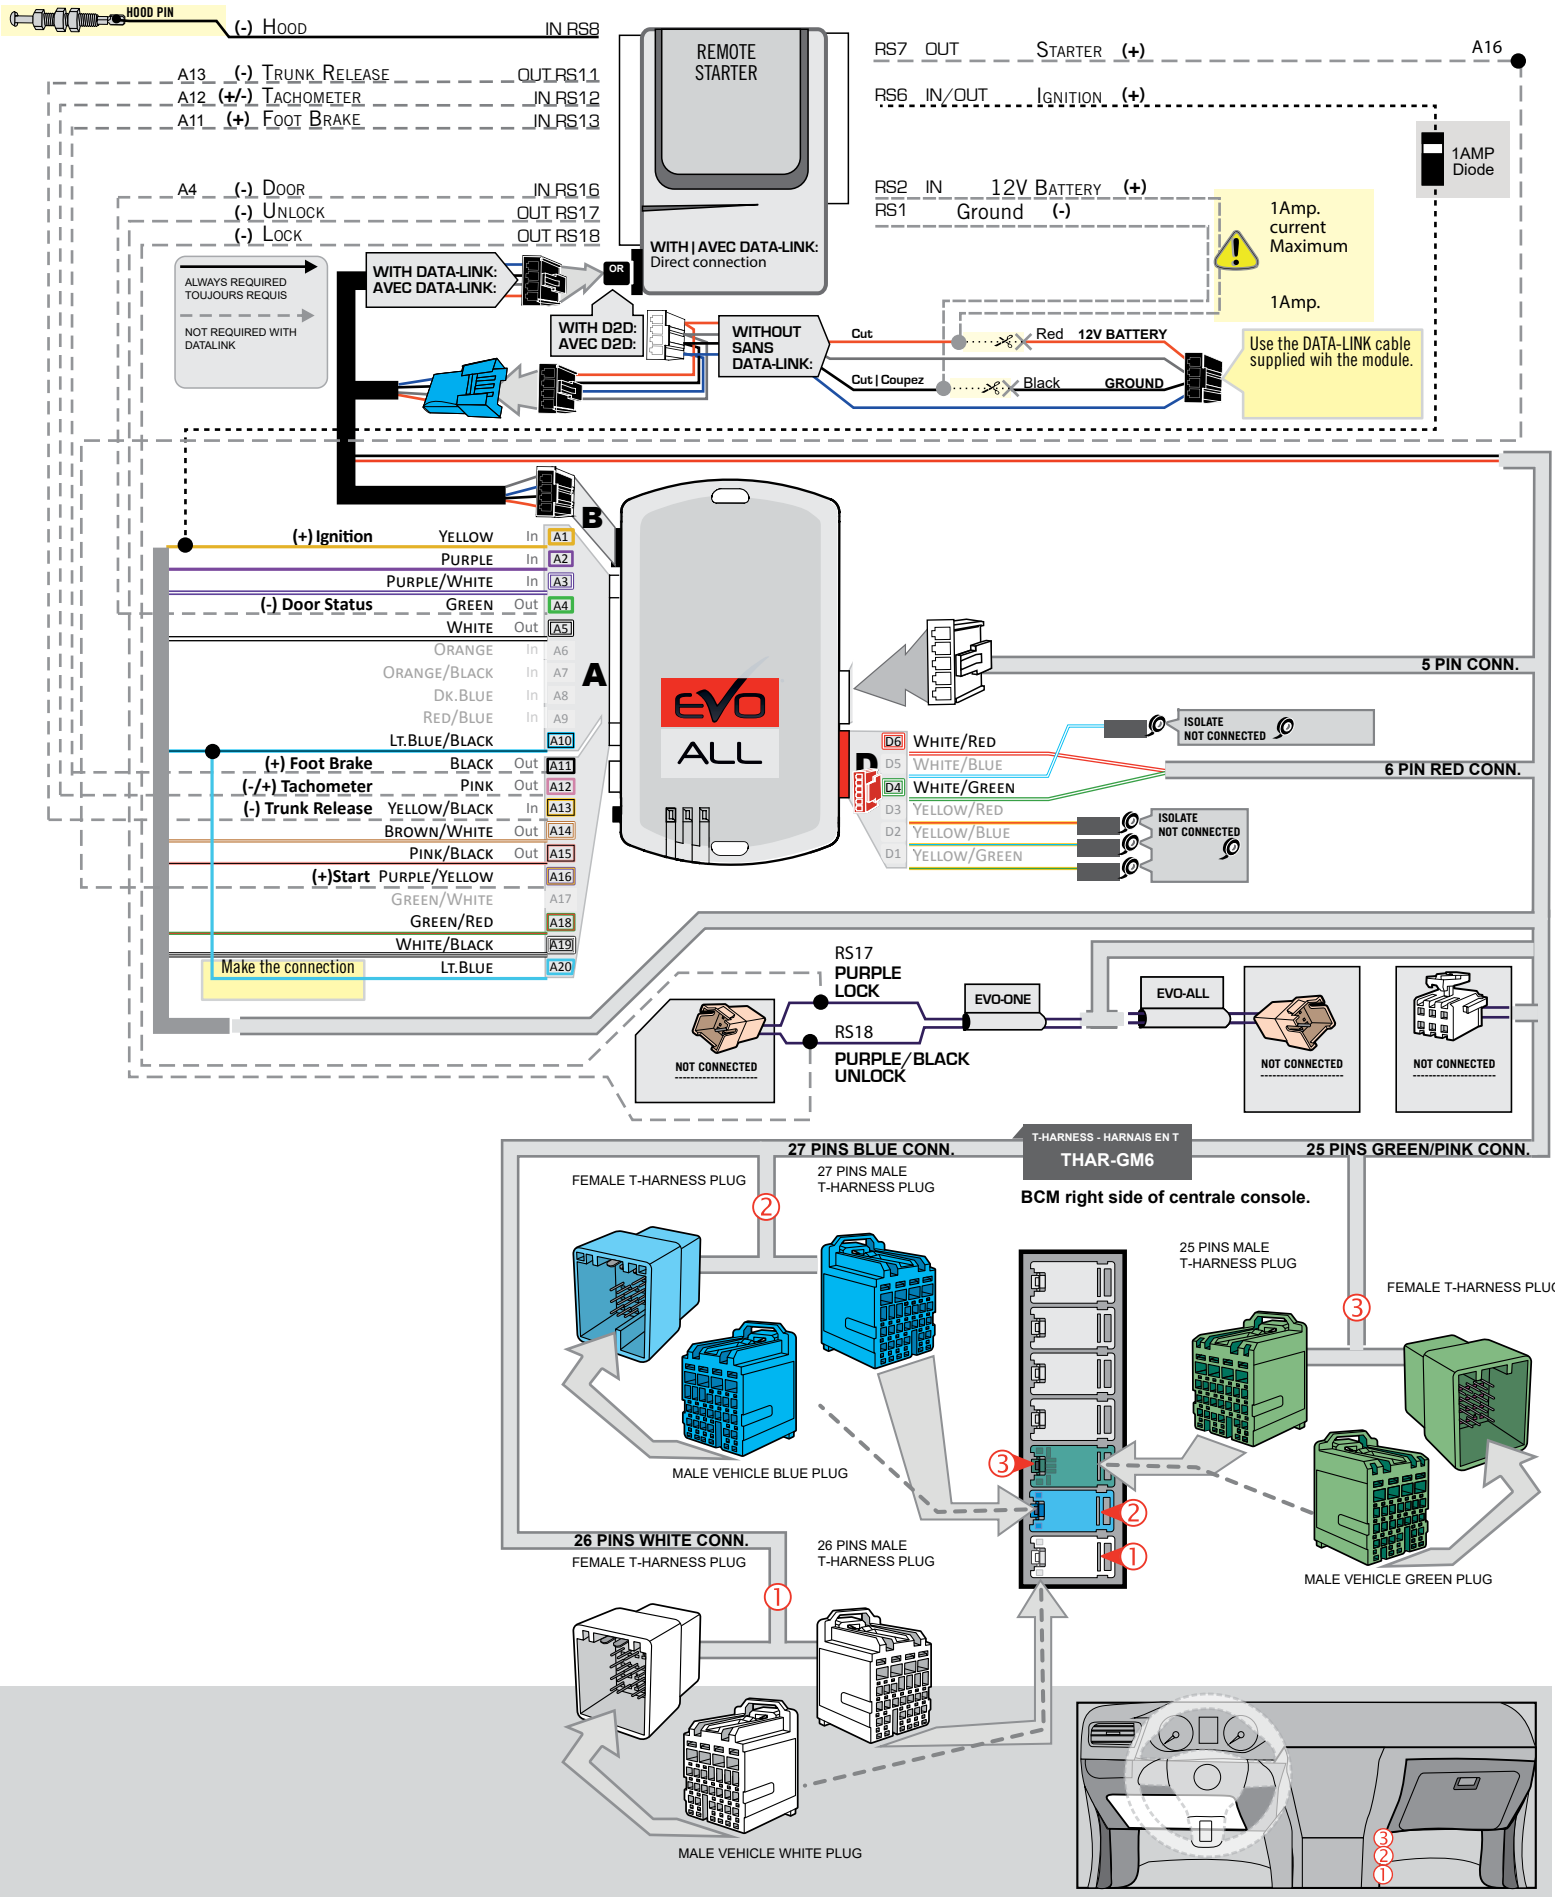


KEY BYPASS PROGRAMMING PROCEDURE 1/3

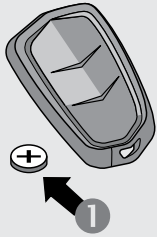

- 1** Remove the battery from the OEM remote.
- 2** Place the OEM remote into the transmitter pocket of the center console.
Refer to vehicle user guide for keyport location.

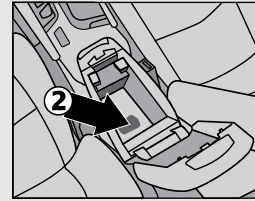


1

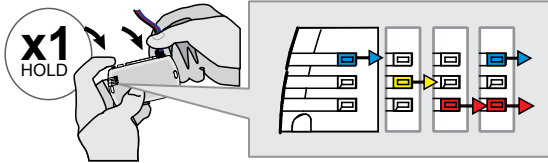

Press and hold the programming button:
Connect the 4-PIN Data-link harness (Black connector).


↳The Blue, Red, Yellow and Blue & Red LEDs will alternatively illuminate.

2

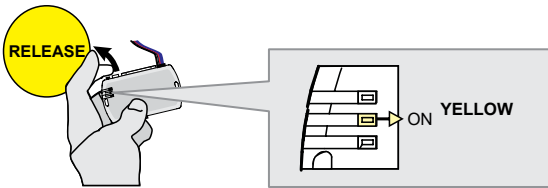


Release the programming button when the LED is YELLOW.

 If the LED is not solid YELLOW disconnect the 4-Pin connector (Data-Link) and go back to step 1.




3

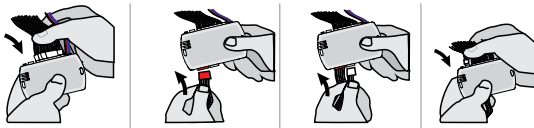

Insert the required remaining connectors.

4

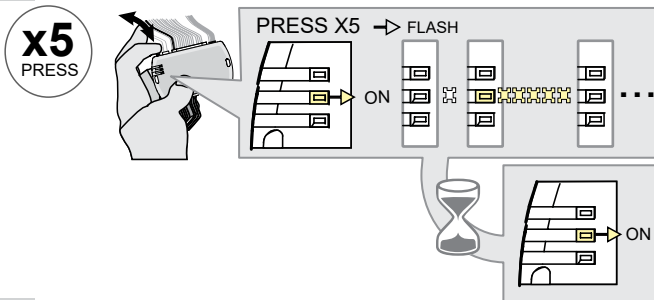


Press and release the programming button five (5x) times.

↳The YELLOW LED will flash 5 times each second.


↳**WAIT** for the YELLOW LED to turn ON solide.

 5



Open the driver door.

6

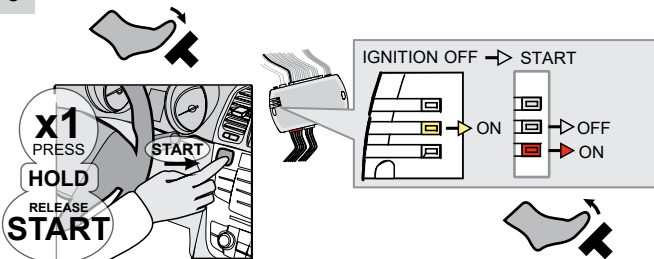

Press the foot-brake pedal.

Press the Push-to-Start button until the engine start.

Release the foot-brake pedal.

↳The RED LED will turn ON.
↳The YELLOW LED will turn OFF.


KEY BYPASS PROGRAMMING PROCEDURE 2/3

7




Press the Push-to-Start button until the engine turn OFF.

8

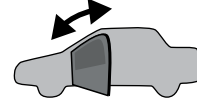

Close and open the driver door.

9

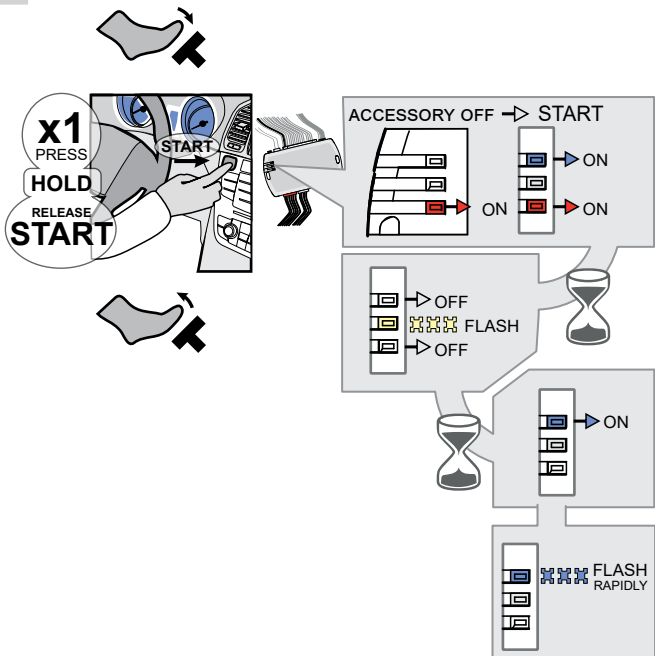


Press the foot-brake pedal.

Press the Push-to-Start button until the engine start.

Release the foot-brake pedal.

- ↳ The BLUE LED will turn ON.
- ↳ The BLUE LED will turn OFF. The RED LED will turn OFF.
- ↳ The YELLOW LED will flash rapidly
- ↳ The BLUE LED will turn ON.
- ↳ The BLUE LED will flash rapidly


10

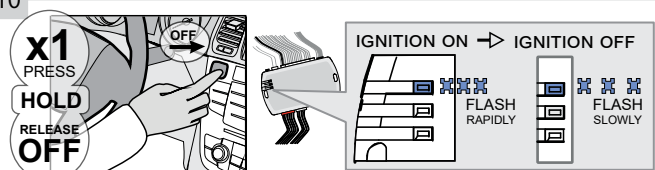

Press the Push-to-Start button until the engine turn OFF.


- ↳ The BLUE LED will flash slowly

11

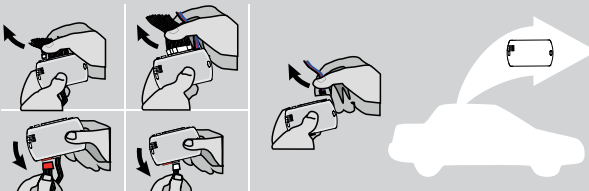

Disconnect all the connectors and after the Data-Link (4-pins) connector.

12


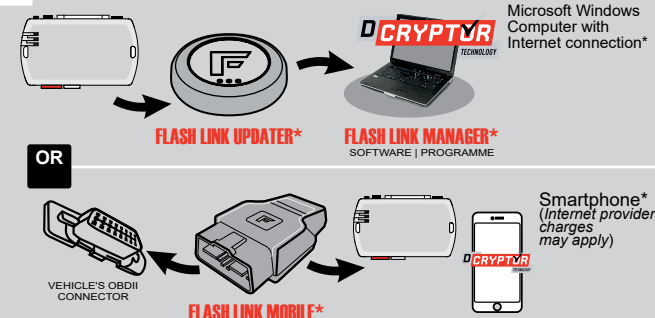


Use the tool: FLASH LINK UPDATER or FLASH LINK MOBILE to visit the DCRYPTOR menu.

*Parts required (not included)

KEY BYPASS PROGRAMMING PROCEDURE 3/3

13

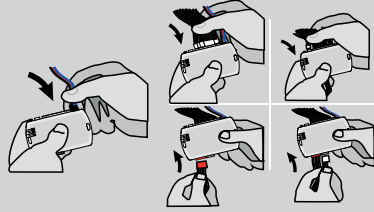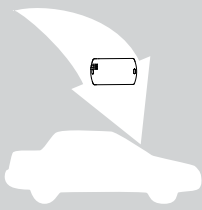

AFTER DCRYPTOR PROGRAMMING COMPLETED
Go back to the vehicle and **reconnect** the 4-Pin (Data-Link) connector and after, all the remaining connector.



The module is now programmed.



REMOTE STARTER / ALARM VERIFICATION PROCEDURE

Test the remote starter. Remote start the vehicle.

REMOTE STARTER FUNCTIONALITY

 


All doors must be closed.


Remote start the vehicle.



Press the Unlock button of the remote car starter.



Enter the vehicle with the Intelligent Access Key.

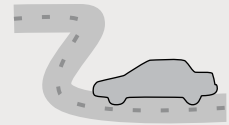

The vehicle can now be put in to gear and driven.



If the vehicle is not unlocked the module will shut down the remote-starter and the vehicle as soon as any door is opened.

THARNESS STAND ALONE INSTALLATION

THAR-GM6

ADDENDUM - SUGGESTED WIRING CONFIGURATION



ONLY COMPATIBLE WITH AUTOMATIC TRANSMISSION VEHICLES.



Vehicle functions supported in this diagram (functional if equipped)

VEHICLE	YEARS	Immobilizer bypass	Lock	Unlock	Arm	Disarm	Trunk (open)	RAP Disable	Tachometer	Door Status	Trunk Status	Hand-Brake Status	Foot-Brake Status	OEM Remote Monitoring
GMC														
Acadia	Push-To-Start	2017-2020	•	•	•	•	•	•	•	•	•	•	•	•

FIRMWARE VERSION

70.[41]

GM MINIMUM

To add the firmware version and the options, use the **FLASH LINK UPDATER** or **FLASH LINK MOBILE** tool, sold separately.

<p>IF THE VEHICLE IS NOT EQUIPPED WITH FUNCTIONAL HOOD PIN:</p>	A11	OFF	Hood trigger (Output Status).
--	------------	------------	-------------------------------

	<p>Program bypass option:</p>	<p>UNIT OPTION</p>	DESCRIPTION
		C1	OEM Remote status (Lock/Unlock) monitoring

	<p>Program bypass option:</p>	<p>UNIT OPTION</p>	DESCRIPTION
		D6	Push-to-Start

	<p>ATTENTION!</p>	<p>DATE: XX-XX</p>	<p>OFF</p>	<p>SPECIAL FUNCTIONS: BY DEFAULT DEACTIVATED</p>
			<p>ON</p>	<p>MANUFACTURED MODULES BETWEEN: 04/2018 TO 04/2019</p>



Parts required (Not included)

- 1X 5 Amp Fuse
- 1X 1k Ohm Resistor

MANDATORY INSTALL

***HOOD PIN**



HOOD STATUS: THE HOOD PIN SWITCH MUST BE INSTALLED IF THE VEHICLE CAN BE REMOTE STARTED WITH THE HOOD OPEN, SET FUNCTION A11 TO OFF.

A11	OFF
------------	------------

Notice: the installation of safety elements are mandatory. The hood pin is an essential security element and must be installed.

THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.

PARTS REQUIRED (NOT INCLUDED)

1x **FLASH LINK UPDATER,**
 1x **FLASH LINK MANAGER**
 SOFTWARE | PROGRAMME
 1x Microsoft Windows Computer with Internet connection

OR

1x **FLASH LINK MOBILE**
 1x **FLASH LINK MOBILE APP**
 Smartphone *Android* or *iOS* with Internet connection (*provider charges may apply*).

MANDATORY

HOOD PIN



REMOTE START SAFETY OVERRIDE SWITCH


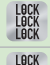





VALET SWITCH


Part #: RSPB available, Sold separately.

Notice: the installation of safety elements are mandatory. The hood pin and the valet switch are essential security elements and must be installed.


STAND ALONE CONFIGURATION

	Program bypass option	UNIT OPTION	DESCRIPTION
	OEM Remote Stand Alone Remote Starter:	D1.10 	By default, LOCK, LOCK, LOCK
		D1.1 	Par défaut, VERROUILLE,VERROUILLE,VERROUILLE
	Program bypass option with oem remote:	C1	OEM Remote Monitoring
	Program bypass option with RF KIT antenna:	H1 to H6	Supported RF Kits and select RF Kit


REMOTE STARTER FUNCTIONALITY



All doors must be closed.

3X 

Press the OEM remote's Lock button 3x to remote-start (or remote-stop) the vehicle.




START

The vehicle will START.

REMOTE STARTER DIAGNOSTICS
MODULE RED LED


x2 flash :	Brake ON
x3 flash :	No tach
x4 flash :	Ignition before start
x5 flash :	Hood Open

REMOTE STARTER WARNING CARD



CUT THIS WARNING CARD AND STICK IT ON A VISIBLE PLACE:
 or use the package **RSPB**, Sold separately.

WARNING



REMOTE STARTER

THE VEHICLE CAN BE STARTED BY EITHER: PRESSING THE LOCK BUTTON ON THE OEM REMOTE 3 TIMES CONSECUTIVELY OR BY A SMARTPHONE. **TURN ON** THE SAFETY SWITCH LOCATED UNDER THE DASHBOARD BEFORE WORKING ON THE VEHICLE.

DESCRIPTION




BCM located on passenger side center console



③




②

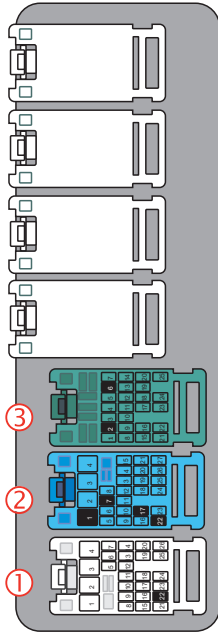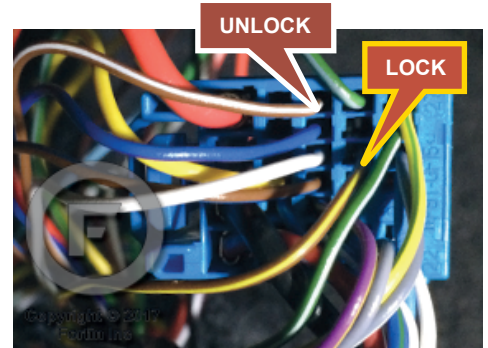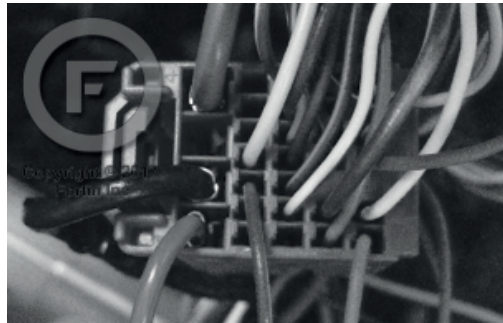


①



AUTOMATIC TRANSMISSION WIRING CONNECTION

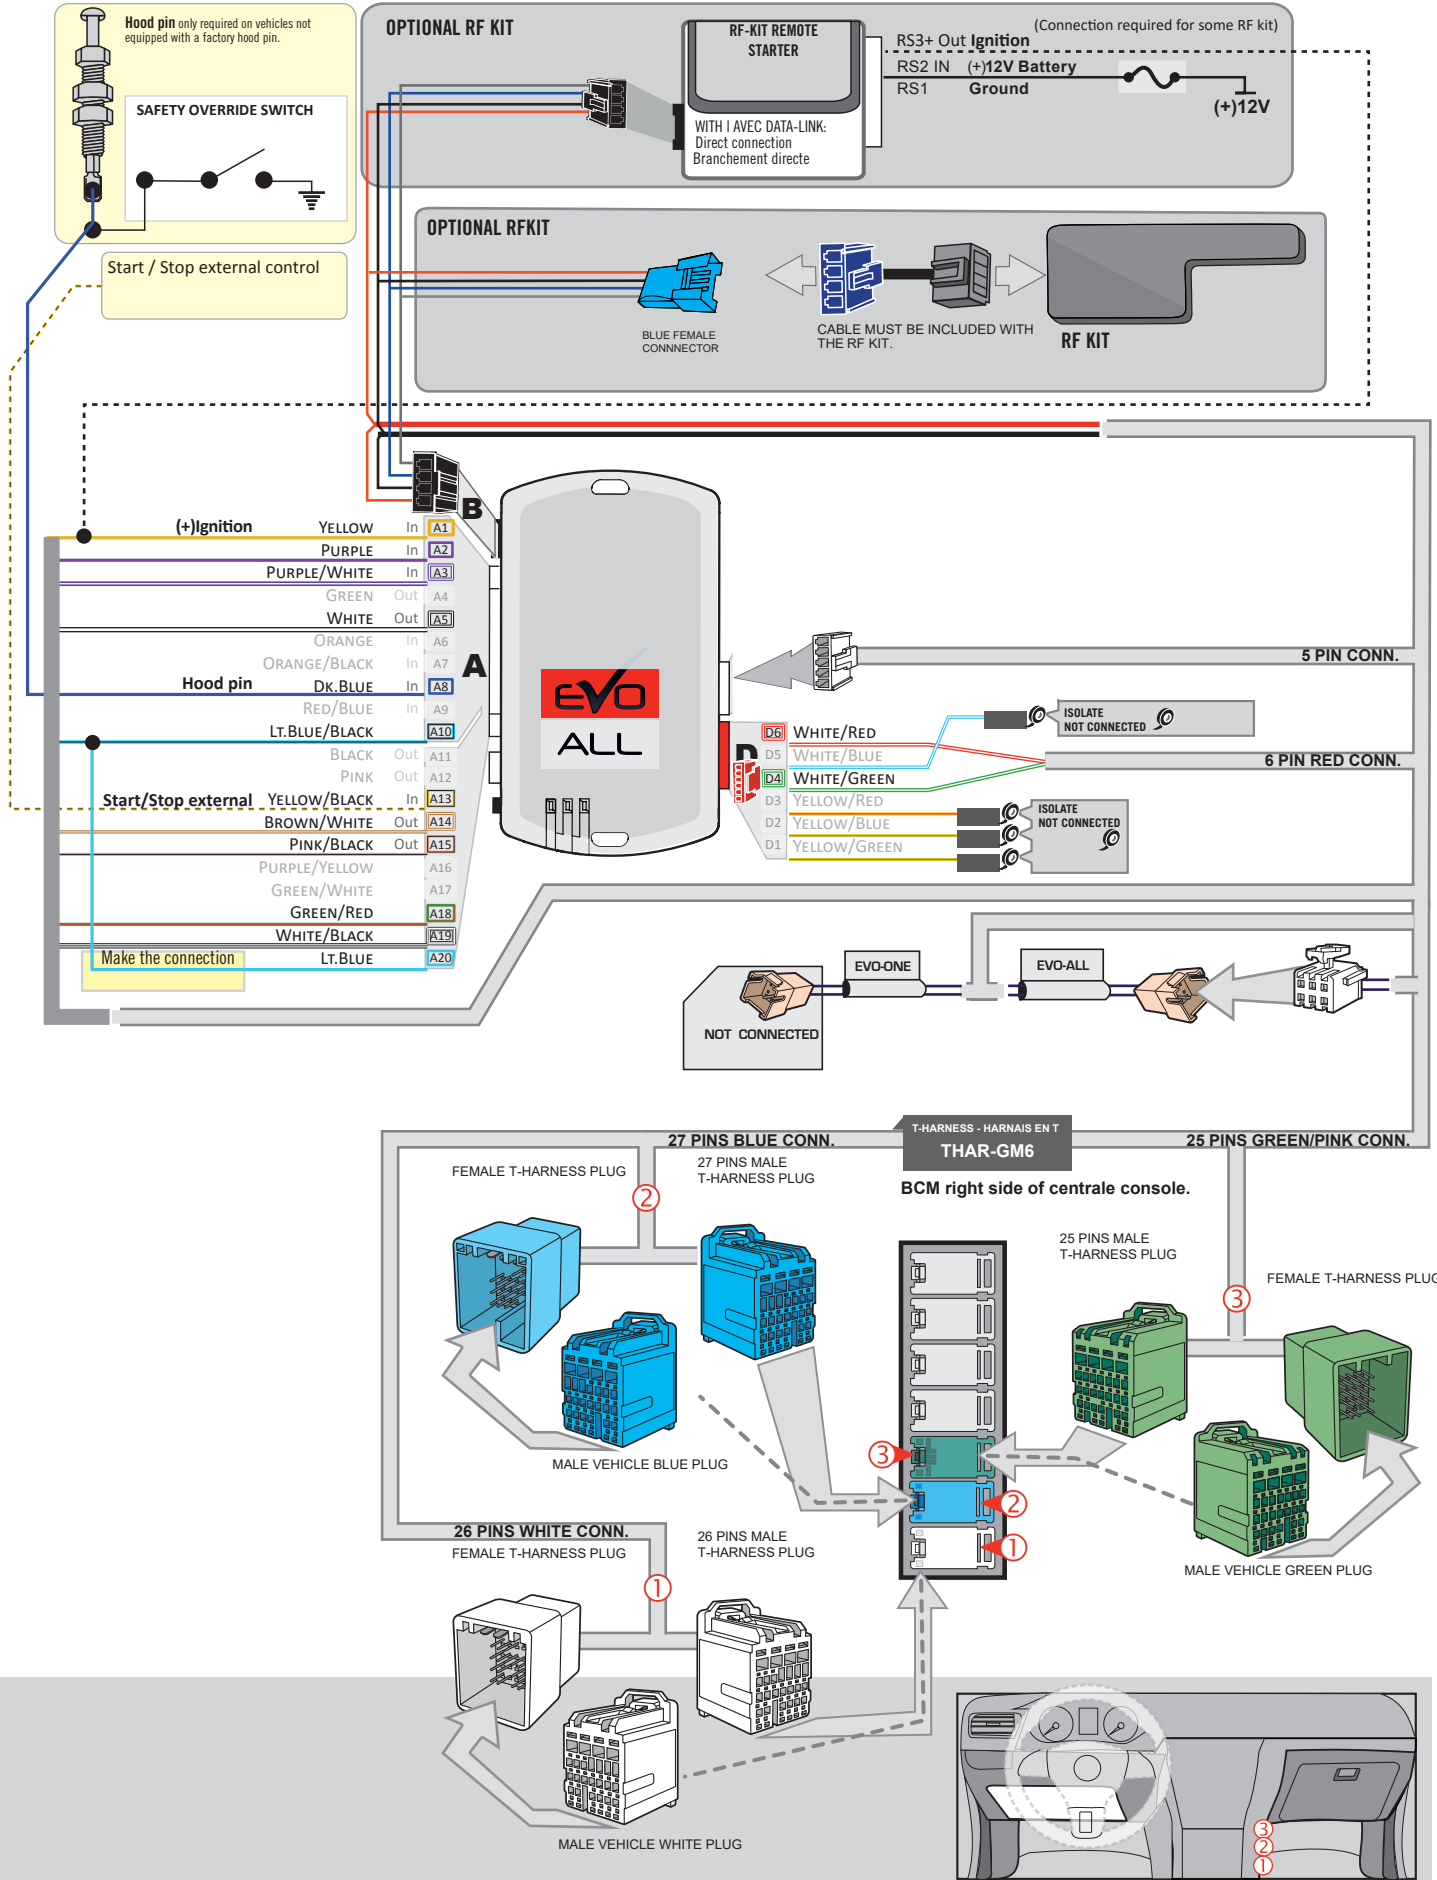


KEY BYPASS PROGRAMMING PROCEDURE 1/3

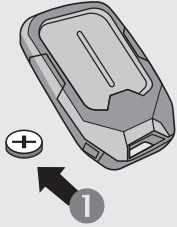


1 Remove the battery from the OEM remote.

2 Place the OEM remote into the transmitter pocket of the center console.

Refer to vehicle user guide for keyport location.

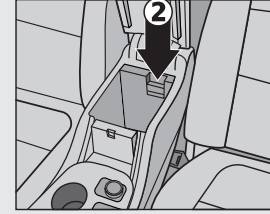


1

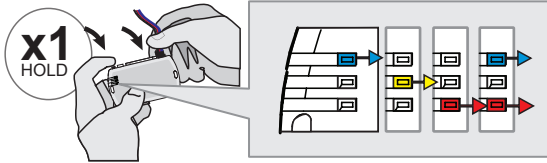

Press and hold the programming button:
Connect the 4-PIN Data-link harness (Black connector).


↳The Blue, Red, Yellow and Blue & Red LEDs will alternatively illuminate.

2

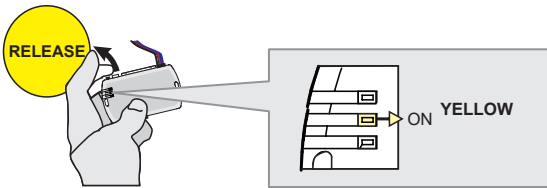


Release the programming button when the LED is YELLOW.

 If the LED is not solid YELLOW disconnect the 4-Pin connector (Data-Link) and go back to step 1.




3

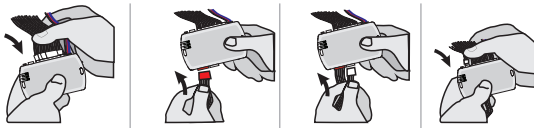

Insert the required remaining connectors.

4

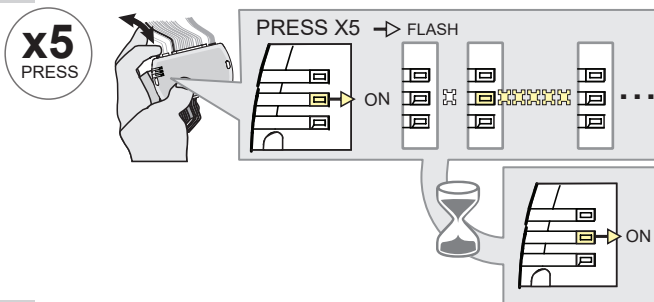


Press and release the programming button five (5x) times.

↳The YELLOW LED will flash 5 times each second.


↳WAIT for the YELLOW LED to turn ON solide.

 5



Open the driver door.

6

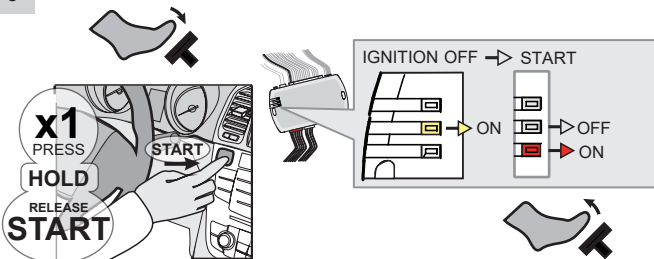

Press the foot-brake pedal.

Press the Push-to-Start button until the engine start.

Release the foot-brake pedal.

↳The RED LED will turn ON.
↳The YELLOW LED will turn OFF.


KEY BYPASS PROGRAMMING PROCEDURE 2/3

7




Press the Push-to-Start button until the engine turn OFF.

8

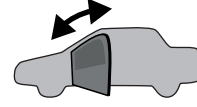

Close and open the driver door.

9

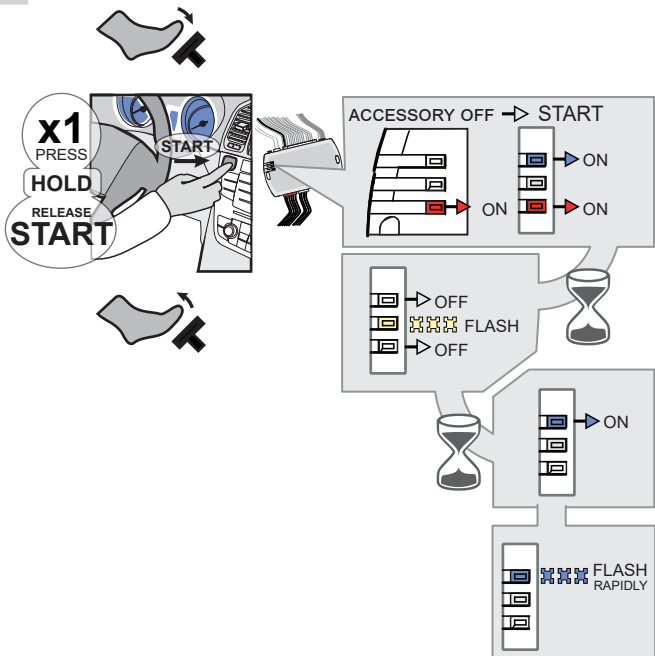


Press the foot-brake pedal.

Press the Push-to-Start button until the engine start.

Release the foot-brake pedal.

- ↳ The BLUE LED will turn ON.
- ↳ The BLUE LED will turn OFF. The RED LED will turn OFF.
- ↳ The YELLOW LED will flash rapidly
- ↳ The BLUE LED will turn ON.
- ↳ The BLUE LED will flash rapidly


10

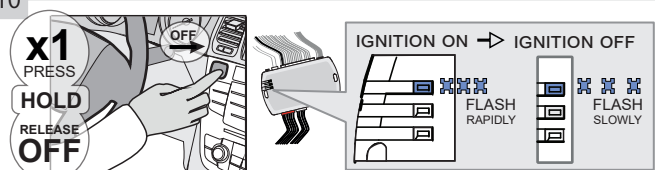

Press the Push-to-Start button until the engine turn OFF.


- ↳ The BLUE LED will flash slowly

11

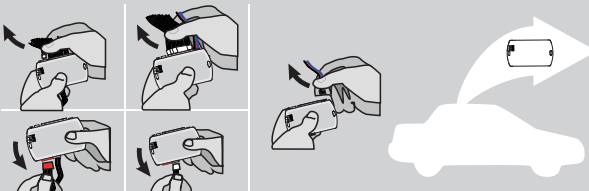

Disconnect all the connectors and after the Data-Link (4-pins) connector.

12


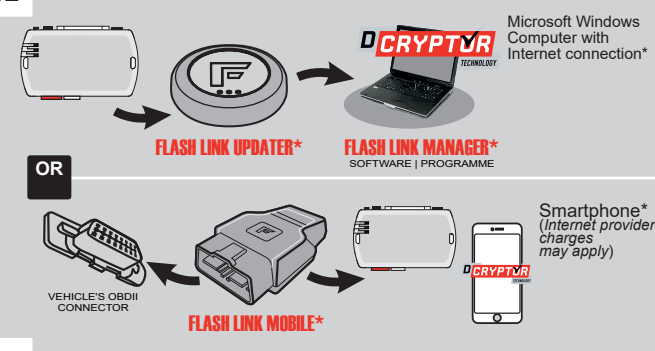


Use the tool: FLASH LINK UPDATER or FLASH LINK MOBILE to visit the DCRYPTOR menu.

*Parts required (not included)

KEY BYPASS PROGRAMMING PROCEDURE 3/3

13

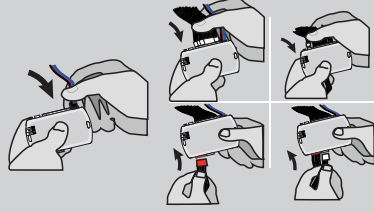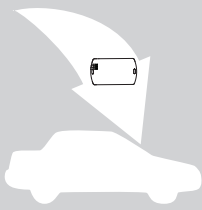

AFTER DCRYPTOR PROGRAMMING COMPLETED
Go back to the vehicle and **reconnect** the 4-Pin (Data-Link) connector and after, all the remaining connector.



The module is now programmed.



REMOTE STARTER / ALARM VERIFICATION PROCEDURE

Test the remote starter. Remote start the vehicle.

REMOTE STARTER FUNCTIONALITY



All doors must be closed.

Remote start the vehicle.



Press the Unlock button of the remote car starter.



Enter the vehicle with the Intelligent Access Key.



The vehicle can now be put in to gear and driven.



If the vehicle is not unlocked the module will shut down the remote-starter and the vehicle as soon as any door is opened.

THARNESS STAND ALONE INSTALLATION

THAR-GM6

ADDENDUM - SUGGESTED WIRING CONFIGURATION



ONLY COMPATIBLE WITH AUTOMATIC TRANSMISSION VEHICLES.



VEHICLE

YEARS

Vehicle functions supported in this diagram (functional if equipped)

CHEVROLET

Bolt	Push-To-Start	2016-2019	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
------	---------------	-----------	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---



FIRMWARE VERSION

70.[41]

GM MINIMUM

To add the firmware version and the options, use the **FLASH LINK UPDATER** or **FLASH LINK MOBILE** tool, sold separately.

IF THE VEHICLE IS NOT EQUIPPED WITH FUNCTIONAL HOOD PIN:

A11

OFF

Hood trigger (Output Status).



Program bypass option:

UNIT OPTION

DESCRIPTION

C1

OEM Remote status (Lock/Unlock) monitoring

D6

Push-to-Start



Program bypass option (Vehicle hybrid only):

UNIT OPTION


DESCRIPTION

D4

Hybrid mode (Vehicle hybrid only)



ATTENTION!

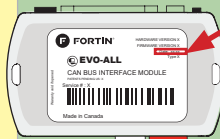

DATE: XX-XX

E5

OFF

SPECIAL FUNCTIONS: BY DEFAULT DEACTIVATED

ON

MANUFACTURED MODULES BETWEEN: 04/2018 TO 04/2019



Parts required (Not included)

- 1X 5 Amp Fuse
- 1X 1k Ohm Resistor

MANDATORY INSTALL

*HOOD PIN



HOOD STATUS: THE HOOD PIN SWITCH MUST BE INSTALLED IF THE VEHICLE CAN BE REMOTE STARTED WITH THE HOOD OPEN, SET FUNCTION A11 TO OFF.

A11

OFF

Notice: the installation of safety elements are mandatory. The hood pin is an essential security element and must be installed.

THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.

PARTS REQUIRED (NOT INCLUDED)

1x **FLASH LINK UPDATER,**
 1x **FLASH LINK MANAGER**
 SOFTWARE | PROGRAMME
 1x Microsoft Windows Computer with Internet connection

OR

1x **FLASH LINK MOBILE**
 1x **FLASH LINK MOBILE APP**
 Smartphone *Android* or *iOS* with Internet connection (*provider charges may apply*).

MANDATORY

HOOD PIN



REMOTE START SAFETY OVERRIDE SWITCH


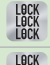





VALET SWITCH


Part #: RSPB available, Sold separately.

Notice: the installation of safety elements are mandatory. The hood pin and the valet switch are essential security elements and must be installed.


STAND ALONE CONFIGURATION

	Program bypass option	UNIT OPTION	DESCRIPTION
	OEM Remote Stand Alone Remote Starter:	D1.10 	By default, LOCK, LOCK, LOCK
		D1.1 	Par défaut, VERROUILLE,VERROUILLE,VERROUILLE
	Program bypass option with oem remote:	C1	OEM Remote Monitoring
	Program bypass option with RF KIT antenna:	H1 to H6	Supported RF Kits and select RF Kit


REMOTE STARTER FUNCTIONALITY




All doors must be closed.

3X 

Press the OEM remote's Lock button 3x to remote-start (or remote-stop) the vehicle.




START 

The vehicle will START.

REMOTE STARTER DIAGNOSTICS
MODULE RED LED

x2 flash :	Brake ON
x3 flash :	No tach
x4 flash :	Ignition before start
x5 flash :	Hood Open

REMOTE STARTER WARNING CARD



CUT THIS WARNING CARD AND STICK IT ON A VISIBLE PLACE:
 or use the package **RSPB**, Sold separately.

WARNING






REMOTE STARTER

THE VEHICLE CAN BE STARTED BY EITHER: PRESSING THE LOCK BUTTON ON THE OEM REMOTE 3 TIMES CONSECUTIVELY OR BY A SMARTPHONE. **TURN ON** THE SAFETY SWITCH LOCATED UNDER THE DASHBOARD BEFORE WORKING ON THE VEHICLE.


DESCRIPTION



BCM

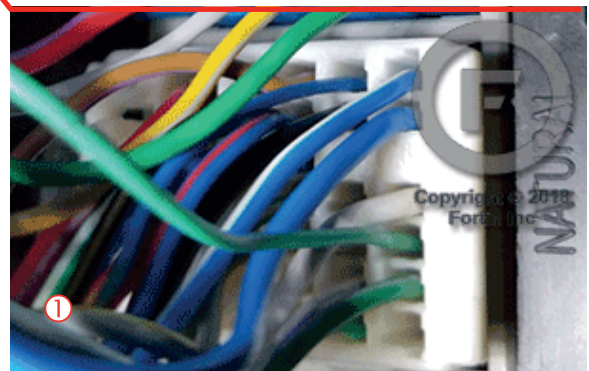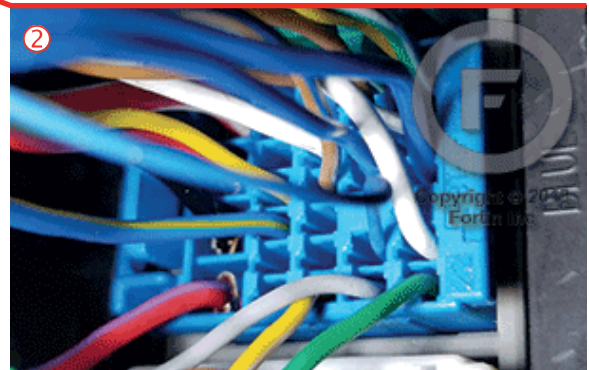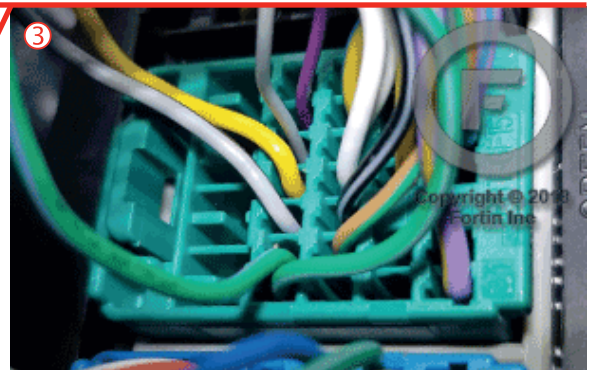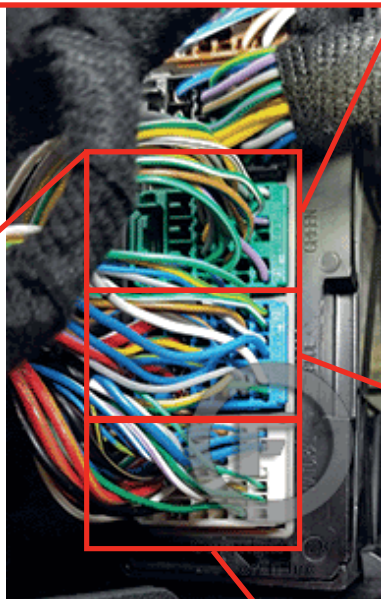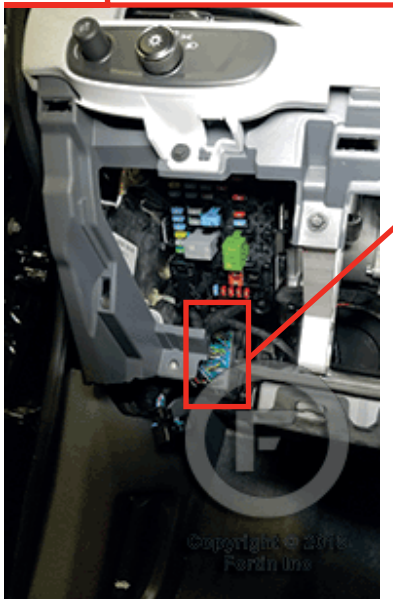


AUTOMATIC TRANSMISSION WIRING CONNECTION

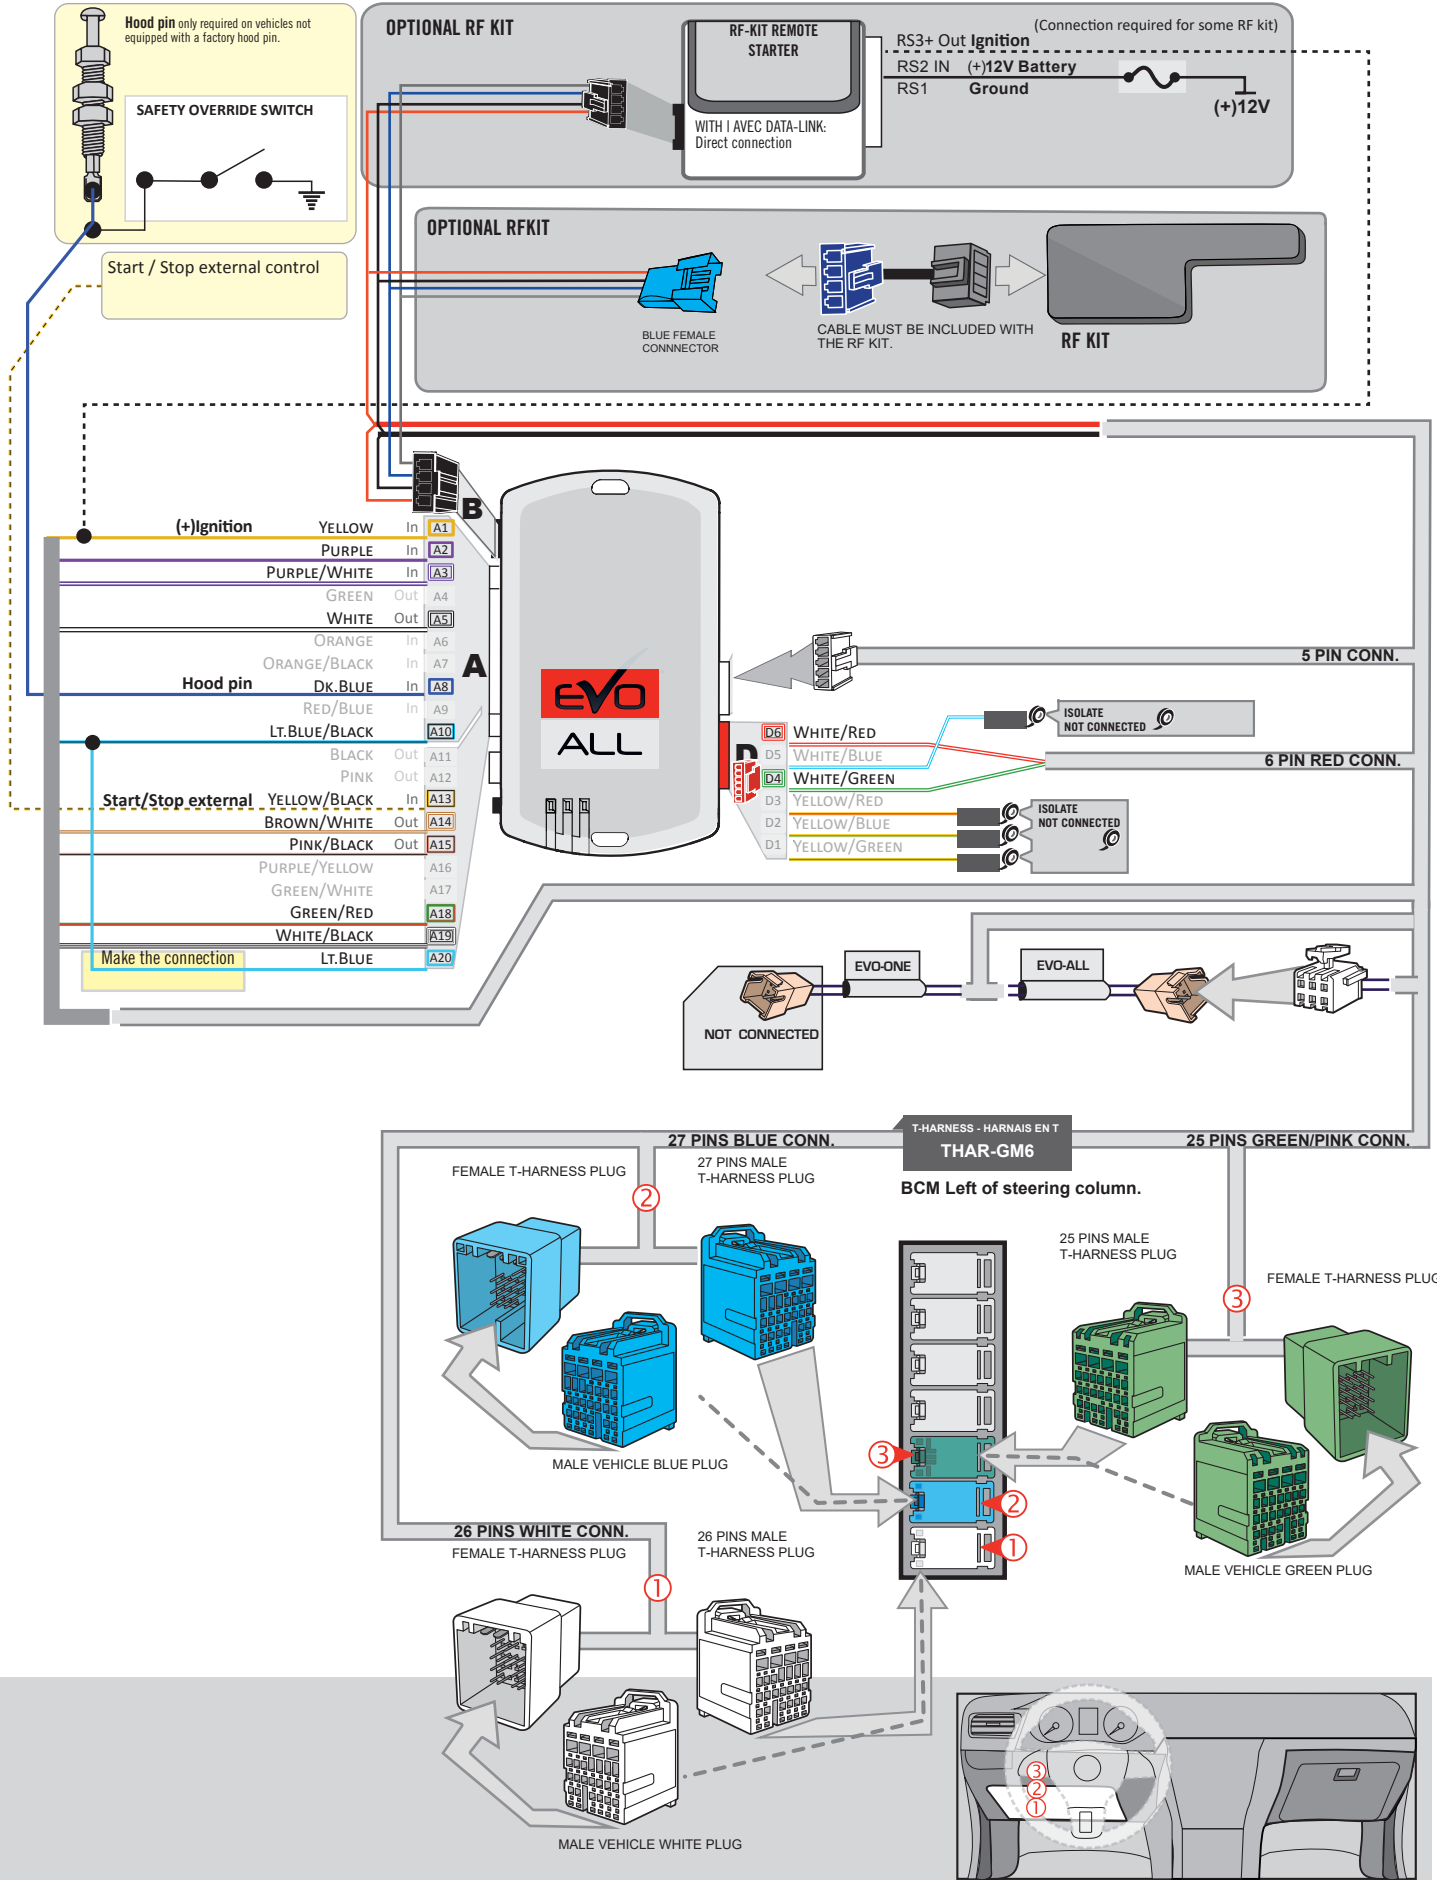


KEY BYPASS PROGRAMMING PROCEDURE 1/3



- 1** Remove the battery from the OEM remote.
- 2** Place the OEM remote into the center console.
Refer to vehicle user guide for keyport location.

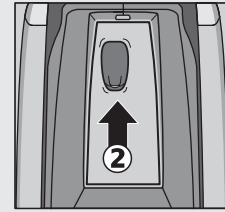


1

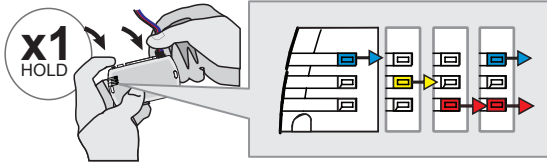

Press and hold the programming button:
Connect the 4-PIN Data-link harness (Black connector).


↳The Blue, Red, Yellow and Blue & Red LEDs will alternatively illuminate.

2

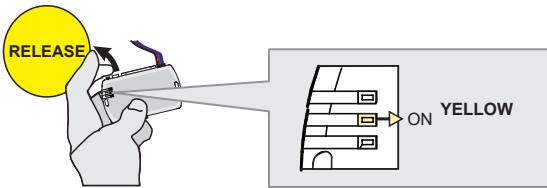


Release the programming button when the LED is YELLOW.

 If the LED is not solid YELLOW disconnect the 4-Pin connector (Data-Link) and go back to step 1.




3

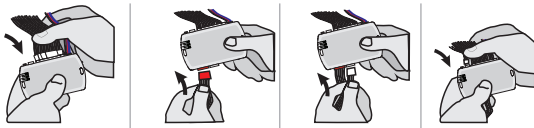

Insert the required remaining connectors.

4

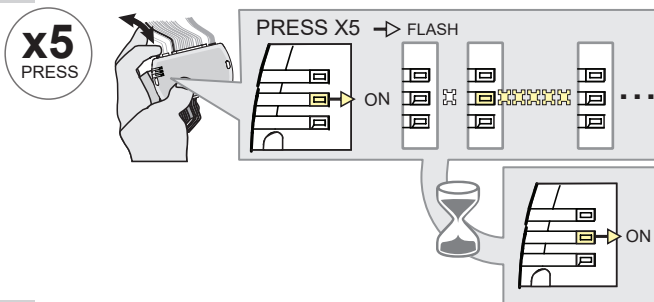


Press and release the programming button five (5x) times.

↳The YELLOW LED will flash 5 times each second.


↳**WAIT** for the YELLOW LED to turn ON solide.

 5



Open the driver door.

6

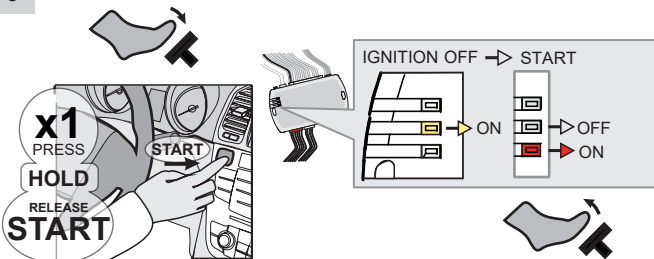

Press the foot-brake pedal.

Press the Push-to-Start button until the engine start.

Release the foot-brake pedal.

↳The RED LED will turn ON.
↳The YELLOW LED will turn OFF.


KEY BYPASS PROGRAMMING PROCEDURE 2/3

7




Press the Push-to-Start button until the engine turn OFF.

8

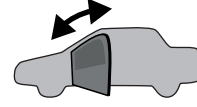

Close and open the driver door.

9

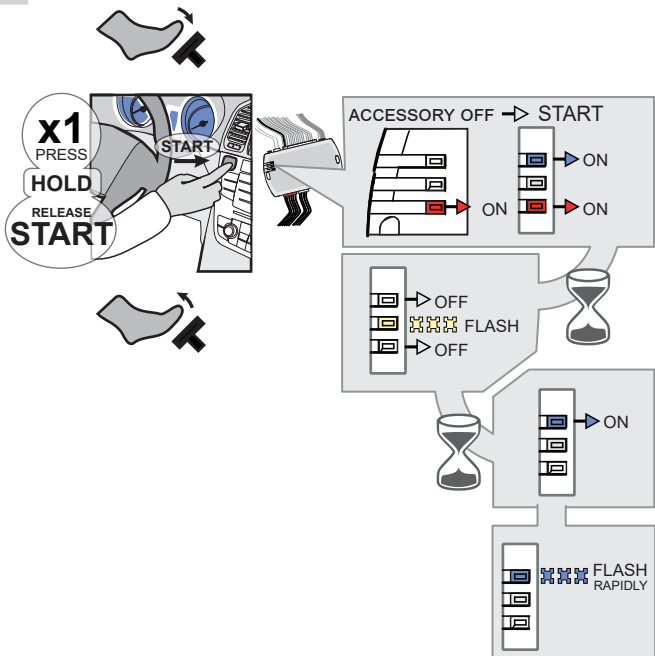


Press the foot-brake pedal.

Press the Push-to-Start button until the engine start.

Release the foot-brake pedal.

- ↳ The BLUE LED will turn ON.
- ↳ The BLUE LED will turn OFF. The RED LED will turn OFF.
- ↳ The YELLOW LED will flash rapidly
- ↳ The BLUE LED will turn ON.
- ↳ The BLUE LED will flash rapidly


10

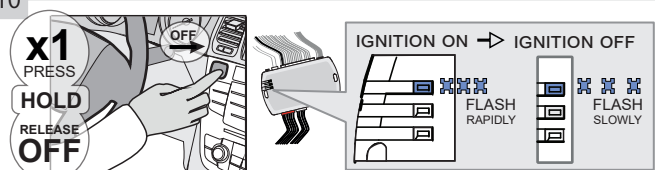

Press the Push-to-Start button until the engine turn OFF.


- ↳ The BLUE LED will flash slowly

11

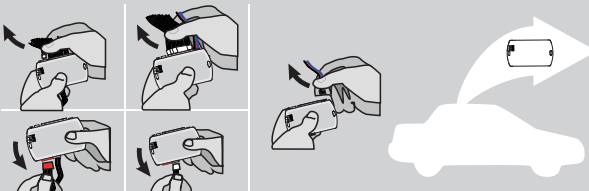

Disconnect all the connectors and after the Data-Link (4-pins) connector.

12

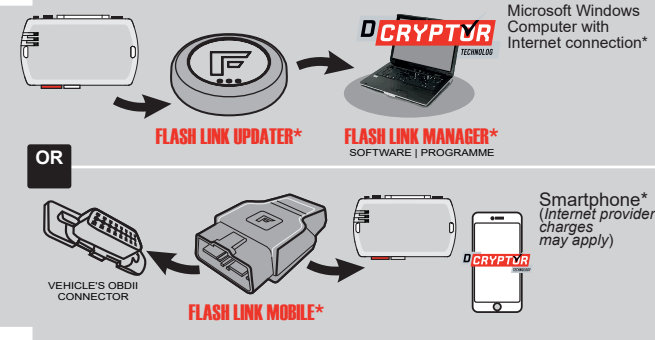

Microsoft Windows Computer with Internet connection*



Smartphone* (Internet provider charges may apply)

Use the tool: FLASH LINK UPDATER or FLASH LINK MOBILE to visit the DCryptor menu.

*Parts required (not included)

KEY BYPASS PROGRAMMING PROCEDURE 3/3

13

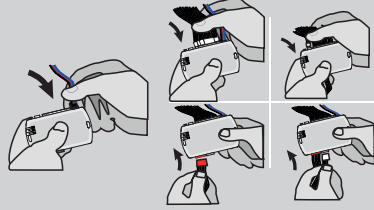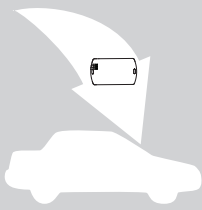

AFTER DCRYPTOR PROGRAMMING COMPLETED
Go back to the vehicle and **reconnect** the 4-Pin (Data-Link) connector and after, all the remaining connector.



The module is now programmed.



REMOTE STARTER / ALARM VERIFICATION PROCEDURE

Test the remote starter. Remote start the vehicle.

REMOTE STARTER FUNCTIONALITY

 


All doors must be closed.


Remote start the vehicle.



Press the Unlock button of the remote car starter or the OEM remote.



Enter the vehicle with the Intelligent Access Key.

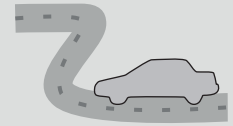

The vehicle can now be put in to gear and driven.



If the vehicle is not unlocked the module will shut down the remote-starter and the vehicle as soon as any door is opened.

THAR-GM6

THARNNESS STAND ALONE INSTALLATION

ADDENDUM - SUGGESTED WIRING CONFIGURATION



ONLY COMPATIBLE WITH AUTOMATIC TRANSMISSION VEHICLES.



Vehicle functions supported in this diagram (functional if equipped)

VEHICLE	YEARS	Immobilizer bypass	Lock	Unlock	Arm	Disarm	Parking Lights	Trunk (open)	RAP Disable	Tachometer	Heated Seats	Door Status	Trunk Status	Hand-Brake Status	Foot-Brake Status	OEM Remote Monitoring
CADILLAC																
CT6	Push-To-Start	2016-2018	•	•	•	•	•	•	•	•	•	•	•	•	•	•

FIRMWARE VERSION

70.[41]

GM MINIMUM

To add the firmware version and the options, use the **FLASH LINK UPDATER** or **FLASH LINK MOBILE** tool, sold separately.

<p>IF THE VEHICLE IS NOT EQUIPPED WITH FUNCTIONAL HOOD PIN:</p>	A11	OFF	Hood trigger (Output Status).
--	------------	------------	-------------------------------

	Program bypass option:	UNIT OPTION	DESCRIPTION
		C1	OEM Remote status (Lock/Unlock) monitoring

	Program bypass option:	UNIT OPTION	DESCRIPTION
		D6	Push-to-Start

	ATTENTION!	E5	OFF	<p>SPECIAL FUNCTIONS: BY DEFAULT DEACTIVATED</p> <p>MANUFACTURED MODULES BETWEEN: 04/2018 TO 04/2019</p>
--	-------------------	-----------	------------	--



Parts required (Not included)

1X THAR-GM6

MANDATORY INSTALL

***HOOD PIN**



HOOD STATUS: THE HOOD PIN SWITCH MUST BE INSTALLED IF THE VEHICLE CAN BE REMOTE STARTED WITH THE HOOD OPEN, SET FUNCTION **A11** TO OFF.

A11

OFF

Notice: the installation of safety elements are mandatory. The hood pin is an essential security element and must be installed.

THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.

PARTS REQUIRED (NOT INCLUDED)

1x **FLASH LINK UPDATER**
 1x **FLASH LINK MANAGER**
 SOFTWARE | PROGRAMME
 1x Microsoft Windows Computer with Internet connection

OR

1x **FLASH LINK MOBILE**
 1x **FLASH LINK MOBILE APP**
 Smartphone *Android* or *iOS* with Internet connection (*provider charges may apply*).
 1x

MANDATORY

HOOD PIN



REMOTE START SAFETY OVERRIDE SWITCH


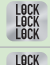





VALET SWITCH


Part #: RSPB available, Sold separately.

Notice: the installation of safety elements are mandatory. The hood pin and the valet switch are essential security elements and must be installed.


STAND ALONE CONFIGURATION

	Program bypass option	UNIT OPTION	DESCRIPTION
	OEM Remote Stand Alone Remote Starter:	D1.10 	By default, LOCK, LOCK, LOCK Par défaut, VERROUILLE,VERROUILLE,VERROUILLE
		D1.1 	
	Program bypass option with oem remote:	C1	OEM Remote Monitoring
	Program bypass option with RF KIT antenna:	H1 to H6	Supported RF Kits and select RF Kit


REMOTE STARTER FUNCTIONALITY




All doors must be closed.

3X 

Press the OEM remote's Lock button 3x to remote-start (or remote-stop) the vehicle.




START 

The vehicle will START.

REMOTE STARTER DIAGNOSTICS
MODULE RED LED


x2 flash :	Brake ON
x3 flash :	No tach
x4 flash :	Ignition before start
x5 flash :	Hood Open

REMOTE STARTER WARNING CARD



CUT THIS WARNING CARD AND STICK IT ON A VISIBLE PLACE:
 or use the package **RSPB**, Sold separately.

WARNING






REMOTE STARTER


THE VEHICLE CAN BE STARTED BY EITHER: PRESSING THE LOCK BUTTON ON THE OEM REMOTE 3 TIMES CONSECUTIVELY OR BY A SMARTPHONE. **TURN ON** THE SAFETY SWITCH LOCATED UNDER THE DASHBOARD BEFORE WORKING ON THE VEHICLE.

DESCRIPTION


BCM

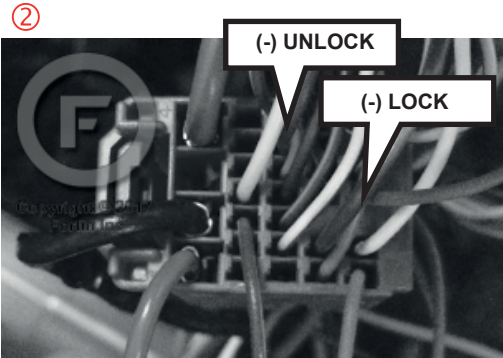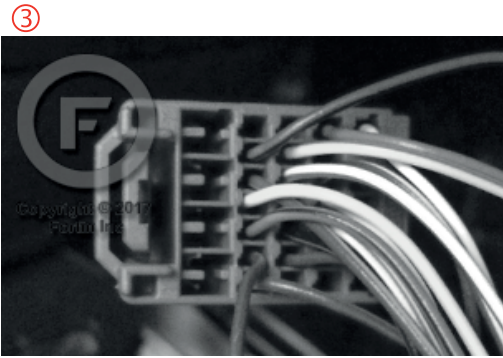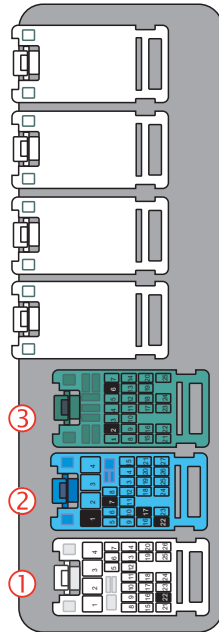

AUTOMATIC TRANSMISSION WIRING CONNECTION

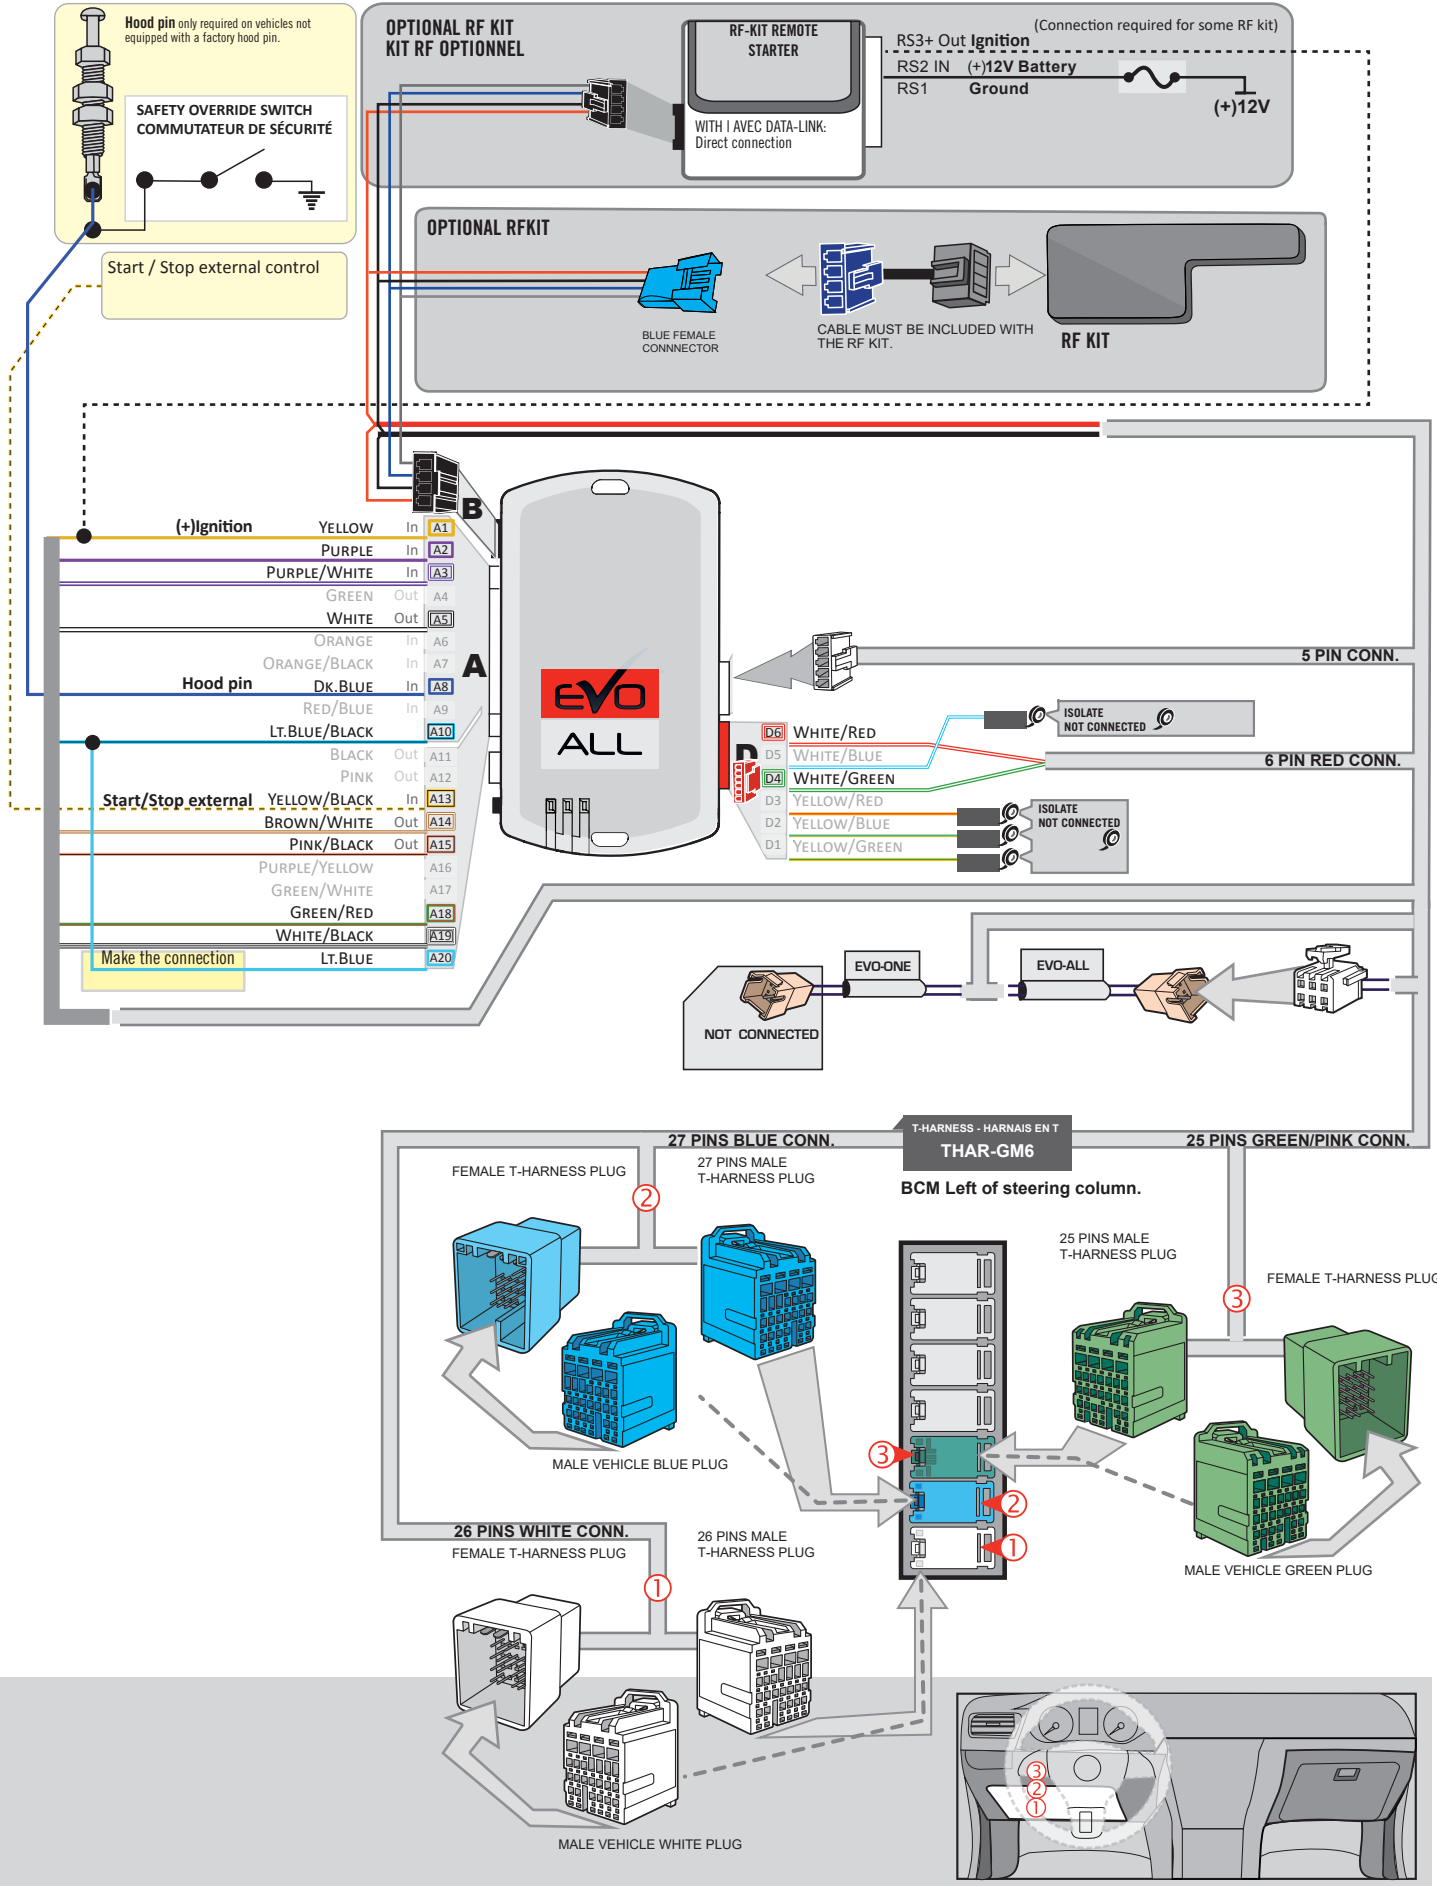


KEY BYPASS PROGRAMMING PROCEDURE 1/3

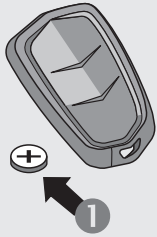


1 Remove the battery from the OEM remote.

2 Place the OEM remote into the transmitter pocket of the center console.

Refer to vehicle user guide for keyport location.

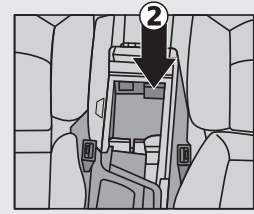


1

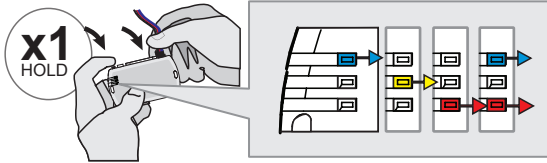

Press and hold the programming button:
Connect the 4-PIN Data-link harness (Black connector).


↳The Blue, Red, Yellow and Blue & Red LEDs will alternatively illuminate.

2

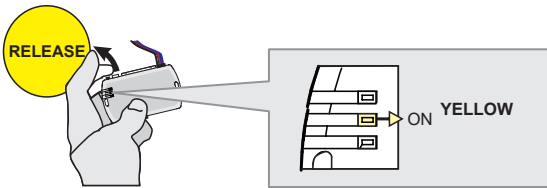


Release the programming button when the LED is YELLOW.

 If the LED is not solid YELLOW disconnect the 4-Pin connector (Data-Link) and go back to step 1.




3

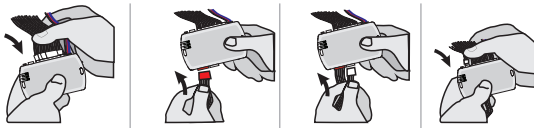

Insert the required remaining connectors.

4

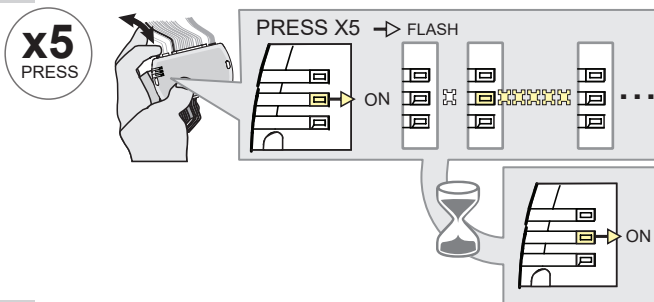


Press and release the programming button five (5x) times.

↳The YELLOW LED will flash 5 times each second.


↳WAIT for the YELLOW LED to turn ON solide.

 5



Open the driver door.

6

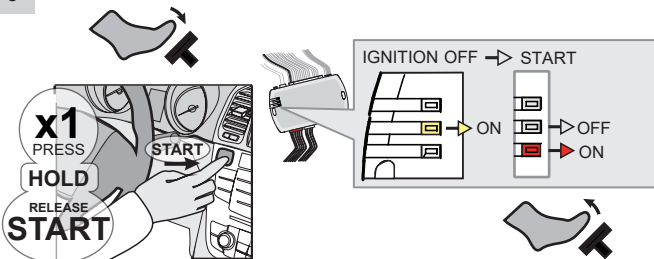

Press the foot-brake pedal.

Press the Push-to-Start button until the engine start.

Release the foot-brake pedal.

↳The RED LED will turn ON.
↳The YELLOW LED will turn OFF.


KEY BYPASS PROGRAMMING PROCEDURE 2/3

7




Press the Push-to-Start button until the engine turn OFF.

8

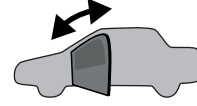

Close and open the driver door.

9

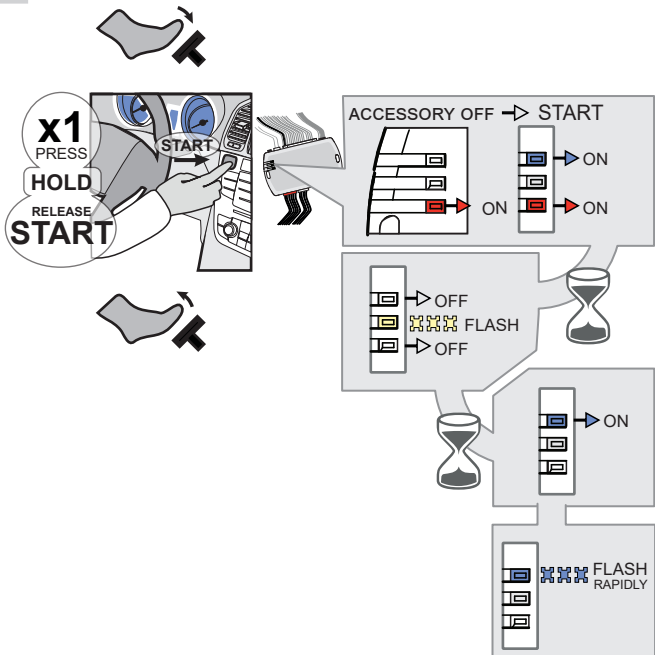


Press the foot-brake pedal.

Press the Push-to-Start button until the engine start.

Release the foot-brake pedal.

- ↳ The BLUE LED will turn ON.
- ↳ The BLUE LED will turn OFF. The RED LED will turn OFF.
- ↳ The YELLOW LED will flash rapidly
- ↳ The BLUE LED will turn ON.
- ↳ The BLUE LED will flash rapidly


10

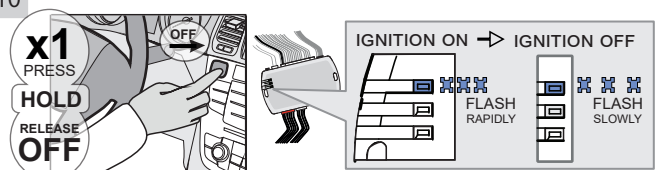

Press the Push-to-Start button until the engine turn OFF.


- ↳ The BLUE LED will flash slowly

11

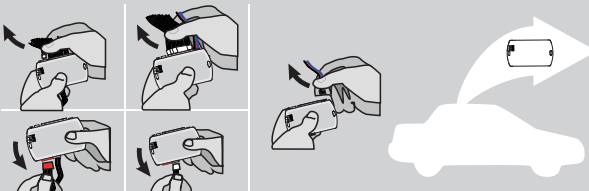

Disconnect all the connectors and after the Data-Link (4-pins) connector.

12

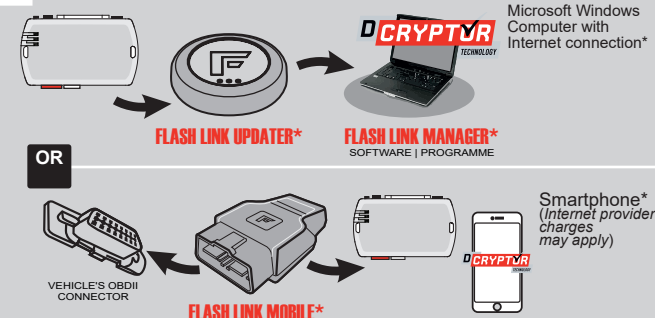

Microsoft Windows Computer with Internet connection*

FLASH LINK UPDATER* **FLASH LINK MANAGER***
SOFTWARE | PROGRAMME

OR

Smartphone* (Internet provider charges may apply)



FLASH LINK MOBILE*

Use the tool: FLASH LINK UPDATER or FLASH LINK MOBILE to visit the DCryptor menu.

*Parts required (not included)

KEY BYPASS PROGRAMMING PROCEDURE 3/3

13

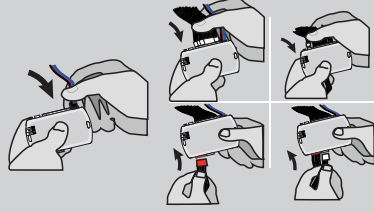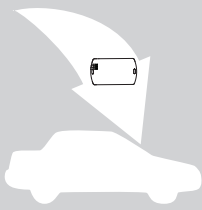

AFTER DCRYPTOR PROGRAMMING COMPLETED
Go back to the vehicle and **reconnect** the 4-Pin (Data-Link) connector and after, all the remaining connector.



The module is now programmed.



REMOTE STARTER / ALARM VERIFICATION PROCEDURE

Test the remote starter. Remote start the vehicle.

REMOTE STARTER FUNCTIONALITY

 


All doors must be closed.


Remote start the vehicle.



Press the Unlock button of the remote car starter or the OEM remote.



Enter the vehicle with the Intelligent Access Key.

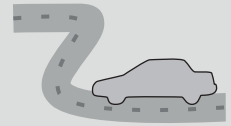

The vehicle can now be put in to gear and driven.



If the vehicle is not unlocked the module will shut down the remote-starter and the vehicle as soon as any door is opened.

THAR-GM6

THARNNESS STAND ALONE INSTALLATION

ADDENDUM - SUGGESTED WIRING CONFIGURATION



ONLY COMPATIBLE WITH AUTOMATIC TRANSMISSION VEHICLES.

VEHICLE		YEARS	Vehicle functions supported in this diagram (functional if equipped)														
			Immobilizer bypass	Lock	Unlock	Arm	Disarm	Trunk (open)	Parking Light	RAP Disable	Tachometer	Heated Seats	Door Status	Trunk Status	Hand-Brake Status	Foot-Brake Status	OEM Remote Monitoring
CHEVROLET																	
Camaro	Push-To-Start	2016-2019	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•

FIRMWARE VERSION

70.[41]

GM MINIMUM

To add the firmware version and the options, use the **FLASH LINK UPDATER** or **FLASH LINK MOBILE** tool, sold separately.

<p>IF THE VEHICLE IS NOT EQUIPPED WITH FUNCTIONAL HOOD PIN:</p>	A11	OFF	Hood trigger (Output Status).
--	------------	------------	-------------------------------

	Program bypass option:	UNIT OPTION	DESCRIPTION
		C1	OEM Remote status (Lock/Unlock) monitoring
		D6	Push-to-Start

	ATTENTION!	<p>DATE: XX-XX</p>	E5	OFF	<p>SPECIAL FUNCTIONS: BY DEFAULT DEACTIVATED</p>
				ON	<p>MANUFACTURED MODULES BETWEEN: 04/2018 TO 04/2019</p>

Parts required (Not included)

1X THAR-GM6

MANDATORY INSTALL

*HOOD PIN

HOOD STATUS: THE HOOD PIN SWITCH MUST BE INSTALLED IF THE VEHICLE CAN BE REMOTE STARTED WITH THE HOOD OPEN, SET FUNCTION **A11** TO OFF.

A11

OFF

Notice: the installation of safety elements are mandatory. The hood pin is an essential security element and must be installed.

THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.

PARTS REQUIRED (NOT INCLUDED)

1x **FLASH LINK UPDATER**
 1x **FLASH LINK MANAGER**
SOFTWARE | PROGRAMME
 1x Microsoft Windows Computer with Internet connection

OR

1x **FLASH LINK MOBILE**
 1x **FLASH LINK MOBILE APP**
Smartphone Android or iOS with Internet connection (provider charges may apply).

MANDATORY

HOOD PIN



REMOTE START SAFETY OVERRIDE SWITCH


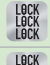





VALET SWITCH


Part #: RSPB available, Sold separately.

Notice: the installation of safety elements are mandatory. The hood pin and the valet switch are essential security elements and must be installed.


STAND ALONE CONFIGURATION

	Program bypass option	UNIT OPTION	DESCRIPTION
	OEM Remote Stand Alone Remote Starter:	D1.10 	By default, LOCK, LOCK, LOCK Par défaut, VERROUILLE,VERROUILLE,VERROUILLE
		D1.1 	
	Program bypass option with oem remote:	C1	OEM Remote Monitoring
	Program bypass option with RF KIT antenna:	H1 to H6	Supported RF Kits and select RF Kit


REMOTE STARTER FUNCTIONALITY



All doors must be closed.

3X 

Press the OEM remote's Lock button 3x to remote-start (or remote-stop) the vehicle.




START

The vehicle will START.

REMOTE STARTER DIAGNOSTICS
MODULE RED LED

x2 flash :	Brake ON
x3 flash :	No tach
x4 flash :	Ignition before start
x5 flash :	Hood Open

REMOTE STARTER WARNING CARD



CUT THIS WARNING CARD AND STICK IT ON A VISIBLE PLACE:
 or use the package RSPB, Sold separately.



WARNING

REMOTE STARTER


THE VEHICLE CAN BE STARTED BY EITHER: PRESSING THE LOCK BUTTON ON THE OEM REMOTE 3 TIMES CONSECUTIVELY OR BY A SMARTPHONE. **TURN ON** THE SAFETY SWITCH LOCATED UNDER THE DASHBOARD BEFORE WORKING ON THE VEHICLE.

DESCRIPTION


BCM located on left side of the steering column

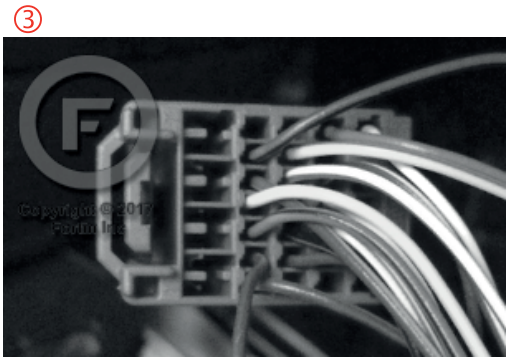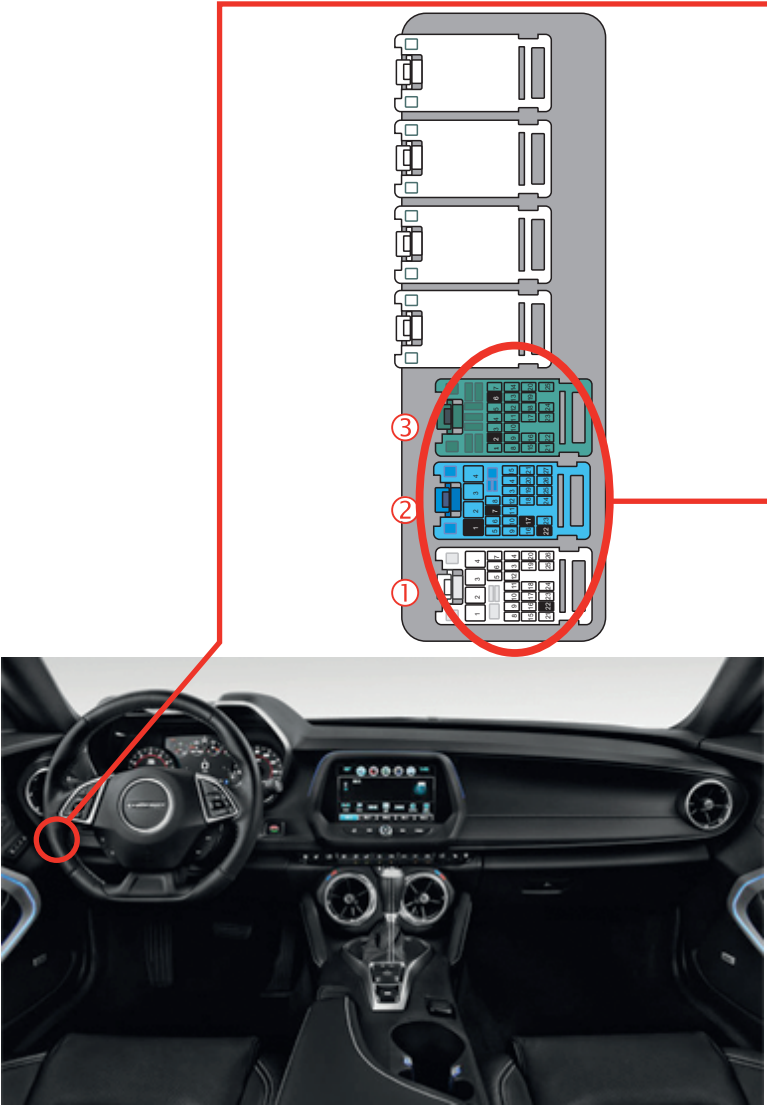

AUTOMATIC TRANSMISSION WIRING CONNECTION

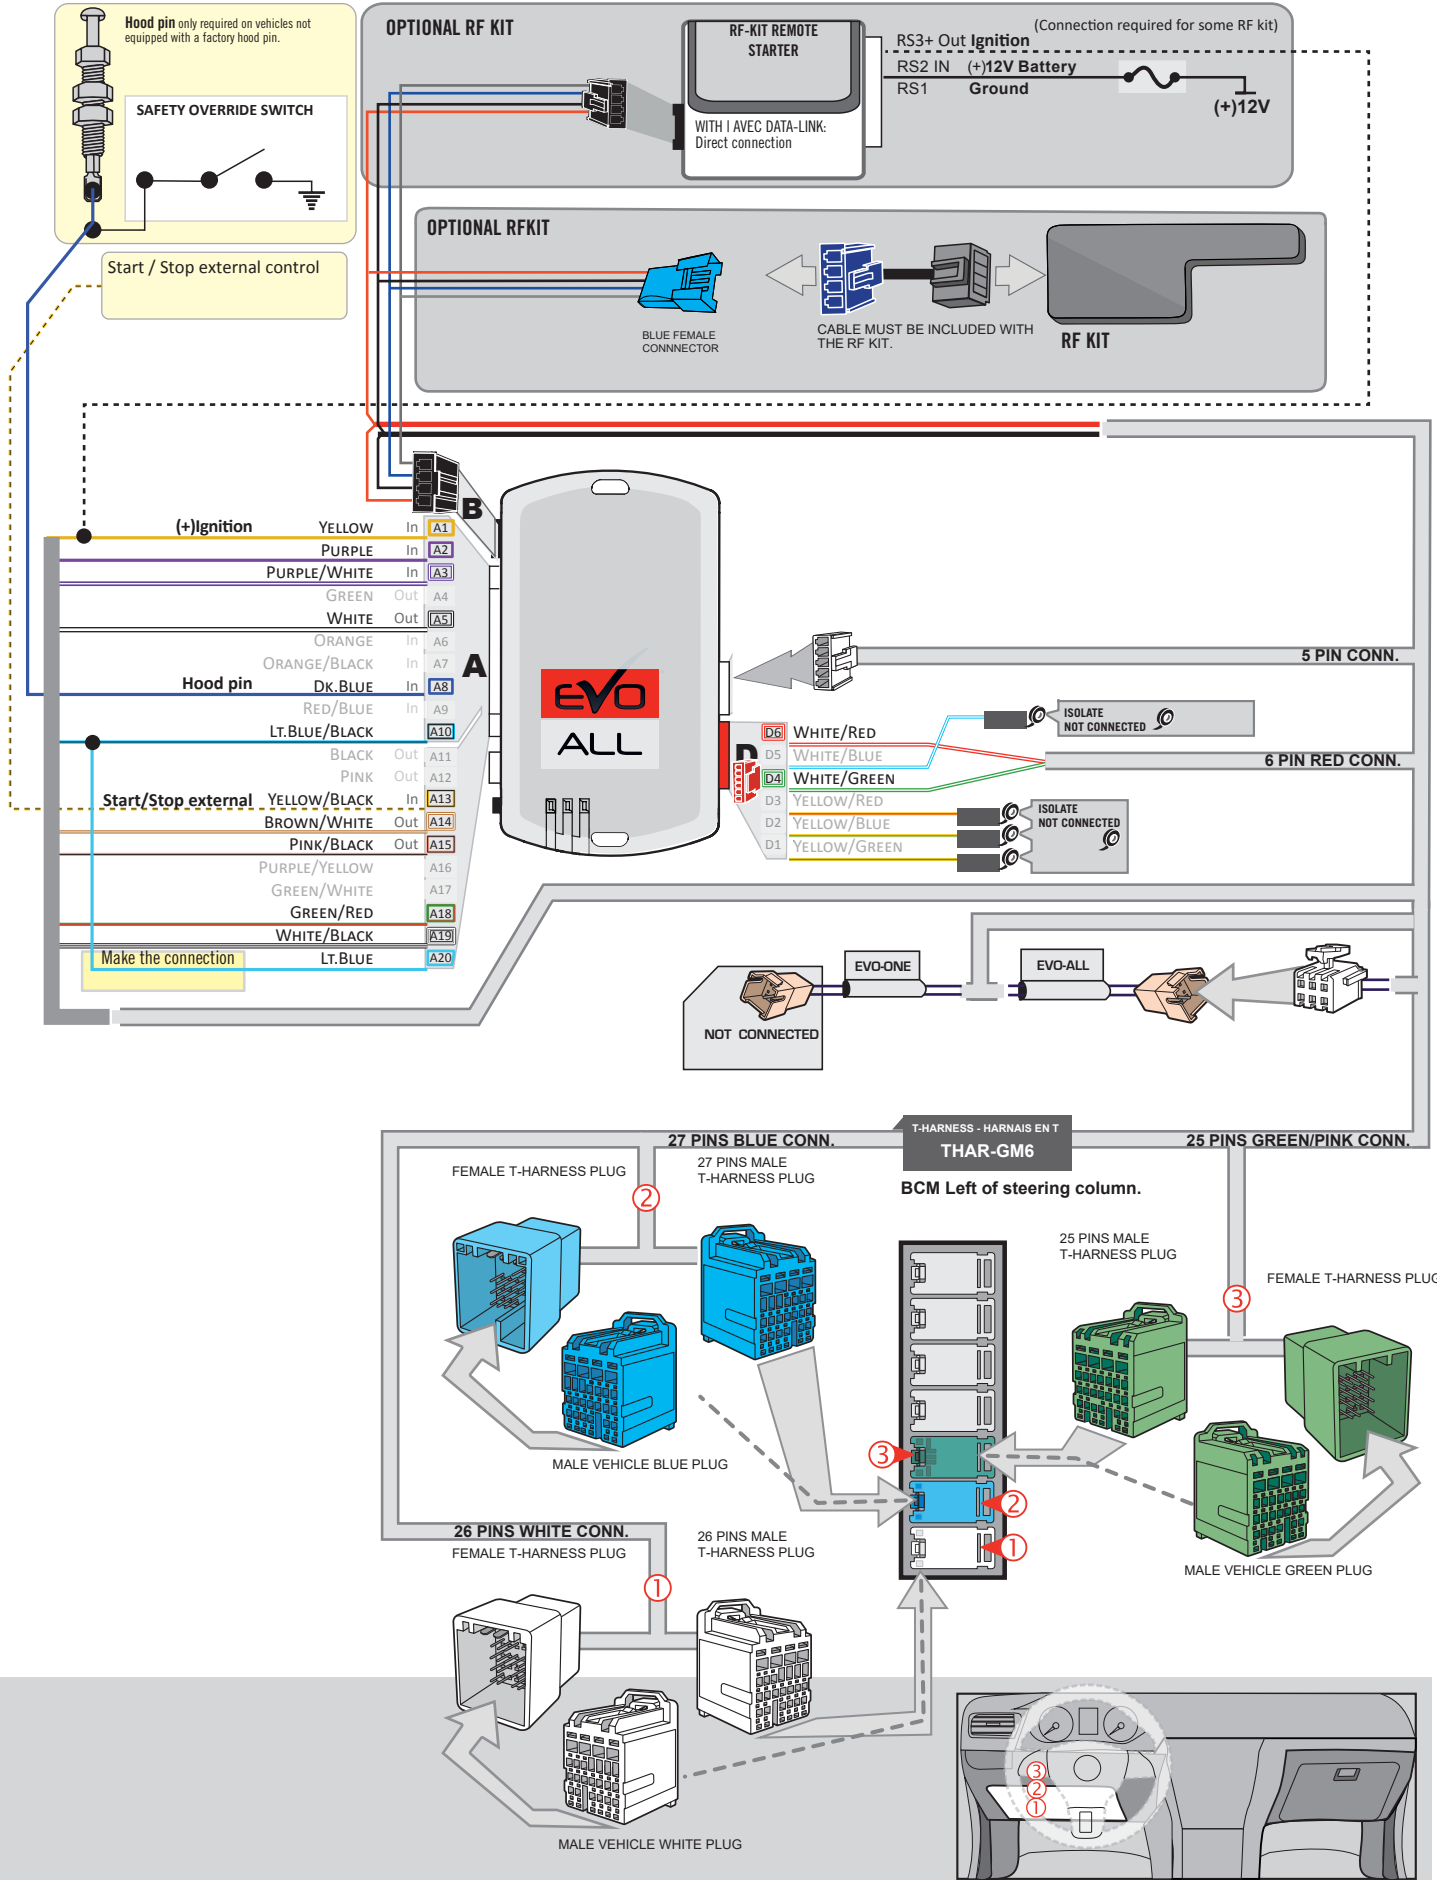


KEY BYPASS PROGRAMMING PROCEDURE 1/3

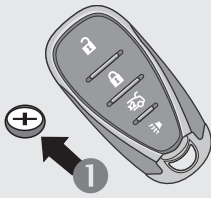


1 Remove the battery from the OEM remote.

2 Place the OEM remotes in to the center console.

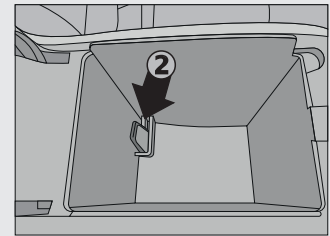


1

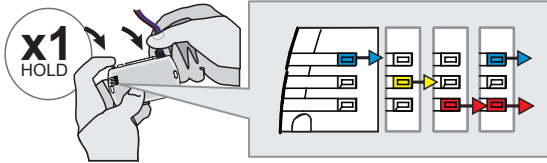

Press and hold the programming button:
Connect the 4-PIN Data-link harness (Black connector).


↳The Blue, Red, Yellow and Blue & Red LEDs will alternatively illuminate.

2

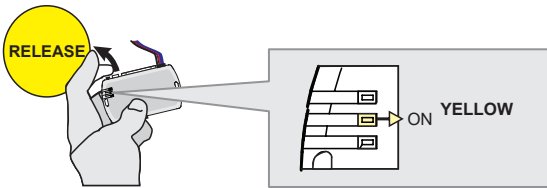


Release the programming button when the LED is YELLOW.

 If the LED is not solid YELLOW disconnect the 4-Pin connector (Data-Link) and go back to step 1.




3

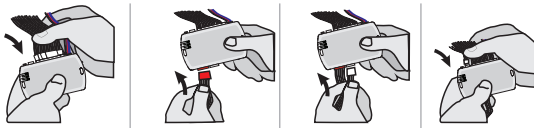

Insert the required remaining connectors.

4

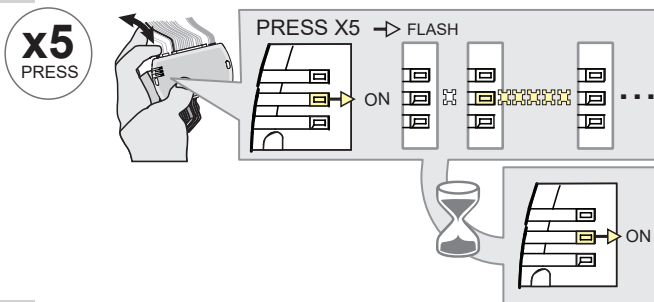


Press and release the programming button five (5x) times.

↳The YELLOW LED will flash 5 times each second.


↳WAIT for the YELLOW LED to turn ON solide.

 5



Open the driver door.

6

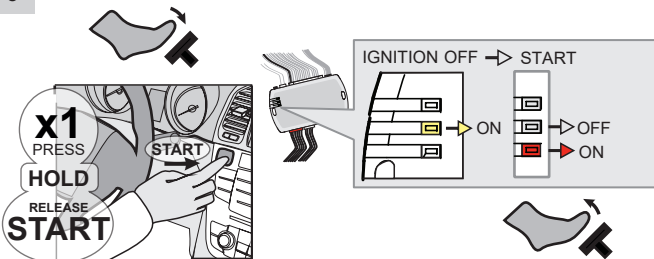

Press the foot-brake pedal.

Press the Push-to-Start button until the engine start.

Release the foot-brake pedal.

↳The RED LED will turn ON.
↳The YELLOW LED will turn OFF.


KEY BYPASS PROGRAMMING PROCEDURE 2/3

7




Press the Push-to-Start button until the engine turn OFF.

8

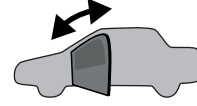

Close and open the driver door.

9

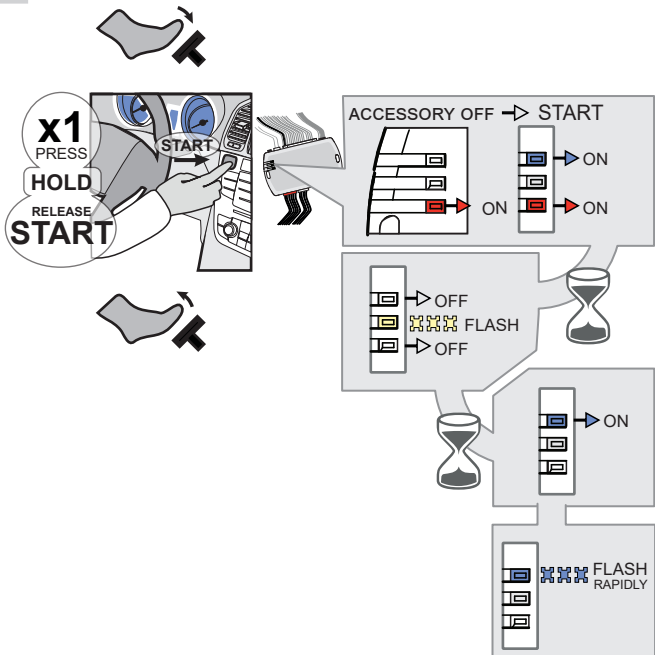


Press the foot-brake pedal.

Press the Push-to-Start button until the engine start.

Release the foot-brake pedal.

- ↳ The BLUE LED will turn ON.
- ↳ The BLUE LED will turn OFF. The RED LED will turn OFF.
- ↳ The YELLOW LED will flash rapidly
- ↳ The BLUE LED will turn ON.
- ↳ The BLUE LED will flash rapidly


10

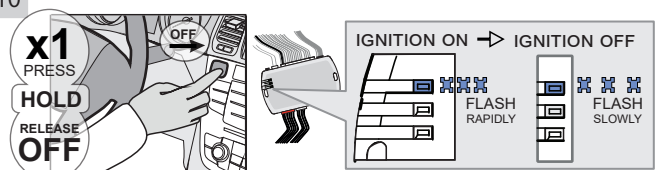

Press the Push-to-Start button until the engine turn OFF.


- ↳ The BLUE LED will flash slowly

11

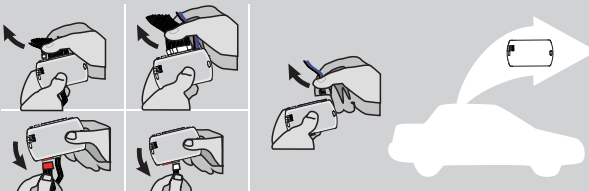

Disconnect all the connectors and after the Data-Link (4-pins) connector.

12


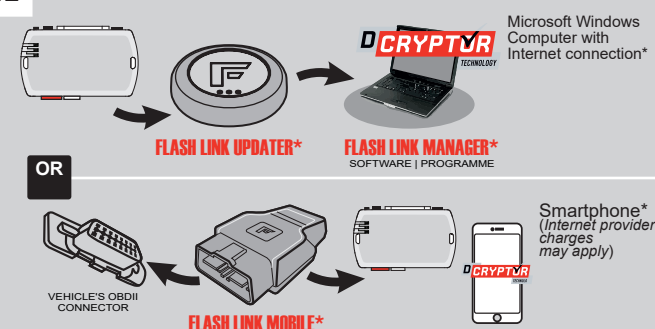


Use the tool: FLASH LINK UPDATER or FLASH LINK MOBILE to visit the DCryptor menu.

***Parts required (not included)**

KEY BYPASS PROGRAMMING PROCEDURE 3/3

13

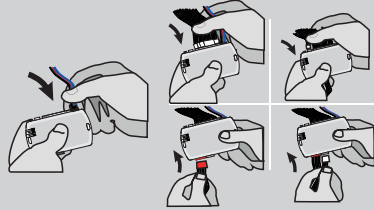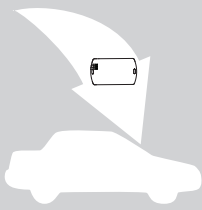

AFTER DCRYPTOR PROGRAMMING COMPLETED
Go back to the vehicle and **reconnect** the 4-Pin (Data-Link) connector and after, all the remaining connector.



The module is now programmed.



REMOTE STARTER / ALARM VERIFICATION PROCEDURE

Test the remote starter. Remote start the vehicle.

REMOTE STARTER FUNCTIONALITY



All doors must be closed.



Remote start the vehicle.



Unlock the doors with either:

- The OEM remote
- The remote-starter remote
- Or the proximity remote



Enter the vehicle with the Intelligent Key.



The vehicle can now be put in to gear and driven.

If the vehicle is not unlocked with one of these conditions the remote-starter will shut down as soon as any door is opened.



THAR-GM6

THARNNESS STAND ALONE INSTALLATION



ONLY COMPATIBLE WITH AUTOMATIC TRANSMISSION VEHICLES.



Vehicle functions supported in this diagram (functional if equipped)

VEHICLE	YEARS	Immobilizer bypass	Lock	Unlock	Arm	Disarm	Trunk (open)	RAP Disable	Tachometer	Door Status	Trunk Status	Hood Status*	Hand-Brake Status	Foot-Brake Status	Push-to-Start Control	OEM Remote monitoring
CADILLAC																
ATS	Push-to-start (AT) 2013-2018	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
CTS	Push-to-start (AT) 2014-2016	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
CTS-V	Push-to-start (AT) 2013-2016	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
Escalade	Push-to-start (AT) 2015-2019	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
CHEVROLET																
Tahoe	Push-to-start (AT) 2015-2019	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
Suburban	Push-to-start (AT) 2015-2019	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
GMC																
Yukon	Push-to-start (AT) 2015-2019	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•

FIRMWARE VERSION

70.[41]

GM MINIMUM

To add the firmware version and the options, use the **FLASH LINK UPDATER** or **FLASH LINK MOBILE** tool, sold separately.

<p>IF THE VEHICLE IS NOT EQUIPPED WITH FUNCTIONAL HOOD PIN:</p>	A11	OFF	Hood trigger (Output Status).
<p>Program bypass option:</p>	UNIT OPTION		
	C1	OEM Remote status (Lock/Unlock) monitoring	
	D6	Push-to-Start	

ATTENTION!

DATE: XX-XX

E5

OFF

ON

SPECIAL FUNCTIONS: BY DEFAULT DEACTIVATED

MANUFACTURED MODULES BETWEEN: 04/2018 TO 04/2019

- Parts required (Not included)**
- 1X Fuse
 - 1X 1 K Ohm Resistor
 - 1X 180 Ohm Resistor)

MANDATORY INSTALL

***HOOD PIN**

HOOD STATUS: THE HOOD PIN SWITCH MUST BE INSTALLED IF THE VEHICLE CAN BE REMOTE STARTED WITH THE HOOD OPEN, SET FUNCTION A11 TO OFF.

A11

OFF

Notice: the installation of safety elements are mandatory. The hood pin is an essential security element and must be installed.

THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.

PARTS REQUIRED (NOT INCLUDED)

1x **FLASH LINK UPDATER**
 1x **FLASH LINK MANAGER**
 SOFTWARE
 1x Microsoft Windows Computer with Internet connection

OR

1x **FLASH LINK MOBILE**
 1x **FLASH LINK MOBILE APP**
 Smartphone *Android* or *iOS* with Internet connection (*provider charges may apply*).
 1x

MANDATORY

HOOD PIN
 CONTACT DE CAPOT






REMOTE START SAFETY OVERRIDE SWITCH

VALET SWITCH


Part #: RSPB available, Sold separately.

Notice: the installation of safety elements are mandatory. The hood pin and the valet switch are essential security elements and must be installed.


STAND ALONE CONFIGURATION

	Program bypass option	UNIT OPTION	DESCRIPTION
	OEM Remote Stand Alone Remote Starter:	D1.10 	By default, LOCK, LOCK, LOCK Par défaut, VERROUILLE,VERROUILLE,VERROUILLE
		D1.1 	
	Program bypass option with oem remote:	C1	OEM Remote Monitoring
	Program bypass option with RF KIT antenna:	H1 to H6	Supported RF Kits and select RF Kit


REMOTE STARTER FUNCTIONALITY




All doors must be closed.

3X 

Press the OEM remote's Lock button 3x to remote-start (or remote-stop) the vehicle.




START 

The vehicle will START.

REMOTE STARTER DIAGNOSTICS
MODULE RED LED

x2 flash :	Brake ON
x3 flash :	No tach
x4 flash :	Ignition before start
x5 flash :	Hood Open

REMOTE STARTER WARNING CARD



CUT THIS WARNING CARD AND STICK IT ON A VISIBLE PLACE:
 or use the package RSPB, Sold separately.

WARNING

REMOTE STARTER



THE VEHICLE CAN BE STARTED BY EITHER: PRESSING THE LOCK BUTTON ON THE OEM REMOTE 3 TIMES CONSECUTIVELY OR BY A SMARTPHONE. **TURN ON** THE SAFETY SWITCH LOCATED UNDER THE DASHBOARD BEFORE WORKING ON THE VEHICLE.

DESCRIPTION




BCM


CTS		ATS
Escalade Tahoe Suburban Yukon	Under driver dash	Behind glove box

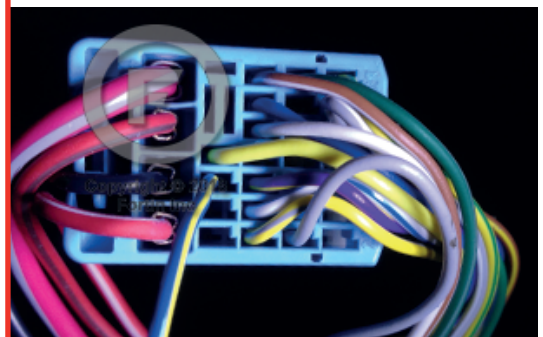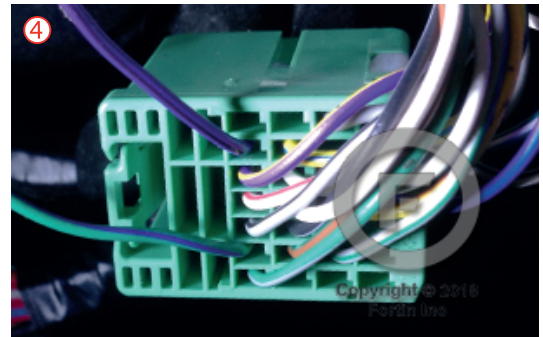

AUTOMATIC TRANSMISSION WIRING CONNECTION

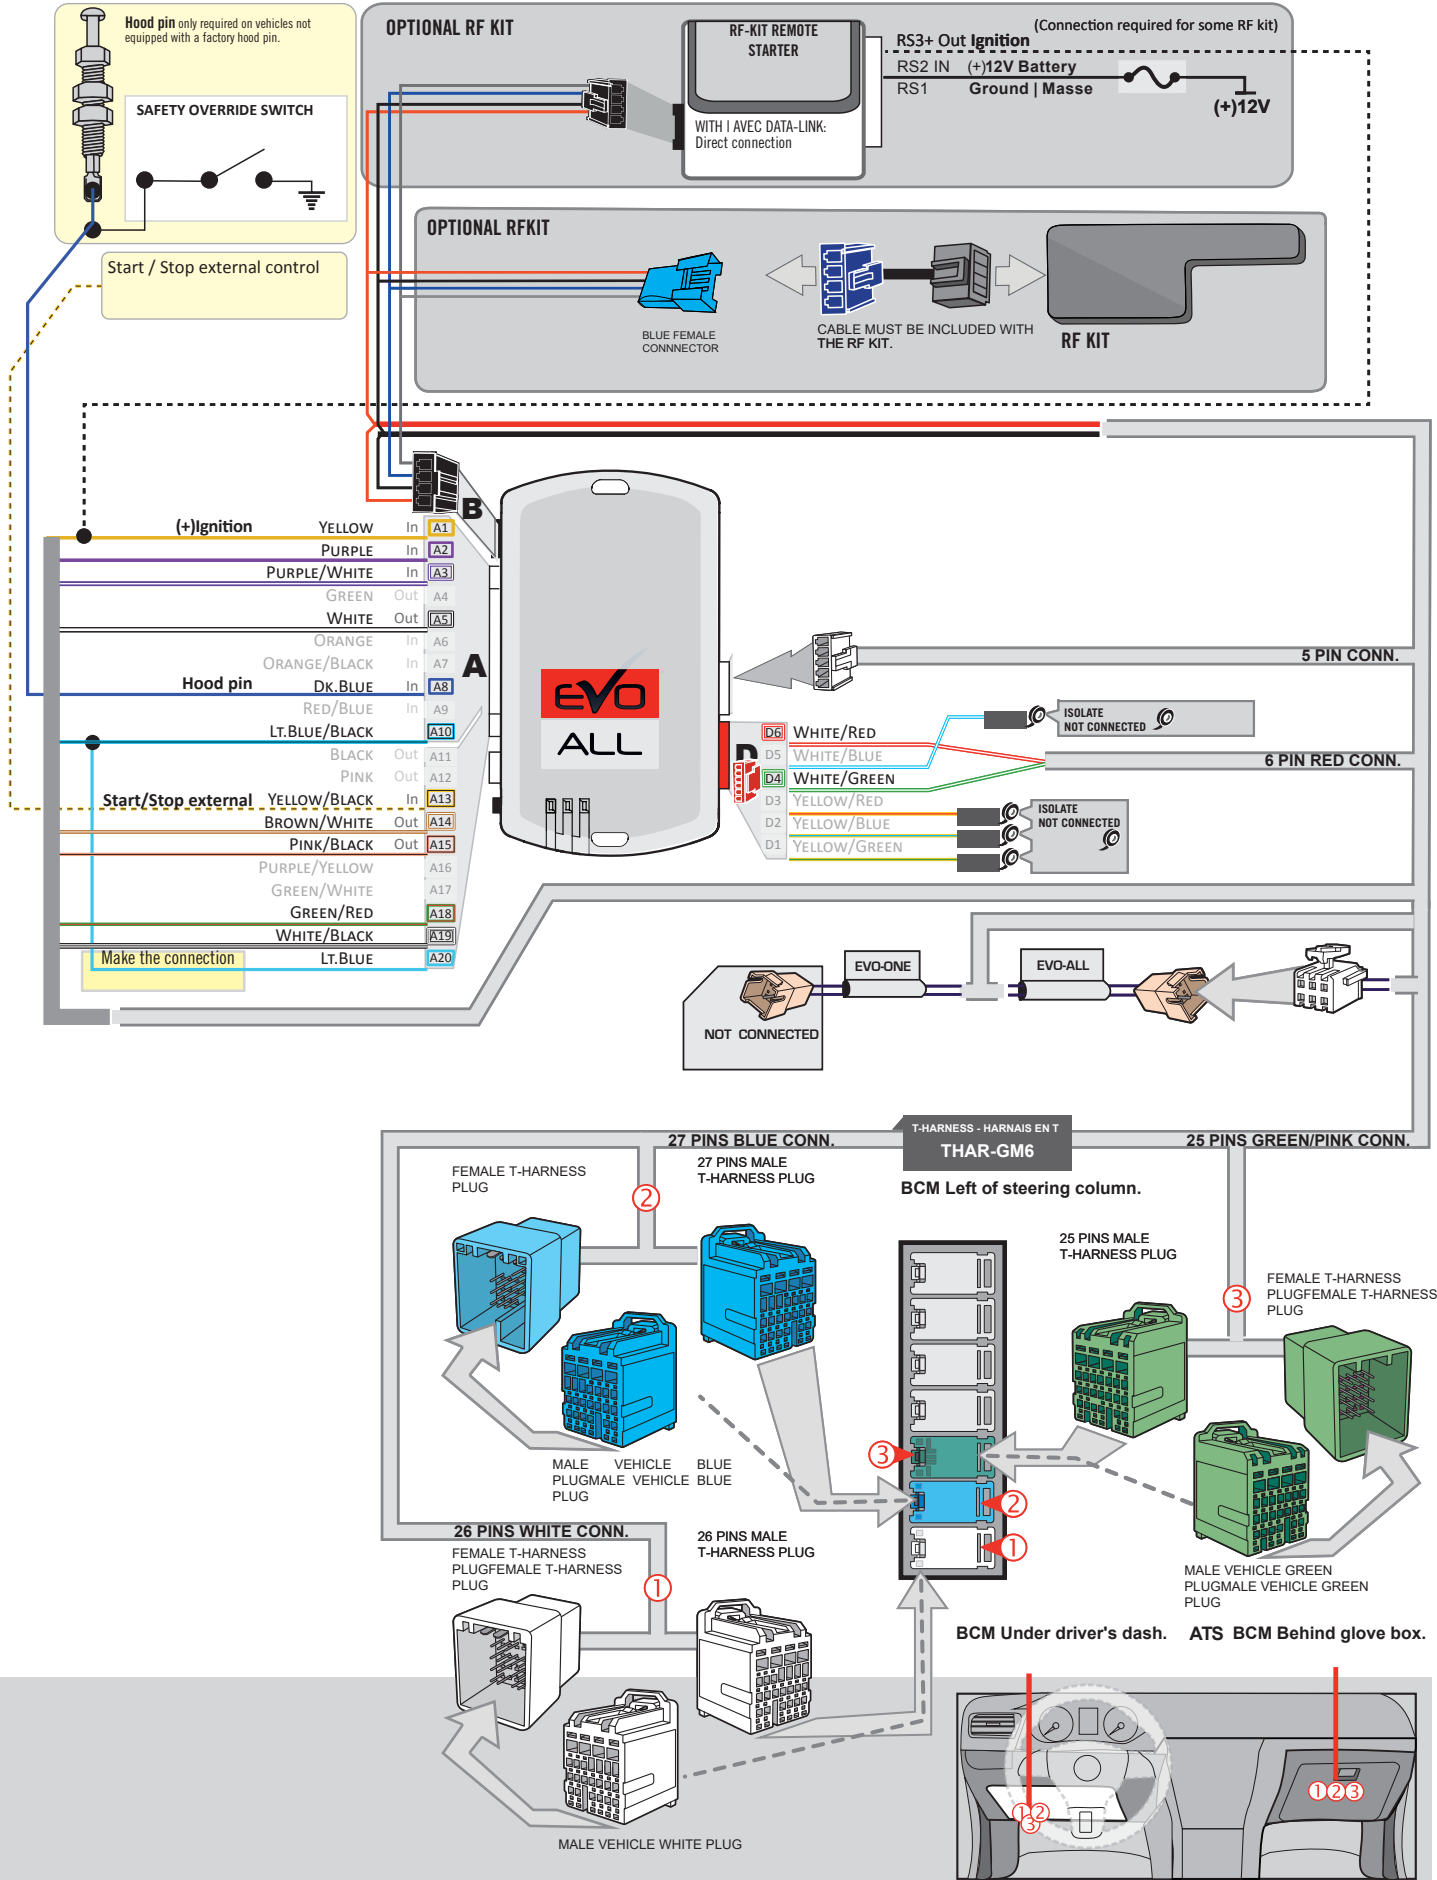


KEY BYPASS PROGRAMMING PROCEDURE 1/3



1 Remove the battery from the OEM remote.

2 Place the OEM remote in the **back** cup holder in the center console.


Refer to vehicle user guide for keyport location.



1 Remove the battery from the OEM remote.

2 Place the transmitter in the transmitter pocket, which is inside the **centre** console storage area.


Refer to vehicle user guide for keyport location.




1 Remove the battery from the OEM remote.


2 Place the transmitter in the transmitter pocket, which is inside the **centre** console storage area.

Refer to vehicle user guide for keyport location.

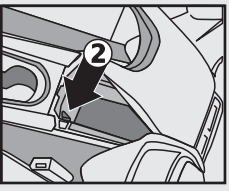

1

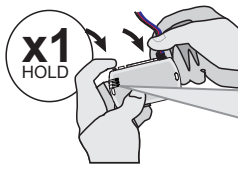


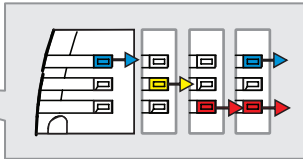


Press and hold the programming button:
Connect the 4-PIN Data-link harness (Black connector).

↳The Blue, Red, Yellow and Blue & Red LEDs will alternatively illuminate.


2

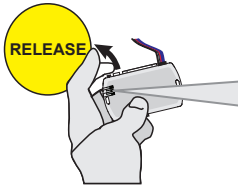

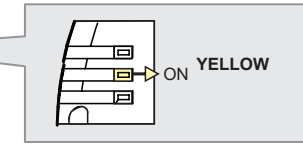


Release the programming button when the LED is **YELLOW**.

If the LED is not solid YELLOW disconnect the 4-Pin connector (Data-Link) and go back to step 1.

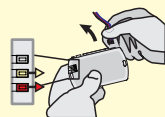


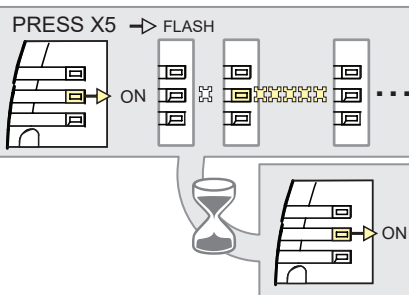
3

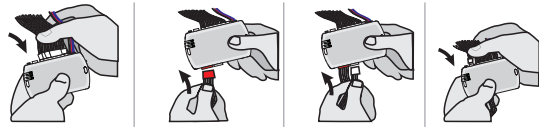

Insert the required remaining connectors.

4






Press and release the programming button five (5x) times.

↳The YELLOW LED will flash 5 times each second.


↳WAIT for the YELLOW LED to turn ON solide.


5

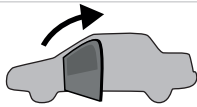

Open the driver door.

6



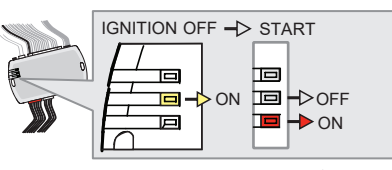

Press the foot-brake pedal.

Press the Push-to-Start button until the engine start.

Release the foot-brake pedal.

↳The RED LED will turn ON.

↳The YELLOW LED will turn OFF.


KEY BYPASS PROGRAMMING PROCEDURE 2/3

7




Press the Push-to-Start button until the engine turn OFF.

8

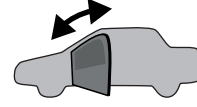

Close and open the driver door.

9

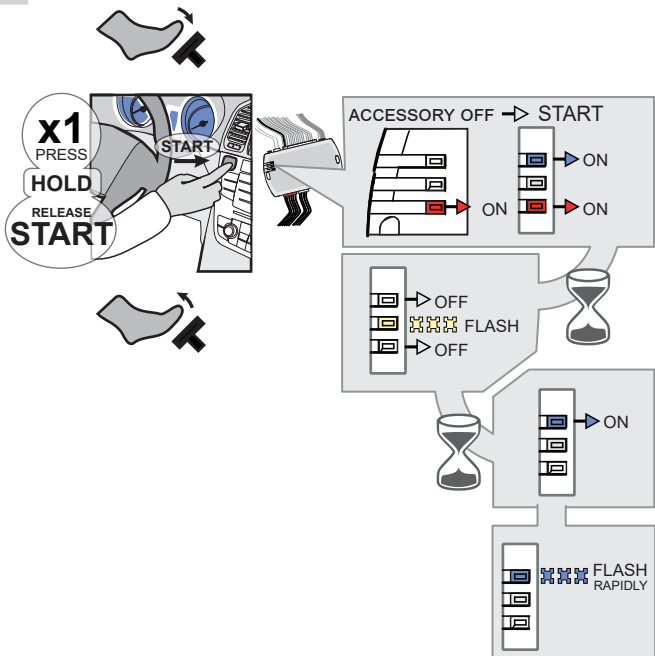


Press the foot-brake pedal.

Press the Push-to-Start button until the engine start.

Release the foot-brake pedal.

- ↳ The BLUE LED will turn ON.
- ↳ The BLUE LED will turn OFF. The RED LED will turn OFF.
- ↳ The YELLOW LED will flash rapidly
- ↳ The BLUE LED will turn ON.
- ↳ The BLUE LED will flash rapidly


10

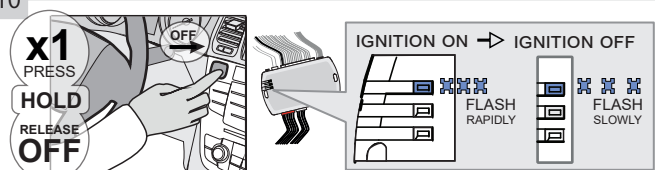

Press the Push-to-Start button until the engine turn OFF.


- ↳ The BLUE LED will flash slowly

11

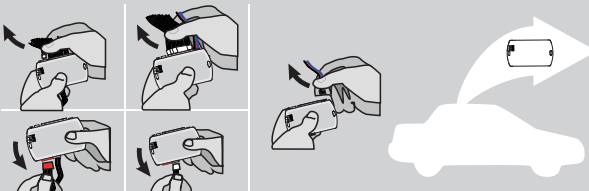

Disconnect all the connectors and after the Data-Link (4-pins) connector.

12


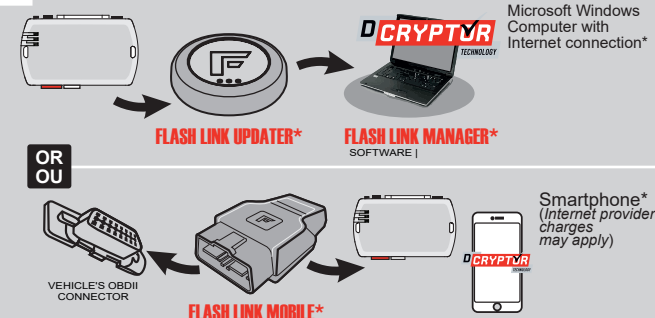


Use the tool: FLASH LINK UPDATER or FLASH LINK MOBILE to visit the DCRYPTOR menu.

*Parts required (not included)

KEY BYPASS PROGRAMMING PROCEDURE 3/3

13

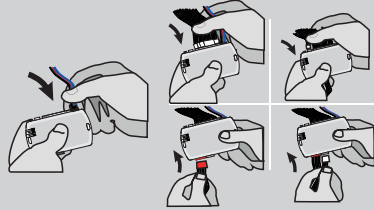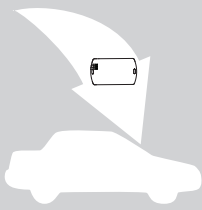

AFTER DCRYPTOR PROGRAMMING COMPLETED
Go back to the vehicle and **reconnect** the 4-Pin (Data-Link) connector and after, all the remaining connector.



The module is now programmed.



REMOTE STARTER / ALARM VERIFICATION PROCEDURE

Test the remote starter. Remote start the vehicle.

REMOTE STARTER FUNCTIONALITY



All doors must be closed.



Remote start the vehicle.



Unlock the doors with either:

- The OEM remote
- The remote-starter remote
- Or the proximity remote



Enter the vehicle with the Intelligent Key.



The vehicle can now be put in to gear and driven.

If the vehicle is not unlocked with one of these conditions the remote-starter will shut down as soon as any door is opened.




THARNNESS STAND ALONE INSTALLATION


THAR-GM6

ADDENDUM - SUGGESTED WIRING CONFIGURATION



ONLY COMPATIBLE WITH AUTOMATIC TRANSMISSION VEHICLES.

VEHICLE VEHICLES	YEARS	Vehicle functions supported in this diagram (functional if equipped)													
		Immobilizer bypass	Lock	Unlock	Arm	Disarm	Trunk (open)	RAP Disable	Tachometer	Heated Seats	Door Status	Trunk Status	Hand-Brake Status	Foot-Brake Status	OEM Remote Monitoring
															
Sonic	Push-To-Start	2017-2018	•	•	•	•	•	•	•	•	•	•	•	•	•
Spark	Push-To-Start	2016-2021	•	•	•	•	•	•	•	•	•	•	•	•	•





FIRMWARE VERSION

70.[45]


GM MINIMUM

To add the firmware version and the options, use the **FLASH LINK UPDATER** or **FLASH LINK MOBILE** tool, sold separately.

	UNIT OPTION	DESCRIPTION	
 <p>Program bypass option:</p>	C1	OEM Remote status (Lock/Unlock) monitoring	
	A11	OFF	Hood trigger (Output Status).
	D6		Push-to-Start



ATTENTION!



DATE: XX-XX

E5

OFF

ON

SPECIAL FUNCTIONS:
BY DEFAULT DEACTIVATED

MANUFACTURED MODULES BETWEEN: 04/2018 TO 04/2019

 **Parts required (Not included)**
1X THAR-GM6

MANDATORY INSTALL

*HOOD PIN



HOOD STATUS: THE HOOD PIN SWITCH MUST BE INSTALLED IF THE VEHICLE CAN BE REMOTE STARTED WITH THE HOOD OPEN, SET FUNCTION **A11** TO OFF.

A11

OFF

Notice: the installation of safety elements are mandatory. The hood pin is an essential security element and must be installed.

THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.


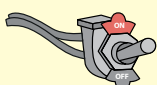
PARTS REQUIRED (NOT INCLUDED)

1x **FLASH LINK UPDATER,**
 1x **FLASH LINK MANAGER**
SOFTWARE | PROGRAMME
 1x Microsoft Windows Computer with Internet connection

OR

1x **FLASH LINK MOBILE**
 1x **FLASH LINK MOBILE APP**
Smartphone Android or iOS with Internet connection (provider charges may apply).

MANDATORY






HOOD PIN  REMOTE START SAFETY OVERRIDE SWITCH 

VALET SWITCH


Part #: RSPB available, Sold separately.

Notice: the installation of safety elements are mandatory. The hood pin and the valet switch are essential security elements and must be installed.



STAND ALONE CONFIGURATION

	Program bypass option	UNIT OPTION	DESCRIPTION
	OEM Remote Stand Alone Remote Starter:	D1.10 	By default, LOCK, LOCK, LOCK Par défaut, VERROUILLE,VERROUILLE,VERROUILLE
		D1.1 	
	Program bypass option with oem remote:	C1	OEM Remote Monitoring
	Program bypass option with RF KIT antenna:	H1 to H6	Supported RF Kits and select RF Kit


REMOTE STARTER FUNCTIONALITY |



All doors must be closed.

3X  

Press the OEM remote's Lock button 3x to remote-start (or remote-stop) the vehicle.




The vehicle will START.

REMOTE STARTER DIAGNOSTICS
MODULE RED LED


x2 flash :	Brake ON
x3 flash :	No tach
x4 flash :	Ignition before start
x5 flash :	Hood Open

REMOTE STARTER WARNING CARD



CUT THIS WARNING CARD AND STICK IT ON A VISIBLE PLACE:
 or use the package RSPB, Sold separately.

WARNING



REMOTE STARTER

THE VEHICLE CAN BE STARTED BY EITHER: PRESSING THE LOCK BUTTON ON THE OEM REMOTE 3 TIMES CONSECUTIVELY OR BY A SMARTPHONE. **TURN ON** THE SAFETY SWITCH LOCATED UNDER THE DASHBOARD BEFORE WORKING ON THE VEHICLE.

DESCRIPTION




BCM




③




②

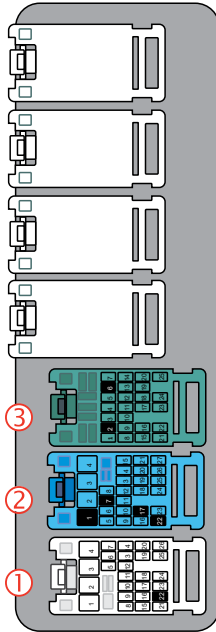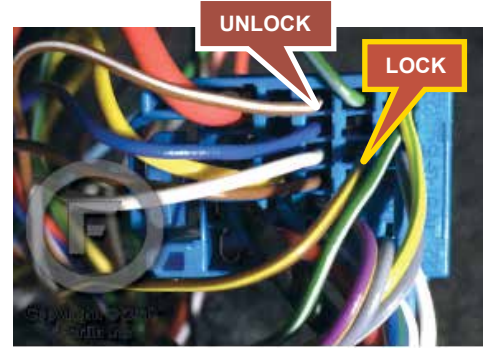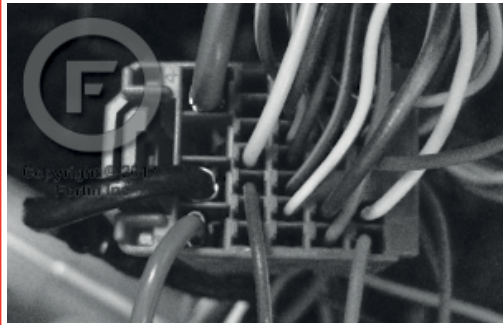

①

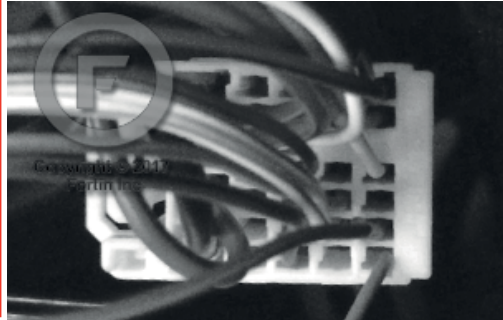

AUTOMATIC TRANSMISSION WIRING CONNECTION

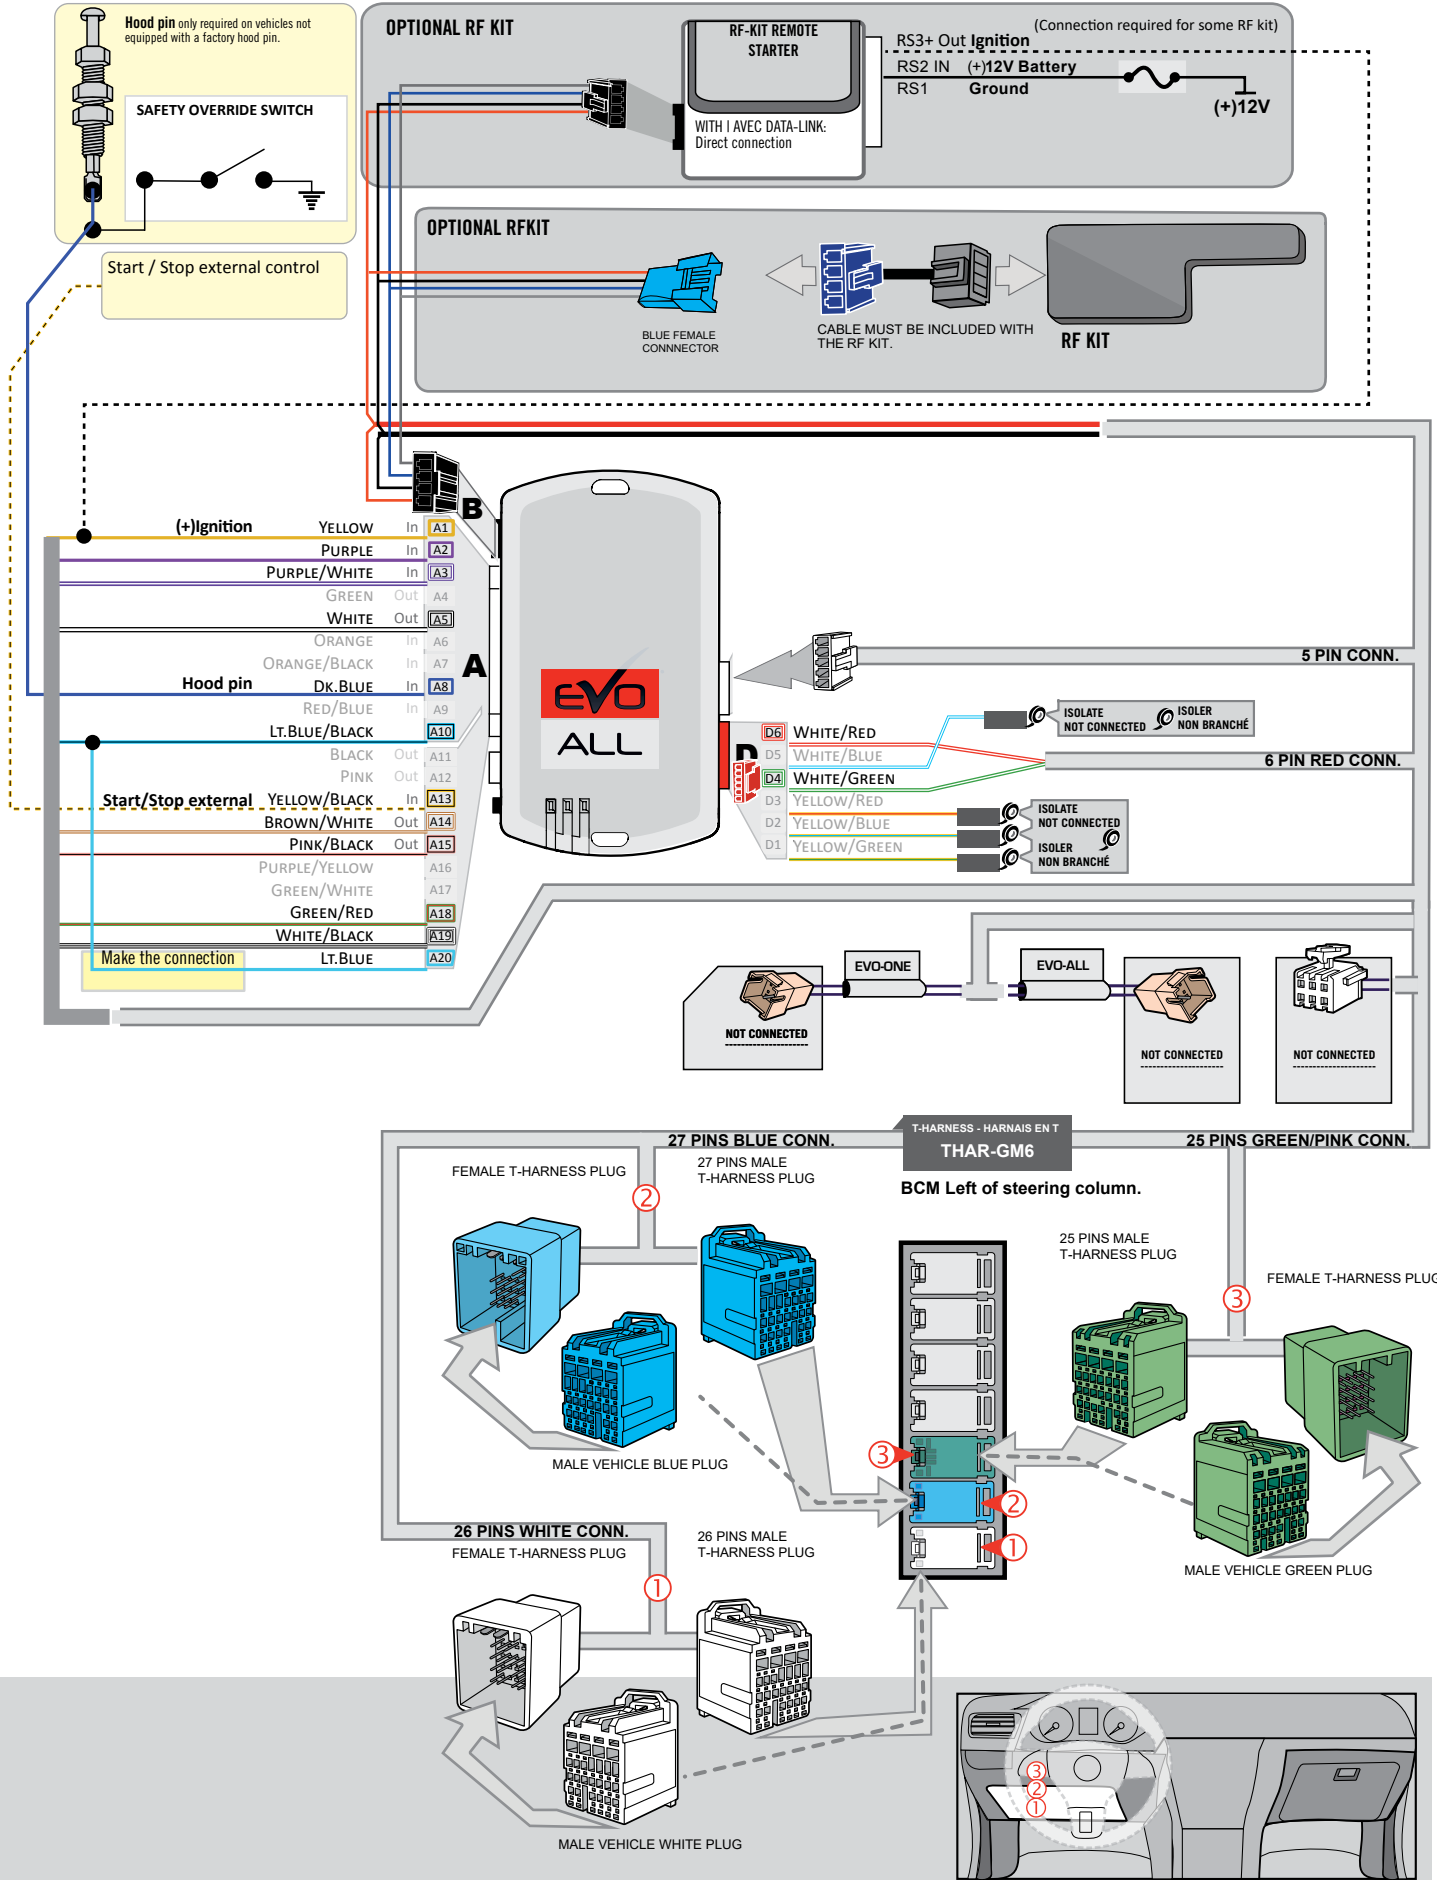


KEY BYPASS PROGRAMMING PROCEDURE 1/3

SONIC



- 1 Remove the battery from the OEM remote.
- 2 Place the OEM remote in the front cup holder in the center console.


Refer to vehicle user guide for keyport location.

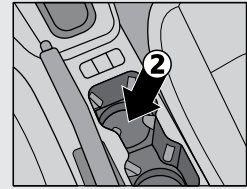


SPARK

- 1 Remove the battery from the OEM remote.
- 2 Place the transmitter in the transmitter pocket, which is inside the centre console storage area.

Refer to vehicle user guide for keyport location.

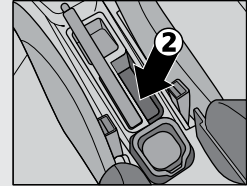


1

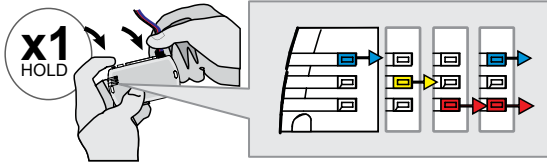

Press and hold the programming button:
Connect the 4-PIN Data-link harness (Black connector).


↳The Blue, Red, Yellow and Blue & Red LEDs will alternatively illuminate.

2

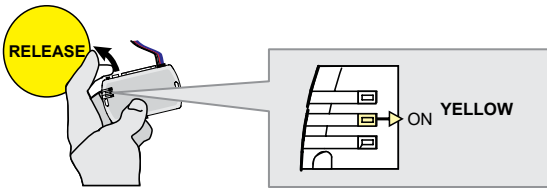


Release the programming button when the LED is YELLOW.

 If the LED is not solid YELLOW disconnect the 4-Pin connector (Data-Link) and go back to step 1.




3

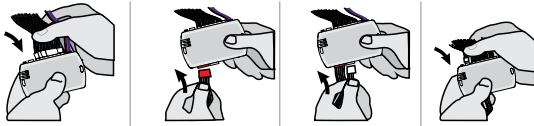

Insert the required remaining connectors.

4

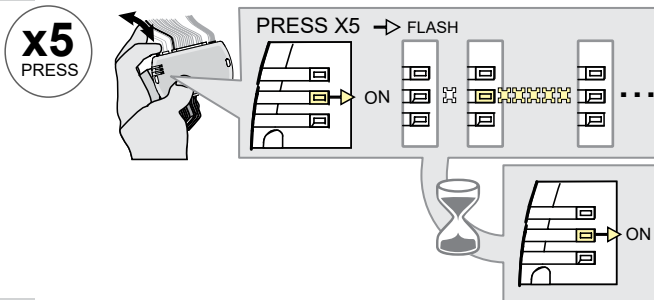


Press and release the programming button five (5x) times.

↳The YELLOW LED will flash 5 times each second.


↳WAIT for the YELLOW LED to turn ON solide.

 5



Open the driver door.

6

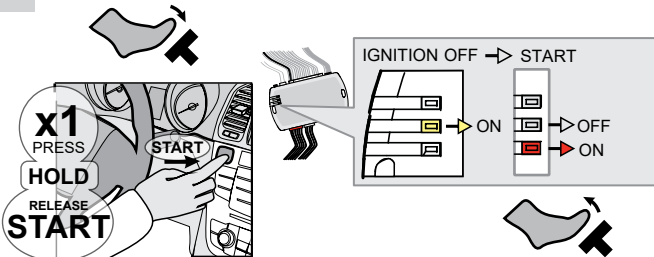

Press the foot-brake pedal.

Press the Push-to-Start button until the engine start.

Release the foot-brake pedal.

↳The RED LED will turn ON.
↳The YELLOW LED will turn OFF.


KEY BYPASS PROGRAMMING PROCEDURE 2/3

7




Press the Push-to-Start button until the engine turn OFF.

8

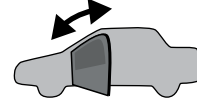

Close and open the driver door.

9

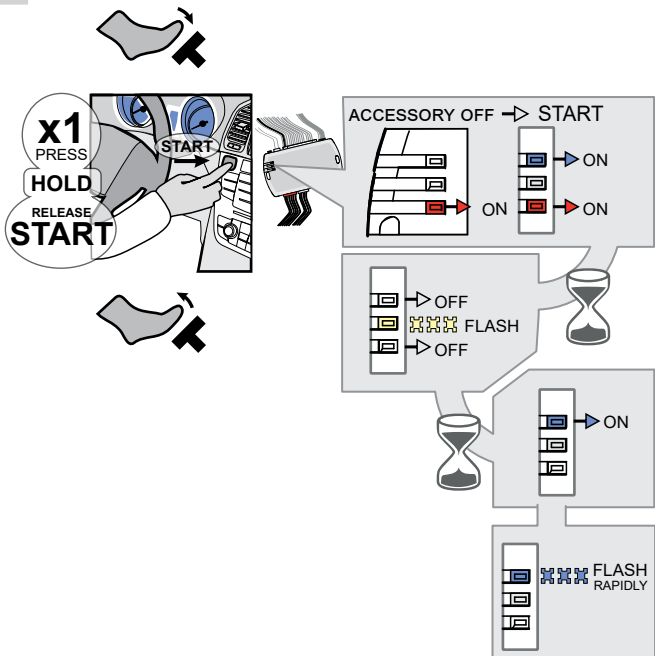


Press the foot-brake pedal.

Press the Push-to-Start button until the engine start.

Release the foot-brake pedal.

- ↳ The BLUE LED will turn ON.
- ↳ The BLUE LED will turn OFF. The RED LED will turn OFF.
- ↳ The YELLOW LED will flash rapidly
- ↳ The BLUE LED will turn ON.
- ↳ The BLUE LED will flash rapidly


10

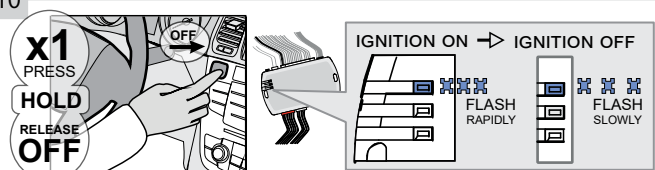

Press the Push-to-Start button until the engine turn OFF.


- ↳ The BLUE LED will flash slowly

11

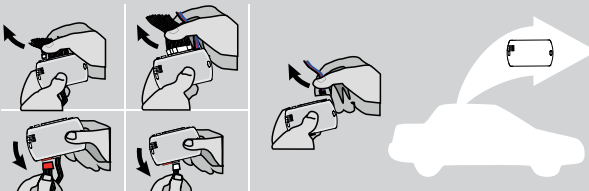

Disconnect all the connectors and after the Data-Link (4-pins) connector.

12


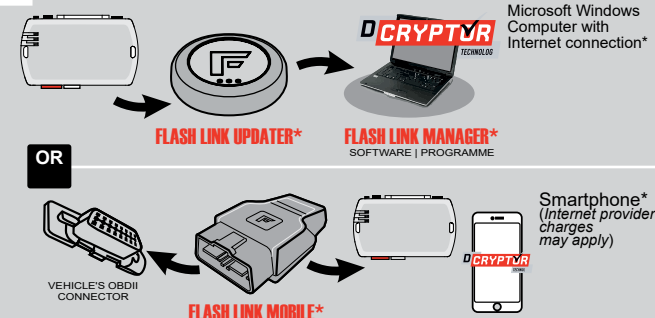


Use the tool: FLASH LINK UPDATER or FLASH LINK MOBILE to visit the DCryptor menu.

***Parts required (not included)**

KEY BYPASS PROGRAMMING PROCEDURE 3/3

13

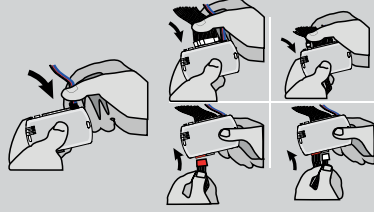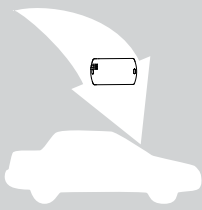

AFTER DCRYPTOR PROGRAMMING COMPLETED
 Go back to the vehicle and **reconnect** the 4-Pin (Data-Link) connector and after, all the remaining connector.



The module is now programmed.



REMOTE STARTER / ALARM VERIFICATION PROCEDURE

Test the remote starter. Remote start the vehicle.

REMOTE STARTER FUNCTIONALITY



All doors must be closed.

Remote start the vehicle.



Press the Unlock button of the remote car starter or the OEM remote.



Enter the vehicle with the Intelligent Access Key.

The vehicle can now be put in to gear and driven.



If the vehicle is not unlocked the module will shut down the remote-starter and the vehicle as soon as any door is opened.

THAR-GM6

THARNNESS STAND ALONE INSTALLATION

ADDENDUM - SUGGESTED WIRING CONFIGURATION



ONLY COMPATIBLE WITH AUTOMATIC TRANSMISSION VEHICLES.



Vehicle functions supported in this diagram (functional if equipped)

VEHICLE	YEARS	Immobilizer bypass	Lock	Unlock	Arm	Disarm	Trunk (open)	Parking Light	RAP Disable	Tachometer	Heated Seats	Door Status	Hood Status	Trunk Status	Hand-Brake Status	Foot-Brake Status	OEM Remote Monitoring
CHEVROLET																	
Corvette	Push-To-Start	2014-2019	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•

FIRMWARE VERSION

70.[41]

GM MINIMUM

To add the firmware version and the options, use the **FLASH LINK UPDATER** or **FLASH LINK MOBILE** tool, sold separately.

<p>IF THE VEHICLE IS NOT EQUIPPED WITH FUNCTIONAL HOOD PIN:</p>	A11	<div style="background-color: red; color: white; padding: 5px; width: 30px; height: 30px; margin: 0 auto;">OFF NON</div>	<p>Hood trigger (Output Status).</p>
--	-----	--	--------------------------------------

		UNIT OPTION	DESCRIPTION
	<p>Program bypass option:</p>	C1	OEM Remote status (Lock/Unlock) monitoring
		D6	Push-to-Start

	<p>ATTENTION!</p>	<p>DATE: XX-XX</p>	E5	<div style="background-color: red; color: white; padding: 5px; width: 30px; height: 30px; margin: 0 auto;">OFF</div>	<p>SPECIAL FUNCTIONS: BY DEFAULT DEACTIVATED</p>
				<div style="background-color: green; color: white; padding: 5px; width: 30px; height: 30px; margin: 0 auto;">ON</div>	<p>MANUFACTURED MODULES BETWEEN: 04/2018 TO 04/2019</p>

Parts required (Not included)

1X THAR-GM6

MANDATORY INSTALL

<p>*HOOD PIN</p>	<p> HOOD STATUS: THE HOOD PIN SWITCH MUST BE INSTALLED IF THE VEHICLE CAN BE REMOTE STARTED WITH THE HOOD OPEN, SET FUNCTION A11 TO OFF.</p>	A11	<div style="background-color: red; color: white; padding: 5px; width: 30px; height: 30px; margin: 0 auto;">OFF</div>	<p>Notice: the installation of safety elements are mandatory. The hood pin is an essential security element and must be installed.</p>	<p>THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.</p>
------------------	--	-----	--	---	---

PARTS REQUIRED (NOT INCLUDED)

1x **FLASH LINK UPDATER,**
 1x **FLASH LINK MANAGER**
 SOFTWARE | PROGRAMME
 1x Microsoft Windows Computer with Internet connection

OR

1x **FLASH LINK MOBILE**
 1x **FLASH LINK MOBILE APP**
 Smartphone *Android* or *iOS* with Internet connection (*provider charges may apply*).

MANDATORY

HOOD PIN



REMOTE START SAFETY OVERRIDE SWITCH


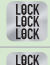





VALET SWITCH


Part #: RSPB available, Sold separately.

Notice: the installation of safety elements are mandatory. The hood pin and the valet switch are essential security elements and must be installed.


STAND ALONE CONFIGURATION

	Program bypass option	UNIT OPTION	DESCRIPTION
	OEM Remote Stand Alone Remote Starter:	D1.10 	By default, LOCK, LOCK, LOCK
		D1.1 	Par défaut, VERROUILLE,VERROUILLE,VERROUILLE
	Program bypass option with oem remote:	C1	OEM Remote Monitoring
	Program bypass option with RF KIT antenna:	H1 to H6	Supported RF Kits and select RF Kit


REMOTE STARTER FUNCTIONALITY




All doors must be closed.

3X 

Press the OEM remote's Lock button 3x to remote-start (or remote-stop) the vehicle.




START 

The vehicle will START.

REMOTE STARTER DIAGNOSTICS
MODULE RED LED

x2 flash :	Brake ON
x3 flash :	No tach
x4 flash :	Ignition before start
x5 flash :	Hood Open

REMOTE STARTER WARNING CARD



CUT THIS WARNING CARD AND STICK IT ON A VISIBLE PLACE:
 or use the package **RSPB**, Sold separately.

WARNING | ATTENTION


REMOTE STARTER

THE VEHICLE CAN BE STARTED BY EITHER: PRESSING THE LOCK BUTTON ON THE OEM REMOTE 3 TIMES CONSECUTIVELY OR BY A SMARTPHONE. **TURN ON** THE SAFETY SWITCH LOCATED UNDER THE DASHBOARD BEFORE WORKING ON THE VEHICLE.


DESCRIPTION



At the BCM

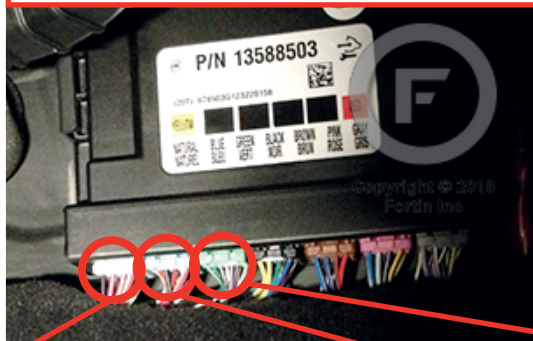


③

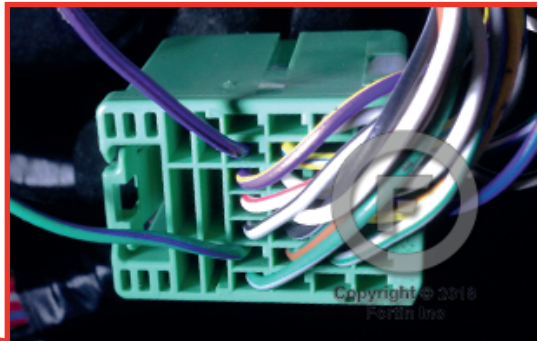


①






②

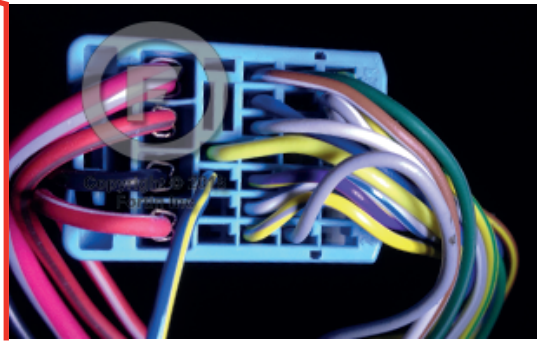


AUTOMATIC TRANSMISSION WIRING CONNECTION

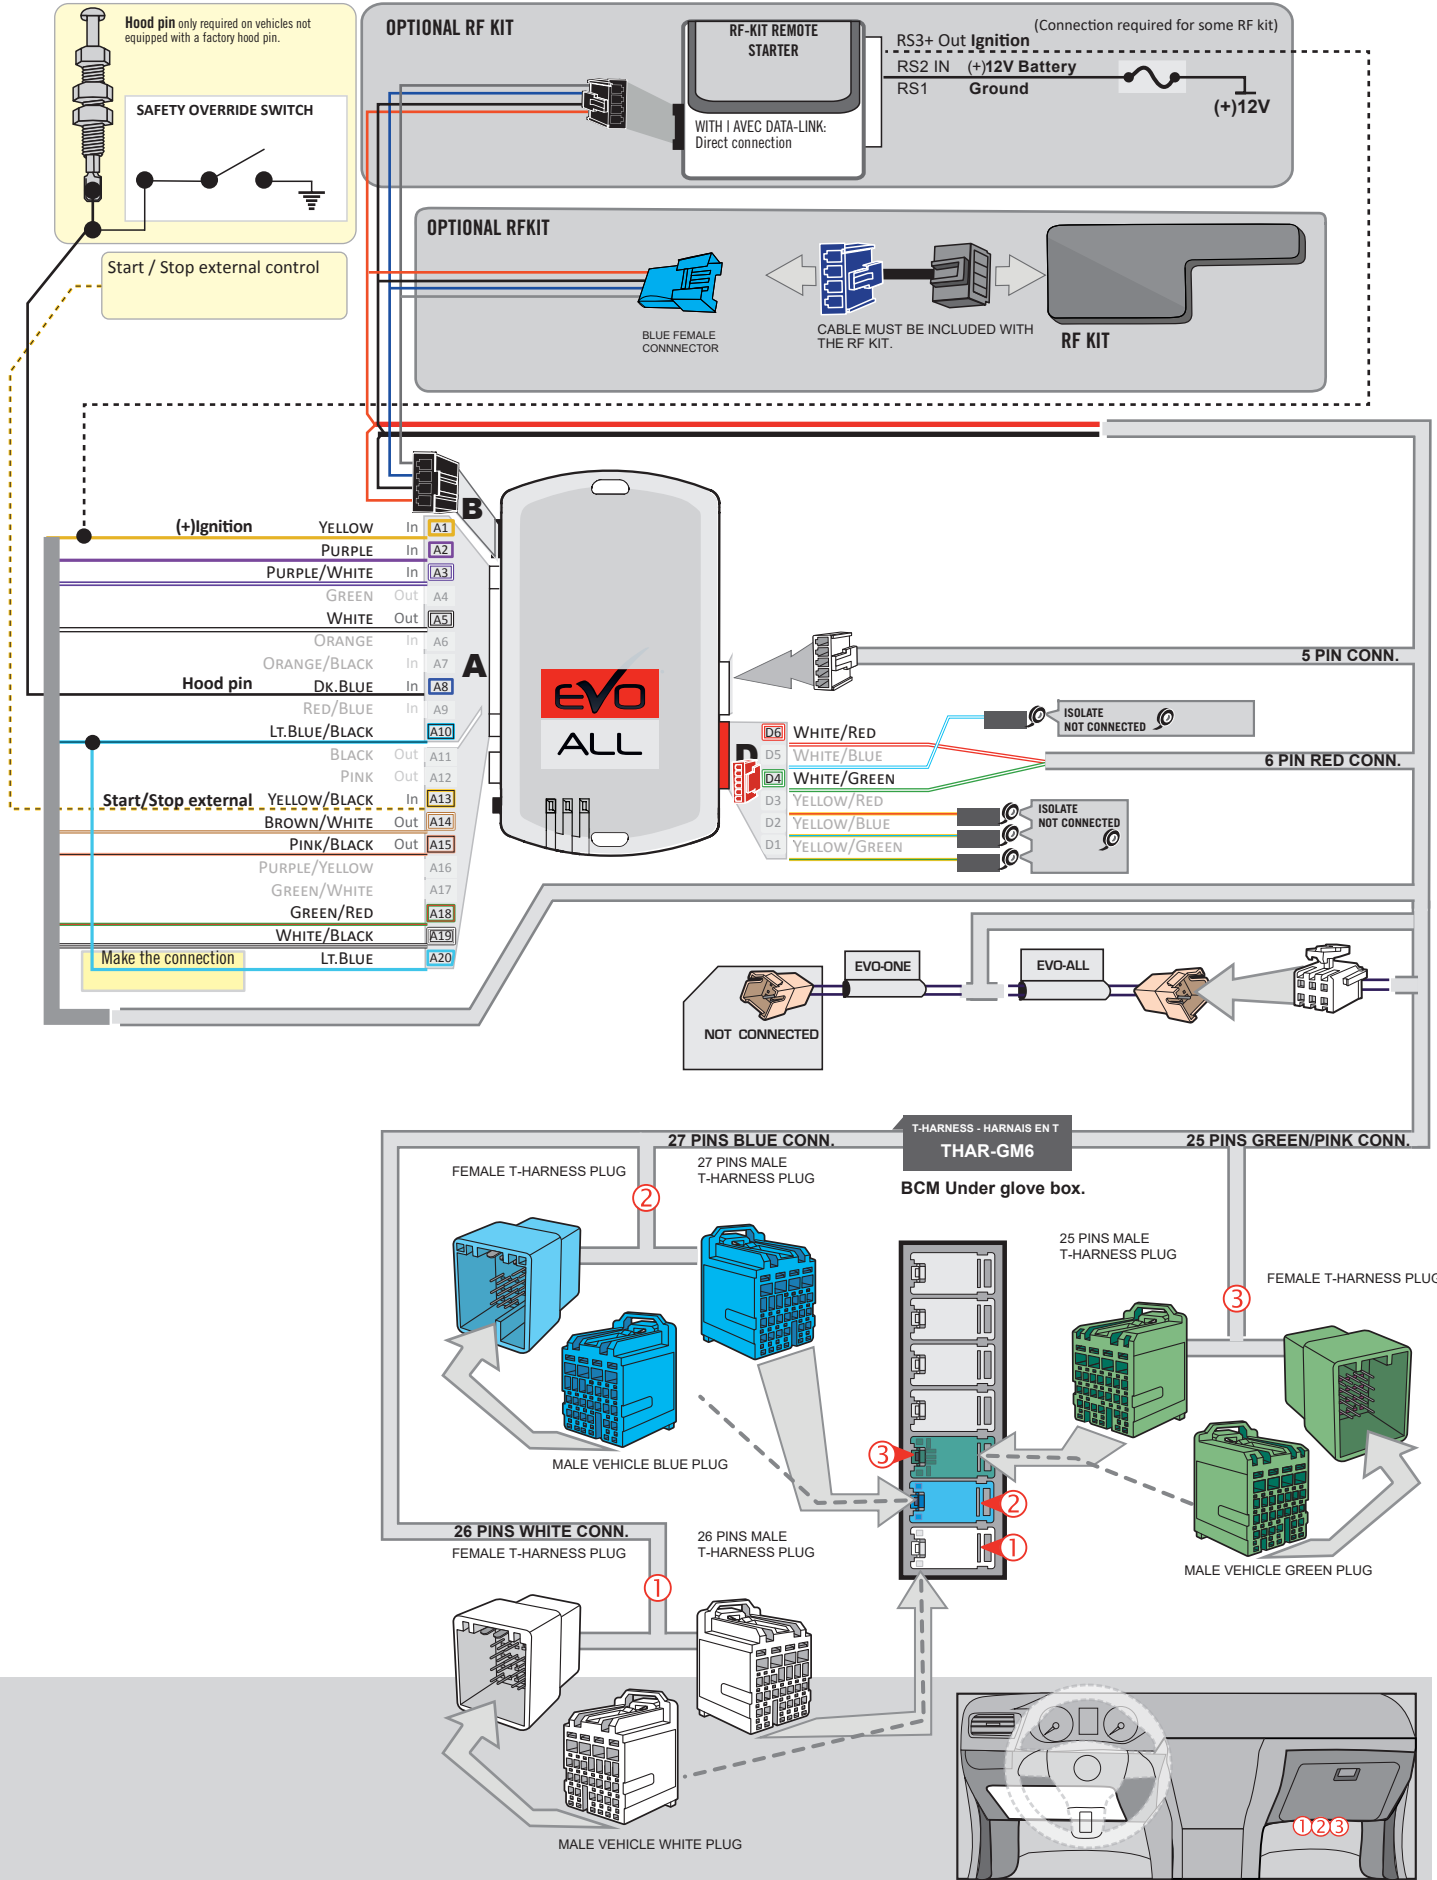

KEY BYPASS PROGRAMMING PROCEDURE 1/3

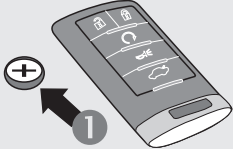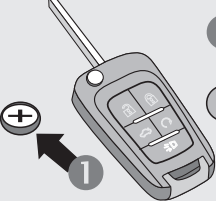FIRST GENERATION	 <p>1 Remove the battery from the OEM remote.</p> <p>2 First generation OEM remotes: Place the OEM remotes in the key older.</p>	
SECOND GENERATION	 <p>1 Remove the battery from the OEM remote.</p> <p>2 Second generation OEM remotes: Place the OEM remotes in to the center console.</p>	


1

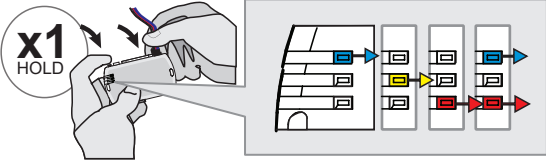

Press and hold the programming button:
Connect the 4-PIN Data-link harness (Black connector).


↳The Blue, Red, Yellow and Blue & Red LEDs will alternatively illuminate.

2

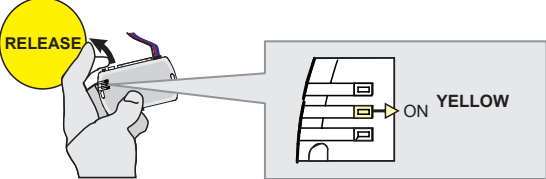


Release the programming button when the LED is YELLOW.

 If the LED is not solid YELLOW disconnect the 4-Pin connector (Data-Link) and go back to step 1.




3

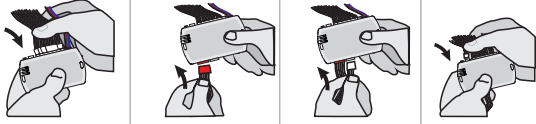

Insert the required remaining connectors.


4

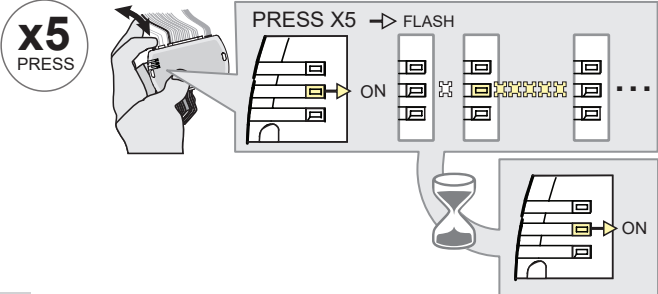

Press and release the programming button five (5x) times.


↳The YELLOW LED will flash 5 times each second.

↳WAIT for the YELLOW LED to turn ON solide.

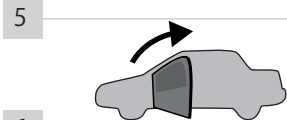

Open the driver door.

6

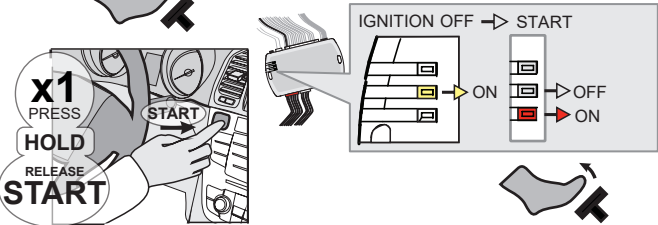

Press the foot-brake pedal.

Press the Push-to-Start button until the engine start.

Release the foot-brake pedal.

↳The RED LED will turn ON.
 ↳The YELLOW LED will turn OFF.


KEY BYPASS PROGRAMMING PROCEDURE 2/3

7




Press the Push-to-Start button until the engine turn OFF.

8

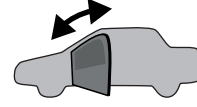

Close and open the driver door.

9

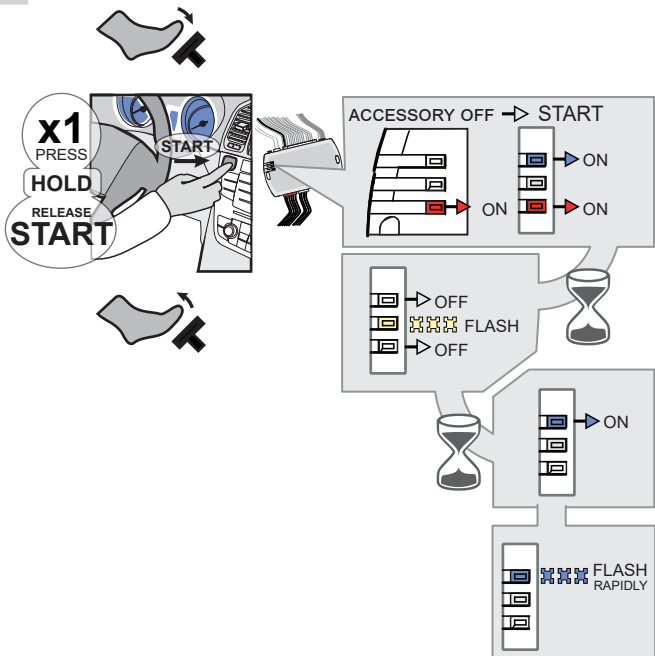


Press the foot-brake pedal.

Press the Push-to-Start button until the engine start.

Release the foot-brake pedal.

- ↳ The BLUE LED will turn ON.
- ↳ The BLUE LED will turn OFF. The RED LED will turn OFF.
- ↳ The YELLOW LED will flash rapidly
- ↳ The BLUE LED will turn ON.
- ↳ The BLUE LED will flash rapidly


10

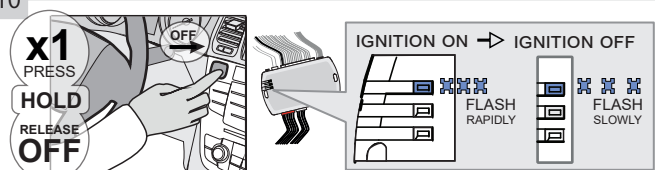

Press the Push-to-Start button until the engine turn OFF.


- ↳ The BLUE LED will flash slowly

11

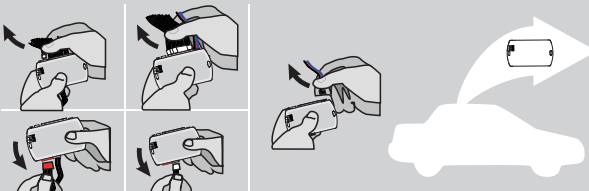

Disconnect all the connectors and after the Data-Link (4-pins) connector.

12


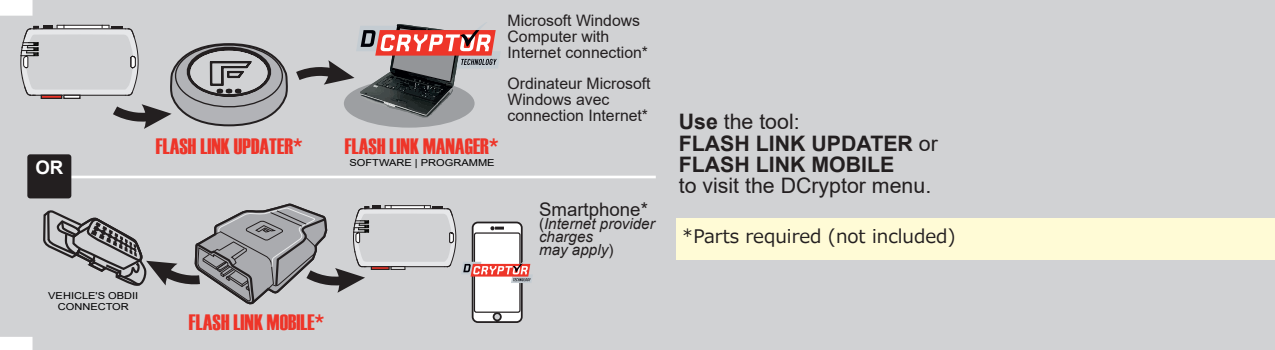


Use the tool: FLASH LINK UPDATER or FLASH LINK MOBILE to visit the DCryptor menu.

***Parts required (not included)**

KEY BYPASS PROGRAMMING PROCEDURE 3/3

13

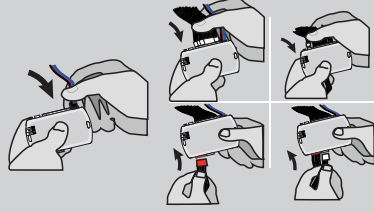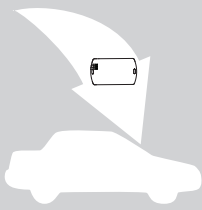

AFTER DCRYPTOR PROGRAMMING COMPLETED
Go back to the vehicle and **reconnect** the 4-Pin (Data-Link) connector and after, all the remaining connector.



The module is now programmed.



REMOTE STARTER / ALARM VERIFICATION PROCEDURE

Test the remote starter. Remote start the vehicle.

REMOTE STARTER FUNCTIONALITY



All doors must be closed.

Remote start the vehicle.



Press the Unlock button of the remote car starter.



Enter the vehicle with the Intelligent Access Key.



The vehicle can now be put in to gear and driven.



If the vehicle is not unlocked the module will shut down the remote-starter and the vehicle as soon as any door is opened.


THAR-GM6


THARNNESS STAND ALONE INSTALLATION

ADDENDUM - SUGGESTED WIRING CONFIGURATION



ONLY COMPATIBLE WITH AUTOMATIC TRANSMISSION VEHICLES.

VEHICLE	YEARS	Vehicle functions supported in this diagram (functional if equipped)															
		Immobilizer bypass	Lock	Unlock	Arm	Disarm	Trunk (open)	RAP Disable	Tachometer	Heated Seats	Door Status	Trunk Status	Hand-Brake Status	Foot-Brake Status	OEM Remote Monitoring		
																	
CHEVROLET																	
Cruze	Push-To-Start	2012-2015	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•




FIRMWARE VERSION


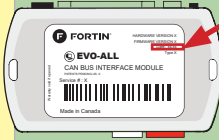
70.[41]


GM MINIMUM

To add the firmware version and the options, use the **FLASH LINK UPDATER** or **FLASH LINK MOBILE** tool, sold separately.

<p>IF THE VEHICLE IS NOT EQUIPPED WITH FUNCTIONAL HOOD PIN:</p>	A11	<input type="checkbox"/>	Hood trigger (Output Status).
--	------------	--------------------------	-------------------------------

	UNIT OPTION	DESCRIPTION
 <p>Program bypass option:</p>	C1	OEM Remote status (Lock/Unlock) monitoring
	D6	Push-to-Start

 <p>ATTENTION!</p>	 <p>DATE: XX-XX</p>	E5	<input type="checkbox"/>	<p>SPECIAL FUNCTIONS: BY DEFAULT DEACTIVATED</p>
		<input type="checkbox"/>	<input type="checkbox"/>	<p>MANUFACTURED MODULES BETWEEN: 04/2018 TO 04/2019</p>



Parts required (Not included)

1X THAR-GM6

MANDATORY INSTALL	<p>*HOOD PIN</p> <p>HOOD STATUS: THE HOOD PIN SWITCH MUST BE INSTALLED IF THE VEHICLE CAN BE REMOTE STARTED WITH THE HOOD OPEN, SET FUNCTION A11 TO OFF.</p>	A11	<input type="checkbox"/>	<p>Notice: the installation of safety elements are mandatory. The hood pin is an essential security element and must be installed.</p>	<p>THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.</p>
--------------------------	---	------------	--------------------------	---	---

PARTS REQUIRED (NOT INCLUDED)

1x **FLASH LINK UPDATER,**
 1x **FLASH LINK MANAGER**
SOFTWARE | PROGRAMME
 1x Microsoft Windows Computer with Internet connection

OR

1x **FLASH LINK MOBILE**
 1x **FLASH LINK MOBILE APP**
Smartphone Android or iOS with Internet connection (provider charges may apply).

MANDATORY


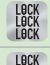



HOOD PIN  REMOTE START SAFETY OVERRIDE SWITCH 

VALET SWITCH


Part #: RSPB available, Sold separately.

Notice: the installation of safety elements are mandatory. The hood pin and the valet switch are essential security elements and must be installed.



STAND ALONE CONFIGURATION

	Program bypass option	UNIT OPTION	DESCRIPTION
	OEM Remote Stand Alone Remote Starter:	D1.10 	By default, LOCK, LOCK, LOCK Par défaut, VERROUILLE,VERROUILLE,VERROUILLE
		D1.1 	
	Program bypass option with oem remote:	C1	OEM Remote Monitoring
	Program bypass option with RF KIT antenna:	H1 to H6	Supported RF Kits and select RF Kit


REMOTE STARTER FUNCTIONALITY



All doors must be closed.

3X  

Press the OEM remote's Lock button 3x to remote-start (or remote-stop) the vehicle.




The vehicle will START.

REMOTE STARTER DIAGNOSTICS
MODULE RED LED

x2 flash :	Brake ON
x3 flash :	No tach
x4 flash :	Ignition before start
x5 flash :	Hood Open

REMOTE STARTER WARNING CARD



CUT THIS WARNING CARD AND STICK IT ON A VISIBLE PLACE:
 or use the package RSPB, Sold separately.

WARNING


REMOTE STARTER

THE VEHICLE CAN BE STARTED BY EITHER: PRESSING THE LOCK BUTTON ON THE OEM REMOTE 3 TIMES CONSECUTIVELY OR BY A SMARTPHONE. **TURN ON** THE SAFETY SWITCH LOCATED UNDER THE DASHBOARD BEFORE WORKING ON THE VEHICLE.

DESCRIPTION




BCM

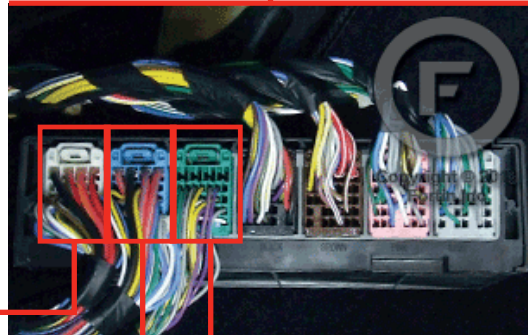


①




②

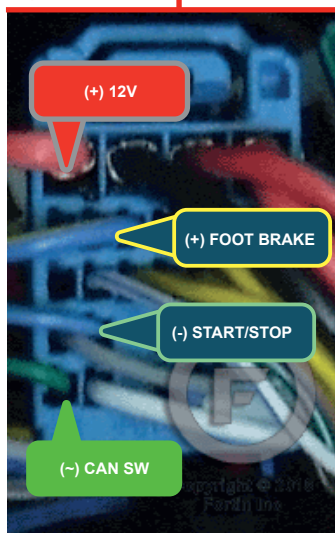




③

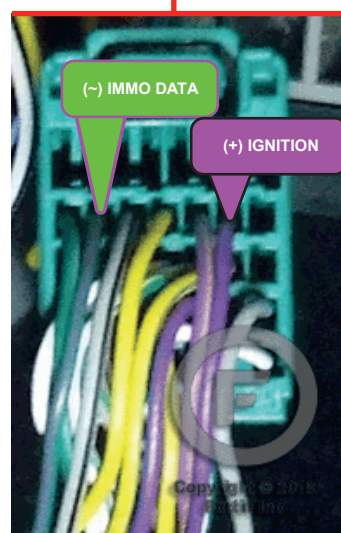


AUTOMATIC TRANSMISSION WIRING CONNECTION

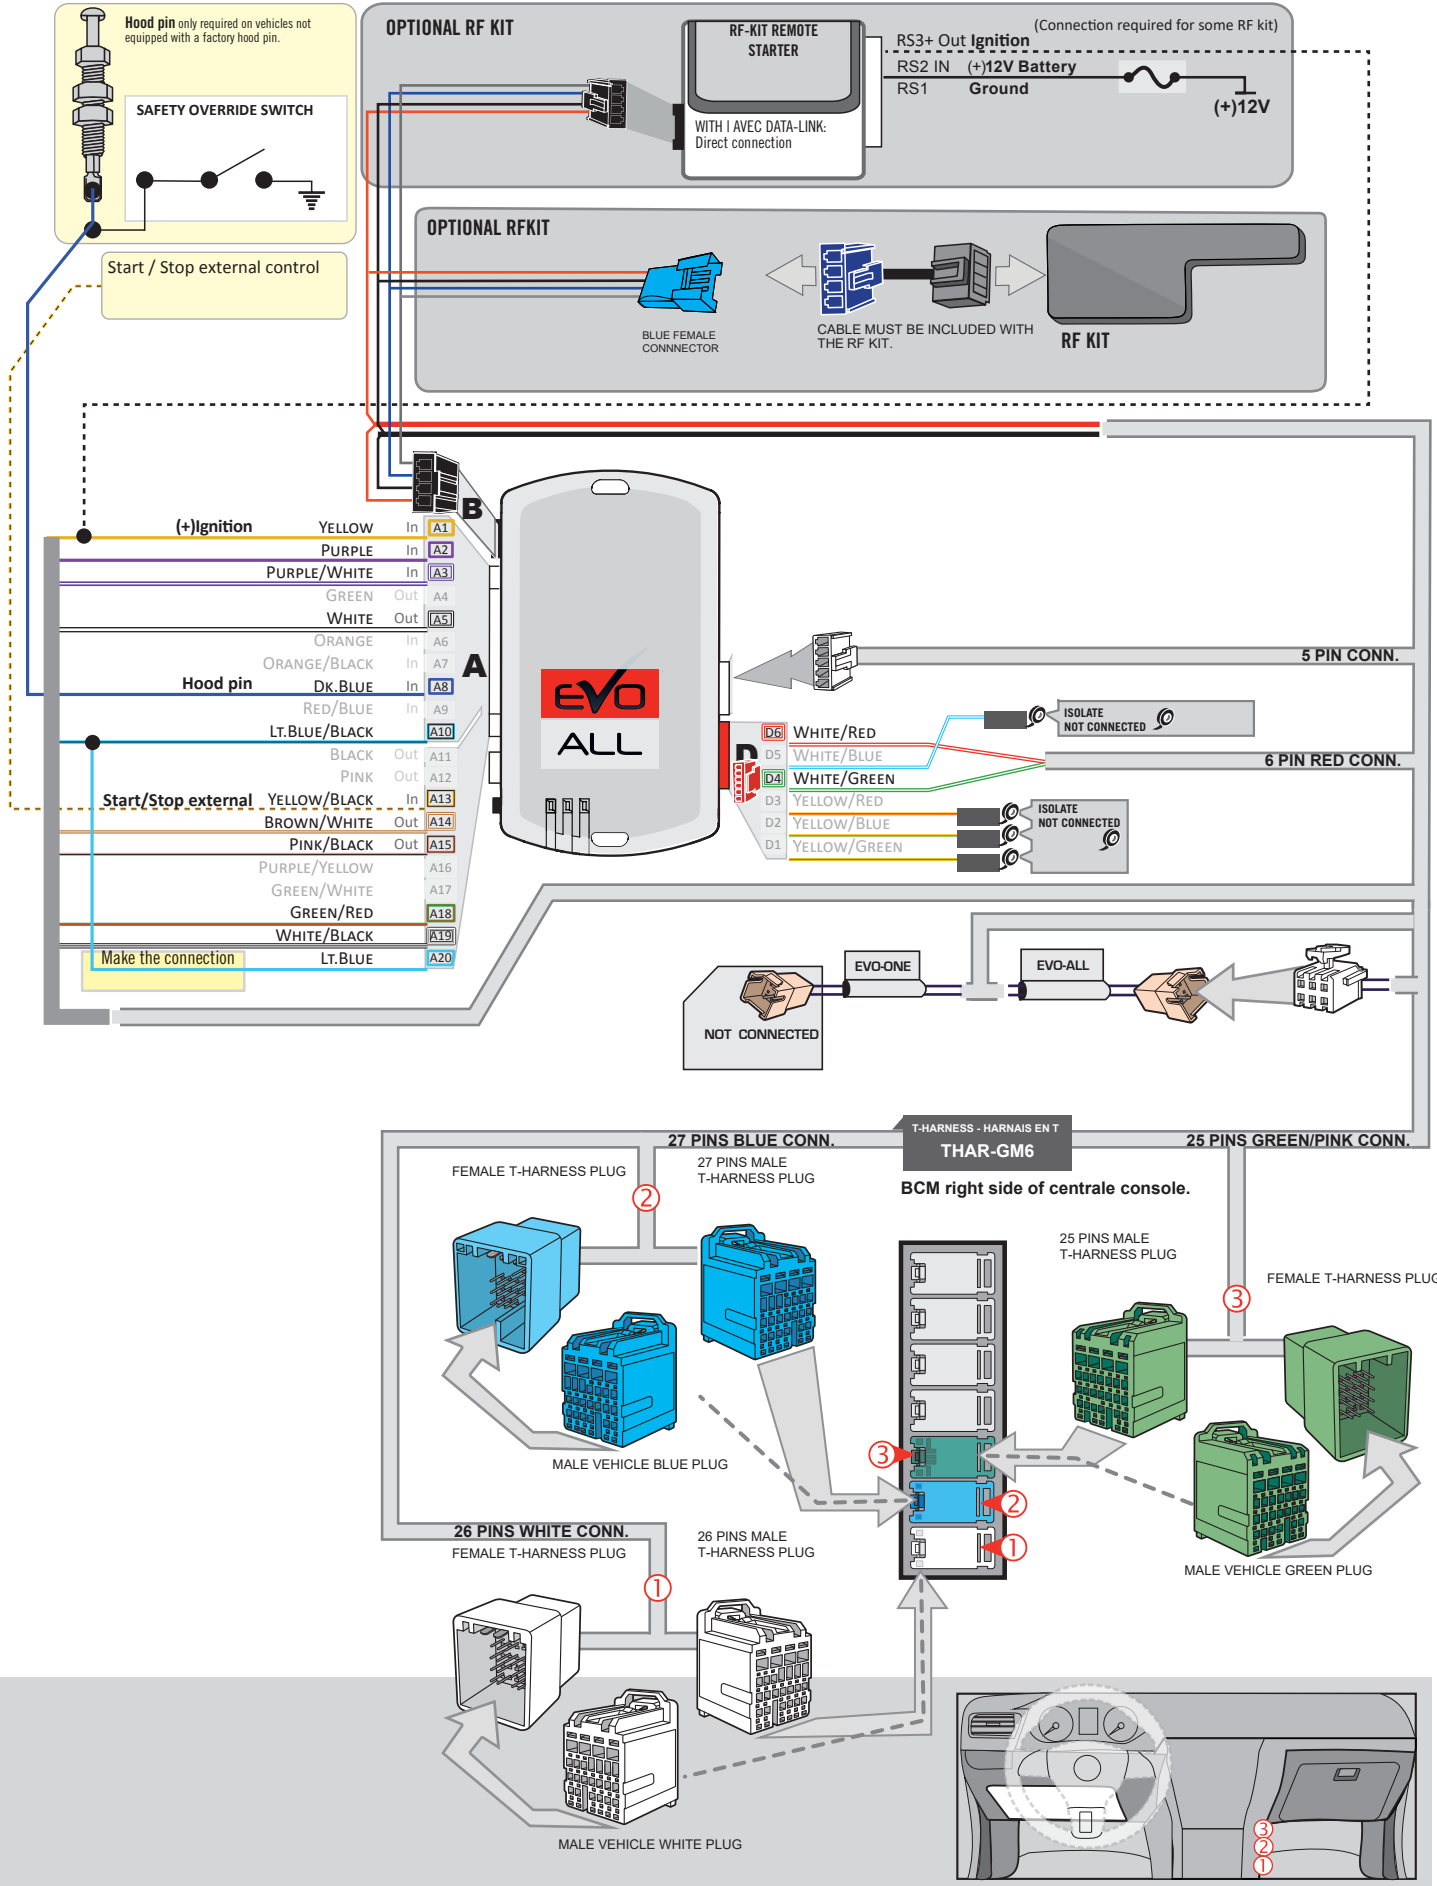

KEY BYPASS PROGRAMMING PROCEDURE 1/3

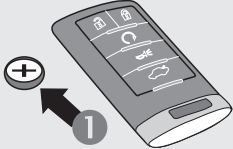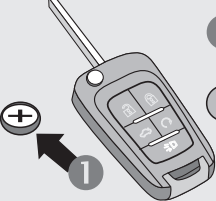
FIRST GENERATION	 <p>1 Remove the battery from the OEM remote.</p> <p>2 First generation OEM remotes: Place the OEM remotes in the key older.</p>	
SECOND GENERATION	 <p>1 Remove the battery from the OEM remote.</p> <p>2 Second generation OEM remotes: Place the OEM remotes in to the center console.</p>	

1

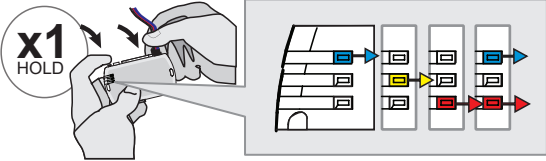


Press and hold the programming button:
Connect the 4-PIN Data-link harness (Black connector).
 ↳The Blue, Red, Yellow and Blue & Red LEDs will alternatively illuminate.

2

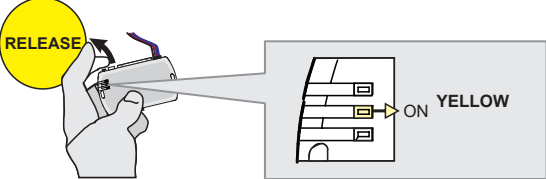


Release the programming button when the LED is YELLOW.
 If the LED is not solid YELLOW disconnect the 4-Pin connector (Data-Link) and go back to step 1.

3

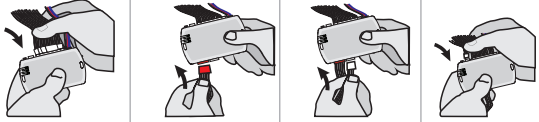


Insert the required remaining connectors.

4

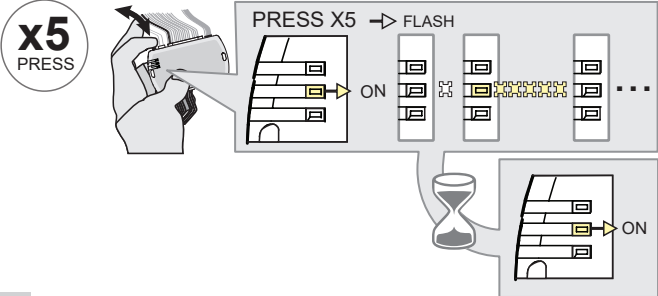


Press and release the programming button five (5x) times.
 ↳The YELLOW LED will flash 5 times each second.
 ↳WAIT for the YELLOW LED to turn ON solide.

5

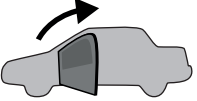

Open the driver door.

6

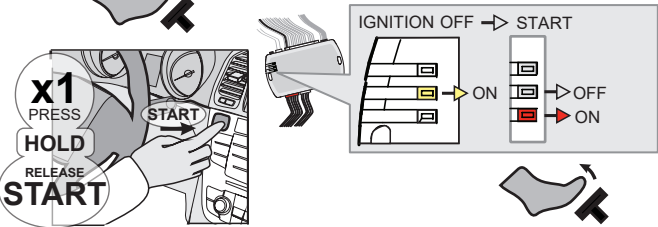

Press the foot-brake pedal.
Press the Push-to-Start button until the engine start.
Release the foot-brake pedal.
 ↳The RED LED will turn ON.
 ↳The YELLOW LED will turn OFF.

KEY BYPASS PROGRAMMING PROCEDURE 2/3

7

Press the Push-to-Start button until the engine turn OFF.

8

Close and open the driver door.

9

Press the foot-brake pedal.

Press the Push-to-Start button until the engine start.

Release the foot-brake pedal.

- ↳ The BLUE LED will turn ON.
- ↳ The BLUE LED will turn OFF. The RED LED will turn OFF.
- ↳ The YELLOW LED will flash rapidly
- ↳ The BLUE LED will turn ON.
- ↳ The BLUE LED will flash rapidly

10

Press the Push-to-Start button until the engine turn OFF.

- ↳ The BLUE LED will flash slowly

11

Disconnect all the connectors and after the Data-Link (4-pins) connector.



12

Use the tool: FLASH LINK UPDATER or FLASH LINK MOBILE to visit the DCRYPTOR menu.

***Parts required (not included)**

KEY BYPASS PROGRAMMING PROCEDURE 3/3

13

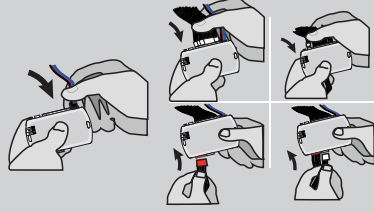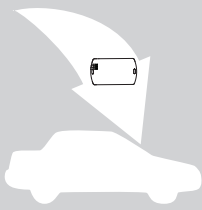

AFTER DCRYPTOR PROGRAMMING COMPLETED
Go back to the vehicle and **reconnect** the 4-Pin (Data-Link) connector and after, all the remaining connector.



The module is now programmed.



REMOTE STARTER / ALARM VERIFICATION PROCEDURE

Test the remote starter. Remote start the vehicle.

REMOTE STARTER FUNCTIONALITY



All doors must be closed.

Remote start the vehicle.



Press the Unlock button of the remote car starter.



Enter the vehicle with the Intelligent Access Key.



The vehicle can now be put in to gear and driven.



If the vehicle is not unlocked the module will shut down the remote-starter and the vehicle as soon as any door is opened.

THAR-GM6

THARNNESS STAND ALONE INSTALLATION

ADDENDUM - SUGGESTED WIRING CONFIGURATION



ONLY COMPATIBLE WITH AUTOMATIC TRANSMISSION VEHICLES.



Vehicle functions supported in this diagram (functional if equipped)

VEHICLE	YEARS	Immobilizer bypass	Lock	Unlock	Arm	Disarm	Trunk (open)	RAP Disable	Tachometer	Heated Seats	Door Status	Trunk Status	Hand-Brake Status	Foot-Brake Status	OEM Remote Monitoring
CHEVROLET															
Cruze	Push-To-Start	2016-2019	•	•	•	•	•	•	•	•	•	•	•	•	•

FIRMWARE VERSION

70.[41]

GM MINIMUM

To add the firmware version and the options, use the **FLASH LINK UPDATER** or **FLASH LINK MOBILE** tool, sold separately.

<p style="color: red; font-weight: bold;">IF THE VEHICLE IS NOT EQUIPPED WITH FUNCTIONAL HOOD PIN:</p>	A11	OFF	Hood trigger (Output Status).
--	-----	-----	-------------------------------

	Program bypass option:	UNIT OPTION	DESCRIPTION
		C1	OEM Remote status (Lock/Unlock) monitoring
		D6	Push-to-Start

	ATTENTION!	<p>DATE: XX-XX</p>	E5	OFF	<p>SPECIAL FUNCTIONS: BY DEFAULT DEACTIVATED</p>
				ON	<p>MANUFACTURED MODULES BETWEEN: 04/2018 TO 04/2019 M</p>

Parts required (Not included)

1X THAR-GM6

MANDATORY INSTALL

***HOOD PIN**

HOOD STATUS: THE HOOD PIN SWITCH MUST BE INSTALLED IF THE VEHICLE CAN BE REMOTE STARTED WITH THE HOOD OPEN, SET FUNCTION **A11** TO OFF.

A11	OFF
-----	-----

Notice: the installation of safety elements are mandatory. The hood pin is an essential security element and must be installed.

THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.

PARTS REQUIRED (NOT INCLUDED)

1x **FLASH LINK UPDATER,**
 1x **FLASH LINK MANAGER**
 SOFTWARE | PROGRAMME
 1x Microsoft Windows Computer with Internet connection

OR

1x **FLASH LINK MOBILE**
 1x **FLASH LINK MOBILE APP**
 Smartphone *Android* or *iOS* with Internet connection (*provider charges may apply*).

MANDATORY

HOOD PIN



REMOTE START SAFETY OVERRIDE SWITCH


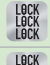





VALET SWITCH


Part #: RSPB available, Sold separately.

Notice: the installation of safety elements are mandatory. The hood pin and the valet switch are essential security elements and must be installed.


STAND ALONE CONFIGURATION

	Program bypass option	UNIT OPTION	DESCRIPTION
	OEM Remote Stand Alone Remote Starter:	D1.10 	By default, LOCK, LOCK, LOCK Par défaut, VERROUILLE,VERROUILLE,VERROUILLE
		D1.1 	
	Program bypass option with oem remote:	C1	OEM Remote Monitoring
	Program bypass option with RF KIT antenna:	H1 to H6	Supported RF Kits and select RF Kit


REMOTE STARTER FUNCTIONALITY



All doors must be closed.

3X 

Press the OEM remote's Lock button 3x to remote-start (or remote-stop) the vehicle.




START

The vehicle will START.

REMOTE STARTER DIAGNOSTICS
MODULE RED LED

x2 flash :	Brake ON
x3 flash :	No tach
x4 flash :	Ignition before start
x5 flash :	Hood Open

REMOTE STARTER WARNING CARD



CUT THIS WARNING CARD AND STICK IT ON A VISIBLE PLACE:
 or use the package RSPB, Sold separately.

WARNING


REMOTE STARTER

THE VEHICLE CAN BE STARTED BY EITHER: PRESSING THE LOCK BUTTON ON THE OEM REMOTE 3 TIMES CONSECUTIVELY OR BY A SMARTPHONE. **TURN ON** THE SAFETY SWITCH LOCATED UNDER THE DASHBOARD BEFORE WORKING ON THE VEHICLE.

DESCRIPTION




BCM, Above Driver kick panel

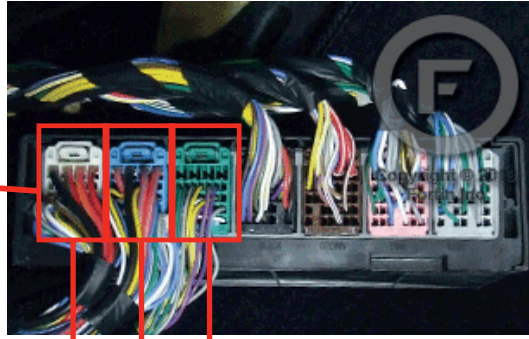


①




②

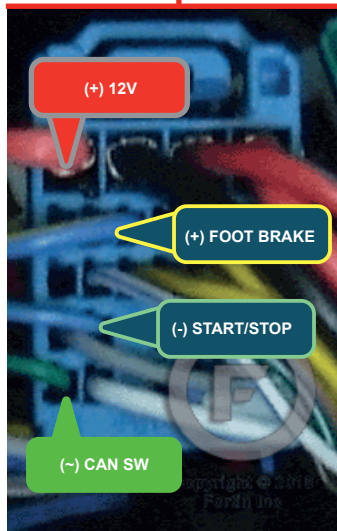




③

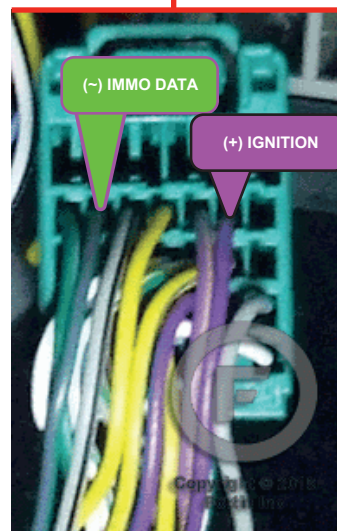


AUTOMATIC TRANSMISSION WIRING CONNECTION

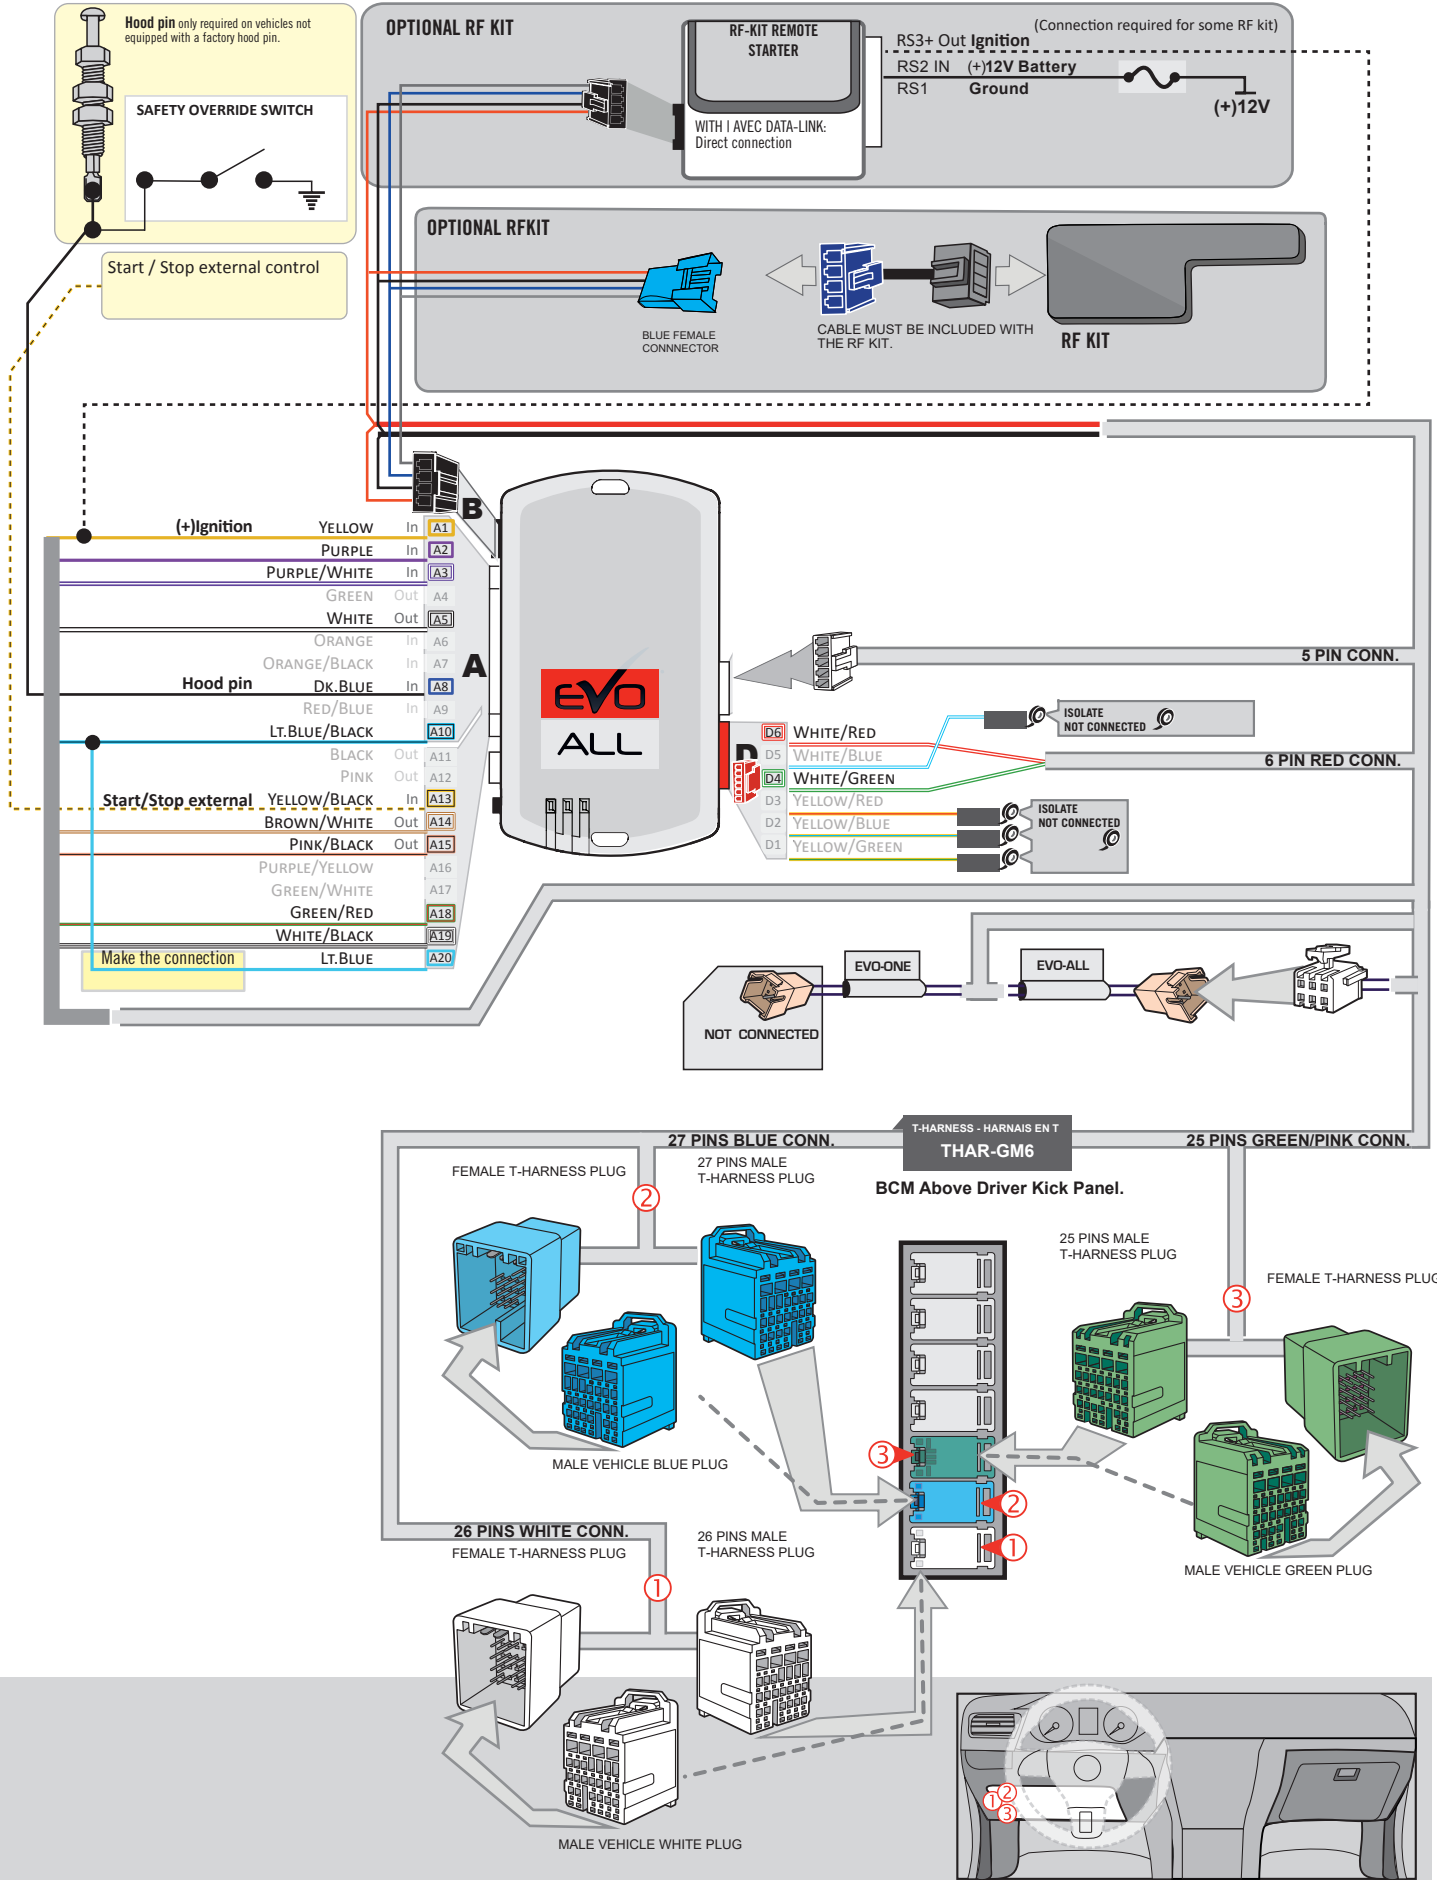

KEY BYPASS PROGRAMMING PROCEDURE 1/3

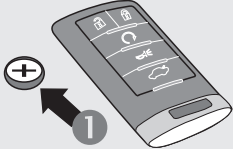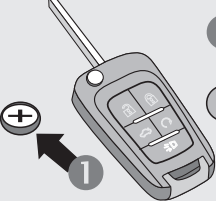FIRST GENERATION	 <p>1 Remove the battery from the OEM remote.</p> <p>2 First generation OEM remotes: Place the OEM remotes in the key older.</p>	
SECOND GENERATION	 <p>1 Remove the battery from the OEM remote.</p> <p>2 Second generation OEM remotes: Place the OEM remotes in to the center console.</p>	


1

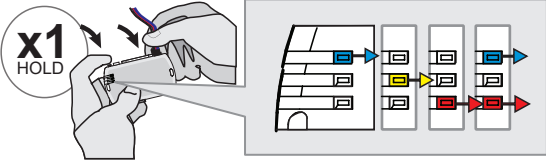

Press and hold the programming button:
Connect the 4-PIN Data-link harness (Black connector).


↳The Blue, Red, Yellow and Blue & Red LEDs will alternatively illuminate.

2

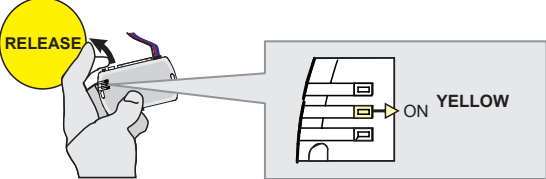


Release the programming button when the LED is YELLOW.

 If the LED is not solid YELLOW disconnect the 4-Pin connector (Data-Link) and go back to step 1.




3

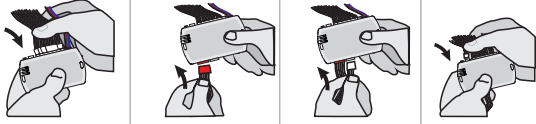

Insert the required remaining connectors.


4

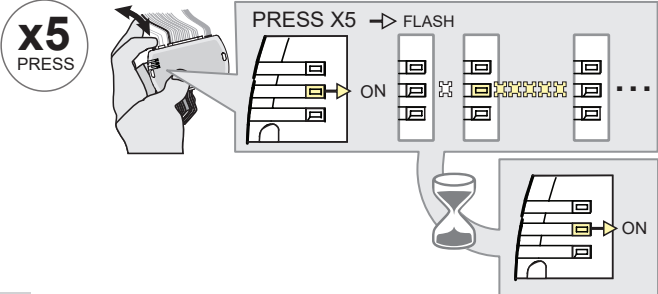

Press and release the programming button five (5x) times.


↳The YELLOW LED will flash 5 times each second.

↳WAIT for the YELLOW LED to turn ON solide.

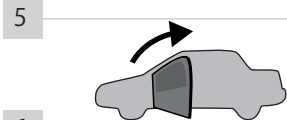

Open the driver door.

6

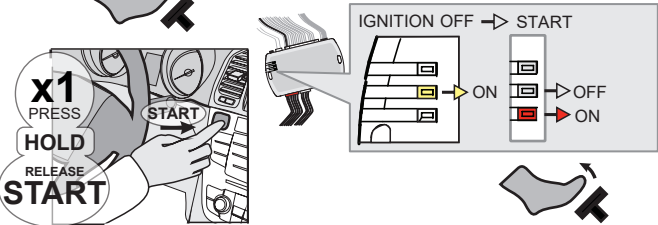


Press the foot-brake pedal.

Press the Push-to-Start button until the engine start.


Release the foot-brake pedal.

↳The RED LED will turn ON.
 ↳The YELLOW LED will turn OFF.


KEY BYPASS PROGRAMMING PROCEDURE 2/3

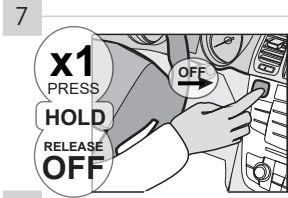

 Press the Push-to-Start button until the engine turn OFF.



Close and open the driver door.

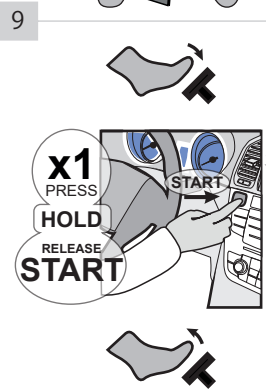

Press the foot-brake pedal.

Press the Push-to-Start button until the engine start.

Release the foot-brake pedal.


↳ The BLUE LED will turn ON.

↳ The BLUE LED will turn OFF.
The RED LED will turn OFF.

↳ The YELLOW LED will flash rapidly


↳ The BLUE LED will turn ON.

↳ The BLUE LED will flash rapidly

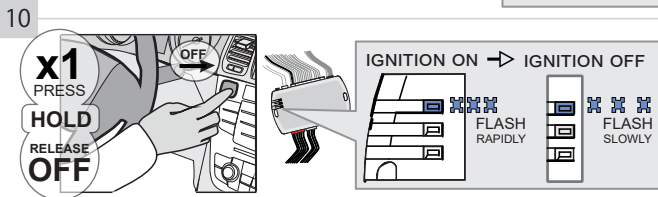


Press the Push-to-Start button until the engine turn OFF.

↳ The BLUE LED will flash slowly

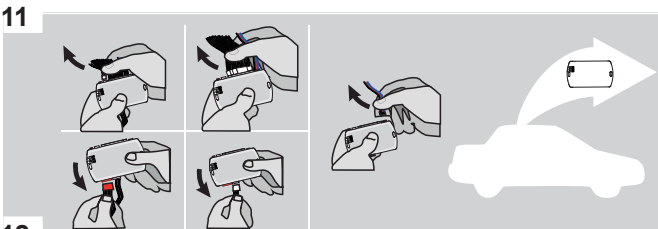

Disconnect all the connectors and after the Data-Link (4-pins) connector.


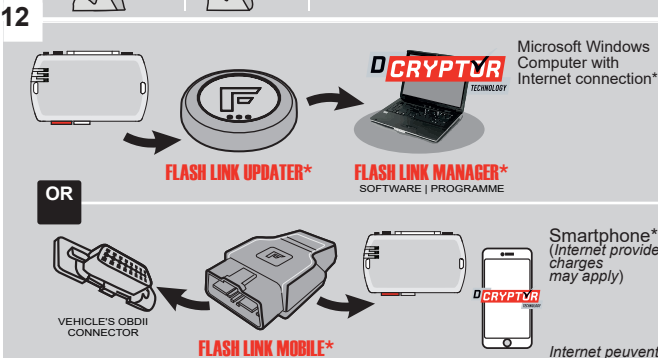


Use the tool: FLASH LINK UPDATER or FLASH LINK MOBILE to visit the DCryptor menu.

*Parts required (not included)

KEY BYPASS PROGRAMMING PROCEDURE 3/3

13

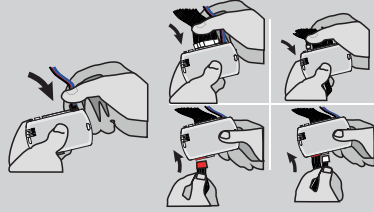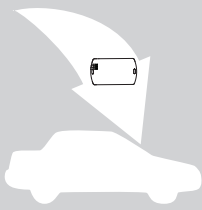

AFTER DCRYPTOR PROGRAMMING COMPLETED
Go back to the vehicle and **reconnect** the 4-Pin (Data-Link) connector and after, all the remaining connector.



The module is now programmed.



REMOTE STARTER / ALARM VERIFICATION PROCEDURE

Test the remote starter. Remote start the vehicle.

REMOTE STARTER FUNCTIONALITY



All doors must be closed.

Remote start the vehicle.



Press the Unlock button of the remote car starter.



Enter the vehicle with the Intelligent Access Key.



The vehicle can now be put in to gear and driven.



If the vehicle is not unlocked the module will shut down the remote-starter and the vehicle as soon as any door is opened.

THAR-GM6

THARNNESS STAND ALONE INSTALLATION

ADDENDUM - SUGGESTED WIRING CONFIGURATION



ONLY COMPATIBLE WITH AUTOMATIC TRANSMISSION VEHICLES.



Vehicle functions supported in this diagram (functional if equipped)

VEHICLE

YEARS

Immobilizer bypass

Lock

Unlock

Arm

Disarm

Trunk (open)

RAP Disable

Tachometer

Heated Seats

Door Status

Trunk Status

Hand-Brake Status

Foot-Brake Status

OEM Remote Monitoring

BUICK

Encore GX

Push-To-Start

2020-2021

•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---



FIRMWARE VERSION

70.[45]

GM MINIMUM

To add the firmware version and the options, use the **FLASH LINK UPDATER** or **FLASH LINK MOBILE** tool, sold separately.



Program bypass option:

UNIT OPTION

DESCRIPTION

C1

OEM Remote status (Lock/Unlock) monitoring

IF THE VEHICLE IS NOT EQUIPPED WITH FUNCTIONAL HOOD PIN:

A11

OFF


Hood trigger (Output Status).

D6

Push-to-Start



ATTENTION!

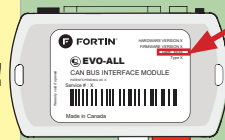

DATE: XX-XX

E5

OFF

SPECIAL FUNCTIONS: BY DEFAULT DEACTIVATED

ON

MANUFACTURED MODULES BETWEEN: 04/2018 TO 04/2019



Parts required (Not included)

1X THAR-GM6

MANDATORY INSTALL

*HOOD PIN



HOOD STATUS: THE HOOD PIN SWITCH MUST BE INSTALLED IF THE VEHICLE CAN BE REMOTE STARTED WITH THE HOOD OPEN, SET FUNCTION **A11** TO OFF.

A11

OFF

Notice: the installation of safety elements are mandatory. The hood pin is an essential security element and must be installed.

THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.

PARTS REQUIRED (NOT INCLUDED)


1x **FLASH LINK UPDATER,**
 1x **FLASH LINK MANAGER**
 SOFTWARE | PROGRAMME
 1x Microsoft Windows Computer with Internet connection

OR


1x **FLASH LINK MOBILE**
 1x **FLASH LINK MOBILE APP**
 Smartphone *Android* or *iOS* with Internet connection (*provider charges may apply*).
 1x

MANDATORY

HOOD PIN



REMOTE START SAFETY OVERRIDE SWITCH

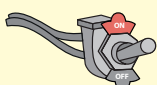
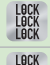





VALET SWITCH


Part #: RSPB available, Sold separately.

Notice: the installation of safety elements are mandatory. The hood pin and the valet switch are essential security elements and must be installed.


STAND ALONE CONFIGURATION

	Program bypass option	UNIT OPTION	DESCRIPTION
	OEM Remote Stand Alone Remote Starter:	D1.10 	By default, LOCK, LOCK, LOCK Par défaut, VERROUILLE,VERROUILLE,VERROUILLE
		D1.1 	
	Program bypass option with oem remote:	C1	OEM Remote Monitoring
	Program bypass option with RF KIT antenna:	H1 to H6	Supported RF Kits and select RF Kit


REMOTE STARTER FUNCTIONALITY




All doors must be closed.

3X 

Press the OEM remote's Lock button 3x to remote-start (or remote-stop) the vehicle.




START 

The vehicle will START.

REMOTE STARTER DIAGNOSTICS
MODULE RED LED

x2 flash :	Brake ON
x3 flash :	No tach
x4 flash :	Ignition before start
x5 flash :	Hood Open

REMOTE STARTER WARNING CARD



CUT THIS WARNING CARD AND STICK IT ON A VISIBLE PLACE:
 or use the package RSPB, Sold separately.

WARNING



REMOTE STARTER

THE VEHICLE CAN BE STARTED BY EITHER: PRESSING THE LOCK BUTTON ON THE OEM REMOTE 3 TIMES CONSECUTIVELY OR BY A SMARTPHONE. **TURN ON** THE SAFETY SWITCH LOCATED UNDER THE DASHBOARD BEFORE WORKING ON THE VEHICLE.


DESCRIPTION




③ BCM Right side of the center console, passenger side.

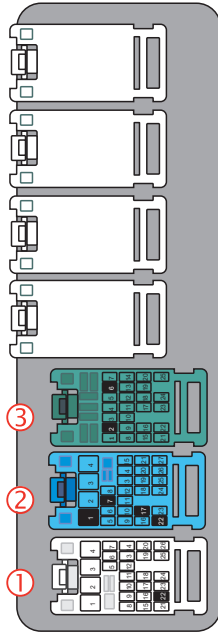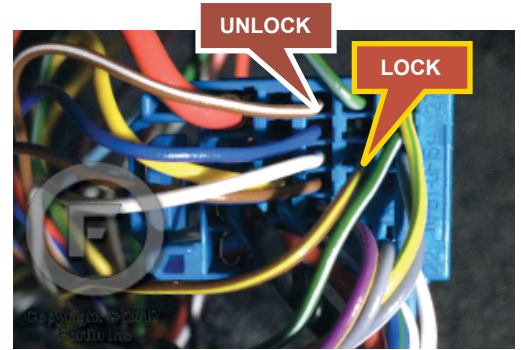

AUTOMATIC TRANSMISSION WIRING CONNECTION

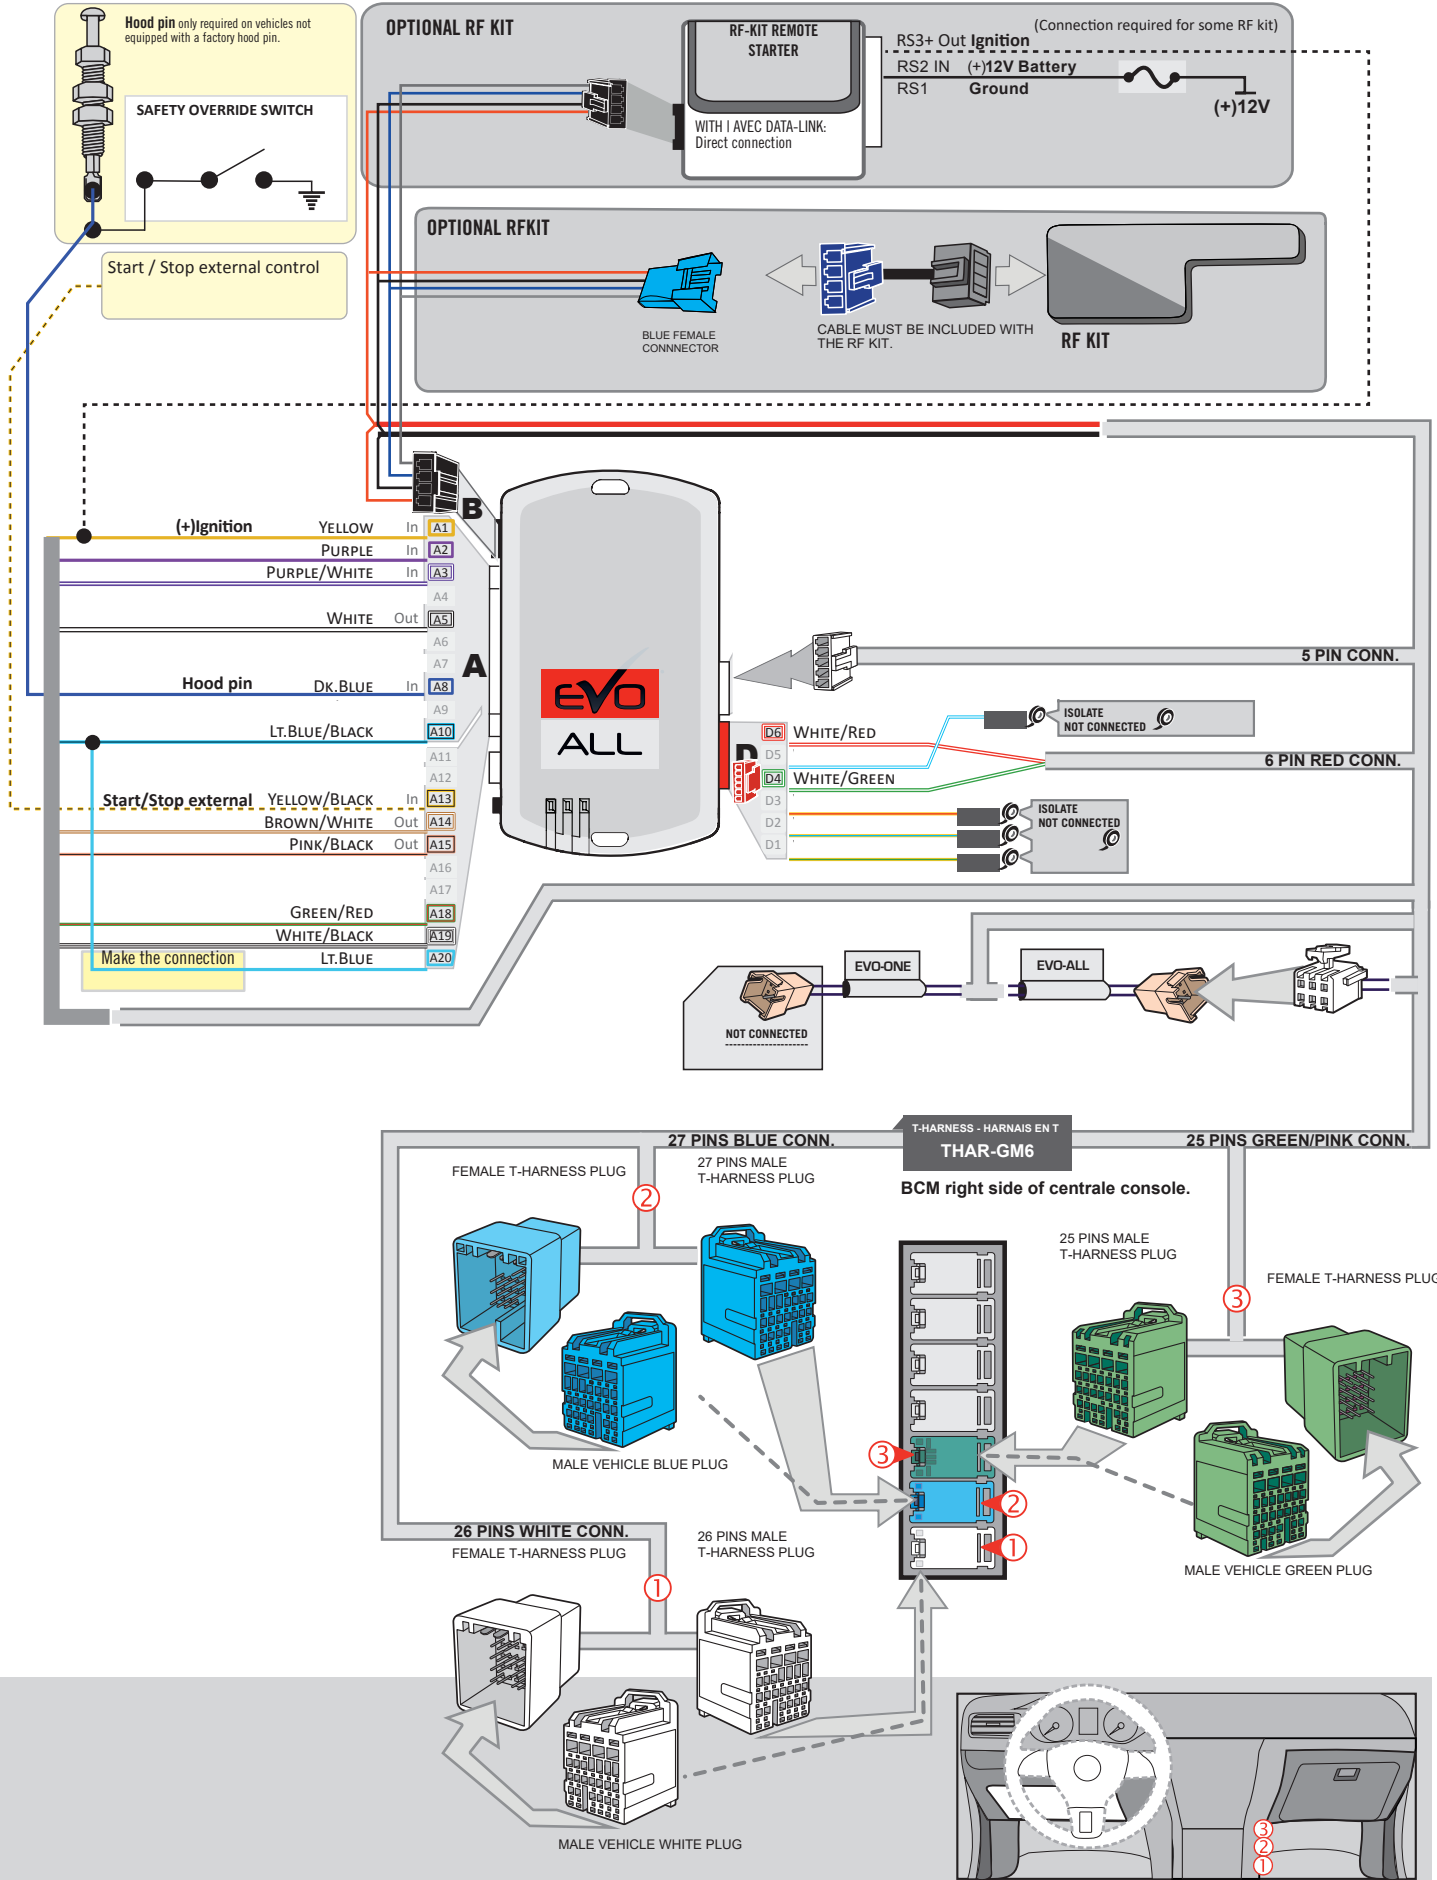


KEY BYPASS PROGRAMMING PROCEDURE 1/3

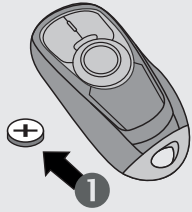


- 1** Remove the battery from the OEM remote.
- 2** Place the OEM in the remote Key reader behind cup holders in the center console.

Refer to vehicle user guide for keyport location.

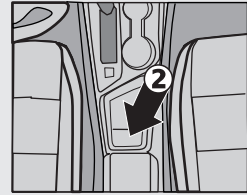


1

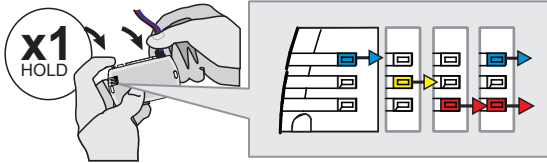

Press and hold the programming button:
Connect the 4-PIN Data-link harness (Black connector).


↳The Blue, Red, Yellow and Blue & Red LEDs will alternatively illuminate.

2

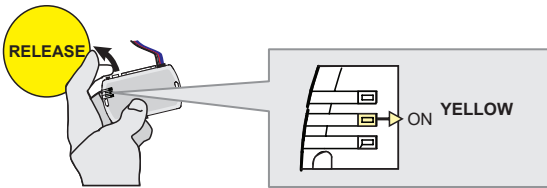


Release the programming button when the LED is YELLOW.

 If the LED is not solid YELLOW disconnect the 4-Pin connector (Data-Link) and go back to step 1.




3

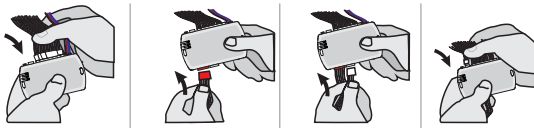

Insert the required remaining connectors.

4

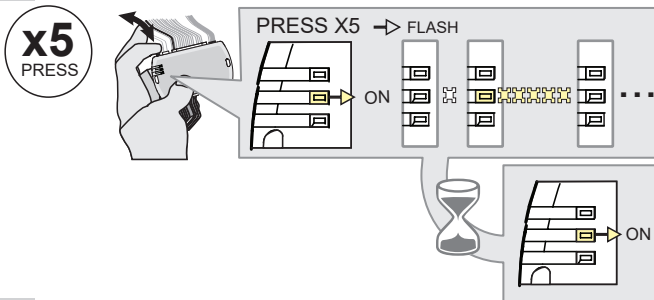


Press and release the programming button five (5x) times.

↳The YELLOW LED will flash 5 times each second.


↳WAIT for the YELLOW LED to turn ON solide.

 5



Open the driver door.

6

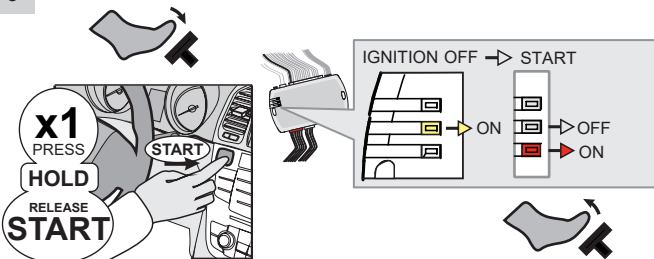

Press the foot-brake pedal.

Press the Push-to-Start button until the engine start.

Release the foot-brake pedal.

↳The RED LED will turn ON.
 ↳The YELLOW LED will turn OFF.

KEY BYPASS PROGRAMMING PROCEDURE 2/3 |

7

Press the Push-to-Start button until the engine turn OFF.

8

Close and open the driver door.

9

Press the foot-brake pedal.

Press the Push-to-Start button until the engine start.

Release the foot-brake pedal.

- ↳ The BLUE LED will turn ON.
- ↳ The BLUE LED will turn OFF. The RED LED will turn OFF.
- ↳ The YELLOW LED will flash rapidly
- ↳ The BLUE LED will turn ON.
- ↳ The BLUE LED will flash rapidly

10

Press the Push-to-Start button until the engine turn OFF.

- ↳ The BLUE LED will flash slowly

11


Disconnect all the connectors and after the Data-Link (4-pins) connector.

12

Use the tool: FLASH LINK UPDATER or FLASH LINK MOBILE to visit the DCRYPTOR menu.

***Parts required (not included)**

13

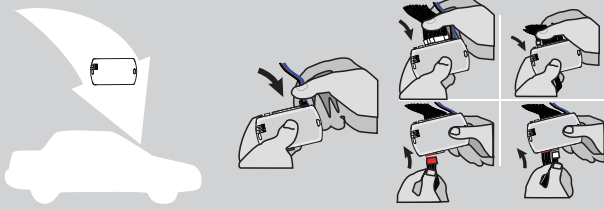

AFTER DCRYPTOR PROGRAMMING COMPLETED
Go back to the vehicle and **reconnect** the 4-Pin (Data-Link) connector and after, all the remaining connector.



The module is now programmed.



REMOTE STARTER / ALARM VERIFICATION

Test the remote starter. Remote start the vehicle.

REMOTE STARTER FUNCTIONALITY |

 


All doors must be closed.


Remote start the vehicle.



Press the Unlock button of the remote car starter.



Enter the vehicle with the Intelligent Access Key.

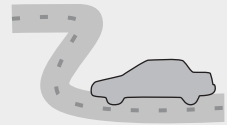

The vehicle can now be put in to gear and driven.



If the vehicle is not unlocked the module will shut down the remote-starter and the vehicle as soon as any door is opened.

THARNESS STAND ALONE INSTALLATION

THAR-GM6

ADDENDUM - SUGGESTED WIRING CONFIGURATION



ONLY COMPATIBLE WITH AUTOMATIC TRANSMISSION VEHICLES.



VEHICLE

YEARS

Vehicle functions supported in this diagram (functional if equipped)

VEHICLE	YEARS	Immobilizer bypass	Lock	Unlock	Arm	Disarm	Trunk (open)	RAP Disable	Tachometer	Heated Seats	Door Status	Trunk Status	Hand-Brake Status	Foot-Brake Status	OEM Remote Monitoring
BUICK															
Encore	Push-To-Start	2017-2020	•	•	•	•	•	•	•	•	•	•	•	•	•
CHEVROLET															
Trax	Push-To-Start	2017-2021	•	•	•	•	•	•	•	•	•	•	•	•	•



FIRMWARE VERSION

70.[45]

GM MINIMUM

To add the firmware version and the options, use the **FLASH LINK UPDATER** or **FLASH LINK MOBILE** tool, sold separately.



Program bypass option:

UNIT OPTION

DESCRIPTION

C1

OEM Remote status (Lock/Unlock) monitoring

IF THE VEHICLE IS NOT EQUIPPED WITH FUNCTIONAL HOOD PIN:

A11

OFF


Hood trigger (Output Status).

D6

Push-to-Start



ATTENTION!

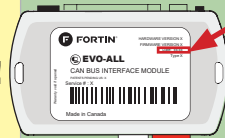

DATE: XX-XX

E5

OFF

SPECIAL FUNCTIONS: BY DEFAULT DEACTIVATED

ON

MANUFACTURED MODULES BETWEEN: 04/2018 TO 04/2019



Parts required (Not included)

1X THAR-GM6

MANDATORY INSTALL

*HOOD PIN



HOOD STATUS: THE HOOD PIN SWITCH MUST BE INSTALLED IF THE VEHICLE CAN BE REMOTE STARTED WITH THE HOOD OPEN, SET FUNCTION **A11** TO OFF.

A11

OFF

Notice: the installation of safety elements are mandatory. The hood pin is an essential security element and must be installed.

THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.

PARTS REQUIRED (NOT INCLUDED)

1x **FLASH LINK UPDATER,**
 1x **FLASH LINK MANAGER**
 SOFTWARE | PROGRAMME
 1x Microsoft Windows Computer with Internet connection

OR

1x **FLASH LINK MOBILE**
 1x **FLASH LINK MOBILE APP**
 Smartphone *Android* or *iOS* with Internet connection (*provider charges may apply*).
 1x

MANDATORY

HOOD PIN



REMOTE START SAFETY OVERRIDE SWITCH


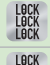





VALET SWITCH


Part #: RSPB available, Sold separately.

Notice: the installation of safety elements are mandatory. The hood pin and the valet switch are essential security elements and must be installed.


STAND ALONE CONFIGURATION

	Program bypass option	UNIT OPTION	DESCRIPTION
	OEM Remote Stand Alone Remote Starter:	D1.10 	By default, LOCK, LOCK, LOCK Par défaut, VERROUILLE, VERROUILLE, VERROUILLE
		D1.1 	
	Program bypass option with oem remote:	C1	OEM Remote Monitoring
	Program bypass option with RF KIT antenna:	H1 to H6	Supported RF Kits and select RF Kit


REMOTE STARTER FUNCTIONALITY




All doors must be closed.

3X 

Press the OEM remote's Lock button 3x to remote-start (or remote-stop) the vehicle.




START 

The vehicle will START.

REMOTE STARTER DIAGNOSTICS
MODULE RED LED

x2 flash :	Brake ON
x3 flash :	No tach
x4 flash :	Ignition before start
x5 flash :	Hood Open

REMOTE STARTER WARNING CARD



CUT THIS WARNING CARD AND STICK IT ON A VISIBLE PLACE:
 or use the package **RSPB**, Sold separately.

WARNING I

REMOTE STARTER

THE VEHICLE CAN BE STARTED BY EITHER: PRESSING THE LOCK BUTTON ON THE OEM REMOTE 3 TIMES CONSECUTIVELY OR BY A SMARTPHONE. **TURN ON** THE SAFETY SWITCH LOCATED UNDER THE DASHBOARD BEFORE WORKING ON THE VEHICLE.

DESCRIPTION




BCM



③




②

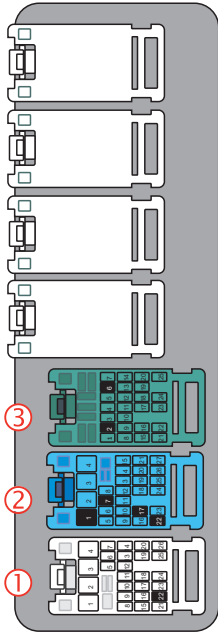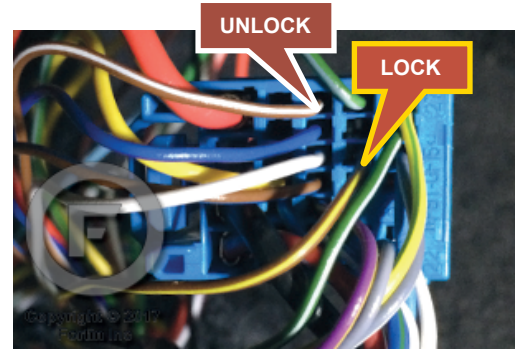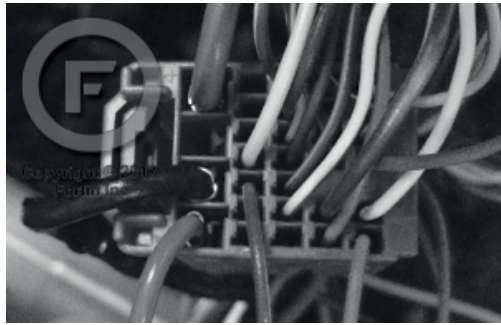


①




AUTOMATIC TRANSMISSION WIRING CONNECTION

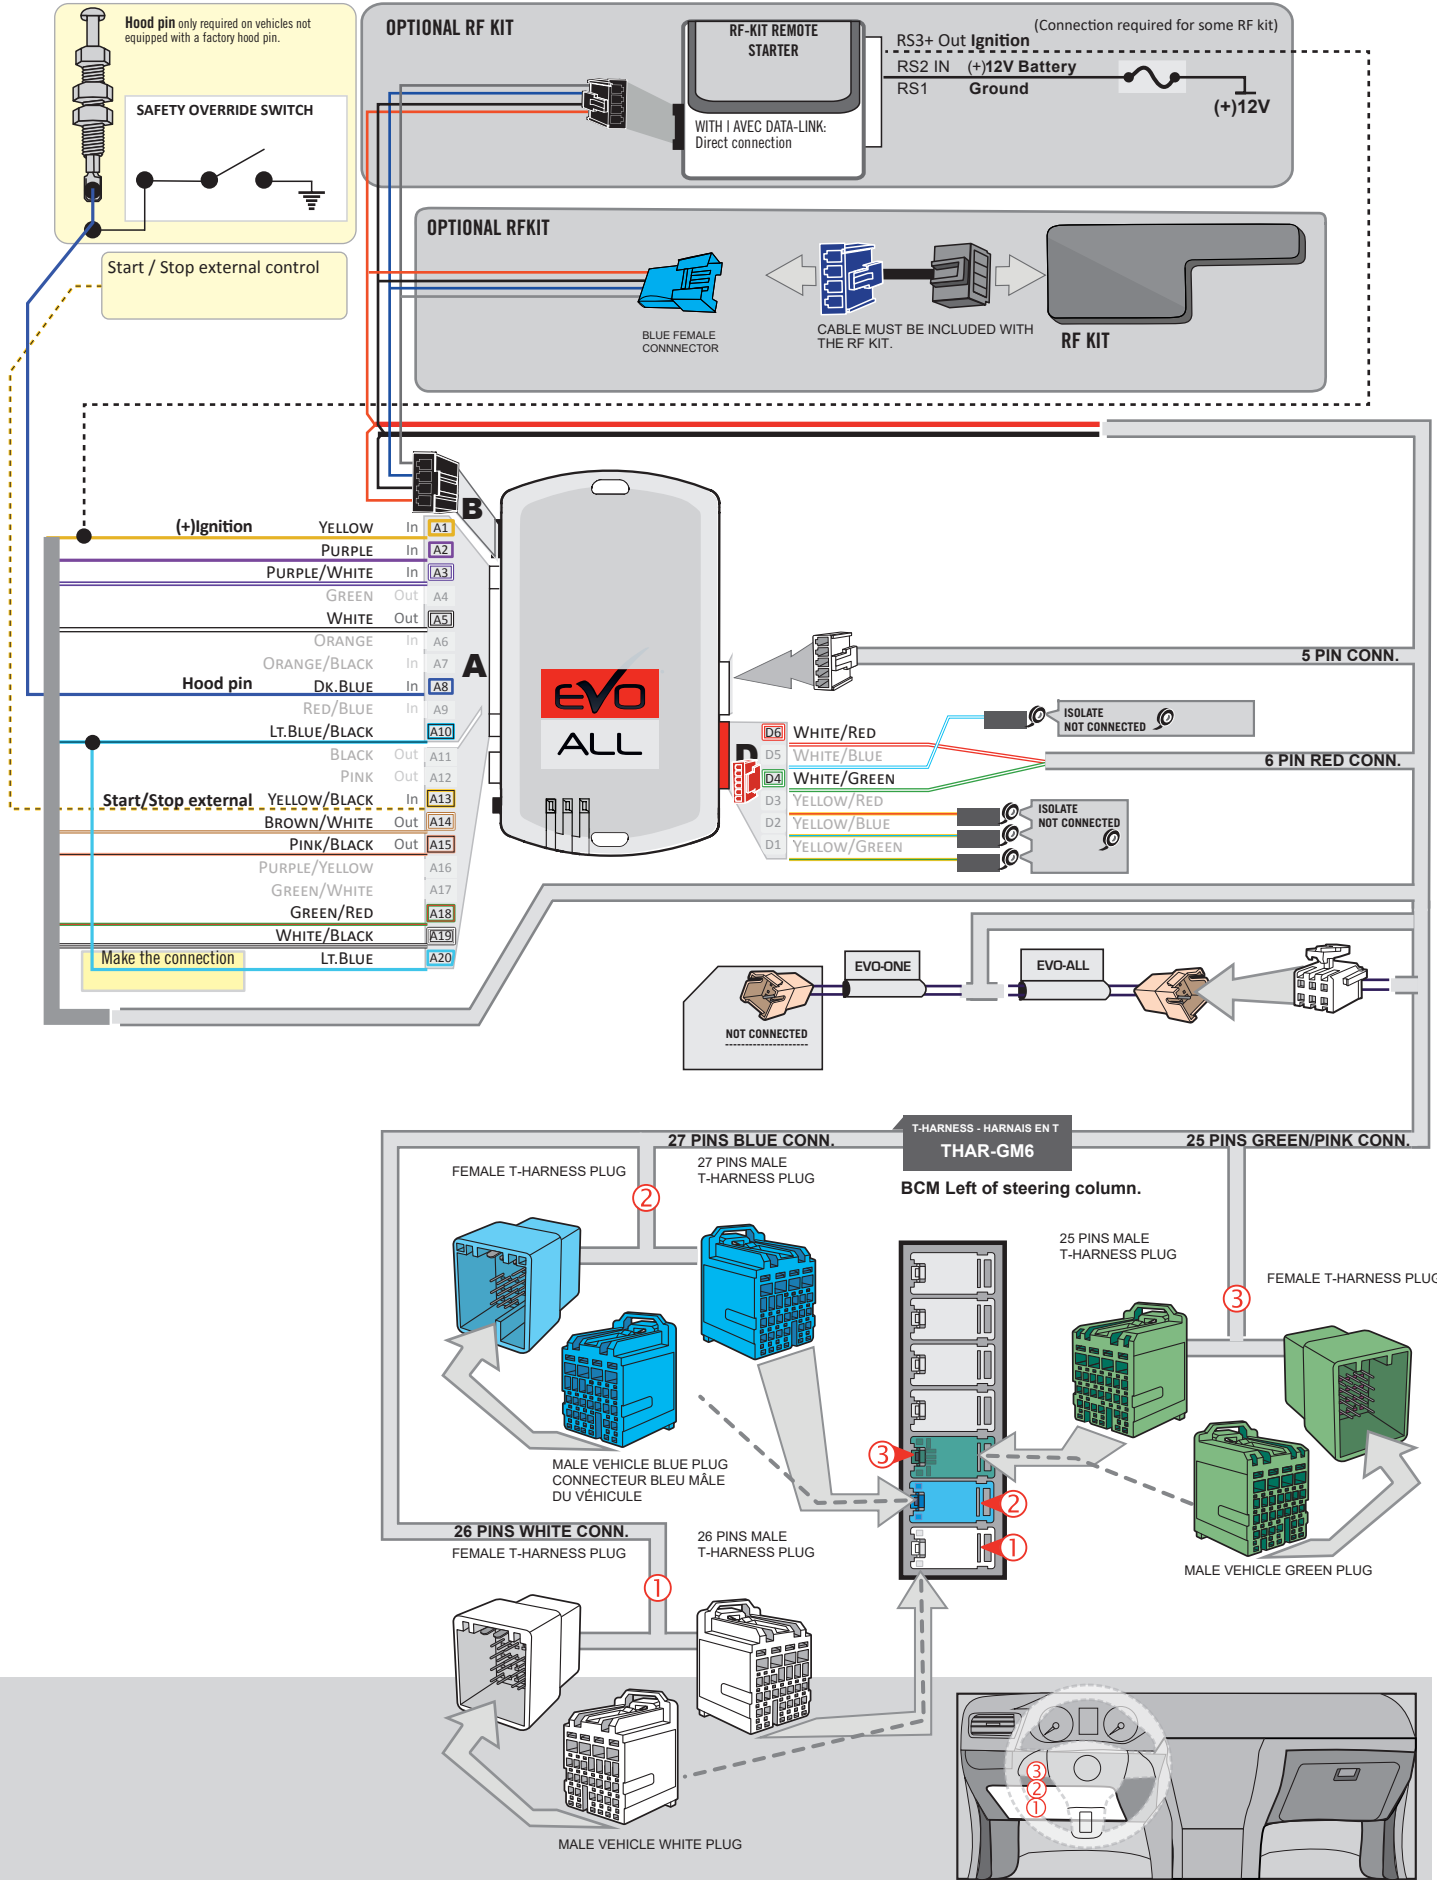


KEY BYPASS PROGRAMMING PROCEDURE 1/3

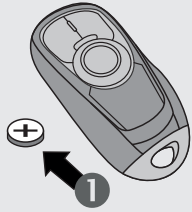

- 1** Remove the battery from the OEM remote.
- 2** Place the OEM remote in the front cup holder in the center console.
Refer to vehicle user guide for keyport location.

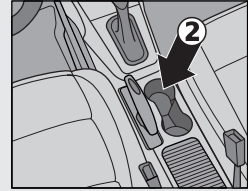


1

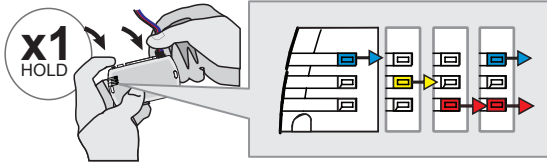

Press and hold the programming button:
Connect the 4-PIN Data-link harness (Black connector).


↳The Blue, Red, Yellow and Blue & Red LEDs will alternatively illuminate.

2

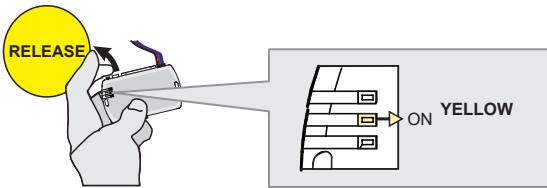


Release the programming button when the LED is YELLOW.

 If the LED is not solid YELLOW disconnect the 4-Pin connector (Data-Link) and go back to step 1.




3

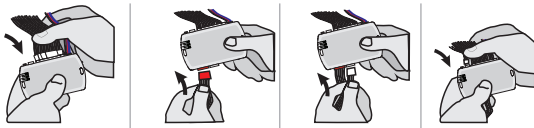

Insert the required remaining connectors.

4

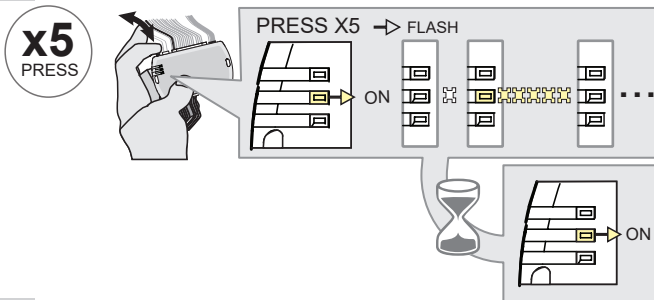


Press and release the programming button five (5x) times.

↳The YELLOW LED will flash 5 times each second.


↳**WAIT** for the YELLOW LED to turn ON solide.

 5



Open the driver door.

6

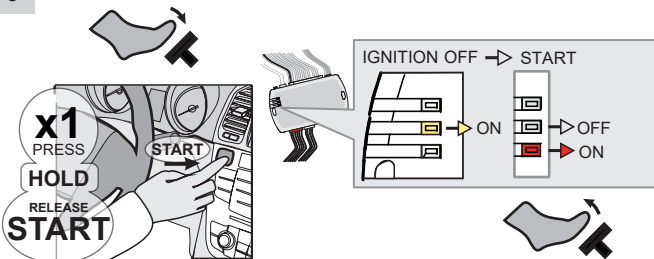

Press the foot-brake pedal.

Press the Push-to-Start button until the engine start.

Release the foot-brake pedal.

↳The RED LED will turn ON.
↳The YELLOW LED will turn OFF.


KEY BYPASS PROGRAMMING PROCEDURE 2/3

7




Press the Push-to-Start button until the engine turn OFF.

8

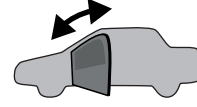

Close and open the driver door.

9

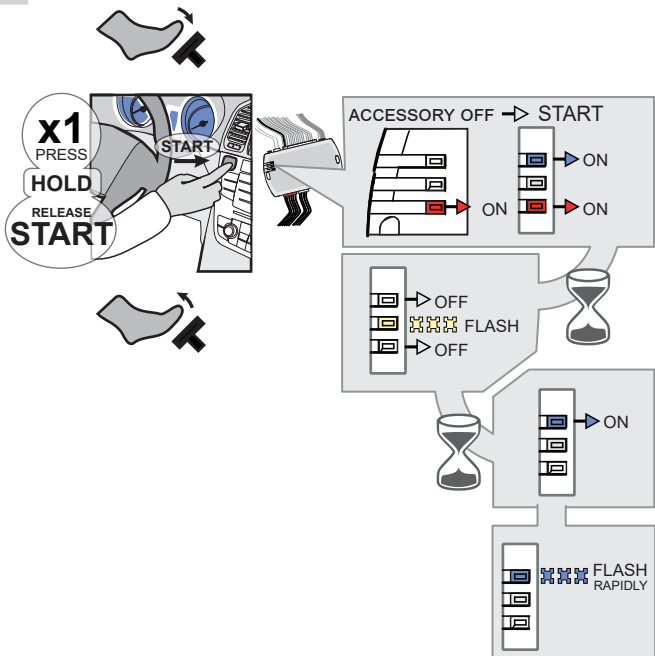


Press the foot-brake pedal.

Press the Push-to-Start button until the engine start.

Release the foot-brake pedal.

- ↳ The BLUE LED will turn ON.
- ↳ The BLUE LED will turn OFF. The RED LED will turn OFF.
- ↳ The YELLOW LED will flash rapidly
- ↳ The BLUE LED will turn ON.
- ↳ The BLUE LED will flash rapidly


10

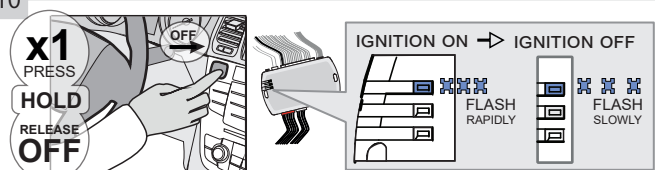

Press the Push-to-Start button until the engine turn OFF.


- ↳ The BLUE LED will flash slowly

11

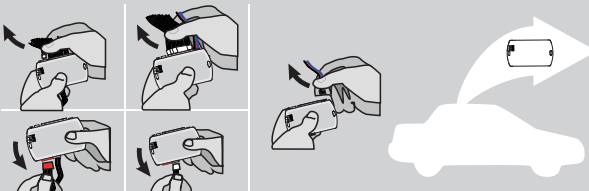

Disconnect all the connectors and after the Data-Link (4-pins) connector.

12


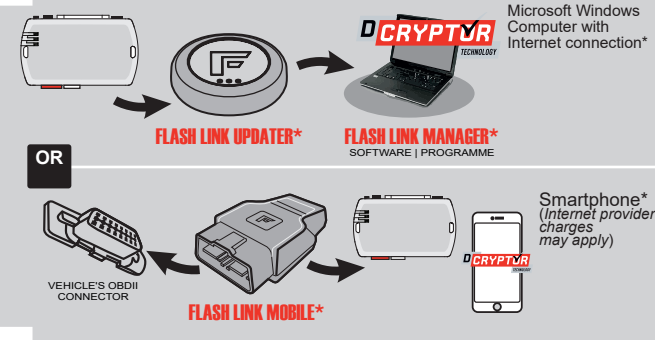


Use the tool: FLASH LINK UPDATER or FLASH LINK MOBILE to visit the DCryptor menu.

***Parts required (not included)**

KEY BYPASS PROGRAMMING PROCEDURE 3/3

13

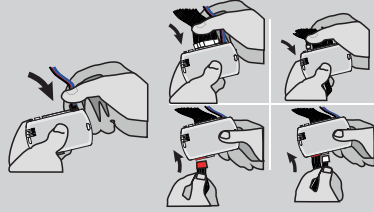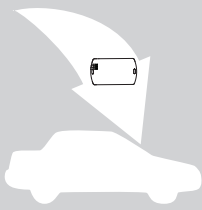

AFTER DCRYPTOR PROGRAMMING COMPLETED
Go back to the vehicle and **reconnect** the 4-Pin (Data-Link) connector and after, all the remaining connector.



The module is now programmed.



REMOTE STARTER / ALARM VERIFICATION PROCEDURE

Test the remote starter. Remote start the vehicle.

REMOTE STARTER FUNCTIONALITY



All doors must be closed.

Remote start the vehicle.



Press the Unlock button of the remote car starter.



Enter the vehicle with the Intelligent Access Key.



The vehicle can now be put in to gear and driven.



If the vehicle is not unlocked the module will shut down the remote-starter and the vehicle as soon as any door is opened.

THAR-GM6

THARNNESS STAND ALONE INSTALLATION

ADDENDUM - SUGGESTED WIRING CONFIGURATION



ONLY COMPATIBLE WITH AUTOMATIC TRANSMISSION VEHICLES.



VEHICLE

YEARS

Vehicle functions supported in this diagram (functional if equipped)

BUICK

Envision

Push-To-Start

2017-2020

Immobilizer bypass

Lock

Unlock

Arm

Disarm

Trunk (open)

RAP Disable

Tachometer

Heated Seats

Door Status

Trunk Status

Hand-Brake Status

Foot-Brake Status

OEM Remote Monitoring

•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---



FIRMWARE VERSION

70.[41]

GM MINIMUM

To add the firmware version and the options, use the **FLASH LINK UPDATER** or **FLASH LINK MOBILE** tool, sold separately.

IF THE VEHICLE IS NOT EQUIPPED WITH FUNCTIONAL HOOD PIN:

A11

OFF

Hood trigger (Output Status).



Program bypass option:

UNIT OPTION

DESCRIPTION

C1

OEM Remote status (Lock/Unlock) monitoring



Program bypass option:

UNIT OPTION


DESCRIPTION

D6

Push-to-Start



ATTENTION!

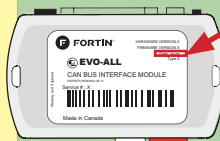

DATE: XX-XX

E5

OFF

SPECIAL FUNCTIONS: BY DEFAULT DEACTIVATED

ON

MANUFACTURED MODULES BETWEEN: 04/2018 TO 04/2019



Parts required (Not included)

- 1X 5 Amp Fuse
- 1X 1k Ohm Resistor

MANDATORY INSTALL

*HOOD PIN



HOOD STATUS: THE HOOD PIN SWITCH MUST BE INSTALLED IF THE VEHICLE CAN BE REMOTE STARTED WITH THE HOOD OPEN, SET FUNCTION A11 TO OFF.

A11

OFF

Notice: the installation of safety elements are mandatory. The hood pin is an essential security element and must be installed.

THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.

PARTS REQUIRED (NOT INCLUDED)

1x **FLASH LINK UPDATER,**
 1x **FLASH LINK MANAGER**
 SOFTWARE | PROGRAMME
 1x Microsoft Windows Computer with Internet connection

OR

1x **FLASH LINK MOBILE**
 1x **FLASH LINK MOBILE APP**
 Smartphone *Android* or *iOS* with Internet connection (*provider charges may apply*).

MANDATORY

HOOD PIN



REMOTE START SAFETY OVERRIDE SWITCH


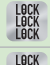





VALET SWITCH


Part #: RSPB available, Sold separately.

Notice: the installation of safety elements are mandatory. The hood pin and the valet switch are essential security elements and must be installed.


STAND ALONE CONFIGURATION

	Program bypass option	UNIT OPTION	DESCRIPTION
	OEM Remote Stand Alone Remote Starter:	D1.10 	By default, LOCK, LOCK, LOCK
		D1.1 	Par défaut, VERROUILLE,VERROUILLE,VERROUILLE
	Program bypass option with oem remote:	C1	OEM Remote Monitoring
	Program bypass option with RF KIT antenna:	H1 to H6	Supported RF Kits and select RF Kit


REMOTE STARTER FUNCTIONALITY



All doors must be closed.

3X 

Press the OEM remote's Lock button 3x to remote-start (or remote-stop) the vehicle.




The vehicle will START.

REMOTE STARTER DIAGNOSTICS
MODULE RED LED

x2 flash :	Brake ON
x3 flash :	No tach
x4 flash :	Ignition before start
x5 flash :	Hood Open

REMOTE STARTER WARNING CARD



CUT THIS WARNING CARD AND STICK IT ON A VISIBLE PLACE:
 or use the package **RSPB**, Sold separately.

WARNING

REMOTE STARTER

THE VEHICLE CAN BE STARTED BY EITHER: PRESSING THE LOCK BUTTON ON THE OEM REMOTE 3 TIMES CONSECUTIVELY OR BY A SMARTPHONE. **TURN ON** THE SAFETY SWITCH LOCATED UNDER THE DASHBOARD BEFORE WORKING ON THE VEHICLE.

DESCRIPTION




BCM located on passenger side center console



③




②

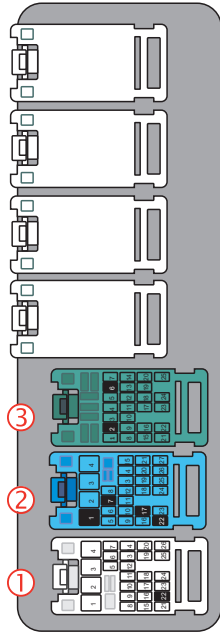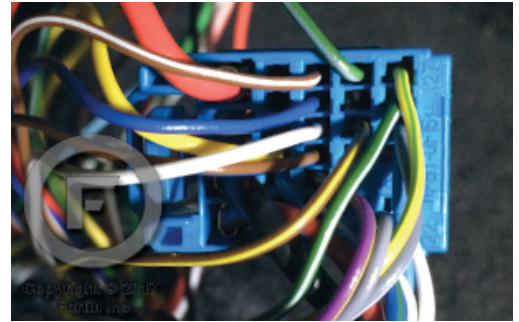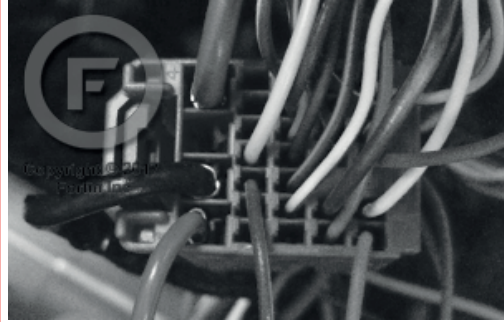


①




AUTOMATIC TRANSMISSION WIRING CONNECTION

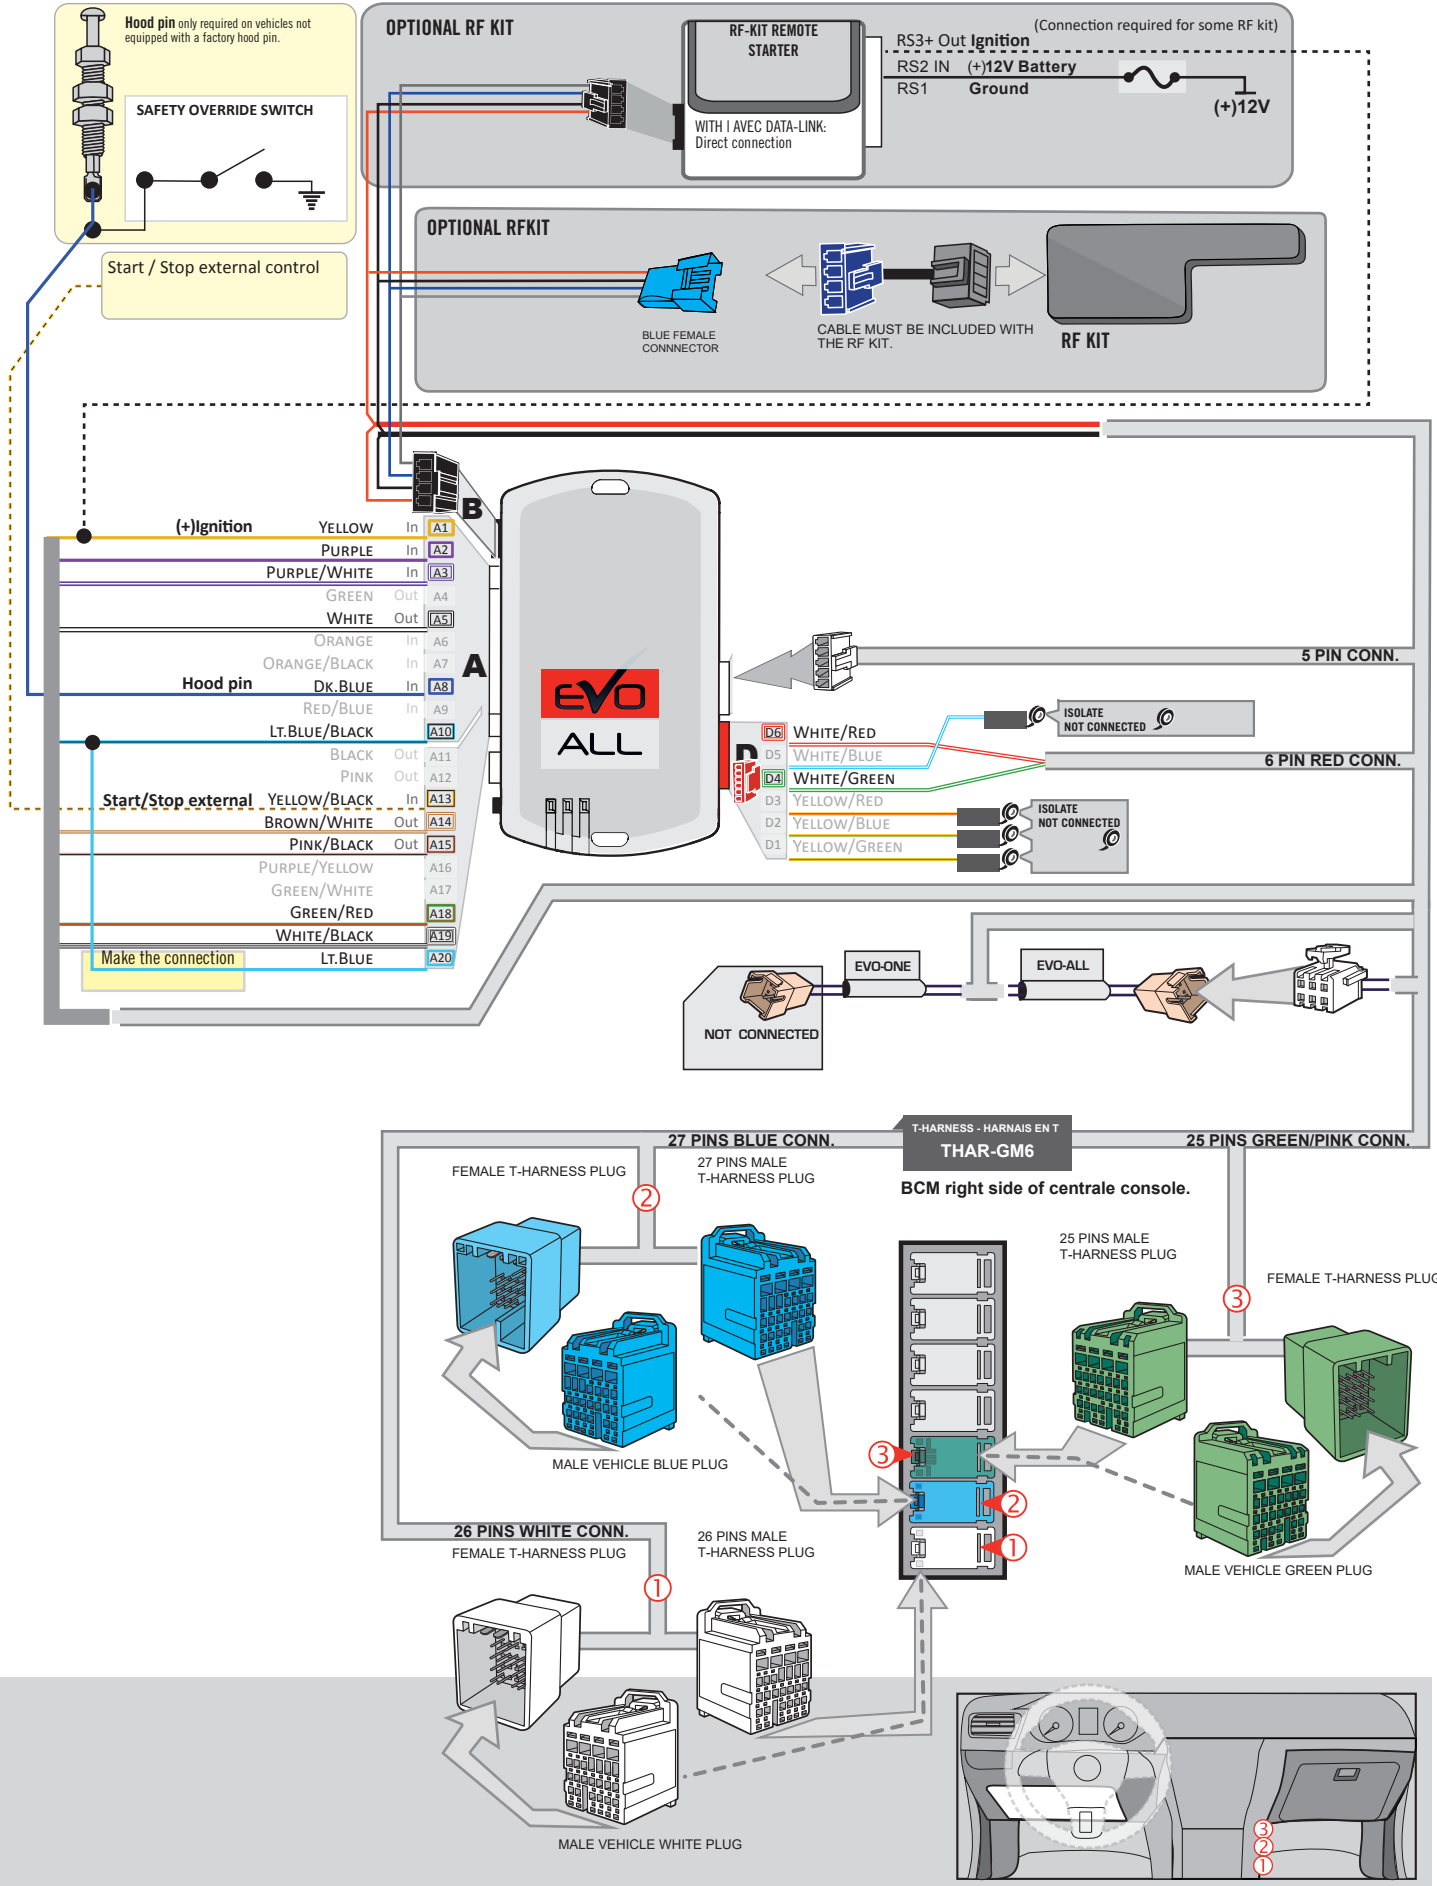


KEY BYPASS PROGRAMMING PROCEDURE 1/3

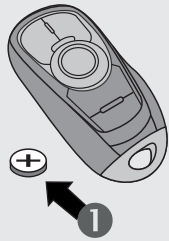

- 1** Remove the battery from the OEM remote.
- 2** Place the OEM remote in the front cup holder in the center console.
Refer to vehicle user guide for keyport location.

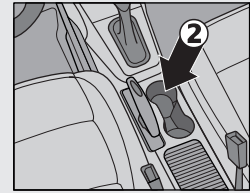


1

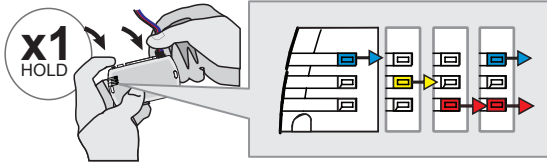

Press and hold the programming button:
Connect the 4-PIN Data-link harness (Black connector).


↳The Blue, Red, Yellow and Blue & Red LEDs will alternatively illuminate.

2

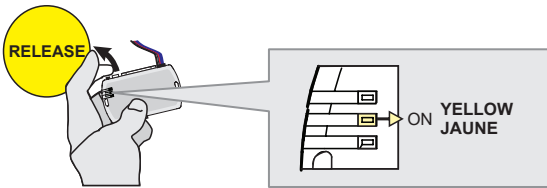


Release the programming button when the LED is YELLOW.

 If the LED is not solid YELLOW disconnect the 4-Pin connector (Data-Link) and go back to step 1.




3

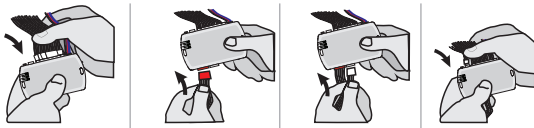

Insert the required remaining connectors.

4

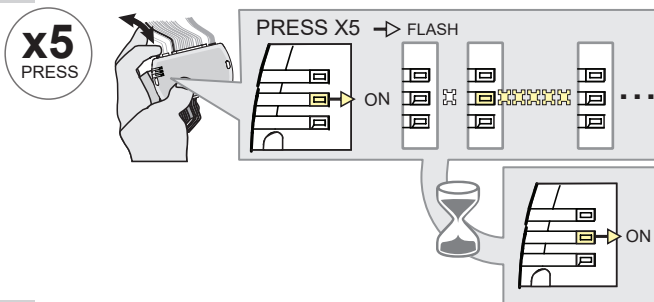


Press and release the programming button five (5x) times.

↳The YELLOW LED will flash 5 times each second.


↳**WAIT** for the YELLOW LED to turn ON solide.

 5



Open the driver door.

6

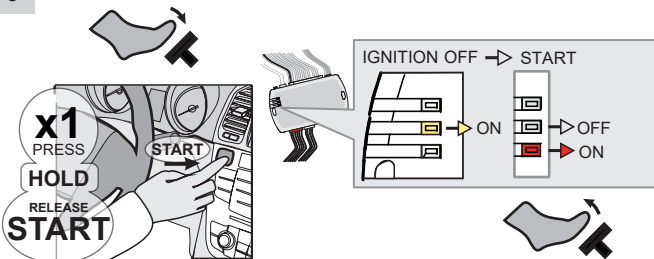

Press the foot-brake pedal.

Press the Push-to-Start button until the engine start.

Release the foot-brake pedal.

↳The RED LED will turn ON.
↳The YELLOW LED will turn OFF.


KEY BYPASS PROGRAMMING PROCEDURE 2/3

7




Press the Push-to-Start button until the engine turn OFF.

8

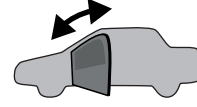

Close and open the driver door.

9

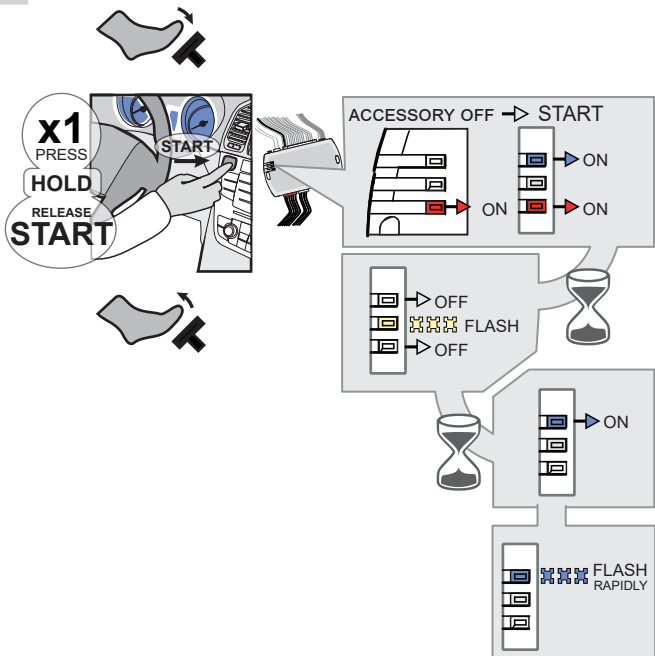


Press the foot-brake pedal.

Press the Push-to-Start button until the engine start.

Release the foot-brake pedal.

- ↳ The BLUE LED will turn ON.
- ↳ The BLUE LED will turn OFF. The RED LED will turn OFF.
- ↳ The YELLOW LED will flash rapidly
- ↳ The BLUE LED will turn ON.
- ↳ The BLUE LED will flash rapidly


10

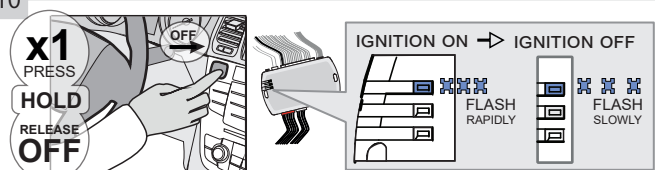

Press the Push-to-Start button until the engine turn OFF.


- ↳ The BLUE LED will flash slowly

11

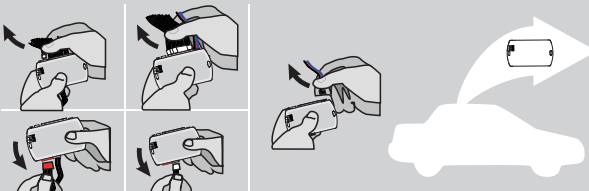

Disconnect all the connectors and after the Data-Link (4-pins) connector.

12


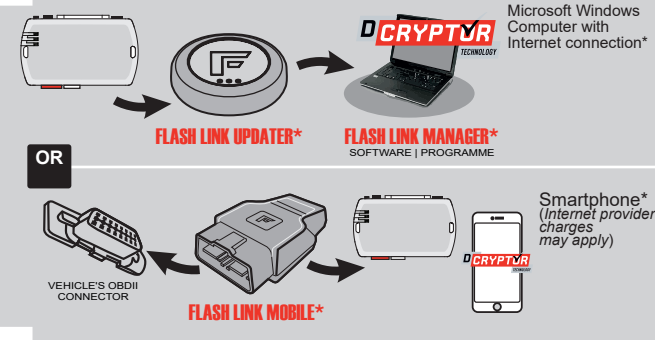


Use the tool: FLASH LINK UPDATER or FLASH LINK MOBILE to visit the DCRYPTOR menu.

***Parts required (not included)**

KEY BYPASS PROGRAMMING PROCEDURE 3/3

13

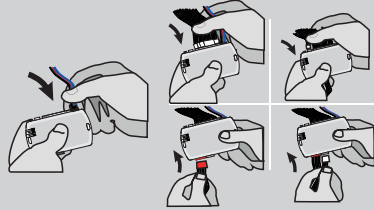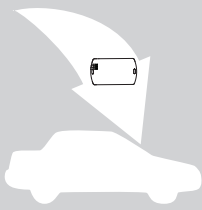

AFTER DCRYPTOR PROGRAMMING COMPLETED
Go back to the vehicle and **reconnect** the 4-Pin (Data-Link) connector and after, all the remaining connector.



The module is now programmed.



REMOTE STARTER / ALARM VERIFICATION PROCEDURE

Test the remote starter. Remote start the vehicle.

REMOTE STARTER FUNCTIONALITY



All doors must be closed.

Remote start the vehicle.



Press the Unlock button of the remote car starter.



Enter the vehicle with the Intelligent Access Key.



The vehicle can now be put in to gear and driven.



If the vehicle is not unlocked the module will shut down the remote-starter and the vehicle as soon as any door is opened.

THAR-GM6

THARNNESS STAND ALONE INSTALLATION

ADDENDUM - SUGGESTED WIRING CONFIGURATION



ONLY COMPATIBLE WITH AUTOMATIC TRANSMISSION VEHICLES.



Vehicle functions supported in this diagram (functional if equipped)

VEHICLE	YEARS	Immobilizer bypass	Lock	Unlock	Arm	Disarm	Trunk (open)	Parking Light	RAP Disable	Tachometer	Heated Seats	Door Status	Trunk Status	Hand-Brake Status	Foot-Brake Status	OEM Remote Monitoring
CHEVROLET																
Equinox	Push-To-Start	2018-2020	•	•	•	•	•	•	•	•	•	•	•	•	•	•

FIRMWARE VERSION

70.[45]

GM MINIMUM

To add the firmware version and the options, use the **FLASH LINK UPDATER** or **FLASH LINK MOBILE** tool, sold separately.

UNIT OPTION	DESCRIPTION
C1	OEM Remote status (Lock/Unlock) monitoring
A11 <input type="checkbox" value="OFF"/>	Hood trigger (Output Status).
D6	Push-to-Start

ATTENTION!

DATE: XX-XX

E5

SPECIAL FUNCTIONS:
BY DEFAULT DEACTIVATED

MANUFACTURED MODULES BETWEEN: 04/2018 TO 04/2019

Parts required (Not included)

1X THAR-GM6

MANDATORY INSTALL

*HOOD PIN



HOOD STATUS: THE HOOD PIN SWITCH MUST BE INSTALLED IF THE VEHICLE CAN BE REMOTE STARTED WITH THE HOOD OPEN, SET FUNCTION **A11** TO OFF.

A11

Notice: the installation of safety elements are mandatory. The hood pin is an essential security element and must be installed.

THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.

PARTS REQUIRED (NOT INCLUDED)

1x **FLASH LINK UPDATER,**
 1x **FLASH LINK MANAGER**
SOFTWARE | PROGRAMME
 1x Microsoft Windows Computer with Internet connection

OR

1x **FLASH LINK MOBILE**
 1x **FLASH LINK MOBILE APP**
Smartphone Android or iOS with Internet connection (provider charges may apply).

MANDATORY


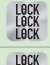



HOOD PIN  REMOTE START SAFETY OVERRIDE SWITCH 

VALET SWITCH


Part #: RSPB available, Sold separately.

Notice: the installation of safety elements are mandatory. The hood pin and the valet switch are essential security elements and must be installed.


STAND ALONE CONFIGURATION

	Program bypass option	UNIT OPTION	DESCRIPTION
	OEM Remote Stand Alone Remote Starter:	D1.10 	By default, LOCK, LOCK, LOCK Par défaut, VERROUILLE,VERROUILLE,VERROUILLE
		D1.1 	
	Program bypass option with oem remote:	C1	OEM Remote Monitoring
	Program bypass option with RF KIT antenna:	H1 to H6	Supported RF Kits and select RF Kit


REMOTE STARTER FUNCTIONALITY




All doors must be closed.

3X 

Press the OEM remote's Lock button 3x to remote-start (or remote-stop) the vehicle.




START 

The vehicle will START.

REMOTE STARTER DIAGNOSTICS
MODULE RED LED

x2 flash :	Brake ON
x3 flash :	No tach
x4 flash :	Ignition before start
x5 flash :	Hood Open

REMOTE STARTER WARNING CARD



CUT THIS WARNING CARD AND STICK IT ON A VISIBLE PLACE:
 or use the package RSPB, Sold separately.



WARNING

REMOTE STARTER


THE VEHICLE CAN BE STARTED BY EITHER: PRESSING THE LOCK BUTTON ON THE OEM REMOTE 3 TIMES CONSECUTIVELY OR BY A SMARTPHONE. **TURN ON** THE SAFETY SWITCH LOCATED UNDER THE DASHBOARD BEFORE WORKING ON THE VEHICLE.

DESCRIPTION

BCM

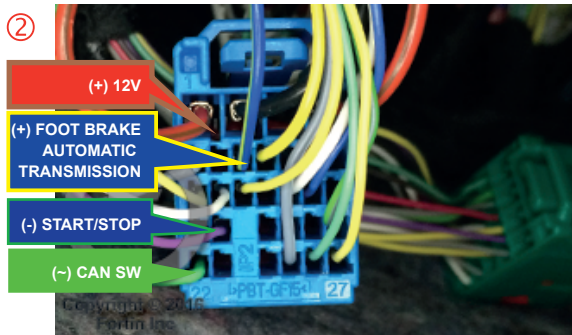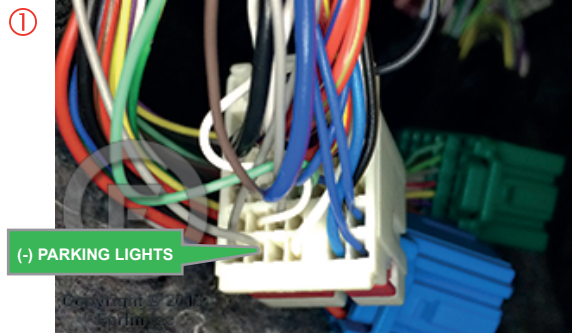


AUTOMATIC TRANSMISSION WIRING CONNECTION

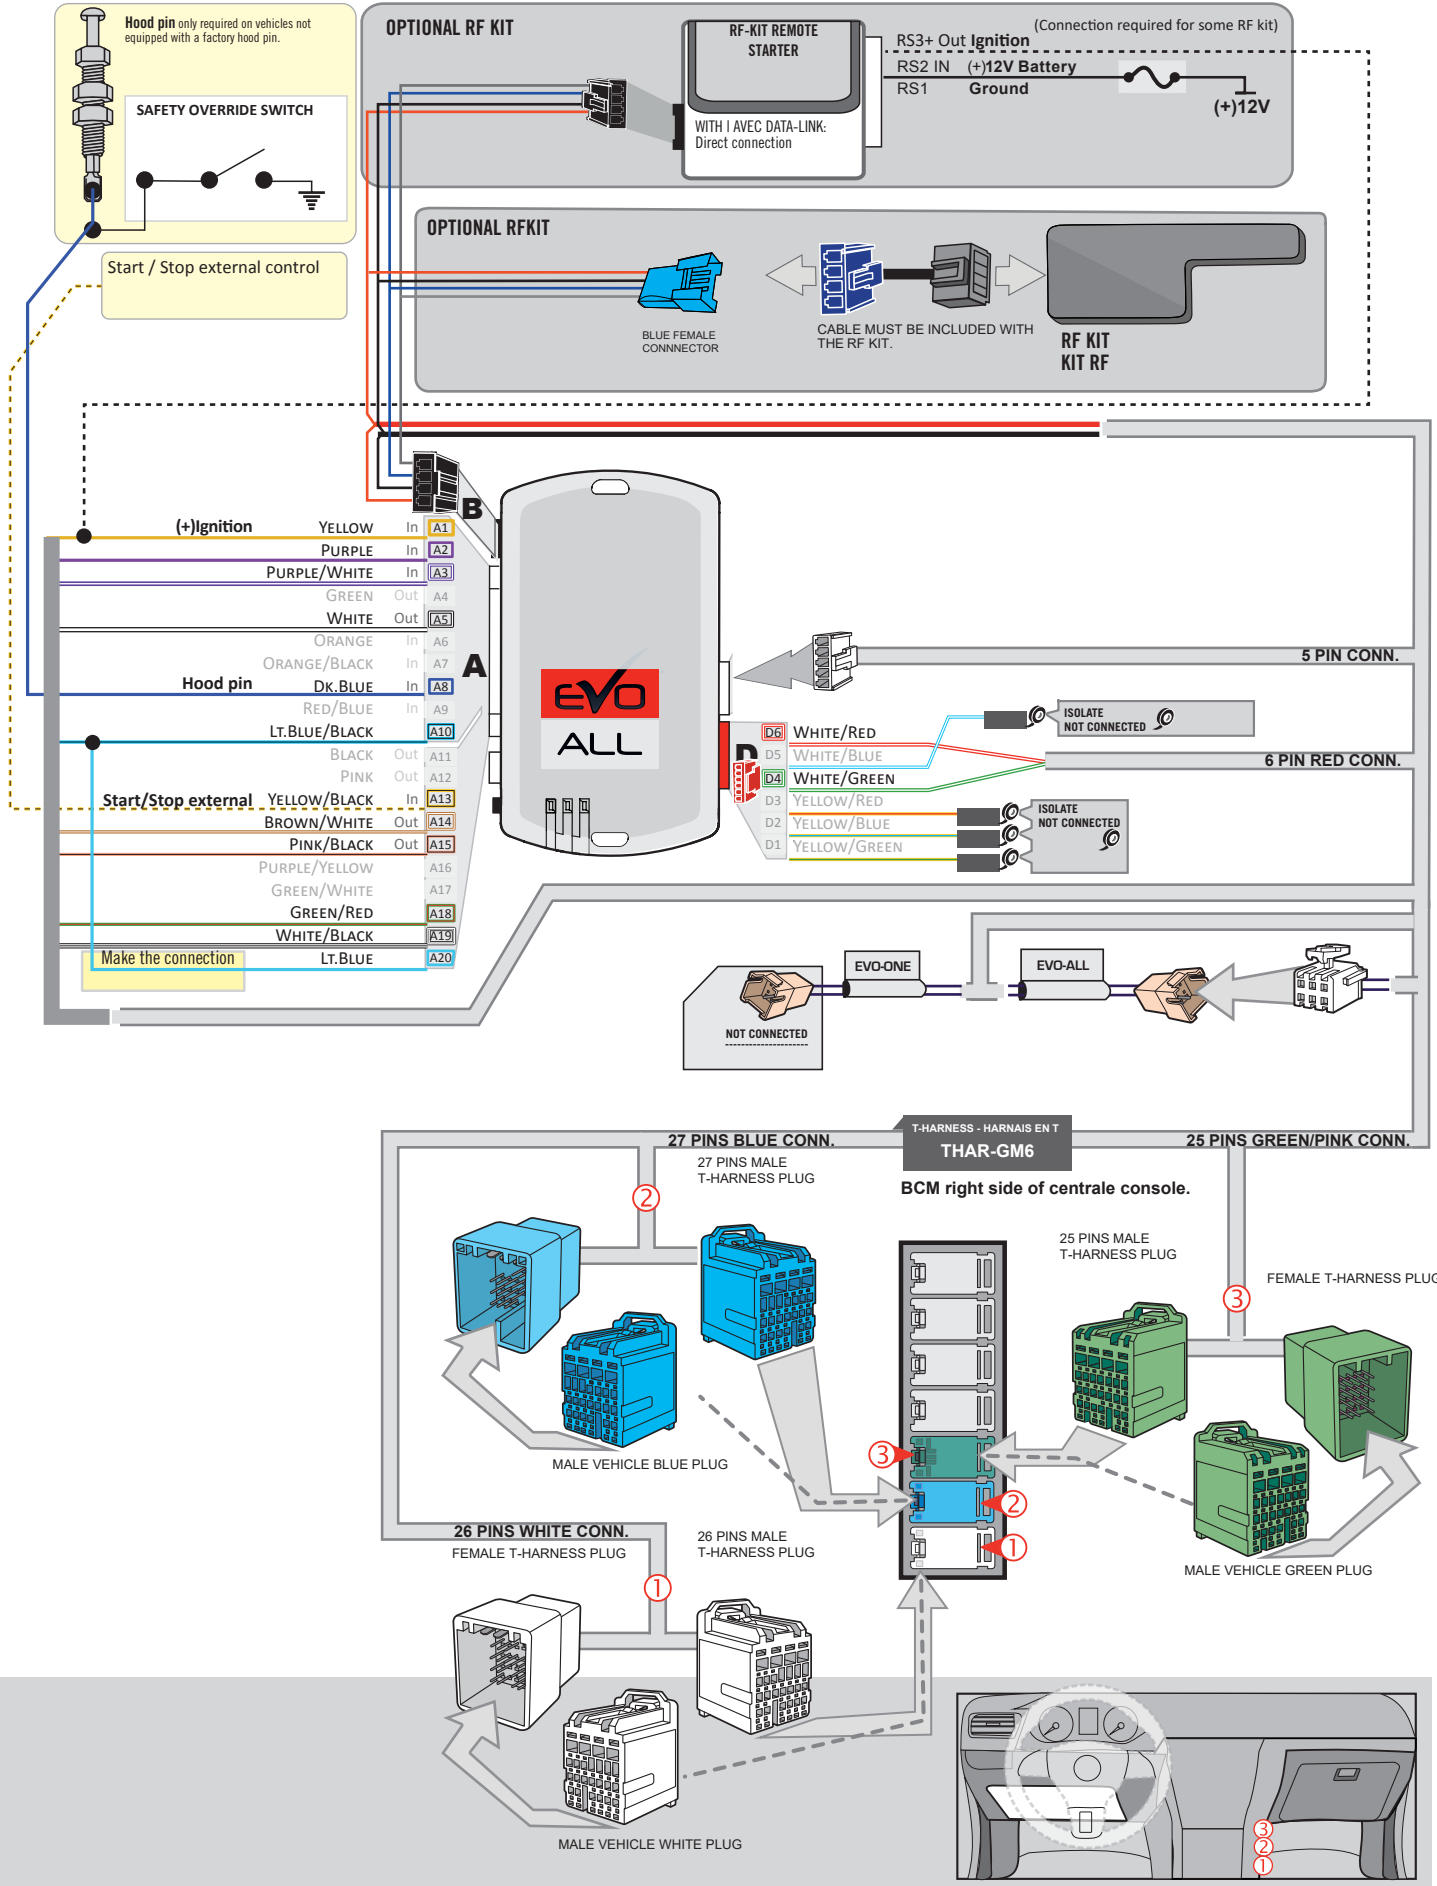


KEY BYPASS PROGRAMMING PROCEDURE 1/3



- 1** Remove the battery from the OEM remote.
- 2** Place the OEM remote in the front cup holder in the center console.
Refer to vehicle user guide for keyport location.

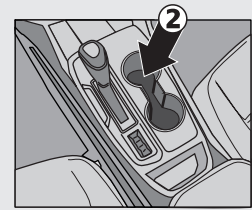


1

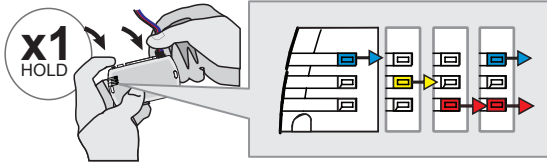

Press and hold the programming button:
Connect the 4-PIN Data-link harness (Black connector).


↳The Blue, Red, Yellow and Blue & Red LEDs will alternatively illuminate.

2

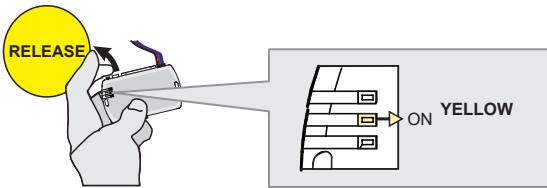


Release the programming button when the LED is YELLOW.

 If the LED is not solid YELLOW disconnect the 4-Pin connector (Data-Link) and go back to step 1.




3

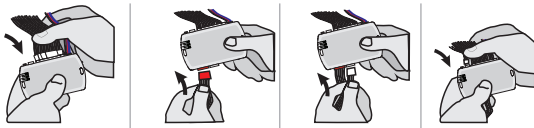

Insert the required remaining connectors.

4

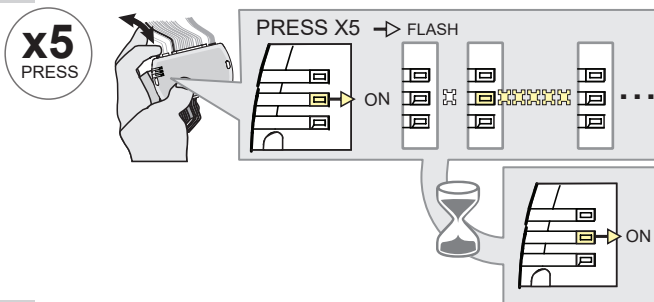


Press and release the programming button five (5x) times.

↳The YELLOW LED will flash 5 times each second.


↳**WAIT** for the YELLOW LED to turn ON solide.

 5



Open the driver door.

6

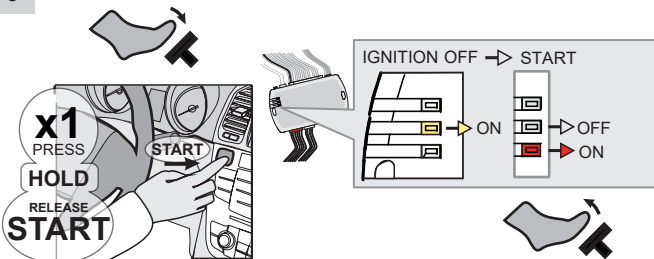

Press the foot-brake pedal.

Press the Push-to-Start button until the engine start.

Release the foot-brake pedal.

↳The RED LED will turn ON.
↳The YELLOW LED will turn OFF.


KEY BYPASS PROGRAMMING PROCEDURE 2/3

7




Press the Push-to-Start button until the engine turn OFF.

8

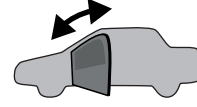

Close and open the driver door.

9

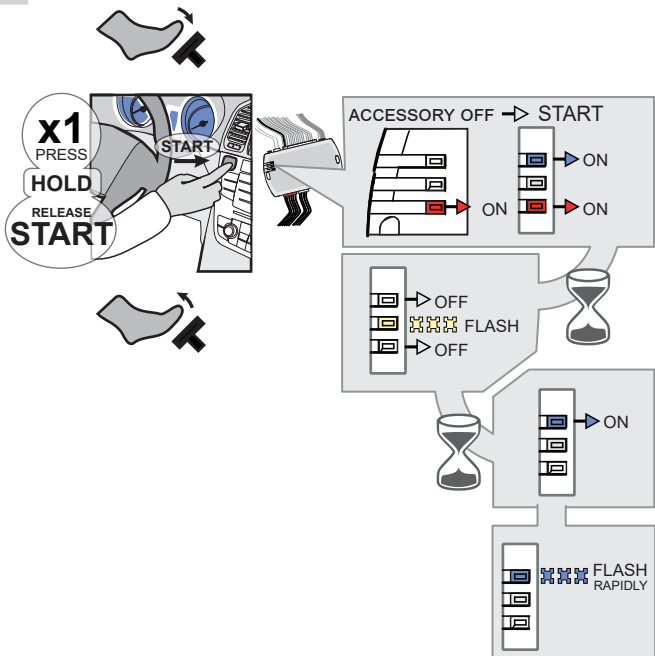


Press the foot-brake pedal.

Press the Push-to-Start button until the engine start.

Release the foot-brake pedal.

- ↳ The BLUE LED will turn ON.
- ↳ The BLUE LED will turn OFF. The RED LED will turn OFF.
- ↳ The YELLOW LED will flash rapidly
- ↳ The BLUE LED will turn ON.
- ↳ The BLUE LED will flash rapidly


10

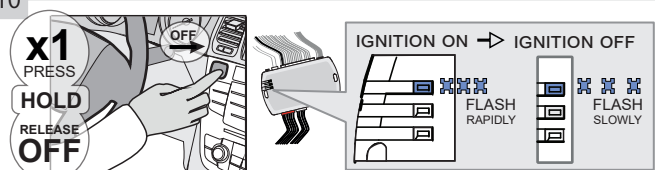

Press the Push-to-Start button until the engine turn OFF.


- ↳ The BLUE LED will flash slowly

11

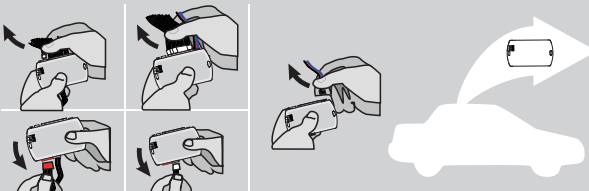

Disconnect all the connectors and after the Data-Link (4-pins) connector.

12


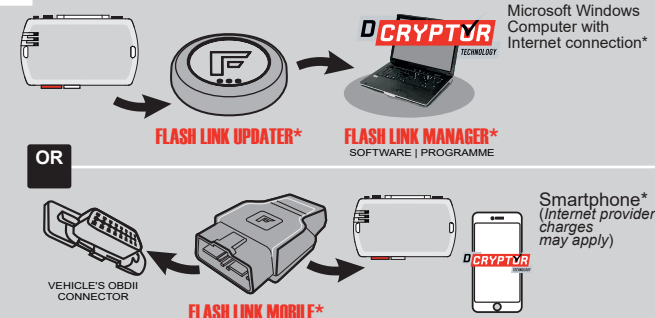


Use the tool: FLASH LINK UPDATER or FLASH LINK MOBILE to visit the DCRYPTOR menu.

*Parts required (not included)

KEY BYPASS PROGRAMMING PROCEDURE 3/3

13

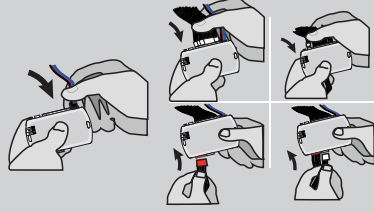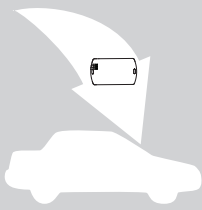

AFTER DCRYPTOR PROGRAMMING COMPLETED
Go back to the vehicle and **reconnect** the 4-Pin (Data-Link) connector and after, all the remaining connector.



The module is now programmed.



REMOTE STARTER / ALARM VERIFICATION PROCEDURE

Test the remote starter. Remote start the vehicle.

REMOTE STARTER FUNCTIONALITY



All doors must be closed.

Remote start the vehicle.



Press the Unlock button of the remote car starter.



Enter the vehicle with the Intelligent Access Key.



The vehicle can now be put in to gear and driven.



If the vehicle is not unlocked the module will shut down the remote-starter and the vehicle as soon as any door is opened.

THAR-GM6

THARNESS STAND ALONE INSTALLATION

ADDENDUM - SUGGESTED WIRING CONFIGURATION



ONLY COMPATIBLE WITH AUTOMATIC TRANSMISSION VEHICLES.



Vehicle functions supported in this diagram (functional if equipped)

VEHICLE	YEARS	Immobilizer bypass	Lock	Unlock	Arm	Disarm	Trunk (open)	RAP Disable	Tachometer	Heated Seats	Door Status	Trunk Status	Hand-Brake Status	Foot-Brake Status	OEM Remote Monitoring
BUICK															
Lacrosse	Push-To-Start	2017-2018	•	•	•	•	•	•	•	•	•	•	•	•	•

FIRMWARE VERSION

70.[41]

GM MINIMUM

To add the firmware version and the options, use the **FLASH LINK UPDATER** or **FLASH LINK MOBILE** tool, sold separately.

<p>IF THE VEHICLE IS NOT EQUIPPED WITH FUNCTIONAL HOOD PIN:</p>	A11	OFF	Hood trigger (Output Status).
--	------------	------------	-------------------------------

	Program bypass option:	UNIT OPTION	DESCRIPTION
		C1	OEM Remote status (Lock/Unlock) monitoring

	Program bypass option:	UNIT OPTION	DESCRIPTION
		D6	Push-to-Start

	ATTENTION!	<p>DATE: XX-XX</p>	E5	OFF	<p>SPECIAL FUNCTIONS: BY DEFAULT DEACTIVATED</p>
				ON	<p>MANUFACTURED MODULES BETWEEN: 04/2018 TO 04/2019</p>



Parts required (Not included)

1X THAR-GM6

MANDATORY INSTALL

***HOOD PIN**



HOOD STATUS: THE HOOD PIN SWITCH MUST BE INSTALLED IF THE VEHICLE CAN BE REMOTE STARTED WITH THE HOOD OPEN, SET FUNCTION A11 TO OFF.

A11

OFF

Notice: the installation of safety elements are mandatory. The hood pin is an essential security element and must be installed.

THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.


PARTS REQUIRED (NOT INCLUDED)


1x **FLASH LINK UPDATER,**
 1x **FLASH LINK MANAGER**
SOFTWARE | PROGRAMME
 1x Microsoft Windows Computer with Internet connection

OR

1x **FLASH LINK MOBILE**
 1x **FLASH LINK MOBILE APP**
Smartphone Android or iOS with Internet connection (provider charges may apply).

MANDATORY

HOOD PIN 

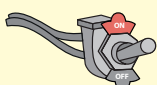
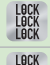



REMOTE START SAFETY OVERRIDE SWITCH 

VALET SWITCH


Part #: RSPB available, Sold separately.

Notice: the installation of safety elements are mandatory. The hood pin and the valet switch are essential security elements and must be installed.


STAND ALONE CONFIGURATION

	Program bypass option	UNIT OPTION	DESCRIPTION
	OEM Remote Stand Alone Remote Starter:	D1.10 	By default, LOCK, LOCK, LOCK Par défaut, VERROUILLE,VERROUILLE,VERROUILLE
		D1.1 	
	Program bypass option with oem remote:	C1	OEM Remote Monitoring
	Program bypass option with RF KIT antenna:	H1 to H6	Supported RF Kits and select RF Kit


REMOTE STARTER FUNCTIONALITY



All doors must be closed.

3X 

Press the OEM remote's Lock button 3x to remote-start (or remote-stop) the vehicle.




The vehicle will START.

REMOTE STARTER DIAGNOSTICS
MODULE RED LED

x2 flash :	Brake ON
x3 flash :	No tach
x4 flash :	Ignition before start
x5 flash :	Hood Open

REMOTE STARTER WARNING CARD



CUT THIS WARNING CARD AND STICK IT ON A VISIBLE PLACE:
 or use the package RSPB, Sold separately.

WARNING

REMOTE STARTER

THE VEHICLE CAN BE STARTED BY EITHER: PRESSING THE LOCK BUTTON ON THE OEM REMOTE 3 TIMES CONSECUTIVELY OR BY A SMARTPHONE. **TURN ON** THE SAFETY SWITCH LOCATED UNDER THE DASHBOARD BEFORE WORKING ON THE VEHICLE.

DESCRIPTION


BCM located on passenger side center console




③




②

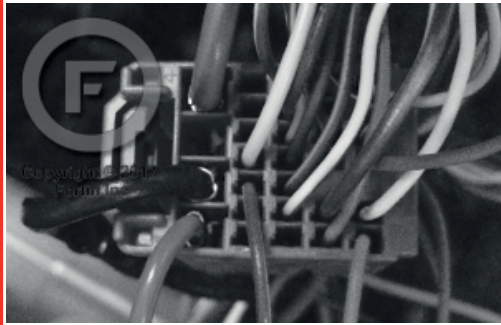


①

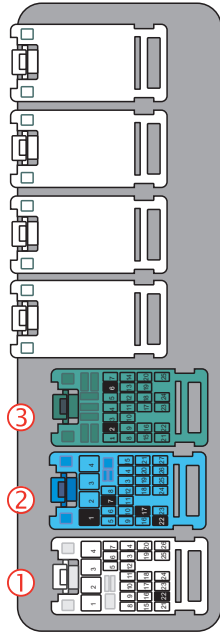


AUTOMATIC TRANSMISSION WIRING CONNECTION

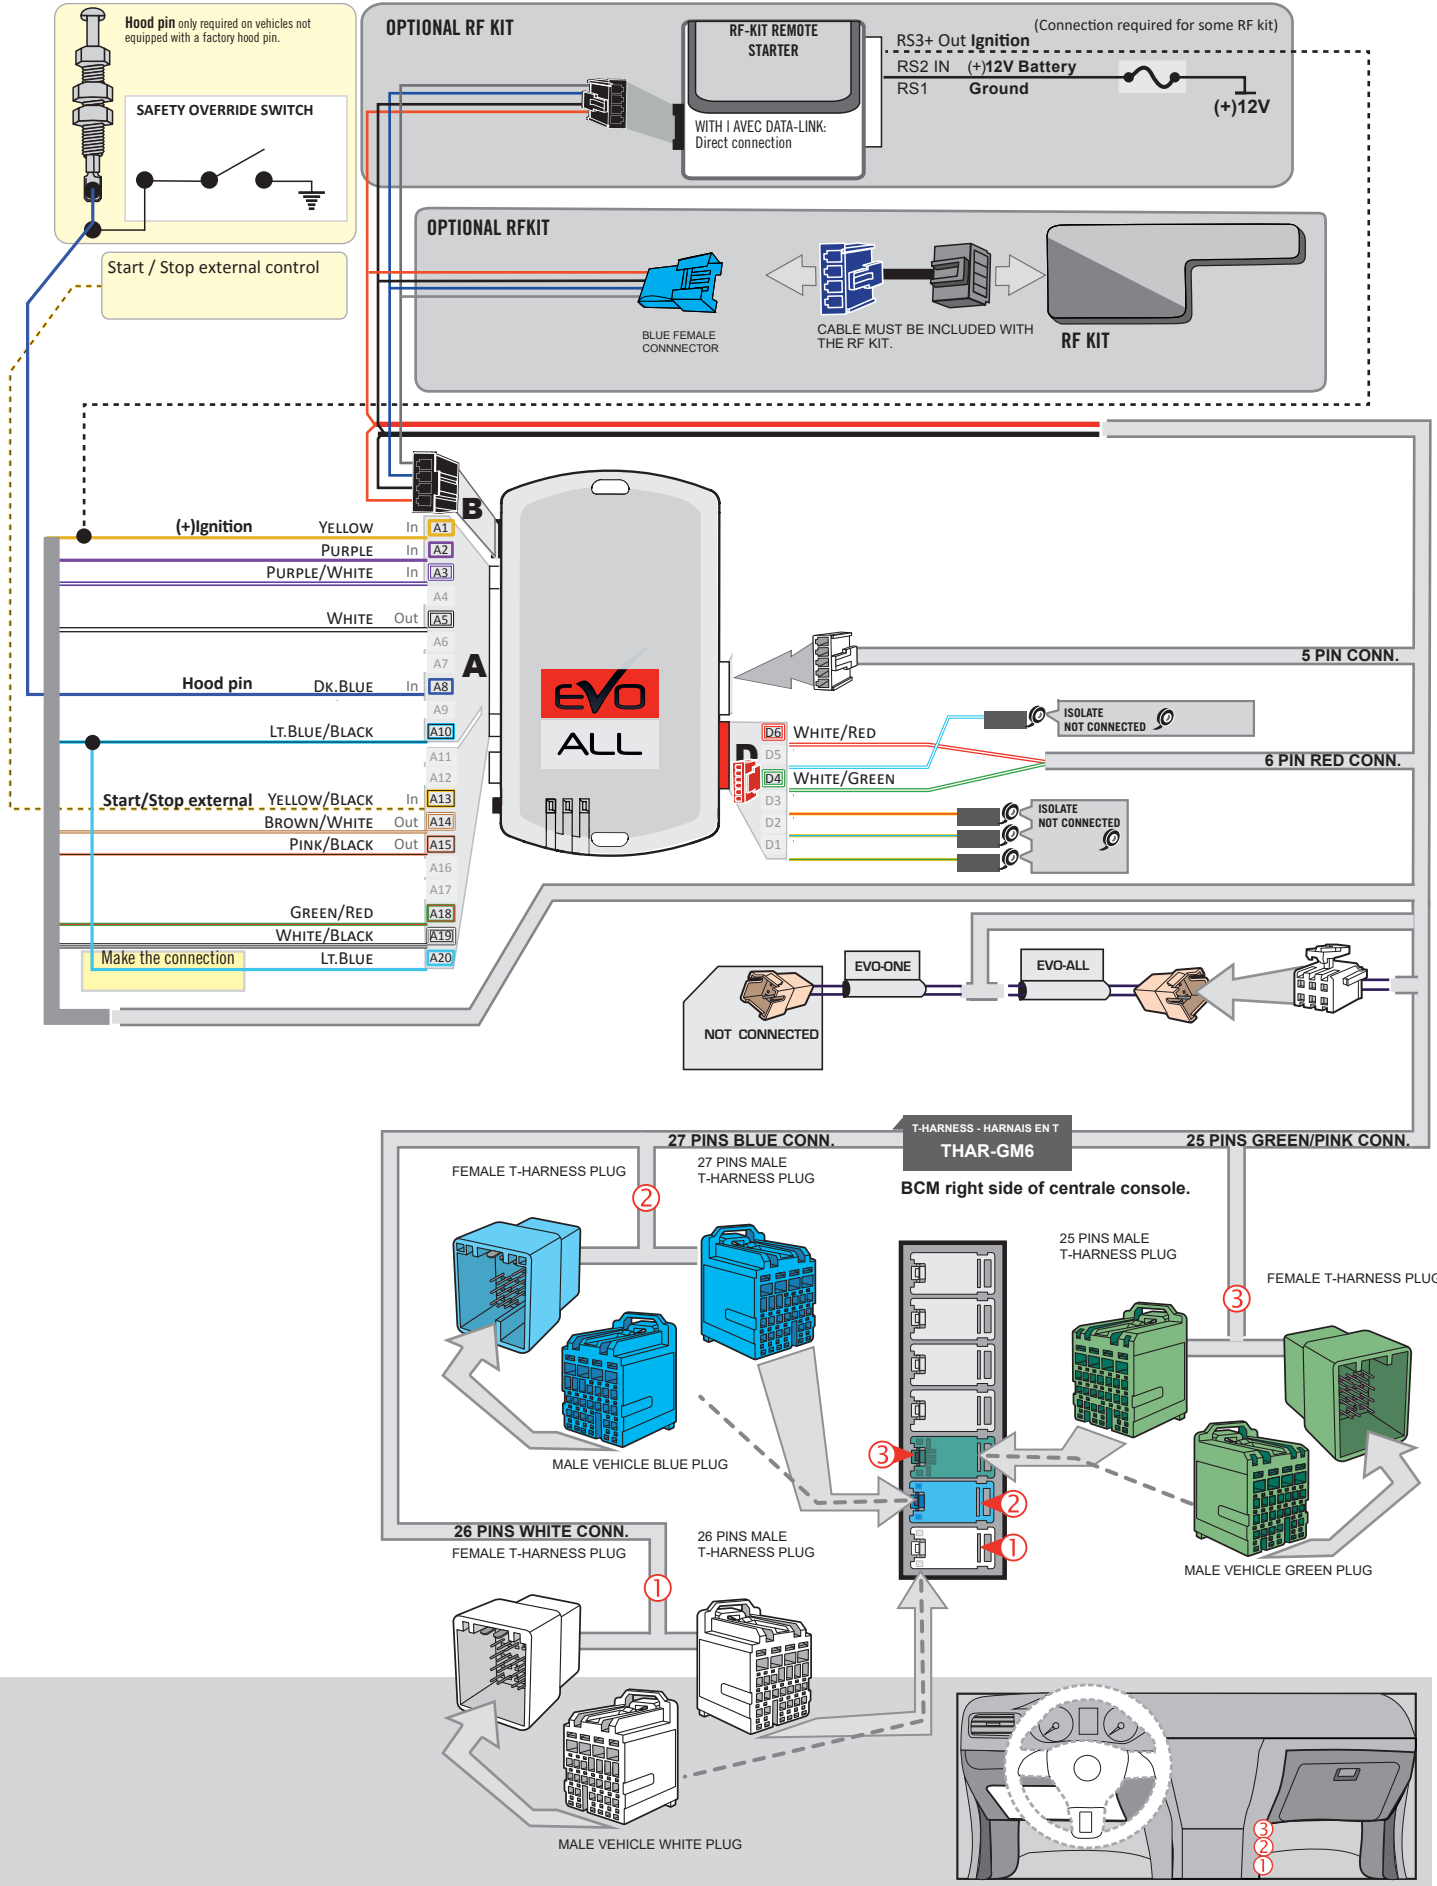

KEY BYPASS PROGRAMMING PROCEDURE 1/3

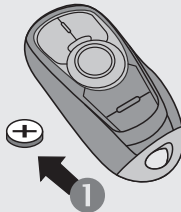


1 Remove the battery from the OEM remote.

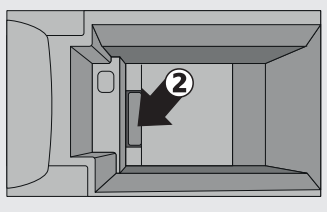

2 Place the OEM remote into the transmitter pocket of the center console.
Refer to vehicle user guide for keyport location.

1

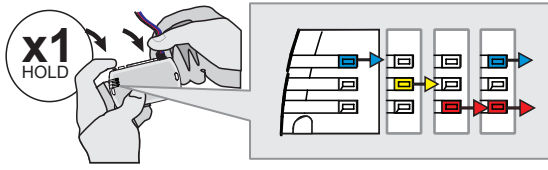


x1 HOLD

Press and hold the programming button:
Connect the 4-PIN Data-link harness (Black connector).

↳The Blue, Red, Yellow and Blue & Red LEDs will alternatively illuminate.


2

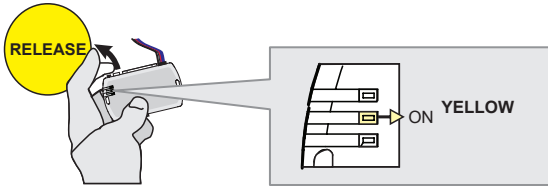


RELEASE

Release the programming button when the LED is **YELLOW**.

If the LED is not solid YELLOW disconnect the 4-Pin connector (Data-Link) and go back to step 1.

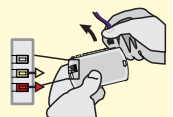


3

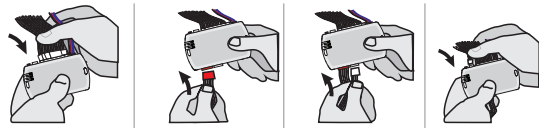

Insert the required remaining connectors.

4

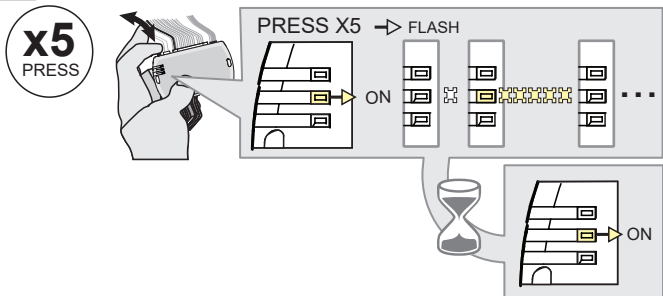


x5 PRESS

Press and release the programming button five (5x) times.

↳The YELLOW LED will flash 5 times each second.


↳WAIT for the YELLOW LED to turn ON solide.

5

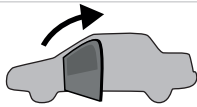

Open the driver door.

6

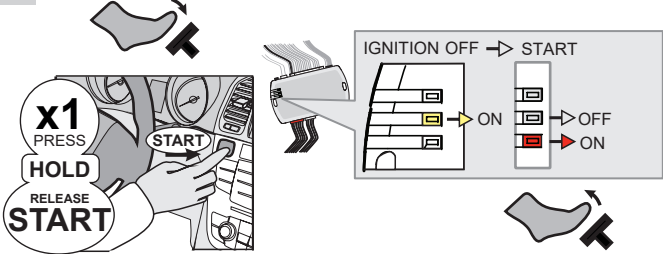

x1 PRESS
HOLD
RELEASE
START

IGNITION OFF -> START

Press the foot-brake pedal.
Press the Push-to-Start button until the engine start.
Release the foot-brake pedal.

↳The RED LED will turn ON.
↳The YELLOW LED will turn OFF.


KEY BYPASS PROGRAMMING PROCEDURE 2/3

7




Press the Push-to-Start button until the engine turn OFF.

8

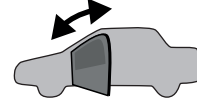

Close and open the driver door.

9

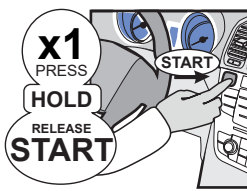


Press the foot-brake pedal.

Press the Push-to-Start button until the engine start.

Release the foot-brake pedal.

- ↳ The BLUE LED will turn ON.
- ↳ The BLUE LED will turn OFF. The RED LED will turn OFF.
- ↳ The YELLOW LED will flash rapidly
- ↳ The BLUE LED will turn ON.
- ↳ The BLUE LED will flash rapidly


10

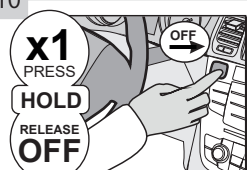

Press the Push-to-Start button until the engine turn OFF.


- ↳ The BLUE LED will flash slowly

11

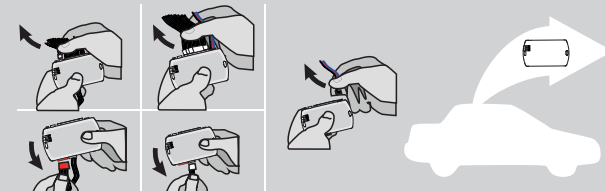

Disconnect all the connectors and after the Data-Link (4-pins) connector.


12

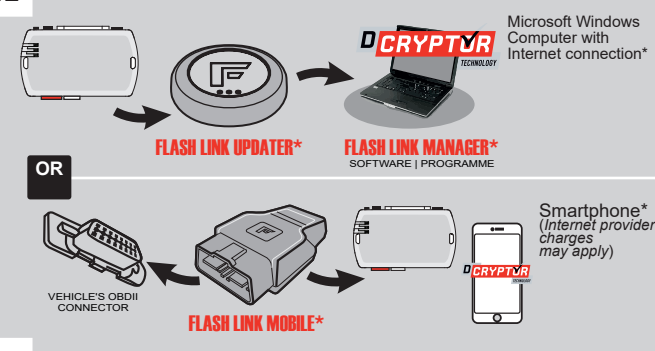

Use the tool: FLASH LINK UPDATER or FLASH LINK MOBILE to visit the DCryptor menu.

***Parts required (not included)**

13

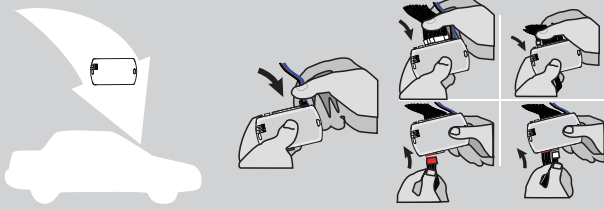

AFTER DCRYPTOR PROGRAMMING COMPLETED
Go back to the vehicle and **reconnect** the 4-Pin (Data-Link) connector and after, all the remaining connector.



The module is now programmed.



REMOTE STARTER / ALARM VERIFICATION

Test the remote starter. Remote start the vehicle.

REMOTE STARTER FUNCTIONALITY |

 


All doors must be closed.

Remote start the vehicle.



Press the Unlock button of the remote car starter.



Enter the vehicle with the Intelligent Access Key.



The vehicle can now be put in to gear and driven.



If the vehicle is not unlocked the module will shut down the remote-starter and the vehicle as soon as any door is opened.

THAR-GM6
THARNNESS STAND ALONE INSTALLATION

ADDENDUM - SUGGESTED WIRING CONFIGURATION


ONLY COMPATIBLE WITH AUTOMATIC TRANSMISSION VEHICLES.


Vehicle functions supported in this diagram (functional if equipped)

VEHICLE	YEARS	Immobilizer bypass	Lock	Unlock	Arm	Disarm	Trunk (open)	Parking Light	RAP Disable	Tachometer	Heated Seats	Door Status	Trunk Status	Hand-Brake Status	Foot-Brake Status	OEM Remote Monitoring
BUICK																
Verano	Push-To-Start	2012-2017	•	•	•	•	•	•	•	•	•	•	•	•	•	•
CHEVROLET																
Blazer	Push-To-Start	2019-2020	•	•	•	•	•	•	•	•	•	•	•	•	•	•
Malibu	Push-To-Start	2016-2020	•	•	•	•	•	•	•	•	•	•	•	•	•	•
Traverse	Push-To-Start	2018-2020	•	•	•	•	•	•	•	•	•	•	•	•	•	•
GMC																
Terrain	Push-To-Start	2018-2020	•	•	•	•	•	•	•	•	•	•	•	•	•	•



FIRMWARE VERSION

70.[41]

GM MINIMUM

 To add the firmware version and the options, use the **FLASH LINK UPDATER** or **FLASH LINK MOBILE** tool, sold separately.

IF THE VEHICLE IS NOT EQUIPPED WITH FUNCTIONAL HOOD PIN:
A11
OFF

Hood trigger (Output Status).


Program bypass option:

UNIT OPTION


DESCRIPTION

C1

OEM Remote status (Lock/Unlock) monitoring

D6

Push-to-Start

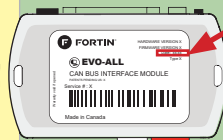
ATTENTION!


DATE: XX-XX

E5
OFF
SPECIAL FUNCTIONS: BY DEFAULT DEACTIVATED
ON
MANUFACTURED MODULES BETWEEN: 04/2018 TO 04/2019

Parts required (Not included)

1X THAR-GM6

MANDATORY INSTALL
***HOOD PIN**

HOOD STATUS: THE HOOD PIN SWITCH MUST BE INSTALLED IF THE VEHICLE CAN BE REMOTE STARTED WITH THE HOOD OPEN, SET FUNCTION A11 TO OFF.

A11
OFF
Notice: the installation of safety elements are mandatory. The hood pin is an essential security element and must be installed.

THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.

PARTS REQUIRED (NOT INCLUDED)

1x **FLASH LINK UPDATER**
 1x **FLASH LINK MANAGER**
 SOFTWARE
 1x Microsoft Windows Computer with Internet connection

OR

1x **FLASH LINK MOBILE**
 1x **FLASH LINK MOBILE APP**
 Smartphone *Android* or *iOS* with Internet connection (*provider charges may apply*).
 1x

MANDATORY

HOOD PIN



REMOTE START SAFETY OVERRIDE SWITCH


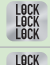





VALET SWITCH


Part #: RSPB available, Sold separately.

Notice: the installation of safety elements are mandatory. The hood pin and the valet switch are essential security elements and must be installed.


STAND ALONE CONFIGURATION

	Program bypass option	UNIT OPTION	DESCRIPTION
	OEM Remote Stand Alone Remote Starter:	D1.10 	By default, LOCK, LOCK, LOCK Par défaut, VERROUILLE,VERROUILLE,VERROUILLE
		D1.1 	
	Program bypass option with oem remote:	C1	OEM Remote Monitoring
	Program bypass option with RF KIT antenna:	H1 to H6	Supported RF Kits and select RF Kit


REMOTE STARTER FUNCTIONALITY




All doors must be closed.

3X 

Press the OEM remote's Lock button 3x to remote-start (or remote-stop) the vehicle.



START 

The vehicle will START.

REMOTE STARTER DIAGNOSTICS
MODULE RED LED


x2 flash :	Brake ON
x3 flash :	No tach
x4 flash :	Ignition before start
x5 flash :	Hood Open

REMOTE STARTER WARNING CARD



CUT THIS WARNING CARD AND STICK IT ON A VISIBLE PLACE:
 or use the package **RSPB**, Sold separately.

WARNING



REMOTE STARTER


THE VEHICLE CAN BE STARTED BY EITHER: PRESSING THE LOCK BUTTON ON THE OEM REMOTE 3 TIMES CONSECUTIVELY OR BY A SMARTPHONE. **TURN ON** THE SAFETY SWITCH LOCATED UNDER THE DASHBOARD BEFORE WORKING ON THE VEHICLE.

DESCRIPTION | DESCRIPTION


BCM




Centrale console

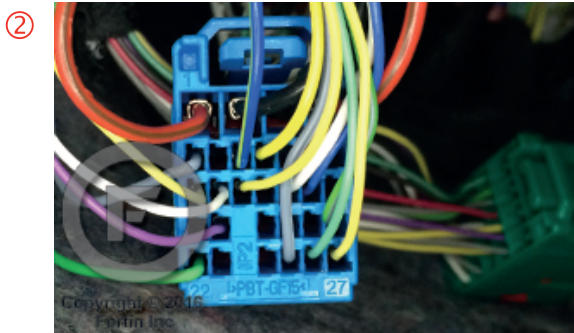

WIRING CONNECTION

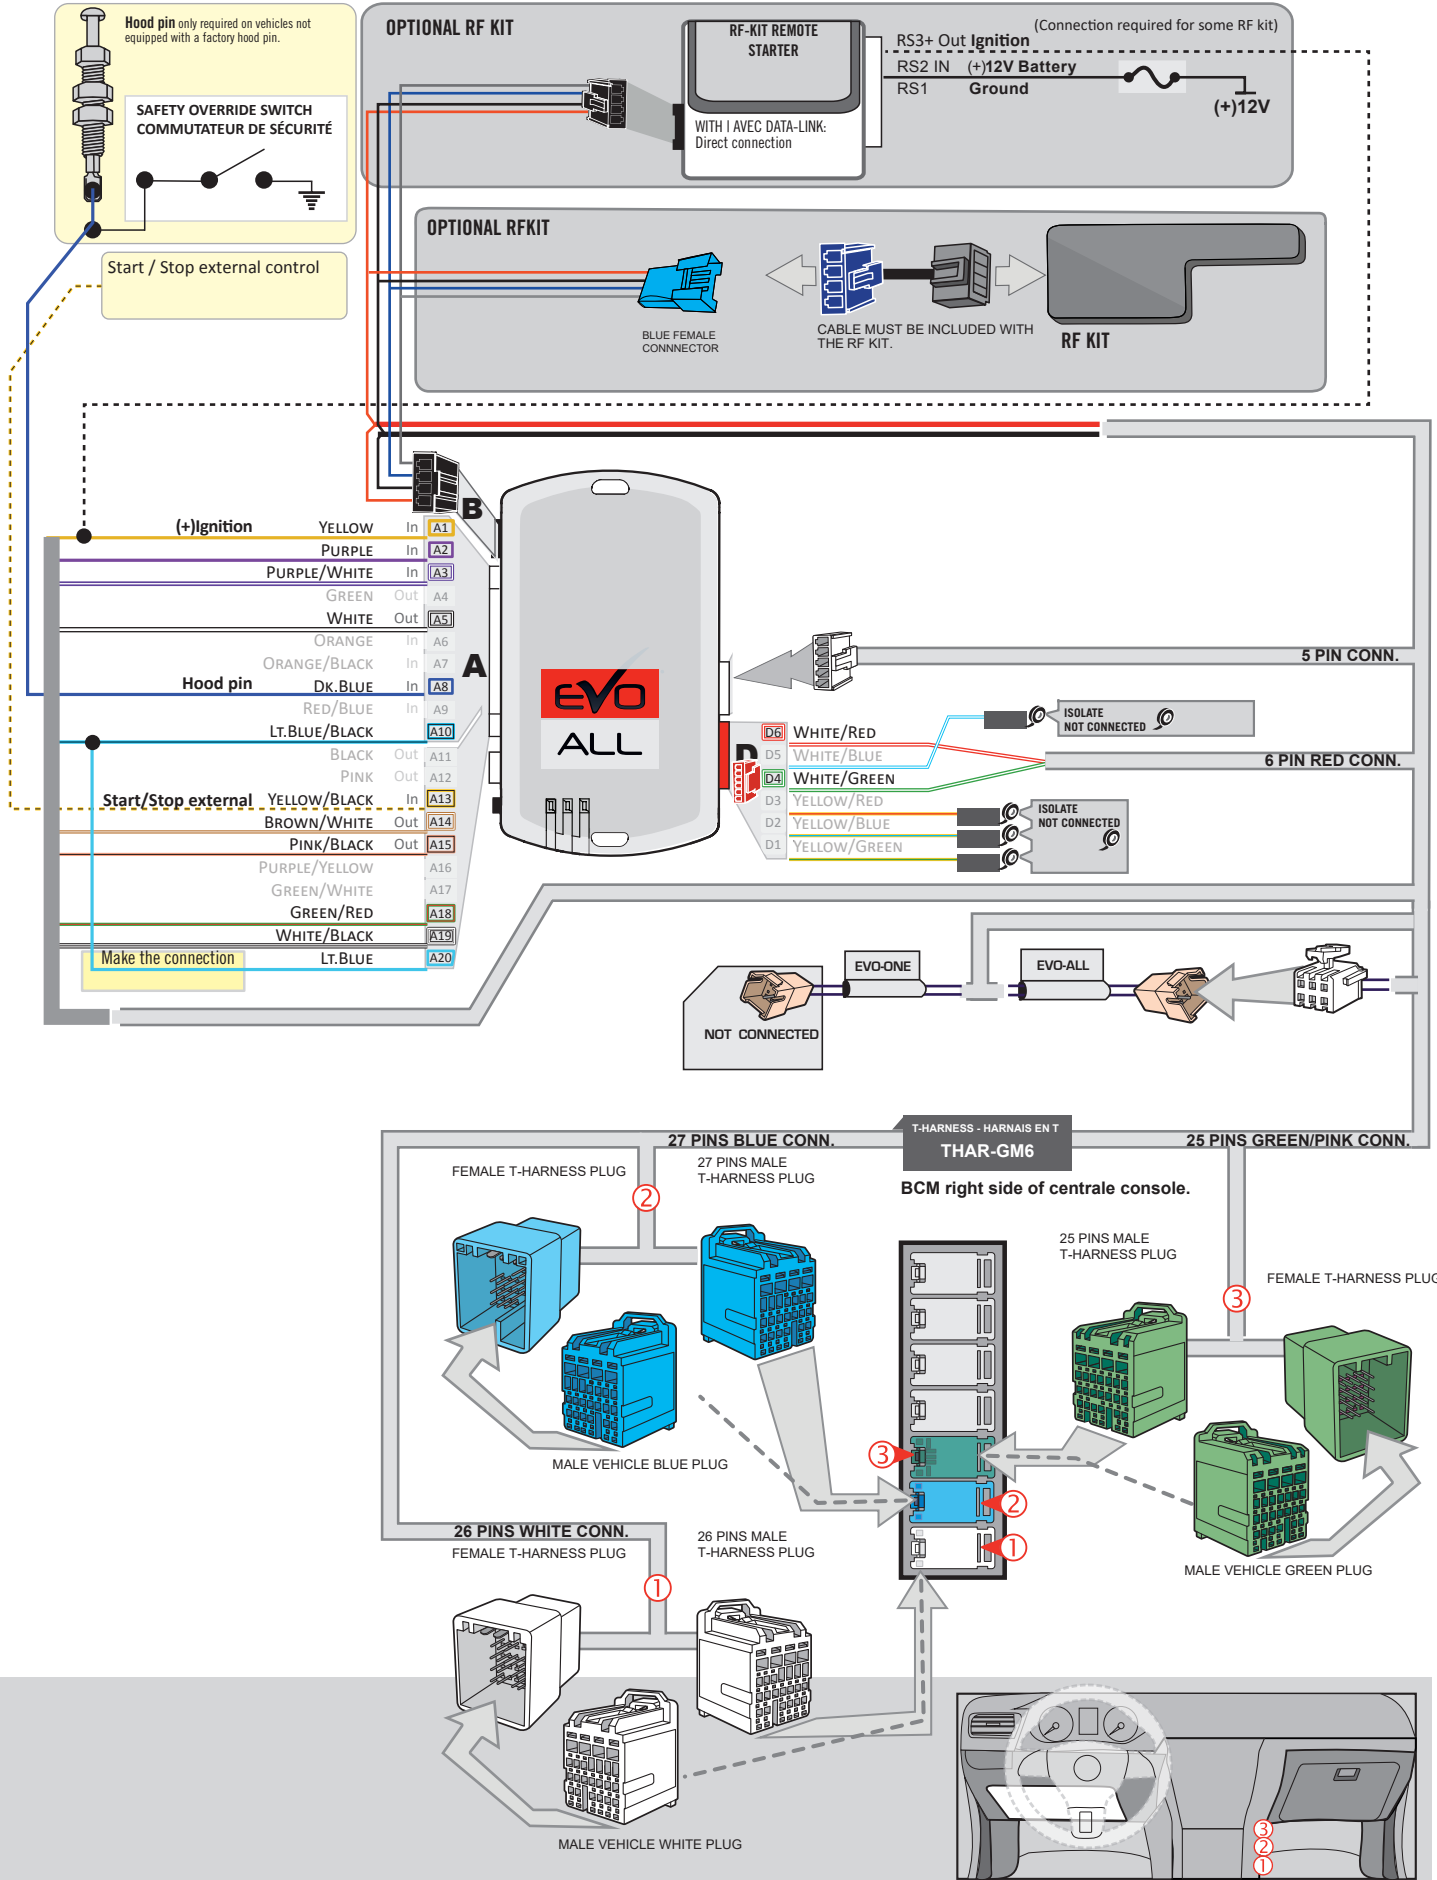


KEY BYPASS PROGRAMMING PROCEDURE 1/3

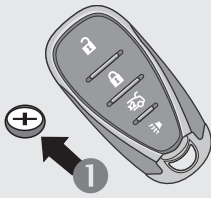


1 Remove the battery from the OEM remote.

2 Place the OEM remotes in to the center console.

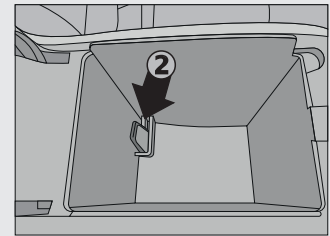


1

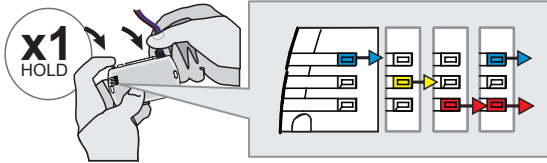

Press and hold the programming button:
Connect the 4-PIN Data-link harness (Black connector).


↳The Blue, Red, Yellow and Blue & Red LEDs will alternatively illuminate.

2

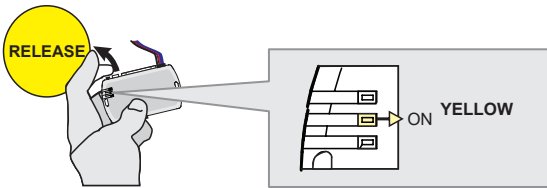


Release the programming button when the LED is YELLOW.

 If the LED is not solid YELLOW disconnect the 4-Pin connector (Data-Link) and go back to step 1.




3

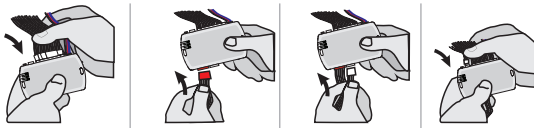

Insert the required remaining connectors.

4

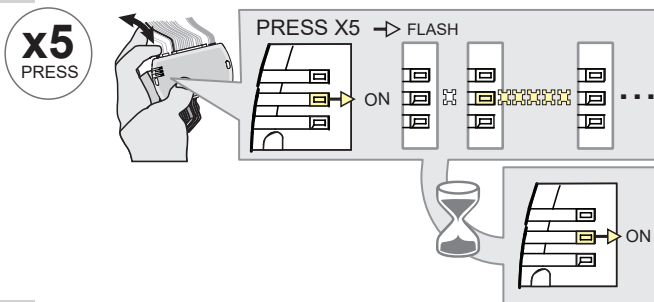


Press and release the programming button five (5x) times.

↳The YELLOW LED will flash 5 times each second.


↳**WAIT** for the YELLOW LED to turn ON solide.

 5



Open the driver door.

6

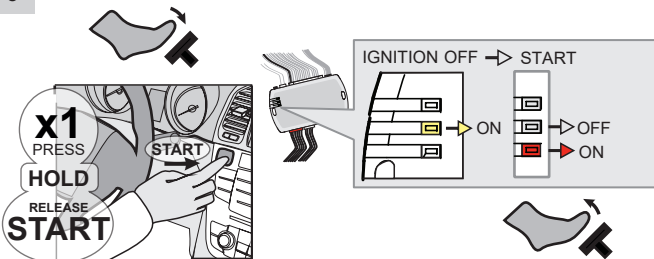


Press the foot-brake pedal.

Press the Push-to-Start button until the engine start.


Release the foot-brake pedal.

↳The RED LED will turn ON.
↳The YELLOW LED will turn OFF.


KEY BYPASS PROGRAMMING PROCEDURE 2/3

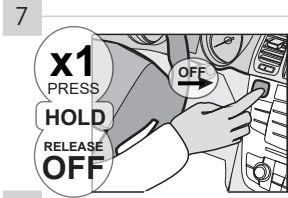

 Press the Push-to-Start button until the engine turn OFF.



Close and open the driver door.

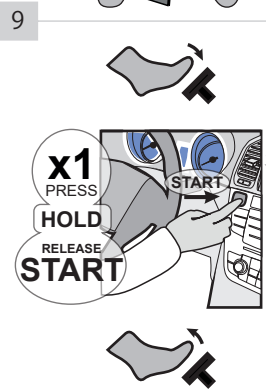

Press the foot-brake pedal.

Press the Push-to-Start button until the engine start.

Release the foot-brake pedal.


↳ The BLUE LED will turn ON.

↳ The BLUE LED will turn OFF. The RED LED will turn OFF.

↳ The YELLOW LED will flash rapidly


↳ The BLUE LED will turn ON.

↳ The BLUE LED will flash rapidly

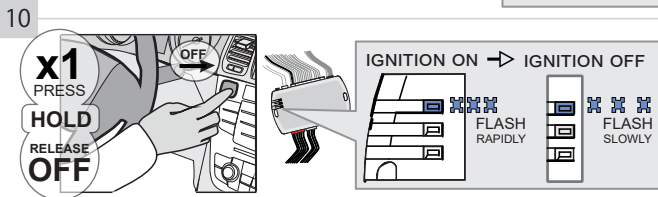


Press the Push-to-Start button until the engine turn OFF.

↳ The BLUE LED will flash slowly

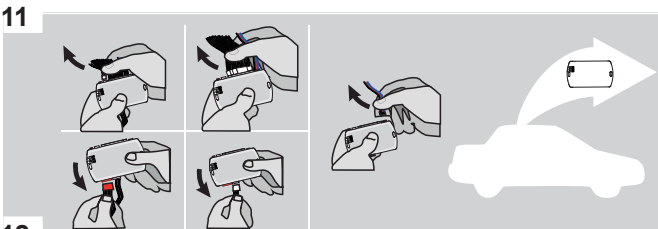

Disconnect all the connectors and after the Data-Link (4-pins) connector.


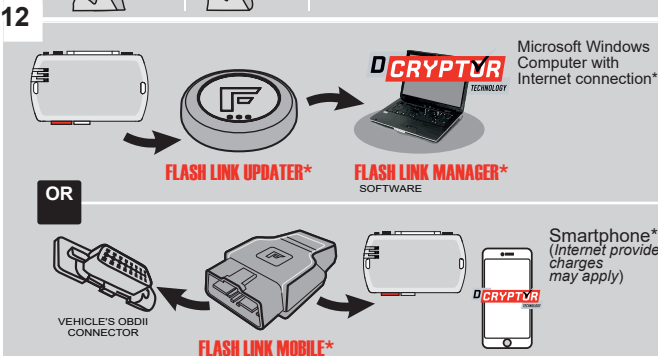


Use the tool: FLASH LINK UPDATER or FLASH LINK MOBILE to visit the DCRYPTOR menu.

*Parts required (not included)

KEY BYPASS PROGRAMMING PROCEDURE 3/3

13

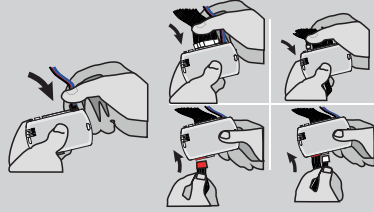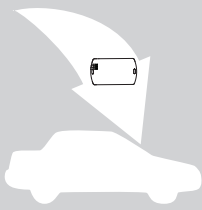

AFTER DCRYPTOR PROGRAMMING COMPLETED
Go back to the vehicle and **reconnect** the 4-Pin (Data-Link) connector and after, all the remaining connector.



The module is now programmed.



REMOTE STARTER / ALARM VERIFICATION PROCEDURE

Test the remote starter. **Remote start** the vehicle.

REMOTE STARTER FUNCTIONALITY



All doors must be closed.



Remote start the vehicle.



Unlock the doors with either:

- The OEM remote
- The remote-starter remote
- Or the proximity remote



Enter the vehicle with the Intelligent Key.



The vehicle can now be put in to gear and driven.

If the vehicle is not unlocked with one of these conditions the remote-starter will shut down as soon as any door is opened.



THAR-GM6

THARNNESS STAND ALONE INSTALLATION

ADDENDUM - SUGGESTED WIRING CONFIGURATION



ONLY COMPATIBLE WITH AUTOMATIC TRANSMISSION VEHICLES.



Vehicle functions supported in this diagram (functional if equipped)

VEHICLE	YEARS	Immobilizer bypass	Lock	Unlock	Arm	Disarm	RAP Disable	Tachometer	Heated Seats	Door Status	Hand-Brake Status	Foot-Brake Status	OEM Remote Monitoring
GMC													
Sierra 1500	Push-To-Start	2019-2020	•	•	•	•	•	•	•	•	•	•	•
Sierra 2500	Push-To-Start	2020	•	•	•	•	•	•	•	•	•	•	•
Sierra 3500	Push-To-Start	2020	•	•	•	•	•	•	•	•	•	•	•

FIRMWARE VERSION

70.[41]

GM MINIMUM

To add the firmware version and the options, use the **FLASH LINK UPDATER** or **FLASH LINK MOBILE** tool, sold separately.

IF THE VEHICLE IS NOT EQUIPPED WITH FUNCTIONAL HOOD PIN:

A11

OFF

Hood trigger (Output Status).

	Program bypass option:	UNIT OPTION	DESCRIPTION
		C1	OEM Remote status (Lock/Unlock) monitoring
		D6	Push-to-Start

ATTENTION!

DATE: XX-XX

E5

OFF

SPECIAL FUNCTIONS: BY DEFAULT DEACTIVATED

MANUFACTURED MODULES BETWEEN: 04/2018 TO 04/2019

Parts required (Not included)

1X THAR-GM6

MANDATORY INSTALL

***HOOD PIN**

HOOD STATUS: THE HOOD PIN SWITCH MUST BE INSTALLED IF THE VEHICLE CAN BE REMOTE STARTED WITH THE HOOD OPEN, SET FUNCTION **A11** TO OFF.

A11

OFF

Notice: the installation of safety elements are mandatory. The hood pin is an essential security element and must be installed.

THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.

PARTS REQUIRED (NOT INCLUDED)

1x **FLASH LINK UPDATER,**
 1x **FLASH LINK MANAGER**
SOFTWARE | PROGRAMME
 1x Microsoft Windows Computer with Internet connection

OR

1x **FLASH LINK MOBILE**
 1x **FLASH LINK MOBILE APP**
Smartphone Android or iOS with Internet connection (provider charges may apply).

MANDATORY

HOOD PIN 


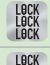



REMOTE START SAFETY OVERRIDE SWITCH 

VALET SWITCH


Part #: RSPB available, Sold separately.

Notice: the installation of safety elements are mandatory. The hood pin and the valet switch are essential security elements and must be installed.


STAND ALONE CONFIGURATION

	Program bypass option	UNIT OPTION	DESCRIPTION
	OEM Remote Stand Alone Remote Starter:	D1.10 	By default, LOCK, LOCK, LOCK Par défaut, VERROUILLE,VERROUILLE,VERROUILLE
		D1.1 	
	Program bypass option with oem remote:	C1	OEM Remote Monitoring
	Program bypass option with RF KIT antenna:	H1 to H6	Supported RF Kits and select RF Kit


REMOTE STARTER FUNCTIONALITY




All doors must be closed.

3X 

Press the OEM remote's Lock button 3x to remote-start (or remote-stop) the vehicle.




START 

The vehicle will START.

REMOTE STARTER DIAGNOSTICS
MODULE RED LED

x2 flash :	Brake ON
x3 flash :	No tach
x4 flash :	Ignition before start
x5 flash :	Hood Open

REMOTE STARTER WARNING CARD



CUT THIS WARNING CARD AND STICK IT ON A VISIBLE PLACE:
 or use the package RSPB, Sold separately.


WARNING

REMOTE STARTER


THE VEHICLE CAN BE STARTED BY EITHER: PRESSING THE LOCK BUTTON ON THE OEM REMOTE 3 TIMES CONSECUTIVELY OR BY A SMARTPHONE. **TURN ON** THE SAFETY SWITCH LOCATED UNDER THE DASHBOARD BEFORE WORKING ON THE VEHICLE.

DESCRIPTION


BCM, Above Driver kick panel

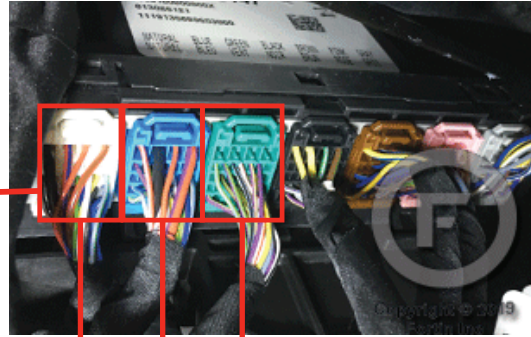


①

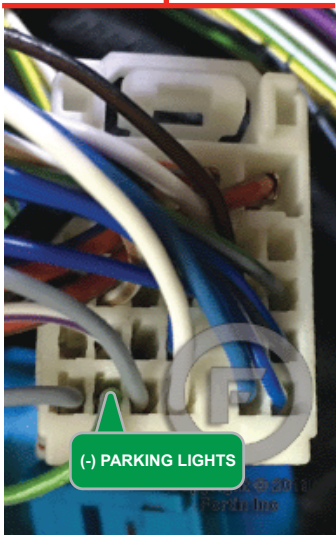


②

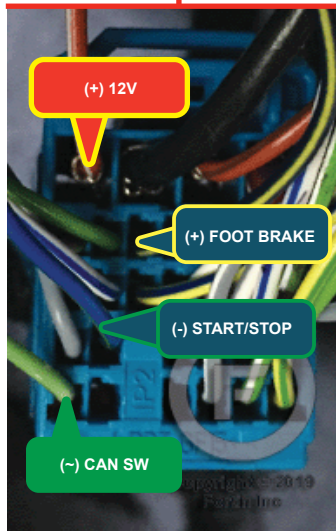


③

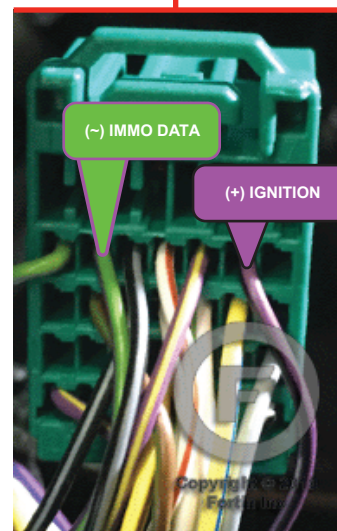


AUTOMATIC TRANSMISSION WIRING CONNECTION

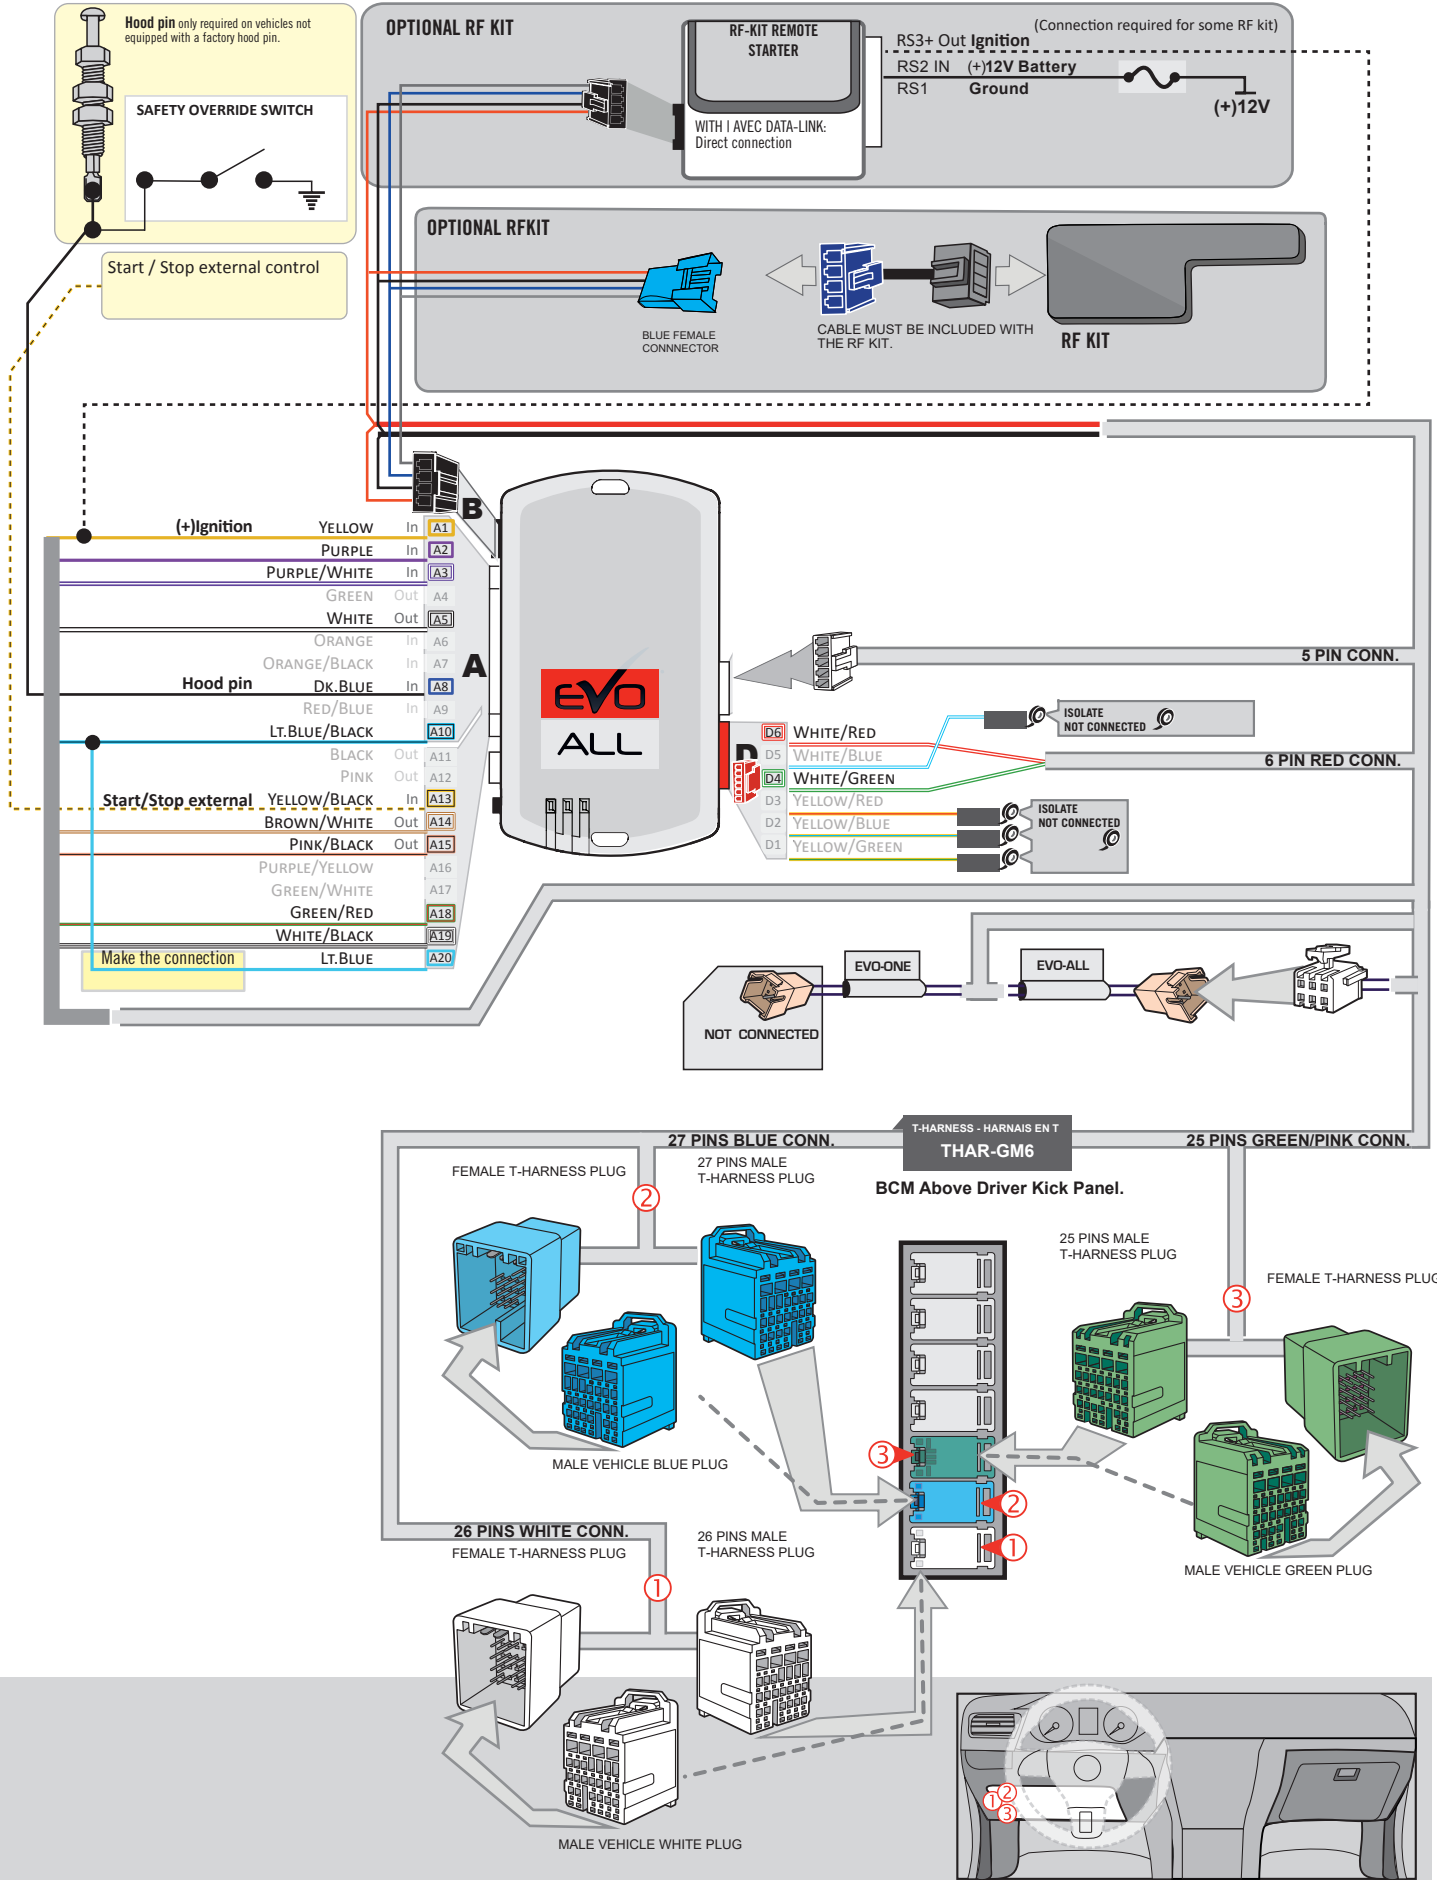


KEY BYPASS PROGRAMMING PROCEDURE 1/3

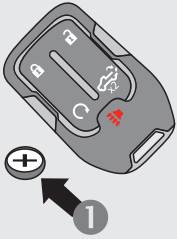


- 1** Remove the battery from the OEM remote.
- 2** Place the OEM remotes in to the center console.

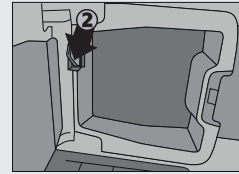

- 1** Remove the battery from the OEM remote.
- 2** Place the transmitter in the cupholder
Refer to vehicle user guide for keyport location.

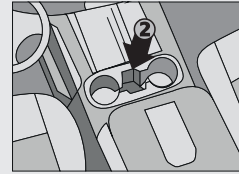


1

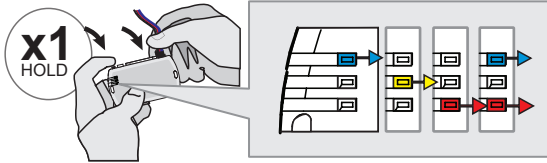

Press and hold the programming button:
Connect the 4-PIN Data-link harness (Black connector).


↳The Blue, Red, Yellow and Blue & Red LEDs will alternatively illuminate.

2

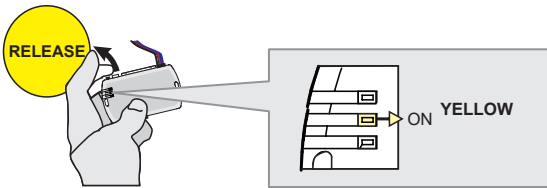


Release the programming button when the LED is YELLOW.

 If the LED is not solid YELLOW disconnect the 4-Pin connector (Data-Link) and go back to step 1.




3

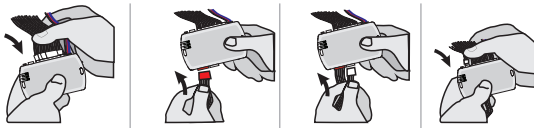

Insert the required remaining connectors.

4

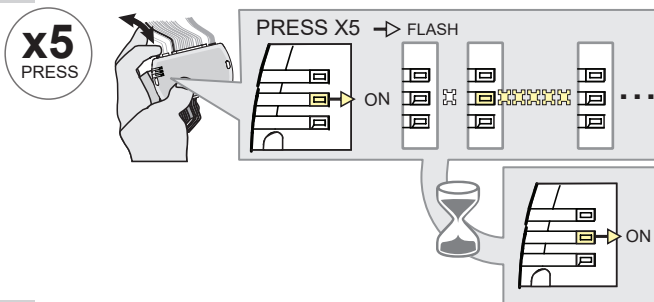


Press and release the programming button five (5x) times.

↳The YELLOW LED will flash 5 times each second.


↳WAIT for the YELLOW LED to turn ON solide.

 5



Open the driver door.

6

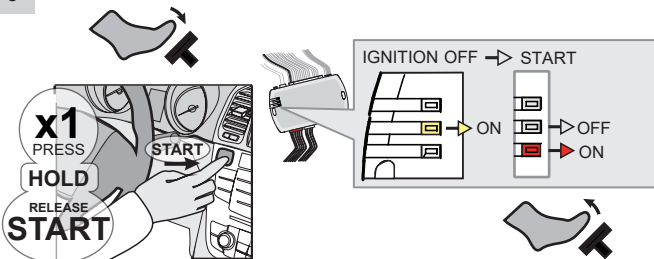

Press the foot-brake pedal.

Press the Push-to-Start button until the engine start.

Release the foot-brake pedal.

*↳The RED LED will turn ON.
↳The YELLOW LED will turn OFF.*


KEY BYPASS PROGRAMMING PROCEDURE 2/3

7




Press the Push-to-Start button until the engine turn OFF.

8

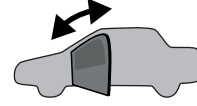

Close and open the driver door.

9

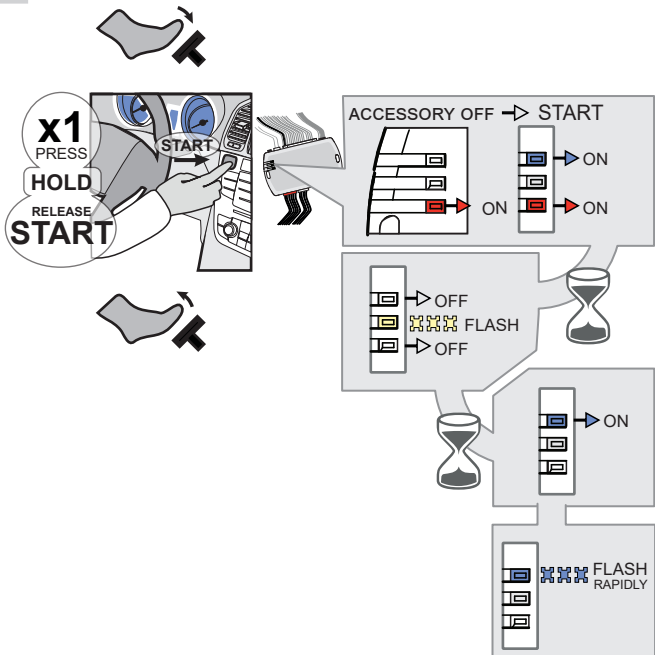


Press the foot-brake pedal.

Press the Push-to-Start button until the engine start.

Release the foot-brake pedal.

- ↳ The BLUE LED will turn ON.
- ↳ The BLUE LED will turn OFF. The RED LED will turn OFF.
- ↳ The YELLOW LED will flash rapidly
- ↳ The BLUE LED will turn ON.
- ↳ The BLUE LED will flash rapidly


10

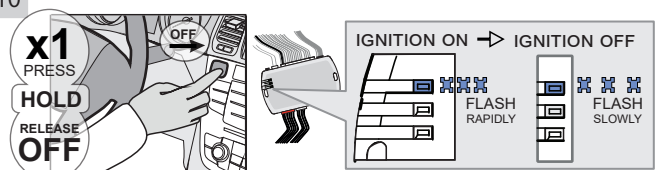

Press the Push-to-Start button until the engine turn OFF.


- ↳ The BLUE LED will flash slowly

11

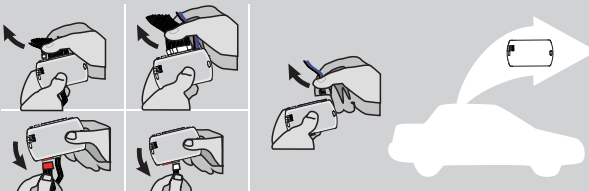

Disconnect all the connectors and after the Data-Link (4-pins) connector.

12


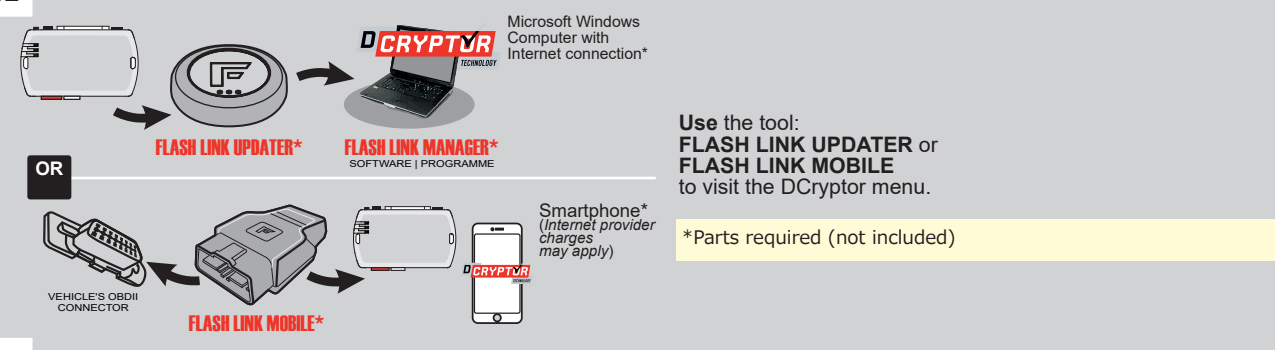


Use the tool: FLASH LINK UPDATER or FLASH LINK MOBILE to visit the DCryptor menu.

***Parts required (not included)**

KEY BYPASS PROGRAMMING PROCEDURE 3/3

13

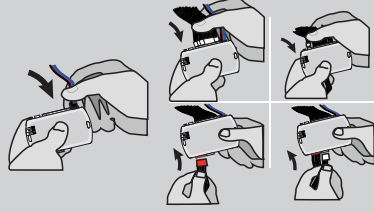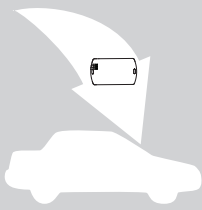

AFTER DCRYPTOR PROGRAMMING COMPLETED
Go back to the vehicle and **reconnect** the 4-Pin (Data-Link) connector and after, all the remaining connector.



The module is now programmed.



REMOTE STARTER / ALARM VERIFICATION PROCEDURE


Test the remote starter. Remote start the vehicle.

OPTIONAL RF-KIT PROGRAMMING



PROGRAM BYPASS OPTION

	<p>Program bypass option:</p>	<p>H2</p>	<p><input checked="" type="checkbox"/> Supported RF-KITS enable <input checked="" type="checkbox"/> H2 Fortin 2</p>
---	-------------------------------	------------------	---





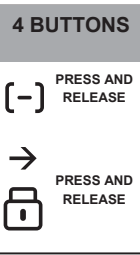
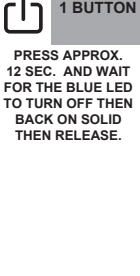
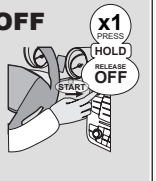
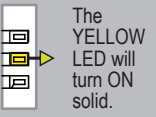
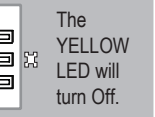
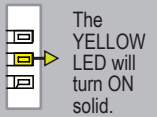
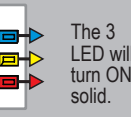
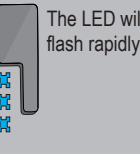
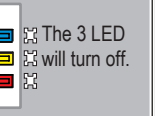
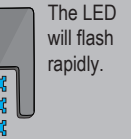
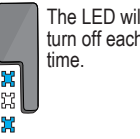
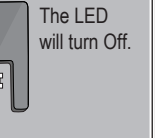
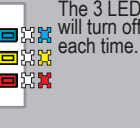
OPTIONAL FORTIN RF KIT SERIES 4 OR SERIES 9 PROGRAMMING



The module must be programmed on the vehicle.

MAKE SURE THE IGNITION KEY HAS BEEN IN THE OFF POSITION FOR AT LEAST 5 SECONDS.

<p>1</p> <p>ON</p>  <p>Press the foot-brake pedal. Press the Push-to-Start button until the engine start. Release the foot-brake pedal.</p>	<p>2</p> <p>OFF</p>  <p>Press the Push-to-Start button until the engine turn OFF.</p>	<p>3</p> <p>ON</p>  <p>Press the foot-brake pedal. Press the Push-to-Start button until the engine start. Release the foot-brake pedal.</p>	<p>4</p> <p>4X BRAKES</p>  <p>Press and release the brake pedal four times.</p>	<p>5</p> <p>ON EACH TRANSMITTER</p> <p>4 BUTTONS</p>  <p>1 BUTTON</p>  <p>Press approx. 12 sec. and wait for the blue led to turn off then back on solid then release.</p>	<p>6</p> <p>OFF</p>  <p>Press the Push-to-Start button until the engine turn OFF.</p>
 <p>The YELLOW LED will turn ON solid.</p>	 <p>The YELLOW LED will turn Off.</p>	 <p>The YELLOW LED will turn ON solid.</p>	 <p>The 3 LED will turn ON solid.</p>	 <p>The LED will flash rapidly.</p>	 <p>The 3 LED will turn off.</p>
			 <p>The LED will flash rapidly.</p>	 <p>The LED will turn off each time.</p>	 <p>The LED will turn Off.</p>
				 <p>The 3 LED will turn off each time.</p>	

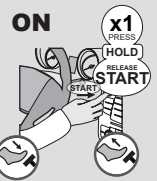

REMOTE STARTER FUNCTIONALITY



All doors must be closed.

Remote start the vehicle.



Press the Unlock button of the remote car starter.



Enter the vehicle with the Intelligent Access Key.



The vehicle can now be put in to gear and driven.



If the vehicle is not unlocked the module will shut down the remote-starter and the vehicle as soon as any door is opened.

THARNESSTAND ALONE INSTALLATION ADDENDUM - SUGGESTED WIRING CONFIGURATION

THAR-GM6



ONLY COMPATIBLE WITH AUTOMATIC TRANSMISSION VEHICLES.



Vehicle functions supported in this diagram (functional if eq

VEHICLE	YEARS	Immobilizer bypass	Lock	Unlock	Arm	Disarm	RAP Disable	Tachometer	Heated Seats	Door Status	Hand-Brake Status	Foot-Brake Status	OEM Remote Monitoring
CHEVROLET													
Silverado 2500	Push-To-Start	2020-2021	•	•	•	•	•	•	•	•	•	•	•
GMC													
Sierra 2500	Push-To-Start	2020-2021	•	•	•	•	•	•	•	•	•	•	•

FIRMWARE VERSION

70.[45]

GM MINIMUM

To add the firmware version and the options, use the **FLASH LINK UPDATER** or **FLASH LINK MOBILE** tool, sold separately.

UNIT OPTION	DESCRIPTION
C1	OEM Remote status (Lock/Unlock) monitoring
A11 <input type="checkbox" value="OFF"/>	Hood trigger (Output Status).
D6	Push-to-Start

ATTENTION!

DATE: XX-XX

E5

SPECIAL FUNCTIONS: BY DEFAULT DEACTIVATED

MANUFACTURED MODULES BETWEEN: 04/2018 TO 04/2019

Parts required (Not included)
1X THAR-GM6

MANDATORY INSTALL

*HOOD PIN



HOOD STATUS: THE HOOD PIN SWITCH MUST BE INSTALLED IF THE VEHICLE CAN BE REMOTE STARTED WITH THE HOOD OPEN, SET FUNCTION **A11** TO OFF.

A11

Notice: the installation of safety elements are mandatory. The hood pin is an essential security element and must be installed.

THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.


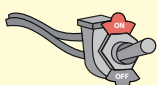
PARTS REQUIRED (NOT INCLUDED)

1x **FLASH LINK UPDATER,**
 1x **FLASH LINK MANAGER**
SOFTWARE | PROGRAMME
 1x Microsoft Windows Computer with Internet connection

OR

1x **FLASH LINK MOBILE**
 1x **FLASH LINK MOBILE APP**
Smartphone Android or iOS with Internet connection (provider charges may apply).

MANDATORY


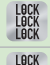



HOOD PIN  REMOTE START SAFETY OVERRIDE SWITCH 

VALET SWITCH


Part #: RSPB available, Sold separately.

Notice: the installation of safety elements are mandatory. The hood pin and the valet switch are essential security elements and must be installed.


STAND ALONE CONFIGURATION

	Program bypass option	UNIT OPTION	DESCRIPTION
	OEM Remote Stand Alone Remote Starter:	D1.10 	By default, LOCK, LOCK, LOCK
		D1.1 	Par défaut, VERROUILLE,VERROUILLE,VERROUILLE
	Program bypass option with oem remote:	C1	OEM Remote Monitoring
	Program bypass option with RF KIT antenna:	H1 to H6	Supported RF Kits and select RF Kit


REMOTE STARTER FUNCTIONALITY




All doors must be closed.

3X 

Press the OEM remote's Lock button 3x to remote-start (or remote-stop) the vehicle.




START 

The vehicle will START.

REMOTE STARTER DIAGNOSTICS
MODULE RED LED

x2 flash :	Brake ON
x3 flash :	No tach
x4 flash :	Ignition before start
x5 flash :	Hood Open

REMOTE STARTER WARNING CARD



CUT THIS WARNING CARD AND STICK IT ON A VISIBLE PLACE:
 or use the package RSPB, Sold separately.



WARNING

REMOTE STARTER


THE VEHICLE CAN BE STARTED BY EITHER: PRESSING THE LOCK BUTTON ON THE OEM REMOTE 3 TIMES CONSECUTIVELY OR BY A SMARTPHONE. **TURN ON** THE SAFETY SWITCH LOCATED UNDER THE DASHBOARD BEFORE WORKING ON THE VEHICLE.

DESCRIPTION

BCM

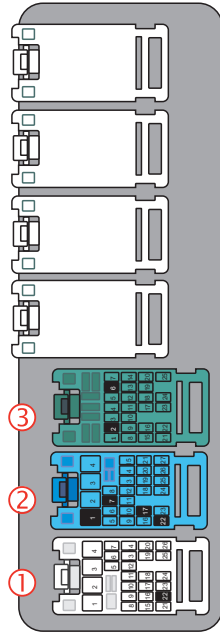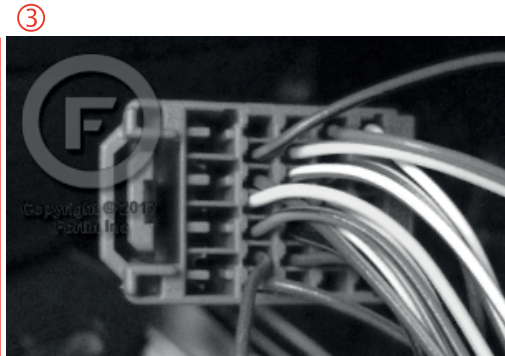


AUTOMATIC TRANSMISSION WIRING CONNECTION

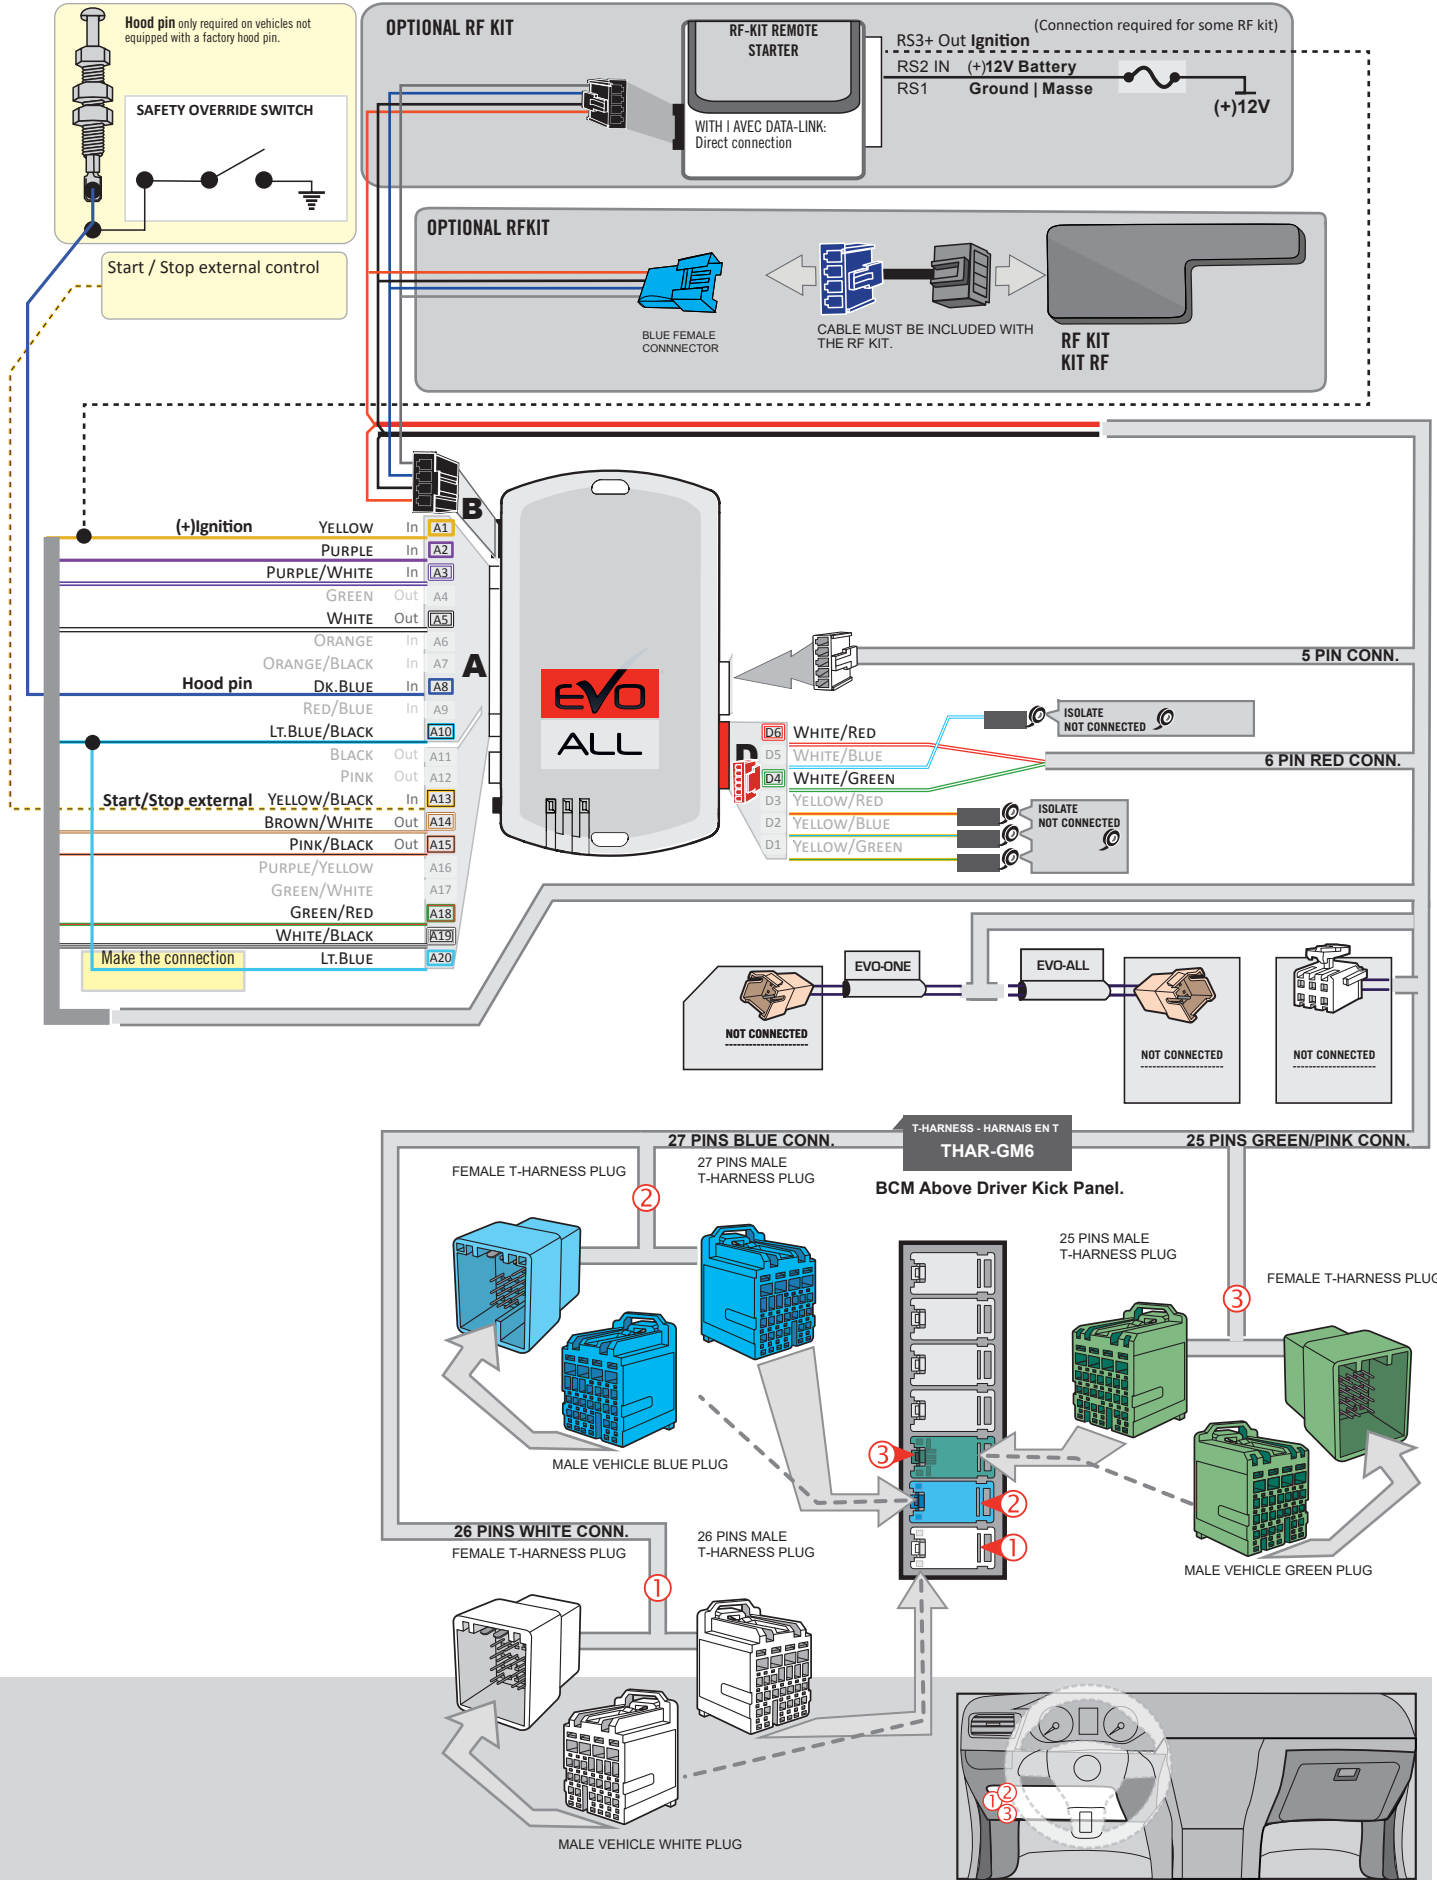

KEY BYPASS PROGRAMMING PROCEDURE 1/3

**SIERRA
SILVERADO**

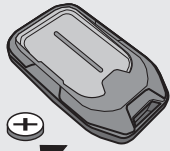


- 1** Remove the battery from the OEM remote.
- 2** Place the OEM remote in the middle part of the cup holder in the center console.


Refer to vehicle user guide for keyport location.

- 1** Remove the battery from the OEM remote.
- 2** Place the transmitter in the transmitter pocket, which is inside the **centre** console storage area.


Refer to vehicle user guide for keyport location.

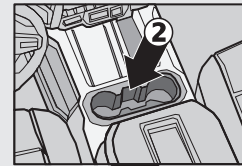

OR
OU

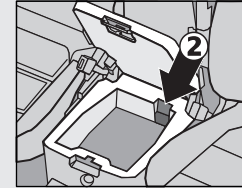


1

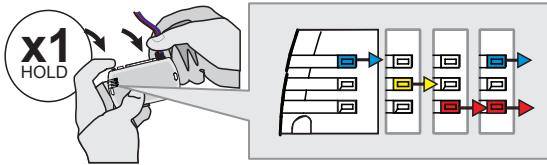

Press and hold the programming button:
Connect the 4-PIN Data-link harness (Black connector).


↳The Blue, Red, Yellow and Blue & Red LEDs will alternatively illuminate.

2

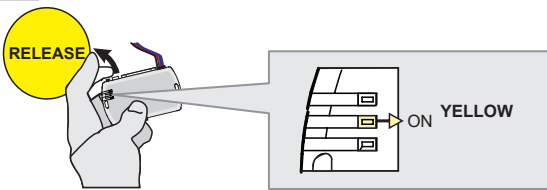


Release the programming button when the LED is **YELLOW**.

 If the LED is not solid YELLOW disconnect the 4-Pin connector (Data-Link) and go back to step 1.




3

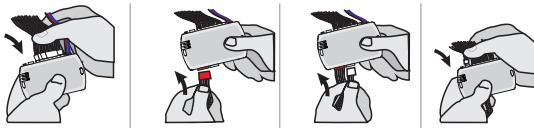

Insert the required remaining connectors.

4

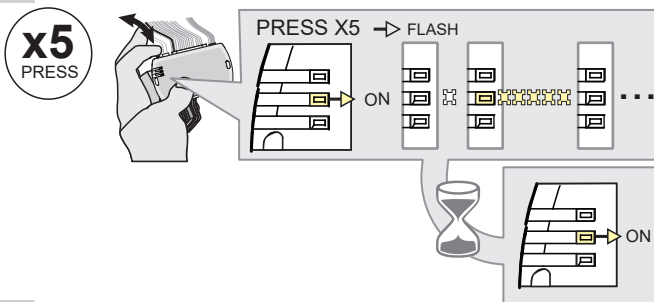


Press and release the programming button five (5x) times.

↳The **YELLOW LED** will flash 5 times each second.


↳**WAIT** for the **YELLOW LED** to turn **ON** solide.

 5



Open the driver door.

6

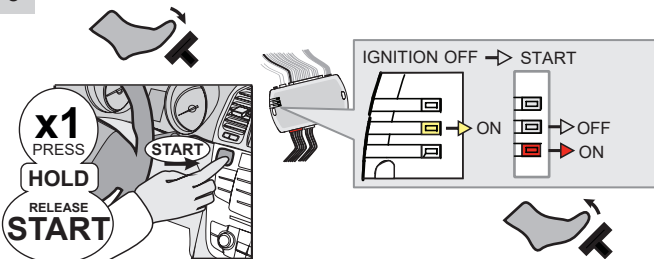

Press the foot-brake pedal.

Press the Push-to-Start button until the engine start.

Release the foot-brake pedal.

↳The **RED LED** will turn **ON**.
↳The **YELLOW LED** will turn **OFF**.


KEY BYPASS PROGRAMMING PROCEDURE 2/3 |

7




Press the Push-to-Start button until the engine turn OFF.

8

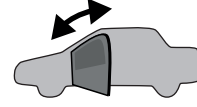

Close and open the driver door.

9

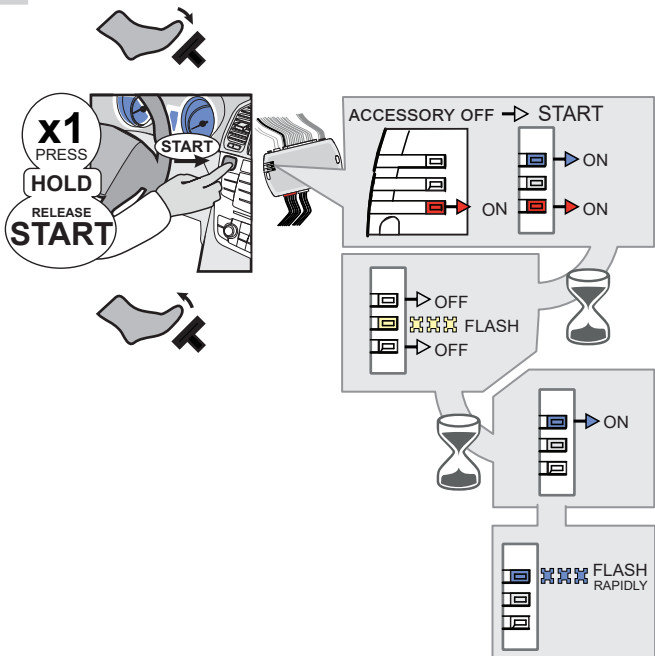


Press the foot-brake pedal.

Press the Push-to-Start button until the engine start.

Release the foot-brake pedal.

- ↳ The BLUE LED will turn ON.
- ↳ The BLUE LED will turn OFF. The RED LED will turn OFF.
- ↳ The YELLOW LED will flash rapidly
- ↳ The BLUE LED will turn ON.
- ↳ The BLUE LED will flash rapidly


10

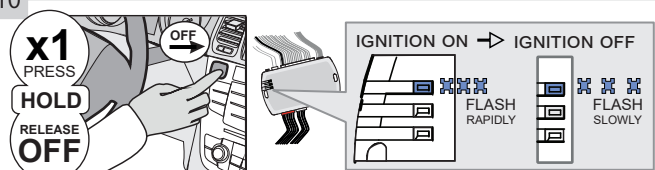

Press the Push-to-Start button until the engine turn OFF.


- ↳ The BLUE LED will flash slowly

11

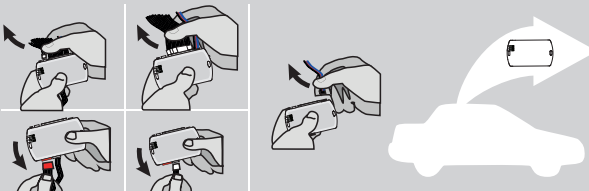

Disconnect all the connectors and after the Data-Link (4-pins) connector.

12

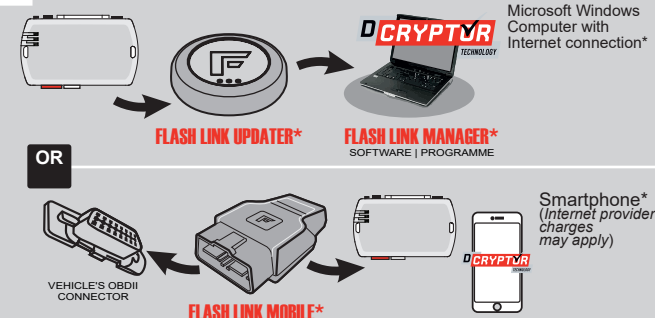

Microsoft Windows Computer with Internet connection*

FLASH LINK UPDATER* **FLASH LINK MANAGER***
SOFTWARE | PROGRAMME

OR


Smartphone* (Internet provider charges may apply)

FLASH LINK MOBILE*

Use the tool: FLASH LINK UPDATER or FLASH LINK MOBILE to visit the DCRYPTOR menu.

*Parts required (not included)

13

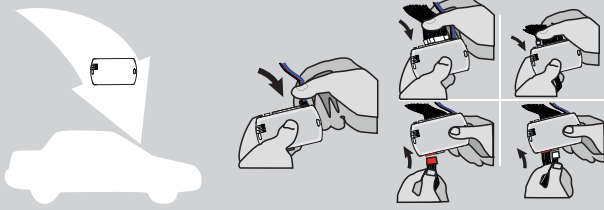

AFTER DCRYPTOR PROGRAMMING COMPLETED
Go back to the vehicle and **reconnect** the 4-Pin (Data-Link) connector and after, all the remaining connector.



The module is now programmed.



REMOTE STARTER / ALARM VERIFICATION PROCEDURE

Test the remote starter. Remote start the vehicle.

REMOTE STARTER FUNCTIONALITY |

 


All doors must be closed.


Remote start the vehicle.



Press the Unlock button of the remote car starter or the OEM remote.



Enter the vehicle with the Intelligent Access Key.

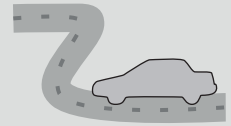

The vehicle can now be put in to gear and driven.



If the vehicle is not unlocked the module will shut down the remote-starter and the vehicle as soon as any door is opened.


THARNESS STAND ALONE INSTALLATION


THAR-GM6

ADDENDUM - SUGGESTED WIRING CONFIGURATION



ONLY COMPATIBLE WITH AUTOMATIC TRANSMISSION VEHICLES.

VEHICLE	YEARS	Vehicle functions supported in this diagram (functional if equipped)													
		Immobilizer bypass	Lock	Unlock	Arm	Disarm	RAP Disable	Tachometer	Heated Seats	Door Status	Hand-Brake Status	Foot-Brake Status	OEM Remote Monitoring		
															
CHEVROLET															
Silverado 1500	Push-To-Start	2019	•	•	•	•	•	•	•	•	•	•	•	•	•




FIRMWARE VERSION


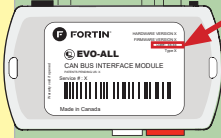
70.[41]


GM MINIMUM

To add the firmware version and the options, use the **FLASH LINK UPDATER** or **FLASH LINK MOBILE** tool, sold separately.

<p>IF THE VEHICLE IS NOT EQUIPPED WITH FUNCTIONAL HOOD PIN:</p>	A11	OFF	Hood trigger (Output Status).
--	------------	------------	-------------------------------

	Program bypass option:	UNIT OPTION	DESCRIPTION
		C1	OEM Remote status (Lock/Unlock) monitoring
		D6	Push-to-Start

	ATTENTION!	 <p>DATE: XX-XX</p>	E5	OFF	<p>SPECIAL FUNCTIONS: BY DEFAULT DEACTIVATED</p>
				ON	<p>MANUFACTURED MODULES BETWEEN: 04/2018 TO 04/2019</p>



Parts required (Not included)

1X THAR-GM6

MANDATORY INSTALL	<p>*HOOD PIN</p> <p>HOOD STATUS: THE HOOD PIN SWITCH MUST BE INSTALLED IF THE VEHICLE CAN BE REMOTE STARTED WITH THE HOOD OPEN, SET FUNCTION A11 TO OFF.</p>	A11	OFF	<p>Notice: the installation of safety elements are mandatory. The hood pin is an essential security element and must be installed.</p>	<p>THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.</p>
-------------------	---	------------	------------	---	---

PARTS REQUIRED (NOT INCLUDED)


1x **FLASH LINK UPDATER**
 1x **FLASH LINK MANAGER**
SOFTWARE | PROGRAMME
 1x Microsoft Windows Computer with Internet connection

OR


1x **FLASH LINK MOBILE**
 1x **FLASH LINK MOBILE APP**
Smartphone Android or iOS with Internet connection (provider charges may apply).

MANDATORY

HOOD PIN



REMOTE START SAFETY OVERRIDE SWITCH

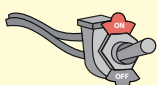
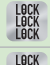





VALET SWITCH


Part #: RSPB available, Sold separately.

Notice: the installation of safety elements are mandatory. The hood pin and the valet switch are essential security elements and must be installed.


STAND ALONE CONFIGURATION

	Program bypass option	UNIT OPTION	DESCRIPTION
	OEM Remote Stand Alone Remote Starter:	D1.10 	By default, LOCK, LOCK, LOCK
		D1.1 	Par défaut, VERROUILLE,VERROUILLE,VERROUILLE
	Program bypass option with oem remote:	C1	OEM Remote Monitoring
	Program bypass option with RF KIT antenna:	H1 to H6	Supported RF Kits and select RF Kit


REMOTE STARTER FUNCTIONALITY



All doors must be closed.

3X 

Press the OEM remote's Lock button 3x to remote-start (or remote-stop) the vehicle.




The vehicle will START.

REMOTE STARTER DIAGNOSTICS
MODULE RED LED

x2 flash :	Brake ON
x3 flash :	No tach
x4 flash :	Ignition before start
x5 flash :	Hood Open

REMOTE STARTER WARNING CARD



CUT THIS WARNING CARD AND STICK IT ON A VISIBLE PLACE:
 or use the package RSPB, Sold separately.


WARNING

REMOTE STARTER


THE VEHICLE CAN BE STARTED BY EITHER: PRESSING THE LOCK BUTTON ON THE OEM REMOTE 3 TIMES CONSECUTIVELY OR BY A SMARTPHONE. **TURN ON** THE SAFETY SWITCH LOCATED UNDER THE DASHBOARD BEFORE WORKING ON THE VEHICLE.

DESCRIPTION


BCM, Above Driver kick panel

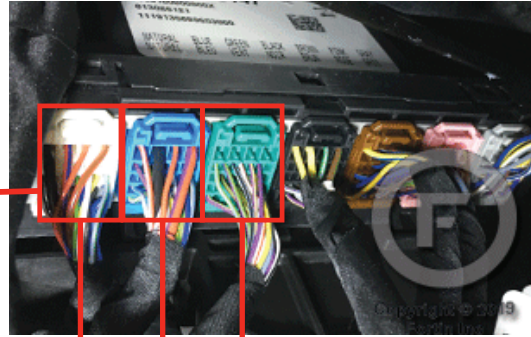


①

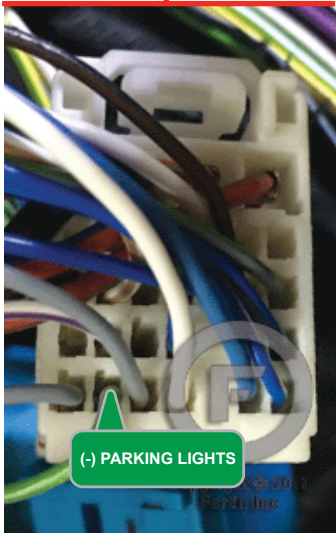


②

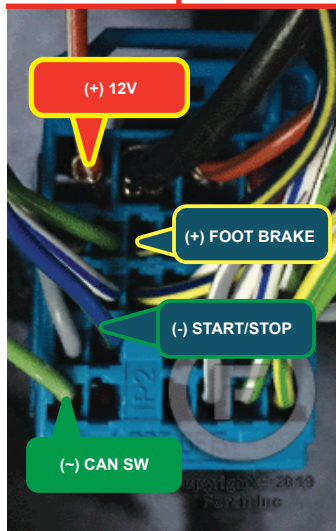


③

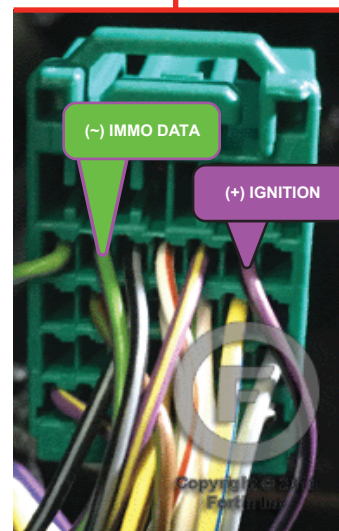

AUTOMATIC TRANSMISSION WIRING CONNECTION

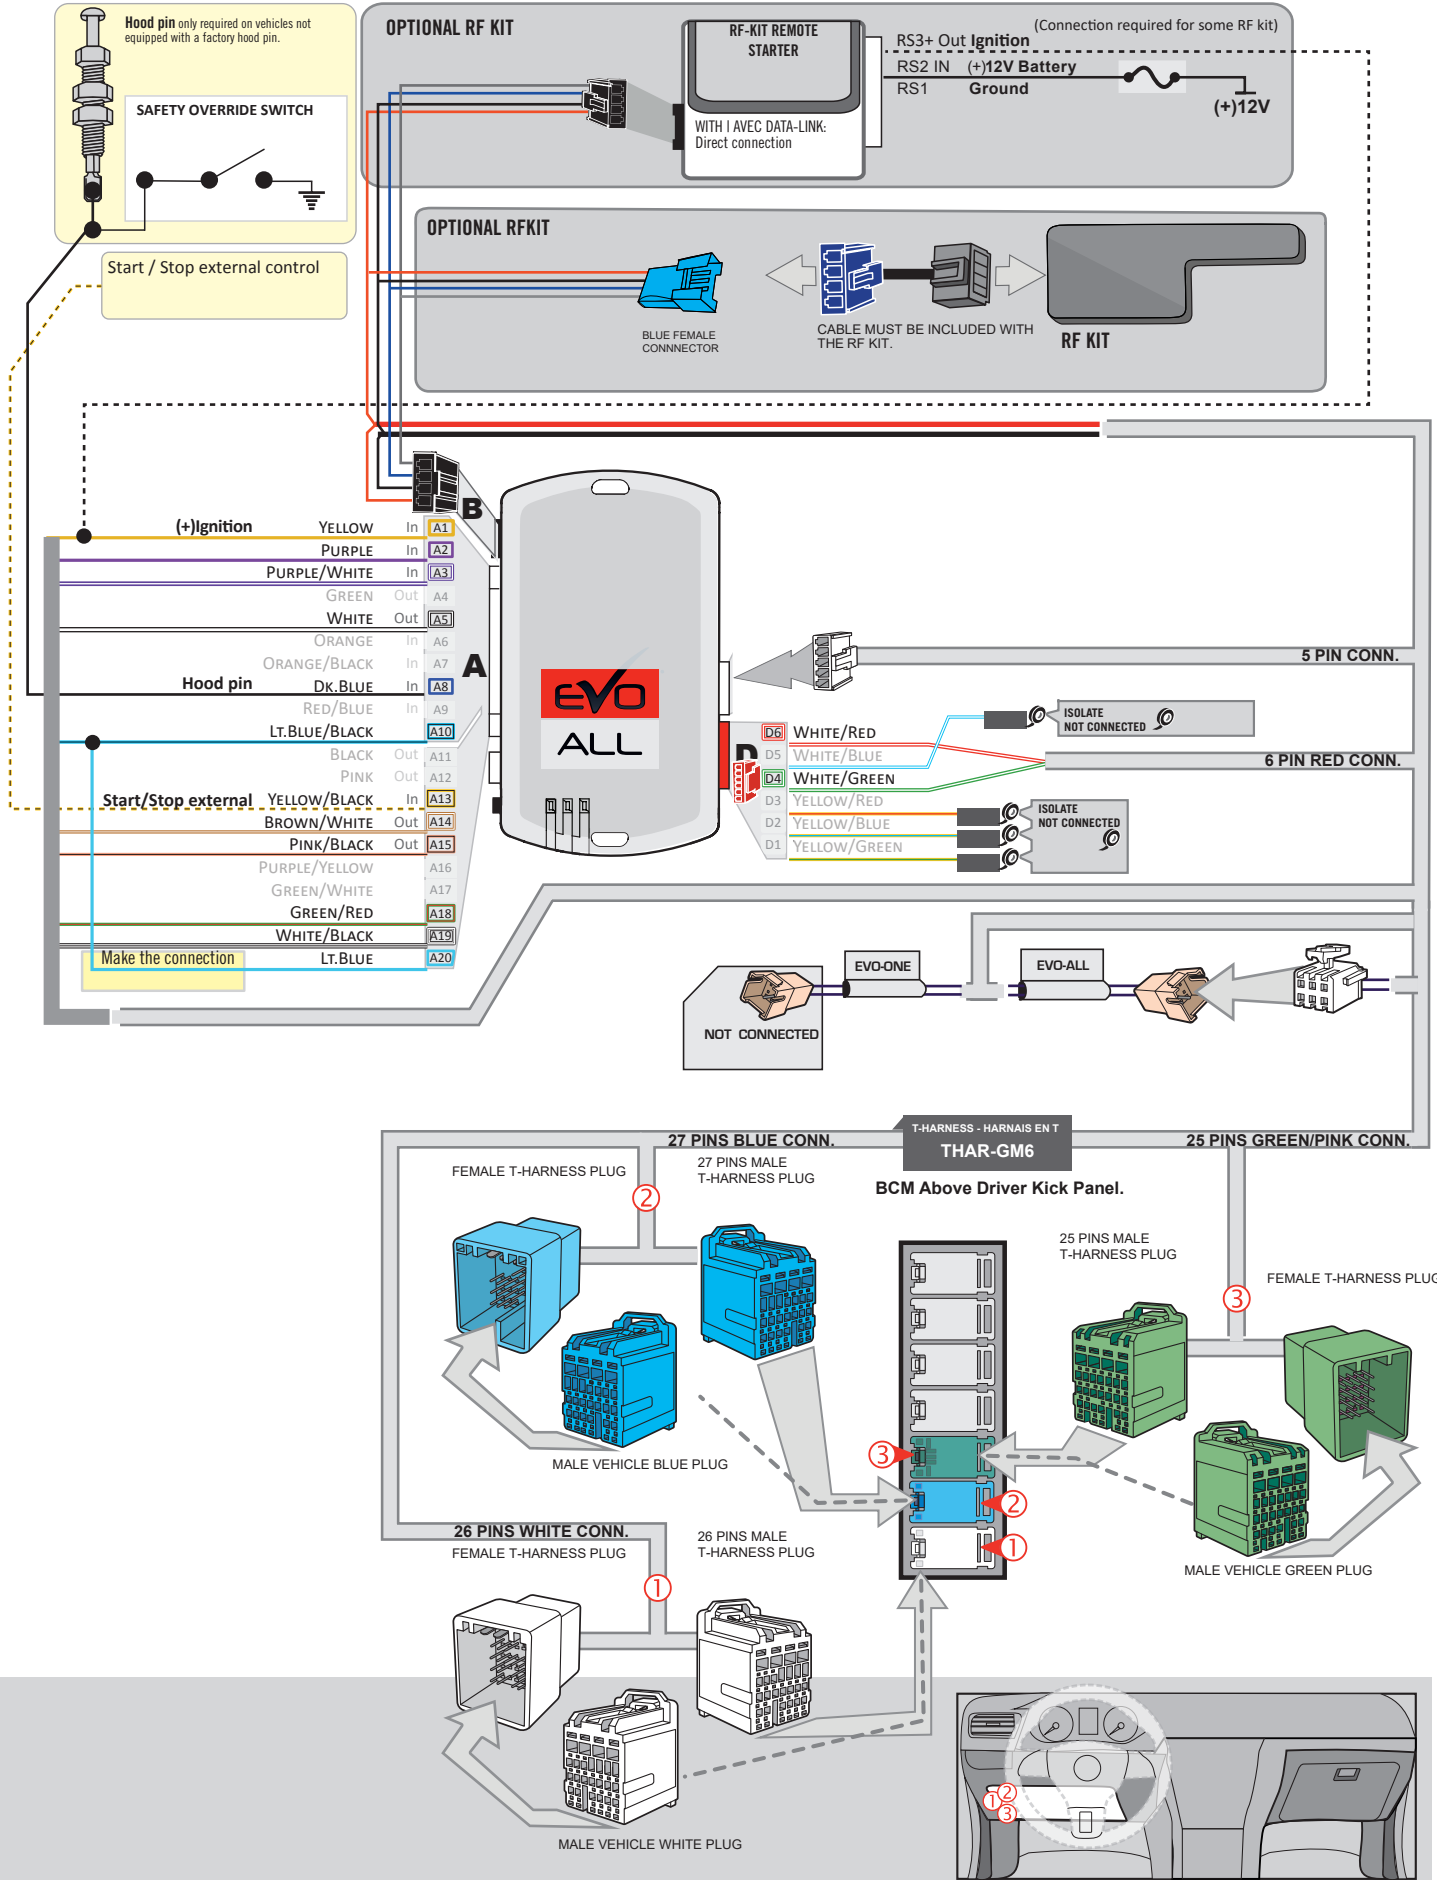

KEY BYPASS PROGRAMMING PROCEDURE 1/3

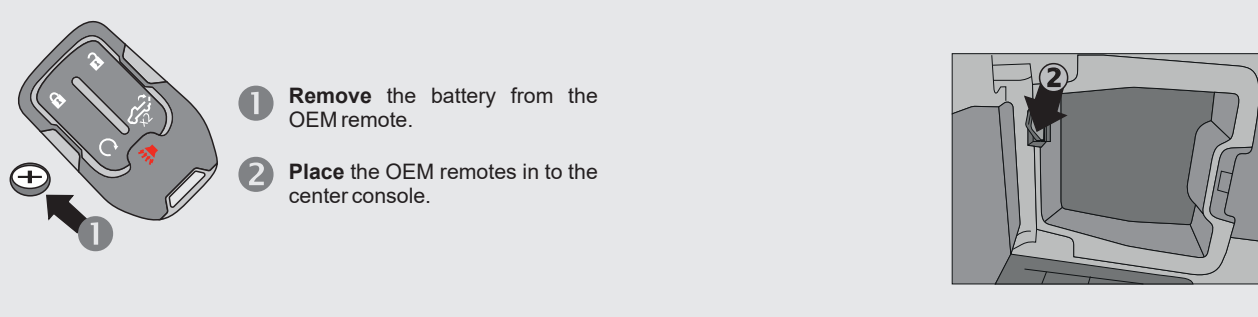


1 Remove the battery from the OEM remote.

2 Place the OEM remotes in to the center console.

1

x1 HOLD

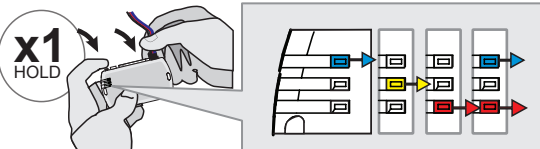


Press and hold the programming button:
Connect the 4-PIN Data-link harness (Black connector).

↳The Blue, Red, Yellow and Blue & Red LEDs will alternatively illuminate.


2

RELEASE

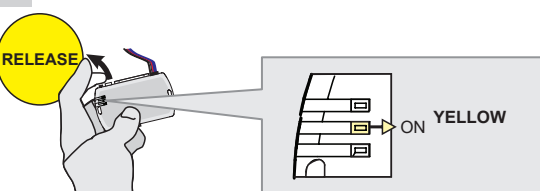


Release the programming button when the LED is **YELLOW**.

 If the LED is not solid **YELLOW** disconnect the 4-Pin connector (Data-Link) and go back to step 1.



3

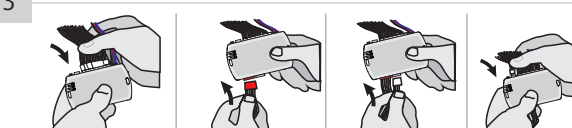


Insert the required remaining connectors.

4

x5 PRESS

PRESS X5 → FLASH

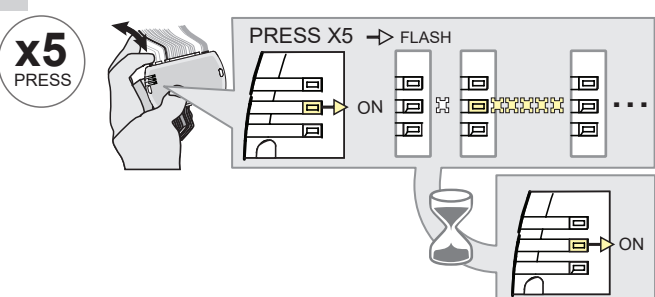


Press and release the programming button five (5x) times.

↳The **YELLOW LED** will flash 5 times each second.

↳**WAIT** for the **YELLOW LED** to turn ON solide.

5

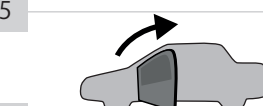

Open the driver door.


6

x1 PRESS

HOLD

RELEASE

START

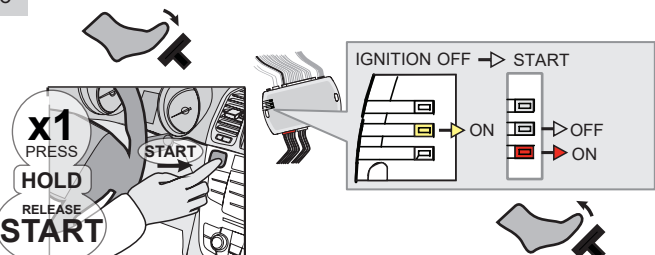

Press the foot-brake pedal.

Press the Push-to-Start button until the engine start.

Release the foot-brake pedal.

↳The **RED LED** will turn ON.
 ↳The **YELLOW LED** will turn OFF.


KEY BYPASS PROGRAMMING PROCEDURE 2/3

7




Press the Push-to-Start button until the engine turn OFF.

8

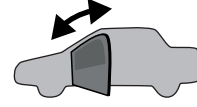

Close and open the driver door.

9

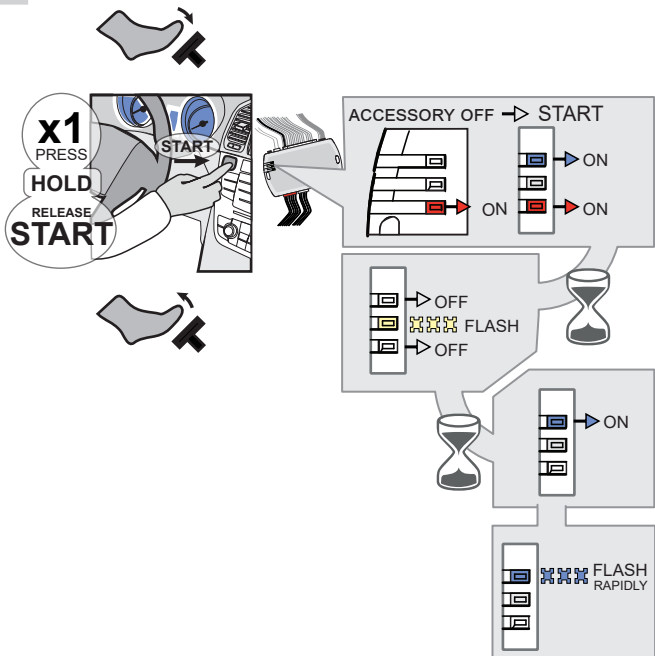


Press the foot-brake pedal.

Press the Push-to-Start button until the engine start.

Release the foot-brake pedal.

- ↳ The BLUE LED will turn ON.
- ↳ The BLUE LED will turn OFF. The RED LED will turn OFF.
- ↳ The YELLOW LED will flash rapidly
- ↳ The BLUE LED will turn ON.
- ↳ The BLUE LED will flash rapidly


10

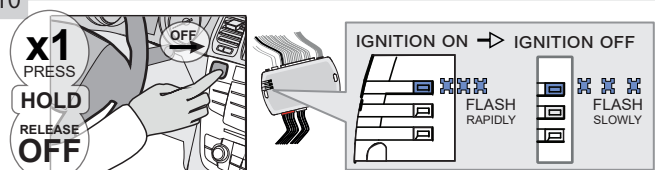

Press the Push-to-Start button until the engine turn OFF.


- ↳ The BLUE LED will flash slowly

11

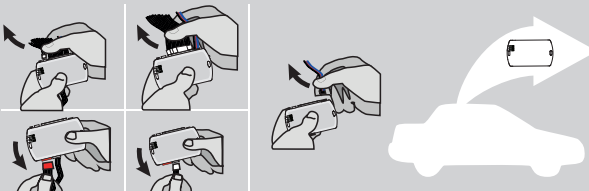

Disconnect all the connectors and after the Data-Link (4-pins) connector.

12


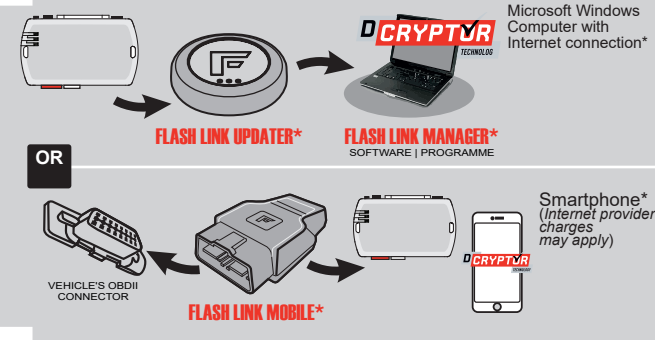


Use the tool: FLASH LINK UPDATER or FLASH LINK MOBILE to visit the DCryptor menu.

***Parts required (not included)**

KEY BYPASS PROGRAMMING PROCEDURE 3/3

13

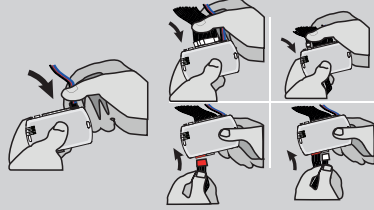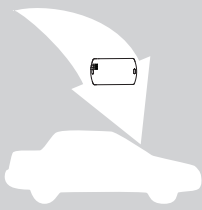

AFTER DCRYPTOR PROGRAMMING COMPLETED
Go back to the vehicle and **reconnect** the 4-Pin (Data-Link) connector and after, all the remaining connector.



The module is now programmed.



REMOTE STARTER / ALARM VERIFICATION PROCEDURE




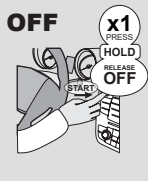









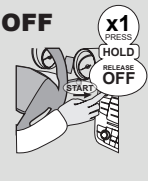

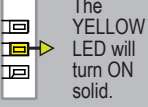
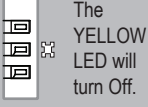
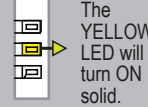
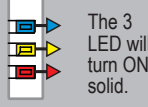

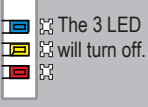
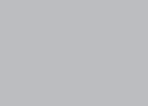
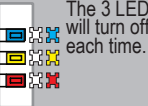
Test the remote starter. Remote start the vehicle.

OPTIONAL RF-KIT PROGRAMMING

PROGRAM BYPASS OPTION

	<p>Program bypass option:</p>	<p>H2</p>	<p><input checked="" type="checkbox"/> Supported RF-KITS enable <input checked="" type="checkbox"/> H2 Fortin 2</p>
---	-------------------------------	------------------	---

OPTIONAL FORTIN RF KIT SERIES 4 OR SERIES 9 PROGRAMMING

<p>The module must be programmed on the vehicle.</p>   <p>MAKE SURE THE IGNITION KEY HAS BEEN IN THE OFF POSITION FOR AT LEAST 5 SECONDS.</p>	<p>1</p> <p>ON</p>  <p>ON</p> <p>Press the foot-brake pedal. Press the Push-to-Start button until the engine start. Release the foot-brake pedal.</p>	<p>2</p> <p>OFF</p>  <p>OFF</p> <p>Press the Push-to-Start button until the engine turn OFF.</p>	<p>3</p> <p>ON</p>  <p>ON</p> <p>Press the foot-brake pedal. Press the Push-to-Start button until the engine start. Release the foot-brake pedal.</p>	<p>4</p> <p>4X BRAKES</p>  <p>4X PRESS</p> <p>Press and release the brake pedal four times.</p>  <p>The LED will turn off each time.</p>	<p>5</p> <p>ON EACH TRANSMITTER</p> <p>4 BUTTONS</p>  <p>PRESS AND RELEASE</p>  <p>PRESS AND RELEASE</p>  <p>PRESS AND RELEASE</p> <p>1 BUTTON</p>  <p>PRESS APPROX. 12 SEC. AND WAIT FOR THE BLUE LED TO TURN OFF THEN BACK ON SOLID THEN RELEASE.</p>  <p>The LED will turn off each time.</p>  <p>The LED will flash rapidly.</p>	<p>6</p> <p>OFF</p>  <p>OFF</p> <p>Press the Push-to-Start button until the engine turn OFF.</p>  <p>The LED will turn Off.</p>
	 <p>The YELLOW LED will turn ON solid.</p>	 <p>The YELLOW LED will turn Off.</p>	 <p>The YELLOW LED will turn ON solid.</p>	 <p>The 3 LED will turn ON solid.</p>	 <p>The LED will flash rapidly.</p>	 <p>The 3 LED will turn off.</p>
	 <p>The 3 LED will turn off each time.</p>				 <p>The 3 LED will turn off each time.</p>	



REMOTE STARTER FUNCTIONALITY



All doors must be closed.

Remote start the vehicle.



Press the Unlock button of the remote car starter.



Enter the vehicle with the Intelligent Access Key.



The vehicle can now be put in to gear and driven.



If the vehicle is not unlocked the module will shut down the remote-starter and the vehicle as soon as any door is opened.

THAR-GM6

THARNESS STAND ALONE INSTALLATION

ADDENDUM - SUGGESTED WIRING CONFIGURATION



ONLY COMPATIBLE WITH AUTOMATIC TRANSMISSION VEHICLES.



VEHICLE

YEARS

Vehicle functions supported in this diagram (functional if equipped)

CHEVROLET

Volt	Push-To-Start	2016-2019	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
------	---------------	-----------	--------------------------	--------------------------	--------------------------	--------------------------	--------------------------	--------------------------	--------------------------	--------------------------	--------------------------	--------------------------	--------------------------	--------------------------	--------------------------	--------------------------	--------------------------	--------------------------	--------------------------



FIRMWARE VERSION

70.[41]

GM MINIMUM

To add the firmware version and the options, use the **FLASH LINK UPDATER** or **FLASH LINK MOBILE** tool, sold separately.

IF THE VEHICLE IS NOT EQUIPPED WITH FUNCTIONAL HOOD PIN:

A11

OFF

Hood trigger (Output Status).



Program bypass option:

UNIT OPTION

DESCRIPTION

C1

OEM Remote status (Lock/Unlock) monitoring

D6

Push-to-Start



Program bypass option (Vehicle hybrid only):

UNIT OPTION


DESCRIPTION

D4

Hybrid mode (Vehicle hybrid only)



ATTENTION!

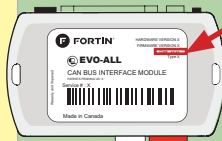

DATE: XX-XX

E5

OFF

SPECIAL FUNCTIONS: BY DEFAULT DEACTIVATED

ON

MANUFACTURED MODULES BETWEEN: 04/2018 TO 04/2019



Parts required (Not included)

- 1X 5 Amp Fuse
- 1X 1k Ohm Resistor

MANDATORY INSTALL

*HOOD PIN



HOOD STATUS: THE HOOD PIN SWITCH MUST BE INSTALLED IF THE VEHICLE CAN BE REMOTE STARTED WITH THE HOOD OPEN, SET FUNCTION A11 TO OFF.

A11

OFF

Notice: the installation of safety elements are mandatory. The hood pin is an essential security element and must be installed.

THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.


PARTS REQUIRED (NOT INCLUDED)


1x **FLASH LINK UPDATER**
 1x **FLASH LINK MANAGER**
SOFTWARE | PROGRAMME
 1x Microsoft Windows Computer with Internet connection

OR

1x **FLASH LINK MOBILE**
 1x **FLASH LINK MOBILE APP**
Smartphone Android or iOS with Internet connection (provider charges may apply).

MANDATORY

HOOD PIN 

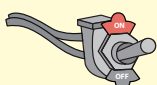
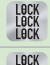



REMOTE START SAFETY OVERRIDE SWITCH 

VALET SWITCH


Part #: RSPB available, Sold separately.

Notice: the installation of safety elements are mandatory. The hood pin and the valet switch are essential security elements and must be installed.


STAND ALONE CONFIGURATION

	Program bypass option	UNIT OPTION	DESCRIPTION
	OEM Remote Stand Alone Remote Starter:	D1.10 	By default, LOCK, LOCK, LOCK
		D1.1 	Par défaut, VERROUILLE,VERROUILLE,VERROUILLE
	Program bypass option with oem remote:	C1	OEM Remote Monitoring
	Program bypass option with RF KIT antenna:	H1 to H6	Supported RF Kits and select RF Kit


REMOTE STARTER FUNCTIONALITY



All doors must be closed.

3X 

Press the OEM remote's Lock button 3x to remote-start (or remote-stop) the vehicle.




The vehicle will START.

REMOTE STARTER DIAGNOSTICS
MODULE RED LED

x2 flash :	Brake ON
x3 flash :	No tach
x4 flash :	Ignition before start
x5 flash :	Hood Open

REMOTE STARTER WARNING CARD




CUT THIS WARNING CARD AND STICK IT ON A VISIBLE PLACE:
 or use the package RSPB, Sold separately.

WARNING


REMOTE STARTER

THE VEHICLE CAN BE STARTED BY EITHER: PRESSING THE LOCK BUTTON ON THE OEM REMOTE 3 TIMES CONSECUTIVELY OR BY A SMARTPHONE. **TURN ON** THE SAFETY SWITCH LOCATED UNDER THE DASHBOARD BEFORE WORKING ON THE VEHICLE.


DESCRIPTION

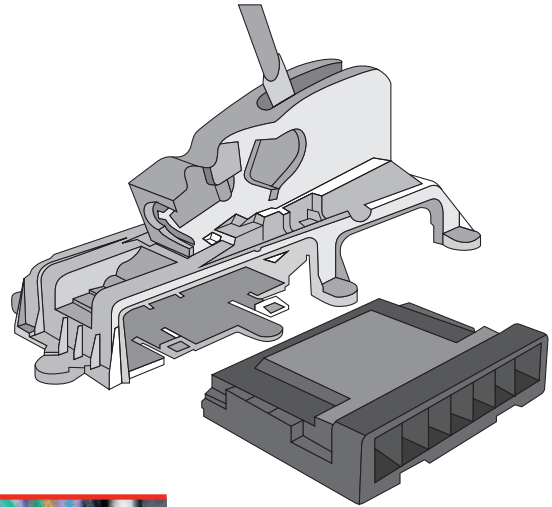

BCM

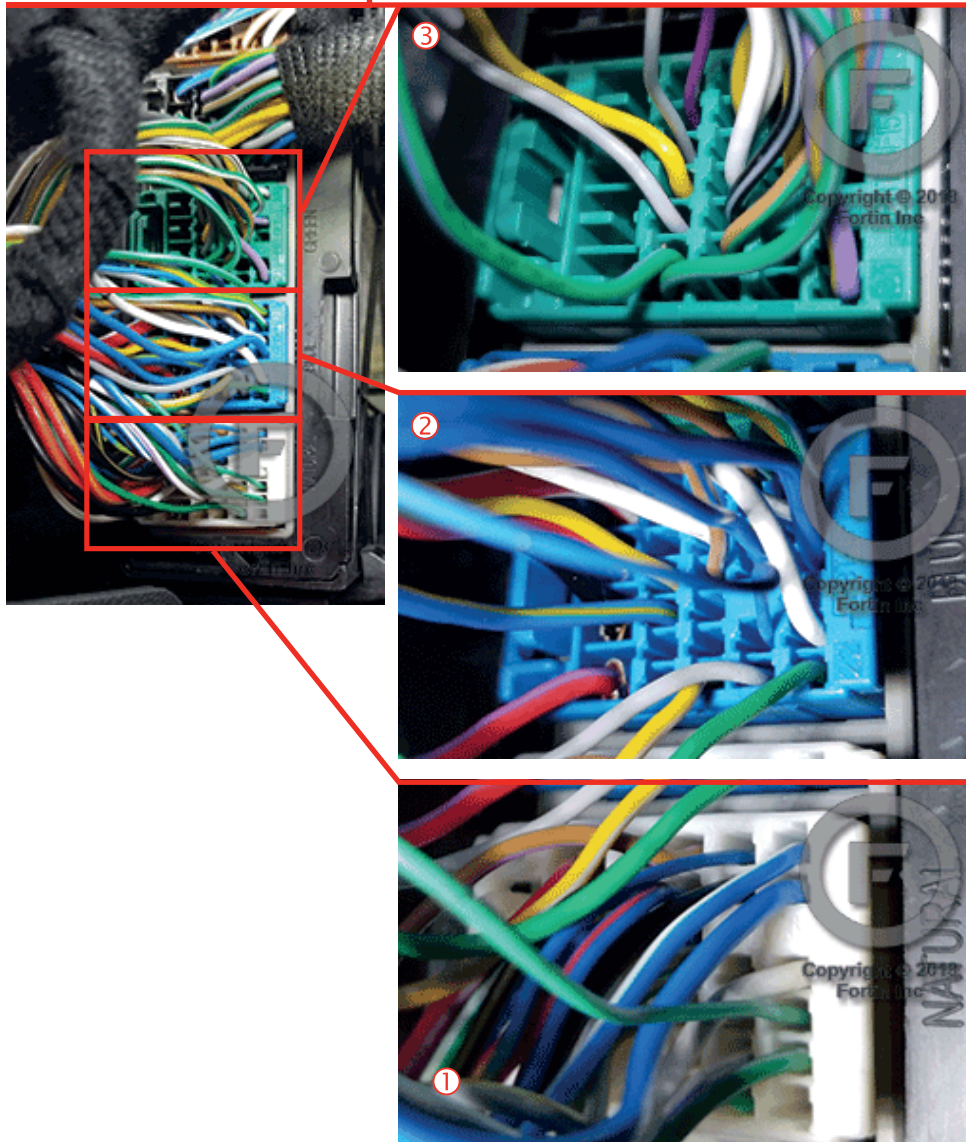


AUTOMATIC TRANSMISSION WIRING CONNECTION

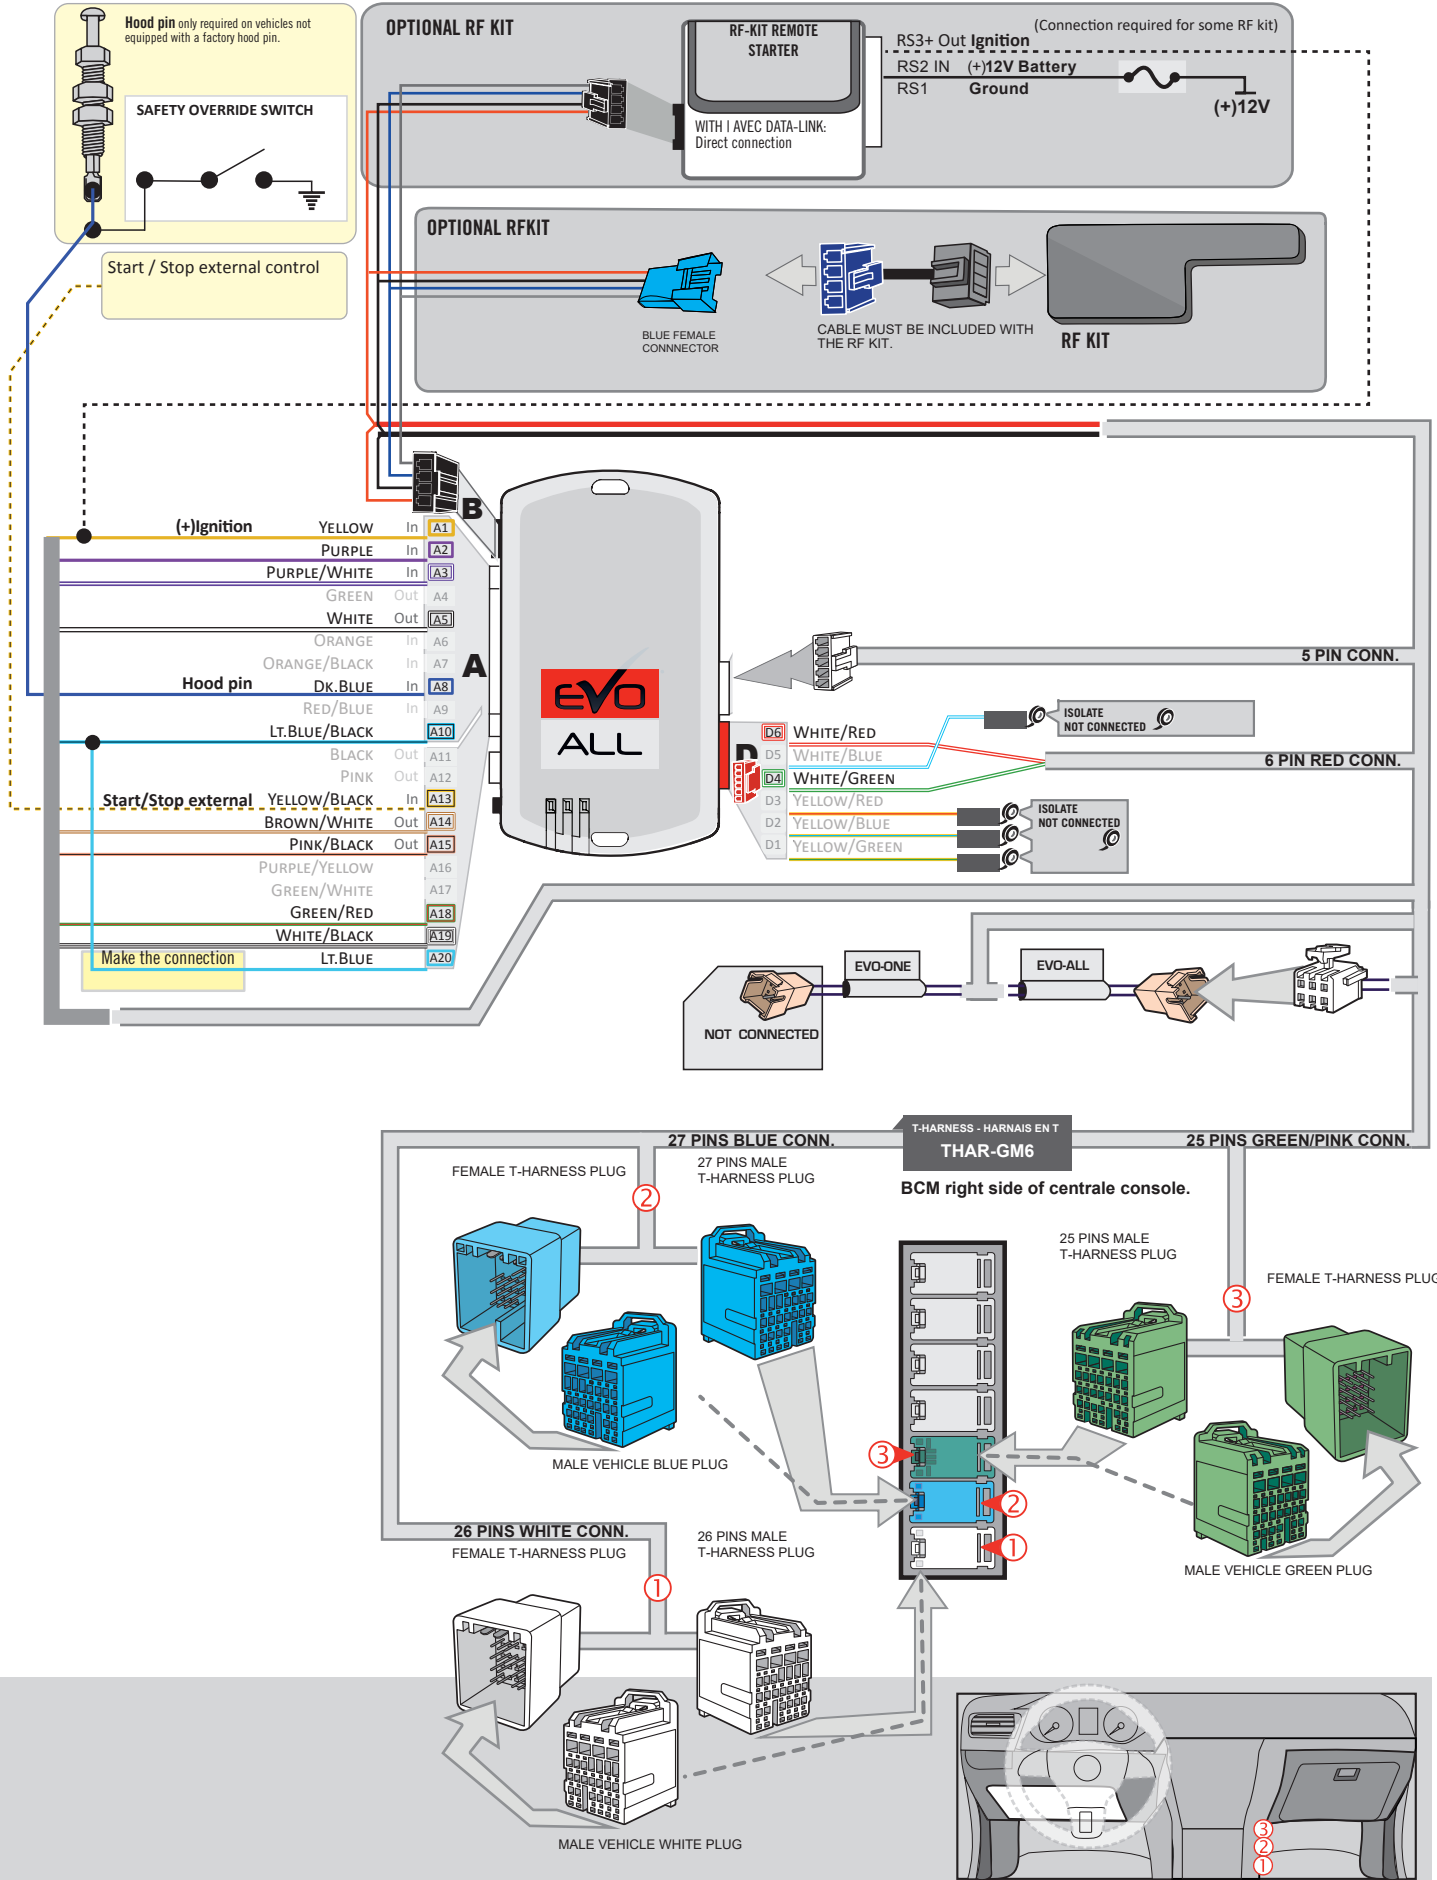


KEY BYPASS PROGRAMMING PROCEDURE 1/3



- 1 Remove the battery from the OEM remote.
- 2 Place the OEM remote into the center console. Refer to vehicle user guide for keyport location.

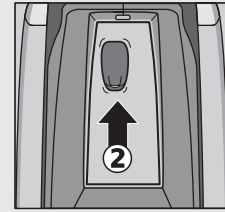


1

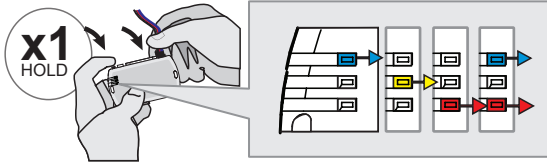

Press and hold the programming button:
Connect the 4-PIN Data-link harness (Black connector).


↳The Blue, Red, Yellow and Blue & Red LEDs will alternatively illuminate.

2

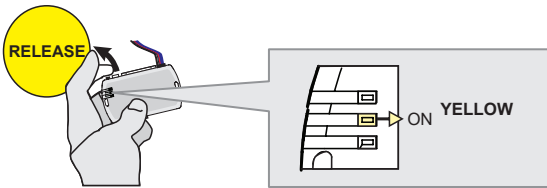


Release the programming button when the LED is YELLOW.

 If the LED is not solid YELLOW disconnect the 4-Pin connector (Data-Link) and go back to step 1.




3

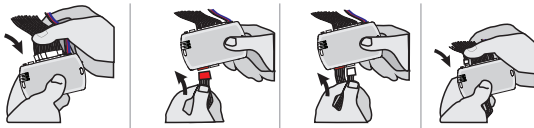

Insert the required remaining connectors.

4

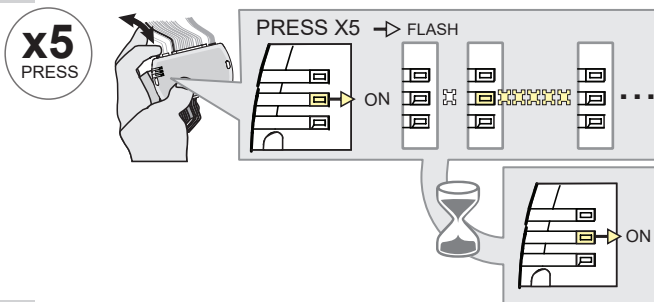


Press and release the programming button five (5x) times.

↳The YELLOW LED will flash 5 times each second.


↳WAIT for the YELLOW LED to turn ON solide.

 5



Open the driver door.

6

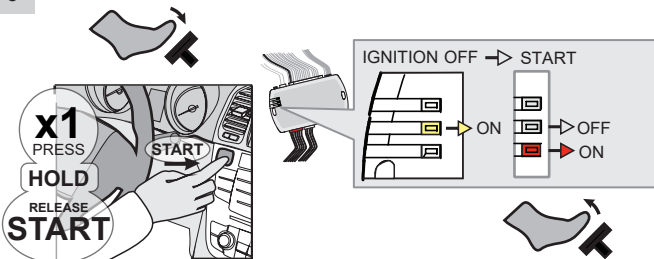

Press the foot-brake pedal.

Press the Push-to-Start button until the engine start.

Release the foot-brake pedal.

↳The RED LED will turn ON.
↳The YELLOW LED will turn OFF.


KEY BYPASS PROGRAMMING PROCEDURE 2/3

7




Press the Push-to-Start button until the engine turn OFF.

8

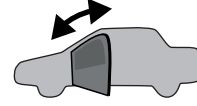

Close and open the driver door.

9

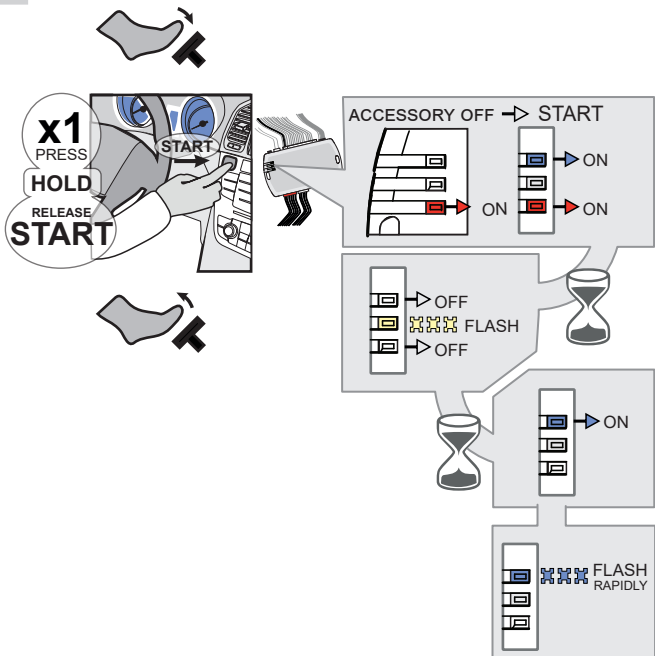


Press the foot-brake pedal.

Press the Push-to-Start button until the engine start.

Release the foot-brake pedal.

- ↳ The BLUE LED will turn ON.
- ↳ The BLUE LED will turn OFF. The RED LED will turn OFF.
- ↳ The YELLOW LED will flash rapidly
- ↳ The BLUE LED will turn ON.
- ↳ The BLUE LED will flash rapidly


10

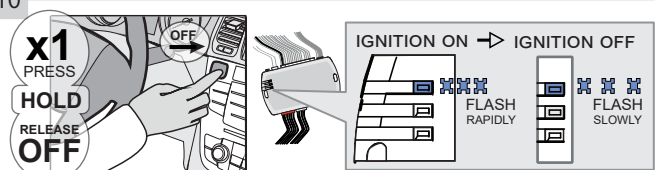

Press the Push-to-Start button until the engine turn OFF.


- ↳ The BLUE LED will flash slowly

11

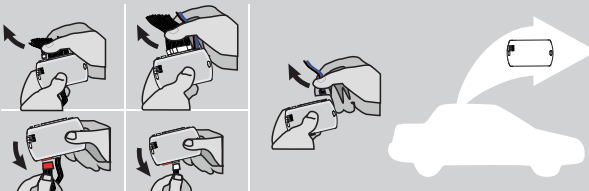

Disconnect all the connectors and after the Data-Link (4-pins) connector.

12


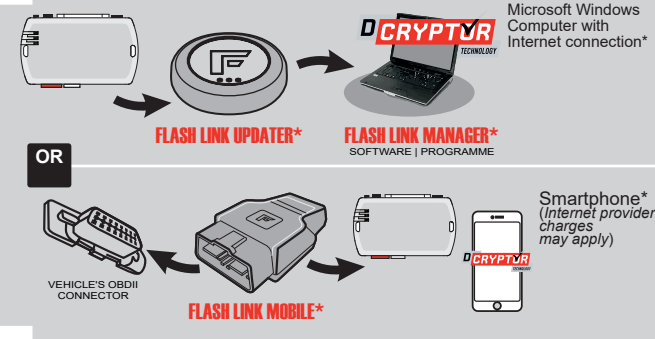


Use the tool: FLASH LINK UPDATER or FLASH LINK MOBILE to visit the DCryptor menu.

***Parts required (not included)**

KEY BYPASS PROGRAMMING PROCEDURE 3/3

13

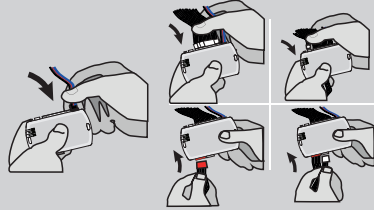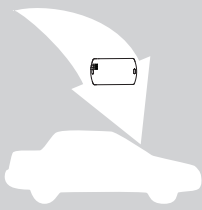

AFTER DCRYPTOR PROGRAMMING COMPLETED
Go back to the vehicle and **reconnect** the 4-Pin (Data-Link) connector and after, all the remaining connector.



The module is now programmed.



REMOTE STARTER / ALARM VERIFICATION PROCEDURE

Test the remote starter. Remote start the vehicle.

REMOTE STARTER FUNCTIONALITY

 


All doors must be closed.


Remote start the vehicle.



Press the Unlock button of the remote car starter or the OEM remote.



Enter the vehicle with the Intelligent Access Key.

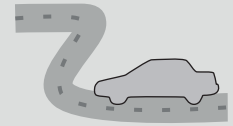

The vehicle can now be put in to gear and driven.



If the vehicle is not unlocked the module will shut down the remote-starter and the vehicle as soon as any door is opened.

THAR-GM6

THARNESSTAND ALONE INSTALLATION

ADDENDUM - SUGGESTED WIRING CONFIGURATION



ONLY COMPATIBLE WITH AUTOMATIC TRANSMISSION VEHICLES.



Vehicle functions supported in this diagram (functional if equipped)

VEHICLE	YEARS	Immobilizer bypass	Lock	Unlock	Arm	Disarm	Trunk (open)	RAP Disable	Tachometer	Heated Seats	Door Status	Trunk Status	Hand-Brake Status	Foot-Brake Status	OEM Remote Monitoring
CADILLAC															
Escalade	Push-To-Start	2020-2021	•	•	•	•	•	•	•	•	•	•	•	•	•
XT4	Push-To-Start	2019-2021	•	•	•	•	•	•	•	•	•	•	•	•	•
XT5	Push-To-Start	2017-2021	•	•	•	•	•	•	•	•	•	•	•	•	•
XT6	Push-To-Start	2020-2021	•	•	•	•	•	•	•	•	•	•	•	•	•



FIRMWARE VERSION

70.[45]

GM MINIMUM

To add the firmware version and the options, use the **FLASH LINK UPDATER** or **FLASH LINK MOBILE** tool, sold separately.



Program bypass option:

UNIT OPTION

DESCRIPTION

C1

OEM Remote status (Lock/Unlock) monitoring

IF THE VEHICLE IS NOT EQUIPPED WITH FUNCTIONAL HOOD PIN:

A11

OFF


Hood trigger (Output Status).

D6

Push-to-Start



ATTENTION!

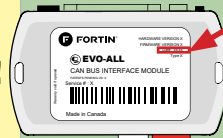

DATE: XX-XX

E5

OFF

SPECIAL FUNCTIONS: BY DEFAULT DEACTIVATED

ON

MANUFACTURED MODULES BETWEEN: 04/2018 TO 04/2019



Parts required (Not included)

1X THAR-GM6

MANDATORY INSTALL

*HOOD PIN



HOOD STATUS: THE HOOD PIN SWITCH MUST BE INSTALLED IF THE VEHICLE CAN BE REMOTE STARTED WITH THE HOOD OPEN, SET FUNCTION A11 TO OFF.

A11

OFF

Notice: the installation of safety elements are mandatory. The hood pin is an essential security element and must be installed.

THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.


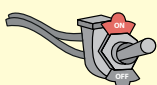
PARTS REQUIRED (NOT INCLUDED)

1x **FLASH LINK UPDATER,**
 1x **FLASH LINK MANAGER**
SOFTWARE | PROGRAMME
 1x Microsoft Windows Computer with Internet connection

OR

1x **FLASH LINK MOBILE**
 1x **FLASH LINK MOBILE APP**
Smartphone Android or iOS with Internet connection (provider charges may apply).

MANDATORY






HOOD PIN  REMOTE START SAFETY OVERRIDE SWITCH 

VALET SWITCH


Part #: RSPB available, Sold separately.

Notice: the installation of safety elements are mandatory. The hood pin and the valet switch are essential security elements and must be installed.



STAND ALONE CONFIGURATION

	Program bypass option	UNIT OPTION	DESCRIPTION
	OEM Remote Stand Alone Remote Starter:	OR D1.10 	By default, LOCK, LOCK, LOCK Par défaut, VERROUILLE,VERROUILLE,VERROUILLE
		D1.1 	
	Program bypass option with oem remote:	C1	OEM Remote Monitoring
	Program bypass option with RF KIT antenna:	H1 to H6	Supported RF Kits and select RF Kit


REMOTE STARTER FUNCTIONALITY



All doors must be closed.

3X  

Press the OEM remote's Lock button 3x to remote-start (or remote-stop) the vehicle.




The vehicle will START.

REMOTE STARTER DIAGNOSTICS
MODULE RED LED


x2 flash :	Brake ON
x3 flash :	No tach
x4 flash :	Ignition before start
x5 flash :	Hood Open

REMOTE STARTER WARNING CARD



CUT THIS WARNING CARD AND STICK IT ON A VISIBLE PLACE:
 or use the package RSPB, Sold separately.



WARNING

 **REMOTE STARTER**


THE VEHICLE CAN BE STARTED BY EITHER: PRESSING THE LOCK BUTTON ON THE OEM REMOTE 3 TIMES CONSECUTIVELY OR BY A SMARTPHONE. **TURN ON** THE SAFETY SWITCH LOCATED UNDER THE DASHBOARD BEFORE WORKING ON THE VEHICLE.

DESCRIPTION


BCM located on passenger side center console

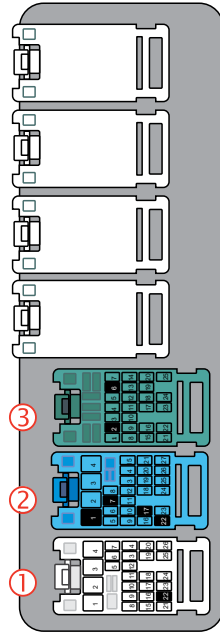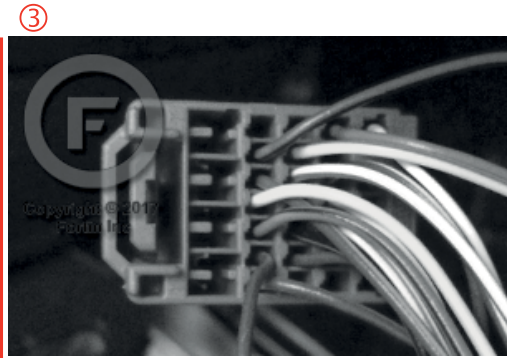

AUTOMATIC TRANSMISSION WIRING CONNECTION

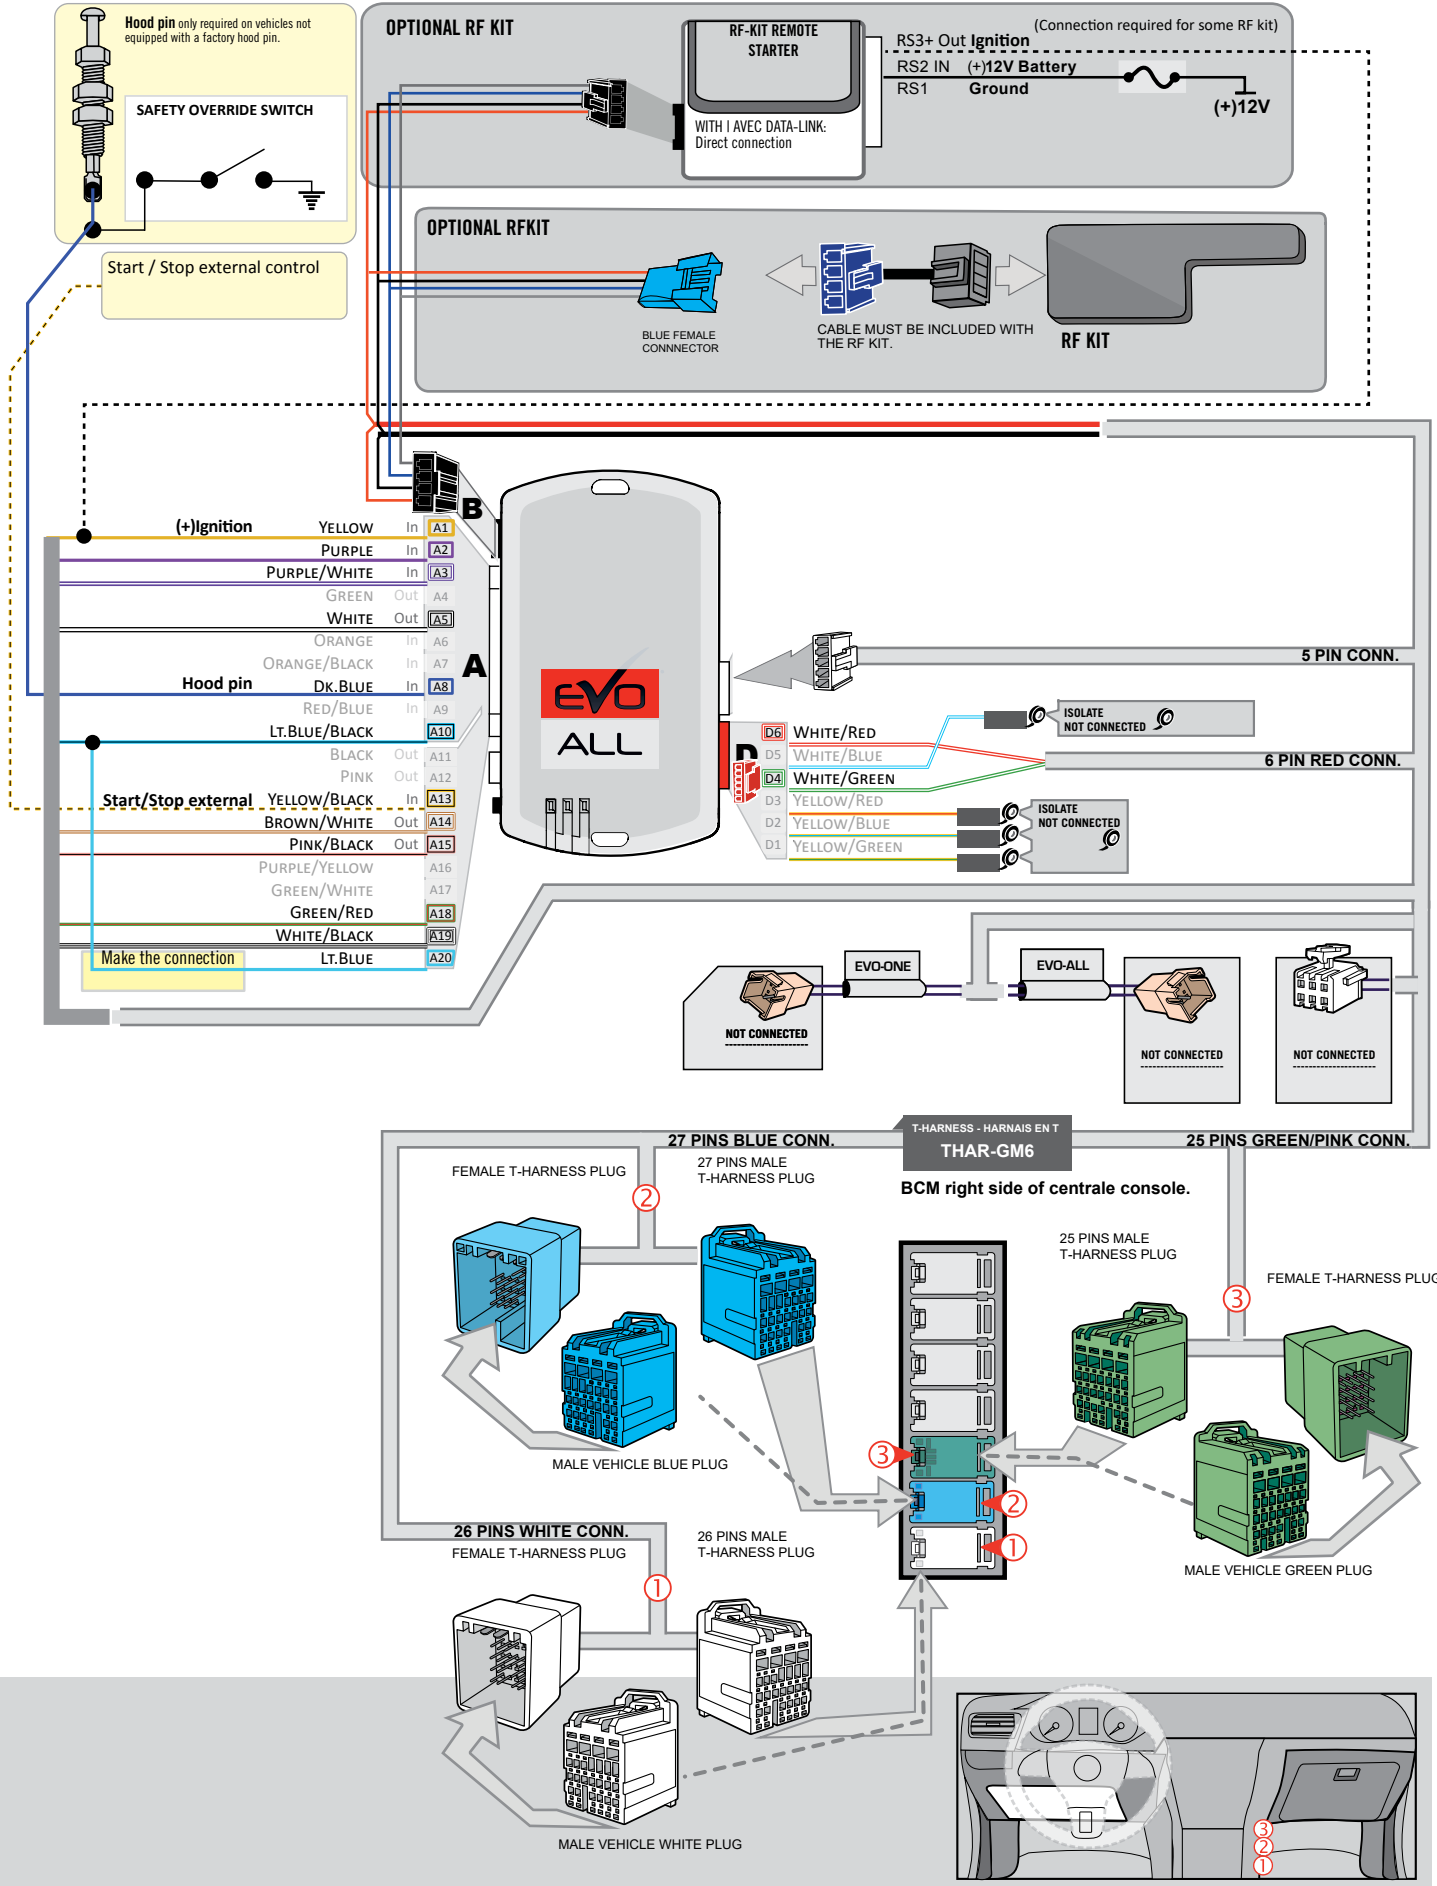


KEY BYPASS PROGRAMMING PROCEDURE 1/3

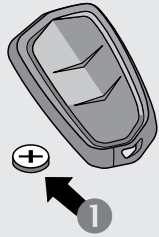


1 Remove the battery from the OEM remote.

2 Place the OEM remote into the transmitter pocket of the center console.

Refer to vehicle user guide for keyport location.

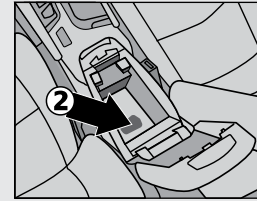


1

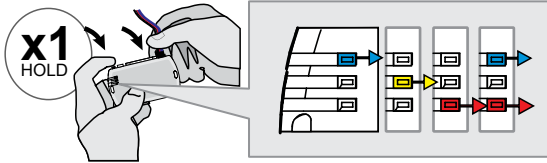

Press and hold the programming button:
Connect the 4-PIN Data-link harness (Black connector).


↳The Blue, Red, Yellow and Blue & Red LEDs will alternatively illuminate.

2

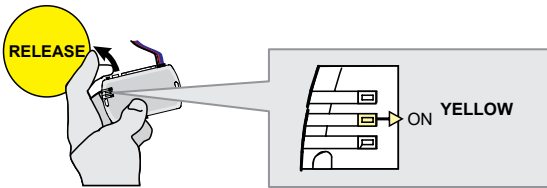


Release the programming button when the LED is YELLOW.

 If the LED is not solid YELLOW disconnect the 4-Pin connector (Data-Link) and go back to step 1.




3

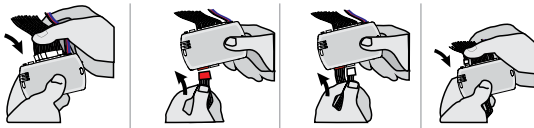

Insert the required remaining connectors.

4

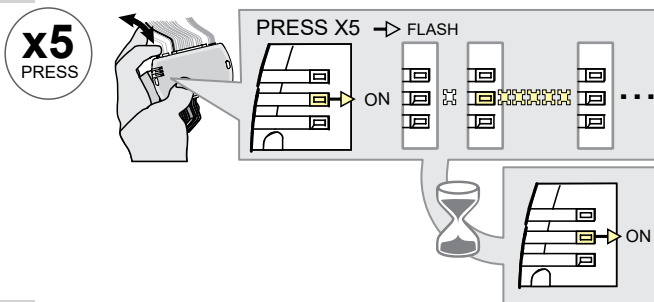


Press and release the programming button five (5x) times.

↳The YELLOW LED will flash 5 times each second.


↳**WAIT** for the YELLOW LED to turn ON solide.

 5



Open the driver door.

6

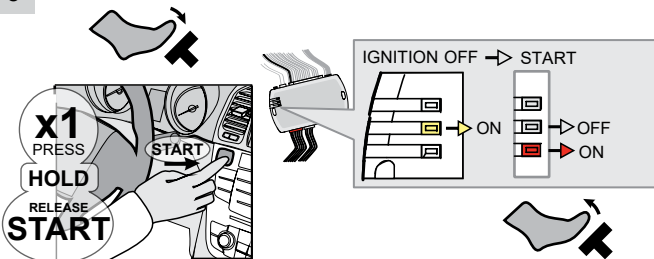

Press the foot-brake pedal.

Press the Push-to-Start button until the engine start.

Release the foot-brake pedal.

↳The RED LED will turn ON.
↳The YELLOW LED will turn OFF.


KEY BYPASS PROGRAMMING PROCEDURE 2/3

7




Press the Push-to-Start button until the engine turn OFF.

8

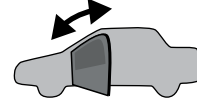

Close and open the driver door.

9

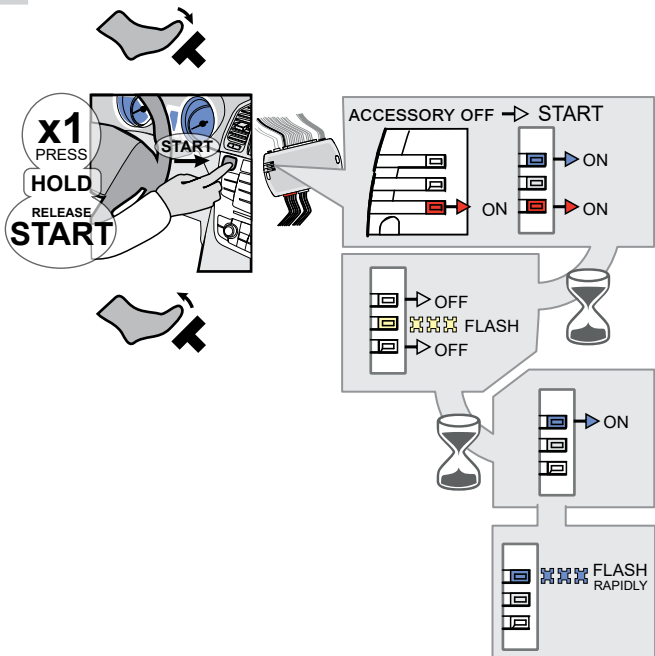


Press the foot-brake pedal.

Press the Push-to-Start button until the engine start.

Release the foot-brake pedal.

- ↳ The BLUE LED will turn ON.
- ↳ The BLUE LED will turn OFF. The RED LED will turn OFF.
- ↳ The YELLOW LED will flash rapidly
- ↳ The BLUE LED will turn ON.
- ↳ The BLUE LED will flash rapidly


10

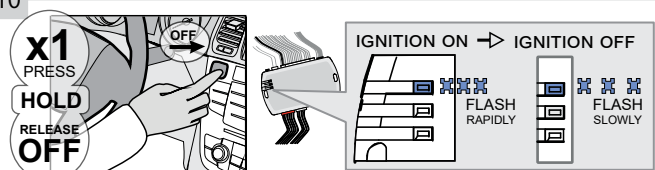

Press the Push-to-Start button until the engine turn OFF.


- ↳ The BLUE LED will flash slowly

11

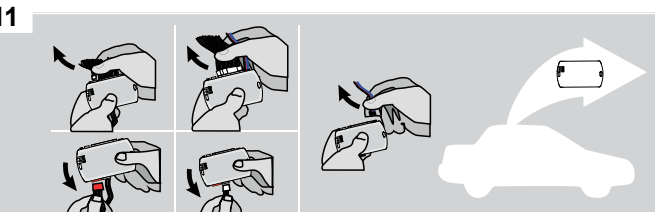

Disconnect all the connectors and after the Data-Link (4-pins) connector.

12


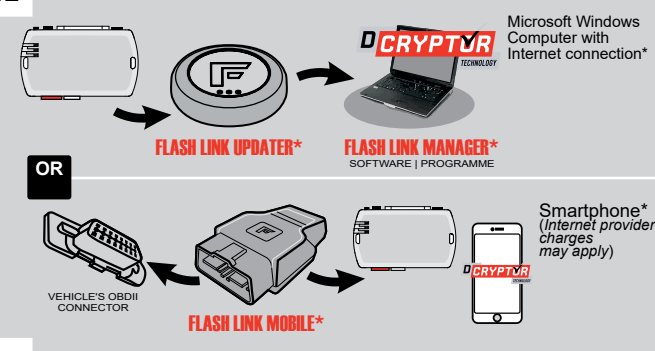


Use the tool: FLASH LINK UPDATER or FLASH LINK MOBILE to visit the DCryptor menu.

***Parts required (not included)**

KEY BYPASS PROGRAMMING PROCEDURE 3/3

13

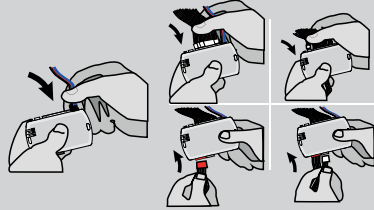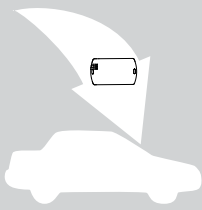

AFTER DCRYPTOR PROGRAMMING COMPLETED
 Go back to the vehicle and **reconnect** the 4-Pin (Data-Link) connector and after, all the remaining connector.



The module is now programmed.



REMOTE STARTER / ALARM VERIFICATION PROCEDURE

Test the remote starter. Remote start the vehicle.

REMOTE STARTER FUNCTIONALITY



 
All doors must be closed.

Remote start the vehicle.


Toutes les



Press the Unlock button of the remote car starter.



Enter the vehicle with the Intelligent Access Key.

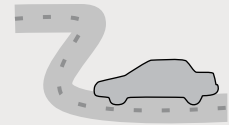


The vehicle can now be put in to gear and driven.




If the vehicle is not unlocked the module will shut down the remote-starter and the vehicle as soon as any door is opened.

REGULAR INSTALLATION AND THAR-GM6

ADDENDUM - SUGGESTED WIRING CONFIGURATION

VEHICLE	YEARS	Vehicle functions supported in this diagram (functional if equipped)														
		Immobilizer bypass	Lock	Unlock	Arm	Disarm	Parking Light	Trunk (open)	RAP Disable	Tachometer	Door Status	Trunk Status	Hand-Brake Status	Foot-Brake Status	OEM Remote Monitoring	R.S. OEM remote Stand Alone compatible
																
CHEVROLET																
Impala	Push-To-Start	2014-2019	•	•	•	•	•	•	•	•	•	•	•	•	•	•





BYPASS FIRMWARE VERSION


70.[41]

GM MINIMUM


To add the firmware version and the options, use the **FLASH LINK UPDATER** or **FLASH LINK MOBILE** tool, sold separately.

	Program bypass option IF THE VEHICLE IS NOT EQUIPPED WITH FUNCTIONAL HOOD PIN:	UNIT OPTION	DESCRIPTION
		A11	<input type="checkbox"/> OFF
			Hood trigger (Output Status).

	Program bypass option:	UNIT OPTION	DESCRIPTION
		C1	OEM Remote status (Lock/Unlock) monitoring
		D6	Push-to-Start



ATTENTION!

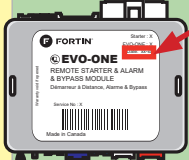

DATE: XX-XX

	Program remote starter option for R.S. OEM REMOTE STAND ALONE:	UNIT OPTION	DESCRIPTION
		E5	<input type="checkbox"/> OFF
			<input type="checkbox"/> ON
			By default DEACTIVATED
			MANUFACTURED MODULES BETWEEN: 04/2018 TO 04/2019

	Program remote starter option for R.S. OEM REMOTE STAND ALONE:	UNIT OPTION	DESCRIPTION
		38	2
			Enable Press 3x Lock to remote start with the OEM remote.

MANDATORY INSTALL

*** HOOD PIN**



HOOD STATUS: THE HOOD PIN SWITCH (INCLUDED) MUST BE INSTALLED IF THE VEHICLE CAN BE REMOTE STARTED WITH THE HOOD OPEN, SET FUNCTION A11 TO OFF.

A11

OFF

SECURITY STICKER



Included

Notice: the installation of safety elements are mandatory. The hood pin and the sticker are essential security elements and must be installed.

THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.

DESCRIPTION

Parts required (Not included) PAGE



WIRE TO WIRE DIAGRAM

1X 1k Ohm Resistorr	Page 3
---------------------	--------





THARNNESS DIAGRAM

THARNNESS THAR-GM6	1x THAR-GM6	Page 4
--------------------	-------------	--------



BCM



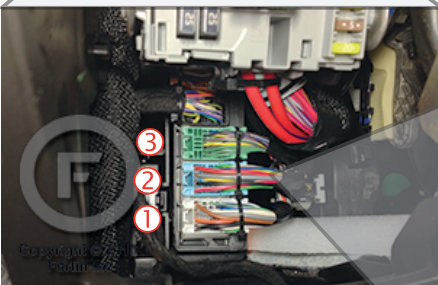
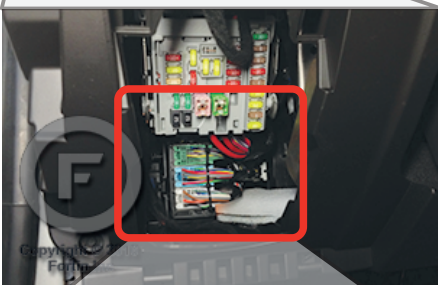


Impala

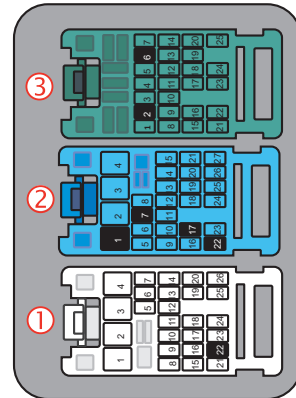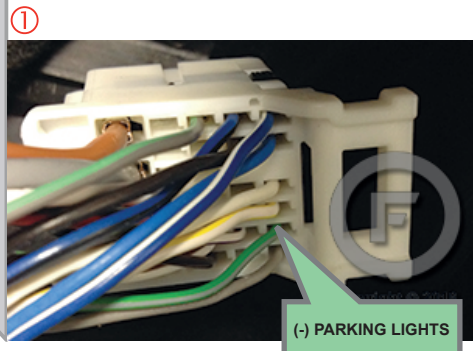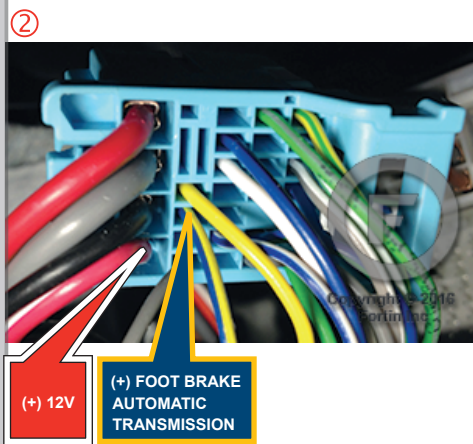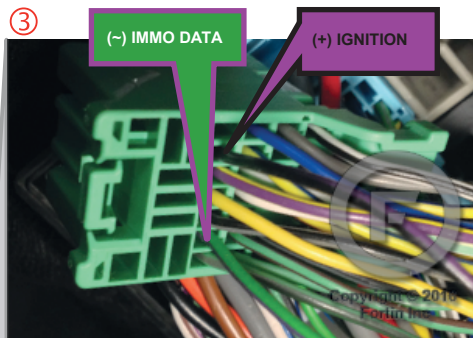


AUTOMATIC TRANSMISSION WIRING CONNECTION

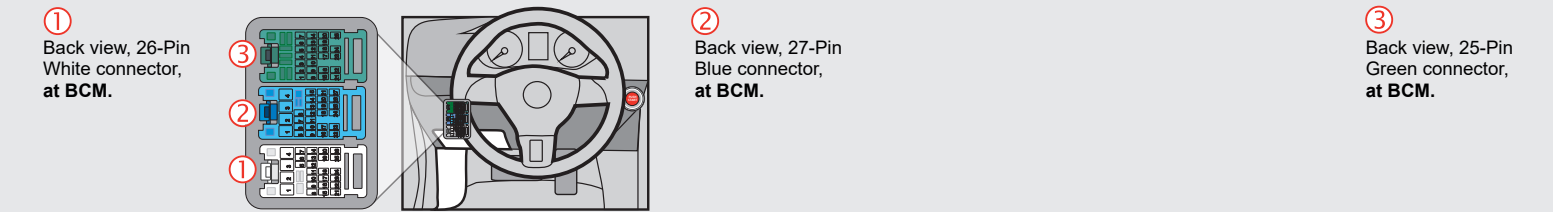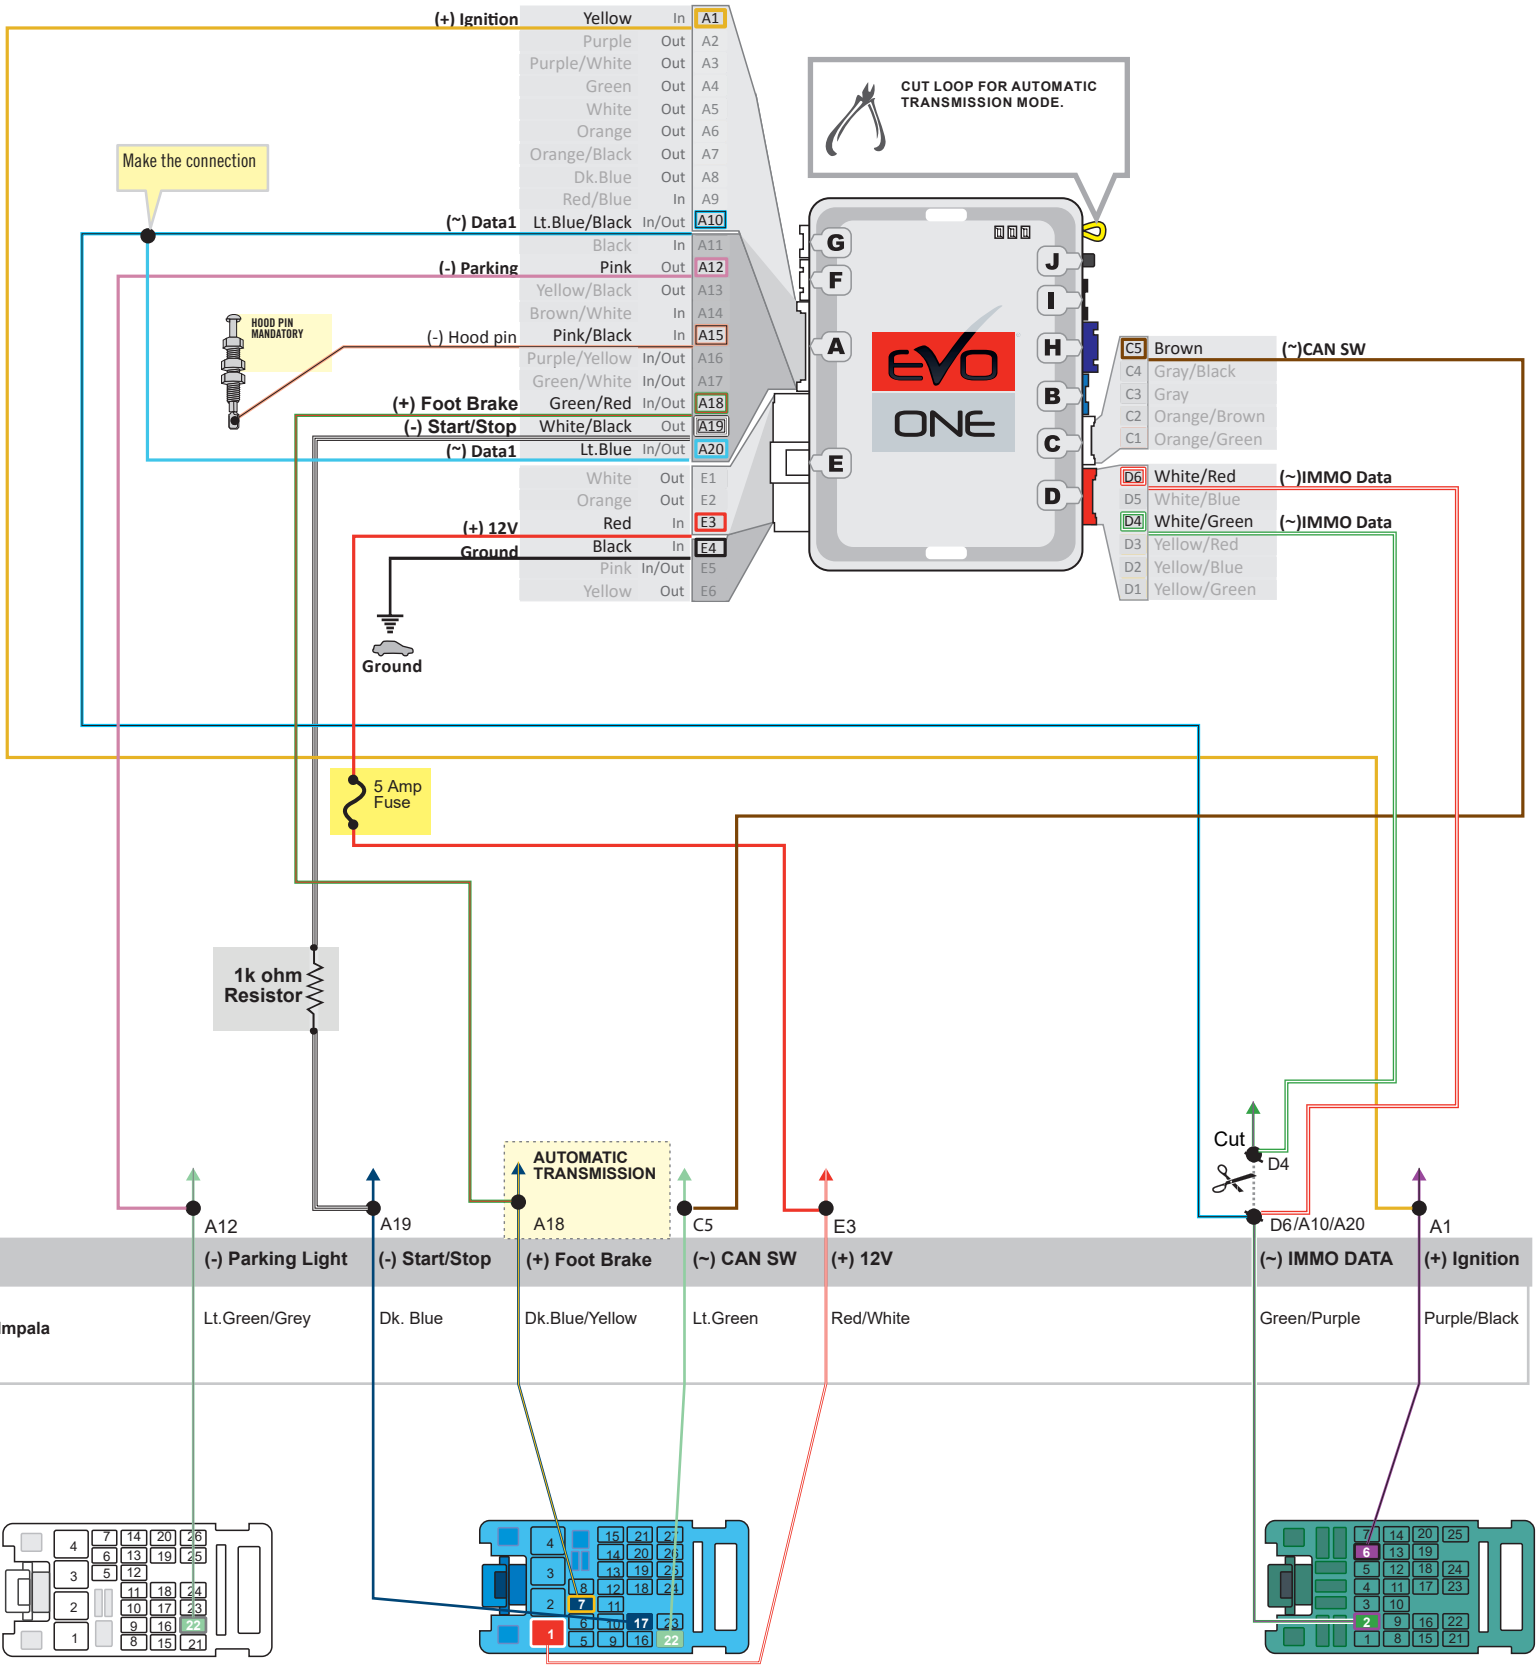

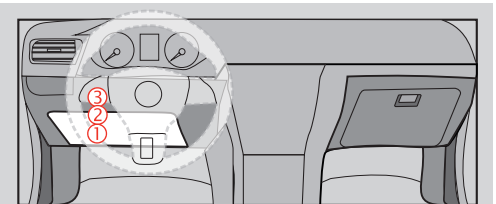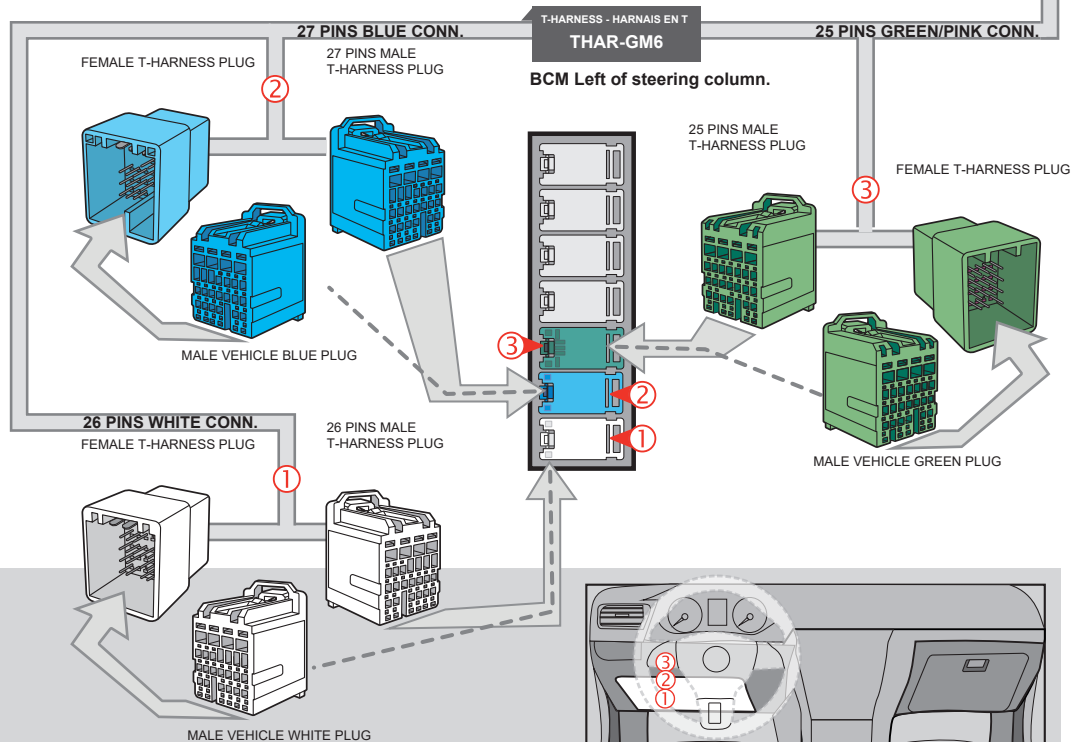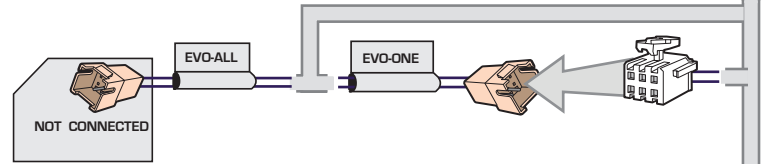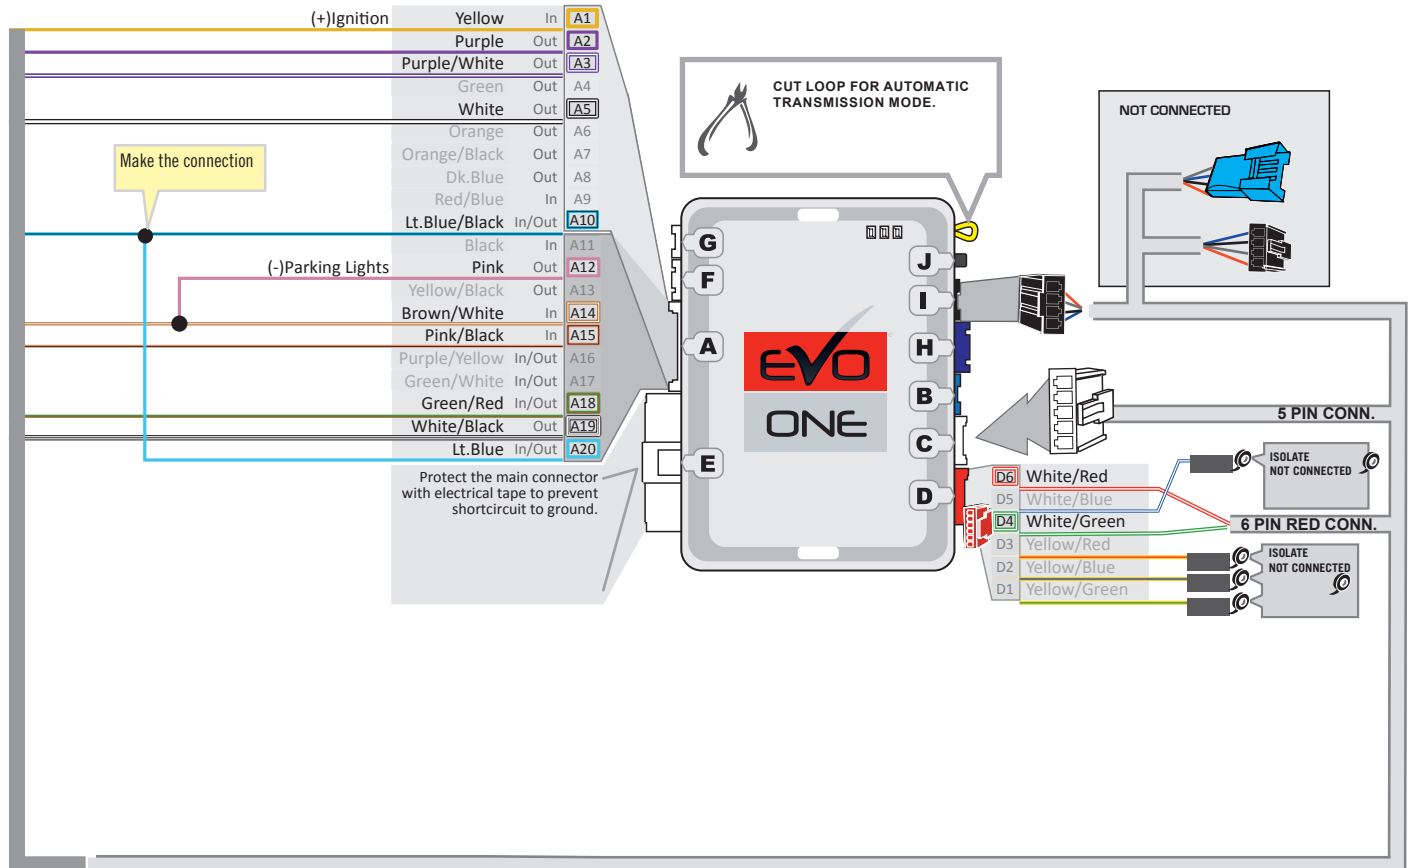


KEY BYPASS PROGRAMMING PROCEDURE 1/2




1 Remove the battery from the OEM remote.

2 Place the OEM remote into the transmitter pocket of the center console.
Refer to vehicle user guide for keyport location.

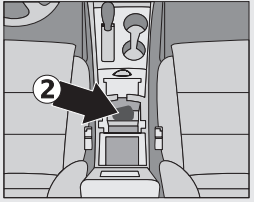


1

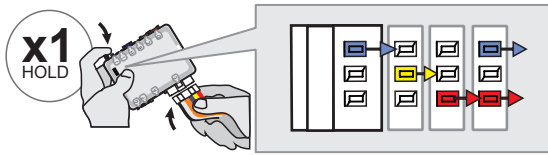

Press and hold the programming button:
Insert the 6-Pin Main connector.


↳The LEDs will alternate between BLUE, RED, YELLOW & BLUE/RED flashes.

2

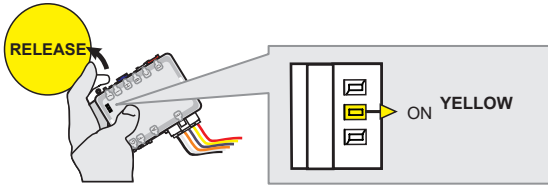


Release the programming button when the LED is YELLOW.

 If the LED is not solid YELLOW disconnect the 6-Pin connector (Main-Harness) and go back to step 1.




3

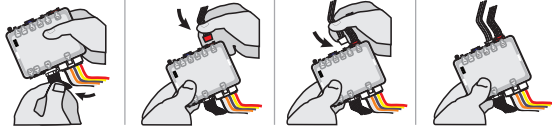

Insert the required remaining connectors.

4

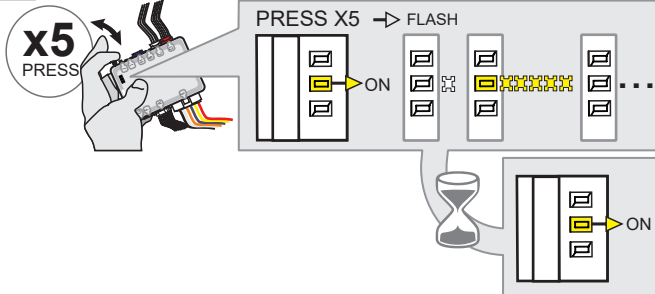


Press and release the programming button five (5x) times.

↳The YELLOW LED will flash 5 times each second.


↳**WAIT** for the YELLOW LED to turn ON solide.

5

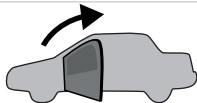

Open the driver door.

6

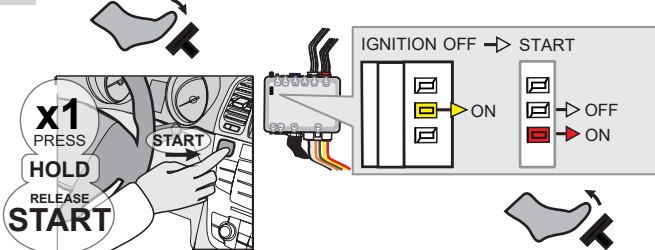

Press the foot-brake pedal.

Press the Push-to-Start button until the engine start.

Release the foot-brake pedal.

↳The RED LED will turn ON.
↳The YELLOW LED will turn OFF.


KEY BYPASS PROGRAMMING PROCEDURE 2/2

7




Press the Push-to-Start button until the engine turn OFF.

8

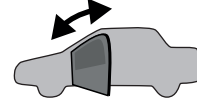

Close and open the driver door.

9

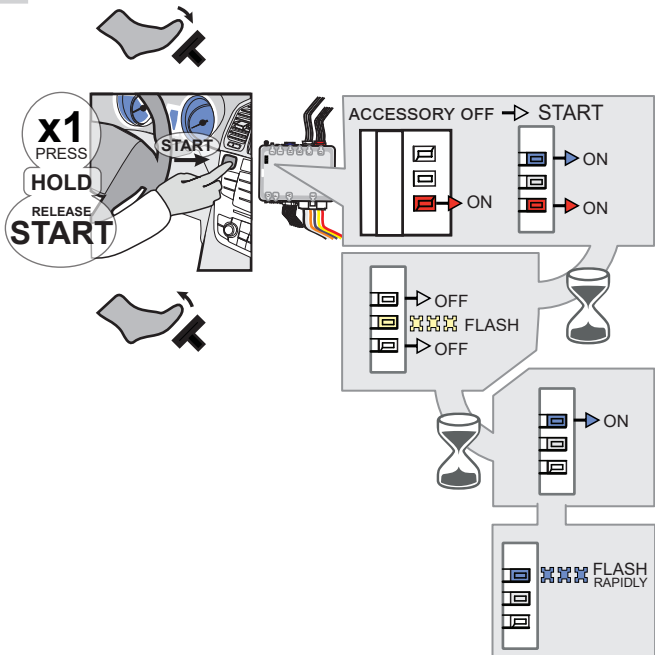


Press the foot-brake pedal.

Press the Push-to-Start button until the engine start.

Release the foot-brake pedal.

- ↳ The BLUE LED will turn ON.
- ↳ The BLUE LED will turn OFF. The RED LED will turn OFF.
- ↳ The YELLOW LED will flash rapidly
- ↳ The BLUE LED will turn ON.
- ↳ The BLUE LED will flash rapidly

10

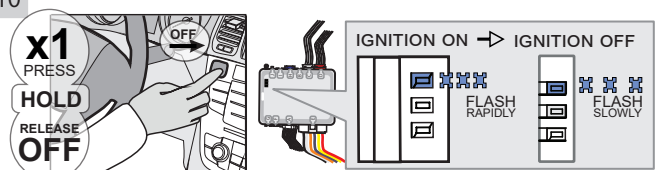

Press the Push-to-Start button until the engine turn OFF.


- ↳ The BLUE LED will flash slowly

11



Disconnect all connectors and after the 6-Pin (Main-Harness) or the 4-Pin Data-link connector.

12

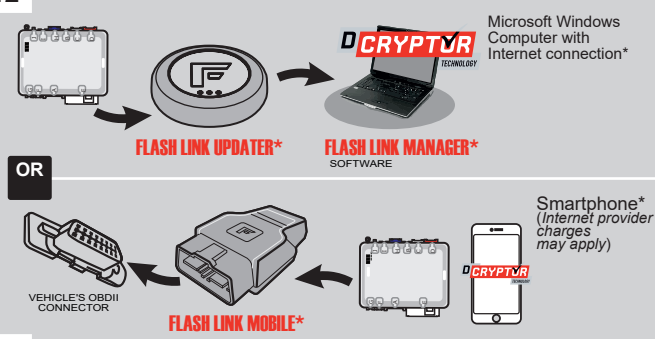


Use the tool: FLASH LINK UPDATER* or FLASH LINK MOBILE* to visit the DCryptor menu.

***Parts required (not included)**

KEY BYPASS PROGRAMMING PROCEDURE 3/3

13

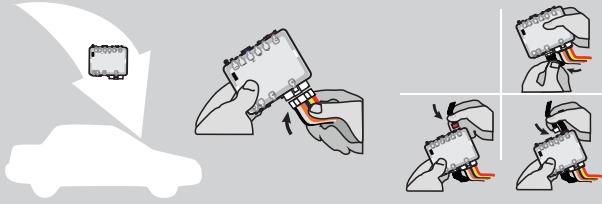

AFTER DCRYPTOR PROGRAMMING COMPLETED
 Go back to the vehicle and **reconnect** the 6-Pin (Main-Harness) or the 4-pins (Data-Link) connector and after all the remaining connector.



The module is now programmed.




REMOTE STARTER / ALARM VERIFICATION PROCEDURE

Test the remote starter. Remote start the vehicle.

REMOTE STARTER PROGRAMMING PROCEDURE



REFER TO THE **QUICK INSTALL GUIDE** INCLUDED WITH THE MODULE FOR THE REMOTE STARTER PROGRAMMING.

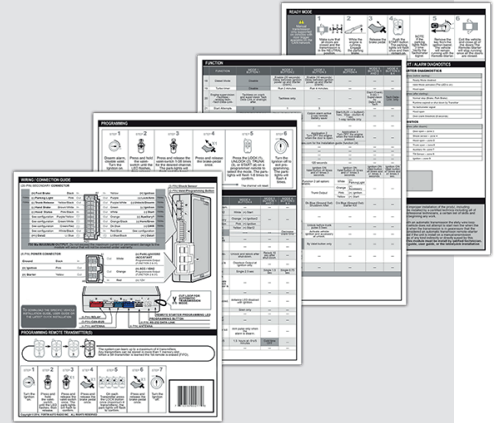

REMOTE STARTER FUNCTIONALITY |



All doors must be closed.

 


Remote start the vehicle.



Unlock the doors with either:

- The OEM remote
- The remote-starter remote
- Or the proximity remote



Enter the vehicle with the Intelligent Key.




The vehicle can now be put in to gear and driven.




If the vehicle is not unlocked with one of these conditions the remote-starter will shut down as soon as any door is opened.

REGULAR INSTALLATION AND THAR-GM6 INSTALLATION

ADDENDUM - SUGGESTED WIRING CONFIGURATION

VEHICLE	YEARS	Vehicle functions supported in this diagram (functional if equipped)														
		Immobilizer bypass	Lock	Unlock	Arm	Disarm	Parking Light	Trunk (open)	RAP Disable	Tachometer	Door Status	Trunk Status	Hand-Brake Status	Foot-Brake Status	OEM Remote Monitoring	R.S. OEM remote Stand Alone compatible
																
BUICK																
LaCrosse	Push-To-Start	2010	•	•	•	•	•	•	•	•	•	•	•	•	•	•





BYPASS FIRMWARE VERSION

70.[41]

GM MINIMUM

To add the firmware version and the options, use the **FLASH LINK UPDATER** or **FLASH LINK MOBILE** tool, sold separately.

	Program bypass option IF THE VEHICLE IS NOT EQUIPPED WITH FUNCTIONAL HOOD PIN:	UNIT OPTION		DESCRIPTION
		A11	OFF	Hood trigger (Output Status).

	Program bypass option:	UNIT OPTION		DESCRIPTION	
		C1	OEM Remote status (Lock/Unlock) monitoring		
		D6	Push-to-Start		



ATTENTION!



DATE: XX-XX

E5

OFF

ON

By default DEACTIVATED

MANUFACTURED MODULES BETWEEN: 04/2018 TO 04/2019

Program remote starter option for R.S. OEM REMOTE STAND ALONE:	38	2	Enable Press 3x Lock to remote start with the OEM remote.
---	----	---	--

MANDATORY INSTALL

*** HOOD PIN**



HOOD STATUS: THE HOOD PIN SWITCH (INCLUDED) MUST BE INSTALLED IF THE VEHICLE CAN BE REMOTE STARTED WITH THE HOOD OPEN, SET FUNCTION A11 TO OFF.

A11

OFF

SECURITY STICKER



Included

Notice: the installation of safety elements are mandatory. The hood pin and the sticker are essential security elements and must be installed.

THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.

DESCRIPTION

Parts required (Not included) PAGE








WIRE TO WIRE DIAGRAM

1X 1k Ohm Resistorr	Page 3
---------------------	--------


THARNESS DIAGRAM

THARNESS THAR-GM6	1x THAR-GM6	Page 4
-------------------	-------------	--------


BCM

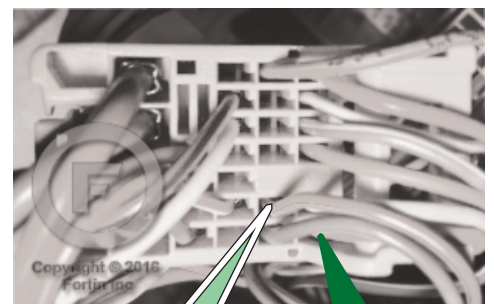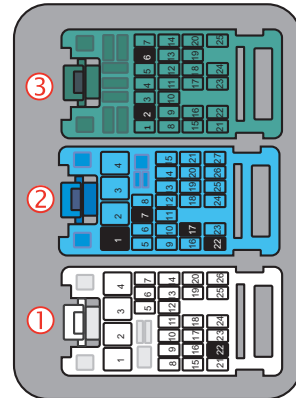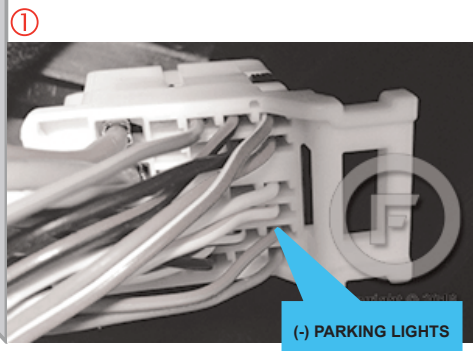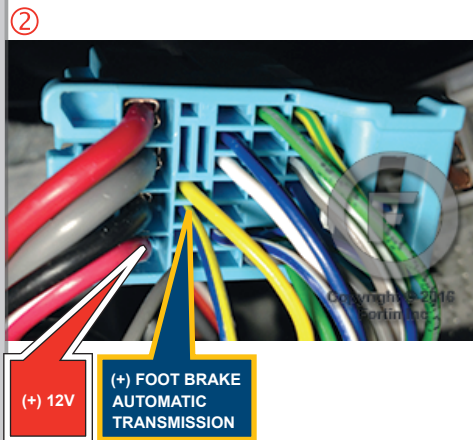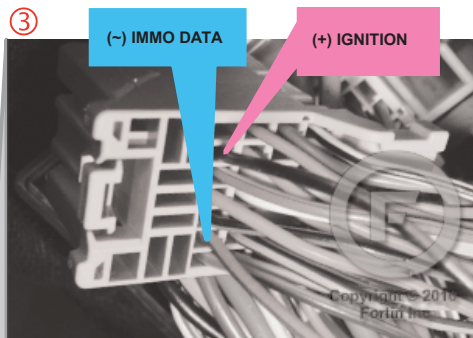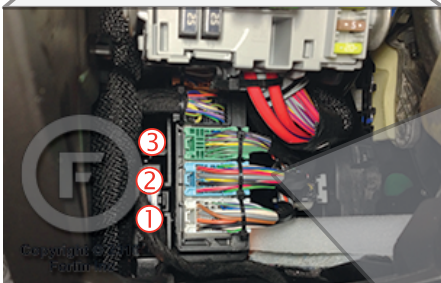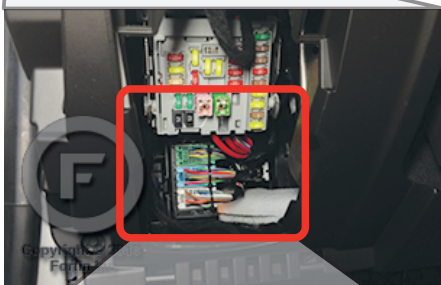

AUTOMATIC TRANSMISSION WIRING CONNECTION

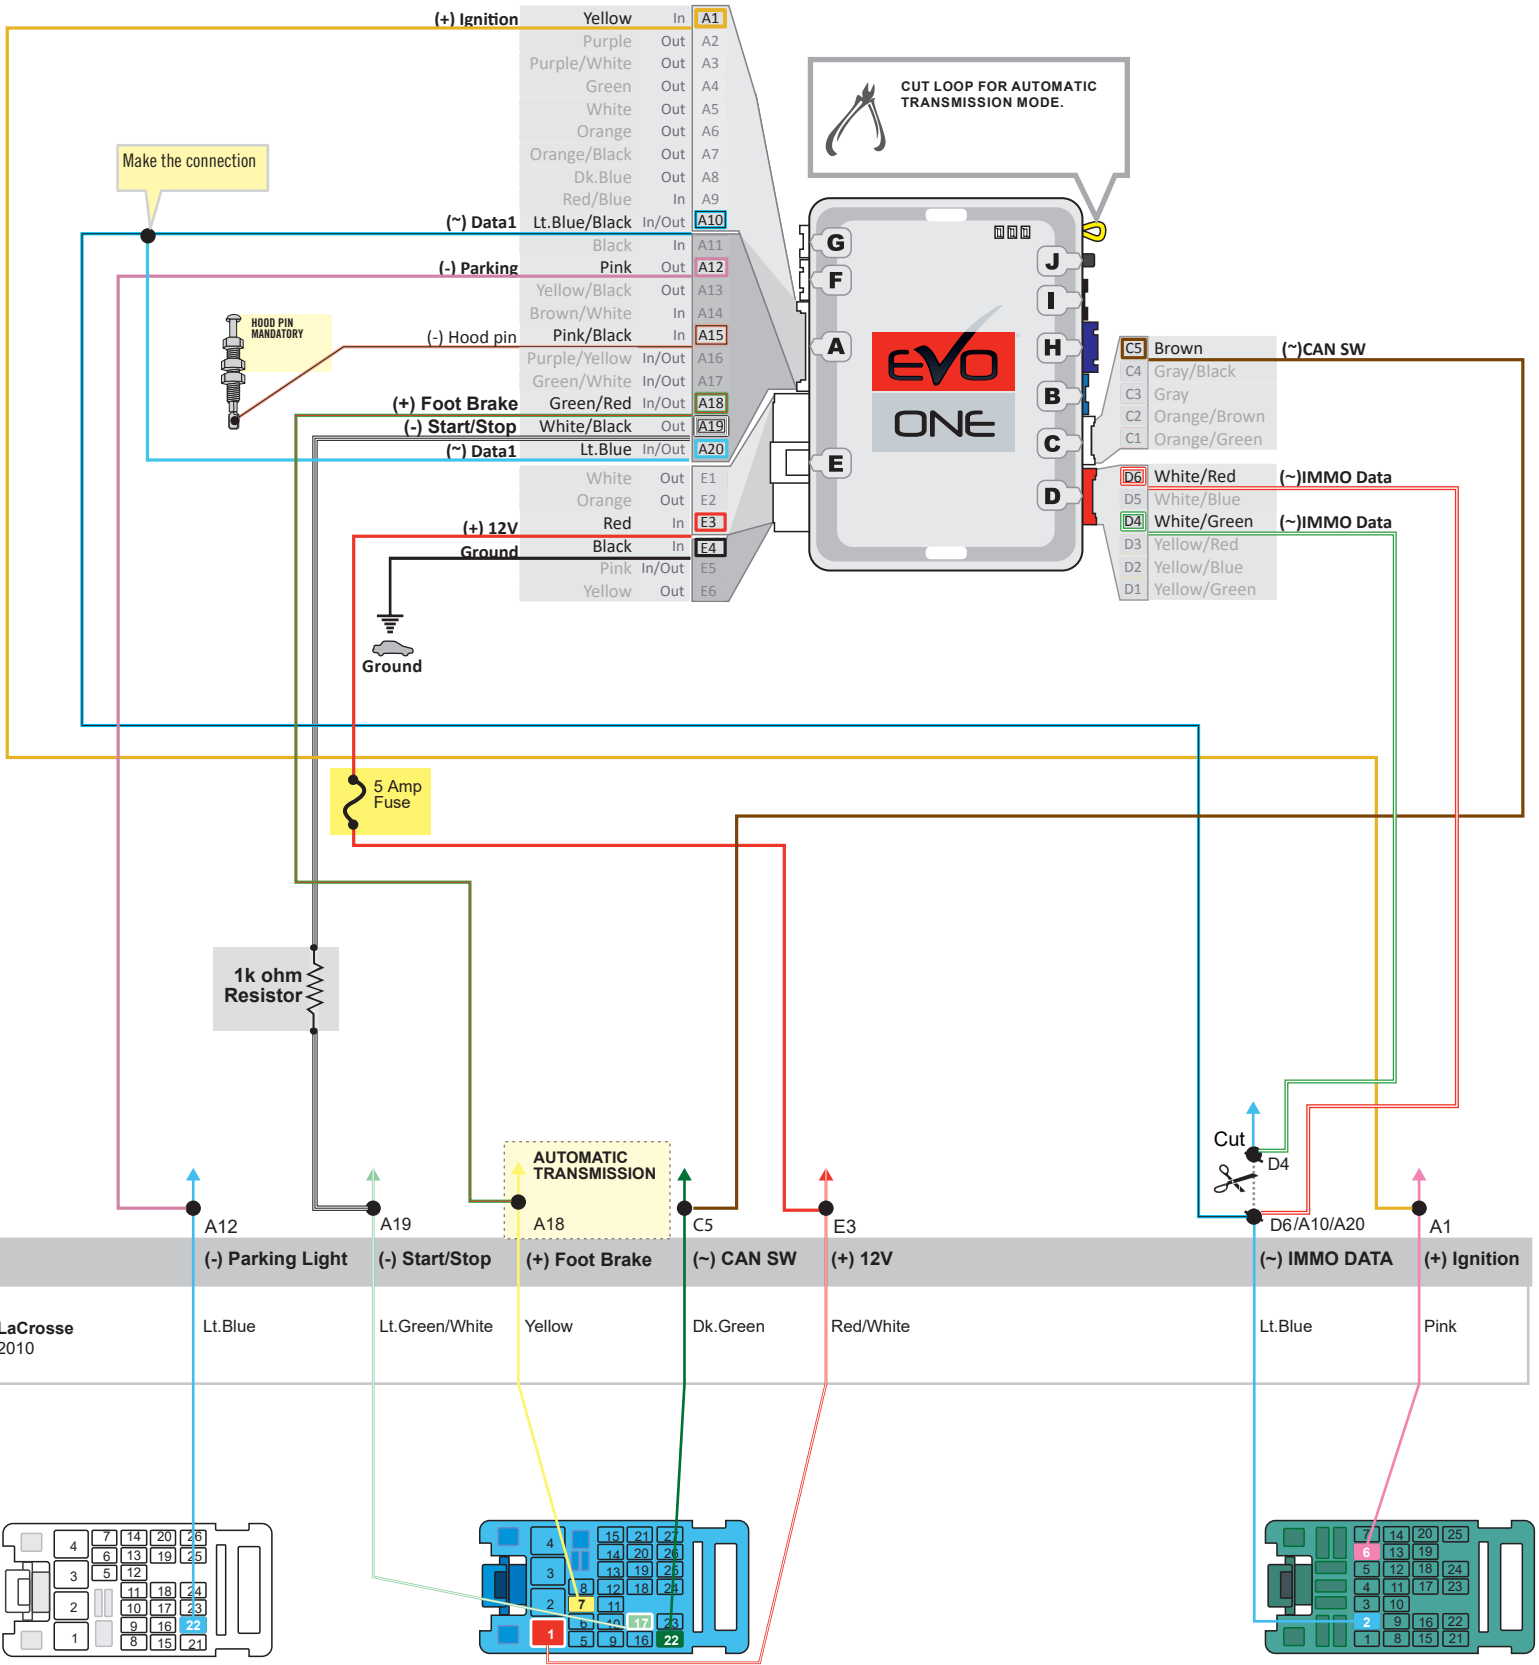





① Back view, 26-Pin White connector, at BCM.

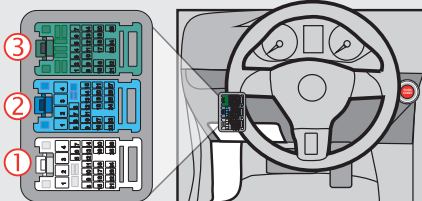


② Back view, 27-Pin Blue connector, at BCM.

③ Back view, 25-Pin Green connector, at BCM.

THAR-GM6 | WIRING CONNECTION

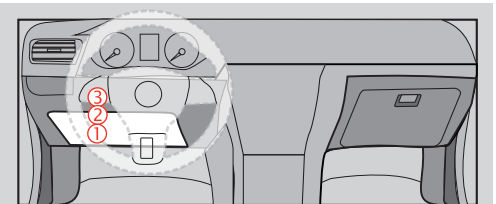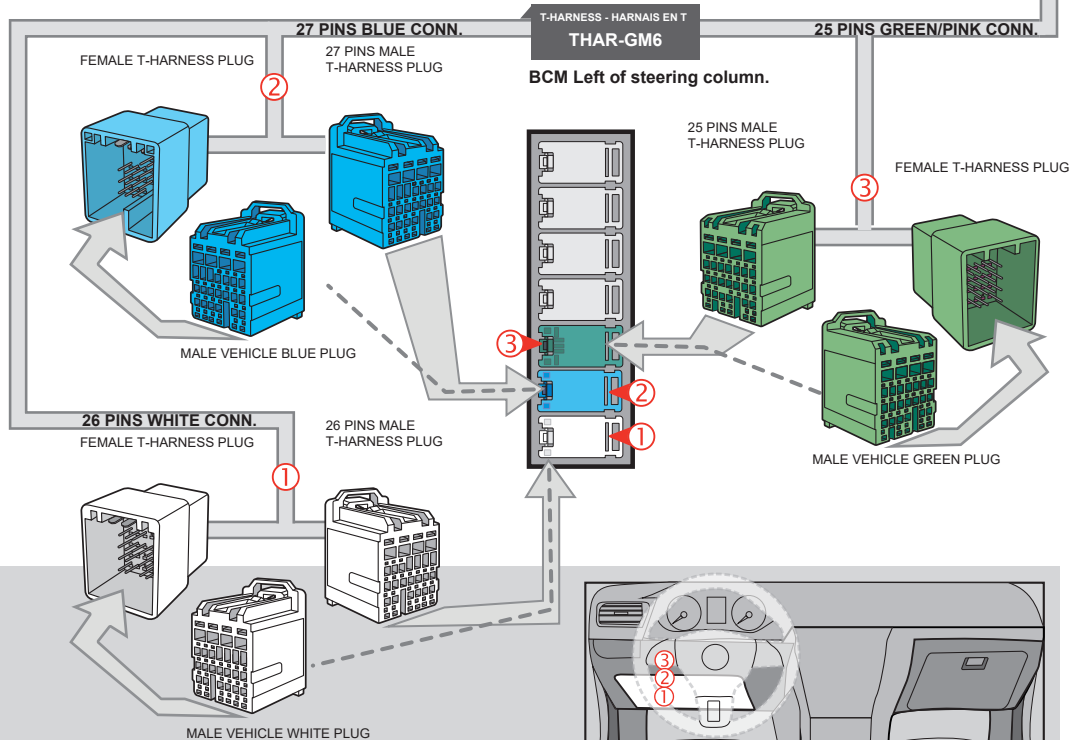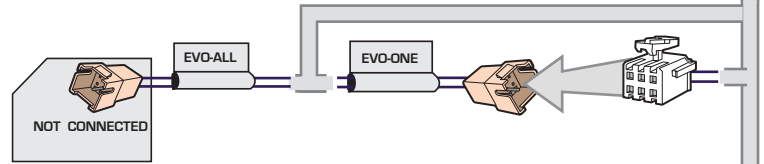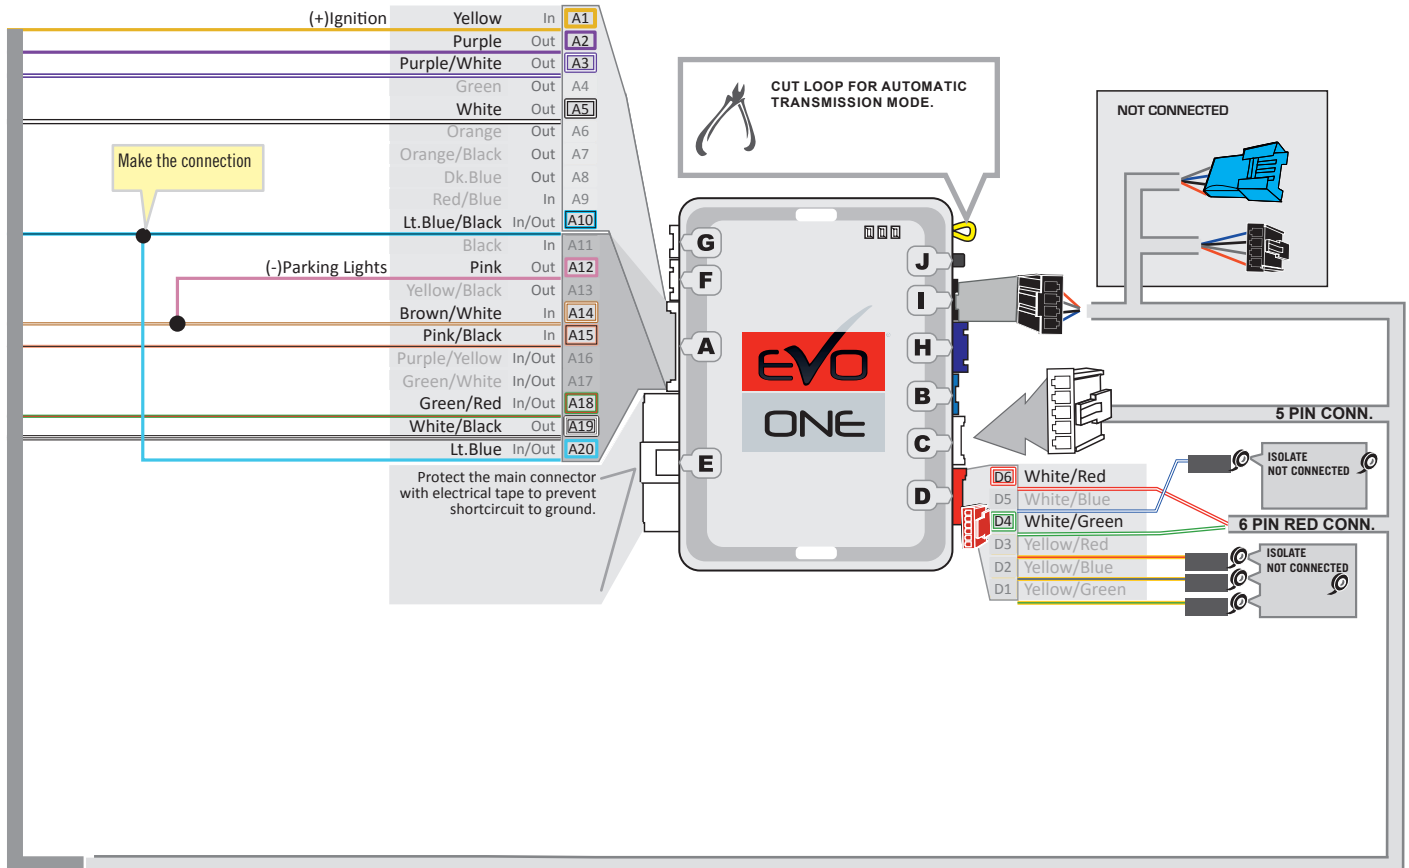


KEY BYPASS PROGRAMMING PROCEDURE 1/2

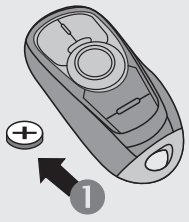


1 Remove the battery from the OEM remote.

2 Place the OEM remote into the transmitter pocket of the center console.

Refer to vehicle user guide for keyport location.

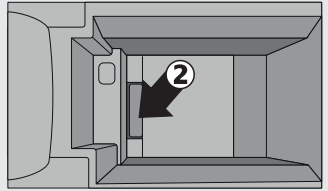


1

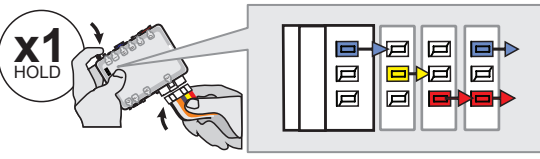

Press and hold the programming button:
Insert the 6-Pin Main connector.


↳The LEDs will alternate between BLUE, RED, YELLOW & BLUE/RED flashes.

2

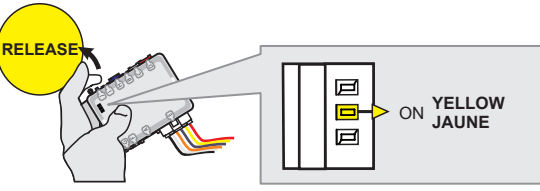


Release the programming button when the LED is YELLOW.

If the LED is not solid YELLOW disconnect the 6-Pin connector (Main-Harness) and go back to step 1.

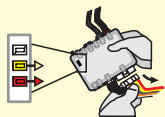


3

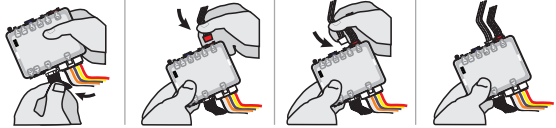

Insert the required remaining connectors.

4

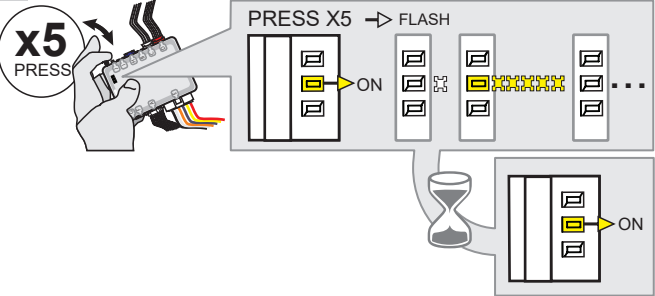


Press and release the programming button five (5x) times.

↳The YELLOW LED will flash 5 times each second.


↳WAIT for the YELLOW LED to turn ON solide.

5

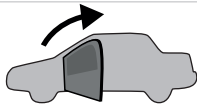

Open the driver door.

6

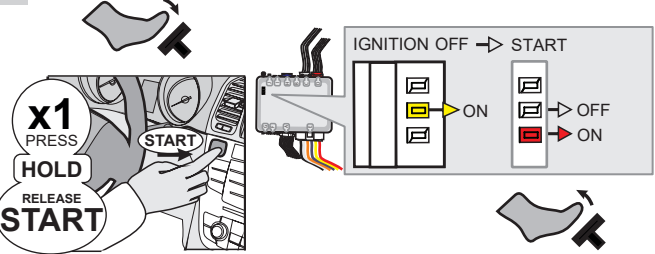

Press the foot-brake pedal.

Press the Push-to-Start button until the engine start.

Release the foot-brake pedal.

↳The RED LED will turn ON.
↳The YELLOW LED will turn OFF.


KEY BYPASS PROGRAMMING PROCEDURE 2/2

7




Press the Push-to-Start button until the engine turn OFF.

8

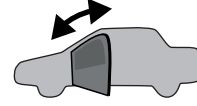

Close and open the driver door.

9

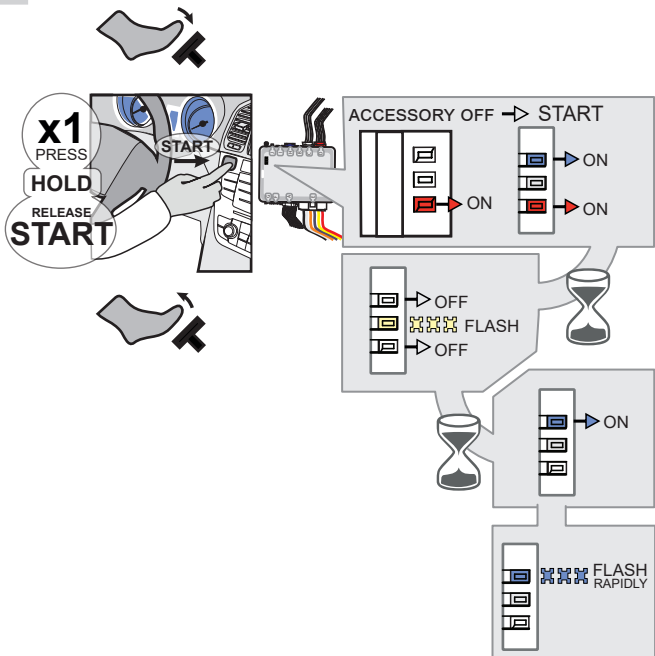


Press the foot-brake pedal.

Press the Push-to-Start button until the engine start.

Release the foot-brake pedal.

- ↳ The BLUE LED will turn ON.
- ↳ The BLUE LED will turn OFF. The RED LED will turn OFF.
- ↳ The YELLOW LED will flash rapidly
- ↳ The BLUE LED will turn ON.
- ↳ The BLUE LED will flash rapidly

10

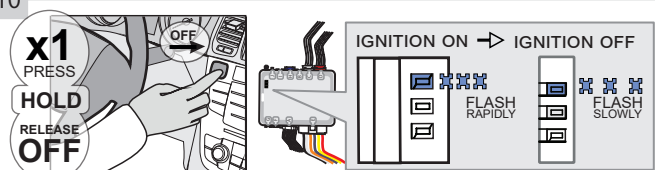

Press the Push-to-Start button until the engine turn OFF.


- ↳ The BLUE LED will flash slowly

11



Disconnect all connectors and after the 6-Pin (Main-Harness) or the 4-Pin Data-link connector.

12

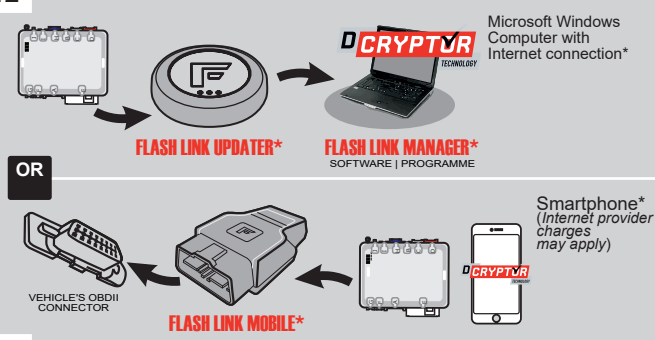

Microsoft Windows Computer with Internet connection*

FLASH LINK UPDATER* FLASH LINK MANAGER*
SOFTWARE | PROGRAMME

OR


Smartphone* (Internet provider charges may apply)

VEHICLE'S OBDII CONNECTOR FLASH LINK MOBILE*

Use the tool: FLASH LINK UPDATER or FLASH LINK MOBILE to visit the DCryptor menu.

*Parts required (not included)

13

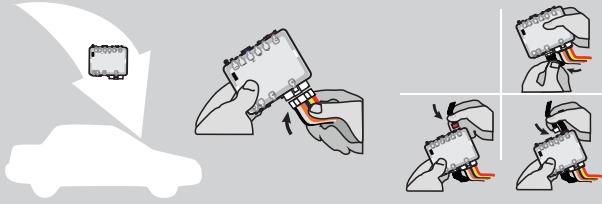

AFTER DCRYPTOR PROGRAMMING COMPLETED
Go back to the vehicle and **reconnect** the 6-Pin (Main-Harness) or the 4-pins (Data-Link) connector and after all the remaining connector.



The module is now programmed.




REMOTE STARTER / ALARM VERIFICATION PROCEDURE

Test the remote starter. Remote start the vehicle.

REMOTE STARTER PROGRAMMING PROCEDURE |



REFER TO THE **QUICK INSTALL GUIDE** INCLUDED WITH THE MODULE FOR THE REMOTE STARTER PROGRAMMING.

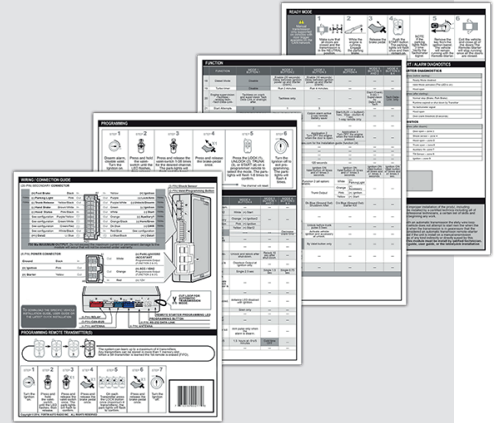

REMOTE STARTER FUNCTIONALITY |



All doors must be closed.

 


Remote start the vehicle.



Unlock the doors with either:

- The OEM remote
- The remote-starter remote
- Or the proximity remote



Enter the vehicle with the Intelligent Key.




The vehicle can now be put in to gear and driven.




If the vehicle is not unlocked with one of these conditions the remote-starter will shut down as soon as any door is opened.

REGULAR INSTALLATION AND THAR-GM6 INSTALLATION

ADDENDUM - SUGGESTED WIRING CONFIGURATION

VEHICLE	YEARS	Vehicle functions supported in this diagram (functional if equipped)														
		Immobilizer bypass	Lock	Unlock	Arm	Disarm	Parking Light	Trunk (open)	RAP Disable	Tachometer	Door Status	Trunk Status	Hand-Brake Status	Foot-Brake Status	OEM Remote Monitoring	R.S. OEM remote Stand Alone compatible
																
BUICK																
LaCrosse	Push-To-Start	2011-2013	•	•	•	•	•	•	•	•	•	•	•	•	•	•





BYPASS FIRMWARE VERSION

70.[41]

GM MINIMUM

To add the firmware version and the options, use the **FLASH LINK UPDATER** or **FLASH LINK MOBILE** tool, sold separately.


	Program bypass option IF THE VEHICLE IS NOT EQUIPPED WITH FUNCTIONAL HOOD PIN:	UNIT OPTION		DESCRIPTION
		A11	OFF	Hood trigger (Output Status).

	Program bypass option:	UNIT OPTION		DESCRIPTION	
		C1	OEM Remote status (Lock/Unlock) monitoring		
		D6	Push-to-Start		

	ATTENTION!		E5	OFF	By default DEACTIVATED
			ON	MANUFACTURED MODULES BETWEEN: 04/2018 TO 04/2019	


Program remote starter option for R.S. OEM REMOTE STAND ALONE:	38	2	Enable Press 3x Lock to remote start with the OEM remote.
---	----	---	---

MANDATORY INSTALL

* **HOOD PIN**  **HOOD STATUS:** THE HOOD PIN SWITCH (INCLUDED) MUST BE INSTALLED IF THE VEHICLE CAN BE REMOTE STARTED WITH THE HOOD OPEN, SET FUNCTION A11 TO OFF.

A11 OFF

SECURITY STICKER

 Included

Notice: the installation of safety elements are mandatory. The hood pin and the sticker are essential security elements and must be installed.

THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.

DESCRIPTION

Parts required (Not included) PAGE







WIRE TO WIRE DIAGRAM

	1X 1k Ohm Resistorr	Page 3
--	---------------------	--------





THARNESS DIAGRAM

THARNESS THAR-GM6	1x THAR-GM6	Page 4
-------------------	-------------	--------





BCM

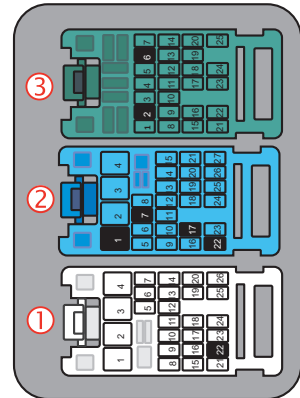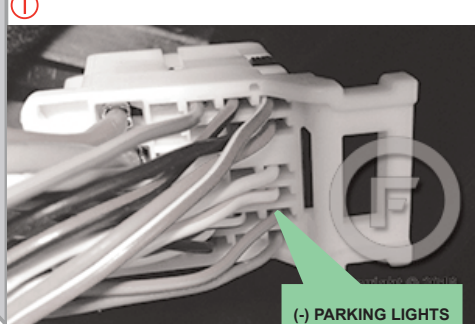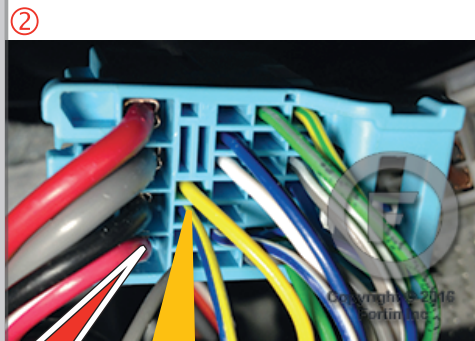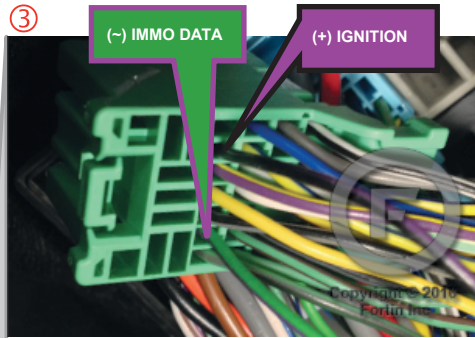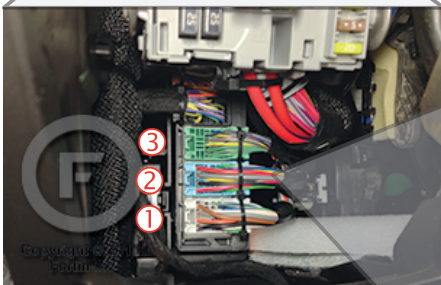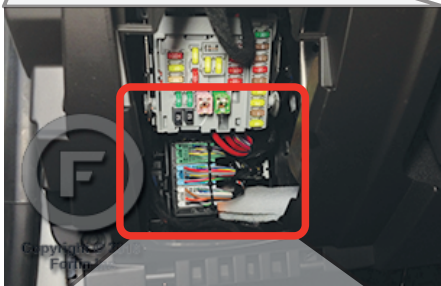


AUTOMATIC TRANSMISSION WIRING CONNECTION

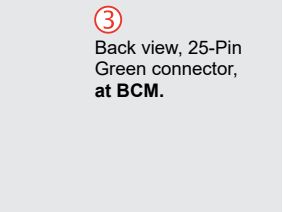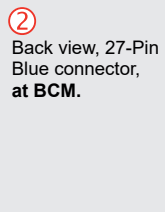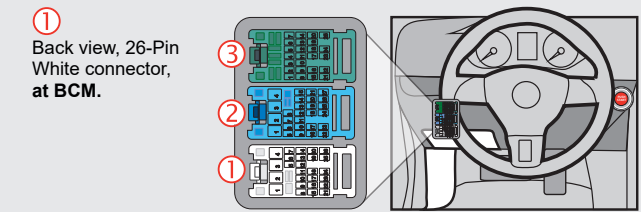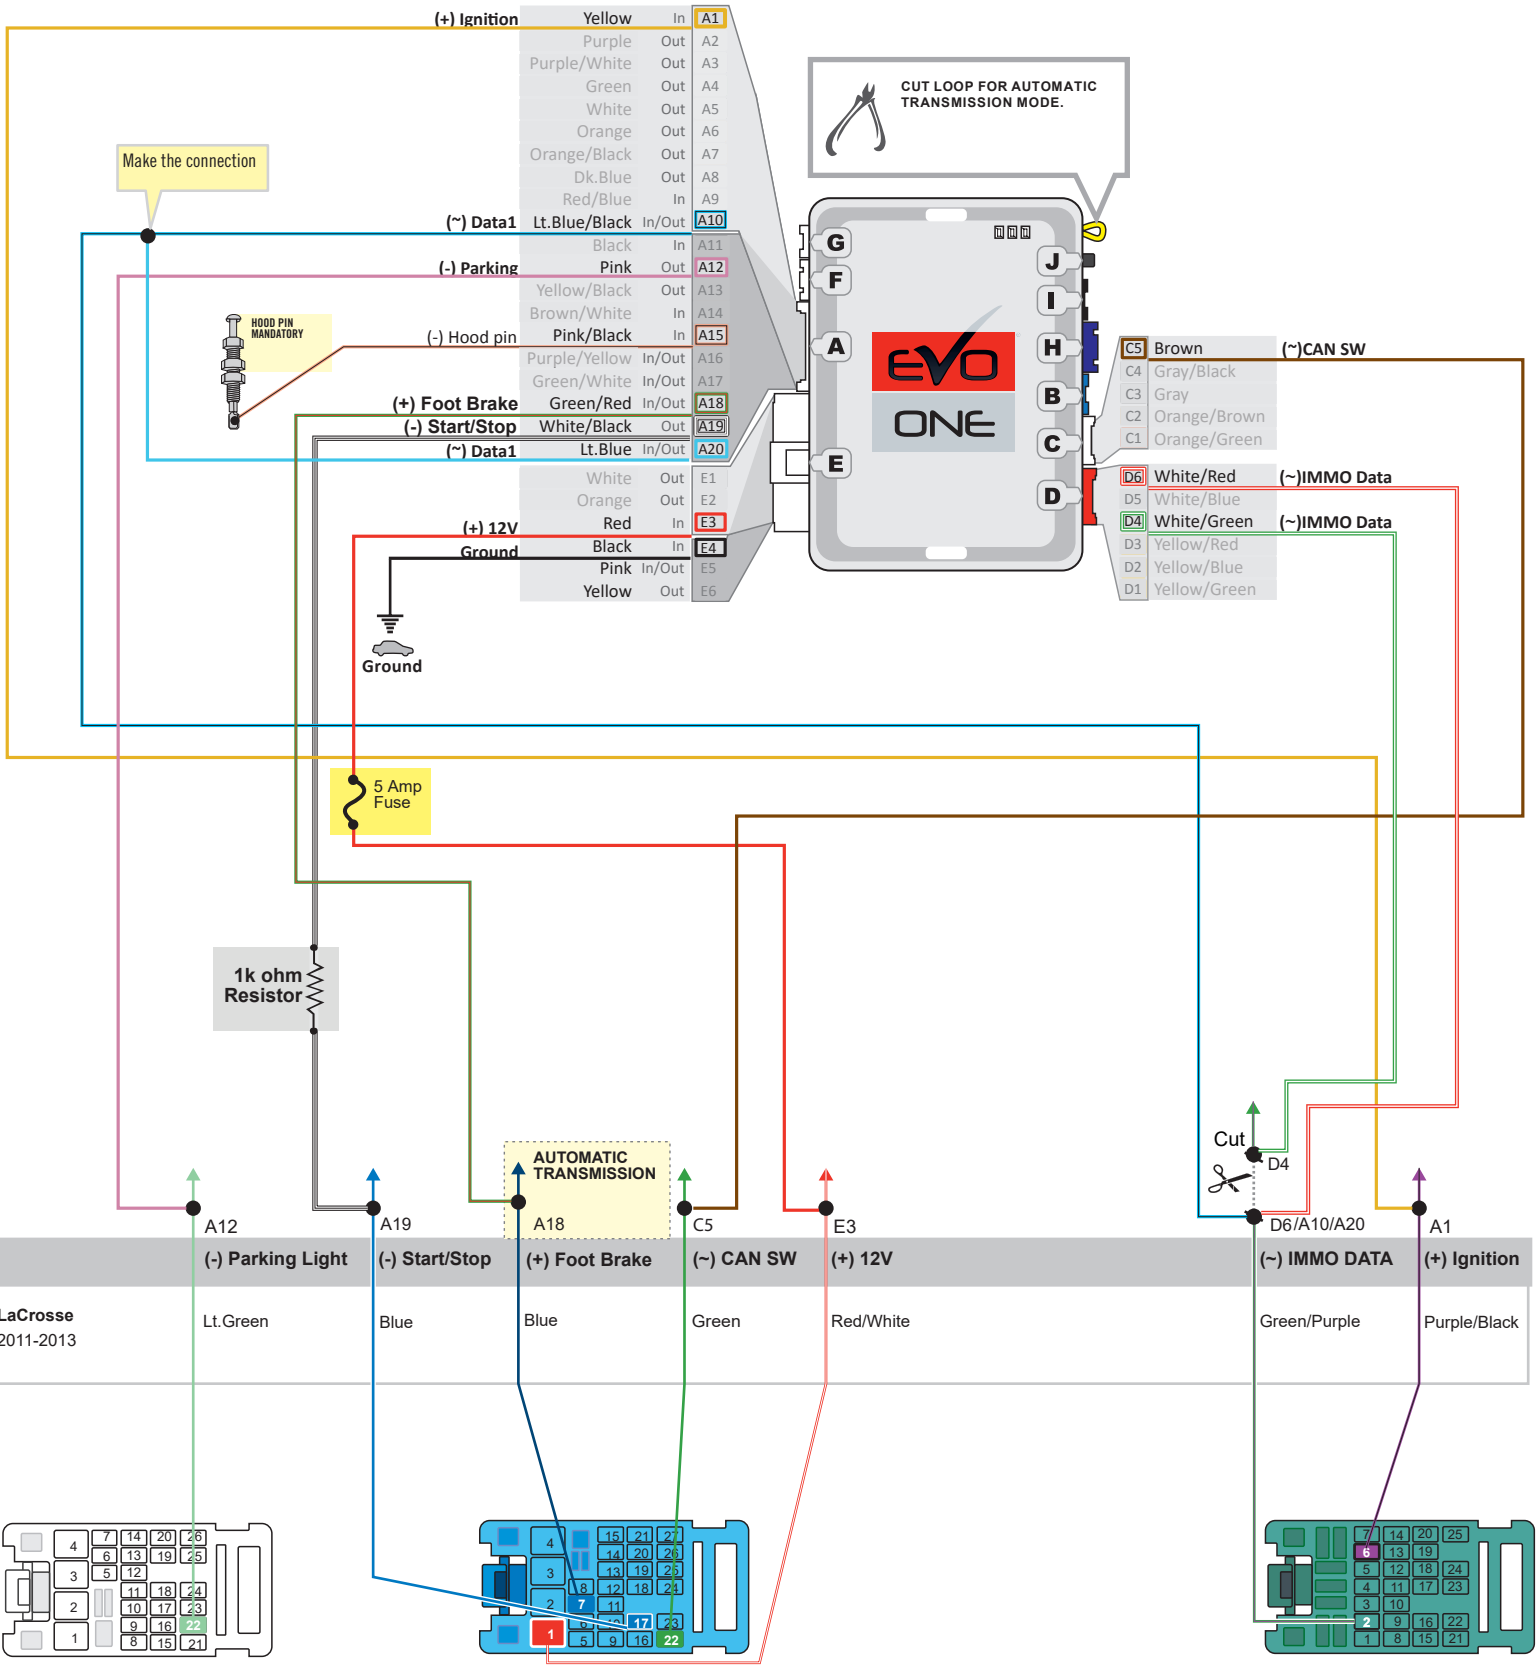

THAR-GM6 | WIRING CONNECTION

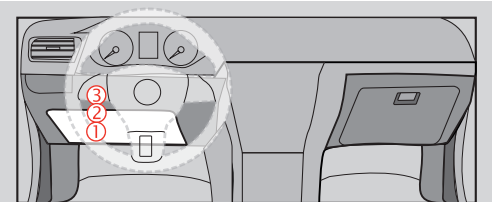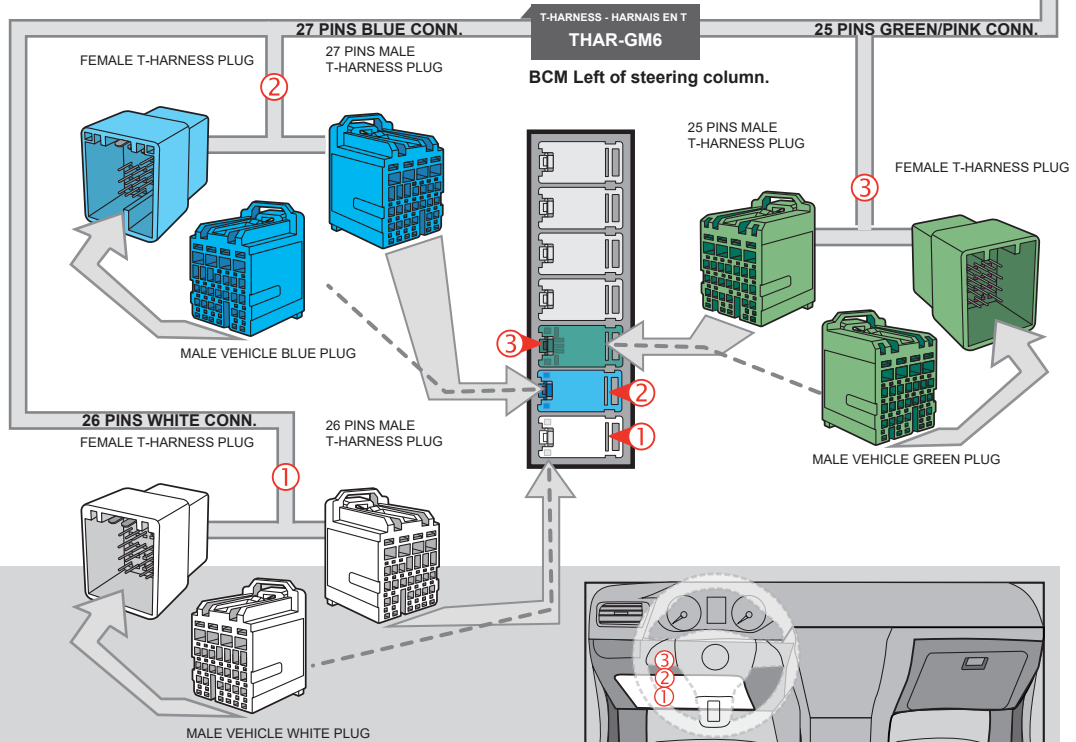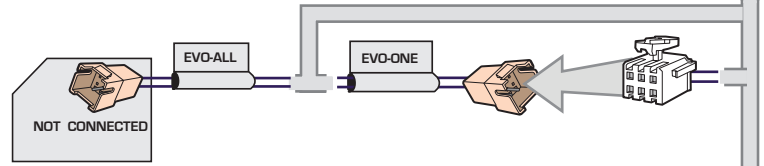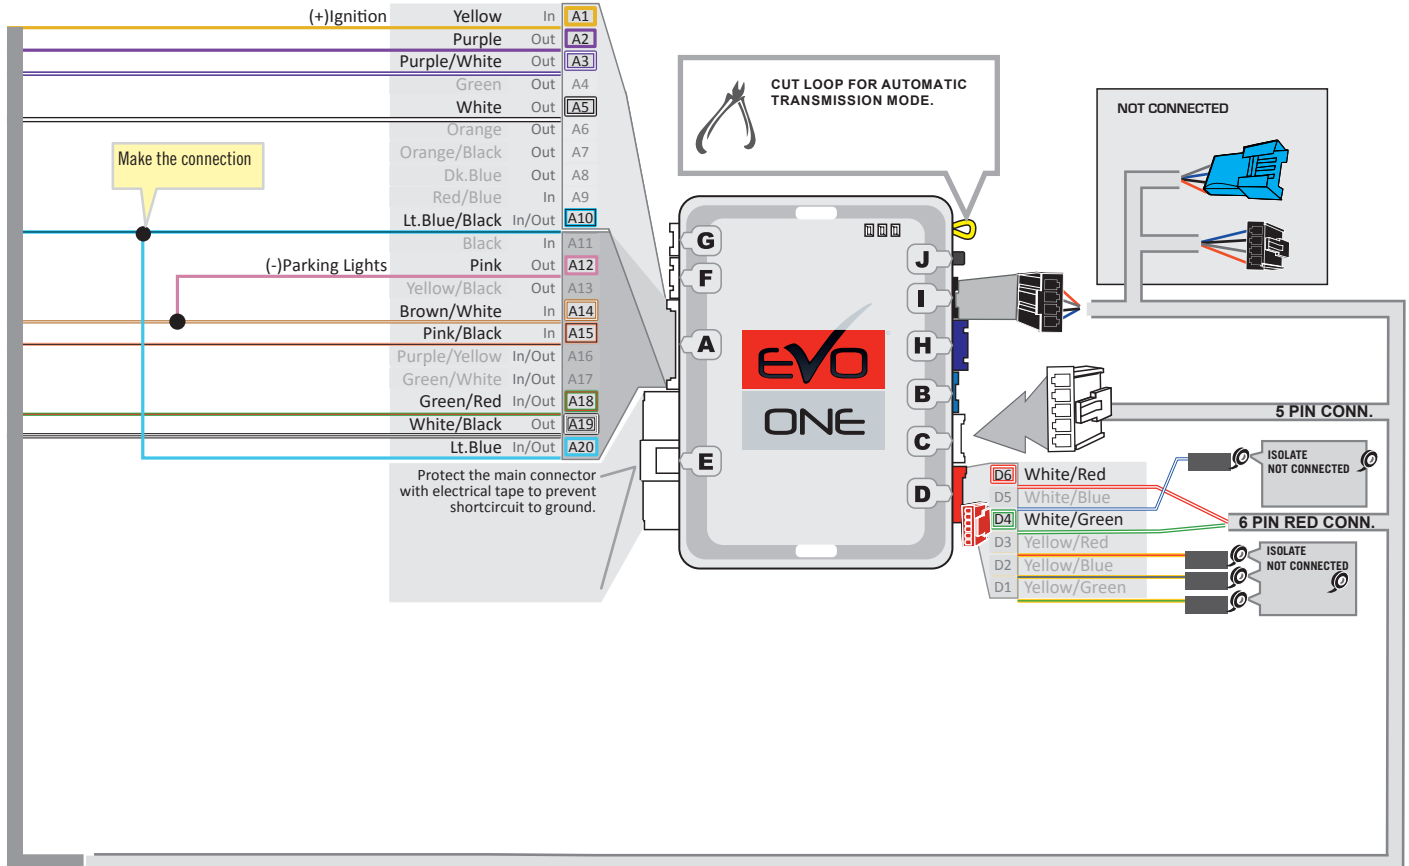

KEY BYPASS PROGRAMMING PROCEDURE 1/2

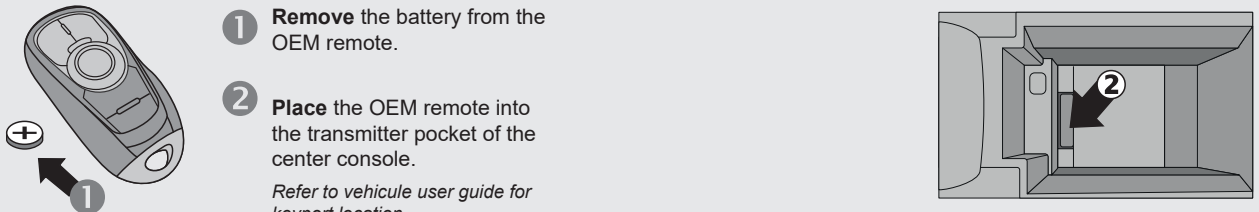


1 Remove the battery from the OEM remote.

2 Place the OEM remote into the transmitter pocket of the center console.

Refer to vehicle user guide for keyport location.


1

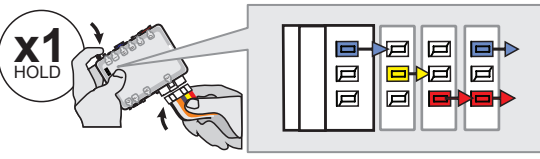

Press and hold the programming button:
Insert the 6-Pin Main connector.


↳The LEDs will alternate between BLUE, RED, YELLOW & BLUE/RED flashes.

2

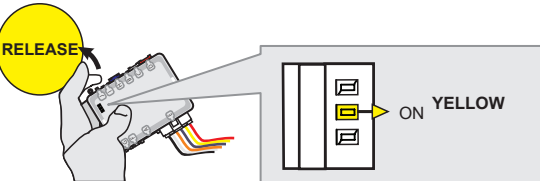


Release the programming button when the LED is YELLOW.

If the LED is not solid YELLOW disconnect the 6-Pin connector (Main-Harness) and go back to step 1.

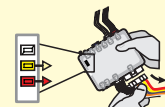


3

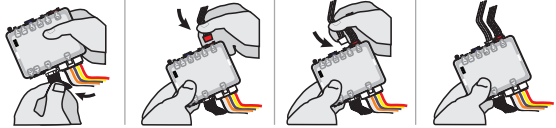

Insert the required remaining connectors.

4

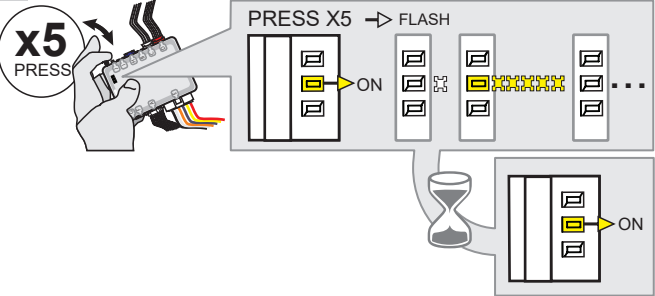


Press and release the programming button five (5x) times.

↳The YELLOW LED will flash 5 times each second.


↳WAIT for the YELLOW LED to turn ON solide.

5

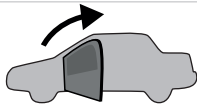

Open the driver door.

6

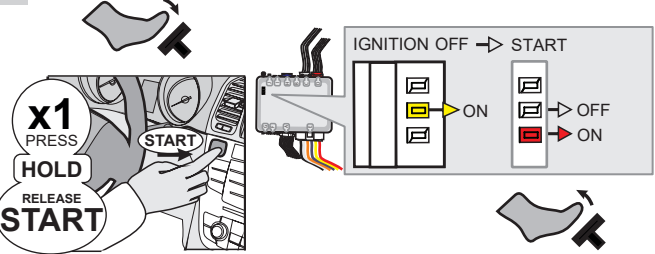

Press the foot-brake pedal.

Press the Push-to-Start button until the engine start.

Release the foot-brake pedal.

↳The RED LED will turn ON.
↳The YELLOW LED will turn OFF.


KEY BYPASS PROGRAMMING PROCEDURE 2/2 |

7




Press the Push-to-Start button until the engine turn OFF.

8

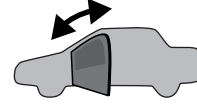

Close and open the driver door.

9

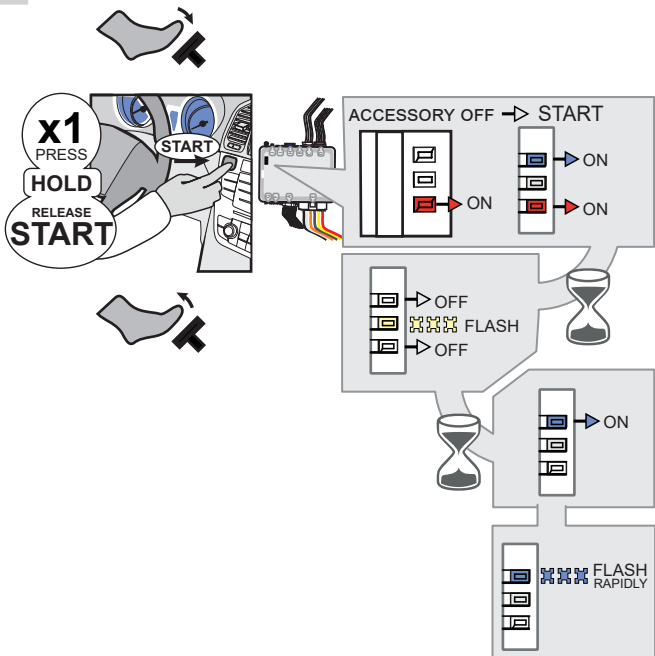


Press the foot-brake pedal.

Press the Push-to-Start button until the engine start.

Release the foot-brake pedal.

- ↳ The BLUE LED will turn ON.
- ↳ The BLUE LED will turn OFF. The RED LED will turn OFF.
- ↳ The YELLOW LED will flash rapidly
- ↳ The BLUE LED will turn ON.
- ↳ The BLUE LED will flash rapidly

10

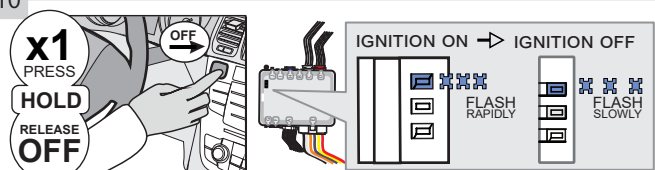

Press the Push-to-Start button until the engine turn OFF.


- ↳ The BLUE LED will flash slowly

11



Disconnect all connectors and after the 6-Pin (Main-Harness) or the 4-Pin Data-link connector.

12

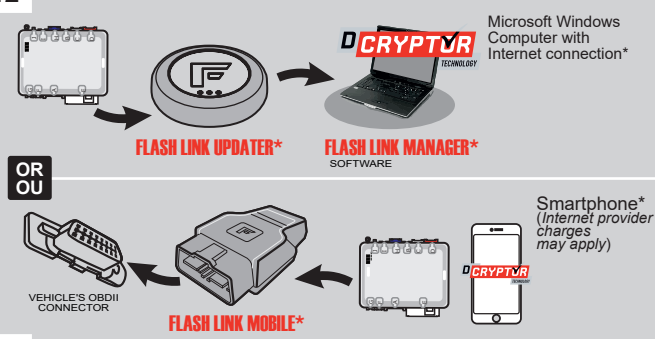


Use the tool: **FLASH LINK UPDATER*** or **FLASH LINK MOBILE*** to visit the DCryptor menu.

*Parts required (not included)

KEY BYPASS PROGRAMMING PROCEDURE 3/3 |

13

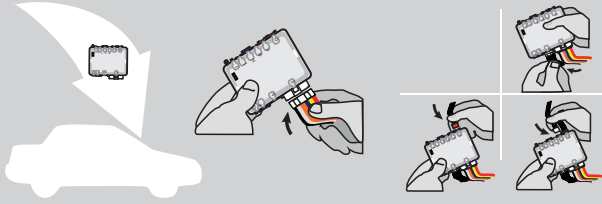

AFTER DCRYPTOR PROGRAMMING COMPLETED
Go back to the vehicle and **reconnect** the 6-Pin (Main-Harness) or the 4-pins (Data-Link) connector and after all the remaining connector.



The module is now programmed.




REMOTE STARTER / ALARM VERIFICATION PROCEDURE

Test the remote starter. Remote start the vehicle.

REMOTE STARTER PROGRAMMING PROCEDURE |



REFER TO THE **QUICK INSTALL GUIDE** INCLUDED WITH THE MODULE FOR THE REMOTE STARTER PROGRAMMING.

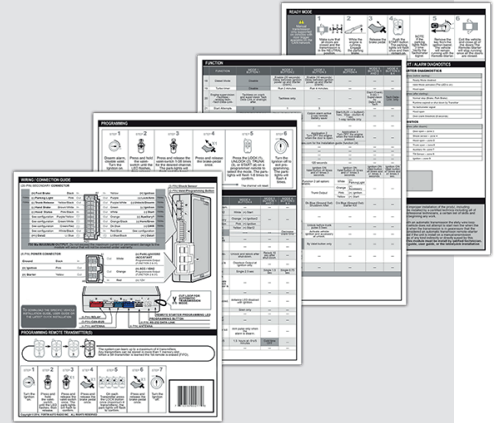

REMOTE STARTER FUNCTIONALITY |



All doors must be closed.

 


Remote start the vehicle.



Unlock the doors with either:

- The OEM remote
- The remote-starter remote
- Or the proximity remote



Enter the vehicle with the Intelligent Key.




The vehicle can now be put in to gear and driven.




If the vehicle is not unlocked with one of these conditions the remote-starter will shut down as soon as any door is opened.

REGULAR INSTALLATION AND THAR-GM6

ADDENDUM - SUGGESTED WIRING CONFIGURATION

VEHICLE	YEARS	Vehicle functions supported in this diagram (functional if equipped)														
		Immobilizer bypass	Lock	Unlock	Arm	Disarm	Parking Light	Trunk (open)	RAP Disable	Tachometer	Door Status	Trunk Status	Hand-Brake Status	Foot-Brake Status	OEM Remote Monitoring	R.S. OEM remote Stand Alone compatible
																
BUICK																
LaCrosse	Push-To-Start	2014	•	•	•	•	•	•	•	•	•	•	•	•	•	•





BYPASS FIRMWARE VERSION

70.[41]

GM MINIMUM

To add the firmware version and the options, use the **FLASH LINK UPDATER** or **FLASH LINK MOBILE** tool, sold separately.

		UNIT OPTION	DESCRIPTION
	Program bypass option IF THE VEHICLE IS NOT EQUIPPED WITH FUNCTIONAL HOOD PIN:	A11	OFF
			Hood trigger (Output Status).

		UNIT OPTION	DESCRIPTION
	Program bypass option:	C1	OEM Remote status (Lock/Unlock) monitoring
		D6	Push-to-Start



ATTENTION!



DATE: XX-XX

E5

OFF

ON

By default
DEACTIVATED

MANUFACTURED MODULES
BETWEEN: 04/2018 TO 04/2019

Program remote starter option for R.S. OEM REMOTE STAND ALONE:	38	2	Enable Press 3x Lock to remote start with the OEM remote.
---	----	---	--

MANDATORY INSTALL

*** HOOD PIN**



HOOD STATUS: THE HOOD PIN SWITCH (INCLUDED) MUST BE INSTALLED IF THE VEHICLE CAN BE REMOTE STARTED WITH THE HOOD OPEN, SET FUNCTION A11 TO OFF.

A11

OFF

SECURITY STICKER



Included

Notice: the installation of safety elements are mandatory. The hood pin and the sticker are essential security elements and must be installed.

THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.

DESCRIPTION

Parts required (Not included) PAGE








WIRE TO WIRE DIAGRAM

	1X 1k Ohm Resistorr	Page 3
--	---------------------	--------


THARNESS DIAGRAM

THARNESS THAR-GM6	1x THAR-GM6	Page 4
-------------------	-------------	--------


BCM

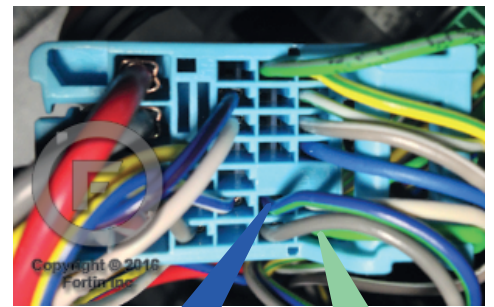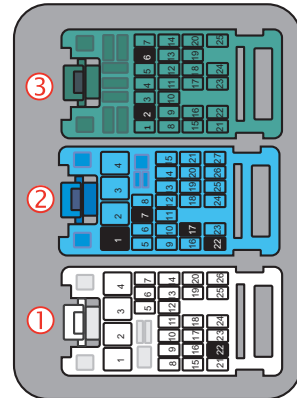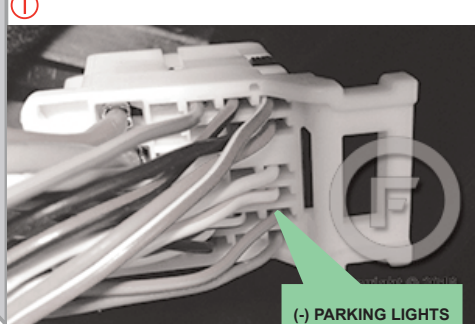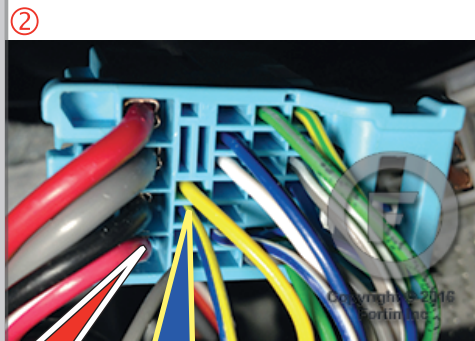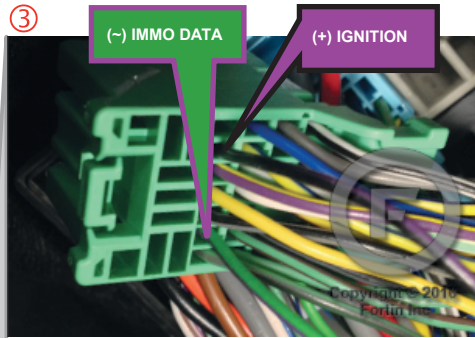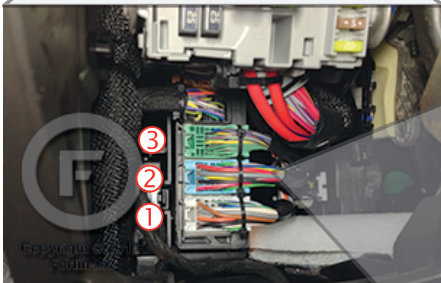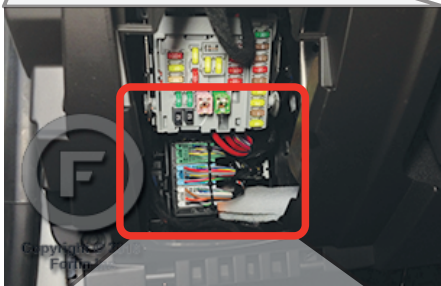

AUTOMATIC TRANSMISSION WIRING CONNECTION

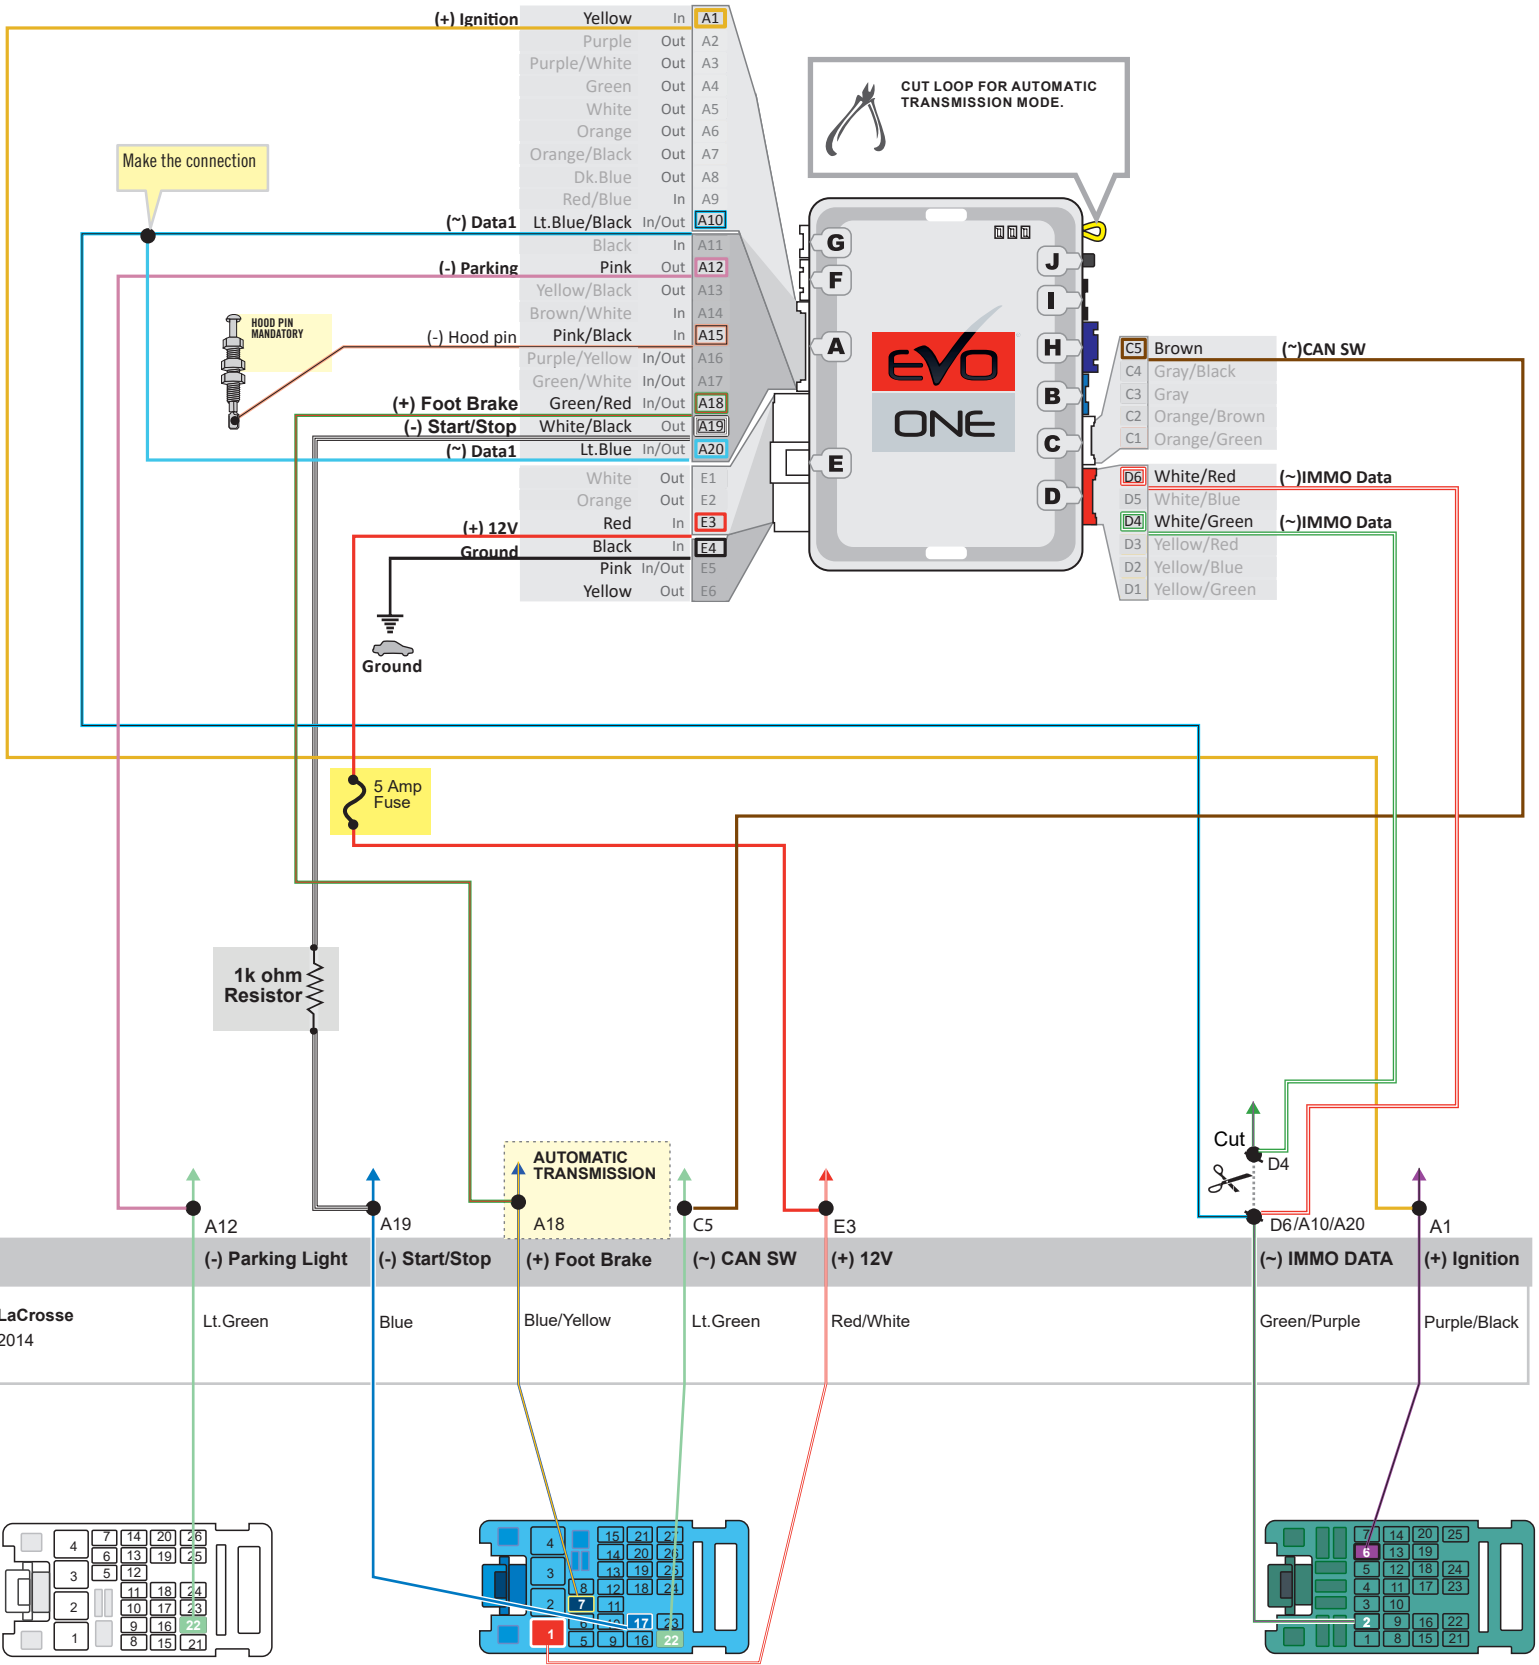





① Back view, 26-Pin White connector, at BCM.

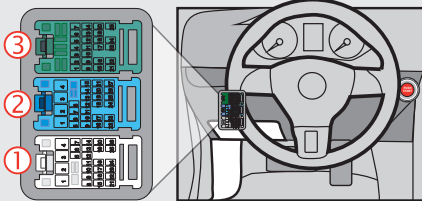


② Back view, 27-Pin Blue connector, at BCM.

③ Back view, 25-Pin Green connector, at BCM.

THAR-GM6 | WIRING CONNECTION

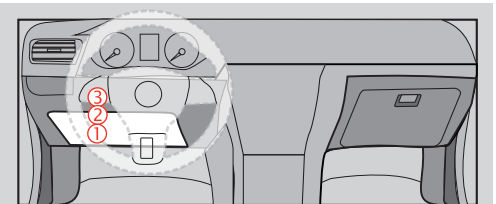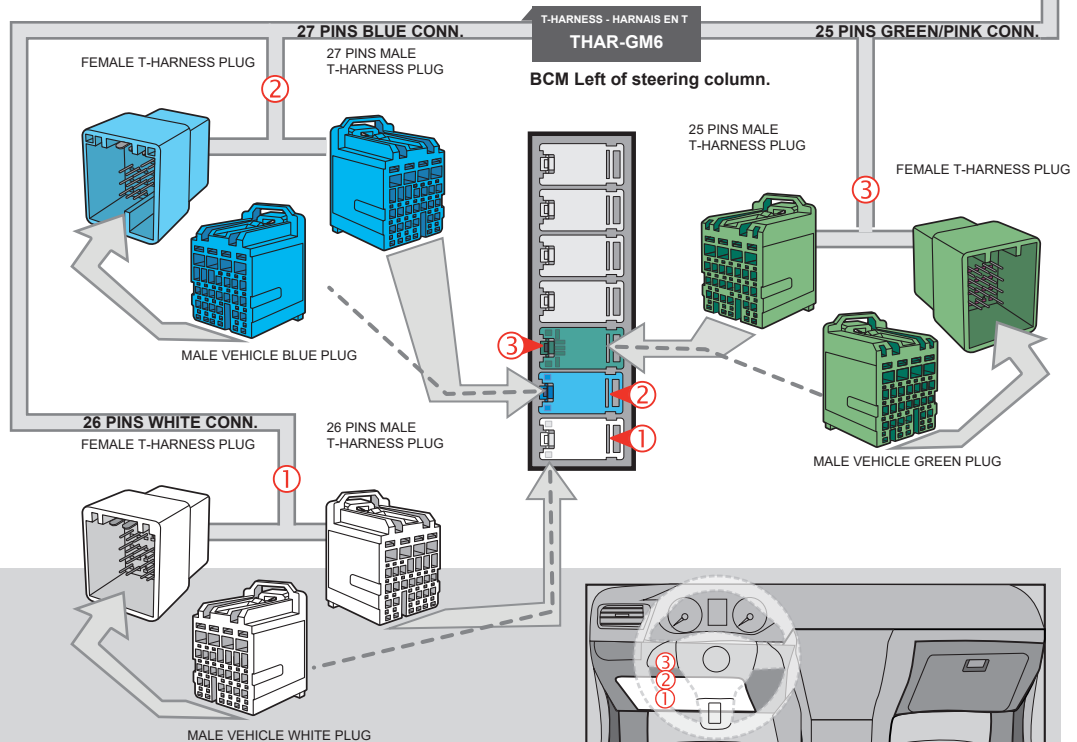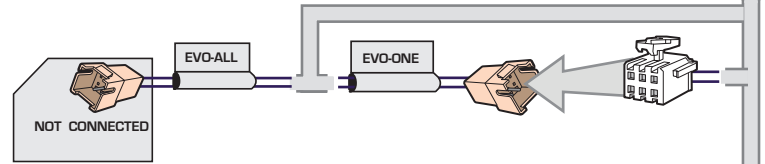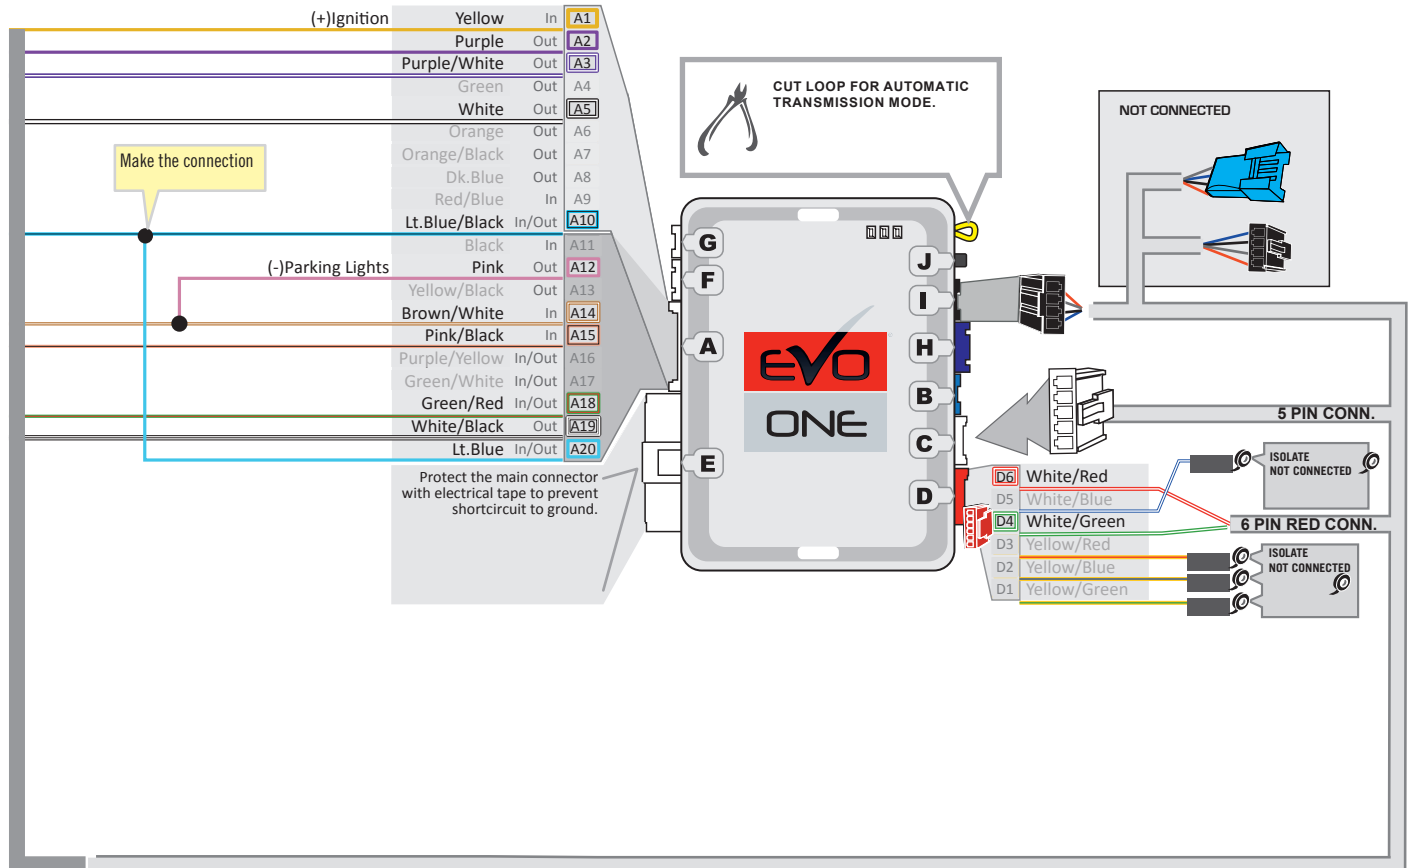


KEY BYPASS PROGRAMMING PROCEDURE 1/2

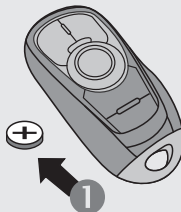


1 Remove the battery from the OEM remote.

2 Place the OEM remote into the transmitter pocket of the center console.

Refer to vehicle user guide for keyport location.

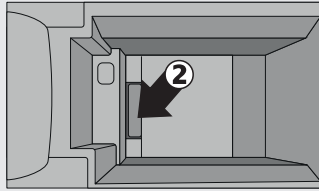


1

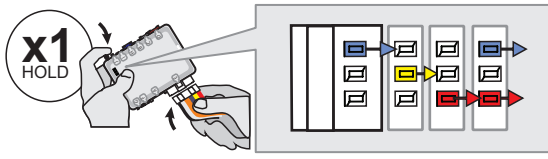

Press and hold the programming button:
Insert the 6-Pin Main connector.


↳The LEDs will alternate between BLUE, RED, YELLOW & BLUE/RED flashes.

2

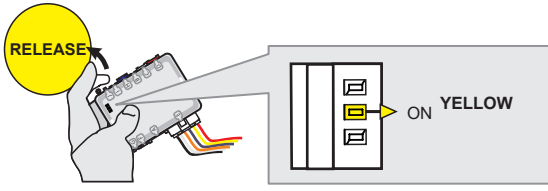


Release the programming button when the LED is YELLOW.

If the LED is not solid YELLOW disconnect the 6-Pin connector (Main-Harness) and go back to step 1.

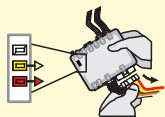


3

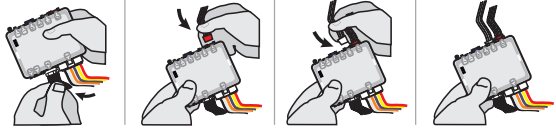

Insert the required remaining connectors.

4

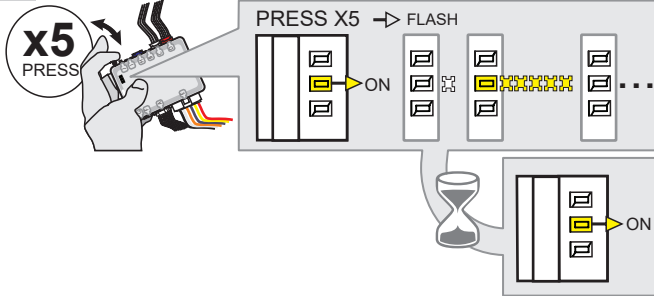


Press and release the programming button five (5x) times.

↳The YELLOW LED will flash 5 times each second.


↳WAIT for the YELLOW LED to turn ON solide.

5

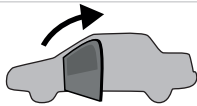

Open the driver door.

6

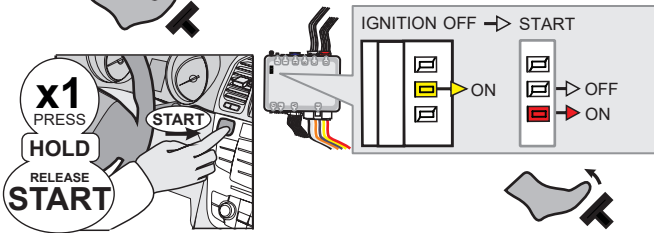

Press the foot-brake pedal.

Press the Push-to-Start button until the engine start.

Release the foot-brake pedal.

↳The RED LED will turn ON.
↳The YELLOW LED will turn OFF.


KEY BYPASS PROGRAMMING PROCEDURE 2/2

7




Press the Push-to-Start button until the engine turn OFF.

8

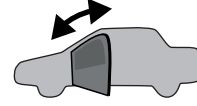

Close and open the driver door.

9

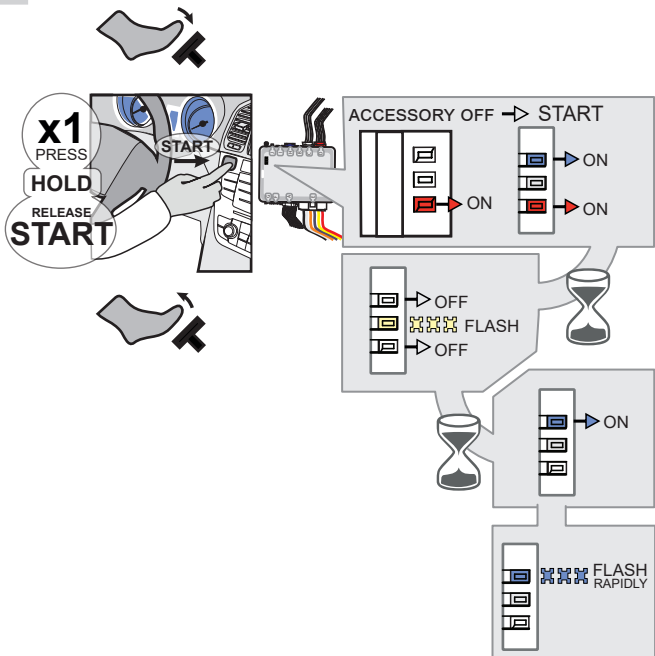


Press the foot-brake pedal.

Press the Push-to-Start button until the engine start.

Release the foot-brake pedal.

- ↳ The BLUE LED will turn ON.
- ↳ The BLUE LED will turn OFF. The RED LED will turn OFF.
- ↳ The YELLOW LED will flash rapidly
- ↳ The BLUE LED will turn ON.
- ↳ The BLUE LED will flash rapidly

10

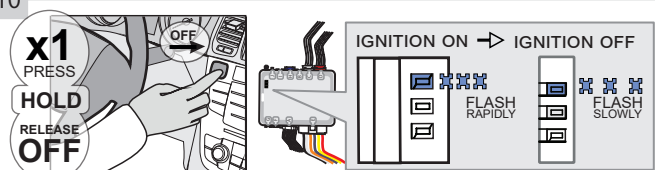

Press the Push-to-Start button until the engine turn OFF.


- ↳ The BLUE LED will flash slowly

11



Disconnect all connectors and after the 6-Pin (Main-Harness) or the 4-Pin Data-link connector.

12

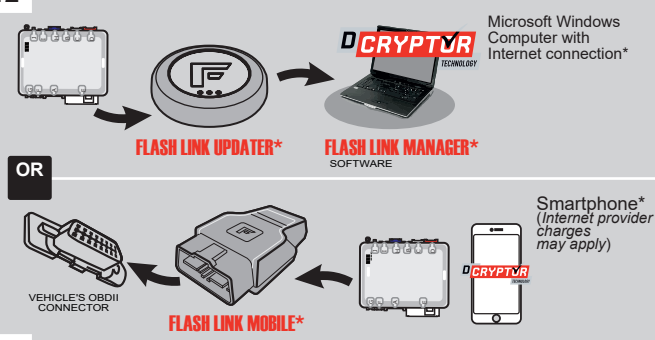

Microsoft Windows Computer with Internet connection*

FLASH LINK UPDATER* FLASH LINK MANAGER* SOFTWARE

OR

Smartphone* (Internet provider charges may apply)


VEHICLE'S OBDII CONNECTOR FLASH LINK MOBILE*

Use the tool: FLASH LINK UPDATER or FLASH LINK MOBILE to visit the DCryptor menu.

*Parts required (not included)

KEY BYPASS PROGRAMMING PROCEDURE 3/3

13

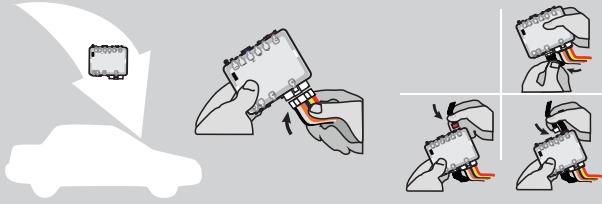

AFTER DCRYPTOR PROGRAMMING COMPLETED
Go back to the vehicle and **reconnect** the 6-Pin (Main-Harness) or the 4-pins (Data-Link) connector and after all the remaining connector.



The module is now programmed.




REMOTE STARTER / ALARM VERIFICATION PROCEDURE

Test the remote starter. Remote start the vehicle.

REMOTE STARTER PROGRAMMING PROCEDURE



REFER TO THE **QUICK INSTALL GUIDE** INCLUDED WITH THE MODULE FOR THE REMOTE STARTER PROGRAMMING.

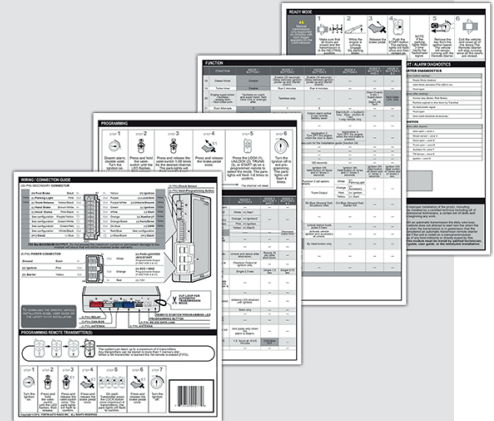

REMOTE STARTER FUNCTIONALITY |



All doors must be closed.

 


Remote start the vehicle.



Unlock the doors with either:

- The OEM remote
- The remote-starter remote
- Or the proximity remote



Enter the vehicle with the Intelligent Key.




The vehicle can now be put in to gear and driven.




If the vehicle is not unlocked with one of these conditions the remote-starter will shut down as soon as any door is opened.

REGULAR INSTALLATION AND THAR-GM6 INSTALLATION

ADDENDUM - SUGGESTED WIRING CONFIGURATION

VEHICLE	YEARS	Vehicle functions supported in this diagram (functional if equipped)														
		Immobilizer bypass	Lock	Unlock	Arm	Disarm	Parking Light	Trunk (open)	RAP Disable	Tachometer	Door Status	Trunk Status	Hand-Brake Status	Foot-Brake Status	OEM Remote Monitoring	R.S. OEM remote Stand Alone compatible
																
BUICK																
LaCrosse	Push-To-Start	2015-2016	•	•	•	•	•	•	•	•	•	•	•	•	•	•





BYPASS FIRMWARE VERSION

70.[41]

GM MINIMUM

To add the firmware version and the options, use the **FLASH LINK UPDATER** or **FLASH LINK MOBILE** tool, sold separately.


	Program bypass option IF THE VEHICLE IS NOT EQUIPPED WITH FUNCTIONAL HOOD PIN:	UNIT OPTION	DESCRIPTION
		A11	<input type="checkbox"/> OFF
			Hood trigger (Output Status).

	Program bypass option:	UNIT OPTION	DESCRIPTION
		C1	OEM Remote status (Lock/Unlock) monitoring
		D6	Push-to-Start

	ATTENTION!	UNIT OPTION	DESCRIPTION
		E5	<input type="checkbox"/> OFF
			<input type="checkbox"/> ON
			By default DEACTIVATED
			MANUFACTURED MODULES BETWEEN: 04/2018 TO 04/2019

Program remote starter option for R.S. OEM REMOTE STAND ALONE:	UNIT OPTION	DESCRIPTION
	38	2
		Enable Press 3x Lock to remote start with the OEM remote.


MANDATORY INSTALL

*** HOOD PIN**  **HOOD STATUS:** THE HOOD PIN SWITCH (INCLUDED) MUST BE INSTALLED IF THE VEHICLE CAN BE REMOTE STARTED WITH THE HOOD OPEN, SET FUNCTION A11 TO OFF.

A11

OFF

SECURITY STICKER

 Included

Notice: the installation of safety elements are mandatory. The hood pin and the sticker are essential security elements and must be installed.

THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.

DESCRIPTION

Parts required (Not included) PAGE






WIRE TO WIRE DIAGRAM

1X 1k Ohm Resistorr	Page 3
---------------------	--------



THARNESS DIAGRAM

THARNESS THAR-GM6	1x THAR-GM6	Page 4
-------------------	-------------	--------


BCM

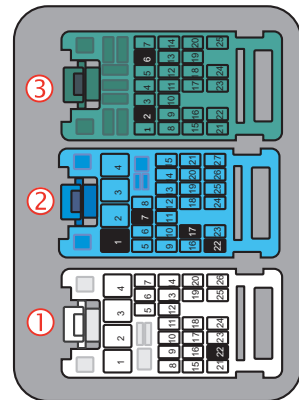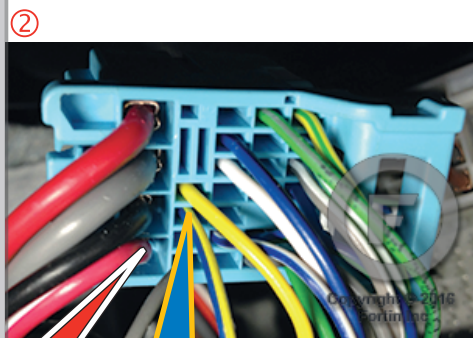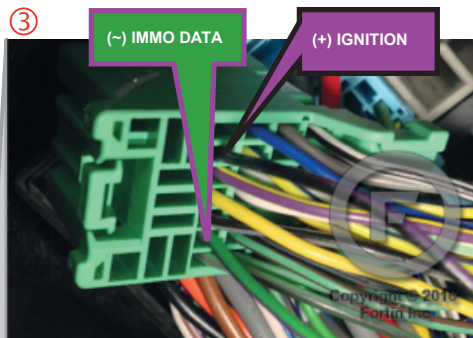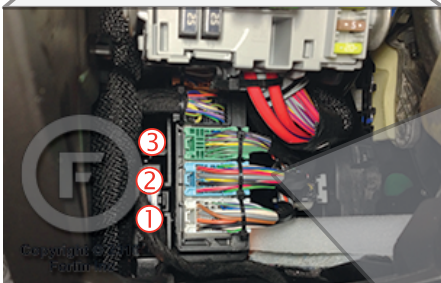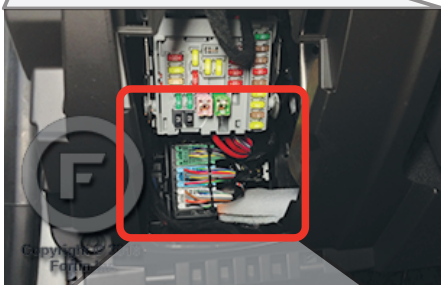


AUTOMATIC TRANSMISSION WIRING CONNECTION

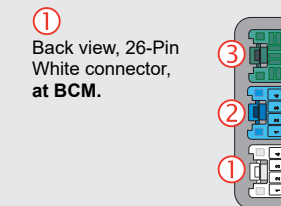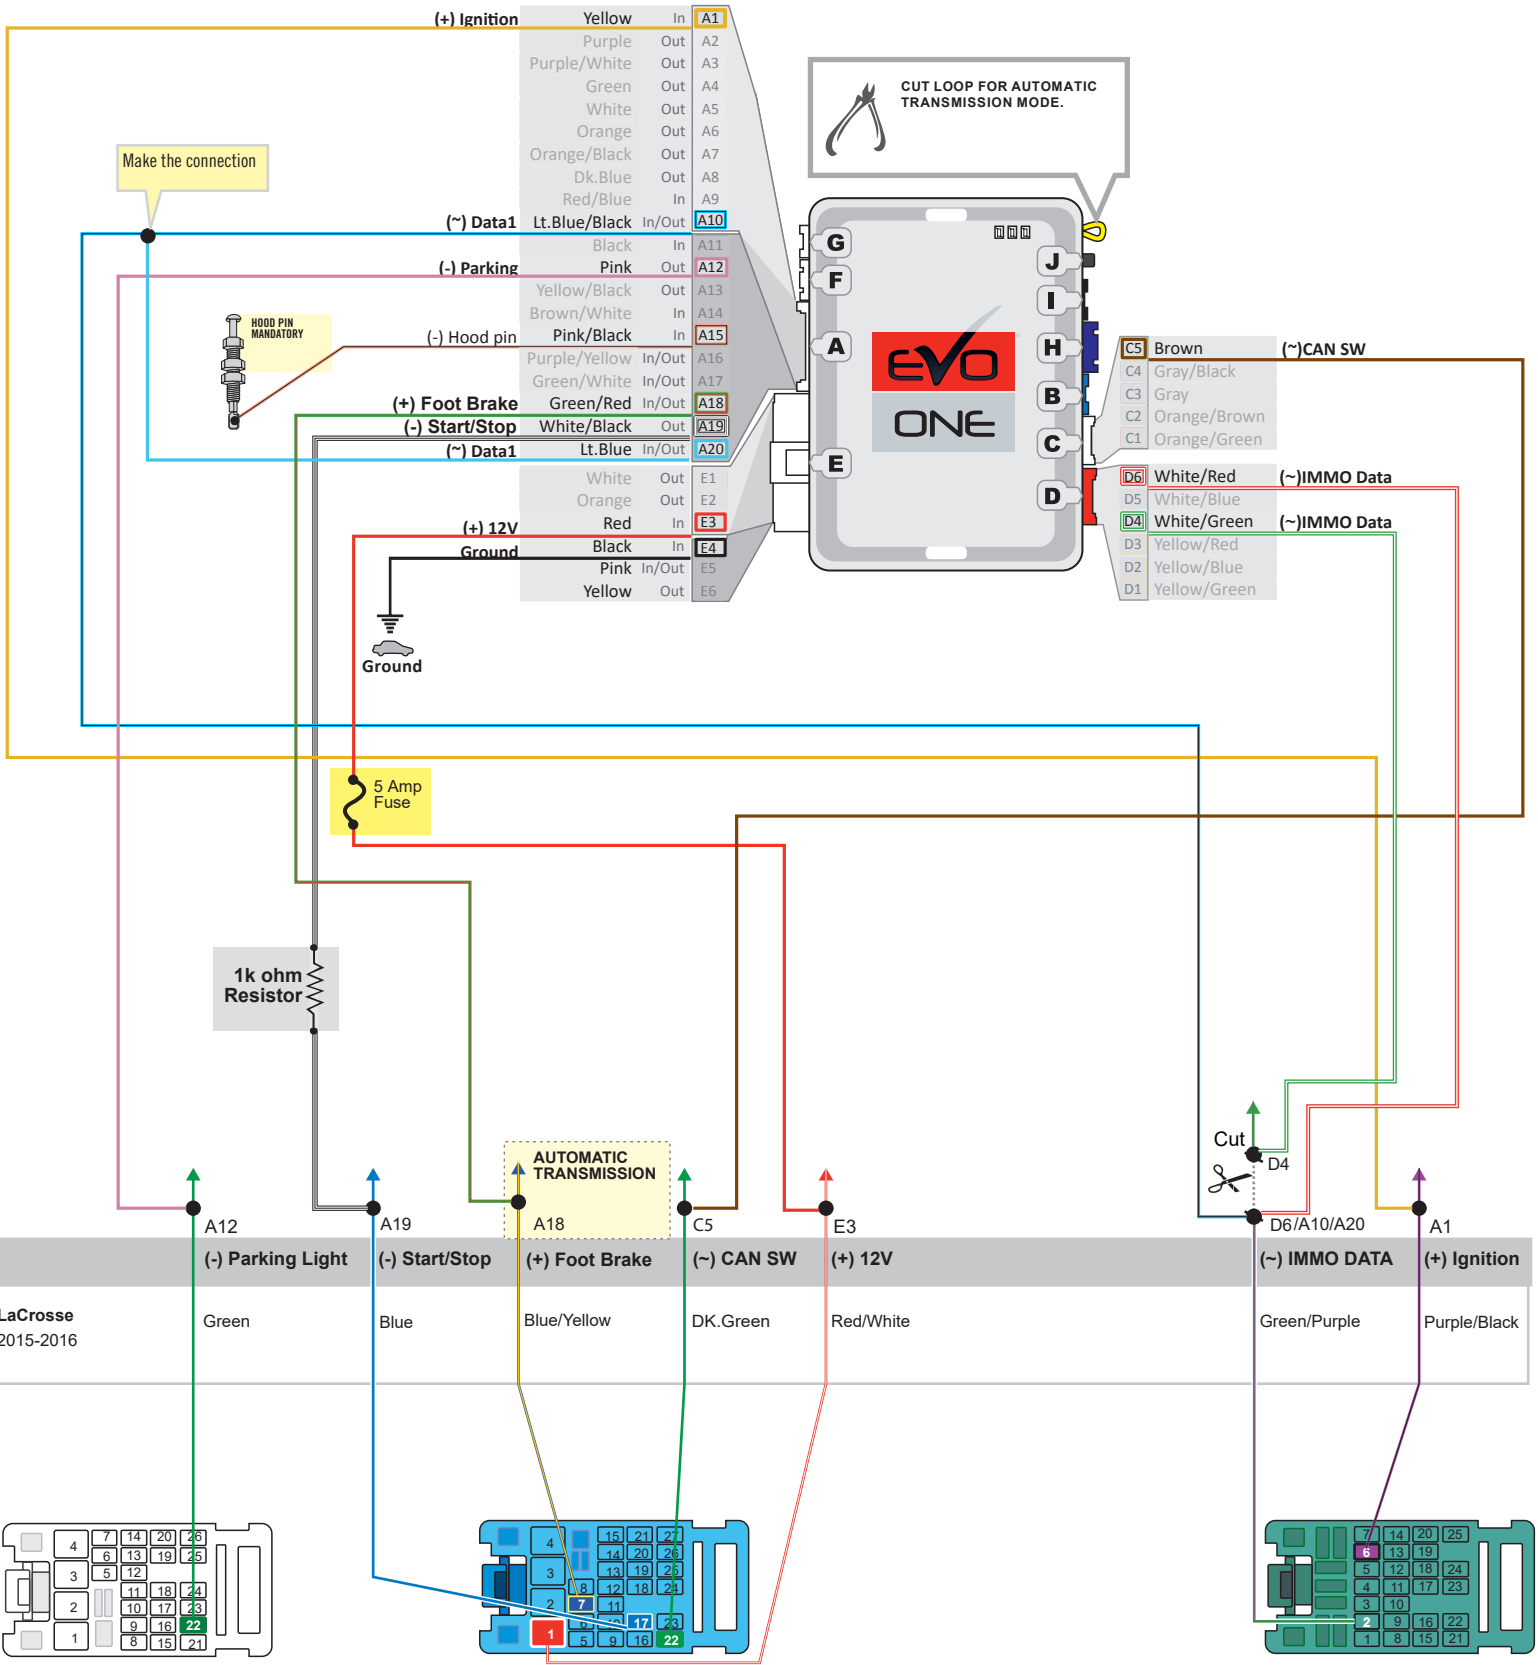

① Back view, 26-Pin White connector, at BCM.




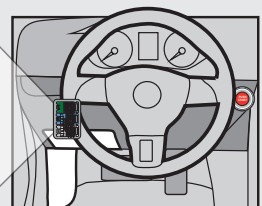


② Back view, 27-Pin Blue connector, at BCM.

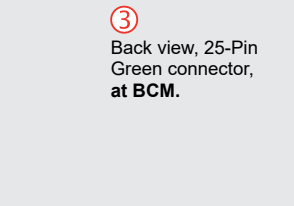


③ Back view, 25-Pin Green connector, at BCM.

THAR-GM6 | WIRING CONNECTION

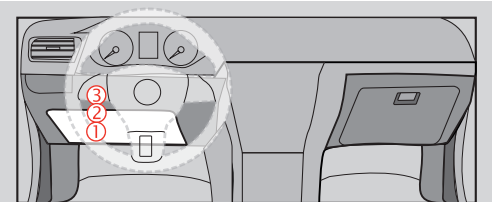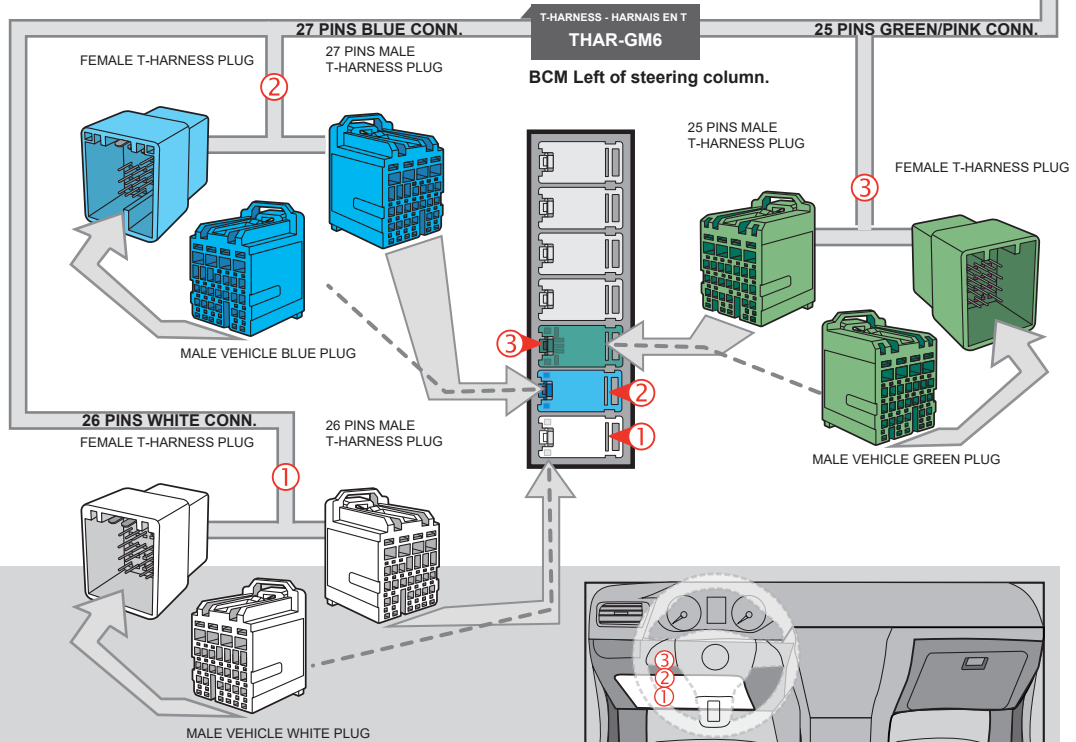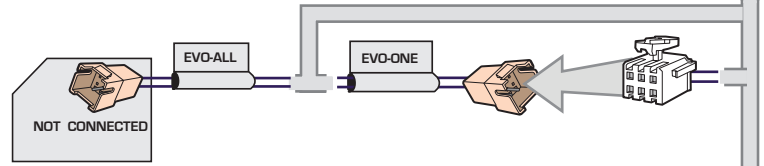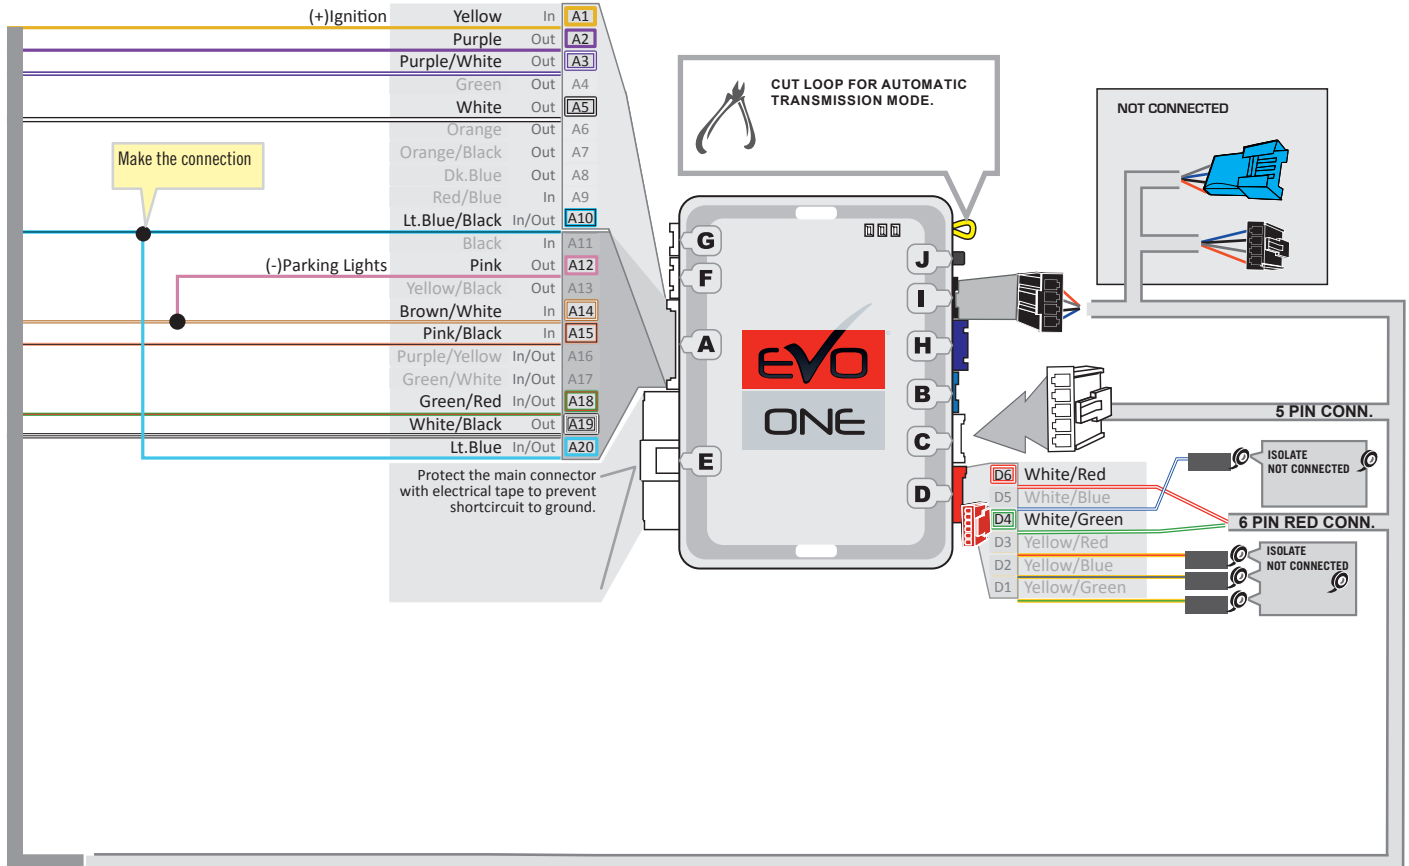


KEY BYPASS PROGRAMMING PROCEDURE 1/2

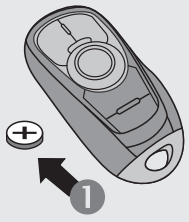


1 Remove the battery from the OEM remote.

2 Place the OEM remote into the transmitter pocket of the center console.

Refer to vehicle user guide for keyport location.

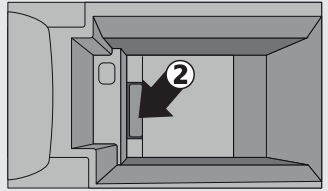


1

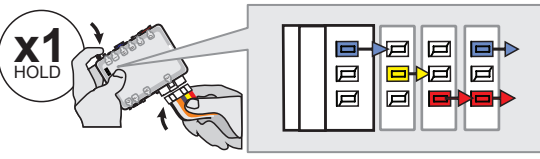

Press and hold the programming button:
Insert the 6-Pin Main connector.


↳The LEDs will alternate between BLUE, RED, YELLOW & BLUE/RED flashes.

2

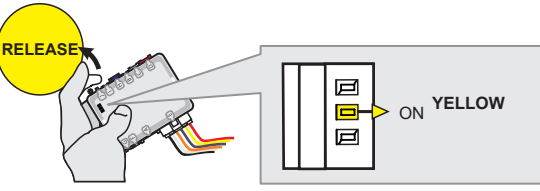


Release the programming button when the LED is YELLOW.

If the LED is not solid YELLOW disconnect the 6-Pin connector (Main-Harness) and go back to step 1.

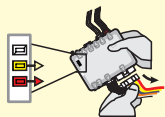


3

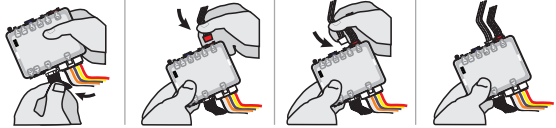

Insert the required remaining connectors.

4

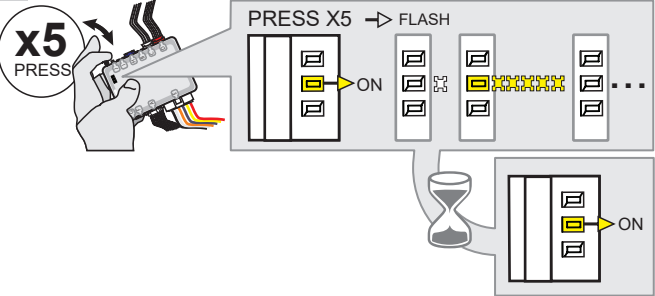


Press and release the programming button five (5x) times.

↳The YELLOW LED will flash 5 times each second.


↳WAIT for the YELLOW LED to turn ON solide.

5

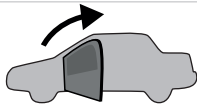

Open the driver door.

6

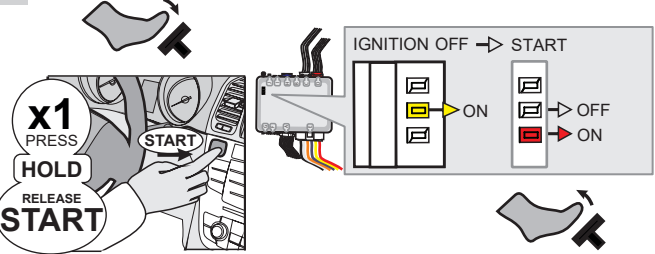

Press the foot-brake pedal.

Press the Push-to-Start button until the engine start.

Release the foot-brake pedal.

↳The RED LED will turn ON.
↳The YELLOW LED will turn OFF.


KEY BYPASS PROGRAMMING PROCEDURE 2/2 |

7




Press the Push-to-Start button until the engine turn OFF.

8

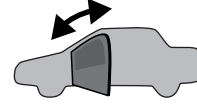

Close and open the driver door.

9

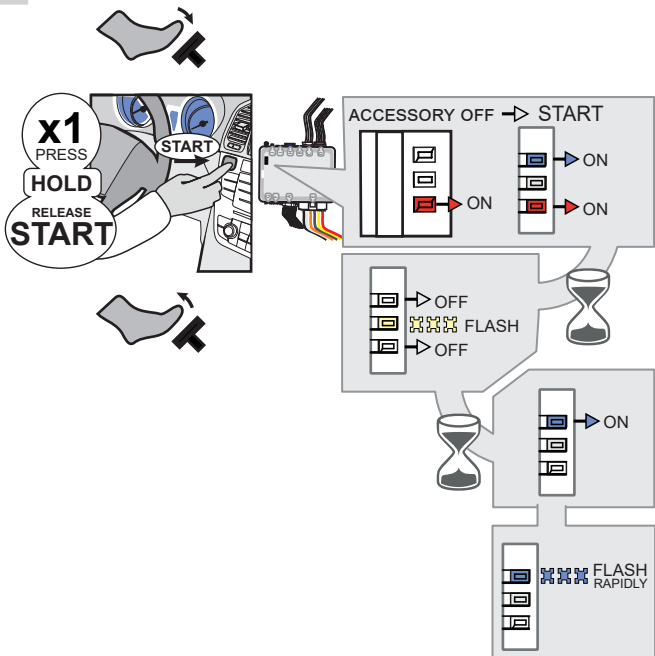


Press the foot-brake pedal.

Press the Push-to-Start button until the engine start.

Release the foot-brake pedal.

- ↳ The BLUE LED will turn ON.
- ↳ The BLUE LED will turn OFF. The RED LED will turn OFF.
- ↳ The YELLOW LED will flash rapidly
- ↳ The BLUE LED will turn ON.
- ↳ The BLUE LED will flash rapidly

10

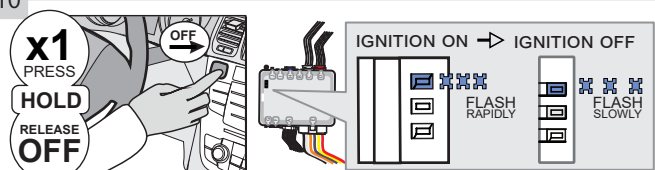

Press the Push-to-Start button until the engine turn OFF.


- ↳ The BLUE LED will flash slowly

11



Disconnect all connectors and after the 6-Pin (Main-Harness) or the 4-Pin Data-link connector.

12

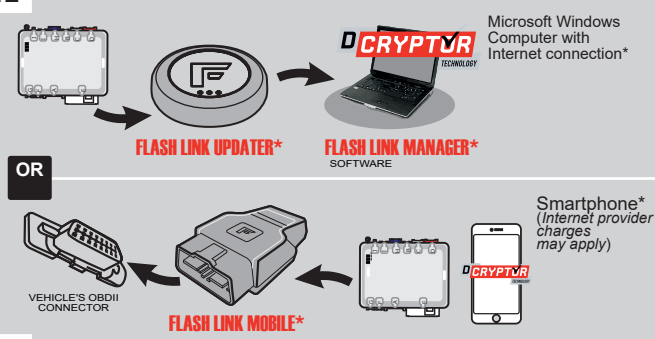

Microsoft Windows Computer with Internet connection*


OR

Smartphone* (Internet provider charges may apply)

Use the tool: FLASH LINK UPDATER or FLASH LINK MOBILE to visit the DCryptor menu.

*Parts required (not included)

13

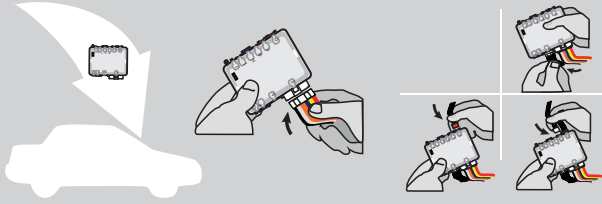

AFTER DCRYPTOR PROGRAMMING COMPLETED
Go back to the vehicle and **reconnect** the 6-Pin (Main-Harness) or the 4-pins (Data-Link) connector and after all the remaining connector.



The module is now programmed.




REMOTE STARTER / ALARM VERIFICATION PROCEDURE

Test the remote starter. Remote start the vehicle.

REMOTE STARTER PROGRAMMING PROCEDURE |



REFER TO THE **QUICK INSTALL GUIDE** INCLUDED WITH THE MODULE FOR THE REMOTE STARTER PROGRAMMING.

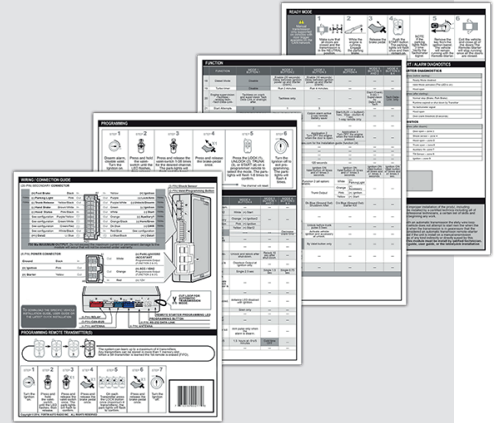

REMOTE STARTER FUNCTIONALITY | FONCTIONNALITÉS DU DÉMARREUR À DISTANCE



All doors must be closed.

 


Remote start the vehicle.



Unlock the doors with either:

- The OEM remote
- The remote-starter remote
- Or the proximity remote



Enter the vehicle with the Intelligent Key.



The vehicle can now be put in to gear and driven.



If the vehicle is not unlocked with one of these conditions the remote-starter will shut down as soon as any door is opened.

REGULAR INSTALLATION AND THAR-GM6

ADDENDUM - SUGGESTED WIRING CONFIGURATION

VEHICLE	YEARS	Vehicle functions supported in this diagram (functional if equipped)														
		Immobilizer bypass	Lock	Unlock	Arm	Disarm	Parking Light	Trunk (open)	RAP Disable	Tachometer	Door Status	Trunk Status	Hand-Brake Status	Foot-Brake Status	OEM Remote Monitoring	R.S. OEM remote Stand Alone compatible
CHEVROLET																
Malibu	Push-To-Start	2013-2015	•	•	•	•	•	•	•	•	•	•	•	•	•	•

BYPASS FIRMWARE VERSION

70.[41]

GM MINIMUM

To add the firmware version and the options, use the **FLASH LINK UPDATER** or **FLASH LINK MOBILE** tool, sold separately.

	Program bypass option IF THE VEHICLE IS NOT EQUIPPED WITH FUNCTIONAL HOOD PIN:	UNIT OPTION	DESCRIPTION
		A11	OFF
Hood trigger (Output Status).			

	Program bypass option:	UNIT OPTION	DESCRIPTION
		C1	OEM Remote status (Lock/Unlock) monitoring
		D6	Push-to-Start

ATTENTION!

DATE: XX-XX

E5

OFF

ON

By default DEACTIVATED

MANUFACTURED MODULES BETWEEN: 04/2018 TO 04/2019

<p>Program remote starter option for R.S. OEM REMOTE STAND ALONE:</p>	38	2	<p>Enable Press 3x Lock to remote start with the OEM remote.</p>
--	----	---	--

MANDATORY INSTALL

* HOOD PIN

HOOD STATUS: THE HOOD PIN SWITCH (INCLUDED) MUST BE INSTALLED IF THE VEHICLE CAN BE REMOTE STARTED WITH THE HOOD OPEN, SET FUNCTION A11 TO OFF.

A11

OFF

SECURITY STICKER

Included

Notice: the installation of safety elements are mandatory. The hood pin and the sticker are essential security elements and must be installed.

THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.

DESCRIPTION

Parts required (Not included) PAGE


WIRE TO WIRE DIAGRAM

	1X 1k Ohm Resistorr	Page 3
--	---------------------	--------





THARNES DIAGRAM

THARNES THAR-GM6	1x THAR-GM6	Page 4
------------------	-------------	--------





BCM

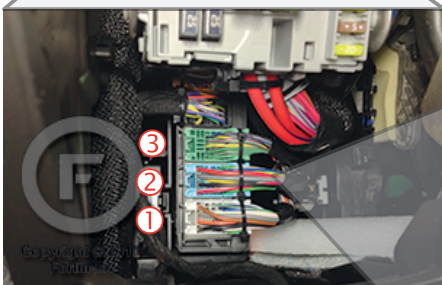





Malibu

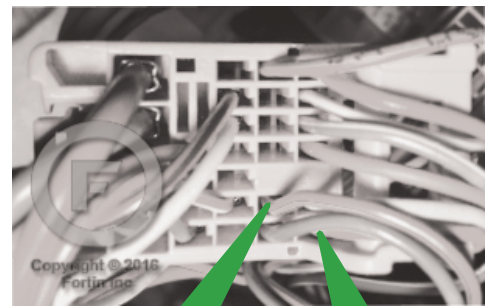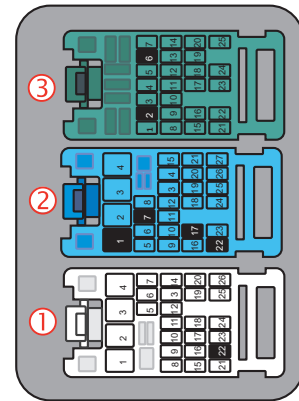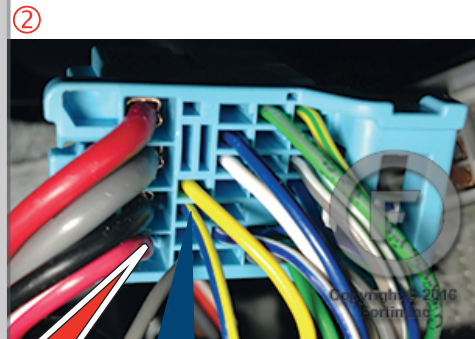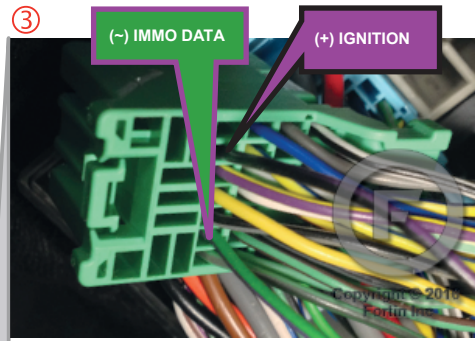

AUTOMATIC TRANSMISSION WIRING CONNECTION

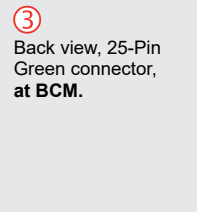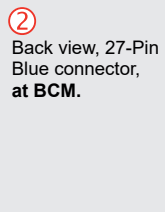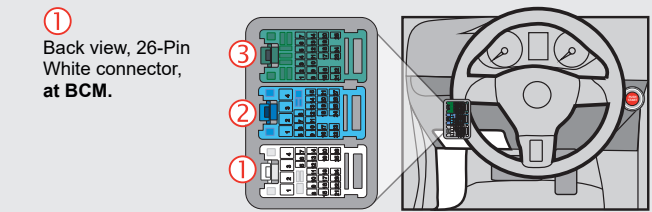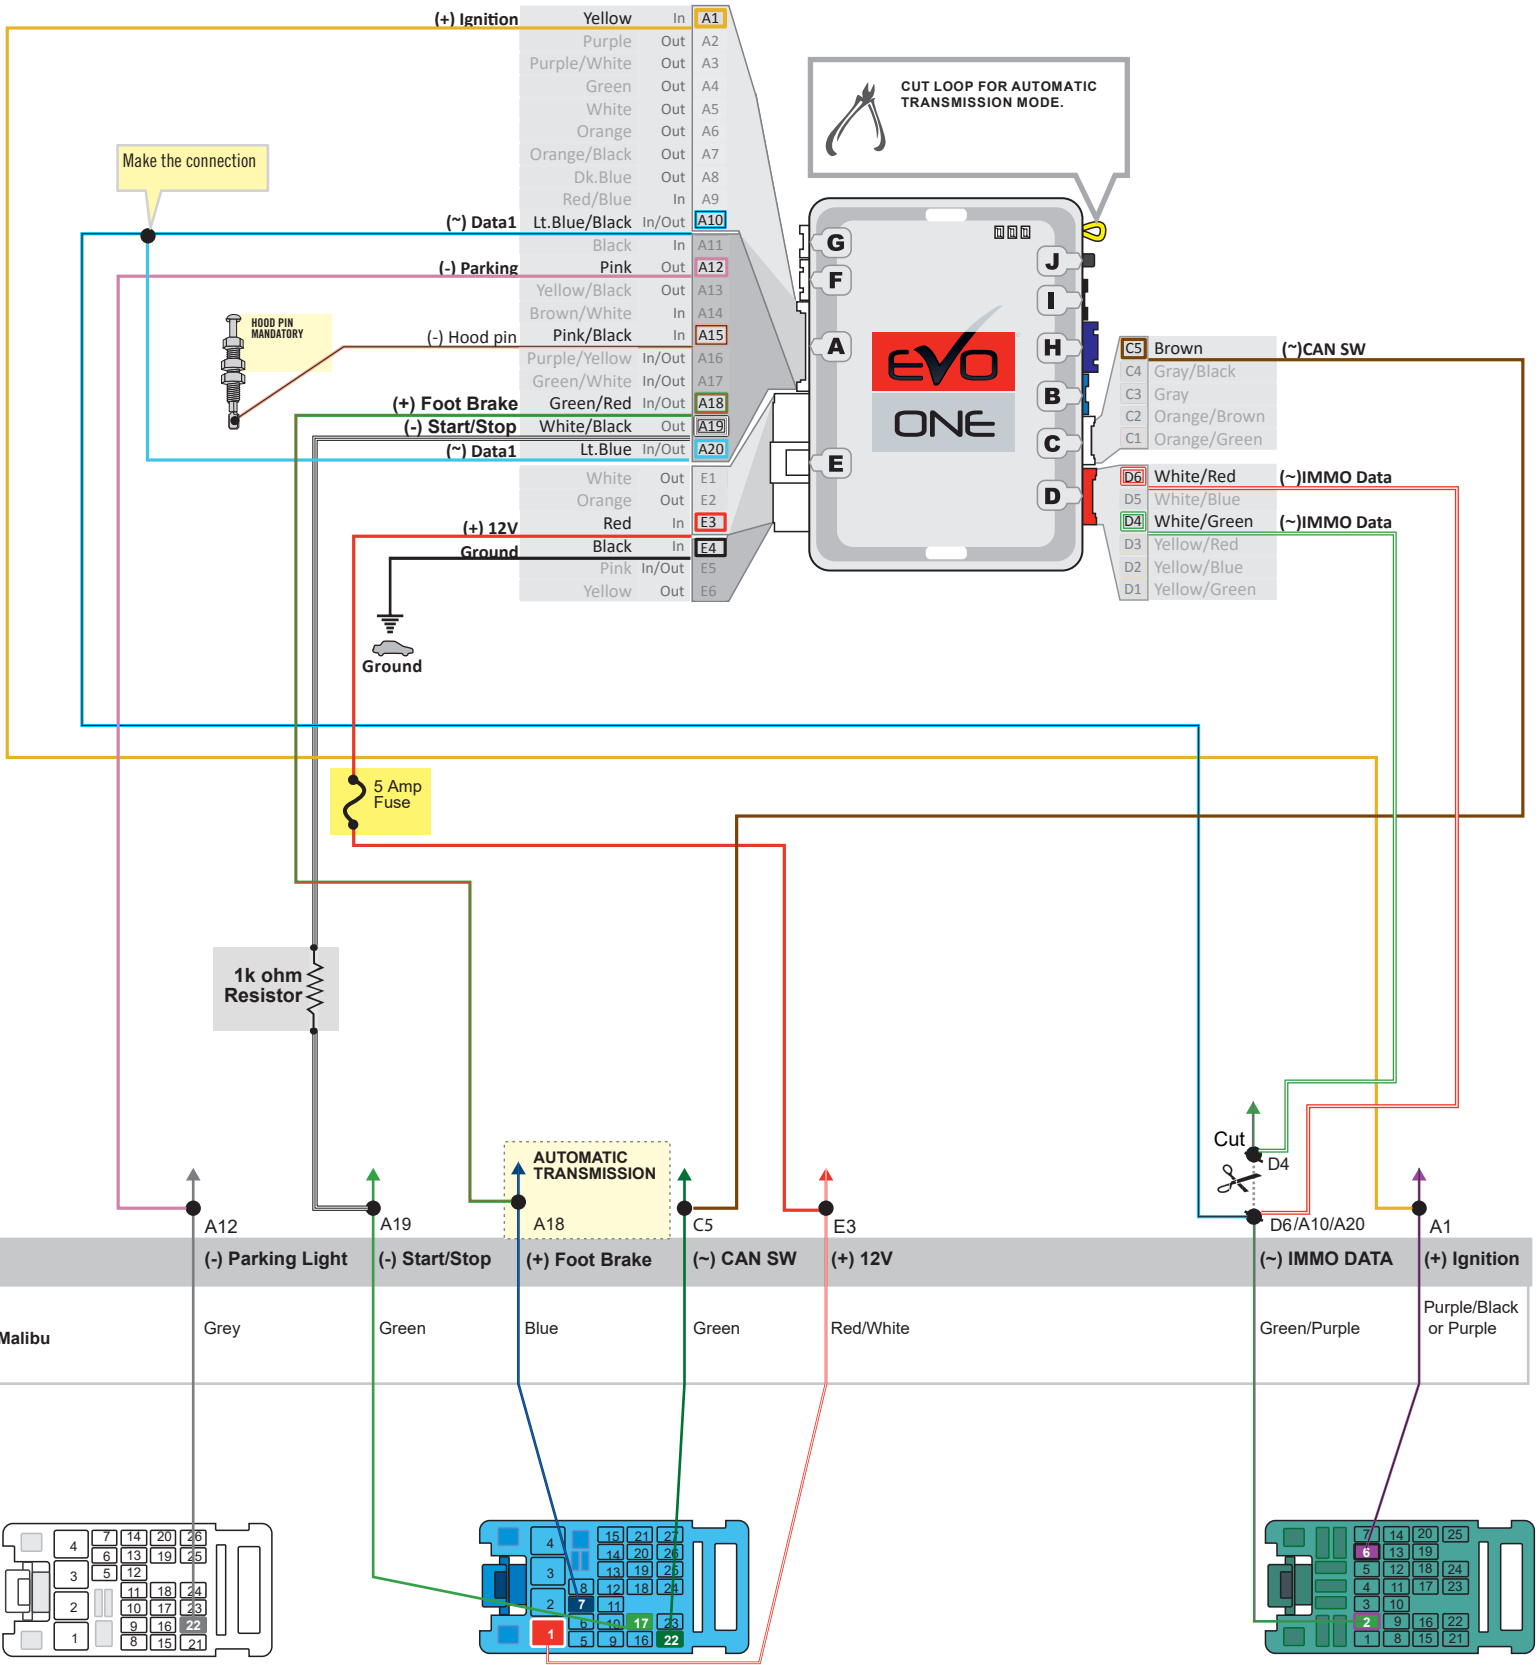

THAR-GM6 | WIRING CONNECTION

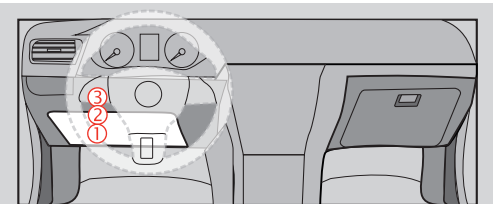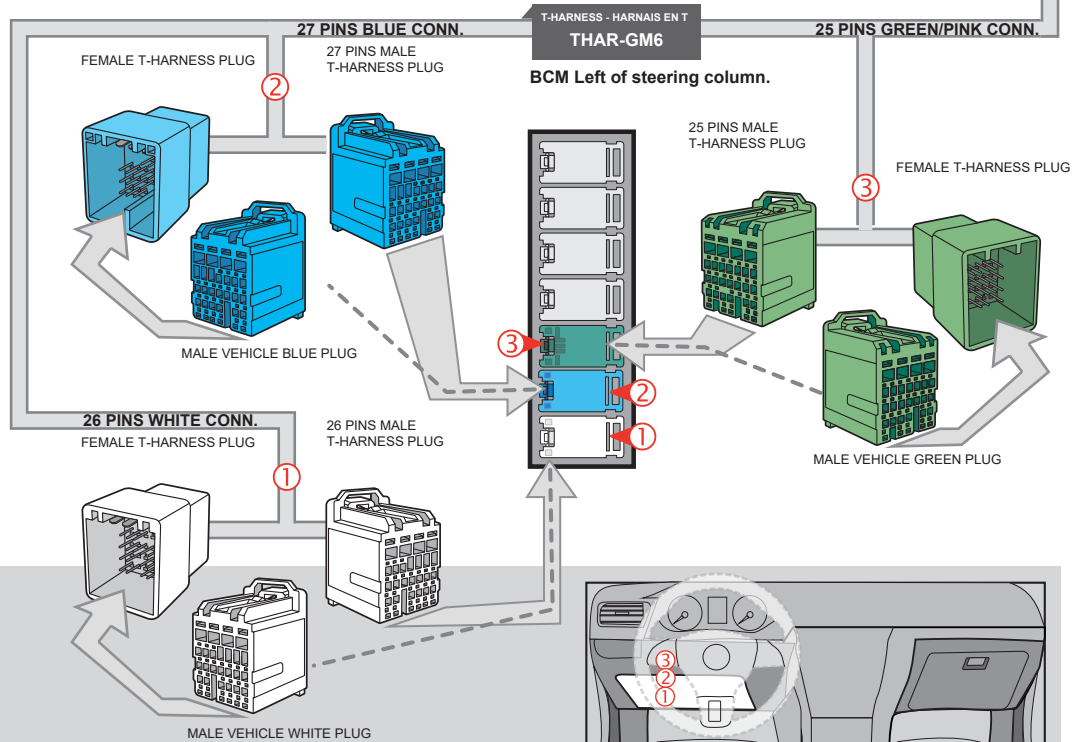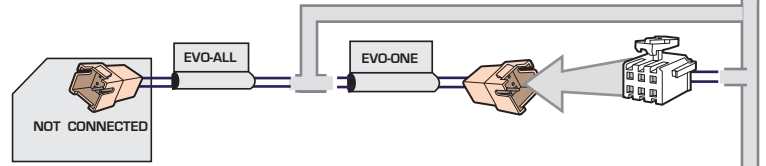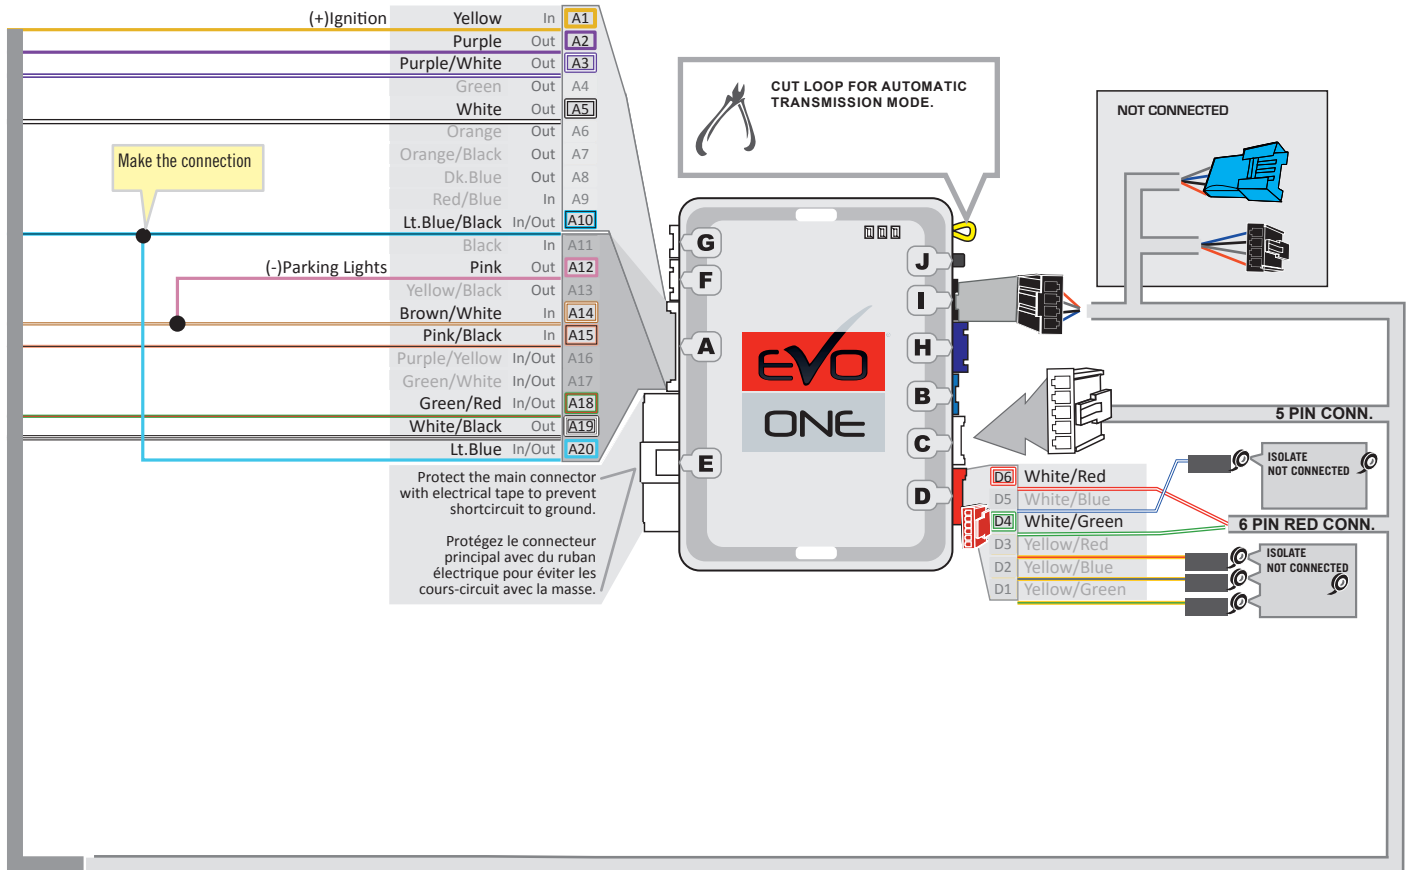


KEY BYPASS PROGRAMMING PROCEDURE 1/2


Chevrolet Malibu



- 1 Remove the battery from the OEM remote.
- 2 Place the OEM remote into the transmitter pocket of the center console.
Refer to vehicule user guide for keyport location.

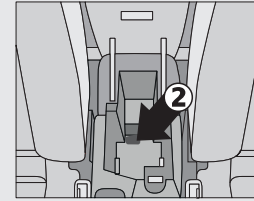


1

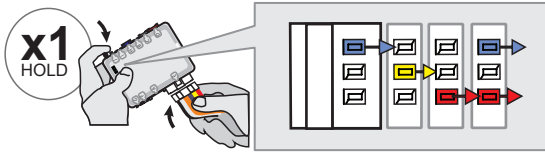

Press and hold the programming button:
Insert the 6-Pin Main connector.


↳The LEDs will alternate between BLUE, RED, YELLOW & BLUE/RED flashes.

2

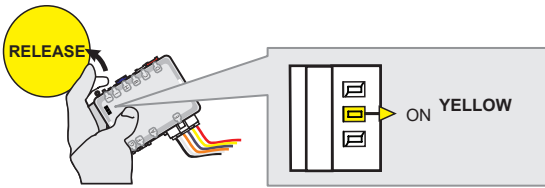


Release the programming button when the LED is YELLOW.

 If the LED is not solid YELLOW **disconnect** the 6-Pin connector (Main-Harness) and go back to step 1.




3

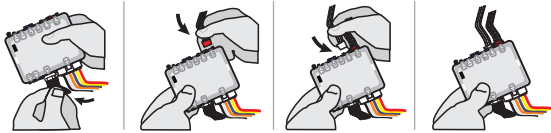

Insert the required remaining connectors.

4

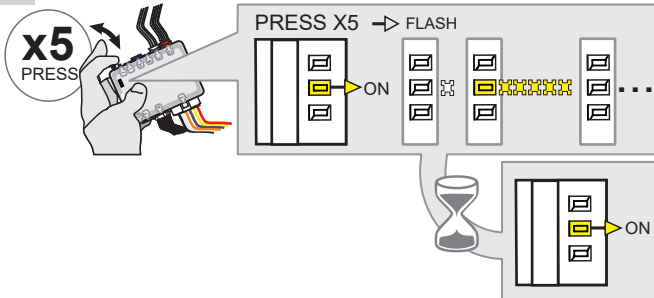


Press and release the programming button five (5x) times.

↳The YELLOW LED will flash 5 times each second.


↳WAIT for the YELLOW LED to turn ON solide.

 5



Open the driver door.

6

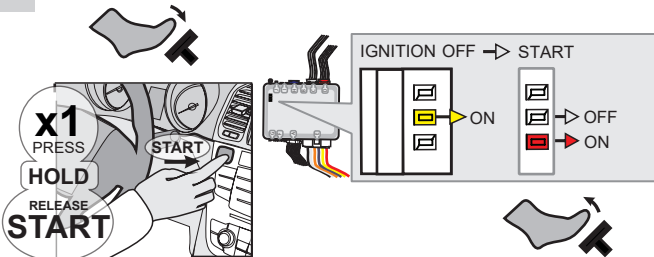

Press the foot-brake pedal.

Press the Push-to-Start button until the engine start.

Release the foot-brake pedal.

↳The RED LED will turn ON.
↳The YELLOW LED will turn OFF.


KEY BYPASS PROGRAMMING PROCEDURE 2/2

7





Press the Push-to-Start button until the engine turn OFF.

8

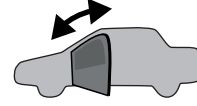

Close and open the driver door.

9

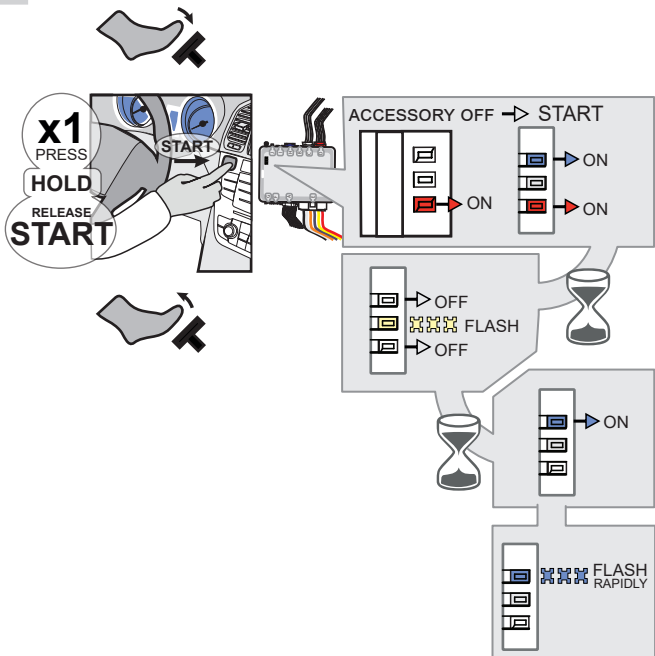
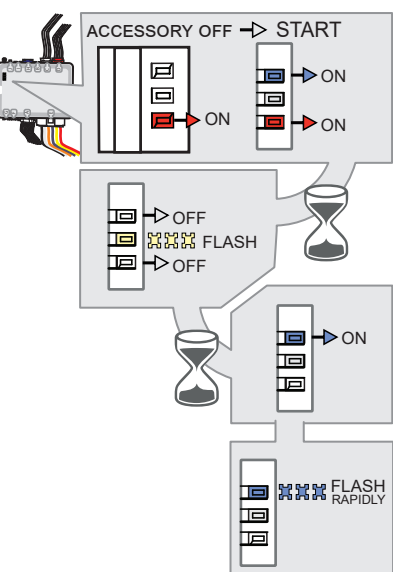
Press the foot-brake pedal.

Press the Push-to-Start button until the engine start.

Release the foot-brake pedal.

- ↳ The BLUE LED will turn ON.
- ↳ The BLUE LED will turn OFF. The RED LED will turn OFF.
- ↳ The YELLOW LED will flash rapidly
- ↳ The BLUE LED will turn ON.
- ↳ The BLUE LED will flash rapidly

10

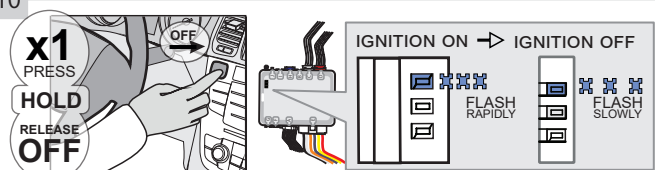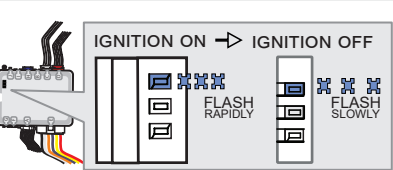Press the Push-to-Start button until the engine turn OFF.


- ↳ The BLUE LED will flash slowly

11



Disconnect all connectors and after the 6-Pin (Main-Harness) or the 4-Pin Data-link connector.

12

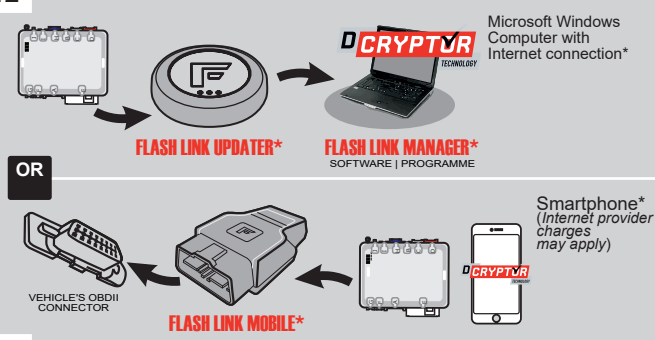

Microsoft Windows Computer with Internet connection*

FLASH LINK UPDATER*

FLASH LINK MANAGER* SOFTWARE | PROGRAMME

OR

Smartphone* (Internet provider charges may apply)


FLASH LINK MOBILE*

VEHICLE'S OBDII CONNECTOR

Use the tool: FLASH LINK UPDATER or FLASH LINK MOBILE to visit the DCryptor menu.

*Parts required (not included)

13

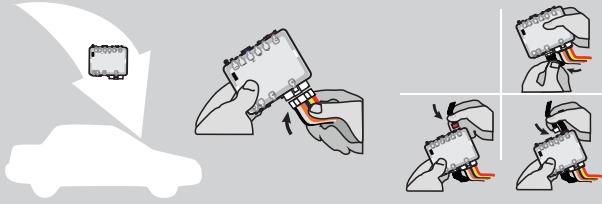

AFTER DCRYPTOR PROGRAMMING COMPLETED
 Go back to the vehicle and **reconnect** the 6-Pin (Main-Harness) or the 4-pins (Data-Link) connector and after all the remaining connector.



The module is now programmed.



REMOTE STARTER / ALARM VERIFICATION PROCEDURE


Test the remote starter. Remote start the vehicle.

REMOTE STARTER PROGRAMMING PROCEDURE |



REFER TO THE **QUICK INSTALL GUIDE** INCLUDED WITH THE MODULE FOR THE REMOTE STARTER PROGRAMMING.


OR

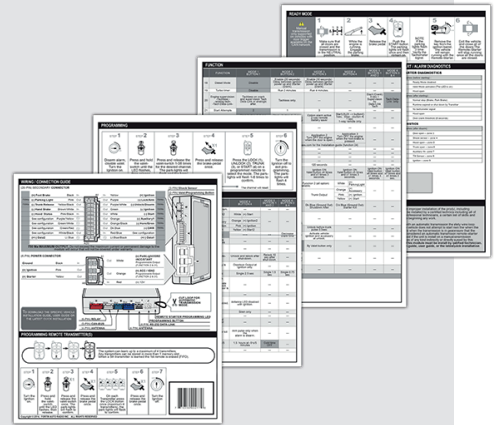

REMOTE STARTER FUNCTIONALITY |



 All doors must be closed.




Remote start the vehicle.



Unlock the doors with either:

 - The OEM remote
- The remote-starter remote
- Or the proximity remote



Enter the vehicle with the Intelligent Key.




The vehicle can now be put in to gear and driven.




If the vehicle is not unlocked with one of these conditions the remote-starter will shut down as soon as any door is opened.

REGULAR INSTALLATION AND THAR-GM6

ADDENDUM - SUGGESTED WIRING CONFIGURATION

VEHICLE		YEARS	Vehicle functions supported in this diagram (functional if equipped)														
			Immobilizer bypass	Lock	Unlock	Arm	Disarm	Parking Light	Trunk (open)	RAP Disable	Tachometer	Door Status	Trunk Status	Hand-Brake Status	Foot-Brake Status	OEM Remote Monitoring	R.S. OEM remote Stand Alone compatible
BUICK																	
Regal	Push-To-Start	2011-2017	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•





BYPASS FIRMWARE VERSION


70.[41]

GM MINIMUM


To add the firmware version and the options, use the **FLASH LINK UPDATER** or **FLASH LINK MOBILE** tool, sold separately.

	<p>Program bypass option IF THE VEHICLE IS NOT EQUIPPED WITH FUNCTIONAL HOOD PIN:</p>	UNIT OPTION	DESCRIPTION
		A11	OFF

	<p>Program bypass option:</p>	UNIT OPTION	DESCRIPTION
		C1	OEM Remote status (Lock/Unlock) monitoring
		D6	Push-to-Start



ATTENTION!

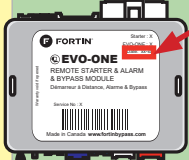

DATE: XX-XX

E5	OFF	By default DEACTIVATED
	ON	MANUFACTURED MODULES BETWEEN: 04/2018 TO 04/2019

<p>Program remote starter option for R.S. OEM REMOTE STAND ALONE:</p>	38	2	<p>Enable Press 3x Lock to remote start with the OEM remote.</p>
--	----	---	--

MANDATORY INSTALL

<p>* HOOD PIN</p> 	<p>HOOD STATUS: THE HOOD PIN SWITCH (INCLUDED) MUST BE INSTALLED IF THE VEHICLE CAN BE REMOTE STARTED WITH THE HOOD OPEN, SET FUNCTION A11 TO OFF.</p>	<p>A11</p>	<p>OFF</p>	<p>SECURITY STICKER</p>  <p>Included</p>
---	---	-------------------	-------------------	--

Notice: the installation of safety elements are mandatory. The hood pin and the sticker are essential security elements and must be installed.

THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.

DESCRIPTION | DESCRIPTION

Parts required (Not included) PAGE



WIRE TO WIRE DIAGRAM

AUTOMATIC TRANSMISSION	1X 1k Ohm Resistor	Page 3
MANUAL TRANSMISSION	1X 1k Ohm Resistor 1X 180 Ohm Resistor 1X Amp. Diode	Page 4

THARNESS DIAGRAM






THARNESS THAR-GM6	AUTOMATIC TRANSMISSION	1x THAR-GM6	Page 5
THARNESS THAR-GM6	MANUAL TRANSMISSION	1x THAR-GM6 1X 180 Ohm Resistor 1X Amp. Diode	Page 6

BCM

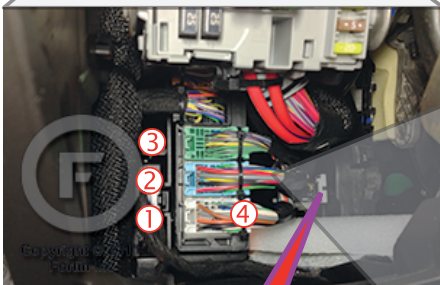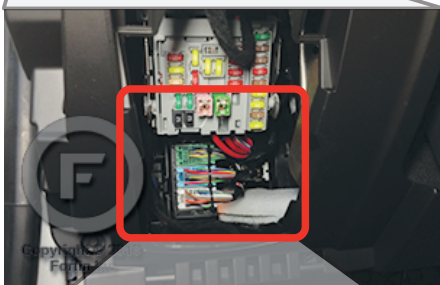


Regal


(-) CLUTCH BYPASS
MANUAL
TRANSMISSION

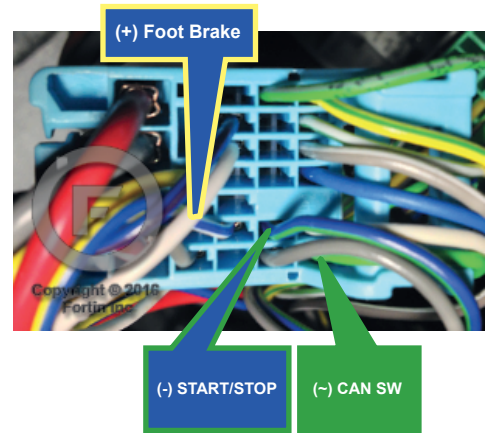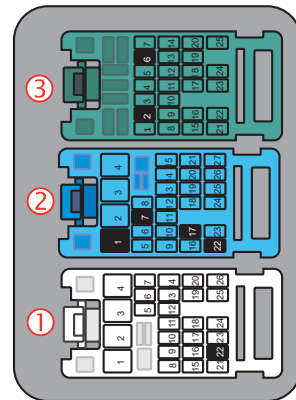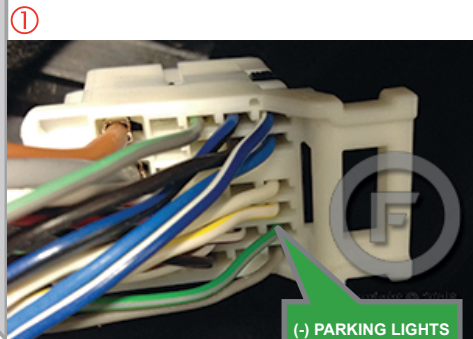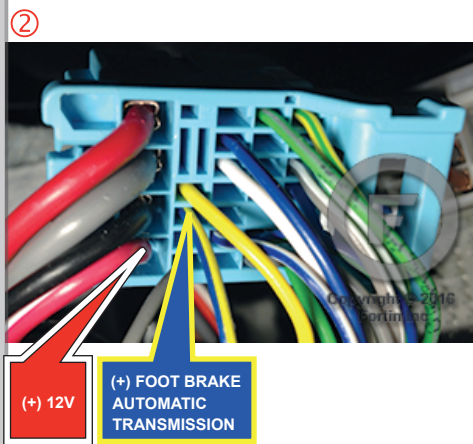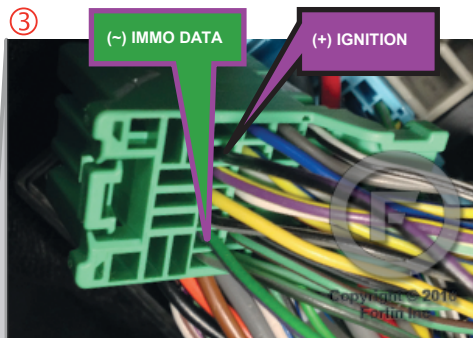

AUTOMATIC TRANSMISSION WIRING CONNECTION

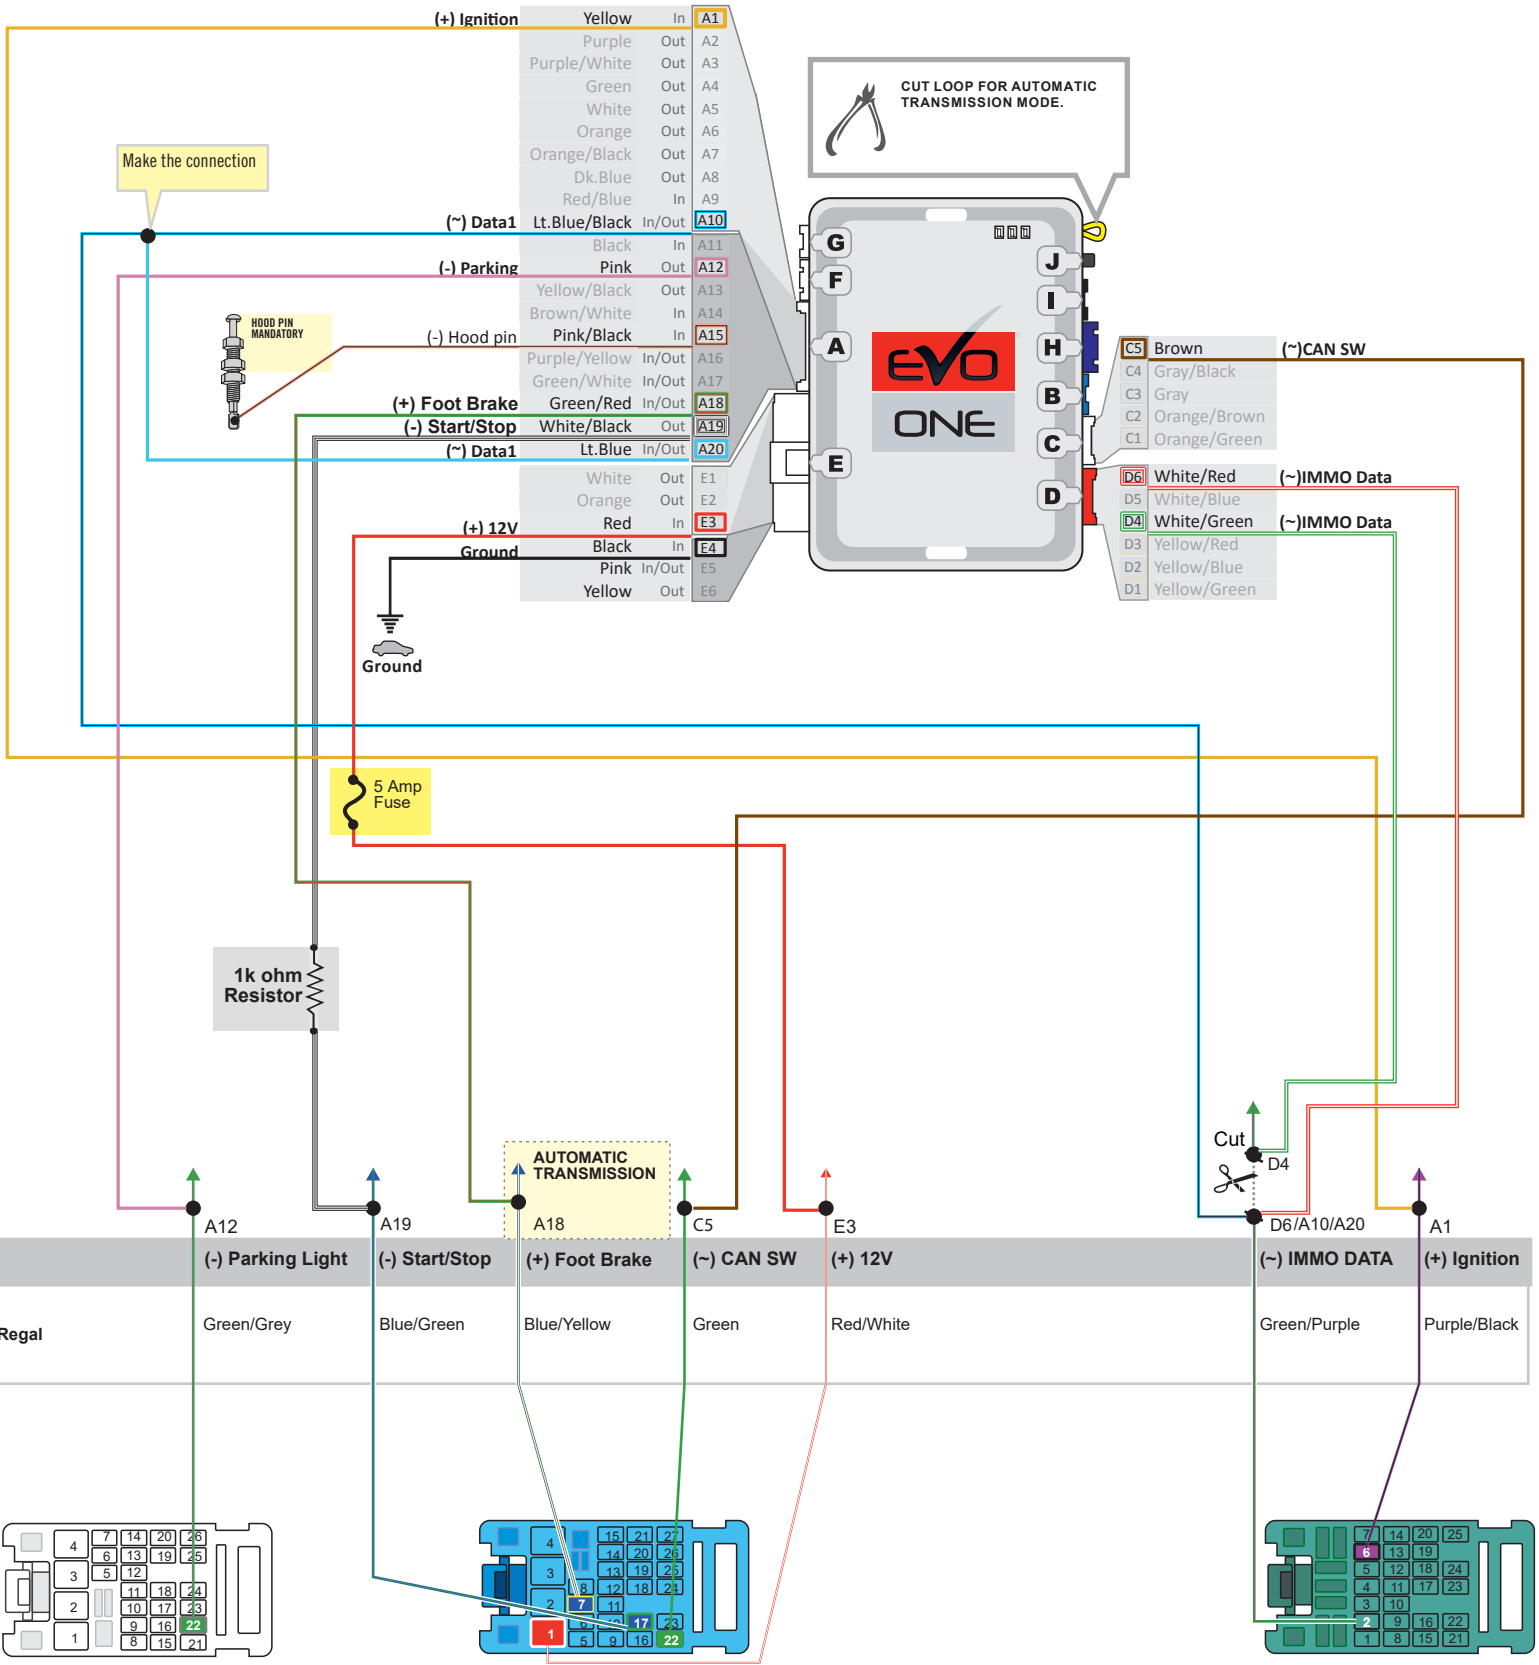


① Back view, 26-Pin White connector, at BCM.

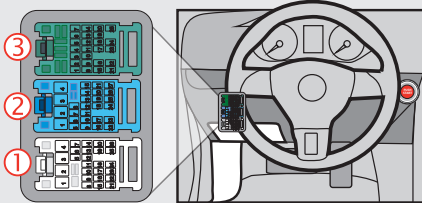


② Back view, 27-Pin Blue connector, at BCM.

③ Back view, 25-Pin Green connector, at BCM.


MANUAL TRANSMISSION WIRING CONNECTION

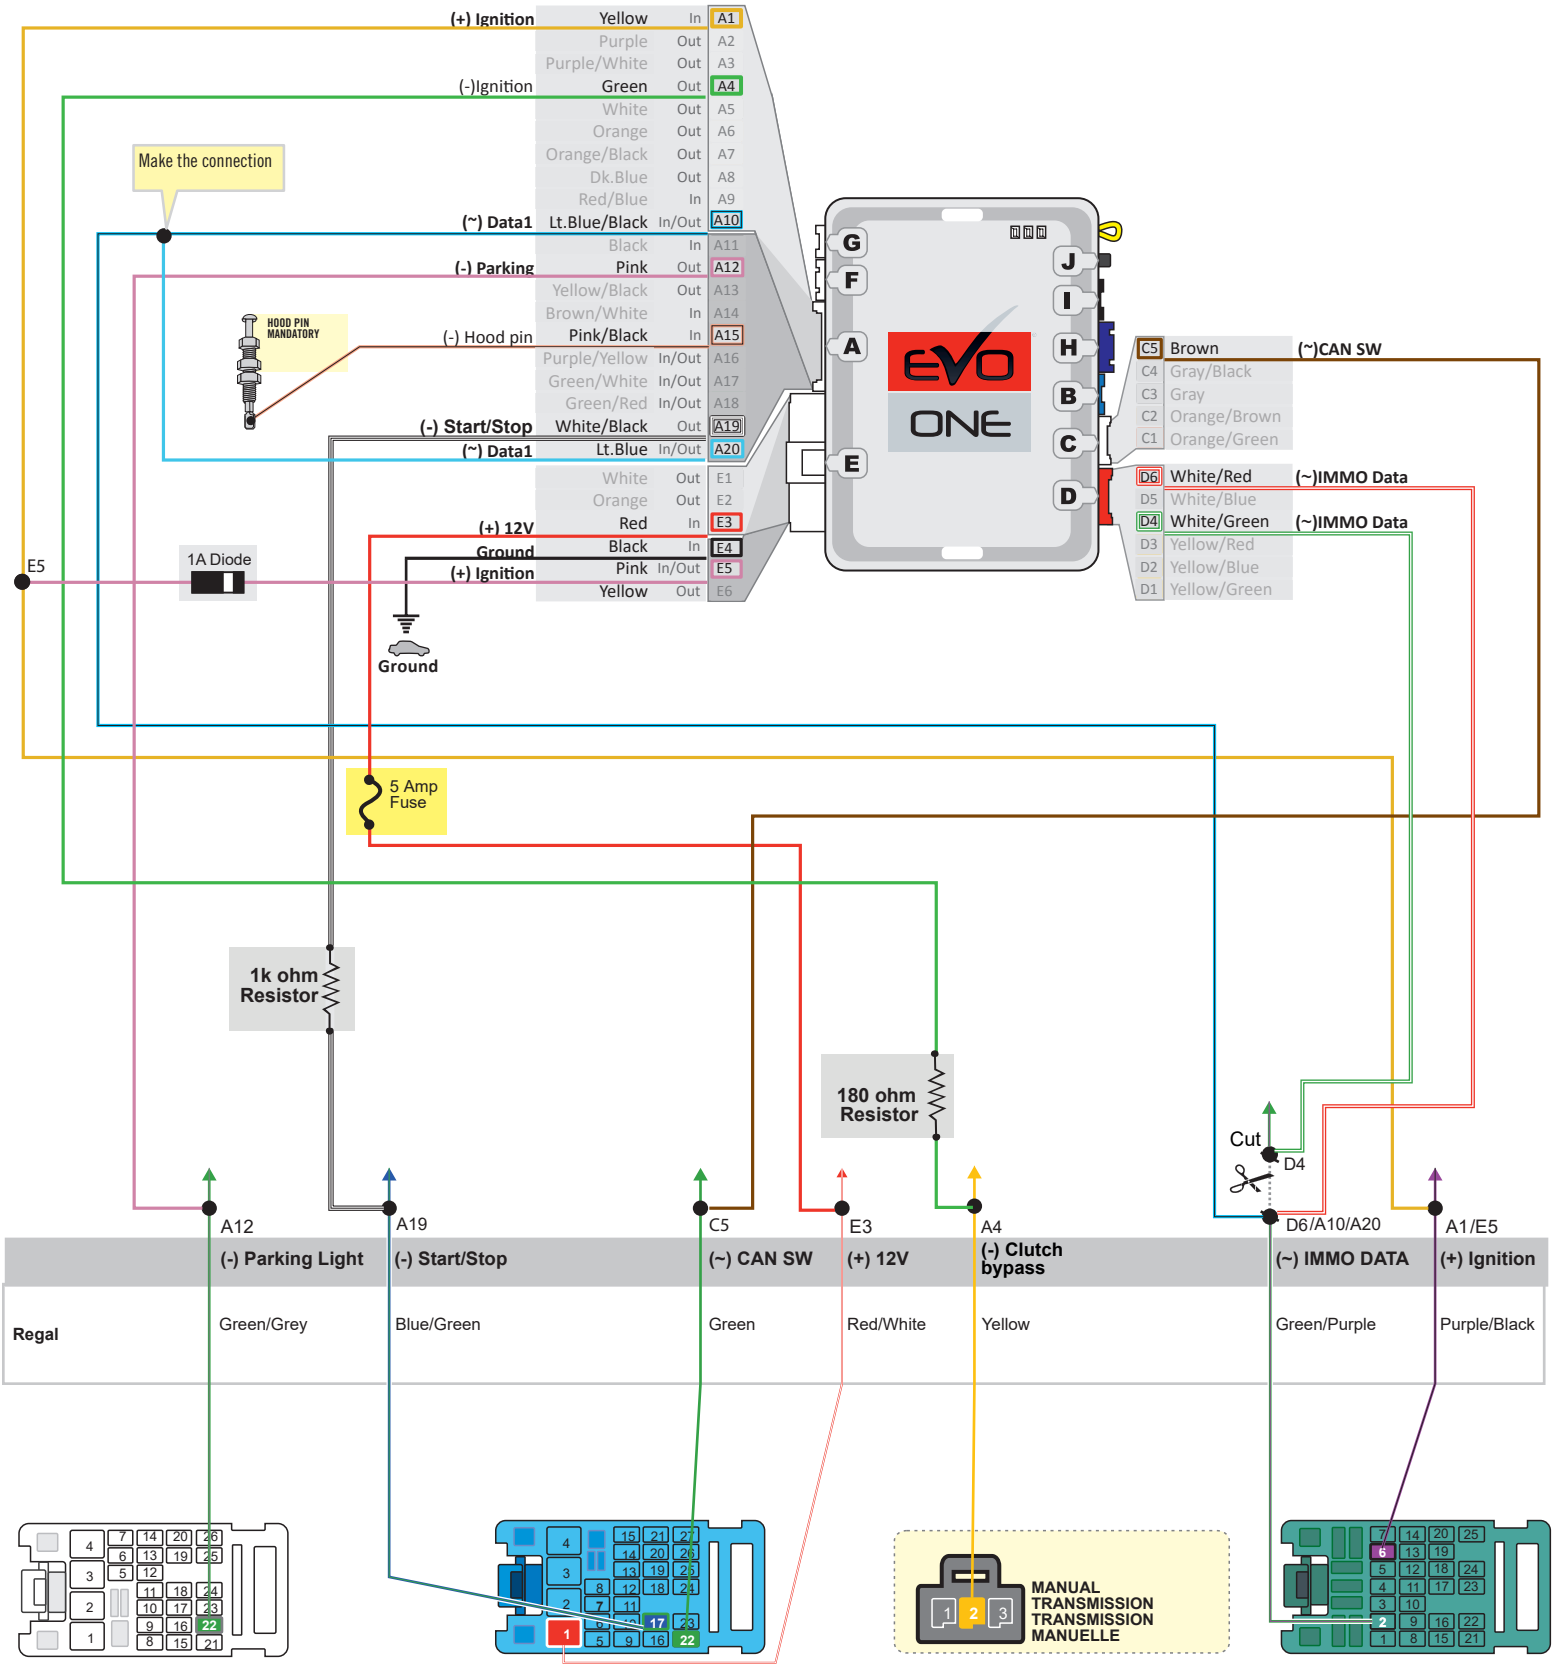


① Back view, 26-Pin White connector, at BCM.

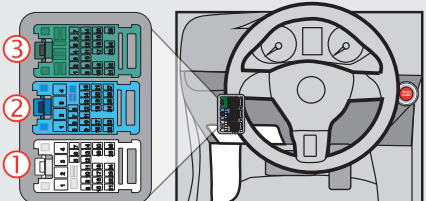

② Back view, 27-Pin Blue connector, at BCM.




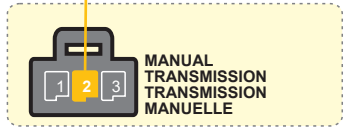


④ Back view, 3-Pin Black connector, at Switch.


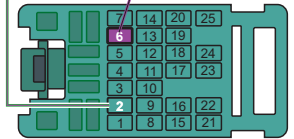


③ Back view, 25-Pin Green connector, at BCM.

THAR-GM6 | AUTOMATIC TRANSMISSION CONNECTION

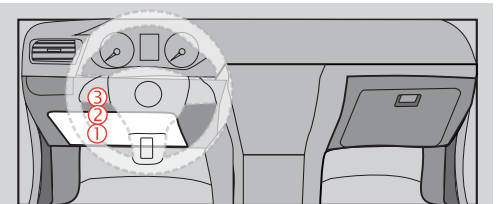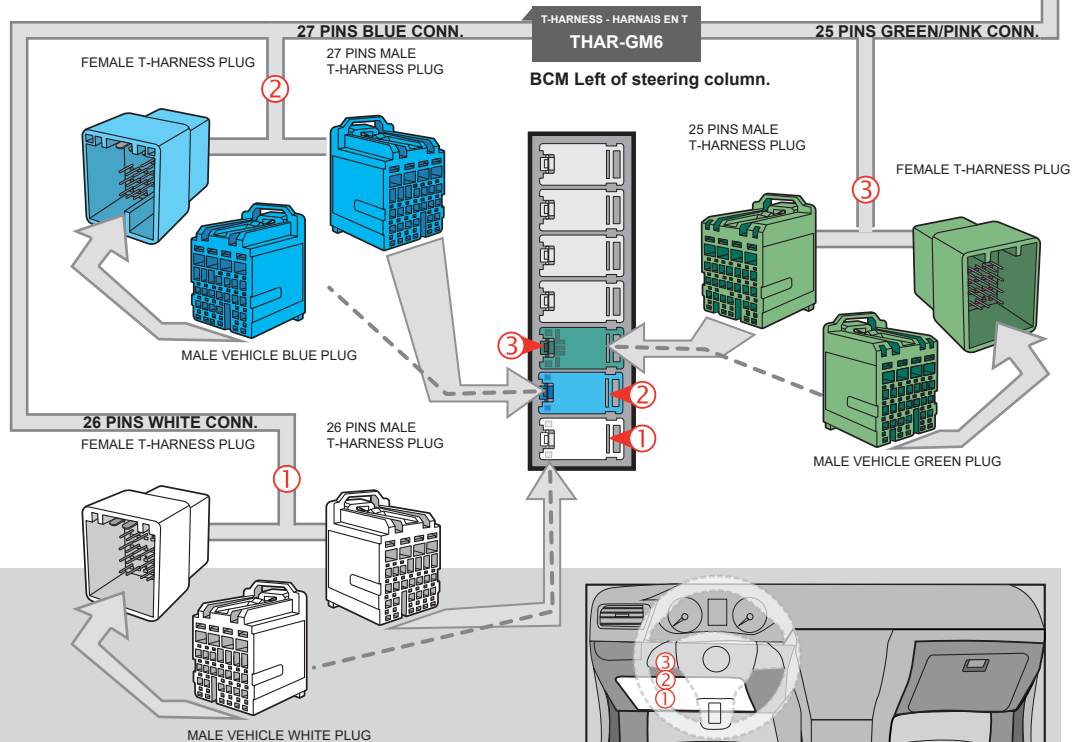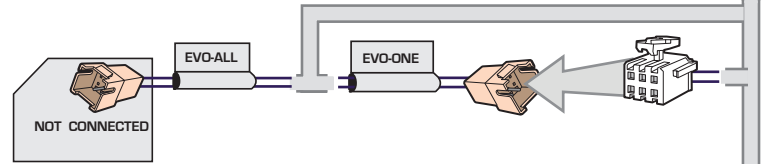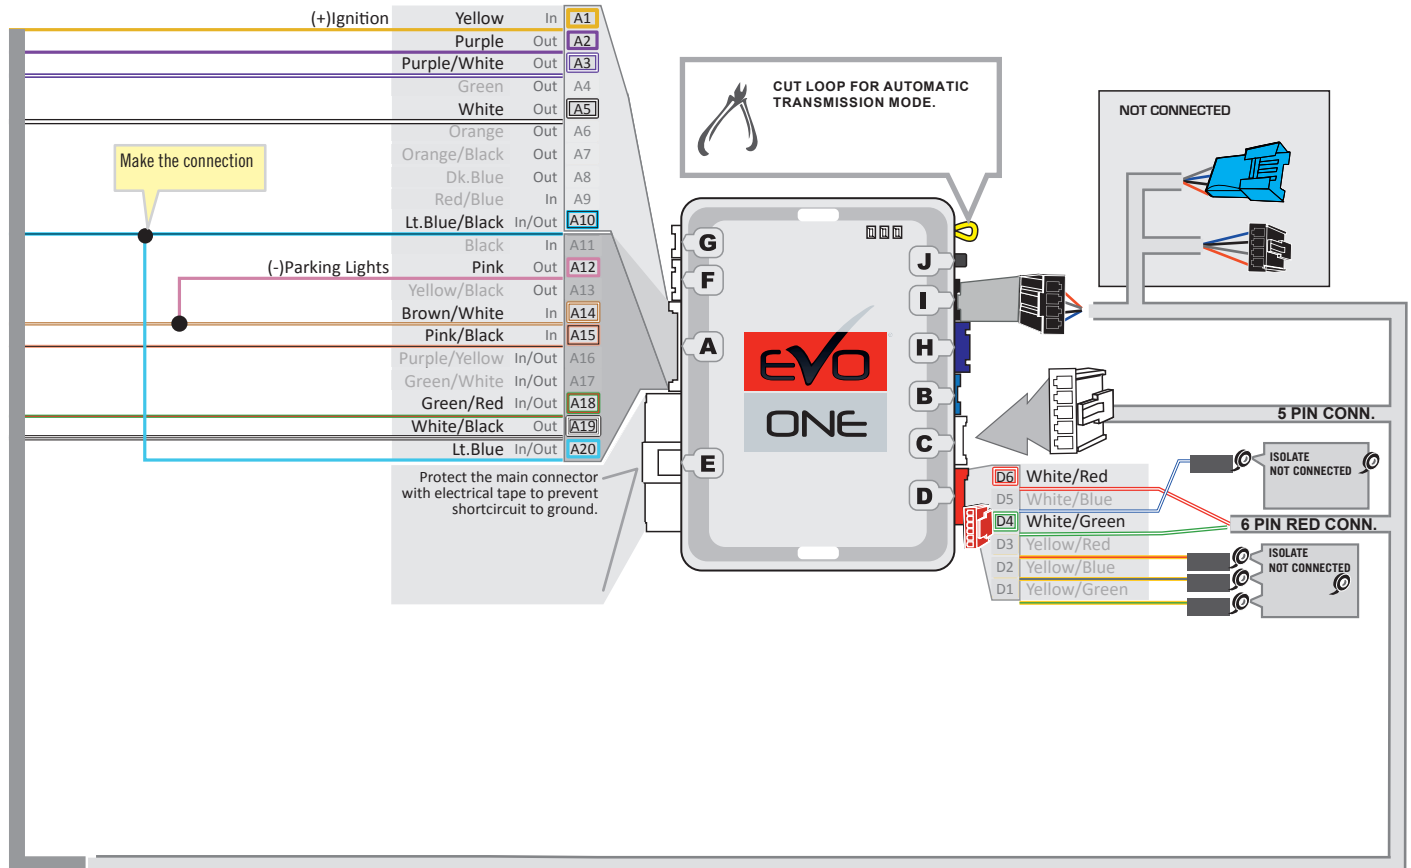

THAR-GM6 | MANUAL TRANSMISSION CONNECTION

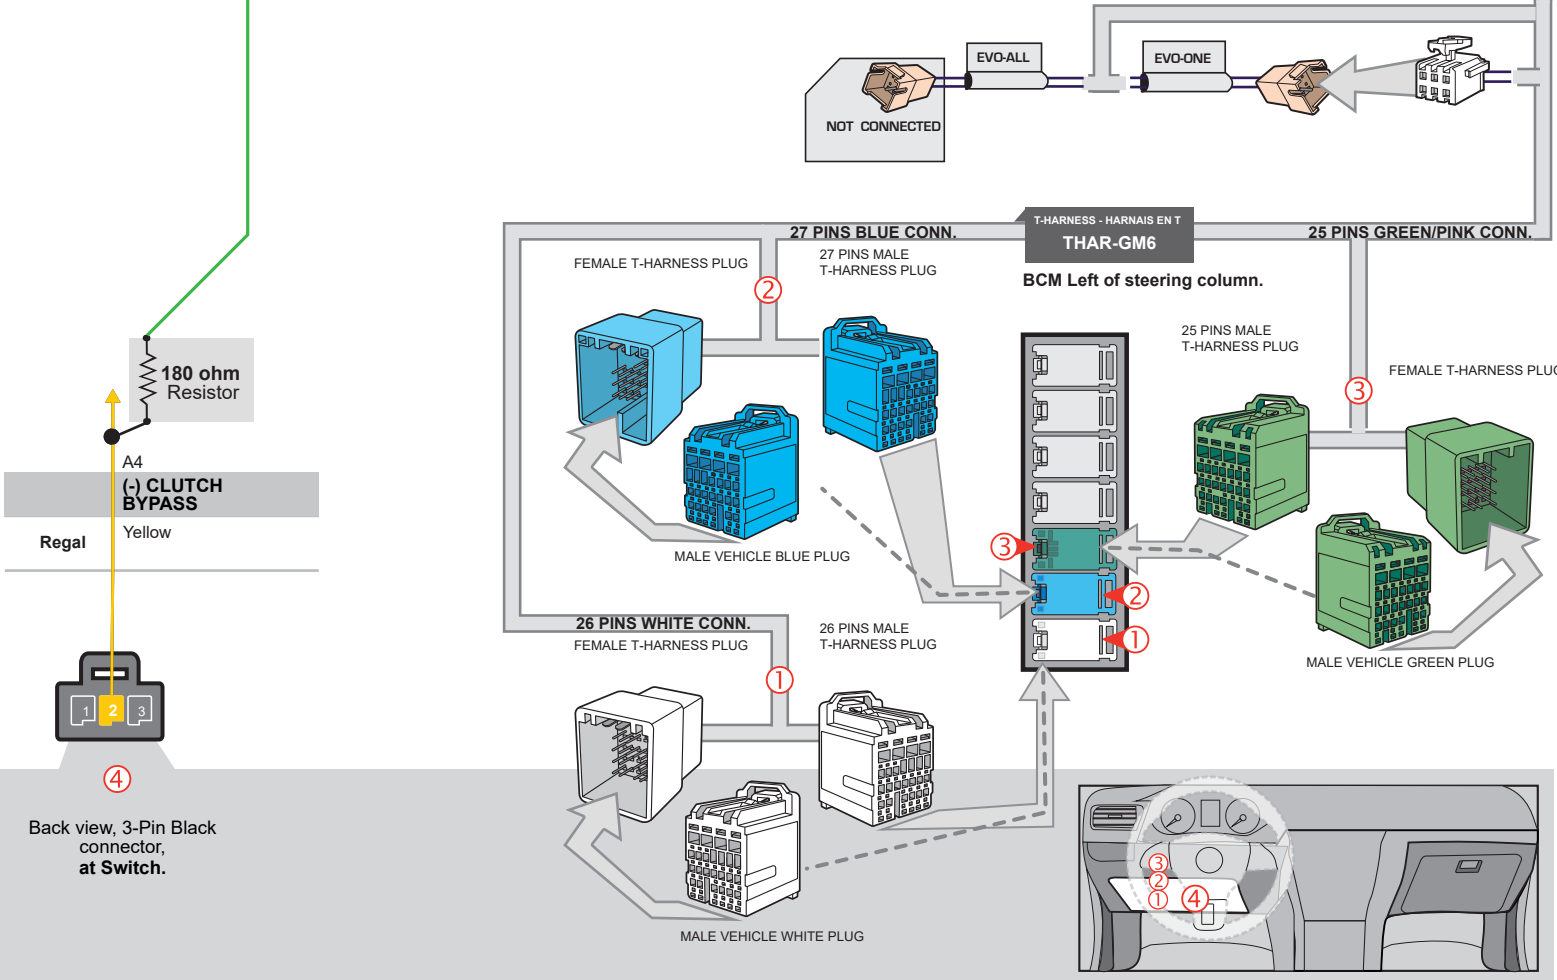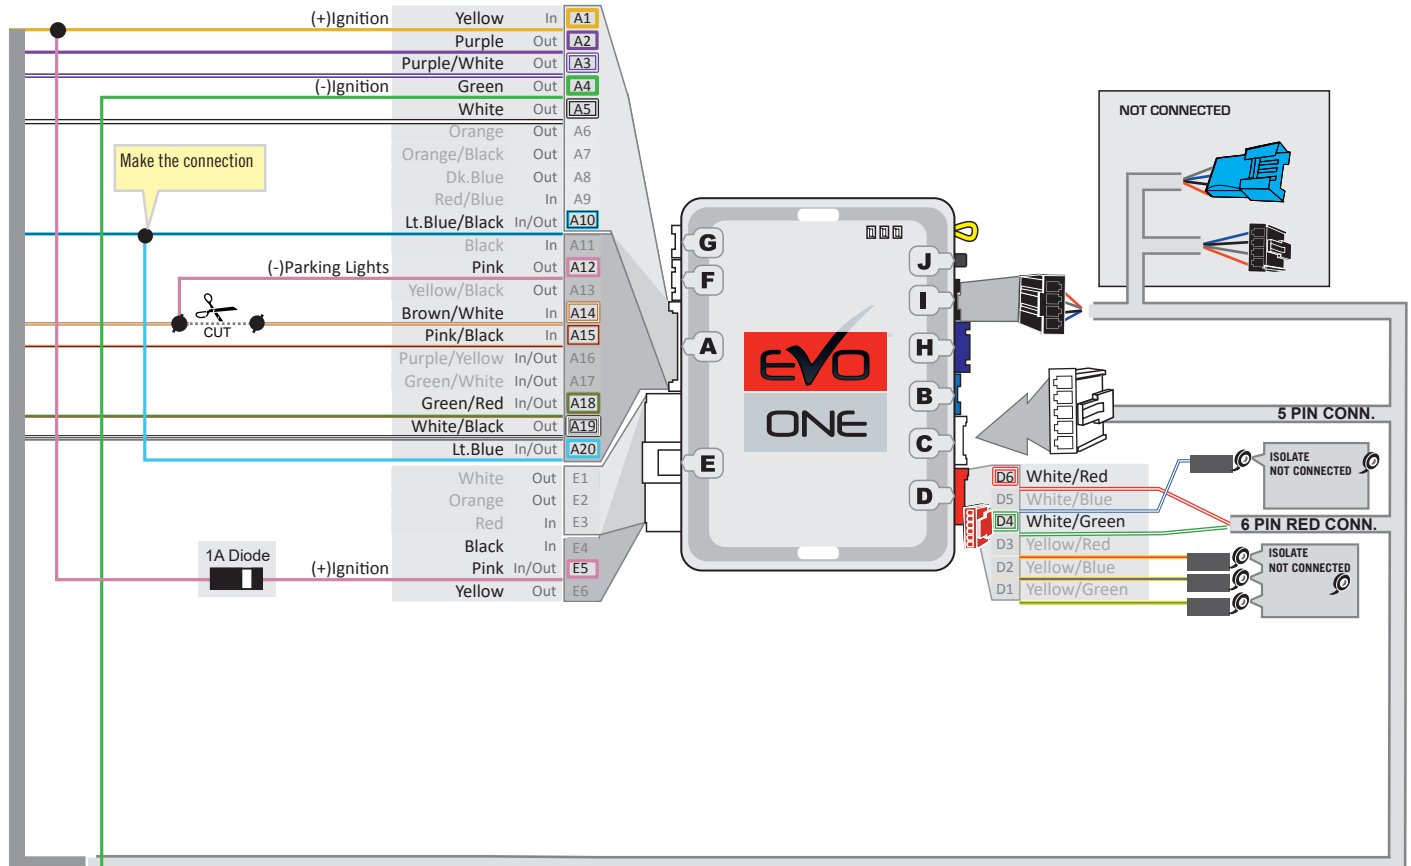


KEY BYPASS PROGRAMMING PROCEDURE 1/2




- 1 Remove the battery from the OEM remote.
- 2 Place the OEM remote in the **back** cup holder in the center console.
Refer to vehicle user guide for keyport location.

Reti téléc

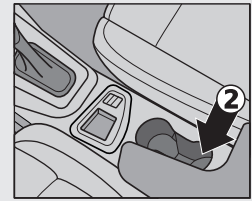


1

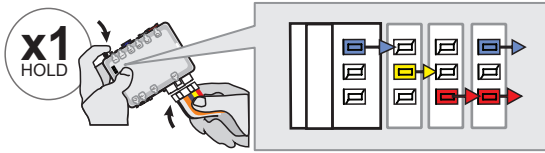

Press and hold the programming button:
Insert the 6-Pin Main connector.


↳The LEDs will alternate between BLUE, RED, YELLOW & BLUE/RED flashes.

2

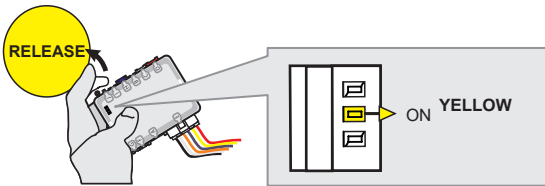


Release the programming button when the LED is YELLOW.

 If the LED is not solid YELLOW **disconnect** the 6-Pin connector (Main-Harness) and go back to step 1.




3

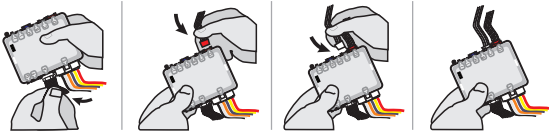

Insert the required remaining connectors.

4

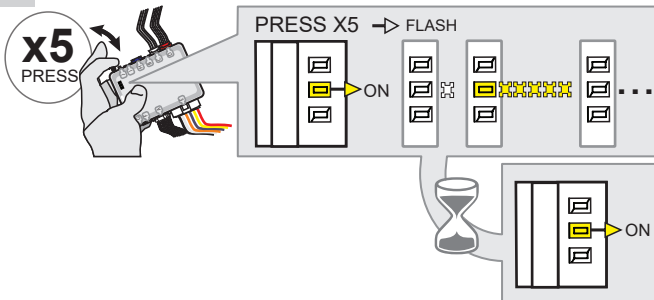


Press and release the programming button five (5x) times.

↳The YELLOW LED will flash 5 times each second.


↳**WAIT** for the YELLOW LED to turn ON solide.

 5



Open the driver door.

6

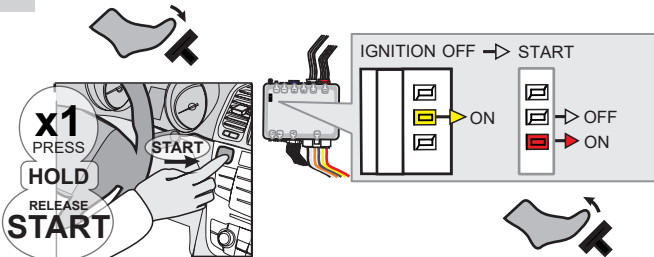

Press the foot-brake pedal.

Press the Push-to-Start button until the engine start.

Release the foot-brake pedal.

↳The RED LED will turn ON.
↳The YELLOW LED will turn OFF.


KEY BYPASS PROGRAMMING PROCEDURE 2/2

7




Press the Push-to-Start button until the engine turn OFF.

8

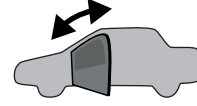

Close and open the driver door.

9

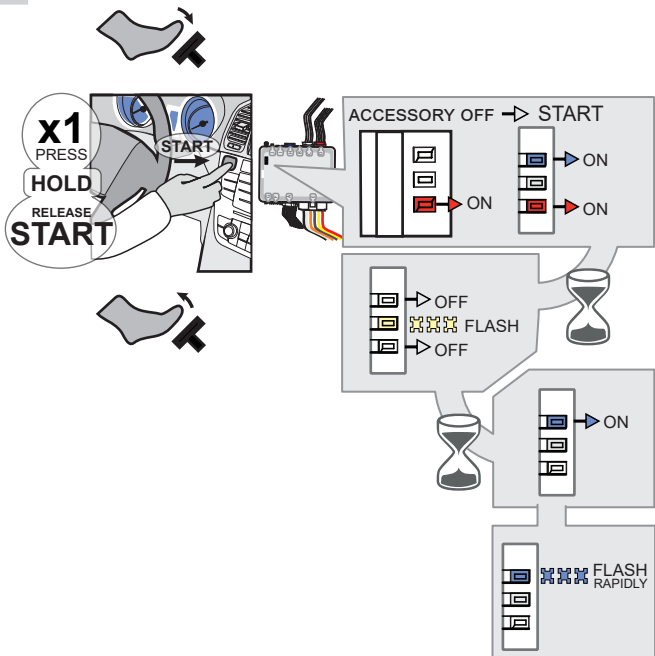


Press the foot-brake pedal.

Press the Push-to-Start button until the engine start.

Release the foot-brake pedal.

- ↳ The BLUE LED will turn ON.
- ↳ The BLUE LED will turn OFF. The RED LED will turn OFF.
- ↳ The YELLOW LED will flash rapidly
- ↳ The BLUE LED will turn ON.
- ↳ The BLUE LED will flash rapidly

10

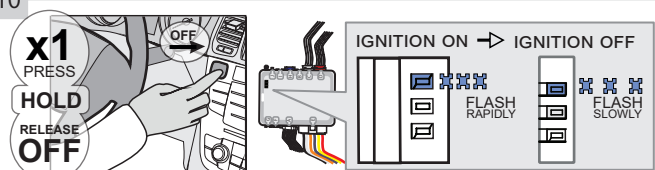

Press the Push-to-Start button until the engine turn OFF.


- ↳ The BLUE LED will flash slowly

11



Disconnect all connectors and after the 6-Pin (Main-Harness) or the 4-Pin Data-link connector.

12

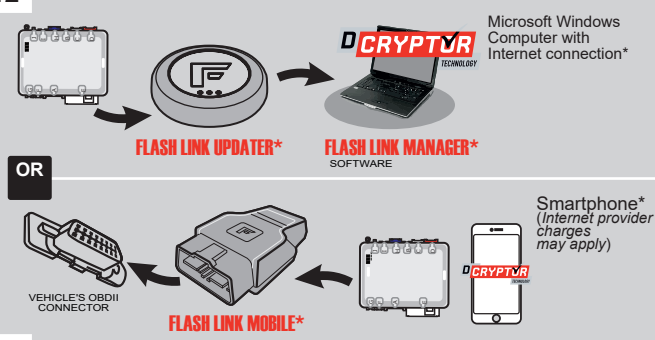


Use the tool: FLASH LINK UPDATER* or FLASH LINK MOBILE* to visit the DCryptor menu.

***Parts required (not included)**

KEY BYPASS PROGRAMMING PROCEDURE 3/3

13

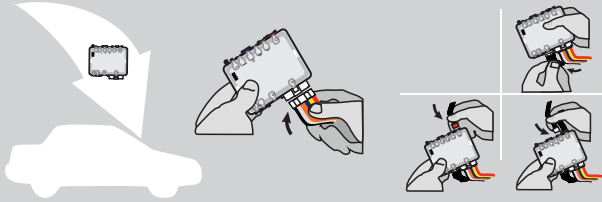

AFTER DCRYPTOR PROGRAMMING COMPLETED
 Go back to the vehicle and **reconnect** the 6-Pin (Main-Harness) or the 4-pins (Data-Link) connector and after all the remaining connector.



The module is now programmed.




REMOTE STARTER / ALARM VERIFICATION PROCEDURE

Test the remote starter. Remote start the vehicle.

REMOTE STARTER PROGRAMMING PROCEDURE



REFER TO THE **QUICK INSTALL GUIDE** INCLUDED WITH THE MODULE FOR THE REMOTE STARTER PROGRAMMING.

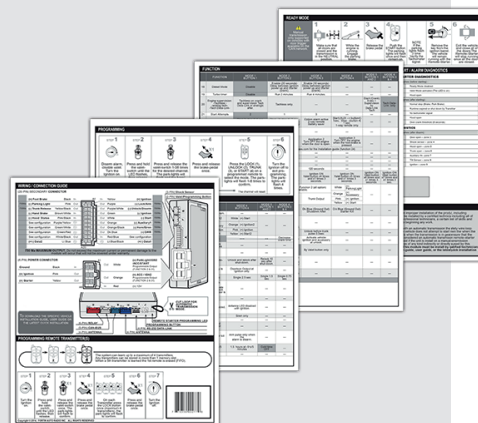

REMOTE STARTER FUNCTIONALITY |



All doors must be closed.



Remote start the vehicle.



Unlock the doors with either:

- The OEM remote
- The remote-starter remote
- Or the proximity remote



Enter the vehicle with the Intelligent Key.




The vehicle can now be put in to gear and driven.




If the vehicle is not unlocked with one of these conditions the remote-starter will shut down as soon as any door is opened.

REGULAR INSTALLATION AND THAR-GM6

ADDENDUM - SUGGESTED WIRING CONFIGURATION

VEHICLE	YEARS	Vehicle functions supported in this diagram (functional if equipped)														
		Immobilizer bypass	Lock	Unlock	Arm	Disarm	Parking Light	Trunk (open)	RAP Disable	Tachometer	Door Status	Trunk Status	Hand-Brake Status	Foot-Brake Status	OEM Remote Monitoring	R.S. OEM remote Stand Alone compatible
																
BUICK																
Regal	Push-To-Start	2018-2019	•	•	•	•	•	•	•	•	•	•	•	•	•	•





BYPASS FIRMWARE VERSION

70.[41]

GM MINIMUM

To add the firmware version and the options, use the **FLASH LINK UPDATER** or **FLASH LINK MOBILE** tool, sold separately.

	Program bypass option IF THE VEHICLE IS NOT EQUIPPED WITH FUNCTIONAL HOOD PIN:	UNIT OPTION	DESCRIPTION
		A11	OFF
			Hood trigger (Output Status).

	Program bypass option:	UNIT OPTION	DESCRIPTION
		C1	OEM Remote status (Lock/Unlock) monitoring
		D6	Push-to-Start



ATTENTION!



DATE: XX-XX

	UNIT OPTION	DESCRIPTION
E5	OFF	By default DEACTIVATED
	ON	MANUFACTURED MODULES BETWEEN: 04/2018 TO 04/2019

Program remote starter option for R.S. OEM REMOTE STAND ALONE:	38	2	Enable Press 3x Lock to remote start with the OEM remote.
---	----	---	--

MANDATORY INSTALL

*** HOOD PIN**



HOOD STATUS: THE HOOD PIN SWITCH (INCLUDED) MUST BE INSTALLED IF THE VEHICLE CAN BE REMOTE STARTED WITH THE HOOD OPEN, SET FUNCTION A11 TO OFF.

A11

OFF

SECURITY STICKER



Included

Notice: the installation of safety elements are mandatory. The hood pin and the sticker are essential security elements and must be installed.

THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.

DESCRIPTION

Parts required (Not included) PAGE

WIRE TO WIRE DIAGRAM

AUTOMATIC TRANSMISSION


Page 3

THARNESSE DIAGRAM






THARNESSE THAR-GM6 AUTOMATIC TRANSMISSION 1x THAR-GM6

Page 5



Regal
2018-2019

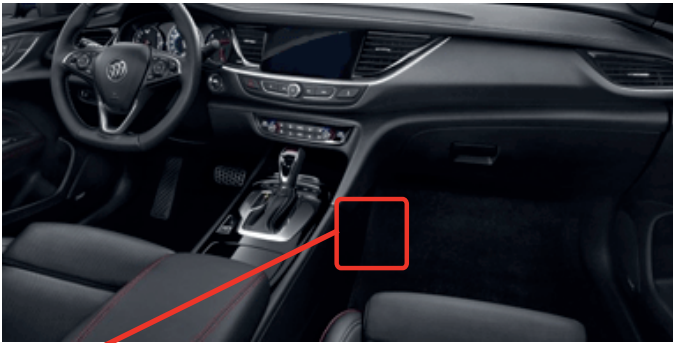



BCM Passenger side

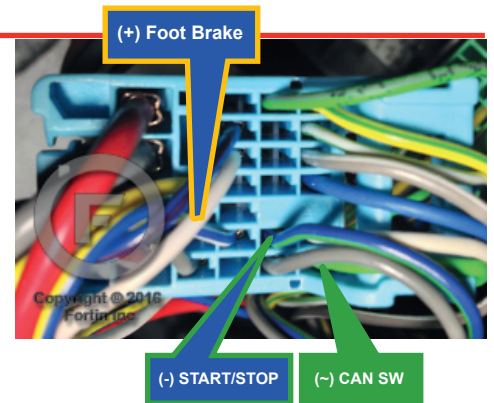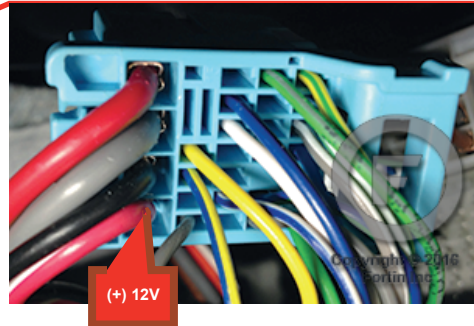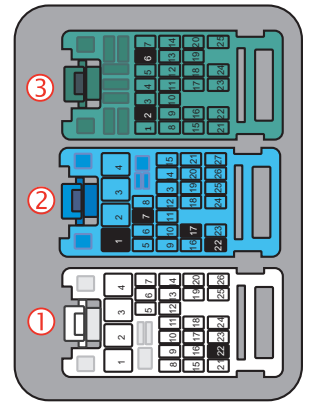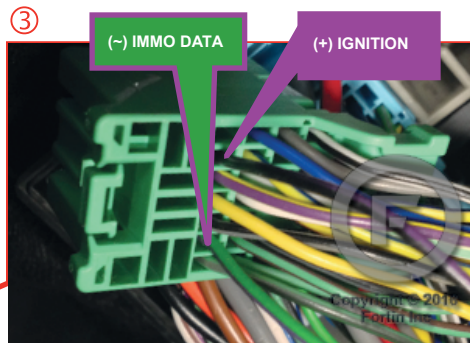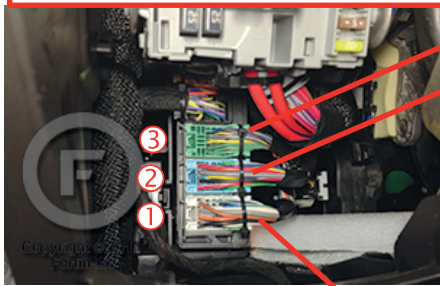


AUTOMATIC TRANSMISSION WIRING CONNECTION

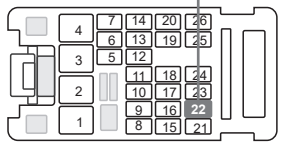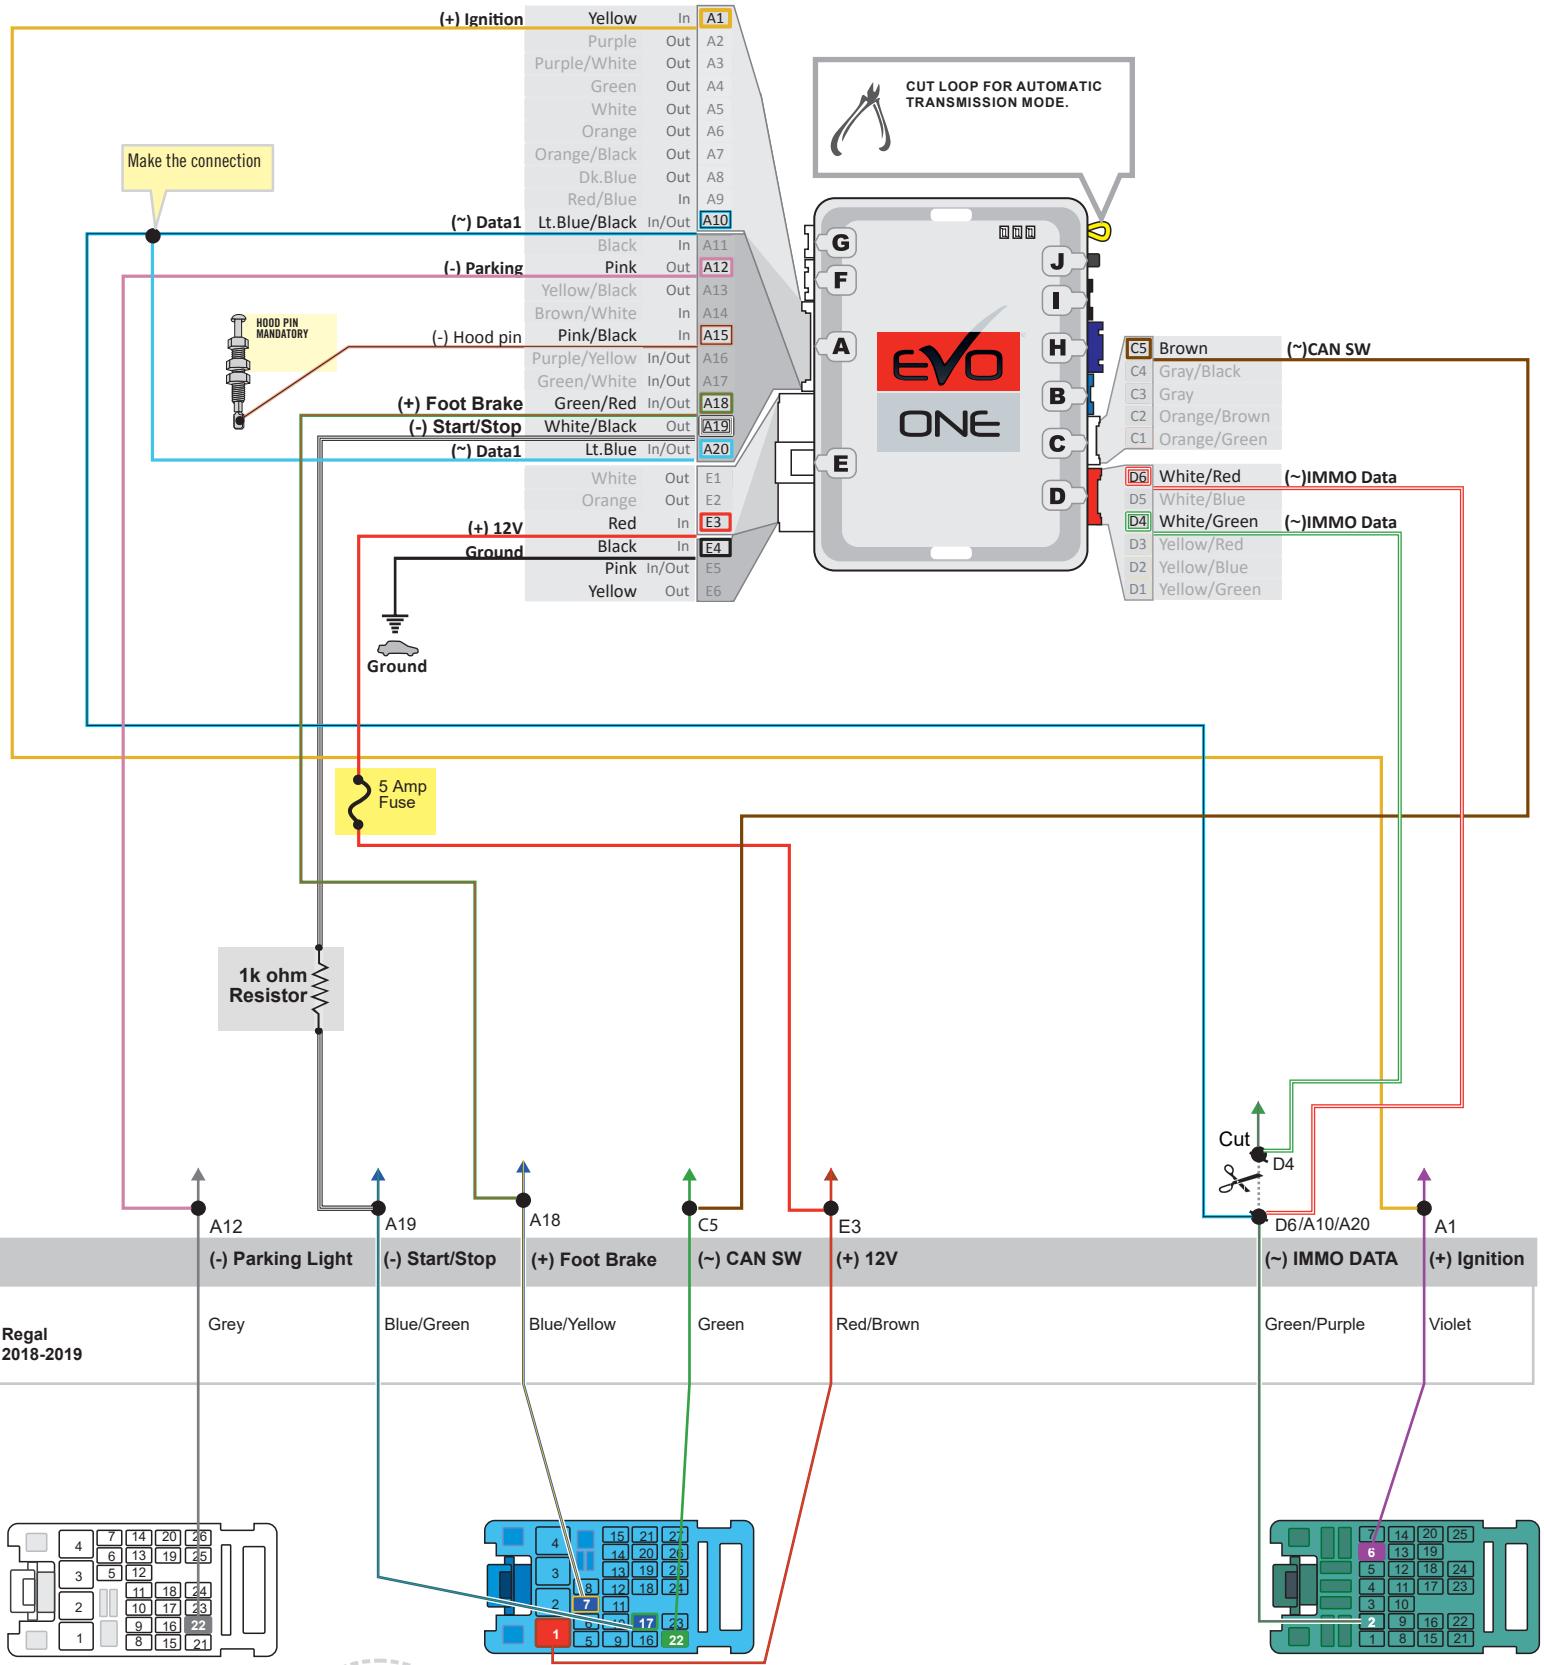

① Back view, 26-Pin White connector, at BCM.

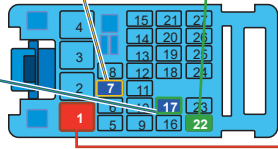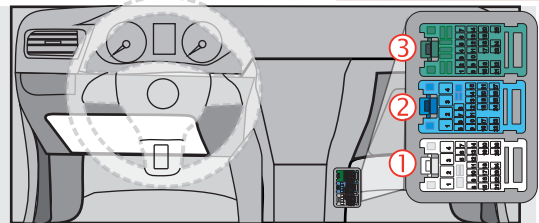


② Back view, 27-Pin Blue connector, at BCM.

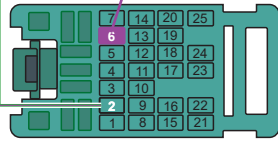


③ Back view, 25-Pin Green connector, at BCM.

MANUAL TRANSMISSION WIRING CONNECTION

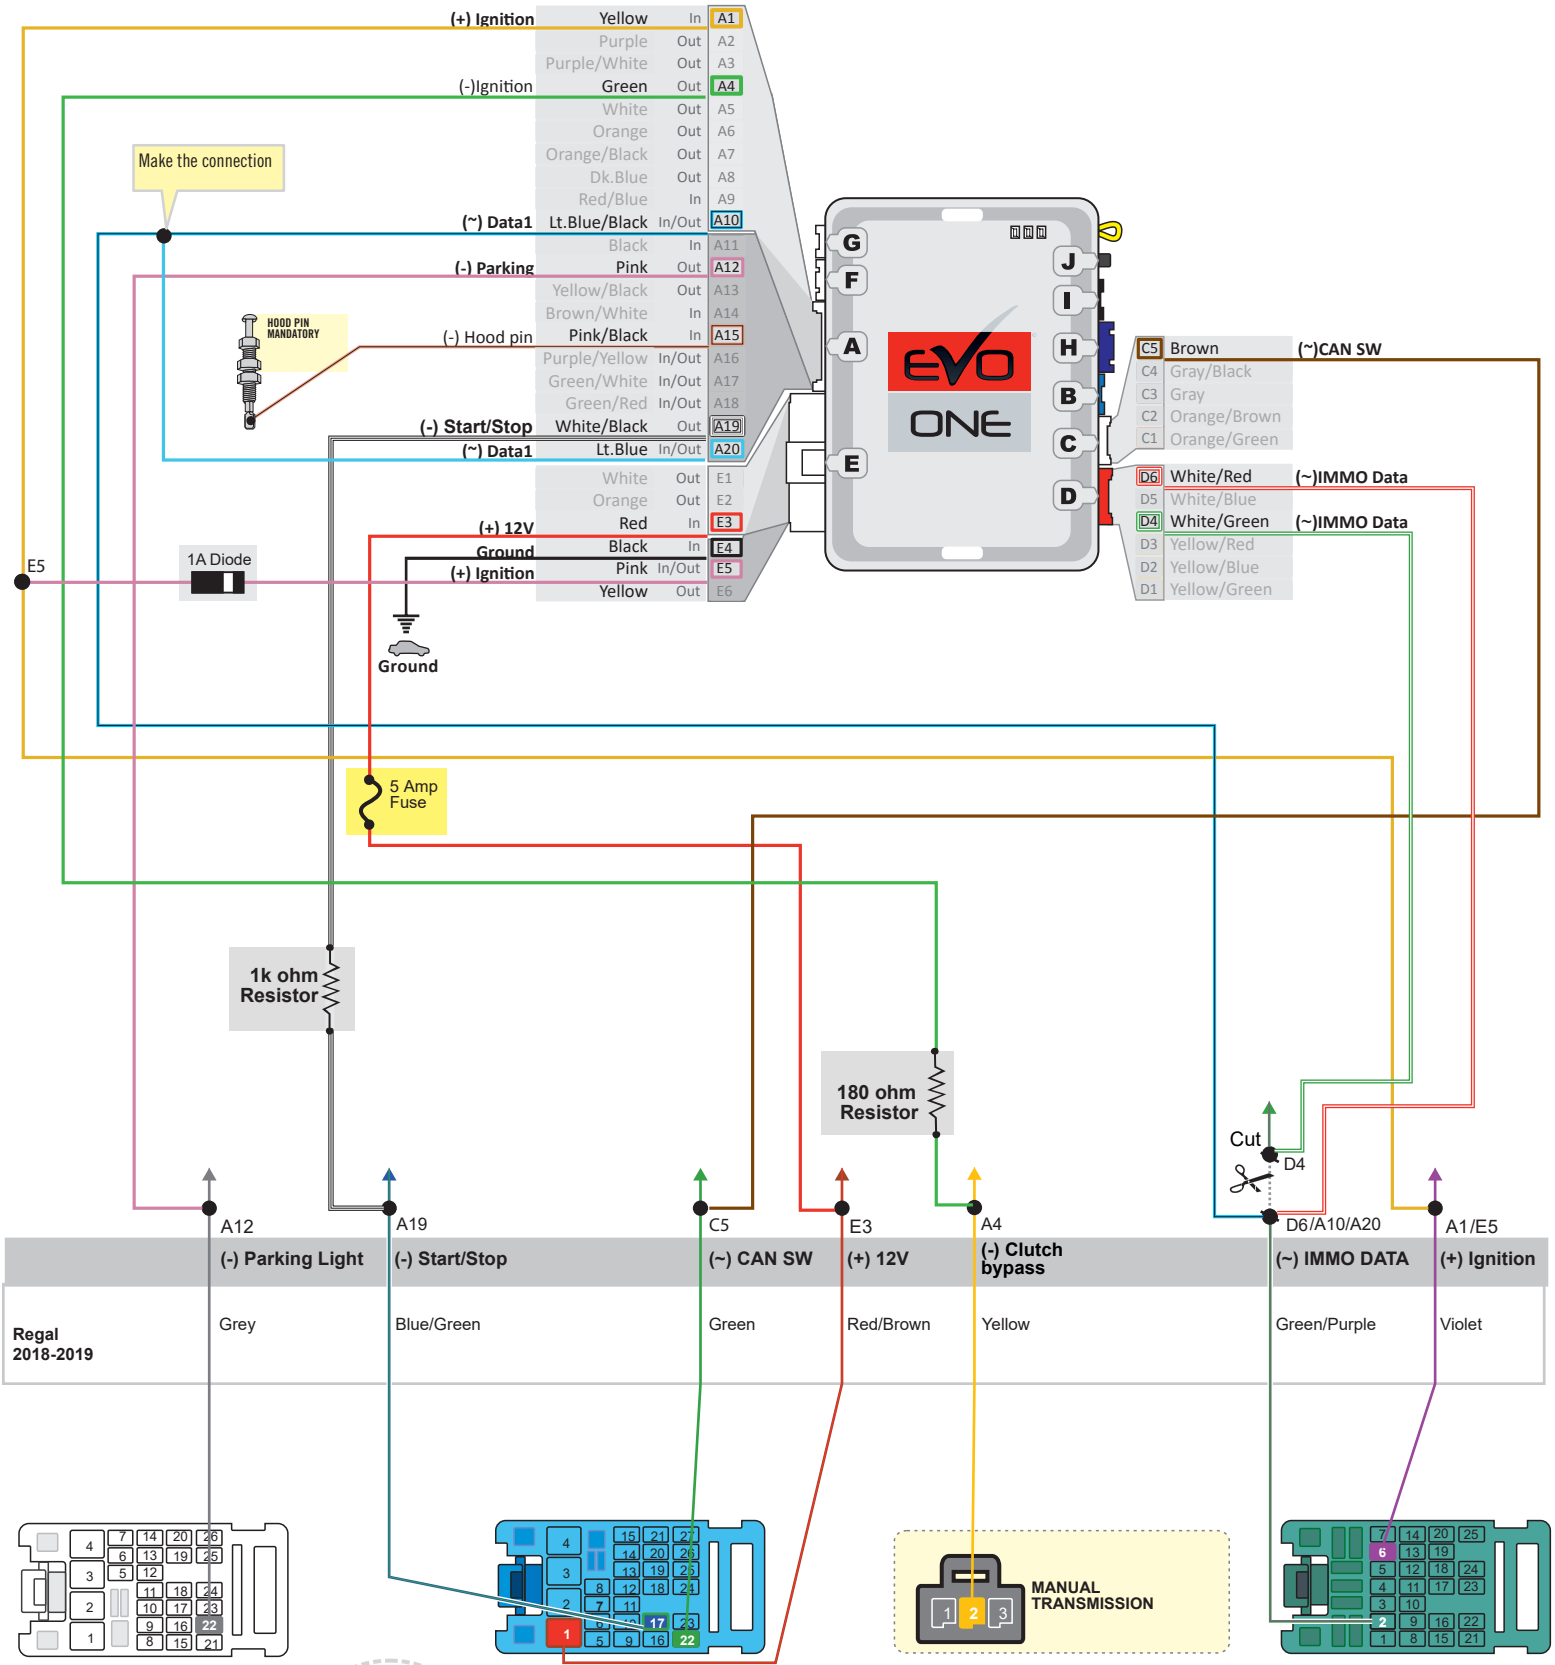

① Back view, 26-Pin White connector, at BCM.




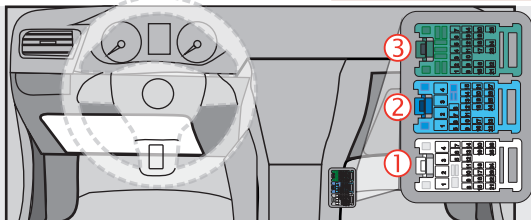


② Back view, 27-Pin Blue connector, at BCM.



④ Back view, 3-Pin Black connector, at Switch.

③ Back view, 25-Pin Green connector, at BCM.



THAR-GM6 | AUTOMATIC TRANSMISSION CONNECTION

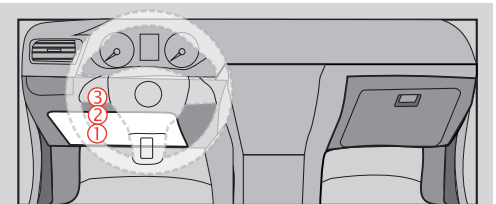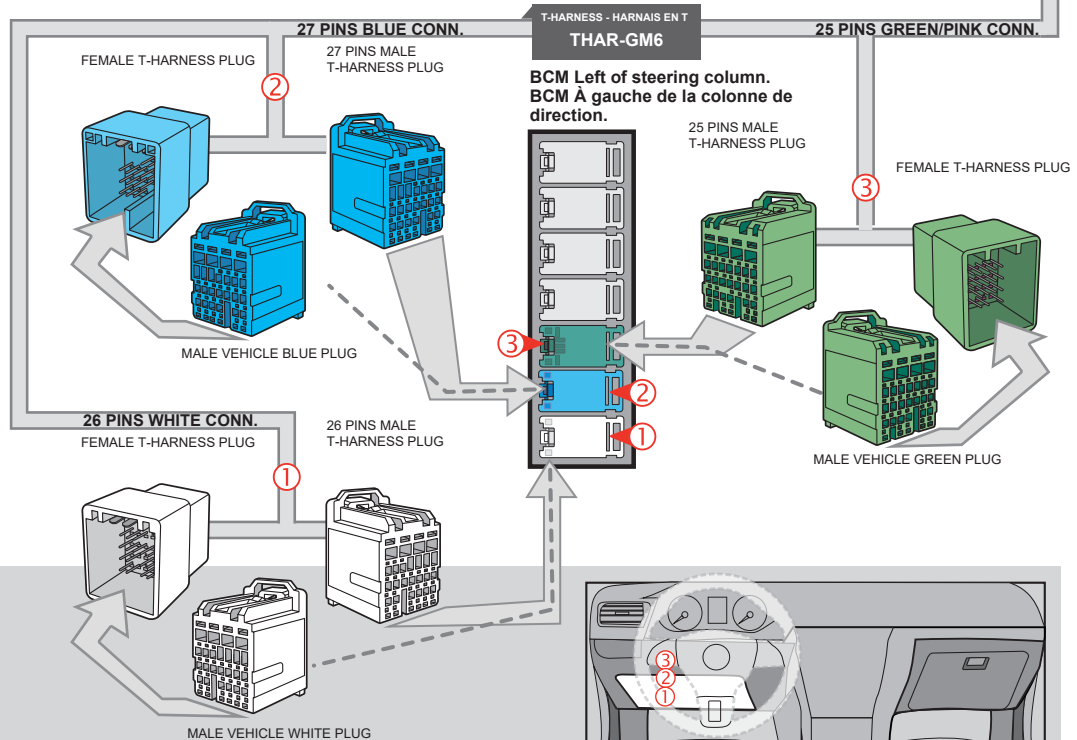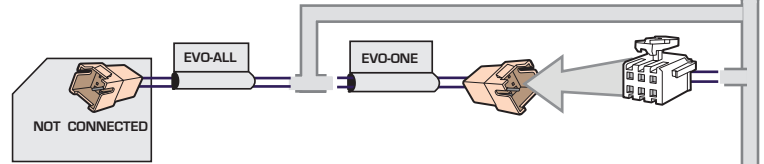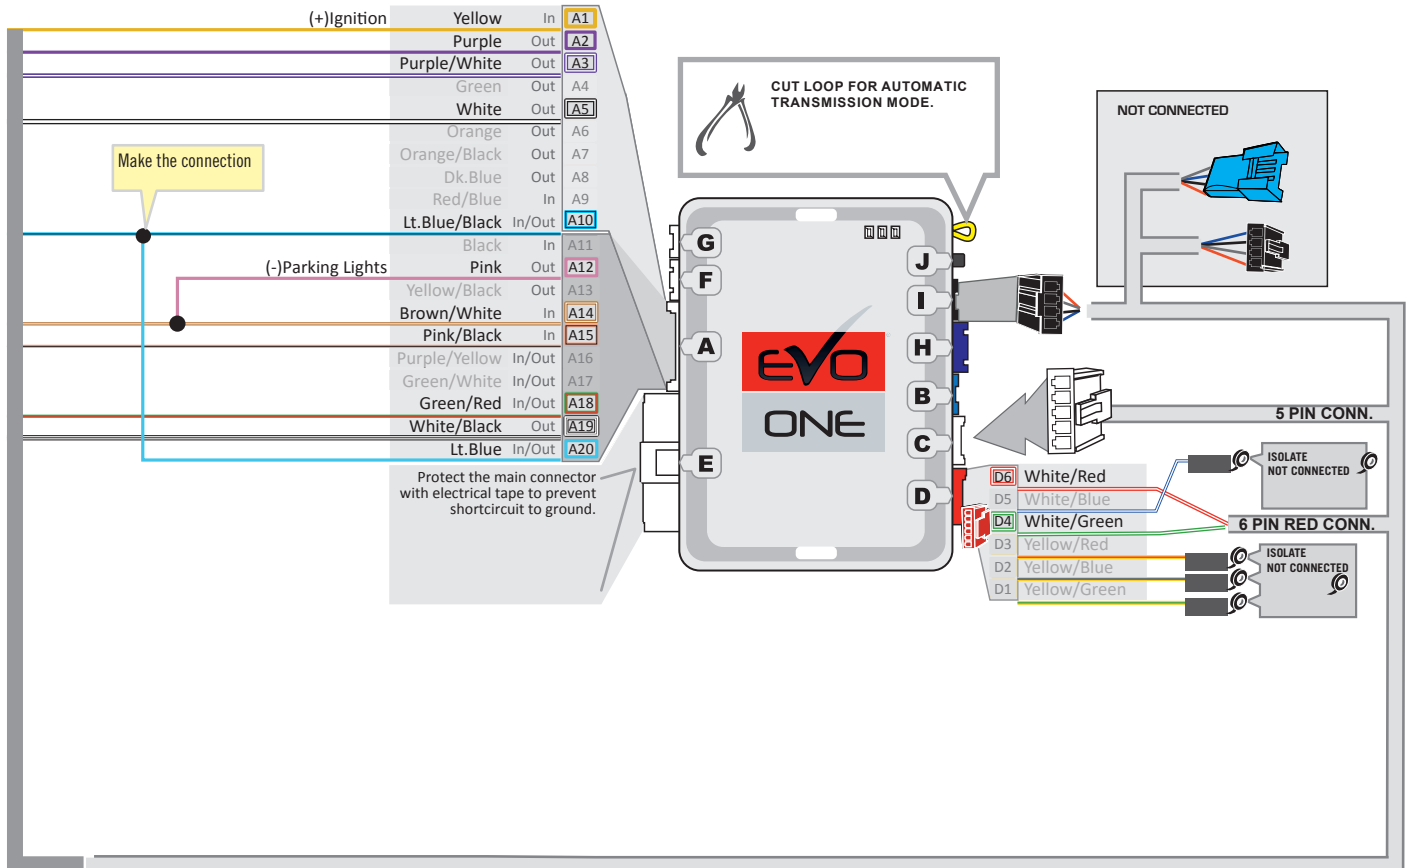

THAR-GM6 | MANUAL TRANSMISSION CONNECTION

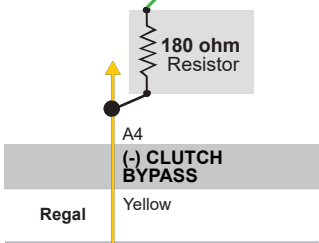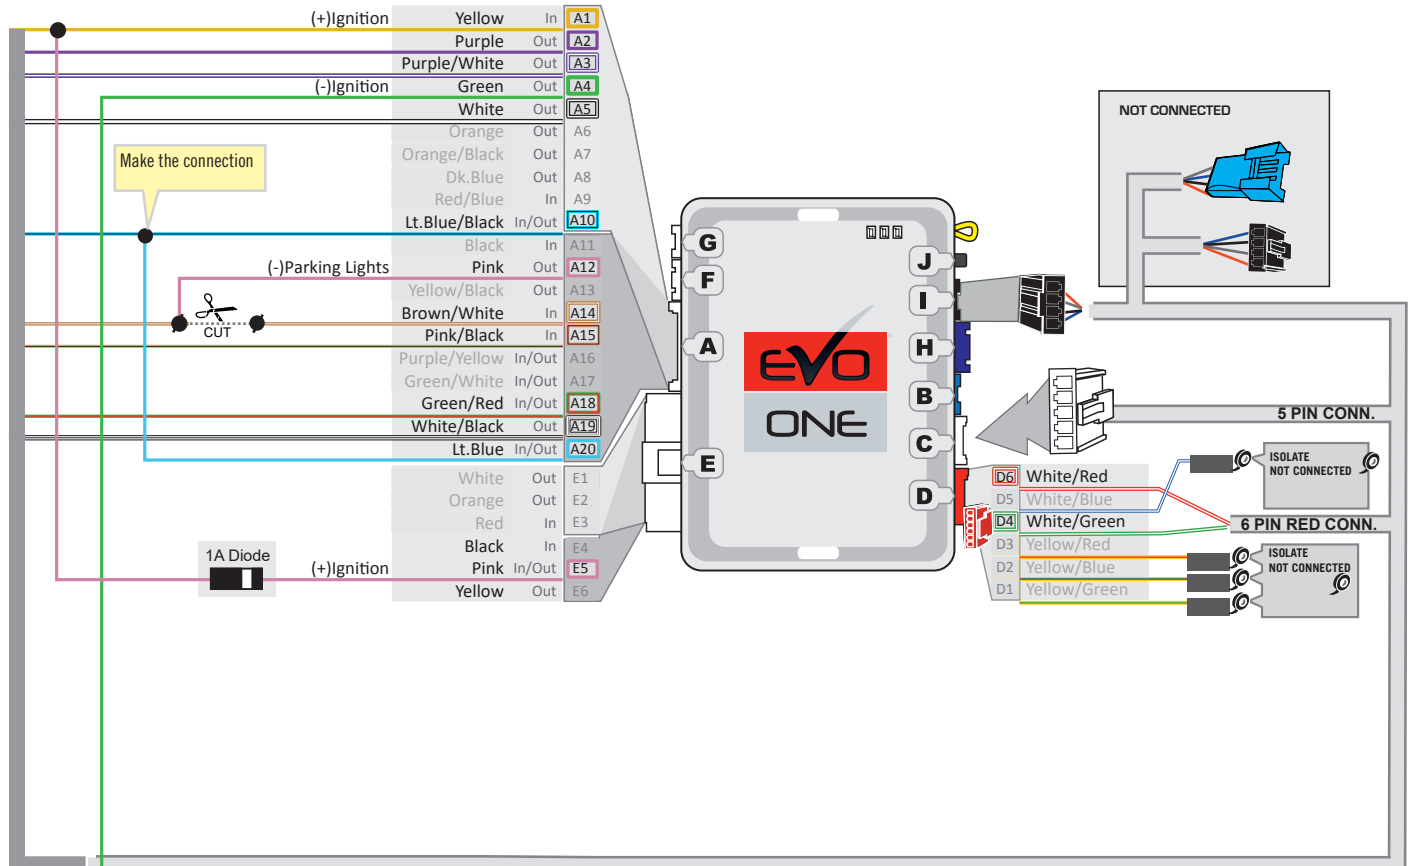

Back view, 3-Pin Black connector, at Switch.

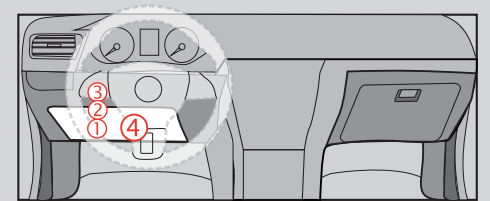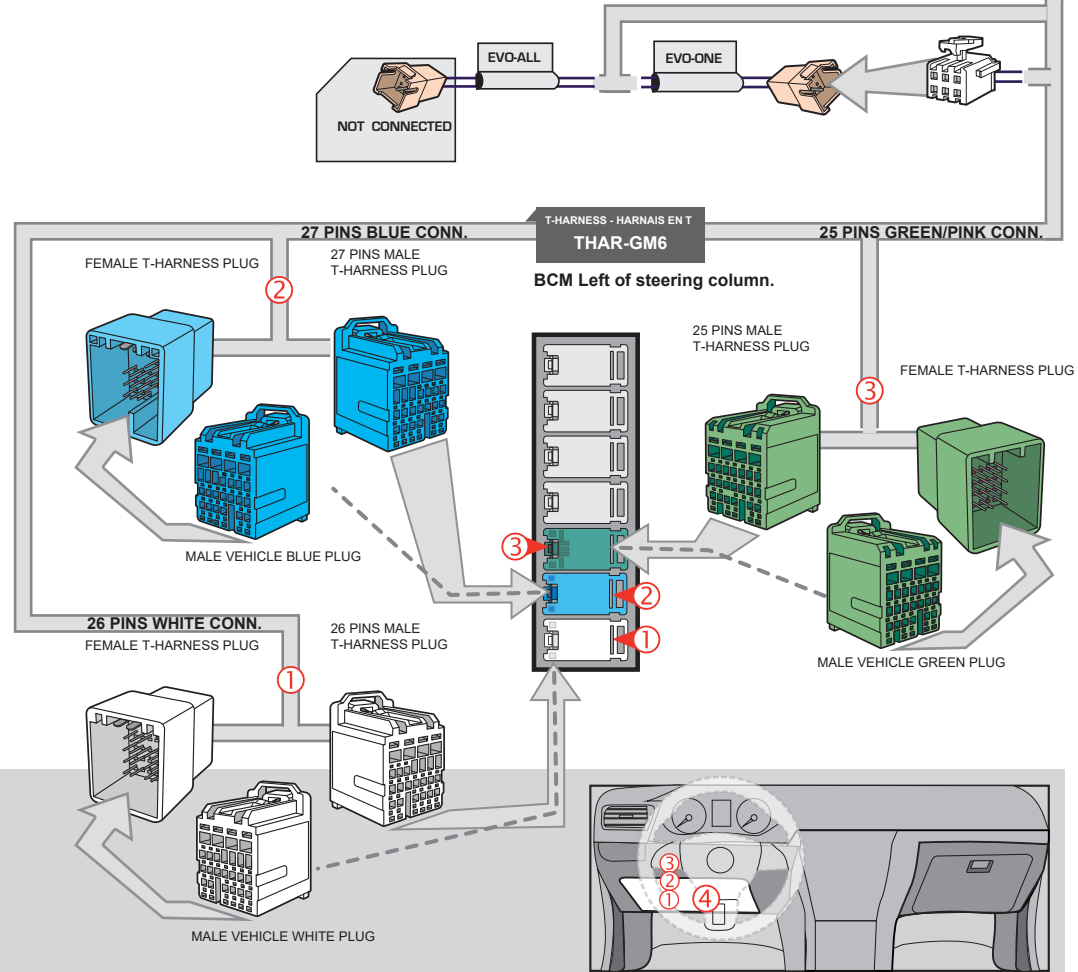


KEY BYPASS PROGRAMMING PROCEDURE 1/2



- 1 Remove the battery from the OEM remote
- 2 Place the OEM remote in the **back** cup holder in the center console.
Refer to vehicle user guide for keyport location.




1

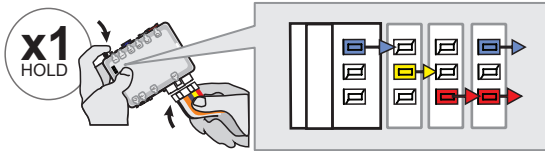

Press and hold the programming button:
Insert the 6-Pin Main connector.


↳The LEDs will alternate between BLUE, RED, YELLOW & BLUE/RED flashes.

2

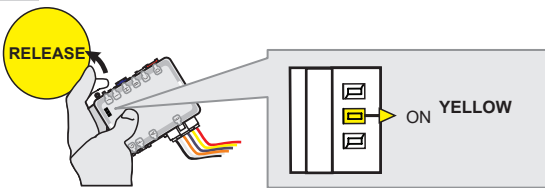


Release the programming button when the LED is YELLOW.

 If the LED is not solid YELLOW **disconnect** the 6-Pin connector (Main-Harness) and go back to step 1.




3

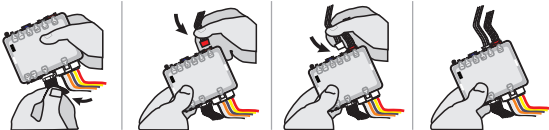

Insert the required remaining connectors.

4

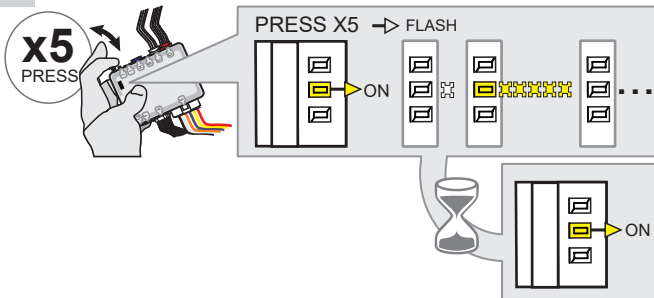


Press and release the programming button five (5x) times.

↳The YELLOW LED will flash 5 times each second.


↳WAIT for the YELLOW LED to turn ON solide.

 5



Open the driver door.

6

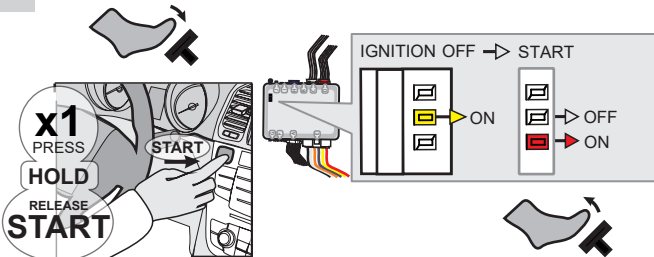

Press the foot-brake pedal.

Press the Push-to-Start button until the engine start.

Release the foot-brake pedal.

↳The RED LED will turn ON.
↳The YELLOW LED will turn OFF.


KEY BYPASS PROGRAMMING PROCEDURE 2/2

7




Press the Push-to-Start button until the engine turn OFF.

8

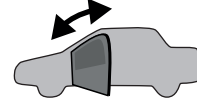

Close and open the driver door.

9

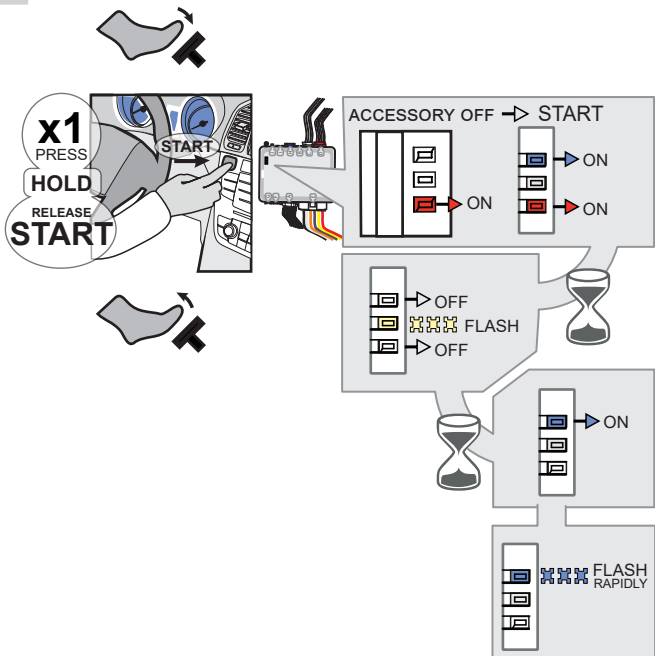


Press the foot-brake pedal.

Press the Push-to-Start button until the engine start.

Release the foot-brake pedal.

- ↳ The BLUE LED will turn ON.
- ↳ The BLUE LED will turn OFF. The RED LED will turn OFF.
- ↳ The YELLOW LED will flash rapidly
- ↳ The BLUE LED will turn ON.
- ↳ The BLUE LED will flash rapidly

10

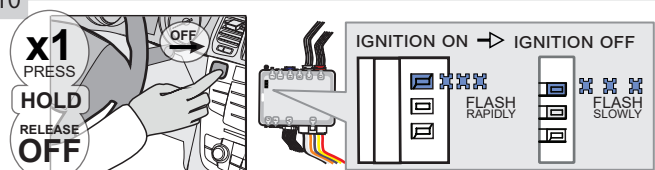

Press the Push-to-Start button until the engine turn OFF.


- ↳ The BLUE LED will flash slowly

11



Disconnect all connectors and after the 6-Pin (Main-Harness) or the 4-Pin Data-link connector.

12

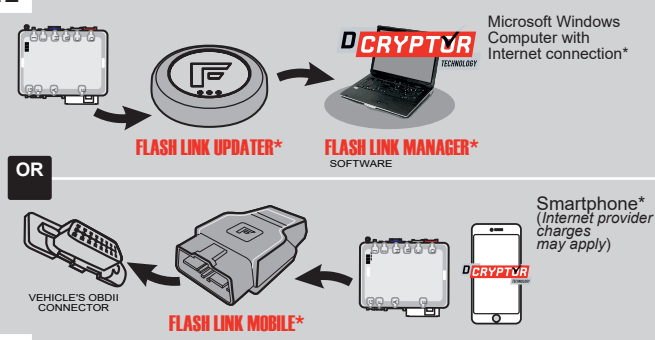

Microsoft Windows Computer with Internet connection*

FLASH LINK UPDATER* FLASH LINK MANAGER* SOFTWARE

OR

Smartphone* (Internet provider charges may apply)


VEHICLE'S OBDII CONNECTOR FLASH LINK MOBILE*

Use the tool: FLASH LINK UPDATER or FLASH LINK MOBILE to visit the DCryptor menu.

*Parts required (not included)

KEY BYPASS PROGRAMMING PROCEDURE 3/3

13

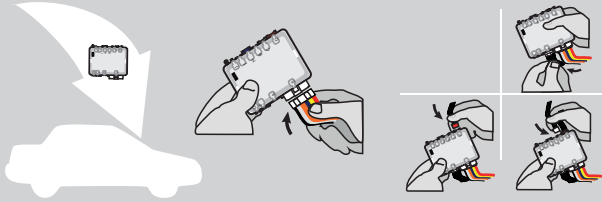

AFTER DCRYPTOR PROGRAMMING COMPLETED
 Go back to the vehicle and **reconnect** the 6-Pin (Main-Harness) or the 4-pins (Data-Link) connector and after all the remaining connector.



The module is now programmed.




REMOTE STARTER / ALARM VERIFICATION PROCEDURE

Test the remote starter. Remote start the vehicle.

REMOTE STARTER PROGRAMMING PROCEDURE



REFER TO THE **QUICK INSTALL GUIDE** INCLUDED WITH THE MODULE FOR THE REMOTE STARTER PROGRAMMING.

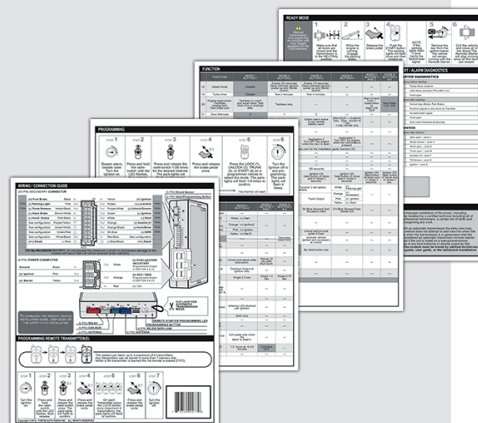

REMOTE STARTER FUNCTIONALITY |



All doors must be closed.



Remote start the vehicle.



Unlock the doors with either:

- The OEM remote
- The remote-starter remote
- Or the proximity remote



Enter the vehicle with the Intelligent Key.




The vehicle can now be put in to gear and driven.




If the vehicle is not unlocked with one of these conditions the remote-starter will shut down as soon as any door is opened.

REGULAR INSTALLATION AND THAR-GM6 INSTALLATION

ADDENDUM - SUGGESTED WIRING CONFIGURATION

VEHICLE	YEARS	Vehicle functions supported in this diagram (functional if equipped)														
		Immobilizer bypass Contournement d'immobilisateur	Lock	Unlock	Arm	Disarm	Parking Light	Trunk (open)	RAP Disable	Tachometer	Door Status	Trunk Status	Hand-Brake Status	Foot-Brake Status	OEM Remote Monitoring	R.S. OEM remote Stand Alone compatible
																
CADILLAC																
SRX	Push-To-Start	2010-2012	•	•	•	•	•	•	•	•	•	•	•	•	•	•



BYPASS FIRMWARE VERSION

70.[41]

GM MINIMUM


To add the firmware version and the options, use the **FLASH LINK UPDATER** or **FLASH LINK MOBILE** tool, sold separately.

UNIT OPTION	DESCRIPTION


Program bypass option IF THE VEHICLE IS NOT EQUIPPED WITH FUNCTIONAL HOOD PIN:

Hood trigger (Output Status).

UNIT OPTION	DESCRIPTION		
		C1	OEM Remote status (Lock/Unlock) monitoring
		D6	Push-to-Start



ATTENTION!

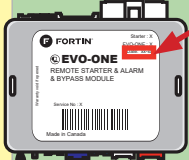

DATE: XX-XX

UNIT OPTION	DESCRIPTION
E5	OFF
	ON

By default DEACTIVATED

MANUFACTURED MODULES BETWEEN: 04/2018 TO 04/2019

Program remote starter option for R.S. OEM REMOTE STAND ALONE:	38	2	Enable Press 3x Lock to remote start with the OEM remote.
---	-----------	----------	---

MANDATORY INSTALL

*** HOOD PIN**  **HOOD STATUS:** THE HOOD PIN SWITCH (INCLUDED) MUST BE INSTALLED IF THE VEHICLE CAN BE REMOTE STARTED WITH THE HOOD OPEN, SET FUNCTION **A11** TO OFF.

A11 **OFF**

SECURITY STICKER

 Included

Notice: the installation of safety elements are mandatory. The hood pin and the sticker are essential security elements and must be installed.

THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.

DESCRIPTION

Parts required (Not included) PAGE







WIRE TO WIRE DIAGRAM

1X 1k Ohm Resistorr	Page 3
---------------------	--------


THARNESS DIAGRAM

THARNESS THAR-GM6	1x THAR-GM6	Page 4
-------------------	-------------	--------


BCM

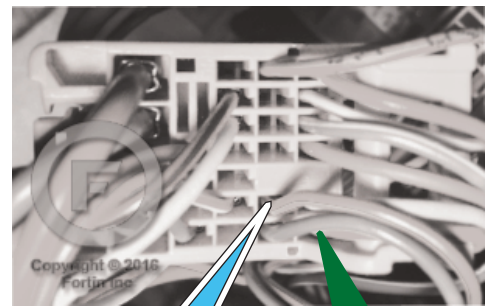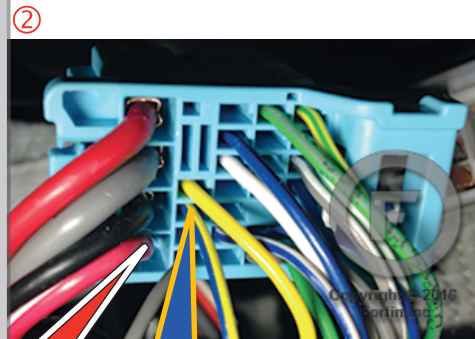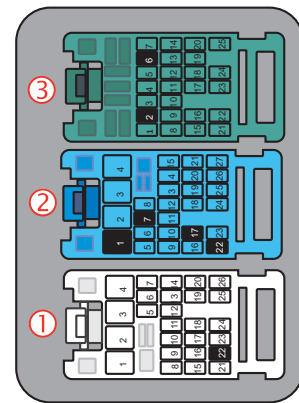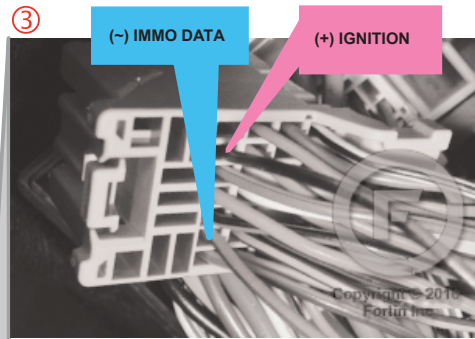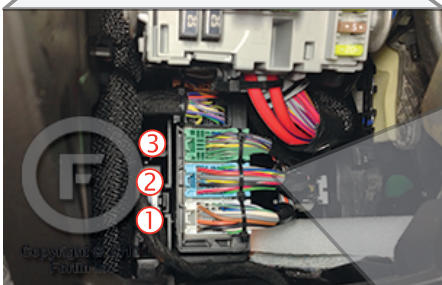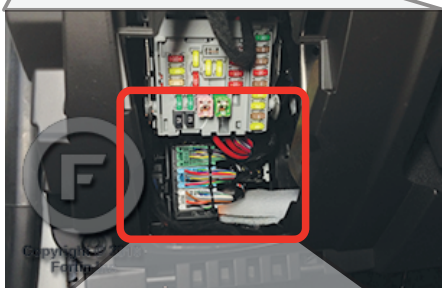

AUTOMATIC TRANSMISSION WIRING CONNECTION

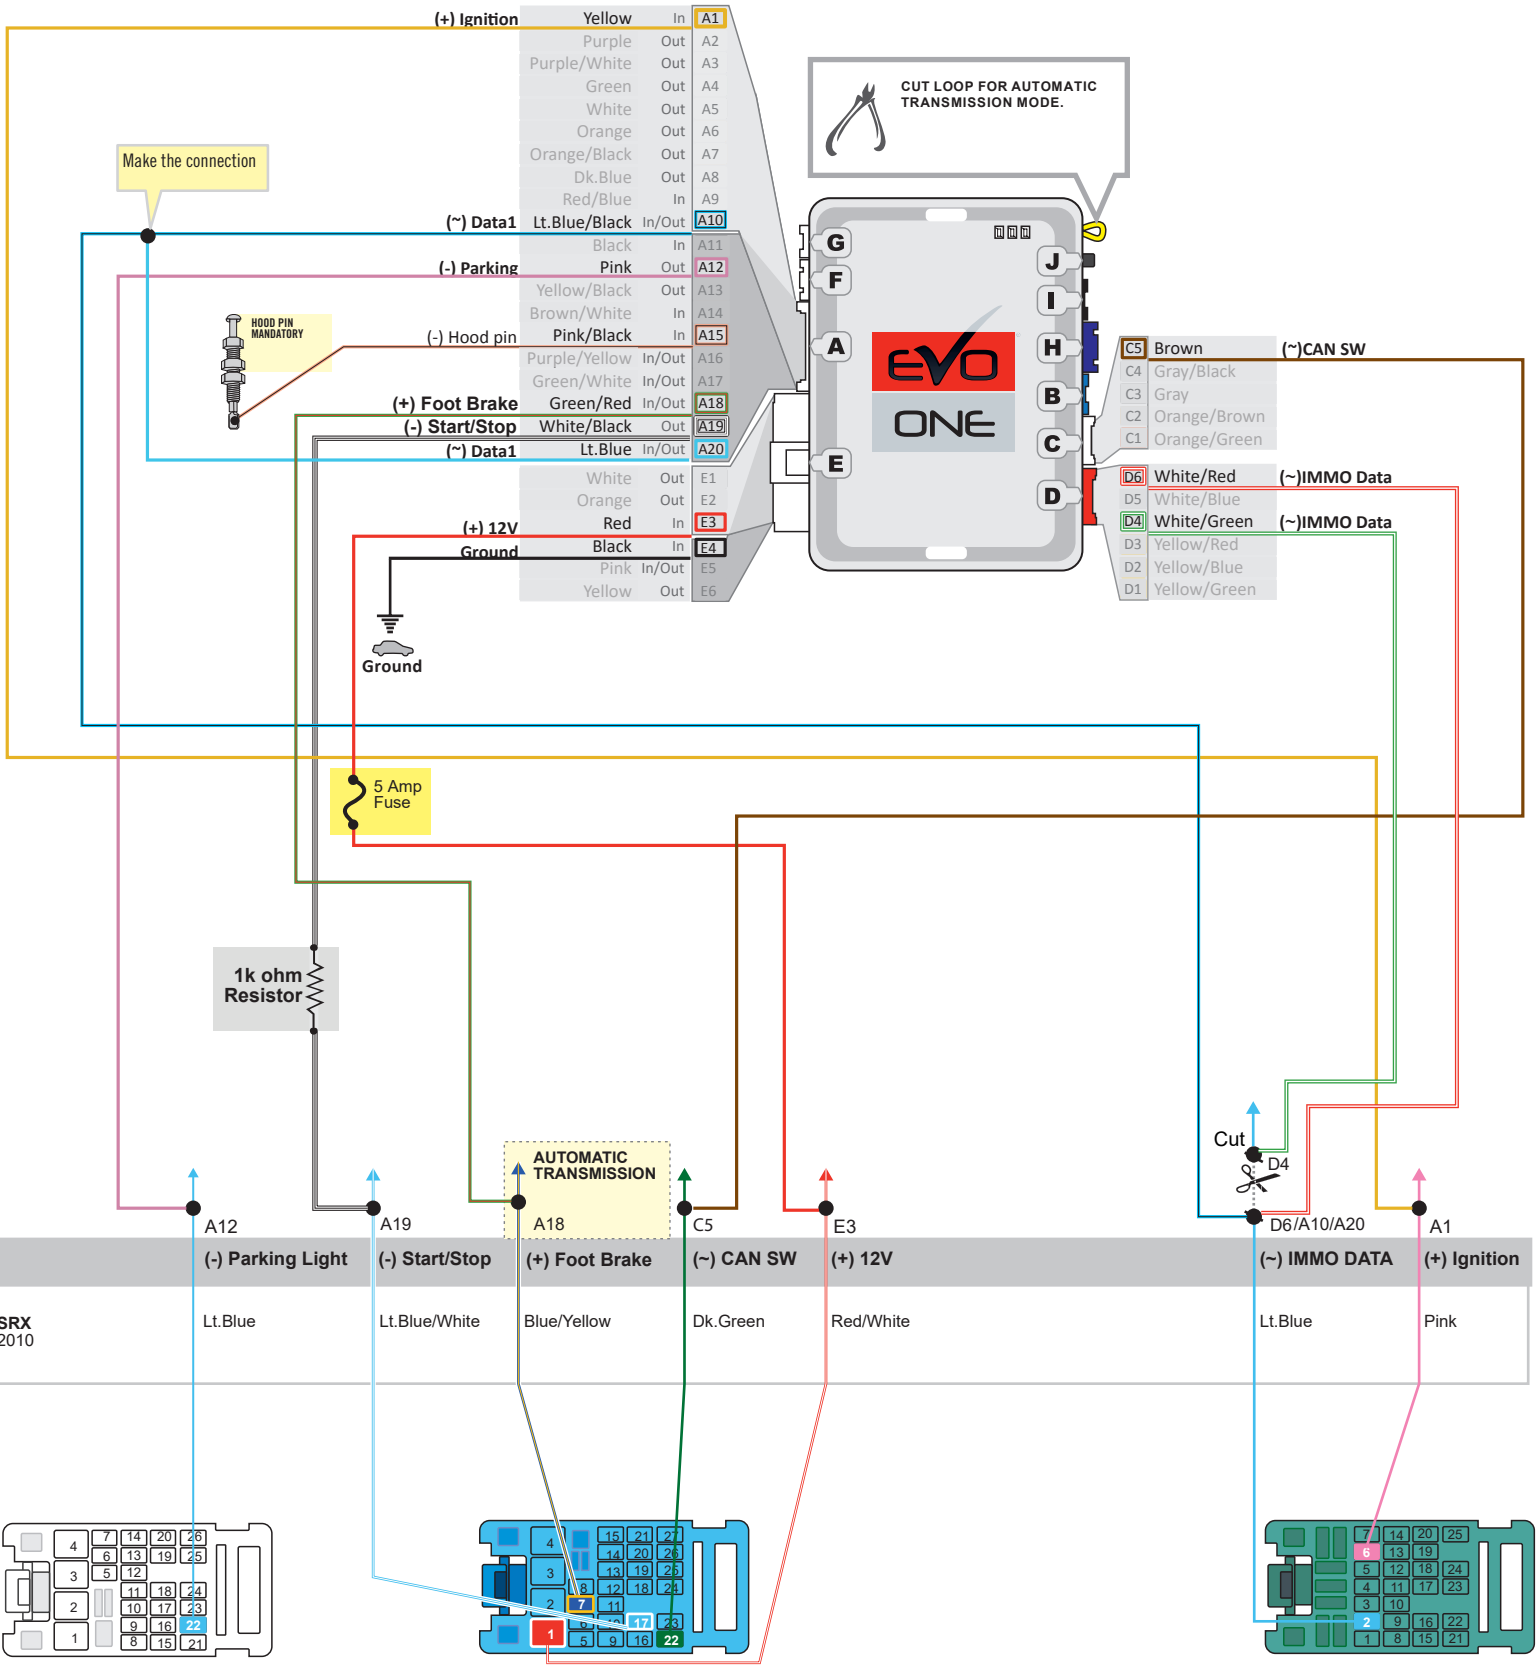





① Back view, 26-Pin White connector, at BCM.

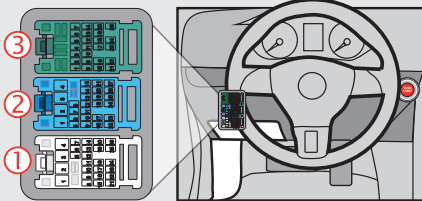


② Back view, 27-Pin Blue connector, at BCM.

③ Back view, 25-Pin Green connector, at BCM.

THAR-GM6 | WIRING CONNECTION

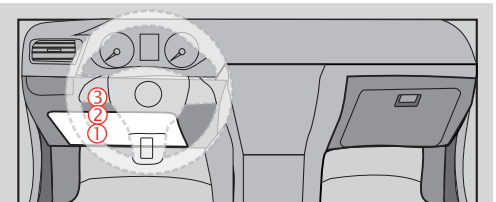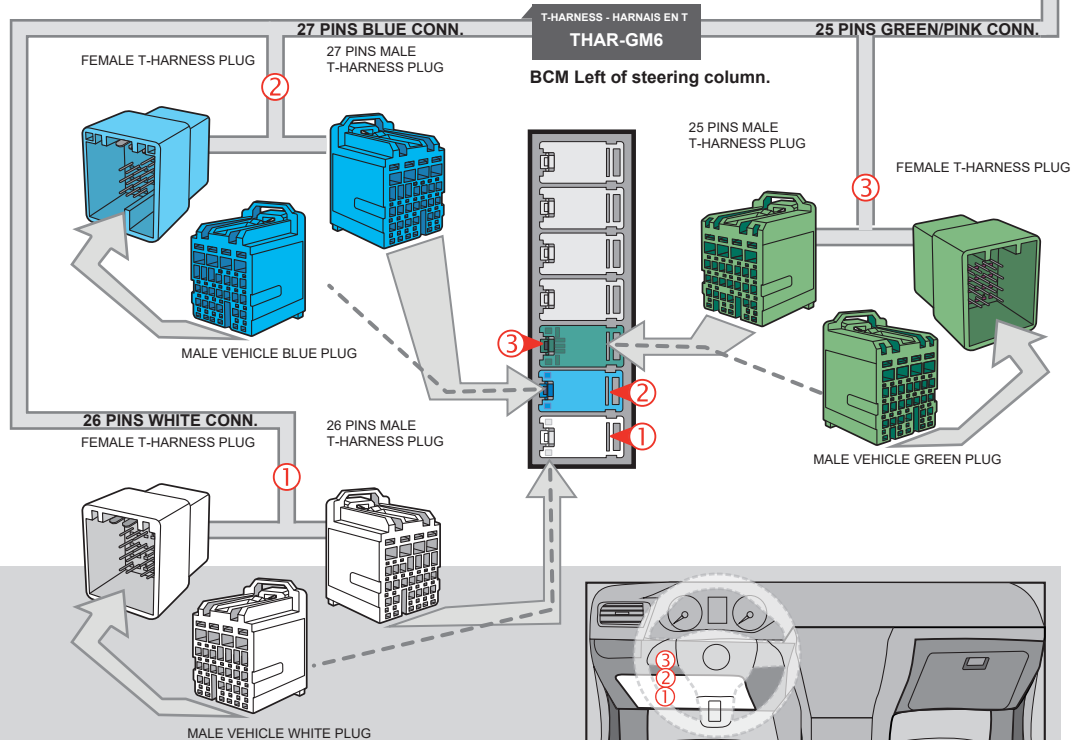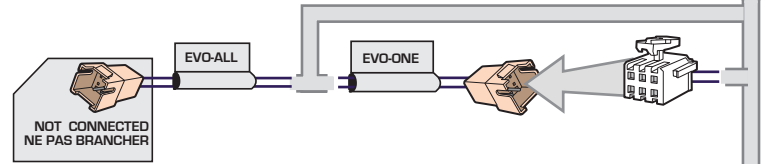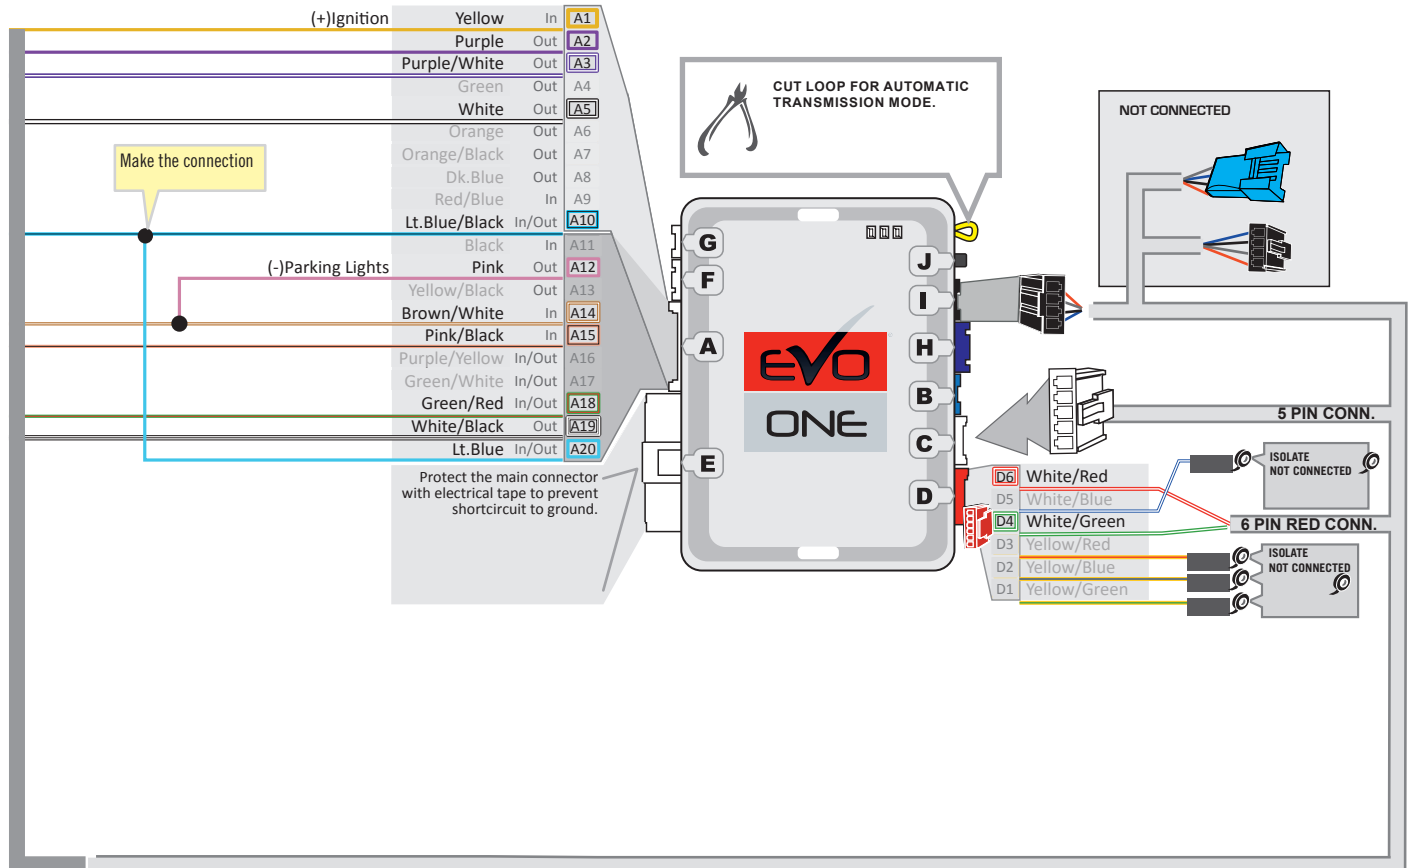


KEY BYPASS PROGRAMMING PROCEDURE 1/2

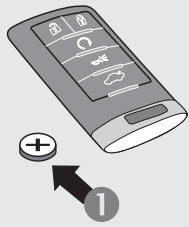


1 Remove the battery from the OEM remote.

2 Place the OEM remote into the transmitter pocket of the center console.

Refer to vehicle user guide for keyport location.

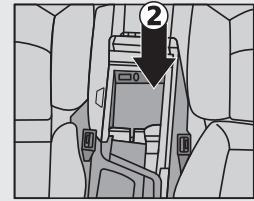


1

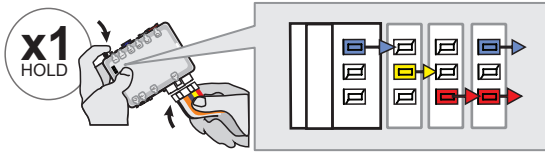

Press and hold the programming button:
Insert the 6-Pin Main connector.


↳The LEDs will alternate between BLUE, RED, YELLOW & BLUE/RED flashes.

2

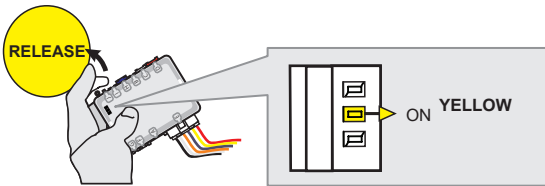


Release the programming button when the LED is YELLOW.

 If the LED is not solid YELLOW disconnect the 6-Pin connector (Main-Harness) and go back to step 1.




3

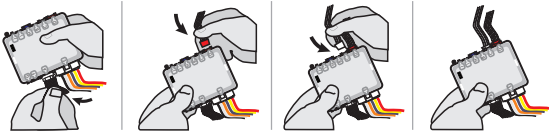

Insert the required remaining connectors.

4

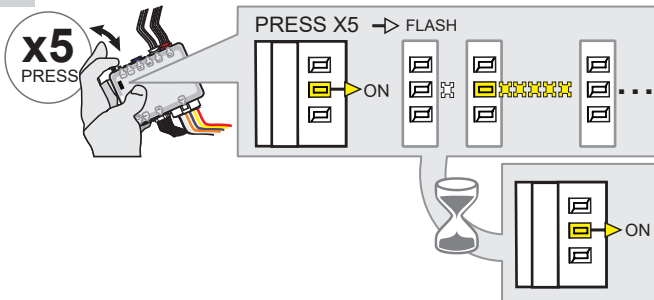


Press and release the programming button five (5x) times.

↳The YELLOW LED will flash 5 times each second.


↳WAIT for the YELLOW LED to turn ON solide.

 5



Open the driver door.

6

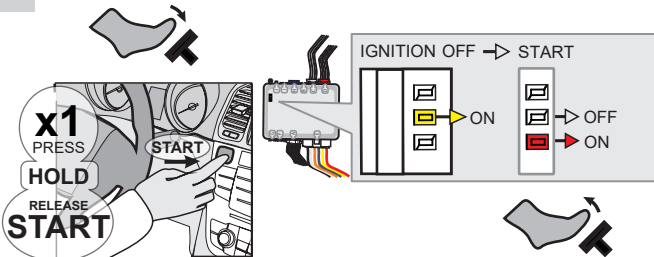

Press the foot-brake pedal.

Press the Push-to-Start button until the engine start.

Release the foot-brake pedal.

↳The RED LED will turn ON.
↳The YELLOW LED will turn OFF.


KEY BYPASS PROGRAMMING PROCEDURE 2/2

7




Press the Push-to-Start button until the engine turn OFF.

8

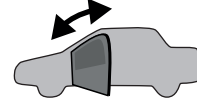

Close and open the driver door.

9

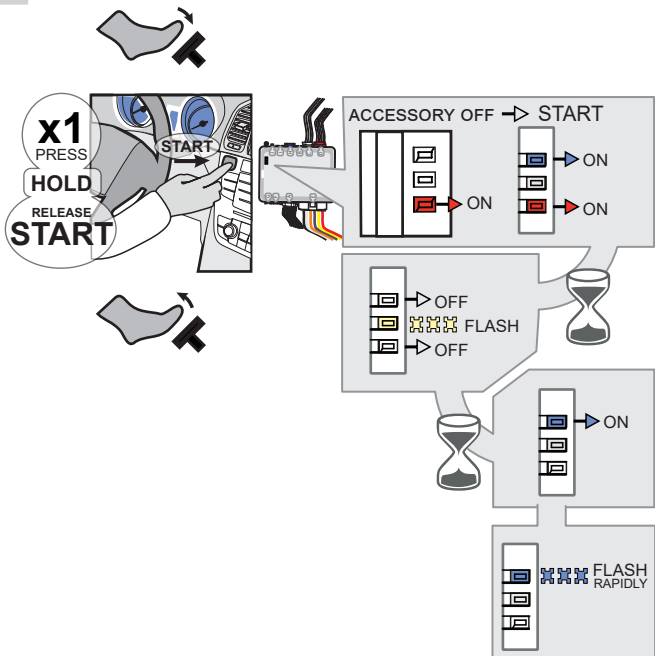


Press the foot-brake pedal.

Press the Push-to-Start button until the engine start.

Release the foot-brake pedal.

- ↳ The BLUE LED will turn ON.
- ↳ The BLUE LED will turn OFF. The RED LED will turn OFF.
- ↳ The YELLOW LED will flash rapidly
- ↳ The BLUE LED will turn ON.
- ↳ The BLUE LED will flash rapidly

10

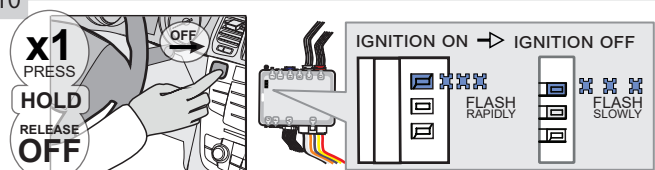

Press the Push-to-Start button until the engine turn OFF.


- ↳ The BLUE LED will flash slowly

11



Disconnect all connectors and after the 6-Pin (Main-Harness) or the 4-Pin Data-link connector.

12

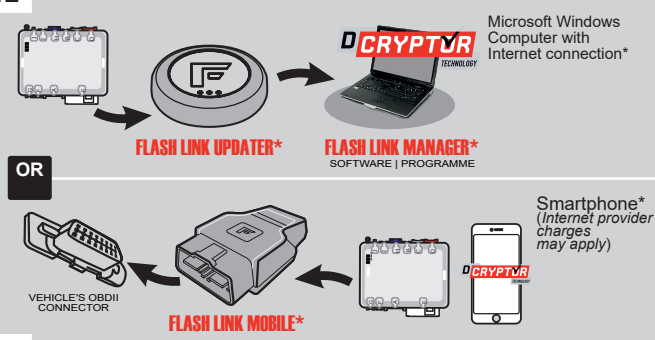

Microsoft Windows Computer with Internet connection*

FLASH LINK UPDATER* FLASH LINK MANAGER*
SOFTWARE | PROGRAMME

OR

Smartphone* (Internet provider charges may apply)


VEHICLE'S OBDII CONNECTOR FLASH LINK MOBILE*

Use the tool: FLASH LINK UPDATER or FLASH LINK MOBILE to visit the DCryptor menu.

*Parts required (not included)

KEY BYPASS PROGRAMMING PROCEDURE 3/3

13

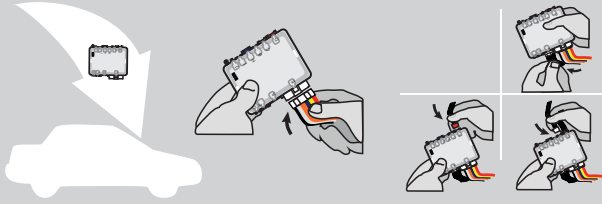

AFTER DCRYPTOR PROGRAMMING COMPLETED
Go back to the vehicle and **reconnect** the 6-Pin (Main-Harness) or the 4-pins (Data-Link) connector and after all the remaining connector.



The module is now programmed.




REMOTE STARTER / ALARM VERIFICATION PROCEDURE

Test the remote starter. Remote start the vehicle.

REMOTE STARTER PROGRAMMING PROCEDURE



REFER TO THE **QUICK INSTALL GUIDE** INCLUDED WITH THE MODULE FOR THE REMOTE STARTER PROGRAMMING.

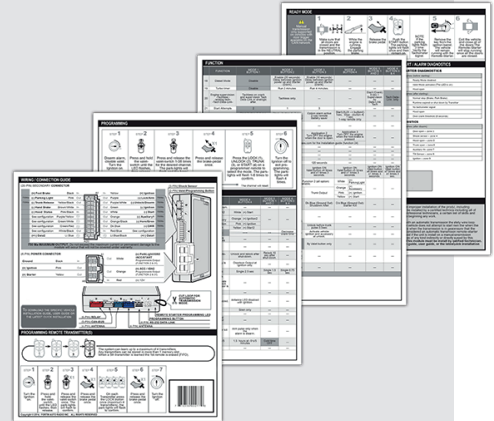

REMOTE STARTER FUNCTIONALITY |



All doors must be closed.

 


Remote start the vehicle.



Unlock the doors with either:

- The OEM remote
- The remote-starter remote
- Or the proximity remote



Enter the vehicle with the Intelligent Key.




The vehicle can now be put in to gear and driven.




If the vehicle is not unlocked with one of these conditions the remote-starter will shut down as soon as any door is opened.

REGULAR INSTALLATION AND THAR-GM6

ADDENDUM - SUGGESTED WIRING CONFIGURATION

VEHICLE	YEARS	Vehicle functions supported in this diagram (functional if equipped)														
		Immobilizer bypass	Lock	Unlock	Arm	Disarm	Parking Light	Trunk (open)	RAP Disable	Tachometer	Door Status	Trunk Status	Hand-Brake Status	Foot-Brake Status	OEM Remote Monitoring	R.S. OEM remote Stand Alone compatible
																
CADILLAC																
SRX	Push-To-Start	2013-2016	•	•	•	•	•	•	•	•	•	•	•	•	•	•





BYPASS FIRMWARE VERSION

70.[41]

GM MINIMUM

To add the firmware version and the options, use the **FLASH LINK UPDATER** or **FLASH LINK MOBILE** tool, sold separately.

	Program bypass option IF THE VEHICLE IS NOT EQUIPPED WITH FUNCTIONAL HOOD PIN:	UNIT OPTION		DESCRIPTION
		A11	OFF	Hood trigger (Output Status).

	Program bypass option:	UNIT OPTION		DESCRIPTION
		C1		OEM Remote status (Lock/Unlock) monitoring
		D6		Push-to-Start



ATTENTION!



DATE: XX-XX

E5	UNIT OPTION		DESCRIPTION
	OFF		By default DEACTIVATED
ON		MANUFACTURED MODULES BETWEEN: 04/2018 TO 04/2019	

Program remote starter option for R.S. OEM REMOTE STAND ALONE:	38	2	Enable Press 3x Lock to remote start with the OEM remote.
--	-----------	----------	---

MANDATORY INSTALL

*** HOOD PIN**



HOOD STATUS: THE HOOD PIN SWITCH (INCLUDED) MUST BE INSTALLED IF THE VEHICLE CAN BE REMOTE STARTED WITH THE HOOD OPEN, SET FUNCTION A11 TO OFF.

A11

OFF

SECURITY STICKER



Included

Notice: the installation of safety elements are mandatory. The hood pin and the sticker are essential security elements and must be installed.

THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.

DESCRIPTION

Parts required (Not included) PAGE


WIRE TO WIRE DIAGRAM

1X 1k Ohm Resistorr	Page 3
---------------------	--------





THARNESS DIAGRAM

THARNESS THAR-GM6	1x THAR-GM6	Page 4
-------------------	-------------	--------


BCM

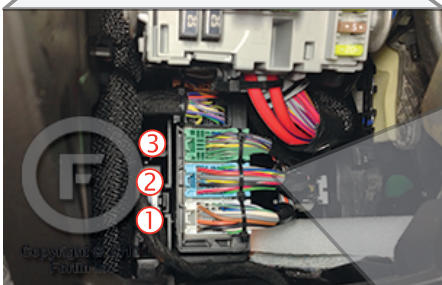


SRX
2013-2016

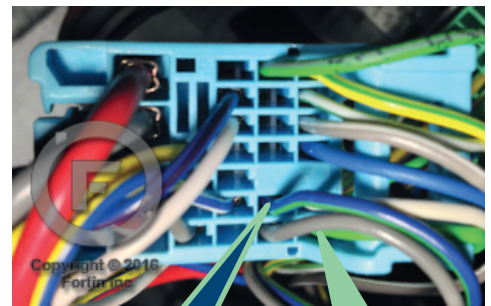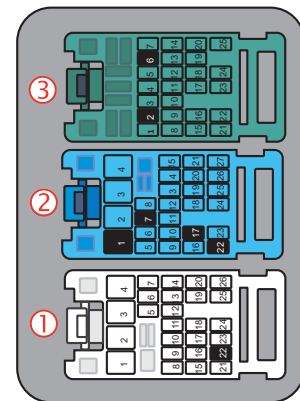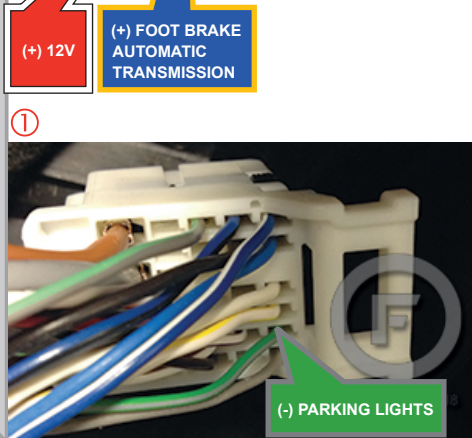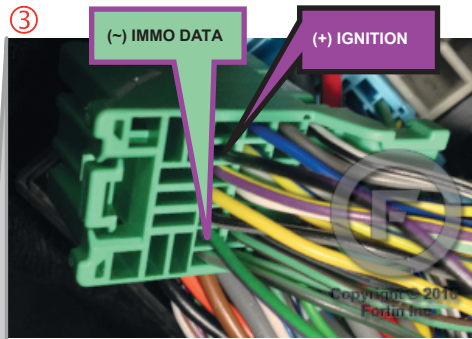

AUTOMATIC TRANSMISSION WIRING CONNECTION

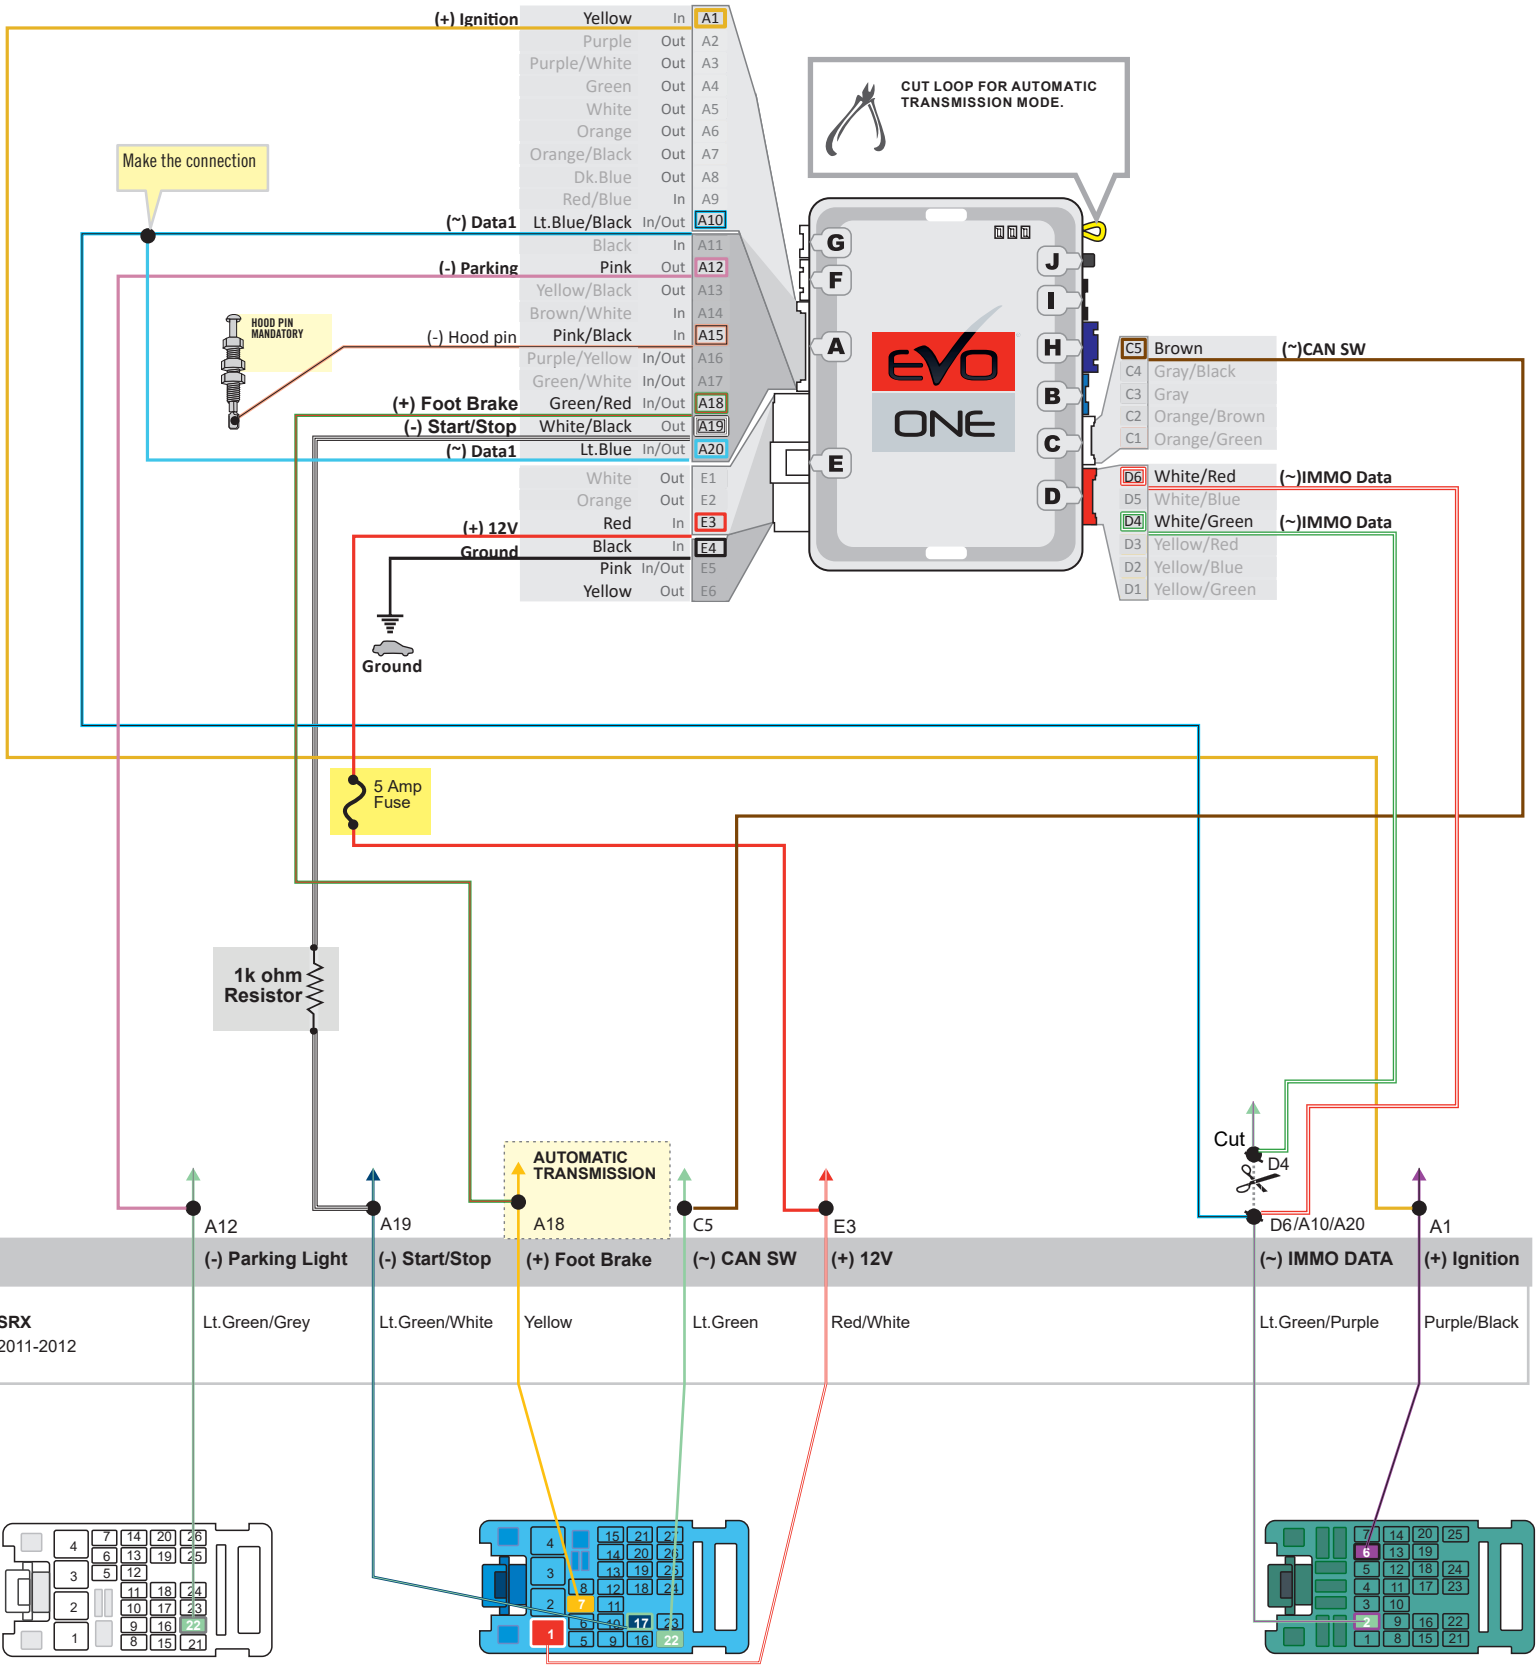





① Back view, 26-Pin White connector, at BCM.

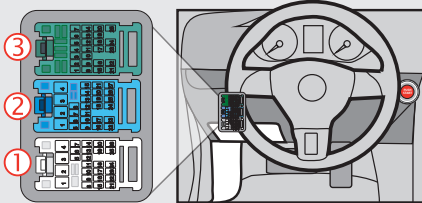


② Back view, 27-Pin Blue connector, at BCM.

③ Back view, 25-Pin Green connector, at BCM.

THAR-GM6 | WIRING CONNECTION

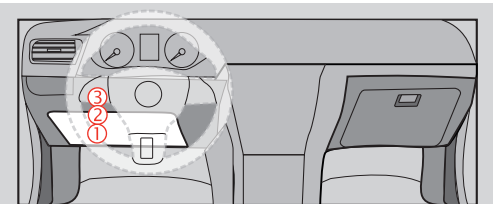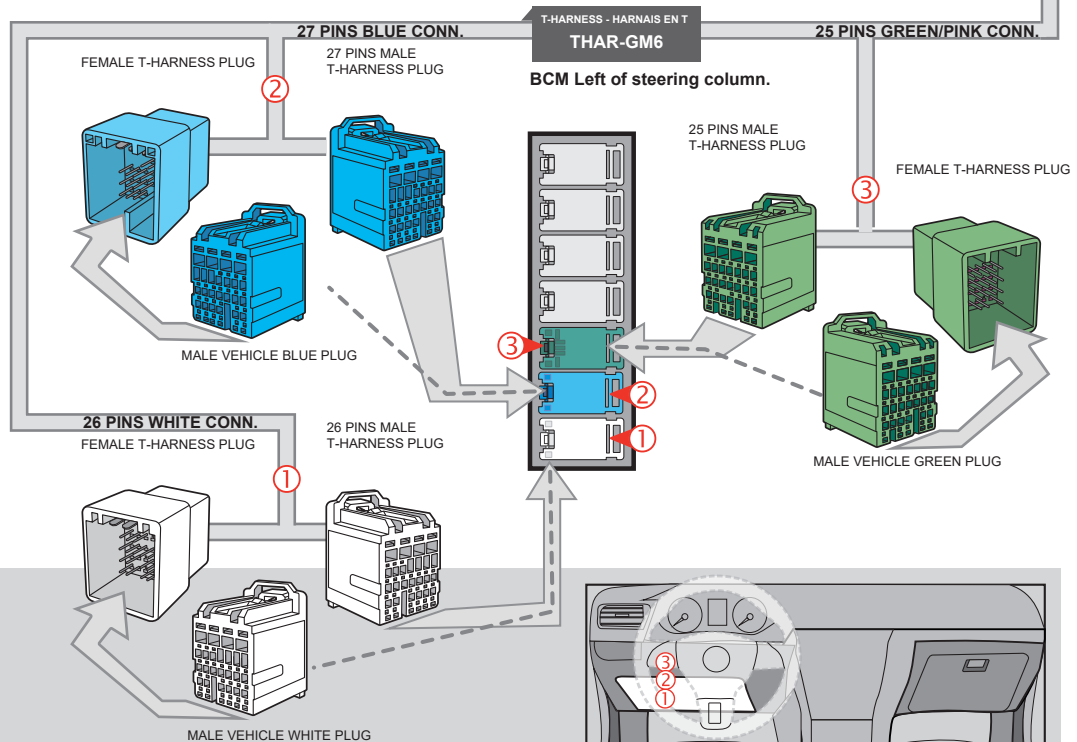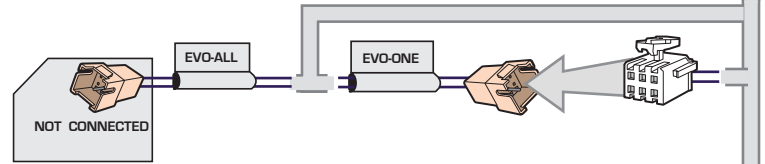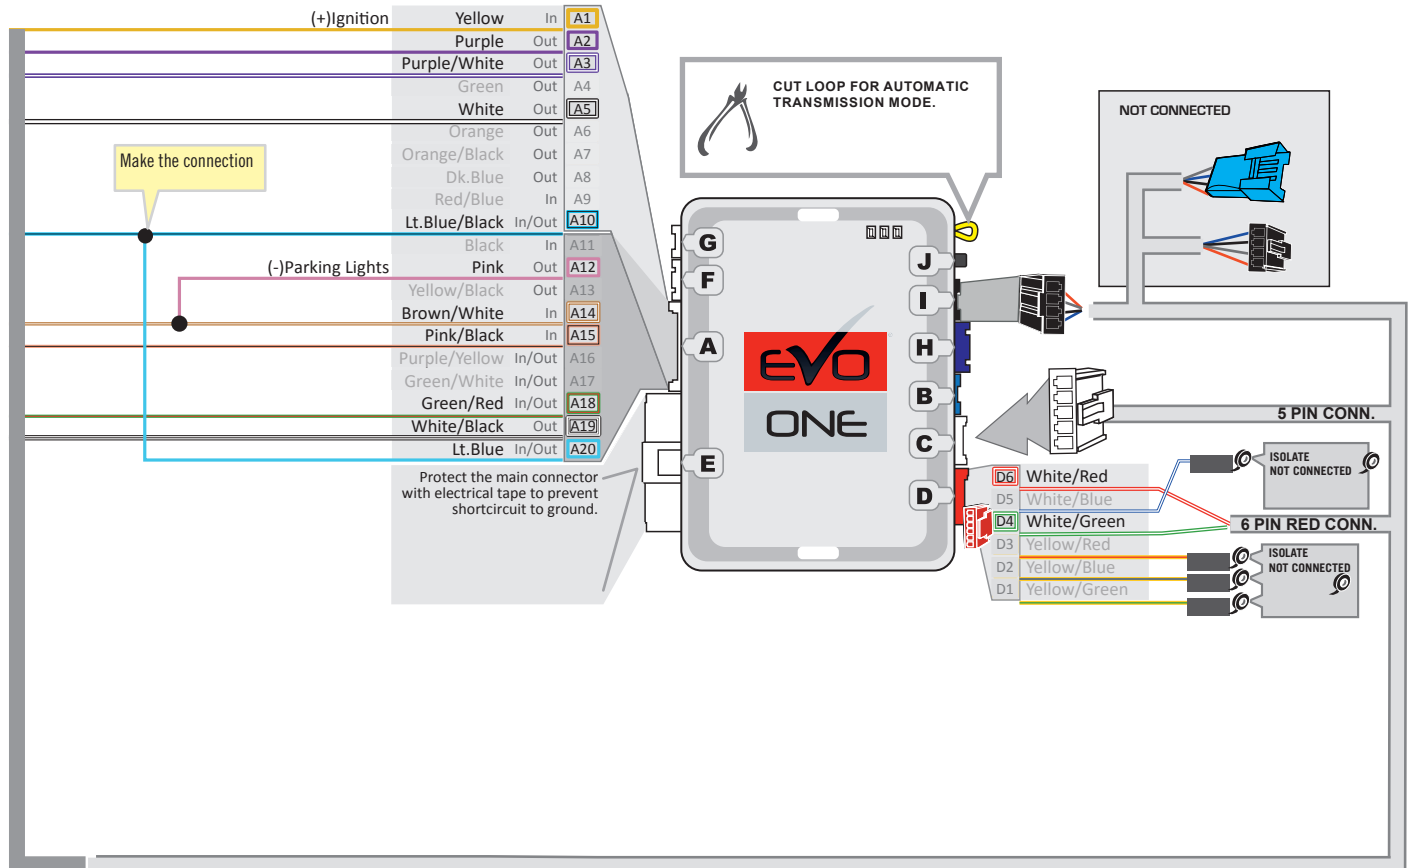


KEY BYPASS PROGRAMMING PROCEDURE 1/2

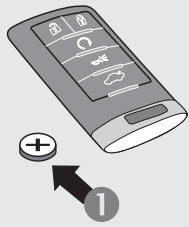


1 Remove the battery from the OEM remote.

2 Place the OEM remote into the transmitter pocket of the center console.

Refer to vehicle user guide for keyport location.

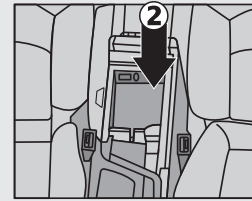


1

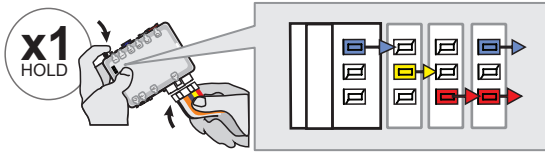

Press and hold the programming button:
Insert the 6-Pin Main connector.


↳The LEDs will alternate between BLUE, RED, YELLOW & BLUE/RED flashes.

2

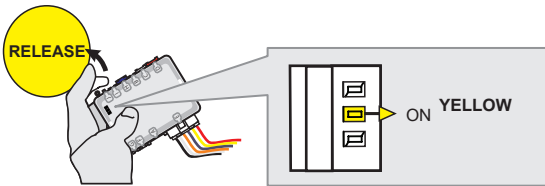


Release the programming button when the LED is YELLOW.

 If the LED is not solid YELLOW **disconnect** the 6-Pin connector (Main-Harness) and go back to step 1.




3

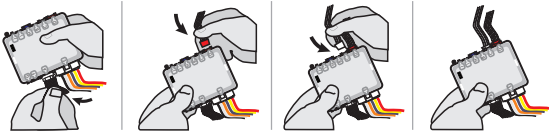

Insert the required remaining connectors.

4

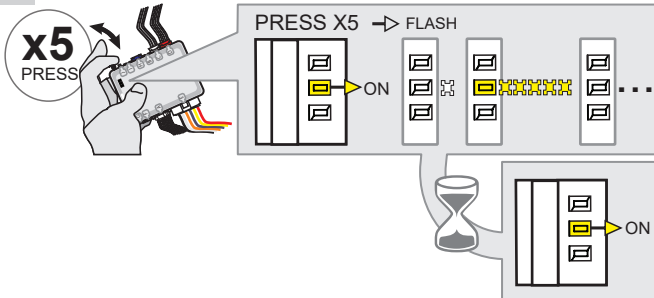


Press and release the programming button five (5x) times.

↳The YELLOW LED will flash 5 times each second.


↳**WAIT** for the YELLOW LED to turn ON solide.

 5



Open the driver door.

6

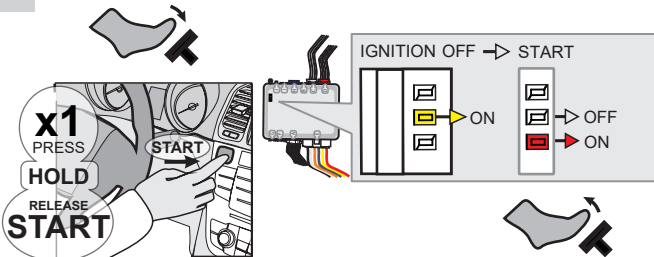

Press the foot-brake pedal.

Press the Push-to-Start button until the engine start.

Release the foot-brake pedal.

↳The RED LED will turn ON.
↳The YELLOW LED will turn OFF.


KEY BYPASS PROGRAMMING PROCEDURE 2/2

7




Press the Push-to-Start button until the engine turn OFF.

8

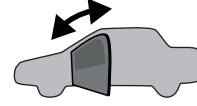

Close and open the driver door.

9

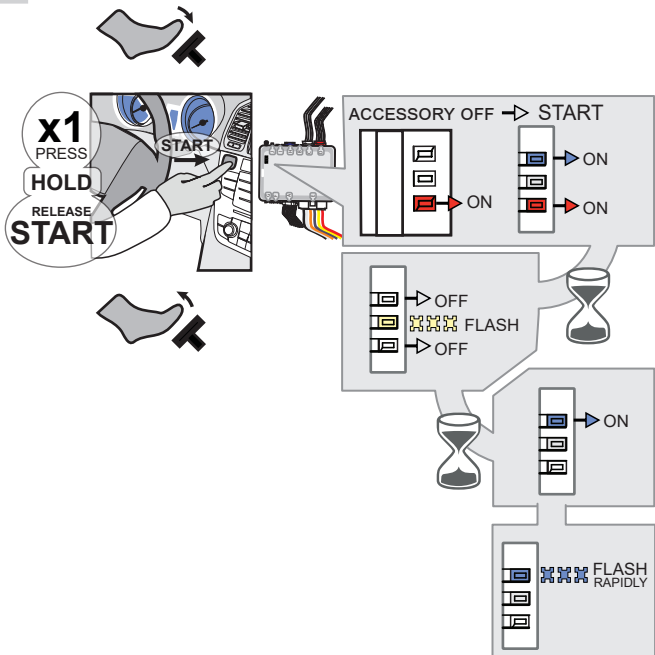


Press the foot-brake pedal.

Press the Push-to-Start button until the engine start.

Release the foot-brake pedal.

- ↳ The BLUE LED will turn ON.
- ↳ The BLUE LED will turn OFF. The RED LED will turn OFF.
- ↳ The YELLOW LED will flash rapidly
- ↳ The BLUE LED will turn ON.
- ↳ The BLUE LED will flash rapidly

10

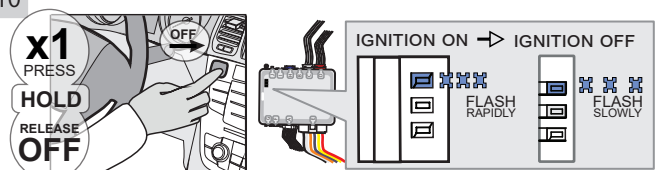

Press the Push-to-Start button until the engine turn OFF.


- ↳ The BLUE LED will flash slowly

11



Disconnect all connectors and after the 6-Pin (Main-Harness) or the 4-Pin Data-link connector.

12

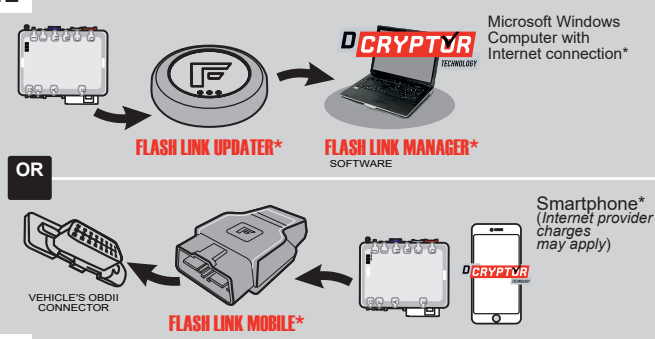

Microsoft Windows Computer with Internet connection*

FLASH LINK UPDATER* FLASH LINK MANAGER* SOFTWARE

OR


Smartphone* (Internet provider charges may apply)

VEHICLE'S OBDII CONNECTOR FLASH LINK MOBILE*

Use the tool: FLASH LINK UPDATER or FLASH LINK MOBILE to visit the DCryptor menu.

*Parts required (not included)

13

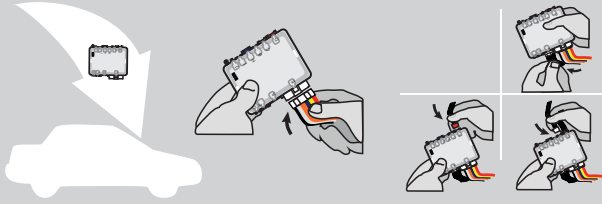

AFTER DCRYPTOR PROGRAMMING COMPLETED
 Go back to the vehicle and **reconnect** the 6-Pin (Main-Harness) or the 4-pins (Data-Link) connector and after all the remaining connector.



The module is now programmed.




REMOTE STARTER / ALARM VERIFICATION PROCEDURE

Test the remote starter. Remote start the vehicle.

REMOTE STARTER PROGRAMMING PROCEDURE



REFER TO THE **QUICK INSTALL GUIDE** INCLUDED WITH THE MODULE FOR THE REMOTE STARTER PROGRAMMING.

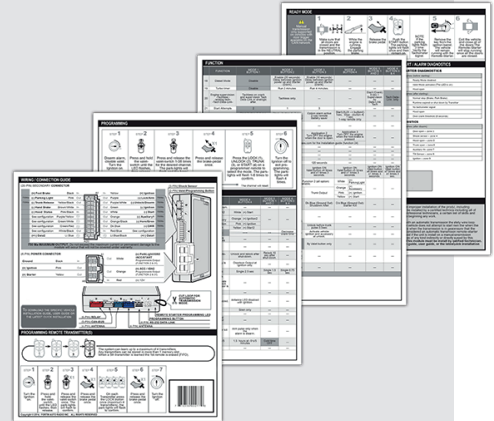

REMOTE STARTER FUNCTIONALITY |



All doors must be closed.

 


Remote start the vehicle.



Unlock the doors with either:

- The OEM remote
- The remote-starter remote
- Or the proximity remote



Enter the vehicle with the Intelligent Key.




The vehicle can now be put in to gear and driven.




If the vehicle is not unlocked with one of these conditions the remote-starter will shut down as soon as any door is opened.

REGULAR INSTALLATION AND THAR-GM6

ADDENDUM - SUGGESTED WIRING CONFIGURATION

VEHICLE	YEARS	Vehicle functions supported in this diagram (functional if equipped)														
		Immobilizer bypass	Lock	Unlock	Arm	Disarm	Parking Light	Trunk (open)	RAP Disable	Tachometer	Door Status	Trunk Status	Hand-Brake Status	Foot-Brake Status	OEM Remote Monitoring	R.S. OEM remote Stand Alone compatible
																
CADILLAC																
XTS	Push-To-Start	2013-2018	•	•	•	•	•	•	•	•	•	•	•	•	•	•





BYPASS FIRMWARE VERSION


70.[41]

GM MINIMUM

To add the firmware version and the options, use the **FLASH LINK UPDATER** or **FLASH LINK MOBILE** tool, sold separately.

	Program bypass option IF THE VEHICLE IS NOT EQUIPPED WITH FUNCTIONAL HOOD PIN:	UNIT OPTION	DESCRIPTION
		A11	<input type="checkbox"/> OFF
			Hood trigger (Output Status).

	Program bypass option:	UNIT OPTION	DESCRIPTION
		C1	OEM Remote status (Lock/Unlock) monitoring
		D6	Push-to-Start



ATTENTION!



DATE: XX-XX

	UNIT OPTION	DESCRIPTION
	E5	<input type="checkbox"/> OFF
		<input type="checkbox"/> ON
		By default DEACTIVATED
		MANUFACTURED MODULES BETWEEN: 04/2018 TO 04/2019

Program remote starter option for R.S. OEM REMOTE STAND ALONE:	38	2	Enable Press 3x Lock to remote start with the OEM remote.
---	----	---	---

MANDATORY INSTALL

*** HOOD PIN**



HOOD STATUS: THE HOOD PIN SWITCH (INCLUDED) MUST BE INSTALLED IF THE VEHICLE CAN BE REMOTE STARTED WITH THE HOOD OPEN, SET FUNCTION A11 TO OFF.

A11

OFF

NON

SECURITY STICKER



Included

Notice: the installation of safety elements are mandatory. The hood pin and the sticker are essential security elements and must be installed.

THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.

DESCRIPTION

Parts required (Not included) PAGE



WIRE TO WIRE DIAGRAM

1X 1k Ohm Resistorr	Page 3
---------------------	--------






THARNES DIAGRAM

THARNES THAR-GM6	1x THAR-GM6	Page 4
------------------	-------------	--------


BCM

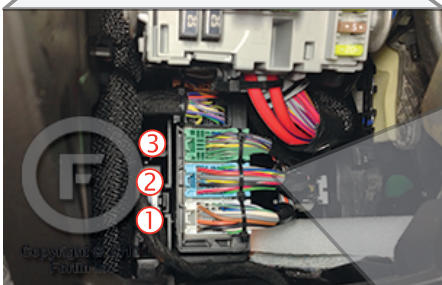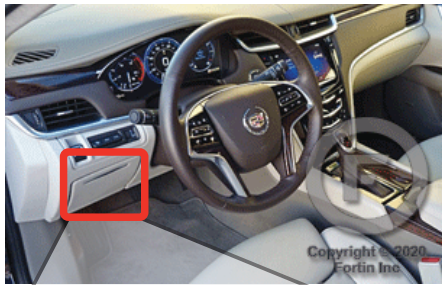


XTS

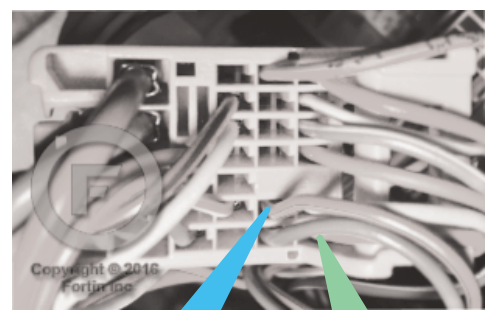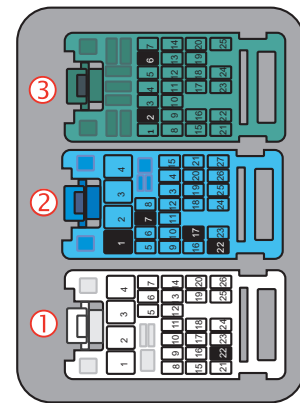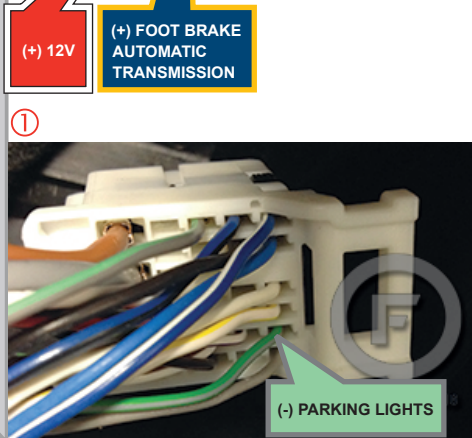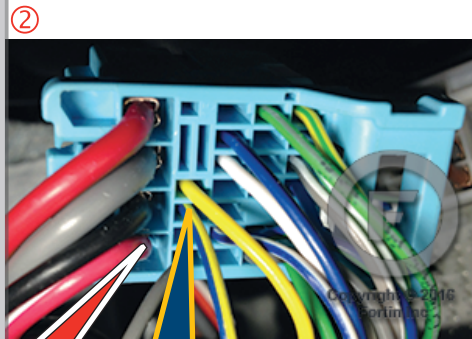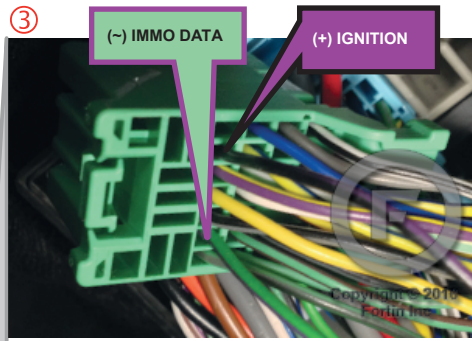

AUTOMATIC TRANSMISSION WIRING CONNECTION

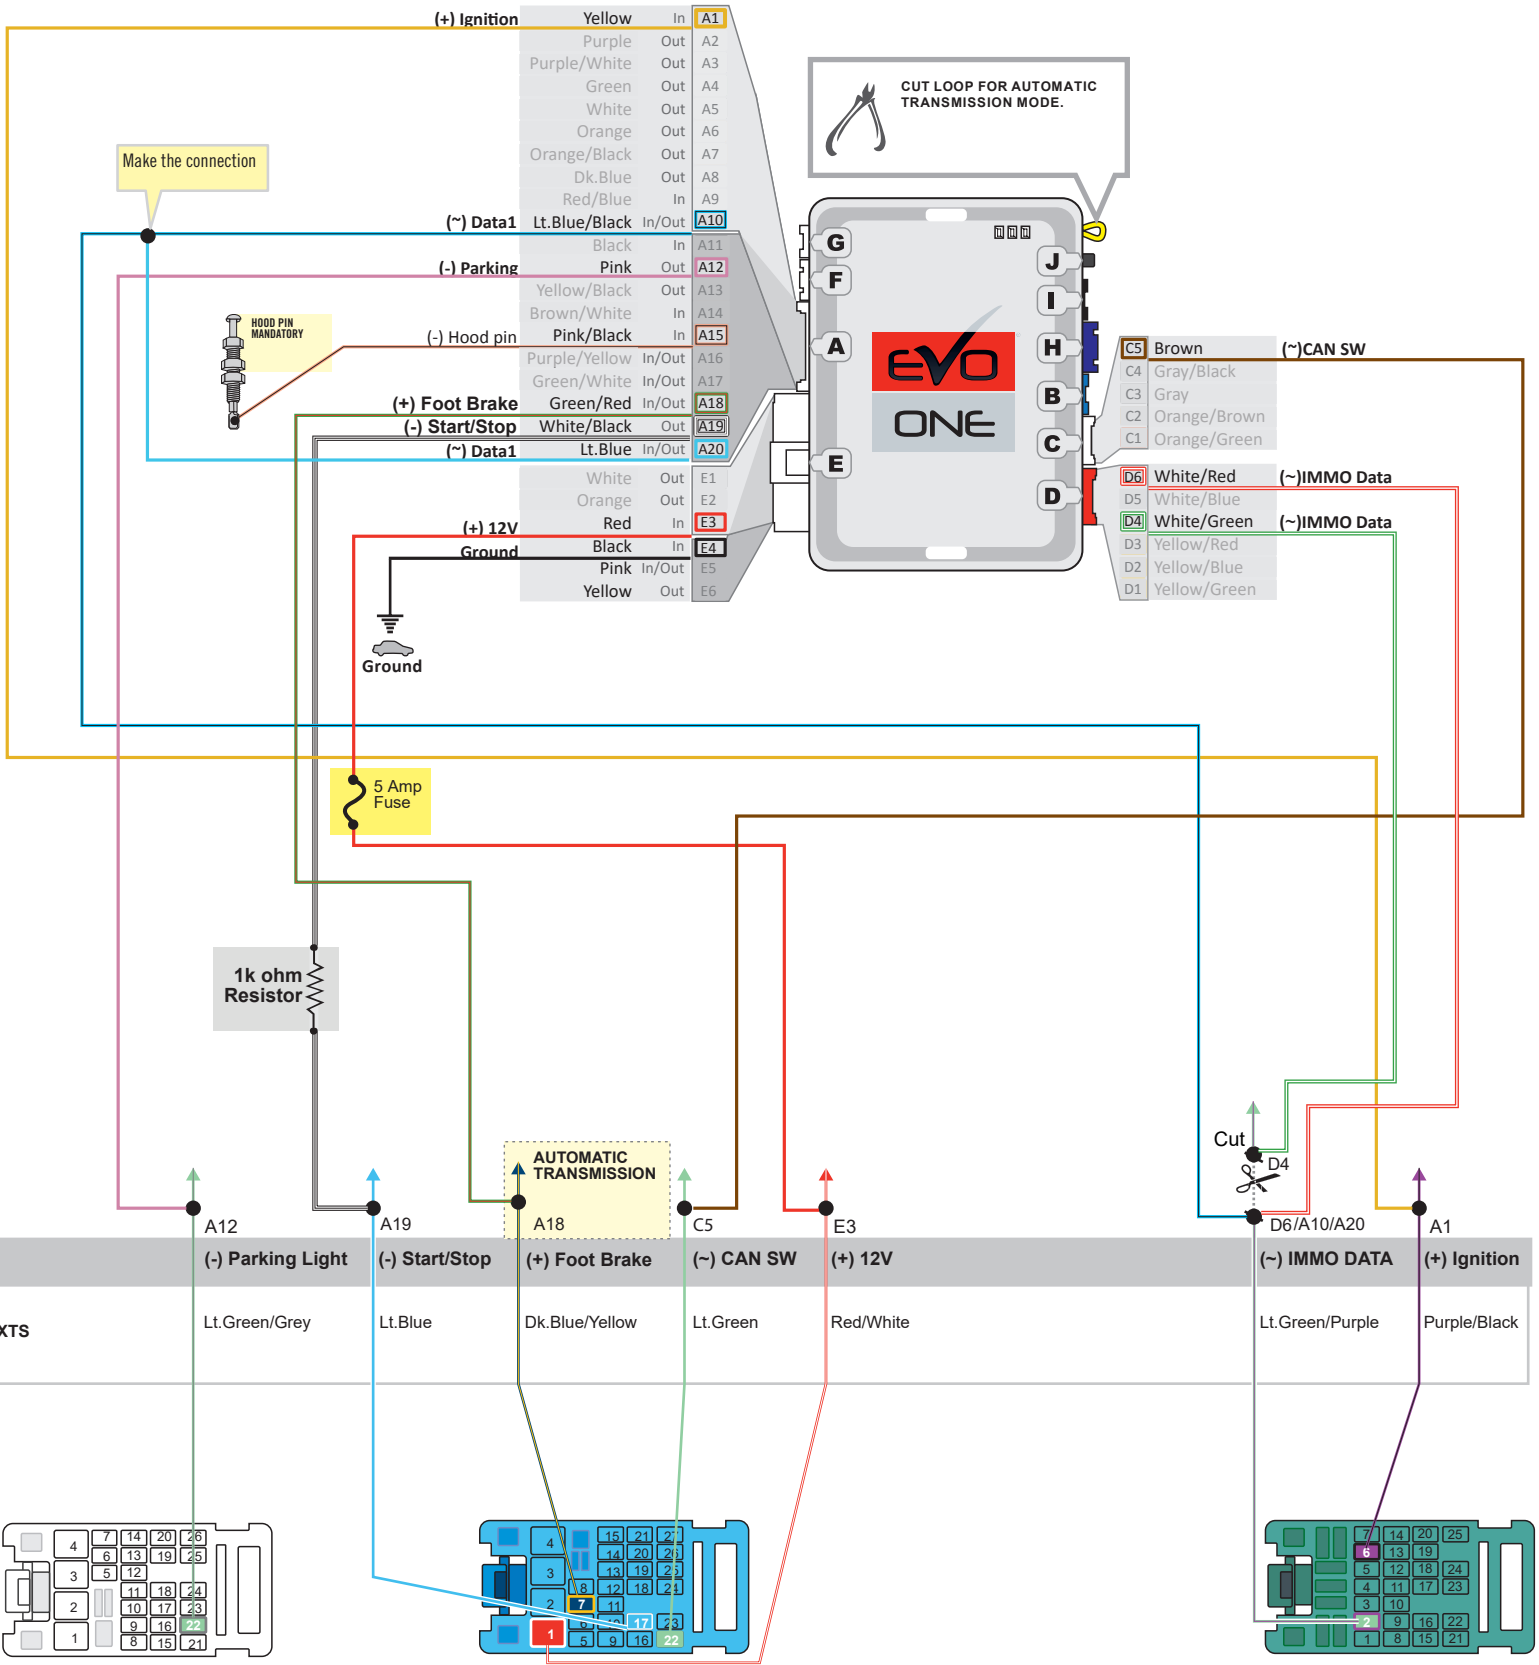





① Back view, 26-Pin White connector, at BCM.

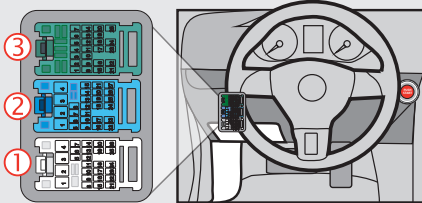

② Back view, 27-Pin Blue connector, at BCM.

③ Back view, 25-Pin Green connector, at BCM.


THAR-GM6 | WIRING CONNECTION

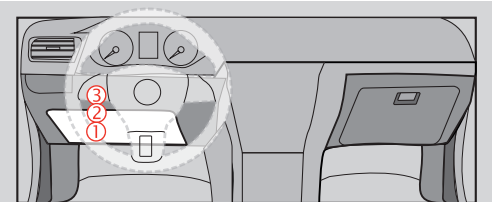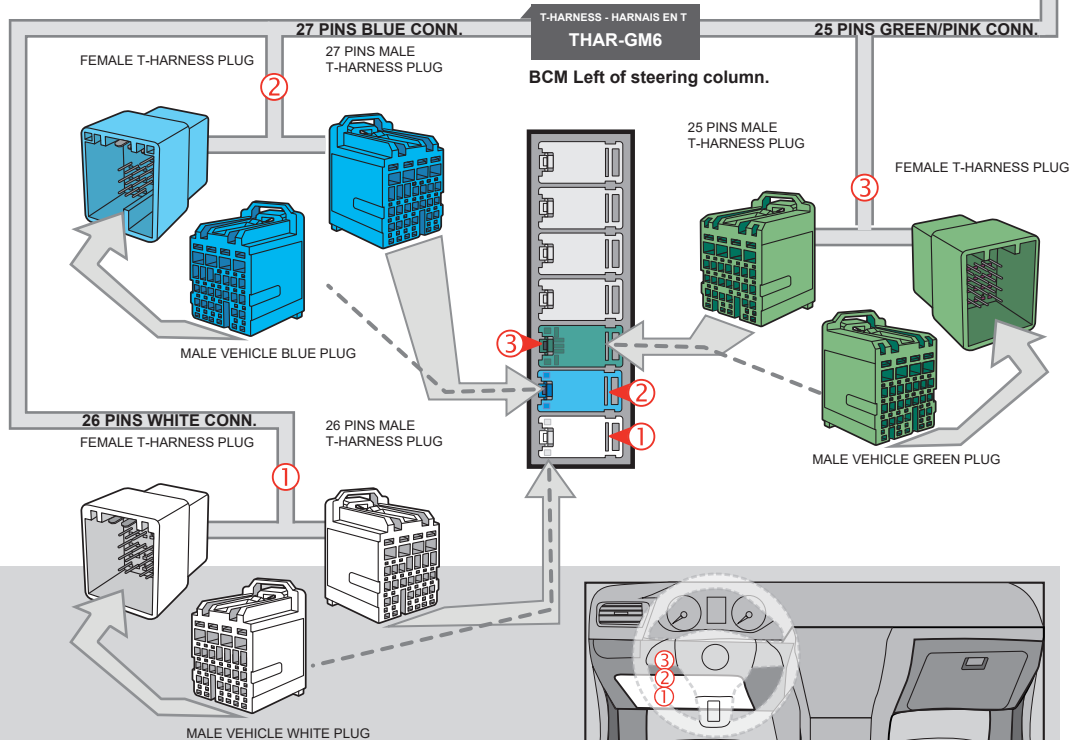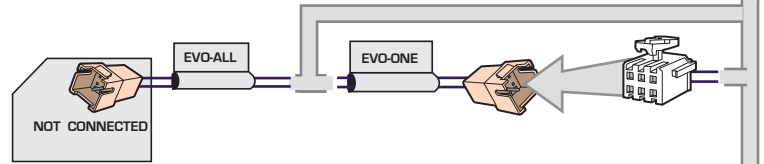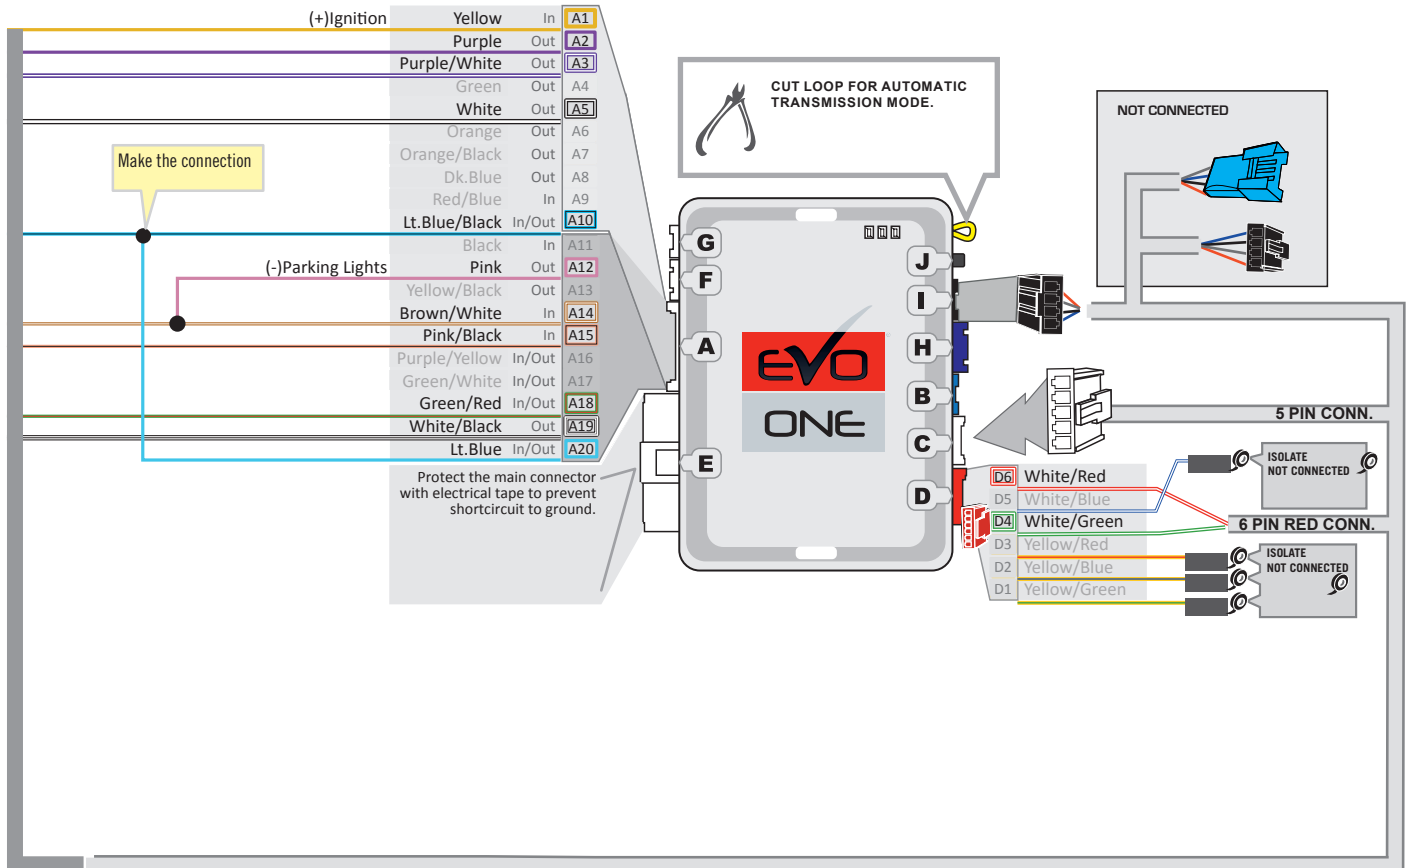


KEY BYPASS PROGRAMMING PROCEDURE 1/2



- 1 Remove the battery from the OEM remote.
- 2 Place the OEM remote into the transmitter pocket of the center console.
Refer to vehicle user guide for keyport location.

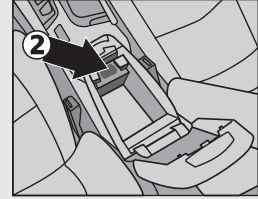


1

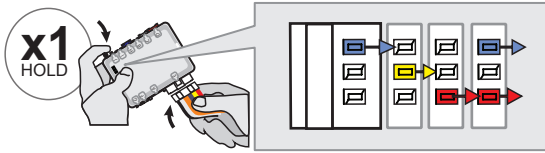

Press and hold the programming button:
Insert the 6-Pin Main connector.


↳The LEDs will alternate between BLUE, RED, YELLOW & BLUE/RED flashes.

2

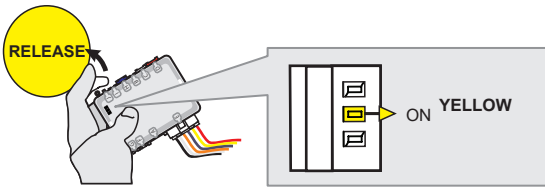


Release the programming button when the LED is YELLOW.

 If the LED is not solid YELLOW **disconnect** the 6-Pin connector (Main-Harness) and go back to step 1.




3

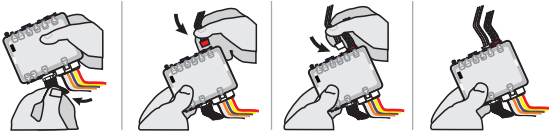

Insert the required remaining connectors.

4

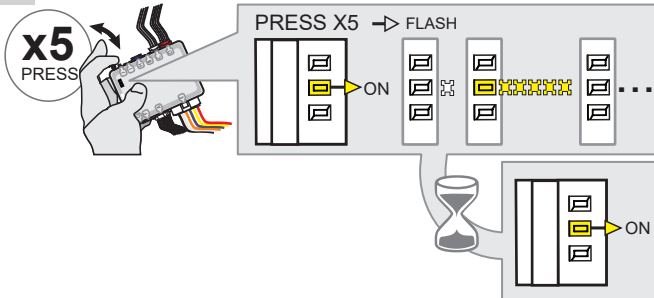


Press and release the programming button five (5x) times.

↳The YELLOW LED will flash 5 times each second.


↳**WAIT** for the YELLOW LED to turn ON solide.

 5



Open the driver door.

6

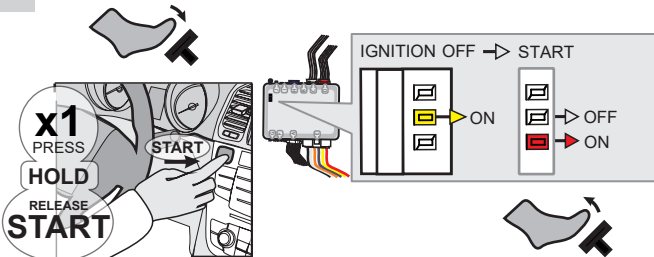

Press the foot-brake pedal.

Press the Push-to-Start button until the engine start.

Release the foot-brake pedal.

↳The RED LED will turn ON.
↳The YELLOW LED will turn OFF.


KEY BYPASS PROGRAMMING PROCEDURE 2/2

7




Press the Push-to-Start button until the engine turn OFF.

8

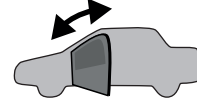

Close and open the driver door.

9

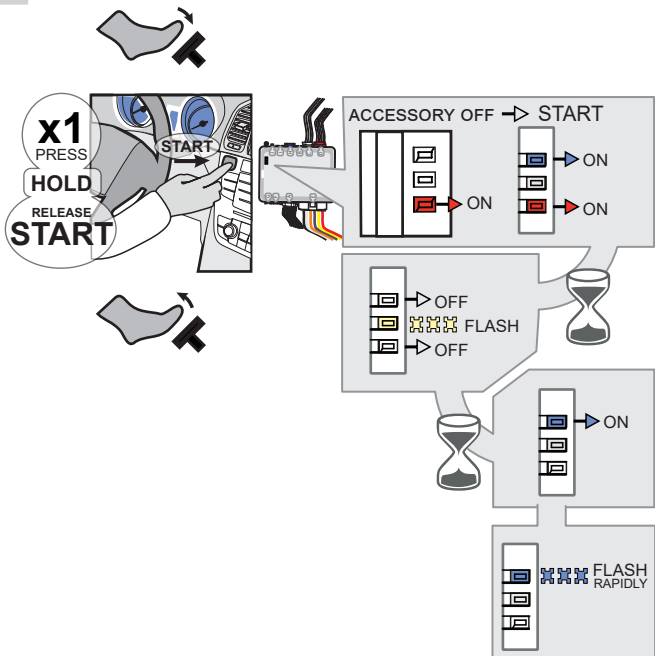


Press the foot-brake pedal.

Press the Push-to-Start button until the engine start.

Release the foot-brake pedal.

- ↳ The BLUE LED will turn ON.
- ↳ The BLUE LED will turn OFF. The RED LED will turn OFF.
- ↳ The YELLOW LED will flash rapidly
- ↳ The BLUE LED will turn ON.
- ↳ The BLUE LED will flash rapidly

10

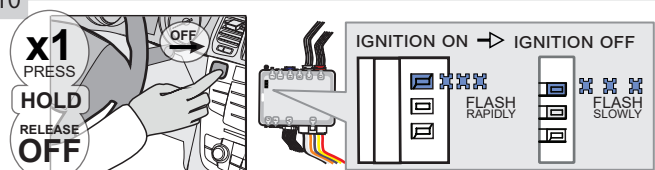

Press the Push-to-Start button until the engine turn OFF.


- ↳ The BLUE LED will flash slowly

11



Disconnect all connectors and after the 6-Pin (Main-Harness) or the 4-Pin Data-link connector.

12

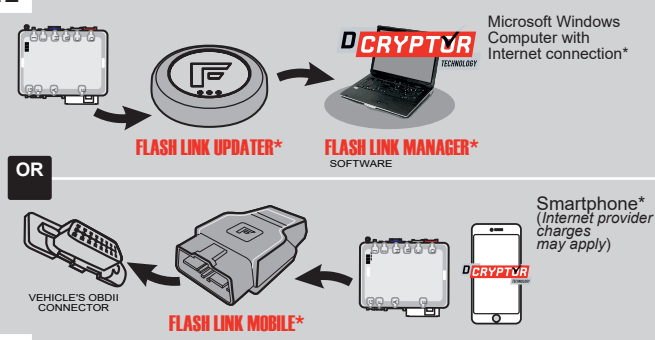

Microsoft Windows Computer with Internet connection*

FLASH LINK UPDATER* FLASH LINK MANAGER* SOFTWARE

OR

Smartphone* (Internet provider charges may apply)


VEHICLE'S OBDII CONNECTOR FLASH LINK MOBILE*

Use the tool: FLASH LINK UPDATER or FLASH LINK MOBILE to visit the DCryptor menu.

*Parts required (not included)

KEY BYPASS PROGRAMMING PROCEDURE 3/3

13

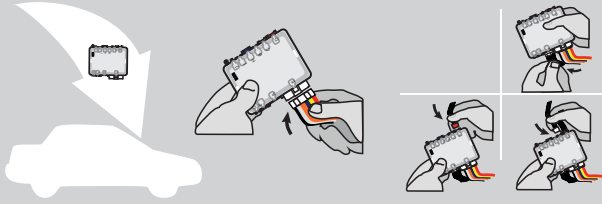

AFTER DCRYPTOR PROGRAMMING COMPLETED
Go back to the vehicle and **reconnect** the 6-Pin (Main-Harness) or the 4-pins (Data-Link) connector and after all the remaining connector.



The module is now programmed.




REMOTE STARTER / ALARM VERIFICATION PROCEDURE

Test the remote starter. Remote start the vehicle.

REMOTE STARTER PROGRAMMING PROCEDURE



REFER TO THE **QUICK INSTALL GUIDE** INCLUDED WITH THE MODULE FOR THE REMOTE STARTER PROGRAMMING.

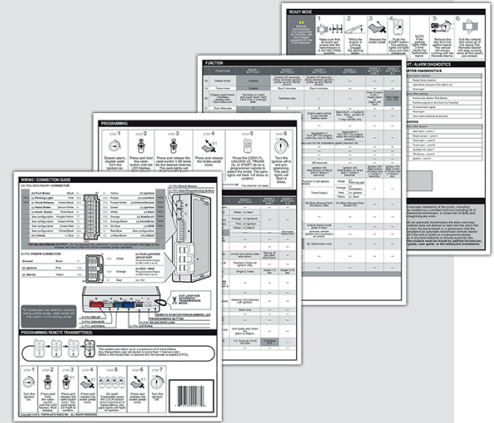

REMOTE STARTER FUNCTIONALITY |



All doors must be closed.

 


Remote start the vehicle.



Unlock the doors with either:

- The OEM remote
- The remote-starter remote
- Or the proximity remote



Enter the vehicle with the Intelligent Key.




The vehicle can now be put in to gear and driven.





If the vehicle is not unlocked with one of these conditions the remote-starter will shut down as soon as any door is opened.


**THAR-GM6 THARNESSE
INSTALLATION**

ADDENDUM - SUGGESTED WIRING CONFIGURATION


	Vehicle functions supported in this diagram (functional if equipped)												
	Immobilizer bypass	Lock	Unlock	Arm	Disarm	Trunk (open)	RAP Disable	Tachometer	Door Status	Trunk Status	Hand-Brake Status	Foot-Brake Status	OEM Remote Monitoring
VEHICLE	YEARS												
GMC													
Acadia	Push-To-Start	2017-2020	•	•	•	•	•	•	•	•	•	•	•

	BYPASS FIRMWARE VERSION	To add the firmware version and the options, use the FLASH LINK UPDATER or FLASH LINK MOBILE tool, sold separately.
	70.[41] GM MINIMUM	

	Program bypass option IF THE VEHICLE IS NOT EQUIPPED WITH FUNCTIONAL HOOD PIN:	UNIT OPTION	DESCRIPTION
		A11	OFF

	Program bypass option:	UNIT OPTION	DESCRIPTION
		C1	OEM Remote status (Lock/Unlock) monitoring
		D6	Push-to-Start

 ATTENTION!	 DATE: XX-XX	E5	OFF	By default DEACTIVATED
			ON	MANUFACTURED MODULES BETWEEN: 04/2018 TO 04/2019

 **Parts required** (Not included): 1X THAR-GM6

MANDATORY INSTALL

* **HOOD PIN**



HOOD STATUS: THE HOOD PIN SWITCH (INCLUDED) MUST BE INSTALLED IF THE VEHICLE CAN BE REMOTE STARTED WITH THE HOOD OPEN, SET FUNCTION A11 TO OFF.

A11

OFF

SECURITY STICKER



Included

Notice: the installation of safety elements are mandatory. The hood pin and the sticker are essential security elements and must be installed.

THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.

DESCRIPTION




Program remote starter option for R.S.
OEM REMOTE STAND ALONE:

38




2

Enable
Press 3x Lock to remote start with the OEM remote.


BCM located on passenger side center console

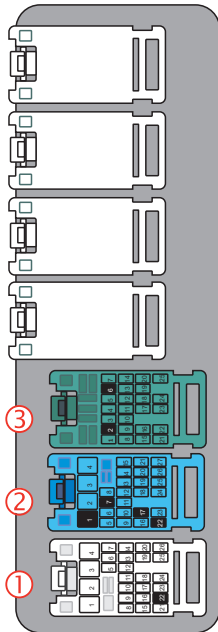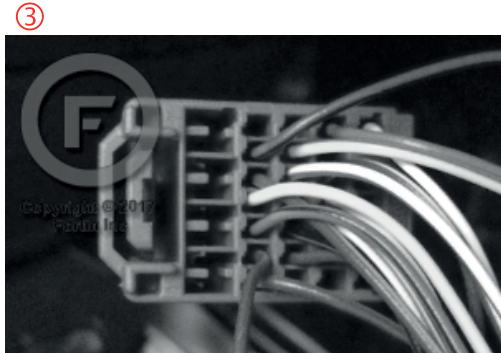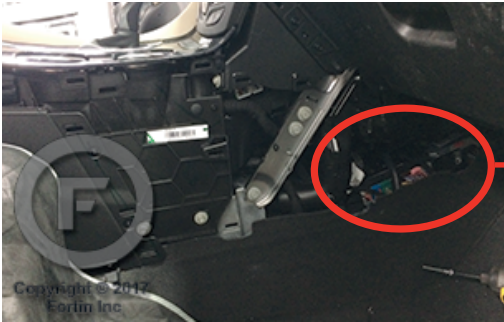

AUTOMATIC TRANSMISSION WIRING CONNECTION

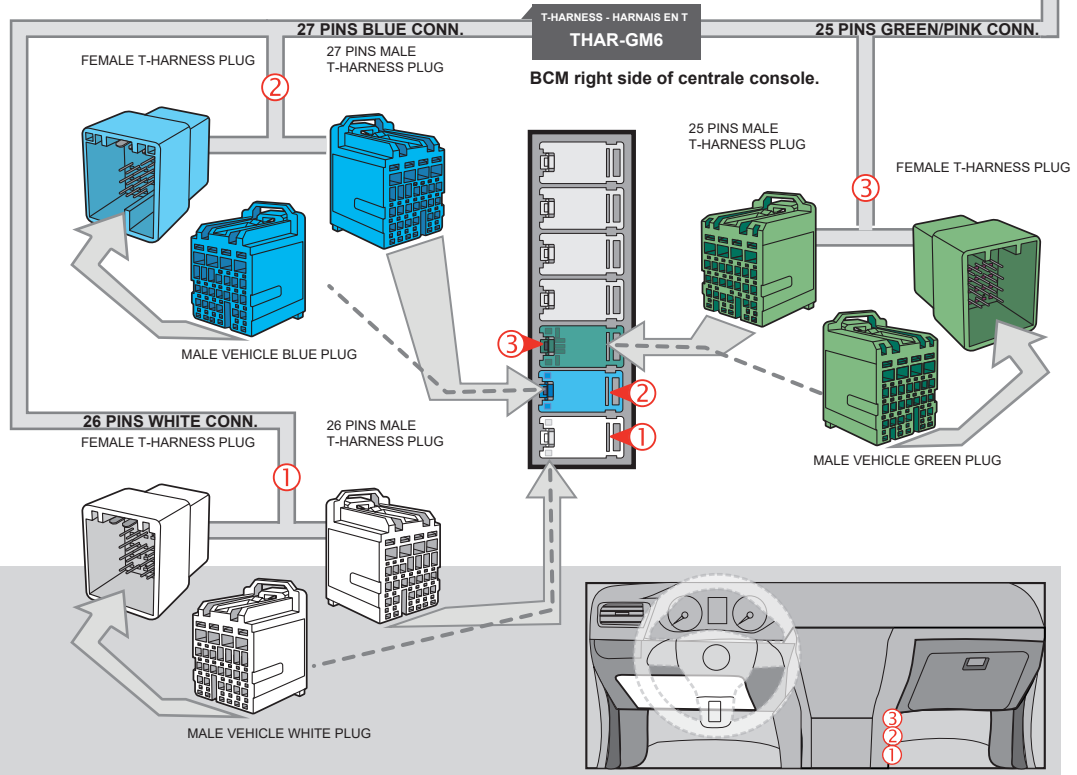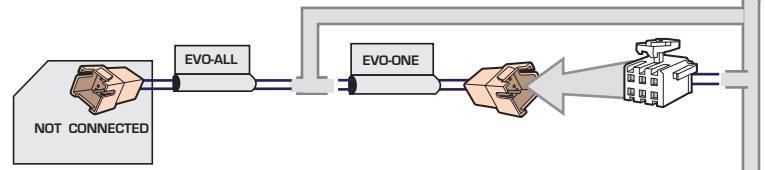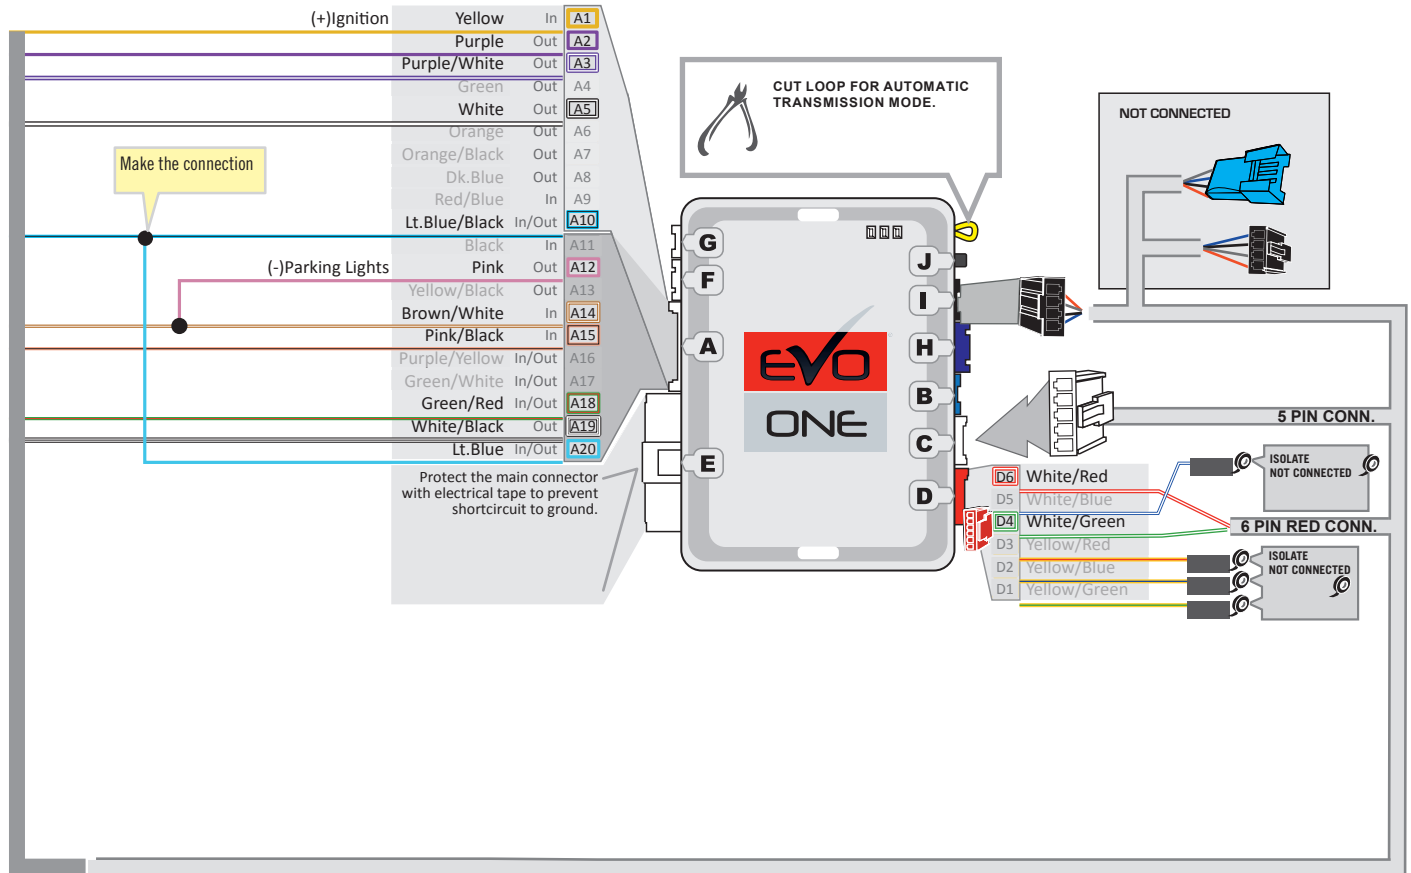


KEY BYPASS PROGRAMMING PROCEDURE 1/2

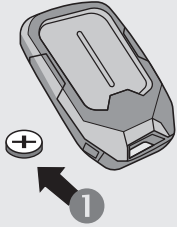


1 Remove the battery from the OEM remote.

2 Place the OEM remote into the transmitter pocket of the center console.

Refer to vehicle user guide for keyport location.

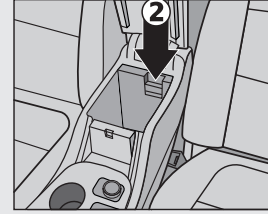


1

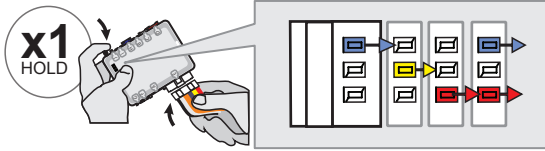

Press and hold the programming button:
Insert the 6-Pin Main connector.


↳The LEDs will alternate between BLUE, RED, YELLOW & BLUE/RED flashes.

2

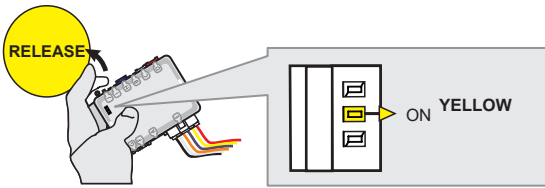


Release the programming button when the LED is YELLOW.

 If the LED is not solid YELLOW **disconnect** the 6-Pin connector (Main-Harness) and go back to step 1.




3

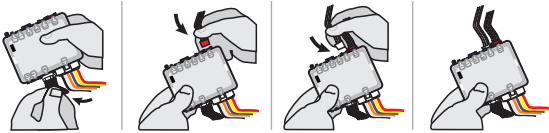

Insert the required remaining connectors.

4

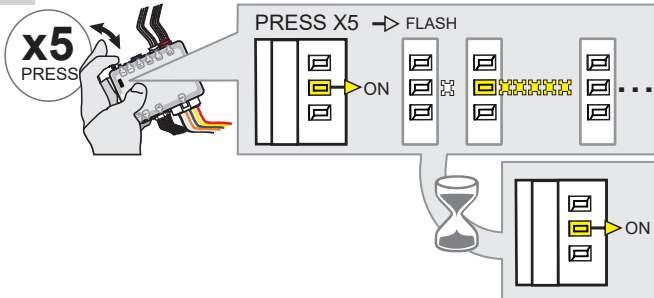


Press and release the programming button five (5x) times.

↳The YELLOW LED will flash 5 times each second.


↳**WAIT** for the YELLOW LED to turn ON solide.

 5



Open the driver door.

6

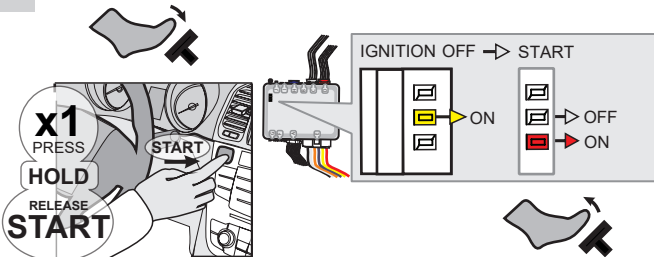

Press the foot-brake pedal.

Press the Push-to-Start button until the engine start.

Release the foot-brake pedal.

↳The RED LED will turn ON.
↳The YELLOW LED will turn OFF.


KEY BYPASS PROGRAMMING PROCEDURE 2/2

7




Press the Push-to-Start button until the engine turn OFF.

8

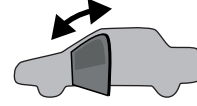

Close and open the driver door.

9

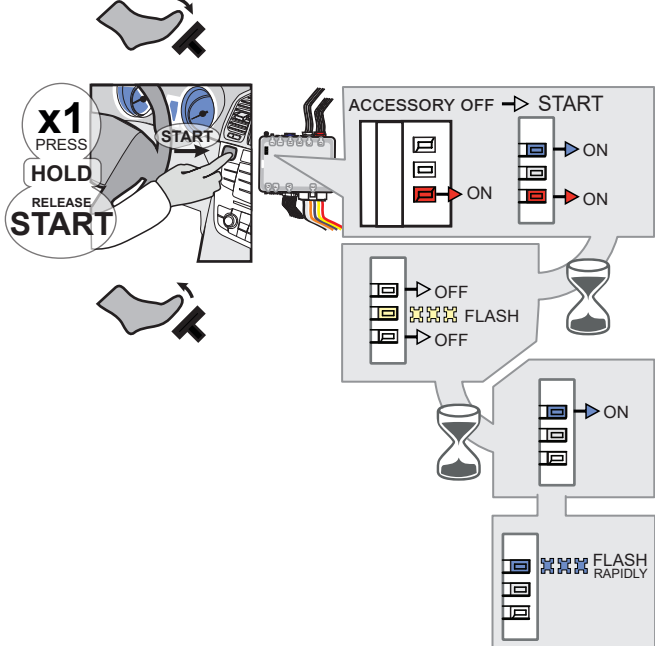


Press the foot-brake pedal.

Press the Push-to-Start button until the engine start.

Release the foot-brake pedal.

- ↳ The BLUE LED will turn ON.
- ↳ The BLUE LED will turn OFF. The RED LED will turn OFF.
- ↳ The YELLOW LED will flash rapidly
- ↳ The BLUE LED will turn ON.
- ↳ The BLUE LED will flash rapidly

10

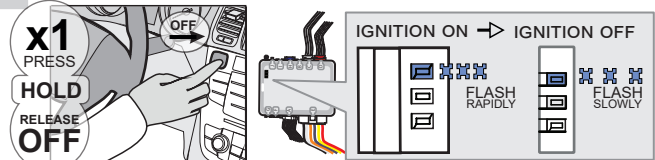

Press the Push-to-Start button until the engine turn OFF.


- ↳ The BLUE LED will flash slowly

11



Disconnect all connectors and after the 6-Pin (Main-Harness) or the 4-Pin Data-link connector.

12

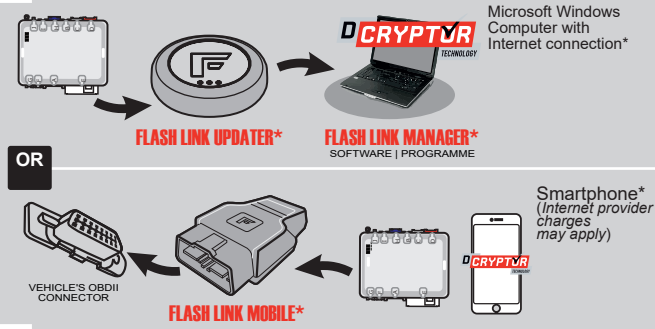

Microsoft Windows Computer with Internet connection*

FLASH LINK UPDATER* FLASH LINK MANAGER*
SOFTWARE | PROGRAMME

OR


Smartphone* (Internet provider charges may apply)

Use the tool: FLASH LINK UPDATER or FLASH LINK MOBILE to visit the DCryptor menu.

*Parts required (not included)

KEY BYPASS PROGRAMMING PROCEDURE 3/3

13

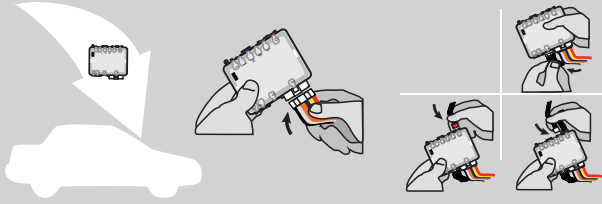

AFTER DCRYPTOR PROGRAMMING COMPLETED
Go back to the vehicle and **reconnect** the 6-Pin (Main-Harness) or the 4-pins (Data-Link) connector and after all the remaining connector.



The module is now programmed.




REMOTE STARTER / ALARM VERIFICATION PROCEDURE

Test the remote starter. Remote start the vehicle.

REMOTE STARTER PROGRAMMING PROCEDURE



REFER TO THE **QUICK INSTALL GUIDE** INCLUDED WITH THE MODULE FOR THE REMOTE STARTER PROGRAMMING.

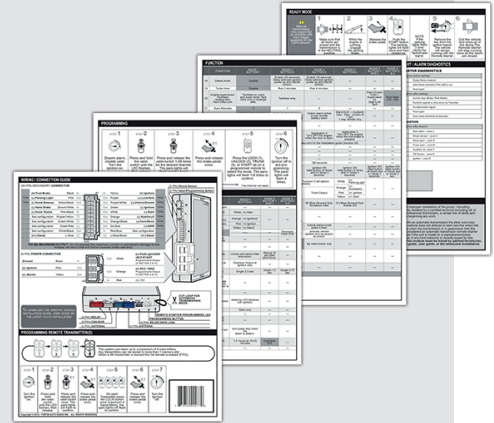

REMOTE STARTER FUNCTIONALITY |



All doors must be closed.



Remote start the vehicle.



Press the Unlock button of the remote car starter.



Enter the vehicle with the Intelligent Access Key.



The vehicle can now be put in to gear and driven.



If the vehicle is not unlocked the module will shut down the remote-starter and the vehicle as soon as any door is opened.


THAR-GM6 THARNESSE INSTALLATION

ADDENDUM - SUGGESTED WIRING CONFIGURATION



Vehicle functions supported in this diagram (functional if equipped)

VEHICLE	YEARS	Immobilizer bypass	Lock	Unlock	Arm	Disarm	Trunk (open)	RAP Disable	Tachometer	Heated Seats	Door Status	Trunk Status	Hand-Brake Status	Foot-Brake Status	OEM Remote Monitoring
OPEL															
Astra K	Push-To-Start	2015-2018	•	•	•	•	•	•	•	•	•	•	•	•	•
Zafira C	Push-To-Start	2011-2018	•	•	•	•	•	•	•	•	•	•	•	•	•




BYPASS FIRMWARE VERSION

70.[38]

GM MINIMUM

To add the firmware version and the options, use the **FLASH LINK UPDATER** or **FLASH LINK MOBILE** tool, sold separately.

	Program bypass option:	UNIT OPTION	DESCRIPTION
		C1	OEM Remote status (Lock/Unlock) monitoring
		D6	Push-to-Start



ATTENTION!



DATE: XX-XX


OFF

ON

E5

By default DEACTIVATED

MANUFACTURED MODULES BETWEEN: 04/2018 TO 04/2019

	Program remote starter option for R.S. OEM REMOTE STAND ALONE:	FUNCTION	MODE	DESCRIPTION
		38	2	Enable Press 3x Lock to remote start with the OEM remote.



Parts required (Not included): 1X THAR-GM6

MANDATORY INSTALL

*** HOOD PIN**



HOOD STATUS: THE HOOD PIN SWITCH (INCLUDED) MUST BE INSTALLED IF THE VEHICLE CAN BE REMOTE STARTED WITH THE HOOD OPEN.

SECURITY STICKER





Included

Notice: the installation of safety elements are mandatory. The hood pin and the sticker are essential security elements and must be installed.





THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.

DESCRIPTION



BCM above driver kick panel.

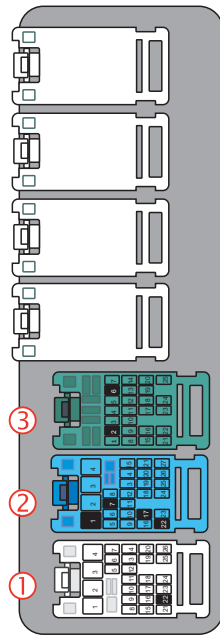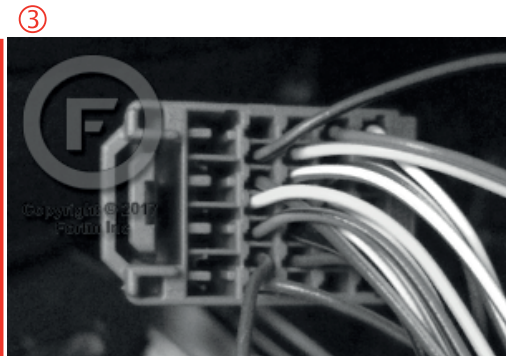


AUTOMATIC TRANSMISSION WIRING CONNECTION

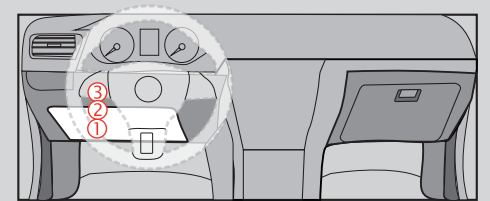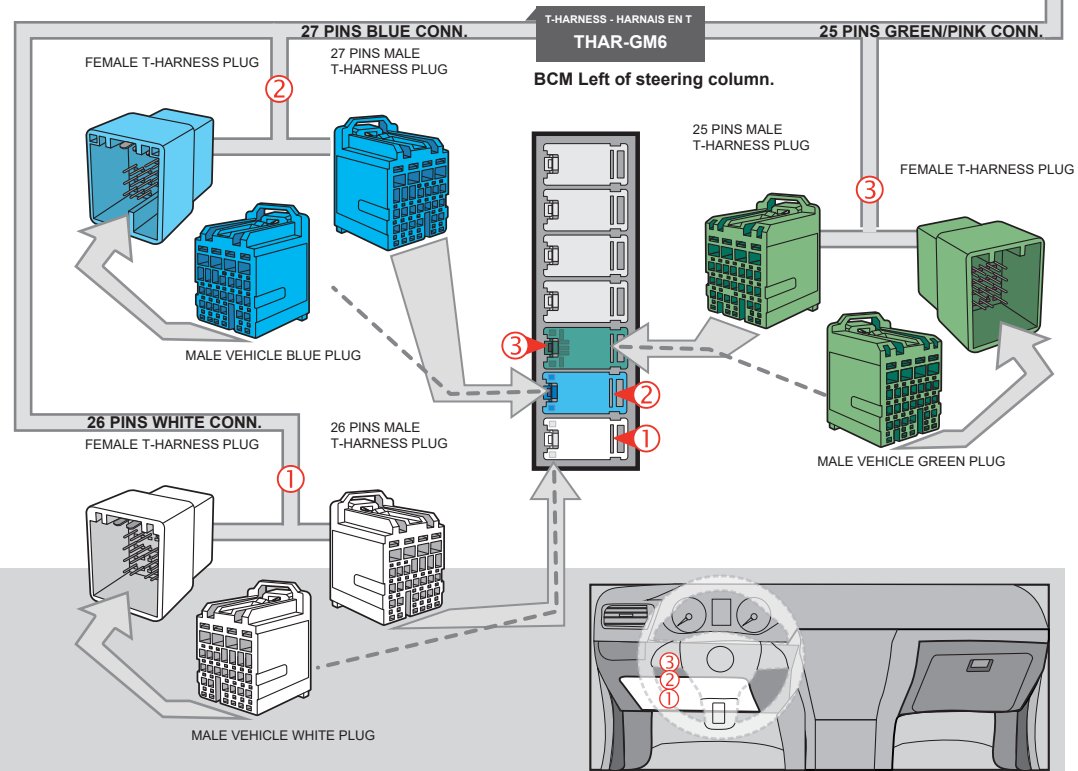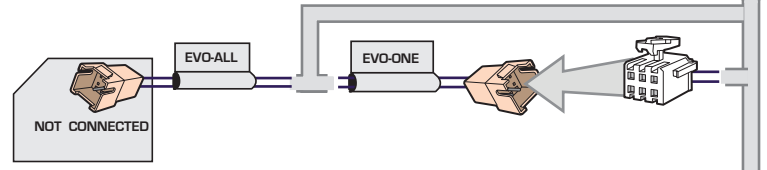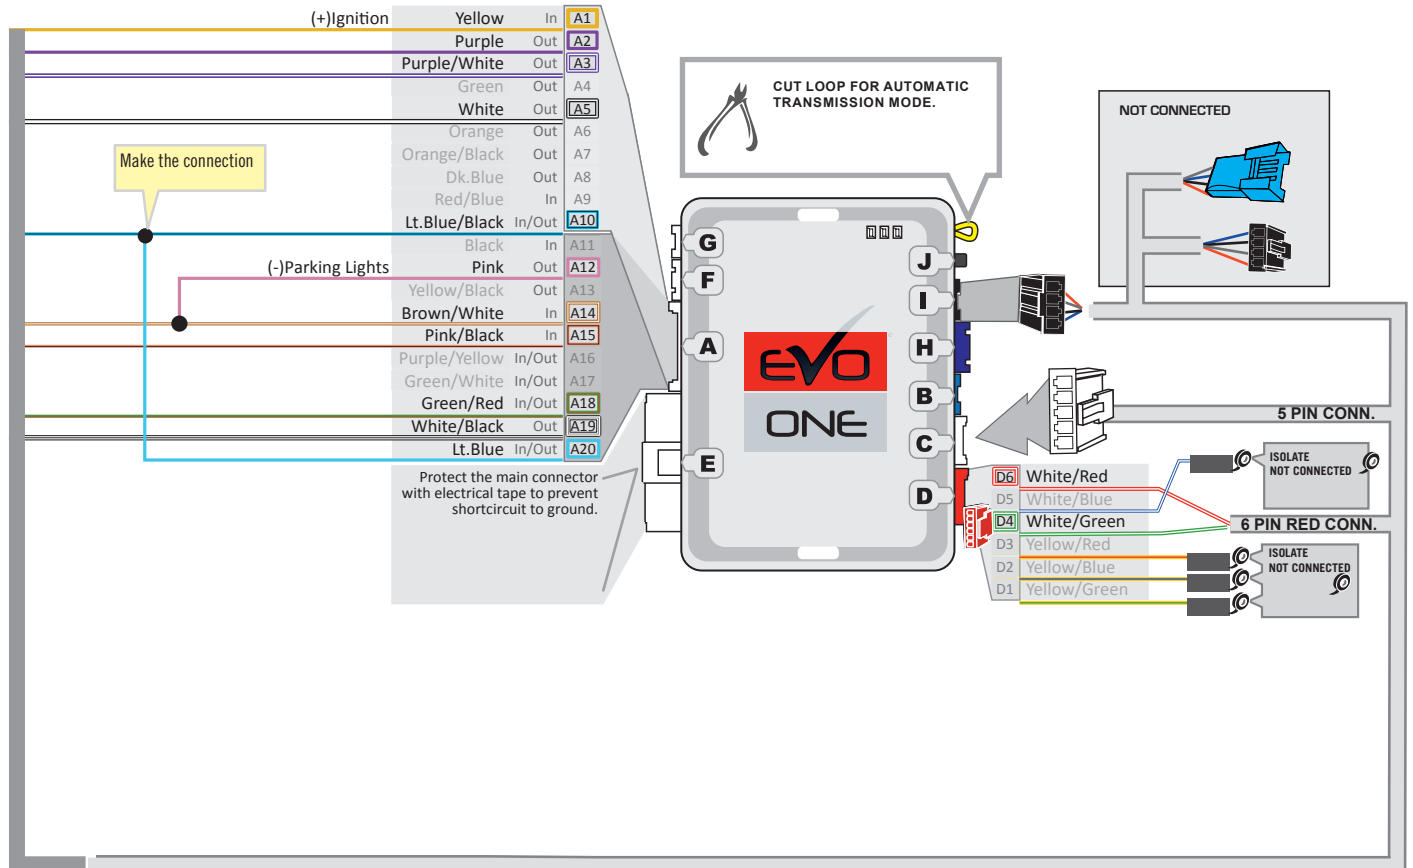


MANUAL TRANSMISSION WIRING CONNECTION

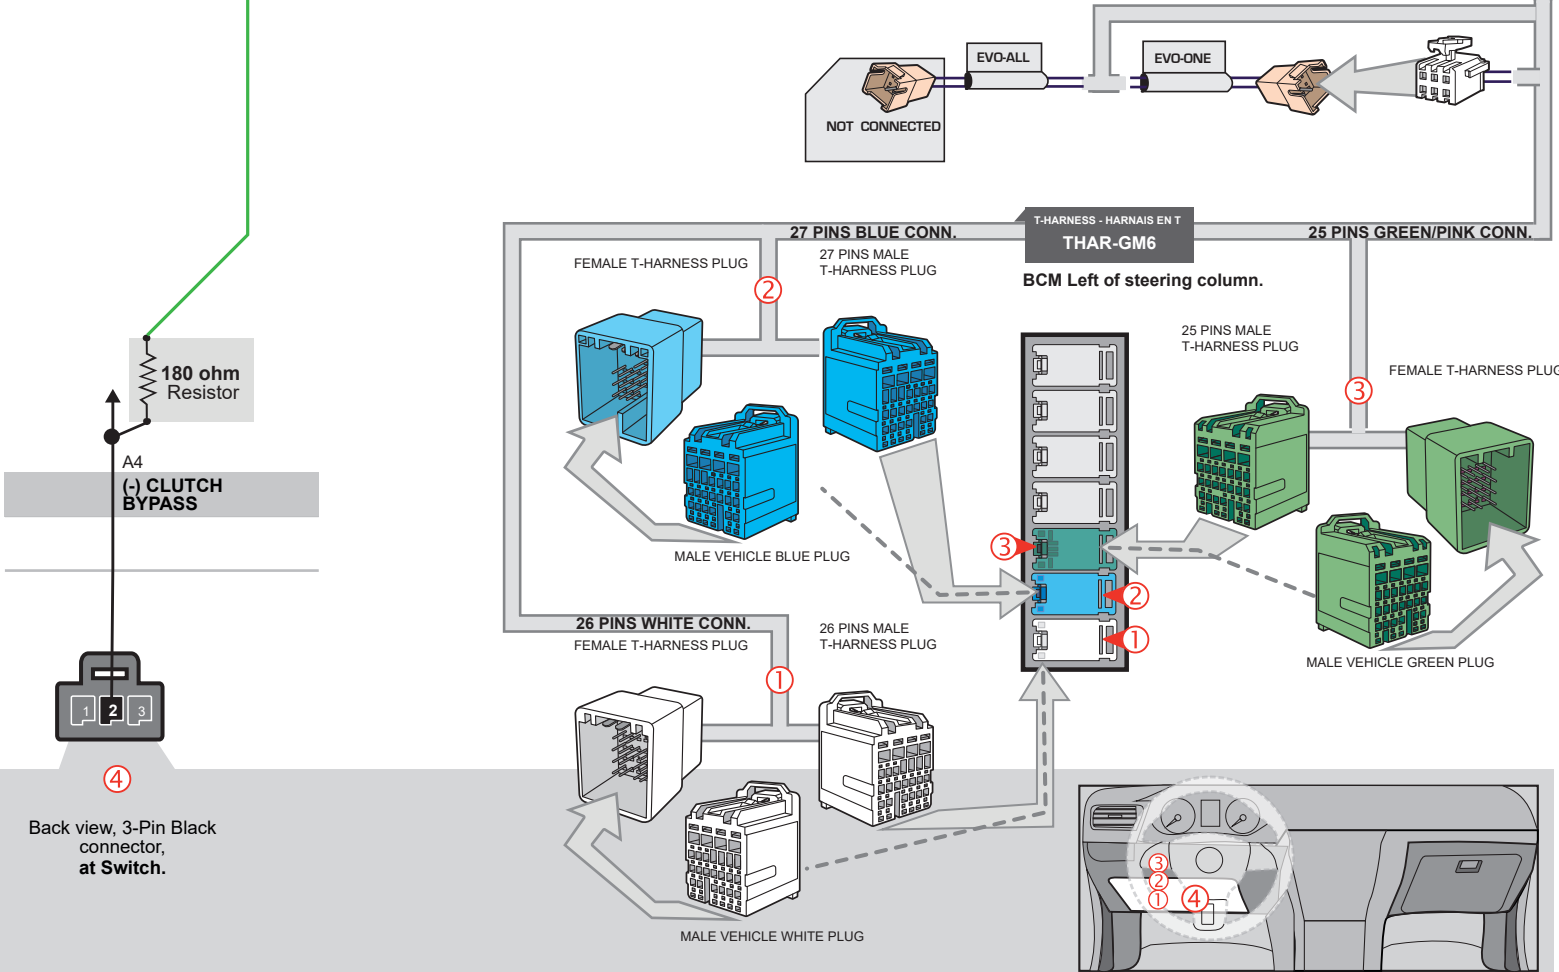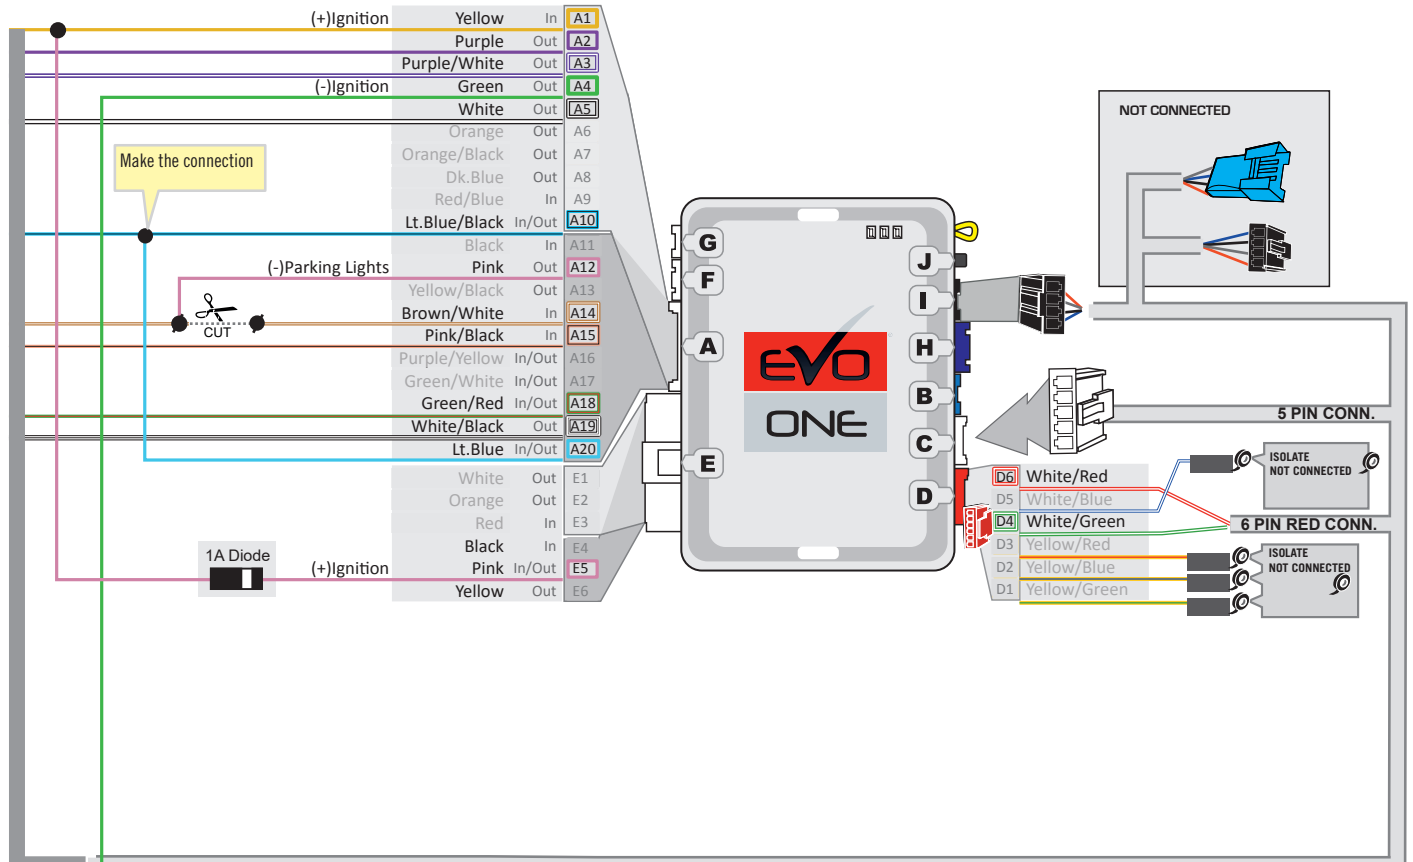


KEY BYPASS PROGRAMMING PROCEDURE 1/2

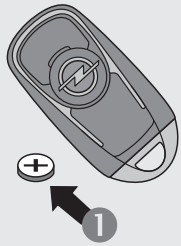

- 1** Remove the battery from the OEM remote.
- 2** Place the OEM remote in the front cup holder in the center console.
Refer to vehicle user guide for keyport location.

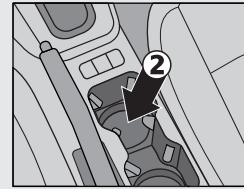


1

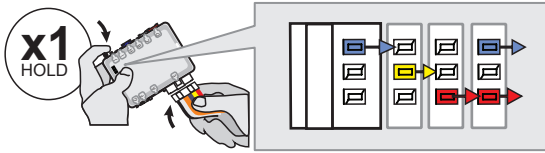

Press and hold the programming button:
Insert the 6-Pin Main connector.


↳The LEDs will alternate between BLUE, RED, YELLOW & BLUE/RED flashes.

2

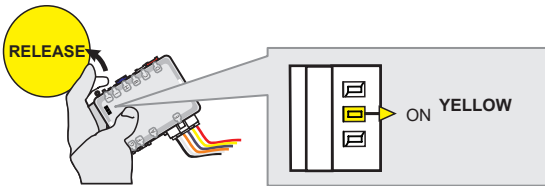


Release the programming button when the LED is YELLOW.

 If the LED is not solid YELLOW **disconnect** the 6-Pin connector (Main-Harness) and go back to step 1.




3

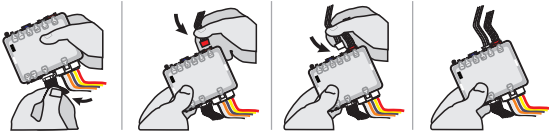

Insert the required remaining connectors.

4

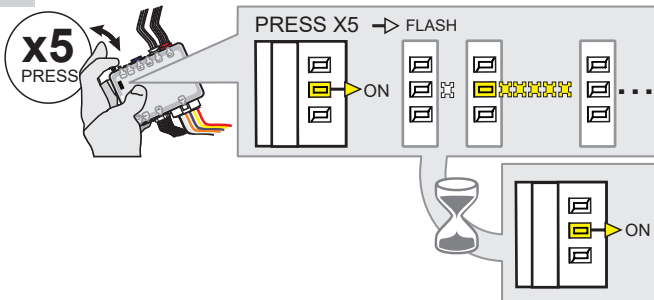


Press and release the programming button five (5x) times.

↳The YELLOW LED will flash 5 times each second.


↳**WAIT** for the YELLOW LED to turn ON solide.

 5



Open the driver door.

6

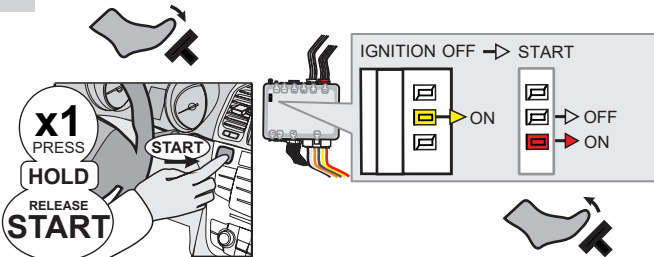

Press the foot-brake pedal.

Press the Push-to-Start button until the engine start.

Release the foot-brake pedal.

↳The RED LED will turn ON.
↳The YELLOW LED will turn OFF.

KEY BYPASS PROGRAMMING PROCEDURE 2/2 |

7

Press the Push-to-Start button until the engine turn OFF.

8

Close and open the driver door.

9

Press the foot-brake pedal.

Press the Push-to-Start button until the engine start.

Release the foot-brake pedal.

- ↳ The BLUE LED will turn ON.
- ↳ The BLUE LED will turn OFF. The RED LED will turn OFF.
- ↳ The YELLOW LED will flash rapidly
- ↳ The BLUE LED will turn ON.
- ↳ The BLUE LED will flash rapidly

10

Press the Push-to-Start button until the engine turn OFF.

- ↳ The BLUE LED will flash slowly

11

Disconnect all connectors and after the 6-Pin (Main-Harness) or the 4-Pin Data-link connector.

12

Microsoft Windows Computer with Internet connection*


OR

Smartphone* (Internet provider charges may apply)

Use the tool: FLASH LINK UPDATER or FLASH LINK MOBILE to visit the DCryptor menu.

*Parts required (not included)

13

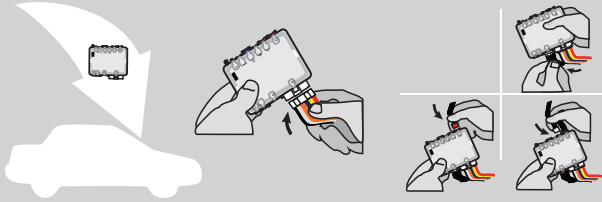

AFTER DCRYPTOR PROGRAMMING COMPLETED
 Go back to the vehicle and **reconnect** the 6-Pin (Main-Harness) or the 4-pins (Data-Link) connector and after all the remaining connector.



The module is now programmed.




REMOTE STARTER / ALARM VERIFICATION PROCEDURE

Test the remote starter. Remote start the vehicle.

REMOTE STARTER PROGRAMMING PROCEDURE |



REFER TO THE **QUICK INSTALL GUIDE** INCLUDED WITH THE MODULE FOR THE REMOTE STARTER PROGRAMMING.

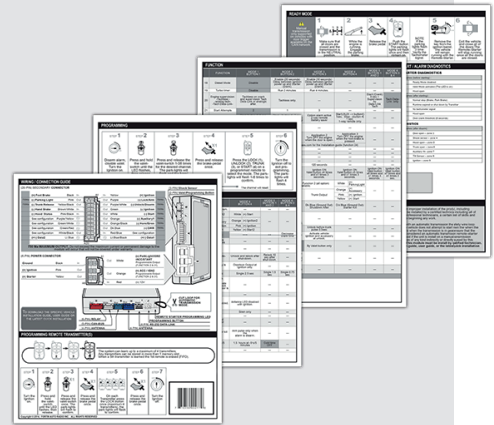

REMOTE STARTER FUNCTIONALITY |



 
All doors must be closed.



Remote start the vehicle.



Press the Unlock button of the remote car starter.



Enter the vehicle with the Intelligent Access Key.




The vehicle can now be put in to gear and driven.




If the vehicle is not unlocked the module will shut down the remote-starter and the vehicle as soon as any door is opened.

**THAR-GM6 THARNESSE
INSTALLATION**

ADDENDUM - SUGGESTED WIRING CONFIGURATION

VEHICLE	YEARS	Vehicle functions supported in this diagram (functional if equipped)														
		Immobilizer bypass	T-Harness	Lock	Unlock	Arm	Disarm	Trunk (open)	RAP Disable	Tachometer	Heated Seats	Door Status	Trunk Status	Hand-Brake Status	Foot-Brake Status	OEM Remote Monitoring
																
CHEVROLET																
Bolt	Push-To-Start	2016-2019	•	•	•	•	•	•	•	•	•	•	•	•	•	•



BYPASS FIRMWARE VERSION

70.[41]

GM MINIMUM

To add the firmware version and the options, use the **FLASH LINK UPDATER** or **FLASH LINK MOBILE** tool, sold separately.

Program remote starter option for R.S. OEM REMOTE STAND ALONE:

38

2


Enable
Press 3x Lock to remote start with the OEM remote.

IF THE VEHICLE IS NOT EQUIPPED WITH FUNCTIONAL HOOD PIN:

A11

OFF

Hood trigger (Output Status).

	Program bypass option:	UNIT OPTION	DESCRIPTION
		C1	OEM Remote status (Lock/Unlock) monitoring
	Vehicle hybrid only	D4	Hybrid mode (Vehicle hybrid only)
		D6	Push-to-Start



ATTENTION!



DATE: XX-XX

E5

OFF

By default DEACTIVATED

MANUFACTURED MODULES BETWEEN: 04/2018 TO 04/2019



Parts required (Not included)

1X THAR-GM6

MANDATORY INSTALL

*** HOOD PIN**



HOOD STATUS: THE HOOD PIN SWITCH (INCLUDED) MUST BE INSTALLED IF THE VEHICLE CAN BE REMOTE STARTED WITH THE HOOD OPEN, SET FUNCTION A11 TO OFF.

A11

OFF

SECURITY STICKER



Included


Notice: the installation of safety elements are mandatory. The hood pin and the sticker are essential security elements and must be installed.

THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.




DESCRIPTION



BCM

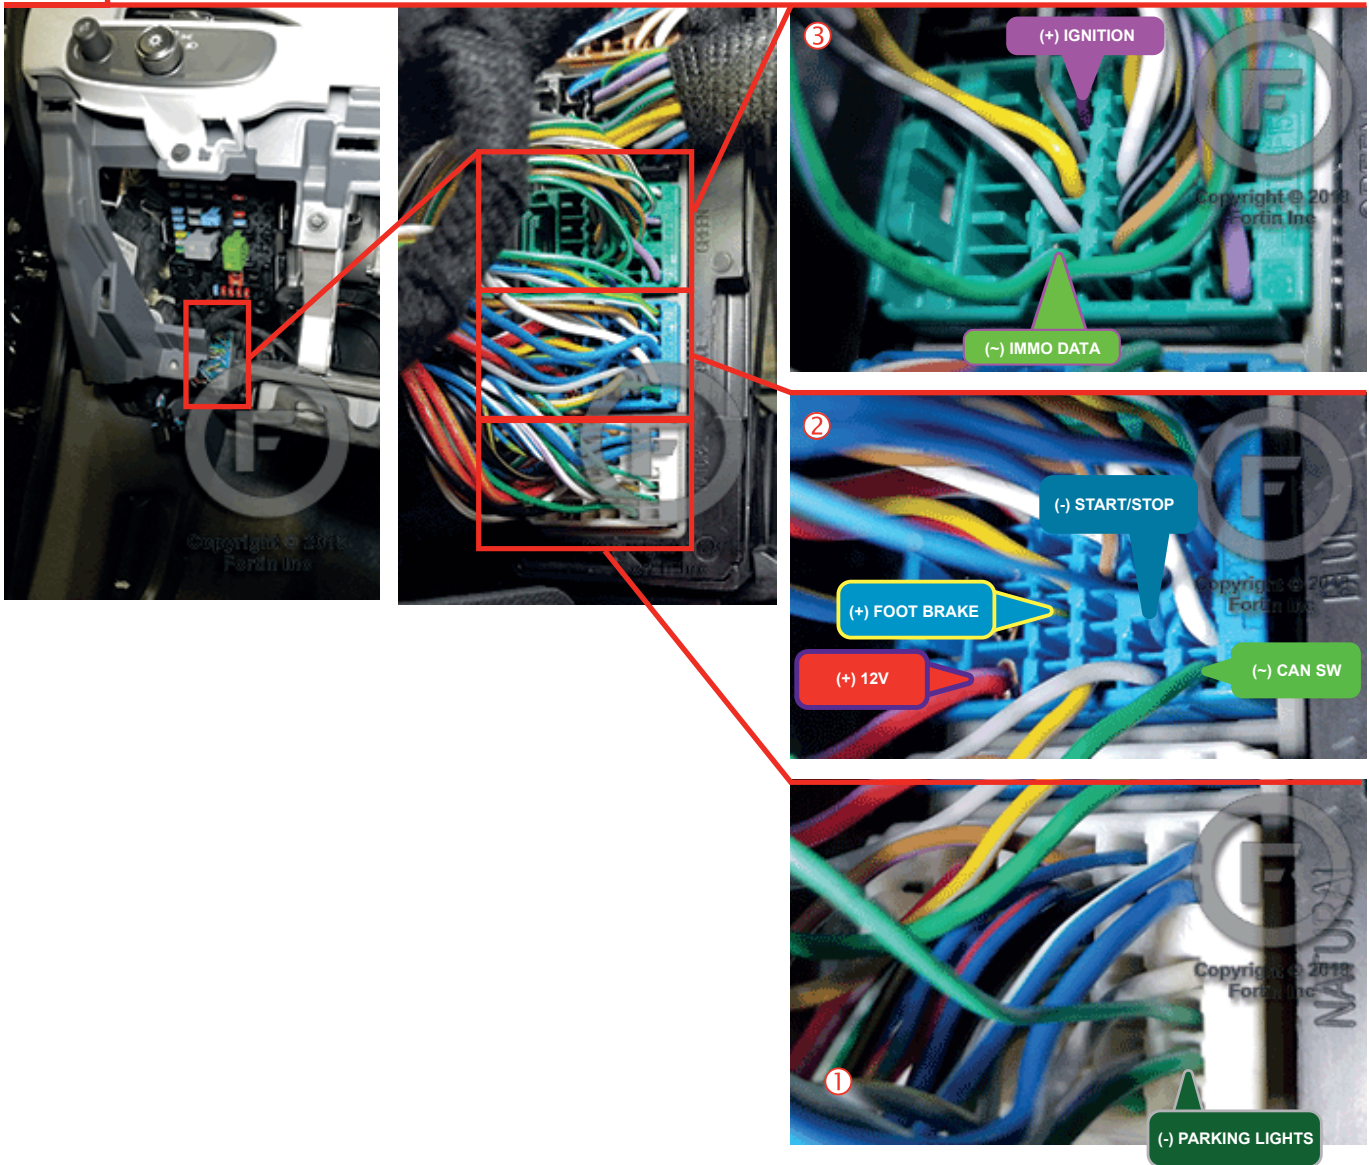


AUTOMATIC TRANSMISSION WIRING CONNECTION

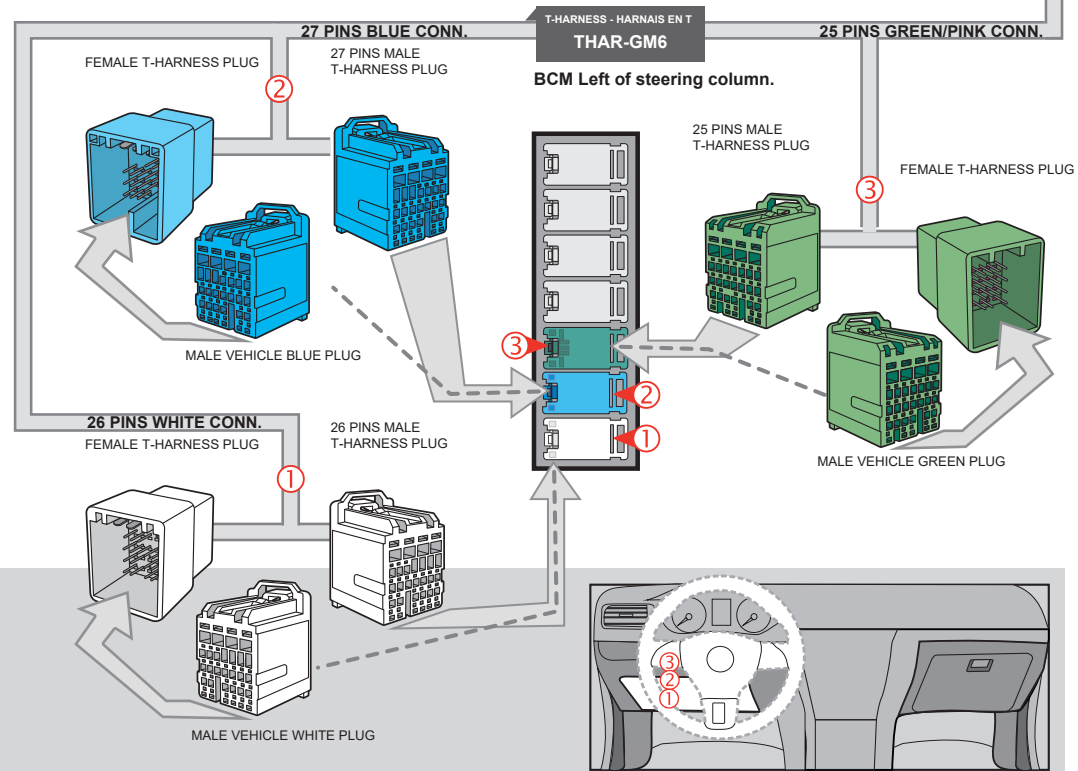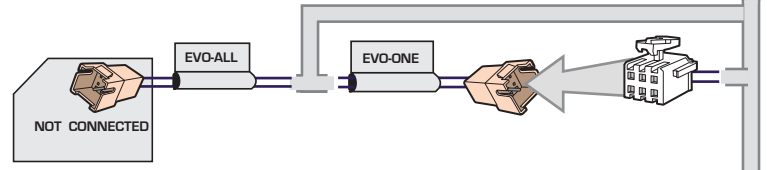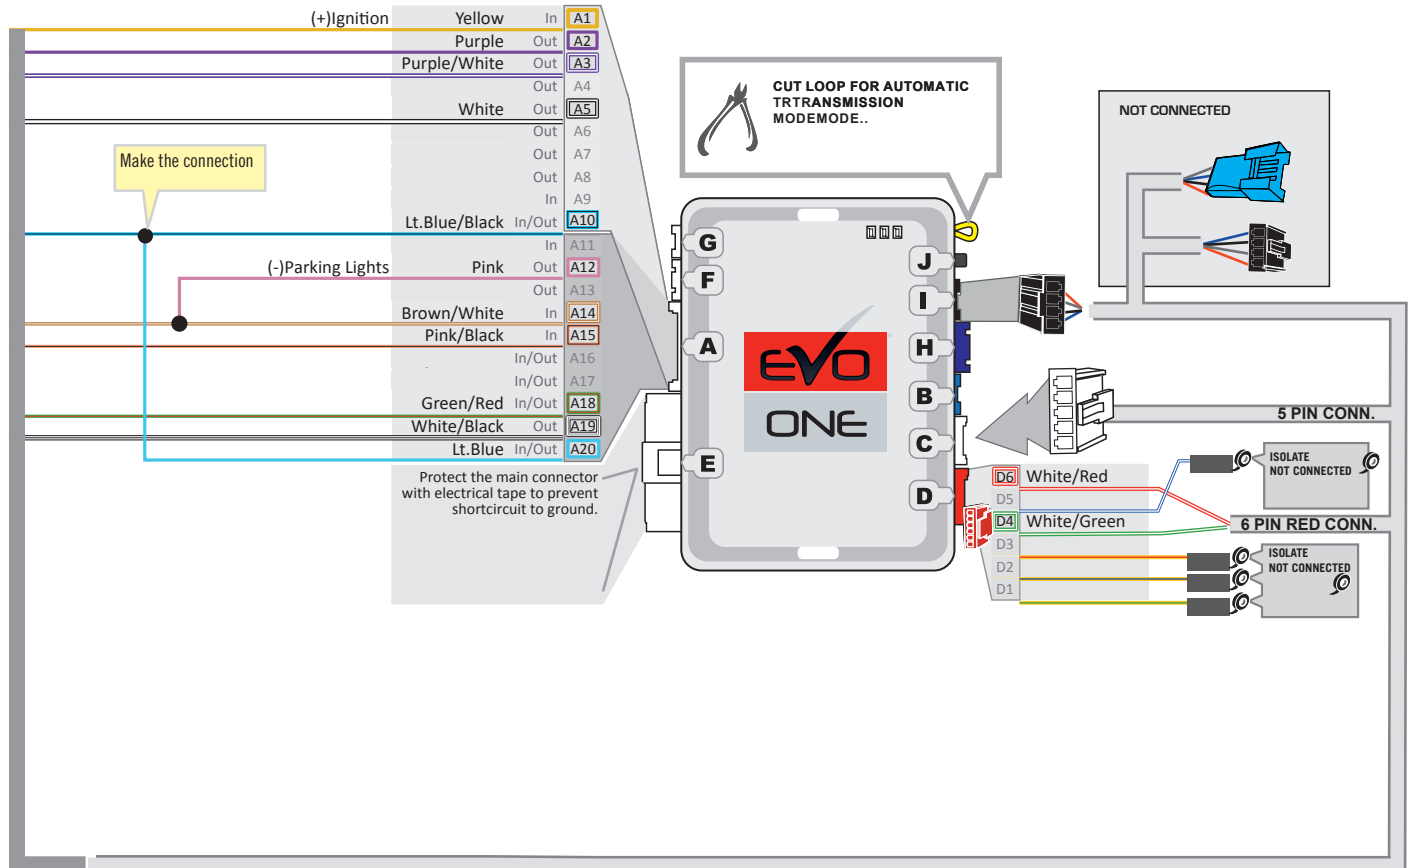


KEY BYPASS PROGRAMMING PROCEDURE 1/2



- 1** Remove the battery from the OEM remote.
- 2** Place the OEM remote into the center console.
Refer to vehicle user guide for keyport location.

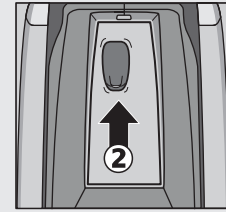


1

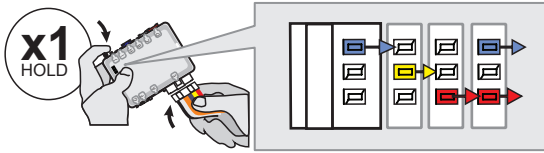

Press and hold the programming button:
Insert the 6-Pin Main connector.


↳The LEDs will alternate between BLUE, RED, YELLOW & BLUE/RED flashes.

2

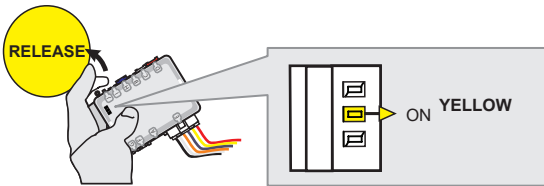


Release the programming button when the LED is YELLOW.

 If the LED is not solid YELLOW **disconnect** the 6-Pin connector (Main-Harness) and go back to step 1.




3

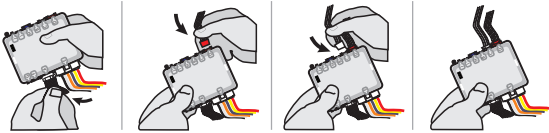

Insert the required remaining connectors.

4

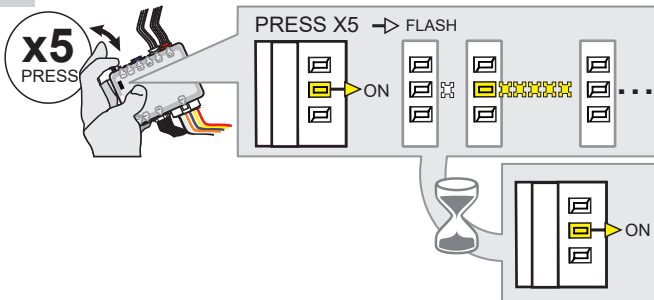


Press and release the programming button five (5x) times.

↳The YELLOW LED will flash 5 times each second.


↳**WAIT** for the YELLOW LED to turn ON solide.

 5



Open the driver door.

6

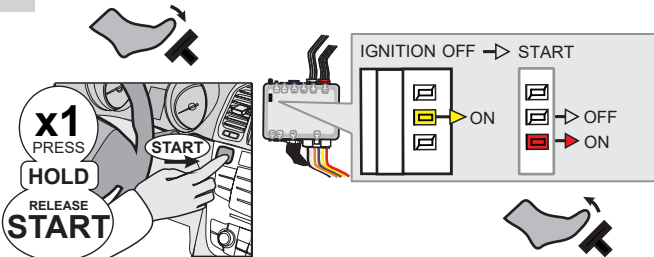

Press the foot-brake pedal.

Press the Push-to-Start button until the engine start.

Release the foot-brake pedal.

↳The RED LED will turn ON.
↳The YELLOW LED will turn OFF.


KEY BYPASS PROGRAMMING PROCEDURE 2/2 |

7




Press the Push-to-Start button until the engine turn OFF.

8

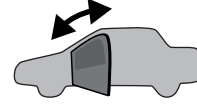

Close and open the driver door.

9

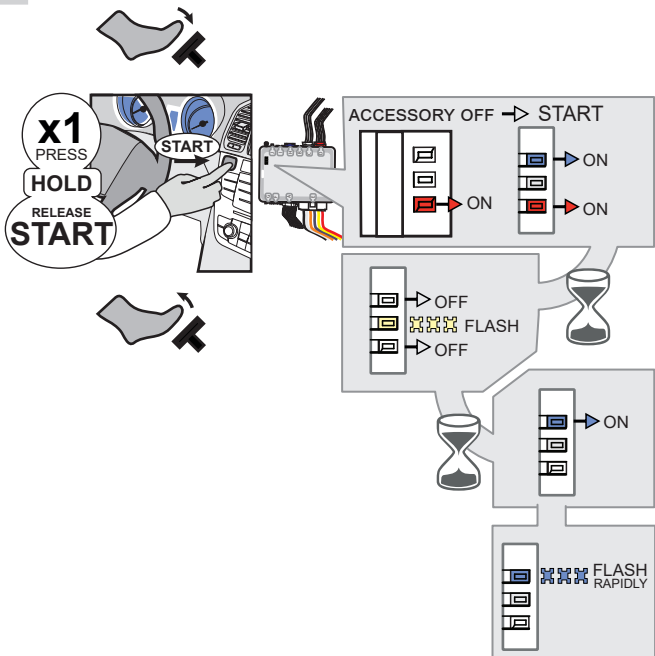


Press the foot-brake pedal.

Press the Push-to-Start button until the engine start.

Release the foot-brake pedal.

- ↳ The BLUE LED will turn ON.
- ↳ The BLUE LED will turn OFF. The RED LED will turn OFF.
- ↳ The YELLOW LED will flash rapidly
- ↳ The BLUE LED will turn ON.
- ↳ The BLUE LED will flash rapidly

10

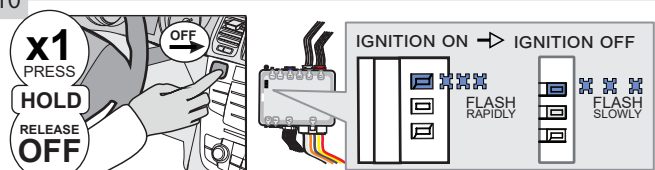

Press the Push-to-Start button until the engine turn OFF.


- ↳ The BLUE LED will flash slowly

11



Disconnect all connectors and after the 6-Pin (Main-Harness) or the 4-Pin Data-link connector.

12

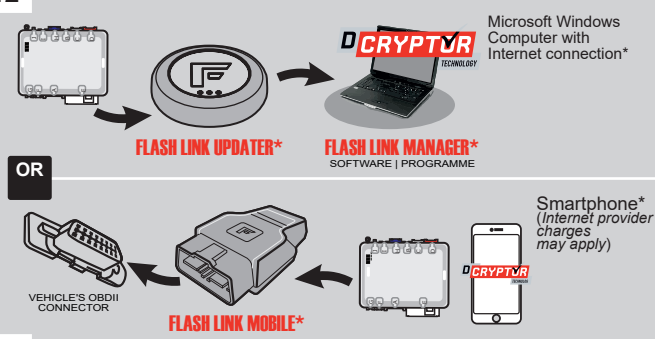

Microsoft Windows Computer with Internet connection*

FLASH LINK UPDATER* FLASH LINK MANAGER*
SOFTWARE | PROGRAMME

OR


Smartphone* (Internet provider charges may apply)

VEHICLE'S OBDII CONNECTOR FLASH LINK MOBILE*

Use the tool: FLASH LINK UPDATER or FLASH LINK MOBILE to visit the DCryptor menu.

*Parts required (not included)

13

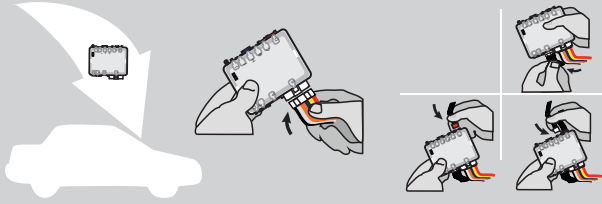

AFTER DCRYPTOR PROGRAMMING COMPLETED
 Go back to the vehicle and **reconnect** the 6-Pin (Main-Harness) or the 4-pins (Data-Link) connector and after all the remaining connector.



The module is now programmed.




REMOTE STARTER / ALARM VERIFICATION PROCEDURE

Test the remote starter. Remote start the vehicle.

REMOTE STARTER PROGRAMMING PROCEDURE |



REFER TO THE **QUICK INSTALL GUIDE** INCLUDED WITH THE MODULE FOR THE REMOTE STARTER PROGRAMMING.

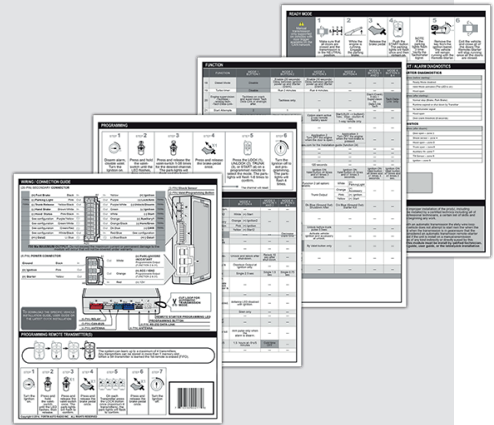

REMOTE STARTER FUNCTIONALITY |



 
All doors must be closed.



Remote start the vehicle.



Press the Unlock button of the remote car starter or the OEM remote.



Enter the vehicle with the Intelligent Access Key.




The vehicle can now be put in to gear and driven.



If the vehicle is not unlocked the module will shut down the remote-starter and the vehicle as soon as any door is opened.

THAR-GM6 THARNNESS INSTALLATION

ADDENDUM - SUGGESTED WIRING CONFIGURATION

VEHICLE	YEARS	Vehicle functions supported in this diagram (functional if equipped)														
		Immobilizer bypass	Lock	Unlock	Arm	Disarm	Trunk (open)	Parking Light	RAP Disable	Tachometer	Heated Seats	Door Status	Trunk Status	Hand-Brake Status	Foot-Brake Status	OEM Remote Monitoring
																
CHEVROLET																
Camaro	Push-To-Start	2016-2019	•	•	•	•	•	•	•	•	•	•	•	•	•	•





BYPASS FIRMWARE VERSION

70.[41]

GM MINIMUM

To add the firmware version and the options, use the **FLASH LINK UPDATER** or **FLASH LINK MOBILE** tool, sold separately.

		UNIT OPTION	DESCRIPTION
	Program bypass option IF THE VEHICLE IS NOT EQUIPPED WITH FUNCTIONAL HOOD PIN:	A11	<div style="display: flex; align-items: center; justify-content: center;"> <div style="background-color: red; color: white; padding: 5px 10px; margin-right: 5px;">OFF</div> <div style="margin-right: 5px;">Hood trigger (Output Status).</div> </div>

		UNIT OPTION	DESCRIPTION
	Program bypass option:	C1	OEM Remote status (Lock/Unlock) monitoring
		D6	Push-to-Start



ATTENTION!



DATE: XX-XX

	UNIT OPTION	DESCRIPTION
E5	<div style="display: flex; align-items: center; justify-content: center;"> <div style="background-color: red; color: white; padding: 5px 10px; margin-right: 5px;">OFF</div> <div style="margin-right: 5px;">By default DEACTIVATED</div> </div>	MANUFACTURED MODULES BETWEEN: 04/2018 TO 04/2019
	<div style="display: flex; align-items: center; justify-content: center;"> <div style="background-color: green; color: white; padding: 5px 10px; margin-right: 5px;">ON</div> </div>	



Parts required (Not included): 1X THAR-GM6

MANDATORY INSTALL

*** HOOD PIN**



HOOD STATUS: THE HOOD PIN SWITCH (INCLUDED) MUST BE INSTALLED IF THE VEHICLE CAN BE REMOTE STARTED WITH THE HOOD OPEN, SET FUNCTION A11 TO OFF.

A11

OFF

SECURITY STICKER



Included

Notice: the installation of safety elements are mandatory. The hood pin and the sticker are essential security elements and must be installed.

THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.

DESCRIPTION | DESCRIPTION


Program remote starter option for R.S.
OEM REMOTE STAND ALONE:

38





2

Enable
Press 3x Lock to remote start with the OEM remote.



BCM located on left side of the steering column

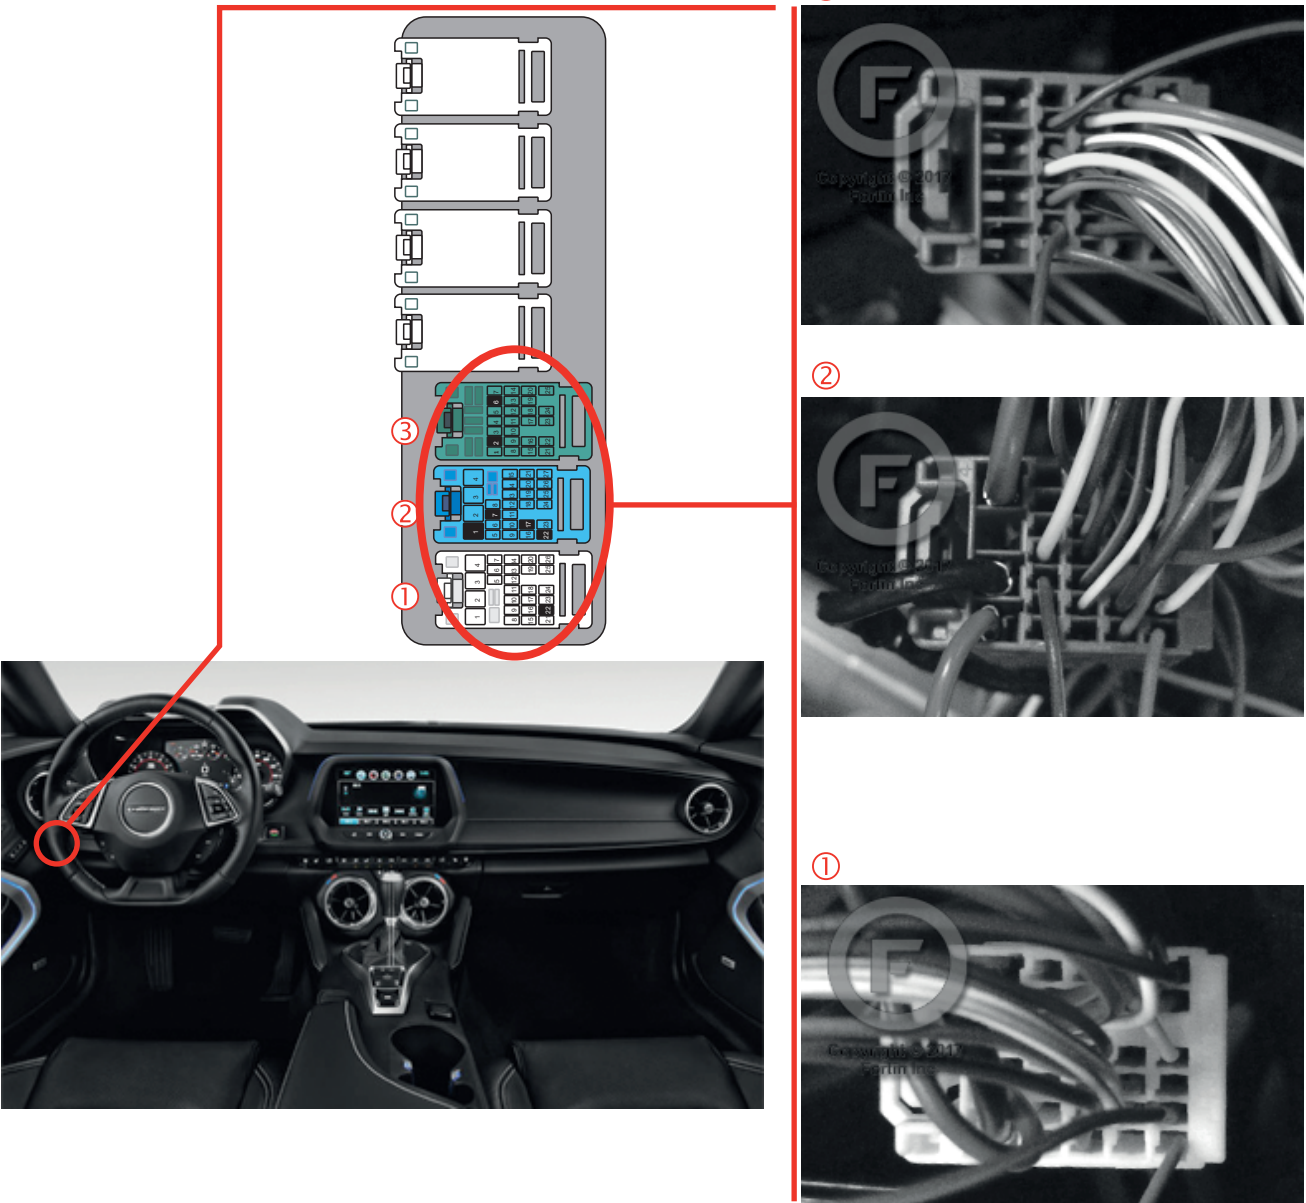


AUTOMATIC TRANSMISSION WIRING CONNECTION

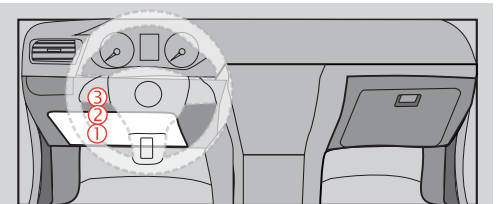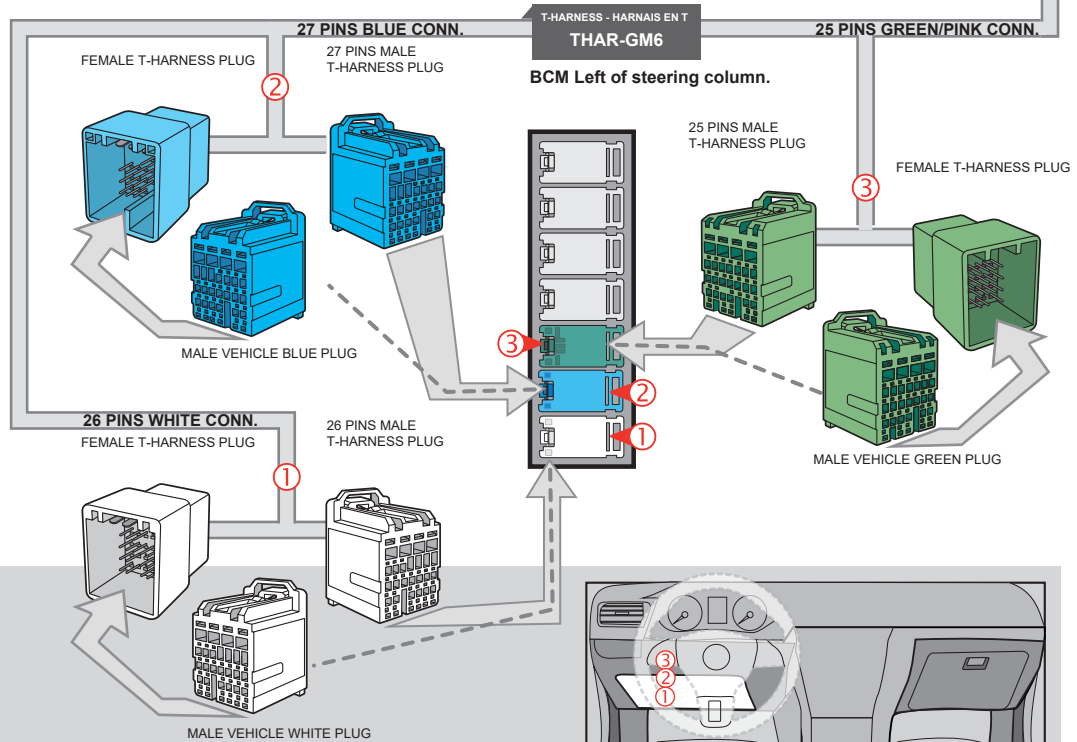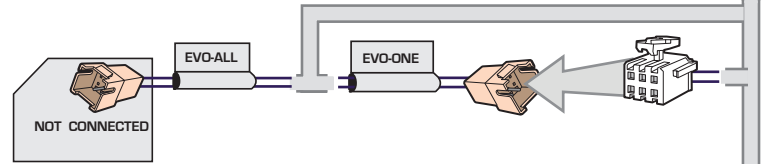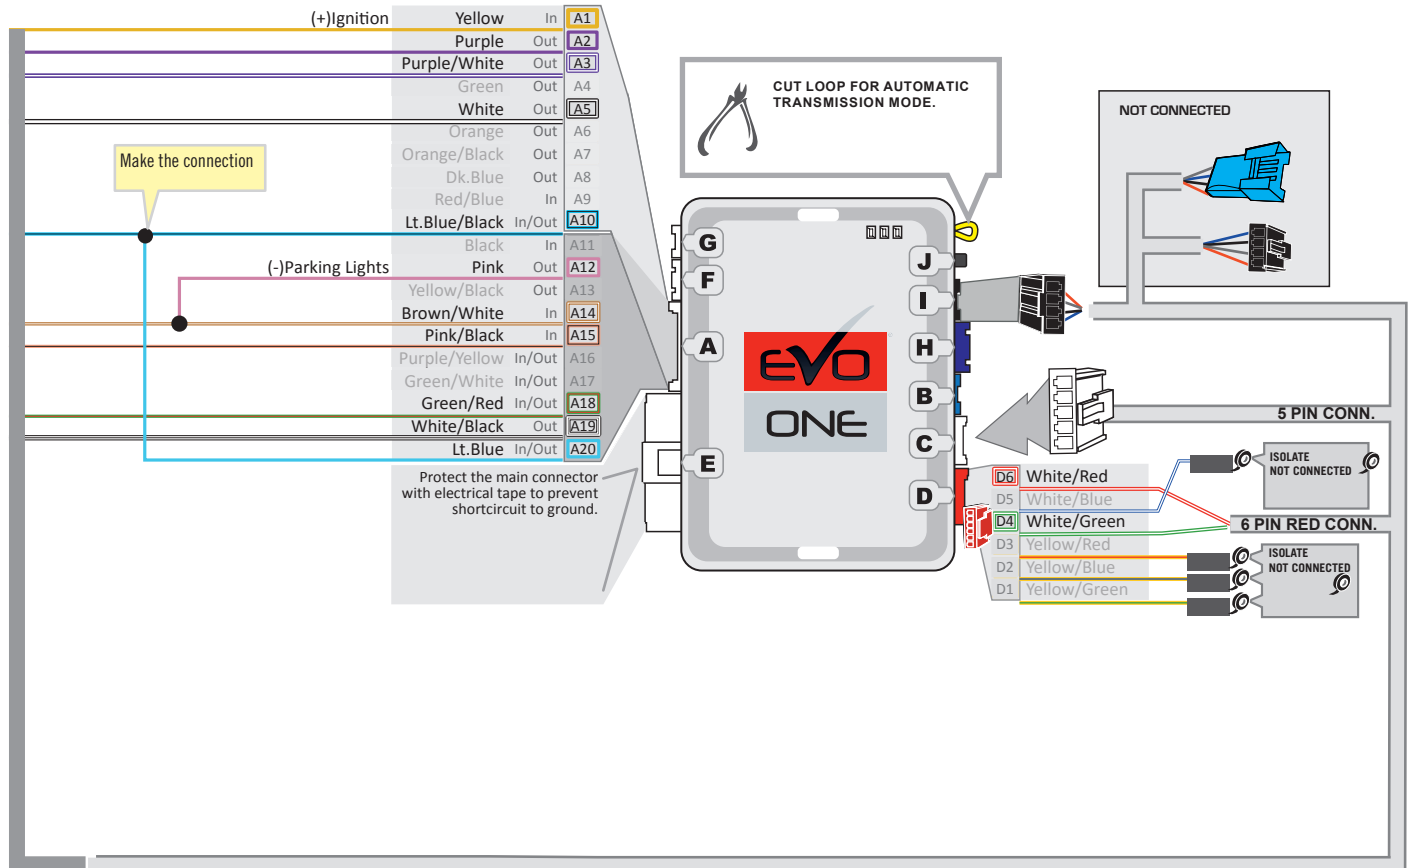

MANUAL TRANSMISSION WIRING CONNECTION

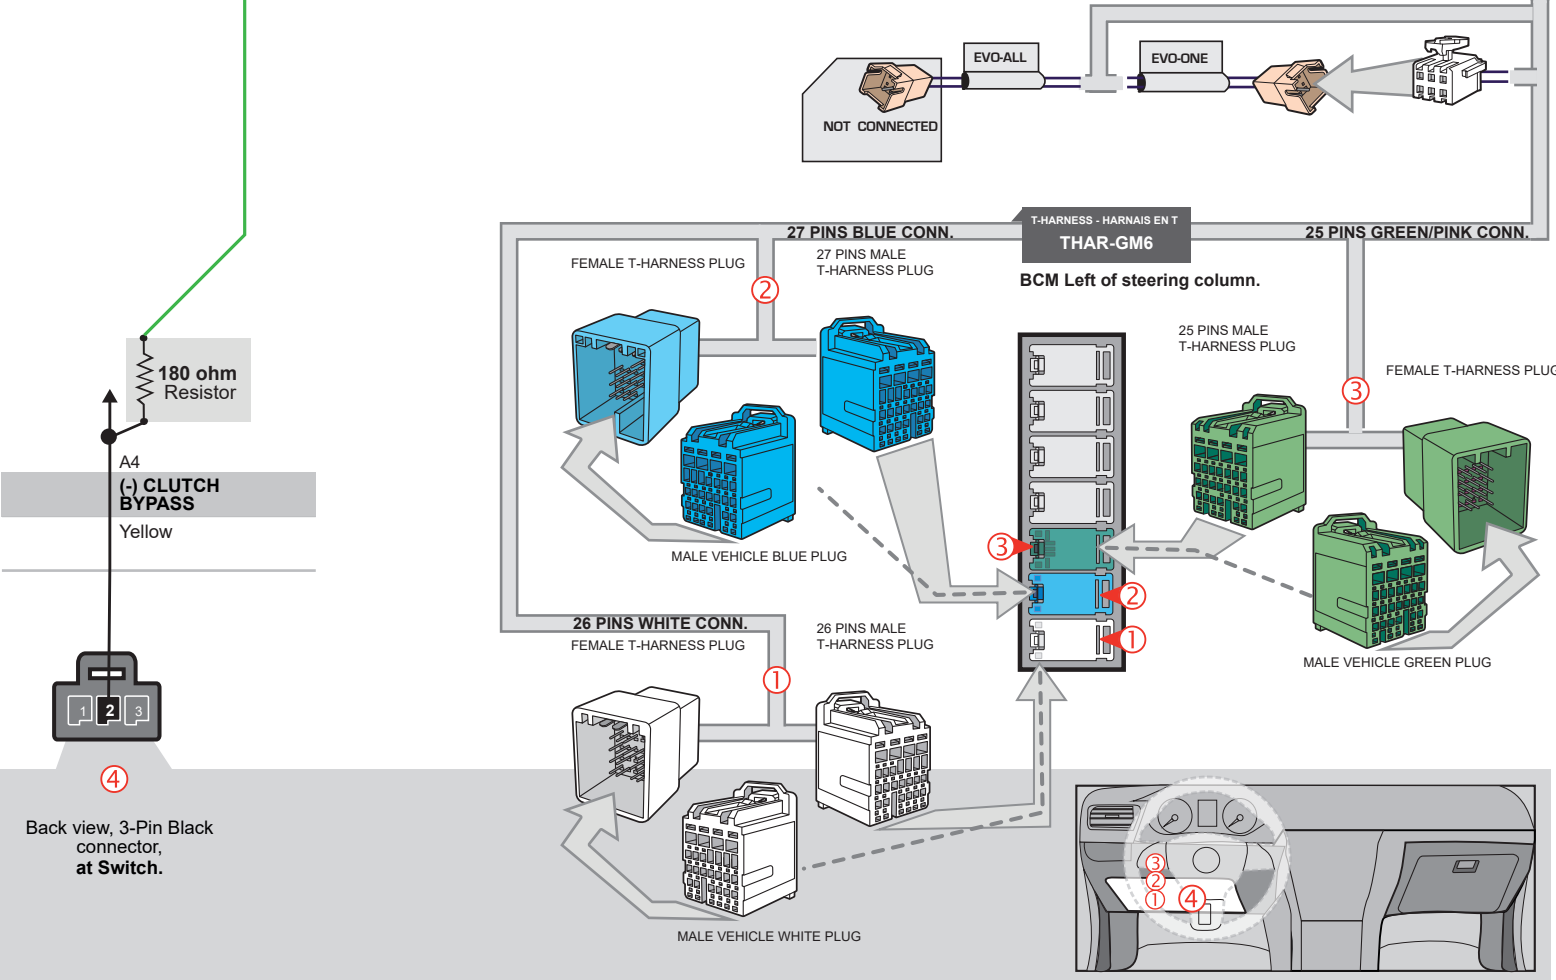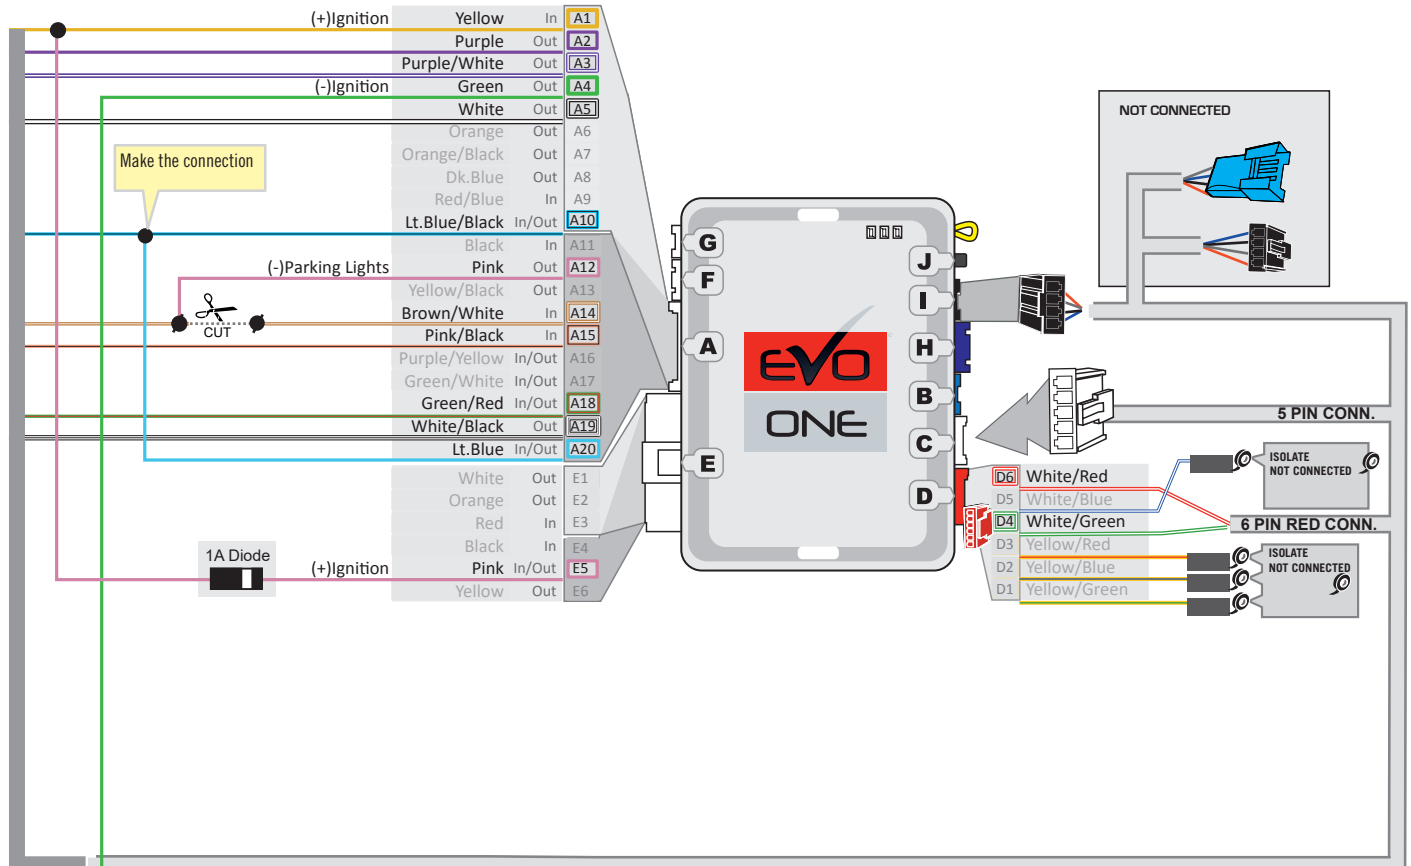


KEY BYPASS PROGRAMMING PROCEDURE 1/2

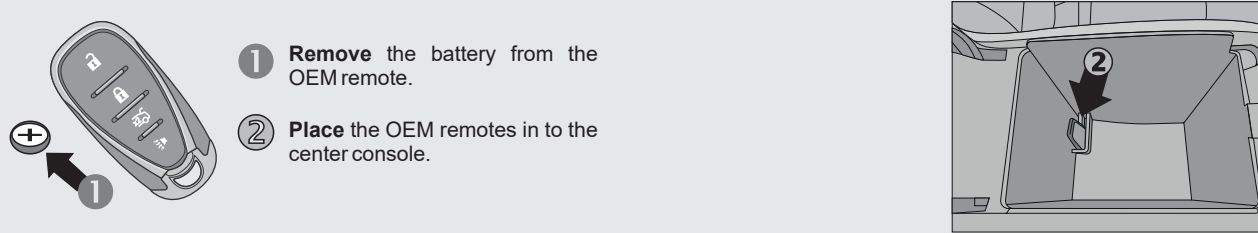

1 Remove the battery from the OEM remote.

2 Place the OEM remotes in to the center console.


1



Press and hold the programming button:
Insert the 6-Pin Main connector.


↳The LEDs will alternate between BLUE, RED, YELLOW & BLUE/RED flashes.

2

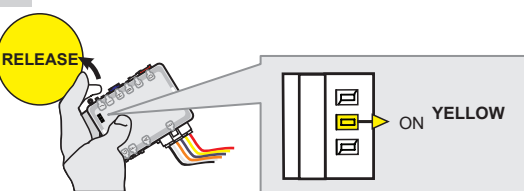


Release the programming button when the LED is YELLOW.

 If the LED is not solid YELLOW **disconnect** the 6-Pin connector (Main-Harness) and go back to step 1.




3

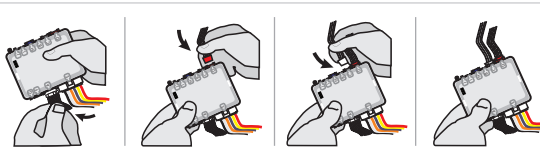

Insert the required remaining connectors.

4

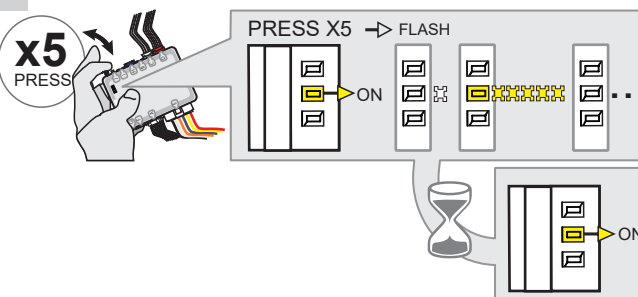


Press and release the programming button five (5x) times.

↳The YELLOW LED will flash 5 times each second.


↳WAIT for the YELLOW LED to turn ON solide.

5

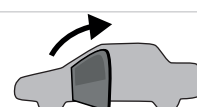

Open the driver door.

6

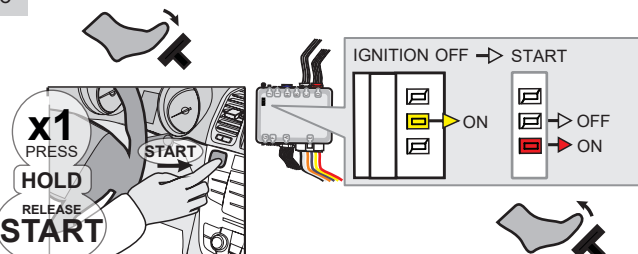

Press the foot-brake pedal.

Press the Push-to-Start button until the engine start.

Release the foot-brake pedal.

↳The RED LED will turn ON.
↳The YELLOW LED will turn OFF.


KEY BYPASS PROGRAMMING PROCEDURE 2/2

7





Press the Push-to-Start button until the engine turn OFF.

8

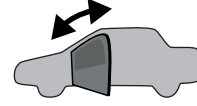

Close and open the driver door.

9

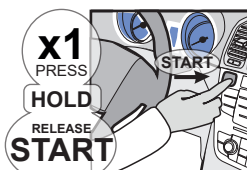
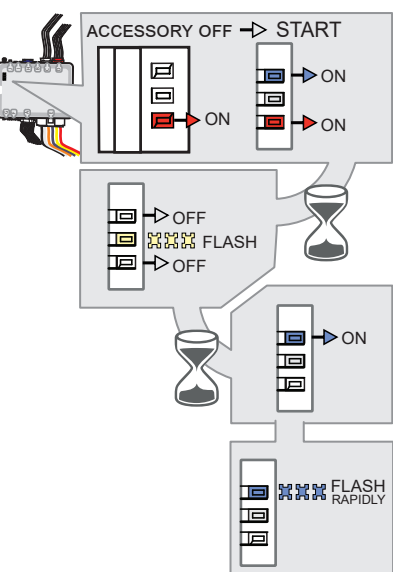
Press the foot-brake pedal.

Press the Push-to-Start button until the engine start.

Release the foot-brake pedal.

- ↳ The BLUE LED will turn ON.
- ↳ The BLUE LED will turn OFF. The RED LED will turn OFF.
- ↳ The YELLOW LED will flash rapidly
- ↳ The BLUE LED will turn ON.
- ↳ The BLUE LED will flash rapidly

10

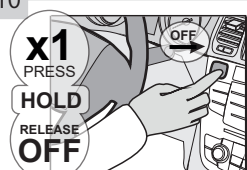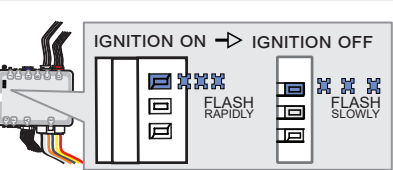Press the Push-to-Start button until the engine turn OFF.


- ↳ The BLUE LED will flash slowly

11



Disconnect all connectors and after the 6-Pin (Main-Harness) or the 4-Pin Data-link connector.

12

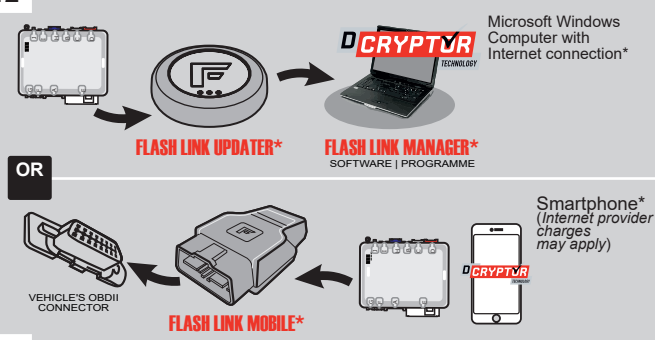

Microsoft Windows Computer with Internet connection*

FLASH LINK UPDATER* | **FLASH LINK MANAGER*** SOFTWARE | PROGRAMME

OR

Smartphone* (Internet provider charges may apply)


FLASH LINK MOBILE*

Use the tool: FLASH LINK UPDATER or FLASH LINK MOBILE to visit the DCryptor menu.

*Parts required (not included)

KEY BYPASS PROGRAMMING PROCEDURE 3/3

13

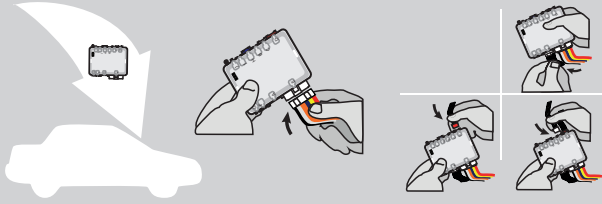

AFTER DCRYPTOR PROGRAMMING COMPLETED
 Go back to the vehicle and **reconnect** the 6-Pin (Main-Harness) or the 4-pins (Data-Link) connector and after all the remaining connector.



The module is now programmed.




REMOTE STARTER / ALARM VERIFICATION PROCEDURE

Test the remote starter. Remote start the vehicle.

REMOTE STARTER PROGRAMMING PROCEDURE




REFER TO THE **QUICK INSTALL GUIDE** INCLUDED WITH THE MODULE FOR THE REMOTE STARTER PROGRAMMING.

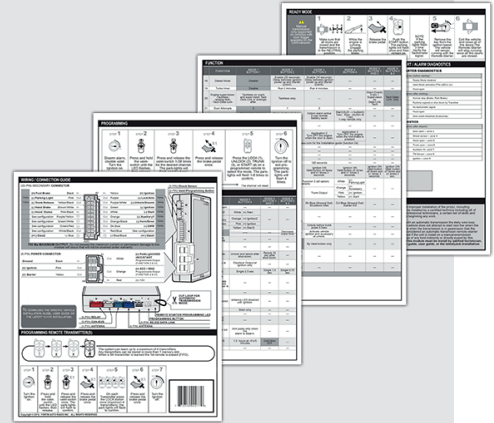

REMOTE STARTER FUNCTIONALITY |



 All doors must be closed.




Remote start the vehicle.



Unlock the doors with either:

 - The OEM remote
- The remote-starter remote
- Or the proximity remote



Enter the vehicle with the Intelligent Key.



The vehicle can now be put in to gear and driven.



If the vehicle is not unlocked with one of these conditions the remote-starter will shut down as soon as any door is opened.

THAR-GM6 THARNESSE INSTALLATION

ADDENDUM - SUGGESTED WIRING CONFIGURATION

VEHICLE	YEARS	Vehicle functions supported in this diagram (functional if equipped)														
		Immobilizer bypass	Lock	Unlock	Arm	Disarm	Trunk (open)	RAP Disable	Tachometer	Door Status	Trunk Status	Hood Status*	Hand-Brake Status	Foot-Brake Status	Push-to-Start Control	OEM Remote monitoring
CADILLAC																
ATS	Push-to-start	2013-2017	•	•	•	•	•	•	•	•	•	•	•	•	•	•
CTS	Push-to-start	2014-2016	•	•	•	•	•	•	•	•	•	•	•	•	•	•
CTS-V	Push-to-start	2013-2016	•	•	•	•	•	•	•	•	•	•	•	•	•	•
Escalade	Push-to-start	2015-2019	•	•	•	•	•	•	•	•	•	•	•	•	•	•
CHEVROLET																
Tahoe	Push-to-start	2015-2019	•	•	•	•	•	•	•	•	•	•	•	•	•	•
Suburban	Push-to-start	2015-2019	•	•	•	•	•	•	•	•	•	•	•	•	•	•
GMC																
Yukon	Push-to-start	2015-2019	•	•	•	•	•	•	•	•	•	•	•	•	•	•
	XL Push-to-start	2015	•	•	•	•	•	•	•	•	•	•	•	•	•	•

BYPASS FIRMWARE VERSION

70.[41]

GM MINIMUM

To add the firmware version and the options, use the **FLASH LINK UPDATER** or **FLASH LINK MOBILE** tool, sold separately.

		UNIT OPTION	DESCRIPTION
	Program bypass option IF THE VEHICLE IS NOT EQUIPPED WITH FUNCTIONAL HOOD PIN:	A11	<div style="background-color: red; color: white; padding: 5px; display: inline-block;">OFF</div> Hood trigger (Output Status).

		UNIT OPTION	DESCRIPTION
	Program bypass option:	C1	OEM Remote status (Lock/Unlock) monitoring
		D6	Push-to-Start

ATTENTION!

DATE: XX-XX

E5

OFF

By default DEACTIVATED

ON

MANUFACTURED MODULES BETWEEN: 04/2018 TO 04/2019

Parts required (Not included): 1X THAR-GM6

MANDATORY INSTALL

*** HOOD PIN**

HOOD STATUS: THE HOOD PIN SWITCH (INCLUDED) MUST BE INSTALLED IF THE VEHICLE CAN BE REMOTE STARTED WITH THE HOOD OPEN, SET FUNCTION **A11** TO OFF.

A11

OFF

SECURITY STICKER

Included

Notice: the installation of safety elements are mandatory. The hood pin and the sticker are essential security elements and must be installed.

THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.

DESCRIPTION

Program remote starter option for R.S.
OEM REMOTE STAND ALONE:

38



2

Enable
Press 3x Lock to remote start with the OEM remote.







BCM



CTS		ATS
Escalade Tahoe Suburban Yukon	Under driver dash	Behind glove box

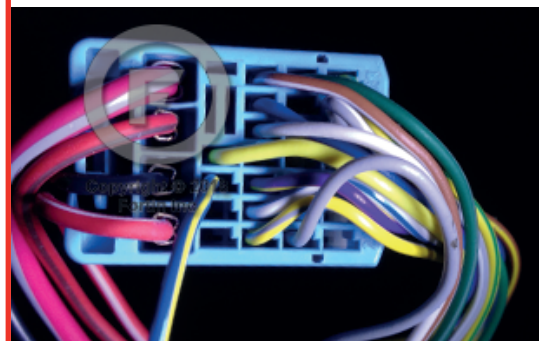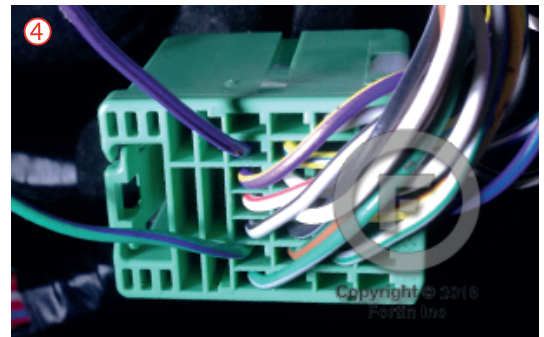

AUTOMATIC TRANSMISSION WIRING CONNECTION

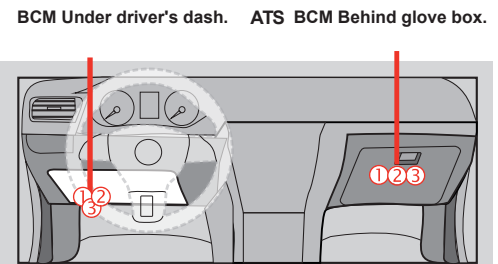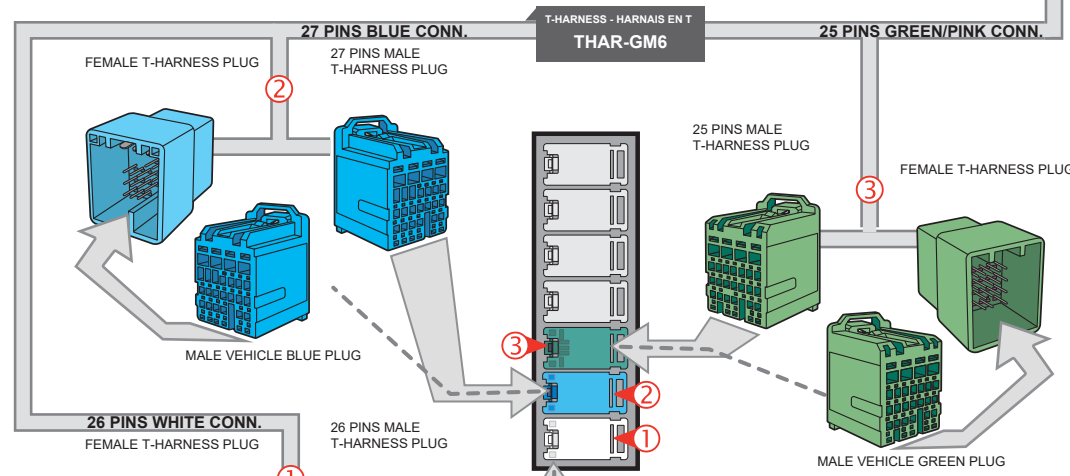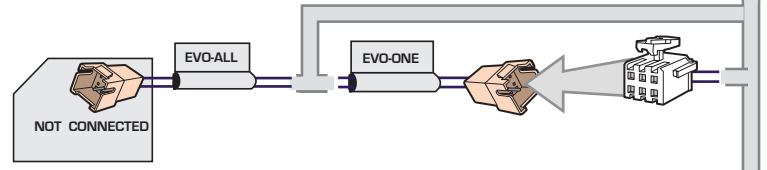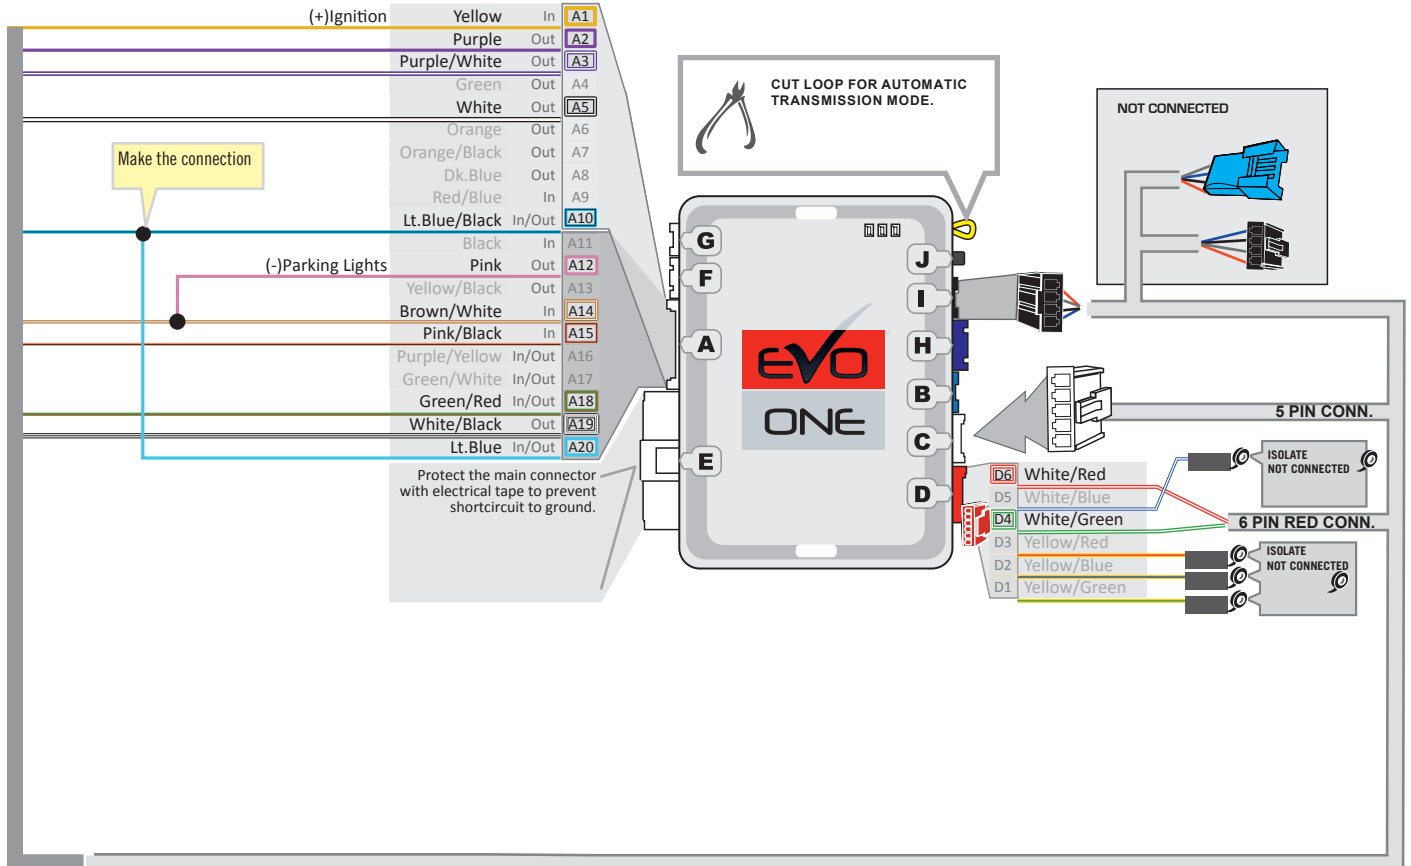

MANUAL TRANSMISSION WIRING CONNECTION

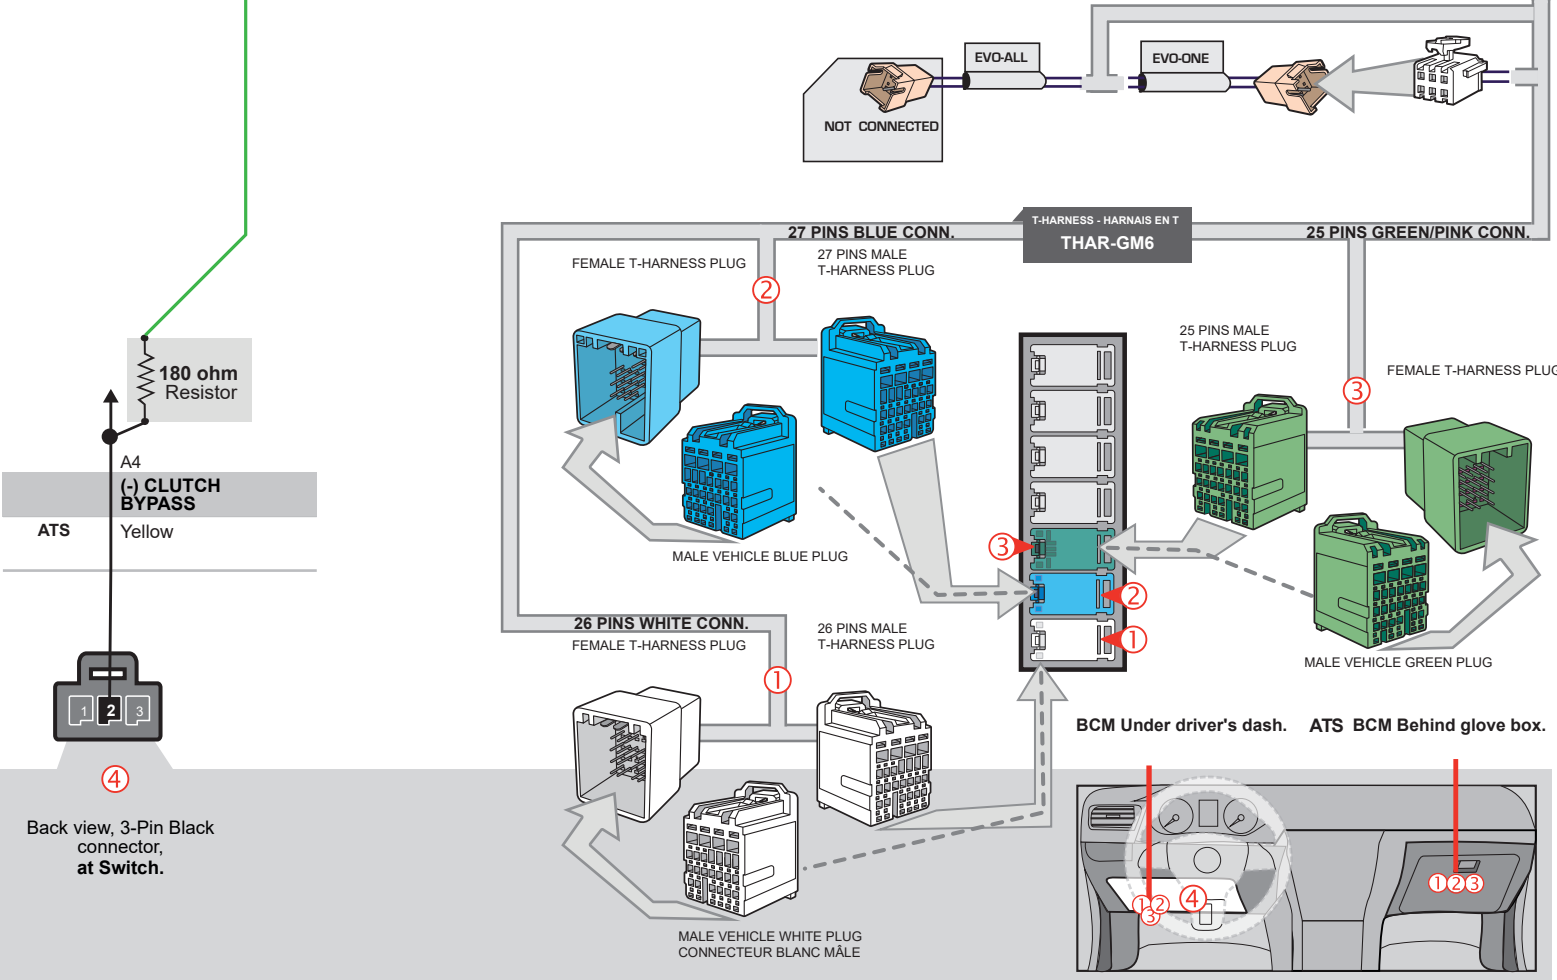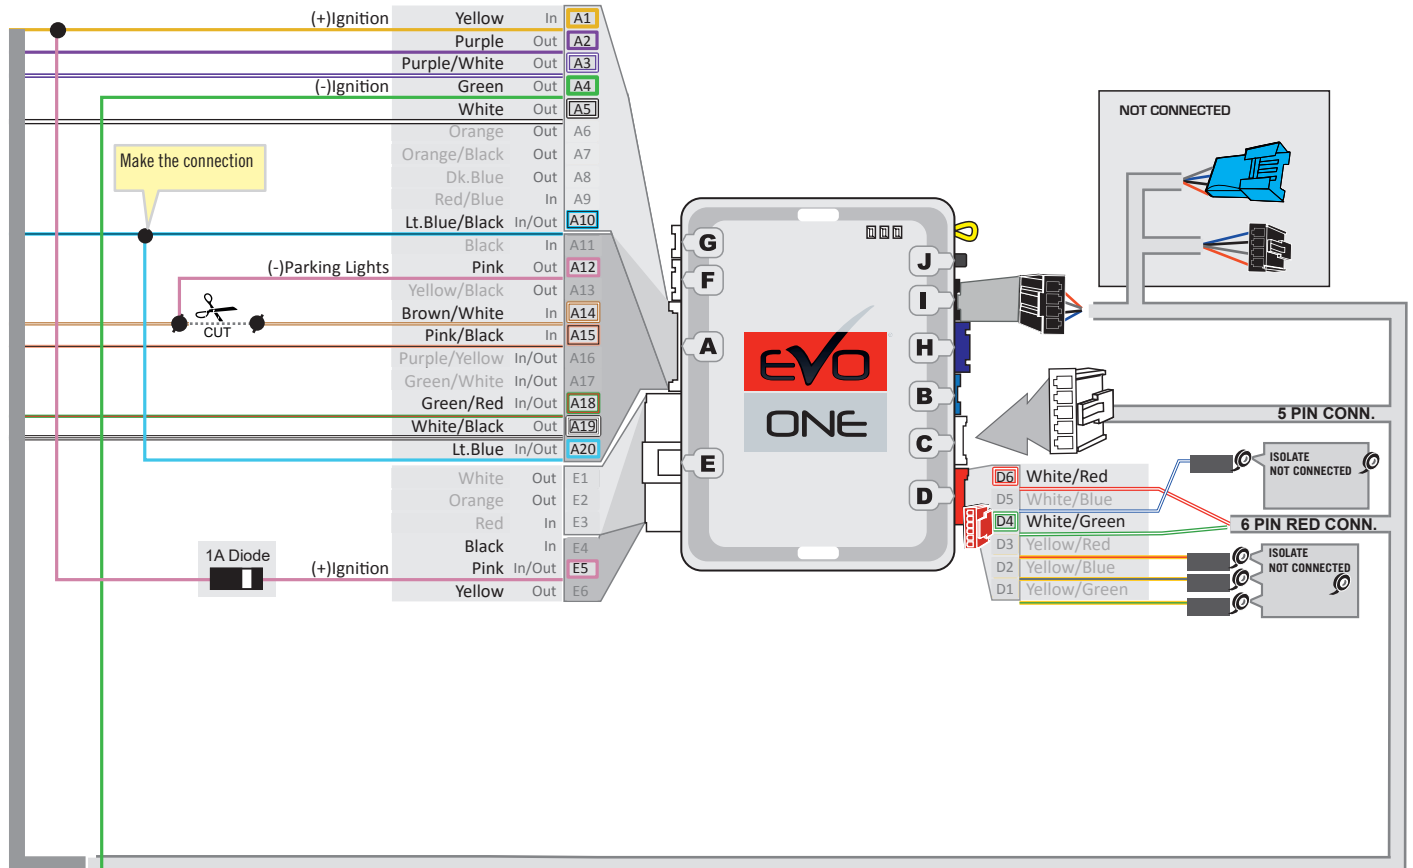


KEY BYPASS PROGRAMMING PROCEDURE 1/2

1 Remove the battery from the OEM remote.

2 Place the OEM remote in the **back** cup holder in the center console.

Refer to vehicle user guide for keyport location.




ATS


1 Remove the battery from the OEM remote.

2 Place the transmitter in the transmitter pocket, which is inside the **centre** console storage area.

Refer to vehicle user guide for keyport location.

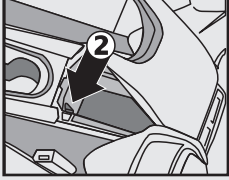

1

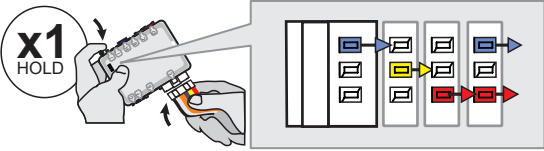


x1 HOLD

Press and hold the programming button:
Insert the 6-Pin Main connector.

↳The LEDs will alternate between BLUE, RED, YELLOW & BLUE/RED flashes.

2

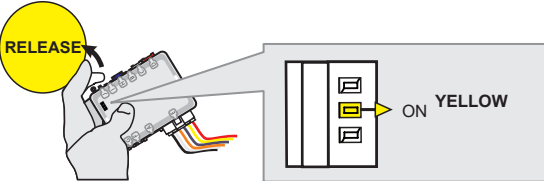


RELEASE

ON YELLOW

Release the programming button when the LED is **YELLOW**.

If the LED is not solid YELLOW disconnect the 6-Pin connector (Main-Harness) and go back to step 1.

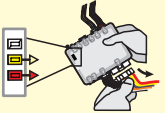


3



Insert the required remaining connectors.

4

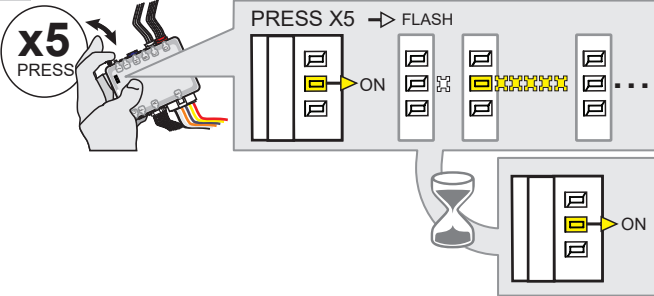

x5 PRESS

PRESS X5 → FLASH

ON

FLASH


ON

Press and release the programming button five (5x) times.

↳The YELLOW LED will flash 5 times each second.


↳WAIT for the YELLOW LED to turn ON solide.

5

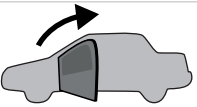

Open the driver door.

6

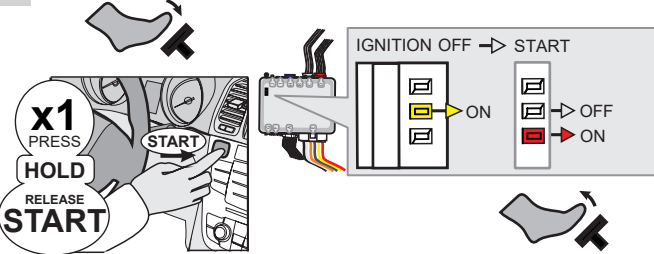

x1 PRESS

HOLD

RELEASE

START

IGNITION OFF → START

ON

OFF

ON

Press the foot-brake pedal.

Press the Push-to-Start button until the engine start.

Release the foot-brake pedal.

↳The RED LED will turn ON.

↳The YELLOW LED will turn OFF.


KEY BYPASS PROGRAMMING PROCEDURE 2/2 |

7




Press the Push-to-Start button until the engine turn OFF.

8

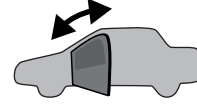

Close and open the driver door.

9

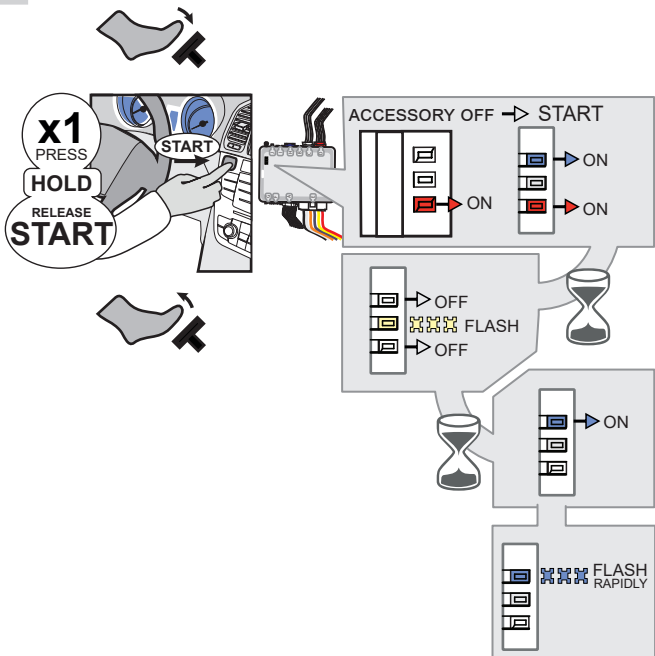


Press the foot-brake pedal.

Press the Push-to-Start button until the engine start.

Release the foot-brake pedal.

- ↳ The BLUE LED will turn ON.
- ↳ The BLUE LED will turn OFF. The RED LED will turn OFF.
- ↳ The YELLOW LED will flash rapidly
- ↳ The BLUE LED will turn ON.
- ↳ The BLUE LED will flash rapidly

10

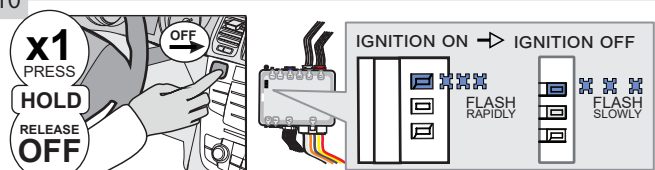

Press the Push-to-Start button until the engine turn OFF.


- ↳ The BLUE LED will flash slowly

11



Disconnect all connectors and after the 6-Pin (Main-Harness) or the 4-Pin Data-link connector.

12

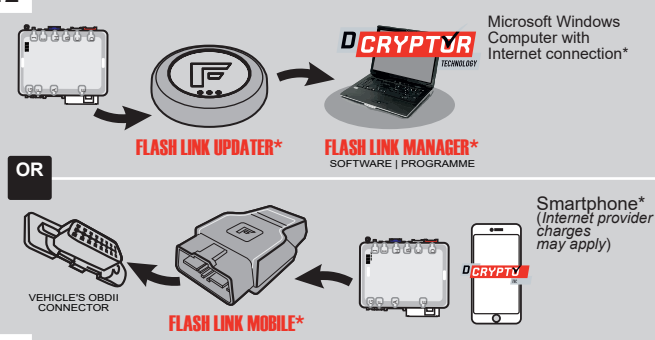

Microsoft Windows Computer with Internet connection*

FLASH LINK UPDATER* FLASH LINK MANAGER*
SOFTWARE | PROGRAMME

OR


Smartphone* (Internet provider charges may apply)

VEHICLE'S OBDII CONNECTOR FLASH LINK MOBILE*

Use the tool: FLASH LINK UPDATER or FLASH LINK MOBILE to visit the DCryptor menu.

*Parts required (not included)

13

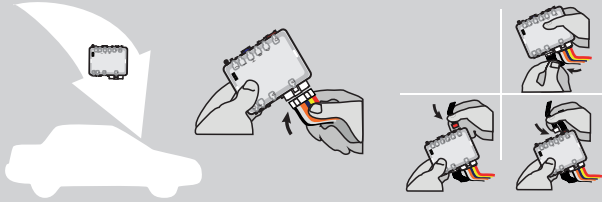

AFTER DCRYPTOR PROGRAMMING COMPLETED
 Go back to the vehicle and **reconnect** the 6-Pin (Main-Harness) or the 4-pins (Data-Link) connector and after all the remaining connector.



The module is now programmed.




REMOTE STARTER / ALARM VERIFICATION PROCEDURE

Test the remote starter. Remote start the vehicle.

REMOTE STARTER PROGRAMMING PROCEDURE |



REFER TO THE **QUICK INSTALL GUIDE** INCLUDED WITH THE MODULE FOR THE REMOTE STARTER PROGRAMMING.

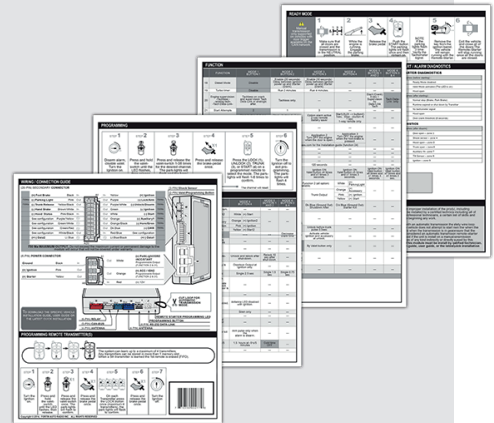

REMOTE STARTER FUNCTIONALITY |



All doors must be closed.

 


Remote start the vehicle.



Unlock the doors with either:

- The OEM remote
- The remote-starter remote
- Or the proximity remote



Enter the vehicle with the Intelligent Key.




The vehicle can now be put in to gear and driven.




If the vehicle is not unlocked with one of these conditions the remote-starter will shut down as soon as any door is opened.

THAR-GM6 THARNNESS INSTALLATION

ADDENDUM - SUGGESTED WIRING CONFIGURATION


VEHICLE	YEARS	Vehicle functions supported in this diagram (functional if equipped)																
		Immobilizer bypass	Lock	Unlock	Arm	Disarm	Trunk (open)	Parking Light	RAP Disable	Tachometer	Heated Seats	Door Status	Hood Status	Trunk Status	Hand-Brake Status	Foot-Brake Status	OEM Remote Monitoring	R.S. OEM remote Stand Alone compatible
																		
CHEVROLET																		
Corvette	Push-To-Start	2014-2019	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•


 **BYPASS FIRMWARE VERSION**


70.[41]

GM MINIMUM


To add the firmware version and the options, use the **FLASH LINK UPDATER** or **FLASH LINK MOBILE** tool, sold separately.

	Program bypass option IF THE VEHICLE IS NOT EQUIPPED WITH FUNCTIONAL HOOD PIN:	UNIT OPTION		DESCRIPTION
		A11	OFF	Hood trigger (Output Status).


	Program bypass option:	UNIT OPTION		DESCRIPTION
		C1		OEM Remote status (Lock/Unlock) monitoring
		D6		Push-to-Start

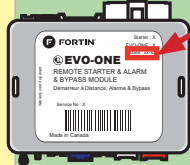 **ATTENTION!**  DATE: XX-XX

E5	OFF	By default DEACTIVATED
	ON	MANUFACTURED MODULES BETWEEN: 04/2018 TO 04/2019

 **Parts required** (Not included): 1X THAR-GM6

MANDATORY INSTALL

*** HOOD PIN** 

HOOD STATUS: THE HOOD PIN SWITCH (INCLUDED) MUST BE INSTALLED IF THE VEHICLE CAN BE REMOTE STARTED WITH THE HOOD OPEN, SET FUNCTION **A11** TO OFF.

A11 **OFF**

SECURITY STICKER

 Included

Notice: the installation of safety elements are mandatory. The hood pin and the sticker are essential security elements and must be installed.

THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.

DESCRIPTION

Program remote starter option for R.S.
OEM REMOTE STAND ALONE:


38

2


Enable
Press 3x Lock to remote start with the OEM remote.



At the BCM
Au BCM

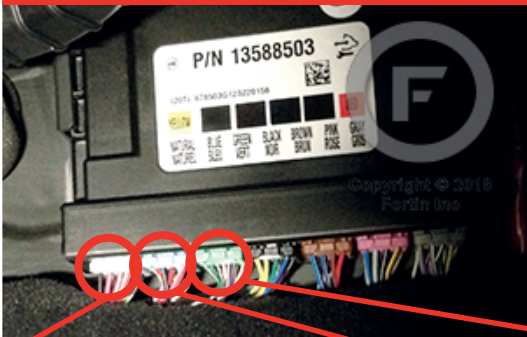


③

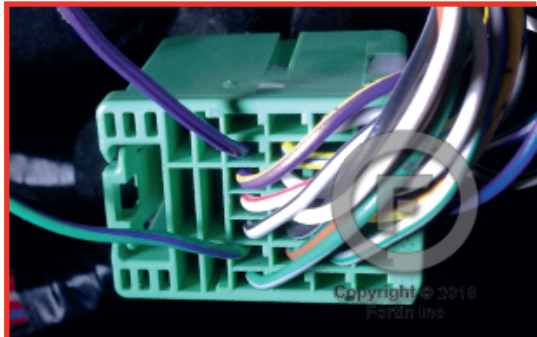




①





②

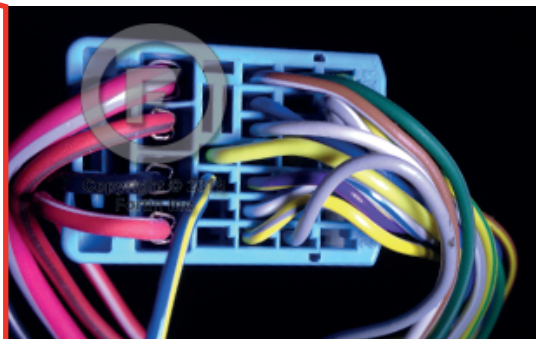



AUTOMATIC TRANSMISSION WIRING CONNECTION

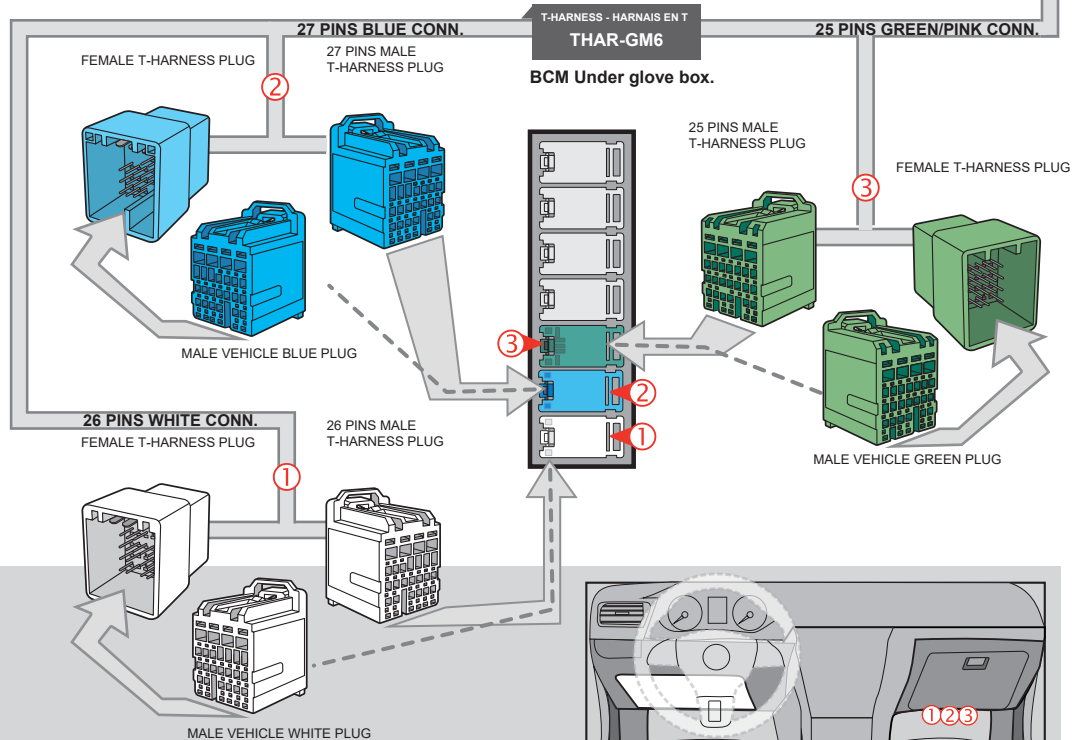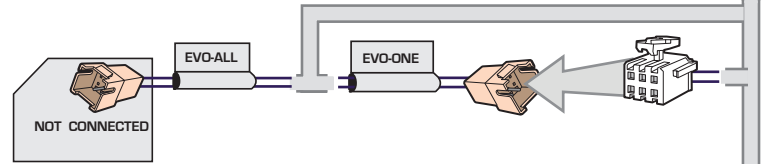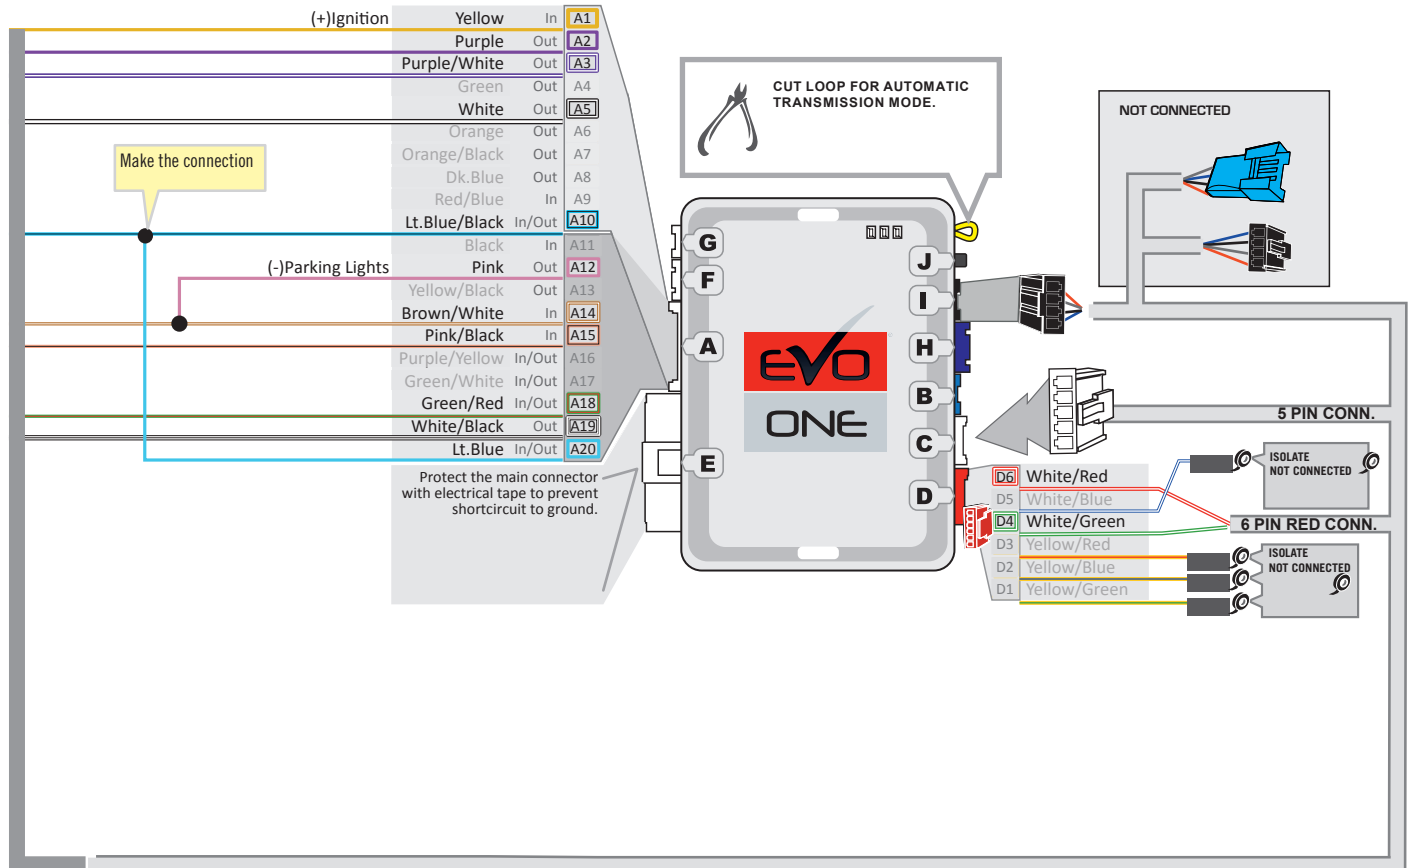


MANUAL TRANSMISSION WIRING CONNECTION

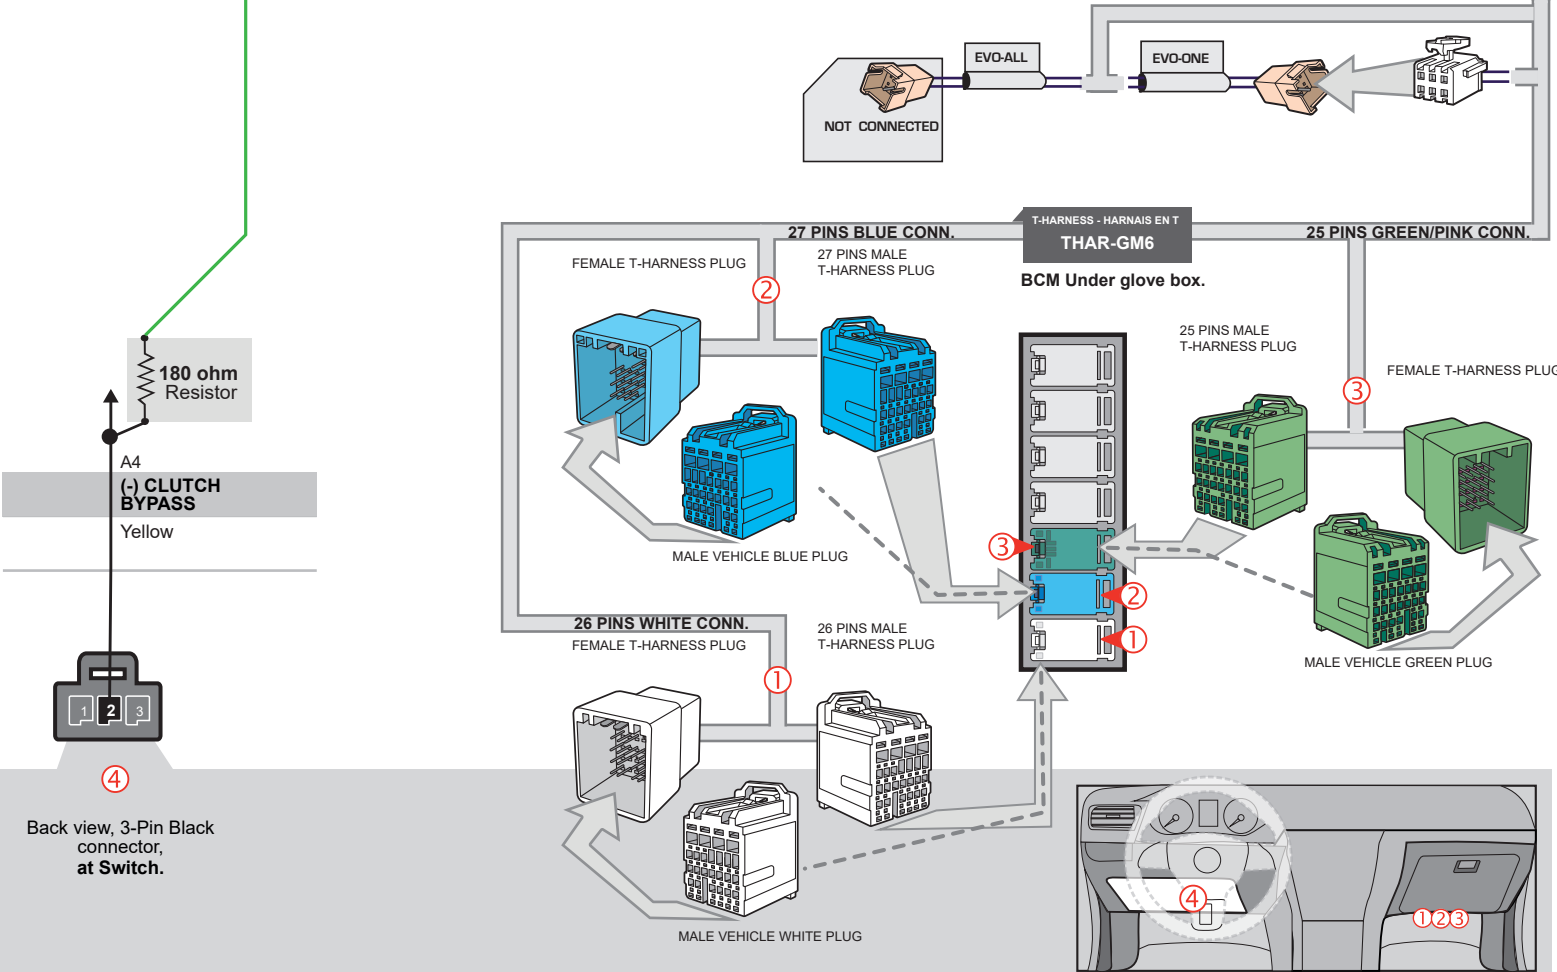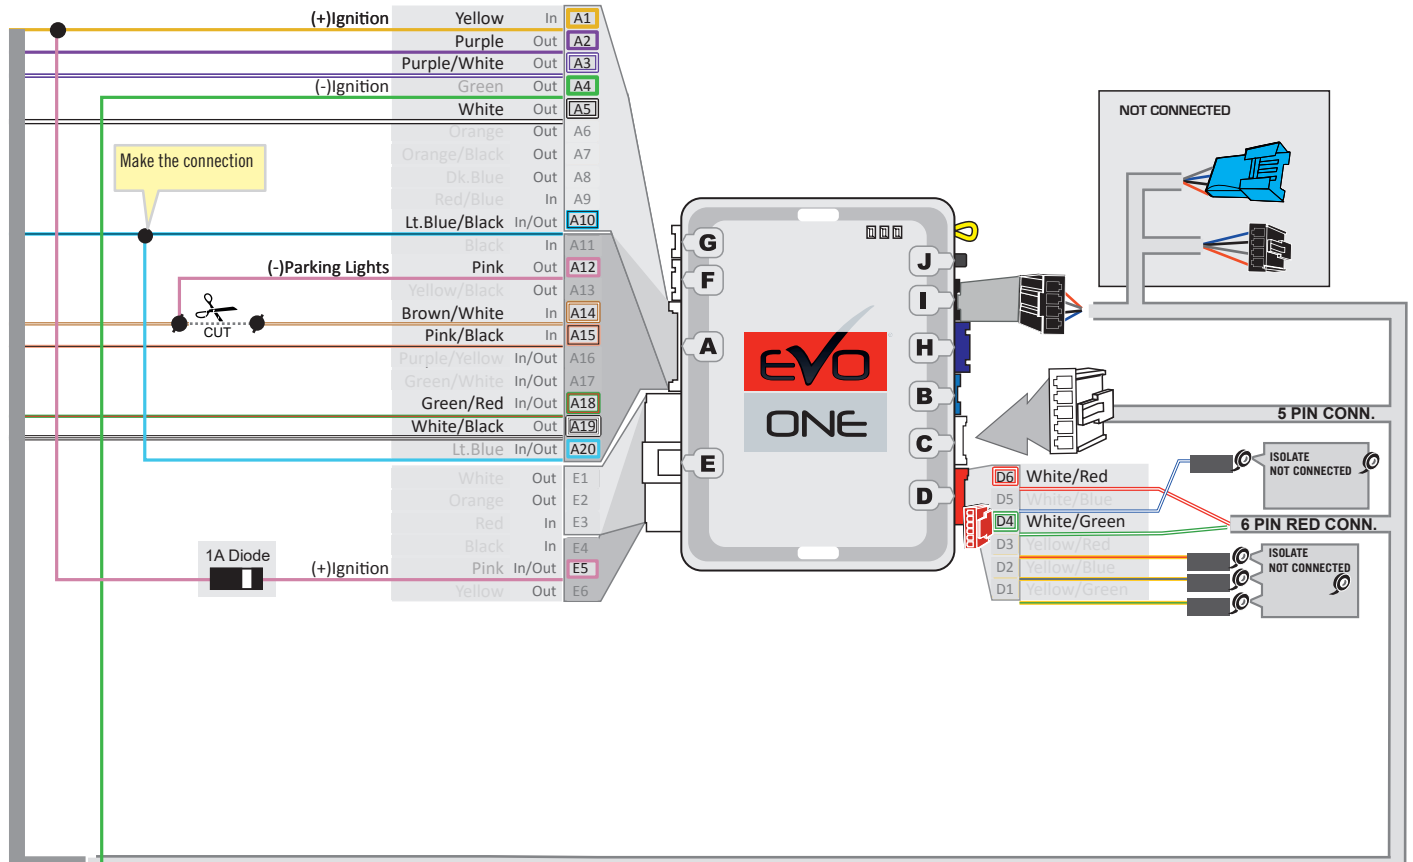


KEY BYPASS PROGRAMMING PROCEDURE 1/2

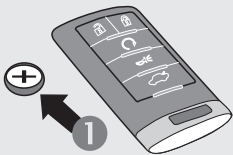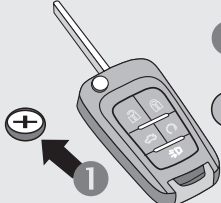FIRST GENERATION	 <p>1 Remove the battery from the OEM remote.</p> <p>2 First generation OEM remotes: Place the OEM remotes in the key older.</p>
SECOND GENERATION	 <p>1 Remove the battery from the OEM remote.</p> <p>2 Second generation OEM remotes: Place the OEM remotes in to the center console.</p>

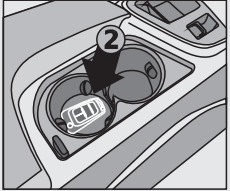

1

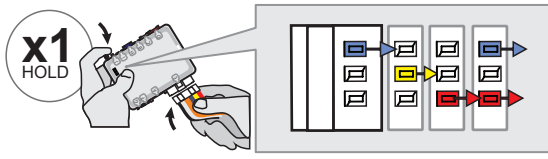


x1 HOLD

Press and hold the programming button:
Insert the 6-Pin Main connector.

↳The LEDs will alternate between BLUE, RED, YELLOW & BLUE/RED flashes.

2

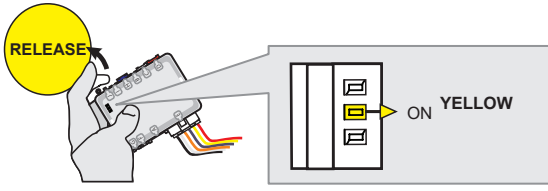


RELEASE


ON YELLOW

Release the programming button when the LED is YELLOW.

If the LED is not solid YELLOW **disconnect** the 6-Pin connector (Main-Harness) and go back to step 1.

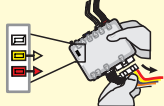


3

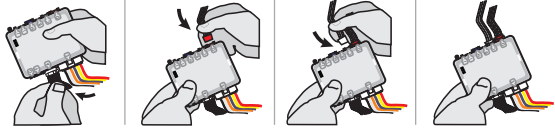

Insert the required remaining connectors.

4

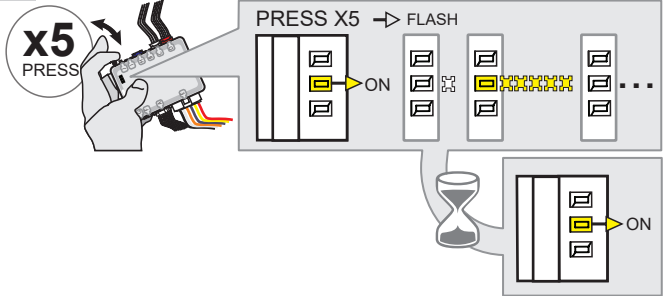

x5 PRESS

PRESS X5 → FLASH

ON


ON

Press and release the programming button five (5x) times.

↳The YELLOW LED will flash 5 times each second.


↳**WAIT** for the YELLOW LED to turn ON solide.

5

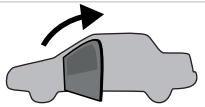

Open the driver door.

6

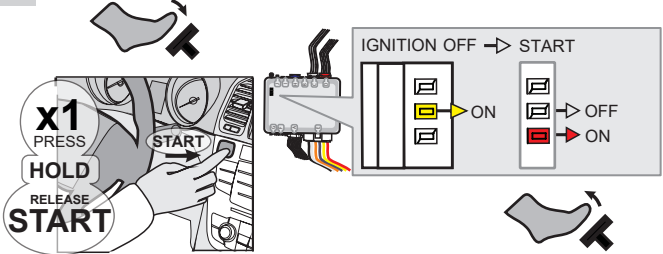

x1 PRESS

HOLD

RELEASE

START

IGNITION OFF → START

ON

OFF

ON

Press the foot-brake pedal.

Press the Push-to-Start button until the engine start.

Release the foot-brake pedal.

↳The RED LED will turn ON.
↳The YELLOW LED will turn OFF.


KEY BYPASS PROGRAMMING PROCEDURE 2/2

7




Press the Push-to-Start button until the engine turn OFF.

8

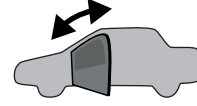

Close and open the driver door.

9

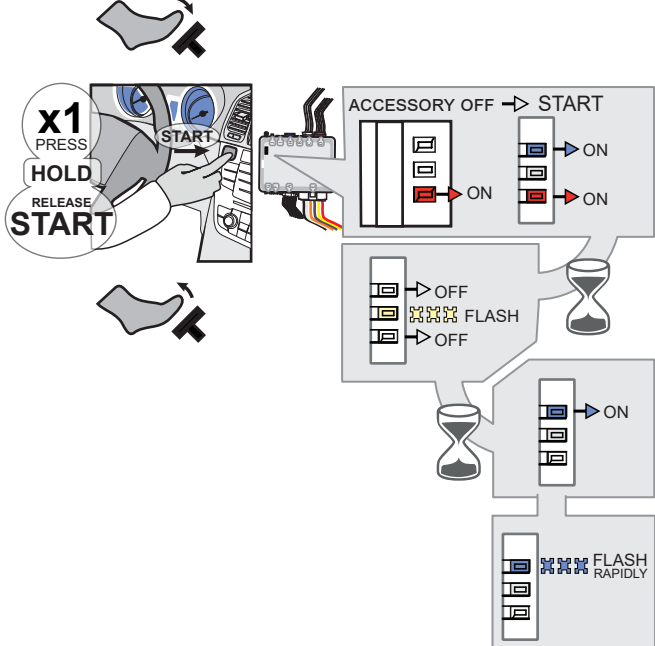


Press the foot-brake pedal.

Press the Push-to-Start button until the engine start.

Release the foot-brake pedal.

- ↳ The BLUE LED will turn ON.
- ↳ The BLUE LED will turn OFF. The RED LED will turn OFF.
- ↳ The YELLOW LED will flash rapidly
- ↳ The BLUE LED will turn ON.
- ↳ The BLUE LED will flash rapidly

10

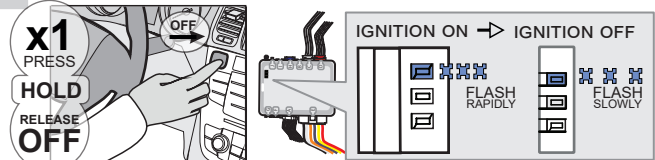

Press the Push-to-Start button until the engine turn OFF.


- ↳ The BLUE LED will flash slowly

11



Disconnect all connectors and after the 6-Pin (Main-Harness) or the 4-Pin Data-link connector.

12

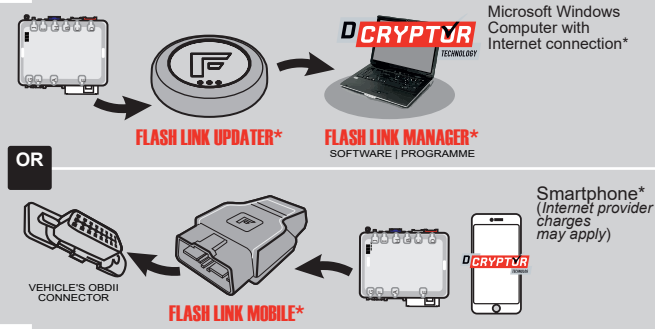

Microsoft Windows Computer with Internet connection*

FLASH LINK UPDATER* FLASH LINK MANAGER*
SOFTWARE | PROGRAMME

OR

Smartphone* (Internet provider charges may apply)


VEHICLE'S OBDII CONNECTOR FLASH LINK MOBILE*

Use the tool: FLASH LINK UPDATER or FLASH LINK MOBILE to visit the DCryptor menu.

*Parts required (not included)

KEY BYPASS PROGRAMMING PROCEDURE 3/3

13

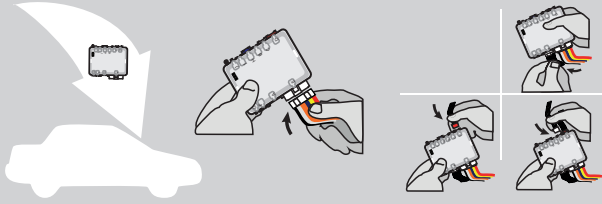

AFTER DCRYPTOR PROGRAMMING COMPLETED
 Go back to the vehicle and **reconnect** the 6-Pin (Main-Harness) or the 4-pins (Data-Link) connector and after all the remaining connector.



The module is now programmed.




REMOTE STARTER / ALARM VERIFICATION PROCEDURE

Test the remote starter. Remote start the vehicle.

REMOTE STARTER PROGRAMMING PROCEDURE



REFER TO THE **QUICK INSTALL GUIDE** INCLUDED WITH THE MODULE FOR THE REMOTE STARTER PROGRAMMING.

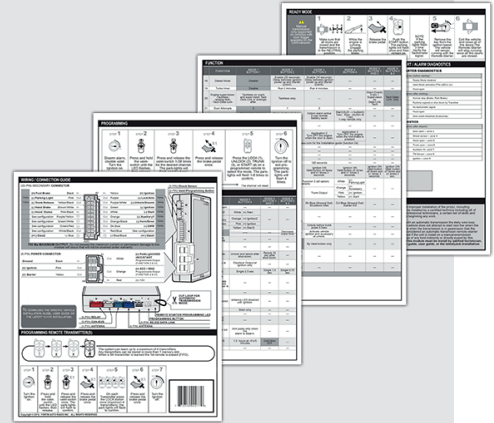

REMOTE STARTER FUNCTIONALITY |



All doors must be closed.

 


Remote start the vehicle.



Unlock the doors with either:

- The OEM remote
- The remote-starter remote
- Or the proximity remote



Enter the vehicle with the Intelligent Key.



The vehicle can now be put in to gear and driven.



If the vehicle is not unlocked with one of these conditions the remote-starter will shut down as soon as any door is opened.

THAR-GM6 THARNESSE INSTALLATION

ADDENDUM - SUGGESTED WIRING CONFIGURATION

VEHICLE		YEARS	Vehicle functions supported in this diagram (functional if equipped)													
			Immobilizer bypass	Lock	Unlock	Arm	Disarm	Trunk (open)	RAP Disable	Tachometer	Heated Seats	Door Status	Trunk Status	Hand-Brake Status	Foot-Brake Status	OEM Remote Monitoring
CHEVROLET																
Cruze	Push-To-Start	2012-2015	•	•	•	•	•	•	•	•	•	•	•	•	•	•

BYPASS FIRMWARE VERSION

70.[41]

GM MINIMUM

To add the firmware version and the options, use the **FLASH LINK UPDATER** or **FLASH LINK MOBILE** tool, sold separately.

		UNIT OPTION	DESCRIPTION
	Program bypass option IF THE VEHICLE IS NOT EQUIPPED WITH FUNCTIONAL HOOD PIN:	A11	OFF
Hood trigger (Output Status).			

		UNIT OPTION	DESCRIPTION
	Program bypass option:	C1	OEM Remote status (Lock/Unlock) monitoring
		D6	Push-to-Start

ATTENTION!

DATE: XX-XX

E5

OFF

ON

By default DEACTIVATED

MANUFACTURED MODULES BETWEEN: 04/2018 TO 04/2019

Parts required (Not included): 1X THAR-GM6

MANDATORY INSTALL

*** HOOD PIN**



HOOD STATUS: THE HOOD PIN SWITCH (INCLUDED) MUST BE INSTALLED IF THE VEHICLE CAN BE REMOTE STARTED WITH THE HOOD OPEN, SET FUNCTION A11 TO OFF.

A11

OFF

SECURITY STICKER



Included

Notice: the installation of safety elements are mandatory. The hood pin and the sticker are essential security elements and must be installed.

THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.

DESCRIPTION

Program remote starter option for R.S.
OEM REMOTE STAND ALONE::


38

2

Enable
Press 3x Lock to remote start with the OEM remote.




BCM

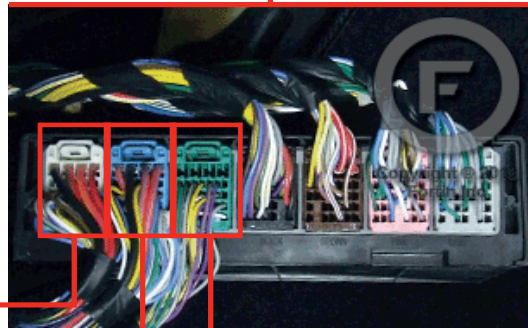


①






②

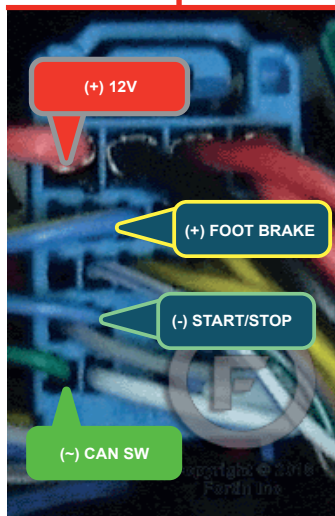




③

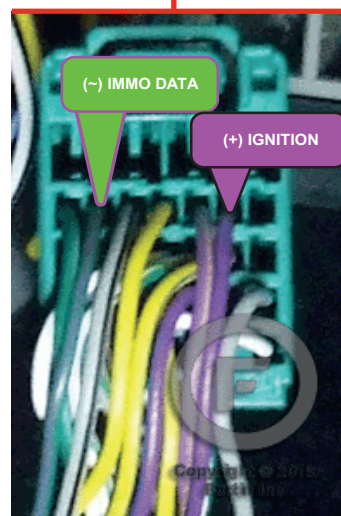


AUTOMATIC TRANSMISSION WIRING CONNECTION

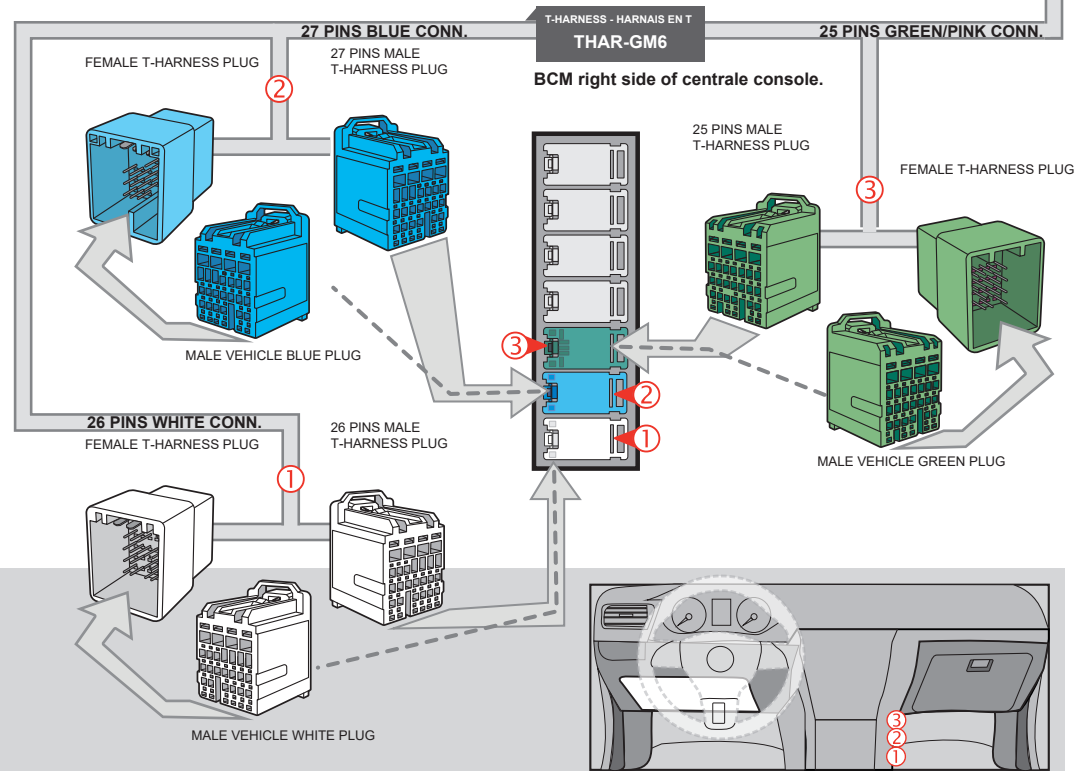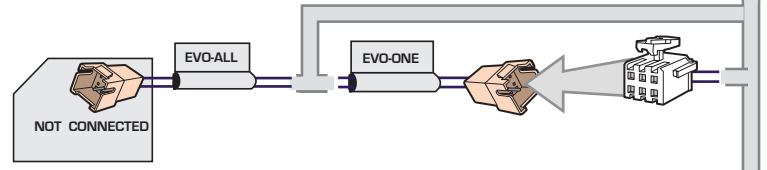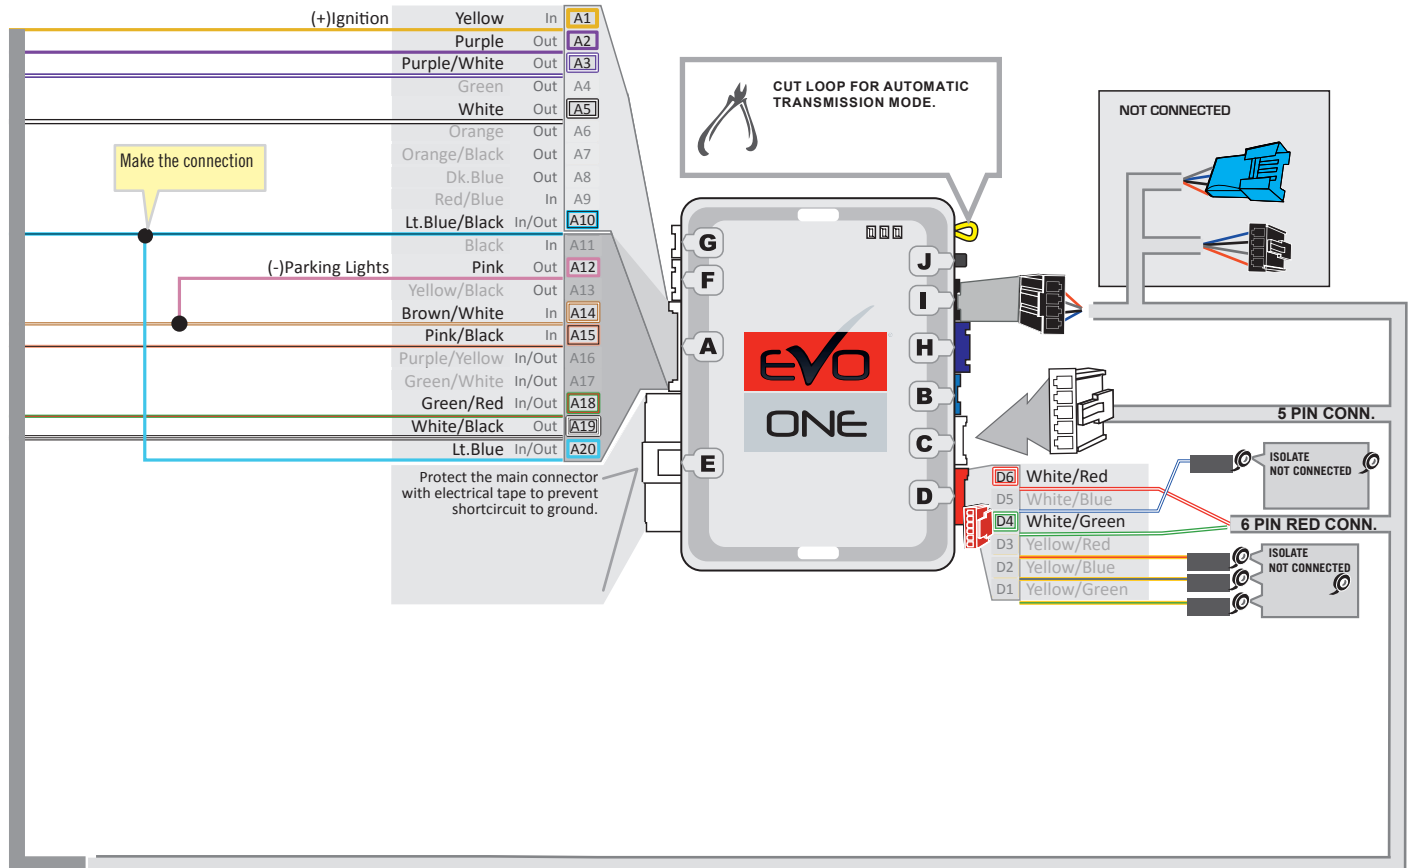

KEY BYPASS PROGRAMMING PROCEDURE 1/2

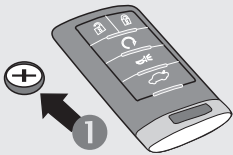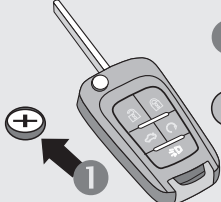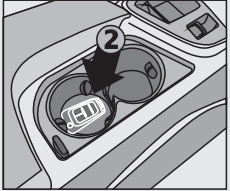FIRST GENERATION	 <p>1 Remove the battery from the OEM remote.</p> <p>2 First generation OEM remotes: Place the OEM remotes in the key older.</p>	
SECOND GENERATION	 <p>1 Remove the battery from the OEM remote.</p> <p>2 Second generation OEM remotes: Place the OEM remotes in to the center console.</p>	


1

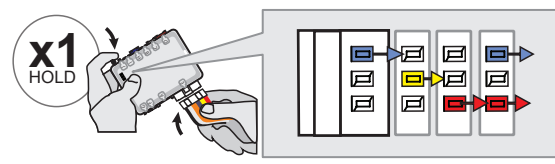

Press and hold the programming button:
Insert the 6-Pin Main connector.


↳The LEDs will alternate between BLUE, RED, YELLOW & BLUE/RED flashes.

2

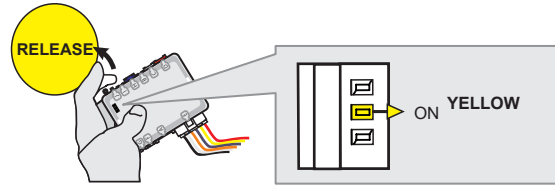


Release the programming button when the LED is YELLOW.

If the LED is not solid YELLOW **disconnect** the 6-Pin connector (Main-Harness) and go back to step 1.

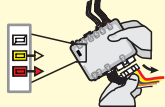


3

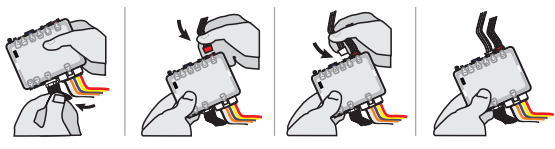

Insert the required remaining connectors.

4

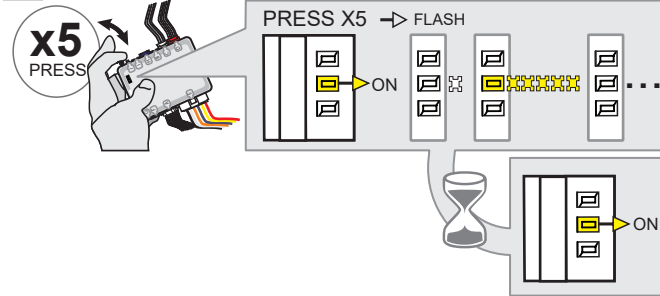


Press and release the programming button five (5x) times.

↳The YELLOW LED will flash 5 times each second.


↳**WAIT** for the YELLOW LED to turn ON solide.

 5



Open the driver door.

6

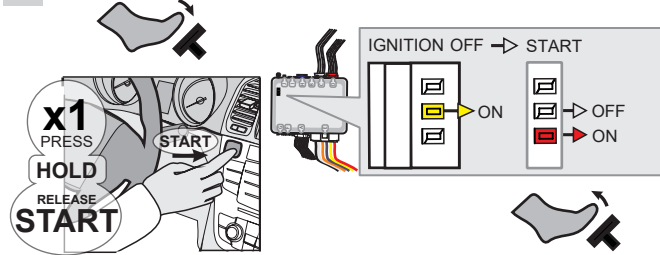

Press the foot-brake pedal.

Press the Push-to-Start button until the engine start.

Release the foot-brake pedal.

↳The RED LED will turn ON.
↳The YELLOW LED will turn OFF.


KEY BYPASS PROGRAMMING PROCEDURE 2/2

7




Press the Push-to-Start button until the engine turn OFF.

8

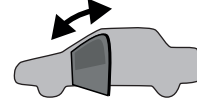

Close and open the driver door.

9

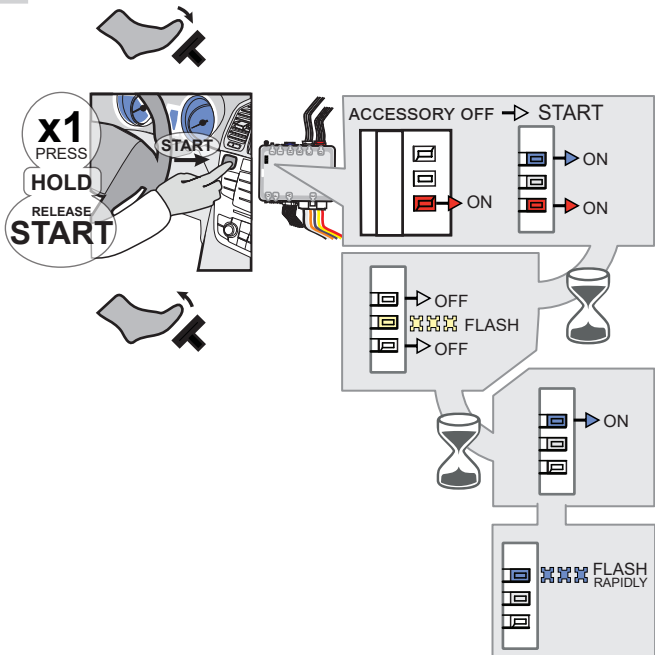


Press the foot-brake pedal.

Press the Push-to-Start button until the engine start.

Release the foot-brake pedal.

- ↳ The BLUE LED will turn ON.
- ↳ The BLUE LED will turn OFF. The RED LED will turn OFF.
- ↳ The YELLOW LED will flash rapidly
- ↳ The BLUE LED will turn ON.
- ↳ The BLUE LED will flash rapidly

10

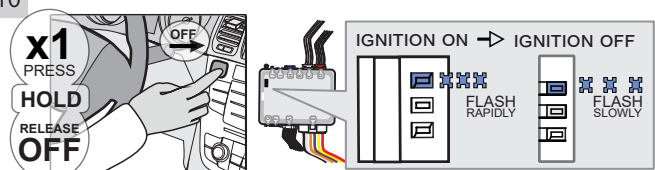

Press the Push-to-Start button until the engine turn OFF.


- ↳ The BLUE LED will flash slowly

11



Disconnect all connectors and after the 6-Pin (Main-Harness) or the 4-Pin Data-link connector.

12

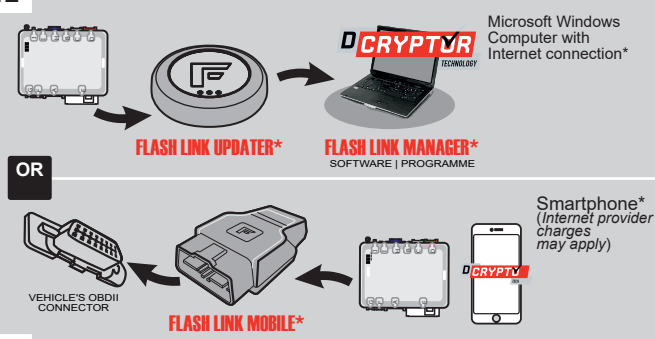

Microsoft Windows Computer with Internet connection*

FLASH LINK UPDATER* FLASH LINK MANAGER*
SOFTWARE | PROGRAMME

OR

Smartphone* (Internet provider charges may apply)


VEHICLE'S OBDII CONNECTOR FLASH LINK MOBILE*

Use the tool: FLASH LINK UPDATER or FLASH LINK MOBILE to visit the DCryptor menu.

*Parts required (not included)

KEY BYPASS PROGRAMMING PROCEDURE 3/3

13

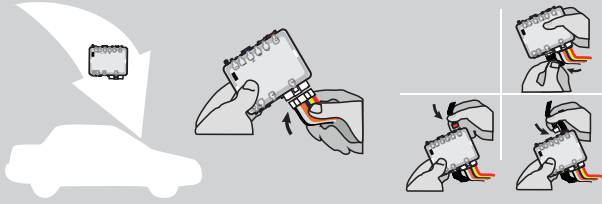

AFTER DCRYPTOR PROGRAMMING COMPLETED
 Go back to the vehicle and **reconnect** the 6-Pin (Main-Harness) or the 4-pins (Data-Link) connector and after all the remaining connector.



The module is now programmed.




REMOTE STARTER / ALARM VERIFICATION PROCEDURE

Test the remote starter. Remote start the vehicle.

REMOTE STARTER PROGRAMMING PROCEDURE



REFER TO THE **QUICK INSTALL GUIDE** INCLUDED WITH THE MODULE FOR THE REMOTE STARTER PROGRAMMING.

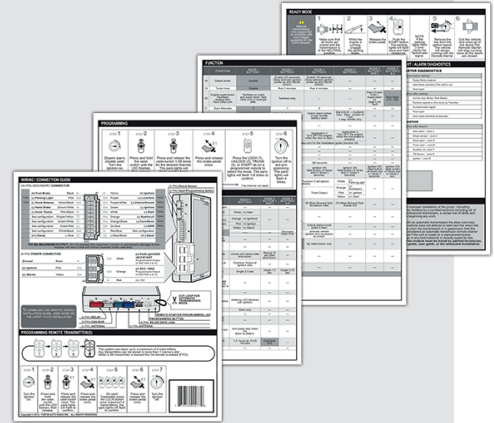

REMOTE STARTER FUNCTIONALITY |



All doors must be closed.

Remote start the vehicle.



Press the Unlock button of the remote car starter.



Enter the vehicle with the Intelligent Access Key.



The vehicle can now be put in to gear and driven.



If the vehicle is not unlocked the module will shut down the remote-starter and the vehicle as soon as any door is opened.

THAR-GM6 THARNESSE INSTALLATION

ADDENDUM - SUGGESTED WIRING CONFIGURATION

VEHICLE	YEARS	Vehicle functions supported in this diagram (functional if equipped)													
		Immobilizer bypass	Lock	Unlock	Arm	Disarm	Trunk (open)	RAP Disable	Tachometer	Heated Seats	Door Status	Trunk Status	Hand-Brake Status	Foot-Brake Status	OEM Remote Monitoring
CHEVROLET															
Cruze	Push-To-Start	2016-2019	•	•	•	•	•	•	•	•	•	•	•	•	•



BYPASS FIRMWARE VERSION

To add the firmware version and the options, use the **FLASH LINK UPDATER** or **FLASH LINK MOBILE** tool, sold separately.

70.[41]

GM MINIMUM

	Program bypass option IF THE VEHICLE IS NOT EQUIPPED WITH FUNCTIONAL HOOD PIN:	UNIT OPTION		DESCRIPTION
		A11	OFF	Hood trigger (Output Status).

	Program bypass option:	UNIT OPTION		DESCRIPTION
		C1		OEM Remote status (Lock/Unlock) monitoring
		D6		Push-to-Start

ATTENTION! DATE: XX-XX

E5

OFF By default DEACTIVATED

ON **MANUFACTURED MODULES BETWEEN: 04/2018 TO 04/2019**

Parts required (Not included): 1X THAR-GM6

MANDATORY INSTALL

* **HOOD PIN**



HOOD STATUS: THE HOOD PIN SWITCH (INCLUDED) MUST BE INSTALLED IF THE VEHICLE CAN BE REMOTE STARTED WITH THE HOOD OPEN, SET FUNCTION **A11** TO OFF.

A11

OFF

SECURITY STICKER



Included

Notice: the installation of safety elements are mandatory. The hood pin and the sticker are essential security elements and must be installed.

THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.

DESCRIPTION

Program remote starter option for R.S.
OEM REMOTE STAND ALONE:


38

2

Enable
Press 3x Lock to remote start with the OEM remote.




BCM, Above Driver kick panel

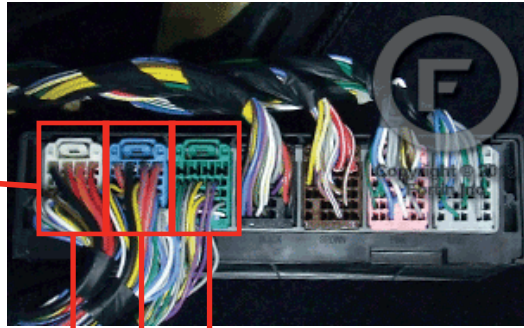


①







②

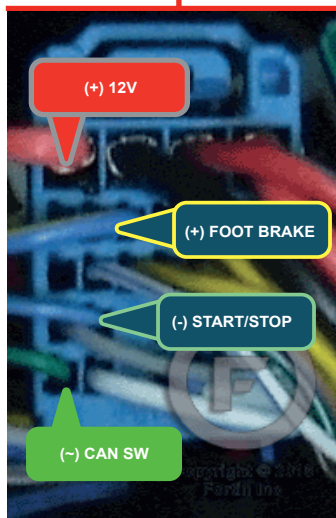




③

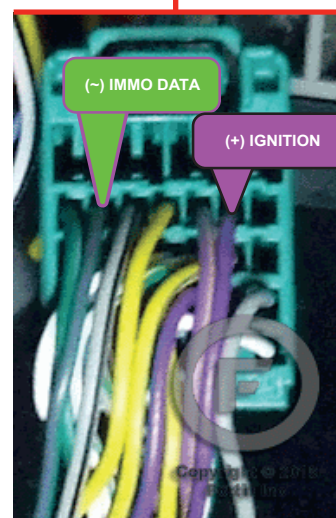


AUTOMATIC TRANSMISSION WIRING CONNECTION

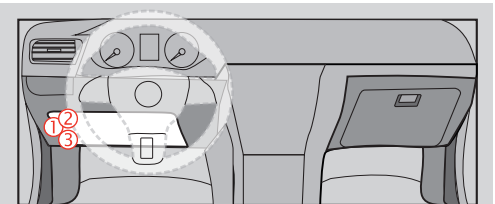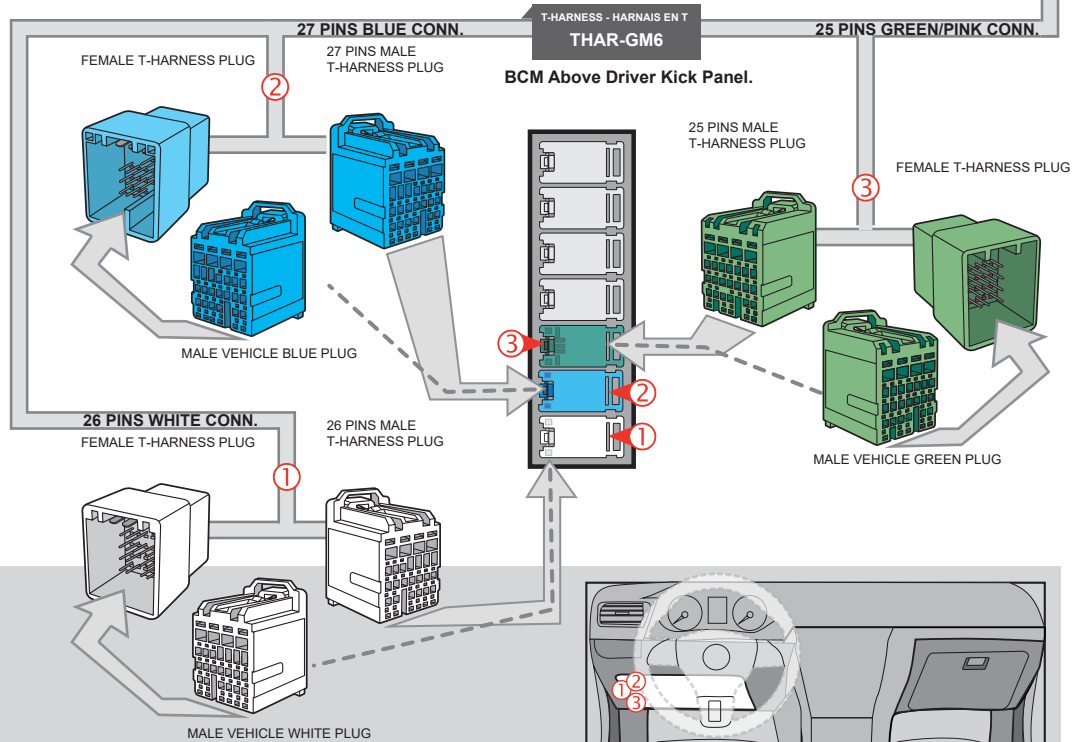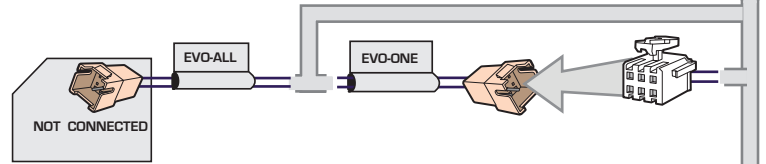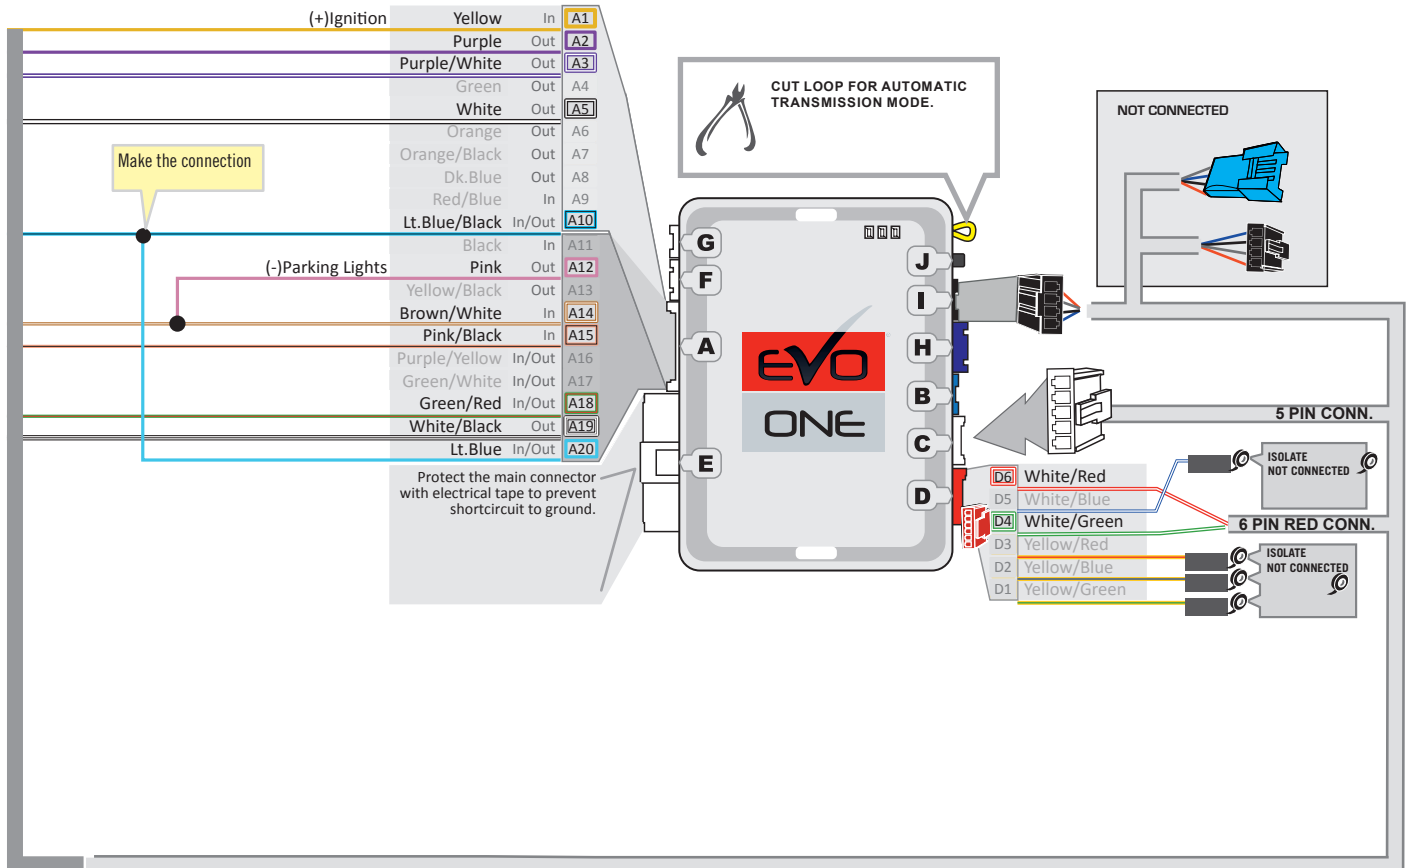

KEY BYPASS PROGRAMMING PROCEDURE 1/2

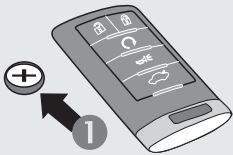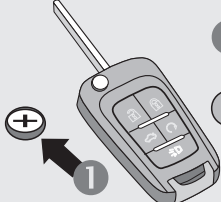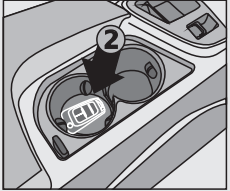FIRST GENERATION	 <p>1 Remove the battery from the OEM remote.</p> <p>2 First generation OEM remotes: Place the OEM remotes in the key older.</p>	
SECOND GENERATION	 <p>1 Remove the battery from the OEM remote.</p> <p>2 Second generation OEM remotes: Place the OEM remotes in to the center console.</p>	


1

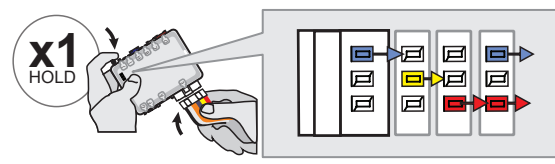

Press and hold the programming button:
Insert the 6-Pin Main connector.


↳The LEDs will alternate between BLUE, RED, YELLOW & BLUE/RED flashes.

2

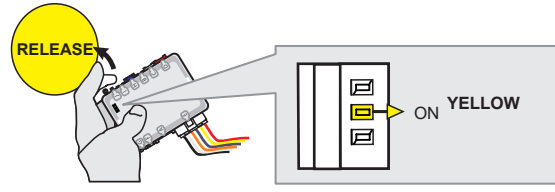


Release the programming button when the LED is YELLOW.

If the LED is not solid YELLOW **disconnect** the 6-Pin connector (Main-Harness) and go back to step 1.

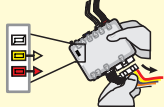


3

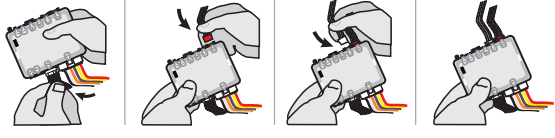

Insert the required remaining connectors.

4

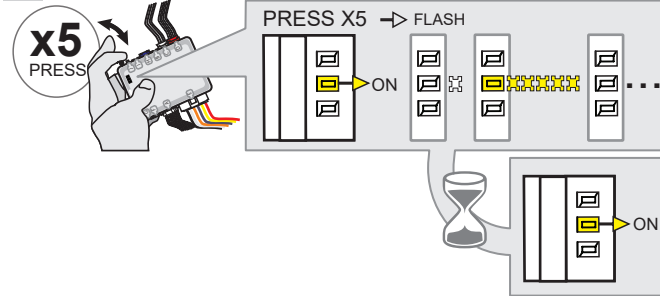


Press and release the programming button five (5x) times.

↳The YELLOW LED will flash 5 times each second.


↳**WAIT** for the YELLOW LED to turn ON solide.

 5



Open the driver door.

6

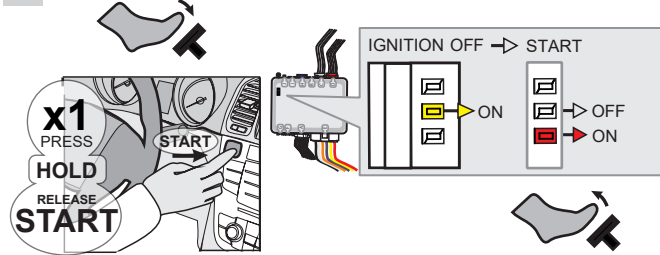

Press the foot-brake pedal.

Press the Push-to-Start button until the engine start.

Release the foot-brake pedal.

↳The RED LED will turn ON.
↳The YELLOW LED will turn OFF.


KEY BYPASS PROGRAMMING PROCEDURE 2/2

7




Press the Push-to-Start button until the engine turn OFF.

8

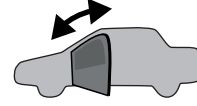

Close and open the driver door.

9

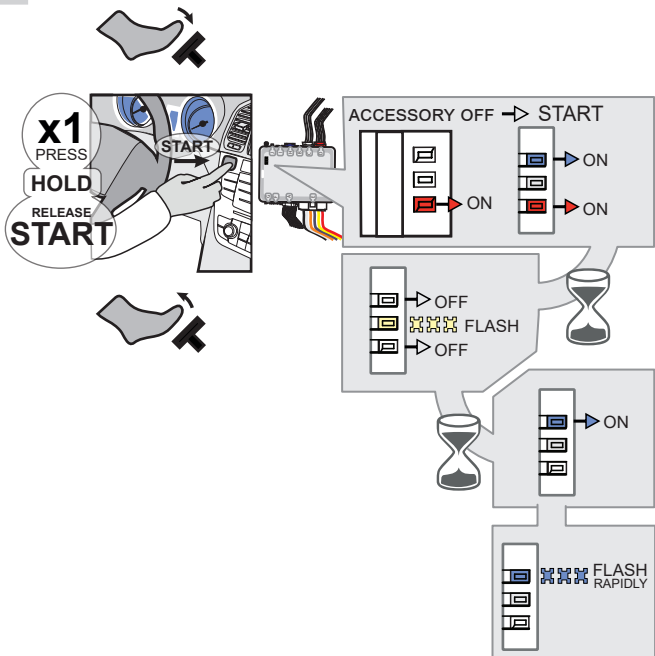


Press the foot-brake pedal.

Press the Push-to-Start button until the engine start.

Release the foot-brake pedal.

- ↳ The BLUE LED will turn ON.
- ↳ The BLUE LED will turn OFF. The RED LED will turn OFF.
- ↳ The YELLOW LED will flash rapidly
- ↳ The BLUE LED will turn ON.
- ↳ The BLUE LED will flash rapidly

10

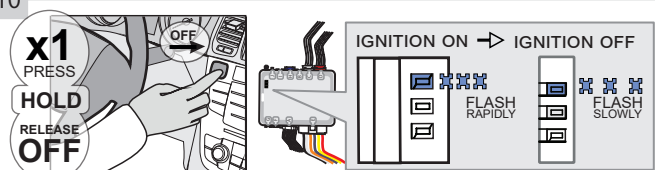

Press the Push-to-Start button until the engine turn OFF.


- ↳ The BLUE LED will flash slowly

11



Disconnect all connectors and after the 6-Pin (Main-Harness) or the 4-Pin Data-link connector.

12

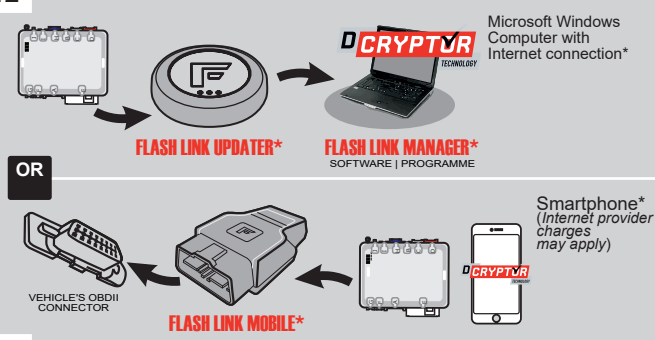

Microsoft Windows Computer with Internet connection*

FLASH LINK UPDATER* FLASH LINK MANAGER*
SOFTWARE | PROGRAMME

OR


Smartphone* (Internet provider charges may apply)

Use the tool: FLASH LINK UPDATER or FLASH LINK MOBILE to visit the DCryptor menu.

*Parts required (not included)

KEY BYPASS PROGRAMMING PROCEDURE 3/3

13

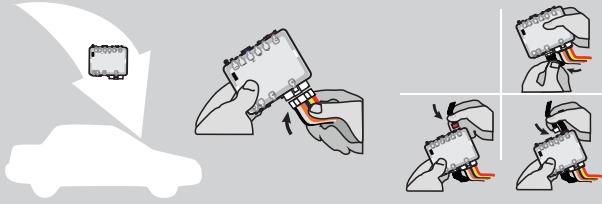

AFTER DCRYPTOR PROGRAMMING COMPLETED
Go back to the vehicle and **reconnect** the 6-Pin (Main-Harness) or the 4-pins (Data-Link) connector and after all the remaining connector.



The module is now programmed.




REMOTE STARTER / ALARM VERIFICATION PROCEDURE

Test the remote starter. Remote start the vehicle.

REMOTE STARTER PROGRAMMING PROCEDURE



REFER TO THE **QUICK INSTALL GUIDE** INCLUDED WITH THE MODULE FOR THE REMOTE STARTER PROGRAMMING.

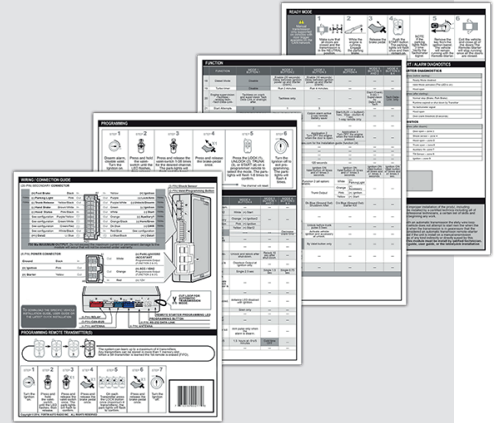

REMOTE STARTER FUNCTIONALITY |



All doors must be closed.


Remote start the vehicle.



Press the Unlock button of the remote car starter.



Enter the vehicle with the Intelligent Access Key.

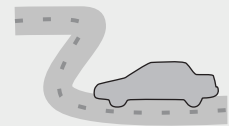


The vehicle can now be put in to gear and driven.




If the vehicle is not unlocked the module will shut down the remote-starter and the vehicle as soon as any door is opened.

THAR-GM6 THARNNESS INSTALLATION

ADDENDUM - SUGGESTED WIRING CONFIGURATION

VEHICLE	YEARS	Vehicle functions supported in this diagram (functional if equipped)														
		Immobilizer bypass	Lock	Unlock	Arm	Disarm	Trunk (open)	Parking Lights	RAP Disable	Tachometer	Heated Seats	Door Status	Trunk Status	Hand-Brake Status	Foot-Brake Status	OEM Remote Monitoring
																
CADILLAC																
CT6	Push-To-Start	2016-2018	•	•	•	•	•	•	•	•	•	•	•	•	•	•





BYPASS FIRMWARE VERSION


70.[41]

GM MINIMUM

To add the firmware version and the options, use the **FLASH LINK UPDATER** or **FLASH LINK MOBILE** tool, sold separately.

		UNIT OPTION	DESCRIPTION
	Program bypass option IF THE VEHICLE IS NOT EQUIPPED WITH FUNCTIONAL HOOD PIN:	A11	<div style="background-color: red; color: white; padding: 5px; display: inline-block; margin-bottom: 5px;">OFF</div> Hood trigger (Output Status).

		UNIT OPTION	DESCRIPTION
	Program bypass option:	C1	OEM Remote status (Lock/Unlock) monitoring
		D6	Push-to-Start




ATTENTION!



DATE: XX-XX

	UNIT OPTION	DESCRIPTION
	E5	<div style="background-color: red; color: white; padding: 5px; display: inline-block; margin-bottom: 5px;">OFF</div> By default DEACTIVATED
	ON	MANUFACTURED MODULES BETWEEN: 04/2018 TO 04/2019

 **Parts required** (Not included): 1X THAR-GM6

MANDATORY INSTALL

*** HOOD PIN**



HOOD STATUS: THE HOOD PIN SWITCH (INCLUDED) MUST BE INSTALLED IF THE VEHICLE CAN BE REMOTE STARTED WITH THE HOOD OPEN, SET FUNCTION A11 TO OFF.

A11

OFF

SECURITY STICKER



Included

Notice: the installation of safety elements are mandatory. The hood pin and the sticker are essential security elements and must be installed.

THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.

DESCRIPTION


Program remote starter option for R.S.
OEM REMOTE STAND ALONE:

38

2

Enable
Press 3x Lock to remote start with the OEM remote.

BCM

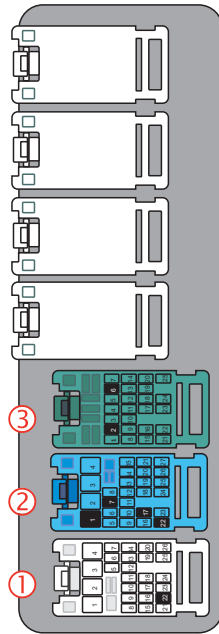

③




②



①




KEY BYPASS PROGRAMMING PROCEDURE 1/2

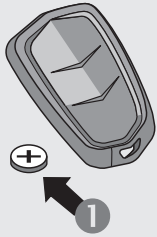


1 Remove the battery from the OEM remote.

2 Place the OEM remote into the transmitter pocket of the center console.

Refer to vehicle user guide for keyport location.

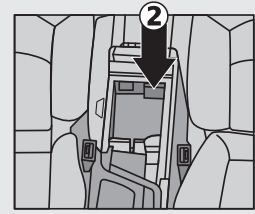


1

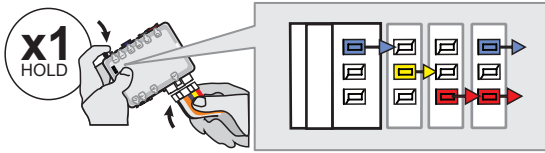

Press and hold the programming button:
Insert the 6-Pin Main connector.


↳The LEDs will alternate between BLUE, RED, YELLOW & BLUE/RED flashes.

2

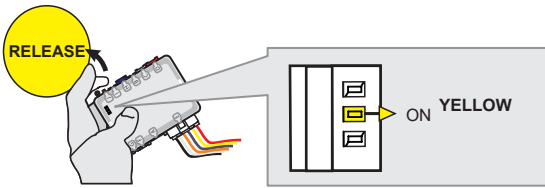


Release the programming button when the LED is YELLOW.

 If the LED is not solid YELLOW **disconnect** the 6-Pin connector (Main-Harness) and go back to step 1.




3

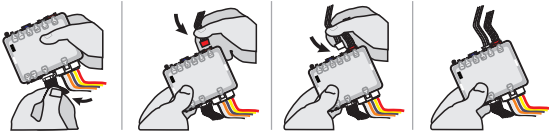

Insert the required remaining connectors.

4

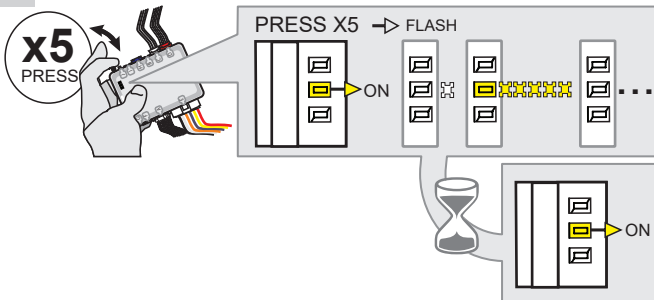


Press and release the programming button five (5x) times.

↳The YELLOW LED will flash 5 times each second.


↳**WAIT** for the YELLOW LED to turn ON solide.

 5



Open the driver door.

6

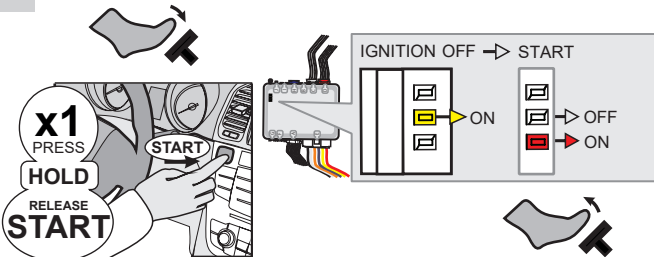

Press the foot-brake pedal.

Press the Push-to-Start button until the engine start.

Release the foot-brake pedal.

↳The RED LED will turn ON.
↳The YELLOW LED will turn OFF.


KEY BYPASS PROGRAMMING PROCEDURE 2/2 |

7




Press the Push-to-Start button until the engine turn OFF.

8

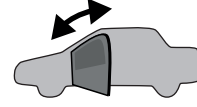

Close and open the driver door.

9

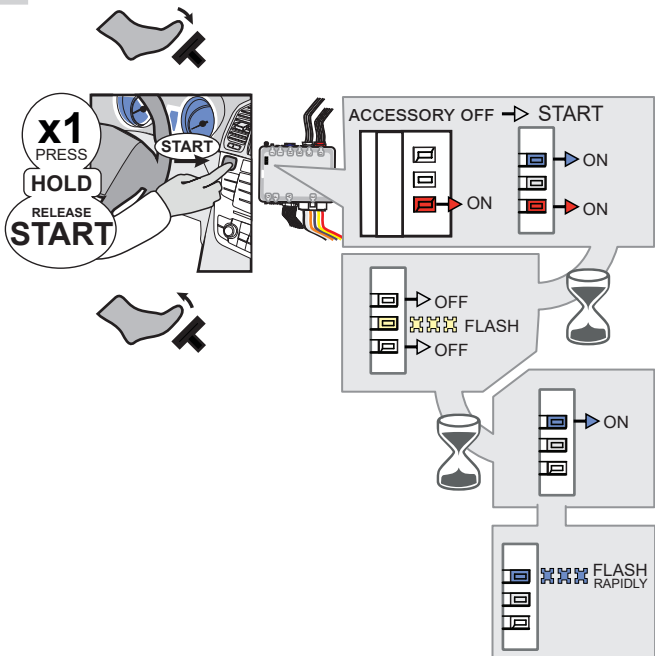


Press the foot-brake pedal.

Press the Push-to-Start button until the engine start.

Release the foot-brake pedal.

- ↳ The BLUE LED will turn ON.
- ↳ The BLUE LED will turn OFF. The RED LED will turn OFF.
- ↳ The YELLOW LED will flash rapidly
- ↳ The BLUE LED will turn ON.
- ↳ The BLUE LED will flash rapidly

10

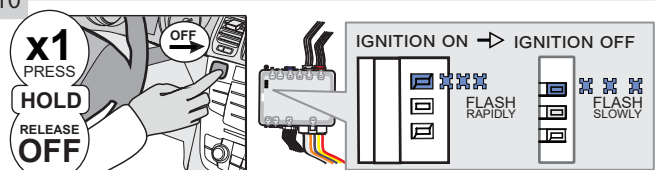

Press the Push-to-Start button until the engine turn OFF.


- ↳ The BLUE LED will flash slowly

11



Disconnect all connectors and after the 6-Pin (Main-Harness) or the 4-Pin Data-link connector.

12

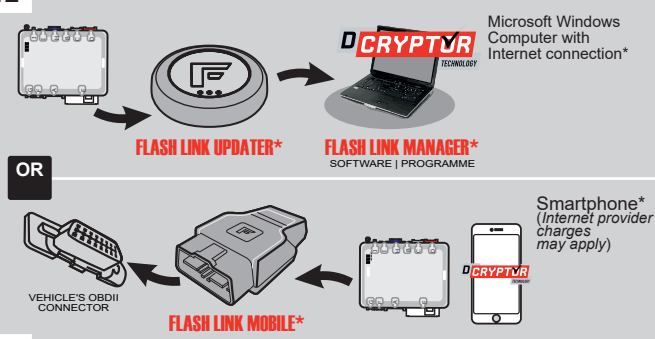

Microsoft Windows Computer with Internet connection*

FLASH LINK UPDATER* FLASH LINK MANAGER*
SOFTWARE | PROGRAMME

OR


Smartphone* (Internet provider charges may apply)

VEHICLE'S OBDII CONNECTOR FLASH LINK MOBILE*

Use the tool: FLASH LINK UPDATER or FLASH LINK MOBILE to visit the DCryptor menu.

*Parts required (not included)

13

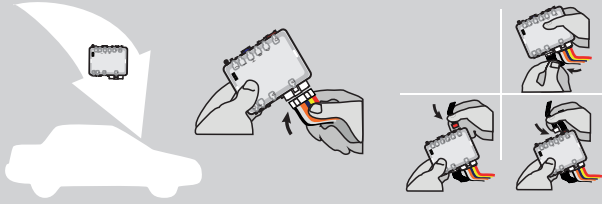

AFTER DCRYPTOR PROGRAMMING COMPLETED
 Go back to the vehicle and **reconnect** the 6-Pin (Main-Harness) or the 4-pins (Data-Link) connector and after all the remaining connector.



The module is now programmed.




REMOTE STARTER / ALARM VERIFICATION PROCEDURE

Test the remote starter. Remote start the vehicle.

REMOTE STARTER PROGRAMMING PROCEDURE |



REFER TO THE **QUICK INSTALL GUIDE** INCLUDED WITH THE MODULE FOR THE REMOTE STARTER PROGRAMMING.

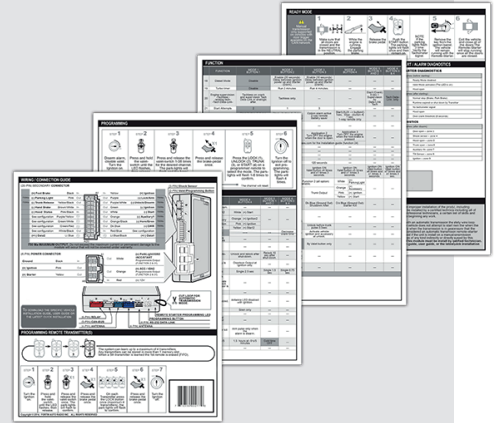

REMOTE STARTER FUNCTIONALITY |



All doors must be closed.
Toutes les



Remote start the vehicle.



Press the Unlock button of the remote car starter or the OEM remote.



Enter the vehicle with the Intelligent Access Key.




The vehicle can now be put in to gear and driven.




If the vehicle is not unlocked the module will shut down the remote-starter and the vehicle as soon as any door is opened.

**THAR-GM6 THARNSS
INSTALLATION**

ADDENDUM - SUGGESTED WIRING CONFIGURATION

	Vehicle functions supported in this diagram (functional if equipped)													
	Immobilizer bypass	Lock	Unlock	Arm	Disarm	Trunk (open)	RAP Disable	Tachometer	Heated Seats	Door Status	Trunk Status	Hand-Brake Status	Foot-Brake Status	OEM Remote Monitoring
VEHICLE	YEARS													
BUICK														
Encore GX	Push-To-Start	2020-2021	•	•	•	•	•	•	•	•	•	•	•	•


	BYPASS FIRMWARE VERSION	To add the firmware version and the options, use the FLASH LINK UPDATER or FLASH LINK MOBILE tool, sold separately.
	70.[45] MINIMUM	

	Program bypass option:	UNIT OPTION	DESCRIPTION
		C1	OEM Remote status (Lock/Unlock) monitoring

IF THE VEHICLE IS NOT EQUIPPED WITH FUNCTIONAL HOOD PIN:	A11	OFF	Hood trigger (Output Status).
---	------------	------------	-------------------------------


	D6		Push-to-Start
--	-----------	--	---------------

 ATTENTION!	 DATE: XX-XX	E5	OFF	By default DEACTIVATED
			ON	MANUFACTURED MODULES BETWEEN: 04/2018 TO 04/2019

 **Parts required (Not included): 1X THAR-GM6**

MANDATORY INSTALL

*** HOOD PIN**



HOOD STATUS: THE HOOD PIN SWITCH (INCLUDED) MUST BE INSTALLED IF THE VEHICLE CAN BE REMOTE STARTED WITH THE HOOD OPEN, SET FUNCTION **A11** TO OFF.

SECURITY STICKER

 Included

Notice: the installation of safety elements are mandatory. The hood pin and the sticker are essential security elements and must be installed.

THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.

DESCRIPTION



Program remote starter option for R.S.
OEM REMOTE STAND ALONE:

38




2

Enable
 Press 3x Lock to remote start with the OEM remote.


③ BCM Right side of the center console, passenger side.

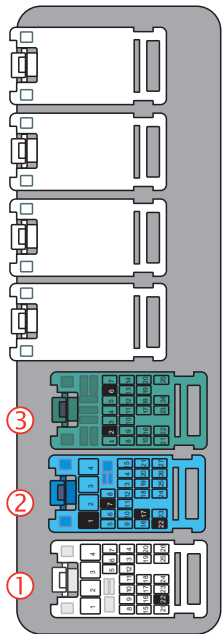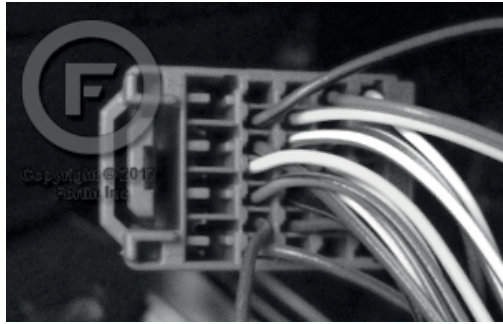

AUTOMATIC TRANSMISSION WIRING CONNECTION

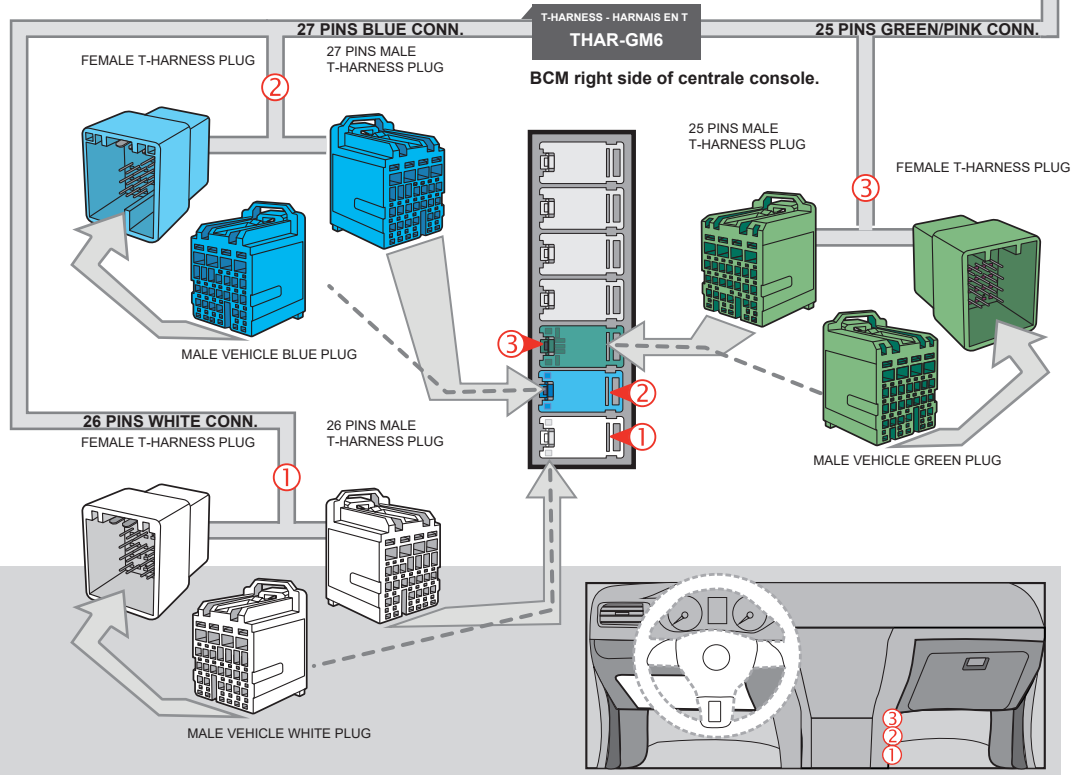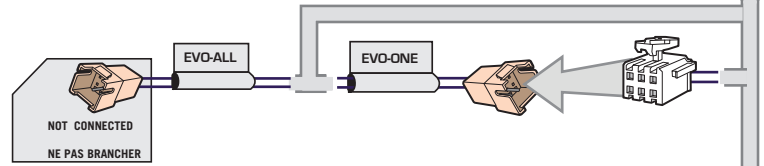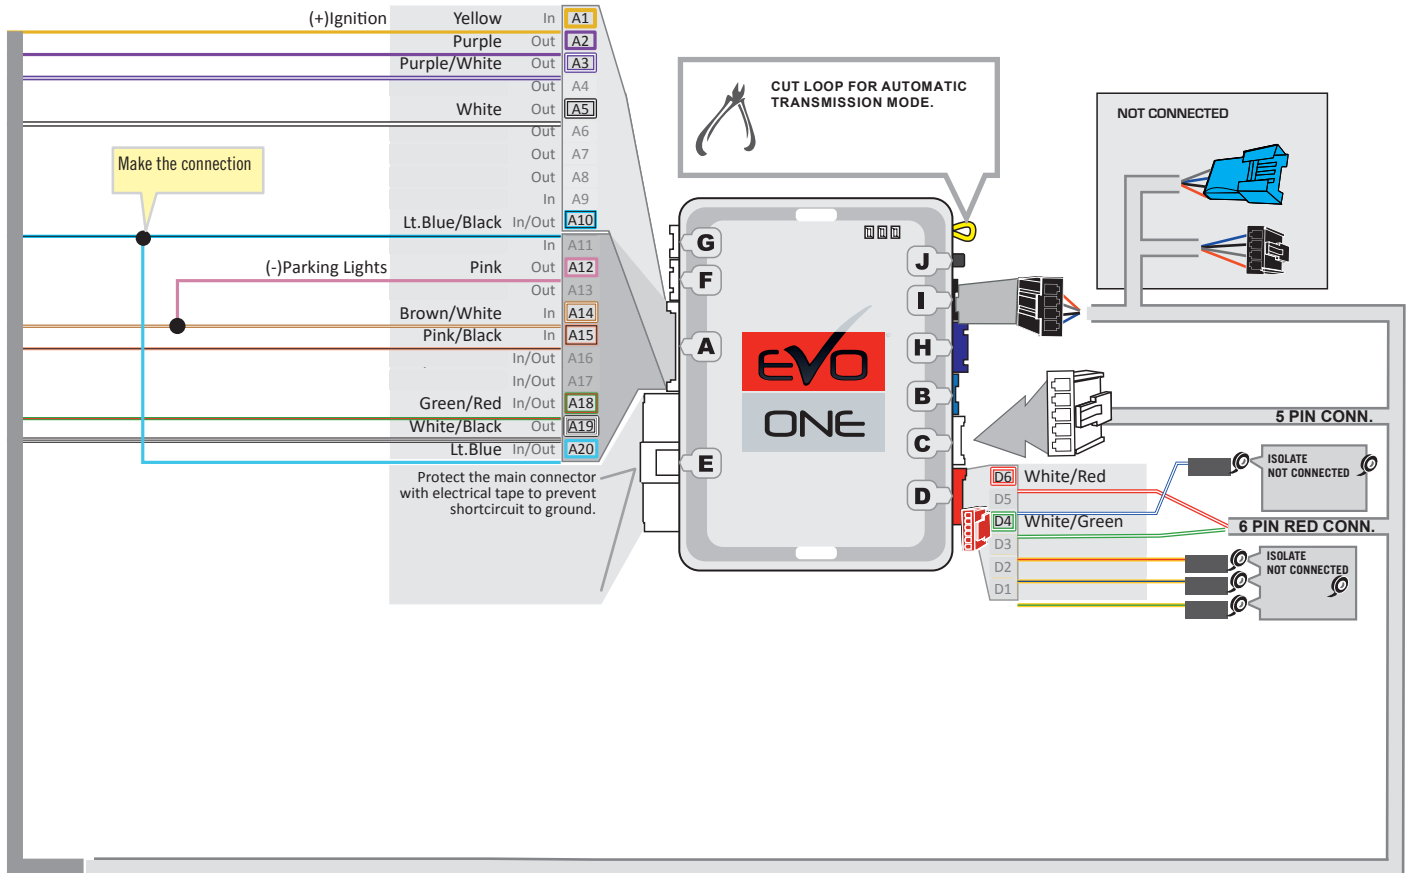


KEY BYPASS PROGRAMMING PROCEDURE 1/2

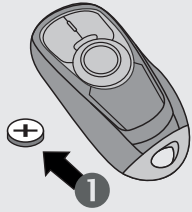


- 1** Remove the battery from the OEM remote.
- 2** Place the OEM in the remote Key reader behind cup holders in the center console.

Refer to vehicle user guide for keyport location.

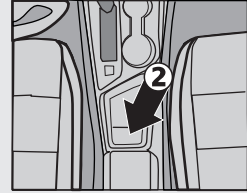


1

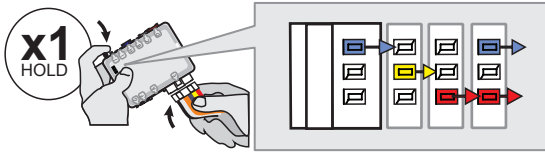

Press and hold the programming button:
Insert the 6-Pin Main connector.


↳The LEDs will alternate between BLUE, RED, YELLOW & BLUE/RED flashes.

2

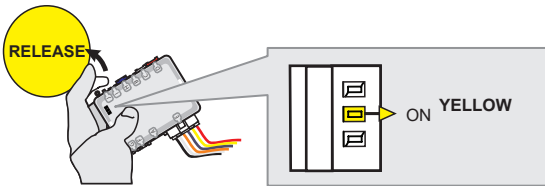


Release the programming button when the LED is YELLOW.

 If the LED is not solid YELLOW **disconnect** the 6-Pin connector (Main-Harness) and go back to step 1.




3

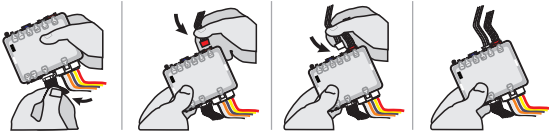

Insert the required remaining connectors.

4

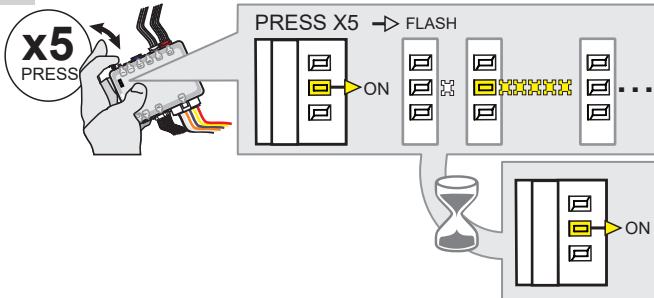


Press and release the programming button five (5x) times.

↳The YELLOW LED will flash 5 times each second.


↳**WAIT** for the YELLOW LED to turn ON solide.

 5



Open the driver door.

6

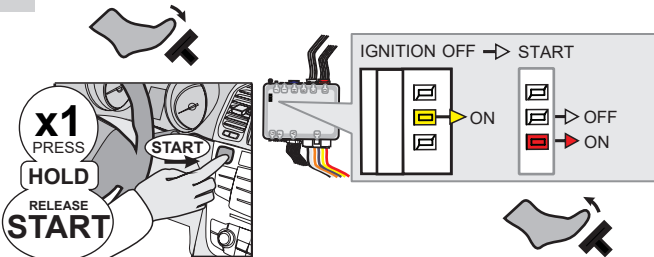

Press the foot-brake pedal.

Press the Push-to-Start button until the engine start.

Release the foot-brake pedal.

↳The RED LED will turn ON.
↳The YELLOW LED will turn OFF.


KEY BYPASS PROGRAMMING PROCEDURE 2/2 |

7




Press the Push-to-Start button until the engine turn OFF.

8

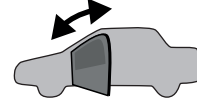

Close and open the driver door.

9

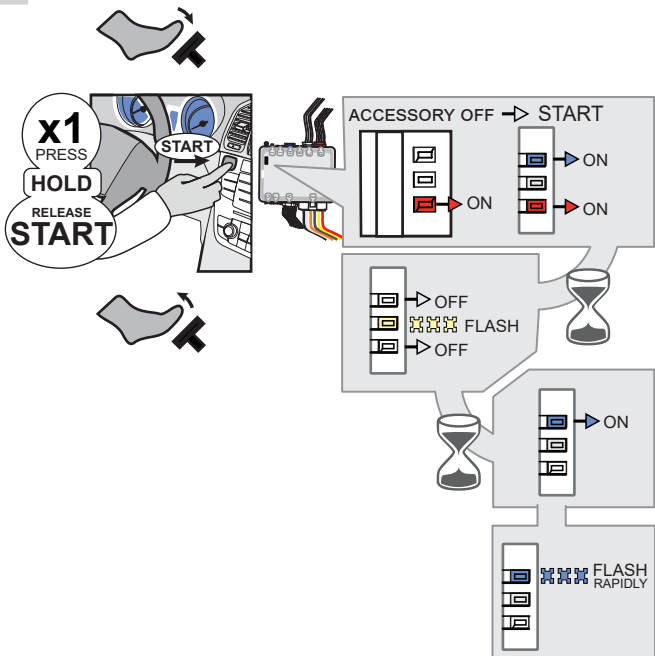


Press the foot-brake pedal.

Press the Push-to-Start button until the engine start.

Release the foot-brake pedal.

- ↳ The BLUE LED will turn ON.
- ↳ The BLUE LED will turn OFF. The RED LED will turn OFF.
- ↳ The YELLOW LED will flash rapidly
- ↳ The BLUE LED will turn ON.
- ↳ The BLUE LED will flash rapidly

10

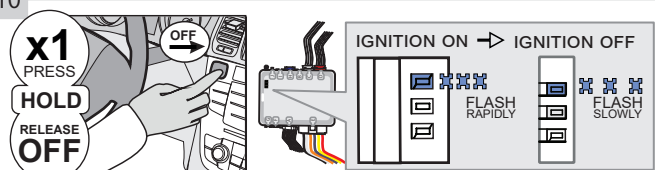

Press the Push-to-Start button until the engine turn OFF.


- ↳ The BLUE LED will flash slowly

11



Disconnect all connectors and after the 6-Pin (Main-Harness) or the 4-Pin Data-link connector.

12

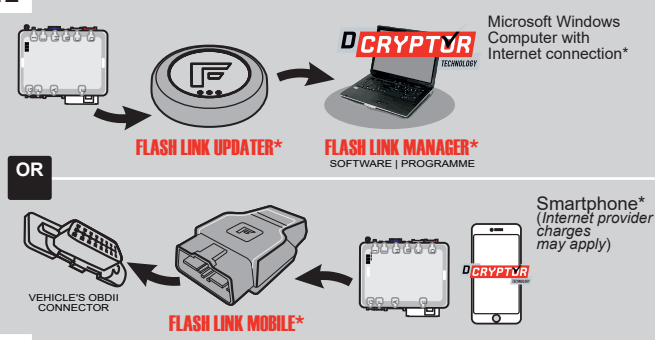

Microsoft Windows Computer with Internet connection*

FLASH LINK UPDATER* FLASH LINK MANAGER*
SOFTWARE | PROGRAMME

OR


Smartphone* (Internet provider charges may apply)

VEHICLE'S OBDII CONNECTOR FLASH LINK MOBILE*

Use the tool: FLASH LINK UPDATER or FLASH LINK MOBILE to visit the DCryptor menu.

*Parts required (not included)

13

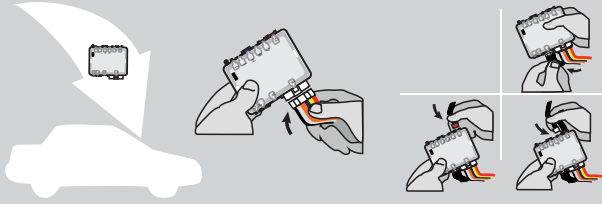

AFTER DCRYPTOR PROGRAMMING COMPLETED
 Go back to the vehicle and **reconnect** the 6-Pin (Main-Harness) or the 4-pins (Data-Link) connector and after all the remaining connector.



The module is now programmed.




REMOTE STARTER / ALARM VERIFICATION PROCEDURE

Test the remote starter. Remote start the vehicle.

REMOTE STARTER PROGRAMMING PROCEDURE |



REFER TO THE **QUICK INSTALL GUIDE** INCLUDED WITH THE MODULE FOR THE REMOTE STARTER PROGRAMMING.

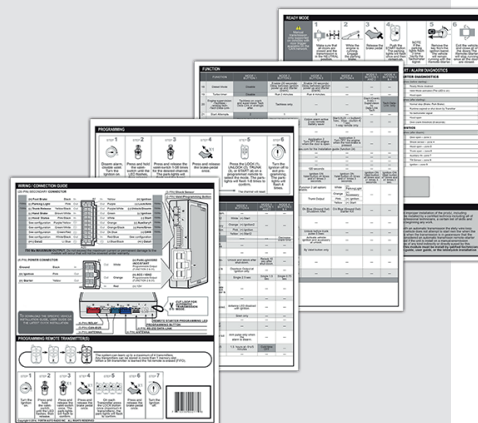

REMOTE STARTER FUNCTIONALITY | FONCTIONNALITÉS DU DÉMARREUR À DISTANCE



All doors must be closed.

Remote start the vehicle.



Press the Unlock button of the remote car starter.



Enter the vehicle with the Intelligent Access Key.




The vehicle can now be put in to gear and driven.



If the vehicle is not unlocked the module will shut down the remote-starter and the vehicle as soon as any door is opened.

THAR-GM6 THARNES INSTALLATION

ADDENDUM - SUGGESTED WIRING CONFIGURATION

VEHICLE	YEARS	Vehicle functions supported in this diagram (functional if equipped)														
		Immobilizer bypass	Lock	Unlock	Arm	Disarm	Trunk (open)	RAP Disable	Tachometer	Heated Seats	Door Status	Trunk Status	Hand-Brake Status	Foot-Brake Status	OEM Remote Monitoring	
																
BUICK																
Encore	Push-To-Start	2017-2020	•	•	•	•	•	•	•	•	•	•	•	•	•	•
CHEVROLET																
Trax	Push-To-Start	2017-2021	•	•	•	•	•	•	•	•	•	•	•	•	•	•



BYPASS FIRMWARE VERSION

70.[45]

MINIMUM

To add the firmware version and the options, use the **FLASH LINK UPDATER** or **FLASH LINK MOBILE** tool, sold separately.

	Program bypass option:	UNIT OPTION	DESCRIPTION
		C1	OEM Remote status (Lock/Unlock) monitoring

IF THE VEHICLE IS NOT EQUIPPED WITH FUNCTIONAL HOOD PIN:

A11	OFF	Hood trigger (Output Status).
------------	------------	-------------------------------

D6	Push-to-Start
-----------	---------------




ATTENTION!




DATE: XX-XX

E5	OFF	By default DEACTIVATED
	ON	MANUFACTURED MODULES BETWEEN: 04/2018 TO 04/2019

 **Parts required (Not included): 1X THAR-GM6**

MANDATORY INSTALL

*** HOOD PIN**



HOOD STATUS: THE HOOD PIN SWITCH (INCLUDED) MUST BE INSTALLED IF THE VEHICLE CAN BE REMOTE STARTED WITH THE HOOD OPEN, SET FUNCTION **A11** TO OFF.

A11

OFF

SECURITY STICKER



Included

Notice: the installation of safety elements are mandatory. The hood pin and the sticker are essential security elements and must be installed.

THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.

DESCRIPTION

Program remote starter option for R.S.
OEM REMOTE STAND ALONE:

38

2

Enable
Press 3x Lock to remote start with the OEM remote.


BCM



③






②

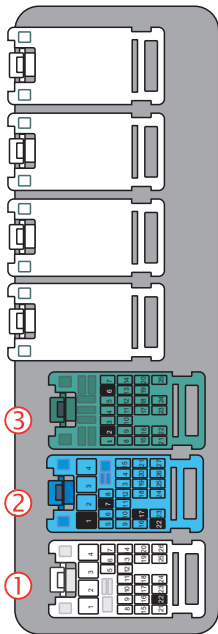


①




AUTOMATIC TRANSMISSION WIRING CONNECTION

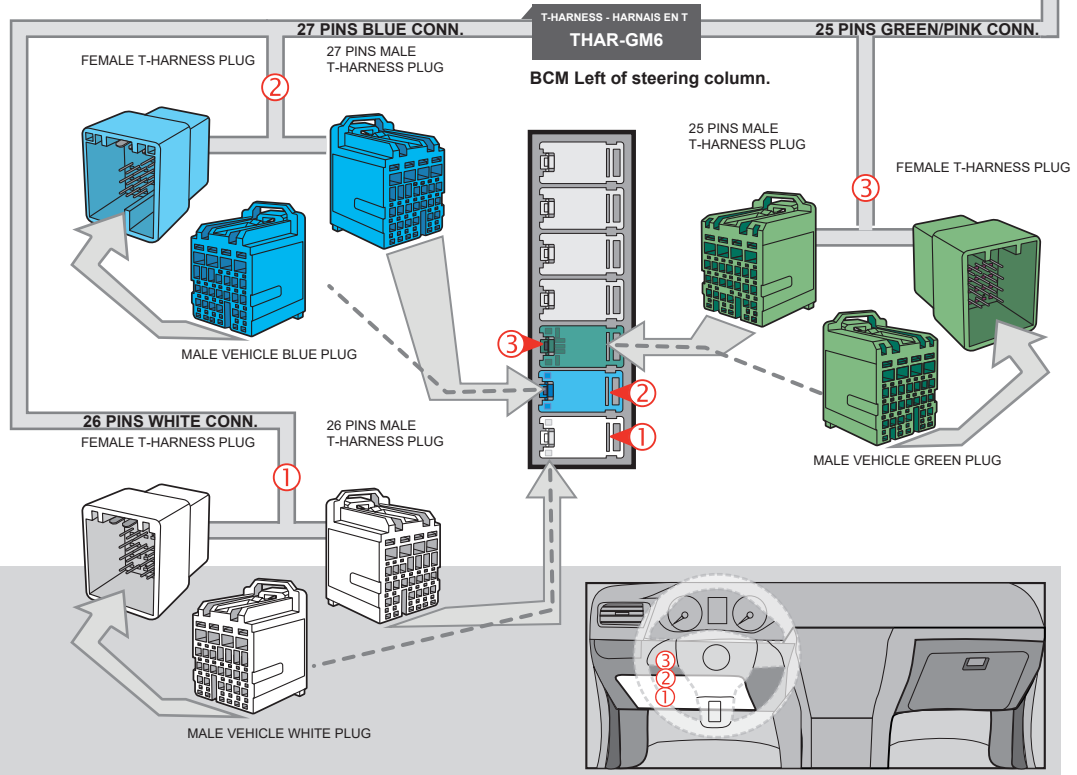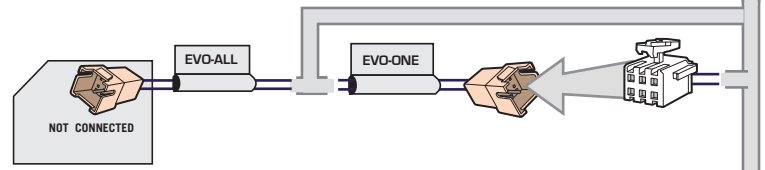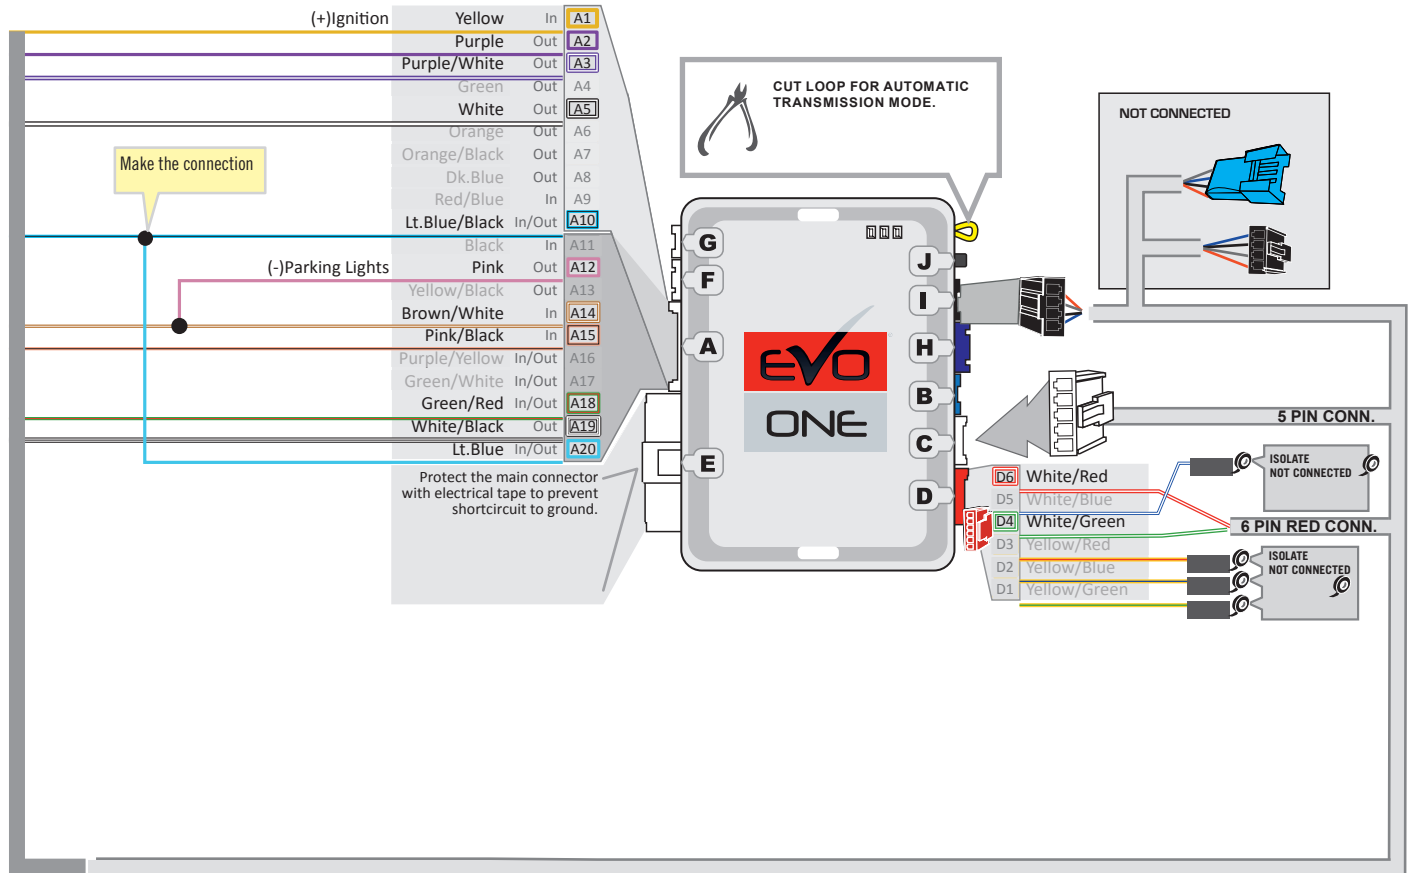


KEY BYPASS PROGRAMMING PROCEDURE 1/2

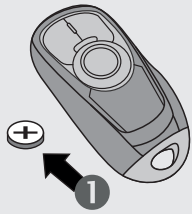

- 1 Remove the battery from the OEM remote.
- 2 Place the OEM remote in the front cup holder in the center console.
Refer to vehicle user guide for keyport location.

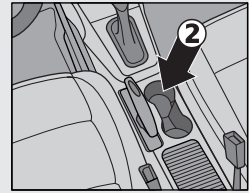


1

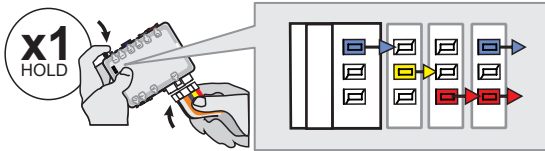

Press and hold the programming button:
Insert the 6-Pin Main connector.


↳The LEDs will alternate between BLUE, RED, YELLOW & BLUE/RED flashes.

2

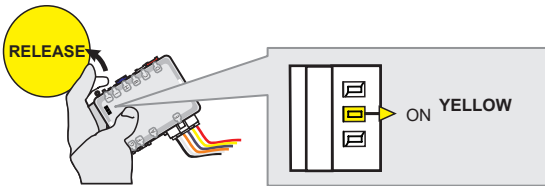


Release the programming button when the LED is YELLOW.

 If the LED is not solid YELLOW **disconnect** the 6-Pin connector (Main-Harness) and go back to step 1.




3

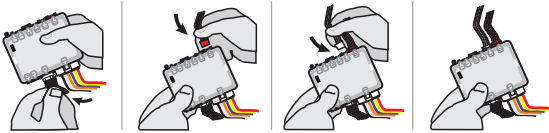

Insert the required remaining connectors.

4

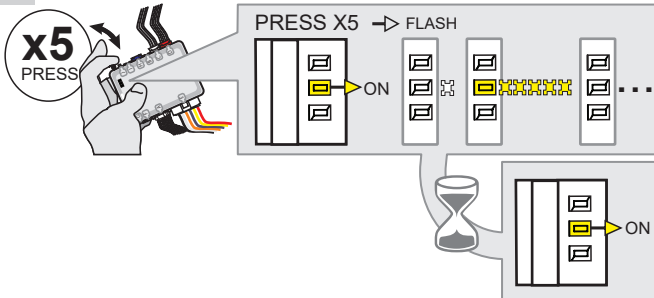


Press and release the programming button five (5x) times.

↳The YELLOW LED will flash 5 times each second.


↳WAIT for the YELLOW LED to turn ON solide.

 5



Open the driver door.

6

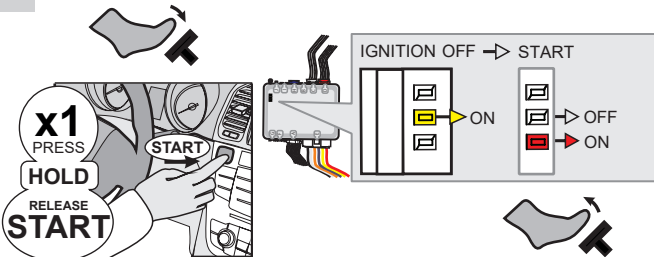

Press the foot-brake pedal.

Press the Push-to-Start button until the engine start.

Release the foot-brake pedal.

↳The RED LED will turn ON.
↳The YELLOW LED will turn OFF.


KEY BYPASS PROGRAMMING PROCEDURE 2/2 |

7




Press the Push-to-Start button until the engine turn OFF.

8

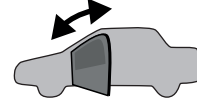

Close and open the driver door.

9

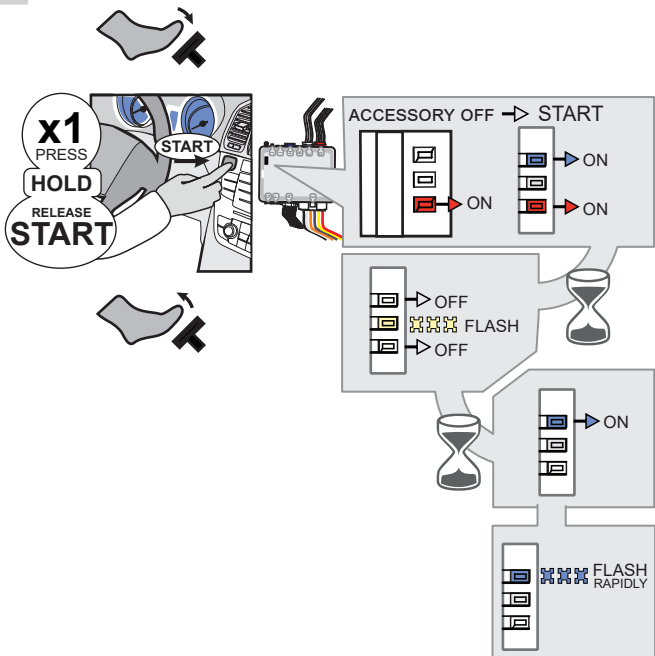


Press the foot-brake pedal.

Press the Push-to-Start button until the engine start.

Release the foot-brake pedal.

- ↳ The BLUE LED will turn ON.
- ↳ The BLUE LED will turn OFF. The RED LED will turn OFF.
- ↳ The YELLOW LED will flash rapidly
- ↳ The BLUE LED will turn ON.
- ↳ The BLUE LED will flash rapidly

10

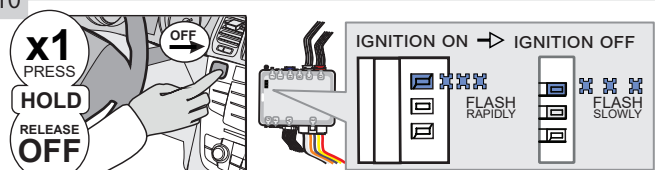

Press the Push-to-Start button until the engine turn OFF.


- ↳ The BLUE LED will flash slowly

11



Disconnect all connectors and after the 6-Pin (Main-Harness) or the 4-Pin Data-link connector.

12

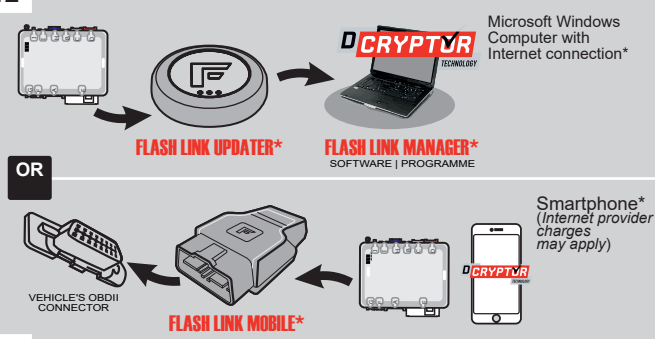

Microsoft Windows Computer with Internet connection*

FLASH LINK UPDATER* FLASH LINK MANAGER*
SOFTWARE | PROGRAMME

OR

Smartphone* (Internet provider charges may apply)


VEHICLE'S OBDII CONNECTOR FLASH LINK MOBILE*

Use the tool: FLASH LINK UPDATER or FLASH LINK MOBILE to visit the DCryptor menu.

*Parts required (not included)

KEY BYPASS PROGRAMMING PROCEDURE 3/3

13

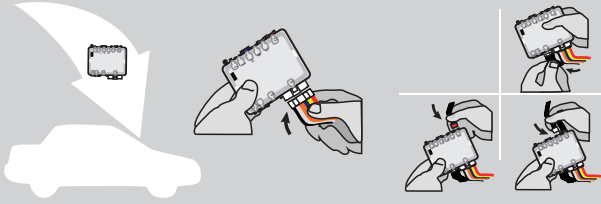

AFTER DCRYPTOR PROGRAMMING COMPLETED
Go back to the vehicle and **reconnect** the 6-Pin (Main-Harness) or the 4-pins (Data-Link) connector and after all the remaining connector.



The module is now programmed.




REMOTE STARTER / ALARM VERIFICATION PROCEDURE

Test the remote starter. Remote start the vehicle.

REMOTE STARTER PROGRAMMING PROCEDURE |



REFER TO THE **QUICK INSTALL GUIDE** INCLUDED WITH THE MODULE FOR THE REMOTE STARTER PROGRAMMING.

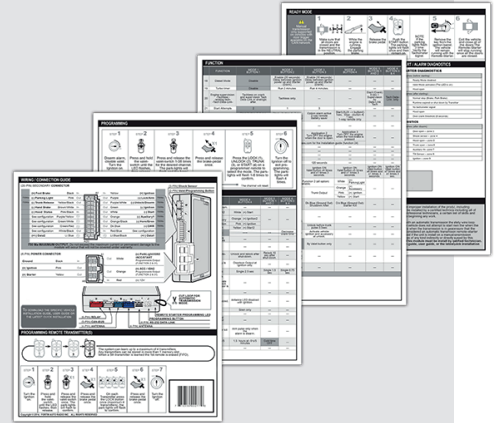

REMOTE STARTER FUNCTIONALITY |



All doors must be closed.

Remote start the vehicle.



Press the Unlock button of the remote car starter.



Enter the vehicle with the Intelligent Access Key.



The vehicle can now be put in to gear and driven.




If the vehicle is not unlocked the module will shut down the remote-starter and the vehicle as soon as any door is opened.

**THAR-GM6 THARNNESS
INSTALLATION**

ADDENDUM - SUGGESTED WIRING CONFIGURATION

VEHICLE	YEARS	Vehicle functions supported in this diagram (functional if equipped)													
		Immobilizer bypass	Lock	Unlock	Arm	Disarm	Trunk (open)	RAP Disable	Tachometer	Heated Seats	Door Status	Trunk Status	Hand-Brake Status	Foot-Brake Status	OEM Remote Monitoring
BUICK															
Envision	Push-To-Start	2017-2020	•	•	•	•	•	•	•	•	•	•	•	•	•





BYPASS FIRMWARE VERSION

70.[41]

GM MINIMUM

To add the firmware version and the options, use the **FLASH LINK UPDATER** or **FLASH LINK MOBILE** tool, sold separately.

		UNIT OPTION	DESCRIPTION
	Program bypass option IF THE VEHICLE IS NOT EQUIPPED WITH FUNCTIONAL HOOD PIN:	A11	<div style="background-color: red; color: white; padding: 5px; display: inline-block; margin-bottom: 5px;">OFF</div> Hood trigger (Output Status).


		UNIT OPTION	DESCRIPTION
	Program bypass option:	C1	OEM Remote status (Lock/Unlock) monitoring
		D6	Push-to-Start

ATTENTION!



DATE: XX-XX

E5	<div style="background-color: red; color: white; padding: 5px; display: inline-block; margin-bottom: 5px;">OFF</div> <div style="background-color: green; color: white; padding: 5px; display: inline-block;">ON</div>	<p>By default DEACTIVATED</p> <p style="color: red;">MANUFACTURED MODULES BETWEEN: 04/2018 TO 04/2019</p>
-----------	---	---

 **Parts required** (Not included): 1X THAR-GM6

MANDATORY INSTALL

*** HOOD PIN**



HOOD STATUS: THE HOOD PIN SWITCH (INCLUDED) MUST BE INSTALLED IF THE VEHICLE CAN BE REMOTE STARTED WITH THE HOOD OPEN, SET FUNCTION A11 TO OFF.

A11

OFF

SECURITY STICKER



Included

Notice: the installation of safety elements are mandatory. The hood pin and the sticker are essential security elements and must be installed.

THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.

DESCRIPTION

Program remote starter option for R.S.
OEM REMOTE STAND ALONE:

38


2

Enable
 Press 3x Lock to remote start with the OEM remote.



BCM located on passenger side center console



③

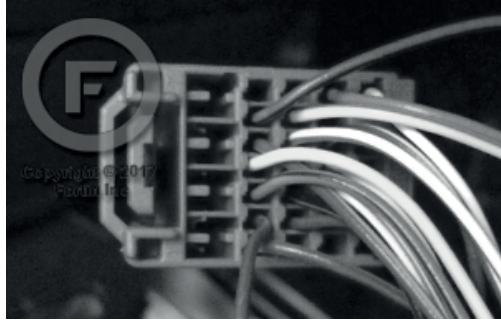




②

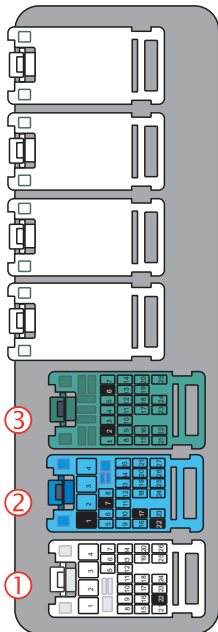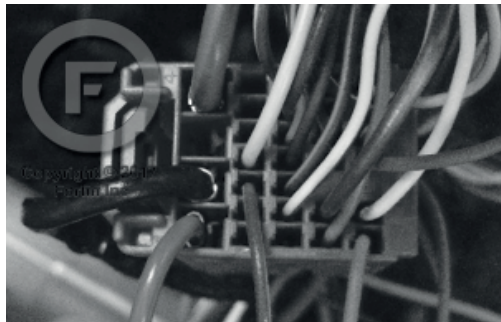


①




AUTOMATIC TRANSMISSION WIRING CONNECTION

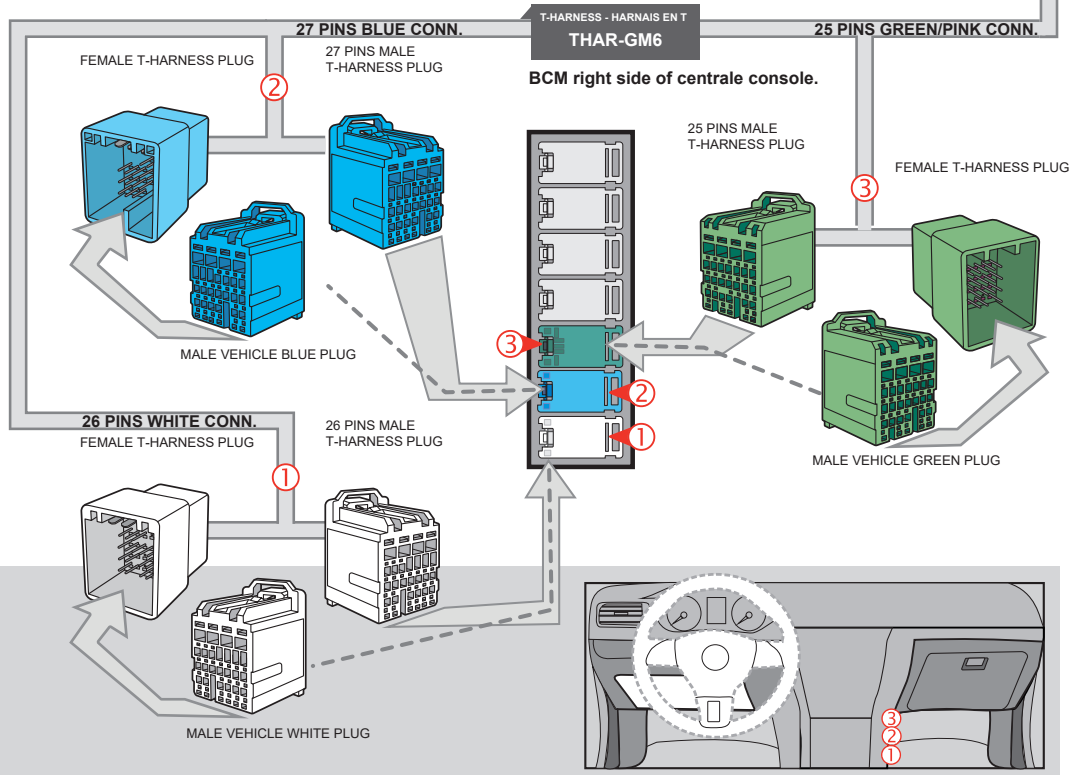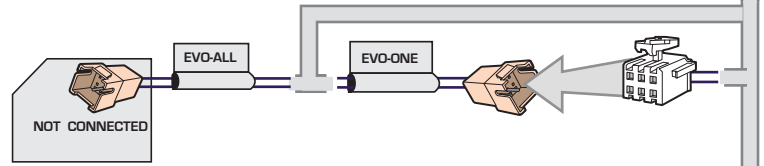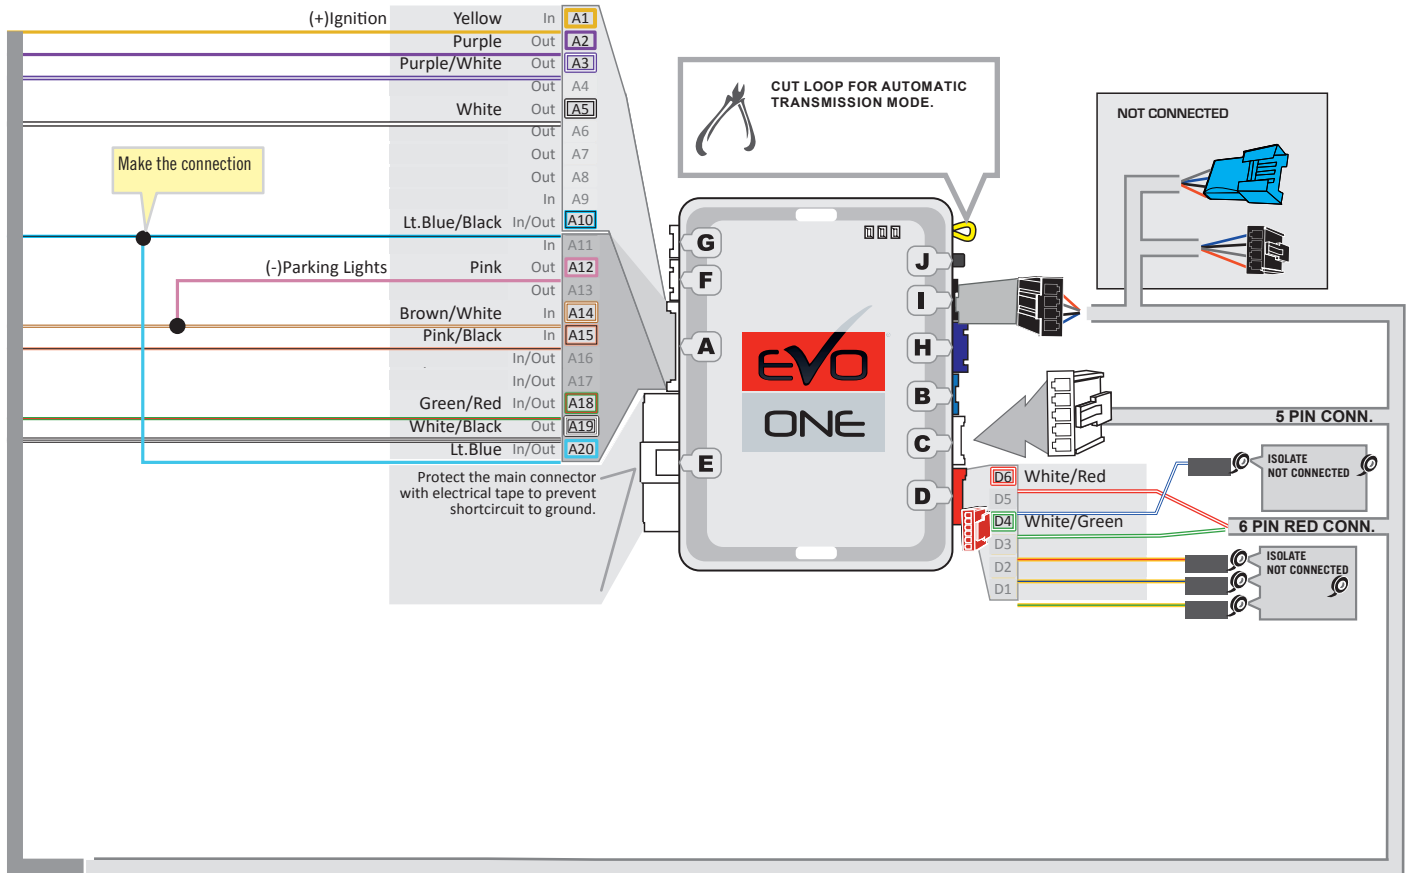


KEY BYPASS PROGRAMMING PROCEDURE 1/2

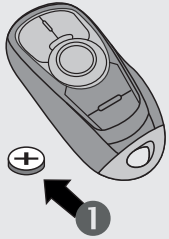

- 1 Remove the battery from the OEM remote.
- 2 Place the OEM remote in the front cup holder in the center console.
Refer to vehicle user guide for keyport location.

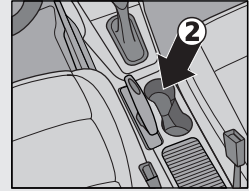


1

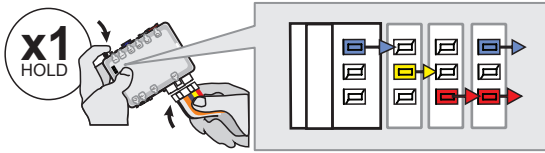

Press and hold the programming button:
Insert the 6-Pin Main connector.


↳The LEDs will alternate between BLUE, RED, YELLOW & BLUE/RED flashes.

2

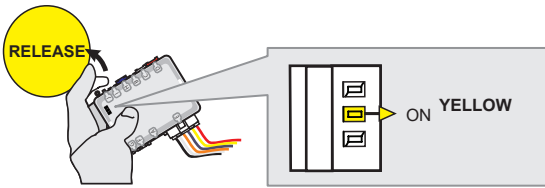


Release the programming button when the LED is YELLOW.

 If the LED is not solid YELLOW **disconnect** the 6-Pin connector (Main-Harness) and go back to step 1.




3

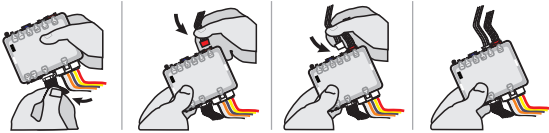

Insert the required remaining connectors.

4

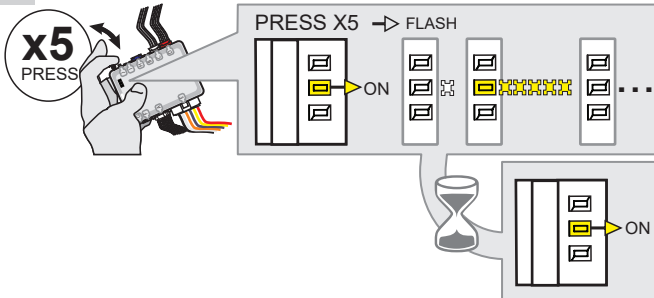


Press and release the programming button five (5x) times.

↳The YELLOW LED will flash 5 times each second.


↳WAIT for the YELLOW LED to turn ON solide.

 5



Open the driver door.

6

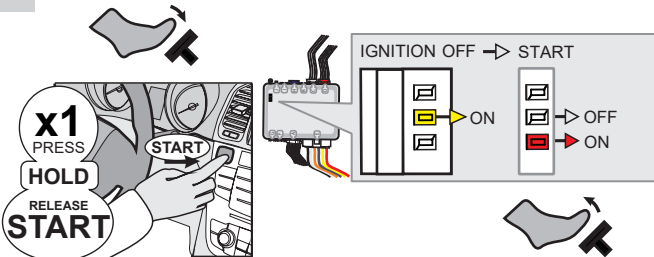

Press the foot-brake pedal.

Press the Push-to-Start button until the engine start.

Release the foot-brake pedal.

↳The RED LED will turn ON.
↳The YELLOW LED will turn OFF.


KEY BYPASS PROGRAMMING PROCEDURE 2/2 |

7




Press the Push-to-Start button until the engine turn OFF.

8

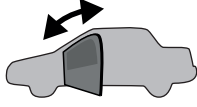

Close and open the driver door.

9

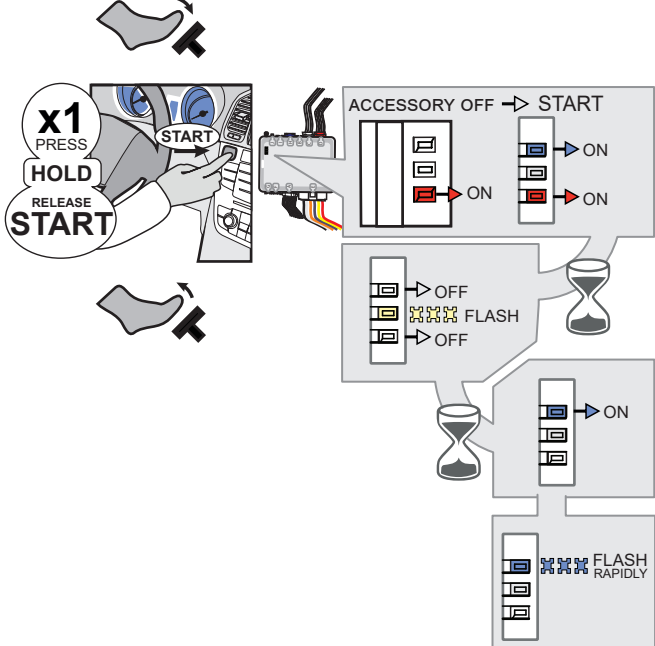


Press the foot-brake pedal.

Press the Push-to-Start button until the engine start.

Release the foot-brake pedal.

- ↳ The BLUE LED will turn ON.
- ↳ The BLUE LED will turn OFF. The RED LED will turn OFF.
- ↳ The YELLOW LED will flash rapidly
- ↳ The BLUE LED will turn ON.
- ↳ The BLUE LED will flash rapidly

10

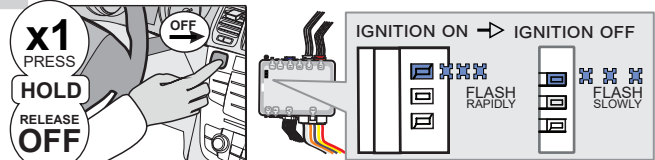

Press the Push-to-Start button until the engine turn OFF.


- ↳ The BLUE LED will flash slowly

11



Disconnect all connectors and after the 6-Pin (Main-Harness) or the 4-Pin Data-link connector.


12

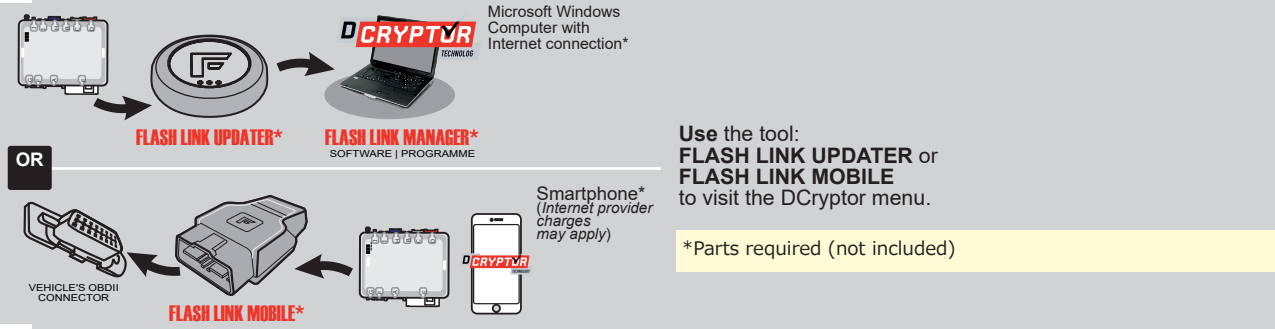

Use the tool: FLASH LINK UPDATER* or FLASH LINK MOBILE* to visit the DCryptor menu.

***Parts required (not included)**

13

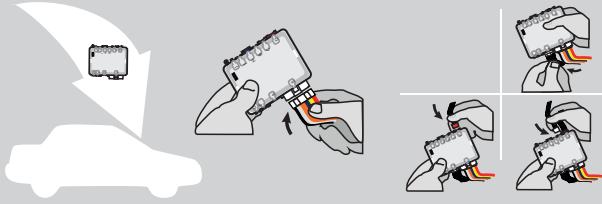

AFTER DCRYPTOR PROGRAMMING COMPLETED
 Go back to the vehicle and **reconnect** the 6-Pin (Main-Harness) or the 4-pins (Data-Link) connector and after all the remaining connector.



The module is now programmed.




REMOTE STARTER / ALARM VERIFICATION PROCEDURE

Test the remote starter. Remote start the vehicle.

REMOTE STARTER PROGRAMMING PROCEDURE |



REFER TO THE **QUICK INSTALL GUIDE** INCLUDED WITH THE MODULE FOR THE REMOTE STARTER PROGRAMMING.

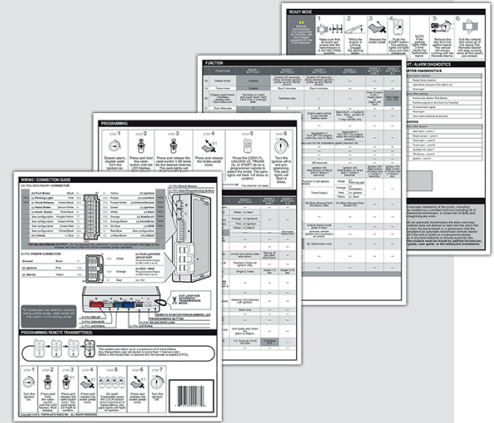

REMOTE STARTER FUNCTIONALITY |



All doors must be closed.



Remote start the vehicle.



Press the Unlock button of the remote car starter.



Enter the vehicle with the Intelligent Access Key.




The vehicle can now be put in to gear and driven.



If the vehicle is not unlocked the module will shut down the remote-starter and the vehicle as soon as any door is opened.


**THAR-GM6 THARNESSE
INSTALLATION**

ADDENDUM - SUGGESTED WIRING CONFIGURATION

VEHICLE	YEARS	Vehicle functions supported in this diagram (functional if equipped)														
		Immobilizer bypass	Lock	Unlock	Arm	Disarm	Trunk (open)	Parking Light	RAP Disable	Tachometer	Heated Seats	Door Status	Trunk Status	Hand-Brake Status	Foot-Brake Status	OEM Remote Monitoring
																
CHEVROLET																
Equinox	Push-To-Start	2018-2020	•	•	•	•	•	•	•	•	•	•	•	•	•	•

BYPASS FIRMWARE VERSION

To add the firmware version and the options, use the **FLASH LINK UPDATER** or **FLASH LINK MOBILE** tool, sold separately.

 **70.[45]**
MINIMUM

	Program bypass option:	UNIT OPTION	DESCRIPTION
		C1	OEM Remote status (Lock/Unlock) monitoring


IF THE VEHICLE IS NOT EQUIPPED WITH FUNCTIONAL HOOD PIN:

A11	OFF	Hood trigger (Output Status).
D6		Push-to-Start

ATTENTION!


  DATE: XX-XX

E5	OFF	By default DEACTIVATED
	ON	MANUFACTURED MODULES BETWEEN: 04/2018 TO 04/2019

 **Parts required (Not included): 1X THAR-GM6**

MANDATORY INSTALL

*** HOOD PIN**



HOOD STATUS: THE HOOD PIN SWITCH (INCLUDED) MUST BE INSTALLED IF THE VEHICLE CAN BE REMOTE STARTED WITH THE HOOD OPEN, SET FUNCTION **A11** TO OFF.

A11 **OFF**

SECURITY STICKER

 Included

Notice: the installation of safety elements are mandatory. The hood pin and the sticker are essential security elements and must be installed.

THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.

DESCRIPTION

Program remote starter option for R.S.
OEM REMOTE STAND ALONE:

38

2

Enable
Press 3x Lock to remote start with the OEM remote.


BCM




①






②

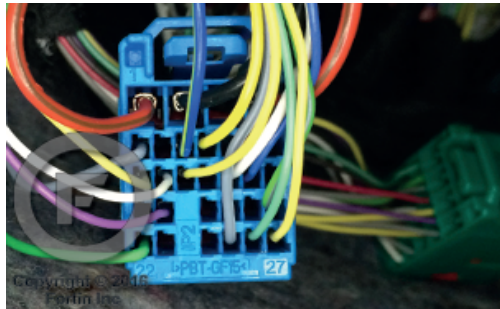

③

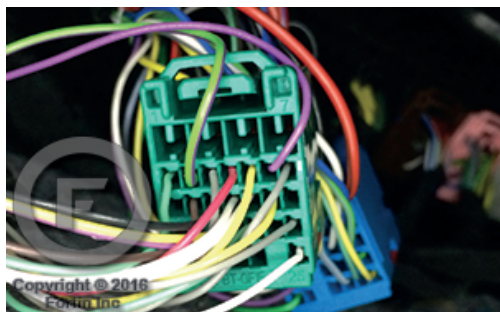


AUTOMATIC TRANSMISSION WIRING CONNECTION

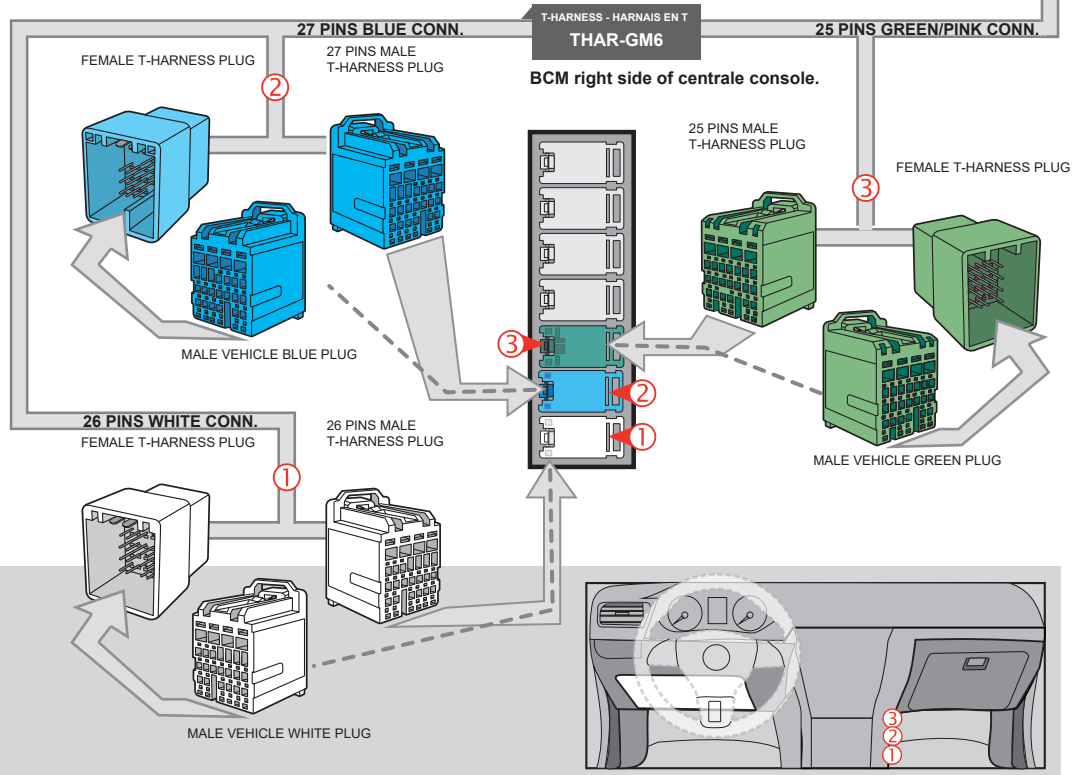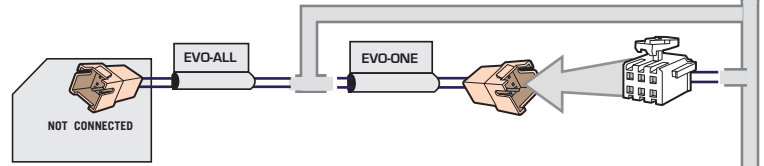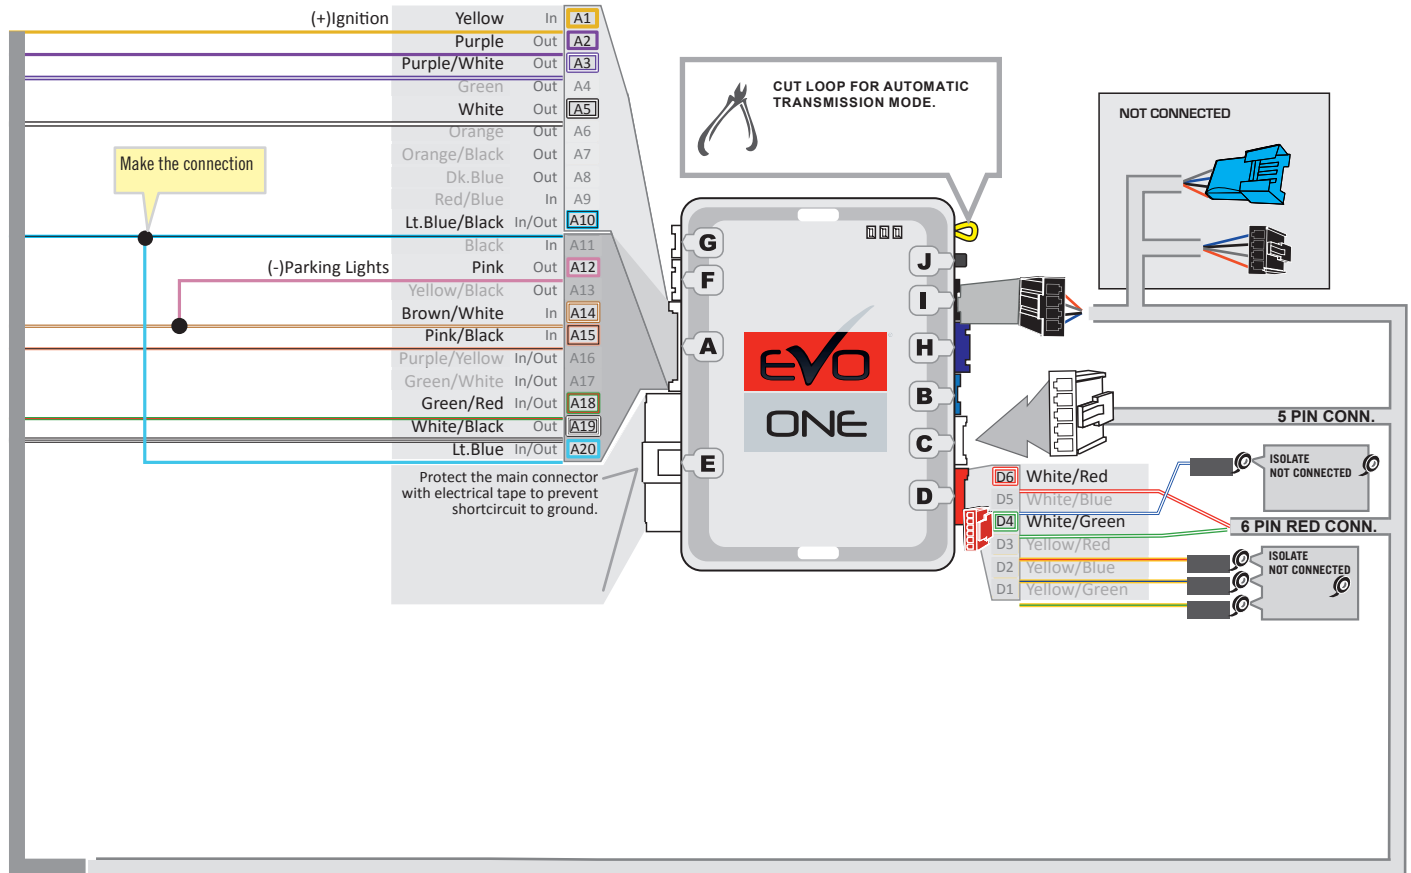


KEY BYPASS PROGRAMMING PROCEDURE 1/2



- 1** Remove the battery from the OEM remote.
- 2** Place the OEM remote in the front cup holder in the center console.
Refer to vehicle user guide for keyport location.

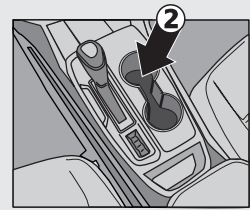


1

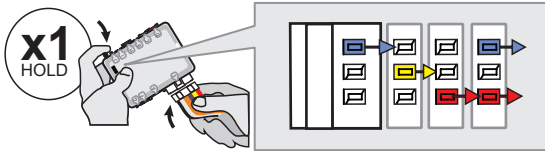

Press and hold the programming button:
Insert the 6-Pin Main connector.


↳The LEDs will alternate between BLUE, RED, YELLOW & BLUE/RED flashes.

2

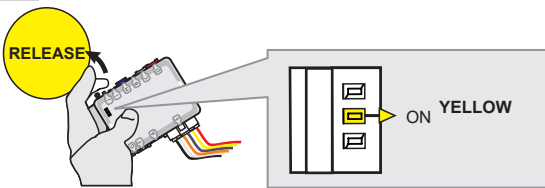


Release the programming button when the LED is YELLOW.

 If the LED is not solid YELLOW disconnect the 6-Pin connector (Main-Harness) and go back to step 1.




3

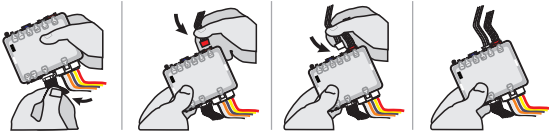

Insert the required remaining connectors.

4

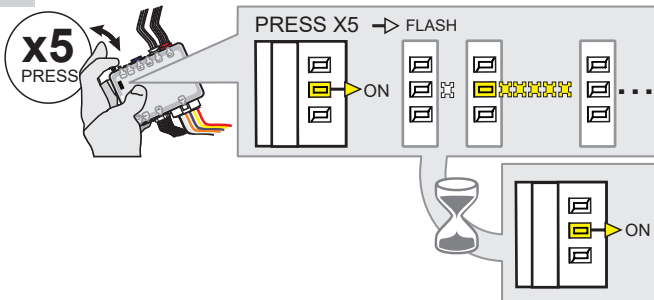


Press and release the programming button five (5x) times.

↳The YELLOW LED will flash 5 times each second.


↳**WAIT** for the YELLOW LED to turn ON solide.

 5



Open the driver door.

6

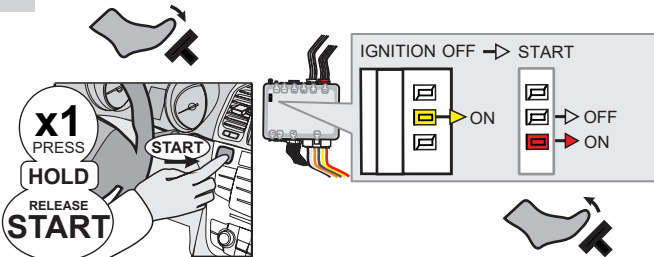

Press the foot-brake pedal.

Press the Push-to-Start button until the engine start.

Release the foot-brake pedal.

↳The RED LED will turn ON.
↳The YELLOW LED will turn OFF.


KEY BYPASS PROGRAMMING PROCEDURE 2/2

7




Press the Push-to-Start button until the engine turn OFF.

8

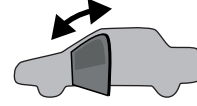

Close and open the driver door.

9

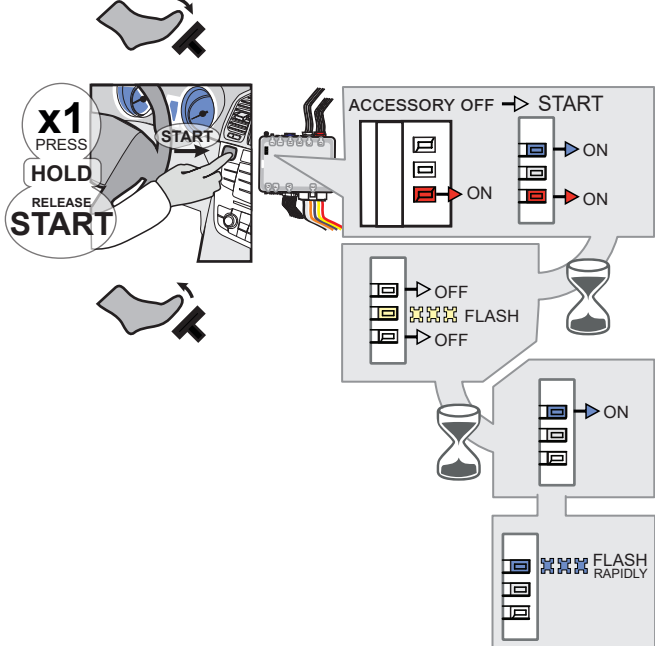


Press the foot-brake pedal.

Press the Push-to-Start button until the engine start.

Release the foot-brake pedal.

- ↳ The BLUE LED will turn ON.
- ↳ The BLUE LED will turn OFF. The RED LED will turn OFF.
- ↳ The YELLOW LED will flash rapidly
- ↳ The BLUE LED will turn ON.
- ↳ The BLUE LED will flash rapidly

10

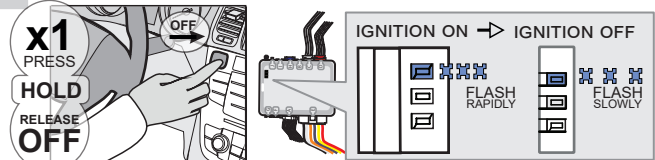

Press the Push-to-Start button until the engine turn OFF.


- ↳ The BLUE LED will flash slowly

11



Disconnect all connectors and after the 6-Pin (Main-Harness) or the 4-Pin Data-link connector.

12

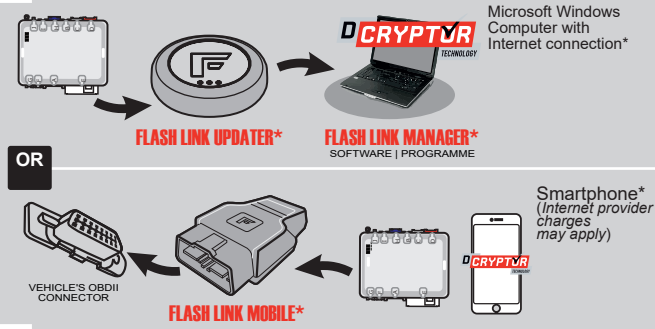

Microsoft Windows Computer with Internet connection*

FLASH LINK UPDATER* FLASH LINK MANAGER*
SOFTWARE | PROGRAMME

OR

Smartphone* (Internet provider charges may apply)


VEHICLE'S OBDII CONNECTOR FLASH LINK MOBILE*

Use the tool: FLASH LINK UPDATER or FLASH LINK MOBILE to visit the DCryptor menu.

*Parts required (not included)

KEY BYPASS PROGRAMMING PROCEDURE 3/3

13

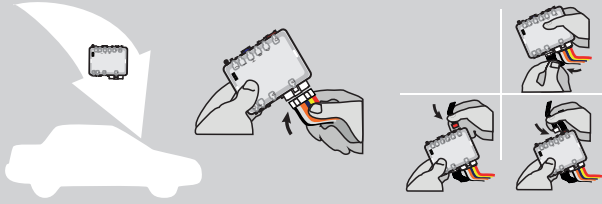

AFTER DCRYPTOR PROGRAMMING COMPLETED
 Go back to the vehicle and **reconnect** the 6-Pin (Main-Harness) or the 4-pins (Data-Link) connector and after all the remaining connector.



The module is now programmed.




REMOTE STARTER / ALARM VERIFICATION PROCEDURE

Test the remote starter. Remote start the vehicle.

REMOTE STARTER PROGRAMMING PROCEDURE



REFER TO THE **QUICK INSTALL GUIDE** INCLUDED WITH THE MODULE FOR THE REMOTE STARTER PROGRAMMING.

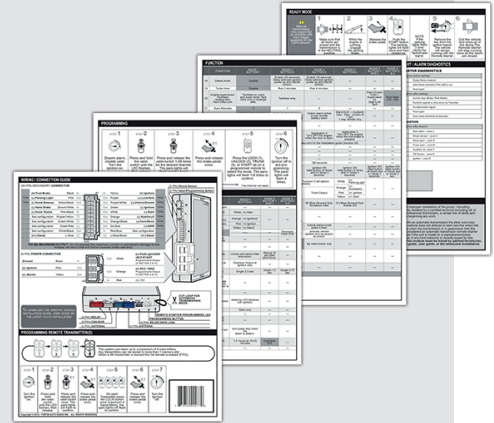

REMOTE STARTER FUNCTIONALITY |



All doors must be closed.



Remote start the vehicle.



Press the Unlock button of the remote car starter.



Enter the vehicle with the Intelligent Access Key.



The vehicle can now be put in to gear and driven.



If the vehicle is not unlocked the module will shut down the remote-starter and the vehicle as soon as any door is opened.

THAR-GM6 THARNNESS INSTALLATION

ADDENDUM - SUGGESTED WIRING CONFIGURATION

VEHICLE	YEARS	Vehicle functions supported in this diagram (functional if equipped)													
		Immobilizer bypass	Lock	Unlock	Arm	Disarm	Trunk (open)	RAP Disable	Tachometer	Heated Seats	Door Status	Trunk Status	Hand-Brake Status	Foot-Brake Status	OEM Remote Monitoring
BUICK															
Lacrosse	Push-To-Start	2017-2018	•	•	•	•	•	•	•	•	•	•	•	•	•

BYPASS FIRMWARE VERSION

70.[41]

GM MINIMUM

To add the firmware version and the options, use the **FLASH LINK UPDATER** or **FLASH LINK MOBILE** tool, sold separately.

		UNIT OPTION	DESCRIPTION
	Program bypass option IF THE VEHICLE IS NOT EQUIPPED WITH FUNCTIONAL HOOD PIN:	A11	<div style="background-color: red; color: white; padding: 5px; display: inline-block;">OFF</div> Hood trigger (Output Status).

		UNIT OPTION	DESCRIPTION
	Program bypass option:	C1	OEM Remote status (Lock/Unlock) monitoring
		D6	Push-to-Start

ATTENTION!

DATE: XX-XX

E5

OFF

By default DEACTIVATED

ON

MANUFACTURED MODULES BETWEEN: 04/2018 TO 04/2019

Parts required (Not included): 1X THAR-GM6

MANDATORY INSTALL

*** HOOD PIN** **HOOD STATUS:** THE HOOD PIN SWITCH (INCLUDED) MUST BE INSTALLED IF THE VEHICLE CAN BE REMOTE STARTED WITH THE HOOD OPEN, SET FUNCTION **A11** TO OFF.

A11

OFF

SECURITY STICKER

Included

Notice: the installation of safety elements are mandatory. The hood pin and the sticker are essential security elements and must be installed.

THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.

DESCRIPTION


Program remote starter option for R.S.
OEM REMOTE STAND ALONE:

38

2

Enable
 Press 3x Lock to remote start with the OEM remote.



BCM located on passenger side center console

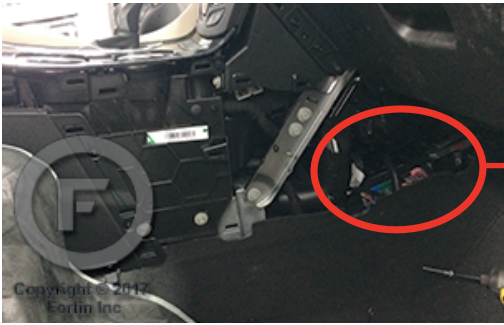


③







②

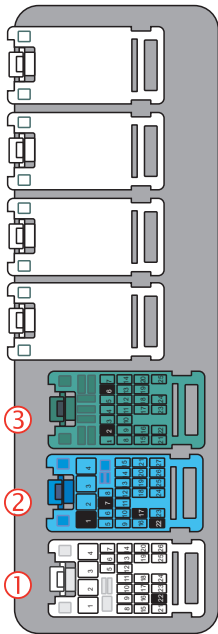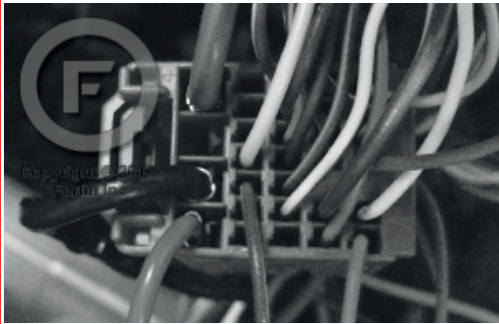


①

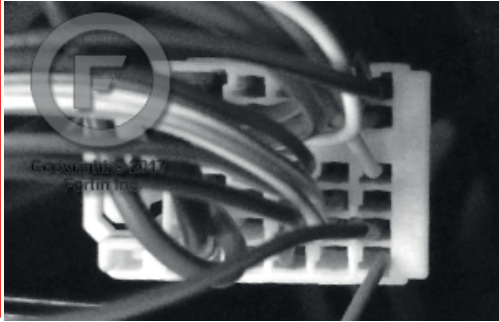

AUTOMATIC TRANSMISSION WIRING CONNECTION

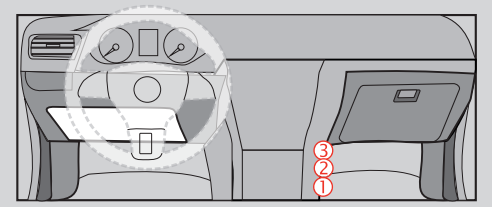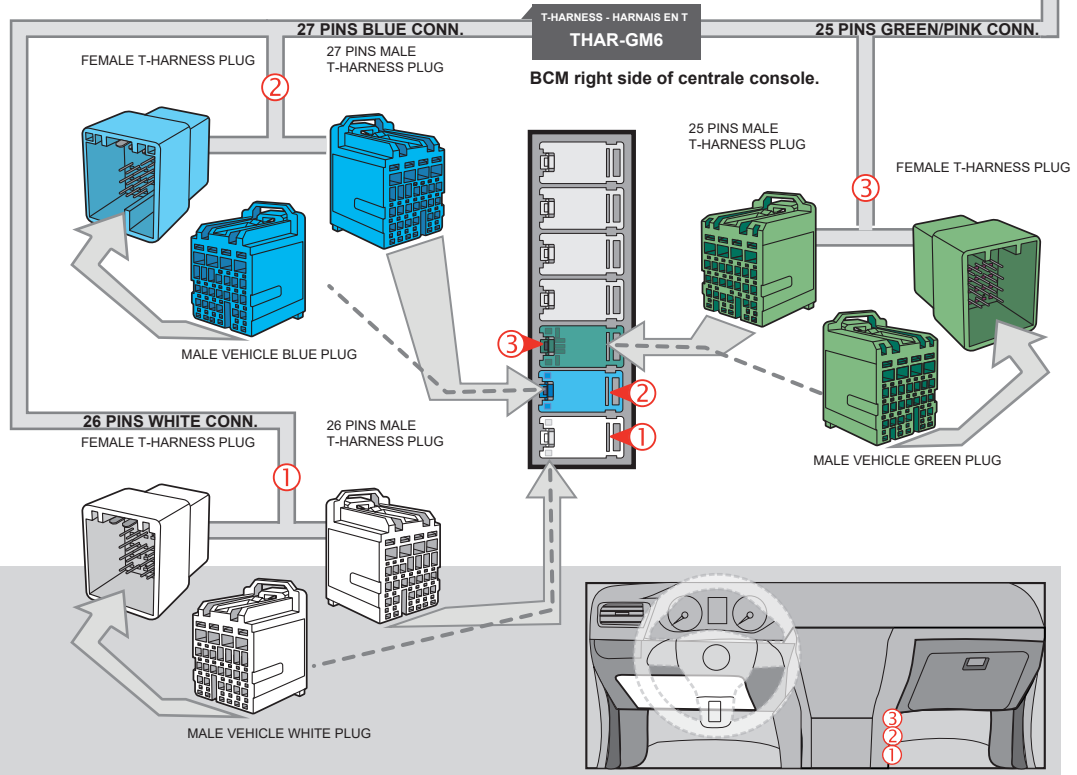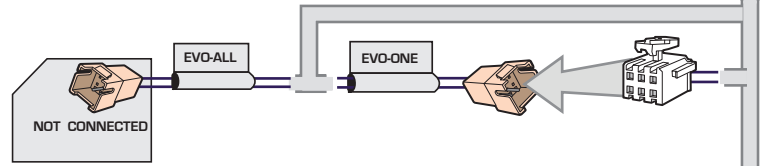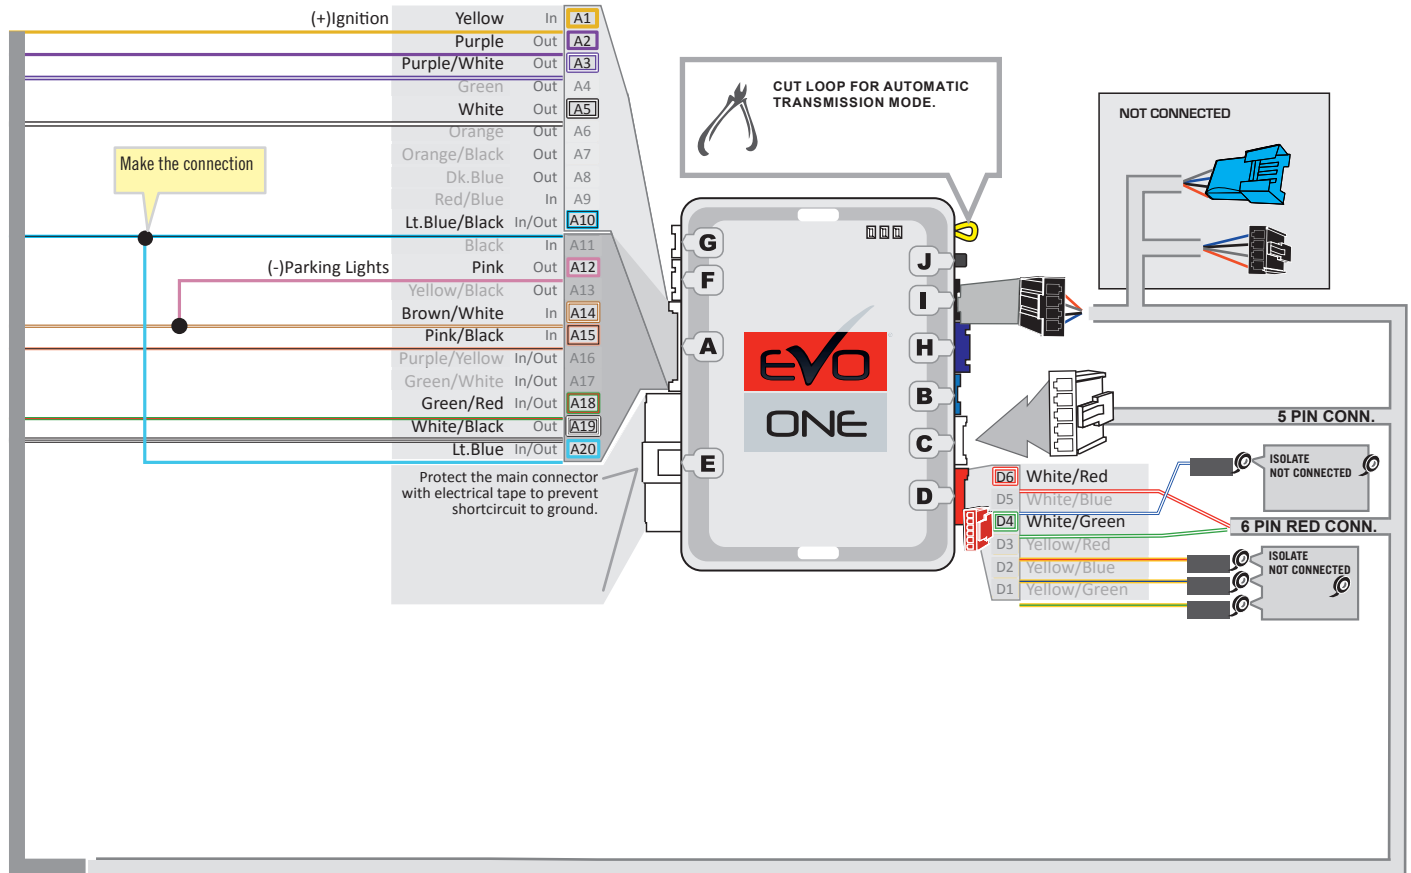


KEY BYPASS PROGRAMMING PROCEDURE 1/2

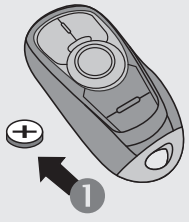


1 Remove the battery from the OEM remote.

2 Place the OEM remote into the transmitter pocket of the center console.

Refer to vehicle user guide for keyport location.

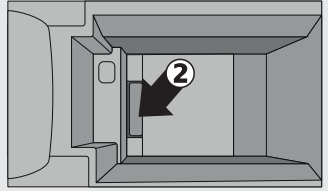


1

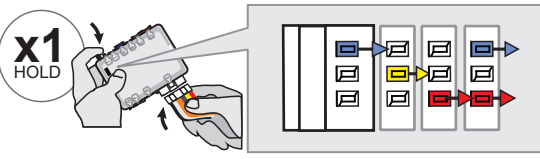

Press and hold the programming button: **Insert** the 6-Pin Main connector.


↳The LEDs will alternate between BLUE, RED, YELLOW & BLUE/RED flashes.

2

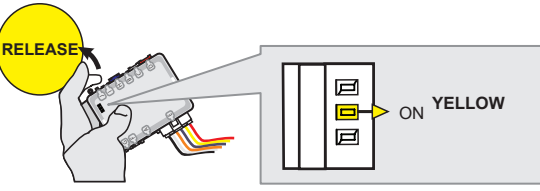

Release the programming button when the LED is **YELLOW**.

If the LED is not solid YELLOW disconnect the 6-Pin connector (Main-Harness) and go back to step 1.

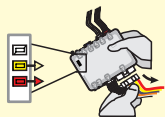


3



Insert the required remaining connectors.

4

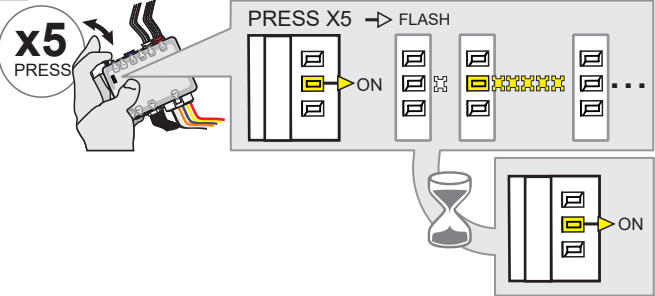


Press and release the programming button five (5x) times.

↳The YELLOW LED will flash 5 times each second.


↳WAIT for the YELLOW LED to turn ON solide.

5

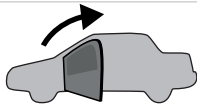

Open the driver door.

6

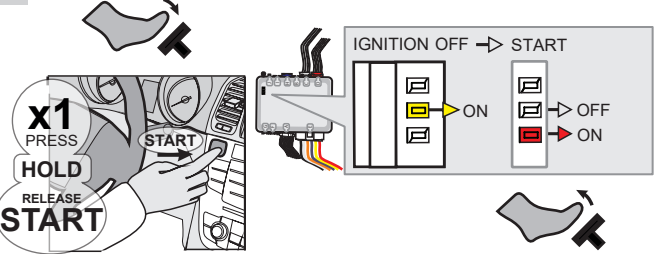

Press the foot-brake pedal.

Press the Push-to-Start button until the engine start.

Release the foot-brake pedal.

↳The RED LED will turn ON.
↳The YELLOW LED will turn OFF.


KEY BYPASS PROGRAMMING PROCEDURE 2/2

7




Press the Push-to-Start button until the engine turn OFF.

8

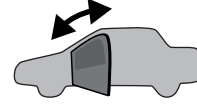

Close and open the driver door.

9

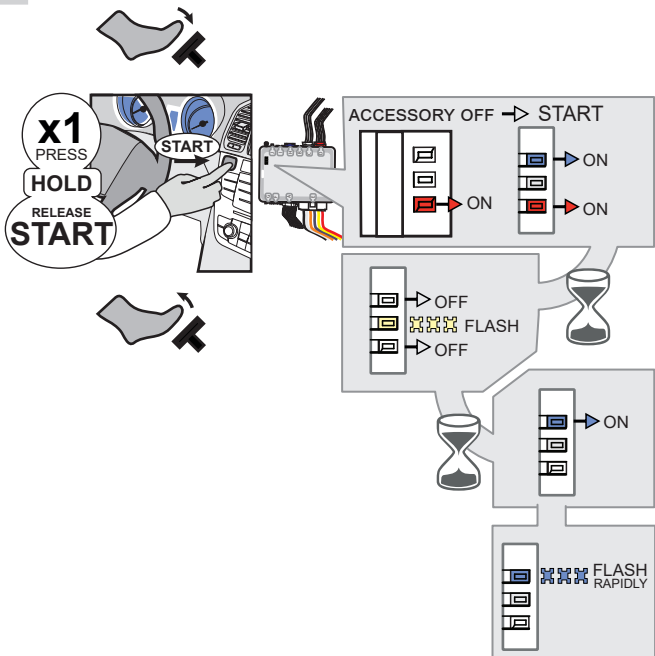


Press the foot-brake pedal.

Press the Push-to-Start button until the engine start.

Release the foot-brake pedal.

- ↳ The BLUE LED will turn ON.
- ↳ The BLUE LED will turn OFF. The RED LED will turn OFF.
- ↳ The YELLOW LED will flash rapidly
- ↳ The BLUE LED will turn ON.
- ↳ The BLUE LED will flash rapidly

10

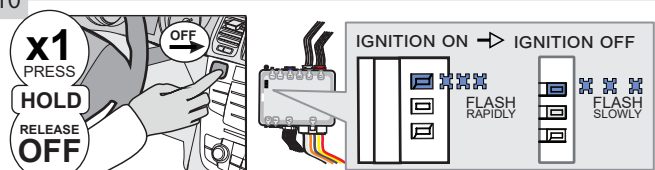

Press the Push-to-Start button until the engine turn OFF.


- ↳ The BLUE LED will flash slowly

11



Disconnect all connectors and after the 6-Pin (Main-Harness) or the 4-Pin Data-link connector.

12

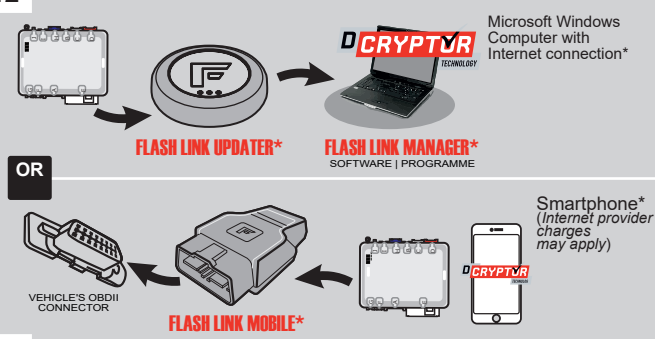


Use the tool: FLASH LINK UPDATER* or FLASH LINK MOBILE* to visit the DCryptor menu.

***Parts required (not included)**

KEY BYPASS PROGRAMMING PROCEDURE 3/3

13

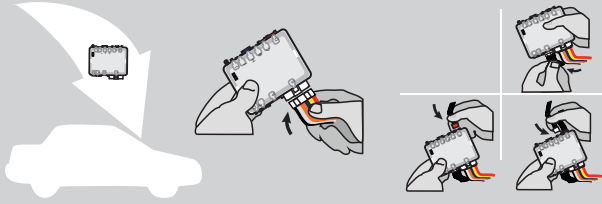

AFTER DCRYPTOR PROGRAMMING COMPLETED
 Go back to the vehicle and **reconnect** the 6-Pin (Main-Harness) or the 4-pins (Data-Link) connector and after all the remaining connector.



The module is now programmed.




REMOTE STARTER / ALARM VERIFICATION PROCEDURE

Test the remote starter. Remote start the vehicle.

REMOTE STARTER PROGRAMMING PROCEDURE



REFER TO THE **QUICK INSTALL GUIDE** INCLUDED WITH THE MODULE FOR THE REMOTE STARTER PROGRAMMING.

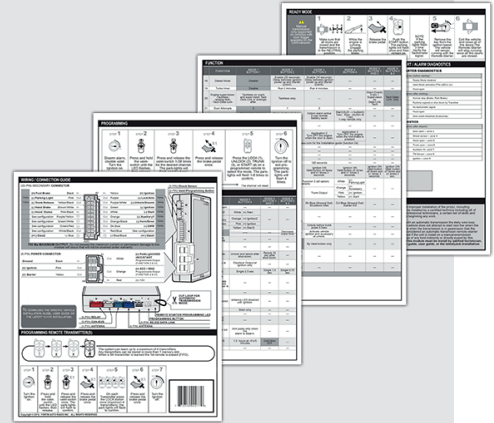

REMOTE STARTER FUNCTIONALITY |



All doors must be closed.



Remote start the vehicle.



Press the Unlock button of the remote car starter.



Enter the vehicle with the Intelligent Access Key.



The vehicle can now be put in to gear and driven.



If the vehicle is not unlocked the module will shut down the remote-starter and the vehicle as soon as any door is opened.

THAR-GM6 THARNNESS INSTALLATION

ADDENDUM - SUGGESTED WIRING CONFIGURATION

VEHICLE	YEARS	Vehicle functions supported in this diagram (functional if equipped)														
		Immobilizer bypass	Lock	Unlock	Arm	Disarm	Trunk (open)	Parking Light	RAP Disable	Tachometer	Heated Seats	Door Status	Trunk Status	Hand-Brake Status	Foot-Brake Status	OEM Remote Monitoring
BUICK																
Verano	Push-To-Start	2012-2017	•	•	•	•	•	•	•	•	•	•	•	•	•	•
CHEVROLET																
Blazer	Push-To-Start	2019-2020	•	•	•	•	•	•	•	•	•	•	•	•	•	•
Malibu	Push-To-Start	2016-2020	•	•	•	•	•	•	•	•	•	•	•	•	•	•
Traverse	Push-To-Start	2018-2020	•	•	•	•	•	•	•	•	•	•	•	•	•	•
GMC																
Terrain	Push-To-Start	2018-2020	•	•	•	•	•	•	•	•	•	•	•	•	•	•

BYPASS FIRMWARE VERSION

70.[41]

GM MINIMUM

To add the firmware version and the options, use the **FLASH LINK UPDATER** or **FLASH LINK MOBILE** tool, sold separately.

		UNIT OPTION	DESCRIPTION
	Program bypass option IF THE VEHICLE IS NOT EQUIPPED WITH FUNCTIONAL HOOD PIN:	A11	<div style="display: flex; align-items: center; justify-content: center;"> <div style="background-color: red; color: white; padding: 5px 10px; margin-right: 5px;">OFF</div> <div>Hood trigger (Output Status).</div> </div>

		UNIT OPTION	DESCRIPTION
	Program bypass option:	C1	OEM Remote status (Lock/Unlock) monitoring
		D6	Push-to-Start

ATTENTION!

DATE: XX-XX

		UNIT OPTION	DESCRIPTION
		E5	<div style="display: flex; align-items: center; justify-content: center;"> <div style="background-color: red; color: white; padding: 5px 10px; margin-right: 5px;">OFF</div> <div>By default DEACTIVATED</div> </div>
		ON	MANUFACTURED MODULES BETWEEN: 04/2018 TO 04/2019

Parts required (Not included): 1X THAR-GM6

MANDATORY INSTALL

*** HOOD PIN**

HOOD STATUS: THE HOOD PIN SWITCH (INCLUDED) MUST BE INSTALLED IF THE VEHICLE CAN BE REMOTE STARTED WITH THE HOOD OPEN, SET FUNCTION A11 TO OFF.

A11

OFF

SECURITY STICKER

Included

Notice: the installation of safety elements are mandatory. The hood pin and the sticker are essential security elements and must be installed.

THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.

DESCRIPTION

Program remote starter option for R.S.
OEM REMOTE STAND ALONE:

38

2

Enable
Press 3x Lock to remote start with the OEM remote.

BCM




Centrale console



①






②

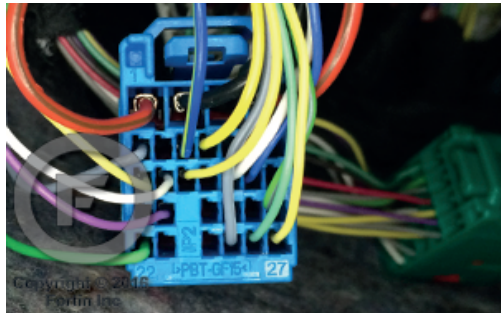


③



AUTOMATIC TRANSMISSION WIRING CONNECTION

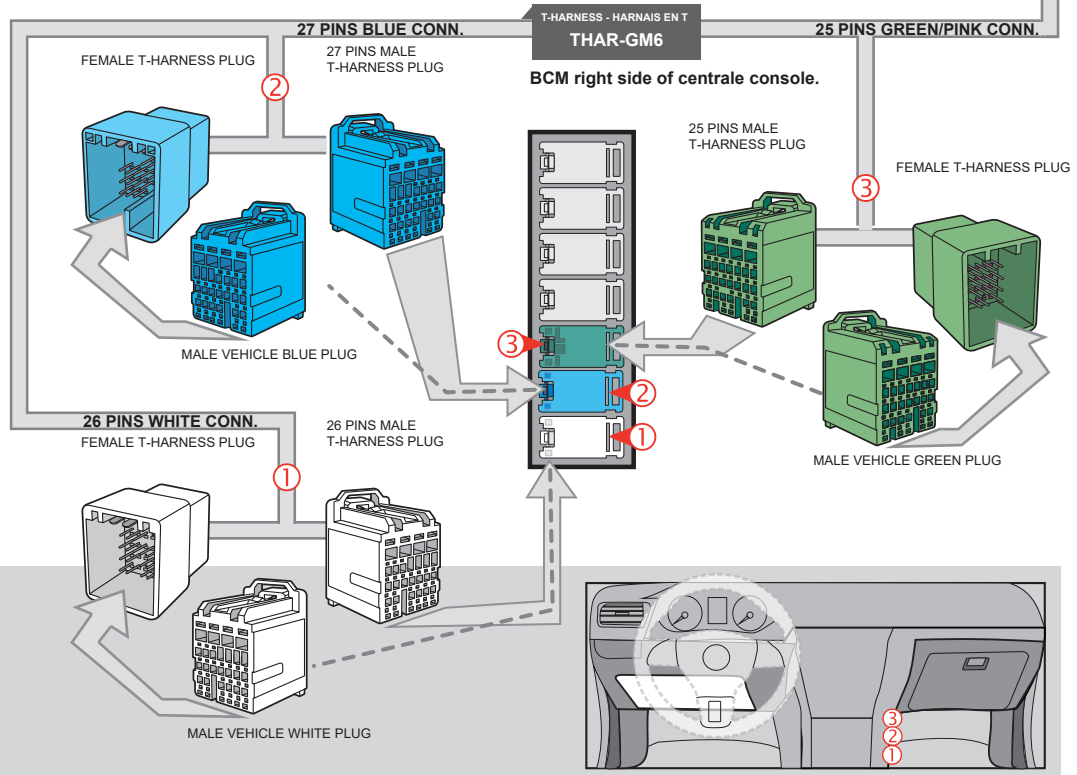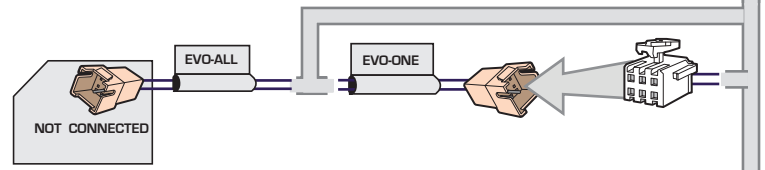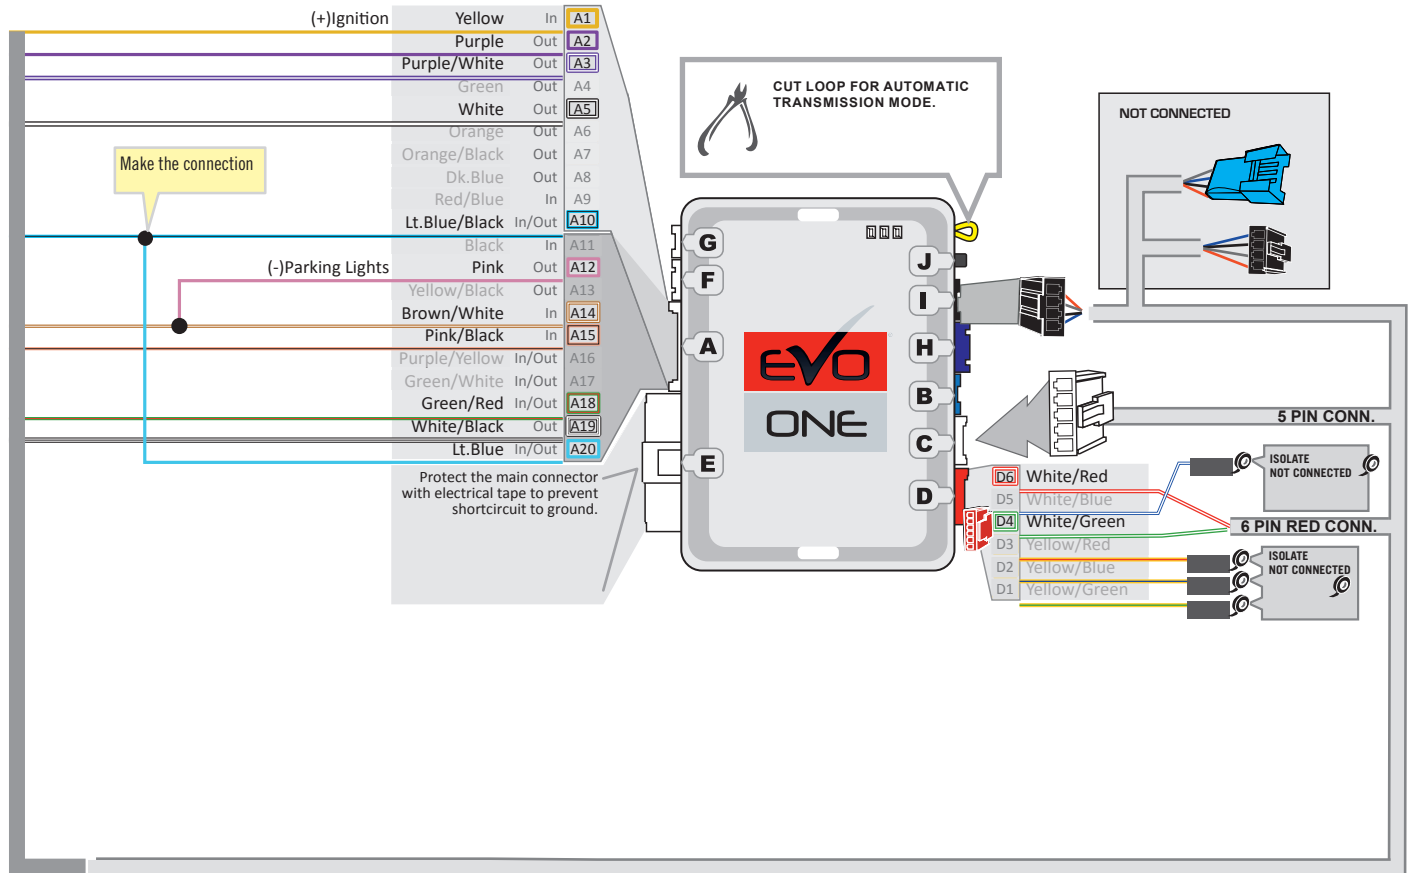


KEY BYPASS PROGRAMMING PROCEDURE 1/2

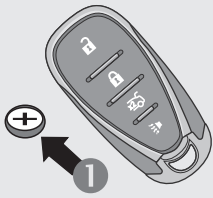


1 Remove the battery from the OEM remote.

2 Place the OEM remotes in to the center console.

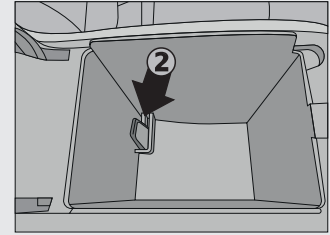


1

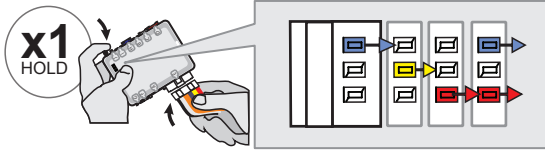

Press and hold the programming button:
Insert the 6-Pin Main connector.


↳The LEDs will alternate between BLUE, RED, YELLOW & BLUE/RED flashes.

2

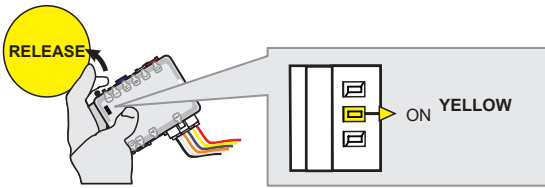


Release the programming button when the LED is YELLOW.

 If the LED is not solid YELLOW **disconnect** the 6-Pin connector (Main-Harness) and go back to step 1.




3

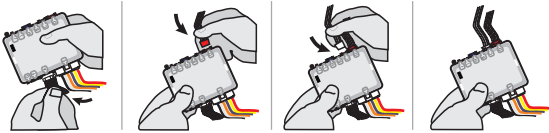

Insert the required remaining connectors.

4

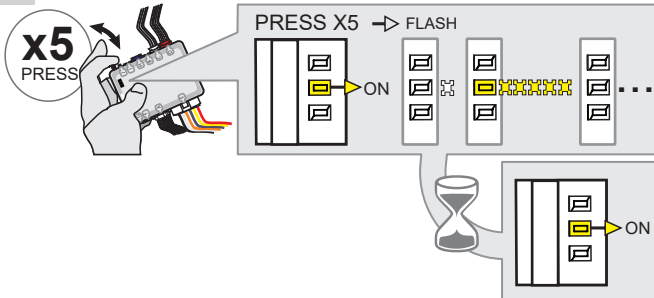


Press and release the programming button five (5x) times.

↳The YELLOW LED will flash 5 times each second.


↳**WAIT** for the YELLOW LED to turn ON solide.

 5



Open the driver door.

6

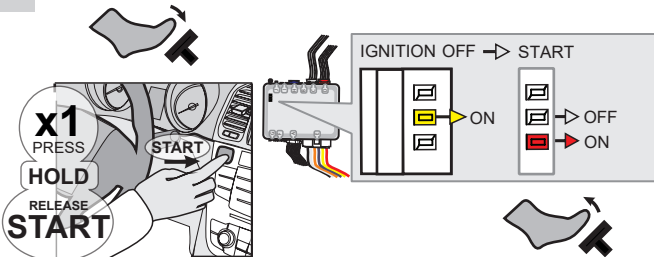

Press the foot-brake pedal.

Press the Push-to-Start button until the engine start.

Release the foot-brake pedal.

↳The RED LED will turn ON.
↳The YELLOW LED will turn OFF.

KEY BYPASS PROGRAMMING PROCEDURE 2/2

7

Press the Push-to-Start button until the engine turn OFF.

8

Close and open the driver door.

9

Press the foot-brake pedal.

Press the Push-to-Start button until the engine start.

Release the foot-brake pedal.

- ↳ The BLUE LED will turn ON.
- ↳ The BLUE LED will turn OFF. The RED LED will turn OFF.
- ↳ The YELLOW LED will flash rapidly
- ↳ The BLUE LED will turn ON.
- ↳ The BLUE LED will flash rapidly

10

Press the Push-to-Start button until the engine turn OFF.

- ↳ The BLUE LED will flash slowly

11

Disconnect all connectors and after the 6-Pin (Main-Harness) or the 4-Pin Data-link connector.

12

Microsoft Windows Computer with Internet connection*

FLASH LINK UPDATER* FLASH LINK MANAGER*
SOFTWARE | PROGRAMME

OR

Smartphone* (Internet provider charges may apply)


VEHICLE'S OBDII CONNECTOR FLASH LINK MOBILE*

Use the tool: FLASH LINK UPDATER or FLASH LINK MOBILE to visit the DCryptor menu.

*Parts required (not included)

KEY BYPASS PROGRAMMING PROCEDURE 3/3

13

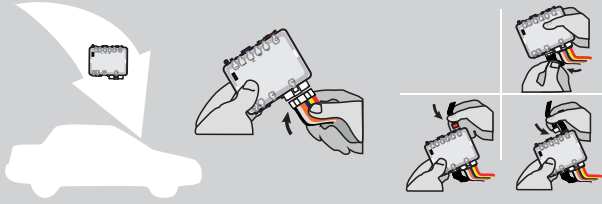

AFTER DCRYPTOR PROGRAMMING COMPLETED
 Go back to the vehicle and **reconnect** the 6-Pin (Main-Harness) or the 4-pins (Data-Link) connector and after all the remaining connector.



The module is now programmed.



REMOTE STARTER / ALARM VERIFICATION PROCEDURE

Test the remote starter. Remote start the vehicle.

REMOTE STARTER PROGRAMMING PROCEDURE



REFER TO THE **QUICK INSTALL GUIDE** INCLUDED WITH THE MODULE FOR THE REMOTE STARTER PROGRAMMING.

OR



REMOTE STARTER FUNCTIONALITY |



All doors must be closed.

 


Remote start the vehicle.



Unlock the doors with either:

- The OEM remote
- The remote-starter remote
- Or the proximity remote



Enter the vehicle with the Intelligent Key.




The vehicle can now be put in to gear and driven.





If the vehicle is not unlocked with one of these conditions the remote-starter will shut down as soon as any door is opened.


THAR-GM6 THARNNESS INSTALLATION

ADDENDUM - SUGGESTED WIRING CONFIGURATION

VEHICLE		YEARS	Vehicle functions supported in this diagram (functional if equipped)												
			Immobilizer bypass	Lock	Unlock	Arm	Disarm	RAP Disable	Tachometer	Heated Seats	Door Status	Hand-Brake Status	Foot-Brake Status	OEM Remote Monitoring	
GMC															
Sierra 1500	Push-To-Start	2019-2020	•	•	•	•	•	•	•	•	•	•	•	•	

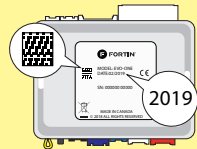	COMPATIBLE MODULE REQUIRED:	QR CODE ON THE LABEL MANUFACTURED AFTER: 2019	FIRMWARE VERSION 70.[40] <small>GM MINIMUM</small>	To add the firmware version and the options, use the FLASH LINK UPDATER or FLASH LINK MOBILE tool, sold separately.
--	------------------------------------	--	--	---

	PROGRAM BYPASS OPTION	UNIT OPTION	DESCRIPTION
	Program bypass option IF THE VEHICLE IS NOT EQUIPPED WITH FUNCTIONAL HOOD PIN:	A11	OFF Hood trigger (Output Status).

	PROGRAM BYPASS OPTION:	UNIT OPTION	DESCRIPTION
		C1	OEM Remote status (Lock/Unlock) monitoring
		D6	Push-to-Start

 ATTENTION!	 DATE: XX-XX	E5	OFF By default DEACTIVATED
			ON MANUFACTURED MODULES BETWEEN: 04/2018 TO 04/2019



Parts required (Not included): 1X THAR-GM6

MANDATORY INSTALL

* HOOD PIN



HOOD STATUS: THE HOOD PIN SWITCH (INCLUDED) MUST BE INSTALLED IF THE VEHICLE CAN BE REMOTE STARTED WITH THE HOOD OPEN, SET FUNCTION A11 TO OFF.

A11

OFF

SECURITY STICKER



Included





Notice: the installation of safety elements are mandatory. The hood pin and the sticker are essential security elements and must be installed.

THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.




DESCRIPTION

Program remote starter option for R.S. OEM REMOTE STAND ALONE:	38	2	Enable
			Press 3x Lock to remote start with the OEM remote.


BCM, Above Driver kick panel

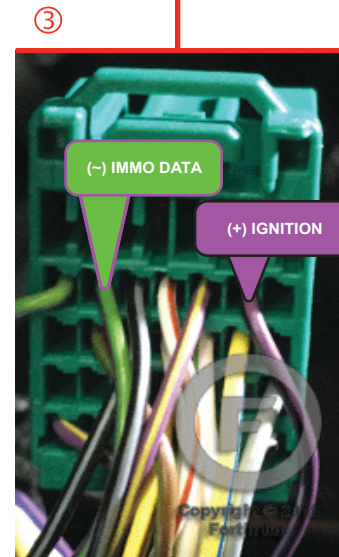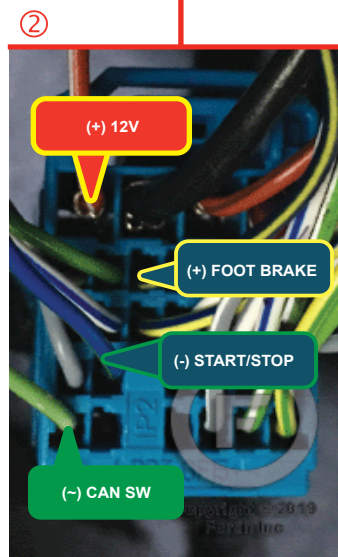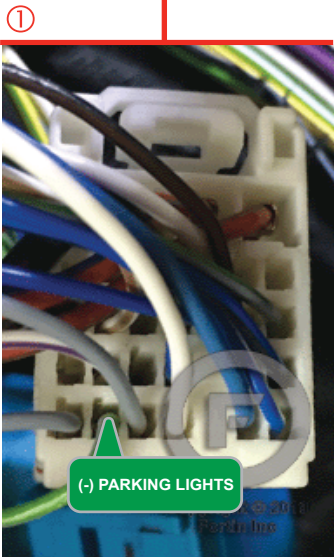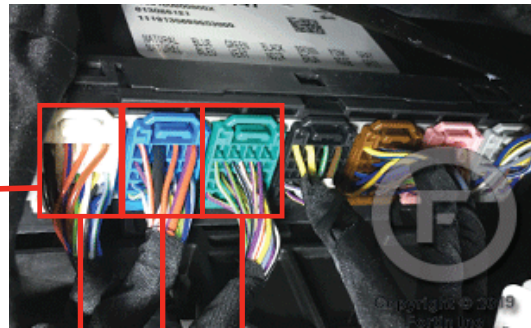



AUTOMATIC TRANSMISSION WIRING CONNECTION

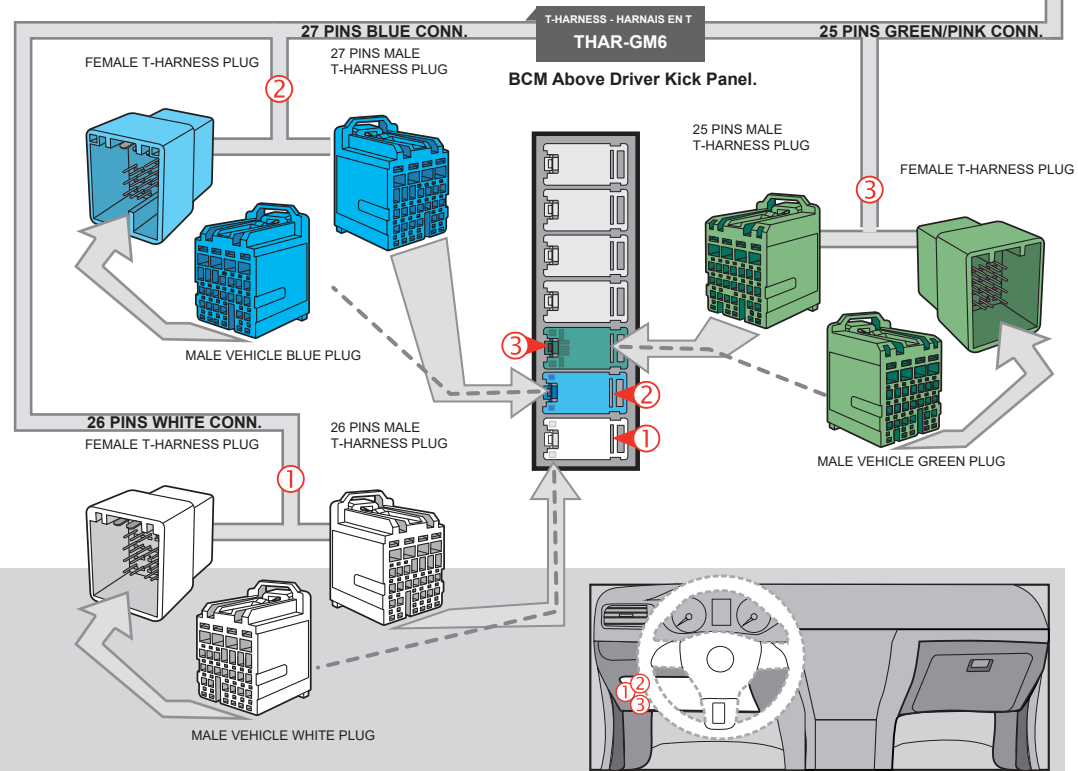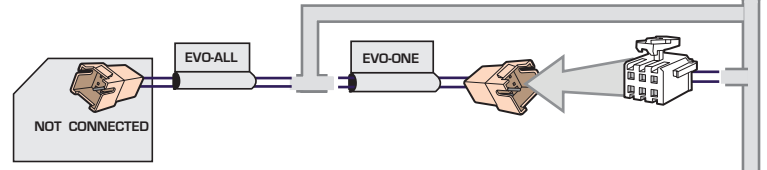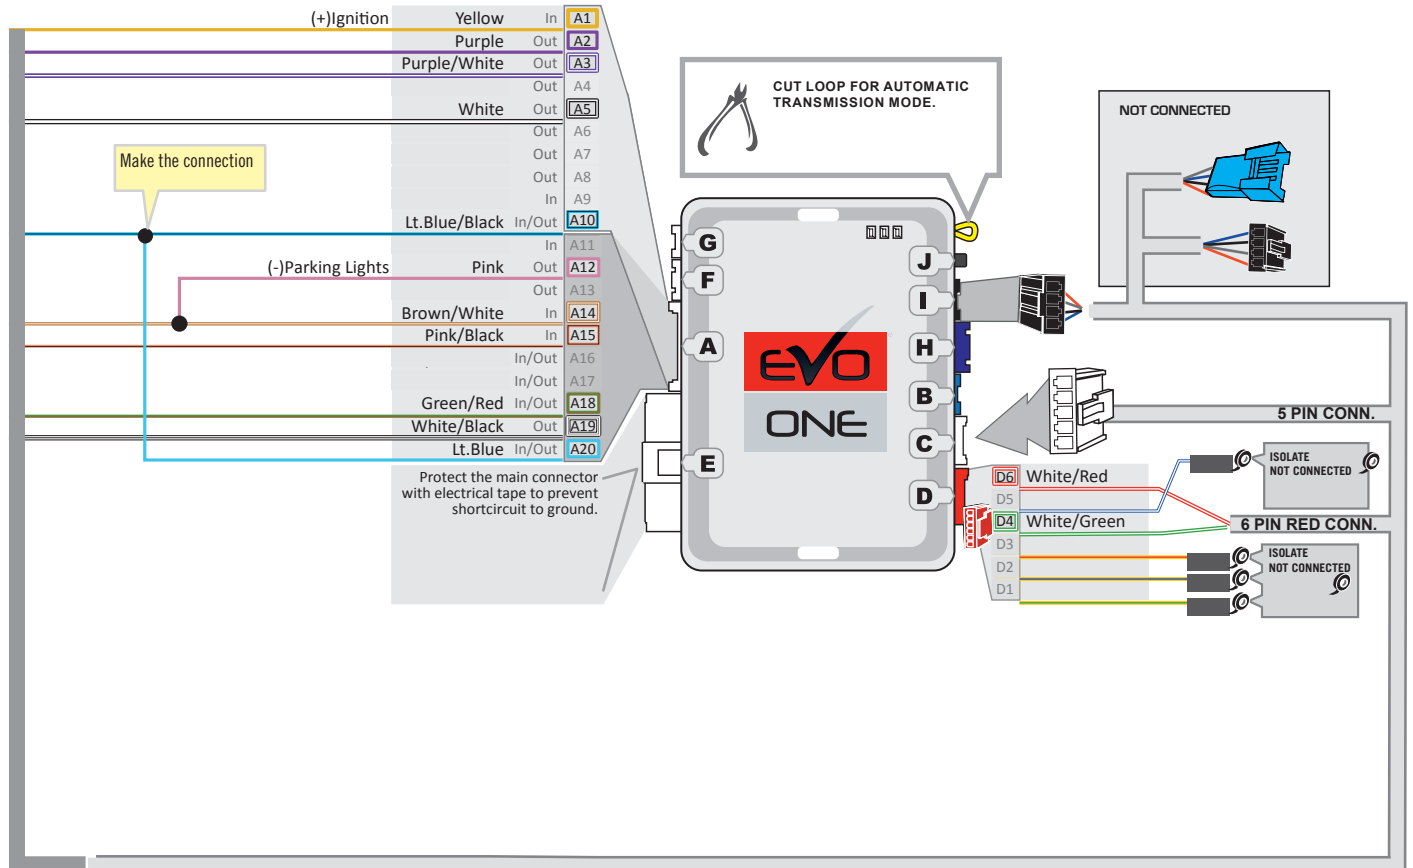


KEY BYPASS PROGRAMMING PROCEDURE 1/2

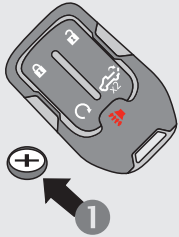


- 1 Remove the battery from the OEM remote.
- 2 Place the OEM remotes in to the center console.

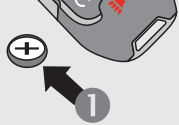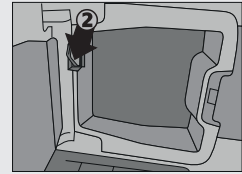

- 1 Remove the battery from the OEM remote.
- 2 Place the transmitter in the cupholder
Refer to vehicle user guide for keyport location.

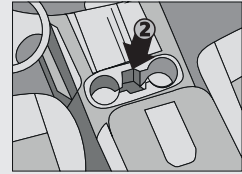


1

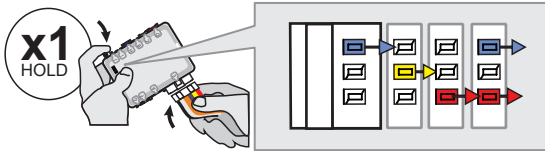

Press and hold the programming button:
Insert the 6-Pin Main connector.


↳The LEDs will alternate between BLUE, RED, YELLOW & BLUE/RED flashes.

2

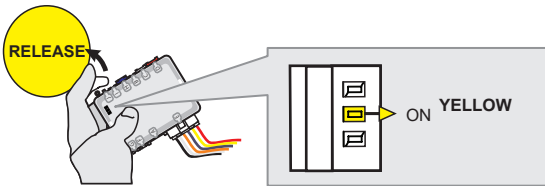


Release the programming button when the LED is YELLOW.

 If the LED is not solid YELLOW disconnect the 6-Pin connector (Main-Harness) and go back to step 1.




3

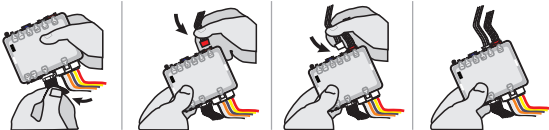

Insert the required remaining connectors.

4

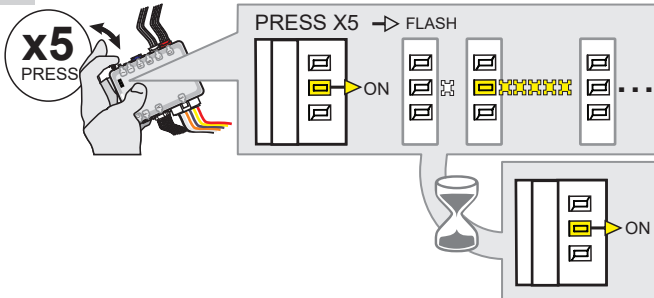


Press and release the programming button five (5x) times.

↳The YELLOW LED will flash 5 times each second.


↳**WAIT** for the YELLOW LED to turn ON solide.

 5



Open the driver door.

6

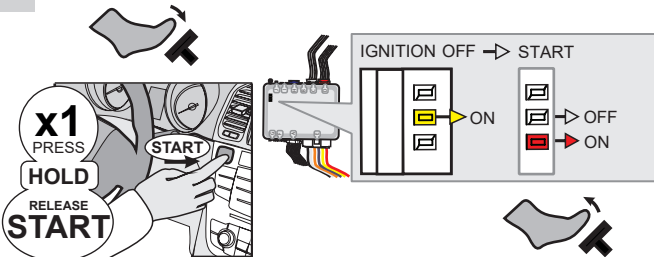

Press the foot-brake pedal.

Press the Push-to-Start button until the engine start.

Release the foot-brake pedal.

↳The RED LED will turn ON.
↳The YELLOW LED will turn OFF.


KEY BYPASS PROGRAMMING PROCEDURE 2/2 |

7




Press the Push-to-Start button until the engine turn OFF.

8

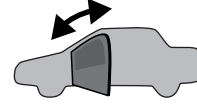

Close and open the driver door.

9

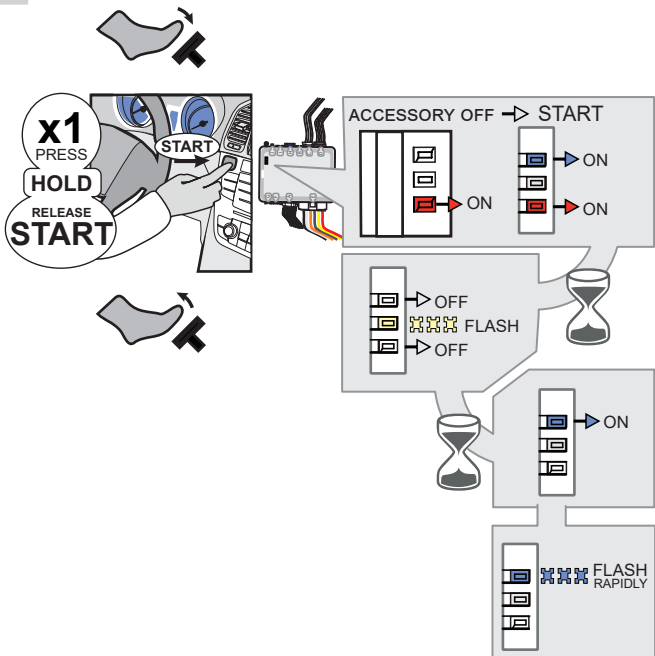


Press the foot-brake pedal.

Press the Push-to-Start button until the engine start.

Release the foot-brake pedal.

- ↳ The BLUE LED will turn ON.
- ↳ The BLUE LED will turn OFF. The RED LED will turn OFF.
- ↳ The YELLOW LED will flash rapidly
- ↳ The BLUE LED will turn ON.
- ↳ The BLUE LED will flash rapidly

10

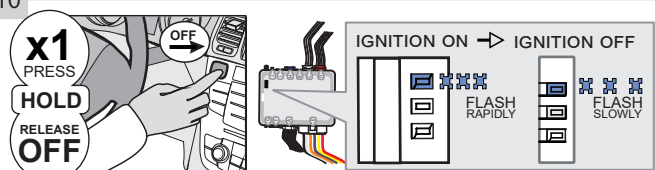

Press the Push-to-Start button until the engine turn OFF.


- ↳ The BLUE LED will flash slowly

11



Disconnect all connectors and after the 6-Pin (Main-Harness) or the 4-Pin Data-link connector.

12

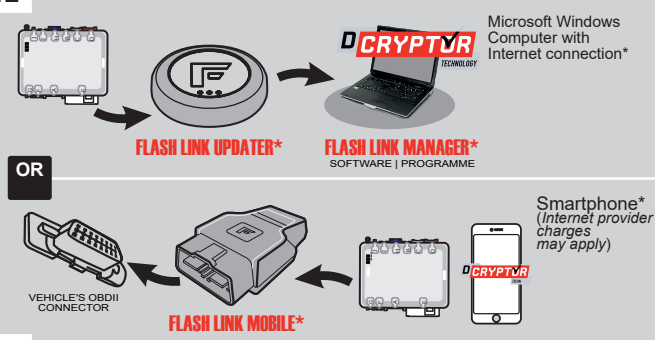

Microsoft Windows Computer with Internet connection*

FLASH LINK UPDATER* FLASH LINK MANAGER*
SOFTWARE | PROGRAMME

OR


Smartphone* (Internet provider charges may apply)

VEHICLE'S OBDII CONNECTOR FLASH LINK MOBILE*

Use the tool: FLASH LINK UPDATER or FLASH LINK MOBILE to visit the DCryptor menu.

*Parts required (not included)

13

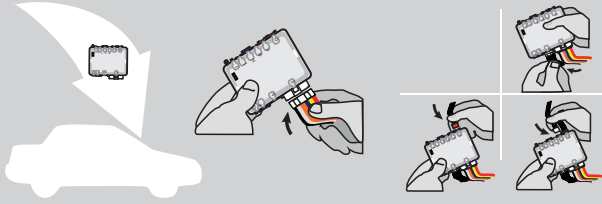

AFTER DCRYPTOR PROGRAMMING COMPLETED
 Go back to the vehicle and **reconnect** the 6-Pin (Main-Harness) or the 4-pins (Data-Link) connector and after all the remaining connector.



The module is now programmed.




REMOTE STARTER / ALARM VERIFICATION PROCEDURE

Test the remote starter. Remote start the vehicle.

REMOTE STARTER PROGRAMMING PROCEDURE |



REFER TO THE **QUICK INSTALL GUIDE** INCLUDED WITH THE MODULE FOR THE REMOTE STARTER PROGRAMMING.

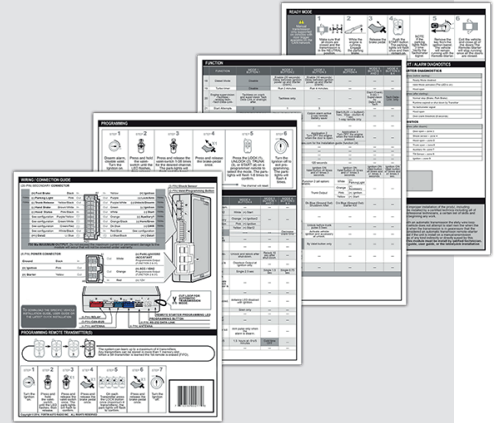

REMOTE STARTER FUNCTIONALITY |



All doors must be closed.




Remote start the vehicle.



Press the Unlock button of the remote car starter.



Enter the vehicle with the Intelligent Access Key.

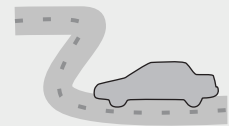

The vehicle can now be put in to gear and driven.



If the vehicle is not unlocked the module will shut down the remote-starter and the vehicle as soon as any door is opened.

THAR-GM6 THARNESSE INSTALLATION

ADDENDUM - SUGGESTED WIRING CONFIGURATION

VEHICLE	YEARS	Vehicle functions supported in this diagram (functional if equipped)											
		Immobilizer bypass	Lock	Unlock	Arm	Disarm	RAP Disable	Tachometer	Heated Seats	Door Status	Hand-Brake Status	Foot-Brake Status	OEM Remote Monitoring
CHEVROLET													
Silverado 2500	Push-To-Start	2020-2021	•	•	•	•	•	•	•	•	•	•	•
GMC													
Sierra 2500	Push-To-Start	2020-2021	•	•	•	•	•	•	•	•	•	•	•

BYPASS FIRMWARE VERSION

70.[45]

MINIMUM

To add the firmware version and the options, use the **FLASH LINK UPDATER** or **FLASH LINK MOBILE** tool, sold separately.

	Program bypass option:	UNIT OPTION	DESCRIPTION
		C1	OEM Remote status (Lock/Unlock) monitoring

IF THE VEHICLE IS NOT EQUIPPED WITH FUNCTIONAL HOOD PIN:	A11	OFF	Hood trigger (Output Status).
--	------------	------------	-------------------------------

	D6		Push-to-Start
--	-----------	--	---------------

ATTENTION!

DATE: XX-XX

E5

OFF

ON

By default DEACTIVATED

MANUFACTURED MODULES BETWEEN: 04/2018 TO 04/2019

Parts required (Not included): 1X THAR-GM6

MANDATORY INSTALL

*** HOOD PIN**

HOOD STATUS: THE HOOD PIN SWITCH (INCLUDED) MUST BE INSTALLED IF THE VEHICLE CAN BE REMOTE STARTED WITH THE HOOD OPEN, SET FUNCTION **A11** TO OFF.

A11

OFF

SECURITY STICKER

Included

Notice: the installation of safety elements are mandatory. The hood pin and the sticker are essential security elements and must be installed.

THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.

DESCRIPTION



Program remote starter option for R.S.
OEM REMOTE STAND ALONE:

38




2

Enable
Press 3x Lock to remote start with the OEM remote.

BCM

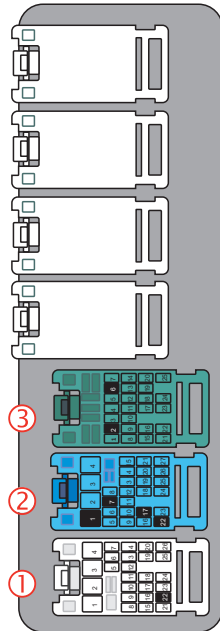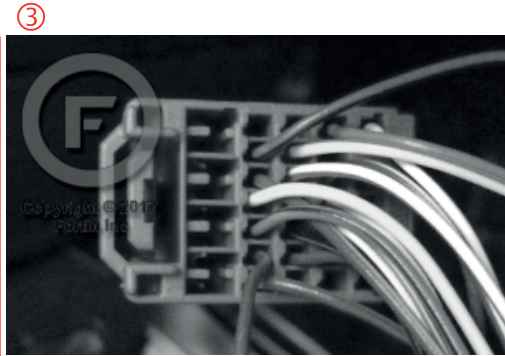


AUTOMATIC TRANSMISSION WIRING CONNECTION

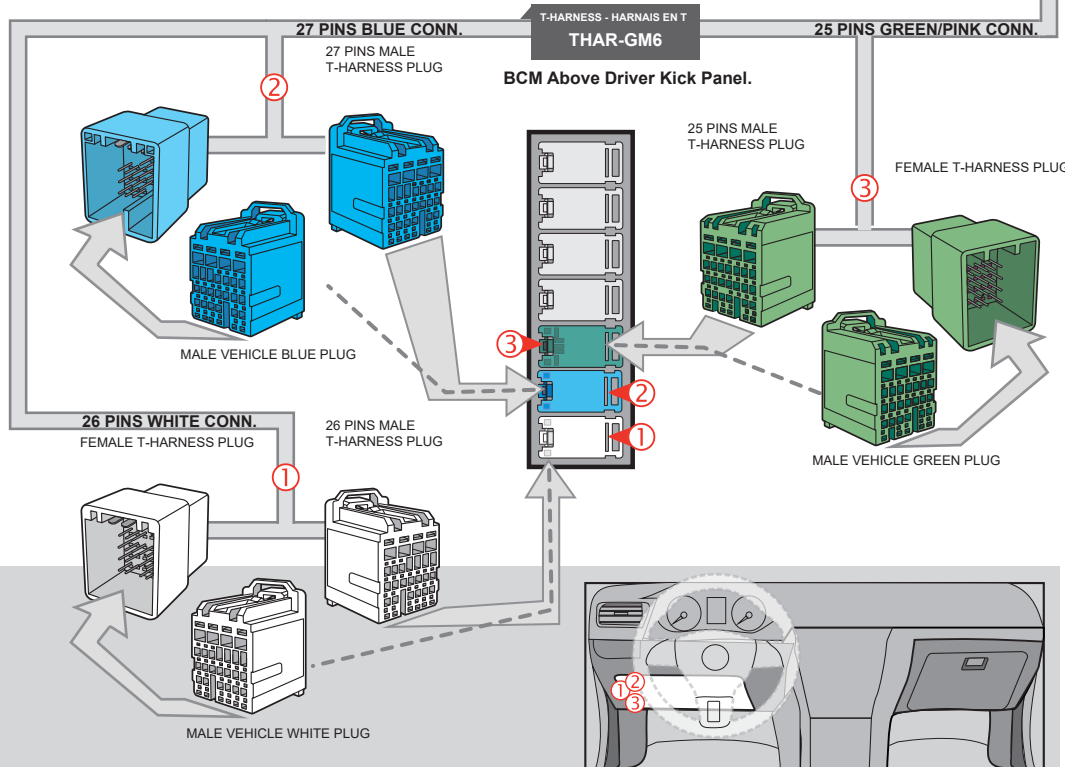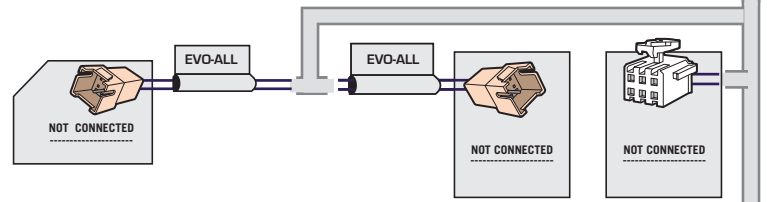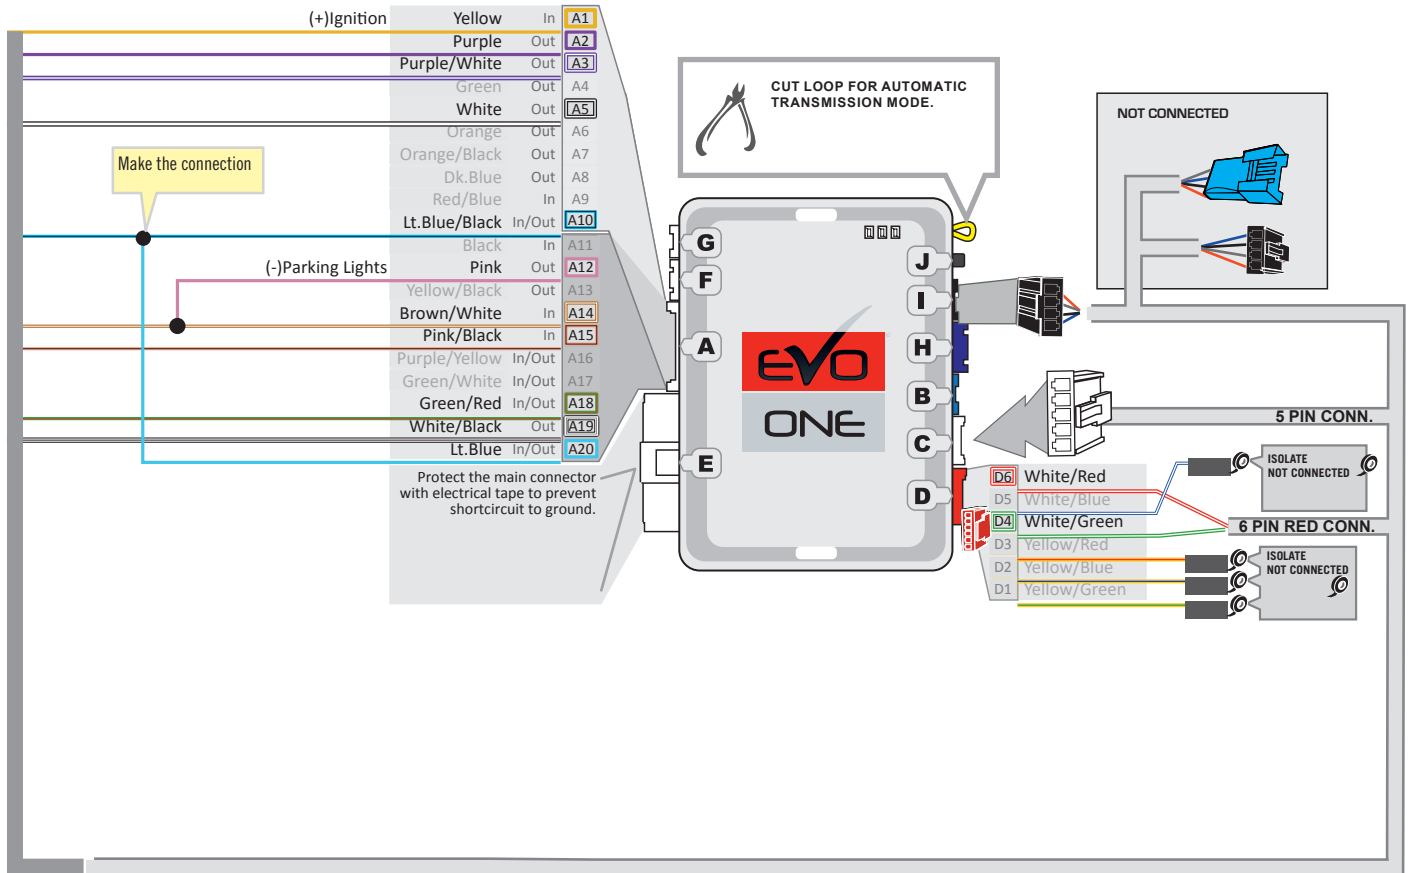

KEY BYPASS PROGRAMMING PROCEDURE

SIERRA SILVERADO

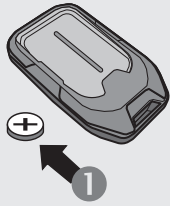


- 1 Remove the battery from the OEM remote.
- 2 Place the OEM remote in the middle part of the cup holder in the center console.


Refer to vehicle user guide for keyport location.

- 1 Remove the battery from the OEM remote.
- 2 Place the transmitter in the transmitter pocket, which is inside the centre console storage area.


Refer to vehicle user guide for keyport location.

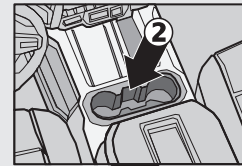

OR
OU

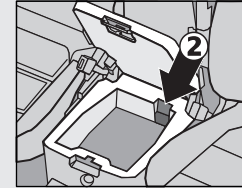


1

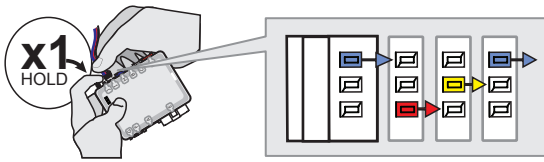

Press and hold the programming button: Connect the 4-PIN Data-link harness (Black connector).


↳The LEDs will alternate between BLUE, RED, YELLOW & BLUE/RED flashes.

2

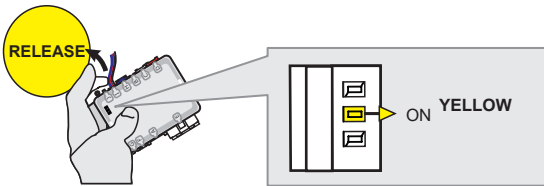


Release the programming button when the LED is YELLOW.

 If the YELLOW LED is not ON solid disconnect the 4-Pin DATA-LINK connector and go back to step 1.




3

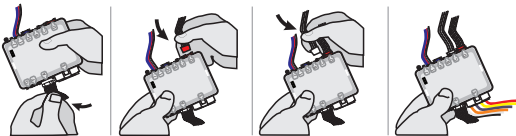

Insert the required remaining connectors.

4

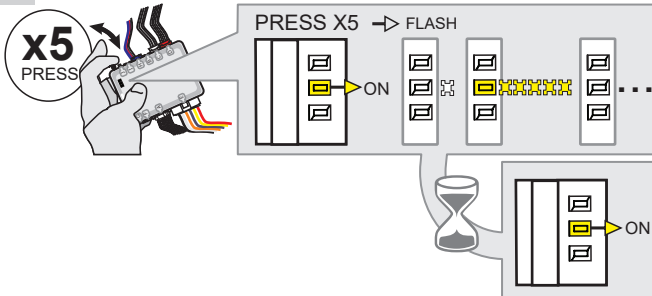


Press and release the programming button five (5x) times.

↳The YELLOW LED will flash 5 times each second.


↳WAIT for the YELLOW LED to turn ON solide.

 5



Open the driver door.

6

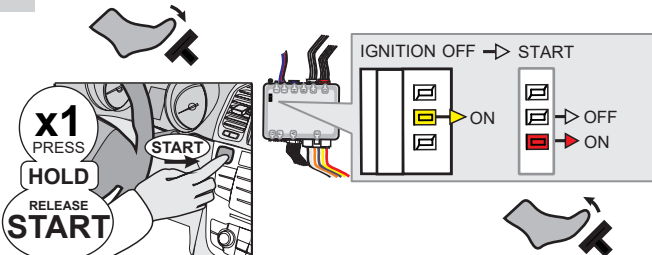

Press the foot-brake pedal.

Press the Push-to-Start button until the engine start.

Release the foot-brake pedal.

↳The RED LED will turn ON.
↳The YELLOW LED will turn OFF.


KEY BYPASS PROGRAMMING PROCEDURE 2/2 |

7




Press the Push-to-Start button until the engine turn OFF.

8

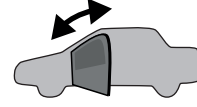

Close and open the driver door.

9

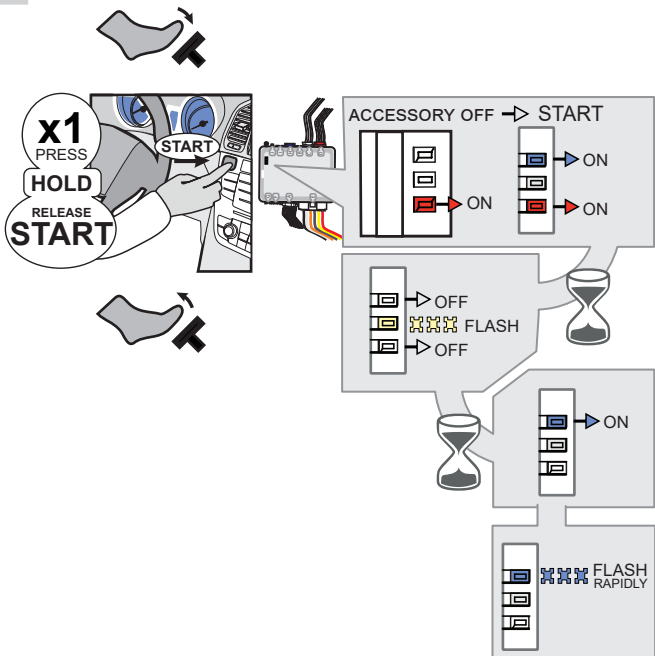


Press the foot-brake pedal.

Press the Push-to-Start button until the engine start.

Release the foot-brake pedal.

- ↳ The BLUE LED will turn ON.
- ↳ The BLUE LED will turn OFF. The RED LED will turn OFF.
- ↳ The YELLOW LED will flash rapidly
- ↳ The BLUE LED will turn ON.
- ↳ The BLUE LED will flash rapidly

10

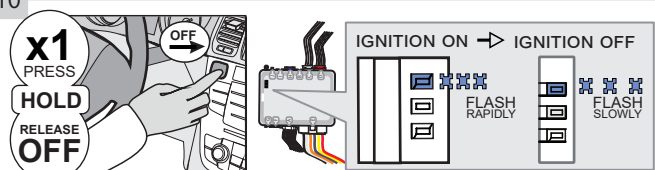

Press the Push-to-Start button until the engine turn OFF.


- ↳ The BLUE LED will flash slowly

11



Disconnect all connectors and after the 6-Pin (Main-Harness) or the 4-Pin Data-link connector.

12

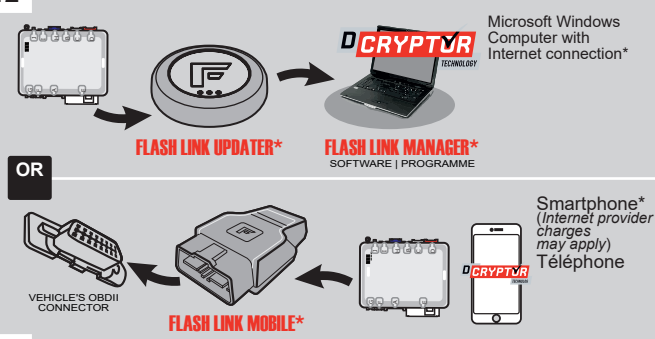


Microsoft Windows Computer with Internet connection*

Smartphone* (Internet provider charges may apply) Téléphone

Use the tool: FLASH LINK UPDATER* or FLASH LINK MOBILE* to visit the DCryptor menu.

*Parts required (not included)

13

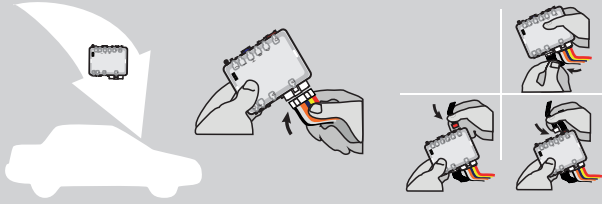

AFTER DCRYPTOR PROGRAMMING COMPLETED
Go back to the vehicle and **reconnect** the 6-Pin (Main-Harness) or the 4-pins (Data-Link) connector and after all the remaining connector.



The module is now programmed.




REMOTE STARTER / ALARM VERIFICATION PROCEDURE

Test the remote starter. Remote start the vehicle.

REMOTE STARTER PROGRAMMING PROCEDURE |



REFER TO THE **QUICK INSTALL GUIDE** INCLUDED WITH THE MODULE FOR THE REMOTE STARTER PROGRAMMING.

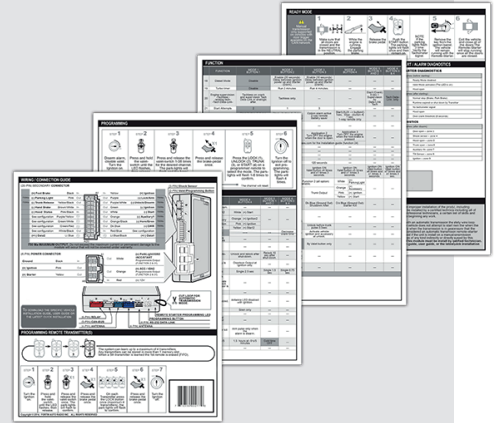

REMOTE STARTER FUNCTIONALITY |



 
All doors must be closed.



Remote start the vehicle.



Press the Unlock button of the remote car starter or the OEM remote.



Enter the vehicle with the Intelligent Access Key.




The vehicle can now be put in to gear and driven.




If the vehicle is not unlocked the module will shut down the remote-starter and the vehicle as soon as any door is opened.

**THAR-GM6 THARNESSE
INSTALLATION**

ADDENDUM - SUGGESTED WIRING CONFIGURATION

VEHICLE	YEARS	Vehicle functions supported in this diagram (functional if equipped)													
		Immobilizer bypass	Lock	Unlock	Arm	Disarm	RAP Disable	Tachometer	Heated Seats	Door Status	Hand-Brake Status	Foot-Brake Status	OEM Remote Monitoring		
															
CHEVROLET															
Silverado 1500	Push-To-Start	2019	•	•	•	•	•	•	•	•	•	•	•	•	•





BYPASS FIRMWARE VERSION

70.[41]

GM MINIMUM

To add the firmware version and the options, use the **FLASH LINK UPDATER** or **FLASH LINK MOBILE** tool, sold separately.

	Program bypass option IF THE VEHICLE IS NOT EQUIPPED WITH FUNCTIONAL HOOD PIN:	UNIT OPTION		DESCRIPTION
		A11	OFF	

	Program bypass option:	UNIT OPTION		DESCRIPTION
		C1		OEM Remote status (Lock/Unlock) monitoring
		D6		Push-to-Start




ATTENTION!



DATE: XX-XX

E5	OFF	By default DEACTIVATED
	ON	MANUFACTURED MODULES BETWEEN: 04/2018 TO 04/2019

 **Parts required (Not included): 1X THAR-GM6**

MANDATORY INSTALL

*** HOOD PIN**



HOOD STATUS: THE HOOD PIN SWITCH (INCLUDED) MUST BE INSTALLED IF THE VEHICLE CAN BE REMOTE STARTED WITH THE HOOD OPEN, SET FUNCTION **A11** TO OFF.

A11

OFF

SECURITY STICKER



Included





Notice: the installation of safety elements are mandatory. The hood pin and the sticker are essential security elements and must be installed.

THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.




DESCRIPTION

Program remote starter option for R.S. OEM REMOTE STAND ALONE:	38	2	Enable
			Press 3x Lock to remote start with the OEM remote.


BCM, Above Driver kick panel

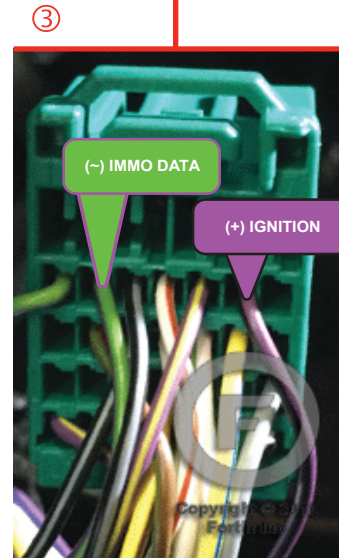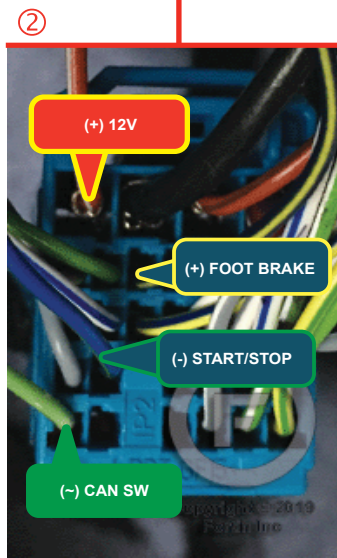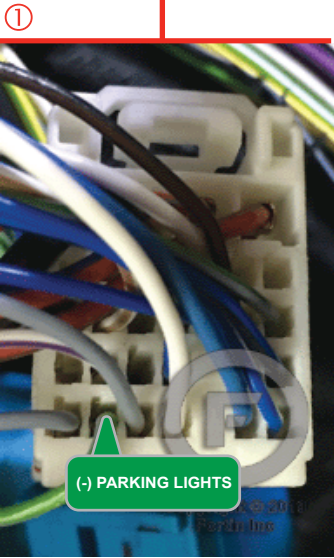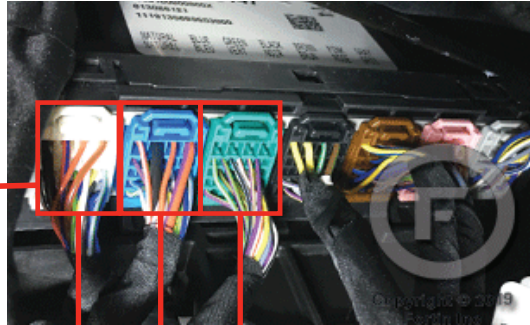

AUTOMATIC TRANSMISSION WIRING CONNECTION

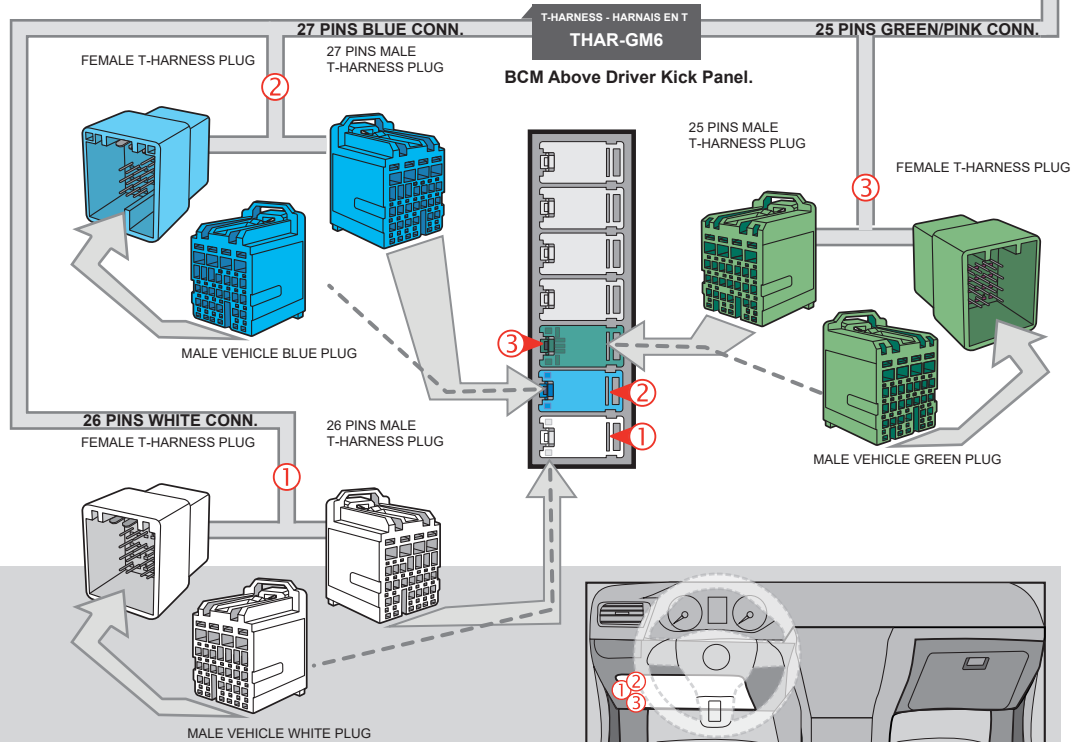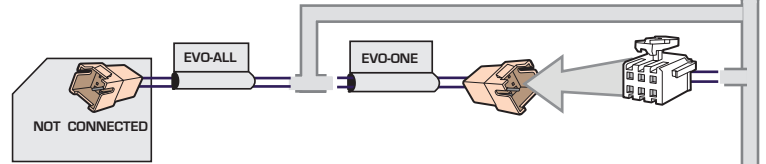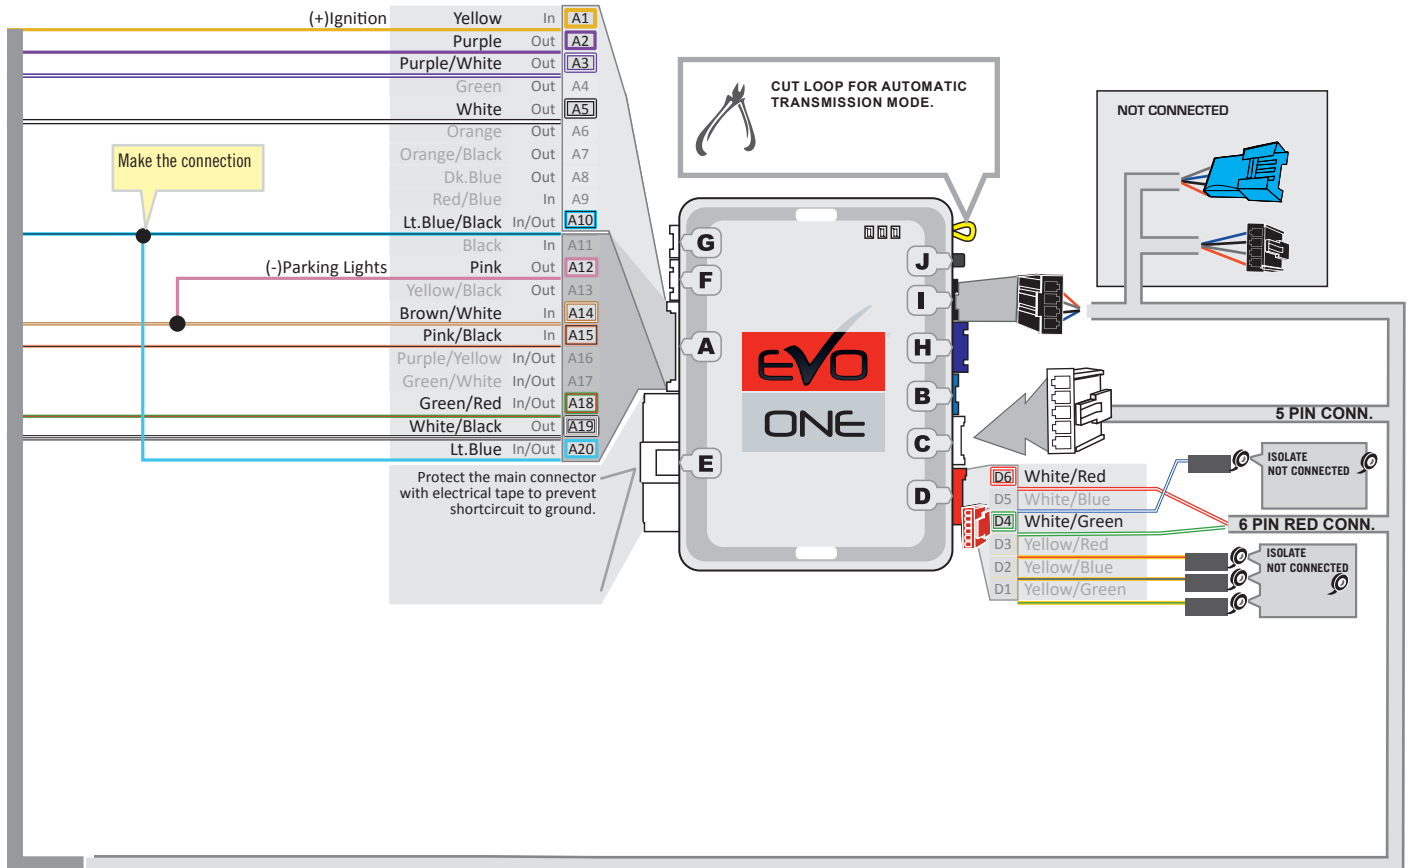


KEY BYPASS PROGRAMMING PROCEDURE 1/2

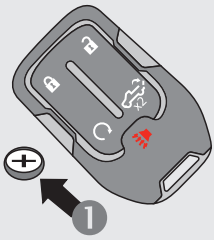


1 Remove the battery from the OEM remote.

2 Place the OEM remotes in to the center console.

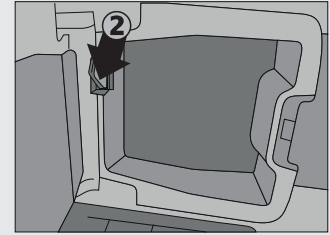


1

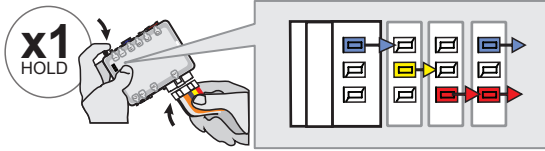

Press and hold the programming button:
Insert the 6-Pin Main connector.


↳The LEDs will alternate between BLUE, RED, YELLOW & BLUE/RED flashes.

2

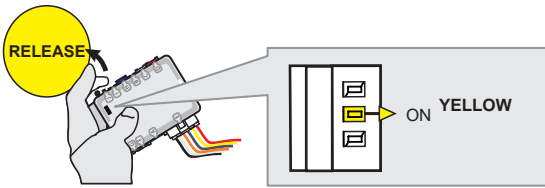


Release the programming button when the LED is YELLOW.

 If the LED is not solid YELLOW **disconnect** the 6-Pin connector (Main-Harness) and go back to step 1.




3

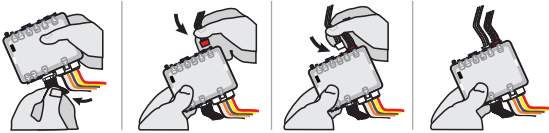

Insert the required remaining connectors.

4

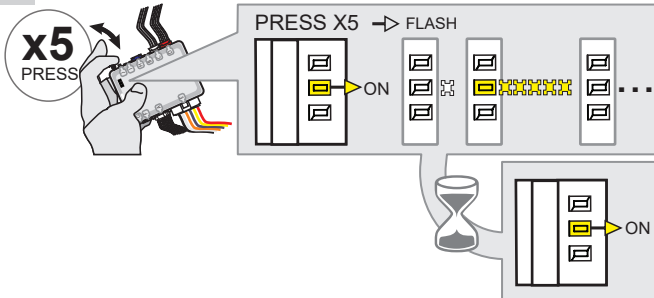


Press and release the programming button five (5x) times.

↳The YELLOW LED will flash 5 times each second.


↳WAIT for the YELLOW LED to turn ON solide.

 5



Open the driver door.

6

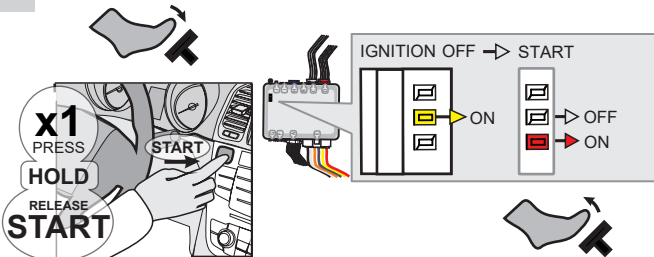

Press the foot-brake pedal.

Press the Push-to-Start button until the engine start.

Release the foot-brake pedal.

↳The RED LED will turn ON.
↳The YELLOW LED will turn OFF.


KEY BYPASS PROGRAMMING PROCEDURE 2/2

7




Press the Push-to-Start button until the engine turn OFF.

8

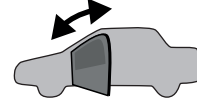

Close and open the driver door.

9

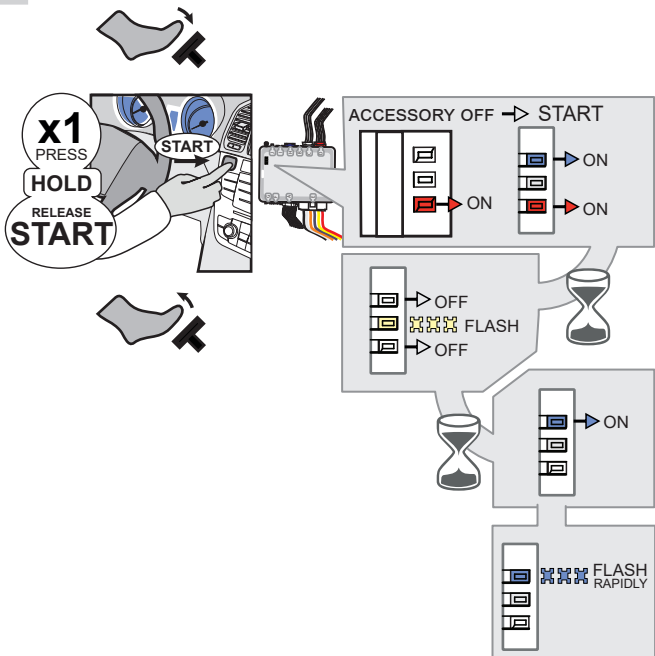


Press the foot-brake pedal.

Press the Push-to-Start button until the engine start.

Release the foot-brake pedal.

- ↳ The BLUE LED will turn ON.
- ↳ The BLUE LED will turn OFF. The RED LED will turn OFF.
- ↳ The YELLOW LED will flash rapidly
- ↳ The BLUE LED will turn ON.
- ↳ The BLUE LED will flash rapidly

10

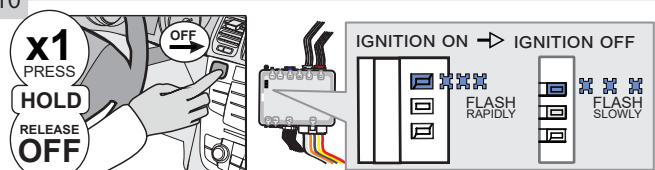

Press the Push-to-Start button until the engine turn OFF.


- ↳ The BLUE LED will flash slowly

11



Disconnect all connectors and after the 6-Pin (Main-Harness) or the 4-Pin Data-link connector.

12

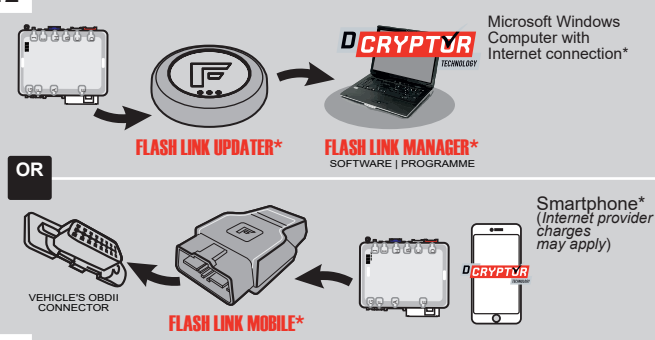

Microsoft Windows Computer with Internet connection*

FLASH LINK UPDATER* FLASH LINK MANAGER*
SOFTWARE | PROGRAMME

OR

Smartphone* (Internet provider charges may apply)


VEHICLE'S OBDII CONNECTOR FLASH LINK MOBILE*

Use the tool: FLASH LINK UPDATER or FLASH LINK MOBILE to visit the DCryptor menu.

*Parts required (not included)

KEY BYPASS PROGRAMMING PROCEDURE 3/3

13

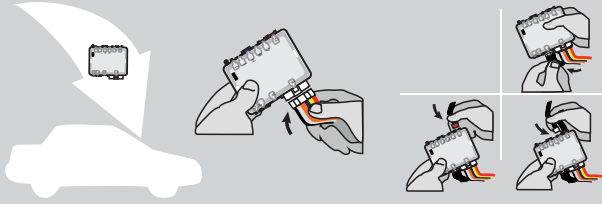

AFTER DCRYPTOR PROGRAMMING COMPLETED
 Go back to the vehicle and **reconnect** the 6-Pin (Main-Harness) or the 4-pins (Data-Link) connector and after all the remaining connector.



The module is now programmed.




REMOTE STARTER / ALARM VERIFICATION PROCEDURE

Test the remote starter. Remote start the vehicle.

REMOTE STARTER PROGRAMMING PROCEDURE



REFER TO THE **QUICK INSTALL GUIDE** INCLUDED WITH THE MODULE FOR THE REMOTE STARTER PROGRAMMING.

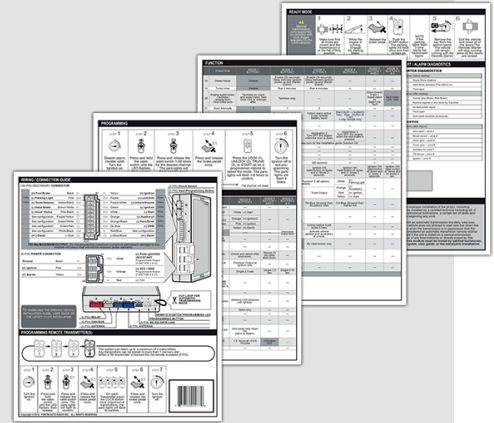

REMOTE STARTER FUNCTIONALITY |



All doors must be closed.

Toutes les

Remote start the vehicle.



Press the Unlock button of the remote car starter.



Enter the vehicle with the Intelligent Access Key.



The vehicle can now be put in to gear and driven.




If the vehicle is not unlocked the module will shut down the remote-starter and the vehicle as soon as any door is opened.

THAR-GM6 THARNESSE INSTALLATION

ADDENDUM - SUGGESTED WIRING CONFIGURATION

VEHICLE	YEARS	Vehicle functions supported in this diagram (functional if equipped)													
		Immobilizer bypass	Lock	Unlock	Arm	Disarm	Trunk (open)	RAP Disable	Tachometer	Heated Seats	Door Status	Trunk Status	Hand-Brake Status	Foot-Brake Status	OEM Remote Monitoring
CHEVROLET															
Sonic	Push-To-Start	2017-2018	•	•	•	•	•	•	•	•	•	•	•	•	•
Spark	Push-To-Start	2016-2021	•	•	•	•	•	•	•	•	•	•	•	•	•



BYPASS FIRMWARE VERSION

70.[45]

MINIMUM

To add the firmware version and the options, use the **FLASH LINK UPDATER** or **FLASH LINK MOBILE** tool, sold separately.

	UNIT OPTION	DESCRIPTION
 <p>Program bypass option:</p>	C1	OEM Remote status (Lock/Unlock) monitoring

IF THE VEHICLE IS NOT EQUIPPED WITH FUNCTIONAL HOOD PIN:	A11	OFF	Hood trigger (Output Status).
---	------------	------------	-------------------------------

	D6	Push-to-Start
--	-----------	---------------



ATTENTION!



DATE: XX-XX

E5

OFF

ON


By default DEACTIVATED

MANUFACTURED MODULES BETWEEN: 04/2018 TO 04/2019

 **Parts required (Not included): 1X THAR-GM6**

MANDATORY INSTALL

*** HOOD PIN**



HOOD STATUS: THE HOOD PIN SWITCH (INCLUDED) MUST BE INSTALLED IF THE VEHICLE CAN BE REMOTE STARTED WITH THE HOOD OPEN, SET FUNCTION **A11** TO OFF.

SECURITY STICKER



Included

Notice: the installation of safety elements are mandatory. The hood pin and the sticker are essential security elements and must be installed.

THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.

DESCRIPTION



Program remote starter option for R.S.
OEM REMOTE STAND ALONE:

38




2

Enable
Press 3x Lock to remote start with the OEM remote.

BCM

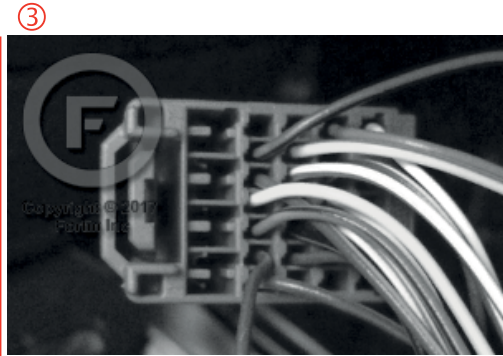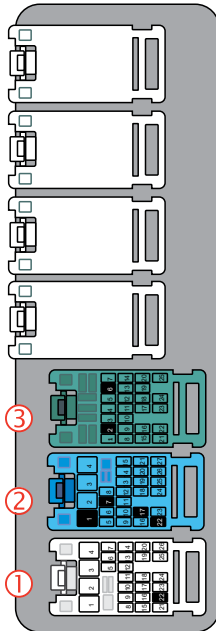

AUTOMATIC TRANSMISSION WIRING CONNECTION

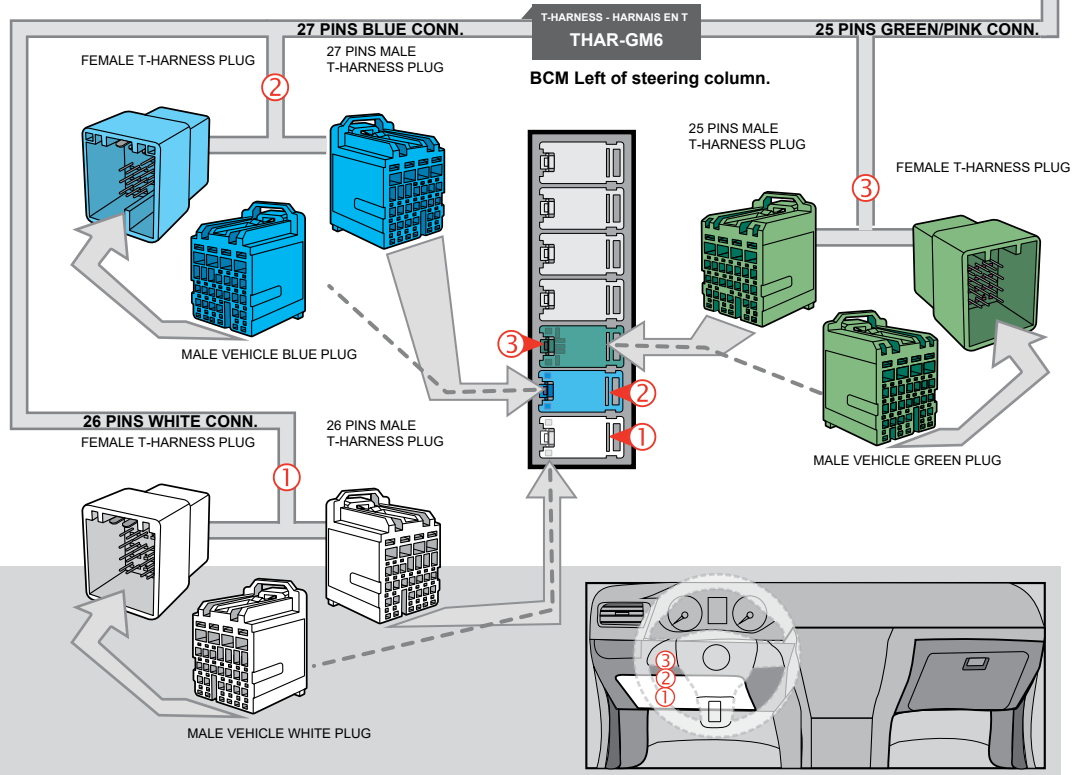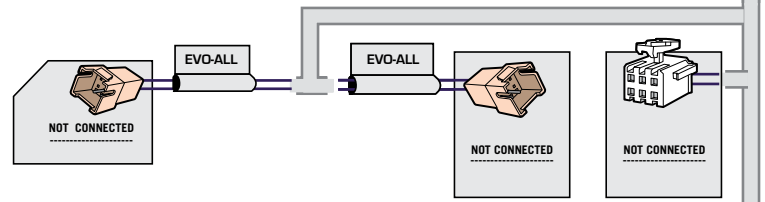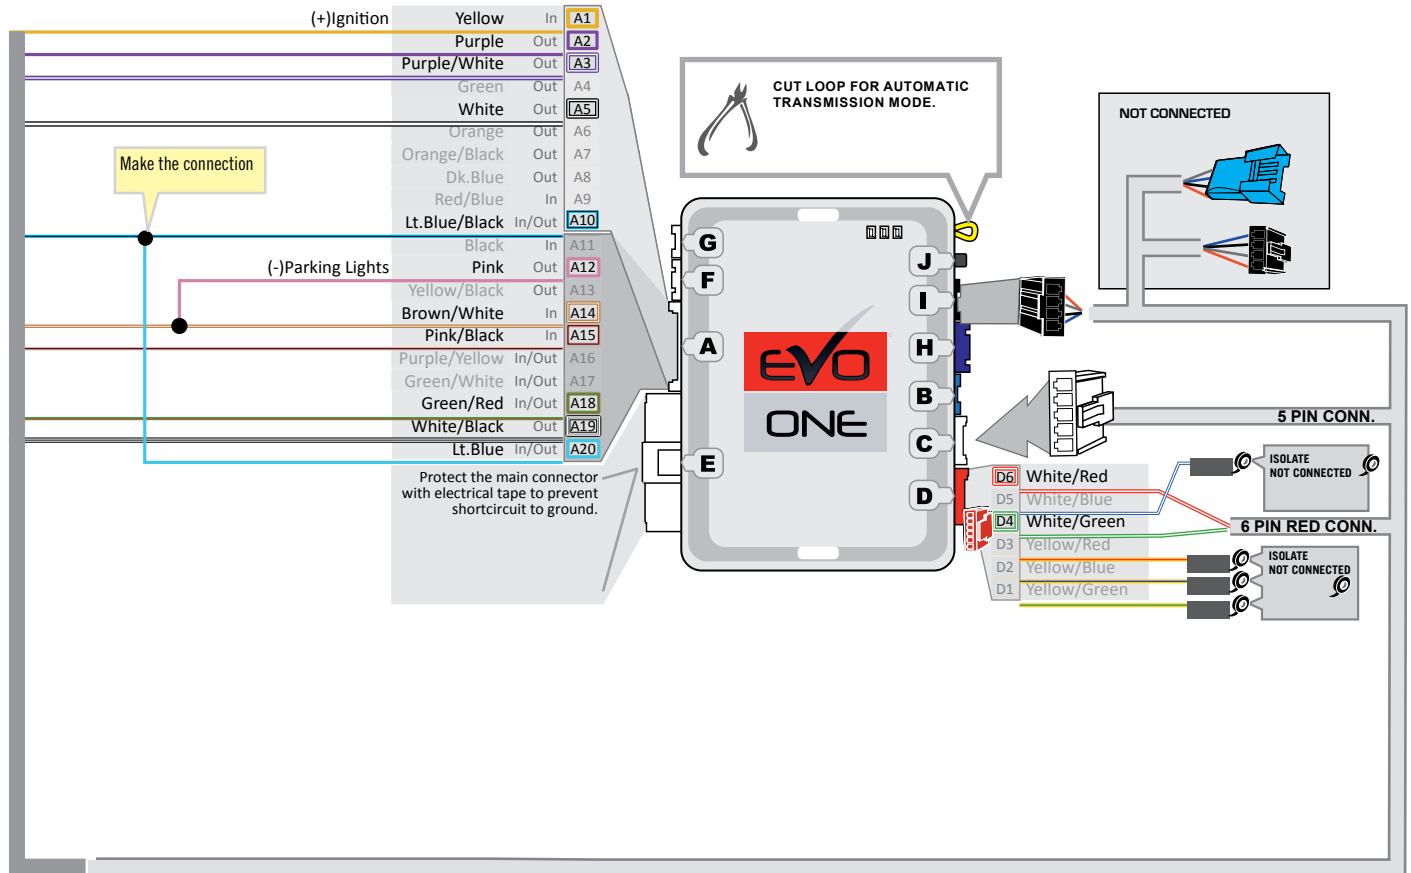


KEY BYPASS PROGRAMMING PROCEDURE 2/2 |

7




Press the Push-to-Start button until the engine turn OFF.

8

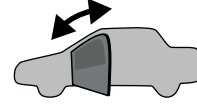

Close and open the driver door.

9

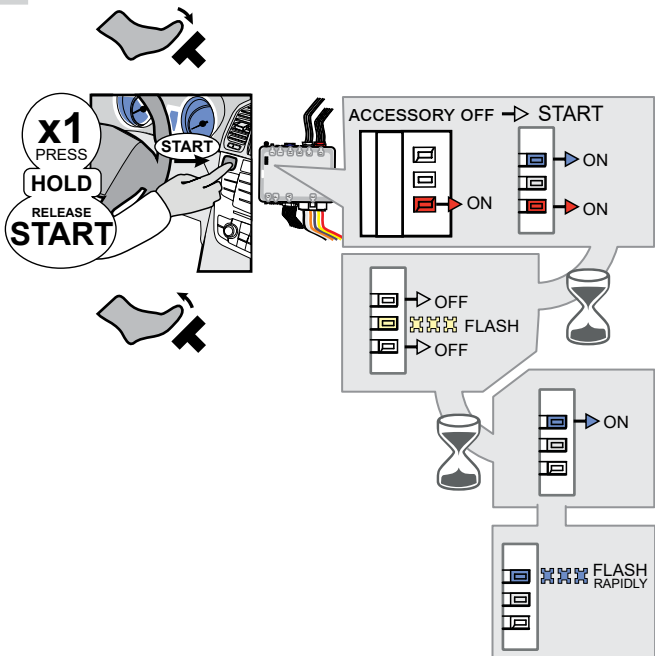


Press the foot-brake pedal.

Press the Push-to-Start button until the engine start.

Release the foot-brake pedal.

- ↳ The BLUE LED will turn ON.
- ↳ The BLUE LED will turn OFF. The RED LED will turn OFF.
- ↳ The YELLOW LED will flash rapidly
- ↳ The BLUE LED will turn ON.
- ↳ The BLUE LED will flash rapidly

10

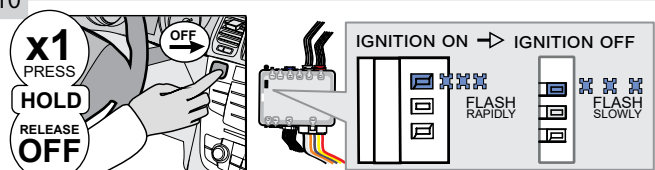

Press the Push-to-Start button until the engine turn OFF.


- ↳ The BLUE LED will flash slowly

11



Disconnect all connectors and after the 6-Pin (Main-Harness) or the 4-Pin Data-link connector.

12

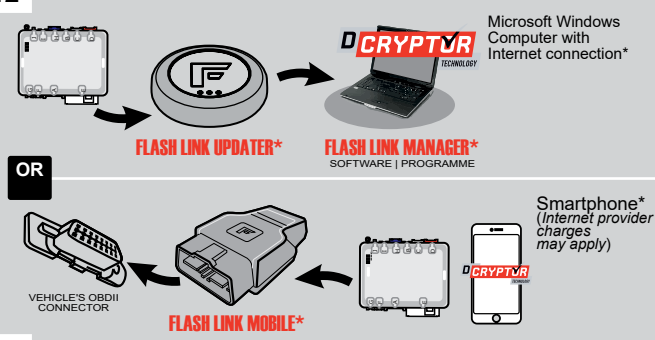

Microsoft Windows Computer with Internet connection*

FLASH LINK UPDATER* FLASH LINK MANAGER*
SOFTWARE | PROGRAMME

OR


Smartphone* (Internet provider charges may apply)

VEHICLE'S OBDII CONNECTOR FLASH LINK MOBILE*

Use the tool: FLASH LINK UPDATER or FLASH LINK MOBILE to visit the DCryptor menu.

*Parts required (not included)

13

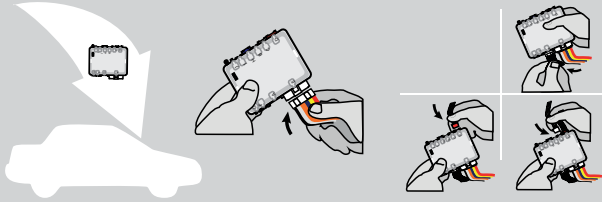

AFTER DCRYPTOR PROGRAMMING COMPLETED
Go back to the vehicle and **reconnect** the 6-Pin (Main-Harness) or the 4-pins (Data-Link) connector and after all the remaining connector.

ou le 4-pins (Data-Link) et après tous les connecteurs.



The module is now programmed.




REMOTE STARTER / ALARM VERIFICATION PROCEDURE

Test the remote starter. Remote start the vehicle.

REMOTE STARTER PROGRAMMING PROCEDURE |



REFER TO THE **QUICK INSTALL GUIDE** INCLUDED WITH THE MODULE FOR THE REMOTE STARTER PROGRAMMING.

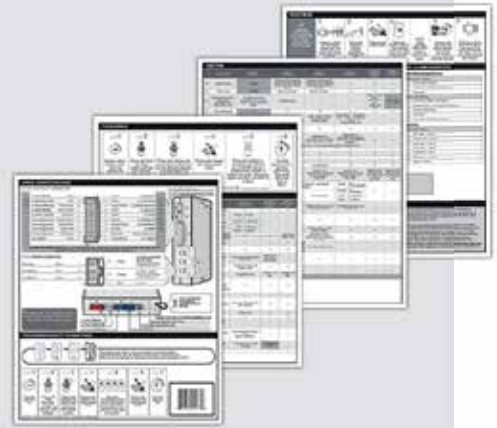

REMOTE STARTER FUNCTIONALITY | FONCTIONNALITÉS DU DÉMARREUR À DISTANCE



 
All doors must be closed.



Remote start the vehicle.



Press the Unlock button of the remote car starter or the OEM remote.



Enter the vehicle with the Intelligent Access Key.




The vehicle can now be put in to gear and driven.




If the vehicle is not unlocked the module will shut down the remote-starter and the vehicle as soon as any door is opened.

THAR-GM6 THARNESSE INSTALLATION

ADDENDUM - SUGGESTED WIRING CONFIGURATION

VEHICLE	YEARS	Vehicle functions supported in this diagram (functional if equipped)														
		Immobilizer-bypass	T-Harness	Lock	Unlock	Arm	Disarm	Trunk (open)	RAP Disable	Tachometer	Heated Seats	Door Status	Trunk Status	Hand-Brake Status	Foot-Brake Status	OEM Remote Monitoring
																
CHEVROLET																
Volt	Push-To-Start	2016-2019	•	•	•	•	•	•	•	•	•	•	•	•	•	•



BYPASS FIRMWARE VERSION

70.[41]

GM MINIMUM

To add the firmware version and the options, use the **FLASH LINK UPDATER** or **FLASH LINK MOBILE** tool, sold separately.

Program remote starter option for R.S. OEM REMOTE STAND ALONE:

38

2


Enable
Press 3x Lock to remote start with the OEM remote.

IF THE VEHICLE IS NOT EQUIPPED WITH FUNCTIONAL HOOD PIN:

A11

OFF

Hood trigger (Output Status).

	Program bypass option:	UNIT OPTION	DESCRIPTION
		C1	OEM Remote status (Lock/Unlock) monitoring
	Vehicle hybrid only	D4	Hybrid mode (Vehicle hybrid only)
		D6	Push-to-Start

ATTENTION!



DATE: XX-XX

E5

OFF

By default DEACTIVATED

MANUFACTURED MODULES BETWEEN: 04/2018 TO 04/2019




Parts required (Not included)

1X THAR-GM6

MANDATORY INSTALL

*** HOOD PIN**




HOOD STATUS: THE HOOD PIN SWITCH (INCLUDED) MUST BE INSTALLED IF THE VEHICLE CAN BE REMOTE STARTED WITH THE HOOD OPEN, SET FUNCTION **A11** TO OFF.

A11

OFF

SECURITY STICKER




Included


Notice: the installation of safety elements are mandatory. The hood pin and the sticker are essential security elements and must be installed.

THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.




DESCRIPTION

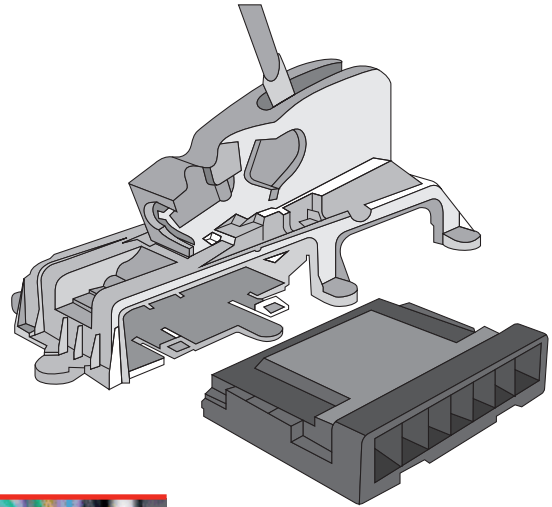

BCM

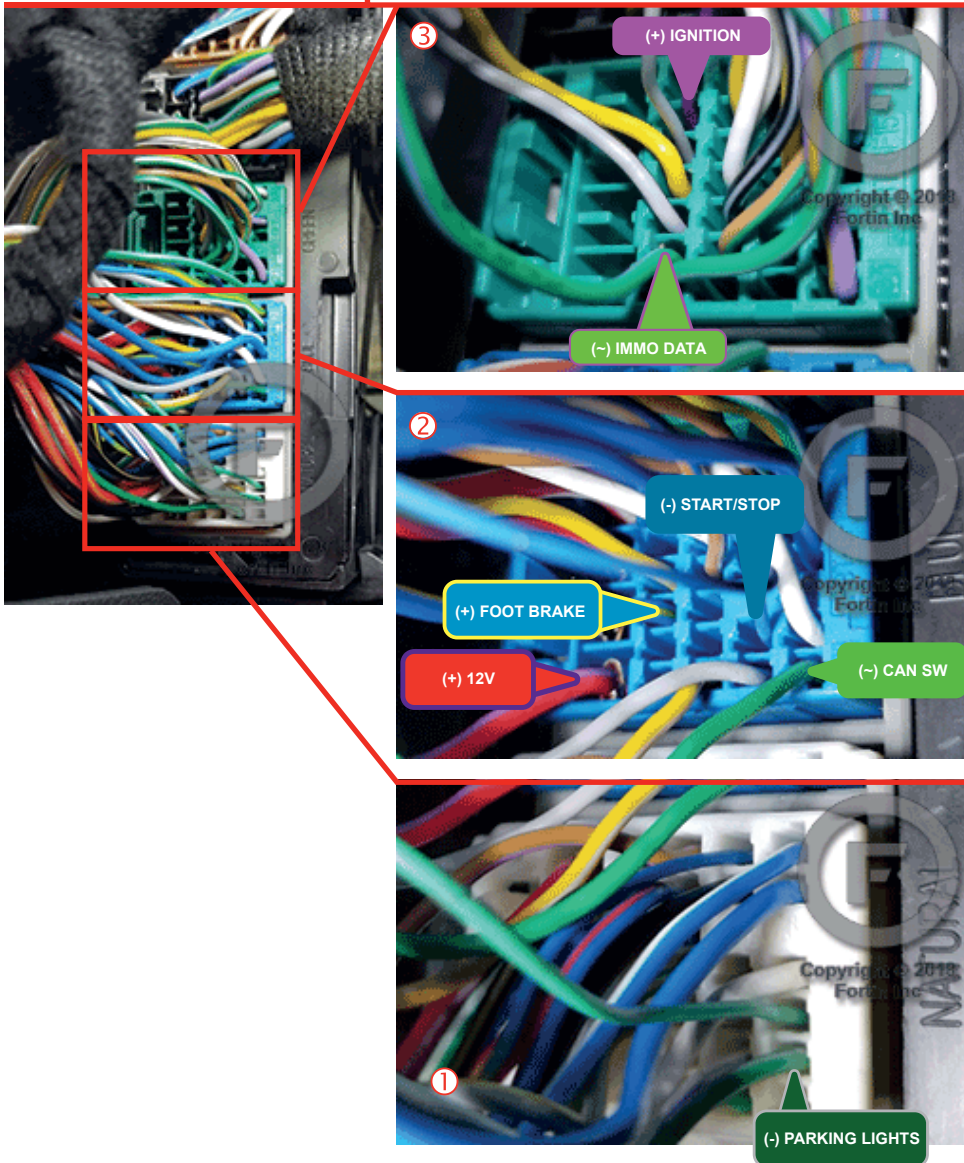


AUTOMATIC TRANSMISSION WIRING CONNECTION

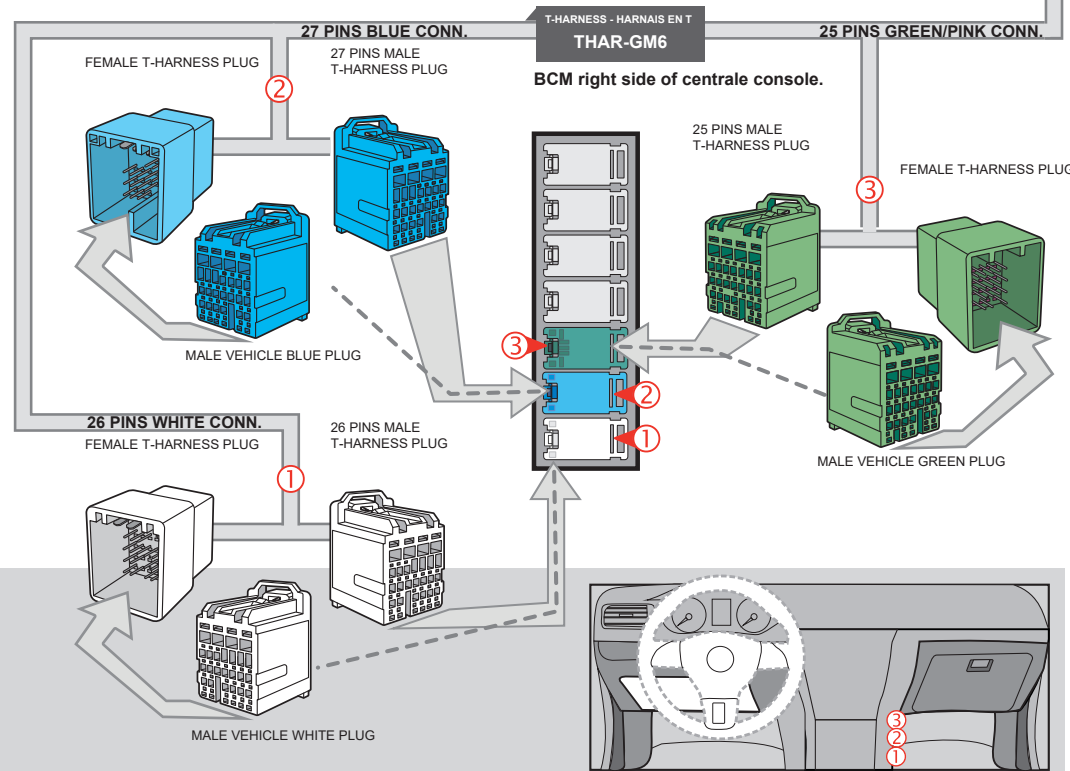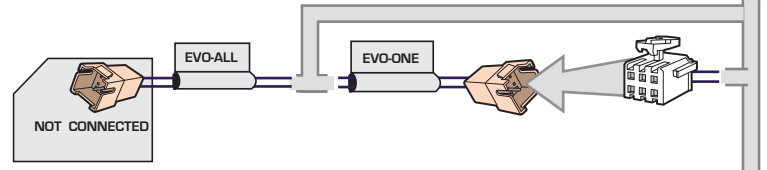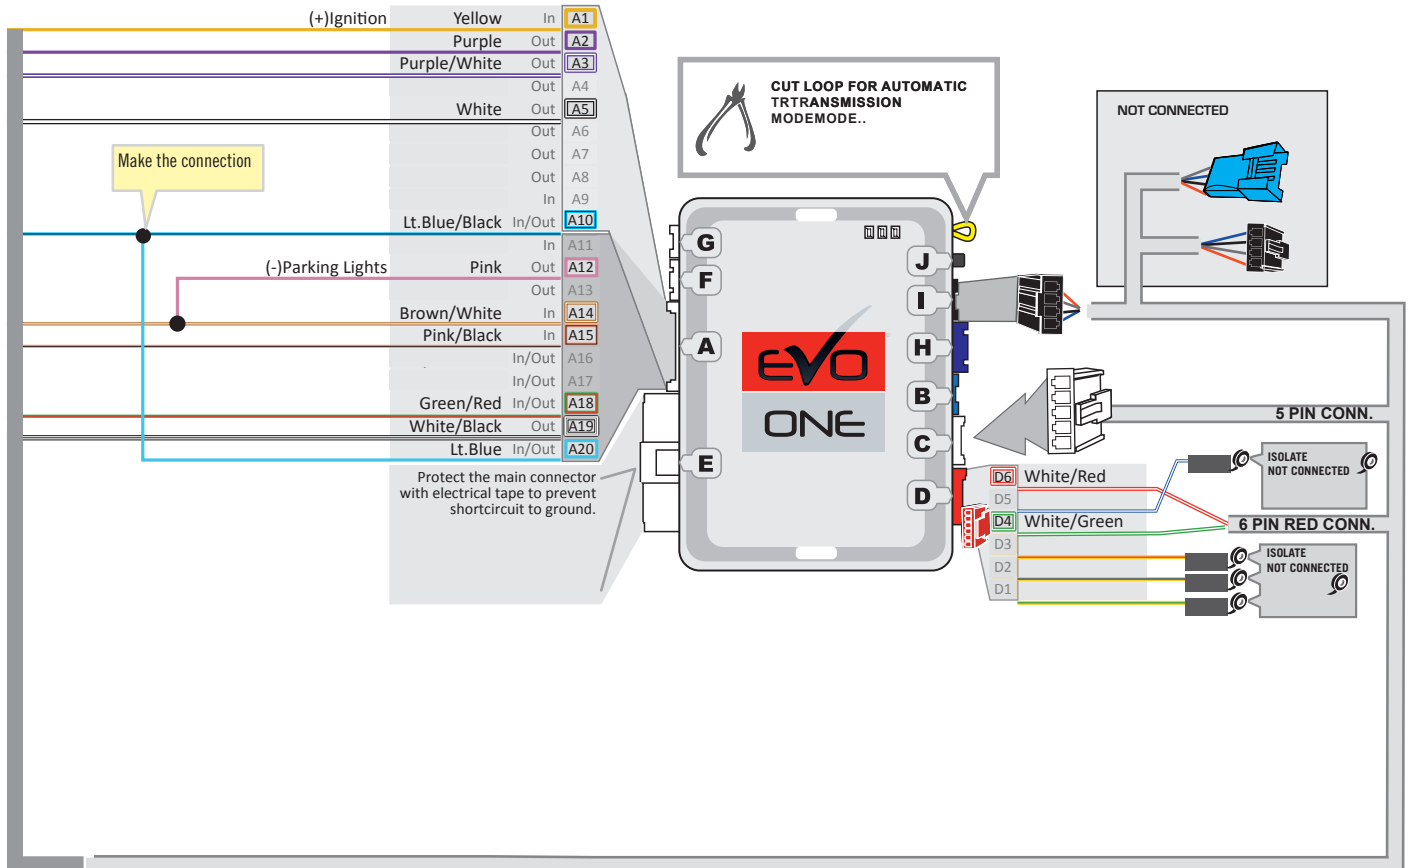


KEY BYPASS PROGRAMMING PROCEDURE 1/2



- 1 Remove the battery from the OEM remote.
- 2 Place the OEM remote into the center console.
Refer to vehicle user guide for keyport location.

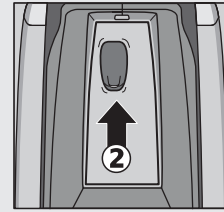


1

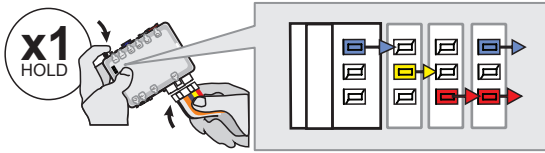

Press and hold the programming button:
Insert the 6-Pin Main connector.


↳The LEDs will alternate between BLUE, RED, YELLOW & BLUE/RED flashes.

2

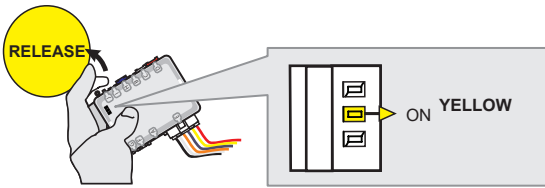


Release the programming button when the LED is YELLOW.

 If the LED is not solid YELLOW **disconnect** the 6-Pin connector (Main-Harness) and go back to step 1.




3

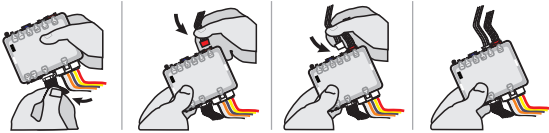

Insert the required remaining connectors.

4

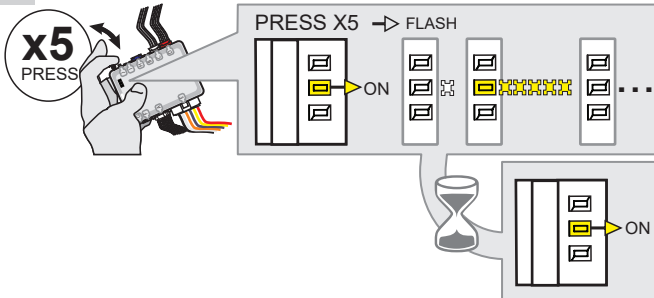


Press and release the programming button five (5x) times.

↳The YELLOW LED will flash 5 times each second.


↳WAIT for the YELLOW LED to turn ON solide.

 5



Open the driver door.

6

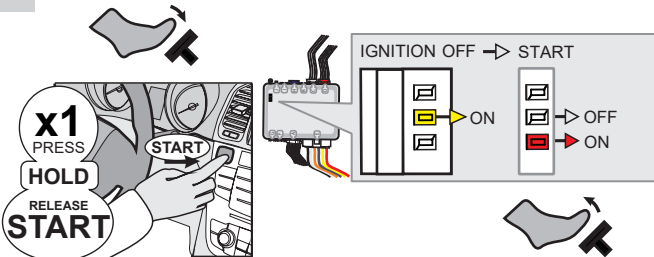

Press the foot-brake pedal.

Press the Push-to-Start button until the engine start.

Release the foot-brake pedal.

↳The RED LED will turn ON.
↳The YELLOW LED will turn OFF.


KEY BYPASS PROGRAMMING PROCEDURE 2/2 |

7




Press the Push-to-Start button until the engine turn OFF.

8

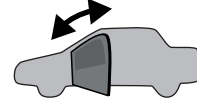

Close and open the driver door.

9

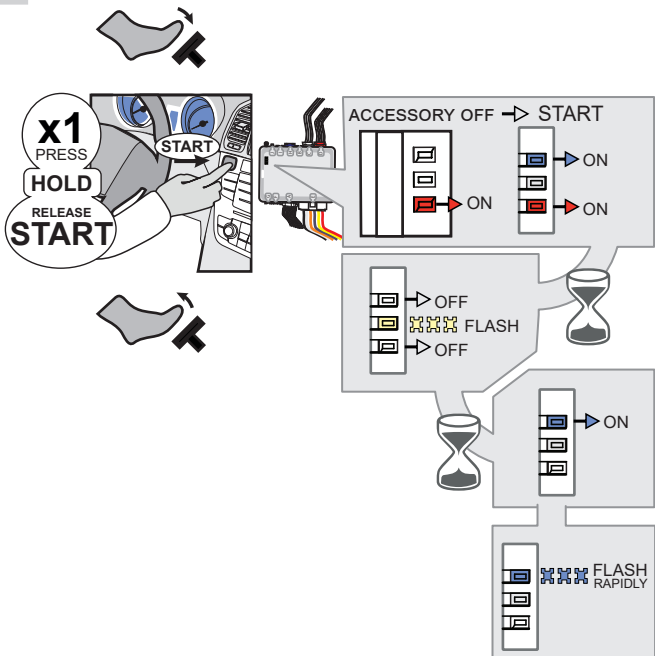


Press the foot-brake pedal.

Press the Push-to-Start button until the engine start.

Release the foot-brake pedal.

- ↳ The BLUE LED will turn ON.
- ↳ The BLUE LED will turn OFF. The RED LED will turn OFF.
- ↳ The YELLOW LED will flash rapidly
- ↳ The BLUE LED will turn ON.
- ↳ The BLUE LED will flash rapidly

10

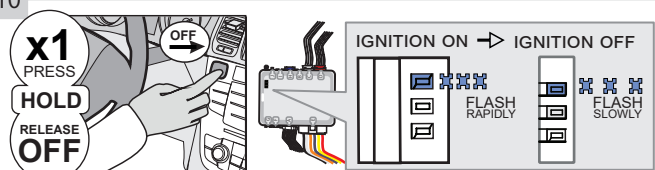

Press the Push-to-Start button until the engine turn OFF.


- ↳ The BLUE LED will flash slowly

11



Disconnect all connectors and after the 6-Pin (Main-Harness) or the 4-Pin Data-link connector.

12

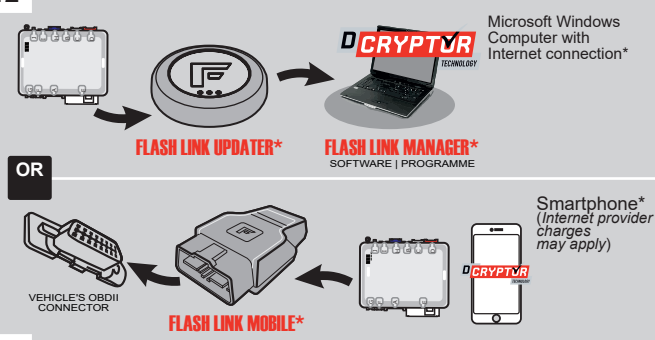

Microsoft Windows Computer with Internet connection*

FLASH LINK UPDATER* FLASH LINK MANAGER*
SOFTWARE | PROGRAMME

OR


Smartphone* (Internet provider charges may apply)

VEHICLE'S OBDII CONNECTOR FLASH LINK MOBILE*

Use the tool: FLASH LINK UPDATER or FLASH LINK MOBILE to visit the DCryptor menu.

*Parts required (not included)

13

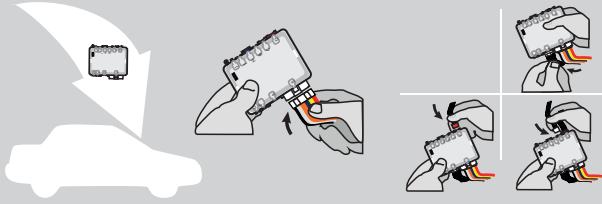

AFTER DCRYPTOR PROGRAMMING COMPLETED
 Go back to the vehicle and **reconnect** the 6-Pin (Main-Harness) or the 4-pins (Data-Link) connector and after all the remaining connector.



The module is now programmed.




REMOTE STARTER / ALARM VERIFICATION PROCEDURE

Test the remote starter. Remote start the vehicle.

REMOTE STARTER PROGRAMMING PROCEDURE |



REFER TO THE **QUICK INSTALL GUIDE** INCLUDED WITH THE MODULE FOR THE REMOTE STARTER PROGRAMMING.

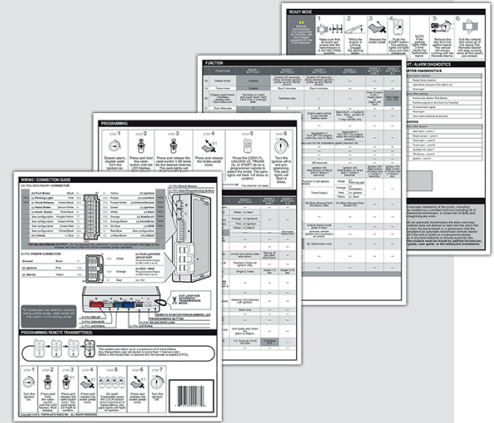

REMOTE STARTER FUNCTIONALITY |



All doors must be closed.



Remote start the vehicle.



Press the Unlock button of the remote car starter or the OEM remote.



Enter the vehicle with the Intelligent Access Key.




The vehicle can now be put in to gear and driven.




If the vehicle is not unlocked the module will shut down the remote-starter and the vehicle as soon as any door is opened.

THAR-GM6 THARNSS INSTALLATION

ADDENDUM - SUGGESTED WIRING CONFIGURATION

VEHICLE	YEARS	Vehicle functions supported in this diagram (functional if equipped)														
		Immobilizer bypass	Lock	Unlock	Arm	Disarm	Trunk (open)	RAP Disable	Tachometer	Heated Seats	Door Status	Trunk Status	Hand-Brake Status	Foot-Brake Status	OEM Remote Monitoring	
																
CADILLAC																
Escalade	Push-To-Start	2020-2021	•	•	•	•	•	•	•	•	•	•	•	•	•	•
XT4	Push-To-Start	2019-2021	•	•	•	•	•	•	•	•	•	•	•	•	•	•
XT5	Push-To-Start	2017-2021	•	•	•	•	•	•	•	•	•	•	•	•	•	•
XT6	Push-To-Start	2020-2021	•	•	•	•	•	•	•	•	•	•	•	•	•	•





BYPASS FIRMWARE VERSION

70.[45]


MINIMUM

To add the firmware version and the options, use the **FLASH LINK UPDATER** or **FLASH LINK MOBILE** tool, sold separately.

	UNIT OPTION	DESCRIPTION
	C1	OEM Remote status (Lock/Unlock) monitoring
IF THE VEHICLE IS NOT EQUIPPED WITH FUNCTIONAL HOOD PIN:	A11	OFF
		Hood trigger (Output Status).
	D6	Push-to-Start




ATTENTION!

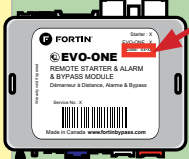

DATE: XX-XX

E5	OFF	By default DEACTIVATED
	ON	MANUFACTURED MODULES BETWEEN: 04/2018 TO 04/2019

 **Parts required (Not included):** 1X THAR-GM6

MANDATORY INSTALL

*** HOOD PIN**



HOOD STATUS: THE HOOD PIN SWITCH (INCLUDED) MUST BE INSTALLED IF THE VEHICLE CAN BE REMOTE STARTED WITH THE HOOD OPEN, SET FUNCTION **A11** TO OFF.

A11	OFF
------------	------------

SECURITY STICKER



Included



Notice: the installation of safety elements are mandatory. The hood pin and the sticker are essential security elements and must be installed.

THIS MODULE MUST BE INSTALLED BY A QUALIFIED TECHNICIAN. A WRONG CONNECTION CAN CAUSE PERMANENT DAMAGE TO THE VEHICLE.



DESCRIPTION

Program remote starter option for R.S. OEM REMOTE STAND ALONE:	38	2	Enable
			Press 3x Lock to remote start with the OEM remote.


BCM located on passenger side center console

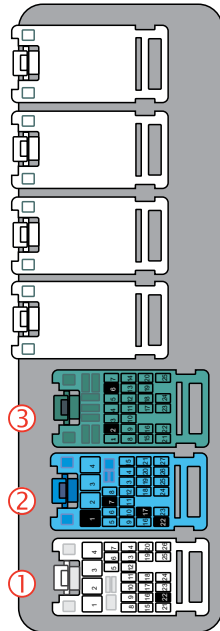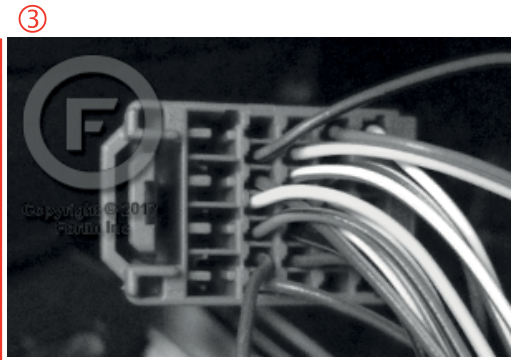


AUTOMATIC TRANSMISSION WIRING CONNECTION

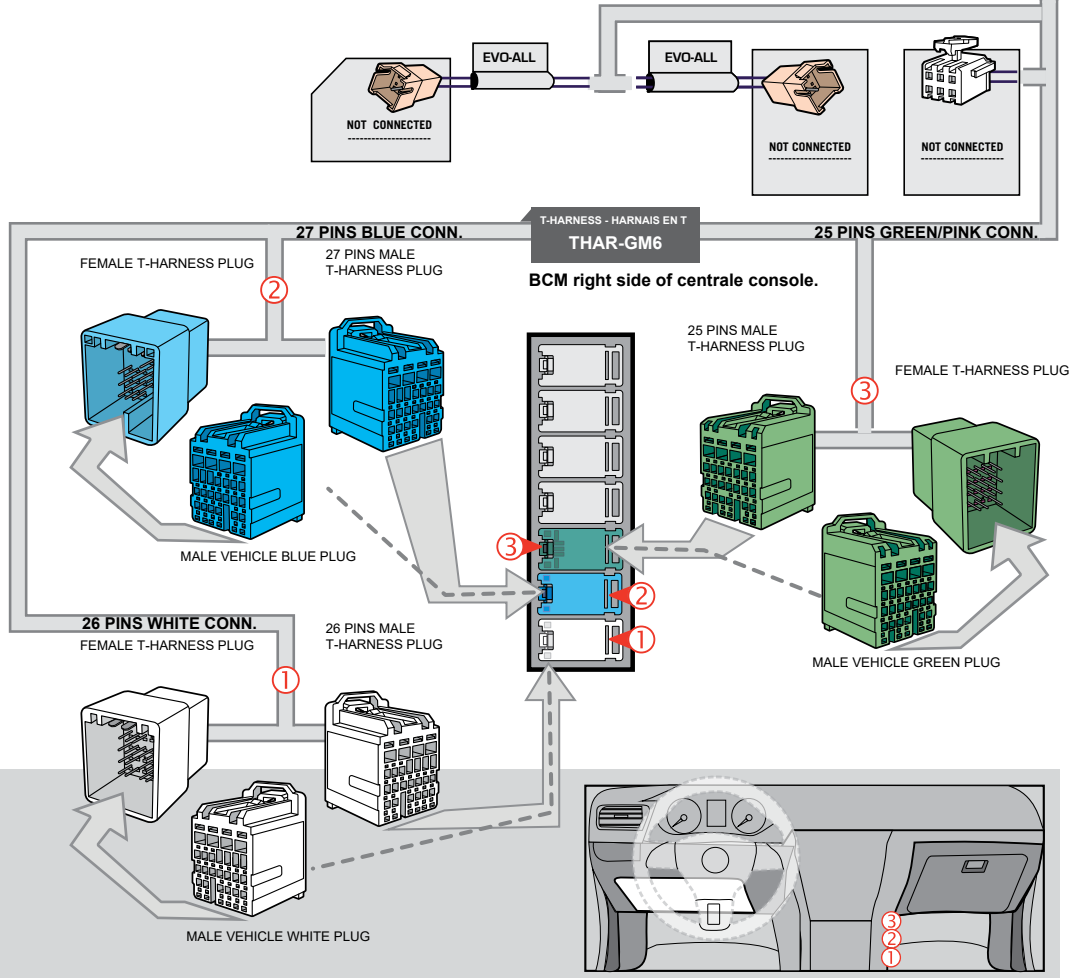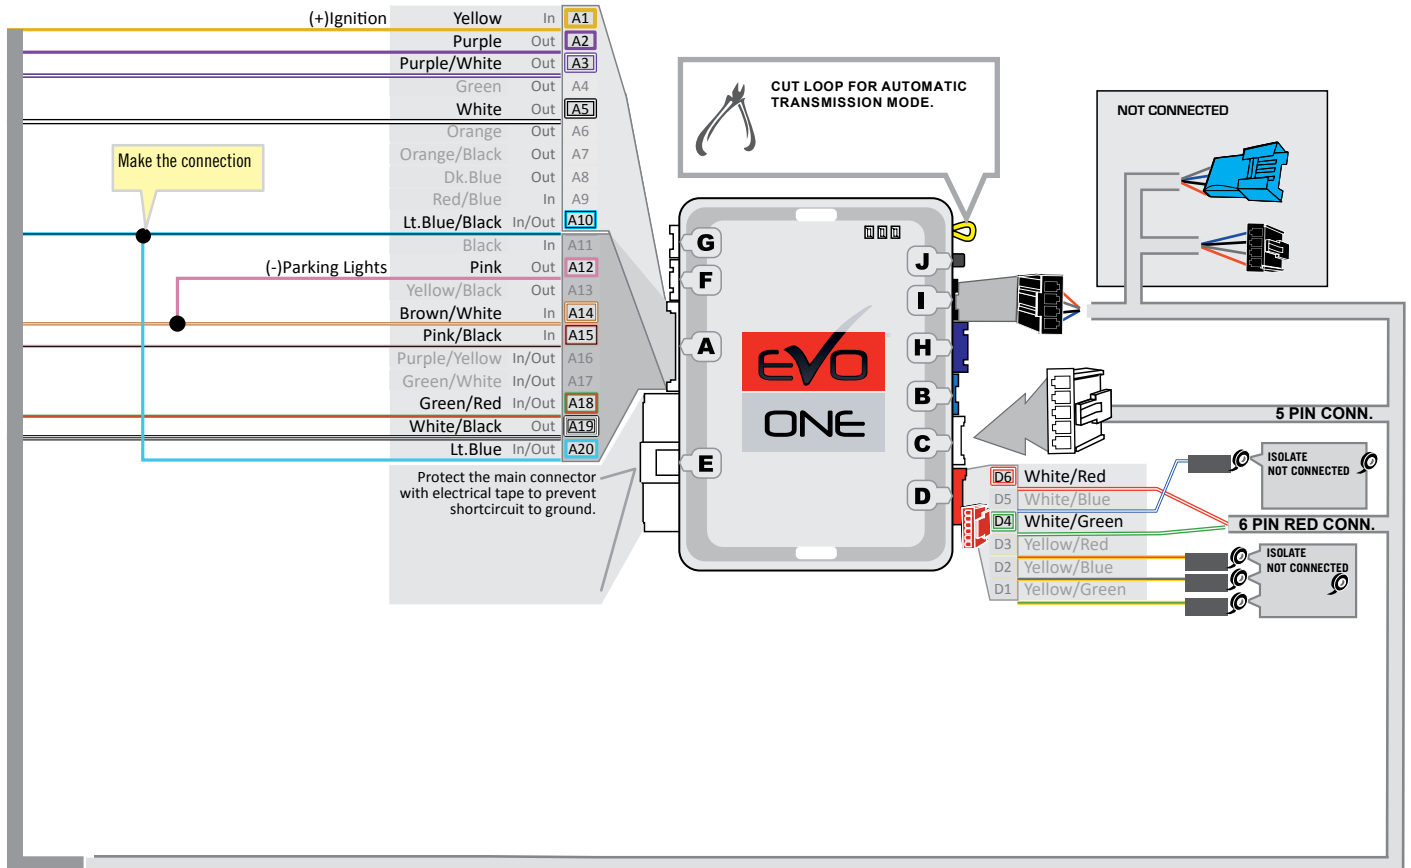


KEY BYPASS PROGRAMMING PROCEDURE

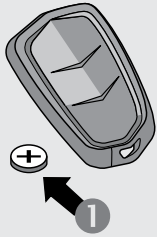

- 1 Remove the battery from the OEM remote.
- 2 Place the OEM remote into the transmitter pocket of the center console.
Refer to vehicle user guide for keyport location.

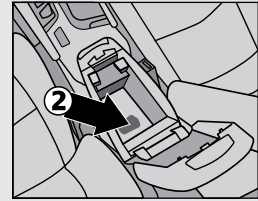


1

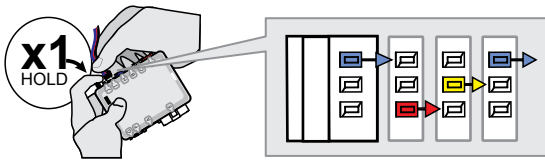

Press and hold the programming button:
Connect the 4-PIN Data-link harness (Black connector).


↳The LEDs will alternate between BLUE, RED, YELLOW & BLUE/RED flashes.

2

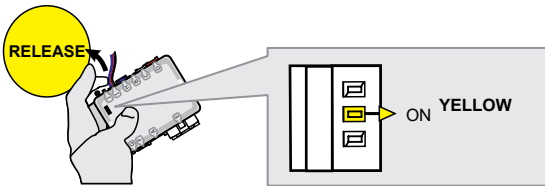


Release the programming button when the LED is YELLOW.

 If the YELLOW LED is not ON solid disconnect the 4-Pin DATA-LINK connector and go back to step 1.




3

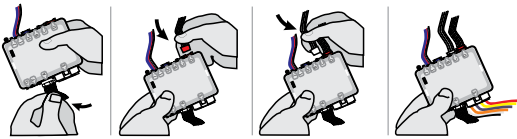

Insert the required remaining connectors.

4

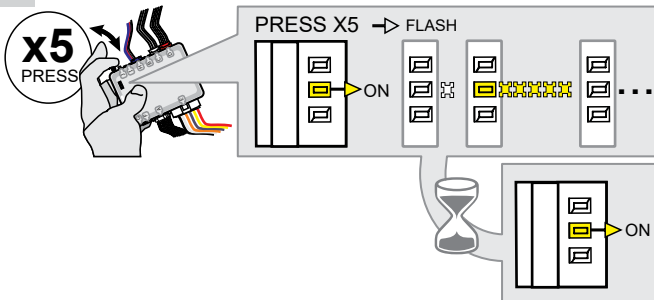


Press and release the programming button five (5x) times.

↳The YELLOW LED will flash 5 times each second.


↳**WAIT** for the YELLOW LED to turn ON solid.

 5



Open the driver door.

6

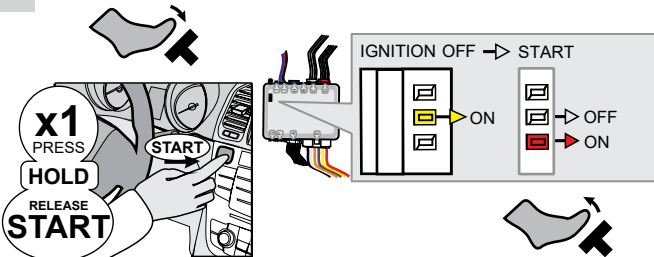

Press the foot-brake pedal.

Press the Push-to-Start button until the engine start.

Release the foot-brake pedal.

↳The RED LED will turn ON.
↳The YELLOW LED will turn OFF.


KEY BYPASS PROGRAMMING PROCEDURE 2/2 |

7




Press the Push-to-Start button until the engine turn OFF.

8

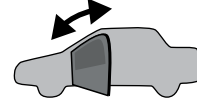

Close and open the driver door.

9

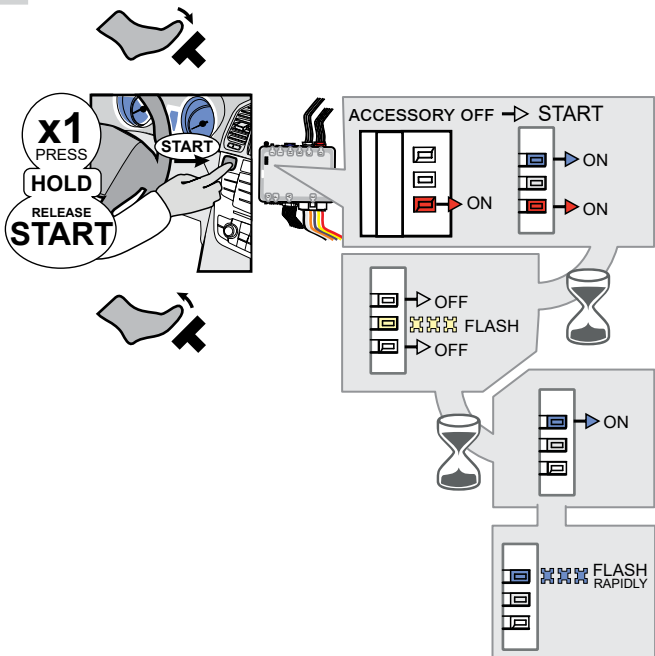


Press the foot-brake pedal.

Press the Push-to-Start button until the engine start.

Release the foot-brake pedal.

- ↳ The BLUE LED will turn ON.
- ↳ The BLUE LED will turn OFF. The RED LED will turn OFF.
- ↳ The YELLOW LED will flash rapidly
- ↳ The BLUE LED will turn ON.
- ↳ The BLUE LED will flash rapidly

10

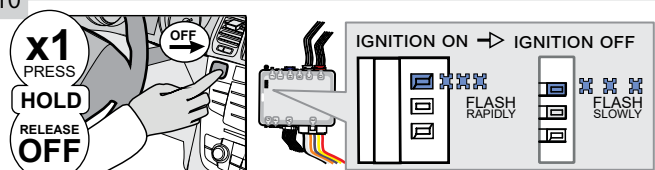

Press the Push-to-Start button until the engine turn OFF.


- ↳ The BLUE LED will flash slowly

11



Disconnect all connectors and after the 6-Pin (Main-Harness) or the 4-Pin Data-link connector.

12

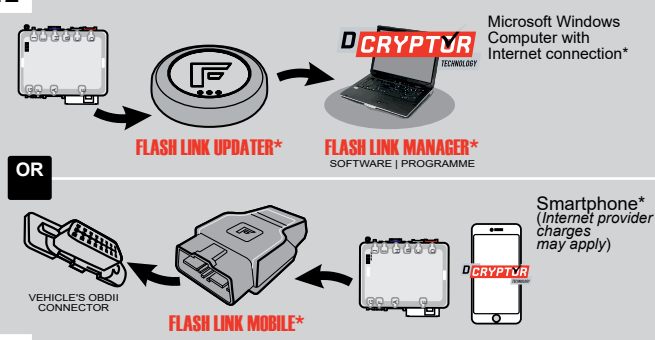


Microsoft Windows Computer with Internet connection*

Smartphone* (Internet provider charges may apply)

Use the tool: FLASH LINK UPDATER* or FLASH LINK MOBILE* to visit the DCryptor menu.

*Parts required (not included)

13

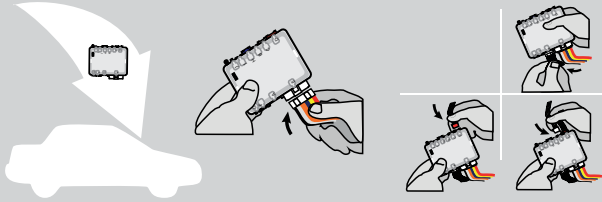

AFTER DCRYPTOR PROGRAMMING COMPLETED
 Go back to the vehicle and **reconnect** the 6-Pin (Main-Harness) or the 4-pins (Data-Link) connector and after all the remaining connector.

ou le 4-pins (Data-Link) et après tous les connecteurs.



The module is now programmed.




REMOTE STARTER / ALARM VERIFICATION PROCEDURE

Test the remote starter. Remote start the vehicle.

REMOTE STARTER PROGRAMMING PROCEDURE



REFER TO THE **QUICK INSTALL GUIDE** INCLUDED WITH THE MODULE FOR THE REMOTE STARTER PROGRAMMING.

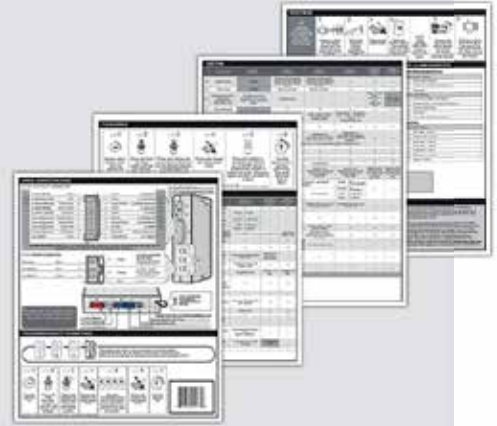

REMOTE STARTER FUNCTIONALITY |



 
All doors must be closed.




Remote start the vehicle.



Press the Unlock button of the remote car starter.



Enter the vehicle with the Intelligent Access Key.

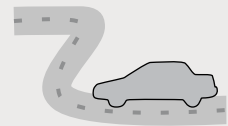

The vehicle can now be put in to gear and driven.



If the vehicle is not unlocked the module will shut down the remote-starter and the vehicle as soon as any door is opened.