


BYPASS SHOCK

EXPLODED VIEW DIAGRAM

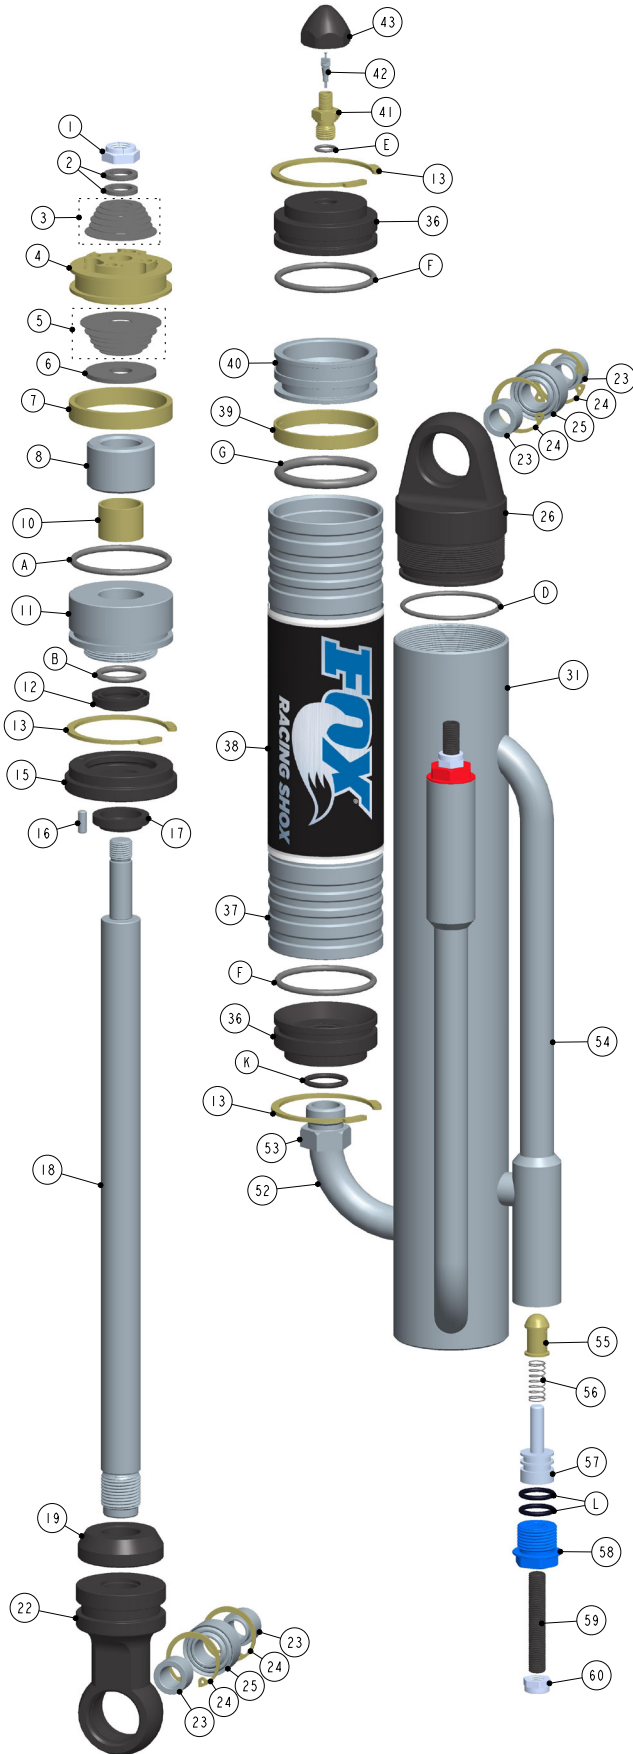

PARTS

#	DESCRIPTION
1	Piston Lock Nut
2	Back-Up Washer
3	Rebound Valve Stack
4	Damping Piston
5	Compression Valve Stack
6	Top-Out Washer
7	Damping Piston Wear Band
8	Shaft Spacer
9	Top-Out Bumper
10	Internal Bearing
11	Bearing Housing
12	Bearing U-Cup Seal
13	Retaining Ring
14	Spring Guide Retainer
15	Bearing Cap
16	Bearing Set Screw
17	Bearing Cap Wiper Seal
18	Shaft
19	Bottom-Out Bumper
20	Spring Retainer
21	Spring Retainer Clip
22	Eyelet
23	Eyelet Spacer/Reducer
24	Eyelet Retaining Ring
25	Spherical Bearing
26	Body Cap
27	Preload Back-Up Ring
28	Preload Ring
29	Crossover Ring
30	Crossover Ring Set Screw
31	Body
32	Spring Divider
33	Spring Guide
34	Reservoir Hose Adapter
35	Remote Reservoir Hose

#	DESCRIPTION
36	Reservoir End Cap
37	Reservoir
38	Reservoir Decal
39	IFP Wear Band
40	IFP
41	Air Valve Housing
42	Air Valve Core
43	Air Valve Cap
44	Piggy Back Bridge
45	Piggy Back Lock Ring
46	Piggy Back Bridge Bolt
47	Air Shock Spring
48	Spring Retainer Adapter
49	Bump Stop Pad Nut
50	Bump Stop Pad Bolt
51	Bump Stop Pad
52	Bypass Reservoir Tube
53	Bypass Reservoir Fitting
54	Bypass Tube
55	Bypass Piston
56	Bypass Spring
57	Bypass Plunger
58	Bypass End Cap
59	Adjustment Screw
60	Adjustment Screw Lock Nut
61	Reducer Bushing
62	Internal Body
63	Internal Bypass Valve Stack Nut
64	Internal Bypass Valve Stack

O-RINGS

#	DESCRIPTION
A	Bearing Housing
B	Shaft Bearing
C	Spring Retainer
D	Body Cap
E	Air Valve Housing
F	Reservoir End Cap
G	IFP
H	Piggy Back Bridge
I	Piggy Back Bridge Port
J	∅ 1.25 Shaft Bottom-Out Bumper

Learn more about performance suspension parts we have.