



## Instructions (Panel and Round)

1. Use proper protective gear.
2. Loosen wing nut or other fasteners to remove filter cover. (illus 1)
3. Remove old air filter. (illus 2)
4. Clean filter cover and housing using a shop vacuum.
5. Install new air filter. Be sure it is sealed around the perimeter. (illus 3)
6. Replace cover and fasten.

### Panel



### Round

