




## TO INSTALL

1. Push pin fully into pin hole.
2. Place sleeve over the pin.
3. Tighten the nut with an adjustable wrench.  
(Tightening Torque: 50 lbs.)

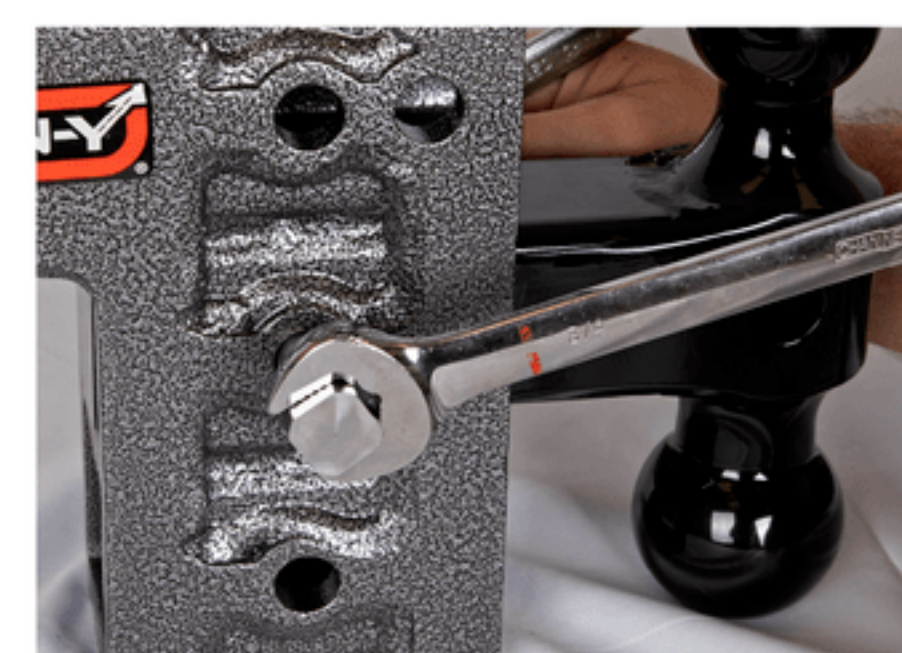

## TO REMOVE

1. Loosen the nut.
2. Tap the nut to free the sleeve.
3. Pull the sleeve out & remove pin.



Learn more about trailer hitches and towing we have.